



Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

*InstraView*SM REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at www.instraview.com ↗

WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. www.artisanng.com/WeBuyEquipment ↗

LOOKING FOR MORE INFORMATION?

Visit us on the web at www.artisanng.com ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

Contact us: (888) 88-SOURCE | sales@artisanng.com | www.artisanng.com



10623 Roselle Street, San Diego, CA 92121 • (858) 550-9559 • FAX (858) 550-7322
contactus@acesio.com • www.acesio.com

MODEL PCI-IIRO-16

USER MANUAL

FILE: MPCI-IIRO-16.B1e

Notice

The information in this document is provided for reference only. ACCES does not assume any liability arising out of the application or use of the information or products described herein. This document may contain or reference information and products protected by copyrights or patents and does not convey any license under the patent rights of ACCES, nor the rights of others.

IBM PC, PC/XT, and PC/AT are registered trademarks of the International Business Machines Corporation.

Printed in USA. Copyright 2001, 2005 by ACCES I/O Products Inc, 10623 Roselle Street, San Diego, CA 92121. All rights reserved.

WARNING!!

ALWAYS CONNECT AND DISCONNECT YOUR FIELD CABLING WITH THE COMPUTER POWER OFF. ALWAYS TURN COMPUTER POWER OFF BEFORE INSTALLING A CARD. CONNECTING AND DISCONNECTING CABLES, OR INSTALLING CARDS INTO A SYSTEM WITH THE COMPUTER OR FIELD POWER ON MAY CAUSE DAMAGE TO THE I/O CARD AND WILL VOID ALL WARRANTIES, IMPLIED OR EXPRESSED.

Warranty

Prior to shipment, ACCES equipment is thoroughly inspected and tested to applicable specifications. However, should equipment failure occur, ACCES assures its customers that prompt service and support will be available. All equipment originally manufactured by ACCES which is found to be defective will be repaired or replaced subject to the following considerations.

Terms and Conditions

If a unit is suspected of failure, contact ACCES' Customer Service department. Be prepared to give the unit model number, serial number, and a description of the failure symptom(s). We may suggest some simple tests to confirm the failure. We will assign a Return Material Authorization (RMA) number which must appear on the outer label of the return package. All units/components should be properly packed for handling and returned with freight prepaid to the ACCES designated Service Center, and will be returned to the customer's/user's site freight prepaid and invoiced.

Coverage

First Three Years: Returned unit/part will be repaired and/or replaced at ACCES option with no charge for labor or parts not excluded by warranty. Warranty commences with equipment shipment.

Following Years: Throughout your equipment's lifetime, ACCES stands ready to provide on-site or in-plant service at reasonable rates similar to those of other manufacturers in the industry.

Equipment Not Manufactured by ACCES

Equipment provided but not manufactured by ACCES is warranted and will be repaired according to the terms and conditions of the respective equipment manufacturer's warranty.

General

Under this Warranty, liability of ACCES is limited to replacing, repairing or issuing credit (at ACCES discretion) for any products which are proved to be defective during the warranty period. In no case is ACCES liable for consequential or special damage arriving from use or misuse of our product. The customer is responsible for all charges caused by modifications or additions to ACCES equipment not approved in writing by ACCES or, if in ACCES opinion the equipment has been subjected to abnormal use. "Abnormal use" for purposes of this warranty is defined as any use to which the equipment is exposed other than that use specified or intended as evidenced by purchase or sales representation. Other than the above, no other warranty, expressed or implied, shall apply to any and all such equipment furnished or sold by ACCES.

Table of Contents

Chapter 1: Introduction	5
Specification	6
Figure 1-1: Block Diagram	7
Chapter 2: Installation	8
Chapter 3: Address Selection	10
Chapter 4: Programming	11
Chapter 5: Connector Pin Assignments	13
Table 6-1: Connector Pin Assignments	13
Table 6-2: Breakout Cable Pin Assignments	14

Chapter 1: Introduction

The card is a half size card that provides isolated input and output interface for PCI-Bus computers. The card has sixteen optically-isolated inputs and sixteen electro-mechanical relay outputs for monitoring and controlling DC or AC signals. An interrupt can be generated when any of the inputs change state to free up computer resources by eliminating the need for polling. Fully sealed, low-resistance signal relays ideal for use in telecommunications, security and computer peripheral equipment are used. The card occupies eight consecutive 8-bit registers in I/O address space.

Inputs

ISOLATED INPUTS: The sixteen pairs of inputs can be driven by either AC or DC signals and are not polarity sensitive. Input signals are rectified by a diode bridge and applied to the input of an opto-isolator. A 470 Ω resistor in series provides current limiting. Standard 12/24 VAC transformer outputs can be accepted as well as DC voltages. The input voltage range is 5 to 24 volts (rms). External resistors connected in series may be used to extend the input voltage range. The on/off state of the inputs is determined by a software read.

FILTERS: Each input circuit contains a software controlled filter that has a 5 millisecond time constant. For AC inputs the filter must be selected in order to maintain a DC level at the input register. The filter is also valuable for use with slow DC input signals in a noisy environment. All filters are turned off at power on, and are then enabled or disabled by software. The on/off status of the filters can also be read by software.

INTERRUPTS: When enabled by software the card asserts an interrupt on the PCI-Bus when any of the sixteen isolated inputs change state from either high to low, or low to high in DC mode and from signal to no signal in AC mode. This interrupt capability is disabled at power on. Software commands are used to enable, disable, clear and get status of the interrupt circuit.

Outputs

The sixteen electro-mechanical relay outputs are comprised of ten Form C SPDT type and six Form A SPST (normally open) type. The relay contacts are rated at 0.5A at 125VAC, and 1A at 24VDC. All the relays are turned off at power-on, and are then controlled by data bits written by software and latched. The on/off status of the relays can be read back by software.

Specification

Isolated Inputs

- Number of inputs: Sixteen
- Type: Non-polarized, optically isolated from each other and from the computer
- Input voltage range: 5 to 24V DC or AC rms (50 to 10000 Hz)
- Isolation*: 500V
- Input Resistance: 470 ohms in series with two diodes and an LED
- Response Time: 5 mSec w/filter
- Interrupts: PCI-INTA

Relay Outputs

- Number of outputs: Sixteen in two groups of eight. In each group 5 relays are SPDT and 3 relays are SPST
- Contact Type: Single crossbar, Ag with Au clad. (Bifurcated contacts optional)
- Contact Rating: 1A max at 24VDC, 60VDC max, 0.5A at 125VAC max
- Contact Resistance: 100 milliohm max
- Contact Life: 5,000,000 min. (mech'l)
- Operate time: 5 mSec max
- Release Time: 5 mSec max
- Isolation*: 1000V
- Vibration: 10 to 55 Hz, 3.3 mm dbl amp; mech. dur. 1,000 m/s² (approx 100G)

* Notes on Isolation: Opto-Isolators, connector and relays are rated for at least 500V, but isolation voltage breakdowns will vary and is affected by factors like cabling, spacing of pins, spacing between traces on PCB, humidity, dust and other environmental factors. This is a safety issue so a careful approach is required. For CE certification, isolation was specified at 40V AC and 60V DC. The design intention was to eliminate the influence of common mode. Use proper wiring techniques to minimize voltage between channels and to ground. For example, when working with AC lines do not connect the hot side of the line to an input.

Power Required

- +5VDC 250mA min, 750mA max (all relays ON)

Environmental

- Ambient Temperature: Operating: 0 °C. to +50 °C
Storage: -40 °C. to +85 °C
- Humidity: 0 to 90% (non-condensing)
- Weight: Approx. 8 oz
- Size: 6.80" long (173 mm)

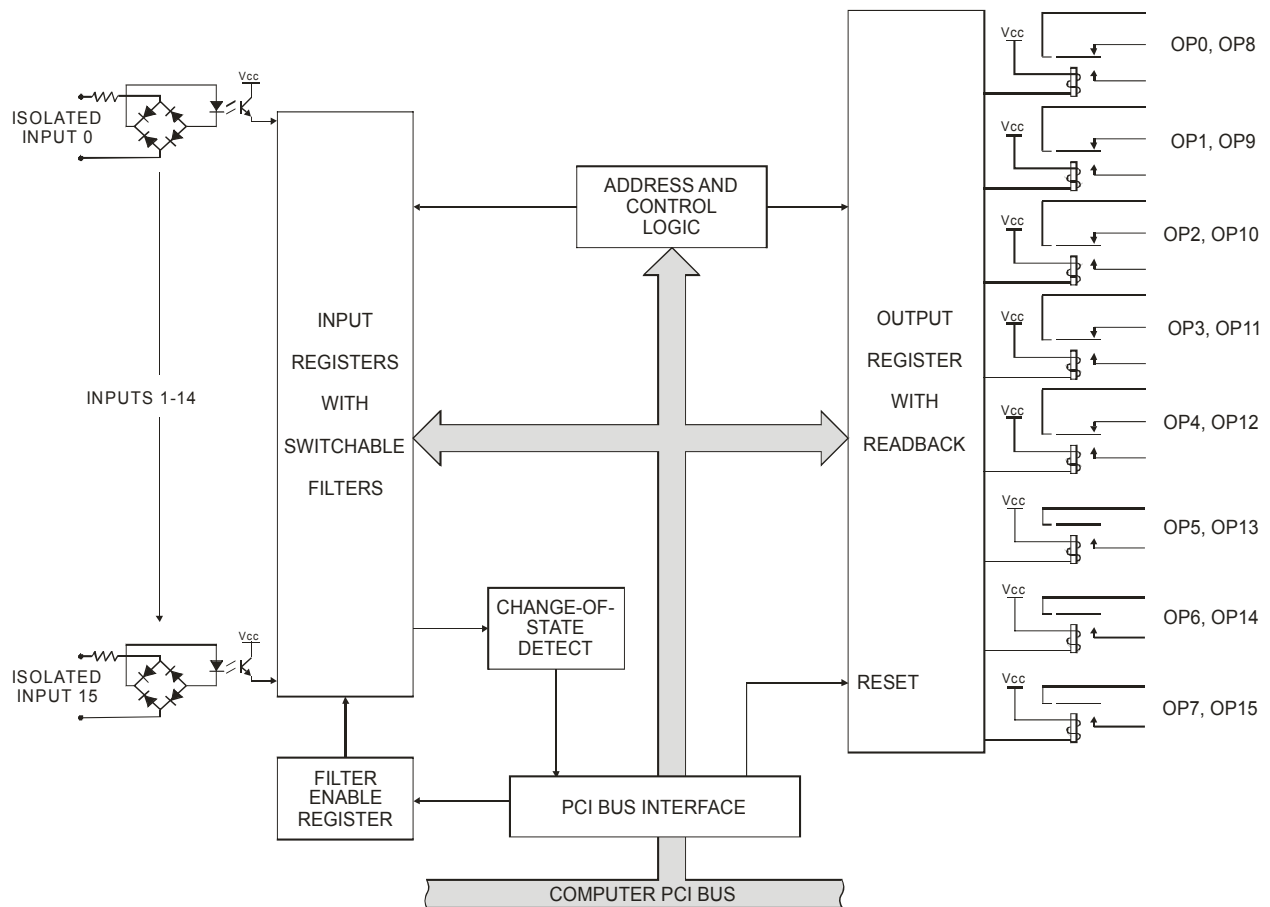


Figure 1-1: Block Diagram

Chapter 2: Installation

A printed Quick-Start Guide (QSG) is packed with the card for your convenience. If you've already performed the steps from the QSG, you may find this chapter to be redundant and may skip forward to begin developing your application.

The software provided with this card is on CD and must be installed onto your hard disk prior to use. To do this, perform the following steps as appropriate for your operating system.

CD Software Installation

The following instructions assume the CD-ROM drive is drive "D". Please substitute the appropriate drive letter for your system as necessary.

DOS

1. Place the CD into your CD-ROM drive.
2. Type `D: Enter` to change the active drive to the CD-ROM drive.
3. Type `INSTALL Enter` to run the install program.
4. Follow the on-screen prompts to install the software for this board.

WINDOWS

1. Place the CD into your CD-ROM drive.
2. The system should automatically run the install program. If the install program does not run promptly, click START | RUN and type `D:INSTALL`, click OK or press `Enter`.
3. Follow the on-screen prompts to install the software for this board.

LINUX

1. Please refer to linux.htm on the CD-ROM for information on installing under linux.

Caution! * ESDA single static discharge can damage your card and cause premature failure! Please follow all reasonable precautions to prevent a static discharge such as grounding yourself by touching any grounded surface prior to touching the card.

Hardware Installation

1. Do not install card into the computer until the software has been fully installed.
2. Turn OFF computer power AND unplug AC power from the system.
3. Remove the computer cover.
4. Carefully install the card in an available 5V or 3.3V PCI expansion slot (you may need to remove a backplate first).
5. Inspect for proper fit of the card and tighten screws. Make sure that the card mounting bracket is properly screwed into place and that there is a positive chassis ground.
6. Install an I/O cable onto the card's bracket mounted connector.
7. Replace the computer cover and turn ON the computer which should auto-detect the card (depending on the operating system) and automatically finish installing the drivers.
8. Run PCIfind.exe to complete installing the card into the registry (for Windows only) and to determine the assigned resources.
9. Run one of the provided sample programs that was copied to the newly created card directory (from the CD) to test and validate your installation.

The base address assigned by BIOS or the operating system can change each time new hardware is installed into or removed from the computer. Please recheck PCIFind or Device Manager if the hardware configuration is changed. Software you write can automatically determine the base address of the card using a variety of methods depending on the operating system. In DOS, the PCI\SOURCE directory shows the BIOS calls used to determine the address and IRQ assigned to installed PCI devices. In Windows, the Windows sample programs demonstrate querying the registry entries (created by PCIFind and NTIOPCI.SYS during boot-up) to determine this same information.

Chapter 3: Address Selection

This card uses I/O addresses offset from the base address assigned by the PCI bus. The address spaces are defined in the programming section of this manual.

PCI architecture is Plug-and-Play. This means that the BIOS or Operating System determines the resources assigned to PCI cards rather than the user selecting those resources with switches or jumpers. As a result, you cannot set or change the card's base address or IRQ level. You can only determine what the system has assigned.

To determine the base address that has been assigned, run the PCIFind utility program. This utility will display a list of all the cards detected on the PCI bus, the addresses assigned to each function on each of the cards, and the respective IRQs.

Alternatively, Windows systems can be queried to determine which resources were assigned. In these operating systems, you can use either PCIFind, or the Device Manager utility from the System Properties Applet of the control panel. The card is installed in the Data Acquisition class of the Device Manager list. Selecting the card, clicking Properties, and then selecting the Resources Tab will display a list of the resources allocated to the card.

The PCI bus supports 64K of I/O address space, so your card's addresses may be located anywhere in the 0000h to FFFFh range. The card occupies eight consecutive 8 bit registers in I/O address space.

PCIFind uses the Vendor ID and Device ID to search for your card, then reads the base address and IRQ. If you want to determine the base address and IRQ without using PCIFind, use the following information:

The Vendor ID code is 494F (ASCII for "I/O")

The Device ID code for the card is 0F08

An example of how to locate PCI card resources is provided with in the PCI\SOURCE directory, under your installation directory. This code runs in DOS, and uses the PCI defined interrupt BIOS calls to query the PCI bus for card specific information. You will need the Device ID and Vendor ID listed above to use this code.

Chapter 4: Programming

The base or starting address is assigned by the computers plug-and-play operating system during installation and will fall on a eight byte boundary (see chapter 3).

The card's read and write functions are as follows:

I/O Address	Read	Write
Base +0	Outputs 0 – 7	Outputs 0 – 7
Base +1	Inputs 0 – 7	Interrupt Clear
Base +2	Interrupt Enable	Interrupt Disable
Base +3	Filter Enable	Filter Disable
Base +4	Outputs 8 – 15	Outputs 8 – 15
Base +5	Inputs 8 – 15	Unused
Base +6	Interrupt Status	Unused
Base +7	Filter Status	Unused

Relay Outputs

At power-up, all relays are de-energized (normally-closed contacts). The relay outputs are controlled by writing to the base address +0 and +4. Each bit within the bytes controls a specific relay. A "1" energizes the corresponding relay and a "0" de-energizes it. The status of the relays can be determined at any time by a read from base address +0 and +4.

Bit Position	D7	D6	D5	D4	D3	D2	D1	D0
Relay Low Byte	OP7	OP6	OP5	OP4	OP3	OP2	OP1	OP0
Relay High Byte	OP15	OP14	OP13	OP12	OP11	OP10	OP9	OP8

For example, if bit D5 is set to a 1 by writing 20 hex to the base address +0 the relay that controls OP5 is energized, closing the associated normally-open contacts. All other relays would be de-energized and their normally-closed contacts would be closed.

Isolated Inputs

Input states can be read from Base Address +1 and +5. Each of the bits within the bytes corresponds to a particular isolated input. A "1" signifies that the input is energized and a "0" signifies that the input is de-energized.

Bit Position	D7	D6	D5	D4	D3	D2	D1	D0
Input Low Byte	IP7	IP6	IP5	IP4	IP3	IP2	IP1	IP0
Input High Byte	IP15	IP14	IP13	IP12	IP11	IP10	IP9	IP8

FILTERS: Sometimes it is necessary to slow down the card's response to eliminate noise spikes on DC inputs in industrial environments or to convert sinusoidal AC inputs. The 5 mSec filter can be enabled for all inputs by a software read from base address +3 or disabled by a write of any value to base address +3. The status of the filters can be read back from base address +7. A value of FF hex indicates the filters are active and a value of 00 hex indicates they are disabled.

INTERRUPTS: The card supports interrupts. The interrupt level is assigned by the plug-and-play operating system. The assigned interrupt level can be viewed when PCIFind.EXE is run (see chapter 3). The card's interrupt capability makes it unnecessary to continuously poll inputs (by reading at base address +1 and +5) to detect when an input state has changed. To enable interrupts read from base address +2. To disable interrupts, write any value to base address +2. To clear an interrupt write any value to base address +1. The user must include the clear instruction in the interrupt service routine software. For shared interrupt applications the card has an IRQ status byte that can be read from base address +6. Bits 0 and 1 set indicate interrupts are enabled, bit 2 set indicates an IRQ has been generated, bits 3 thru 7 will always read 0.

Programming Examples

No driver software is provided with because programming is very simple and can be accomplished most efficiently using direct I/O instructions. The following examples are in C but are readily translated into other languages:

Example: Turn on OP0 and OP7

```
Base=0xF300; //Base I/O address
outportb(Base, 0x81);
```

Example: Read back the state of the relays

```
X=inportb(Base); //relay register data to X
printf("%02x"); //display results
```

Example: Read the digital inputs

```
Y=inportb(Base+1); //digital input register to Y
```

Chapter 5: Connector Pin Assignments

Digital I/O signals are connected to the card via a 78-pin D type connector that extends through the back of the computer case. The mating connector is an AMP 748368-1 or equivalent. We optionally provide a breakout cable that divides the 78-pin I/O connector down to two 37-pin D type connectors. See the following page for information about termination solutions.

Pin	Name	Function	Pin	Name
1	IP7	Isolated Input	40	IP15
2	IP6		41	IP14
3	IP5		42	IP13
4	IP4		43	IP12
5	IP3		44	IP11
6	IP2		45	IP10
7	IP1		46	IP9
8	IP0		47	IP8
9	OP7(C)	Relay Contact	48	OP15(C)
10	OP6(C)		49	OP14(C)
11	OP5(C)		50	OP13(C)
12	OP4(NC)		51	OP12(NC)
13	OP4(NO)		52	OP12(NO)
14	OP3(C)		53	OP11(C)
15	OP2(NC)		54	OP10(NC)
16	OP2(NO)		55	OP10(NO)
17	OP1(C)		56	OP9(C)
18	OP0(NC)		57	OP8(NC)
19	OP0(NO)	58	OP8(NO)	
20		Not Used	59	
21	IP7	Isolated Input	60	IP15
22	IP6		61	IP14
23	IP5		62	IP13
24	IP4		63	IP12
25	IP3		64	IP11
26	IP2		65	IP10
27	IP1		66	IP9
28	IP0		67	IP8
29	OP7(NO)	Relay Contact	68	OP15(NO)
30	OP6(NO)		69	OP14(NO)
31	OP5(NO)		70	OP13(NO)
32	OP4(C)		71	OP12(C)
33	OP3(NC)		72	OP11(NC)
34	OP3(NO)		73	OP11(NO)
35	OP2(C)		74	OP10(C)
36	OP1(NC)		75	OP9(NC)
37	OP1(NO)		76	OP9(NO)
38	OP0(C)		77	OP8(C)
39		Not Used	78	

Table 6-1: Connector Pin Assignments

Termination Solutions

The breakout solution for the card involves a “Y” cable that terminates into two identically pinned out 37DBF connectors. As part of a kit, these connectors plug into the STB-37 screw terminal cards, which easily mount into a length of SNAPTRACK. The pinout of each leg when plugged into an STB-37 is identical to that of the eight channel ISA and PCI Isolated Input/Relay Output Cards. The “Y” cable is six (6) feet long on each leg.

“1-39” Cable			“40-78” Cable		
PIN	NAME	FUNCTION	PIN	NAME	FUNCTION
1	IP7	Isolated Input	1	IP15	Isolated Input
2	IP6		2	IP14	
3	IP5		3	IP13	
4	IP4		4	IP12	
5	IP3		5	IP11	
6	IP2		6	IP10	
7	IP1		7	IP9	
8	IP0		8	IP8	
9	OP7(C)	Relay Contact	9	OP15(C)	Relay Contact
10	OP6(C)		10	OP14(C)	
11	OP5(C)		11	OP13(C)	
12	OP4(NC)		12	OP12(NC)	
13	OP4(NO)		13	OP12(NO)	
14	OP3(C)		14	OP11(C)	
15	OP2(NC)		15	OP10(NC)	
16	OP2(NO)		16	OP10(NO)	
17	OP1(C)		17	OP9(C)	
18	OP0(NC)		18	OP8(NC)	
19	OP0(NO)	19	OP8(NO)		
20	IP7	Isolated Input	20	IP15	Isolated Input
21	IP6		21	IP14	
22	IP5		22	IP13	
23	IP4		23	IP12	
24	IP3		24	IP11	
25	IP2		25	IP10	
26	IP1		26	IP9	
27	IP0		27	IP8	
28	OP7(NO)	Relay Contact	28	OP15(NO)	Relay Contact
29	OP6(NO)		29	OP14(NO)	
30	OP5(NO)		30	OP13(NO)	
31	OP4(C)		31	OP12(C)	
32	OP3(NC)		32	OP11(NC)	
33	OP3(NO)		33	OP11(NO)	
34	OP2(C)		34	OP10(C)	
35	OP1(NC)		35	OP9(NC)	
36	OP1(NO)		36	OP9(NO)	
37	OP0(C)		37	OP8(C)	

Table 6-2: Breakout Cable Pin Assignments

Customer Comments

If you experience any problems with this manual or just want to give us some feedback, please email us at: ***manuals@accessio.com***. Please detail any errors you find and include your mailing address so that we can send you any manual updates.



10623 Roselle Street, San Diego CA 92121
Tel. (858)550-9559 FAX (858)550-7322
www.accessio.com



Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

*InstraView*SM REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at www.instraview.com ↗

WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. www.artisanng.com/WeBuyEquipment ↗

LOOKING FOR MORE INFORMATION?

Visit us on the web at www.artisanng.com ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

Contact us: (888) 88-SOURCE | sales@artisanng.com | www.artisanng.com