

HP J3295A

ProCurve 24-Port 10/100 Ethernet Hub



In Stock

Used and in Excellent Condition

Open Web Page

<https://www.artisanng.com/89706-1>

All trademarks, brandnames, and brands appearing herein are the property of their respective owners.



Your **definitive** source
for quality pre-owned
equipment.

Artisan Technology Group

(217) 352-9330 | sales@artisanng.com | artisanng.com

- Critical and expedited services
- In stock / Ready-to-ship

- We buy your excess, underutilized, and idle equipment
- Full-service, independent repair center

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.



HP ProCurve 10/100 Hubs

Installation Guide

10/100 Hub 12

10/100 Hub 24



For world-wide support on all
HP Network Connectivity Products
visit our web site at:

HP ProCurve 10/100 Hubs

Installation Guide

http://www.hp.com/go/network_city



© Copyright 1998 Hewlett-Packard Company
All Rights Reserved.

This document contains information which is protected by copyright. Reproduction, adaptation, or translation without prior permission is prohibited, except as allowed under the copyright laws.

Publication Number

5967-2280
July 1998

Applicable Products

HP J3294A 10/100 Hub 12
HP J3295A 10/100 Hub 24

Disclaimer

The information contained in this document is subject to change without notice.

HEWLETT-PACKARD COMPANY MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

Warranty

See the Customer Support/Warranty booklet included with the product.

A copy of the specific warranty terms applicable to your Hewlett-Packard products and replacement parts can be obtained from your HP Sales and Service Office or authorized dealer.

Hewlett-Packard Company
8000 Foothills Boulevard, m/s 5552
Roseville, California 95747-5552
http://www.hp.com/go/network_city



Contents

1 Introducing the HP ProCurve 10/100 Hubs

| | |
|--------------------------------------|-----|
| Front of the Hubs | 1-2 |
| Network Ports | 1-3 |
| Port LED Types | 1-3 |
| LEDs for the 10/100Base-T Hubs | 1-4 |
| LED Combinations | 1-5 |
| Reset Button | 1-5 |
| Back of the Hubs | 1-5 |
| Power Connector | 1-5 |
| Features | 1-6 |

2 Installing the Hub

| | |
|--|------|
| Included Parts | 2-1 |
| Installation Summary | 2-2 |
| Installation Precautions | 2-3 |
| 1. Prepare the Installation Site | 2-4 |
| 2. Verify the Hub Operates Correctly | 2-5 |
| LED Behavior: | 2-5 |
| 3. Mount the Hub | 2-6 |
| Rack or Cabinet Mounting | 2-6 |
| Wall Mounting | 2-8 |
| Horizontal Surface Mounting | 2-8 |
| 4. Connect the Hub to a Power Source | 2-9 |
| 5. Some Basic Troubleshooting | 2-9 |
| Sample Network Topologies | 2-10 |
| Where to Go From Here | 2-10 |



3 Troubleshooting

| | |
|---|-----|
| Basic Troubleshooting Tips | 3-1 |
| Diagnosing with the LEDs | 3-3 |
| Hardware Diagnostic Tests | 3-4 |
| Testing the Hub by Resetting It | 3-4 |
| Testing Twisted-Pair Cabling | 3-4 |
| HP Customer Support Services | 3-5 |

A Specifications

B Cables and Connectors

| | |
|--|-----|
| Twisted-Pair Cable/Connector Pin-Outs | B-1 |
| Twisted-Pair Cable for Hub (MDI-X) to Computer (MDI) Network Connection | B-2 |
| Twisted-Pair Cable for Hub (MDI-X) to Hub or Hub (MDI-X) Network Connection | B-3 |
| Twisted-Pair Cable Pin Assignments | B-4 |
| Twisted-Pair Straight-Through Cable | B-4 |
| Twisted-Pair Cross-Over Cable | B-4 |

C Safety and EMC Regulatory Statements

| | |
|--|-----|
| Safety Information | C-1 |
| Informations concernant la sécurité | C-2 |
| Hinweise zur Sicherheit | C-3 |
| Considerazioni sulla sicurezza | C-4 |
| Consideraciones sobre seguridad | C-5 |
| Safety Information (Chinese) | C-6 |
| Safety Information (Japanese) | C-7 |
| Regulatory Statements | C-8 |

Index

 


Introducing the HP ProCurve 10/100 Hubs


The HP ProCurve J3294A and HP J3295A 10/100 hubs are low-cost multiport, dual-speed, 10- and 100Mbps repeaters that can be used to build high-performance workgroup networks. These hubs are completely autosensing and autonegotiating devices that provide the flexibility of adjusting to different speed settings. The hubs are always half-duplex. This capability is present provided that the connecting device is autonegotiation-capable or already configured to half-duplex, and will autonegotiate with other autonegotiating or half-duplex devices.

The two hub models are:

HP ProCurve J3294A 10/100 Hub 12



HP ProCurve J3295A 10/100 Hub 24

 

Throughout this manual, these hubs will be abbreviated as the HP 10/100 hubs.

The HP 10/100 Hub 12 and Hub 24 have twelve and twenty-four dual-speed, 10/100Base-T ports, respectively.

With these hubs you can build a network infrastructure by connecting the hubs to other hubs, switches, or routers, or you can connect computers, printers, and servers to these hubs to provide dedicated 10- or 100Mbps bandwidth to those devices.




Introducing the HP ProCurve 10/100 Hubs

Front of the Hubs

This chapter describes your HP 10/100 hubs:

- Front and back of the hubs
- Network Ports
- Port and Hub LEDs
- Features
- Hub operation overview

Front of the Hubs

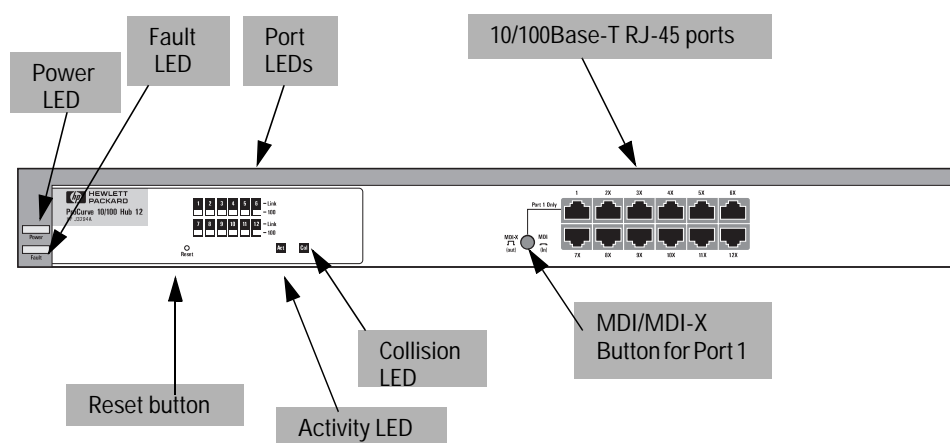

Network Ports

The HP 10/100 Network Ports are as follows:

- 12 or 24 10/100Base-T RJ-45 ports
- one MDI/MDI-X port (port 1).


All the fixed twisted-pair ports are wired as MDI-X. Therefore, to connect end nodes or other MDI-type devices to these ports, use “straight-through” twisted-pair cable; to connect hubs, switches, or other MDI-X-type devices to these ports, use “crossover” twisted-pair cable. See Appendix B, “Cables and Connectors” for descriptions of these cables. If you only have straight-through cable, you can use port 1 with the MDI button depressed to connect hubs with switches and other hubs. The MDI button crosses the cable pairs so that the Transmit and Receive pins on connecting devices exchange signals correctly.

Port LED Types

There are two types of port LEDs:

Link. This LED highlights the port number. When lit, these LEDs indicate the port has detected another device. If the 100 LED is not lit, then the Link LED indicates a connection to an attached 10Base-T device.

100. This LED highlights the rectangle LED under the Link LED. When lit, these LEDs indicate the port is connected to an attached device operating at 100Mbps. The following figure shows an HP 10/100 LED operating at 100Mbps. See the following sections for more LED detail.

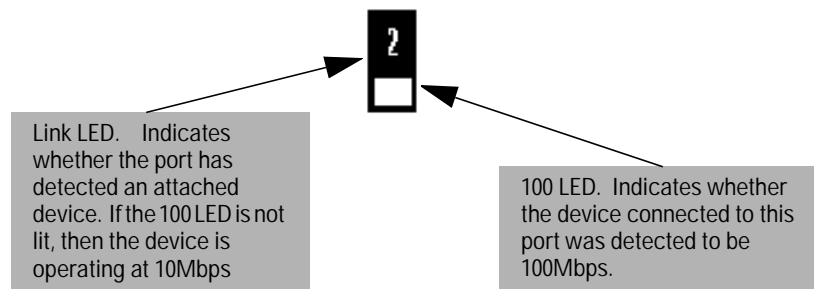

Introducing the HP ProCurve 10/100 Hubs

Front of the Hubs

LEDs for the 10/100Base-T Hubs

To see what the LEDs for the HP 10/100 hubs do, see the following table. For a more extended view of the LEDs, see the table under the section “LED Combinations.”

| Hub Status LED | State | Meaning |
|---|-------------|--|
| Power (Green) | On | The hub is receiving power. |
| | Off | The hub is NOT receiving power. |
| Fault (Orange) | Off | The normal state. Indicates that there are no fault conditions on the hub. |
| | On | The hub is in self test after being powered on or reset. If on for a prolonged time (after three seconds), the hub has failed its self test. |
| | Slow* | A port has been partitioned. The Link LED of the partitioned port also blinks. |
| Activity (Green) | On/Blinking | The hub is receiving packets. If it appears as solid, packet traffic is heavy. |
| | Off | The hub is not receiving packets from any attached device. |
| Collision (Orange) | On/Blinking | The hub has detected two or more packets on the hub have run into each other on the hub, blocking successful. If the LED is on solid, a heavy collision rate is occurring. |
| | Off | No collisions have been detected on the hub. |
| Link LEDs | | |
| Link | On | The port detects an attached device. |
| | Off | The port has not detected another device. |
| | Slow Blink* | The port has been autopartitioned due to excessive collisions. |
| * The slow blink behavior is a regular pulse once every 1.6 seconds, approximately. | | |
| 100 LEDs | | |
| 100Mbps Indicator LED | On | The port is operating at 100Mbps. |
| | Off | If the Link LED is lit, the port is operating at 10Mbps. If the Link LED is not lit, no attached device is detected. |



LED Combinations

The following table shows the kind of activity that occurs in various LED illumination combinations:

| Link LED | 100 LED | What is Happening |
|-----------------|-----------------|---|
| On | Off | The port is operating at 10Mbps. |
| On - Slow Blink | Off | The port is operating in 10Mbps mode, but has been partitioned due to excessive collisions. The Fault LED will also blink. |
| On | On | The port is operating at 100Mbps. |
| On - Slow Blink | On - Slow Blink | The port is operating in 100Mbps mode, but has been partitioned due to excessive collisions. The Fault LED will also blink. |
| Off | Off | The port does not detect another device. |


Reset Button

This button is used to reset the hub while it is powered on. This action clears any temporary error conditions that may have occurred, restarts the hub and executes the hub self test. A typical instance of where you might use the Reset button is in the event of a hub malfunction or error condition.

Back of the Hubs

Power Connector

The 10/100 hubs do not have a power switch; they are powered on when connected to an active AC power source. The hubs automatically adjust to various voltages (depending on the country) between 100-127 and 200-240 volts and either 50 or 60 Hz. There are no voltage range settings required.

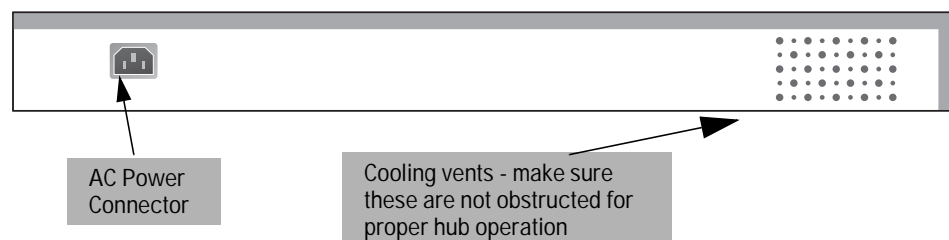

Introducing the HP ProCurve 10/100 Hubs

Features

The power cords and levels of power for the hub are listed below.

| Country | Power Cord Part Number | Voltage/Hz Level |
|-------------|------------------------|--------------------|
| China | 8120-8377 | 220-240 Vac, 50 Hz |
| USA | 8120-6805 | 110-127 Vac, 60 Hz |
| Europe | 8120-6802 | 230 Vac, 50 Hz |
| Australia | 8120-6803 | 220-240 Vac, 50 Hz |
| Japan | 8120-6804 | 100 Vac, 50/60 Hz |
| UK | 8120-6801 | 220-240 Vac, 50 Hz |
| Switzerland | 8120-6807 | 230 Vac, 50 Hz |
| Denmark | 8120-6806 | 230 Vac, 50 Hz |

Features

The features of the 10/100 hubs include:

- 12 or 24 Ethernet 10/100Base-TX ports with RJ-45 connectors.
- plug-and-play networking—all ports are enabled—just connect the network cables to active Ethernet or Fast Ethernet network devices and your network is operational.
- all ports are autonegotiation-capable.
- 12 or 24 Link LEDs with companion 100Mbps LEDs.
- push-button MDI/MDI-X selection.
- rack- or wall-mountable.



Installing the Hub

The HP J3294A and HP J3295A 10/100 hubs are easy-to-install units. Each comes with an accessory kit (HP P/N 5183-7210) that includes the brackets for mounting the hub in a standard 19-inch telco rack or an equipment cabinet, or on a wall, and it comes with rubber feet so it can be securely located on a horizontal surface. The brackets are designed to allow mounting the hub in a variety of orientations.

This chapter shows you how to install your 10/100 hub.

Included Parts

The 10/100 hub has the following components shipped with it:

- *HP ProCurve 10/100 Hubs Installation Guide* (5967-2280), this manual
- Customer Support/Warranty booklet (5967-2242)
- Accessory kit (5183-7210)
 - two mounting brackets
 - four 10 mm M4 screws to attach the mounting brackets to the hub
 - four 5/8-inch number 12-24 screws to attach the hub to a rack
 - four rubber feet
- Power cord, one of the following:

| | |
|-----------------------------|-------------|
| Australia/New Zealand | (8120-6803) |
| United Kingdom | (8120-6801) |
| China | (8120-8377) |
| Continental Europe | (8120-6802) |
| Denmark | (8120-6806) |
| Japan | (8120-6804) |
| Switzerland | (8120-6807) |
| United States/Canada/Mexico | (8120-6805) |



Installation Summary

Follow these easy steps to install your hub. The rest of this chapter provides details on these steps.

1. **Prepare the installation site.** Make sure that the physical environment into which you will be installing the hub is properly prepared including having the correct network cabling ready to connect to the hub, and having a good location for the hub. *Please see page 2-4 for some installation precautions.*
2. **Verify that the hub passes self test.** This is a simple process of plugging the hub into a power source and observing that the LEDs on the hub's front panel show correct operation.
3. **Mount the hub.** The hub can be mounted in a 19-inch telco rack, in an equipment cabinet, on a wall, or on a horizontal surface.
4. **Connect power to the hub.** Once the hub is mounted, plug it in to the nearby main power source.
5. **Connect the network devices.** Using the appropriate network cables, connect other hubs, switches, routers, computers, servers, printers, and other network devices to the hub ports.

At this point, the hub is fully installed and your network should be up and running. See the rest of this chapter if you need more detailed information on any of these installation steps.



Installation Precautions

The following are power requirement precautions.

- If your installation requires a different power cord than the one supplied with the hub, be sure to use a power cord displaying the mark of the safety agency that defines the regulations for power cords in your country. The mark is your assurance that the power cord can be used safely with the hub
- Do not install the hub in an environment where the operating ambient temperature might exceed 55°C (131°F).
- The hub does not have a power switch; it is powered on when the power cord is plugged in. The hub's power supply automatically adjusts to any AC power source between 100-127 volts and 200-240 volts. There are no voltage range settings to configure.
- When installing the hub, note that the AC outlet must be installed near the equipment and should be easily accessible.

The following are mounting precautions:

- The rack or cabinet should be adequately secured to prevent it from becoming unstable and/or falling over. The hub should be mounted in a position toward the bottom of the rack for stability and to make it easier to stack the other hubs on top.
- Before mounting a hub, plan its location and orientation relative to other devices and equipment. Also consider the cabling that will be attached to the hub and the ports that will be used. Verify that there is room for the grouped cables to trail out from the side of the hub. Allow at least 2.54 cm (1 inch) in the front of the hub. In the back of the hub, allow at least 3.8 cm (1 1/2 inches) of space for the power cord.
- Ensure that the HP 10/100Base-TX Hub does not overload the power circuits, wiring, and over-current protection. To determine the possibility of overloading the supply circuits, add together the amperage ratings from the nameplates of all your hubs (and other equipment) installed on the same circuits and compare the total with the rating limits for the supply circuits.
- Make sure that the power source circuits are properly grounded, then use the supplied power cord to connect the HP 10/100Base-TX Hubs to the circuit. See the Safety Statements in this chapter.
- Do not block airflow around the sides and the back of the unit.



1. Prepare the Installation Site

- **Cabling Infrastructure** - Ensure that the cabling infrastructure meets the necessary network specifications. See the following table for cable types and lengths, and see Appendix B, "Cables and Connectors" for more information:

| Port Type | Cable Type | Length Limits |
|------------|---|--|
| 10Base-T | category 3, 4, or 5, four-pair, 100 ohm UTP (unshielded twisted-pair) | Up to 100 meters for category 3 or 4, and 150 meters for category 5. See the section covering twisted pair cabling in Appendix B, "Cables and Connectors" for more information. |
| 100Base-TX | category 5, 100-ohm UTP | Cable lengths depend on the type of device connected and on the network topology. See the section covering twisted pair cabling in Appendix B, "Cables and Connectors" for more information. |

- **Installation Precautions** -


- **Please see the Safety Statements at the end of this manual.**
- Before installing the hub, plan its location and orientation relative to other devices and equipment. In the front of the hub, leave at least 3 inches (7.6 cm) of space for the twisted-pair cabling. In the back, leave at least 1 1/2 inches (3.8 cm) of space for the power cord.
- **Caution:** Ensure that the hub does not overload the power circuits, wiring, and over-current protection. To determine the possibility of overloading the supply circuits, add together the ampere ratings of all devices installed on the same circuit as the hub and compare the total with the rating limit for the circuit. The maximum ampere ratings are usually printed on the devices near the AC power connectors.
- **Caution:** Ensure that the power source circuits are properly grounded. See the Safety Statements at the end of this manual.
- Do not install the hub in an environment where the operating ambient temperature might exceed 55°C (131°F).
- Make sure the air flow around the sides and back of the hub is not restricted.



2. Verify the Hub Operates Correctly


Before mounting the hub in its network location, you should first verify that it is working properly by plugging it into a power source and verifying that it passes its self test.

1. Connect the power cord supplied with the hub to the power connector on the back of the hub, and then into a properly grounded electrical outlet.

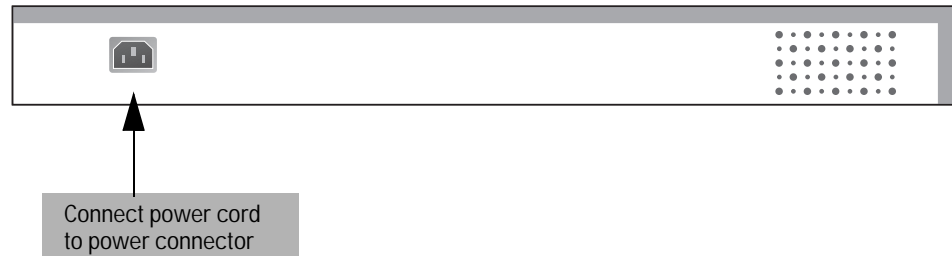

Note

2. Check the LEDs on the hub.

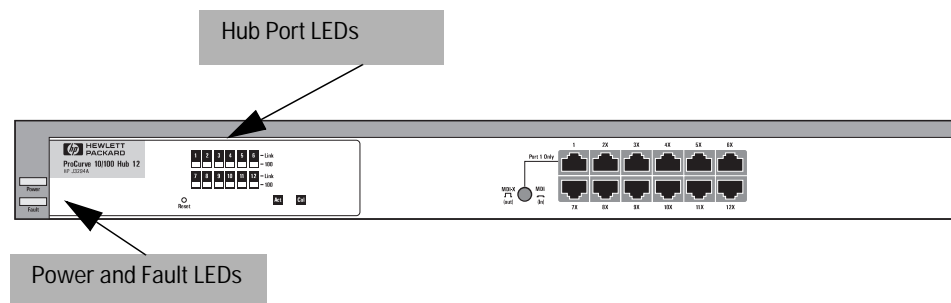

When the hub is powered on, it performs its diagnostic self test. The self test occurs by all port LEDs illuminating and going off. The self-test takes approximately three seconds to complete.

LED Behavior:

During the self test:

- Initially, all the hub and port LEDs are on.
- After three seconds, the port LEDs go off.

When the self test completes successfully:

- The large Power LED stays on.
- The large Fault LED goes off.
- The port LEDs go into their normal operational mode.



Installing the Hub


Installation Summary

If the LED display is different than what is described above, especially if the Fault LED stays on for more than 3 seconds, the self test has not completed correctly. Refer to chapter 3, "Troubleshooting" for diagnostic help.

3. Mount the Hub

Make sure you are ready to mount the hub in a stable location. The hub can be mounted in these ways:

- in a rack or cabinet
- on the wall
- on a horizontal surface

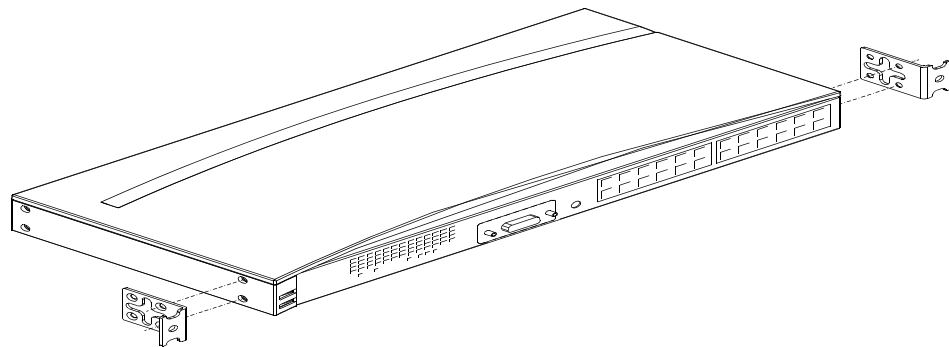

Rack or Cabinet Mounting


The hub is designed to be mounted in any EIA-standard 19-inch telco rack or in an equipment cabinet such as a server cabinet.

For safe operation, please read the mounting precautions in the section, "Installation Precautions" earlier in this chapter before mounting a hub.

1. Use a #1 Phillips (cross-head) screwdriver and attach the mounting brackets to the hub with the included 10-mm M4 screws.
2. Partially install a screw (5/8-inch number 12-24) into the top hole of a pair of holes that are 0.5 inches apart in each rack/cabinet upright as shown in the illustration below. Ensure that the screws are at the same level in each upright.



Installing the Hub Installation Summary

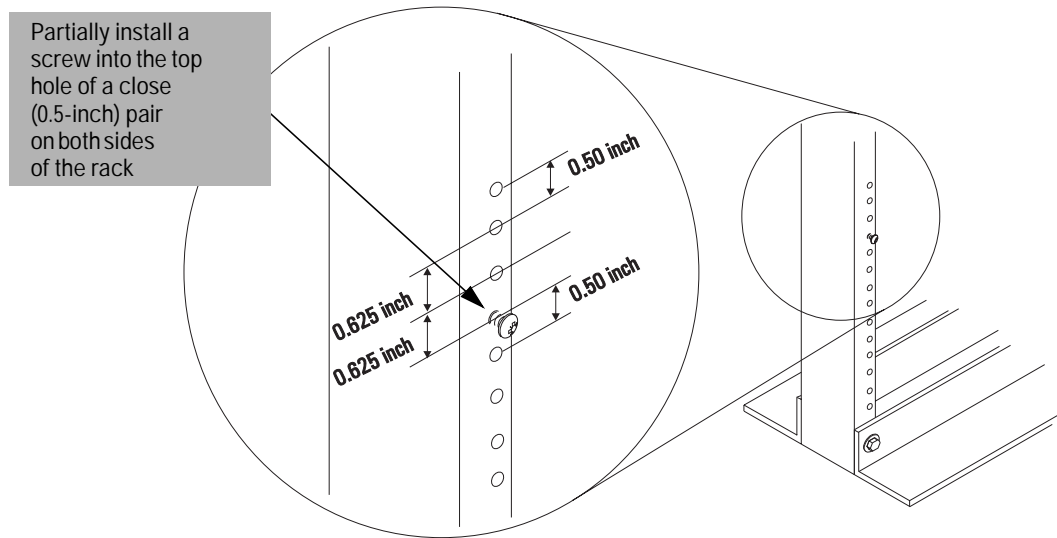


3. Place the hub in the rack and lower it so the notches in the bottom of the bracket slide onto the screws. Tighten these screws-*be careful not to overtighten them.*
4. Install the other number 12-24 screw into the upper hole in each bracket. Tighten these screws-*be careful not to overtighten them.*



Installing the Hub

Installation Summary

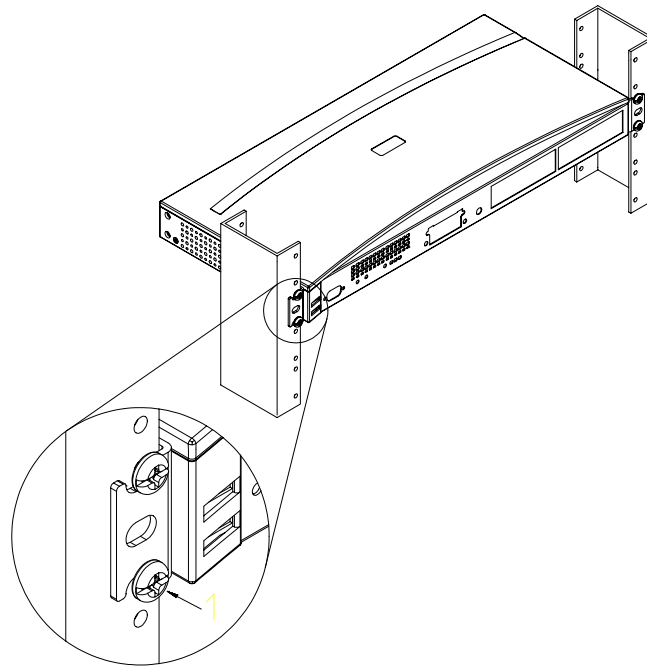

Wall Mounting

You can mount the hub on a wall. Note that the hub should be mounted only to a wall or wood surface that is at least 1/2-inch plywood or its equivalent.

1. Use a #1 Phillips (cross-head) screwdriver and attach the mounting brackets to the hub with the included 10-mm M4 screws.
2. Attach the hub to the wall or wood surface with 5/8-inch number 12 wood screws (not included).

Horizontal Surface Mounting

Place the hub on a table or other horizontal surface. Use a sturdy surface in an uncluttered area. You may want to secure the networking cables and hub power cord to the table leg or other part of the surface structure to help prevent people from tripping over the cords.

Note

Make sure the air flow is not restricted around the sides and back of the hub.



4. Connect the Hub to a Power Source

1. Plug the included power cord into the hub's power connector and into a nearby AC power source.
2. Re-check the LEDs during self test. See "LED Behavior" on page 2-5.

For power precautions, see the section, "Installation Precautions" earlier in this chapter. The HP 10/100 hubs do not have a power switch. They are powered on when the power cord is connected to the hub and to a power source.

5. Some Basic Troubleshooting

| Condition | Diagnostic Tip |
|--|---|
| Port LED is still off when a cable is connected | <p>Try the following:</p> <ul style="list-style-type: none"> • For the indicated port, verify that both ends of the cabling, at the hub and the connected device, are snug. • Verify the connected device and hub are both powered <i>on</i> and operating correctly. • Verify that you have used the correct cable type for the connection. Twisted-pair cable connections, in general, for connecting to an end node, use "straight-through" cable; for connecting to switches or other hubs, use "crossover" cable. • Verify that the attached device is Autonegotiation capable or, if not, that it is not full-duplex. • Try using a different port or a different cable. |



Sample Network Topologies

For topology information, see the document *Designing HP ProCurve Workgroup Networks*, which can be found on the HP network products World Wide Web site, http://www.hp.com/go/network_city. Also, see the Quick Reference Card that accompanies the product for sample network topologies.

Where to Go From Here

Your hub is now correctly installed and is able to send and receive data between end nodes, servers, and printers.

The HP 10/100 hubs are plug-and-communicate network devices requiring no configuration.



Troubleshooting

This chapter describes how to troubleshoot your HP 10/100 hub. This chapter describes the following:

- basic troubleshooting tips
 - diagnosing with the LEDs
 - Hardware Diagnostic tests
 - HP Customer Support Services
-

Basic Troubleshooting Tips

Most problems are caused by the following situations:

- **Incorrect hub-to-switch or hub-to-hub connections.** Check your cable type.
 - When connecting an MDI-X device such as a hub or most switches, use a crossover cable. You can also use Port 1 and press the MDI button.
 - When connecting an MDI-X device to an MDI device, use a straight-through cable.

Most switch and hub ports are wired as MDI-X ports, so for these hub-to-hub or hub-to-switch connections, use a crossover cable. LAN adapters in end nodes are normally wired as MDI ports as are some ports on hubs and switches. For connections from the hub to these MDI ports, use a straight-through cable. See Appendix B, "Cables and Connectors" for pinouts and correct cable wiring for crossover and straight-through twisted-pair cables.

- **Faulty cable or cable is loose.** Look for loose or obviously faulty connections. If they appear to be OK, try a different cable.



Troubleshooting

Basic Troubleshooting Tips

- **Non-standard cables.** Non-standard and miswired cables may cause network collisions and noise, and can seriously impair network performance. 100Base-T networks are more sensitive to miswired cables than 10Base-T networks. Use a new correctly-wired cable or compare your cable to the cable in Appendix B, "Cables and Connectors" for pinouts and correct cable wiring. A category 5 cable tester is a recommended tool for every 100Base-T network installation.
- **Full-duplex link to the hub.** Regular hub ports can only operate in half-duplex mode. If the attached device is running in full-duplex mode, it will cause a lot of late collisions on the network, degrading performance for all nodes.
- **100Base-T topology rules are much more restrictive than 10Base-T rules.** Be aware that you may have to redo existing 10Base-T topology for 100Base-T products.
- When using 100Base-T devices, follow the rules for Category 5 cable installations.
- **Some basic Class II 100Base-T Hub rules are displayed here.**
 - The maximum segment length for a hub-to-end node connection is 100 meters.
 - You are permitted to cascade no more than two hubs.
 - Do not mix Class I and Class II hubs when cascading.
 - When cascading two hubs together, the maximum distance separating them is 5 meters.
 - You must use Category 5 cable installations.
- **Improper Network Topologies.** It is important to make sure you have a valid network topology. Common topology faults include excessive cable length and excessive repeater delays between nodes. If you have network problems after recent changes to the network, change back to the previous topology. If you no longer experience the problems, the new topology is probably at fault. Refer to the guide entitled *Designing HP ProCurve Workgroup Networks* for topology configuration guidelines. This guide can be found online at the HP World Wide Web site, http://www.hp.com/go/network_city.

In addition, you should make sure that your network topology contains no data path loops. Between any two end nodes, there should be only one active cabling path at any time. Data path loops will cause broadcast storms that will severely impact your network performance.



Diagnosing with the LEDs

| LED patterns indicating problems | | | Diagnostic Tips |
|--|----------------------------|--------------------------------|--|
| Power | Fault | Port | |
| OFF | * | * | Check the power cord and power source. If they are OK, the hub may have to be replaced. Contact your HP-authorized LAN dealer or HP representative for assistance. |
| ON | OFF | OFF when cable first connected | <ul style="list-style-type: none"> An attached device has not been detected on the port. Check that the cabling on the indicated port is connected properly. Faulty or improperly wired cables are common; try a different cable. For the 100 Mbps autosensed ports, verify that you are using category 5, or better, UTP cable. |
| ON | Flashing | Flashing for partitioned port | The port has been autopartitioned due to excessive collisions. This usually occurs because of bad cabling or a network loop. |
| ON | ON for a pro-longed period | Variable, all may be ON | <p>A hub hardware failure was detected during self test. Self test does not complete so the LEDs will stay on longer than 3 seconds.</p> <p>Power cycle the hub. If this condition persists, the hub may have to be replaced. Contact your HP-authorized LAN dealer or HP representative for assistance.</p> |
| * This LED is not important for the diagnosis. | | | |



Hardware Diagnostic Tests

Testing the Hub by Resetting It

If you believe that the hub is not operating correctly, you can reset it to test its circuitry and operating code. To reset a hub, either:

- Unplug and plug back in the power cord (power cycle)
- Press the reset button on the front of the hub

Power cycling the hub and pressing the Reset button both cause the hub to perform its power-on self-test, which almost always will resolve any temporary operational problems.

The self-test passes if the Fault LED on the front of the hub goes off after approximately 3 seconds. If the Fault LED stays on longer than 3 seconds, the hub may have to be replaced. Contact your HP-authorized dealer or HP representative for assistance.

Testing Twisted-Pair Cabling

If you think the cable should work but still isn't working, it may not be compatible with the IEEE 802.3 Type 10Base-T or IEEE 802.3u 100Base-T standards. The twisted-pair cables attached to the HP 10/100 hub must be compatible with these standards. To verify that your cable is compatible with these standards, use a qualified cable test device.

HP also offers a wire testing service. Contact your HP-authorized LAN dealer or your local HP sales office for more information.

Note

Make sure that you are using the correct cabling type for each connection. The hub ports are all wired as MDI-X. For connecting end nodes and other MDI-type devices, use "straight-through" cable. For connecting switches, other hubs, and other MDI-X devices, use "crossover" cable. See Appendix B, "Cables and Connectors" for the pinouts for these cables.



HP Customer Support Services

If you are still having trouble with your hub, Hewlett-Packard offers support 24 hours a day, seven days a week through the use of a number of automated electronic services. See the Warranty and Support booklet that came with your hub for information on how to use these services to get technical support.

Your HP-authorized network reseller can also provide you with assistance, both with services that they offer and with services offered by HP.





Specifications

Physical

| | |
|-----------------|------------------|
| Width: | 42.5 cm (17 in) |
| Depth: | 20.3 cm (8 in) |
| Height: | 4.36 cm (1.7 in) |
| Weight : | 2.2 kg (4.8 lbs) |

Electrical

The switch automatically adjusts to any voltage between 100-127 and 200-240 volts and either 50 or 60 Hz.

| | | |
|-------------------------|---------------|---------------|
| AC voltage: | 100–127 volts | 200–240 volts |
| Maximum current: | 1.0A max | 0.5A max |
| Frequency range: | 50/60 Hz | 50/60 Hz |

Environmental

| | Operating | Non-Operating |
|--|-----------------------------|--------------------------------|
| Temperature: | 0°C to 55°C (32°F to 131°F) | -40°C to 70°C (-40°F to 158°F) |
| Relative humidity: (non-condensing) | 15% to 95% at 40°C (104°F) | 10% to 90% at 65°C (149°F) |
| Maximum altitude: | 4.6 Km (15,000 ft) | 4.6 Km (15,000 ft) |



Specifications

Connectors

- The 10/100 Mbps RJ-45 twisted-pair ports are compatible with the IEEE 802.3 and 802.3u 100Base-T standards respectively.

Safety

IEC950 (1991) + A1, A2/.EN60950 I (1992)+A1,A2
CSA950
NOM-019-SCFI-1993
UL1950



Cables and Connectors

This appendix lists cables that have been tested and verified for use with the HP10/100 12 and 24 hubs. It also includes minimum pin-out information so, if you wish to use an unlisted cable, you can verify that the cables used in your installation are correctly wired. Note that each pin-out does not necessarily match the pin-out for the corresponding HP cable, but cables manufactured to follow the minimum pin-out will function correctly.

Note

Incorrectly wired cabling is the most common cause of problems for LAN communications. HP recommends that you work with a qualified LAN cable installer for assistance with your cabling requirements.

Twisted-Pair Cable/Connector Pin-Outs

The RJ-45 ports (10 Mbit/s and 100 Mbit/s, both fixed and transceiver) on the HP 10/100 Hub 12 and Hub 24 are wired as MDI-X ports. The type of twisted-pair cable you connect to these ports (either “straight through” or “crossover”) depends on the type of device at the other end of the cable.

The basic rule is, when connecting same-type ports together (for example MDI-X-to-MDI-X), use crossover cable; when connecting opposite-type ports together (for example MDI-X-to-MDI), use straight-through cable.

These additional rules apply:

- All twisted-pair wires used must be twisted through the entire length of the cable. The wiring sequence must conform to AT&T 258A (not USOC). See “Twisted-Pair Cable Pin Assignments” later in this appendix for a listing of the signals used on each pin.
- For connections to the 10 Mbit/s ports, you can use Category 3, 4, or 5 unshielded twisted-pair cable, as supported by the IEEE 802.3 Type 10Base-T standard.
- For connections to the 100 Mbit/s ports, use Category 5 only, as supported by the IEEE 802.3u Type 100Base-TX standard.




Cables and Connectors

Twisted-Pair Cable/Connector Pin-Outs

Twisted-Pair Cable for Hub (MDI-X) to Computer (MDI) Network Connection

To connect PCs or other MDI network devices to these ports, use a “straight-through” cable.

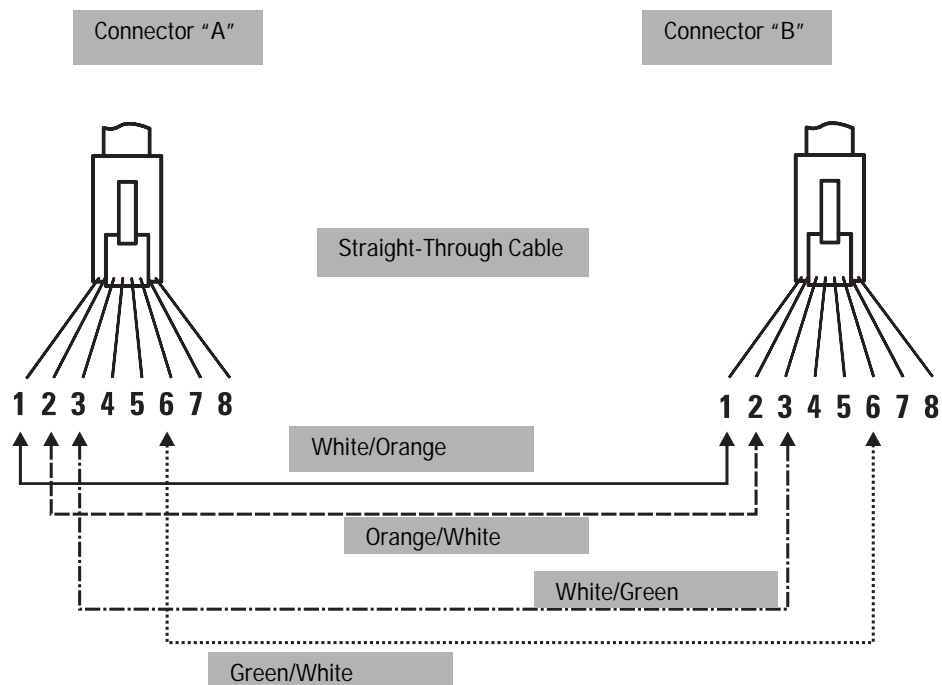**Note**

Pins 1 and 2 on connector "A" *must* be wired as a twisted pair to pins 1 and 2 on connector "B".


Pins 3 and 6 on connector "A" *must* be wired as a twisted pair to pins 3 and 6 on connector "B".

Pins 4, 5, 7, and 8 are not used in this application, although they may be wired in the cable.



Twisted-Pair Cable for Hub (MDI-X) to Hub or Hub (MDI-X) Network Connection

To connect hubs or switches or other MDI-X network devices to these ports, use a "crossover" cable.

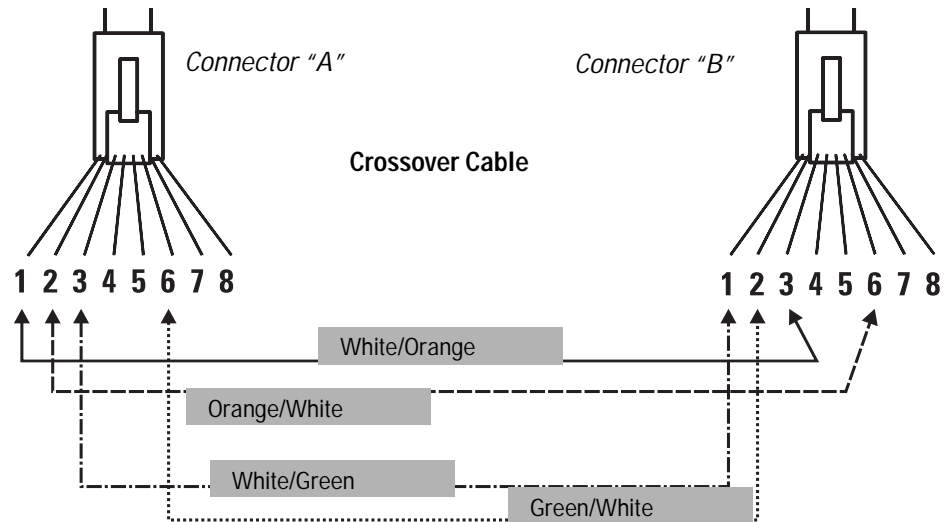

Note

Pins 1 and 2 on connector "A" *must* be wired as a twisted pair to pins 3 and 6 on connector "B".

Pins 3 and 6 on connector "A" *must* be wired as a twisted pair to pins 1 and 2 on connector "B".

Pins 4, 5, 7, and 8 are not used in this application, although they may be wired in the cable.



Cables and Connectors

Twisted-Pair Cable/Connector Pin-Outs

Twisted-Pair Cable Pin Assignments**Twisted-Pair Straight-Through Cable**

| Hub End (MDI-X) | | Computer, Transceiver, or Other MDI Port End | |
|-----------------|------|---|--------------|
| Signal | Pins | Pins | Signal |
| (receive +) | 1 | 1 | (transmit +) |
| (receive -) | 2 | 2 | (transmit -) |
| (transmit +) | 3 | 3 | (receive +) |
| (transmit -) | 6 | 6 | (receive -) |

Twisted-Pair Cross-Over Cable

| Hub End (MDI-X) | | Hub or Hub Port, or Other MDI-X Port End | |
|-----------------|------|---|--------------|
| Signal | Pins | Pins | Signal |
| (receive +) | 1 | 6 | (transmit -) |
| (receive -) | 2 | 3 | (transmit +) |
| (transmit +) | 3 | 2 | (receive -) |
| (transmit -) | 6 | 1 | (receive +) |



Safety and EMC Regulatory Statements

Safety Information



WARNING

Documentation reference symbol. If the product is marked with this symbol, refer to the product documentation to get more information about the product.

A WARNING in the manual denotes a hazard that can cause injury or death.

CAUTION

A CAUTION in the manual denotes a hazard that can damage equipment.

Do not proceed beyond a WARNING or CAUTION notice until you have understood the hazardous conditions and have taken appropriate steps.

Grounding

These are safety class I products and have protective earthing terminals. There must be an uninterruptible safety earth ground from the main power source to the product's input wiring terminals, power cord, or supplied power cord set. Whenever it is likely that the protection has been impaired, disconnect the power cord until the ground has been restored.

For LAN cable grounding:

- If your LAN covers an area served by more than one power distribution system, be sure their safety grounds are securely interconnected.
- LAN cables may occasionally be subject to hazardous transient voltages (such as lightning or disturbances in the electrical utilities power grid). Handle exposed metal components of the network with caution.

Servicing

There are no user-serviceable parts inside these products. Any servicing, adjustment, maintenance, or repair must be performed only by service-trained personnel.

These products do not have a power switch; they are powered on when the power cord is plugged in.



Informations concernant la sécurité



Symbole de référence à la documentation. Si le produit est marqué de ce symbole, reportez-vous à la documentation du produit afin d'obtenir des informations plus détaillées.

WARNING

Dans la documentation, un WARNING indique un danger susceptible d'entraîner des dommages corporels ou la mort.

CAUTION

Un texte de mise en garde intitulé CAUTION indique un danger susceptible de causer des dommages à l'équipement.

Ne continuez pas au-delà d'une rubrique WARNING ou CAUTION avant d'avoir bien compris les conditions présentant un danger et pris les mesures appropriées.

Cet appareil est un produit de classe I et possède une borne de mise à la terre. La source d'alimentation principale doit être munie d'une prise de terre de sécurité installée aux bornes du câblage d'entrée, sur le cordon d'alimentation ou le cordon de raccordement fourni avec le produit. Lorsque cette protection semble avoir été endommagée, débrancher le cordon d'alimentation jusqu'à ce que la mise à la terre ait été réparée.

Mise à la terre du câble de réseau local:

- si votre réseau local s'étend sur une zone desservie par plus d'un système de distribution de puissance, assurez-vous que les prises de terre de sécurité soient convenablement interconnectées.
- Les câbles de réseaux locaux peuvent occasionnellement être soumis à des surtensions transitoires dangereuses (telles que la foudre ou des perturbations dans le réseau d'alimentation public). Manipulez les composants métalliques du réseau avec précautions.

Aucune pièce contenue à l'intérieur de ce produit ne peut être réparée par l'utilisateur. Tout dépannage, réglage, entretien ou réparation devra être confié exclusivement à un personnel qualifié.

Cet appareil ne comporte pas de commutateur principal ; la mise sous tension est effectuée par branchement du cordon d'alimentation.



Hinweise zur Sicherheit



WARNING

Symbol für Dokumentationsverweis. Wenn das Produkt mit diesem Symbol markiert ist, schlagen Sie bitte in der Produktdokumentation nach, um mehr Informationen über das Produkt zu erhalten.

CAUTION

Symbol für Dokumentationsverweis. Wenn das Produkt mit diesem Symbol markiert ist, schlagen Sie bitte in der Produktdokumentation nach, um mehr Informationen über das Produkt zu erhalten.

Symbol für Dokumentationsverweis. Wenn das Produkt mit diesem Symbol markiert ist, schlagen Sie bitte in der Produktdokumentation nach, um mehr Informationen über das Produkt zu erhalten.

Fahren Sie nach dem Hinweis WARNING oder CAUTION erst fort, nachdem Sie den Gefahrenzustand verstanden und die entsprechenden Maßnahmen ergriffen haben.

Dies ist ein Gerät der Sicherheitsklasse I und verfügt über einen schützenden Erdungsterminal. Der Betrieb des Geräts erfordert eine ununterbrochene Sicherheitserdung von der Hauptstromquelle zu den Geräteingabeterminals, den Netzkabeln oder dem mit Strom belieferten Netzkabelsatz voraus. Sobald Grund zur Annahme besteht, daß der Schutz beeinträchtigt worden ist, das Netzkabel aus der Wandsteckdose herausziehen, bis die Erdung wiederhergestellt ist.

Für LAN-Kabelerdung:

- Wenn Ihr LAN ein Gebiet umfaßt, das von mehr als einem Stromverteilungssystem beliefert wird, müssen Sie sich vergewissern, daß die Sicherheitserdungen fest untereinander verbunden sind.
- LAN-Kabel können gelegentlich gefährlichen Übergangsspannungen ausgesetzt werden (beispielsweise durch Blitz oder Störungen in dem Starkstromnetz des Elektrizitätswerks). Bei der Handhabung exponierter Metallbestandteile des Netzwerkes Vorsicht walten lassen.

Dieses Gerät enthält innen keine durch den Benutzer zu wartenden Teile. Wartungs-, Anpassungs-, Instandhaltungs- oder Reparaturarbeiten dürfen nur von geschultem Bedienungspersonal durchgeführt werden.

Dieses Gerät hat keinen Netzschalter; es wird beim Anschließen des Netzkabels eingeschaltet.



Safety and EMC Regulatory Statements

Considerazioni sulla sicurezza

Considerazioni sulla sicurezza



WARNING

Simbolo di riferimento alla documentazione. Se il prodotto è contrassegnato da questo simbolo, fare riferimento alla documentazione sul prodotto per ulteriori informazioni su di esso.

La dicitura **WARNING** denota un pericolo che può causare lesioni o morte.

CAUTION

La dicitura **CAUTION** denota un pericolo che può danneggiare le attrezzature.

Non procedere oltre un avviso di **WARNING** o di **CAUTION** prima di aver compreso le condizioni di rischio e aver provveduto alle misure del caso.

Questo prodotto è omologato nella classe di sicurezza I ed ha un terminale protettivo di collegamento a terra. Dev'essere installato un collegamento a terra di sicurezza, non interrompibile che vada dalla fonte d'alimentazione principale ai terminali d'entrata, al cavo d'alimentazione oppure al set cavo d'alimentazione fornito con il prodotto. Ogniqualvolta vi sia probabilità di danneggiamento della protezione, disinserite il cavo d'alimentazione fino a quando il collegamento a terra non sia stato ripristinato.

Per la messa a terra dei cavi LAN:

- se la vostra LAN copre un'area servita da più di un sistema di distribuzione elettrica, accertatevi che i collegamenti a terra di sicurezza siano ben collegati fra loro;
- i cavi LAN possono occasionalmente andare soggetti a pericolose tensioni transitorie (ad esempio, provocate da lampi o disturbi nella griglia d'alimentazione della società elettrica); siate cauti nel toccare parti esposte in metallo della rete.

Nessun componente di questo prodotto può essere riparato dall'utente. Qualsiasi lavoro di riparazione, messa a punto, manutenzione o assistenza va effettuato esclusivamente da personale specializzato.

Questo apparato non possiede un commutatore principale; si mette sotto tensione all'inserirsi il cavo d'alimentazione.



Consideraciones sobre seguridad



WARNING

Símbolo de referencia a la documentación. Si el producto va marcado con este símbolo, consultar la documentación del producto a fin de obtener mayor información sobre el producto.

Una WARNING en la documentación señala un riesgo que podría resultar en lesiones o la muerte.

CAUTION

Una CAUTION en la documentación señala un riesgo que podría resultar en averías al equipo.

No proseguir después de un símbolo de WARNING o CAUTION hasta no haber entendido las condiciones peligrosas y haber tomado las medidas apropiadas.

Este aparato se enmarca dentro de la clase I de seguridad y se encuentra protegido por una borna de puesta a tierra. Es preciso que exista una puesta a tierra continua desde la toma de alimentación eléctrica hasta las bornas de los cables de entrada del aparato, el cable de alimentación o el juego de cable de alimentación suministrado. Si existe la probabilidad de que la protección a tierra haya sufrido desperfectos, desenchufar el cable de alimentación hasta haberse subsanado el problema.

Puesta a tierra del cable de la red local (LAN):

- Si la LAN abarca un área cuyo suministro eléctrico proviene de más de una red de distribución de electricidad, cerciorarse de que las puestas a tierra estén conectadas entre sí de modo seguro.
- Es posible que los cables de la LAN se vean sometidos de vez en cuando a voltajes momentáneos que entrañen peligro (rayos o alteraciones en la red de energía eléctrica). Manejar con precaución los componentes de metal de la LAN que estén al descubierto.

Este aparato no contiene pieza alguna susceptible de reparación por parte del usuario. Todas las reparaciones, ajustes o servicio de mantenimiento debe realizarlos solamente el técnico.

Este producto no tiene interruptor de potencia; se activa cuando se enchufa el cable de alimentación.



Safety Information (Chinese)

HP 网络产品使用安全手册

使用须知

欢迎使用惠普网络产品，为了您及仪器的安全，请注意如下事项

1. 仪器要和地线相接。要使用有正确接地插头的电源线，使用中国国家规定的220V电源。
2. 避免高湿度和灰尘多的地方，否则易引起仪器内部部件的损坏。
3. 避免接近高温，避免接近直接热源，如直射太阳光、暖气等其它发热体。
4. 不得有异物或液体落入机内，以免部件短路。
5. 不要将强磁体放置于仪器附近。

警告

为了防止火灾或触电事故，请不要将该机放置于淋雨或潮湿处。

安装

安装辅助管理模块请参看安装指南。

保修及技术支持

如果您按以上步骤正确使用但遇到了问题，或想了解其它产品性能，请按以下方式与我们联系。

如果是硬件故障：

1. 与售出单位或当地维修机构联系。
2. 惠普维修中心：

北京市海淀区知春路56号 中航科技大厦

邮政编码： 100086

电话： 010-62625666 转 6101

如果是软件问题：

1. 惠普技术支持中心热线电话： 010-62625666 转 5600 至5610
2. 传真自动回复系统： 010-65055280



Safety Information (Japanese)

安全性の考慮

安全記号



マニュアル参照記号。製品にこの記号がついている場合はマニュアルを参照し、注意事項等をご確認ください。

WARNING マニュアル中の「WARNING」は人身事故の原因となる危険を示します。

CAUTION マニュアル中の「CAUTION」は装置破損の原因となる危険を示します。

「WARNING」や「CAUTION」の項は飛ばさないで必ずお読みください。危険性に関する記載事項をよく読み、正しい手順に従った上で次の事項に進んでください。

これは安全性クラス I の製品で保護用接地端子を備えています。主電源から製品の入力配線端子、電源コード、または添付の電源コード・セットまでの間、切れ目のない安全接地が存在することが必要です。もしこの保護回路が損なわれたことが推測されるときは、接地が修復されるまで電源コードを外しておいてください。

LAN ケーブルの接地に関して:

- もし貴社の LAN が複数の配電システムにより電力を受けている領域をカバーしている場合には、それらのシステムの安全接地が確実に相互に結合されていることを確認してください。
- LAN ケーブルは時として危険な過度電圧（例えば雷や、配電設備の電力網での障害）にさらされることがあります。露出した金属部分の取扱いには十分な注意をはらってください。

本製品の内部にはユーザーが修理できる部品はありません。サービス、調整、保守および修理はサービス訓練を受けた専門家におまかせください。

本製品には電源スイッチがありません。電源コードを接続したとき電源人となります。



Regulatory Statements

FCC Class A Statement (for U.S.A. Only)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause interference to radio communications. Operation of this equipment in a residential area may cause interference in which case the user will be required to correct the interference at his own expense.

Canada

This product complies with Class A Canadian EMC requirements.

Australia/New Zealand

Complies with Australia/New Zealand
EMC Class A requirements.



Japan

VCCI Class A (For Japan Only)

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。



Korea

The top statement is for Class A products. The bottom statement is for Class B products.

시용시 안내문 (A급 기기)

이 기기는 업무용으로 전자파장애감정을 받은
기기이오니, 만약 잘못 구입하셨을 때에는 구입
한 곳에서 비업무용으로 교환하시기 바랍니다.

Taiwan

警告使用者：這是甲類的資訊產品，在居住的
環境中使用時，可能會造成射頻干擾，在這種
情況下，使用者會被要求採取某些適當的對策。



Safety and EMC Regulatory Statements
Regulatory Statements

European Community

DECLARATION OF CONFORMITY

according to ISO/IEC Guide 22 and EN45014

Manufacturer's Name: Hewlett-Packard Company

Manufacturer's Address: 8000 Foothills Blvd.
Roseville, CA 95747-5502
U.S.A.

declares that the product:

Product Name: HP ProCurve 100Base-TX Hub 12
HP ProCurve 100Base-TX Hub 24

Model Number: HP J3294A
HP J3295A

Accessories:

conforms to the following Product Specifications:

Safety: EN60950 (1992)+A1,A2 / IEC 950:1991+A1,A2


EMC: EN 55022 (1994) / CISPR-22 (1993) class A
EN50082-1 (1992)
prEN 55024-2 (1992) / IEC 801-2 (1991) 4 kV CD, 8 kV AD
prEN 55024-3 (1991) / IEC 801-3 (1984), 3 V/m
prEN 55024-4 (1992) / IEC 801-4 (1988): 1 kV-(power line)
0.5 kV-(signal line)

Supplementary Information:

The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly. LEDs in this product(s) are Class-1 in accordance with EN60825-1:1994.

Tested with Hewlett-Packard Co. products only.

Roseville, May 11, 1998

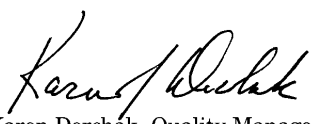
Karen Dorchak, Quality Manager

European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department TRE, Herrenberger Strasse 130, D-71034 Böblingen (FAX:+49-7031-14-3143).



Index

Numerics

- 100Base-TX ports
 - cables used with ... 2-4
- 10Base-T ports
 - cables used with ... 2-4
 - LEDs for ... 1-4

B

- back of hub
 - description ... 1-5
 - power connector ... 1-5

C

- cabinet
 - mounting the hub in ... 2-6
- cables
 - category 3, 4, 5 ... B-1
 - crossover cable pinout ... B-4
 - infrastructure requirements ... 2-4
 - straight-through cable pinout ... B-4
 - twisted-pair connector pin-outs ... B-1
- cabling infrastructure ... 2-4
- connector specifications ... A-2
- crossover cable
 - pin-out ... B-4

D

- description
 - back of hubs ... 1-5
- diagnostic tests ... 3-4
 - testing the only ... 3-4
 - testing twisted-pair cabling ... 3-4

E

- electrical specifications ... A-1
- environmental specifications ... A-1

F

- Fault LED ... 1-4, 2-5, 3-3

features

- 10/100 Hub 12, Hub 24 ... 1-6
- flashing LED
 - error indications ... 3-3
- front of hub
 - illustration ... 1-2

H

- horizontal surface
 - mounting hub on ... 2-8
- hub
 - description ... 1-1
 - diagnostics with ... 3-4
 - features ... 1-6
 - mounting in a rack or cabinet ... 2-6
 - mounting on a wall ... 2-8
 - mounting on horizontal surface ... 2-8
- hub operation
 - verifying after installation ... 2-5

I

- illustration
 - front of hubs ... 1-2
- included parts ... 2-1
- installation
 - network cable requirements ... 2-4
 - site preparation ... 2-4
 - summary ... 2-2
- installing
 - 10/100 hub 12/24 ... 2-1

L

- LEDs
 - 10 Mbit/s ports ... 1-4
 - descriptions of ... 1-4
 - error indications ... 3-3
 - Fault ... 1-4
 - link ports ... 1-4
 - Power ... 1-4



M

MDI-X to MDI network cable ... B-2
 MDI-X to MDI-X network cable ... B-3
 mounting the hub
 in a rack ... 2-6
 on a horizontal surface ... 2-8
 on a wall ... 2-8

N

network cables
 100Base-TX connections ... 2-4
 10Base-T connections ... 2-4
 required types ... 2-4
 network ports
 LEDs for ... 1-4
 types of ... 1-3

P

physical specifications of hubs ... A-1
 ports
 LEDs for ... 1-4
 types of ... 1-3
 power connector ... 1-5
 Power LED ... 1-4, 2-5, 3-3

R

rack
 mounting the hub in ... 2-6
 resetting the hub
 troubleshooting procedure ... 3-4

S

sample topologies ... 2-10
 slow flash rate definition ... 1-4
 specifications ... A-1
 connectors ... A-2
 electrical ... A-1
 electromagnetic ... A-2
 environmental ... A-1
 physical ... A-1
 straight-through cable
 pin-out ... B-4
 summary of hub installation ... 2-2

T

testing
 twisted-pair cabling ... 3-4
 topologies
 effects of improper topology ... 3-2
 samples of ... 2-10
 troubleshooting ... 3-1
 common network problems ... 3-1
 diagnostic tests ... 3-4
 effects of improper topology ... 3-2
 effects of non-standard cables ... 3-2
 testing the hub ... 3-4
 testing the twisted-pair cables ... 3-4
 twisted-pair cable
 crossover cable pin-out ... B-4
 hub- to-hub or hub (MDI-X) connection ... B-3
 hub-to-computer connection ... B-2
 pin-outs ... B-1, B-4
 straight-through cable pin-out ... B-4
 testing ... 3-4
 twisted-pair port LEDs
 100Mbps ... 1-4
 Link ... 1-4

W

wall
 mounting hub on ... 2-8





Technical information in this document
is subject to change without notice.

© Copyright Hewlett-Packard Company
1998. All rights reserved. Reproduction,
adaptation, or translation without prior
written permission is prohibited except
as allowed under the copyright laws.

Printed in Singapore 7/98

Manual Part Number
5967-2280



Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at [artisan^{tg}.com](https://www.artisantg.com) for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisan^{tg}.com | [artisan^{tg}.com](https://www.artisantg.com)

