



## Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

### SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

### *InstraView*<sup>SM</sup> REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at [www.instraview.com](http://www.instraview.com) ↗

### WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. [www.artisanng.com/WeBuyEquipment](http://www.artisanng.com/WeBuyEquipment) ↗

### LOOKING FOR MORE INFORMATION?

Visit us on the web at [www.artisanng.com](http://www.artisanng.com) ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

**Contact us:** (888) 88-SOURCE | [sales@artisanng.com](mailto:sales@artisanng.com) | [www.artisanng.com](http://www.artisanng.com)

# 8901A GPIB-To-CAMAC Interface

- Controls up to 23 CAMAC Instrument Modules
- Full GPIB Support
- Up to 450 kbytes/sec Data Readout Rate
- Support for LabView™, Kmax™ and KmaxNT™ software packages available

## Provides GPIB Control of CAMAC Modules

The 8901A translates GPIB (General Purpose Interface Bus - IEEE Standard 488) commands to CAMAC instrument module setup and readout commands. All basic CAMAC and GPIB functions are supported, including block reads and service request. The 8901A may be used to control the wide variety of CAMAC-standard instruments available from LeCroy and other CAMAC instrument manufacturers.

## FUNCTIONAL DESCRIPTION

---

The Model 8901A GPIB-to-CAMAC Interface acts as either a Talker or Listener on the GPIB. Thus, any GPIB controller can program settings, read from, or write to any standard CAMAC module.

As a GPIB Listener, the 8901A accepts GPIB commands and translates them into CAMAC Dataway Bus commands. The 8901A then acts as a controller for the instrument modules installed in the CAMAC mainframe.

As a GPIB Talker, the 8901A takes single readings or blocks of data from a CAMAC instrument module, transfers them across the CAMAC dataway, and then out across the GPIB. Any GPIB instruments assigned as Listeners by the GPIB controller (e.g. printers, tape drives, or the controller itself) can accept this data from the GPIB.

The 8901A resides in the two right-most slots furthest right in a CAMAC mainframe. It supports CAMAC Standard command format (F, A, N, data) consisting of Function command (F), Sub-command (A), and module slot address within the chassis (N). The commands use decimal bytes.

## SPECIFICATIONS

---

### GPIB INTERFACE

**GPIB Device Codes Capability:** SH1, AH1, T6, L4, C0, SR1, RL0, PP0, DC0, DT0, E2.

**GPIB Address:** A front-panel DIP switch sets the primary IEEE-488 address. CAMAC does not support GPIB secondary addressing; an individual module is addressed via its CAMAC slot number (N).

**GPIB Writes (single write mode only):** Four different types of GPIB writes can be executed:

1. DATA - module dependent setup commands or output data.
2. INITIALIZE (Z) - resets all installed modules to their default states. The Initialize command has absolute priority over all other signals or controls.
3. CLEAR (C) - clears all installed modules.
4. INHIBIT (I) - inhibits any CAMAC bus activity (e.g., data transfers or instrument setup changes).

**GPIB Block Read:** Entire block of data is transferred from a single data request. Data transfer terminates when the CAMAC module memory is emptied ( $Q = 0$ ) or when GPIB host stops requesting data. Optional slow block read mode (for slow modules) adds 40  $\mu$ sec delay between data words.

**GPIB Single Read:** Three different single read modes exist:

- 2 bytes/read - 8 bit data (1 byte) plus X/Q byte.
- 3 bytes/read - 16 bit data (2 bytes) plus X/Q byte.
- 4 bytes/read - 24 bit data (3 bytes) plus X/Q byte.

(Bytes not read are discarded.)

**GPIB Transfer Rates:** 450 kbytes/sec max. in block read mode; 20 kbytes/sec max. in single read or write modes. Note: Host computer speed and GPIB overhead may reduce throughput.

**GPIB Service Requests (SRQ):** The 8901A asserts the GPIB SRQ line when:

1. Module requests attention via CAMAC Look-At-Me (LAM) line.
2. Module command not accepted or not valid (X).
3. Status changes of a selected feature of an addressed module (Q).
4. A programmable combination of the above occur.

**GPIB Serial Poll Read:** After a GPIB SRQ, the GPIB controller can poll the 8901A for up to 5 status bytes. These bytes indicate:

- If this GPIB address originated the service request
- Which CAMAC module asserted LAM
- The current status of X
- The current status of Q

After the GPIB controller reads a status byte, the 8901A terminates the GPIB Service Request.

**GPIB Byte Readout Sequence:** A hardware jumper sets either high byte first or low byte first in 16-bit or 24-bit data readout modes to match the format required by the host computer.

## FRONT-PANEL STATUS INDICATORS LEDs

**TALK:** Talker mode.

**LISTEN:** Listener mode.

**SRQ ENABLE:** Enabled to carry out service requests.

**X RESPONSE:** The last command was accepted by the CAMAC module addressed.

**Q RESPONSE:** A valid data transfer or test occurred within the CAMAC mainframe.

**LAM (LOOK-AT-ME):** One of the installed CAMAC modules set a "LAM" (Service Request).

**INHIBIT:** The CAMAC dataway has been inhibited from activity.

**GENERAL**

**Operating Temperature:** 5 to 40°C.

**Power Requirements:** 1.2 A on +6 V supply (7.2 W).

**Packaging:** RF-shielded in conformance with CAMAC Standard (IEEE-488-1978, IEC-625). Must be used in CAMAC controller slots.

**Cable:** 2 meter GPIB cable included.

**SUMMARY OF 8901A COMMANDS AND PROCEDURES**

**Syntax:** All commands are given below in decimal and hexadecimal (in parenthesis).

<b>8901A Setup Commands</b>		
Disable SRQ	64	(40)
Enable SRQ on occurrence of LAM	65	(41)
Enable SRQ on occurrence of Q=0	66	(42)
Enable SRQ on occurrence of LAM or Q=0	67	(43)
Enable SRQ on occurrence of X=0	68	(44)
Enable SRQ on occurrence of LAM or X=0	69	(45)
Enable SRQ on occurrence of Q=0 or X = 0	70	(46)
Enable SRQ on occurrence of LAM, Q=0 or X=0	71	(47)

<b>Transfer Mode Commands</b>			
	<b>Normal Transfer</b>	<b>Block Read</b>	<b>High Speed Block Read</b>

8-bit read	97 (61)	121 (79)	105 (69)
16-bit read	98 (62)	122 (7A)	106 (6A)
24-bit read	100 (64)	124 (7C)	108 (6C)

**Procedure for Uploading and Executing SRQ and Transfer Mode Commands**

1. Place 8901A in LISTEN mode (this step will cause the LISTEN lamp to illuminate).
2. Upload command byte (ex. Decimal 106 to set the 8901A in 16 bit High Speed Block Read).
3. Make 8901A UNLISTEN (turns off LISTEN lamp and latches the command byte).

**CLEAR, INITIALIZE and INHIBIT Commands**

Send INITIALIZE (Z)	33	(21)
Send CLEAR (C)	34	(22)
Send both CLEAR and INITIALIZE	35	(23)
Assert INHIBIT (I)	72	(48)
De-assert INHIBIT (also disables SRQ)	64	(40)

**Procedure for Uploading and Executing C, Z, and I Commands**

1. Place 8901A in LISTEN mode (this step will cause the LISTEN lamp to illuminate).
2. Upload command byte (ex. Decimal 34 to upload the CLEAR byte command).
3. Make 8901A TALK (Turns off LISTEN lamp, illuminates TALK light, executes CAMAC cycle).

**NOTE:** When uploading the INHIBIT command in step 2 above, the

*INHIBIT lamp will illuminate. The CAMAC crate, however, does not receive this information until step 3 is completed.*

<b>Commands for Individual Modules</b>		
Register Name	Abbr.	Range
Function code	F	0 - 31
Subaddress	A	0 - 15
Station Number	N	1 - 25 (Typically 1-23)
Data bytes	D1, D2, D3	0 - 255 each

<b>Procedure for Uploading and Executing Commands to Individual Modules</b>
1. Place 8901A in LISTEN mode (this step will cause the LISTEN lamp to illuminate).
2. Upload byte stream.
3. Make 8901A TALK (turns off LISTEN lamp, illuminates TALK light, executes CAMAC cycle).

<b>Byte order for Uploading CAMAC Function Commands</b>		
Byte #	Byte Name	Byte Description
1	F	Function code number
2	A	Module Subaddress
3	N	CAMAC station (or slot) number
4	D1	Low data byte (bits W1-W8)
5	D2	Middle data byte (bits W9-W16)
6	D3	High data byte (bits W17-W24)

*Copyright© July 1997. LeCroy is a registered trademark of LeCroy Corporation. All rights reserved. Information in this publication supersedes all earlier versions.*



## Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

### SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

### *InstraView*<sup>SM</sup> REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at [www.instraview.com](http://www.instraview.com) ↗

### WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. [www.artisanng.com/WeBuyEquipment](http://www.artisanng.com/WeBuyEquipment) ↗

### LOOKING FOR MORE INFORMATION?

Visit us on the web at [www.artisanng.com](http://www.artisanng.com) ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

**Contact us:** (888) 88-SOURCE | [sales@artisanng.com](mailto:sales@artisanng.com) | [www.artisanng.com](http://www.artisanng.com)