



## Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

### SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

### *InstraView*<sup>SM</sup> REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at [www.instraview.com](http://www.instraview.com) ↗


### WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. [www.artisanng.com/WeBuyEquipment](http://www.artisanng.com/WeBuyEquipment) ↗

### LOOKING FOR MORE INFORMATION?

Visit us on the web at [www.artisanng.com](http://www.artisanng.com) ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation


**Contact us:** (888) 88-SOURCE | [sales@artisanng.com](mailto:sales@artisanng.com) | [www.artisanng.com](http://www.artisanng.com)

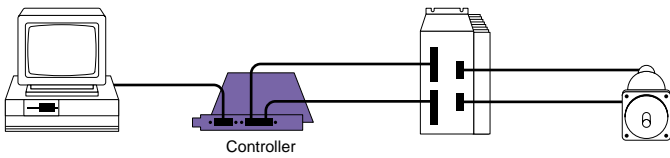

# VM50 Adaptor

If you wish to use screw terminal connections for the 24 programmable I/O, Compumotor offers the VM50 adaptor (p/n VM50). Screw terminal connections for both the 24 inputs and the 24 outputs will require two VM50 adaptors.

The pin numbers on the VM50's screw terminals correspond to the same pin outs on the Programmable Inputs and Programmable Outputs connectors. The VM50 simply attaches to the controller via the 2-foot, 50-pin ribbon cable that comes with the VM50 (see figure on right).

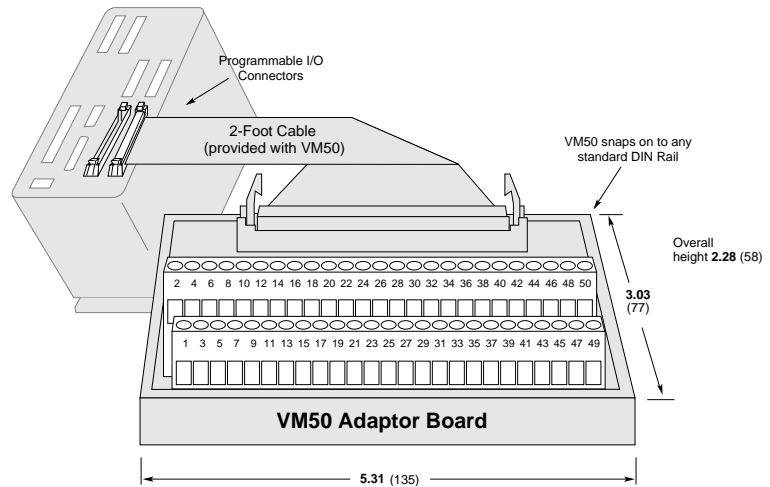

## Specifications

Parameter	Value
<b>Output</b>	
Sourcing Current	OFF = Equivalent to GND of load ON - V <sub>O</sub> -2VDC for 50 mA ON = V <sub>O</sub> -2.5VDC for 500 mA
Sinking Current	OFF = V <sub>O</sub> ON = ≤ 0.4VDC for 50 mA ON = < 2.5VDC for 500 mA
V <sub>O</sub> Range	5-24V
Active Level	Default is active low, but can be changed to active high with the OUTLVL command
<i>Note: Outputs are not short-circuit protected.</i>	
<b>Input</b>	
Switching levels	Low ≤ 1/3 (V <sub>i</sub> ) High ≥ 2/3 (V <sub>i</sub> )
V <sub>i</sub> Range	5-24V
Voltage Range	0-24V
Sourcing Current	Connect jumper for desired socket to position 3 (default)
Sinking Current	Connect jumper for desired socket to position 1
Status	Check with the TIN or INFNC command
Active Level	Set by 6000 Series controller/indexer. Default is active low, but can be changed to active high with the INLVL command.



## Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

### SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

### *InstraView*<sup>SM</sup> REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at [www.instraview.com](http://www.instraview.com) ↗

### WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. [www.artisanng.com/WeBuyEquipment](http://www.artisanng.com/WeBuyEquipment) ↗

### LOOKING FOR MORE INFORMATION?

Visit us on the web at [www.artisanng.com](http://www.artisanng.com) ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

**Contact us:** (888) 88-SOURCE | [sales@artisanng.com](mailto:sales@artisanng.com) | [www.artisanng.com](http://www.artisanng.com)