



## Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

### SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

### *InstraView*<sup>SM</sup> REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at [www.instraview.com](http://www.instraview.com) ↗

### WE BUY USED EQUIPMENT


Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. [www.artisanng.com/WeBuyEquipment](http://www.artisanng.com/WeBuyEquipment) ↗

### LOOKING FOR MORE INFORMATION?

Visit us on the web at [www.artisanng.com](http://www.artisanng.com) ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

**Contact us:** (888) 88-SOURCE | [sales@artisanng.com](mailto:sales@artisanng.com) | [www.artisanng.com](http://www.artisanng.com)

This card provides information to help you quickly configure, install, and operate your system controller board (SCB). Keep this card in a convenient place for future use. See the back of this card for Web site, technical support, and start-up configuration settings.

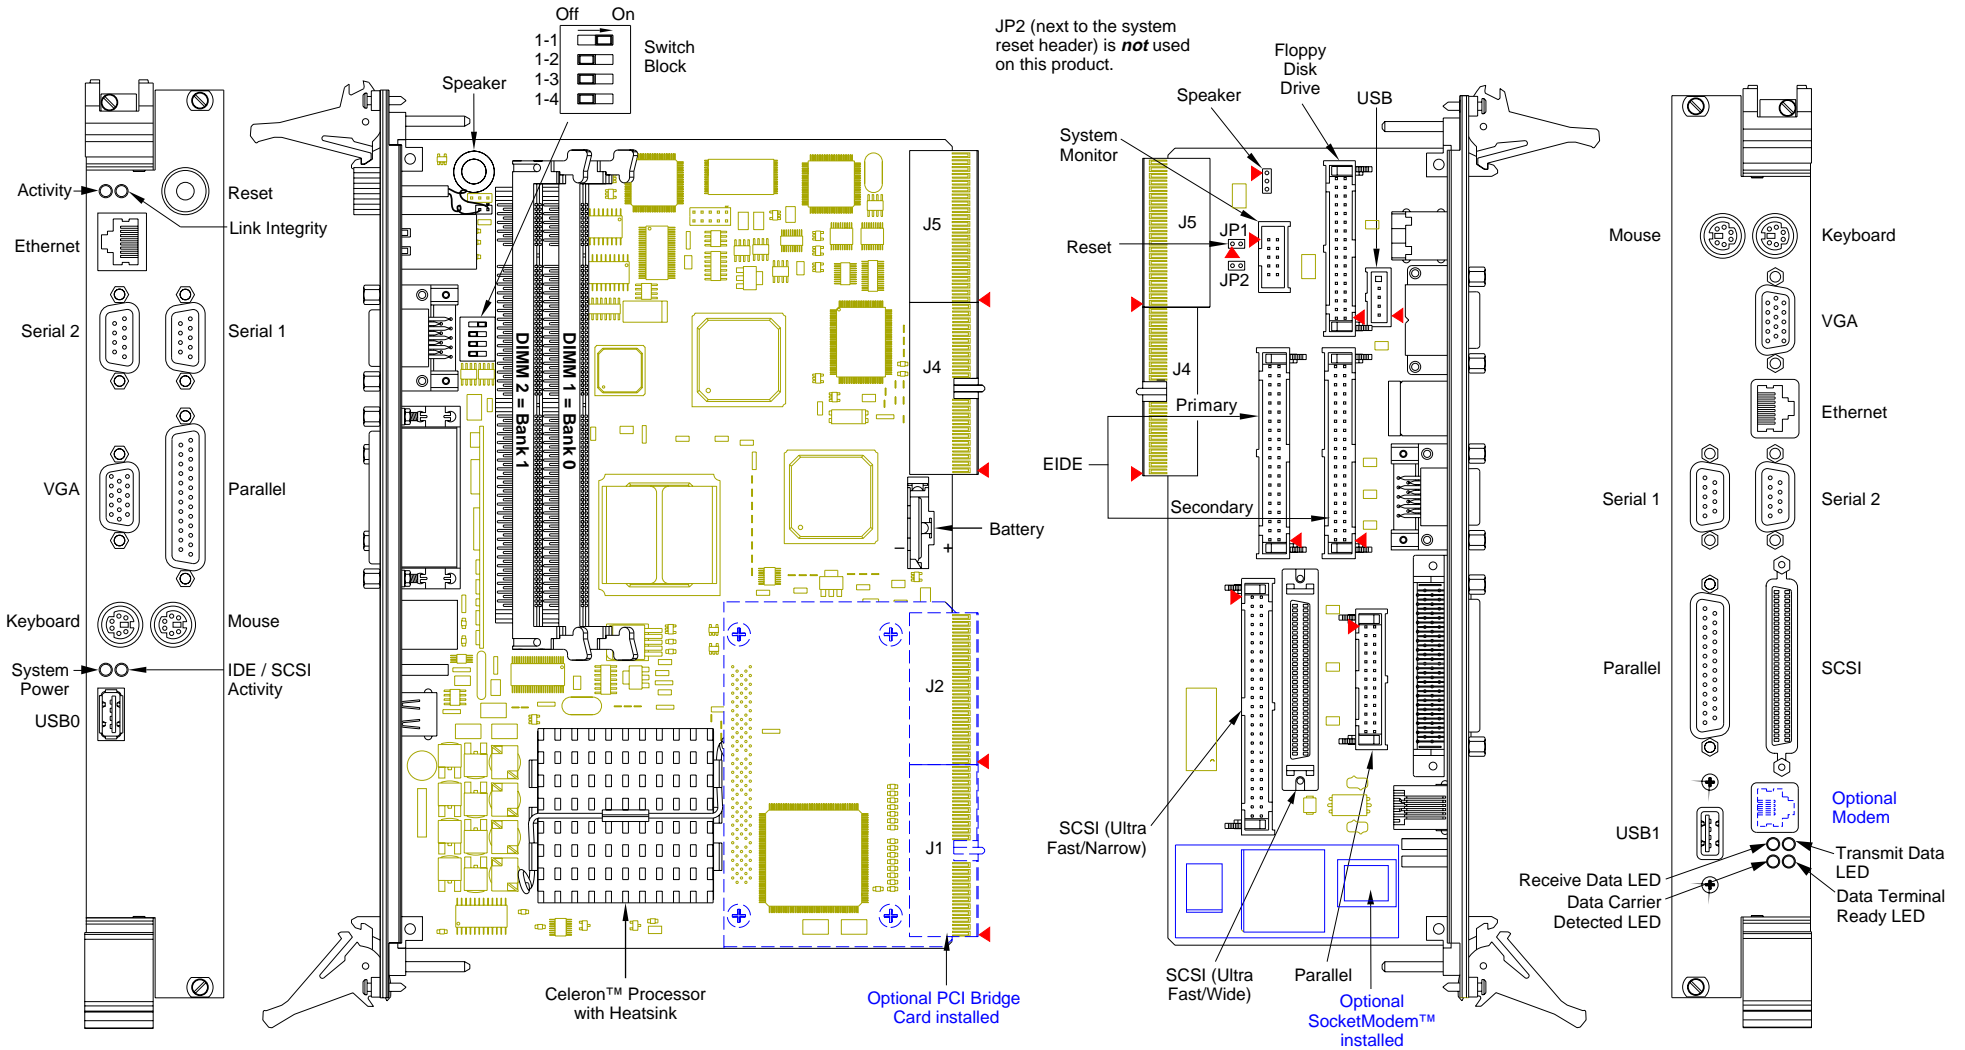

## EPC-3221 (C1000BX) System Controller Board

**Note:** For successful system controller board installation, the injector/ejector levers must be fully *open* during insertion. Carefully close the handles simultaneously *after* the module has begun to engage the connector body at the backplane.

## Optional C1XTN02 Rear Transition I/O Module

**Note:** When installing the rear transition I/O module, place more force on the upper handle during connector engagement.



This illustration shows all optional on-board peripherals installed.

## Technical and Product Support

### Accessing the Web Site

In-depth printable service manuals and other documentation are available for download from the RadiSys Web site:

<http://www.radisys.com>

Then click on **Support** to access a link to the manuals, addenda, drivers and BIOS. The documentation for current and discontinued products is available at this Web site in Adobe® Acrobat® PDF format. Documentation may be viewed and printed using the free Acrobat® Reader™ software.

### Calling Technical Support

RadiSys Corporation provides technical support Monday–Friday, 7:00 a.m.–6:00 p.m. Central Time in the continental USA and 8:30 a.m.–5:00 p.m. in Europe.

To expedite your request, have the RadiSys product model and serial number available. Then call one of the following numbers:

- Inside the continental USA, dial 1-800-438-4769.
- Outside the continental USA, dial 1-713-541-8200 (add long distance/international codes).
- In Europe, dial +31-36-5365595

### Inspection of Contents / Packaging of Product

The packaging for this product has been tested to assure that it will withstand responsible handling by the carrier.

**Caution:** Inspect contents immediately and file a claim with the carrier for any damage. Save the shipping box and packaging material to use for any further shipment of this equipment.

However, if the packaging is damaged and is not suitable for shipment, call RadiSys Technical Support to obtain new packaging. The warranty may be void if the product is returned using unapproved or damaged original packaging.

### Returning Your Product

The Returned Material Authorization (RMA) number and the serial number of each returned product must be written on the outside of the package and on any enclosed correspondence.

**Note:** The factory will refuse the shipment if it is sent freight collect or if it does not display an RMA number.

## Quick Start

To begin operating your EPC-3221 and optional C1XTN02 Transition I/O Module, perform the following:

1. Ensure that all switch settings match your requirements.
2. Install the system controller board (SCB) and the transition I/O module onto a passive backplane within a chassis.
3. Attach all necessary peripheral devices to the appropriate headers and connectors on the SCB and transition I/O module (if present).
4. Power-on the system.
5. Run the Setup Utility if you need to change any settings to match your requirements.

**Note:** See the table “Setup Utility” for factory default settings.



- To avoid damage or injury, always exercise the following precautions when handling the equipment:
- Use a grounding wrist strap or other static-dissipating device
  - Power-off the system
  - Disconnect all power cords

Switch Settings		
SW1-1	Not Used	
SW1-2	On-Board ROM Access	
	Open/Off	Crisis Recovery Mode disabled (default)
	Closed/On	Crisis Recovery Mode enabled
SW1-3	CMOS RAM	
	Open/Off	Normal operation (default)
	Closed/On	Factory default values are loaded
SW1-4	Configuration Ports	
	Open/Off	Map ports to I/O address 270 – 273 (default)
	Closed/On	Map ports to I/O address 370 – 373
Setup Utility		
<b>Note:</b> This table lists all optional on-board peripherals installed.		
The alternating white and shaded areas in the tables below represent individual screens in the Setup Utility.		
Setup Item	Default Setting	
System Time	Current (Hours, Minutes, Seconds)	
System Date	Current (Month, Day, Year)	
Legacy Diskette A	1.44/1.25 MB 3½"	
Legacy Diskette B	Disabled	
IDE Adapter Type	Auto (all 4 possible drives)	
Memory Cache	Enabled	
Cache System BIOS Area	Write Protect	
Cache Video BIOS Area	Write Protect	
Cache Base 0–512K	Write Back	
Cache Base 512K–640K	Write Back	
Cache Extended Memory Area	Write Back	
Cache A000 – EFFF	Disabled (all regions)	
Boot Summary Screen	Enabled	
Floppy Check	Disabled	
Quiet Boot Screen	Enabled	
POST Errors	Enabled	
Hard Disk Pre-Delay	3 sec.	
Keyboard Numlock	Auto	
Key Click	Disabled	
Keyboard Auto-Repeat Rate	30/sec	
Keyboard Auto-Repeat Delay	1/2 sec	
Serial Port A	Enabled; 3F8/IRQ4	
Serial Port B	Enabled; 2F8/IRQ3	
Parallel Port	Enabled; Bi-Directional, 378, IRQ7	
Floppy Disk Base I/O Address	Enabled; Primary	
Local Bus IDE Adapter	Both	

Setup Utility, continued	
Setup Item	Default Setting
ECC Config	EC
Watchdog Timer Status	Disabled
Watchdog Timer Delay	1.2 sec
Thermal Duty Cycle	37.5%
PCI IRQ Line 1 – 4	Auto Select (all IRQ lines)
ENUM#IRQ	Disabled
USB IRQ Enable	Yes
Latency Timer	Auto
Cache Line Size	Auto
PCI/PNP ISA UMB Region Exclusion	Available (all regions)
PCI/PNP ISA IRQ Resource Exclusion	Available (all IRQs)
Embedded AGP VGA	Enabled
Ethernet	Disabled
Ethernet Port	Front Panel
Adaptec Ultra-2 SCSI Adapter	Disabled
PS/2 Mouse	Auto Detect
On-board Speaker	Enabled
CPU BIOS Update	Enabled
Plug & Play O/S	No
Secured Setup Configuration	Yes
Reset Configuration Data	No
Large Disk Access Mode	DOS
Password on Boot	Disabled
Fixed Disk Boot Sector	Normal
Diskette Access	Supervisor
Virus Check Reminder	Disabled
System Backup Reminder	Disabled
Power Savings	Disabled
Standby Timeout	Off
Auto Suspend Timeout	Off
Hard Disk Timeout	Disabled
Power Savings	Disabled
Standby Timeout	Off
Auto Suspend Timeout	Off
Hard Disk Timeout	Disabled
Video Timeout	Disabled
Resume on Modem Ring	Off
Resume on Time	Off
Resume Time	00:00:00 (24-hour format)
Console Redirect Port	Disabled
Console Redirect Baud Rate	9600



## Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

### SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

### *InstraView*<sup>SM</sup> REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at [www.instraview.com](http://www.instraview.com) ↗

### WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. [www.artisanng.com/WeBuyEquipment](http://www.artisanng.com/WeBuyEquipment) ↗

### LOOKING FOR MORE INFORMATION?

Visit us on the web at [www.artisanng.com](http://www.artisanng.com) ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

**Contact us:** (888) 88-SOURCE | [sales@artisanng.com](mailto:sales@artisanng.com) | [www.artisanng.com](http://www.artisanng.com)