



## Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

### SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

### *InstraView*<sup>SM</sup> REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at [www.instraview.com](http://www.instraview.com) ↗

### WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. [www.artisanng.com/WeBuyEquipment](http://www.artisanng.com/WeBuyEquipment) ↗

### LOOKING FOR MORE INFORMATION?

Visit us on the web at [www.artisanng.com](http://www.artisanng.com) ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

**Contact us:** (888) 88-SOURCE | [sales@artisanng.com](mailto:sales@artisanng.com) | [www.artisanng.com](http://www.artisanng.com)

## 4.2"

SP500 Parameter List

Parameter Number and Name	Range	Step Size	Default
F-00 Control Source Select	0, 1, 2, 3	N/A	0
F-01 Accel Time (Seconds)	0.5 - 90.0	0.10	5.0
F-02 Decel Time (Seconds)	0.5 - 90.0	0.10	5.0
F-03 Minimum Speed (Hz)	0.5 - 30.0	0.10/0.25	5.0
F-04 Maximum Speed (Hz)	30.0 - 240.0	0.10/0.25	60.0
F-05 Current Limit (%)	10 - 150	1.0	150
F-06 Manual Torque Boost (%)	2 - 10	1.0	2
F-07 V/Hz Base Speed (Hz)	3 - 240	1.0	60
F-08 RPM at Base Speed	10 - 9999	1.0	1750
F-09 Configurable Output Relay Select	0, 1, 2	N/A	0
F-10 Carrier Frequency (kHz)	4, 6, 8	N/A	4
F-11 Remote Reference Gain (%)	60 - 100	0.10	100
F-12 Remote Reference Offset (%)	0 - 40	0.10	0
F-13 Percent Selected Speed Ref Display Enable	On, Off	N/A	Off
F-14 Electronic Thermal Overload (%)	20 -100	1.0	100
F-15 Electronic Thermal Overload Enable	On, Off	N/A	On



SP500 Parameter List

Parameter Number and Name	Range	Step Size	Default
F-00 Control Source Select	0, 1, 2, 3	N/A	0
F-01 Accel Time (Seconds)	0.5 - 90.0	0.10	5.0
F-02 Decel Time (Seconds)	0.5 - 90.0	0.10	5.0
F-03 Minimum Speed (Hz)	0.5 - 30.0	0.10/0.25	5.0
F-04 Maximum Speed (Hz)	30.0 - 240.0	0.10/0.25	60.0
F-05 Current Limit (%)	10 - 150	1.0	150
F-06 Manual Torque Boost (%)	2 - 10	1.0	2
F-07 V/Hz Base Speed (Hz)	3 - 240	1.0	60
F-08 RPM at Base Speed	10 - 9999	1.0	1750
F-09 Configurable Output Relay Select	0, 1, 2	N/A	0
F-10 Carrier Frequency (kHz)	4, 6, 8	N/A	4
F-11 Remote Reference Gain (%)	60 - 100	0.10	100
F-12 Remote Reference Offset (%)	0 - 40	0.10	0
F-13 Percent Selected Speed Ref Display Enable	On, Off	N/A	Off
F-14 Electronic Thermal Overload (%)	20 -100	1.0	100
F-15 Electronic Thermal Overload Enable	On, Off	N/A	On



SP500 Parameter List

Parameter Number and Name	Range	Step Size	Default
F-00 Control Source Select	0, 1, 2, 3	N/A	0
F-01 Accel Time (Seconds)	0.5 - 90.0	0.10	5.0
F-02 Decel Time (Seconds)	0.5 - 90.0	0.10	5.0
F-03 Minimum Speed (Hz)	0.5 - 30.0	0.10/0.25	5.0
F-04 Maximum Speed (Hz)	30.0 - 240.0	0.10/0.25	60.0
F-05 Current Limit (%)	10 - 150	1.0	150
F-06 Manual Torque Boost (%)	2 - 10	1.0	2
F-07 V/Hz Base Speed (Hz)	3 - 240	1.0	60
F-08 RPM at Base Speed	10 - 9999	1.0	1750
F-09 Configurable Output Relay Select	0, 1, 2	N/A	0
F-10 Carrier Frequency (kHz)	4, 6, 8	N/A	4
F-11 Remote Reference Gain (%)	60 - 100	0.10	100
F-12 Remote Reference Offset (%)	0 - 40	0.10	0
F-13 Percent Selected Speed Ref Display Enable	On, Off	N/A	Off
F-14 Electronic Thermal Overload (%)	20 -100	1.0	100
F-15 Electronic Thermal Overload Enable	On, Off	N/A	On



SP500 Parameter List

Parameter Number and Name	Range	Step Size	Default
F-00 Control Source Select	0, 1, 2, 3	N/A	0
F-01 Accel Time (Seconds)	0.5 - 90.0	0.10	5.0
F-02 Decel Time (Seconds)	0.5 - 90.0	0.10	5.0
F-03 Minimum Speed (Hz)	0.5 - 30.0	0.10/0.25	5.0
F-04 Maximum Speed (Hz)	30.0 - 240.0	0.10/0.25	60.0
F-05 Current Limit (%)	10 - 150	1.0	150
F-06 Manual Torque Boost (%)	2 - 10	1.0	2
F-07 V/Hz Base Speed (Hz)	3 - 240	1.0	60
F-08 RPM at Base Speed	10 - 9999	1.0	1750
F-09 Configurable Output Relay Select	0, 1, 2	N/A	0
F-10 Carrier Frequency (kHz)	4, 6, 8	N/A	4
F-11 Remote Reference Gain (%)	60 - 100	0.10	100
F-12 Remote Reference Offset (%)	0 - 40	0.10	0
F-13 Percent Selected Speed Ref Display Enable	On, Off	N/A	Off
F-14 Electronic Thermal Overload (%)	20 -100	1.0	100
F-15 Electronic Thermal Overload Enable	On, Off	N/A	On



3"

## 4.2"

3"

Parameter Number and Name	Range	Step Size	Default	
F-16	Coast Stop Enable	On, Off	N/A	On
F-17	Reverse Disable	On, Off	N/A	Off
F-18	RPM Setpoint Enable	On, Off	N/A	Off
F-19	Power-Up Start Enable	On, Off	N/A	Off
F-20	Password Lockout Enable	On, Off	N/A	Off
F-21	Avoidance Frequency (Hz)	Min - Max	0.10	5
F-22	Avoidance Bandwidth (Hz)	0.0 - 30.0	0.10	0
F-23	Multi-Speed Preset 1 (Hz)	Min - Max	0.10	20
F-24	Multi-Speed Preset 2 (Hz)	Min - Max	0.10	20
F-25	Multi-Speed Preset 3 (Hz)	Min - Max	0.10	20
F-26	Auto-Restart Number of Attempts	0 (None)-10	N/A	0
F-27	Auto-Restart Retry Wait Time (seconds)	1 - 30	1.0	1
F-28	Drive Voltage Selection - Do not change.	This parameter is factory set.		
F-29	Analog Output Select	SPd, LOAd, UOL, rEF	N/A	SPd
F-49	Version Information	x.xx	N/A	Read Only

D-173-1

Parameter Number and Name	Range	Step Size	Default	
F-16	Coast Stop Enable	On, Off	N/A	On
F-17	Reverse Disable	On, Off	N/A	Off
F-18	RPM Setpoint Enable	On, Off	N/A	Off
F-19	Power-Up Start Enable	On, Off	N/A	Off
F-20	Password Lockout Enable	On, Off	N/A	Off
F-21	Avoidance Frequency (Hz)	Min - Max	0.10	5
F-22	Avoidance Bandwidth (Hz)	0.0 - 30.0	0.10	0
F-23	Multi-Speed Preset 1 (Hz)	Min - Max	0.10	20
F-24	Multi-Speed Preset 2 (Hz)	Min - Max	0.10	20
F-25	Multi-Speed Preset 3 (Hz)	Min - Max	0.10	20
F-26	Auto-Restart Number of Attempts	0 (None)-10	N/A	0
F-27	Auto-Restart Retry Wait Time (seconds)	1 - 30	1.0	1
F-28	Drive Voltage Selection - Do not change.	This parameter is factory set.		
F-29	Analog Output Select	SPd, LOAd, UOL, rEF	N/A	SPd
F-49	Version Information	x.xx	N/A	Read Only

D-173-1

Parameter Number and Name	Range	Step Size	Default	
F-16	Coast Stop Enable	On, Off	N/A	On
F-17	Reverse Disable	On, Off	N/A	Off
F-18	RPM Setpoint Enable	On, Off	N/A	Off
F-19	Power-Up Start Enable	On, Off	N/A	Off
F-20	Password Lockout Enable	On, Off	N/A	Off
F-21	Avoidance Frequency (Hz)	Min - Max	0.10	5
F-22	Avoidance Bandwidth (Hz)	0.0 - 30.0	0.10	0
F-23	Multi-Speed Preset 1 (Hz)	Min - Max	0.10	20
F-24	Multi-Speed Preset 2 (Hz)	Min - Max	0.10	20
F-25	Multi-Speed Preset 3 (Hz)	Min - Max	0.10	20
F-26	Auto-Restart Number of Attempts	0 (None)-10	N/A	0
F-27	Auto-Restart Retry Wait Time (seconds)	1 - 30	1.0	1
F-28	Drive Voltage Selection - Do not change.	This parameter is factory set.		
F-29	Analog Output Select	SPd, LOAd, UOL, rEF	N/A	SPd
F-49	Version Information	x.xx	N/A	Read Only

D-173-1

Parameter Number and Name	Range	Step Size	Default	
F-16	Coast Stop Enable	On, Off	N/A	On
F-17	Reverse Disable	On, Off	N/A	Off
F-18	RPM Setpoint Enable	On, Off	N/A	Off
F-19	Power-Up Start Enable	On, Off	N/A	Off
F-20	Password Lockout Enable	On, Off	N/A	Off
F-21	Avoidance Frequency (Hz)	Min - Max	0.10	5
F-22	Avoidance Bandwidth (Hz)	0.0 - 30.0	0.10	0
F-23	Multi-Speed Preset 1 (Hz)	Min - Max	0.10	20
F-24	Multi-Speed Preset 2 (Hz)	Min - Max	0.10	20
F-25	Multi-Speed Preset 3 (Hz)	Min - Max	0.10	20
F-26	Auto-Restart Number of Attempts	0 (None)-10	N/A	0
F-27	Auto-Restart Retry Wait Time (seconds)	1 - 30	1.0	1
F-28	Drive Voltage Selection - Do not change.	This parameter is factory set.		
F-29	Analog Output Select	SPd, LOAd, UOL, rEF	N/A	SPd
F-49	Version Information	x.xx	N/A	Read Only

D-173-1



## Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

### SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

### *InstraView*<sup>SM</sup> REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at [www.instraview.com](http://www.instraview.com) ↗

### WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. [www.artisanng.com/WeBuyEquipment](http://www.artisanng.com/WeBuyEquipment) ↗

### LOOKING FOR MORE INFORMATION?

Visit us on the web at [www.artisanng.com](http://www.artisanng.com) ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

**Contact us:** (888) 88-SOURCE | [sales@artisanng.com](mailto:sales@artisanng.com) | [www.artisanng.com](http://www.artisanng.com)