

Limited Availability
Used and in Excellent Condition

**Open Web Page** 

https://www.artisantg.com/59224-9

All trademarks, brandnames, and brands appearing herein are the property of their respective owners.

- Critical and expedited services
- In stock / Ready-to-ship

- · We buy your excess, underutilized, and idle equipment
- · Full-service, independent repair center

ARTISAN'
TECHNOLOGY CROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group

(217) 352-9330 | sales@artisantg.com | artisantg.com

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

# Supplement to MVME133/MVME133A-20 MPU VMEmodule User's Manual (MVME133/D2)

This supplement provides changes in support of the MVME133S VMEmodule family. The MVME133 series modules have been replaced by the MVME133S series modules, as follows:

- The MVME133 is replaced by the MVME133S.
- The MVME133-1 is replaced by the MVME133S-001.
- The MVME133A is replaced by the MVME133SA-020.

All information in the manual applies to the MVME133S series modules, except that where any information in the manual applies specifically to a particular module, it now applies to the equivalent new module as listed above. References to the Z8530 serial communications controller apply to the Z85C30, which replaces it.

This supplement replaces a previous supplement, MVME133/D2A1. The attached pages are replacements or additions for the corresponding pages in the manual. Place this page behind the title page of the manual as a record of this change. Please remove and replace pages according to the following table:

| Replace Old | With New |
|-------------|----------|
| 1-1/1-2     | 1-1/1-2  |
| 1-7/1-8     | 1-7/1-8  |
| 2-3/2-4     | 2-3/2-4  |
| 2-5/2-6     | 2-5/2-6  |

- A vertical bar () in the margin of a revised page indicates a text change or addition.
- The supplement number is shown at the bottom of each revised page.

#### NOTICE

While reasonable efforts have been made to assure the accuracy of this document, Motorola, Inc. assumes no liability resulting from any omissions in this document, or from the use of the information obtained therein. Motorola reserves the right to revise this document and to make changes from time to time in the content hereof without obligation of Motorola to notify any person of such revision or changes.

No part of this material may be reproduced or copied in any tangible medium, or stored in a retrieval system, or transmitted in any form, or by any means, radio, electronic, mechanical, photocopying, recording or facsimile, or otherwise, without the prior written permission of Motorola, Inc.

#### RESTRICTED RIGHTS LEGEND

If the documentation contained herein is supplied, directly or indirectly, to the U.S. Government, the following notice shall apply unless otherwise agreed to in writing by Motorola, Inc.

Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013.

Motorola, Inc. Computer Group 2900 South Diablo Way Tempe, Arizona 85282

# CHAPTER 1 GENERAL INFORMATION

#### Introduction

This manual provides general information, preparation for use and installation instructions, operating instructions, and functional description for the MVME133S, MVME133S-001, and MVME133SA-020 MPU VMEmodules.

The module is referred to as the MVME133 throughout this manual except in cases where individual references are required.

#### **Model Designations**

The MVME133 is available in three versions, as listed in Table 1-1.

 Model Number
 Description

 MVME133S
 12.5 MHz MC68020 with 12.5 MHz MC68881

 MVME133S-001
 16.67 MHz MC68020 with 16.67 MHz MC68881

 MVME133SA-020
 20 MHz MC68020 with 20 MHz MC68881

**Table 1-1.** Model Designations

#### **Features**

The features of the MVME133 include:

- Double-high/single-wide VME board
- Address 24/Data 32 (A24/D32) VMEbus master (A24/D16 compatible) (MVME133S, MVME133S-001)
- Address 32/Data 32 (A32/D32) VMEbus master (A32/D16, A24/D32, A24/D16 compatible) (MVME133SA-020)
- MC68020 Microprocessor with 32-bit address and data
- 1MB of shared local dynamic RAM, 32 bits wide, accessible from VMEbus

MVME133/D2A2 1-1

- Four 28-pin JEDEC sockets for ROMs/PROMs/EPROMs/EEPROMs (in two banks, each 16 bits wide) (total 256KB maximum)
- Three 8-bit programmable timers for tick and watchdog functions
- Time-of-day clock/calendar (real-time clock) (MM58274A)
- Front panel asynchronous DB25 serial debug RS-232C port (on MC68901 MFP)
- Dual multiprotocol (synchronous/asynchronous) serial ports (Z85C30):
  - RS-485/RS-422A (port A)
  - RS-232C (port B)
- VMEbus system controller functions with level 3 arbiter
- Single level bus requester (level is jumper selectable)
- VMEbus interrupter
- VMEbus interrupt handler for all seven levels
- Front panel RUN, HALT, and FAIL status LEDs
- Front panel RESET and ABORT switches
- Remote reset through edge connector P2
- Five-position software-readable header, part of Module Status Register (MSR).

#### **Specifications**

The MVME133 specifications are provided in Table 1-1.

#### **Related Documentation**

The following publications may provide additional helpful information. If not shipped with this product, they may be purchased by contacting your local Motorola sales office.

| Document Title  | Motorola Publication<br>Number |
|---|--------------------------------|
| MVME133S Support Information (refer to the Support Information section in this chapter) | SIMVME133S/Dx                  |
| MVME133 Debugging Package User's Manual   | MVME133BUG/Dx                  |

| Document Title  | Motorola Publication<br>Number |
|---|--------------------------------|
| MVME133A Debugging Package User's Manual              | MVME133ABUG/Dx                 |
| MC68020, MC68EC020 Microprocessors User's Manual      | M68020UM/AD                    |
| MC68881/2 Floating-Point Coprocessor User's<br>Manual | MC68881UM/AD                   |
| MC68901 Multi-Function Peripheral Data Sheet          | MC68901/D                      |

**NOTE:** Although not shown in the above list, each Motorola Computer Group manual publication number is suffixed with characters that represent the revision level of the document, such as /D2 (the second revision of a manual); a supplement bears the same number as the manual but has a suffix such as /D2A1 (the first supplement to the manual).

The following publications are available from the sources indicated.

VMEbus Specification information is contained in:

Title: Versatile Backplane Bus: VMEbus

ANSI/IEEE Std 1014-1987

Source: The Institute of Electrical and Electronics Engineers, Inc.

345 East 47th Street

New York, New York 10017

Z85C30 Serial Communications Controller information is contained in:

Title: SCC User's Guide

Source: Zilog, Inc.

210 East Hacienda Avenue Campbell, CA 95008-6600

MM58274 Real-Time Clock information is contained in:

Title: Data Sheet and Application Note 365 Source: National Semiconductor Corporation

2900 Semiconductor Drive Santa Clara, CA 95051

## **Support Information**

The MVME133S Intelligent Communications Controller Support Information Manual, part number SIMVME133S, contains the connector interconnect signal information, parts list, and

MVME133/D2A2 1-7

schematics for the MVME133S/MVME133S-001/MVME133SA-020. Refer to the Related Documentation table in this chapter for ordering information.

## **Manual Terminology**

Throughout this manual, a convention has been maintained whereby data and address parameters are preceded by a character which specifies the numeric format as follows:

| \$ | dollar    | specifies a hexadecimal number |
|----|-----------|--------------------------------|
| %  | percent   | specifies a binary number      |
| &  | ampersand | specifies a decimal number     |

Unless otherwise specified, all address references are in hexadecimal throughout this manual.

An asterisk (\*) following the signal name for signals which are level significant denotes that the signal is true or valid when the signal is low.

An asterisk (\*) following the signal name for signals which are edge significant denotes that the actions initiated by that signal occur on high to low transition.

In this manual, *assertion* and *negation* are used to specify forcing a signal to a particular state. In particular, *assertion* and *assert* refer to a signal that is active or true; *negation* and *negate* indicate a signal that is inactive or false. These terms are used independently of the voltage level (high or low) that they represent.

1-8 MVME133/D2A2

**Table 2-1.** Factory Installed Jumper Configuration (cont'd)

| Header  |     | Jumper<br>Configuration  | Function  |
|---|-----|--|---|
| Serial port B configuration select                        | J13 | 1-2, 4-5, 7-8, 10-11,<br>13-14, 16-17, 19-20,<br>22-23, 25-26, 28-29,<br>31-32 | Port B as DCE (to terminal)   |
| Software-readable<br>header for module status<br>register | J15 | 1-2, 3-4, 5-6, 7-8,<br>9-10  | Module Status Register (MSR)<br>bits 0 through 4 all =0   |
| Serial ports RTXC <i>x</i> source select                  | J16 | 1-3, 2-4   | RTXCA and RTXCB inputs from onboard 1.23 MHz signal   |
| VMEbus data width select                                  | J17 | 1-2  | VMEbus is 32-bit data when [A24] is low, 16-bit data when [A24] is high                                       |
| VMEbus addresssize select                                 | J18 | 2-3  | VMEbus contains both 24-bit and 32-bit address devices; onboard DRAM responds only to 24-bit address accesses |
| Cache disable   |     | E1 and E2 not<br>connected<br>(MVME133A-20)                                    | MC68020 on-chip cache memory not disabled   |

**NOTE**: J14 is the front-panel RS-232C connector.

MVME133/D2A2 2-3


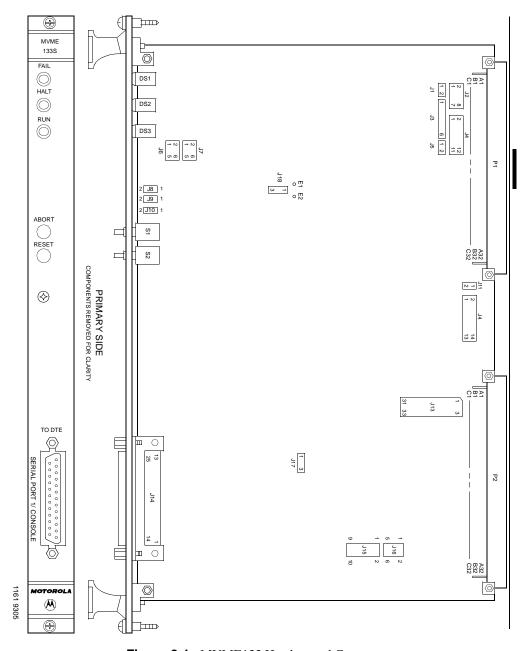


Figure 2-1. MVME133 Headers and Connectors


2-4 MVME133/D2A2

#### System Controller Enable Header (J1)

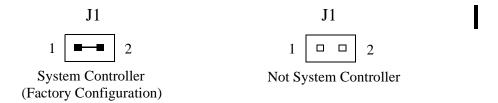


#### **Onboard RAM Offset Select Header (J2)**

J2 controls the offset address of the RAM as seen by the VMEbus. The RAM is shared. To the onboard logic (e.g., a monitor), the RAM address is fixed at \$00000000-\$000FFFFF. Refer to the memory map information in Chapter 3 and the shared RAM information in Chapter 4 for more details.

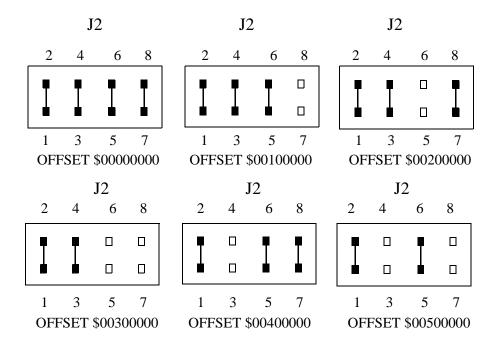

MVME133/D2A2 2-5

#### HARDWARE PREPARATION AND INSTALLATION

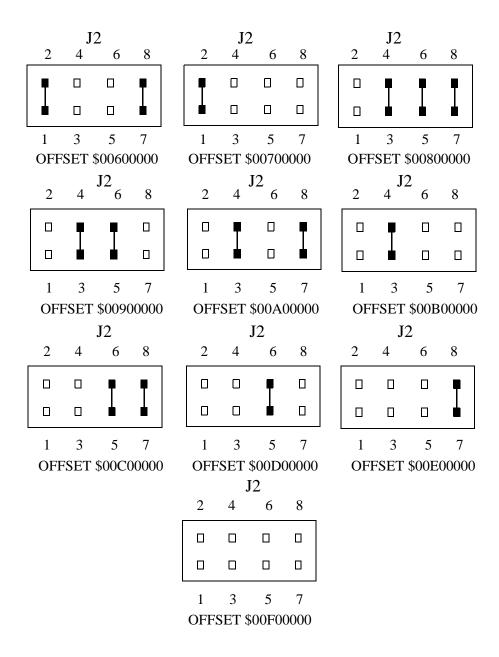

# Artisan Technology Group is an independent supplier of quality pre-owned equipment

#### **Gold-standard solutions**

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

# We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

#### Learn more!

Visit us at artisantg.com for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today? (217) 352-9330 | sales@artisantg.com | artisantg.com

