

Racal 1260-88A

Single 1x8 Optical Switch Module



In Stock

Used and in Excellent Condition

Open Web Page

<https://www.artisanng.com/64910-5>

All trademarks, brandnames, and brands appearing herein are the property of their respective owners.



Your **definitive** source
for quality pre-owned
equipment.

Artisan Technology Group

(217) 352-9330 | sales@artisanng.com | artisanng.com

- Critical and expedited services
- In stock / Ready-to-ship

- We buy your excess, underutilized, and idle equipment
- Full-service, independent repair center

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

1260 VXI SWITCHING CARD

Model 1260-88 VXI OPTICAL SWITCH

PUBLICATION NO. 980673-058

RACAL INSTRUMENTS

Racal Instruments, Inc.

4 Goodyear St., Irvine, CA 92618-2002
Tel: (800) RACAL-ATE, (800) 722-2528,
(949) 859-8999; FAX: (949) 859-7139

Racal Instruments, Ltd.

480 Bath Road, Slough, Berkshire, SL1 6BE, United Kingdom
Tel: +44 (0) 1628 604455; FAX: +44 (0) 1628 662017

Racal Systems Electronique S.A.

18 Avenue Dutartre, 78150 LeChesnay, France
Tel: +33 (1) 3923 2222; FAX: +33 (1) 3923 2225

Racal Systems Elettronica s.r.l.

Strada 2-Palazzo C4, 20090 Milanofiori Assago, Milan, Italy
Tel: +39 (0)2 5750 1796; FAX +39 (0)2 5750 1828

Racal Elektronik System GmbH.

Technologiepark Bergisch Gladbach, Friedrich-Ebert-Strasse,
D-51429 Bergisch Gladbach, Germany
Tel.: +49 2204 8442 00; FAX: +49 2204 8442 19

Racal Australia Pty. Ltd.

3 Powells Road, Brookvale, NSW 2100, Australia
Tel: +612 9936 7000, FAX: +612 9936 7036

Racal Electronics Pte. Ltd.

26 Ayer Rajah Crescent, 04-06/07 Ayer Rajah Industrial Estate,
Singapore 0513.
Tel: +65 7792200, FAX: +65 7785400

Racal Instruments, Ltd.

Unit 5, 25F., Mega Trade Center, No 1, Mei Wan Road, Tsuen
Wan, Hong Kong, PRC
Tel: +852 2405 5500, FAX: +852 2416 4335

<http://www.racalinstruments.com>

The RACAL logo consists of the word "RACAL" in a bold, italicized, sans-serif font. The letters are black with a white outline, giving it a three-dimensional appearance. The logo is positioned in the bottom right corner of the page, above a horizontal line.

PUBLICATION DATE: June 15, 2000

Copyright 1999 by Racal Instruments, Inc. Printed in the United States of America. All rights reserved.
This book or parts thereof may not be reproduced in any form without written permission of the publisher.

WARRANTY STATEMENT

All Racal Instruments, Inc. products are designed and manufactured to exacting standards and in full conformance to Racal's ISO 9001 procedures.

For the specific terms of your standard warranty, or optional extended warranty or service agreement, contact your Racal customer service advisor. Please have the following information available to facilitate service.

1. Product serial number
2. Product model number
3. Your company and contact information

You may contact your customer service advisor by:

E-Mail:	Helpdesk@racalstruments.com		
Telephone:	+1 800 722 3262		(USA)
	+44(0) 8706 080134		(UK)
	+852 2405 5500	(Hong Kong)	
Fax:	+1 949 859 7309		(USA)
	+44(0) 1628 662017		(UK)
	+852 2416 4335	(Hong Kong)	

RETURN of PRODUCT

Authorization is required from Racal Instruments before you send us your product for service or calibration. Call your nearest Racal Instruments support facility. A list is located on the last page of this manual. If you are unsure where to call, contact Racal Instruments, Inc. Customer Support Department in Irvine, California, USA at 1-800-722-3262 or 1-949-859-8999 or via fax at 1-949-859-7139. We can be reached at: helpdesk@racalstruments.com.

PROPRIETARY NOTICE

This document and the technical data herein disclosed, are proprietary to Racal Instruments, and shall not, without express written permission of Racal Instruments, be used, in whole or in part to solicit quotations from a competitive source or used for manufacture by anyone other than Racal Instruments. The information herein has been developed at private expense, and may only be used for operation and maintenance reference purposes or for purposes of engineering evaluation and incorporation into technical specifications and other documents which specify procurement of products from Racal Instruments.

FOR YOUR SAFETY

Before undertaking any troubleshooting, maintenance or exploratory procedure, read carefully the **WARNINGS** and **CAUTION** notices.

This equipment contains voltage hazardous to human life and safety, and is capable of inflicting personal injury.

If this instrument is to be powered from the AC line (mains) through an autotransformer, ensure the common connector is connected to the neutral (earth pole) of the power supply.

Before operating the unit, ensure the conductor (green wire) is connected to the ground (earth) conductor of the power outlet. Do not use a two-conductor extension cord or a three-prong/two-prong adapter. This will defeat the protective feature of the third conductor in the power cord.

Maintenance and calibration procedures sometimes call for operation of the unit with power applied and protective covers removed. Read the procedures and heed warnings to avoid "live" circuit points.

Before operating this instrument:

1. Ensure the instrument is configured to operate on the voltage at the power source. See Installation Section.
2. Ensure the proper fuse is in place for the power source to operate.
3. Ensure all other devices connected to or in proximity to this instrument are properly grounded or connected to the protective third-wire earth ground.

If the instrument:

- fails to operate satisfactorily
- shows visible damage
- has been stored under unfavorable conditions
- has sustained stress

Do not operate until performance is checked by qualified personnel.

Optical Ports



WARNING: To avoid eye damage, do not look directly into the optical output ports while there is an optical signal connected to the input port. Always attach the output ports to a receiver or cover with the supplied dust caps before enabling the source signal to the input port.

This page was left intentionally blank.

Table of Contents

Chapter 1

MODULE SPECIFICATION	1-1
Introduction	1-1
Specifications ¹	1-2
Ordering Information	1-3
Safety.....	1-4
Product Support	1-4
About MTBF	1-4

Chapter 2

INSTALLATION INSTRUCTIONS	2-1
Unpacking and Inspection	2-1
Reshipment Instructions.....	2-1
Option 01T Installation	2-2
Module Installation	2-2
Module Configuration	2-2
Front Panel Connectors	2-4
Fail LED	2-4
Switch Status LED	2-4
Mating Connectors.....	2-7
Optical Ports	2-7

Chapter 3

MODULE OPERATION	3-1
General Information	3-1
Operating The 1260-88 In Message-Based Mode.....	3-2
Channel Descriptors For The 1260-88 Module	3-2
Implicit Exclusion List.....	3-4
Reply To The MOD:LIST? Command	3-4
Using The *OPC Query / Command	3-4
Operating The 1260-88 in Register-Based Mode	3-6
Switch Data Write Register	3-7

Switch Data Status Read Register	3-8
Optical Switch Strobe Write Register.....	3-8
Optical Switch Status Read Register	3-8
1260-88 Example Code.....	3-9
Power and Module Cooling Considerations.....	3-14
Airflow Requirements	3-14
Chapter 4	
DRAWINGS	4-1
Chapter 5	
PARTS LIST	5-1
Chapter 6	
PRODUCT SUPPORT	6-1
Product Support.....	6-1
Reshipment Instructions	6-1
Support Offices	6-2
Appendix A	
CHANNEL To CONTROL BIT MAPPING	A-1
Appendix B	
1260-88 ADDRESS MAP	B-1
Appendix C	
MAINTENANCE of FIBEROPTIC CABLES and CONNECTORS	C-1
Appendix D	
PERFORMANCE VERIFICATION.....	D-1

List of Figures

Figure 1-1, The 1260-88 1-2

Figure 2-1, 1260-88A Block Diagram 2-2

Figure 2-2, 1260-88B Block Diagram 2-3

Figure 2-3, 1260-88A Front Panel Pin Connections, Front View 2-5

Figure 2-4, 1260-88B Front Panel Pin Connections, Front View 2-6

Figure 3-1, Message-Based Mode of Operation 3-1

Figure 3-2, Register-Based Mode of Operation 3-1

Figure 3-3, 1260-88 Optical Switch and Racal Instruments
1261B Chassis Airflow Resistance Curves 3-16

This page was left intentionally blank.

Chapter 1

MODULE SPECIFICATION

Introduction

The 1260-88 is a VXI Optical Switch Module developed for the Racal 1260 Series of switch modules.

The 1260-88 is available configured from the factory and can be ordered with the Option-01T Message Based Interface.

The following features are included in the 1260-88

- Single or Dual 1X8 Optical Switching.
- Message Based Interface Option available.
- New Data Driven Model embedded firmware.
- Up to two independent optical switches. Each with a common optical port that connects to 1 of 8 channels or can be disconnected (other configurations are available as specials).
- Single Mode, 9/125 μm optical fiber with a wavelength range of 1290-1570 nm standard. Optional fiber types and wavelengths are available as specials.
- FC/SPC connectors are standard (other connectors or fiber pigtails are available as specials).
- Dust Caps are supplied with all front panel Fiberoptic adapters.



Figure 1-1, The 1260-88

Specifications¹

Optical Fiber Type	9/125μm
Wavelength Range	1290-1570 nm
Insertion Loss ²	<1.2dB max, 0.6dB typ. <2.0dB max., including connectors
Back Reflection ²	<-55dB max, 60dB typ.
Polarization Dependent Loss ³	.05dB max.
Repeatability ⁴	+/- .03dB max., +/- .01dB typ.
Isolation	80dB max, 90dB typ.
Switching Time	325msec. +16msec. per channel
Shock	30g, 11msec, ½ sine wave
Vibration	0.013" PK-PK, 5-55Hz
Bench Handling	4in, 45°

Temperature	Operating	0 to +50 degrees Centigrade	
	Non-operating	-20 to +70 degrees Centigrade	
Relative Humidity		90 RH Non-Condensing; at $\leq 40^{\circ}\text{C}$ for 5 days.	
Power requirements		5 VDC at 1.4 Amps W/Option 01T 5 VDC at 0.4 Amp WO/Option 01T 12 VDC at 0.25 Amps (1260-88A) 12 VDC at .50 Amps (1260-88B)	
Cooling Requirements		1.0 liter/sec @ .12 mmH ₂ O (1260-88-1)	
Dimensions	Single-wide	C-Size, VXIbus Module (1260-88-1)	
Module Weight		<u>1260-88A-1</u>	<u>1260-88B-1</u>
	w/OPT 01T	3.8lbs (1.72kg)	5.0lbs (2.27kg)
	w/o OPT 01T	3.5lbs (1.59kg)	4.7lbs (2.13kg)
MTBF		100,000 Hours minimum	

- NOTES:**
- 1. All Specifications are referenced without connectors and measured at $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$.**
 - 2. Connector Insertion Loss typically less than 0.25dB, 0.4dB maximum per connector. Back Reflection less than -45dB.**
 - 3. Connector PDL typically less than .02dB, measured at 1550 nm.**
 - 4. Sequential Repeatability, 100 cycles measured at constant temperature after 1 hour warm-up**

Ordering Information

Listed below are part numbers for both the 1260-88 switch modules and available accessories.

ITEM	DESCRIPTION	PART #
1260-88A-1 Switch Module	1260-88A-1, Single-wide 1X4 Optical Switch	407699-001
1260-88B-1 Switch Module	1260-88B-1, Single-wide Dual 1X4 Optical Switch	407699-002
Additional Manual	1260-88 User Manual	980673-058

Safety

Refer to the “**FOR YOUR SAFETY**” page preceding the Table of Contents. Follow all **NOTES**, **CAUTIONS**, and **WARNINGS** to ensure personnel safety and prevent damage to the instrument.

Product Support

Racal Instruments has a complete Service and Parts Department. If you need technical assistance or should it be necessary to return your product for servicing, call 1-800-722-3262 or 1-949-859-8999 and ask for Customer Support. You may also contact Customer Support via E-Mail at:

Helpdesk@racalate.com

If parts are required to repair the product at your facility, call 1-800-722-3262 or 1-949-859-8999 and ask for the Parts Department.

When sending your instrument in for repair, complete the form in the back of this manual and enclose it with the instrument.

About MTBF

The 1260-88 MTBF is >100,000 hours, calculated in accordance with MIL-HDBK-217E, Ground Benign Environment.

The optical switch used on the 1260-88 module is Racal part no. 602364-008. The switch manufacturer's specifications for this switch are:

Switch Durability $>10^7$ operations minimum.

Chapter 2

INSTALLATION INSTRUCTIONS

Unpacking and Inspection

1. Before unpacking the switching module, check the exterior of the shipping carton for any signs of damage. All irregularities should be noted on the shipping bill and reported.
2. Remove the instrument from its carton, preserving the factory packaging as much as possible.
3. Inspect the switching module for any defect or damage. Immediately notify the carrier if any damage is apparent.
4. Have a qualified person check the instrument for safety before use.



CAUTION

Always perform unpacking, disassembly, repair, and cleaning at a static safe work station.

Reshipment Instructions

1. Use the original packing material when returning the switching module to Racal Instruments for servicing. The original shipping carton and the instrument's plastic foam will provide the necessary support for safe reshipment.
2. If the original packing material is unavailable, wrap the switching module in an ESD Shielding bag and use plastic spray foam to surround and protect the instrument.
3. Reship in either the original or a new shipping carton.

Option 01T Installation

Installation of the Option 01T is described in the Installation and Setup section of the 1260A-Option 01T Users Manual, Publication No. 980806-999.



NOTE:

Only install a 1260A Option 01T controller with release 7.1 or later firmware. The 1260-88 is not compatible with the older 1260 Option 01 controller.

Module Installation

Installation of the 1260-88 Switching Module into a VXI mainframe, including the setting of switches SW1-1 through SW1-4, SW2, and SW3, is described in the Installation and Setup Section of the 1260A Option 01T Users Manual, Publication No. 980806-999.

Module Configuration

The 1260-88 is a VXI optical switch module consisting of up to two, 1X8 optical switches. Refer to **Figure 2-1** for a block diagram of the 1260-88A. The 1260-88 is available as a single 1X8, 1260-88A or as a dual 1X8, 1260-88B Refer to **Figure 2-2** for a block diagram of the 1260-88B.

This architecture permits the 1260-88B module to be organized via software as two independent 1X8 optical switches or as a synchronous duplex 1X8 switch by use of the **INCLUDE** command (Refer to the 1260-01T User Manual). In addition, the user can configure the module as a 1X15 optical switch by connecting the common port of one switch to one of the channels of the other switch.

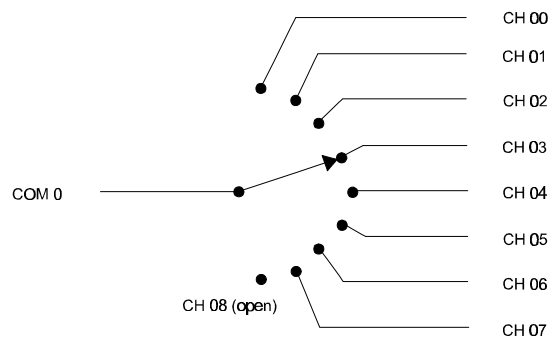


Figure 2-1, 1260-88A Block Diagram

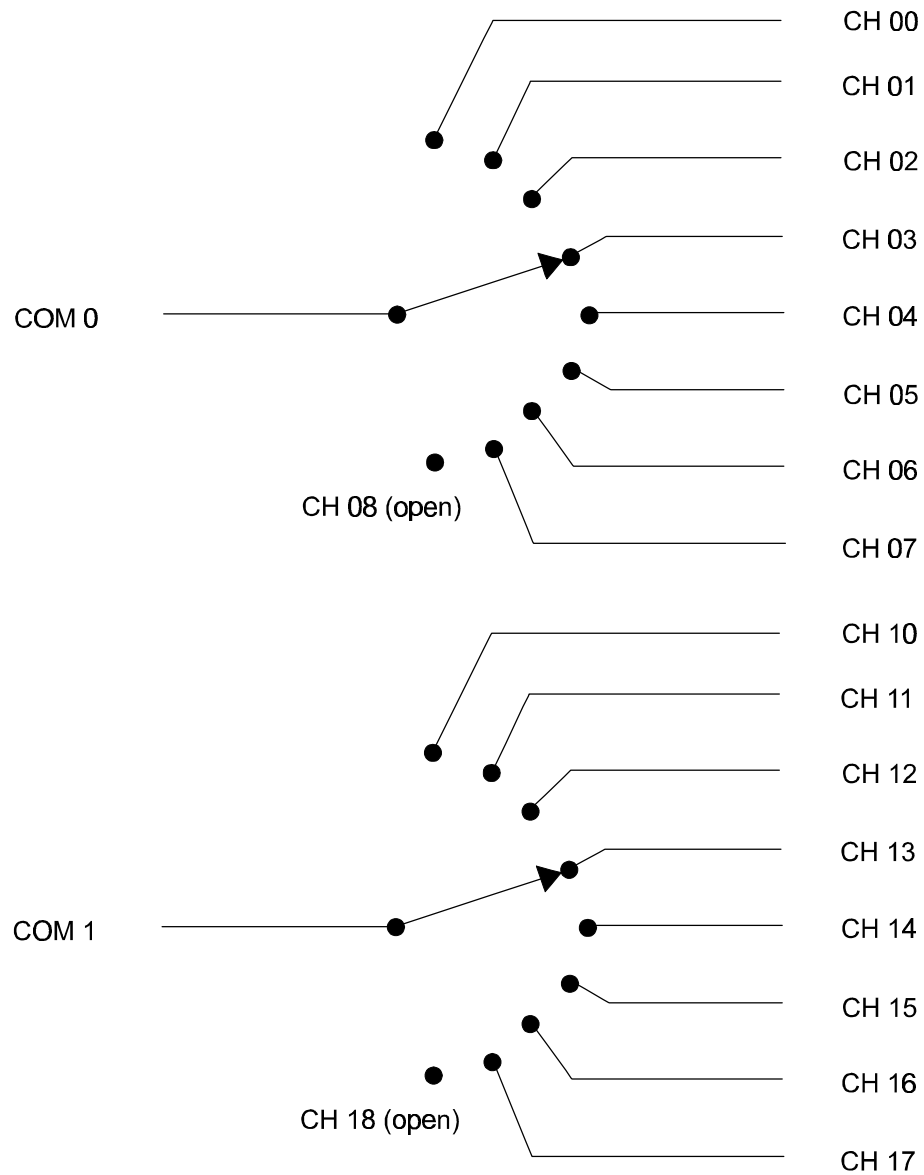


Figure 2-2, 1260-88B Block Diagram

Front Panel Connectors

The 1260-88 front panel connectors are labeled as shown in **Figure 2-3 and 2-4**. The connector type is a single mode FC connector adapter.

Fail LED

The Fail LED is available if the 1260 Option 01T Message Based Controller is installed. For further information refer to the 1260 Option 01T Users Manual, Publication No. 980806-999

Switch Status LED

The 1260-88 provides a switch status LED (S0 or S1) for each optical switch installed. The status LED provides an indication of the state of the optical switch as shown below:

OFF: The optical switch is in an idle state.

Green: The optical switch is busy, in the process of switching. At power up, the status LED will default to Green, indicating power applied to the optical switch. The Green LED will turn off after a BNO (Begin Normal Operation) has been issued to the 1260-88.

Red: An Error has occurred as a result of the last command. An Error can be caused by:

- a. The optical switch was commanded to a non-existent channel.
- b. An internal switch error has occurred as the result of a failed home position or a stepper motor failure.
- c. A Red LED at power-up indicates a possible disconnected control cable to the optical switch.

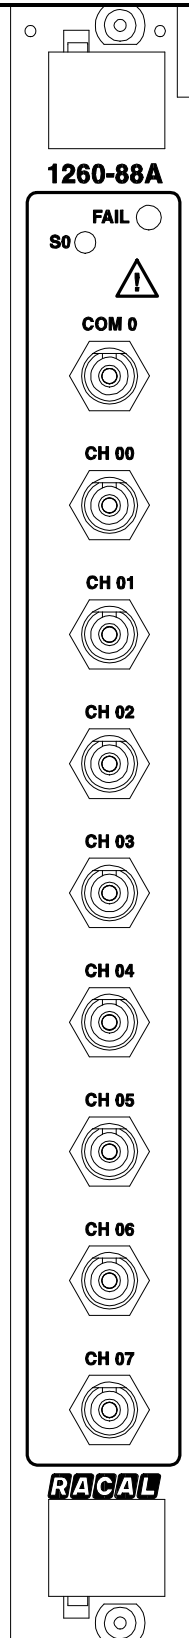


Figure 2-3 1260-88A Front Panel Pin Connections, Front View

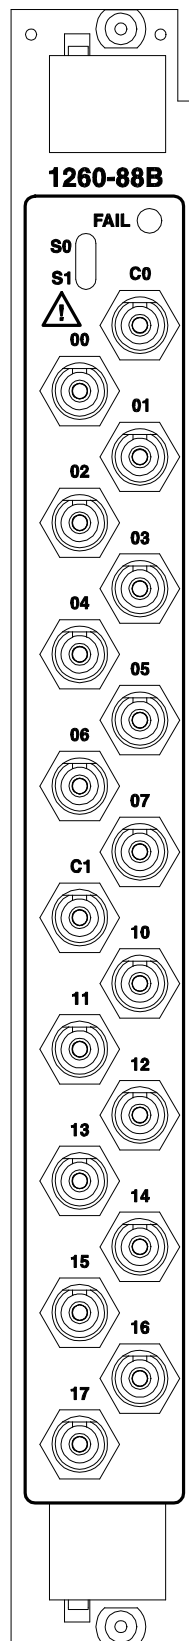


Figure 2-4 1260-88B Front Panel Pin Connections, Front View

Mating Connectors

Mating connectors for the 1260-88 module are standard FC types. It is preferable to use fiberoptic cables with low insertion loss, low reflection FC/UPC or FC/SPC connector types.

Refer to Appendix C for cleaning adapters, connectors, and handling of fiberoptic cables.

Optical Ports



WARNING: To avoid eye damage, do not look directly into the optical output ports while there is an optical signal connected to the input port. Always attach the output ports to a receiver or cover the ports with the supplied caps before enabling the source signal to the input port.

This page was left intentionally blank.

Chapter 3

MODULE OPERATION

General Information

The 1260-88 may be operated either in *message-based mode* or in *register-based mode*.

When the *message-based mode* of operation is used, commands are sent to the 1260-01T command module. The 1260-01T command module interprets the commands, and operates the 1260-88 module by sending 8-bit bytes to control registers on the 1260-88 module.

A conceptual view of the message-based mode of operation is shown in Figure 3-1 below.

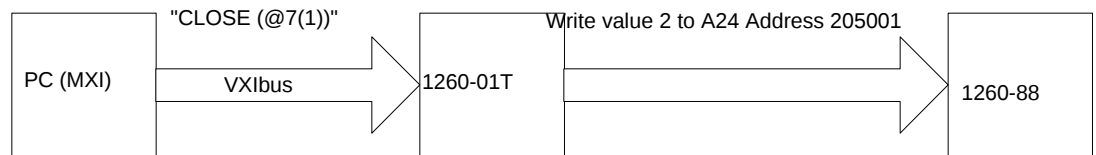


Figure 3-1, Message-Based Mode of Operation

When the *register-based mode* of operation is used, the user writes to the control registers on the 1260-88 module directly. The 1260-01T command module does not monitor the operations, and does not track the state of the optical switch on the module in this mode.

A conceptual view of the register-based mode of operation is shown in Figure 3-2 below.

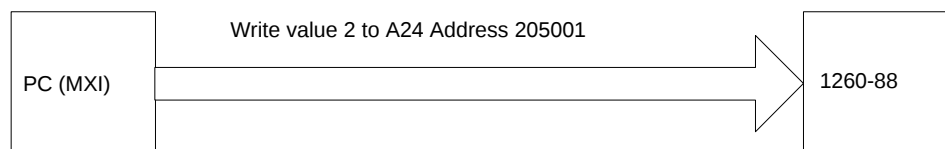


Figure 3-2, Register-Based Mode of Operation

Since the 1260-01T command module does not monitor the register-based mode of operation, it is advisable to select **either** the message-based or the register-based mode of operation, and continue to use the same mode throughout the application program.

In general, the message-based mode of operation is easier to use with utility programs, such as National Instruments VIC program. The message-based mode allows the user to send ASCII text commands to the 1260-01T and to read replies from the 1260-01T. In addition, there are a few features, such as a **SCAN** list and **OPC** commands, which are available only with the message-based mode of operation.

The register-based mode of operation provides a faster update of optical switches. This mode provides for switch operations in less than 4.5 microseconds (not counting software overhead inherent in I/O libraries such as VISA and optical switch switching time). Since the optical switch switching time is slow, the Message Based operation is preferable.

Consult the 1260-01T User's Manual for a comparison of the message-based and register-based modes of operation.

Operating The 1260-88 In Message-Based Mode

Channel Descriptors For The 1260-88 Module

The standard 1260-01T commands are used to operate the 1260-88 module. These commands are described in the 1260-01T User's Manual.

Each 1260-01T command uses a *channel descriptor* to select the channel(s) of interest. The syntax for a channel descriptor is the same for all 1260 series modules. In general, the following syntax is used to select a single channel:

(@ <module address> (<channel descriptor>))

Where:

<module address> is the address of the 1260-88 module, as set by the logical address DIP switch SW1 on the 1260-88.

The module address is a number from 1 through 12, inclusive.

Set the module addresses for the 1260-88 and other 1260-Series

modules so that no address is used by more than one 1260-Series module. For instructions on setting module addresses for a 1260-Series module, see the label on the side panel of the module.

<channel descriptor> is the 1260-88 channel to operate.

The <channel descriptor> is comprised of a switch designator 0 or 1 and a channel designator 0 – 8 where 8 designates all channels open. If a switch designator is not specified the default is switch 0.

Multiple individual channels may be specified using the following channel descriptor syntax:

```
(@ <module address> ( <chan1> , <chan2> , .  
  . . , <chanN> ) )
```

A range of channels may be specified using the following channel descriptor syntax:

```
(@ <module address> ( <first channel> :  
  <last channel> ) )
```

The following examples illustrate the use of the channel descriptors for the 1260-88:

OPEN (@8(00))	Open channel 0 of switch 0 on the 1260-88 with module address 8
---------------	---

CLOSE (@8(00,17))	Close channels 0 of switch 0 and 7 of switch1 on the 1260-88 with module address 8.
-------------------	---

CLOSE (@2(08,18))	Open all channels on both switches on the 1260-88 with module address 2
-------------------	---

Implicit Exclusion List

The firmware for the 1260-88 implements an “implicit exclusion list”. This means that for any given Switch, **no more than one channel can be connected to the common channel at one time**. Thus if the user specifies the command:

```
CLOSE (@12(0:7))
```

Then, after the command has been executed, the only channel that will be connected is channel “7” of switch 0. Channels 0,1,2,3,4,...6 will not have been closed, since the firmware enforces the “implicit exclusion list”

Reply To The MOD:LIST? Command

The 1260-01T returns a reply to the MOD:LIST? command. This reply is unique for each different 1260 series switch module. The syntax for the reply is:

```
<module address> : <module-specific identification string>
```

The <module-specific identification string> for the 1260-88 is:

```
1260-88A SINGLE 1X8 OPTICAL SWITCH MODULE
```

or

```
1260-88B DUAL 1X8 OPTICAL SWITCH MODULE
```

So, for a 1260-88A whose <module address> is set to 8, the reply to this query would be:

```
8 : 1260-88A SINGLE 1X8 OPTICAL SWITCH MODULE
```

Using The *OPC Query / Command

When you are using the 1260-88 in an automated test environment, it is important that you be aware of the time it [takes for the switch movement to complete](#). For example, suppose you develop an automated test in which the optical switch closure [is over](#) the VXI bus via the CLOSE command. After each switch configuration, you might then take a reading from an optical power meter. In such a sequence, it is important that you not initiate the reading from the optical power meter before the 1260-88 has come to a stable position (that is, the BUSY indicator is no longer illuminated).

Below is an example that illustrates the use of instrument commands and queries utilizing the *OPC? query. In this example, queries to other instruments (such as the power meter) are not

made until all of the 1260-88's pending operations have completed.

Example: A command is sent to the 1260-88 to make a connection to channel 07, the command is immediately followed by an *OPC? query to the same 1260-88.

1. Write to the 1260-88 VXI address:

`CLOSE(@8(07)); *OPC?`

2. Read from 1260-88 the VXI address:

1

Depending on the previous switch [setting of the 1260-88](#), several hundred milliseconds may be required before the `CLOSE(@8(07))` command is completed and the *OPC? produces a "1" in the 1260-01T output queue. After the *OPC? query is [sent to the 1260-88](#), the programmer should immediately attempt a read instruction from the controller. The programmer's controller will wait [until the 1260-88 finishes](#) all adjustments and the *OPC query provides a "1" to be read.

NOTE:

It is important that you remember to set the time-out of the controller's READ instruction to be greater than the longest time possible for the 1260-88 to make any channel changes (up to 500msecs may be required to make large changes to the optical switch.)

You can also have the OPC bit of the SESR set by using the command form of *OPC instead of the query form. By setting the OPC bit to "1" via an *OPC command, an event will be generated assuming the user has enabled the proper register bits.

- Advanced programmers can develop other methods to accomplish the set-and-wait-until-complete routine utilizing the event queues and status registers provided in the 1260-01T controller. Refer to the 1260 Option 01T Users Manual Publication No. 980806-999.

Operating The 1260-88 in Register-Based Mode

The 1260-88 may be operated by directly setting one of the three control registers on the 1260-88 module. The first control register on the module sets the channel for switch 0. The second control register sets the channel for switch 1. The third control register controls the channel update for both switches.

The control registers are located in the VXIbus A24 Address Space. The actual A24 address for a control register depends on:

1. The A24 Address Offset assigned to the 1260-01T module by the Resource Manager program. The Resource Manager program is provided by the VXIbus slot-0 controller vendor. The A24 Address Offset is placed into the "Offset Register" of the 1260-01T by the Resource Manager.
2. The <module address> of the 1260-88 module. This is set by the setting of the logical Address DIP switch SW1 on the 1260-88 to a value between 1 and 12 inclusive .
3. The control register on the 1260-88 to update. Each control register on the 1260-88 has a unique address.

The base A24 Address for the 1260-88 module may be calculated by:

$$(A24 \text{ Offset of the 1260-01T}) + (1024 \times \text{Module Address of 1260-88}).$$

The A24 Offset is usually expressed in hexadecimal. A typical value of 204000_{16} will be used in the examples which follow. So, a sample 1260-88 with a module address of 7 would have the base A24 Address computed as follows:

$$\text{Base A24 Address of 1260-88} = 204000_{16} + (400_{16} \times 7_{10}) = 205C00_{16}$$

The control registers for 1260 series modules are always on odd A24 addresses. The three control registers for the 1260-88 reside at the following three odd A24 addresses for the module:

$$(\text{Base A24 Address of 1260-88}) + 1 = \text{Switch Data Register 0}$$

$$(\text{Base A24 Address of 1260-88}) + 3 = \text{Switch Data Register 1}$$

$$(\text{Base A24 Address of 1260-88}) + F = \text{Switch Strobe/Status Register F}$$

So, for our example, the three control registers are located at:

205C01	Switch Data Register 0, controls Optical Switch 0
205C03	Switch Data Register 1, controls Optical Switch 1
205C0F	Switch Strobe/Status Register, controls both Optical Switches 0 & 1.

Switch Data Write Register

When a channel is closed, the two front-panel connectors associated with that channel are optically connected. When a channel is opened, the optical connection is broken and the two front panel connectors are optically isolated.

The Optical Switch is controlled in an eight-bit wide bank (since the firmware outputs an entire eight-bit byte at a time over the local bus to the channel module). The Switch is controlled via the firmware by the encoded data that is written to the corresponding Switch Data Register. Refer to the address map in Appendix B for specific addresses and data bits. Subsequent to writing to the Data Registers, firmware must toggle the switch strobe bit in order to store the data in the switch data registers into the switch. This will be explained in the following paragraphs.

The Switch Data Register data bits for Switch 0 channels are shown below and also in Appendix A.

Switch Data Register 0 Bits	Channel Descriptor	Connector Channel	Connector Channel
00 ₁₆ - 7f ₁₆	08	COM 0	No Connection
80 ₁₆	00	COM 0	00
81 ₁₆	01	COM 0	01
82 ₁₆	02	COM 0	02
83 ₁₆	03	COM 0	03
84 ₁₆	04	COM 0	04
85 ₁₆	05	COM 0	05
86 ₁₆	06	COM 0	06
87 ₁₆	07	COM 0	07

Switch Data Status Read Register

The 1260-88, via the Data Status Register provides a read back of the data that is stored in the corresponding Switch Data Register. This can be used as verification of the status of the switch data bits. Refer to the address map in Appendix B for specific addresses.

Optical Switch Strobe Write Register

As mentioned before, the data that resides in the Switch Data Register needs to be "Strobed" into the Optical Switch. The D0 and D1 bits in this register must be toggled. (set to a 1, set to a 0, set to a 1) in order to strobe the data from the data register into the optical switch. This happens after data is written to the switch data register. Refer to the address map in Appendix B for specific addresses and data bits.

Optical Switch Status Read Register

In addition to the status of the data bits, the 1260-88 provides a status of the optical switch as well as the status of the Strobe Register Strobe Bits. The optical switch provides a Busy/Ready-status bit as well as an Error bit that can be queried by the software. Refer to the address map in Appendix B for specific addresses and data bits.

Busy/Ready- Status

The Busy/Ready- Status bit will be a logic 1 when the optical switch is busy (during the switching time) and a logic 0 when the switch is ready (in a stable channel position) This bit will stay at a logic 1 until the switch is ready to receive a new position command. If the software commands the switch to move to it's existing position (no data change) this bit will go to a logic 1 for 60-80 msecs.

The register based application software will have to query this bit in order to synchronize the switch closure with the application software. The application software may require the Busy bit to be polled in order to determine when the optical switch is closed.

Error Status

The Error Status bit will be a logic 1 when a stepper motor or the reset (channel 8) proximity switch error occurs. An error status also occurs if the switch module is commanded to go to a position other than channels 0 through 8 (88₁₆ to FF₁₆.)

This bit should be read at the same time the Busy/Ready- Status bit is read. If an error occurs, the software can attempt to clear the

error by resetting the switch (to 00₁₆) followed by a second attempt to set the channel. If an error occurs again the application software should respond with an error message indicating a switch failure.

Strobe Status

The Strobe Status bit provides a read back of the present state of the Strobe bit in the Optical Switch Strobe Register.

1260-88 Example Code

The VISA I/O library may be used to control the module. The VISA function `viOut8()` is used to write a single 8-bit byte to a control register, while `viIn8()` is used to read a single 8-bit byte from the control register. The following code example shows the use of `viOut8()` to update the 1260-88 module.

The VISA library functions (`viIn8()` and `viOut8()`) account for the base A24 offset of the 1260-01T controller. Therefore, the application code below uses only the module address to calculate the offset of the two control registers and the status register.

The following example shows many places where “error handling code goes here”. This is intended for application-specific error handling code which depends on the application and the manner in which errors are handled. Therefore, the specifics of the error handling code are not shown in the example.

```
#include <visa.h>

/* This example shows a 1260-01T at logical address 16 and a VXI/MXI*
/* interface */
#define RI1260_01_DESC      "VXI::16"

/* For a GPIB-VXI interface, and a logical address of 77 */
/* the descriptor would be: "GPIB-VXI::77" */

/* this example shows a 1260-88B with module address 7 */
#define MOD_ADDR_88      7

/* bit patterns to control strobes and to read status */
#define STROBE0_MASK    0x01
#define STROBE1_MASK    0x02
#define BUSY0_MASK      0x10
#define ERR0_MASK        0x20
#define BUSY1_MASK      0x40
#define ERR1_MASK        0x80

void example_operate_1260_88(void)
{
    ViInt32 base_addr;
    ViBusAddress mux0_creg;
    ViBusAddress mux1_creg;
    ViBusAddress statctl_reg;
    ViSession hdl1260;    /* VISA handle to the 1260-01T */
    ViSession hdlRM;      /* VISA handle to the resource manager */
    ViStatus error;       /* VISA error code */
    ViUInt8 reg_val;      /* register value read back */
    ViUInt8 ctrl_val;     /* control register value */
    int is_busy;          /* flag for testing busy status */

    /* open the resource manager */
    /* this must be done once in application program */
    error = viOpenDefaultRM (&hdlRM);
    if (error < 0) {
        /* error handling code goes here */
    }

    /* get a handle for the 1260-01T */
    error = viOpen (hdlRM, RI1260_01_DESC, VI_NULL,VI_NULL,&hdl1260);
    if (error < 0) {
        /* error handling code goes here */
    }
}
```

Module Operation 3-10

```
/* form the offset for control register 0 */
/* note that the base A24 Address for the 1260-01T */
/* is already accounted for by VISA calls viIn8() and viOut8() */

    /* module address shifted 10 places = module address x 1024 */
    base_addr = (MOD_ADDR_88 << 10);
    mux0_creg = (ViBusAddress) (base_addr + 1);
    mux1_creg = (ViBusAddress) (base_addr + 3);
    statctl_reg = (ViBusAddress) (base_addr + 0xF);

/*
 * CLOSE CHANNEL 5 OF MUX 0
 */

/* first set up data register for MUX 0 to select channel 5 */
error = viOut8 (hdl1260, VI_A24_SPACE, mux0_creg, 0x85);
if (error < 0) {
    /* error handling code goes here */
}

/* now strobe MUX 0 (set bit high-low-high) */
ctrl_val = STROBE0_MASK | STROBE1_MASK;
error = viOut8 (hdl1260, VI_A24_SPACE, statctl_reg, ctrl_val);
if (error < 0) {
    /* error handling code goes here */
}

ctrl_val = STROBE1_MASK;
error = viOut8 (hdl1260, VI_A24_SPACE, statctl_reg, ctrl_val);
if (error < 0) {
    /* error handling code goes here */
}

ctrl_val = STROBE0_MASK | STROBE1_MASK;
error = viOut8 (hdl1260, VI_A24_SPACE, statctl_reg, ctrl_val);
if (error < 0) {
    /* error handling code goes here */
}

/* read the status register, wait until BUSY is low */
is_busy = 1;
while (is_busy) {

    /* read status register */
    error = viIn8( hdl1260, VI_A24_SPACE, statctl_reg,
```

```
        &reg_val);
if (error < 0) {
    /* error handling code goes here */
}

/* check for error */
if (reg_val & ERR0_MASK)
{
    /* error has occurred, reset MUX 0 */
    viOut8( hdl1260, VI_A24_SPACE, mux0_creg, 0x00 );
    ctrl_val = STROBE0_MASK | STROBE1_MASK;
    viOut8(hdl1260, VI_A24_SPACE, statctl_reg, ctrl_val);
    ctrl_val = STROBE1_MASK;
    viOut8(hdl1260, VI_A24_SPACE, statctl_reg, ctrl_val);
    ctrl_val = STROBE0_MASK | STROBE1_MASK;
    viOut8(hdl1260, VI_A24_SPACE, statctl_reg, ctrl_val);

    /* rest of error handling code goes here */
}

/* check if still busy (moving) */
if ( ! (reg_val & BUSY0_MASK) )
    is_busy = 0;

} /* end of while loop */

/*
 * CLOSE CHANNEL 7 of MUX 1
 */

/* first set up data register for MUX 1 to select channel 7 */
error = viOut8 (hdl1260, VI_A24_SPACE, mux1_creg, 0x87);
if (error < 0) {
    /* error handling code goes here */
}

/* now strobe MUX 1 (set bit high-low-high) */
ctrl_val = STROBE0_MASK | STROBE1_MASK;
error = viOut8 (hdl1260, VI_A24_SPACE, statctl_reg, ctrl_val);
if (error < 0) {
    /* error handling code goes here */
}

ctrl_val = STROBE0_MASK;
error = viOut8 (hdl1260, VI_A24_SPACE, statctl_reg, ctrl_val);
if (error < 0) {
    /* error handling code goes here */
}
```

Module Operation 3-12

```
}

ctrl_val = STROBE0_MASK | STROBE1_MASK;
error = viOut8( hdl1260, VI_A24_SPACE, statctl_reg, ctrl_val);
if (error < 0) {
    /* error handling code goes here */
}

/* read the status register, wait until BUSY is low */
is_busy = 1;
while (is_busy) {

    /* read status register */
    error = viIn8( hdl1260, VI_A24_SPACE, statctl_reg,
                  &reg_val);
    if (error < 0) {
        /* error handling code goes here */
    }

    /* check for error */
    if (reg_val & ERR1_MASK)
    {
        /* error has occurred, reset MUX 1 */
        viOut8( hdl1260, VI_A24_SPACE, mux1_creg, 0x00 );
        ctrl_val = STROBE0_MASK | STROBE1_MASK;
        viOut8(hdl1260, VI_A24_SPACE, statctl_reg, ctrl_val);
        ctrl_val = STROBE0_MASK;
        viOut8(hdl1260, VI_A24_SPACE, statctl_reg, ctrl_val);
        ctrl_val = STROBE0_MASK | STROBE1_MASK;
        viOut8(hdl1260, VI_A24_SPACE, statctl_reg, ctrl_val);

        /* rest of error handling code goes here */
    }

    /* check if still busy (moving) */
    if ( ! (reg_val & BUSY1_MASK) )
        is_busy = 0;
} /* end of while loop */

/* close the VISA session */
error = viClose( hdl1260 );
if (error < 0) {
    /* error handling code goes here */
}
}
```

Power and Module Cooling Considerations

The 1260-88 is a VXI module providing precise switching of optical channels using defraction limited collimating lenses which enhance both thermal stability and repeatability. Because of this, certain precautions should be applied when using the switch module in a VXI Chassis.

Airflow Requirements

VXI Modules are required to specify a particular airflow to maintain a specific temperature rise. The air flow required and the resultant back pressure (pressure drop across the module) values determine a specific operating point that is plotted or compared against a VXI chassis cooling curve. If the module operating point is below the chassis cooling curve, there is a high probability that the module will remain within its specified temperature rise. If the operating point lies above the chassis cooling curve the temperature rise may exceed the specified value.

The following procedure details how to calculate the cooling requirements for the 1260-88B-1.

1. Determine the maximum temperature rise allowed across the module. This is typically 10 °C, but could be higher or lower depending the chassis ambient temperature, and the overall reliability requirements of the module.
2. Determine the required airflow to maintain the specified temperature rise of the module. This is calculated from the module power, the desired temperature rise, and the specific heat of air. For a given temperature rise the required air flow is:

$$\text{Airflow(liters/sec)} = 0.83/\text{Temp Rise(}^{\circ}\text{C)} \times \text{Module Power (Watts)}$$

For a 10 °C rise and a 1260-88B-1 module power of 12 Watts:


$$\text{Airflow(liters/sec)} = 0.83/10 \text{ }^{\circ}\text{C} \times 12 \text{ Watts} = 1.0 \text{ liters /sec}$$

3. Determine the pressure drop across the module when the required airflow (liters/sec) is forced through the module. This can be determined by looking at pressure drop vs. airflow plot for the 1260-84B-1 Module in **Figure 3-4**. Find the required airflow and then read the corresponding pressure in mm H₂O. For the case above, with an airflow of 1.0 liters/sec the pressure drop read from **Figure 3-4** is 0.12 mm H₂O.

4. Plot the 1260-88B-1 operating point (Pressure, Airflow) against the chassis cooling curve. If the module operating point lies under the chassis curve, the module should remain within the specified temperature. An example of a 1260-88B-1 Module in a Racal 1261B VXI Chassis is shown in **Figure 3-4**. The chassis airflow plotted is for the “worst case” slot airflow. In the 1261B chassis, the 1260-88B-1 could be placed in any slot without much concern for the temperature rise of 10 °C being exceeded.

CAUTION

The required airflow may need to be increased depending on airflow distribution across the module, the ambient temperature and reliability issues. Consult the VXI specification for more details.

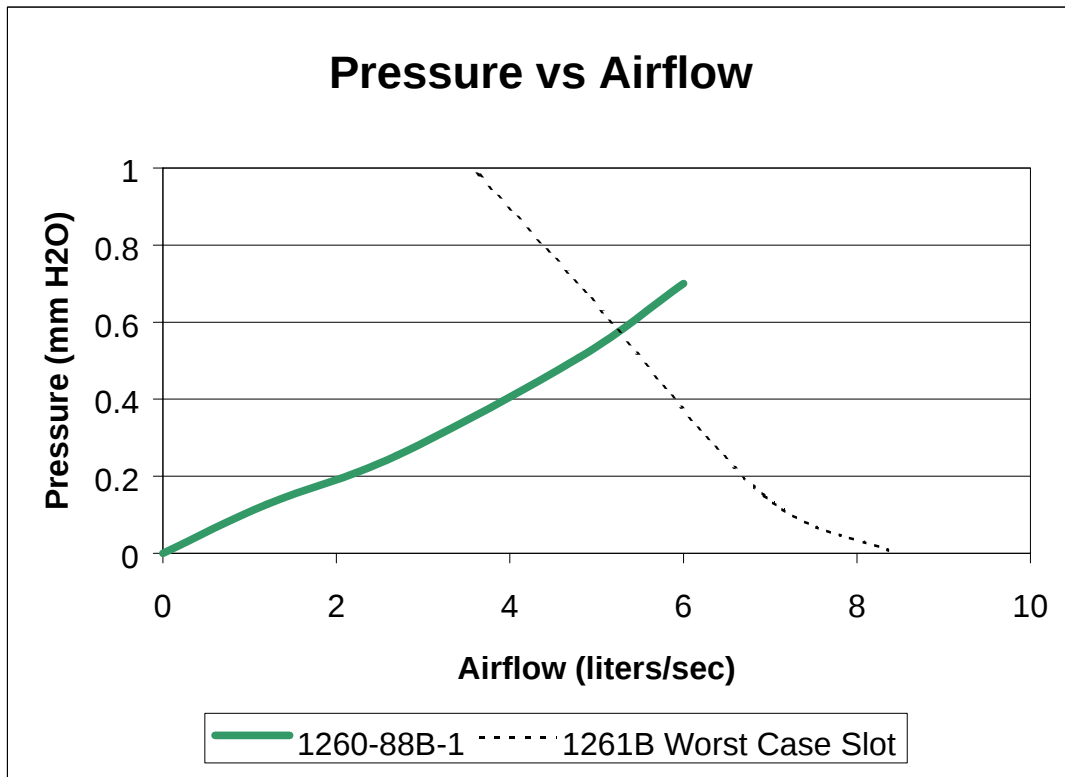

**Figure 3-4, 1260-88 Optical Switch and Racal Instruments
1261B Chassis Airflow Resistance Curves**


Chapter 4

DRAWINGS

407699-001	Final Assy, 1260-88A-1	4-3
407699-002	Final Assy, 1260-88B-1	4-5
405148	PCB Assy, L-BUS Jumper.....	4-7
435148	Schematic, L-BUS Jumper	4-8
405154	PCB Assy, 1260-84/88.....	4-9
435154	Schematic, 1260-84/88	4-10
407691	Cable Assy, Interface	4-21


This page was left intentionally blank.



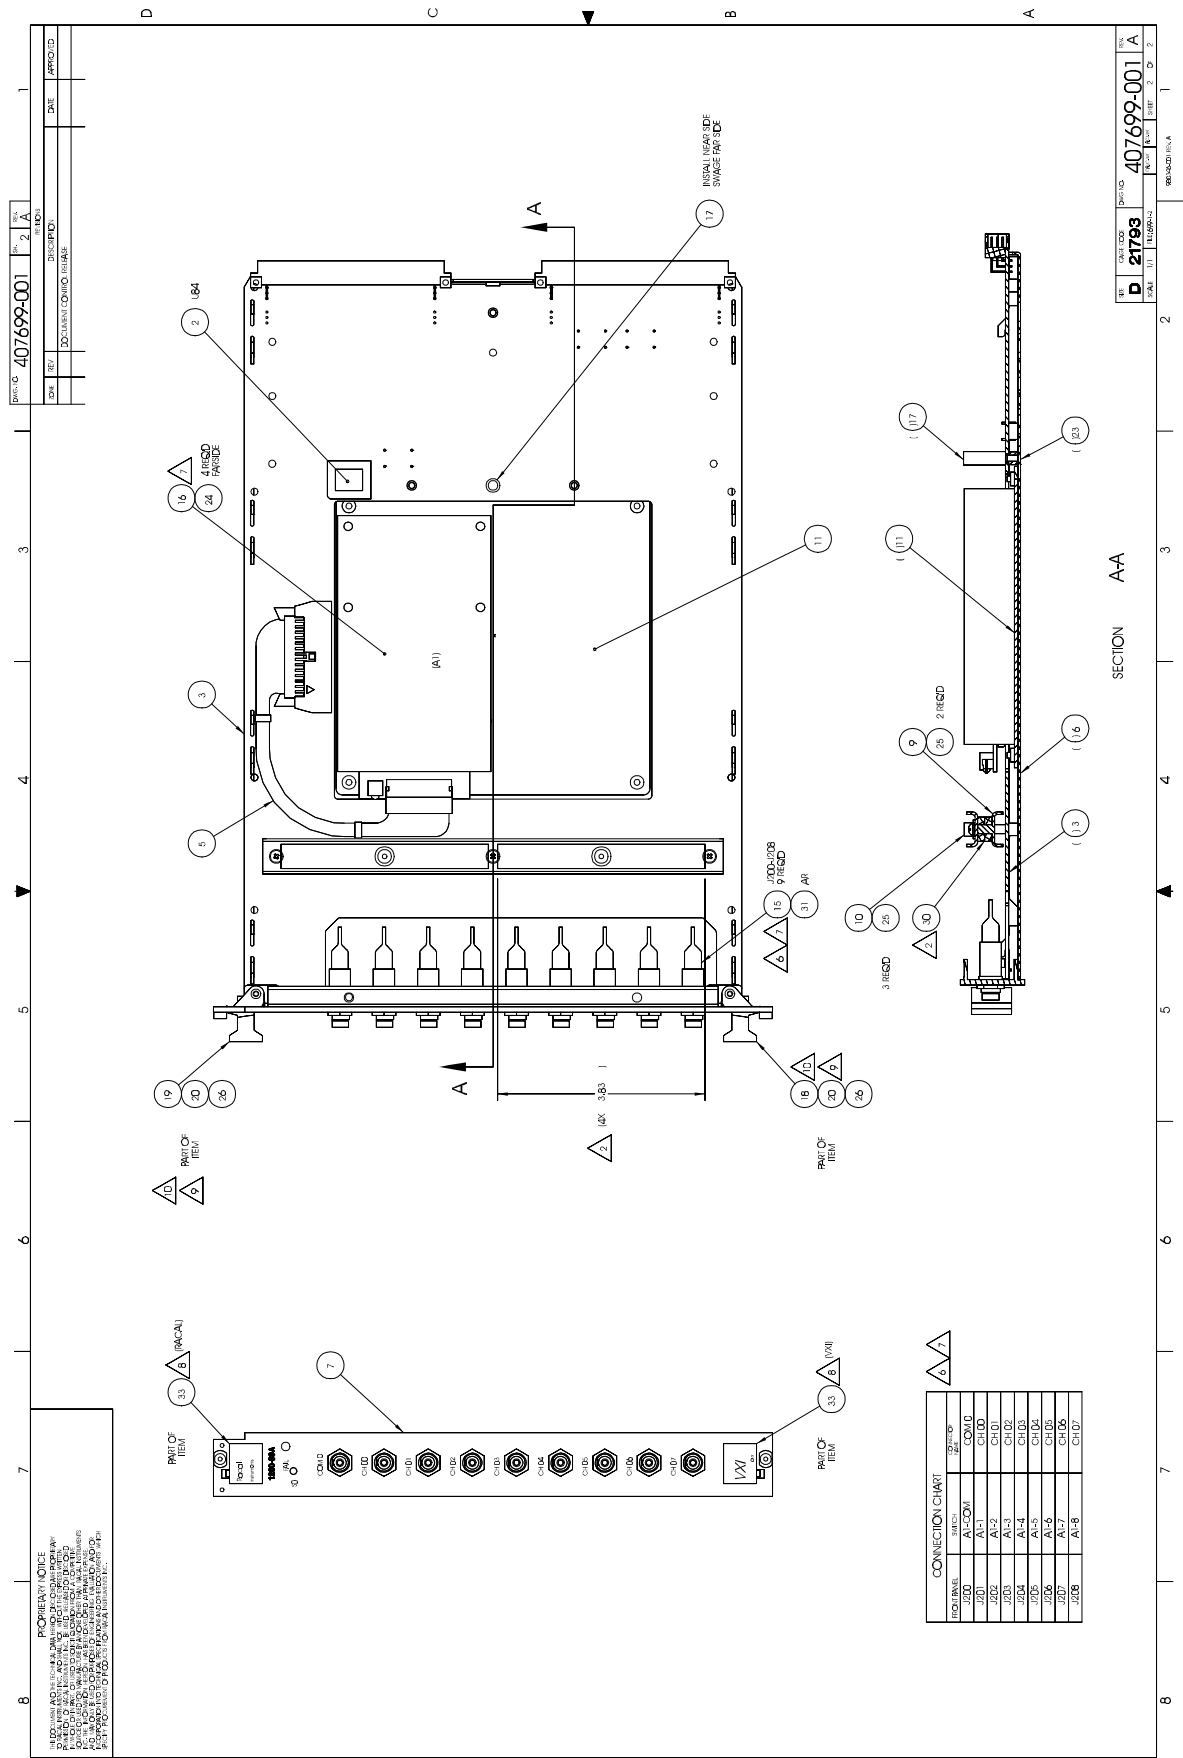

Drawings 4-4




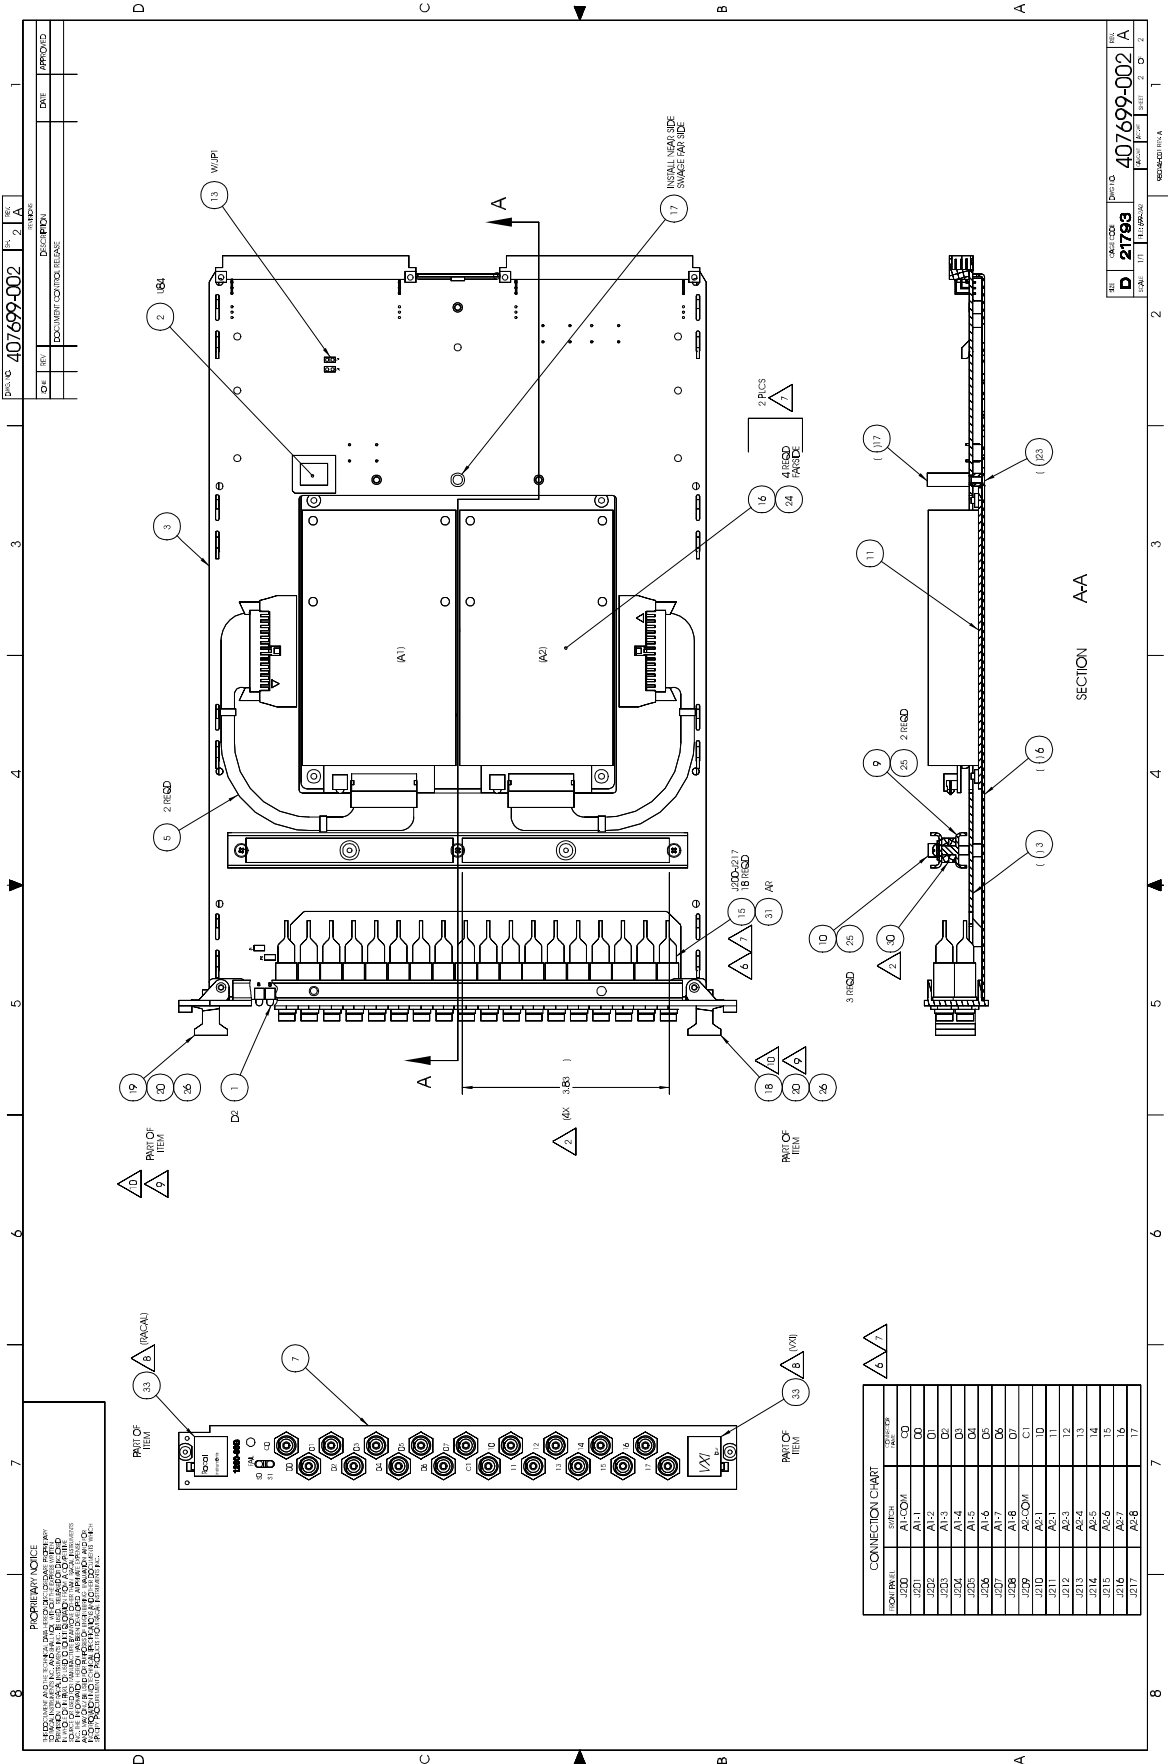

Drawings 4-6

[illegible]



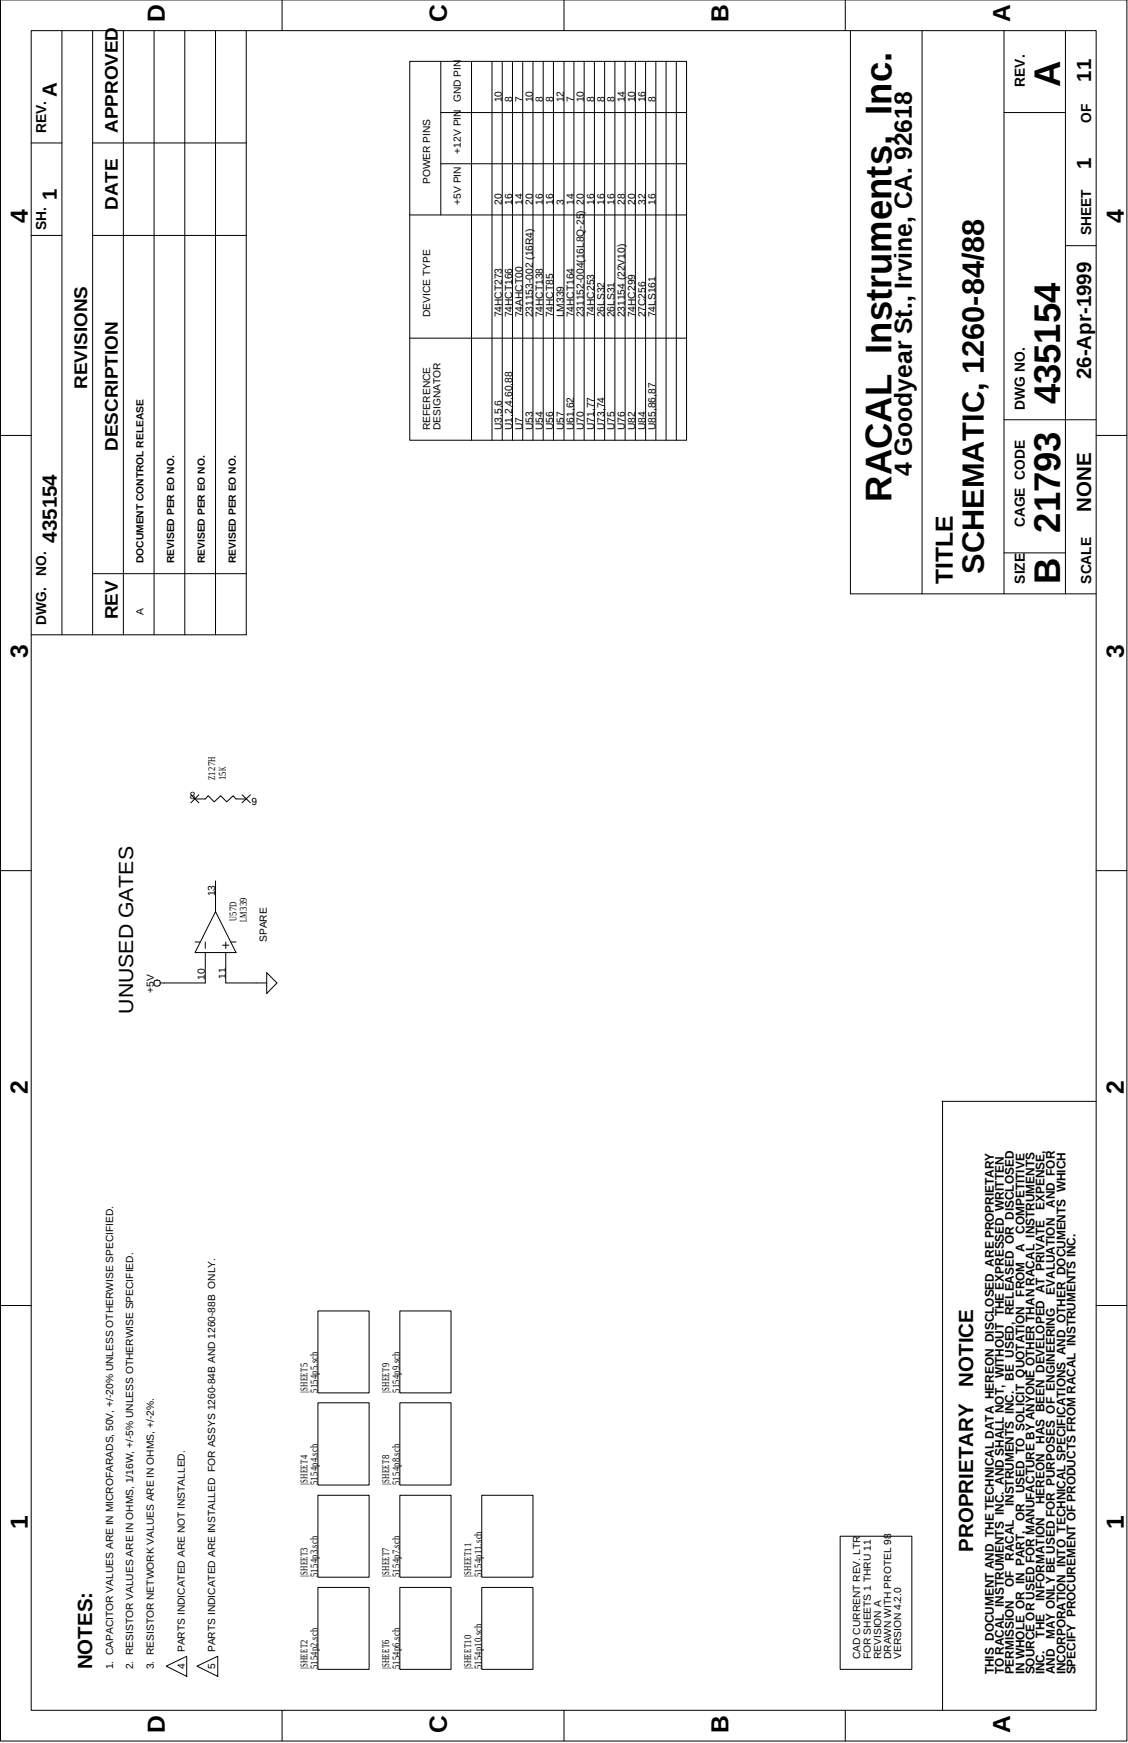

1628

1629

1630

1631

1632

1633

1634

1635

1636

1637

1638

1639

1640

1641

1642

1643

1644

1645

1646

1647

1648

1649

1650

1651

1652

1653

1654

1655

1656

1657

1658

1659

1660

1661

1662

1663

1664

1665

1666

1667

1668

1669

1670

1671

1672

1673

1674

1675

1676

1677

1678

1679

1680

1681

1682

1683

1684

1685

1686

1687

1688

1689

1690

1691

1692

1693

1694

1695

1696

1697

1698

1699

1700

1701

1702

1703

1704

1705

1706

1707

1708

1709

1710

1711

1712

1713

1714

1715

1716

1717

1718

1719

1720

1721

1722

1723

1724

1725

1726

1727

1728

1729

1730

1731

1732

1733

1734

1735

1736

1737

1738

1739

1740

1741

1742

1743

1744

1745

1746

1747

1748

1749

1750

1751

1752

1753

1754

1755

1756

1757

1758

1759

1760

1761

1762

1763

1764

1765

1766

1767

1768

1769

1770

1771

1772

1773

1774

1775

1776

1777

1778

1779

1780

1781

1782

1783

1784

1785

1786

1787

1788

1789

1790

1791

1792

1793

1794

1795

1796

1797

1798

1799

1800

1801

1802

1803

1804

1805

1806

1807

1808

1809

1810

1811

1812

1813

1814

1815

1816

1817

1818

1819

1820

1821

1822

1823

1824

1825

1826

1827

1828

1829

1830

1831

1832

1833

1834

1835

1836

1837

1838

1839

1840

1841

1842

1843

1844

1845

1846

1847

1848

1849

1850

1851

1852

1853

1854

1855

1856

1857

1858

1859

1860

1861

1862

1863

1864

1865

1866

1867

1868

1869

1870

1871

1872

1873

1874

1875

1876

1877

1878

1879

1880

1881

1882

1883

1884

1885

1886

1887

1888

1889

1890

1891

1892

1893

1894

1895

1896

1897

1898

1899

1900

1901

1902

1903

1904

1905

1906

1907

1908

1909

1910

1911

1912

1913

1914

1915

1916

1917

1918

1919

1920

1921

1922

1923

1924

1925

1926

1927

1928

1929

1930

1931

1932

1933

1934

1935

1936

1937

1938

1939

1940

1941

1942

1943

1944

1945

1946

1947

1948

1949

1950

1951

1952

1953

1954

1955

1956

1957

1958

1959

1960

1961

1962

1963

1964

1965

1966

1967

1968

1969

1970

1971

1972

1973

1974

1975

1976

1977

1978

1979

1980

1981

1982

1983

1984

1985

1986

1987

1988

1989

1990

1991

1992

1993

1994

1995

1996

1997

1998

1999

2000

2001

2002

2003

2004

2005

2006

2007

2008

2009

2010

2011

2012

2013

2014

2015

2016

2017

2018

2019

2020

2021

2022

2023

2024

2025

2026

2027

2028

2029

2030

2031

2032

2033

2034

2035

2036

2037

2038

2039

2040

2041

2042

2043

2044

2045

2046

2047

2048

2049

2050

2051

2052

2053

2054

2055

2056

2057

2058

2059

2060

2061

2062

2063

2064

2065

2066

2067

2068

2069

2070

2071

2072

2073

2074

2075

2076

2077

2078

2079

2080

2081

2082

2083

2084

2085

2086

2087

2088

2089

2090

2091

2092

2093

2094

2095

2096

2097

2098

2099

2100

2101

2102

2103

2104

2105

2106

2107

2108

2109

2110

2111

2112

2113

2114

2115

2116

2117

2118

2119

2120

2121

2122

2123

2124

2125

2126

2127

2128

2129

2130

2131

2132

2133

2134

2135

2136

2137

2138

2139

2140

2141

2142

2143

2144

2145

2146

2147

2148

2149

2150

2151

2152

2153

2154

2155

2156

2157

2158

2159

2160

2161

2162

2163

2164

2165

2166

2167

2168

2169

2170

2171

2172

2173

2174

2175

2176

2177

2178

2179

2180

2181

2182

2183

2184

2185

2186

2187

2188

2189

2190

2191

2192

2193

2194

2195

2196

2197

2198

2199

2200

2201

2202

2203

2204

2205

2206

2207

2208

2209

2210

2211

2212

2213

2214

2215

2216

2217

2218

2219

2220

2221

2222

2223

2224

2225

2226

2227

2228

2229

2230

2231

2232

2233

2234

2235

2236

2237

2238

2239

2240

2241

2242

2243

2244

2245

2246

2247

2248

2249

2250

2251

2252

2253

2254

2255

2256

2257

2258

2259

2260

2261

2262

2263

2264

2265

2266

2267

2268

2269

2270

2271

2272

2273

2274

2275

2276

2277

2278

2279

2280

2281

2282

2283

2284

2285

2286

2287

2288

2289

2290

2291

2292

2293

2294

2295

2296

2297

2298

2299

2300

2301

2302

2303

2304

2305

2306

2307

2308

2309

2310

2311

2312

2313

2314

2315

2316

2317

2318

2319

2320

2321

2322

2323

2324

2325

2326

2327

2328

2329

2330

2331

2332

2333

2334

2335

2336

2337

2338

2339

2340

2341

2342

2343

2344

2345

2346

2347

2348

2349

2350

2351

2352

2353

2354

2355

2356

2357

2358

2359

2360

2361

2362

2363

2364

2365

2366

2367

2368

2369

2370

2371

2372

2373

2374

2375

2376

2377

2378

2379

2380

2381

2382

2383

2384

2385

2386

2387

2388

2389

2390

2391

2392

2393

2394

2395

2396

2397

2398

2399

2400

2401

2402

2403

2404

2405

2406

2407

2408

2409

2410

2411

2412

2413

2414

2415

2416

2417

2418

2419

2420

2421

2422

2423

2424

2425

2426

2427

2428

2429

2430

2431

2432

2433

2434

2435

2436

2437

2438

2439

2440

2441

2442

2443

2444

2445

2446

2447

2448

2449

2450

2451

2452

2453

2454

2455

2456

2457

2458

2459

2460

2461

2462

2463

2464

2465

2466

2467

2468

2469

2470

2471

2472

2473

2474

2475

2476

2477

2478

2479

2480

2481

2482

2483

2484

2485

2486

2487

2488

2489

2490

2491

2492

2493

2494

2495

2496

2497

2498

2499

2500

2501

2502

2503

2504

2505

2506

2507

2508

2509

2510

2511

2512

2513

2514

2515

2516

2517

2518

2519

2520

2521

2522

2523

2524

2525

2526

2527

2528

2529

2530

2531

2532

2533

2534

2535

2536

2537

2538

2539

2540

2541

2542

2543

2544

2545

2546

2547

2548

2549

2550

2551

2552

2553

2554

2555

2556

2557

2558

2559

2560

2561

2562

2563

2564

2565

2566

2567

2568

2569

2570

2571

2572

2573

2574

2575

2576

2577

2578

2579

2580

2581

2582

2583

2584

2585

2586

2587

2588

2589

2590

2591

2592

2593

2594

2595

2596

2597

2598

2599

2600

2601

2602

2603

2604

2605

2606

2607

2608

2609

2610

2611

2612

2613

2614

2615

2616

2617

2618

2619

2620

2621

2622

2623

2624

2625

2626

2627

2628

2629

2630

2631

2632

2633

2634

2635

2636

2637

2638

2639

2640

2641

2642

2643

2644

2645

2646

2647

2648

2649

2650

2651

2652

2653

2654

2655

2656

2657

2658

2659

2660

2661

2662

2663

2664

2665

2666

2667

2668

2669

2670

2671

2672

2673

2674

2675

2676

2677

2678

2679

2680

2681

2682

2683

2684

2685

2686

2687

2688

2689

2690

2691

2692

2693

2694

2695

2696

2697

2698

2699

2700

2701

2702

2703

2704

2705

2706

2707

2708

2709

2710

2711

2712

2713

2714

2715

2716

2717

2718

2719

2720

2721

2722

2723

2724

2725

2726

2727

2728

2729


2730


2731


2732


2733

2734

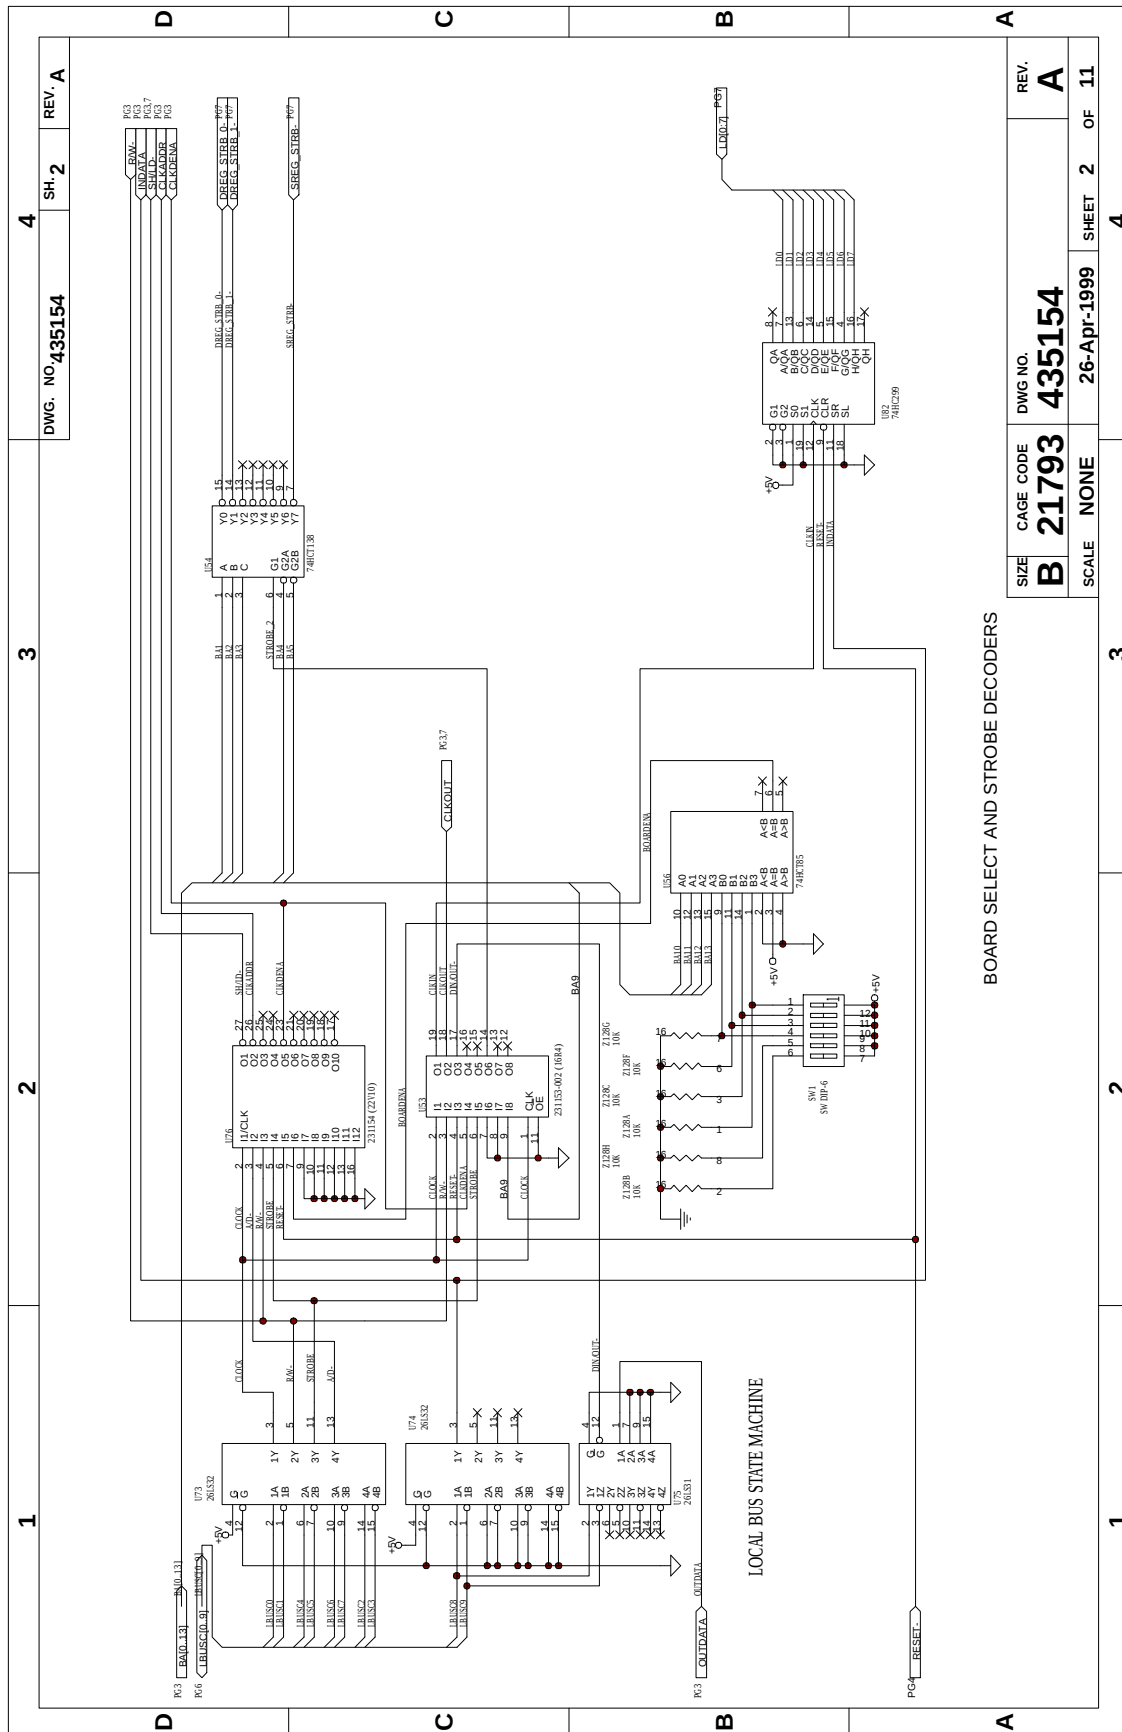


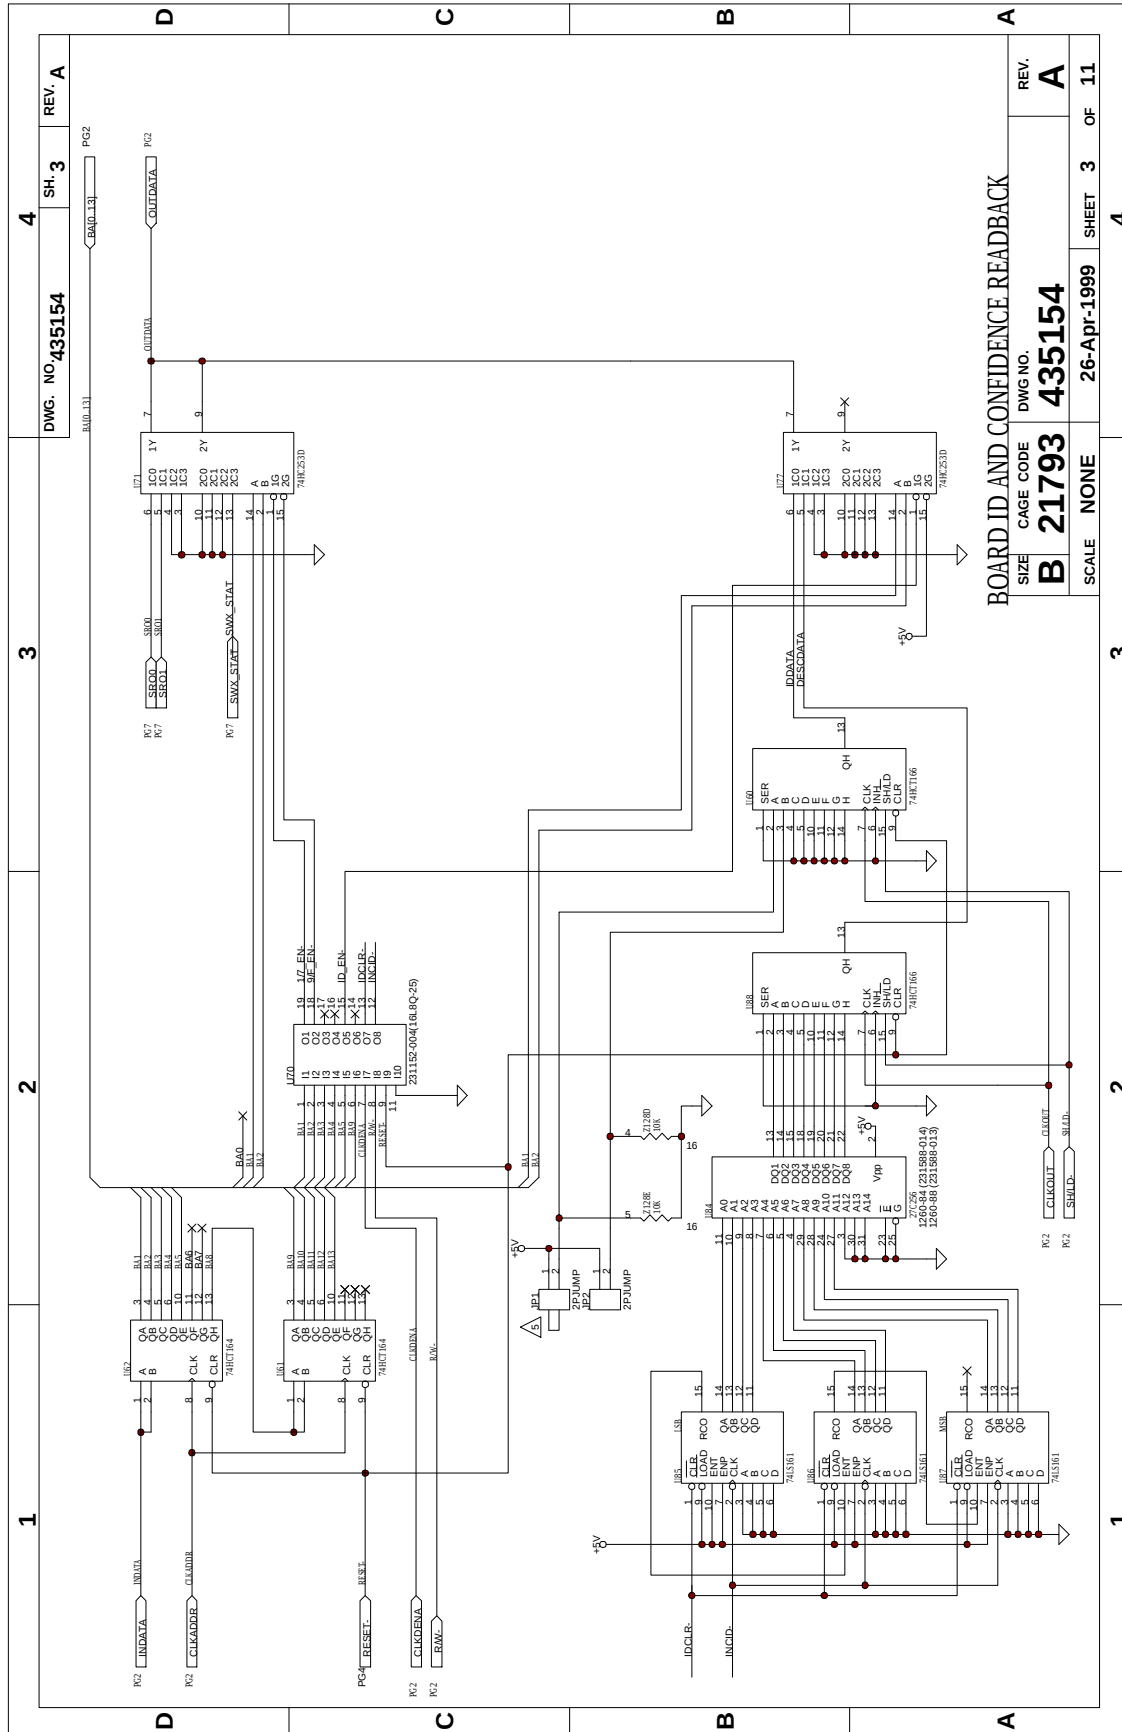


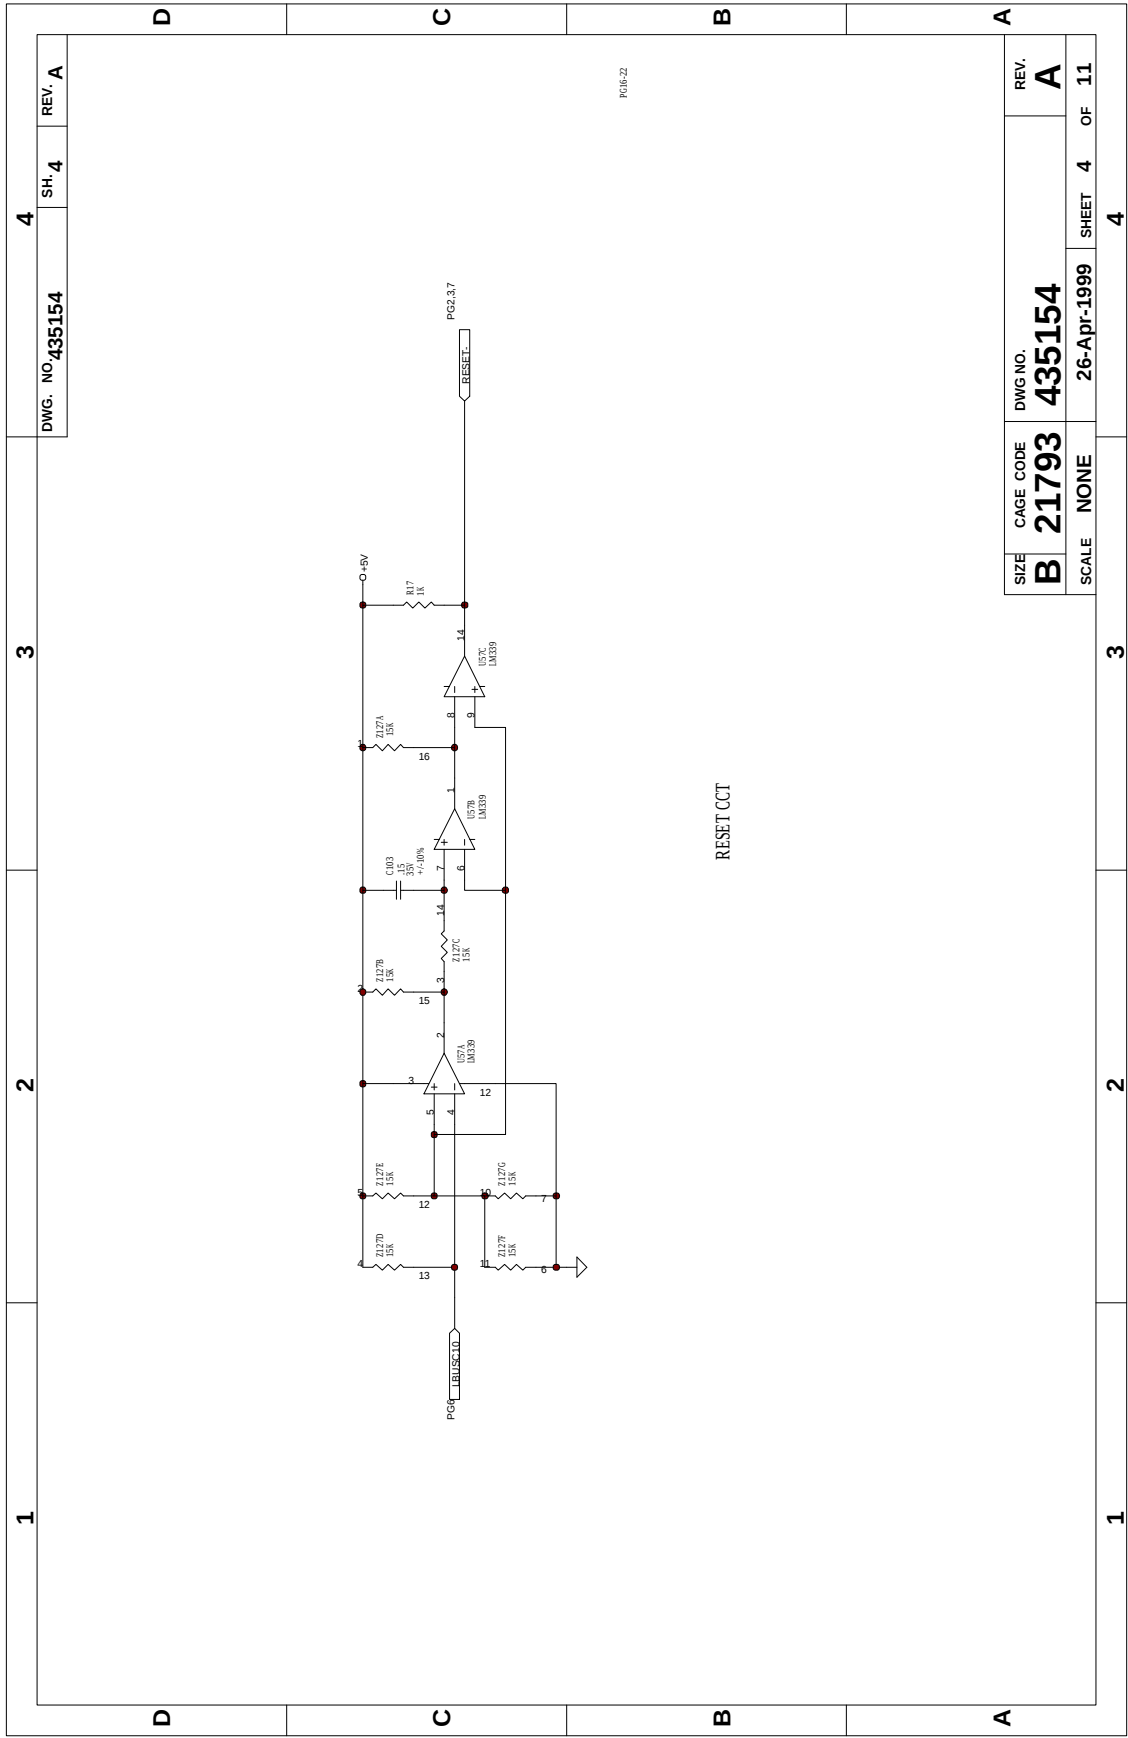


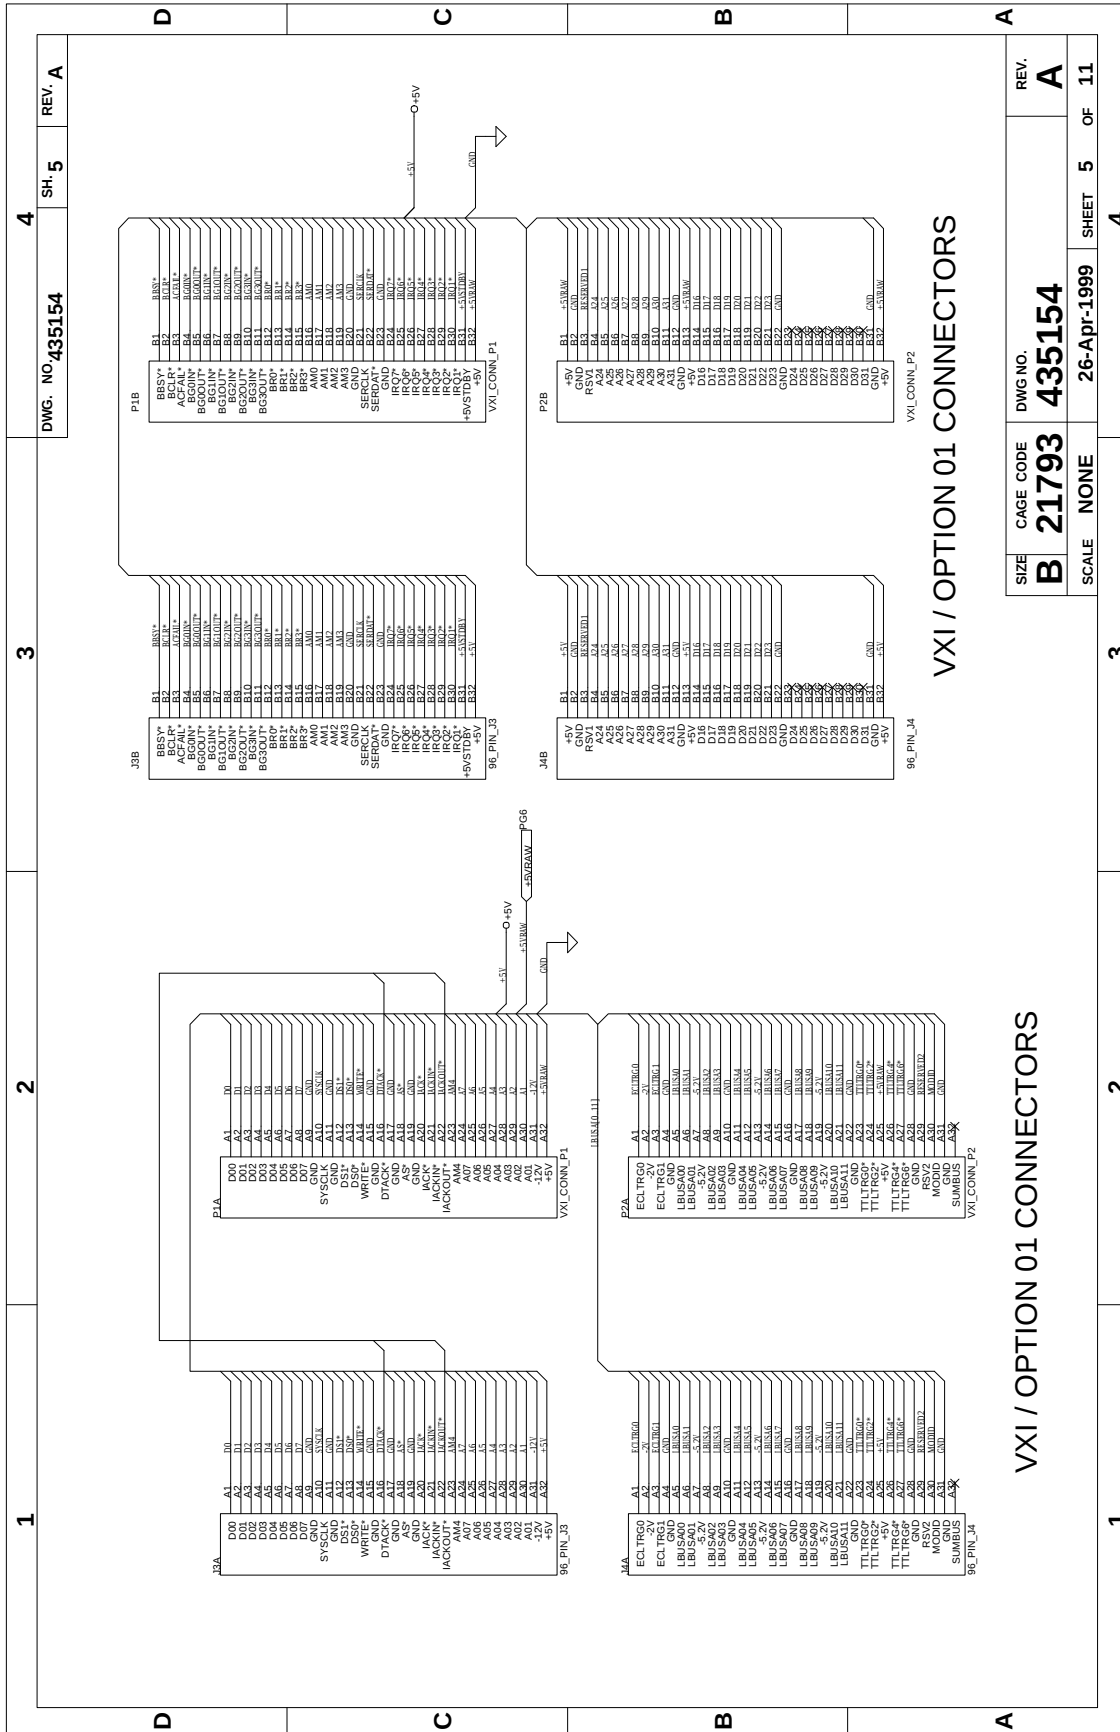





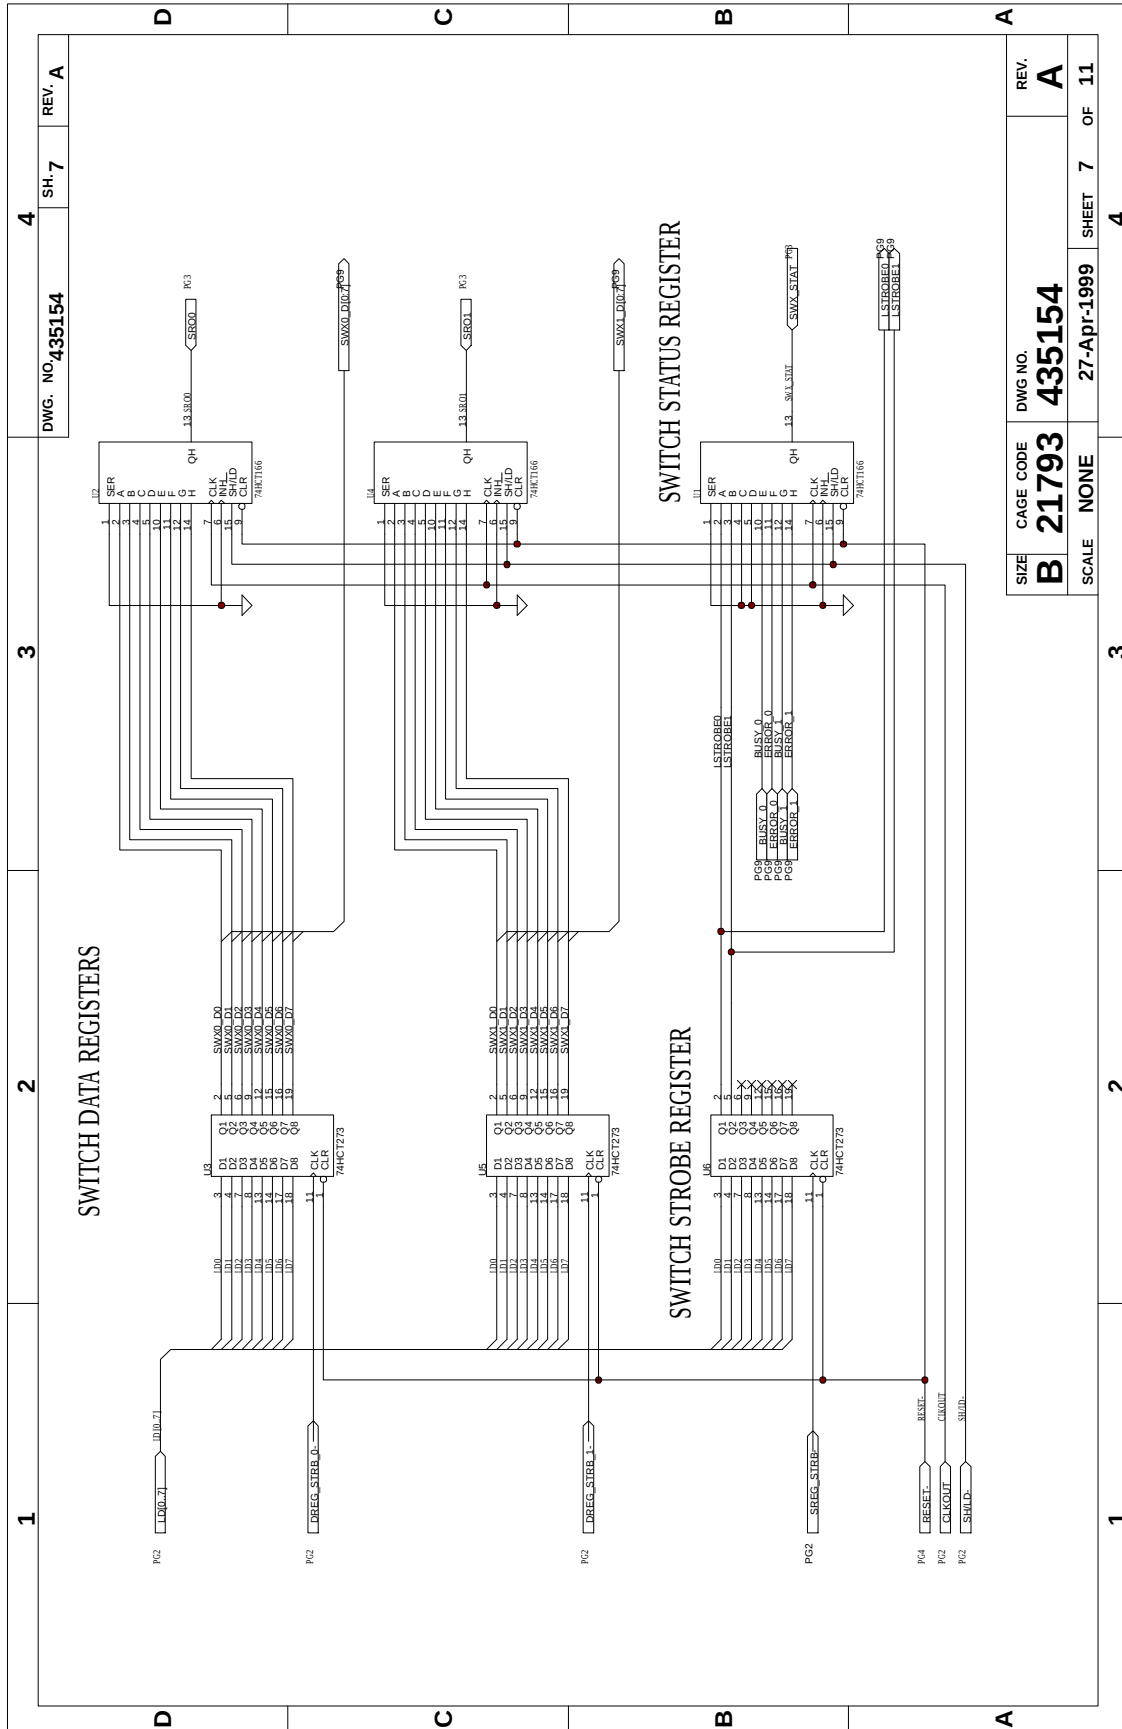

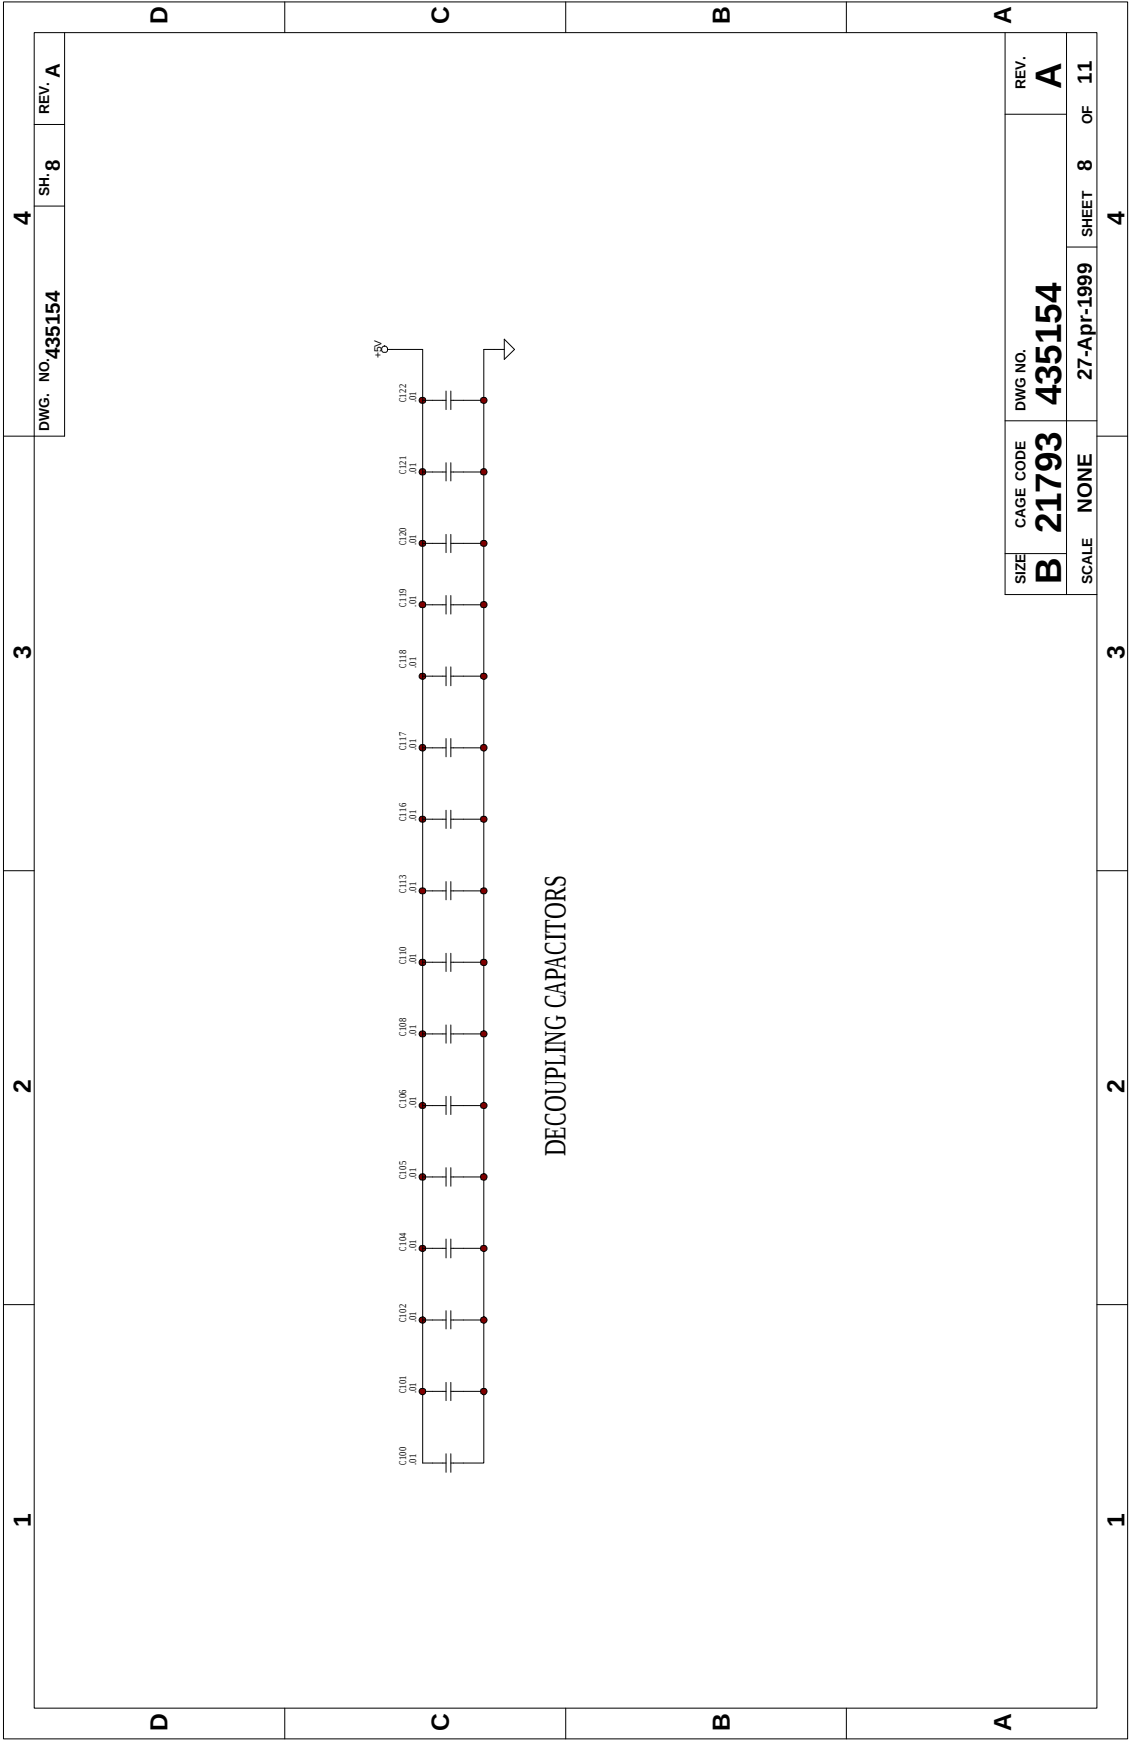

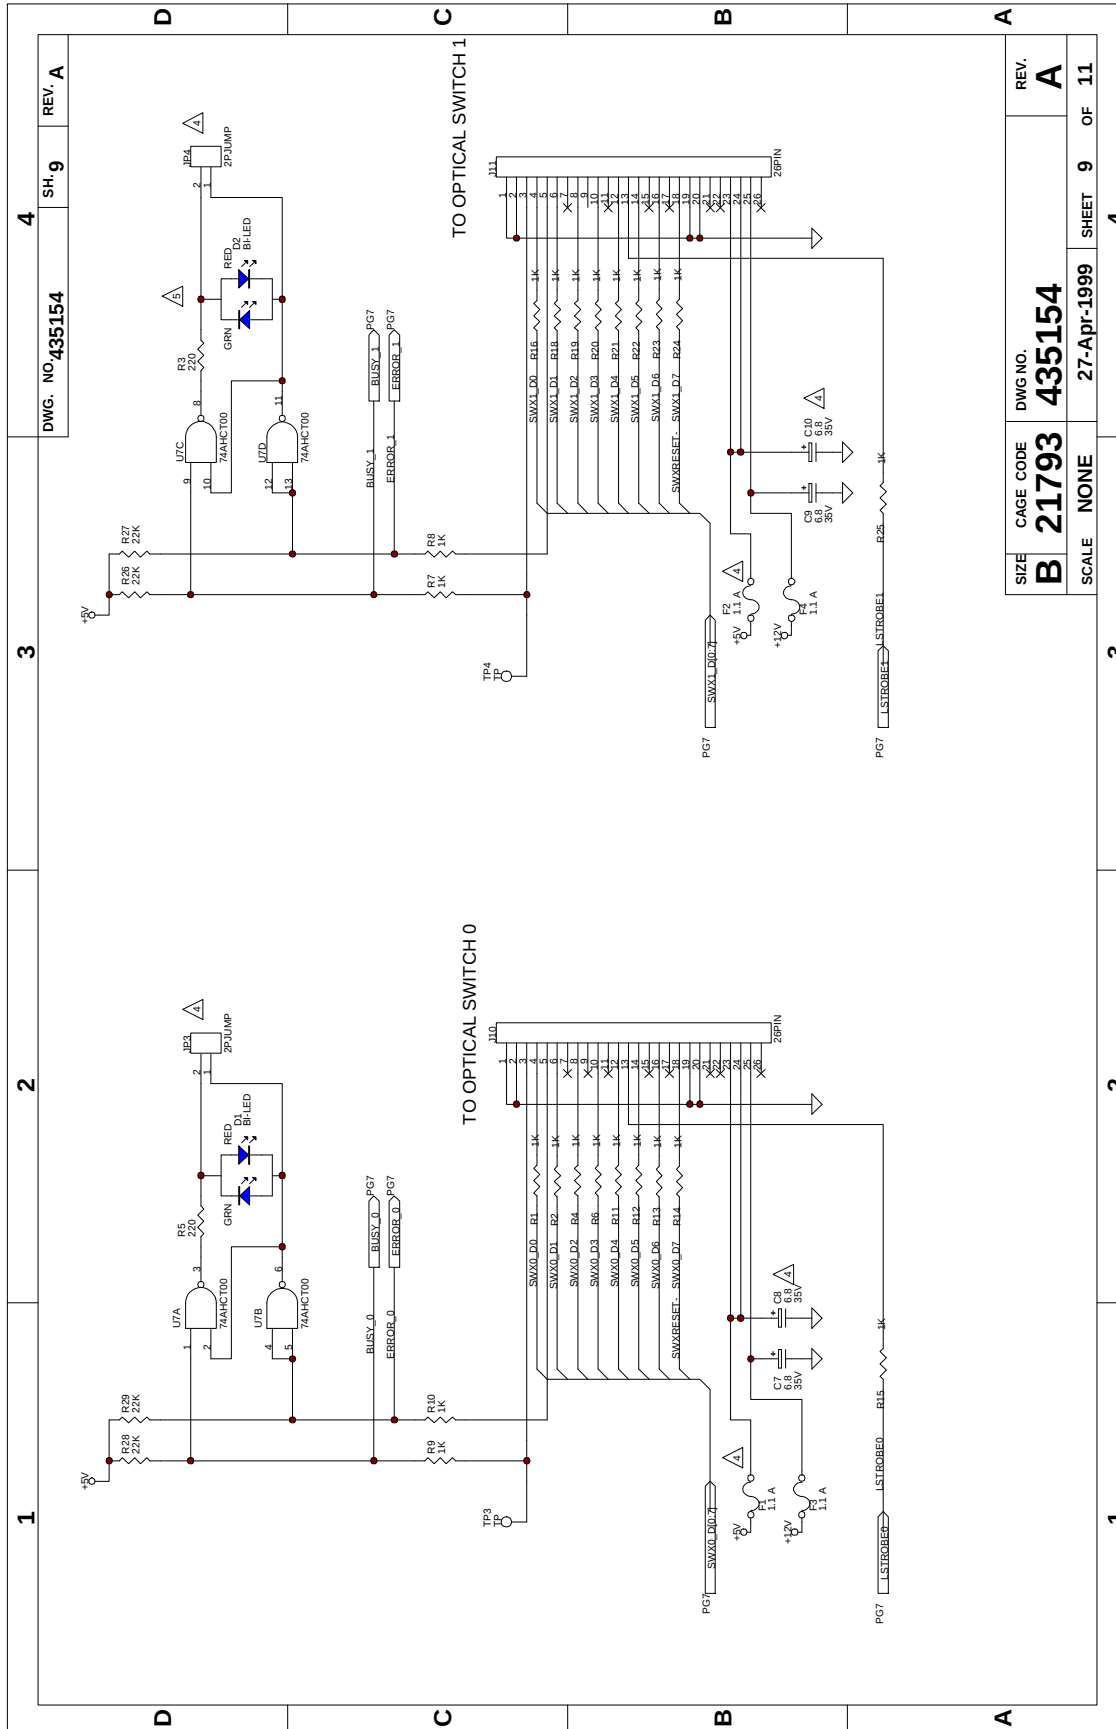

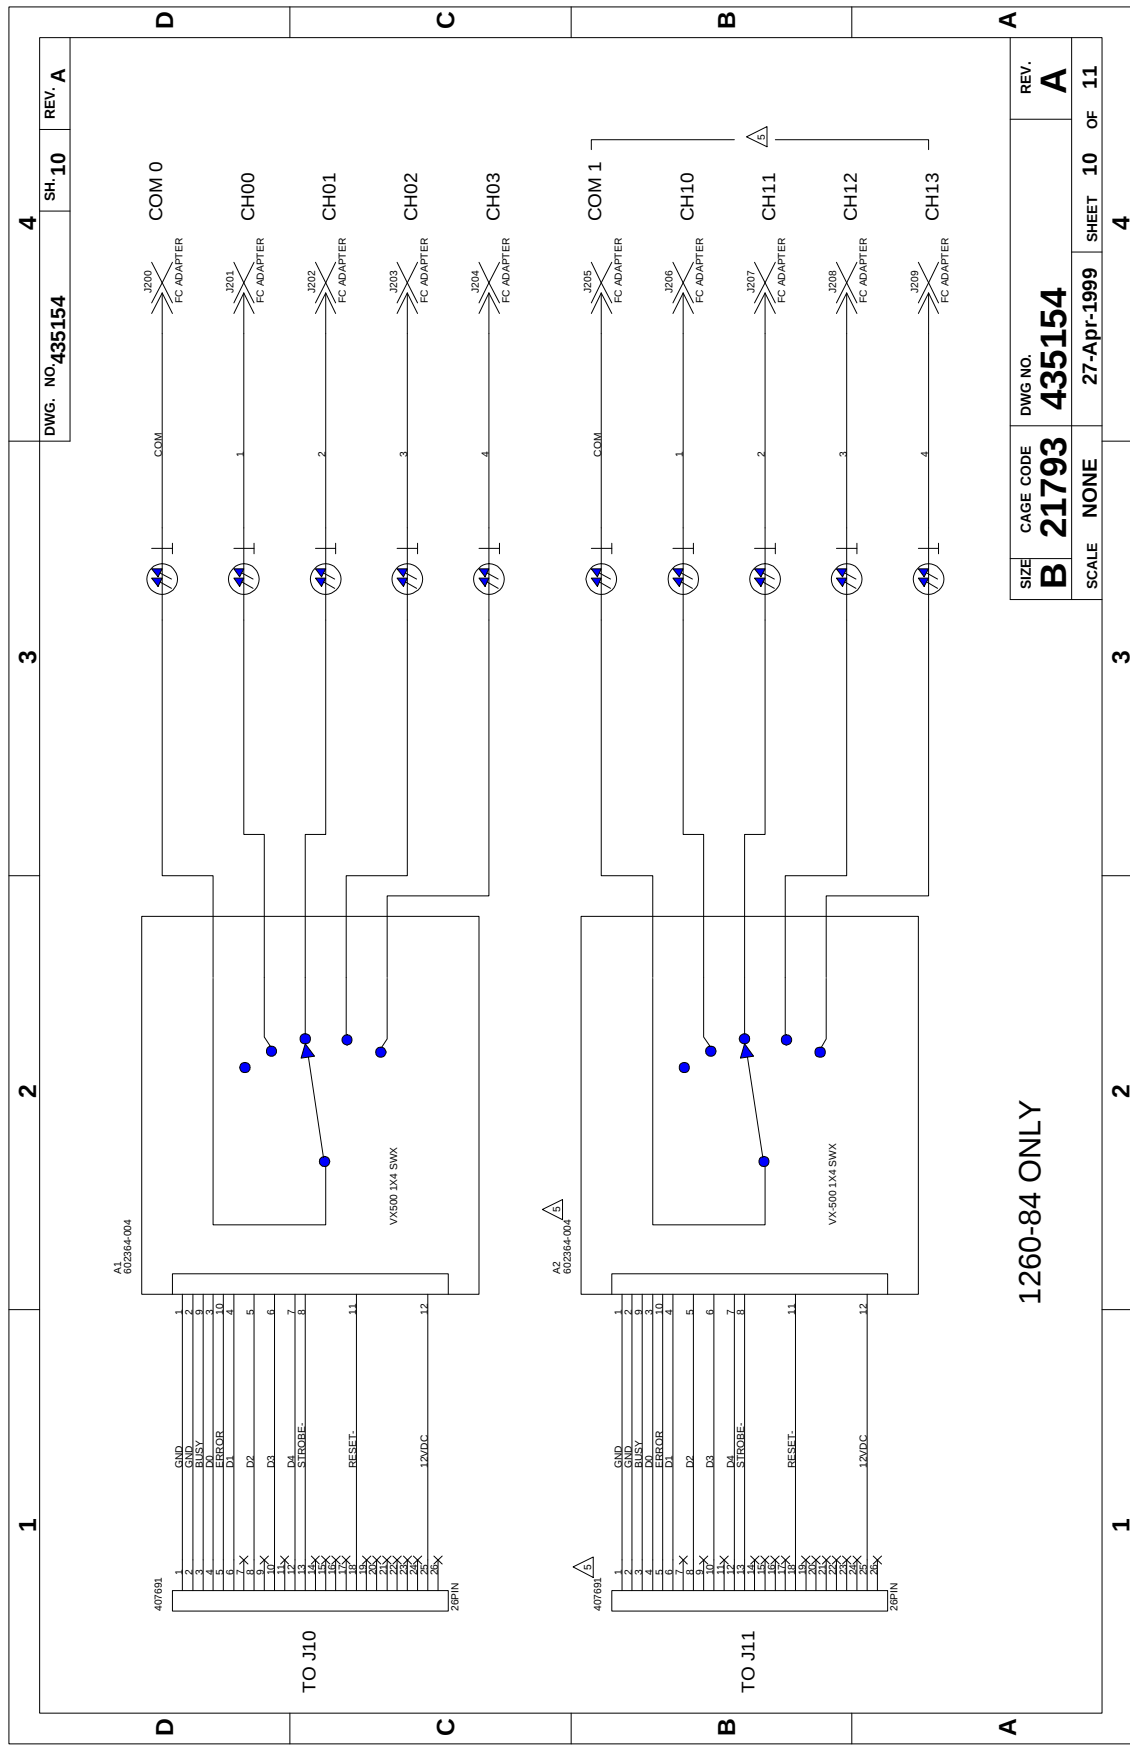

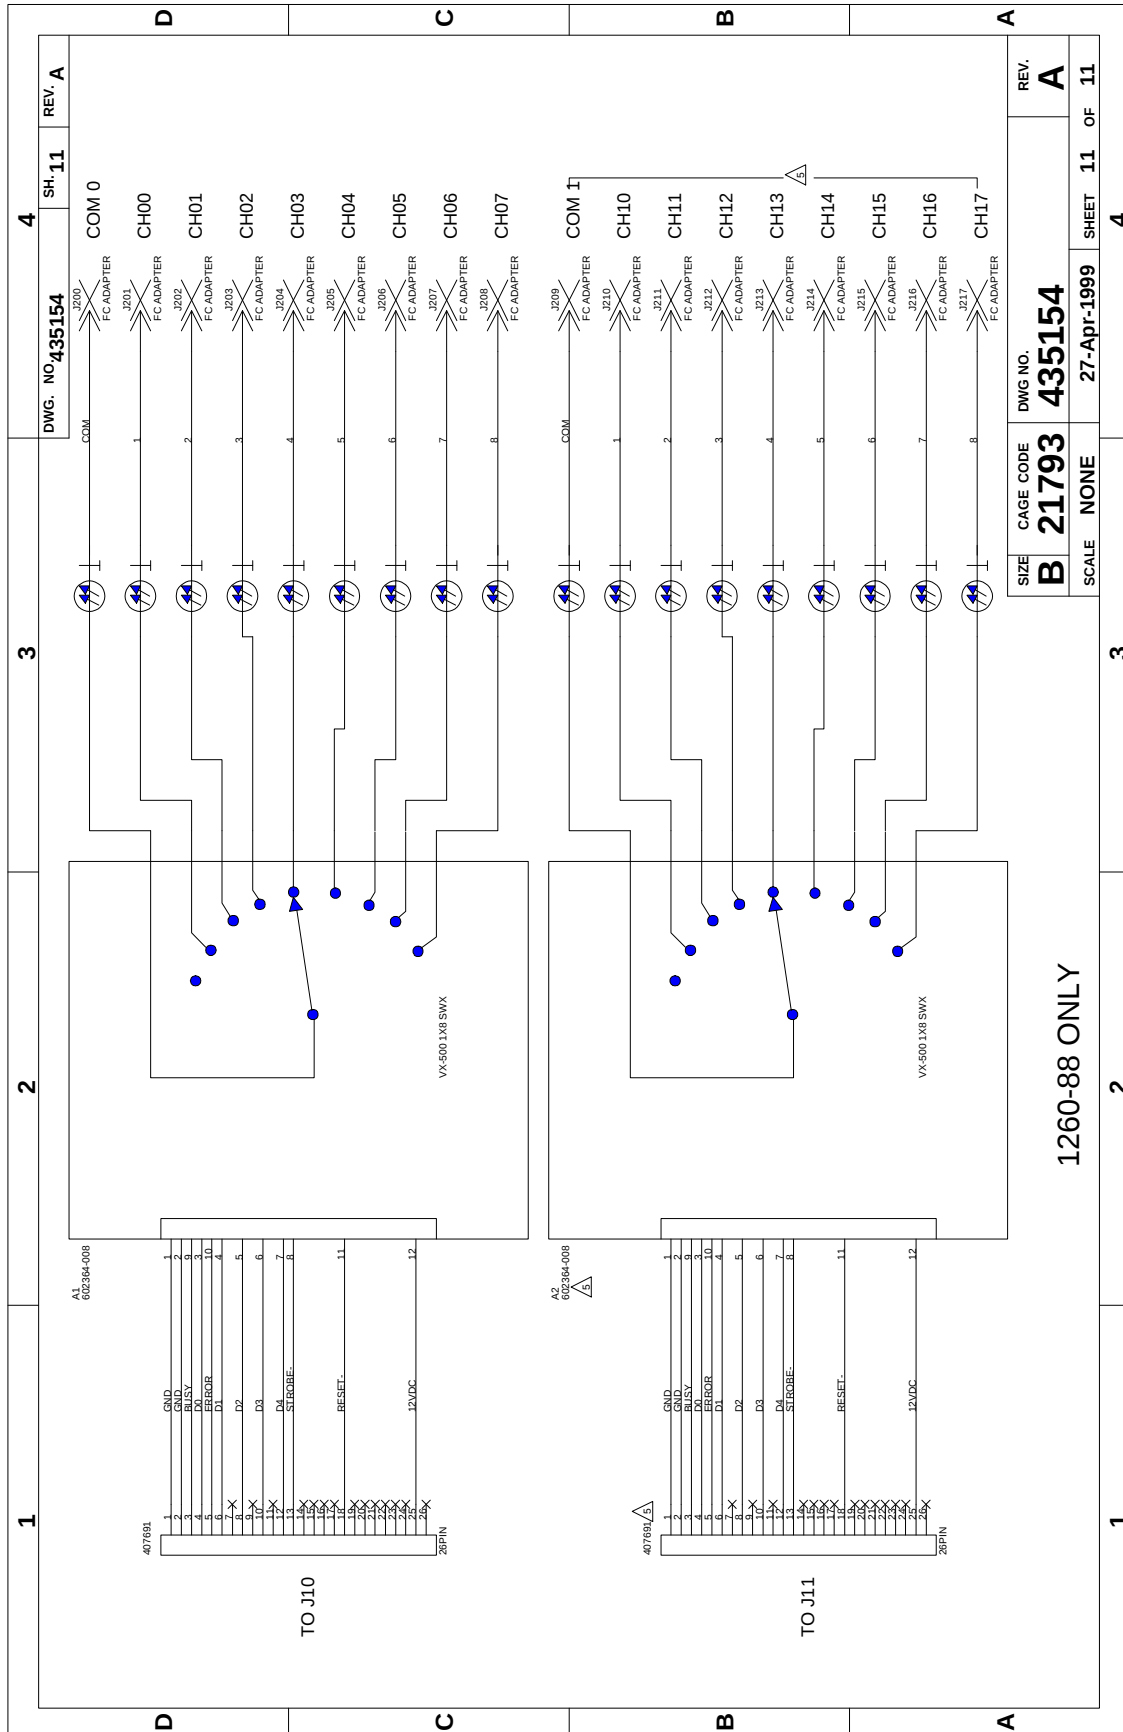



Chapter 5

PARTS LIST

407699-001	Final Assy, 1260-88A-1	5-3
407699-002	Final Assy, 1260-88B-1	5-4
405148	PCB Assy, L-BUS Jumper.....	5-5
405154	PCB Assy, 1260-84/88.....	5-6
407691	Cable Assy, Interface	5-7

This page was left intentionally blank.

RACAL INSTRUMENTS INC.

Assembly 407699-001

1260-88A-1,1 1x8 OPT SW, 1SL

Date 4/30/99 Revision A

#	Component	Description	U/N	Qty Reqd	Ref
2	231588-013	ICMEM-27C256-15-U8 4-PLCCP	EA	1.00000	U84
3	405154	PCB ASSY,1260-84/88	EA	1.00000	
4	407681	SHIP KIT,1260-88	EA	1.00000	
5	407691	CABLE ASSY,INTFC,VX-500 SW	EA	1 - 00000	W/A1
6	456722	COVER, LEFT, VXI, MOD-ADDR	EA	1.00000	
7	456770	PANEL, FRONT, IS-S-1x8	EA	1.00000	
8	456773	PANEL, RIGHT, 88-1	EA	1.00000	
9	456775	BRKT, STRAIN RELIEF, LOWER, 1W	EA	1.00000	
10	456776	BRKT, STRAIN RELIEF, UPPER, 1W	EA	1.00000	
11	456786	PLATE, SWITCH MOUNTING	EA	1.00000	
15	602362	CONN,FIBER OPTIC,FC ADAPTER	EA	9.00000	J200-J208
16	602364-008	SWITCH, OPTICAL, 1x8, SGL MODE	EA	1.00000	A1
17	611263	STSO4B 062P. 775L.250	EA	1.00000	
18	611264	HAN DLE-EXT-BOT	EA	1.00000	
19	611265	HAN DLE-EXT-TOP	EA	1.00000	
20	611266	MOUNTING HDW, HANDLE	EA	.50000	
23	615541	S1M-PFL1H004-40X.250	EA	17.00000	
24	615556	S1M-PFL1H006-32X. 250	EA	4.00000	
25	616252	53M-PPANH004-40X. 312	EA	5.00000	
26	616405	S1MPFL9-M2 . 5X0 . 45X12	EA	2.00000	
30	910634	SPONGE, PRESSURE, SENSITIVE	FT	.00001	
31	920962	LOCTITE-242-MED STR	EA	.00001	
32	921059	LABEL-CAUTION-STATIC	EA	1.00000	
33	921148-001	LABEL SET,VXI	EA	1.00000	
34	921309	LABEL,VXI SWTCH IDENT.	EA	1.00000	

RACAL INSTRUMENTS INC.

Assembly 407699-002

1260-88B-1,2 1x8 OPT SW, 1SL

Date 4/30/99 Revision A

#	Component	Description	U/N	Qty Reqd	Ref
1	210155	DILED-002.2V00.01A-RED/GRN	EA	1.00000	D2
2	231588-013	ICMEM-27C256-15-U84-PLCCP	EA	1.00000	U8 4
3	405154	PCB ASSY, 1260-84/88	EA	1.00000	
4	407681	SHIP KIT,1260-88	EA	1.00000	
S	407691	CABLE ASSY,INTFC,VX-500 SW	EA	2.00000	W/A1, A2
6	456722	COVER, LEFT, VXI , MOD-ADDR	EA	1.00000	
7	456768	PANEL, FRONT, 1S-D-1x8	EA	1.00000	
8	456773	PANEL, RIGHT, 88-1	EA	1.00000	
9	456775	BRKT, STRAIN RELIEF, LOWER, 1W	EA	1.00000	
10	456776	BRKT, STRAIN RELIEF, UPPER, 1W	EA	1.00000	
11	456786	PLATE, SWITCH MOUNTING	EA	1.00000	
13	601195	PLUG-JUMPER-0. 1 CTR	EA	1.00000	W/JP1
15	602362	CONN,FIBER OPTIC,FC ADAPTER	EA	18.00000	J200-J217
16	602364-008	SWITCH, OPTICAL, 1x8, SGL MODE	EA	2.00000	A1, A2
17	611263	STSO4B. 062P. 775L.250	EA	1.00000	
18	611264	HAN DLE-EXT-BOT	EA	1.00000	
19	611265	HAN DLE-EXT-TOP	EA	1.00000	
20	611266	MOUNTING HDW, HANDLE	EA	.50000	
22	615540	S1M-PFLIHOO4-40X - 188	EA	4.00000	
23	615541	S1M-PFL1H004-40X.250	EA	13.00000	
24	615556	S1M-PFL1H006-32X.250	EA	8.00000	
25	616252	53M-PPANHOO4-40x. 312	EA	5.00000	
26	616405	S1MPFL9-M2 . 5X0. 45X12	EA	2.00000	
30	910634	SPONGE, PRESSURE, SENSITIVE	FT	.00001	
31	920962	LOCTITE-242-MED STR	EA	.00001	
32	921059	LABEL-CAUTION-STATIC	EA	1.00000	
33	921148-001	LABEL SET,VXI	EA	1 - 00000	
34	921309	LABEL,VXI SWTCH IDENT.	EA	1.00000	

RACAL INSTRUMENTS INC.

Assembly 405148

PCB ASSY, L-BUS JUMPER

Date 1/28/99

Revision A

#	Component	Description	U/M	Qty Reqd	Ref
	415148	PCB, L-BUS JUMPER	EA	1.00000	-
	601675-001	CON-PCB-PLG096P. 100D	E	1.00000	P2
	611263	STS04B. 062P. 775L.250	EA	1.00000	-
2	435148	SCHEMATIC, L-BUS JUMPER	EA		-

RACAL INSTRUMENTS INC.

Assembly 405154

PCB ASSY, 1260-84/88

Date 5/20/99

Revision B

#	Component	Description	U/M	Qty Regd	Ref
1	R-21-1801	CPCH2-0010 . 0N0050V20	EA	22.00000	CS, 6, 100-102 104-106, 108, 110, 113, 116- 122,137-140
2	050000-102	RSCH2-001. 00K. 06W005	EA	23.00000	R1, 2, 4, 6-25
3	050000-221	RSCH1-220 . 00H. 06W005	EA	2.00000	R3, 5
4	050000-223	RSCH2-022 .00K. 06W005	EA	4.00000	R26, 27,28,29
5	080114	RSNW2-015. 00OK16PO8R	EA	1.00000	Z127
8	080120	RSNW2-010 . 00OK16P15R	EA	1.00000	Z128
9	100164	CPFT1-0800 . 0P0050v	EA	2.00000	LI, 4
10	110126	CPTA3-0006. 8U0035V20	EA	6.00000	CI, 2, 3, 4, 7, 9
13	130198	CPCH2-0150 . 0N0035V10	EA	1.00000	C103
14	210155	DILED-002 . 2V00 . 01A-RED/GRN	EA	1.00000	DI
17	231093	ICLIN-LM339 COMP	EA	1.00000	U57
18	231096	ICINT-2 6L532---RCVR	EA	2.00000	U73, 74
19	231119	ICDIG-74HC299---SHFT	EA	1.00000	U82
20	231120	ICDIG-7 4HCT1 66-SHFT	EA	5.00000	UI, 2, 4, 60, 88
22	231125	ICINT-2 6L531---DRVR	EA	1.00000	U75
23	231130	ICDIG-7 4HCT273-FLOP	EA	3.00000	U3, 5,6
24	231131	ICDIG-74HCT164-SHFT	EA	2.00000	U61, 62
25	231135	ICDIG-74HCT8 5	EA	1.00000	U56
26	231147	ICDIG-7 4HC2 53D--MUX	EA	2.00000	U71, 77
27	231152-004	ICPLA-16L8Q-25-U70-PLCCP	EA	1.00000	U70
28	231153-002	ICPLA-16R4-U53-PLCCP	EA	1.00000	U53
29	231154	ICMEM-22V10-U52-PAL	EA	1.00000	U7 6
32	231386	ICDIG-74L5161----	EA	3.00000	U85, 86, 87
33	231445	ICDIG-74HCT138--SQIC	EA	1.00000	U54
37	231596	ICDIG-74AHCTOO--SOIC	EA	1.00000	U7
40	310193	CKF1-SH005. 00U10. 1%I	EA	2.00000	L2, 3
42	401951	PCB ASSY,L-BUS JUMPER,P4	EA	1.00000	W/J4
43	401951-003	PCB ASSY,BUS GRANT,JUMPER,P3	EA	1.00000	W/J3
44	415154-001	PCB, 1260-8XX	EA	1.00000	
45	435154	SCHEMATIC, 1260-84/88	EA		
48	601197	POST-TEST-. 025 SQ	EA	4.00000	TP1, TP2, TP3, TP4
49	601208-010	CON-PCB-PLG02SD. 100S	EA	2.00000	JP1, JP2
50	601675	CON-PCB-PLGO96S. 100T	EA	2.00000	P1, P2
51	601925	CON-PCB-RCP96SD. 100T	EA	2.00000	J3, J4
52	601969	SWITCH, DIP-6 POS, LOW	EA	3.00000	SWI-3
53	602068-032	CON-SKT-RCPO32S. 050S	EA	1.00000	W/U84
54	602166	CON-PCB-PLG026S. 100D	EA	2.00000	J1O, J1I
60	611258-001	STSO4T. 062P. 170L.218	EA	5.00000	
67	921421	FUSE-01. 100A-030V	EA	2.00000	F3, 4

Parts List 5-6

RACAL INSTRUMENTS INC.

Assembly 407691 CABLE ASSY, INTFC, VX-500 SW

Date 4/15/99

Revision B

#	Component	Description	U/M	Qty Reqd	Ref
.	M23053/5-107-4	TBGSRK-POF. 3751D-YELLOW	FT	.00001	-
.	524999	WRTEF-STR24G-9-9-9 WHT	FT	.00001	-
.	602163-012	CON-CAB-PLG012C.I00S	EA	1.00000	-
.	602163-901	TRMCRP-SNP-U-F22-30G	EA	12.00000	-
.	602199-001	CONTACT, CRIMP, RECPT, 28-22GA	EA	12.00000	-
.	602372-030	CON-CAB-RCPO3OC. 100D-KEYED	EA	1.00000	-
.	610897	TIE-CA-LKG-. 062-1.25	EA	2.00000	-
8	M23053/8-007-C	TBGSRK-POF.3801D-CLEAR	FT	.00001	-

This page was left intentionally blank.

Chapter 6

PRODUCT SUPPORT

Product Support

Racal Instruments has a complete Service and Parts Department. If you need technical assistance or should it be necessary to return your product for repair or calibration, call 1-800-722-3262. If parts are required to repair the product at your facility, call 1-949-859-8999 and ask for the Parts Department.

When sending your instrument in for repair, complete the form in the back of this manual.

For worldwide support and the office closes to your facility, refer to the Support Offices section on the following page.

Reshipment Instructions

Use the original packing material when returning the 1260-88 to Racal Instruments for calibration or servicing. The original shipping crate and associated packaging material will provide the necessary protection for safe reshipment.

If the original packing material is unavailable, contact Racal Instruments Customer Service for information.

Support Offices

Racal Instruments, Inc.

4 Goodyear St., Irvine, CA 92618-2002
Tel: (800) RACAL-ATE, (800) 722-2528,
(949) 859-8999; FAX: (949) 859-7139

Racal Instruments, Ltd.

480 Bath Road, Slough, Berkshire, SL1 6BE, United Kingdom
Tel: +44 (0) 1628 604455; FAX: +44 (0) 1628 662017

Racal Systems Electronique S.A.

18 Avenue Dutartre, 78150 LeChesnay, France
Tel: +33 (1) 3923 2222; FAX: +33 (1) 3923 2225

Racal Systems Elettronica s.r.l.

Strada 2-Palazzo C4, 20090 Milanofiori Assago, Milan, Italy
Tel: +39 (0)2 5750 1796; FAX +39 (0)2 5750 1828

Racal Elektronik System GmbH.

Technologiepark Bergisch Gladbach, Friedrich-Ebert-Strasse,
D-51429 Bergisch Gladbach, Germany
Tel.: +49 2204 8442 00; FAX: +49 2204 8442 19

Racal Australia Pty. Ltd.

3 Powells Road, Brookvale, NSW 2100, Australia
Tel: +612 9936 7000, FAX: +612 9936 7036

Racal Electronics Pte. Ltd.

26 Ayer Rajah Crescent, 04-06/07 Ayer Rajah Industrial Estate,
Singapore 0513.
Tel: +65 7792200, FAX: +65 7785400

Racal Instruments, Ltd.

Unit 5, 25F., Mega Trade Center, No 1, Mei Wan Road, Tsuen
Wan, Hong Kong, PRC
Tel: +852 2405 5500, FAX: +852 2416 4335

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at [artisanng.com](https://www.artisanng.com) for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisanng.com | [artisanng.com](https://www.artisanng.com)

