

## Allen-Bradley 2198-H015-ERS Kinetix 5500 Series Servo Drive



© Artisan Technology Group

**\$1495.00**

**In Stock**

**Qty Available: 1**

**New From Surplus Stock**

**Open Web Page**

<https://www.artisanTG.com/87450-1>

All trademarks, brandnames, and brands appearing herein are the property of their respective owners.



Your **definitive** source  
for quality pre-owned  
equipment.

**Artisan Technology Group**

(217) 352-9330 | [sales@artisanTG.com](mailto:sales@artisanTG.com) | [artisanTG.com](http://artisanTG.com)

- Critical and expedited services
- In stock / Ready-to-ship

- We buy your excess, underutilized, and idle equipment
- Full-service, independent repair center

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

# ALLEN-BRADLEY KINETIX 5500 USER MANUAL



## Quick Links

[Fault Codes](#)

[Safe Flt Fault Codes](#)

# Table of Contents

[Table of Contents](#)

[About This Publication](#)

[Additional Resources](#)

[Audience](#)

[Conventions Used in This Manual](#)

[About the Kinetix 5500 Servo Drive System](#)

[Drive Hardware and Input Power Configurations](#)

[Standalone Configurations](#)

[Shared AC/DC Configurations](#)

[Shared DC Common-bus Configurations](#)

[Shared AC/DC Hybrid Configuration](#)

[Motor Feedback and Feedback-only Configurations](#)

[Typical Communication Configurations](#)

[Linear Topology](#)

[Ring Topology](#)

[Star Topology](#)

[Safe Torque-off Configurations](#)

[Hardwired Safety Configuration](#)

[Integrated Safety Configurations](#)

[Catalog Number Explanation](#)

[Agency Compliance](#)

[System Mounting Requirements](#)

[Transformer Selection](#)

[Circuit Breaker/Fuse Selection](#)

[Enclosure Selection](#)

[Minimum Clearance Requirements](#)

## Electrical Noise Reduction

- Bonding Modules

- Bonding Multiple Subpanels

- Establishing Noise Zones

- Cable Categories for Kinetix 5500 Systems

- Noise Reduction Guidelines for Drive Accessories

## Zero-stack Tab and Cutout

## Shared-bus Connection System

## Single-axis Configurations

## Multi-axis Configurations

## Drill-hole Patterns

## Mount Your Kinetix 5500 Drive

## Kinetix 5500 Connector Data

## Safe Torque-off Connector Pinout

## Input Power Connector Pinouts

## DC Bus and Shunt Resistor Connector Pinouts

## Digital Inputs Connector Pinout

## Ethernet Communication Connector Pinout

## Motor Power, Brake, and Feedback Connector Pinouts

## Motor Feedback Connector Pinout

## Understanding Control Signal Specifications

- Digital Inputs

- Ethernet Communication Specifications

- Motor Brake Circuit

- Control Power

## Feedback Specifications

- Absolute Position Feature

## Safe Torque-off Safety Features

- Servo Drives with Hardwired Safety



Servo Drives with Integrated Safety

Basic Wiring Requirements

Determine the Input Power Configuration

Grounded Power Configurations

Ungrounded Power Configurations

Remove the Grounding Screws in Select Power Configurations

Grounding the Drive System

Ground the System Subpanel

Ground Multiple Subpanels

Wiring Requirements

Wiring Guidelines

Wiring the Power Connectors

Wire the 24V Control Power Input Connector

Wire the Input Power Connector

Wiring the Digital Input Connectors

Wire the Safe Torque-off Connector

Wire the Digital Inputs Connector

Wiring Kinetix VP Motors

Motor Power Connections

Motor Brake Connections

Motor Feedback Connections

Apply the Single Motor-cable Shield Clamp

Wiring Other Allen-Bradley Motors and Actuators

Install the Kinetix 5500 Add-On Profile

Motor Power and Brake Connections

Motor Feedback Connections

Capacitor Module Connections

External Passive-shunt Resistor Connections

Ethernet Cable Connections

Menu Screens

Setup Screens

Startup Sequence

Configure the Drive

- Set the Network Parameters

Studio 5000 Logix Designer

- Kinetix 5500/5700 Add-On Profile

- Install the Kinetix 5500/5700 Add-On Profile

Configure the Logix5000 Controller

- Configure the Kinetix 5500 Drive

- Configure the Motion Group

Configure Feedback-only Axis Properties

Configure Induction-motor Frequency-control Axis Properties

- General and Motor Categories

- Basic Volts/Hertz Method

- Sensorless Vector Method

- Fan/Pump Volts/Hertz Method

Configure PM Motor Closed-loop Control Axis Properties

Download the Program

Apply Power to the Kinetix 5500 Drive

- Applying Power after Changing Input Voltage Range

Understanding Bus Sharing Group Configuration

- Bus Sharing Group Example

- Configure Bus-sharing Groups

Test and Tune the Axes

- Test the Axes

- Tune the Axes

Safety Precautions

Interpret Status Indicators

Display Interface

Fault Codes

SAFE FLT Fault Codes

Kinetix 5500 Drive Status Indicators

Kinetix 5500 Capacitor Module Status Indicators

General Troubleshooting

Logix5000 Controller and Drive Behavior

Before You Begin

Remove Power and All Connections

Remove the Servo Drive

Replace the Servo Drive

Start and Configure the Drive

Certification

Important Safety Considerations

Category 3 Requirements According to EN ISO 13849-1

Stop Category Definition

Performance Level (PL) and Safety Integrity Level (SIL)

Description of Operation

Troubleshoot the Safe Torque-off Function

Probability of Dangerous Failure Per Hour

Safe Torque-off Connector Data

Wire the Safe Torque-off Circuit

Safe Torque-off Wiring Requirements

Safe Torque-off Feature

Safe Torque-off Feature Bypass

Cascade the Safe Torque-off Signal

Safe Torque-off Specifications

Important Safety Considerations

Safety Application Requirements

Category 3 Requirements According to ISO 13849

Stop Category Definition

Performance Level (PL) and Safety Integrity Level (SIL)

Description of Operation

- STO State Reset

- Troubleshoot the Safe Torque-off Function

Probability of Dangerous Failure Per Hour

Safe Torque-off Feature

Out-of-Box State

- Out-of-Box State Support

Understanding Integrated Safety Drive Replacement

Replacing an Integrated Safety Drive in a GuardLogix System

- Signature Exists Enabled

- Replacement with Configure Always Enabled

Motion Direct Commands in Motion Control Systems

- Direct Commands

- Logix Designer Application Warning Messages

- Torque Permitted in a Multi-workstation Environment

- Warning Icon and Text in Axis Properties

- Functional Safety Considerations

Safe Torque-off Specifications

Interconnect Diagram Notes

Power Wiring Examples

- Single-axis Drive Wiring Examples

- Bus-sharing Wiring Examples

Shunt Resistor Wiring Example

Kinetix 5500 Drive and Motor/Actuator Wiring Examples

System Block Diagrams

Before You Begin

Configure Logix5000 Controller Communication

Inhibit Feedback Only Axis

Upgrade Firmware

Verify the Firmware Upgrade

Shared-bus Configurations

Shared AC Configurations

Shared DC Configurations

Shared AC/DC Configurations

Shared AC/DC Hybrid Configurations

Power Sharing Sizing Examples

- Shared DC Example

- Shared AC/DC Hybrid Example

- Shared AC/DC Example

Control Power Current Calculations

- Kinetix 5500 System Current Demand Example

Energy Calculations

Frequency Control Methods

Basic Volts/Hertz

Basic Volts/Hertz for Fan/Pump Applications

Sensorless Vector

Skip Speeds

- Multiple Skip Speeds

Flux Up

- Flux Up Attributes

- Configure the Flux Up Attributes

Current Regulator Loop Settings

Motor Category

- Motor Tests and Autotune Procedure

Selection of Motor Thermal Models

[Generic Motors](#)

[Thermally Characterized Motors](#)

[Speed Limited Adjustable Torque \(SLAT\)](#)

[SLAT Min Speed/Torque](#)

[SLAT Max Speed/Torque](#)

[SLAT Attributes](#)

[Configure the Axis for SLAT](#)

[Motor Overload Retention](#)

[Torque Proving](#)

[Torque Proving Attributes](#)

[Torque Proving Configuration](#)

[Torque Proving Current Example](#)

[Velocity Droop](#)

[Closed Loop Control](#)

[Frequency Control](#)

[Velocity Droop Attribute](#)

[Velocity Droop Configuration](#)

[Adaptive Tuning](#)

[EC Type - Examination Certificate](#)

[EU Declaration of Conformity](#)

[European Union Directives](#)

[CE Conformity](#)

[EMC Directive](#)

[Low Voltage Directive](#)

## Kinetix 5500 Servo Drives

Catalog Numbers 2198-H003-ERS, 2198-H008-ERS, 2198-H015-ERS, 2198-H025-ERS, 2198-H040-ERS, 2198-H070-ERS  
2198-H003-ERS2, 2198-H008-ERS2, 2198-H015-ERS2, 2198-H025-ERS2, 2198-H040-ERS2, 2198-H070-ERS2,  
2198-CAPMOD-1300



Original Instructions

# Important User Information

Read this document and the documents listed in the additional resources section about installation, configuration, and operation of this equipment before you install, configure, operate, or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Activities including installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice.

If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited.

Throughout this manual, when necessary, we use notes to make you aware of safety considerations.



**WARNING:** Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.



**ATTENTION:** Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequence.

**IMPORTANT**

Identifies information that is critical for successful application and understanding of the product.

Labels may also be on or inside the equipment to provide specific precautions.



**SHOCK HAZARD:** Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.



**BURN HAZARD:** Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.



**ARC FLASH HAZARD:** Labels may be on or inside the equipment, for example, a motor control center, to alert people to potential Arc Flash. Arc Flash will cause severe injury or death. Wear proper Personal Protective Equipment (PPE). Follow ALL Regulatory requirements for safe work practices and for Personal Protective Equipment (PPE).



	<b>Summary of Changes</b> .....	9
	<b>Preface</b>	
	About This Publication.....	11
	Audience.....	11
	Conventions Used in This Manual .....	11
	Additional Resources.....	11
	<b>Chapter 1</b>	
<b>Start</b>	About the Kinetix 5500 Servo Drive System.....	13
	Drive Hardware and Input Power Configurations .....	15
	Standalone Configurations.....	15
	Shared AC/DC Configurations .....	17
	Shared DC Common-bus Configurations .....	18
	Shared AC/DC Hybrid Configuration.....	19
	Motor Feedback and Feedback-only Configurations .....	20
	Typical Communication Configurations.....	21
	Linear Topology .....	21
	Ring Topology .....	22
	Star Topology.....	23
	Safe Torque-off Configurations .....	24
	Hardwired Safety Configuration.....	24
	Integrated Safety Configurations .....	25
	Catalog Number Explanation .....	27
	Agency Compliance .....	28
	<b>Chapter 2</b>	
<b>Plan the Kinetix 5500 Drive System Installation</b>	System Design Guidelines.....	30
	System Mounting Requirements.....	30
	Transformer Selection .....	31
	Circuit Breaker/Fuse Selection .....	31
	Enclosure Selection.....	34
	Minimum Clearance Requirements .....	35
	Electrical Noise Reduction.....	36
	Bonding Modules .....	36
	Bonding Multiple Subpanels .....	38
	Establishing Noise Zones.....	39
	Cable Categories for Kinetix 5500 Systems .....	40
	Noise Reduction Guidelines for Drive Accessories.....	41
	<b>Chapter 3</b>	
<b>Mount the Kinetix 5500 Drive System</b>	Determine Mounting Order .....	46
	Zero-stack Tab and Cutout .....	46
	Shared-bus Connection System.....	47

Single-axis Configurations.....	48
Multi-axis Configurations.....	48
Drill-hole Patterns.....	49
Mount Your Kinetix 5500 Drive.....	56

## Connector Data and Feature Descriptions

### Chapter 4

Kinetix 5500 Connector Data.....	58
Safe Torque-off Connector Pinout.....	59
Input Power Connector Pinouts.....	59
DC Bus and Shunt Resistor Connector Pinouts.....	59
Digital Inputs Connector Pinout.....	60
Ethernet Communication Connector Pinout.....	61
Motor Power, Brake, and Feedback Connector Pinouts.....	61
Motor Feedback Connector Pinout.....	62
Understanding Control Signal Specifications.....	62
Digital Inputs.....	62
Ethernet Communication Specifications.....	64
Motor Brake Circuit.....	64
Control Power.....	65
Feedback Specifications.....	66
Absolute Position Feature.....	66
Safe Torque-off Safety Features.....	67
Servo Drives with Hardwired Safety.....	67
Servo Drives with Integrated Safety.....	67

## Connect the Kinetix 5500 Drive System

### Chapter 5

Basic Wiring Requirements.....	70
Routing the Power and Signal Cables.....	70
Determine the Input Power Configuration.....	71
Grounded Power Configurations.....	71
Ungrounded Power Configurations.....	73
Remove the Grounding Screws in Select Power Configurations.....	74
Grounding the Drive System.....	76
Ground the System Subpanel.....	76
Ground Multiple Subpanels.....	77
Wiring Requirements.....	78
Wiring Guidelines.....	79
Wiring the Power Connectors.....	80
Wire the 24V Control Power Input Connector.....	80
Wire the Input Power Connector.....	81
Wiring the Digital Input Connectors.....	82
Wire the Safe Torque-off Connector.....	82
Wire the Digital Inputs Connector.....	83
Wiring Kinetix VP Motors.....	83
Motor Power Connections.....	84
Motor Brake Connections.....	85

Motor Feedback Connections .....	86
Apply the Single Motor-cable Shield Clamp .....	87
Wiring Other Allen-Bradley Motors and Actuators .....	88
Install the Kinetix 5500 Add-On Profile.....	89
Motor Power and Brake Connections.....	90
Motor Feedback Connections .....	94
Capacitor Module Connections.....	98
External Passive-shunt Resistor Connections .....	99
Ethernet Cable Connections.....	100

## Chapter 6

### Configure and Start the Kinetix 5500 Drive System

Understanding the Kinetix 5500 Display.....	102
Menu Screens .....	103
Setup Screens .....	104
Startup Sequence.....	105
Configure the Drive.....	106
Set the Network Parameters.....	106
Studio 5000 Logix Designer.....	106
Kinetix 5500/5700 Add-On Profile.....	107
Install the Kinetix 5500/5700 Add-On Profile.....	107
Configure the Logix5000 Controller .....	108
Configure the Kinetix 5500 Drive .....	113
Configure the Motion Group .....	123
Configure Feedback-only Axis Properties .....	124
Configure Induction-motor Frequency-control Axis Properties .....	125
General and Motor Categories.....	125
Basic Volts/Hertz Method .....	127
Sensorless Vector Method.....	129
Fan/Pump Volts/Hertz Method.....	132
Configure PM Motor Closed-loop Control Axis Properties.....	134
Download the Program.....	137
Apply Power to the Kinetix 5500 Drive .....	138
Applying Power after Changing Input Voltage Range.....	138
Understanding Bus Sharing Group Configuration .....	139
Bus Sharing Group Example.....	140
Configure Bus-sharing Groups .....	141
Test and Tune the Axes.....	143
Test the Axes .....	143
Tune the Axes.....	145

## Chapter 7

### Troubleshoot the Kinetix 5500 Drive System

Safety Precautions.....	149
Interpret Status Indicators.....	150
Display Interface .....	150
Fault Codes.....	150
SAFE FLT Fault Codes .....	156

Kinetix 5500 Drive Status Indicators .....	157
Kinetix 5500 Capacitor Module Status Indicators .....	158
General Troubleshooting .....	158
Logix5000 Controller and Drive Behavior .....	160

## Chapter 8

### Remove and Replace Servo Drives

Before You Begin .....	165
Remove and Replace Kinetix 5500 Servo Drives .....	166
Remove Power and All Connections .....	166
Remove the Servo Drive .....	167
Replace the Servo Drive .....	167
Start and Configure the Drive .....	168

## Chapter 9

### Kinetix 5500 Safe Torque-off - Hardwired Safety

Certification .....	169
Important Safety Considerations .....	169
Category 3 Requirements According to EN ISO 13849-1 .....	170
Stop Category Definition .....	170
Performance Level (PL) and Safety Integrity Level (SIL) .....	170
Description of Operation .....	170
Troubleshoot the Safe Torque-off Function .....	171
Probability of Dangerous Failure Per Hour .....	173
Safe Torque-off Connector Data .....	173
Wire the Safe Torque-off Circuit .....	174
Safe Torque-off Wiring Requirements .....	174
Safe Torque-off Feature .....	175
Safe Torque-off Feature Bypass .....	175
Cascade the Safe Torque-off Signal .....	176
Safe Torque-off Specifications .....	176

## Chapter 10

### Kinetix 5500 Safe Torque-off - Integrated Safety

Certification .....	177
Important Safety Considerations .....	178
Safety Application Requirements .....	178
Category 3 Requirements According to ISO 13849 .....	178
Stop Category Definition .....	179
Performance Level (PL) and Safety Integrity Level (SIL) .....	179
Description of Operation .....	179
STO State Reset .....	179
Troubleshoot the Safe Torque-off Function .....	180
Probability of Dangerous Failure Per Hour .....	181
Safe Torque-off Feature .....	181
Out-of-Box State .....	182
Out-of-Box State Support .....	182
Understanding Integrated Safety Drive Replacement .....	183
Replacing an Integrated Safety Drive in a GuardLogix System .....	184

	Replacement with Configure Only When No Safety Signature Exists Enabled .....	185
	Replacement with Configure Always Enabled. ....	189
	Motion Direct Commands in Motion Control Systems .....	191
	Understanding STO Bypass When Using Motion Direct Commands. ....	191
	Logix Designer Application Warning Messages .....	192
	Torque Permitted in a Multi-workstation Environment .....	194
	Warning Icon and Text in Axis Properties. ....	194
	Functional Safety Considerations. ....	196
	Safe Torque-off Specifications. ....	197
	<b>Appendix A</b>	
<b>Interconnect Diagrams</b>	Interconnect Diagram Notes .....	199
	Power Wiring Examples .....	200
	Single-axis Drive Wiring Examples. ....	200
	Bus-sharing Wiring Examples .....	202
	Shunt Resistor Wiring Example .....	204
	Kinetix 5500 Drive and Motor/Actuator Wiring Examples. ....	205
	System Block Diagrams .....	210
	<b>Appendix B</b>	
<b>Upgrade the Drive Firmware</b>	Before You Begin .....	214
	Configure Logix5000 Controller Communication .....	215
	Inhibit Feedback Only Axis .....	216
	Upgrade Firmware .....	217
	Verify the Firmware Upgrade .....	221
	<b>Appendix C</b>	
<b>Size Multi-axis Shared-bus Configurations</b>	Shared-bus Configurations. ....	223
	Shared AC Configurations .....	224
	Shared DC Configurations. ....	224
	Shared AC/DC Configurations .....	226
	Shared AC/DC Hybrid Configurations. ....	227
	Power Sharing Sizing Examples. ....	228
	Shared DC Example .....	228
	Shared AC/DC Hybrid Example .....	229
	Shared AC/DC Example. ....	230
	Control Power Current Calculations .....	230
	Kinetix 5500 System Current Demand Example .....	231
	Energy Calculations .....	232
	<b>Appendix D</b>	
<b>Motor Control Feature Support</b>	Frequency Control Methods .....	233
	Basic Volts/Hertz .....	234

Basic Volts/Hertz for Fan/Pump Applications .....	235
Sensorless Vector .....	236
Skip Speeds .....	237
Multiple Skip Speeds.....	238
Flux Up .....	239
Flux Up Attributes .....	240
Configure the Flux Up Attributes.....	241
Current Regulator Loop Settings .....	242
Motor Category.....	242
Motor Tests and Autotune Procedure.....	244
Selection of Motor Thermal Models .....	247
Generic Motors.....	247
Thermally Characterized Motors .....	248
Speed Limited Adjustable Torque (SLAT) .....	249
SLAT Min Speed/Torque.....	250
SLAT Max Speed/Torque.....	251
SLAT Attributes .....	251
Configure the Axis for SLAT.....	252
Motor Overload Retention.....	255
Torque Proving .....	256
Torque Proving Attributes .....	256
Torque Proving Configuration .....	257
Torque Proving Current Example.....	258
Velocity Droop.....	259
Closed Loop Control .....	259
Frequency Control .....	259
Velocity Droop Attribute .....	259
Velocity Droop Configuration.....	260
Adaptive Tuning .....	260

## **Appendix E**

### **EC Certifications**

EC Type - Examination Certificate .....	261
EU Declaration of Conformity .....	262
European Union Directives .....	267
CE Conformity .....	267
EMC Directive.....	267
Low Voltage Directive .....	267

<b>Index .....</b>	<b>269</b>
--------------------	------------

This manual contains new and updated information as indicated in the following table.

Topic	Page
Updated references to compatible Logix5000™ PAC controllers. Added compatibility with ControlLogix® 5580 controllers.	14, 24...26 and throughout
Added support for using 2090-CSxM1DG cables with Kinetix® 5500 servo drives.	14, 84, 86 and throughout
Updated fuse/CB tables by removing footnotes regarding UL approval.	31
Added footnote to v21 Kinetix 5500 AOP with link to v26 Kinetix 5500 AOP.	89
Added ControlLogix 5580 controller to Ethernet Cable Connections.	100
Added link and installation information for the Kinetix 5500/5700 Add-on Profile available with drive firmware 4.001.	107
Added Configure Feedback-only Axis Properties.	124
Added Configure Induction-motor Frequency-control Axis Properties with support for Basic Volts/Hz, Sensorless Vector, and Fan/Pump Volts/Hz methods available with drive firmware 4.001.	125
Updated Configure PM Motor Closed-loop Control Axis Properties with minor changes.	134
Updated Test the Axes with minor changes.	143
Added Tune Induction Motors.	147
Updated fault memory description to reflect 128 fault log.	150
Updated Appendix D with support information for new features available with drive firmware 4.001.	233...260

## Notes:



## About This Publication

This manual provides detailed installation instructions for mounting, wiring, and troubleshooting the Kinetix 5500 servo drives, and system integration for your drive and motor/actuator combination with a Logix5000 controller.

## Audience

This manual is intended for engineers or technicians directly involved in the installation and wiring of the Kinetix 5500 drives, and programmers directly involved in the operation, field maintenance, and integration of these drives with the EtherNet/IP™ communication module or controller.

If you do not have a basic understanding of Kinetix 5500 servo drives, contact your local Rockwell Automation sales representative for information on available training courses.

## Conventions Used in This Manual

These conventions are used throughout this manual:

- Bulleted lists such as this one provide information, not procedural steps.
- Numbered lists provide sequential steps or hierarchical information.
- Catalog number string 2198-Hxxx-ERSx is used when there's no need to distinguish between -ERS or -ERS2 servo drives.

Kinetix 5500 Drive Cat. No.	Description
2198-Hxxx-ERS	Kinetix 5500 drive with hardwired safe torque-off functionality
2198-Hxxx-ERS2	Kinetix 5500 drive with integrated safe torque-off functionality

## Additional Resources

These documents contain additional information concerning related products from Rockwell Automation.

**Table 1 - Additional Resources**

Resource	Description
Kinetix 5000 AC Line Filter Installation Instructions, publication <a href="#">2198-IN003</a>	Information on installing AC line filters designed for Kinetix 5500 and Kinetix 5700 servo drive systems.
Kinetix 5500 Capacitor Module Installation Instructions, publication <a href="#">2198-IN004</a>	Information on installing and wiring the Kinetix 5500 capacitor module.
Kinetix 5000 Shared-bus Connector Kit Installation Instructions, publication <a href="#">2198-IN005</a>	Information on installing shared-bus connector kits designed for Kinetix 5500 and Kinetix 5700 servo drive systems.
Hiperface-to-DSL Feedback Converter Kit Installation Instructions, publication <a href="#">2198-IN006</a>	Information on installing the Hiperface-to-DSL feedback converter kit.
Shunt Resistor Installation Instructions, publication <a href="#">2097-IN002</a>	Information on installing and wiring Bulletin 2097 shunt resistors.
System Design for Control of Electrical Noise Reference Manual, publication <a href="#">GMC-RM001</a>	Information, examples, and techniques designed to minimize system failures caused by electrical noise.
EMC Noise Management DVD, publication GMC-SP004	
Kinetix Motion Control Selection Guide, publication <a href="#">GMC-SG001</a>	Overview of Kinetix servo drives, motors, actuators, and motion accessories designed to help make initial decisions for the motion control products best suited for your system requirements.

**Table 1 - Additional Resources (continued)**

Resource	Description
Kinetix 5500 Drive Systems Design Guide, publication <a href="#">GMC-RM009</a>	System design guide to select the required (drive specific) drive module, power accessory, feedback connector kit, and motor cable catalog numbers for your Kinetix 5500 drive and Kinetix VP motor motion control system.
Kinetix Rotary Motion Specifications Technical Data, publication <a href="#">GMC-TD001</a>	Product specifications for Kinetix VP (Bulletin VPL, VPF, and VPS), MP-Series™ (Bulletin MPL, MPM, MPF, and MPS), Kinetix 6000M (Bulletin MDF, TL-Series™, RDD-Series™, and HPK-Series™) rotary motors.
Kinetix Linear Motion Specifications Technical Data, publication <a href="#">GMC-TD002</a>	Product specifications for MP-Series (Bulletin MPAS ballscrew, MPAR, and MPAL) and LDAT-Series linear actuators.
Kinetix Servo Drives Specifications Technical Data, publication <a href="#">GMC-TD003</a>	Product specifications for Kinetix Integrated Motion over the EtherNet/IP network, Integrated Motion over sercos interface, EtherNet/IP networking, and component servo drive families.
Kinetix Motion Accessories Specifications Technical Data, publication <a href="#">GMC-TD004</a>	Product specifications for Bulletin 2090 motor and interface cables, low-profile connector kits, drive power components, and other servo drive accessory items.
Rockwell Automation® Configuration and Selection Tools website <a href="http://www.rockwellautomation.com/en/e-tools">http://www.rockwellautomation.com/en/e-tools</a>	Motion Analyzer application analysis software for drive/motor sizing.
	Online product selection and system configuration tools, including AutoCAD (DXF) drawings.
Rockwell Automation Product Certification, website <a href="http://www.rockwellautomation.com/products/certification">http://www.rockwellautomation.com/products/certification</a>	For declarations of conformity (DoC) currently available from Rockwell Automation.
Integrated Motion on the EtherNet/IP Network Reference Manual, publication <a href="#">MOTION-RM003</a>	Information on the AXIS_CIP_DRIVE attributes and the configuration software control modes and methods.
Integrated Motion on the EtherNet/IP Network Configuration and Startup User Manual, publication <a href="#">MOTION-UM003</a>	Information on configuring and troubleshooting your ControlLogix and CompactLogix™ EtherNet/IP network modules.
GuardLogix 5570 Controllers User Manual, publication <a href="#">1756-UM022</a>	Information on designing, installing, programming, or troubleshooting control systems that use GuardLogix® 5570 controllers.
GuardLogix 5570 Controller Systems Safety Reference Manual, publication <a href="#">1756-RM099</a>	Information for development, operation, or maintenance of a GuardLogix 5570 controller-based safety system that uses the Studio 5000 Logix Designer® application.
Safety Products Catalog website <a href="http://www.ab.com/catalogs">http://www.ab.com/catalogs</a>	Information regarding Allen-Bradley® safety products, including safety relays, light curtain, and gate interlock applications.
ControlFLASH Firmware Upgrade Kit User Manual, publication <a href="#">1756-QS105</a>	For ControlFLASH™ information not specific to any drive family.
National Electrical Code, published by the National Fire Protection Association of Boston, MA	An article on wire sizes and types for grounding electrical equipment.
Rockwell Automation Industrial Automation Glossary, publication <a href="#">AG-7.1</a>	A glossary of industrial automation terms and abbreviations.

You can view or download publications at <http://www.rockwellautomation.com/literature>. To order paper copies of technical documentation, contact your local Allen-Bradley distributor or Rockwell Automation sales representative.

## Start

Use this chapter to become familiar with the design and installation requirements for Kinetix 5500 drive systems.

Topic	Page
About the Kinetix 5500 Servo Drive System	13
Drive Hardware and Input Power Configurations	15
Motor Feedback and Feedback-only Configurations	20
Typical Communication Configurations	21
Safe Torque-off Configurations	24
Catalog Number Explanation	27
Agency Compliance	28

## About the Kinetix 5500 Servo Drive System

The Kinetix 5500 servo drives are designed to provide a Kinetix Integrated Motion solution for your drive and motor/actuator application.

**Table 2 - Kinetix 5500 Drive System Overview**

Drive System Component	Cat. No.	Description
Kinetix 5500 Servo Drives	2198-Hxxx-ERS	200V-class (single-phase or three-phase) and 400V-class (three-phase) drives operate in standalone and multi-axis shared AC, shared DC, shared AC/DC, and shared AC/DC hybrid configurations. Modules are zero-stacked from drive-to-drive and use the shared-bus connection system to extend power in multi-axis configurations. Safe torque-off via hardwired (STO) connector.
	2198-Hxxx-ERS2	Same power structures with standalone and multi-axis bus-sharing capability. Safe torque-off via the EtherNet/IP network.
Kinetix 5500 Capacitor Module	2198-CAPMOD-1300	Use for energy storage and/or to improve performance in applications producing regenerative energy and requiring shorter duty cycles (1360 µf). Modules are zero-stacked side-by-side with servo drives and use the shared-bus connection system to extend power.
Shared-bus Connector Kits	2198-H040-x-x	Input wiring connectors and DC bus T-connector for frame 1 and 2 servo drives.
	2198-H070-x-x	Input wiring connectors and DC bus T-connector for frame 3 servo drives.
Feedback Connector Kit	2198-KITCON-DSL	Replacement feedback connector kit with 2-pin connector plug and grounding plate inside the connector housing.
Hiperface to DSL Converter Kit	2198-H2DCK (series B or later)	Use the 2198-H2DCK (series B or later) Hiperface-to-DSL feedback converter kit with MP-Series (Bulletin MPL, MPM, MPF, and MPS) rotary motors, MP-Series (Bulletin MPAS ballscrew, MPAR, MPAL) linear actuators, and LDAT-Series linear thrusters.
I/O Connector Kits	2198-KITCON-IOSP	Replacement I/O connector kit (spring clamp) for I/O (IOD) connector.
	2198-KITCON-IOSC	Replacement I/O connector kit (screw terminal) for I/O (IOD) connector.
Connector Sets	2198-KITCON-PWR40	Replacement connector set, 40 A, for frame 1 and frame 2 drives.
	2198-KITCON-PWR70	Replacement connector set, 70 A, for frame 3 drives.
	2198-KITCON-CAP1300	Replacement connector set, 40 A, for capacitor module.

**Table 2 - Kinetix 5500 Drive System Overview**

Drive System Component	Cat. No.	Description
Logix5000 Controller Platform	Bulletin 1769	Integrated Motion on the EtherNet/IP network in CompactLogix 5370 controllers and Integrated Safety in Compact GuardLogix 5370 controllers. Linear, device-level ring (DLR), and star topology is supported.
	1756-EN2T module 1756-EN2TR module 1756-EN3TR module	EtherNet/IP network communication modules for use with ControlLogix 5570, ControlLogix 5580, and GuardLogix 5570 controllers. Linear, device-level ring (DLR), and star topology is supported.
	N/A	Studio 5000 Logix Designer application, version 21.00 or later, provides support for programming, commissioning, and maintaining the CompactLogix and ControlLogix controller families. Version 24.00 or later is required for 2198-Hxxx-ERS2 servo drives.
Rotary Servo Motors	VPL-Axxxx, VPL-Bxxxx VPF-Axxxx, VPF-Bxxxx VPS-Bxxxx	Compatible rotary motors include 200V and 400V-class Kinetix VP (Bulletin VPL, VPF, and VPS).
	MP-Series	Compatible rotary motors include 200V and 400V-class MP-Series (Bulletin MPL, MPM, MPF, and MPS) when used with the Hiperface-to-DSL feedback converter kit.
Linear Actuators	MP-Series LDAT-Series	Compatible linear actuators include 200V and 400V-class MP-Series (Bulletin MPAS ballscrew, MPAR, and MPAI) and LDAT-Series when used with the Hiperface-to-DSL feedback converter kit.
Induction Motors	N/A	Induction motors with open loop frequency control are also supported.
Cables	2090-CSxM1DF-xxAxxx	Bulletin 2090 flying-lead single-cable for motor power, feedback, and 24V DC brake power with Kinetix VP motors. Designed specifically for Kinetix 5500 servo drives.
	2090-CSxM1DG-xxAxxx	Bulletin 2090 flying-lead single cable for motor power, feedback, and 24V DC brake power with Kinetix VP motors. Designed with longer leads than 2090-CSxM1DF cables to accommodate Kinetix 5500 or Kinetix 5700 drive families.
	2090-CFBM7DF-CEAxxx	Bulletin 2090 motor feedback cables for MP-Series motors and actuators.
	2090-CPxM7DF-xxAxxx	Bulletin 2090 motor power/brake cables for MP-Series motors and actuators.
	1585J-M8CBJM-x	Ethernet cables are available in standard lengths. Shielded cable is recommended.
AC Line Filters	2198-DB08-F 2198-DB20-F 2198-DB42-F	Bulletin 2198 three-phase AC line filters are required to meet CE and available for use in all Kinetix 5500 drive systems.
24V DC Power Supply	1606-XLxxx	Bulletin 1606 24V DC power supply for control circuitry, digital inputs, safety, and motor brake.
External Shunt Resistors	2097-R6 and 2097-R7	Bulletin 2097 external passive shunt resistors for when the drive's internal shunt capability is exceeded.


## Drive Hardware and Input Power Configurations

Typical Kinetix 5500 systems include single-phase and three-phase standalone configurations, three-phase shared AC, shared AC/DC, shared DC, and shared AC/DC hybrid configurations.

### Standalone Configurations


In these examples, a single standalone drive is shown with and without the Bulletin 2198 capacitor module.

**Figure 1 - Typical Kinetix 5500 Standalone Installation**

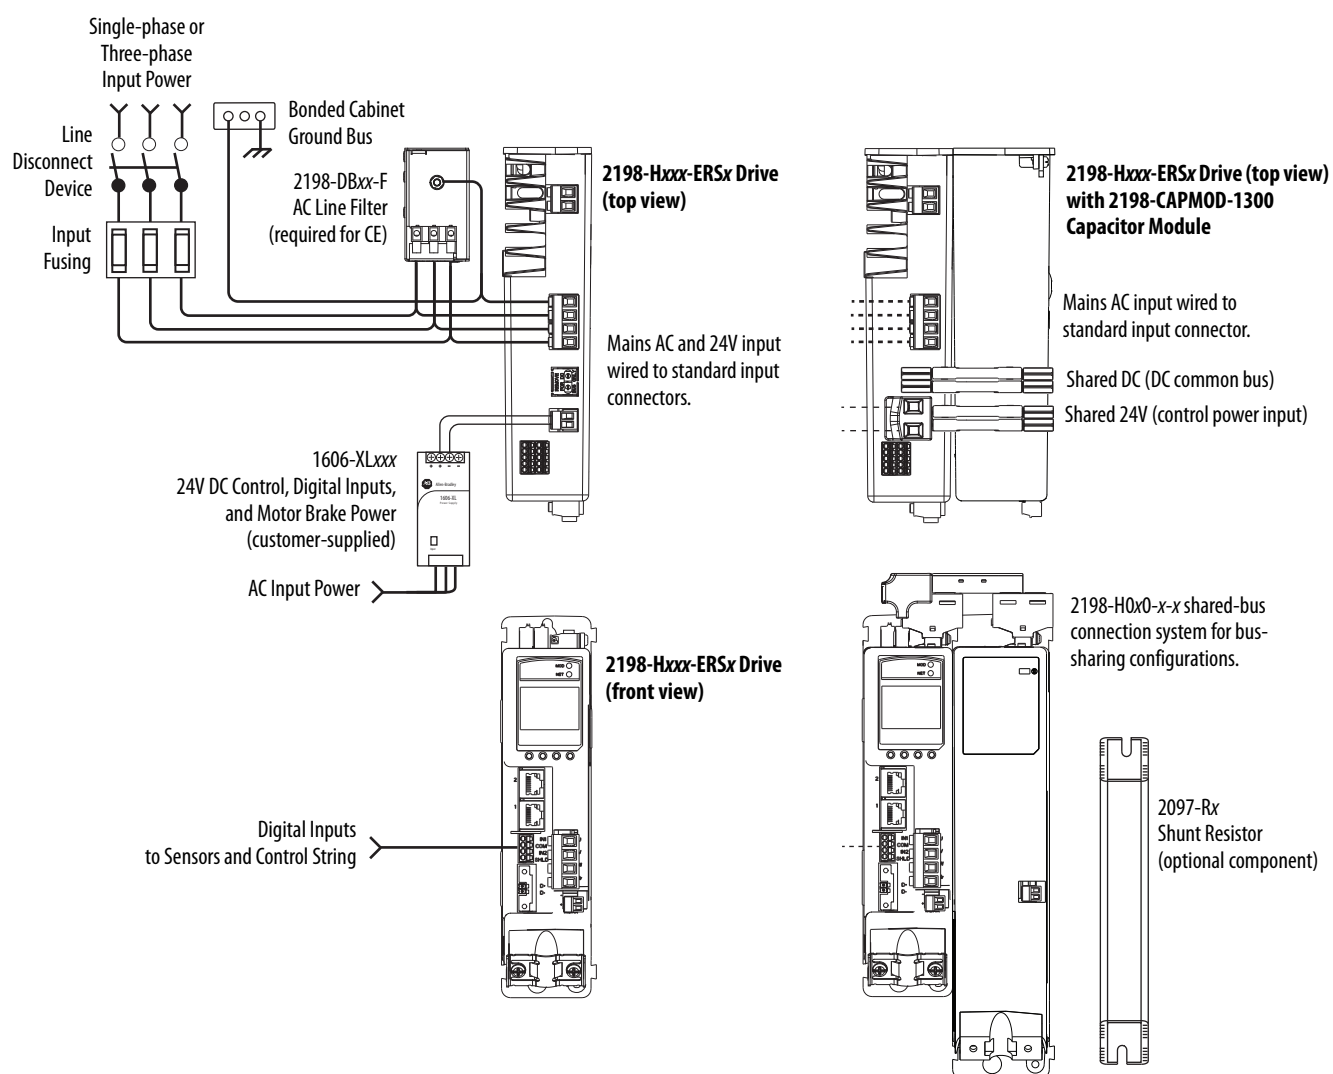

In this example, three-phase AC power and 24V control power is shared in a multi-axis configuration. All drives must have the same power rating (catalog number).

**Figure 2 - Typical Shared AC Installations**

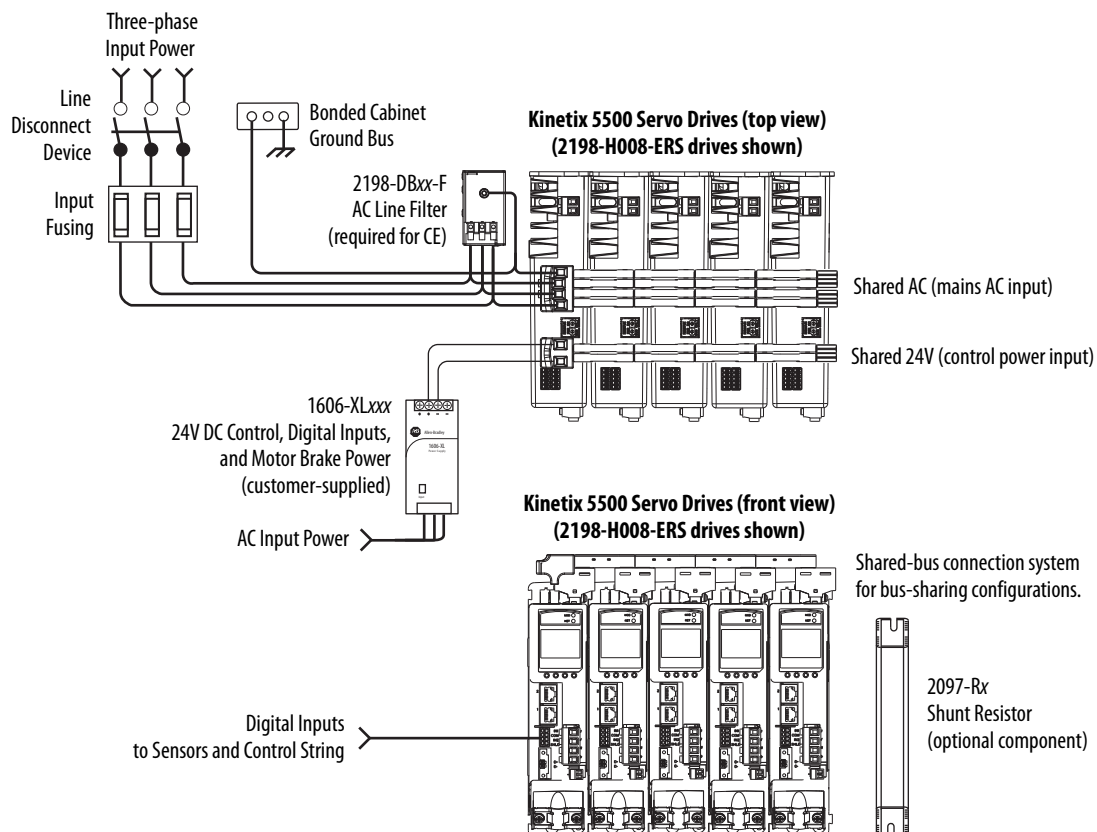


**IMPORTANT** In shared AC configurations, all drives must have the same power rating. Shared AC configurations do not support Bulletin 2198 capacitor modules.

## Shared AC/DC Configurations

In this example, three-phase AC input power, 24V control power, and DC-bus power are shared in a multi-axis configuration. All drives must be the same power rating (catalog number).

**Figure 3 - Typical Shared AC/DC Installations**

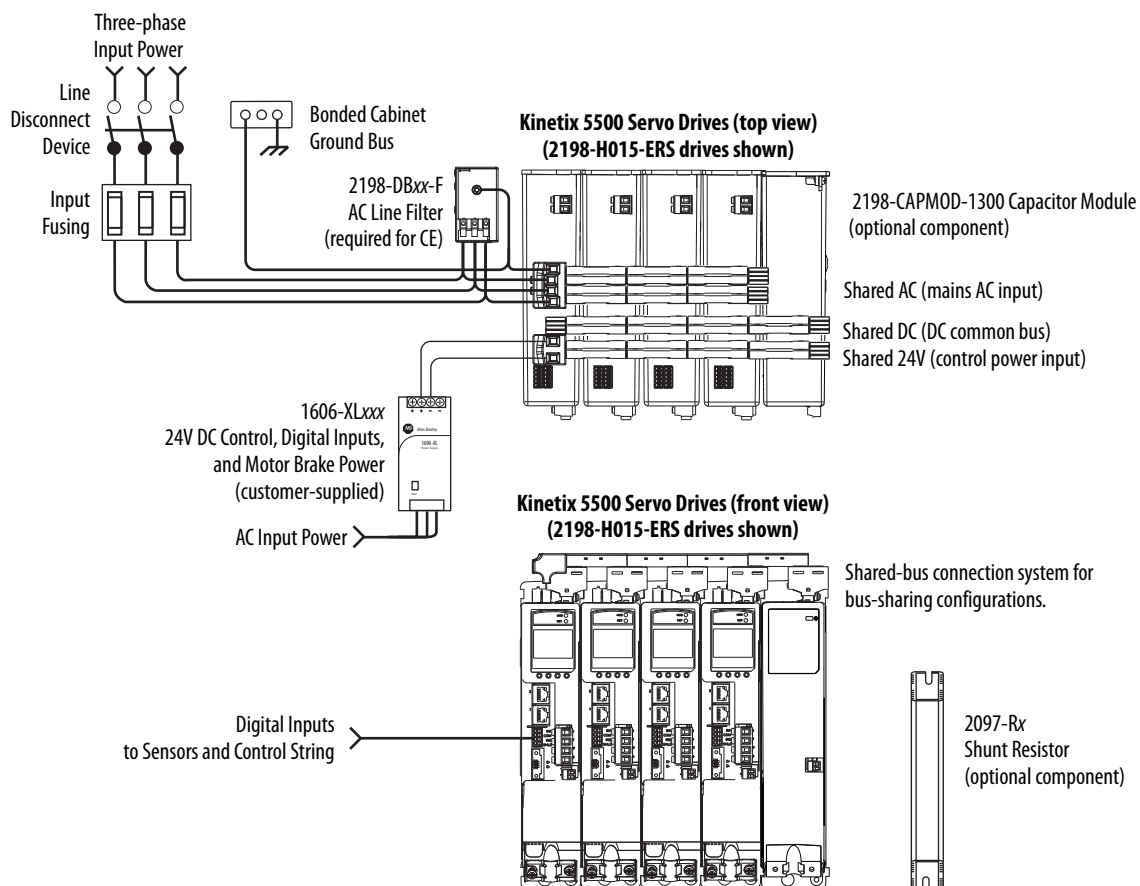


**IMPORTANT** In shared AC/DC configurations, all drives must have the same power rating (catalog number).

## Shared DC Common-bus Configurations

In this multi-axis example, the common-bus leader (sourcing) drive receives three-phase AC input power and supplies DC power to common-bus follower (sinking) drives. The common-bus leader-drive power rating is greater than or equal to the power rating of each follower drive.

**Figure 4 - Typical Shared DC Common-bus Installations**

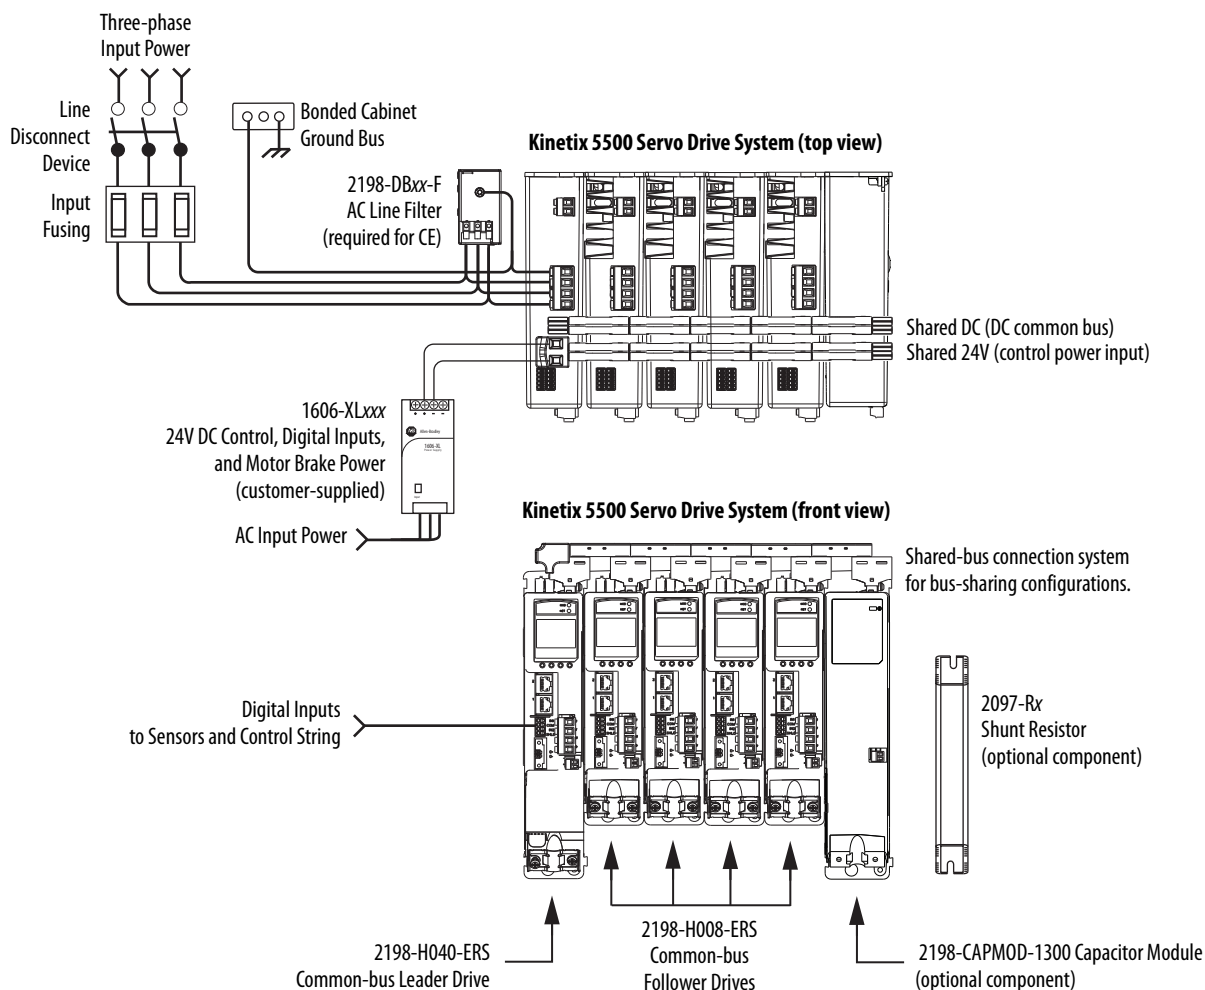

### IMPORTANT


In shared DC common-bus configurations, the leader drive power rating must be greater than or equal to the power rating of the follower drives.



## Shared AC/DC Hybrid Configuration

In this multi-axis example, three-phase AC input power is supplied to two converter drives. The converter drive ratings must be the same, and greater than or equal to the power ratings of the inverter drives. This parallel converter configuration increases the DC-bus power supplied to the inverter drives.

**Figure 5 - Typical Shared AC/DC Bus Hybrid Installations**

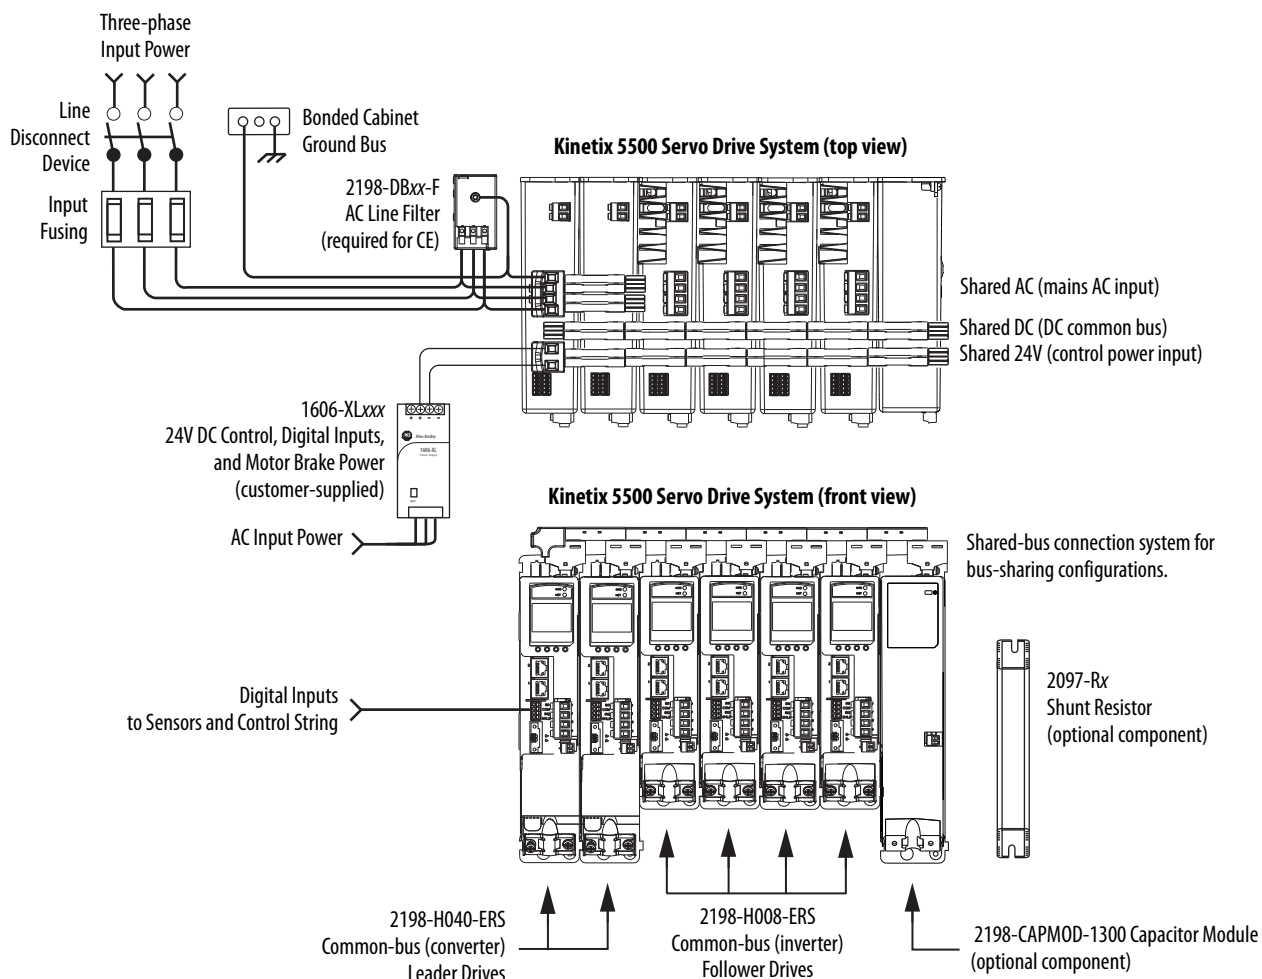


### IMPORTANT

In shared AC/DC hybrid configuration, the converter drives must have the same power rating and must be greater than or equal to the power ratings of the inverter drives.

## Motor Feedback and Feedback-only Configurations

Feedback connections are made at the 2-pin motor feedback (MF) connector. These examples illustrate how you can use the Bulletin 2198 connector kits for making these connections. To see motor power and brake connections, refer to [Chapter 5](#) on [page 69](#).

Figure 6 - Feedback Configuration Examples

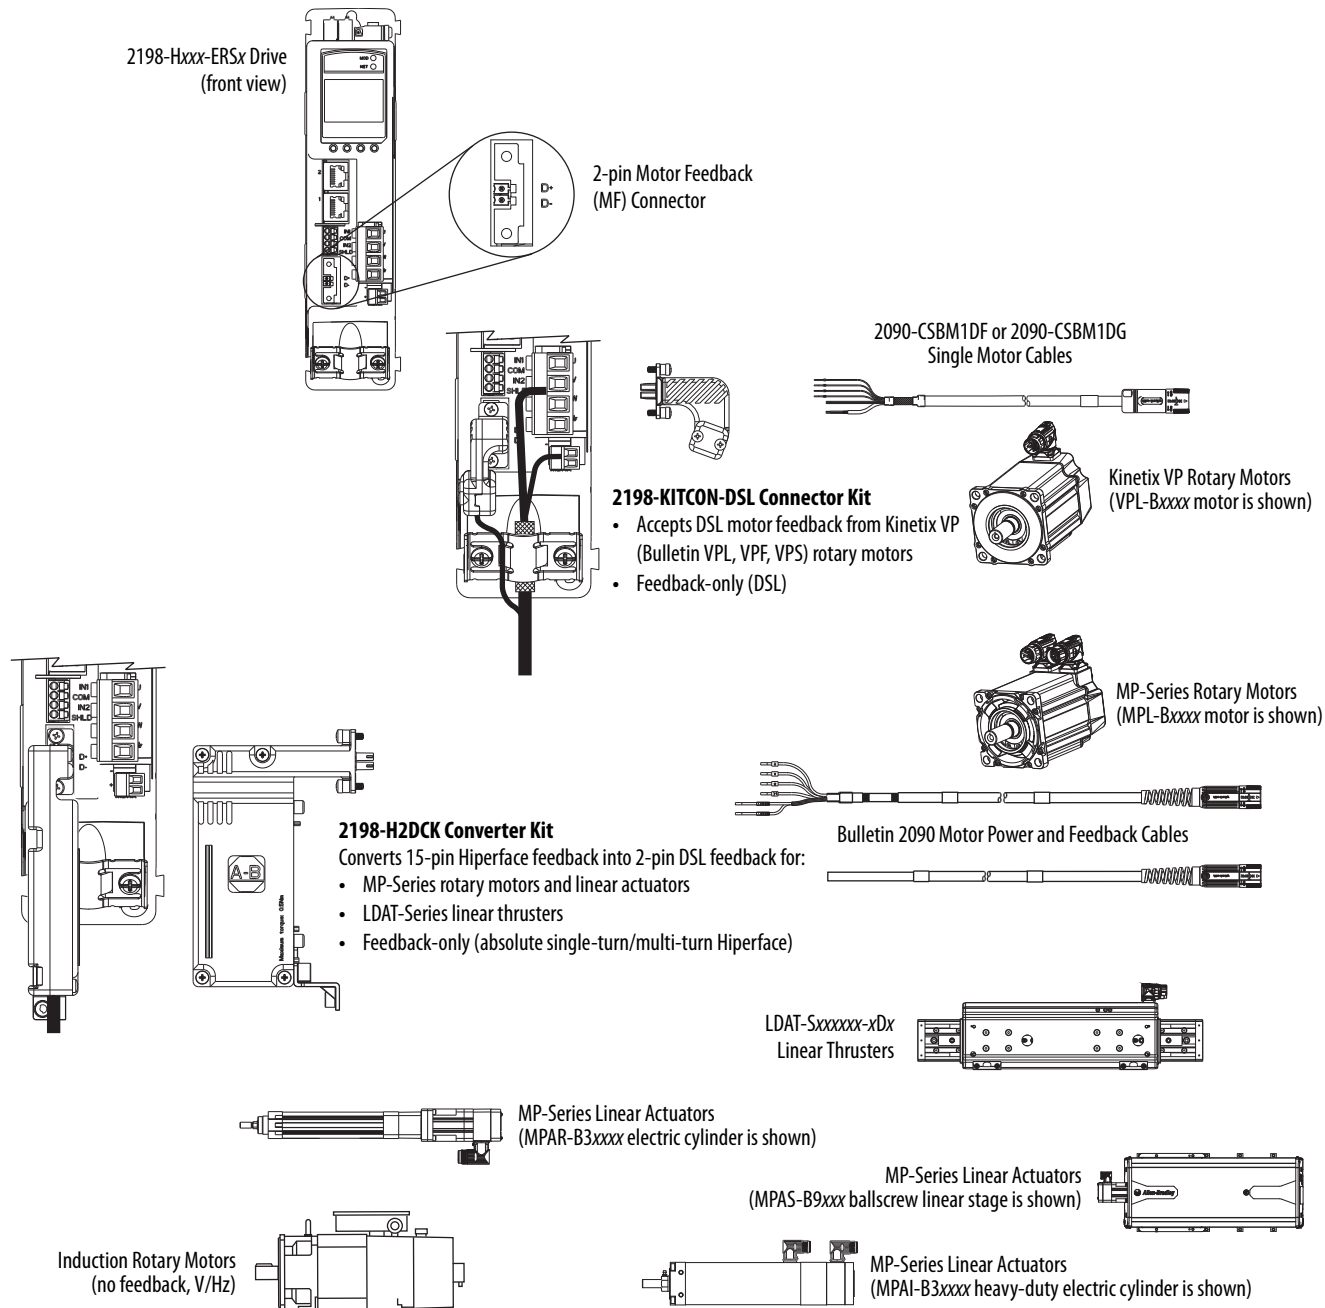

### IMPORTANT

In 2198-H2DCK converter kit applications, you can replace the 2090-CPxM7DF power/brake cable with a 2090-CSBM1DF single motor cable (and reuse the 2090-CFBM7DF feedback cable) to increase the maximum cable length to 50 m (164 ft). However, this applies to only 18 and 14 AWG single cables. 2090-CSxM1DF-10Axxx (10 AWG) cables do not support this 50 m (164 ft) option.

## Typical Communication Configurations

The Kinetix 5500 drives support any Ethernet topology including linear, ring, and star by using ControlLogix, GuardLogix, or CompactLogix controllers.

These examples feature the CompactLogix 5370 programmable automation controllers (Bulletin 1769) with support for Integrated Motion over the EtherNet/IP network. Controller features include the following:


- Supports up to 16 axes
- Supports up to 48 devices in linear configurations
- Dual-port connectivity to support device-level ring (DLR) topology

Refer to CompactLogix Controllers Specifications Technical Data, publication [1769-TD005](#), for more information on CompactLogix 5370 L1, L2, and L3 controllers.

### Linear Topology

In this example, all devices are connected in linear topology. The Kinetix 5500 drives include dual-port connectivity, however, if any device becomes disconnected, all devices downstream of that device lose communication. Devices without dual ports must include the 1783-ETAP module or be connected at the end of the line.

**Figure 7 - Kinetix 5500 Linear Communication Installation**

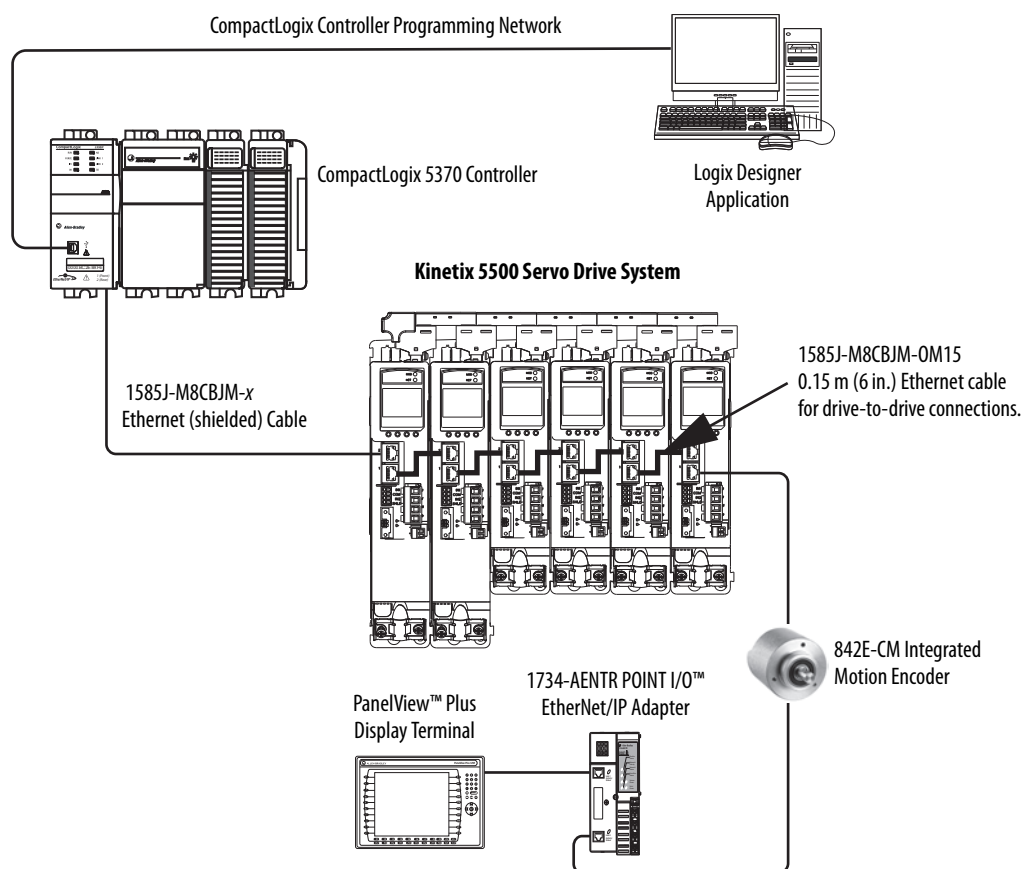


## Ring Topology

In this example, the devices are connected by using ring topology. If only one device in the ring is disconnected, the rest of the devices continue to communicate. For ring topology to work correctly, a device level ring (DLR) supervisor is required (for example, the Bulletin 1783 ETAP device). DLR is an ODVA standard. For more information, refer to the EtherNet/IP Embedded Switch Technology Application Guide, publication [ENET-AP005](#).

Devices without dual ports, for example the display terminal, require a 1783-ETAP module to complete the network ring.

**Figure 8 - Kinetix 5500 Ring Communication Installation**

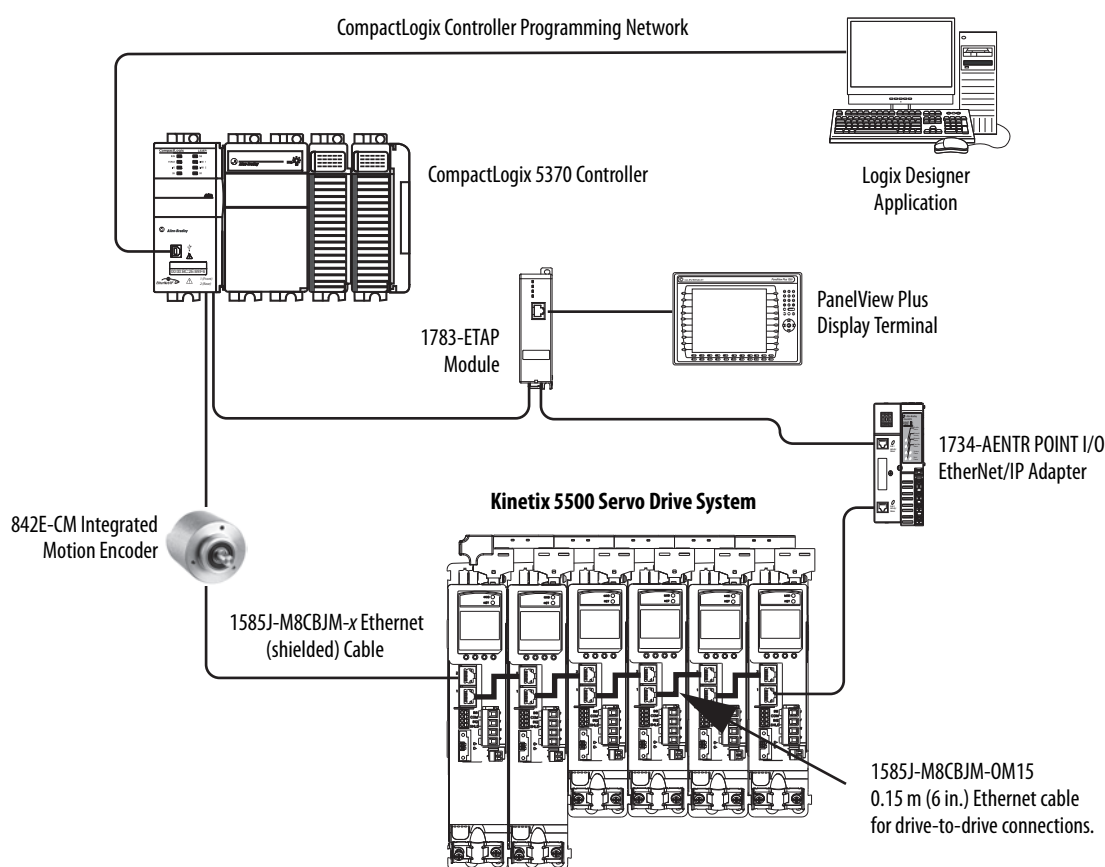


## Star Topology

In this example, the devices are connected by using star topology. Each device is connected directly to the switch.

Kinetix 5500 drives have dual ports, so linear topology is maintained from drive-to-drive, but Kinetix 5500 drives and other devices operate independently. The loss of one device does not impact the operation of other devices.

**Figure 9 - Kinetix 5500 Star Communication Installation**

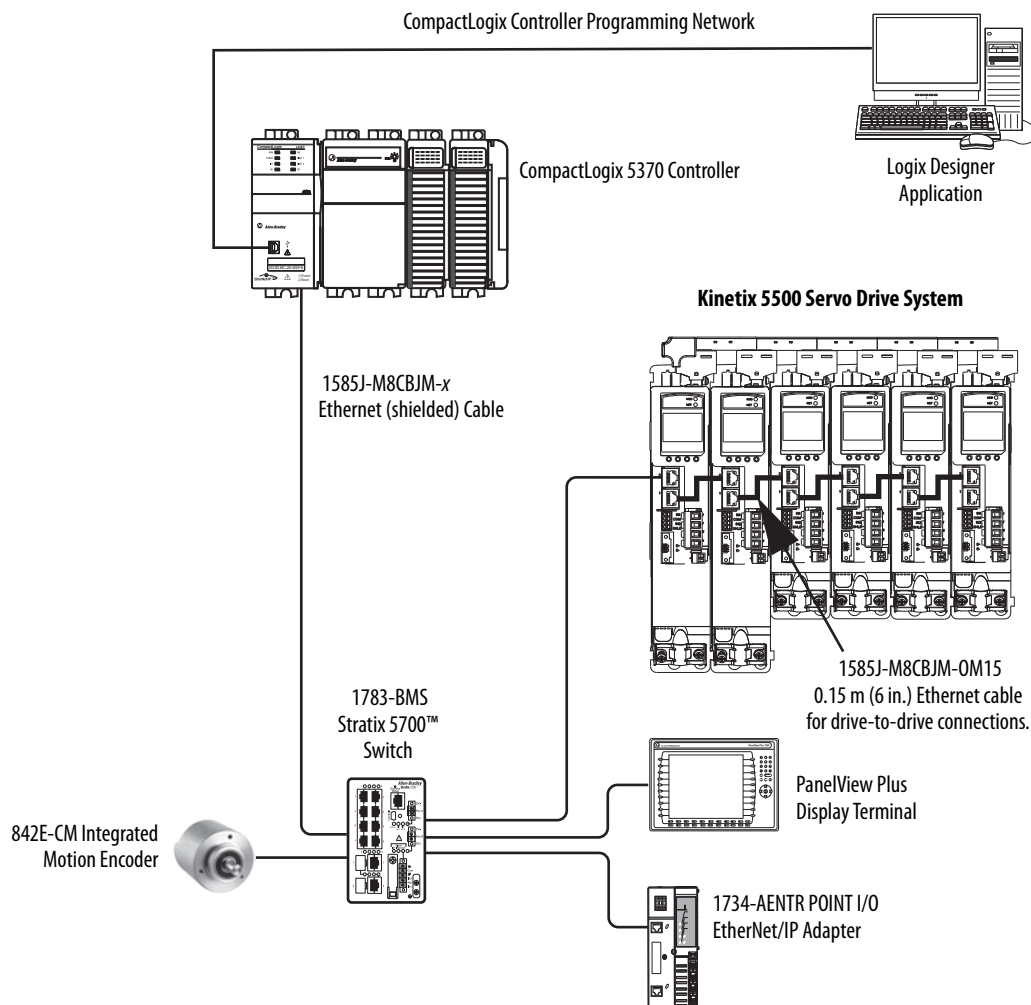


## Safe Torque-off Configurations

Kinetix 5500 servo drives are available with safe torque-off via hardwired connections or integrated over the EtherNet/IP network. These examples illustrate the safe torque-off configuration options.

### Hardwired Safety Configuration

The 2198-Hxxx-ERS drives use the safe torque-off (STO) connector for wiring external safety devices and cascading hardwired safety connections from one drive to another.

**Figure 10 - Safe Torque-off (hardwired) Configuration**

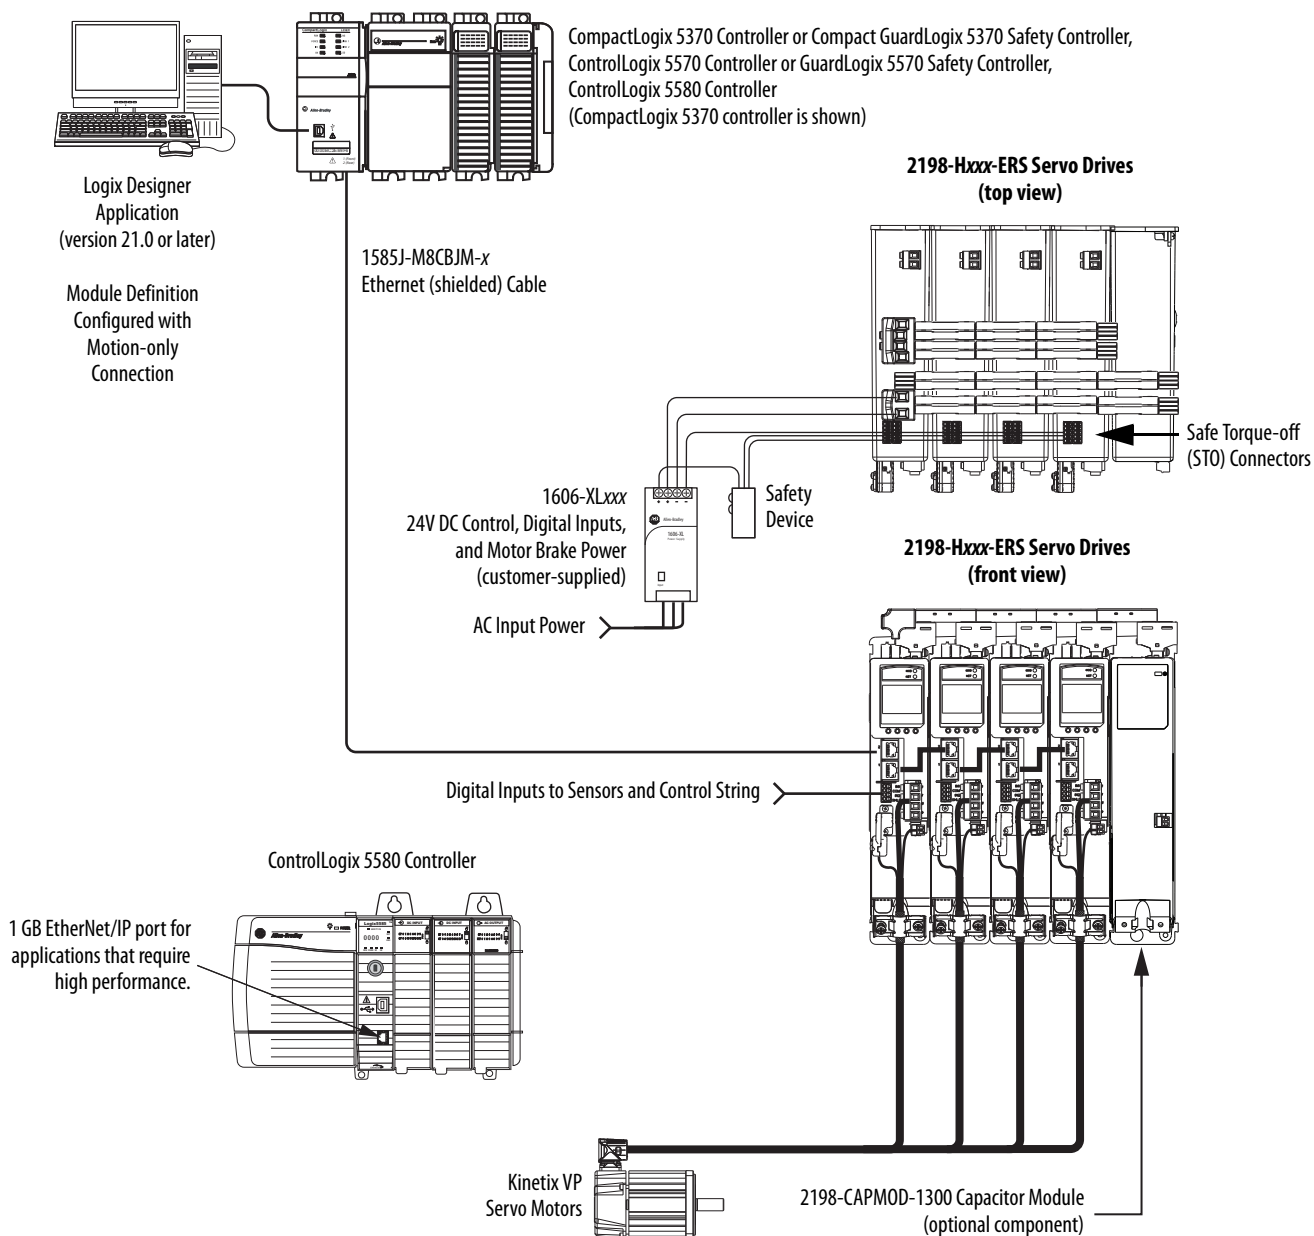

## Integrated Safety Configurations


The GuardLogix 5570 or Compact GuardLogix 5370 safety controller issues the safe torque-off (STO) command over the EtherNet/IP network and the 2198-Hxxx-ERS2 integrated safety drive executes the command.

In this example, a single GuardLogix safety controller makes a Motion and Safety connection with the 2198-Hxxx-ERS2 integrated safety drives.

### IMPORTANT

If only one controller is used in an application with Motion and Safety connections, the controller must be a GuardLogix 5570 or Compact GuardLogix 5370 safety controller.

**Figure 11 - Motion and Safety Configuration (single controller)**

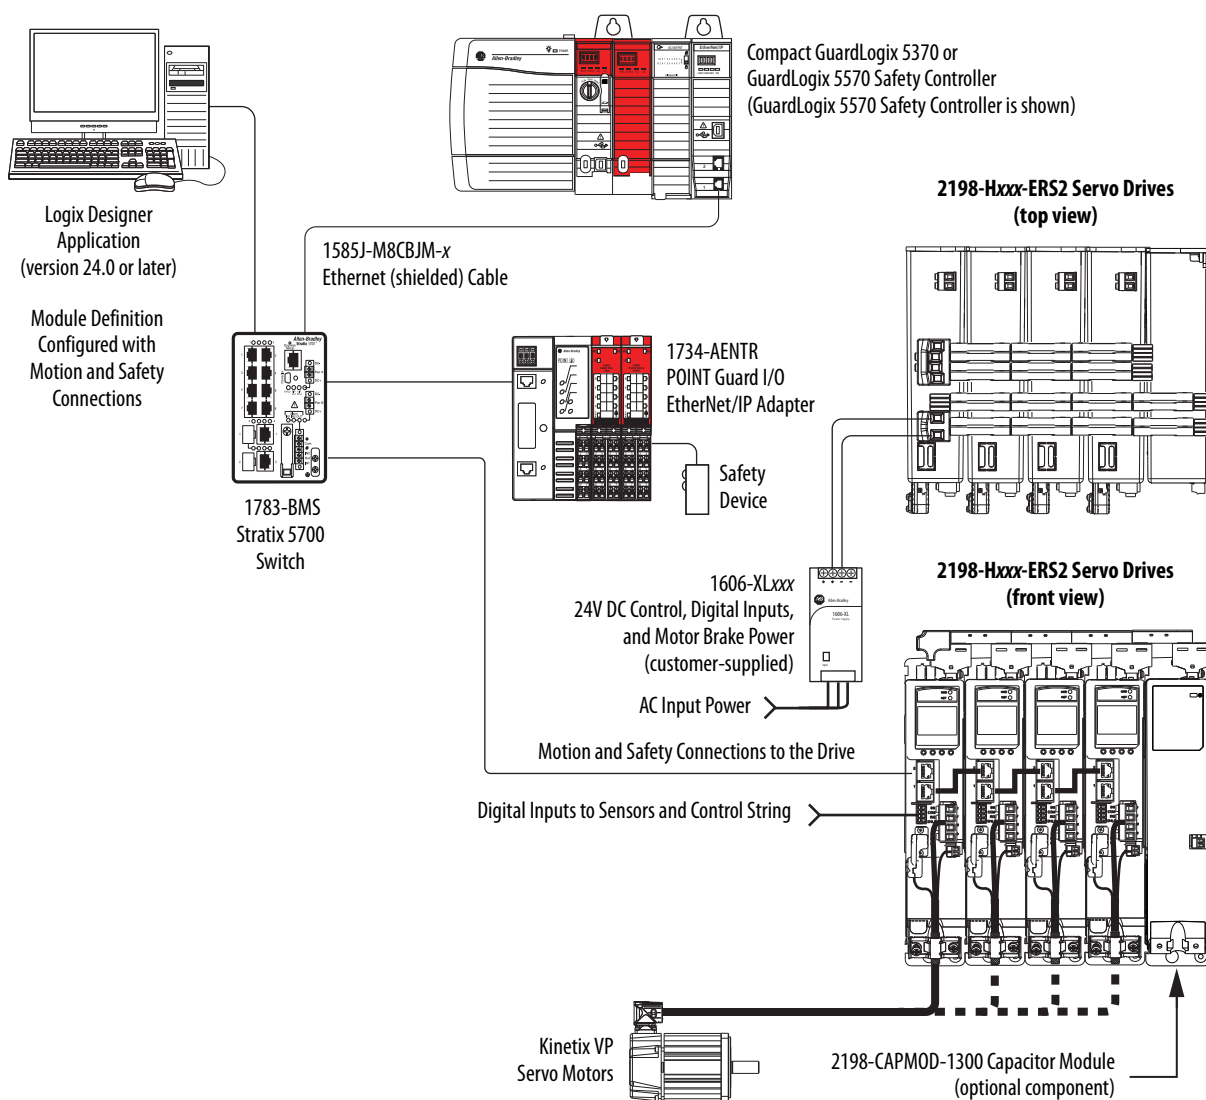


In this example, a non-safety controller makes the Motion-only connection and a separate GuardLogix safety controller makes the Safety-only connection with 2198-Hxxx-ERS2 integrated safety drives.

**IMPORTANT**

If two controllers are used in an application with Motion-only and Safety-only connections, the Safety-only connection must be a GuardLogix 5570 or Compact GuardLogix 5370 safety controller and the Motion-only connection must be a ControlLogix 5570 or CompactLogix 5370 controller.

**Figure 12 - Motion and Safety Configuration (multi-controller)**

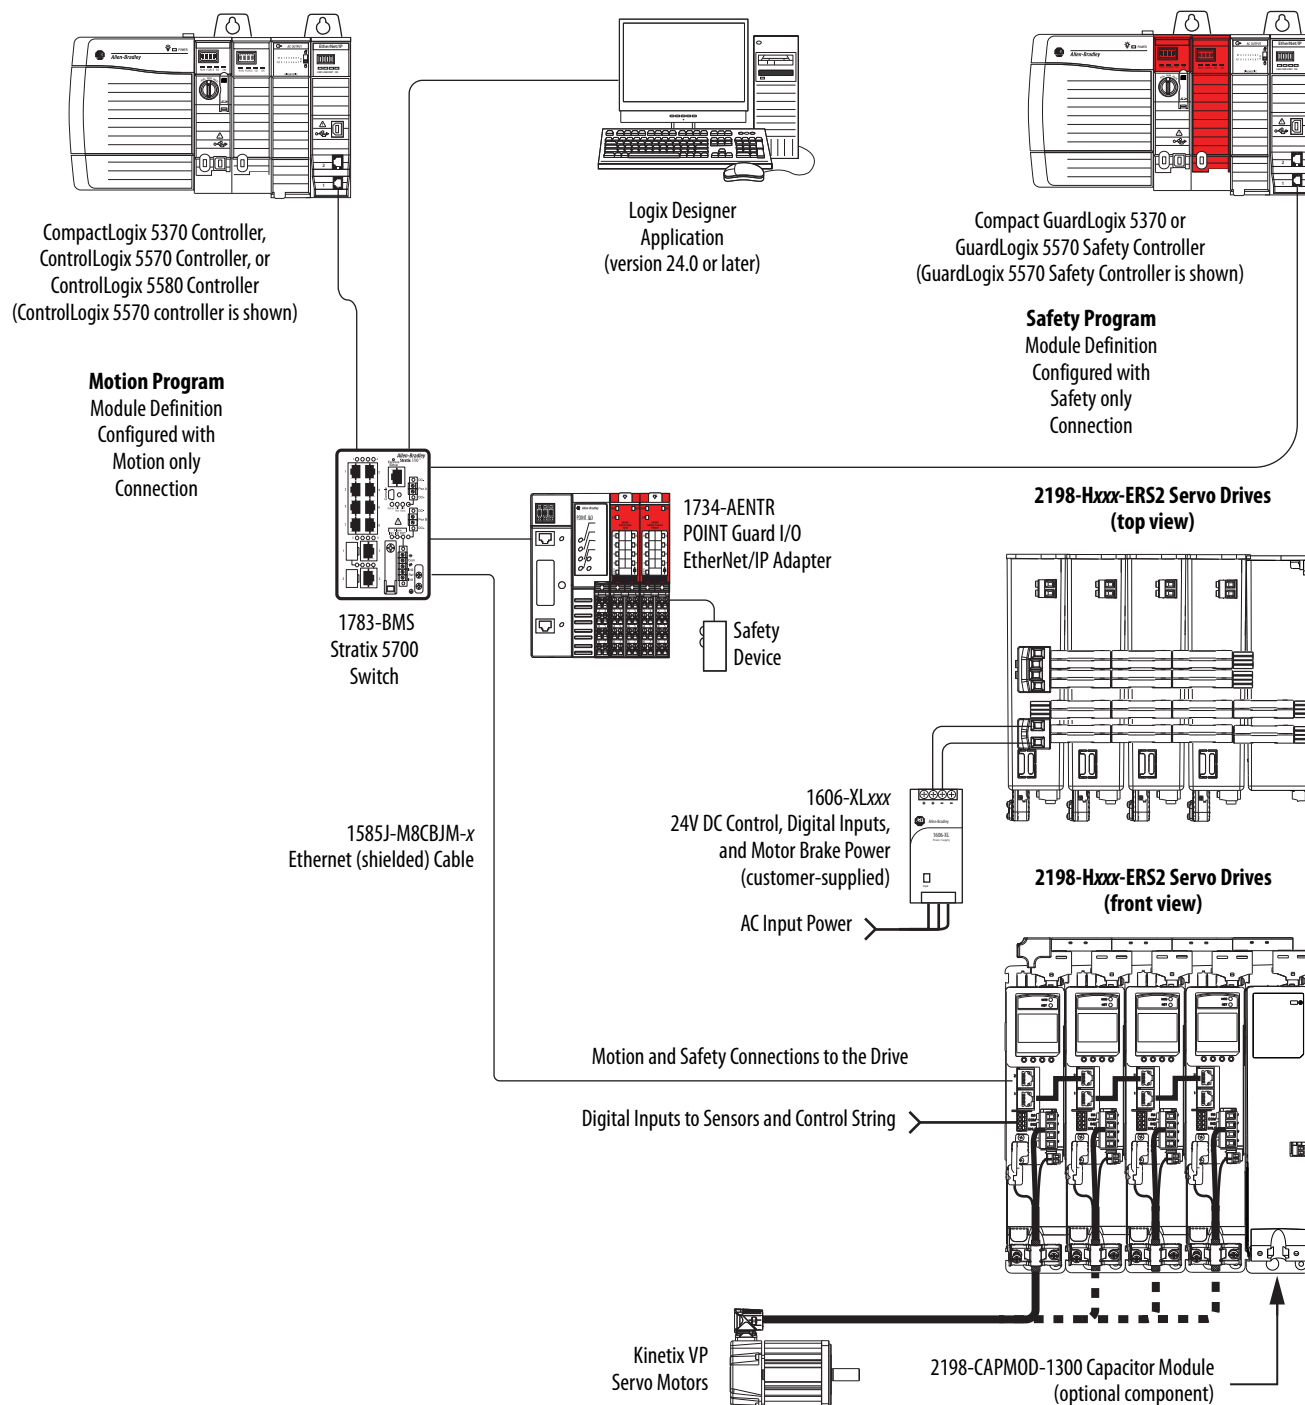



## Catalog Number Explanation

Kinetix 5500 drive catalog numbers and performance descriptions.

**Table 3 - Kinetix 5500 Servo Drive Catalog Numbers**

Drive Cat. No. (hardwired STO)	Drive Cat. No. (integrated STO)	Frame Size	Input Voltage	Continuous Output Power kW	Continuous Output Current A 0-pk
2198-H003-ERS	2198-H003-ERS2	1	195...264V rms, single-phase 195...264V rms, three-phase 324...528V rms, three-phase	0.2 kW 0.3 kW 0.6 kW	1.4
2198-H008-ERS	2198-H008-ERS2			0.5 kW 0.8 kW 1.6 kW	3.5
2198-H015-ERS	2198-H015-ERS2	2	195...264V rms, three-phase 324...528V rms, three-phase	1.0 kW 1.5 kW 3.2 kW	7.1
2198-H025-ERS	2198-H025-ERS2			2.4 kW 5.1 kW	11.3
2198-H040-ERS	2198-H040-ERS2			4.0 kW 8.3 kW	18.4
2198-H070-ERS	2198-H070-ERS2	3		7.0 kW 14.6 kW	32.5

**Table 4 - Capacitor Module Catalog Number**

Capacitor Module Cat. No.	Frame Size	Rated Voltage	Capacitance
2198-CAPMOD-1300	2	650V DC, nom	1360 $\mu$ F, min

**Table 5 - Shared-bus Connector Kit Catalog Numbers**

Kit Cat. No.	Frame Size	Application	Description
2198-H040-ADP-IN	Frame 1 or 2	First drive	<ul style="list-style-type: none"> <li>Mains AC input wiring connector</li> <li>24V DC input wiring connector</li> <li>DC bus T-connector</li> </ul>
2198-H040-A-T	Next drive is... Frame 1 drives: 2198-H003-ERSx 2198-H008-ERSx Frame 2 drives: 2198-H015-ERSx 2198-H025-ERSx 2198-H040-ERSx	AC sharing only	AC bus T-connector
2198-H040-D-T		DC sharing only	DC bus T-connector
2198-H040-P-T		Control power sharing only	Control power T-connector
2198-H040-AD-T		AC and DC bus sharing	AC and DC bus T-connectors
2198-H040-AP-T		AC and control power sharing	AC and control power T-connectors
2198-H040-DP-T		DC and control power sharing	DC and control power T-connectors
2198-H040-ADP-T		AC, DC, and control power sharing	AC, DC, and control power T-connectors
2198-H070-ADP-IN	Frame 3 drive: 2198-H070-ERSx	First drive	<ul style="list-style-type: none"> <li>Mains AC input wiring connector</li> <li>24V DC input wiring connector</li> <li>DC bus T-connector</li> </ul>
2198-H070-A-T	Next drive is... Frame 3 drives: 2198-H070-ERSx	AC sharing only	AC bus T-connector
2198-H070-D-T		DC sharing only	DC bus T-connector
2198-H070-P-T		Control power sharing only	Control power T-connector
2198-H070-AD-T		AC and DC bus sharing	AC and DC bus T-connectors
2198-H070-AP-T		AC and control power sharing	AC and control power T-connectors
2198-H070-DP-T		DC and control power sharing	DC and control power T-connectors
2198-H070-ADP-T		AC, DC, and control power sharing	AC, DC, and control power T-connectors

## Agency Compliance

If this product is installed within the European Union and has the CE mark, the following regulations apply.



**ATTENTION:** Meeting CE requires a grounded system, and the method of grounding the AC line filter and drive must match. Failure to do this renders the filter ineffective and can cause damage to the filter. For grounding examples, refer to [Grounded Power Configurations](#) on [page 71](#).

For more information on electrical noise reduction, refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#).

To meet CE requirements, these requirements apply:

- Install an AC line filter (catalog number 2198-DBxx-F) for input power as close to the Kinetix 5500 drive as possible.
- Bond drive, capacitor module, and line filter grounding screws by using a braided ground strap as shown in [Figure 42 on page 76](#).
- Use Bulletin 2090 single motor cables with Kinetix VP servo motors. Use Bulletin 2090 motor power/brake and feedback cables for other compatible Allen-Bradley motors and actuators.
- Combined motor cable length for all axes on the same DC bus must not exceed 250 m (820 ft). Drive-to-motor cables must not exceed 50 m (164 ft); however, use of continuous-flex cable and 2198-H2DCK converter kit limits the maximum length.

**Table 6 - Drive-to-Motor Maximum Cable Length**

Kinetix 5500 Servo Drive Cat. No.	Kinetix VP Servo Motors		Other Compatible Rotary Motors and Linear Actuators <sup>(1)</sup>
	Standard (non-flex) Cables Cat. No. 2090-CSxM1DF-xxAAxx m (ft)	Continuous-flex Cables Cat. No. 2090-CSBM1DF-xxAFxx m (ft)	Bulletin 2090 Motor/Actuator Cables <sup>(2)</sup> Cat. No. 2090-CxxM7DF m (ft)
2198-H003-ERSx 2198-H008-ERSx	50 (164)	30 (98.4)	20 (65.6)
2198-H015-ERSx 2198-H025-ERSx 2198-H040-ERSx	50 (164)		
2198-H070-ERSx	50 (164)		

(1) Requires use of the 2198-H2DCK Hiperface-to-DSL (series B or later) feedback converter kit.

(2) The 20 m (65.6 ft) limitation is attributed to the 2090-CPxM7DF power/brake cable. In 2198-H2DCK converter kit applications, you can replace the 2090-CPxM7DF power/brake cable with a 2090-CSBM1DF or 2090-CSBM1DG single motor cable (and reuse the 2090-CFBM7DF feedback cable) to increase the maximum cable length to 50 m (164 ft). Applies to only 18 and 14 AWG single cables. 2090-CSxM1DF-10Axxx (10 AWG) cables and any other 2090-CSxM1DF/DG cables with M40 or M58 connectors do not support this 50 m (164 ft) option.

- Install the Kinetix 5500 system inside an approved enclosure. Run input power wiring in conduit (grounded to the enclosure) outside of the enclosure. Separate signal and power cables.
- Segregate input power wiring from control wiring and motor cables.

Refer to Appendix A on [page 199](#) for input power wiring and drive/motor interconnect diagrams.

## Plan the Kinetix 5500 Drive System Installation

This chapter describes system installation guidelines used in preparation for mounting your Kinetix 5500 drive components.

Topic	Page
System Design Guidelines	30
Electrical Noise Reduction	36



**ATTENTION:** Plan the installation of your system so that you can perform all cutting, drilling, tapping, and welding with the system removed from the enclosure. Because the system is of the open type construction, be careful to keep metal debris from falling into it. Metal debris or other foreign matter can become lodged in the circuitry and result in damage to the components.

---

## System Design Guidelines

Use the information in this section when designing your enclosure and planning to mount your system components on the panel.

For on-line product selection and system configuration tools, including AutoCAD (DXF) drawings of the product, refer to <http://www.rockwellautomation.com/en/c-tools>.

## System Mounting Requirements

- To comply with UL and CE requirements, the Kinetix 5500 drive systems must be enclosed in a grounded conductive enclosure offering protection as defined in standard EN 60529 (IEC 529) to IP54 such that they are not accessible to an operator or unskilled person. A NEMA 4X enclosure exceeds these requirements providing protection to IP66.
- The panel you install inside the enclosure for mounting your system components must be on a flat, rigid, vertical surface that won't be subjected to shock, vibration, moisture, oil mist, dust, or corrosive vapors in accordance with protection class IP20 (EN 60529) and pollution degree 2 (EN 61800-5-1).
- Size the drive enclosure so as not to exceed the maximum ambient temperature rating. Consider heat dissipation specifications for all drive components.
- Combined motor power cable length for all axes on the same DC bus must not exceed 250 m (820 ft). Drive-to-motor cables must not exceed 50 m (164 ft), however use of continuous-flex cable and 2198-H2DCK converter kit limits the maximum length. Refer to [Table 6](#) on [page 28](#) for specifications by frame size.

---

<b>IMPORTANT</b>	System performance was tested at these cable length specifications. These limitations also apply when meeting CE requirements.
------------------	--------------------------------------------------------------------------------------------------------------------------------

---

- Ethernet cable must be shielded and cables connecting drive-to-drive, drive-to-controller, or drive-to-switch must not exceed 100 m (328 ft).
- Registration and digital input cables greater than 30 m (98.4 ft) must be shielded.
- Segregate input power wiring from control wiring and motor cables.
- Use high-frequency (HF) bonding techniques to connect the modules, enclosure, machine frame, and motor housing, and to provide a low-impedance return path for high-frequency (HF) energy and reduce electrical noise.

Bond drive, capacitor module, and line filter grounding screws by using a braided ground strap as shown in [Figure 42 on page 76](#).

Refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#), to better understand the concept of electrical noise reduction.

## Transformer Selection

The servo drive does not require an isolation transformer for three-phase input power. However, a transformer can be required to match the voltage requirements of the drive to the available service.

To size a transformer for the main AC power inputs, refer to the Kinetix 5500 power specifications in the Kinetix Servo Drives Technical Data, publication [GMC-TD003](#).

---

<b>IMPORTANT</b>	When using an autotransformer, make sure that the phase to neutral/ground voltage does not exceed the input voltage ratings of the drive.
------------------	-------------------------------------------------------------------------------------------------------------------------------------------

---



---

<b>IMPORTANT</b>	Use a form factor of 1.5 for three-phase power (where form factor is used to compensate for transformer, drive module, and motor losses, and to account for utilization in the intermittent operating area of the torque speed curve).
------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

---



---

<b>IMPORTANT</b>	150 KVA, max and 3% impedance, min
------------------	------------------------------------

---



---

<b>EXAMPLE</b>	Sizing a transformer to the voltage requirements of this drive: 2198-H040-ERSx = 8.4 kW = 12.6 KVA transformer.
----------------	--------------------------------------------------------------------------------------------------------------------

---

## Circuit Breaker/Fuse Selection

The Kinetix 5500 drives use internal solid-state motor short-circuit protection and, when protected by suitable branch circuit protection, are rated for use on a circuit capable of delivering up to 200,000 A (fuses) and 65,000 A (circuit breakers).

Refer to [Power Wiring Examples](#), on [page 200](#), for the wiring diagram.



**ATTENTION:** Do not use circuit protection devices on the output of an AC drive as an isolating disconnect switch or motor overload device. These devices are designed to operate on sine wave voltage and the drive's PWM waveform does not allow it to operate properly. As a result, damage to the device occurs.

---

### Standalone Drive Systems

Kinetix 5500 Drives			UL Applications	IEC (non-UL) Applications
Drive Cat. No.	Drive Voltage, nom	Phase	Bussmann Fuses Cat. No.	Molded Case CB Cat. No.
2198-H003-ERSx	240V	Single-phase	KTK-R-2	140U-D6D2-B10
	240/480V	Three-phase	KTK-R-3	140U-D6D3-B20
2198-H008-ERSx	240V	Single-phase	KTK-R-5	140U-D6D2-B20
	240/480V	Three-phase	KTK-R-7	140U-D6D3-B60
2198-H015-ERSx	240V	Single-phase	KTK-R-10	140U-D6D2-B80
	240/480V	Three-phase	KTK-R-15	140U-D6D3-C12
2198-H025-ERSx	240/480V	Three-phase	KTK-R-20	140U-D6D3-C20
2198-H040-ERSx	240/480V	Three-phase	KTK-R-25	140U-D6D3-C25
2198-H070-ERSx	240/480V	Three-phase	LPJ-35SP (class J)	N/A

### Shared DC (common-bus) Drive Systems

Kinetix 5500 Drives		UL Applications	IEC (non-UL) Applications
Drive Cat. No.	Drive Voltage (three-phase) nom	Bussmann Fuses Cat. No.	Molded Case CB Cat. No.
2198-H003-ERSx	240/480V	KTK-R-10	N/A
2198-H008-ERSx	240/480V	KTK-R-10	N/A
2198-H015-ERSx	240/480V	KTK-R-15	140U-D6D3-C15
2198-H025-ERSx	240/480V	KTK-R-20	140U-D6D3-C20
2198-H040-ERSx	240/480V	KTK-R-25	140U-D6D3-C25
2198-H070-ERSx	240/480V	LPJ-35SP	N/A

*Shared AC Drive Systems*

Kinetix 5500 Drives		UL Applications				IEC (non-UL) Applications			
Drive Cat. No.	Drive Voltage, (three-phase) nom	Bussmann Fuses Cat. No.				Molded Case CB Cat. No.			
		2 Axes	3 Axes	4 Axes	5 Axes	2 Axes	3 Axes	4 Axes	5 Axes
2198-H003-ERSx	240/480V	KTK-R-15				N/A			
2198-H008-ERSx	240/480V	KTK-R-15				N/A			
2198-H015-ERSx	240/480V	KTK-R-20	KTK-R-25	N/A		140U-D6D3-C15	140U-D6D3-C20	N/A	
2198-H025-ERSx	240/480V	KTK-R-30		N/A		140U-D6D3-C25	140U-D6D3-C30	N/A	
2198-H040-ERSx	240/480V	LPJ-35SP	LPJ-45SP	N/A		N/A			
2198-H070-ERSx	240/480V	LPJ-60SP	N/A			N/A			

*Shared AC/DC and Hybrid Systems*

Kinetix 5500 Drives		UL Applications							IEC (non-UL) Applications						
Drive Cat. No.	Drive Voltage, (three-phase) nom	Bussmann Fuse Cat. No.							Molded Case CB Cat. No.						
		2 Axes	3 Axes	4 Axes	5 Axes	6 Axes	7 Axes	8 Axes	2 Axes	3 Axes	4 Axes	5 Axes	6 Axes	7 Axes	8 Axes
2198-H003-ERSx	240/480V	KTK-R-10					KTK-R-15		N/A						
2198-H008-ERSx	240/480V	KTK-R-15				KTK-R-20			N/A						
2198-H015-ERSx	240/480V	KTK-R-20			N/A				140U-D6D3-C15		140U-D6D3-C20		N/A		
2198-H025-ERSx	240/480V	KTK-R-30			N/A				140U-D6D3-C20		140U-D6D3-C30		N/A		
2198-H040-ERSx	240/480V	KTK-R-30	LPJ-45SP	LPJ-50SP	N/A				140U-D6D3-C30		N/A				
2198-H070-ERSx	240/480V	LPJ-50SP	N/A					N/A							

## Enclosure Selection

This example is provided to assist you in sizing an enclosure for your Kinetix 5500 drive system. You need heat dissipation data from all components planned for your enclosure to calculate the enclosure size (refer to [Table 7](#)).

With no active method of heat dissipation (such as fans or air conditioning) either of the following approximate equations can be used.

Metric	Standard English
$A = \frac{0.38Q}{1.8T - 1.1}$	$A = \frac{4.08Q}{T - 1.1}$
Where T is temperature difference between inside air and outside ambient (°C), Q is heat generated in enclosure (Watts), and A is enclosure surface area (m <sup>2</sup> ). The exterior surface of all six sides of an enclosure is calculated as	Where T is temperature difference between inside air and outside ambient (°F), Q is heat generated in enclosure (Watts), and A is enclosure surface area (ft <sup>2</sup> ). The exterior surface of all six sides of an enclosure is calculated as
$A = 2dw + 2dh + 2wh$	$A = (2dw + 2dh + 2wh) / 144$
Where d (depth), w (width), and h (height) are in meters.	Where d (depth), w (width), and h (height) are in inches.

If the maximum ambient rating of the Kinetix 5500 drive system is 50 °C (122 °F) and if the maximum environmental temperature is 20 °C (68 °F), then T=30. In this example, the total heat dissipation is 416 W (sum of all components in enclosure). So, in the equation below, T=30 and Q=416.

$$A = \frac{0.38 (416)}{1.8 (30) - 1.1} = 2.99 \text{ m}^2$$

In this example, the enclosure must have an exterior surface of at least 2.99 m<sup>2</sup>. If any portion of the enclosure is not able to transfer heat, do not include that value in the calculation.

Because the minimum cabinet depth to house the Kinetix 5500 system (selected for this example) is 300 mm (11.8 in.), the cabinet needs to be approximately 1500 x 700 x 300 mm (59.0 x 27.6 x 11.8 in.) HxWxD.

$$1.5 \times (0.300 \times 0.70) + 1.5 \times (0.300 \times 2.0) + 1.5 \times (0.70 \times 2.0) = 3.31 \text{ m}^2$$

Because this cabinet size is considerably larger than what is necessary to house the system components, it can be more efficient to provide a means of cooling in a smaller cabinet. Contact your cabinet manufacturer for options available to cool your cabinet.




**Table 7 - Power Dissipation Specifications**

Kinetix 5500 Drive Cat. No.	Frame Size	Usage as % of Rated Power Output (watts)				
		20%	40%	60%	80%	100%
2198-H003-ERSx	1	12	25	37	50	62
2198-H008-ERSx						
2198-H015-ERSx	2	40	80	120	160	200
2198-H025-ERSx						
2198-H040-ERSx						
2198-H070-ERSx	3	64	128	192	256	320

## Minimum Clearance Requirements

This section provides information to assist you in sizing your cabinet and positioning your Kinetix 5500 drive:


- Additional clearance is required for cables and wires or the shared-bus connection system connected to the top of the drive.
- Additional clearance is required if other devices are installed above and/or below the drive and have clearance requirements of their own.
- Additional clearance left and right of the drive is required when mounted adjacent to noise sensitive equipment or clean wire ways.
- The recommended minimum cabinet depth is 300 mm (11.81 in.).

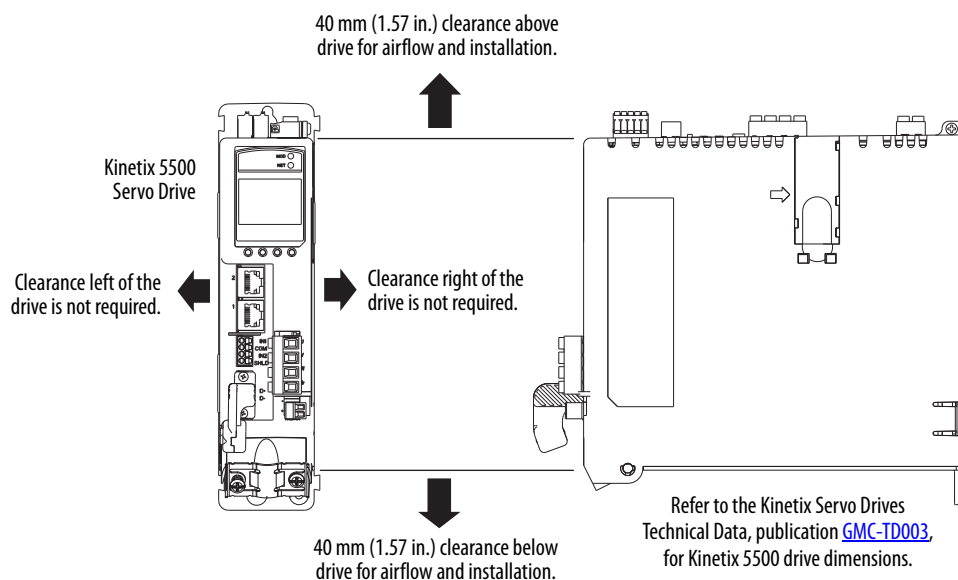**Figure 13 - Minimum Clearance Requirements**

**IMPORTANT** Mount the drive in an upright position as shown. Do not mount the drive on its side.

In multi-axis shared-bus configurations, drives must be spaced by aligning the zero-stack tab and cutout.

**Figure 14 - Multi-axis Shared-bus Clearance Requirements**

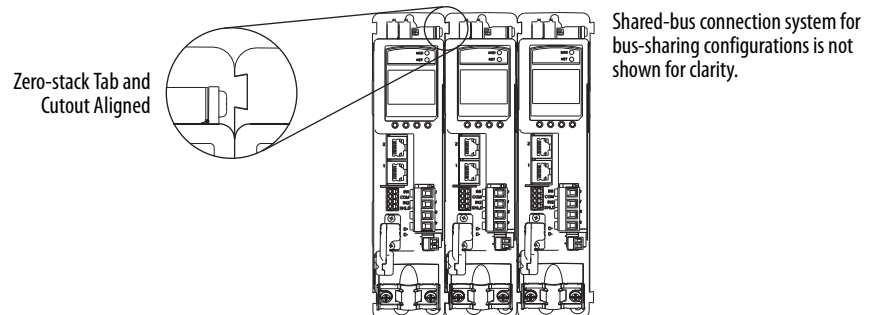

## Electrical Noise Reduction

This section outlines best practices that minimize the possibility of noise-related failures as they apply specifically to Kinetix 5500 system installations. For more information on the concept of high-frequency (HF) bonding, the ground plane principle, and electrical noise reduction, refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#).

### Bonding Modules

Bonding is the practice of connecting metal chassis, assemblies, frames, shields, and enclosures to reduce the effects of electromagnetic interference (EMI).

Unless specified, most paints are not conductive and act as insulators. To achieve a good bond between power rail and the subpanel, surfaces need to be paint-free or plated. Bonding metal surfaces creates a low-impedance return path for high-frequency energy.

---


**IMPORTANT** To improve the bond between the power rail and subpanel, construct your subpanel out of zinc plated (paint-free) steel.

---

Improper bonding of metal surfaces blocks the direct return path and allows high-frequency energy to travel elsewhere in the cabinet. Excessive high-frequency energy can effect the operation of other microprocessor controlled equipment.

These illustrations show details of recommended bonding practices for painted panels, enclosures, and mounting brackets.

**Figure 15 - Recommended Bonding Practices for Painted Panels**

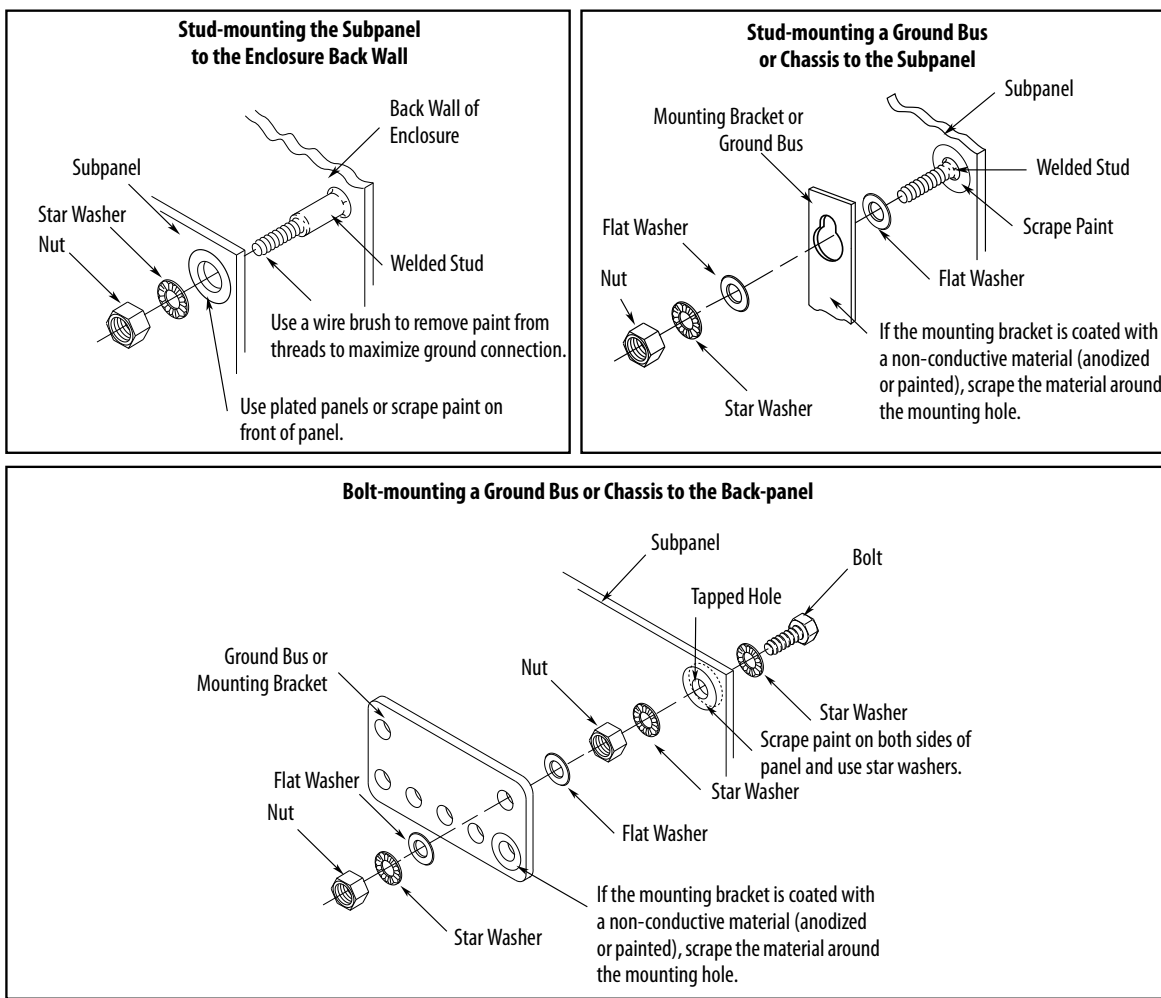


## Bonding Multiple Subpanels

Bonding multiple subpanels creates a common low impedance exit path for the high frequency energy inside the cabinet. Subpanels that are not bonded together do not necessarily share a common low impedance path. This difference in impedance can affect networks and other devices that span multiple panels:

- Bond the top and bottom of each subpanel to the cabinet by using 25.4 mm (1.0 in.) by 6.35 mm (0.25 in.) wire braid. As a rule, the wider and shorter the braid is, the better the bond.
- Scrape the paint from around each fastener to maximize metal-to-metal contact.

**Figure 16 - Multiple Subpanels and Cabinet Recommendations**

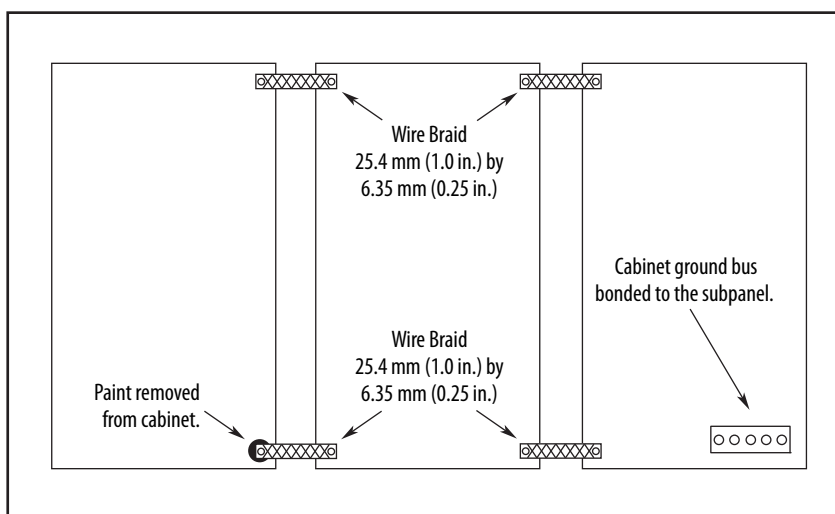


## Establishing Noise Zones

Observe these guidelines when routing cables used in the Kinetix 5500 system:

- The clean zone (C) is right of the drive system and includes the digital inputs wiring and Ethernet cable (gray wireway).
- The dirty zone (D) is above and below the drive system (black wireways) and includes the circuit breakers, 24V DC power supply, safety, and motor cables.
- The very dirty zone (VD) is limited to where the AC line (EMC) filter VAC output jumpers over to the drive (or first drive in multi-axis systems). Shielded cable is required only if the very dirty cables enter a wireway.

**Figure 17 - Noise Zones**

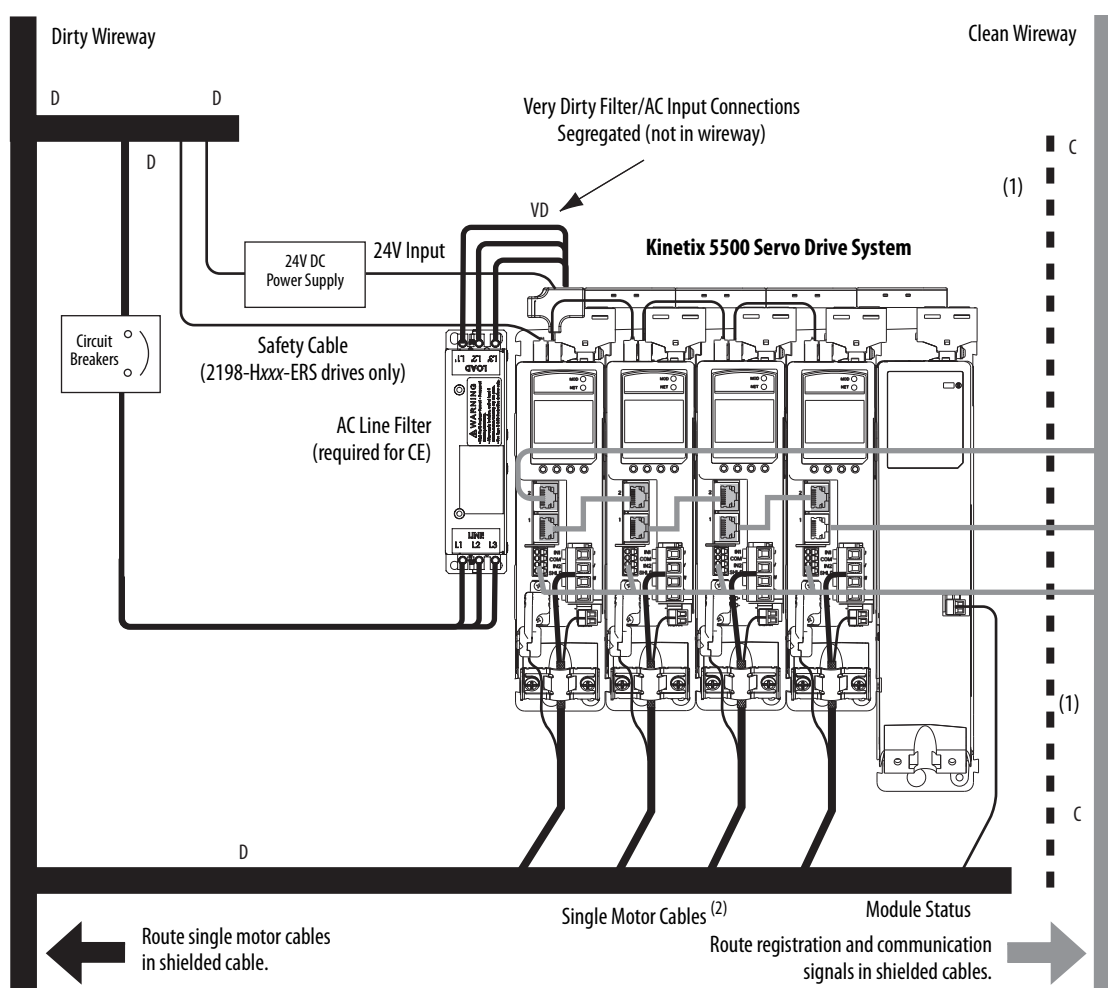

- (1) When space to the right of the drive does not permit 150 mm (6.0 in.) segregation, use a grounded steel shield instead. For examples, refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#).
- (2) When 2198-H2DCK converter kit is used, feedback cable routes in the clean wireway.

## Cable Categories for Kinetix 5500 Systems

These tables indicate the zoning requirements of cables connecting to the Kinetix 5500 drive components.

**Table 8 - Kinetix 5500 Drive**

Wire/Cable	Connector	Zone			Method	
		Very Dirty	Dirty	Clean	Ferrite Sleeve	Shielded Cable
L1, L2, L3 (shielded cable)	IPD		X			X
L1, L2, L3 (unshielded cable)		X				
DC-/DC+ (DC bus)	DC	Bus-bar only, no wiring connector.				
DC+/SH (shunt)	RC		X			
U, V, W (motor power)	MP		X			X
Motor feedback <sup>(1)</sup>	MF		X			X
Motor brake	BC		X			X
24V DC	CP		X			
Safety enable for safe torque-off (hardwired) <sup>(2)</sup>	STO		X			
Registration input, greater than 30 m (98.4 ft)	IOD			X		X
Registration input, less than 30 m (98.4 ft)				X		
Ethernet	PORT1 PORT2			X		X

(1) When the 2198-H2DCK converter kit is used, the feedback cable routes in the clean wireway.

(2) STO connector applies to only 2198-Hxxx-ERS (hardwired) servo drives.

**Table 9 - Capacitor Module**

Wire/Cable	Connector	Zone			Method	
		Very Dirty	Dirty	Clean	Ferrite Sleeve	Shielded Cable
DC-/DC+ (DC bus)	DC	Bus-bar only, no wiring connector.				
24V DC	CP	Bus-bar only, no wiring connector.				
Module status	MS		X			

## Noise Reduction Guidelines for Drive Accessories

Refer to this section when mounting an AC (EMC) line filter or external passive-shunt resistor for guidelines designed to reduce system failures caused by excessive electrical noise.

### *AC Line Filters*

Observe these guidelines when mounting your AC (EMC) line filter (refer to the figure on [page 39](#) for an example):

- Mount the AC line filter on the same panel as the Kinetix 5500 drive and as close to the drive as possible.
- Good HF bonding to the panel is critical. For painted panels, refer to the examples on [page 37](#).
- Segregate input and output wiring as far as possible.

---

<b>IMPORTANT</b>	CE test certification applies to only the AC line filter used with a single drive or the line filter used in multi-axis drive configurations. Sharing a line filter with more than one multi-axis drive configuration can perform satisfactorily, but the customer takes legal responsibility.
------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------


---

### External Passive Shunt Resistor

Observe these guidelines when mounting your Bulletin 2097 external passive-shunt resistor outside of the enclosure:

- Mount shunt resistor and wiring in the very dirty zone or in an external shielded enclosure.
- Mount resistors in a shielded and ventilated enclosure outside of the cabinet.
- Keep unshielded wiring as short as possible. Keep shunt wiring as flat to the cabinet as possible.

**Figure 18 - External Shunt Resistor Outside the Enclosure**

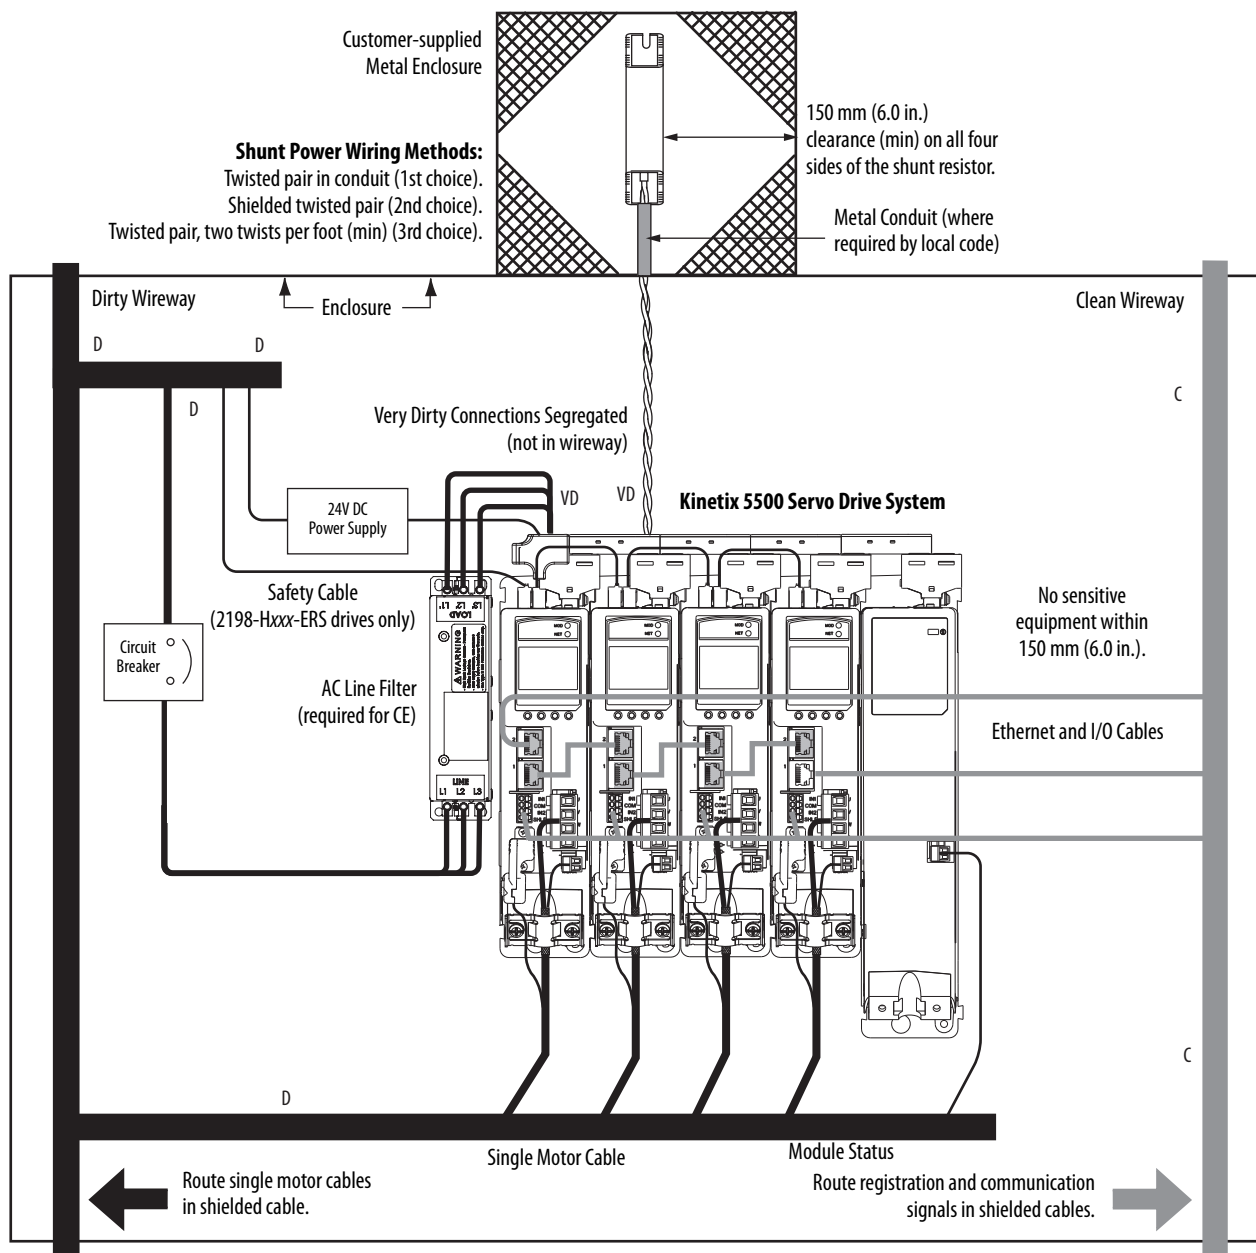




When mounting your Bulletin 2097 passive-shunt resistor inside the enclosure, follow these additional guidelines:

- Mount metal-clad modules anywhere in the dirty zone, but as close to the Kinetix 5500 drive as possible.
- Route shunt power wires with other very dirty wires.
- Keep unshielded wiring as short as possible. Keep shunt wiring as flat to the cabinet as possible.
- Separate shunt power cables from other sensitive, low voltage signal cables.

**Figure 19 - External Shunt Resistor Inside the Enclosure**

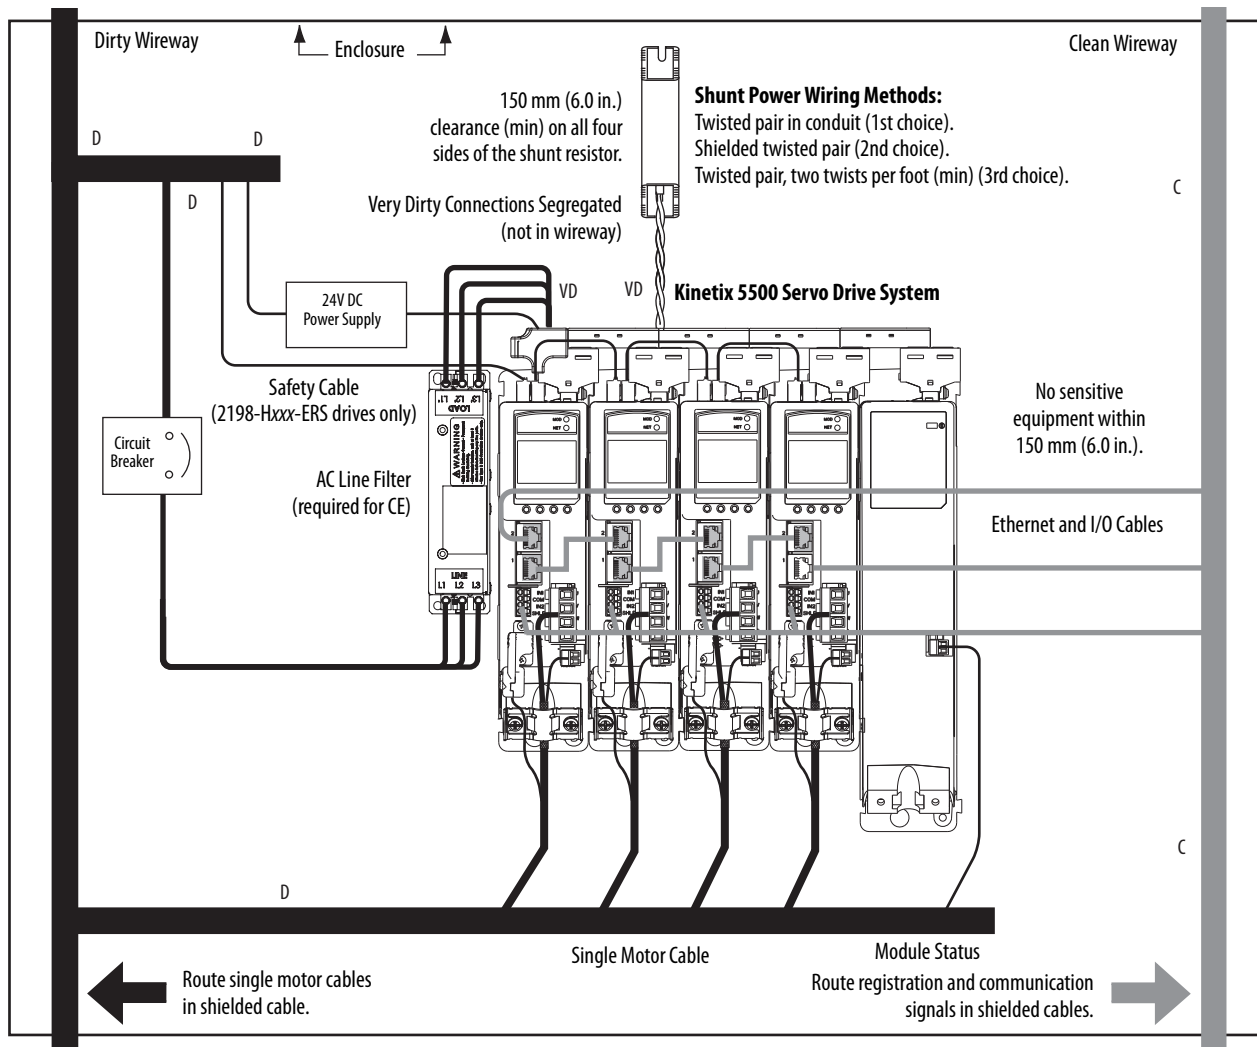

## **Notes:**

## Mount the Kinetix 5500 Drive System

This chapter provides the system installation procedures for mounting your Kinetix 5500 drives to the system panel.

Topic	Page
Determine Mounting Order	46
Drill-hole Patterns	49
Mount Your Kinetix 5500 Drive	56

This procedure assumes you have prepared your panel and understand how to bond your system. For installation instructions regarding equipment and accessories not included here, refer to the instructions that came with those products.



**SHOCK HAZARD:** To avoid hazard of electrical shock, perform all mounting and wiring of the Kinetix 5500 drives prior to applying power. Once power is applied, connector terminals can have voltage present even when not in use.



**ATTENTION:** Plan the installation of your system so that you can perform all cutting, drilling, tapping, and welding with the system removed from the enclosure. Because the system is of the open type construction, be careful to keep metal debris from falling into it. Metal debris or other foreign matter can become lodged in the circuitry and result in damage to the components.

## Determine Mounting Order

Mount drives in order (left to right) according to power rating (highest to lowest) starting with the highest power rating. If power rating is unknown, position drives (highest to lowest) from left to right based on amp rating.


## Zero-stack Tab and Cutout

Engaging the zero-stack tab and cutout from drive-to-drive makes efficient use of panel space for installations with multiple drives.

### IMPORTANT

Engaging the zero-stack tab and cutout from drive-to-drive is required for shared-bus multi-axis drive systems. This is done to make sure the drive connectors are spaced properly to accept the shared-bus connection system.

Figure 20 - Zero-stack Tab and Cutout Example

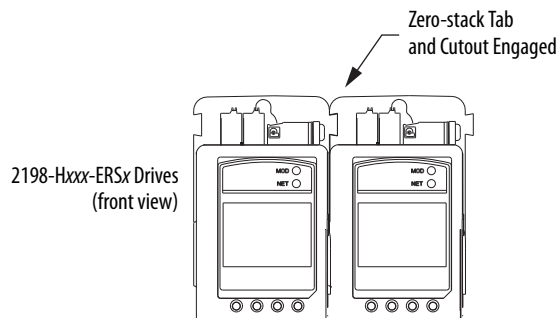


For the zero-stack feature to engage properly (when more than one frame size exists in the drive system) frame 3 drives must mount left of frame 1 or 2 drives, and frame 2 drives must mount left of frame 1 drives.

Capacitor modules can mount to the right of any frame size, but are always rightmost in any drive configuration.

### IMPORTANT

Mount drives in descending order, left to right, according to frame size with capacitor modules always mounted on the far right.

Figure 21 - Shared-bus Connection System Example

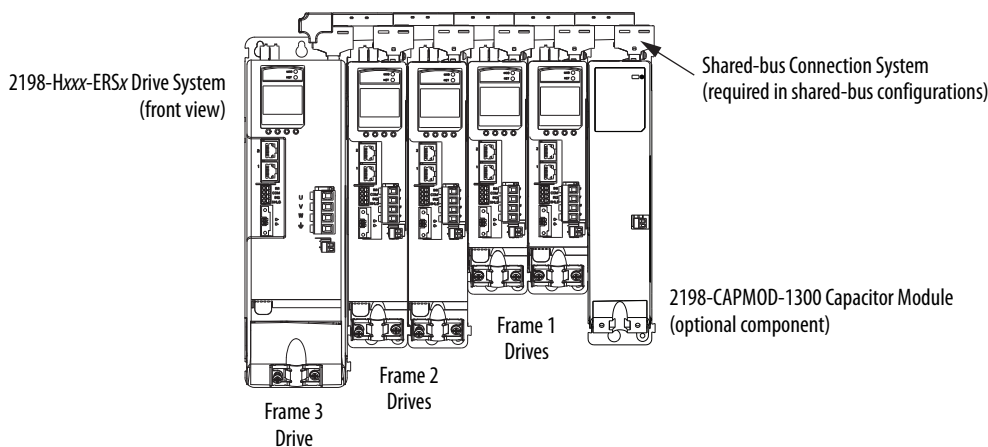

## Shared-bus Connection System

The shared-bus connection system is used to extend the mains AC input, 24V control input, and the DC bus power from drive-to-drive in shared-bus multi-axis configurations.


### IMPORTANT

When the shared-bus connection system is used, the zero-stack tab and cutout must be engaged between adjacent drives.

The connection system is comprised of three components:

- Input wiring connectors that plug into the leftmost drive and receive input wiring for mains AC and 24V DC.
- AC bus, DC bus, and 24V DC T-connectors that plug into the drives downstream from the first where AC, DC, and/or 24V control power is shared. DC bus T-connectors also plug into the first drive where DC bus power is shared.
- Bus bars that connect between drives to extend the mains AC bus, DC bus, and 24V DC control power from drive-to-drive.

**Figure 22 - Connection System Example**

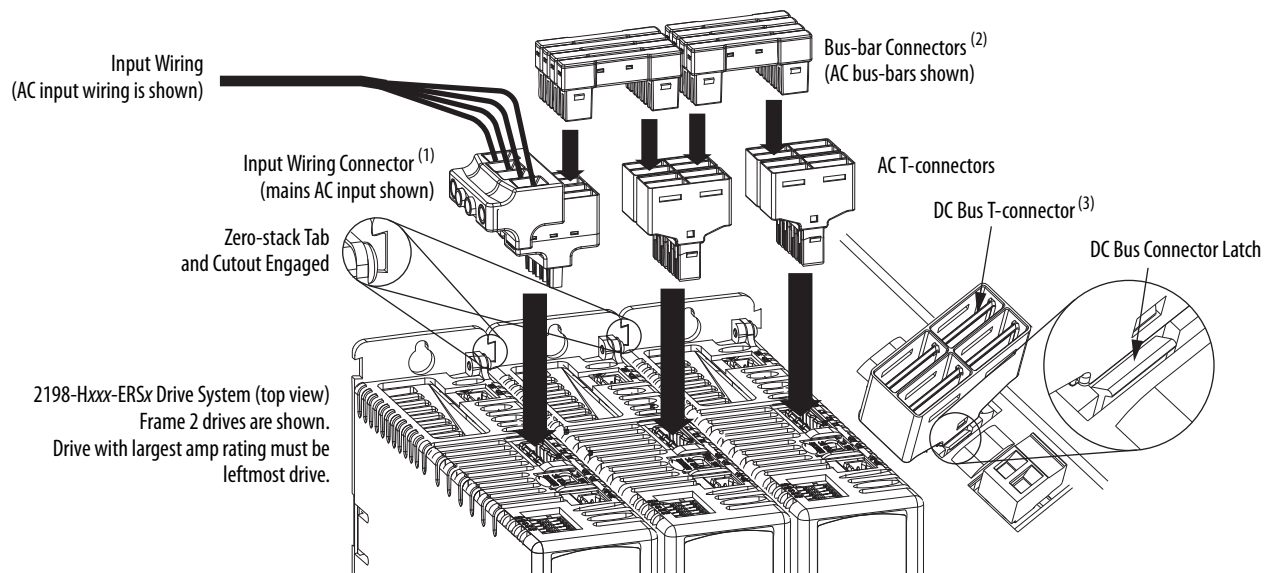

- (1) Due to the higher amp rating of frame 3 drives, input wiring connectors for frame 3 drives (catalog number 2198-H070-ADP-IN) are slightly larger than connectors for frame 1 and 2 drives (catalog number 2198-H040-ADP-IN).
- (2) Due to the extra width of frame 3 drives, bus-bar connectors between frame 3 drives are slightly longer (85 mm) than connectors between frame 3, frame 2, and frame 1 drives (55 mm).
- (3) DC bus T-connectors latch on both sides when inserted into the drive. To remove the DC bus T-connector, at least one latch must be pried away with a non-conductive probe.

The three components assemble from left to right across the drive system.

1. Attach wiring to input wiring connectors.
2. Insert input wiring connectors and T-connectors into the appropriate drive connectors.
3. Insert bus-bars to connect between wiring connectors and T-connectors.

## Single-axis Configurations

The following restrictions exist for standalone (single-axis) configurations:

- Standalone (single-axis) drives can be mounted to the panel individually or by using the zero-stack tab and cutout (refer to [Figure 22 on page 47](#))
- The shared-bus connection system does not apply and must not be used

For a single-axis example configuration, refer to [Typical Kinetix 5500 Standalone Installation](#) on [page 15](#).

## Multi-axis Configurations

Each multi-axis configuration has restrictions that apply:

- The shared-bus connection system must be used. Do not attach discrete wires from drive-to-drive.
- The maximum number of drives in Shared AC bus power-sharing groups cannot exceed 5.
- The maximum number of drives in any other bus power-sharing group cannot exceed 8.

For a multi-axis example configuration, refer to [Typical Shared AC/DC Bus Hybrid Installations](#) on [page 19](#).

## Drill-hole Patterns

Hole patterns for drives mounted in zero-stack or shared-bus configuration are provided for mounting your drives to the panel. Drives with the highest power rating are always mounted to the left of any drive with a lower power rating in shared-bus configurations:

- Frame 1 drives can be followed by only another frame 1 drive.
- Frame 2 drives can be followed by frame 1 drives or another frame 2 drive.
- Frame 3 drives can be followed by frame 1, frame 2, or another frame 3 drive.
- Mount Bulletin 2198 capacitor modules in the rightmost position.
  - Capacitor modules have the same hole pattern as frame 2 drives.
  - Only Shared DC, Shared AC/DC, and Shared AC/DC, hybrid configurations are compatible with Bulletin 2198 capacitor modules.

**Table 10 - Hole Pattern Overview**

Drive Cat. No.	Frame Size	Frame Size Patterns	Page
2198-H003-ERSx 2198-H008-ERSx	Frame 1	As many as eight frame 1 drives	51
2198-H015-ERSx 2198-H025-ERSx 2198-H040-ERSx	Frame 2	As many as 8 frame 2 drives	
		One frame 2 drive followed by as many as seven frame 1 drives	52
2198-H070-ERSx	Frame 3	As many as 8 frame 3 drives	53
		One frame 3 drive followed by as many as seven frame 1 drives	54
		One frame 3 drive followed by as many as seven frame 2 drives	55


**Table 11 - Capacitor Module Support**

Drive Cat. No.	Frame Size	Standalone Single Phase Operation	Three-phase Operation			
			Standalone	Shared DC	Shared AC/DC	Shared AC/DC Hybrid
		Number of capacitor modules connected, max				
2198-H003-ERSx <sup>(1)</sup>	1	0	0			
2198-H008-ERSx <sup>(1)</sup>			1		2	
2198-H015-ERSx <sup>(1)</sup>	2	4				
2198-H025-ERSx						
2198-H040-ERSx		N/A	3			
2198-H070-ERSx	4					

(1) Catalog number 2198-H003-ERS and any drive in standalone single-phase operation is not compatible with the Kinetix 5500 capacitor module.

These hole patterns apply to standalone drives.


**Figure 23 - Frame 1, Frame 2, and Frame 3 Standalone Hole Patterns**

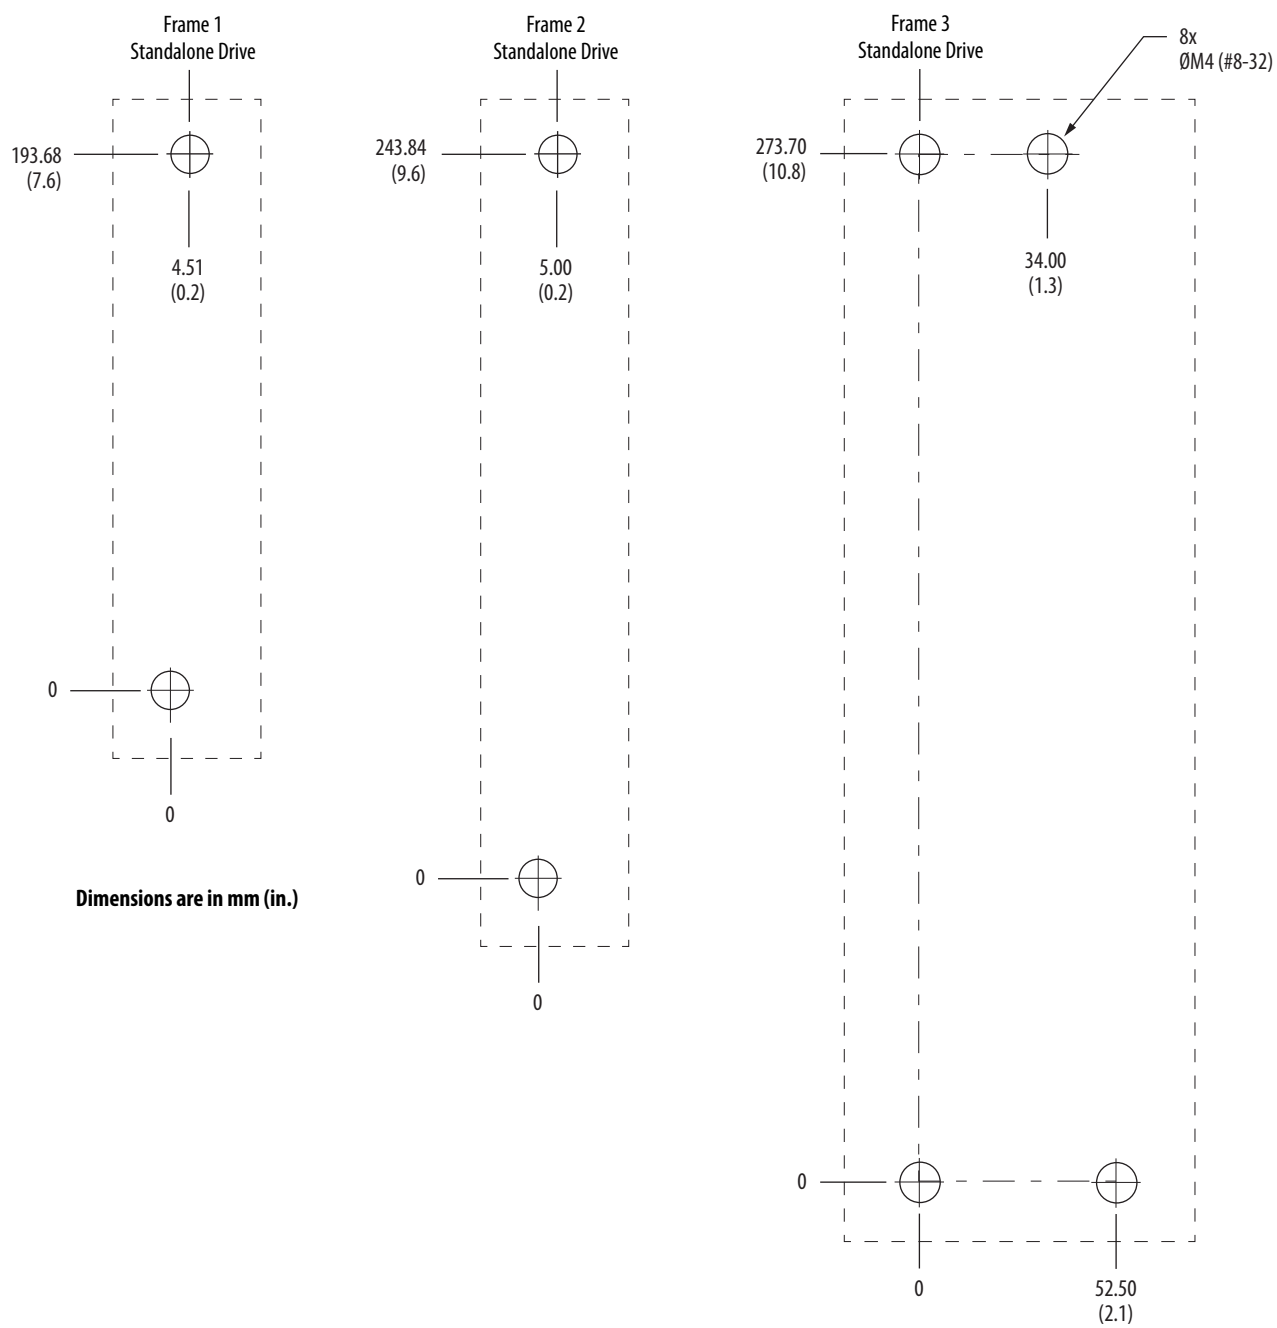




These hole patterns apply when all drives in the system are frame 1 or frame 2.  
There is 50 mm (2.0 in.) between mounting holes (A-to-A and B-to-B).

**Figure 24 - Frame 1 and Frame 2 Hole Patterns**

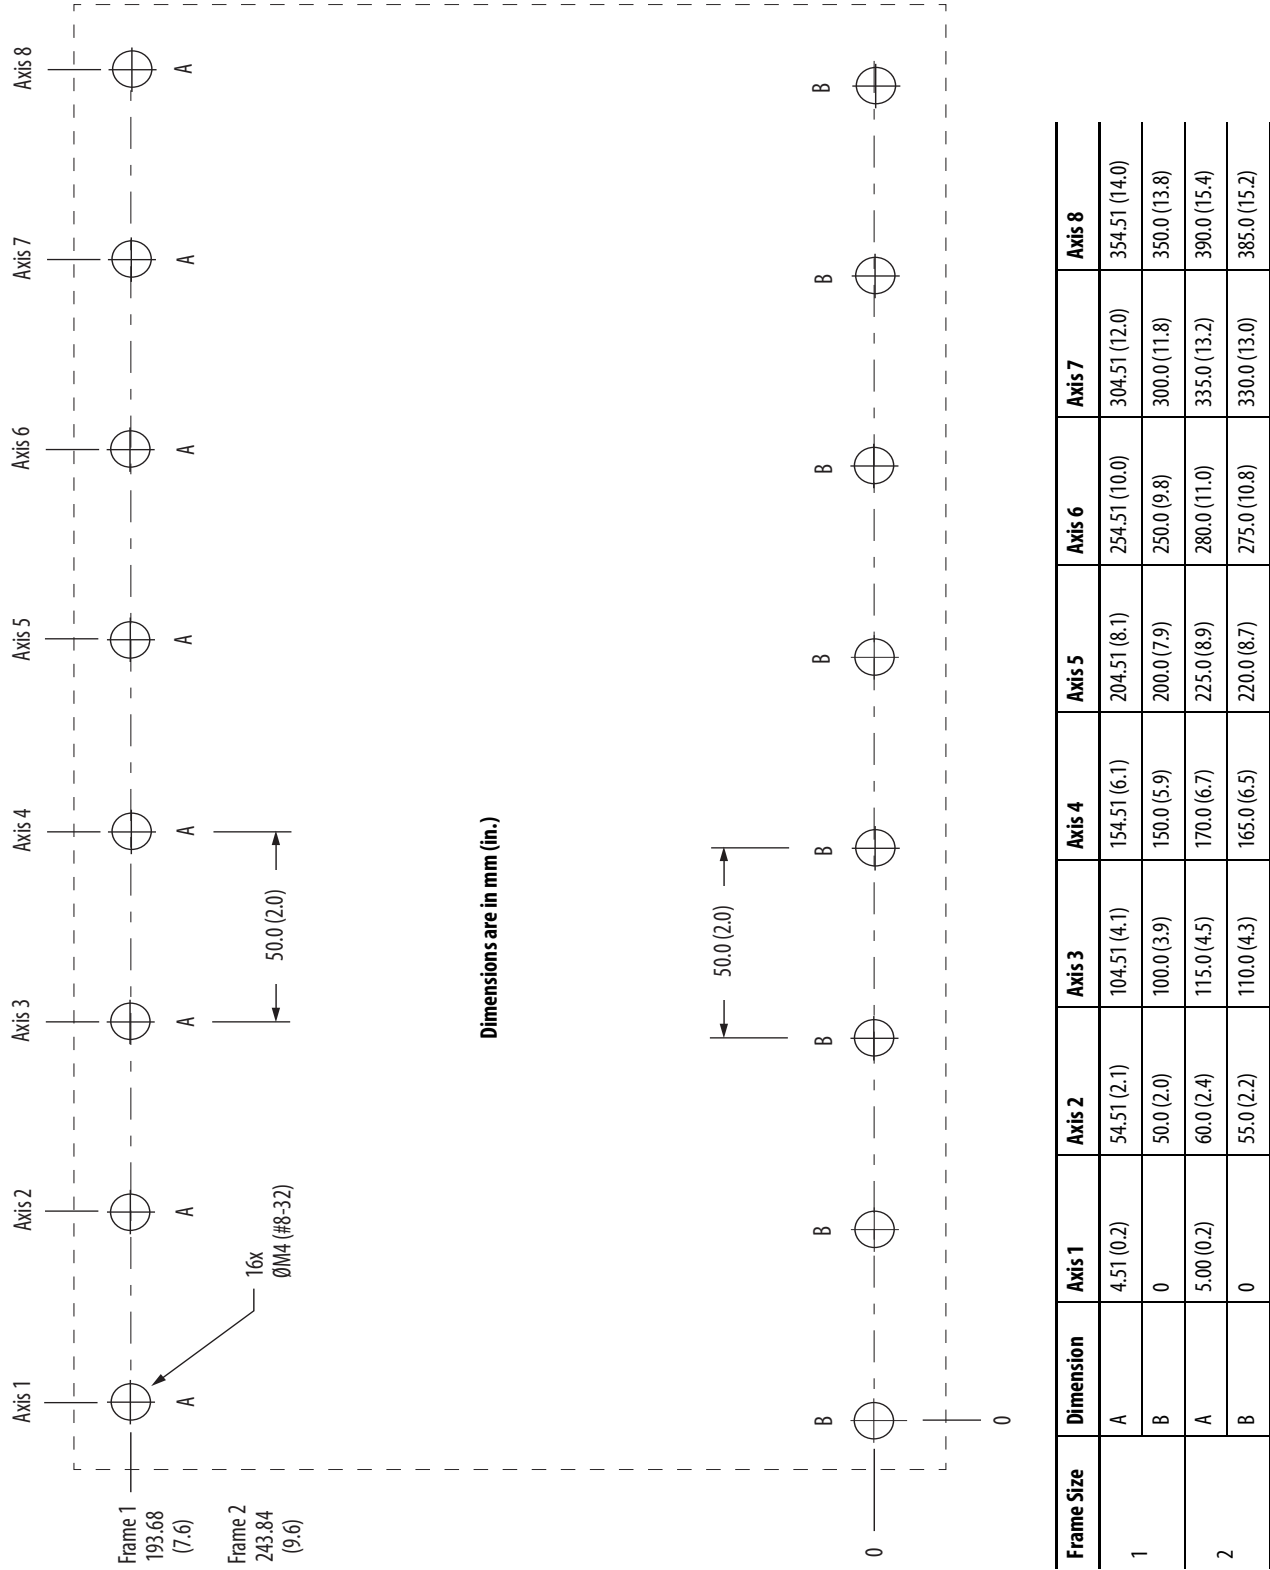


This hole pattern applies when transitioning from frame 2 drives to frame 1 drives. To mount additional frame 1 drives to the right of Axis 2 in this figure, refer to the frame 1 hole pattern in [Figure 24](#).

**Figure 25 - Frame 2 to Frame 1 Hole Pattern**

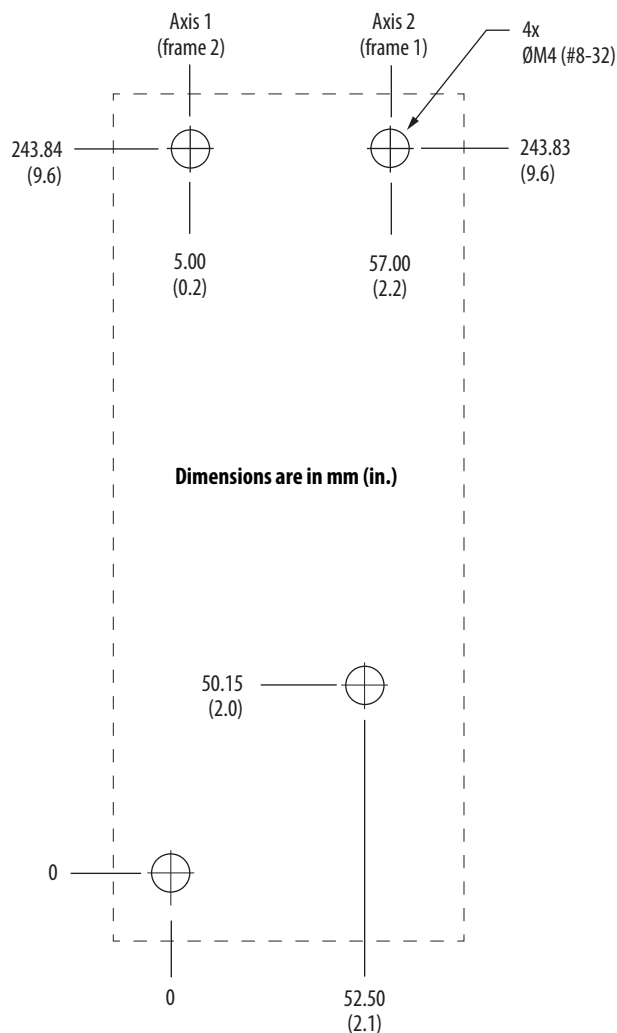


This hole pattern applies when all drives in the system are frame 3 drives. There is 85.20 mm (3.4 in.) between mounting holes, as shown.

**Figure 26 - Frame 3 Hole Pattern**

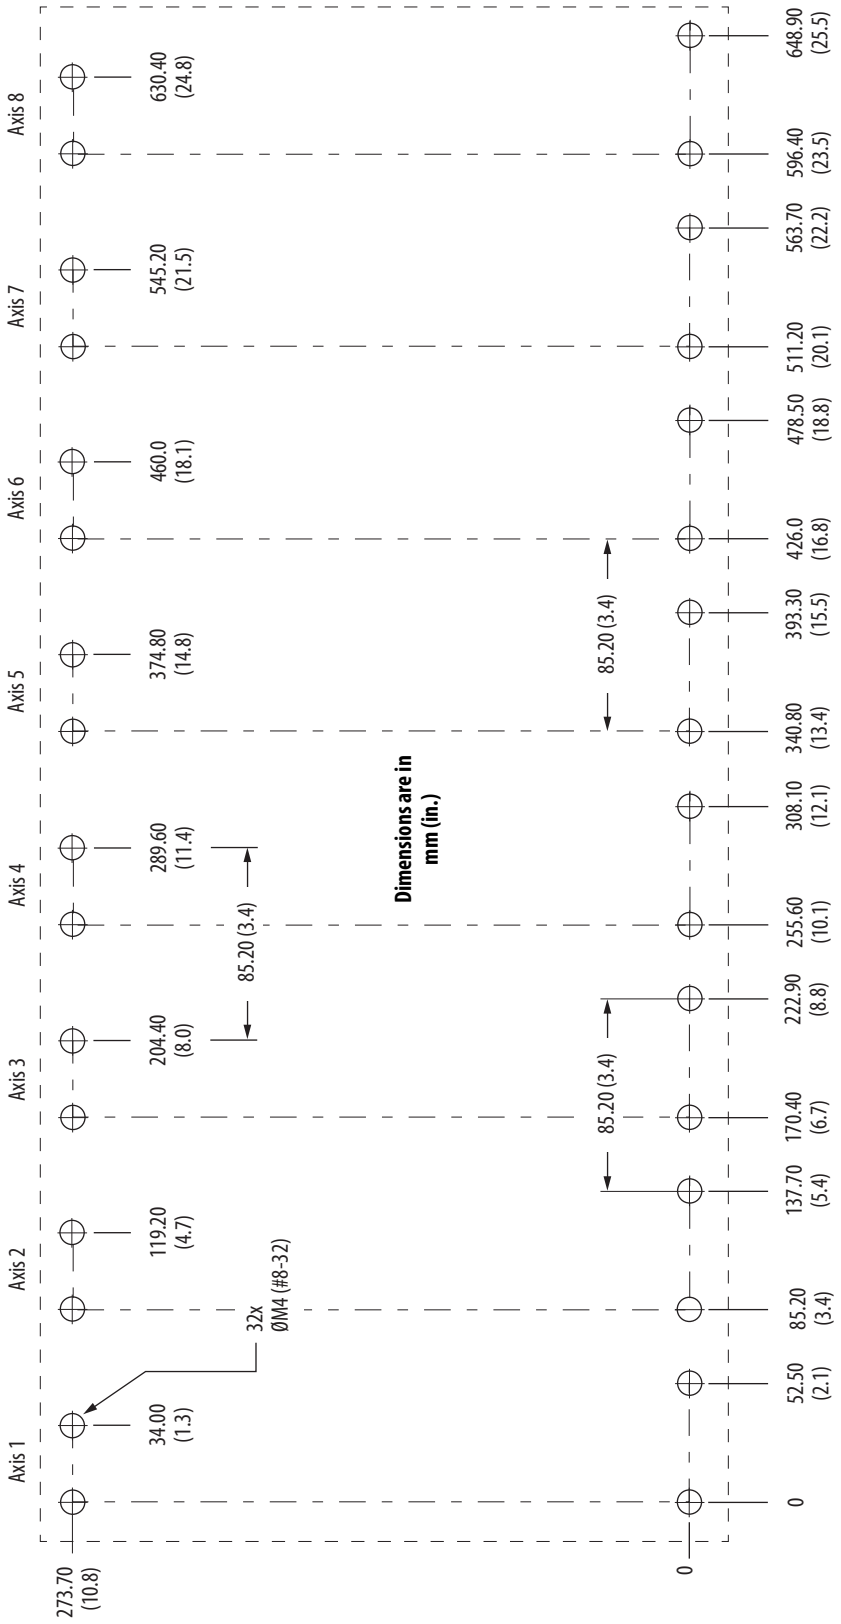


This hole pattern applies when transitioning from frame 3 drives to frame 1 drives. To mount additional frame 1 drives to the right of Axis 2 in this figure, refer to the frame 1 hole pattern in [Figure 24](#).

**Figure 27 - Frame 3 to Frame 1 Hole Pattern**

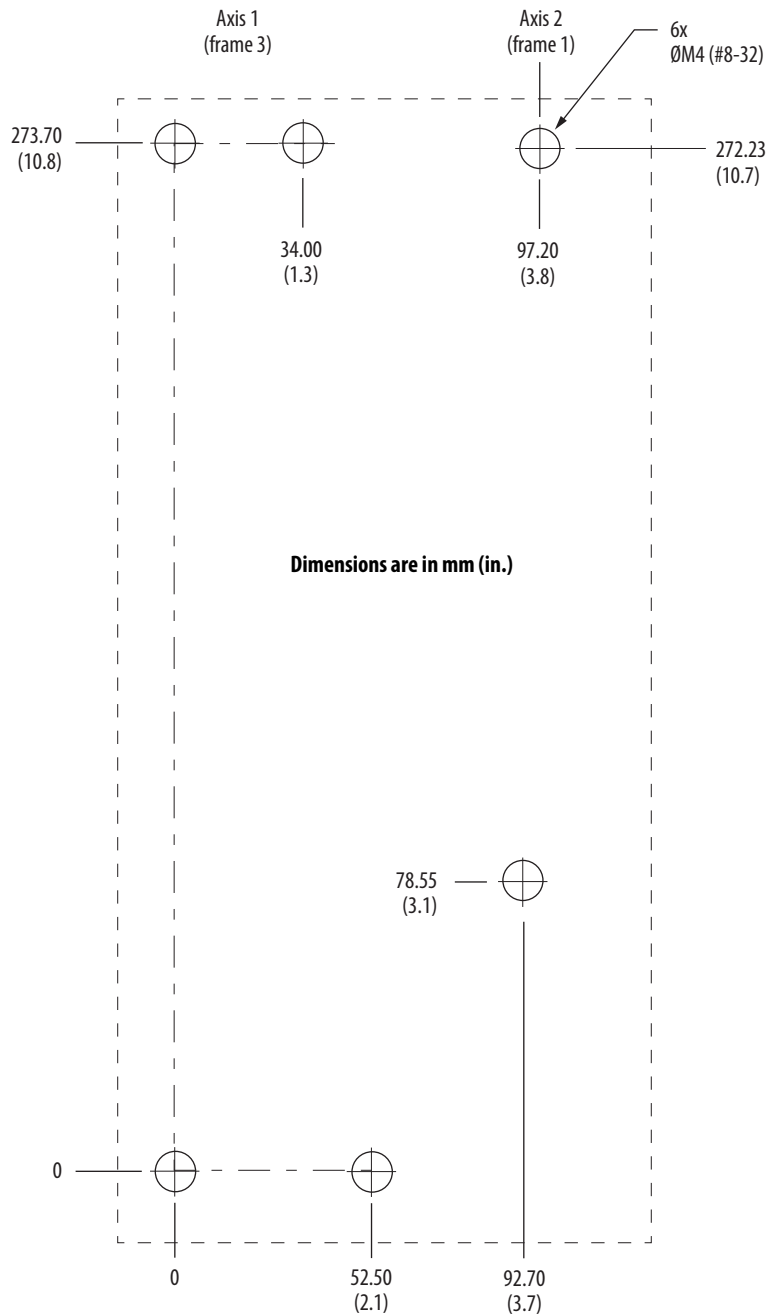

This hole pattern applies when transitioning from frame 3 drives to frame 2 drives. To mount additional frame 2 drives to the right of Axis 2 in this figure, refer to the frame 2 hole pattern in [Figure 24](#).

**Figure 28 - Frame 3 to Frame 2 Hole Pattern**

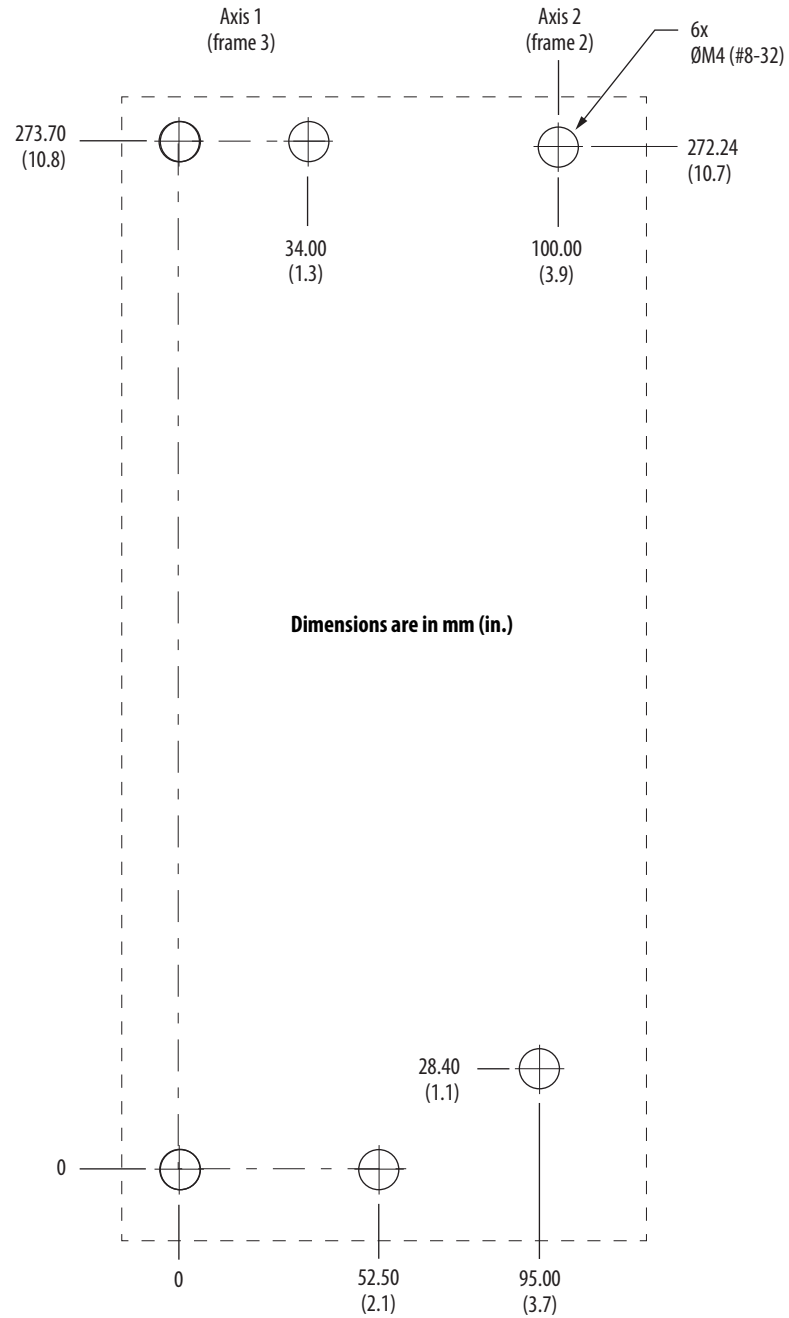

## Mount Your Kinetix 5500 Drive

This procedure assumes you have prepared your panel and understand how to bond your system. For installation instructions regarding other equipment and accessories, refer to the instructions that came with those products.

Follow these steps to mount your Kinetix 5500 drives to the panel.

1. Lay out the hole pattern for each Kinetix 5500 drive in the enclosure.

Refer to [Establishing Noise Zones](#) on [page 39](#) for panel layout recommendations.

---

**IMPORTANT** To improve the bond between the Kinetix 5500 drive and subpanel, construct your subpanel out of zinc plated (paint-free) steel.

---


2. Drill holes in the panel for mounting your drive system.

Hole patterns, by frame size, are shown in [Drill-hole Patterns](#) beginning on [page 49](#).

3. Loosely attach the mounting hardware to the panel.

The recommended mounting hardware is M4 (#8-32) steel bolts. Observe bonding techniques as described in [Bonding Modules](#) on [page 36](#).

4. Attach the leftmost drive to the cabinet panel.

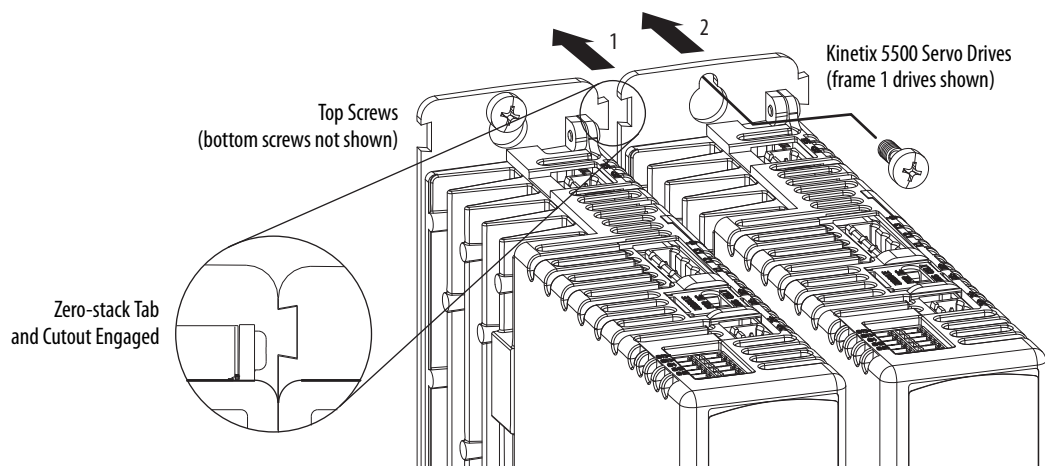

5. Attach additional drives (if any) just to the right of the previous drive by using the same method, but also making sure the zero-stack tabs and cutouts are engaged.

Zero-stack mounting is required based on configuration, refer to the [Zero-stack Tab and Cutout Example](#) on [page 46](#).

6. Tighten all mounting fasteners.

Apply 2.0 N•m (17.7 lb•in) maximum torque to each fastener.

## Connector Data and Feature Descriptions


This chapter illustrates drive connectors and indicators, including connector pinouts, and provides descriptions for Kinetix 5500 drive features.

<b>Topic</b>	<b>Page</b>
Kinetix 5500 Connector Data	58
Understanding Control Signal Specifications	62
Feedback Specifications	66
Safe Torque-off Safety Features	67

## Kinetix 5500 Connector Data

Use these illustrations to identify the connectors and indicators for the Kinetix 5500 servo drives.

**Figure 29 - Kinetix 5500 Drive Features and Indicators**

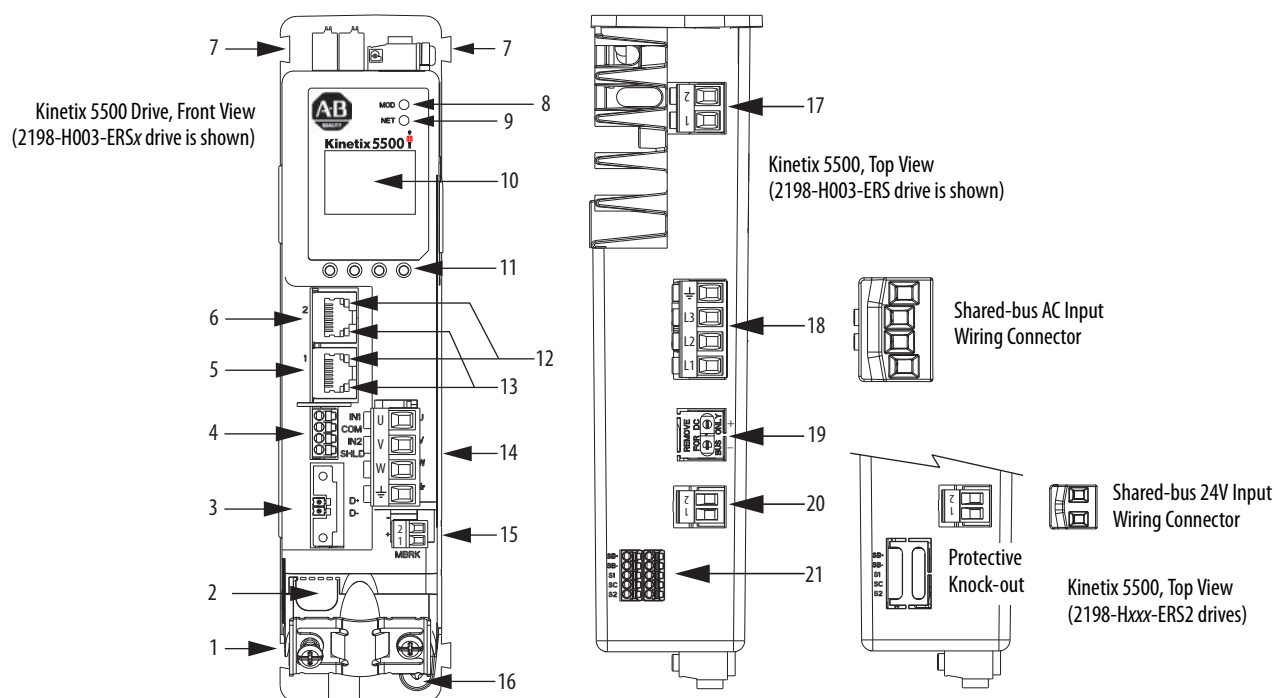

Item	Description
1	Motor cable shield clamp
2	Converter kit mounting hole <sup>(1)</sup> (under cover)
3	Motor feedback (MF) connector
4	Digital inputs (IOD) connector
5	Ethernet (PORT1) RJ45 connector
6	Ethernet (PORT2) RJ45 connector
7	Zero-stack mounting tab/cutout

Item	Description
8	Module status indicator
9	Network status indicator
10	LCD display
11	Navigation pushbuttons
12	Link speed status indicators
13	Link/Activity status indicators
14	Motor power (MP) connector

Item	Description
15	Motor brake (BC) connector
16	Ground terminal
17	Shunt resistor (RC) connector
18	AC mains input power (IPD) connector
19	DC bus (DC) connector (under cover) <sup>(2)</sup>
20	24V control input power (CP) connector
21	Safe torque-off (STO) connector <sup>(3)</sup> (does not apply to 2198-Hxxx-ERS2 drives)

(1) Protective knock-out covers the 2198-H2DCK Hiperface-to-DSL feedback converter kit mounting hole. Remove knock-out for use with the converter kit.

(2) DC bus connector ships with protective knock-out cover that can be removed for use in shared-bus configurations.

(3) Protective knock-out cover is removed on 2198-Hxxx-ERS (hardwired STO) drives.





## Safe Torque-off Connector Pinout

For the hardwired safe torque-off (STO) connector pinouts, feature descriptions, and wiring information, refer to [Chapter 9](#) beginning on [page 169](#).

## Input Power Connector Pinouts

**Table 12 - Mains Input Power Connector**

IPD Pin	Description	Signal
	Chassis ground	
L3	Three-phase input power	L3
L2		L2
L1		L1

**Table 13 - 24V Input Power Connector**

CP Pin	Description	Signal
1	24V power supply, customer supplied	24V+
2	24V common	24V-

## DC Bus and Shunt Resistor Connector Pinouts

**Table 14 - DC Bus Power Connector**

DC Pin	Description	Signal
1	DC bus connections	DC-
2		DC+

**Table 15 - Shunt Resistor Connector**

RC Pin	Description	Signal
1	Shunt connections (frames 2 and 3)	DC+
2		SH
1	Shunt connections (frame 1)	SH
2		DC+

## Digital Inputs Connector Pinout

The Kinetix 5500 drive has two configurable digital inputs and 5 configurable functions to choose from in the Logix Designer application. Digital input 1 can be configured as a dual-function (home/registration) input.

**Table 16 - Digital Inputs Pinouts**

IOD Pin	Description	Signal
1	24V current-sinking fast input #1. This is a dual-function input.	IN1 <sup>(1)</sup>
2	I/O common for customer-supplied 24V supply.	COM
3	24V current-sinking fast input #2.	IN2
4	I/O cable shield termination point.	SHLD


(1) This signal has dual-functionality. You can use IN1 (IOD-1) as Registration 1 or Home input when Home/Registration 1 is configured.

**Table 17 - Configurable Functions**

Default Configuration <sup>(1)</sup>	Description
Digital input1= Home/Registration 1 Digital input2 = Registration 2	Unassigned
	Home
	Registration 1
	Registration 2
	Positive overtravel
	Negative overtravel
	Home/Registration 1

(1) Studio 5000 Logix Designer, version 27 or later, is required to change from the default configuration.


**Figure 30 - Pin Orientation for 4-pin Digital Inputs (IOD) Connector**

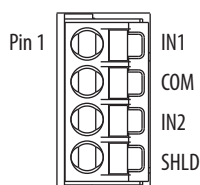

## Ethernet Communication Connector Pinout



Pin	Description	Signal
1	Transmit+	TD+
2	Transmit-	TD-
3	Receive+	RD+
4	Reserved	—
5	Reserved	—
6	Receive-	RD-
7	Reserved	—
8	Reserved	—

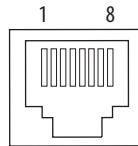**Figure 31 - Pin Orientation for 8-pin Ethernet PORT1 and PORT2 Connectors**



## Motor Power, Brake, and Feedback Connector Pinouts

**Table 18 - Motor Power Connector**

MP Pin	Description	Signal	Color
U	Three-phase motor power	U	Brown
V		V	Black
W		W	Blue
	Chassis ground		Green



**ATTENTION:** To avoid damage to the Kinetix 5500 DC-bus power supply and inverter, make sure the motor power signals are wired correctly. Refer to [Figure 49](#) on [page 84](#) for connector wiring examples.

**IMPORTANT** Drive-to-motor power cables must not exceed 50 m (164 ft).  
System performance was tested at this cable length. These limitations also apply when meeting CE requirements.

**Table 19 - Motor Brake Connector**


BC Pin	Description	Signal
1	Motor brake connections	MBRK+
2		MBRK-

Motor Feedback Connector Pinout

MF Pin	Description	Signal
1	Bidirectional data and power for digital encoder interface	D+
2		D-
SHIELD	Cable shield and grounding plate (internal to 2198-KITCON-DSL connector kit) termination point.	SHIELD

**IMPORTANT** Drive-to-motor power cables must not exceed 50 m (164 ft). System performance was tested at these cable length specifications. These limitations also apply when meeting CE requirements.

Figure 32 - Pin Orientation for 2-pin Motor Feedback (MF) Connector

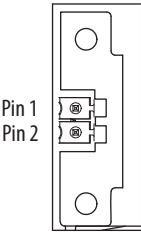

Understanding Control Signal Specifications

This section provides a description of the Kinetix 5500 digital inputs, Ethernet communication, power and relay specifications, encoder feedback specifications, and safe torque-off features.

Digital Inputs

Two digital inputs are available for the machine interface on the IOD connector. Digital inputs require a 24V DC @ 15 mA supply. These are sinking inputs that require a sourcing device. A common and cable shield connection is provided on the IOD connector for digital inputs.

The Registration 1 input is capable of dual functionality. You can also use this as the Home input. Configuration for dual functionality is not needed.


**IMPORTANT** To improve registration input EMC performance, refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#).

**Table 20 - Understanding Digital Input Functions**

Function	Description	Default Behavior
Home/Reg1	An active state indicates to a homing sequence that the referencing sensor has been seen. Typically, a transition of this signal is used to establish a reference position for the machine axis.	The function is always inactive. You can enable in the Logix Designer application.
Registration 1	An inactive-to-active transition (also known as a positive transition) or active-to-inactive transition (also known as a negative transition) is used to latch position values for use in registration moves.	
Registration 2		
Positive overtravel Negative overtravel	The positive/negative limit switch (normally closed contact) inputs for each axis require 24V DC (nominal).	

**Table 21 - Digital Input Specifications**

Attribute	Value
Type	Active high, single-ended, current sinking (EN 61131-2 Type 1)
Dedicated functions	Registration 1, Home, Registration 2, Positive overtravel, Negative overtravel
Input current (with 24V applied)	12 mA, typical
On-state input voltage	15...30V @ 15 mA, max
Off-state input voltage	-1.0...5.0V
Pulse reject filtering (registration functions)	12.0 $\mu$ s
Pulse reject filtering (home input function) debounce filter	20 ms, nom
Propagation delay (registration functions)	0 (delay compensated)
Registration repeatability	700 ns
Windowed registration invalid-to-valid event delay	125 $\mu$ s, min

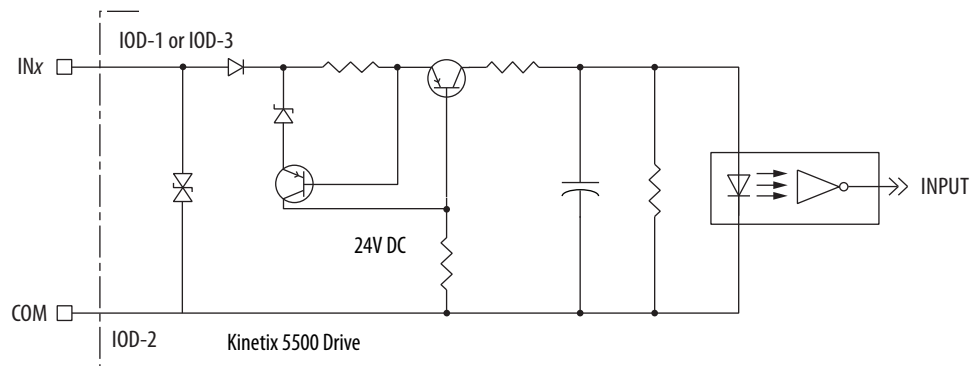**Figure 33 - Digital Input Circuitry**

## Ethernet Communication Specifications

The PORT1 and PORT2 (RJ45) Ethernet connectors are provided for communication with the Logix5000 controller.

Attribute	Value
Communication	The drive auto-negotiates speed and duplex modes. These modes can be forced through the Logix Designer application. 100BASE-TX, full duplex is recommended for maximum performance.
Cyclic update period	1.0 ms, min
Embedded switch features	Three-port, cut-through, time correction on IEEE-1588 packets, limited filtering, quality of service with four priority levels
Auto MDI/MDIX crossover detection/correction	Yes
Port-to-port time synchronization variation	100 ns, max
Cabling	CAT5e shielded, 100 m (328 ft) max


## Motor Brake Circuit

The brake option is a spring-set holding brake that releases when voltage is applied to the brake coil in the motor. The customer-supplied 24V power supply drives the brake output through a solid-state relay. The solid-state brake driver circuit provides the following:

- Brake current-overload protection
- Brake over-voltage protection

Two connections (BC-1 and BC-2) are required for the motor brake output. Connections are rated for 2.0 A @ +24V (refer to [Figure 34](#)).

**Figure 34 - Motor Brake Circuit**

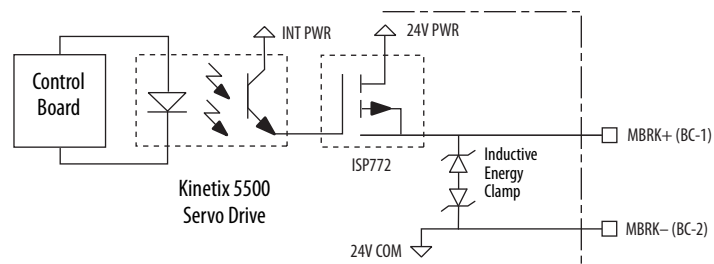

### IMPORTANT

Motor parking-brake switching frequency must not exceed 10 cycles/min.

Control of the solid-state relay to release the motor brake is configurable in the Logix Designer application (refer to [Configure PM Motor Closed-loop Control Axis Properties](#) beginning on [page 134](#)). An active signal releases the motor brake. Turn-on and turn-off delays are specified by the MechanicalBrakeEngageDelay and MechanicalBrakeReleaseDelay settings.

**IMPORTANT**

Holding brakes that are available on Allen-Bradley rotary motors are designed to hold a motor shaft at 0 rpm for up to the rated brake-holding torque, not to stop the rotation of the motor shaft, or be used as a safety device.

You must command the servo drive to 0 rpm and engage the brake only after verifying that the motor shaft is at 0 rpm.

These steps provide one method you can use to control a brake.

1. Wire the mechanical brake according to the appropriate interconnect diagram in [Appendix A](#) beginning on [page 199](#).

2. Enter the MechanicalBrakeEngageDelay and MechanicalBrakeReleaseDelay times in the Logix Designer application.

Refer to Axis Properties>Parameter List. The delay times must be from the appropriate motor family brake specifications table in the Kinetix Rotary Motion Specifications Technical Data, publication [GMC-TD001](#).

3. Use the drive stop-action default setting (Current Decel & Disable).

Refer to Axis Properties>Actions>Stop Action in the Logix Designer application.

4. Use the motion instruction Motion Axis Stop (MAS) to decelerate the servo motor to 0 rpm.

5. Use the motion instruction Motion Servo Off (MSF) to engage the brake and disable drive.

## Control Power

The Kinetix 5500 drive requires 24V DC input power for control circuitry.

**IMPORTANT**

SELV and PELV rated power supplies must be used to energize external safety devices connected to the Kinetix 5500 safety inputs.

The National Electrical Code and local electrical codes take precedence over the values and methods provided. Implementation of these codes is the responsibility of the machine builder.

**Table 22 - Control Power Input Power Specifications**

Attribute	Frame 1	Frame 2	Frame 3
Input voltage	21.6...26.4V DC		
Control power AC input current Nom @ 24V DC <sup>(1)</sup>	400 mA	800 mA	1.3 A
Inrush, max	2.0 A	3.0 A	3.0 A

(1) Plus BC connector (MBRK+) current.

## Feedback Specifications

The Kinetix 5500 drive accepts motor feedback signals from Stegmann Hiperface digital-servo-link (DSL) encoders on the motor feedback (MF) connector.

**TIP** Auto-configuration in the Logix Designer application of intelligent absolute, high-resolution encoders is possible with only Allen-Bradley motors.

The Kinetix 5500 drives support Kinetix VP motors with Stegmann Hiperface digital-servo-link (DSL) encoders by using the 2-pin (MF) feedback connector.

Other Allen-Bradley motors and actuators with Stegmann Hiperface single-turn or multi-turn high-resolution absolute encoders are also accepted, but only when using drive firmware revision 2.002 or later, and the 2198-H2DCK Hiperface-to-DSL (series B or later) feedback converter kit for Hiperface-to-DSL conversion.

You can also use the MF connector for feedback-only applications.

**Table 23 - Stegmann Hiperface DSL Specifications**

Attribute	Value
Protocol	Hiperface DSL
Memory support	Programmed with Allen-Bradley motor data
Hiperface data communication	9.375 Mbits/s


## Absolute Position Feature

The drive's absolute position feature tracks the position of the motor, within the multi-turn retention limits, while the drive is powered off. The absolute position feature is available with only multi-turn encoders.

**Table 24 - Absolute Position Designator Examples**

Encoder Type	Cat. No. Designator	Cat. No. Examples	Motor Family
Stegmann Hiperface (DSL)	-P	VPL-xxxxxx-P, VPF-xxxxxx-P, VPS-xxxxxx-P	Kinetix VP
Stegmann Hiperface	-M	MPL-B310P-M, MPM-xxxxxx-M, MPF-xxxxxx-M, MPS-xxxxxx-M, MPAR-x3xxxx-M, MPAL-xxxxxxM	MP-Series
	-V	MPL-B230P-V, MPAS-xxxxx1-V05, MPAS-xxxxx2-V20, MPAR-x1xxxx-V, MPAR-x2xxxx-V, MPAL-xxxxxxV	
Stegmann Hiperface (magnetic scale)	-xDx	LDAT-Sxxxxxx-xDx	LDAT-Series

**Figure 35 - Absolute Position Retention Limits**

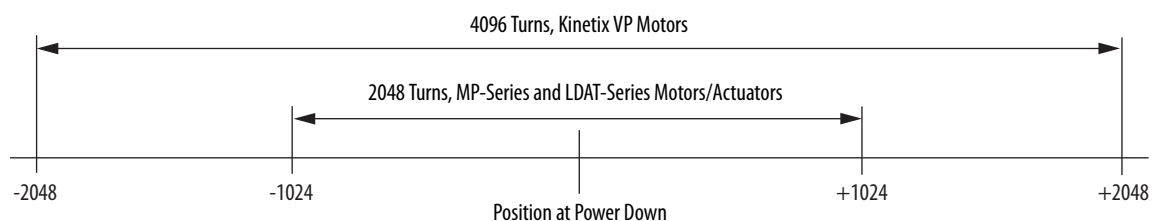



## Safe Torque-off Safety Features

Kinetix 5500 servo drives have safe torque-off (STO) capability and can safely turn off the inverter power transistors in response to a monitored digital input, according to Category 0 Stop behavior.

### Servo Drives with Hardwired Safety

2198-Hxxx-ERS (hardwired) servo drives support parallel input terminals for cascading to adjacent drives over duplex wiring. For applications that do not require the STO safety function you must install jumper wires to bypass the safe torque-off feature.

Refer to [Chapter 9](#) on [page 169](#) for the STO connector pinout, installation, and wiring information.

### Servo Drives with Integrated Safety

For 2198-Hxxx-ERS2 (integrated safety) servo drives, the GuardLogix 5570 or Compact GuardLogix 5570 safety controller issues the STO command via the EtherNet/IP network and the 2198-Hxxx-ERS2 servo drives execute the command.

Refer to [Chapter 10](#) on [page 177](#) for integrated safety drive specifications, configuring motion and safety connections, motion direct commands, and the STO bypass feature.

## **Notes:**

## Connect the Kinetix 5500 Drive System

This chapter provides procedures for wiring your Kinetix 5500 system components and making cable connections.

<b>Topic</b>	<b>Page</b>
Basic Wiring Requirements	70
Determine the Input Power Configuration	71
Remove the Grounding Screws in Select Power Configurations	74
Grounding the Drive System	76
Wiring Requirements	78
Wiring Guidelines	79
Wiring the Power Connectors	80
Wiring the Digital Input Connectors	82
Wiring Kinetix VP Motors	83
Wiring Other Allen-Bradley Motors and Actuators	88
Capacitor Module Connections	98
External Passive-shunt Resistor Connections	99
Ethernet Cable Connections	100

## Basic Wiring Requirements

This section contains basic wiring information for the Kinetix 5500 drives.



**ATTENTION:** Plan the installation of your system so that you can perform all cutting, drilling, tapping, and welding with the system removed from the enclosure. Because the system is of the open type construction, be careful to keep metal debris from falling into it. Metal debris or other foreign matter can become lodged in the circuitry and result in damage to components.



**SHOCK HAZARD:** To avoid hazard of electrical shock, perform all mounting and wiring of the Bulletin 2198 drive modules prior to applying power. Once power is applied, connector terminals can have voltage present even when not in use.

---

**IMPORTANT**

This section contains common PWM servo system wiring configurations, size, and practices that can be used in a majority of applications. National Electrical Code, local electrical codes, special operating temperatures, duty cycles, or system configurations take precedence over the values and methods provided.

---

## Routing the Power and Signal Cables

Be aware that when you route power and signal wiring on a machine or system, radiated noise from nearby relays, transformers, and other electronic devices can be induced into I/O communication, or other sensitive low voltage signals. This can cause system faults and communication anomalies.

The Bulletin 2090 single motor cable contains the power, brake, and feedback wires, but is properly shielded to protect the noise-sensitive feedback signals.

Refer to [Electrical Noise Reduction](#) on [page 36](#) for examples of routing high and low voltage cables in wireways. Refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#), for more information.

## Determine the Input Power Configuration

Before wiring input power to your Kinetix 5500 system, you must determine the type of input power within your facility. The drive is designed to operate in both grounded and ungrounded environments.




**ATTENTION:** Ungrounded, corner-grounded, and impedance-grounded input power configurations are permitted, but you must remove the ground screws. Refer to [Remove the Grounding Screws in Select Power Configurations](#) on [page 74](#) for more information.

## Grounded Power Configurations

The grounded (WYE) power configuration lets you ground your three-phase power at a neutral point. This type of grounded power configuration is preferred.

**Figure 36 - Grounded Power Configuration (WYE Secondary)**

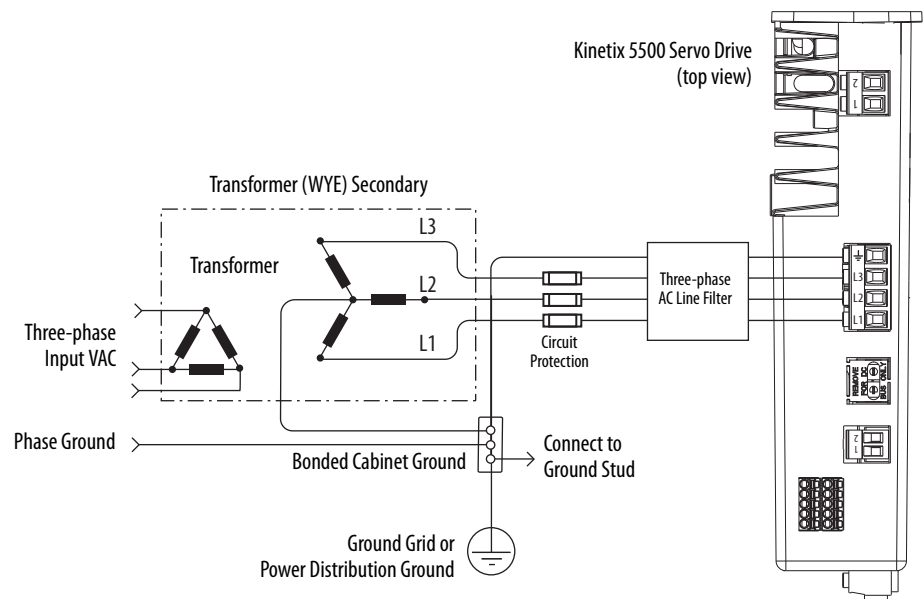


The Kinetix 5500 drive has factory-installed grounding screws for grounded power distribution.


**IMPORTANT** If you determine that you have grounded power distribution in your plant, you do not need to remove the grounding screws.

Refer to [Power Wiring Examples](#) beginning on [page 200](#) for input power interconnect diagrams.

**Figure 37 - Impedance-grounded Power Configuration (WYE Secondary)**

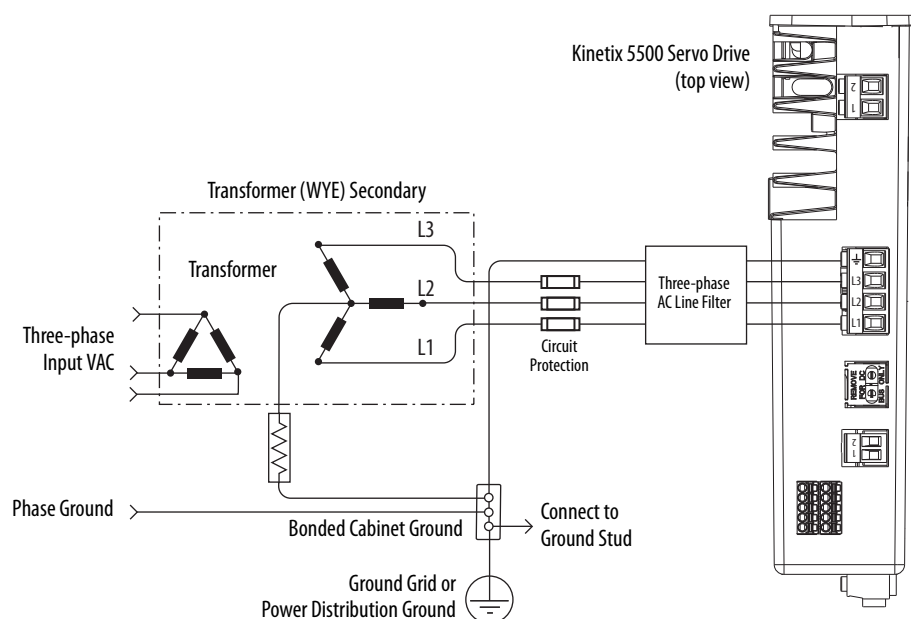


**Figure 38 - Corner-grounded Power Configuration (Delta Secondary)**

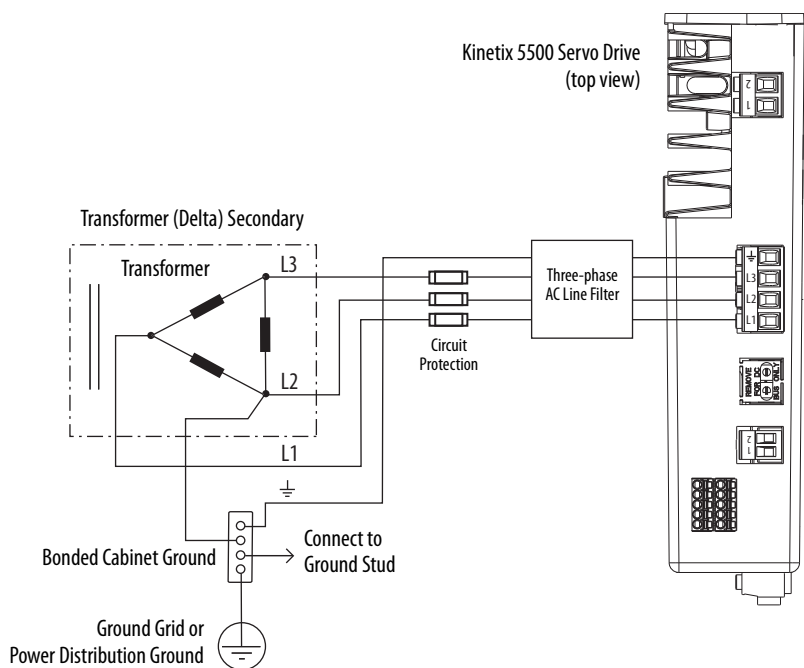

**IMPORTANT** Even though impedance-grounded and corner-grounded power configurations have a ground connection, treat them as ungrounded when installing Kinetix 5500 drive systems.

Refer to [Power Wiring Examples](#) beginning on [page 200](#) for input power interconnect diagrams.

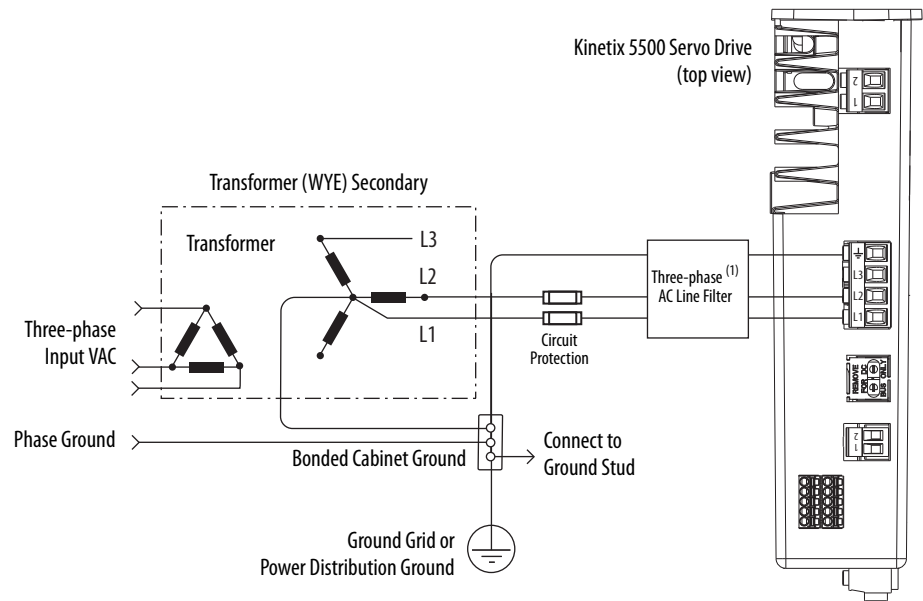**Figure 39 - Grounded Power Configuration (single-phase input)**

(1) Single-phase operation with an AC line filter can increase leakage current.

**IMPORTANT**

Using single-phase input AC power can increase leakage current. To minimize leakage current remove the AC ground screw (refer to [Figure 41](#) on [page 75](#)). Removing the AC ground screw can affect EMC performance.

Refer to [Power Wiring Examples](#) beginning on [page 200](#) for input power interconnect diagrams.

## Ungrounded Power Configurations


The ungrounded power configuration ([Figure 40](#)), corner-grounded ([Figure 38](#)), and impedance-grounded ([Figure 37](#)) power configurations do not provide a neutral ground point.

**IMPORTANT**

If you determine that you have ungrounded, corner-grounded, or impedance-grounded power distribution in your facility, you must remove the grounding screws in each of your drives that receive input power.

Refer to [Remove the Grounding Screws in Select Power Configurations](#) on [page 74](#) for more information.

Figure 40 - Ungrounded Power Configuration

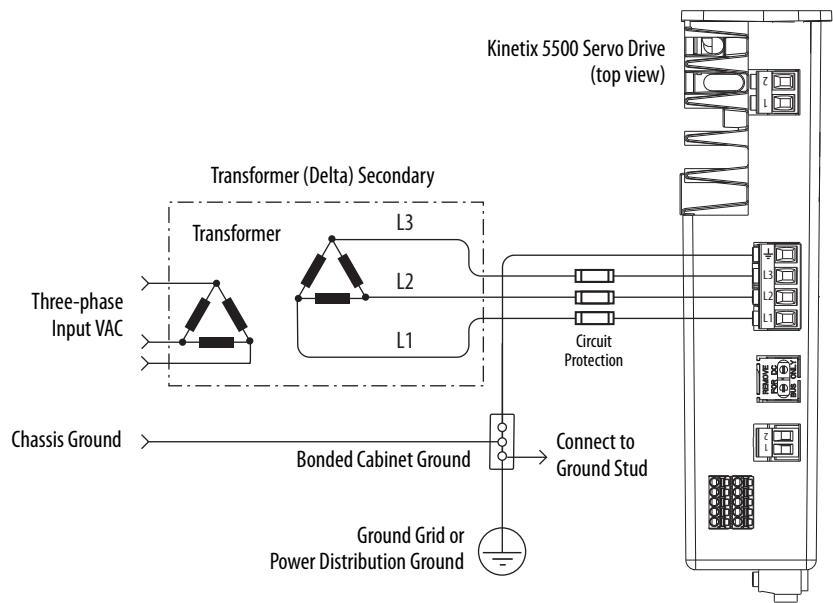

**ATTENTION:** Ungrounded systems do not reference each phase potential to a power distribution ground. This can result in an unknown potential to earth ground.

Refer to [Power Wiring Examples](#) beginning on [page 200](#) for input power interconnect diagrams.

## Remove the Grounding Screws in Select Power Configurations

Remove the grounding screws when using the following power configurations:

- Ungrounded
- Corner grounded
- Impedance grounded

Removing the screws involves gaining access, opening the sliding door, and removing the screws.

### IMPORTANT

If you have grounded power distribution, you do not need to remove the grounding screws. Go to [Grounding the Drive System](#) on [page 76](#).

Removing the grounding screws in multi-axis configurations is best done when the drive is removed from the panel and placed on its side on a solid surface.




**ATTENTION:** Because the unit no longer maintains line-to-neutral voltage protection, the risk of equipment damage exists when you remove the grounding screws.





**ATTENTION:** To avoid personal injury, the grounding screws access door must be kept closed when power is applied. If power was present and then removed, wait at least 5 minutes for the DC-bus voltage to dissipate and verify that no DC-bus voltage exists before accessing the grounding screws.

**Figure 41 - Removing the Ground Screws**

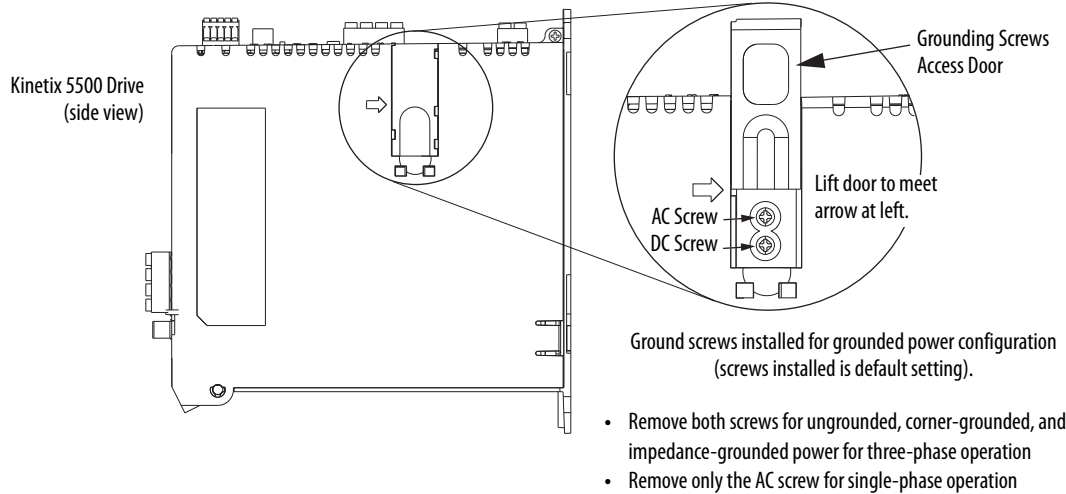

**ATTENTION:** Risk of equipment damage exists. The drive ground configuration must be accurately determined. Leave the grounding screws installed for grounded power configurations (default). Remove the screws for ungrounded, corner-grounded, and impedance-grounded power configurations.

**Table 25 - Grounding Screw Configurations**

Ground Configuration	Example Diagram	Grounding Screw Configuration	Benefits of Correct Configuration
Grounded (wye)	<a href="#">Figure 36 on page 71</a>	Both screws installed (default setting)	<ul style="list-style-type: none"> <li>UL and EMC compliance</li> <li>Reduced electrical noise</li> <li>Most stable operation</li> <li>Reduced voltage stress on components and motor bearings</li> </ul>
<ul style="list-style-type: none"> <li>AC fed ungrounded</li> <li>Corner grounded</li> <li>Impedance grounded</li> </ul>	<a href="#">Figure 40 on page 74</a> <a href="#">Figure 38 on page 72</a> <a href="#">Figure 37 on page 72</a>	Both screws removed	<ul style="list-style-type: none"> <li>Helps avoid severe equipment damage when ground faults occurs</li> <li>Reduced leakage current</li> </ul>
Single-phase input power	<a href="#">Figure 39 on page 73</a>	AC screw removed <sup>(1)</sup>	Minimizes leakage current for single-phase operation

(1) Removing the AC grounding screw to minimize leakage current in single-phase operation can affect EMC performance.

## Grounding the Drive System

All equipment and components of a machine or process system must have a common earth ground point connected to chassis. A grounded system provides a ground path for protection against electrical shock. Grounding your drives and panels minimize the shock hazard to personnel and damage to equipment caused by short circuits, transient overvoltages, and accidental connection of energized conductors to the equipment chassis.




**ATTENTION:** The National Electrical Code contains grounding requirements, conventions, and definitions. Follow all applicable local codes and regulations to safely ground your system.

For CE grounding requirements, refer to [Agency Compliance](#) on [page 28](#).

### Ground the System Subpanel

Ground Kinetix 5500 drives and 2198-CAPMOD-1300 capacitor modules to a bonded cabinet ground bus with a braided ground strap. Keep the braided ground strap as short as possible for optimum bonding.

**Figure 42 - Connecting the Ground Terminal**

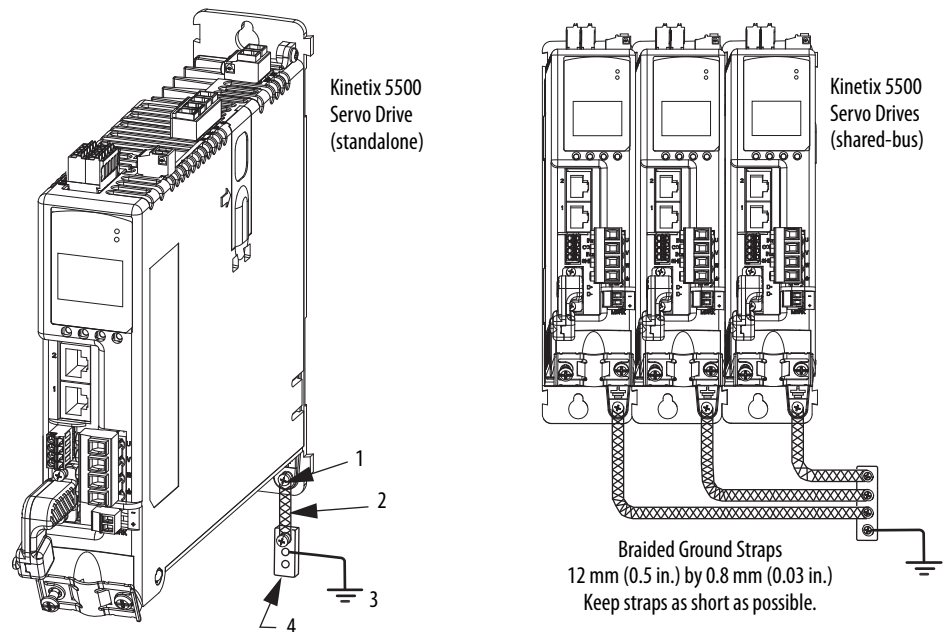


Item	Description
1	Ground screw (green) 2.0 N·m (17.7 lb·in), max
2	Braided ground strap (customer supplied)
3	Ground grid or power distribution ground
4	Bonded cabinet ground bus (customer supplied)

Refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#), for more information.

## Ground Multiple Subpanels

In this figure, the chassis ground is extended to multiple subpanels.

**Figure 43 - Subpanels Connected to a Single Ground Point**

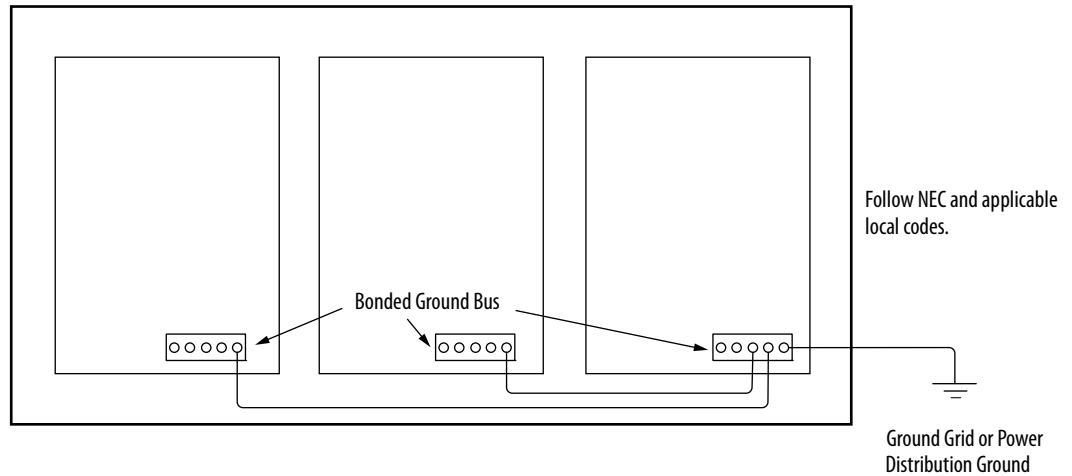

High-frequency (HF) bonding is not illustrated. For HF bonding information, refer to [Bonding Multiple Subpanels](#) on [page 38](#).





## Wiring Requirements

Wires must be copper with 75 °C (167 °F) minimum rating. Phasing of main AC power is arbitrary and earth ground connection is required for safe and proper operation.

Refer to [Power Wiring Examples](#) on [page 200](#) for interconnect diagrams.

**IMPORTANT** The National Electrical Code and local electrical codes take precedence over the values and methods provided.

**Table 26 - Power and I/O Wiring Requirements**

Kinetix 5500 Drive Cat. No.	Description	Connects to Terminals		Wire Size mm <sup>2</sup> (AWG)	Strip Length mm (in.)	Torque Value N•m (lb•in)
		Pin	Signal			
2198-H003-ERSx 2198-H008-ERSx 2198-H015-ERSx 2198-H025-ERSx 2198-H040-ERSx	Mains input power <sup>(1)</sup> (single-axis IPD connector)	 L3 L2 L1	 L3 L2 L1	1.5...4 (16...12)	8.0 (0.31)	0.5...0.6 (4.4...5.3)
2198-H070-ERSx				1.5...6 (16...10)	10.0 (0.39)	
2198-H003-ERSx 2198-H008-ERSx 2198-H015-ERSx 2198-H025-ERSx 2198-H040-ERSx	Motor power	U V W 	U V W 	Motor power cable depends on motor/drive combination.  0.75...2.5 <sup>(2)</sup> (18...14)	7.0 (0.28)	0.5...0.6 (4.4...5.3)
2198-H070-ERSx				2.5...6 <sup>(2)</sup> (14...10)	10.0 (0.39)	
2198-xxxx-ERSx	PELV/SELV 24V power <sup>(1)</sup> (single-axis CP connector)	CP-1 CP-2	24V+ 24V-	0.5...2.5 (20...14)	7.0 (0.28)	0.22...0.25 (1.9...2.2)
	Brake power	BC-1 BC-2	MBRK+ MBRK-	N/A <sup>(3)</sup>		
	DC Bus power	DC-1 DC-2	DC- DC+	N/A <sup>(4)</sup>	N/A <sup>(4)</sup>	N/A <sup>(4)</sup>
	Shunt resistor (frame 2 and 3)	RC-1 RC-2	DC+ SH	0.5...4.0 (20...12)	8.0 (0.31)	0.5...0.6 (4.4...5.3)
	Shunt resistor (frame 1)	RC-1 RC-2	SH DC+			
	Safety <sup>(5)</sup>	STO-1 STO-2 STO-3 STO-4 STO-5	SB+ SB- S1 SC S2	0.2...1.5 (24...16)	10.0 (0.39)	N/A <sup>(6)</sup>
	Digital inputs	IOD-1 IOD-2 IOD-3 IOD-4	IN1 <sup>(7)</sup> COM IN2 SHLD	0.2...1.5 (24...16)	10.0 (0.39)	N/A <sup>(6)</sup>

(1) The wire size, strip length, and torque specifications shown here apply to the single-axis connector that ships with the drive. For the shared-bus connector specifications, refer to [Table 28](#) on [page 80](#) (CP connector) and [Table 30](#) on [page 82](#) (IPD connector).

(2) Building your own cables or using third-party cables is not an option. Use single motor cable catalog number 2090-CSxM1DF-xxAAxx. Refer to the Kinetix Motion Accessories Specifications Technical Data, publication [GMC-TD004](#), for cable specifications.

(3) Motor brake wires are part of the 2090-CSBM1DF-xxAAxx motor cable.

(4) DC bus connections are always made from drive-to-drive over the bus bar connection system. These terminals do not receive discrete wires.

(5) These signals and the safe torque-off (STO) connector apply to only the 2198-Hxxx-ERS drives.

(6) This connector uses spring tension to hold wires in place.

(7) This signal has dual-functionality. You can use IN1 (IOD-1) as registration or Home input.



**ATTENTION:** To avoid personal injury and/or equipment damage, observe the following:

- Make sure installation complies with specifications regarding wire types, conductor sizes, branch circuit protection, and disconnect devices. The National Electrical Code (NEC) and local codes outline provisions for safely installing electrical equipment.
- Use motor power connectors for connection purposes only. Do not use them to turn the unit on and off.
- Ground shielded power cables to prevent potentially high voltages on the shield.

## Wiring Guidelines

Use these guidelines as a reference when wiring the power connectors on your Kinetix 5500 drive.

**IMPORTANT** For connector locations of the Kinetix 5500 drives, refer to [Kinetix 5500 Connector Data](#) on [page 58](#).

When removing insulation from wires and tightening screws to secure the wires, refer to the table on [page 78](#) for strip lengths and torque values.

**IMPORTANT** To improve system performance, run wires and cables in the wireways as established in [Establishing Noise Zones](#) on [page 39](#).

Follow these steps when wiring the connectors for your Kinetix 5500 drive.

1. Prepare the wires for attachment to each connector plug by removing insulation equal to the recommended strip length.

**IMPORTANT** Use caution not to nick, cut, or otherwise damage strands as you remove the insulation.

2. Route the cable/wires to your Kinetix 5500 drive.
3. Insert wires into connector plugs.

Refer to connector pinout tables in [Chapter 4](#) or the interconnect diagrams in [Appendix A](#).

4. Tighten the connector screws.
5. Gently pull on each wire to make sure it does not come out of its terminal; reinsert and tighten any loose wires.
6. Insert the connector plug into the drive connector.

## Wiring the Power Connectors


This section provides examples and guidelines to assist you in making connections to the input power connectors.

Refer to [Power Wiring Examples](#) on [page 200](#) for an interconnect diagram.

### Wire the 24V Control Power Input Connector

The 24V power (CP) connector requires 24V DC input for the control circuitry. The single-axis connector plug is included with the drive, shared-bus connector kits are purchased separately.


**Figure 44 - CP Connector Wiring - Single Axis**

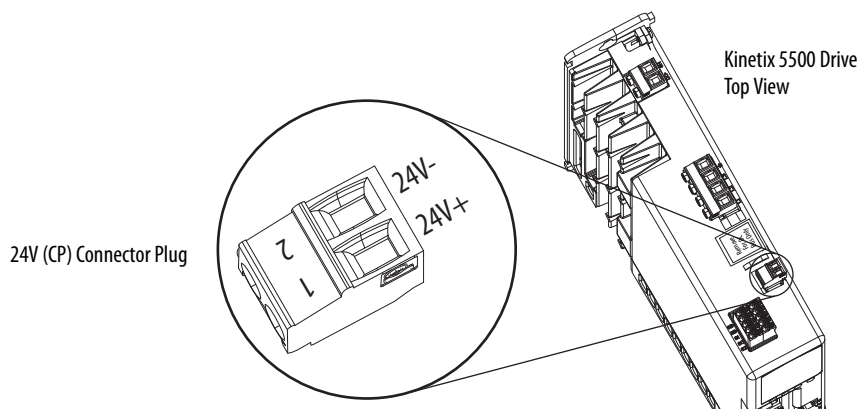

**Table 27 - Single-axis CP Connector Wiring Specifications**

Drive Module Cat. No.	CP Pin	Signal	Recommended Wire Size mm <sup>2</sup> (AWG)	Strip Length mm (in.)	Torque Value N·m (lb·in)
2198-Hxxx-ERSx 2198-CAPMOD-1300	CP-1	24V+	0.5...2.5 (20...14)	7.0 (0.28)	0.22...0.25 (1.9...2.2)
	CP-2	24V-			

**Figure 45 - CP Connector Wiring - Shared Bus**

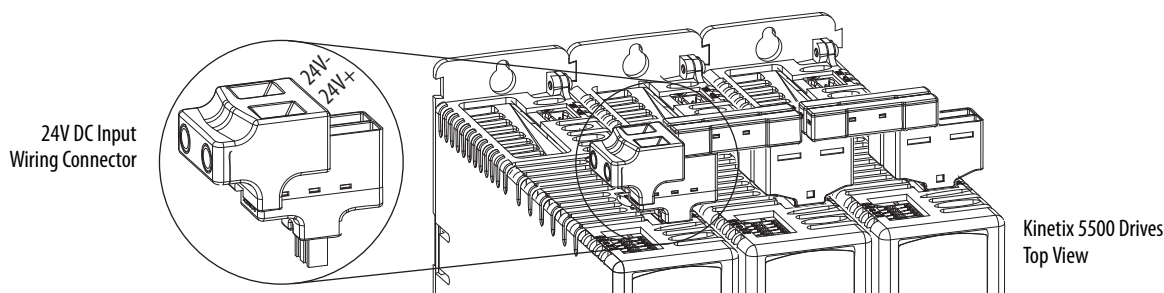

**Table 28 - Shared-bus CP Connector Wiring Specifications**

Drive Cat. No.	CP Pin	Signal	Input Current, max A rms	Recommended Wire Size mm <sup>2</sup> (AWG)	Strip Length mm (in.)	Torque Value N·m (lb·in)
2198-Hxxx-ERSx 2198-CAPMOD-1300	CP-1	24V+	32	8.4 (8)	11.0 (0.43)	1.7...1.8 (15.0...15.9)
	CP-2	24V-				


## Wire the Input Power Connector

The input power (IPD) connector requires 195...528V AC (single-phase or three-phase) for mains input power. The single-axis connector plug is included with the drive, shared-bus connector kits are purchased separately.



**ATTENTION:** Make sure the input power connections are correct when wiring the IPD connector plug or input wiring connector and that the plug/connector is fully engaged in the drive connector. Incorrect wiring/polarity or loose wiring can cause explosion or damage to equipment.

**Figure 46 - IPD Connector Wiring - Single Axis**

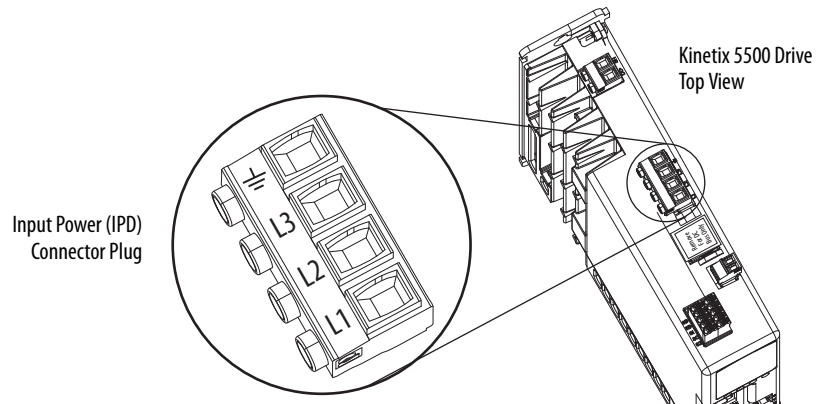

**Table 29 - Single-axis IPD Connector Wiring Specifications**



Kinetix 5500 Drive Cat. No.	Pin	Signal	Recommended Wire Size mm <sup>2</sup> (AWG)	Strip Length mm (in.)	Torque Value N·m (lb·in)
2198-H003-ERSx 2198-H008-ERSx 2198-H015-ERSx 2198-H025-ERSx 2198-H040-ERSx	 L3 L2 L1	 L3 L2 L1	1.5...4 (16...12)	8.0 (0.31)	0.5...0.6 (4.4...5.3)
2198-H070-ERSx			1.5...6 (16...10)	10.0 (0.39)	

Figure 47 - IPD Connector Wiring - Shared Bus

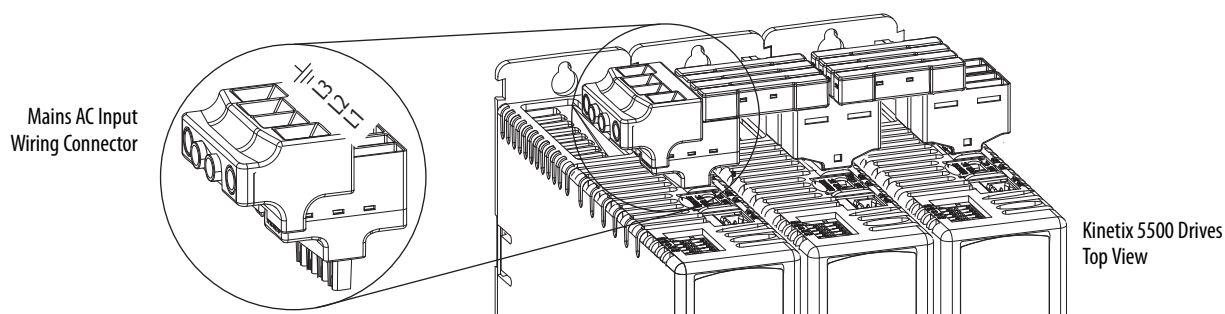


Table 30 - Shared Bus IPD Connector Wiring Specifications

Kinetix 5500 Drive Cat. No.	Pin	Signal	Input Current, max A rms	Recommended Wire Size mm <sup>2</sup> (AWG)	Strip Length mm (in.)	Torque Value N·m (lb·in)
2198-H003-ERSx 2198-H008-ERSx 2198-H015-ERSx 2198-H025-ERSx 2198-H040-ERSx	$\frac{\perp}{\text{L3}}$ L2 L1	$\frac{\perp}{\text{L3}}$ L2 L1	52	13.3...3.3 (6...12)	11.0 (0.43)	1.7...1.8 (15.0...15.9)
2198-H070-ERSx				13.3 (6)		

## Wiring the Digital Input Connectors

This section provides guidelines to assist you in making digital input connections.

### Wire the Safe Torque-off Connector


For the hardwired safe torque-off (STO) connector pinouts, feature descriptions, and wiring information, refer to [Chapter 9](#) beginning on [page 169](#).



## Wire the Digital Inputs Connector

The digital inputs (IOD) connector uses spring tension to hold wires in place.

**Figure 48 - IOD Connector Wiring**

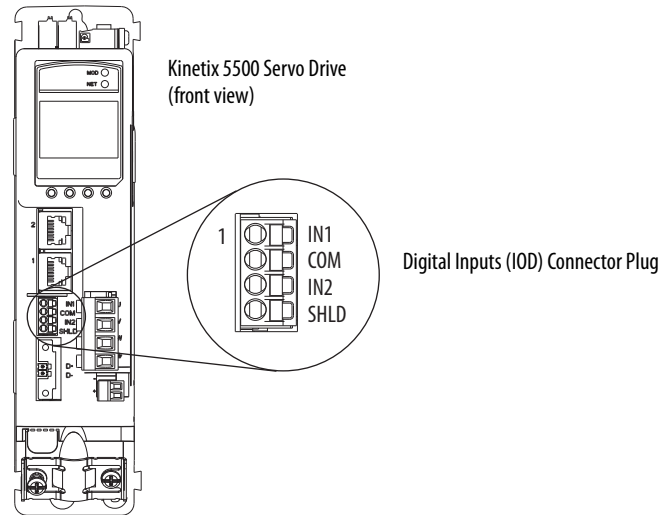

**Table 31 - Digital Inputs (IOD) Connector Specifications**

Drive Cat. No.	DC Pin	Signal	Recommended Wire Size mm <sup>2</sup> (AWG)	Strip Length mm (in.)	Torque Value N·m (lb·in)
2198-Hxxx-ERSx	IOD-1 IOD-2 IOD-3 IOD-4	IN1 <sup>(1)</sup> COM IN2 SHLD	0.2...1.5 (24...16)	10.0 (0.39)	N/A <sup>(2)</sup>

(1) This signal has dual-functionality. You can use IN1 (IOD-1) as registration or Home input.

(2) This connector uses spring tension to hold wires in place.

## Wiring Kinetix VP Motors

Kinetix 5500 drives and Kinetix VP motor combinations use single motor-cable technology with motor power, feedback, and brake wires (when specified) housed in a single cable. Feedback wires are shielded separately and provide a shield braid for grounding in the connector kit.

### IMPORTANT

Due to the unique characteristics of single cable technology, designed for and tested with Kinetix 5500 drives and Kinetix VP motors, you cannot build your own cables or use third-party cables.

Refer to the Kinetix Motion Accessories Specifications Technical Data, publication [GMC-TD004](#), for cable specifications.


Table 32 - Single Cable Catalog Numbers

Motor Cat. No.	Feedback Kit Cat. No.	Motor Cable Cat. No. (with brake wires)	Motor Cable Cat. No. (without brake wires)	Feedback Connections
VPL-Bxxxx VPF-Bxxxx VPS-Bxxxx	2198-KITCON-DSL (included with each servo drive)	2090-CSBM1DF-xxAAxx (standard) cables 2090-CSBM1DF-xxAFxx (continuous-flex) cables	2090-CSWM1DF-xxAAxx (standard) cables	Flying-lead feedback conductors. Cables are designed specifically for Kinetix 5500 drives.
		2090-CSBM1DG-xxAAxx (standard) cables 2090-CSBM1DG-xxAFxx (continuous-flex) cables	2090-CSWM1DG-xxAAxx (standard) cables	Flying-lead feedback conductors. Leads are longer to accommodate Kinetix 5500 or Kinetix 5700 drives. Extra service loops are required with Kinetix 5500 drives.

## Motor Power Connections

Refer to [Kinetix 5500 Drive and Motor/Actuator Wiring Examples](#) on [page 205](#) for an interconnect diagram.

Figure 49 - MP Connector Wiring

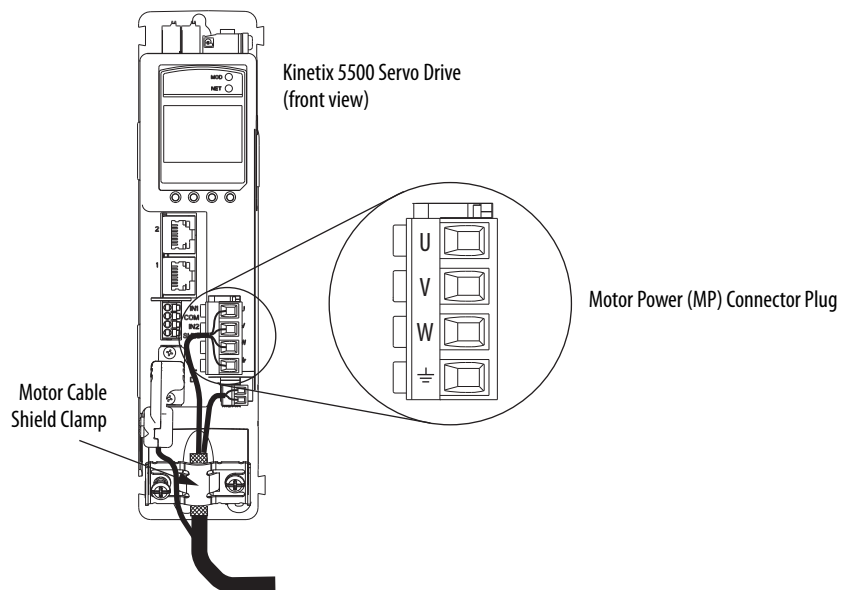

**ATTENTION:** Make sure the motor power connections are correct when wiring the MP connector plug and that the plug is fully engaged in the module connector. Incorrect wiring/polarity or loose wiring can cause an explosion or damage to equipment.


Table 33 - Motor Power (MP) Connector Specifications

Drive Cat. No.	Pin	Signal/Wire Color	Recommended Wire Size <sup>(1)</sup> mm <sup>2</sup> (AWG)	Strip Length mm (in.)	Torque Value N·m (lb·in)
2198-H003-ERSx 2198-H008-ERSx 2198-H015-ERSx 2198-H025-ERSx 2198-H040-ERSx	U V W ⏏	U Brown V Black W Blue ⏏ Green/Yellow	Motor power cable depends on motor/drive combination. 0.75...2.5 (18...14) max	8.0 (0.31)	0.5...0.6 (4.4...5.3)
2198-H070-ERSx			2.5...6 (14...10) max	10.0 (0.39)	0.5...0.8 (4.4...7.1)

(1) Building your own cables or using third-party cables is not an option. Use 2090-CSxM1DF/DG single motor cables. Refer to the Kinetix Motion Accessories Specifications Technical Data, publication [GMC-TD004](#), for cable specifications.

## Motor Brake Connections

**Figure 50 - BC Connector Wiring**

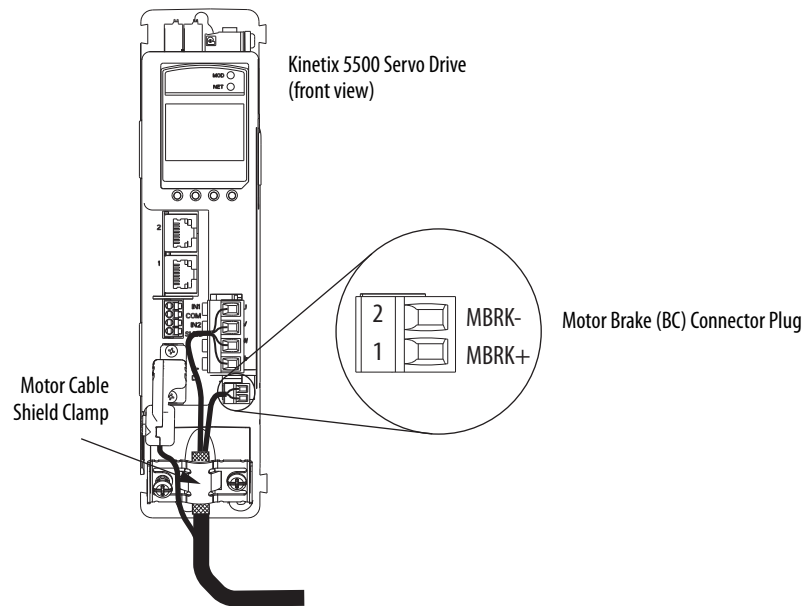

**Table 34 - Motor Brake (BC) Connector Specifications**

Drive Cat. No.	Pin	Signal/ Wire Color	Recommended <sup>(1)</sup> Wire Size (AWG)	Strip Length mm (in.)	Torque Value N·m (lb·in)
2198-Hxxx-ERSx	BC-1	MBRK-/Black	N/A	7.0 (0.28)	0.22...0.25 (1.9...2.2)
	BC-2	MBRK-/White			

(1) Motor brake wires are part of the 2090-CSBM1DF/DG motor cable.

## Motor Feedback Connections


Single motor-cable feedback connections are made by using the 2198-KITCON-DSL feedback connector kit (included with each servo drive).

- 2090-CSxM1DF cables have flying-lead conductors designed specifically for Kinetix 5500 servo drives.
- 2090-CSxM1DG cables also have flying-lead feedback conductors. Leads are longer than 2090-CSxM1DF cables to accommodate Kinetix 5500 or Kinetix 5700 servo drives. Because the leads are longer, extra service loops are required with Kinetix 5500 drives.

### IMPORTANT

When using the 2198-KITCON-DSL feedback connector kit, the ambient temperature for the Kinetix 5500 drive enclosure is 0...50 °C (32...122 °F).

Figure 51 - MF Connector Wiring

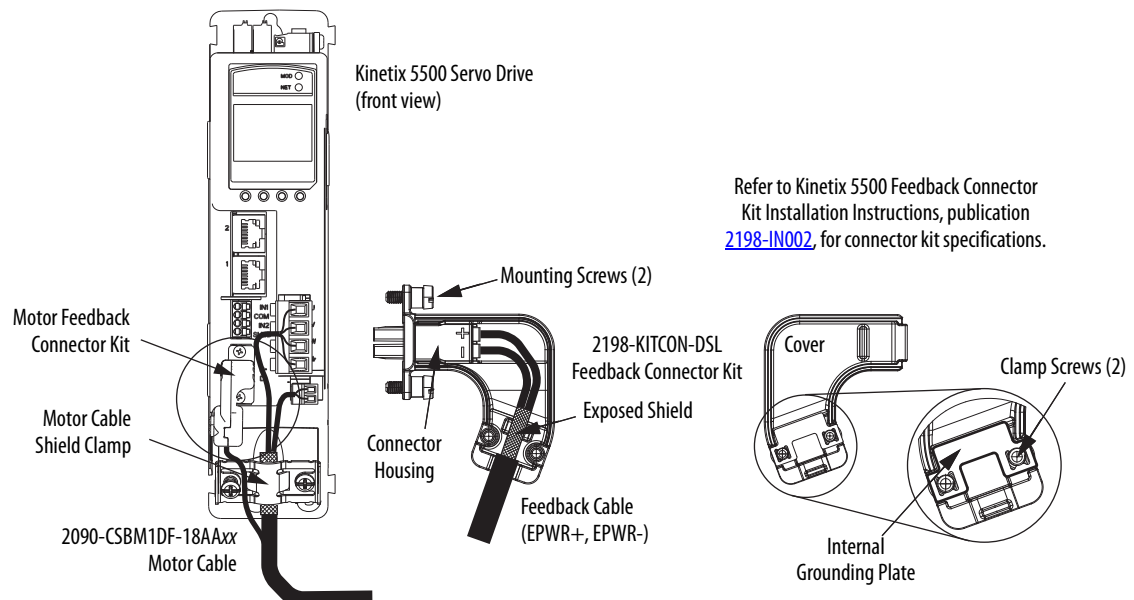

### IMPORTANT

Cable preparation and positioning that provides a high-frequency bond between the shield braid and grounding plate is required to optimize system performance.

Table 35 - Motor Feedback (MF) Connector Specifications

Drive Cat. No.	Pin	Signal/ Wire Color	Wire Size AWG	Strip Length mm (in.)	Torque Value N·m (lb·in)
2198-Hxxx-ERSx	MF-1	D+/Blue	22	10.0 (0.39)	0.4 (3.5)
	MF-2	D-/White/Blue			

### IMPORTANT

The feedback bundle in 2090-CSxM1DF-18AAxx motor cables (typically used with frame 1 drives) route around the shield clamp (as shown in [Figure 51](#)). The feedback bundle in 14 and 10 AWG cables (typically used with frame 2 and 3 drives) route with the power and brake wires inside the cable shield.

## Apply the Single Motor-cable Shield Clamp

Factory-supplied 2090-Series single motor cables are shielded, and the braided cable shield must terminate at the drive during installation. A small portion of the cable jacket has been removed to expose the shield braid. The exposed area must be clamped (with the clamp provided) at the bottom front of the drive.



**SHOCK HAZARD:** To avoid hazard of electrical shock, make sure shielded power cables are grounded according to recommendations.


**TIP** Cables for Kinetix VP motors (catalog numbers 2090-CBxM1DF-18AAxx) do not route the feedback bundle under the shield clamp. The same cables with 14 or 10 AWG conductors have the feedback bundle within the cable shield braid.

This procedure assumes you have completed wiring your motor power, brake, and feedback connectors and are ready to apply the cable shield clamp.

Follow these steps to apply the motor cable shield clamp.


1. Loosen the left-side (retention) clamp screw and remove the right-side screw.

**Figure 52 - 18 AWG Cable Installation**

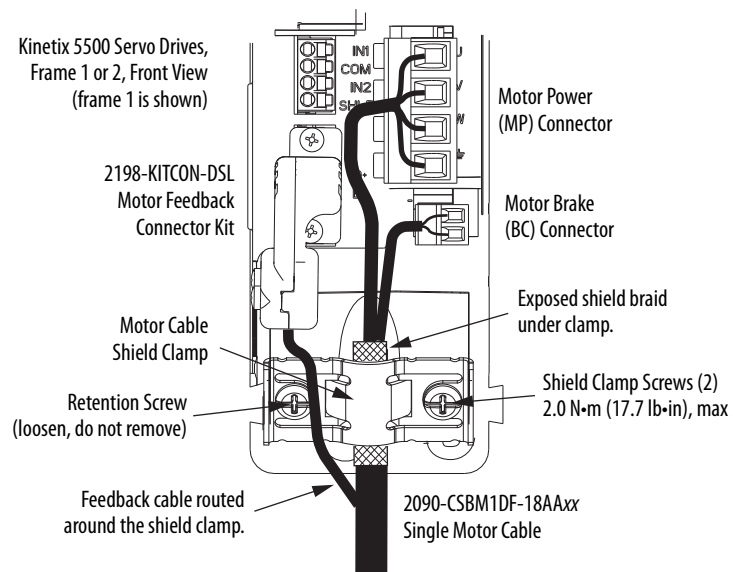

When the drive/motor combination calls for 18 AWG cable, the feedback cable routes around the motor cable shield clamp.

Figure 53 - 14 and 10 AWG Cable Installation

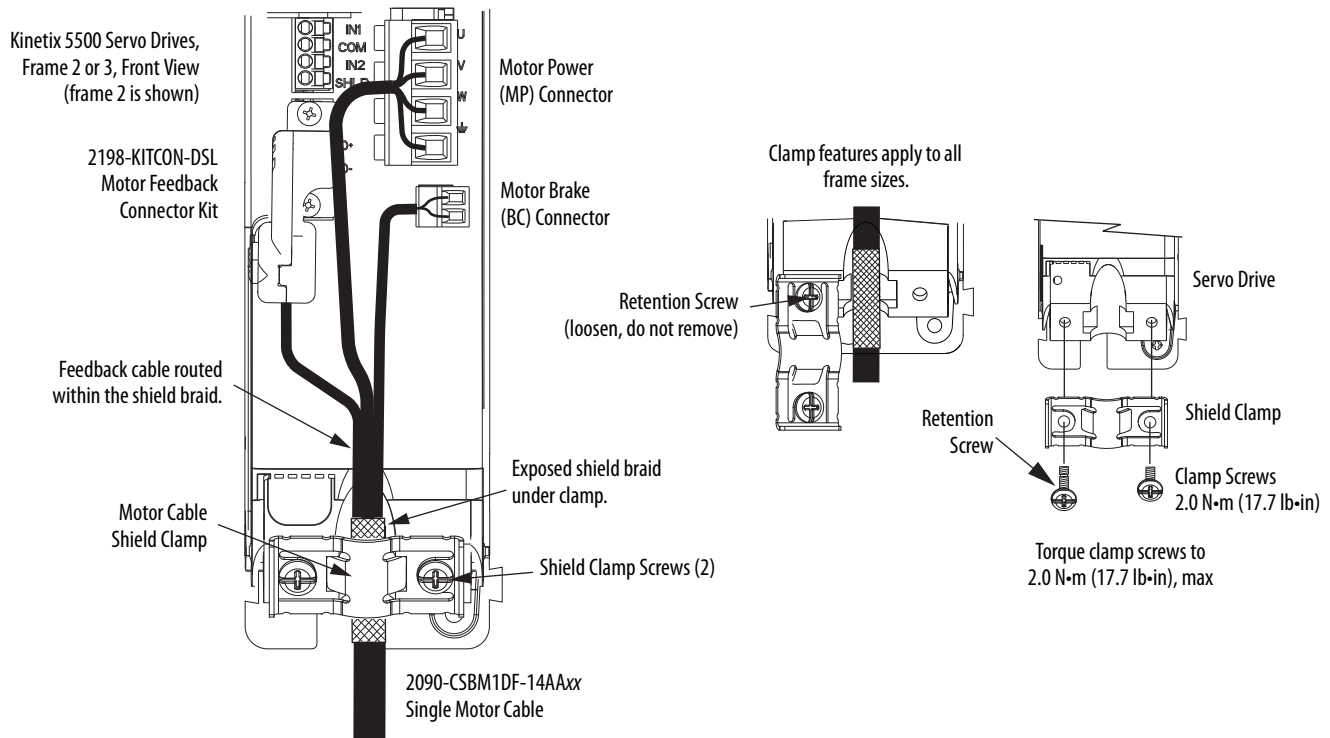

When the drive/motor combination calls for 14 or 10 AWG cable, the feedback cable routes along with the power and brake wiring.

2. Position the exposed portion of the cable shield directly in line with the clamp.

---

**IMPORTANT** Loosen the retention screw, if needed, until you can start threading both clamp screws with the cable shield under the clamp.

---

3. Tighten each screw a few turns at a time until the maximum torque value of 2.0 N•m (17.7 lb•in) is achieved.
4. Repeat [step 1](#) through [step 3](#) for each drive in multi-axis configurations.

## Wiring Other Allen-Bradley Motors and Actuators

Kinetix 5500 drives are also compatible with other Allen-Bradley motors and actuators, however the 2198-H2DCK Hiperface-to-DSL (series B or later) feedback converter kit is required for converting the 15-pin Hiperface feedback signals to 2-pin DSL feedback signals.

Follow these guidelines when 2090-CPxM7DF (power/brake) cables and 2090-CFBM7DF (feedback) cables are used in a new installation or reused in an existing installation with Kinetix 5500 servo drives. MP-Series servo motors and actuators have separate connectors for 2090-CPxM7DF power/brake cables and 2090-CFBM7DF feedback cables.

**IMPORTANT**

To configure these additional motors and actuators (see [Table 37](#)) with your Kinetix 5500 servo drive, you must have drive firmware 2.002 or later. Refer to [Table 36](#) to determine if you need to install the Kinetix 5500 Add-on Profile.

**Table 36 - AOP Installation Requirement**

Drive Firmware Revision	Logix Designer Application Version	Kinetix 5500 AOP Needed?
2.002 or later	21.00	Yes
	21.03 or later <sup>(1)</sup>	No

(1) If you are planning to use drive firmware revision 4.001 or later, see [Kinetix 5500/5700 Add-On Profile](#) on [page 107](#).

## Install the Kinetix 5500 Add-On Profile

Add-On profiles (AOP) are available for download at the Custom Downloads Add-On Profiles website: <https://download.rockwellautomation.com/csd/download.aspx?downloadid=addonprofiles>

Follow these steps to download the Kinetix 5500 Add-On profile.

1. Login to the Custom Download Add-On Profiles website.

The Custom Download Files dialog box opens.

**Rockwell Automation** LISTEN. THINK. SOLVE.®

Products & Technologies ▸ Solutions & Services ▸ News & Innovation ▸ Training & Events ▸ Sales & Partners ▸ Support ▸ About Us ▸

**Rockwell Software**

- Support Center
- KnowledgeBase
- Software Patches
- FAQ

**Custom Download Files**

The following items are available for download with this Download ID only.

	Description	Download Code	Version	Release Date	Release Notes	Download Size	Comments
<input checked="" type="checkbox"/>	AOP for 2198-Hxx CIP Motion Kinetix5500		9.06.00	2014/03/27		373 MB	21.00.00 - Minimum RSLogix 5000 Software Revision Add-On Profile for Kinetix 5500 CIP Motion Drives with DSL Converter support.

Total Download Size = 0 B **Download Now**

2. Check AOP for 2198-Hxx CIP Motion Kinetix5500.
3. Click Download Now and accept the user license agreement.  
If prompted to install the Download Manager, allow the installation.
4. Click the Add-On Profile icon and follow the download instructions.
5. Extract the AOP zip file and run Setup.

## Motor Power and Brake Connections

The motors and actuators in [Table 37](#) have separate power/brake and feedback cables. The motor power/brake cable attaches to the cable clamp on the drive and wires to the MP and BC connectors, respectively.

**Table 37 - Current Motor Power Cable Compatibility**

Motor/Actuator Cat. No. <sup>(1)</sup>	Motor Power Cat. No. <sup>(2)</sup> (with brake wires)	Motor Power Cat. No. <sup>(2)</sup> (without brake wires)
MPL-A/B15xxx-xx7xAA, MPL-A/B2xxx-xx7xAA, MPL-A/B3xxx-xx7xAA, MPL-A/B4xxx-xx7xAA, MPL-A/B45xxx-xx7xAA, MPL-A/B5xxx-xx7xAA, MPL-B6xxx-xx7xAA	2090-CPBM7DF-xxAAxx (standard) or 2090-CPBM7DF-xxAFxx (continuous-flex)	2090-CPWM7DF-xxAAxx (standard) or 2090-CPWM7DF-xxAFxx (continuous-flex)
MPM-A/Bxxxx, MPF-A/Bxxxx, MPS-A/Bxxxx		
MPAS-A/Bxxxx1-V05SxA, MPAS-A/Bxxxx2-V20SxA MPAI-A/Bxxxx, MPAR-A/B3xxx, MPAR-A/B1xxx and MPAR-A/B2xxx (series B)		
LDAT-Sxxxxxx-xDx	N/A	

(1) The 2198-H2DCK (series B or later) feedback converter kit is required.

(2) Refer to the Kinetix Motion Accessories Specifications Technical Data, publication [GMC-TD004](#), for cable specifications.

Refer to [Motor Power Connections](#) on [page 84](#) and [Motor Brake Connections](#) on [page 85](#) for the MP and BC connector specifications.

**Table 38 - Legacy Motor Power Cables**

Motor Cable	Description	Motor Power Cat. No.
Standard	Power/brake, threaded	2090-XXNPMF-xxSxx
	Power-only, bayonet	2090-XXNPMP-xxSxx
Continuous-flex	Power/brake, threaded	2090-CPBM4DF-xxAFxx
	Power-only, threaded	2090-CPWM4DF-xxAFxx
	Power-only, bayonet	2090-XXTPMP-xxSxx

**Table 39 - Induction Motor Power Cable Specifications**

Cable Manufacturer	Cable Series	Voltage Rating	Temperature Rating
Belden	29500-29507	600V	90 °C (194 °F)
Lapp Group	ÖLFEX VFD XL		
SAB	VFD XLPE TR		

To use your existing Bulletin 2090 cables with Kinetix 5500 drives, some preparation is necessary so that the cable shield, conductor, and strip lengths are correct. Follow these cable preparation guidelines:

- Trim the shield flush so that no strands can short to adjacent terminals.
- Measure the conductor lengths and include a service loop.
- Remove just enough insulation to provide the proper strip length.



### Maximum Cable Lengths

The power cable length for Kinetix 5500 drive and MP-Series motor/actuator combinations is limited to 20 m (65.6 ft); however, you can replace the existing motor power/brake cable with a 2090-CSBM1DF or 2090-CSBM1DG single motor cable to extend the length up to 50 m (164 ft).


**IMPORTANT** The option to replace 2090-CPBM7DF power/brake cables with 2090-CSBM1DF/DG single cables applies to only 18 and 14 AWG single cables. 2090-CSxM1Dx-10Axxx (10 AWG) cables do not support this 50 m (164 ft) option.

When replacing your existing motor power/brake cable with a 2090-CSBM1DF/DG single motor cable, only the motor power and brake conductors are used. Cut off the feedback conductors in the single motor cable and reuse the existing 2090-Series feedback cable.

### Motor Power/Brake Cable Preparation

The 2090-CPBM7DF cable power and brake conductors have the following dimensions from the factory. If your cable is reused from an existing application, the actual conductor lengths could be slightly different.

**Figure 54 - 2090-CPBM7DF Power/brake Cable Dimensions**

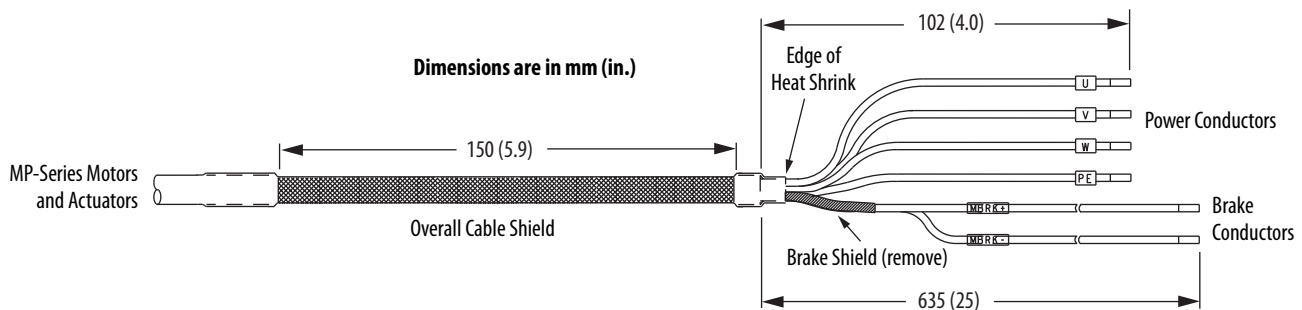

Power cable preparation on existing 16 and 14 AWG cables is sufficient to reuse on Kinetix 5500 frame 1 and 2 drives, except for the brake conductors, which are much longer than required.

However, for frame 3 drives with 14 or 10 AWG cables, the overall length of the cable preparation area needs to be increased for the motor power conductors to reach the MP connector and also provide a proper service loop.

Follow these steps to prepare your existing brake conductors and 14 or 10 AWG power cable.

1. Remove a total of 325 mm (12.8 in.) of cable jacket from your existing cable.

This exposes additional cable shield.

2. Remove all but 63.5 mm (2.5 in.) of the shield.

- Cover 12.5 mm (0.5 in.) of the shield ends and an equal length of the conductors with 25 mm (1.0 in.) of electrical tape or heat shrink.

Do the same on the other side of the cable shield. This keeps the shield ends from fraying and holds the conductors together.


- Cut the brake conductors back to 163 mm (6.4 in.) and trim the shield braid at the base of the jacket.

The shield braid covering the brake conductors is not needed.

- Remove the specified length of insulation from the end of each wire.

This example applies to existing 2090-Series cables and 2090-Series single motor cables. If you are using a 2090-CSBM1DF/DG single motor cable, you can remove the shield braid covering the brake conductors.

**Figure 55 - Power/brake Cable (14 and 10 AWG)**

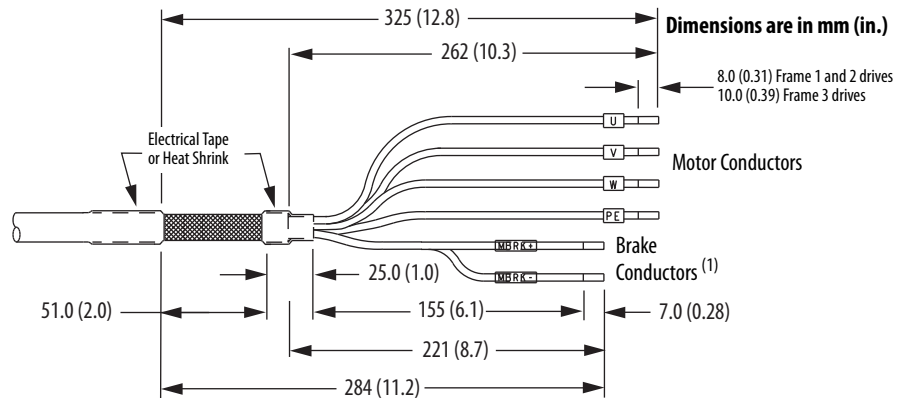

(1) The overall shield braid covering the brake conductors can be removed.

### Apply the Motor Power/brake Shield Clamp

The power/brake cable shield attaches to the drive cable clamp. A clamp spacer is included with the 2198-H2DCK feedback converter kit for cable diameters that are too small for a tight fit within the drive clamp alone.

- Routing the conductors with service loops provides stress relief to the motor power and brake conductors.
- Make sure the cable clamp tightens around the cable shield and provides a good bond between the cable shield and the drive chassis.


**IMPORTANT** Loosen the retention screw, if needed, until you can start threading both clamp screws with the cable shield under the clamp.

- Tighten each screw, a few turns at a time, until the maximum torque value of 2.0 N•m (17.7 lb•in) is achieved.

# **IMPORTANT**

If the power/brake cable shield has a loose fit inside the shield clamp, insert the clamp spacer between the shield clamp and the drive to reduce the clamp diameter. When the clamp screws are tight, 2.0 N·m (17.7 lb·in), the result must be a high-frequency bond between the cable shield and the drive chassis.

**Figure 56 - Cable Clamp Attachment**

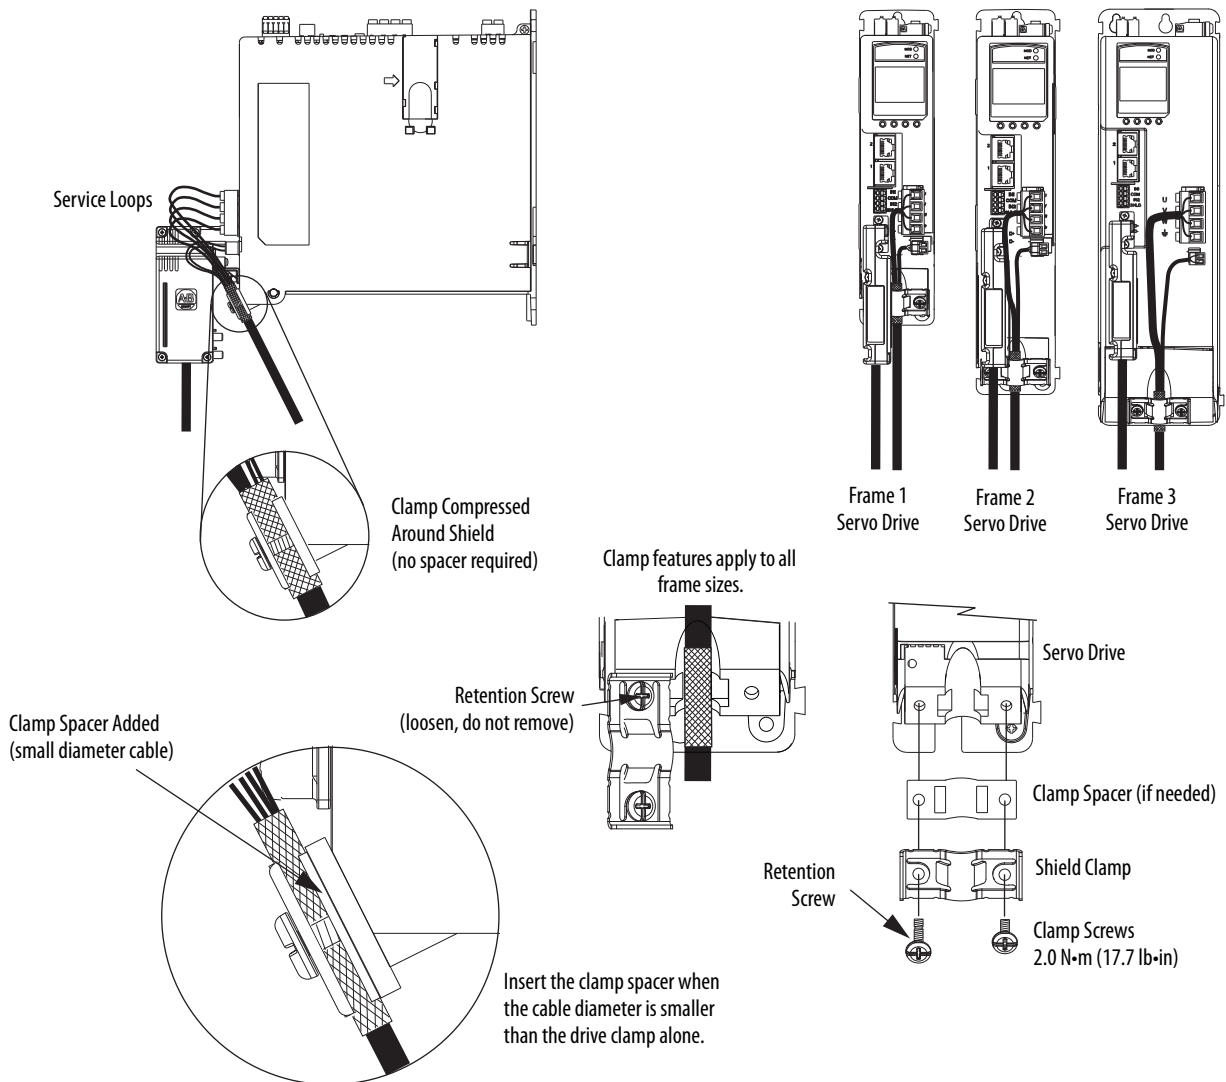

## Motor Feedback Connections

The feedback cable attaches to the 2198-H2DCK converter kit and is wired to the 10-pin connector. Bulletin 2090 feedback cables require preparation to make sure the shield clamp attaches properly and conductors route smoothly to the 10-pin connector terminals.

**IMPORTANT** When using the 2198-H2DCK feedback connector kit and Bulletin 2090 feedback cables listed in [Table 40](#) or [Table 41](#), the ambient temperature for the Kinetix 5500 drive enclosure is derated to 0...40 °C (32...104 °F).

All of the current and legacy feedback cables listed below are compatible with the 2198-H2DCK (series B or later) converter kit.

**IMPORTANT** Only Allen-Bradley motors and actuators with single-turn or multi-turn high-resolution absolute encoders are compatible.


**Table 40 - Motor Feedback Cable Compatibility**

Motor/Actuator Family	Motor/Actuator Cat. No. <sup>(1)</sup>	Feedback Cable Cat. No.
MP-Series low-inertia motors	MPL-A/B15xxx-V/Ex7xAA MPL-A/B2xxx-V/Ex7xAA	2090-CFBM7DF-CEAAxx 2090-CFBM7DD-CEAAxx 2090-CFBM7DF-CERAxx (standard) or 2090-CFBM7DF-CEAFxx 2090-CFBM7DD-CEAFxx 2090-CFBM7DF-CDAFxx (continuous-flex)
	MPL-A/B3xxx-S/Mx7xAA MPL-A/B4xxx-S/Mx7xAA MPL-A/B45xxx-S/Mx7xAA MPL-A/B5xxx-S/Mx7xAA MPL-B6xxx-S/Mx7xAA	
MP-Series medium-inertia motors	MPM-A/Bxxxx-S/M	
MP-Series food-grade motors	MPF-A/Bxxxx-S/M	
MP-Series stainless-steel motors	MPS-A/Bxxxxx-S/M	
MP-Series integrated linear stages	MPAS-A/Bxxxx1-V05SxA MPAS-A/Bxxxx2-V20SxA	
MP-Series electric cylinders	MPAR-A/B1xxx-V and MPAR-A/B2xxx-V (series B) MPAR-A/B3xxx-M	
MP-Series heavy-duty electric cylinders	MPAI-A/BxxxxxM3	
LDAT-Series linear thrusters	LDAT-Sxxxxxx-xDx	

(1) The 2198-H2DCK (series B or later) feedback converter kit is required.

**Table 41 - Legacy Motor Feedback Cables**

Motor Cable	Description	Feedback Cable Cat. No.
Standard	Encoder feedback, threaded	2090-XXNFMF-Sxx 2090-UXNFBMF-Sxx
		2090-UXNFBMP-Sxx
	Encoder feedback, bayonet	2090-XXNFMF-Sxx
Continuous-flex	Encoder feedback, bayonet	2090-XXTFMP-Sxx
	Encoder feedback, threaded	2090-CFBM4DF-CDAFxx

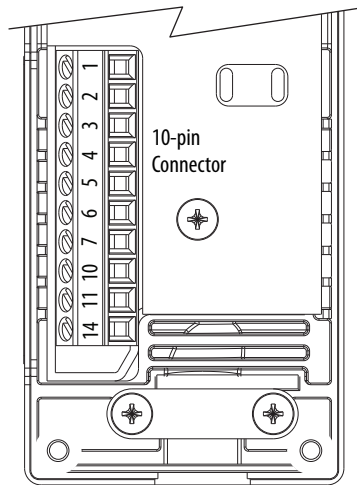**Figure 57 - 2198-H2DCK Converter Kit Pinout**

Terminal	Signal	Wire Color	Strip Length mm (in.)	Torque Value N·m (lb·in)
1	SIN+	Black	5.0 (0.2)	0.22...0.25 (1.9...2.2)
2	SIN-	White/Black		
3	COS+	Red		
4	COS-	White/Red		
5	DATA+	Green		
6	ECOM <sup>(1)</sup>	White/Gray		
7	EPWR_9V <sup>(2)</sup>	Orange		
10	DATA-	White/Green		
11	TS+	White/Orange		
14	EPWR_5V <sup>(2)</sup>	Gray		

(1) The ECOM and TS- connections are tied together and connect to the cable shield.

(2) The converter kit generates 5V and 9V from a 12V supply coming from the drive. The 5V supply is used by 5V encoders in 230V motors. The 9V supply is used by 9V encoders in 460V motors.


### Motor Feedback Cable Preparation

Follow these steps to prepare feedback cables.

1. Remove 115 mm (4.5 in.) of cable jacket and 103 mm (4.0 in.) of cable shield.

**IMPORTANT** This length of wire is needed to provide a service loop for the longest wires terminated at the 10-pin connector. However, most wires need to be trimmed shorter, depending on the terminal they are assigned to.

2. Determine the length for each of the 10 wires and trim as necessary.
3. Remove 5.0 mm (0.2 in.) of insulation from the end of each wire.

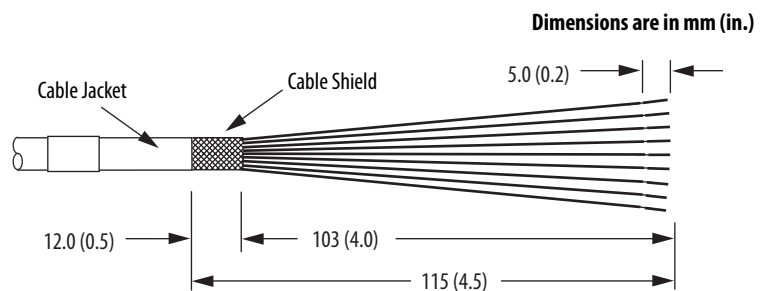

### Apply the Converter Kit Shield Clamp

Follow these steps to apply the converter kit shield clamp.

1. Apply the shield clamp to the 12 mm (0.5 in.) of exposed cable shield to achieve a high-frequency bond between the shield braid and clamp.


---

**IMPORTANT**

Cable preparation and positioning that provides a high-frequency bond between the shield braid and clamp is required to optimize system performance.

---

Apply 0.30 N•m (2.6 lb•in) torque to each screw.

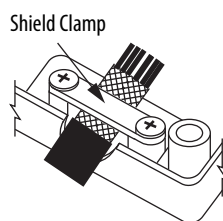

2. Route and insert each wire to its assigned terminal.

Include a service loop, as shown in [Figure 58](#), and refer to the connector pinout in [Figure 57](#).

3. Tighten each terminal screw.

Apply 0.22...0.25 N•m (1.9...2.2 lb•in) torque to each screw.


4. Gently pull on each wire to make sure it does not come out of its terminal; reinsert and tighten any loose wires.
5. Attach the tie wrap for added stress relief.

**Table 42 - 2090-CFBM7DF-CEAxxx Feedback Cables**

Rotary Motors	MPL-B15xxx...MPL-B2xxx-V/Ex4/7xAA MPL-B3xxx...MPL-B6xxx-M/Sx7xAA MPL-A5xxx-M/Sx7xAA	MPL-A15xxx...MPL-A2xxx-V/Ex4/7xAA MPL-A3xxx-M/Sx7xAA MPL-A4xxx-M/Sx7xAA MPL-A45xxx-M/Sx7xAA MPM-A115xxx...MPM-A130xxx-M/S MPF/MP5-A3xx-M/S MPF/MP5-A4xx-M/S MPF/MP5-A45xx-M/S MPS-A5xxx-M/S	2198-H2DCK Converter Kit Pin
	MPM-A165xxx...MPM-A215xxx MPM-Bxxxx-M/S MPF-Bxxx-M/S MPF-A5xxx-M/S MPS-Bxxx-M/S		
Linear Actuators	MPAS-Bxxxx-VxxSxA MPAR-Bxxxx, MPAI-Bxxxx LDAT-Sxxxxx-xDx	MPAS-Axxxx-VxxSxA MPAR-Axxxx, MPAI-Axxxx	
1	Sin+	Sin+	1
2	Sin-	Sin-	2
3	Cos+	Cos+	3
4	Cos-	Cos-	4
5	Data+	Data+	5
6	Data-	Data-	10
9	Reserved	EPWR_5V	14
10	ECOM	ECOM	6 <sup>(1)</sup>
11	EPWR_9V	Reserved	7
12	ECOM	ECOM	6
13	TS+	TS+	11

(1) The ECOM and TS- connections are tied together and connect to the cable shield.

A mounting bracket is included with the 2198-H2DCK converter kit to secure the kit to the drive. Install the mounting bracket in the mounting position specific to the frame size of your drive.

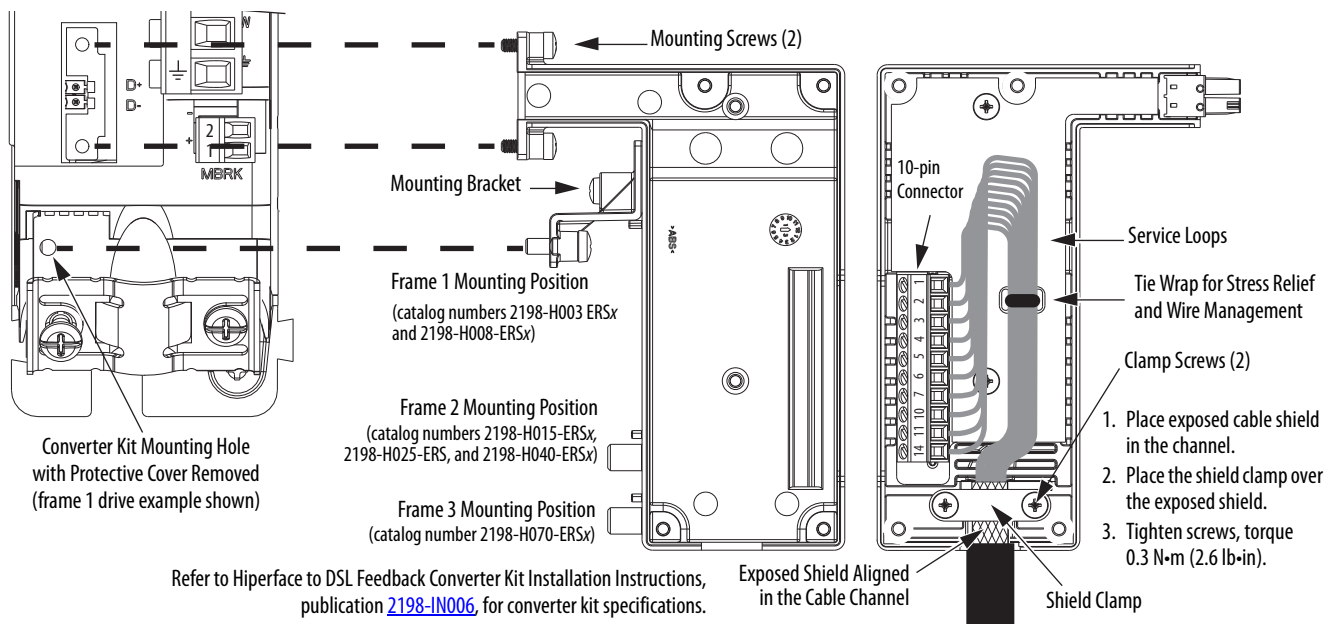**Figure 58 - Wiring the 2198-H2DCK Feedback Converter Kit**


## Capacitor Module Connections

Follow these guidelines when wiring the 2198-CAPMOD-1300 capacitor module:

- Wire relay output (MS) connections to the Logix5000 controller (optional).
- Refer to [Kinetix 5500 Capacitor Module](#) wiring example on [page 201](#).
- Refer to [Kinetix 5500 Capacitor Module Status Indicators](#) on [page 158](#) for troubleshooting the module status indicator and relay output.
- Refer to the installation instructions provided with your Bulletin 2198 capacitor module, publication [2198-IN004](#).

**IMPORTANT** To improve system performance, run wires and cables in the wireways as established in [Chapter 2](#). Connections to the DC-bus must be made with the shared-bus connection system.

**Figure 59 - Capacitor Module Features and Indicators**

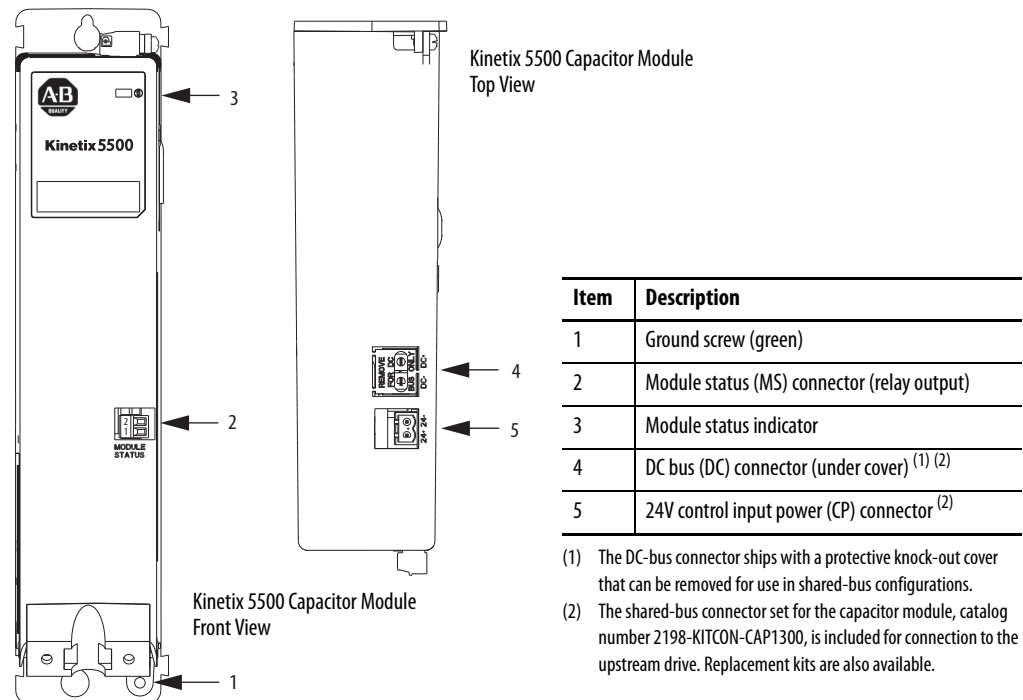

**Table 43 - Capacitor Module Connector Specifications**

Capacitor Module Cat. No.	Pin	Signal	Recommended Wire Size mm <sup>2</sup> (AWG)	Strip Length mm (in.)	Torque Value N·m (lb·in)
2198-CAPMOD-1300	MS-1	RELAY+	0.14...1.5 (28...16)	7.0 (0.28)	0.22...0.25 (1.9...2.2)
	MS-2	RELAY-			



## External Passive-shunt Resistor Connections

Follow these guidelines when wiring your 2097-Rx shunt resistor:


- Refer to [External Passive Shunt Resistor](#) on [page 42](#) for noise zone considerations.
- Refer to [Shunt Resistor Wiring Example](#) on [page 204](#).
- Refer to the installation instructions provided with your Bulletin 2097 shunt resistor, publication [2097-IN002](#).

---

**IMPORTANT** To improve system performance, run wires and cables in the wireways as established in [Chapter 2](#).

---

**Figure 60 - RC Connector Wiring**

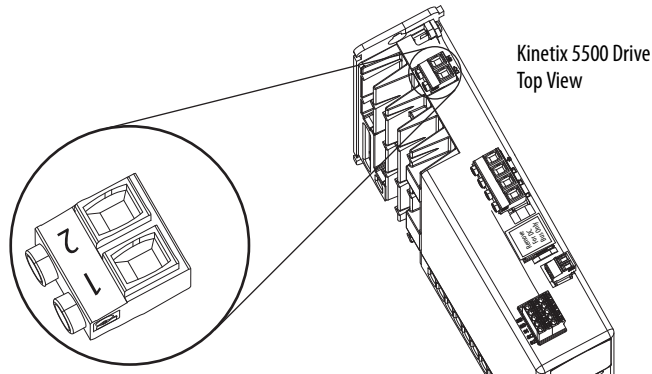

**Table 44 - Shunt Resistor (RC) Connector Specifications**

Drive Cat. No.	Pin	Signal	Recommended Wire Size mm <sup>2</sup> (AWG)	Strip Length mm (in.)	Torque Value N·m (lb·in)
2198-H003-ERSx 2198-H008-ERSx	RC-1 RC-2	SH DC+	0.5...4.0 (20...12)	8.0 (0.31)	0.5...0.6 (4.4...5.3)
2198-H015-ERSx 2198-H025-ERSx 2198-H040-ERSx 2198-H070-ERSx	RC-1 RC-2	DC+ SH			

---

**IMPORTANT** You must disconnect the internal shunt wires at the RC connector before connecting the Bulletin 2097 shunt resistor wires.

---

**Table 45 - Shunt Resistor Selection**

Drive Cat. No.	Bulletin 2097 Shunt Resistor Cat. No.
2198-H003-ERSx	2097-R7
2198-H008-ERSx	
2198-H015-ERSx	
2198-H025-ERSx	
2198-H040-ERSx	2097-R6
2198-H070-ERSx	

## Ethernet Cable Connections


This procedure assumes you have your Logix5000 controller and Kinetix 5500 drive modules mounted and are ready to connect the network cables.

The EtherNet/IP network is connected by using the PORT 1 and PORT 2 connectors. Refer to [page 58](#) to locate the Ethernet connectors on your Kinetix 5500 drive. Refer to the figure below to locate the connectors on your Logix5000 controller.

Shielded Ethernet cable is required and available in several standard lengths. Refer to the Kinetix Motion Accessories Specifications Technical Data, publication [GMC-TD004](#), for more information.

Ethernet cable lengths connecting drive-to-drive, drive-to-controller, or drive-to-switch must not exceed 100 m (328 ft).

**Figure 61 - ControlLogix and CompactLogix Ethernet Port Locations**

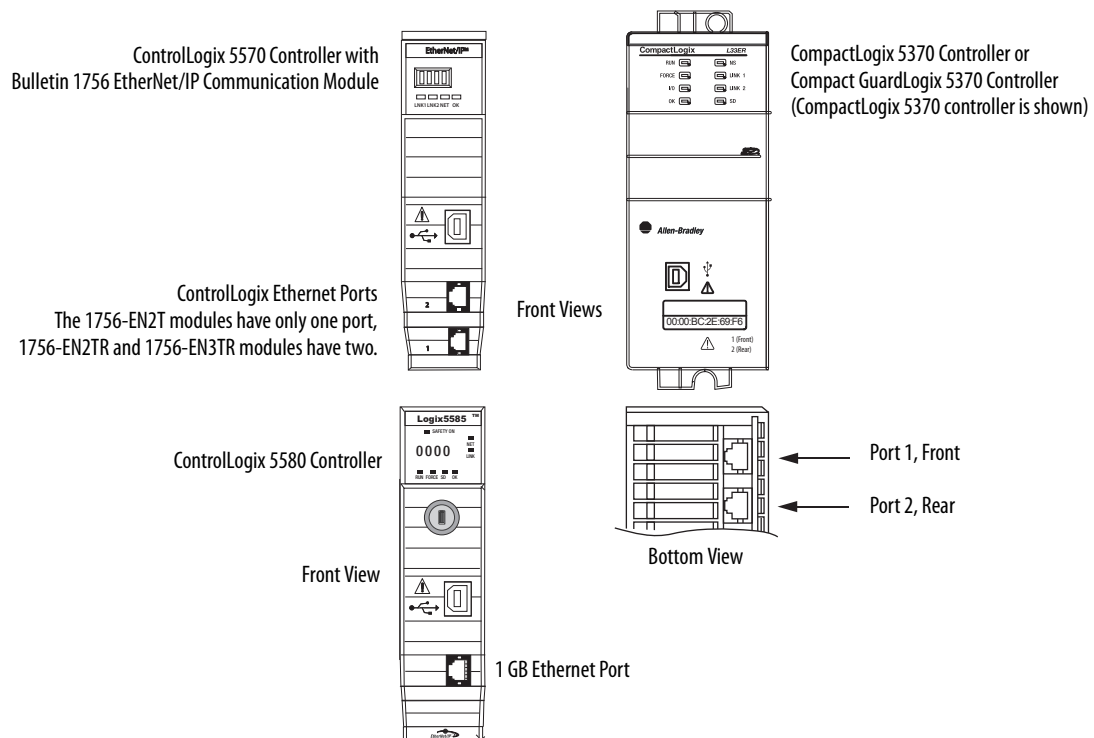

These Logix5000 controllers accept linear, ring (DLR), and star network configurations. Refer to [Typical Communication Configurations](#) on [page 21](#) for linear, ring, and star configuration examples.

### IMPORTANT

When using an external Ethernet switch for routing traffic between the controller and the drive, switches with IEEE-1588 time synchronization capabilities (boundary or transparent clock) must be used to make sure switch delays are compensated.

## Configure and Start the Kinetix 5500 Drive System

This chapter provides procedures for configuring your Kinetix 5500 drive system with a Logix5000 controller.

Topic	Page
Understanding the Kinetix 5500 Display	102
Configure the Drive	106
Studio 5000 Logix Designer	106
Configure the Logix5000 Controller	108
Configure Feedback-only Axis Properties	124
Configure Induction-motor Frequency-control Axis Properties	125
Configure PM Motor Closed-loop Control Axis Properties	134
Download the Program	137
Apply Power to the Kinetix 5500 Drive	138
Understanding Bus Sharing Group Configuration	139
Test and Tune the Axes	143


**TIP**

Before you begin, make sure you know the catalog number for each drive component, the Logix module and /or controller, and the servo motor used in your motion control application.


# Understanding the Kinetix 5500 Display

The Kinetix 5500 drive has two status indicators and an LCD status display. The indicators and display are used to monitor the system status, set network parameters, and troubleshoot faults. Four navigation buttons are directly below the display and are used to select items from a soft menu.

Figure 62 - Kinetix 5500 Drive LCD Display and Status Indicators

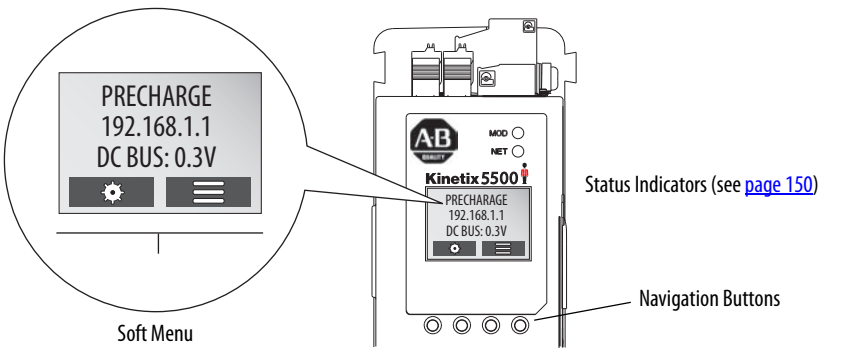


This is the Home screen. The setup selections are tied to the two Setup (left-side) buttons and the menu selections are tied to the two Menu (right-side) buttons.

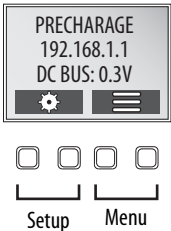

The soft menu provides a changing selection that corresponds to the current screen. Use the navigation buttons to perform the following.

Each soft menu item is executed by pressing the navigation button directly below the item, as shown in this example.

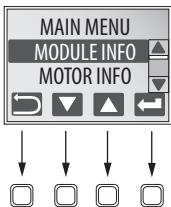


	Press to go back. Pressing enough times results in the Home  screen.
	Pressing either arrow moves the selection to the next (or previous) item. When changing values, pressing the up arrow increments the highlighted value. Values rollover after reaching the end of the list.
	Press to select values to change, moving from right to left. Values rollover when reaching the end of the list.
	Press to select a menu item.
	Press to return to the Home screen.
	Press to display the fault help (possible solutions in troubleshooting tables). <sup>(1)</sup>

(1) Refer to [Fault Codes](#) beginning on [page 192](#) to review the troubleshooting tables.

## Menu Screens

The menu screens provide information about the drives, motors, diagnostics, and the fault log. Parameters cannot be updated in the menu screens. Press one of the menu buttons to access the menu.

You can use the soft menu items and navigation buttons to view the information.

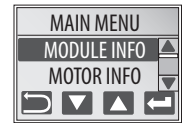


**Table 46 - Navigating the Inverter Menu**

Menu/Sub Menu Selections	Attributes	Description	Example Values
Drive Info	Catalog number		2198-Hxxx-ERSx
	Firmware revision		FW REV: 1.1.450167
	Hardware revision		HW REV: 1.1
	Serial number		SERIAL#: xxxxxxxxxxxx
Motor Info	Model number		MODEL: VPL-B1306F
	Serial number		SERIAL#: xxxxxxxxxxxx
Diagnostics> Drive Diagnostics	Bus diagnostics		BUS VOLT: 0.0V
			BUS CUR: 0.0A
	Converter diagnostics		CONV UTIL: 0.7%
			CONV TEMP: 31.7C
	Inverter diagnostics		INV UTIL: 0.0%
			INV TEMP: 31.7C
Diagnostics> Motor Diagnostics	Motor speed		SPEED:0.0 RPM
	Motor current		MTR CUR:0.0A RMS
	Motor utilization		MTR UTIL:0.0%
	Motor temperature		MTR TEMP:0.00C
Diagnostics> Encoder Diagnostics	Serial number		SERIAL#xxxxxxxxxxxx
	Resolution		RESOLUTION: 262144
	Number of turns		NO OF TURNS: 1
	Encoder temperature		ENC TEMP:33.7C
	Supply voltage		SUPP VOLT:11.3V
	Link quality	The link quality attribute indicates how noisy a communication link is and also indicates if there is a communication link already established at the drive end. The LINK QUAL value must always be 100%. Persistent values below 100% indicates a poor feedback ground connection.	LINK QUAL: 100.0%
	Remote signal strength indicator	Similar to Link Quality, RSSI reports the quality of link as seen at the motor end by the encoder. Maintain the RSSI value between 80 and 100%. Persistent values below 80% indicates a poor feedback ground connection.	RSSI: 100.0%
	Accumulated position errors	This is an aggregated number of errors in the primary position feedback channel of DSL feedback.	POS ERRORS: 1
	Channel position errors	This is an aggregated number of errors on a secondary communication channel of the DSL feedback.	CHNL ERRORS: 5
	Fault text	Fault code as listed in <a href="#">Fault Codes</a> beginning on <a href="#">page 192</a> .	FLT S20 - CONV OVERLOAD FL
Fault Log	Fault details	The problem as reported in <a href="#">Fault Codes</a> on <a href="#">page 192</a> .	The converter thermal model indicates that the temperature has exceeded the factory set capacity rating of 110%.
	Fault help	The Possible Solution as reported in <a href="#">Fault Codes</a> on <a href="#">page 192</a> .	<ul style="list-style-type: none"> <li>Reduce the number of drives in the same bus group</li> <li>Reduce duty-cycle of commanded motion</li> </ul>


## Setup Screens

The setup screens provide the means of changing drive settings, for example, the IP address. Press one of the setup buttons to access the setup screens.

You can use the soft menu items and navigation buttons to view the information and make changes.

Press  to validate your changes:

- If the change is invalid, the value doesn't change.
- If the change is valid, an asterisk appears next to the changed attribute.



### IMPORTANT

You must cycle control power to make network configuration changes persistent. In this example, the IP address was changed. The change takes affect and the asterisk disappears after control power is cycled.

Display configuration changes take effect immediately.

**Table 47 - Navigating the Settings Menu**

Settings Menu Selections	Sub Menu Selections	Attributes	Default	Description
Network	->Static IP <sup>(1)</sup>	IP address	192.168.1.1	Indicates current IP address
		Subnet mask	255.255.255.000	Indicates current subnet mask
		Gateway	192.168.001.001	Indicates current gateway
	DHCP	On		Turns DHCP on
		Off		Turns DHCP off
Display	Backlight Timeout	30 sec. . . NEVER (NEVER=no timeout period, the backlight is always on)	-> 3 min <sup>(1)</sup>	Sets backlight timeout period of the display
	Cyclic Data Select <sup>(2)</sup>	->DC BUS <sup>(1)</sup>		DC bus voltage
		CONV UTIL		Converter utilization in percent
		CONV TEMP		Converter temperature in °C
		SHUNT UTIL		Shunt utilization in percent
		INV UTIL		Inverter utilization in percent
		INV TEMP		Inverter temperature in °C
		MOTOR UTIL		Motor utilization in percent
		SPEED		RPM
		OUT PWR		Output power in watts
		OUT FREQ		Output frequency in hertz
		OUT CUR		Output current in amps
	Contrast	-10 . . . +10	0	Contrast setting of the display
Safety <sup>(3)</sup>	Reset Ownership	Are you sure?		Resets safety ownership (reset fails after 30 seconds)
Web	Enabled			Enables the web server
	->Disabled			Disables the web server


(1) An arrow (->) appears in front of the chosen attribute indicating that this attribute is currently configured. This is also the factory default setting.

(2) The DC bus voltage is one of several cyclic data attributes. You can select any of the Cyclic Data Select attributes to be displayed on the Home screen.


(3) The Safety menu applies to only 2198-Hxxx-ERS2 drives.

## Startup Sequence

On initial powerup, the drive performs a self test. Upon successful completion, the drive firmware revision is displayed.

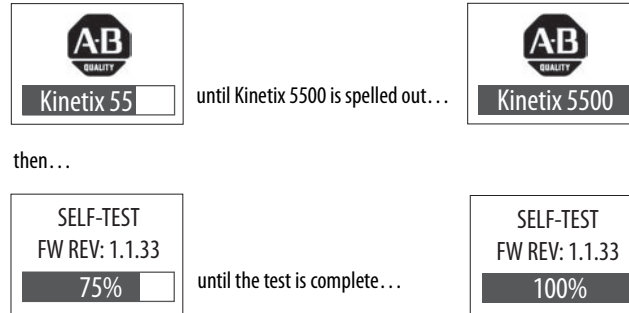

Next, the axis state, the IP address, and the default cyclic data attribute (in this example DC bus voltage) appears. In addition, the setup and menu soft keys are displayed. This is the Home screen.

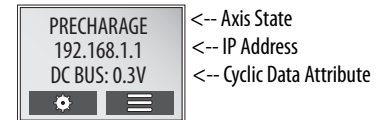

In this example PRECHARGE is the axis state attribute. [Table 48](#) lists the other axis states and their descriptions.

**Table 48 - Axis States on the Home Screen**

Axis State	Description
STANDBY	The drive is waiting to receive configuration information from the controller.
CONNECTING	The drive is trying to establish communication with the EtherNet/IP controller.
CONFIGURING	The drive is receiving configuration information from the controller.
SYNCING	The drive is waiting for a successful Group Sync service.
STOPPED	The drive is fully configured, but the control loops are not enabled.
PRECHARGE	The drive is ready for mains input power.
STARTING	The drive is enabled and checking various conditions before entering the RUNNING or TESTING state. For example, the drive checks the Brake Release delay time during the STARTING state.
RUNNING	<ul style="list-style-type: none"> <li>The drive is enabled, configured with an active control mode, and actively tracking a command.</li> <li>The drive is configured for No Control and is fully operational.</li> </ul>
TESTING	The drive is actively executing a test procedure, for example, a hookup test.
STOPPING	The drive is decelerating to a stop as the result of a disable.
ABORTING	The drive is decelerating to a stop as the result of a fault or an abort request.
MAJOR FAULTED	The drive is faulted due to an existing or past fault condition.
START INHIBITED	The drive has an active condition that inhibits it from being enabled.
SHUTDOWN	The drive has been shut down.

## Configure the Drive


You can include the drive in your Logix Designer application by adding it to a configured EtherNet/IP module or controller and adding it under the I/O configuration tree. After setting network parameters, you can view the drive status information in Studio 5000 software and use it in your Logix Designer application.

### Set the Network Parameters

You must program network parameters by using the LCD display.

1. From the LCD display, select SETUP>NETWORK and choose between STATIC IP and DHCP.

The default setting is STATIC IP.

2. If STATIC IP, then press  to configure the following parameters:
  - IP address
  - Gateway
  - Subnet mask

Settings are stored in nonvolatile memory. IP addressing can also be changed through the Module Configuration dialog box in RSLinx® software. Changes to the IP addressing take effect after power is cycled. The drive is factory programmed to static IP address of 192.168.1.1.

Refer to [Setup Screens](#) on [page 104](#) for help setting the network parameters.

## Studio 5000 Logix Designer

For help using the Studio 5000 Logix Designer application as it applies to configuring the ControlLogix or CompactLogix controllers, refer to [Additional Resources](#) on [page 11](#).



## Kinetix 5500/5700 Add-On Profile

The Logix Designer application, version 28.00 and later, makes possible the configuration of additional drive features not available in previous versions.

**IMPORTANT** To configure these additional drive features with your Kinetix 5500 servo drive, you must have drive firmware 4.001 or later. Refer to [Table 49](#) to determine if you need to install the Kinetix 5500/5700 Add-on Profile.

**Table 49 - AOP Installation Requirement**

Drive Firmware Revision	Logix Designer Application Version	Kinetix 5500/5700 AOP Needed?
4.001 or later	26.00 or 27.00	Yes
	28.00 or later	No


## Install the Kinetix 5500/5700 Add-On Profile

Add-On profiles (AOP) are available for download at the Custom Downloads Add-On Profiles website: <https://download.rockwellautomation.com/esd/download.aspx?downloadid=addonprofiles>

Follow these steps to download the Kinetix 5500/5700 Add-On profile.

1. Login to the Custom Download Add-On Profiles website.

The Custom Download Files dialog box opens.

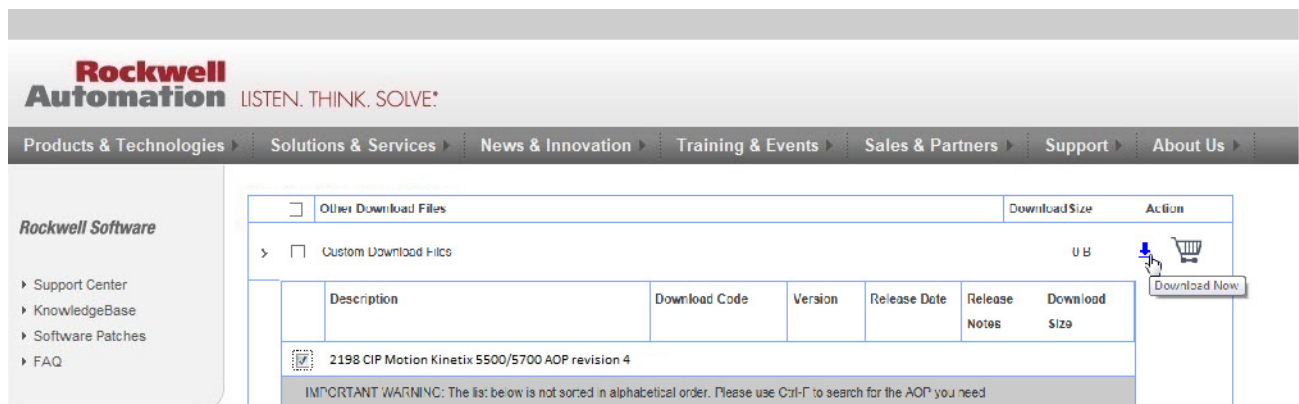

2. Check 2198 CIP Motion Kinetix 5500/5700 AOP revision 4.
3. Click the Download Now icon and accept the user license agreement.  
If prompted to install the Download Manager, allow the installation.
4. Click the Add-On Profile icon and follow the download instructions.
5. Extract the AOP zip file and run Setup.

## Configure the Logix5000 Controller

These procedures assume that you have wired your Kinetix 5500 drive system. In this example, the GuardLogix 5570 safety controller, ControlLogix 1756-EN2T communication module, and CompactLogix 5370 controller dialog boxes are shown.



Follow these steps to configure the controller.

1. Apply power to your controller and open your Logix Designer application.



2. From the Create menu, choose New Project.

The New Project dialog box appears.

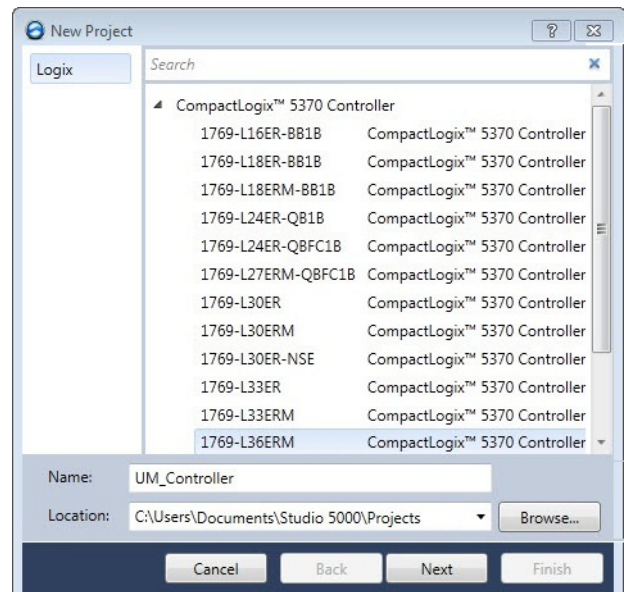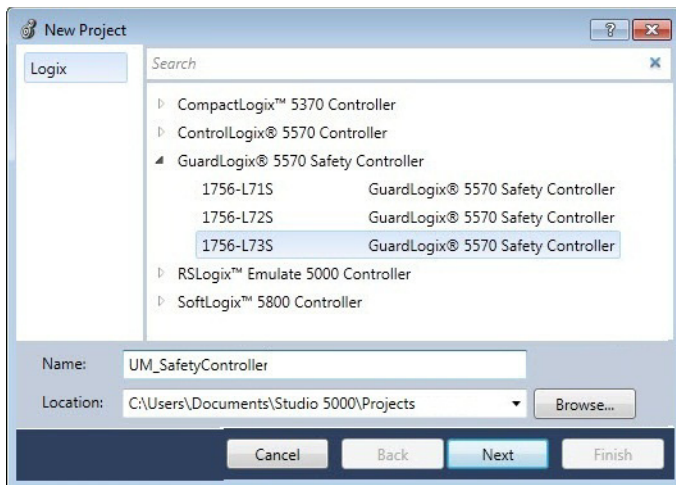



**IMPORTANT** If you are configuring a 2198-Hxxx-ERS2 (integrated) servo drive in a safety application, you must use a GuardLogix safety controller.

In this example, the typical dialog boxes for 1756-ENxT EtherNet/IP modules and CompactLogix 5370 controllers with embedded Ethernet are shown.

Follow these steps to configure your Logix5000 controller.

1. Expand the Logix5000 controller family and select your controller.
2. Type the file Name.
3. Click Next.


The New Project dialog box appears.

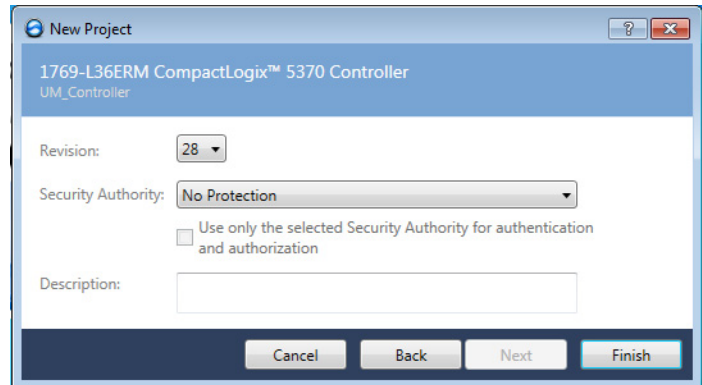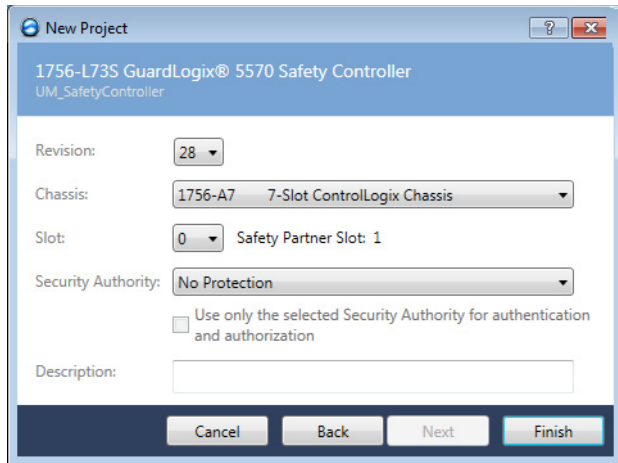


4. From the Revision pull-down menu, choose your software revision.
5. Click Finish.

The new controller appears in the Controller Organizer under the I/O Configuration folder.

Controller Organizer with CompactLogix 5370 controller.

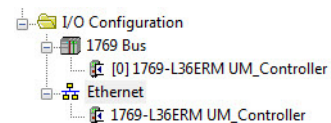

Controller Organizer with GuardLogix 5570 controller.



### IMPORTANT


If your project includes a ControlLogix or GuardLogix controller, you need to add an Ethernet communication module to your Bulletin 1756 chassis and configure it for use in your application.

- For ControlLogix or GuardLogix controllers, go to [step 6](#)
- For CompactLogix 5370 controllers, go to [step 13](#)

Refer to the EtherNet/IP Network Configuration User Manual, publication, [ENET-UM001](#) for more information.

6. Right-click I/O Configuration in the Controller Organizer and choose New Module.

The Select Module Type dialog box appears.

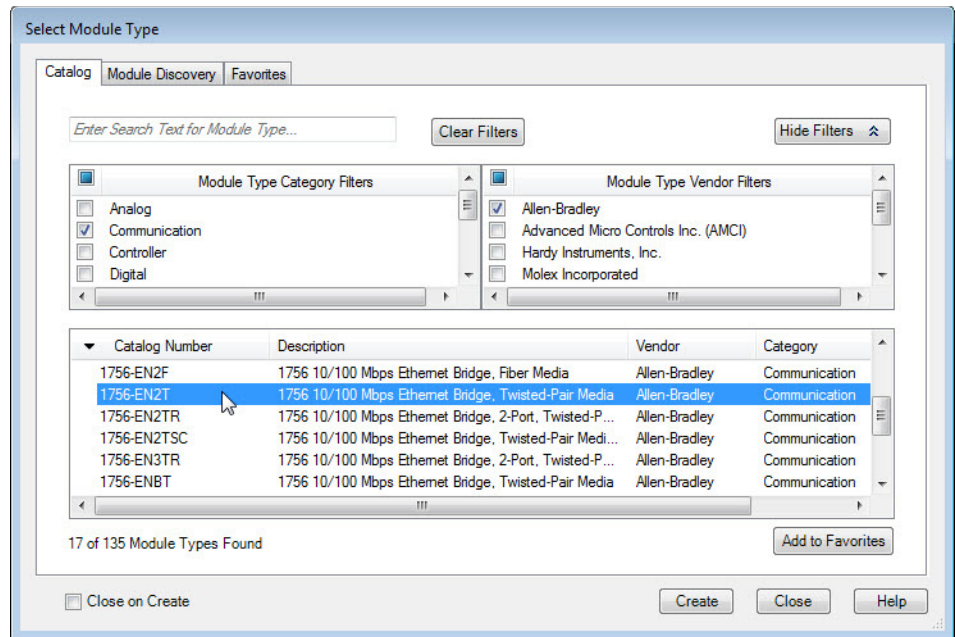


7. By using the filters, check Communication and Allen-Bradley, and select 1756-EN2T, 1756-EN2TR, or 1756-EN3TR as appropriate for your actual hardware configuration.

In this example, the 1756-EN2T module is selected.

8. Click Create.

The New Module dialog box appears.

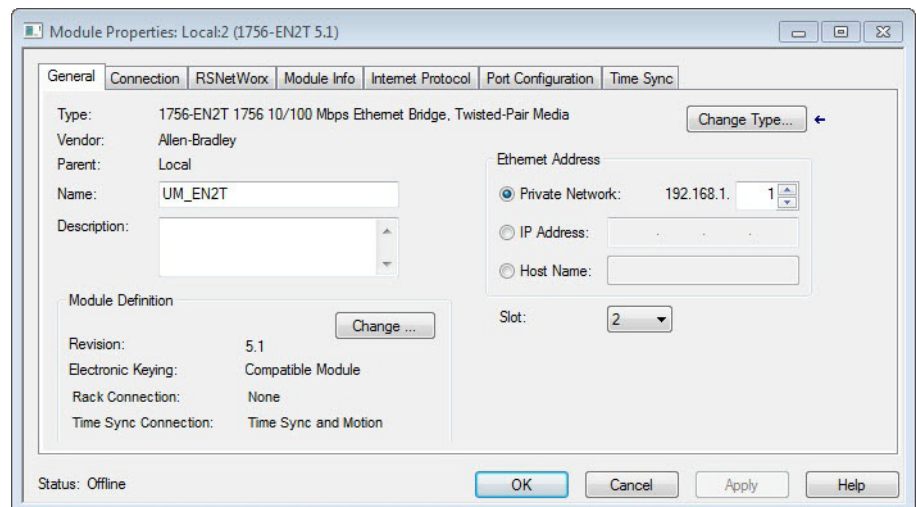

- a. Configure the new module.
- b. Type the module Name.
- c. Enter the Logix EtherNet/IP module slot (leftmost slot = 0).

- d. Select an Ethernet Address option.


In this example, the Private Network address is selected.

- e. Enter the address of your EtherNet/IP module.

In this example, the last octet of the address is 1.

- f. Click Change in the Module Definition area.

The Module Definition dialog box opens.

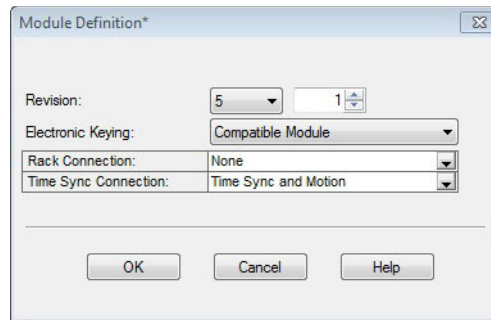

9. From the Time Sync Connection pull-down menu, choose Time Sync and Motion.


---

**IMPORTANT** Time Sync functionality is what enables motion control on an Ethernet network. Without this setting, you won't be able to run your motion application.

---


10. Click OK to close the Module Definition dialog box.

11. Click Yes when prompted to confirm your module definition changes.

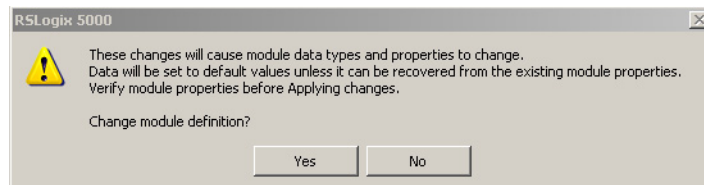

12. Click OK to close the New Module dialog box.


Your new 1756-ENxT Ethernet module appears under the I/O Configuration folder in the Controller Organizer.

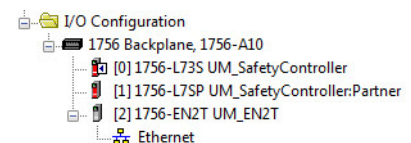

13. From the Edit menu, choose Controller Properties.

The Controller Properties dialog box appears.

## 14. Click the Date/Time tab.

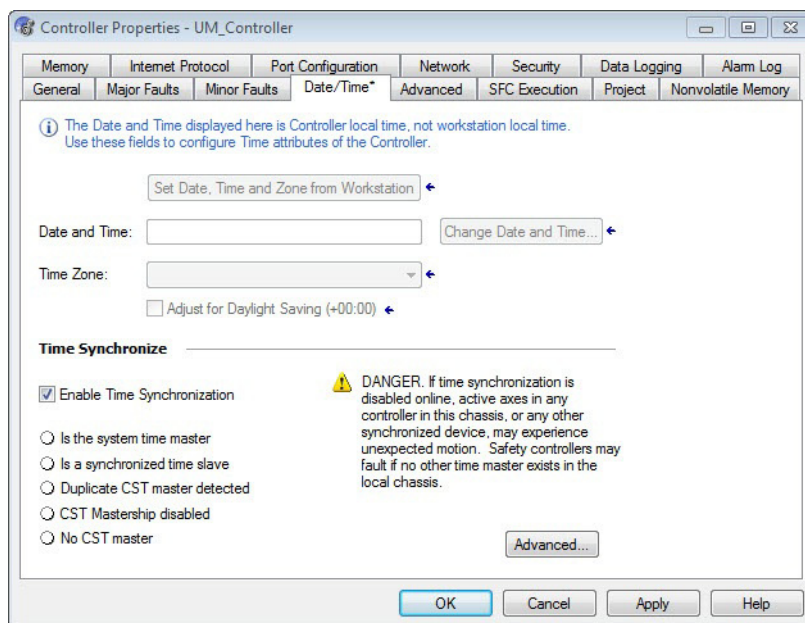

## 15. Check Enable Time Synchronization.

The motion modules set their clocks to the module you assign as the Grandmaster.

---

**IMPORTANT** Check Enable Time Synchronization for all controllers that participate in CIP Sync™. The overall CIP Sync network automatically promotes a Grandmaster clock, unless the priority is set in the Advanced tab.

---

## 16. Click OK.



## Configure the Kinetix 5500 Drive

**IMPORTANT** To configure 2198-Hxxx-ERS (hardwired safety) drives, you must be using the Logix Designer application, version 21.00 or later.

To configure 2198-Hxxx-ERS2 (integrated safety) drives, you must be using the Logix Designer application, version 24.00 or later.

Use this table to determine where to begin your drive configuration.


Drive Cat. No.	Start Here	Page
2198-Hxxx-ERS	Configure Drive with Hardwired Safety Connections	113
2198-Hxxx-ERS2	Configure Drive with Integrated Safety Connections	115

### Configure Drive with Hardwired Safety Connections

Follow these steps to configure Kinetix 5500 drives with hardwired safety.


1. Below the controller you just created, right-click Ethernet and choose New Module.

The Select Module Type dialog box appears.

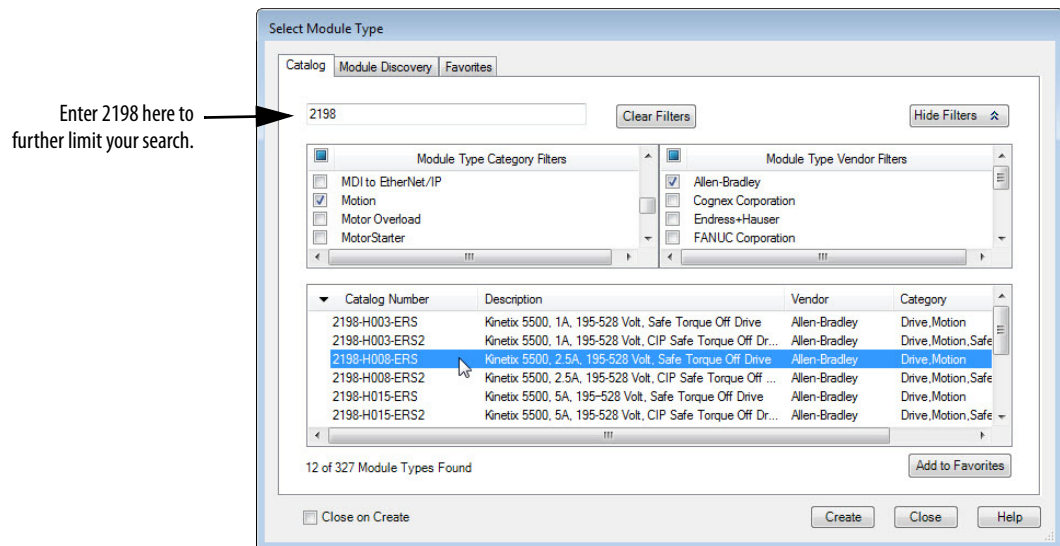


2. By using the filters, check Motion and Allen-Bradley, and select your 2198-Hxxx-ERS servo drive as appropriate for your actual hardware configuration.
3. Click Create.

The New Module dialog box appears.

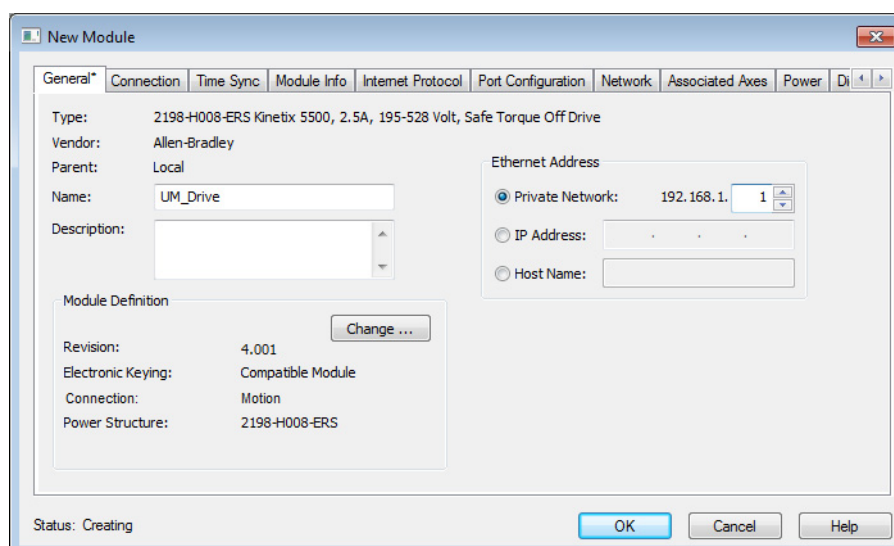

4. Configure the new drive.
  - a. Type the drive Name.
  - b. Select an Ethernet Address option.  
In this example, the Private Network address is selected.
  - c. Enter the address of your 2198-Hxxx-ERS drive.  
In this example, the last octet of the address is 1.
5. Click OK to close the New Module dialog box.

Your 2198-Hxxx-ERS servo drive appears in the Controller Organizer under the Ethernet controller in the I/O Configuration folder.

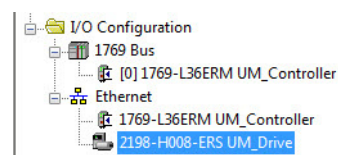

6. Click Close to close the Select Module Type dialog box.
7. Jump to [Continue Drive Configuration](#) on [page 119](#) to continue with your drive configuration.




### Configure Drive with Integrated Safety Connections

Follow these steps to configure Kinetix 5500 drives with integrated safety.


1. Below the controller you just created, right-click Ethernet and choose New Module.

The Select Module Type dialog box appears.

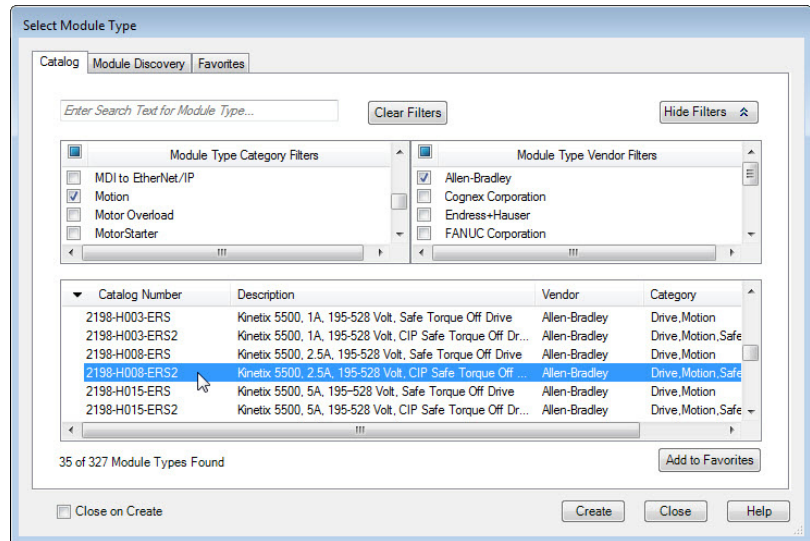


2. By using the filters, check Motion and Allen-Bradley, and select your 2198-Hxxx-ERS2 servo drive as appropriate for your actual hardware configuration.
3. Click Create.

The New Module dialog box appears.

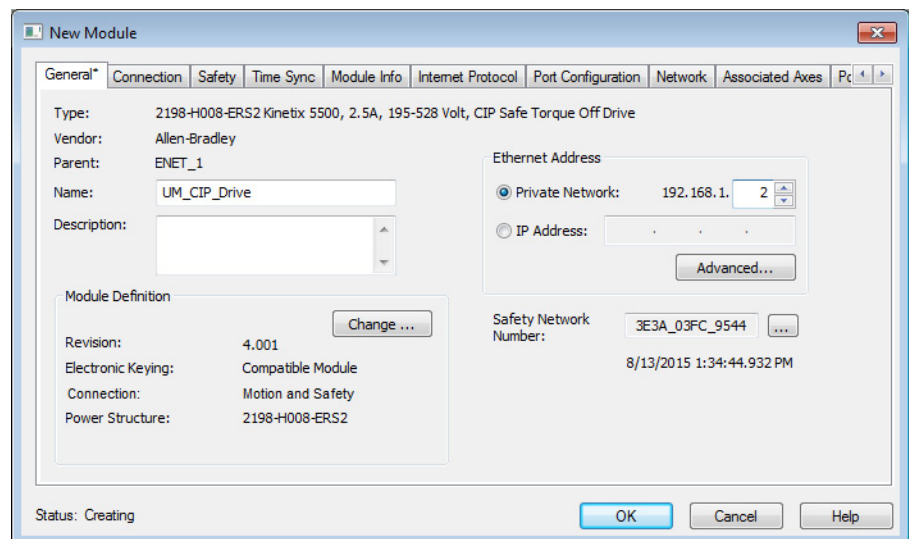

4. Configure the new drive.
  - a. Type the drive Name.
  - b. Select an Ethernet Address option.  
In this example, the Private Network address is selected.
  - c. Enter the address of your 2198-Hxxx-ERS2 servo drive.  
In this example, the last octet of the address is 2.
  - d. Under Module Definition click Change.  
The Module Definition dialog box appears.

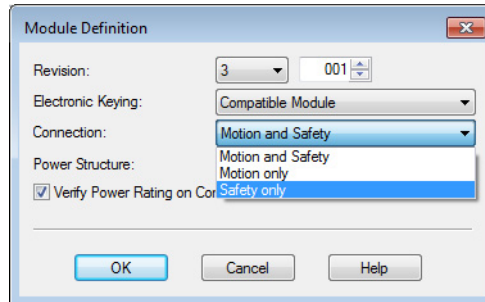

- e. From the Connection pull-down menu, choose the Connection mode for your motion application.

**TIP** When 'Safety' appears in the Connection mode, integrated safety is implied.


Table 50 - Module Connection Definitions

Connection Mode	Controller Needed	Description Drive Cat. No. 2198-Hxxx-ERS	Description Drive Cat. No. 2198-Hxxx-ERS2
Motion only	ControlLogix 5570 and 5580 GuardLogix 5570, or CompactLogix 5370	Only hardwired safe torque-off connections are possible.	Motion is managed by this controller. Safety is managed by another controller that has a Safety-only connection to the drive.
Motion and Safety	GuardLogix 5570 or Compact GuardLogix 5370	N/A	Motion and Safety are managed by this controller.
Safety only	GuardLogix 5570 or Compact GuardLogix 5370	N/A	Safety is managed by this controller. Motion is managed by another controller that has a Motion-only connection to the drive.

The Safety Network Number (SNN) field populates automatically when the Connection mode includes an integrated Motion and Safety or Safety-only connection. For a detailed explanation of the safety network number, refer to the GuardLogix Controller Systems Safety Reference Manual, publication [1756-RM099](#).

5. Click OK to close the Module Definition dialog box.
6. Click OK to close the New Module dialog box.


Your 2198-Hxxx-ERS2 servo drive appears in the Controller Organizer under the Ethernet controller in the I/O Configuration folder.

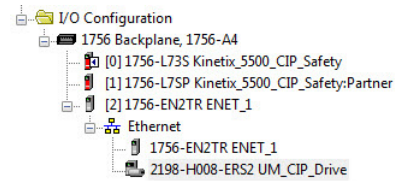

7. Right-click the drive you just created in the Controller Organizer and choose Properties.

The Module Properties dialog box appears.

8. Click the Drive Safety tab.

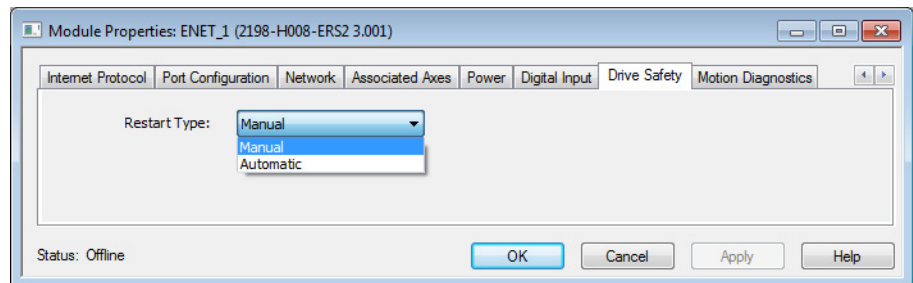


9. From the Restart Type pull-down menu, choose Manual or Automatic depending on your specific application.

- Manual restart indicates a transition from 0 to 1 on the SO.Reset tag is required to allow torque after the SO.SafeTorqueOff tag has transitioned from 0 to 1.
- Automatic restart indicates torque will be allowed only by transitioning the SO.SafeTorqueOff tag from 0 to 1. The SO.Reset tag is used only for resetting safety faults.

10. Click Apply.

11. Click the Safety tab.

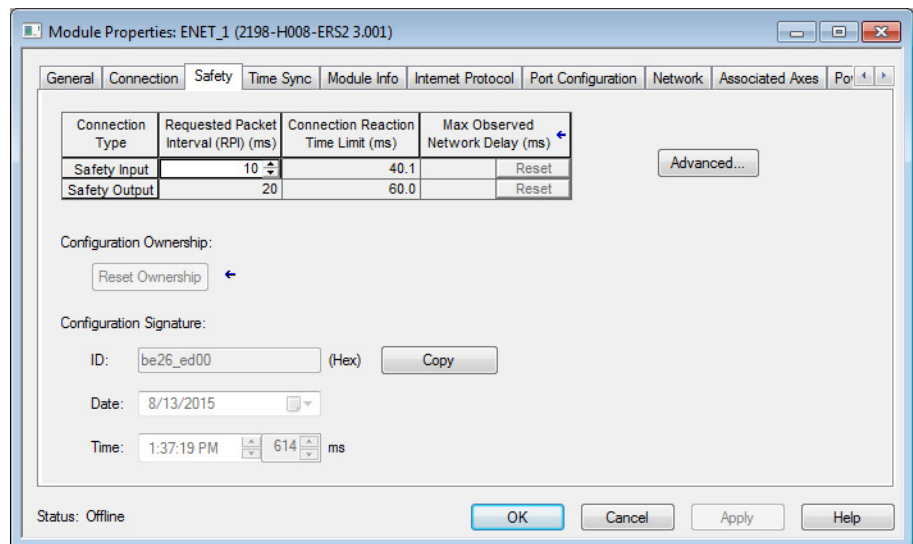


The connection between the owner and the 2198-Hxxx-ERS2 servo drive is based on the following:

- Servo drive catalog number must be 2198-Hxxx-ERS2 (integrated)
- Servo drive safety network number
- GuardLogix slot number
- GuardLogix safety network number
- Path from the GuardLogix controller to the 2198-Hxxx-ERS2 drive
- Configuration signature

If any differences are detected, the connection between the GuardLogix controller and the 2198-Hxxx-ERS2 drive is lost, and the yellow yield icon appears in the controller project tree after you download the program.

**12. Click Advanced.**

The Advanced Connection Reaction Time Limit Configuration dialog box appears.

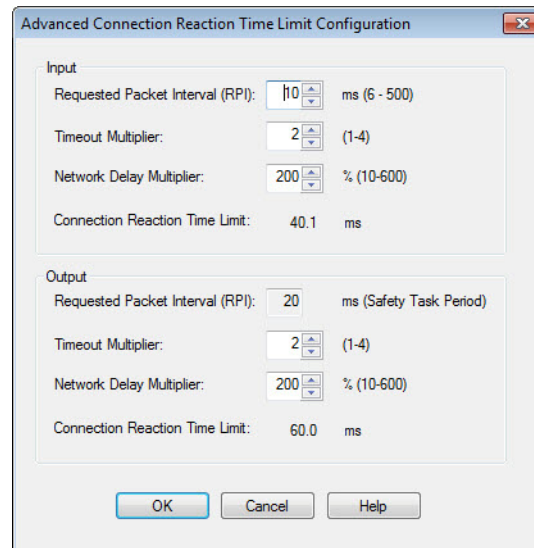

Analyze each safety channel to determine the appropriate settings. The smallest Input RPI allowed is 6 ms. Selecting small RPI values consumes network bandwidth and can cause nuisance trips because other devices cannot get access to the network.

**13. Click OK.**

For more information about the Advanced Connection Reaction Time Limit Configuration, refer to the GuardLogix 5570 Controllers User Manual, publication [1756-UM022](#).


### Continue Drive Configuration

After you've established your Kinetix 5500 drive in the Logix Designer application, the remaining configuration steps are the same regardless of the drive catalog number.

1. Right-click the 2198-Hxxx-ERSx servo drive you just created and choose Properties.


The Module Properties dialog box appears.

2. Click the Associated Axes tab.

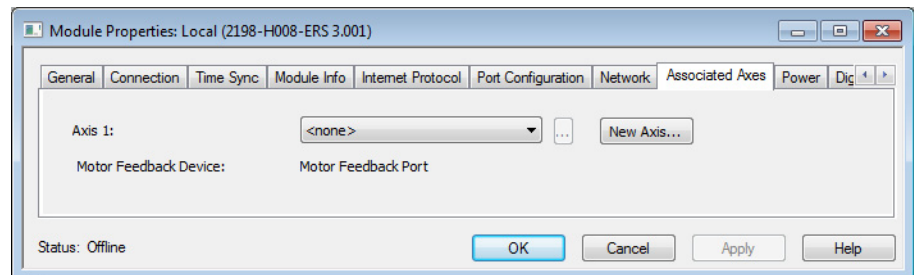



3. Click New Axis.

The New Tag dialog box appears.

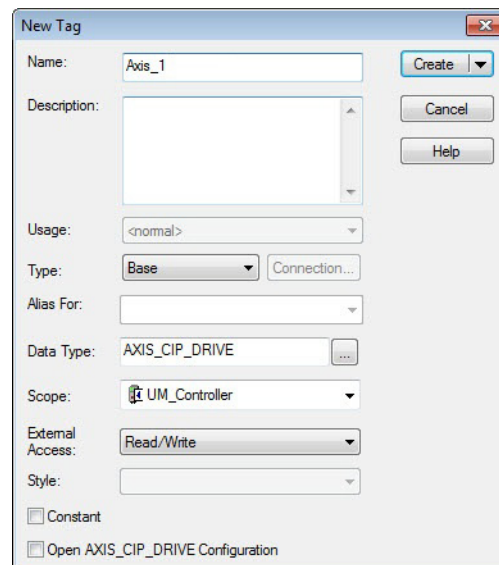


4. Type the axis Name.  
AXIS\_CIP\_DRIVE is the default Data Type.
5. Click Create.

The axis (Axis\_1 in this example) appears in the Controller Organizer under Motion Groups> Ungrouped Axes and is assigned as Axis 1.

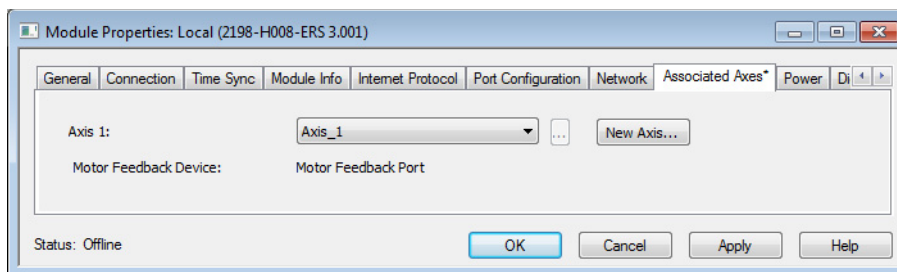


**TIP** You can configure an axis as Feedback Only. Refer to [Configure Feedback-only Axis Properties](#) on [page 124](#) for more information.

6. Click Apply.
7. Click the Digital Input tab.

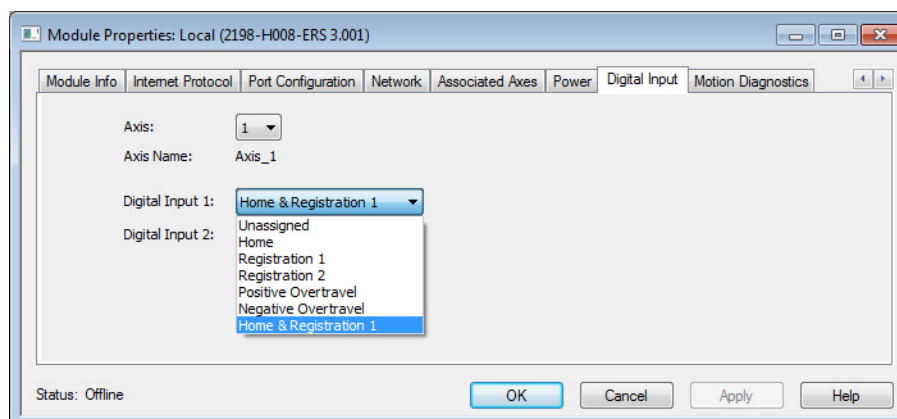

8. From the Axis pull-down menu, choose an axis to configure.
9. From the Digital Input pull-down menus, choose a digital input assignment appropriate for your application. Refer to [page 60](#) and [page 62](#) for more information.
10. Click Apply.

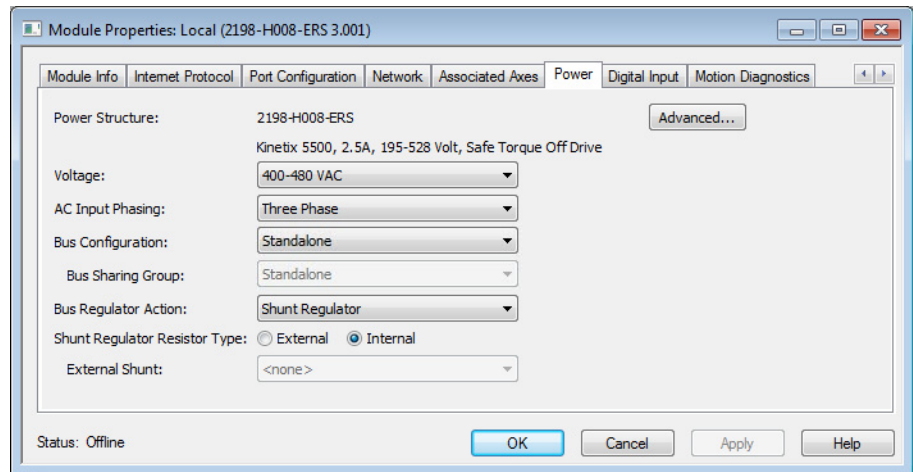**11. Click the Power tab.****IMPORTANT**

Single-phase operation is possible only when Module Properties>Power tab>Bus Configuration is configured as Standalone.

**IMPORTANT**

The Logix Designer application enforces shared-bus configuration rules for Kinetix 5500 drives, except for shared AC configurations.

12. From the pull-down menus, choose the power options appropriate for your actual hardware configuration.



**ATTENTION:** To avoid damage to equipment, make sure the AC input voltage configured in the Logix Designer application matches the actual hardware being configured.

Attribute	Menu	Description
Voltage	400-480 VAC	324...528 AC rms input voltage
	200-240 VAC	195...264 AC rms input voltage
AC Input Phasing	<ul style="list-style-type: none"> <li>Three Phase</li> <li>Single Phase</li> </ul>	Input power phasing. Kinetix 5500 drives with single-phase operation is limited to 2198-H003-ERSx, 2198-H008-ERSx, and 2198-H015-ERSx.
Bus Configuration <sup>(1) (2)</sup>	Standalone	Applies to single-axis drives and drives with Shared AC input configurations.
	Shared AC/DC	Applies to converter drives with Shared AC/DC and Shared AC/DC Hybrid input configurations.
	Shared DC	Applies to inverter drives with Shared DC input (common-bus) configurations.
Bus Sharing Group <sup>(3) (2)</sup>	Standalone	Applies to standalone bus configurations.
	<ul style="list-style-type: none"> <li>Group1</li> <li>Group2</li> <li>Group3...</li> </ul>	Applies to any bus sharing configuration <sup>(4)</sup> .
Shunt Regulator Action	Disabled	Disables the internal shunt resistor and external shunt option.
	Shunt Regulator	Enables the internal and external shunt options.
Shunt Regulator Resistor Type	Internal	Enables the internal shunt (external shunt option is disabled).
	External	Enables the external shunt (internal shunt option is disabled).
External Shunt <sup>(5)</sup>	<ul style="list-style-type: none"> <li>None</li> <li>2097-R6</li> <li>2097-R7</li> </ul>	Selects external shunt option. Only the shunt model intended for the drive model is shown.

(1) Refer to [Chapter 3](#) for more information on single-axis and multi-axis configurations.

(2) Bus Configuration selection is not applicable to all EtherNet/IP drives.

(3) For more information on bus sharing groups, refer to [Understanding Bus Sharing Group Configuration](#) on [page 139](#).

(4) All drives physically connected to the same shared-bus connection system must be part of the same Bus Sharing Group in the Logix Designer application.

(5) Refer to the Kinetix Servo Drives Specifications Technical Data, publication [GMC-TD003](#), for more information on the Bulletin 2097 external shunt resistors.

13. Click OK.
14. Repeat [step 1](#) through [step 13](#) for each 2198-Hxxx-ERSx servo drive.




## Configure the Motion Group

Follow these steps to configure the motion group.


1. In the Controller Organizer, right-click Motion Groups and choose New Motion Group.

The New Tag dialog box appears.

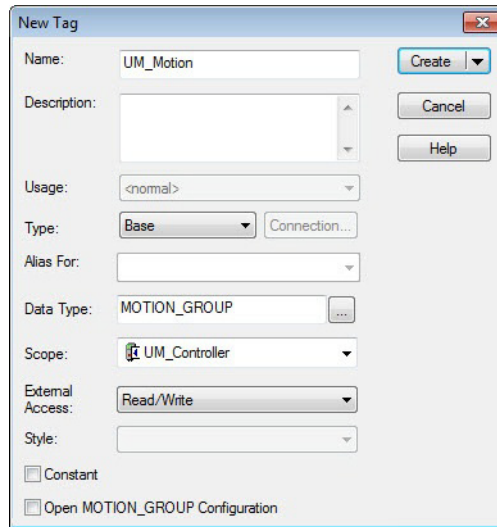


2. Type the new motion group Name.
3. Click Create.

Your new motion group appears in the Controller Organizer under the Motion Groups folder.




4. Right-click the new motion group and choose Properties.

The Motion Group Properties dialog box appears.

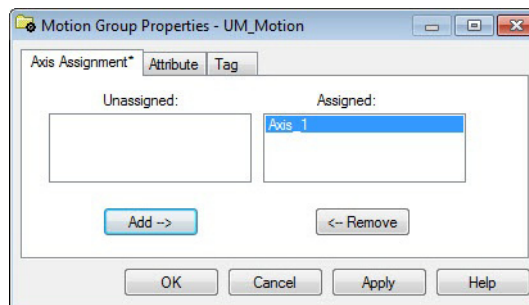

5. Click the Axis Assignment tab and move your axes (created earlier) from Unassigned to Assigned.
6. Click the Attribute tab and edit the default values as appropriate for your application.
7. Click OK.

Your axis moves to the new motion group.




## Configure Feedback-only Axis Properties

Follow these steps to configure feedback-only axis properties.

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the General category.

The General dialog box appears.

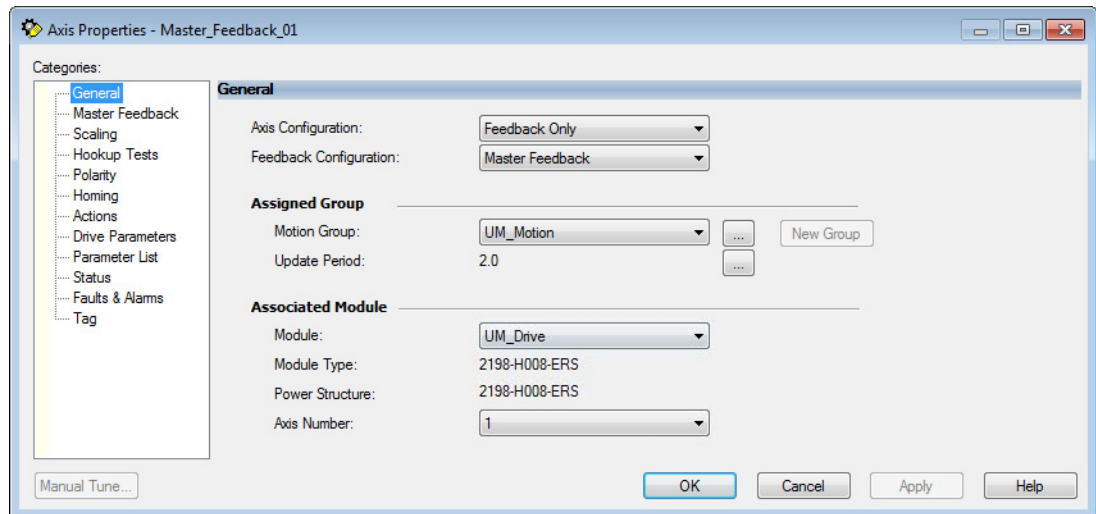


3. From the Axis Configuration pull-down menu, choose Feedback Only.
4. From the Feedback Configuration pull-down menu, choose Master Feedback.
5. From the Module pull-down menu, choose the drive to associate with your Feedback Only axis.

The Module Type and Power Structure fields populate with the chosen drive catalog number.

6. Click Apply.
7. Select the Master Feedback Category.

The Master Feedback Device Specification appears.

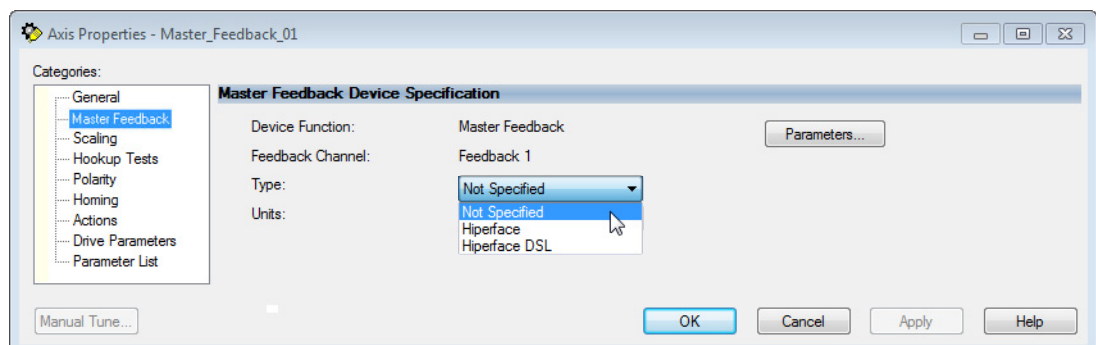

8. From the Type pull-down menu, choose a feedback device type.
9. Review other categories in the Controller Organizer and make changes as needed for your application.
10. Click OK.


## Configure Induction-motor Frequency-control Axis Properties

Follow these steps to configure induction-motor axis properties for various frequency control methods.

### General and Motor Categories

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the General category.

The General dialog box appears.

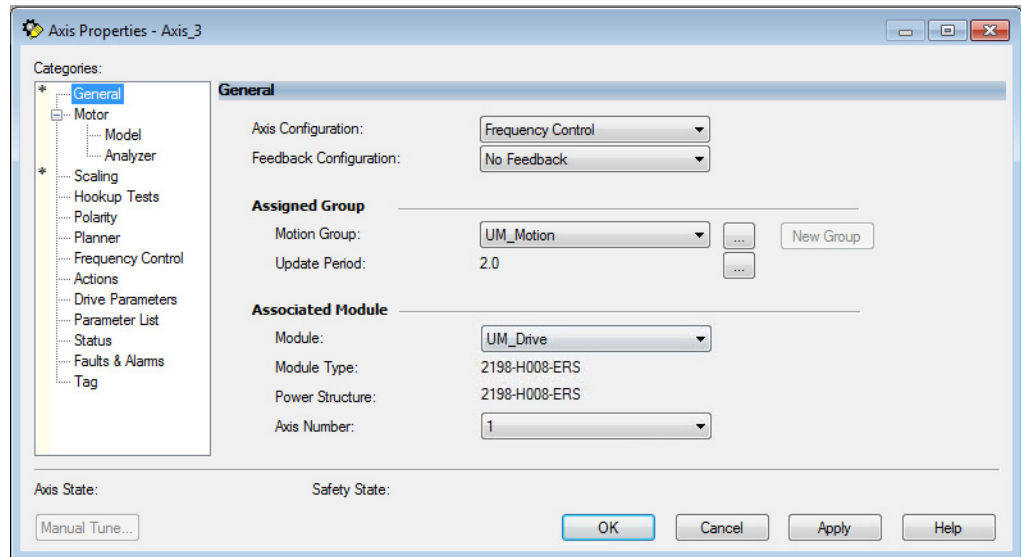


3. From the Axis Configuration pull-down menu, choose Frequency Control.
4. From the Feedback Configuration pull-down menu, choose No Feedback.
5. From the Module pull-down menu, choose the drive to associate with your Frequency Control (induction motor) axis.

The Module Type and Power Structure fields populate with the chosen drive catalog number.

6. Click Apply.

7. Select the Motor category.

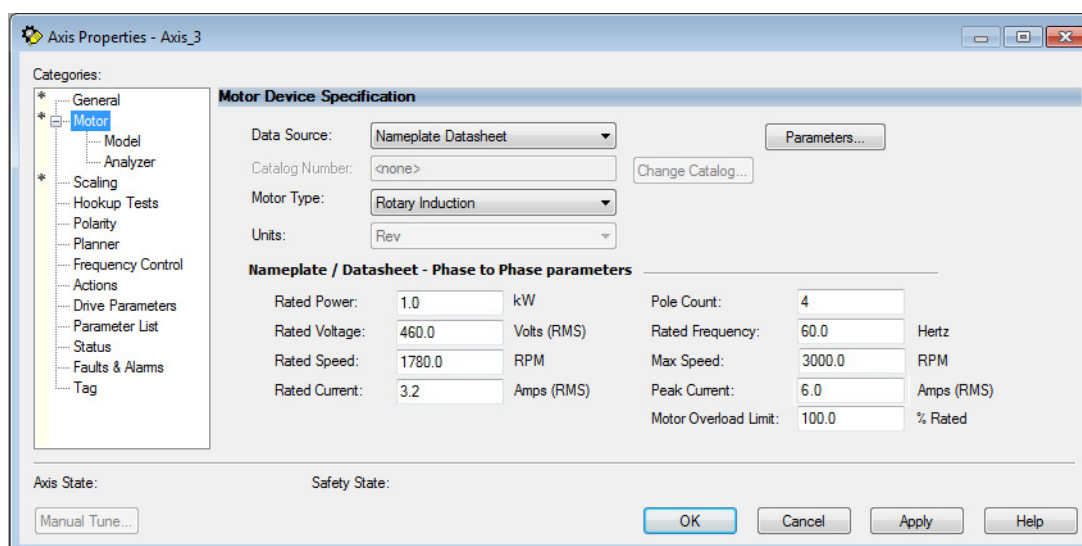

8. From the Data Source pull-down menu, choose Nameplate Datasheet.

This is the default setting.

9. From the Motor Type pull-down menu, choose Rotary Induction.


10. From the motor nameplate or datasheet, enter the phase-to-phase values for your motor.

See [Motor Category](#) on [page 242](#) for a motor performance datasheet example.

11. Click Apply.


## Basic Volts/Hertz Method

1. Configure the General tab and Motor tab as shown in [General and Motor Categories](#) on [page 125](#).
2. Select the Frequency Control category.
3. From the Frequency Control Method pull-down menu, select Basic Volts/Hertz.

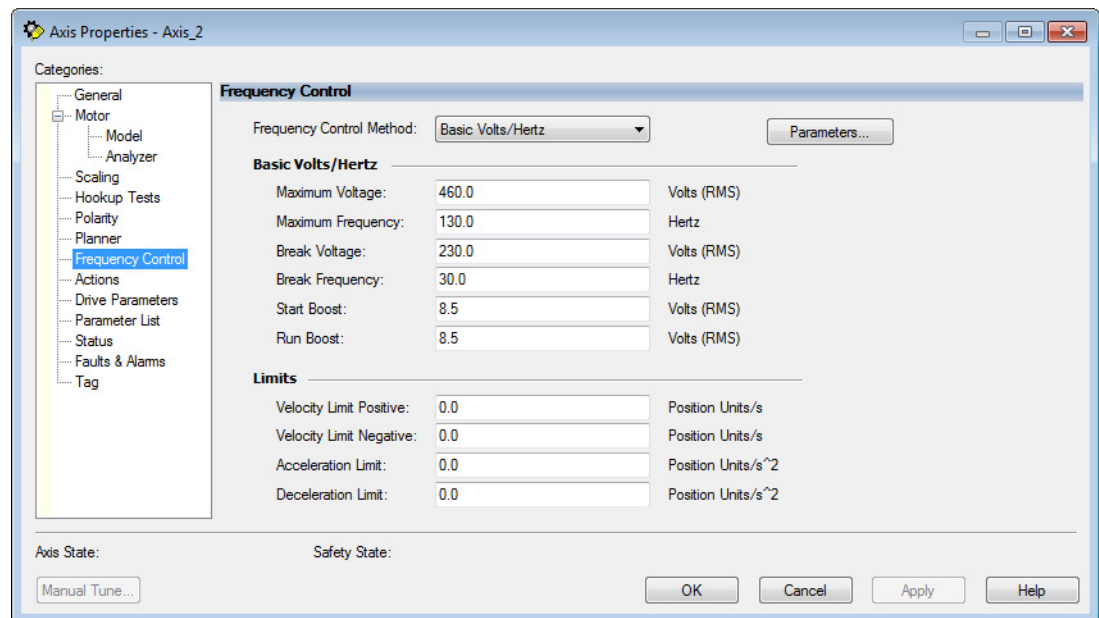

4. Enter the Basic Volts/Hertz attribute values appropriate for your application.  
Default values are shown.
5. Click Apply.
6. Select the Parameter List category.

The Motion Axis Parameters dialog box appears.

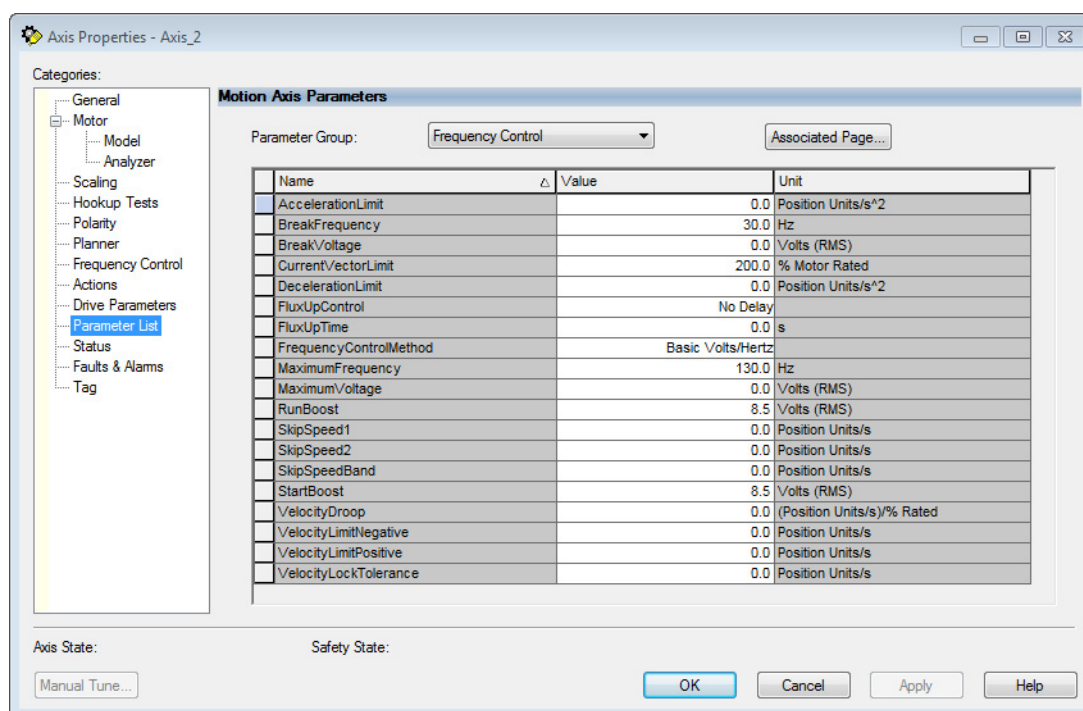


7. From the Parameter Group pull-down menu, choose Frequency Control.
8. Set the FluxUp, SkipSpeed, and VelocityDroop attributes appropriate for your application.

See the corresponding section in Appendix D, beginning on [page 233](#), for information and configuration examples regarding all of these topics.

9. Click OK.

## Sensorless Vector Method

1. Configure the General tab and Motor tab as shown in [General and Motor Categories](#) on [page 125](#).
2. Select the Frequency Control category.
3. From the Frequency Control Method pull-down menu, select Sensorless Vector.

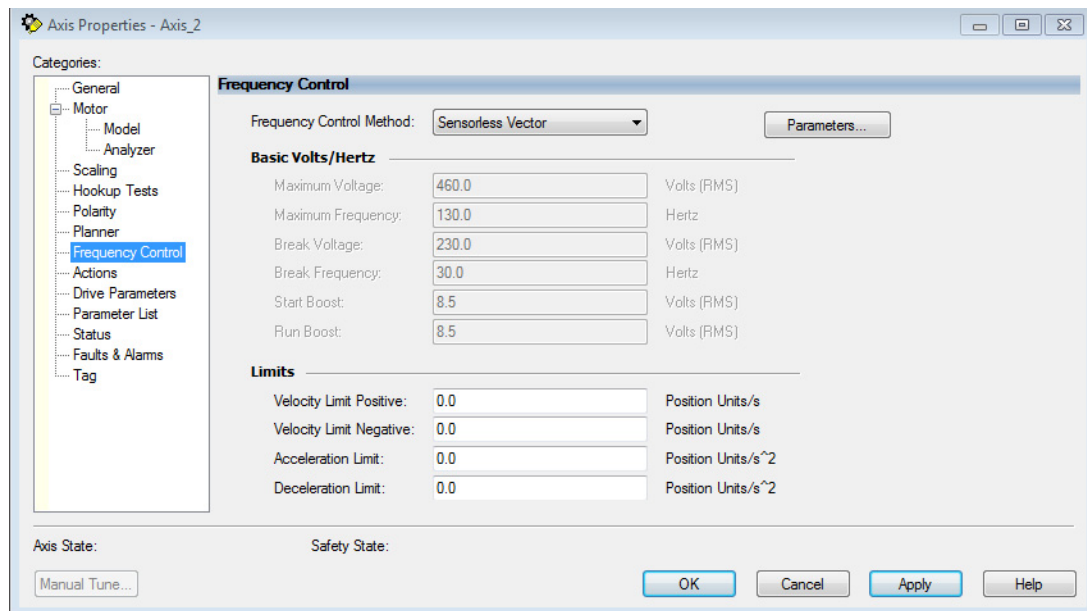

4. Enter the Basic Volts/Hertz attribute values appropriate for your application.

Default values are shown. There is more than one way to enter values. If attributes are inactive, there are two other ways to make changes.

### Method #1

- a. Change the Frequency Control Method to Basic Volts/Hertz.
- b. Enter new attribute values as needed.
- c. Change the Frequency Control Method back to Sensorless Vector.


### Method #2

- a. Select the Parameter List category.
- b. Scroll for MaximumVoltage and MaximumFrequency attributes and enter new values as needed.

These temporary measures are in affect pending a future software revision.

5. Click Apply.
6. Select the Parameter List category.

7. The Motion Axis Parameters dialog box appears.

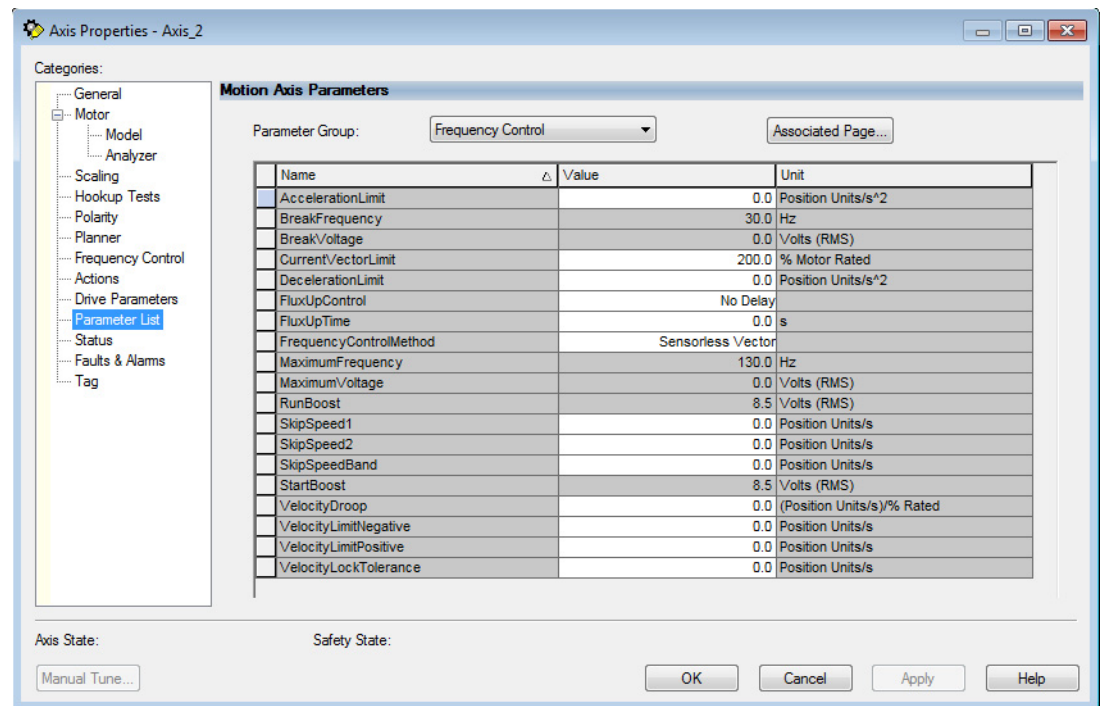

8. From the Parameter Group pull-down menu, choose Frequency Control.

9. Set the FluxUp, SkipSpeed, VelocityDroop, MaximumFrequency, and MaximumVoltage attributes appropriate for your application.


See the corresponding section in Appendix D, beginning on [page 233](#), for information and configuration examples regarding all of these topics.

10. Click Apply.

11. Select the Motor>Analyzer category.



12. The Analyze Motor to Determine Motor Model dialog box opens.

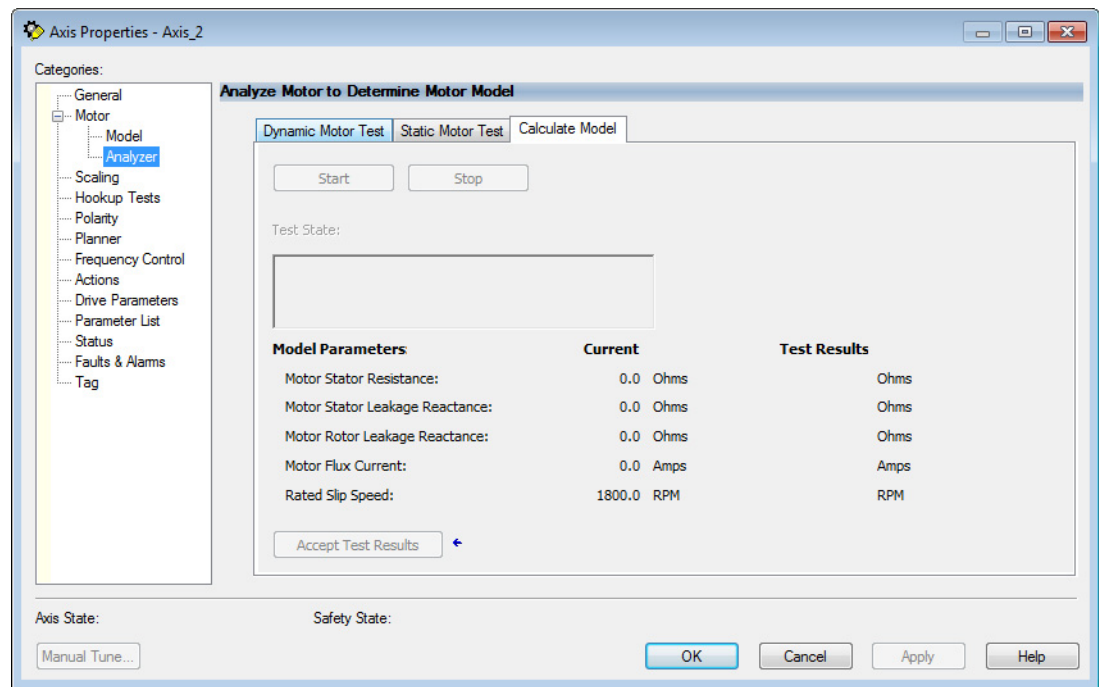

13. Click one of the motor test tabs.

In this example, Calculate Model is chosen. See [Motor Tests and Autotune Procedure](#) on [page 244](#) for information about each of the tests.


14. Click Start.

15. Click Accept Test Results.

16. Click OK.

## Fan/Pump Volts/Hertz Method

1. Configure the General tab and Motor tab as shown in [General and Motor Categories](#) on [page 125](#).
2. Select the Frequency Control category.
3. From the Frequency Control Method pull-down menu, select Fan/Pump Volts/Hertz.

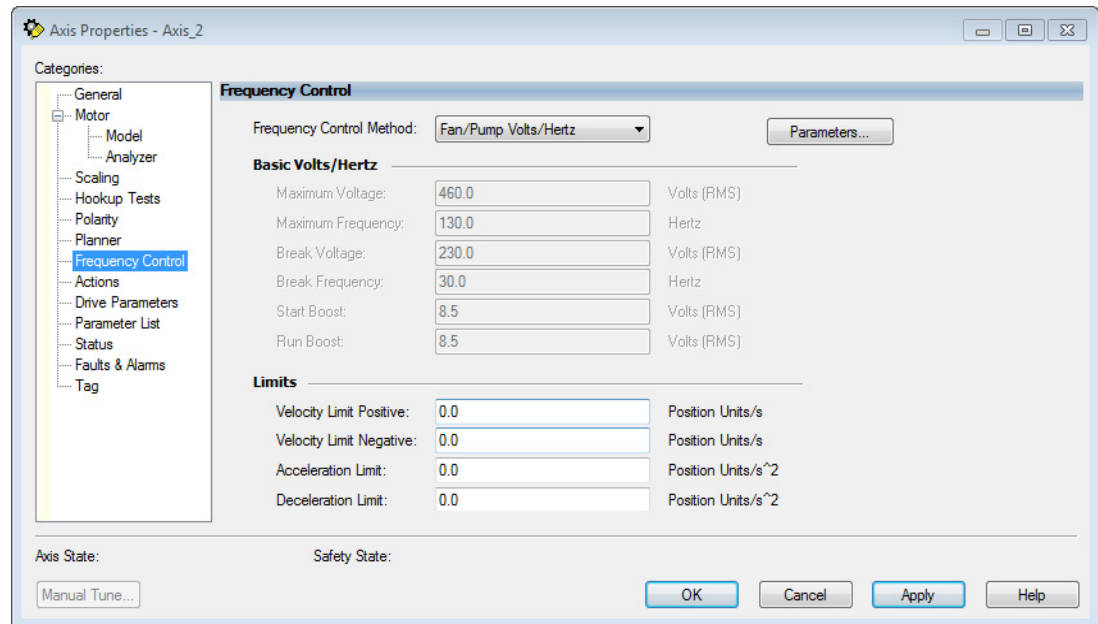

4. Enter the Basic Volts/Hertz attribute values appropriate for your application.

Default values are shown. There is more than one way to enter values. If attributes are inactive, there are two other ways to make changes.

### Method #1

- a. Change the Frequency Control Method to Basic Volts/Hertz.
- b. Enter new attribute values as needed.
- c. Change the Frequency Control Method back to Fan/Pump Volts/Hertz


### Method #2

- a. Select the Parameter List category.
- b. Scroll for MaximumVoltage and MaximumFrequency attributes and enter new values as needed.

These temporary measures are in affect pending a future software revision.

5. Click Apply.
6. Select the Parameter List category.

The Motion Axis Parameters dialog box appears.

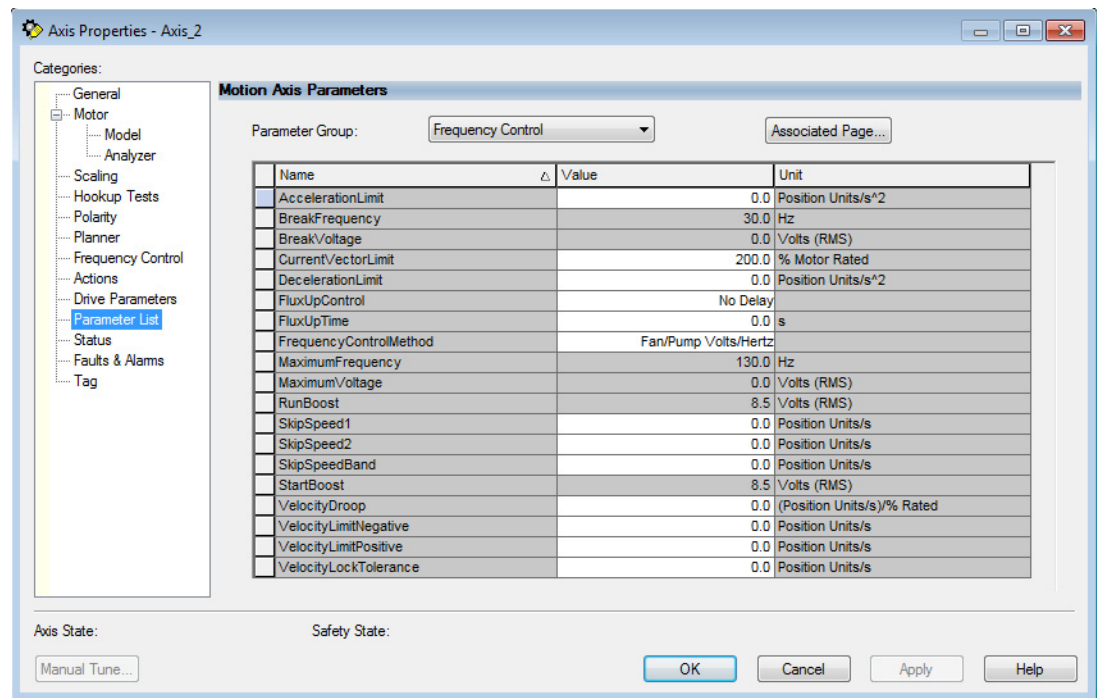

- From the Parameter Group pull-down menu, choose Frequency Control.
- Set the FluxUp, SkipSpeed, VelocityDroop, RunBoost, MaximumFrequency, and MaximumVoltage attributes appropriate for your application.

See the corresponding section in Appendix D, beginning on [page 233](#), for information and configuration examples regarding all of these topics.

- Click OK.

## Configure PM Motor Closed-loop Control Axis Properties

Kinetix 5500 drives accept Hiperface and Hiperface DSL feedback from permanent magnet (PM) motors when the appropriate feedback connector kit is used. [Table 51](#) lists the compatible Allen-Bradley motors and actuators.

**Table 51 - Motor Feedback Compatibility**


Feedback Type		Description	Feedback Connector
Hiperface	High-resolution single-turn and multi-turn, absolute	Applies to Allen-Bradley Bulletin MPL, MPM, MPF, MPS (-M/S or -V/E) rotary motors and Bulletin MPAS (ballscrew), MPAR, MPAL linear actuators, and LDAT-Series (-xDx) linear thrusters, wired to the 2198-H2DCK converter kit.	2-pin motor feedback (MF)
Hiperface DSL		Applies to Allen-Bradley Bulletin VPL, VPF, VPS rotary motors wired to the 2198-KITCON-DSL connector kit.	

**IMPORTANT** Unprogrammed Smart feedback devices (Hiperface Sin/Cos and Hiperface DSL) are not supported. Unprogrammed as load or feedback-only feedback types are supported. Contact your local distributor or Rockwell Automation representative for support options.

Follow these steps to configure permanent-magnet (PM) motor closed-loop axis properties.

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the General category.

The General and Associated Module dialog box appears.

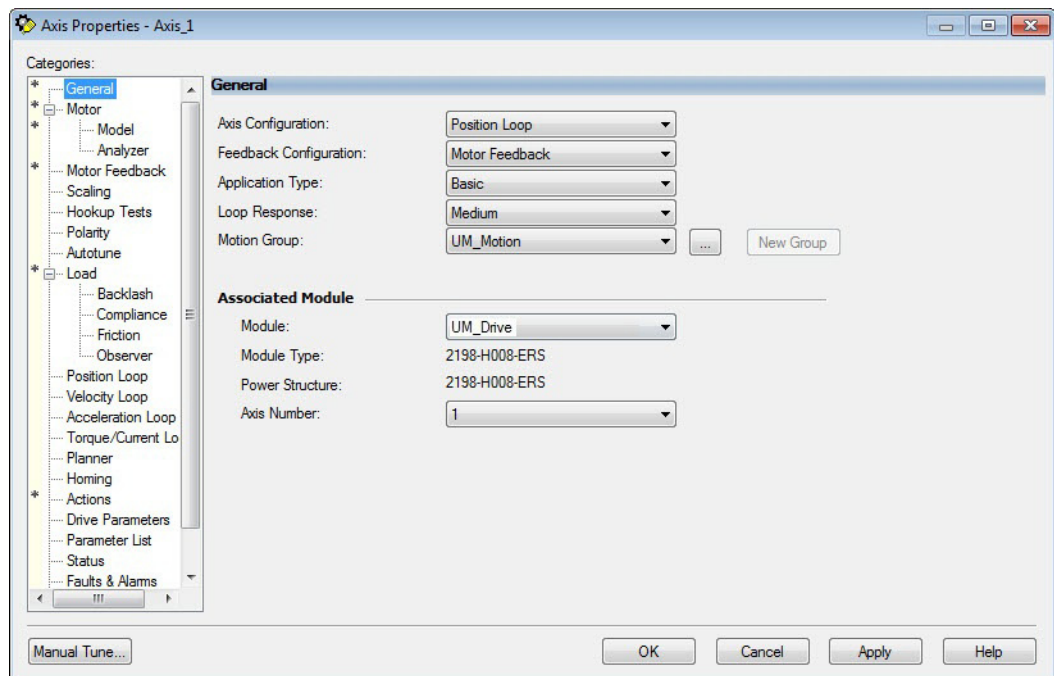

3. From the General pull-down menus, change configuration settings as needed for your application.


**IMPORTANT** Frequency Control is not supported for permanent magnet motors.

4. From the Associated Module>Module pull-down menu, choose your Kinetix 5500 drive.

The drive catalog number populates the Module Type and Power Structure fields.


5. Click Apply.
6. Select the Motor category.

The Motor Device Specification dialog box appears.

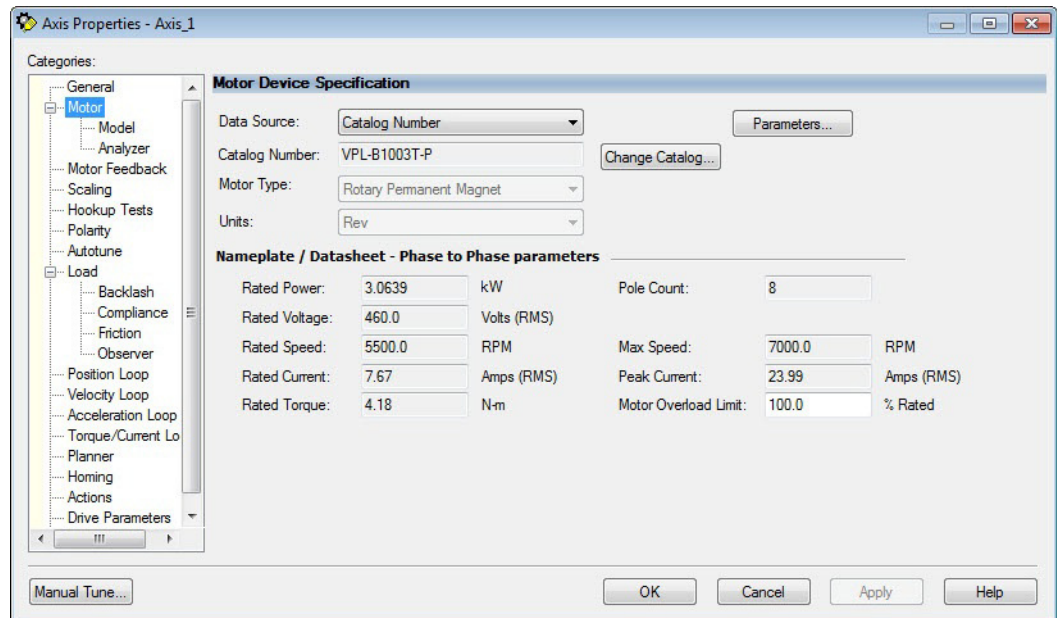

7. From the Data Source pull-down menu, choose Catalog Number.
8. Click Change Catalog.


The Change Catalog Number dialog box appears.

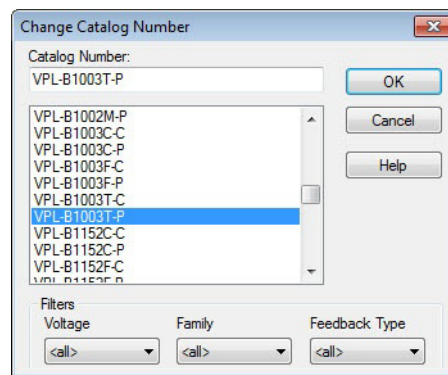


9. Select the motor catalog number appropriate for your application.  
To verify the motor catalog number, refer to the motor name plate.
10. Click OK to close the Change Catalog Number dialog box.
11. Click Apply.

Motor data specific to your motor appears in the Nameplate / Datasheet - Phase to Phase parameters field.

12. Select the Scaling category and edit the default values as appropriate for your application.

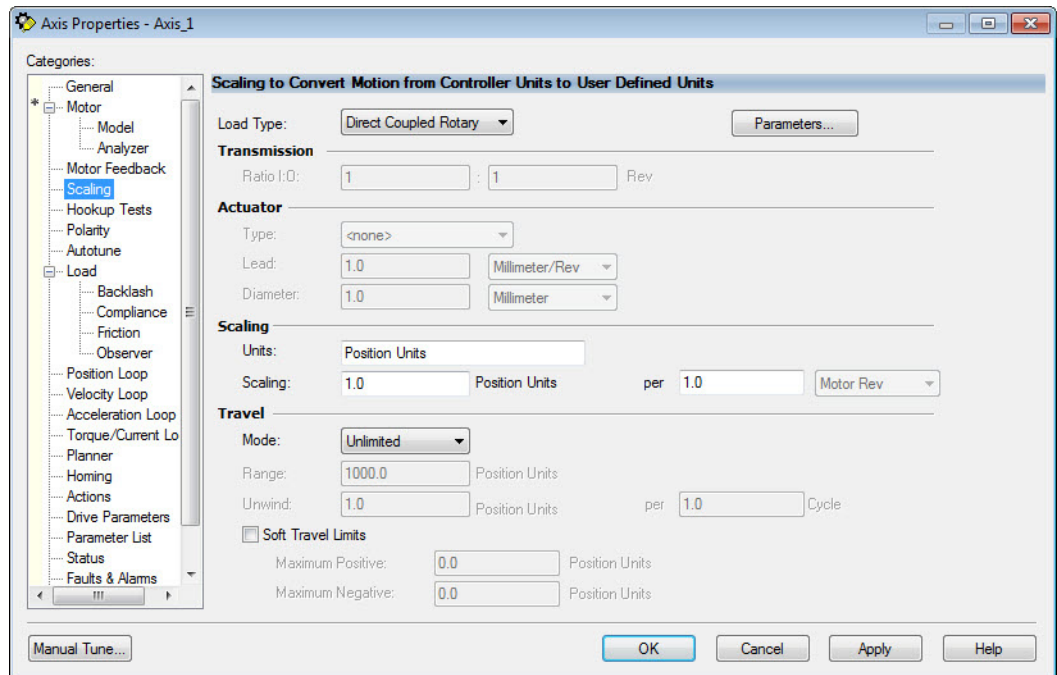


13. Click Apply, if you make changes.
14. Select the Load category and edit the default values as appropriate for your application.

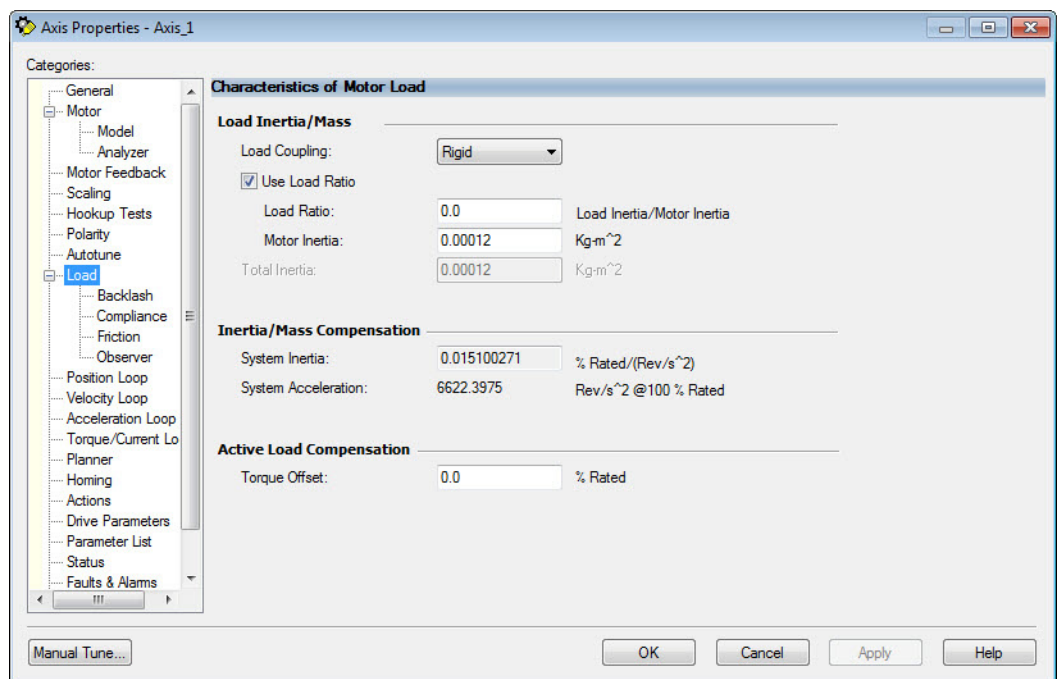

15. Click Apply, if you make changes.
  16. Select the Actions category.
- The Actions to Take Upon Conditions dialog box appears.




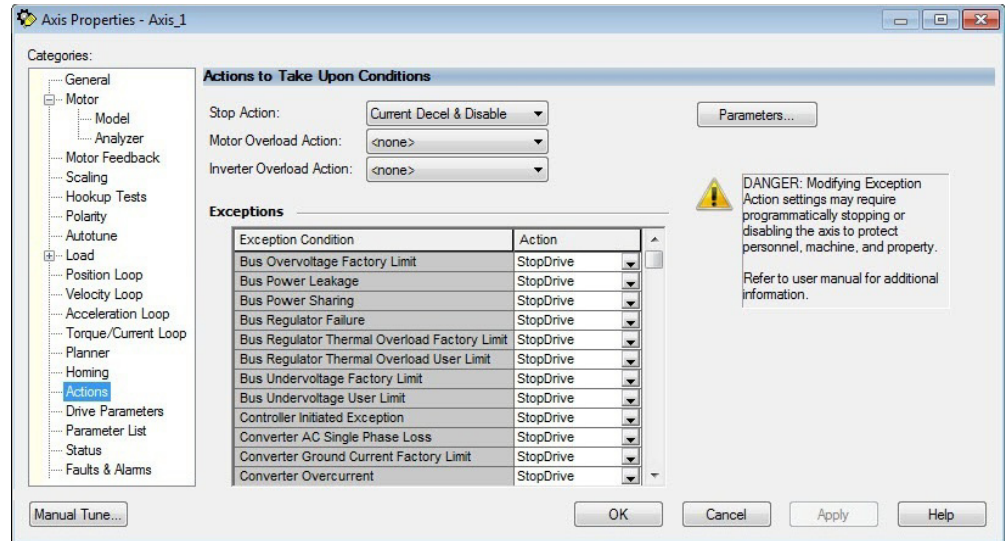

From this dialog box, you can program actions and change the action for exceptions (faults). Refer to [Logix5000 Controller and Drive Behavior](#) on page 160 for more information.

17. Select the Parameter List category.

The Motion Axis Parameters dialog box appears.

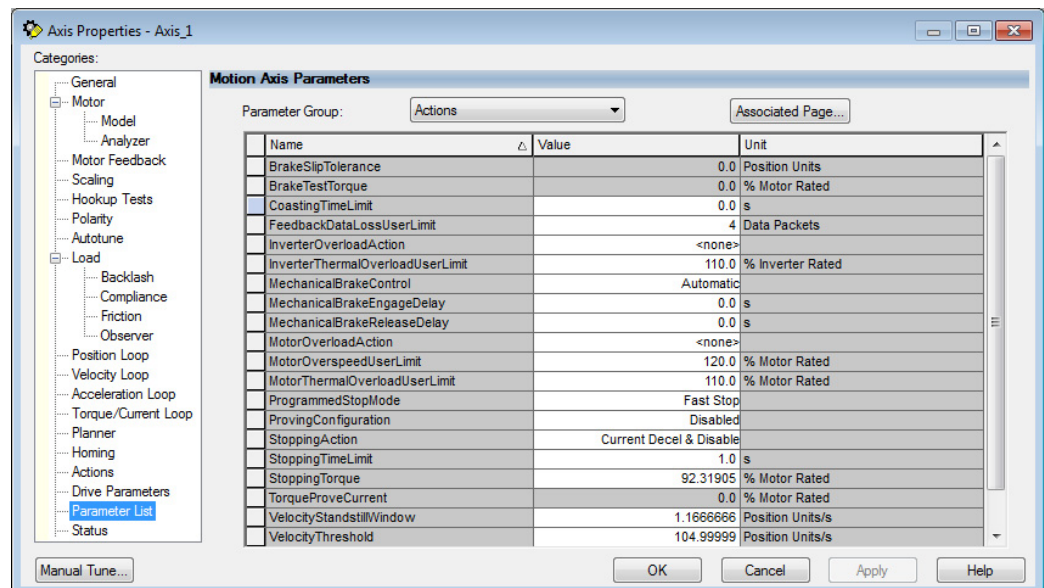

From this dialog box you can set brake engage and release delay times for servo motors. For recommended motor brake delay times, refer to the Kinetix Rotary Motion Specifications Technical Data, publication [GMC-TD001](#).

18. Click OK.
19. Repeat [step 1](#) through [step 18](#) for each servo motor axis.

## Download the Program

After completing the Logix Designer application and saving the file you must download your program to the Logix5000 processor.

## Apply Power to the Kinetix 5500 Drive

This procedure assumes that you have wired and configured your Kinetix 5500 system and your Logix5000 controller.



**SHOCK HAZARD:** To avoid hazard of electrical shock, perform all mounting and wiring of the Bulletin 2198 servo drives prior to applying power. Once power is applied, connector terminals can have voltage present even when not in use.

Follow these steps to apply power to the Kinetix 5500 system.

1. Disconnect the load to the motor.



**ATTENTION:** To avoid personal injury or damage to equipment, disconnect the load to the motor. Make sure each motor is free of all linkages when initially applying power to the system.

2. Apply 24V DC control power.

The LCD display begins the startup sequence. Refer to [Startup Sequence](#) on [page 105](#). If the startup sequence does not begin, check the 24V control power connections.

3. When the startup sequence completes, verify that the two status indicators are steady green and the axis state is PRECHARGE.

If the axis state does not reach PRECHARGE and the two status indicators are not solid green, refer to [Kinetix 5500 Drive Status Indicators](#) on [page 157](#).

**IMPORTANT** Apply control power before applying three-phase AC power. This makes sure the shunt is enabled, which can prevent nuisance faults or Bus Overvoltage faults.

4. Apply mains input power and monitor the DC BUS voltage on the LCD display.

If the DC BUS does not reach the expected voltage level, check the three-phase input power connections. Also, it can take as many as 1.8 seconds after input power is applied before the drive can accept motion commands.

5. Verify that the axis state changes to STOPPED.

If the axis state does not change to STOPPED, refer to [Fault Codes](#) on [page 150](#).

### Applying Power after Changing Input Voltage Range

This step applies to any drive or multi-axis drive configuration.



**ATTENTION:** To avoid damage to equipment when the configured input voltage range of the drive or drives changes from 230V AC to 460V AC or from 460V AC to 230V AC, the bus voltage needs to bleed down below 50V DC before the new configured input voltage is applied.




## Understanding Bus Sharing Group Configuration

When configuring Module Properties>Power tab for each Kinetix 5500 servo drive, you can breakout drives from one or more servo systems into multiple bus-sharing (power) groups.

A drive that faults in Group 1 does not affect the operation of Group 2, even though all of the drives in Groups 1 and 2 are in the same Motion group in the Logix Designer application.

As many as 25 bus-sharing groups are possible.

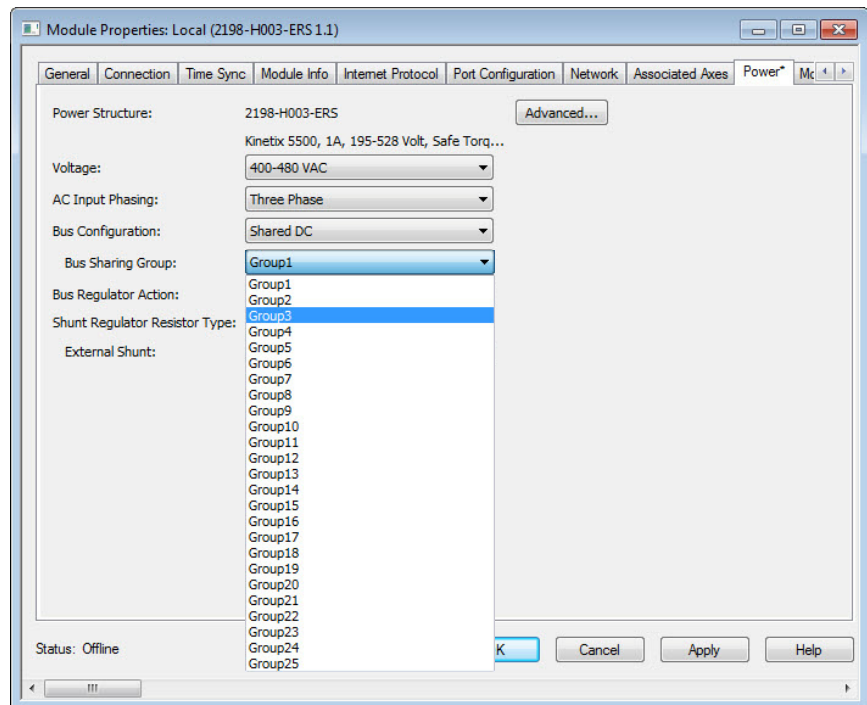



---

**IMPORTANT** Bus-sharing groups do not apply to drives with a Bus Configuration of Standalone.

---

When Standalone is configured as the Bus Configuration, Standalone (dimmed) is also configured as the Bus Sharing Group.

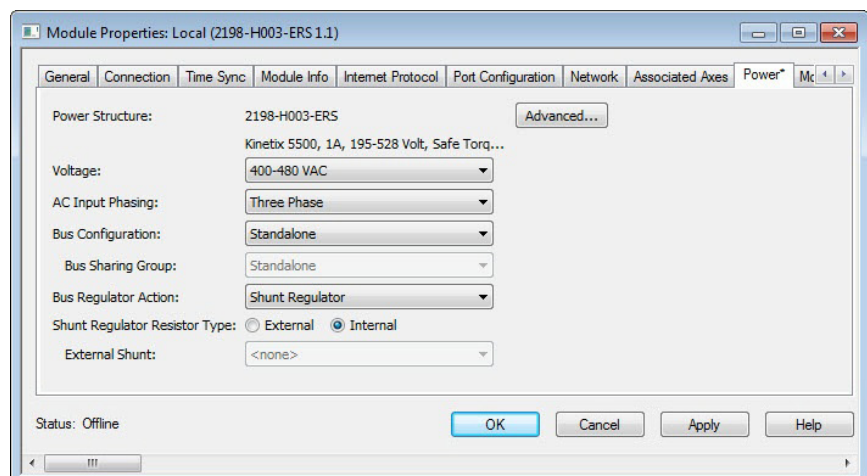


## Bus Sharing Group Example

In this example, twelve axes are needed to support the motion application. All twelve axes are configured in the same Motion group in the Logix Designer application.

However, the twelve axes of motion are also configured as two bus-sharing groups and one standalone drive in Module Properties>Power tab. By creating two bus-sharing groups, a converter drive that faults in Group 1 only disables Group 1 drives, and has no effect on the drive operation of Group 2 or the Standalone drive.

Figure 63 - Bus-sharing Group Example

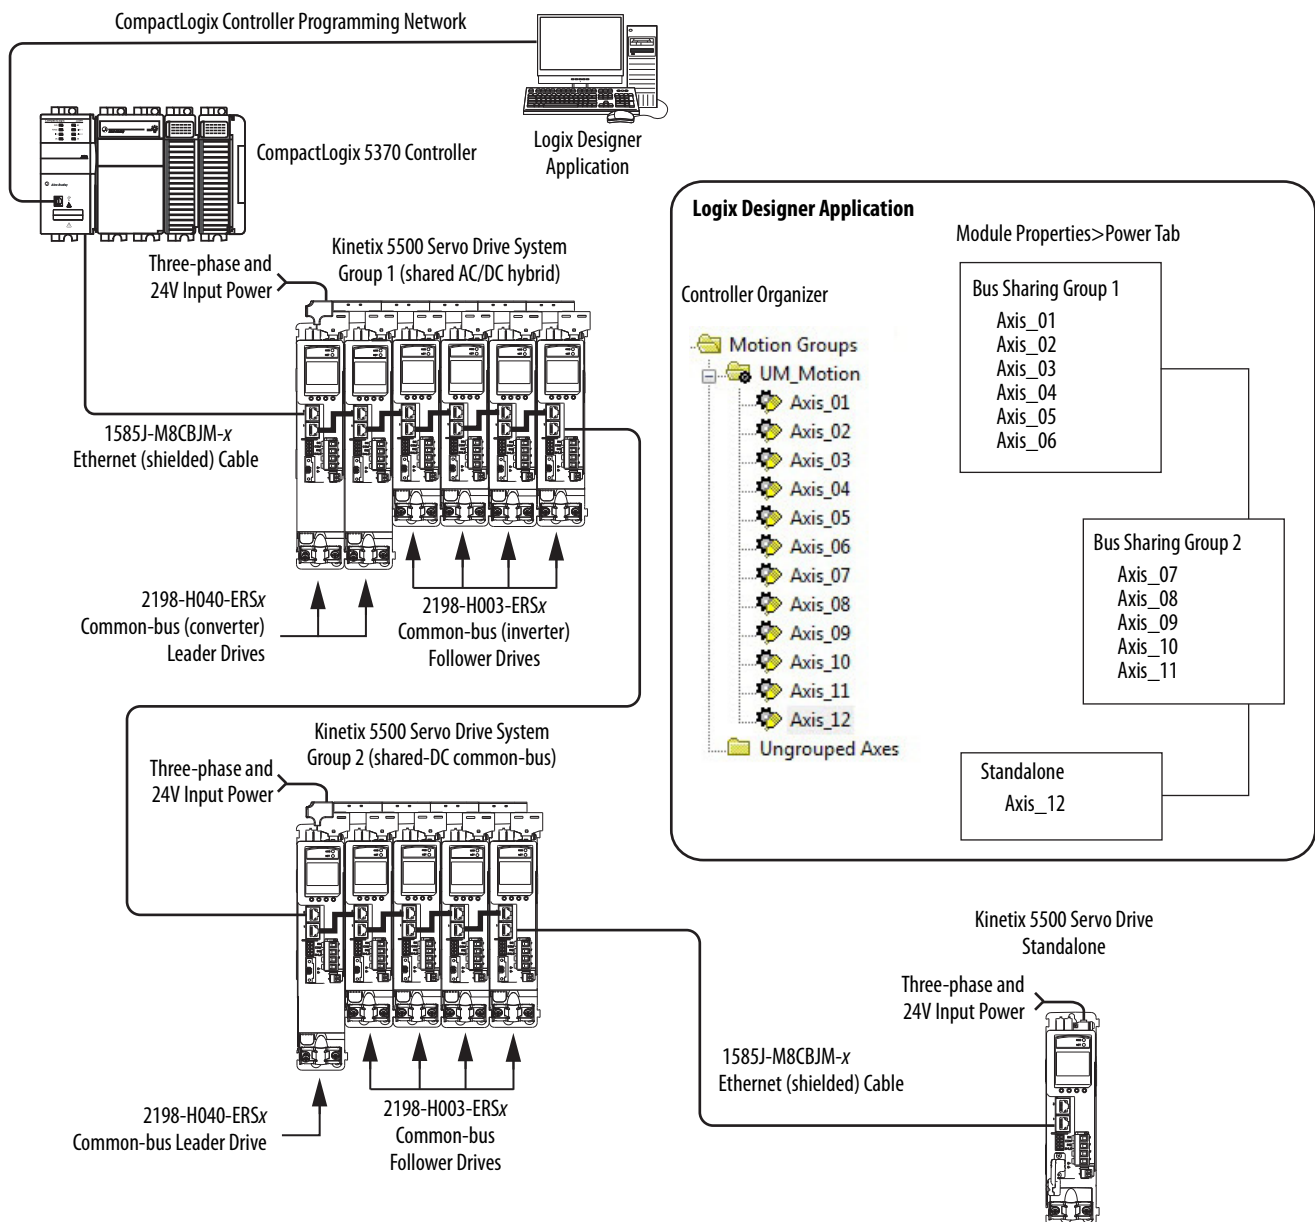


## Configure Bus-sharing Groups

Group 1 is a shared AC/DC hybrid configuration. The Bus Configuration for the first two converter drives is Shared AC/DC. The Bus Configuration for the inverter drives is Shared DC.




**ATTENTION:** To avoid damage to equipment, all modules physically connected to the same shared-bus connection system must be part of the same Bus Sharing Group in the Logix Designer application.

**Figure 64 - Group 1 Converter Drives Configuration**

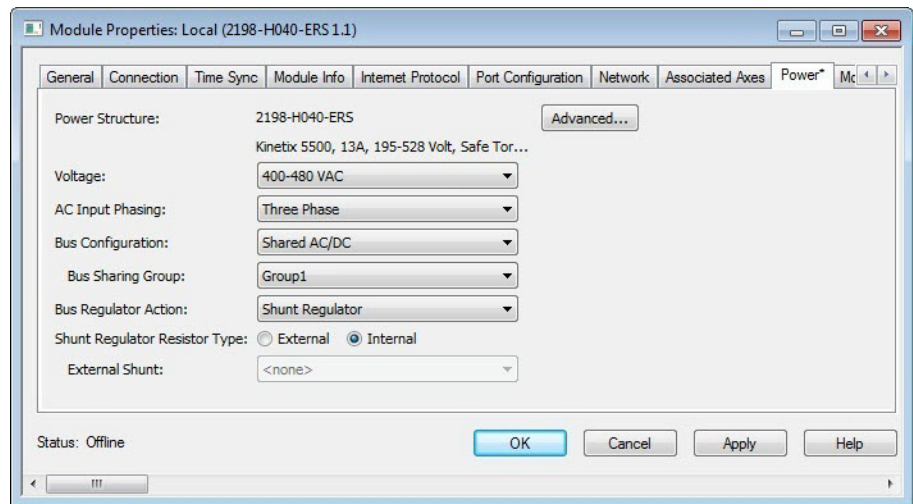


**Figure 65 - Group 1 Inverter Drives Configuration**

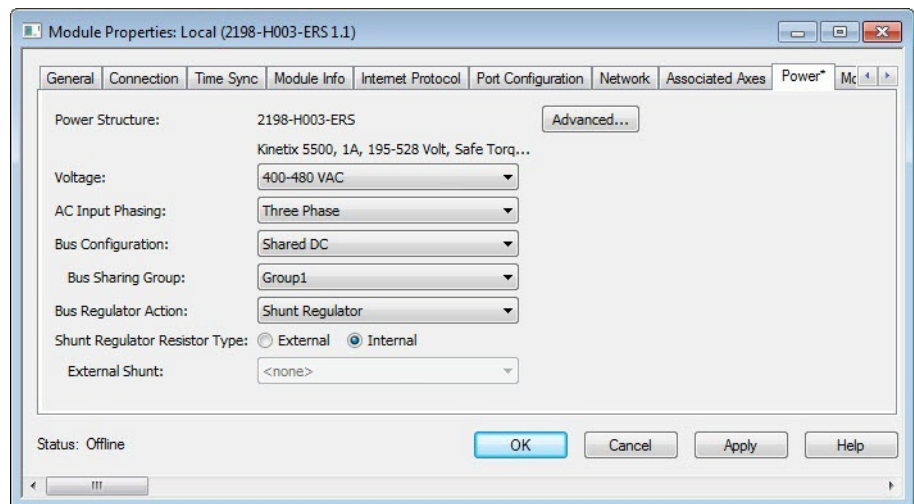


Group 2 is a shared DC (common-bus) configuration. The Bus Configuration for the leader drive is Shared AC/DC. The Bus Configuration for the follower drives is Shared DC.


**Figure 66 - Group 2 Leader Drive Configuration**

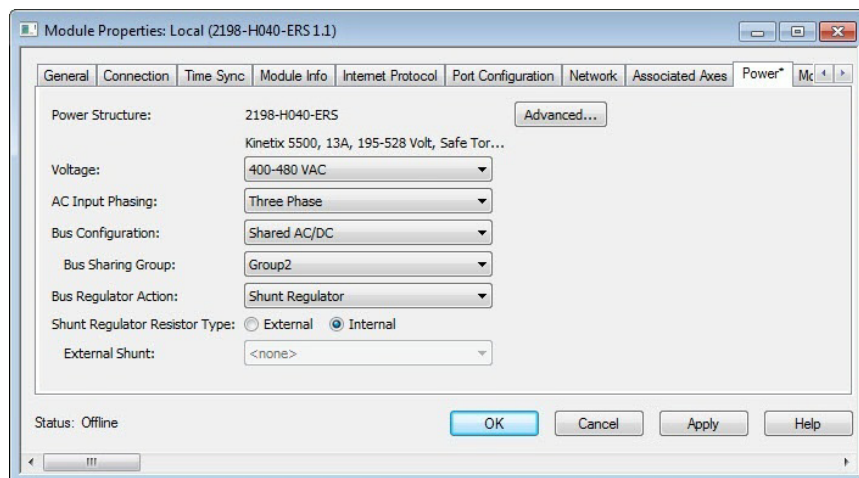

**Figure 67 - Group 2 Follower Drives Configuration**

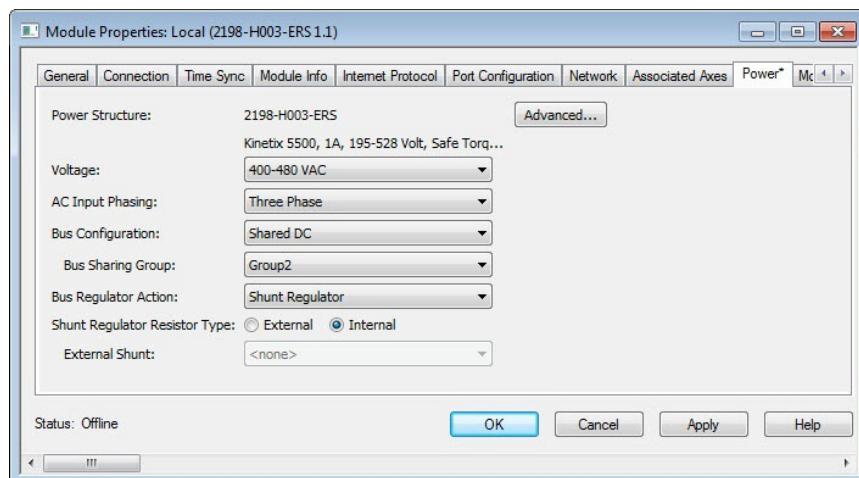

**Figure 68 - Standalone Drive Configuration**

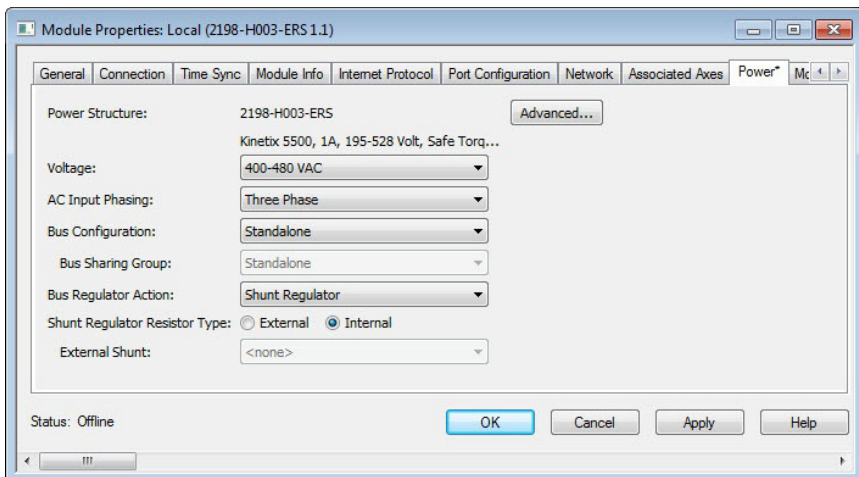

## Test and Tune the Axes

This procedure assumes that you have configured your Kinetix 5500 drive, your Logix5000 controller, and applied power to the system.

---

**IMPORTANT** Before proceeding with testing and tuning your axes, verify that the MOD and NET status indicators are operating as described in [Kinetix 5500 Drive Status Indicators](#) on [page 157](#).

---

For help using the Logix Designer application as it applies to testing and tuning your axes with ControlLogix EtherNet/IP modules or CompactLogix 5370 controllers, refer to [Additional Resources](#) on [page 11](#).

### Test the Axes


Follow these steps to test the axes.

1. Verify the load was removed from each axis.



**ATTENTION:** To avoid personal injury or damage to equipment, you must remove the load from each axis as uncontrolled motion can occur when an axis with an integral motor brake is released during the test.

2. In your Motion Group folder, right-click an axis and choose Properties.  
The Axis Properties dialog box appears.
3. Click the Hookup Tests category.

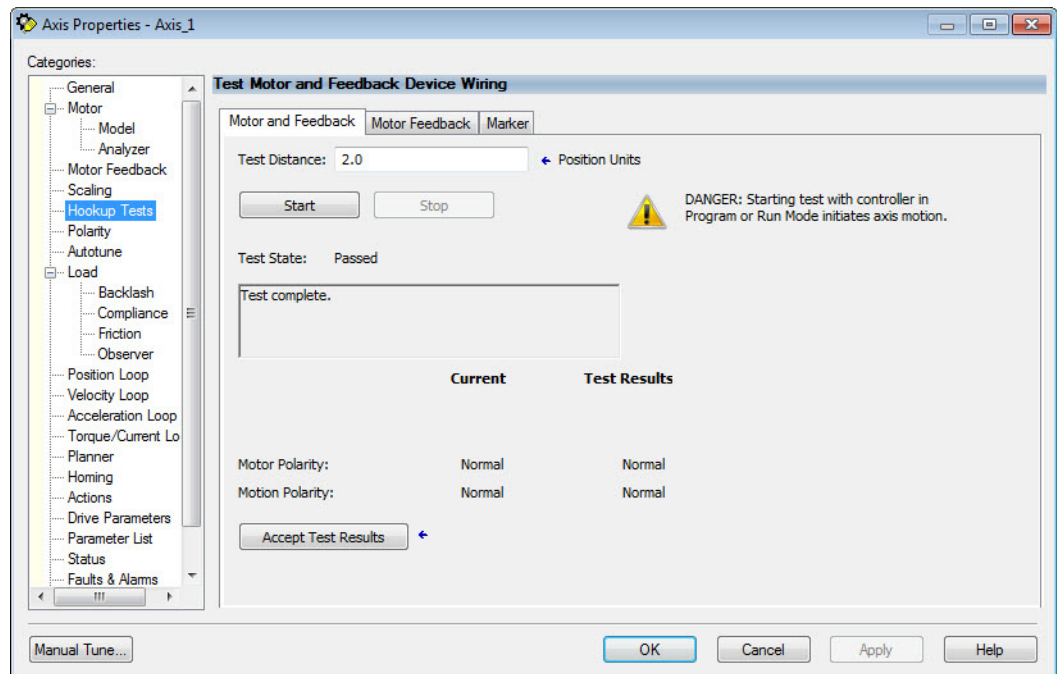


4. In the Test Distance field, enter the desired test distance.  
The Position Units are defined in the Axis Properties>Scaling tab.


Test	Description
Marker	Verifies marker detection capability as you manually rotate the motor shaft. The test completes when the drive either detects the marker or when the motor moves the distance specified in the Test Distance field. If the marker remains undetected, the test completes successfully, but if the marker is not detected before the motor moves the full test distance the test fails. Run this test after running the Motor Feedback and Motor and Feedback tests.
Motor Feedback	Verifies feedback connections are wired correctly as you manually rotate the motor shaft. The test completes when the drive determines that the motor moved the full distance specified in the Test Distance field. Run this test before the Motor and Feedback Test to verify that the feedback can be read properly.
Motor and Feedback	Verifies motor power and feedback connections are wired correctly as the drive commands the motor to rotate. Because the drive is rotating the motor, this test requires full bus power to run. Run the Motor Feedback test before running this test to verify that the feedback is being read correctly.

5. Click the desired test to verify connections.
6. Click Start.



The Logix Designer - Motor and Feedback Test dialog box appears. The Test State is Executing. TESTING appears on the drive LCD display.

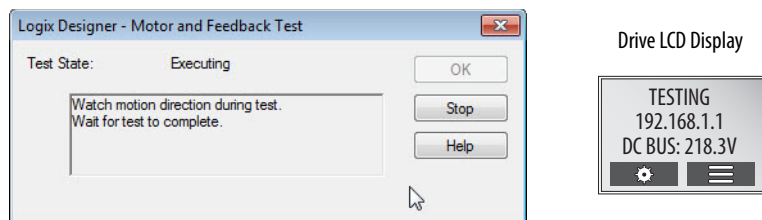

When the test completes successfully, the Test State changes from Executing to Passed.

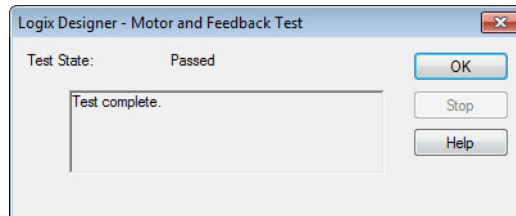

7. Click OK.
- This dialog box appears asking if the direction was correct.
8. Click Yes.
9. Click Accept Test Results.
10. If the test fails, this dialog box appears.
  - a. Click OK.
  - b. Verify the DC bus voltage.
  - c. Verify unit values entered in the Scaling category.
  - d. Verify the motor power and feedback wiring.
  - e. Return to [step 5](#) and run the test again.

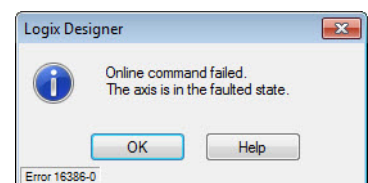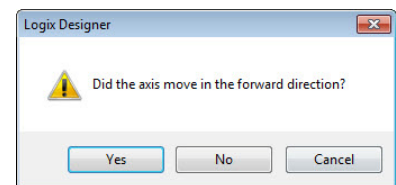



## Tune the Axes

Choose the tuning procedure best suited for your motor type.

Motor Type	Go directly to
Permanent magnet (PM)	Tune Permanent Magnet Motors
Induction	Tune Induction Motors on <a href="#">page 147</a>

### *Tune Permanent Magnet Motors*

The load observer feature provides high-performance motion control without having to manually tune your axis. Using load observer with a default set of gains can yield high-performance right out of the box. Most of the time, there is no need to perform an auto-tune procedure or further optimize gain settings.

Follow these steps to configure the drive for high-performance by using the load observer feature.


1. Verify that the load is connected.

Re-attach the load if it was disconnected for the Hookup Test.




**ATTENTION:** If the drive has not been enabled before (new installation), verify that you have safeguards in place to safely remove power from the drive in the event of an unstable situation where the drive can produce undesired motion.

2. Click the Autotune tab in the Axis Properties dialog box.
  - a. From the pull-down menus for Application Type, Loop Response, and Load Coupling, choose Custom, Medium, and Rigid settings, respectively.
  - b. Verify that only the Velocity Feedforward box is checked.

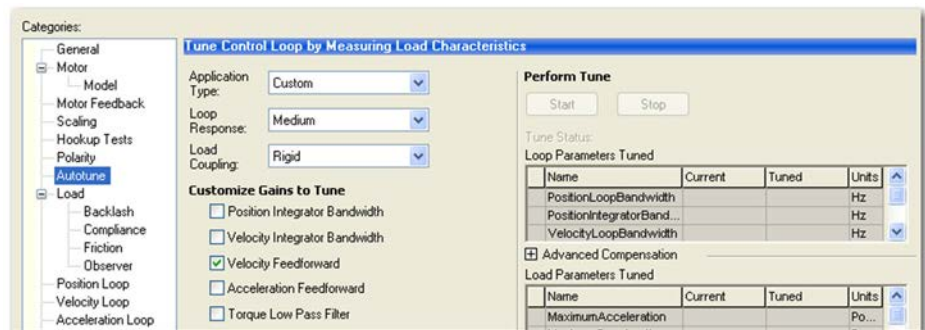


3. Click the Load tab in the Axis Properties dialog box.
  - a. Check Use Load Ratio.


- b. Set the Load Ratio = 0.

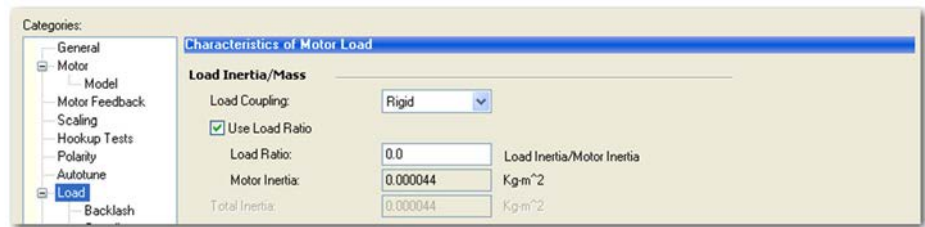

4. Click the Observer tab in the Axis Properties dialog box.  
a. From the Configuration pull-down menu, choose Load Observer with Velocity Estimate.

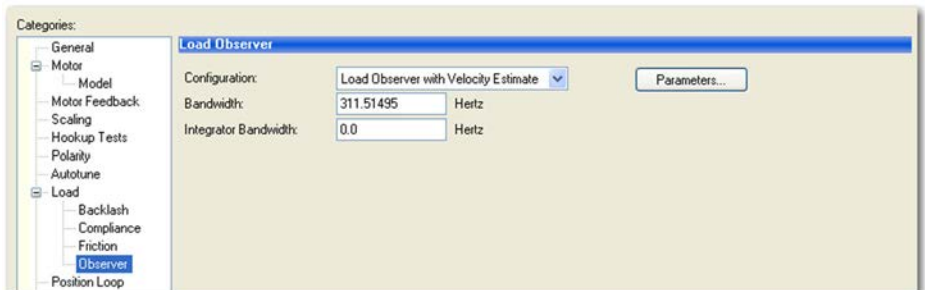

- b. Click Apply and click Yes to update all dependent attributes.  
The Load Observer Bandwidth and other gains are set automatically.

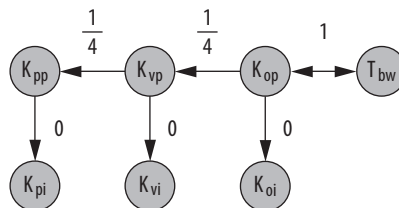

5. Enable the drive for a few seconds with an MSO instruction or motion direct command, followed by an MSF instruction or motion direct command, to make sure that no audible squealing noise is present.

**IMPORTANT** If an audible squealing noise is heard, go to Axis Properties>Load>Compliance category and set the Torque Notch Filter Frequency field (Hz) to remove the noise. Refer to Motion System Tuning Application Techniques, publication [MOTION-AT005](#) (Compensating for High Frequency Resonances), for information on how to set the Torque Notch Filter Frequency field.

6. Repeat [Test and Tune the Axes](#) for each axis.



*Tune Induction Motors*

**IMPORTANT** The Automatic FluxUpControl setting is recommended for best Autotune results.


Follow these steps to tune the induction motor axes.

1. Verify the load is removed from the axis being tuned.



**ATTENTION:** To reduce the possibility of unpredictable motor response, tune your motor with the load removed first, then re-attach the load and perform the tuning procedure again to provide an accurate operational response.

2. Select the Autotune category.

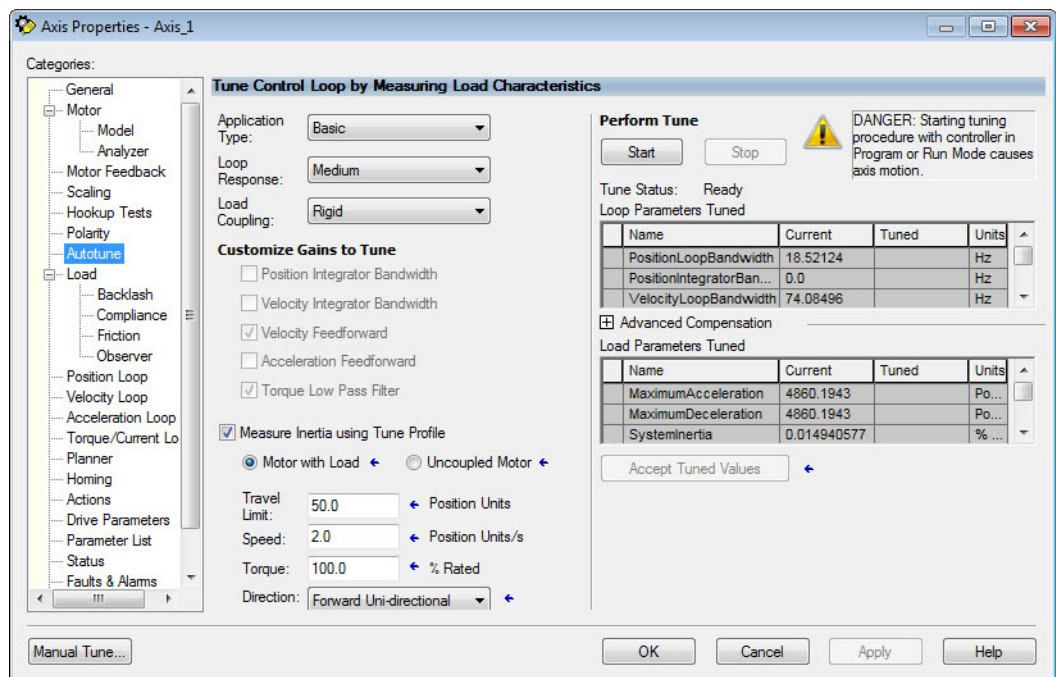

3. Type values for Travel Limit and Speed.


In this example, Travel Limit = 50.0 and Speed = 2.0. The actual value of programmed units depend on your application.

4. From the Direction pull-down menu, choose a setting appropriate for your application.

Forward Uni-directional is default.


5. Edit other fields as appropriate for your application.
6. Click Start.

The Logix Designer - Autotune dialog box appears. When the test completes, the Test State changes from Executing to Success.

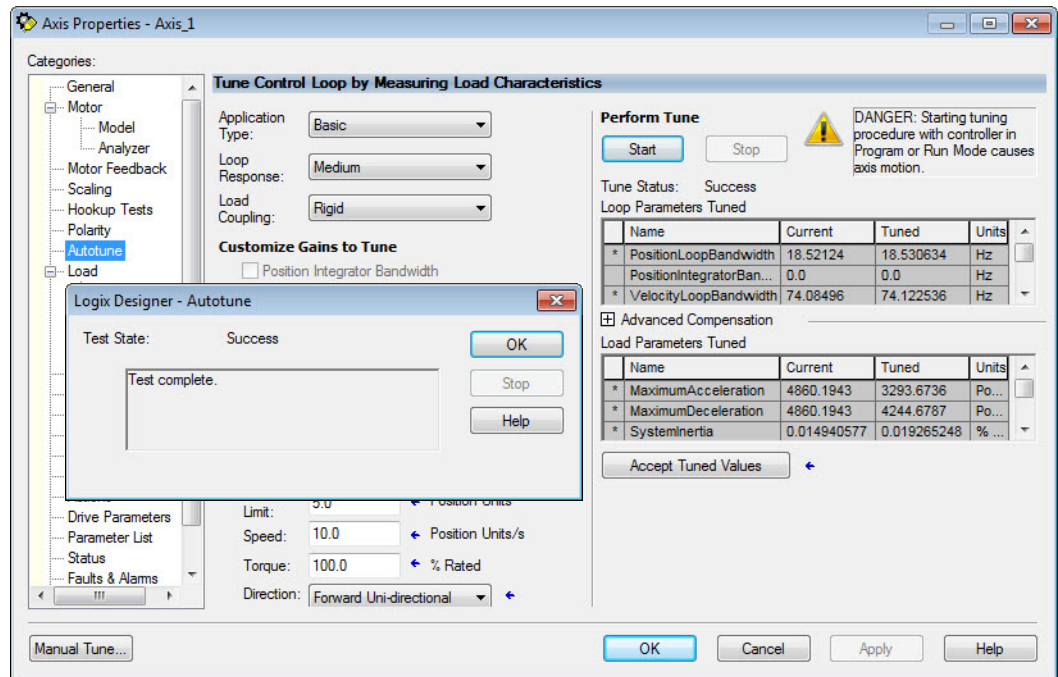

Tuned values populate the Loop and Load parameter tables. Actual bandwidth values (Hz) depend on your application and can require adjustment once motor and load are connected.

7. Click Accept Tuned Values.
8. Click OK to close the Logix Designer - Autotune dialog box.
9. Click OK to close the Axis Properties dialog box.
10. If the test fails, this dialog box appears.

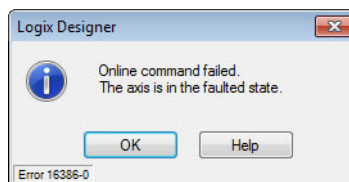

- a. Click OK.
- b. Make an adjustment to motor velocity.
- c. Refer to the controller user manual for more information.
- d. Return to [step 6](#) and run the test again.
11. Repeat [Test and Tune the Axes](#) for each axis.

## Troubleshoot the Kinetix 5500 Drive System

This chapter provides troubleshooting tables and related information for your Kinetix 5500 servo drives.

Topic	Page
Safety Precautions	149
Interpret Status Indicators	150
General Troubleshooting	158
Logix5000 Controller and Drive Behavior	160

### Safety Precautions

Observe the following safety precautions when troubleshooting your Kinetix 5500 servo drive.



**ATTENTION:** Capacitors on the DC bus can retain hazardous voltages after input power has been removed. Before working on the drive, measure the DC bus voltage to verify that it has reached a safe level or wait the full-time interval as indicated in the warning on the front of the drive. Failure to observe this precaution could result in severe bodily injury or loss of life.



**ATTENTION:** Do not attempt to defeat or override the drive fault circuits. You must determine the cause of a fault and correct it before you attempt to operate the system. Failure to correct the fault could result in personal injury and/or damage to equipment as a result of uncontrolled machine operation.



**ATTENTION:** Provide an earth ground for test equipment (oscilloscope) used in troubleshooting. Failure to ground the test equipment could result in personal injury.

## Interpret Status Indicators




Refer to these troubleshooting tables to identify faults, potential causes, and the appropriate actions to resolve the fault. If the fault persists after attempting to troubleshoot the system, contact your Rockwell Automation sales representative for further assistance.

## Display Interface

The LCD display provides fault messages and troubleshooting information by using the soft menu items and navigation buttons.



Under the Main Menu, select FAULT LOG by using the up/down arrows.

	Press to display the list of active fault codes.
	Press again to display the fault details (the problem in troubleshooting tables).
	Press to display the fault help (possible solutions in troubleshooting tables).

Refer to [Understanding the Kinetix 5500 Display](#) on [page 102](#) for more information on navigating the LCD display menu.

## Fault Codes

The fault code tables are designed to help you determine the source of the fault or exception. When a fault condition is detected, the drive performs the appropriate fault action, the fault is displayed, and the fault is added to a persistent fault log (along with diagnostics data). The earlier faults have priority to be displayed.

The drive removes the fault text from the display when a Fault Reset service is sent from the controller and the fault is no longer active. If a fault is still active following a Fault Reset service, the fault is again posted to the display and written to the fault log.

However, there is a delay before the fault is posted again. In a Studio 5000 Logix Designer application, this delay results as the AxisFault tag on the drive axis being cleared until the fault is posted again. During this delay, the AxisState tag continues to indicate that the axis is faulted. Use the AxisState tag on the axis object and only to determine if an axis is faulted.

The drive maintains a log of the last 128 faults with time stamps and stores the fault login persistent memory. However, the fault log cannot be cleared on the drive.

**Table 52 - Fault Code Summary**

Fault Code Type <sup>(1) (2)</sup>	Description
FLT Sxx	Standard runtime axis exceptions.
FLT Mxx	Manufacturer-specific runtime axis exception.
INIT FLT Sxx	Exceptions that prevent normal operation and occur during the initialization process.
INIT FLT Mxx	
NODE FLTxx	Exceptions that can prevent normal operation of the drive module and apply to the entire module.
NODE ALARM xx	Exceptions that can prevent normal operation of the drive module, but do not result in any action other than reporting the alarm to the controller.
INHIBIT Sxx	Conditions that prevent normal operation and indicate that the drive module is prevented from being enabled.
INHIBIT Mxx	
ALARM Sxx	An underlying exception condition that does not result in any action other than reporting the alarm to the controller.
ALARM Mxx	
SAFE FLTxx <sup>(3)</sup>	Exception that is generated by a fault condition that is detected in the safety function.

(1) Sxx refers to Standard exceptions.

(2) Mxx refers to Manufacturer-specific exceptions.

(3) For troubleshooting SAFE FLT fault codes, refer to [Chapter 9](#) on [page 171](#) (hardwired safety) or [Chapter 10](#) on [page 180](#) (integrated safety).

**TIP**

Fault codes that are triggered by conditions that fall outside factory-set limits are identified by FL at the end of the display message. For example, FLT S07 – MTR OVERLOAD FL.

Fault codes that are triggered by conditions that fall outside user-set limits are identified by UL at the end of the display message. For example, FLT S08 – MTR OVERLOAD UL.

**Table 53 - FLT Sxx Fault Codes**

Exception Code on Display	Exception Text	Problem	Possible Solutions
FLT S03 – MTR OVERSPEED FL - 0	Motor Overspeed Factory Limit Fault	Motor speed has exceeded 125% of its maximum speed.	Check control loop tuning.
FLT S03 – MTR OVERSPEED FL - 1		The output frequency has exceeded 590 Hz.	<ul style="list-style-type: none"> <li>Check control loop tuning</li> <li>Reduce the velocity command</li> </ul>
FLT S04 – MTR OVERSPEED UL	Motor Overspeed User Limit Fault	Motor speed has exceeded motor overspeed user limit.	<ul style="list-style-type: none"> <li>Check control loop tuning</li> <li>Increase the Motor Overspeed UL attribute value</li> </ul> Not supported on induction motors.
FLT S05 – MTR OVERTEMP FL nn	Motor Overtemperature Factory Limit Fault	Calculations based on the motor thermistor indicate that the motor factory temperature limit has been exceeded. The nn sub-code is defined as follows: 01: Motor Thermostat or Thermistor 02: Encoder Temperature Sensor	<ul style="list-style-type: none"> <li>Operate motor within continuous torque rating</li> <li>Reduce motor ambient temperature</li> <li>Add motor cooling</li> </ul> Available only on Kinetix VP and MP-Series motors. Not supported on induction motors.
FLT S07 – MTR OVERLOAD FL	Motor Thermal Overload Factory Limit Fault	The motor thermal model has exceeded its factory set thermal capacity limit of 110%.	Modify the command profile to reduce speed or increase time.
FLT S08 – MTR OVERLOAD UL	Motor Thermal Overload User Limit Fault	The motor thermal model has exceeded the thermal capacity limit given by Motor Thermal Overload User Limit.	<ul style="list-style-type: none"> <li>Modify the command profile</li> <li>Increase the Motor Thermal Overload UL attribute value</li> </ul>
FLT S09 – MTR PHASE LOSS	Motor Phase Loss	Torque Prove function detected motor current below a limit set by Torque Prove Current Limit.	Check motor connections.
FLT S10 – INV OVERCURRENT	Inverter Overcurrent Fault	Inverter current has exceeded the instantaneous current limit (determined by hardware).	<ul style="list-style-type: none"> <li>Check motor power cable for shorts</li> <li>Verify motor windings are not shorted</li> <li>Verify motor power wire gauge</li> <li>Operate within the continuous power rating</li> <li>Modify the command profile to reduce speed or increase time</li> </ul>

Table 53 - FLT Sxx Fault Codes (continued)

Exception Code on Display	Exception Text	Problem	Possible Solutions
FLT S11 – INV OVERTEMP FL	Inverter Overtemperature Factory Limit Fault	The measured inverter temperature has exceeded the factory set temperature limit.	<ul style="list-style-type: none"> <li>Modify the command profile to reduce speed or increase time</li> <li>Reduce drive ambient temperature</li> <li>Verify airflow through drive is not obstructed</li> </ul>
FLT S13 – INV OVERLOAD FL	Inverter Thermal Overload Factory Limit Fault	The thermal capacity of the inverter has exceeded the factory set limit.	Modify the command profile to reduce speed or increase time.
FLT S14 – INV OVERLOAD UL	Inverter Thermal Overload User Limit Fault	The thermal capacity of the inverter has exceeded the user set limit given by the inverter Thermal Overload User Limit.	<ul style="list-style-type: none"> <li>Modify the command profile to reduce speed or increase time</li> <li>Increase the Inverter Thermal Overload UL attribute value</li> </ul>
FLT S15 – CONV OVERCURRENT	Converter Overcurrent Fault	The measured converter current has exceeded the factory set current limit.	<ul style="list-style-type: none"> <li>Reduce number of shared DC follower drives</li> <li>Reduce number of capacitor modules</li> </ul>
FLT S16 – GROUND CURRENT	Ground Current Factory Limit Fault	The sensing circuitry in the power stage has detected excessive ground current.	<ul style="list-style-type: none"> <li>Check motor power wiring; check power cable for shorts</li> <li>Replace motor if the fault persists</li> </ul>
FLT S18 – CONV OVERTEMP FL	Converter OverTemp Factory Limit Fault	The measured converter temperature has exceeded the factory set temperature limit.	<ul style="list-style-type: none"> <li>Reduce number of shared DC follower drives</li> <li>Modify the command profile to reduce speed or increase time</li> <li>Reduce drive ambient temperature</li> <li>Verify airflow through drive is not obstructed</li> </ul>
FLT S20 – CONV OVERLOAD FL	Converter Thermal Overload Factory Limit Fault	The converter thermal model indicates that the temperature has exceeded the factory set capacity rating of 110%.	<ul style="list-style-type: none"> <li>Reduce number of shared DC follower drives</li> <li>Reduce duty-cycle of commanded motion</li> </ul>
FLT S21 – CONV OVERLOAD UL	Converter Thermal Overload User Limit Fault	The converter thermal model indicates that the temperature has exceeded the limit given by Converter Thermal Overload User Limit.	<ul style="list-style-type: none"> <li>Reduce number of shared DC follower drives</li> <li>Reduce duty-cycle of commanded motion</li> <li>Increase the Converter Thermal Overload UL attribute value</li> </ul>
FLT S23 – AC PHASE LOSS	AC Single Phase Loss Fault	A single AC input phase was lost while the drive was enabled.	Check AC input voltage on all phases.
FLT S25 – CONV PRECHARGE FAILURE	Converter Pre-charge Failure Fault	The pre-charge circuit monitoring algorithm detected that the DC bus did not reach a factory set voltage level after charging for a period of time or the DC-bus voltage is too high.	<ul style="list-style-type: none"> <li>Check AC input voltage on all phases</li> <li>Check input power wiring</li> <li>Replace drive if fault persists</li> </ul>
FLT S29 – BUS REG OVERLOAD FL	Bus Regulator Thermal Overload Factory Limit Fault	The shunt thermal model has exceeded its factory set thermal capacity limit.	<ul style="list-style-type: none"> <li>Modify the duty cycle of the application</li> <li>Add external shunt for additional capacity</li> <li>Add capacitor module</li> </ul>
FLT S30 – BUS REG OVERLOAD UL	Bus Regulator Thermal Overload User Limit Fault	The shunt thermal model has exceeded the thermal capacity limit given by Bus Regulator Thermal Overload User Limit.	<ul style="list-style-type: none"> <li>Modify the duty cycle of the application</li> <li>Add external shunt for additional capacity</li> <li>Increase the Bus Regulator Thermal Overload UL attribute value</li> <li>Add capacitor module</li> </ul>
FLT S31 – BUS REG FAILURE	Bus Regulator Failure	The shunt circuit has detected the shunt resistor is shorted.	<ul style="list-style-type: none"> <li>Check for shorts in the shunt connector</li> <li>Unplug the shunt connector and measure the resistance of the shunt</li> <li>Replace drive if shunt resistor is shorted</li> </ul>
FLT S33 – BUS UNDERVOLT FL	Bus Undervoltage Factory Limit Fault	DC Bus voltage level is below the factory set limit as determined by the configured input voltage.	<ul style="list-style-type: none"> <li>Verify voltage level of the incoming AC</li> <li>Monitor AC power source for glitches or line droop</li> <li>Install UPS on AC input</li> </ul>
FLT S34 – BUS UNDERVOLT UL	Bus Undervoltage User Limit Fault	DC Bus voltage level is below the user set limit as given by Bus Undervoltage User Limit.	<ul style="list-style-type: none"> <li>Verify voltage level of the incoming AC</li> <li>Monitor AC power source for glitches or line droop</li> <li>Install UPS on AC input</li> <li>Increase Bus Undervoltage UL attribute value</li> </ul>
FLT S35 – BUS OVERVOLT FL	Bus Overvoltage Factory Limit Fault	DC Bus voltage level is above the factory set limit as determined by the configured input voltage.	<ul style="list-style-type: none"> <li>Change the deceleration or motion profile of all drives connected to the DC bus</li> <li>Unplug the shunt connector and measure the resistance of the shunt</li> <li>Replace drive if shunt resistor is open</li> </ul>
FLT S39 – BUS POWER LEAKAGE	Bus Power Leakage Fault	Measured converter power exceeded estimated inverter output power by more than a factory limit.	<ul style="list-style-type: none"> <li>Check bus power sharing configuration attribute</li> <li>Check AC input and DC bus sharing connections</li> </ul>
FLT S45 – FDBK COMM FL	Motor Feedback Data Loss Factory Limit Fault	The number of consecutive missed or corrupted serial data packets, or invalid position feedback values from the intelligent feedback device has exceeded a factory set limit.	<ul style="list-style-type: none"> <li>Check motor feedback cable and connector</li> <li>Check motor power cable and feedback wire shields are secured correctly</li> <li>Check motor frame is grounded correctly</li> </ul>

**Table 53 - FLT Sxx Fault Codes (continued)**

Exception Code on Display	Exception Text	Problem	Possible Solutions
FLT S47 – FDBK DEVICE FAILURE nn	Feedback Device Failure	The feedback device has detected an internal error. The nn sub-code is defined as follows: 1: ACCELERATION OVERFLOW 4: TRACKING FILTER ERROR 5: VECTOR LENGTH ERROR 6: COUNTER ERROR 7: SYNCHRONIZATION ERROR 16: SINGLE TURN ERROR 17: MULTI TURN AMPLITUDE ERROR 18: MULTI TURN SYNC ERROR 19: MULTI TURN VECTOR LENGTH ERROR 35: STANDARD PARAMETER ERROR 36: INTERNAL COMMUNICATION ERROR1 37: INTERNAL COMMUNICATION ERROR2 38: INTERNAL SYSTEM ERROR 48: CRITICAL TEMPERATURE 49: CRITICAL LED CURRENT 50: CRITICAL SUPPLY VOLTAGE 51: CRITICAL SPEED 52: CRITICAL ACCELERATION 53: COUNTER OVERFLOW 54: INTERNAL MONITORING ERROR 66: INTERNAL RESOURCE ACCESS ERROR <sup>(1)</sup> 88: POSITION OUT OF RANGE <sup>(2)</sup>	<ul style="list-style-type: none"> <li>• Check motor feedback cable and connector</li> <li>• Cycle control power</li> <li>• Replace motor if fault continues</li> <li>• Check feedback shield connection</li> <li>• Reduce shock and vibration to motor</li> </ul>
FLT S49 – BRAKE SLIP FLT	Brake Slip Exception	The brake proving function detected that motor displacement exceeded the brake slip tolerance while the mechanical brake was engaged.	Check motor brake.
FLT S50 – POS HW OTRAVEL	Hardware Overtravel - Positive	The axis has moved beyond the digital input travel limit in the positive direction.	Check digital input and axis position.
FLT S51 – NEG HW OTRAVEL	Hardware Overtravel - Negative	The axis has moved beyond the digital input travel limit in the negative direction.	Check digital input and axis position.
FLT S54 – POSN ERROR <sup>(3)</sup>	Excessive Position Error Fault	The position error of the position control loop has exceeded the value given by Position Error Tolerance for a time period given by Position Error Tolerance Time.	<ul style="list-style-type: none"> <li>• Check position loop tuning</li> <li>• Increase the feedforward gain</li> <li>• Verify sizing of the drive and motor</li> <li>• Check motor power wiring</li> <li>• Increase Position Error Tolerance and/or Position Error Tolerance Time attribute values</li> </ul>
FLT S55 – VEL ERROR <sup>(3)</sup>	Excessive Velocity Error Fault	The velocity error of the velocity control loop has exceeded the value given by Velocity Error Tolerance for a time period given by Velocity Error Tolerance Time.	<ul style="list-style-type: none"> <li>• Check velocity loop tuning</li> <li>• Reduce acceleration</li> <li>• Verify sizing of the drive and motor</li> <li>• Check motor power wiring</li> <li>• Increase Velocity Error Tolerance and/or Velocity Error Tolerance Time attribute values</li> </ul>
FLT S56 – OVERTORQUE LIMIT <sup>(3)</sup>	Overtorque Limit Fault	Motor torque has risen above user defined maximum torque level given by Overtorque Limit for a time period given by Overtorque Limit Time.	<ul style="list-style-type: none"> <li>• Verify Torque Trim value</li> <li>• Verify motion profile</li> <li>• Verify sizing of the drive and motor</li> <li>• Increase Overtorque Limit and/or Overtorque Limit Time attribute values</li> </ul>
FLT S57 – UNDERTORQUE LIMIT <sup>(3)</sup>	Undertorque Limit Fault	Motor torque has dropped below user defined minimum torque level given by Undertorque Limit for a time period given by Undertorque Limit Time.	<ul style="list-style-type: none"> <li>• Verify motion profile</li> <li>• Verify sizing of the drive and motor</li> <li>• Decrease Undertorque Limit and/or Undertorque Limit Time attribute values</li> </ul>

(1) For the 2198-H2DCK feedback converter kit, a Motion Axis Fault Reset is required and can take up to 30 seconds to complete. Cycling control power does not always fix the error.

(2) A control power cycle is required to reset the fault.

(3) Does not apply to induction motors in frequency control mode.

**Table 54 - FLT Mxx Fault Codes**

Exception Code on Display	Exception Text	Problem	Possible Solutions
FLT M02 – MOTOR VOLTAGE	Motor Voltage Mismatch Fault	The configured voltage of the drive is greater than the motor rated voltage. For example, a 400V-class drive with a 200V-class motor.	Set the drive voltage to a lower value or replace motor with voltage rating that matches the drive.
FLT M25 – DC COMMON BUS	DC Common Bus Fault	AC power was detected by the drive while configured for shared DC operation.	<ul style="list-style-type: none"> <li>Check the drive power configuration from controller</li> <li>Check wiring</li> </ul>
FLT M26 – RUNTIME ERROR	Runtime Error	The drive firmware encountered an unrecoverable runtime error.	<ul style="list-style-type: none"> <li>Cycle control power</li> <li>Reset the drive</li> <li>Return drive for repair if fault continues</li> </ul>
FLT M28 – SAFETY COMM (2198-Hxxx-ERS2 drives only)	Safety Module Communication Error	Communication with the safety hardware within the drive has failed.	<ul style="list-style-type: none"> <li>Cycle control power</li> <li>Reset the drive</li> <li>Return drive for repair if fault continues</li> </ul>

**Table 55 - INIT FLT Fault Codes**

Exception Code on Display	Exception Text	Problem	Possible Solutions
INIT FLT M01 – ENCODER DATA	Smart Encoder Data Corruption	The data stored in the encoder has a checksum error.	<ul style="list-style-type: none"> <li>Cycle control power</li> <li>Return motor for repair if fault continues</li> </ul>
INIT FLT M02 – MTR DATA RANGE nn	Motor Data Range Error	<p>A motor data attribute stored in the encoder is out of range. The nn sub-code is defined as follows:</p> <p>01: DATA_RANGE_REV  02: DATA_RANGE_CONT_CURRENT  03: DATA_RANGE_PEAK_CURRENT  04: DATA_RANGE_RATED_POWER  05: DATA_RANGE_OVERLOAD_LIMIT  06: DATA_RANGE_THERMAL_CAPACITANCE  07: DATA_RANGE_THERMAL_RESISTANCE  08: DATA_RANGE_MOTOR_RESISTANCE  09: DATA_RANGE_MOTOR_INDUCTANCE  10: DATA_RANGE_INERTIA  11: DATA_RANGE_RATED_SPEED  12: DATA_RANGE_MAX_SPEED  13: DATA_RANGE_RATED_TORQUE  14: DATA_RANGE_TORQUE_CONST  15: DATA_RANGE_BACK_EMF_CONST  16: DATA_RANGE_POLE_PITCH</p>	<ul style="list-style-type: none"> <li>Cycle control power</li> <li>Return motor for repair if fault continues</li> </ul>
INIT FLT M03 – MTR ENC STARTUP	Motor Feedback Communication Startup	Communication with the encoder could not be established.	<ul style="list-style-type: none"> <li>Cycle control power</li> <li>Check motor feedback connector</li> <li>Check motor power and feedback shield terminations on the drive</li> <li>Return motor for repair if fault continues</li> </ul>
INIT FLT M14 – SAFETY FIRMWARE	Safety Firmware	The loaded Safety firmware is not compatible with the drive firmware.	<ul style="list-style-type: none"> <li>Cycle control power</li> <li>Update the drive firmware</li> <li>Return drive for repair if fault continues</li> </ul>
INIT FLT M20 – UNKNOWN MODULE	Unknown Module	The product code of the power board is invalid.	<ul style="list-style-type: none"> <li>Cycle control power</li> <li>Reset the drive</li> <li>Return drive for repair if fault continues</li> </ul>
INIT FLT M21 – FACTORY CONFIG	Factory Configuration Error	Factory configuration data is missing or invalid	<ul style="list-style-type: none"> <li>Cycle control power</li> <li>Reset the drive</li> <li>Return drive for repair if fault continues</li> </ul>



**Table 56 - INHIBIT Fault Codes**

Exception Code on Display	Exception Text	Problem	Possible Solutions
INHIBIT S02 – MTR NOT CONFIG	Motor Not Configured	The motor has not been properly configured for use.	Verify motor configuration in the Logix Designer application.
INHIBIT S03 – FEEDBACK NOT CONFIG	Feedback Not Configured	The feedback has not been properly configured for use.	Verify feedback configuration in the Logix Designer application.
INHIBIT S05 – START INHIBIT	Safe Torque Off Active	The safety function has disabled the power structure.	<ul style="list-style-type: none"> <li>Check S0.SafeTorqueOff bit of safety connection.</li> <li>Check if Reset is required (SI.ResetRequired on safety connection, Axis.SafetyResetRequiredStatus on motion connection) if so, toggle the S0.Reset bit on the safety connection.</li> <li>Check that there is an active safety connection and the safety controller is in run mode.</li> <li>Check for safety faults.</li> </ul>
INHIBIT M04 – PROVING CONFIG	Torque Prove Configuration - Mfg Specific Start Inhibit	When Torque Proving configuration is enabled, control mode, feedback mode, motor feedback type, and motor option configuration must be set properly.	<ul style="list-style-type: none"> <li>Verify that the proper axis configuration has been selected.</li> <li>Verify that sufficient torque prove current has been configured.</li> </ul>
INHIBIT M05 – SAFE TORQUE OFF	Start Inhibit – Safe Torque Off	The safety function has disabled the power structure.	<ul style="list-style-type: none"> <li>Check safety input wiring</li> <li>Check state of safety devices</li> </ul>

**Table 57 - NODE FLT Fault Codes**

Exception Code on Display	Exception Text	Problem	Possible Solutions
NODE FLT 01 – LATE CTRL UPDATE	Control Connection Update Fault	Several consecutive updates from the controller have been lost.	<ul style="list-style-type: none"> <li>Remove unnecessary network devices from the motion network</li> <li>Change network topology so that fewer devices share common paths</li> <li>Use high performance network equipment</li> <li>Use shielded cables</li> <li>Separate signal wiring from power wiring</li> </ul>
NODE FLT 02 – PROC WATCHDOG nn	Processor Watchdog Fault	The processor on the power board or control board failed to update in a certain amount of time. The nn sub-codes 00...06 are internal and result in the same possible solution.	<ul style="list-style-type: none"> <li>Cycle control power</li> <li>Update the drive firmware</li> <li>Return drive for repair if fault continues</li> </ul>
NODE FLT 03 – HARDWARE 00	Hardware Fault -PwrIF	Communication with the power board could not be established.	<ul style="list-style-type: none"> <li>Cycle control power</li> <li>Update the drive firmware</li> <li>Return drive for repair if fault continues</li> </ul>
NODE FLT 03 – HARDWARE 02	Hardware Fault - DSL	Communication with the encoder could not be established.	<ul style="list-style-type: none"> <li>DSL feedback wiring is incorrect (check against wiring diagram)</li> <li>DSL feedback wiring is shorted or open</li> <li>DSL feedback cable is defective</li> <li>Kinetix VP motor feedback device is defective</li> <li>Cycle power</li> <li>Return drive for repair if fault continues</li> </ul>
NODE FLT 03 – HARDWARE 03	DSL Internal Hardware Fault	A DSL hardware error internal to the drive was detected.	<ul style="list-style-type: none"> <li>Check DSL feedback device, wiring, and cable</li> <li>Cycle power</li> <li>Return drive for repair if fault continues</li> </ul>
NODE FLT 03 – HARDWARE 04	Hardware Fault - Board Compatibility	The control and power boards are incompatible.	Return drive for repair if fault continues
NODE FLT 05 – CLOCK SKEW FLT	Clock Skew Fault	The controller time and the drive's system time are not the same.	<ul style="list-style-type: none"> <li>Cycle control power</li> <li>Check controller and Ethernet switch operation</li> </ul>
NODE FLT 06 – LOST CTRL CONN	Lost Controller Connection Fault	Communication with the controller has been lost.	<ul style="list-style-type: none"> <li>Check Ethernet connection</li> <li>Check controller and Ethernet switch operation</li> </ul>
NODE FLT 07 – CLOCK SYNC	Clock Sync Fault	Drive's local clock has lost synchronization with controller's clock and was not able to resynchronize within allotted time.	<ul style="list-style-type: none"> <li>Check Ethernet connection</li> <li>Check controller and Ethernet switch operation</li> </ul>
NODE FLT 09 – DUPLICATE IP ADDRESS	Duplicate IP Address Fault	Several consecutive updates from the controller have been lost.	Select an IP address not already in use on the network

**Table 58 - NODE ALARM Fault Codes**

Exception Code on Display	Exception Text	Problem	Possible Solutions
NODE ALARM 01 – LATE CTRL UPDATE	Control Connection Update Alarm	Updates from the controller have been late.	<ul style="list-style-type: none"> <li>Remove unnecessary network devices from the motion network</li> <li>Change network topology so that fewer devices share common paths</li> <li>Use high performance network equipment</li> <li>Use shielded cables</li> <li>Separate signal wiring from power wiring</li> </ul>
NODE ALARM 03 – CLOCK JITTER	Clock Jitter Alarm	The sync variance has exceeded the sync threshold while the device is running in sync mode.	<ul style="list-style-type: none"> <li>Check the Ethernet connection</li> <li>Check controller and Ethernet switch operation</li> </ul>
NODE ALARM 04 – CLOCK SKEW ALARM	Clock Skew Alarm	The controller time and the drive's time are not the same.	<ul style="list-style-type: none"> <li>Check the Ethernet connection</li> <li>Check controller and Ethernet switch operation</li> </ul>
NODE ALARM 05 – CLOCK SYNC ALARM	Clock Sync Alarm	Drive's local clock has lost synchronization with controller's clock for a short time during synchronous operation.	<ul style="list-style-type: none"> <li>Check the Ethernet connection</li> <li>Check controller and Ethernet switch operation</li> </ul>


## SAFE FLT Fault Codes

For troubleshooting SAFE FLT fault codes, refer to [Chapter 9 on page 171](#) (hardwired safety) or [Chapter 10 on page 180](#) (integrated safety).

## Kinetix 5500 Drive Status Indicators

The module status and network status indicators are just above the LCD status display.

**IMPORTANT** Status indicators are not reliable for safety functions. Use them only for general diagnostics during commissioning or troubleshooting. Do not attempt to use status indicators to determine operational status.

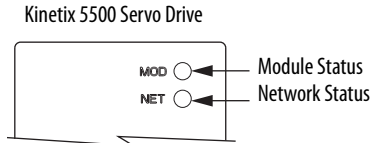

**Table 59 - Module Status Indicator**

Condition	Status
Steady Off	No power applied to the drive.
Steady Green	Drive is operational. No faults or failures.
Flashing Green	Standby (drive not configured).
Flashing Red	Major recoverable fault. The drive detected a recoverable fault, for example, an incorrect or inconsistent configuration.
Steady Red	Major fault. The drive detected a non-recoverable fault.
Flashing Green/Red	Self-test. The drive performs self-test during powerup.

**Table 60 - Network Status Indicator**


Condition	Status
Steady Off	No power applied to the drive or IP address is not configured.
Flashing Green	Drive connection is not established, but has obtained an IP address.
Steady Green	Drive connection is established. Normal operation.
Flashing Red	Connection timeout. One or more of the connections, for which this drive is the target, has timed out.
Steady Red	Duplicate IP address. IP address specified is already in use.
Flashing Green/Red	Self-test. The drive performs self-test during powerup.

**Table 61 - Ethernet Link Speed Status Indicator**

Condition	Status
Steady Off	10 Mbit
Steady On	100 Mbit


**Table 62 - Ethernet Link/Activity Status Indicator**

Condition	Status
Steady Off	No link
Steady On	Link established
Blinking	Network activity

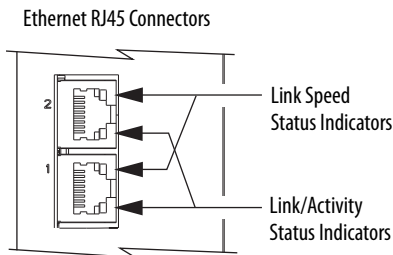

## Kinetix 5500 Capacitor Module Status Indicators

The capacitor module status indicator and module status (MS) connector are on the front of the module. The module status connector is a relay output suitable for wiring to the Logix5000 controller.

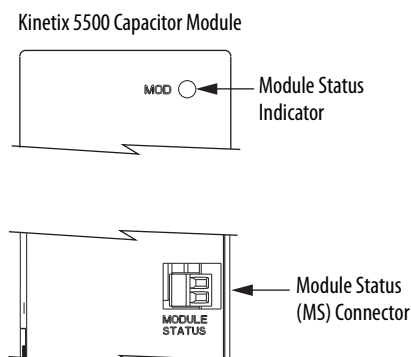

**Table 63 - Module Status Indicator and Relay Output**

Module Status Indicator	Relay Output <sup>(1)</sup>	Status	Resolution
Steady Green	Closed	Bus is fully charged and no faults exist.	N/A
Flashing Green	Open	Control power is present and bus is waiting to charge up.	N/A
Flashing Red	Open	Recoverable fault (precharge or overvoltage fault).	<ul style="list-style-type: none"> <li>• Cycle control and bus power</li> <li>• Verify that AC input meets specifications</li> </ul>
Steady Red	Open	Internal, non-recoverable fault condition inside the module.	<ul style="list-style-type: none"> <li>• Cycle control and bus power</li> <li>• Verify that AC input meets specifications</li> <li>• Replace the module if fault persists</li> </ul>

(1) Wiring the module status relay output to the Logix5000 controller is optional.

## General Troubleshooting

These conditions do not always result in a fault code, but can require troubleshooting to improve performance.

**Table 64 - General Troubleshooting**

Condition	Potential Cause	Possible Resolution
Axis or system is unstable.	The position feedback device is incorrect or open.	Check wiring.
	Unintentionally in Torque mode.	Check to see what primary operation mode was programmed.
	Motor tuning limits are set too high.	Run Tune in the Logix Designer application.
	Position loop gain or position controller accel/decel rate is improperly set.	Run Tune in the Logix Designer application.
	Improper grounding or shielding techniques are causing noise to be transmitted into the position feedback or velocity command lines, causing erratic axis movement.	Check wiring and ground.
	Motor Select limit is incorrectly set (servo motor is not matched to axis module).	<ul style="list-style-type: none"> <li>• Check setups.</li> <li>• Run Tune in the Logix Designer application.</li> </ul>
	Mechanical resonance.	Notch filter or output filter can be required (refer to Axis Properties dialog box, Output tab in the Logix Designer application).
You cannot obtain the motor acceleration/deceleration that you want.	Torque Limit limits are set too low.	Verify that torque limits are set properly.
	Incorrect motor selected in configuration.	Select the correct motor and run Tune in the Logix Designer application again.
	The system inertia is excessive.	<ul style="list-style-type: none"> <li>• Check motor size versus application need.</li> <li>• Review servo system sizing.</li> </ul>
	The system friction torque is excessive.	Check motor size versus application need.
	Available current is insufficient to supply the correct accel/decel rate.	<ul style="list-style-type: none"> <li>• Check motor size versus application need.</li> <li>• Review servo system sizing.</li> </ul>
	Acceleration limit is incorrect.	Verify limit settings and correct them, as necessary.
	Velocity Limit limits are incorrect.	Verify limit settings and correct them, as necessary.

**Table 64 - General Troubleshooting (continued)**

Condition	Potential Cause	Possible Resolution
Motor does not respond to a command.	The axis cannot be enabled until stopping time has expired.	Disable the axis, wait for 1.5 seconds, and enable the axis.
	The motor wiring is open.	Check the wiring.
	The motor cable shield connection is improper.	<ul style="list-style-type: none"> <li>Check feedback connections.</li> <li>Check cable shield connections.</li> </ul>
	The motor has malfunctioned.	Repair or replace the motor.
	The coupling between motor and machine has broken (for example, the motor moves, but the load/machine does not).	Check and correct the mechanics.
	Primary operation mode is set incorrectly.	Check and properly set the limit.
	Velocity or torque limits are set incorrectly.	Check and properly set the limits.
	Brake connector not wired	Check brake wiring
Presence of noise on command or motor feedback signal wires.	Recommended grounding per installation instructions have not been followed.	<ul style="list-style-type: none"> <li>Verify grounding.</li> <li>Route wire away from noise sources.</li> <li>Refer to System Design for Control of Electrical Noise, publication <a href="#">GMC-RM001</a>.</li> </ul>
	Line frequency can be present.	<ul style="list-style-type: none"> <li>Verify grounding.</li> <li>Route wire away from noise sources.</li> </ul>
	Variable frequency can be velocity feedback ripple or a disturbance caused by gear teeth or ballscrew, and so forth. The frequency can be a multiple of the motor power transmission components or ballscrew speeds resulting in velocity disturbance.	<ul style="list-style-type: none"> <li>Decouple the motor for verification.</li> <li>Check and improve mechanical performance, for example, the gearbox or ballscrew mechanism.</li> </ul>
No rotation	The motor connections are loose or open.	Check motor wiring and connections.
	Foreign matter is lodged in the motor.	Remove foreign matter.
	The motor load is excessive.	Verify the servo system sizing.
	The bearings are worn.	Return the motor for repair.
	The motor brake is engaged (if supplied).	<ul style="list-style-type: none"> <li>Check brake wiring and function.</li> <li>Return the motor for repair.</li> </ul>
	The motor is not connect to the load.	Check coupling.
Motor overheating	The duty cycle is excessive.	Change the command profile to reduce accel/decel or increase time.
	The rotor is partially demagnetized causing excessive motor current.	Return the motor for repair.
Abnormal noise	Motor tuning limits are set too high.	Run Tune in the Logix Designer application.
	Loose parts are present in the motor.	<ul style="list-style-type: none"> <li>Remove the loose parts.</li> <li>Return motor for repair.</li> <li>Replace motor.</li> </ul>
	Through bolts or coupling is loose.	Tighten bolts.
	The bearings are worn.	Return motor for repair.
	Mechanical resonance.	Notch filter can be required (refer to Axis Properties dialog box, Output tab in the Logix Designer application).
Erratic operation - Motor locks into position, runs without control or with reduced torque.	Motor power phases U and V, U and W, or V and W reversed.	Check and correct motor power wiring.

## Logix5000 Controller and Drive Behavior

By using the Logix Designer application, you can configure how the Kinetix 5500 drives respond when a drive fault/exception occurs.

**TIP** The INIT FLT xxx faults are always generated after powerup, but before the drive is enabled, so the stopping behavior does not apply.

NODE ALARM xxx faults do not apply because they do not trigger stopping behavior.

The drive supports fault actions for Ignore, Alarm, Minor Fault, and Major Fault as defined in [Table 65](#). The drive also supports three configurable stopping actions as defined in [Table 67](#).

Refer to the drive behavior tables beginning on [page 161](#) to see how the fault and stopping actions apply to each of the exception fault codes.

**Table 65 - Kinetix 5500 Drive Exception Action Definitions**

Exception Action	Definition
Ignore	The drive completely ignores the exception condition. For some exceptions that are fundamental to the operation of the planner, Ignore is not an available option.
Alarm	The drive sets the associated bit in the Motion Alarm Status word, but does not otherwise affect axis behavior. Like Ignore, if the exception is so fundamental to the drive, Alarm is not an available option. When an exception action is set to Alarm, the Alarm goes away by itself when the exceptional condition has cleared.
Minor Fault	The drive latches the exception condition but the drive does not execute any exception action.
Major Fault	The drive latches the exception condition and executes the configured exception action.

You can configure exception behavior in the Logix Designer application from the Axis Properties dialog box, Actions category. These controller exception actions are mapped to the drive exception actions.

**Table 66 - Logix Designer Exception Action Definitions**

Exception Action	Definition
Ignore	The controller completely ignores the exception condition. For some exceptions that are fundamental to the operation of the planner, Ignore is not an available option.
Alarm	The controller sets the associated bit in the Motion Alarm Status word, but does not otherwise affect axis behavior. Like Ignore, if the exception is so fundamental to the drive, Alarm is not an available option. When an exception action is set to Alarm, the Alarm goes away by itself when the exceptional condition has cleared.
Fault Status Only	Like Alarm, Fault Status Only instructs the controller to set the associated bit in the Motion Fault Status word, but does not otherwise affect axis behavior. However, unlike Alarm an explicit Fault Reset is required to clear the fault once the exceptional condition has cleared. Like Ignore and Alarm, if the exception is so fundamental to the drive, Fault Status Only is not an available option.
Stop Planner	The controller sets the associated bit in the Motion Fault Status word and instructs the Motion Planner to perform a controlled stop of all planned motion at the configured maximum deceleration rate. An explicit Fault Reset is required to clear the fault once the exceptional condition has cleared. If the exception is so fundamental to the drive, Stop Planner is not an available option.
Stop Drive	When the exception occurs, the associated bit in the Fault Status word is set and the axis comes to a stop by using the stopping action defined by the drive for the particular exception that occurred. There is no controller based configuration to specify what the stopping action is, the stopping action is device dependant.
Shutdown	When the exception occurs, the drive brings the motor to a stop by using the stopping action defined by the drive (as in Stop Drive) and the power module is disabled. An explicit Shutdown Reset is required to restore the drive to operation.


For Kinetix 5500 drives, only selected exceptions are configurable. In the drive behavior tables, the controlling attribute is given for programmable fault actions.

**Table 67 - Configurable Stopping Actions**

Stopping Action	Description	
Decel and hold	Most control	The best available stopping action is the one that maintains the most control over the motor. However, not all faults support every stopping action.
Decel and disable	Less control	
Disable and coast	Least control	

Only selected drive exceptions are configurable. In the drive behavior tables, the controlling attribute is given for programmable fault actions.

**Figure 69 - Logix Designer Axis Properties - Actions Category**

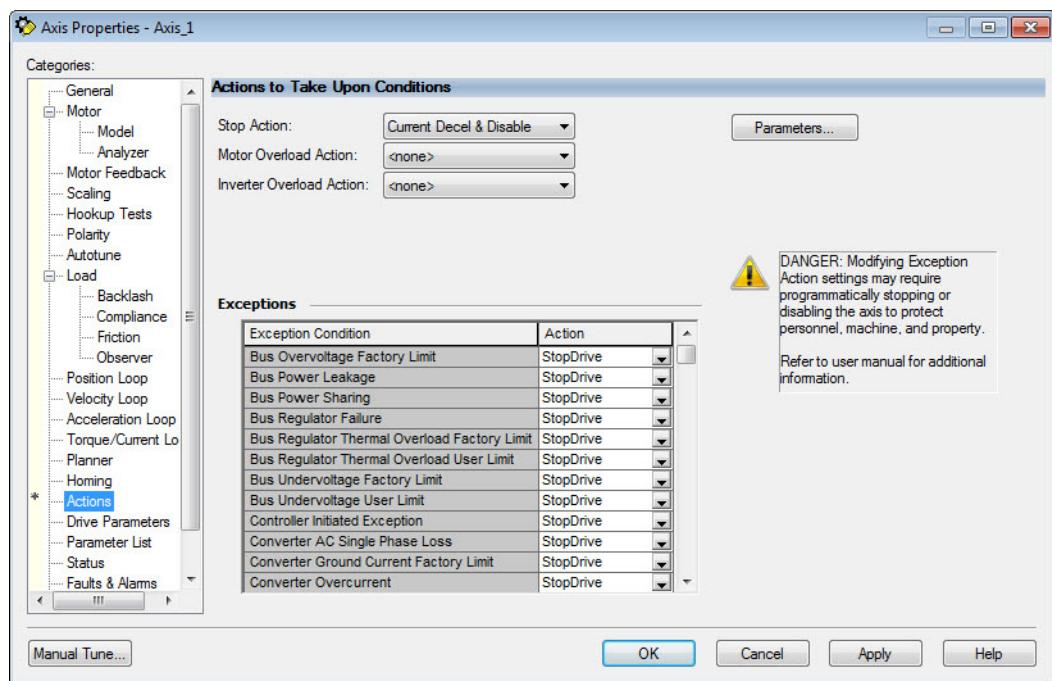

This dialog box applies to Kinetix 5500 (EtherNet/IP network) servo drives.

**Table 68 - Drive Behavior, FLT Sxx Fault Codes**

Exception Fault Code	Exception Text	Permanent Magnet Motor	Induction Motor	Fault Action				Best Available Stopping Action (applies to major faults)
				Ignore	Alarm	Minor fault	Major fault	
FLT S03 – MTR OVERSPEED FL	Motor Overspeed Factory Limit Fault	X					X	Disable/Coast
FLT S04 – MTR OVERSPEED UL	Motor Overspeed User Limit Fault	X		X	X	X	X	Decel/Hold
FLT S05 – MTR OVERTEMP FL	Motor Overtemperature Factory Limit Fault	X					X	Disable/Coast
FLT S07 – MTR OVERLOAD FL	Motor Thermal Overload Factory Limit Fault	X	X				X	Decel/Disable
FLT S08 – MTR OVERLOAD UL	Motor Thermal OverLoad User Limit Fault	X	X	X	X	X	X	Decel/Hold

Table 68 - Drive Behavior, FLT Sxx Fault Codes (continued)

Exception Fault Code	Exception Text	Permanent Magnet Motor	Induction Motor	Fault Action				Best Available Stopping Action (applies to major faults)
				Ignore	Alarm	Minor Fault	Major Fault	
FLT S10 – INV OVERCURRENT	Inverter Overcurrent Fault	X	X				X	Disable/Coast
FLT S11 – INV OVERTEMP FL	Inverter Overtemperature Factory Limit Fault	X	X				X	Disable/Coast
FLT S13 – INV OVERLOAD FL	Inverter Thermal Overload Factory Limit Fault	X	X				X	Disable/Coast
FLT S14 – INV OVERLOAD UL	Inverter Thermal Overload User Limit Fault	X	X	X	X	X	X	Decel/Hold
FLT S15 – CONV OVERCURRENT	Converter Overcurrent Fault	X	X				X	Disable/Coast
FLT S16 – GROUND CURRENT	Ground Current Factory Limit Fault	X	X				X	Disable/Coast
FLT S18 – CONV OVERTEMP FL	Converter OverTemp Factory Limit Fault	X	X				X	Disable/Coast
FLT S20 – CONV OVERLOAD FL	Converter Thermal OverLoad Factory Limit Fault	X	X				X	Disable/Coast
FLT S21 – CONV OVERLOAD UL	Converter Thermal Overload User Limit Fault	X	X	X	X	X	X	Decel/Hold
FLT S23 – AC PHASE LOSS	AC Single Phase Loss Fault	X	X	X	X	X	X	Disable/Coast
FLT S25 – PRECHARGE FAILURE	Pre-charge Failure Fault	X	X				X	Disable/Coast
FLT S29 – BUS OVERLOAD FL	Bus Regulator Thermal OverLoad Factory Limit Fault	X	X				X	Disable/Coast
FLT S30 – BUS OVERLOAD UL	Bus Regulator Thermal Overload User Limit Fault	X	X	X	X	X	X	Decel/Hold
FLT S31 – BUS REG FAILURE	Bus Regulator Failure	X	X				X	Disable/Coast
FLT S33 – BUS UNDERVOLT FL	Bus Undervoltage Factory Limit Fault	X	X				X	Decel/Disable
FLT S34 – BUS UNDERVOLT UL	Bus Undervoltage User Limit Fault	X	X	X	X	X	X	Decel/Hold
FLT S35 – BUS OVERVOLT FL	Bus Overvoltage Factory Limit Fault	X	X				X	Disable/Coast
FLT S39 – BUS POWER LEAKAGE	Bus Power Leakage Fault	X	X				X	Decel/Coast
FLT S45 – FDBK COMM FL	Motor Feedback Data Loss Factory Limit Fault	X					X	Disable/Coast
FLT S47 – FDBK DEVICE FAILURE	Feedback Device Failure	X					X	Disable/Coast
FLT S49 – BRAKE SLIP FLT	Brake Slip Exception	X		X	X	X	X	Decel/Hold
FLT S50 – POS HW OTRAVEL	Hardware Overtravel - Positive	X	X	X	X	X	X	Decel/Hold
FLT S51 – NEG HW OTRAVEL	Hardware Overtravel - Negative	X	X	X	X	X	X	Decel/Hold
FLT S54 – POSN ERROR	Excessive Position Error Fault	X		X	X	X	X	Disable/Coast
FLT S55 – VEL ERROR	Excessive Velocity Error Fault	X		X	X	X	X	Disable/Coast
FLT S56 – OVERTORQUE LIMIT	Overtorque Limit Fault	X		X	X	X	X	Decel/Hold
FLT S57 – UNDERTORQUE LIMIT	Undertorque Limit Fault	X		X	X	X	X	Decel/Hold



**Table 69 - Drive Behavior, FLT Mxx Fault Codes**

Exception Fault Code	Exception Text	Permanent Magnet Motor	Induction Motor	Fault Action				Best Available Stopping Action (applies to major faults)
				Ignore	Alarm	Minor Fault	Major Fault	
FLT M02 – MOTOR VOLTAGE	Motor Voltage Mismatch Fault	X		X	X	X	X	Disable/Coast
FLT M25 – COMMON BUS	DC Common Bus Fault	X	X				X	Disable/Coast
FLT M26 – RUNTIME ERROR	Runtime Error	X	X				X	Disable/Coast
FLT M28 – SAFETY COMM (2198-Hxxx-ERS2 drives only)	Safety Module Communication Error	X	X				X	Disable/Coast

**Table 70 - Drive Behavior, NODE FLT Fault Codes**

Exception Fault Code	Exception Text	Permanent Magnet Motor	Induction Motor	Fault Action				Best Available Stopping Action (applies to major faults)
				Ignore	Alarm	Minor Fault	Major Fault	
NODE FLT 01 – LATE CTRL UPDATE	Control Connection Update Fault	X	X				X	Decel/Disable
NODE FLT 02 – PROC WATCHDOG	Processor Watchdog Fault	X	X				X	Disable/Coast
NODE FLT 03 – HARDWARE	Hardware Fault	X	X				X	Disable/Coast
NODE FLT 05 – CLOCK SKEW FLT	Clock Skew Fault	X	X				X	Disable/Coast
NODE FLT 06 – LOST CTRL CONN	Lost Controller Connection Fault	X	X				X	Decel/Disable
NODE FLT 07 – CLOCK SYNC	Clock Sync Fault	X	X				X	Disable/Coast
NODE FLT 09 – DUPLICATE IP ADDRESS	Duplicate IP Address Fault	X	X				X	Disable/Coast

## **Notes:**

## Remove and Replace Servo Drives

This chapter provides remove and replace procedures for Kinetix 5500 drives.

Topic	Page
Before You Begin	165
Remove and Replace Kinetix 5500 Servo Drives	166
Start and Configure the Drive	168



**ATTENTION:** This drive contains electrostatic discharge (ESD) sensitive parts and assemblies. You are required to follow static-control precautions when you install, test, service, or repair this assembly. If you do not follow ESD control procedures, components can be damaged. If you are not familiar with static control procedures, refer to *Guarding Against Electrostatic Damage*, publication [8000-4.5.2](#), or any other applicable ESD awareness handbook.

### Before You Begin

When each drive is installed, network settings are configured from the setup screens. Before removing the drive, revisit the Network menu and make note of the static IP or DHCP settings. Refer to [Configure the Drive](#) on [page 106](#) to access those settings.

**IMPORTANT** If you intend to use the same Logix Designer application after replacing your drive, the new drive must be the same catalog number as the old drive.

You also need these tools available before you begin removal and replacement procedures:

- Screwdrivers (to loosen/remove screws)
- Voltmeter (to make sure no voltage exists on drive connectors)
- Non-conductive probe for removing DC bus T-connectors

## Remove and Replace Kinetix 5500 Servo Drives

Follow these steps to remove and replace servo drives from the panel.

### Remove Power and All Connections

1. Verify that all control and input power has been removed from the system.



**ATTENTION:** To avoid shock hazard or personal injury, assure that all power has been removed before proceeding. This system can have multiple sources of power. More than one disconnect switch can be required to de-energize the system.

2. Wait five minutes for the DC bus to discharge completely before proceeding.



**SHOCK HAZARD:** This product contains stored energy devices. To avoid the hazard of electrical shock, verify that voltage on capacitors has been discharged before attempting to service, repair, or remove this unit. Do not attempt the procedures in this document unless you are qualified to do so and are familiar with solid-state control equipment and the safety procedures in publication NFPA 70E.

3. Label and remove all wiring connectors from the drive you are removing.

To identify each connector, refer to [Kinetix 5500 Connector Data](#) on [page 58](#).

**TIP**

You do not need to remove the shunt (RC) connector, unless there is an external shunt wired to it.


4. Remove the shared-bus input wiring connectors, T-connectors, and bus-bars from the drive you are removing.

**IMPORTANT**

DC bus T-connectors latch on both sides when inserted into the drive. To remove the DC bus T-connector, at least one latch must be pried away with a non-conductive probe.

Refer to [Shared-bus Connection System](#) on [page 47](#).

5. Use a screwdriver to loosen the two cable clamp screws, removing the screw on the right.

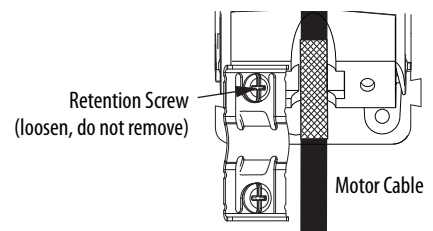

6. Remove the single motor cable from the cable shield clamp.
7. Remove the ground screw and braided ground strap.

Refer to [Ground the System Subpanel](#) on [page 76](#).

## Remove the Servo Drive

You can remove single-axis drives from the panel or any single drive from a multi-axis configuration by using the same procedure.


---

**IMPORTANT** This procedure applies to any 2198-Hxxx-ERSx drive in any configuration.

---

Follow these steps to remove Kinetix 5500 servo drives from the panel.

1. Loosen the top and bottom screws of the drive to remove.  
Frame 1 and 2 drives have one top and bottom screw. Frame 3 drives have two top and bottom screws.
2. Grasp the top and bottom of the drive with both hands and pull the drive straight out and away from the panel, clearing the zero-stack mounting tabs and cutouts.

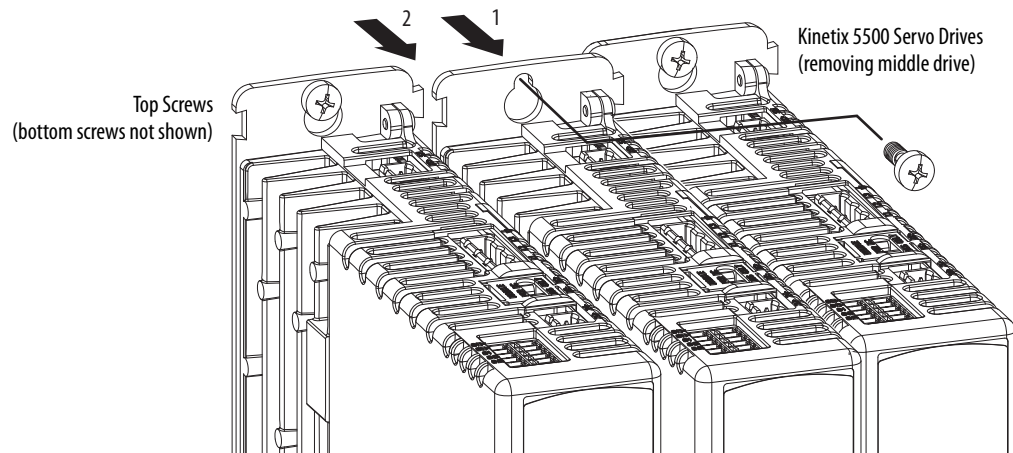

## Replace the Servo Drive

To replace the servo drive, reverse the steps shown above or refer to [Mount Your Kinetix 5500 Drive](#) on [page 56](#):

- Torque mounting, shield clamp, and ground screws to 2.0 N•m (17.7 lb•in) max.
- Reconnect the feedback connector kit and torque the mounting screws to 0.4 N•m (3.5 lb•in) max.

## Start and Configure the Drive

Follow these steps to configure the replacement drive.

---

<b>IMPORTANT</b>	If you intend to use the same Logix Designer application after replacing your drive, the new drive must be the same catalog number as the old drive.
------------------	------------------------------------------------------------------------------------------------------------------------------------------------------

---

---

<b>IMPORTANT</b>	If a 2198-Hxxx-ERS2 drive was previously configured by a safety controller, reset the drive to the Out of Box state. Refer to <a href="#">Out-of-Box State</a> on <a href="#">page 182</a> .
------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

---

1. Reapply power to the drive/system.  
Refer to [Apply Power to the Kinetix 5500 Drive](#) on [page 138](#) for the procedure.
2. Configure the network settings for the drive.
  - a. If your old drive was configured as Static IP, you need to set the IP address, gateway, and subnet mask in the new drive identical to the old drive.  
Refer to [Configure the Drive](#) on [page 106](#) to access those settings.
  - b. If you replaced a 2198-Hxxx-ERS2 servo drive in an integrated safety application, review [Understanding Integrated Safety Drive Replacement](#) on [page 183](#) and follow the appropriate procedure in [Replacing an Integrated Safety Drive in a GuardLogix System](#) on [page 184](#) to properly set the safety network number for the new drive.
3. Download the Logix Designer application to the controller.
4. Verify the drive/system is working properly.

## Kinetix 5500 Safe Torque-off - Hardwired Safety

The 2198-Hxxx-ERS servo drives are equipped for hardwired safe torque-off (STO). The hardwired STO function meets the requirements of Performance Level d (PLd) and safety category 3 (CAT 3) per EN ISO 13849-1 and SIL 2 per IEC EN 61508, EN 61800-5-2 and EN 62061.

Topic	Page
Certification	169
Description of Operation	170
Probability of Dangerous Failure Per Hour	173
Safe Torque-off Connector Data	173
Wire the Safe Torque-off Circuit	174
Safe Torque-off Feature	175
Safe Torque-off Specifications	176

A ControlLogix 5570, ControlLogix 5580, or CompactLogix 5370 controller is required for hardwired safety control of the Kinetix 5500 safe torque-off function. The 2198-Hxxx-ERS servo drives use the STO connector for wiring external safety devices and cascading hardwired safety connections from one drive to another.

### Certification

The TÜV Rheinland group has approved the 2198-Hxxx-ERS servo drives with hardwired safe torque-off for use in safety-related applications up to EN ISO 13849-1 Performance Level d (PLd) and Category 3, SIL 2 per IEC EN 61508, EN 61800-5-2, and EN 62061, in which removing the motion producing power is considered to be the safe state.

Refer to Appendix E on [page 261](#) for these certification documents.

- EC Type - Examination Certificate
- EC Declaration of Conformity
- European Union Directives

### Important Safety Considerations

The system user is responsible for the following:

- Validation of any sensors or actuators connected to the system
- Completing a machine-level risk assessment
- Certification of the machine to the desired EN ISO 13849-1 performance level or EN 62061 SIL level
- Project management and proof testing in accordance with EN ISO 13849

## Category 3 Requirements According to EN ISO 13849-1

Safety-related parts are designed with these attributes:

- A single fault in any of these parts does not lead to the loss of the safety function.
- A single fault is detected whenever reasonably practicable.
- Accumulation of undetected faults can lead to the loss of the safety function and a failure to remove motion producing power from the motor.

## Stop Category Definition

Stop Category 0 as defined in EN 60204 or safe torque-off as defined by EN 61800-5-2 is achieved with immediate removal of motion producing power to the actuator.

---

<b>IMPORTANT</b>	In the event of a malfunction, the most likely stop category is Stop Category 0. When designing the machine application, timing and distance must be considered for a coast to stop. For more information regarding stop categories, refer to EN 60204-1.
------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

---

## Performance Level (PL) and Safety Integrity Level (SIL)

For safety-related control systems, Performance Level (PL), according to EN ISO 13849-1, and SIL levels, according to EN 61508 and EN 62061, include a rating of the systems ability to perform its safety functions. All of the safety-related components of the control system must be included in both a risk assessment and the determination of the achieved levels.

Refer to the EN ISO 13849-1, EN 61508, and EN 62061 standards for complete information on requirements for PL and SIL determination.

## Description of Operation

The safe torque-off feature provides a method, with sufficiently low probability of failure, to force the power-transistor control signals to a disabled state. When disabled, or any time power is removed from the safety enable inputs, all of the drive output-power transistors are released from the ON-state. This results in a condition where the drive performs a Category 0 Stop. Disabling the power transistor output does not provide mechanical isolation of the electrical output that is required for some applications.

Under normal operation, the safe torque-off inputs are energized. If either of the safety enable inputs are de-energized, then all of the output power transistors turn off. The safe torque-off response time is less than 12 ms.



**ATTENTION:** Permanent magnet motors can, in the event of two simultaneous faults in the IGBT circuit, result in a rotation of up to 180 electrical degrees.


---





**ATTENTION:** If any of the safety enable inputs de-energize, the Start Inhibit field indicates SafeTorqueOffInhibit and GuardStopRequestStatus bit of AxisGuardStatus tag set to 1. Both inputs must be de-energized within 1 second and re-energized within 1 second to avoid GuardStopInputFault conditions.

**Figure 70 - System Operation when Inputs are Meeting Timing Requirements**

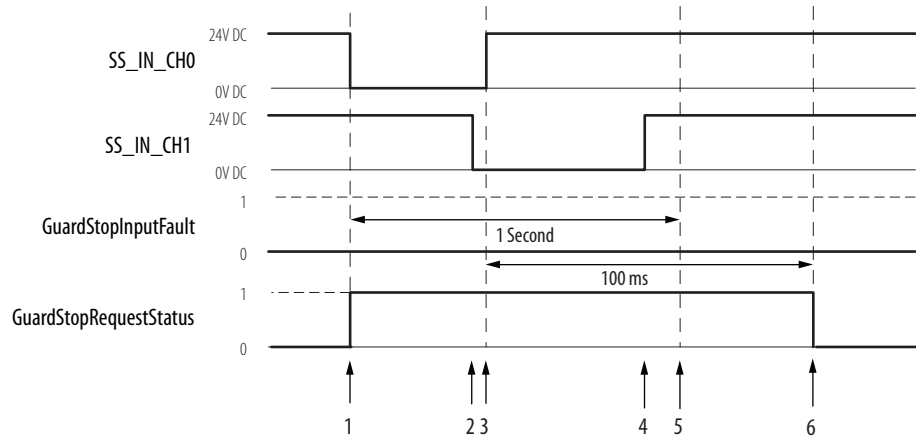

Event	Description
1	At least one input is switched-off. GuardStopRequestStatus bit is set to 1.
2	Second input is switched-off within 1 second. This event must always occur prior to Event 3 to prevent GuardStopInputFault.
3	First input is switched-on.
4	Second input is switched-on within 1 second of event 3.
5	Both inputs are in OFF state simultaneously within 1 second. As a result, GuardStopInputFault is not posted.
6	The GuardStopRequestStatus bit sets back to 0 if event 4 occurs within a 100 ms interval after event 3. If event 4 is outside of the 100 ms interval, but within the 1 second interval after event 3, then the GuardStopRequestStatus bit sets back to 0 after the 1 second interval following event 3 (not immediately following event 4).


## Troubleshoot the Safe Torque-off Function

**Table 71 - 2198-Hxxx-ERS Servo Drive Troubleshooting**

Exception Code on Drive Display	Exception Text	Problem	Possible Solutions
SAFE FLT 09 - SS IN	Guard Stop Input Fault	Safe torque-off function mismatch. The system does not allow motion. Safe torque-off mismatch is detected when safety inputs are in a different state for more than 1.0 second.	<ul style="list-style-type: none"> <li>Verify safety wiring and connections: <ul style="list-style-type: none"> <li>Wire terminations at safe torque-off (STO) connector</li> <li>Cable/header not seated correctly</li> <li>+24V power</li> </ul> </li> <li>Check state of safety inputs.</li> <li>Reset error and run proof test.</li> <li>If error persists, return the drive to Rockwell Automation.</li> </ul>


[Figure 71](#) demonstrates when the safe torque-off mismatch is detected and a GuardStopInputFault is posted.

**Figure 71 - System Operation in the Event that the Safety Enable Inputs Mismatch**

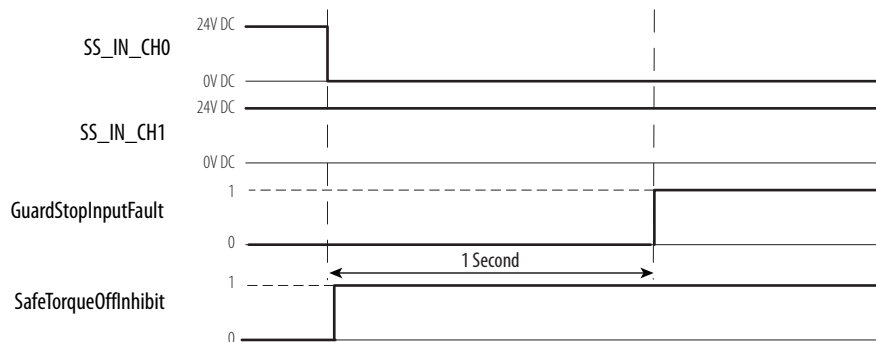

When one safety input is turned off, the second input must also be turned off, otherwise a fault is asserted (see [Figure 72](#)). The fault is asserted even if the first safety input is turned on again, without the second input transitioning to the ON state.

**Figure 72 - System Operation in the Event that the Safety Enable Inputs Mismatch Momentarily**

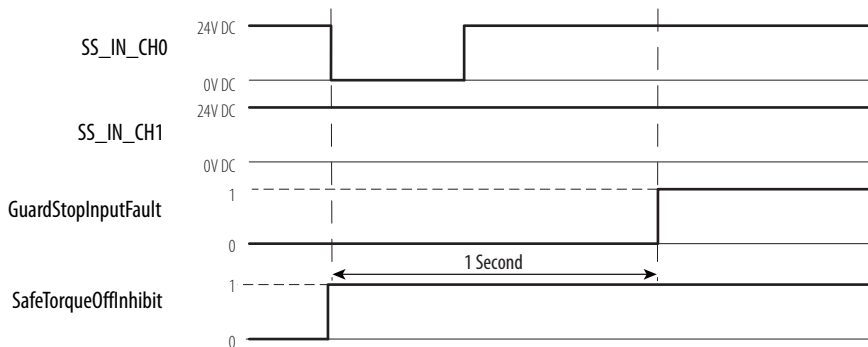

**ATTENTION:** The safe torque-off fault is detected upon demand of the safe torque-off function. After troubleshooting the STO function or performing maintenance that might affect the STO function, the STO function must be executed to verify correct operation.

#### IMPORTANT

The GuardStopInputFault can be reset only if both inputs are in the OFF-state for more than 1 second. After the fault reset requirement is satisfied, an MAFR command in the Logix Designer application must be issued to reset the GuardStopInputFault.

## Probability of Dangerous Failure Per Hour

Safety-related systems are classified as operating in a High-demand/continuous mode. The SIL value for a High-demand/continuous mode safety-related system is directly related to the probability of a dangerous failure occurring per hour (PFH).

PFH calculation is based on the equations from EN 61508 and show worst-case values. [Table 72](#) provides data for a 20-year proof test interval and demonstrates the worst-case effect of various configuration changes on the data.

### IMPORTANT

Determination of safety parameters is based on the assumptions that the system operates in High-demand mode and that the safety function is requested at least once every three months.


**Table 72 - PFH for 20-year Proof Test Interval**

Attribute	Value
PFH (1e-9)	0.35
Proof test (years)	20

## Safe Torque-off Connector Data

The 10-pin connector consists of two parallel 5-pin rows for cascading safety connections from drive-to-drive in multi-axis configurations.

**Figure 73 - Pin Orientation for 10-pin Safe Torque-off (STO) Connector**

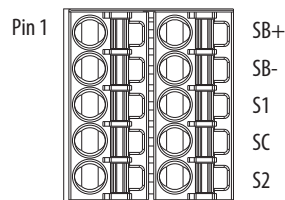

**Table 73 - Safe Torque-off (STO) Connector Pinouts**

STO Pin	Description	Signal
1	Safety bypass plus signal. Connect to both safety inputs to disable the STO function.	SB+
2	Safety bypass minus signal. Connect to safety common to disable the STO function.	SB-
3	STO input 1 (SS_IN_CH0).	S1
4	STO input common (SCOM).	SC
5	STO input 2 (SS_IN_CH1).	S2

## Wire the Safe Torque-off Circuit

This section provides guidelines for wiring your Kinetix 5500 safe torque-off drive connections.

**IMPORTANT** The National Electrical Code and local electrical codes take precedence over the values and methods provided.

**IMPORTANT** To improve system performance, run wires and cables in the wireways as established in [Establishing Noise Zones](#) beginning on [page 39](#).

**IMPORTANT** Pins STO-1 and STO-5 (SB+ and SB-) are used to disable the safe torque-off function. When wiring to the STO connector, use an external 24V supply for the external safety device that triggers the safe torque-off request. To avoid jeopardizing system performance, do not use pin STO-1 as a power supply for the external safety device.

### Safe Torque-off Wiring Requirements

The safe torque-off (STO) connector uses spring tension to secure the wire. Depress the tab, along side each pin, to insert or release the wire. Two rows of pins are provided for drive-to-drive connections. Wire must be copper with 75 °C (167 °F) minimum rating.

**IMPORTANT** Stranded wires must terminate with ferrules to prevent short circuits, per table D7 of EN ISO 13849-1.

Figure 74 - Safe Torque-off (STO) Terminal Plug

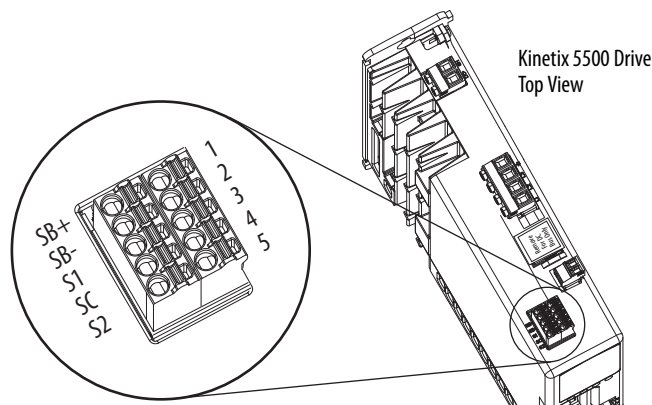


Table 74 - Safe Torque-off (STO) Terminal Plug Wiring

Safe Torque-off (STO) Connector		Recommended Wire Size mm <sup>2</sup> (AWG)	Strip Length mm (in.)	Torque Value N·m (lb·in)
Pin	Signal			
STO-1	SB+	0.2...1.5 (24...16)	10 (0.25)	N/A <sup>(1)</sup>
STO-2	SB-			
STO-3	S1			
STO-4	SC			
STO-5	S2			

(1) This connector uses spring tension to hold the wires in place.

## Safe Torque-off Feature

The safe torque-off circuit, when used with suitable safety components, provides protection according to EN ISO 13849-1 (PLd), Category 3 or according to IEC EN 61508, EN 61800-5-2, and EN 62061 (SIL CL2). All components in the system must be chosen and applied correctly to achieve the desired level of operator safeguarding.

The safe torque-off circuit is designed to safely turn off all of the output-power transistors. You can use the safe torque-off circuit in combination with other safety devices to achieve Stop Category 0 and protection-against-restart as specified in IEC 60204-1.



**ATTENTION:** This option is suitable only for performing mechanical work on the drive system or affected area of a machine. It does not provide electrical safety.



**SHOCK HAZARD:** In Safe Torque-off mode, hazardous voltages can still be present at the drive. To avoid an electric shock hazard, disconnect power to the system and verify that the voltage is zero before performing any work on the drive.




**ATTENTION:** Personnel responsible for the application of safety-related programmable electronic systems (PES) shall be aware of the safety requirements in the application of the system and shall be trained in using the system.

## Safe Torque-off Feature Bypass

The 2198-Hxxx-ERS drives do not operate without a safety circuit or safety bypass wiring. For applications that do not require the safe torque-off feature you must install jumper wires to bypass the safe torque-off circuitry.

Each 2198-Hxxx-ERS drive includes one 10-pin wiring plug for wiring to safety devices. To bypass the safety function, wire these signals as shown in [Figure 75](#). With the jumper wires installed, the safe-off feature is not used.


**Figure 75 - Safe Torque-off Bypass Wiring**

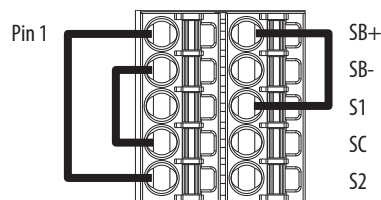

### Cascade the Safe Torque-off Signal

The total number of drives in a single cascaded safety circuit is limited by the current carrying capacity of the cascaded safety wiring. Refer to [Table 75](#) for current rating per channel, per drive.

Figure 76 - Cascaded Safe Torque-off Wiring

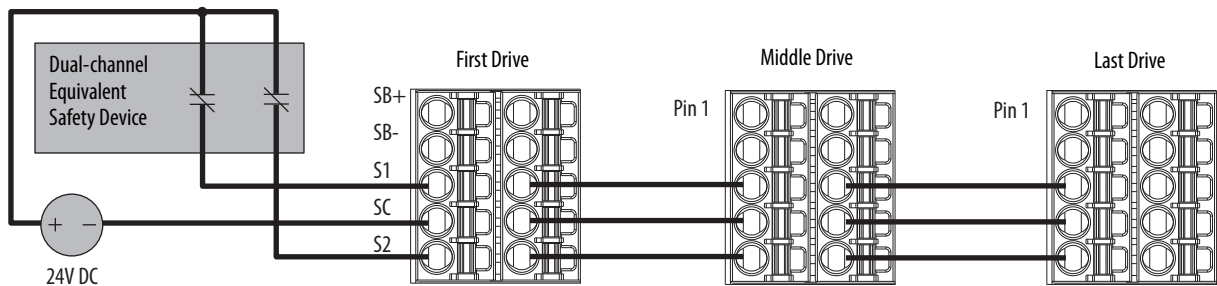

### Safe Torque-off Specifications

To maintain safety rating, Kinetix 5500 drives must be installed inside protected control panels or cabinets appropriate for the environmental conditions of the industrial location. The protection class of the panel or cabinet must be IP54 or higher.

Table 75 - Safe Torque-off Signal Specifications

Attribute		Value
Safety inputs (per channel)	Input current	< 10 mA
	Input ON voltage range	18...26.4V DC
	Input OFF voltage, max	5V DC
	Input ON current, per input, max	10 mA, each drive <sup>(1)</sup>
	Input OFF current, max (@ V in < 5V DC)	2 mA
	Pulse rejection width	700 μs
	External power supply	SELV/PELV
	Input type	Optically isolated and reverse voltage protected

(1) The maximum number of drives cascaded with safe torque-off wiring is 50.

For additional information regarding Allen-Bradley safety products, including safety relays, light curtain, and gate interlock applications, refer to the Safety Products Catalog, website <http://www.ab.com/catalogs>.

## Kinetix 5500 Safe Torque-off - Integrated Safety

The 2198-Hxxx-ERS2 servo drives are equipped for integrated safe torque-off (STO). The integrated STO function meets the requirements of Performance Level e (PLe) and safety category 3 (CAT 3) per EN ISO 13849-1 and SIL 3 per IEC EN 61508, EN 61800-5-2 and EN 62061.

With integrated safety, the GuardLogix 5570 or Compact GuardLogix 5570 safety controller issues the safe torque-off (STO) command over the EtherNet/IP network and the 2198-Hxxx-ERS2 servo drive executes the STO command.

Topic	Page
Certification	177
Description of Operation	179
Probability of Dangerous Failure Per Hour	181
Safe Torque-off Feature	181
Out-of-Box State	182
Understanding Integrated Safety Drive Replacement	183
Replacing an Integrated Safety Drive in a GuardLogix System	184
Motion Direct Commands in Motion Control Systems	191
Safe Torque-off Specifications	197
Safe Torque-off Specifications	197

### Certification

The TÜV Rheinland group has approved the 2198-Hxxx-ERS2 servo drives with integrated safe torque-off for use in safety-related applications up to PLe, Category 3 according to EN ISO 13849 and SIL CL3 according to IEC 61508, EN 61800-5-2, and EN 62061, in which removing the motion producing power is considered to be the safe state.

Refer to Appendix E on [page 261](#) for these certification documents.

- EC Type - Examination Certificate
- EC Declaration of Conformity
- European Union Directives

## Important Safety Considerations

The system user is responsible for the following:

- Validation of any sensors or actuators connected to the system
- Completing a machine-level risk assessment
- Certification of the machine to the desired EN ISO 13849-1 performance level or EN 62061 SIL level
- Project management and proof testing performed in accordance with EN ISO 13849

## Safety Application Requirements

Safety application requirements include evaluating probability of failure rates (PFH), system reaction time settings, and functional verification tests that fulfill SIL 3 criteria. Refer to [Probability of Dangerous Failure Per Hour](#) on [page 181](#) for more PFH information.

Creating, recording, and verifying the safety signature is also a required part of the safety application development process. Safety signatures are created by the safety controller. The safety signature consists of an identification number, date, and time that uniquely identifies the safety portion of a project. This includes all safety logic, data, and safety I/O configuration.

For safety system requirements, including information on the safety network number (SNN), verifying the safety signature, and functional verification tests refer to the GuardLogix 5570 Controller Systems Safety Reference Manual, publication [1756-RM099](#).

---

**IMPORTANT**

You must read, understand, and fulfill the requirements detailed in publication [1756-RM099](#) prior to operating a safety system that uses a GuardLogix controller and 2198-Hxxx-ERS2 servo drive.

---

## Category 3 Requirements According to ISO 13849

Safety-related parts are designed with these attributes:

- A single fault in any of these parts does not lead to the loss of the safety function.
- A single fault is detected whenever reasonably practicable.
- Accumulation of undetected faults can lead to the loss of the safety function and a failure to remove motion producing power from the motor.



## Stop Category Definition

Stop Category 0 as defined in EN 60204 or safe torque-off as defined by EN 61800-5-2 is achieved with immediate removal of motion producing power to the actuator.

---

**IMPORTANT** In the event of a malfunction, the most likely stop category is Stop Category 0. When designing the machine application, timing and distance must be considered for a coast to stop. For more information regarding stop categories, refer to EN 60204-1.

---

## Performance Level (PL) and Safety Integrity Level (SIL)

For safety-related control systems, Performance Level (PL), according to EN ISO 13849-1, and SIL levels, according to EN 61508 and EN 62061, include a rating of the systems ability to perform its safety functions. All of the safety-related components of the control system must be included in both a risk assessment and the determination of the achieved levels.

Refer to the EN ISO 13849-1, EN 61508, and EN 62061 standards for complete information on requirements for PL and SIL determination.

## Description of Operation

The safe torque-off (STO) feature provides a method, with sufficiently low probability of failure, to force the power-transistor control signals to a disabled state. When the command to execute the STO function is received from the GuardLogix controller, all of the drive output-power transistors are released from the ON-state. This results in a condition where the drive is coasting. Disabling the power transistor output does not provide mechanical isolation of the electrical output that is required for some applications.

The 2198-Hxxx-ERS2 drive STO function response time is less than 10 ms. Response time is the delay between the time the drive STO function receives the integrated safety packet with an STO request and the time when motion producing power is removed from the motor.

## STO State Reset

The 2198-Hxxx-ERS2 servo drives support both manual and automatic restart types for exiting the STO state.


- Manual restart indicates a transition from 0 to 1 on the SO.Reset tag is required to allow torque after the SO.SafeTorqueOff tag has transitioned from 0 to 1.
- Automatic restart indicates torque will be allowed only by transitioning the SO.SafeTorqueOff tag from 0 to 1. The SO.Reset tag is used only for resetting safety faults.

**IMPORTANT**

2198-Hxxx-ERS2 servo drives enter the STO state if any STO function fault is detected. Refer to [Table 76](#) for integrated safety troubleshooting.

Refer to [Figure 77](#) for an understanding of the 2198-Hxxx-ERS2 STO-state manual restart functionality.

**Figure 77 - Kinetix 5500 STO Timing Diagram - Manual Restart**

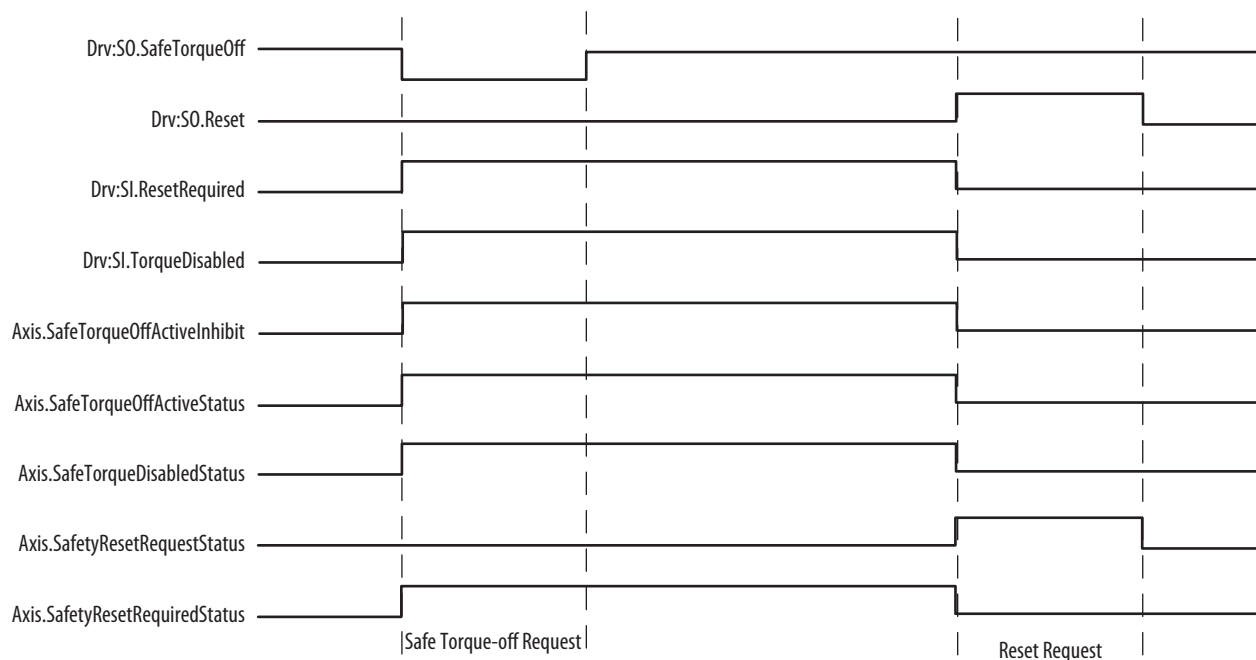

## Troubleshoot the Safe Torque-off Function

**Table 76 - 2198-Hxxx-ERS2 Servo Drive Troubleshooting**

Exception Code on Drive Display	Exception Text	Problem	Possible Solutions
SAFE FLT S01- Safety Core Internal	Safety Core Internal	Drive safety diagnostic detected internal STO design failure.	<ul style="list-style-type: none"> <li>• Cycle control power</li> <li>• Return drive for repair if fault continues</li> </ul>
SAFE FLT S03- Safe Torque Off	Safe Torque Off	Drive safety diagnostic detected internal STO design failure.	<ul style="list-style-type: none"> <li>• Cycle control power</li> <li>• Execute STO function</li> <li>• Return drive for repair if fault continues</li> </ul>
INIT FLT M14 - Safety Firmware	Safety Firmware	The loaded Safety firmware is not compatible with the drive firmware.	<ul style="list-style-type: none"> <li>• Cycle control power</li> <li>• Update the drive firmware</li> <li>• Return drive for repair if fault continues</li> </ul>

## Probability of Dangerous Failure Per Hour

Safety-related systems are classified as operating in a High-demand/continuous mode. The SIL value for a High-demand/continuous mode safety-related system is directly related to the probability of a dangerous failure occurring per hour (PFH).

PFH calculation is based on the equations from EN 61508 and show worst-case values. [Table 77](#) provides data for a 20-year proof test interval and demonstrates the worst-case effect of various configuration changes on the data.

### IMPORTANT

Determination of safety parameters is based on the assumptions that the system operates in High-demand mode and that the safety function is requested at least once every three months.

**Table 77 - PFH for 20-year Proof Test Interval**

Attribute	Value
PFH (1e-9)	1.54
Proof test (years)	20

## Safe Torque-off Feature

The safe torque-off feature, when used with suitable safety components, provides protection according to EN ISO 13849-1 (PL<sub>e</sub>), Category 3 or according to IEC 61508, EN 61800-5-2, and EN 62061 (SIL CL3). All components in the system must be chosen and applied correctly to achieve the desired level of operator safeguarding.

The safe torque-off feature is designed to safely turn off all of the output power transistors. You can use the safe torque-off feature in combination with other safety devices to achieve Stop Category 0 and protection-against-restart as specified in IEC 60204-1.



**ATTENTION:** This option is designed to restrict motion producing power on the drive system or affected area of a machine. It does not provide electrical safety.



**SHOCK HAZARD:** In Safe Torque-off mode, hazardous voltages can still be present at the drive. To avoid an electric shock hazard, disconnect power to the system and verify that the voltage is zero before performing any work on the drive.



**ATTENTION:** Personnel responsible for the application of safety-related programmable electronic systems (PES) shall be aware of the safety requirements in the application of the system and shall be trained in using the system.

## Out-of-Box State

The 2198-Hxxx-ERS2 servo drives ship in the out-of-box state.



**ATTENTION:** In the out-of-box state, motion producing power is allowed by the safe torque-off (STO) function unless an integrated safety connection configuration has been applied to the drive at least once.

In the out-of-box state, you can configure 2198-Hxxx-ERS2 servo drives:


- Without a GuardLogix 5570 safety controller for a non-safety application.
- With a GuardLogix 5570 safety controller when the safe torque-off (STO) function is not required.

## Out-of-Box State Support

After the integrated safety connection configuration is applied to the 2198-Hxxx-ERS2 servo drive at least once, you can restore the drive to the out-of-box state.


Follow these steps to restore your 2198-Hxxx-ERS2 servo drive to the out-of-box state.

1. Right-click the 2198-Hxxx-ERS2 servo drive you created and choose Properties.

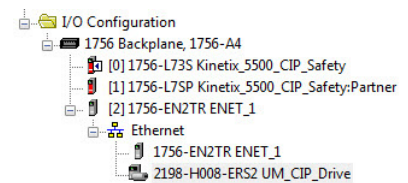


2. Click the Connection tab.

The Connection tab appears.

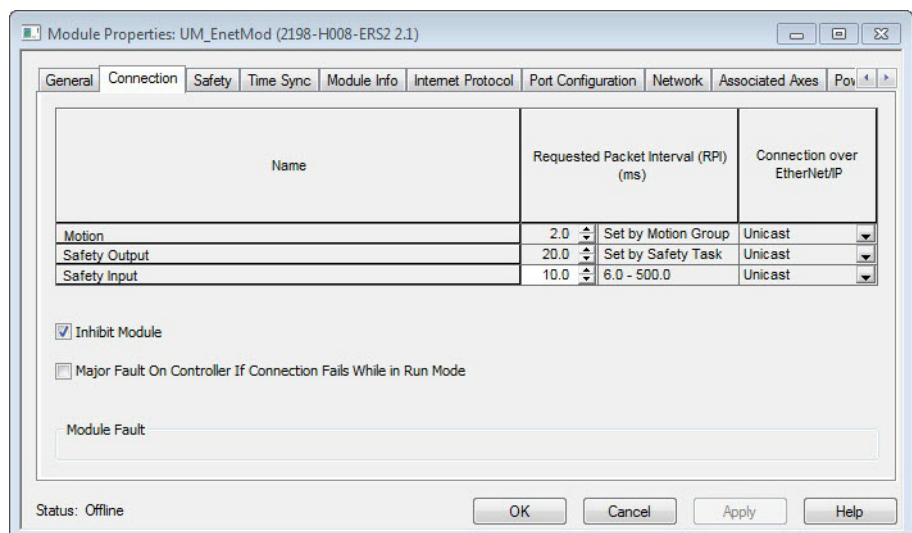

3. Check Inhibit Module.
4. Click Apply and click the Safety tab.

The Safety tab appears.

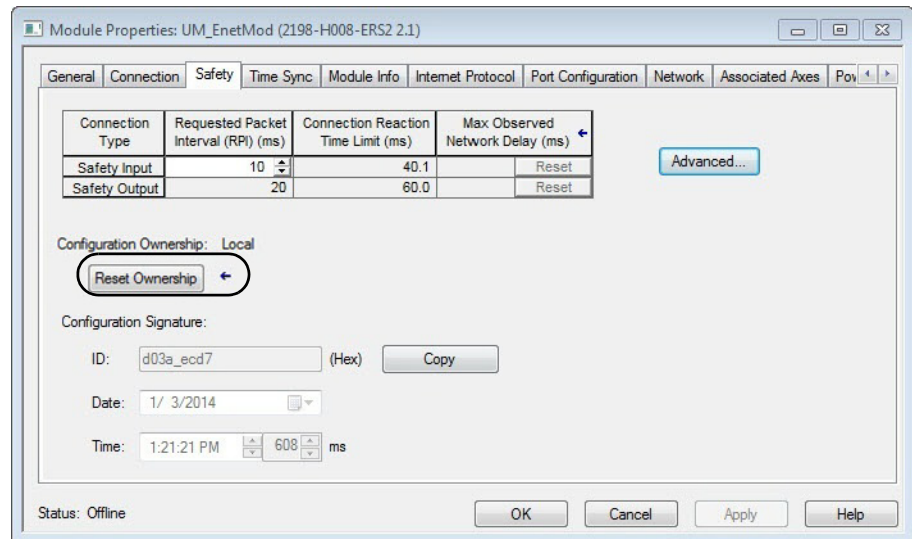

- In the Configuration Ownership field, click Reset Ownership.

---

**IMPORTANT** Only authorized personnel should attempt Reset Ownership.

---

If any active connection is detected, the reset is rejected.

- Cycle drive power.

The drive is in the out-of-box state.

---

**IMPORTANT** If power to the drive is not cycled after [Step 5](#), the drive does not transition to the out-of-box state and maintains STO function.

---



---

**IMPORTANT** When the drive returns to the out-of-box state, STO safety integrity is lost.

---

## Understanding Integrated Safety Drive Replacement

GuardLogix controllers retain I/O device configuration on-board and are able to download the configuration to the replacement device.

---

**IMPORTANT** If a 2198-Hxxx-ERS2 servo drive was used previously, clear the existing configuration before installing it on a safety network by resetting the drive to its out-of-box condition. To see how this is done, refer to [Out-of-Box State Support](#) on [page 182](#).

---

Replacing a 2198-Hxxx-ERS2 servo drive that sits on an integrated safety network is more complicated than replacing standard devices because of the safety network number (SNN). The device number and SNN make up the safety device's DeviceID. Safety devices require this more complex identifier to make sure that duplicate device numbers do not compromise communication between

the correct safety devices. The SNN is also used to provide integrity on the initial download to the 2198-Hxxx-ERS2 servo drive.

When the Logix Designer application is online, the Safety tab of the Module Properties dialog box displays the current configuration ownership. When the opened project owns the configuration, Local is displayed.

Configuration Ownership: Local

Communication error is displayed if the module read fails. Refer to [Replacing an Integrated Safety Drive in a GuardLogix System](#) on [page 184](#) for integrated safety drive replacement examples.


## Replacing an Integrated Safety Drive in a GuardLogix System

Use the Configure Always feature when you are not relying on the entire routable integrated safety control system to maintain PLe/SIL 3 behavior during the replacement and functional testing of a 2198-Hxxx-ERS2 servo drive. Drive replacement is configured on the Safety tab of the GuardLogix controller.

### IMPORTANT

If you are relying on a portion of the integrated safety system to maintain SIL 3 behavior during drive replacement and functional testing, do not use the Configure Always feature.

**Figure 78 - Setting the SNN with a GuardLogix Controller**

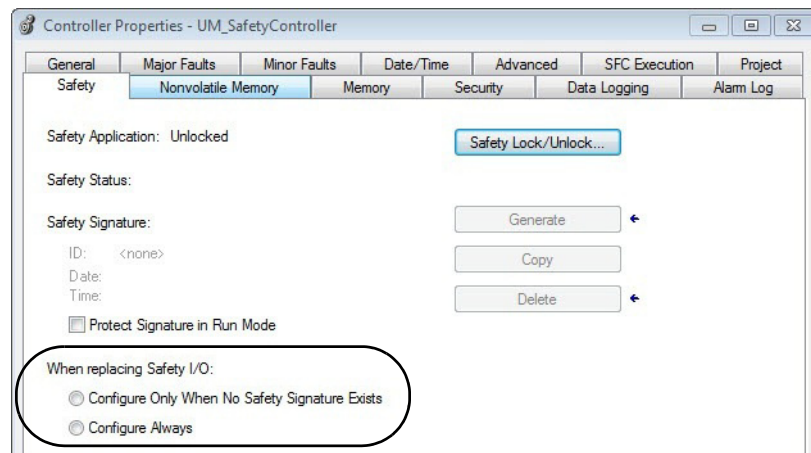

## Replacement with Configure Only When No Safety Signature Exists Enabled

When a 2198-Hxxx-ERS2 servo drive is replaced and the DeviceID of the new drive matches the original, you can download the configuration from the safety controller. The DeviceID is a combination of the node/IP address and the safety network number (SNN), and is updated whenever the SNN is set.

If the project is configured as Configure Only When No Safety Signature Exists, follow the appropriate instructions in [Table 78](#) to replace a 2198-Hxxx-ERS2 drive based on your scenario. Once you have completed the steps correctly and the DeviceID matches the original, the safety controller is enabled to download the proper drive configuration and re-establish the safety connection.


**Table 78 - Replacing a 2198-Hxxx-ERS2 Servo Drive**


GuardLogix Safety Signature Exists	Replacement Module Condition	Action Required
No	No SNN (out-of-box)	None. The module is ready for use.
Yes or No	Same SNN as original safety task configuration	
Yes	No SNN (out-of-box)	Refer to Scenario 1 on <a href="#">page 185</a> .
Yes	Different SNN than original safety task configuration	Refer to Scenario 2 on <a href="#">page 187</a> .
No		Refer to Scenario 3 on <a href="#">page 189</a> .

### Scenario 1 - Replacement Integrated Safety Drive Is Out-of-box and Safety Signature Exists

1. Remove and replace the existing integrated safety drive.
2. Right-click the replacement drive and choose Properties.

The General tab appears in Module Properties dialog box.

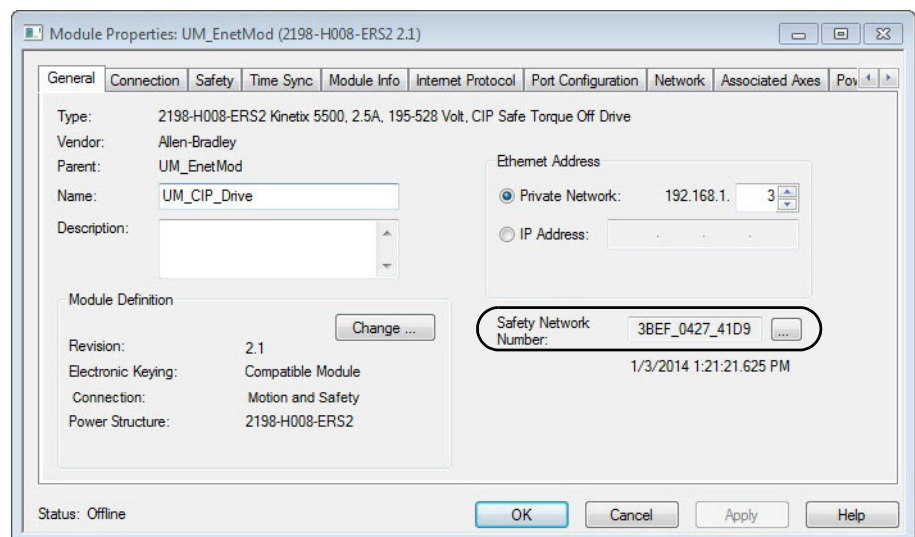


3. Click  to the right of the safety network number.

The Safety Network Number dialog box appears.



4. Click Set.
5. Verify that the Network Status (NET) status indicator is alternating red/green on the correct drive.

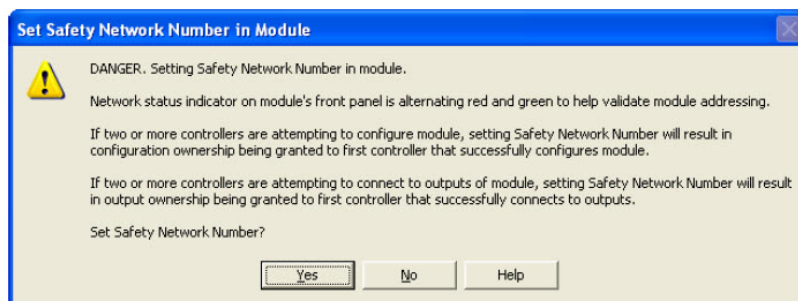

6. Click Yes to set the SNN and accept the replacement drive.

---

**IMPORTANT**


Follow your company-prescribed procedures to functionally test the replacement drive and system and to authorize the system for use.

---




### *Scenario 2- Replacement Integrated Safety Drive SNN Is Different from Original and Safety Signature Exists*

1. Remove and replace the existing integrated safety drive.
2. Right-click the replacement drive and choose Properties.
3. Click the Safety tab.

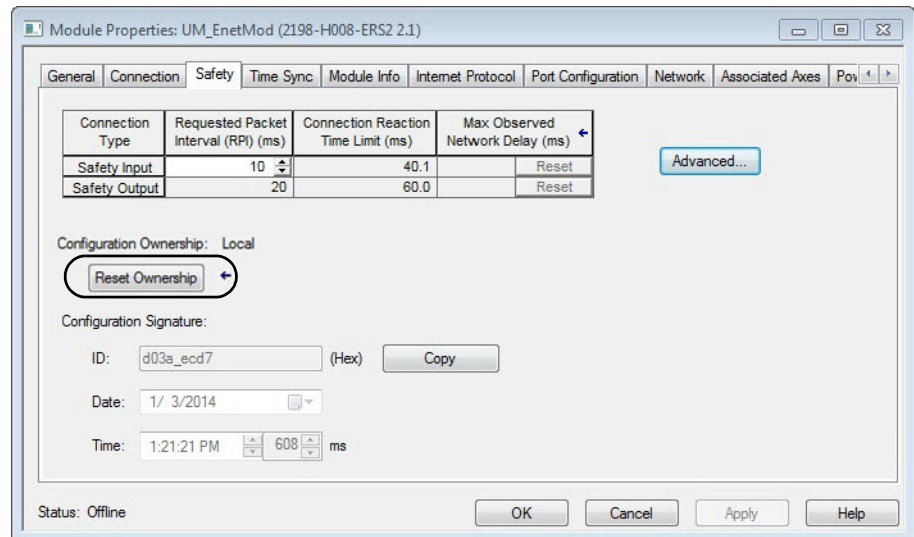

4. Click Reset Ownership.
5. Click OK.
6. Right-click the replacement drive and choose Properties.

The General tab appears in Module Properties dialog box.

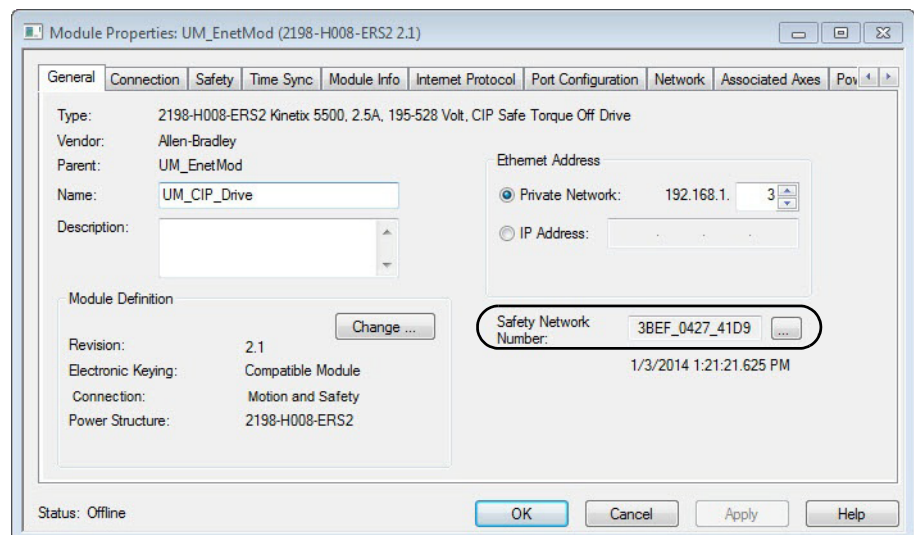


7. Click [...] to the right of the safety network number.

The Safety Network Number dialog box appears.



8. Click Set.
9. Verify that the Network Status (NET) status indicator is alternating red/green on the correct drive.

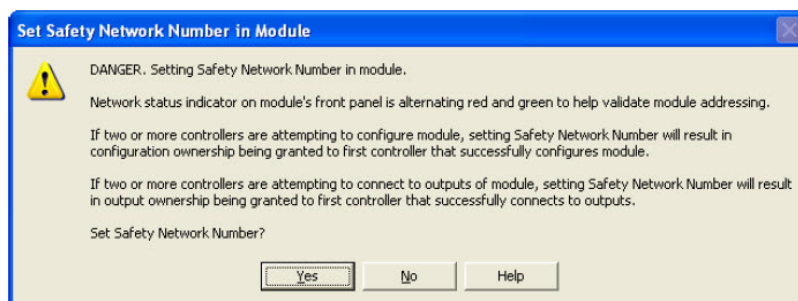

---


**IMPORTANT**

Follow your company-prescribed procedures to functionally test the replacement drive and system and to authorize the system for use.

---

### Scenario 3- Replacement Integrated Safety Drive SNN Is Different from Original and No Safety Signature Exists

1. Remove and replace the existing integrated safety drive.
2. Right-click the replacement drive and choose Properties.
3. Click the Safety tab.

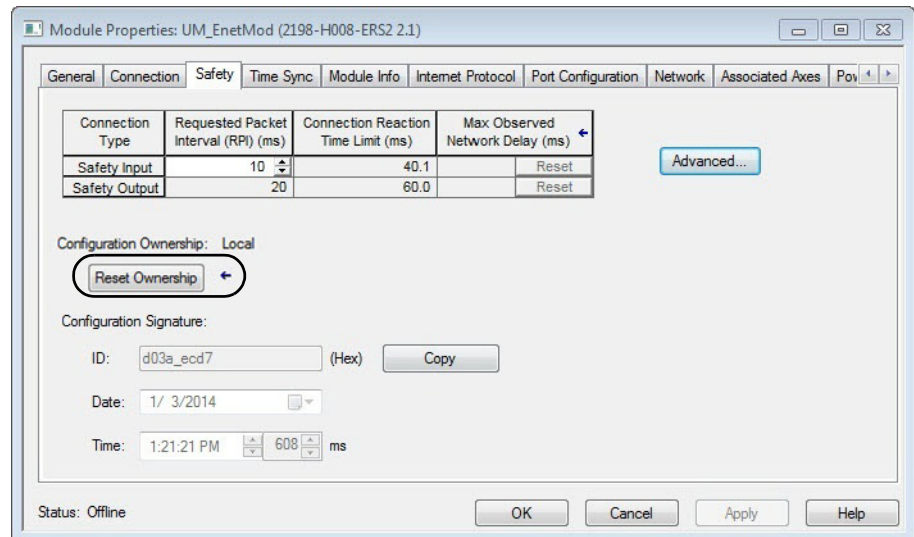

4. Click Reset Ownership.
5. Click OK.

#### IMPORTANT

Follow your company-prescribed procedures to functionally test the replacement drive and system and to authorize the system for use.

### Replacement with Configure Always Enabled



**ATTENTION:** Enable the Configure Always feature only if the entire integrated safety control system is not being relied on to maintain SIL 3 behavior during the replacement and functional testing of a 2198-Hxxx-ERS2 servo drive. Do not place drives that are in the out-of-box condition on an integrated safety network when the Configure Always feature is enabled, except while following this replacement procedure.

When the Configure Always feature is enabled, the controller automatically checks for and connects to a replacement drive that meets all of the following requirements:

- The controller has configuration data for a compatible drive at that network address
- The drive is in out-of-box condition or has an SNN that matches the configuration


If the project is configured for Configure Always, follow the appropriate steps to replace a 2198-Hxxx-ERS2 servo drive.

Follow these steps when the Configure Always feature is enabled.

1. Remove and replace the existing integrated safety drive.

If	Then
The drive is in out-of-box condition	Go to <a href="#">step</a> . No action is needed for the GuardLogix controller to take ownership of the drive.
An SNN mismatch error occurs	Go to the next step to reset the drive to out-of-box condition.

2. Right-click the replacement drive and choose Properties.
3. Click the Safety tab.

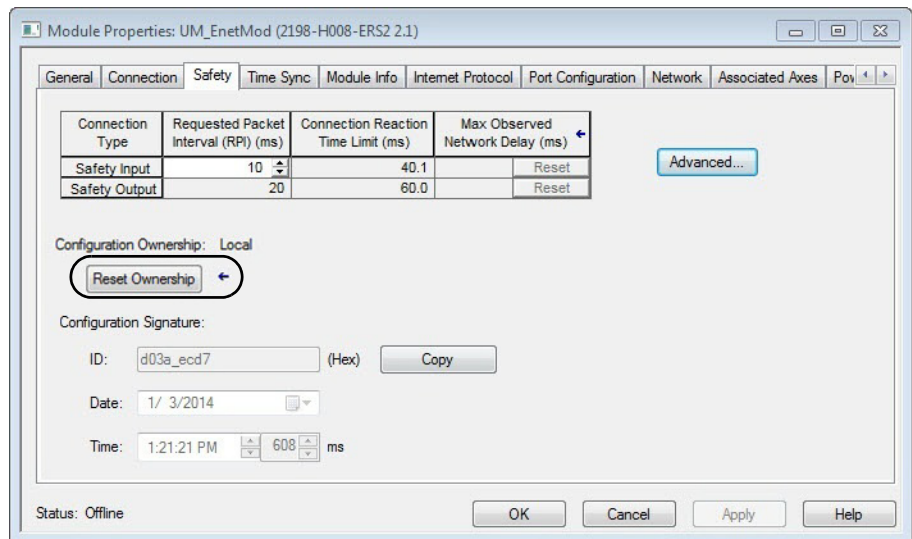

4. Click Reset Ownership.
5. Click OK.

### IMPORTANT

Follow your company-prescribed procedures to functionally test the replacement drive and system and to authorize the system for use.

## Motion Direct Commands in Motion Control Systems

You can use the Motion Direct Command (MDC) feature to initiate motion while the controller is in Program mode, independent of application code that is executed in Run mode. These commands let you do a variety of functions, for example, move an axis, jog an axis, or home an axis.

A typical use might involve a machine integrator testing different parts of the motion system while the machine is being commissioned or a maintenance engineer, under certain restricted scenarios in accordance with safe machine operating procedures, wanting to move an axis (like a conveyor) to clear a jam before resuming normal operation.



**ATTENTION:** To avoid personal injury or damage to equipment, follow these rules regarding Run mode and Program mode.

- Only authorized, trained personnel with knowledge of safe machine operation should be allowed to use Motion Direct Commands
- Additional supervisory methods, like removing the controller key switch, should be used to maintain the safety integrity of the system after returning the safety controller to RUN mode

## Understanding STO Bypass When Using Motion Direct Commands

If a Safety-only connection between the GuardLogix safety controller and the 2198-Hxxx-ERS2 servo drive was established at least once after the drive was received from the factory, the drive does not allow motion while the safety controller is in Program mode by default.

This is because the safety task is not executed while the GuardLogix safety controller is in Program mode. This applies to applications running in a single-safety controller (with Motion and Safety connections). When an integrated safety drive has a Motion connection to a standard controller and a separate Safety connection to a dual-safety controller, the standard controller can transition to Program mode while the safety controller stays in Run mode and continues to execute the safety task.

However, 2198-Hxxx-ERS2 drive systems are designed with a bypass feature for the STO function in single-safety controller configurations. You can use the MDC feature to allow motion while following all the necessary and prescribed steps per machine safety operating procedures.




**ATTENTION:** Consider the consequences of allowing motion through the use of MDC when the controller is in Program mode. You must acknowledge warning messages in the Logix Designer application that warn of the drive bypassing the STO function and unintended motion can occur. The integrated safety drive does not respond to the request of STO function if MDC mode is entered.

**ATTENTION:** It is your responsibility to maintain machine safety integrity while executing motion direct commands. One alternative is to provide ladder logic for Machine Maintenance mode that leaves the controller in Run mode with safety functions executing.

## Logix Designer Application Warning Messages


When the controller is in Run mode, executing safety functions, the 2198-Hxxx-ERS2 drive follows the commands that it receives from the safety controller. Safety state = Running, Axis state = Stopped/Running, as shown in [Figure 79](#).

Figure 79 - Safety State Indications When Controller is in Run Mode (safety task executing)

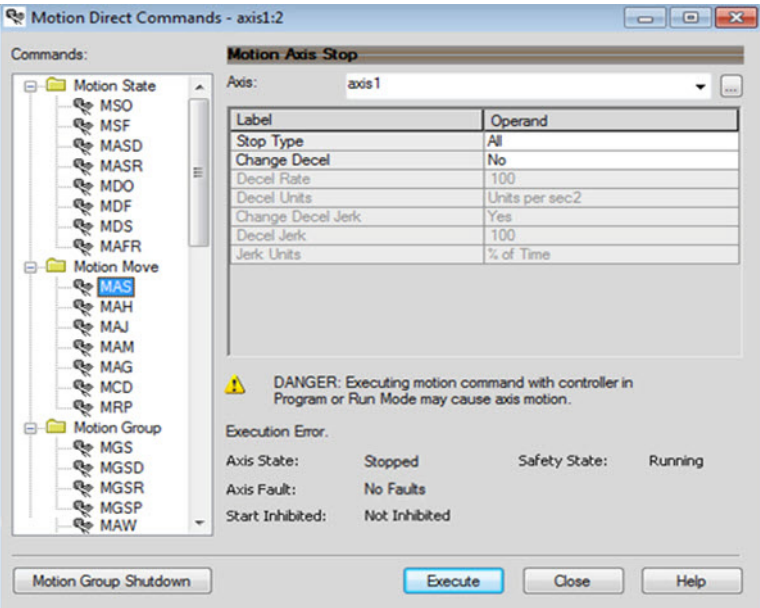


When the controller transitions to Program mode, the integrated safety drive is in the safe state (torque not permitted). Safety state = Not Running, Axis state = Start Inhibited, as shown in [Figure 80](#).

Figure 80 - Safety State Indications After Controller Transitions to Program Mode

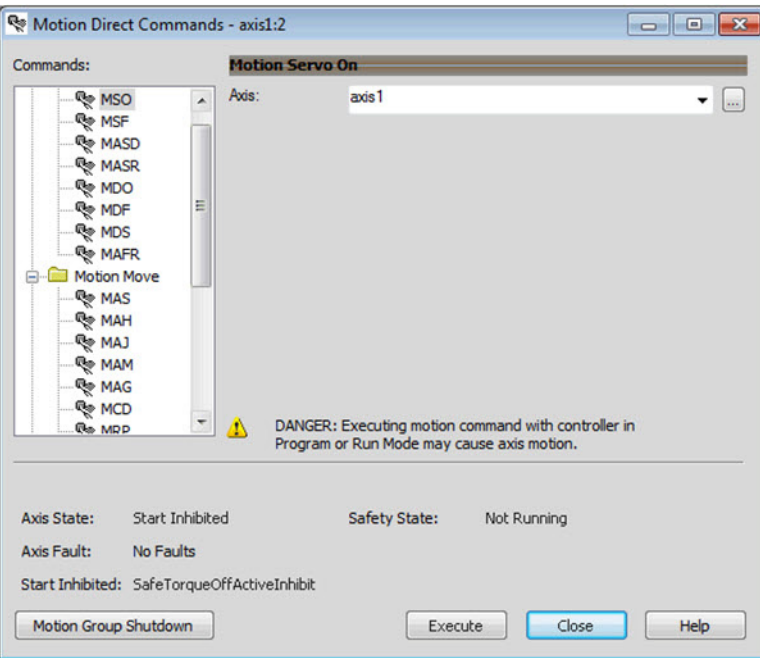

When you issue a motion direct command to an axis to produce torque in Program mode, for example MSO or MDS, with the safety connection present to the drive, a warning message is presented before the motion direct command is executed, as shown in [Figure 81](#).

**Figure 81 - STO Bypass Prompt When the Safety Controller is in Program Mode**

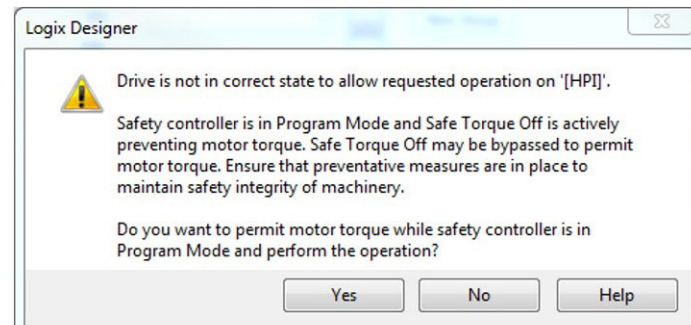


The warning in [Figure 81](#) is displayed the first time a motion direct command is issued.

After you acknowledge the warning message by clicking Yes, torque is permitted by the drive and a warning message is indicated in the software as shown in [Figure 82](#). Safety state = Not Running (torque permitted), Axis state = Stopped/Running, Persistent Warning = Safe Torque Off Bypassed.

### IMPORTANT

Switch the controller to Run mode to exit Motion Direct Command mode with STO function bypassed.

**Figure 82 - Safety State Indications After Controller Transitions to Program Mode (MDC executing)**

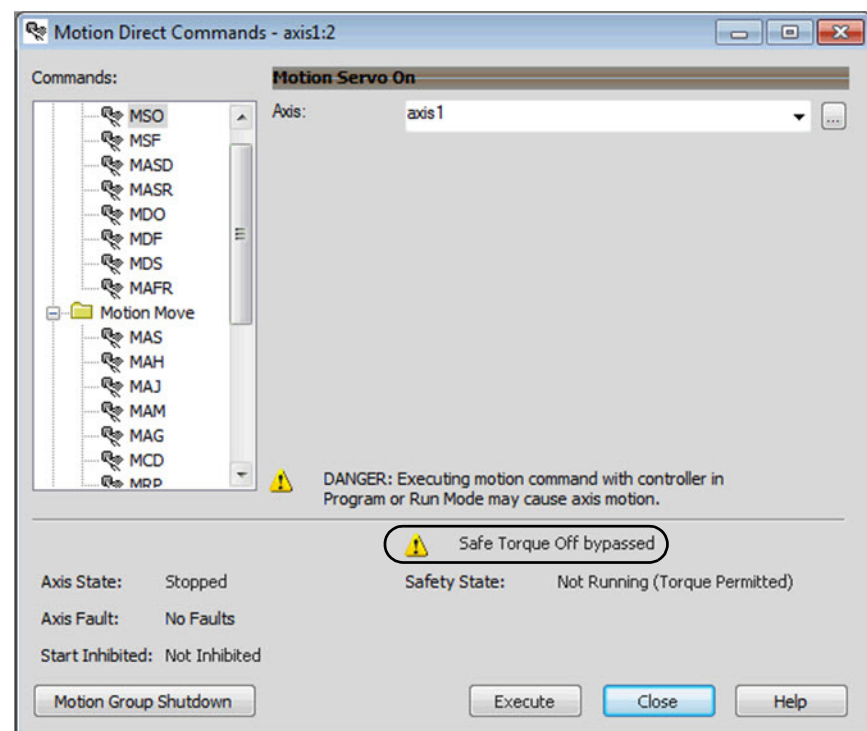



**IMPORTANT**

The persistent warning message text Safe Torque Off bypassed appears when a motion direct command is executed.


Warning message persists even after the dialog is closed and reopened as long as the integrated safety drive is in STO Bypass mode.

The persistent warning message is removed only after the integrated safety drive is restored to the Safe state.

## Torque Permitted in a Multi-workstation Environment

The warning in [Figure 83](#) is displayed to notify a second user working in a multi-workstation environment that the first user has placed the integrated safety drive in the STO state and that the current action is about to bypass the STO state and permit torque.

**Figure 83 - STO Bypass Prompt When MDC is Issued in Multi-workstation Environment**

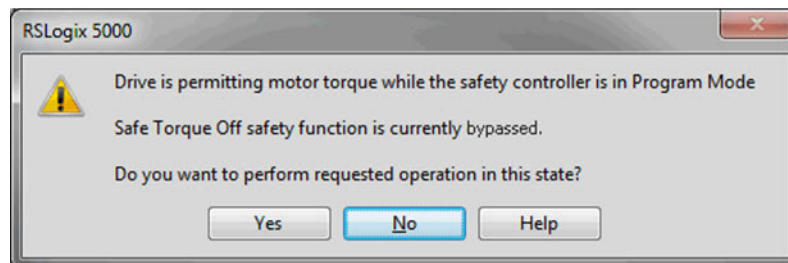

## Warning Icon and Text in Axis Properties

In addition to the other warnings that require your acknowledgement, the Logix Designer application also provides warning icons and persistent warning messages in other Axis Properties dialog boxes when the integrated safety drive is in STO Bypass mode.

**Figure 84 - Axis and Safe State Indications on the Hookup Services Dialog Box**






Figure 85 - Axis and Safe State Indications on Motion Direct Commands Dialog Box


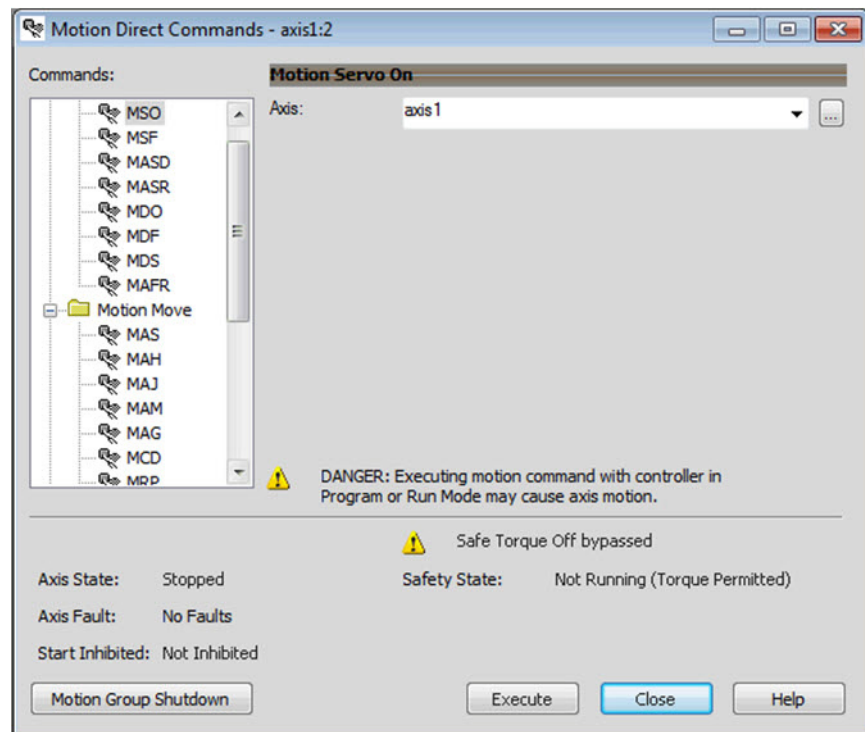


Figure 86 - Axis and Safe State Indications on the Motion Console Dialog Box



## Functional Safety Considerations

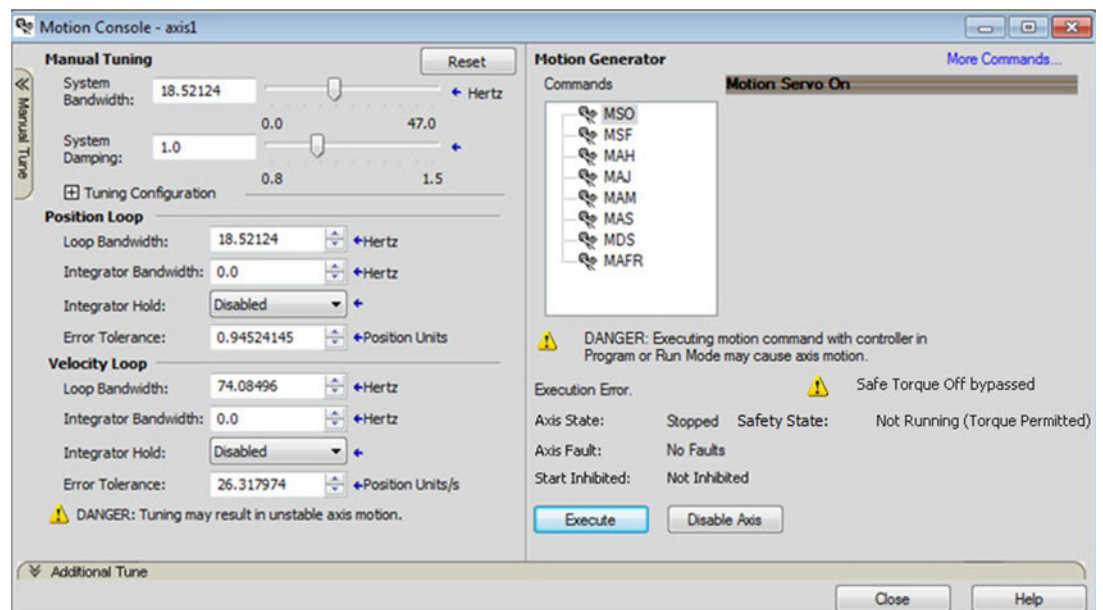

**ATTENTION:** Before maintenance work can be performed in Program mode, the developer of the application must consider the implications of allowing motion through motion direct commands and should consider developing logic for run-time maintenance operations to meet the requirements of machine safety operating procedures.

---



**ATTENTION:** Motion is allowed when motion direct commands are used in Program mode and STO function is not available. Motion direct commands issued when the controller is in Program mode causes the drive to bypass the STO Active condition. It is your responsibility to implement additional preventive measures to maintain safety integrity of the machinery during execution of motion direct commands in Program mode.

---



**ATTENTION:** To avoid personal injury and damage to equipment in the event of unauthorized access or unexpected motion during authorized access, return the controller to RUN mode and remove the key before leaving the machine unattended.

---

## Safe Torque-off Specifications

To maintain safety rating, Kinetix 5500 drives must be installed inside protected control panels or cabinets appropriate for the environmental conditions of the industrial location. The protection class of the panel or cabinet must be IP54 or higher.

**Table 79 - Safe Torque-off Network Specifications**

Attribute	Value	Logix Designer Tag Name
Safety connection RPI, min	6 ms	N/A
Input assembly connections	3	N/A
Output assembly connections	1	N/A
Integrated safety open request support	Type 1 and Type 2 requests	N/A
Axis safety status	Bit 0: Safety fault	Axis.SafetyFaultStatus
	Bit 1: Safety reset request	Axis.SafetyResetRequestStatus
	Bit 2: Safety Reset Required	Axis.SafetyResetRequiredStatus
	Bit 3: Safe torque-off active	Axis.SafeTorqueOffActiveStatus
	Bit 4: Safe torque disabled	Axis.SafeTorqueDisabledStatus
	Bit 5...31: Undefined (0)	N/A
Axis safety faults	Bit 1: Safety core fault	Axis.SafetyCoreFault
	Bit 3: Safe torque-off fault	Axis.SafeTorqueOffFault
	All others: Undefined (0)	N/A

**Table 80 - Safe Torque-off Assembly Specifications**

Attribute	Instance Attribute	Value	Logix Designer Tag Name
Safety input assembly	0X1A0	Bit 0: Torque disabled	Drv:SI.TorqueDisabled
		Bit 6: Safety fault	Drv:SI.SafetyFault
		Bit 7: Reset required	Drv:SI.ResetRequired
Safety output assembly	0X180	Bit 0: Safe torque-off output	Drv:SO.SafeTorqueOff
		Bit 7: Reset request	Drv:SO.Reset

## **Notes:**


## Interconnect Diagrams

This appendix provides wiring examples and system block diagrams for your Kinetix 5500 system components.

Topic	Page
Interconnect Diagram Notes	199
Power Wiring Examples	200
Bus-sharing Wiring Examples	202
Shunt Resistor Wiring Example	204
Kinetix 5500 Drive and Motor/Actuator Wiring Examples	205
System Block Diagrams	210

### Interconnect Diagram Notes

This appendix provides wiring examples to assist you in wiring the Kinetix 5500 drive system. These notes apply to the wiring examples on the pages that follow.


Note	Information
1	For power wiring specifications, refer to <a href="#">Wiring Requirements</a> on <a href="#">page 78</a> .
2	For input fuse and circuit breaker sizes, refer to Circuit Breaker/Fuse Selection on <a href="#">page 31</a> .
3	AC (EMC) line filter is required for EMC compliance. Place line filter as close to the drive as possible and do not route very dirty wires in wireway. If routing in wireway is unavoidable, use shielded cable with shields grounded to the drive chassis and filter case. For AC line filter specifications, refer to Kinetix Servo Drives Specifications Technical Data, publication <a href="#">GMC-TD003</a> .
4	Terminal block is required to make connections.
5	Cable shield clamp must be used to meet CE requirements.
6	PE ground connection bonded to the panel must be used to meet CE requirements.
7	DC connector covered with protective knockout is default configuration. Remove knockout to insert DC bus T-connector and bus-bars. Do not attach discrete wiring to the DC bus terminals is.
8	Internal shunt wired to the RC connector is default configuration. Remove internal shunt wires to attach external shunt wires.
9	Default configuration for ground screws is for grounded power at user site. For ungrounded or corner-grounded power, remove the screws. Refer to <a href="#">Determine the Input Power Configuration</a> on <a href="#">page 71</a> for more information.
10	 <b>ATTENTION:</b> Implementation of safety circuits and risk assessment is the responsibility of the machine builder. Please reference international standards ISO 14121-1 and EN ISO 13849-1 estimation and safety performance categories. For more information refer to Understanding the Machinery Directive, publication <a href="#">SHB-900</a> .
11	For motor cable specifications, refer to Kinetix Motion Accessories Specifications Technical Data, publication <a href="#">GMC-TD004</a> .
12	MPL-A15xx...MPL-A45xx, MPM-A115xx...MPM-A130xx, MPF-A3xx...MPF-A45xx, MPS-Axxx, MPAR-Axxx, MPAS-Axxx, and LDAT-Sxx-xBx encoders use the +5V DC supply.
13	MPL-Bxx, MPL-A5xx, MPM-Bxx, MPM-A165xx...MPM-A215xx, MPF-Bxx, MPF-A5xx, MPS-Bxxx, MPAR-Bxxx, MPAS-Bxxx, and LDAT-Sxx-xDx encoders use the +9V DC supply.
14	Brake connector pins are labeled plus (+) and minus (-) or F and G respectively. Power connector pins are labeled U, V, W, and $\perp$ (GND) or A, B, C, and $\perp$ (D) respectively.
15	LDAT-Series linear thrusters do not have a brake option, so only the 2090-CPWM7DF-xxAAxx or 2090-CPWM7DF-xxAFxx motor power cables apply.



## Power Wiring Examples

You must supply input power components. The single-phase and three-phase line filters are wired downstream of the circuit protection.

## Single-axis Drive Wiring Examples

**Figure 87 - Kinetix 5500 Drives Power Wiring (three-phase operation)**

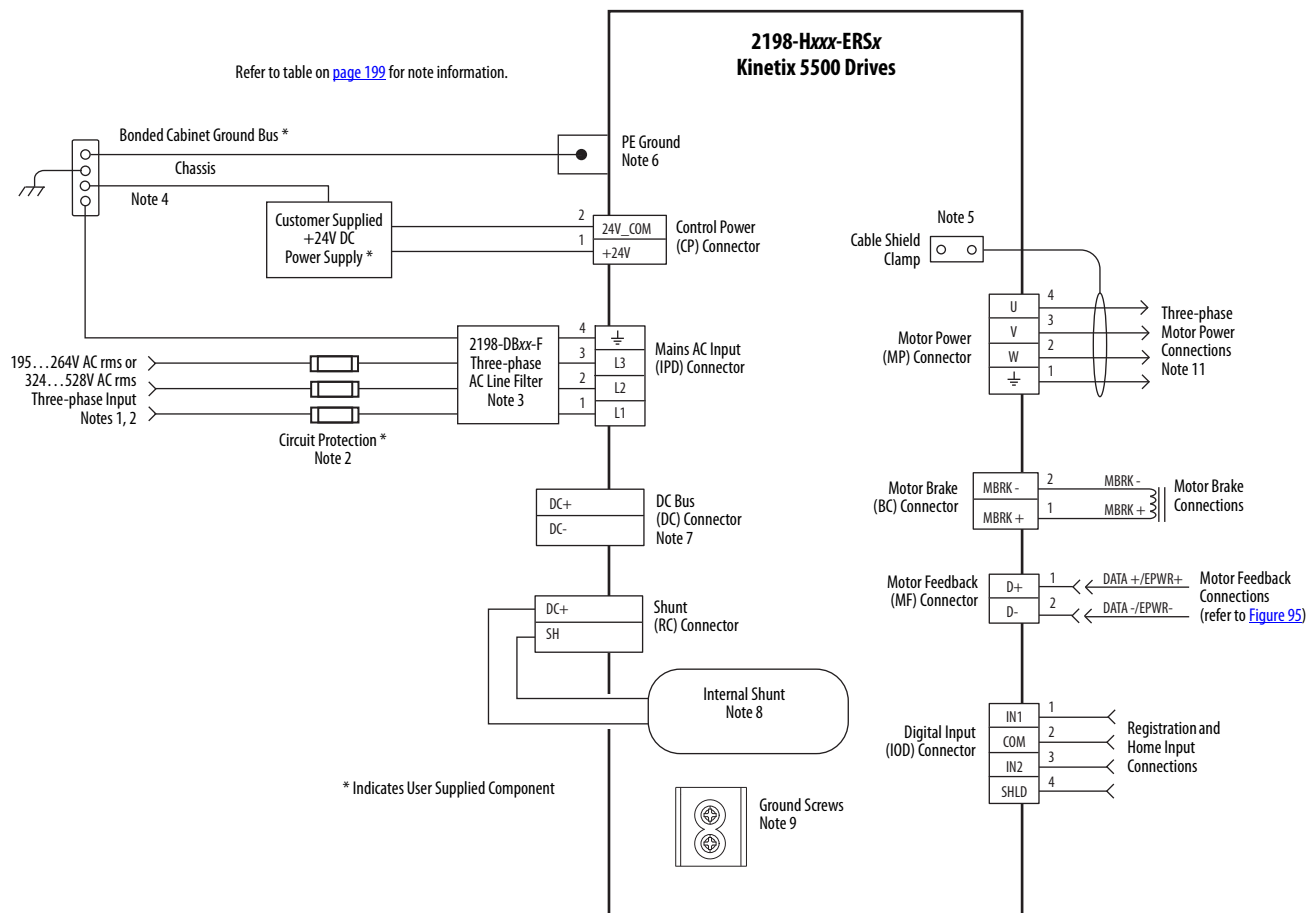


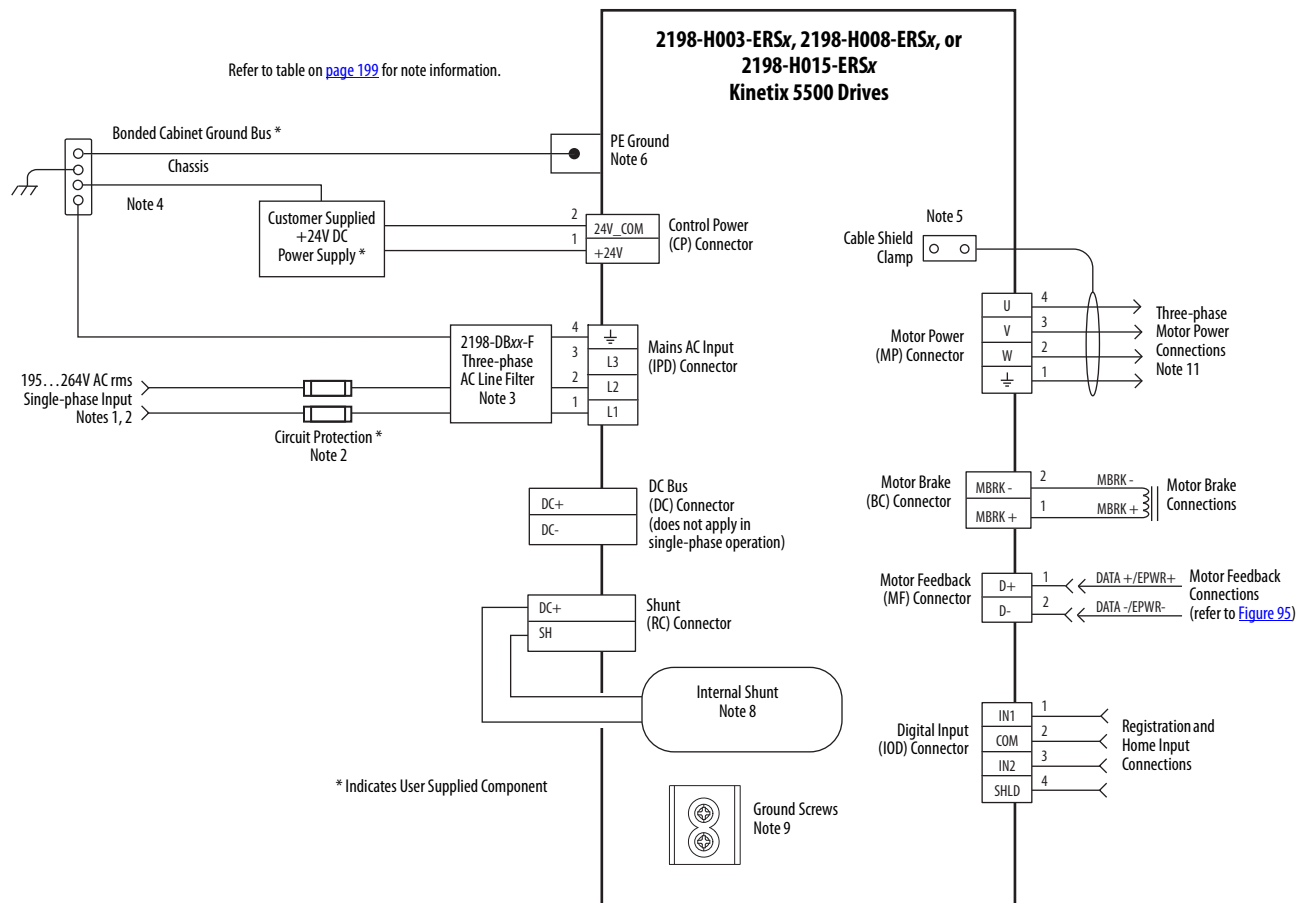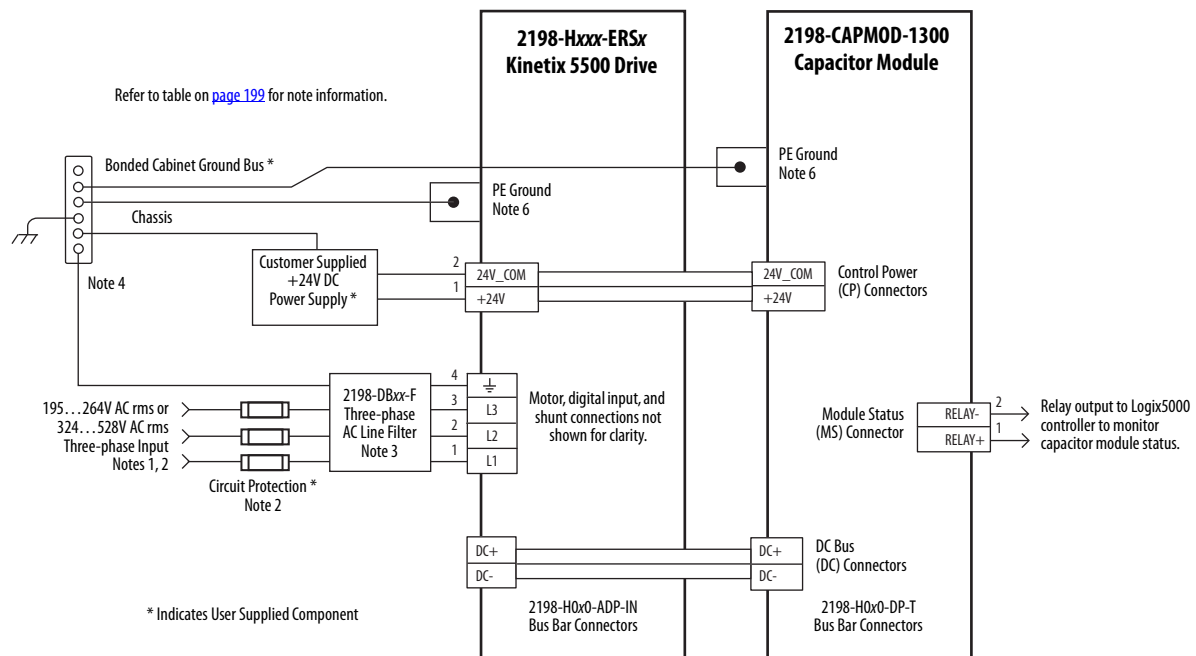**Figure 88 - Kinetix 5500 Drives Power Wiring (single-phase operation)****Figure 89 - Kinetix 5500 Capacitor Module**


## Bus-sharing Wiring Examples

For bus-sharing configurations, use the 2198-H0x0-xx-x shared-bus connection system to extend power from drive to drive.



**Figure 90 - Kinetix 5500 Drives with Shared AC Bus**

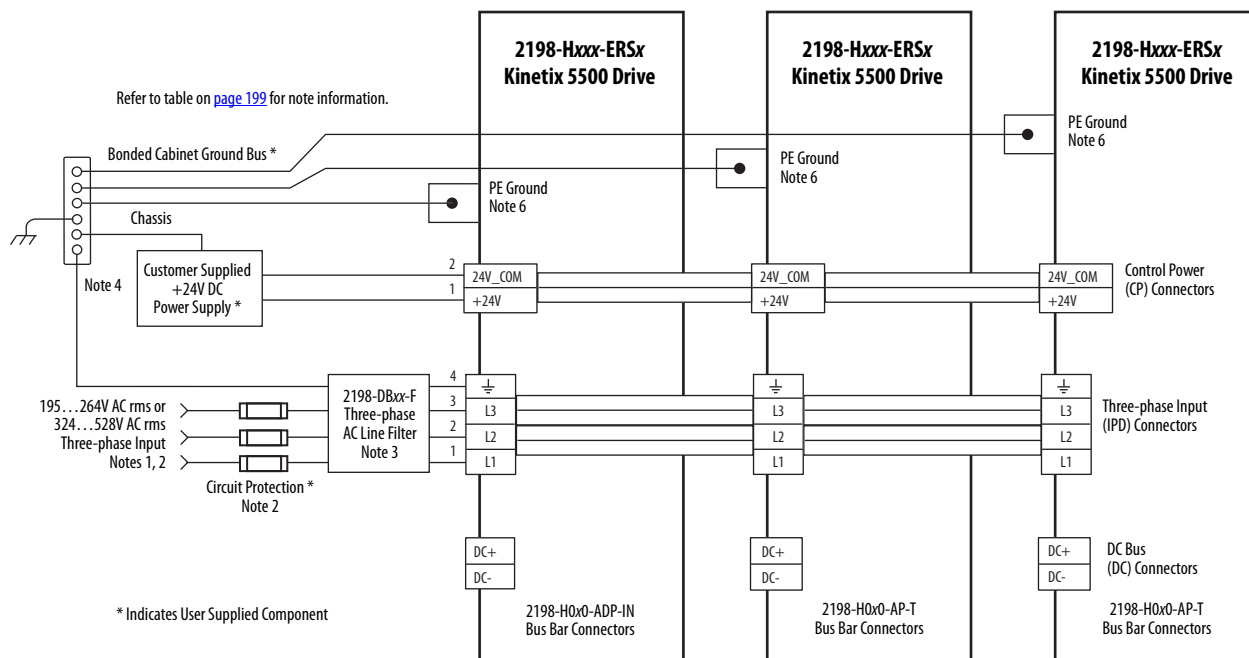

**Figure 91 - Kinetix 5500 Drives with Shared AC/DC Bus**

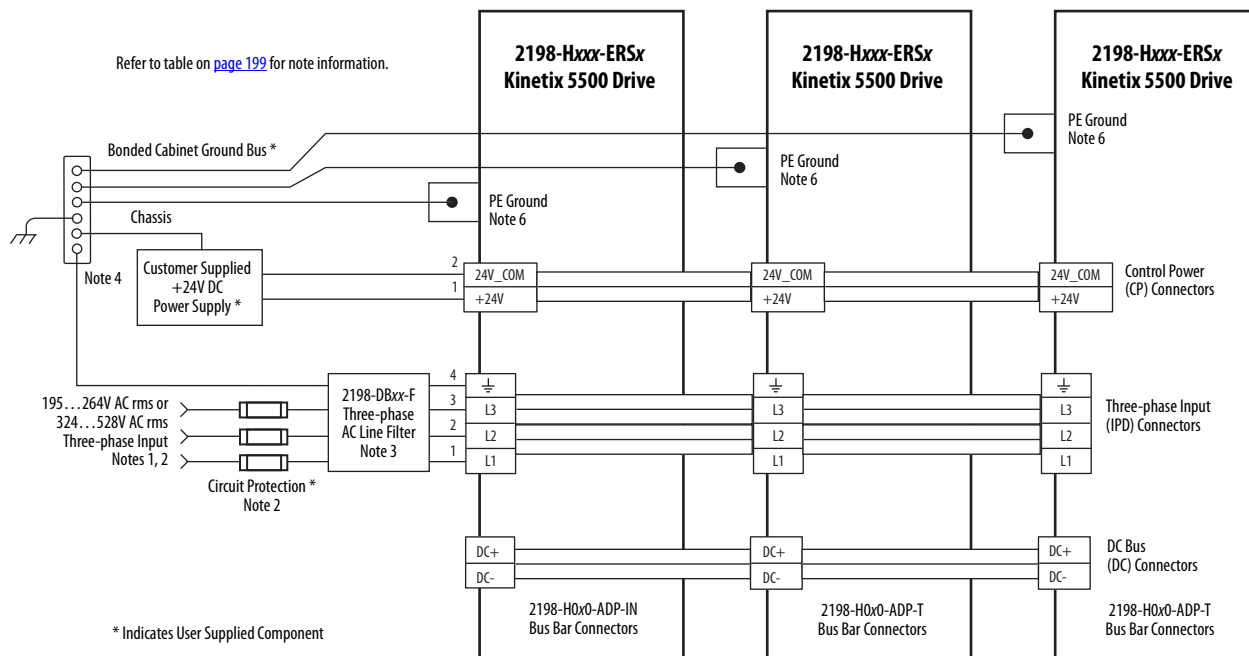

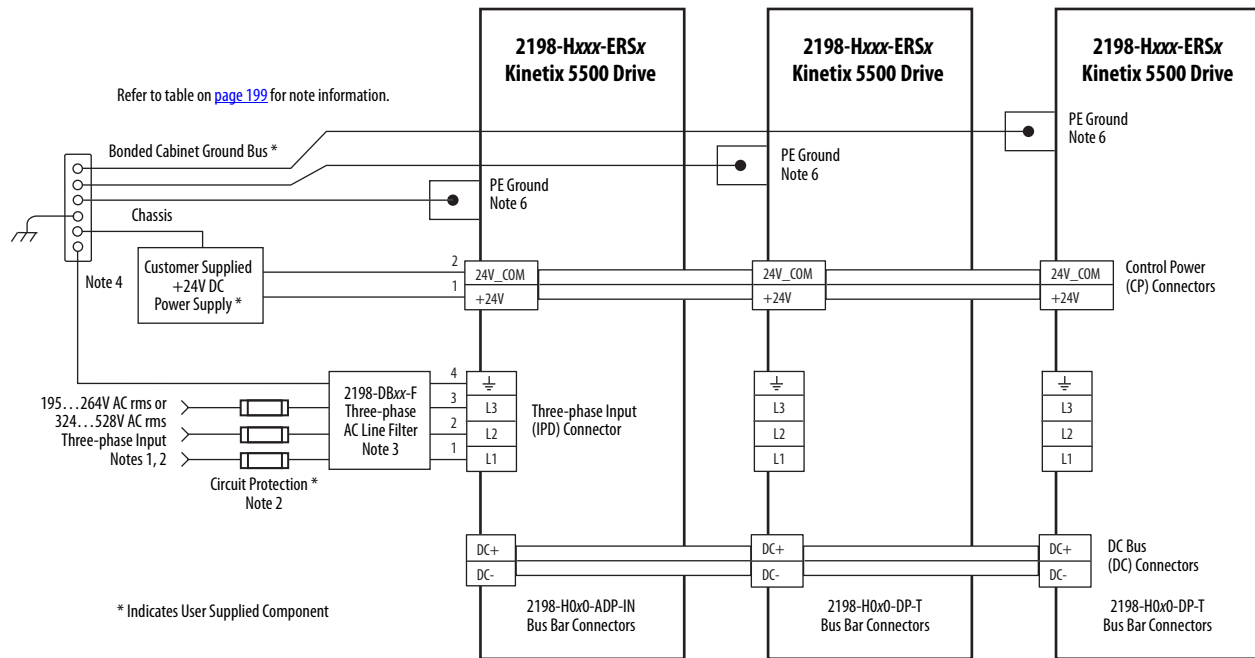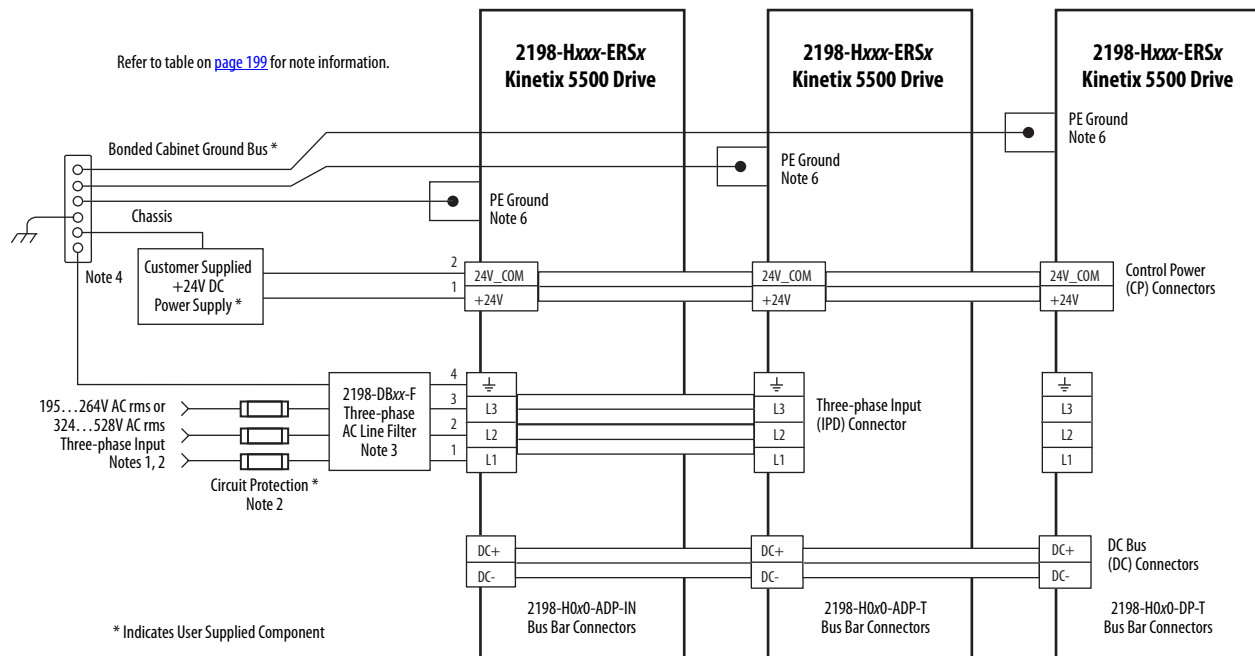

**Figure 92 - Kinetix 5500 Drives with Shared DC (common bus)****Figure 93 - Kinetix 5500 Drives with Shared AC/DC Hybrid Bus**

## Shunt Resistor Wiring Example


Refer to the [External Passive-shunt Resistor Connections](#) on [page 99](#) for the Bulletin 2097 external shunt resistor catalog numbers available for Kinetix 5500 servo drives.

---

**IMPORTANT** Before wiring the Bulletin 2097 external shunt to the RC connector, remove the wires from the servo drive internal shunt. Do not connect internal and external shunt resistors to the drive.

---

**Figure 94 - Shunt Resistor Wiring Example**

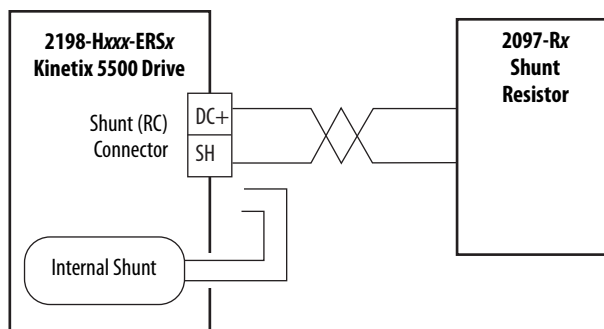


Refer to the Kinetix 300 Shunt Resistor Installation Instructions, publication [2097-IN002](#), for shunt resistor installation instructions.

## Kinetix 5500 Drive and Motor/Actuator Wiring Examples


The Kinetix VP motors use single cable technology. The motor power, brake, and feedback wires are all packaged in a single cable.

**Figure 95 - Kinetix 5500 Drives with Kinetix VP Motors (Bulletin VPL, VPF, and VPS)**

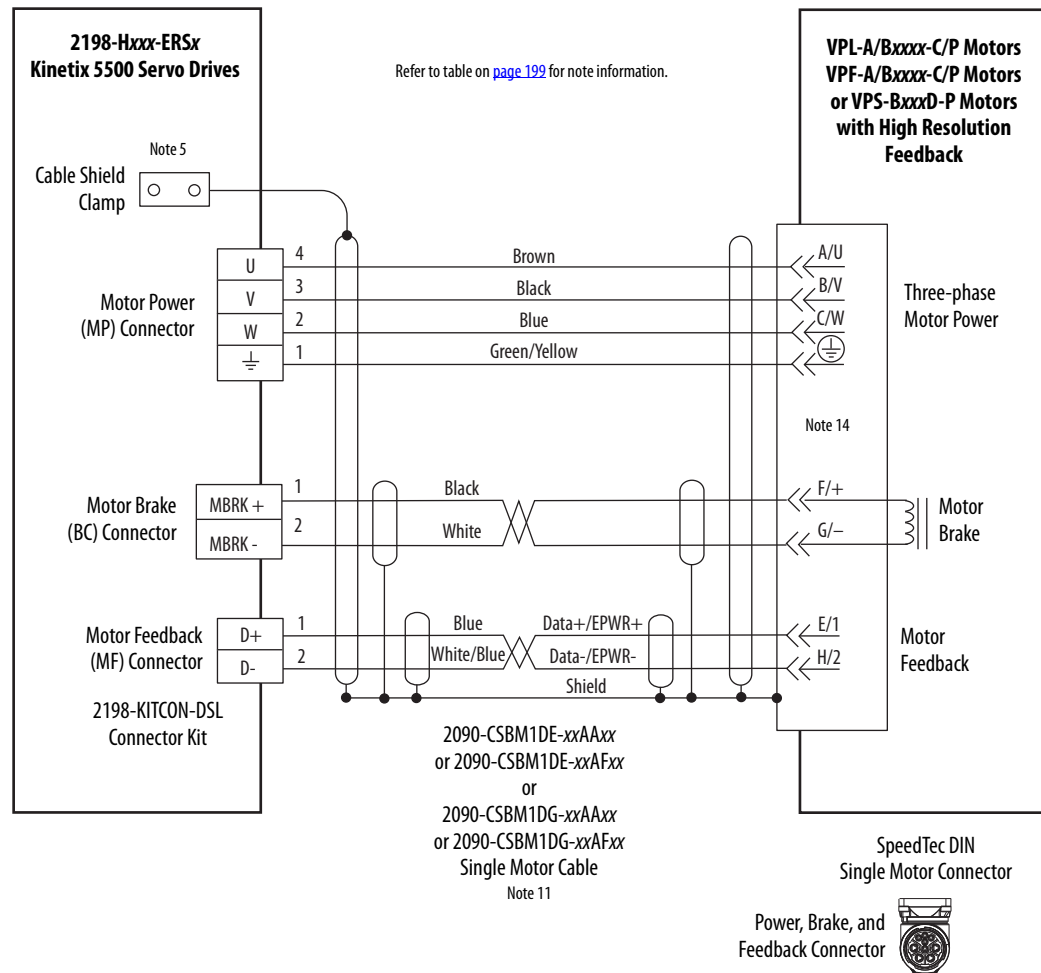


2090-CSxM1DF cables have flying-lead conductors designed specifically for Kinetix 5500 servo drives. 2090-CSxM1DG cables have flying-leads that are longer than 2090-CSxM1DF cables to accommodate Kinetix 5500 or Kinetix 5700 servo drives.

**Figure 96 - Grounding Technique for Feedback Cable Shield**


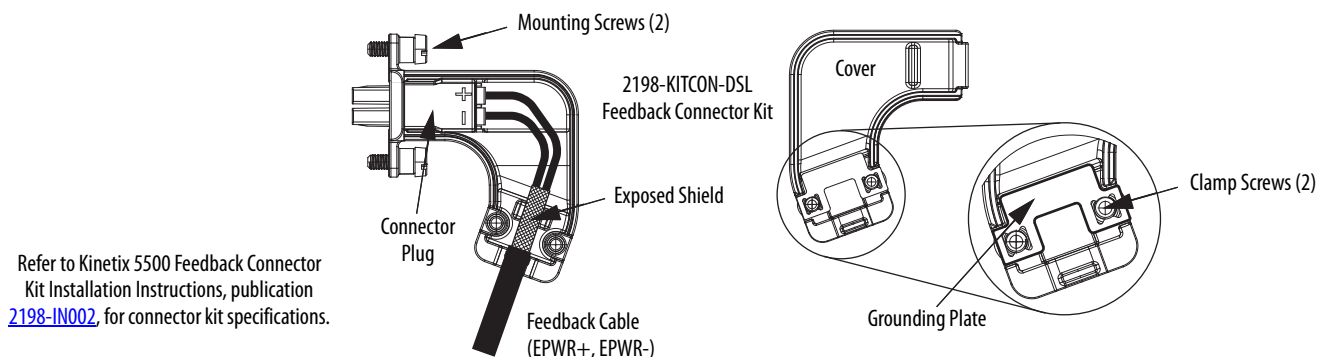


Compatible Allen-Bradley rotary motors (Bulletin MPL, MPM, MPF, and MPS) and linear actuators (Bulletin MPAS, MPAR, MPAL, and LDAT-Series) have separate connectors and cables for power/brake and feedback connections.



Figure 97 - Kinetix 5500 with MP-Series Rotary Motors

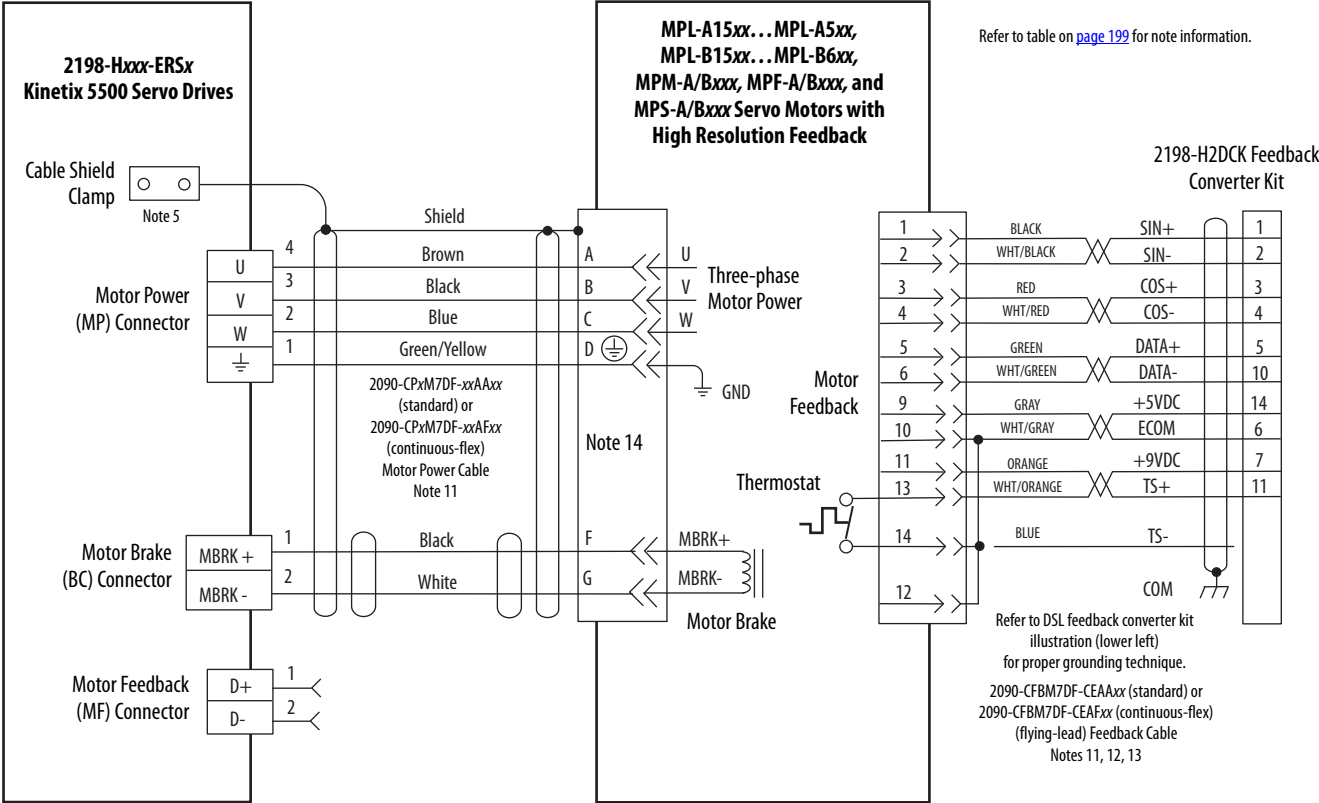

Grounding Technique for  
Feedback Cable Shield

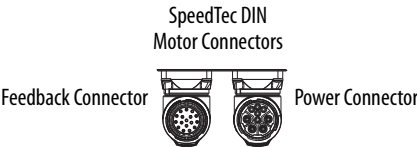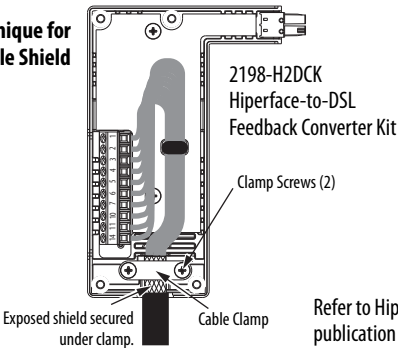

Refer to Hiperface to DSL Feedback Converter Kit Installation Instructions,  
publication [2198-IN006](#), for converter kit specifications.

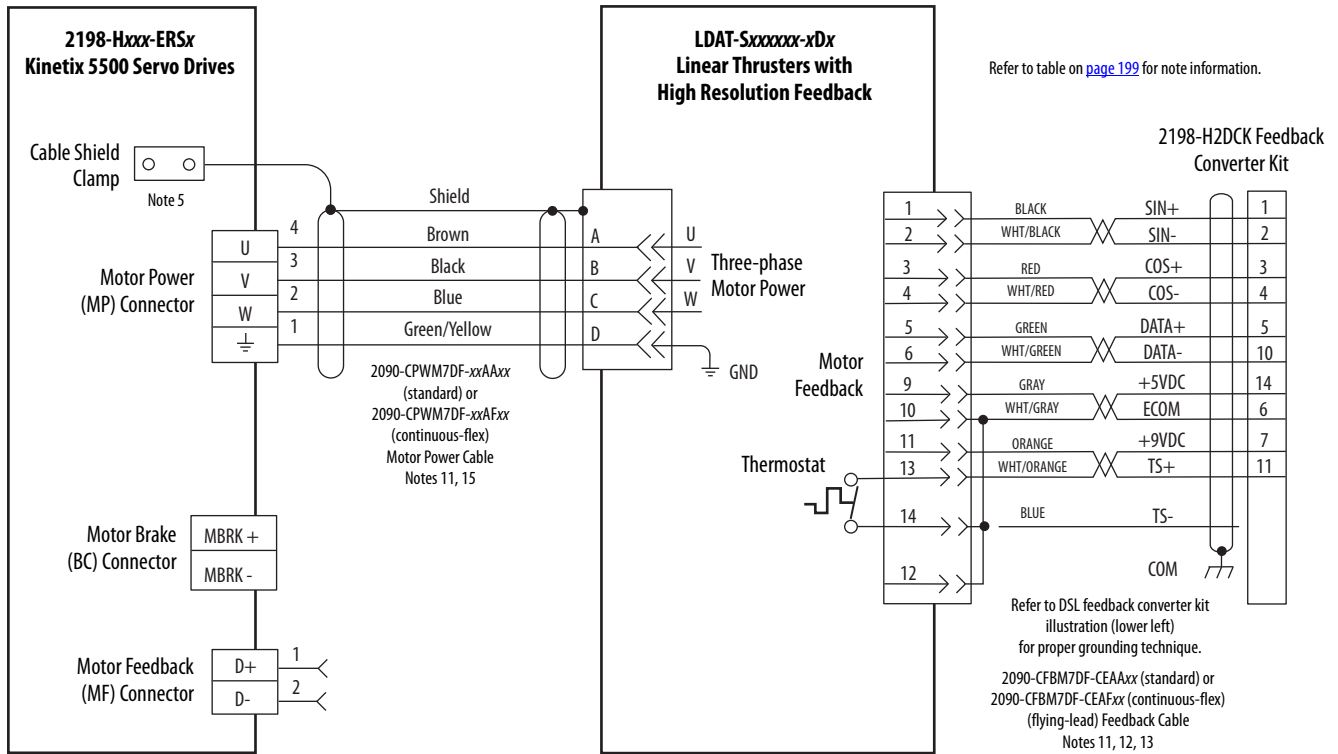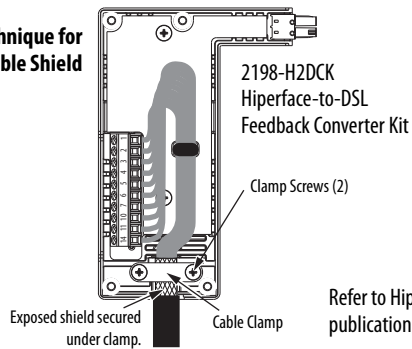**Figure 98 - Kinetix 5500 with LDAT-Series Linear Thrusters****Grounding Technique for  
Feedback Cable Shield**

Refer to Hiperface to DSL Feedback Converter Kit Installation Instructions, publication [2198-IN006](#), for converter kit specifications.


**SpeedTec DIN  
Motor Connectors**

Feedback Connector




Power Connector


Figure 99 - Kinetix 5500 with MP-Series Linear Stages



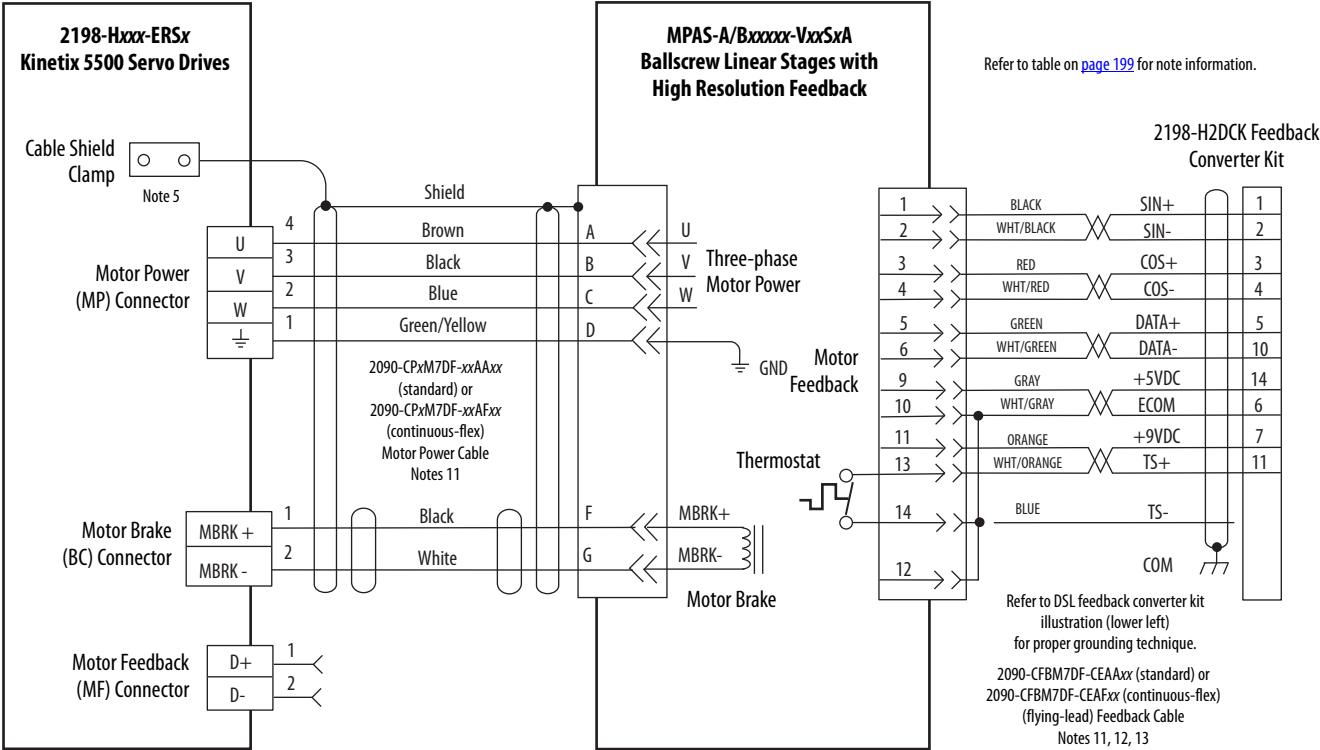


**Grounding Technique for Feedback Cable Shield**

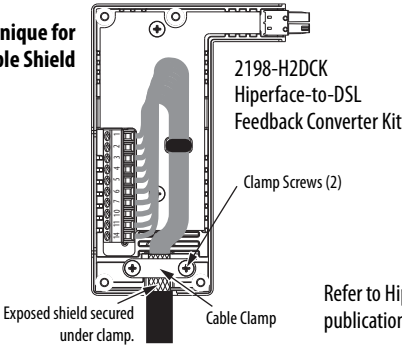

Refer to Hiperface to DSL Feedback Converter Kit Installation Instructions, publication [2198-IN006](#), for converter kit specifications.

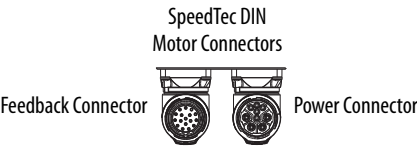

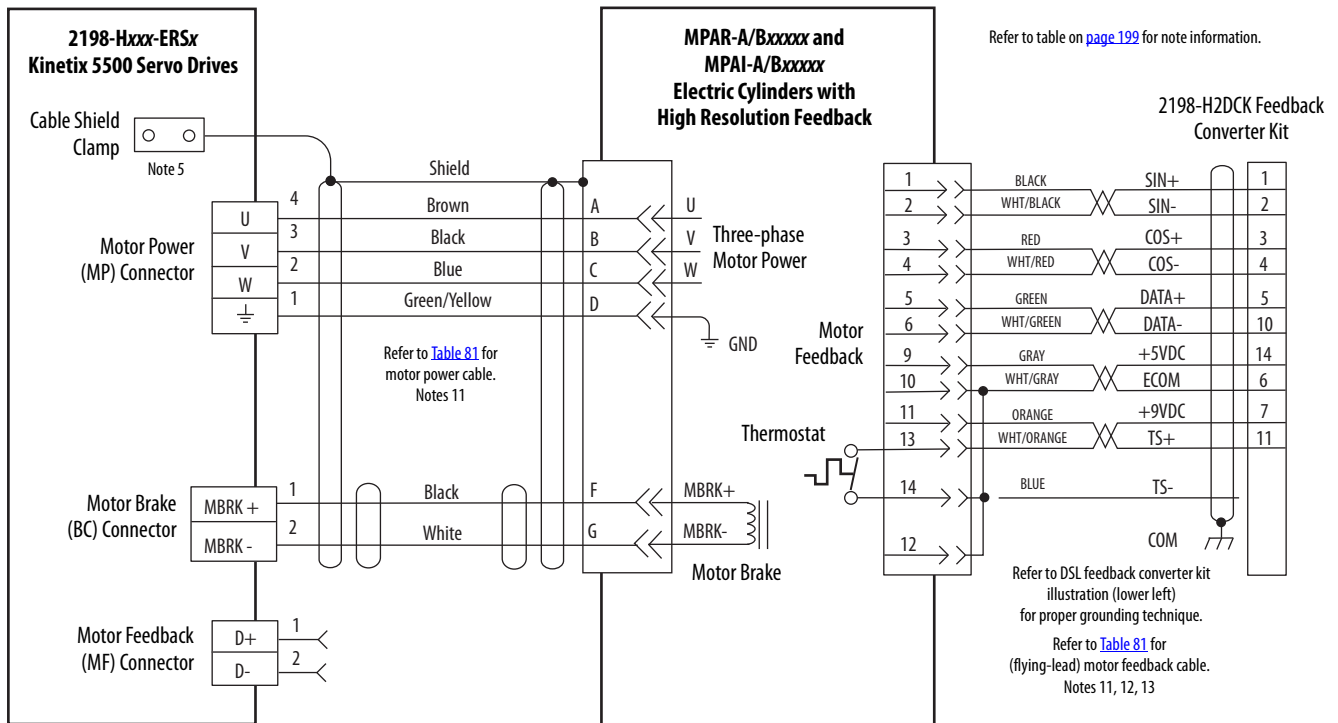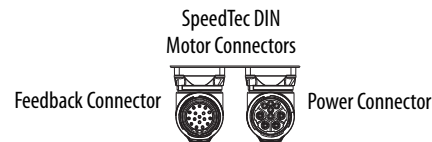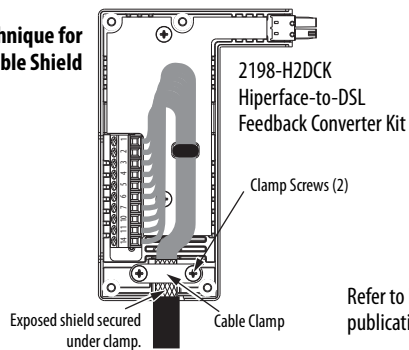**Figure 100 - Kinetix 5500 with MP-Series Electric Cylinders****Grounding Technique for Feedback Cable Shield**

Refer to Hyperface to DSL Feedback Converter Kit Installation Instructions, publication [2198-IN006](#), for converter kit specifications.


**Table 81 - MP-Series Electric Cylinder Power and Feedback Cables**

MP-Series Electric Cylinder Cat. No.	Frame	Power Cable Cat. No.	Feedback Cable Cat. No.
MPAR-A/B1xxx (series A)	32	2090-XXNPMF-16Sxx (standard) or 2090-CPxM4DF-16AFxx (continuous-flex)	2090-XXNFMF-Sxx (standard) or 2090-CFBM4DF-CEAFxx (continuous-flex)
MPAR-A/B2xxx (series A)	40		
MPAR-A/B1xxx (series B)	32		
MPAR-A/B2xxx (series B)	40		
MPAR-A/B3xxx	63		
MPAI-A/B2xxxx	64	2090-CPxM7DF-16AAxx (standard) or 2090-CPxM7DF-16AFxx (continuous-flex)	2090-CFBM7DF-CEAAxx (standard) or 2090-CFBM7DF-CEAFxx (continuous-flex)
MPAI-A/B3xxxx	83		
MPAI-A/B4xxxx	110		
MPAI-B5xxxx	144		
MPAI-A5xxxx	144	2090-CPxM7DF-14AAxx (standard) or 2090-CPxM7DF-14AFxx (continuous-flex)	2090-CFBM7DF-CEAAxx (standard) or 2090-CFBM7DF-CEAFxx (continuous-flex)


## System Block Diagrams

This section provides block diagrams of the Kinetix 5500 drive modules.

**Figure 101 - Kinetix 5500 Drive Block Diagram**

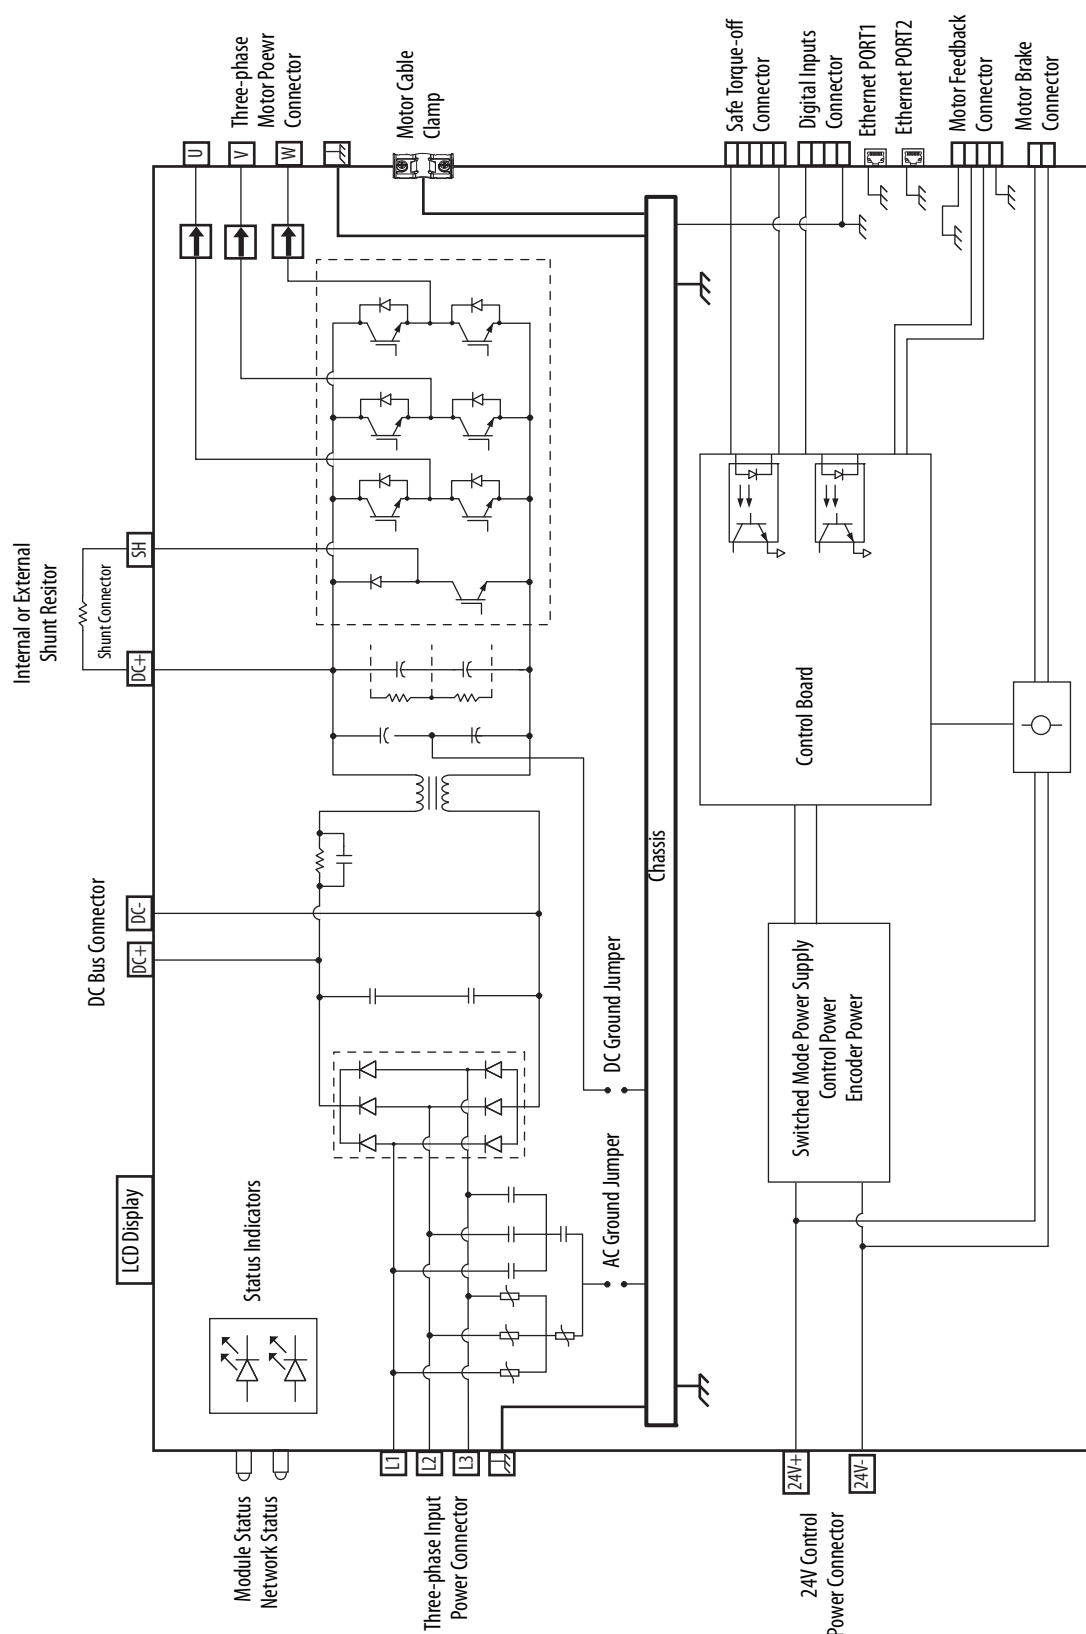

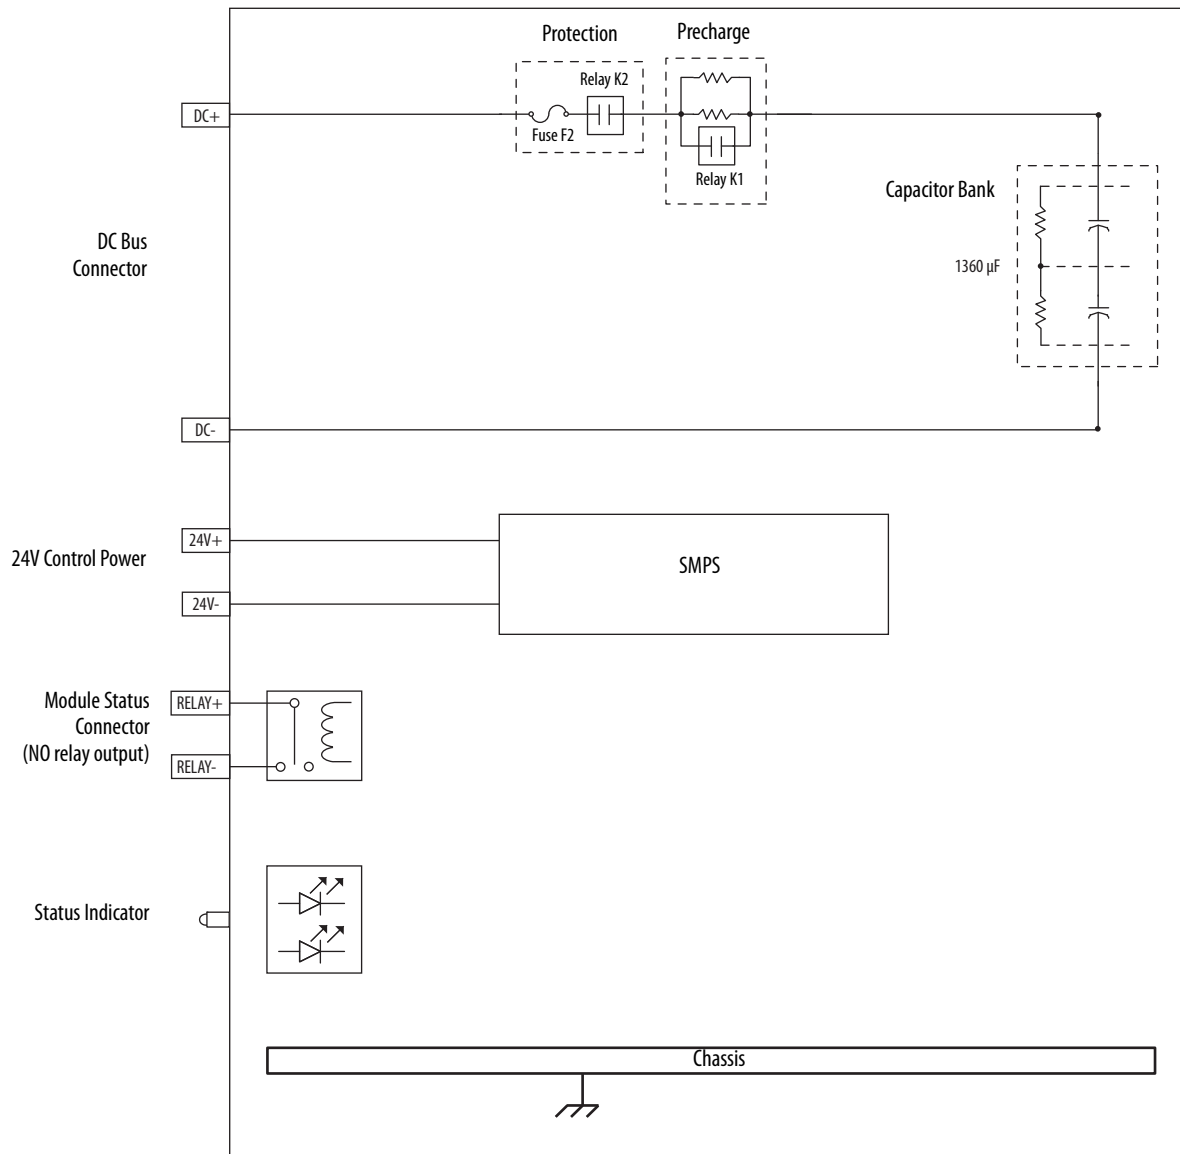

**Figure 102 - Kinetix 5500 Capacitor Module Block Diagram**

## Notes:

## Upgrade the Drive Firmware

This appendix provides procedures for upgrading firmware by using ControlFLASH software.

Topic	Page
Before You Begin	214
Upgrade Firmware	217
Verify the Firmware Upgrade	221

Upgrading drive firmware by using ControlFLASH software involves configuring your Logix5000 controller communication, selecting the drive to upgrade, and upgrading the firmware.

---

<b>IMPORTANT</b>	If the drive firmware contains updated safety firmware, you must de-energize the safety inputs first or the upgrade fails.  To update the drive firmware in Feedback Only mode, you must inhibit the axis first. Refer to <a href="#">Inhibit Feedback Only Axis</a> on <a href="#">page 216</a> for more information.
------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

---

## Before You Begin

These are the minimum firmware revisions and software versions required for upgrading drive firmware.

**Table 82 - Kinetix 5500 System Requirements**

Description	Firmware Revision
Logix Designer application	21.00 or later
RSLinux software	2.58 or later
ControlFLASH software kit <sup>(1)</sup>	11.00 or later
Catalog numbers of the targeted Kinetix 5500 drive module you want to upgrade.	
Network path to the targeted Kinetix 5500 drive module you want to upgrade.	

(1) Download the ControlFLASH kit from <http://support.rockwellautomation.com/controlflash>. Contact Rockwell Automation Technical Support at (440) 646-5800 for assistance.

For more ControlFLASH information (not drive specific), refer to the ControlFLASH Firmware Upgrade Kit Quick Start, publication [1756-0S105](#).

**IMPORTANT** Control power must be present at CP-1 (24V+) and CP-2 (24V-) prior to upgrading your target drive. The axis state on the LCD display must be STANDBY, CONFIGURING, STOPPED, or PRECHARGE before beginning this procedure.



**ATTENTION:** To avoid personal injury or damage to equipment during the firmware upgrade due to unpredictable motor activity, do not apply three-phase AC or common-bus DC input power to the drive.

## Configure Logix5000 Controller Communication


This procedure assumes that your communication method to the Logix5000 controller is the Ethernet network. It also assumes that your Logix5000 Ethernet module or controller has already been configured.

For more controller information, refer to [Additional Resources](#) on [page 11](#).

Follow these steps to configure Logix5000 controller communication.

1. Open your RSLinx Classic software.
2. From the Communications menu, choose Configure Drivers.

The Configure Drivers dialog box appears.

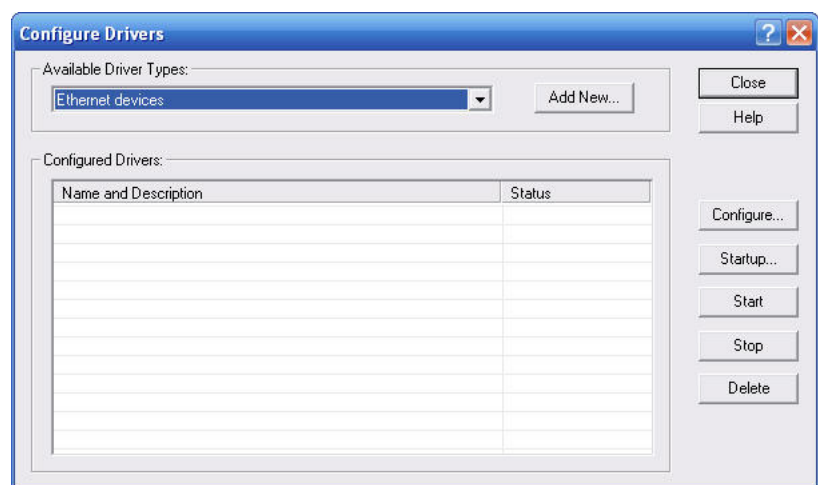

3. From the Available Driver Types pull-down menu, choose Ethernet devices.
4. Click Add New.


The Add New RSLinx Classic Driver dialog box appears.

5. Type the new driver name.




6. Click OK.

The Configure driver dialog box appears.

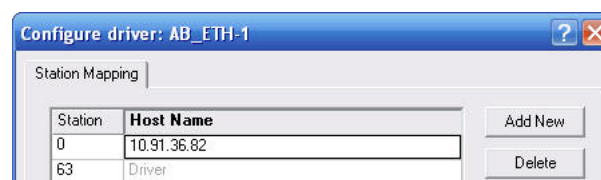

7. Type the IP address of your Kinetix 5500 servo drive.
8. Click OK.

The new Ethernet driver appears under Configured Drivers.

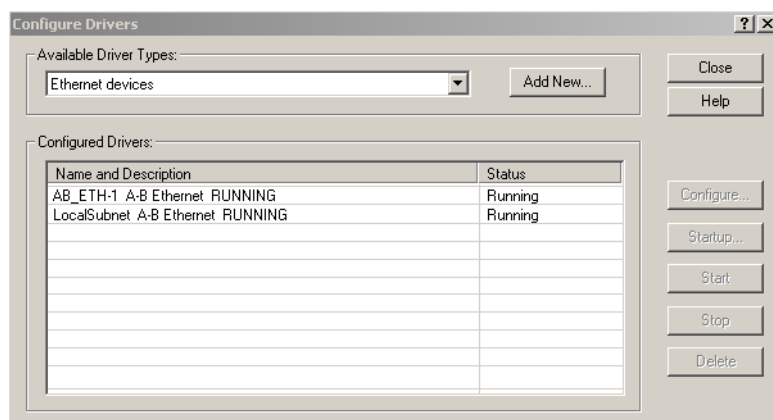


9. Click Close.
10. Minimize the RSLinx application dialog box.

## Inhibit Feedback Only Axis


If an axis is configured as Feedback Only, you must inhibit the axis prior to performing the firmware upgrade. Follow these steps to inhibit an axis.

1. Open your Logix Designer application.
2. Right-click the 2198-Hxxx-ERSx servo drive you configured as Feedback Only and choose Properties.

The Module Properties dialog box appears.

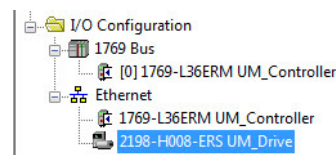

3. Click the Connection tab.

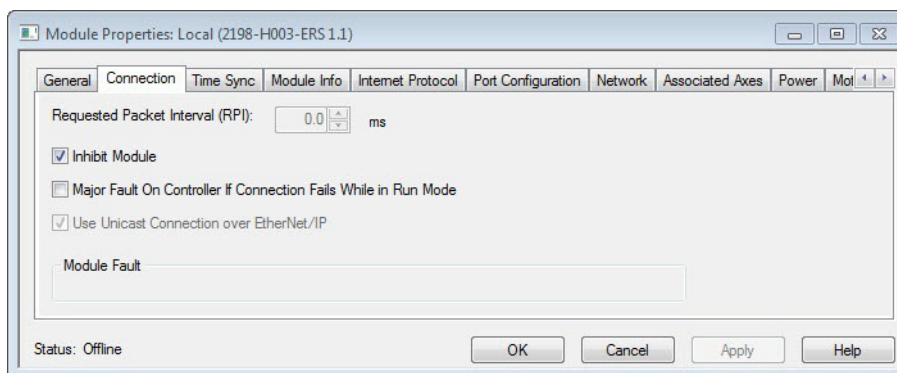

4. Check Inhibit Module.
5. Click OK.
6. Save your file and download the program to the controller.


## Upgrade Firmware

Follow these steps to select the drive module to upgrade.

1. In the Logix Designer application, from the Tools menu, choose ControlFLASH.


**TIP** You can also open ControlFLASH software by choosing Start>Programs>FLASH Programming Tools>ControlFLASH.

The Welcome to ControlFLASH dialog box appears.

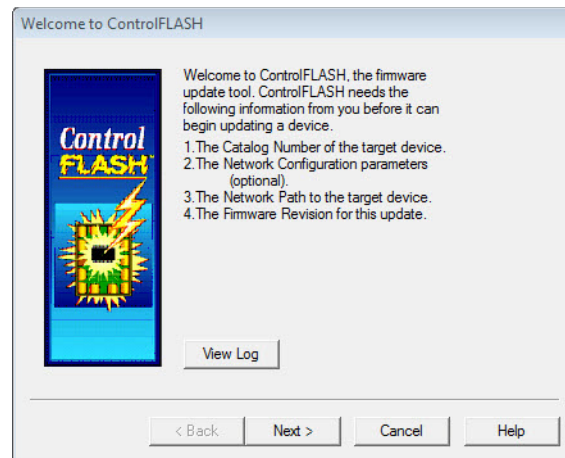

2. Click Next.

The Catalog Number dialog box appears.

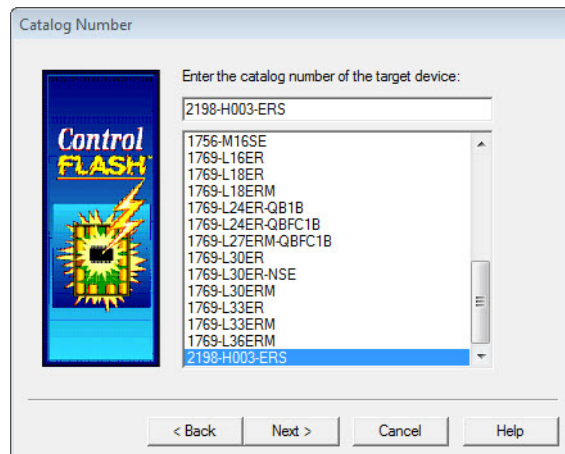


3. Select your drive module.

In this example, the 2198-H003-ERS servo drive is selected.


4. Click Next.

The Select Device to Update dialog box appears.

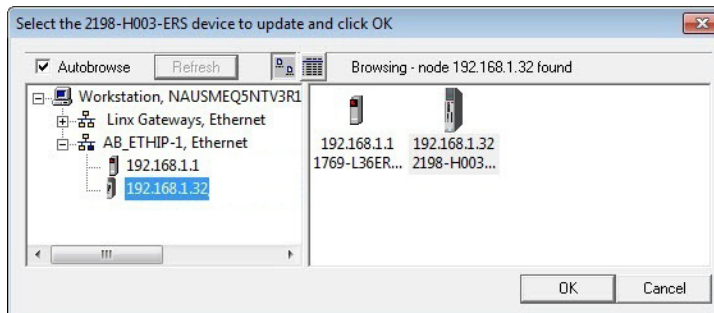

5. Expand your Ethernet node, Logix backplane, and EtherNet/IP network module.
6. Select the servo drive to upgrade.
7. Click OK.


The Firmware Revision dialog box appears.

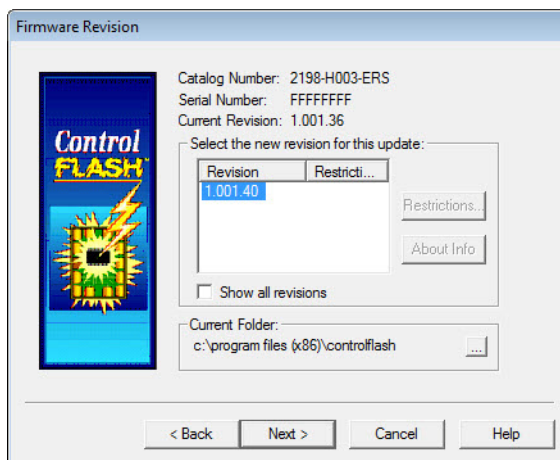

8. Select the firmware revision to upgrade.
9. Click Next.




The Summary dialog box appears.

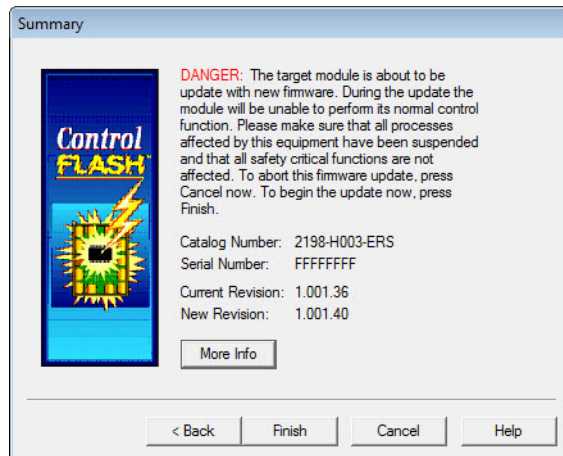

10. Confirm the drive catalog number and firmware revision.


11. Click Finish.

This ControlFLASH warning dialog box appears.

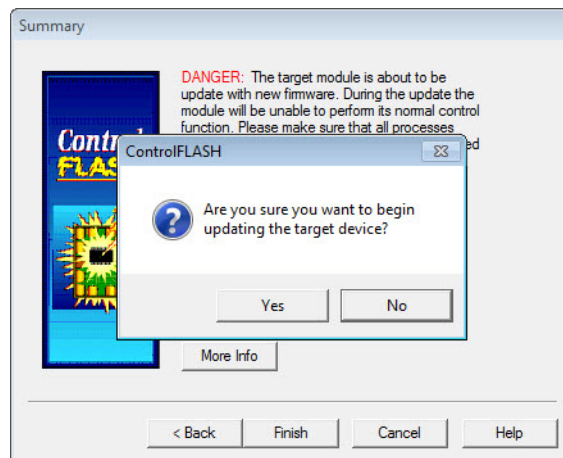


12. Click Yes (only if you are ready).

This ControlFLASH warning dialog box appears.

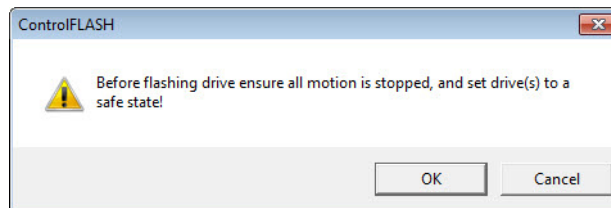

13. Acknowledge the warning and click OK.

The Progress dialog box appears and updating begins.

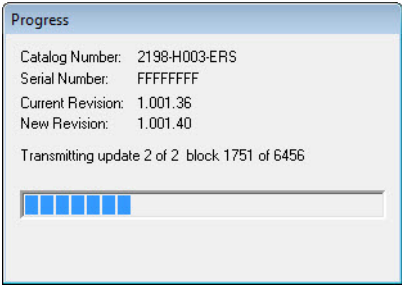


The axis state on the LCD display changes from CONFIGURING, STOPPED, or PRECHARGE to FIRMWARE UPDATE, which indicates that the upgrade is in progress.

After the upgrade information is sent to the drive, the drive resets and performs diagnostic checking.

- 14. Wait for the Progress dialog box to time out.

It is normal for this process to take several minutes.

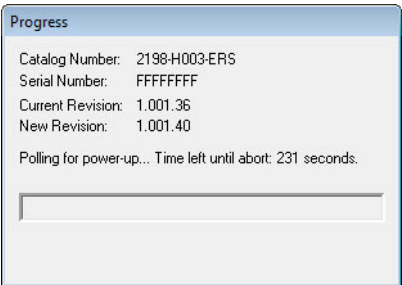

**IMPORTANT** Do not cycle power to the drive during this process or the firmware upgrade does not complete successfully.

- 15. Verify that the Update Status dialog box appears and indicates success or failure as described below.

Upgrading Status	If
Success	Update complete appears in a GREEN Status dialog box, then go to <a href="#">step 16</a> .
Failure	Update failure appears in a RED Status dialog box, then refer to ControlFLASH Firmware Upgrade Kit Quick Start, publication <a href="#">1756-0S105</a> , for troubleshooting information.



- 16. Click OK.


**IMPORTANT** If you are upgrading a feedback-only axis and you checked Inhibit Module on the Connection tab in Module Properties, you must clear the Inhibit Module checkbox before resuming normal operation.

## Verify the Firmware Upgrade

Follow these steps to verify your firmware upgrade was successful.


**TIP** Verifying the firmware upgrade is optional.

1. Open your RSLinx software.
2. From the Communications menu, choose RSWho.

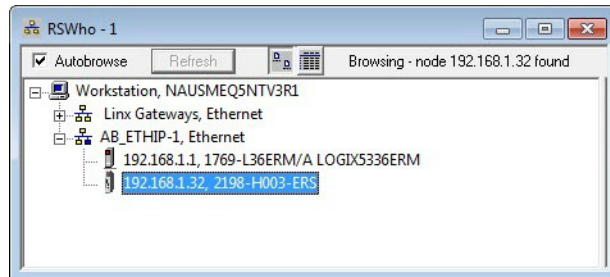

3. Expand your Ethernet node, Logix backplane, and EtherNet/IP network module.
4. Right-click the drive module and choose Device Properties.

The Device Properties dialog box appears.

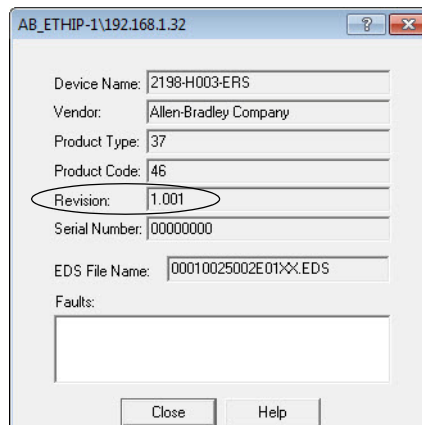

5. Verify the new firmware revision level.
6. Click Close.

## **Notes:**

## Size Multi-axis Shared-bus Configurations

This appendix provides information and examples for sizing your Kinetix 5500 drive shared-bus configurations.

Topic	Page
Shared-bus Configurations	223
Power Sharing Sizing Examples	228
Control Power Current Calculations	230
Energy Calculations	232

Shared-bus configurations include the following types:

- Shared AC
- Shared DC (common bus)
- Shared AC/DC
- Shared AC/DC Hybrid

These restrictions apply to all shared-bus configurations:

- Shared-bus configurations must use the shared-bus connection system.

---

<b>IMPORTANT</b>	Do not make drive-to-drive connections with discrete wires.
------------------	-------------------------------------------------------------

---

- Single-phase drive operation is not supported.
- Shared AC/DC and shared AC/DC hybrid configurations result in a derating of 30% of the total converter power available.
- The zero-stack tabs and cutouts must be engaged from drive-to-drive. Systems cannot start in one cabinet and end in another.
- Program drives for the same converter AC input voltage.

### Shared-bus Configurations

Shared AC configurations are configured as Standalone in the project file and do not share these restrictions that apply to multi-axis shared-bus configurations:

- All drives in a bus-sharing group must be configured with the same bus power-sharing group number in the Logix Designer application.
- The maximum number of drives in any bus power-sharing group cannot exceed eight.

## Shared AC Configurations


In shared AC configurations, the first (leftmost) drive receives AC input voltage. The shared-bus connection system extends the AC bus to all downstream drives:

- All drives are configured in the project file as Standalone drives.
- Drives must be of the same power rating (catalog number).
- Shared AC configurations do not support Bulletin 2198 capacitor modules.
- The maximum number of drives in Shared AC configurations is restricted as described in [Table 83](#).

**Table 83 - Shared AC Panel Layout**

Drive Cat. No.	Frame Size	Number of Drives Configured as Shared AC, max
2198-H003-ERSx	1	5
2198-H008-ERSx		
2198-H015-ERSx	2	3
2198-H025-ERSx		
2198-H040-ERSx		
2198-H070-ERSx	3	2

**Figure 103 - Typical Shared AC Configuration**

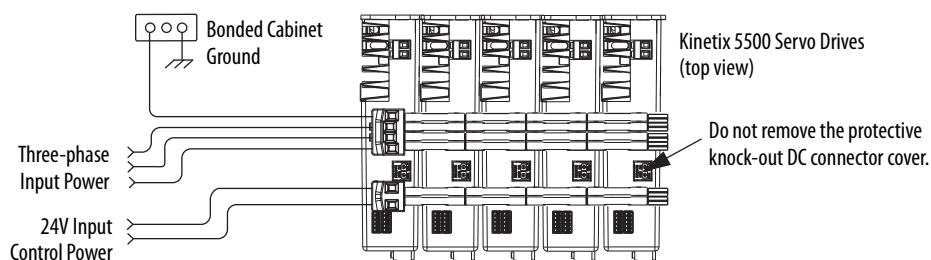

For an example shared AC installation with additional details, refer to [Typical Shared AC Installations](#) on [page 16](#).

## Shared DC Configurations


In a Shared DC (DC common bus) configuration, the first (leftmost) drive is the leader drive and is the only drive that receives the AC input voltage. All drives to the right of the leader drives are follower drives. They receive the DC bus voltage extended from the leader drive through the shared-bus connection system:

- For DC common-bus installations, the power rating of the leader drive must be greater than or equal to the power rating of the follower drives.
- The leader drive is configured in the project file as a Shared AC/DC drive.
- The follower drives are configured in the project file as Shared DC drives.
- Shared DC configurations support Bulletin 2198 capacitor modules.

**Table 84 - Shared DC Panel Layout**

Frame Size Combination	Leader Drive Cat. No.	Follower Drives, max <sup>(1)</sup>	Follower Cat. No.	Number of Capacitor Modules, max
1	2198-H003-ERSx	4	2198-H003-ERSx	0
	2198-H008-ERSx	4	2198-H003-ERSx	1
			2198-H008-ERSx	1
2 and 1	2198-H015-ERSx	6	2198-H003-ERSx	1
2			2198-H008-ERSx	
			2198-H015-ERSx	
2 and 1	2198-H025-ERSx	6	2198-H003-ERSx	3
2			2198-H008-ERSx	
			2198-H015-ERSx	
			2198-H025-ERSx	
2 and 1	2198-H040-ERSx	6	2198-H003-ERSx	3
2			2198-H008-ERSx	
			2198-H015-ERSx	
			2198-H025-ERSx	
			2198-H040-ERSx	
3 and 1	2198-H070-ERSx	7	2198-H003-ERSx	4
3 and 2			2198-H008-ERSx	
			2198-H015-ERSx	
			2198-H025-ERSx	
			2198-H040-ERSx	
			2198-H070-ERSx	
3				

(1) For Bulletin 2198 capacitor module maximum values, refer to the Kinetix 5500 Capacitor Module Installation Instructions, publication [2198-IN004](#).

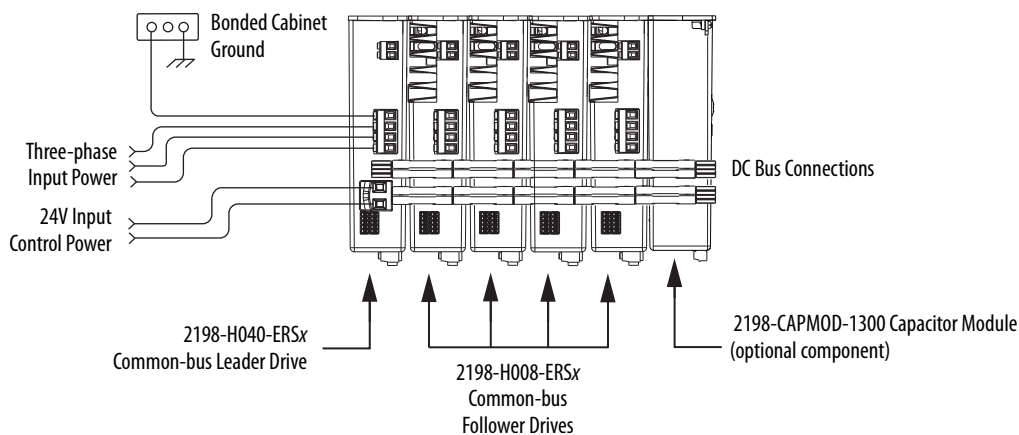**Figure 104 - Typical DC Common Bus Configuration****IMPORTANT**

Total number of drives in Kinetix 5500 drive system must not exceed 8.

For an example shared DC installation with additional details, refer to [Typical Shared DC Common-bus Installations](#) on [page 18](#).

## Shared AC/DC Configurations

In a shared AC/DC configuration, the first (leftmost) drive receives AC input voltage. The shared-bus connection system extends the AC and DC bus to all downstream drives:


- All drives are configured in the project file as Shared AC/DC drives.
- Drives must be of the same power rating (catalog number).
- Shared AC/DC configurations support Bulletin 2198 capacitor modules
- Total available converter power is derated by 30%.
- The maximum number of drives configured as Shared AC/DC is described in [Table 85](#).

**Table 85 - Shared AC/DC Panel Layout**

Drive Cat. No.	Frame Size	Drives Configured as Shared AC/DC, max <sup>(1)</sup>	Number of Capacitor Modules, max
2198-H003-ERSx	1	8	0
2198-H008-ERSx			1
2198-H015-ERSx	2	4	4
2198-H025-ERSx			
2198-H040-ERSx			
2198-H070-ERSx	3	2	4

(1) For Bulletin 2198 capacitor module maximum values, refer to the Kinetix 5500 Capacitor Module Installation Instructions, publication [2198-IN004](#).

**Figure 105 - Typical Shared AC/DC Configuration**

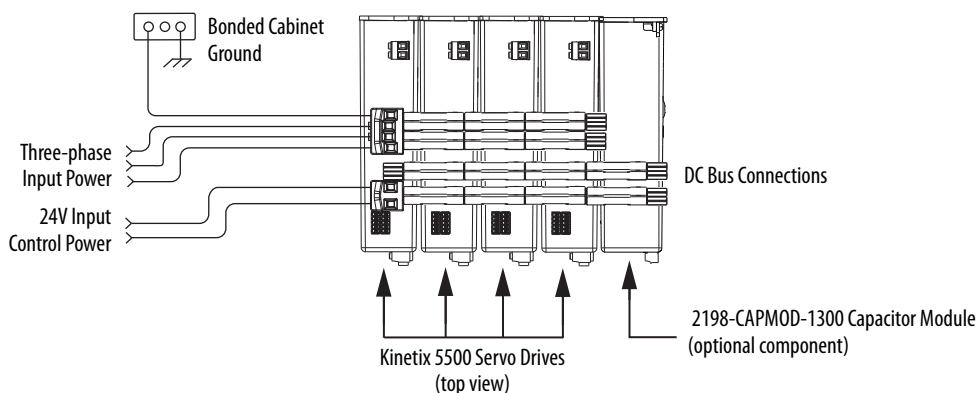

For an example shared AC/DC installation with additional details, refer to [Typical Shared AC/DC Installations](#) on [page 17](#).




## Shared AC/DC Hybrid Configurations

In shared AC/DC hybrid configurations, three-phase AC input power is supplied to two or more (leader) drives that act as converters. This parallel converter configuration increases the DC power supplied to the inverter (follower) drives:

- The leftmost drives in a hybrid configuration act as parallel converter drives and must be of the same power rating (catalog number).
- Shared DC (inverter) drives mounted to the right of the shared AC/DC (converter) drives must have the same or lower power rating (catalog number) than the shared AC/DC drives.
- The total motoring load must not exceed the rated load for the drives sourcing the DC power. Each follower drive must be sized for the motor load connected to it.
- Total available converter power is derated by 30%.
- The maximum number of drives configured in the project file as Shared AC/DC is restricted according to [Table 85 on page 226](#).
- The maximum number of drives configured in the project file as Shared DC is restricted according to [Table 84 on page 225](#).
- Shared AC/DC hybrid configurations support Bulletin 2198 capacitor modules.

**Figure 106 - Typical Shared AC/DC Hybrid Configuration**

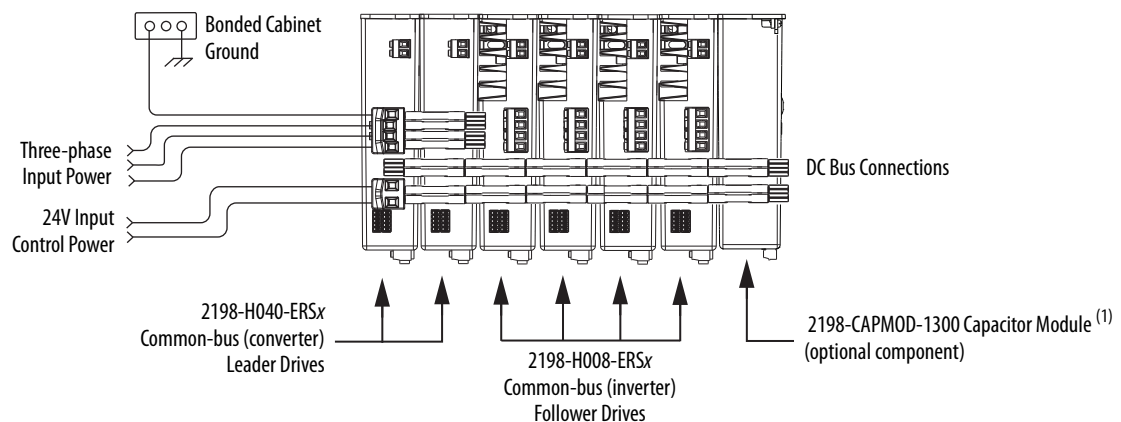

(1) For Bulletin 2198 capacitor module maximum values, refer to the Kinetix 5500 Capacitor Module Installation Instructions, publication [2198-IN004](#).

For an example shared AC/DC hybrid installation with additional details, refer to [Typical Shared AC/DC Bus Hybrid Installations](#) on [page 19](#).

## Power Sharing Sizing Examples

For best results, size motors based on load torque requirements by using Motion Analyzer software. Select drives based on continuous or peak torque requirements. Based on the load profile, use Motion Analyzer software to estimate the net converter and inverter power and bus regulator capacity.


**Table 86 - Converter and Bus Regulator Capacity**

Configuration	Available Converter Capacity	Available Regenerative Capacity
Shared AC	Converter power rating of each drive	Internal shunt of each drive
Common bus	Converter power rating of leader drive	Sum of all internal shunts from each drive in bus-sharing group
Shared AC/DC	Sum of converter power ratings times 0.7 (70%)	
Shared AC/DC hybrid		

### Shared DC Example

In this example four 2198-H040-ERS drives are used in a common-bus configuration.

**Figure 107 - DC Common Bus Configuration**

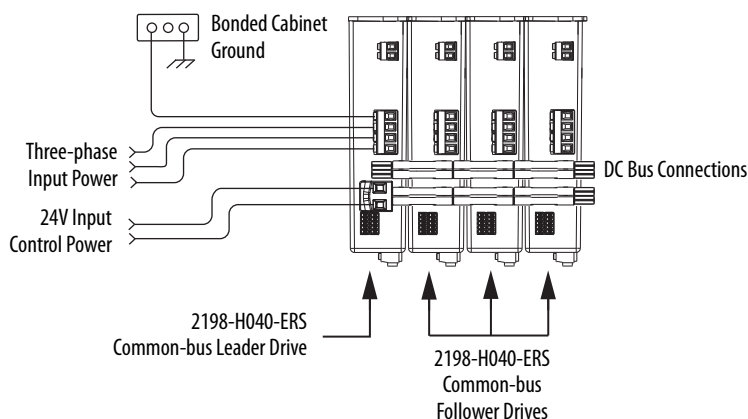


Each 2198-H040-ERS drive is rated at 8.4 kW continuous output power to bus. However, only the leader drive acts as the converter, so the available converter power to the system is 8.4 kW. In this example, total motoring load must not exceed 8.4 kW.

## Shared AC/DC Hybrid Example

If the required motoring power exceeds the available converter power sourced by the shared DC configuration, then connect a second converter drive to make a shared AC/DC hybrid configuration. This increases the available converter power.

In this example, the same four 2198-H040-ERS drives are used, however, two are connected as parallel converter (leader) drives and the other two as common-bus (follower) drives. The total converter power is derated by 30%.

**Figure 108 - Shared AC/DC Hybrid Configuration**

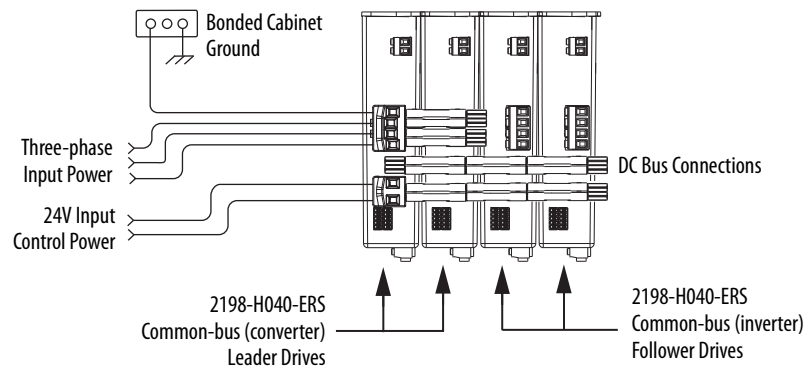


The available converter power to the system is  $(8.4 \bullet 2) \bullet 0.7 = 11.76 \text{ kW}$ . In this example, total motoring load must not exceed 11.76 kW. The available converter power was increased by 40% over the same drives in shared DC configuration.

## Shared AC/DC Example

If the required motoring power exceeds the available converter power sourced by two leader drives, then connect all four drives as parallel converter drives. This further increases the available converter power.

In this example, the same four 2198-H040-ERS drives are used, however, all four are connected as parallel converter (leader) drives. The total converter power is derated by 30%.

**Figure 109 - Shared AC/DC Configuration**

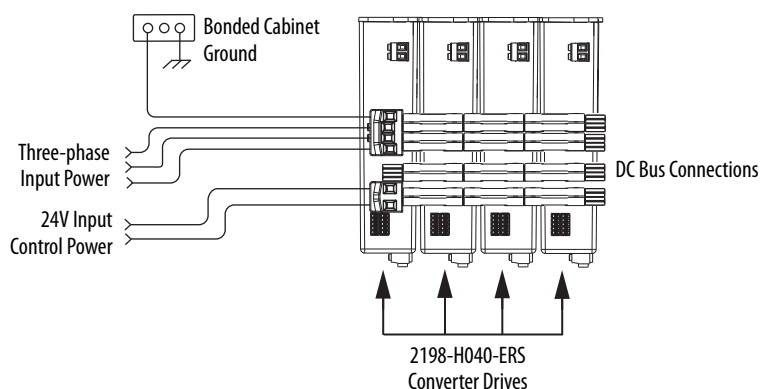

The available converter power to the system is  $(8.4 \bullet 4) \bullet 0.7 = 23.52$  kW. In this example, total motoring load must not exceed 23.52 kW. The available converter power was increased by 180% over the same drives in shared DC configuration.

## Control Power Current Calculations

Kinetix 5500 servo drives and the Bulletin 2198 capacitor module have different 24V DC power consumption. Factors to consider when calculating the combined current demand from your 24V DC power supply includes the following:

- Catalog number for each drive in the system
- Whether the motor or actuator includes the holding brake option
- Whether the system includes Bulletin 2198 capacitor modules (1 to 4 modules are possible)


**Table 87 - Control Power Current Demand**

Cat. No.	24V Current (non-brake motor) $A_{DC}$	24V Current (2 A brake motor) $A_{DC}$	24V Inrush Current <sup>(1)</sup> A
2198-H003-ERSx	0.4	2.4	2.0
2198-H008-ERSx			
2198-H015-ERSx	0.8	2.8	3.0
2198-H025-ERSx			
2198-H040-ERSx			
2198-H070-ERSx	1.3	3.3	2.0
2198-CAPMOD-1300	0.3	N/A	

(1) Inrush current duration is less than 30 ms.

## Kinetix 5500 System Current Demand Example

In this example, the Kinetix 5500 drive system includes two 2198-H040-ERS drives, four 2198-H008-ERS drives, and one capacitor module.

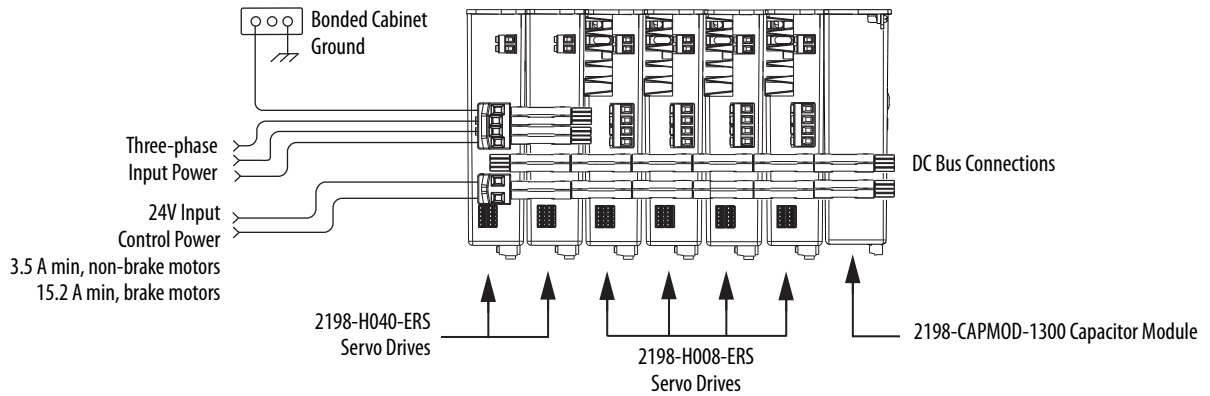**Figure 110 - Shared AC/DC Hybrid Configuration****Table 88 - Kinetix 5500 System Current Demand Calculations**

Kinetix 5500 Module Cat. No.	Qty	24V Current (non-brake motors) $A_{DC}$	24V Current (2 A brake motors) $A_{DC}$	24V Inrush Current <sup>(1)</sup> A
2198-H008-ERSx	4	$0.4 \times 4 = 1.6$	$2.4 \times 4 = 9.6$	$2 \times 4 = 8$
2198-H040-ERSx	2	$0.8 \times 2 = 1.6$	$2.8 \times 2 = 5.6$	$3 \times 2 = 6$
2198-CAPMOD-1300	1	$0.3 \times 1 = 0.3$	N/A	$2 \times 1 = 2$
Total current demand		3.5	15.2	16

(1) Inrush current duration is less than 30 ms.

## Energy Calculations

The Kinetix 5500 servo drives have internal shunt resistors for dissipating excessive energy. In addition, Bulletin 2097 external shunt resistors and Bulletin 2198 capacitor modules are available to increase the shared DC bus capacitance.

Use this table to calculate the total energy absorbing potential (joules) and determine if a capacitor module or external shunt resistor is needed.

**Table 89 - Energy Absorbing Potential**

Kinetix 5500 Drive Cat. No.	Internal Shunt <sup>(1)</sup> J	External Shunt kJ	Capacitor Module <sup>(1)</sup> J	Capacitor Module, max <sup>(2)</sup> J
2198-H003-ERSx	427.09	12.51	N/A	N/A
2198-H008-ERSx			554.4	554.4
2198-H015-ERSx	549.01	12.521	676.32	676.32
2198-H025-ERSx	575.223	12.549	702.53	957.162
2198-H040-ERSx	601.434	22.647	728.74	983.373
2198-H070-ERSx	1827.01	27.218	1954.3	2208.95

(1) Value assumes the use of one servo drive and one capacitor module.

(2) Value assumes the use of one servo drive and the maximum number of capacitor modules allowed.

Refer to Motion Analyzer software, version 7.0 or later, for custom shunt sizing.

## Motor Control Feature Support

This appendix provides feature descriptions for the induction motors and permanent-magnet motors that are supported by Kinetix 5500 servo drives.

Topic	Page
Frequency Control Methods	233
Skip Speeds	237
Flux Up	239
Current Regulator Loop Settings	242
Motor Category	242
Selection of Motor Thermal Models	247
Speed Limited Adjustable Torque (SLAT)	249
Motor Overload Retention	255
Torque Proving	256
Velocity Droop	259
Adaptive Tuning	260

### Frequency Control Methods

The Kinetix 5500 servo drives support three open-loop frequency control methods. These are the choices:

- **Basic Volts/Hertz** - This method is used in single asynchronous-motor applications
- **Basic Volts/Hertz - Fan Pump** - This method is similar to Basic Volts/Hertz, but is specifically tailored for fan/pump applications
- **Sensorless Vector with Slip Compensation** - This method is used for most constant torque applications. Provides excellent starting, acceleration, and running torque

To configure your induction motor in the Logix Designer application, refer to [Configure Induction-motor Frequency-control Axis Properties](#) on [page 125](#).

Open-loop frequency control is suitable in applications such as conveyors, pumps, and fans. Features include the following:

- Start Boost and Run Boost
- Electronic motor thermal-overload protection per Class 10 requirements
- Two skip frequencies, in which the drive does not operate
- All three-phase induction motors, suitable for variable speed drive (VFD) operation, are supported

**Table 90 - Motor Specifications**

Attribute	Value
Output frequency, max	590 Hz
Pole pairs, max	50
Motor cable length, max	50 m (164 ft) <sup>(1)</sup>

(1) Applies to all Kinetix 5500 (frame 2 and 3) drives. For Kinetix 5500 (frame 1) drives in continuous-flex applications, 30 m (98 ft) is the maximum cable length.


## Basic Volts/Hertz

Volts/hertz operation creates a fixed relationship between output voltage and output frequency. Voltage is applied to the motor, which is based on the operating frequency command at a fixed volts/hertz ratio. The ratio is calculated from the motor nameplate data and entered into the Logix Designer application > Axis Properties > Frequency Control category.

The Basic Volts/Hertz method provides various patterns. The default configuration is a straight line from zero to rated voltage and frequency. As seen in [Figure 111](#), you can change the volts/hertz ratio to provide increased torque performance when required by programming five distinct points on the curve.

**Table 91 - Basic Volts/Hertz Definitions**

Curve Feature	Definition
Start boost	Used to create additional torque for breakaway from zero speed and acceleration of heavy loads at lower speeds.
Run boost	Used to create additional running torque at low speeds. The value is typically less than the required acceleration torque. The drive lowers the boost voltage to this level when running at low speeds (not accelerating). This reduces excess motor heating that could result if the higher start/accel boost level were used.
Break voltage/frequency	Used to increase the slope of the lower portion of the Volts/Hertz curve, providing additional torque.
Motor nameplate voltage/frequency	Sets the upper portion of the curve to match the motor design. Marks the beginning of the constant power region.
Maximum voltage/frequency	Slopes the portion of the curve that is used above base speed.

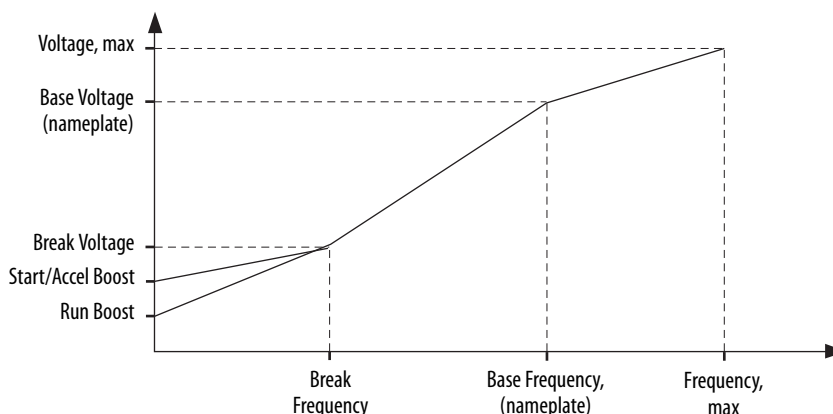**Figure 111 - Basic Volts/Hertz Method**



## Basic Volts/Hertz for Fan/Pump Applications

The Basic Volts/Hertz Fan/Pump (fan/pump) method is based on the Basic Volts/Hertz (V/Hz) method, but is specifically tailored for fan/pump applications.

**Figure 112 - Output Voltage Equation**

$$V_x = \left( \frac{f_x}{f_n} \right)^2 (V_n - V_{boost}) + V_{boost}$$

Where:

$V_x$  = Output voltage

$f_x$  = Output frequency


$V_n$  = Rated voltage

$f_n$  = Rated frequency

$V_{boost}$  = Run boost voltage

For maximum system efficiency, fan/pump loads use variable frequency drives that are equipped with a specific V/Hz curve where voltage is proportional to square of the frequency.

**Figure 113 - Basic Volts/Hertz Fan/Pump Method**

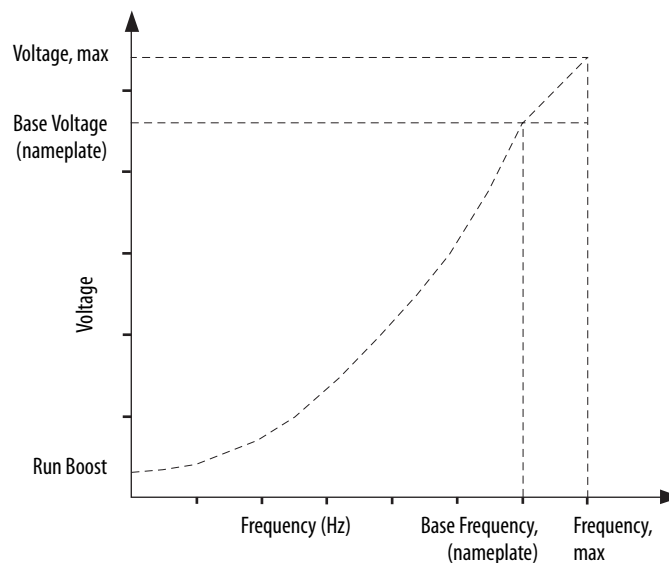


**TIP**

The Fan/Pump control method supports the run-boost attribute, but does not support break-voltage, break-frequency, or start-boost.

## Sensorless Vector

The Sensorless Vector method uses a volts/hertz core enhanced by a current resolver, slip estimator, and a voltage-boost compensator based on the operating conditions of the motor.

**Figure 114 - Sensorless Vector Method**

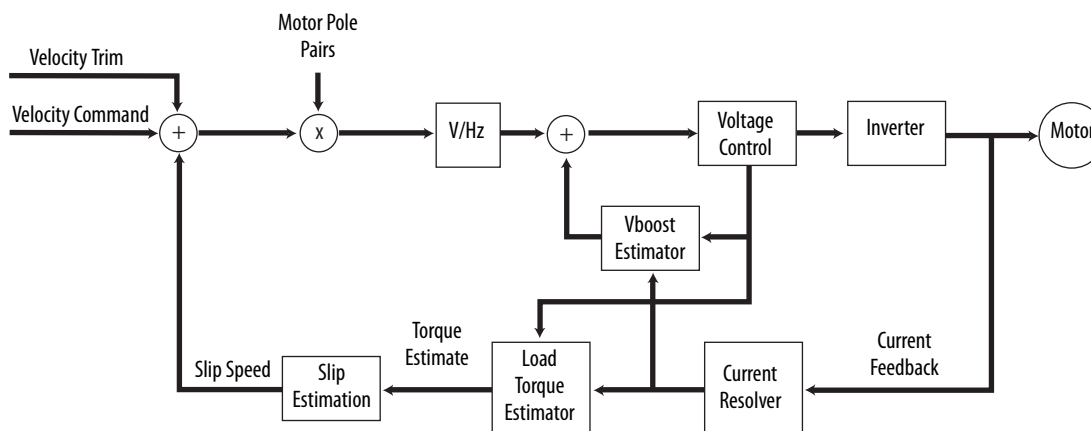


The algorithms operate on the knowledge of the relationship between the rated slip and torque of the motor. The drive uses applied voltages and measured currents to estimate operating slip-frequency. You can enter values to identify the motor resistance value or you can run a motor test to identify the motor resistance value (see [Motor Tests and Autotune Procedure](#) on [page 244](#)). Motor nameplate data and test results are ways to accurately estimate the required boost voltage.

The sensorless vector method offers better torque production and speed regulation over a wider speed range than basic volts/hertz.

Dynamic boost is applied internally to compensate voltage drop and improve starting torque.

**Figure 115 - Approximate Load Curve**

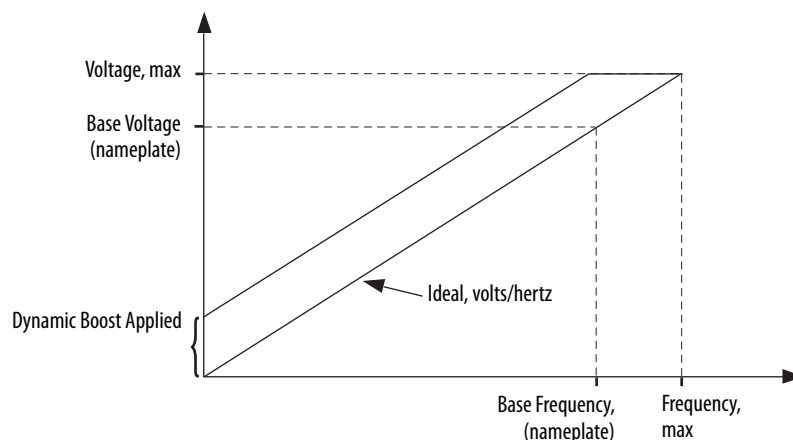


## Skip Speeds

Some machines have a resonant operating frequency (vibration speed) that is undesirable or could cause equipment damage. To guard against continuous operation at one or more resonant points, you can configure the skip-speed attributes in the Logix Designer application>Axis Properties>Parameter List category.

The value that is programmed into the SkipSpeed1 or SkipSpeed2 attribute sets the central speed of a skip-speed band within which the drive does not operate. The width of the band is determined by the SkipSpeedBand attribute. The range is split, half above and half below the SkipSpeed $x$  attribute. Any command set-point within this band is adjusted by the skip-speed feature to fall at either the upper or lower skip-speed band boundary value. The skip-speed feature contains hysteresis (25% of the SkipSpeedBand value) to prevent frequent switching of VelocityReference.

**Figure 116 - Single Skip Speed Example**

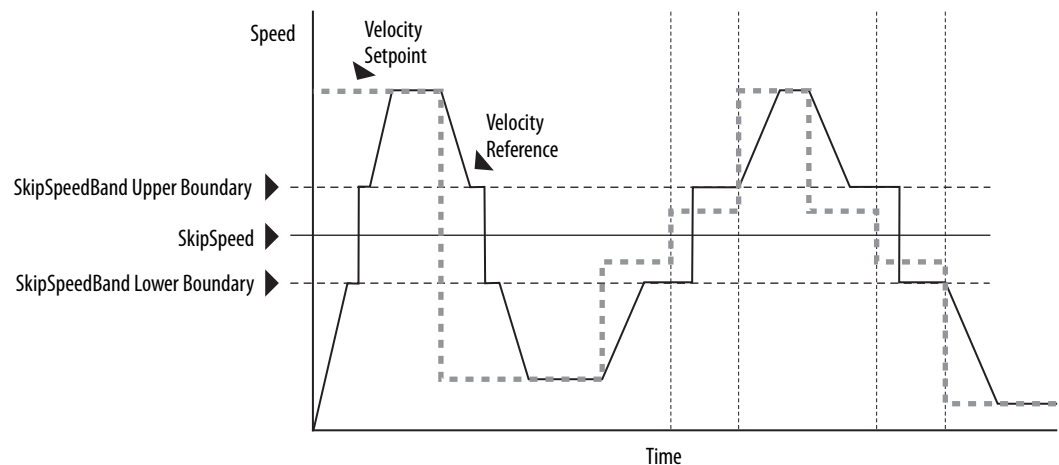

A SkipSpeedBand value of 0 disables the skip-speed feature.

---

**IMPORTANT** When a single SkipSpeed value is desired, the SkipSpeed1 and SkipSpeed2 settings must be the same.

---



---

**IMPORTANT** Acceleration and deceleration are affected by the skip-speed feature. Too large of a SkipSpeedBand value can result in an overcurrent drive fault.

---



---


**IMPORTANT** The MaximumFrequency attribute is always enforced. Skip-speed band boundary values beyond the MaximumFrequency value do not apply.

---

## Multiple Skip Speeds

The Kinetix 5500 drives feature two independent skip-speed attributes (SkipSpeed1 and SkipSpeed2) that use the same SkipSpeedBand.

**Figure 117 - Multiple Skip Speed Example**

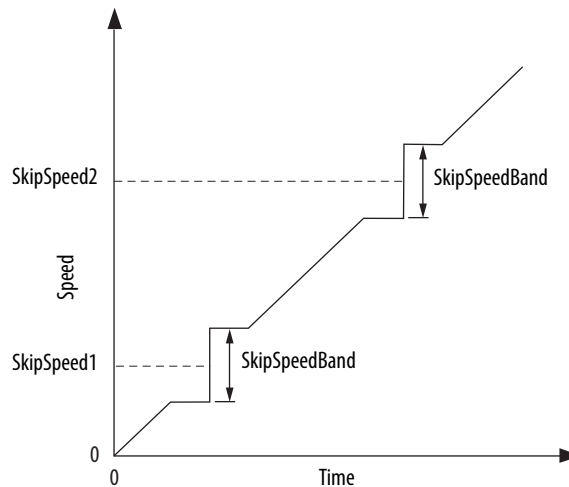


When skip-speed band boundaries of SkipSpeed1 and SkipSpeed2 overlap, the skip-speed hysteresis is calculated using the effective skip band.

In [Figure 118](#), SkipSpeed1 is set to 0 and SkipSpeed2 is set to 15 Hz. The skip band is 10 Hz wide.

At point A the axis is enabled, and the motor begins to rotate at -5 Hz even though the command is 0 Hz. As the command reaches hysteresis point the output frequency begins to follow the command. During deceleration, when the command decreases to 0 Hz, the output frequency continues at 5 Hz until the axis is disabled (point B), or the command is changed outside of the skip band.

**Figure 118 - Zero-speed Skip Frequency**

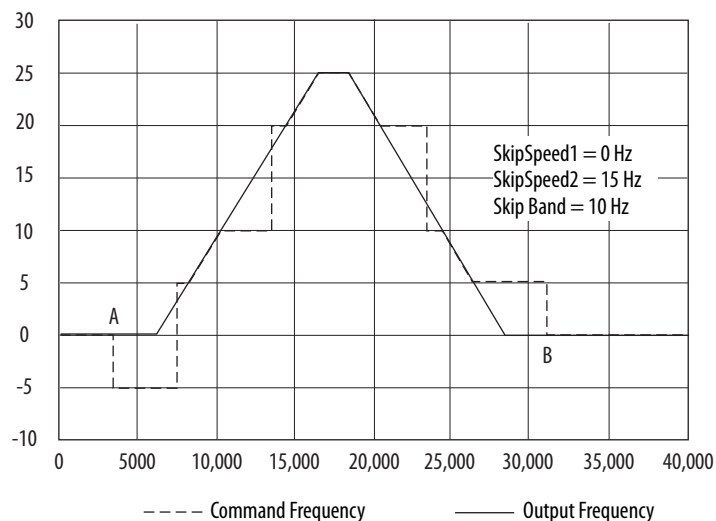


## Flux Up

AC induction motors require that flux builds in the motor stator before controlled torque can develop. To build flux, voltage is applied. There are two methods to flux the motor and three configurable FluxUpControl settings.

With the No Delay setting (normal start), flux is established when the output voltage and frequency are applied to the motor. While flux is building, the unpredictable nature of the developed torque can cause the rotor to oscillate even though acceleration of the load can occur. In the motor, the acceleration profile does not follow the commanded acceleration profile due to the lack of developed torque.


**Figure 119 - Acceleration Profile during Normal Start - No Flux Up**

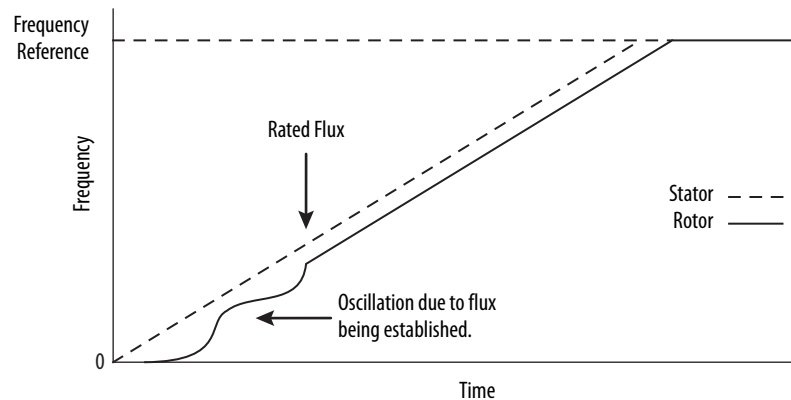

With the Automatic setting (default) DC current is applied to the motor so that flux builds before rotation. The flux-up time period is based on the level of flux-up current and the rotor time constant of the motor. The flux-up current is not adjustable.


In the Manual setting, DC current is applied to the motor so that flux builds before rotation. The flux-up time period is determined by the FluxUpTime attribute. The flux-up current is not adjustable.

**Figure 120 - Flux Up Current versus Flux Up Time**

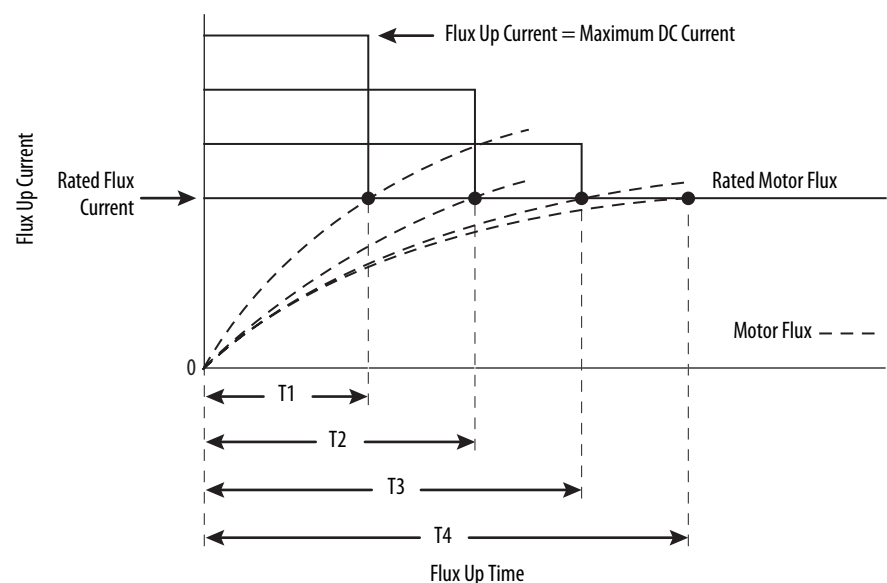

Once rated flux is reached in the motor, normal operation can begin and the desired acceleration profile achieved.

**Figure 121 - Rated Flux Reached**

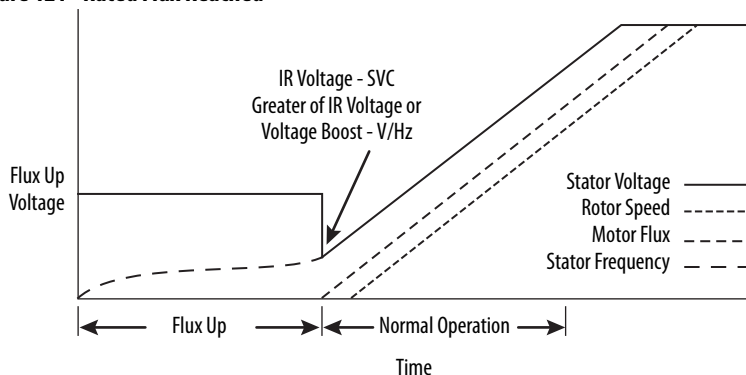

## Flux Up Attributes

ID	Access	Attribute	Conditional Implementation
558	Set	Flux Up Control	Ind Motor only 0 = No Delay 1 = Manual Delay 2 = Automatic Delay
559	Set	Flux Up Time <sup>(1)</sup>	Ind Motor only Units: Seconds Default: 0.0000 Min/Max: 0.0000 / 1000.00

(1) This is the time designated for the Manual Delay setting. This attribute is not supported by the Automatic delay method. The flux-up feature is disabled if FluxUpControl is set to Manual Delay and FluxUpTime is set to 0.

### FluxUpControl Attribute

When the motion axis is enabled, DC current is applied to an induction motor to build stator flux before transitioning to the Running state. This attribute controls how an induction motor is to be fluxed in the Starting state prior to transitioning to the Running state.

**Table 92 - FluxUp Control Delay Methods**

Delay Method	Description
No delay	The axis transitions immediately to the Running state while the motor flux is building.
Manual delay	The axis remains in the Starting state while the motor stator flux is building according to the Flux Up Time attribute.
Automatic delay	The drive determines the amount of delay time to fully flux the motor based on the motor configuration attribute data or measurements.


### FluxUpTime Attribute

When FluxUpControl is configured for Manual Delay, this attribute sets the length of delay time to fully flux the motor before transitioning to the Running state.

## Configure the Flux Up Attributes

Follow these steps to configure the flux-up attributes.

- 1. In the Controller Organizer, right-click an axis and choose Properties.
- 2. Select the Parameter List category and scroll to FluxUpControl.

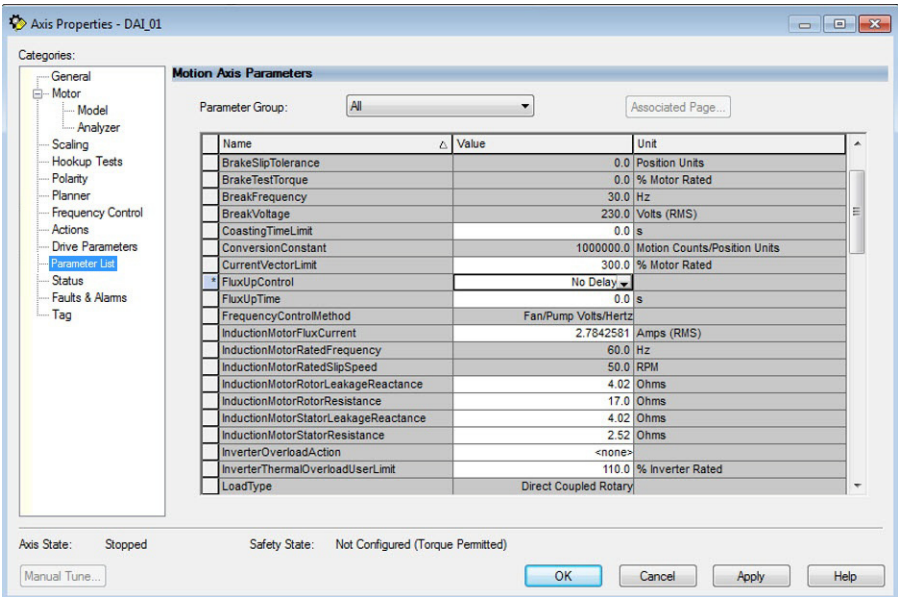

- 3. From the FluxUpControl pull-down menu, choose the proper delay value appropriate for your application.

CurrentVectorLimit	300.0
FluxUpControl	No Delay
FluxUpTime	No Delay
FrequencyControlMethod	Manual Delay
InductionMotorFluxCurrent	Automatic Delay

- 4. If you chose Manual Delay in [step 3](#), enter a value in the FluxUpTime attribute appropriate for your application.

If you chose No Delay or Automatic Delay in [step 3](#), the FluxUpTime attribute does not apply.

## Current Regulator Loop Settings

Current loop bandwidth is set differently based on the selected motor type.

**Table 93 - Current Regulator Loop Settings**

Motor Type	Default Torque/Current Loop Bandwidth Hz
Rotary permanent magnet	1000
Rotary induction	400
Linear permanent magnet	1000

### IMPORTANT

The Logix Designer application does not perform calculations when the Torque/Current Loop Bandwidth attribute is updated. This bandwidth affects many other gains and limits. Changing, (lowering) the torque loop bandwidth without updating all the dependent attributes can result in drive/motor instability.

## Motor Category

From the Motor category you can enter motor nameplate or datasheet values (phase-to-phase parameters) for permanent magnet motors.

In this example, the Motor category>Nameplate / Datasheet parameters, were taken from a typical motor performance datasheet. Max Speed and Peak Current values are typically application dependent.

**Figure 122 - Motor Nameplate / Datasheet Example**

Axis Properties - Axis\_2

Categories:

- General
  - Motor
  - Model
  - Analyzer
- Motor Feedback
  - Scaling
  - Hookup Tests
  - Polarity
- Autotune
- Load
  - Compliance
  - Friction
  - Observer
- Velocity Loop
- Acceleration Loop
- Torque/Current Loop
- Planner
- Homing
- Actions
- Drive Parameters
- Parameter List
- Status
- Faults & Alarms
- Tag

**Motor Device Specification**

Data Source: Nameplate Datasheet Parameters...

Catalog Number: <none> Change Catalog...

Motor Type: Rotary Induction

Units: Rev

**Nameplate / Datasheet - Phase to Phase parameters**

Rated Power:	0.75	kW	Pole Count:	4
Rated Voltage:	460.0	Volts (RMS)	Rated Frequency:	60.0 Hertz
Rated Speed:	1725.0	RPM	Max Speed:	5400.0 RPM
Rated Current:	1.5	Amps (RMS)	Peak Current:	3.0 Amps (RMS)
			Motor Overload Limit:	100.0 % Rated

Axis State: Safety State:

Manual Tune... OK Cancel Apply Help

See [Figure 123](#) for motor manufacturer performance data sheet example.



**Figure 123 - Motor Manufacturer Performance Data Sheet**

CERTIFICATION DATA SHEET

TYPICAL MOTOR PERFORMANCE DATA

HP	kW	SYNCR. RPM	F.L. RPM	FRAME	ENCLOSURE	KVA CODE		DESIGN	
1	.75	1800	1725	56C	TENV	P		A	
PH	Hz	VOLTS	FL AMPS	START TYPE	DUTY	INSL	S.F.	AMB°C	ELEVATION
3	60	460	1.5	INVERTER ONLY	CONTINUOUS	F3	1.0	40	3300
FULL LOAD EFF: 84		3/4 LOAD EFF: 82.5		1/2 LOAD EFF: 78.5		GTD. EFF		ELEC. TYPE	
FULL LOAD PF: 75		3/4 LOAD PF: 65.5		1/2 LOAD PF: 51		81.5		SQ CAGE INV DUTY	
F.L. TORQUE		LOCKED ROTOR AMPS		L.R. TORQUE		B.D. TORQUE		F.L. RISE°C	
3 LB-FT		30 / 15		10.8 LB-FT 360%		15 LB-FT 500%		65	
SOUND PRESSURE @ 3 FT.		SOUND POWER		ROTOR WK ^2		MAX. WK ^2		SAFE STALL TIME	
62 dBA		72 dBA		0.11 LB-FT ^2		0 LB-FT ^2		0 SEC.	
STARTS / HOUR		APPROX. MOTOR WGT							
42 LBS.									


EQUIVALENT WYE CKT. PARAMETERS (OHMS PER PHASE)

R1	R2	X1	X2	XM
8.378	5.6232	10.7068	9.9116	278.036
RM	ZREF	XR	TD	TD0
11132.8	284	1.7	0.0071	0.136

*Motor>Model Category*

From the Motor>Model category you can enter additional motor nameplate or datasheet values (phase-to-neutral parameters) for induction motors.

The Motor>Model parameters are used in closed-loop induction-motor control mode, sensorless vector control mode, and when FluxUp is enabled. You can enter these parameter values directly from the motor nameplate/datasheet or indirectly by running a Motor>Analyzer test.

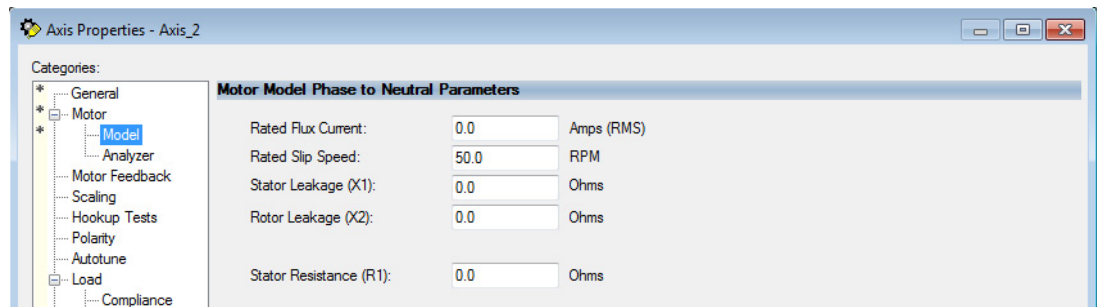
**IMPORTANT**

If you do not know the Stator Leakage, Rotor Leakage, Stator Resistance, Rated Flux Current, and system inertia, you can run the static motor test and Autotune procedure to determine the parameter values.

### Motor>Analyzer Category

From the Motor>Analyzer category you can perform three types of tests to identify motor parameters.

In this example, the Calculate Model test was run. If the Motor>Analyzer test executes successfully and you accept the test values, they populate the Model Parameter attributes.

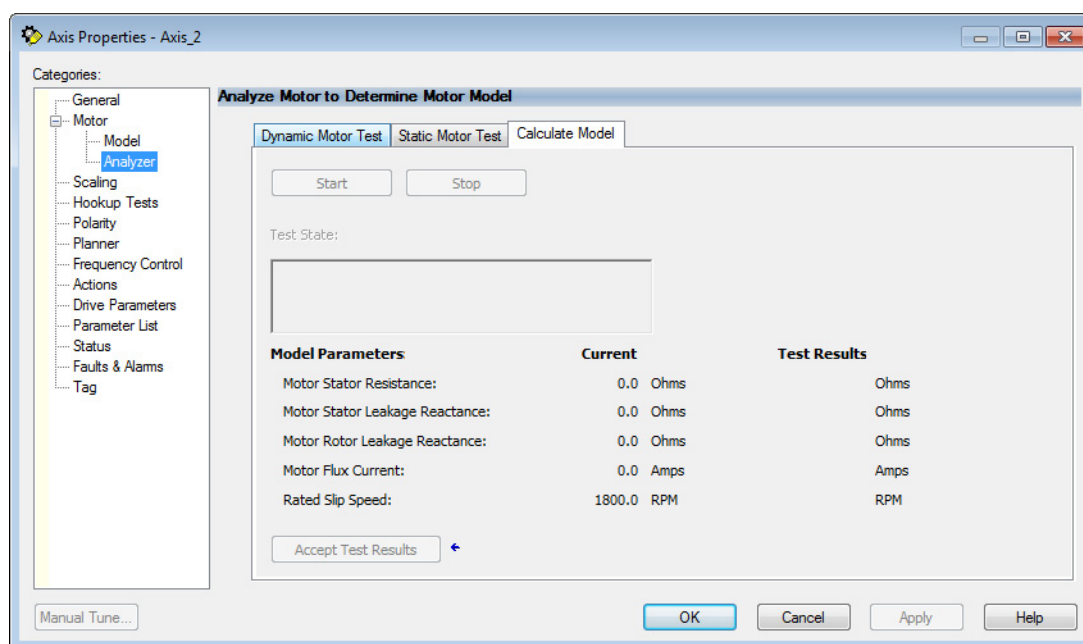

## Motor Tests and Autotune Procedure

You can perform three types of tests to identify motor parameters and one test for motor/system inertia. These parameters are used by sensorless-vector frequency-control and induction motor closed-loop modes. [Table 94](#) recommends which test to use based on the control mode and application.

**Table 94 - Motor Tests and Autotune Matrix**

Control Mode	Description	Calculate	Static	Dynamic	Autotune (inertia test)
Induction motor - Frequency control	Basic volts/hertz	Not required	Not required	Not required	Not required
	Basic volts/hertz for Fan/Pump	Not required	Not required	Not required	Not required
	Sensorless vector	Required	Preferred	Not required	Not required
Induction motor - Closed-loop control		Required	Preferred <sup>(1)</sup>	Preferred	Required <sup>(2)</sup>

(1) If it is not desired to rotate the motor (due to coupled load) you can perform this test for induction motor closed-loop mode and skip the Dynamic test. The dynamic test provides the best results for induction motor closed-loop mode.


(2) Autotune must be performed to identify the inertia motor value before running a dynamic test.

For motor/system autotune procedure, see [Tune Induction Motors](#) on [page 147](#) for more information.

The Motor>Analyzer category offers three choices for calculating or measuring electrical motor data.

Follow these steps to run motor tests and identify motor parameters.

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the Motor>Analyzer category and select the motor test appropriate for your application.

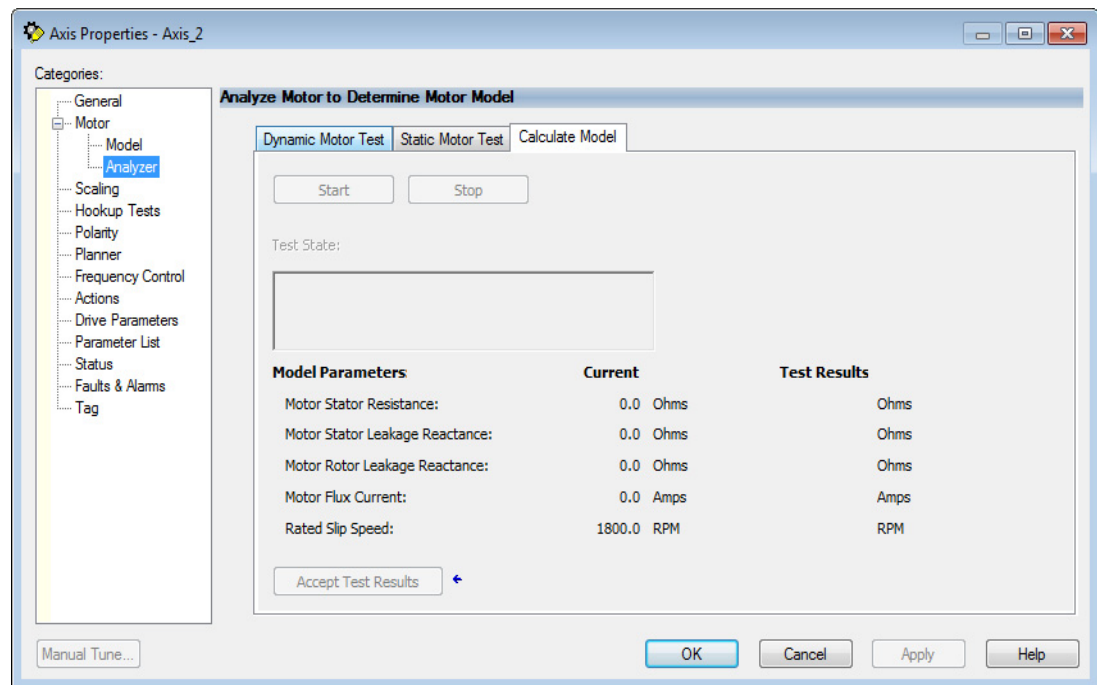

3. Click Start to run the test.
4. Click Accept Test Results to save the values.
5. Click OK.

**Table 95 - Motor>Analyzer Tests**

Motor Test Type	Description
Calculate	When a Calculate test is run, the drive uses motor nameplate data to estimate the motor's Rated Flux Current, Stator Resistance (Rs), Stator Leakage Reactance (X1) and Rotor Leakage Reactance (X2). No measurements are taken when using the Calculate test.
Static	Use the Static test if the motor shaft cannot rotate or if it is already coupled to the load. Only tests that do not create motor movement are run. During this test, the Stator Resistance (Rs), Stator Leakage Reactance (X1), and Rotor Leakage Reactance (X2) values are measured during a series of static tests. The Rated Flux Current is estimated, since measurement of this value requires motor movement.
Dynamic	Dynamic tests are run with the motor disconnected from the load, because the motor shaft turns and there are no travel limits. This is often the most accurate test method. During this test, the Stator Resistance (Rs), Stator Leakage Reactance (X1) and Rotor Leakage Reactance (X2) values are measured in a series of static tests. The Rated Flux Current is measured during a rotational test, in which the drive commands 75% of the motor rated speed.

---

<b>IMPORTANT</b>	The Static and Dynamic tests require that you enter initial estimates for the Rated Flux Current, Stator Resistance (Rs), Stator Leakage Reactance (X1), and Rotor Leakage Reactance (X2) into the Motor Model fields. This can be done by running and accepting the results of a Calculate test, or by entering the values directly into the Logix Designer application.
------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

---

---

<b>IMPORTANT</b>	The Dynamic test uses the Ramp Acceleration and Ramp Deceleration attributes to set the rotational test ramp-up and ramp-down times. If the resulting acceleration/deceleration times are less than 10 seconds, 10 seconds is used. If these attributes are not supported, 10 seconds is also used.
------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

---

---

<b>IMPORTANT</b>	When configured for closed-loop control, the Dynamic test requires that the system inertia is set in the Logix Designer application. This can be done by running and accepting the results of an Autotune test, or by entering the motor inertia value directly into the Logix Designer application.
------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

---

---

<b>IMPORTANT</b>	If using the Dynamic test in Frequency Control mode, uncouple the motor from any load or results may not be valid. In closed-loop control, either a coupled or uncoupled load produces valid results.
------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

---

---

<b>IMPORTANT</b>	When configured for closed-loop control, the Dynamic test uses the velocity regulator tuning as entered into the Logix Designer application. If the motor is coupled to a load, the velocity regulator tuning may need to be adjusted to make sure the velocity response is well controlled. The Dynamic test fails if the steady-state velocity feedback is not within a $\pm 30\%$ tolerance of the commanded velocity.
------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

---

---

<b>IMPORTANT</b>	The Dynamic test is not supported in closed-loop Torque Control.
------------------	------------------------------------------------------------------

---

---

<b>IMPORTANT</b>	The Dynamic test does not support travel limits.
------------------	--------------------------------------------------

---


## Selection of Motor Thermal Models

The Kinetix 5500 drives contain two motor thermal-overload protection algorithms that you can use to prevent the motor from overheating.

### Generic Motors

The default thermal model is a generic I<sup>2</sup>T Class 10 overload protection algorithm. This model is active if the MotorWindingToAmbientResistance or the MotorWindingToAmbientCapacitance values are 0.0. The purpose of this algorithm is to limit the time a motor is operating with excessive levels of current. The relationship between Motor Overload Factory Limit trip-time and motor output current is shown in [Figure 124](#).

**Figure 124 - Motor Overload Curve**

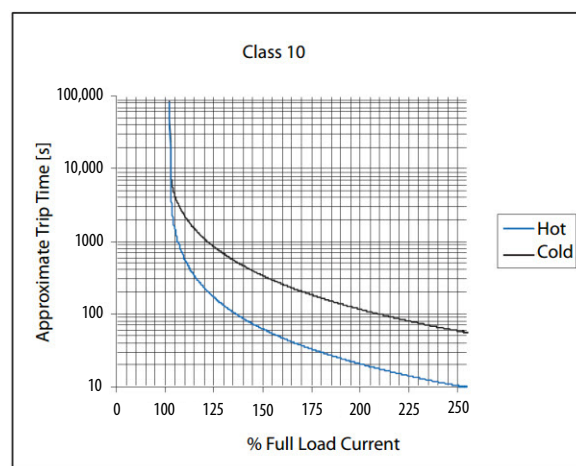

You can use the MotorOverloadLimit attribute (default of 100%, max of 200%) to increase the motor overload trip-time by artificially increasing the motor rated current (for thermal protection only). MotorOverloadLimit should only be increased above 100% if cooling options are applied. Increasing MotorOverloadLimit causes MotorCapacity to increase more slowly.

The generic motor thermal model also derates the motor rated current (for thermal protection only) when operating at low speeds. The derating factor is 30% at 0 Hz and 0% at 20 Hz, with linear interpolation between. Operating at output frequencies less than 20 Hz causes MotorCapacity to increase more quickly.

When the generic motor thermal-model is active, the MotorCapacity attribute increases only if the motor output current is greater than the effective motor rated current (taking into account the MotorOverloadLimit and low speed derating factor). The default MotorThermalOverloadFactoryLimit and MotorThermalOverloadUserLimit values for this thermal model are both 100%.

#### **IMPORTANT**

The generic motor-thermal model does not support Current Foldback as a Motor Overload Action.

## Thermally Characterized Motors

If the `MotorWindingToAmbientResistance` and `MotorWindingToAmbientCapacitance` attribute values are both non-zero, the motor is considered thermally characterized and an alternate motor thermal model is run. The purpose of this algorithm is to limit the time a motor is operating with excessive levels of current. This thermal model uses the first-order time constant determined from the `MotorWindingToAmbientResistance` and `MotorWindingToAmbientCapacitance` values to estimate the motor thermal capacity based on the motor output current.

The `MotorOverloadLimit` attribute (default of 100%, max of 200%) can be used to increase the motor overload trip-time by increasing the `MotorThermalOverloadFactoryLimit` value. The `MotorOverloadLimit` should be increased above 100% only if cooling options are applied. Increasing `MotorOverloadLimit` does not change the behavior of `MotorCapacity`.

This thermal model supports setting the `MotorOverloadAction` attribute as `Current Foldback`. Selecting the `Current Foldback` action results in a reduction in the current reference via the `MotorThermalCurrentLimit` attribute value that is reduced in proportion the percentage difference between the `MotorCapacity` and the `MotorOverloadLimit` values.

When this thermal model is active, the `MotorCapacity` attribute is non-zero if the motor output current is non-zero. The default `MotorThermalOverloadFactoryLimit` and `MotorThermalOverloadUserLimit` values for this thermal model are both 110%.

---

**IMPORTANT**

This thermal model does not derate the motor-rated current when operating at low speeds. Operating at low output frequencies does not cause the `MotorCapacity` behavior to change.

---

## Speed Limited Adjustable Torque (SLAT)

Speed limited adjustable torque (SLAT) is a special mode of operation used primarily in web handling applications. While configured for SLAT, the drive typically operates as a torque regulator. The drive can automatically enter velocity regulation based on conditions within the velocity regulator and the magnitude of the velocity regulator's output, relative to the applied TorqueTrim attribute.

A torque regulated application can be described as any process requiring tension control. For example, a winder or unwinder with material being drawn or pulled with a specific tension required. The process also requires that another element set the speed.

When operating as a torque regulator, the motor current is adjusted to achieve the desired torque. If the material being wound or unwound breaks, the load decreases dramatically and the motor can potentially go into a runaway condition.

The SLAT feature is used to support applications that require a robust transition from torque regulation to velocity regulation (and vice versa). The SLAT feature can be configured via the SLATConfiguration attribute as:

**Table 96 - SLAT Configuration Descriptions**

Name	Description
SLAT Disable	SLAT function is disabled. Normal Velocity Loop operation.
SLAT Min Speed/Torque	Drive automatically switches from Torque regulation to Velocity regulation if VelocityError < 0 and switch back to Torque regulation if VelocityError > SLATSetPoint for SLATTimeDelay.
SLAT Max Speed/Torque	Drive automatically switches from Torque regulation to Velocity regulation if VelocityError > 0 and switches back to Torque regulation if VelocityError < SLATSetPoint for SLATTimeDelay.

Direction of the applied torque and direction of the material movement determine whether SLAT minimum or SLAT maximum mode should be used.

## SLAT Min Speed/Torque


SLAT Min Speed/Torque is a special mode of operation primarily used in web handling applications. The drive typically operates as a torque regulator, provided that the TorqueTrim attribute is less than the torque output due to the velocity regulator's control effort. The drive can automatically enter velocity regulation based on conditions within the velocity regulator and the magnitude of the velocity regulator's output relative to the torque reference.

When used for SLAT control, an application dependent VelocityCommand value is applied to the drive via an MAJ instruction. An application dependent TorqueTrim value is also applied via cyclic write. Under normal operation, VelocityCommand is set to a level that results in the velocity regulator's control effort becoming saturated when the motor's speed is mechanically limited. The TorqueReference value equals the TorqueTrim value, resulting in a positive VelocityError value.

Should the mechanical speed limitation be removed (example: web break), the motor accelerates and VelocityError becomes negative. At this time, a forced transition to velocity regulation occurs, and the motor's speed is regulated to the VelocityCommand attribute.

The axis remains in velocity regulation until VelocityError exceeds SLATSetPoint for a time specified by SLATTimeDelay. At this point, the axis returns to operating as a torque regulator.

**Figure 125 - SLAT Min Speed/Torque**

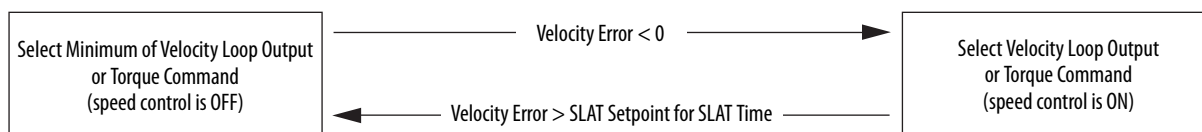

See the Integrated Motion on the EtherNet/IP Network Reference Manual, publication [MOTION-RM003](#), for more information on SLAT attributes.



## SLAT Max Speed/Torque


SLAT Max Speed/Torque is a special mode of operation primarily used in web handling applications. The drive typically operates as a torque regulator, provided that the TorqueTrim attribute is greater than the torque output due to the velocity regulator's control effort. The drive can automatically enter velocity regulation based on conditions within the velocity regulator and the magnitude of the velocity regulator's output relative to the torque reference.

When used for SLAT control, an application dependent VelocityCommand value is applied to the drive via an MAJ instruction. An application dependent TorqueTrim value is also applied via cyclic write. Under normal operation, VelocityCommand is set to a level that results in the velocity regulator's control effort becoming saturated when the motor's speed is mechanically limited. The TorqueReference value equals the TorqueTrim value, resulting in a positive VelocityError value.

Should the mechanical speed limitation be removed (example: web break), the motor accelerates and VelocityError becomes negative. At this time, a forced transition to velocity regulation occurs, and the motor's speed is regulated to the VelocityCommand attribute.

The axis remains in velocity regulation until VelocityError is less than SLATSetPoint for a time specified by SLATTimeDelay. At this point, the axis returns to operating as a torque regulator.

**Figure 126 - SLAT Max Speed/Torque**

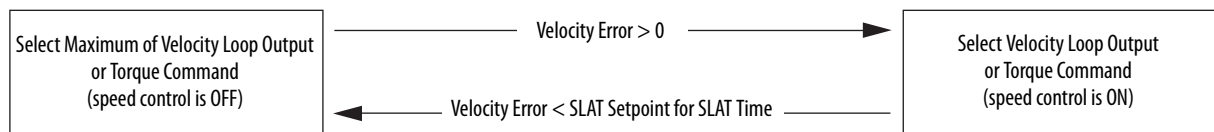

See the Integrated Motion on the EtherNet/IP Network Reference Manual, publication [MOTION-RM003](#), for more information on SLAT attributes.

## SLAT Attributes

ID	Access	Attribute	Conditional Implementation
833	Set	SLAT Configuration	Ind Motor only 0 = SLAT Disable <sup>(1)</sup> 1 = SLAT Min Speed/Torque 2 = SLAT Max Speed/Torque
834	Set	SLAT Set Point	Ind Motor only Velocity Units
835	Set	SLAT Time Delay	Ind Motor only Seconds


(1) SLAT Disable, when viewed in version 28.00 (and earlier) of the Logix Designer application, reads Torque Only. This is expected to change to SLAT Disable in a future version.

## Configure the Axis for SLAT

Follow these steps to configure the SLAT attributes.


1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the General category.

The General dialog box appears.

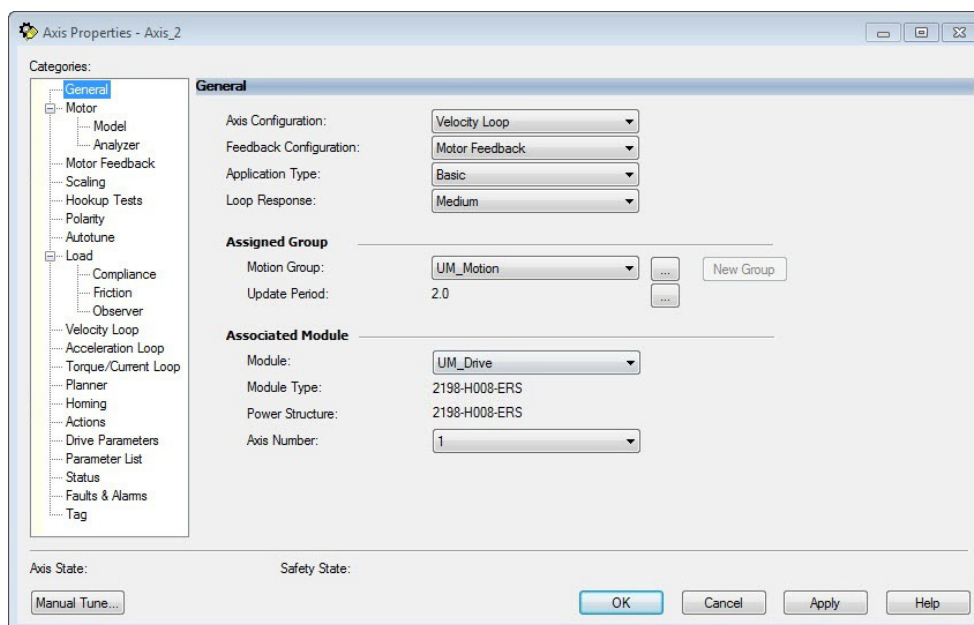

3. From the Axis Configuration pull-down menu, choose Velocity Loop.


The Velocity Loop dialog box appears.

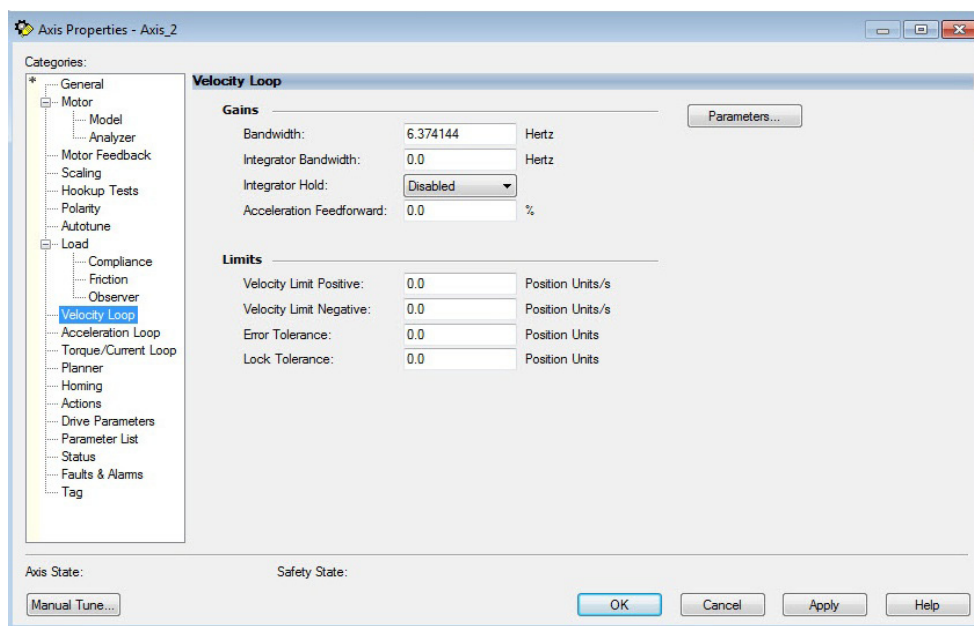

4. Enter values for the Velocity Loop attributes appropriate for your application.

- 5. Click Apply.
- 6. Select the Parameters List category.

The Motion Axis Parameters dialog box appears.

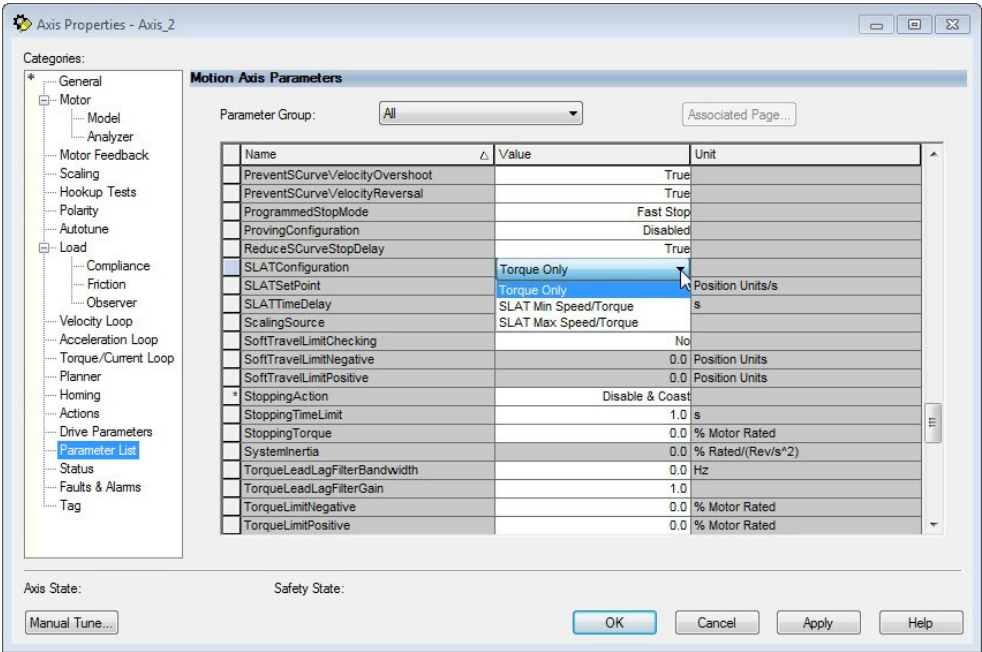

- 7. From the SLATConfiguration pull-down menu, choose the SLAT configuration appropriate for your application.


**IMPORTANT** SLAT Disable, when viewed in the Logix Designer application, version 28.00 (and earlier) reads Torque Only. This is expected to change to SLAT Disable in a future version.

- 8. Click Apply.
- 9. Enter values for SLATSetPoint and SLATTimeDelay attributes appropriate for your application.

ReduceSCurveStopDelay	True	
SLATConfiguration	Torque Only	
SLATSetPoint	0.0	Position Units/s
SLATTimeDelay	0.0	s
ScalingSource	From Calculator	

- 10. Click OK.
- 11. Select the Drive Parameters category.

The Drive Parameters to Controller Mapping dialog box appears.

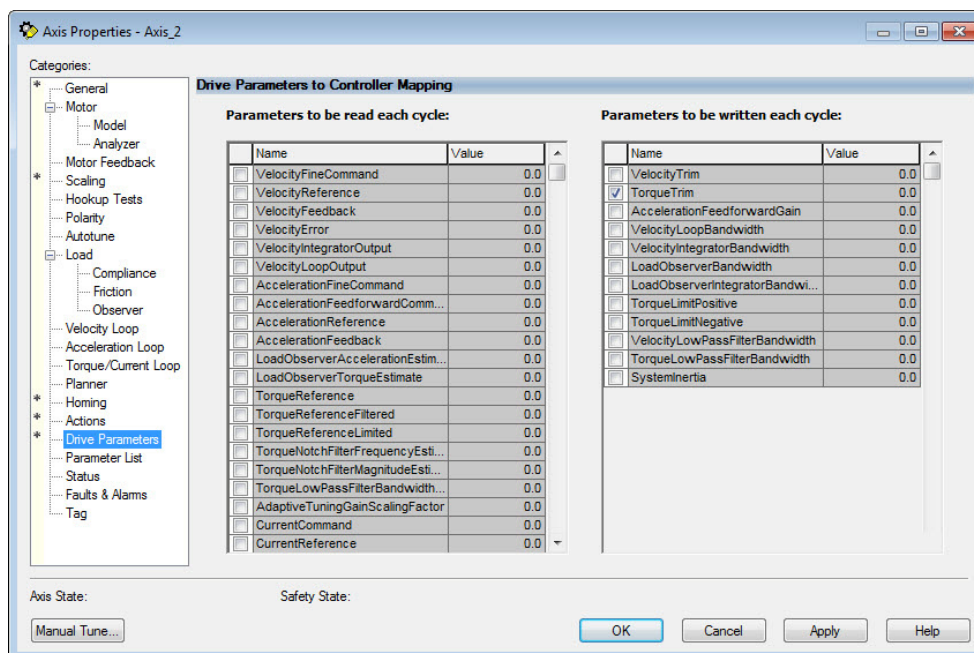

When using SLAT with the Kinetix 5500, the velocity command is sent to the drive via an MAJ instruction. The torque command is sent via the cyclic write TorqueTrim attribute. See the Integrated Motion on the EtherNet/IP Network Reference Manual, publication [MOTION-RM003](#), for more information on cyclic read and cyclic write.

- When using SLAT, start the axis with the MSO instruction.
- The VelocityCommand is sent via the MAJ instruction.
- The TorqueCommand is sent to AxisTag.TorqueTrim.
- To make changes to the VelocityCommand, you must re-trigger the MAJ with the Speed value or use a MCD (motion change dynamics) instruction.
- To stop the axis use a MAS instruction.
- The axis accelerates and decelerates at the MAJ instruction programmed Acceleration and Deceleration rates.
- You can also change the rates using the MCD instruction.

## Motor Overload Retention

The motor overload retention feature protects the motor in the event of a drive power-cycle, in which the motor thermal state is lost.

With motor overload retention, upon drive power-up the MotorCapacity attribute initially reads:

- 20% if the motor is configured to use an integral thermal switch or an integral motor winding temperature is available
- 50% if the motor is not configured to use an integral thermal switch or an integral motor winding temperature is not available

If you have a separate monitoring algorithm within your Logix5000 controller, you can use the MotorCapacity attribute  $(635)_{10}$  or  $(27B)_{16}$  to change the initial MotorCapacity value that the motor overload retention feature populates. You can write to the MotorCapacity attribute only in the Stopped state after the initial power-up. You cannot write to the MotorCapacity attribute after the axis is enabled. Use a message instruction to write to the value.

In this example, the source element tag motorcapacity is a REAL Data type.

Message Configuration - MTRCAP

Configuration | Communication | Tag

Message Type: CIP Generic

Service Type: Set Attribute Single

Source Element: motorcapacity

Source Length: 4 (Bytes)

Service Code: 10 (Hex) Class: 42 (Hex) Destination Element:

Instance: 1 Attribute: 27b (Hex)

☐ Enable
 ☐ Enable Waiting
 ☐ Start
 ☒ Done
 Done Length: 0

☐ Error Code:
 Extended Error Code:
 ☐ Timed Out

Error Path: D057\_Velocity

Error Text:

OK Cancel Apply Help

## Torque Proving

The torque proving feature is designed to determine if motor power wiring is electrically connected to a motor and that reasonable current control exists. This attribute enables the operation of the drive's torque proving functions that work in conjunction with mechanical brake control.

When the ProvingConfiguration attribute is enabled, the drive performs a torque prove test of the motor current while in the Starting state to prove that current is properly flowing through each of the motor phases before releasing the brake. If the torque prove test fails, the motor brake stays engaged and a FLT-S09 Motor Phase Loss exception (fault) is generated.

### IMPORTANT

The mechanical brake must be set as soon as the drive is disabled. When the brake is under the control of the axis state machine, this is automatic. But, when controlled externally, failure to set the brake when the drive is disabled can cause a free-fall condition on a vertical application.

**Table 97 - Torque Proving Startup Sequence**

Startup Phase	Description
Phase 1	When the drive receives an enable request, the Starting state begins execution and torque proving starts.
Phase 2	The torque proving feature ramps current to the motor-phase output connector and verifies that the current feedback circuitry detects current on each of the phases.
Phase 3	Once motor-current feedback has been verified in each motor phase, the drive attempts to enable the current control loop at a user-specified current level, and verifies that the current-loop error tolerance is within range.

Torque proving is available for all motoring configurations including closed-loop servo control and induction motors.

For permanent magnet (PM) motors, the drive attempts to apply current to the motor phases such that all current through the motor is flux current. However, due to the electrical angle of the motor at the time of the MSO instruction, it may not be possible to verify the motor phase wiring with only flux current. Therefore, with a PM motor it is possible that the motor shaft can move slightly during torque proving if no motor brake exists to hold the load.


## Torque Proving Attributes

ID	Access	Attribute	Conditional Implementation
590	SSV	Proving Configuration	0 = Disabled 1 = Enabled
591	SSV	Torque Prove Current	% Motor Rated Units: Amps Default: 0.000 Min/Max: 0/10,000

## Torque Proving Configuration

Follow these steps to configure the torque proving attributes.

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the Parameter List category and scroll to ProvingConfiguration.

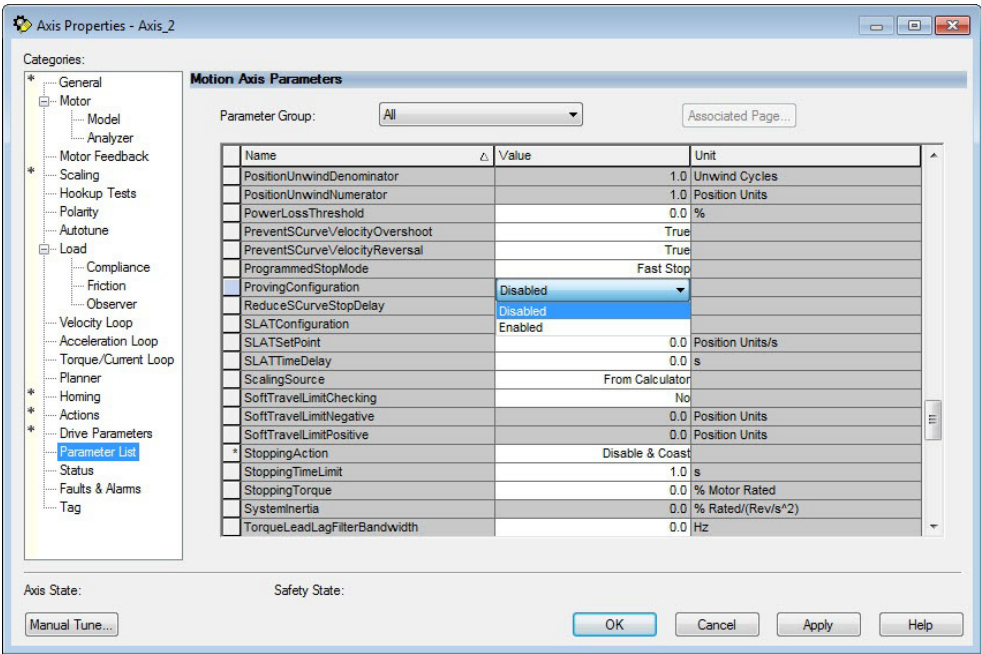

3. From the ProvingConfiguration pull-down menu, choose Enabled to enable the torque proving feature.

TorqueOffset	0.0	% Motor Rated
TorqueProveCurrent	0.0	% Motor Rated
TorqueRateLimit	1000000.0	% Motor Rated/s

4. Enter a value in the TorqueProveCurrent attribute appropriate for your application.
5. Click OK.

The TorqueProveCurrent attribute is active only if ProvingConfiguration is set to Enabled. TorqueProveCurrent lets you specify the amount of current that is used during the torque proving test and calculated as a percentage of motor rating. The higher the TorqueProveCurrent value the more current the drive delivers to the motor to verify that the motor phase wiring is available and capable of that current level. High current levels conversely causes more thermal stress and (potentially) can cause more torque to be driven against the motor brake during the test. If the TorqueProveCurrent level selected is too small, the drive cannot distinguish the proving current from noise, and in this case the drive posts an INHIBIT M04 torque-proving configuration fault code. The minimum amount of torque proving current depends on catalog number of the drive.

## Torque Proving Current Example

In this example, a 2198-H025-ERSx servo drive is paired with a VPL-B1003T-C motor with 6.77 A rms rated current. Use the torque-proving equation and table to calculate the minimum torque-proving current as a percentage of motor rated current.

**Figure 127 - Torque Proving Equation**

$$\left( \frac{\text{Rating From Table}}{\text{Motor Rated Current}} \right) \times 100\% = \frac{0.5746 \text{ A}}{6.77 \text{ A}} \times 100\% = 8.49\%$$

**Table 98 - Recommended Torque Proving Current**

Drive Cat. No.	Torque Proving Current, min A, rms
2198-H003-ERSx	0.2514
2198-H008-ERSx	0.6285
2198-H015-ERSx	1.257
2198-H025-ERSx	2.011
2198-H040-ERSx	3.268
2198-H070-ERSx	5.782



## Velocity Droop

The velocity droop function can be useful when some level of compliance is required due to rigid mechanical coupling between two motors. The feature is supported when the axis is configured for Frequency Control, Velocity Control, or Position Control.

### Closed Loop Control

The closed-loop velocity droop function is supported when configured for either Velocity or Position control. The velocity error input to the integral term is reduced by a fraction of the velocity regulator's output, as controlled by the VelocityDroop attribute. Therefore, as torque loading on the motor increases, actual motor speed is reduced in proportion to the droop gain. This is helpful when some level of compliance is required due to rigid mechanical coupling between two motors.

---

<b>IMPORTANT</b>	The closed-loop velocity droop function acts to reduce the velocity error input to the integral term, but never changes the polarity of the velocity error.
------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------

---



---

<b>IMPORTANT</b>	When configured for closed-loop control, the units of the VelocityDroop attribute are Velocity Control Units / Sec / % Rated Torque.
------------------	--------------------------------------------------------------------------------------------------------------------------------------

---

### Frequency Control

The velocity droop function is also supported when configured for Frequency Control. As the estimated Iq current within the motor increases, the velocity reference is reduced in proportion to the VelocityDroop attribute. Therefore, as torque loading on the motor increases, actual motor speed is reduced in proportion to the droop gain. This is helpful when some level of compliance is required due to rigid mechanical coupling between two motors.

---

<b>IMPORTANT</b>	The frequency-control velocity droop function acts to reduce the velocity reference, but never changes the direction of the velocity reference.
------------------	-------------------------------------------------------------------------------------------------------------------------------------------------

---



---

<b>IMPORTANT</b>	When configured for frequency control, the units of the VelocityDroop attribute are Velocity Control Units / Sec / % Rated Iq Current.
------------------	----------------------------------------------------------------------------------------------------------------------------------------

---


### Velocity Droop Attribute

ID	Access	Attribute	Conditional Implementation
464/321	SSV	Velocity Droop	Velocity Units / Sec / % Rated

## Velocity Droop Configuration

Follow these steps to configure the velocity droop attribute.

1. In the Controller Organizer, right-click an axis and choose Properties.
2. Select the Parameter List category and scroll to VelocityDroop.

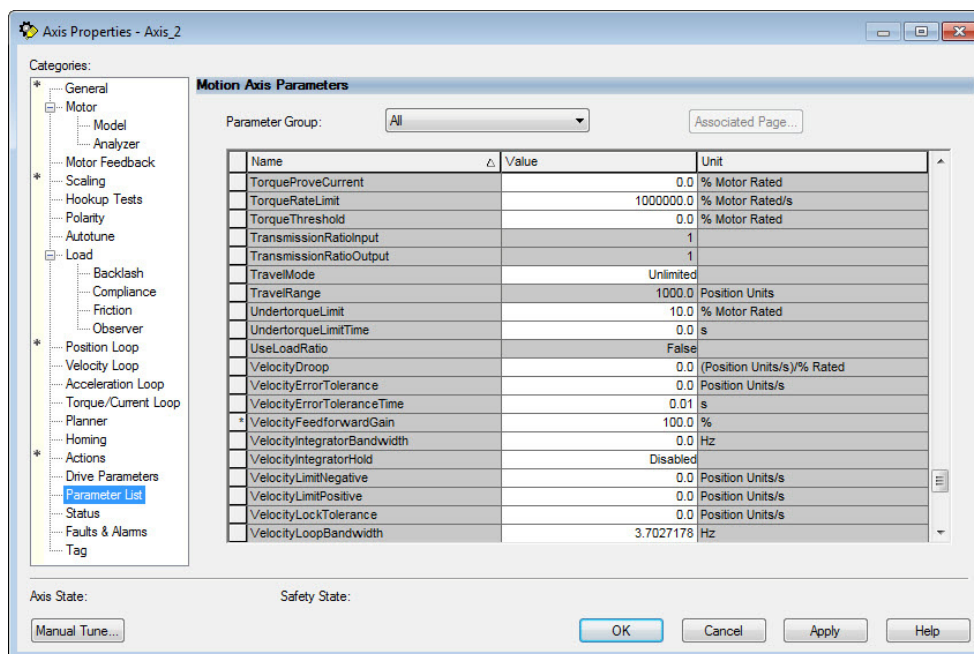

3. Enter a value in the Velocity Droop attribute appropriate for your application.
4. Click OK.

## Adaptive Tuning

The adaptive tuning feature is an algorithm inside the Kinetix 5500 drives. The algorithm continuously monitors and, if necessary, adjusts or adapts various filter parameters and control-loop gains to compensate for unknown and changing load conditions while the drive is running. Its primary function is to:

- Automatically adjust torque-loop notch and low-pass filter parameters to suppress resonances
- Automatically adjust control-loop gains to avoid instability when detected

See Motion System Tuning Application Techniques, publication [MOTION-AT005](#), for more information on the AdaptiveTuningConfiguration attribute.

## EC Certifications


This appendix provides Kinetix 5500 servo drive certification information.


Topic	Page
EC Type - Examination Certificate	261
EU Declaration of Conformity	262
European Union Directives	267

### EC Type - Examination Certificate

For product certifications currently available from Rockwell Automation, go to <http://www.rockwellautomation.com/products/certification>.

### EC Type-Examination Certificate






**Functional Safety Type Approved**  
www.tuv.com  
ID 0600000000

**Reg.-No.: 01/205/5255.02/15**


<b>Product tested</b>	Safety Function "Safe Torque Off" (STO) within the AC Servo Drives Kinetix 5500 and 5700	<b>Certificate holder</b>	Rockwell Automation 6400 West Enterprise Drive Mequon, WI 53092 USA
<b>Type designation</b>	Safe Torque Off-Hardwired (Kinetix 5500): 2198-H003-ERS, 2198-H008-ERS, 2198-H015-ERS, 2198-H025-ERS, 2198-H040-ERS, 2198-H070-ERS Safe Torque Off-Integrated (Kinetix 5500): 2198-H003-ERS2, 2198-H008-ERS2, 2198-H015-ERS2, 2198-H025-ERS2, 2198-H040-ERS2, 2198-H070-ERS2 Safe Torque Off-Hardwired / Integrated (Kinetix 5700): 2198-S008-ERS3, 2198-S100-ERS3, 2198-S160-ERS3, 2198-D008-ERS3, 2198-D012-ERS3, 2198-D020-ERS3, 2198-D032-ERS3, 2198-D057-ERS3		
<b>Codes and standards</b>	EN 61800-5-2:2007 EN 61800-5-1:2007 (in extracts) EN 61800-3:2004 + A1:2012 EN ISO 13849-1:2006 + AC:2009 EN 62061:2005 + AC:2010 + A1:2013 EN 60204-1:2006 + A1:2009 + AC:2010 (in extracts) IEC 61508 Parts 1-7:2010		
<b>Intended application</b>	The integrated safety function "Safe Torque Off-Hardwired" complies with the requirements of the relevant standards (Cat. 3 / PL d acc. to EN ISO 13849-1, SILCL 2 acc. to EN 62061 / EN 61800-5-2 / IEC 61508) and can be used in applications up to PL d acc. to EN ISO 13849-1, SIL 2 acc. to EN 62061 / IEC 61508. The integrated safety functions "Safe Torque Off-Integrated" and "Safe Torque Off-Hardwired / Integrated" comply with the requirements of the relevant standards (Cat. 3 / PL e acc. to EN ISO 13849-1, SILCL 3 acc. to EN 62061 / EN 61800-5-2 / IEC 61508) and can be used in applications up to PL e acc. to EN ISO 13849-1, SIL 3 acc. to EN 62061 / IEC 61508.		
<b>Specific requirements</b>	The instructions of the associated Installation and Operating Manual shall be considered. It is confirmed that the product under test complies with the requirements for machines defined in Annex I of the EC Directive 2006/42/EC. Valid until 2020-04-07		

The issue of this certificate is based upon an examination, whose results are documented in Report No. 968/M 367.03/15 dated 2015-04-07.  
This certificate is valid only for products which are identical with the product tested. It becomes invalid at any change of the codes and standards forming the basis of testing for the intended application.



Berlin, 2015-04-07

Certification Body for Machinery, NB 0035



Dipl.-Ing. Eberhard Frejno

www.fs-products.com  
www.tuv.com


 **TÜVRheinland®**  
Precisely Right.

## EU Declaration of Conformity

For all declarations of conformity (DoC) currently available from Rockwell Automation, go to <http://www.rockwellautomation.com/rockwellautomation/certification/overview.page>.

**Rockwell  
Automation**

### EU Declaration of Conformity

<b>Product:</b>	<b>Kinetix 5500/5700 Digital Servo Drives and Accessories</b>	
<b>Name and address of the manufacturer:</b>	<b>Name and address of the authorised representative:</b>	
Rockwell Automation, Inc. 6400 W. Enterprise Drive Mequon, WI 53092 USA	Rockwell Automation B.V. Rivium Promenade 160 2909 LM Capelle aan den IJssel The Netherlands	
This declaration of conformity is issued under the sole responsibility of the manufacturer.		
<b>Object of the declaration:</b>	<b>Allen-Bradley Bulletin 2198</b> (reference the attached list of catalogue numbers)	
The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:		
2006/95/EC	Low Voltage Directive	(LVD)
2004/108/EC	EMC Directive	(EMC)
2006/42/EC	Machinery Directive	(MD)
References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:		
EN 61800-5-1:2007	Adjustable speed electrical power drive systems – Part 5-1: Safety requirements – Electrical, thermal and energy.	
EN 61800-5-2:2007	Adjustable speed electrical power drive systems – Part 5-2: Safety requirements – Functional	
EN 61800-3:2004 + A1:2012	Adjustable speed electrical power drive systems – Part 3: EMC requirements and specific test methods	
EN 60204-1:2006 + A1:2009	Safety of machinery – Electrical equipment of machines – Part 1: General requirements	
IEC 61508: Part 1-7:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems	
EN 62061:2005 + A1:2013	Safety of machinery – Functional safety of safety-related electrical, electronic and programmable electronic control systems	
EN ISO 13849-1:2008	Safety of machinery – Safety-related parts of control systems – Part 1: General principles for design	
<b>Notified Body:</b>	TÜV Rheinland, Am Grauen Stein, 51105 Köln, (NB 0035)	
<b>performed:</b>	EC Type Examination	
<b>and issued the certificate:</b>	01/205/5255.02/15 (MD)	
<u>Additional information:</u>		
<b>Year of CE Marking (LVD):</b>	2012	
<b>Person authorised to compile the technical file (MD):</b>	Authorised representative (see details above).	
<b>Product Safety Function (MD):</b>	Safe Torque-Off	
Signed for and on behalf of the above named manufacturer:		
<b>Place and date of issue:</b>	Mequon, WI USA	15-Apr-2015
<b>Name, function:</b>	Thomas Van Groll, Director Engineering	
<b>Signature:</b>		

# Rockwell Automation

Catalogue number	Series <sup>3</sup>	Description	Directive <sup>4</sup>		
			EMC	LVD	MD
Bulletin 2198 Servo Drives					
2198-H003-ERS		Kinetix 5500, Frame 1, 195-528Vrms, 2.5Apk, Hardwired Safety	Yes	Yes	Yes
2198-H008-ERS		Kinetix 5500, Frame 1, 195-528Vrms, 6.25Apk, Hardwired Safety	Yes	Yes	Yes
2198-H015-ERS		Kinetix 5500, Frame 2, 195-528Vrms, 12.5Apk, Hardwired Safety	Yes	Yes	Yes
2198-H025-ERS		Kinetix 5500, Frame 2, 195-528Vrms, 20Apk, Hardwired Safety	Yes	Yes	Yes
2198-H040-ERS		Kinetix 5500, Frame 2, 195-528Vrms, 32.5Apk, Hardwired Safety	Yes	Yes	Yes
2198-H070-ERS		Kinetix 5500, Frame 3, 195-528Vrms, 57.5Apk, Hardwired Safety	Yes	Yes	Yes
2198-H003-ERS2		Kinetix 5500, Frame 1, 195-528Vrms, 2.5Apk, Integrated Safety Over Ethernet/IP	Yes	Yes	Yes
2198-H008-ERS2		Kinetix 5500, Frame 1, 195-528Vrms, 6.25Apk, Integrated Safety Over Ethernet/IP	Yes	Yes	Yes
2198-H015-ERS2		Kinetix 5500, Frame 2, 195-528Vrms, 12.5Apk, Integrated Safety Over Ethernet/IP	Yes	Yes	Yes
2198-H025-ERS2		Kinetix 5500, Frame 2, 195-528Vrms, 20Apk, Integrated Safety Over Ethernet/IP	Yes	Yes	Yes
2198-H040-ERS2		Kinetix 5500, Frame 2, 195-528Vrms, 32.5Apk, Integrated Safety Over Ethernet/IP	Yes	Yes	Yes
2198-H070-ERS2		Kinetix 5500, Frame 3, 195-528Vrms, 57.5Apk, Integrated Safety Over Ethernet/IP	Yes	Yes	Yes
2198-P031		Kinetix 5700, 31.6A, DC Bus Supply	Yes	Yes	N/R
2198-P070		Kinetix 5700, 70.3A, DC Bus Supply	Yes	Yes	N/R
2198-P141		Kinetix 5700, 140.8A, DC Bus Supply	Yes	Yes	N/R
2198-P208		Kinetix 5700, 207.6A, DC Bus Supply	Yes	Yes	N/R
2198-S086-ERS3		Kinetix 5700, 86.0A, Single Axis Inverter, Integrated Safety	Yes	Yes	Yes
2198-S130-ERS3		Kinetix 5700, 130.0A, Single Axis Inverter, Integrated Safety	Yes	Yes	Yes
2198-S160-ERS3		Kinetix 5700, 160.0A, Single Axis Inverter, Integrated Safety	Yes	Yes	Yes
2198-D006-ERS3		Kinetix 5700, 6.3Arms Peak, Dual Axis Inverter, Integrated Safety	Yes	Yes	Yes
2198-D012-ERS3		Kinetix 5700, 12.5A, Dual Axis Inverter, Integrated Safety	Yes	Yes	Yes
2198-D020-ERS3		Kinetix 5700, 20.0A, Dual Axis Inverter, Integrated Safety	Yes	Yes	Yes
2198-D032-ERS3		Kinetix 5700, 32.5A, Dual Axis Inverter, Integrated Safety	Yes	Yes	Yes
2198-D057-ERS3		Kinetix 5700, 57.5A, Dual Axis Inverter, Integrated Safety	Yes	Yes	Yes
AC Line Filters					
2198-DB08-F		460 Volt 7.5 Amp Three-Phase AC Line Filter	Yes	Yes	N/R
2198-DB20-F		460 Volt 20 Amp Three-Phase AC Line Filter	Yes	Yes	N/R
2198-DB42-F		460 Volt 42 Amp Three-Phase AC Line Filter	Yes	Yes	N/R
2198-DB80-F		460 Volt 80 Amp Three-Phase AC Line Filter	Yes	Yes	N/R
2198-DB290-F		460 Volt 290 Amp Three-Phase AC Line Filter	Yes	Yes	N/R
Shunts					
2097-R6		75 Ohm, 150W, External Shunt Resistor	Yes	Yes	N/R
2097-R7		150 Ohm, 80 W, External Shunt Resistor	Yes	Yes	N/R
2198-R004		Kinetix 5700 Passive External Shunt Resistor 33.0Ω, 400W	N/R	N/R	N/R

# Rockwell Automation

Catalogue number	Series <sup>3</sup>	Description	Directive <sup>4</sup>		
			EMC	LVD	MD
2198-R014		Kinetix 5700 Passive External Shunt Resistor 9.0Ω, 1.4KW	N/R	N/R	N/R
2198-R031		Kinetix 5700 Passive External Shunt Resistor 33.0Ω, 3.1KW	N/R	N/R	N/R
2198-R127		Kinetix 5700 Passive External Shunt Resistor 12.5Ω, 12.7KW	N/R	N/R	N/R
Capacitor Modules					
2198-CAPMOD-1300		Kinetix 5500, Capacitor Module	Yes	Yes	N/R
2198-CAPMOD-2240		Kinetix 5700, Capacitor Module	Yes	Yes	N/R
2198-CAPMOD-DCBUS-IO		Kinetix 5700, Capacitor Extension Module	Yes	Yes	N/R
Motor Compatibility <sup>2</sup>					
VPL-Axxxxx-yyyyyy <sup>1</sup>		230 Volt VP Low-inertia Servo Motor	Yes	Yes	N/R
VPL-Bxxxxx-yyyyyy <sup>1,5</sup>		460 Volt VP Low-inertia Servo Motor	Yes	Yes	N/R
VPF-Axxxxx-yyyyyy <sup>1,5</sup>		230 Volt VP Low-inertia Servo Motor	Yes	Yes	N/R
VPF-Bxxxxx-yyyyyy <sup>1,5</sup>		460 Volt VP Low-inertia Servo Motor	Yes	Yes	N/R
VPS-Bxxxxx-yyyyyy <sup>1,5</sup>		460 Volt VP Low-inertia Servo Motor	Yes	Yes	N/R
MPF-Axxxxx-yyyyyy <sup>1,5</sup>		230 Volt Food Grade High Performance Servo Motor	Yes	Yes	N/R
MPF-Bxxxxx-yyyyyy <sup>1,5</sup>		460 Volt Food Grade High Performance Servo Motor	Yes	Yes	N/R
MPG-Axxxxx-yyyyyy <sup>1,5</sup>		230 Volt Integrated Gear High Performance Servo Motor	Yes	Yes	N/R
MPG-Bxxxxx-yyyyyy <sup>1,5</sup>		460 Volt Integrated Gear High Performance Servo Motor	Yes	Yes	N/R
MPS-Axxxxx-yyy <sup>1,5</sup>		230V Stainless Steel High Performance Servo Motor	Yes	Yes	N/R
MPS-Bxxxxx-yyy <sup>1,5</sup>		460V Stainless Steel High Performance Servo Motor	Yes	Yes	N/R
MPL-Axxxxx-yyyyyy <sup>1,5</sup>		230 Volt High Resolution Feedback High Performance Servo Motor	Yes	Yes	N/R
MPL-Bxxxxx-yyyyyy <sup>1,5</sup>		460 Volt High Resolution Feedback High Performance Servo Motor	Yes	Yes	N/R
MPM-Axxxxxx-yyyyyy <sup>1,5</sup>		230 Volt High Resolution Feedback High Performance Servo Motor	Yes	Yes	N/R
MPM-Bxxxxxx-yyyyyy <sup>1,5</sup>		460 Volt High Resolution Feedback High Performance Servo Motor	Yes	Yes	N/R
LDAT-xxxxxyy-xDxx <sup>1,5</sup>		LDAT, Integrated Linear Thruster, 230V/460V	Yes	Yes	N/R
Cable Compatibility					
2090-CSWM1DF-YYAALL <sup>1</sup>		Motor power/feedback cable for use with VP family motors, YY = wire gauge, LL = length in meters	N/R	N/R	N/R
2090-CSBM1DF-YYAALL <sup>1</sup>		Motor power/feedback with brake cable for use with VP family motors, YY = wire gauge, LL = length in meters	N/R	N/R	N/R
2090-CSWM1DE-YYAALL <sup>5</sup>		Motor power/feedback cable for use with VP family motors, YY = wire gauge, LL = length in meters	N/R	N/R	N/R
2090-CSBM1DE-YYAALL <sup>5</sup>		Motor power/feedback with brake cable for use with VP family motors, YY = wire gauge, LL = length in meters	N/R	N/R	N/R
2090-CSWM1DE-YYAFL <sup>5</sup>		Motor power/feedback cable for use with VP family motors, YY = wire gauge, LL = length in meters	N/R	N/R	N/R
2090-CSBM1DE-YYAFL <sup>5</sup>		Motor power/feedback with brake cable for use with VP family motors, YY = wire gauge, LL = length in meters	N/R	N/R	N/R
2090-CPWM4E2-YYTR <sup>1,5</sup>		Motor power transition cables for use with MP family motors. YY = gauge. (From Bayonet Style to DIN Style Connectors)	N/R	N/R	N/R
2090-CPBM4E2-YYTR <sup>1,5</sup>		Motor power with brake transition cables for use with MP motors, YY = wire gauge (From Bayonet Style to DIN Style Connectors)	N/R	N/R	N/R
2090-CFBM4E2-CATR <sup>1,5</sup>		Motor feedback transition cable for use with MP family motors (From Bayonet Style to DIN Style Connectors)	N/R	N/R	N/R

## Rockwell Automation

Catalogue number	Series <sup>3</sup>	Description	Directive <sup>4</sup>		
			EMC	LVD	MD
2090-XXNPMP-YYSSL <sup>1,5</sup>		Power Cable for MP or 1326AB motor using the MP connector system, YY = wire gauge, LL = length in meters	N/R	N/R	N/R
2090-XXNFMP-SLL <sup>1,5</sup>		Feedback Cable for MP or 1326AB motor using the MP connector system, LL = length in meters	N/R	N/R	N/R
2090-UXNFBMP-SLL <sup>1,5</sup>		Feedback Cable for MP or 1326AB motor using the MP connector system, LL = length in meters	N/R	N/R	N/R
2090-XXNPMF-YYSSL <sup>1,5</sup>		MPF-motor power cable, non-flex, YY = wire gauge, LL = length in meters	N/R	N/R	N/R
2090-XXNFMF-SLL <sup>1,5</sup>		MPF-encoder feedback cable, non-flex, LL = length in meters	N/R	N/R	N/R
2090-XXTPMP-YYSSL <sup>1,5</sup>		Continuous Flex Motor power cables for MP family motors, YY = gauge, LL = length in meters	N/R	N/R	N/R
2090-XXTFMP-SLL <sup>1,5</sup>		Continuous Flex Motor feedback cables for MP family motors, LL = length in meters	N/R	N/R	N/R
2090-CPWM4DF-YYAFL <sup>1,5</sup>		Continuous Flex Motor power cable for MP or 1326AB motor, YY = wire gauge, LL = length in meters	N/R	N/R	N/R
2090-CFBM4DF-CDAFL <sup>1,5</sup>		Continuous Flex Motor feedback cable for MP or 1326AB motor, LL = length in meters	N/R	N/R	N/R
2090-CDNFDMP-SLL <sup>1,5</sup>		Motor Resolver feedback cable, LL = length in meters	N/R	N/R	N/R
2090-CFBM4DF-CEAALL <sup>1,5</sup>		Motor Resolver feedback cable, LL = length in meters	N/R	N/R	N/R
2090-CFBM4DD-CDAALL <sup>1,5</sup>		Feedback Cable for MP or 1326AB motor using the MP connector system, LL = length in meters	N/R	N/R	N/R
2090-CFBM7DF-CDAFL <sup>1,5</sup>		Continuous Flex Motor feedback cable for MP or 1326AB motor, with SPEEDTEC connectors, LL = length in meters	N/R	N/R	N/R
2090-CPWM7DF-YYAFL <sup>1,5</sup>		Continuous Flex Motor power cable for MP or 1326AB motor, with SPEEDTEC connector, YY = wire gauge, LL = length in meters	N/R	N/R	N/R
2090-CPBM7DF-YYAFL <sup>1,5</sup>		Continuous Flex Motor power with brake cable for MP or 1326AB motor, with SPEEDTEC connector, YY = wire gauge, LL = length in meters	N/R	N/R	N/R
2090-CFBM7E7-YYAFL <sup>1,5</sup>		Continuous Flex Motor feedback extension cable for MP or 1326AB motor, with SPEEDTEC connectors, YY = wire gauge, LL = length in meters	N/R	N/R	N/R
2090-CPBM7E7-YYAFL <sup>1,5</sup>		Continuous Flex Motor power with brake extension cable for MP or 1326AB motor, with SPEEDTEC connectors, YY = wire gauge, LL = length in meters	N/R	N/R	N/R
2090-CPWM7DF-YYAALL <sup>1,5</sup>		Power Cable for MP, RD or 1326AB motor with SPEEDTEC connector, YY = wire gauge, LL = length in meters	N/R	N/R	N/R
2090-CPBM7DF-YYAALL <sup>1,5</sup>		Power with Brake Cable for MP, RD or 1326AB motor with SPEEDTEC connector, YY = wire gauge, LL = length in meters	N/R	N/R	N/R
Connector Kits and Miscellaneous Accessories <sup>2</sup>					
2198-H040-x-x		Input Wiring Connectors and DC Bus T Connector for Frame 1 and 2 Servo Drives	N/R	N/R	N/R
2198-H070-x-x		Input Wiring Connectors and DC Bus T Connector for Frame 3 Servo Drive.	N/R	N/R	N/R
1585J-M8CBJM-x		Shielded Ethernet Cable	N/R	N/R	N/R
1606-XLxxx		24V DC Power Supply	N/R	N/R	N/R
2198-KITCON-DSL		Replacement Feedback Connector Kit For Kinetix 5500	N/R	N/R	N/R

# Rockwell Automation

Catalogue number	Series <sup>3</sup>	Description	Directive <sup>4</sup>		
			EMC	LVD	MD
2198-KITCON-IOSP		Replacement I/O Connector Kit (spring clamp) for IOD Connector	N/R	N/R	N/R
2198-KITCON-IOSC		Replacement I/O Connector Kit (screw terminal) for IOD Connector	N/R	N/R	N/R
2198-KITCON-PWR40		Replacement Connector Set, 40 Amp, for Kinetix 5500 Frame 1 & 2 Drives	N/R	N/R	N/R
2198-KITCON-PWR70		Replacement Connector Set, 70 Amp, for Kinetix 5500 Frame 3 Drives	N/R	N/R	N/R
2198-H2DCK		DSL Feedback Converter Kit	Yes	Yes	N/R
2198-K57CK-D15M		K5700 Auxiliary Universal Feedback Connector Kit	N/R	N/R	N/R
2198-H040-P-T		K5500 FR1,2 Control Power Connector Kit	N/R	N/R	N/R
2198-H070-P-T		K5500 FR3 Control Power Connector Kit	N/R	N/R	N/R
2198-S170-P-T		Kinetix 5700 100mm Control Power Connect	N/R	N/R	N/R
2198-BARCON-100DC100		Kinetix 5700 100 mm Bus Bar Replacement	N/R	N/R	N/R
2198-BARCON-100DC200		Kinetix 5700 DC Bus Link Kit, 100mm	N/R	N/R	N/R
2198-BARCON-55DC200		Kinetix 5700 DC Bus Link Kit, 55mm	N/R	N/R	N/R
2198-BARCON-55DCAC100		CONKIT, K5500, Bus Bar, SM	N/R	N/R	N/R
2198-BARCON-85DC200		Kinetix 5700 DC Bus Link Kit, 85mm	N/R	N/R	N/R
2198-BARCON-85DCAC100		CONKIT, K5500, Bus Bar, LG	N/R	N/R	N/R
2198-KITCON-ENDCAP200		200A Bus Link Connection End Caps	N/R	N/R	N/R
2198-KITCON-CAPMOD2240		K5700 Connector Kit Capacitor Module	N/R	N/R	N/R
2198-KITCON-D032		K5700 Connector Kit Dual Axis 55mm	N/R	N/R	N/R
2198-KITCON-D046		K5700 Connector Kit Dual Axis 85mm	N/R	N/R	N/R
2198-KITCON-P070		Kinetix 5700 Connector Kit DC Bus Supply	N/R	N/R	N/R
2198-KITCON-P208		Kinetix 5700 Connector Kit DC Bus Supply	N/R	N/R	N/R
2198-KITCON-S130		K5700 Connector Kit Single Axis	N/R	N/R	N/R
2198-KITCON-S160		K5700 Connector Kit Single Axis	N/R	N/R	N/R
2198-TCON-24VDCIN36		Connector Kit, Midrange, 24 Vdc Input	N/R	N/R	N/R

- 1) Only the following motor and cable families are compatible with the Kinetix 5500 servo drives.
- 2) The following letters are used in the compatibility matrix to indicate model number description fields that do not affect this DoC: x, y. These fields may be filled with any number(s) or letter(s).
- 3) If no series number is given, then all series are covered.
- 4) Legend as follows:  
 No = Product is not certified to this directive.  
 Yes = Product is certified to this directive.  
 N/R = this directive is not required for this product
- 5) Only the following motor and cable families are compatible with the Kinetix 5700 servo drives.



## European Union Directives

If this product is installed within the European Union or EEC regions and has the CE mark, the following regulations apply.

### CE Conformity

Conformity with the Low Voltage Directive and Electromagnetic Compatibility (EMC) Directive is demonstrated by using harmonized European Norm (EN) standards published in the Official Journal of the European Communities. The safe torque-off circuit complies with the EN standards when installed according to instructions found in this manual.

### EMC Directive

This unit is tested to meet Council Directive 2004/108/EC Electromagnetic Compatibility (EMC) by using these standards, in whole or in part:

- EN 61800-3 - Adjustable Speed Electrical Power Drive Systems, Part 3 - EMC Product Standard including specific test methods
- EN 61326-3-1 EMC - Immunity requirements for safety-related systems

The product described in this manual is intended for use in an industrial environment.

CE Declarations of Conformity are available online at <http://www.rockwellautomation.com/rockwellautomation/certification/overview.page> and in [EU Declaration of Conformity](#) on [page 262](#).

### Low Voltage Directive

These units are tested to meet Council Directive 2006/95/EC Low Voltage Directive. The EN 60204-1 Safety of Machinery-Electrical Equipment of Machines, Part 1-Specification for General Requirements standard applies in whole or in part. Additionally, the standard EN 61800-5-1 Electronic Equipment for use in Power Installations apply in whole or in part.

Refer to the Kinetix Servo Drives Specifications Technical Data, publication [GMC-TD003](#), for environmental and mechanical specifications.

## Notes:

## Numerics

**2090-CSBM1DF** 14, 84  
**2090-CSBM1DG** 14, 84  
**2198-CAPMOD-1300** 27  
**2198-H2DCK** 13, 20, 66, 88, 97  
**2198-KITCON-DSL** 13, 20, 86  
**24V input power connector**  
     pinouts 59  
     wiring 80

## A

**about this publication** 11  
**absolute position feature** 66  
**AC line filters**  
     noise reduction 41  
**actions category** 136  
**adaptive tuning** 260  
**additional resources** 11  
**Add-on Profile** 89, 107  
**alarm** 160  
**application requirements** 178  
**applying power** 138  
**associated axes tab** 119  
**audience for this manual** 11  
**axis properties** 124, 125, 134  
**axis unstable** 158

## B

**basic volts/hertz** 127, 234  
**BC connector**  
     pinouts 61  
     wiring 85, 90  
**Beldon** 90  
**block diagrams**  
     capacitor module 211  
     power 210  
**bonding**  
     EMI (electromagnetic interference) 36  
     examples 37  
     high frequency energy 38  
     subpanels 38  
**brake relay** 64  
**Bulletin**  
     MPAI electric cylinders 20  
     MPAR electric cylinders 20  
     MPAS linear stages 20  
**bus**  
     configuration 122  
     regulator 122  
**bus-sharing**  
     group 122  
     group example 140  
     groups 139

## C

**cables**  
     catalog numbers 84, 90, 94  
     categories 40  
     Ethernet cable length 100  
     induction motors 90  
     routing 30  
     shield clamp 87, 92, 96  
**calculate test** 245  
**capacitor module** 211  
     catalog number 27  
     description 13  
     interconnect diagram 201  
     status indicator 158  
     support 49  
     wiring 98  
**catalog numbers**  
     capacitor module 27  
     motor cables 84, 90, 94  
     servo drives  
         hardwired 27  
         integrated 27  
     shared-bus connection system 27  
**category 3**  
     requirements 170, 178  
     stop category definitions 170, 179  
**CE**  
     compliance 28  
     comply with CE 267  
     conformity 267  
     meet requirements 267  
**certification**  
     application requirements 178  
     EC Declaration of Conformity 262  
     EC Type - Examination Certificate 261  
     PL and SIL 170, 179  
     TÜV Rheinland 169, 177  
     user responsibilities 169, 178  
**circuit breaker selection** 31  
**clamp** 87, 92, 96  
**CompactLogix**  
     Ethernet connections 100  
**compatibility**  
     motor feedback 134

**configuring**

- basic volts/hertz 127
- controller 108
- EtherNet/IP module 110
- fan/pump volts/hertz 132
- feedback-only axis 120, 124
- flux up 241
- frequency control category 127, 129, 132
- general category 124, 125
- hardwired 113
- home screen 102
- hookup test 143
- induction motor tuning 147
- induction-motor frequency-control axis 125
- integrated safety 115
- IP address 106
- Logix5000 communication 215
- master feedback 124
- menu screens 103
- module properties 114, 116, 117, 119, 121
  - inhibit module 216
- motion group 123
- motor
  - test 143
- motor category 126, 242
- motor feedback 134
- motor>analyzer category 131
- network parameters 106
- parameter list category 128, 130, 133
- PM motor closed-loop axis properties 134
- power tab
  - bus-sharing group example 140
  - bus-sharing groups 139
- sensorless vector 129
- servo motor axis
  - actions category 136
  - delay times 137
  - general category 134
  - load category 136
  - motor category 135
  - parameter list category 137
  - scaling category 136
- setup screens 104
- SLAT 252
- startup sequence 105
- torque proving 257
- velocity droop 260

**connecting**

- CompactLogix 100
- ControlLogix 100
- converter kit shield clamp 96
- Ethernet cables 100
- motor shield clamp 87, 92

**connector kit**

- 2198-H2DCK 88
- 2198-KITCON-DSL 86

**connector locations**

- servo drives 58

**control power**

- input specifications 65
- pinouts 59
- system calculations 230
- wiring 80

**ControlFLASH**

- firmware upgrade 213
- troubleshooting 220

**controller**

- and drive behavior 160
- CompactLogix 108
- configure 108
- ControlLogix 108
- properties
  - date/time tab 112
  - enable time synchronization 112

**ControlLogix**

- Ethernet connections 100

**conventions used in this manual 11****converter kit**

- 2198-H2DCK 88
- cable lengths, max 91
- cable preparation
  - motor feedback 95
  - motor power/brake 91
- description 13
- Kinetix 5500 AOP 89

**CP connector**

- pinouts 59
- wiring 80

**current regulator loop 242****D****date/time tab 112****DC bus connector**

- pinouts 59

**delay times 137****digital inputs 62**

- pinouts 60
- wiring 83

**display 102****download program 137****drilling hole patterns 49****drive replacement**

- integrated safety 183

**dynamic test 245****E****earth ground 76****EC Declaration of Conformity 262****EC Type - Examination Certificate 261****EMC**

- directive 267
- motor ground termination 87

**EMI (electromagnetic interference)**

- bonding 36

**EN 61508 170, 179****EN 62061 170, 179****enable time synchronization 112****enclosure**

- power dissipation 35
- requirements 30
- sizing 34

**encoder support**

DSL 66

**energy calculations** 232**erratic operation** 159**Ethernet connector**

pinouts 61

**EtherNet/IP**

connecting cables 100

connections 64

module properties 110

PORT1 and PORT2 connectors 100

**external shunt resistor** 42, 43

pinouts 59

wiring 99

**F****fan/pump** 235**fan/pump volts/hertz** 132**fault**

code summary 151

codes 150

status only 160

**feedback**

configurations 20

feedback-only axis 120

grounding technique 205

**feedback-only axis** 124**firmware upgrade** 213

system requirements 214

verify upgrade 221

**flux up** 239

attributes 240

**frequency control category** 127, 129, 132**fuse selection** 31**G****general**

category 124, 125, 134

tab 114, 116

**grounded power configuration** 71**grounding**

multiple subpanels 77

screws 74

**H****hardwired connections** 113**hardwired STO** 24**HF bonding** 36**high frequency energy** 38**Hiperface-to-DSL feedback converter kit** 88**hole patterns** 49**home screen**

soft menu 102

**hookup test** 143**I****I/O**

digital inputs specifications 62

**ignore** 160**induction motor control** 90

calculate, static, dynamic tests 245

configure flux up 241

control methods

basic volts/hertz 234

fan/pump 235

sensorless vector 236

flux up 239

flux up attributes 240

frequency-control axis 125

motor and inertia tests 244

motor data sheet 243

motor&gt;analyzer category 244

motor&gt;model category 243

multiple skip speed 238

open-loop frequency control 233

skip speed 237

SLAT 251

**inhibit module** 216**input power wiring**

24V control 80

3-phase delta 72

determine input power 71

grounded power configuration 71

grounding screws 74

mains 81

remove grounding screws 75

ungrounded power configuration 73

**installing drive accessories**

AC line filters 41

external shunt resistor 42, 43

**installing your drive** 29

bonding examples 37

bonding subpanels 38

cable categories 40

circuit breakers 31

clearance requirements 35

fuse selection 31

HF bonding 36

system mounting requirements 30

transformer 31

**integrated safety**

configure always 189

configure only when no safety signature exists

185

connections 115

drive replacement 183

out-of-box state 182

protocol 191

STO state reset 179

**integrated STO** 25, 26**interconnect diagrams**

2198 drive with LDAT 207

2198 drive with MPAR/MPAI 209

2198 drive with MPAS 208

2198 drive with MPL/MPM/MPF/MPS 206

2198 drive with VPL/VPF/VPS 205

bus-sharing drives

shared AC 202

- shared AC/DC 202
- shared AC/DC hybrid 203
- shared DC 203
- capacitor module 201
- feedback grounding technique 205
- notes 199
- shunt resistor 204
- single-axis drive
  - single-phase 201
  - three-phase 200
- IOD connector**
  - pinouts 60
  - wiring 83
- IP address** 106
- IPD connector**
  - pinouts 59
  - wiring 81
- ISO 13849-1 CAT 3**
  - requirements 170, 178
  - stop category definitions 170, 179

## K

**Kinetix 5500** 13

## L

**Lapp** 90

**LCD display** 102

- messages 150

**LDAT-Series linear thrusters** 20

**linear actuators**

- interconnect diagram
  - LDAT 207
  - MPAR/MPAI 209
  - MPAS 208

**link**

- link/activity status indicator 157
- speed status indicator 157

**load category** 136

**load observer** 145

**Logix Designer application** 108

**Logix5000 communication** 215

**low voltage directive** 267

## M

**mains input power connector**

- pinouts 59
- wiring 81

**major fault** 160

**master feedback** 124

**menu screens** 103

**MF connector**

- pinouts 62
- wiring 86, 94

**minor fault** 160

**module definition** 111, 116

### module properties

- associated axes tab 119
- EtherNet/IP module 110
- general tab 114, 116
- module definition 111, 116
- new tag 119
- power tab 121
- safety tab 117

### module status indicator

 157

### motion direct commands

- STO bypass 191
- warning messages 192

### motion group

 123

### motor

- analyzer category 131, 244
- category 126
- data sheet 243
- feedback compatibility 134
- model category 243
- motor and inertia tests 244
- overload retention 255
- thermal models 247

### motors

- accel/decel problems 158
- brake connector
  - pinouts 61
  - wiring 85, 90
- cable catalog numbers 84, 90, 94
- cable length 28, 30
- category 135
- feedback connector
  - pinouts 62
  - wiring 86, 94
- ground termination 87
- induction 90
- interconnect diagram
  - MPL/MPM/MPF/MPS 206
  - VPL/VPF/VPS 205
- overheating 159
- power connector
  - pinouts 61
  - wiring 84, 90
- shield clamp wiring 87, 92, 96
- testing 143
- tuning 143
- velocity 159

### mounting your capacitor module

- mounting order 46

### mounting your drive

- attaching to the panel 56
- drilling hole patterns 49
- mounting order 46
- shared-bus connection system 47
- single-axis 48
- zero-stack tab and cutout 46

### MP connector

- pinouts 61
- wiring 84, 90

### MPAI electric cylinders

 20

### MPAR electric cylinders

 20

### MPAS linear stages

 20

### multiple skip speed

 238

## N

**navigation buttons** 102

**network**

parameters 106  
status indicator 157

**new tag**

data type 119

**noise**

abnormal 159  
feedback 159  
reduction 41

## O

**open-loop frequency control** 233

**out-of-box state** 182

## P

**panel requirements** 30

**parameter list category** 128, 130, 133, 137

**PFH definition** 173, 181

**pinouts**

24V input power connector 59  
DC bus connector 59  
digital inputs connector 60  
Ethernet connector 61  
mains input power connector 59  
motor brake connector 61  
motor feedback connector 62  
motor power connector 61  
safe torque-off 173  
shunt connector 59

**planning your installation** 29

**PM motor closed-loop axis properties** 134

**power dissipation** 35

**power tab**

bus configuration 122  
bus regulator 122  
bus-sharing  
  group 122  
  group example 140  
  groups 139  
power structure 121

**power up** 138

**publications, related** 11

## R

**regenerative energy** 232

**related publications** 11

**remove grounding screws** 75

**remove/replace drive**

remove drive 167  
remove power 166  
replace drive 167  
startup and configure 168

**routing power and signal wiring** 70

## S

**SAB** 90

**safe torque-off** 174

bypass wiring 175  
cascaded wiring 176  
configurations  
  hardwired 24  
  integrated 25, 26  
operation 170, 179  
PFH 173, 181  
pinouts 173  
specifications 67, 176, 197  
troubleshooting  
  hardwired 171  
  integrated 180

**safety**

products catalog 12, 176  
tab 117

**scaling category** 136

**sensorless vector** 129, 236

**setup screens** 104

**shared AC**

configurations 224  
interconnect diagram 202

**shared AC/DC**

configurations 226  
interconnect diagram 202  
power sharing example 230

**shared AC/DC hybrid**

configurations 227  
interconnect diagram 203  
power sharing example 229

**shared DC**

configurations 224  
interconnect diagram 203  
power sharing example 228

**shared-bus**

configurations 223  
connection system 47  
  catalog numbers 27  
guidelines 223

**shield clamp** 87, 92, 96

**shunt connector**

pinouts 59  
wiring 99

**shunt resistor**

interconnect diagram 204

**shutdown** 160

**sizing**

control power 230  
energy calculations 232  
power sharing examples  
  shared AC/DC 230  
  shared AC/DC hybrid 229  
  shared DC 228  
shared-bus configurations 223  
  shared AC 224  
  shared AC/DC 226  
  shared AC/DC hybrid 227  
  shared DC 224  
shared-bus guidelines 223

**skip speed** 237

**SLAT** 249

- attributes 251
- configuring 252

**soft menu**

- home screen 102

**software**

- Logix Designer application 108

**specifications**

- brake relay 64
- control power input 65
- digital inputs 62
- EtherNet/IP connections 64
- motor feedback
  - absolute position 66
  - Stegmann DSL 66
- safe torque-off 67, 176, 197

**speed limited adjustable torque** 249**startup sequence** 105**static test** 245**status indicators**

- capacitor module 158
- link speed status 157
- link/activity status 157
- module status 157
- network status 157

**STO**

- bypass 191
- connector pinouts 173
- connector wiring 174
- state reset 179

**stop**

- drive 160
- planner 160

**system**

- block diagrams
  - capacitor module 211
  - power 210
- components 13
- ground 76
- mounting requirements 30
- overview
  - EtherNet/IP 21, 22, 23
  - shared AC 16
  - shared AC/DC 17
  - shared AC/DC hybrid 19
  - shared DC 18
  - standalone 15

**T****testing axes**

- hookup test 143

**time synchronization** 112**torque proving** 255

- attributes 255
- configuring 257

**training** 11**transformer sizing** 31**troubleshooting**

- alarm 160
- capacitor module status 158
- ControlFLASH 220
- controller/drive fault behavior 160
- fault
  - code summary 151
  - codes 150
  - status only 160
- general system problems 158
  - abnormal noise 159
  - axis unstable 158
  - erratic operation 159
  - feedback noise 159
  - motor accel/decel 158
  - motor overheating 159
  - motor velocity 159
  - no rotation 159
- ignore 160
- LCD display messages 150
- link speed status indicator 157
- link/activity status indicator 157
- major fault 160
- minor fault 160
- module status indicator 157
- network status indicator 157
- safe torque-off
  - hardwired 171
  - integrated 180
- safety precautions 149
- shutdown 160
- status indicators 157
- stop
  - drive 160
  - planner 160

**tuning**

- induction motor 147
- PM motor 145

**tuning axes**

- load observer 145

**typical installation**

- EtherNet/IP 21, 22, 23
- shared AC 16
- shared AC/DC 17
- shared AC/DC hybrid 19
- shared DC 18
- standalone 15

**U****ungrounded power configuration** 73**user responsibilities** 178**V****velocity droop** 259

- attribute 259
- configure 260

**verify upgrade** 221



---

## W

### wiring

- BC connector 85, 90
- capacitor module 98
- converter kit shield clamp 96
- CP connector 80
- earth ground 76
- Ethernet cables 100
- external shunt resistor 99
- grounded power configuration 71
- grounding screws 74
- guidelines 79
- input power type 71
- IOD connector 83
- IPD connector 81
- MF connector 86, 94
- motor cable shield clamp 87, 92
- MP connector 84, 90
- RC connector 99
- remove grounding screws 75
- requirements 70, 78
- routing power and signal wiring 70
- safe torque-off bypass 175
- safe torque-off cascaded 176
- STO connector 174
- ungrounded power configuration 73

## Z

**zero-stack tab and cutout 46**





## Rockwell Automation Support

Rockwell Automation provides technical information on the Web to assist you in using its products.

At <http://www.rockwellautomation.com/support> you can find technical and application notes, sample code, and links to software service packs. You can also visit our Support Center at <https://rockwellautomation.custhelp.com/> for software updates, support chats and forums, technical information, FAQs, and to sign up for product notification updates.

In addition, we offer multiple support programs for installation, configuration, and troubleshooting. For more information, contact your local distributor or Rockwell Automation representative, or visit <http://www.rockwellautomation.com/services/online-phone>.

## Installation Assistance

If you experience a problem within the first 24 hours of installation, review the information that is contained in this manual. You can contact Customer Support for initial help in getting your product up and running.

United States or Canada	1.440.646.3434
Outside United States or Canada	Use the <a href="#">Worldwide Locator</a> at <a href="http://www.rockwellautomation.com/rockwellautomation/support/overview.page">http://www.rockwellautomation.com/rockwellautomation/support/overview.page</a> , or contact your local Rockwell Automation representative.

## New Product Satisfaction Return

Rockwell Automation tests all of its products to verify that they are fully operational when shipped from the manufacturing facility. However, if your product is not functioning and needs to be returned, follow these procedures.

United States	Contact your distributor. You must provide a Customer Support case number (call the phone number above to obtain one) to your distributor to complete the return process.
Outside United States	Please contact your local Rockwell Automation representative for the return procedure.

## Documentation Feedback

Your comments will help us serve your documentation needs better. If you have any suggestions on how to improve this document, complete this form, publication [RA-DU002](#), available at <http://www.rockwellautomation.com/literature/>.



### Helsinki

tel. +358 9 540 4940  
info@klinkmann.fi

### St. Petersburg

tel. +7 812 327 3752  
klinkmann@klinkmann.spb.ru

### Moscow

tel. +7 495 641 1616  
moscow@klinkmann.spb.ru

### Yekaterinburg

tel. +7 343 287 19 19  
yekaterinburg@klinkmann.spb.ru

### Samara

tel. +7 846 273 95 85  
samara@klinkmann.spb.ru

### Kiev

tel. +38 044 495 33 40  
klinkmann@klinkmann.kiev.ua

### Riga

tel. +371 6738 1617  
klinkmann@klinkmann.lv

### Vilnius

tel. +370 5 215 1646  
post@klinkmann.lt

### Tallinn

tel. +372 668 4500  
klinkmann.est@klinkmann.ee

### Minsk

tel. +375 17 200 0876  
minsk@klinkmann.com

# Artisan Technology Group is an independent supplier of quality pre-owned equipment

## Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

## We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

## Learn more!

Visit us at [artisanng.com](https://www.artisanng.com) for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

**We're here to make your life easier. How can we help you today?**

(217) 352-9330 | [sales@artisanng.com](mailto:sales@artisanng.com) | [artisanng.com](https://www.artisanng.com)

