

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

**Artisan Technology Group**
(217) 352-9330 | sales@artisantg.com | artisantg.com

**Full-service, independent repair center**
with experienced engineers and technicians on staff.

**We buy your excess, underutilized, and idle equipment**
along with credit for buybacks and trade-ins.

**Custom engineering**
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

**Expert team | Trust guarantee | 100% satisfaction**

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

**Visit our website - *Click HERE***

WAVETEK




# MODEL 184
# 5 MHz SWEEP
# GENERATOR

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# MODEL 184
# 5 MHz
# SWEEP GENERATOR

WAVETEK®
9045 Balboa Ave., San Diego, Calif. 92123
P. O. Box 651, San Diego, California 92112
Tel 714/279-2200 TWX 910-335-2007

*Manual Revision 2/80*
*Instrument Release C-5/79*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# CONTENTS


SECTION 1 GENERAL DESCRIPTION

1.1 THE MODEL 184 . . . . . 1-1
1.2 SPECIFICATIONS . . . . . 1-1

SECTION 2 INITIAL PREPARATION

2.1 UNPACKING INSPECTION . . . . . 2-1
2.2 PREPARATION FOR USE . . . . . 2-1
2.3 ELECTRICAL ACCEPTANCE CHECK . . . . . 2-1

SECTION 3 OPERATION

3.1 CONTROLS AND CONNECTORS . . . . . 3-1
3.2 OPERATION . . . . . 3-4
3.2.1 Signal Termination . . . . . 3-4
3.2.2 Continuous Operation . . . . . 3-5
3.2.3 Trigger Mode . . . . . 3-5
3.2.4 Triggering . . . . . 3-6
3.2.5 GATED (or Tone Burst) Mode . . . . . 3-6
3.2.6 SWEEP Mode . . . . . 3-6
3.2.7 Voltage Control — VCG . . . . . 3-6

SECTION 4 CIRCUIT DESCRIPTION

4.1 VOLTAGE CONTROLLED GENERATOR . . . . . 4-1
4.2 SWEEP GENERATOR . . . . . 4-2

SECTION 5 CALIBRATION

5.1 FACTORY REPAIR . . . . . 5-1
5.2 REQUIRED TEST EQUIPMENT . . . . . 5-1
5.3 REMOVING GENERATOR COVER . . . . . 5-1
5.4 CALIBRATION . . . . . 5-1

SECTION 6 TROUBLESHOOTING

6.1 INTRODUCTION . . . . . 6-1
6.2 CIRCUIT BOARD ACCESS . . . . . 6-1
6.3 BASIC TECHNIQUES . . . . . 6-1
6.4 TROUBLESHOOTING INDIVIDUAL COMPONENTS . . . . . 6-1
6.5 TROUBLESHOOTING GUIDE . . . . . 6-2

SECTION 7 PARTS AND SCHEMATICS

7.1 DRAWINGS . . . . . 7-1
7.2 ORDERING PARTS . . . . . 7-1
7.3 ADDENDA . . . . . 7-1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# SECTION 1
# GENERAL DESCRIPTION

## 1.1 THE MODEL 184

Wavetek Model 184, the 5 MHz Sweep Generator, is a precision source of sine, triangle, square, positive pulse and negative pulse waveforms plus dc voltage. Frequency of the waveforms is manually and remotely variable from 100 $\mu$Hz to 5 MHz.

The generator can repetitively sweep between two individually set frequencies and at a particular sweep rate. The amplitude of waveforms is variable from 20V p-p, open circuit maximum, to −80 dB.

DC reference of the waveforms can be offset positively and negatively.

The symmetry of the waveforms is continuously adjustable from approximately 1:19 to 19:1. Varying symmetry provides variable duty cycle pulses, sawtooth and asymmetrical sine waveforms.

A voltage representing generator frequency, a fixed-amplitude pulse train of that frequency, and a voltage ramp representing frequency sweep rate are provided as front panel outputs.

## 1.2 SPECIFICATIONS

Specifications (waveform, frequency, and amplitude selection), operating modes, precision (accuracy), and waveform purity (quality) are listed in the following paragraphs.

### 1.2.1 Versatility

**Waveforms**
Five selectable waveforms, sine ∿ , triangle △ , square ⊓ , positive pulse ⎍ , negative pulse ⎎ , plus variable DC output. Symmetry of all waveform outputs is continuously adjustable from approximately 1:19 to 19:1. Varying symmetry provides variable duty cycle pulses, sawtooth, or asymmetrical sine waveforms. Separate sync output is included.

**Control**
Frequency can be controlled manually, with external voltage (VCG) or with internally generated ramp voltage.

**Operating Frequency Range**
Frequency selectable from 0.0001 Hz to 5 MHz in the following linear ranges:

| | |
|---|---|
| X 0.001 | 0.0001 Hz to 0.005 Hz |
| X 0.01 | 0.001 Hz to 0.05 Hz |
| X 0.1 | 0.005 Hz to 0.5 Hz |
| X 1 | 0.05 Hz to 5 Hz |
| X 10 | 0.5 Hz to 50 Hz |
| X 100 | 0.5 Hz to 500 Hz |
| X 1K | 5 Hz to 5 kHz |
| X 10K | 50 Hz to 50 kHz |
| X 100K | 500 Hz to 500 kHz |
| X 1M | 5 kHz to 5 MHz |

*NOTE*

*When SYMMETRY control is used, the output frequency is different from the dial indicated frequency. The maximum symmetry ratio obtainable is also dependent on the frequency dial setting.*

**Main Output**
∿ , △ , ⊓ ; variable to 20V p-p into open circuit and 10V p-p into 50Ω load. DC offset of waveform (or DC if selected) is adjustable to ±10 volts open circuit and ±5 volts into 50Ω load.

⎍ , ⎎ , DC: 0 to +10 or −10 volts into open circuit and 0 to +5 or −5 volts into 50Ω load.

Output dc voltage is limited to approximately ±10 volt open circuit and output current is limited to approximately 130 mA.

Output can be attenuated from 0 dB to −80 dB: −60 dB in 20 dB steps, plus a 20 dB vernier for continuous variation (20 dB vernier does not affect offset or DC).

**Pulse Output**
Output voltage is TTL compatible. Rise and fall times are typically 15 ns. Sync is normally a symmetrical square waveform; with SYMMETRY control ON, it is rectangular.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

**Sweep Output**
SWEEP OUT connector provides a nominal 0 to + 5 volt (open circuit) ramp from a 600Ω source impedance.

**DC Offset**
DC offset of ∿ , ∿ , or ⊓ waveform, or DC if selected, is adjustable to ±10 volts open circuit and ±5 volts into a 50Ω load. Output current is limited to approximately 130 mA. Waveform + offset is limited to ±10V into an open circuit.

**GCV Output**
A dc voltage proportional to the instantaneous frequency of the generator output. 0 to +5V, open circuit, 1 kΩ source impedance.

### 1.2.2 Operating Modes

**Continuous**
Operating as a standard VCG (voltage controlled generator), frequency output is determined by front panel control settings in conjunction with external control voltage at VCG IN.

**Triggered**
Only one complete cycle of output appears at 50Ω OUT connector for each pulse applied to TRIG IN connector (or press of MAN TRIG switch).

**Gated**
Same as triggered mode except that output oscillations continue for duration of gating signal applied to TRIG IN connector (or as the MAN TRIG switch is depressed).

**Sweep**
The internal ramp generator can sweep the main generator up in frequency with a linear ramp. The end frequency points may be individually set and the time for each ramp can be varied from 100s to 1 ms.

### 1.2.3 Voltage Controlled Generator

VCG Control Range: Up to 1000:1 frequency change with external voltage input.

Input Impedance: 5 kΩ.

VCG Voltage: 0 to 5V.

VCG Slew Rate: 2% of range per μs.

VCG Linearity 0.0001 Hz to 50 kHz: ±0.5%.

### 1.2.4 Triggered Generator

Trigger pulse is 1V p-p to ±10V; input impedance is 10 kΩ, 33 pF; minimum pulse width is 50 ns; maximum repetition rate is 5 MHz.

### 1.2.5 Horizontal Precision

**Dial Accuracy (Symmetrical Waveform)**
±2% of full scale for 0.005 Hz to 5 MHz.
±4% of reading and ±2% of full scale for 0.0005 Hz to 0.005 Hz.

**Frequency Vernier**
Approximately 1% of range. Vernier affects calibration of frequency dial.

**Time Symmetry**
±1% for 0.005 to 500 kHz.

### 1.2.6 Vertical Precision

**Amplitude Change With Frequency (Sine)**
Less than 0.1 dB to 100 kHz.
Less than 0.2 dB to 1 MHz.
Less than 1 dB to 5 MHz.

**Step Attenuator Accuracy**
±0.3 dB per 20 dB step.

**Stability**
Short Term: ±0.05% for 10 minutes.
Long Term: ±0.25% for 24 hours.

Percentages apply to amplitude, dc offset and main generator frequency in the linear mode.

**Amplitude Symmetry**
±1% of amplitude range to 1 MHz for all symmetrical waveforms.

### 1.2.7 Purity

**Sine Distortion**
Less than 0.5% for 10 Hz to 100 kHz.
Less than 1% for 0.005 to 1 MHz.
All harmonics at least 30 dB down for 1 to 5 MHz.

**Triangle Linearity**
Greater than 99% for 0.0005 Hz to 100 kHz.

**Square Wave Rise and Fall Time**
Less than 25 ns terminated into 50Ω load.

**Square Wave Total Aberrations**
Less than 5%.

### 1.2.8 Environmental

All specifications listed are for 25°C ±5°C. For operation from 0°C to 55°C, specifications including horizontal pre-

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

cision, amplitude symmetry, and sine wave distortion are derated by a factor of 2.

### 1.2.9 Mechanical

**Dimensions**
11¼ in./28.6 cm wide; 5¾ in./14.5 cm high; 10¾ in./27.3 cm deep.

**Weight**
8.5 lb/3.8 kg net; 12 lb/5.5 kg shipping.

### 1.2.10 Power

90V to 110V, 105V to 125V, 180V to 220V or 210V to 250V; 50 Hz to 400 Hz; less than 25 watts.

*NOTE*

*Specifications apply from 10 to 100% of a selected frequency range with SYMMETRY control OFF.*



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# SECTION 2
# INITIAL PREPARATION

## 2.1 UNPACKING INSPECTION

After carefully unpacking the instrument, inspect the external parts for damage to knobs, dials, indicators, surface areas, etc. If there is damage, file a claim with the carrier who transported the instrument. Retain the shipping container and packing material for use in case reshipment is required.

## 2.2 PREPARATION FOR USE

Before connecting the instrument to line power, be sure the rear panel 115/230V and HI/LO switches are set to the value nearest the line voltage and that the fuse is correct for the switch setting. Be sure that the plug on the power cord is the proper mate for the line receptacle.

| AC Line Voltage | Switch A | Switch B | Fuse (SB) |
|---|---|---|---|
| 90 - 110 | 115 | LO | 1/4 amp |
| 105 - 125 | 115 | HI | 1/4 amp |
| 180 - 220 | 230 | LO | 1/8 amp |
| 210 - 250 | 230 | HI | 1/8 amp |

## 2.3 ELECTRICAL ACCEPTANCE CHECK

This checkout procedure verifies the generator operation. If a malfunction is found, refer to the Warranty in the front of this manual. An oscilloscope, 50Ω coax cable and 50Ω feedthru are needed for this procedure (figure 2-1).

Preset the generator front panel controls as follows:

| Control | Position |
|---|---|
| GEN MODE | CONT |
| WAVEFORM | ∿ |
| SYMMETRY | NORMAL |
| FREQ Range | X 1K |
| FREQ VERNIER | CAL |
| Frequency Dial | 1 |
| AMPLITUDE | 0 dB |
| AMPLITUDE VARIABLE | Full clockwise |
| DC OFFSET | 12 o'clock |
| TRIG LEVEL | Full counterclockwise |
| SWEEP MODE | CONT SWEEP |
| SWEEP WIDTH | MAX |
| SWEEP TIME | 12 o'clock |

Perform the steps in table 2-1. Only approximate values are required to verify operation.

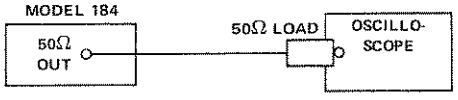



Figure 2-1. Acceptance Test Setup

Table 2-1. Performance Checkout

| Step | Control | Position/Operation | Observe at 50Ω OUT |
|---|---|---|---|
| | Function | | |
| 1 | POWER | Push on | Sine wave, 1 kHz, 10V p-p |
| 2 | WAVEFORM | ∿ | Triangle wave |
| 3 | WAVEFORM | ⊓ | Square wave |
| 4 | WAVEFORM | ⎍ | Positive pulse |
| 5 | WAVEFORM | ⎎ | Negative pulse |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Performance Checkout (Continued)


| Step | Control | Position/Operation | Observe at 50Ω OUT |
|---|---|---|---|
| 6 | SYMMETRY | cw | Frequency ÷ 10, decreasing negative pulse width |
| 7 | SYMMETRY | ccw | Decreasing positive pulse width |
| 8 | SYMMETRY | NORMAL | – – – |
| 9 | WAVEFORM | ∿ (OFFSET) | Sine wave, 1 kHz |
| | **Frequency** | | |
| 10 | FREQ Range | X 1M | Frequency = 1 MHz |
| 11 | FREQ VERNIER | ccw | Frequency decreases by at least 50 kHz |
| 12 | FREQ VERNIER | CAL | – – – |
| 13 | FREQ Range | X .001 | Detect generator running |
| 14 | FREQ Range | X 1K | – – – |
| 15 | Frequency Dial | 5 | Frequency = 5 kHz |
| 16 | Frequency Dial | .05 | Frequency = 50 Hz |
| 17 | Frequency Dial | 1 | – – – |
| | **Amplitude** | | |
| 18 | AMPLITUDE Range | –60 dB | 10 mV p-p |
| 19 | AMPLITUDE VARIABLE | ccw | 1 mV p-p |
| 20 | AMPLITUDE Range | 0 | 1V p-p |
| 21 | DC OFFSET | cw | Positive slew; about +5V positive peak |
| 22 | DC OFFSET | ccw | Negative slew; about –5V negative peak |
| 23 | WAVEFORM | ∿ (No OFFSET) | Triangle wave |
| | **Trigger & Gate** | | |
| 24 | GEN MODE | TRIG | 0 Vdc |
| 25 | MAN TRIG | Push | Generate one cycle |
| 26 | GEN MODE | GATED | 0 Vdc |
| 27 | MAN TRIG | Push and hold | Continuous ∿ waveforms |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Performance Checkout (Continued)

| Step | Control | Position/Operation | Observe at 50Ω OUT |
|---|---|---|---|
| 28 | MAN TRIG | Release | 0 Vdc |
| | **Sweep** | | |
| 29 | GEN MODE | SWEEP | Frequency sweeps |
| 30 | SWEEP TIME | cw | Sweep rate increases |
| 31 | SWEEP TIME | ccw | Sweep rate decreases |

Disconnect the cable at 50Ω OUT and connect it to SWP OUT: observe a 5 V ramp waveform. Connect it to GCV OUT: observe a ramp plus dc. Connect it to PULSE OUT: observe a 2.4 V positive pulse.

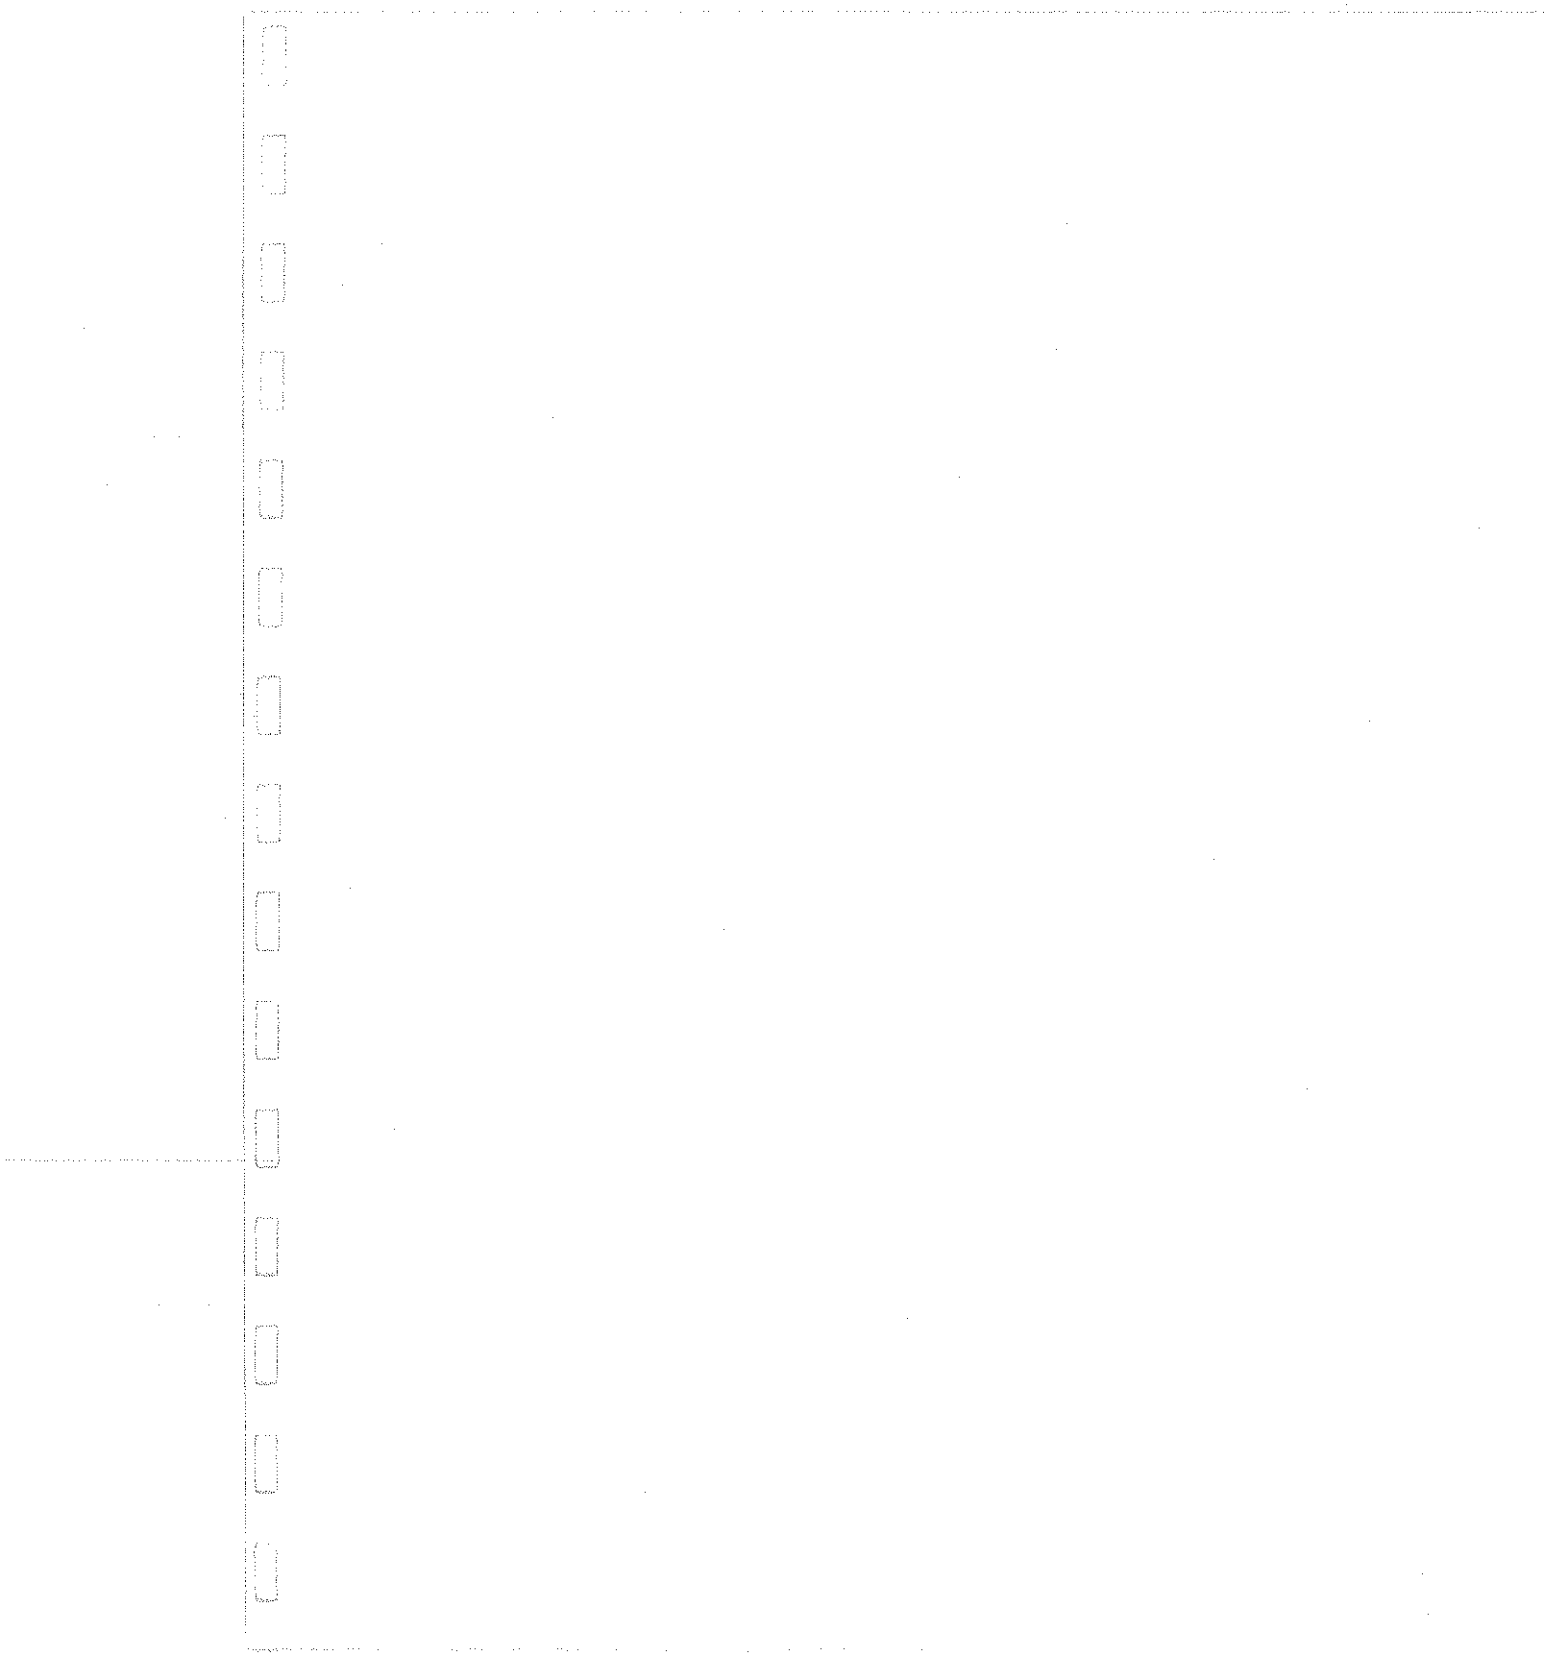

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# SECTION 3
# OPERATION

## 3.1 CONTROLS AND CONNECTORS

The generator front panel controls and connectors are shown in figure 3-1 and keyed to the following descriptions:

### (1) POWER Switch

Power is turned on and off with the POWER push-button. The frequency dial index (1A) lights when power is turned on.

### (2) Frequency Dial

Frequency settings of the dial multiplied by frequency range (18) determine output frequency. In frequency sweep operation, this dial determines the frequency from which sweep is started.

### (3) SWEEP WIDTH Control

The SWEEP WIDTH control determines the amount of frequency change that will occur in sweep mode. After the sweep start frequency is set by the frequency dial, SWEEP WIDTH determines the sweep stop frequency (see figure 3-2).

### (4) SWEEP MODE Selector

The SWEEP MODE selector is enabled by the GEN MODE selector (14) set to SWEEP. After the start frequency of the generator is determined by the frequency dial (2), the stop frequency is determined by the SWEEP WIDTH control (3). The SWEEP START and SWEEP STOP settings will hold the output signal at the start and stop

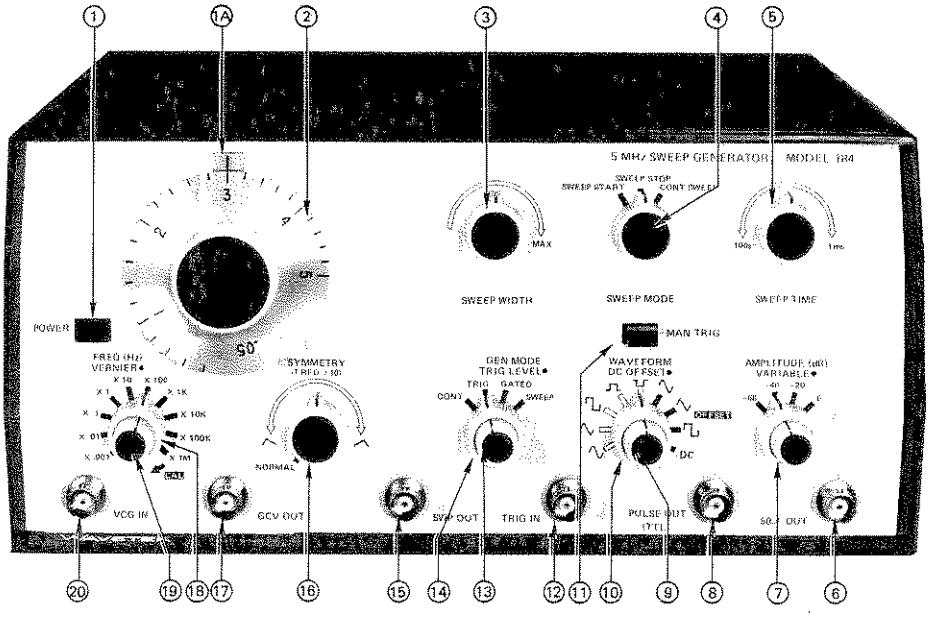



Figure 3-1. Front Panel Controls and Connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

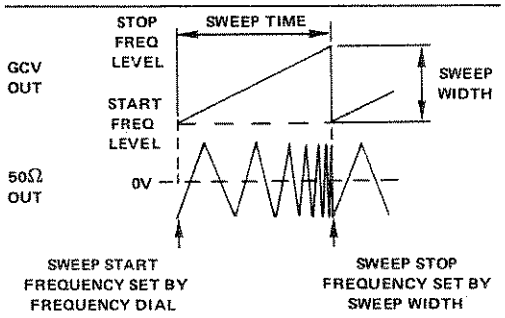



Figure 3-2. Effect of Sweep Time and Width on Output Frequency

frequencies, respectively, while the frequency dial (2) and SWEEP WIDTH control (3) are adjusted. CONT SWEEP allows frequency sweeping between the two set limits.

(5) **SWEEP TIME Control**

Frequency of the internal sweep ramp, and thus, the sweep repetition rate, is governed by the SWEEP TIME control (see figure 3-2).

(6) **Main Output Connector**

Maximum output of 10V p-p signals into a 50Ω load (20V p-p open circuit) is provided at the 50Ω OUT connector; all generator mode signals are delivered at this connector. See (7) for amplitude of output.

(7) **AMPLITUDE Control**

The AMPLITUDE switch affects waveforms, dc output and waveform dc offset. The VARIABLE control affects waveforms only. Maximum waveform amplitude is with the 0 dB setting of the AMPLITUDE control and with the VARIABLE control fully cw (see table 3-1). Amplitude is decreased 20 dB with VARIABLE control fully ccw.

Table 3-1. Maximum Voltage at 0 dB

| Function | Open Circuit | 50Ω Termination |
|---|---|---|
| ∿ , ⩘ , ⊓ | 20V p-p | 10V p-p |
| ⎍ | 0 to +10V | 0 to +5V |
| ⎎ | 0 to −10V | 0 to −5V |
| DC | ±10V | ±5V |

(8) **Synchronizing Pulse Output Connector**

A fixed amplitude (0 to about 5V) TTL pulse of the generator frequency is provided at the PULSE OUT connector. This output can be used as a synchronizing reference for the main output (6). Phase of the waveforms relative to the sync output is shown in figure 3-3.

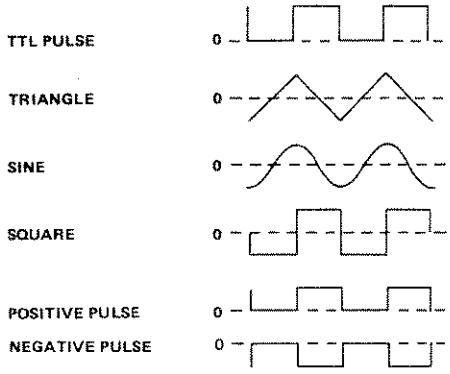



Figure 3-3. Pulse/Waveform Phase Relationship and Waveform Reference Lines

(9) **DC OFFSET Control**

Offset of waveforms and dc voltage are controlled by the DC OFFSET control. The WAVEFORM switch (10) must be in one of the four right-hand settings. Center of the waveform reference (figure 3-3) is skewed positive with clockwise rotation, negative with counterclockwise rotation. Offset and dc voltage maximums are ±5V (50Ω terminated).

(10) **WAVEFORM Selector**

Sine ∿ , triangle ⩘ , and square ⊓ waveforms, and positive and negative square pulse trains ⎍ , ⎎ are selected for output by the WAVEFORM selector, with or without dc offset. When set for dc offset, the inner knob (9) controls the ±5V (50Ω terminated) offset. DC is selected for dc output with voltage controlled by the inner knob (9).

(11) **Manual Trigger Control**

In TRIG mode (14), the MAN TRIG pushbutton is used to trigger a single cycle of waveform output

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

and, in the GATED mode, to gate the output of waveforms until released.

*NOTE*

*The TRIG LEVEL control (13) must be fully CCW.*

**(12) Remote Trigger Input Connector**

The TRIG IN connector accepts voltage level inputs that trigger and gate the generator in TRIG and GATED modes (14), respectively. The trigger level control (13) determines the level at which the TRIG IN input is accepted for triggering or gating. A positive-going excursion through a voltage level, which can be set in the range of −7.5V to +7.5V by the TRIG LEVEL control triggers or gates the generator operation.

A negative-going dc excursion through the trigger level ends gated operation. Figure 3-4 shows triggering and gating of the generator waveforms at time t1. Once triggered or gated, a full cycle of the selected waveform is output to its completion: when gating is removed at time t2, for example, the last full cycle of waveform completes itself at time t3.

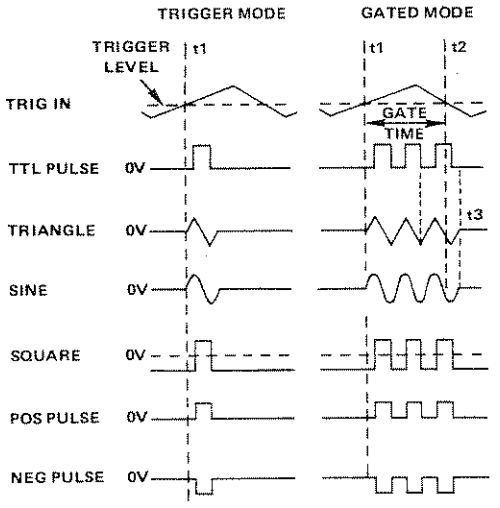



Figure 3-4. Generator Trigger and Gated Control

**(13) Trigger Level Control**

The TRIG LEVEL control determines the level at which the input at the TRIG IN connector (12) is accepted as a trigger in the generator trigger and gated modes (14). The trigger level can be varied from fully clockwise, where a positive-going excursion thru −7.5V is a trigger, to fully counterclockwise, where a positive-going excursion thru +7.5V is a trigger.

**(14) Generator Mode Selector**

Generator modes are:

1. Continuous — An uninterrupted output of the selected waveform at the selected frequency and amplitude.
2. Triggered — One cycle of the selected waveform at the selected frequency and amplitude when the trigger signal is detected at TRIG IN (12) or when manually triggered at (11).
3. Gated — A burst of the selected waveform at the selected frequency and amplitude, which starts when the gate signal is detected at TRIG IN (12) and lasts through the completion of the last cycle started before the removal of the gate signal, or starts and stops when manually gated at (11).
4. Automatically Swept Frequency — Sweep as determined by the SWEEP MODE control (4).

**(15) Sweep Ramp Output Connector**

The internal sweep generator ramp is available at the SWP OUT connector. Ramp frequency is varied by the SWEEP TIME control. Output is a 0 to +5V ramp, 600Ω source impedance.

**(16) Waveform SYMMETRY Control**

Normal symmetrical output results when SYMMETRY is set to NORMAL; an asymmetrical, or unbalanced, waveform results when SYMMETRY is set between ◺ and ◿. (Asymmetric operation reduces generator frequency to approximately 1/10th the normal output.) Figure 3-5 shows the effect of SYMMETRY control on the waveforms.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

*NOTE*

*When SYMMETRY control is used, the output frequency is different from the dial indicated frequency. The maximum symmetry ratio obtainable also depends on the frequency dial setting. A typical example is shown in table 3-2.*

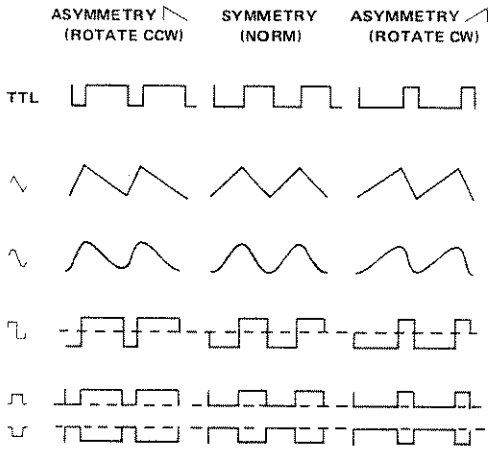



Figure 3-5. Effect of SYMMETRY Control

⑰ **GCV Output Connector**

GCV OUT provides dc excursions of 0 to about +5V which represent the output frequency in the selected range. Source impedance is 1 kΩ.

⑱ **Frequency Range Control**

The selected range settings of the FREQ selector, multiplied with the frequency dial ② setting determine output frequency.

⑲ **Frequency VERNIER Control**

The frequency is as labeled on ⑱ and ②, when the VERNIER control is set fully clockwise to CAL (calibrated). Rotating the VERNIER control counterclockwise decreases output frequency. The range is approximately 1% of the selected frequency range.

⑳ **VCG Input Connector**

DC voltage excursions of 0 to ±5 volts at the VCG IN connector control frequency within the selected range. Positive inputs increase frequencies set by the frequency dial ② and range control ⑱, and negative inputs decrease the frequencies. Input impedance is 5 kΩ. Frequency excursions of 1000:1 are possible.

## 3.2 OPERATION

Operation is discussed in terms of the four generator modes: continuous, triggered, gated and sweep plus VCG.

### 3.2.1 Signal Termination

Proper signal termination, or loading, of the generator connectors is necessary for its specified operation. For example, the proper termination of the main output is shown in figure 3-6. Placing the 50Ω terminator, or 50Ω resistance, in parallel with a higher impedance matches the receiving

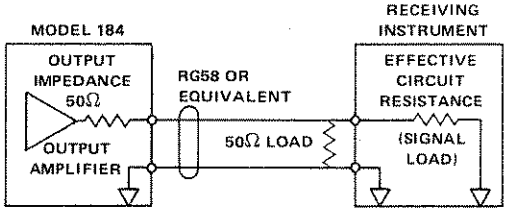



Figure 3-6. Signal Termination

Table 3-2. Dial Setting

| Frequency Range | X 100K | | | | | |
|---|---|---|---|---|---|---|
| Dial Setting | 5 | 4 | 3 | 2 | 1 | 0.5 |
| Indicated Frequency | 500 kHz | 400 kHz | 300 kHz | 200 kHz | 100 kHz | 50 kHz |
| Output Frequency | 54 kHz | 44 kHz | 33 kHz | 23 kHz | 12 kHz | 6.5 kHz |
| Maximum Symmetry Ratio | 18:1 | 18:1 | 18:1 | 17:1 | 16:1 | 15:1 |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

instrument input impedance to the generator output impedance, thereby minimizing signal reflection or power loss on the line due to phase angle mismatch.

The input and output impedance of the generator connectors are listed below:

| Connector | Impedance |
|---|---|
| 50Ω OUT | 50Ω |
| TRIG IN | 10 kΩ |
| PULSE OUT (TTL) | * |
| SWP OUT | 600Ω |
| VCG IN | 5 kΩ |
| GCV OUT | 1 kΩ |

*The PULSE OUT connector can drive up to 20 Transistor-Transistor Logic (TTL) loads (low level between 0V and 0.4V, and high level between 2.4V and 5V).

### 3.2.2 Continuous Operation

Basic, or continuous, operation of the generator involves turning on power, selecting a continuous output mode, selecting a waveform, and setting the output signal frequency and amplitude. When operation is critical, allow a one-half hour warm-up period. The following steps demonstrate use as a basic function generator:

| Step | Control/Connector | Setting |
|---|---|---|
| 1 | 50Ω OUT | Connect circuit (refer to paragraph 3.2.1). |
| 2 | PULSE OUT | Use for external synchronization, if required. |
| 3 | GEN MODE | CONT |
| 4 | WAVEFORM | Choose one of the left-hand set of waveforms. If dc or dc offset is desired, use right-hand set. |
| 5 | SYMMETRY | NORMAL or desired asymmetry. (Affects frequency calibration.) |
| 6 | FREQ | As desired for frequency range. |
| 7 | Frequency Dial | As desired for exact frequency. |
| 8 | FREQ VERNIER | CAL, unless extreme frequency accuracy is required, in which case, monitor with a frequency counter. |
| 9 | AMPLITUDE | As desired. |
| 10 | AMPLITUDE VARIABLE | As desired. |
| 11 | DC OFFSET | As desired (step 4, right-hand set of waveforms must be chosen). CW positive offset, ccw negative offset. See figure 3-7 for restrictions. |

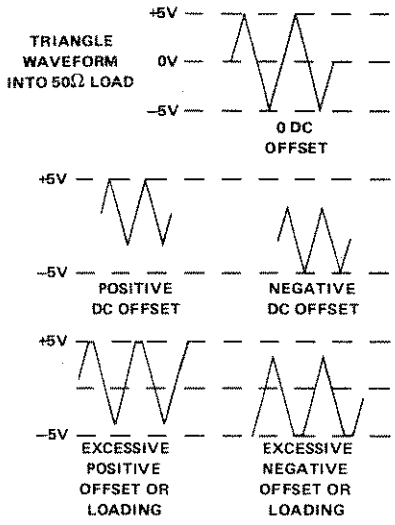



Figure 3-7. DC OFFSET Control

### 3.2.3 Trigger Mode

Operation as a triggered one cycle generator is as for a basic function generator, only the operating mode is triggered (TRIG) instead of continuous (CONT), and a manual or remote trigger (MAN TRIG, TRIG IN) is used to start the single cycle of waveform. Perform the steps given in paragraph 3.2.2, only set the GEN MODE control in step 3 to TRIG. Refer to paragraph 3.2.4 for triggering.

*NOTE*

*The signal at SWP OUT can be used as source of repetitive trigger inputs.*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

### 3.2.4 Triggering

Manual trigger as follows:

| Step | Control/Connector | Setting |
|---|---|---|
| 1 | TRIG LEVEL | Full ccw. |
| 2 | MAN TRIG | Press for each cycle desired. |

Remote trigger as follows:

| Step | Control/Connector | Setting |
|---|---|---|
| 1 | TRIG LEVEL | Rotate the TRIG LEVEL control cw to set negative thresholds as low as −7.5V through which a positive-going TRIG IN connector input can pass to provide triggering. CCW sets positive thresholds of up to +7.5V through which a positive-going TRIG IN level can pass to provide triggering. |
| 2 | TRIG IN | Apply a positive-going voltage (through the threshold set in the preceding step) to the TRIG IN connector to provide remote triggering. |

**CAUTION**

**Avoid voltages greater than ±50V at TRIG IN to prevent damage to the generator.**

### 3.2.5 GATED (or Tone Burst) Mode

Operation as a gated or tone burst generator is as for a triggered generator, only the operating mode is GATED, and releasing the MAN TRIG or removing the remote trigger voltage ends the burst of output waveform. Perform the steps of paragraph 3.2.2, only set the GEN MODE control to GATED. Refer to paragraph 3.2.4 for triggering.

### 3.2.6 SWEEP Mode

The generator can be set for a repetitive sweep of output frequencies within a given range. Operation is like continuous mode, only a separately controlled, internal ramp generator provides an additional VCG input to control frequency. (This internally-generated ramp is also available at the SWP OUT connector.) Perform the steps given in paragraph 3.2.2, only set the GEN MODE control in step 3 to SWEEP and include the following steps:

| Step | Control/Connector | Setting |
|---|---|---|
| 1 | SWEEP MODE | SWEEP START. |
| 2 | Frequency Dial | Desired start sweep frequency. |
| 3 | SWEEP MODE | SWEEP STOP. |
| 4 | SWEEP WIDTH | Desired stop sweep frequency. |
| 5 | SWEEP MODE | CONT SWEEP |
| 6 | SWEEP TIME | As desired. |

### 3.2.7 Voltage Control — VCG

Operation with voltage control can be done in any mode but is usually done in continuous mode; the frequency

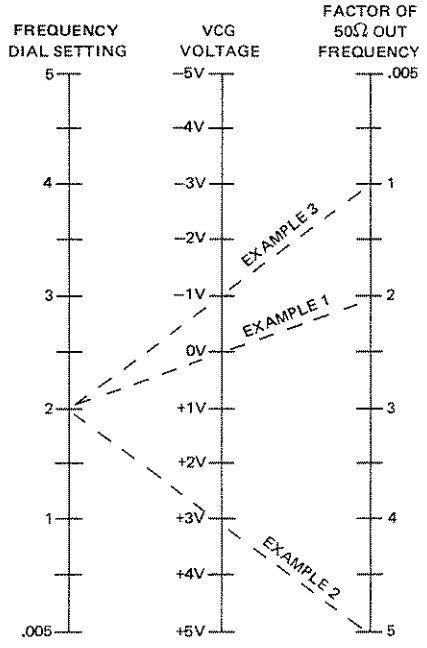



Figure 3-8. VCG Voltage-to-Frequency Nomograph

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

within a particular range is additionally controlled with dc levels within ±5V, injected at the VCG IN connector. Perform the steps given in paragraph 3.2.2, only set the frequency dial to determine a reference from which the frequency is to be voltage controlled:

1. For frequency control with positive dc inputs at VCG IN, set the dial for a lower limit from which frequency is to be increased.

2. For frequency control with negative dc inputs at VCG IN, set the dial for an upper limit from which frequency is to be decreased.

3. For modulation with an ac input at VCG IN, set the dial at the desired center frequency. Do not exceed the maximum dynamic range of the selected frequency range.

Figure 3-8 is a nomograph with examples of the frequency dial effect as a reference for VCG IN voltages. Example 1 shows that with 0V VCG input (2nd column), frequency (3rd column) is as determined by the frequency dial setting of 2 (1st column). Example 2 shows that with a positive VCG input, output frequency is increased. Example 3 shows that with a negative VCG input, output frequency is decreased. (Note that the Factor of 50Ω OUT Frequency column must be multiplied by the frequency range in order to give the actual 50Ω OUT frequency.) For full 1000:1 linear mode VCG sweep of the generator frequencies, set the FREQ VERNIER full ccw.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

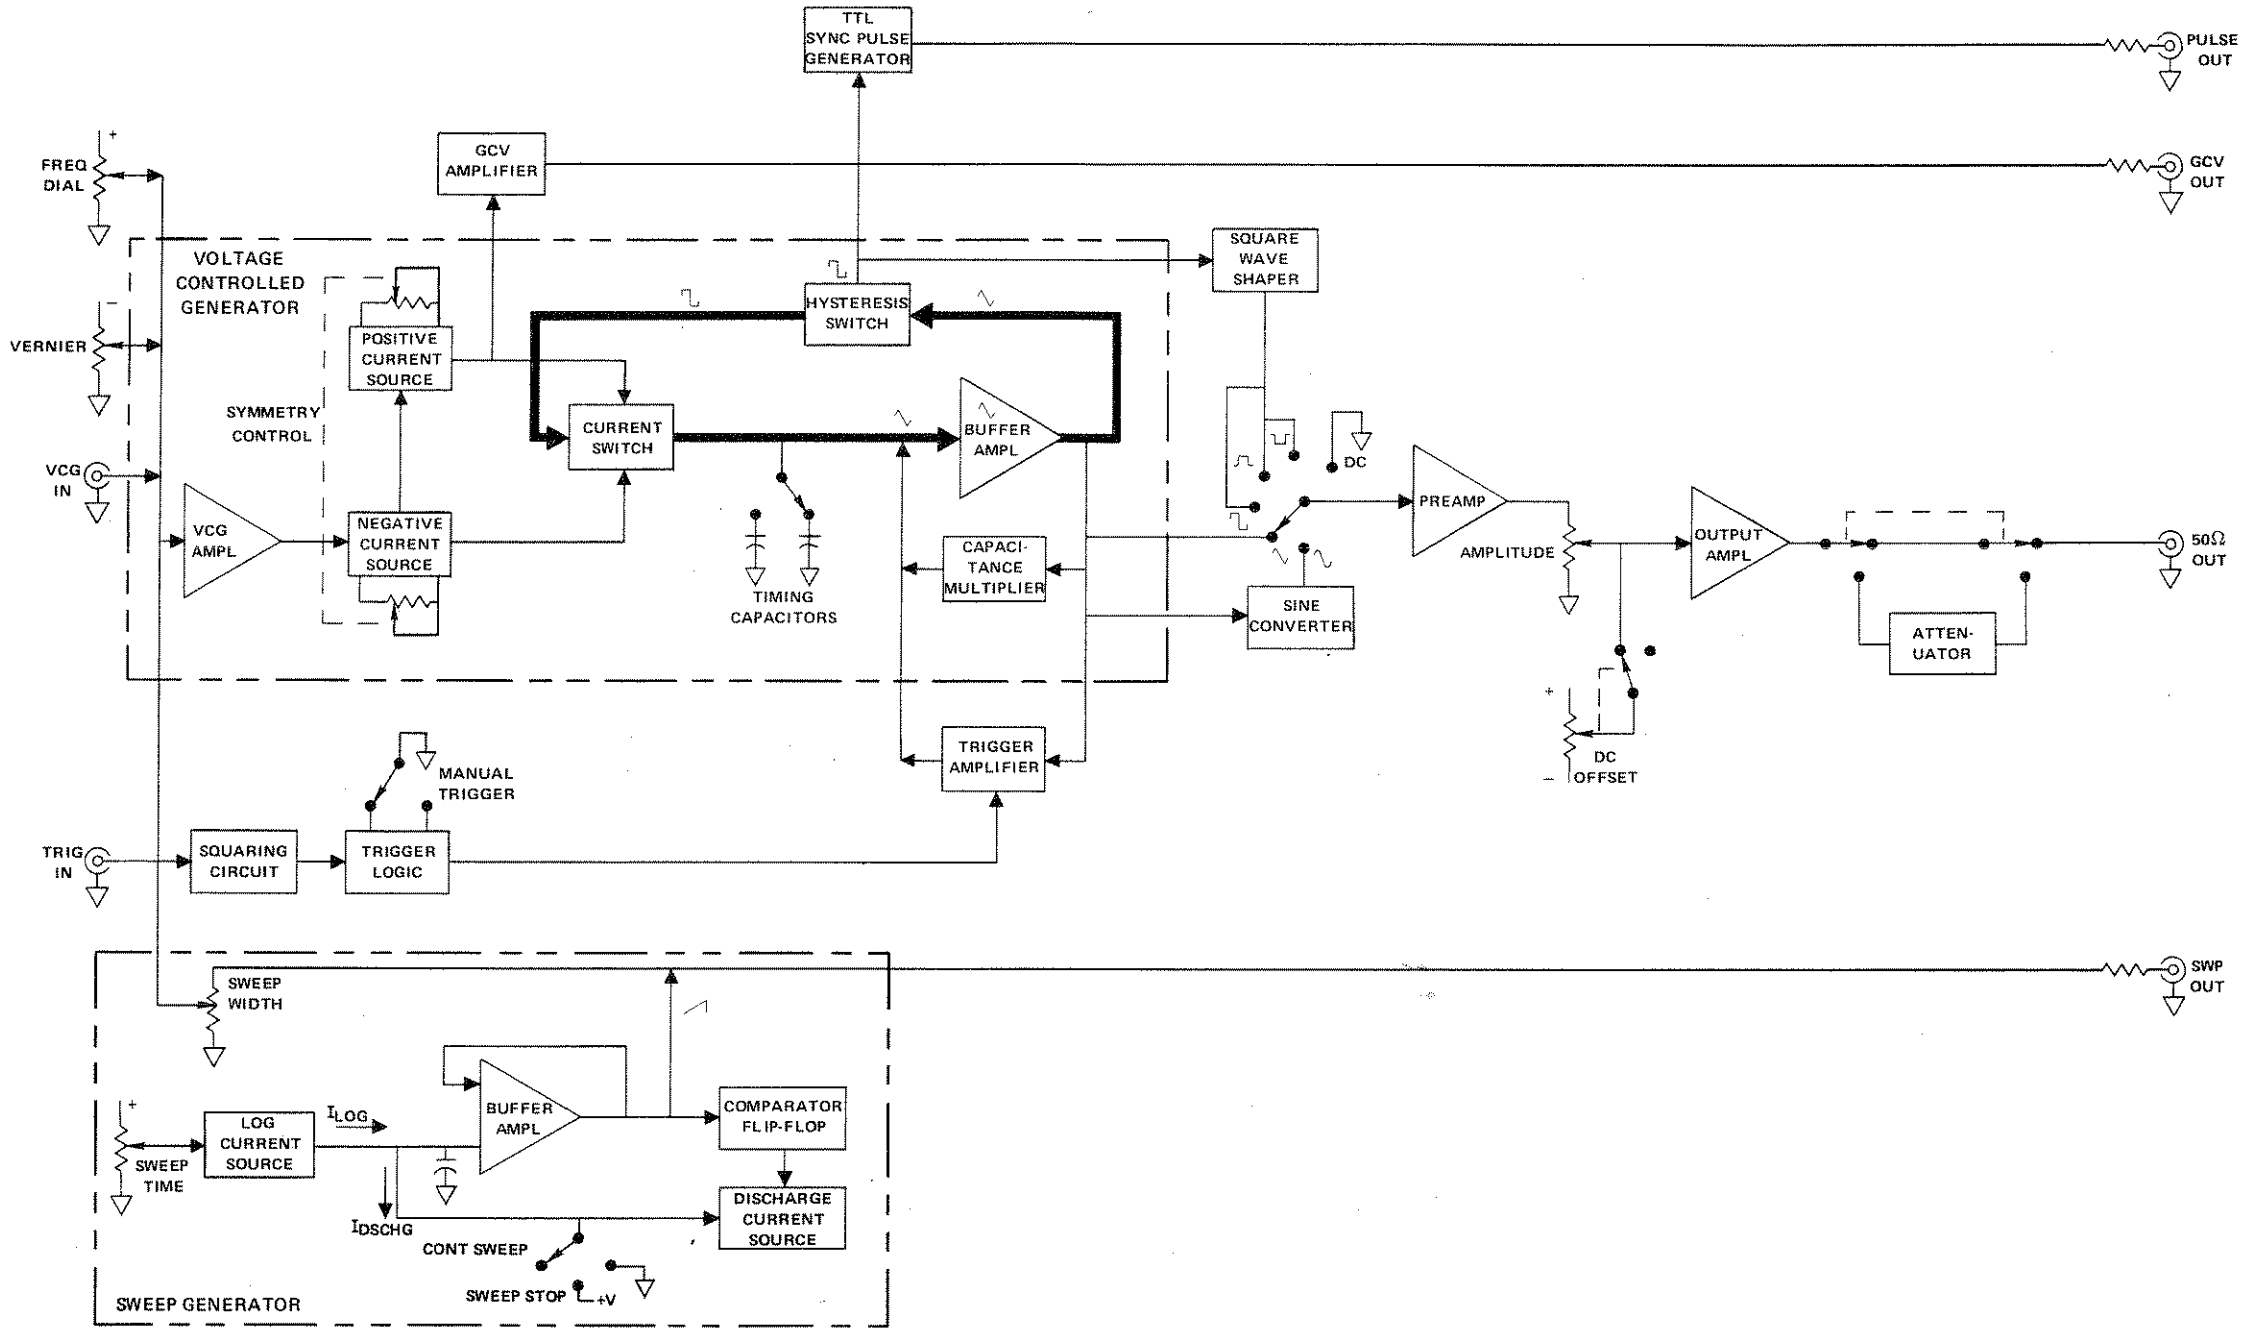



Figure 4-1. Simplified Block Diagram



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# SECTION 4
# CIRCUIT DESCRIPTION

## 4.1 VOLTAGE CONTROLLED GENERATOR

The heart of the generator consists of the positive and negative current sources, the current switch, timing capacitors, triangle amplifier, and hysteresis switch (figure 4-1).

The positive and negative current sources generate equal but opposite polarity currents which charge and discharge the timing capacitor selected by the range selector. The current switch, which is controlled by the hysteresis switch, selects either the positive or the negative current as the input to the capacitor. Since the capacitor is being charged by a current source which changes polarity periodically, the voltage across the capacitor forms a triangle waveform. This waveform is fed through the triangle buffer amplifier to the hysteresis switch. The hysteresis switch determines when the triangle waveform reaches predetermined positive and negative peak values. When this occurs, the output of the hysteresis changes state and causes the current switch to select the opposite polarity current. The output of the hysteresis switch is a square wave whose edges correspond to the triangle peak values.

The magnitude of the current produced by the current sources is dependent upon the output of the VCG amplifier. By varying the output of the VCG amplifier, the frequency of the triangle and square waveforms may be controlled.

In order to generate sine waves, the triangle waveform is sine shaped in the sine converter circuit with nonlinear elements. The waveform switch selects the waveform of interest and a portion of the signal is selected by the amplitude potentiometer and applied to the output amplifier. The output amplifier is capable of driving a 50Ω load and may be dc offset. The amplifier output is routed to a 50Ω attenuator which can provide 60 dB of attenuation in 20 dB steps. An additional 20 dB of attenuation can be obtained from the amplitude control.

The square wave from the hysteresis switch is also applied to the TTL sync pulse generator, whose square wave output is TTL compatible.

To change frequency ranges, different timing capacitors may be selected by the frequency range switch. On the very slow frequencies the capacitance multiplier becomes active. This circuit senses the capacitor charging current and then subtracts a certain percentage of it from the capacitor. As a result, the capacitor does not charge as fast, and the frequency, as a result, is lower.

Several things can affect the frequency of the generator by varying the output of the VCG amplifier. One is the frequency dial of the function generator which feeds a voltage to the VCG amplifier. In addition to the frequency dial, the frequency vernier feeds in a voltage to the VCG amplifier. The range of the vernier is approximately 1% of the full scale frequency. Finally, an external voltage applied to the VCG input can control the frequency of the generator loop. The VCG input allows frequency modulation of the generator by an external signal.

Under normal conditions the generator loop runs with the positive and negative current sources balanced. This results in symmetrical sine, triangle and square waveforms, or in the case of the square waveform, a duty cycle of 50%. By varying the symmetry control, the current sources may be unbalanced which results in the generation of asymmetrical waveforms. This allows the generation of pulses, ramps, and other waveshapes.

In the trigger mode, the generator is stopped by the trigger amplifier. This amplifier compares the output of the triangle amplifier to ground. Its output draws just the right amount of current away from the capacitor to keep it at zero volts. This level is known as the trigger baseline. When an external signal is applied to the trigger input, it is shaped into a fast rise time pulse by the squaring circuit and is applied to the trigger logic circuit. This circuit in turn shuts off the trigger amplifier for one cycle of the output waveform. Trigger input may also be made manually by the manual trigger switch.

The trigger logic circuit also allows the generator to run in the gated mode. In this mode the generator will run as long as the trigger input signal is positive. When it goes negative, the generator will continue to run until the last cycle is complete and then remain at the trigger baseline level.

The GCV output is an analog output voltage proportional to the instantaneous output frequency of the generator. This is from the GCV amplifier which senses the positive

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

current source output and generates a voltage proportional to the current.

### 4.2 SWEEP GENERATOR

The internal sweep generator can frequency modulate the main generator. It generates a positive-going linear ramp signal which can be controlled in both period and amplitude. This signal is added to that of the main frequency dial and is applied to the VCG amplifier. This results in a linearly increasing FM sweep.

The linear sweep ramp is obtained by charging the capacitor with a constant current from the log current source. When the positive peak of the ramp reaches a predetermined value, the comparator turns on the discharge current source and quickly discharges the capacitor to zero volts. When this point is reached, the comparator resets and turns off the discharge current source. A new ramp cycle now begins.

The buffer amplifier provides a high input impedance to the capacitor, thus assuring a highly linear ramp. It also provides the power required to drive the main generator VCG circuit.

The log current source has a built-in log converter circuit which allows a single sweep rate control to provide sweep rates of 1 ms to 100s: a $10^5$ control range.

A sweep output signal can drive X-Y recorders or other devices.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# SECTION 5
# CALIBRATION

## 5.1 FACTORY REPAIR

Wavetek maintains a factory repair department for those customers not possessing the necessary personnel or test equipment to maintain the instrument. If an instrument is returned to the factory for calibration or repair, a detailed description of the specific problem should be attached to minimize turnaround time.

## 5.2 REQUIRED TEST EQUIPMENT

Spectrum Analyzer . . . . . 600 kHz to 5 MHz
Voltmeter . Microvolt dc measurement (0.01% accuracy)
Oscilloscope, Dual Channel . . . 150 MHz bandwidth
Distortion Analyzer . . . . . To 600 kHz
Counter . . . . . To 10 MHz (0.1% accuracy)
50Ω Load . . . . . ±0.1% accuracy

## 5.3 REMOVING GENERATOR COVER

For main circuit board access, invert the instrument, remove the four screws in the cover, and lift off the bottom cover.

## 5.4 CALIBRATION

After referring to the following preliminary data, perform calibration, as necessary, per table 5-1. If performing partial calibration, check previous settings and adjustments for applicability.

1. Unless otherwise noted, all measurements made at the 50Ω OUT connector should be terminated into a 50Ω (±0.1%) load.

2. Test Points (TPs) and adjustments are on the main board unless noted otherwise.

3. Before connecting the unit to an ac source, check the ac line circuit to make sure the 115/230 and HI/LO switches are set at the correct position (see paragraph 2.2).

4. Start the calibration by setting the front panel switches as follows:

FREQ Range . . . . . X 10K
Frequency Dial . . . . . 5
FREQ VERNIER. . . . . CAL
SYMMETRY . . . . . NORMAL
GEN MODE . . . . . CONT
WAVEFORM . . . . . ⎍ (No Offset)
AMPLITUDE . . . . . 0
AMPLITUDE VARIABLE. . . . . Max cw
SWEEP MODE . . . . . SWEEP START
SWEEP TIME . . . . . 100s

5. Allow the unit to warm up at least 30 minutes for final calibration.

**Table 5-1. Calibration Chart**

| Step | Check | Tester | Cal Points | Control Settings | Adjust | Desired Results | Remarks |
|---|---|---|---|---|---|---|---|
| 1 | Power Supply Regulators | Voltmeter | C84 (+) | — | R206 | +15 Vdc ±50 mV | Ground is C84 (—). |
| 2 | | | C88 (—) | | | —15 Vdc ±150 mV | |
| 3 | | | C80 (+) | | | +5V ±250 mV | |
| | Cover the instrument and allow a 30 minute warm-up. Keep covered as much as possible during calibration. | | | | | | |
| 4 | Amplifier Offset | Voltmeter | Q19 emitter | GEN MODE: TRIG WAVEFORM: ∿ | R192 | 0V ±5 mV | ∿ amplifier output. |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 5-1. Calibration Chart (Continued)

| Step | Check | Tester | Cal Points | Control Settings | Adjust | Desired Results | Remarks |
|---|---|---|---|---|---|---|---|
| 5 | Amplifier Offset | Voltmeter | 50Ω OUT | | R124 | 0V ± 10mV | |
| 6 | | | | AMPLITUDE VARIABLE: max ccw | R156 | | Repeat steps 5 and 6 |
| 7 | Time Symmetry | Dual channel scope | | GEN MODE: CONT<br>WAVEFORM: ⊓<br>FREQ: X 1K<br>Dial: 5<br>Scope time base: 20 μs/div | R32 | Time symmetry < 0.1% | Follow procedure in figure 5-1. |
| 8 | | | | FREQ: X 100K<br>Dial: .05 | R35 | | Follow procedure in figure 5-1. |
| 9 | | | | | | | Repeat steps 6 and 7. |
| 10 | VCG Zero | | | Same as for step 7 | R13 | Minimum frequency shift while shorting and opening VCG IN BNC to ground | |
| 11 | Sine Distortion | Distortion analyzer (with 50Ω termination) | | FREQ: X 1K<br>VERNIER: CAL<br>Dial: 5<br>WAVEFORM: ∿ | R68, R71 | Distortion < 0.16% | If minimum distortion cannot be met, refer to table 6-1. |
| 12 | | | | Dial: 1 | | Distortion < 0.2% | If adjustment was necessary, repeat step 10. |
| 13 | | | | FREQ: X 10K | | | |
| 14 | High Freq Sine Distortion | | | FREQ: X 1M<br>Dial: 1<br>WAVEFORM: ⊓ | C64 | Minimum rise time with minimum overshoot | |
| 15 | | Spectrum analyzer | | WAVEFORM: ∿ | None | All harmonics below −32 dB from 1 to 5 MHz | If not, refer to table 6-1. |
| 16 | Frequency | Counter | | WAVEFORM: ⊓<br>FREQ: X 10K<br>Dial: 5 | R21 | 50 kHz ±100 Hz | |
| 17 | | | | FREQ: X 1M | C22 | 5 MHz ±20 kHz | Repeat steps 15 and 16. |
| 18 | | | | FREQ: X 100K | –C17 | 500 ±1 kHz | Change C16 if necessary |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 5-1. Calibration Chart (Continued)

| Step | Check | Tester | Cal Points | Control Settings | Adjust | Desired Results | Remarks |
|---|---|---|---|---|---|---|---|
| 19 | Frequency | Counter | 50Ω OUT | FREQ: X 100 | None | 500 ±10 Hz | |
| 20 | | | | FREQ: X 1K | | 5 kHz ±100 Hz | |
| 21 | | | | FREQ: X 10K | | 50 ±1 kHz | |
| 22 | Time Symmetry | Dual channel scope | | FREQ: X 10<br>Scope time base: 0.1s/div | R92 | Time symmetry < 0.1% | Follow procedure in figure 5-1. |
| 23 | Frequency | Counter | | Dial: 5 | R88 | 50 ±0.1 Hz or 20 ms ±40 μs | Change R87 if necessary. |
| 24 | | | | FREQ: X .001 | None | 5 MHz ± 0.3 mHz 189s to 217s. | |
| 25 | | | | FREQ: X .01 | | .05 Hz ± 1 mHz or 20s ± 400ms | |
| 26 | | | | FREQ: X .1 | | 0.5 Hz ± 10mHz or 2s ± 40ms | |
| 27 | | | | FREQ: X 1 | | 5 Hz ± 100mHz or 0.2s ± 4ms | |
| 28 | | | | FREQ: X 1K<br>Dial: 5, 4, 3, 2, 1, .5 | | Dialed Freq ±100 Hz | |
| 29 | | | | FREQ: X 1M<br>Dial: .5, 1, 2, 3, 4, 5 | | Dialed Freq ± 100kHz | |


Remove the four screws attaching the main board to the long standoffs. Put the bottom cover on, but do not insert the screws. Place the instrument on its feet and remove the top cover for sweep board access.

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| 30 | Sweep | Oscilloscope | SWP OUT | SWEEP MODE: CONT SWEEP | | | With SWEEP TIME, set SWP OUT to near 100 Hz. Alternate SWEEP MODE between CONT SWEEP and SWEEP STOP while performing step 31. |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 5-1 Calibration Chart (Continued)

| Step | Check | Tester | Cal Points | Control Settings | Adjust | Desired Results | Remarks |
|---|---|---|---|---|---|---|---|
| 31 | Sweep | Oscilloscope | SWP OUT | No change | Sweep board R12 | CONT SWEEP amplitude = SWEEP STOP amplitude ±10 mV | |

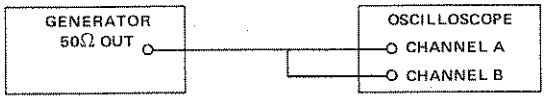



1. ADJUST OSCILLOSCOPE.

   TRIGGER: INTERNAL AND ALTERNATE
   CHANNEL A: NORMAL
   CHANNEL B: INVERTED

2. ADJUST FREQUENCY DIAL/VERNIER FOR ONE CYCLE ON SCOPE.

3. SWITCH X 10 SWEEP MAGNIFIER ON.

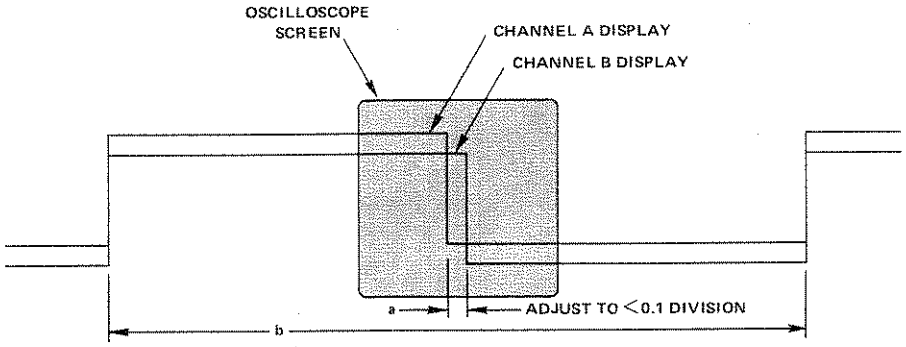


TIME SYMMETRY = 100 a/b%
SPECIFICATION: ±0.1%

Figure 5-1. Time Symmetry Measurement

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# SECTION 6
# TROUBLESHOOTING

## 6.1 INTRODUCTION

This section is organized as follows:

Circuit Board Access
Basic Techniques
Troubleshooting Individual Components
Troubleshooting Guide

(Refer to paragraph 5.2 for required test equipment.)

*NOTE*

*Wavetek maintains a factory repair department for those customers not possessing the necessary personnel or test equipment to maintain the instrument. If an instrument is returned to the factory for calibration or repair, a detailed description of the specific problem should be attached to minimize turnaround time.*

## 6.2 CIRCUIT BOARD ACCESS

Turn the instrument over, remove the four screws in the bottom cover and remove the bottom cover. For sweep board access, remove the four screws holding the main board to its long standoffs, place the instrument right side up and remove the top cover.

## 6.3 BASIC TECHNIQUES

Troubleshooting requires no special technique. Listed below are a few reminders of basic electronic fault isolation.

1. Check control settings carefully. Many times a seemingly malfunction is an incorrect control setting, or a knob that has loosened on its shaft.

2. Check associated equipment connections. Make sure that all connections are securely connected to the correct connector.

3. Perform the calibration procedure. Many out-of-specification indications can be corrected by performing specific calibration procedures.

4. Visually check the interior of the instrument. Look for such indications as broken wires, charred components, and loose leads.

## 6.4 TROUBLESHOOTING INDIVIDUAL COMPONENTS

### 6.4.1 Transistor

A transistor is defective if more than one volt is measured across its base emitter junction in the forward direction.

A transistor when used as a switch may have a few volts reverse bias voltage.

If the collector and emitter voltages are the same, but the base emitter voltage is less than 500 mV forward voltage (or reversed bias), the transistor is defective.

A transistor is defective if its base current is larger than 10% of its emitter current (calculate currents from voltage across the base and emitter series resistors).

### 6.4.2 Diode

A diode is defective if there is greater than 1 volt (typically 0.7 volt) forward voltage across it (except Zener and LED).

### 6.4.3 Operational Amplifier

The "+" and "—" inputs of an operational amplifier will have less than 15 mV voltage difference when operating under normal conditions.

If the output voltage stays at maximum positive, its "+" input voltage should be more positive than its "—" input voltage, or vice versa; otherwise, the operational amplifier is defective.

### 6.4.4 FET Transistor

No gate current should be drawn by the gate of an FET transistor. If so, the transistor is defective.

The gate-to-source voltage is always reverse biased under a normal operating condition; e.g., the source voltage is more positive than the gate voltage for 2N5485, and the source

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

voltage is more negative than gate voltage for a 2N5462. Otherwise, the FET is defective.

### 6.4.5 Capacitor

Shorted capacitors have zero volts across their terminals.

Opened capacitor can be located (but not always) by using a good capacitor connected in parallel with the capacitor under test and observing the resulting effect.

## 6.5 TROUBLESHOOTING GUIDE

Table 6-1 provides a list of possible malfunction symptoms, their probable causes, and the prescribed remedies. Localize the fault to a specific stage by checking the parameters given for the test points. Then check the dc operating voltages at the pins of solid-state devices. Check associated passive elements with a high input impedance ohmmeter (power off) before replacing a suspected semiconductor element.

**Table 6-1. Troubleshooting Guide**

| Symptom | Corrective Procedures |
|---|---|
| POWER SUPPLY PROBLEM | |
| Blown fuse | 1. Check that the HI/LO and 115/230 switches at the rear panel are set correctly. (Refer to paragraph 2.2.)<br>2. Replace fuse; if fuse blows again, refer to the following steps.<br>3. Examine circuit boards and wiring for source of short circuit.<br>4. Use an ohmmeter to detect possible short circuits between power supply and ground and between individual power supplies.<br>5. Isolate each part of the circuit by unplugging the sweep board and unsoldering the jumpers along the power supply path. Plug in the sweep board and replace the jumpers one-by-one to isolate the overloading circuit. Frequently, a shorted capacitor is the problem. |
| ±15V supply voltage below normal | Isolate the power supply from most of the generator circuits by unsoldering the two jumpers near the "+" end of C81 on the main circuit board. If supply voltage returns to normal, there is an extra loading current from a generator circuit; otherwise, troubleshoot the power supply circuitry. |
| ±15V supply voltage above normal | Power supply circuit malfunction. |
| +5V regulator voltage abnormal | Isolate the regulator from generator circuits by unsoldering any leads at E15, E16 and E17. If regulator voltage returns to normal, there is an extra loading current from a generator circuit; otherwise, the trouble is in the regulator. Replace IC10. |
| Index (lighted indicator) on front panel abnormally bright or dim | HI/LO switch at the rear panel is not set correctly. (Refer to paragraph 2.2.) |
| OUTPUT WAVEFORM PROBLEM | |
| No output waveform at 50Ω OUT and PULSE OUT (GEN MODE at CONT) | 1. Ensure power supply voltages are normal.<br>2. Temporarily remove Q44 on main board. If generator runs, problem is in the trigger and gate logic circuit. Otherwise, trouble is in the generator loop. |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 6-1. Troubleshooting Guide (Continued)

| Symptom | Corrective Procedures |
|---|---|
| No output waveform at 50Ω OUT, but PULSE OUT normal, or all waveforms greatly distorted | Set the AMPLITUDE VARIABLE full ccw and set WAVEFORM to DC. If the output voltage at 50Ω OUT can be adjusted to ±10V into open circuit with the DC OFFSET control, the problem is in the preamplifier; otherwise, check the output amplifier. |
| Both waveform amplitude and frequency jittering | 1. Power supply out of regulation due to ac line voltage being too low. Check line voltage. Make sure the HI/LO switch setting on rear panel is correct. (Refer to paragraph 2.2.)<br>2. Power supply malfunction. (Refer to Power Supply Problem.) |
| Distorted sine and square waveforms, but triangle waveform normal | Sine converter and square shaper malfunction. Check for defective diode.<br>*NOTE*<br>*If a diode is bad, the entire set of eight diodes should be replaced with a new matched set, or select a diode that gives minimum sine distortion at 1 kHz.* |
| Half of sine and square waveforms missing | 1. Defective diodes CR17 or CR21.<br>2. Defective switch wafer or loose contact of SW3-A and SW3-B. |
| Distorted triangle and sine waveforms at one particular frequency range | 1. Check for defective timing capacitor of the range (C15 thru C23).<br>2. Check C8 thru C10, C13, C25 and C94, if distortion shown at X 1 MHz range. |
| Distorted waveform or generator not running when X .001 Hz thru X 10 Hz selected | Capacitance multiplier malfunction. |
| Sine distortion out of specification at frequency below 500 kHz | 1. Square wave time symmetry is not calibrated correctly.<br>2. Defective component in sine converter and square shaper.<br>*NOTE*<br>*If a diode is bad, the entire set of eight diodes should be replaced with a new matched set, or select a diode that gives minimum sine distortion at 1 kHz.*<br>3. Resistor R109, R111, R112 or R114 is out of tolerance. Connect 10 kΩ trim potentiometers in locations marked R111 and R112. Adjust the two trim potentiometers and also R68 and R71 to obtain less than 0.16% distortion. Remove the potentiometers, measure the resistance and replace with standard 1/8W resistors. If 0.16% distortion still cannot be achieved, remove both R110 and R113 and connect a 500Ω trim potentiometer in each location. Adjust the two trim potentiometers R68 and R71 for less than 0.16% distortion. Replace potentiometers with standard 1/8W resistors.<br>4. If sine distortion is OK at 1 kHz, but out of specification at 10 kHz, check for defective C31, C32, C38, Q6 and Q14. |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 6-1. Troubleshooting Guide (Continued)

| Symptom | Corrective Procedures |
|---|---|
| Sine distortion out of specification at frequency greater than 500 k Hz | 1. Check square wave for slow rise/fall time. If so, check for defective capacitor in the preamplifier and output amplifier.<br>2. Frequency dial accuracy and sine distortion problems at X 1M range are due to the excess peaking or roll-off of the triangle waveform. Capacitors C28 and C35, also C29 and C34, need to be selected for maximum flatness of the triangle peak voltages at emitter of Q19. To check the flatness of the triangle peak voltage, a high frequency oscilloscope and a X 10 scope probe (> 150 MHz bandwidth) should be used. The oscilloscope probe should be correctly compensated and its ground lead length should keep to minimum.<br>3. If triangle is distorted, check for defective capacitors C8 thru C10, C13, C25 and C94.<br>4. Check for defective diodes CR10 or CR11. |
| TIME SYMMETRY PROBLEM | |
| Positive slope of triangle remains constant when frequency dial varied | 1. Defective Q5, Q6, C9, IC3 and associated circuitry.<br>2. Defective Q9 thru Q12 and CR6 thru CR9. |
| Negative slope of triangle remains constant when frequency dial varied | 1. Defective IC3 and associated circuitry.<br>2. Defective Q9 thru Q12 and CR6 thru CR9. |
| Symmetry cannot be adjusted to specification | Defective Q6, Q14, R33, R34, R40 and R41. |
| Symmetry worse at low frequency end of dial | Check for high leakage components Q6, Q9 thru Q12 and Q14. |
| Symmetry out of specification at X 10 frequency range or below | Defective IC6 and associated circuitry. |
| FREQUENCY ACCURACY PROBLEM | |
| Frequency accuracy out of specification at X 1 k Hz range | 1. Mismatched dial and potentiometer, if frequency is out of specification at the same portion of the dial in every range. Ensure that the number or the back of the dial matches the number on the potentiometer.<br>2. Defective dial potentiometer.<br>3. VCG amplifier (IC2) or current source (IC3) is saturated when frequency dial is set to the top (5.0). Check for defective Q1, Q6, IC2 and associated circuitry. |
| Frequency accuracy out of specification at X 10K and X 100 k Hz ranges | Check for defective C30 thru C33, C38 and R61 thru R66. |
| Frequency accuracy out of specification at X 1 MHz range | Check for defective C25, C28, C29, C34, C35, R60, R67, CR10 and CR11. |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 6-1. Troubleshooting Guide (Continued)

| Symptom | Corrective Procedures |
|---|---|
| Frequency accuracy out of specification at X .001 to X 10 Hz ranges | 1. R90 and R94 thru R96 are mismatched. Defective R97.<br>2. Defective IC5, IC6 and associated circuitry.<br>3. If triangle is distorted when dial is set to the top (5.0), defective regulator Q22 and Q23. |
| MODE OF OPERATION PROBLEM | |
| Output not in agreement with GEN MODE switch setting | Trigger and gate logic circuit or IC8 malfunction. |
| Generator running in trigger or gated mode | If voltage at pin 11 of IC8 is 0 to 0.4V (logic zero) when TRIG mode is selected, the problem is in the trigger amplifier (Q42 thru Q45). Otherwise, troubleshoot IC8, IC9 and associated circuitry. |
| Generator can be triggered by operating MAN TRIG switch, but not by external signal | Squaring circuit malfunction. |
| FREQUENCY SWEEP PROBLEM (All components on sweep board) | |
| Generator frequency not sweeping; no ramp signal at SWP OUT (GEN MODE at SWEEP, SWEEP MODE at CONT SWEEP) | 1. If IC1 pins 2 and 3 do not have same voltage level, the buffer amplifier (IC1 and Q6) is bad.<br>2. Comparator flip-flop (Q7 thru Q10) is bad.<br>3. Log current source (Q3 thru Q5) is bad. |



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# SECTION 7
# PARTS AND SCHEMATICS

## 7.1 DRAWINGS

The following assembly drawings (with parts lists) and schematics are in the arrangement shown below.

## 7.2 ORDERING PARTS

When ordering spare parts, please specify part number, circuit reference, board, serial number of unit, and if applicable, the function performed.

## 7.3 ADDENDA


Under Wavetek's product improvement program, the latest electronic designs and circuits are incorporated into each Wavetek instrument as quickly as development and testing permit. Because of the time needed to compose and print instruction manuals, it is not always possible to include the most recent changes in the initial printing. Whenever this occurs, addendum pages are prepared to summarize the changes made and are inserted immediately inside the rear cover. If no such pages exist, the manual is correct as printed.

| | Drawing No. |
|---|---|
| **CHASSIS** | |
| Schematic | 0004-00-0054 |
| Assembly Drawing | 0102-00-0313 |
| Parts List | 1101-00-0056 |
| **MAIN BOARD** | |
| Schematic | 0103-00-0126 |
| Assembly Drawing | 0101-00-0126 |
| Parts List | 1100-00-0128 |
| **SWEEP BOARD** | |
| Schematic | 0103-00-0123 |
| Assembly Drawing | 0101-00-0123 |
| Parts List | 1100-00-0123 |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REV | ECN | BY | DATE | APP |
|---|---|---|---|---|
| A | REVISED PER MAR'T-UP | JA | 8-4-85 | |
| B | ECN 1719 | KB | 1478 | |

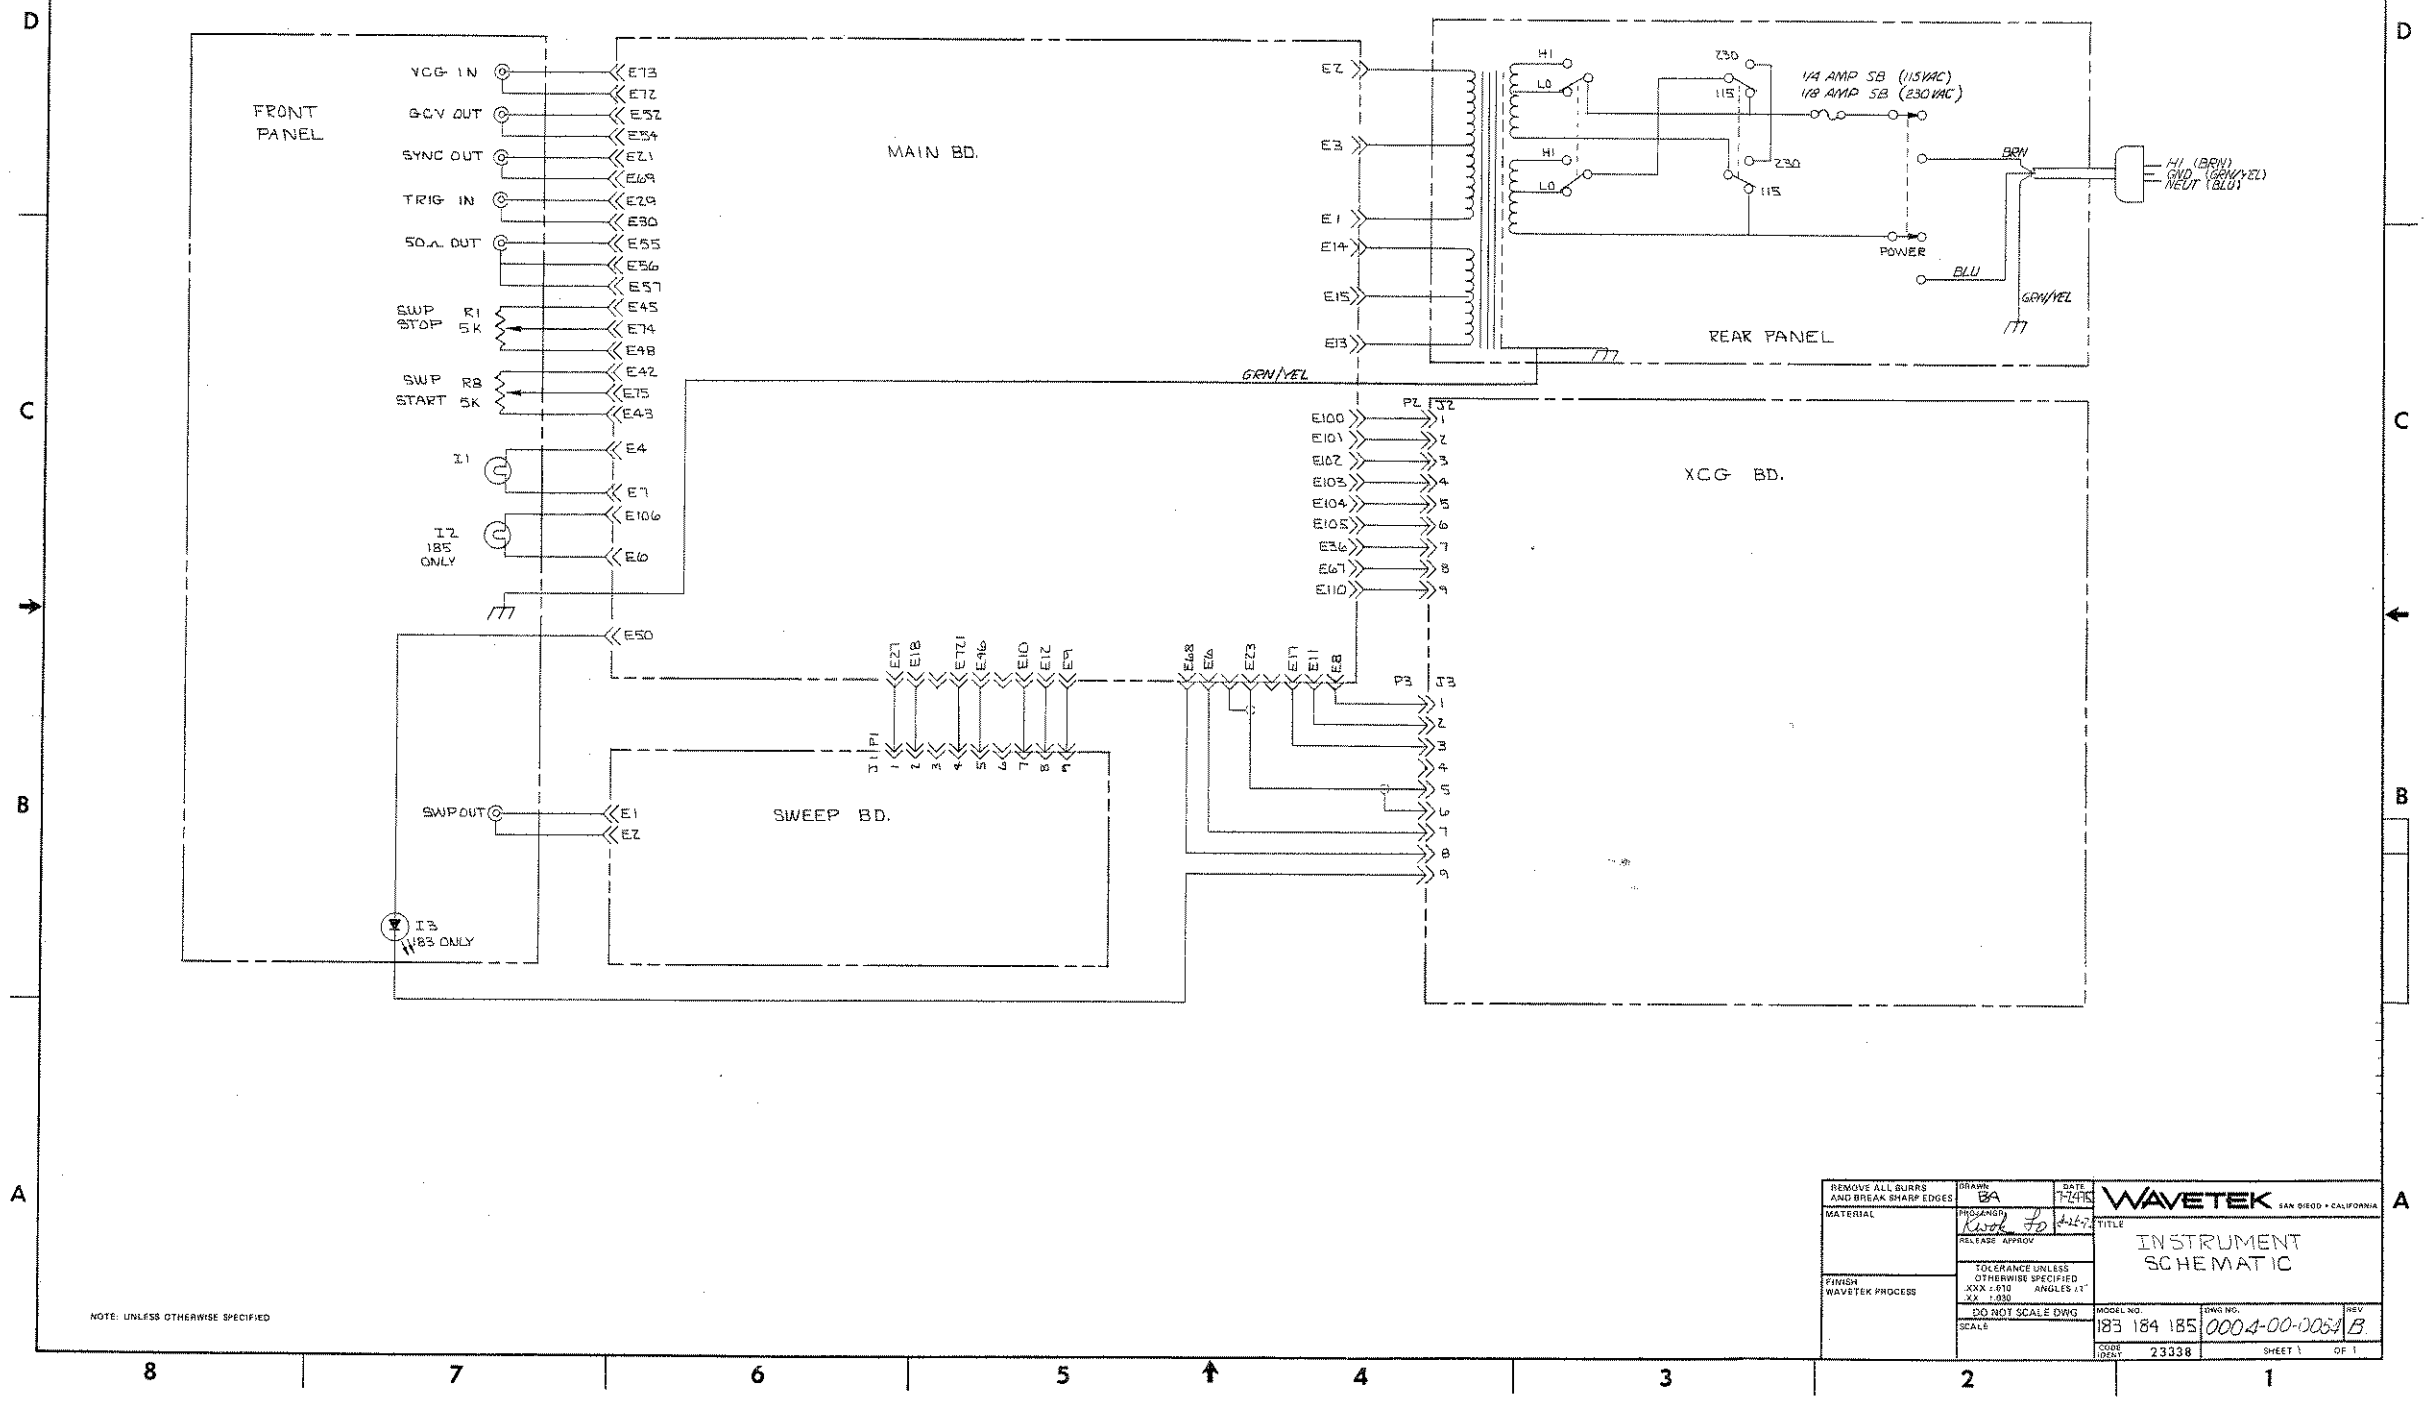


NOTE: UNLESS OTHERWISE SPECIFIED


| | | | |
|---|---|---|---|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN BA | DATE 7-14-85 | WAVETEK SAN DIEGO, CALIFORNIA |
| MATERIAL | ENGINEER Kirk Fo | 8-26-85 | TITLE INSTRUMENT SCHEMATIC |
| FINISH WAVETEK PROCESS | RELEASE APPROV | | |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ±.010 XX ±.030 ANGLES ±1° | | |
| | DO NOT SCALE DWG | MODEL NO. 183 184 185 | DWG NO. 0004-00-0054 REV B |
| | SCALE | CAGE IDENT 23338 | SHEET 1 OF 1 |


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.


| REV | ECN | BY | DATE | APP |
|---|---|---|---|---|
| A | ECN 1719 | RO | 5-2-78 | |

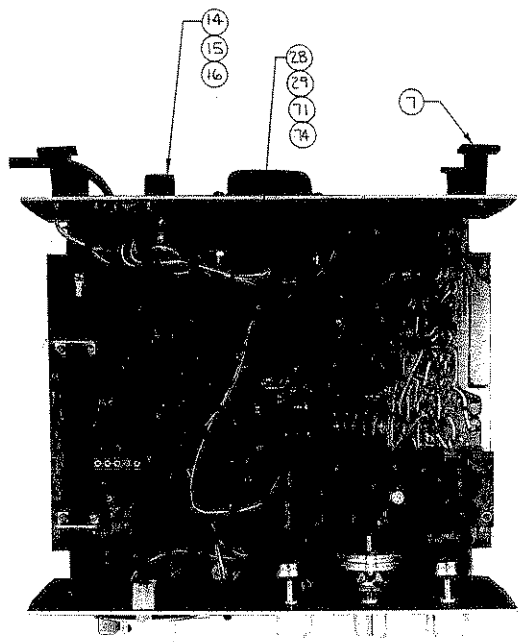


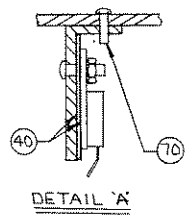

DETAIL 'A'




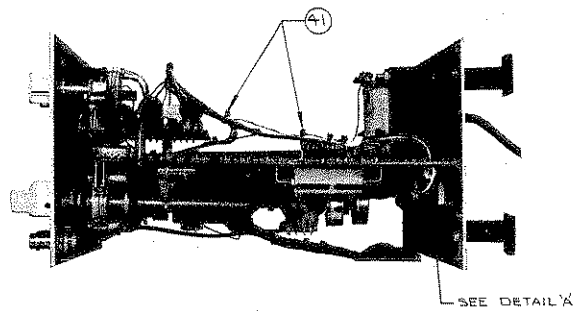


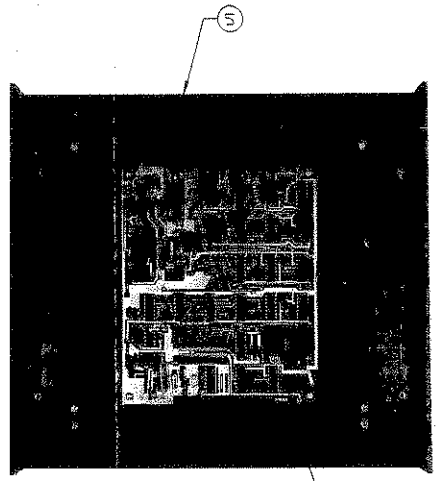
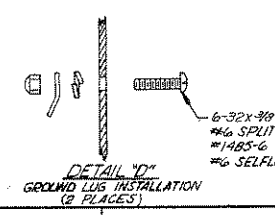

DETAIL 'B'

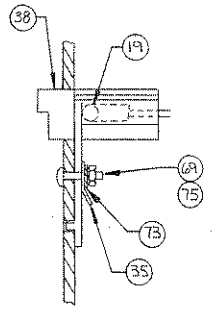

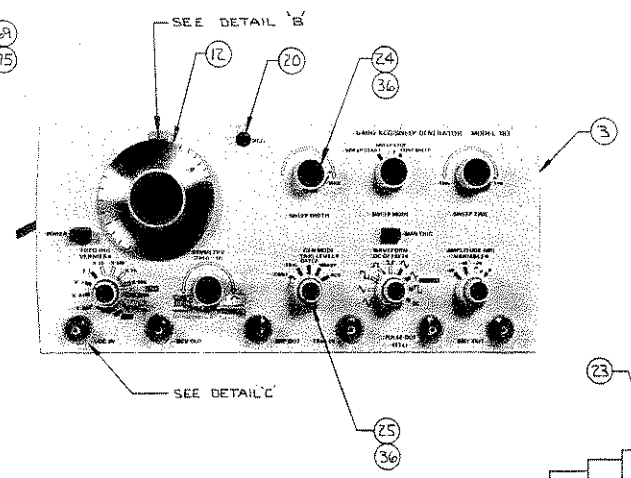
DETAIL 'C'

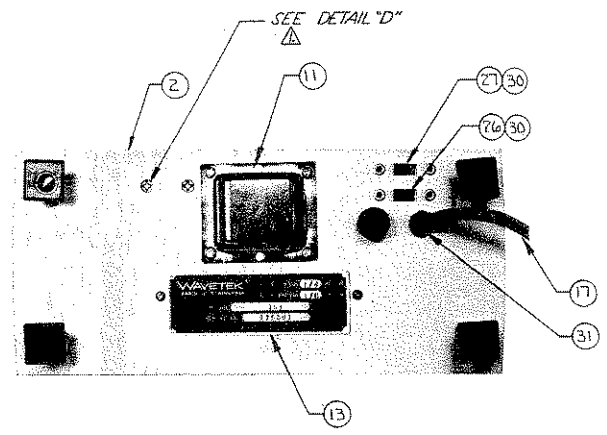

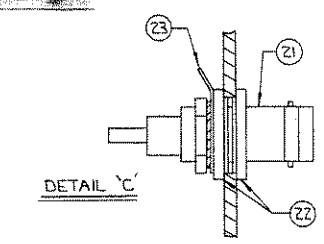DETAIL "D"
GROUND LUG INSTALLATION
(2 PLACES)

6-32x-3/8 PN.HD.SCREW
#6 SPLIT LOCKWASHER
#1485-6 TEARDROP GND LUG
#6 SELFLOCKING CASTLE NUT

⚠ ALL CONNECTIONS TO BE MECHANICALLY SECURE TO LUGS PRIOR TO SOLDERING GROUND WIRES

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|---|---|---|---|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DR'WN BA | DATE 8-4-75 | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ'ENGR | | TITLE |
| | RELEASE APPROV | | CHASSIS ASSEMBLY |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ± .010 ANGLES ± 1 XX ± .030 | | |
| | DO NOT SCALE DWG | MODEL NO 184 183 | DWG NO 0102-00-0313 REV A |
| | SCALE | CODE IDENT 23338 | SHEET 1 OF 1 |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REV | ECN | BY | DATE | APP |
|---|---|---|---|---|

| REFERENCE DESIGNATORS | PART DESCRIPTION | DWG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|---|---|---|---|---|
| NONE | ASSY DWG CHASSIS | 0102-00-0313 | WVTK | 0102-00-0313 | 1 |
| NONE | DIAL ASSY | 183-025 | WVTK | 1201-00-0025 | 1 |
| NONE | TRANSFORMER | 5006-00-0022 | WVTK | 1204-00-0003 | 1 |
| NONE | END BELL | 110-333 | WVTK | 1400-00-0170 | 1 |
| NONE | PLATE,NAME | 184-305 | WVTK | 1400-00-2180 | 1 |
| NONE | INDICATOR,DIAL | 180-303 | WVTK | 1400-00-4970 | 1 |
| NONE | COVER,TOP | 180-300-1 | WVTK | 1400-00-5000 | 1 |
| NONE | EXPANDER | 180-301 | WVTK | 1400-00-5010 | 2 |
| NONE | POST | 180-302 | WVTK | 1400-00-5020 | 4 |
| NONE | COVER,BOTTOM | 180-300-2 | WVTK | 1400-00-5030 | 1 |
| NONE | PANEL,REAR | 182-301 | WVTK | 1400-00-5110 | 1 |
| NONE | CORD HOLDER | 1400-00-5400 | WVTK | 1400-00-5400 | 1 |
| NONE | PANEL,FT | 1400-00-6730 | WVTK | 1400-00-6730 | 1 |
| NONE | LABEL,I.D. | 1400-00-6950 | WVTK | 1400-00-6950 | 1 |
| NONE | BNC CONN | KC-7946 | KING | 2100-01-0002 | 6 |
| NONE | SOLDER LUG | 1497 | SMITH | 2100-04-0012 | 8 |
| NONE | SOLDER LUG | 1485-6 | SMITH | 2100-04-0025 | 4 |
| NONE | CONN | 60598-8 | AMP | 2100-05-0017 | 2 |

| WAVETEK PARTS LIST | TITLE STD CHASSIS | ASSEMBLY NO. 1101-00-0056 PAGE: 1 | REV A |
|---|---|---|---|

| REFERENCE DESIGNATORS | PART DESCRIPTION | DWG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|---|---|---|---|---|
| NONE | STD KNOB | KB-67-1-88-K | HUGAN | 2400-01-0008 | 4 |
| NONE | CDAX KNOB SET | KB-67-1-88+0-K-9 | HUGAN | 2400-01-0009 | 4 |
| NONE | LAMP | CM7-7876 | CHMIN | 2400-02-0013 | 1 |
| NONE | FUSE,125V,1/4A,SB | 313.250 | LITFU | 2400-05-0008 | 1 |
| NONE | FUSE HOLD | 345001 | LITFU | 2400-05-0012 | 1 |
| NONE | BUSHING NYLINER | 6L2FP | THOMN | 2800-01-0002 | 8 |
| NONE | STANDOFF | 1475-M03-F05-B3Z | UNICP | 2800-02-0010 | 4 |
| NONE | STANDOFF | 1495-M03-F05-000 | UNICP | 2800-02-0011 | 8 |
| NONE | RAIL ASSY W/FT | 180-500 | WVTK | 2800-08-0010 | 1 |
| NONE | SPEEDNUT,SELF RETAIN | C7498-632-8 | TINNM | 2800-09-0003 | 6 |
| NONE | WASHER,SHOULDER | 266A | SMITH | 2800-27-0004 | 12 |
| NONE | STRAIN RELIEF BUSH | SWBH-1 | HEYCO | 2800-37-0003 | 1 |
| NONE | SW ASSY SLIDE DPDT | SW822-PT-MK | UID | 5105-00-0001 | 1 |
| NONE | SWITCH ASSY SLIDE | 46256-LF | SACFT | 5105-00-0002 | 1 |
| NONE | SOLDER GUARD | 46256-LF-SG | SACFT | 5105-09-0001 | 2 |
| NONE | PWR CORD | 0-7759-06B-GY | PALMS | 6001-80-0004 | 1 |

| WAVETEK PARTS LIST | TITLE STD CHASSIS | ASSEMBLY NO. 1101-00-0056 PAGE: 2 | REV A |
|---|---|---|---|


| | | | |
|---|---|---|---|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO, CALIFORNIA |
| MATERIAL | PROJ MGR | | TITLE PARTS LIST CHASSIS |
| | RELEASE APPROV | | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 ANGLES ±1° .XX ±.030 | | |
| | DO NOT SCALE DWG | MODEL NO. 184 | DWG NO. 1101-00-0056 REV A |
| | SCALE | CODE IDENT 23338 | SHEET OF |

NOTE: UNLESS OTHERWISE SPECIFIED


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REV | ECN | BY | DATE | APP |
|---|---|---|---|---|

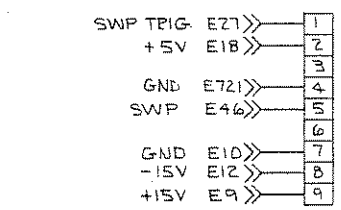



P1 TO SWEEP BD.
ALL MODELS

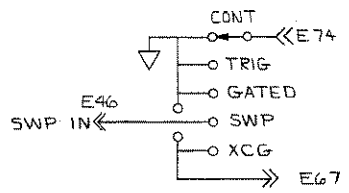



SW4 - A

GEN MODE SWITCH
MODEL 183

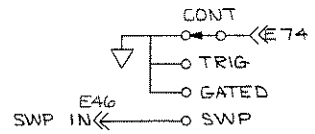



SW4 - A

GEN MODE SWITCH
MODEL 184

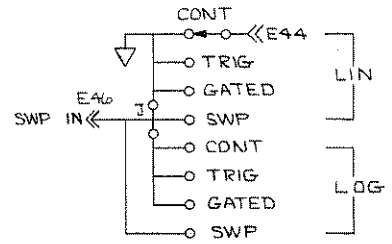



SW4 - A


GEN MODE SWITCH
MODEL 185

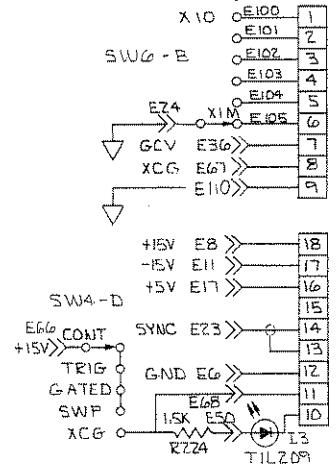



CONNECTORS TO XCG BD.
183 ONLY

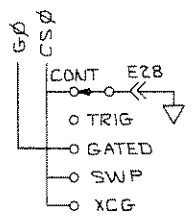


SW4-C

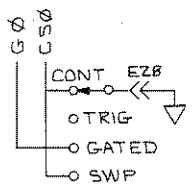


SW4-C

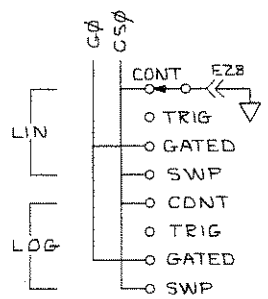


SW4-C

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|---|---|---|---|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE 5-6-75 | WAVETEK SAN DIEGO, CALIFORNIA |
| MATERIAL | PROJ ENGR | | TITLE: SCHEMATIC MAIN BOARD |
| | RELEASE APPROV | | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 ANGLES ±1° .XX ±.020 | | |
| | DO NOT SCALE DWG | MODEL NO 183,184,185 | DWG NO 0103-00-0126 REV H |
| | SCALE | CODE IDENT 23338 | SHEET 2 OF 5 |

0103-00-0126

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REV | FCN | BY | DATE | APP |
|---|---|---|---|---|
| A | REVISED [illegible] | [illegible] | [illegible] | |
| B | REVISED PER [illegible] | [illegible] | 6-78 | |
| C | REVISED PER MARK UP | [illegible] | 7-78 | |
| D | REVISED PER MARK UP | RO | 8-78 | |

SEE SHEET 2

SWP INPUT
SWP NULL
SWP STOP
185 ONLY
SWEEP INVERTING AMPLIFIER
SWEEP START
+15V ONLY
VCG AMPL
VCG IN
FREQ VERNIER
TOP LIN
TOP LOG
JUMPER 183/184
LOG CONVERTER 185 ONLY
GEN MODE
FREQ Hz
GCV AMPL
GCV OUT
SYM
IC3 CA3096AE
CURRENT SOURCE
BOT SYM
IN
IT
REGULATOR
TIMING CAPACITORS
N TRIG
N AMPL
SINE DIST
HYSTERESIS SWITCH
CAP MULTIPLIER
CURRENT SWITCH
IP C7
IN C7
IC4 CA3054
SW6-A
SW6-B
SW6-C
SW6-D
SW6-E
SW5
SWS
LCW
CCW
X1M
50 Hz ADJ

R90, R92, R95, R96 ARE MATCHED SET
NOTE: UNLESS OTHERWISE SPECIFIED * MATCHED PAIR

REF DES NOT USED
R138 CR44 C12
K45

LAST REF USED
C94
FZ27
Q53
CR45
IC12

| | | | |
|---|---|---|---|
| H | #1926 | [illegible]ttonwich | 2-27-79 |
| G | ECN 1719 | RO | 6-278 |
| F | ECN 1904 & 05 | RO | 6-4-77 |
| NOTE | DOC 1484 | RO | 8-2-76 |
| E | ECN 1421 | RO | 5/10/76 |

REMOVE ALL BURRS AND BREAK SHARP EDGES
MATERIAL
FINISH WAVETEK PROCESS
DRAWN RO DATE 5-675
ENGINEER [illegible]
RELEASE APPROV
TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 ANGLES ±1° .XX ±.030
DO NOT SCALE DWG
SCALE

WAVETEK SAN DIEGO, CALIFORNIA

TITLE: SCHEMATIC MAIN BOARD

MODEL NO. 183 184 185 | DWG NO. 0103-00-0126 | REV H
CODE IDENT 23338 | SHEET 1 OF 3

0103-00-0126

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION WHICH IS THE PROPERTY OF WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

SINE CONVERTER

PREAMPLIFIER

SQUARING CIRCUIT

TRIGGER AND GATE LOGIC

TTL SYNC PULSE GENERATOR

5V REGULATOR

± 15V POWER SUPPLY

OUTPUT AMPLITUDE

* FD TTT MATCHED SET OF 8

NOTE: UNLESS OTHERWISE SPECIFIED

△ MATCHED PAIR

REMOVE ALL BURRS AND BREAK SHARP EDGES

FINISH: WAVETEK PROCESS

MATERIAL:

TOLERANCE UNLESS OTHERWISE SPECIFIED: .XX ± .010, .XXX ± .005, ANGLES ±1°

DO NOT SCALE DWG

DRAWN

PROTOTYPE

RELEASE APPROV

DATE 5/6/85

MODEL NO. 183 184 185

DWG NO. 0103-00-0126

REV H

CODE IDENT 23338

SHEET 2 OF 5

TITLE SCHEMATIC MAIN BOARD

WAVETEK SAN DIEGO, CALIFORNIA


0103-00-0126

REV | ECN | BY | DATE | APP

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

E721 WAS E72
E481 " E48
E521 " E52
E111 WAS E9
E110 ADDED TO
HOLE UNDER E721

| REV | ECN | BY | DATE | APP |
|---|---|---|---|---|
| A | REVISED PER ENG. MARK-UP | BA | 8-4-15 | |
| B | ECN 1521 | RO | 2-18-9 | |
| C | ECN 1604/1408 | RO | 4-4-77 | |
| D | ECN 1719 | RO | 5/2/78 | |

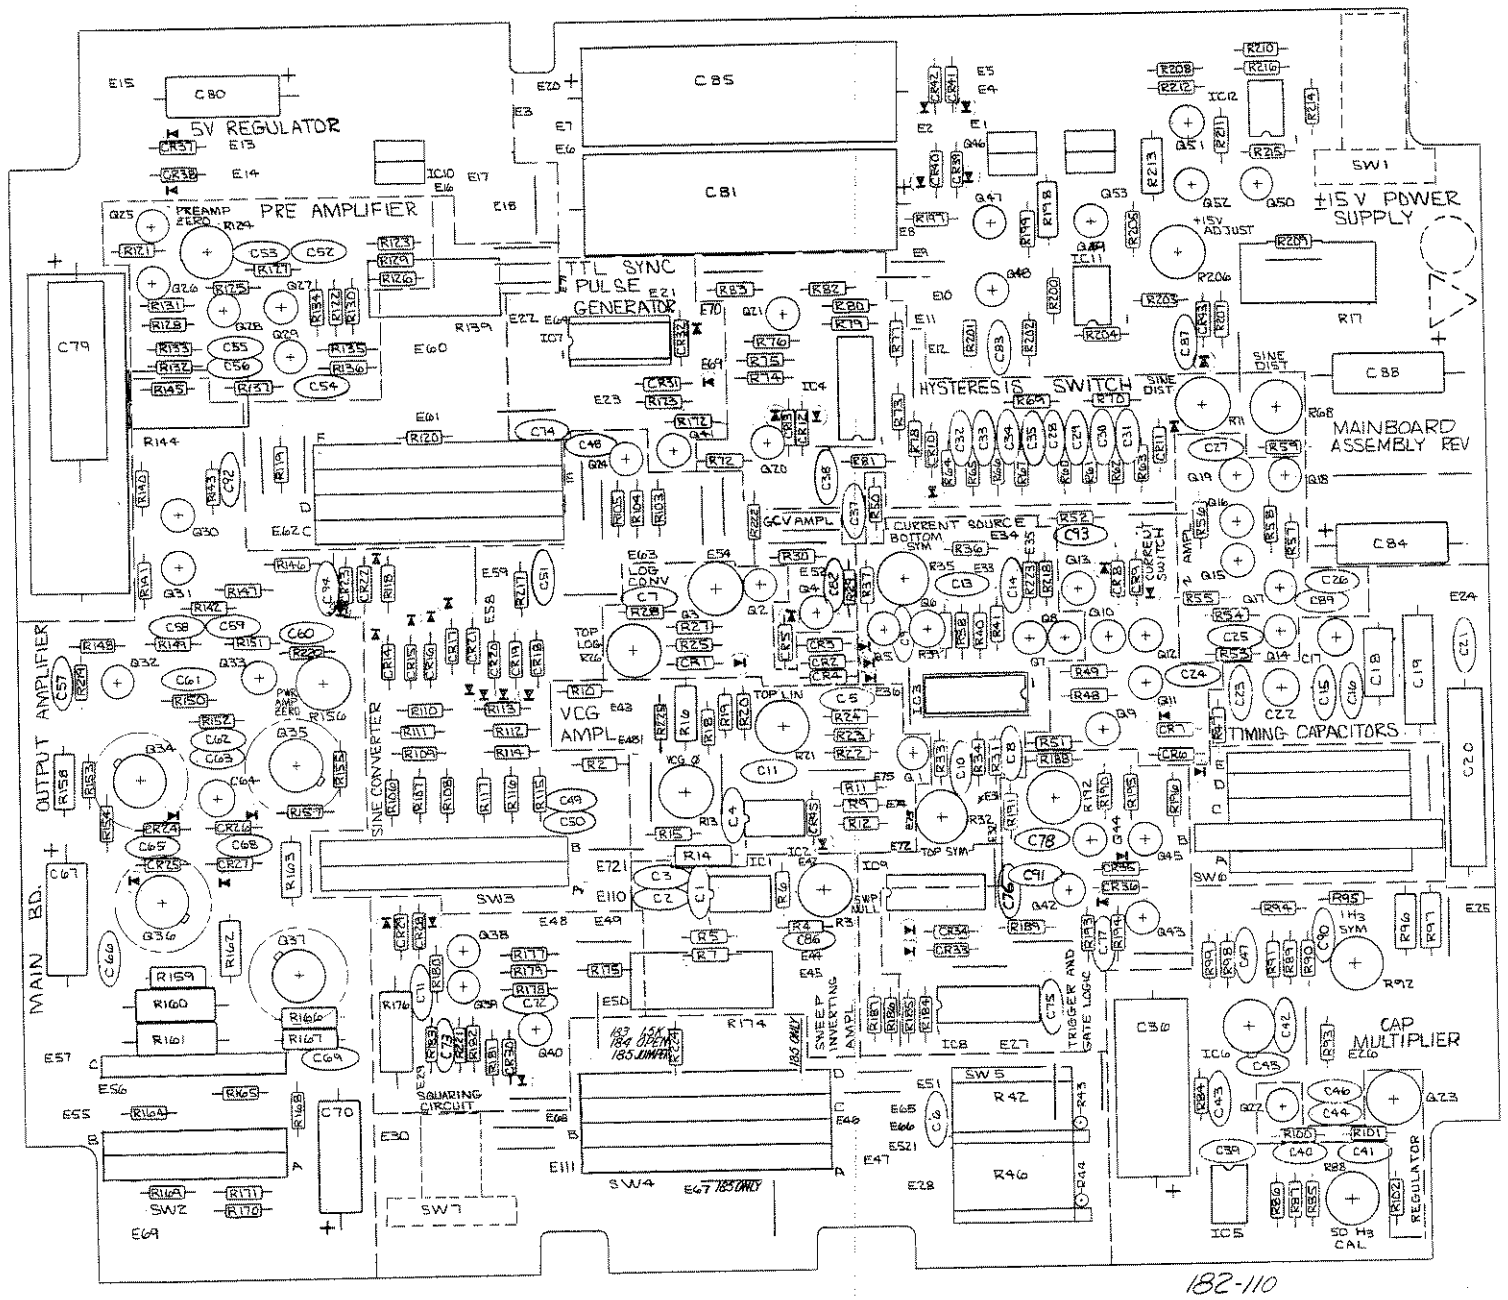


2. SOLDER R227 AT E7 LOCATION ON 183, 184 & 185 ADD R226 AT E111 ON MODEL 185.

1. 9 PIN MOLEX TO CRYSTAL BD TO BE WIRED BACKWARDS SO THAT BROWN WIRE IS PIN 9 AND WHITE WIRE IS PIN 1.


MARK REVEL 2-2304C

| | | |
|---|---|---|
| DRAWN BA | DATE 7-14-75 | WAVETEK |
| CHECKED | | TITLE SILKSCREEN ASSEMBLY PRINT (MAIN BOARD) |
| RELEASE APPROV | | |
| SCALE 2/1 | MODEL NO. 183 184 185 | DWG NO. 0101-00-0126 REV D |
| | 23338 | SHEET 1 OF 2 |


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.


| REV | ECN | BY | DATE | APP |
|---|---|---|---|---|

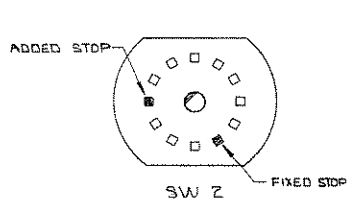



SW 2
5104-99-0004
(MADE FROM 5104-01-0003)

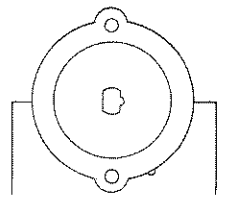


SW2-A
5104-02-0013

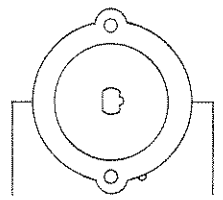


SW2-B
5104-02-0013

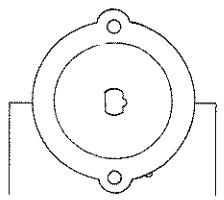


SW2-C
5104-02-0013

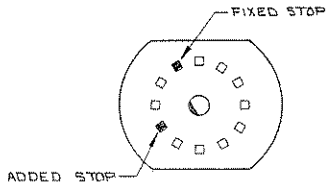



SW3
5104-99-0044
(MADE FROM 5104-01-0007)

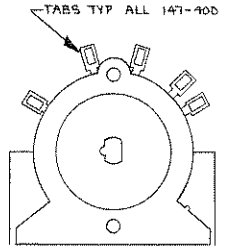



SW3-A
5104-02-0015

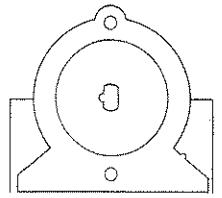


SW3-B
5104-02-0015

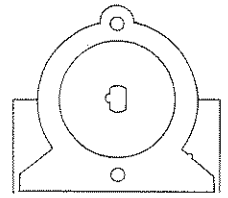


SW3-C
5104-02-0015

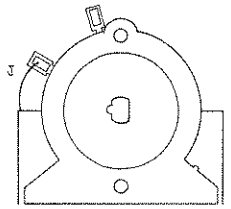

SW3-D
5104-02-0015

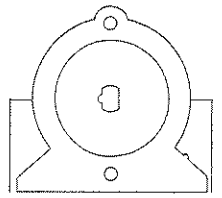


SW3-E
5104-02-0015

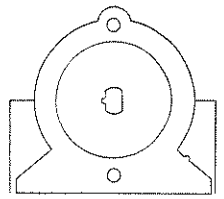


SW3-F
5104-02-0015

MODEL 185 ONLY

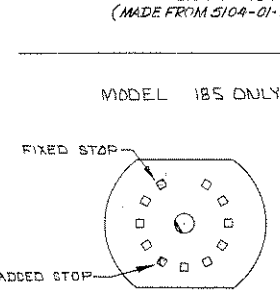



SW4
5104-99-0016
(MADE FROM 5104-99-0042)

MODEL 184 ONLY

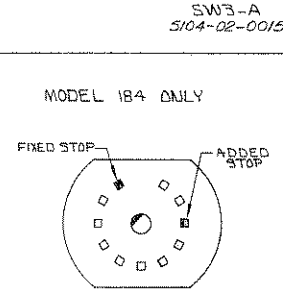



SW4
5104-99-0015
(MADE FROM 5104-99-0042)


MODEL 183 ONLY

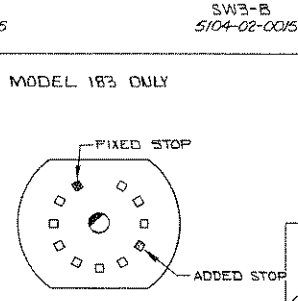



SW4

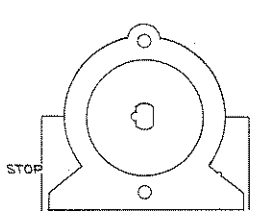


SW4-A
5104-02-0015

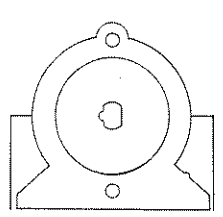


SW4-B
5104-02-0015

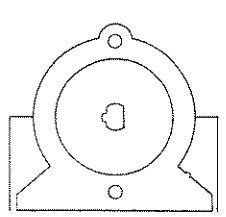


SW4-C
5104-02-0015

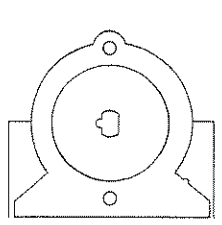

SW4-D
5104-02-0015

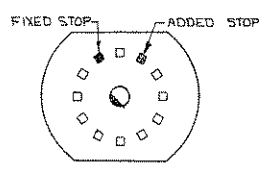



SW6
5104-99-0023
(MADE FROM 5104-01-0007)

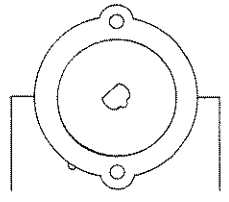


SW6-A
5104-02-0013


-185 ONLY

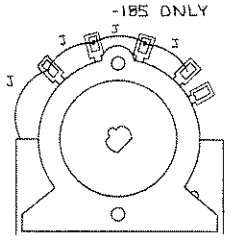


SW6-B
5104-02-0015
(142 - SW1-1
184 - ONLY)

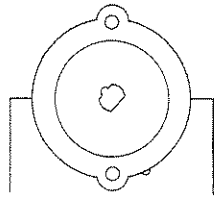

SW6-C
5104-02-0013

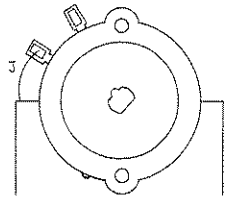


SW6-D
5104-02-0008

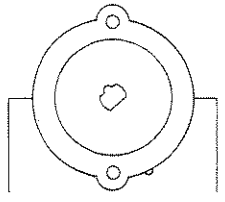

SW6-E
5104-02-0013

NUMBERS ON TAB INDICATE WIRE COLOR
MODEL 183 ONLY

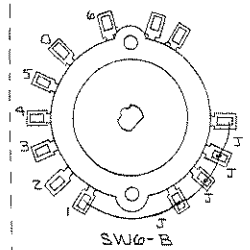

SW6-B
T105

2. DETENTS & WAFERS ARE THE SAME FOR ALL MODELS EXCEPT AS INDICATED.
1. ALL DETENTS & WAFERS ARE SHOWN FROM FRONT VIEW IN FULL COUNTER CLOCKWISE POSITION.

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|---|---|---|---|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN BA | DATE 6/6/75 | WAVETEK SAN DIEGO, CALIFORNIA |
| MATERIAL | PROJ ENGR | | TITLE: SWITCH DWG MAIN BOARD |
| | RELEASE APPROV | | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 ANGLES ±1° .XX ±.030 | | |
| | DO NOT SCALE DWG | | MODEL NO. 183-184-185 |
| | SCALE | | DWG NO. 0101-00-0126 REV 0 |
| | | | CODE IDENT 23338 SHEET 2 OF 2 |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REV | ECN | BY | DATE | APP |
|---|---|---|---|---|

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|---|---|---|---|---|
| NONE | ASSY DWG MAIN | 0101-00-0126 | WVTK | 0101-00-0126 | 1 |
| NONE | SCHEMATIC MAIN | 0103-00-0126 | WVTK | 0103-00-0126 | 1 |
| NONE | O.C.DWG MAIN | 0107-00-0126 | WVTK | 0107-00-0126 | 1 |
| NONE | HEAT | 131-305 | WVTK | 1400-00-1673 | 1 |
| NONE | SPACER | 140-306 | WVTK | 1400-00-2123 | 2 |
| IB5 | SPRING REF:3200-01-0001 | 147-343 | WVTK | 1400-00-3750 | 1 |
| NONE | HEAT SINK | 182-309 | WVTK | 1400-00-5185 | 2 |
| IB2 | MOD,POWER | 182-609 | WVTK | 1400-00-5190 | 1 |
| NONE | HEAT,POWER MOD | 182-310 | WVTK | 1400-00-5383 | 2 |
| C59 C62 C63 C92 | CAP,CER,5PF,1KV | 00-050 | CKL | 1500-00-5011 | 4 |
| C20 C28 C35E C74 C76 | CAP,CER,100PF,1KV | 00-130 | CKL | 1500-01-0011 | 5 |
| C31 C32 C42 C75 C93 | CAP,CER,100PF,1KV | 00-101 | CKL | 1500-01-0111 | 5 |
| C10 C15 C21 C34 C47 | CAP,CER,.001MF,1KV | 00-102 | CKL | 1500-01-0211 | 5 |
| C11 C26 C27 C57 C90 C91 C96 C98 C99 C100 C50 C52 C53 C54 C55 C56 C58 C59 C61 C65 C68 C72 C77 C80 C83 C87 C89 C94 C95 C96 C98 | CAP,CER,.01MF,50V | CK-103 | CKL | 1500-01-0311 | 30 |
| C69 C97 C00 C66 C69 | CAP,CER,.1MF,200 | CK20-104 | CKL | 1500-01-0411 | 7 |

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-0126 — PAGE: 1 — REV E

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|---|---|---|---|---|
| | CAP SET,POLYC MIXED MATCHED SET | 160-501-101 | WVTK | 1509-80-0008 | 1 |
| C18 | CAP,POLYC,.01MF,100V PART OF 1509-80-0008 QTY(1) | | | | |
| C19 | CAP,POLYC,.1MF,100V PART OF 1509-80-0008 QTY(1) | | | | |
| C20 | CAP,POLYC,1MF,100V PART OF 1509-80-0008 QTY(1) | | | | |
| | MAIN | 182-110 | WVTK | 1700-00-0126 | 1 |
| | CONN,VPIN | 09-50-7091 | MOLEX | 2100-02-0091 | 1 |
| | SKT,IC,14PIN | 14-DIP | CINCH | 2100-03-0011 | 1 |
| | SKT,IC,16PIN | 16-DIP | CINCH | 2100-03-0022 | 1 |
| | SOLDER LUG | 1047 | SMITH | 2100-00-0012 | 2 |
| | PIN | 08-50-0105 | MOLEX | 2100-04-0025 | 9 |
| | HEAT SINK | HS-207 | AAVE | 2800-11-0001 | 4 |
| | TWNSIPAD | 10233A | PHLPS | 2800-11-0003 | 1 |
| | TRANSIPAD | 10260 | PHLPS | 2800-11-0004 | 4 |
| | POT,TRIM,100 | 91AW100 | BECK | 4600-01-0103 | 2 |

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-0126 — PAGE: 3 — REV E

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|---|---|---|---|---|
| | RES,MF,1/8W,1%,1K | RN55D-1001F | IRC | 4701-03-1001 | 12 |
| | RES,MF,1/8W,1%,10K | RN55D-1002F | IRC | 4701-03-1002 | 5 |
| | RES,MF,1/8W,1%,100K | RN55D-1003F | IRC | 4701-03-1003 | 1 |
| | RES,MF,1/8W,1%,10 | RN55D-10R0F | IRC | 4701-03-1009 | 3 |
| | RES,MF,1/8W,1%,1.1K | RN55D-1101F | IRC | 4701-03-1101 | 1 |
| | RES,MF,1/8W,1%,1.21K | RN55D-1211F | IRC | 4701-03-1211 | 2 |
| | RES,MF,1/8W,1%,120 | RN55D-1200F | IRC | 4701-03-1200 | 2 |
| | RES,MF,1/8W,1%,15K | RN55D-1502F | IRC | 4701-03-1502 | 4 |
| | RES,MF,1/8W,1%,150 | RN55D-1500F | IRC | 4701-03-1500 | 1 |
| | RES,MF,1/8W,1%,1.5K | RN55D-1501F | IRC | 4701-03-1501 | 9 |
| | RES,MF,1/8W,1%,15K | RN55D-1502F | IRC | 4701-03-1502 | 7 |
| | RES,MF,1/8W,1%,15 | RN55D-15R0F | IRC | 4701-03-1509 | 4 |
| | RES,MF,1/8W,1%,17.7K | RN55D-1772F | IRC | 4701-03-1772 | 1 |
| | RES,MF,1/8W,1%,19.1K | RN55D-1912F | IRC | 4701-03-1912 | 2 |
| | RES,MF,1/8W,1%,200 | RN55D-2000F | IRC | 4701-03-2000 | 2 |
| | RES,MF,1/8W,1%,2K | RN55D-2001F | IRC | 4701-03-2001 | 9 |
| | RES,MF,1/8W,1%,21.5 | RN55D-21R5F | IRC | 4701-03-2159 | 1 |

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-0126 — PAGE: 5 — REV E

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|---|---|---|---|---|
| C70 C76 | | | | | |
| C4 C45 | CAP,CER,15PF,1KV | 00-150 | AMCO | 1500-01-5011 | 2 |
| C25I | CAP,CER,22PF,1KV | 00-220 | AMCO | 1500-02-2011 | 1 |
| C5 C71 C91 | CAP,CER,33PF,1KV | 00-330 | AMCO | 1500-03-3011 | 3 |
| C10 C30 C33 | CAP,CER,47PF,1KV | 00-470 | AMCO | 1500-04-7011 | 3 |
| C24 C34 | CAP,CER,68PF,1KV | 00-680 | AMCO | 1500-05-6001 | 2 |
| C51 | CAP,CER,68PF,1KV | 00-680 | CKL | 1500-06-8001 | 1 |
| C8 | CAP,CER,680PF,1KV | 00-681 | AMCO | 1500-06-8111 | 1 |
| C23 | CAP,MICA,.47PF,500V | DM15-470J | AMCO | 1500-14-7000 | 1 |
| C15 | CAP,MICA,820PF,500V | DM15-821J | AMCO | 1500-18-2000 | 1 |
| C14 | CAP,MICA,820PF,500V | DM15-821J | AMCO | 1500-18-2101 | 1 |
| C67 C78 C88 C38 C66 | CAP,ELECT,100MF,16V | 5300107601ADC7 | SPRAG | 1500-31-0101 | 5 |
| C81 C85 | CAP,ELECT,1000MF,35V | 39D108G035GL6 | SPRAG | 1500-31-0212 | 2 |
| C79 | CAP,ELECT,250MF,16V | 500D257U16DP7 | SPRAG | 1500-32-5101 | 1 |
| C36 | CAP,MYLAR,2MF,200V | 2MA205A | AMRAD | 1500-42-0504 | 1 |
| C60 | VARI,3.5-14PF,250V | 78-TM14U-02 3.5/13PF | TKIKO | 1500-51-3000 | 1 |
| C17 C22 | VARI,7-35PF,250V | 78-TM1KU-02 7/35 PF | TKIKO | 1500-53-5000 | 2 |

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-012A — PAGE: 2 — REV E

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|---|---|---|---|---|
| | POT,CONT,1K | 180-401 | WVTK | 4600-01-0207 | 1 |
| | POT,TRIM,1K | 91AW1K | BECK | 4600-01-0209 | 5 |
| | POT,CONT,10K | 182-401 | WVTK | 4600-01-0312 | 2 |
| | POT,TRIM,100K | 91AW104 | BECK | 4600-01-0402 | 3 |
| | POT,TRIM,20 | 91AW20 | BECK | 4600-02-0000 | 1 |
| | POT,TRIM,2K | 91AW2K | BECK | 4600-02-0201 | 1 |
| | POT,8MTCH,20K | OPA807-20K | WVTK | 4602-32-0302 | 1 |
| | POT,CONT,10K FROM#4A06-01-0307 | 4609-71-0313 | WVTK | 4609-71-0313 | 1 |
| | RES,C,1/2W,5%,1W | RC20GF-100 | STKPL | 4700-25-0100 | 2 |
| | RES,C,1/2W,5%,3.9 | RC20GF-3R9 | STKPL | 4700-25-0399 | 2 |
| | RES,C,1/2W,5%,8.2 | RC20GF-8R2 | STKPL | 4700-25-0829 | 2 |
| | RES,C,1/2W,5%,10M | RC20GF-106 | STKPL | 4700-25-1005 | 1 |
| | RES,C,1/2W,5%,1.6M | RC20GF-165 | STKPL | 4700-25-1604 | 1 |
| | RES,C,1/2W,5%,220 | RC20GF-221 | STKPL | 4700-25-2200 | 1 |
| | RES,C,1/2W,5%,3.9M | RC20GF-395 | STKPL | 4700-25-3904 | 1 |
| | RES,C,1M,10%,10K | RC32GF-103 | STKPL | 4700-35-1002 | 1 |
| | RES,MF,1/8W,1%,106 | RN55D-1000F | IRC | 4701-03-1000 | 14 |

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-012B — PAGE: 4 — REV E

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|---|---|---|---|---|
| | RES,MF,1/8W,1%,249 | RN55D-2490F | IRC | 4701-03-2490 | 5 |
| | RES,MF,1/8W,1%,2.49K | RN55D-2491F | IRC | 4701-03-2491 | 8 |
| | RES,MF,1/8W,1%,24.9K | RN55D-2492F | IRC | 4701-03-2492 | 5 |
| | RES,MF,1/8W,1%,3.01K | RN55E-3011F | IRC | 4701-03-3011 | 2 |
| | RES,MF,1/8W,1%,316 | RN55D-3160F | IRC | 4701-03-3160 | 3 |
| | RES,MF,1/8W,1%,3.16K | RN55D-3161F | IRC | 4701-03-3161 | 1 |
| | RES,MF,1/8W,1%,3.32K | RN55D-3321F | IRC | 4701-03-3321 | 8 |
| | RES,MF,1/8W,1%,33.2 | RN55D-33R2F | IRC | 4701-03-3329 | 6 |
| | RES,MF,1/8W,1%,392 | RN55D-3920F | IRC | 4701-03-3920 | 1 |
| | RES,MF,1/8W,1%,39.2 | RN55D-39R2F | IRC | 4701-03-3929 | 1 |
| | RES,MF,1/8W,1%,40.2K | RN55D-4022F | IRC | 4701-03-4022 | 3 |
| | RES,MF,1/8W,1%,9.53K | RN55D-4752F | IRC | 4701-03-4321 | 1 |
| | RES,MF,1/8W,1%,4.64K | RN55D-4641F | IRC | 4701-03-4641 | 2 |
| | RES,MF,1/8W,1%,49.9 | RN55D-49R9F | IRC | 4701-03-4909 | 2 |
| | RES,MF,1/8W,1%,499 | RN55D-4990F | IRC | 4701-03-4990 | 10 |
| | RES,MF,1/8W,1%,4.99K | RN55D-4991F | IRC | 4701-03-4991 | 14 |
| | RES,MF,1/8W,1%,51.1 | RN55D-51R1F | IRC | 4701-03-5119 | 2 |

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-012H — PAGE: 6 — REV F

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|---|---|---|---|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO, CALIFORNIA |
| MATERIAL | PROJ ENGR | | TITLE: PARTS LIST MAIN BD |
| | RELEASE APPROV | | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 .XX ±.030 ANGLES ±1° | | |
| | DO NOT SCALE DWG | | MODEL NO. 184 — DWG NO. 1100-00-0128 — REV E |
| | SCALE | | CODE IDENT 23338 — SHEET 1 OF 2 |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON, EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REV | ECN | BY | DATE | APP |
|---|---|---|---|---|

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|---|---|---|---|---|
| | RES,MF,1/8W,1%,523 | RN55D-5230F | TRW | 4701-03-5230 | 2 |
| | RES,MF,1/8W,1%,56.2 | RN55D-56R2F | TRW | 4701-03-56R2 | 1 |
| | RES,MF,1/8W,1%,576 | RN55D-5760F | TRW | 4701-03-5760 | 2 |
| | RES,MF,1/8W,1%,5.76K | RN55D-5761F | TRW | 4701-03-5761 | 1 |
| | RES,MF,1/8W,1%,6.19K | RN55D-6191F | TRW | 4701-03-6191 | 1 |
| | RES,MF,1/8W,1%,61.9 | RN55D-61R9F | TRW | 4701-03-61R9 | 2 |
| | RES,MF,1/8W,1%,6.98K | RN55D-6981F | TRW | 4701-03-6981 | 1 |
| | RES,MF,1/8W,1%,750 | RN55D-7500F | TRW | 4701-03-7500 | 1 |
| | RES,MF,1/8W,1%,7.5K | RN55D-7501F | TRW | 4701-03-7501 | 6 |
| | RES,MF,1/8W,1%,825 | RN55D-8250F | TRW | 4701-03-8250 | 3 |
| | RES,MF,1/8W,1%,8.25K | RN55D-8251F | TRW | 4701-03-8251 | 2 |
| | RES,MF,1/8W,1%,8.87K | RN55D-8871F | TRW | 4701-03-8871 | 1 |
| | RES,MF,1/8W,1%,909 | RN55D-9090F | TRW | 4701-03-9090 | 1 |
| | RES,MF,1/8W,1%,9.53K | RN55D-9531F | TRW | 4701-03-9531 | 2 |
| | RES,MF,1/8W,1%,97R | RN55D-97R0F | TRW | 4701-03-97R0 | 1 |
| | RES,MF,1/8W,1%,12R | RN60D-12R0F | TRW | 4701-15-1240 | 2 |
| | RES,MF,1/2W,1%,100 | RN65D-1000F | TRW | 4701-23-1000 | 2 |

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-0128 — PAGE: 7 — REV E

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|---|---|---|---|---|
| | TRANS | 2N2905A | NSC | 4901-02-4051 | 2 |
| | TRANS | 2N3565 | FAIR | 4901-03-5640 | 3 |
| | TRANS | 2N5138A | CENTR | 4901-03-5141 | 1 |
| | TRANS | 2N3640 | FAIR | 4901-03-6000 | 5 |
| | TRANS | 2N3642 | FAIR | 4901-03-6020 | 4 |
| | TRANS | 2N3906 | NSC | 4901-03-6060 | 3 |
| | TRANS | 2N3963 | NSC | 4901-03-9030 | 4 |
| | TRANS | 2N5088 | FAIR | 4901-04-2080 | 3 |
| | TRANS | 2N5139 | FAIR | 4901-05-1390 | 13 |
| | TRANS | 2N5682 | MOT | 4901-05-6820 | 1 |
| | TRANS | TIP-29 | TI | 4902-00-0298 | 1 |
| | TRANS | TIP-30 | TI | 4902-00-0300 | 1 |
| | TRANS,MPSW,2N5139 OPT121&901-05-1390 | TE0-901-NR | WVTK | 4904-00-0005 | 3 |
| | TRANS,MPSW,2N5465 OPT121&901-05-4350 | 142-501-43 | WVTK | 4904-00-0009 | 1 |
| | SWITCH ASSY PB | 5103-00-0020 | WVTK | 5103-00-0005 | 1 |
| | SWITCH ASSY PB | 5103-00-0021 | WVTK | 5103-00-0021 | 1 |

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-0128 — PAGE: 4 — REV E

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|---|---|---|---|---|
| | RES,SEL,2-10K,1/8W OPT121&701-03-1002 | 142-501-64A | WVTK | 47d9-00-0019 | 1 |
| | RES,MF,MIXED SET | 16W-501-49A | WVTK | 4789-00-0036 | 1 |
| NONE | RES,MF,1/8W,1%,1K PART OF 4789-00-0036 QTY(1) | | | | |
| NONE | RES,MF,1/8W,1%,10K PART OF 4789-00-0036 QTY(1) | | | | |
| NONE | RES,MF,1/8W,1%,100K PART OF 4789-00-0036 QTY(1) | | | | |
| NONE | RES,MF,1/8W,1%,1M PART OF 4789-00-0036 QTY(1) | | | | |
| | DIODE | 1N4581 | MICRO | 4801-01-4581 | 1 |
| | DIODE | SCE-1 | SEMI | 4801-02-0001 | 6 |
| | DIODE | FD-777 | FAIR | 4807-02-0777 | 8 |
| | DIODE | FD-6666 | FAIR | 4807-02-6666 | 21 |
| | DIODE,SEL,M-FD-777 OPT121&807-02-0777 | 162-500-96 | WVTK | 4898-00-0010 | 1 |
| | TRANS | 2N2219A | NSC | 4901-02-2191 | 2 |

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-0128 — PAGE: 8 — REV E

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|---|---|---|---|---|
| | DFTENT | 130-402 | WVTK | 5104-01-0003 | 1 |
| | WAFER | 133-SM1-1 | WVTK | 5104-02-0001 | 1 |
| | WAFER | 132-SM1-1 | WVTK | 5104-02-0013 | 2 |
| | WAFER | 137-400 | WVTK | 5104-02-0015 | 10 |
| | DFTENT,MOD FROM:5104-01-0003 | 5104-94-6042 | WVTK | 5104-99-0042 | 1 |
| | DFTENT MOD FROM:5104-01-0010 | 5104-94-6048 | WVTK | 5104-99-0048 | 2 |
| | IC | LM 301AH | NSC | 7000-03-0130 | 2 |
| | IC | MA-741 | FAIR | 7000-07-0180 | 2 |
| | IC | CA-3054 | RCA | 7000-40-5400 | 1 |
| | IC | CA-3094AE | RCA | 7000-50-9400 | 1 |
| | IC | CA-5130 | RCA | 7000-51-1300 | 1 |
| | IC | 7406 | TI | 8000-74-0000 | 1 |
| | IC | 74LS00 | TI | 8000-74-0010 | 1 |
| | IC | 74LS74 | TI | 8000-74-7410 | 1 |
| | VOLTAGE REGULATOR | 7805393 | FAIR | 8000-7A-0500 | 1 |

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-0128 — PAGE: 10 — REV E


NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|---|---|---|---|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO, CALIFORNIA |
| MATERIAL | PROJ ENGR | | TITLE: PARTS LIST MAIN BD |
| | RELEASE APPROV | | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 ANGLES ±1° .XX ±.030 | | MODEL NO. 184 — DWG NO. 1100-00-0128 — REV. E |
| | DO NOT SCALE DWG | | CODE IDENT 23338 — SHEET 2 OF 2 |
| | SCALE | | |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REV | DESCRIPTION | BY | DATE | APP |
|---|---|---|---|---|
| A | ECN | RD | 5-77 | |

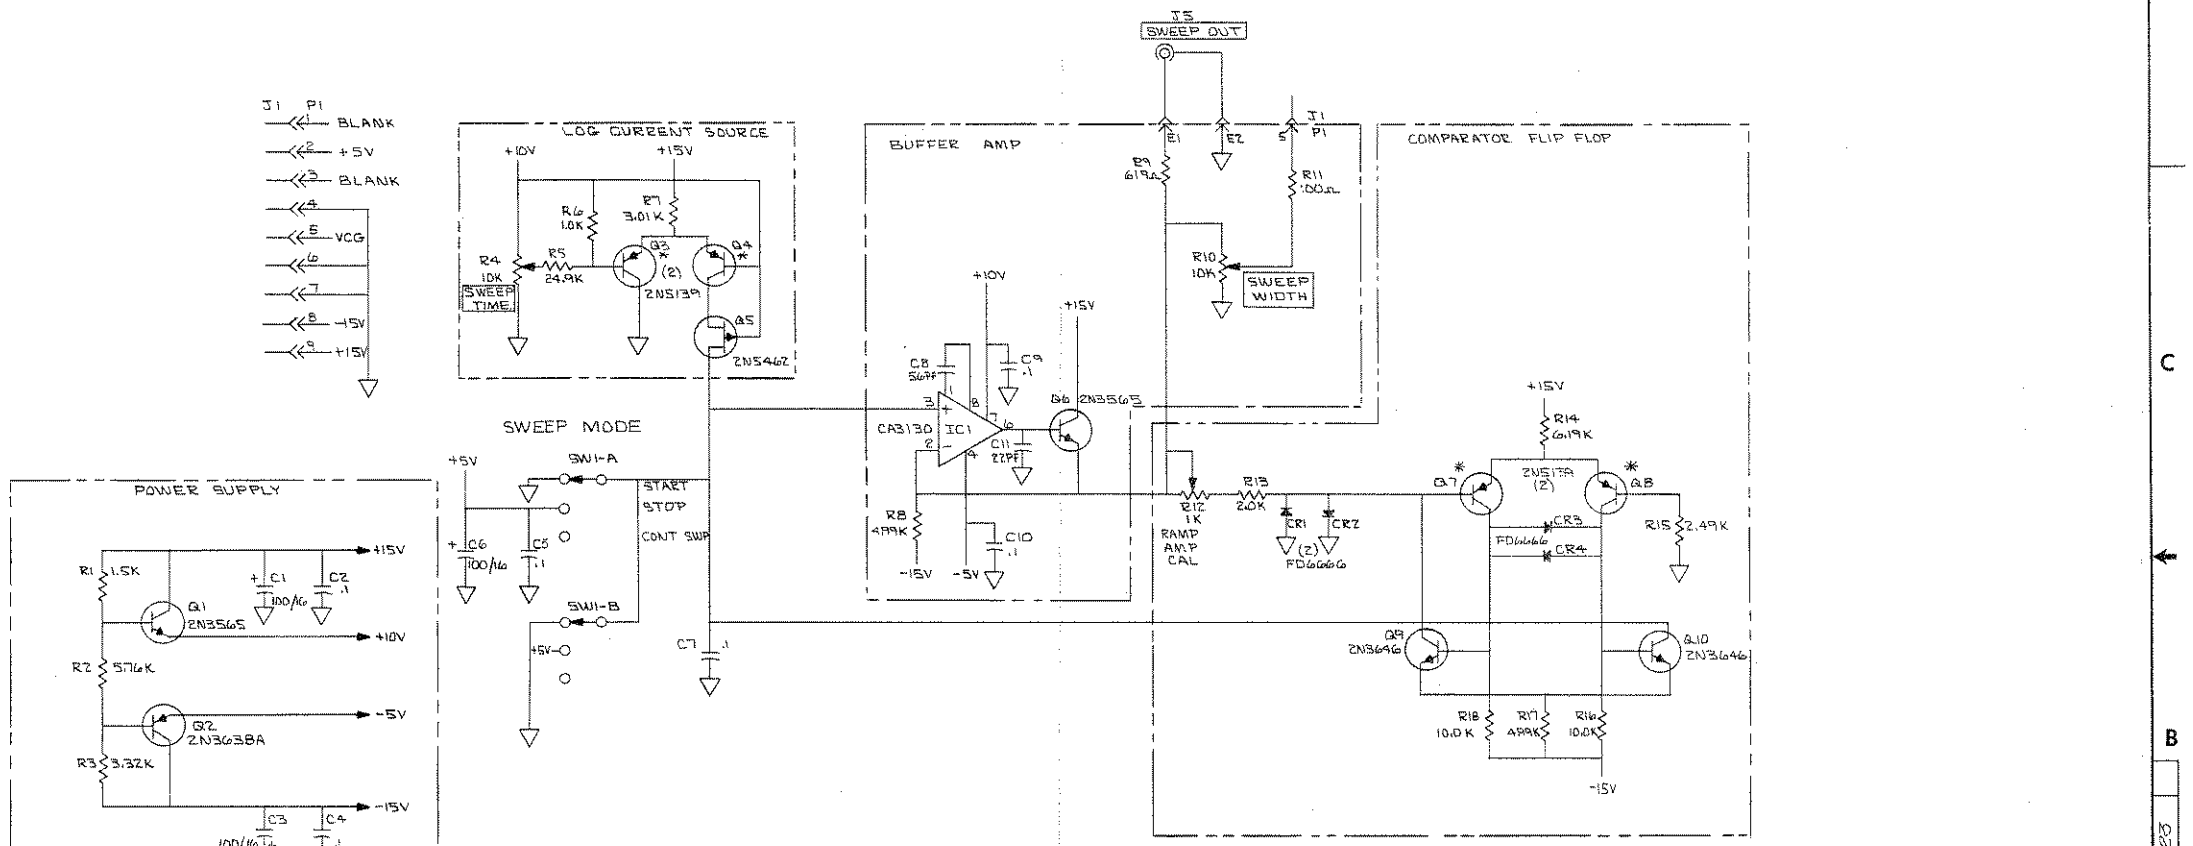


1. * MATCHED PAIR.


NOTE: UNLESS OTHERWISE SPECIFIED

LAST DES USED
R18
CR4
Q10
IC1
SW1


| | | | |
|---|---|---|---|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN BA | DATE 9-1-75 | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR Kurt Bo | RELEASE APPROV | TITLE SCHEMATIC SWEEP BOARD |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 .XX ±.030 ANGLES ±1° | | |
| | DO NOT SCALE DWG | MODEL NO. 183-184 | DWG NO. 0103-00-0123 REV A |
| | SCALE | CODE IDENT 23338 | SHEET 1 OF 1 |


0103-00-0123

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

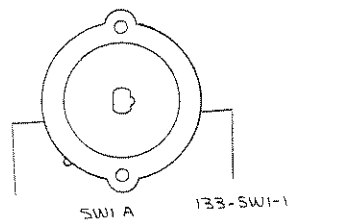


DETENT SHOWN FROM FRONT IN FULL COUNTER-CLOCKWISE POSITION

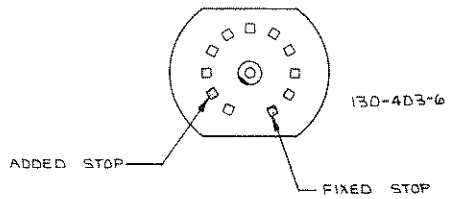

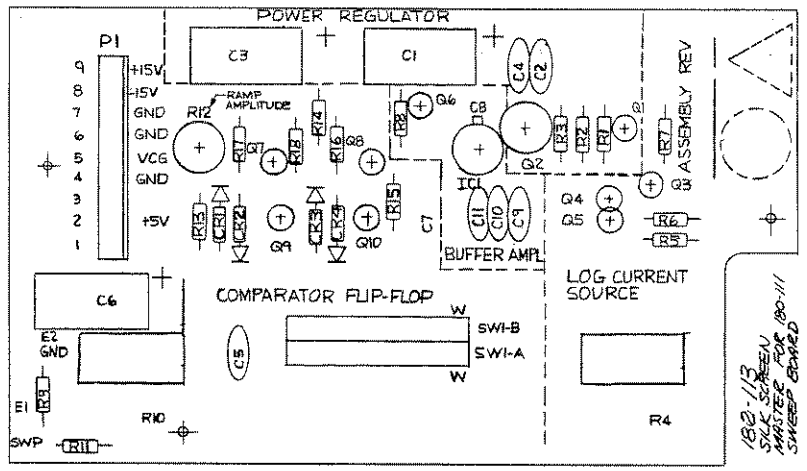
| | | | |
|---|---|---|---|
| DRAWN BA | DATE 4-27-78 | WAVETEK SAN DIEGO, CALIF. | |
| ENGR | | TITLE | |
| RELEASE APPROV | | SILKSCREEN ASSEMBLY PRINT (SWEEP B.D) | |
| TOLERANCE | | | |
| SCALE | | MODEL NO. 183-184 | DWG NO. 0101-00-0123 REV A |
| | | 23338 | SHEET 1 OF 1 |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REV | ECN | BY | DATE | APP |
|---|---|---|---|---|

| REFERENCE DESIGNATIONS | PART DESCRIPTION | UNIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|---|---|---|---|---|
| NONE | ASSY DWG SWEEP | 0101-00-0123 | WVTK | 0101-00-0123 | 1 |
| NONE | SCHEMATIC SWEEP | 0103-00-0123 | WVTK | 0103-00-0123 | 1 |
| NONE | GA ASSY DWG SWEEP | 0107-00-0123 | WVTK | 0107-00-0123 | 1 |
| C10 C2 C4 C5 C9 | CAP,CER,.1MF,20V | UK20-104 | AMCO | 1500-01-0413 | 5 |
| C11 | CAP,CER,22PF,1KV | UD-220 | CRL | 1500-02-2011 | 1 |
| C6 | CAP,CER,56PF,1KV | UD-560 | CRL | 1500-05-6001 | 1 |
| C1 C3 C8 | CAP,ELLECT,100MF,16V | 30UU107G016DC7 | SPRAG | 1500-51-0101 | 3 |
| C7 | CAP,POLYE,.1MF,100V | 225P10491WD3 | SPRAG | 1500-41-0448 | 1 |
| NONE | SHEEP | 182-111 | WVTK | 1700-00-0123 | 1 |
| NONE | CONN,9PIN | 09-60-1091 | MOLEX | 2100-02-0052 | 1 |
| NONE | PIN,MALE | 61182-2 | AMP | 2100-05-0020 | 2 |
| NONE | STANDOFF | 1531R-5/8 | UBECO | 2800-02-0004 | 3 |
| NONE | TRANSIPAD | 10123A | MEIRS | 2800-11-0003 | 1 |
| R12 | POT,TRIM,1K | 91AW1K | BECK | 4600-01-0204 | 1 |
| R10 R9 | POT,CONT,10K | JR-150A | CTS | 4600-01-0303 | 2 |
| R11 | RES,MF,1/8W,1%,100 | RN55D-1000F | IRC | 4701-03-1000 | 1 |
| R6 | RES,MF,1/8W,1%,1K | RN55D-1001F | IRC | 4701-03-1001 | 1 |
| R16 R18 | RES,MF,1/8W,1%,10K | RN55D-1002F | IRC | 4701-03-1002 | 2 |

WAVETEK PARTS LIST | TITLE: SWEEP | ASSEMBLY NO. 1100-00-0123 | PAGE: 1 | REV A

| REFERENCE DESIGNATORS | PART DESCRIPTION | UNIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|---|---|---|---|---|
| R1 | RES,MF,1/8W,1%,1.5K | RN55D-1501F | IRC | 4701-03-1501 | 1 |
| R13 | RES,MF,1/8W,1%,2K | RN55D-2001F | IRC | 4701-03-2001 | 1 |
| R15 | RES,MF,1/8W,1%,2.49K | RN55D-2491F | IRC | 4701-03-2491 | 1 |
| R5 | RES,MF,1/8W,1%,24.9K | RN55D-2492F | IRC | 4701-03-2492 | 1 |
| R7 | RES,MF,1/8W,1%,3.01K | RN55D-3011F | IRC | 4701-03-3011 | 1 |
| R3 | RES,MF,1/8W,1%,3.32K | RN55D-3321F | IRC | 4701-03-3321 | 1 |
| R17 R8 | RES,MF,1/8W,1%,4.99K | RN55D-4991F | IRC | 4701-03-4991 | 2 |
| R2 | RES,MF,1/8W,1%,5.76K | RN55D-5761F | IRC | 4701-03-5761 | 1 |
| R9 | RES,MF,1/8W,1%,619 | RN55D-6190F | IRC | 4701-03-6190 | 1 |
| R14 | RES,MF,1/8W,1%,6.19K | RN55D-6191F | IRC | 4701-03-6191 | 1 |
| CR1 CR2 CR3 CR4 | DIODE | FD-6666 | FAIR | 4607-02-6666 | 4 |
| Q1 Q6 | TRANS | 2N5565 | FAIR | 4901-03-5650 | 2 |
| Q2 | TRANS | 2N3638A | FAIR | 4901-03-6381 | 1 |
| Q10 Q9 | TRANS | 2N5946 | FAIR | 4901-03-6460 | 2 |
| Q5 | TRANS | 2N5462 | NSC | 4901-03-4620 | 1 |
| Q3 Q4 Q7 Q8 | TRANS,M/PK,2N5139 U1T21C4901-05-1390 | 144-501-88 | WVTK | 4998-00-0005 | 2 |
| NONE | DETENT | 130-405 | WVTK | 5104-01-0004 | 1 |

WAVETEK PARTS LIST | TITLE: SWEEP | ASSEMBLY NO. 1100-00-0123 | PAGE: 2 | REV A

| REFERENCE DESIGNATORS | PART DESCRIPTION | UNIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|---|---|---|---|---|
| SW14 SW18 | SWTCH | 133-SW1-1 | WVTK | 5104-02-0008 | 2 |
| NONE | SWITCH STOP | 212-33-006 | CTS | 5104-07-0002 | 1 |
| IC1 | IC | CA-3130 | RCA | 7000-31-3000 | 1 |

WAVETEK PARTS LIST | TITLE: SWEEP | ASSEMBLY NO. 1100-00-0123 | PAGE: 3 | REV A

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|---|---|---|---|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO, CALIFORNIA |
| MATERIAL | PROJ ENGR | | TITLE: MODEL 184 SWEEP BD |
| | RELEASE APPROV | | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 ANGLES 1° .XX ±.030 | | MODEL NO. 184 |
| | DO NOT SCALE DWG | | DWG NO. 1100-00-0123 REV A |
| | SCALE | | CODE IDENT 23338 SHEET OF |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

**Artisan Technology Group** is an independent supplier of quality pre-owned equipment

## Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

## We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

## Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP