

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Keysight / Agilent 3776B* at our website: ***Click HERE***

Errata

Title & Document Type: **3776B PCM Terminal Test Set Operating Manual**

Manual Part Number: **03776-90003**

Revision Date: **April 1984**

About this Manual

We've added this manual to the Agilent website in an effort to help you support your product. This manual provides the best information we could find. It may be incomplete or contain dated information, and the scan quality may not be ideal. If we find a better copy in the future, we will add it to the Agilent website.

HP References in this Manual

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, life sciences, and chemical analysis businesses are now part of Agilent Technologies. The HP XXXX referred to in this document is now the Agilent XXXX. For example, model number HP8648A is now model number Agilent 8648A. We have made no changes to this manual copy.

Support for Your Product

Agilent no longer sells or supports this product. You will find any other available product information on the Agilent Test & Measurement website:

www.agilent.com

Search for the model number of this product, and the resulting product page will guide you to any available information. Our service centers may be able to perform calibration if no repair parts are needed, but no other support from Agilent is available.

Agilent Technologies

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


HP3776B

OPERATING MANUAL

3776B

PCM TERMINAL TEST SET

(Including Options 001, 002 and 004)

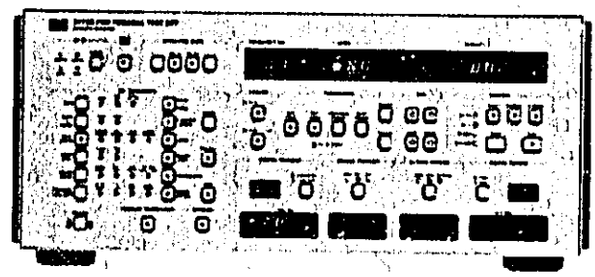

HEWLETT PACKARD

HP3776B

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

CERTIFICATION

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

This Hewlett-Packard instrument product is warranted against defects in material and workmanship for a period of one year from date of shipment. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by HP. Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

HP warrants that its software and firmware designated by HP for use with an instrument will execute its programming instructions when properly installed on that instrument. HP does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

ASSISTANCE

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HEWLETT PACKARD

OPERATING MANUAL

3776B

PCM TERMINAL TEST SET

(Including Options 001, 002 and 004)

SERIAL NUMBER

This manual applies directly to instruments with serial numbers prefixed 2309U and includes update information which applies to instruments with serial numbers 2404U–00242 and above.

For additional important information about serial numbers, see INSTRUMENTS COVERED BY MANUAL in Section 1.

© Copyright HEWLETT-PACKARD LIMITED 1984
SOUTH QUEENSFERRY, WEST LOTHIAN, SCOTLAND

Manual Part Number ~~3776-90003~~ 03776-90003
Microfiche Part Number ~~3776-90028~~ 03776-90028

Printed: April 1984

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

WARNING

READ THE FOLLOWING NOTES BEFORE INSTALLING OR SERVICING THE INSTRUMENT.

1. IF THIS INSTRUMENT IS TO BE ENERGIZED VIA AN AUTO-TRANSFORMER MAKE SURE THAT THE COMMON TERMINAL OF THE AUTO-TRANSFORMER IS CONNECTED TO THE NEUTRAL POLE OF THE POWER SOURCE.

2. THE INSTRUMENT MUST ONLY BE USED WITH THE MAINS CABLE PROVIDED. IF THIS IS NOT SUITABLE, CONTACT YOUR NEAREST HP SERVICE OFFICE. THE MAINS PLUG SHALL ONLY BE INSERTED IN A SOCKET OUTLET PROVIDED WITH A PROTECTIVE EARTH CONTACT. THE PROTECTIVE ACTION MUST NOT BE NEGATED BY THE USE OF AN EXTENSION CORD (POWER CABLE) WITHOUT A PROTECTIVE CONDUCTOR (GROUNDING).

3. THE SERVICE INFORMATION FOUND IN THIS MANUAL IS OFTEN USED WITH POWER SUPPLIED TO AND PROTECTIVE COVERS REMOVED FROM THE INSTRUMENT. ENERGY AVAILABLE AT MANY POINTS MAY, IF CONTACTED, RESULT IN PERSONAL INJURY.

4. BEFORE SWITCHING ON THIS INSTRUMENT:

   (a) Make sure the instrument input voltage selector is set to the voltage of the power source.

   (b) Ensure that all devices connected to this instrument are connected to the protective (earth) ground.

   (c) Ensure that the line power (mains) plug is connected to a three-conductor line power outlet that has a protective (earth) ground. (Grounding one conductor of a two-conductor outlet is not sufficient).

   (d) Check that the instrument fuse(s) is of the correct type and rating.

5. SERVICING INFORMATION:

   (a) This manual contains information, cautions, and warnings which must be followed to ensure safe operation and to retain the instrument in safe condition. Service and adjustments should be performed only by qualified service personnel.

   (b) Any adjustment, maintenance, and repair of the opened instrument under voltage should be avoided as much as possible and, when inevitable, should be carried out only by a skilled person who is aware of the hazard involved.

   (c) Capacitors inside the instrument may still be charged even if the instrument has been disconnected from its source of supply.

   (d) Whenever it is likely that the protection has been impaired, the instrument must be made inoperative and be secured against any unintended operation.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TABLE OF CONTENTS

SECTION I GENERAL INFORMATION

	Page
INTRODUCTION	1-1
SPECIFICATION	1-1
SAFETY CONDISERATION	1-1
INSTRUMENTS COVERED BY MANUAL	1-1
DESCRIPTION	1-2
ACCESSORIES SUPPLIED	1-3
EQUIPMENT AVAILABLE	1-3
OPTIONS	1-4
Index to Specifications	1-5
Specifications	1-6

SECTION II INSTALLATION

	Page
INTRODUCTION	2-1
INITIAL INSPECTION	2-1
PREPARATION FOR USE	2-1
Power Requirements	2-2
Line Voltage selection and Fuse	2-2
Power Cable	2-2
Power Receptacles	2-2
Operating Environment	2-3
MATING CONNECTORS	2-3
Connector Configuration	2-4
Front Panel Connectors	2-4
RACK MOUNTING	2-5
HEWLETT-PACKARD INTERFACE (HP-IB) BUS INSTALLATION	2-6
Connection to the HP-IB	2-6
HP-IB Interface Cables	2-6
3776 CONFIGURATION	2-7
3776 in TALK ONLY Mode	2-7
3776 Configured as an Addressable Device	2-7
HP-IB Output Format	2-8
DIG Rx DATA OUTPUT (rear panel) Connector	2-9
STORAGE and SHIPMENT	2-9
Packaging	2-9
INTERNAL BATTERY	2-10

SECTION III GETTING STARTED

	Page
INTRODUCTION	3-1
BEFORE GETTING STARTED	3-1
GETTING STARTED	3-2
The Default State	3-2

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ANALOG MEASUREMENTS . . . 3-3
SETTING THE ANALOG Tx TLP . . . 3-4
SETTING THE ANALOG Rx TLP . . . 3-5
RUNNING A SINGLE POINT MEASUREMENT . . . 3-5
STORE AND RECALL . . . 3-6
MULTI-POINT MEASUREMENTS . . . 3-7
CHANGING PARAMETERS . . . 3-8
INSERTING MEASUREMENT POINTS . . . 3-9
THE DELETE FUNCTION . . . 3-10
USING THE CONTROL KEYS . . . 3-11
DIGITAL MEASUREMENTS . . . 3-12
SETTING BACKGROUND PCM . . . 3-13
TRANSMIT TIMESLOT SELECTION . . . 3-14
RECEIVE TIMESLOT SELECTION . . . 3-14
DIGITAL TIMESLOT MANIPULATION . . . 3-15

SECTION IV MEASUREMENTS

SETTING UP THE INSTRUMENT CONFIGURATION

Page
INTRODUCTION . . . 4-1
OPERATING MODES . . . 4-2
INTERFACE SETTINGS . . . 4-2
ANALOG TRANSMIT INTERFACE SETTING . . . 4-3
Anlog Transmitter Impedance . . . 4-3
Analog Transmitter TLP . . . 4-3
ANALOG RECEIVE INTERFACE SETTING . . . 4-3
Analog Receiver Impedance . . . 4-3
Analog Receiver TLP . . . 4-3
DIGITAL TRANSMIT INTERFACE SETTING . . . 4-4
Synthesised or Thru PCM . . . 4-4
Digital Transmit Timeslot Selection . . . 4-4
DIGITAL RECEIVE INTERFACE SETTING . . . 4-4
Terminated or Monitor Input . . . 4-4
Digital Receive Timeslot Selection . . . 4-5
PCM FORMAT . . . 4-5
Signalling . . . 4-5
Code . . . 4-5
Frame Format . . . 4-5
SETTING FRAMING AND SIGNALLING BITS . . . 4-5
SETTING BACKGROUND PCM . . . 4-6
TIMESLOT TRANSLATION . . . 4-6

MEASUREMENT INFORMATION

Measurement Groups . . . 4-7
Measurement Selection . . . 4-7
Table of Measurements . . . 4-8
Gain tone . . . 4-8
Gain dig mW . . . 4-8
Digital Tx-Rx . . . 4-9

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Gain v frequency 4-10
Gain v level tone 4-11
Gain v level 2kHz sync 4-12
Notched noise 4-13
Idle state weighted filter 4-13
Idle state selective 4-14
Idle state PCM codes (coder offset) 4-14
Idle state other filters 4-15
Auxiliary input for level measurements 4-15
Communication over the line under test . . . . 4-15, appendix D
Level weighted filter 4-16
Level selective 4-17
Level PCM codes 4-18
Level other filters 4-19
Intermod 4 tone 4-20
Intermod 2 tone 4-21
Quantising distortion 4-22
Envelope delay distortion 4-23
Remodulation 4-25
Absolute delay 4-26
Return loss (4 W) 4-27
Dialling 4-27
Transients 4-28
Framing and signalling bits 4-30
Ft bits (normal frame) 4-31
Fe bits (extended frame) 4-31
Fs bits 4-31
CRC bits 4-32
Sig bits 4-32
Loop timing 4-32
Phase jitter 4-33

SETTING UP THE MEASUREMENT CONFIGURATION

PARAMETER SELECTION 4-34
Changing Parameters in Multi-point Measurements 4-34
Insertion and Deletion of Points 4-36
STORE AND RECALL FUNCTIONS 4-37
STORE AND RECALL WITH FRAMING,SIGNALLING AND BACKGROUND PCM 4-38
USER DEFINED INTERFACE DEFAULT PARAMETERS 4-39
MEASUREMENT SEQUENCES 4-40
Continuous Measurements in Sequences 4-41
THE COMPLETE NON-VOLATILE MEMORY 4-42

SECTION V MEASUREMENT MODES AND CONFIGURATIONS

Page
INTRODUCTION 5-1
ASSOCIATED EQUIPMENT 5-1
LOOPBACK CONFIGURATIONS 5-1
A-D Local Coder Test 5-1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A-A Local Coder/Decoder Test . . . 5-2
A-A Local and Remote Coder/Decoder Test . . . 5-2
D-D Local and Remote Coder/Decoder Test . . . 5-2
Coder/Decoder Test Using Digital Loopthrough . . . 5-3
PCM Terminal Testing (sequential) . . . 5-4
PCM System Digital Testing (without interrupting traffic) . . . 5-5
Simultaneous Testing of More Than One Timeslot . . . 5-6
END TO END MEASUREMENTS . . . 5-6
A-A Local Coder/Remote Decoder Test . . . 5-7
Multi Purpose End to End Testing . . . 5-8
THE AUXILIARY INPUT . . . 5-9
EXTERNAL CLOCK . . . 5-9
MONITOR OUTPUT . . . 5-9
OBTAINING HARD COPY OF MEASUREMENT RESULTS . . . 5-9

SECTION VI HP-IB INFORMATION

Page
INTRODUCTION . . . 6-1
HP-IB CAPABILITY . . . 6-1
CALIBRATION IN REMOTE MODE . . . 6-2
HP-IB MESSAGES . . . 6-2
HP-IB COMMANDS . . . 6-2
HP-IB COMMAND CATEGORIES . . . 6-3
HP-IB ? form of commands . . . 6-3
HP-IB FUNCTION/MNEMONIC/CATEGORY/VALIDITY TABLE . . . 6-5
HP-IB key codes, quick reference . . . 6-6
HP-IB INPUT/OUTPUT DATA FORMATS . . . 6-7
HP-IB INSTRUMENT STATUS COMMANDS . . . 6-8
HP-IB Provide Status Output . . . 6-8
HP-IB SRQ Disable/Enable . . . 6-8
HP-IB SRQ Mask Selection . . . 6-8
HP-IB Report Errors . . . 6-9
HP-IB Measurement Parameter Output . . . 6-9
HP-IB Device Identification . . . 6-9
HP-IB INSTRUMENT CONFIGURATION COMMANDS . . . 6-10
HP-IB Analog Transmitter Impedance . . . 6-10
HP-IB Analog Receiver Impedance . . . 6-10
HP-IB Digital Transmit Synthesis . . . 6-10
HP-IB timeslot translation . . . 6-10
HP-IB PCM Format . . . 6-10
HP-IB Framing and Signalling Bits . . . 6-10
HP-IB Background Idle Codes . . . 6-11
HP-IB Digital Receive Termination . . . 6-11
HP-IB Operating Mode . . . 6-11
HP-IB Analog Transmit TLP . . . 6-11
HP-IB Analog Receive TLP . . . 6-11
HP-IB Digital Transmit Timeslot(s) . . . 6-11
HP-IB Digital Receive Timeslot . . . 6-12
HP-IB Disable/Enable Idle Cal . . . 6-12
HP-IB Idle State (instrument) . . . 6-12

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HP-IB holding tone . . . 6-12
HP-IB Network Delay Time . . . 6-12
HP-IB Loudspeaker Volume . . . 6-12
HP-IB MEASUREMENT CONFIGURATION COMMANDS . . . 6-13
All Off . . . 6-13
Gain tone . . . 6-13
Gain dig mW . . . 6-13
Digital Tx-Rx . . . 6-13
Level selective . . . 6-14
Level weighted filter . . . 6-14
Level other filters . . . 6-15
Level PCM codes . . . 6-15
Idle state selective . . . 6-15
Idle state weighted filter . . . 6-16
Idle state other filters . . . 6-16
Idle state PCM codes (coder offset) . . . 6-16
Gain v level tone . . . 6-16
Gain v level 2kHz sync . . . 6-16
Gain v frequency . . . 6-17
Notched noise . . . 6-17
Quantising distortion . . . 6-17
Intermod 4 tone . . . 6-17
Intermod 2 tone . . . 6-17
Transients . . . 6-18
Return loss (4W) . . . 6-18
Loop timing . . . 6-18
Envelope delay distortion . . . 6-18
Remodulation . . . 6-19
Absolute delay . . . 6-19
Phase jitter . . . 6-19
Ft bits . . . 6-19
Fs bits . . . 6-19
Fe bits . . . 6-20
Sig bits . . . 6-20
CRC bits . . . 6-20
Dialling . . . 6-20
HP-IB STORE AND RECALL FUNCTIONS . . . 6-20
HP-IB MEASUREMENT RUNNING COMMANDS . . . 6-20
HP-IB Single Step Command . . . 6-20
HP-IB Repeat Command . . . 6-20
HP-IB Stop Command . . . 6-21
HP-IB DATA OUTPUT COMMANDS . . . 6-21
HP-IB Result Header Output . . . 6-21
HP-IB Result Output . . . 6-21
HP-IB Result Trailer Output . . . 6-21
HP-IB Error Output . . . 6-21
HP-IB Identification Output . . . 6-21
HP-IB SEQUENCE COMMANDS . . . 6-21
HP-IB Sequence, Clear Command . . . 6-21
HP-IB Sequence, Add Command . . . 6-21
HP-IB Sequence, number of measurements enquiry . . . 6-21
HP-IB DIALLING COMMANDS . . . 6-22

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HP-IB Multifrequency Dialling Tones 6-22
HP-IB Signalling Bit Dialling Parameter Setting 6-23
HP-IB Continuous Pulse Signalling 6-23
HP-IB Dial via Signalling 6-23
HP-IB Multifrequency Dialling 6-23
HP-IB SELF TEST COMMANDS 6-24
HP-IB STATUS BYTES 6-25
HP-IB NOTES ON MEASUREMENT CONTROL 6-26

SECTION VII MANUAL UPDATE

Page
UPDATE INFORMATION 7-1

DEFINITION OF UNITS . . . . . APPENDIX A
PCM FRAME STRUCTURE . . . . . APPENDIX B
PLOTTER CONFIGURATIONS . . . . . APPENDIX C
SELF TEST . . . . . APPENDIX D
OPERATIONAL TROUBLESHOOTING . . . . . APPENDIX E
DIGITAL RECEIVER DATA OUTPUT . . . . . APPENDIX F
CODED SELECTABLE FILTERS . . . . . APPENDIX G
ERROR CODES . . . . . APPENDIX H

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

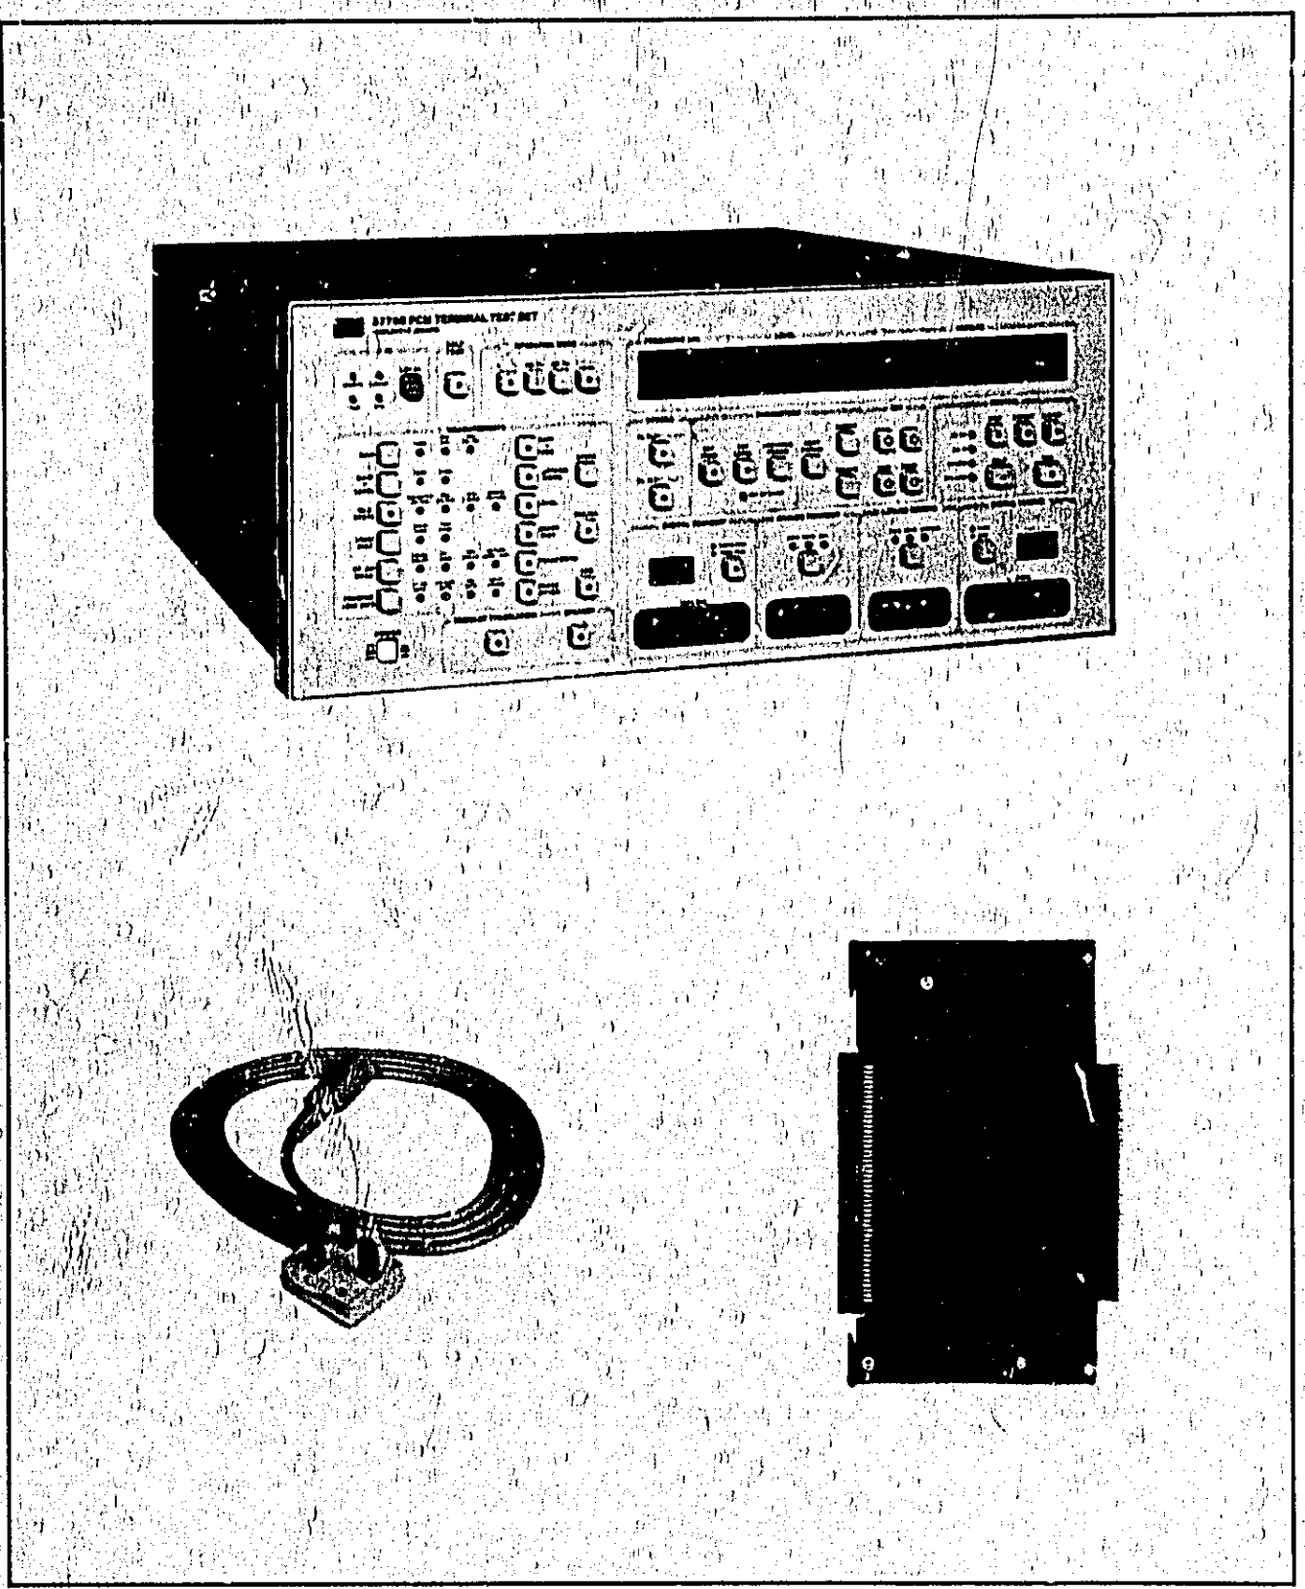


Figure 1-1 The 3776B PCM Terminal Test Set with Accessories supplied

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION I
GENERAL INFORMATION

1-1 INTRODUCTION

1-2 This Operating Manual contains information required to install and operate the Hewlett-Packard Model 3776A and 3776B PCM Terminal Test Set. A PCM Terminal Test Set together with the power cable and extender board supplied are shown in Figure 1-1.

1-3 The Operating instructions in this manual cover both manual and HP-IB (Hewlett-Packard Interface Bus) operation. Operating instructions are supplied in the OPERATORS GUIDE.

1-4 On the title page of this manual is a Microfiche Part Number. This number can be used to order 4 x 6 inch microfilm transparencies of the manual. Each microfiche contains up to 96 photo duplicates of the manual pages.

1-5 SPECIFICATION

1-6 Instrument specifications are listed in Table 1-3. These specifications are the performance standards or limits against which the instrument is tested. Table 1-2 (page 1-5) is a tabular index to facilitate location of individual measurement specifications within Table 1-3.

1-7 SAFETY CONSIDERATION

1-8 This product is a Safety Class I instrument (provided with a protective earth terminal). The instrument and manual should be reviewed for safety markings and instructions before operation. Also read the Warning on Page 2.

1-9 INSTRUMENTS COVERED BY MANUAL

1-10 Attached to the instrument is a serial number plate. This serial number is in the form XXXXUXXXXX. It is in two parts; the first four digits and the letter are the serial prefix and the last five are the suffix. The prefix is the same for all identical instruments; it changes only when a change is made to the instrument. The suffix however, is assigned sequentially and is different for each instrument. The contents of this manual apply to instruments with the serial number prefix(es) listed under SERIAL NUMBERS on the title page.

1-11 An instrument manufactured after the printing of this manual may have a serial number prefix that is not listed on the title page. This unlisted serial number prefix indicates the instrument is different from those described in this manual. The manual for this new instrument is accompanied by a Manual Changes supplement. This supplement contains "change information" that explains how to adapt the manual to the newer instrument.

1-12 In addition to change information, the supplement may contain information for correcting errors in the manual. To keep this manual as current and accurate as possible, Hewlett-Packard recommends that you periodically request the latest Manual Changes supplement. The supplement for this manual is identified with the manual print data and part number, both of which appear on the manual title page. Complimentary copies of the supplement are available from Hewlett-Packard.

1-13 For information concerning a serial number prefix that is not listed on the title page or in the Manual Changes supplement, contact your nearest Hewlett-Packard office.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1-14 DESCRIPTION

1-15 The 3776A and 3776B PCM Terminal Test Sets make comprehensive voice and data measurements on 4kHz bandwidth, analog and digital channels. Besides testing PCM multiplexers and channel banks, these instruments also provide powerful facilities for testing trans-multiplexers and digital switching systems. Both versions of HP's Terminal Test Set are fully programmable from an external controller via the HP-IB.

1-16 The 3776A fulfils the measurement needs of CEPT/CCITT transmission networks while the 3776B covers North American/Bell and Japanese systems.

1-17 HP's PCM Terminal Test Sets perform the measurements needed for both analog and digital testing on 4kHz channels. They replace the collection of independent analog and digital test equipment previously used in a mixed system environment with one test set. A summary of the measurements available is given in Table 1-1.

Table 1-1 Summary of Measurements Available

Standard Measurements	A-A	A-D	D-A	D-D	AN Tx	DIG Tx	DIG Rx	AN Rx
Gain	*	*	*	*	*	*	*	*
Digital mW gain			*	*		*	*	*
Level (including harmonic distortion)	*	*	*	*	*	*	*	*
Gain v level (using tone)	*	*	*	*	*	*	*	*
Gain v level (using noise - 3776A)	*	*	*	*	*	*	*	*
Gain v level (using sync 2kHz)			*	*		*	*	*
Gain v frequency	*	*	*	*	*	*	*	*
Idle state (choice of filters)	*	*	*	*	*	*	*	*
Coder offset and peak codes		*		*	*	*	*	
Noise with tone	*	*	*	*	*	*	*	*
Quantizing distortion (using tone)	*	*	*	*	*	*	*	*
Quantizing distortion (using noise - 3776A)	*	*	*	*	*	*	*	*
Intermodulation (using two tones)	*	*	*	*	*	*	*	*
Intermodulation (using four tones - 3776B)	*	*	*	*	*	*	*	*
Digital Tx/Rx				*		*	*	
Return loss 4W (ERL - 3776B)	*	*	*	*	*	*	*	*
Loop timing (selected by using the OTHER MEAS key)				*				
Option 001 Measurements								
Group delay distortion (3776A)	*	*	*	*	*	*	*	*
Envelope delay distortion	*	*	*	*				
Absolute delay	*	*	*	*				
Phase jitter (choice of filters)	*	*	*	*	*	*	*	*
Re-modulation	*	*						
Transients: (Amplitude/gain hits	*	*	*	*	*	*	*	
Phase hits								
Interruptions/dropouts								
Impulse noise)								

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1-18 The main features incorporated into the 3776A and 3776B are listed as follows:

- Pre-programmed measurement default parameters
- User-modified measurement parameters held in non-volatile memory
- Automatic validity checks carried out on parameter entries
- Measurement sequences can be loaded into non-volatile memory from an external controller
- Once entered, measurement sequences can be run with or without an external controller
- Hard-copy measurement parameters results output via HP-IB without an external controller

1-19 The 3776A can be used to set and to monitor the PCM stream's framing and signalling bits, ie frame word, non-frame word, TS16 frame 0 and TS16 signalling bits. When control of the frame word is selected, simulated error ratio, frame alignment, AIS and loss of 2.048Mb/s signal parameters can be inserted into the transmitter's output stream for checking alarms in the PCM multiplex.

1-20 The 3776B provides the capability to set and to monitor the PCM stream's F_P, F_S and signalling bits. It can also generate a DS-1 (Extended Framing Format Fe) digital stream containing any framing and signalling bits set by the user. This checks channel bank alignment and alarms. A looped timing check is also available and this indicates whether or not a remote channel bank is loop-timed, in addition to detecting the presence of timing jitter on the line.

1-21 ACCESSORIES SUPPLIED

1-22 Figure 1-1 shows the HP Model 3776 together with the power cable and extender board supplied.

a) The line power cable is supplied in one of six configurations depending upon the country of destination of the instrument (see INSTALLATION, SECTION II).

b) The following manuals are also supplied with each instrument:

- Service Manual (combined 3776A/B manual)
- Operating Manual (separate 3776A and 3776B manual)
- Operating Booklet (separate 3776A and 3776B booklet)

1-23 EQUIPMENT AVAILABLE

1-24 A Loop Holding Accessory is available for use with either the 3776A or 3776B. There are three Loop Holding Accessories and their model numbers are listed here:

- HP 15518A available with 3776A only
- HP 15518B available with 3776B only
- HP 15518C available with 3776B fitted with Japanese option

1-25 A Channel Selector, printer, plotter and external controller may also be used with this instrument. A typical example of each is listed here:

HP 3777A	Channel Selector
HP 85	Controller
HP 2631B	80 Column Printer
HP 7470A	HP-GL Plotter

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1-26 Two sets of cables are available with 3776B Option 004, viz:

HP 15567A (450mm).....cable assy (D/D)
HP 15568A (260mm).....cable assy (A/A)

1-27 OPTIONS

1-28 The following options are available and are covered by this manual:

	3776A	3776B
OPTION 001	Adds the following data measurements; group delay distortion envelope delay distortion absolute delay phase jitter transients of amplitude hits, phase hits, interruptions and 3 level impulse noise Also adds rear panel MONITOR O/P.	Add the following data measurements. envelope delay distortion remodulation absolute delay phase jitter transients of gain hits, phase hits, dropouts and 3 level impulse noise. Also adds rear panel MONITOR O/P.
OPTION 002	Replaces front panel BNC connectors with Siemens 75ohms UNBALanced coaxial (1.6mm/5.6mm) connector.	Japanese option requirements same as standard 3776B except for the following: a) Psophometric weighted filter in place of C-message b) 810Hz default test frequency instead of 1010Hz. c) Front panel connectors replaced by Japanese I-214 type BALanced connector.
OPTION 004		Front panel connectors change to TROMPETER and mounted on rear panel.
OPTION 801	Front cover including foam insert to hold Loop Holding Accessory.	Front cover including foam insert to hold Loop Holding Accessory.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 1-2 Index to Specifications in Table 1-3

A/B/ OPT	MEASUREMENT	SPECIFICATION/PAGE NUMBER							
		A-A	A-D	D-A	D-D	AN Tx	DIG Tx	AN Rx	DIG Rx
A & B	GAIN (Tone)	1-19	1-25	1-32	1-37	1-42	1-46	1-50	1-53
	GAIN (Digital MW)			1-32	1-37		1-46	1-50	1-53
	GAIN (Digital Tx-Rx)				1-37		1-46		1-53
	GAIN V FREQUENCY	1-19	1-25	1-32	1-37	1-42	1-46	1-50	1-53
A	GAIN V LEVEL (Using Noise)	1-19	1-25	1-32	1-38	1-42	1-46	1-50	1-53
A & B	GAIN V LEVEL (Using Tone)	1-19	1-26	1-33	1-38	1-43	1-47	1-50	1-53
	GAIN V LEVEL (Synchronising 2kHz)			1-33	1-39		1-47	1-51	1-54
	NOISE WITH TONE	1-20	1-26	1-34	1-39	1-43	1-47	1-51	1-54
	IDLE STATE					1-43	1-48		
	IDLE STATE (Weighted, Selective, Other Filters)	1-20	1-27	1-34	1-39			1-51	1-54
	IDLE STATE (PCM Codes)		1-27		1-39				1-54
	LEVEL					1-44	1-48		
	LEVEL (Weighted, Other Filters)	1-21	1-27						
	LEVEL (Selective)	1-22	1-28						
	LEVEL (Weighted, Selective, Other Filters)			1-34	1-40			1-51	1-54
	LEVEL (PCM Codes)		1-29		1-40				1-54
A	QUANTISING DISTORTION (Using Noise)	1-22	1-29	1-35	1-40	1-44	1-48	1-51	1-55
A & B	QUANTISING DISTORTION (Using Tone)	1-23	1-30	1-35	1-40	1-44	1-48	1-52	1-55
	INTERMODULATION (2-Tone)	1-23	1-30	1-36	1-41	1-45	1-48	1-52	1-55
B	INTERMODULATION (4-Tone)	1-23	1-31	1-36	1-41	1-45	1-49	1-52	1-56
	RETURN LOSS (ERL)	1-24	1-31	1-36	1-41	1-45	1-49	1-52	1-56
A	GROUP DELAY					1-58	1-60	1-59	1-60
A & B	ABSOLUTE DELAY					1-60	1-61	1-61	1-61
	ENVELOPE DELAY					1-61	1-62	1-62	1-62
B	RE-MODULATION					1-63		1-63	1-63
A & B	PHASE JITTER					1-63	1-64	1-63	1-64
	TRANSIENTS					1-65	1-67	1-65	1-67
	(A) GAIN HITS							1-65	1-67
	(B) PHASE HITS							1-66	1-68
A	(C) INTERRUPTIONS							1-66	1-68
B	(D) DROPOUTS							1-66	1-68
A & B	(E) IMPULSE NOISE							1-66	1-68

ADDITIONAL ITEMS FOR OPT 001 ONLY

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 1-3 Hardware and Measurement Specifications

Except where otherwise indicated, the following parameters are warranted performance specifications. Parameters described as "typical" or "nominal" are supplemental characteristics whicl provide a useful indication of typical, but non-warranted, performance characteristics.

HARDWARE SPECIFICATIONS

1. ANALOG TRANSMITTER

SIGNALS

Sinewave

Frequency range: 200 to 3900Hz (50 to 4600Hz for level measurements)
Frequency accuracy: 50ppm
Frequency resolution: 10Hz
Harmonics, spurious signals: >65dB down
(for output levels >-40dBm)

Two Tone

Frequency range f_A and f_B: 200 to 3900Hz
Frequency accuracy: 50ppm
Frequency resolution: 10Hz
Relative amplitude (f_A relative to f_B): +/-0.1dB
Harmonics, spurious signals: >65dB down
(for output levels >-40dBm)

Noise
3776A only

Meets CCITT Rec. 0.131
Amplitude distribution: gaussian nominal
Frequency distribution (3dB points): 375 to 525Hz nominal
Spectral line spacing: 3.9Hz
Crest Factor: 10.5 +/-0.5dB nominal
Repetition rate: 256ms +/-50ppm

Four Tone
3776B only

Meets BSTR Pub. 41009
Lower tones centre frequencies: 860Hz +/-50ppm
Lower tones separation: 6Hz +/-1Hz
Upper tones centre frequencies: 1300Hz +/-50ppm
Upper tones separation: 16Hz +/-1Hz
Relative level of four tones: +/-0.1dB
Harmonic distribution: <-35dB
Spurious signals 1877 to 1923Hz: <-70dB
503 to 537Hz: <-70dB
2223 to 2257Hz: <-70dB

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Echo Return Loss (ERL)
3776B only

Meets BSTR pub. 41009

Group Delay
3776A option 001 only

Reference frequency range. 500 to 3000Hz
Measurement frequency range: 200 to 3600Hz
Modulation method and measurement conforms to CCITT Rec. O 81

Envelope Delay
(option 001 only)

A Modulation frequency: 41 2/3Hz +/-50ppm
Modulation depth: 0.40 +/-0.05
Carrier frequency range: 300 to 3500Hz

B Meets BSTR Pub. 41009
Modulation frequency: 83 1/3Hz +/-50ppm
Carrier frequency range: 300 to 3500Hz

Absolute Delay
(option 001 only)

Same as envelope delay

LEVEL
Maximum Output Level

sinewave: +10dBm
two tone: +7dBm
noise (3776A only): +2dBm
four tone (3776B only): +4dBm
echo return loss (3776B only): 0dBm
group delay (3776A option 001 only): +5dBm
envelope delay (option 001 only): +5dBm

Minimum Output level

-76.5dBm nominal
Level resolution: 0.1dB nominal
Transmit dBr (TLP) range: -20 to +10dB
Level accuracy: (includes return loss effects)

Nominal Signal Level (dBm)	Accuracy (+/-dB)
>-30	0.09
>-60	0.11
>-76	0.13

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Level Flatness

50 to 200Hz. +/-0.3dB
200 to 3900Hz: +/-0.04dB

OUTPUT

Max dc isolation: +/-56V
Impedance: selectable 600ohm/900ohm nominal, balanced/unbalanced
Connectors: 3776A - Siemens 3-pin
3776B - WECO 310 and Bantam jack

2. ANALOG RECEIVER

INPUT

Noise floor: <-100dBmp (<-10dBrnC)
Maximum continuous ac signal level: 9V p-p
Maximum continuous dc signal level: +/-56V
Input flatness (200 to 3900Hz): +/-0.03dB
Receiver dBr (TLP) range: -20 to +10dB
Impedance: selectable 600ohm/900ohm/50kohm, nominal
Connectors: 3776A - Siemens 3-pin
3776B - WECO 310 and Bantam jack

FILTERS

The following filters are provided and are selected as appropriate by the measurement software:

Selective: 85Hz nominal noise bandwidth over frequency range 200 to 3900Hz
3kHz flat: meets BSTR Pub. 41009
Wideband: flat filter with dc rejection
4100Hz high pass: filter used for out-of-band measurements

Filters used in 3776A only:
Quantising distortion reference and measurement: meets CCITT Rec. 0.13
Psophometric*: meets CCITT Rec. P53A
810Hz notch*: meets CCITT Rec. 0.132

*These filters are also used in 3776B Option 002 (Japanese)

Filters used in 3776B only:-
Four-tone intermodulation: meets BSTR Pub. 41009
C-message: meets IEEE P743/D3*
C-message notch: meets IEEE P743/D3*
200Hz high pass: filter used for echo return loss (ERL)

*Not used in 3776B option 002.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Filters used when option 001 is fitted:-
Impulse noise:
3776A - selectable three notched band-pass filters to CCITT Rec. 0.71
3776B - C-notched filter to IEEE P743/D3
Phase jitter: selectable as
Fil A - 30 to 300Hz
Fil B - 4 to 300Hz

3. DIGITAL TRANSMITTER

SIGNALS

As analog transmitter except bandwidth limited to 200 to 3600Hz

LEVEL

Maximum Output Level

sinewave: +3.1dBm0
two tone: 0.0dBm0
noise (3776A only): -5.0dBm0
four tone (3776B only): -3.0dBm0
echo return loss (3776B only): -7.0dBm0
group delay (3776A Option 001 only): -2.0dBm0
envelope delay (Option 001 only): -2.0dBm0

Minimum output level:

-60.0dBm0 nominal
Level resolution: 0.1dBm0 nominal
Level accuracy:

Nominal Signal Level (dBm0)	A-law	u-law
>-40	0.01	0.01
>-55	0.03	0.03
>-60	0.03	0.05

TEST CHANNEL OR TIMESLOT

Insertion of test signals into one selectable timeslot, all timeslots or all timeslots except one in the PCM stream.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

FRAMING & SIGNALLING BITS MANIPULATION

Selectable bit patterns of:-
3776A - timeslot 0 in frame 0; timeslot 0 in non-frame 0;
timeslot 16 in frame 0; timeslot 16 signalling bits in all other frames
3776B (FT frame format) - FT bits, FS bits, signalling A & B bits
(FE frame format) - FE bits, signalling ABCD bits

SIMULATION OF TERMINAL ALARMS (3776A only)

Timeslot 0 in frames containing alignment word
Error Ratio - 1×10^{-5}, 5×10^{-5}, 1×10^{-4}, 5×10^{-4}, 1×10^{-3}
can be simulated in the frame alignment word
Frame alignment - 1 in 2, 2 in 4, 3 in 4 frame alignment word in error can be simulated in the PCM stream
AIS - an all ones signal can be inserted in PCM stream
OFF - no 2048kb/s PCM stream signal

Timeslot 0 in non-frames containing alignment word
Frame alignment - 1 in 2 or 3 in 4 of bit 3 in error can be simulated in the PCM stream

UNSELECTED AUDIO TIMESLOTS

THRU PCM: as received from digital receiver
SYNTH PCM: background signal
(Two user programmable PCM codes alternating at 1kHz. The two PCM codes are accessable via the Digital Tx-Rx measurement on the front panel.)

PCM OUTPUT

Frame format:
3776A - conforms to CCITT Rec. G732. Rear panel switch selects 30 or 31 audio channels (timeslot 16 is used as an audio channel)
3776B - rear panel switch selects
FT - standard frame format conforming to BSTR Pub. 43801 (CCITT Rec. G.733)
or FE - extended superframe (ESF) format conforming to AT & T Technical Advisory No. 70

Frame source: Synthesized from internal source or looped through from digital receiver

Compression characteristics: conforms to CCITT Rec. G.711
3776A - A-law with alternate digit inversion (ADI), ideal
3776B - U-law, ideal

Signalling: rear panel switch selects channel associated signalling (CAS) or common channel signalling (CCS)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Coding:
3776A - rear panel switch selects HDB3 or AMI
3776B - rear panel switch selects AMI (AZS) or B8ZS

Impedance:
3776A - 120ohm balanced nominal and 75ohm unbalanced nominal
3776B - 100ohm balanced nominal

Connectors:
3776A - Siemens 3-pin (balanced); BNC (unbalanced)
3776B - WECO 310 and Bantam jack

Amplitude:

	3776A, 3776B balanced outputs	3776A unbalanced output
Mark	+/-3V +/-10%	+/-2.37V +/-10%
Space	+/-0.3V max	+/-0.24V max

Overshoot: <10% amplitude
Width (at 50% amplitude): 50% +/-6%
Transistion times: <30ns

CLOCKS

Internal
Frequency: 3776A - 2048kHz +/-50ppm
3776B - 1544kHz +/-50ppm

External
Frequency: internal bit rate
Level: TTL into 75ohm, nominal
Connector: BNC

4. DIGITAL RECEIVER

TEST CHANNEL
Selected timeslot in the PCM stream

PCM INPUT

Frame format:
3776A - meeting CCITT Rec. G.732
3776B - meeting BSTR Pub. 43801 (CCITT Rec. 733) if FT selected
meeting AT+T Technical Advisory Note No. 70 if FE selected

Expansion characteristics: conforms to CCITT Rec. G.711
3776A - A-law ideal
3776B - u-law ideal

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Frame alignment: automatic

Multi-frame alignment: automatic if CAS selected

Signalling: selectable as CAS or CCS

Coding:
3776A - selectable HDB3 or AMI
3776B - selectable AMI (AZS) or B8ZS

Impedance:
3776A - 120ohm balanced nominal, 75ohm unbalanced nominal
3776B - 100ohm balanced nominal

Connector:
3776A - Siemens 3-pin (balanced); BNC (unbalanced)
3776B - WECO 310 and Bantam jack

Maximum input level: +/-6V
Minimum input levels (equivalent cable loss):
3776A - 6dB at 1MHz
3776B - 6dB at 0.75MHz

Modes: selectable as
TERMinated - PCM input terminated by characteristic impedance

MONitor
3776A - provides 30dB gain PCM input terminated by
3776B - provides 20dB gain characteristic impedance

LED status indicators:
no signal - >15 consecutive zeros or signal level too low
all ones - >4096 consecutive ones
frame alignment loss
3776A - complies with CCITT Rec. G.732
3776B - 3 out of 7 FT bits in error
multi-frame alignment loss
3776A - complies with CCITT Rec. G.732
3776B - 2 consecutive FS bits in error

FRAMING & SIGNALLING BITS MONITORING

Bit pattern monitoring of
3776A - timeslot 0 in frame 0; timeslot 0 in non-frame 0;
timeslot 16 in frame 0; timeslot 16 signalling bits in all other frames
3776B (FT frame format) - FT bits, FS bits, signalling A&B bits
(FE frame format) - FE bits, CRC bits, signalling ABCD bits

FILTERS

As analog receiver up to channel bandwidth of 3600Hz

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

CLOCK

Clock recovered from PCM input.
Frequency: 3776A - 2048kHz nominal
3776B - 1544kHz nominal
Max number of consecutive zeros: 15

DIGITAL TTL OUTPUT: (rear panel)

Received PCM bit pattern available as a serial output
Format: Low true
Signal levels: TTL, open collector
Receiver timing outputs: framing synchronisation, multi-frame synchronisation; clock; selected data valid
Connector: Cannon 15 way

TIMESLOT TRANSLATION

3776A - contents of TS (n) and TS (16+n) exchanged
3776B - contents of TS (n) and TS (n+1) exchanged for all timeslots, where n is odd

AUXILIARY ANALOG INPUT: (rear panel)

An external level source can be applied for retransmission from the analog or digital transmitter.

Impedance: 600ohm balanced
Connector: binding posts
Additional parameters:

Analog transmitter only
Additional flatness to internal source: +/-0.2dB nominal over 200 to 3600Hz

Digital transmitter only
Aux input dBr (TLP): -14dB (3776A)
-16dB (3776B)

Aux input flatness (nominal):

Frequency (Hz)	Accuracy (dB)
>200 to <300	+0.15, -2
>300 to <3000	+/-0.2
>3000 to <3300	+0.1, -0.4

ANALOG MONITOR OUTPUT (option 001 only: (rear panel)

Analog output of the received analog or digital input after filtering.
Impedance: 600ohm balanced
Connector: binding posts

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SPEAKER

Simple amplified loudspeaker output of analog input or selected timeslot decoded to allow channel monitoring/talk over channel.

HP-IB: (rear panel)

Flags: Remote, Listen, Talk, and Service Request

Implementation: (IEEE 488, 1978)

- SH1 (complete capability)
- AH1 (complete capability)
- T5 (basic talker, serial poll, talk only mode, unaddress if MLA)
- L4 (basic listener, unaddress if MTA)
- SR1 (complete SRQ capability)
- RL1 (complete remote-local capability)
- DC1 (complete device clear capability)

The IEEE 728 codes and formats capabilities are...

PM2 (program messages as Fig 24 and 25(b) in IEEE 728)

- NRD1 (implicit point numeric data)
- NRD2 (fixed point numeric data)
- NRD3 (floating point numeric data)
- CHDF (character data field)
- BDFA (binary block data, length specified, no check)
- BDFI (binary block data, length unspecified, no check)
- BDFH (hexadecimal data)
- , (comma parameter separator)
- ; (semicolon command separator)
- CRLF (CRLF command string terminator)
- NL (NL command string terminator)
- END (EOI command string terminator)

MM1 (measurement messages as Fig 21(a) and 21(b) in IEEE 728)

- NRD1 (implicit point numeric data)
- NRD2 (fixed point numeric data)
- BDFA (binary block data, length specified, no check)
- , (comma data separator)
- CRLF (CRLF data list separator)
- END (EOI data list terminator)

Modes: selectable as

'addressable' - when an external controller is connected

'talk-only' - when no external controller is connected

Print format: (talk-only mode)

dual in line (DIL) switches select result output string to 'listen only' printer or plotter connected:

binary 2 - print output

binary 8 to 31 - plot option of various configurations

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PLOI OPTIONS

Binary Format Number	Scale X Axis	Scale Y Axis	Auto Paper Eject	Plot Title and Axes	Plot CCITT Mask
8				yes	yes
9	yes			yes	yes
10		yes		yes	yes
11	yes	yes		yes	yes
12			yes	yes	yes
13	yes		yes	yes	yes
14		yes	yes	yes	yes
15	yes	yes	yes	yes	yes
16				yes	
17	yes			yes	
18		yes		yes	
19	yes	yes		yes	
20			yes	yes	
21	yes		yes	yes	
22		yes	yes	yes	
23	yes	yes	yes	yes	
24					
25	yes				
26		yes			
27	yes	yes			
28			yes		
29	yes		yes		
30		yes	yes		
31	yes	yes	yes		

Power on SRQ: selectable DIL switch

EOI: sets end or identify (EOI) with serial poll byte in addressable mode only; selectable DIL switch

Connector: Cannon 24 way

5. GENERAL

Supply voltages: 115V ac +10%, -22%
220V ac +10%, -22%

Power consumption: 85W nominal

Dimensions:
55178mm (7in) high
425mm (16.75in) wide
440mm (17.25in) deep

Weight: 15kg (33lb) nominal

Temperature range: operating 0degrees to 55degrees centigrade
storage -40degrees to 75degrees centigrade

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6. OPTIONS

3776A	3776B
Option 001	Option 001
Adds data measurements of:	Adds data measurements of:
group delay distortion	envelope delay distortion
envelope delay distortion	remodulation
absolute delay	absolute delay
phase jitter	phase jitter
transients* of	transients* of
ampliture hits	gain hits
phase hits	phase hits
interruptions	dropouts
3-level impulse noise	3-level impulse noise

*All four parameters in transients are measured simultaneously.

Option 002	Option 002 - Japanese requirement same as standard instrument with the following exceptions:
Replaces front panel BNC connectors with Siemens 75ohm unbalanced coaxial (1.6mm/5.6mm) connectors	a) Psphometric weighting filter in place of C-message b) 810Hz default test frequency instead of 1010Hz c) Front panel connectors replaced with Japanese I-214 type balanced connectors
	Option 004
	Front panel analog & digital interface connectors on std. instrument located on rear panel. Connector: balanced triaxial trompeter type BJ77

OTHER COMMON OPTIONS

Option 801
Front panel cover

Option 907
Front handle kit

Option 908
Rack flange kit

Option 909
Rack flange & front handle combination kit

Option 910
Extra set of operating and service manuals

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

MEASUREMENT SPECIFICATIONS

GENERAL

In a PCM Channel, the apparent gain for tones varies with the phase of the signal at the start of the measurement. The size of the variation depends on the number (n) of independent values present in the sampled wave n = fs/h, where h is the highest common factor of the tone frequency (Hz) and fs = Sampling frequency = 8000 or 16000. This governs the choice of test tones: frequencies such as 800 or 1000Hz have few independent samples and large gain variations, while 810 or 1010Hz have n = 800 give stable results.

The standard test frequencies in this instrument have >400 independent samples, and the specifications for A-D and D-A measurements include a corresponding allowance for gain variation with phase. The specifications for A-A measurements do not include this effect, which is present only on PCM Channels. Its magnitude may be formed from the following table:

Level (dBm0)	Gain Variation with Phase (+/-dB)		
	A-law	u-law CCS	u-law CAS
>-40	0.005	0.005	0.01
>-60	0.015	0.01	0.03
>-75	0.03	0.03	0.05

The A-A measurements affected are shown below:

A-A Measurement	Number of error contributions
Gain Quantising distortion (tone) Level	one
Gain v Frequency Gain v Level (tone) Intermodulation (2-tone)	two

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ERROR CONTRIBUTIONS

Each measurement accuracy is calculated as the total sum of the worst case values of all the individual component specification that make up the measurement. Error contributions due to transmission impairments in the system under test (eg QD in Gain vs Level measurement) are not included. Attempting to measure a tone where the frequency is not tied to the 3776 transmitter will result in an error in the following measurements:

Measurement Affected	Maximum additional error (dB)	
	Frequency	Error
Gain (tone) Gain (digital mW) Gain vs Frequency Intermod (2-tone)	200-400Hz >400Hz	0.04dB +0.01dB/Hz 0.02dB +0.01dB/Hz
Level (selective) Idle State (selective)	200-400Hz >400Hz	0.01dB +0.01dB/Hz 0.01dB/Hz

(For <5Hz offset between actual and selected Rx frequencies).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ANALOG-TO-ANALOG (A-A) MEASUREMENTS

GAIN (TONE)

Accuracy: +/-0 05dB (Tx and Rx levels >-30dBm, 200Hz to 3900Hz)

GAIN v FREQUENCY

Accuracy: +/-0 10dB (Tx and Rx levels >-30dBm, 200Hz to 3900Hz).

GAIN v LEVEL (USING NOISE) - 3776A ONLY

Accuracy (+/-dB):

Tx level (dBm)	Rx level (dBm)		
	>-46	>-66	>-76
>-46	0.15		
>-66	0 18	0.20	
>-76		0.22	0.30

Tx and Rx reference level >-36dBm0

GAIN v LEVEL (USING TONE)

Accuracy (+/-dB):

Tx level (dBm)	Rx level (dBm)		
	>-40	>-60	>-76
>-40	0.12		
>-60	0.12	0.16	
>-70		0.18	
>-76		0.22	0 30

Tx and Rx reference level >-40dBm0

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

NOISE WITH TONE

Transmit signal
Frequency range:
3776A - 810 to 850Hz
3776B - 1010 to 1020Hz

Level accuracy: +/-0.10dB
(for Level >-30dBm)

Accuracy (+/-dB):

S+N/N Ratio (dB)	Accuracy (+/-dB)
<30	0.5
<40	0.6
<45	0.8

Rx noise level >-80dBm

IDLE STATE (WEIGHTED, SELECTIVE OR OTHER FILTERS)

Accuracy (+/-dB):

Filter Type	Rx Level (dBm)	
	>-40	>-80
Psophometric	0.3	0.5
C-message	0.3	0.5
Selective	0.2	0.3
other filters:		
Filter A: 3Hz	0.3	0.5
Filter B: flat	0.3	0.75
Filter C: high pass	0.3	0.75

Rx signal crest factor assumed <12

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LEVEL (WEIGHTED, OTHER FILTERS)

Internal Source
Frequency range: 50 to 4600Hz

Accuracy (+/-dB):

Nominal Signal Level (dBm)	Signal Level Accuracy (+/-dB)	
	50-200Hz	200-4600Hz
>-30	0.20	0.09
>-60	-	0.11
>-76	-	0.13

Auxiliary input
Gain between aux input (50kohms nominal) & analog transmit (600ohm balanced): +/-0.5dB (nominal)

Frequency range: 50 to 4600Hz

Receiver
Accuracy (+/-dB):

Filter type	Rx Level (dBm)	
	>-40	>-80
Psophometric	0.3	0.5
C-Message	0.3	0.5
other filters:		
Filter A: 3kHz	0.3	0.5
Filter B: flat	0.3	0.75
Filter C: high pass	0.3	0.75

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LEVEL (SELECTIVE)

Internal source: same as LEVEL (weighted)
Auxiliary input: same as LEVEL (weighted)

Receiver
Frequency range: 200 to 3900Hz
Accuracy (+/-dB):

a) Transmit (ref) frequency same as receive (measure) frequency

Receive level (dBm)	Receive Accuracy (+/-dB)
>-40	0.10
>-80	0.14

Rx level >-80dBm

b) Transmit (ref) frequency not the same as receive (measure) frequency

Ref/Meas Ratio (dB)	Receive Accuracy (+/-dB)
<40	0.7
<45	1.1

Rx level >-80dBm

QUANTISING DISTORTION (USING NOISE) - 3776A ONLY

Accuracy (+/-dB):

S/N Ratio (dB)	Rx distortion level (dBm)	
	>-72	>-76
<40	0.5	0.9
<45	1.0	1.2

Rx noise level >-66dBm

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

QUANTISING DISTORTION (USING TONE)

Transmit signal
Frequency range:

3776A - 810 to 850Hz
3776B - 1010 to 1020Hz

Accuracy (+/-dB):

S+N/N Ratio (dB)	Accuracy (+/-dB)
<30	0.3
<40	0.5
<45	0.8

Rx noise level >-80dBm

INTERMODULATION (2 TONE)

Frequency range of f_A and f_B: 200 to 3900Hz
Intermodulation product, fp ($2f_A-f_B$) frequency range: 200 to 3900Hz
Tones at $|f_A-f_B|$, $|f_p-f_A|$ and $|f_p-f_B|$ >150Hz

Accuracy (+/-dB):

Tone f_A/Tone fp (dB)	Accuracy (+/-dB)
<30	0.1
<40	0.2
<45	0.5

Rx level (tone A) >-36dBm

INTERMODULATION (4 TONE) - 3776B ONLY

Accuracy (+/-dB):

Measured intermodulation (dB)	Accuracy (+/-dB)
<45	0.5
<55	1.0

Rx stimulating signal >-30dBm

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RETURN LOSS (ERL) - 3776B ONLY

Tx level accuracy: +/-0.25dB
(Tx levels >-30dBm)
Rx accuracy:

Rx signal level (dBm)	Accuracy (+/-dB)
>-40	0.3
>-80	0.5

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ANALOG-TO-DIGITAL (A-D) MEASUREMENTS

GAIN (TONE)

Accuracy (+/-dB):

	Accuracy (+/-dB)
3776A; 3776B (CCS) 3776B (CAS)	0.10 0.11

Tx level >-30dBm; Rx level >-20dBm0
800 independent samples

GAIN v FREQUENCY

Accuracy (+/-dB):

	Accuracy (+/-dB)
3776A; 3776B (CCS) 3776B (CAS)	0.08 0.11

Tx level >-30dBm; Rx level >-20dBm0
800 independent samples

GAIN v LEVEL (USING NOISE) - 3776A ONLY

Accuracy (+/-dB):

Tx level (dBm)	Rx level (dBm0)		
	>-40	>-55	>-60
>-46	0.11	0.12	0.18
>-56	0.12	0.13	0.19
>-66	0.13	0.14	0.20
>-76	0.15	0.16	0.22
>-82	0.18	0.20	0.25

Tx reference level >-30dBm
Rx reference level >-20dBm0

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

GAIN v LEVEL (USING TONE)

Frequency range: 200 to 3900Hz
Accuracy (+/-dB):
3776A and 3776B (CCS) -

Tx level (dBm)	Rx level (dBm0)		
	>-40	>-50	>-60
>-50	0.11	0.13	-
>-60	0.12	0.15	0.30
>-70	0.14	0.17	0.32
>-76	0.18	0.20	0.35

3776B (CAS) -

Tx level (dBm)	Rx level (dBm0)		
	>-40	>-50	>-60
>-50	0.12	0.15	-
>-60	0.14	0.20	0.35
>-70	0.16	0.22	0.37
>-76	0.20	0.25	0.40

Tx reference level >-30dBm; Rx reference level >-20dBm0

NOISE WITH TONE

Accuracy (+/-dB):

S+N/N Ratio (dB)	Accuracy (+/-dB)
<30	0.2
<40	0.4
<45	0.6

Rx noise level >-60dBm0

Transmit Signal
Frequency range:
3776A: 810 to 850Hz
3776B: 1010 to 1020Hz
Level accuracy: +/-0.10dB
(for level >-30dBm)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

IDLE STATE (WEIGHTED, SELECTIVE, OTHER FILTERS)

Accuracy (+/-dB):

Filter type	Rx level (dBm0)	
	>-60	>-75
Psophometric	0.15	0.3
C-message	0.15	0.3
Selective	0.25	0.7
other filters:		
Filter A: 3kHz	0.15	0.7
Filter B: Flat	0.15	0.7

IDLE STATE (PCM CODES)

Transmitter: terminated with characteristic impedance
Receiver: detects average of 800 codes; result expressed as number of compressed code level steps from centre of coding law.

Signal range: bottom two segments of coding law
Resolution: +/-0.5 coded step

LEVEL, (WEIGHTED, OTHER FILTERS)

Internal Source
Frequency range: 50 to 4600Hz
Accuracy (+/-dB):

Nominal Signal Level (dBm)	Signal Level Accuracy (+/-dB)	
	50-200Hz	200-4600Hz
>-30	0.2	0.09
>-60	-	0.11
>-76	-	0.13

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Auxiliary input
Gain between aux input (50kohms nominal) & analog transmit (600ohms balanced): +/-0.5dB
Frequency range: 50 to 4600Hz
Accuracy (+/-dB):

Nominal Signal Level (dBm)	Signal Level Linearity (+/-dB)
>-30	0.25
>-60	0.28
>-76	0.30

Receiver
Accuracy (+/-dB):

Filter type	Rx Level (dBm0)	
	>-60	>-75
Psophometric	0.3	0.5
C-Message	0.3	0.5
other filters:		
Filter A: 3kHz	0.2	0.7
Filter B: flat	0.2	0.7

LEVEL (SELECTIVE)

Transmitter
Internal source same as LEVEL (weighted)
Auxiliary input

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Receiver
Frequency range: 200 to 3900Hz
Accuracy (+/-dB):

a) Transmit (ref) frequency same as receive (measure) frequency

Receive Level (dBm0)	Receive Accuracy (+/-dB)
>-40	0.1
>-60	0.25

b) Transmit (ref) frequency not the same as receive (measure) frequency

Ref/Meas Ratio (dB)	Rx level (dBm0)	
	>-40	>-60
<40	0.12	0.3
<45	0.25	0.4

LEVEL (PCM CODES)

Transmitter
Internal source same as LEVEL (weighted)
Auxiliary input

Receiver
Detection: display the peak positive and peak negative PCM codes in 800 samples. Result expressed in compressed codes.

QUANTISING DISTORTION (USING NOISE) - 3776A ONLY

Accuracy (+/-dB):

S/N Ratio (dB)	Rx distortion level (dBm0) >-60
<40	0.3
<45	0.6

Rx noise level >-60dBm0

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

QUANTISING DISTORTION (USING TONE)

Transmit signal
Frequency range:
3776A - 810 to 850Hz
3776B - 1010 to 1020Hz

Accuracy (+/-dB):

S+N/N Ratio (dB)	Accuracy (+/-dB)
<30	0.2
<40	0.4
<45	0.6

Rx tone level >-60dBm0

INTERMODULATION (2 TONE)

Frequency range of f_A and f_B: 200 to 3900Hz
Intermodulation product fp ($2f_A-f_B$) frequency range: 200 to 3900Hz
Tones at $|f_A-f_B|$, $|f_p-f_A|$ and $|f_p-f_B|$ >150Hz

Accuracy (+/-dB):

Tone f_A/Tone fp (dB)	Accuracy (+/-dB)
<30	0.2
<40	0.3
<45	0.5

Rx level (tone f_A) >-20dBm0
Rx level (tone fp) >-50dBm0

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

INTERMODULATION (4 TONE) - 3776B ONLY

Accuracy (+/-dB):

Measured intermodulation (dB)	Accuracy (+/-dB)
<45	0.5
<55	1.0

Rx Stimulating signal >-20dBm0
Intermod Rx level >-50dBm0

RETURN LOSS (ERL) - 3776B ONLY

Tx level accuracy: +/-0.25dB
(Tx levels >-30dBm)
Rx accuracy: +/-0.3dB
(Rx levels >-60dBm)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

DIGITAL-TO-ANALOG (D-A) MEASUREMENT

GAIN (TONE)

Frequency range: 200 to 3900Hz
Accuracy (+/-dB):

	Accuracy (+/-dB)
3776A; 3776B (CCS) 3776B (CAS)	0.11 0.12

Tx level >-20dBm0; Rx level >-30dBm

GAIN (DIGITAL mW)

Accuracy (+/-dB): 0.10

GAIN v FREQUENCY

Frequency range: 200 to 3900Hz
Accuracy (+/-dB):

	Accuracy (+/-dB)
3776A; 3776B (CCS) 3776B (CAS)	0.10 0.11

Tx level >-20dBm0; Rx level >-30dBm

GAIN v LEVEL (USING NOISE) - 3776A ONLY

Accuracy (+/-dB):

Tx level (dBm0)	Rx level (dBm)		
	>-46	>-66	>-82
>-40	0.10	0.15	-
>-55	0.12	0.16	-
>-60	-	0.16	0.20

Tx reference level >-20dBm0
Rx reference level >-48dBm

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

GAIN v LEVEL (USING TONE)

Frequency range: 200 to 3900Hz
Accuracy (+/-dB):
3776A and 3776B (CCS)

Tx Level (dBm0)	Rx Level (dBm)		
	>-40	>-60	>-76
>-40	0.08	0.12	-
>-55	-	0.15	0.20
>-60	-	0.17	0.22

3776B (CAS)

Tx level (dBm0)	Rx Level (dBm)		
	>-40	>-60	>-76
>-40	0.09	0.13	-
>-55	-	0.17	0.22
>-60	-	0.20	0.25

Tx reference level >-20dBm0; Rx reference level >-40dBm

GAIN v LEVEL (SYNCHRONISED 2kHz)

Tx PCM code levels: ideal
Frequency: 2kHz
Accuracy (+/-dB):

	Rx level (dBm)		
	>-40	>-60	>-76
3776A; 3776B (CCS)	0.05	0.10	0.20
3776B (CAS)	0.05	0.10	0.20

Rx reference level >-20dBm

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

NOISE WITH TONE

Transmit Signal
Frequency range:
3776A - 810 to 850Hz
3776B - 1010 to 1020Hz
Level accuracy: +/-0.01dB
(for levels >-40dBm0)

Accuracy (+/-dB):

S+N/N Ratio (dB)	Accuracy (+/-dB)
<-30	0.5
<-40	0.6
<-45	0.8

Rx noise level >-80dBm

IDLE STATE (WEIGHTED, SELECTIVE, OTHER FILTERS)

Accuracy (+/-dB): same as IDLE STATE (A-A)

LEVEL (WEIGHTED, SELECTIVE, OTHER FILTERS)

Internal Source
Frequency range: 50 to 3900Hz
Accuracy (+/-dB):

Nominal Signal Level (dBm0)	Signal Level Accuracy (+/-dB)
>-40	0.01
>-55	0.03
>-60	0.05

Auxiliary Input
Aux input dBr (TLP):
-14dB (3776A)
-16dB (3776B)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Level accuracy: +/-0.5dB
Aux input flatness (nominal):

Frequency (Hz)	Accuracy (dB)
>200 to <300	+0.15, -2
>300 to <3000	+/-0.2
>3000 to <3300	+0.1, 0.4

Receiver
Accuracy (+/-dB): same as LEVEL (weighted) (A-A)

QUANTISING DISTORTION (USING NOISE) - 3776A ONLY

Accuracy (+/-dB):

S/N Ratio (dB)	Rx distortion level (dBm)	
	>-72	>-76
<-40	0.5	0.9
<-45	0.9	1.2

Rx noise levels >-68dBm

QUANTISING DISTORTION (USING TONE)

Transmit signal
Frequency range:
3776A - 810 to 850Hz
3776B - 1010 to 1020Hz

Accuracy (+/-dB):

S+N/N Ratio (dB)	Accuracy (+/-dB)
<-30	0.5
<-40	0.6
<-45	0.8

Rx noise level >-80dBm

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

INTERMODULATION (2-TONE)

Frequency range of f_A and f_B: 200 to 3900Hz
Intermodulation product, fp ($2f_A - f_B$) frequency range: 200 to 3900Hz
Tones at $|f_A - f_B|$, $|f_p - f_A|$ and $|f_p - f_B|$ >150Hz

Accuracy (+/-dB):

Tone f_A/Tone fp (dB)	Accuracy (+/-dB)
<30	0.1
<40	0.2
<45	0.5

Rx level (tone f_A) >-36dBm

INTERMODULATION (4 TONE) - 3776B ONLY

Accuracy (+/-dB):

Measured intermodulation (dB)	Accuracy (+/-dB)
<45	0.5
<55	1.0

Rx stimulating signal >-36dBm

RETURN LOSS (ERL) - 3776B ONLY

Tx level accuracy: +/-0.01dB
(Tx levels >-20dBm0)
Rx accuracy:

Rx Signal level (dBm)	Accuracy (+/-dB)
>-40	0.3
>-80	0.5

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

DIGITAL-TO-DIGITAL (D-D) MEAUSREMENTS

GAIN (TONE)

Accuracy (+/-dB):

	Accuracy (+/-dB)
3776A; 3776B (CCS) 3776B (CAS)	0.04 0.05

Tx, Rx levels >-20dBm0
800 indpendent samples

GAIN (DIGITAL mW)

Accuracy (+/-dB):

	Accuracy (+/-dB)
3776A; 3776B (CCS) 3776B (CAS)	0.02 0.03

Rx level >-20dBm0

GAIN (DIGITAL Tx-Rx)

Transmit signal: alternates two 8-bit PCM codes at 1kHz rate.
Receiver: displays the positive peak and negative peak PCM codes.
(3776B CAS signalling bits suppressed)

GAIN v FREQUENCY

Accuracy (+/-dB):

	Accuracy (+/-dB)
3776A; 3776B (CCS) 3776B (CAS)	0.05 0.08

Tx, Rx levels >-20dBm0; 800 independent samples.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

GAIN v LEVEL (USING NOISE) - 3776A ONLY

Accuracy (+/-dB):

Tx level (dBm0)	Rx level (dBm0)		
	>-40	>-55	>-60
>-40	0.08	0.10	0.15
>-55	0.10	0.12	0.18
>-60	-	0.12	0.18

GAIN v LEVEL (USING TONE)

Frequency range: 200 to 3900Hz
Accuracy (+/-dB):
3776A and 3776B (CCS)

Tx level (dBm0)	Rx level (dBm0)		
	>-40	>-50	>-60
>-40	0.08	0.10	-
>-50	0.10	0.12	0.25
>-60	-	0.14	0.30

3776B (CAS)

Tx level (dBm0)	Tx level (dBm0)		
	>-40	>-50	>-60
>-40	0.10	0.12	-
>-50	0.14	0.16	0.35
>-60	-	0.18	0.35

Tx, Rx reference levels >-20dBm0

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

GAIN v LEVEL (SYNCHRONIZED 2kHz)

Tx PCM code levels: ideal
Frequency: 2kHz
Accuracy (+/-dB):

	Rx level (dBm0)		
	>-20	>-40	>-60
3776A; 3776B (CCS) 3776B (CAS)	0.05 0.08	0.06 0.08	0.08 0.10

Rx reference level >-20dBm0

NOISE WITH TONE

Transmit signal,
Frequency range:
3776A - 810 to 850Hz
3776B - 1010 to 1020Hz
Level accuracy: +/-0.01dB
(for levels >-40dBm0)

Accuracy (+/-dB):

S+N/N Ratio (dB)	Accuracy (+/-dB)
<-30 <-40 <-45	0.2 0.4 0.6

Rx noise levels >-60dBm0

IDLE STATE (WEIGHTED, SELECTIVE, OTHER FILTERS)

Accuracy (+/-dB): same as IDLE STATE (A-D)

IDLE STATE (PCM CODES)

Transmitter: quiet background
Receiver: detects average of 800 codes; result expressed as number of compressed PCM code level steps from centre of coding law

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Signal range: bottom two segments of coding law
Resolution: +/-0.5 coded step

LEVEL (WEIGHTED, SELECTIVE, OTHER FILTERS)

Internal source
Auxiliary input Tx level accuracy same as LEVEL (D-A)

Receiver accuracy (+/-dB): same as LEVEL (A-D)

LEVEL (PCM CODES)

Detects the peak positive and peak negative PCM codes in 800 samples.
Result expressed in compressed codes.

QUANTISING DISTORTION (USING NOISE) - 3776A ONLY

Accuracy (+/-dB):

S/N Ratio (dB)	Rx distortion level (dBm0) >-60
<-40	0.3
<-45	0.6

Rx noise levels >-60dBm0

QUANTISING DISTORTION (USING TONE)

Transmit signal
Frequency range:
3776A - 810 to 850Hz
3776B - 1010 to 1020Hz

Accuracy (+/-dB):

S+N/N Ratio	Accuracy (+/-dB)
<30	0.2
<40	0.4
<45	0.6

Rx tone level >-60dBm0

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

INTERMODULATION (2 TONE)

Frequency range of f_A and f_B: 200 to 3900Hz
Intermodulation product fp ($2f_A-f_B$) frequency range: 200 to 3900Hz
Tones at $|f_A-f_B|$, $|f_p-f_A|$ and $|f_p-f_B|$ >150Hz

Accuracy (+/-dB):

Tone fA/Tone fp (dB)	Accuracy (+/-dB)
<30	0.2
<40	0.3
<45	0.5

Rx level (tone f_A) >-20dBm0
Rx level (tone fp) >-50dBm0
800 indpendent samples

INTERMODULATION (4-TONE) - 3776B ONLY

Accuracy (+/-dB):

Measured intermodulation (dB)	Accuracy (+/-dB)
<45	0.5
<55	1.0

Rx stimulating signal >-20dBm0
Intermod Rx level >-50dBm0

RETURN LOSS (ERL) - 3776B ONLY

Tx level accuracy: +/-0.01dB
(Tx levels >-20dBm0)
Rx accuracy: +/-0.3dB
(Rx levels >-60dBm0)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ANALOG TRANSMITTER (AN Tx) ONLY

GAIN (TONE)

Frequency range: 200 to 3900Hz
Tx Level accuracy: +/-0.09dB

GAIN v FREQUENCY

Frequency range: 200 to 3900Hz
Tx level accuracy: +/-0.09dB
Tx level flatness: +/-0.04dB
(Tx levels >-30dBm)

GAIN v LEVEL (USING NOISE) - 3776A ONLY

Level accuracy:

Nominal Signal Level (dBm)	Signal Level Accuracy (+/-dB)
>-36	0.09
>-66	0.11
>-82	0.13

Level Linearity:

Nominal Signal Level (dBm)	Signal Level Linearity (+/-dB)
>-46	0.05
>-56	0.06
>-66	0.07
>-76	0.09
>-82	0.12

(Reference levels >-38dBm)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

GAIN v LEVEL (USING TONE)

Frequency Range: 200 to 3900Hz
Level accuracy:

Nominal Signal Level (dBm)	Signal Level Accuracy (+/-dB)
>-30	0.09
>-60	0.11
>-76	0.13

Level linearity:

Nominal Signal Level (dBm)	Signal Level Linearity (+/-dB)
>-40	0.05
>-50	0.06
>-60	0.07
>-70	0.09
>-76	0.12

(Reference levels >-30dBm)

NOISE WITH TONE

Tx frequency range:
3776A - 810 to 850Hz
3776B - 1010 to 1020Hz
Tx level accuracy: +/-0.10dB
(Tx levels >-30dBm)

IDLE STATE

Tx: terminated with characteristic impedance
(ie 600ohms/900ohms, balanced/unbalanced)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LEVEL

Frequency range: 50 to 4600Hz
Internal Source:

Nominal Signal Level (dBm)	Signal Level Accuracy (+/-dB)	
	50 to 200Hz	200 to 4600Hz
>-30	0.2	0.09
>-60	-	0.11
>-76	-	0.13

Auxiliary input:
Auxiliary input to analog Tx gain: +/-0.5dB (nominal)

QUANTISING DISTORTION (USING NOISE) - 3776A ONLY

Nominal Signal Level (dBm)	Signal Level Accuracy (+/-dB)
>-36	0.09
>-66	0.11
>-82	0.13

QUANTISING DISTORTION (USING TONE)

Frequency range:
3776A - 810 to 850Hz
3776B - 1010 to 1020Hz
Tx level accuracy: same as Level (internal source) as above

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

INTERMODULATION (2 TONE)

Tone f_A/Tone f_B level ratio: <0.1dB
Tx level accuracy: +/-0.10dB
Tx spurious level: >65dB down
(Tx levels >-30dBm)

INTERMODULATION (4 TONE) - 3776B ONLY

Tx level accuracy: +/-0.10dB
(Tx levels >-30dBm)

RETURN LOSS (ERL) - 3776B ONLY

Tx level accuracy: +/-0.25dB
(Tx levels >-30dBm)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

DIGITAL TRANSMITTER (DIG Tx) ONLY

GAIN (TONE)

Frequency range: 200 to 3900Hz
Tx level accuracy: +/-0.01dB

GAIN (DIGITAL mW)

Transmits fixed sequence of PCM codes as defined in CCITT Rec G711
Tx send level: ideal

GAIN (DIGITAL Tx-Rx)

Transmits two programmable PCM codes alternating at 1kHz rate
Tx send level: ideal

GAIN v FREQUENCY

Frequency range: 200 to 3900Hz
Tx level accuracy: +/-0.01dB
Tx level flatness: ideal
(Tx levels >-40dBm0)

GAIN v LEVEL (USING NOISE) - 3776A ONLY

Level accuracy:

Nominal Signal Level (dBm0)	Signal Level Accuracy (+/-dB)
>-55	0.01
>-60	0.03

Level Linearity:

Nominal Signal Level (dBm0)	Signal Level Linearity (+/-dB)
>-55	0.02
>-60	0.04

(Reference levels >-40dBm0)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

GAIN v LEVEL (USING TONE)

Frequency range: 200 to 3900Hz
Level Accuracy:

Nominal Signal Level (dBm0)	Signal Level Accuracy (+/-dB)	
	3776A	3776B
>-40	0.01	0.01
>-55	0.01	0.03
>-60	0.03	0.05

Level linearity:

Nominal Signal Level (dBm0)	Signal Level Linearity (+/-dB)	
	3776A	3776B
>-40	0.02	0.02
>-55	0.02	0.04
>-60	0.04	0.06

(Reference levels >-40dBm0)

GAIN v LEVEL (SYNCHRONISED 2kHz)

Transmits sequence of PCM codes at 2kHz rate; level programmable
Tx send level: ideal

NOISE WITH TONE

Tx Frequency range:
3776A - 810 to 850Hz
3776B - 1010 to 1020Hz
Tx level accuracy: +/-0.01dB
(Tx levels >-40dBm0)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

IDLE STATE

Tx code:

3776A - 11010101 [after alternate digit inversion (ADI)]
3776B - alternates 11111111 and 01111111 at 1kHz rate

LEVEL

Frequency range: 200 to 3900Hz
Internal Source:

Nominal Signal Level (dBm0)	Signal Level Accuracy (+/-dB)	
	3776A	3776B
>-40	0.01	0.01
>-55	0.03	0.03
>-60	0.03	0.05

Auxiliary input:
Same as LEVEL (D-A) meausrement

QUANTISING DISTORTION (USING NOISE) - 3776A ONLY

Nominal Signal Level (dBm0)	Signal Level Accuracy (+/-dB)
>-40	0.01
>-60	0.03

QUANTISING DISTORTION (USING TONE)

Tx frequency range:
3776A - 810 to 850Hz
3776B - 1010 to 1020Hz
Tx level accuracy: same as LEVEL (internal source) as above

INTERMODULATION (2 TONE)

Tone f_A/Tone f_B ratio: ideal (0.0dB)
Tx level accuracy: +/-0.01dB
(Tone f_A and tone f_B >-20dBm0)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

INTERMODULATION (4 TONE) - 3776B ONLY

Tx level accuracy: +/-0.01dB
(Tx levels >-20dBm0)

RETURN LOSS (ERL) - 3776B ONLY

Tx level accuracy: +/-0.01dB
(Tx levels >-20dBm0)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ANALOG RECEIVER (AN Rx) ONLY

GAIN (TONE)

Frequency range: 200 to 3900Hz
Accuracy: +/-0.10dB
(Rx level >-30dBm; assume perfect Tx level)

GAIN (DIGITAL mW)

Accuracy: +/-0.10dB
(Rx level >-30dBm; assume perfect Tx level)
As defined in CCITT REC G711

GAIN v FREQUENCY

Frequency range: 200 to 3900Hz
Accuracy: +/-0.08dB
(Rx level >-30dBm; assume perfect Tx level,

GAIN v LEVEL (USING NOISE) - 3776A ONLY

	Rx level (dBm)		
	>-46	>-66	>-82
Accuracy (+/-dB)	0.08	0.12	0.30

(Rx reference level >-28dBm; assume perfect Tx levels)

GAIN v LEVEL (USING TONE)

Frequency range: 200 to 3900Hz

	Rx level (dBm)		
	>-40	>-60	>-76
Accuracy (+/-dB)	0.06	0.10	0.18

(Rx reference level >-20dBm, assume perfect Tx levels)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

GAIN v LEVEL (SYNCHRONISED) 2kHz)

	Rx level (dBm)		
	>-40	>-60	>-76
Accuracy (+/-dB)	0.05	0.1	0.2

(Rx reference level >-20dBm; assume ideal Tx levels)

NOISE WITH TONE

S+N/N Ratio (dB)	Accuracy (+/-dB)
<30	0.5
<40	0.6
<45	0.8

(Rx noise levels >-80dBm)

IDLE STATE (WEIGHTED, SELECTIVE, OTHER FILTERS)

Rx accuracy: same as IDLE STATE (A-A)

LEVEL (WEIGHTED, SELECTIVE, OTHER FILTERS)

Rx accuracy: same as Level (A-A)

QUANTISING DISTORTION (USING NOISE) - 3776A ONLY

Accuracy (+/-dB):

S/N Ratio (dB)	Rx distortion level (dBm)	
	>-72	>-76
<40	0.5	0.9
<45	0.9	1.2

(Rx noise levels >-68dBm)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

QUANTISING DISTORTION (USING TONE)

Accuracy (+/-dB):

S+N/N Ratio (dB)	Accuracy (+/-dB)
<30	0.5
<40	0.6
<45	0.8

(Rx noise levels >-80dBm)

INTERMODULATION (2-TONE)

Tones at $|f_A-f_B|$, $|f_p-f_A|$ and $|f_p-f_B|$ >150Hz
Accuracy (+/-dB):

Tone f_A/Tone fp (dB)	Accuracy (+/-dB)
<30	0.1
<40	0.2
<45	0.5

(Rx level (tone A) <-36dBm)

INTERMODULATION (4 TONE) - 3776B ONLY

Accuracy (+/-dB):

Measured intermodulation (dB)	Accuracy (+/-dB)
<45	0.5
<55	1.0

(Rx stimulating signal >-36dBm)

RETURN LOSS (ERL) - 3776B ONLY

Rx accuracy (+/-dB):

Rx Signal Level (dBm)	Accuracy (+/-dB)
>-40	0.3
>-80	0.5

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

DIGITAL RECEIVER (DIG Rx) ONLY

GAIN (TONE)
GAIN (DIGITAL mW)

	Accuracy (+/-dB)
3776A; 3776B (CCS) 3776B (CAS)	0.03 0.04

(Rx levels >-20dBm0; assume perfect Tx level; 800 independent samples)

GAIN (DIGITAL Tx-Rx)

Receiver: detects peak positive and peak negative PCM codes

GAIN v FREQUENCY

	Accuracy (+/-dB)
3776A; 3776B (CCS) 3776B (CAS)	0.05 0.07

(Rx levels >-20dBm0; assume perfect Tx level; 800 independent samples)

GAIN v LEVEL (USING NOISE) - 3776A ONLY

Accuracy (+/-dB):

Rx level (dBm0)	Accuracy (+/-dB)
>-40 >-55 >-60	0.07 0.08 0.13

(Rx reference level >-20dBm0; assume perfect Tx level)

GAIN v LEVEL (USING TONE)

Accuracy (+/-dB):

Rx Level (dBm0)	3776A	3776B (CCS)	3776B (CAS)
>-40	0.07	0.06	0.08
>-50	0.08	0.08	0.12
>-50	0.25	0.25	0.30

(Rx reference level >-20dBm0; assume perfect Tx level; 800 independent samples)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

GAIN v LEVEL (SYNCHRONISED 2kHz)

Accuracy (+/-dB):

Rx Level (dBm0)	3776A	3776B (CCS)	3776B (CAS)
>-40	0.06	0.05	0.08
>-60	0.08	0.08	0.10

(Rx reference level >-20dBm0; assume ideal Tx level)

NOISE WITH TONE

Accuracy (+/-dB):

S+N/N Ratio (dB)	Accuracy (+/-dB)
<30	0.2
<40	0.4
<45	0.6

(Rx noise levels >-60dBm0)

IDLE STATE (WEIGHTED, SELECTIVE, OTHER FILTERS)

Rx accuracy: same as IDLE STATE (A-D)

IDLE STATE (PCM CODES)

Receiver: detects average of 800 codes; result expressed as number of compressed PCM code level steps from centre of coding law.
Signal range: bottom two segments of coding law
Resolution: +/-0.5 coded step

LEVEL (WEIGHTED, SELECTIVE, OTHER FILTERS)

Rx accuracy: same as LEVEL (A-D)

LEVEL (PCM CODES)

Detects the peak positive and peak negative PCM codes in 800 samples. Result expressed in compressed codes.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

QUANTISING DISTORTION (USING NOISE) - 3776A ONLY

Accuracy (+/-dB):

S/N Ratio (dB)	Rx distortion level (dBm0) >-60
<-40	0.3
<-45	0.6

(Rx noise levels >-60dBm0)

QUANTISING DISTORTION (USING TONE)

Accuracy (+/-dB):

S+N/N Ratio (dB)	Accuracy (+/-dB)
<30	0.2
<40	0.4
<45	0.6

(Rx noise levels >-60dBm0)

INTERMODULATION (2 TONE)

Tones at $|f_A-f_B|$, $|f_p-f_A|$ and $|f_p-f_B|$ >150Hz

Accuracy (+/-dB)

Tone f_A/Tone fp (dB)	Accuracy (+/-dB)
<30	0.2
<40	0.3
<45	0.5

[Rx (tone A) >-20dBm0; Rx (tone fp) >-50dBm0; assume perfect Tx levels; assume Tx spurious <-60dB; 800 independent samples]

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

INTERMODULATION (4 TONE) - 3776B ONLY

Accuracy (+/-dB):

Measured Intermodulation (dB)	Accuracy (+/-dB)
45	0.5
55	1.0

(Rx level >-20dBm0; Intermod Rx level >-50dBm0)

RETURN LOSS (ERL) - 3776B ONLY

Accuracy: +/-0.3dB
(Rx levels >-60dBm0).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

MEASUREMENT SPECIFICATIONS
OPTION 001

The specifications on pages 1-58 to 1-69 apply only to Models 3776A and 3776B fitted with Option 001.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

MEASUREMENT SPECIFICATIONS
OPTION 001

The following specifications apply only to the 3776A/B PCM Terminal Test Set with Option 001 fitted. Option 001 provides measurements of:

3776A	3776B
Group delay distortion	Envelope delay distortion
Envelope delay distortion	Remodulation
Absolute delay	Absolute delay
Phase jitter	Phase jitter
Transients:	Transients:
amplitude hits	gain hits
phase hits	phase hits
interruptions	dropouts
impulse noise (3-level)	impulse noise (3-level)

The following table shows the various operating modes in which the measurements are valid:

Measurements	A-A	A-D	D-A	D-D	An Tx	Dig Tx	An Rx	Dig Rx
Group delay distortion	*	*	*	*	*	*	*	*
Envelope delay distortion	*	*	*	*	-	-	-	-
Remodulation	*	*	-	-	-	-	-	-
Absolute delay	*	*	*	*	-	-	-	-
Phase jitter	*	*	*	*	*	*	*	*
Transients	*	*	*	*	*	*	*	*

An Tx - Analog Transmit only
Dig Tx - Digital Transmit only
An Rx - Analog Receive only
Dig Tx - Digital Receive only

MEASUREMENTS

1. GROUP DELAY - 3776A ONLY

Analog Transmitter
Frequency range: 200 to 3600Hz
Error introduced by Tx: <+/-10us
Tx signal level: >-40dBm
Tx carrier level accuracy: 0.3dB
Note: 40% modulation adds approximately 0.33dB to signal level.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Receiver
Frequency range: 200 to 3600Hz
Measurement range:
relative delay - 0 to +/-10ms
relative amplitude - 0 to +/-10dB
Signal level range (Ref and Meas): >-40dBm

a) Relative delay measurement
measurement error:

Frequency range (Hz)	Rx error (us)
200 to 400	+/-35
400 to 600	+/-15
600 to 3600	+/-10

(< +/-3dB relative attenuation, REF to MEAS;
100ppm, signal freq to Rx freq)

Typical additional error due to relative levels, REF to MEAS:

REF to MEAS (dB)	Error (us)
< +/-6	+10
< +/-10	+20
< -15	+60

Typical error due to gaussian white noise 26dB below carrier: <20us RMS
Typical error due to single tone 150Hz from carrier, +26dB
below carrier: <20us

(NOTE: When the received test signal has passed through a PCM system, the sampling and quantising process of the system under test will cause spreading of results, with deviation of approximately 50 to 60us).

b) Relative amplitude measurement
Rx accuracy: +/-0.2dB nominal

c) Frequency measurement
Accuracy: +/-10Hz nominal

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Digital Transmitter

Frequency range: 200 to 3600Hz
Delay error introduced by Tx: nil
Tx signal level: > -20dBm0
Tx carrier level accuracy: 0.3dB
Note: 40% modulation adds approximately 0.3dB to signal level

Digital Receiver

Frequency range: 200 to 3600Hz
Measurement range:
relative delay - 0 to +/-10ms
relative amplitude - 0 to +/-10dB
Signal level range (Ref and Meas): > -30dBm0

a) Relative delay measurement
Rx error: +/-10us
(< +/-3dB relative attenuation, REF to MEAS;
< 100ppm, signal freq to Rx freq)
Typical additional error due to relative levels:

REF to MEAS (dB)	Error (us)
< +/-6	+/-10
< +/-10	+/-20
< -15	+/-60

Typical additional error for 1% f, signal freq to Rx freq: +/-15us
Typical error due to gaussian white noise 26dB below carrier: < 20us RMS
Typical error due to single tone, 150Hz from carrier, +26dB below carrier: < 20us

(NOTE: When the received test signal has passed through a PCM system, the sampling and quantising process of the system under test will cause spreading of results, with deviation of approximately 50 to 60us).

b) Relative amplitude measurement
Accuracy: +/-0.2dB nominal

c) Frequency measurement
Accuracy: +/-10Hz nominal

2. ABSOLUTE DELAY

Analog Transmitter

Signal: modulated fixed frequency carrier
Carrier frequency range: 300 to 3500Hz

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Modulation index:
3776A - 0.4 +/-0.05
3776B - 0.5 +/-0.05

Modulation frequency:
3776A - 41 2/3 +/-0.1%
3776B - 83 1/3 +/-0.1%

Analog Receiver

Signal range: >-40dBm
Measurement error: <20us
Measurement range:
3776A - 0 to 24ms
3776B - 0 to 12ms

Digital Transmitter

Signal: modulated, fixed frequency carrier
Carrier frequency range: 300 to 3500Hz
Modulation index:
3776A - 0.4 +/-0.05
3776B - 0.5 +/-0.05

Modulation frequency:
3776A - 41 2/3 +/-0.1%
3776B - 83 1/3 +/-0.1%

Digital Receiver

Signal level: >-20dBm0
Measurement error: <20us
Measurement range:
3776A - 0 to 24ms
3776B - 0 to 12ms

(NOTE: When the received test signal has passed through a PCM system, the sampling & quantising process of the system under test will cause spreading of the results, deviating by a few micro-seconds.)

3. ENVELOPE DELAY

Analog Transmitter

Frequency range: 300 to 3500Hz
Error introduced by Tx: <+/-10us
Tx Signal level: >-40dBm
Tx flatness: <+/-0.2dB

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Receiver

Frequency range: 300 to 3500Hz
Measurement range:
relative delay 3776A - +/-12ms
3776B - -3 to +9ms
Signal level range: >-40dBm

a) Relative delay measurement
Measurement error:

Frequency (Hz)	Error (us)
> 300	< +/-20
> 500	< +/-15

(S/N Ratio > 35dB)
Typical additional error (S/N Ratio of 24dB): < +/-10us

(NOTE: When the received test signal has passed through a PCM system, the sampling & quantising process of the system under test will cause spreading of the results, deviating by a few micro-seconds.)

b) Relative amplitude measurement
Rx accuracy: +/-0.2dB nominal

c) Frequency measurement
Accuracy: +/-10Hz nominal

Digital Transmitter

Frequency range: 300 to 3500Hz
Delay error introduced by Tx: nil
Tx signal level: > -20dBm0
Tx flatness: ideal

Digital Receiver

Frequency range: 300 to 3500Hz
Measurement range:
relative delay 3776A - +/-12ms
3776B - -3 +9ms
Signal level range: >-20dBm0

a) Relative delay measurement
Measurement error (S/N ratio > 35dB): +/-5us
Typical additional error (S/N ratio of 24dB): +/-10us

(NOTE: When the received test signal has passed through a PCM system, the sampling & quantising process of the system under test will cause

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

spreading of the results, deviating by a few micro-seconds.)

b) Relative amplitude measurement
Rx accuracy: +/-20dB nominal

c) Frequency measurement
Accuracy: +/-10Hz nominal

4. RE-MODULATION - 3776B ONLY

Analog Transmitter

Frequency range: 300 to 3500Hz
Error introduced by Tx: <+/-10us
Tx signal level: >-40dBm
Tx flatness: <+/-0.2dB

Analog Receiver

Received frequency measurement accuracy: +/-10Hz
Rx Signal level: >-40dBm
Envelope delay introduced by receiver:
300 to 500Hz - <+/-50us
500 to 3500Hz - <+/-15us

Digital Receiver

Received frequency measurement accuracy: +/-10Hz
Rx signal level: >-40dBm
Envelope delay introduced by receiver: nil

5. PHASE JITTER

Analog Transmitter

Frequency range: 1010 to 1020Hz
Level accuracy: +/-0.10dB
(for levels >-30dBm)

Analog Receiver

Frequency range: 990 to 1030Hz
Carrier level: >-40dBm
Measurement range: 30 degrees p-p
Measurement accuracy: +/-5% +/-0.2 degrees
Spread of readings: <0.7 degrees
Selectable filters
Filter A - 20 to 300Hz
Filter B - 4 to 300Hz
Detection: true peak-to-peak

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Settling time: (within 0.7° of final reading)
Filter A - <4 seconds
Filter B - <25 seconds

Typical white noise rejection at S/N ratio 30dB: <4 degrees p-p jitter

Modulation measurement weighting characteristics (two tone method):

f using filter A (Hz)	2	5	10	-	-	12	20-240	300	500	700
f using filter B (Hz)	0.4	1	2	4	6	-	8-240	300	500	700
Reading (degree p-p)	<1	<3	<8	9.2 to 12.2	10.2 to 12.2	<10	10.8 to 12.2	10 to 12.2	<3	<1

Amplitude modulation to phase modulation conversion:
3776A - < 0.2 degrees over 20 to 300Hz
3776B - < 1 degree p-p over 2 to 900Hz

Averaging time:

Gate frequency	5Hz	1Hz
Display variation	<10%	>40%

Digital Transmitter

Frequency range: 1010 to 1020Hz
Level accuracy: +/-0.01dB
(for levels >-30dBm0)

Digital Receiver

Frequency range: 900 to 1030Hz
Carrier level: >-40dBm0
Measurement range: 30 degrees p-p
Measurement accuracy: +/-5% +/-0.02 degrees
Spread of readings: <0.7 degrees
Selectable filters:
Filter A - 20 to 300Hz
Filter B - 4 to 300Hz
Detection: true peak-to-peak
Settling time:
Filter A - < 4 seconds
Filter B - < 25 seconds

Typical white noise rejection at S/N ratio 30dB: <4 degrees p-p jitter

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Modulation measurement weighting characteristics (two tone method):

f using filter A (Hz)	2	5	10	-	-	12	20-240	300	500	700
f using filter B (Hz)	0.4	1	2	4	6	-	8-240	300	500	700
Reading (degree p-p)	<1	<3	<8	9.2 to 12.2	10.2 to 12.2	<10	10.8 to 12.2	10 to 12.2	<3	<1

Amplitude modulation to phase modulation conversion:
3776A - < 0.2 degrees over 20 to 300Hz
3776B - < 1 degree p-p over 2 to 900Hz

Averaging time:

Gate frequency (Hz)	5	1
Display variation (%)	<10	>40

6. TRANSIENTS

Analog Transmitter

Frequency range: 1010 to 1020Hz
Level accuracy: +/-0.10dB
(for levels >-30dBm)

Analog Receiver

Simultaneous measurements of:
gain hits
phase hits
interruptions (3776A)
dropouts (3776B)
impulse noise (3-levels)

GENERAL
Measurement time: programmable between 1min and 9hr 59min in 1min steps; or continuous
Count capacity: up to 9998 counts for each measurement; 9999 indicates overflow
Carrier Rx frequency range: 995 to 1025Hz

a) GAIN HITS
Carrier level: >-40dBm
Thresholds: selectable 2, 3, 4 or 6dB
Accuracy: +/-0.5dB
Qualification period: 3.5 to 4.5ms

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Loop recovery: with a 4dB change in carrier level in time T
- to register 2dB hit: T <200ms
- not to register 2dB hit: T>600ms

Count rate:
slow count - nominal 8 counts/s
fast count (3776B only) - nominal 100 counts/s

Phase to amplitude conversion: nominal 180 degrees phase change in <0.2ms does not count on 2dB threshold

Dead time:
slow - 125ms +/-10% nominal
fast (3776B) - 10ms +/-20% nominal

b) PHASE HITS

Carrier level: >-40dBm

Threshold accuracy on slow count: +/-10% of threshold +/-0.5 degrees

Range: 5 degrees to 40 degrees in 5 degrees steps

Qualification period: 3.5 to 4.5ms

Loop recovery: with a linear phase variation of carrier over 100° in either direction in time T
- for 20° hit to be registered: T <20ms
- for 20° hit not to register: T >50ms

Count rate:
slow - nominal 8 counts/s
fast (3776B) - nominal 100 counts/s

Amplitude to phase modulation conversion: 10dB gain hit in < 0.2ms does not record 10 degrees phase hit.

Dead time:
slow - 125ms +/-10% nominal
fast (3776B) - 10ms +/-20% nominal

c) INTERRUPTIONS (3776A)

Carrier level: >-30dBm at start of measurement

Threshold/ref carrier level at start: -10dB +/-1dB

Qualification period: 2.5 to 4.0ms

Dead time:
slow - 125ms +/-25ms nominal
fast - 3ms +/- 1ms nominal

Lockout: an interruption blocks counting of other transients for duration of interruptions plus 1s +/-10% nominal.

d) DROPOUTS (3776B)

Carrier level: >-28dBm at start of measurement

Threshold/ref carrier level at start of measurement: -12dB +/-1dB

Qualification period: 3.5 to 4.5ms

Count rate:
slow - nominal 1 counts/s
fast - nominal 100 counts/s

Interlock: (a dropout blocks counting of other transients)
slow - duration of dropout plus 1s +/-10%
fast - duration of dropout plus 6ms nominal

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

e) IMPULSE NOISE
Thresholds: three thresholds; programmable in 1dB steps
Threshold spacing:
3776A - +3dB
3776B - +4dB
Threshold range: (lowest threshold)
3776A - -6 to -40dBm
3776B - -8 to -40dBm
Threshold accuracy (for thresholds >-25dBm): +/-1dB
Carrier rejection: >55dB
Filters:
3776A - Selectable as
Filter A: 200Hz high pass, with 1kHz notch
Filter B: 600 to 3000Hz, with 1kHz notch
Filter C: 300 to 500Hz, with 1kHz notch
3776B - notched C-message
Count rate:
slow - nominal 8 counts/s
fast - nominal 100 counts/s
Dead time:
slow - 125ms +/-10% nominal
fast - 10ms +/-10% nominal

Digital Transmitter

Frequency range: 1010 to 1020Hz
Level accuracy: +/-0.01dB
(for levels > -30dBm0)

Digital Receiver

Simultaneous measurements of:
gain hits
phase hits
interruptions (3776A)
dropouts (3776B)
impulse noise (3-levels)
Measurement time: programmable between 1 min and 9hr 59min in 1min /steps; or continuous
Count capacity: up to 9998 counts for each measurement; 9999 indicates over flow
Carrier Rx frequency range: 995 to 1025Hz

a) GAIN HITS
Carrier level: >-30dBm0
Thresholds: selectable 2, 3, 4 or 6dB
Accuracy: +/-0.5dB
Qualification period: 3.5 to 4.5ms
Loop recovery: with a 4dB change in carrier level in time T
- to register 2dB hit: T <200ms
- not to register 2dB hit: T >600ms

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Count rate:
slow - nominal 8 counts/s
fast (3776B) - nominal 100 counts/s
Phase to amplitude conversion: nominal 180 degrees phase change in <0.2ms does no count on 2dB threshold
Dead time:
slow - 125ms +/-10% nominal
fast (3776B) - 10ms +/-20% nominal

b) PHASE HITS
Carrier level: >-30dBm0
Threshold accuracy on slow count: +/-10% of threshold +/-0.5 degrees
Range: 5 degrees to 40 degrees in 5 degrees steps
Qualification period: 3.5 to 4.5ms
Loop recovery: with a linear phase variation of carrier level over 100° in either direction in time T
- for 20° hit to be registered: T <20ms
- for 20° hit not to register: T >50ms
Count rate:
slow - nominal 8 counts/s
fast (3776B) - nominal 100 counts/s
Amplitude to phase modulation conversion:
10dB gain hit in < 0.2ms does not record 10 degrees phase hit
Dead time:
slow - 125ms +/-10% nominal
fast (3776B) - 10ms +/-20% nominal

c) INTERRUPTIONS (3776A)
Carrier level: >-30dBm0
Threshold/ref carrier level at start of measurement: -10dB +/-1dB
Qualification period: 2.5 to 3.5ms
Dead time:
slow - 125ms +/-25ms nominal
fast - 3ms +/-1ms nominal
Lockout: an interruption blocks counting of other transients for duration of interruption plus 1s +/-10% nominally

d) DROPOUTS (3776B)
Carrier level: >-18dBm0 at start of measurement
Threshold/ref carrier level at start of measurement: -12dB +/-1dB
Qualification period: 3.5 to 4.5ms
Count rate:
slow - nominal 1 counts/s
fast - nominal 100 counts/s
Interlock: (a dropout blocks counting of other transients)
slow - duration of dropout plus 1s +/-10% nominal
fast - duration of dropout plus 6ms nominal

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

e) IMPULSE NOISE

Thresholds: three thresholds; programmable in 1dB steps

Threshold spacing:

3776A - +3dB

3776B - +4dB

Threshold range: (lowest threshold)

3776A - -9 to -40dBm0

3776B - -11 to -40dBm0

Threshold accuracy (for thresholds >-25dBm): +/-1dB

Carrier rejection: >55dB

Filters:

3776A - selectable as

Filter A: 200Hz high pass, with 1kHz notch

Filter B: 600 to 3000Hz, with 1kHz notch

Filter C: 300 to 500Hz, with 1kHz notch

3776B - notched C-message

Count rate:

slow - nominal 8 counts/s

fast - nominal 100 counts/s

Dead time:

slow - 125ms +/-10% nominal

fast - 10ms +/-10% nominal

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION II
INSTALLATION

2-1 INTRODUCTION

2-2 This section provides installation instructions for the Hewlett-Packard Models 3776A and 3776B PCM Terminal Test Sets and their accessories. This section also includes information about initial inspection and damage claims, preparation for use, packaging, storage and shipment.

2-3 INITIAL INSPECTION

WARNING
TO AVOID HAZARDOUS ELECTRICAL SHOCK, DO NOT PERFORM ELECTRICAL TESTS WHEN THERE ARE SIGNS OF SHIPPING DAMAGE TO ANY PORTION OF THE OUTER ENCLOSURE (COVERS, PANELS, METERS).

2-4 Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked for completeness and the instrument has been checked mechanically and electrically. The contents of the shipment should be as shown in Figure 1-1; procedures for checking electrical performance are given in Section IV. If the contents are incomplete, if there is mechanical damage or defect or if the instrument does not pass the Performance Tests, notify the nearest Hewlett-Packard office. If the shipping container is damaged or the cushioning material shows signs of stress, notify the carrier as well as the Hewlett-Packard office. Keep the shipping materials for the carriers inspection. The HP office will arrange for repair or replacement at HP option without waiting for claim settlement.

2-5 PREPARATION FOR USE

WARNING
TO AVOID THE POSSIBILITY OF INJURY OR DEATH, THE FOLLOWING PRECAUTIONS MUST BE FOLLOWED BEFORE THE INSTRUMENT IS SWITCHED ON.

(A) NOTE THAT THE PROTECTION PROVIDED BY GROUNDING THE INSTRUMENT CABINET MAY BE LOST IF ANY POWER CABLE OTHER THAN THE THREE-PRONGED TYPE SUPPLIED IS USED TO COUPLE THE AC LINE VOLTAGE TO THE INSTRUMENT.

(B) IF THIS INSTRUMENT IS TO BE ENERGIZED VIA AN AUTO-TRANSFORMER TO REDUCE OR INCREASE THE LINE VOLTAGE, MAKE SURE THAT THE COMMON TERMINAL IS CONNECTED TO THE NEUTRAL POLE OF THE POWER SOURCE.

(C) THE POWER CABLE PLUG SHALL ONLY BE INSERTED INTO A SOCKET OUTLET PROVIDED WITH A PROTECTIVE EARTH CONTACT. THE PROTECTIVE ACTION MUST NOT BE NEGATED BY THE USE OF AN EXTENSION CORD WITHOUT A PROTECTIVE CONDUCTOR (GROUNDING).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2-6 Power Requirements

2-7 The instrument requires a power source of 115V or 240V ac, +10% -22%, 48 to 66Hz single phase. The maximum power consumption is 100VA. Refer to Para 2-49 for details of the internal battery associated with Assembly A14 (Memory).

2-8 Line Voltage Selection and Fuse

2-9 The line voltage is selected by the rear panel switch labelled 115V and 230V.

CAUTION

Before connecting the instrument to a power outlet ensure that the line voltage selector is correctly set, and that a fuse of the correct rating is fitted.

2-10 Fuse ratings are given in Table 2-1.

Table 2-1 Fuses

Nominal Line	Fuse Rating	HP Part Number
115V	3AT	2110-0381
230V	2AT	2110-0303

2-11 Power Cable

2-12 This instrument is equipped with a three-wire power cable. When connected to a power outlet, this cable grounds the instrument case. The type of power cable shipped with each instrument depends on the country of destination. Refer to Figure 2-1 for part numbers of the power cable and plug configurations available. The number shown below each plug is the Hewlett-Packard part number of a power cord equipped with that plug. If the appropriate power cord is not included with the instrument, notify the nearest Hewlett-Packard Sales and Service Office and a replacement will be provided.

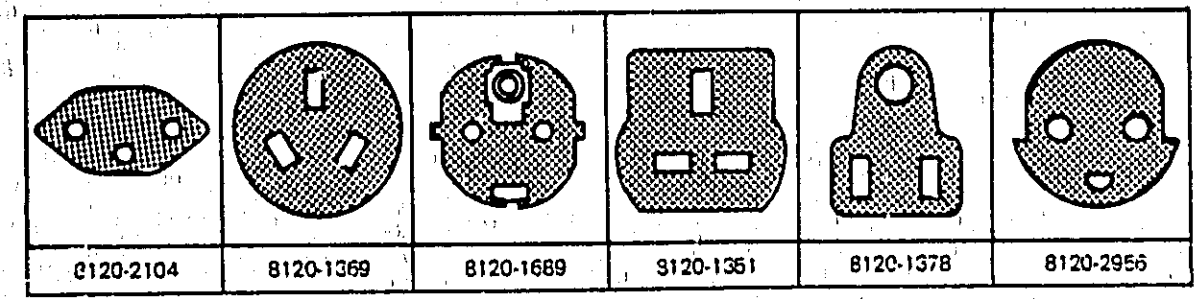


Figure 2-1 Power Receptacles

2-13 The colour code used in each power cable is given below:

Line: Brown
Neutral: Blue
Ground: Green/Yellow

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2-14 Operating Environment

2-15 Temperature - The instrument may be operated in temperatures from 0 degrees centigrade to +55 degrees centigrade.

2-16 Humidity - The instrument may be operated in environments with humidity up to 95%. However, the instrument should also be protected from temperature extremes which may cause condensation within the instrument.

2-17 Altitude - The instrument may be operated at altitudes up to 4600m (15,000ft).

2-18 Air flow - The air intake to the instrument is via a fan mounted on the rear panel. The air exhaust is via the perforated side panels. To provide adequate cooling, an air gap of approximately 3 inch should be maintained around the instrument.

2-19 MATING CONNECTORS

2-20 The connectors listed in Tables 2-2 and 2-3 mate with the 3776 PCM Terminal Test Set. Details of HP-IB cables are given in Table 2-4 and details of the mains power cables are given in 2-1. Figure 2-2 identifies the front panel connectors.

Table 2-2 Rear Panel Connectors

Reference	Function	HP Part Number	Mating Connector
J1 – J4	SEE NOTE BELOW		
J9	DIG Tx CLOCK	1250-1253	Standard: 50Ω BNC to suit cable diameter. e.g.: Body: 1250-0052 Contact: 1250-0298 Bush/Clamp: 1250-0050
A23J2	HP-IB Connector	1251-4040	1251-0293
A23J3	DIG Rx DATA OUTPUT	1251-5503	1251-0219

Note: J1 – J4 fitted on rear panel on 3776B Option 004 only.
For details and connector configuration refer to Table 2-3 and Figure 2-2 on following page.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 2-3 Front Panel Connectors

Function		Ref	3776A/B/ Option		Connector Type	HP Part Number	Mating Conn. Part No.
DIGITAL	Rx	J1*	A	STD, 001, 002	Siemens	1251-5586	5060-4444
			B	STD, 001	WECO 310	1251-3059	1251-3060
				002	1240	1251-8589	Ord. Banana
				004	Trompeter	1250-1639	1250-1413
		J5*	A	STD, 001	BNC (75Ω)	1250-0610	1250-1448
				002	Siemens	1250-1077	1250-1078
			B	STD, 001	Bantam	1251-3677	1251-0695
	Tx	J4*	A	STD, 001, 002	Siemens	1251-5586	5060-4444
			B	STD, 001	WECO 310	1251-3059	1251-3060
				002	1240	1251-8589	Ord. Banana
				004	Trompeter	1250-1639	1250-1413
		J6	A	STD, 001	BNC (75Ω)	1250-0610	1250-1448
				002	Siemens	1250-1077	1250-1078
			B	STD, 001	Bantam	1251-3677	1251-0695
ANALOG	Rx	J2*	A	STD, 001, 002	Siemens	1251-5586	5060-4444
			B	STD, 001	WECO 310	1251-3059	1251-3060
				002	1240	1251-8589	Ord. Banana
				004	Trompeter	1250-1639	1250-1413
		J8	B	STD, 001	Bantam	1251-3677	1251-0695
	Tx	J3*	A	STD, 001, 002	Siemens	1251-5586	5060-4444
			B	STD, 001	WECO 310	1251-3059	1251-3060
				002	1240	1251-8589	Ord. Banana
				004	Trompeter	1250-1639	1250-1413
		J7	B	STD, 001	Bantam	1251-3677	1251-0695

* Located on rear panel on 3776B Option 004. Two sets of cables are available (see para 1-26 on Page 1-4).

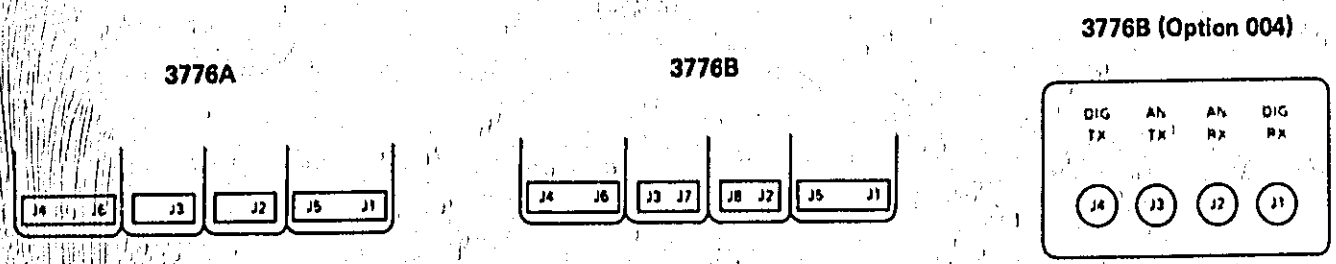



Figure 2-2 Connector Configuration

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2-21 RACK MOUNTING

2-22 Illustrated in Figure 2-3 are the three Rack Mount Kits available with the 3776. See Paragraph 2-18 regarding the cooling of rack mounted instruments.

7H FRONT HANDLE KIT
(PRODUCT HT 177.0mm 6.969 in)
HP PART NUMBER 5061-0090 (OPTION 907)

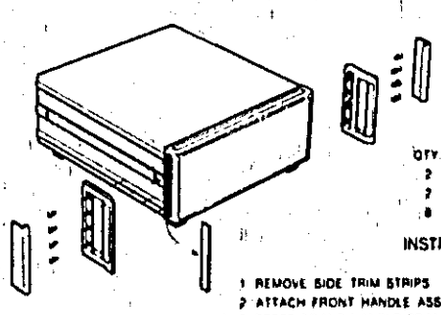


QTY	CONTENTS	PART NO
2	FRONT HANDLE ASS'Y	5060-9900
2	FRONT HANDLE TRIM	5020-8897
8	#8-32 x 3/8 SCREW	2510-0195

INSTRUCTIONS

1 REMOVE SIDE TRIM STRIPS
2 ATTACH FRONT HANDLE ASS'Y WITH 4 SCREWS PER SIDE.
3 PRESS FRONT HANDLE TRIM IN PLACE.

7H RACK MOUNT KIT WITH FRONT HANDLES
(PRODUCT HT 177.0mm 6.969 in)
HP PART NUMBER 5061-0084 (OPTION 908)

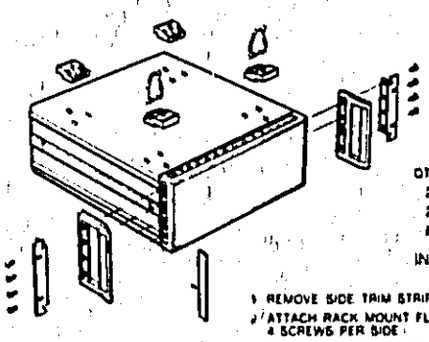


QTY	CONTENTS	PART NO
2	RACK MOUNT FLANGE	5060-8875
2	FRONT HANDLE ASS'Y	5060-9900
8	#8-32 x 3/8 SCREW	2510-0194

INSTRUCTIONS

1 REMOVE SIDE TRIM STRIPS
2 ATTACH RACK MOUNT FLANGE AND FRONT HANDLE ASS'Y WITH 4 SCREWS PER SIDE
3 REMOVE FEET AND TILT STANDS BEFORE RACK MOUNTING

7H RACK MOUNT KIT WITHOUT FRONT HANDLES
(PRODUCT HT 177.0mm 6.969 in)
HP PART NUMBER 5061-0078 (OPTION 908)

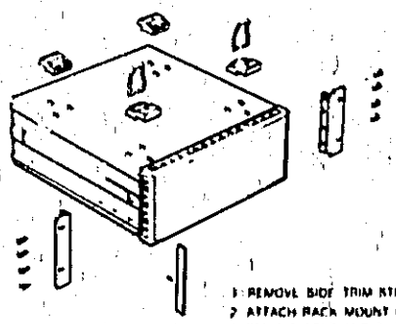

QTY	CONTENTS	PART NO
2	RACK MOUNT FLANGE	5020-8863
8	#8-32 x 3/8 SCREW	2510-0193

INSTRUCTIONS

1 REMOVE SIDE TRIM STRIPS
2 ATTACH RACK MOUNT FLANGE WITH 4 SCREWS PER SIDE
3 REMOVE FEET AND TILT STANDS BEFORE RACK MOUNTING

Figure 2-3 Rack Mount Kits

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2-23 HEWLETT-PACKARD INTERFACE (HP-IB) BUS INSTALLATION

2-24 This section contains information and instructions on the installation of the 3776A and 3776B PCM Terminal Test Set into a Hewlett-Packard Interface Bus (HP-IB) system.

2-25 The HP-IB is Hewlett-Packard's implementation of the IEEE Standard 488-1978 (Digital Interface for Programmable Instrumentation). This standard defines a physical interface and protocol which enables the remote control of instrumentation systems.

2-26 Connection to the HP-IB

Logic Levels

The HP-IB logic levels are TTL compatible ie the true (1) state is 0V dc to 0.5V dc and the false (0) state is +2.5V to 5V dc.

Mating Connector

HP 1251-0293;
Amphenol 57-302040

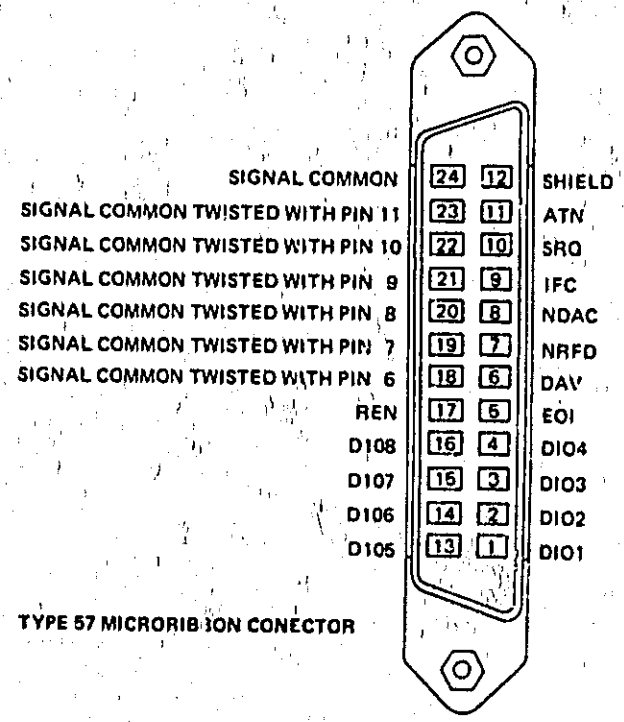


Figure 2-4 HP-IB (rear panel) Connector

2-27 The HP-IB connector on the rear panel of the 3776 provides the physical interface to connect the 3776 into an HP-IB system. Figure 2-4 illustrates the connector pin configuration. Devices in the HP-IB system may be interconnected in any suitable arrangement (star, delta, etc) using the HP-IB cables listed in Table 2-4 provided the restrictions given in Paragraph 2-28 are obeyed.

Table 2-4 HP-IB Interface Cables

HP-IB Part Numbers	Cable Lengths
HP10833A	1m (3.3ft)
HP10833B	2m (6.6ft)
HP10833C	4m (13.2ft)
HP10833D	0.5m (1.6ft)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2-28 To achieve design performance, restrictions are placed on the length of HP-IB system cable as follows:

1 The total length of HP-IB cable used to interconnect devices on the HP-IB must not exceed 2 metres (6 feet) times the number of devices in the system.

2 The total length of HP-IB cable used to interconnect all devices must not exceed 20 metres (65 feet).

2-29 3776 CONFIGURATION

2-30 The 3776 may be configured either in the TALK only mode in an HP-IB system containing a printer/plotter or as a device (addressable) under the remote control of a separate system controller (normally a computer or computing controller).

2-31 3776 in TALK ONLY Mode

2-32 In the talk only mode, an output suitable for a printer or plotter is provided at the rear panel HP-IB connector.

2-33 When the rear panel HP-IB ADDRESSABLE/TALK ONLY switch is set to TALK ONLY, the required output format is selected with the HP-IB ADDRESS/PRINT FORMAT switches (A23S1).

2-34 The output formats available are illustrated in Table 2-5.

2-35 Suitable 80 column printers are: Hewlett Packard HP 2631B, HP 2671A/G and HP 2673A.

2-36 Suitable HP GL plotters are the Hewlett Packard HP 7470A or for programmable paper advance, HP 9872C/D.

2-37 3776 Configured as an Addressable Device

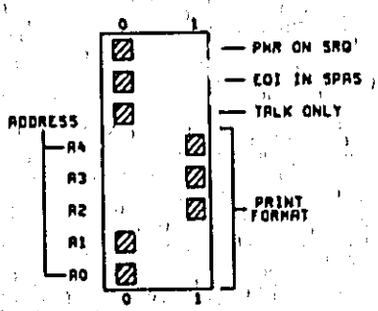
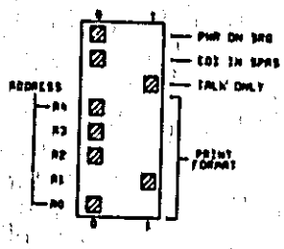
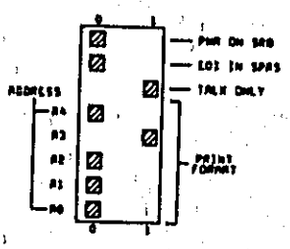


Figure 2-5 HB-IB Switches – 3776 as an Addressable Device

2-38 The setting of the TALK ONLY switch (see Figure 2-5) on the 3776 rear panel to the OFF (0) position configures the 3776 as an HP-IB addressable device under the remote control of a separate HP-IB controller. Each device in the HP-IB system requires a unique address to enable the system controller to differentiate between the devices. The address switches A0 to A4 shown in Figure A2-5 define the 3776 address (addresses range from 0 to 31).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 2-5 HP-IB Output Format

Binary value of PRINT FORMAT switches (A0 to A4)	Output format	Typical HP-IB ADDRESS/PRINT FORMAT Switch Setting
0 1	ASCII BINARY	
2	The 80 column printer output format comprises a header which includes the measurement code, operating mode and measurement parameters; and the measurement results output.	 Setting for 80 column printer output
8 to 31	Plotter outputs HP-GL* A3 or A4 must = 1 A3 and A4=1 not title axes A4=1 no CCITT mask A2=1 auto paper advance A1=1 Y axis scaled A0=1 X axis scaled	 Setting for HP-GL* plotter output, with title and axes with CCIT mask without programmable paper advance with fixed X and Y axes

*HP-GL Hewlett-Packard Graphics Language

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2-39 DIG Rx DATA OUTPUT (rear panel) Connector

2-40 PCM bit patterns applied to the 3776 front panel DIG Rx input may be applied to other measuring equipment through a suitable TTL interface via the 3776 rear panel DIG Rx DATA OUTPUT. Figure 2-6 illustrates the pin connections of the DIG Rx DATA OUTPUT. N DATA is the serial TTL data and is formatted low true.

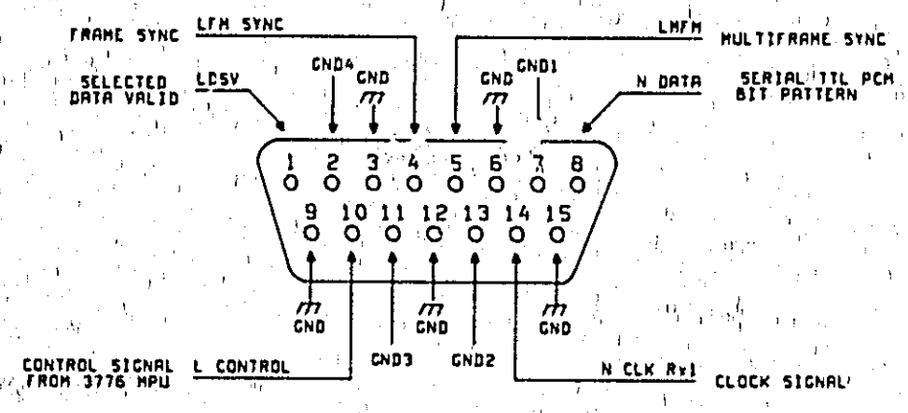


Figure 2-6 DIG Rx DATA OUTPUT Connector

2-41 STORAGE AND SHIPMENT

2-42 Environment

2-43 The instrument may be stored or shipped in environments within the following limits:

Temperature	-40 degrees centigrade to +75 degrees centigrade
Humidity	90%
Altitude	15,300m (50,000ft)

2-44 The instrument should also be protected from temperature extremes which may cause condensation within the instrument.

2-45 Packaging

2-46 Tagging for Service - If the instrument is being returned to Hewlett-Packard for service, please complete one of the blue repair tags located at the front of this manual and attach it to the instrument.

2-47 Original Packaging - Containers and material identical to those used in the factory packaging are available through Hewlett-Packard offices. If the instrument is being returned to Hewlett-Packard for servicing, attach a tag indicating the type of service required, return address, model number, and full serial number. Also mark the container "FRAGILE" to ensure careful handling. In any correspondence, refer to the instrument by model number and full serial number.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2-48 Other Packaging - The following general instructions should be used for re-packing with commercially available materials:

(a) Wrap instrument in heavy paper or plastic. (If shipping to Hewlett-Packard office or service centre, attach a tag indicating type of service required, return address, model number and full serial number.)

(b) Use strong shipping container. A double-walled carton of 350-pound test material is adequate.

(c) Use a layer of shock absorbing material 70 to 100mm (3 to 4 inch) thick around all sides of the instrument to provide firm cushioning and prevent movement inside the container. Protect the control panel with cardboard.

(d) Seal shipping container securely.

(e) Mark the shipping container "FRAGILE" to ensure careful handling.

(f) In any correspondence, refer to instrument by model number and full serial number.

2-49 INTERNAL BATTERY

WARNING
DO NOT INCINERATE OR MUTILATE THE BATTERY. IT MIGHT BURST OR RELEASE TOXIC MATERIALS CAUSING PERSONAL INJURY.

2-50 The lithium battery on A14 (used as a power supply to the non-volatile memory) should be checked annually. Life expectancy of the battery is approximately 5 years.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION III
GETTING STARTED

3-1 INTRODUCTION

3-2 This section provides a few exercises which are designed to give you a basic familiarity with the front panel controls. The main operations featured are:

- Setting transmit and receive dBr levels
- Running a single point measurement
- Storing and recalling measurement parameters
- Displaying the points of a multi-point measurement
- Changing parameters in a multi-point measurement
- Inserting and deleting measurement points
- Using the CONTROL keys
- Setting up background and foreground PCM
- Setting up channels
- Transmitting and receiving background and foreground PCM

3-3 At the end of the section there are some notes on features not covered in these exercises but which may be usefully used as part of a familiarisation exercise.

3-4 BEFORE GETTING STARTED

3-5 Check that the VOLTAGE SELECTOR on the rear panel is set to the correct position for the supply being used.

Check that the DIG CLOCK INT/EXT switch is set to INT.


Check that the other rear panel switches are set as follows:

PCM FORMAT	30 CCS HDB3
TALK ONLY/ADDRESSABLE . . .	ADDRESSABLE

Connect the DIGITAL TRANSMIT output to the DIGITAL RECEIVE input.

Connect the ANALOG TRANSMIT output to the ANALOG RECEIVE input.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

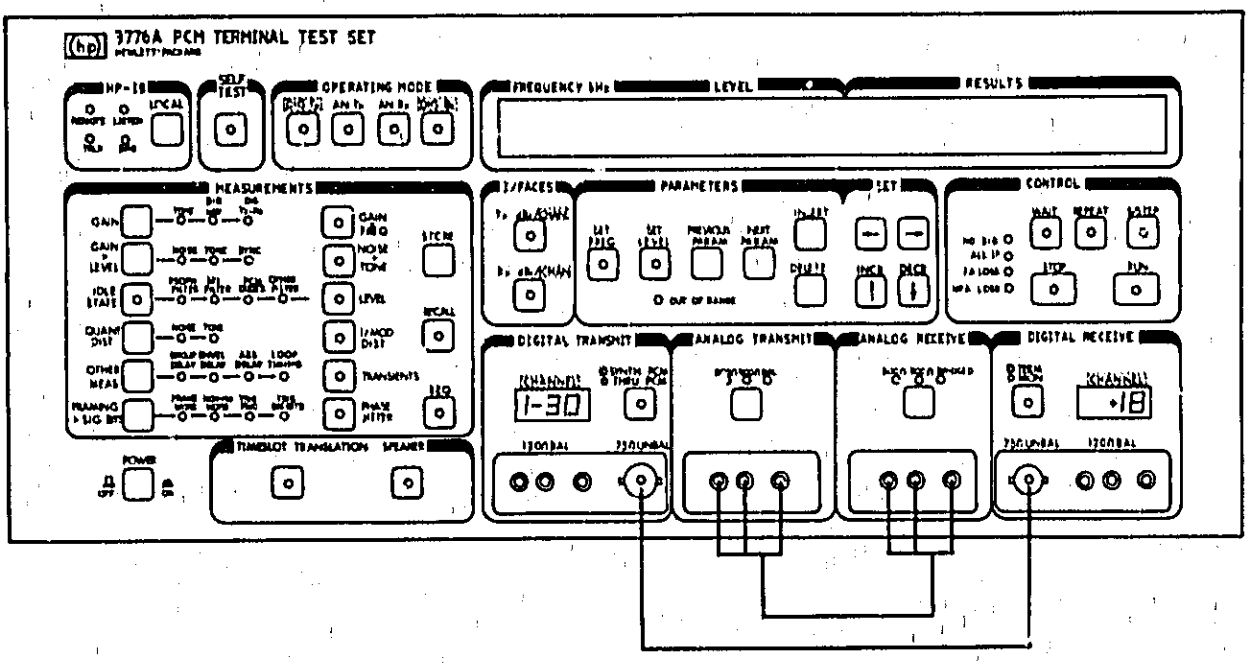

3-6 GETTING STARTED

3-7 A few things happen fairly quickly at switch-on and you will want to know what to expect before you push the button.

3-8 The switch-on routine performs some basic self checks. These take a few seconds and only produce a display (an error message) if one of the tests fails completly.

3-9 The last part of the switch-on routine reads the HP-IB ADDRESS switch and displays the HP-IB ADDRESS or OUTPUT FORMAT depending on the setting of the TALK ONLY/ADDRESSABLE switch. In this case, with the switch set to ADDRESSABLE, the HP-IB ADDRESS will be displayed.

3-10 The Default State

3-11 The instrument then defaults to:


AN Tx AN Rx OPERATING MODE, selects the GAIN TONE measurement* and displays the default PARAMETERS 0.81kHz, 0.0dBmO. The AN Tx and AN Rx impedances and dBr levels, and DIG Tx and DIG Rx channels are set to their values at last switch off.

OK now you now what to expect ...SWITCH ON.

---

*Except if the instrument was last switched off in transients or remod.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

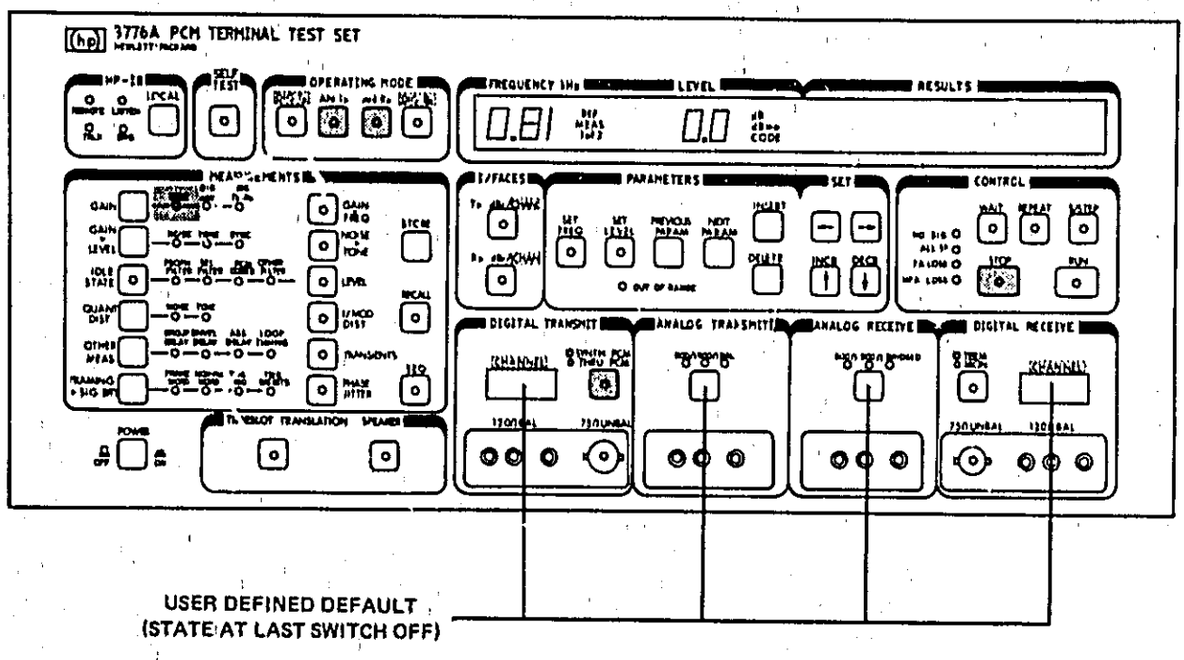

3-12 ANALOG MEASUREMENTS


3-13 The following exercise uses an analog to analog GAIN TONE measurement to demonstrate dBr selection and the effect of dBr on GAIN measurement results.

3-14 In this example the measurement is to be between a point at -7dB relative to the 0TLP ie -7dBr and a point at +3dB relative to the 0TLP ie 3dBr.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3-15 SETTING THE ANALOG Tx dBr LEVEL

3-16 Press the I/FACES Tx key to display the Tx dBr, one of the level digits should start to flash (SET LEVEL is automatically enabled).

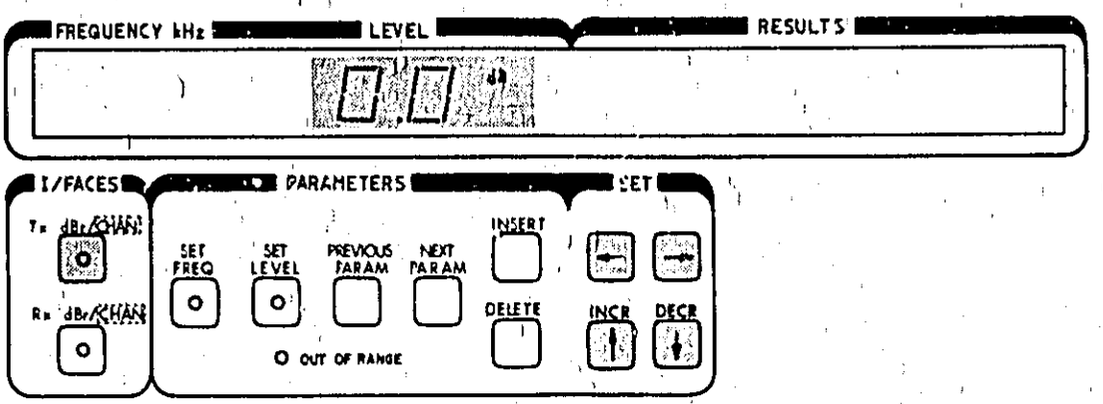


Use the ← →↑↓ keys to set the level to -7.0dB.

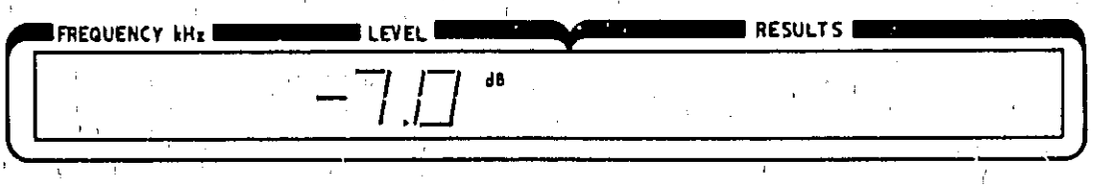

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3-17 SETTING THE ANALOG Rx dBr LEVEL


3-18 Now press the I/FACES Rx key and set the Rx dBr to 3.0dB

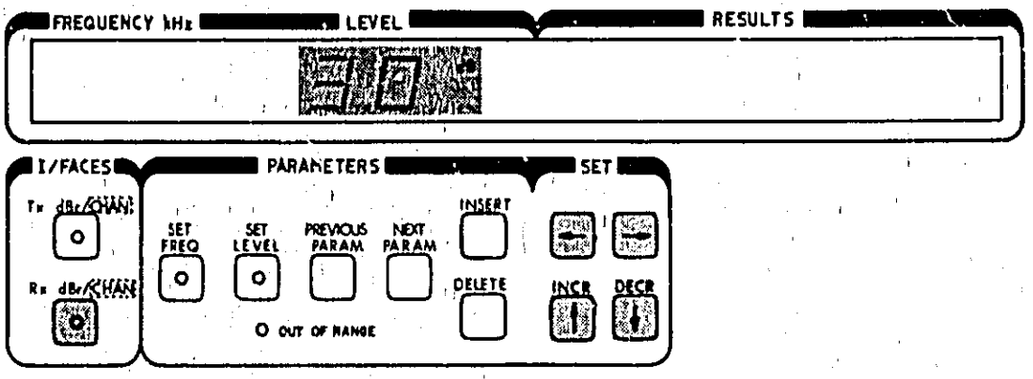

3-19 RUNNING A SINGLE POINT MEASUREMENT

3-20 The measurement selected before the I/FACES key was pressed remains selected. It is therefore possible to run the GAIN TONE measurement at this point by pressing the RUN key. You can check this by toggling the I/FACES key off; the GAIN TONE measurement is indicated and the measurement parameters are displayed.

You have now set up the measurement ...PRESS RUN.

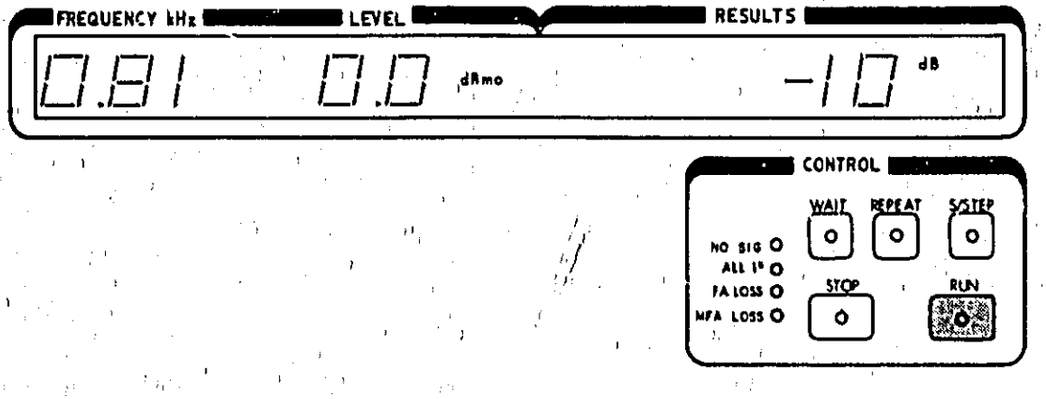


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3-21 The receiver expected a signal 10dB higher than the Tx output because of the dBr settings. But you have directly connected them. The measurement result (gain, which is relative) will therefore be -10dB.

3-22 STORE AND RECALL

3-23 In that example the measurement level was 0.0dBm0. Suppose you chose to measure gain at a different level, say -10dBm0. Here's how you can set up the instrument for your own requirements, and store this setting for future use.


Press SET LEVEL and use the ← →↑↓ keys to set the level to -10.0dBm0.

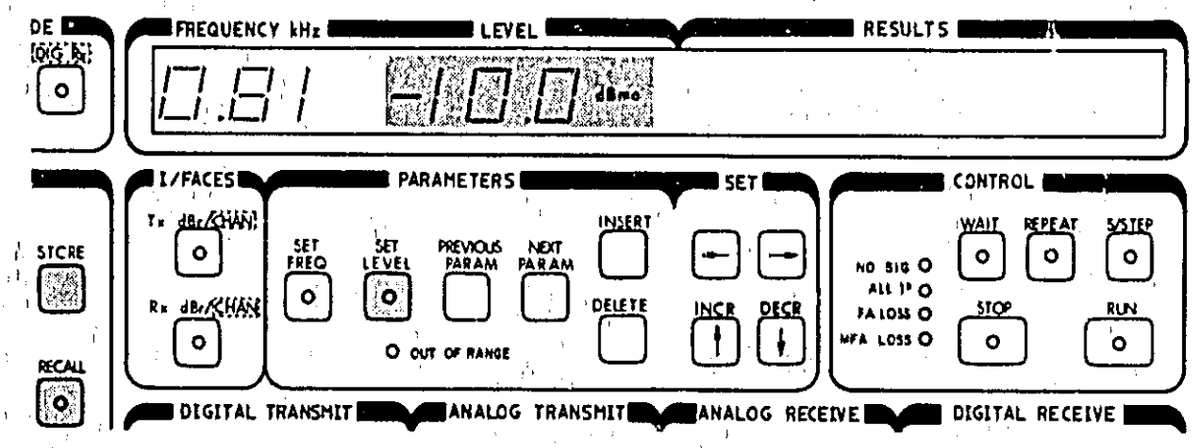

3-24 Press STORE. The indicator on the RECALL key should come on as confirmation that the storing action has taken place. The displayed parameters are now stored in non-volatile memory Toggle RECALL;the LEVEL display alternates between 0.0 and -10.0 i.e. between the ROM based default parameter settings and the RAM based user defined settings.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3-25 With the LEVEL set to -10.0dBm0, press RUN.

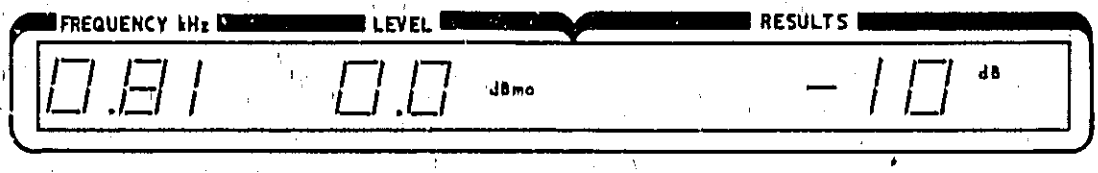

3-26 The result will still be -10dB, the gain has not changed, only the reference level. Remember for end to end measurements that this reference level must be set to the same value in both instruments.

NOTE: You can store a user defined version of each of the instruments measurements in NVM.

Set the Tx and Rx TLPs to 0.0 before proceeding.


NOTE: when the dBr is set to 0.0, the values of dBm0 and dBm are the same.

3-27 MULTI-POINT MEASUREMENTS

3-28 The following exercise uses a GAIN v FREQUENCY measurement to demonstrate manipulation and operation of multi-point measurements. The features demonstrated are: Changing parameters, insertion and deletion of points and running measurements.


3-29 Select GAIN v FREQUENCY

3-30 The first display you get shows the reference frequency and measurement level. All points in any one measurement run will be at one level.

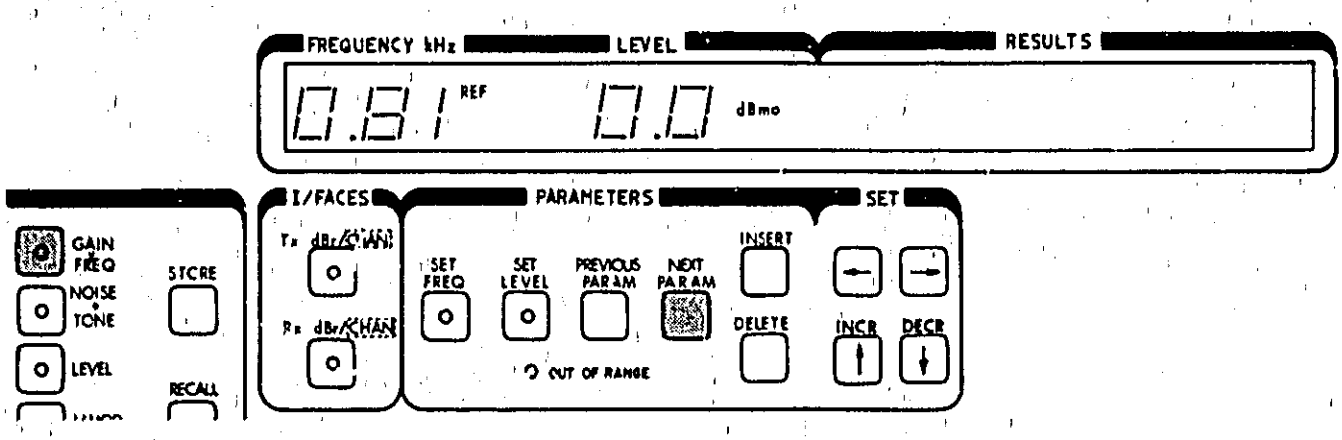

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Press the NEXT PARAM key.

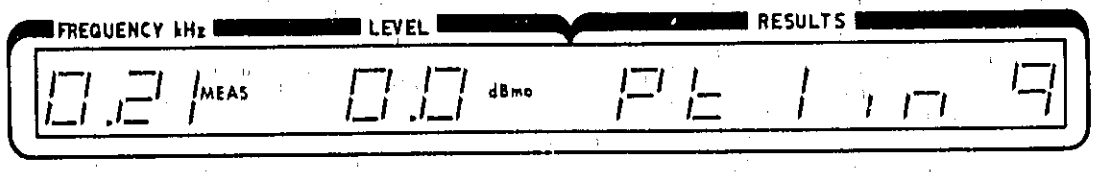


3-31 The Pt 1 in 9 display flag indicates that the point displayed is the first measurement point of a 9 point measurement.

3-32 Use the NEXT PARAM key to display each measurement point in turn. The displays obtained are:

FREQUENCY kHz	LEVEL	RESULTS
0.21 meas	0.0 dBm0	Pt 1 in 9
0.31	0.0	Pt 2 in 9
0.61	0.0	Pt 3 in 9
1.21	0.0	Pt 4 in 9
1.81	0.0	Pt 5 in 9
2.39	0.0	Pt 6 in 9
2.99	0.0	Pt 7 in 9
3.39	0.0	Pt 8 in 9
3.59	0.0	Pt 9 in 9

3-33 CHANGING PARAMETERS

3-34 Use the PREVIOUS PARAM key to display Pt 7 in 9

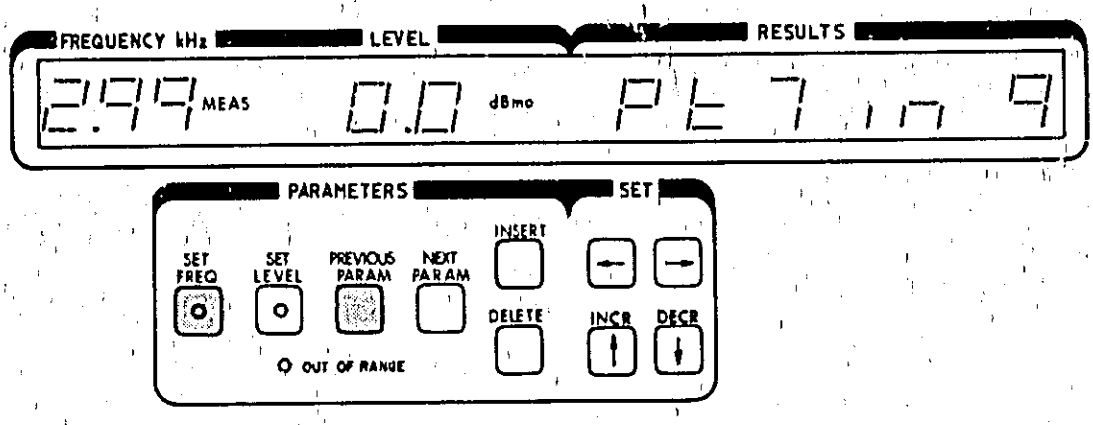

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3-35 Press SET FREQ, the on key indicator should come on. Now use the ← →↑↓ keys to set the frequency to 0.99kHz. Note how you can increment/decrement the left hand digit (by positioning the flashing cursor with the ← key) so that the frequency can be quickly changed. As the frequency changes the Pt indicator flag will change from Pt 7 in 9 to Pt 4 in 9.

3-36 As a result of the frequency change, the points in the measurement are now:

FREQUENCY kHz	LEVEL	RESULTS
0.21 meas	0.0 dBm0	Pt 1 in 9
0.31	0.0	Pt 2 in 9
0.61	0.0	Pt 3 in 9
0.99	0.0	Pt 4 in 9
1.21	0.0	Pt 5 in 9
1.81	0.0	Pt 6 in 9
2.39	0.0	Pt 7 in 9
3.39	0.0	Pt 8 in 9
3.59	0.0	Pt 9 in 9


Note that the instruments software has automatically re-ordered the measurement points.

3-37 INSERTING MEASUREMENT POINTS

3-38 Now to insert an additional measurement point at 2.51kHz. This is done by duplicating one of the existing mask points (with the INSERT key) and changing the frequency of one of the duplicated points to the required value. You can chose any point to duplicate. Normally, for convenience you would chose a point with a value close to the value about to be inserted but in this case we are going to chose a point well away from the point to be inserted in order to demonstrate the automatic re-ordering of measurement points.

3-39 Display point 3 in 9, 0.61kHz by using the NEXT PARAM and PREVIOUS PARAM keys.


NOTE: Any point can be used for this exercise.

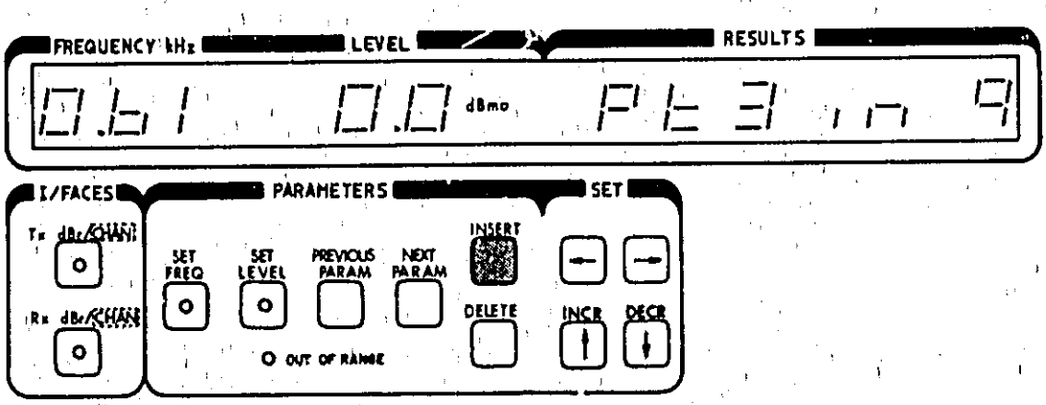

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


3-40 Press the INSERT key.

The measurement point has been duplicated, it is now shown as point 3 in 10

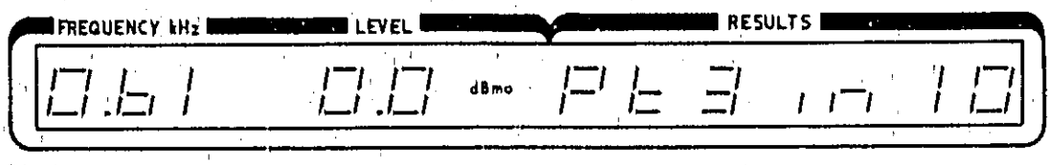

NOTE: At this stage there are two points at 0.61kHz Point 3 in 10 and Point 4 in 10

3-41 Press SET FREQ and watch the display as you set the frequency, as before, to 2.51kHz. The new point has been loaded in "ascending frequency" order. It is now point 8 in 10.

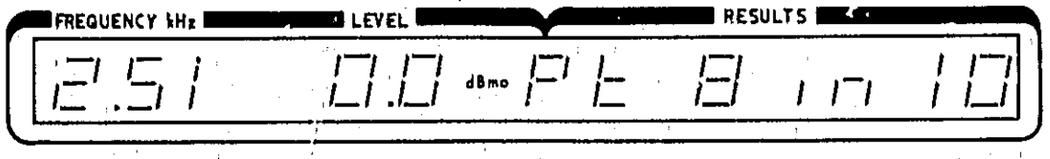

3-42 The complete list of points in the measurement is now:


FREQUENCY kHz	LEVEL	RESULTS
0.21 meas	0.0 dBm0	Pt 1 in 10
0.31	0.0	Pt 2 in 10
0.61	0.0	Pt 3 in 10
0.99	0.0	Pt 4 in 10
1.21	0.0	Pt 5 in 10
1.81	0.0	Pt 6 in 10
2.39	0.0	Pt 7 in 10
2.51	0.0	Pt 8 in 10
3.39	0.0	Pt 8 in 10
3.59	0.0	Pt 9 in 10

3-43 THE DELETE FUNCTION

3-44 When the instrument is in the STOP state, use the NEXT PARAM and PREVIOUS PARAM keys to display point 1 in 10 0.21kHz.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3-45 Press the DELETE key to delete that point. The next point will be displayed point 1 in 9 0.31kHz.

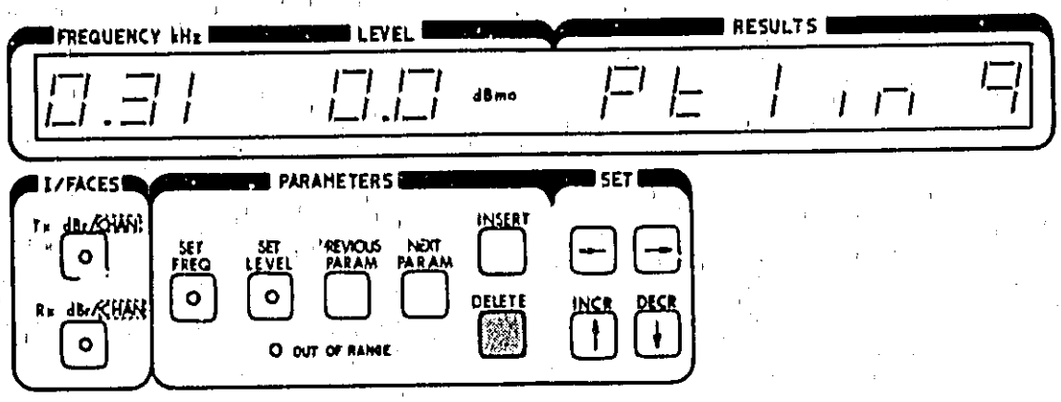

3-46 Press the delete key again. Point 1 in 8 0.61kHz will be displayed. The two lowest frequencies have been deleted from the mask leaving the eight higher frequency measurement points.


3-47 USING THE CONTROL KEYS


3-48 Press RUN, the measurement will run displaying results and will end in the STOP state ie with the indicator on the STOP key on.

3-49 Step through the measurement with the S/STEP key. The instrument will go to the WAIT state when each measurement point has been completed.

3-50 Press REPEAT when in the WAIT state to repeat that measurement point once.

3-51 Press RUN and then REPEAT (before the run has been completed). The current measurement point and the reference point will be continuously repeated. Toggle the speaker key for volume and off.

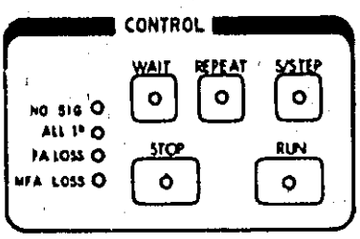

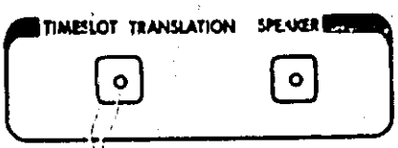

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


3-52 Press STOP to abort the measurement run.

3-53 Press RUN and then WAIT (before the run has been completed). The measurement will pause at the end of the current point. Now press RUN again and the measurement will continue.


3-54 DIGITAL MEASUREMENTS

3-55 The following exercise uses the PCM CODES LEVEL measurement to demonstrate manipulation and operation of background PCM and codes in the channel of interest. In this exercise we are going to have one pair of PCM codes in channels 2 to 30 as a background PCM and different codes in channel 1, the "test" channel, as foreground PCM.

3-56 Then we can look at the received codes in channels 1 and 2.

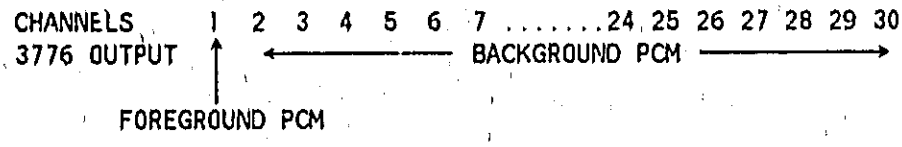


3-57 Select OPERATING MODE DIG Tx DIG Rx

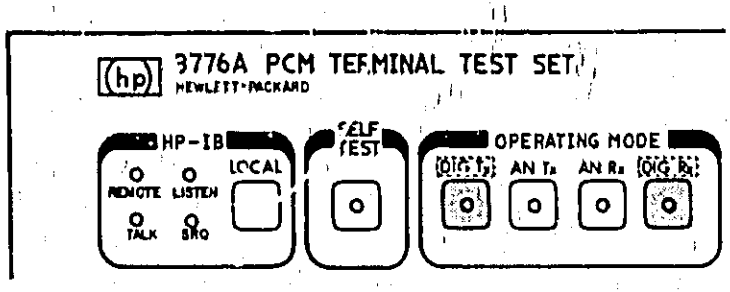

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3-58 SET UP BACKGROUND PCM

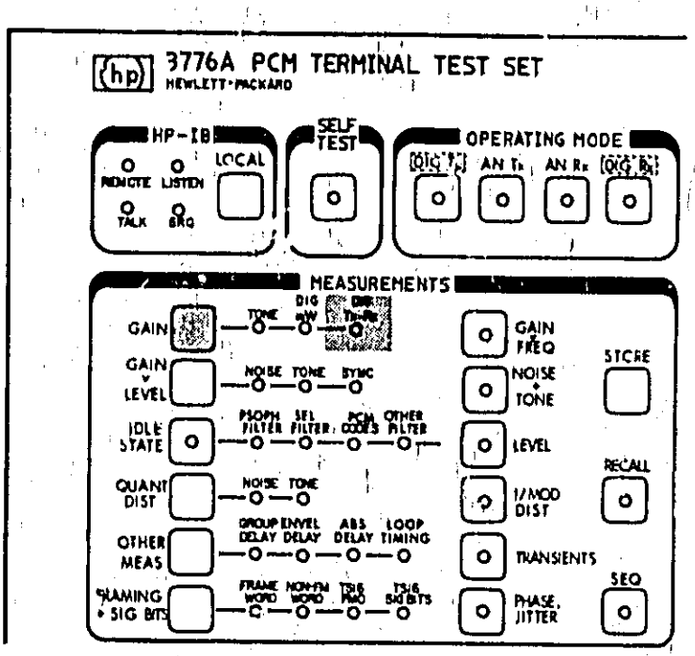

3-59 Press the MEASUREMENTS GAIN key to get the DIG Tx-Rx indicator "on".

3-60 With the DIG Tx-Rx measurement, the digital transmitter transmits a pair of codes and the digital receiver detects the received pair of codes and displays them. The pair of codes selected for this measurement are automatically selected as background idle codes, i.e. the PCM signal in the unselected channels, for other digital measurements.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The display shows one of the pair of Tx codes.

3-61 Use SET LEVEL and ← →↑↓ to change the display to 15.

The 1 of 2 display flag is "on", so use the NEXT PARAM key to get the second display, Tx code.


Change this code to -15, and press STORE.

3-62 The STORE operation in this case puts the new values in non-volatile memory and these become the background idle codes. The operation can be repeated later with the original values to return the instrument to the state you found it in.

3-63 TRANSMIT CHANNEL SELECTION

3-64 Press the I/FACES Tx key to enable Tx channel selection

Use the ↑↓ keys to set the Tx channel to 1

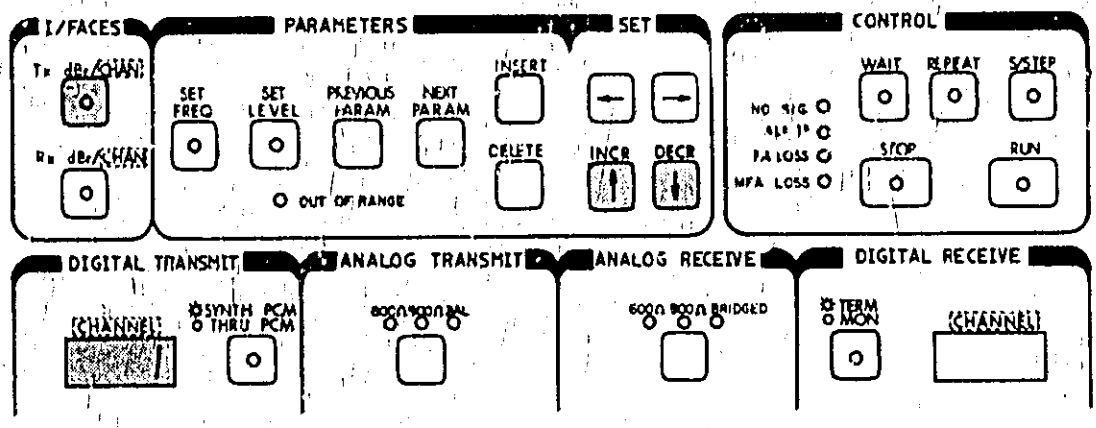


3-65 RECEIVE CHANNEL SELECTION

3-66 Press the I/FACES Rx key to enable Rx channel selection


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Use the ↑↓ keys to set the Rx channel to 1

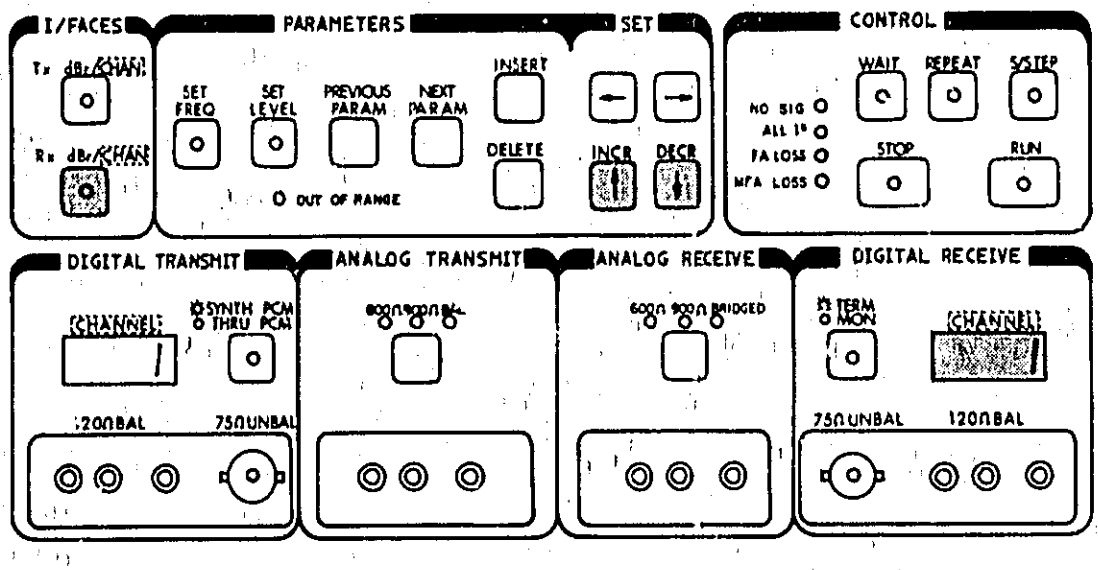

3-67 DIGITAL CHANNEL MANIPULATION


3-68 Press MEASUREMENTS LEVEL to get the PCM CODES indicator on. With this measurement, a signal is coded and transmitted, and the peak positive and negative codes received are displayed. The display shows the frequency and level of the output in the Tx channel.

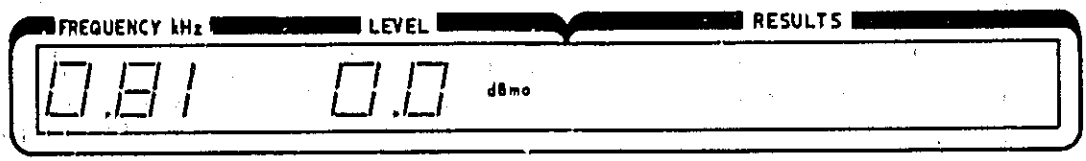

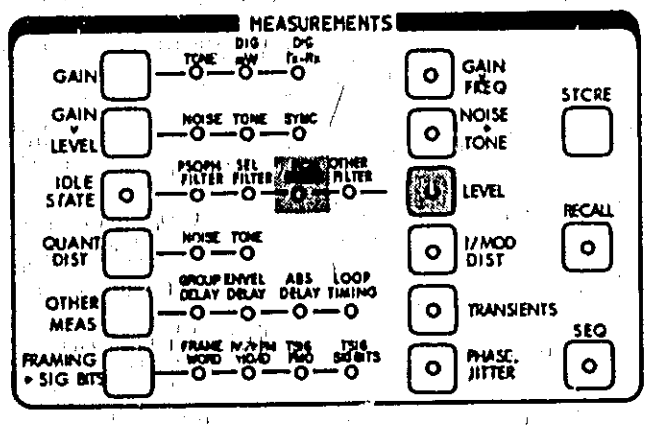


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

This should give you a pair of codes (-118, 118) in the selected Tx channel(s), in this case channel 1.

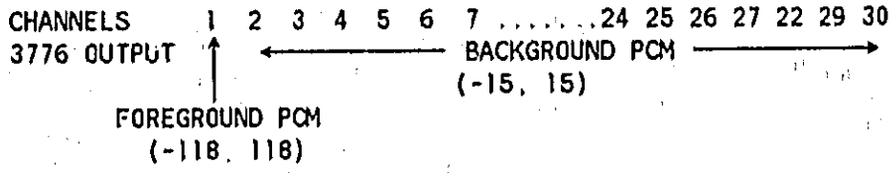


3-69 Press the RUN key to get the pair of codes received in channel 1

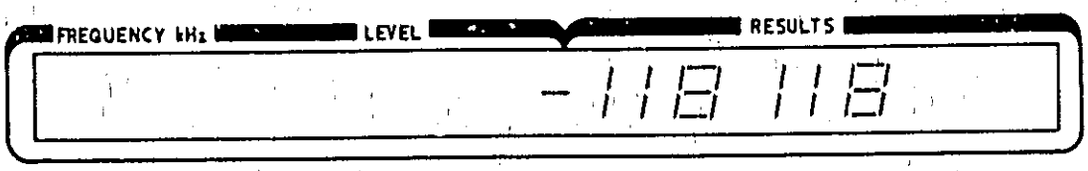

3-70 Press I/FACES Rx (CHAN)


3-71 Use the ↑↓ keys to set the DIGITAL RECEIVE CHANNEL to channel 2.

3-72 Press RUN. Channel 2 should contain the background PCM set above 15 -15

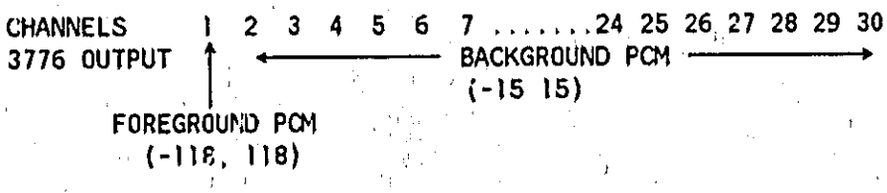


3-73 Press I/FACES Tx (CHAN) and use the ↑↓ keys to set the DIGITAL TRANSMIT CHANNEL to 1..30 (this means all 30 channels).

The Tx channel PCM is now in all channels

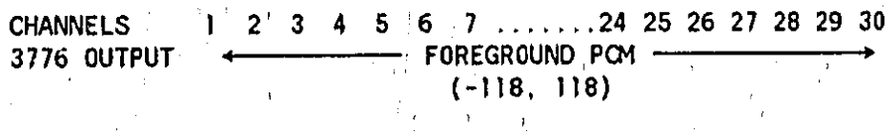

3-74 Press RUN for display -118 118

3-75 Set the Tx channel to -2. The Tx channel PCM is now in all channels EXCEPT channel 2.

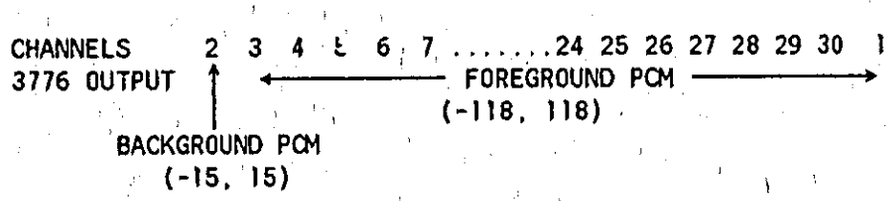

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3-76 Press RUN. The result is the background PCM in channel 2, 15 -15

3-77 Now you have used most of the front panel fu tions try some of the other measurements for yourself. Here are a few notes to help you get used to some mo. e functions. You may find the operating procedure part of this manual useful for some of the other measurements.

3-73 The AN Tx and Rx impedances are changed by repeatedly pressing the key for the appropriate display. A missmatch can be selected to see the effect on an A-A GAIN measurement.

3-79 In LEVEL, OTHER FILTERS and IDLE STATE, OTHER FILTERS, filter selection is enabled by pressing the NEXT PARAM key, and using SET FREQ and ↑↓, see CODED SELECTABLE FILTERS.

3-80 If a sequence has been loaded in the non-volatile memory, When you press the SEQ key, the "on key" indicator will come on, the measurement and mode indicators of the first measurement in the sequence will come on and Pt 1 will be displayed on the RESULT display. The NEXT PARAM key scrolls the display through Pt 2 to Pt n, the last measurement in the sequence, in eash case the appropriate measurement and mode is indicated. The SEQ key toggles in and out of the sequence so that when SEQ is pressed again the "on key" indicator goes off and the instrument will display the first parameter of that measurement. The NEXT PARAM and PREVIOUS PARAM keys now scroll the parameter displays of that measurement as in normal operation. The measurement can now be performed as a "stand alone" measurement or it can be changed and run as a variation. Remember that at this stage you are out of the sequence mode and normal operation can be resumed. Pressing SEQ again, i.e. to get the "on key" indicator on, will return you to the original sequence.

3-81 With the optional TRANSIENTS measurement, the measurement time, slow/fast count selection and measurement thresholds are scrolled with the NEXT PARAM key. The measurement results are scrolled in the same way, during run time. In the A-A mode, impulses and interruptions can be simulated by pulling out the output or input connector.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION IV
MEASUREMENTS

4-1 INTRODUCTION

4-2 This section contains both measurement information and setting up information which may be required before running measurements.

4-3 The section comprises three parts:

1 SETTING UP THE INSTRUMENT CONFIGURATION
(Operating mode, Interface setting, PCM format, Framing and signalling and background PCM)

2 MEASUREMENT INFORMATION
(Details of individual measurements)

3 SETTING UP THE MEASUREMENT CONFIGURATION
(Parameter selection, Store and recall, Interface default parameters and Measurement sequences)

4-4 The following table lists the contents of this section:

SETTING UP THE INSTRUMENT CONFIGURATION

OPERATING MODES
INTERFACE SETTINGS
ANALOG TRANSMIT INTERFACE SETTING
Analog Transmitter Impedance
Analog Transmitter dBr
ANALOG RECEIVE INTERFACE SETTING
Analog Receiver Impedance
Analog Receiver dBr
DIGITAL TRANSMIT INTERFACE SETTING
Synthesised or Through PCM
Digital Transmit Channel Selection
DIGITAL RECEIVE INTERFACE SETTING
Terminated or Monitor Input
Digital Receive Channel Selection
PCM FORMAT
Signalling
Code
Frame Format
SETTING FRAMING AND SIGNALLING BITS
SETTING BACKGROUND PCM
TIMESLOT TRANSALATION

MEASUREMENT INFORMATION

MEASUREMENTS
Measurement Groups
Measurement Selection
Table of Measurements
INDIVIDUAL MEASUREMENT INFORMATION

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SETTING UP THE MEASUREMENT CONFIGURATION

PARAMETER SELECTION
Changing Parameters in Multi-point Measurements
Insertion and Deletion of Points
STORE AND RECALL FUNCTIONS
STORE AND RECALL WITH FRAMING SIGNALLING AND BACKGROUND PCM
USER DEFINED INTERFACE DEFAULT PARAMETERS
MEASUREMENT SEQUENCES
THE COMPLETE NON-VOLATILE MEMORY

4-5 OPERATING MODES

4-6 The operator can independently select the analog or digital transmitter and/or the analog or digital receiver. The modes available are therefore:

ANALOG TRANSMIT only	AN Tx
DIGITAL TRANSMIT only	DIG Tx
ANALOG RECEIVE only	AN Rx
DIGITAL RECEIVE only	DIG Rx
ANALOG TRANSMIT ANALOG RECEIVE	AN Tx-AN Rx
ANALOG TRANSMIT DIGITAL RECEIVE	AN Tx-DIG Rx
DIGITAL TRANSMIT ANALOG RECEIVE	DIG Tx-AN Rx
DIGITAL TRANSMIT DIGITAL RECEIVE	DIG Tx-DIG Rx

4-7 These modes are selected with the front panel OPERATING MODE keys AN Tx, DIG Tx, AN Rx, DIG Rx. The mode selected is indicated by led indicators on the appropriate key(s). As selection is limited to one transmit mode and one receive mode, selection of one transmitter or receiver automatically switches off the other transmitter or receiver e.g. If AN Tx and AN Rx are on, the selection of DIG Tx will automatically switch AN Tx off.

4-8 PCM Loopthrough

4-9 An additional mode of operation is available in DIGITAL TRANSMIT/ DIGITAL RECEIVE, the THROUGH PCM mode. This mode provides retransmission of the received PCM stream with the ability to insert a digital test signal in the selected channel(s). Timeslot translation is available in the THROUGH PCM mode. Examples of PCM LOOPTHROUGH operation are given in the Measurement Modes and Configurations section of this manual.

4-10 INTERFACE SETTINGS

4-11 The interface settings available are as follows:

AN Tx	select	600/900 BALanced/UNBALanced,	TRANSMIT dBr
AN Rx	select	600/900 BRIDGED/TERMINATED,	RECEIVE dBr
DIC Tx	select	SYNTHesised PCM/THROUGH PCM,	TRANSMIT CHANNEL(S)
DIG Rx	select	TERMinated/MONitor,	RECEIVE CHANNEL

4-12 DEFAULT VALUES OF INTERFACE SETTINGS

4-13 The selected values of interface settings are stored in non-volatile memory and automatically become new default values.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-14 ANALOG TRANSMIT INTERFACE SETTING

4-15 Analog Transmitter Impedance

4-16 Selection of analog transmitter impedance and balanced or unbalanced output is performed by repeatedly pressing the single key in the ANALOG TRANSMIT section of the front panel. Indication of the impedance selected is provided by the three led indicators.

	600Ω	900Ω	BAL
600Ω BALanced	●	○	●
900Ω BALanced	○	●	●
600Ω UNBALanced	●	○	○
900Ω UNBALanced	○	●	○

4-17 Analog Transmitter dBr

4-18 The analog transmitter dBr setting is enabled with the I/FACES Tx dBr/CHAN key. When the analog transmitter is selected, the I/FACES Tx dBr key automatically enables SET LEVEL and the ← →↑↓ keys may be used to set the required dBr.

4-19 ANALOG RECEIVE INTERFACE SETTING

4-20 Analog Receiver Impedance

4-21 Selection of analog receiver impedance and bridged or terminated input is performed by repeatedly pressing the single key in the ANALOG RECEIVE section of the front panel. Indication of the impedance selected is provided by the three led indicators.

○	600Ω	900Ω	BRIDGED
600Ω terminated	●	○	○
900Ω terminated	○	●	○
600Ω BRIDGED	●	○	●
900Ω BRIDGED	○	●	●

4-22 Analog Receiver dBr

4-23 The analog receiver dBr setting is enabled with the I/FACES Rx dBr/CHAN key. When the analog receiver is selected, the I/FACES Rx dBr key automatically enables SET LEVEL and the ← →↑↓ keys may be used to set the required dBr.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-24 DIGITAL TRANSMIT INTERFACE SETTING

4-25 Synthesised or Through PCM

4-26 Selection of synthesised (internally generated) or through (as received) PCM is performed by toggling the single key in the DIGITAL TRANSMIT section of the front panel. Indication of the mode selected is provided by a single indicator on the key.

SYNTHesised PCM	●
THROUGH PCM	○

NOTE: THROUGH PCM is required if TIMESLOT TRANSLATION is to be selected.

4-27 Digital Transmit Channel Selection

4-28 Selection of the channel under test is enabled with the I/FACES Tx dBr/CHAN key. When the digital transmitter is selected, the I/FACES Tx CHAN key automatically enables Tx channel selection with the ↑↓ keys. The channel(s) selected are indicated on the CHANNEL display in the DIGITAL TRANSMIT section of the front panel. The ↑↓ keys step the display through the available range.

1 : : : 30	individual channels
1..30	all channels
-1 : : -30	all channels except channel 1 : : all channels except channel 30

4-29 DIGITAL RECEIVE INTERFACE SETTING

4-30 Terminated or MONitor Input

4-31 Selection of terminated or monitor input is performed by toggling the single key in the DIGITAL RECEIVE section of the front panel. Indication of the mode selected is provided by a single indicator on the key. The MONitor input provides 30dB gain.

TERMinated	●
MONitor	○

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-32 Digital Receive Channel Selection

4-33 Selection of the channel under test is enabled with the I/FACES Rx dBr/CHAN key. When the digital receiver is selected, the I/FACES Rx CHAN key automatically enables Rx channel selection with the ↑↓ keys. The channel selected is indicated on the CHANNEL display in the DIGITAL RECEIVE section of the front panel. The ↑↓ keys step the display through the available range.

```
1
:
:          individual channels
:
30
```

4-34 SET PCM FORMAT

4-35 The PCM format is set with rear panel switches The format selected applies to both DIG Tx and DIG Rx. The selection available is as follows:

Signalling	CAS	Channel Associated Signalling
	CCS	Common Channel Signalling
Code	AMI (ADI)	Alternate Mark Inversion with Alternate Digit Inversion
	HDB3	High Density Bipolar with 3 zeros suppresion.
Frame Format	30 CHAN	
	31 CHAN	Channel 31 is assigned to timeslot 16.

4-36 SETTING FRAMING AND SIGNALLING BITS


4-37 Framing and signalling bits can be selected either for measurements on the framing and signalling bits themselves or as the framing and signalling bits to be used in the digital output PCM stream with the measurement signal.

4-38 For this reason the "default" framing and signalling bits are not default parameters in the normal sense. The default condition is set by selecting the required bits on the display and pressing STORE. The selected bits are stored in the non-volatile "default parameters" memory and will automatically be selected at the next switch on. If framing and signalling bits are displayed and changed and the RECALL key is pressed, the currently displayed bits are lost and the "default" bits are recalled. Details of the framing and signalling bits are given in the MEASUREMENTS SECTION.

NOTE: When the appropriate "MEASUREMENT" has been selected the bits are presented on the RESULTS display and are automatically enabled for change with the ← →↑↓ keys.

4-39 The following figure shows the relationship between the framing and signalling bits and the non-volatile memory.

Artisan Technology Group - Quality Instrumentation ..., Guaranteed | (888) 88-SOURCE | www.artisantg.com

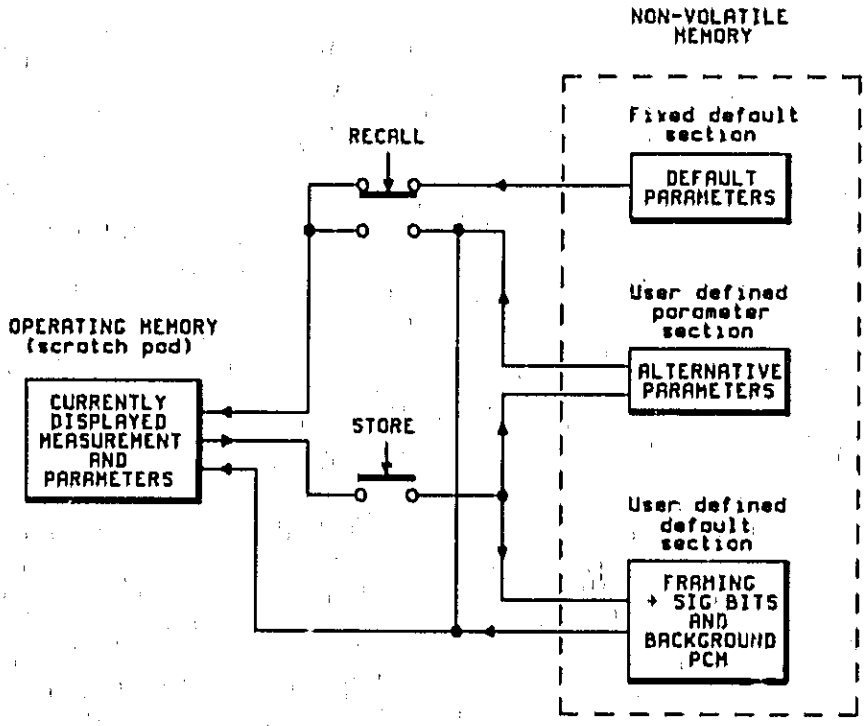

4-40 SET BACKGROUND PCM

4-41 The background PCM comprises a pair of codes alternating in groups of 4. The codes are programmable and, when stored, become the new default state.

4-42 The procedure for selecting background PCM is as follows:

- Select the DIG Tx-Rx mode to display the first code
- Use SET LEVEL and ← →↑↓ to set the first code
- Press NEXT PARAM to display the second code
- Use SET LEVEL and ← →↑↓ to set the second code
- Press STORE to set these codes as new background PCM

4-43 TIMESLOT TRANSLATION

4-44 For measurements on 2 wire systems timeslot translation, between the digital receiver input and the digital transmitter output, can be performed. The content of channel 1 is exchanged with channel 16, channel 2 with channel 17 etc.. This applies to audio information only. Channel associated signalling is not exchanged.

NOTE: TIMESLOT TRANSLATION requires THROUGH PCM selection.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-45 MEASUREMENTS

4-46 Measurement Groups

4-47 The measurements may be divided into a number of groups:

- Single point measurements
- Multi-point measurements
- Other measurements
- Facilities
- Optional measurements

4-48 Measurement Selection

4-49 The measurement selected is indicated by a front panel led. The indicator is located on the key where the key selects one measurement only e.g. Gain v Frequency and on the panel where the key cycles through a sub group of measurements e.g. Gain v Level measurements. In the case of Idle state and Level measurements two indicators are used, one on the appropriate key and one on the panel, as they share the same measurement sub group. The table on Page 4-8 lists the measurements available and gives the page number where measurement details are given e.g. Gain tone measurement information is given on Page 4-8.

4-50 MEASUREMENT DETAILS

4-51 This section provides information on each of the measurements and facilities provided by the 3776. The information given is in three parts:

1 A brief description of the measurement process.

2 The transmit and receive modes available.
The number of measurement points available.
The parameters which are variable.
The number of results available and the result units.

3 The displays obtained as follows:
(D is used to represent a single digit and N the number of points in multi-point measurements.)

The initial display showing the number of digits available for the selectable parameters and the units used.
The default parameters automaticically selected when the measurement is selected.
The numbers of digits and units of the results display and of the parameters which are displayed with the result.

NOTE: When selecting frequencies, sub-harmonics of the sampling frequency should be avoided.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Index to Measurement Information and Opreating Modes

MEASUREMENT	TYPE	A-A	A-D	D-A	D-D	AN Tx only	DIG Tx only	AN Rx only	DIG Rx only
GAIN(Tone)	SP	8	8	8	8	8	8	8	8
GAIN(Digital mW)	SP			8	8		8	8	8
GAIN(Digital Tx-Rx)	SP				9		9		9
GAIN v FREQUENCY	MP+R	10	10	10	10	10	10	10	10
GAIN v LEVEL(Noise)	MP+R	11	11	11	11	11	11	11	11
GAIN v LEVEL(Tone)	MP+R	12	12	12	12	12	12	12	12
GAIN v LEVEL(SYNC)	MP+R			13	13		13	13	13
NOTCHED NOISE	SP	14	14	14	14	14	14	14	14
IDLE STATE									
(Weighted Filter)	SP	14	14	14	14	14	14	14	14
(Selective Filter)	SP	15	15	15	15	15	15	15	15
(PCM Codes)	SP		15		15	15	15		15
(Other Filters)	SP	16	16	16	16	16	16	16	16
LEVEL									
(Weighted Filter)	SP	17	17	17	17	17	17	17	17
(Selective Filter)	SP	18	18	18	18	18	18	18	18
(PCM Codes)	SP		19		19	19	19		19
(Other Filters)	SP	20	20	20	20	20	20	20	20
QUANTISING DISTORTION									
(Noise)	MP	21	21	21	21	21	21	21	21
(Tone)	MP	22	22	22	22	22	22	22	22
INTERMODULATION	SP	23	23	23	23	23	23	23	23
GROUP DELAY	MP/SP	24	24	24	24	24	24	24	24
ENVELOPE DELAY	*	26	26	26	26				
ABSOLUTE DELAY	SP	28	28	28	28				
LOOP TIMING	CONT				28				
TRANSIENTS	TIMED	29	29	29	29	29	29	29	29
FRAME WORD	CONT						32		32
NOT-FRAME WORD	CONT						32		32
T/SLOT 16 FRAME 0 WORD	CONT						33		33
T/SLOT 16 SIG BITS	CONT						33		33
PHASE JITTER	CONT	34	34	34	34	34	34	34	34

The numbers in the table refer to pages in Section 4 e.g. GAIN (Tone) information is on Page 4-8.

TYPE SP = SINGLE POINT, MP = MULTI POINT, * = SPECIAL CASE, SEE TEXT MP+R = MULTI-POINT WITH A REFERENCE POINT, CONT = CONTINUOUS

4-52 GAIN TONE

4-53 The gain of the system under test is measured using a single tone stimulus and rms responding selective detector.

Tx-Rx modes	point(s)	variables	results
all	single	frequency level	] in dB

DISPLAYS:

	measurement frequency	measurement level	
Initial,			
	D.DDkHz	±DD.DdBm0	
Default values,	0.8]	0.0	
Results,	measurement frequency	measurement level	result
	D.DDkHz	±DD.DdBm0	±DD.DDdB

4-54 GAIN DIG mW

4-55 The D-A or D-D gain of the system under test is measured at 1kHz using the CCITT defined codes as the stimulus and an rms responding selective detector.

Tx-Rx modes	point(s)	variables	results
AN Tx prohibited	single	none	] in dB

DISPLAYS:

	measurement frequency	measurement level	
Initial,			
	1.00kHz	0.0dBm0	
Results,	measurement frequency	measurement level	result
	1.00kHz	0.0dBm0	±DD.DDdB

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-56 DIGITAL Tx-Rx

4-57 A pair of codes, alternating in groups of 4, i.e. at approximately 1kHz, is transmitted in the PCM stream. The peak codes in the received timeslot are detected during the measurement period. Digital Tx-Rx can be used to set up quiet codes. If the values selected are STORED they become the codes automatically selected for background codes where appropriate.

Tx-Rx modes	point(s)	variables	results
analog prohibited	single	Tx code pair	peak +ve code peak -ve code

DISPLAYS:

Initial,	measurement frequency	measurement level	
		±DDD	
NEXT PARAM		±DDD	

Default values,	as selected and stored	0 0	factory preset values

Results,	measurement frequency	measurement level	result
		±DDD	±DDD

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4- 58 GAIN v FREQUENCY

4- 59 The gain of the system under test is measured at each of the selected frequencies relative to the gain at the reference frequency. The measurement is made via a selective filter and an rms responding detector. When calibration corrections are required for the different frequencies in the mask, they are generated as required. The reference point is measured once, at the start of the measurement, in the RUN mode, and with each point in the REPEAT mode.

Tx-Rx modes	point(s)	variables	results
all	30 max	reference level, reference frequency, measurement frequency, no of points	one per point, max 30, in dB

DISPLAYS:	Initial,	reference frequency	reference level	
		D.DDkHz	±DD.DdBm0	
	NEXT PARAM	measurement frequency	measurement level	
		D.DDkHz	(= ref level)	Pt 1 in N
				:
				Pt N in N
	NEXT PARAM			

Default values,	reference frequency	reference level	
	0.81	0.0	
	measurement frequency	measurement level	
	0.21	0.0	Pt 1 in 9
	0.31	0.0	2 in 9
	0.61	0.0	3 in 9
	1.21	0.0	4 in 9
	1.81	0.0	5 in 9
	2.39	0.0	6 in 9
	2.99	0.0	7 in 9
	3.39	0.0	8 in 9
	3.59	0.0	9 in 9

Results,	measurement frequency	measurement level	result
	D.DDkHz	±DD.DdBm0	±DD.DDdB

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4- 60 GAIN v LEVEL NOISE

4- 61 The gain of the system under test is measured at each of the selected levels using a noise stimulus to CCITT O.131. The measurement is made via the quantisation distortion receive filter and an rms responding detector. The reference point is measured once,at the start of the measurement, in the RUN mode, and once before each run in the REPEAT mode.

Tx-Rx modes	point(s)	variables	results
all	30 max	reference level, measurement levels, no of point,	one per point, max 30, in dB.

Displays: Initial,

reference level	
±DD.DdBm0	
measurement level	
±DD.DdBm0	Pt 1 in N
:	:
	Pt N in N

NEXT PARAM

NEXT PARAM

Default values

reference level	
-10.0	
measurement level	
-10.0	1 in 7
-20.0	2 in 7
-30.0	3 in 7
-40.0	4 in 7
-50.0	5 in 7
-55.0	6 in 7
-60.0	7 in 7

Results,

measurement level	result
±DD.DdBm0	±DD.DDdB

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-62 GAIN v LEVEL TONE

4-63 The gain of the system under test is measured at each of the selected levels using a single tone stimulus and rms responding detector. The reference point is measured once, at the start of the measurement, in the RUN mode, and once before each run in the REPEAT mode.

Tx-Rx modes	point(s)	variables	results
all	30 max	reference level, reference frequency, measurement levels, no of points	one per point, max 30, in dB

DISPLAYS:	Initial,	reference frequency	reference level	
		D.DDkHz	±DD.DdBm0	
	NEXT PARAM	measurement frequency	measurement level	
	:	:	:	:
	:	(= ref frequency)	±DD.DdBm0	Pt 1 in N
	:	:	:	:
	:	:	:	:
	:	:	:	:
	NEXT PARAM			Pt N in N

Default values	reference frequency	reference level	
	0.8l	-10.0	
	measurement frequency	measurement level	
	0.8l	3.0	Pt 1 in 8
	0.8l	0.0	2 in 8
	0.8l	-10.0	3 in 8
	0.8l	-20.0	4 in 8
	0.8l	-30.0	5 in 8
	0 8l	-40.0	6 in 8
	0.8l	-50.0	7 in 8
	0.8l	-55.0	8 in 8

Results,	measurement frequency	measurement level	result
	D.DDkHz	±DD.DdBm0	±DD.DDdB

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4- 64 GAIN v LEVEL 2kHz SYNC

4- 65 The gain of the decoder under test is measured at each of the selected code levels relative to the reference code, using a digital signal, +0, +CODE, -0, -CODE. The received signal is passed through a 2kHz centre frequency selective filter and detected using an rms detector. The reference point is measured once,at the start of the measurement, in the RUN mode, and once before each run in the REPEAT mode.

Tx-Rx modes	point(s)	variables	results
AN Tx prohibited	30 max	reference code, measurement codes, no of points	one per point, max 30, in dB

DISPLAYS: Initial,	reference frequency	reference code	
	2.00kHz	±DDD code	
NEXT PARAM	measurement frequency	measurement code	
:	:	:	:
:	2.00kHz	±DDD code	Pt 1 in N
:			:
:			:
NEXT PARAM			Pt N in N

default values	reference frequency	reference code	
	2.00	92	
	measurement frequency	measurement code	
	2.00	127	Pt 1 in 9
	2.00	111	2 in 9
	2.00	95	3 in 9
	2.00	79	4 in 9
	2.00	63	5 in 9
	2.00	47	6 in 9
	2.00	31	7 in 9
	2.00	15	8 in 9
	2.00	0	9 in 9

Results,	measurement frequency	measurement code	result
	2.00kHz	±DDD code	±DD.DDdB

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4- 66 NOTCHED NOISE

4- 67 A tone at the specified frequency (1010 to 1020 Hz) and level is transmitted. The tone is removed in the receiver by a standard notch filter, the remaining signal is C-message weighted and measured using the rms detector. The result is corrected for the notched bandwidth.

Tx-Rx modes	point(s)	variables	results
all	single	frequency, level	1 in dBm0p

DISPLAYS:	Initial,	measurement frequency	measurement level
		D.DDkHz	±DD.DdBm0
	Default values,	0.81	0.0

	Results,	measurement frequency	measurement level	result
		D.DDkHz	±DD.DdBm0	±DDD.DdBm0p

4- 68 IDLE STATE WEIGHTED FILTER

4- 69 When AN Tx is selected, the analog transmitter is terminated When DIG Tx is selected,the quiet code is transmitted in the PCM stream. The receive level is measured via a C-MESSAGE filter at the Rx frequency using an rms detector.

Tx-Rx modes	point(s)	variables	results
all	single	none	1 in dBm0p

DISPLAYS:	Initial,	MEAS flag only	
	Results,	MEAS flag	result
			±DD.DDdBm0p

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4- 70 IDLE STATE SELECTIVE

4- 71 When AN Tx is selected,the analog transmitter is terminated When DIG Tx is selected,the idle code is transmitted in the PCM stream. The receive level is measured via a selective filter at the Rx frequency using an rms detector.

Tx-Rx modes	point(s)	variables	results
all	single	Rx frequency	] in dBm0

DISPLAYS: Initial, measurement frequency

D.DDkHz

Default values, 0.8]

Results, measurement frequency: D.DDkHz — result: ±DD.DDdBm0

4- 72 IDLE STATE PCM CODES (CODER OFFSET)

4- 73 When AN Tx is selected,the analog transmitter is terminated When DIG Tx is selected,the quiet code is transmitted in the PCM stream. When DIG Rx only is selected, the background PCM (stored DIG Tx/Rx values)is transmitted. The received codes are averaged during the measurement period and the result, the average of 800 codes, is the number of compressed code level steps from the centre of the coding law.

Tx-Rx modes	point(s)	variables	results
AN Rx prohibited	single	quiet code	] in code

DISPLAYS: Initial, MEAS flag only

Results, MEAS flag: result ±DDD code

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4- 74 IDLE STATE OTHER FILTERS

4- 75 When AN Tx is selected, the analog transmitter is terminated When DIG Tx is selected, the quiet code is transmitted in the PCM stream. The receive level is measured via the chosen filter using an rms detector.

Tx-Rx modes	point(s)	variables	results
all	single	quiet code Rx filter A=3kHz B=dc block high pass C=4.1kHz high pass (AN Rx only)	1 in dBm0

DISPLAYS: Initial, Rx filter
Default
values, fil A

Results, filter _ \ result

±DD.DDdBm0

4- 76 LEVEL MEASUREMENTS USING THE AUXILIARY INPUT

4- 77 Level measurements may be performed using either the internally generated signal or by using an external source applied to the rear panel AUXiliary I/P. The auxiliary input signal is routed either to the selected channel(s) for digital output,or to the analog output by pressing the DELETE key when the LEVEL measurement has been selected.

4- 78 The auxilliary input TLP is -16dB. The analog transmit output level can be varied by suitable selection of the TLP setting. The digital transmitter output is band limited to 3.6kHz.

4- 79 When the AUX I/P is used,the SET FREQ and SET LEVEL controls are inoperative and the results output will not contain transmitted frequency and level information.

4- 80 As autoranging takes place on the receiver input in this mode, it is not suitable for communication over the line under test. Communication over the test path (AUX I/P to MON O/P) is achieved by selecting OPERATING MODE and TIMESLOT, pressing SELF TEST, selecting Pt 22 and pressing RUN. In this mode autoranging does not occur and compensation is made for the AUX I/P TLP.

4- 81 Other details are the same as for level measurements using the internally generated source.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4- 82 LEVEL MEASUREMENTS USING THE INTERNALLY GENERATED SOURCE

4- 83 LEVEL WEIGHTED FILTER

4- 84 A tone is transmitted at the specified frequency and level and the received level is measured through a C-MESSAGE filter using an rms responding detector.

Tx-Rx modes	point(s)	variables	results
all	single	Tx frequency Tx level	1 in dBm0p

		Tx frequency	Tx level	
DISPLAYS:	Initial,	D.DDkHz	±DD.DdBm0	
	Default values,	0.81	0.0	
	Results,	Tx frequency	Tx level	result
		D.DDkHz	±DD.DdBm0	±DD.DDdBm0p

For AUXILIARY I/P information see LEVEL MEASUREMENTS USING AUXILIARY INPUT Page 4-16.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4- 85 LEVEL SELECTIVE

4- 86 A tone at the specified frequency and level is transmitted and the received level is measured through a selective filter at the receive frequency using an rms responding detector.

Tx-Rx modes	point(s)	variables	results
all	single	Tx frequency Tx level Rx frequency	1 in dBm0

DISPLAYS: Initial,	Tx frequency	Tx level	
	D.DDkHz	±DD.DdBm0	
NEXT PARAM	Rx frequency		
	D.DDkHz		
default values	0.8	0.0	
	0.8		
Results,	Rx frequency	result	
	D.DDkHz	±DD.DDdBm0	

For AUXILIARY I/P information see LEVEL MEASUREMENTS USING AUXILIARY INPUT Page 4-16.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4- 87 LEVEL PCM CODES

4- 88 A tone is transmitted at the specified frequency and level and the peak codes received during the gating period are measured.

Tx-Rx modes	point(s)	variables	results
AN Rx prohibited	single	Tx frequency Tx level	1 code pair

DISPLAYS:

	Tx frequency	Tx level	result
Initial,	D.DDkHz	±DD.DdBm0	
Default values,	0.81	0.0,	
Results,	D.DDkHz	±DD.DdBm0	±DDD ±DDD

For AUXILIARY I/P information see LEVEL MEASUREMENTS USING AUXILIARY INPUT Page 4-16.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4- 89 LEVEL OTHER FILTERS

4- 90 A tone is transmitted at the specified frequency and level and the received level is measured through the selected filter using an rms responding detector. After the measurement has been selected, the NEXT PARAM key is used to select the required filter.

Tx-Rx modes	point(s)	variables	results
all	single	Tx frequency Tx level Rx filter A=3kHz B=dc block high pass C=4.1kHz high pass (AN Rx only)	1 in dBm0

DISPLAYS: Initial,	Tx frequency	Tx level	
	D.DDkHz	±DD.DdBm0	
NEXT PARAM	filter _		
default values	0.8] filter A(3kHz)	0.0	
Results,	Tx frequency	Tx level	result
	D.DDkHz	±DD.DdBm0	±DD.DDdBm0

For AUXILIARY I/P information see LEVEL MEASUREMENTS USING AUXILIARY INPUT Page 4-16.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4- 91 QUANTIZING DISTORTION NOISE

4- 92 The noise level of the system under test is measured relative to the received level of the stimulating noise. The stimulating noise conforms to CCITT recommendation O.131. The level of the received noise is measured using a bandpass filter, the quantizing distortion ref filter, which conforms to CCITT recommendation O.131 and an rms responding detector. The quantizing noise is then measured through a second bandpass filter, the quantizing distortion measurement filter, which also conforms to CCITT recommendation O.131, and the rms detector.

Tx-Rx modes	point(s)	variables	results
all	30 max	measurement levels, no of points	one per point, max 30 in dB

Displays: Initial,

measurement level	
±DD DdBm0	

NEXT PARAM

measurement level	
±DD.DdBm0	Pt 1 in N
±DD.DdBm0	Pt 2 in N

NEXT PARAM

	Pt N in N

Default values,

measurement level	
-5.0	Pt 1 in 7
-10.0	2 in 7
-20.0	3 in 7
-27.0	4 in 7
-34.0	5 in 7
-40.0	6 in 7
-55.0	7 in 7

Results,

measurement level	result
±DD.DdBm0	±DD.DdB

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-93 QUANTIZING DISTORTION TONE

4-94 The noise level of the system under test is measured relative to the received level of the stimulating tone. The frequency range of the stimulating tone is 1010 to 1020Hz. The measurement frequency range is 990 to 1020Hz. The received signal is C-message weighted and its level is measured using the rms responding detector. The tone is then removed by the standard notch filter, the remaining noise is C-message weighted and the level of the weighted noise is measured using the rms detector. The result (SIGNAL + NOISE)/NOISE is corrected for the notched bandwidth.

Tx-Rx modes	point(s)	variables	results
all	30 max	measurement levels, measurement frequency, no of points	one per point, max 30 in dB (see above)

DISPLAYS:	Initial,	measurement frequency	measurement level	
		D.DDkHz	±DD.DdBm0	
	NEXT PARAM	measurement frequency	measurement level	Pt 1 in N
	:			
	:			
	:	(= Pt 1 frequency)	±DD.DdBm0	Pt 2 in N
	:			
	:			
	:			
	NEXT PARAM			Pt N in N

Default values,	measurement frequency	measurement level	
	0.8	0.0	Pt 1 in 8
	0.8	-10.0	2 in 8
	0.8	-20.0	3 in 8
	0.8	-30.0	4 in 8
	0.8	-40.0	5 in 8
	0.8	-45.0	6 in 8
	0.8	-50.0	7 in 8
	0.8	-55.0	8 in 8

Results,	measurement frequency	measurement level	result
	D.DDkHz	±DD.DdBm0	±DD.DdB

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-95 INTERMOD 2 TONE

4-96 The selectable frequencies f1 and f2 are combined to produce the transmitted signal at the measurement level. The levels of f1 and 2f1-f2 are measured using selective filters and an rms detector. The measurement result is the level of 2f1-f2 relative to the level of f1.

Tx-Rx modes	point(s)	variables	results
all	single	frequencies f1 and f2 level	1 in dB

Note: frequencies f1 and f2 must not be within 150Hz of each other or of 2f1-f2.
2f1-f2 must be in the range 200 to 3900Hz.


DISPLAYS:	Initial,	frequency f1	measurement level
		D.DDkHz	±DD.DdBm0
	NEXT PARAM	frequency f2	measurement level (=PREVIOUS PARAM)
		D.DDkHz	
	Default values,	(f1) 0.47	-4.0
		(f2) 0.32	

Results,	frequency measured	measurement level	result
	D.DDkHz	±DD.DdBm0	±DD.DdB

Artisan Technology Group - Quality Instrumentation ,,. Guaranteed | (888) 88-SOURCE | www.artisantg.com

4- 97 GROUP DELAY DISTORTION (Optional Measurement)

4- 98 The instrument is designed to transmit and receive signals which conform to CCITT recommendation O.81. The receiver measures the relative attenuation of the measurement signal with respect to the reference signal, and measures the group delay using the demodulated signals. Both results are displayed simultaneously.

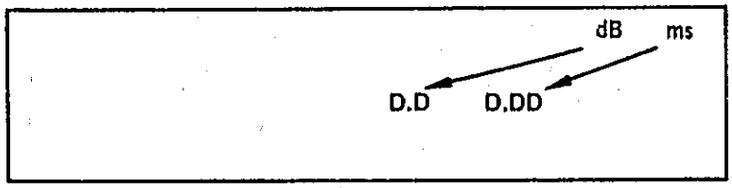

4- 99 The measurement and reference frequencies are also measured but can only be displayed in the receive only modes, i.e., in end to end operation. In this mode the measurement frequency is normally displayed. The display can be changed to reference frequency by pressing the NEXT PARAM key and can be returned to measurement frequency by pressing the PREVIOUS PARAM key.

4-100 The measurement range for group delay is -12 to +12ms. Result displays beyond this range are "wrapped around" as follows:

```
                                  |                   |
RESULT DISPLAYED ms     ..+11|-12.....0.....+12|-11.....
GROUP DELAY    ms       ..-13|-12.....0.....+12|+13.....
                                  |                   |
```

NOTE: When the received test signal has passed through a PCM system the sampling and quantizing process of the system under test will cause spreading of the results, with a deviation of approximately 50 to 60us.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Tx-Rx modes	point(s)	variables	results
all	30 max	reference level, reference frequency, measurement frequencies, no of points.	one pair per point max 30 in dB and mS

Displays:	Initial,	reference frequency	reference level	
		D.DDkHz	±DD.DdBm0	
	NEXT PARAM	measurement frequency	measurement level	
	:			
	:	D.DDkHz	(=reference level)	Pt 1 in N
	:			
	:			
	:			
	NEXT PARAM			Pt N in N

Default values,	reference frequency	reference level	
	1.81	-5.0	
	measurement frequency	measurement level	
	0.51	-5.0	Pt 1 in 13
	0.61	-5.0	2 in 13
	0.81	-5.0	3 in 13
	1.01	-5.0	4 in 13
	1.21	-5.0	5 in 13
	1.41	-5.0	6 in 13
	1.61	-5.0	7 in 13
	1.81	-5.0	8 in 13
	2.01	-5.0	9 in 13
	2.21	-5.0	10 in 13
	2.41	-5.0	11 in 13
	2.59	-5.0	12 in 13
	2.79	-5.0	13 in 13

Results,	measurement frequency	measurement level	result
	D.DDkHz	±DD.DdBm0	±D.DdB±D.DDms

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-101 ENVELOPE DELAY DISTORTION (optional measurement)

4-102 The instrument is designed to transmit and receive signals which conform to BSTR41009. There are three possible configurations for envelope delay distortion measurement:

1 Loop-back, measuring the combined go and return paths


2 Single path, using another instrument at the far end set to REMOD AN Tx, to return the received signal remodulated on a fixed frequency carrier (see REMOD).

3 End to end, on a homochronous system (i.e. a system in which corresponding significant instants of the clock have a constant but uncontrolled phase relationship). The clock of the transmitting instrument must also be system clock. This may be achieved by using the rear panel EXT CLOCK INPUT. This mode can be used on a non-synchronous system but the accuracy is impaired by an amount dependent on the clock skew. [100ppm → 100µs/(second ref to meas separation)].

4-103 The receiver compares the phase of the envelopes of both the reference and measurement signals with the internal reference and then compares the two results obtained to produce the envelope delay distortion result Similarly the amplitudes of the envelopes are compared to to produce the relative attenuation result. This method applies a correction for the internal attenuation and EDD of the 3776. When the measurement is running the measurement parameters are displayed. The received reference frequency can be displayed by pressing the NEXT PARAM key. The PREVIOUS PARAM key will restore the measurement frequency display.

4-104 The result produced at the reference frequency is intended for use as a settling time indicator, in particular when there is a remote remodulating instrument. The reference frequency can be repeated until the result aproaches zero, to indicate that the network including the remote instrument has settled.

4-105 The measurement range for envelope delay is -12 to +12ms. Result displays beyond this range are "wrapped around" as follows:

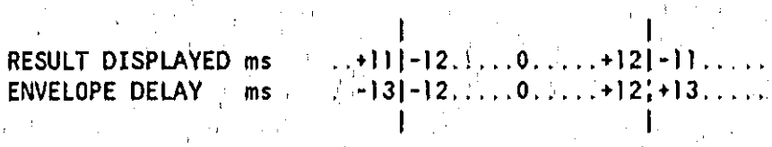

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Tx-Rx modes	point(s)	variables	results
all	30 max	reference level, reference frequency, measurement frequencies, no of points.	one pair per point max 30 in dB and ms

DISPLAYS:	Initial,	reference frequency	reference level	
		D.DDkHz	±DD.DdBm0	
	NEXT PARAM	measurement frequency	measurement level	
	:			
	:	D.DDkHz	(*reference	Pt 1 in N
	:	frequency)	level)	:
	:			:
	:			:
	:			:
	NEXT PARAM			Pt N in N

Default values,	reference frequency	reference level	
	1.81	-5.0	
	measurement frequency	measurement level	
	0.51	-5.0	Pt 1 in 13
	0.61	-5.0	2 in 13
	0.81	-5.0	3 in 13
	1.01	-5.0	4 in 13
	1.21	-5.0	5 in 13
	1.41	-5.0	6 in 13
	1.61	-5.0	7 in 13
	1.81	-5.0	8 in 13
	2.01	-5.0	9 in 13
	2.21	-5.0	10 in 13
	2.41	-5.0	11 in 13
	2.59	-5.0	12 in 13
	2.79	-5.0	13 in 13

Results,	measurement frequency	measurement level	result
	D.DDkHz	±DD.DdBm0	±D.DdB±D.DDms

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-106 ABSOLUTE DELAY (optional measurement)

4-107 A carrier at the selected frequency, amplitude modulated with a 83.33Hz sinewave is transmitted. The phase of the envelope of the received signal is compared with an internal reference and the absolute delay is derived. The measurement range is 0 to 24ms. The result display is "wrapped around" for delays beyond this range as follows:

```
                                    |
RESULT DISPLAY ms    0.............24|1.....
ABSOLUTE DELAY ms    0.............24|25....
                                    |
```

Tx-Rx modes	point(s)	variables	results
Tx only or Rx only prohibited	single	frequency, level	1 in ms

DISPLAYS:	Initial,	reference frequency	measurement level	
		D.DDkHz	±DD.DdBm0	
	Default values,	1.81	-5.0	
	Results,	measurement frequency	measurement level	result
		D.DDkHz	±DD.DdBm0	±DD.DDms

4-108 DIALLING

4-109 Dialling is performed in the same way as a measurement. Although dialling can only normally be performed via HP-IB, and is therefore described in the HP-IB section of this manual, it is possible to include dialling in a sequence for manual operation. The dialled digits can be altered by leaving the sequence and using the NEXT/PREVIOUS PARAM keys to display the digit to be changed and changing it with the SET LEVEL and ↑↓ keys. The changed digits will be lost when another measurement or mode is selected. For additional information see Page 6-25.

4-110 LOOP TIMING

4-111 The instrument provides an indication of loop timing using a pictorial display. The RESULTS display is stationary when the received clock frequency is nominally the same as the transmitted clock frequency. Rotation of the marker indicates a frequency difference and jitter of the marker indicates timing jitter. As the loop timing measurement compares the received clock with the generated clock it is only valid in the DIG Tx-DIG Rx operating mode. Loop timing is a continuous measurement. When loop timing is selected the instrument will continue to operate in the loop timing mode until the STOP key is pressed.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-112 TRANSIENTS (optional measurement)

4-113 The transmitter produces a holding tone at the selected frequency (1000 to 1020Hz) and level. Amplitude hits, phase hits, interruptions and impulse counts are measured by the receiver. Interruptions inhibit all other measurements.

4-114 Selectable Parameters

4-115 The count rate is selectable: SLO = 8 counts/second
FAST = 100 counts/second

The measurement duration is selectable in units of hours and minutes from 0 hours 01 minute to 9 hours 59 minutes or CONTINUOUS. CONTINUOUS is selected by increasing the duration above 9.59.

4-116 Amplitude Hits, Phase Hits and Interruptions.

4-117 Thresholds are displayed using the NEXT PARAM key and are selectable as follows:

- Amplitude hits.....2,3,4 or 6dB.
- Phase hits..... 5° to 40° in 5° steps.
- Interruptions..... .....10dB fixed.

4-118 The signal is routed via a 400 to 1600Hz band limiting filter to level and phase monitors. Falls of greater than 10dB lasting for more than 3ms are detected as interruptions. Level or phase excursions beyond the selected thresholds and lasting for more than 4ms are detected as amplitude hits and phase hits respectively,except when they occur during interruptions.

4-119 Impulse Counts (Three Levels).

4-120 The low threshold is displayed using the NEXT PARAM key and the value is selected. The mid and high thresholds are automatically set to 3 and 6dB respectively above the selected low threshold. The received signal is routed via a selectable filter and a notch filter to level monitors.

receive filter	A	200Hz high pass + 1010Hz notch
	B	600Hz to 3kHz + 1010Hz notch
	C	300 to 500Hz

Excursions above each threshold are counted independently.

4-121 If a power failure occurs, the instrument will recover and continue from the point of interruption when the power is restored. The instrument will display ERROR 45 when power has been restored to indicate that a power failure has occured during measurement run time. This display will be cleared at the end of the measurement when the result is displayed, or when the NEXT PARAM or PREVIOUS PARAM keys are used during the measurement run. In HP-IB operation, provision is made for power failure indication with the rear panel POWER ON SRQ switch.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Tx-Rx modes	point(s)	variables	results
all	time period meas	hold tone frequency, hold tone level, slow/fast count, measurement time, amplitude hit threshold, phase hit threshold, impulse count"low" threshold, impulse count filter.	6 counts scrolled with NEXT PARAM and PREVIOUS PARAM keys

DISPLAYS: Initial, measurement frequency, measurement level

D.DDkHz ±DD.DdBm0

NEXT PARAM	count rate	SLO/FAST	count
NEXT PARAM	duration	DDhrsDDmin	h-min
NEXT PARAM	amplitude hit threshold	DdB	A hit
NEXT PARAM	phase hit threshold	DD°	p hit
NEXT PARAM	interruption threshold	-10dB (fixed)	intr
NEXT PARAM	impulse count lo threshold	-DDdBm0	I count
	mid	low+3dB	
	high	low+6dB	
	impulse count filter	A = 200Hz high pass + notch B = 0.6 to 3kHz + notch C = 300 to 500Hz	
	Default values,	1.0	0.0

NEXT PARAM	count rate	SLO	count
NEXT PARAM	duration	00hrs05min	h-min
NEXT PARAM	amplitude hit threshold	2dB	A hit
NEXT PARAM	phase hit threshold	5°	p hit
NEXT PARAM	interruption threshold	-10dB	intr
NEXT PARAM	impulse count lo threshold	-20dBm0	I count
	mid	low+3dB	
	high	low+6dB	
	impulse count filter A	200Hz high pass + notch	
	Results,	level	result

NOTE: using PREVIOUS PARAM to display count rate or hold tone clears results.

Artisan Technology Group - Quality Instrumentation - Guaranteed | (888) 88-SOURCE | www.artisantg.com

		selected values		
NEXT PARAM duration		DDhrsDDmin	h-min	D.DD
NEXT PARAM amplitude hits		DdB	A hit	DDDD
NEXT PARAM phase hits		DD°	p hit	DDDD
NEXT PARAM interruptions		-10dB	intr	DDDD
NEXT PARAM impulse counts	low	-DDdBm0	I count	DDDD
NEXT PARAM	mid	-DD	I count	DDDD
NEXT PARAM	high	-DD	I count	DDDD

4-122 FRAMING and SIGNALLING BITS

4-123 MODES DIG Tx or DIG Rx only

4-124 The default Tx framing and signalling bits are under the control of the operator. The store facility,unlike its function with other parameters, sets the currently displayed framing and signalling bits as the new default condition.

NOTE: For PCM inputs the receiver requires:

- Frame Alignment Word 10011011
- Multi-frame Alignment Word (first four bits of
- TS16 FM0) 0000

4-125 The received framing and signalling bits are presented on the RESULTS display. The first word detected is displayed and the display is updated each time the detected word differs from the displayed word. The last word detected before loss of alignment is displayed until alignment is regained. When the display changes,there is a short delay before monitoring continues. The rear panel DIG Rx OUTPUT provides a TTL output of the received PCM stream with a data valid signal at appropriate points for the currently selected framing or signalling bits. The frame structure is described in appendix B.

4-126 The following information is a summary of the PCM formats in which the various framing and signalling bits are available:

TS 16 FM0	CAS,30 CHANNEL ONLY,
TS 16 SIG	30 CHANNEL ONLY Tx FRAMES SELECTABLE
FRAME WORD	ANY FORMAT
NOT-FRAME WORD	ANY FORMAT

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-127 FRAME ALIGNMENT WORD

4-128 DIG Tx

4-129 Transmits a selectable 8 bit binary word in timeslot 0 of the the frame alignment frame of the PCM stream. A selection of different error ratios may be introduced into the standard frame alignment word (10011011) using the NEXT PARAM and PREVIOUS PARAM keys.

Initial display		8 binary bits. (current default state)
NEXT PARAM	ERROR RATIO	1 in 10^{-5}
:		5 in 10^{-5}
:		1 in 10^{-4}
:		5 in 10^{-4}
:		1 in 10^{-3}
:		2 consecutive in 4
:		alternate 1 in 2
:		3 consecutive in 4
:		all 1s
NEXT PARAM		all 0s HDB3 suppressed

NOTE: If STORE is pressed with ALL 1s or OFF selected the digital transmitter will be configured to transmit the appropriate signal The Tx channel display will show AIS or OFF as appropriate. To return to normal digital transmitter operation, the I/FACES Tx dBr/CHANNEL key should be pressed twice.

4-130 DIG Rx

4-131 Displays the received 8 bit binary word from timeslot 16 of the frame alignment frame.

4-132 NOT FRAME ALIGNMENT WORD

4-133 DIG Tx

4-134 Transmits a selectable 8 bit binary word in timesiot 0 of frames which are NOT the frame alignment frame of the PCM stream. A selection of different error ratios may be introduced into the STANDARD not frame alignment word (11011111)using the NEXT PARAM and PREVIOUS PARAM keys.

Initial display	8 binary bits	(current default state)
NEXT PARAM	ERROR RATIO	alternate 1 in 2
NEXT PARAM		3 consecutive in 4

4-135 DIG Rx

4-136 Displays the received 8 bit binary word from timeslot 16 of the not frame alignment frame.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-137 TIMESLOT 16 FRAME 0 WORD (MULTIFRAME ALIGNMENT WORD)

4-138 DIG Tx CAS only

4-139 Transmits a selectable 8 bit binary word in timeslot 16 frame 0 of the PCM stream.

4-140 DIG Rx CAS only

4-141 Displays the received 8 bit binary word from timeslot 16 frame 0 of the PCM stream.

4-142 TIMESLOT 16 SIGNALLING BITS

4-143 DIG Tx

4-144 Transmits a selectable 8 bit binary word (CAS 2X4 bit) in timeslot 16 of the frame(s) selected with the DIG Tx/CHAN switch and signalling format switch, as follows:

CAS/CCS SWITCH	CHANNEL DISPLAY	FRAME(S) SELECTED	
CAS	1	1	2X4 bit word in selected signalling channel. Default word in all other signalling channels.
:	:	:	
:	:	:	
:	15	15	
:	16		2X4 bit word selected in TS 16 of frames 1 to 15
:	:	1..15	
:	30		
CAS	1..30		
CCS	any	0..15	8 bit word selected in every TS 16

4-145 DIG Rx CAS

4-146 The content of the selected (DIG Rx) signalling channel is monitored and displayed as a 4 bit word.

4-147 DIG Rx DATA OUTPUT (rear panel) TTLI 8 bits at multi-frame rate. Control bit to indicate if requested signalling channel is upper or lower nibble (true = upper).

4-148 DIG Rx CCS

4-149 The content of every timeslot 16 is monitored, and displayed as an 8 bit word.

DIG Rx DATA OUTPUT (rear panel) TTLI 8 bits at frame rate.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-150 PHASE JITTER (optional measurement)

4-151 The transmitted signal is a 1010Hz tone at the selected level. The settling time required depends on the receiver filter selected, 4 seconds for filter A (fast) or 25 seconds for filter B (slow). The detected jitter is available at the MONITOR OUTPUT for further analysis if required.

PHASE JITTER is a "continuous measurement". It is necessary to use the STOP key to exit from this measurement.

Tx-Rx modes	point(s)	variables	results
all	single	level, Rx filter A=20 to 300Hz B=4 to 300Hz	continuous in degrees pk-pk

DISPLAYS:	Initial,	measurement frequency	measurement level	
		1.01kHz	±DD.DdBm0	
	NEXT PARAM	fil _		
	Default values,	1.01	0.0	
	NEXT PARAM	fil A		
	Results,	measurement frequency	measurement level	result
		fil _	±DD.DdBm0	±DD.Ddeg p-p

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-152 PARAMETER SELECTION

4-153 When a measurement is selected, the default parameters are automatically selected. Other parameters can normally be selected if required.The individual measurement information gives details of the parameters which are variable.

NOTE: In order to change parameters the instrument must be in the STOP state.

4-154 To change a displayed parameter it is first necessary to select the display field to be changed.This is achieved with the SET FREQuency and SET LEVEL keys. When one of these keys is pressed the least significant digit of the appropriate display flashes.This indicates the digit which is enabled for change with the ↑↓ keys. Other digits can be enabled for change with the ← and → keys.

4-155 The front panel OUT OF RANGE indicator will come on if an attempt is made to set a parameter out of range. if RUN is pressed in this state, the OUT OF RANGE indicator and the appropriate display will flash and the measurement will not be performed. In some cases e.g. INTERMOD 2 TONE, where combinations of parameters may be out of range, the out of range condition is detected during run time. In these cases an error message ERROR 25, is displayed.

4-156 A measurement run can be performed with the selected parameters. If the selected parameters are required for future use they can be stored in non volatile memory, see STORE and RECALL functions. If the selected parameters are not stored, they will be lost when another measurement is selected.

4-157 Changing Parameters in Multi-point Measurements

4-158 The points of a multi-point measurement are scrolled with the NEXT PARAMeter and PREVIOUS PARAMeter keys. In order to change a parameter in a multi-point measurement it is necessary to scroll the individual points until the point to be changed is displayed. The procedure is then as described above, however with multi-point measurements the points are stored in a logical order and changing parameters may change the position of the point relative to other points in the measurement. This will be indicated by the display flag PT___IN___.

4-159 The following example shows how the change in order can occur when a parameter is changed.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The multi-point measurement in this example is, for simplicity, a 4 point gain v frequency measurement.

	FREQUENCY kHz		LEVEL		RESULTS
1st display is reference.	0.8	ref	0.0	dBm0	
2nd display first meas point obtained with NEXT PARAM key.	0.2	meas	0.0	dBm0	Pt 1 in 4
other displays available with NEXT PARAM key.	0.3	meas	0.0	dBm0	Pt 2 in 4
	0.6	meas	0.0	dBm0	Pt 3 in 4
	1.2	meas	0.0	dBm0	Pt 4 in 4

With Pt 3 in 4 displayed, the frequency can be changed from 0.6kHz to (for example) 0.28kHz, using the SET FREQ and ← →↑↓ keys. This will result in the changed point being designated Pt 2 in 4 and the points in the sequence will then be as follows:

	FREQUENCY kHz		LEVEL		RESULTS
1st display is reference.	0.8	ref	0.0	dBm0	
2nd display first meas point obtained with NEXT PARAM key.	0.2	meas	0.0	dBm0	Pt 1 in 4
other displays available with NEXT PARAM key.	0.28	meas	0.0	dBm0	Pt 2 in 4
	0.3	meas	0.0	dBm0	Pt 3 in 4
	1.2	meas	0.0	dBm0	Pt 4 in 4

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-160 Insertion and Deletion of Points

4-161 Points can be inserted into or deleted from multi-point measurements using the INSERT and DELETE keys. The INSERT key duplicates the currently displayed measurement point which can then be changed to the the parameters required as described above. the DELETE key deletes the currently displayed measurement point.

4-162 The following example shows the steps required to insert a measurement point.

The multi-point measurement in this example is the same 4 point gain v frequency measurement used in the previous example.

	FREQUENCY kHz		LEVEL		RESULTS
1st display is reference.	0.8	ref	0.0	dBm0	
2nd display first meas point obtained with NEXT PARAM key.	0.2	meas	0.0	dBm0	Pt 1 in 4
other displays available with NEXT PARAM key.	0.3	meas	0.0	dBm0	Pt 2 in 4
	0.6	meas	0.0	dBm0	Pt 3 in 4
	1.2	meas	0.0	dBm0	Pt 4 in 4

With Pt 3 in 4 displayed the INSERT key will insert another point with the same parameters. When the frequency is changed, the new point will go to a logical location in the frequency order.

	0.6	meas	0.0	dBm0	Pt 3 in 4
INSERT	0.6	meas	0.0	dBm0	Pt 3 in 5
SET FREQ ↓	0.28	meas	0.0	dBm0	Pt 2 in 5
NEXT PARAM	0.3	meas	0.0	dBm0	Pt 3 in 5


The complete new sequence is now:

FREQUENCY kHz		LEVEL		RESULTS
0.8	ref	0.0	dBm0	
0.2	meas	0.0	dBm0	Pt 1 in 5
0.28	meas	0.0	dBm0	Pt 2 in 5
0.3	meas	0.0	dBm0	Pt 3 in 5
0.6	meas	0.0	dBm0	Pt 4 in 5
1.2	meas	0.0	dBm0	Pt 5 in 5

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-163 STORE AND RECALL FUNCTIONS


4-164 The selected parameters can be stored in non-volatile memory by pressing the STORE key while they are displayed The RECALL key can then be used to toggle between the default parameters and the user defined parameters. The following figure shows the operation of the STORE and RECALL functions.

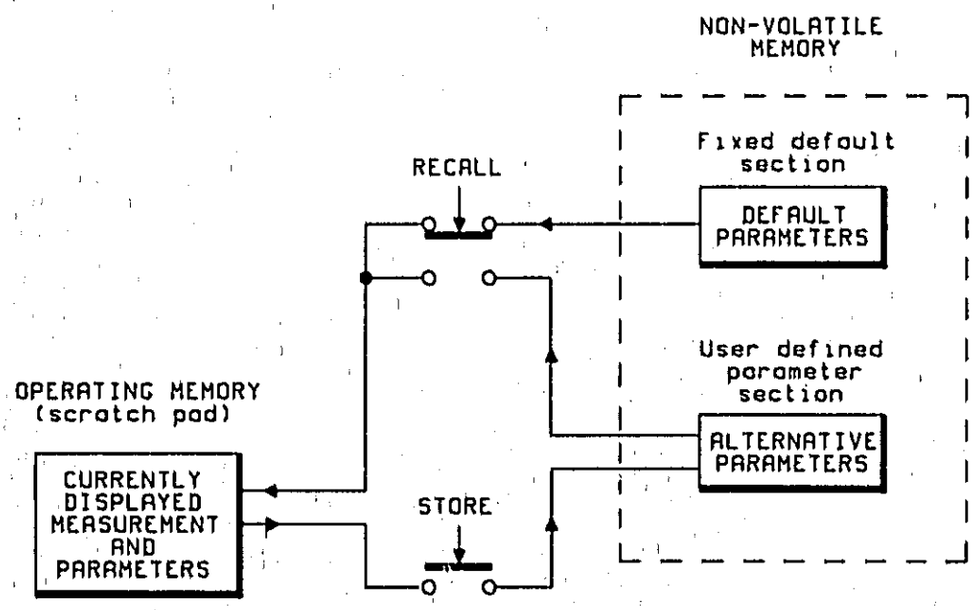

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-165 STORE AND RECALL WITH FRAMING SIGNALLING AND BACKGROUND PCM

4-166 Framing and signalling bits, and background PCM codes are automatically set as new (user defined) default parameters when STORE is pressed. If the current display has been changed, the default state can be recalled with the RECALL key.

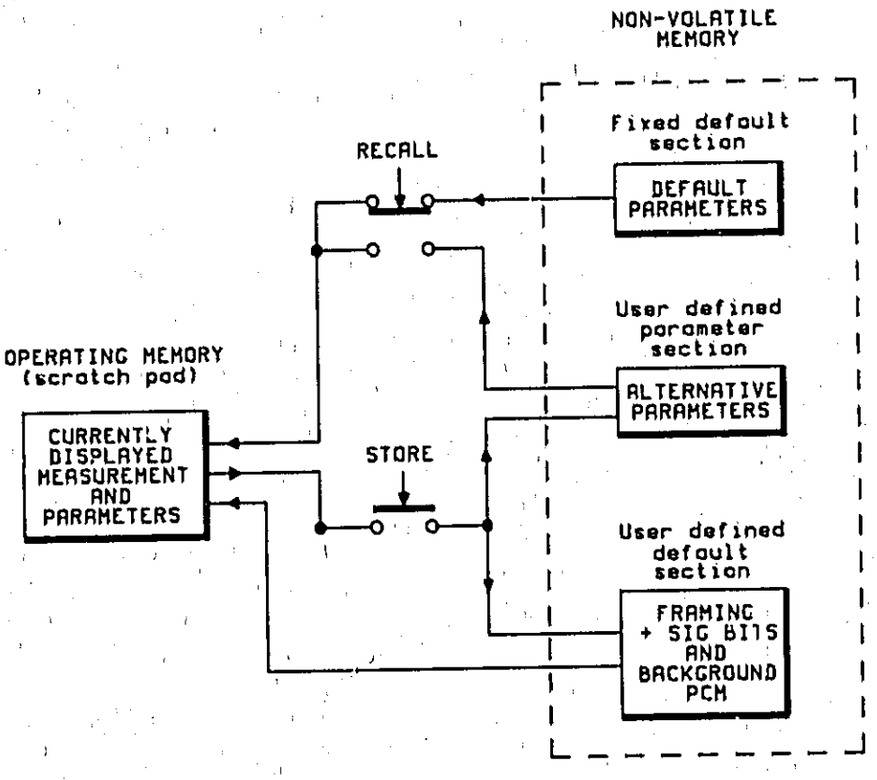


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-167 USER DEFINED INTERFACE DEFAULT PARAMETERS

4-168 The interface parameters are automatically stored in non-volatile memory when the instrument is switched off and become the new default parameters. The parameters in this category are:

- ANALOG TRANSMIT and RECEIVE dBr levels
- ANALOG TRANSMIT and RECEIVE IMPEDANCE and TERMINATION
- DIGITAL TRANSMIT and RECEIVE CHANNEL(S)

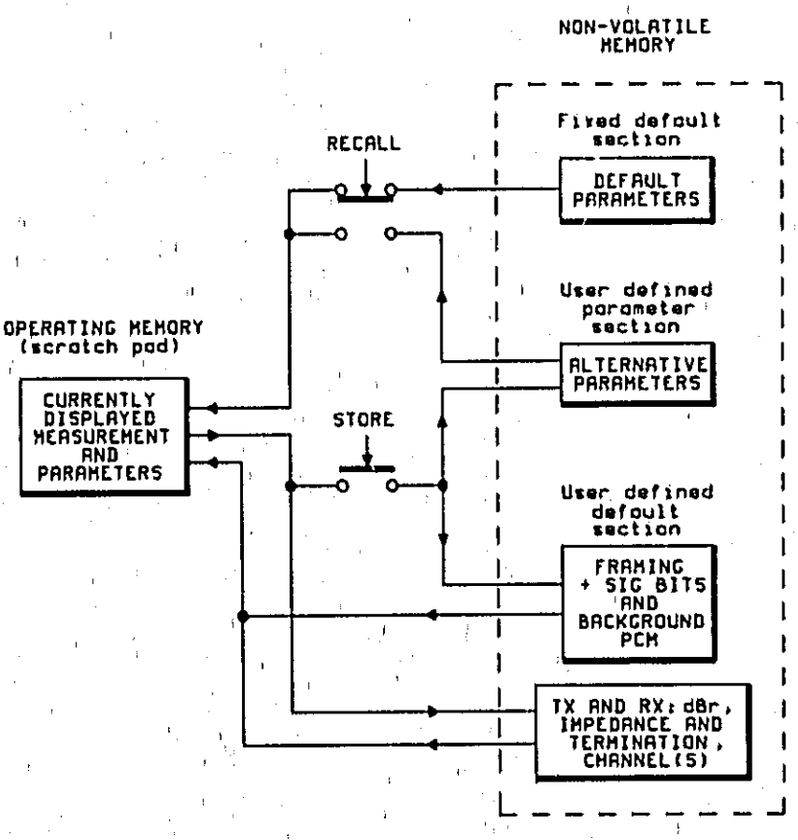

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-169 MEASUREMENT SEQUENCES

4-170 A measurement sequence can be loaded into the non-volatile memory of the instrument using an external controller. The sequence can be run from the front panel of the instrument (without the use of a controller) with the SEQuence and RUN keys. The parameters of the measurements in the sequence can be the same as, or different from the default parameters or the user defined stored set. The sequence can comprise up to approximately 50 points depending on the number of parameters which apply to each point.

4-171 The procedure for compiling a sequence is as follows:

1 Select the addressable mode and connect a controller to the rear panel HP-IB connector.

2 Clear the sequence memory if required by addressing the 3776 and sending the command "CS".

3 Press the LOCAL key.

4 Set up the first point of the measurement as for manual operation

5 Append the first measurement point to the sequence by addressing the 3776 and sending the command "AS".

6 Repeat the procedure steps 3 thru 5 for each subsequent measurement point.

4-172 An alternative to steps 3 thru 6 is to set up the measurement points via HP-IB. In this case the whole operation is performed in the remote mode.

4-173 A sequence, stored in the instrument is not intended for running via HP-IB, it is normally run manually from the front panel.

4-174 The sequence is enabled by pressing the SEQ key, and run with either the RUN or S/STEP keys. When sequence operation is enabled, the "on key" indicator comes on, the display flags Pt 1 to indicate the first measurement of the sequence and the MODE and MEASUREMENT indicators show the mode and measurement of that sequence point. The NEXT PARAM and PREVIOUS PARAM keys will scroll the sequence points (measurements) at this stage, producing display flags of Pt 1 to Pt n, the last measurement in the sequence. When the SEQ key indicator is on, the RUN key will run the complete sequence and the S/STEP key will run the currently selected measurement.

4-175 The SEQ key can be used to toggle in and out of the sequence, as indicated with the "on key" indicator. When the SEQ key is used to toggle out of the sequence ("on key" indicator off) the first (or only) parameter display of the selected measurement (sequence point) is displayed. The NEXT PARAM and PREVIOUS PARAM keys will scroll the measurement parameters. At this stage the instrument is no longer in the sequence mode and operates as if the measurement had been selected manually i.e. the parameters can be changed and a measurement run performed with the chosen parameters.

4-176 The chosen parameters can only be inserted in the sequence by the use of a controller. If the sequence is re-selected the original sequence, modes, measurements, and parameters are restored.

4-177 Although the operating modes allowed in sequences are normally limited to loop-back modes, the DIALLING "measurement" can be included in the sequence. As with other sequence measurements, it is possible to toggle out of the sequence when dialling is the current point, change the parameters e.g. digits dialled, and run dialling. A complete sequence is performed in the same way as a multi-point measurement. The functions performed on a sequence by the CONTROL keys are the same as those performed on a measurement (see RUNNING MEASUREMENTS).

NOTE: The STOP key aborts the current sequence and returns to the sequence start state.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


4-178 The prefered method of running a sequence of measurements remotely is to compile and store it as individual measurements in the controller, making suitable provision for the output of results.

4-179 In general sequence measurements are limited to loopback modes of operation i.e. modes where one instrument is transmitting and receiving, however it is possible to include dialling as part of a sequence. As dialling is an HP-IB only function the dialling information must be entered from a controller.

4-180 Continuous Measurements In Sequences

4-181 A sequence run cannot pass a continuous measurement. When one continuous measurement is to be included in a sequence, it should be made the last measurement in the sequence. If TRANSIENTS and one other continuous measurement e.g. PHASE JITTER are to be included in the sequence, the TRANSIENTS measurement should be timed (less than 9hrs 59min) not set to CONT.


4-182 The following figure shows the operation of the SEQUENCE function.

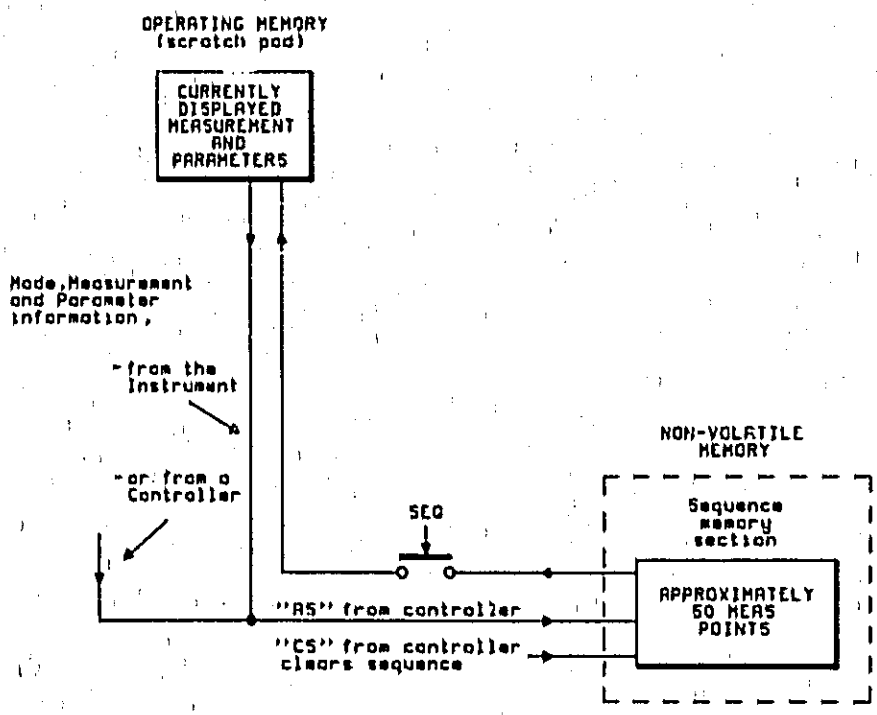

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-183 THE COMPLETE NON-VOLATILE MEMORY

4-184 By combining the facilities of the store/recall function and the sequence function, further facilities can be more readily seen. e.g. The sequence store can be used to hold additional stored parameters.

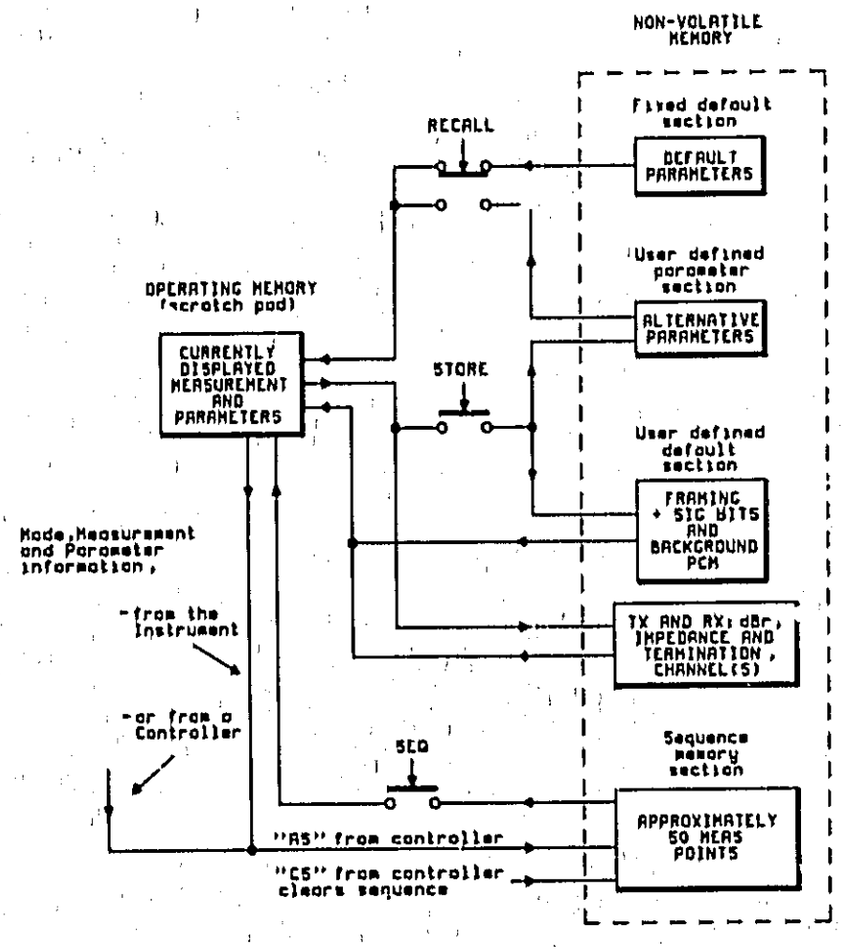

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION V
MEASUREMENT MODES AND CONFIGURATIONS

5- 1 INTRODUCTION

5- 2 The 3776 is capable of operating in two basic measurement configurations, LOOPBACK or END-TO-END. These configurations include the digital loop-through capability of the instrument. An additional mode (REMOD) is available with ENVELOPE DELAY DISTORTION measurements.

5- 3 The ANALOG or DIGITAL TRANSMITTER and/or the ANALOG or DIGITAL RECEIVER are independently selectable to give complete coverage of the OPERATING MODES available. The table on page 4-8 gives the operating modes available for particular measurements. Invalid modes cannot be selected.

5- 4 ASSOCIATED EQUIPMENT

5- 5 In all modes, a hard copy of the measurement result can be obtained by connecting an 80 COLUMN PRINTER (for single point measurements) or an HP-GL PLOTTER (for multi-point measurements) to the rear panel HP-IB connector, see OBTAINING HARD COPY OF MEASUREMENT RESULTS paragraph, 5-26, APPENDIX C Plot Options and Section 2 (The Talk Only Mode).


5- 6 Commands are available to obtain hard copy of the measurement results in the REMOTE mode via HP-IB, see section 6 HP-IB

5- 7 Individual analog voice channels of a PCM terminal can be accessed using an HP 3777A CHANNEL SELECTOR and an HP-IB controller.

5- 8 The following examples show typical, but not all, measurement configurations:


5- 9 LOOPBACK CONFIGURATIONS

5-10 A-D Local Coder Test

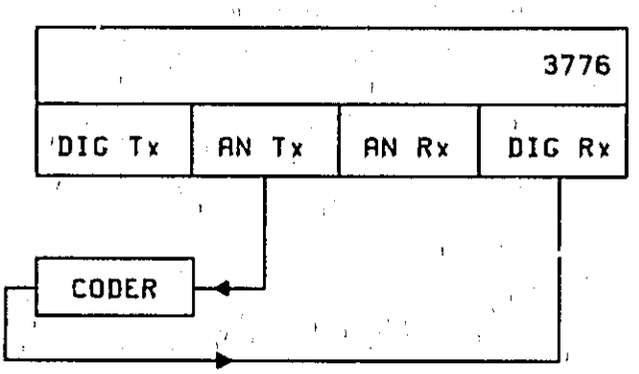


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


5-11 A-A Local Coder/Decoder Test

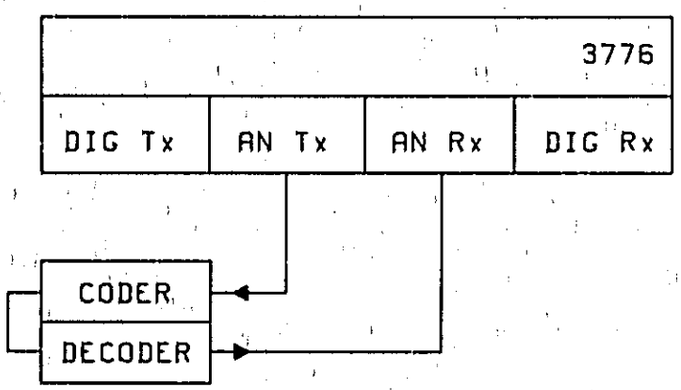

5-12 A-A Local and Remote Coder/Decoder Test

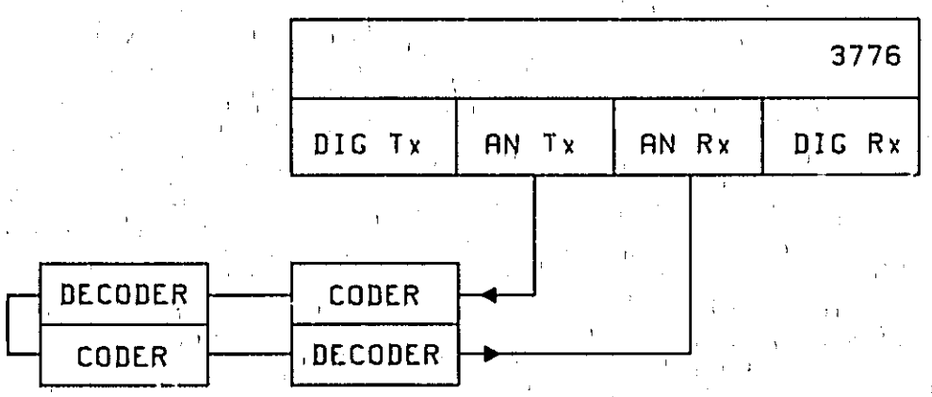


5-13 D-D Remote Coder/Decoder Test

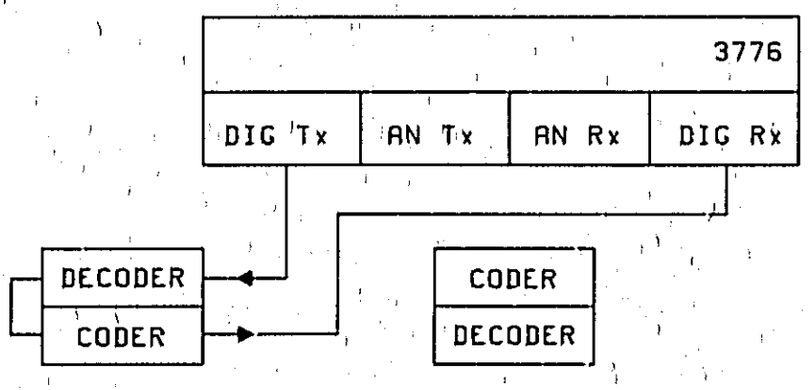

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5-14 Coder/Decoder Test Using Digital Loopthrough

5-15 This method of connection allows rapid switching between A-A, A-D and D-A operating modes.

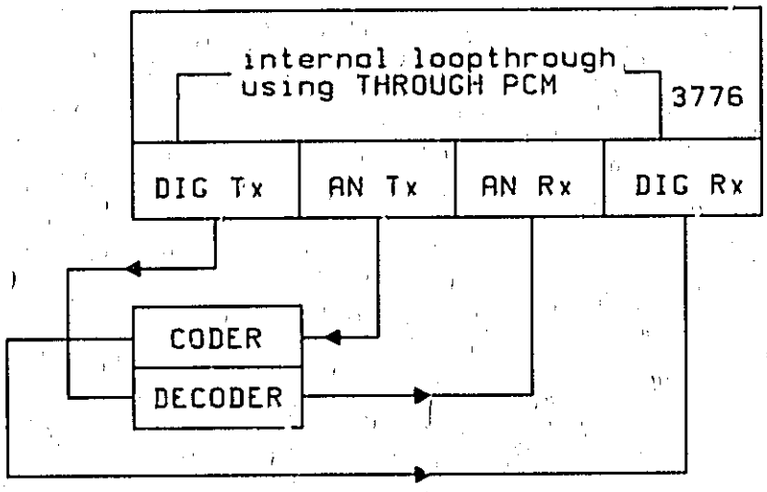

NOTE: The coder must not rely on the 3776 clock.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5-16 PCM Terminal Testing (sequential)

5-17 The HP-IB controller is required for two purposes:

1 To control the CHANNEL SELECTOR for routing the analog signals to and from individual voice channels.

2 To select the 3776 DIG Tx and DIG Rx channels which correspond to the analog channel selected (this will depend on the particular channel/timeslot mapping used) and to run the measurement when the appropriate path has been established

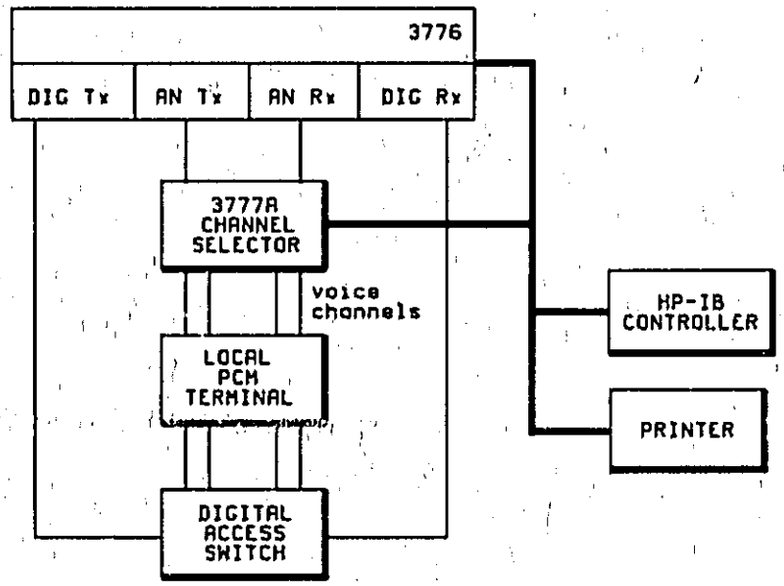


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5-18 PCM System Digital Testing (without interrupting traffic)

5- 19 The HP-IB controller is required for two purposes,

1 To control the CHANNEL SELECTOR for looping the test signals to return them to the measuring instrument.


2 To select the 3776 DIG Tx and DIG Rx channels, see figure. and to run the measurement when the appropriate path has been established.

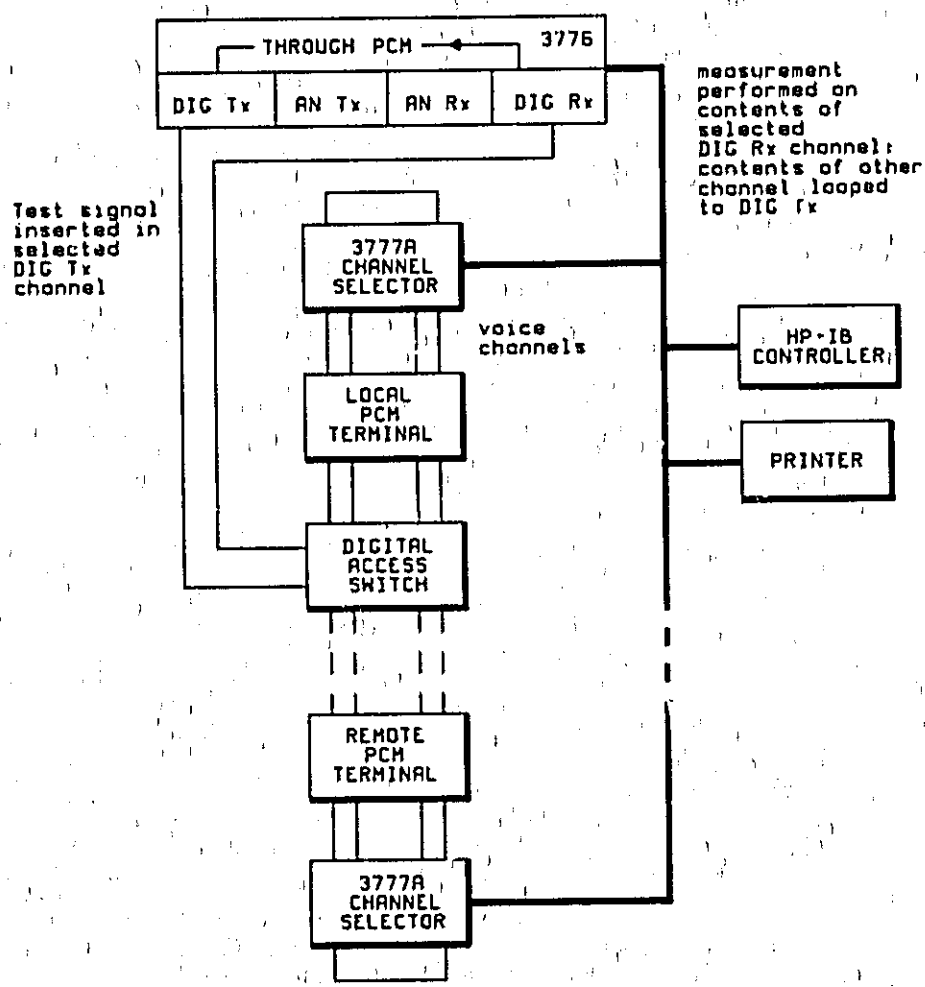

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5-20 Simultaneous Testing of More Than One Timeslot

5-21 It is possible to cascade a number of instruments using THROUGH PCM.Each instrument can insert a test signal and make measurements on one timeslot without affecting traffic in the remaining timeslots.

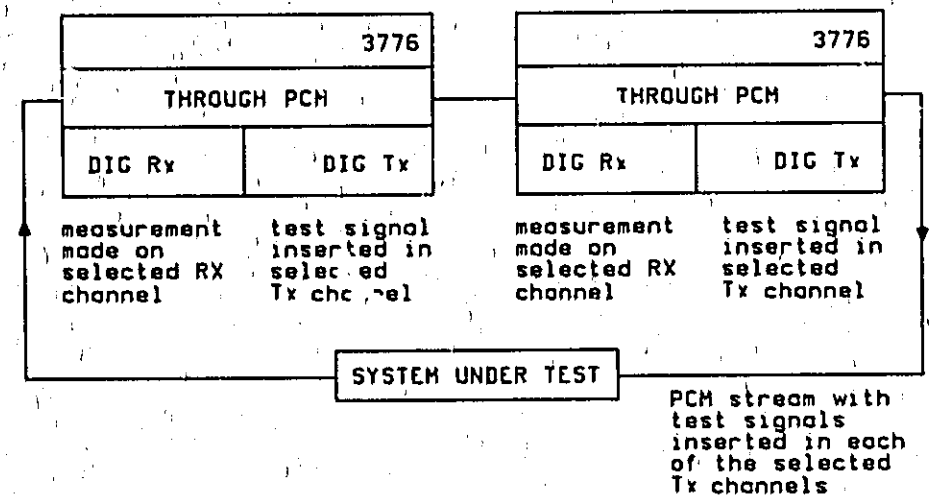

5-22 END TO END MEASUREMENTS

5-23 End to end measurements require two instruments , the local instrument providing the stimulus AN Tx or DIG Tx and the remote instrument making the measurement, AN Rx or DIG Rx. For end to end measurements the receiving instrument must initially be set to the reference levels and frequencies selected on the transmitting instrument.

5-24 Communication Over The Line Under Test

5-25 Voice communication over the line under test can be achieved by selecting SELF TEST 22. This enables a communication path between the AUXiliary I/P of the transmitting instrument to the MONitor O/P of the receiving instrument.


NOTE: the above technique has an advantage over selecting the AUX I/P, as for a level measurement, as SELF TEST 22 disables the receiver level autorange capability.

The procedure for selecting SELF TEST 22 is as follows:

Press SELF TEST. The display will show CAL "TEST 1"
Press PREVIOUS PARAM to scroll the test numbers in reverse sequence, the first display obtained is Pt22 "TEST 22".
Press RUN.
TEST 22 is a continuous state. To leave the communication mode press STOP.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5-26 A-A Local Coder/Remote Decoder Test

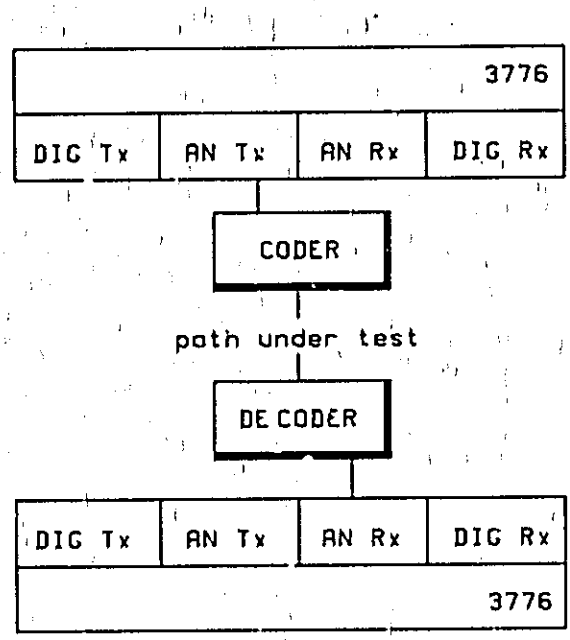

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5-27 Multi Purpose End to End Testing

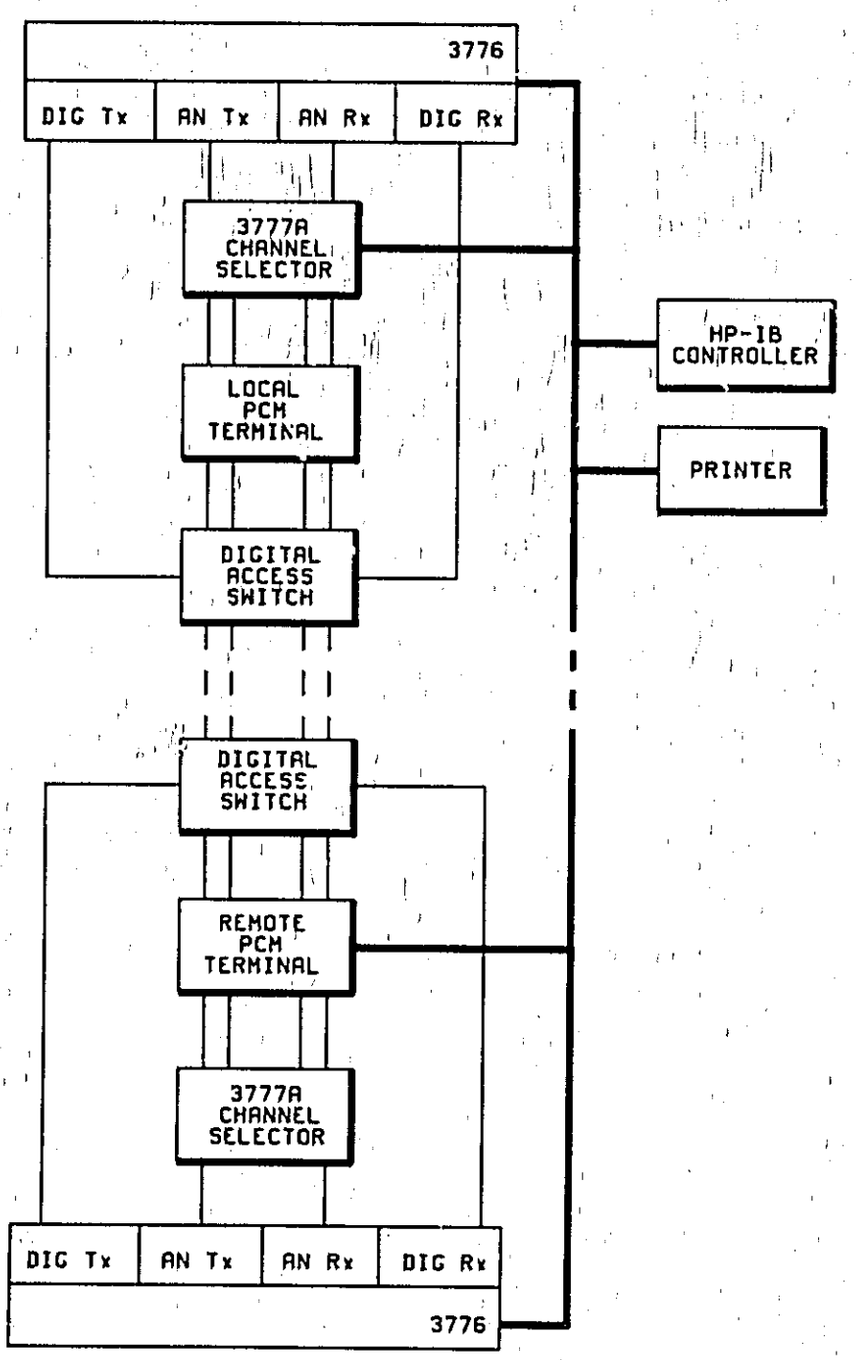

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5-28 THE AUXILIARY INPUT

5-29 Signals applied to the rear panel auxiliary input (AUX I/P) can be routed to the analog or digital output. The digital output timeslot(s) can be selected as for operation with the internally generated signals.

5-30 Details of the use of the AUX I/P are given with LEVEL MEASUREMENTS on page 4-16.

5-31 When the AUX I/P is used for communication over the line under test, it should be used in conjunction with SELF TEST 22, see page 4-16 and Appendix D.

5-32 EXTERNAL CLOCK

Provision is made for a 75Ω external digital clock input on the rear panel to allow, for example, synchronisation of the transmitter with an external "master" clock.

5-33 DIGITAL DATA OUTPUT

The rear panel DIG Rx DATA OUTPUT provides a TTL output of the received digital signal.Details are given in Appendix F.

5-34 MONITOR OUTPUT

the rear panel MON O/P (option 001 only) provides a monitor 600Ω balanced output of the measured signal after internal filtering. In the case of phase jitter measurements this output is the demodulated signal.

5-35 When the MONITOR OUTPUT is used for communication over the line under test, it should be used in conjunction with SELF TEST 22, see page 4-16 and Appendix D.

5-36 OBTAINING HARD COPY OF MEASUREMENT RESULTS

5-37 In the talk only mode, an output, suitable for a printer or plotter is provided at the rear panel HP-IB connector.

5-38 The 80 column printer output format comprises a header which includes the measurement code, operating mode and measurement parameters; and the measurement results output.


5-39 When the rear panel HP-IB ADDRESSABLE/ TALK ONLY switch is set to TALK ONLY, the required format is selected with the HP-IB ADDRESS/PRINT FORMAT switches.

5-40 The formats available are as follows:


PRINT FORMAT switch setting	Output format
0	ASCII
1	BINARY
2	80 column printer
8 to 31	plotter outputs HP GL
	A3 or A4 must = 1
	A3 and A4=1 no title or axes
	A4=1 no CCITT mask
	A2=1 auto paper advance
	A1=1 Y axis scaled
	A0=1 X axis scaled

Artisan Technology Group | Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5-41 Suitable 80 column printers are: Hewlett Packard HP 2631B, HP 2671A/G and HP 2673A. Suitable HP GL plotters are the Hewlett Packard HP 7470A, or for programmable paper advance, HP 9872C/T.

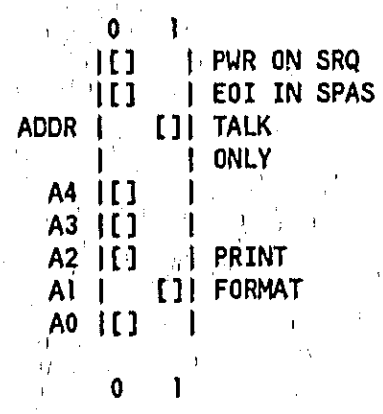

Setting for 80 column printer output.

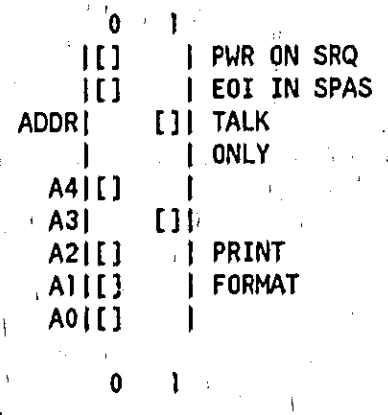

Setting for HP GL plotter output.
with title and axes
with CCITT mask
without programmable paper advance
with fixed X and Y axes

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION VI
HP-IB INFORMATION

6- 1 INTRODUCTION

6- 2 Information on installation of HP-IB, including connecting information, rear panel ADDRESSABLE/TALK ONLY switch setting and talk only mode output selection, is given in section 2 of this manual. It should be noted that the HP-IB ADDRESS is determined by the state of the HP-IB ADDRESS switches at instrument switch on. The address cannot be changed with power applied to the instrument.

6- 3 This section provides information under the following headings:

- HP-IB CAPABILITY
- HP-IB MESSAGES
- HP-IB COMMANDS
- Types of commands
- The ? form of commands
- DATA INPUT OUTPUT FORMATS
- INSTRUMENT STATUS COMMANDS
- INSTRUMENT CONFIGURATION COMMANDS
- MEASUREMENT CONFIGURATION COMMANDS
- SEQUENCE CONSTRUCTION COMMANDS
- MEASUREMENT RUNNING COMMANDS
- DATA OUTPUT COMMANDS
- DIALLING COMMANDS
- SELF TEST COMMANDS
- THE STATUS BYTES
- NOTES ON MEASUREMENT CONTROL

6- 4 HP-IB Capability

IEEE488/1978			IEEE 728	
Code	**Function**	**Capability**	**Code**	**Format/Capability**
SH	source handshake	complete	PM2	program messages as fig 24/25b in IEEE 728
AH	acceptor handshake	complete		
T5	talker	basic talker	NRD1	implicit point numeric data
		serial poll	NRD2	fixed point numeric data
		talk only mode	NRD3	floating point numeric data
		unta', if MLA	CHDF	character data field
TE	extended talker	none	BDFA	binary block data, length
L4	listner	basic listner		specified, no check
		unlisten if MTA	BDFI	binary block data, length
LE	extended listner	none		unspecified, no check
SR	service request	complete	BDFH	hexadecimal data
RL	remote/local	complete	,	comma parameter separator
PP	parallel poll	none	;	semicolon command separator
DC	device clear	complete	CRLF	CRLF command string terminator
DT	device trigger	none	NL	NL command string terminator
C0	controller	none	END	EOI command string terminator

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

IEEE 728 (cont)

Code	Format/Capability
MM1	measurement messages as fig 21a/21b in IEEE 728
NRD1	implicit point numeric data
NRD2	fixed point numeric data
BDFA	binary block data, length specified, no check
,	comma data separator
CRLF	CRLF data list separator
END	EOI data list terminator

6- 5 CALIBRATION IN REMOTE (HP-IB) MODE

6- 6 The instrument automatically self calibrates during its idle periods ie when the instrument is in the STOP state. If sufficient idle time is not available ie, with continuous operation from a controller, a 15 second wait period should be included in the program at frequent intervals for approximately 30 minutes after switch on, and then at intervals of approximately 15 minutes.

6- 7 HP-IB MESSAGES

6- 8 Device Clear and Selective Device Clear

6- 9 The device clear and selective device clear messages will return the instrument to its initial state. The control state is set to STOP. The HP-IB input and output buffers are cleared. The error queue is cleared. A-A GAIN (tone) is selected. PCM format and auxiliary input are set to rear panel switch settings All other parameters retain the setting prior to the device clear.

6- 10 Serial Poll

6- 11 Serial poll at any time retrieves the the value of the primary status byte and clears the rsv message (SRQ) line if the 3776 requested service.

CAUTION: The 3776 must be unaddressed after each serial poll. This occurs automatically with most HP-IB controllers.

6- 12 Remote Enable and Local Lockout

6- 13 The instrument can be put into the remote state by setting the REN line and addressing the instrument to listen. It can then be returned to local either by pressing the LOCAL key or by sending the GTL message. Local lockout can be acheived by sending the REN and then the LLO messages. As the LOCAL key causes bit 3 (decimal 8) of the primary status byte to be set. The controller can be alerted to the desire to return to local control and take appropriate action.

6- 14 HP-IB COMMANDS

6- 15 HP-IB commands comprise a string with two or more components. The first component is always an alpha mnemonic. When it is necessary to specify parameters, the second component represents one or more parameters. This component must contain all of the necessary parameter information in the correct order, the parameters being separated with commas. The final component of a simple string, ie a single command,

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

or of a complex string, ie a series commands separated with semi-colons must be one of the three terminators:

ASCII newline (identical to linefeed)
ASCII carriage return + linefeed
An interface EOI with the last byte of the command.

6- 16 Examples of Commands

Single command. To set the analog transmit output to 600Ω balanced the command is: AT 600,1 Cr Lf

Compound command. To set the following conditions:

operating mode AN Tx DIG Rx,
measurement GAIN TONE,
ANALOG TRANSMIT impedance 600Ω BAL,

the command is: M05;ME1;AT 600,1 Cr Lf

6- 17 COMMAND CATEGORIES

6- 18 ? Form of Commands

6- 19 Many commands have a ? form which can be used to enquire about the currently set state. The information returned is in the same form as the input using that command. The ? form can be used with all of the INSTRUMENT CONFIGURATION COMMANDS and with the MEASUREMENT SELECTION command ME? Other uses of the ? form are given with the relevant commands.

6- 20 The 3776 responds to commands which belong to one of three categories:

IE Immediate execution commands
CN Configuration commands
DO Data output commands

6- 21 Immediate Execution Commands

6- 22 These are commands which do not cause data to be returned to the controller. When it is received by the 3776 it is executed and the 3776 is ready for the next command.

6- 23 Configuration Commands

6- 24 There are two forms of configuration command:

1 A mnemonic followed by a list of parameters. These commands are similar to immediate execution commands.

2 A mnemonic followed by a question mark character ? These commands cause the 3776 to produce an output of the currently set parameters as a data list, identical in layout to the command format.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6- 25 Data Output Commands

6- 26 When a data output command is received and executed, the instrument is ready to return a data list. The controller should address the 3776 to talk and read the entire data list. The end of the data list is always marked by EOI. An instrument "hang up" as a result of failure to read the complete data list can be cleared by "device clear" or by pressing the LOCAL key twice. The output format is ASCII under the following conditions:

No output format is specified.
The output format parameter is 0.
The output format parameter is omitted.

Other output format information is given with the relavent commands and in the DATA INPUT/OUTPUT FORMATS on page 6-7.

6- 27 A list of commands with the categories to which they belong is given in the following table.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

FUNCTION	MNEMONIC	CATEGORY	NUMBER OF PARAMETERS	VALIDITY LOCAL	REMOTE STATE STOP	RUN	WAIT
Set AN Rx impedance	AR	CN	2	?	V	?	?
Add to sequence	AS	IE	0	I	V	I	I
Set AN Tx impedance	AT	CN	2	?	V	?	?
Enable/disable idle cal	CA	CN	1	I	V	I	I
Clear sequence	CS	IE	0	I	V	I	I
Set DIG Rx termination	DR	CN	1	?	V	?	?
Set DIG Tx synthesis	DT	CN	3	?	V	?	?
Report errors	ERR?	DO	0	V	V	V	V
Set PCM framing and signalling words	FS	CN	6	?	V	?	?
Device identification	ID?	DO	0	V	V	V	V
Set up idle state	IS	CN	4	I	V	I	I
Set multifrequency dialling tones	MD	CN	35	?	V	?	?
Select Measurement	ME	CN	1	?	V	?	?
Select operating mode	MO	CN	1	?	V	?	?
Set measurement parameters	MP	CN	N	?	V	?	?
Set network delay time	ND	CN	1	?	V	?	?
Output error code	OE	DO	0	V	V	V	V
Output result header	OH	DO	1	V	V	V	V
Output identifier	OI	DO	0	V	V	V	V
Output result	OR	DO	1	V*	V*	V*	V*
Output status	OS	DO	1	V	V	V	V
Output result trailer	OT	DO	1	V*	V*	V*	V*
Set PCM background idle codes	PC	CN	2	?	V	?	?
Set PCM format	PF	CN	4	?	V	?	?
Set DIG Rx channel	RC	CN	1	?	V	?	?
Set AN Rx dBr level	RL	CN	1	?	V	?	?
Recall mask	RM	IE	0	I	V	I	I
Repeat current measurement point	RP	IE	0	I	I	V	V
Enable/disable SRQ response	RQS	IE	1	V	V	V	V
Recall measurement from sequence	RS	CN	1	?	V	?	?
Set signalling dialling bits	SD	CN	5	?	V	?	?
Store mask	SM	IE	0	I	V	I	I
Set SRQ response mask	SRQ	CN	1	V	V	V	V
Single step (run next measurement point)	SS	IE	0	I	V	V	V
Stop measurement	ST	IE	0	I	V	V	V
Select loudspeaker volume	SV	CN	1	?	V	V	V
Set DIG Tx channel	TC	CN	1	?	V	?	?
Select self test	TE	CN	1	?	V	?	?
Set AN Tx dBr level	TL	CN	1	?	V	?	?

N=variable, V=valid, I=invalid, ?=? form of command valid, V*=valid if last result is still available.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

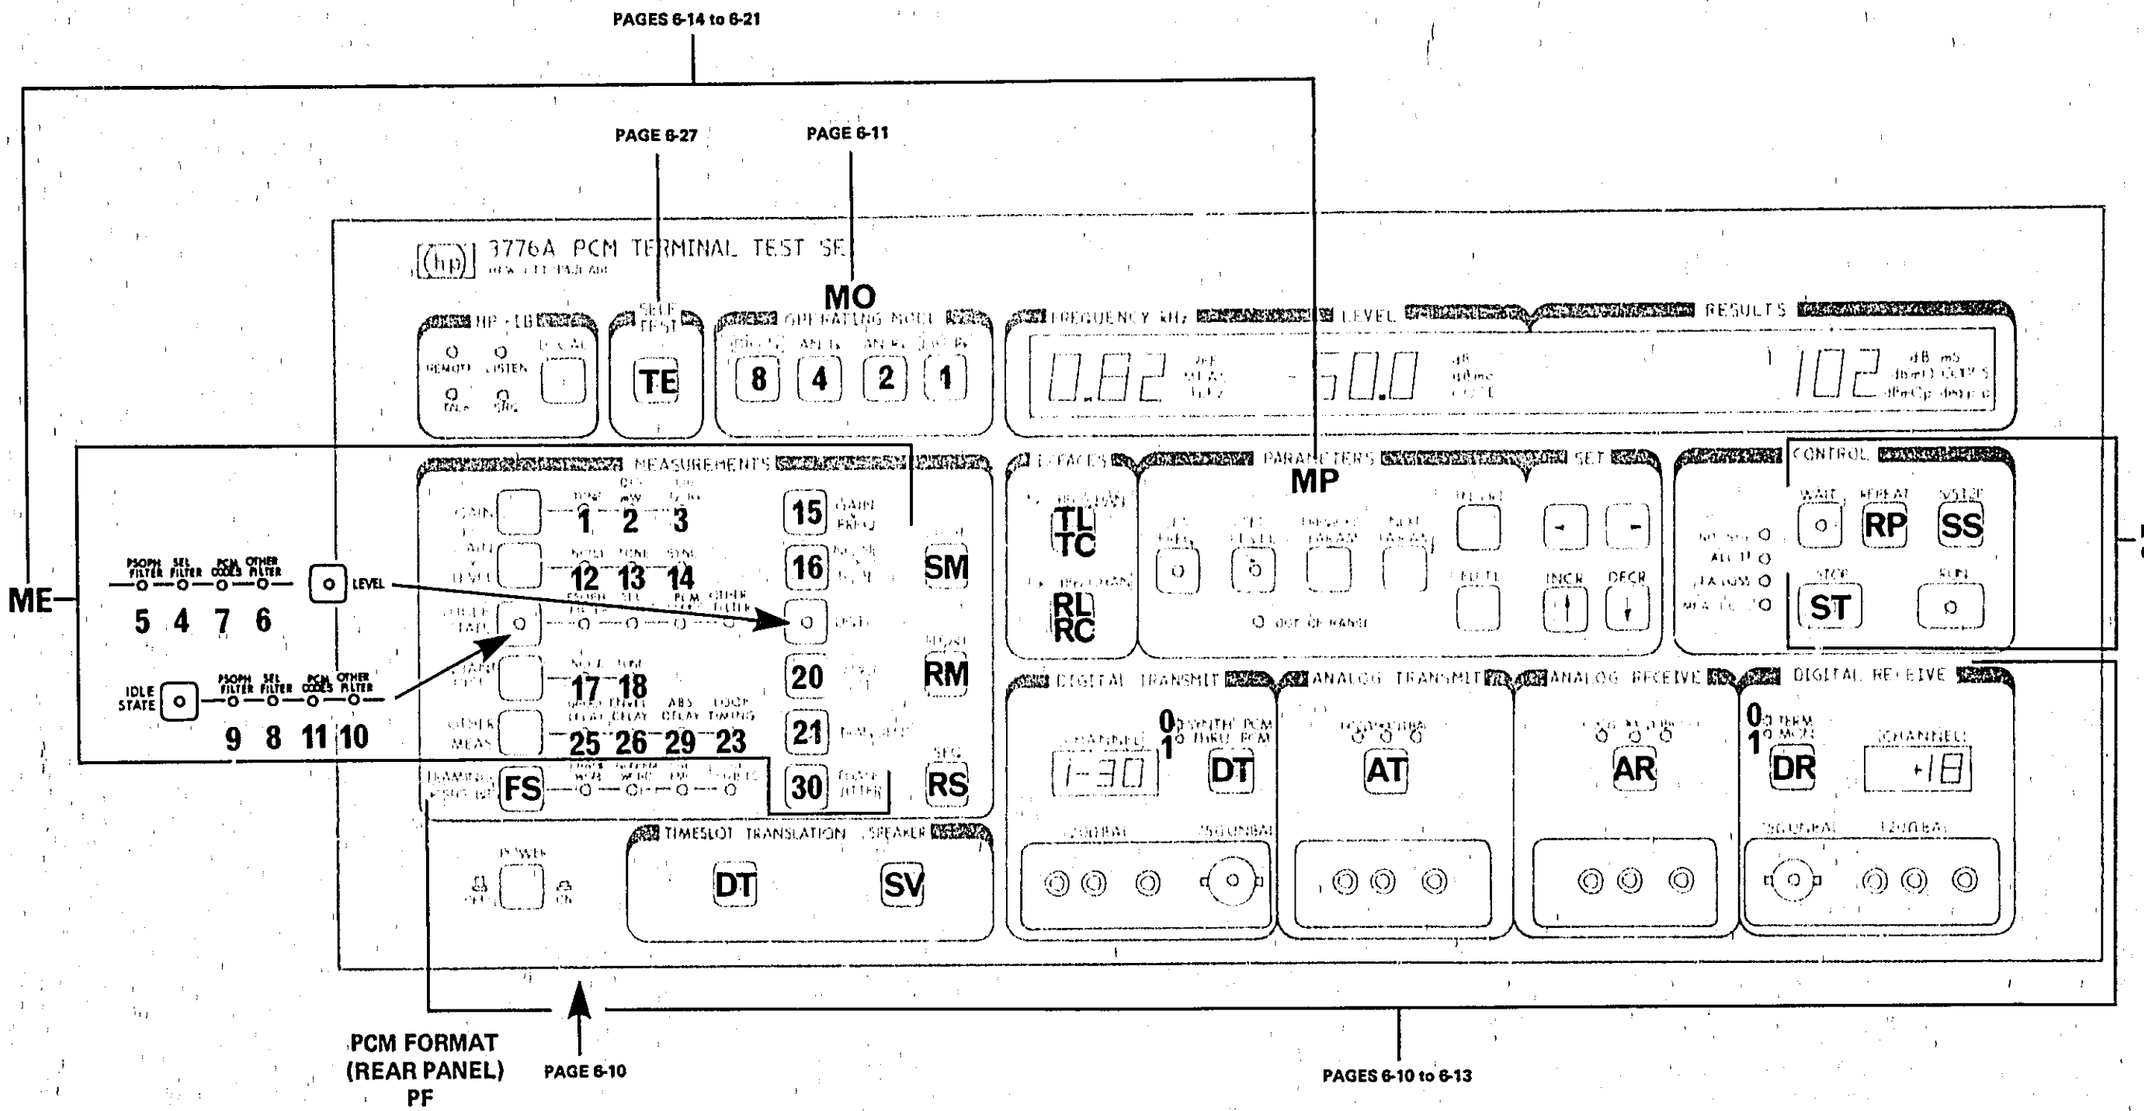


Figure 6-1 Quick Reference HP-IB Key Codes

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6-28 HP-IB INPUT/OUTPUT DATA FORMATS

6-29 Two formats are available ASCII or binary

	ASCII	BINARY
	In the ASCII format the 3776 uses a free field input algorithm, in the following table D represents one available ASCII numeric character or sign.	In the binary format all items are sixteen bit twos compliment integers the most significant byte is sent first. The binary preamble required is "#A"
Frequency	DDDDDD Hz	A sixteen bit integer Hz
Filter	DDDD (ASCII character code of filter letter code)	A null byte followed by a single ASCII character
Level	DDDD.DD dB, dBm, dBm0...	A sixteen bit integer in mbel(0.01dB)
Code	DDDD 0 to 127 use 1 to 127 -0 to -127 use 128 to 255 or -0 to -127 if suitable for controller -128 is also acceptable for -0	A null byte followed by a single byte sign +magnitude value
NOTE: Result of IDLE STATE PCM codes (average code) measurement is TWICE coded offs		
Ts word	DDDD decimal equivalent of the framing/signalling bit pattern	A null byte followed by a single byte containing the framing/signalling bit pattern if, < 8 bits right hand justify within 2nd byte.
Phase	DDDDD.D degrees Pk-Pk input in 5° steps	A sixteen bit integer in units of 0.1°, input in 5° steps.
Delay	D.DDDDDD Seconds	A sixteen bit integer in milliseconds
Time	DDD.DDD Seconds	A sixteen bit integer in milliseconds
Duration	DDDDDD minutes	A sixteen bit integer in minutes
Count	DDDDDD	A sixteen bit positive integer
Any other	DDDD or DDDDDD	4 or 6 digit integer depending on dynamic range
NOTE: Duration used for transients, time used for network delay time and dialling.		

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6- 30 INSTRUMENT STATUS COMMANDS

6- 31 Provide Status Output

```
          format
          ASCII
      OS ASCII/binary
      OS    0/1

output comprises three(4 character)fields:
       primary status byte   |_ see status byte information
     secondary status byte   |
          control state      negative value = WAIT state
                                          0 = STOP state
                             positive value = RUN state

                             cr lf
```

NOTE: When the data list has been read the primary status bits #2 (decimal 2) PCM and #3 (decimal 4) LOCAL are cleared. Bit #6 (decimal 32) SRQ is cleared when all of the causes of SRQ are removed, or by a Serial Poll.

6- 32 SRQ Disable/Enable

```
          disable/enable
RQS          0/1
RQS        OFF/ON
```

6- 33 SRQ Mask Selection

Use arithmetic sum of mask codes for conditions required.

```
SRQ       mask code
          1=result ready
          2=end of point
          4=digital receiver state change
          8=local key operation
         16=ready for next command
         32=error
         64/128 not selectable

Provide SRQ mask setting      SRQ?

          output comprises currently selected mask code
          in form used for SRQ mask selection above.
```

NOTE: The rear panel PON SRQ switch can be set to cause SRQ at power on.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6-34 Report Errors

Two commands are available OE and ERR?

(1) OE — clears instrument error code buffer. resets bit 5 (decimal 32) of the primary status byte

output comprises:
error code 0=no errors,
cr lf

(2) ERR? — clears instrument error code buffer. resets bit 5 (decimal 32) of the primary status byte

output comprises error code list in 4 categories:

Measurement errors, (detected during measurement execution)
Idle errors, detected when setting up instrument idle state
Operator errors, operation or HP-IB programming error
P on error, Power on self Test errors

6-35 Provide Measurement Parameter Output

	format
MP?	ASCII

output comprises: Header MP
Parameter list as for parameter input

6-36 Device Identification

Two commands are available OI and ID?

(1) OI
output format ASCII
output comprises 5 character string:3776A cr lf

(2) ID?
output format ASCII
output comprises: A string with the following components separated with commas.

HP3776A	
OPT 0/1	1=option 001
OPT 0/2	2=option 002
0	not currently used
REV DDDD cr lf	Firmware status code

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6- 37 INSTRUMENT CONFIGURATION COMMANDS

NOTE: The ? form of each instrument configuration command can be used to enquire the current state of the relevant parameters eg, AT? will cause "AT 600 ,1 cr lf" to be returned if the analog transmitter output impedance is set to 600Ω balanced.

6- 38 Setting-up

6- 39 Analog Transmit Impedance

```
    impedance,unbalanced/balanced
AT 600/900   ,        0/1
```

AT? causes output in above format followed by cr lf

6- 40 Analog Receive Impedance

```
    impedance,terminated/bridged
AR 600/900   ,        0/1
```

AR? causes output in above format followed by cr lf

6- 41 Digital Transmit Synthesis

The digital transmitter synthesis command needs only one parameter if synth PCM is selected, as timeslot translation is not available in this mode.

```
       pcm      ,t-slot translation
   synth/through, disabled/enabled
DT     0
DT     0/1      ,        0/1
```

DT? causes output in above format followed by cr lf

6- 42 PCM Format

```
    format,      code      , signalling, pcm clock
    30/31*,  AMI(ADI)/HDB3,  CCS/CAS   ,  int/ext
PF  0/1   ,        0/1     ,    0/1     ,   0/1
```

*channnel 31 is asigned to timeslot 16

PF? causes output in above format followed by cr lf

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6-43 PCM Framing and Signalling Bits

```
                bits
          frame alignment word,
          not frame alignment word,
          multi-frame alignment word ( Ts 16 Fm 0 word ),
          timeslot 16 signalling word ( CCS ),
          foreground timeslot 16 signalling word ( CAS ),
          background timeslot 16 signalling word ( CCS ).
     FS   decimal equivalents of binary bit patterns

     FS? causes output in above format followed by cr lf
```

6-44 PCM Background Idle Codes

```
          idle code 1,idle code 2
     PC   idle codes in PCM code format
          0 to 127  use  0 to 127
         -0 to-127  use  128 to 255 (prefered)
          0 to -127 (acceptable)
        -128 is also acceptable for -0

     PC? causes output in above format followed by cr lf
```

6-45 Digital Receive Termination

```
        terminated/monitor(30dB gain)
     DR          0/1

     DR? causes output in above format followed by cr
```

6-46 Operating Mode

```
     MO   operating mode code
           0=all off
           8=DIG Tx only
           4=AN Tx only
           2=AN Rx only
           1=DIG Rx only
           9=DIG Tx - DIG Rx
          10=DIG Tx - AN Rx
           5=AN Tx - DIG Rx
           6=AN Tx - AN Rx

     MO? causes output in above format followed by cr lf
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6-47 Analog Transmit dBr Level

```
TL  dBr

TL? causes output in above format followed by cr lf
```

6-48 Analog Receive dBr Level

```
RL  dBr

RL? causes output in above format followed by cr lf
```

6-49 Digital Transmit Channels

```
TC 0   all channels
TC +n  channel n                          (n=1 to 30/31)
TC -n  all channels except channel n

TC? causes output in above format followed by cr lf
```

6-50 Digital Receive Channel

```
RC channel n      (n=1 to 30/31)

RC? causes output in above format followed by cr lf
```

6-51 Disable/Enable Idle Cal

```
Idle cal is automatic calibration in STOP state

   CA   OFF/ON
   CA    0/1
```

6-52 Idle State (Idle state of instrument)

6-53 When the analog and digital transmitters are not in use (e.g. when the instrument is in the STOP state or when receive only is selected) they transmit a "background idle" signal:

AN Tx.....quiet termination
DIG TX (SYNTH PCM).....a pair of codes, see PC command
DIG Tx (THROUGH PCM).....the received PCM.

By use of the IS command this can be replaced with a foreground idle signal (holding tone) with selectable frequency and level. For the digital transmitter,the holding tone and signalling bits are transmitted in the currently selected channels.

6-54 Automatic calibration in the stop state must be inhibited to permit holding tone transmission. For HP-IB operation this is achieved with the CA 0 command. If the internal "cancel auto cal" switch (A 13 switch 3) is set to off (up),the instrument will transmit the programmed holding tone instead of performing auto cal in future manual operation.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

NOTE: The instrument idle state is stored in non volatile memory and is retained when the instrument is switched off. Any change will become the new default value. It should therefore be remembered that it is not possible to change the idle state from the front pannel.

```
          |   AN Tx     |    DIG Tx    |
      IS  bck-gnd/f-gnd,bck-gnd/f-gnd,freq,level
      IS        0       ,      0
      IS        0/1     ,      0/1     ,freq,level
```

6-55 Network Delay Time

```
      ND delay in milliseconds  (Rx waits before measuring)

      Max value 30seconds
```

6-56 Loudspeaker Volume

```
      SV  volume
      SV  0=off
          1=quiet
          2=loud
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6- 57 MEASUREMENT CONFIGURATION COMMANDS

6- 58 The following information combines measurement codes with their corresponding parameter codes. The measurement code (ME measurement number) alone will call up that measurement with its default parameters. The parameter selection code (MP followed by a set of measurement parameters) will replace the parameters of the currently selected measurement.

NOTE: IM must be followed with cr lf

ME? will cause the number of the currently set measurement to be returned.

MP? will cause the currently set parameter values to be returned.

6- 59 All Off

```
ME0
```

6- 60 Gain (Tone)

```
ME1; MP  meas freq,meas level

Result header:  meas,mode,Tx channel,Rx channel

Result:  meas freq,meas level,result level
```

6- 61 Gain (DIG mW)

```
ME2  fixed parameters 1.00kHz,0.0dBm0

Result header:  meas,mode,Tx channel,Rx channel

Result   meas freq,meas level,result level
```

6- 62 Digital Tx-Rx

NOTE: Rx only modes, no parameters required

```
ME3; MP  code 1,code 2
     codes -0 to -127,use of 128 to 255 prefered

Result header:  meas,mode,Tx channel,Rx channel,
                Tx code 1*,Tx code 2*
                *omitted in Rx only modes

Result   result code 1,result code 2
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6- 63 Level (Selective)

NOTE: Tx only modes, omit meas freq
Rx only modes, meas freq is the only parameter required

Internal Signal

```
ME4; MP  0,Tx freq,Tx level,meas freq
```

Auxiliary Input

```
ME4; MP  1,meas freq

Result header:  meas,mode,Tx channel,Rx channel,
                Aux flag*,Tx freq*,Tx level*
                *omitted in Rx only mode.
      Tx freq and level omitted if Aux input selected.

Result     meas freq,result level
```

6- 64 Level (Weighted)

NOTE: Rx only modes, no parameters required

Internal Signal

```
ME5; MP  0,Tx freq,Tx level
```

Auxiliary Input

```
ME5; MP  1

Result header:  meas,mode,Tx channel,Rx channel,
                Aux flag*,Tx freq*,Tx level*
                *omitted in Rx only mode.
      Tx freq and level omitted if Aux input selected.

Result     result level
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6-65 Level (Other Filters)

NOTE: Tx only mode, omit meas filter
Rx only mode, meas filter is the only parameter required

Internal signal

```
ME6; MP  0,Tx freq,Tx level  meas filter
                             65=3 kHz flat
                             66=DC block high pass
                             67=4.1 to 4.6kHz high pass
```

Auxiliary input

```
ME6; MP  1,meas filter

Result header:  meas,mode,Tx channel,Rx channel
                Aux flag*,Tx freq*,Tx level*
                *omitted in Rx only mode.
          Tx freq and level omitted if Aux input selected.

Result     meas filter,result level
```

6-66 Level (Peak Codes)

NOTE: Rx only modes, no parameters required

Internal Signal

```
ME7; MP  0,Tx freq,Tx level
```

Auxiliary input

```
ME7; MP  1

Result header:  meas,mode,Tx channel,Rx channel
                Aux flag*,Tx freq*,Tx level*
                *omitted in Rx only mode.
          Tx freq and level omitted if Aux input selected.

Result     peak +ve code,peak -ve code
```

6-67 Idle State (Selective)

```
ME8; MP  meas freq  (meas freq not applicable in
                     Tx only modes)

Result header:  meas,mode,Tx channel,Rx channel

Result   meas freq,result level
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6-68 Idle State (Weighted)

```
ME9     no parameters with this measurement
        (MP and MP? should not be used)

Result header:  meas,mode,Tx channel,Rx channel

Result   result level
```

6-69 Idle State (Other Filters)

```
ME10;MP  meas filter (meas filter not applicable
                      Tx only modes)
         65=3kHz flat
         66=DC block high pass
         67=4.1 to 4.6kHz high pass

Result header:  meas,mode,Tx channel,Rx channel

Result   meas filter,result level
```

6-70 Idle State (Average Code)

```
ME11;   no parameters with this measurement
        (MP and MP? should not be used)

Result header:  meas,mode,Tx channel,Rx channel

Result   average code
```

NOTE: Result is twice coder offset. Result output is positive, -0 to -127 provided as 128 to 255.

6-71 Gain v Level (Noise)

```
ME12;MP  ref level,meas level 1,..meas level n

Result header  meas,mode, Tx channel,Rx channel, ref level

Result   meas level,result level
```

6-72 Gain v Level (Tone)

```
ME13;MP  ref freq,ref level,meas level 1,..meas level n

Result header  meas,mode, Tx channel,Rx channel, ref freq,ref level

Result   meas level,result level
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6-73 Gain v Level (Sync 2kHz)

```
ME14;MP  ref freq,ref code,meas code 1,...meas code n

      NOTE:  ref freq must =2000Hz for this measurement

Result header  meas,mode,Tx channel,Rx channel, ref freq,ref code

Result   meas code,result level
```

6-74 Gain v Frequency

```
ME15;MP  ref freq,ref level,meas freq 1,..meas freq n

Result header  meas,mode,Tx channel,Rx channel, ref freq,ref level

Result   meas freq,result level
```

6-75 Noise with Tone

NOTE: Rx only modes, no parameters required

```
ME16;MP  Tx freq,Tx level

Result header  meas,mode,Tx channel,Rx channel,
               Tx freq*,Tx level*
               *omitted in Rx only modes

Result   result level
```

6-76 Quantising Distortion (Noise)

```
ME17,MP  meas level 1,..meas level n

Result header  meas,mode,Tx channel,Rx channel

Result   measlevel,result level
```

6-77 Quantising Distortion (Tone)

```
ME18;MP meas freq,meas level 1,..meas level n

Result header  meas,mode,Tx channel,Rx channel

Result   meas freq,measlevel,result level
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6-78 Intermod Distortion (2 Tone)

```
ME20;MP  ref freq 1,ref freq 2,ref level

Result header  meas,mode,Tx channel,Rx channel,
               ref freq 1,ref freq 2,ref level

Result   level
```

6-79 Transients

```
ME21;MP  holding freq*,
         holding level*,
         slow/fast count,
         duration,
         amplitude hits threshold code: 0=2dB 1=3dB 2=4dB 3=6dB,
         phase hits threshold,
         interruptions threshold,
         impulse count filter code:
              65=200Hz high pass + 1010Hz notch
              66=600Hz to 3kHz + 1010Hz notch
              67=300Hz to 500Hz,
         impulse counts threshold.

         *omit for Rx only mode

Result header  meas,mode,Tx channel,Rx channel
               holding freq*,holding level*,
               slow/fast count,duration,amplitude hit
               threshold code,phase hit threshold,
               interruptions threshold,impulse count filter,
               impulse count threshold.

               *omitted in Rx only mode

Result   elapsed time,amplitude hits,phase hits,interruptions,
         impulse count,+3dB impulse count,+6dB impulse count
```

6-80 Loop Timing

```
ME23  no parameters required for this measurement

Result header  meas,mode,Tx channel,Rx channel

Result   clock phase (number 0 to 15)
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6- 81 Group Delay

NOTE: In the RX only modes, group delay operates as a single point measurement. No parameters are required in these modes and the MP and MP? commands should not be used.

```
ME25;MP  ref freq,ref level,meas freq 1,..meas freq n

Result header  meas,mode,Tx channel,Rx channel,
               ref freq*,ref level*

               *omitted in Rx only modes

Result   Tx meas freq*,Rx ref freq,Rx meas freq,Rx level,delay

               *omitted in Rx only modes
```

6- 82 Envelope Delay

NOTE: In the RX only modes, envelope delay operates as a single point measurement.No parameters are required in these modes and the MP and MP? commands should not be used.

```
ME26;MP  ref freq,ref level,meas freq 1,..meas freq n

Result header  meas,mode,Tx channel,Rx channel,
               ref freq*,ref level*

               *omitted in Rx only modes

Result   Tx meas freq*,Rx ref freq,Rx meas freq,relative level,
         delay
               *omitted in Rx only modes
```

NOTE: EDD runs as a multipoint measurement without a reference point i.e. the reference point produces a result in the same way as the measurement points.

6- 83 Absolute Delay

```
ME29;MP  meas freq,meas level

Result header  meas,mode,Tx channel,Rx channel

Result   meas freq,meas level,delay
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6- 84 Phase Jitter

NOTE: In the Tx only modes, omit the Rx filter parameter. In the Rx only modes, omit The Tx freq and Tx level parameters.

```
ME30;MP  Tx freq,Tx level,Rx filter
                          65=20 to 300Hz
                          66= 3 to 300Hz

Result header  meas,mode,Tx channel,Rx channel,
               Tx freq*,Tx level*

               *cmitted in Rx only modes

Result   Rx filter,result jitter
```

6- 85 Frame Alignment Word

```
Either (1) A new frame word can be selected
or     (2) errors can be introduced into the
           standard word 10011011

ME31;MP 0, new frame word
     MP  Tx error rate code
```

ERROR RATE CODE	ERRORS
1	1 in 10^{-5}
2	5 in 10^{-5}
3	1 in 10^{-4}
4	5 in 10^{-4}
5	1 in 10^{-3}
6	2 consecutive in 4
7	Alternate (1 in 2)
8	3 consecutive in 4
9	All 1's transmitted
10	All 0's transmitted HDB3 suppressed

NOTE: Any value can be selected before the measurement start, however in the RUN state,the error rate code should be incremented/decremented in single steps or normal PCM will be transmitted in the change over period.

```
Result header        meas,mode,Tx channel,Rx channel

Result               Rx timeslot word
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6-86 Not-frame Alignment Word

Either (1) A new not-frame word can be selected
or (2) errors can be introduced into the standard word !!0!!!!!

ME32;MP 0 new not-frame alignment word
MP Tx error rate code

ERROR RATE CODE	ERRORS
1	Alternate (1 in 2)
2	3 consecutive in 4

Result header meas,mode,Tx channel,Rx channel

Result Rx timeslot word

6-87 Timeslot 16 Frame 0 Word

ME33;MP Tx Timeslot word (CAS only) (8 binary bits)

Result header meas,mode,Tx channel,Rx channel

Result Rx timeslot word

6-88 Timeslot 16 Signalling

ME34;MP Tx Timeslot word (CAS 4 bits or CCS 8 bits)

Result header meas,mode,Tx channel,Rx channel

Result Rx timeslot word

6-89 Dialling

ME40; for details see dialling section

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6-90 THE STORE AND RECALL FUNCTIONS

6-91 Store Measurement Mask

SM equivalent to front panel STORE key

6-92 Recall Measurement Mask

RM equivalent to front panel RECALL key

6-93 MEASUREMENT RUNNING COMMANDS

6-94 Measurements are performed via HP-IB using the S/STEP command. The wait state is automatically entered on completion of each step.

6-95 Single Step

SS (only valid in the stop or wait states)

6-96 Repeat

RP (only valid in the wait state)

6-97 Stop

ST (aborts current measurement)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6-98 DATA OUTPUT COMMANDS

6-99 The formats available with data outputs in this section are as follows:

```
none=ASCII
  0=ASCII
  1=BINARY
  2=80 column printer
8 to 31=HP-GL plotter, see Appendix C for details.
```

6-100 Output Result Header

```
OH,format
```

6-101 Output Result

```
OR,format
```

6-102 Output Result Trailer

```
OT,format
```

6-103 Output Error

```
OE,output in decimal cr lf
```

6-104 Output Identification

```
OI,output 5 characters string cr lf
```

6-105 MEASUREMENT SEQUENCE CONSTRUCTION COMMANDS

6-106 Clear Measurement Sequence

```
CS
```

6-107 Add Measurement to Sequence

```
AS
```

6-108 Recall from Sequence

```
RS,seq point   (number of the measurement point in the sequence,
                first point =1)
```

6-109 Enquire, Number of Measurements in Sequence

```
RS?   multi-point measurements count ].
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6-110 DIALLING COMMANDS

6-111 SET MULTIFREQUENCY DIALLING TONES

MD on time;off time,level,tone pair1,....tone pair 16

on time and off time in Seconds,resolution .001s
tone pairs in Hz.

tone pairs	digit(s) dialled
1 to 9	1 to 9
10	0
11	*
12	#
13	A
14	B
15	C
16	D

6-112 FACTORY PRESET DEFAULT VALUES

6-113 The instrument is shipped from the factory with the following tone pairs programmed:

digits	tone pair Hz	
1	697	1209
2	697	1336
3	697	1477
4	770	1209
5	770	1336
6	770	1477
7	852	1209
8	852	1336
9	852	1477
0	941	1336
11	941	1209
12	941	1477
13	697	1633
14	770	1633
15	852	1633
16	941	1633

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6-114 SET SIGNALLING BIT DIALLING PARAMETERS

```
SD on-hook code,off-hook code,mark time,space time,interdig time

 on-hook code |
              |-  decimal equivalent of binary signalling
off-hook code |   bit pattern

mark time,space time,interdigit time     integers in seconds

Factory Preset Default Parameters
     on-hook code       0
     off-hook code     15
     mark time          0.000
     space time         0.120
     interdig time      0.500
```

6-115 Dial Line Required

6-116 DIAL VIA SIGNALLING (DIG Tx ONLY)

```
ME40;MP  1,number required (n digits [MAX 40]
                            separated by commas);SS
```

6-117 MULTIFREQUENCY DIALLING (AN Tx OR DIG Tx)

NOTE: Before using analog signalling the internal calibration of the instrument should be switched off (CA 0 or CA OFF)

```
ME40;MP  2,number required (n digits [MAX 40]
                            separated by commas);SS

     code for digits of number dialled as for tone pairs above.
```

6-118 CONTINUOUS PULSE SIGNALLING (DIG Tx ONLY)

```
ME40;MP  0
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6-119 SELF TEST COMMANDS

Perform self test TE test number
Enquire,currently set test number TE?

test number	test function
0	exit self test mode,return to previous meas set-up
1	full self calibration (tests 2 to 11)
2	A Tx gain
3	A Rx gain
4	A RX autorange paths gain
5	calibrate A Rx autorange
6	A Tx attenuator paths Gain
7	calibrate A Tx attenuator
8	A Tx flatness (16kHz path)
9	A Rx flatness
10	A Tx flatness (8kHz path)
11	transients circuit gain
12	A Rx flatness / CCITT weighting mask
13	processor ROM (CRCs)
14	non volatile RAM
15	plot results RAM
16	internal instrument bus
17	front panel display test
18	analog Tx-Rx via internal test link
19	digital Tx-Rx via internal test link
20	digital filter confidence Test
21	PCM functions test
22	conversation mode

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6-120 THE STATUS BYTES

1 primary status byte

decimal equilavent of status byte	
1	result ready
2	end of measurement point
4	change of state of the digital receiver signal/alignment
8	LOCAL key has been pressed
16	instrument ready for next command (always 0 with OS)
32	an error code has been produced
64	service requested
128	instrument has just powered up (cleared by device clear or instrument configuration change)

2 secondary status byte

decimal equivalent of status byte	
1	digital Rx multiframe alignment loss
2	digital Rx frame alignment loss
4	digital Rx detected all 1s
8	no PCM signal for digital Rx
16	not assigned
32	option 001 fitted to instrument
64	option 002 fitted to instrument
128	instrument identification 3776A

3 control state

status byte value	
<0	WAIT state
0	STOP state
>0	RUN state

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6-121 NOTES ON MEASUREMENT CONTROL

6-122 Running 3776 measurements remotely is slightly different to local control using the front panel control keys. The "ST", "SS" and "RP" commands correspond to the STOP, STEP and REPEAT front panel keys, butthere are no remote equivalents of RUN and WAIT. Note also that the "RP" command is only valid in the wait state and the "SS" command is only valid in the stop or wait states.

6-123 Two bits in the primary status register are of importance in the correct control of 3776 measurements. these are bit #0 (Result Ready) and bit #1 (End-of-Point).

6-124 The 'Result Ready' bit is set whenever the the 3776 has a new result available. The "OR" command can be used to recover this result as long as this bit remains set. The bit is cleared by the "OR" command, when a "SS" or "RP" command causes the instrument to re-enter the run state, or when the instrument configuration is altered. Note that when the instrument is in a transmit only operating mode results are never generated and the 'Result Ready' will always be clear.

6-125 The 'End-of-Point' bit is set when the instrument enteres the wait state at the end of a measurement point, or the stop state at the end of a measurement. It is cleared by a "SS" or "RP" control command.

6-126 Care should be taken when designing the section of controller program that waits for changes in the above bits. The prefered method is to enable the 3776 to SRQ on the appropriate status change. A SRQ interrupt routine is then required in the controller to handle these interrupts. This may be over-complex for some operations. As an alternative the controller can implement these waits by continually reading the 3776 status until the required event happens. If this latter method is chosen, serial poll should be used to read the status. Continual execution of the "OS" command puts a high overhead on 3776 processor which will cause any measurement to progress very slowly. In very fast controllers (such as the HP9826 series) even a looped serial poll may slow down measurements significantly. If this happens insert a small delay (say 10ms) in the wait loop before each serial poll.


6-127 Be careful when using serial poll immediatly following a programming command that may change a primary status (e.g. the "SS" command). Here always make shure that the READY bit (bit #4) is set before acting on value of any other status bits. This ensures that the execution of the preceding command has been completed.

6-128 As far as the measurement control is concerned, there are five

Single Point
Multipoint
Multipoint + Reference
Framing/Signalling
Special


6-129 In Tx + Rx operating mode the first three types are controlled in a similar manner. Single point measurements are just multipoint ones with only one point. Multipoint + Reference type measurements run a reference point before the first measurement point, but this is transparrent to the controller. A typical sequence for one measurement point is performed as follows:

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

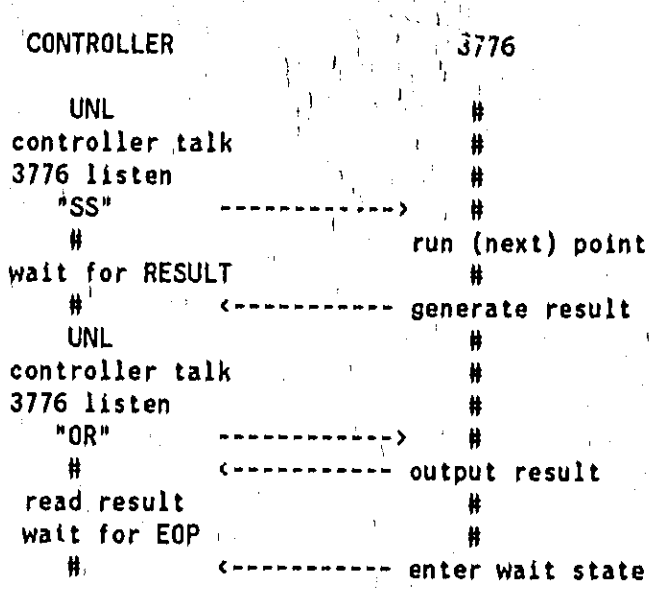

6-130 This sequence is repeated for each measurement point in the mask. The "SS" command will return the 3776 to the stop state when there are no more points to be run. Replacing the "SS" command by a "RP" command in the above sequence will run the current point again, instead of the next point.

6-131 Tx only and Rx only operating mode control is more complicated. These modes will generally only be utilised when two 3776s are used, one at each end of the circuit under test. One instrument would be in the Tx only mode and the other in the Rx only mode. A typical control sequence is performed as follows:

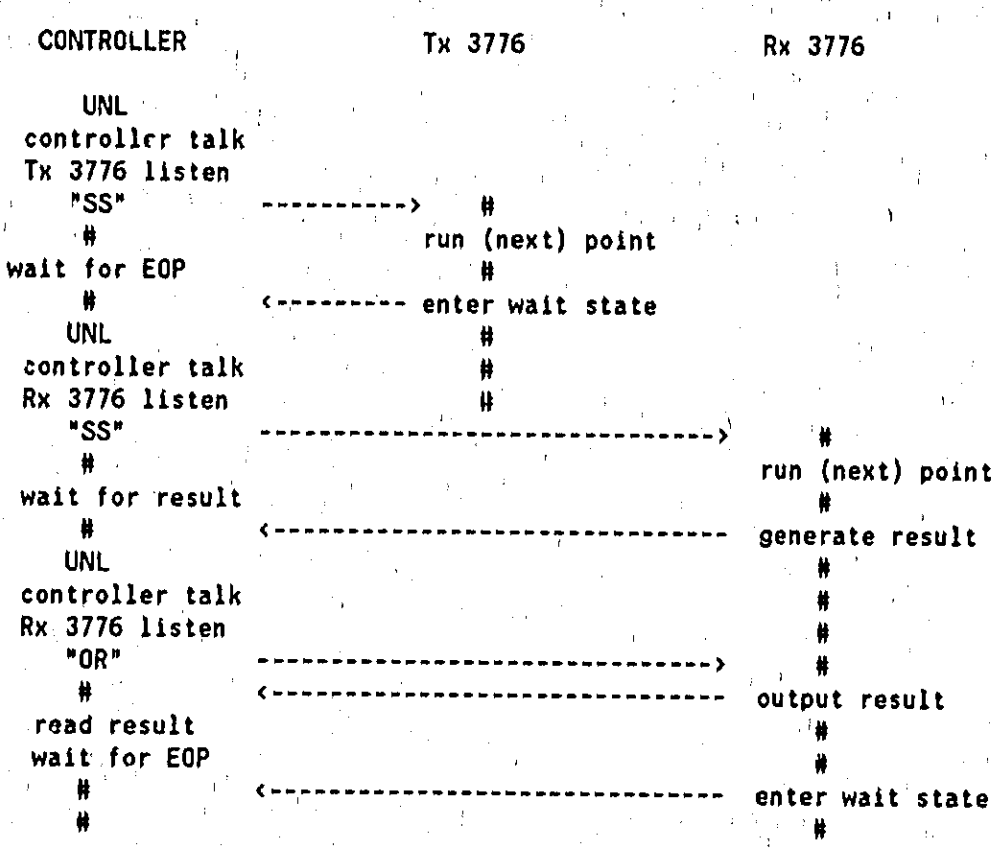

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6-132 With the Multipoint + Reference type of measurement there is an added complication in Tx only and Rx only modes. Here the reference point is not transparent to the controller. It appears as an additional point prior to the first measurement point, except that no result is generated. In the following typical sequence it is assumed that both instruments are initially in the stop state.

```
CONTROLLER              Tx 3776                 Rx 3776

   UNL
controller talk
Tx 3776 listen
   "SS"          ---------->    #
    #                          run ref point
wait for EOP                    #
    #          <---------- enter wait state
   UNL                          #
controller talk                 #
Rx 3776 listen                  #
   "SS"          ------------------------------->    #
    #                                              run ref point
wait for EOP                                         #
    #          <-------------------------------- enter wait state
   UNL                                               #
controller talk
Tx 3776 listen
   "SS"          ---------->    #
    #                          run first point
wait for EOP                    #
    #          <---------- enter wait state
   UNL
controller talk
Rx 3776 listen
   "SS"          ------------------------------->    #
    #                                              run first point
wait for result                                      #
    #          <-------------------------------- generate result
   UNL                                               #
controller talk                                      #
Rx 3776 listen                                       #
   "OR"          ------------------------------->    #
    #                                              output result
 read result                                         #
 wait for EOP                                        #
    #          <-------------------------------- enter wait state
    #                                               #
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6-133 Miscellaneous Notes

6-134 The Framing/Signalling measurements are only applicable in DIG Tx only and DIG Rx only modes. These measurements never enter the wait state. In the DIG Rx mode they produce a result whenever a relavent bit changes state.

6-135 The EDD measurement runs as a multipoint measurement WITHOUT a reference point. i.e. the reference point generates a result in the same way as the measurement points. When running EDD with remote remodulation in the signal path, the controller should set up a suitable network delay time (see the "ND" command) to allow for remodulation settling. Further details of this measurement can be obtained in "Getting The Most Out Of Your Group Delay and Envelope Delay Measurements" HP Publication 5953-5461.

6-136 The Transients measurements are a special single point measurement, they never enter the wait state. A result is produced each time an event occurs in a one minute window (although the controller does not have to read every result). The "OR" commandcan be used at any time during this measurement and the 3776 will return the latest event counts.

6-137 The Phase Jitter and Loop Timing measurements run in a continuous repeat mode and never enter the wait state. A continuous stream of results is produced which the controller has the option of reading. (Note The Phase Jitter measurement filter takes time to settle and the result should only be read after the appropriate settling time.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION VII
MANUAL UPDATES

7-1 UPDATE INFORMATION

Instruments with serial numbers of 2409U-00162 and above make change 1.

7-2 CHANGE 1

Add the following information:

Page 6-22:
The code for dialling digit 0 can be 0 or 10.

Page 6-23
SINGLE FREQUENCY DIALLING (AN Tx or DIG Tx)

NOTE: Before using single frequency dialling the internal calibration of the instrument should be switched off (CA 0 or CA OFF).

ME40;MP 3,number required (n digits [MAX 40] separated by commas);SS

Digit 16 is a null digit i.e. a space.

The frequency and level are selected from the multi-frequency dialling (MD) parameter list, the frequency being the first frequency of the first tone pair (default value 697Hz). The on time, off time and interdigit time are selected from the dial via signalling (SD) parameter list, The tone being transmitted during the "on time". All times are nominal.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

APPENDIX A

Definitions of dBm, dBmO, TLP, dBr and their uses in the 3776.

A1 In order to understand Tx dBr and Rx dBr values, it is helpful to know about the units (dBr, dBm and dBmO) used in a transmission system, and their relationship.

A2 Definition of dBm


A2-1 dBm are logarithmic units of absolute power refered to 1mW. 0dBm = 1mW

A3 The absolute power of a signal can be measured at any point in a transmission system, but it is only meaningful when related to the power which should occur at that point. This is achieved by defining a notional system reference point in the transmission system (the CTLP or 0dBr point) and describing the power of a signal at any point in the system in terms of the power which the same signal would have at the system reference point.

A4 Definition of dBm0


A4-1 If a signal is applied to the system such that the power at the system reference point is xdBm, then the nominal power is said to be xdBm0 at all points in the transmission system.

dBm0 are units describing the relative power of a signal independent of the point at which it is measured.

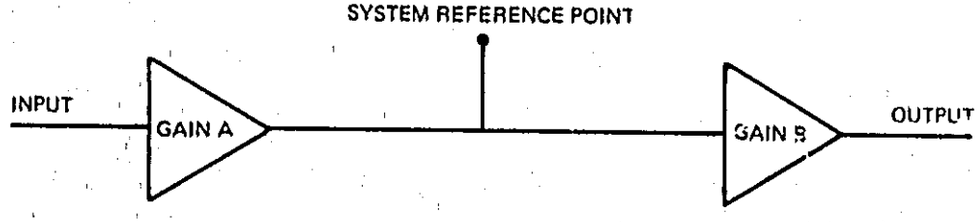


TRANSMISSION SYSTEM (as used in the following text)

A5 Standard test signals are arranged to have a level of 0dBm at the system reference point, a condition known as the nominal loading level.

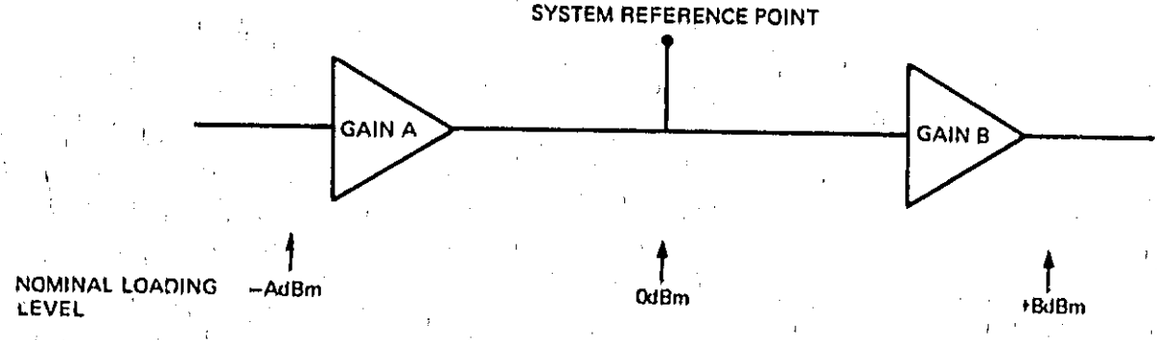

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A6 The relative power in dBm0 gives the relationship between the absolute power and the nominal loading level irrespective of the point in the system at which it is measured. dBm0 are therefore useful when making measurements over the whole length of a transmission system.

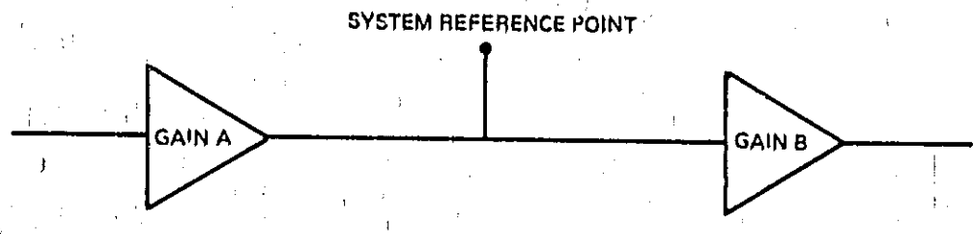


ABSOLUTE POWER	(x−A)dBm	xdBm	(x+B)dBm
NOMINAL LOADING LEVEL	−AdBm	0dBm	+BdBm
RELATIVE POWER	xdBm0	xdBm0	xdBm0

A7 Definition of dBr

A7-1 The power expected at a point in a transmission system compared with that expected at the system reference point is described as the relative level of the point and has the units dBr. Physically, the relative level of a point describes the gain or attenuation between that point and the reference, and it has the same numerical value in dBr as the nominal loading level expressed in dBm.


A7-2 If a signal is applied to a system such that the power at the system reference point is 0dBm, then the relative level of a point where the power is xdBm is said to be xdBr. dBr are units describing the relative level at a point independent of the absolute power there.

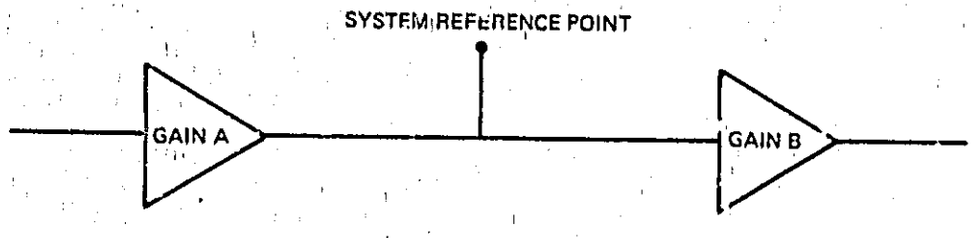

ABSOLUTE POWER	(x−A)dBm	xdBm	(x+B)dBm
RELATIVE LEVEL	−AdBr	0dBr	+BdBr
NOMINAL LOADING LEVEL	−AdBm	0dBm	+BdBm
RELATIVE POWER	xdBm0	xdBm0	xdBm0

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


A8 An example of a typical transmission system operating at a level of −10dBm0 is shown below.

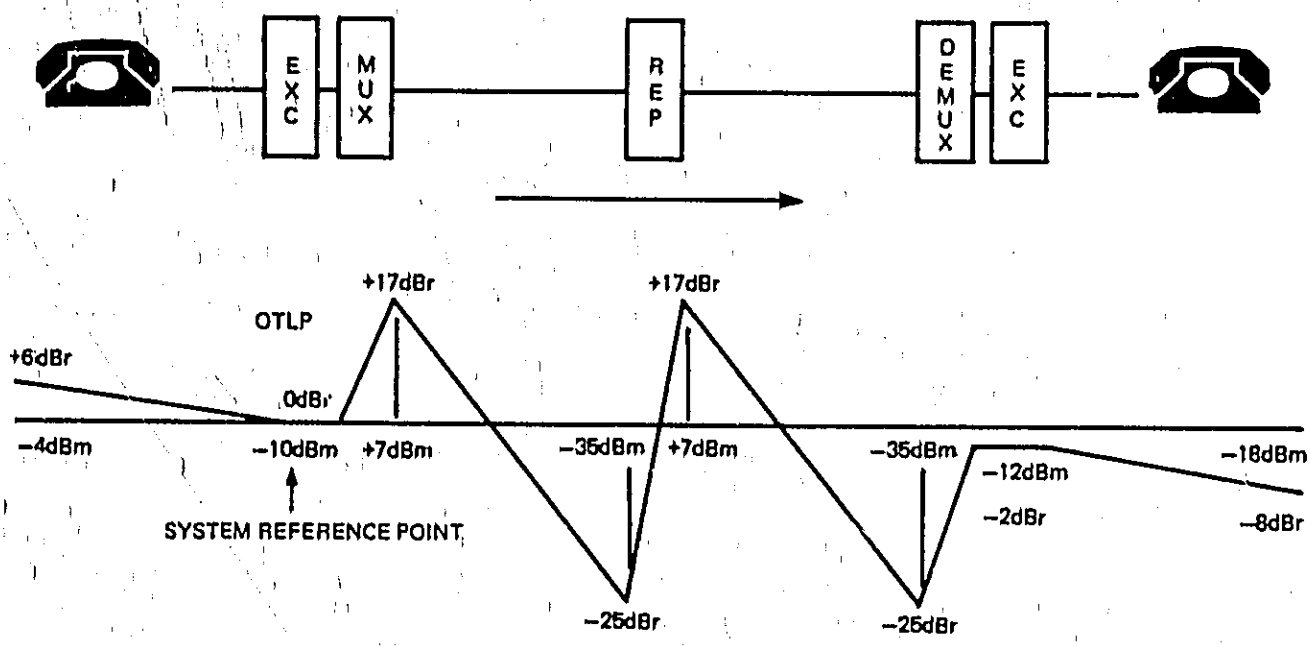

NOTE: The relative power le el (dBm−dBr) is −10dBm0 at all points.


At the system reference point dBm0 = dBm.

A9 In the 3776, LEVEL parameters are entered in units of dBm0. A value in dBm0 alone does not define the absolute power appropriate for the system under test: in order to calculate the correct absolute power for the system input (i.e. at the 3776 output), the instrument must also know the relative level (dBr) at the system input i.e. Tx dBr.

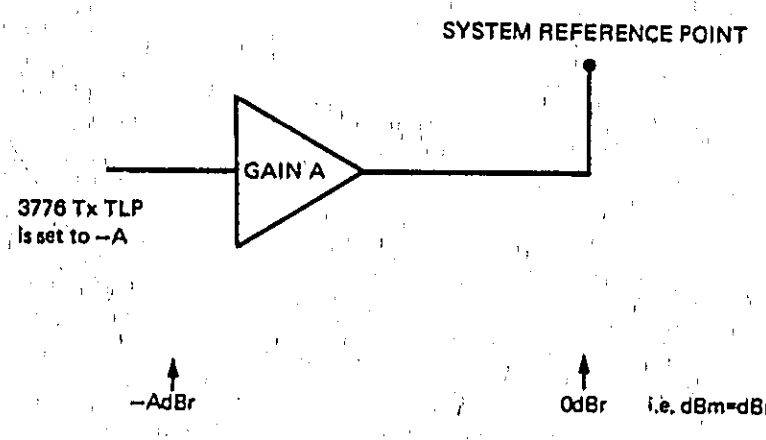

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


A10 The Tx dBr can be thought of as the negative of the gain between the input point and the system reference point. The absolute input power to the system under test is (dBmO + Tx dBr). Similarly, in order to interpret the absolute power measured at the output of the system under test in terms of power expected there, the 3776 uses the value of Rx dBr.

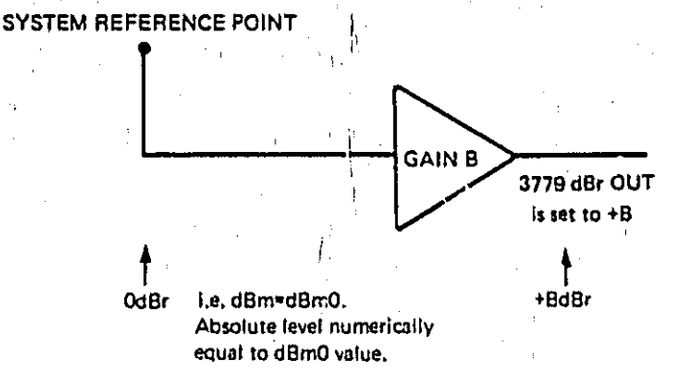

A11 The Rx dBr can be thought of as the gain between the system reference point and the output point. The expected absolute power out is (dBmO + Rx dBr).

A12 For any transmission path, Rx dBr - Tx dBr is the expected gain. The result displayed by a GAIN measurement on a 3776 is the difference between the measured absolute gain and the expected gain (Rx dBr - Tx dBr).

NOTE: If the 3776 Tx output and the 3776 Rx input are connected together, the displayed GAIN result will be -- (Rx dBr - Tx dBr). This is because Tx dBr and Rx dBr compensate for the normal gain of the system.

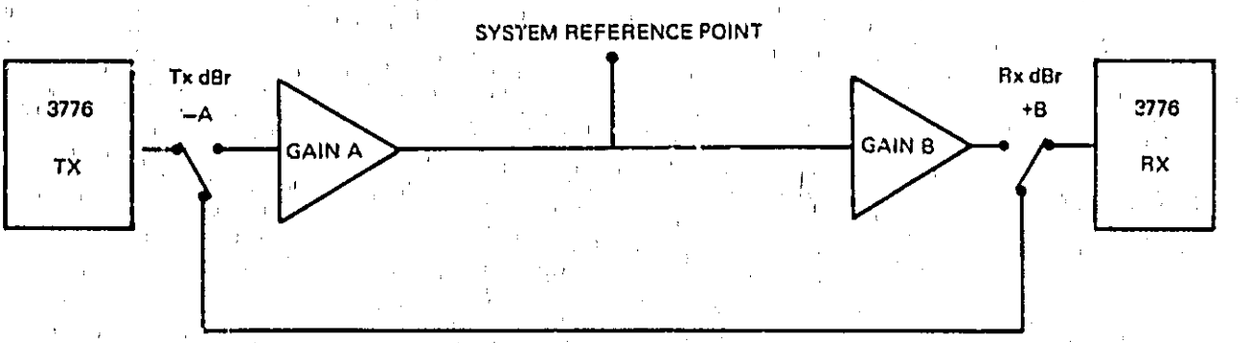

DISPLAY
–(A+B)dB
i.e. the compensation
for the system gain.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A13 Definitions of Other Units

dBmOp Signal or noise level with psophometric weighting measured in dBmO. (Using CCITT telephone weighting filter in recommendation P. 53.)

dBrnO Signal or noise level relative to the level that a tone 90dB down on the standard test tone would have at the same point in the system.


dBrnCO Signal or noise level with C-Message weighting measured in dBrnO.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

APPENDIX B

PCM Frame Structure

European 2048 kbit/s PCM Frame Structure (CAS)
(CCITT Rec G.732)

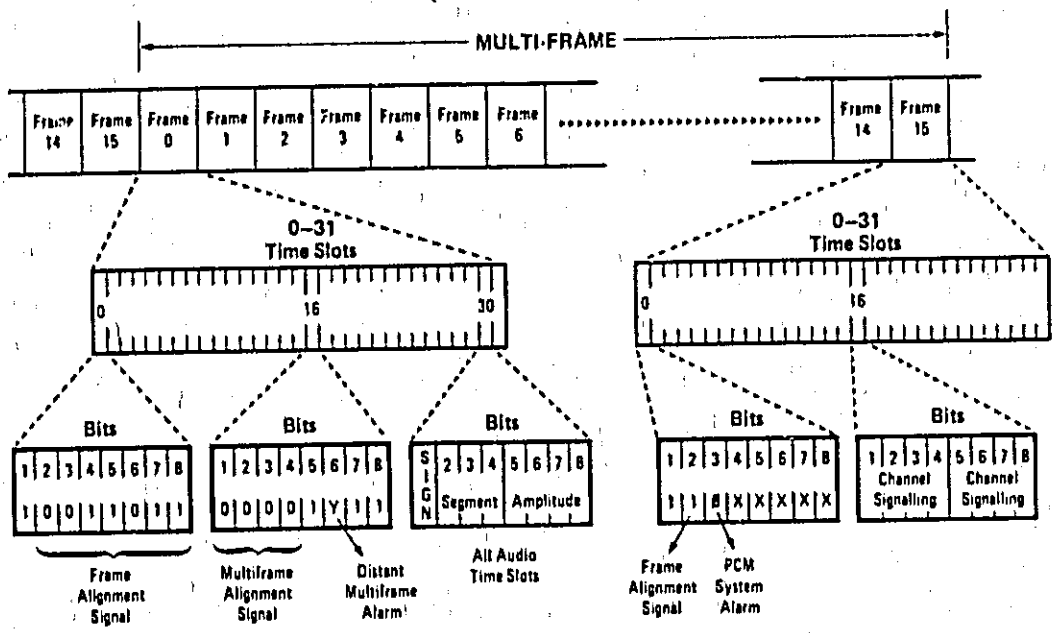

The FRAME WORD - the 8 bits that appear in timeslot 0, Frame 0 (TS0/FM0) and all subsequent alternate frames. Bits 2 to 8 constitute the frame alignment word.

The NON-FRAME WORD - the 8 bits in TS0 in the alternate frames that do not contain the frame word.

TimeSlot 16, Frame 0 - the 8 bits containing the multiframe alignment bits and the system alarms in timeslot 16 of frame 0.

TS16 SIGnalling BITS - the four signalling bits associated with the selected channel. These are automatically extracted from the signalling bits which appear in timeslot 16 of all the frames except FM 0.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

APPENDIX C

PLOT OPTIONS

C1 The following table gives the rear panel switch setting (Format Number) for the various plotter output formats available.

Format Number	Plot Title and Axis	Plot CCITT Mask	Auto Paper Eject	Scale Y Axis	Scale X Axis
8	●	●			
9	●	●			●
10	●	●		●	
11	●	●		●	●
12	●	●	●		
13	●	●	●		●
14	●	●	●	●	
15	●	●	●	●	●
16	●				
17	●				●
18	●			●	
19	●			●	●
20	●		●		
21	●		●		●
22	●		●	●	
23	●		●	●	●
24					
25					●
26				●	
27				●	●
28			●		
29			●		●
30			●	●	
31			●	●	●

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

APPENDIX D
SELF TEST AND CALIBRATION

D1 Automatic Calibration

D1-1 The 3776 performs a number of self calibration and self test procedures. When the instrument is switched on it automatically performs a calibration cycle. If an attempt is made to run a measurement before the calibration cycle is complete the start of the measurement will be delayed. Any faults which prevent generation of the calibration correction figures are indicated at this stage. Note that when a measurement run is performed only the appropriate calibration figures are used. Recalibration occurs automatically when the instrument is in the STOP state.

D2 Self Test

D2-1 The self test program contains 22 points or "tests". These "tests" include calibration, tests, and the facility to select communication over the system under test, "conversation mode". When the SELF TEST key is pressed, the display shows point 1. points 1 to 22 can be displayed by using the NEXT PARAM and PREVIOUS PARAM keys. Select the required point (listed in the table below) and press RUN to perform that "test".

D2-2 Note that test 1 "CAL" generates all of the intrenally needed calibration values which are generated individually in tests 2 to 11. In test 1 no attempt is made to use the values generated, it therefore indicates only major failures.Out of range calibration figures will be indicated when an attempt is made to use them, either during a measurement or when the individual test points 2 to 11 are performed.

D2-3 Note that "test" 22, conversation mode, is accessed in the same way as other tests. this mode provides connection between the rear panel AUX I/P, the MON O/P and the system under test without autoranging.

D2-4 The following table provides a list of tests with their coresponding numbers:

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Test Number	Test Function
1	full self calibration (tests 2 to 11)
2	AN Tx gain
3	AN Rx gain
4	AN Rx autorange paths gain
5	calibrate AN Rx autorange
6	An Tx attenuator paths Gain
7	calibrate AN Tx attenuator
8	AN Tx flatness (16kHz path)
9	AN Rx flatness
10	AN Tx flatness (8kHz path)
11	transients circuit gain
12	AN Rx flatness/CCITT weighting mask
13	processor ROM (CRCs)
14	non volatile RAM
15	plot results RAM
16	internal instrument bus
17	front panel display test
18	analog Tx-Rx via internal test link (see Appendix E)
19	digital Tx-Rx via internal test link
20	digital filter confidence Test
21	PCM functions test
22	conversation mode

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

APPENDIX E

OPERATIONAL TROUBLESHOOTING 3776A

E1 The following information details some of the conditions which can give rise to operational dificulties.

PROBLEM	POSSIBLE CAUSE/CURE
ANALOG GAIN/LEVEL measurement producing consistantly incorrect results	TLP not set, default value is automatically set to value at last switch off.
CLOCK ERRORS, ALL MODES	Rear panel DIG Rx CLOCK I/P set to EXT with no external input.
END TO END MEASUREMENT producing incorrect results	Reference level/frequency of receiving instrument must be set to reference of transmitting instrument.
FRAMING/SIGNALLING or BACKGROUND PCM preventing correct operation	Previously selected data stored and is now new default condition. Receiver expects frame word: 10011011. Multiframe alignment, first four bits of timeslot 16 frame 0: 0000
IDLESTATE (WEIGHTED) digital operation. Wrong background PCM output.	For DIG TX only or DIG Tx DIG RX, transmitted background PCM is +0,-0. For DIG RX only, transmitted background PCM is stored DIG Tx/Rx codes.
INSTRUMENT "HANGS UP" AS A RESULT OF NOT READING COMPLETE DATA LIST OVER HP-IB	Send DEVICE CLEAR or press LOCAL key twice.
KEYS INOPERATIVE	Instrument not in STOP state or in REMOTE mode.
MEASUREMENT SELECTION INHIBITED	Measurement not valid in currently selected operating mode e.g. selection of GAIN (Digital mW) with AN Tx OPERATING MODE selected. See also KEYS INOPERATIVE.
SELF TEST 18 FAILS	Analog receiver should not be set to BRIDGED.
TIMESLOT TRANSLATION INOPERATIVE	Timeslot translation requires THRU PCM selection.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

APPENDIX F

THE DIG Rx DATA OUTPUT


F1-1 The rear panel digital receive data output provides a TTL low true open collector output which can be used for further processing by other instruments or systems. The outputs provided are:

OUTPUT	PIN No
PCM BIT PATTERN	8
RECEIVER CLOCK	14
DATA VALID	1
FRAME SYNC	4
MULTIFRAME SYNC	5
CONTROL SIGNAL	10


The following information provides further details of these outputs.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


F2 PCM BIT PATTERN (serial, NRZ data with ADI, most significant bit first)

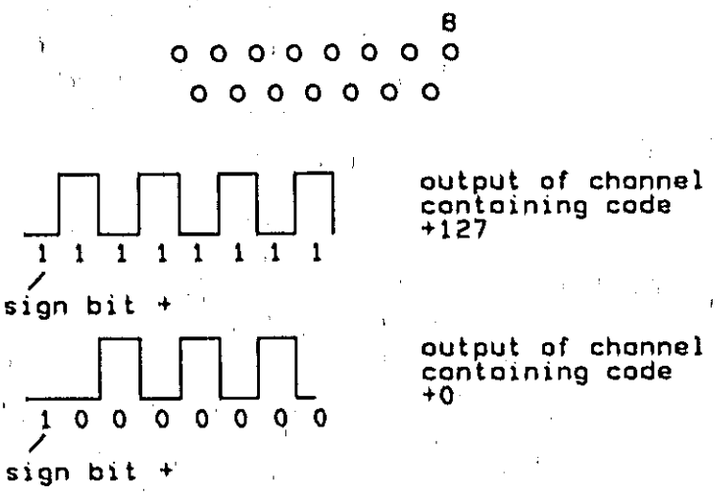

F3 RECEIVER CLOCK




F3-1 The receiver clock signal is always present when the instrument is switched on. The following figure shows the relationship between the receiver clock signal, the PCM bit patern (pin 8) and data valid (pin1)

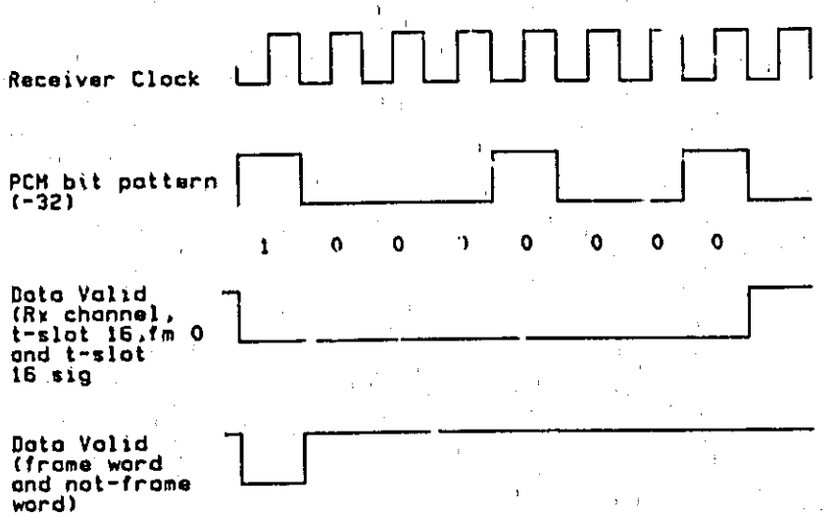


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

F4 DATA VALID

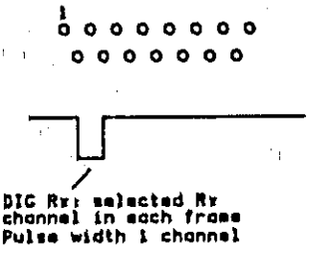


		Pulse Width
F4-1 DIG Rx FRAMING and SIGNALLING	location of frame word,	1 clock period
	not-frame word,	1 clock period
	timeslot 16 frame 0	1 channel
	or timeslot 16 sig bits.	1 channel

F4-2 The following figure shows the DATA VALID signals for the Rx framing and signalling, relative to the frame sync (pin 4) The relationship between data valid, PCM data and receiver clock signals is given in the RECEIVER CLOCK information.

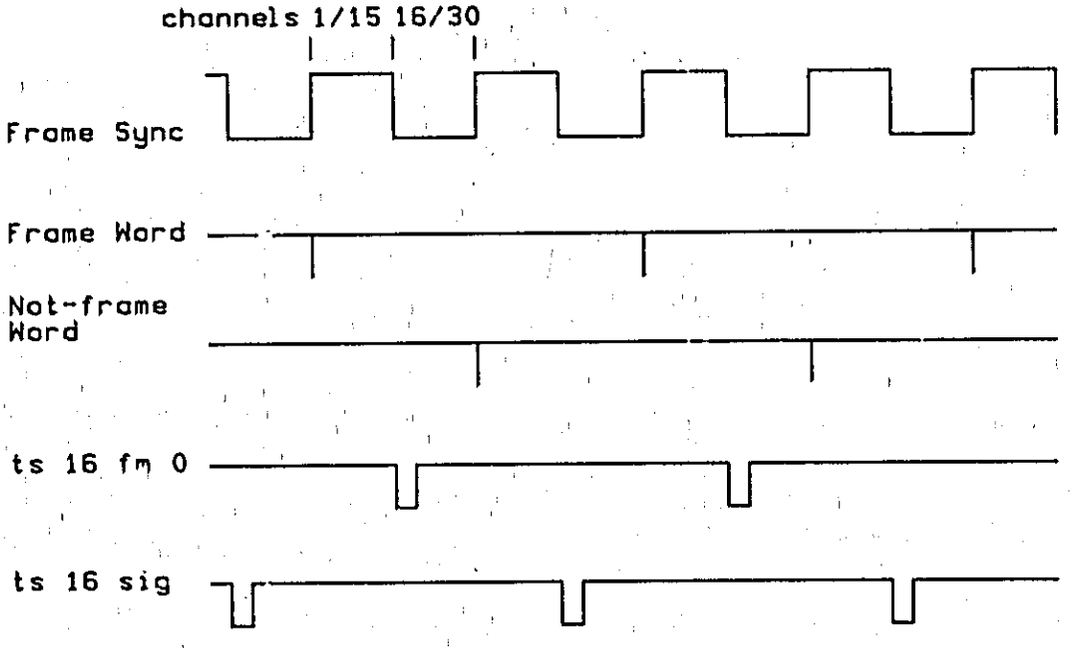


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

F5 FRAME SYNC

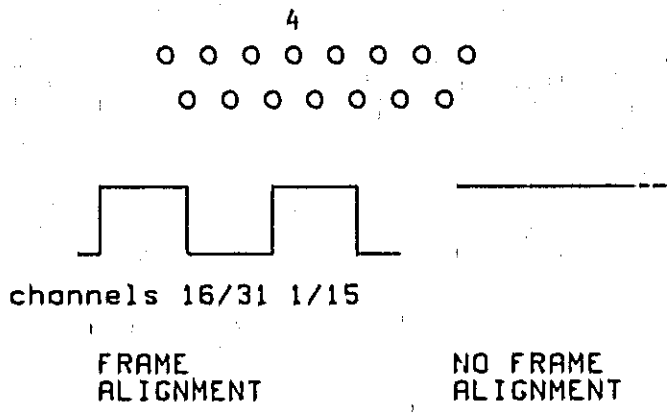

F6 MULTIFRAME SYNC

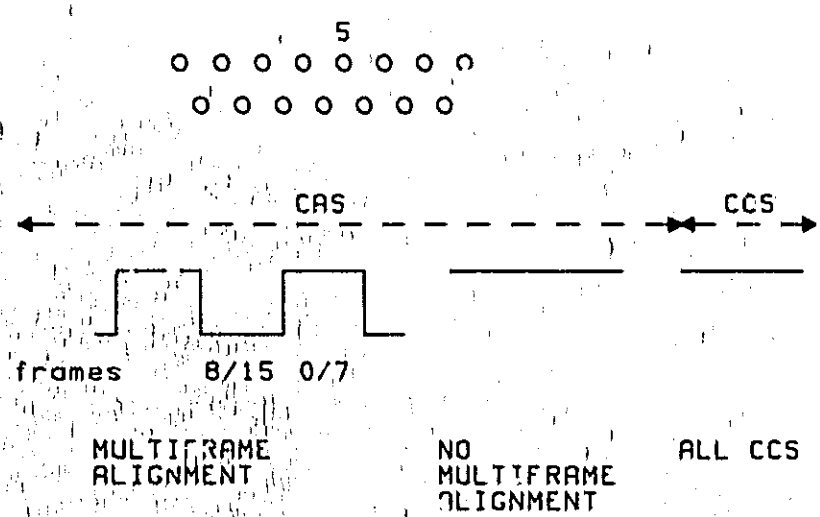

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

F7 CONTROL SIGNAL
(TIMESLOT 16 SIGNALLING UPPER/LOWER NIBBLE INDICATOR)

O O O O O O O O
O O O O O O O
10

For timeslots 16 signalling (CAS) the location of the signalling bits in the timeslot depend on the channel.

Channel timeslot 16 of frame 0	Channel timeslot 16 of frame 1		Channel timeslot 16 of frame 15	
0000xyxx	abcd channel 1	abcd channel 16	abcd channel 15	abcd channel 30
	lower nibble	upper nibble		

x = spare bit to be made 1 if not used
Y = bit used to indicate loss of multiframe alignment
abcd = signalling bits

F7-1 This information is part of CCITT recomendation G.732. For additional information see G.732

F7-2 When the DIG Rx timeslot 16 mode (CAS) is used the CONTROL signal indicates the appropriate nibble for the Rx channel selected:
The CONTROL signal is a constant level, high (false) for the lower nibble and low (true) for the upper nibble.

HIGH LEVEL (false)	LOW LEVEL (true)
A receive channel in the range 1 to 15 and all other modes	A receive channel in the range 16 to 30

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

APPENDIX G

Coded Selectable Filters

CODED SELECTABLE FILTERS

This table provides details of the filters which are defined by coded displays.

Measurement	FILTER A (ascii 65)	FILTER B (ascii 66)	FILTER C (ascii 67)
LEVEL "OTHER FILTERS"	3kHz flat	dc block high pass	HF Bandpass 4.1 to 4.6kHz
IDLE STATE "OTHER FILTERS"	3kHz flat	dc block high pass	HF Bandpass 4.1 to 4.6kHz
TRANSIENTS-IMPULSES	200Hz high pass +1010Hz notch	600Hz to 3kHz +1010Hz notch	300 to 500Hz
PHASE JITTER	20 to 300Hz	3 to 300Hz	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

APPENDIX H
ERROR CODES

ERROR CODES

Abbreviations

AN analog
DIG digital
meas measurement
Rx receiver
Tx transmitter
BDFA HP-IB binary data list (See IEEE 728)
crc cyclic redundancy code

ERROR CODE	ERROR INDICATED
	OPERATING/PROGRAMMING ERRORS
1	Incorrect HP-IB command string syntax
2	HP-IB command string too long
3	Unrecognised HP-IB command
4	HP-IB command parameter out of range
5	HP-IB command parameter missing
6	Too many command parameters
7	Unsupported block data format
8	Zero or negative byte count in BDFA data list
9	Byte count in BDFA data list is greater than the number of subesequent bytes
10	Odd number of bytes in binary format data list
11	Command ignored, instrument in local
12	HP-IB command out of context
13	Meas not defined for this instrument
14	Meas not available in current mode
15	Option hardware not present for this meas
16	Incorrect PCM format for framing/ signalling meas selected
17	Channel 31 requested with 30 channel format selected (rear panel switch)
18	Add to sequence failed: meas cannot be sequenced, mode not back to back (ie A-A, D-A, A-D or D-D)
19	Add to sequence failed: not enough room in memory
20	Recall from sequence failed: no sequence present or beyond end of sequence
21	Recall mask failed: no mask stored for this meas
22	Format parameter in OH OR or OT command is undefined
23	HP-IB interface error, Addressed to talk but no listeners present
24	Rear panel switch changed when running
25	Parameter out of range during run time
26	Provided for factory service
27	Not used
28	Provided for factory service
29	Not used
30	No clock for DIG Tx, check rear panel EXT CLOCK switch
31	Loss of DIG Rx alignment/signal
32	No DIG Rx signal/alignment in THROUGH PCM mode, or suspect synthesiser clock clock because of alignment loss For analog operation SYNTH PCM must be selected
33	AN I/P level too high
34	Signal too small to measure
35	Signal too unstable for autorange
36	AN Rx overloaded following auto- range, signal too unstable
37	DIG filter overload, signal level too high or too unstable
38	Rx level too low to measure in reference section of meas
39	No modulation envelope present for delay meas
40	Group delay carrier changeover irrecoverable, group delay signal may not be present
41	DIG filter overload during settling group delay signal may not be suitable.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ERROR CODE	ERROR INDICATED
42	Group delay sync loss, reference level too low or no 166Hz burst
43	Meas section of group delay waveform is too small
44	Coder offset too great (outside bottom two segments), or >3276 expanded code steps
45	Power failure recovery, significant in transients, remod etc.
46	Impulse threshold out of range because Rx signal level is too high or too low
47	Group delay level too low,
48	dc offset in group delay signal out of range
49	Not used
	MEASUREMENT SOFTWARE FAULTS
50/61	Repeat the operation to confirm the fault
::	These codes are provided for factory service
::	purposes
64/69	Details are given in the service manual
62	Detected power above expected limit in group delay
63	Detected power below expected limit in group delay
	CALIBRATION ERRORS
70	Repeat the operation to confirm the error
::	condition. These codes are provided for
::	factory service purposes
79	Details are given in the service manual
	MEASUREMENT HARDWARE FAULTS
80	Primary autorange hardware fault
81	Secondary autorange timeout
82	Secondary autorange analog input high
83	Secondary autorange hardware fault
84	Secondary autorange analog input level too low
85	Loss of sync between AN Rx and digital filter
86	Loss of sync between DIG Rx and digital filter
87	No digital filter handshake for more than 2ms
88	Digital filter 28 bit hardware overflow
89	Group delay frequency counter overflow
90	Option A/D converter failed to convert, data ready flag read 20 times.
91	Digital receiver timeout
92	Digital receiver not programming correctly
93/94	Not used
95	HP-IB IC has misplaced an SRQ
96	Spurious or untraceable interrupt
97	Display bus timeout
98	Instrument bus timeout
99	Transient power failure detected
	POWER-ON SELF TEST ERRORS
100	Processor memory fault
101	ROM or rom version number not present
102	ROM crc check failure
103	Processor peripheral interface adaptor faulty
104	Multiple interrupt requests from keyboard during keyboard test
105	Display bus test timeout
106	Display ram test failure
107	Instrument bus test timeout
108	Instrument bus read/write test failure
109	Instrument bus hardware fault
110	Instrument bus timeout detection inoperative
111	-117 non-volatile memory test failures
111	Power-on defaults crc check failure
112	Stored masks crc check failure
113	Measurement sequence crc check failure
114	Dual tone multi-frequency dialing table crc check failure
115	NVM incorrect for this instrument
116	NVM ram test failure
117	ROM mapping failure, possible faulty ram
118	Group delay/plot results list ram faulty
119	Memory assembly faulty, do not continue
120	Configuration not saved at last power-down, will always occur when the A13 processor assy reset button is pressed
121	Unable to restart power-fail protected measurement. inconsistant configuration. probably rear panel switches have been changed
130	-137 digital filter self test errors (these affect both AN Rx and DIG Rx)
130	Error in down loading program
131	LDATAREADY (status sign bit) at incorrect rate
132	Input bus error
133	Unable to clear data ram
134	Failed to increment carry-out counter
135	Digital filter hardware fault
136	Digital filter hardware fault
	SYSTEM SOFTWARE ERRORS
200	Repeat the operation to confirm the error
::	
::	These codes are provided for factory service
214	purposes

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

INDEX

Accessories available . . . 1-3
Accessories supplied . . . 1-3
Analog Rx impedance . . . 3-17
Analog Tx impedance . . . 3-17
Auxiliary input for level measurements . . . 4-16
Auxiliary input . . . 5-9
Background PCM selection, example . . . 3-13
Background PCM selection . . . 4-6
Battery, internal . . . 2-10
Calibration, automatic . . . appendix D
Channel Rx selection, example . . . 3-14
Channel selection, also see Interface
Channel(s) Tx selection, example . . . 3-14
Clock errors, all modes . . . appendix E
Code AMI(ADI)/HDB3 selection . . . 4-5
CODED SELECTABLE FILTERS . . . append G
CONTROL keys, example . . . 3
Communication over the line under test . . . 4-16, appendix
Connectors, mating . . . 2-3
Data valid output, selected channel/framing and signalling . . . appendix F
Data valid, PCM bit pattern, Rx clock relationship . . . appendix F
dBm definition . . . pendix A
dBm0 definition . . . appendix A
dBm0p definition . . . appendix A
dBr definition . . . appendix A
dBr, also see Interface
dBr, Rx setting example . . . 3-5
dBr, Tx setting example . . . 3-4
dBr, effect on gain/level measurements . . . 3-6
dBrn0 definition . . . appendix A
dBrnC0 definition . . . appendix A
DELETE function, example . . . 3-10
Deletion of measurement points . . . 4-37
DIG Rx DATA OUTPUT . . . appendix F
Digital Rx data output (rear panel connector) . . . 2-9, appendix F
End to end operation . . . 5-6
ERROR CODES . . . appendix H
External clock . . . 5-9
Features available . . . 1-3
Filter selection, level/idle state, other filters . . . 3-17
Filters A, B and C identification . . . appendix G
Foreground PCM selection, example . . . 3-15
Frame Format 30/31 channel selection . . . 4-5
Frame sync output . . . appendix F
Framing and signalling bit selection . . . 4-5
Framing and signalling bits HP-IB . . . 6-21/22
Framing and signalling bits . . . 4-31
GENERAL INFORMATION . . . SECTION I
GETTING STARTED . . . SECTION 3
HP-IB ? form of commands, general . . . 6-3

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HP-IB ? form of commands, validity 6-5
HP-IB background idle code selection 6-11
HP-IB balanced/unbalanced, analog transmitter 6-10
HP-IB capability IEEE488 6-1
HP-IB capability IEEE728 6-1
HP-IB channel digital receive 6-12
HP-IB channel(s) digital transmit 6-12
HP-IB command categories 6-3
HP-IB commands, examples 6-3
HP-IB commands, general information 6-2
HP-IB configuration commands, general information 6-3
HP-IB connector 2-6
HP-IB continuous pulse signalling 6-26
HP-IB dBr, analog receive 6-12
HP-IB dBr, analog transmit 6-12
HP-IB data output command 6-24
HP-IB data output commands, general information 6-4
HP-IB device clear 6-2
HP-IB device identification 6-9
HP-IB dial via signalling 6-26
HP-IB dialling commands 6-25
HP-IB digital receive termination 6-11
HP-IB frame format 30/31 channel selection 6-10
HP-IB framing and signalling bit selection 6-11
HP-IB function/number of parameters required 6-5
HP-IB function/validity table 6-5
HP-IB holding tone . . . . . 6-12, appendix E
HP-IB identification output 6-24
HP-IB idle cal disable/enable selection 6-12
HP-IB idle state (instrument) 6-12
HP-IB immediate execution commands, general information 6-3
HP-IB impedance, analog receiver 6-10
HP-IB impedance, analog transmitter 6-10
HP-IB INFORMATION . . . . . SECTION 6
HP-IB input/output data formats 6-7
HP-IB installation 2-6
HP-IB instrument configuration commands 6-10
HP-IB instrument status commands 6-8
HP-IB internal/external clock selection 6-10
HP-IB key codes, quick reference 6-6
HP-IB local lockout 6-2
HP-IB loudspeaker volume 6-13
HP-IB measurement configuration commands 6-14
HP-IB measurement parameter output 6-9
HP-IB measurements---see measurements
HP-IB messages 6-2
HP-IB mnemonic listing 6-5
HP-IB multifrequency dialling tones 6-25
HP-IB multifrequency dialling 6-26
HP-IB network delay time 6-13
HP-IB operating mode selection 6-11
HP-IB output formats (rear panel switches) . . . . . 2-8, appendix C

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HP-IB PCM code AMI(ADI)/HDB3 selection . . . 6-10
HP-IB PCM format . . . 6-10
HP-IB provide status output . . . 6-8
HP-IB recall measurement mask . . . 6-23
HP-IB remote enable . . . 6-2
HP-IB repeat command . . . 6-23
HP-IB report errors . . . 6-9
HP-IB result error output . . . 6-24
HP-IB result header output . . . 6-24
HP-IB result output . . . 6-24
HP-IB result trailer output . . . 6-24
HP-IB running measurements . . . 6-23
HP-IB selective device clear . . . 6-2
HP-IB self test commands . . . 6-27
HP-IB sequence commands . . . 6-24
HP-IB sequence, add command . . . 6-24
HP-IB sequence, clear command . . . 6-24
HP-IB sequence, number of measurements enquiry . . . 6-24
HP-IB serial poll . . . 6-2
HP-IB signalling CCS/CAS selection . . . 6-10
HP-IB signalling bit dialling parameter setting . . . 6-26
HP-IB single frequency dialling . . . 7-1
HP-IB single step command . . . 6-23
HP-IB SRQ disable/enable . . . 6-8
HP-IB SRQ mask selection . . . 6-8
HP-IB status bytes . . . 6-28
HP-IB stop command . . . 6-23
HP-IB store measurement mask . . . 6-23
HP-IB synthesised/through PCM selection . . . 6-10
HP-IB timeslot translation . . . 6-10
Impedance --- see Interface
Incomplete HP-IB data list read "hang up" . . . appendix E
Incorrect background PCM in idle state weighted . . . appendix E
Incorrect operation, framing/signalling/background PCM . . . appendix E
Incorrect results for end to end measurements . . . appendix E
Incorrect results in analog gain/level measurements . . . appendix E
Inoperative keys . . . appendix E
Inoperative timeslot translation . . . appendix E
INSERT function, example . . . 3-9
Insertion of measurement points . . . 4-37
Inspection, initial . . . 2-1
INSTALLATION . . . SECTION 2
Instrument description . . . 1-2
Instruments covered by manual . . . 1-1
Interface setting, analog receiver dBr . . . 4-3
Interface setting, analog receiver impedance, bridged/terminated . . . 4-3
Interface setting, analog transmitter dBr . . . 4-3
Interface setting, analog transmitter impedance, bal/unbal . . . 4-3
Interface setting, digital receiver channel . . . 4-5
Interface setting, digital receiver terminated/monitor . . . 4-4
Interface setting, digital transmitter PCM, synth/through . . . 4-4
Interface setting, digital transmitter channel(s) . . . 4-4

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Keys inoperative . . . . . appendix E
Loopback operation 5-1
Loopthrough, PCM 4-2
MANUAL UPDATE . . . . . SECTION 7
Mating connectors 2-3
Measurement configuration examples 5-2/5-8
Measurement detail information, key 4-7
MEASUREMENT MODES AND CONFIGURATIONS . . . . . SECTION 5
Measurement selection 4-7
Measurement sequences 4-41
Measurement/specification index 1-5
MEASUREMENTS . . . . . SECTION 4
Measurements, Absolute delay HP-IB 6-20
Measurements, Absolute delay 4-28
Measurements, Dialling HP-IB 6-25
Measurements, Dialling 4-28
Measurements, Digital Tx-Rx HP-IB 6-14
Measurements, Digital Tx-Rx 4-9
Measurements, Envelope delay distortion HP-IB 6-20
Measurements, Envelope delay distortion 4-26
Measurements, Frame alignment word HP-IB 6-21
Measurements, Frame alignment word 4-32
Measurements, Gain dig mW HP-IB 6-14
Measurements, Gain dig mW 4-8
Measurements, Gain tone HP-IB 6-14
Measurements, Gain tone 4-8
Measurements, Gain v frequency HP-IB 6-18
Measurements, Gain v frequency 4-10
Measurements, Gain v level 2kHz sync HP-IB 6-18
Measurements, Gain v level 2kHz sync 4-13
Measurements, Gain v level noise HP-IB 6-17
Measurements, Gain v level noise 4-11
Measurements, Gain v level tone HP-IB 6-17
Measurements, Gain v level tone 4-12
Measurements, Group delay distortion HP-IB 6-20
Measurements, Group delay distortion 4-24
Measurements, Idle state PCM codes (coder offset) HP-IB 6-17
Measurements, Idle state PCM codes (coder offset) 4-15
Measurements, Idle state other filters HP-IB 6-17
Measurements, Idle state other filters 4-16
Measurements, Idle state selective HP-IB 6-16
Measurements, Idle state selective 4-15
Measurements, Idle state weighted filter HP-IB 6-17
Measurements, Idle state weighted filter 4-14
Measurements, Intermod 2 tone HP-IB 6-19
Measurements, Intermod 2 tone 4-23
Measurements, Level PCM codes HP-IB 6-16
Measurements, Level PCM codes 4-19
Measurements, Level other filters HP-IB 6-16
Measurements, Level other filters 4-20
Measurements, Level selective HP-IB 6-15
Measurements, Level selective 4-18

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Measurements, Level weighted filter HP-IB 6-15
Measurements, Level weighted filter 4-17
Measurements, Loop timing HP-IB 6-19
Measurements, Loop timing 4-28
Measurements, Not-frame alignment word HP-IB 6-22
Measurements, Not-frame alignment word 4-32
Measurements, Notched noise HP-IB 6-18
Measurements, Notched noise 4-14
Measurements, Phase jitter HP-IB 6-21
Measurements, Phase jitter 4-34
Measurements, Quantising distortion noise HP-IB 6-18
Measurements, Quantising distortion noise 4-21
Measurements, Quantising distortion tone HP-IB 6-18
Measurements, Quantising distortion tone 4-22
Measurements, Timeslot 16 frame 0 word word HP-IB 6-22
Measurements, Timeslot 16 frame 0 word word 4-33
Measurements, Timeslot 16 signalling bits HP-IB 6-22
Measurements, Timeslot 16 signalling bits 4-33
Measurements, Transients HP-IB 6-19
Measurements, Transients 4-29
Measurements, throw clear index/valid modes 4-8
Monitor output 5-9
Multi point measurement operation, example 3-7
Multiframe alignment word---see measurements timeslot 16 frame 0
Multiframe sync output . . . . . appendix F
Non-volatile memory 4-43
NOTES ON MEASUREMENT CONTROL 6-29
Operating environment 2-3
Operating mode selection 4-2
OPERATIONAL TROUBLESHOOTING . . . . . appendix E
Options 1-4
Parameter changing, multi point example 3-8
Parameter changing, single point example 3-6
Parameters changing in multipoint measurements 4-35
Parameters selection 4-35
PLOTTER CONFIGURATIONS (rear panel switches) . . . . . appendix C
PCM bit pattern output . . . . . appendix F
PCM format selection 4-5
PCM FRAME STRUCTURE . . . . . appendix B
Plotter output 5-9
Power cable 2-2
Power requirements 2-2
Preparation for use 2-1
Print format switch settings (plotter configurations) . . . . . appendix C
Print/plot output formats . . . . . 2-8, appendix C
Printer output 5-9
Rack mounting 2-5
RECALL, function example 3-6
RECALL function 4-38
Safety information 2-1
Selection of measurements inhibited . . . . . appendix E
SELF TEST . . . . . appendix D

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Self test 18 failure . . . . . appendix E
SEQUENCE operation 4-41
Sequences containing continuous measurements 4-42
Sequences 3-17
Shipment 2-9
Signalling CAS/CCS selection 4-5
Single point measurement running, example 3-5
SPEAKER key, example 3-11
Specification/measurement index 1-5
Specifications 1-6
Storage 2-9
Store and recall framing, signalling and background PCM 4-39
Store and recall user defined interface default parameters 4-40
STORE function 4-38
STORE, function example 3-6
Store/recall user defined parameters 4-38
Switch on, default state 3-2
Switch on, instrument routine 3-2
Talk only configuration 2-7
Timeslot 16 upper/lower nibble indicator . . . . . appendix F
TIMESLOT TRANSLATION 4-6
Timeslot translation inoperative . . . . . appendix E
TLP definition . . . . . appendix A
Transients 3-17
UNITS, DEFINITIONS . . . . . appendix A
UPDATE INFORMATION 7-1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP