

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Keysight / Agilent E1407A* at our website: ***Click HERE***

HP E1403C and HP E1407A C-Size Active Adapter Module

Installation and User's Manual

Where to Find it - Online and Printed Information:

System installation (hardware/software)	VXIbus Configuration Guide* HP VIC (VXI installation software)*
Module configuration and wiring	This Manual
VXI*plug&play* programming	VXI*plug&play* Online Help
VXI*plug&play* example programs	VXI*plug&play* Online Help
VXI*plug&play* function reference	VXI*plug&play* Online Help
Soft Front Panel information	VXI*plug&play* Online Help
VISA language information	HP VISA User's Guide
HP VEE programming information	HP VEE User's Manual

**Supplied with HP Command Modules, Embedded Controllers, and VXLink.*

Manual Part Number: E1403-90034
Printed in U.S.A. E0397

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Contents

Warranty 3
Safety Symbols 4
WARNINGS 4
Declaration of Conformity 5
Reader Comment Sheet 7

Chapter 1
General Information 9
Introduction 9
C-Size Adapter Description 9
HP E1403C Adapter Description 9
HP E1407A Adapter Description 10

Chapter 2
Installation/Removal Instructions 11
Preparing for Installation 11
Installing A-Size VMEbus Modules (HP E1403C Only) 11
Installing an Adapter Module with a B-Size VXIbus Module 12
Removing the Adapter Module and B-Size Module 15

Chapter 3
Using the Adapters 17
HP E1403C Block Diagram 17
HP E1403C Connector Pinout 18
HP E1407A Block Diagram 19
HP E1407A Connector Pinout 20
Installing the J2 Connector Cable (HP E1407A Only) 21
Purpose of the J2 Cable 21
Install the J2 Cable 21
Ribbon Cable (J2) Connector Pinout 23
Selecting the TTL Trigger Direction (HP E1407A Only) 24
Selecting the ECL Trigger Direction (HP E1407A Only) 25
SUMBUS Configurations (HP E1407A Only) 26
Disconnecting the SUMBUS 26
Adding Buffer Circuitry to the SUMBUS 26

Appendix A
HP E1403C and HP E1407A Specifications 27
Product Characteristics 27
Power Requirements 27
Cooling Requirements 27

Index 29

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Certification

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology (formerly National Bureau of Standards), to the extent allowed by that organization's calibration facility, and to the calibration facilities of other International Standards Organization members.

Warranty

This Hewlett-Packard product is warranted against defects in materials and workmanship for a period of three years from date of shipment. Duration and conditions of warranty for this product may be superseded when the product is integrated into (becomes a part of) other HP products. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by Hewlett-Packard (HP). Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country

HP warrants that its software and firmware designated by HP for use with a product will execute its programming instructions when properly installed on that product. HP does not warrant that the operation of the product, or software, or firmware will be uninterrupted or error free.

Limitation Of Warranty

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied products or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

The design and implementation of any circuit on this product is the sole responsibility of the Buyer. HP does not warrant the Buyer's circuitry or malfunctions of HP products that result from the Buyer's circuitry. In addition, HP does not warrant any damage that occurs as a result of the Buyer's circuit or any defects that result from Buyer-supplied products.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Exclusive Remedies

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

Notice

The information contained in this document is subject to change without notice. HEWLETT-PACKARD (HP) MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HP shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material. This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company. HP assumes no responsibility for the use or reliability of its software on equipment that is not furnished by HP.

U.S. Government Restricted Rights

The Software and Documentation have been developed entirely at private expense. They are delivered and licensed as "commercial computer software" as defined in DFARS 252.227- 7013 (Oct 1988), DFARS 252.211-7015 (May 1991) or DFARS 252.227-7014 (June 1995), as a "commercial item" as defined in FAR 2.101(a), or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987)(or any equivalent agency regulation or contract clause), whichever is applicable. You have only those rights provided for such Software and Documentation by the applicable FAR or DFARS clause or the HP standard software agreement for the product involved



HP E1403C/E1407A User's Manual
Edition 4
Copyright © 1997 Hewlett-Packard Company. All Rights Reserved.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Documentation History

All Editions and Updates of this manual and their creation date are listed below. The first Edition of the manual is Edition 1. The Edition number increments by 1 whenever the manual is revised. Updates, which are issued between Editions, contain replacement pages to correct or add additional information to the current Edition of the manual. Whenever a new Edition is created, it will contain all of the Update information for the previous Edition. Each new Edition or Update also includes a revised copy of this documentation history page.

Edition 1 . . . . . .May 1993
Edition 2 . . . . . January 1995
Edition 3 . . . . . December 1996
Edition 4 . . . . . March 1997


Safety Symbols



Instruction manual symbol affixed to product. Indicates that the user must refer to the manual for specific WARNING or CAUTION information to avoid personal injury or damage to the product.



Indicates the field wiring terminal that must be connected to earth ground before operating the equipmentÅprotects against electrical shock in case of fault.




Frame or chassis ground terminal—typically connects to the equipment's metal frame.



Alternating current (AC)



Direct current (DC).



Indicates hazardous voltages.

WARNING Calls attention to a procedure, practice, or condition that could cause bodily injury or death.

CAUTION Calls attention to a procedure, practice, or condition that could possibly cause damage to equipment or permanent loss of data.

WARNINGS

The following general safety precautions must be observed during all phases of operation, service, and repair of this product. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the product. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.

Ground the equipment: For Safety Class 1 equipment (equipment having a protective earth terminal), an uninterruptible safety earth ground must be provided from the mains power source to the product input wiring terminals or supplied power cable.

DO NOT operate the product in an explosive atmosphere or in the presence of flammable gases or fumes.

For continued protection against fire, replace the line fuse(s) only with fuse(s) of the same voltage and current rating and type. DO NOT use repaired fuses or short-circuited fuse holders.

Keep away from live circuits: Operating personnel must not remove equipment covers or shields. Procedures involving the removal of covers or shields are for use by service-trained personnel only. Under certain conditions, dangerous voltages may exist even with the equipment switched off. To avoid dangerous electrical shock, DO NOT perform procedures involving cover or shield removal unless you are qualified to do so.

DO NOT operate damaged equipment: Whenever it is possible that the safety protection features built into this product have been impaired, either through physical damage, excessive moisture, or any other reason, REMOVE POWER and do not use the product until safe operation can be verified by service-trained personnel. If necessary, return the product to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

DO NOT service or adjust alone: Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

DO NOT substitute parts or modify equipment: Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the product. Return the product to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Declaration of Conformity

according to ISO/IEC Guide 22 and EN 45014

Manufacturer's Name: Hewlett-Packard Company
Loveland Manufacturing Center

Manufacturer's Address: 815 14th Street S.W.
Loveland, Colorado 80537

declares, that the product:

Product Name: A/B to C-Size Active Adapter

Model Number: HP E1403C/HP E1407A

Product Options: All

conforms to the following Product Specifications:

Safety: IEC 1010-1 (1990) Incl. Amend 1 (1992)/EN61010-1 (1993)
CSA C22.2 #1010.1 (1992)
UL 3111-1 (1994)

EMC: CISPR 11:1990/EN55011 (1991): Group1 Class A
EN50082-1:1992
IEC 801-2:1991: 4kVCD, 8kVAD
IEC 801-3:1994: 3 Vm
IEC 801-4:1988: 1 kV Power Line, 0.5 kV Signal Lines
ENV50141: 1993/prEN50082-1 (1995): 3 Vrms
ENV50142: 1994/prEN50082-1 (1995): 1 kVCM, 0.5 kVDM
IEC1000-4-8:1993/prEN50082-1 (1995): 3 A/m
EN61000-4-11: 1994/prEN50082-1 (1995): 30%, 10ms 60%, 100 ms

Supplementary Information: The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC (inclusive 93/68/EEC) and carries the "CE" marking accordingly.

Tested in a typical configuration in an HP C-Size VXI mainframe.



May 1, 1996

Jim White, QA Manager

European contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department HQ-TRE, Herrenberger Straße 130, D-71034 Böblingen, Germany (FAX +49-7031-14-3143)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Notes:

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 1
General Information

Introduction

The manual is separated into the following chapters.

Chapter 1 - General Information. Describes the different adapters.

Chapter 2 - Installation/Removal Instructions. This chapter shows how to install/remove B-Size VXIbus modules into/from the HP E1403C or HP E1407A C-Size Adapter Module, and how to install/remove the adapter module into a C-Size VXIbus Mainframe.

Chapter 3 - Using the Adapters. This chapter shows how to use the adapter modules. It includes a block diagram for both the HP E1403C and HP E1407A Adapter Modules. The chapter also includes, for the HP E1407A Adapter Module, instructions on how to use and install the J2 Connector Cable, how to select the direction (to or from the mainframe's backplane) of the trigger signals on the ECL and TTL trigger lines, and how to select unbuffered or buffered SUMBUS connections. Connector pinout diagrams for both the HP E1403C and HP E1407A are also provided.

Appendix A - Specifications. This appendix details specifications for the HP E1403C and HP E1407A C-Size Adapter Module.

C-Size Adapter Description

The HP E1403C and HP E1407A Adapter Modules allow an A- or B-Size VMEbus/VXIbus module to connect to a C-Size VXIbus Mainframe. The regular adapters connect a single slot VMEbus/VXIbus module to the mainframe. Option 10 connects two-slot modules to the mainframe (however, it only connects the module to the P1 and/or P2 connector of only one slot). The following gives the features of the adapters.

HP E1403C Adapter Description

Use this adapter to make buffered connections between an A-size or B-size module's J1 connector and the mainframe's P1 connector. The adapter has the following features:

- Mounts with the VMEbus/VXIbus module's front panel flush with the front of the adapter.
- Provides direct access to the VMEbus/VXIbus module's front panel I/O connections.
- Provides connections to the J1 connector with pin-to-pin compatibility to the mainframe's P1 connector.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- Meets VMEbus driving and loading specifications.
- Provides proper timing for data Transfer Acknowledgment (DTACK) and Interrupt Signals (IRQ).
- Provides connectivity for HP B-size modules or any P1-only VXIbus slave module (Bus Master signals are not provided. These include: BBSY*, BLCR*, BR0*, BR1*, BR2*, BR3*, SERCLK, SERDAT.)

HP E1407A Adapter Description

Use this adapter to make buffered connections between an A-size or B-size module's J1 connector and the mainframe's P1 connector, and buffered connections between a B-size module's J2 connector and the mainframe's P2 connector. The adapter has the following features:

- Mounts with the VMEbus/VXIbus module's front panel flush with the front of the adapter.
- Provides direct access to the VMEbus/VXIbus module's front panel I/O connections.
- Provides connections to the J1 connector with pin-to-pin compatibility to the mainframe's P1 connector.
- Provides direct connections to the J2 connector with pin-to-pin compatibility to the mainframe's P2 connector.
- Provides buffered data, address, and trigger lines (either ECL or TTL).
- Provides direct SUMBUS connections, or provides fused ±12 V power supply connections to add user provided circuitry (op-amps, for example) for buffered SUMBUS connections (jumper selectable).
- Provides access to the pins on the outer rows of the J2 connector for VME modules. These pins may be isolated from the backplane.
- Meets VMEbus driving and loading specifications.
- Provides proper timing for data Transfer Acknowledgment (DTACK) and Interrupt Signals (IRQ).
- Provides connectivity for HP B-size modules or any P1-only VXIbus slave module (Bus Master signals are not provided. These include: BBSY*, BLCR*, BR0*, BR1*, BR2*, BR3*, SERCLK, SERDAT.)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 2
Installation/Removal Instructions

This chapter shows how to install/remove B-size VXIbus modules into/from the HP E1403C or HP E1407A C-Size Adapter Module, and how to install/remove the adapter module into a C-Size VXIbus Mainframe.

Note The procedures in this chapter shows installation/removal of the Adapter Module into/from the HP E1401A High Power Mainframe. The procedures for other mainframes are similar to these procedures.

Preparing for Installation

- Be sure to set the logical address of the module to be installed into the adapter to the correct address (see the module manual).
- Be sure to use clean handling and anti-static handling of the module.
- Be sure there are no external connections to the modules.

Installing A-Size VMEbus Modules (HP E1403C Only)

Install A-Size VMEbus Modules only in the HP E1403C Adapter Module. Use the following B-Size Module installation procedure to install an A-Size Module into the adapter module.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Installing an Adapter Module with a B-Size VXIbus Module

The procedure starting on the next page shows how to install an HP E1403C or HP E1407A C-Size Adapter Module into an HP E1401A Mainframe. (The installation procedures for other mainframes is similar.) The procedure then shows how to install a B-Size VXIbus Module into the adapter module.


Note During power-up, the resource manager recognizes a module in the slot with the HP E1403C or HP E1407A Adapter Module installed with or without a B-Size module installed in the adapter module. Thus, to prevent any error generation, be sure a B-Size module is installed in the adapter module before power-up.

1 Line up the C-Size Adapter Module's Rails with the Module Guides of an Empty Slot in the Mainframe.

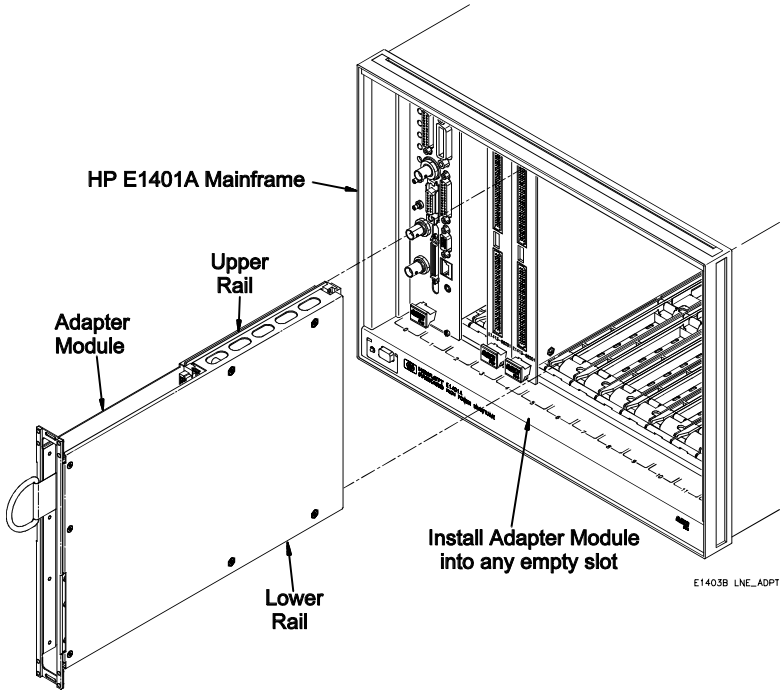


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2 Slide the C-Size Adapter Module into the Mainframe.

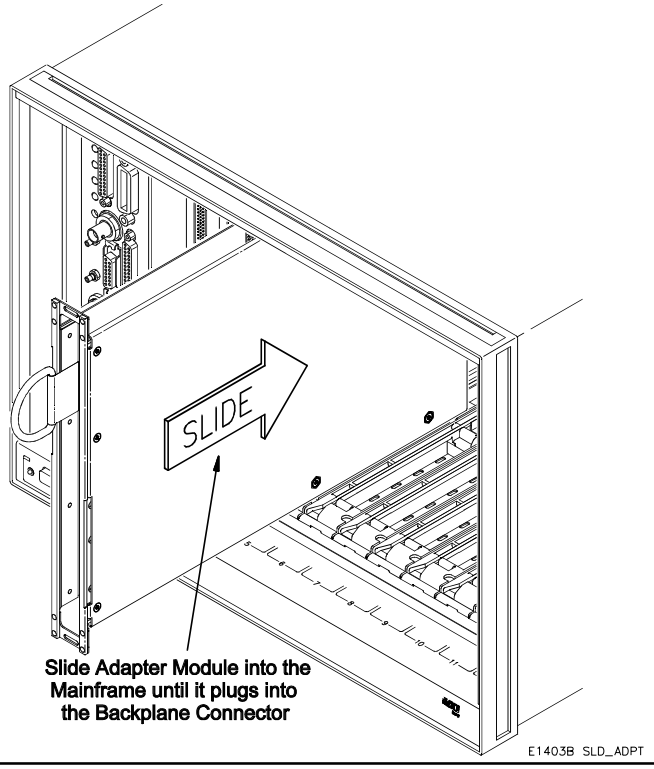


3 Line up the B-Size Module with the C-Size Adapter Module's Front Slot and the Mainframe's Module Guides.

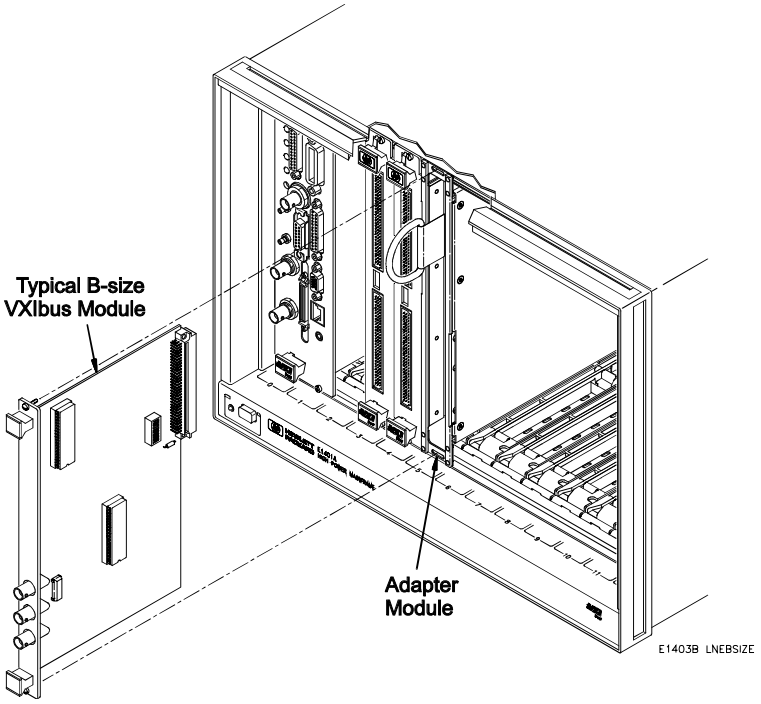


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4 Slide the B-Size Module into the C-Size Adapter Module.

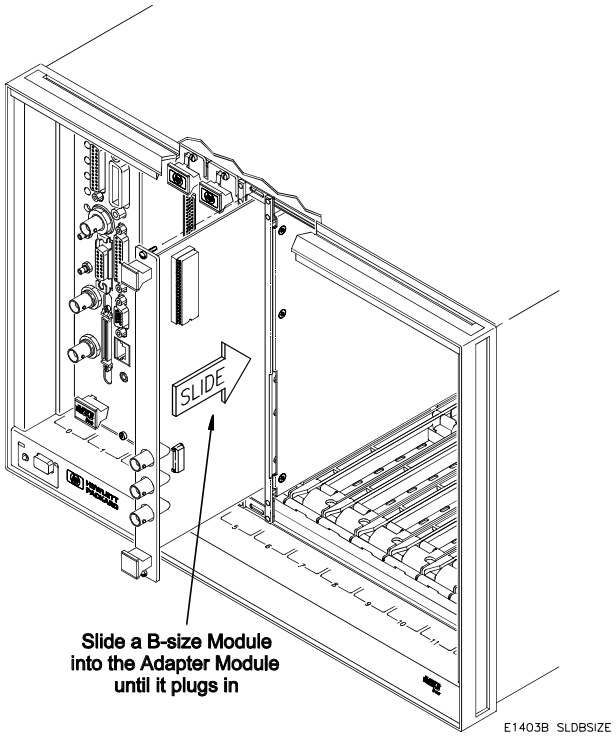

5 Tighten the B-Size Module's Upper and Lower Retainer Screws.

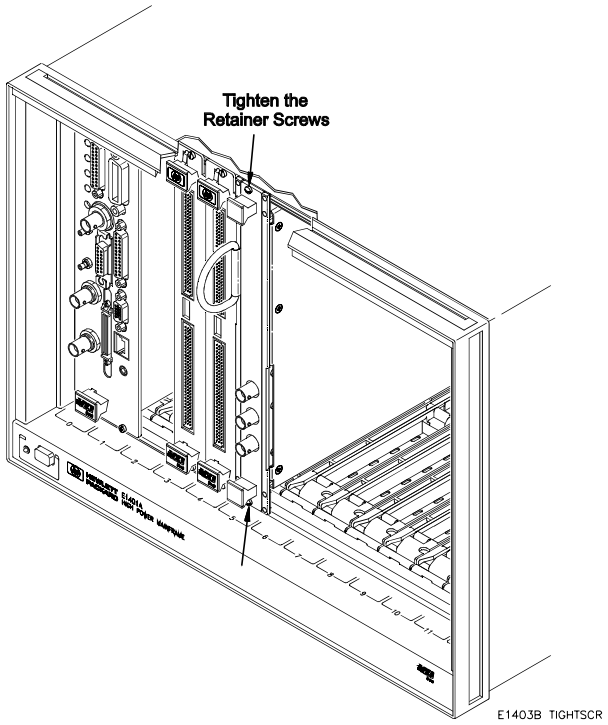


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Removing the Adapter Module and B-Size Module

The following procedure shows how to remove a B-Size VXIbus Module from an HP E1403C or HP E1407A C-Size Adapter Module and the adapter module from the mainframe.

1 Loosen the Upper and Lower Retainer Screws of the B-Size Module inside the C-Size Adapter Module.

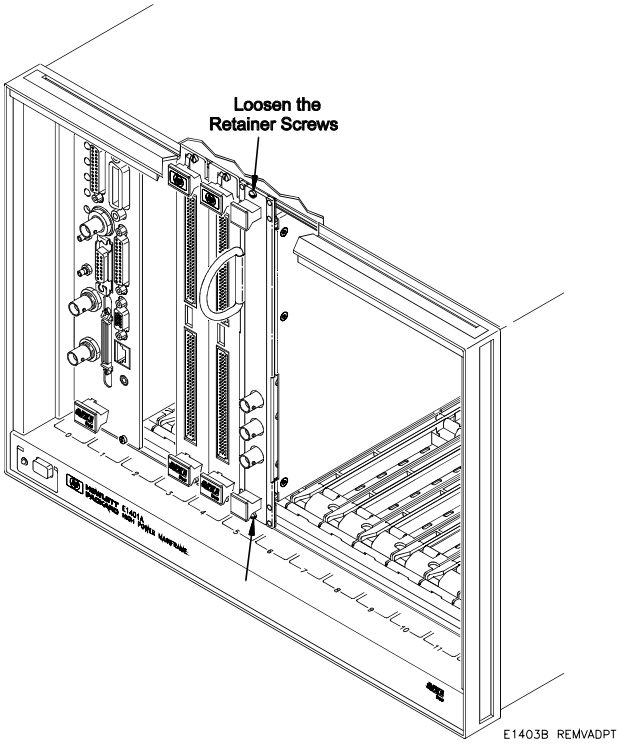


Continued on Next Page

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


2 Using the handles on the B-Size Module, pull the Module out of the C-Size Adapter Module.

NOTE:

When removing the B-size Module from the Adapter Module, the Adapter Module may be pulled out of the mainframe. If that happens, carefully pull the B-size Module out of the Adapter Module, without damaging any exposed components on the B-size Module.

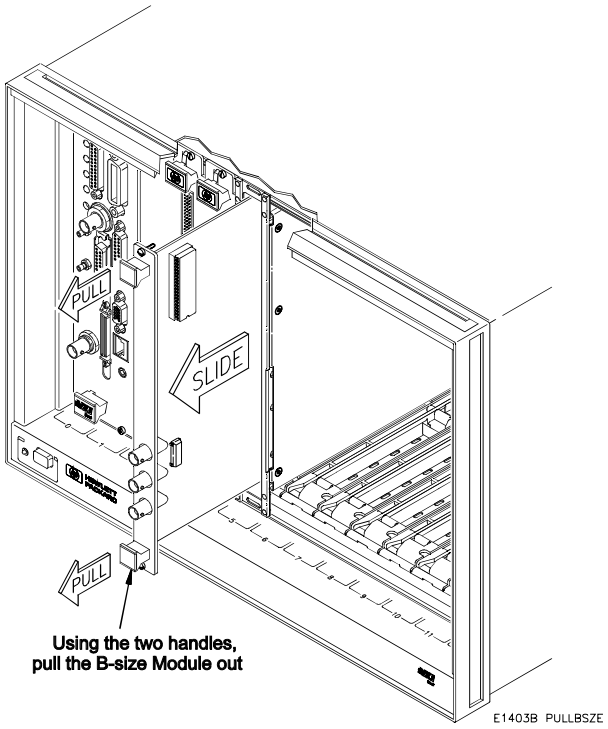

3 Using the "D" Ring, pull the C-Size Adapter Module out of the Mainframe.

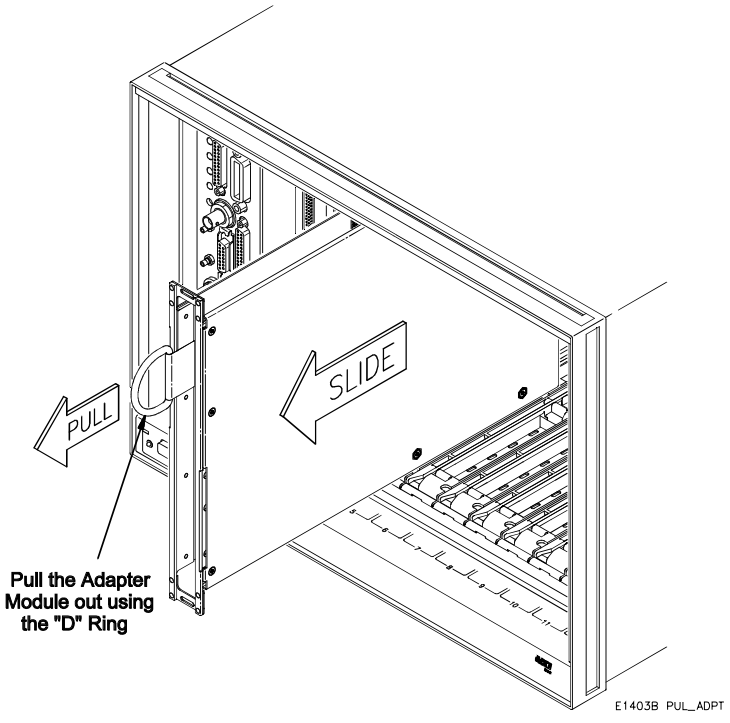

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 3
Using the Adapters

This chapter shows how to use the adapter modules. It includes a block diagram for both the HP E1403C and HP E1407A Adapter Modules as well as connector pinouts. This chapter also includes, for the HP E1407A Adapter Module, instructions on how to use and install the J2 connector cable, how to select the direction (to or from the mainframe's backplane) of the trigger signals on the ECL and TTL trigger lines, and how to select unbuffered or buffered SUMBUS connections.

HP E1403C Block Diagram

Figure 3-1 shows the block diagram for the HP E1403C C-Size Adapter Module.

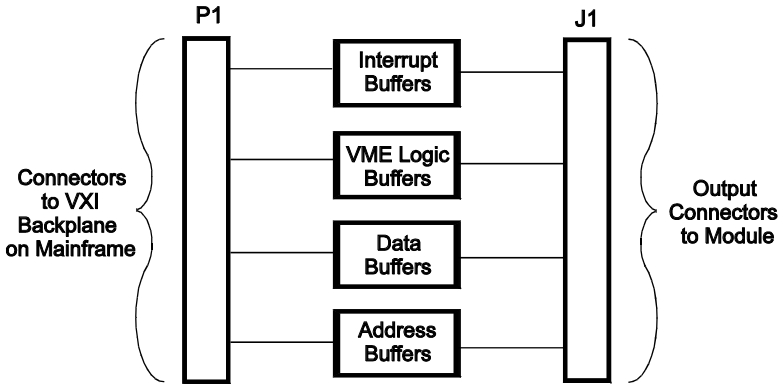


Figure 3-1. HP E1403C Block Diagram

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HP E1403C Connector Pinout

Figure 3-2 shows the P1 and J1 connector's pinout for the HP E1403C Adapter Module.

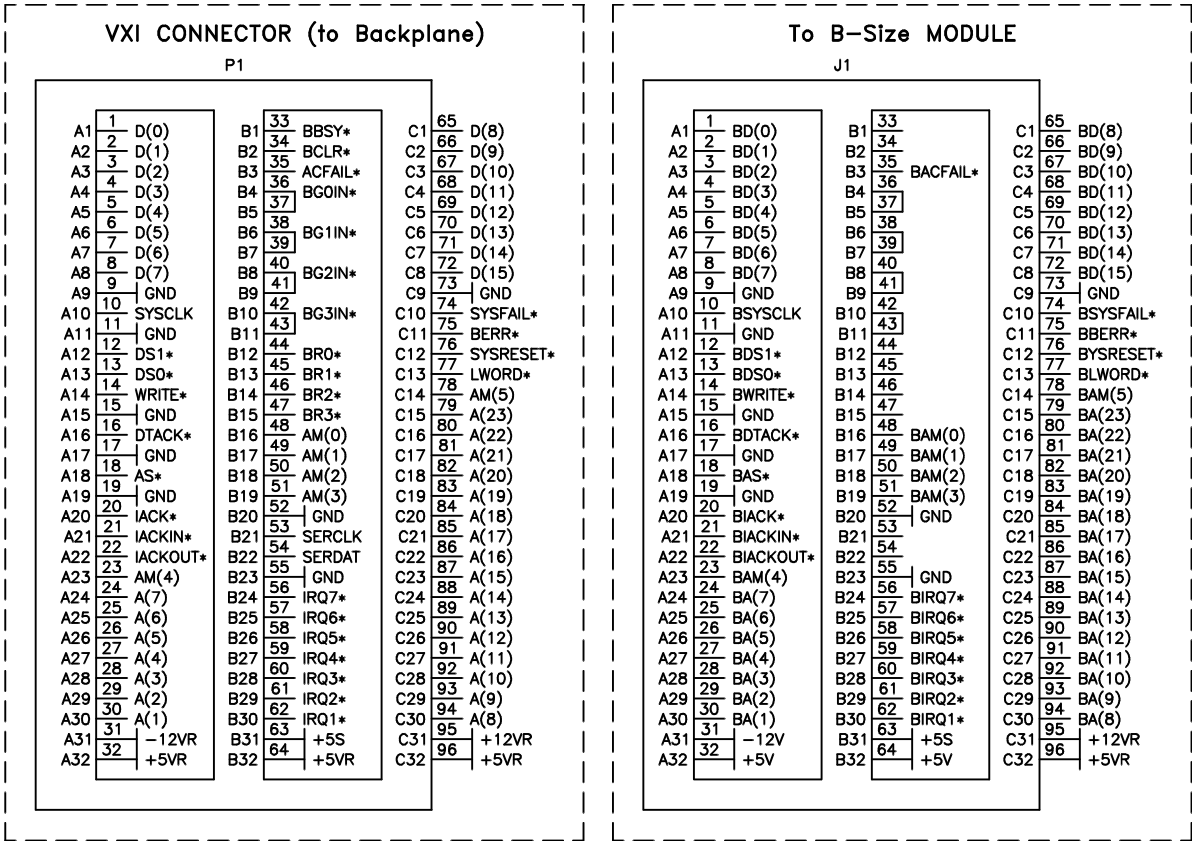


Figure 3-2. HP E1403C P1 and J1 Connector Pinout

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HP E1407A Block Diagram

Figure 3-3 shows the block diagram for the HP E1407A C-Size Adapter Module.

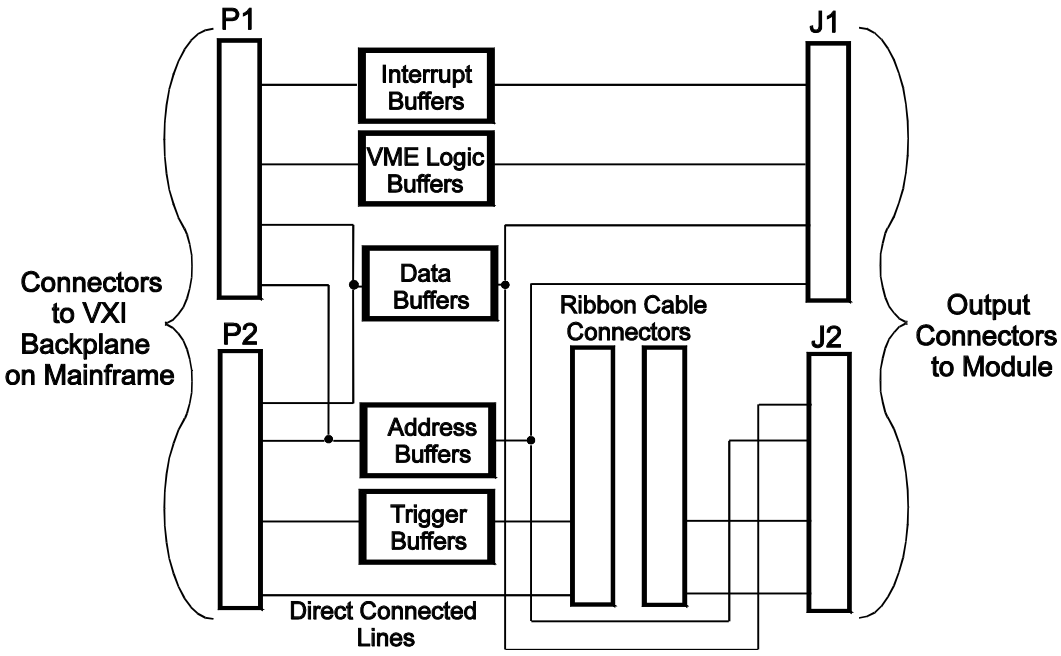


Figure 3-3. HP E1407A Block Diagram

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HP E1407A Connector Pinout

Figure 3-4 shows the P1 and J1 connector's pinout, and Figure 3-5 shows the P2 and J2 connector's pinout for the HP E1407A Adapter Module.

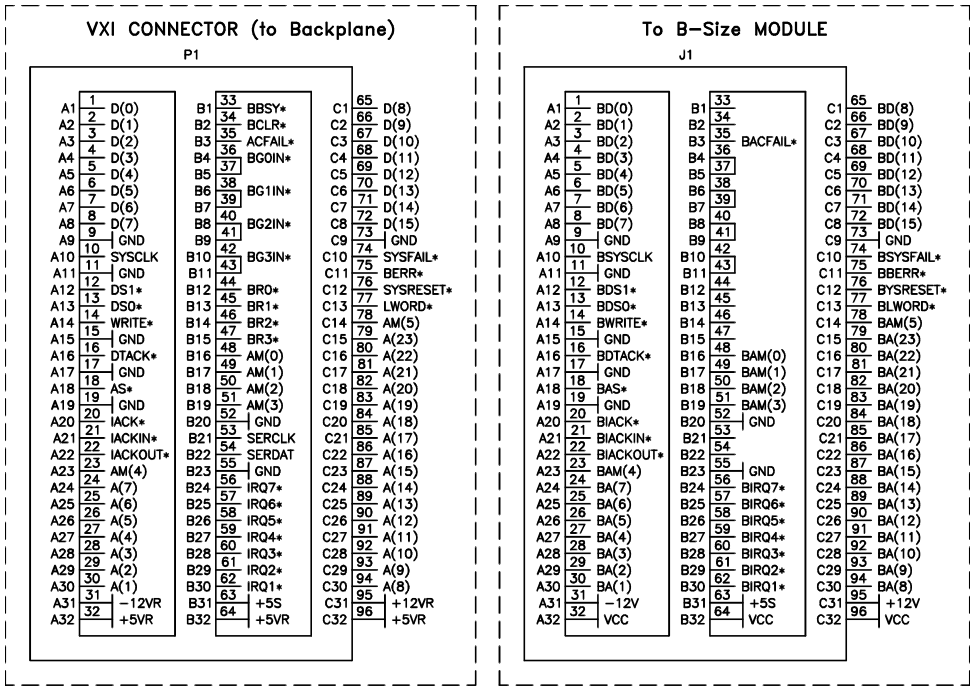


Figure 3-4. HP E1407A P1 and J1 Connector Pinout

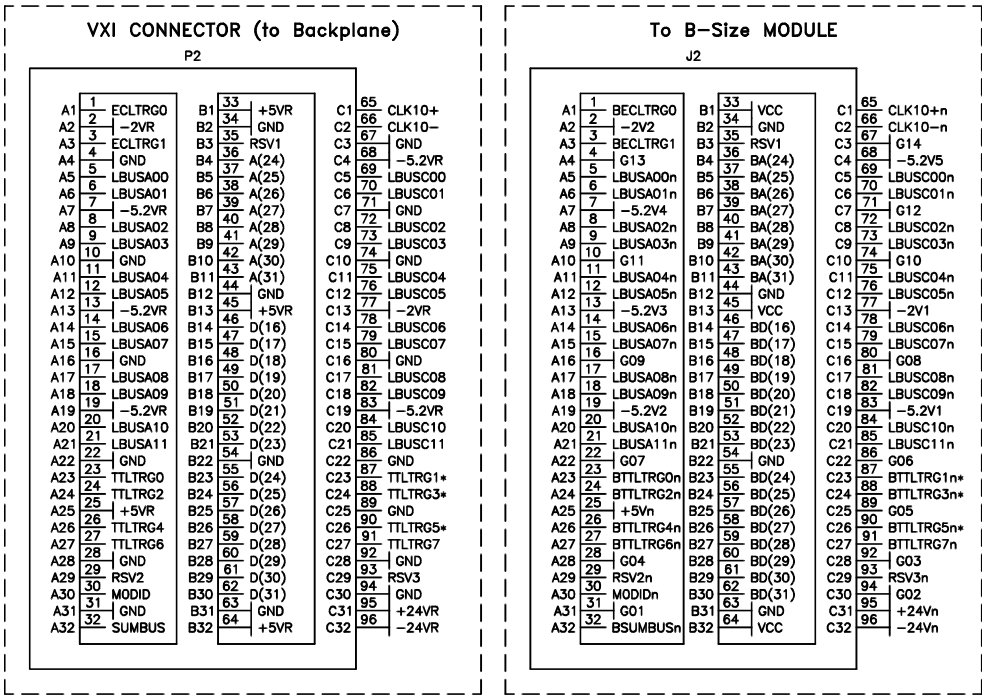


Figure 3-5. HP E1407A P2 and J2 Connector Pinout

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Installing the J2 Connector Cable (HP E1407A Only)

Purpose of the J2 Cable

The HP E1407A C-Size Adapter Module is shipped with a long and short J2 Connector Cables. The long J2 cable allows for direct access to the outer rows of the J2 connector of the B-Size module (that is, VMEbus modules that utilize the outer rows of J2) inside the adapter module. The short J2 cable makes internal connections between the P2 and J2 connectors of the adapter module to allow for connections between the J2 connector of the B-Size module inside the adapter module and the P2 connector of the mainframe. Use this for VXIbus modules that utilize the outer rows of J2. If your module has no outer row connections of J2, do not install either cable.


See Figure 3-6 for the J2 connector's pinout diagram.

Caution **Damage to a VMEbus module, adapter module, mainframe, or all three may result if using the short cable in an adapter module with a VMEbus module.**

Install the J2 Cable


Do the following to install either J2 Cable:

1 **On the C-Size VXIbus Adapter Module, remove the 7 Top Shield Retainer Screws and Top Shield.**

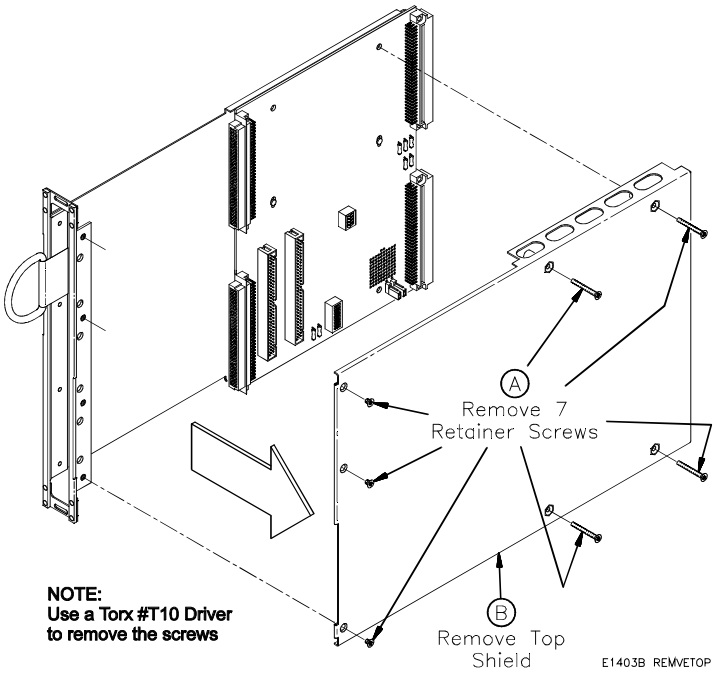


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2 Plug in either the Short or Long Ribbon (J2) Cable.

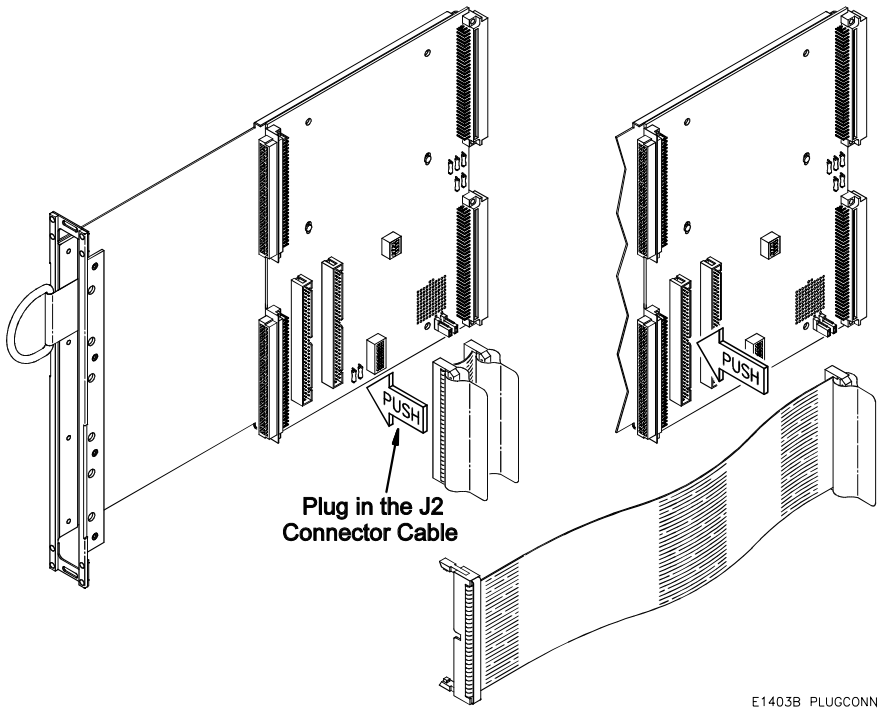

3 Reinstall the Top Shield and Retainer Screws on the C-Size Adapter Module.

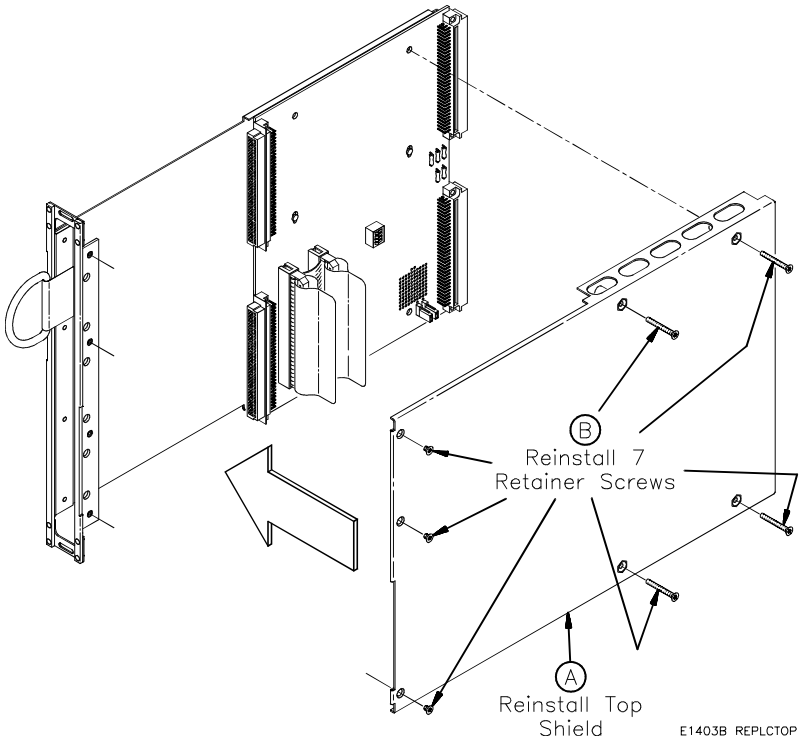

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Ribbon Cable (J2) Connector Pinout

Figure 3-6 shows the pinout for the HP E1407A ribbon cable connectors (J2).

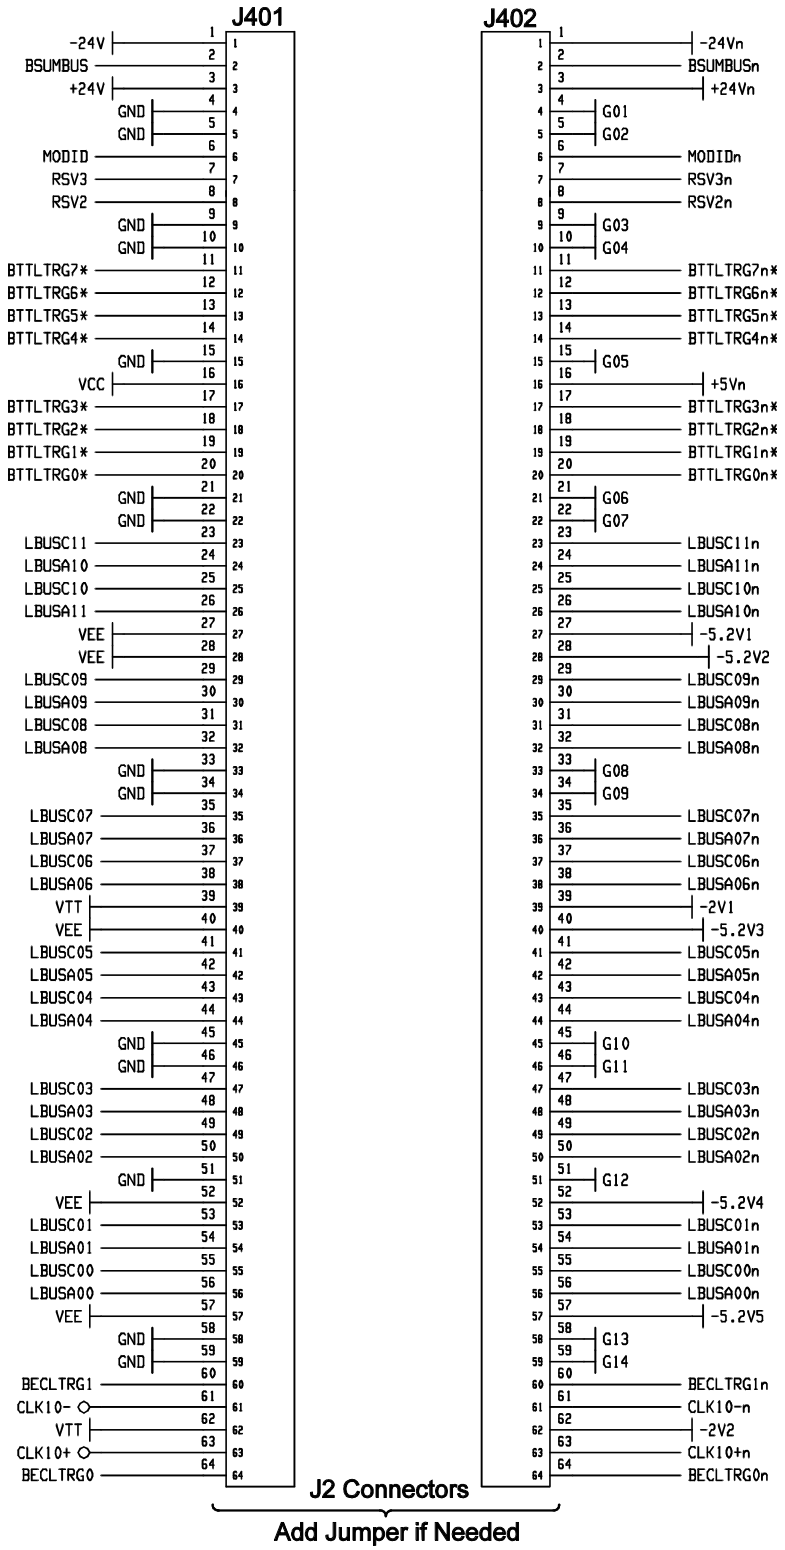


Figure 3-6. HP E1407A Ribbon Cable Connectors (J2)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Selecting the TTL Trigger Direction (HP E1407A Only)

The HP E1407A C-Size Adapter Module has a switch that allows you to set the trigger signal direction of the TTL0−TTL7 Trigger Lines. Figure 3-7 shows that the TTL7 Trigger Signal comes from the B-Size Module, and TTL0−TTL6 from the Mainframe's VXI Backplane. Use the illustration as a guide to set the appropriate trigger directions for your application.

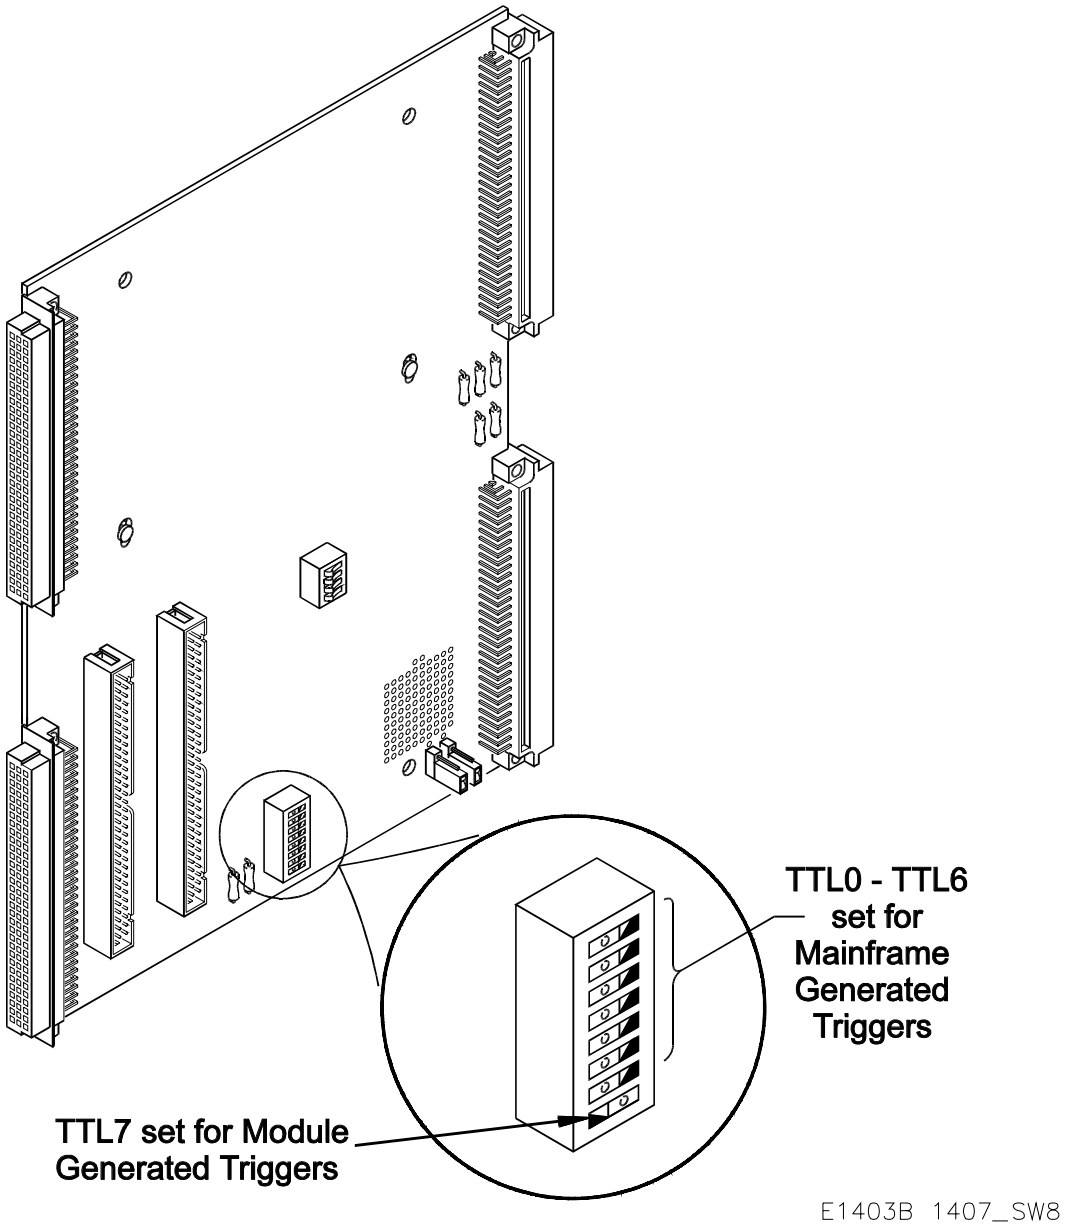


Figure 3-7. Selecting the TTL Trigger Signal Direction

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Selecting the ECL Trigger Direction (HP E1407A Only)

The HP E1407A C-Size Adapter Module has a switch that allows you to set the trigger signal direction of the ECL0 and ECL1 Trigger Lines. Figure 3-8 shows that the ECL1 Trigger Signal comes from the B-Size Module, and ECL0 from the Mainframe's VXI Backplane. Use the illustration as a guide to set the appropriate trigger directions for your application.

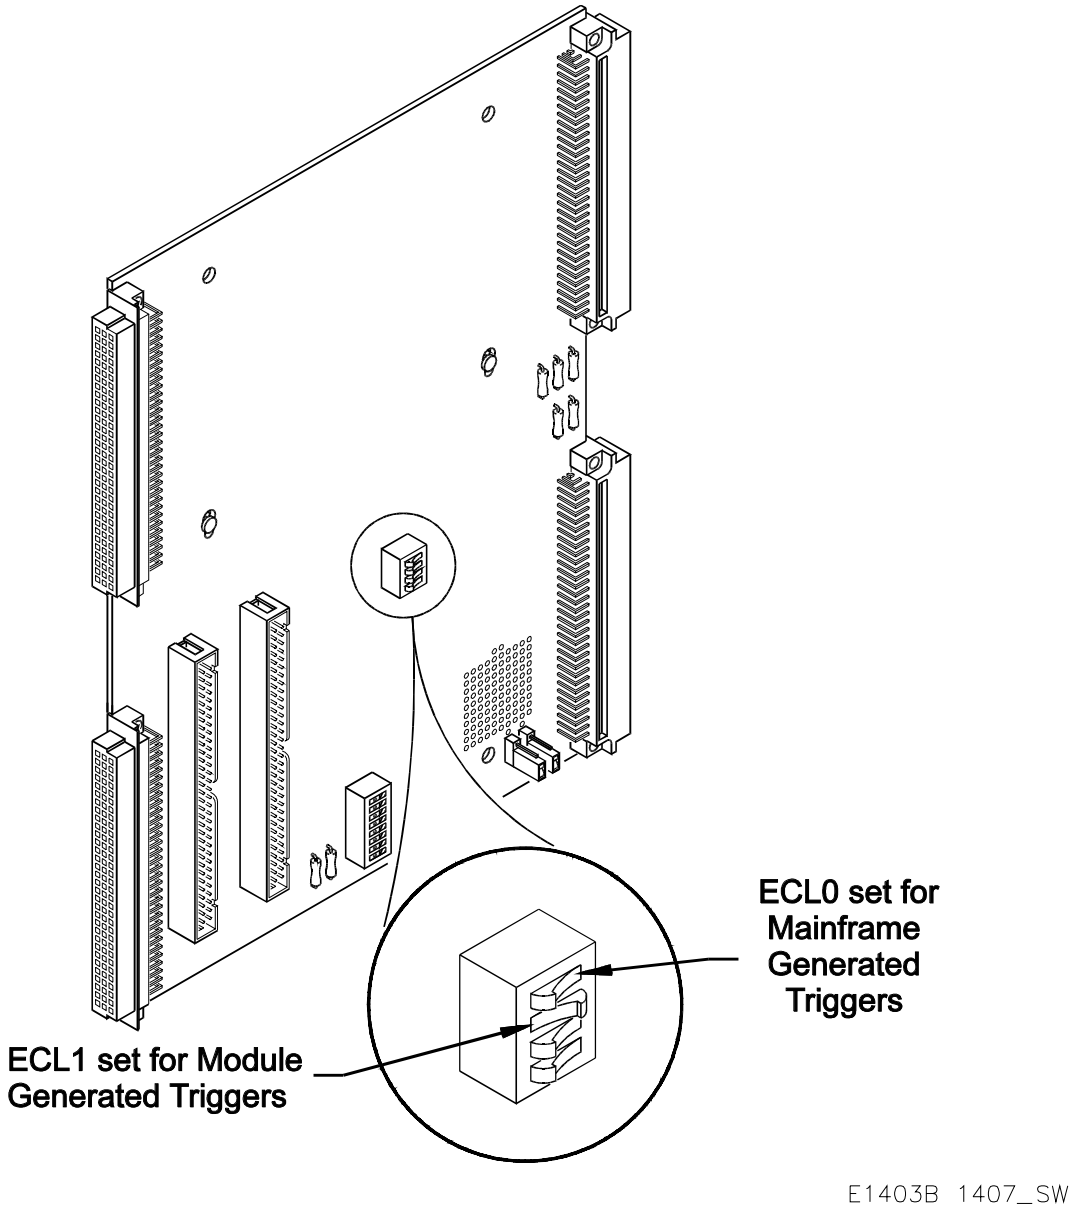


Figure 3-8. Selecting the ECL Trigger Signal Direction

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SUMBUS Configurations (HP E1407A Only)

Disconnecting the SUMBUS

The ribbon cable and a pair of jumpers connect the SUMBUS to the output connectors (i.e., to the B-Size Module). Use Figure 3-9 to disconnect (i.e., remove the jumpers) or connect the SUMBUS.

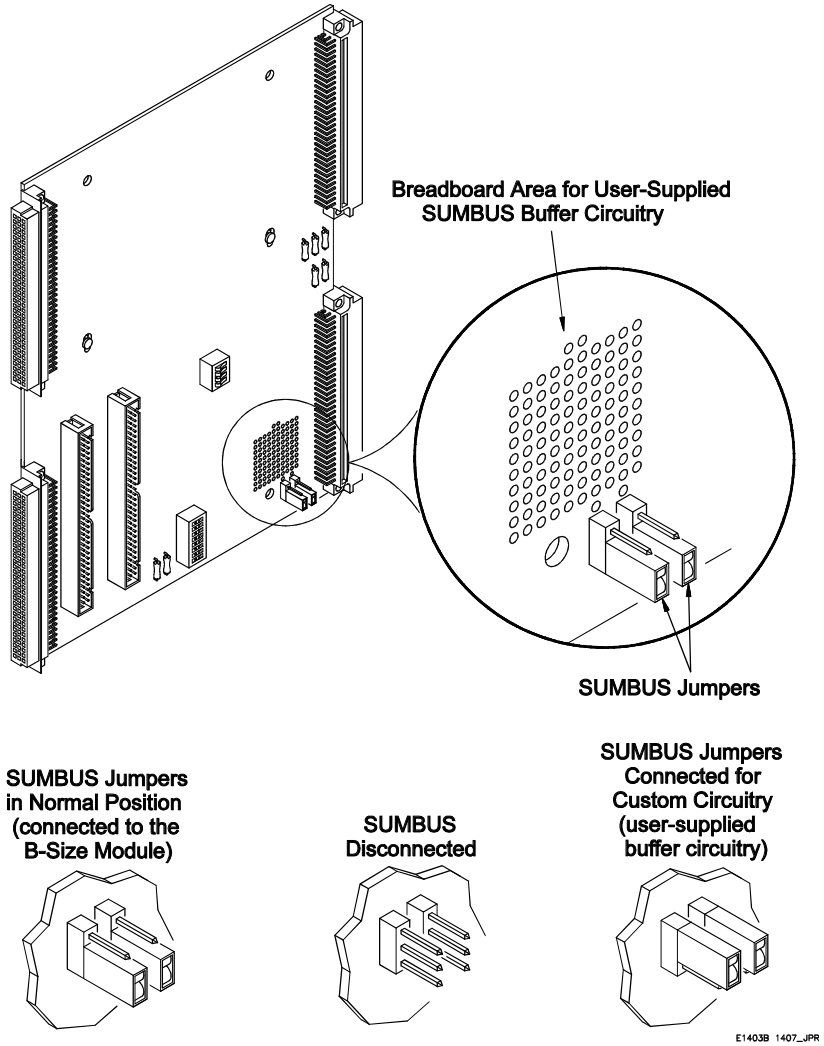


Figure 3-9. SUMBUS Jumper Configurations

Adding Buffer Circuitry to the SUMBUS

The adapter module has no circuitry available to buffer the SUMBUS. However, there is a breadboard area on the PC board in the HP E1407A Adapter that allows you to add your own circuitry (e.g., op-amps) to provide buffering for the SUMBUS. The breadboard area also includes connections to the ±12V Power Supplies.

You can add buffer circuitry either for SUMBUS signals coming from the B-Size Module in the Adapter Module or from the Mainframe's VXI Backplane. Use Figure 3-9 to select the appropriate jumpers for your application, and to locate the breadboard area.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Appendix A
HP E1403C and HP E1407A Specifications

Product Characteristics

- P1 and P2 extension fully buffered (P1 only on HP E1403C).
- Slave-only capability; cannot be used in Slot 0 with bus masters.
- Unlimited number of adapters per mainframe.
- 1-slot wide.
- Option 10 is 2-slot wide. Only the P1 and/or P2 connectors of a single slot are used.
- Replacement fuses are subminiature 4A, 125V (Littelfuse is recommended).

Power Requirements

Voltage:	**+5V**	**+12V***
Peak Module Current (A):	0.10	0.07
Dynamic Module Current (A):	0.01	0.01

* HP E1407A Only

Cooling Requirements

0.02 mm H_2O @0.10 Liter/sec Air Flow for 10°C rise.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Notes:

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Index

A

Adapter Description, 9
  HP E1403C, 9
  HP E1407A, 10
  option 10, 9
Adding SUMBUS Buffer Circuitry, 26
A-Size VMEbus Modules, installing, 11

B

Backplane
  ECL trigger signals, 25
  SUMBUS buffer circuitry, 26
  TTL trigger signals, 24
Block Diagram
  HP E1403C, 17
  HP E1407A, 19
B-Size VXIbus Modules
  ECL trigger signal, 25
  installing, 12–14
  removing, 15–16
  SUMBUS buffer circuitry, 26
  TTL trigger signal, 24

C

Cable
  ribbon cable (J2)
    description, 21
    installing, 21, 23
    pinouts, 23
Certification, 3
Connecting the SUMBUS, 26
Cooling Requirements, 27

D

Declaration of Conformity, 5
Description
  adapters, 9
  HP E1403C, 9
  HP E1407A, 10
    ECL trigger, 25
    ribbon cable (J2), 21, 23
    SUMBUS, 26
    TTL trigger, 24
Description (*continued*)
  option 10, 9
  ribbon cable (J2), 21, 23
Disconnecting the SUMBUS, 26
Documentation History, 4

E

ECL Trigger Direction, 25

F

Fuses, 27

H

HP E1403C
  A-size VMEbus modules, installing, 11
  block diagram, 17
  B-size VXIbus modules
    installing, 12–14
    removing, 15–16
  description, 9
  pinout, 18
  specifications, 27
HP E1407A
  block diagram, 19
  B-size VXIbus modules
    ECL trigger signals, 25
    installing, 12–14
    removing, 15–16
    SUMBUS buffer circuitry, 26
    TTL trigger signals, 24
  description, 10
  ECL trigger direction, 25
  pinout, 20
    ribbon cable (J2), 23
  ribbon cable (J2), installing, 21, 23
  specifications, 27
  SUMBUS, 26
  TTL trigger direction, 24

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I

Installation
- and removal instructions, 11
- A-size VMEbus modules, 11
- B-size VXIbus modules, 12–14
- HP E1407A, ribbon cable (J2), 21, 23
- preparation, 11

M

Mainframe
- backplane
  - ECL trigger signals, 25
  - SUMBUS buffer circuitry, 26
  - TTL trigger signals, 24
- installing
  - A-size VMEbus modules, 11
  - B-size VXIbus modules, 12–14
- removing modules from, 15–16

O

Option 10, description, 9

P

Pinouts
- HP E1403C, 18
- HP E1407A, 20
  - ribbon cable (J2), 23

Power Requirements, 27
Preparing for Installation, 11

R

Removing B-size VXIbus Modules, 15–16
Ribbon Cable (J2)
- description, 21
- installing, 21, 23
- pinouts, 23

S

Safety Warnings, 4
Selecting
- ECL trigger direction, 25
- TTL trigger direction, 24

Specifications, 27
SUMBUS
- adding buffer circuitry, 26
- configurations, 26

Switches
- ECL trigger, 25
- TTL trigger, 24

T

Triggers
- B-size modules, 24–25
- ECL, 25
- mainframe VXI backplane, 24–25
- TTL, 24
  - trigger direction, 24

U

Using the Adapters, 17

V

VXI*plug&play* Example Programs
- See VXI*plug&play* Online Help

VXI*plug&play* Function Reference
- See VXI*plug&play* Online Help

VXI*plug&play* Programming
- See VXI*plug&play* Online Help

VXI*plug&play* Soft Front Panel
- See VXI*plug&play* Online Help

W

WARNINGS, 4

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP