ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Allen-Bradley 1305-BA03A-HA2* at our website: ***Click HERE***

Quick Reference

Allen-Bradley

1305 Adjustable Frequency AC Drive

Firmware Revision Number 6.01 and Later




This publication is designed as a reference tool. The 1305 User Manual, publication 1305-5.2, must be consulted for more detailed information about parameters, faults and hazards of personal injury.

Allen-Bradley • Rockwell Software

Rockwell Automation

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Power Terminal Block TB1 Designations

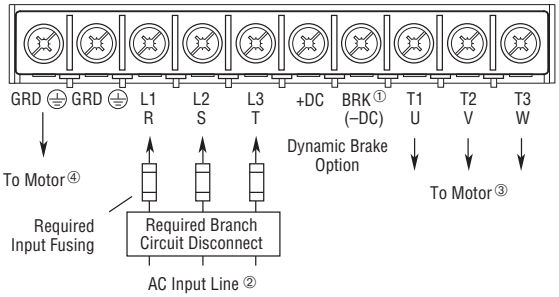

① Connection for Dynamic Brake Resistors for all models except the 200-230 Volt, 0.37 to 0.75 kW (0.5 to 1 HP) drive.

Important: The **[DB Enable]** parameter must be enabled for proper operation.

② For single phase applications, the AC input line can be connected to any two of the three input terminals R, S, T (L1, L2, L3).

③ 1305 drives provide Class 10 motor overload protection according to NEC Article 430. They do not provide speed sensitive overload protection, thermal memory retention and motor over-temperature sensing according to NEC Article 430.126 (A) (2). If such protection is needed in the end-use product, it must be provided by additional means.

Important: This drive is not intended for use with single-phase motors.

④ Ground from drive to motor frame must be an independent continuous insulated wire run.

TB1 Terminal Designations

Terminals	Description
GRD	Earth ground
R, S, T (L1, L2, L3)	AC input line terminals
+DC, BRK (or -DC)	Dynamic brake option – see the instructions included with option
U, V, W (T1, T2, T3)	Motor connections

Input Fusing

ATTENTION: The drive does not provide branch circuit protection. Specifications for the recommended fuse size and type which provide branch circuit protection against short circuits are provided below. Branch circuit breakers or disconnect switches cannot provide this level of protection for drive components.


Maximum Recommended AC Input Line Fuse UL Class J, T, CC, or BS88 (or equivalent)

Three-Phase Rating *kW (HP)*	Single-Phase Rating *kW (HP)*	Fuse 200…230V Rating	Fuse 380…460V Rating
0.37 (0.5)	0.19 (0.25)	6	3 (1)
0.55 (0.75)	0.37 (0.5)	6	3 (1)
0.75 (1)	0.55 (0.75)	10	6 (2)
1.5 (2)	0.75 (1)	15	10 (2)
2.2 (3)	1.5 (2)	25	15 (2)
4.0 (5)	—	—	20 (2)

(1) Must be dual element time delay, Bussmann LPJ or equivalent.
(2) If fuse blowing is a problem, use dual element type fuses.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Terminal Block TB2 Designations

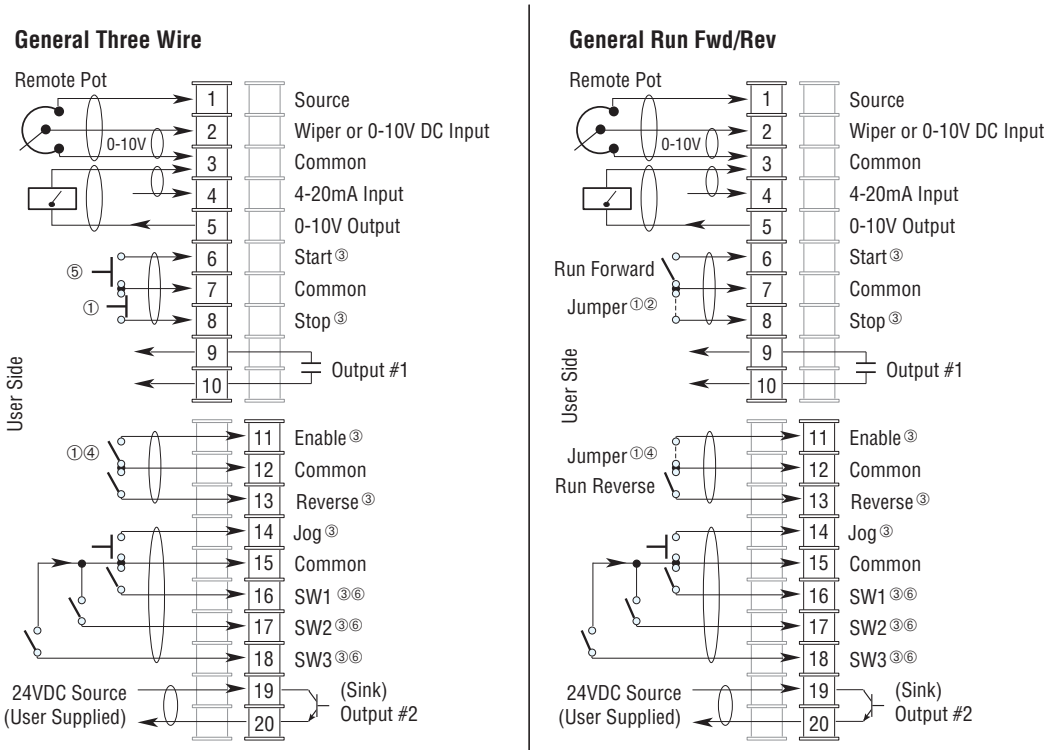

See footnotes below.

TB2 Terminal Descriptions

Terminals	Signal	Specification
1, 2, 3	External Speed Potentiometer	10 kΩ Potentiometer, 2 watts
2, 3	0…10V Analog Input	Drive Input Impedance = 100 kΩ
4, 3	4…20 mA Analog Input	Drive Input Impedance = 250 Ω
5, 3	0…10V Analog Output	Meter Impedance ≥ 4 kΩ
6, 7	Start	Contact Closure Input ③
8, 7	Stop	Contact Closure Input ③
9, 10	Programmable Output 1	Resistive Rating = 115V AC/30V DC, 5A Inductive Rating = 115V AC/30V DC, 2A
11, 12	Drive Enable	Contact Closure Input ③ ④
13, 12	Reverse	Contact Closure Input ③
14, 15	Jog	Contact Closure Input ③
16, 15	SW1	Contact Closure Input ③
17, 15	SW2	Contact Closure Input ③
18, 15	SW3	Contact Closure Input ③
19, 20	Programmable Output 2	24V DC ± 20%, 50 mA max (sink)


① Required to operate drive. STOP also used to clear a fault.
② Use HIM Stop button to clear faults.
③ Contact Closure Input. Internal 5V supply. **Do not** apply external voltage.
④ When the ENABLE signal is lost, the drive output immediately shuts off and the motor will coast to a stop.
⑤ A Start command will override any Jog command.
⑥ See 1305 User Manual, publication 1305-5.2, for input configurations based on the setting of parameter 21 - **[Input Mode]**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Faults

Name	Description
Diag C Lim Fault (F36)	The drive output current has exceeded the software **[Current Limit]** and the **[Cur Lim Trip En]** parameter was enabled.
Drive -> HIM	The checksum read from the HIM's EEPROM does not match the checksum calculated from the EEPROM data.
Drive Reset Fault (F22)	Occurs on power-up. Caused by having the START Input (or RUN Input) closed, with the STOP Input open and **[Run On Power Up]** = DISABLED.
EEprom Fault (F32)	EEPROM has invalid data or cannot be programmed to valid data.
Hz Err Fault (F29)	This fault indicates that there is not a valid operating frequency. It can be caused by any of the following: 1. **[Maximum Frequency]** is less than **[Minimum Freq]**. 2. Skip frequencies and skip bandwidth eliminate all operating frequencies. 3. 4-20mA input signal speed reference has been lost or is out of range and **[4-20mA Loss Sel]** is set for 'Stop-Fault'.
Hz Sel Fault (F30)	An adapter that is not connected has been chosen as the active frequency source.
HIM -> Drive	Error 1 - The checksum read from the HIM's EEPROM does not match the checksum calculated from the EEPROM data. Error 2 - The number of parameters in saved profile does not equal master. Error 3 - Download was attempted to a different type drive (that is, 1336 ->1305). Error 4 - Saved data for parameter not correct for new drive. Error 5 - Drive is running while attempting download.
IPM Current Fault (F44)	The internal power module overcurrent limit has been exceeded.
IPM Overtemp Fault (F45)	The internal power module thermal limit has been exceeded.
Max Retries Fault (F33)	Drive unsuccessfully attempted to reset a fault and resume running for the programmed number of **[Reset/Run Tries]**.
Motor Mode Flt (F24)	Internal error.
Motor Stall Fault (F6)	The motor is stalled.
Neg Slope Fault (F35)	Drive software detected a portion of the volts/Hz curve with a negative slope.
Network Error	Error 0…6 SCANport Error; Error 7…9 Communications Error
Op Error Fault (F11)	**[Motor Type]** is set to 'Sync PM' and **[Stop Mode]** is set to 'DC Brake'.
Open Pot Fault (F9)	An external pot is connected and the ground lead of the pot is disconnected creating a potential drive overspeed hazard.
Overcurrent Fault (F12)	Overcurrent is detected in overcurrent hardware trip circuit.
Overload fault (F7)	Internal electronic overload trip.
Overspeed Fault (F25)	Internal error.
Overtemp Fault (F8)	Temperature sensor detects excessive heat.
Overvolt Fault (F5)	DC bus voltage exceeded maximum value.
Phase U Fault (F38)	A phase to ground fault has been detected between the drive and motor in this phase.
Phase V Fault (F39)	A phase to ground fault has been detected between the drive and motor in this phase.
Phase W Fault (F40)	A phase to ground fault has been detected between the drive and motor in this phase.
Pin ID Error	Communication Hardware problem.
Power Loss Fault (F3)	DC bus voltage remained below 85% of nominal for longer than 0.500 sec. **[Line Loss Fault]** parameter is programmed to 'F03 Enable'.
Power Mode Fault (F26)	Internal error.
Power Test Fault (F46)	Fault detected during initial start-up sequence.
Reprogram Fault (F48)	Occurs when drive parameters are reset to defaults.
Run Boost Fault (F34)	An attempt has been made to set **[Run Boost]** to a value greater than **[Start Boost]**.
Serial Fault (F10)	An active local bus adapter is disconnected while it possesses control of a local bus function.
Undervolt Fault (F4)	DC Bus voltage fell below the minimum value. **[Line Loss Fault]** is programmed to 'U Volt Run'.
UV Short Fault (F41)	Excessive current has been detected between these two drive output terminals.
UW Short Fault (F42)	Excessive current has been detected between these two drive output terminals.
VW Short Fault (F43)	Excessive current has been detected between these two drive output terminals.

Human Interface Module (HIM)

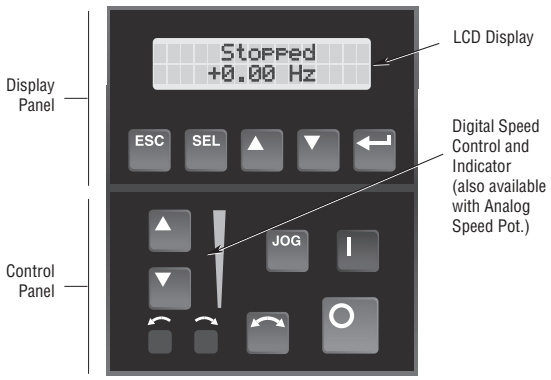

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HIM Display Panel Descriptions

Item	Name	Description
	Escape	When pressed, the ESCape key will cause the programming system to go back one level in the menu structure.
	Select	Pressing the SELect key alternately moves the cursor to the next active area. A flashing first character indicates which line is active.
	Increment/ Decrement	These keys are used to increment and decrement a value or scroll through different groups or parameters.
	Enter	When pressed, a group or parameter will be selected or a parameter value will be entered into memory. After a parameter has been entered into memory, the top line of the display will automatically become active, allowing another parameter (or group) to be chosen.

HIM Control Panel Descriptions

Item	Name	Description
	Start	The Start key will initiate drive operation if no other control devices are sending a Stop command. This key can be disabled by the **[Logic Mask]** or **[Start Mask]**.
	Stop	If the drive is running, pressing the Stop key will cause the drive to stop, using the selected stop mode. See **[Stop Select]** in the User Manual. If the drive has stopped due to a fault, pressing this key will clear the fault and reset the drive. See **[Flt Clear Mode]**, **[Logic Mask]**, and **[Fault Mask]**.
	Jog	When pressed, jog will be initiated at the frequency set by **[Jog Frequency]**, if no other control devices are sending a Stop command. Releasing the key will cause the drive to stop, using the selected stop mode. See **[Stop Select]**, **[Logic Mask]**, and **[Jog Mask]**. **Important:** If the drive is running prior to issuing a jog command, the jog command will be ignored. A start command from another source will override the jog command.
	Change Direction	Pressing this key will cause the drive to ramp down to zero Hertz and then ramp up to set speed in the opposite direction. The appropriate Direction LED will illuminate to indicate the direction of motor rotation. See **[Logic Mask]** and **[Direction Mask]**. Note that the factory default for control of the reverse function is the reverse input at TB2. To enable the HIM control of the reverse function, change 'Bit 0' of the **[Direction Mask]** parameter to '0' to disable the reverse function at TB2.
	Direction LEDs (Indicators)	These LEDs illuminate to indicate the direction of motor rotation.
 	Increment/ Decrement Arrows (*only available with digital speed control*)	Pressing these keys will increase or decrease the HIM frequency command. An indication of this command will be shown on the visual Speed Indicator LEDs. The drive will run at this command if the HIM is the selected frequency reference. See **[Freq Select 1/2]**. Pressing both keys simultaneously stores the current HIM frequency command in HIM memory. The Speed Indicator LEDs will flash momentarily to indicate a successful save (if speed is above 20 percent). Cycling power or connecting the HIM to the drive will set the frequency command to the value stored in HIM memory.
	Analog Speed Potentiometer	If the Analog Speed Potentiometer option has been ordered, the Increment/Decrement keys and Speed Indicator will be replaced by the pot.

	Rotating 'Forward'
	Rotating 'Reverse'
	Changing Direction, Decelerating 'Reverse', will begin to Accelerate 'Forward'.
	Changing Direction, Decelerating 'Forward', will begin to Accelerate 'Reverse'.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Item	Name	Description
	Speed Indicator LEDs (*only available with digital speed control*)	Illuminates in steps to give an approximate visual indication of the commanded speed. If the Analog Speed Potentiometer option has been ordered, the Increment/Decrement keys and Speed Indicator LEDs will be replaced by the pot.

1305 Series C Parameter List

Group/ Parameter	No.	Units	Min. Value	Max. Value	Default Value
Metering					
Output Current	54	0.01 Amps	0.00	2x Drive Output Current	—
Output Voltage	1	1 Volt	0	Maximum Voltage	—
Output Power	23	0.01 kW	0.00	2x Rtd. Dr. Output Power	—
DC Bus Voltage	53	1 Volt	0	410…230V Drive 815…460V Drive	—
Output Freq.	66	0.01 Hz	0.00	Maximum Frequency	—
Freq. Command	65	0.01 Hz	0.00	+400.00	0.00
MOP Hz	42	0.01 Hz	0.00	400.00	—
Drive Temp	70	1 deg. C	0	100	—
Last Fault	4	Numeric	0	Max. Fault No.	—
% Output Power	3	1%	0	200% Drive Rated Power	—
% Output Curr.	2	1%	0	200% Rtd. Dr. Out. Curr.	—
Setup					
Input Mode	21	Text (1)	—	—	Three Wire
Freq Select 1	5	Text (1)	—	—	Adapter 1
Accel Time 1	7	0.1 sec	0.0	3600.0	10.0
Decel Time 1	8	0.1 sec	0.0	3600.0	10.0
Base Frequency	17	1 Hz	40	400	60
Base Voltage	18	1 Volt	25% of DRV	100% of Max DRV	Max DRV
Maximum Voltage	20	1 Volt	25% of DRV	110% of Max DRV	Max DRV
Minimum Freq	16	1 Hz	0	120	0
Maximum Freq	19	1 Hz	40	400	60
Stop Select	10	Text (1)	—	—	Ramp
Current Limit	36	1%	20% of DRC	150% of DRC	150% of DRC
Overload Mode	37	Text (1)	—	—	No Derating
Overload Current	38	0.1 Amps	20% of DRC	115% of DRC	115% of DRC
Sec Curr Limit	141	1%	0% of DRC	150% of DRC	0% of DRC
Adaptive I Lmt	149	Text (1)	—	—	Enabled
Advanced Setup					
Minimum Freq	16	1 Hz	0	120	0
Maximum Freq	19	1 Hz	40	400	60
Base Frequency	17	1 Hz	40	400	60
Base Voltage	18	1 Volt	25% of DRV	100% of Max DRV	Max DRV
Break Frequency	49	1Hz	0	120	30
Break Voltage	50	1 Volt	0	50% of Max DRV	Dr. Size Dep.
Maximum Voltage	20	1 Volt	25% of DRV	110% of Max DRV	Max DRV
DC Boost Select	9	Text (1)	—	—	Break Point
Start Boost	48	1 Volt	0	25% of Max DRV	Dr. Size Dep.
Run Boost	83	1 Volt	0	25% of Max DRV	0
PWM Frequency	45	0.1 kHz	2.0	8.0	4.0
Analog Invert	84	Text (1)	—	—	Disabled
4-20 mA Loss Sel	81	Text (1)	—	—	Stop/Fault
Stop Select	10	Text (1)	—	—	Ramp
DC Hold Time	12	0.1 Sec	0.0	150.0	0.0
DC Hold Volts	13	1 Volt	0	25% of Max DRV	0
DB Enable	11	Text (1)	—	—	Disabled
Motor Type	41	Text (1)	—	—	Induc/Reluc
Compensation	52	Text (1)	—	—	Comp
Frequency Set					
Freq Select 1	5	Text (1)	—	—	Adapter 1
Freq Select 2	6	Text (1)	—	—	Remote Pot
Jog Frequency	24	0.1 Hz	0.0	400.0	10.0
Prst/2nd Accel	26	Text (1)	—	—	Preset
Upper Presets	72	Text (1)	—	—	Disabled
Accel Time 2	30	0.1 sec	0.0	3600.0	5.0
Decel Time 2	31	0.1 sec	0.0	3600.0	5.0
Preset Freq 1	27	0.1 Hz	0.0	400.0	10.0
Preset Freq 2	28	0.1 Hz	0.0	400.0	20.0
Preset Freq 3	29	0.1 Hz	0.0	400.0	30.0
Preset Freq 4	73	0.1 Hz	0.0	400.0	40.0
Preset Freq 5	74	0.1 Hz	0.0	400.0	50.0
Preset Freq 6	75	0.1 Hz	0.0	400.0	60.0
Preset Freq 7	76	0.1 Hz	0.0	400.0	0.0
Skip Freq 1	32	1 Hz	0	400	400
Skip Freq 2	33	1 Hz	0	400	400
Skip Freq 3	34	1 Hz	0	400	400
Skip Freq Band	35	1 Hz	0	15	0
MOP Increment	22	1 Hz/Sec	0.00	255.00	1.00
Analog Filter	144	Text (1)	—	—	100%
Feature Select					
Run On Power Up	14	Text (1)	—	—	Disabled
Reset/Run Tries	85	Numeric	0	9	0
Reset/Run Time	15	0.1 Sec	0.5	30.0	1.0
S Curve Enable	57	Text (1)	—	—	Disabled
S Curve Time	56	0.1 Sec	0.0	300.0	0.0
Language	47	Text (1)	—	—	Approp. Lang.
Cable Length	143	Text (1)	—	—	Short
Rated Slip	146	0.1 Hz	0.0	5.0	2.0
Slip Comp Adder	148	0.01 Hz	0.00	5.00	—
IR Comp %	147	1%	0%	150%	Drv. Depend.

(Table continued on next page.)


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Group/ Parameter	No.	Units	Min. Value	Max. Value	Default Value
Output Config					
Output 1 Config	90	Text (1)	—	—	Faulted
Output 2 Config	91	Text (1)	—	—	Running
Analog Out Sel	25	Text (1)	—	—	Frequency
Above Freq Val	77	1 Hz	0	400	0
Above Curr Val	142	1%	0% of DRC	150% of DRC	0% of DRC
Faults					
Fault Buffer 0	86	Numeric	—	—	—
Fault Buffer 1	87	Numeric	—	—	—
Fault Buffer 2	88	Numeric	—	—	—
Fault Buffer 3	89	Numeric	—	—	—
Clear Fault	51	Text (1)	—	—	Ready
Cur Lim Trip En	82	Text (1)	—	—	Default Run
Line Loss Fault	40	Text (1)	—	—	F03 Enable
Flt Clear Mode	39	Text (1)	—	—	Enabled
Diagnostics					
Drive Command	58	Byte	—	—	—
Drive Status	59	Text (1)	—	—	—
Drive Alarm	60	Byte	—	—	—
Input Status	55	Byte	—	—	—
Freq Source	62	Text (1)	—	—	—
Freq Command	65	0.01 Hz	0.00	400.00	0.00
Drive Direction	69	Text (1)	—	—	Forward
Motor Mode	43	Text (1)	—	—	—
Power Mode	44	Text (1)	—	—	—
Drive Type	61	Numeric	—	—	—
Firmware Ver.	71	Numeric	—	—	—
Output Pulses	67	1 Cycle	0	65535	—
Drive Temp	70	1 deg. C	0	100	—
Set Defaults	64	Text (1)	—	—	Ready
Masks					
Logic Mask	92	Byte	—	—	01111111
Direction Mask	94	Byte	—	—	01111111
Start Mask	95	Byte	—	—	01111111
Jog Mask	96	Byte	—	—	01111111
Reference Mask	97	Byte	—	—	01111111
Accel Mask	98	Byte	—	—	01111111
Decel Mask	99	Byte	—	—	01111111
Fault Mask	100	Byte	—	—	01111111
MOP Mask	101	Byte	—	—	01111111
Local Mask	93	Byte	—	—	01111111
Owners					
Stop Owner	102	Byte	—	—	—
Direction Owner	103	Byte	—	—	—
Start Owner	104	Byte	—	—	—
Jog Owner	105	Byte	—	—	—
Reference Owner	106	Byte	—	—	—
Accel Owner	107	Byte	—	—	—
Decel Owner	108	Byte	—	—	—
Fault Owner	109	Byte	—	—	—
MOP Owner	110	Byte	—	—	—
Local Owner	137	Byte	—	—	—
Adapter I/O					
Data In A1	111	Numeric	0	149	0
Data In A2	112	Numeric	0	149	0
Data In B1	113	Numeric	0	149	0
Data In B2	114	Numeric	0	149	0
Data In C1	115	Numeric	0	149	0
Data In C2	116	Numeric	0	149	0
Data In D1	117	Numeric	0	149	0
Data In D2	118	Numeric	0	149	0
Data Out A1	119	Numeric	1	149	1
Data Out A2	120	Numeric	1	149	1
Data Out B1	121	Numeric	1	149	1
Data Out B2	122	Numeric	1	149	1
Data Out C1	123	Numeric	1	149	1
Data Out C2	124	Numeric	1	149	1
Data Out D1	125	Numeric	1	149	1
Data Out D2	126	Numeric	1	149	1
Process DIsplay					
Process Par	127	Numeric	1	149	1
Process Scale	128	Numeric	-327.68	+327.67	+1.00
Process Text 1	129	ASCII text	—	—	?
Process Text 2	130	ASCII text	—	—	?
Process Text 3	131	ASCII text	—	—	?
Process Text 4	132	ASCII text	—	—	?
Process Text 5	133	ASCII text	—	—	?
Process Text 6	134	ASCII text	—	—	?
Process Text 7	135	ASCII text	—	—	?
Process Text 8	136	ASCII text	—	—	?

(1) See the 1305-5.2 User Manual, Appendix B, Table B.5.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Programming System

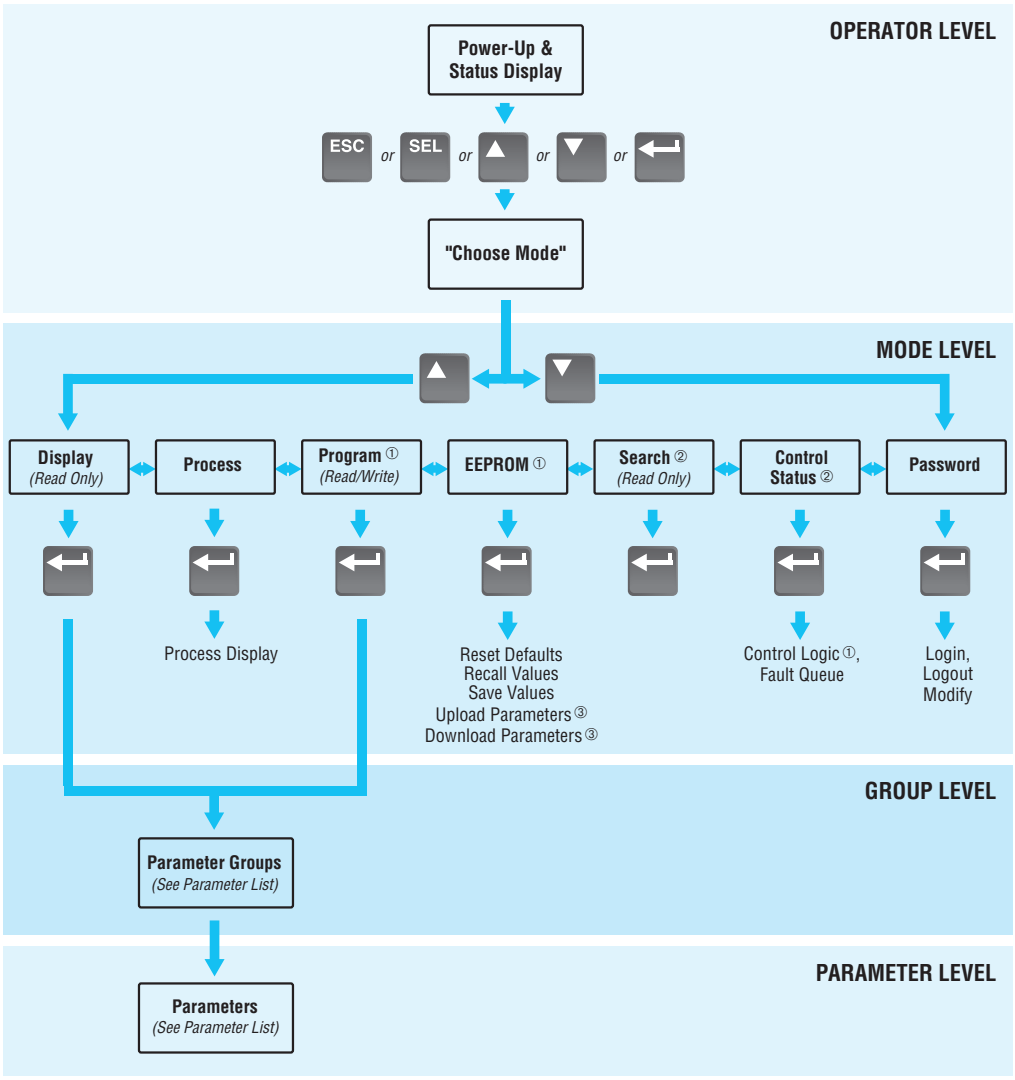

① Access to the Program and EEPROM modes, and the Control Logic and Clear Fault Queue, are disabled if the password is Logged Out.
② Series A HIM Firmware Revision 3.00 and later or Series B HIM Firmware Revision 1.01 and later only.
③ Series B HIM Firmware Revision 1.01 and later only.

U.S. Allen-Bradley Drives Technical Support - Tel: (1) 262.512.8176, Fax: (1) 262.512.2222, E-mail: support@drives.ra.rockwell.com
Online: www.ab.com/support/abdrives

Allen-Bradley, Rockwell Software, and Rockwell Automation are trademarks of Rockwell Automation, Inc.

Trademarks not belonging to Rockwell Automation are property of their respective companies.

PN-219714

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444
Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640
Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 1305-5.2.2 - September 2013
Supersedes Publication 1305.2.2 - July 1996

Copyright © 2013 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP