ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.


- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Barco Folsom R9861030* at our website: ***Click HERE***

CLM R10+

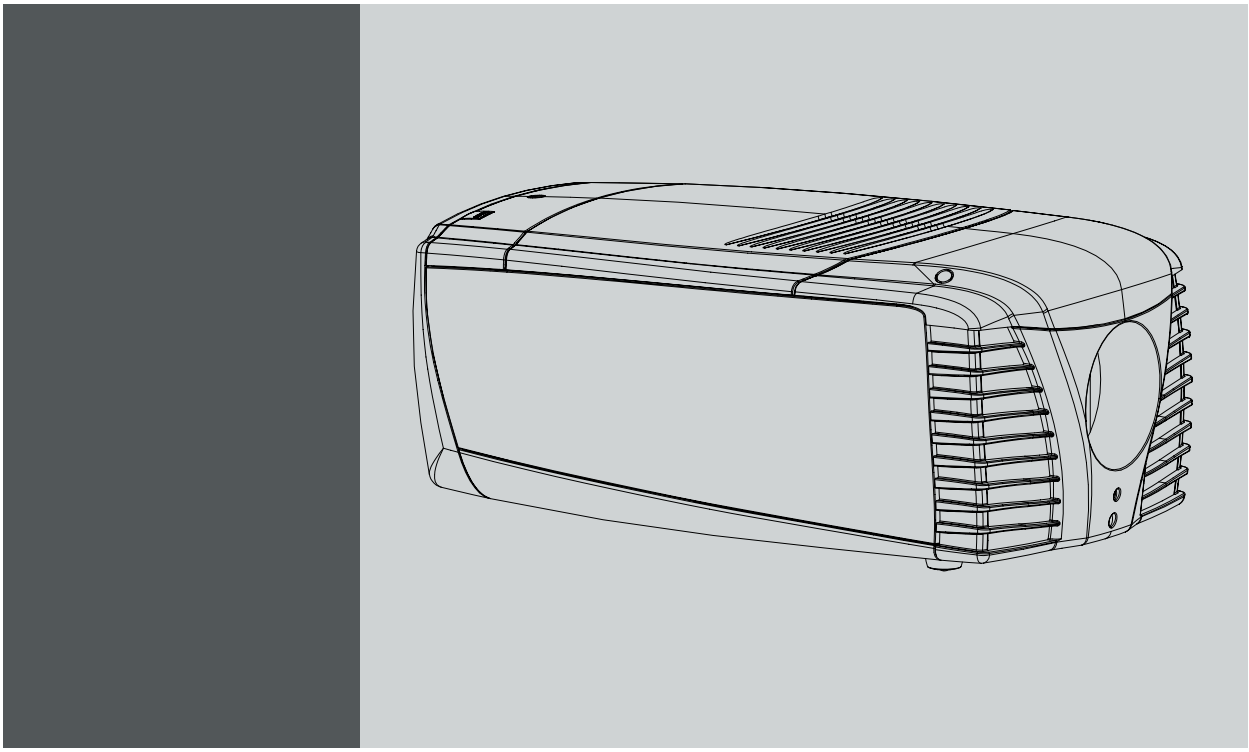

Users manual

R9050100
R90501001

R59770021/02
12/07/2007

BARCO
Visibly yours

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TABLE OF CONTENTS

1. Safety 5
1.1 General 5
1.2 Important safety instructions 6
1.3 Recycling guidelines 9
1.4 Important warnings concerning CLM flight cases 10

2. General 11
2.1 Installation requirements 11
2.2 Unpacking the projector 12
2.3 Box content 13
2.4 Projector configurations 14
2.5 Projector air inlets and outlets 17
2.6 Free download of Projector Toolset 17

3. Physical installation 19
3.1 Remote control unit (RCU) 19
3.1.1 RCU battery installation 20
3.1.2 RCU rugged case installation 21
3.1.3 RCU XLR adaptor installation 21
3.1.4 Using the XLR adaptor of the RCU 22
3.1.5 RCU usage possibilities 22
3.2 Lenses 23
3.2.1 Available lenses 23
3.2.2 Lens selection 23
3.2.3 Lens formulas 24
3.3 Alignment of a table mounted CLM projector 24
3.4 Suspension of the CLM projector with rigging clamps 25
3.5 Alignment of a ceiling mounted CLM projector 29

4. Stacking CLM projectors 31
4.1 Stacking CLM projectors 31
4.2 Aligning stacked CLM projectors 33

5. Connections 35
5.1 Power connection 35
5.2 Input source connections 37
5.3 Communication connections 38

6. Getting started 43
6.1 RCU & Local keypad 43
6.2 Terminology overview 43
6.3 Operating the projector 45
6.3.1 Switching on 45
6.3.2 Errors, warnings and messages during start up 46
6.3.3 Switching to standby 46
6.3.4 Switching off 47
6.4 Using the RCU 47
6.5 Quick setup adjustments 48
6.5.1 Text boxes ON or OFF 48
6.5.2 Quick Lens Adjustment 48
6.5.2.1 Quick Lens Adjustment via LENS key 48
6.5.2.2 Direct Lens Adjustment (RCU) 49
6.5.3 Quick picture in picture 50
6.6 Use of the AUTO button 50
6.7 Projector Address 50
6.7.1 Displaying and Programming addresses 50
6.7.2 Controlling the projector 51
6.8 Source selection 52
6.9 Controlling the Projector 52

7. Start up of the Adjustment mode 55
7.1 About the adjustment mode 55
7.2 About the use of the remote control and the local keypad 55
7.3 Start up the adjustment mode 55
7.4 Navigation and adjustments 56
7.5 On screen menus versus LCD display menus 56

8. Input menu 57
8.1 Overview flow 57
8.2 Slot module type 57
8.2.1 About Input Setup 57
8.2.2 Input configuration 58
8.3 Input locking 59

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

8.4 Minimum delay ... 60
8.5 Native resolution ... 61
8.6 Source switching ... 62
8.7 No signal ... 63
8.7.1 Background color ... 63
8.7.2 Shutdown setting ... 63
8.7.3 Shutdown retarding time ... 64

9. Image menu ... 65
9.1 Overview flow ... 65
9.2 How to select the image adjustments? ... 66
9.3 Image Settings ... 67
9.3.1 Contrast ... 67
9.3.2 Brightness ... 67
9.3.3 Saturation ... 68
9.3.4 Tint (hue) ... 69
9.3.5 Phase ... 70
9.3.6 Sharpness ... 71
9.3.7 Noise reduction ... 72
9.3.8 Color temperature ... 72
9.3.8.1 Predefined color temperature ... 72
9.3.8.2 Set a custom color temperature ... 73
9.3.9 Input balance ... 74
9.3.9.1 Introduction to Input Balance ... 74
9.3.9.2 Adjusting the input balance ... 75
9.4 Aspect ratio ... 78
9.5 Timings ... 80
9.5.1 Source timings ... 80
9.5.2 Advanced settings ... 81
9.6 Image files services ... 83
9.6.1 Files and file manipulations ... 83
9.6.2 Manual Load file ... 83
9.6.3 Delete file ... 84
9.6.4 Delete all custom files ... 85
9.6.5 Rename a file ... 86
9.6.6 File options ... 87
9.7 Save custom settings ... 87

10. Layout menu ... 89
10.1 Overview flow ... 89
10.2 Main window ... 89
10.2.1 Size adjustment ... 90
10.2.2 Position adjustment ... 92
10.3 PIP window ... 94
10.3.1 Introduction to PIP ... 94
10.3.2 Picture in Picture activation ... 94
10.3.3 Picture in Picture size of the window ... 95
10.3.4 Picture in Picture, position window ... 97
10.4 Layout file services ... 98
10.4.1 Load layout ... 98
10.4.2 Rename a layout ... 99
10.4.3 Delete a layout ... 100
10.4.4 Copy / Save as a layout ... 101

11. Lamp menu ... 103
11.1 Overview flow ... 103
11.2 Lamp power mode ... 103
11.3 Lamp power ... 104
11.4 Lamp Identification ... 105
11.5 Status and run time overview lamps ... 105
11.6 Lamp mode ... 106

12. Alignment menu ... 107
12.1 Overview flow ... 107
12.2 Orientation ... 108
12.3 Lens adjustment ... 109
12.4 Side keystone ... 110
12.5 Blanking ... 111
12.6 Optical dimming ... 112
12.7 Gamma ... 113
12.8 Internal pattern ... 113
12.9 Color space ... 114
12.10 White peaking ... 115
12.11 ScenergiX ... 116
12.11.1 Introduction ... 116
12.11.2 Preparations ... 117
12.11.3 ScenergiX activation ... 117

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

12.11.4 ScenergiX pattern ... 118
12.11.5 ScenergiX overlap zone (horizontal ScenergiX) ... 119
12.11.6 ScenergiX overlap zone (vertical ScenergiX) ... 120
12.11.7 ScenergiX size adjustment ... 121
12.11.8 Adjusting the black level of the images ... 123

13. Projector control ... 125
13.1 Overview flow ... 125
13.2 Projector address ... 126
13.2.1 Individual projector address ... 126
13.2.2 Common address ... 127
13.3 Serial communication ... 127
13.3.1 Baud rate setup ... 128
13.3.2 Interface standard ... 128
13.3.3 RS422 termination ... 129
13.4 Network ... 129
13.4.1 Introduction to a Network connection ... 130
13.4.2 DHCP setup ... 130
13.4.3 IP-address set up ... 131
13.4.4 Subnet-mask set up ... 132
13.4.5 Default Gateway set up ... 132
13.5 IR control switching ... 133
13.6 DMX ... 134
13.6.1 DMX address ... 134
13.6.2 DMX monitor ... 134
13.7 Buttons ... 136
13.7.1 Standby button ... 136
13.7.2 Auto button ... 136
13.7.3 Over temperature DMD safety ... 137
13.8 Menu position ... 137
13.9 Local LCD contrast ... 138

14. Service menu ... 139
14.1 Overview flow ... 139
14.2 Identification ... 139
14.3 Diagnosis ... 141
14.3.1 How to start up the diagnosis? ... 141
14.3.2 Versions ... 141
14.3.3 Voltages ... 142
14.3.4 I²C diagnosis ... 143
14.3.5 Temperatures ... 144
14.3.6 Fan speeds overview ... 145
14.3.7 Error logging overview ... 146
14.4 Internal service patterns ... 147
14.5 Restore factory defaults ... 147
14.6 Save custom settings ... 148

15. Maintenance ... 149
15.1 Cleaning the lens ... 149
15.2 Cleaning the exterior of the projector ... 149

16. Servicing ... 151
16.1 Replacement of the dust filter on the top side ... 151
16.2 Replacement of the dust filters on the front side ... 152
16.3 Lens installation ... 153
16.4 Lens removal ... 154
16.5 Removal of a lamp unit ... 155
16.6 Mounting a new lamp unit ... 157
16.7 Removal of an input module ... 158
16.8 Inserting an input module ... 159

17. Projector covers, removal and installation ... 161
17.1 Removal of the front cover ... 161
17.2 Removal of the lamp door ... 162
17.3 Installation of the front cover ... 163
17.4 Installation of the lamp door ... 164

A. Dimensions ... 165
A.1 Dimensions of the CLM R10+ ... 165

B. Standard Source Files ... 167
B.1 Table overview ... 167

C. Specifications ... 169
C.1 Specifications CLM R10+ ... 169
C.2 Specifications CLM 5 cable input (multi purpose) ... 170
C.3 Specifications CLM HDSDI – SDI input ... 172

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

C.4 Specifications CLM DVI input 172

D. Troubleshooting 175
D.1 Error codes 175

E. Mounting optional Carry handle 181
E.1 Mounting stacking points on top cover 181
E.2 Preparing the new carry handle 182
E.3 Preparing the projector 183
E.4 Mounting the carry handle 184

F. Order info 187
F.1 Spare part order info 187

Glossary 189

Index 191

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2. GENERAL

About this chapter

Read this chapter before installing your CLM R10+. It contains important information concerning installation requirements for the CLM R10+, such as minimum and maximum allowed ambient temperature, humidity conditions, required safety area around the installed projector, required power net, compatible signal sources, etc.

Furthermore, careful consideration of things such as image size, ambient light level, projector placement and type of screen to use are critical to the optimum use of the projection system.

Overview

- Installation requirements
- Unpacking the projector
- Box content
- Projector configurations
- Projector air inlets and outlets
- Free download of Projector Toolset

2.1 Installation requirements

Ambient temperature conditions

The maximum allowed ambient temperature for an operating Barco CLM R10+ may not exceed +40 ºC (+104 ºF).

The minimum allowed ambient temperature for an operating Barco CLM R10+ may not drop below +10 ºC (+50 ºF).

The projector will not operate if the ambient air temperature falls outside this range (+10 ºC → +40 ºC or +50 ºF → +104 ºF). Be aware that room heat rises to the ceiling. Check if the temperature near the installation site is not excessive.

The minimum storage temperature is -35 ºC (-31 ºF) and the maximum storage temperature is +65 ºC (+149 ºF).

Humidity conditions

Storage: 0 to 98% relative humidity, non-condensing.

Operation: 0 to 95% relative humidity, non-condensing.

High Altitude

For an optimal performance of the CLM at high altitude, make sure that sufficient air flow is available (maximum ambient temperature 30°C).

Projector weight

Do not underestimate the weight of one Barco CLM R10+, which is about ±31 kg (±68 lb.). Be sure that the table or truss installation on which the projector(s) has to be installed is capable of handling five (5) times the complete load of the complete system.

Power requirements

One Barco CLM R10+ requires 100-120/200-240V 12/8A 50/60Hz.

Clean air environment

A projector must always be mounted in a manner which ensures the free flow of clean air into the projectors ventilation inlets. For installations in environments where the projector is subject to airborne contaminants such as that produced by smoke machines or similar (these deposit a thin layer of greasy residue upon the projectors internal optics and imaging electronic surfaces, degrading performance), then it is highly advisable and desirable to have this contamination removed prior to it reaching the projectors clean air supply. Devices or structures to extract or shield contaminated air well away from the projector are a prerequisite, if this is not a feasible solution then measures to relocate the projector to a clean air environment should be considered.

Only ever use the manufacturer's recommended cleaning kit which has been specifically designed for cleaning optical parts, never use industrial strength cleaners on the projector's optics as these will degrade optical coatings and damage sensitive optoelectronics components. Failure to take suitable precautions to protect the projector from the effects of persistent and prolonged air contaminants will culminate in extensive and irreversible ingrained optical damage. At this stage cleaning of the internal optical units will be noneffective and impracticable. Damage of this nature is under no circumstances covered under the manufacturer's warranty and may deem the warranty null and void. In such a case the client shall be held solely responsible for all costs incurred during any repair. It is the clients responsibility to ensure at all times that the projector is protected from the harmful effects of hostile airborne particles in the environment of the projector. The manufacturer reserves the right to refuse repair if a projector has been subject to knowingly neglect, abandon or improper use.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Which screen type ?

There are two major categories of screens used for projection equipment. Those used for front projected images and those for rear projection applications.

Screens are rated by how much light they reflect (or transmit in the case of rear projection systems) given a determined amount of light projected toward them. The 'GAIN' of a screen is the term used. Front and rear screens are both rated in terms of gain. The gain of screens range from a white matte screen with a gain of 1 (x 1) to a brushed aluminized screen with a gain of 10 (x 10) or more. The choice between higher and lower gain screens is largely a matter of personal preference and another consideration called the viewing angle. In considering the type of screen to choose, determine where the viewers will be located and go for the highest gain screen possible. A high gain screen will provide a brighter picture but reduce the viewing angle. For more information about screens, contact your local screen supplier.

What image size? How big should the image be?

The projector is designed for projecting an image size : minimum 2 meter (6.6 ft.) to maximum 10 meter (32.8 ft.) (depending on the ambient light conditions), with an aspect ratio of 4 to 3 .

2.2 Unpacking the projector

What has to be done ?

At delivery the projector is packed in a cardboard box upon a wooden pallet and secured with banding and fastening clips. Futhermore, to provide protection during transport, the projector is surrounded with foam. Once the projector has arrived at the installation site, it has to be removed from the cardboard box and wooden pallet in a safe manner without damaging the projector.

Necessary tools

Side cutter

How to unpack the projector

1. Remove the banding around the carton box, by releasing the fastening clips.
2. Cut open the box but do not insert the cutter too deep, otherwise the projector could be damaged.

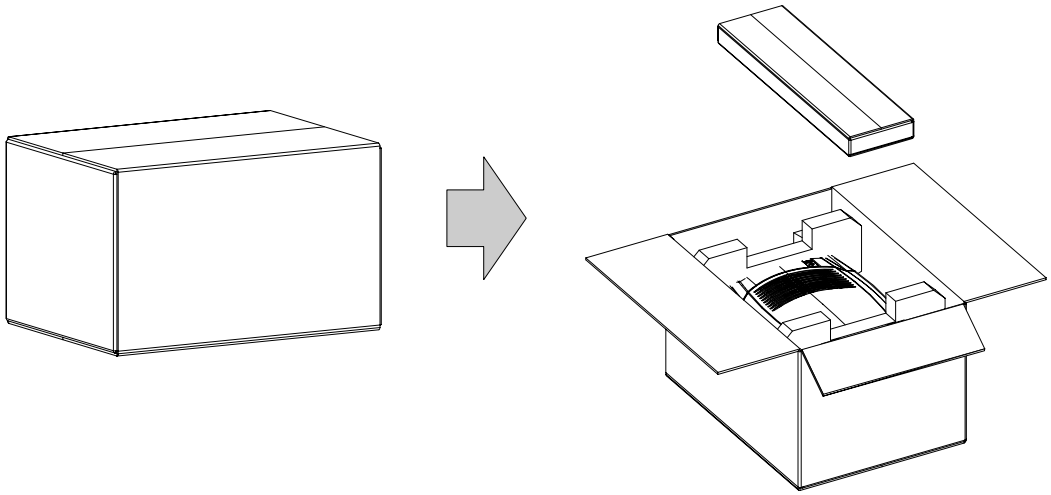


Image 2-1

3. Take out the cardboard box with the accessories such as manuals, remote control and power cord.
4. Take the projector out of the cardboard box and place it on a stable table.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

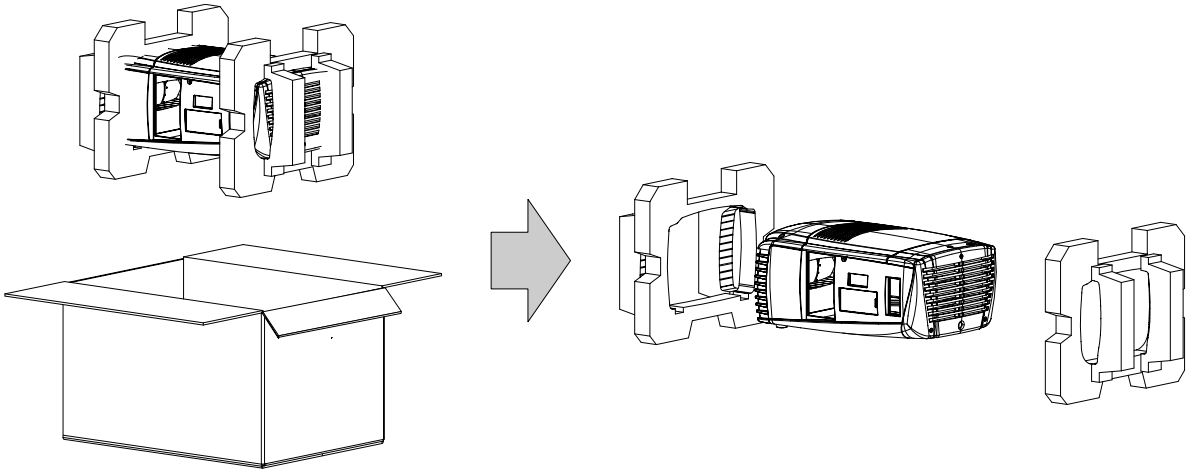


Image 2-2

5. Remove the foam rubber.

Save the original shipping carton and packing material, they will be necessary if you ever have to ship your projector. For maximum protection, repack your projector as it was originally packed at the factory.

A rubber foam inside a plastic bag is placed into the lens opening of the projector. It's recommended to reuse this foam and plastic back each time you transport the projector. This to prevent intrusion of dust and foreign particles.

CAUTION: Always remove the lens before transporting the projector !

2.3 Box content

Content

- One Barco CLM R10+, weight ±31 kg (±68 lb.).
- One Remote Control Unit (RCU).
- Two AA size batteries for the RCU.
- Two power cord of 2.5 meter, one CEEC19 and one NEM6C19.
- One user manual.
- One safety manual.

Initial inspection

Before shipment, the projector was inspected and found to be free of mechanical and electrical defects. As soon as the projector is unpacked, inspect for any damage that may have occurred in transit. Save all packing material until the inspection is completed. If damaged is found, file claim with carrier immediately. The Barco sales and service office should be notified as soon as possible.

The packaging of the CLM R10+ is provided with a shock-watch label. If this shock-watch label was triggered (red colored at arrival) during transport, that indicates the package was possibly roughly handled by the transport company. In this case, the instructions mentioned on the label, should be followed, which are: adding a note on the transportation document and informing the transport company and the Barco sales and service office as soon as possible.

Mechanical check

This check should confirm that there are no broken knobs or connectors, that the cabinet and panel surfaces are free of dents and scratches, and that the operating panel are not scratched of cracked. The Barco sales and service office should be notified as soon as possible.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.4 Projector configurations

The different configurations

Depending on the installation the projector can be mounted in different ways, the 4 different configurations are:

1. Front / Table (F/T)
2. Front / Ceiling (F/C)
3. Rear / Table (R/T)
4. Rear / Ceiling (R/C)

For a ceiling mounted configuration, the optional carry handle kit is required.

Front projection

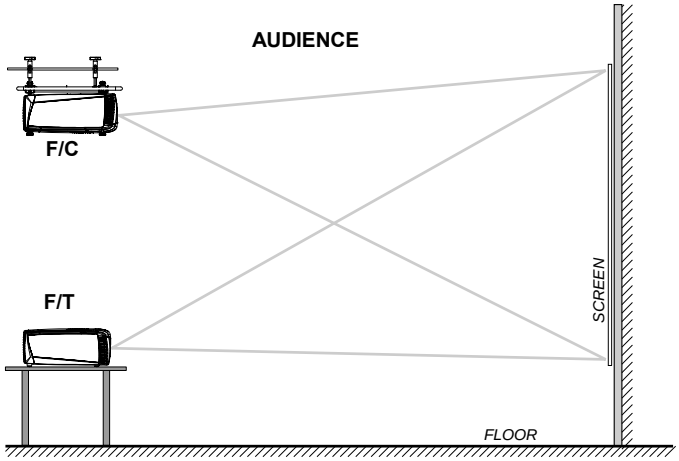


Image 2-3
Front projection

Rear projection

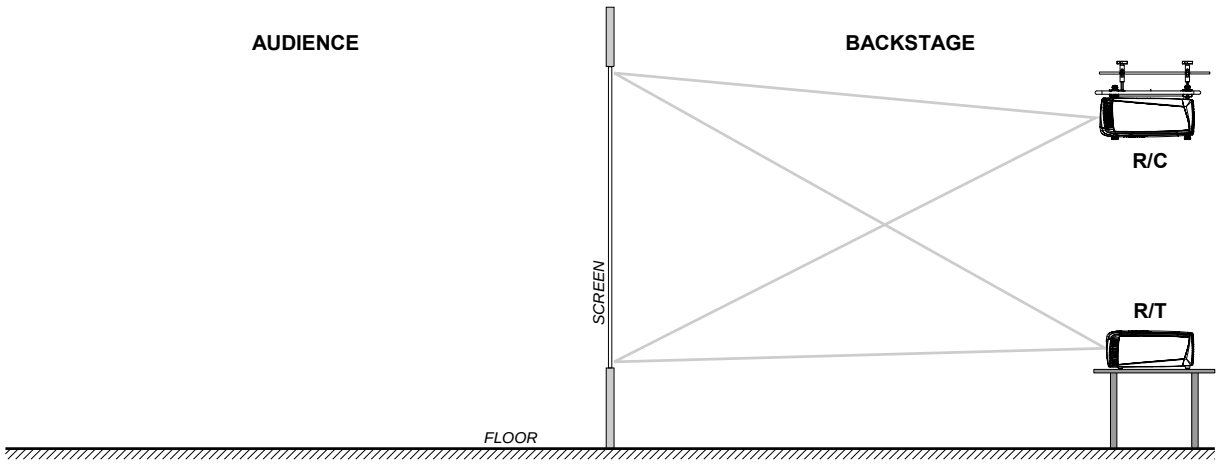


Image 2-4
Rear projection

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Positioning the projector

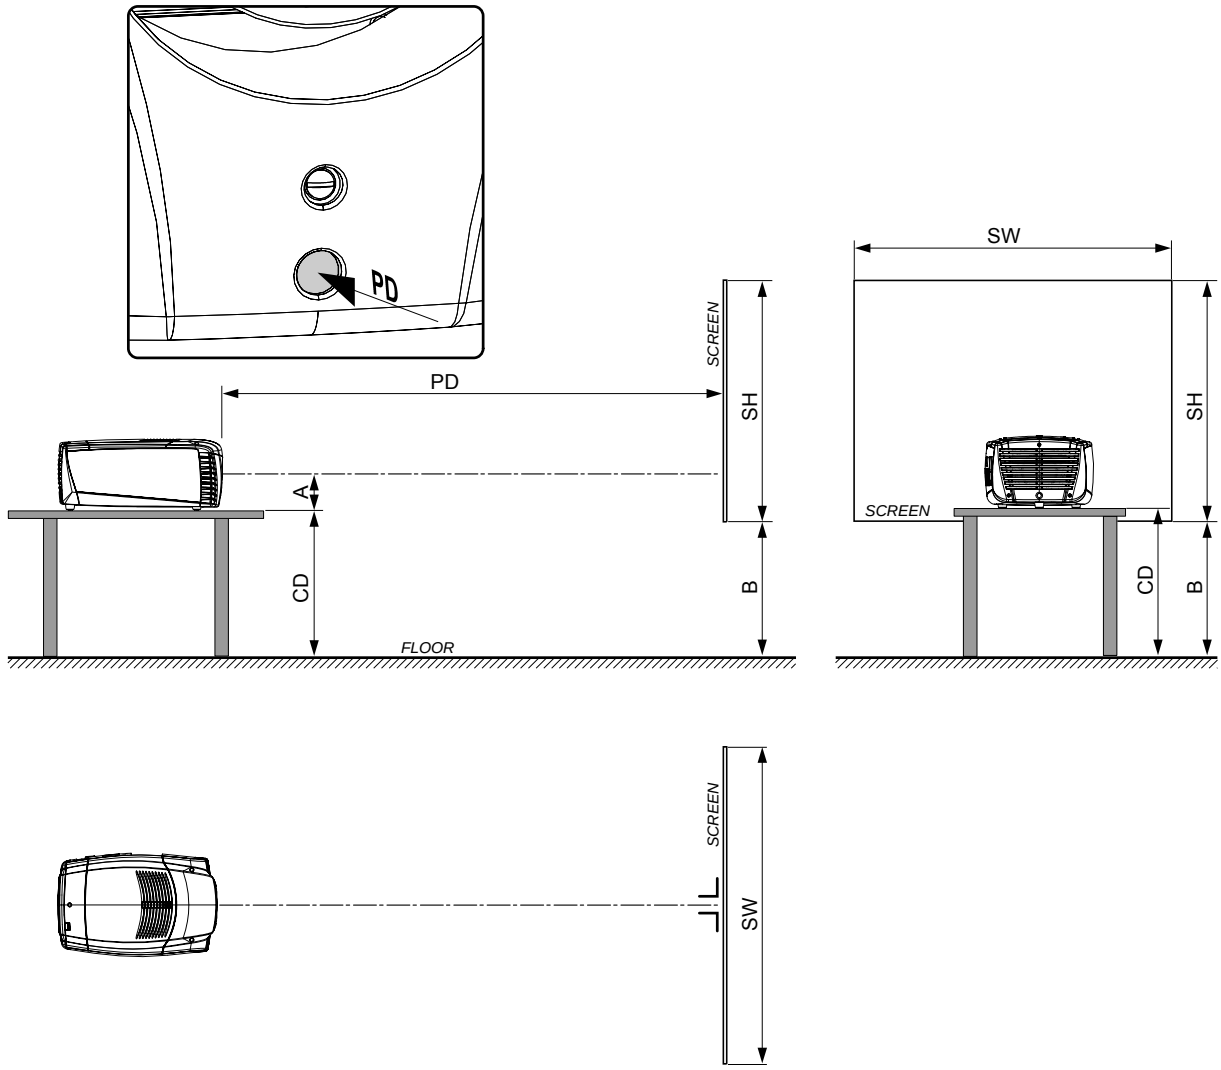


Image 2-5

On-Axis / Off-Axis projection

The position of the projector with reference to the screen may also be different depending on the installation. Basically the projector can be positioned in On-Axis or Off-Axis configuration. On-Axis configuration means that the projector is positioned so as to have the centre of the lens coinciding with the centre of the screen. Off-Axis projection is obtained by shifting the lens up, down, left or right. Several parameters can be calculated determining the position in any installation.

Formula to calculate the distance CD for On-Axis projection: `CD = SH/2 + B - A`

Shift range

The lens can be shifted with respect to the DMD (P) which result in a shifted image on the screen (Off-Axis). A 100% shift means that the centre point of the projected image is shifted by half the screen size. In other words, the centre point of the projected image falls together with the outline of the image in an On-Axis projection. Due to mechanical and optical limitations it's recommended to keep the shift values within the field of view (F) as illustrated below. Within these shift ranges the projector and lens perform excellently. Configuring the projector outside these shift ranges will result in a slight decline of image quality.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

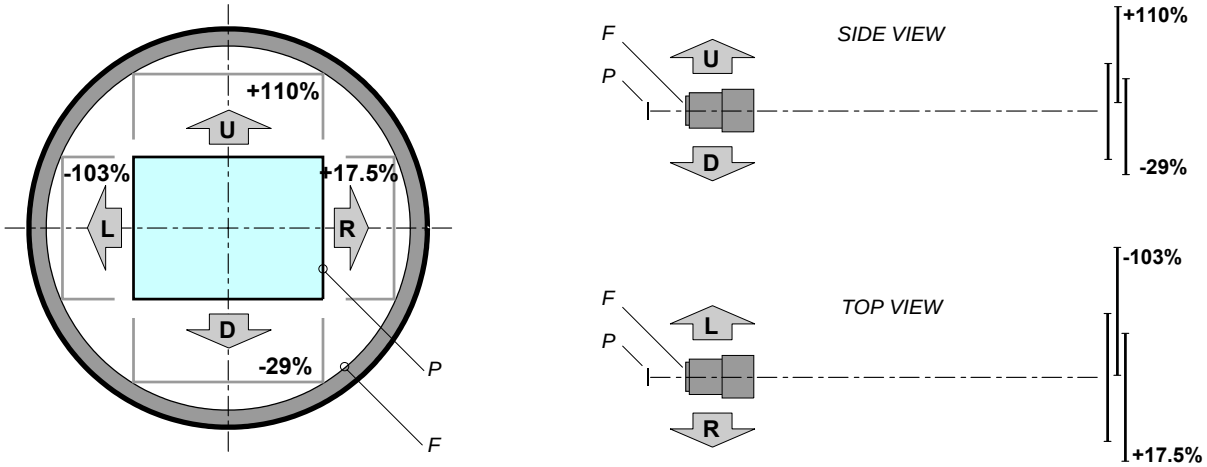


Image 2-6
Shift range

P DMD
F Field of view

It's mechanical possible to shift outside the recommended field of view (±100% UP/DOWN and ±70% LEFT/RIGHT), but this will result in a slightly decline of image quality depending on the used lens and the zoom position of the used lens. Furthermore, shifting too much in both directions will result in a blurred image corner.

Horizontal and vertical projector tilt ranges

The projector is designed to work in a table or ceiling mounted position, but small tilting is allowed.

Side to side tilt must not exceed 10°. This limit ensures that the lamp in the projector operates properly and safely. Front - back tilting is limited to 10°. When using the projector out of this range, Barco cannot guarantee a safe operation and the responsibility is for the installer/operator.

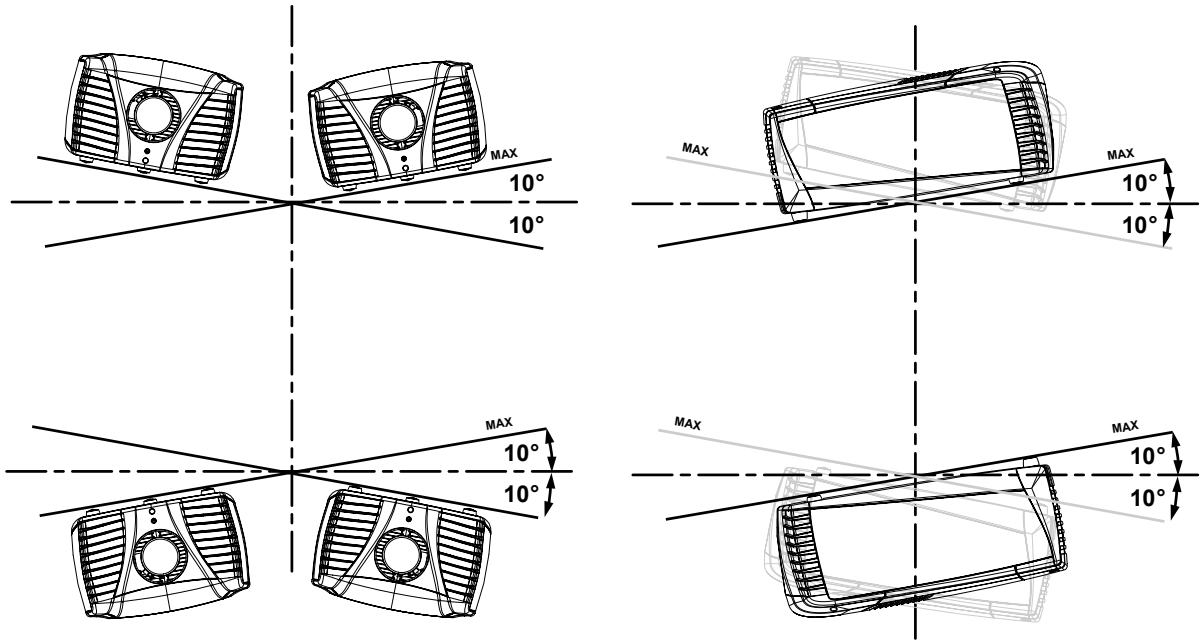


Image 2-7
Tilt area

CAUTION: Always respect the allowed tilt range of the projector. Neglecting this will result in lamp flicker, which reduces the light output and the life span of the lamp substantially. Furthermore, in the long term, the possibility exist that the lamp explodes.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.5 Projector air inlets and outlets

Air inlets and outlets

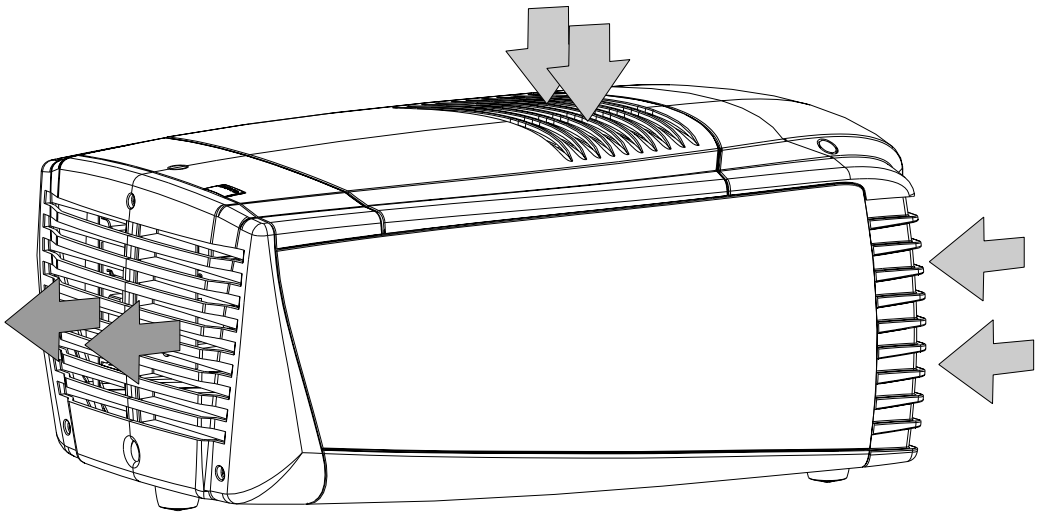


Image 2-8

The CLM R10+ has 2 inlet channels and one air outlet. The air outlet is located at the rear of the projector. The air inlets are located at the front and top of the projector.

2.6 Free download of Projector Toolset

About Projector Toolset

Projector Toolset is a software tool to set up, configure, manage and control Barco projectors.

The concept of this Projector Toolset software is modular. The basic package can be extended with several optional device plug-in modules, now and in the future available.

The Projector Toolset software works with configurations that can be loaded. Within a configuration, different snapshots can be taken. A snapshot represents a current state of a configuration and can be reloaded to return to this typical state. These terms will be used through the complete software.

Projector Toolset is a stand-alone application that runs on a Java Virtual Machine and that does not require extra services to run.

Several configurations can be controlled simultaneously. Even when the configurations are connected via different ways.

Projector Toolset is only available in a download version, no CD can be ordered.

Where to find the download file(s)

The program and all necessary plug-ins, as well as the Reference manual can be downloaded for free from Barco's Partnerzone, (URL: www.partnerzone.events.barco.com). Registration is necessary.

If you are not yet registered, click on Partnerzone registration and follow the instructions. With the created login and password, it is possible to enter the partnerzone where you can download the Projector Toolset software and the device plug-in updates as well as the corresponding reference manual.

When downloading the complete Projector Toolset, this software contains already the latest device plug-ins. When you already have the latest core version of Projector Toolset, it is possible to download only device plug-in updates from the same web site location.

As Projector Toolset is a stand alone application, it is not necessary to install any other software. A Java virtual machine is included with this download.

Installation

Download first the reference manual (Part number: R59770052) and follow the installation instructions as written in this manual.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3. PHYSICAL INSTALLATION

About this chapter

This chapter explains how to install and set up your CLM projector. If you are familiar with the projector and want to quickly set it up for temporary use, follow the “Quick setup” instructions below. For a more complete setup, follow the instructions and guides covered in the remaining subsections.

Quick setup

The following steps describe briefly how to setup your CLM projector in a table mount front projection. Note that each step refers to a corresponding procedure, which is more detailed and illustrated.

1. Install the batteries of the remote control, see "RCU battery installation", page 20.
2. Place the projector on a solid table in front of the screen at the expected throw distance. Ensure that the projector is installed at right angles (horizontally and vertically) with the screen.
3. Select and install an appropriate lens, which covers the throw ratio (= screen size / projector screen distance). For more details see "Lens selection", page 23, and "Lens formulas", page 24.
4. Connect the projector with the local power net, see "Power connection", page 35.
5. Connect your source to the appropriate input module, see "Input source connections", page 37.
6. Switch ON the projector, see procedure "Switching on", page 45.
7. Select the input slot at which your source is connected with. Do this by pressing the numeric key “1” or “2” on the remote control unit or on the local keypad, see "Source selection", page 52.
8. Zoom and shift the lens until the image is properly projected on the screen, Do this by using the “ZOOM” and “FOCUS” key on the remote control unit or on the local keypad, see"Quick Lens Adjustment via LENS key", page 48 or "Direct Lens Adjustment (RCU)", page 49. If necessary, level the projector from side to side by turning the adjustable feet in or out, see "Alignment of a table mounted CLM projector", page 24.

Overview

- Remote control unit (RCU)
- Lenses
- Alignment of a table mounted CLM projector
- Suspension of the CLM projector with rigging clamps
- Alignment of a ceiling mounted CLM projector

3.1 Remote control unit (RCU)

Introduction

The standard remote control unit (A) can be equipped with the optional rugged case (B) and an XLR adapter (C).

The remote control unit can be used wired via mini-jack or via optional rugged XLR. Note that the backlight of the remote control unit illuminate continuously when used with a wire.

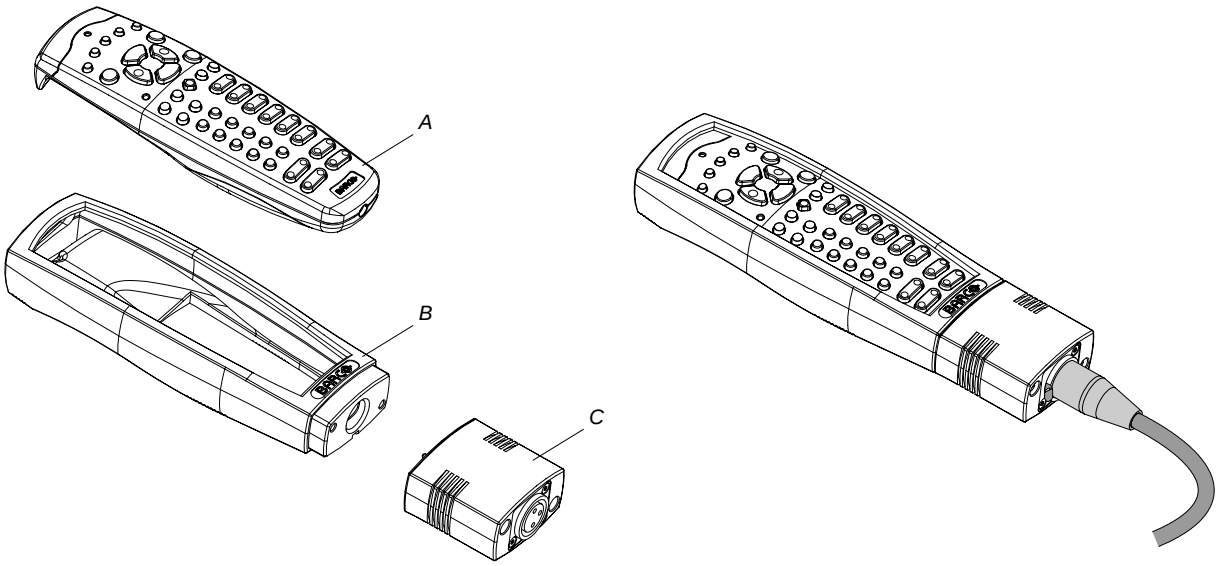


Image 3-1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Overview

- RCU battery installation
- RCU rugged case installation
- RCU XLR adaptor installation
- Using the XLR adaptor of the RCU
- RCU usage possibilities

3.1.1 RCU battery installation

Where to find the batteries for the remote control ?

The batteries are not placed in the remote control unit to avoid control operation in its package, resulting in a shorter battery life time. At delivery the batteries can be found in a separated bag attached to the remote control unit. Before using your remote control, install the batteries first.

How to install the batteries in the remote control ?

1. Push the battery cover tab with the fingernail a little backwards (1) and pull, at the same time, the cover upwards (2).

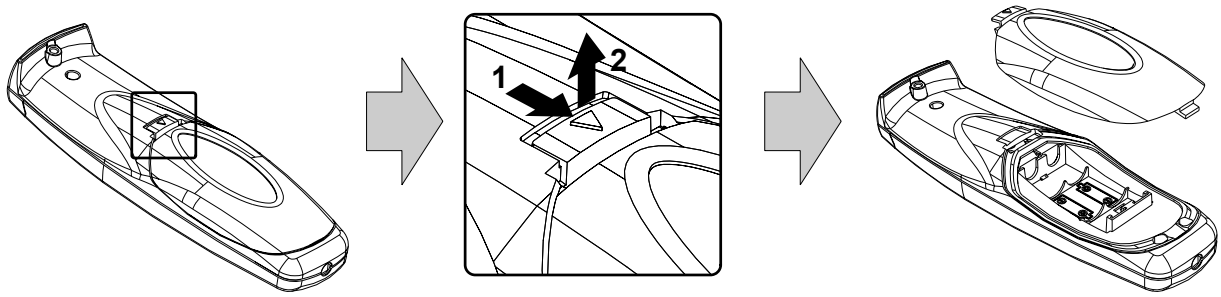


Image 3-2

2. Insert the two AA size batteries, making sure the polarities match the + and - marks inside the battery compartment.

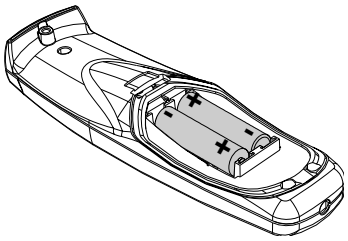


Image 3-3

3. Insert (1) the lower tab of the battery cover in the gap at the bottom of the remote control, and press (2) the cover until it clicks in place.

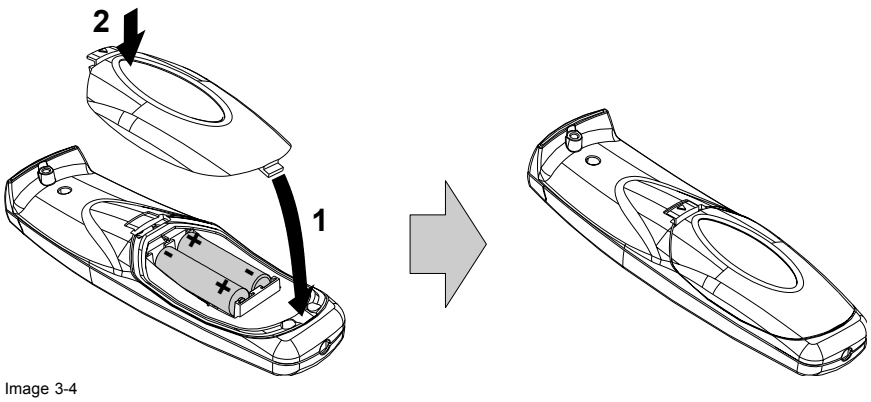


Image 3-4

To prevent battery explosion

- Danger of explosion if battery is incorrectly installed.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the manufacturer's instruction.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.1.2 RCU rugged case installation

Only with optional rugged case kit which is part of the touring kit (R9861000).

Necessary tools

No tools.

Necessary parts

Touring kit

How to install the rugged case of the remote control ?

1. Slide the bottom of the RCU into the rugged case and then pull the top of the rugged case over the top of the RCU as illustrated.

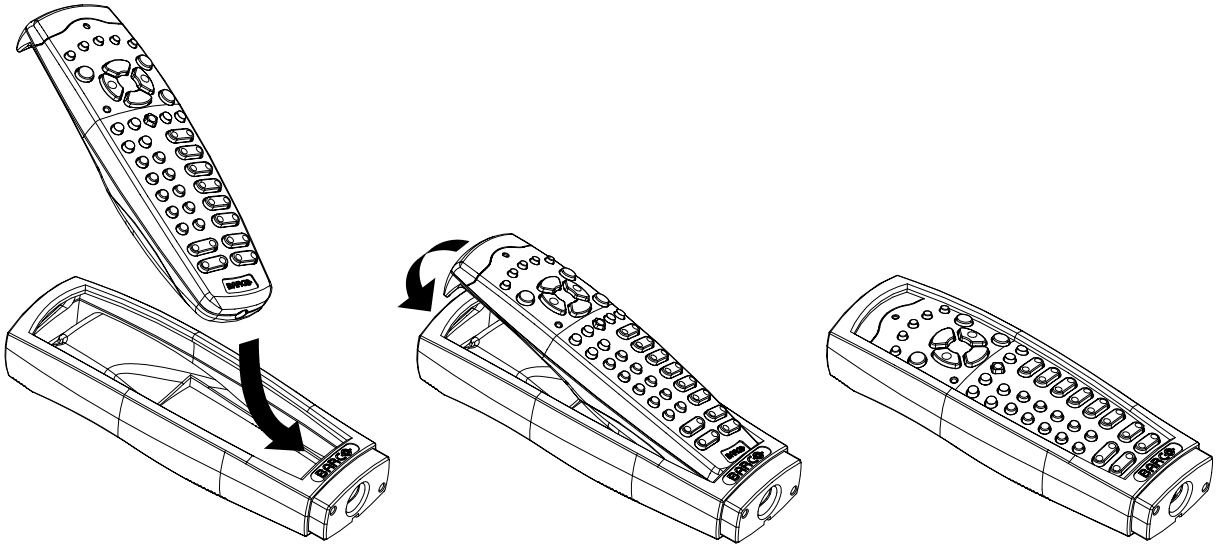


Image 3-5

3.1.3 RCU XLR adaptor installation

Install the rugged case before installing the XLR adaptor. Vice-versa, remove the XLR adaptor before removing the rugged case from the RCU.

Necessary tools

5 mm flat screw driver.

Necessary parts

XLR adapter (part of the touring kit)

How to install the XLR adaptor of the remote control unit ?

1. Push the XLR adaptor (C) upon the rugged case of the remote control unit as illustrated.
   Note: *Ensure that the text of the XLR adaptor is on top.*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

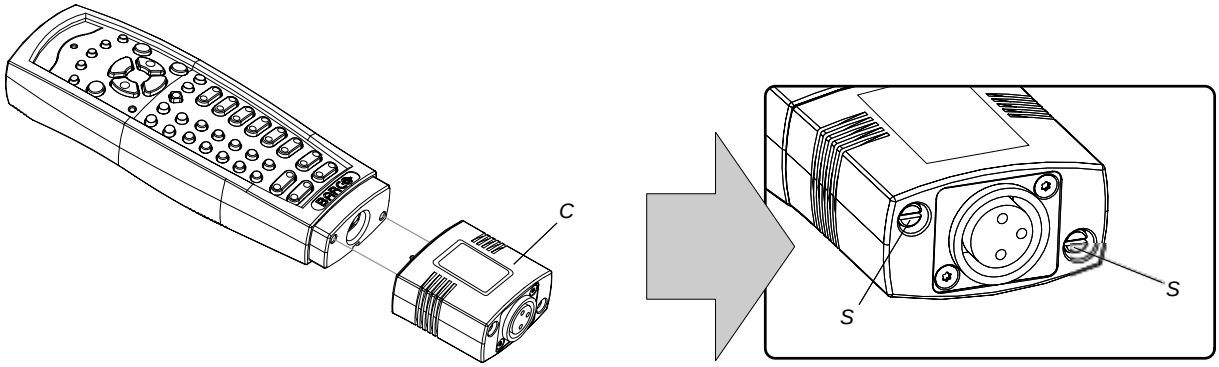


Image 3-6
Mounting the XLR adapter

2. Fasten the two screws (S) of the XLR adaptor. Turn each screw repeatedly one or two turns until both screws are tight.

3.1.4 Using the XLR adaptor of the RCU

How to use the XLR adaptor of the remote control unit ?

1. Connect a cable with XLR plug into the XLR adaptor.
2. Connect the other end of the cable with your CLM R10+.
3. Push the XLR adaptor completely against the rugged case of the remote control unit, as illustrated in the left image below, for wired communication. Pull out the XLR adaptor (about 8 mm) to switch over to wireless communication.

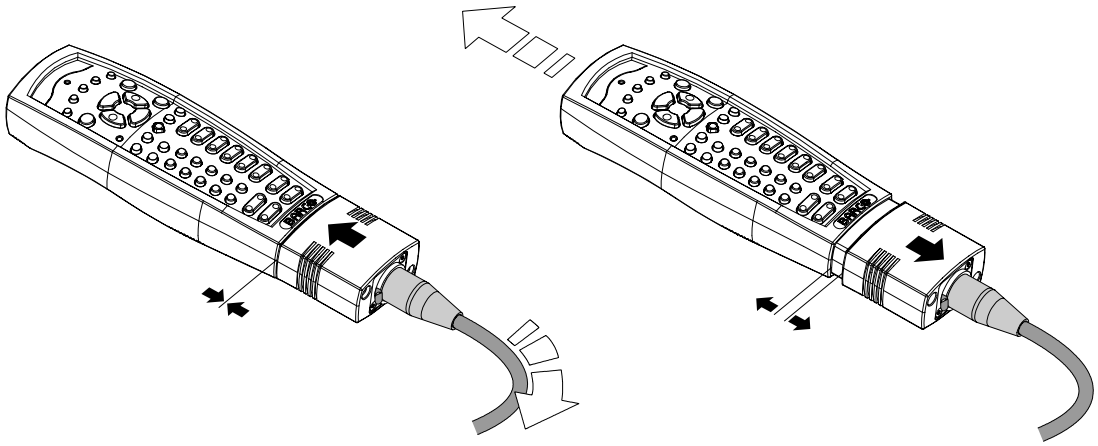


Image 3-7

3.1.5 RCU usage possibilities

Summarized possibilities

Ref.	Possibility description	Comment
a.	RCU not wired	
b.	RCU wired (mini-jack)	Backlight illuminates continuously when wire is connected. Infra red disabled.
c.	RCU with rugged case not wired	
d.	RCU with rugged case wired (mini-jack)	Backlight illuminates continuously when wire is connected. Infra red disabled.
e.	RCU with rugged case and XLR adaptor pulled out “REMOTE” and not wired	The XLR adaptor must be in the pulled out position “REMOTE”, otherwise the RCU will not function.
f.	RCU with rugged case and XLR adaptor pulled out “REMOTE” and wired	The RCU will send the commands via infra red to the projector.
g.	RCU with rugged case and XLR adaptor pushed in “WIRED” and wired	The RCU will send the commands via the cable connected with the XLR adaptor to the projector. Backlight illuminates continuously when wire is connected. Infra red disabled.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

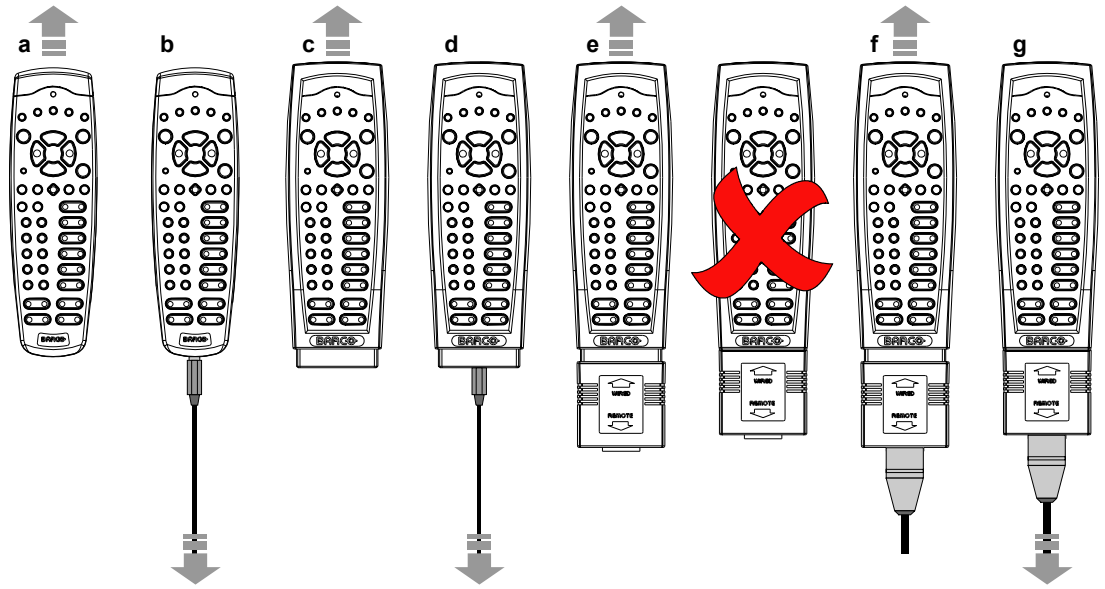


Image 3-8

3.2 Lenses

Overview

- Available lenses
- Lens selection
- Lens formulas

3.2.1 Available lenses

Available lenses for the CLM R10+

The CLD lens series can be used on the CLM R10+.



Image 3-9
R9849870: CLD zoom lens (1.2 - 1.6 : 1)



Image 3-10
R9861100: CLD zoom lens (1.6 - 2.4 : 1)



Image 3-11
R9849890: CLD zoom lens (2.4–4.3 : 1)

3.2.2 Lens selection

How to select the right lens for your application

1. Determine the required screen width (SW).
2. Determine the position of the projector in the projection room with regard to the screen and measure the projector-screen distance (PD).
3. Use the lens formulas to find the best corresponding PD with regard to the measured projector-screen distance for the required screen width SW.
   Tip: *Divide PD by SW to determine the approximately required throw ratio. Choose a lens, which captures the calculated throw ratio. Use the lens formula of the chosen lens to recalculate exactly.*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

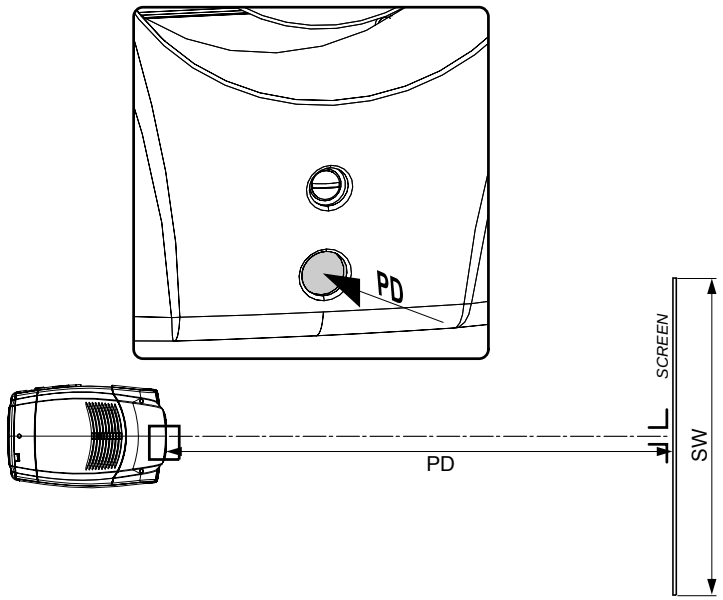


Image 3-12
PD for lens selection

3.2.3 Lens formulas

Formulas

Lens	Throw ratio for CLM	Metric formulas (meter)	Inch formulas (inch)
CLD (1.2 - 1.6 : 1)	1.2 - 1.6	PD_{min}=1.216 x SW - 0.05 PD_{max}=1.657 x SW - 0.097	PD_{min}=1.216 x SW - 1.97 PD_{max}=1.657 x SW - 3.80
CLD (1.6 - 2.4 : 1)	1.6 - 2.4	PD_{min}=1.60 x SW - 0.04 PD_{max}=2.38 x SW - 0.11	PD_{min}=1.60 x SW - 1.73 PD_{max}=2.38 x SW - 4.25
CLD (2.4–4.3 : 1)	2.4 - 4.3	PD_{min}=2.42 x SW - 0.09 PD_{max}=4.39 x SW - 0.22	PD_{min}=2.42 x SW - 3.74 PD_{max}=4.39 x SW - 8.75

CAUTION: Never transport the projector with a lens mounted in the lens holder. Always remove the lens before transporting the projector. Neglecting this can damage the lens holder and prism.

3.3 Alignment of a table mounted CLM projector

How to align a table mounted CLM projector

1. Place the projector in the desired location. Take into account the zoom range of the used lens and the size of the screen.
2. Project one of the internal hatch patterns on the screen.
3. Turn the adjustable feet in or out until the projected hatch pattern is perfectly rectangle shaped and leveled.

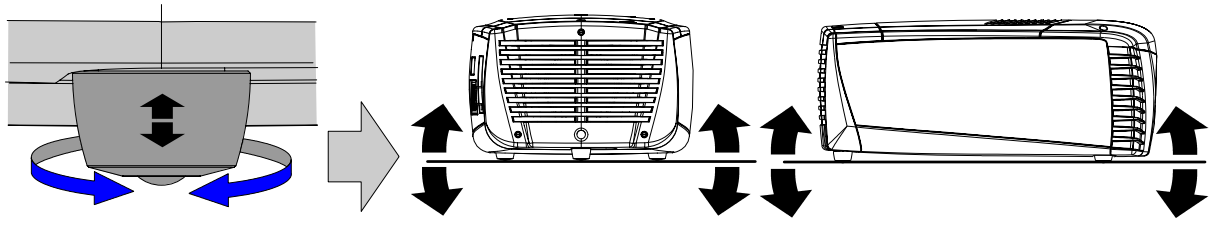


Image 3-13
Level adjustment

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

When this is achieved, the projector is set horizontal and vertical at right angles to the screen.

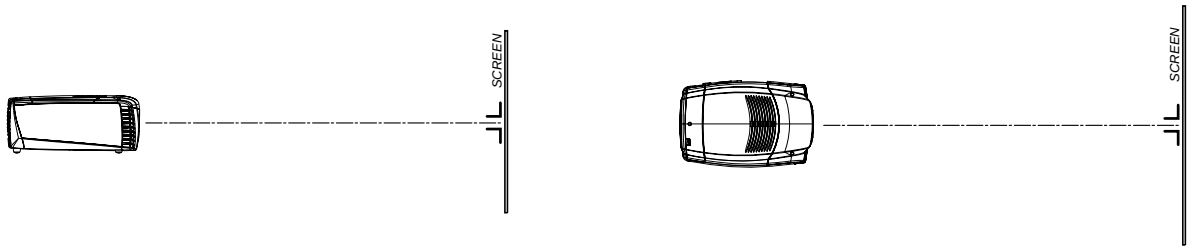


Image 3-14

3.4 Suspension of the CLM projector with rigging clamps

Before the projector can be suspended, the optional carry handle must be mounted on the projector. For more information about the optional carry handle, see "Mounting optional Carry handle", page 181.

CAUTION: Consult a professional structural engineer to ensure that the suspension system is suitable for this task.

Rigging points and rigging clamps

The carry handle is provided with six slots. Four slots are longitudinally oriented (A) and two slots are transversely oriented (B). In each slot, a rigging point can be inserted (this rigging point is mounted on the clamps) and the position in the slot can be adjusted depending of the size of the truss installation. The rigging clamps turn in these rigging points and these clamps allow an easy and fast physical setup of the projector in a hanging configuration.

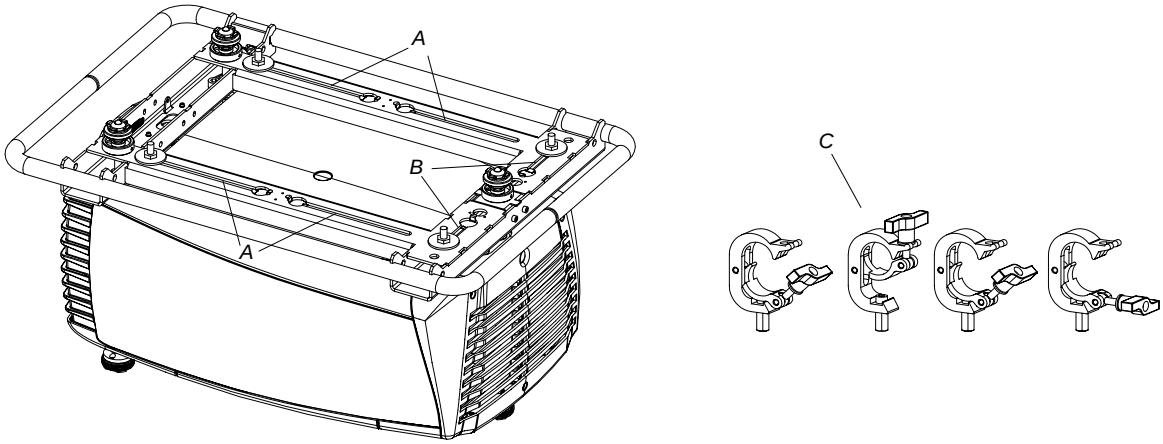


Image 3-15
Rigging slots and clamps

Necessary tools

Open end spanner 17 mm

Necessary parts

- Four rigging clamps (R855943)
- Safety cable (B361213)
- Two snap hook locks (B361212)

Mounting the rigging points into the handle

1. Push the cup square neck bolt through the slot input and slide the bolt into the slot.
   Note: *Take the bolt by its thread so that it does not fall inside the carry handle.*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

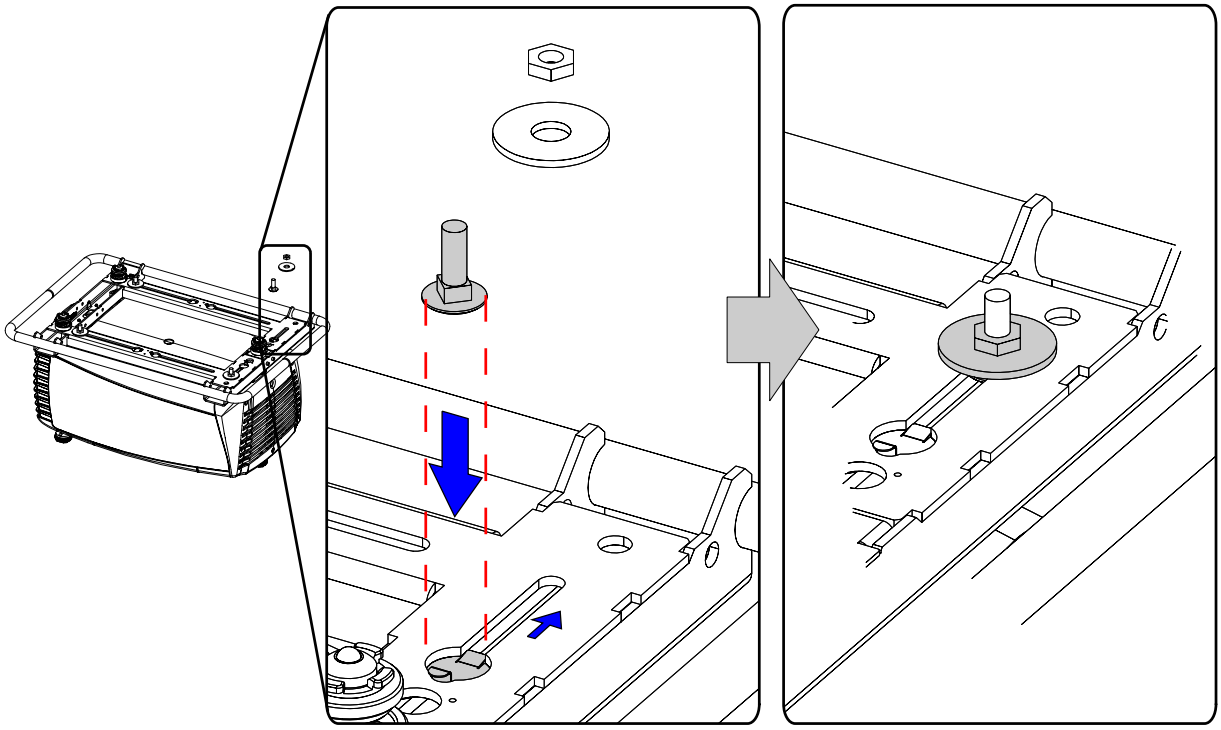


Image 3-16
Mount rigging points

The cover plate will move down while pushing with the head but comes back to its position once the bolt is in the slot.

2. Slide a washer on the bolt and turn on a nut.
3. Measure the distance, center tube as reference, between the two used support bars of the truss.

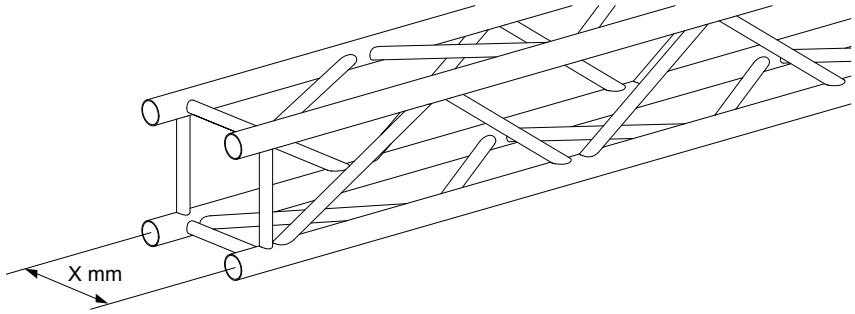


Image 3-17

4. Slide the rigging points on there place in the slots, according the measured distance and secure this position by fastening the nut completely. Ensure that the rigging points are symmetrically lined up, so that the projector will hang in balance. If necessary move point B from a transversal position to a longitudinal position.
   Warning: *Always secure the rigging points after adjustment.*

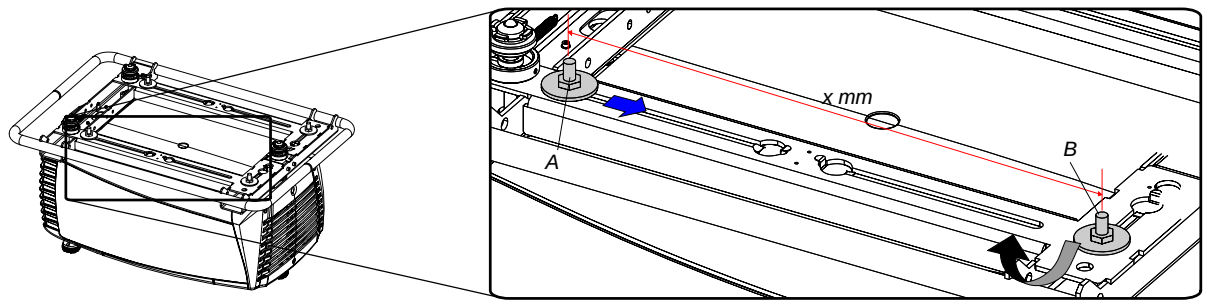


Image 3-18
Set up truss width

5. Turn the rigging clamps on the bolts.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

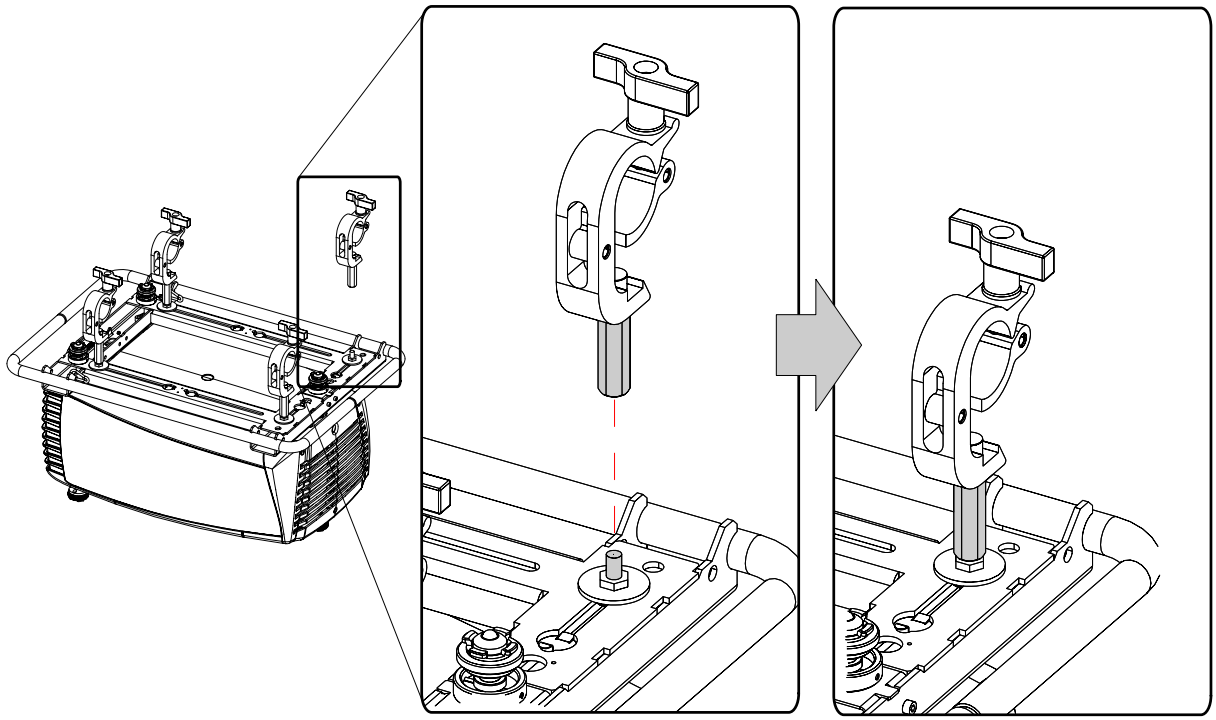


Image 3-19
Mounting rigging clamps

6. Place all four rigging clamps in open position as illustrated.

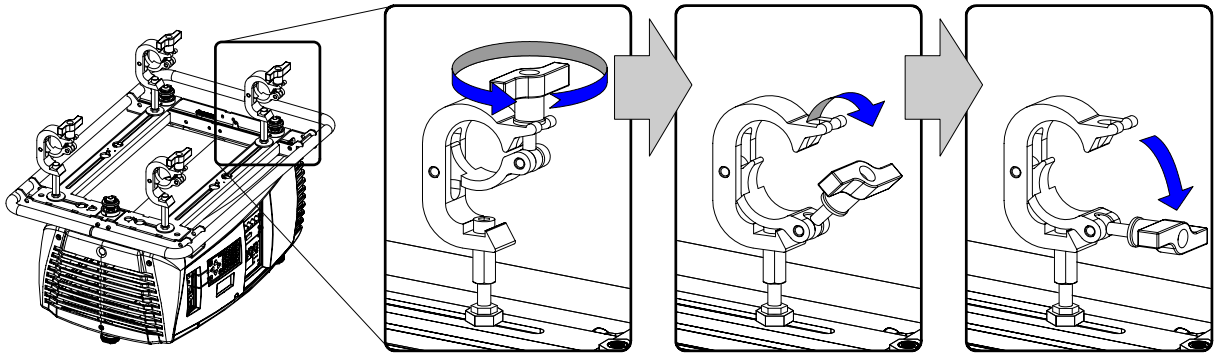


Image 3-20
Opening clamps

7. Place the projector (upside down) under the truss installation and lower the truss until the support bars of the truss are nearby the rigging clamps on the projector.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

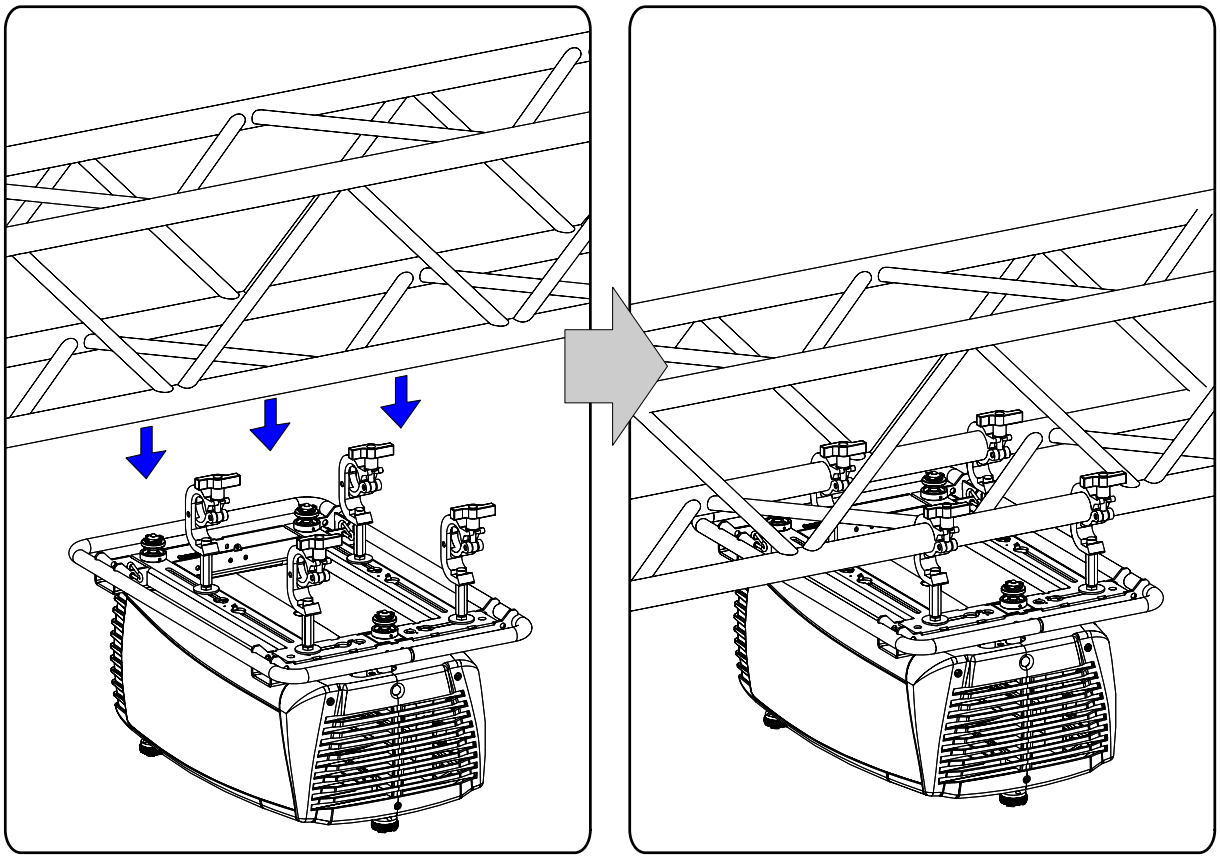


Image 3-21
Mounting to truss

8. Lift up the projector and hook the four rigging clamps over the support bars of the truss.
9. Lock all four rigging clamps.
10. Install the safety cable. Hook one end into a provided hole. Route the cable around the truss and hook the other end into a second hole in the carry handle.

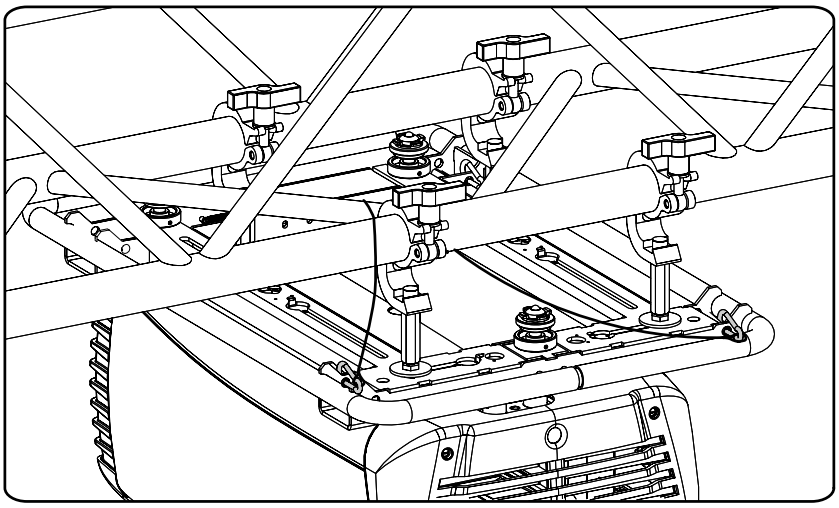


Image 3-22
Security cable

CAUTION: Always mount the safety cable when suspending the projector.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.5 Alignment of a ceiling mounted CLM projector

Necessary tools

Spanner 17 mm

How to align a ceiling mounted CLM projector

1. Install the projector in the desired location. See "Suspension of the CLM projector with rigging clamps", page 25. Take into account the zoom range of the used lens and the size of the screen.
2. Project one of the internal hatch patterns on the screen.
3. Adjust the height of the rigging clamps with respect to the projector, until the projected hatch pattern is rectangle shaped and leveled. Separate skew adjustment is still possible.

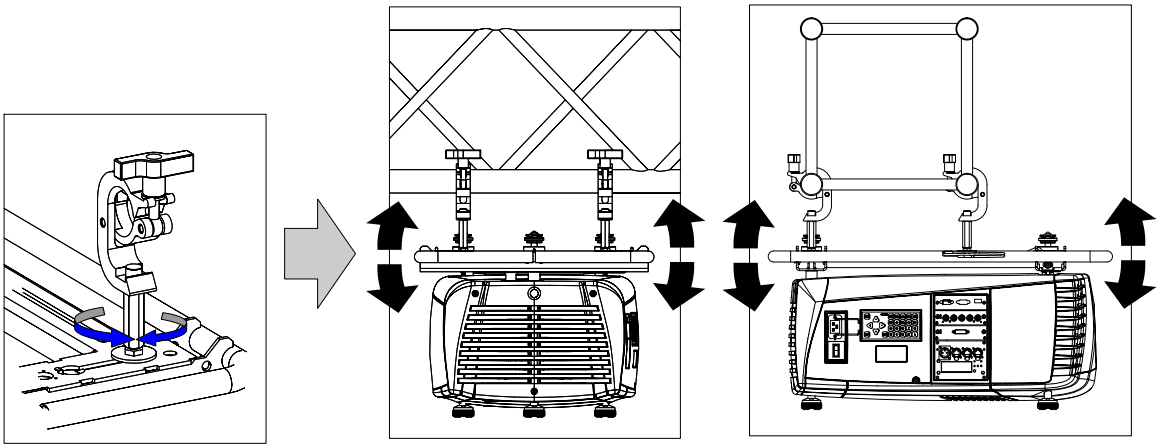


Image 3-23
Ceiling mount alignment

4. Adjust the skew adjustment until the rectangle is perfectly shaped.

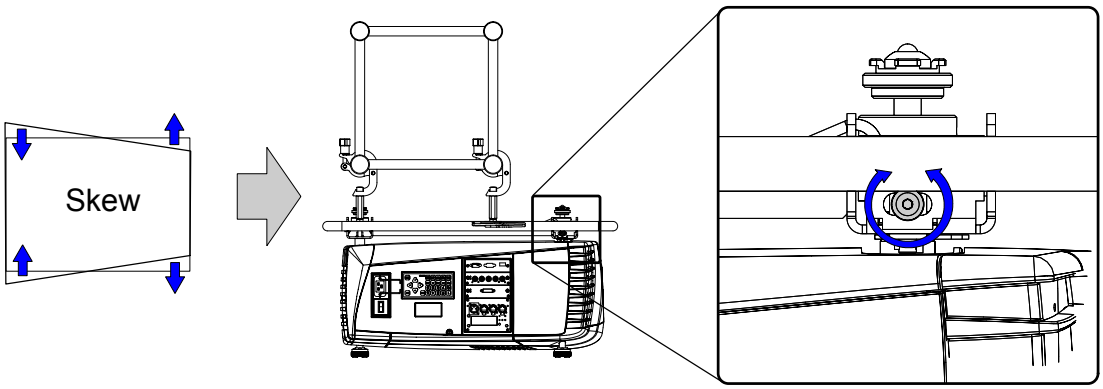


Image 3-24
Skew adjustment

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4. STACKING CLM PROJECTORS

Stacking of CLM projectors is only possible with optional touring kit. See "Mounting optional Carry handle", page 181 for more information.

Overview

- Stacking CLM projectors
- Aligning stacked CLM projectors

4.1 Stacking CLM projectors

Preparations

Install first a carry handle on the upper projector.

Install at minimum the 3 locking points on the lower projector or install a complete carry handle kit.

How to stack CLM projectors

1. Place the projectors on top of each other. Ensure that all three interlocking pins (A) match with their corresponding interlocking sockets (B).
   Tip: *In case of stacking projectors for a ceiling mount configuration, first turn the projectors upside down before placing the projectors on top of each other.*

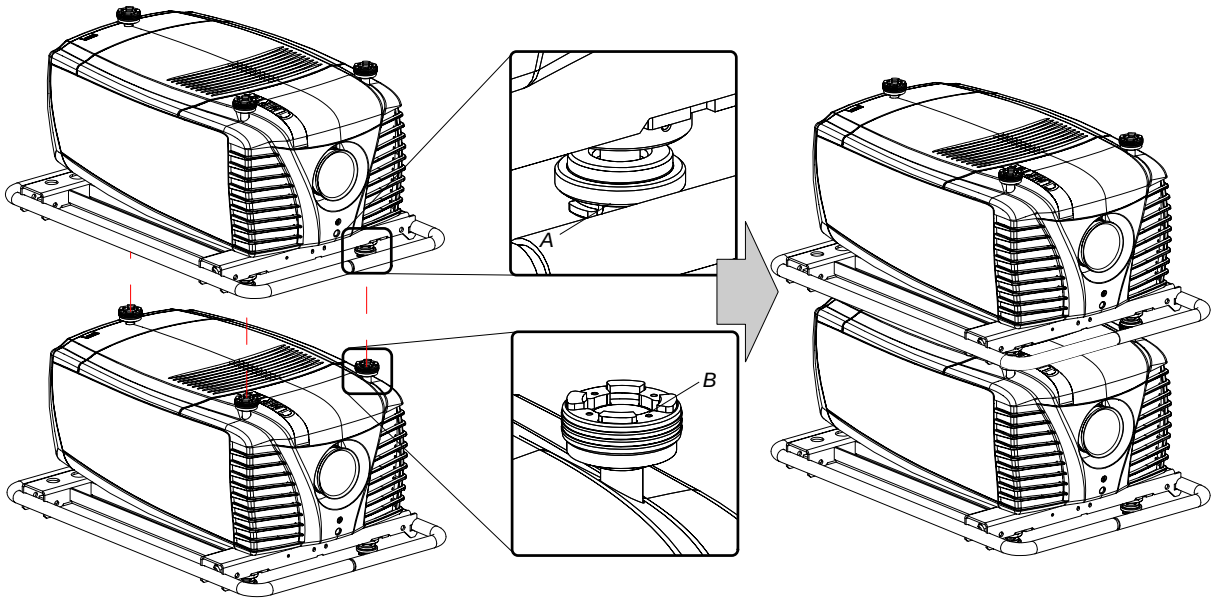


Image 4-1
Stacking projectors

2. Attach the two projectors together by closing all three interlocking adapters as illustrated.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

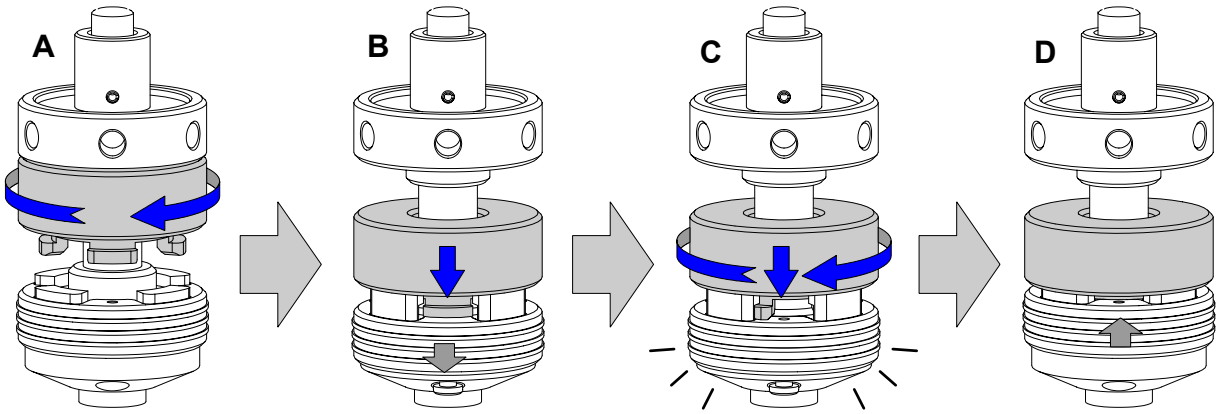


Image 4-2
Close the interlocking

3. Are these projectors stacked for a ceiling mounted configuration?

   If yes, mount a safety cable from one side of the projector around the truss installation to the other side of the projector. Repeat this for the second projector.

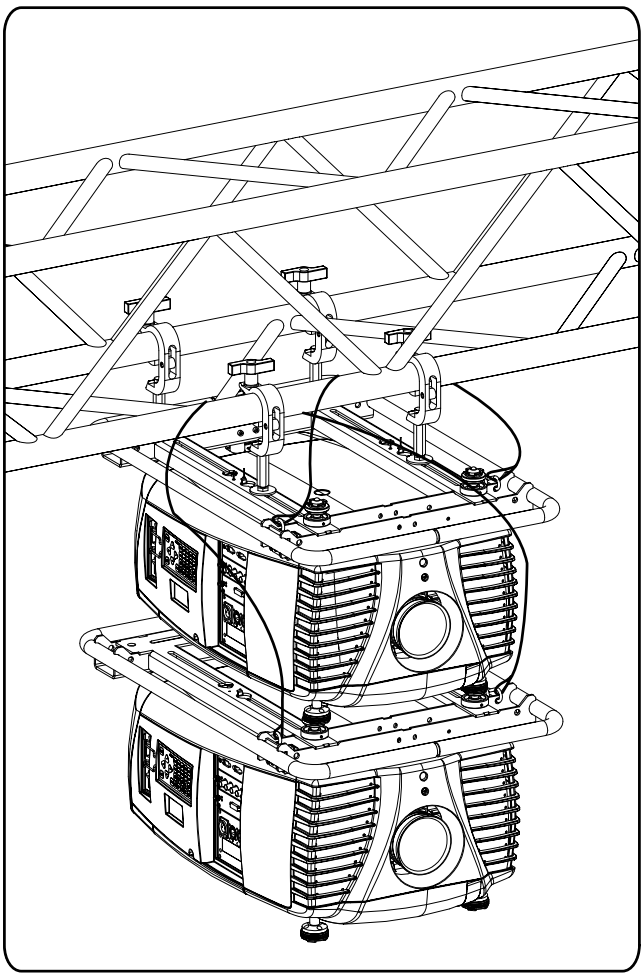


Image 4-3
Ceiling mounted stacked projectors

How to open an interlocking adapter

1. Open an interlocking adapter as illustrated.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

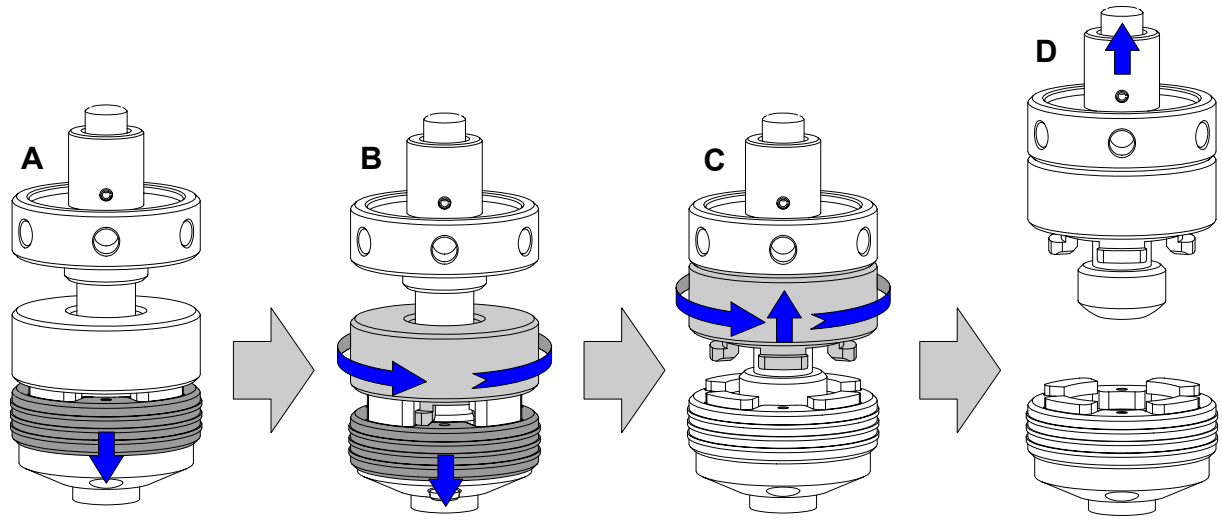


Image 4-4
Open the interlocking

WARNING: Never open an interlocking adapter of a stacked projector which is still suspended. First place the stacked projectors on the floor.

4.2 Aligning stacked CLM projectors

How to align two stacked CLM projectors

1. Make sure that the internal hatch pattern projected by the reference projector is sharp and has a perfect rectangle outline. If this is not the case, readjust the reference projector before aligning the other stacked projector(s) with the reference hatch pattern.
   Note: *The reference projector in a stacked configuration is the lowest projector in case of table mount and the uppermost projector in case of ceiling mount.*
2. Project with the stacked projector the same internal hatch pattern as the reference projector.
   Tip: *Use a white colored hatch pattern for the reference projector and e.g. green colored for the stacked projector. This makes it easier to see the difference between both hatch patterns projected.*
3. If necessary, adjust the rotation of the stacked projector with respect to the reference projector by turning in or out the height adjustment ring of the interlocking adaptors at the front of the stacked projector. Adjust until the outline of the hatch pattern is most symmetric with the reference hatch pattern.
   Tip: *You can increase leverage by using a screw driver in the holes of the adjustment ring*

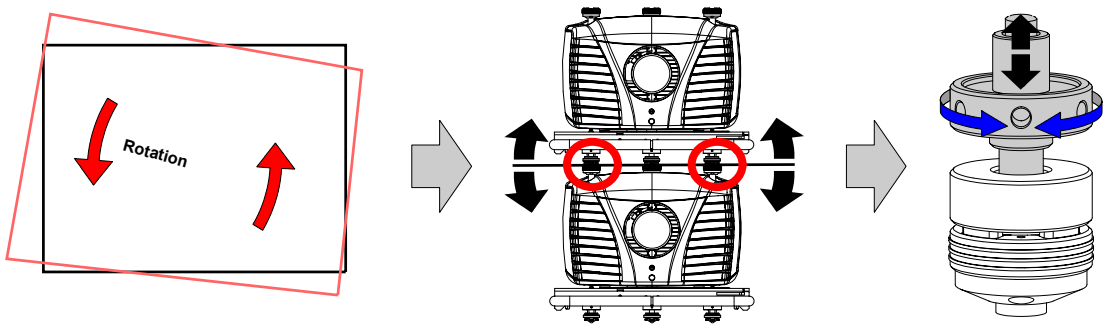


Image 4-5
Rotation adjustment

4. If necessary, adjust the inclination of the stacked projector with respect to the reference projector by turning the height adjustment ring of the interlocking adaptor at the rear of the stacked projector in or out. Adjust until the outline of the hatch pattern is most symmetric with the reference hatch pattern.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

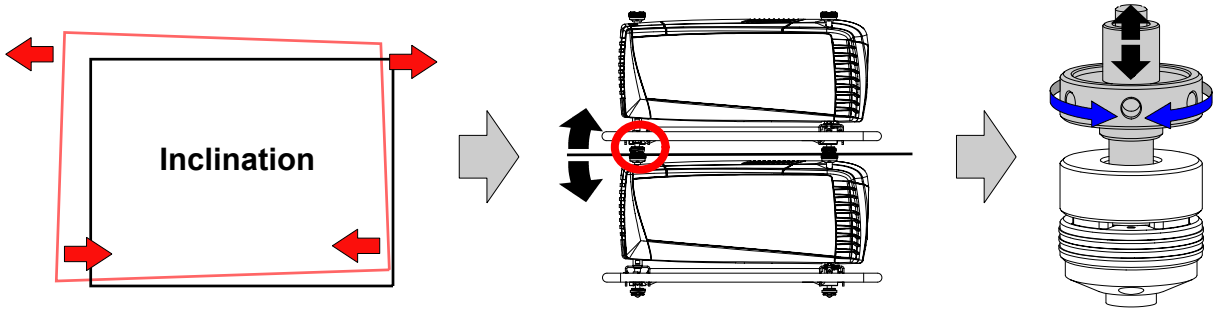


Image 4-6
Inclination adjustment

5. If necessary, adjust the skew of the stacked projector with respect to the reference projector by turning the screw on the right front side. Adjust until the outline of the hatch pattern is most symmetric with the reference hatch pattern.

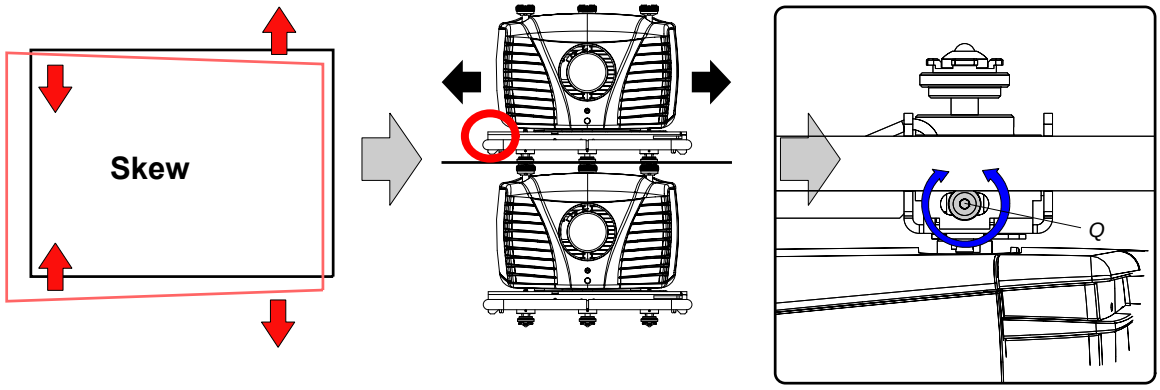


Image 4-7
Skew adjustment

6. Shift the hatch pattern horizontally and vertically until the outline of the hatch pattern is most symmetrically placed with respect to the reference hatch pattern.
   Note: *Note that the "Shift" function is motorized, which means that you have to access the projector software, via the local keypad or remote control unit, to operate the "Shift" function.*

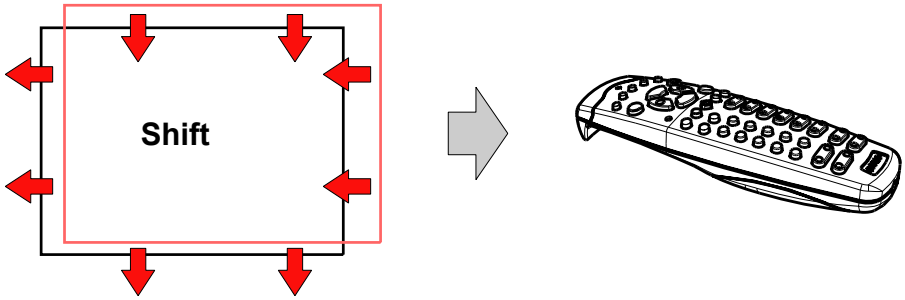


Image 4-8
Shift adjustment

7. Zoom the hatch pattern in or out until the outline of the hatch pattern matches exactly the outline of the reference hatch pattern.
   Note: *Note that the "Zoom" function is motorized, which means that you have to access the projector software, via the local keypad or remote control unit, to operate the "Zoom" function.*

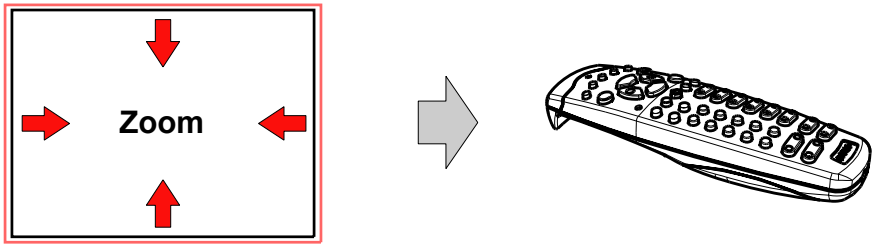


Image 4-9
Zoom adjustment

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5. CONNECTIONS

About this chapter

This chapter describes more in detail the power (P), the input source (S) and the communication (C) connections of the CLM R10+.

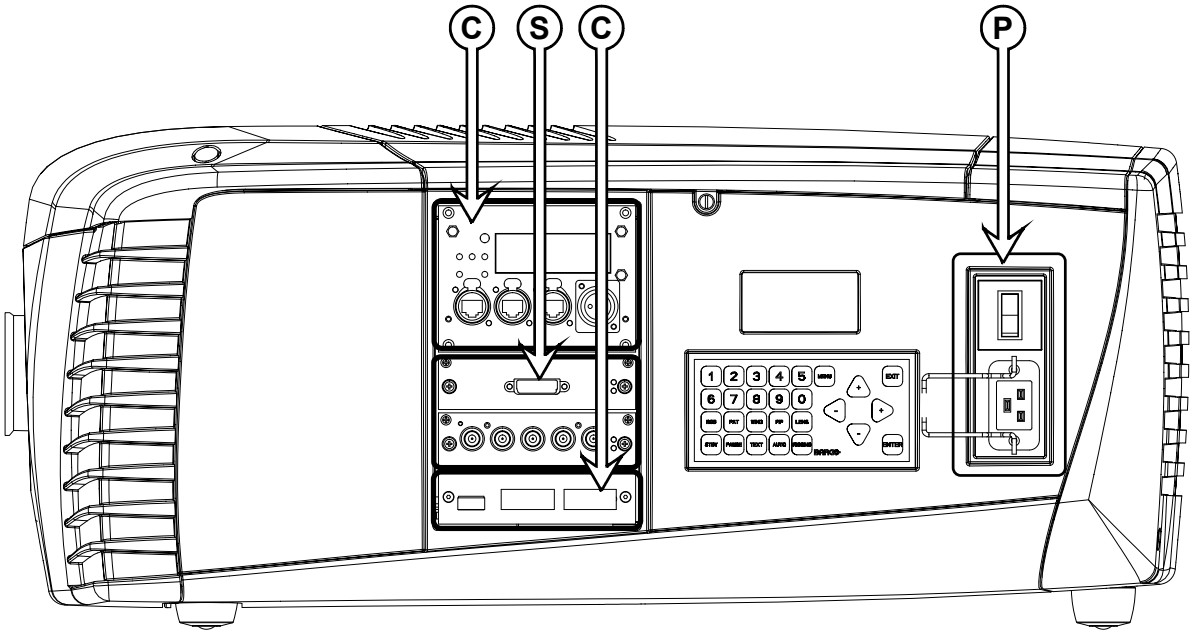


Image 5-1

Overview

- Power connection
- Input source connections
- Communication connections

5.1 Power connection

CAUTION: Use only the power cord provided with the projector.

How to connect with the local power net

1. Ensure that the power switch (S) stands in the “0” (OFF) position.
2. Connect the power cord with the power input socket of the projector (P).
3. Secure the power plug by locking the plug holder clamp (H).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

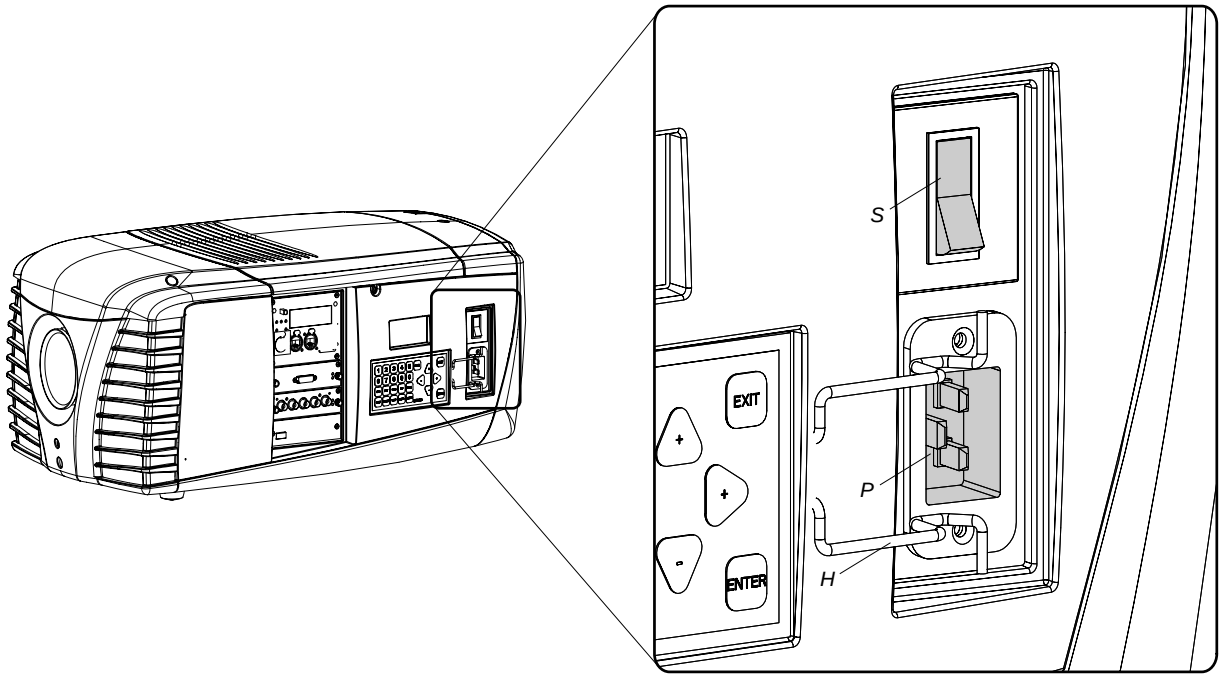


Image 5-2
Power input

4. Connect the male side of the power cord to the local power net.
   Caution: *Ensure that the power net meets the power requirements of the projector, which are: 100-120/200-240V 12/8A 50/60Hz.*

WARNING: Do not attempt operation if the AC supply and cord are not within the specified voltage and power range.

CAUTION: Once the projector is switched to standby, the lamp cooling fans will continue to run for approximately five minutes to ensure that the projector and lamp have sufficiently cooled, at which point the fans will automatically decrease to standby. To avoid thermal stress that can lead to premature lamp failure, never unplug the power cord while the lamp cooling fans are running. Never unplug the power cord to power down the projector, first switch off the power switch and then unplug the power cord.

Fuses

The projector is protected with an automatic circuit breaker of 20 A which is built in into the power switch.

Power input voltage versus light output

When the input power is between 170V and 264V the maximum light output with 4 lamps can be reached.

In the low input power ranges the light output will be reduced to protect the projector.

When the input power is between 100V and 140V, 75% of the light output with 3 lamps can be reached.

When the input power is between 90V and 100V the light output is reduced to 62.5% with only 3 lamps.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

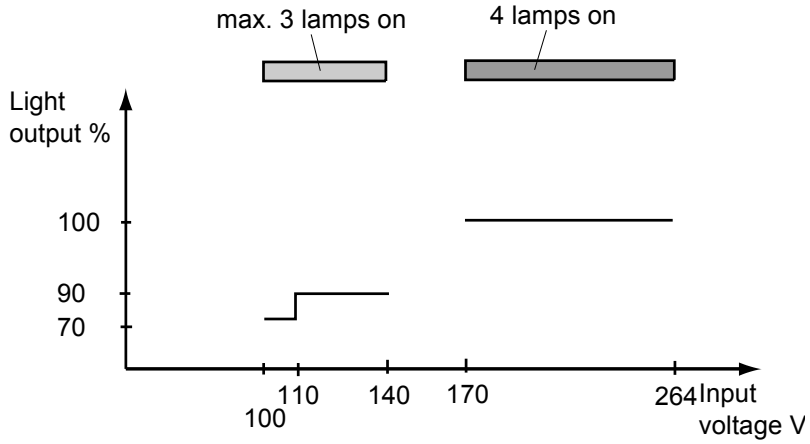


Image 5-3

5.2 Input source connections

General

The input and communication unit is equipped with two input slots, which accept any type of input designed for the CLM projector. The modularity of the input modules makes the CLM projector very flexible regarding input source connectivity. Note that the slot numbering is done from top to bottom. So, the uppermost slot is slot number “1”, the second is slot number “2”. All input modules have two status LED’s. The green LED lights up if the input module is selected as the active input module. The yellow LED lights up if the input module has detected valid input syncs.

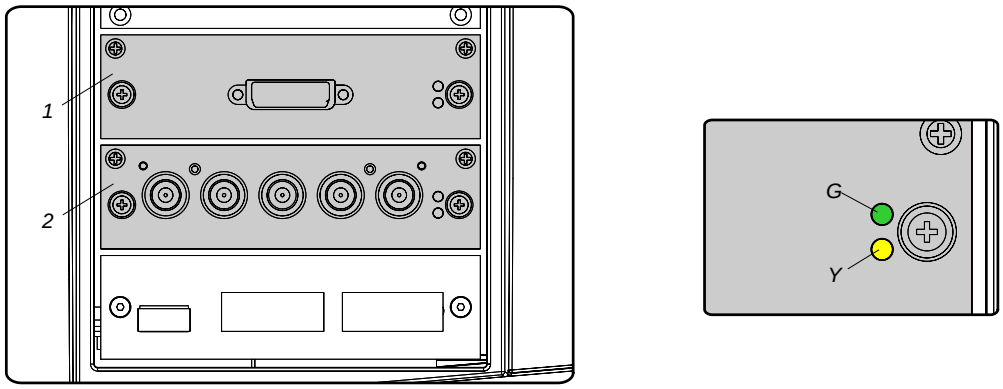


Image 5-4

CAUTION: Always install a cover plate on an unused input slot. This to prevent dust intrusion into the projector.

Available input modules



Image 5-5
5 Cable input (Multi purpose) (**R9854430**).



Image 5-6
HDSDI - SDI input (**R9854450**).



Image 5-7
DVI input (**R9854460**).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



Image 5-8
Cover plate for unused input slot (**R848607**).

The CLM R10+ is standard equipped with one 5 cable input module and one DVI input module.

5.3 Communication connections

Communication interface

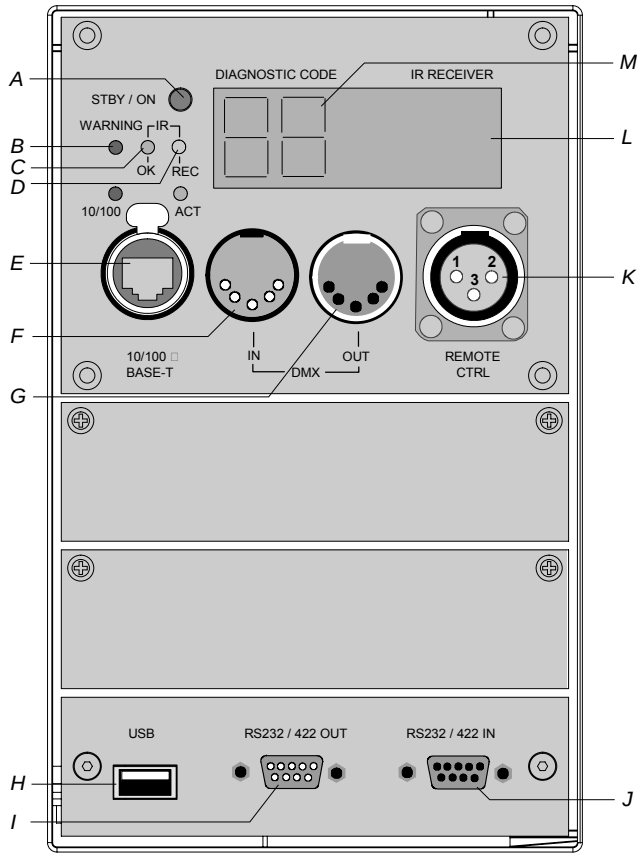


Image 5-9
Communication connections

A Projector status LED
B Warning LED
C IR signal acknowledged LED
D IR signal received LED
E Ethernet port
F DMX in port
G DMX out port
H USB port
I RS232/422 output port

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

J RS232/422 input port
K XLR input port for remote control
L IR receiver
M Two digit 7-segment display for diagnostic code

Projector status

The projector “status” LED (A) lights up green while in operation. The same LED lights up red when the projector is switched to standby.

Besides the projector status LED (A) the communication interface has also a “warning” LED (B) which blinks in case the projector encounters an internal problem concerning fan speed, temperature, supply voltages, ... etc. These type of problems still allows the projector to operate (the show can go on) but an action will be required within a short time period. More information about the involved problem is given on the local LCD display of the projector.

A two character 7-segment display (M) shows, during normal operation, the selected input slot number. If an error has occurred then an error code appears on this two digit display.

IR communication (RC5)

An IR receiver (L) is mounted on the communication interface. Note that there is also an IR receiver mounted at the front and at the back of the projector. When using the remote control unit (wired or wireless), the “IR REC” (D) and the “IR OK” (C) LED’s will light up indicating an IR signal was received and recognized.

Wired remote control

If desired the remote control unit can be wired and plugged in into the male XLR port (K) on the communication interface.

XLR – Remote CTRL in	
Pin	**Description**
1	GND
2	RC5 in
3	XLR present sense

RS232/422 serial communication

The communication interface of the CLM R10+ supports RS232 and RS422 serial communication. You can use the RS232/RS422 input port (J) to connect a local PC to your CLM projector. This way you can configure and control your CLM projector from your local PC.

Do not forget to set the projector’s baud rate to match that of the computer.

The communication interface has also an active RS232/RS422 loop through output port. Whenever the projector has no power, a passive loop through is created from the RS232/RS422 input port to the RS232/RS422 output port. So, the following projector in the daisy chain will still receive his RS232/RS422 commands.

Advantages of using RS232/RS422 serial communication:

- easy adjustment of the projector via PC (or MAC).
- allow storage of multiple projector configurations and set ups.
- wide range of control possibilities.
- address range from 0 to 255.
- sending data to the projector (update).
- copying data from the projector (backup).

RS232/422 input port	
Pin	**Description**
1	DCD : Data Carrier Detect
2	RXD- : Receive Data
3	TXD- : Transmitted Data

RS232/422 output port	
Pin	**Description**
1	— (not connected) —
2	RXD- : Receive Data
3	TXD- : Transmitted Data

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RS232/422 input port	
Pin	**Description**
4	DTR : Data Terminal Ready [RS232] TXD+ : Transmitted Data [RS422]
5	GND : Ground
6	DSR : Data Set Ready [RS232] RXD+ : Received Data [RS422]
7	— (not connected) —
8	CTS : Clear To Send
9	RI : Ring Indicator

RS232/422 output port	
Pin	**Description**
4	DTR : Data Terminal Ready [RS232] TXD+ : Transmitted Data [RS422]
5	GND : Ground
6	DSR : Data Set Ready [RS232] RXD+ : Received Data [RS422]
7	— (not connected) —
8	— (not connected) —
9	— (not connected) —



Image 5-10
A Pin numbering male DB–9 connector.
B Pin numbering female DB-9 connector.

RS232

An Electronic Industries Association (EIA) serial digital interface standard specifying the characteristics of the communication path between two devices using either DB-9 or DB-25 connectors. This standard is used for relatively short-range communications and does not specify balanced control lines. RS-232 is a serial control standard with a set number of conductors, data rate, word length and type of connector to be used. The standard specifies component connection standards with regard to computer interface. It is also called RS-232-C, which is the third version of the RS-232 standard, and is functionally identical to the CCITT V.24 standard. Logical ’0’ is > + 3V, Logical ’1’ is < - 3V. The range between -3V and +3V is the transition zone.

RS422

An EIA serial digital interface standard that specifies the electrical characteristics of balanced (differential) voltage, digital interface circuits. This standard is usable over longer distances than RS-232. This signal governs the asynchronous transmission of computer data at speeds of up to 920,000 bits per second. It is also used as the serial port standard for Macintosh computers. When the difference between the 2 lines is < - 0.2V that equals with a logical ’0’. When the difference is > +0.2V that equals to a logical ’1’..

Ethernet network communication

The CLM projector can be connected to a LAN (local area network) using the Ethernet port (E) on the communication interface. Once connected to the LAN, users are capable of accessing the projector from any location, inside or outside (if allowed) their company network using the CLM control software: Projector Toolset. This toolset locates the projector on the network in case there is a DHCP server or the user can insert the correct IP-address of the projector to access the projector. Once accessed, it is possible to check and manipulate all the projector settings. Remote diagnostics, control and monitoring of the projector can then become a daily and very simple operation. The network connectivity permits to detect potential errors and consequently improve the time to servicing.

Both Ethernet port (E) is equipped with a yellow and green a LED. The yellow LED lights up in case the port is connected with a 100Mbit network. The green LED blinks in case there is network activity.

The connector used for the Ethernet ports (E) are of rugged Neutrik EtherCon RJ45 type, which is compatible with standard RJ45 cable connector. Straight (most common) as well as cross linked network cables can be used.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

10/100 Base-T — RJ45 port	
Pin	**Description**
1	TXD+
2	TXD-
3	RXD+
4	—
5	—
6	RXD-
7	—
8	—

USB port

The communication interface is equipped with a master USB port, type “A” connector (H). This USB port will simplify the service procedures for software updates or for taking backup files from the projector without network connection. An USB-stick is plugged into the USB port and files can be transferred from or to the projector using the local or remote control unit. Note that the USB-stick has to be Linux FAT16 compatible.

DMX interface

The communication interface of the CLM R10+ supports DMX.

DMX is used as communication bus between different devices in the light technic. Each device has an input and an output, so that the bus can be looped between the different devices. According the standard a five wire cable with XLR connector is used but mostly 3-wire cables are used.

You can use the DMX input port (G) to connect a DMX device to the CLM projector. This way you can control the CLM projector from that DMX device. The DMX output port (G) can be connected with the next device in the loop.

Pin	Description
1	Earth
2	Cold
3	Hot
4	Return - (or not used)
5	Return + (or not used)

DMX

Digital multiplexing. Standard for controlling light devices, smoke machines, etc. .

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6. GETTING STARTED

About this chapter

This chapter describes the functions on the remote control and local keypad and gives an overview how to start up the projector. It gives also a brief overview of the direct adjustment possible with these controls.

Overview

- RCU & Local keypad
- Terminology overview
- Operating the projector
- Using the RCU
- Quick setup adjustments
- Use of the AUTO button
- Projector Address
- Source selection
- Controlling the Projector

6.1 RCU & Local keypad

How controlling the projector ?

The projector can be controlled by the local keypad or by the remote control unit.

Location of the local keypad ?

The local keypad is located on the input side of the projector.

Remote control functions.

This remote control includes a battery powered infrared (IR) transmitter that allows the user to control the projector remotely. This remote control is used for source selection, control, adaptation and set up.

Other functions of the remote control are :

- switching between stand by and operational mode.
- switching to "pause" (blanked picture, full power for immediate restarting)
- direct access to all connected sources.

6.2 Terminology overview

Overview

The following table gives an overview of the different functionality of the keys.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

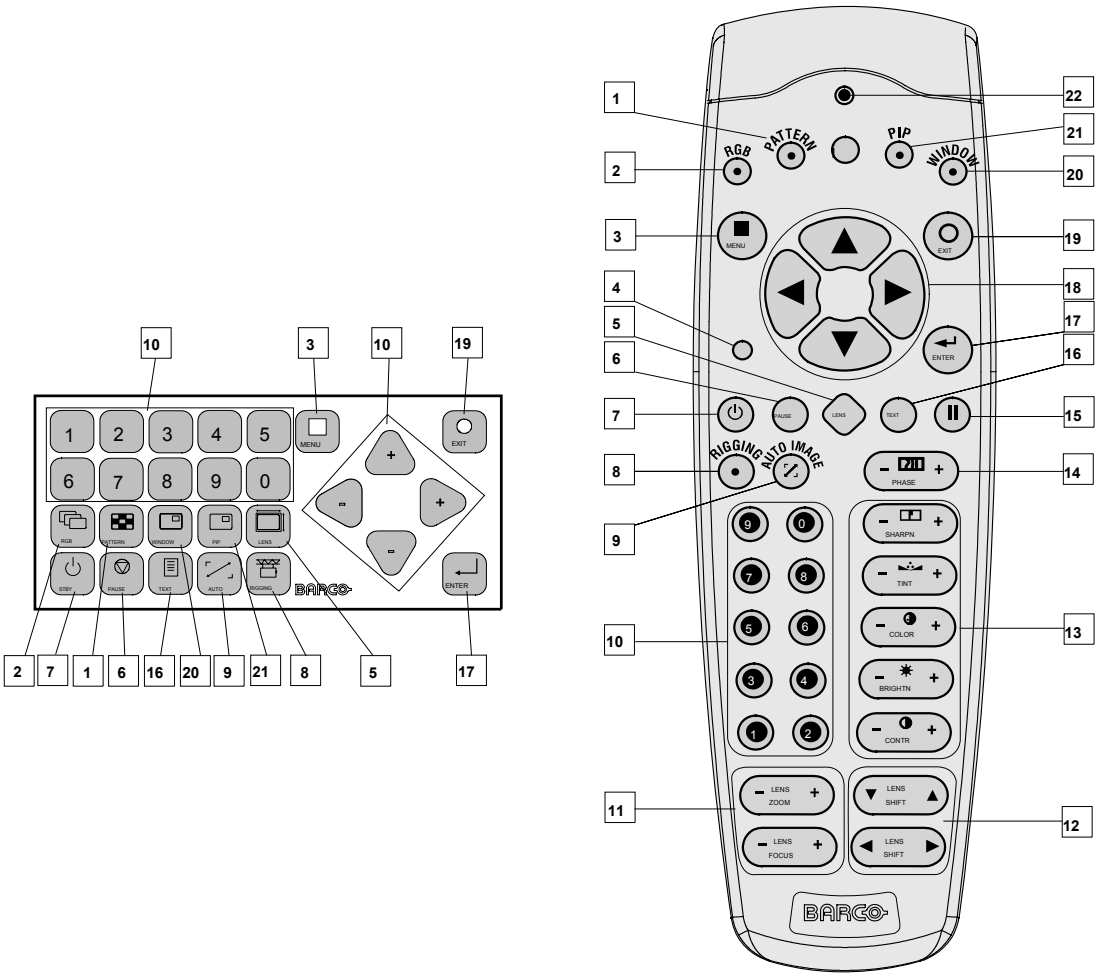


Image 6-1
Local keypad & remote control

Ind.	Key name	Description
1	Pattern key	Direct access key to the internal pattern selection menu.
2	RGB	Toggle key to enable and disable colors in the adjustment mode. Toggle between red, green, blue and full RGB.
3	MENU	Access key to the menu structure and key to quickly quit the adjustment menus.
4	Address key	(recessed key), to enter the address of the projector (between 0 and 9) in the remote control. Press the recessed address key with a pencil, followed by pressing one digit button between 0 and 9.
5	LENS	Direct access key to the lens adjustment menus. Toggling this key will change the projected pattern.
6	PAUSE	To stop projection for a short time, press 'PAUSE'. The image disappears but full power is retained for immediate restarting. Shutter is closed.
7	STBY	Standby function switch off the lamp and lamp electronics. The lamp cooling fans remain active for about 5 minutes. The speed of the other fans is reduced.
8	Rigging	Key not used
9	Auto	User programmable key to get different functions from auto image, auto contrast/brightness to auto align. This key can open an Auto image menu so that the user has access to these different functions.
10	Digit buttons	Direct input selection or numeric entries
11	Lens zoom/focus	Zoom and focus controls of the lens

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Ind.	Key name	Description
12	Lens shift	Shift control of the lens, to shift the lens up/down or left/right
13	Picture controls	Use these buttons to obtain the desired picture level.
14	PHASE	Used to remove the horizontal instability of the image (usually for RGB source). It adjusts the phase of the pixel sampling clock relative to the incoming signal.
15	FREEZ	To freeze the actual projected image.
16	TEXT	Toggle key to activate or deactivate on screen text boxes while adjusting a setting. When adjusting one of the image controls, e.g.during a meeting, the normally displayed bar scale can be deactivated by pressing 'TEXT' key first. To re-display the bar scale on the screen, press 'TEXT' key again. When TEXT is 'off', no adjustment menu's will be displayed on the screen when entering the adjustment mode. All menus and adjustments remain active on the local LCD panel.
17	ENTER	Key to confirm an adjustment or selection in the adjustment mode.
18	Cursor keys	To make menu selections when in the adjustment mode
19	EXIT	Key to go one menu stage higher than the actual position when in the adjustment mode.
20	WINDOW	Selection of the active window, also in PIP mode.
21	PIP	Direct access key for picture in picture selection.
22	RC Operating indication	Lights up when a button on the remote control is pressed. (This is a visual indicator to check the operation of the remote control)

Table 6-1

6.3 Operating the projector

Overview

- Switching on
- Errors, warnings and messages during start up
- Switching to standby
- Switching off

6.3.1 Switching on

How to switch on.

1. Press the power switch to switch on the projector.

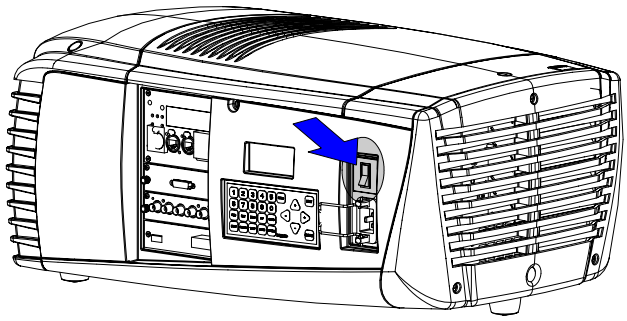


Image 6-2
Power switch

- When '0' is visible, the projector is switched off.
- When '1' is visible, the projector is switched on.

The projector starts up in standby. The menus are accessible via the local LCD panel.

To display an image, the standby key must be pressed once.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Starting image projection via the standby key.

1. Press **Stand by** key once on the local keypad or on the remote control.

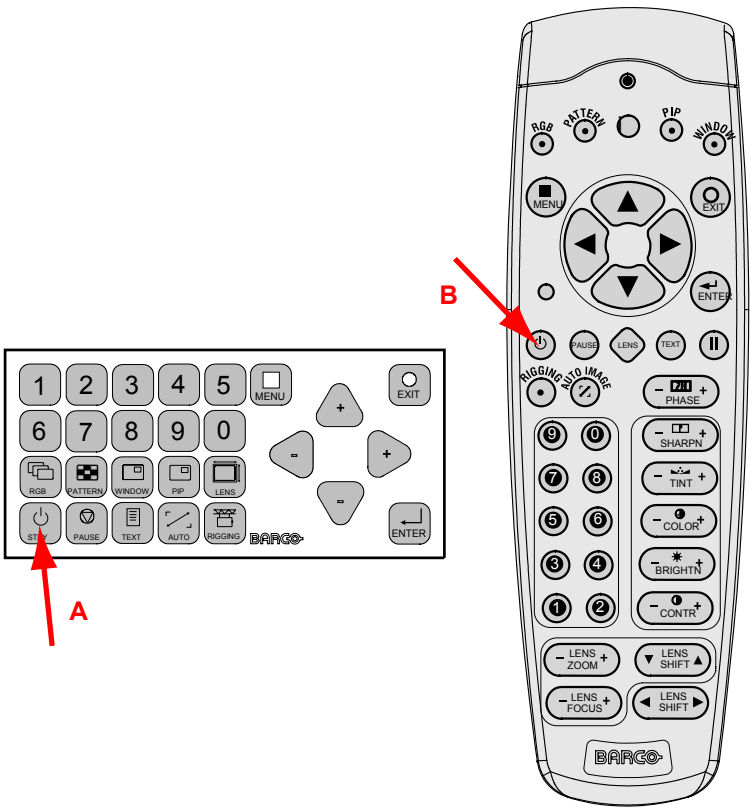


Image 6-3
Stand by indication

A Stand by indication on local keypad
B Stand by indication on remote control

The projector status LED lights up.

The projector starts up on the last saved source.

Some lamp and runtime warnings can be displayed when an image is displayed after a start up.

6.3.2 Errors, warnings and messages during start up

Temperature error DMD

When the temperature of the DMD is too low or too high, the projector produces an error message.

When the DMD temperature is too low:

- Lower than 0°C, warning is displayed on the LCD panel and yellow warning LED is on. Both remains until the temperature is above 10°C.
- Between 0°C and 10°C, projector starts up normally with a warning on the LCD panel and the yellow warning LED lights up, but only for 10 minutes. When the temperature is then not above 10°C the projector goes in standby.

When the DMD temperature is too high:

- When temperature is between 60°C and 65°C, the lamp mode will be reduced from 4 lamps to 2 lamps or 1 lamp.
- When temperature is higher than 65°C, the projector switches to standby.

For a list of possible error codes, see "Error codes", page 175.

6.3.3 Switching to standby

How to switch to standby?

1. Press **Standby** to switch the projector to standby.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Switching to Standby. When the projector is running and you want to go to standby, press the standby key for 2 seconds. Do not press any longer on the standby key otherwise the projector will restart.

All custom settings are written to the internal backup device. A message 'Save data ...' indicates this process. Never switch off the projector while this message is displayed.

6.3.4 Switching off

How to switch off the projector?

1. Press first **Standby**.
2. Let cool down the projector until the fans decrease, at least 5 min.
3. Switch off the projector with the power switch.

CAUTION: Never switch off the projector while the message 'Save data ... ' is displayed !

6.4 Using the RCU

Pointing to the reflective screen

1. Point the front of the RCU to the reflective screen surface.

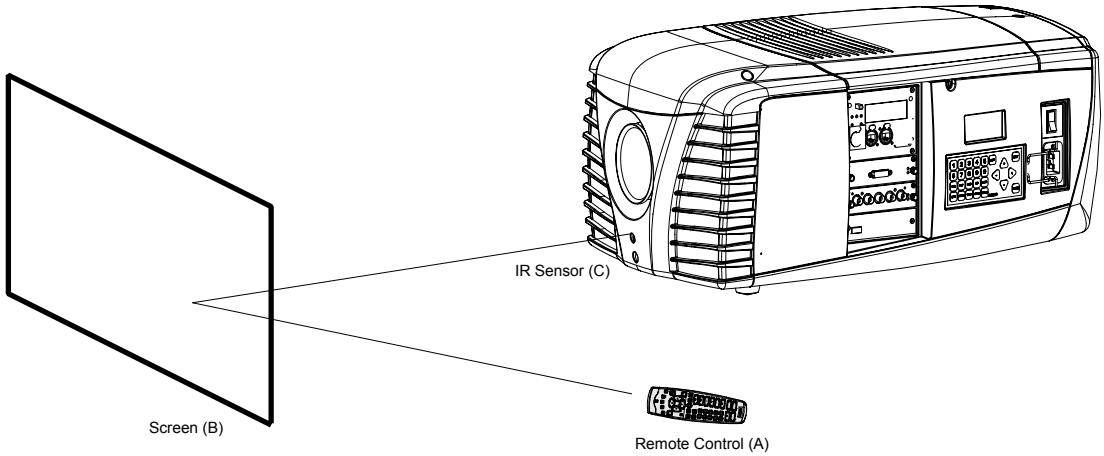


Image 6-4
IR control via the reflective screen

Hardwired to the XLR input

1. Plug one end of the remote cable in the connector on the bottom of the RCU
2. Plug the other end in the big connector in the input panel of the projector labelled ***Remote CTRL in***.

Directly to one of the IR sensors

When using the wireless remote control, make sure you are within the effective operating distance (30m, 100ft in a straight line). The remote control unit will not function properly if strong light strikes the sensor window or if there are obstacles between the remote control unit and the projector IR sensor.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

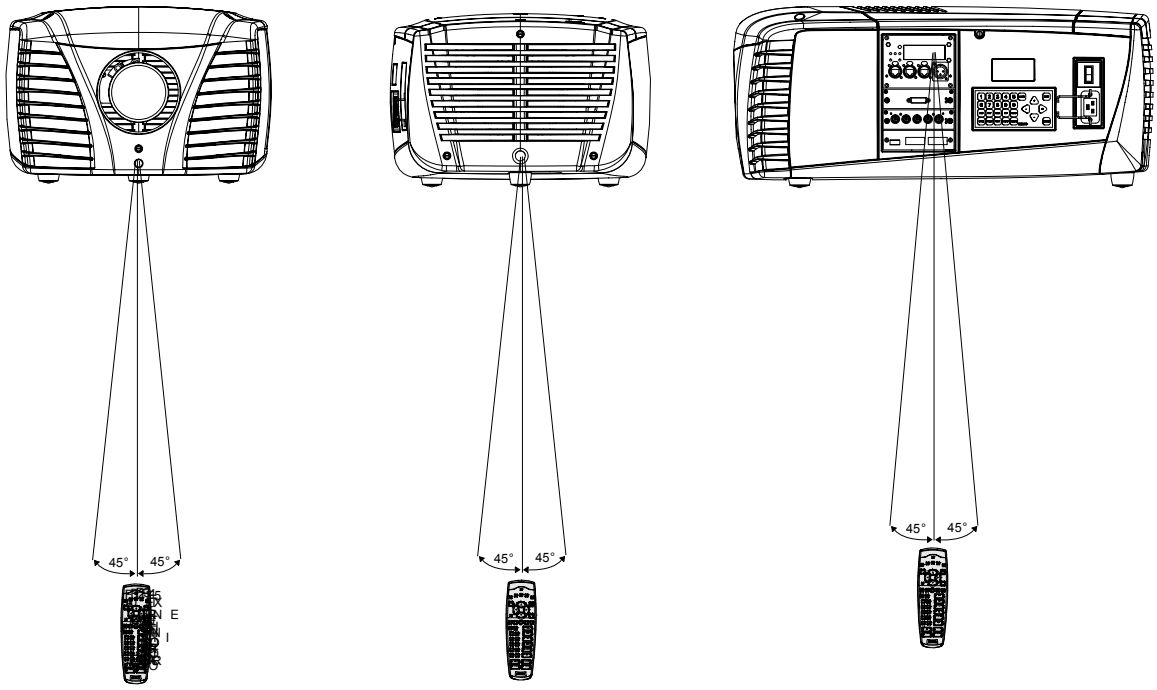


Image 6-5
RCU to one of the IR sensors

6.5 Quick setup adjustments

Overview

- Text boxes ON or OFF
- Quick Lens Adjustment
- Quick picture in picture

6.5.1 Text boxes ON or OFF

Text toggle function

The on-screen text boxes can be switched OFF so that an adjustment during the operation of the projector are not visible on the screen. The adjustment indication remains visible on the local LCD screen.

To toggle Text ON or OFF, press the **TEXT** key on the remote control or local keypad.

6.5.2 Quick Lens Adjustment

6.5.2.1 Quick Lens Adjustment via LENS key

Quick zoom/focus adjustment

1. Press the **LENS** key on the remote control or local keypad.

   The zoom/focus menu will be displayed.

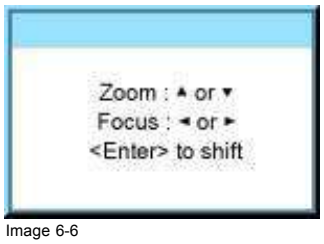


Image 6-6

2. Push the cursor key ▲ or ▼ to zoom and ◄ or ► to focus the image.
3. When finished, press **EXIT** key to return or **ENTER** to continue to the shift adjustment.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Press the LENS key to switch to another pattern. Different patterns are available.

Quick shift adjustment

1. Press the **LENS** key on the remote control or local keypad.

   The zoom/focus menu will be displayed.

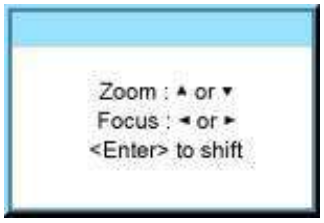


Image 6-7

2. Press **ENTER**.

   The shift menu will be displayed.

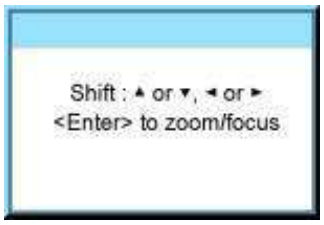


Image 6-8

3. Push the cursor key ▲ or ▼ to shift the image up or down and ◄ or ► to shift the image left or right.
4. When finished, press **EXIT** key to return or **ENTER** to continue to zoom/focus.

Press the LENS key to switch to another pattern. Different patterns are available.

6.5.2.2 Direct Lens Adjustment (RCU)

Lens adjustment buttons on the Remote Control

On the Remote Control four buttons with double action are provided, allowing direct alignment for lens ZOOM, FOCUS, HORIZONTAL SHIFT and VERTICAL SHIFT.

1. Press **LENS ZOOM** button [-] or [+] (A) for correct image size on the screen.

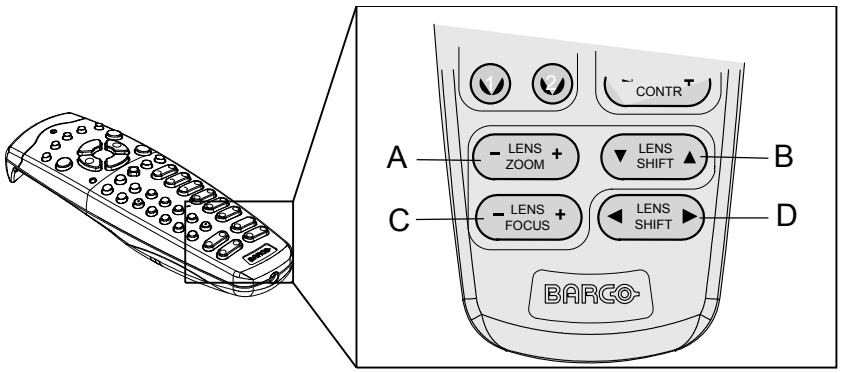


Image 6-9
Direct lens adjustment keys

A Zoom
B Vertical shift
C Focus
D Horizontal shift

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2. Press **LENS FOCUS** button [-] or [+] (C) for an overall focus of the image.
3. Press ▲ **LENS SHIFT** ▼ button for correct vertical position of the image on the screen.
4. Press ◄ **LENS SHIFT** ► button for correct horizontal position of the image on the screen.

6.5.3 Quick picture in picture

Quick On - Off

Press on the **PIP** key on the remote control or the local keypad to activate the Load layout window.

Use the ▲ ▼ key to scroll to the desired layout and press **ENTER** to activate.

Select *Main full screen* to switch off PIP.



Image 6-10

6.6 Use of the AUTO button

What is possible?

The AUTO button can be configured as an auto align of the projected source or as an auto image button which calls a choice menu. Within this choice menu, the user can execute an auto align of the image, an auto contrast/brightness and an auto phase.

To use this button, just press Auto on the remote control or the local key path.

When the button is configured as align only, the projected image will be aligned.

When the button is configured as auto image, the auto image menu will be displayed.



Image 6-11

Use the ▲ or ▼ key to select the desired function and press **ENTER** to activate.

6.7 Projector Address

6.7.1 Displaying and Programming addresses

Displaying the Projector Address on the Screen.

1. Press **Address** key (recessed key on the RCU) with a pencil.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The projector's address is displayed as first item in the Identification screen.



Image 6-12

To continue using the RCU with that specific address, it is necessary to enter the same address with the digit buttons (address between 0 and 9) within 5 seconds after pushing the address key. For example : if the Address key displays projector address 003, then press "3" digit button on the RCU to set the RCU's address to match the projector's address. Do not press 003 digits. This will address the remote control to '0' and control all projectors in the room. If the address is not entered within 5 seconds, the RCU returns to its default address (zero address) and control all projectors in the room.

How to Program an Address into the RCU?

1. Press the **Address** key (recessed key on the RCU) with a pencil.
2. Enter the address with the digit buttons within 5 seconds after pushing the address key.
   Note: *That address can be any digit between 0 and 9.*

The LED on the remote control must lit up while pressing a digit key. Otherwise the address is not entered in the remote control.

6.7.2 Controlling the projector

Projector address

Address installed in the projector to be individually controlled.

Common address

Projector will always execute the command coming from a RCU programmed with that common address.

Why a projector address ?

As more than one projector can be installed in a room, each projector should be separately addressable with an RCU or computer. Therefore each projector has its own address.

Set up an individual Projector Address.

The set up of a projector address can be done via the software. See chapter 'Projector Control', 'Projector address'.

Projector controlling.

Every projector requires an individual address between 0 and 255 which can be set in the Service mode.

When the address is set, the projector can be controlled now:

- RCU for addresses between 0 and 9.
- computer, e.g. IBM PC (or compatible), Apple MAC, etc. for addresses between 0 and 255.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Common Address

Every projector has a common address ’0’ or ’1’. The choice between ’0’ and ’1’ can be selected in *Projector Control → Projector address → Common address*.

6.8 Source selection

Source selection when no picture in picture is active

Use the digit keys on the remote control or local keypad to active the desired source.

Source selection when picture in picture is active

Use the **Window** button on the remote control or the local keypad to select the main window or the picture in picture (PiP) window.

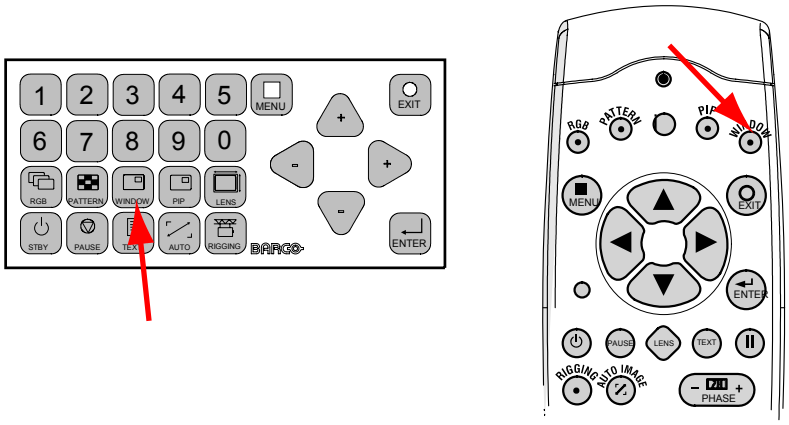


Image 6-13
Window selection button

The outline of the selected window gets a colored rectangle to indicate the selection. For the main window, the color is blue. For the picture in picture window, the color is orange.

Once the desired window is activated (main window or picture in picture window) all keys on the remote control or local keypad can now control that selected window.

To select the source for the picture in picture window, press Window button until PiP window is activated and then select the desired source with the digit keys.

To select the source for the main window, press Window button until the main window is activated and then select the desired source with the digit keys.

6.9 Controlling the Projector

Picture Controls

When an image control is pressed, a text box with a bar scale, icon and function name of the control, e.g. ’brightness...’ appears on the screen (only if text is ON). See example screen. The length of the bar scale and the value of the numeric indication indicate the current memorized setting for this source. The bar scale changes as the control buttons on the RCU are pressed.

Brightness	A correct ’brightness’ setting is important for good image reproduction. Use the + button for a higher brightness. Use the - button for a lower brightness.
Contrast	A correct ’contrast’ setting is important for good image reproduction. Adjust the contrast to the level you prefer, according to room lighting conditions. Use the + button for a higher contrast. Use the - button for lower contrast.
Color	Color saturation is only active for all type of video sources, such as Video, S-Video, SDI, HDSDI. Adjust the color intensity of the picture. Use the + button for richer colors. Use the - button for lighter colors.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Tint	Tint is only active for Video and S-Video when using the NTSC 4.43 or NTSC 3.58 system. Use the + button for more tint Use the - button for less tint.
Sharpness	The sharpness function is used to adjust the image sharpness of video signals. Use the + button for more sharpness Use the - button for less sharpness
Phase	Use the + or - side of the phase control button to adjust the phase.

The Pause Key

When the Pause key is pressed, the image projection is stopped, a black screen will be displayed and the projector remains with full power for immediate restart. The 7-segment display on the projector will show a "P". The shutter is closed.

To restart the image, press one of the following keys:

- Press **Pause** key.
- Select a source number.

The Stand-by Key

When the Stand-by key is pressed, the image projection is stopped and the projector goes to stand-by. This situation is used when a projection stop is planned for a longer period. All custom settings are saved to an internal backup device. A message 'Save data ...' is displayed during this backup operation.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

7. START UP OF THE ADJUSTMENT MODE

Overview

- About the adjustment mode
- About the use of the remote control and the local keypad
- Start up the adjustment mode
- Navigation and adjustments
- On screen menus versus LCD display menus

7.1 About the adjustment mode

Overview

As the adjustment mode is the central place to control and align the projector, the following functions can be done:

- Input setup: the different inputs can be configured for a specific format or input source.
- Image adjustment: these adjustments are organized per image source and contain the aspect ratio, timings and image settings.
- Layout adjustment: set up of the main window and the picture in picture window.
- Lamp: manage the lamp mode, the lamp use, lamp type and history
- Alignment: groups all controls necessary during the setup of the projector onto a screen.
- Projector control: contains the accessibility settings of the projector, such as address and communication setup.
- Service: contains information about how the projector is performing. This information will be useful when calling for a service intervention.

7.2 About the use of the remote control and the local keypad

Overview

All navigations and adjustments can be done either with the remote control or with the local keypad.

Almost all the keys on the remote control have an equivalent on the local keypad.

Exceptions:

- ▲ on the remote control corresponds with the up + key on the local keypad.
- ▼ on the remote control corresponds with the down - key on the local keypad.
- ◄ on the remote control corresponds with the left - key on the local keypad
- ► on the remote control corresponds with the right + key on the local keypad

7.3 Start up the adjustment mode

Start up tools

To start up the adjustment mode, use the remote control or the local keypad.

How to start up?

1. Press **Menu** on the remote control (RCU) or on the local keypad to start up the *Adjustment* mode.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The main menu of the adjustment mode opens.



Image 7-1

7.4 Navigation and adjustments

How to navigate in the menu structure?

Once in the menu structure, use the ▲ or ▼ keys on the remote control (or the ▲ or ▼ (+ or -) key on the local keypad) to scroll through the items in the displayed menu. The selected item will get a background color. To activate a selected submenu or function, press **ENTER**.

When on a submenu, to return one step to the parent menu, press **EXIT**.

To escape the menu structure when on a menu, press **MENU**.

How to make an adjustment?

With the remote control, press the ▲ or ▼ keys until the desired value (setup) is reached. Press **ENTER** to finalize the adjustment.

With the local keypad, press the ▲ or ▼ (+ or -) keys until the desired value (setup) is reached. Press **ENTER** to finalize the adjustment.

All adjustments will be indicated with an on-screen box with the name of the adjustment in the title bar, the length of the progress bar indicates the actual value. The value at the start and at the end of the progress bar indicates the adjustment ranges.



Image 7-2

7.5 On screen menus versus LCD display menus

Overview

As the projector is equipped with an 8 lines LCD panel, the on-screen menus are also displayed on that LCD panel in the same structure as the on screen menus. These menus can be used in the same way as the on-screen menus.

The menus on the LCD panel are still reachable even when the projector lamp is not activated and when Text is in the off mode.

When quitting the menu structure, the backlighting of the LCD panel is switched off after a few seconds.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

8. INPUT MENU

Overview

- Overview flow
- Slot module type
- Input locking
- Minimum delay
- Native resolution
- Source switching
- No signal

8.1 Overview flow

Overview

Level 1	Level 2	Level 3
Input		
	Slot module type	5-cable
		HD-SDI - SDI
		DVI
	Input locking	None
		Automatic
		Input 1 to 2
	Minimum delay [On/Off]	
	Native resolution [On/Off]	
	Source switching	Effect
		Transition time
	No signal	Color [black/blue]
		Shutdown [Off/On]
		Shutdown time

8.2 Slot module type

Overview

- About Input Setup
- Input configuration

8.2.1 About Input Setup

Overview

Each input module must be configured before these module can be used. This configuration is necessary so that the projector knows which type of signal is connected to its input.

The projector has 2 input slots and these slots can be filled up in a random order with the available modules. Identical modules are allowed.

For more information about the available input modules and how to install, see "Input source connections", page 37.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

CAUTION: Always install a cover plate on an unused input slot. This to prevent dust intrusion into the projector.

8.2.2 Input configuration

How to change?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Input* and press **ENTER**.

   The Input menu is displayed.
3. Use the ▲ or ▼ key to select *Slot module type* and press **ENTER**.

   The slot overview window is displayed with the actual situation filled out.
4. Use the ▲ or ▼ key to select a slot.
   Press **ENTER** to open the Slot module type configuration window. This window is different for each module type.
5. Use the ▲ or ▼ key to select desired mode for the selected slot.

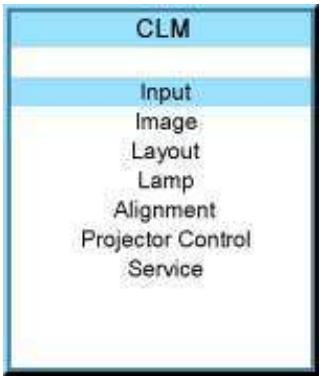


Image 8-1

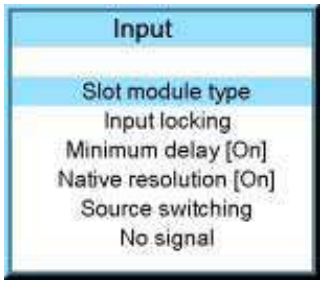


Image 8-2

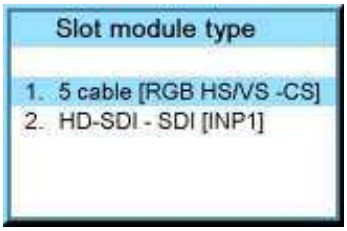


Image 8-3

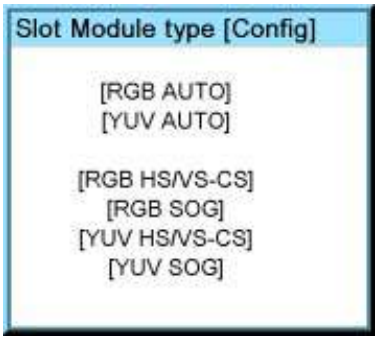


Image 8-4

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Possible results.

Input module	Indication	Description
5 cable	RGB AUTO	RGB input. Projector searches for the sync signal and projects the correct image.
	YUV AUTO	YUV input. Projector searches for the sync signal and projects the correct image.
	CVS/S-VIDEO AUTO	Video or S-Video input. Projector detects automatically which type of video is connected to the inputs.
	RGB HS/VS - CS	RGB input with separate horizontal and vertical sync or separate composite sync.
	RGB CV	RGB input with composite video as sync signal
	RGB SOG	RGB input with sync on green
	YUV HS/VS - CS	Component video with separate horizontal and vertical sync or separate composite sync.
	YUV SOY	Component video with sync on Y
	CVBS	Composite video
	S-Video	Super video
HD-SDI - SDI	INP 1 PRIORITY	When signal on both inputs, input 1 has the priority.
	INP 2 PRIORITY	When signal on both inputs, input 2 has the priority.
	INP1	Input 1 selected
	INP2	Input 2 selected

DVI equalization

When a DVI module is selected, press **ENTER** to go in edit mode. Use ◄ or ► to key to change the equalization value.

Default value = 13.

For non DVI-compliant transmitter, stronger equalization may be necessary even for shorter cables.

For longer cables adjust between 0 and 13 (more equalization).

For shorter cables adjust between 13 and 15 (least equalization).

8.3 Input locking

What is possible?

The output signal can be locked on an internal sync signal or on the sync signal of one of the input sources. Input locking can avoid that some windows in the output signal are slowly moving or trembling.

When automatic is selected, the lock will be set on the input signal of the main window.

How to set up?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Input* and press **ENTER**.

   The Input menu is displayed.
3. Use the ▲ or ▼ key to select *Input locking* and press **ENTER**.

   The input locking window is displayed. The actual selected locking method is indicated by an arrow.
4. Use the ▲ or ▼ key to select the desired locking and press **ENTER**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



Image 8-5

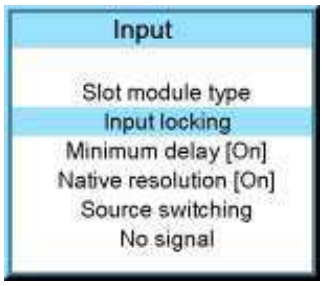


Image 8-6

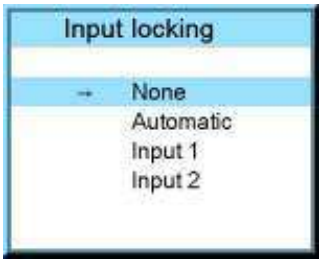


Image 8-7

When:

None	Output is locked on an internal sync (60 Hz)
Automatic	Output is locked on the selected input for the main window
Input 1	Output is locked on source 1
Input 2	Output is locked on source 2

8.4 Minimum delay

Purpose

In normal mode, the processing (scaling and de-interlacing) in DLP projectors introduces a few frames delay (from input to screen). Setting the option *Minimum Delay* to "ON" disables all scaling and de-interlacing in the processing and reduces frame delay of the projector (from input to screen) to ONE frame, caused by the formatter board (DLP technology restriction). The intended use of this option is to apply native and progressive data to the projector and displaying it with minimum delay, using the full resolution of the projector. Other formats will be displayed either unscaled and/or interlaced.

This feature can be used if additional delay in the projector is not acceptable. For instance if a projector is showing the DVI loop out of another DLP or if an external scaler/de-interlacer does the processing.

How to toggle the delay?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Input* and press **ENTER**.

   The Input menu is displayed.
3. Use the ▲ or ▼ key to select *Minimum delay* and press **ENTER** to toggle between [On] and [Off].

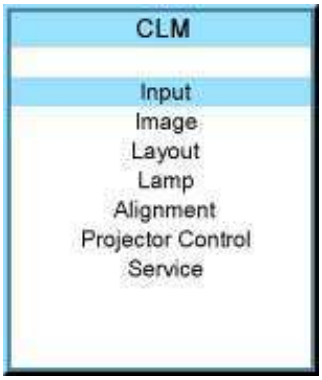


Image 8-8

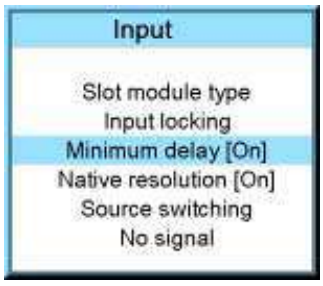


Image 8-9

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

8.5 Native resolution

What can be done

The aim here is to always show the resolution of the source independently of the resolution of the DMD panels.

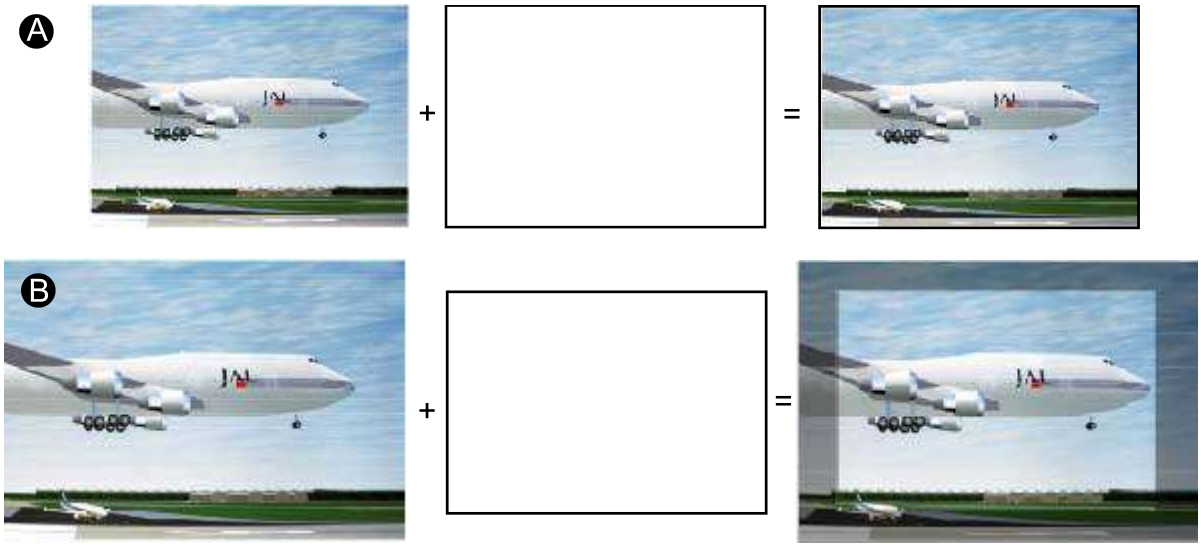


Image 8-10

When the *show native resolution* function is in the ON position, the projector handles the source as follows:

Source			**Projected image**		
Name	Ratio	Resolution	Ratio	Resolution	
XGA	4:3	1024x768	4:3	1024x768	image projected with black borders
SXGA	5:4	1280x1024	5:4	1280x1024	image projected with black borders
SXGA+	4:3	1400x1050	4:3	1400x1050	normal image projected
UXGA	4:3	1600x1200	4:3	1600x1200	part of the image displayed, image scroll possible

How to toggle to native resolution?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Input* and press **ENTER**.

   The Input menu is displayed.
3. Use the ▲ or ▼ key to select *Native resolution* and press **ENTER** to toggle between [On] and [Off].

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

[On] : images displayed in native resolution

[Off] : images scaled to fill the complete screen

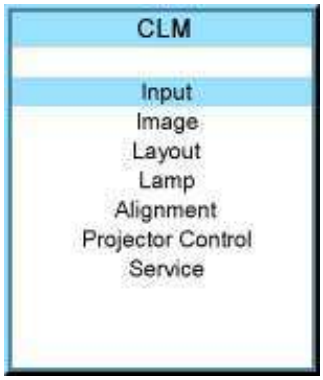


Image 8-11

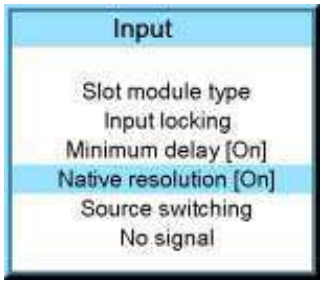


Image 8-12

When native resolution is on, some other menus such as *Aspect ratio*, *timings* are greyed out.

8.6 Source switching

Switching from one source to another

To minimize undesired effects when switching from one source to another one can use the seamless switching mode, using the fade effect.



Image 8-13
Example of fade effect

Switching mode set up

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Input* and press **ENTER**.

   The Input menu is displayed.
3. Use the ▲ or ▼ key to select *Source switching* and press **ENTER**.

   The Source switching menu is displayed.
4. Use the ▲ or ▼ key to select *Effect* and press **ENTER** to toggle between *No transition* and *Fade*.

No transition	No source switching effect is activated.
Fade	Fade in, fade out effect is activated. Transition time can be set up.

5. Use the ▲ or ▼ key to select *Transition time* and press **ENTER**.
6. Enter the desired time with the digit keys

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Or,
use the ▲ or ▼ key to scroll until the desired time is reached. Press **ENTER** to activate.

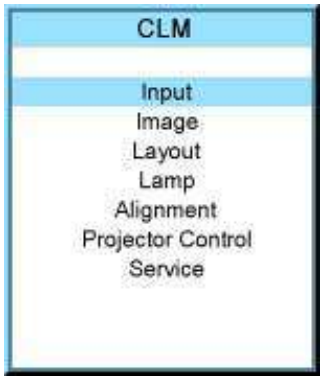


Image 8-14

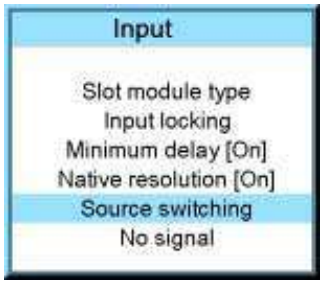


Image 8-15

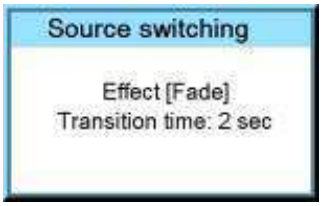


Image 8-16

8.7 No signal

Overview

- Background color
- Shutdown setting
- Shutdown retarding time

What can happen when no signal

When no signal available, a blue or black background color can be displayed or the projector can be shutdown with a certain retarding time.

8.7.1 Background color

How to change the color

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Input* and press **ENTER**.

   The Input menu is displayed.
3. Use the ▲ or ▼ key to select *No signal* and press **ENTER** to toggle between [Black] and [Blue].



Image 8-17

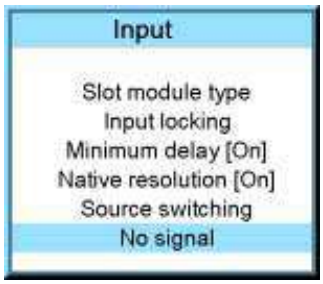


Image 8-18

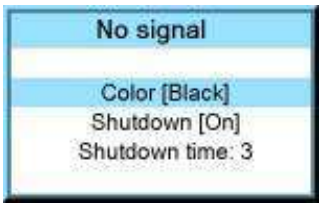


Image 8-19

8.7.2 Shutdown setting

How to change the shutdown setting

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Input* and press **ENTER**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The Input menu is displayed.

3. Use the ▲ or ▼ key to select *Shutdown* and press **ENTER** to toggle between [On] and [Off].



Image 8-20

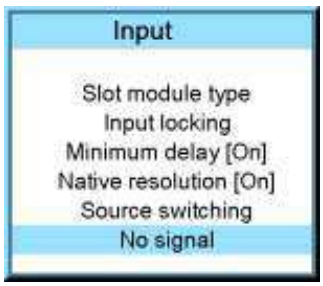


Image 8-21



Image 8-22

8.7.3 Shutdown retarding time

Only accessible when *Shutdown* is set to [On].

How to set the retarding time?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Input* and press **ENTER**.

   The Input menu is displayed.
3. Use the ▲ or ▼ key to select *Shutdown time* and press **ENTER**.
4. Use the ▲ or ▼ key to change the value.
   Or,
   enter the desired value with the keyboard.

   When trying to exceed the maximum allowed value, the system will set it back to the maximum value.



Image 8-23

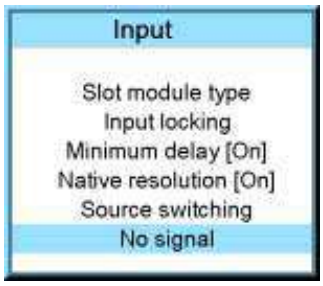


Image 8-24



Image 8-25

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

9. IMAGE MENU

Overview

- Overview flow
- How to select the image adjustments?
- Image Settings
- Aspect ratio
- Timings
- Image files services
- Save custom settings

9.1 Overview flow

Overview

Level 1	Level 2	Level 3	Level 4
Image			
	Image settings		
		Contrast	
		Brightness	
		Saturation	
		Tint	
		Phase	
		Sharpness	
		Noise reduction	
		Color temperature	
			Projector white
			Computer 9300K
			Video 6500K
			Film 5400K
			Broadcast 3200K
			Custom balance
		Input balance	
	Aspect ratio		
		4/3	
		16/9	
		5/4	
		2.35	
		1.88	
		1.78	
		Custom	
	Timings		

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Level 1	Level 2	Level 3	Level 4
		Total pixels	
		Active pixels	
		Horizontal start	
		Period	
		Total lines	
		Active lines	
		Vertical start	
		Advanced settings	Clamp delay
			Clamp width
			Field polarity
	Image file services		
		Manual load	
		Delete	
		Delete all	
		Rename	
		Options	
			Load file
	Save custom settings		

9.2 How to select the image adjustments?

Start up

1. Use the ▲ or ▼ key to select *Image*.
2. Press **ENTER** to select.

   The *Image* menu opens.



Image 9-1



Image 9-2

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

9.3 Image Settings

Overview

- Contrast
- Brightness
- Saturation
- Tint (hue)
- Phase
- Sharpness
- Noise reduction
- Color temperature
- Input balance

9.3.1 Contrast

About Contrast

The contrast function is used to adjust the contrast between the light and dark areas of the displayed image.

How to change the contrast?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Image settings* and press **ENTER**.
4. Use the ▲ or ▼ key to select *Contrast* and press **ENTER**.

   The Contrast progress bar appears.
5. Use ◄ or ► to change the contrast.

   The higher the value, the higher the contrast.



Image 9-3

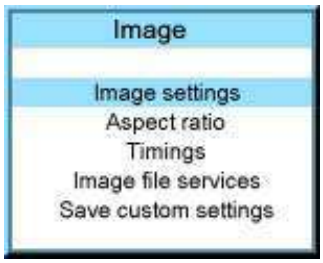


Image 9-4

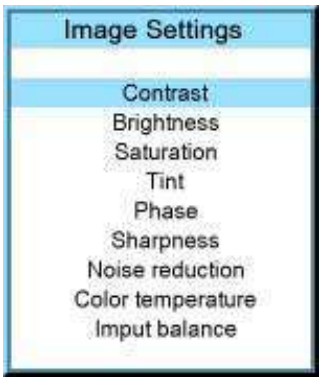


Image 9-5



Image 9-6

9.3.2 Brightness

About Brightness

The Brightness function is used to adjust the overall light output.

How to change the brightness?

1. Press **MENU** to activate the menus.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Image settings* and press **ENTER**.
4. Use the ▲ or ▼ key to select *Brightness* and press **ENTER**.

   The Brightness progress bar appears.
5. Use ◄ or ► to change the brightness.

   The higher the value, the higher the brightness.



Image 9-7

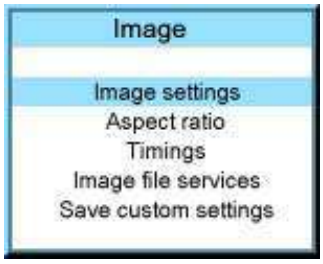


Image 9-8

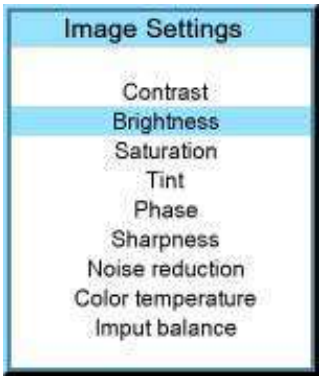


Image 9-9

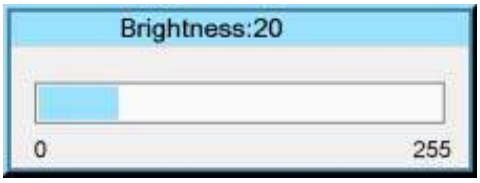


Image 9-10

9.3.3 Saturation

About (color) saturation

The color function is used to adjust the color saturation levels.

How to change the saturation?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Image settings* and press **ENTER**.
4. Use the ▲ or ▼ key to select *Saturation* and press **ENTER**.

   The Saturation progress bar appears.
5. Use ◄ or ► to change the color saturation.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The higher the value, the higher the color saturation.



Image 9-11

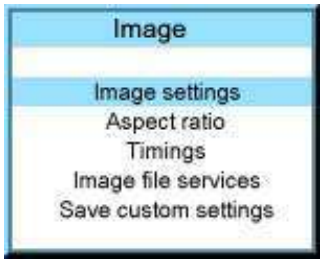


Image 9-12

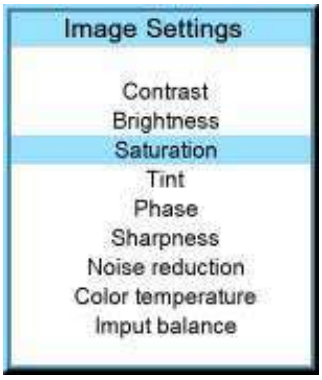


Image 9-13

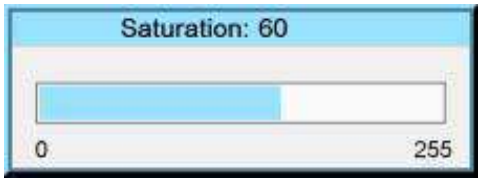


Image 9-14

9.3.4 Tint (hue)

About Tint

The Tint function is used to adjust color hue to obtain true color reproduction and is only active for Video and S-Video when the NTSC color system is used. For PAL and SECAM sources, Tint is not accessible.

How to change the saturation?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Image settings* and press **ENTER**.
4. Use the ▲ or ▼ key to select *Tint* and press **ENTER**.

   The Tint progress bar appears.
5. Use ◄ or ► to change the tint.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The higher the value, the higher the tint.



Image 9-15

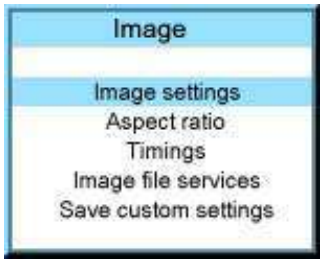


Image 9-16

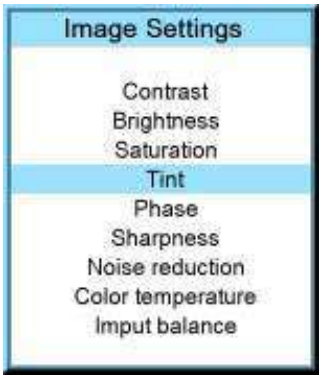


Image 9-17

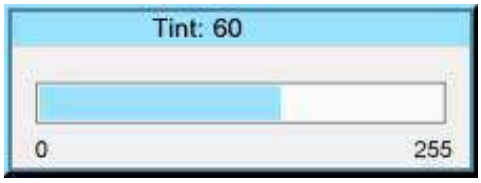
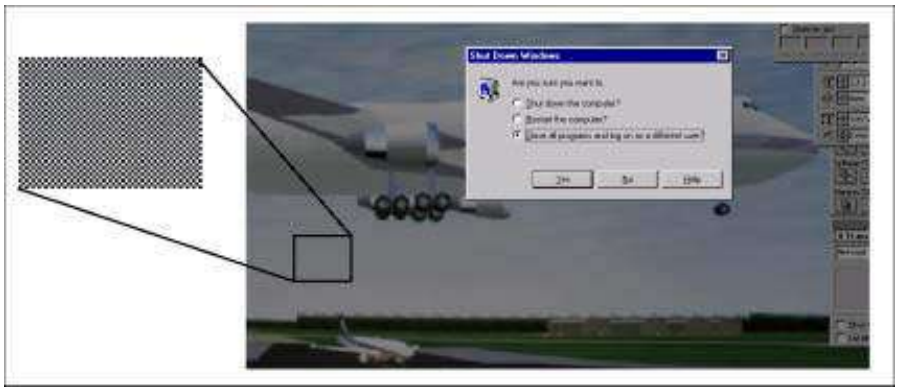


Image 9-18

9.3.5 Phase

About Phase adjustment

When displaying computer patterns or graphics (RGB or YUV signals) which are very detailed (tilting, vertical stripes, etc.), jitter in picture (mis-sampling) may occur, causing horizontal stripes in portions of the screen. When this jitter occurs, adjust 'Phase' for optimum image.


Image 9-19
Jittering on image

How to change the phase?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Image settings* and press **ENTER**.
4. Use the ▲ or ▼ key to select *Phase* and press **ENTER**.

   The Phase progress bar appears.
5. Use ◄ or ► to change the phase and refine the jitter.

   Note: *Don't mix up with wrong number of total pixels. If the jitter doesn't disappear with the phase adjustment, check the total number of pixels. (Best image = pixel on pixel off pattern. For example: shut down screen of a PC)*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



Image 9-20

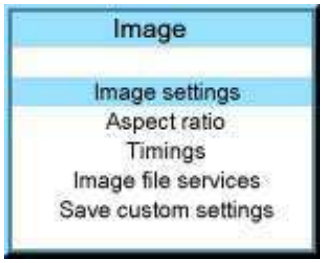


Image 9-21

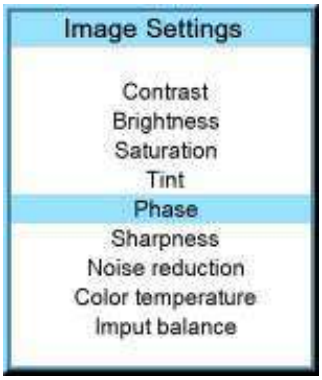


Image 9-22

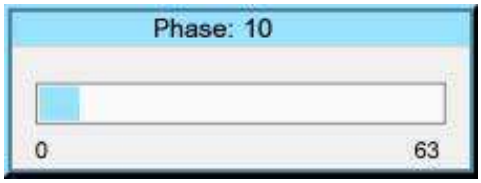


Image 9-23

9.3.6 Sharpness

About Sharpness

The sharpness function is used to adjust the image sharpness of video signals.

How to change the sharpness?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Image settings* and press **ENTER**.
4. Use the ▲ or ▼ key to select *Sharpness* and press **ENTER**.

   The Sharpness progress bar appears.
5. Use ◄ or ► to change the sharpness.

   The higher the value, the higher the sharpness.



Image 9-24



Image 9-25

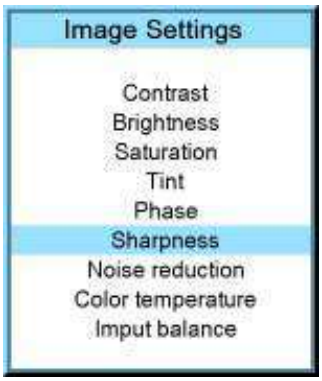


Image 9-26



Image 9-27

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

9.3.7 Noise reduction

About Noise reduction

Reduces noise and pixel jitter in all video sources.

How to change?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Image settings* and press **ENTER**.
4. Use the ▲ or ▼ key to select *Noise reduction* and press **ENTER**.

   The Noise reduction progress bar appears.
5. Use ◄ or ► to change the noise reduction.

   The higher the value, the higher the noise reduction.



Image 9-28



Image 9-29

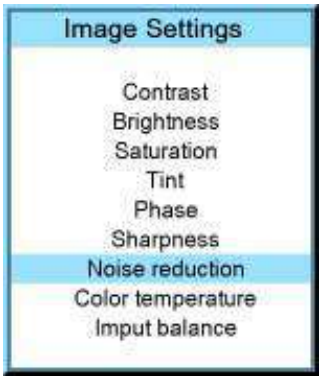


Image 9-30

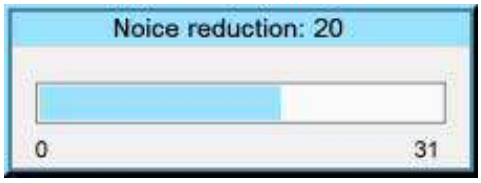


Image 9-31

9.3.8 Color temperature

What can be done ?

The color temperature can be selected according to the type of source:

There are 5 different preset color temperatures:

- Projector white
- computer : 9300 K
- Video : 6500 K
- Film : 5400 K
- Broadcast : 3200 K

These calibrated presets can be selected and will provide optimum color tracking, the projector allows however the setting of a personal color temperature, this is done in *custom balance*

9.3.8.1 Predefined color temperature

Projector white will provide maximum projector light output. The calibrated 'Broadcast', 'Film', 'Video' and 'Computer' presets will provide optimum color tracking.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

How to select?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Image settings* and press **ENTER**.
4. Use the ▲ or ▼ key to select *Color temperature* and press **ENTER**.
5. Use the ▲ or ▼ key to select a predefined color temperature value, e.g. Video, and press **ENTER**.

   The colors of the image is switched to the selected value.



Image 9-32

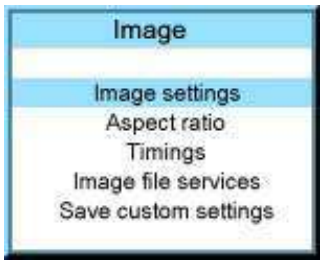


Image 9-33

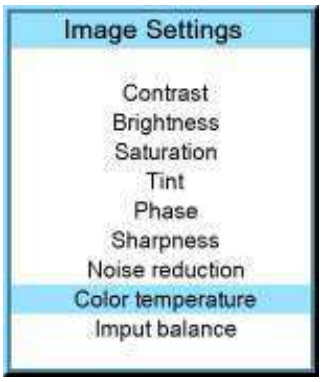


Image 9-34

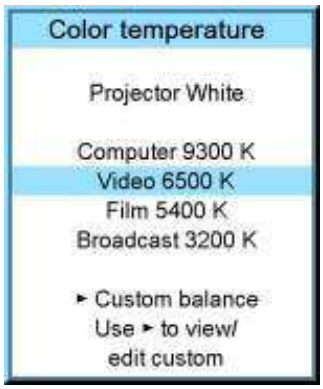


Image 9-35

9.3.8.2 Set a custom color temperature

How to enter a custom value?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Image settings* and press **ENTER**.
4. Use the ▲ or ▼ key to select *Color temperature* and press **ENTER**.
5. Use the ▲ or ▼ key to select *Custom balance* and press ►.

   The Custom balance menu is displayed.
6. Use the ▲ or ▼ key to select *Gain red* and press **ENTER**.
7. Adjust gain red with ◄ or ► key. When finished press **ENTER**.
8. Adjust gain blue in the same way as gain red.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



Image 9-36

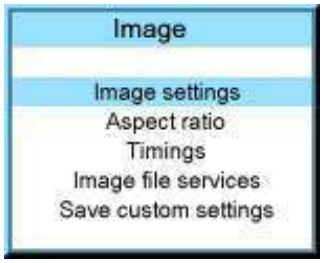


Image 9-37



Image 9-38

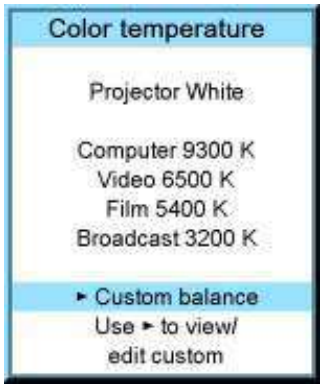


Image 9-39



Image 9-40

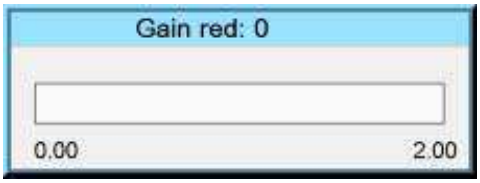


Image 9-41

9.3.9 Input balance

Overview

- Introduction to Input Balance
- Adjusting the input balance

9.3.9.1 Introduction to Input Balance

Introduction: Unbalanced color signals

When transporting signals, there is always a risk of deterioration of the information contained in the signals.

In case of information contained in the amplitude of the signals which is the case of data color signals (R, G, B),image 9-42 , we are quite sure that the amplitude of these color signals is subject to alterations.

An example of alteration may be a DC component added to the signal, in the form of a DC offset repositioning the black level, since this **black level** (**“brightness”**) will become crucial later on (clamping circuit) it will result in “black not being black”.

Another value that is subject to alteration is the amplitude of the signal, resulting in an altered “Gain” of the signal (**“white level”** or **contrast**).

The alterations of the three color signals will happen independently i.e. the colors will end to be unbalanced, image 9-43



Image 9-42

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

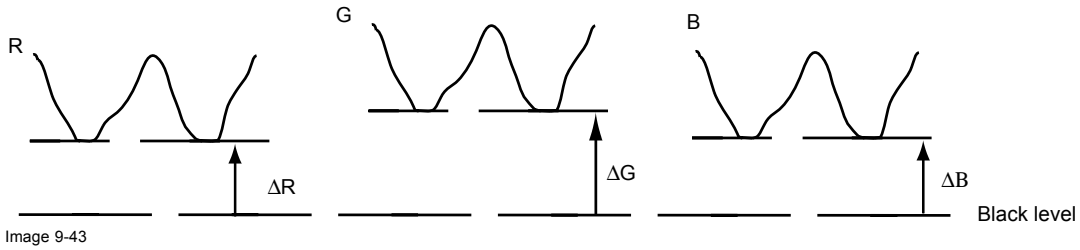


Image 9-43

One can conclude here that a good color tracking can only be met by using three previously (input) balanced color signals

Analog Digital Conversion

The analog color signals must pass through an Analog/Digital conversion circuit prior to any digital processing in the PMP.

A typical ADC transforms the analog value into an 8 bit coded digital signal.

The graphic shows that when converting a signal containing a DC offset component the range of the converter is not optimally used.

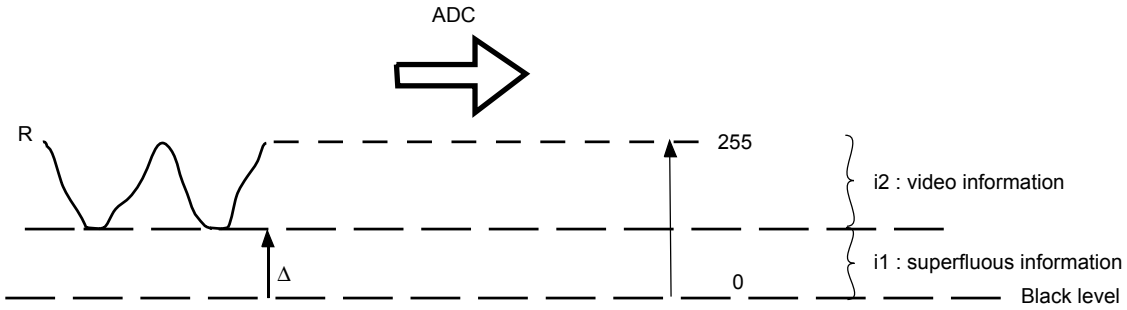


Image 9-44

One can conclude here that a good data conversion can only be met by using three previously (input) balanced color signals

The objective of input balancing

The objective in input balancing is to “set” the same black level and the same white level for the three colors of a particular input source.

Black level setting : brightness

White level setting : contrast

The same absolute black and white level for the three colors allows the same reference for Brightness and Contrast control of the picture !

These two references also set the range in which the ADC will work for that particular source (this explains also why each input balance setting is linked to a particular source and thus saved in the image file).

9.3.9.2 Adjusting the input balance

How can it be done ?

To balance the three color signals of a particular source there are conditions; in fact we must know the black and the white level of the source i.e. :

1. The source in question must be able to generate a white signal, ideally a 100% white (background) full screen pattern
2. The source in question must be able to generate a black signal, ideally a 100% black (background) full screen pattern

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

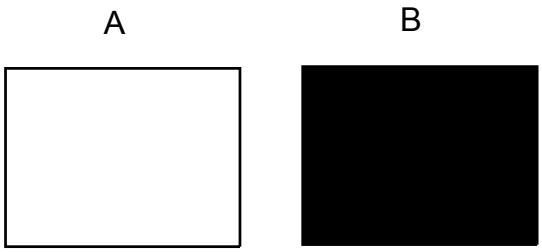


Image 9-45

White balance : In the projector, we will set the contrast for each color until we get a 100% light output picture when projecting a 100% white image (image A)

Black balance : In the projector, we will set the brightness for each color until we get a 0% light output picture when projecting a 100% black image (image B).

The changeover from min to max is indicated by the apparition of bright spots also called “digital noise”

An alternative to a full screen White/black pattern is the standard gray scale pattern, the white bar will be used for white balance and the black bar for black balance.

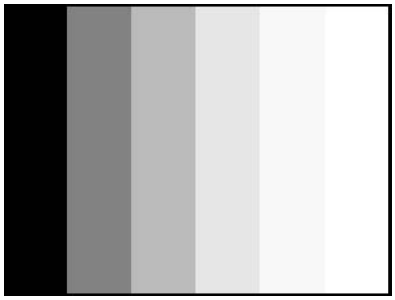


Image 9-46

Black balance

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Image settings* and press **ENTER**.
4. Use the ▲ or ▼ key to select *Input balance* and press **ENTER**.
5. Use the ▲ or ▼ key to select *Black balance* and press **ENTER**.
6. To start, use the ▲ or ▼ key to select *Black balance red* and press **ENTER**.

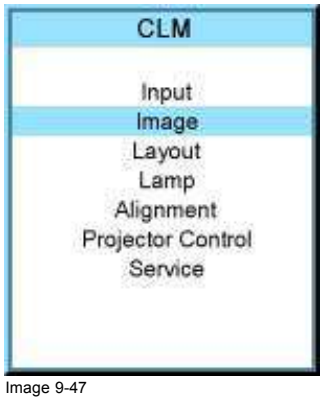


Image 9-47

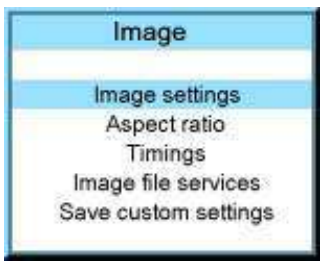


Image 9-48



Image 9-49

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

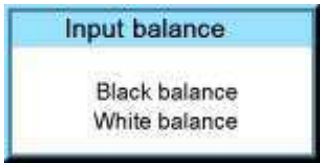


Image 9-50



Image 9-51

7. Adjust the red black level on a minimal value
8. Select Black balance blue and adjust the blue black level on a minimal value.
   Note: *This minimal value is not necessary , provided that the 2 other colors are not influencing too much the color to be adjusted, in fact the aim is to minimize the effect of the two other colors since there is a risk of reaching too soon the 50% transition due to the contribution of these two other colors signals.*
9. Select Black balance green and adjust the Green black level until bright spots appear on the screen.
10. Select Black balance blue adjust the Blue black level until bright spots appear on the screen.
11. Select Black balance red adjust the Red black level until bright spots appear on the screen.

    The projected image should now be noisy full black

If one uses a gray scale pattern, the bright spots should appear in the black bar.

Performing White input balance

1. Connect the source you want to project.
2. Select a white pattern (or gray scale as alternative).
3. Press **MENU** to activate the menus.
4. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
5. Use the ▲ or ▼ key to select *Image settings* and press **ENTER**.
6. Use the ▲ or ▼ key to select *Input balance* and press **ENTER**.
7. Use the ▲ or ▼ key to select *White balance* and press **ENTER**.
8. To start, use the ▲ or ▼ key to select *White balance red* and press **ENTER**.



Image 9-52

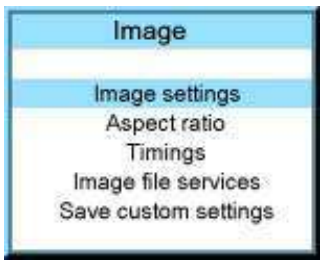


Image 9-53

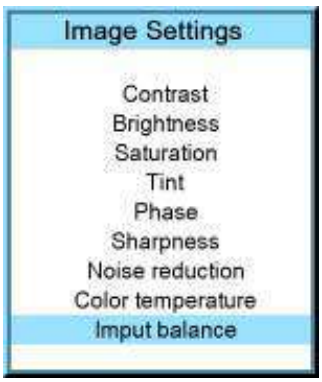


Image 9-54

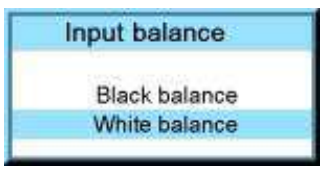


Image 9-55

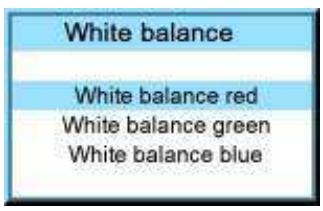


Image 9-56

9. Adjust the red white level (gain) on a minimal value

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

10. Select White balance blue and adjust the blue white level (gain) on a minimal value.
    Note: *This minimal value is not necessary , provided that the 2 other colors are not influencing too much the color to be adjusted, in fact the aim is to minimize the effect of the two other colors since there is a risk of reaching too soon the transition (bright spots) due to the contribution of these two other colors signals.*
11. Select White balance green and adjust the Green white level (gain) until bright spots appear on the screen.
12. Select White balance blue adjust the Blue white level (gain) until bright spots appear on the screen.
13. Select White balance red adjust the Red white level (gain) until bright spots appear on the screen.

    The projected image should now be noisy neutral gray

9.4 Aspect ratio

What can be done?

The aspect ratio setting forces the projector to project an image using a defined aspect ratio

Aspect ratio	Description
4:3	Standard television format
16:9	Wide screen television format / anamorphic format
5:4	Workstation format
2.35	Film format
1.88	
1.78	Wide screen television format / anamorphic format
Custom	Any custom format can be set up

Type of input signal is indicated above each image row. The image row shows how the image will be projected in the different aspect ratio settings.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4/3	5/4	16/9

Video Signal Pal/Secam



Video Signal NTSC



Video Signal 16/9



4/3 RGB Signal

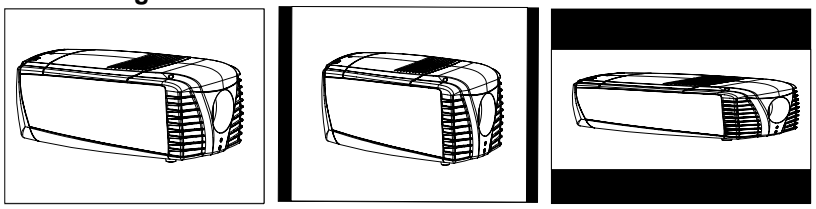


Image 9-57
Some examples for aspect ratio

How to select an Aspect ratio?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Aspect ratio* and press **ENTER**.

   The aspect ratio menu will be displayed.
4. Use the ▲ or ▼ key to select the desired aspect ratio and press **ENTER**.

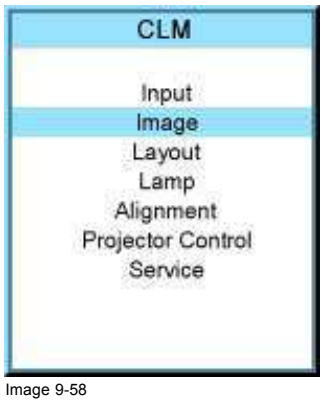


Image 9-58

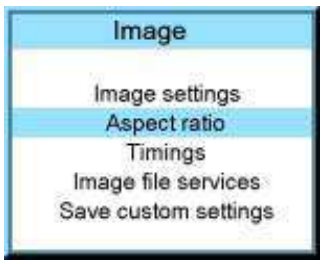


Image 9-59

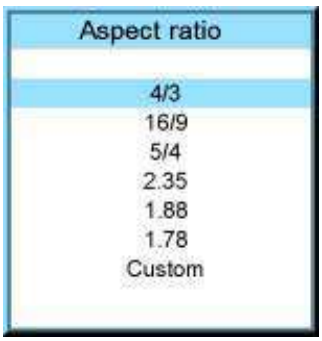


Image 9-60

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

How to set up a custom aspect ratio?

1. Select first *Custom* and press **ENTER** to activate.

   The *Custom aspect ratio* dialog box opens.

2. Use the ▲ or ▼ key to adjust the vertical size of the image.
   Use the ► or ◄ key to adjust the horizontal size of the image.
   When the desired aspect ratio is obtained, press **EXIT**.

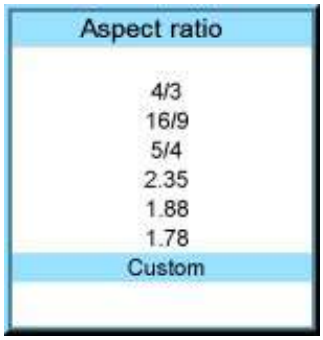


Image 9-61

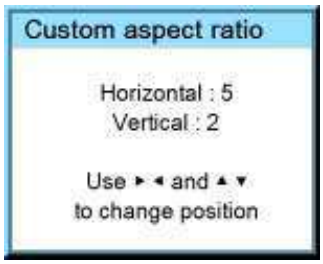


Image 9-62

9.5 Timings

9.5.1 Source timings

Adjustable items

- Horizontal start in pixels : number of pixels between the beginning of the input signal and the start of the video information in the signal.
- Width = Active horizontal pixels : determine the width of the window on the screen. This value is normally given in the source specifications. If not, adjust until full image is displayed (no missing pixels).
- Vertical start in lines : number of lines between the start of the input signal and start of the image on the screen.
- Height = Active vertical lines : number of horizontal lines determining the height of the projected image. this value is normally given in the specification of the source. If not, adjust until full image height is displayed (no missing lines).
- Total pixels: Total horizontal pixels in the source. If the value is wrong, sampling mistakes (small vertical bars in the projected image) will be seen in the image.
- Total lines: Total vertical lines in the source.

How to start up?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Timings* and press **ENTER**.

   The timings menu will be displayed.



Image 9-63



Image 9-64

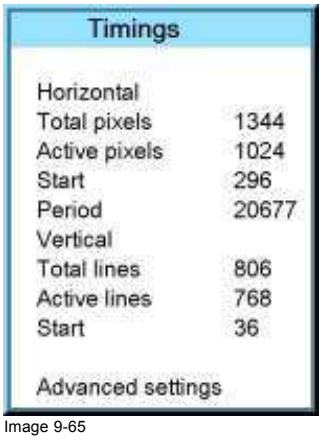


Image 9-65

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4. To change a setting, use the ▲ or ▼ key to select and press **ENTER**.

   The corresponding adjustment box is displayed. E.g. Horizontal total pixels.

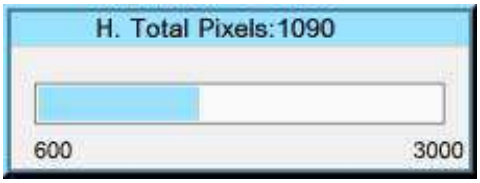


Image 9-66

5. Use the ▲ or ▼ key (or ◄ or ► key) to change the value.
6. Press **ENTER** to activate the new value.
7. If necessary to change other settings, repeat from step 4.

9.5.2 Advanced settings

About the advanced settings

Clamp delay	The time between the leading edge of the clamp pulse and the locked edge of the sync pulse. Can be any value between 0 and 255.
Clamp width	The width of the clamp pulse can be any value between 0 and 255.

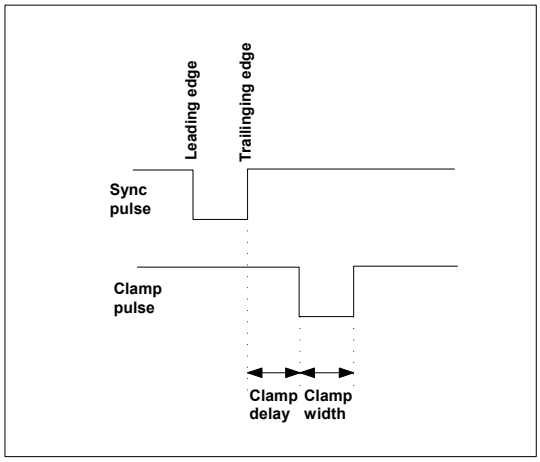


Image 9-67

Field polarity	The field polarity function is used for interlaced images. Both rasters of the image could be shifted in a wrong way (double lines are visible in the image). This can be corrected by forcing the field polarity to [neg] or [pos].

How to change the clamp delay - clamp width?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Timings* and press **ENTER**.
4. Use the ▲ or ▼ key to select *Advanced settings* and press **ENTER**.

   The Advanced settings menu is displayed.
5. Use the ▲ or ▼ key to select *Clamp delay* or *Clamp width* and press **ENTER**.

   A progress bar appears.
6. Use the ▲ or ▼ key to change the setting.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



Image 9-68



Image 9-69

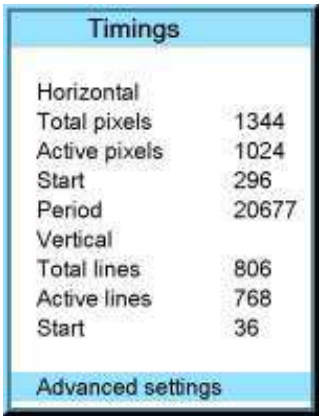


Image 9-70

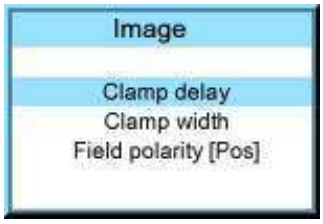


Image 9-71

How to change the field polarity?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Advanced settings* and press **ENTER**.

   The Advanced settings menu is displayed.
4. Use the ▲ or ▼ key to select *Field polarity* and press **ENTER** to toggle between [neg] or [pos].



Image 9-72



Image 9-73

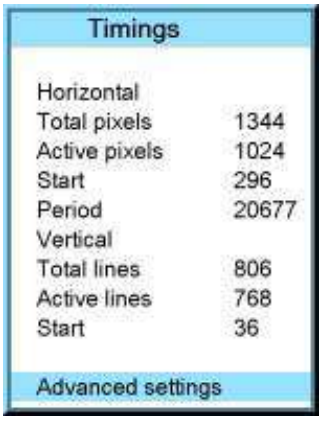


Image 9-74

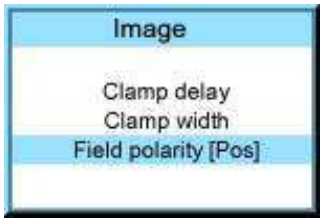


Image 9-75

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

9.6 Image files services

Overview

- Files and file manipulations
- Manual Load file
- Delete file
- Delete all custom files
- Rename a file
- File options

9.6.1 Files and file manipulations

Connecting a new source.

Before using a new source, a correct file has to be installed. The projector's memory contains a list of files corresponding to the most used sources. When the new source corresponds with one of these files, the file can be loaded and saved for future use. When there is a little difference, the file can also be loaded and then edited until the source specs are reached.

VESA standards and video standards are pre-programmed.

Possible file Manipulations

The following file manipulations are possible :

- Load : installation of a file for a new source.
- Rename : renaming a file.
- Delete : deleting a file (only custom files)
- Delete all : delete all custom files
- Options : way of loading a file when a source is selected.

A loaded file can be edited via the Timings menu. Once a file is edited, it will be saved with the same name as the original file, followed by a sequence number between rounded brackets.

9.6.2 Manual Load file

How to load?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *File services* and press **ENTER**.

   The File service menu is displayed.
4. Use the ▲ or ▼ key to select *Manual load* and press **ENTER**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The manual load window opens.



Image 9-76



Image 9-77



Image 9-78

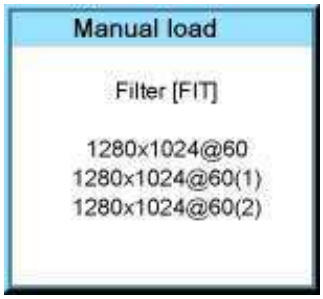


Image 9-79

Depending on the filter setup, the following is displayed:

- Fit: only fitting files for the selected source will be in the list
- All: all files in the system will be in the list.

5. Do you want to see only the fitting file in the manual load menu?
   If yes, Select *Filter* and use ► till [FIT] is on the menu.
   If no, Select *Filter* and use ► till [ALL] is on the menu.
6. Use the ▲ or ▼ key to select the appropriate file.
7. Press **ENTER** to select.

   The selected file is loaded.

The image is not perfect?

If the displayed image is not correct after selecting the best fitting file, go to the *Timings* menu and change the file settings.

9.6.3 Delete file

How to delete?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *File services* and press **ENTER**.

   The File service menu is displayed.
4. Use the ▲ or ▼ key to select *Delete* and press **ENTER**.

   The delete window opens.
5. Use the ▲ or ▼ key to select the file which must be deleted.
   Note: *Only custom files can be deleted.*
6. Press **ENTER** to delete the selected file.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



Image 9-80



Image 9-81



Image 9-82



Image 9-83

No recovery possible !

9.6.4 Delete all custom files

How to delete?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *File services* and press **ENTER**.

   The File service menu is displayed.
4. Use the ▲ or ▼ key to select *Delete all* and press **ENTER**.

   A delete all confirmation window opens.
5. Use the ▲ or ▼ key to select *Yes* if you are sure to delete all custom files and press **ENTER** to activate the selection.



Image 9-84



Image 9-85



Image 9-86

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



Image 9-87

Or,
if you are not sure to delete all custom files, select *No* and press **ENTER** to activate the selection.

9.6.5 Rename a file

How to rename?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *File services* and press **ENTER**.

   The File service menu is displayed.
4. Use the ▲ or ▼ key to select *Rename* and press **ENTER**.

   The rename window opens.
5. Use the ▲ or ▼ key to select the file which must be renamed.
   Note: *Only custom files can be renamed.*
6. Press **ENTER** to select.

   The rename window opens. The first character is selected.
7. Use the ▲ or ▼ key to change the selected character.
   Use the ◄ or ► key to selected another character.
   Note: *Digits can be entered with the digit keys on the remote control or on the local keypad. When a digit is entered in that way, the next character will be selected automatically.*
8. Press **ENTER** to finalize the rename action.



Image 9-88



Image 9-89



Image 9-90

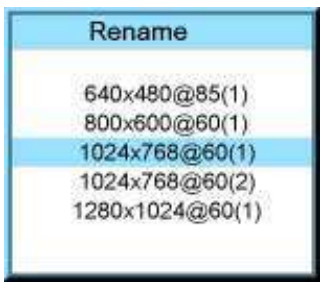


Image 9-91



Image 9-92

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

9.6.6 File options

How to set the options?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Image services* and press **ENTER**.

   The Image service menu is displayed.
4. Use the ▲ or ▼ key to select *Options* and press **ENTER**.



Image 9-93



Image 9-94



Image 9-95

   The options window opens.
5. Use the ▲ or ▼ key to select Load file and press **ENTER** to toggle between [Automatic], [Manual] and [Custom only].
   - [Automatic]: correct file will be loaded automatically.
   - [Manual]: correct file has to be loaded manually.
   - [Custom only]: correct file will be loaded automatically out of the available custom files.

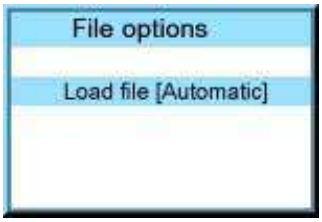


Image 9-96

9.7 Save custom settings

What is done?

The current custom settings can be saved to the internal backup device in the same way as it would be done when the projector was switched to standby.

How to save

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Image* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Save custom settings* and press **ENTER**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The custom settings are written to the internal backup device. A message menu “Save data ...” is displayed during the save operation.



Image 9-97

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

10. LAYOUT MENU

Overview

- Overview flow
- Main window
- PIP window
- Layout file services

10.1 Overview flow

Overview

Level 1	Level 2	Level 3	Level 4
Layout			
	Main window		
		Size	
		Position	
	PIP window		
		PIP window [ON/OFF]	
		Size	
		Position	
	Layout file services		
		Load	
			Main full screen
			PIP top right
			Split top bottom
		Rename	
		Delete	
		Copy / Save as	

10.2 Main window

Overview

- Size adjustment
- Position adjustment

When active layout is read only

When the active layout is a read only layout, the projector will ask to create a new layout.

Use the ▲ or ▼ key to select *Yes or No* and press **ENTER**.

If *Yes* is selected an *Enter layout name* window opens.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

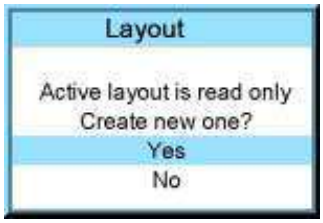


Image 10-1

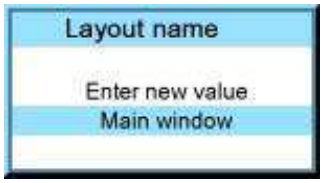


Image 10-2

The first character is highlighted. Use the ▲ or ▼ key to select the desired character and press ◄ or ► key to select the next character in the name.

Press **EXIT** to return. The new file is generated.

10.2.1 Size adjustment

What can be done?

The size of the main window can be adjusted until the desired window dimensions are reached.

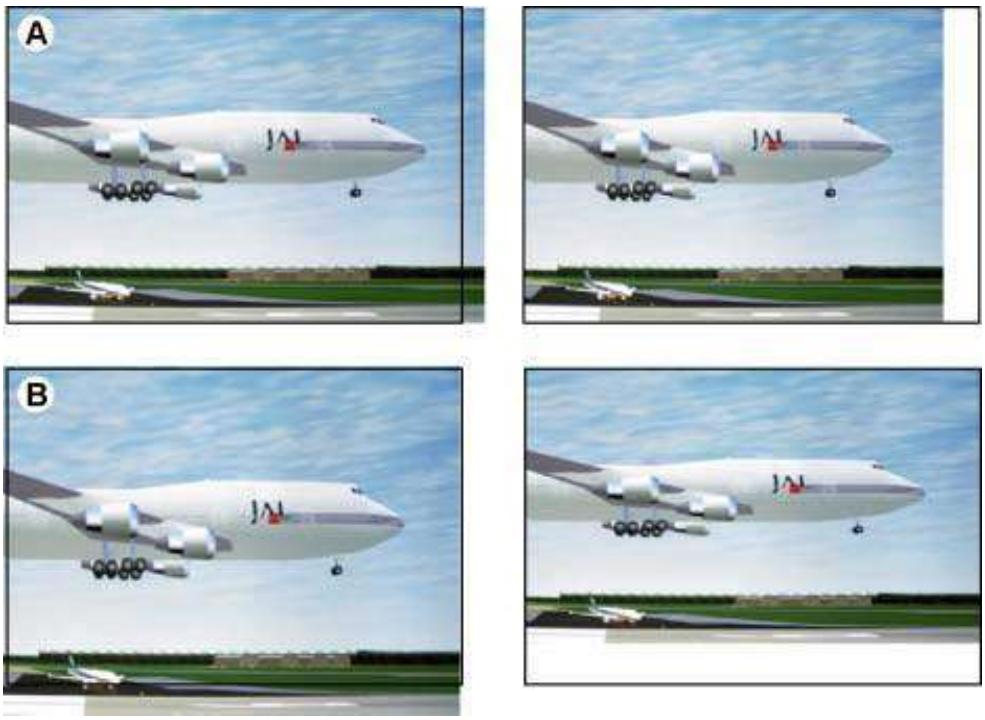


Image 10-3
Size adjustment main window

A width adjustment
B height adjustment

The size can be changed with respect to the original aspect ratio.

How to adjust with respect to the original aspect ratio?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Layout* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Main Window* and press **ENTER**.

   The main window opens.
4. Use the ▲ or ▼ key to select *Size* and press **ENTER**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The size adjustment window opens.

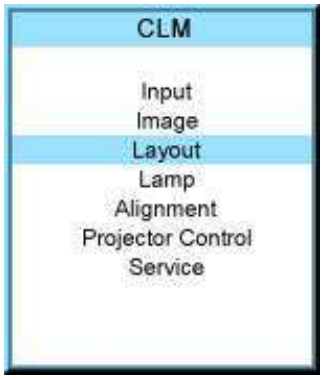


Image 10-4

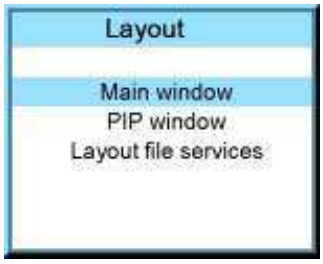


Image 10-5

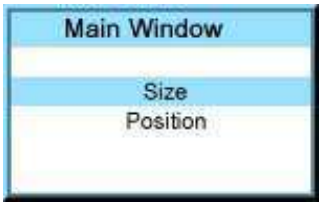


Image 10-6

5. Toggle with **ENTER** till Lock is set to [x].



Image 10-7

[ ] = no lock between height and width.

[x] = width and height are locked.

6. Use ► ◄ or▲ ▼ to adjust the size with respect to the original aspect ratio.
When the desired size is reached, press **EXIT**.

A Save window opens.



Image 10-8

How to adjust height and width separately?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Layout* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Main Window* and press **ENTER**.

   The main window opens.
4. Use the ▲ or ▼ key to select *Size* and press **ENTER**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The size adjustment window opens.

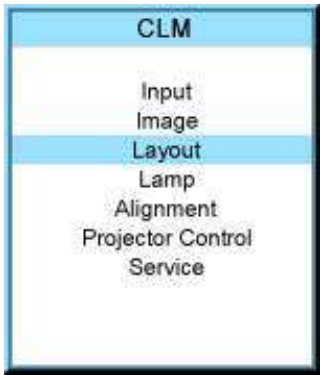


Image 10-9

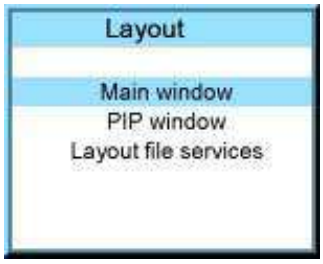


Image 10-10

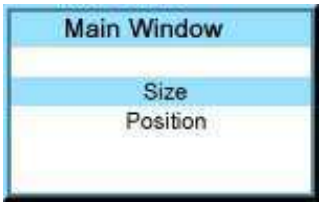


Image 10-11

5. Toggle with **ENTER** till Lock is set to [ ].



Image 10-12

[ ] = no lock between height and width.

[x] = width and height are locked.

6. Use the ▲ or ▼ key to adjust the height.
   Use the ◄ or ► key to adjust the width.
   When the desired size is reached, press **EXIT**.

   A Save window opens.



Image 10-13

7. Select with the ▲ or ▼ key *Yes* and press **ENTER**.
   Select with the ▲ or ▼ key *No*, when no save is desired and press **ENTER**.

10.2.2 Position adjustment

What can be done?

The main window can be repositioned on the screen. The upper left corner is the reference.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

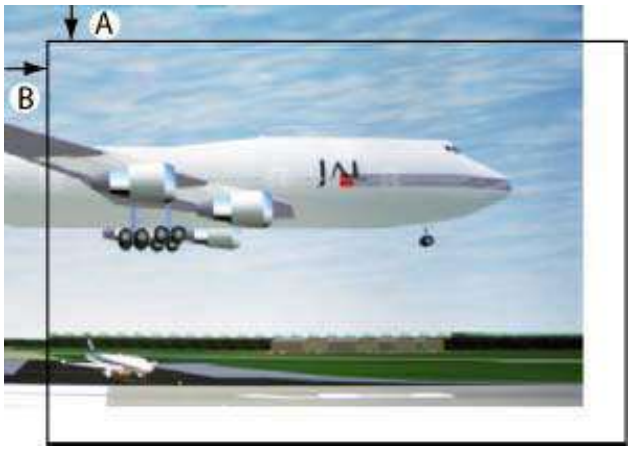


Image 10-14
Positioning the window

How to position?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Layout* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Main Window* and press **ENTER**.

   The main window opens.
4. Use the ▲ or ▼ key to select *Position* and press **ENTER**.

   The position adjustment window opens.
5. Use the ▲ or ▼ key to adjust top start point.
   Use the ◄ or ► key to adjust left start point.
   When the desired size is reached, press **EXIT**.

   A Save window opens.

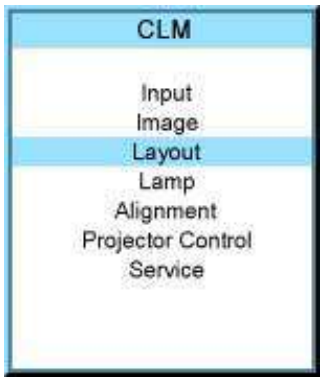


Image 10-15

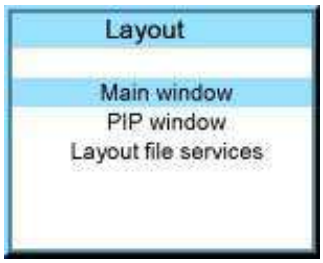


Image 10-16

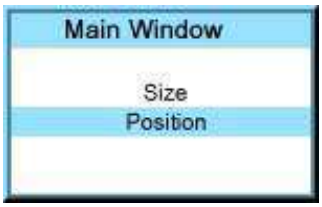


Image 10-17

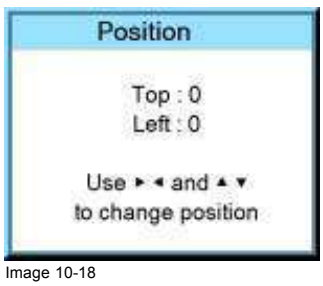


Image 10-18

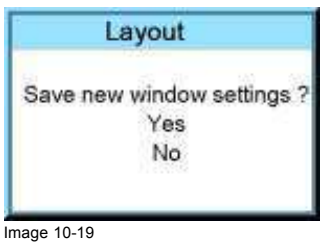


Image 10-19

6. Select with the ▲ or ▼ key *Save* and press **ENTER**.
   Select with the ▲ or ▼ key *Delete*, when no save is desired and press **ENTER**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

10.3 PIP window

Overview

- Introduction to PIP
- Picture in Picture activation
- Picture in Picture size of the window
- Picture in Picture, position window

10.3.1 Introduction to PIP

PiP

PiP stands for "Picture in Picture" and allows to display multiple windows containing each of them an image. The windows may be of the video or data type.

What are the different possibilities within the PiP mode ?

The input section of the projector allows a combinations of different input signals which may be projected in the 2 windows of the PiP screen. The PiP window can be placed anywhere, with any dimensions, on the screen by changing its position and its size.

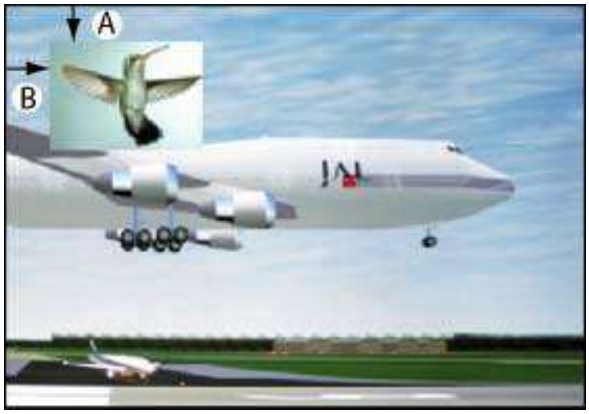


Image 10-20
Position of PiP

A Top position
B Left position

10.3.2 Picture in Picture activation

How to activate PIP?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Layout* and press **ENTER**.
3. Use the ▲ or ▼ key to select *PIP Window* and press **ENTER**.

   The PIP window opens.
4. Use the ▲ or ▼ key to select *On* or *Off* and press **ENTER** to toggle between [On] and [Off].

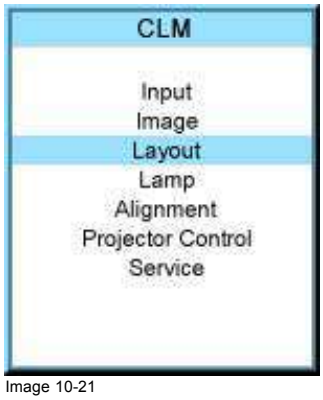


Image 10-21



Image 10-22

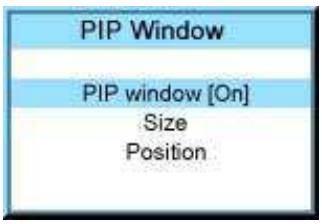


Image 10-23

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5. Press **EXIT** to quit the menu.

When PIP is activated (ON state), the PIP window becomes the active window. Switching to the main window is still possible with the window button on the RCU.

10.3.3 Picture in Picture size of the window

What can be done?

The width and height of the picture in picture window can be changed till the desired dimensions are obtained.

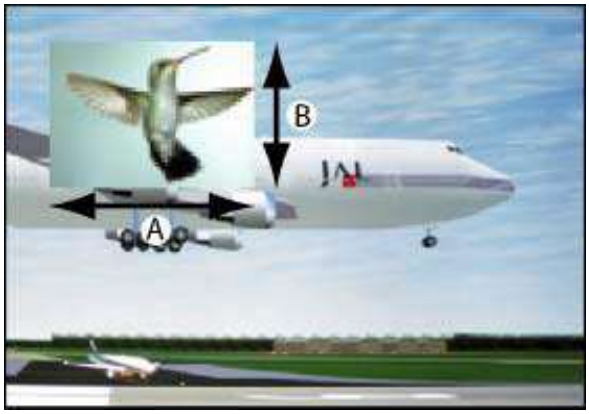


Image 10-24
Size PIP window

A Width PIP window
B Height PIP window

The size of the picture in picture window can be changed with respect to the original aspect ratio of the PIP image.

Remark: when e.g. the PIP window is a 4 by 3 window and the projected image has a 16 by 9 format, then it is possible that image jumps inside the PIP window during a re-scaling. Due to the fact that the re-scale is done on the vertical dimensions of the PIP window and the image inside it will be re-scaled so that the aspect ratio is still correct.



Image 10-25
Size PIP window remark

How to change the size with respect to the aspect ratio?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Window* and press **ENTER**.
3. Use the ▲ or ▼ key to select *PIP Window* and press **ENTER**.

   The main window opens.
4. Use the ▲ or ▼ key to select *Size* and press **ENTER**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The size adjustment window opens.

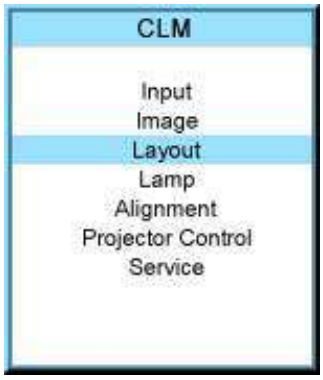


Image 10-26

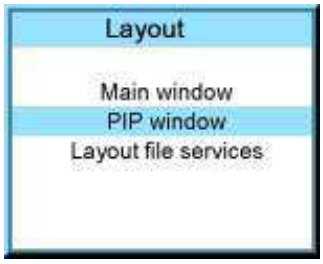


Image 10-27

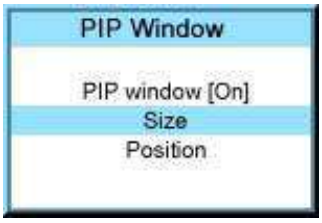


Image 10-28

5. Toggle with **ENTER** till Lock is set to [x]].

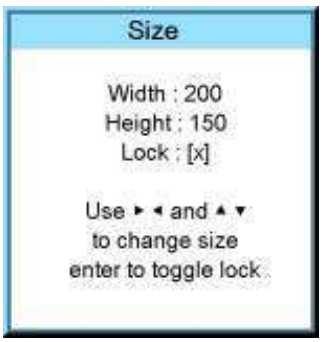


Image 10-29

[ ] = no lock between height and width.

[x] = width and height are locked.

6. Use the ▲ ▼ or ◄ ►key to adjust the size with respect to the aspect ratio.
When the desired size is reached, press **EXIT**.

A Save window opens.

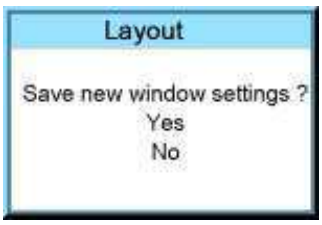


Image 10-30

7. Select with the ▲ or ▼ key *Yes* and press **ENTER**.
Select with the ▲ or ▼ key *No*, when no save is desired and press **ENTER**.

How to change the height and width separately?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Window* and press **ENTER**.
3. Use the ▲ or ▼ key to select *PIP Window* and press **ENTER**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The main window opens.

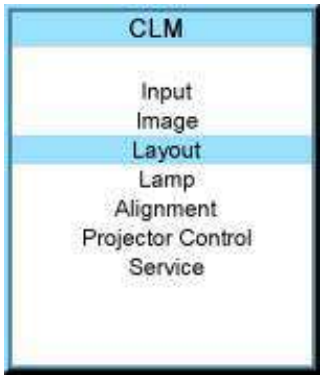


Image 10-31

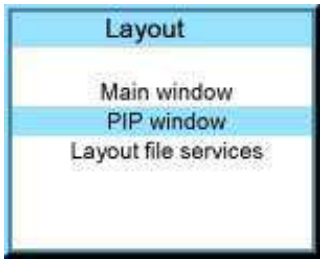


Image 10-32

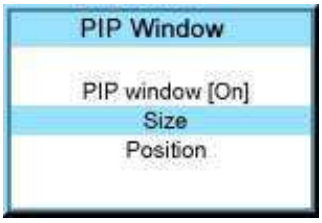


Image 10-33

4. Use the ▲ or ▼ key to select *Size* and press **ENTER**.

   The size adjustment window opens.

5. Toggle with **ENTER** till Lock is set to [ ].

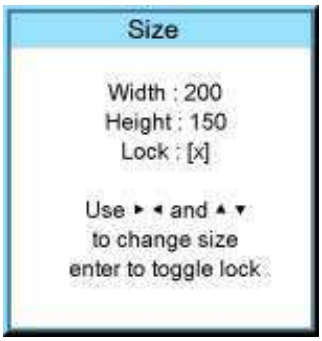


Image 10-34

[ ] = no lock between height and width.

[x] = width and height are locked.

6. Use the ▲ or ▼ key to adjust the height.
   Use the ◄ or ► key to adjust the width.
   When the desired size is reached, press **EXIT**.

   A Save window opens.



Image 10-35

7. Select with the ▲ or ▼ key *Yes* and press **ENTER**.
   Select with the ▲ or ▼ key *No*, when no save is desired and press **ENTER**.

10.3.4 Picture in Picture, position window

What can be done?

The picture in picture window can be position on any place on the display just by changing its start coordinates. The reference is the upper left corner of the window.

How to position?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Window* and press **ENTER**.
3. Use the ▲ or ▼ key to select *PIP Window* and press **ENTER**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The PIP window opens.

4. Use the ▲ or ▼ key to select *Position* and press **ENTER**.

   The size adjustment window opens.

5. Use the ▲ or ▼ key to adjust Top
   Use the ◄ or ► key to adjust Left
   When the desired position is reached, press **EXIT**.

   A Save window opens.



Image 10-36

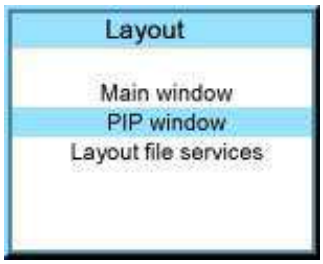


Image 10-37

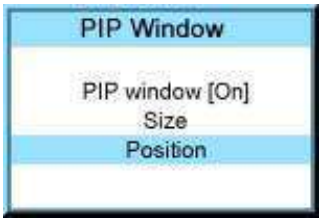


Image 10-38

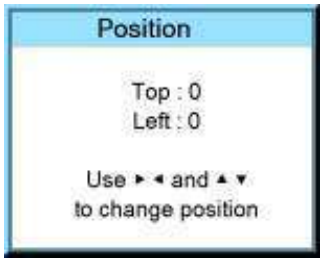


Image 10-39

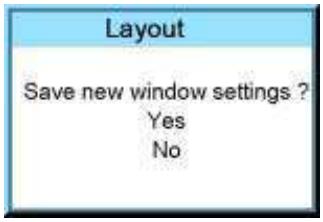


Image 10-40

6. Select with the ▲ or ▼ key *Yes* and press **ENTER**.
   Select with the ▲ or ▼ key *No*, when no save is desired and press **ENTER**.

10.4 Layout file services

Overview

- Load layout
- Rename a layout
- Delete a layout
- Copy / Save as a layout

10.4.1 Load layout

When loading a layout which required two sources, the *PIP window On/Off* setting will be switched to ON.

How to load?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Window* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Layout* and press **ENTER**.

   The layout services window opens.

4. Use the ▲ or ▼ key to select *Load* and press **ENTER**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The load layout window opens.

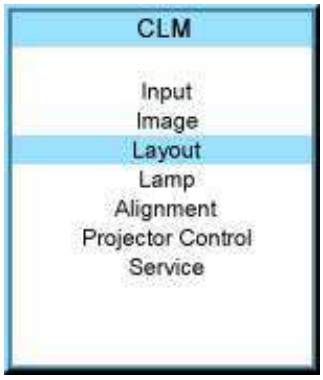


Image 10-41

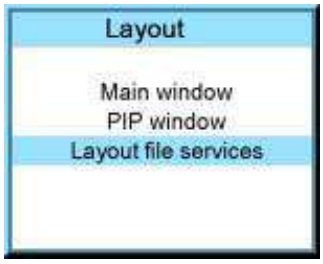


Image 10-42



Image 10-43



Image 10-44

5. Use the ▲ or ▼ key to select the desired layout and press **ENTER** to select.

   The first 3 layouts are default layouts, all others are customer created layouts. The menu shows only the first 10 layouts, but use the ▼ to scroll through the rest of the layouts until the desired layout is found.

10.4.2 Rename a layout

Only custom created layouts can be renamed.

How to rename?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Window* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Layout* and press **ENTER**.

   The layout services window opens.
4. Use the ▲ or ▼ key to select *Rename* and press **ENTER**.

   The Rename layout location window opens.
5. Use the ▲ or ▼ key to select the layout to rename and press **ENTER**.

   The edit layout name window opens. The first character is selected.
6. Use the ▲ or ▼ key to change the selected character.
   Use the ◄ or ► key to selected another character.
   Note: *Digits can be entered with the digit keys on the remote control or on the local keypad. When a digit is entered in that way, the next character is selected automatically.*
7. Press **ENTER** to save the new name.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

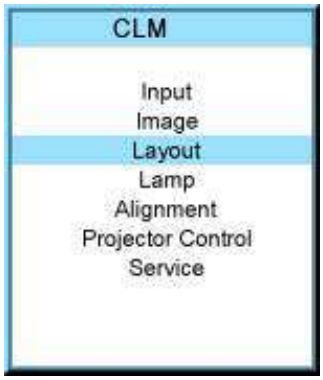


Image 10-45

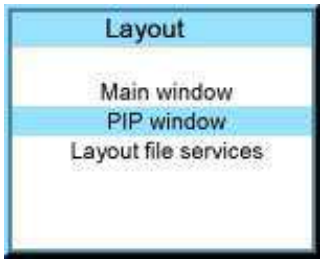


Image 10-46



Image 10-47



Image 10-48

10.4.3 Delete a layout

What is possible?

Custom created layouts can be removed from the projector memory.

How to delete?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Window* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Layout services* and press **ENTER**.

   The layout services window opens.
4. Use the ▲ or ▼ key to select *Delete* and press **ENTER**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The *Delete* window opens.

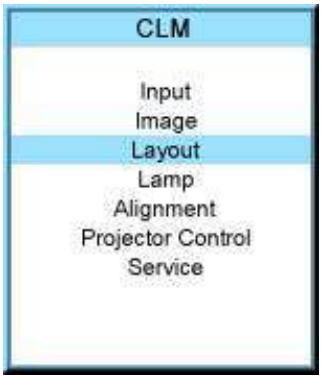


Image 10-49

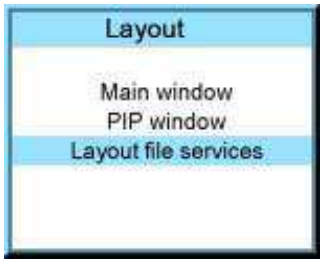


Image 10-50



Image 10-51

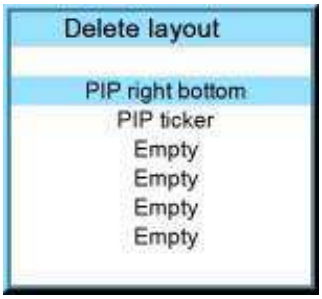


Image 10-52

The first 3 layouts are default layouts and cannot be delete.

5. Use the ▲ or ▼ key to select the layout that must be deleted.
6. Press **ENTER** to finalize the delete operation.

10.4.4 Copy / Save as a layout

What is possible,

An existing layout, system layout or custom created layout, can be copied into a new file.

How to copy / save as?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Window* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Layout* and press **ENTER**.

   The layout services window opens.
4. Use the ▲ or ▼ key to select *Copy/Save as* and press **ENTER**.

   The Save layout location window opens.
5. Use the ▲ or ▼ key to select the layout to copy/save as and press **ENTER**.

   The edit layout name window opens. The first character is selected.
6. Use the ▲ or ▼ key to change the selected character.
   Use the ◄ or ► key to selected another character.
   Note: *Digits can be entered with the digit keys on the remote control or on the local keypad. When a digit is entered in that way, the next character is selected automatically.*
7. Press **ENTER** to copy to the new name.
   The new layout will be added to the list of layouts.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

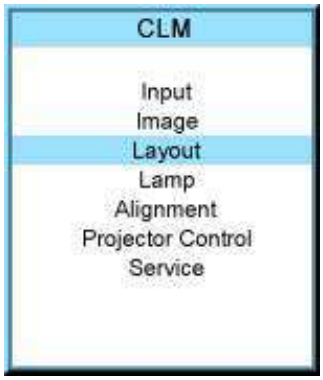


Image 10-53

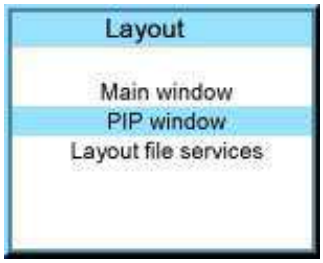


Image 10-54



Image 10-55



Image 10-56

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

11. LAMP MENU

Overview

- Overview flow
- Lamp power mode
- Lamp power
- Lamp Identification
- Status and run time overview lamps
- Lamp mode

11.1 Overview flow

Overview

Level 1	Level 2	Level 3	Level 4
Lamp			
	Power		
		Mode	
			Normal
			Economic
		Power (reduction)	
	Identification		
		Serial number	
		Article number	
		Run time	
		Remaining run time	
		Number of strikes	
		Version	
		Status	
	Overview		
	Lamp mode		
		1 lamp	
		2 lamps	
		4 lamps	

11.2 Lamp power mode

What can be done?

The lamp power mode can be switched between **Normal** and **Economic**. When playing in Economic mode, the life time of the active lamp(s) will increase.

Normal : maximum allowed power is fed to the lamp(s). Maximum light output is reached in this way.

Economic : a reduced wattage is fed to the lamp(s). Reduced light output but a longer life time for the lamp(s).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

How to switch?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Lamp* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Power* and press **ENTER**.
4. Use the ▲ or ▼ key to select *Mode*.
5. Press **ENTER** to toggle between *[Normal]* and *[Economic]*.

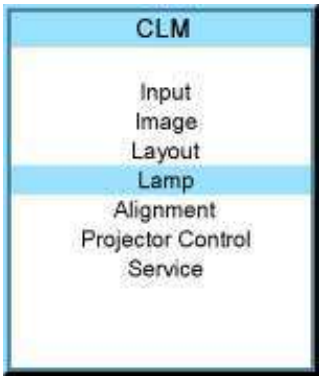


Image 11-1

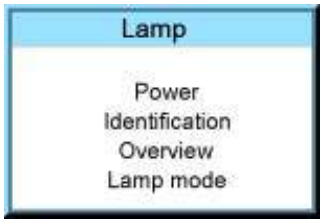


Image 11-2

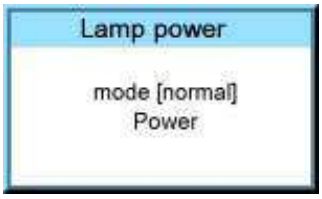


Image 11-3

11.3 Lamp power

What can be done?

Within the normal power mode, the light output of the active lamp(s) can be reduced by reducing the lamp power between 100% and 83%.

How to dim?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Lamp* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Power* and press **ENTER**.
4. Use the ▲ or ▼ key to select *Power* and press **ENTER**.
   Note: *Only possible when lamp mode is [Normal].*
5. Use the ▲ or ▼ key to change the lamp power.

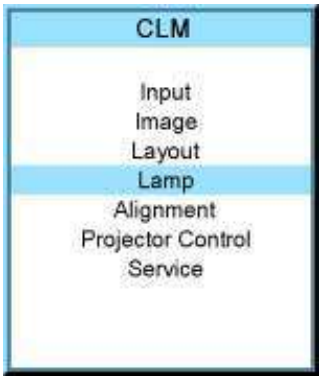


Image 11-4

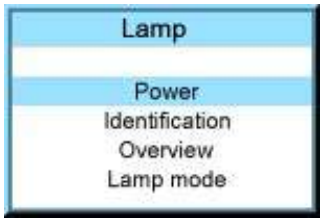


Image 11-5

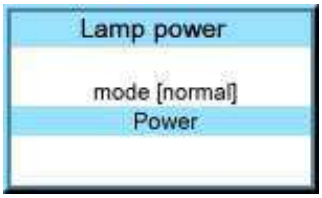


Image 11-6

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

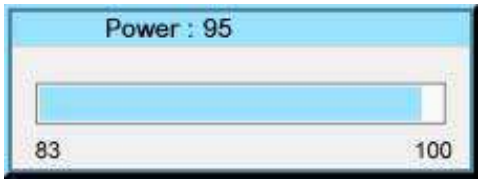


Image 11-7

11.4 Lamp Identification

About

The lamp identification menu gives an overview of the most important parameters of the used lamps. It starts with the first lamp. Scrolling to other lamps is possible with the cursor keys.

These parameters are:

- Serial number lamp
- Article number of the used lamp
- Run time since first start up of the lamp
- Remaining run time for a safe operation of the lamp
- Number of strikes since the first start up of the lamp
- Status of the lamp

These parameters are useful when calling for a service intervention.

How to display?

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Lamp* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Identification* and press **ENTER**.

   The identification overview is displayed.
4. Use the ◄ or ► key to select another lamp.

   The status is given lamp per lamp.



Image 11-8

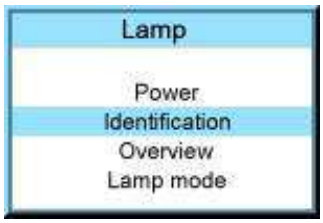


Image 11-9

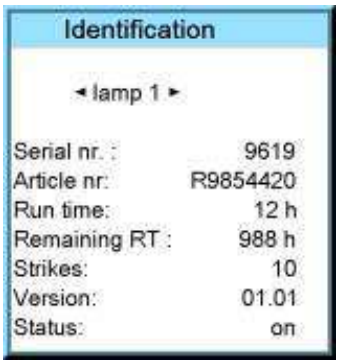


Image 11-10

11.5 Status and run time overview lamps

Overview

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Lamp* and press **ENTER**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3. Use the ▲ or ▼ key to select *Overview* and press **ENTER**.

   The status and the run time for each lamp are displayed.



Image 11-11

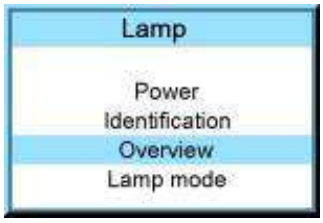


Image 11-12

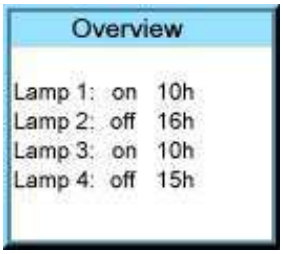


Image 11-13

11.6 Lamp mode

What can be done?

The projector is equipped with 4 identical lamps. Depending on the main voltage, the lamp selection mode menu will show 4 lamps, 3 lamps, 2 lamps or a single lamp when starting up the projector.

When the main input voltage is between:

- 90-140V : lamp mode selection between 3 lamps, 2 lamps and 1 lamp.
- 170-264V : lamp mode selection between 4 lamps, 2 lamps and 1 lamp.

In 3 lamps mode, the projector will always ignite lamp 3 and 4 and lamp 1 or 2 depending on the run time of lamp 1 or 2. It will always use those with the lowest run time.

In *2 lamps* mode, the projector will always ignite lamp 1 & 3 or 2 & 4 depending on the current run time. It will always use those with the lowest run time.

In *1 lamp* mode, the projector will always ignite lamp 3 or 4, depending on the current run time. It will always use the lamp with the lowest run time.

How to change the lamp mode

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Lamp* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Lamp mode* and press **ENTER**.

   The Lamp mode selection menu is displayed.
4. Use the ▲ or ▼ key to select the desired lamp mode and press **ENTER**.



Image 11-14

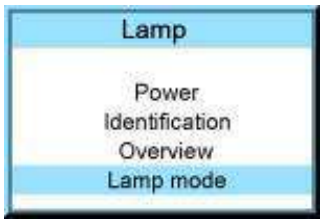


Image 11-15

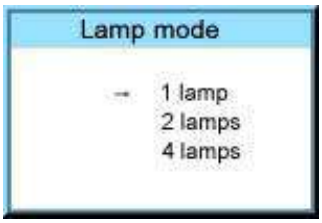


Image 11-16

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

12. ALIGNMENT MENU

About this chapter

This chapter describes the alignment of the projector once the physical installation is finished. Via the software, the image will be perfectly aligned on the screen.

Overview

- Overview flow
- Orientation
- Lens adjustment
- Side keystone
- Blanking
- Optical dimming
- Gamma
- Internal pattern
- Color space
- White peaking
- ScenergiX

12.1 Overview flow

Overview

Level 1	Level 2	Level 3
Alignment		
	Orientation	
		Front Table
		Front Ceiling
		Rear Table
		Rear Ceiling
	Lens	
		Zoom/Focus
		Shift
	Side keystone	
	Blanking	
		Top
		Bottom
		Left
		Right
		Reset
	Optical dimming	
	Gamma	
	Internal patterns	
		Checker board
		Color bars

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Level 1	Level 2	Level 3
		Convergence
		Focus
		Full screen black
		Full screen blue
		Full screen green
		Full screen red
		Full screen white
		Hatch
		Outline
	Color space	
		Projector
		EBU
		SMPTE
		Custom
	White peaking	
	ScenergiX	
		Status
		Top
		Bottom
		Left
		Right
		Show pattern
		Black level

12.2 Orientation

What can be done?

The way of physical installation of the projector can be defined to the projector.

The following installation are possible:

- front/table
- front/ceiling
- rear/table
- rear/ceiling

Set up the correct orientation

1. Press **MENU** to activate the menus.
2. Use the ▲ or ▼ key to select *Alignment* and press **ENTER**.
3. Use the ▲ or ▼ key to select *Orientation* and press **ENTER**.
4. Use the ▲ or ▼ key to select the correct orientation and press **ENTER**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP