ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Bustec 3150-AA* at our website: *Click HERE*

PRELIMINARY

ProDAQ 3150
High-Perfomance Motherboard

User Manual

Bustec Production Ltd.
World Aviation Park
Shannon, Co. Clare, Ireland
Tel. +353 61 707 100
Fax +353 61 707 106
www.bustec.ie

Publication No. 3150UM-01
Publication Date: Oct. 2000

Copyright, © 2000, Bustec Production Ltd.

PROPRIETARY NOTICE

This document and the technical data herein disclosed, are proprietary to Bustec Production Ltd., and shall not, without express written permission of Bustec Production Ltd., be used, in whole or in part to solicit quotations from a competitive source or used for manufacture by anyone other than Bustec Production Ltd. The information herein has been developed at private expense, and may only be used for operation and maintenance reference purposes or for purposes of engineering evaluation and incorporation into technical specifications and other documents, which specify procurement of products from Bustec Production Ltd. This is a preliminary document and can be subject to change without further notification. Bustec Production Ltd. reserve the right to change both the hardware and software prototypes described herein.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

WARRANTY STATEMENT

Products sold by Bustec Production Ltd. are warranted to be free from defects in workmanship or materials. Bustec Production Ltd. at its discretion will either repair or replace any hardware products that prove to be defective during the warranty period. You are a valued customer. Our mission is to make any necessary repairs in a reliable and timely manner.

Duration of Warranty

The warranty period for Bustec Production Ltd. hardware is one year. Software and firmware products designed for use with this hardware are warranted not to fail to execute their programming instructions due to defect in materials or workmanship for a period of ninety days from the date of delivery to the initial end user.

Return of Product

Authorization is required from Bustec Production Ltd. before you send us your product for service or calibration. Call Bustec Production Ltd support facility. If you are unsure where to call, contact Bustec Production Ltd. at 353-61-707100. We can also be reached at www.bustec.ie.

Limitation of Warranty

Bustec Production Ltd. shall be released from all obligations under this warranty in the event repairs or modifications are made by persons other than authorized Bustec Production Ltd. service personnel or without the written consent of Bustec Production Ltd.

Bustec Production Ltd. expressly disclaims any liability to its customers, dealers and representatives and to users of its product. Also to any other person or persons, for special or consequential damages of any kind and from any cause whatsoever arising out of or in any way connected with the manufacture, sale, handling, repair, maintenance, replacement or use of said products.

Representations and warranties made by any person including dealers and representatives of Bustec Production Ltd., which are inconsistent or in conflict with the terms of this warranty (including but not limited to the limitations of the liability of Bustec Production Ltd. as set forth above), shall not be binding upon Bustec Production Ltd. unless reduced to writing and approved by an officer of Bustec Production Ltd.

Except as stated above, Bustec Production Ltd. makes no warranty, express or implied (either in fact or by operation of law), statutory or otherwise; and except to the extent stated above. Bustec Production Ltd. shall have no liability under any warranty, express or implied (either in fact or by operation of law), statutory or otherwise.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table of Contents

1 Introduction 5

1.1 About the ProDAQ 3150 Motherboard 5
1.2 Unpacking and Inspection 6
1.3 Reshipment Instructions 7

2 Installation and Configuration 8

2.1 Installing a ProDAQ Function Card 9
2.2 Removing a ProDAQ Function Card 11
2.3 Installing a ProDAQ Plug-in Module 11
2.3.1 Installing the ProDAQ Voltage Reference Plug-in Module 12
2.3.2 Installing the ProDAQ DSP Plug-in Module 12
2.4 Configuring the ProDAQ 3150 Motherboard 13
2.4.1 VXIbus Logical Address 13

3 Theory of Operation 15

3.1 Overview 16
3.2 VXIbus Interface 16
3.2.1 VXIbus Configuration Registers 16
3.2.2 Interrupter 16
3.3 Memory 17
3.4 On-board processor 17
3.5 Communication/Arbitration Controller 17
3.6 The Trigger and Interrupt System 18

4 Programming Information 20

4.1 VXIbus Interface and Registers 20
4.1.1 VXIbus Configuration Registers 21
4.1.2 VXIbus Configuration Register Details 22
4.2 VXIbus Address Map 35
4.2.1 Function Card Access 36
4.2.2 Internal Resource 37

5 The ProDAQ 3220 DSP Plug-in Module 39

5.1 Overview 39
5.2 Programming Information 40
5.2.1 Address Map 40
5.2.1 Communication Registers 41
5.3 iBus Cycles 49
5.4 VXI Local Bus Interface 51

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

List of Figures

Figure 1 - Components of a ProDAQ Modular Data Aquisition System 6
Figure 2 - Removing the ProDAQ Module Cover 8
Figure 3 - The module assembly 10
Figure 4 - Location of Plug-in Modules and Memory 11
Figure 5 - Logical Address Selection 13
Figure 6 - Simplified Block Diagram 15
Figure 7 - DSP Plug-in Module Block Diagram 39

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 1

Introduction

This manual describes the ProDAQ 3150 Motherboard and explains how to install, configure and program the ProDAQ 3150 Motherboard with any of the ProDAQ Plug-in Modules and ProDAQ Function Cards.

About the ProDAQ 3150 Motherboard


The ProDAQ 3150 Motherboard provides a VXI interface, a local processor, memory and common resources like a voltage reference module (optional), trigger routing capability and additional power regulators for up to eight ProDAQ function cards. The ProDAQ 3150 Motherboard together with the ProDAQ Function Cards can be configured to provide any function or combination of functions required for a specific application.

The ProDAQ 3150 Motherboard is part of the ProDAQ Modular Data Acquisition System, which consists of the following components:

- A ProDAQ Motherboard that installs into a VXI slot in a VXIbus chassis. A ProDAQ Motherboard can be populated with a ProDAQ 3250 DSP Plug-in Module (ProDAQ 3150 Motherboard only), a ProDAQ 3201 Voltage Reference Plug-in Module (optional) and up to eight ProDAQ Function Cards.
- The ProDAQ 3220 DSP Plug-in Module that installs into the DSP Plug-in slot on a ProDAQ Motherboard (ProDAQ 3150 Motherboard only).
- The ProDAQ 3201 Voltage Reference Plug-in Module that installs into the Voltage Reference Plug-in slot on a ProDAQ Motherboard.
- The ProDAQ Function Cards which install into ProDAQ Bus slots on a ProDAQ Motherboard.

The ProDAQ Signal Conditioning Unit can be used together with the ProDAQ Modular Data Acquisition System to provide various signal conditioning functions and allows for easy connection to the existing installation.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

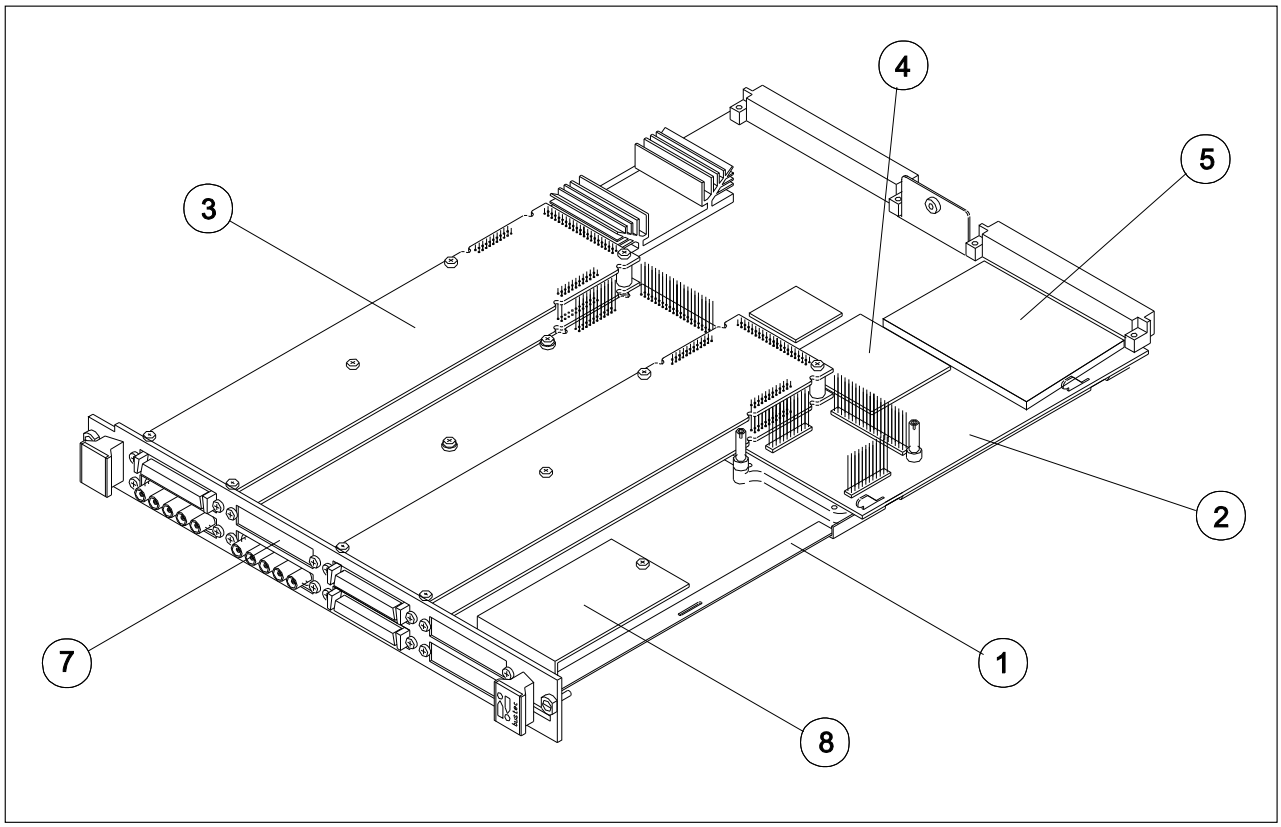

1 - Module Cover (Bottom)
2 - ProDAQ Motherboard
3 - ProDAQ Function Card
4 - ProDAQ Voltage Ref. Plug-in Module
5 - ProDAQ DSP Plug-in Module
6 - Memory Plug-in Module
7 - Single Filler Panel
8 - Double Filler Panel

Figure 1 - Components of a ProDAQ Modular Data Aquisition System

The ProDAQ 3150 Motherboard is shipped in a VXI module enclosure, ready to be installed in a VXIbus chassis. The function cards can be factory-installed or field-installed later on. The front-panel is populated with filler panels for each ProDAQ function card slot, which should be left in place unless a ProDAQ function card is installed in the slot. The ProDAQ function card slots are arranged in four stacks of two function cards each.

Unpacking and Inspection

Before unpacking the ProDAQ module, check the exterior of the shipping carton for any signs of damage. All irregularities should be noted on the shipping bill.

The ProDAQ module is shipped in an antistatic package to prevent any damage from electrostatic discharge (ESD). Proper ESD handling procedures must always be used when packing, unpacking or installing any ProDAQ module, ProDAQ plug-in module or ProDAQ function card:

- Ground yourself via a grounding strap or similar, e.g. by holding to a grounded object.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- Discharge the package by touching it to a grounded object, e.g. a metal part of your VXIbus chassis, before removing the module from the package.
- Remove the ProDAQ module from its carton, preserving the factory packaging as much as possible.
- Inspect the ProDAQ module for any defect or damage. Immediately notify the carrier if any damage is apparent.

Reshipment Instructions


Use the original packing material when returning a ProDAQ module to Bustec Production Ltd. or calibration or servicing. The original shipping carton and the instrument's plastic foam will provide the necessary support for safe reshipment.
If the original anti-static packing material is unavailable, wrap the ProDAQ module in anti-static plastic sheeting and use plastic spray foam to surround and protect the instrument. Reship in either the original or a new shipping carton.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 2

Installation and Configuration

To install a ProDAQ Plug-in Module or a ProDAQ Function Card as well as to configure the addressing mode of the ProDAQ 3120 Motherboard, you need to remove the modules top cover.

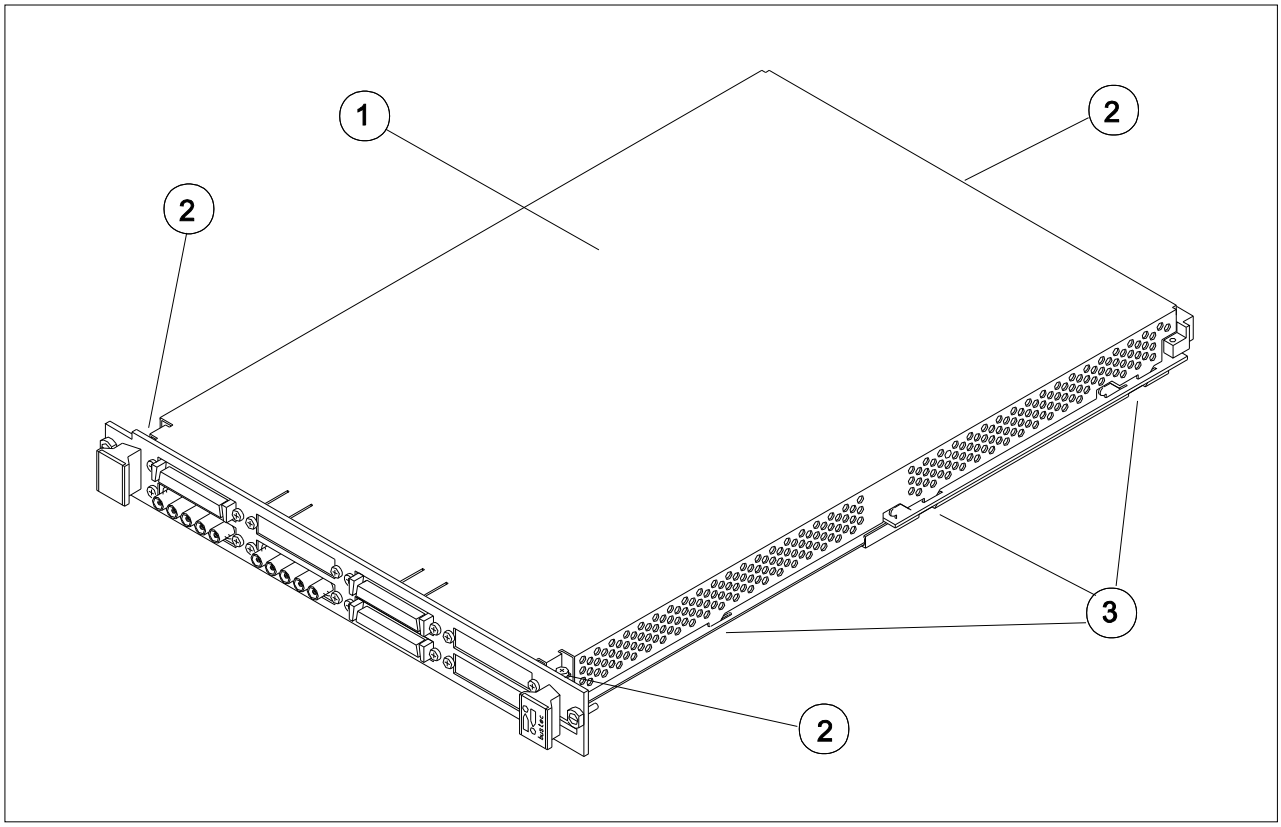

1 - Module Cover 2 - Cover Screws 3 - Cover Hooks

Figure 2 - Removing the ProDAQ Module Cover

To remove the top cover, remove the undercut flathead and two panhead screws that hold the cover in place and remove the cover by sliding it out of its position towards the VXIbus connectors and up. Take special care about the hooks holding it into place. Try not to lift the cover straight up. See figure 2 for the location of the screws.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

To re-install the cover, slide it back into its position by placing the small hooks over their holes and moving the cover down and forward. Secure the top cover using the three undercut flathead screws.


Installing a ProDAQ Function Card

The ProDAQ Function Cards are arranged inside the ProDAQ Module in four stacks of two cards each. The function cards are mounted face down, e.g. the front-panel connectors as well as the motherboard connectors are underneath the PCB.

To install a ProDAQ Function Card in any of the possible positions, use the following procedure (See figure 3 for reference):

- Remove the top cover of the module as described earlier in this chapter (Fig. 3, Pos. 1).
- Remove all screws on the front-panel holding installed function cards or double filler panels in place (Fig. 3, Pos. 2). Screws holding single filler panels don't need to be removed.
- Remove the two panhead screws that mount the front panel to the modules bottom cover (Fig. 3, Pos. 6).
- Please take special care of the module handles and the rings (Fig. 3, Pos. 3 and 4), which are also fixed by those screws. The mounting angle (Fig. 3, Pos. 5) stays fixed to the front panel.
- Remove the front panel by moving it forward carefully so as to avoid bending the installed function cards.
- Choose the stack and position (lower or upper) where you want to mount the function card. If the stack, in which the function card should be installed, is covered by a double filler panel, you have to remove it before installing the function card.
- Remove the three 2.5mm panhead screws and the crinkle washers from the stack's standoffs (Fig. 3, Pos. 9 and 10 for example).
- If you want to install a function card in the upper position of a stack without having a function card in the lower position, you need to mount both spacers (Fig. 3, Pos. 11) on each standoff. If the stack is already populated with a function card in the lower position, mount only the bigger spacer (Fig. 3, Pos. 8) onto each standoff.
- Place a bayonet (supplied) on each standoff. Align the function card over these and slide carefully down. The function card should be held parallel to the modules bottom cover all the time during its way down.
- Fix the function card by mounting the three 2.5mm panhead screws and the crinkle washers onto each standoff. If you install a function card in the lower position of a stack, you need first to mount both spacers (Fig. 3, Pos. 11) onto each standoff.
- Re-mount the modules front-panel. If there is only one function card mounted in a stack, cover the remaining opening in the front panel by a single filler panel.
- Re-mount the modules top cover.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

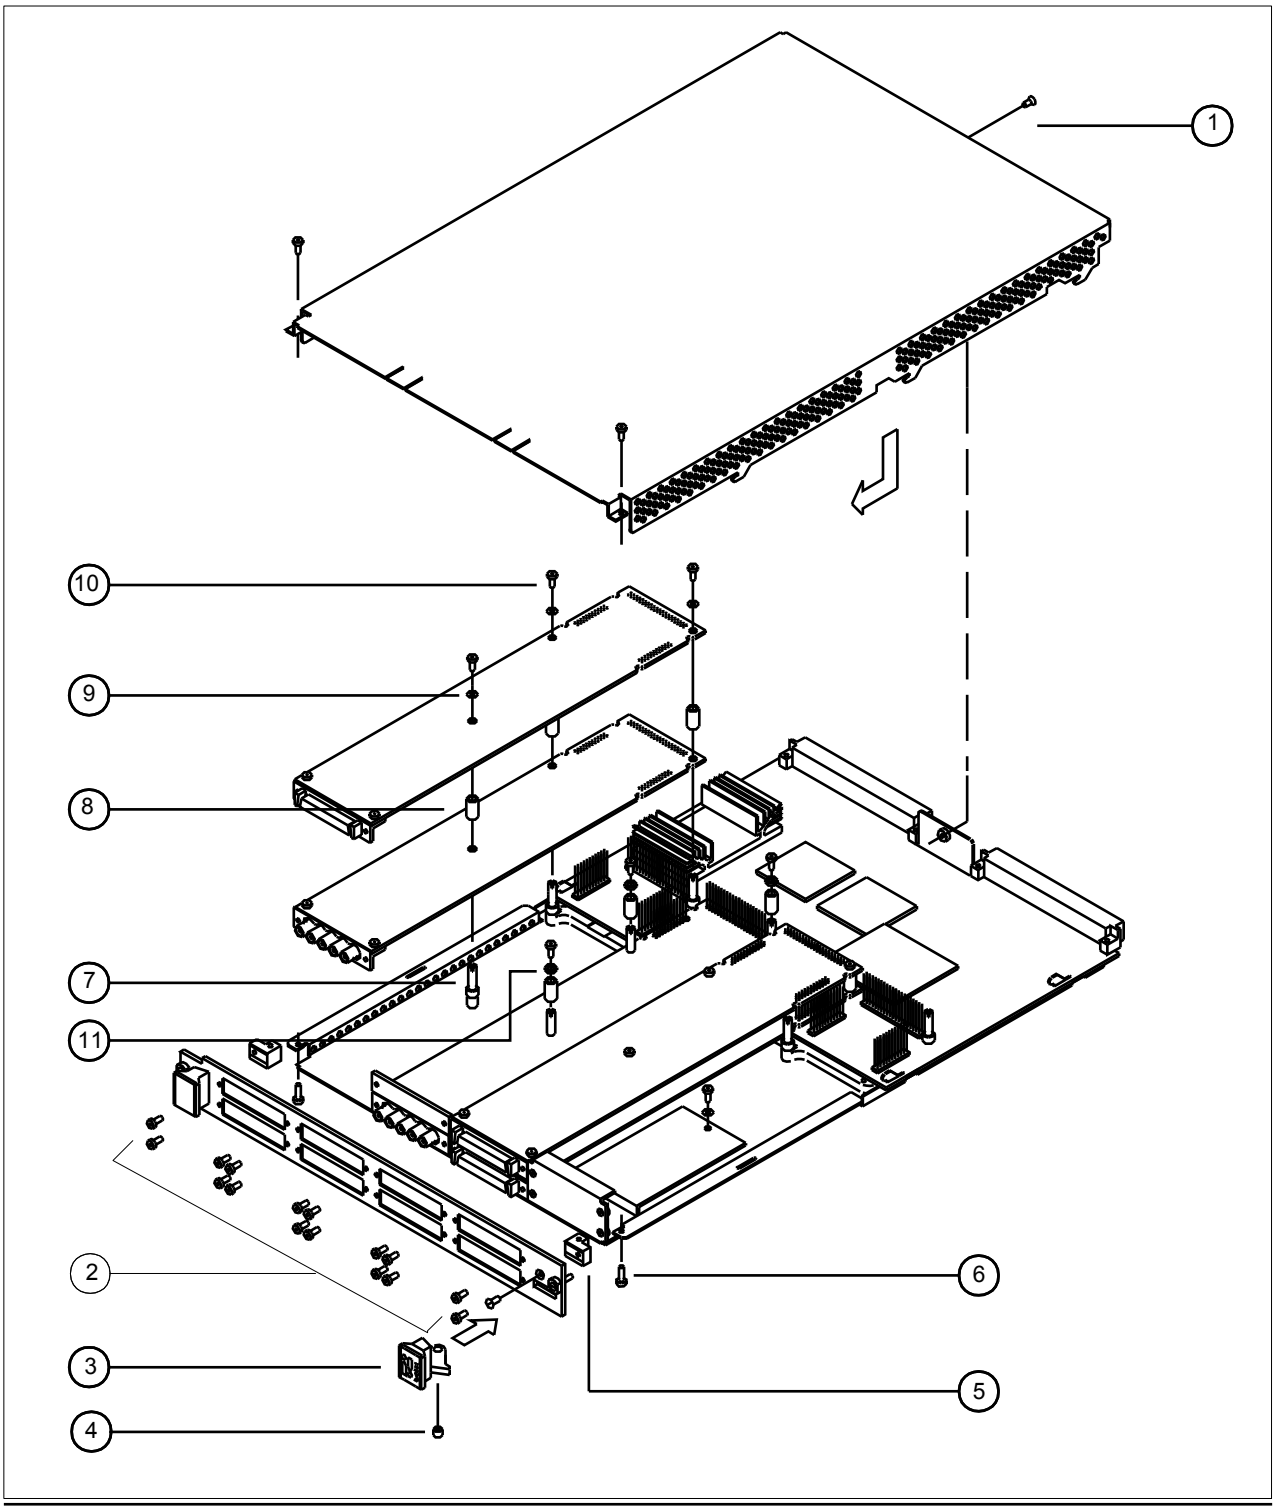

1 - 2.5mm Panhead Screws
2 - 2.5mm Panhead Screws
3 - Module Handle
4 - Ring
5 - Mounting Angle
6 - 2.5mm Panhead Screws
7 - Standoff
8 - Spacer
9 - Crinkle Washer
10 - 2.5mm Panhead Screw
11 - 2mm Spacer

Figure 3 - The module assembly

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Removing a ProDAQ Function Card

Removing a ProDAQ Function Card is exactly the the reverse operation then installing it. After removing the top cover and the front panel as described previously, remove the three roundhead screws that fix the function card(s) on the standoffs.
Take special care when removing the function card(s) not to bend the motherboard connectors.

After removing the function card(s), install the correct combination of spacers on the standoffs. If a stack is populated with only one function card, each of the standoffs needs to be mounted with both spacers to cover the distance between the cards as well as the PCB thickness of the missing card. If a stack is populated with two function cards, only the bigger spacer must be mounted.

Fix any remaining function card again by mounting the three panhead screws on the standoffs, re-mount the front panel and the modules cover.

Installing a ProDAQ Plug-in Module

The ProDAQ 3150 Motherboard Module allows the installation of a Voltage Reference Plug-in Module for calibration purposes, a ProDAQ 3250 DSP Plug-in Module and memory modules.




Figure 4 - Location of Plug-in Modules and Memory

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Installing the ProDAQ Voltage Reference Plug-in Module

To install the ProDAQ Voltage Reference Plug-in Module, the top cover of the module has to be removed as described earlier in this chapter. Locate the position of the plug-in module slot (See Figure 4 for reference).

It features two connectors that need to be aligned and inserted into the motherboard sockets. The VXI*plug*&*play* drivers supplied with the module will automatically detect and configure an installed Voltage Reference Plug-in Module.

Installing the ProDAQ DSP Plug-in Module

To install the ProDAQ DSP Plug-in Module, the top top cover of the module has to be removed as described earlier in this chapter. Locate the position of the plug-in module slot (See Figure 4 for reference).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Configuring the ProDAQ 3150 Motherboard

The ProDAQ 3150 Motherboard is fully software configurable. No strap or switch settings are necessary except for the VXI Logical Address setting as specified by the VXIbus standard.

VXIbus Logical Address

Each device in a VXIbus system is assigned a logical address, either statically by the user or dynamically by the resource manager. This logical address, a number between 0 and 255, defines the base address of the board's VXIbus configuration registers in A16 space. Logical address 0 is reserved for the resource manager, and address 255 is used to tell the resource manager to configure the board's logical address dynamically. In this case a free logical address is assigned to the board by the resource manager.

The logical address of the board can be set by changing the setting of the 8-bit DIP switch on the back of the board (See Figure 5). The "Open" or "Off" position of a switch corresponds to a logic value of 1 and the "Closed" or "On" position to a logic value of 0. Keep in mind that each board in the system must be assigned its own unique logical address (if configured statically) when setting the switch.

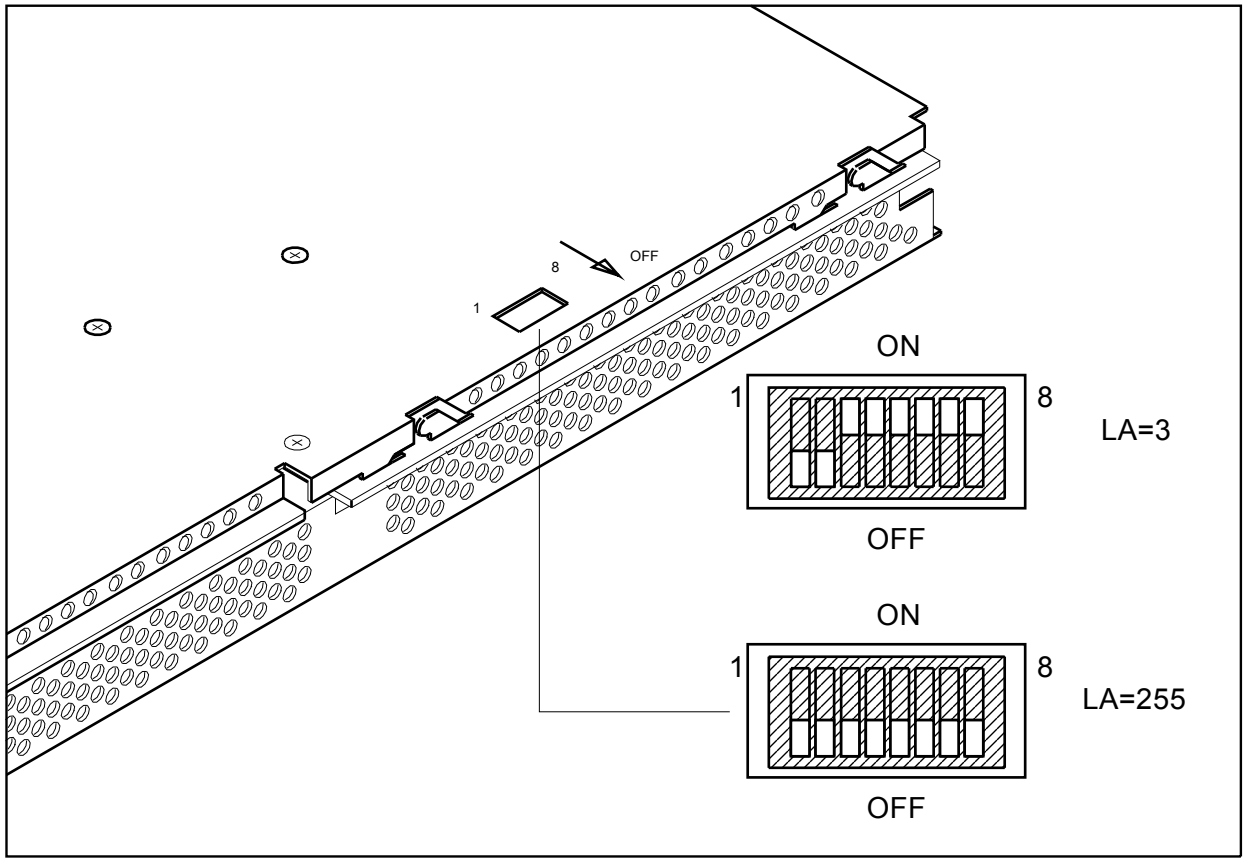


Figure 5 - Logical Address Selection

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 3

Theory of Operation

The ProDAQ 3150 High-Performance Motherboard is an enhanced version of the ProDAQ 3120 Standard Motherboard. As the latter, it accepts up to eight ProDAQ function cards in a single slot, C-Size VXIbus module, but provides in addition an enhanced VXIbus interface, an on-board processor and the option for a DSP Plug-in module. It is function card compatible to the ProDAQ 3120 Standard Motherboard.

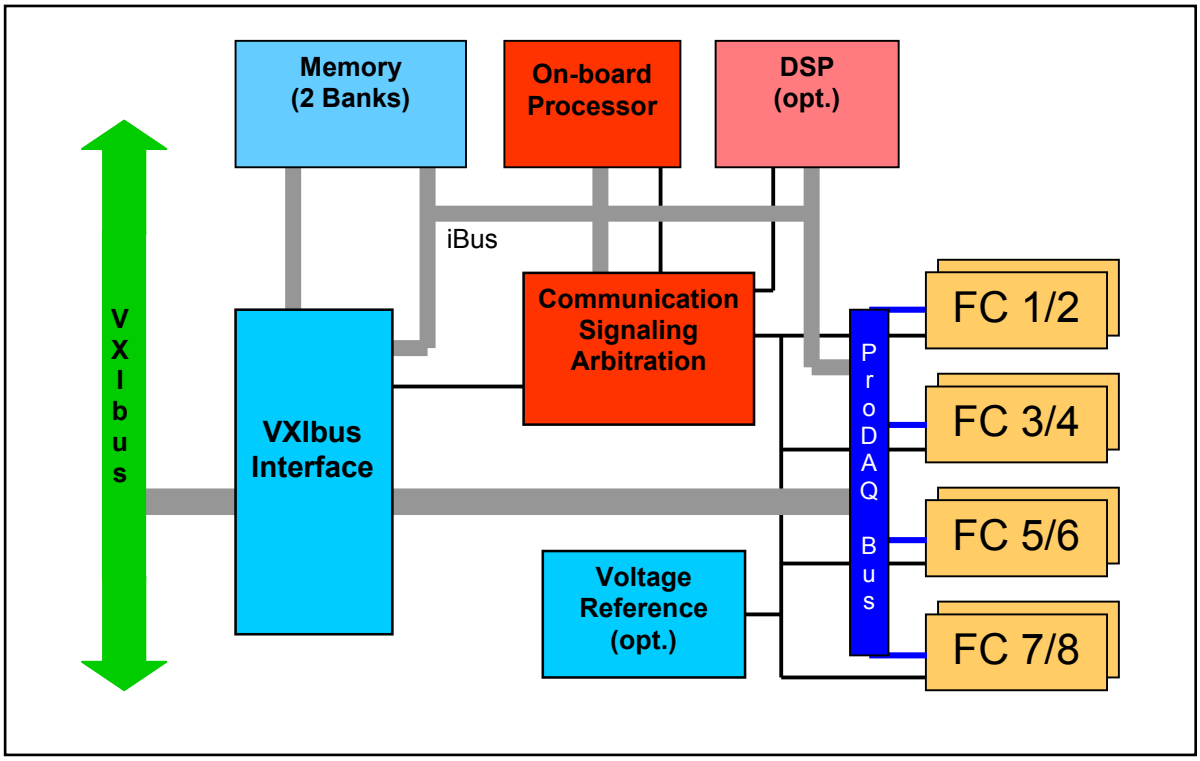


Figure 6 - Simplified Block Diagram

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Overview

The ProDAQ 3150 Motherboard features a multi-bus architecture to optimize the data flow to/from the ProDAQ function cards. The function cards are located on the ProDAQ bus in four stacks of two function cards each. The ProDAQ bus can be accessed either by the VXIbus controller or from any master on the iBus. The iBus interconnects the VXIbus controller, the memory, the on-board processor, the (optional) DSP Plug-in Module, the internal communication registers and the ProDAQ Bus. It allows the on-board processor and the DSP on the DSP Plug-in Module to access the function cards, the memory and the internal communication registers.

VXIbus Interface

The VXIbus Interface Controller is responsible for handling of the VMEbus protocol, the VXIbus specific signals, the VXI configuration registers and the access from the VXIbus to the board and it's resources. These resources are: the function cards, the trigger subsystem and the optional voltage reference, the memory, the communication registers, the on-board processor and the optional DSP plug-in module.

As the ProDAQ 3120 Motherboard, the ProDAQ 3150 Motherboard allows the direct access of the function card address space through the VXIbus interface by mapping it into the board's VXIbus address space.to enable high data throughput, single word and block transfer access is provided. In addition a mask register, located in the VXI configuration register set, can define a set of function cards involved in a multicast write, or a read from multiple function cards. Broadcast write operations are also supported, to initiate a common function in all function cards.

The ProDAQ 3150 Motherboard can be accessed from the VXIbus via byte, word, double word (32 bit) and quad word (64 bit) access in the A32 address space. It occupies either 64 MBytes in the VXIbus A32 address space if used with 16/32MByte memory, ot 256 MByte if used with 64/128 MByte memory. In addition to single word (either 8,16,32 bit) accesses VMEbus block transfer read and write is supported as 16 or 32 bit VME BLT transfers and 64bit MBLT transfer mode.

VXIbus Configuration registers

The VXIbus Configuration registers are located it the board's VXIbus A16 address space. The base address fis dependent on the logical address of the motherboard, which can be selected by a the logical address configuration switch, or if the logical address is set by this switch to 255 by software. The motherbard uses the extended register device model, as defined by the VXI-2 Standard.

Interrupter

The VXIbus Interface Controller can generate a VXIbus interrupt on request of the on-board processor or the processor on the optional DSP plug-in module via the internal communication registers. If a function card want to request an interrupt, the appropriate function card trigger output line has to be routed to the interrupt request input line of the VXIbus interface controller via the trigger switch matrix.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Memory

The memory subsystem is organized in a dual bank fashion to allow maximum throughput to the VXIbus system. either bank can be accessed simultaneously by both the VXIbus controller and a master on the iBus. Which bank is accessible can be selected, so that a double-buffering scheme can be implemented to maximize the data throughput.

On-board processor

The on-board processor controls the ProDAQ 3150 motherboard. It is responsible for initializing the motherboard and function cards after power-up and reset, handles the communication with a host and provides fast data-movement capabilities. It is located on the iBus and is equipt with local SRAM and FLASH memory.

Communication/Arbitration Controller

The communication/arbitration controller provides mailbox registers for the communication between the different masters on the motherboard and implements a resource sharing protocol. Each of the masters on the motherboard (A VXIbus master via the VXIbus interface, the on-board processor and the optional DSP) has two mailbox registers to communicate with the two other masters. Writing to such a mailbox register may cause an interrupt to the corresponding master.

Arbitration is provided for access to the shared resources on the the motherboard. Shared resources are:

- the function card stacks A, B, C and D
- the trigger switch matrix interface
- the voltage reference interface

The on-board processor is by default owner of all shared resources. Other masters will have to request a resource from the on-board processor.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The Trigger and Interrupt System

The trigger and interrupt system on the ProDAQ 3150 Motherboard is build using a programmable trigger switch matrix. The switch matrix allows to connect all trigger sources and sinks available:

Function Card Trigger Outputs

Each function card features one trigger output line, allowing the function card to send a trigger to the switch matrix.

Function Card Trigger Inputs

Each function card features one trigger input line, which can be used to send trigger or clock signals to the function card.

VXIbus TTL/ECL Trigger Lines

The VXIbus TTL/ECL trigger lines can be used to send or receive trigger signals from other VXIbus devices or the controller.

VXIbus Interface

The VXIbus interface features one trigger input line, which can be used to generate an VXIbus interrupt.

The clock signals for the function cards are also routed via the switch matrix to allow them to be shut off in case no function card is fitted to a slot.

The switch matrix can be programmed to connect two or more of those sinks and sources together, so that for example

- a function card output trigger line can be routed to a VXIbus trigger line
- a VXIbus trigger line can be routed to a function card trigger input line
- a function card trigger output line can be routed to a function card trigger input line
- a function card trigger output line can be routed to the VXIbus interface to generate an interrupt.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Port	Function	Direction
0	FC 1 Trigger Input	Out
1	FC 2 Trigger Input	Out
2	FC 3 Trigger Input	Out
3	FC 4 Trigger Input	Out
4	FC 5 Trigger Input	Out
5	FC 6 Trigger Input	Out
6	FC 7 Trigger Input	Out
7	FC 8 Trigger Input	Out
8	FC 1 Trigger Output	In
9	FC 2 Trigger Output	In
10	FC 3 Trigger Output	n
11	FC 4 Trigger Output	In
12	FC 5 Trigger Output	In
13	FC 6 Trigger Output	In
14	FC 7 Trigger Output	In
15	FC 8 Trigger Output	In
16	MB Base Clock (40 MHz)	In
17	FC 8 Clock	Out
18	FC 7 Clock	Out
19	MB Base Clock 2	In
20	VXIbus TTL Trigger Line 0	Out
21	FC 6 Clock	Out
22	FC 5 Clock	Out
23	VXIbus TTL Trigger Line 1	Out

Port	Function	Direction
24	VXIbus TTL Trigger Line 2	Out
25	FC 4 Clock	Out
26	FC 3 Clock	Out
27	VXIbus TTL Trigger Line 3	Out
28	VXIbus TTL Trigger Line 4	Out
29	FC 2 Clock	Out
30	FC 1 Clock	Out
31	VXIbus TTL Trigger Line 5	Out
32	VXIbus TTL Trigger Line 6	Out
33	VXIbus TTL Trigger Line 7	Out
34	VXIbus TTL Trigger Line 0	In
35	VXIbus TTL Trigger Line 1	In
36	VXIbus TTL Trigger Line 2	In
37	VXIbus TTL Trigger Line 3	In
38	VXIbus TTL Trigger Line 4	In
39	VXIbus TTL Trigger Line 5	In
40	VXIbus TTL Trigger Line 6	In
41	VXIbus TTL Trigger Line 7	In
42	SYSCLK (16 MHz)	In
43	VXIbus ECL Trigger Line 0	In
44	CLK10 (10 MHz)	In
45	VXIbus ECL Trigger Line 1	In
46	CLK/2 (20 MHz)	In
47	VXIbus Interface LLIRQ*	Out

Table 1 - The In/Output Ports of the Switch Matrix

In general 1:m as well as n:1 connections are possible, with some limitations on the type of lines involved in the connection and the number of lines connected. Table 1 shows a complete list of signals connected to the switch matrix. Because of the drivers involved to drive the trigger signals on the VXIbus, the VXIbus trigger lines appear each as two signals, one input and one output, in the list.

The trigger and interrupt system is programmed via five registers, two in the VXIbus configuration register set (IRQH and JTAG) and three registers located in the boards A24/A32 space.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 4

Programming Information

VXIbus Interface and Registers

The VXIbus Interface conforms to the VXIbus specification issue 1.4. In addition to a static VXI device configuration, it supports dynamic configuration. It is a register-based device, which supports A16/A32 addressing, and requires 16 Mbytes from the A32 address space.

To access the function cards it is necessary to set the modules A32 base address in the offset register. The module responds to the following AM codes:

AM = 0x29 or 0x2d short IO (A16) for VXIconfig.
AM = 0x0e or 0x0d or 0x0a or 0x09 normal A32 access
AM = 0x0b or 0x0f for A32 block transfers
AM = 0x08 or 0x0c for A32/D64 MBLT transfers

Access to the module is with byte, word, double word and quad word transfers. Unaligned data transfer, i.e. access to byte 1,2 or 1,2,3 or 0,1,2 is not supported. The module will respond with a bus error to such a transfer request.

A data transfer to a valid local address is timed out after 25.6 µsec with a BERR signal if the FBus does not respond. This feature is programmable (direct BERR or wait until internal timeout). In cases where the internal resources are explicitly locked a BERR is generated immediately.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

VXIbus Configuration Registers

All addresses are shown as an offset to the base of the motherboards logical address space.

Address	Mnemonic	OP	
0x00	Config	RO	VXI device type and manufacturer ID = 5E70
0x00	LogAdr	WO	VXI device logical address
0x02	DevID	RO	device ID and addr. space requirement = 5C4E (32MB) or 3C4E (128MB)
0x04	Status	ROC	general and device specific status information
0x04	Control	WOC	general and specific control
0x06	Offset	RW	A32 address space offset
0x08	Attribute	RO	Attribute Register = 0002
0x0A	SerNumHigh	RWO	Fetched from EEPROM by software
0x0C	SerNumLow	RWO	Fetched from EEPROM by software
0x0E	Version	RO	Firmware/Hardware version
0x10		RO	reserved
0x12		RO	reserved
0x14		RO	reserved
0x16		RO	reserved
0x18		RO	reserved
0x1A	InterStatus	RO	Interrupt Status
0x1C	InterControl	RW	Interrupt Control
0x1E	SubClass	RO	Extended Subtype= FFFE
0x20	FC_AVAIL_RESET	RW	reset-control of function cards and status of AVAIL bits
0x22	MB_LIST	RW	Mailbox: VXItoLIST and LISTtoVXI (16 bit)
0x24	MB_DSP	RW	Mailbox: VXItoDSP and DSPtoVXI (16 bit)
0x26	MB_STATUS	R	Mailbox STATUS register
0x28	JTAG	RW	JTAG interface for switch matrix loading
0x2a	FCMOD	RW	FC-CLK disable
0x2c	FCMASK	RW	pattern mask for selecting concurrent write
0x2e	VXI_TRIG_OUT	RW	VXI Trigger SET and status register (TM2..0, FC_TRIG_IN0..7)
0x30	EEPROM_CTRL	RW	Read/Write control of three serial EEPROMS (mother board, LIST, DSP)
0x32	LIST_DSP_CTRL	RW	reset and boot control of LIST-processor and DSP
0x34	FCADR	RO	last address send to the function cards
0x36	UTIL	RW	serial EEPROM select bits and SYSFAIL Test bit
0x38	FC_STACK_LOCK_SET	RW	Software FC-Card Stack arbitration register (Set Request)
0x3A	FC_STACK_LOCK_CLR	W	Software FC-Card Stack arbitration register (Release)
0x3C	SOURCE_ARB_SET	RW	Software board register arbitration register
0x3E	SOURCE_ARB_CLR	W	Software board register arbitration register

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

VXIbus Configuration Register Details

The following describes the device specific configuration register bits in detail.

Config (0x0 read)

This register provides information about the device class, the address space and the manufacturer ID of the module.

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO
Initial	0	1	0	1	1	1	1	1	1	1	1	1	1	0	1	1
Name	Device Class		Address Space		Manufacturer ID											

Device Class: 01 - Extended
Address Space: 01 - A16 / A32
Manufacturer ID: 0xE70 - Bustec Production Ltd.

LogAdr (0x0, write)

If the module is configured for dynamical logical address assignment, this register can be used to set its logical address.

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation									WO	WO	WO	WO	WO	WO	WO	WO
Initial									LA-8	LA-7	LA-6	LA-5	LA-4	LA-3	LA-2	LA-1
Name									LogAdr							

If all switches of the logical address switch are off (correspond to static address 255), the device acts as a dynamically configurable VXIbus device, and a write to this register changes the logical address. If any other address then 255 is choosen by setting the logical address switch, the device acts as a static configured VXIbus device and a write to this register has no effect.

After a write operation, the new logical address becomes available when the access cycle has finished (approx. 150ns after end of the selection).

DeviceID (0x2, read)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO
Initial	x	x	x	x	1	1	0	0	0	1	0	0	1	1	1	0
Name	Required Memory				Model ID											

Required Memory: 0101 - 64MB (If 16MB DRAM Modules are used)
0011 - 256MB (If 64MB DRAM Modules are used)
Model ID: 0xC4E - ProDAQ 3150

The memory size will be automatically detected by the hardware during initialization. If one of the memory banks is equipped with a 64MB module, the memory size will be automatically 256MB.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Status (0x4, read)

Indicates the module status:

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RW	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RW	RW
Initial	0	0	0	0	0	0	0	0	0	0	0	0	1	1	0	0
Name	A32 enable	VXI Modid_L	reserved	reserved	InterPend	reserved	PDB7 DRAM Bank 2	PDB6 DRAM Bank 2	PDB7 DRAM Bank 1	PDB6 DRAM Bank 1	VOFF_SET	RLOG_SET	Ready	Passed	SysFail	Reset

Reset	indicates the reset state of the module
Sysfail	indicates the status of the VXIbus SysFail line
Passed	Internal Selftest has passed (FPGAs are ready)
Ready	after the state machines are initialized
RLOG_SET	read as 1 if the logical address is set
VOFF_SET	read as 1 if the A32 offset address is set
PDB6 DRAM Bank 1	memory ID bit 6 Bank1 (upper 72-pin SO-DIMM)
PDB7 DRAM Bank 1	memory ID bit 7 Bank1 (upper 72-pin SO-DIMM)
PDB6 DRAM Bank 2	memory ID bit 6 Bank2 (lower 72-pin SO-DIMM)
PDB7 DRAM Bank 2	memory ID bit 7 Bank2 (lower 72-pin SO-DIMM)

PDB7	PDB6	assign
0	0	reserved
0	1	16 MByte SO-Dimm
1	0	64 MByte SO-Dimm
1	1	not inserted

InterPend	VXI Interrupt Pending
MODID_L	0 indicates the modules is selected with the MODID line active
A32 Enable	read as 1 if access via the A32 address space is allowed

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Control (0x4, read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RW	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RW	RW
Initial	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Name	A32 Enable	reserved	reserved	reserved	reserved	reserved	reserved	reserved	reserved	reserved	reserved	reserved	reserved	reserved	VXI SYSFAIL Inhibit	RESET

RESET — writing a 1 resets the device (clears configuration registers, aborts all operations)

SYSFAIL Inhibit — disables the device from driving the SYSFAIL_L line. By default Resource Managers set this bit to 0.

A32 Enable — write of 1 will enable the A32 addressing mode, a 0 will disable the A32 addressing.

Note: The offset register has to be set up before A32 access is enabled. Any attempt to enable the A32 addressing mode without prior offset register configuration will fail.

Offset (0x6, read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RW	RW	RW	RW	RW	RW	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO
Initial	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Compare	A31	A30	A29	A28	A27	A26										
Name	Offset						0									

Defines the offset of the boards address space in the VXIbus address space. Depending on the configuration the board uses 64 or 256 MByte in the VXIbus A32 address space.

Attribute (0x8, read)

Defines the capability of the module to send and to receive Interrupts.

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation														RO	RO	RO
Initial														0	1	0
Name	Not implemented													IR*	IH*	IS*

IS Interrupt Status Register (is implemented)
IH Interrupt Handler Controller Capability (not implemented)
IR Interrupt Controller (is implemented), allows the module to send VXIbus interrupts.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SerialLow (0xB, read/write) and SerialHigh (0xA, read/write)

Holds the Serial Number of the module. The contents is copied by software from the serial EEPROM into the registers.

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RWO	RWO	RWO	RWO	RWO	RWO	RWO	RWO	RWO	RWO	RWO	RWO	RWO	RWO	RWO	RWO
Initial	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Name	Serial Number															

Version (0xE, read only)

This defines the hardware and firmware revision of the module

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO
Initial	0	0	0	1	0	0	0	1	0	0	0	1	0	0	0	1
Name	Firmware Main Version				Firmware Revision				Hardware Main Version				Hardware Revision			

InterStatus (0x1A, read)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO
Initial	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Name					SW	MBX DSP	MBX LP	TM	LogAddress							
	Cause/ Status															

TM	Interrupt is caused by a request from the trigger switch matrix.
MBX LP	Interupt Request from the LP -> VXI mailbox register.
MBX DSP	Interrupt Request from the DSP -> VXI mailbox register.
SW	Interrupt caused by SW (for testing only)

To figure out which is the real cause of the interrupt, the software has to read the TriggerStatusR register if the FC bit is set, or the mailbox registers if any of the other bits are set.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

InterControl (0x1C, read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RO	RO	RO	RO	RO	RW	RW	RW	RW	RO	RW	RW	RW	RO	RO	RO
Initial	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Name	Not used				SW	MBX DSP	MBX LP	TM	IR ena*	IH ena*	Interrupt IRQ Line*			Handler IRQ Line*		
	Interrupt Mask															

Handler IRQ Line not used, permanently 7

Interrupt IRQ Line* selects a interrupt line on the VXI/VMEbus

Bit 5	Bit 4	Bit 3	IRQ Line
0	0	0	IRQ7
0	0	1	IRQ6
0	1	0	IRQ5
0	1	1	IRQ4
1	0	0	IRQ3
1	0	1	IRQ2
1	1	0	IRQ1
1	1	1	disabled

IH ena* Interrupt Handler enable, permanently 1 (disable)

IR ena* Interrupter enable, 1-disables, 0 enabled.

Interrupt Mask enable mask, enabled if bit is set to 0

TM enables interrupt requests from the trigger switch matrix.

MBX LP enables interrupt requests from the LP -> VXI mailbox register.

MBX DSP enables interrupt requests from the DSP -> VXI mailbox register.

SW causes an interrupt by writing a 0 (for testing only).

Note: a Hard reset (power up, SYSRESET) and a soft reset (reset via the control register) resets the content of the programmable bits into the initial state.

Subclass (0x1E, read)

Defines the VXIbus definition of the sub classes. This module is extended register.

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO
Initial	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

FC_AVAIL_RESET (0x20, read/write)

Reset function cards, the List Processor, the memories and the optional DSP

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Initial									0	0	0	0	0	0	0	0
read function	FC8 AVAIL	FC7 AVAIL	FC6 AVAIL	FC5 AVAIL	FC4 AVAIL	FC3 AVAIL	FC2 AVAIL	FC1 AVAIL	ENABLE/RESET FC 8	ENABLE/RESET FC 7	ENABLE/RESET FC 6	ENABLE/RESET FC 5	ENABLE/RESET FC 4	ENABLE/RESET FC 3	ENABLE/RESET FC 2	ENABLE/RESET FC 1
write function	res	res	res	res	res	res	res	res	ENABLE/RESET FC 8	ENABLE/RESET FC 7	ENABLE/RESET FC 6	ENABLE/RESET FC 5	ENABLE/RESET FC 4	ENABLE/RESET FC 3	ENABLE/RESET FC 2	ENABLE/RESET FC 1

FC1 ... FC8 AVAIL — signals availability of the corresponding front end card

read:
ENABLE FC1 ... FC8 — reflects the ENABLE/RESET status of the corresponding front end card
write:
ENABLE FC1 ... FC8 — drive directly the reset lines to the function card located at the specific position. To enable the function cards a 1 has to be written.

MB_LP (0x22, read/write)

The MAIILBOX register set (MB_LP) consists of two 16-bit registers:

MB_LP_TO_VXI (read) and
MB_VXI_TO_LP (write)

A write to this mailbox register sets a bit in the MB_STATUS register and causes (if enabled) an interrupt to the destination, which is cleared after the destination processor has read the message register.

MB_DSP (0x24, read/write)

A write to this mailbox register sets a bit in the MB_STATUS register and causes (if enabled) an interrupt to the destination, which is cleared after the destination processor has read the message register.

The MAIILBOX register set (MB_LIST) consists of two 16-bit registers:

MB_DSP_TO_VXI (read) and
MB_VXI_TO_DSP (write)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

MB_STATUS (0x26, read)

(bit assignments like list processor register MB_STATUS)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Function	0	0	0	0	0	0	sLPtoDSP	sVXItoDSP	0	0	sDSPtoLP	sVXItoLP	0	0	sDSPtoVXI	sLPtoVXI

sLPtoVXI signals message in LP to VXI mailbox register
sDSPtoVXI signals message in DSP to VXI mailbox register

sVXItoLP signals message in VXI to LP mailbox register
sDSPtoLP signals message in DSP to VXI mailbox register

sVXItoDSP signals message in VXI to DSP mailbox register
sLPtoDSP signals message in LP to DSP mailbox register

IQ-JTAG (0x28, read/write)

A simple JTAG interface is used to load and modify the switch matrix.

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Initial	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Name						RCena	TSMena	VXITOena	SW1	SW0	JTLOC	TDO	TDI	TMS*	TCLK	TRST*

TRST* reset of the Trigger Switch Matrix JTAG interface. For a proper reset write a 1 and after >100µs a 0 into that register bit.
TCLK JTAG clock, Note: a clock pulse is generated automatically (75 ns) if a 1 is written into that register
TMS to change the state machine (output is inverted)
TDI (inverted data input for JTAG device)
TDO (data output)
JTLOC enable JTAG interface
SW0 - used by SW
SW1 - used by SW
VXITOena - Enable Trigger output to VXI bus. A one has to be written in to enable the output.
TSMena - Enables the output from the Trigger Switch Matrix. A one has to be written in to enable the output. Signal gets inverted to provide the right polarity. At startup the output is disabled.
RCena - Rapid Connect enable (low active). A one has to be written in to enable the output.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

FCMODE (0x2A, read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RO	RO	RO	RO	RO	RO	RO	RO	RW	RW	RW	RW	RW	RW	RW	RW
Initial	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Name									FC8_CLK Disable	FC7_CLK Disable	FC6_CLK Disable	FC5_CLK Disable	FC4_CLK Disable	FC3_CLK Disable	FC2_CLK Disable	FC1_CLK Disable

FC_CLK disable disables the FC-card clock

FCMASK (0x2C, read/write)

Used for broadcast write operations and concurrent Read/write operations.

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Initial	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Name	FC 8	FC 7	FC 6	FC 5	FC 4	FC 3	FC 2	FC 1	FC 8	FC 7	FC 6	FC 5	FC 4	FC 3	FC 2	FC 1
	Read mask								Write mask							

Bit 15 → 8 used to indicate selected channels for read,
Bit 7 → 0 selected channels for write operation

VXI_TRIG_OUT (0x2E, read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	R	R	R	R	R	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Initial	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Name						TMO 2	TMO 1	TMO 0	FCTI 7	FCTI 6	FCTI 5	FCTI 4	FCTI 3	FCTI 2	FCTI 1	FCTI 0

Read: FCTI 0 … 7 Status of the Function card trigger input
(actual level; “0” : active; “1” : not active)

TMO 0 … 2 Status of the trigger line from the communication registers to the trigger matrix
(actual level; “0” : active; “1” : not active)

Write: FCTI 0 … 7 “1” : set the Function card trigger input (set to low)
“0”: clear the Function card trigger input (tristate)

TMO 0 … 2 “1” : set the trigger line from the VXI communication register to the trigger matrix (set to low)
“0” : clear the trigger line from the VXI communication register to the trigger matrix (tristate)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EEPROM_CTRL (0x30, read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Write Function	cmd RESET	cmd WRITE	cmd READ	res	res	res	res	res	wdata 7	wdata 6	wdata 5	wdata 4	wdata 3	wdata 2	wdata 1	wdata 0
Read Function	BUSY	Present	0	0	0	0	res	res	rdata 7	rdata 6	rdata 5	rdata 4	rdata 3	rdata 2	rdata 1	rdata 0

LIST_DSP_CTRL (0x32, read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Write Function	res	res	res	res	res	DSP RESET	DSP Boot M1	DSP Boot M0	res	res	res	res	res	LIST RESET	LIST Boot M1	LIST Boot M0
Read Function	0	0	0	DSP AVAIL	SW701_2	DSP RESET[2]	DSP Boot M1	DSP Boot M0	0	0	0	LIST AVAIL	SW701_1	LIST RESET [1]	LIST Boot M1	LIST Boot M0

[1] With switch SW701_1 open (high) RESET condition after power up, with switch closed RUN condition after power up
[2] With switch SW701_2 open (high) RESET condition after power up, with switch closed RUN condition after power up

FCADR (0x34, read)

Production use only.

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO
Initial	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Name	FCADR[15:0]															

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Util (0x36, read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RW	RW	RW	RW
Initial	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Name	res	res	res	res	res	res	res	res	res	res	res	VME_BLOCK_PIPE	VME_OREDER	SYSFAIL OUT (Test)	EEPRM SEL1	EEPRM SEL0

EEPRM SELn Selects which EEPROM is accessible via the EEPRM_CTRL register.

EEPRM SEL1	EEPRM SEL1	access to/from
0	0	Motherboard EEPROM
0	1	Motherboard EEPROM
1	0	LIST EEPROM
1	1	DSP EEPROM

SYSFAIL OUT Test flag to generate a VME SYSFAIL signal (if enabled)

VME_ORDER controls the 16-bit word order during a D32/BLT32 access to or from the FC-card.

if 0 : the lower 16-bit will be transfered first (like the old LMB)

example:
write with D32 = 0x11112222 to one FC-card
first 16-bit word to the FC-card : 0x2222
second 16-bit word to the FC-card : 0x1111

if 1 : the upper 16-bit will be transfered first (like VME order)
example:
write with D32 = 0x11112222 to one FC-card
first 16-bit word to the FC-card : 0x1111
second 16-bit word to the FC-card : 0x2222

VME_BLOCK_PIPE set DRAM read access in pipeline mode during VME blocktransfer

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

FC_STACK_LOCK_SET (0x38, read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
read function	0	0	0	0	**DSP** FC_**D** Stack MASTER bit	**DSP** FC_**C** Stack MATER bit	**DSP** FC_**B** Stack MASTER bit	**DSP** FC_**A** Stack MASTER bit	**LIST** FC_**D** Stack MASTER bit	**LIST** FC_**C** Stack MASTER bit	**LIST** FC_**B** Stack MASTER bit	**LIST** FC_**A** Stack MASTER bit	**VXI** FC_**D** Stack MASTER bit	**VXI** FC_**C** Stack MASTRER bit	**VXI** FC_**B** Stack MASTER bit	**VXI** FC_**A** Stack MASTER bit
write "1" function	res	res	res	res	res	res	res	res	res	res	res	res	**VXI** FC_**D** Stack REQUEST bit	**VXI** FC_**C** Stack REQUEST bit	**VXI** FC_**B** Stack REQUEST bit	**VXI** FC_**A** Stack REQUEST bit

Power up or VXI reset condition: 0x0000

Stack FC_D: FC 8 and FC 7
Stack FC_C: FC 6 and FC 5
Stack FC_B: FC 4 and FC 3
Stack FC_A: FC 2 and FC 1

FC_STACK_LOCK_CLR (0x3A, write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
write "1" function	res	res	res	res	res	res	res	res	res	res	res	res	**VXI** FC_**D** Stack clear MASTER bit	**VXI** FC_**C** Stack clear MASTER bit	**VXI** FC_**B** Stack clear MASTER bit	**VXI** FC_**A** Stack clear MASTER bit

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SOURCE_ARB_SET (0x3C, read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
read function	0	0	0	VREF AAVAIL	DSP JTAG MASTER bit	DSP RAPID MATER bit	DSP FC_RESET MASTER bit	DSP VREF MASTER bit	LIST JTAG MASTER bit	LIST RAPID MASTER bit	LIST FC_RESET MASTER bit	LIST VREF MASTER bit	VXI JTAG MASTER bit	VXI RAPID MASTRER bit	VXI FC_RESET MASTER bit	VXI VREF MASTER bit
write function	res	res	res	res	res	res	res	res	res	res	res	res	VXI JTAG REQUEST bit	VXI RAPID REQUEST bit	VXI FC_RESET REQUEST bit	VXI VREF REQUEST bit

Power up or VXI reset condition: 0x0000

SOURCE_ARB_CLR (0x3E, write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
write function	res	res	res	res	res	res	res	res	res	res	res	res	VXI JTAG clear MASTER bit	VXI RAPID clear MASTER bit	VXI FC_RESET clear MATER bit	VXI VREF clear MASTER bit

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

VXIbus Address Map

The following map describes the address space of the ProDAQ 3150 High-Performance Motherboard as seen from the VXIbus. All addresses are shown relativ to the boards base address in the VXIbus A32 address space. The base address is set via the offset register in the VXIbus Configuration Registers.

A32 Offset	Description
0x00000000 – 0x0003FFFF	Function Card 1
0x00040000 – 0x0007FFFF	Function Card 2
0x00080000 – 0x000BFFFF	Function Card 3
0x000C0000 – 0x000FFFFF	Function Card 4
0x00100000 – 0x0013FFFF	Function Card 5
0x00140000 – 0x0017FFFF	Function Card 6
0x00180000 – 0x001BFFFF	Function Card 7
0x001C0000 – 0x001FFFFF	Function Card 8
0x00200000 – 0x002FFFFF	<not used>
0x00300000 – 0x0031FFFF	Trigger Interface 0x00300000 - Trigger status register (32 bit word) with update 0x00300004 - Trigger rapid connect interface (32 bit word) 0x00300008 - Trigger status register without update (e.g. IRQ response)
0x00320000 – 0x0032FFFF	Voltage Reference Interface 0x00320000 - Voltage Reference (R/W MB buffer) 0x00320004 - Voltage Reference ID (read only) 0x00320008 - Voltage Reference Module Access
0x00330000 – 0x003BFFFF	<not used>
0x003C0000 – 0x003FFFFF	broadcast to all FCs
0x00400000 – 0x007FFFFF	List Processor Memory (SRAM, Flash) restricted access (4MB)
0x00800000 – 0x00FFFFFF	Optional DSP Memory (SRAM, Flash) restricted access (8MB)
0x02000000 – 0x02FFFFFF	Memory Bank 1 (16MB version)
0x03000000 – 0x03FFFFFF	Memory Bank 2 (16MB version)
0x08000000 – 0x0BFFFFFF	Memory Bank 1 (64MB version)
0x0C000000 – 0x0CFFFFFF	Memory Bank 2 (64MB version)

All addresses not explicitly specified are reserved for future use.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Function Card Access

The function cards fitted into the ProDAQ 3150 High-Performance Motherboard can be accessed through their address spaces in the boards address space. The function card address space (registers, memory, etc.) is organized in 16-bit words. Using different mapping for the VXIbus access types, the function cards can be accessed seperately, combined or all at once.

Single Function Card Access

When accessing a single function card, the VXIbus data cycles are mapped as:

D16 Single read	→	FC Single Word Transfer Read
D16 Single write	→	FC Single Word Transfer Write
D16 BLT read	→	FC Block Transfer Read
D16 BLT write	→	FC Block Transfer Write
D32 Single read	→	FC Block Transfer Read (two 16-bit words)
D32 Single write	→	FC Block Transfer Write (two 16-bit words)
D32 BLT read	→	FC Block Transfer Read (n x two 16-bit words)
D32 BLT write	→	FC Block Transfer Write (n x two 16-bit words)

Note: The 32-bit to two 16-bit word transfer order depends on the VME_ORDER bit in the ***Util*** register.

Multiple Function Card Access

By selecting functions cards in the ***FCMASK*** register, multiple function cards can be accessed simultaneously. In this mode, VXIbus D32 data cycles are mapped as

D32 Single read	→	2 FC Single Word Transfer Read
D32 BLT read	→	2 FC Block Transfer Read
D32 Single write	→	2 FC Single Word Transfer Write
D32 BLT write	→	2 FC Block Transfer Write

In this mode, the lower 16-bit part of a D32 cycle will access one function card on stack A or C (function cards 1, 2, 5, 6) while the upper 16-bit part will access one function card on stack B or D (function cards 3, 4, 7, 8). Write cycles may access all combination of cards simultaneously, while read cycles may only access exactly two function cards (FC1 or FC2 or FC5 or FC6 AND FC3 or FC4 or FC7 or FC8).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Broadcast Write access

A broadcast write will transfer the same data to all function cards simultaneously. This can be used for example to start/stop all function cards at the same time. A broadcast write can be done by writing to the defined address range in the motherboard address space (see VXIbus Address Map). VXIbus cylces are mapped as:

D16 Single write	→	FC-card Single Word Transfer Write
D16 BLT write	→	FC-card Block Transfer Write
D32 Single write	→	FC-card Block Transfer Write (two 16-bit words) *
D32 BLT write	→	FC-card Block Transfer Write (n x two 16-bit words) *

Function cards accessed can be selected using the FCMASK register (bit 7 to bit 0). The 32-bit to two 16-bit word transfer order depends on the VME_ORDER bit (Util register).

Internal Resources

Trigger status register with update (32 bit word)

Holds the actual level of the Trigger lines.

Trigger status register without update (32 bit word read only)

An interrupt request from the trigger matrix updates the register to allow the application program to determine the interrupting source.

The register has the following bit assignment:

Bit	31	30	29	28	27	26	25	24
Name	“1”	“1”	TMO 2	TMO 1	TMO 0	“1”	ECLtrig 1	ECLtrig 0

Bit	23	22	21	20	19	18	17	16
Name	TTLtrig 7	TTLtrig 6	TTLtrig 5	TTLtrig 4	TTLtrig 3	TTLtrig 2	TTLtrig 1	TTLtrig 0

Bit	15	14	13	12	11	10	9	8
Name	FCtrgOut 7	FCtrgOut 6	FCtrgOut 5	FCtrgOut 4	FCtrgOut 3	FCtrgOut 2	FCtrgOut 1	FCtrgOut 0

Bit	7	6	5	4	3	2	1	0
Name	FCtrgIn 7	FCtrgIn 6	FCtrgIn 5	FCtrgIn 4	FCtrgIn 3	FCtrgIn 2	FCtrgIn 1	FCtrgIn 0

TMO 0 … 2 Status of the trigger line from the communication registers to the trigger matrix (actual level; “0” : active; “1” : not active)

ECLtrig 0 ...1 Status of the VXIbus ECL trigger lines

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TTLtrig 0...7	Status of the VXIbus TTL trigger lines
FCtrgOut 0...7	Status of the function card output trigger lines
FCtrgIn 0...7	Status of the function card input trigger lines

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 6

The ProDAQ 3220 DSP Plug-in Module

The ProDAQ DSP Plug-in Module adds a fully user-programmable DSP to the ProDAQ 3150 motherboard.

Overview

The ProDAQ 3220 DSP Plug-in module consists of a SHARC 21060 DSP with 512 KWord local SRAM and 4 MB local FLASH. It has two interfaces, one for the internal bus on the motherboard (iBus) amd one for the VXIbus local bus. The interface for the iBus also implements a set of communication registers.

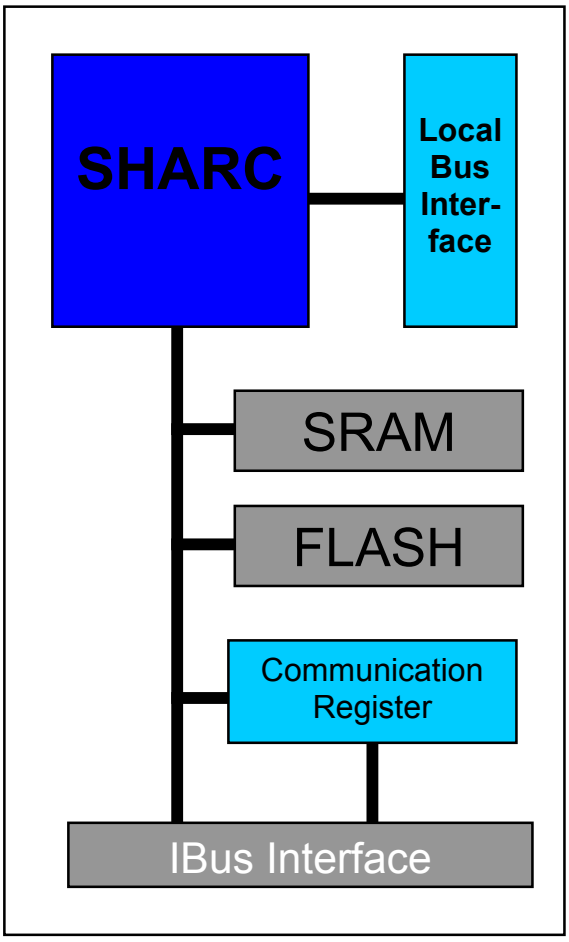


Figure 7 - DSP Plug-in Module Block Diagram

The communication registers provide mailbox registers for the communication with the on-board processor or a host and also registers for motherboard status and motherboard resources.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Programming Information

Address Map

Internal Address Start	Internal Address End	Data Width	Description
0x0040 0000	0x0043 FFFF	48 bit	SRAM (256K x 48)
0x0080 0000	0x0087 FFFF	8 bit	512K x 8 Flash Memory (SHARC: Data [23:16])
0x00C0 0000	0x00FF FFFF	16 bit	Communication registers (SHARC: Data[31:16] are used)
0x0100 0000	0x013F FFFF	16 bit	Local interface space (SHARC: Data[31:16] are used)
0x0140 0000	0xFFFF FFFF	32 bit	Internal Bus (SHARC: Data[47:16])

All addresses not explicitly specified are reserved for future use.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Communication Registers (base address: 0x00C0 0000)

Address	Mnemonic	DSP RW	Function
0x00C0 0000	MB_Status	R	mailbox status register
0x00C0 0002	MB_VXI	RW	mailbox to and from VXI
0x00C0 0004	MB_DSP / MB_LIST	RW	mailbox to and from DSP / to and from LIST
0x00C0 0006	FC_AVAIL_RESET	RW*	reset control of FC-cards and status of FC_AVAIL bits
0x00C0 0008	SOURCE_ARB_SET	RW	software board arbitration register
0x00C0 000A	SOURCE_ARB_CLR	W	software board arbitration register
0x00C0 000C	IQ-JTAG	RW*	JTAG interface for switch matrix loading
0x00C0 000E	TRG_RAPID	W	trigger rapid write interface
0x00C0 000F	reserved		reserved
0x00C0 0010	VREF_BUF	RW*	VREF buffer
0x00C0 0012	VREF_IDENT	R	VREF identifier
0x00C0 0014	VREF_ACCESS	RW*	VREF access
0x00C0 0016	reserved		reserved
0x00C0 0018	TRIG_IN_EN_IRQ		Trigger (LIST/DSP) IRQ2 Enable register
0x00C0 001A	TRIG_OUT		Trigger SET and status register (TM2..0,FC_TRIG_IN0..7)
0x00C0 001B	reserved		reserved
0x00C0 001C	reserved		reserved
0x00C0 001D	reserved		reserved
0x00C0 001E	reserved		reserved
0x00C0 001F	reserved		reserved
0x00C0 0020	MODE	R	MODE register : DSP reset/run
0x00C0 0021	FC_MASK_BROAD	R	FC_MASK_BROAD register broadcast (Mode 7)
0x00C0 0022	FC_STACK_LOCK_ SET	RW	Software FC-Card Stack arbitration register (Set Request)
0x00C0 0023	FC_STACK_LOCK_ CLR	W	Software FC-Card Stack arbitration register (Release)
0x00C0 0024	FC_DMA	R	FC_DMA register
0x00C0 0025	FC_STATUS	R	FC_STATUS register

RW* : write only possible if SHARC is MASTER of destination (defined in SOURCE_ARB_SET)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

MB_STATUS (0x00C0 0000, read)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Function	0	0	0	0	0	0	sLPtoDSP	sVXItoDSP	0	0	sDSPtoLP	sVXItoLP	0	0	sDSPtoVXI	sLPtoVXI

sLPtoVXI signals message in LP to VXI mailbox register
sDSPtoVXI signals message in DSP to VXI mailbox register

sVXItoLP signals message in VXI to LP mailbox register
sDSPtoLP signals message in DSP to VXI mailbox register

sVXItoDSP signals message in VXI to DSP mailbox register
sLPtoDSP signals message in LP to DSP mailbox register

MB_VXI (0x00C0 0002, read/write)

The MAIILBOX register consists of two 16-bit registers:

MB_VXI_TO_DSP (read) and
MB_DSP_TO_VXI (write)

A write to this mailbox register sets a bit in the MB_STATUS register and causes (if enabled) an interrupt to the destination, which is cleared after the destination processor has read the message register.

MB_DSP (0x00C0 0004, read/write)

The MAIILBOX register set consists of two 16-bit registers:

MB_LP_TO_DSP (read) and
MB_DSP_TO_LP (write)

A write to this mailbox register sets a bit in the MB_STATUS register and causes (if enabled) an interrupt to the destination, which is cleared after the destination processor has read the message register.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

FC_AVAIL_RESET (0x00C0 0006, read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Initial									0	0	0	0	0	0	0	0
read function	FC8 AVAIL	FC7 AVAIL	FC6 AVAIL	FC5 AVAIL	FC4 AVAIL	FC3 AVAIL	FC2 AVAIL	FC1 AVAIL	ENABLE (NOT RESET) FC 8	ENABLE (NOT RESET) FC 7	ENABLE (NOT RESET) FC 6	ENABLE (NOT RESET) FC 5	ENABLE (NOT RESET) FC 4	ENABLE (NOT RESET) FC 3	ENABLE (NOT RESET) FC 2	ENABLE (NOT RESET) FC 1
write function	res	res	res	res	res	res	res	res	ENABLE (NOT RESET) FC 8	ENABLE (NOT RESET) FC 7	ENABLE (NOT RESET) FC 6	ENABLE (NOT RESET) FC 5	ENABLE (NOT RESET) FC 4	ENABLE (NOT RESET) FC 3	ENABLE (NOT RESET) FC 2	ENABLE (NOT RESET) FC 1

FC1 ... FC8 AVAIL signals availability of the corresponding front end card

read:

ENABLE FC1 ... FC8 reflects the ENABLE/RESET status of the corresponding front end card

write:

ENABLE FC1 ... FC8 drive directly the reset lines to the function card located at the specific position. To enable the function cards a 1 has to be written.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SOURCE_ARB_SET (0x00C0 0008, read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
read function	0	0	0	VREF AVAIL	DSP JTAG MASTER bit	DSP RAPID MASTER bit	DSP FC_RESET MASTER bit	DSP VREF MASTER bit	LIST JTAG MASTER bit	LIST RAPID MASTER bit	LIST FC_RESET MASTER bit	LIST VREF MASTER bit	VXI JTAG MASTER bit	VXI RAPID MASTRER bit	VXI FC_RESET MASTER bit	VXI VREF MASTER bit
write function	res	res	res	res	res	res	res	res	LIST JTAG REQUEST bit	LIST RAPID REQUEST bit	LIST FC_RESET REQUEST bit	LIST VREF REQUEST bit	res	res	res	res

Power up or VXI reset condition: 0x0000

SOURCE_ARB_CLR (0x00C0 000A, write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
write function	res	res	res	res	res	res	res	res	LIST JTAG clear MASTER bit	LIST RAPID clear MASTER bit	LIST FC_RESET clear MATER bit	LIST VREF clear MASTER bit	res	res	res	res

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TRIG_IN_EN_IRQ (0x00C0 0018, read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Initial	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Name	VXITI 7	VXITI 6	VXITI 5	VXITI 4	VXITI 3	VXITI 2	VXITI 1	VXITI 0	FCTO 7	FCTO 6	FCTO 5	FCTO 4	FCTO 3	FCTO 2	FCTO 1	FCTO 0

FCTO 0 .. 7 Selects the FC trigger signals, which will generate a trigger interrupt for the DSP (IRQ2)

VXITI 0 .. 7 Selects VXI trigger Signals, which will generate a trigger interrupt for the DSP (IRQ2)

A write operation with a one to the appropriated bit enables the trigger generation.

In case of a read the bits which have been enabled and have caused an interrupt are active.

The bits which have caused an interrupt have to be cleared by disabling the appropriated bit.

TRIG_OUT (0x00C0 001A, read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Initial	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Name		LIST_FLAG2_IRQ2	FL2	FL1	FL0	TMO 2	TMO 1	TMO 0	FCTI 7	FCTI 6	FCTI 5	FCTI 4	FCTI 3	FCTI 2	FCTI 1	FCTI 0

Read:

FCTI 0 … 7 Status of the Function card trigger input (actual level; “0” : active; “1” : not active)

TMO 0 … 2 Status of the trigger line from the communication registers to the trigger matrix (actual level; “0” : active; “1” : not active)

FL0 … FL2 “0”

LIST_FLAG2_IRQ2 Status of the DSP IRQ2 LIST_FLAG2 flag

Write:

FCTI 0 … 7 “1” : set the Function card trigger input (set to low)

“0”: clear the Function card trigger input (tristate)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TMO 0 … 2 “1” : set the trigger line from the LIST communication register to the trigger matrix (set to low)

“0” : clear the trigger line from the LIST communication register to the trigger matrix (tristate)

FL0 … FL2 “1” : enables to use the the LP flag 0..2 signal to and sets the TMO 0 … 2 signal

LIST_FLAG2_IRQ2 “1” enables the DSP IRQ2 if the LIST FLAG2 is set (edge sensitive)

“0” disables and clears the DSP IRQ2 LIST_FLAG2 flag

MODE (0x00C0 0020, read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RO	RW
Initial	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Name	reserved	reserved	reserved	reserved	reserved	reserved	reserved	reserved	reserved	reserved	reserved	reserved	reserved	reserved	reserved	DSP_RESET

DSP_RESET : ored with the VXI DSP Reset

FC_MASK_BROAD (0x00C0 0021, read/write)

Used for broadcast write operations in Mode 7 (only LIST).

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RO	RO	RO	RO	RO	RO	RO	RO	RW	RW	RW	RW	RW	RW	RW	RW
Initial	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Name									FC 8	FC 7	FC 6	FC 5	FC 4	FC 3	FC 2	FC 1

Bit 7 → 0 selected channels for write operation in Mode 7

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

FC_STACK_LOCK_SET (0x00C00022; read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
read function	0	0	0	0	**DSP** FC_**D** Stack MASTER bit	**DSP** FC_**C** Stack MATER bit	**DSP** FC_**B** Stack MASTER bit	**DSP** FC_**A** Stack MASTER bit	**LIST** FC_**D** Stack MASTER bit	**LIST** FC_**C** Stack MASTER bit	**LIST** FC_**B** Stack MASTER bit	**LIST** FC_**A** Stack MASTER bit	**VXI** FC_**D** Stack MASTER bit	**VXI** FC_**C** Stack MASTRER bit	**VXI** FC_**B** Stack MASTER bit	**VXI** FC_**A** Stack MASTER bit
write “1” function	res	res	res	res	**DSP** FC_**D** Stack REQUEST bit	**DSP** FC_**C** Stack REQUEST bit	**DSP** FC_**B** Stack REQUEST bit	**DSP** FC_**A** Stack REQUEST bit	res	res	res	res	res	res	res	res

Power up or VXI reset condition: 0x0000

Stack FC_D: FC 8 and FC 7

Stack FC_C: FC 6 and FC 5

Stack FC_B: FC 4 and FC 3

Stack FC_A: FC 2 and FC 1

FC_STACK_LOCK_CLR (0x00C00023; write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
write “1” function	res	res	res	res	**DSP** FC_**D** Stack clear MASTER bit	**DSP** FC_**C** Stack clear MASTER bit	**DSP** FC_**B** Stack clear MASTER bit	**DSP** FC_**A** Stack clear MASTER bit	res	res	res	res	res	res	res	res

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

FC_STATUS (0x00C00025; read)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Function	DSP	0	0	0	0	0	0	NOT_DEF_CMD	PDB7 DRAM Bank 2	PDB6 DRAM Bank 2	PDB7 DRAM Bank 1	PDB6 DRAM Bank 1	FC_D_ERR	FC_C_ERR	FC_B_ERR	FC_A_ERR

DSP LP reads a “0”; DSP reads a “1”
NOT_DEF_CMD indicates a not valid access on internal bus; cleared after Power Up or VXI Reset

PDB7 DRAM Bank 2 memory ID bit 7 Bank2 (lower 72-pin SO-DIMM)
PDB6 DRAM Bank 2 memory ID bit 6 Bank2 (lower 72-pin SO-DIMM)
PDB7 DRAM Bank 1 memory ID bit 7 Bank1 (lower 72-pin SO-DIMM)
PDB6 DRAM Bank 1 memory ID bit 6 Bank1 (lower 72-pin SO-DIMM)

FC_D_ERR reflects the hardware signal FC_ERR of STACK FCD (FC7,FC8)
FC_C_ERR reflects the hardware signal FC_ERR of STACK FCC (FC5,FC6)
FC_B_ERR reflects the hardware signal FC_ERR of STACK FCB (FC3,FC4)
FC_A_ERR reflects the hardware signal FC_ERR of STACK FCA (FC1,FC2)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

IBUS cycles (FC-SHARC-DRAM)

Sharc External Address commands

A31	A30	A29	A28	A27	A26	A25	A24
MODE Bit M2	MODE Bit M1	MODE Bit M0	depends on MODE	depends on MODE	depends on MODE	depends on MODE	depends on MODE

M2	M1	M0	Selected Mode
0	0	0	reserved
0	0	1	MODE 1: SHARC single read or write Cycle from or to FC-card
0	1	0	reserved
0	1	1	MODE 3: SHARC single read or write Cycle from or to DRAM
1	0	0	reserved
1	0	1	reserved
1	1	0	reserved
1	1	1	reserved

MODE 1 (SHARC single read or write Cycle)

A31	**A30**	**A29**	A28	A27	A26	A25	A24	
0	**0**	**1**	0	0	0	FC RD	x	FC-card AS cycle (only write)
0	**0**	**1**	0	0	1	FC RD	x	FC-card AS cycle and hold AS (only write)
0	**0**	**1**	0	1	0	x	x	FC-card AS disconnect cycle (clr AS)
0	**0**	**1**	0	1	1	x	x	Reserve
0	**0**	**1**	1	0	0	x	x	FC-card „normal“ Read/Write DS cycle
0	**0**	**1**	1	0	1	x	x	FC-card „pipe“ Read DS cycle (read FC-Latch and then start DS cycle)
0	**0**	**1**	1	1	0	x	x	FC-card Read Latch cycle (read FC-Latch)

- A23-A16 used as FC-card select lines

- write cycle to all FC-cards possible
  D[15:0] assign to FCa, FCc
  D[31:16] assign to FCb, FCd

- read cycle only from one or two FC-cards
  FCa, FCc assign to D[15:0] ; use only one of the 4 FC-cards (FC1,2,5,6)
  FCb, FCd assign to D[31:16] ; use only one of the 4 FC-cards (FC3,4,7,8)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

selected FC-card	use FC-card AS data from IBUS Data path	use FC DS data from/to IBUS Data path
FC 1 (A16=1)	[15:0]	[15:0]
FC 2 (A17=1)	[15:0]	[15:0]
FC 3 (A18=1)	[31:16]	[31:16]
FC 4 (A19=1)	[31:16]	[31:16]
FC 5 (A20=1)	[15:0]	[15:0]
FC 6 (A21=1)	[15:0]	[15:0]
FC 7 (A22=1)	[31:16]	[31:16]
FC 8 (A23=1)	[31:16]	[31:16]

MODE 3 (SHARC single read or write Cycle)

A31	**A30**	**A29**	A28	A27	A26	A25	A24	
0	**1**	**1**	x	x	CLR_ PAGE	SET_ PAGE	0	DRAM Bank 1
0	**1**	**1**	x	x	CLR_ PAGE	SET_ PAGE	1	DRAM Bank 2

A PAGE-bit will be set during a DRAM read cycle if addr. Bit 25 is 1. If this bit is SET, then the DRAM bank gets locked and access to the DRAM is faster and locked.

You can CLEAR this PAGE bit during a DRAM read cycle if addr Bit 26 is 1.

Example:

```
#define DRAM_ADDR00_ENPAGE              0x62000000
#define DRAM_ADDR00_DISPAGE             0x64000000

FC_MODE7_LOOP:
                R2=DM (DRAM_ADDR00_ENPAGE);
                DM (FC_AS_WRITE_HOLD,I1)=R1;
                R2=DM (FC_DMA_MODE7,I5);
                R2=DM (FC_DMA_MODE7+1,I5);
                R2=DM (FC_DMA_MODE7+2,I5);
                R2=DM (FC_DMA_MODE7+3,I5);
                DM (FC_AS_CLEAR_HOLD,I1)=R1;
                R2=DM (DRAM_ADDR00_DISPAGE);
        JUMP (PC,Delay1)
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

VXI Local Bus Interface

The VXI Local Bus interface of the DSP plug-in module can be used in two different ways, either by routing the SHARC link interface lines to the VXI local bus lines or by addressing the lines of the VXI local bus directly via a register.

DSP VXI Local Bus interface registers (base address: 0x0100 0000)

Address	Mnemonic	DSP RW	Function
0x0100 0000	LOC_CONTROL	RW	LOCAL Bus interface Control register
0x0100 0002	LOC_P2A_OUT	RW	Output register to set VXI Local bus P2A lines
0x0100 0003	LOC_P2C_OUT	RW	Output register to set VXI Local bus P2C lines
0x0100 0004	LOC_P2A_IN	R	Status of VXI Local bus P2A lines
0x0100 0005	LOC_P2C_IN	R	Status of VXI Local bus P2C lines

Note: For accessing these registers the SHARC WAIT register has to be set to 0x2004EAA5

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LOC_CONTROL (0x0100 0000, read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Initial	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Name	ENABLE_LOC_P2C	ENABLE_LOC_P2A	reserved	reserved	reserved	reserved	ENABLE_P2C_ OUT_REG	ENABLE_P2A_ OUT_REG	TRANSMIT_ LINK3	ENABLE _LINK3	TRANSMIT_ LINK2	ENABLE _LINK2	TRANSMIT_ LINK1	ENABLE _LINK1	TRANSMIT_ LINK0	ENABLE _LINK0

ENABLE_LOC_P2C enables FET-driver for VXI LBUSC0..11 lines on the HPM
ENABLE_LOC_P2A enables FET-driver for VXI LBUSA0..11 lines on the HPM

ENABLE_P2C_ OUT_REG enables **LOC_P2C_OUT** register outputs to lines VXI LBUSC0..11
ENABLE_P2A_ OUT_REG enables **LOC_P2A_OUT** register outputs to lines VXI LBUSA0..11

TRANSMIT_ LINK3 "1": SHARC Link3 transmit data; "0": SHARC Link3 receive data
ENABLE _LINK3 enables SHARC Link3 in/outputs to lines VXI LBUSC6..11

TRANSMIT_ LINK2 "1": SHARC Link2 transmit data; "0": SHARC Link2 receive data
ENABLE _LINK2 enables SHARC Link2 in/outputs to lines VXI LBUSC0..5

TRANSMIT_ LINK1 "1": SHARC Link1 transmit data; "0": SHARC Link1 receive data
ENABLE _LINK1 enables SHARC Link1 in/outputs to lines VXI LBUSA6..11

TRANSMIT_ LINK0 "1": SHARC Link0 transmit data; "0": SHARC Link0 receive data
ENABLE _LINK0 enables SHARC Link0 in/outputs to lines VXI LBUSA0..5

Attention: Do not enable ENABLE_P2C_ OUT_REG and ENABLE_LINK3/2 at the same time.
Do not enable ENABLE_P2A_ OUT_REG and ENABLE_LINK1/0 at the same time.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Pin assignment

Sharc Link 0	VXI Local bus	P2 connector
L0ACK	VXI LBUSA0	5A
L0CLK	VXI LBUSA1	6A
L0DATA0	VXI LBUSA2	8A
L0DATA1	VXI LBUSA3	9A
L0DATA2	VXI LBUSA4	11A
L0DATA3	VXI LBUSA5	12A

Sharc Link 1	VXI Local bus	P2 connector
L1ACK	VXI LBUSA6	14A
L1CLK	VXI LBUSA7	15A
L1DATA0	VXI LBUSA8	17A
L1DATA1	VXI LBUSA9	18A
L1DATA2	VXI LBUSA10	20A
L1DATA3	VXI LBUSA11	21A

Sharc Link 2	VXI Local bus	P2 connector
L2ACK	VXI LBUSC0	5C
L2CLK	VXI LBUSC1	6C
L2DATA0	VXI LBUSC2	8C
L2DATA1	VXI LBUSC3	9C
L2DATA2	VXI LBUSC4	11C
L2DATA3	VXI LBUSC5	12C

Sharc Link 3	VXI Local bus	P2 connector
L3ACK	VXI LBUSC6	14C
L3CLK	VXI LBUSC7	15C
L3DATA0	VXI LBUSC8	17C
L3DATA1	VXI LBUSC9	18C
L3DATA2	VXI LBUSC10	20C
L3DATA3	VXI LBUSC11	21C

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LOC_P2A_OUT (0x0100 0002, read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	R	R	R	R	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Initial	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Name	“0”	“0”	“0”	“0”	P2A_ OUT11	P2A_ OUT 10	P2A_ OUT 9	P2A_ OUT 8	P2A_ OUT 7	P2A_ OUT 6	P2A_ OUT 5	P2A_ OUT 4	P2A_ OUT 3	P2A_ OUT 2	P2A_ OUT 1	P2A_ OUT 0

P2A_OUT 0 … 11 “1” : sets the VXI Local bus signals LBUSA0..11

if P2A-FET driver is enabled and ENABLE_P2A_ OUT_REG is enabled

(ENABLE_LOC_P2A = 1 and ENABLE_P2A_ OUT_REG = 1)

LOC_P2C_OUT (0x0100 0003, read/write)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	R	R	R	R	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW	RW
Initial	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Name	“0”	“0”	“0”	“0”	P2C_ OUT11	P2C_ OUT 10	P2C_ OUT 9	P2C_ OUT 8	P2C_ OUT 7	P2C_ OUT 6	P2C_ OUT 5	P2C_ OUT 4	P2C_ OUT 3	P2C_ OUT 2	P2C_ OUT 1	P2C_ OUT 0

P2C_OUT 0 … 11 “1” : sets the VXI Local bus signals LBUSC0..11

if P2C-FET driver is enabled and ENABLE_P2C_ OUT_REG is enabled

(ENABLE_LOC_P2C = 1 and ENABLE_P2C_ OUT_REG = 1)

LOC_P2A_IN (0x0100 0004, read)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Name	“0”	“0”	“0”	“0”	P2A_ IN11	P2A_ IN10	P2A_ IN9	P2A_ IN8	P2A_ IN7	P2A_ IN6	P2A_ IN5	P2A_ IN4	P2A_ IN3	P2A_ IN2	P2A_ IN1	P2A_ IN0

P2A_IN 0 … 11 Status of the VXI Local bus signals LBUSA0..11 (if P2A-FET driver is enabled)

LOC_P2C_IN (0x0100 0005, read)

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Operation	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Name	“0”	“0”	“0”	“0”	P2C_ IN11	P2C_ IN10	P2C_ IN9	P2C_ IN8	P2C_ IN7	P2C_ IN6	P2C_ IN5	P2C_ IN4	P2C_ IN3	P2C_ IN2	P2C_ IN1	P2C_ IN0

P2C_IN 0 … 11 Status of the VXI Local bus signals LBUSC0..11 (if P2C-FET driver is enabled)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP