

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

**Artisan Technology Group**
(217) 352-9330 | sales@artisantg.com | artisantg.com

**Full-service, independent repair center**
with experienced engineers and technicians on staff.

**We buy your excess, underutilized, and idle equipment**
along with credit for buybacks and trade-ins.

**Custom engineering**
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

**Expert team | Trust guarantee | 100% satisfaction**

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

**Visit our website - *Click HERE***

# HD-TX and HD-RX Series

## HDMI® Fiber-Optic Transmitters and Receivers

quickstart guide

## 1 Introduction

The HD-TX and HD-RX Series consist of the following models:


- HD-TX1-F transmitter and HD-RX1-F receiver
- HD-TX3-F transmitter and HD-RX3-F receiver

## 2 Mounting

Mount the transmitter and receiver onto a wall or rack as appropriate for your installation.

### Wall Mounting


Using four mounting screws (not supplied), attach the transmitter or receiver to the wall as shown below.

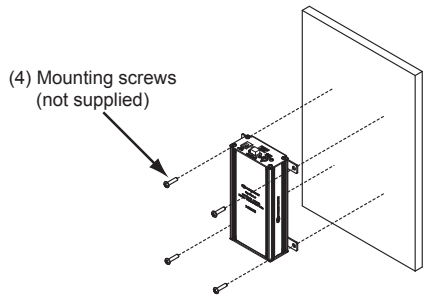


### Rack Mounting

Mount the transmitter or receiver to the front or rear rail of a rack as follows:

1. Position either the left or right mounting flanges of the device so that the holes align with the holes in the rack (mounting of right flanges is shown below).
2. Secure the device to the rack using two rack mounting screws (not supplied).

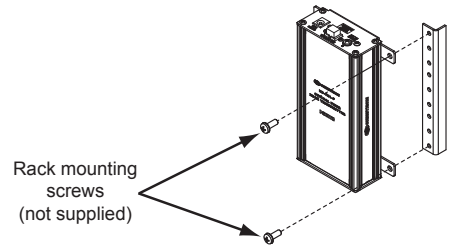


## 3 HD-TX1-F and HD-RX-1 Connections

### HD-TX1-F Front Panel Connections

**Connecting the HDMI IN Port:** Using an HDMI cable (not supplied), connect the HDMI IN port to the HDMI output port of the audio/video source.

**Connecting the Control Ports**: Connect the IR IN or COM control port or both as follows:

- **IR IN:** Using an IR cable (not supplied), connect the 2-pin terminal block of the IR IN port to the IR output port of the control system.
- **COM (RS-232)**: Using a data communications cable (not supplied), connect the 3-pin terminal block to the COM port of the control system.

### HD-RX1-F Front Panel Connections

**Connecting the HDMI OUT Port**: Using an HDMI cable (not supplied), connect the HDMI OUT port to the HDMI input port of the receiving device.

**Connecting the Control Ports**: Connect the IR OUT or COM control port or both as follows:

- **IR OUT**: Using the Crestron® IRP2 emitter (not supplied), connect the 2-pin terminal block of the IR OUT port to the IR input port of the device to be controlled.
- **COM (RS-232)**: Using a data communications cable (not supplied), connect the 3-pin terminal block to the COM port of the device to be controlled.

### HD-TX1-F and HD-RX1-F Rear Panel Connections


**Connecting the Ground**: Connect the chassis ground lug to earth ground (building steel).

**Connecting the MM OPTICAL Fiber Port**: Using a CresFiber® or other quality 50/125 µm or 62.5/125 µm simplex multimode fiber-optic cable with SC connectors, connect one end of the cable to the MM OPTICAL connector on the HD-TX1-F and the other end of the cable to the MM OPTICAL connector on the HD-RX1-F.


**NOTE**: For maximum distance, the fiber-optic cable should be rated for at least 500 MHz*km effective modal bandwidth (EMB) at both 850 nm and 1300 nm. Refer to the cable manufacturer's datasheet for EMB information.

**Connecting the 12 Vdc Power Jack**: Connect the 12 Vdc power jack to the PW-1205RU external power supply included with the HD-TX1-F and HD-RX1-F.


***HD-TX1-F Front Panel Connections***

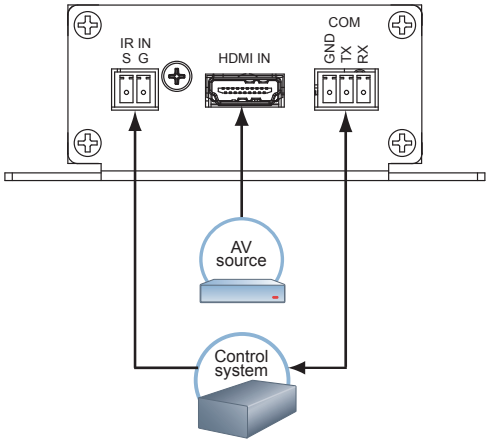



***HD-RX1-F Front Panel Connections***

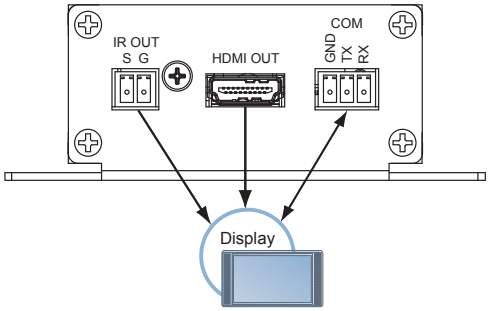


***HD-TX1-F Rear Panel Connections***

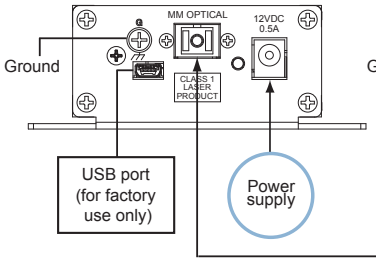


***HD-RX1-F Rear Panel Connections***

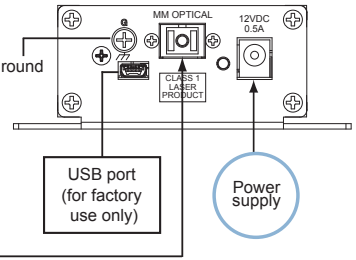


Fiber-optic cable

HD-TX and HD-RX Series



For Regulatory Compliance information, refer to the latest version of Doc. 6860.

**QUICKSTART DOC. 6861D (2025032) 08.16**

www.crestron.com | 888.273.7876 | 201.767.3400

Specifications subject to change without notice.

CRESTRON

# HD-TX and HD-RX Series

## HDMI Fiber-Optic Transmitters and Receivers

quickstart guide

## 4 HD-TX3-F and HD-RX3-F Connections

### HD-TX3-F Front Panel Connections

**Connecting the AUDIO Input Port**: Using an unbalanced 3.5 mm TRS mini phone jack cable (not supplied), connect the AUDIO input port to an unbalanced audio source.

**Connecting the USB HID Port**: Using a USB cable (not supplied), connect the USB HID port to a computer.


**Connecting the HDMI IN Port**: Using an HDMI cable (not supplied), connect the HDMI IN port to the HDMI output port of the audio/video source.

**Connecting the LAN Port**: Using an Ethernet cable (not supplied), connect the 10BASE-T/100BASE-TX LAN port to the LAN. Pin designations are listed below.

***LAN Port Pin Designations***

| PIN | SIGNAL | PIN | SIGNAL |
|---|---|---|---|
| 1 | TX+ | 5 | N/C |
| 2 | TX– | 6 | RX– |
| 3 | RX+ | 7 | N/C |
| 4 | N/C | 8 | N/C |

***HD-TX3-F Front Panel Connections***

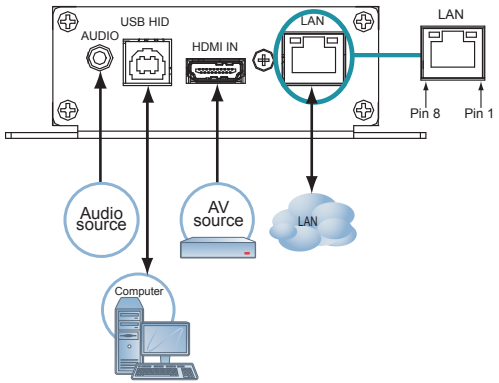


### HD-RX3-F Front Panel Connections

**Connecting the AUDIO Output Port**: Using an unbalanced 3.5 mm TRS mini phone jack cable (not supplied), connect the AUDIO output port to an unbalanced audio output device.


**NOTE**: When the HDMI IN (HD-TX3-F) or HDMI OUT (HD-RX3-F) port is connected or disconnected or if the HDMI input resolution changes, the analog audio output is muted for a few seconds.

**Connecting the USB HID Port**: Using a USB cable (not supplied), connect the USB HID port to a mouse or keyboard. (A keyboard with a built-in touchpad or trackball is supported. Built-in and external USB hubs are not supported.)

**Connecting the HDMI OUT Port**: Using an HDMI cable (not supplied), connect the HDMI OUT port to the HDMI input port of the receiving device.

**Connecting the LAN Port**: Using an Ethernet cable (not supplied), connect the 10BASE-T/100BASE-TX LAN port to the LAN. (LAN port pin designations are listed in the table in the left-hand column.)

***HD-RX3-F Front Panel Connections***

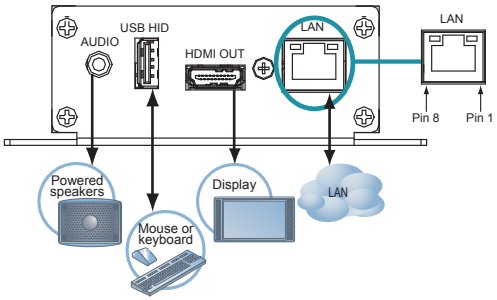


### HD-TX3-F and HD-RX3-F Rear Panel Connections

**Connecting the Control Ports**: Connect the IR or COM control port or both as follows:

- **IR IN (HD-TX3-F)**: Using an IR cable (not supplied), connect the 2-pin terminal block of the IR IN port to the IR output port of the control system.
- **IR OUT (HD-RX3-F)**: Using the Crestron IRP2 emitter (not supplied), connect the 2-pin terminal block of the IR OUT port to the IR input port of the device to be controlled
- **COM (RS-232)**: Using a data communications cable (not supplied), connect the 3-pin terminal block as follows:
  - For the HD-TX3-F, connect the COM port to the COM port of the control system.
  - For the HD-RX3-F, connect the COM port to the COM port of the device to be controlled.

**Connecting the MM OPTICAL Fiber Port**: Using a CresFiber or other quality 50/125 µm or 62.5/125 µm simplex multimode fiber-optic cable with SC connectors, connect one end of the cable to the MM OPTICAL connector on the HD-TX3-F and the other end of the cable to the MM OPTICAL connector on the HD-RX3-F.


**NOTE**: For maximum distance, the fiber-optic cable should be rated for at least 500 MHz*km effective modal bandwidth (EMB) at both 850 nm and 1300 nm. Refer to the cable manufacturer's datasheet for EMB information.

**Connecting the Ground**: Connect the chassis ground lug to earth ground (building steel).

**Connecting the 12 Vdc Power Jack**: Connect the 12 Vdc power jack to the PW-1215WU external power supply included with the HD-TX3-F and HD-RX3-F.

***HD-TX3-F Rear Panel Connections***

***HD-RX3-F Rear Panel Connections***

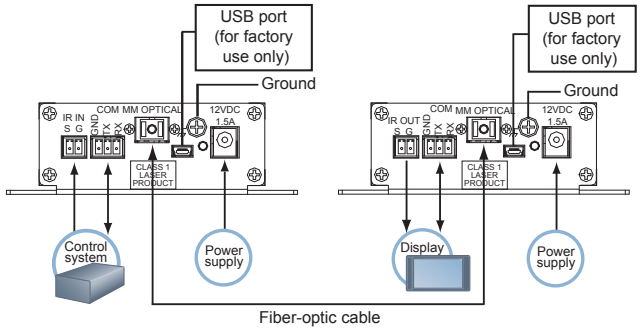



The specific patents that cover Crestron products are listed at patents.crestron.com.

Certain Crestron products contain open source software. For specific information, please visit www.crestron.com/opensource.

Crestron, the Crestron logo, and CresFiber are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries. HDMI is either a trademark or registered trademark of HDMI Licensing LLC in the United States and/or other countries. Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors in typography or photography.

This document was written by the Technical Publications department at Crestron.
©2016 Crestron Electronics, Inc.






For Regulatory Compliance information, refer to the latest version of Doc. 6860.

**QUICKSTART DOC. 6861D (2025032) 08.16**

**www.crestron.com** | 888.273.7876 | 201.767.3400

Specifications subject to change without notice.

CRESTRON

**Artisan Technology Group** is an independent supplier of quality pre-owned equipment

## Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

## We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

## Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP