

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

**Artisan Technology Group**
(217) 352-9330 | sales@artisantg.com | artisantg.com

**Full-service, independent repair center**
with experienced engineers and technicians on staff.

**We buy your excess, underutilized, and idle equipment**
along with credit for buybacks and trade-ins.

**Custom engineering**
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

**Expert team | Trust guarantee | 100% satisfaction**

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

**Visit our website - *Click HERE***

PUBLICATION NO. 980599

# 1995
# 1996
# UNIVERSAL TIMER/COUNTERS

**RACAL-DANA**

RACAL-DANA INSTRUMENTS INC.
4 Goodyear Street, P.O. Box C-19541, Irvine, CA 92713
Telephone: 714/859-8999, TWX: 910-595-1136, TLX 67-8341

RACAL-DANA INSTRUMENTS LTD.
Hardley Industrial Estate, Hythe, Southampton, Hamoshire, SO4 6ZH, England
Telephone: (0703) 843265, FAX: (0703) 848919, TLX: 47600

RACAL-DANA INSTRUMENTS S.A.
18 Avenue Dutartre, 78150 Le Chesnay, France
Telephone: (1) 3-955-8888, TLX: 697 215

RACAL-DANA INSTRUMENTS GmbH.
Hermannstrasse 29, D-6078 Neu Isenburg, Federal Republic of Germany
Telephone: 06102-2861/2, TLX: 412896

RACAL-DANA INSTRUMENTS ITALIA srl.
Via Mecenate 84/A, 20138 Milano MI, Italy
Telephone: (02) 5062767, (02) 5052686, (02) 503444, TLX: 315697

PUBLICATION DATE: DECEMBER 1988

# FOR YOUR SAFETY

Before undertaking any maintenance procedure, whether it be a specific troubleshooting or maintenance procedure described herein or an exploratory procedure aimed at determining whether there has been a malfunction, read the applicable section of this manual and note carefully the WARNING and CAUTION notices contained therein.

The equipment described in this manual contains voltage hazardous to human life and safety and which is capable of inflicting personal injury. The cautionary and warning notes are included in this manual to alert operator and maintenance personnel to the electrical hazards and thus prevent personal injury and damage to equipment.

If this instrument is to be powered from the AC line (mains) through an autotransformer (such as a Variac or equivalent) ensure that the common connector is connected to the neutral (earthed pole) of the power supply.

Before operating the unit ensure that the protective conductor (green wire) is connected to the ground (earth) protective conductor of the power outlet. Do not defeat the protective feature of the third protective conductor in the power cord by using a two conductor extension cord or a three-prong/two-prong adaptor.

Maintenance and calibration procedures contained in this manual sometimes call for operation of the unit with power applied and protective covers removed. Read the procedures carefully and heed Warnings to avoid "live" circuit points to ensure your personal safety.

Before operating this instrument:

1. Ensure that the instrument is configured to operate on the voltage available at the power source. See Installation Section.

2. Ensure that the proper fuse is in place in the instrument for the power source on which the instrument is to be operated.

3. Ensure that all other devices connected to or in proximity to this instrument are properly grounded or connected to the protective third-wire earth ground.

If at any time the instrument:

- Fails to operate satisfactorily
- Shows visible damage
- Has been stored under unfavorable conditions
- Has sustained stress

It should not be used until its performance has been checked by qualified personnel.

AMENDMENT

to the 1995/6 and 1995/6-02M Instruction Manuals
Part numbers 980599 and 980607

June 14, 1989

This Amendment adds the Rubidium Frequency Standard, Option 04R, part number 404469.

Drawings included in this amendment:

404469 – Assembly. Rubidium Standard

404565 – Module Assembly, Rubidium Oscillator

401858 – PCB Assy., Rubidium Oscillator Power Supply
431858 – Schematic, Rubidium Oscillator Power Supply

Calibration Procedure on following page.

# Option O4R Calibration Procedure

1) Connect equipment as shown in Figure 1.1

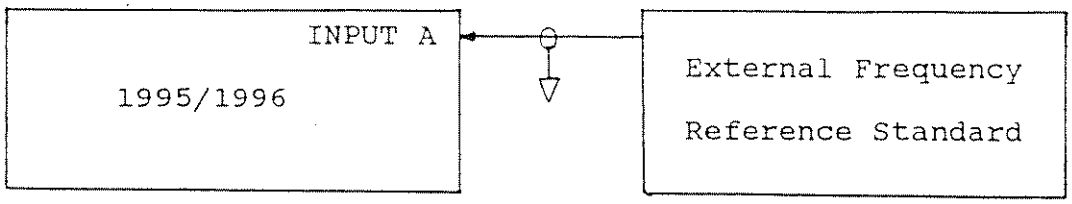



Figure 1.1

## Counter Input/Control Settings


a) Select FREQ A
b) Select AC coupling, Input A
c) Select 50 ohms impedance, Input A
d) Set gate time of 100Sec

2) Allow sufficient time for equipment to stabilize

Note

Option O4R requires 4 minutes stabilization to obtain the following frequency accuracy: ±1x10E-9 of the final frequency(calibrated frequency), or the frequency before turn off, (if turn off was within 24 hours). The frequency will typically be within ±2x10E-11 of the final frequency after 1 hour. If the unit was not recently calibrated, the maximum frequency offset after one hour of operation would be: ±2x10E-11 warmup accuracy, ±2x10E-11 retrace. This assumes the last calibration was at the same ambient temperature.

3) Locate Option O4R frequency adjust access hole.

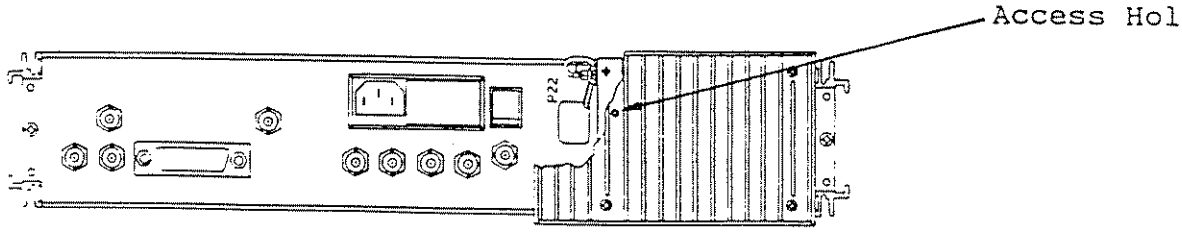



Note


The frequency of Option O4R may be adjusted over a range of approximately ±2x10E-9 by means of a 10 turn potentiometer accessible through the frequency adjust access hole.

4) Using a small screwdriver, slowly adjust the potentiometer while watching the counter display. Adjust the unit's output to the External Frequency Reference Standard ±5x10E-11 Hz.


RACAL-DANA 1996/04R

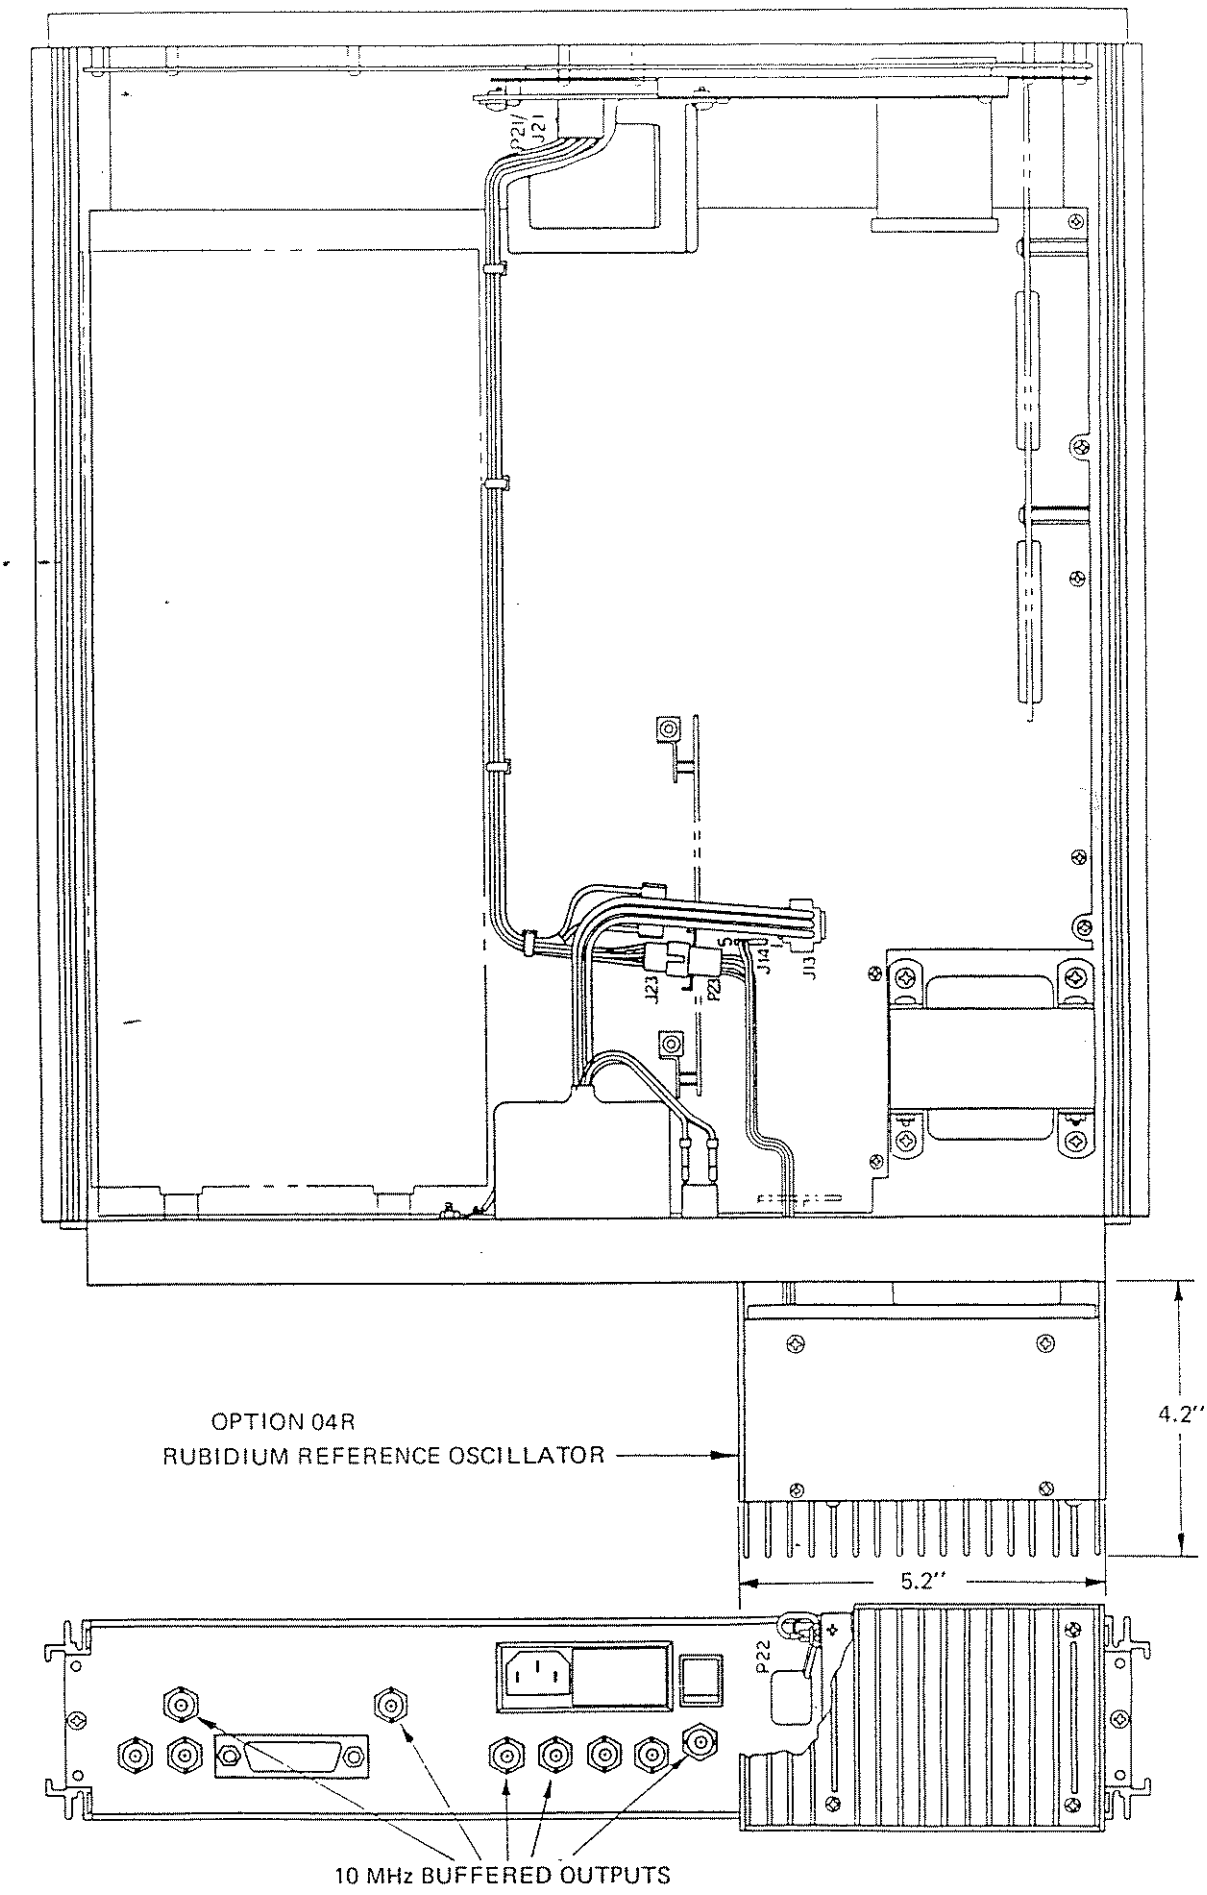


SCALE : NONE

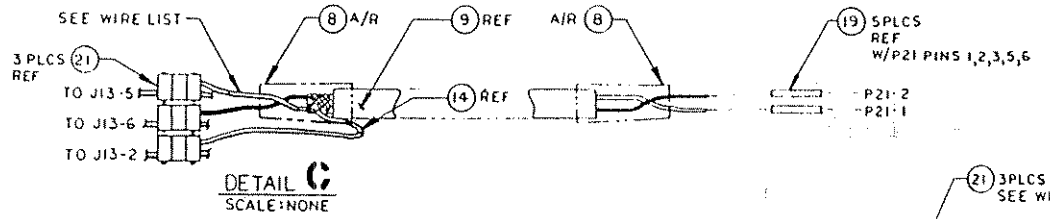


DETAIL C
SCALE : NONE

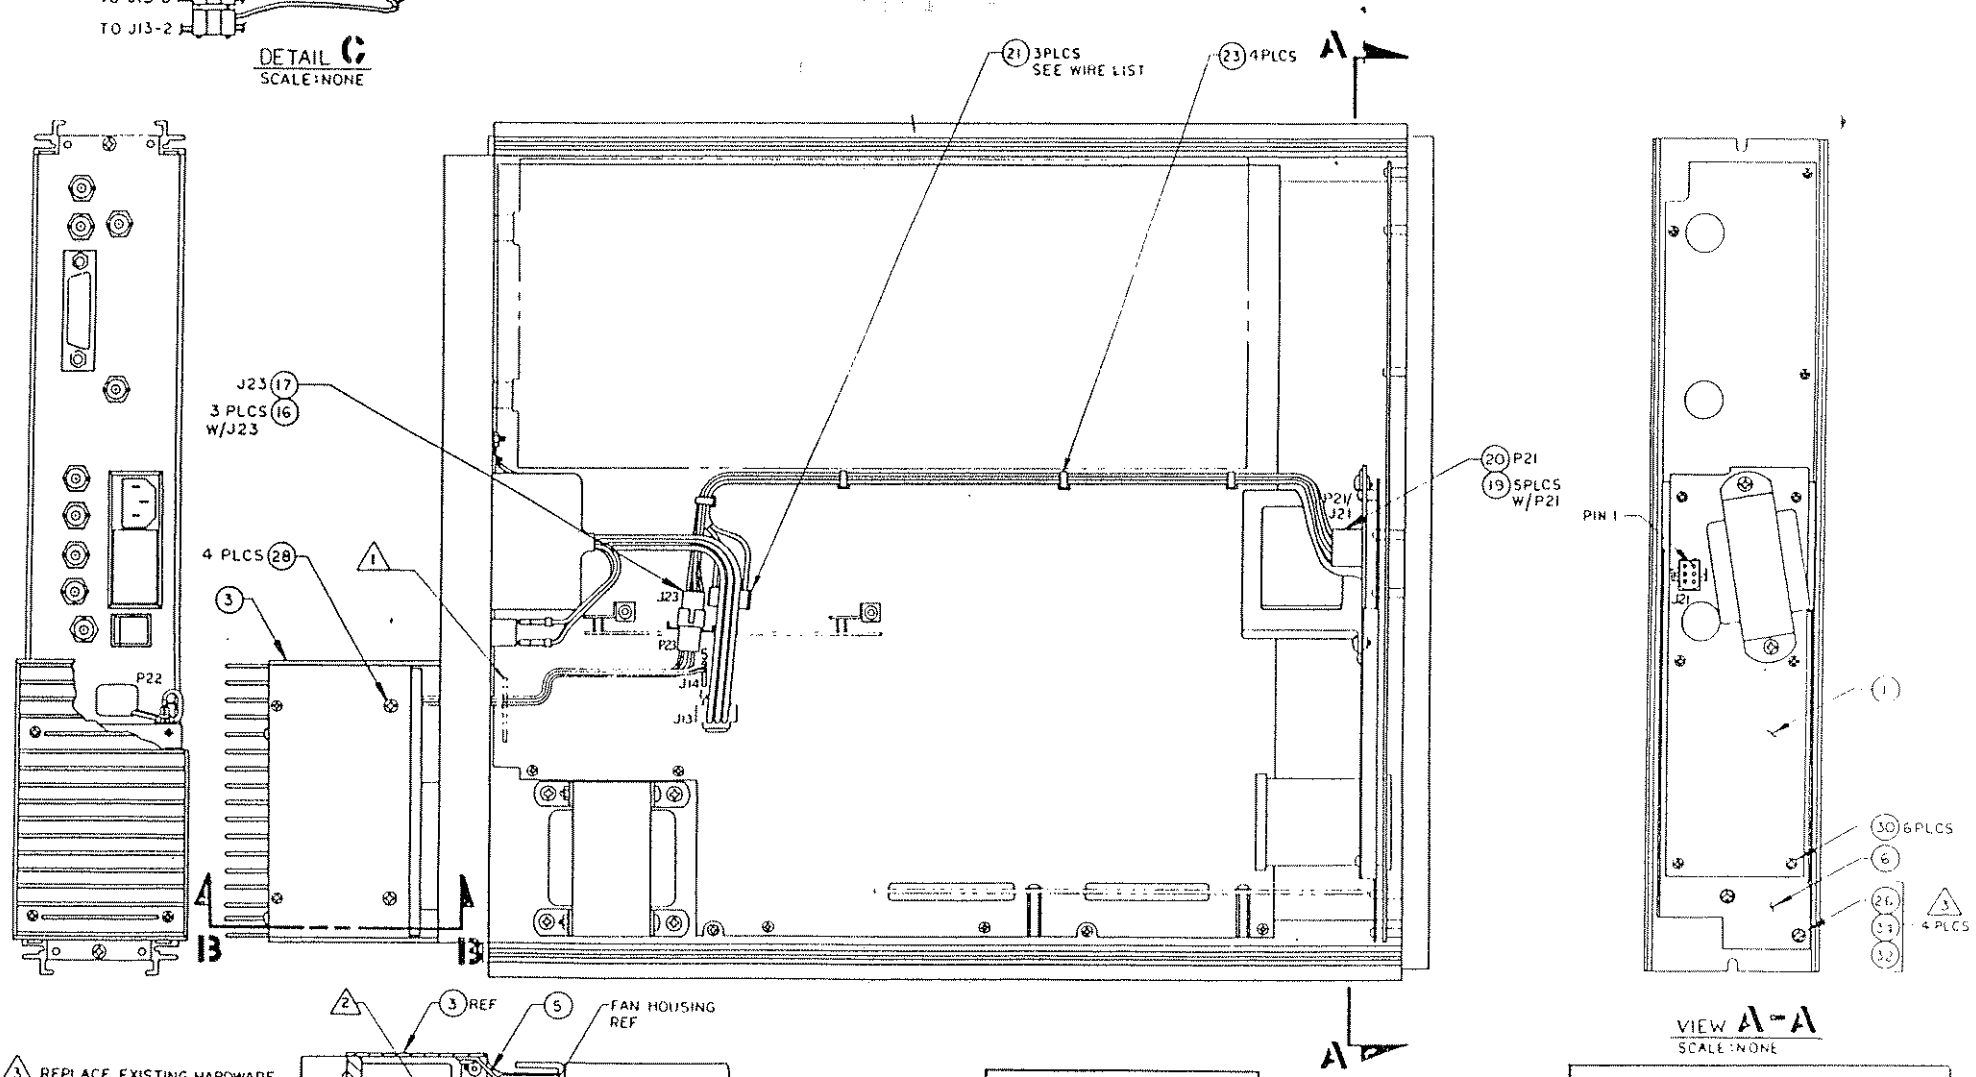


VIEW A-A
SCALE : NONE

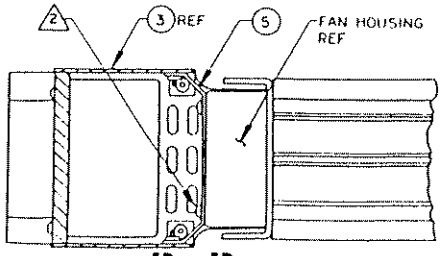


SECTION B-B

3 REPLACE EXISTING HARDWARE WITH HARDWARE NOTED TO ATTACH MTG PLATE (ITEM #6).

2 USE FAN MOUNTING SCREWS TO ATTACH OSCILLATOR MTG BRKT (ITEM #5) TO FAN HOUSING.

1 REMOVE OSCILLATOR PCB ASSY 401730 AND RETURN TO STOCK.

UNLESS OTHERWISE SPECIFIED


PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED, RELEASED OR DISCLOSED IN WHOLE OR IN PART, OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC


**RACAL-DANA Instruments Inc.**
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE
OSC., RUBIDIUM STAND. OPTION 04R

| SIZE | CODE IDENT NO | DOCUMENT NO | REV |
|---|---|---|---|
| D | 21793 | 404469 | A |

SCALE 3:4 SHEET 1 OF 4

Table 1.1 - Technical Specifications (Cont'd)

| | |
|---|---|
| Accuracy: | (± Accuracy of $F_C/F_C$) ± (Accuracy of $F_B$)/$F_B$ |
| Where $F_C$ and $F_B$ are the frequencies of input signals C and B, respectively. | |
| **TOTALIZE A BY B** | |
| (Totalize B by A available via Special Function 21) | |
| Range: | 0 to 100 MHz |
| Start/Stop: | Input B or manual via Special Function 61 |
| LSD Displayed: | 1 Count |
| Resolution: | LSD |
| Accuracy: | Same as Resolution |
| **PHASE A RELATIVE TO B** | |
| (Phase B relative to A available via Special Function 21) | |
| Range: | 0 to 360° |
| Minimum Signal: | 150 mV p-p using Auto-Trigger function<br>25 mV rms Manual Trigger settings |
| LSD Displayed: | Continuous monitoring of measurement provides optimum resolution based on Period and Time Interval Resolution |
| Resolution: | $\pm$ LSD $\pm \frac{\text{TI Resolution}}{\text{PERIOD A}} \times 360^\circ$ |
| Accuracy: | $\pm$ LSD $\pm \frac{\text{TI Accuracy}}{\text{PERIOD A}} \times 360^\circ$ |
| **GATE TIME** | |
| Range: | 200 ns to 100 sec |
| LSD Displayed: | 3 Digit Display |

Table 1.1 - Technical Specifications (Cont'd)

| | |
|---|---|
| LSD Displayed: | $\frac{\text{Ratio}}{F_A \text{ X Gate Time}}$ |
| Where $F_A$ is the higher frequency, connected to the numerator input | |
| Resolution: | $\pm \text{LSD} \pm \frac{T_B \text{ X Ratio}}{\text{Gate Time}}$ |
| Where $T_B$ is the denominator trigger error on lower frequency Input B | |
| Accuracy: | Same as Resolution |
| **Ratio C/B (hardware)**<br>**(Ratio C/A is available via Special Function 21)** | |
| Range: | |
| Input C | 40 MHz to 1.3 GHz |
| Input B | 0 to 100 MHz |
| LSD Displayed: | $\frac{\text{Ratio}}{F_C \text{ X Gate Time}} \text{ X } 64$ |
| Where $F_C$ is Input C frequency. | |
| Resolution: | $\pm \text{LSD} \pm \frac{T_B \text{ X Ratio}}{\text{Gate Time}}$ |
| Where $T_B$ is denominator trigger error on lower frequency Input B | |
| Accuracy: | Same as Resolution |
| **Ratio C/B (software)** | |
| Range: | |
| Input C: | 40 MHz to 1.3 GHz |
| Input B: | 0 to 200 MHz |

Table 1.1 - Technical Specifications (Cont'd)

LSD Displayed: $\frac{1 \text{ ns}}{\text{Transition Time}} \times \text{Slew Rate (to 3 digits)}$

Resolution: $\pm\left[\frac{(\text{Stop Trig Level}-\text{Start Trig Level}) + 10 \text{ mV}}{0.9 \times (\text{Transition Time}-\text{Transition Time Resolution})} - \text{Slew}\right]$

Accuracy: $\pm\left[\frac{(\text{Stop Trig Level}-\text{Start Trig Level}) + 20 \text{ mV}}{0.9 \times (\text{Transition Time}-\text{Transition Time Accuracy})} - \text{Slew}\right]$

The magnitude of the slew rate is displayed on the 7-segment display readout. Negative values are obtained on selecting slope \.

**FREQUENCY RATIO MEASUREMENT**

**Ratio A/B (software)**
**(Ratio B/A is available via Special Function 21)**

Range:

| | |
|---|---|
| Input A | 0 to 200 MHz |
| Input B | 0 to 200 MHz |

Accuracy: $\pm$ (Accuracy of $F_A$)/$F_A$ $\pm$ (Accuracy of $F_B$)/$F_B$

Where $F_A$ and $F_B$ are the frequencies of input signals A and B, respectively.

**Ratio A/B (hardware)**

Range:

| | |
|---|---|
| Input A | 0 to 100 MHz |
| Input B | 0 to 100 MHz |

Table 1.1 - Technical Specifications (Cont'd)

| | |
|---|---|
| LSD Displayed: | Same as Time Interval Specification |
| Resolution: | Same as Time Interval Specification |
| Accuracy: | Same as Time Interval Specificatio with Trigger Level Timing Error* computed at 10% and 90% trigge points |
| **PULSE WIDTH** | |
| Range: | 5 ns to 33 ms ($10^7$ s for manually se trigger levels) |
| LSD Displayed: | Same as Time Interval Specification |
| Resolution: | Same as Time Interval Specification |
| Accuracy: | Same as Time Interval Specificatio with Trigger Level Timing Error* computed at 50% trigger points |
| **DUTY CYCLE** | |
| Range: | 0.01% to 99.99% |
| Frequency Range: | 30 Hz to 100 MHz (to DC for manuall set trigger levels) |
| LSD Displayed: | 0.01% or 1 ns/period x 100% (whicheve is greater) |
| Resolution: | $\frac{\text{Pulse Width Resolution}}{\text{Period}} \times 100\%$ |
| Accuracy: | $\pm$ LSD $\pm \left(\frac{\text{Pulse Width Accuracy}}{\text{Period}}\right) \times 10$ |
| **SLEW RATE** | |
| Range: | 10V/s to 2 X $10^9$ V/s |
| Transition Time Range: | 5 ns to 30 ms |
| Minimum Pulse Height: | 250 mV p-p |

** Refer to Definitions, Trigger Level Timing Error

Table 1.1 - Technical Specifications (Cont'd)

| | |
|---|---|
| **PERIOD MEASUREMENT** | |
| Range: | 5 ns to 1.0 X $10^7$ s |
| LSD Displayed: | (1 ns/Gate Time) X Period |
| Resolution: | ± (1 X LSD) ± 1.4 X (Trigger Error*/Gate Time) X Period |
| Accuracy: | ± Resolution ± Time Base Error x Period |
| **TIME INTERVAL MEASUREMENT** | |
| Input Configuration: | |
| Separate: | Input A start/Input B stop<br>Input B start/Input A stop (through Special Function 21 or GPIB) |
| Common: | Input A or Input B start and stop |
| Range: | -3 ns to 1.0 X $10^7$ sec |
| LSD Displayed: | 1 ns (100 ps using Average mode) |
| Resolution: | ± (1 X LSD) ± (Start Trigger Error*) ± (Stop Trigger Error*) |
| Accuracy: | ± (Resolution) ± (Time Base Error) X TI ± (Trigger Level Timing Error**) ± 2ns |
| Time Interval Delay: | Programmable 200 ns to 100 s |
| Delay Resolution: | ≥1 mSec, 0.1%<br><1 mSec, 0.1 μs |
| Delay Accuracy: | Same as Delay Resolution |
| **RISE/FALL TIME** | |
| Range: | 5 ns to 25 ms |
| Minimum Pulse Height: | 250 mV p-p |
| Minimum Pulse Width: | 15 ns at signal peaks |

* Refer to Definitions, Trigger Error
** Refer to Definitions, Trigger Level Timing Error

Table 1.1 - Technical Specifications (Cont'd)

| | |
|---|---|
| Impedance: | 10 kilohms shunted by ≤35 pF |
| Damage Level: | ± 20V (DC + AC peak) |
| Triggering | |
| Trigger Levels: | TTL or zero-crossing, selectable via specia function or through GPIB interface |
| Trigger Slope: | + or -, selectable via special function or GPI |
| **FREQUENCY MEASUREMENT** | |
| **Inputs A & B** | |
| Range: | |
| Input A: (B selectable through Special Function 21 or GPIB) | 0 to 200 MHz |
| LSD Displayed: | (1 ns/Gate Time) X Frequency (i.e., 9 digits in one second) |
| Resolution: | ±(1 X LSD) ± 1.4 X (Trigger Error*/Ga Time) X Frequency |
| Accuracy: | ± Resolution ± Time Base Error x Frequency |
| Gate Time: | |
| Range: | Selectable from 200 ns to 100 sec. |
| Resolution: | ≥1 ms, 0.1%<br><1 ms, 0.1 μs |
| **Input C (1996 only)** | |
| Range: | 40 MHz to 1.3 GHz |
| LSD Displayed: | (1 ns/Gate Time) X Frequency |
| Resolution: | (LSD) |
| Accuracy: | ± Resolution ± Time Base Error x Frequency |

* Refer to Definitions, Trigger Error

Table 1.1 - Technical Specifications (Cont'd)

| | |
|---|---|
| Coupling: | AC or DC, independently selectable |
| Impedance: | |
| High, Separate and Common | 1 megohm shunted by 40 pF (nominal) |
| 50 Ohm | 50 ohms nominal |
| Damage Level: | |
| 1 megohm input impedance | X1: 260V (DC + AC rms) DC to 2 kHz<br>5 X $10^5$/f V, 2 kHz - 100 kHz<br>5V rms, 100 kHz - 200 MHz<br>X10,X50:<br>260V (DC + AC rms) DC to 20 kHz<br>5 X $10^6$/f V, 20 kHz to 100 kHz<br>50V rms, 100 kHz to 200 MHz |
| 50 ohm input impedance | 5V rms (DC to 200 MHz) |
| **Input C** | |
| Frequency Range: | 40 MHz to 1.3 GHz |
| Sensitivity, Sine Wave: | 10 mV rms to 1.0 GHz<br>100 mV rms to 1.3 GHZ |
| Dynamic Range: | 40 dB to 1 GHz<br>20 dB to 1.3 GHz |
| Impedance: | 50 ohms nominal, AC-coupled |
| VSWR | 2:1 at 1 GHz |
| Maximum Operating Input: | 1V rms |
| Maximum Input:<br>(without damage) | 7V rms (fuse-protected) |
| **Input D (Gate Control Input)** | |
| Sensitivity, Pulse: | 300 mV p-p; 50 ns min. width<br>with 150 mV overdrive |

Table 1.1 - Technical Specifications (Cont'd)

| | |
|---|---|
| Filter: | Independently selectable Input A and Input B; 100 kHz, nominal. Greater than 20 db attenuation from 10-200 MHz. |

**Note:** The Filter and Hysteresis functions may be combined to increase noise immunity.

| | |
|---|---|
| Dynamic Range (X1): | 75 mV to 10V p-p to 25 MHz<br>75 mV to 5V p-p to 100 MHz<br>150 mV to 2.5V p-p to 200 MHz |
| Signal Operating Range (X1): | -5V DC to +5V DC |
| Crosstalk at 100 MHz: | 500 mV rms* |

*Sine wave into either input will not trigger the other input.

Triggering:

| | |
|---|---|
| Trigger Level Ranges: | 5, 50, 250V peak (X1, X10, X50) |
| Trigger Level: | Adjustable to ±100% of input voltage range with a resolution of 0.2% of input range (10 mV on X1). Level is displayed on front panel. |
| Trigger Slope: | + or -, selectable with digital hysteresis compensation. |
| Trigger Level Setting Accuracy (25°C ± 1°C) (X1 range) | ± 1% of trigger level ±10 mV |
| Trigger Level Temperature Coefficient (X1 range) | ± .5 mV/°C |

Auto-Trigger

| | |
|---|---|
| Frequency Range: | DC and 30 Hz to 100 MHz (AC or DC Coupled), usable to 200 MHz |
| Minimum Amplitude: | 150 mV p-p |
| Accuracy of Trigger Level Readout: | Same as "Read Amplitude Peak" accuracy |
| Response Time: | 650 ms typical 1s maximum |

**Note:** The Auto-Trigger function is independent of the input-signal duty cycle.

Table 1.1 - Technical Specifications

## GENERAL DESCRIPTION

The 1995/1996 system universal counter utilizes a microprocessor-controlled multiple register data acquisition IC for counting and timing to 200 MHz (1.3 GHz on the 1996 with Input C). The counter provides the following measurement functions: frequency, frequency ratio, period, 1-ns resolution time interval, automatic pulse parameters (including duty cycle and slew rate), phase, and totalize. Time interval averaging is available via software-derived functions.

The frequency range on Inputs A and B is 0 to 200 MHz; 40 MHz to 1.3 GHz on Input C using an additional board. Trigger levels on Inputs A and B can be set manually via the front panel keypad or via auto-trigger with 50% trigger points. The DC offset component of the input signal may be tracked by auto-triggering in between readings in the manual mode (peak tracking). Use of a timing error correction (TEC) technique permits measurements with 9-digit resolution in one second and a single-shot time-interval resolution to 1 ns.

The counter is housed in a 3.5" high X 19" wide full-rack X 19" deep standard corporate enclosure. Total weight does not exceed 22 lbs (10 kg). Unit is adaptable to rack or bench top use.

## INPUT CHARACTERISTICS

### Inputs A and B

| | |
|---|---|
| Channel Input: | Start/stop channels for each input provide common measurements for Input A and Input B. |
| Frequency Range: | |
| DC Coupled | 0 to 200 MHz |
| AC Coupled | 20 Hz to 200 MHz |
| Sensitivity, Sine Wave: | 25 mV rms to 100 MHz<br>50 mV rms to 200 MHz |
| Sensitivity, Pulse (Frequency Mode): | 150 mV p-p; 2.5 ns min. width with 75 mV overdrive. |
| Sensitivity, Pulse (T.I. Mode): | 75 mV p-p; 5 ns min. width with 35 mV overdrive. |
| Hysteresis: | Sensitivity reduces by X 4 (nominally). Dynamic range bandwidth limited to approximately 50 MHz. |

# SECTION 1 GENERAL INFORMATION

## 1.1 INTRODUCTION

1.1.1 This Instruction Manual provides information for installing, operating, and servicing of Racal-Dana's Universal Systems Counters Models 1995/1996. The designations 1995/1996 are used throughout this manual. Figure 1.1 shows the 1996. Both the 1995/1996 offer universal counter functions using Inputs A and B. The 1996 also provides high-frequency Input C for frequency measurements to 1.3 GHz. Input D, located on the rear panel, provides for external arming and gating. All personnel using the 1995/1996 are encouraged to thoroughly read this manual before operating or servicing either instrument.

## 1.2 SUMMARY

1.2.1 This manual is organized into eight sections:

**SECTION 1. General Information:** published specifications, safety considerations, product support, general description, and options.

**SECTION 2. Installation & Preparation for Use:** unpacking and initia inspection, reshipment, setup, field installation of options, power connections storage and ventilation.

**SECTION 3. Local Operation:** bench operation, including general operating information, panel descriptions, and measurement procedures.

**SECTION 4. System Operation:** GPIB system operation.

**SECTION 5. Theory of Operation:** general theory of operation.

**SECTION 6. Maintenance:** Performance tests and basic calibration informatio for the 1995/1996.

**SECTION 7. Drawings:** assembly and schematic drawings.

**SECTION 8. Parts List:** replaceable parts and assemblies.

## 1.3 SPECIFICATIONS

1.3.1 Table 1.1 lists the 1995/1996 specifications. They specify the performanc standards to which either instrument should be tested during necessary calibration an servicing.

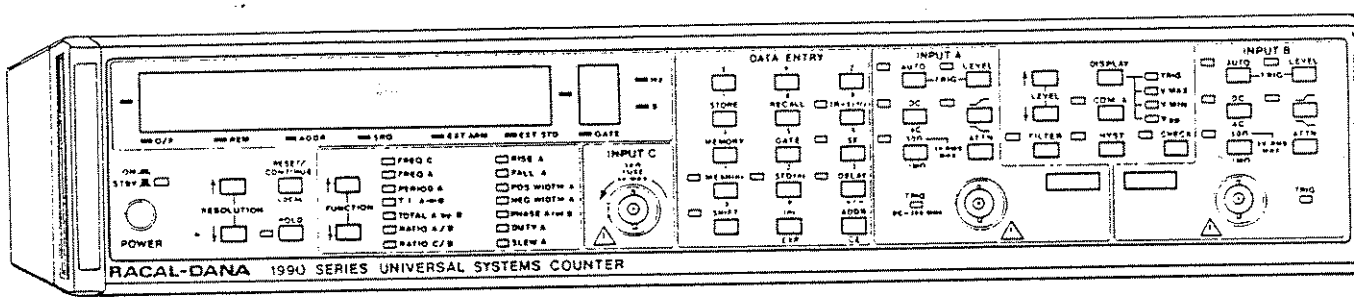



Figure 1.1 - Models 1995/1996 Universal Timer/Counter (1996 Shown)

LIST OF TABLES (Cont'd)


| Table | Title | Page |
|---|---|---|
| 6.10 | Total A by B Performance Test | 6-12 |
| 6.11 | Ratio A/B Performance Test | 6-13 |
| 6.12 | Ratio C/B Performance Test | 6-14 |
| 6.13 | Rise Time Performance Test | 6-15 |
| 6.14 | Fall Time A Performance Test | 6-16 |
| 6.15 | Positive Pulse Width Performance Test | 6-17 |
| 6.16 | Negative Pulse Width Performance Test | 6-18 |
| 6.17 | Phase A rel B Performance Test | 6-19 |
| 6.18 | Duty Cycle A Performance Test | 6-20 |
| 6.19 | Slew Rate A Performance Test | 6-21 |
| 8.1 | List of Suppliers | 8-2 |

# LIST OF TABLES


| Table | Title | Page |
|---|---|---|
| 1.1 | Technical Specifications | 1-2 |
| 3.1 | Front-Panel Controls, Indicators, and Connectors | 3-4 |
| 3.2 | Rear-Panel Controls and Connectors | 3-14 |
| 3.3 | Frequency Measurement | 3-16 |
| 3.4 | Period Measurement | 3-17 |
| 3.5 | Time Interval Measurement | 3-18 |
| 3.6 | Total A by B Measurement | 3-19 |
| 3.7 | Manual Totalize Measurement | 3-20 |
| 3.8 | Ratio A/B and C/B Measurements | 3-21 |
| 3.9 | Positive/Negative Pulse Width Measurements | 3-22 |
| 3.10 | Rise A/Fall A Measurements | 3-23 |
| 3.11 | Phase A rel B Measurement | 3-24 |
| 3.12 | Duty A Measurement | 3-25 |
| 3.13 | Slew A Measurement | 3-26 |
| 3.14 | Special Functions (SFs) | 3-33 |
| 3.15 | Error Codes | 3-35 |
| 3.16 | Non-Vol Memory Locations | 3-37 |
| 4.1 | IEEE-488-1978 Standard Interface Subset Capability | 4-4 |
| 4.2 | 1995/1996 GPIB Addresses and Talk/Listen Codes | 4-9 |
| 4.3 | Addressed and Universal Commands | 4-12 |
| 4.4 | Measurement and "One-Time" Output Formats | 4-16 |
| 4.5 | Basic 23-Byte Output Format | 4-18 |
| 4.6 | Alpha Header Output Codes | 4-19 |
| 4.7 | High Speed Data (ASCII) Output | 4-20 |
| 4.8 | Status Byte Format | 4-21 |
| 4.9 | Valid Terminators | 4-22 |
| 4.10 | Counter Initialize Code | 4-22 |
| 4.11 | Numerical Input Format | 4-23 |
| 4.12 | Measurement Function Codes | 4-24 |
| 4.13 | Predefined (Forced) Front-Panel Settings | 4-27 |
| 4.14 | Valid Channels for External Arming/Gating | 4-28 |
| 4.15 | Math Codes | 4-29 |
| 4.16 | Memory Codes | 4-29 |
| 4.17 | Statistics Codes | 4-30 |
| 4.18 | Gate/Delay Codes | 4-31 |
| 4.19 | Input Control Codes | 4-32 |
| 4.20 | Arming Codes | 4-33 |
| 4.21 | Learn Codes | 4-33 |
| 4.22 | Measurement Mode Codes | 4-33 |
| 4.23 | Miscellaneous Codes | 4-34 |
| 4.24 | Calibration Codes | 4-36 |
| 4.25 | GPIB Error Messages and Codes | 4-37 |
| 5.1 | Signal Lines and Functions | 5-5 |
| 6.1 | Required Test Equipment for Performance Tests | 6-2 |
| 6.2 | Self Test | 6-3 |
| 6.3 | Input A Sensitivity Performance Test, I | 6-4 |
| 6.4 | Input A Sensitivity Performance Test, II | 6-5 |
| 6.5 | Input B Sensitivity Performance Test, I | 6-6 |
| 6.6 | Input B Sensitivity Performance Test, II | 6-7 |
| 6.7 | Input C Sensitivity Performance Test (1996) | 6-8 |
| 6.8 | Period A Performance Test | 6-9 |
| 6.9 | Time Interval A→B Performance Test | 6-10 |

# LIST OF ILLUSTRATIONS


| Figure | Title | Page |
|---|---|---|
| 1.1 | Models 1995/1996 Universal Timer/Counter (1996 Shown) | viii |
| 2.1 | Fixed-Mount Angle-Bracket Detail | 2-2 |
| 2.2 | Rear Corner Foot, Side Panel, and Handle Detail | 2-4 |
| 2.3 | Loading the Alignment Blocks | 2-5 |
| 2.4A/B | Slide-Mount and Bracket Assembly | 2-7 |
| 2.5 | Rear End Slide-Mount Rack Dimensions | 2-9 |
| 2.6 | Slide-Mount and Instrument Assembly (with inset) | 2-11 |
| 2.7 | Rear-Panel Input (Option 01) Installation | 2-14 |
| 2.8 | Option 04E Installation | 2-15 |
| 2.9 | AC Line Voltage Selection | 2-17 |
| 3.1 | Trigger Level Setting | 3-27 |
| 4.1 | GPIB Connector (Rear Panel) | 4-1 |
| 4.2 | Interface Signal Pin Assignments | 4-2 |
| 4.3 | Handshake Sequence | 4-6 |
| 4.4 | Handshake Flow Chart | 4-7 |
| 5.1 | Simplified Overall Block Diagram | 5-4 |
| 5.2 | Simplified Block Diagram for Channel A/B | 5-8 |
| 5.3 | Input Switch Circuitry for AC/DC and Attenuator | 5-9 |
| 5.4 | Start/Stop Buffer Amplifier Stage | 5-10 |
| 5.5 | Level Shifting and Hysteresis Control | 5-12 |
| 5.6 | Simplified Schematic for the START DAC | 5-13 |
| 5.7 | Simplified Schematic for the Auto-Trigger Start Circuitry | 5-15 |
| 5.8 | Simplified Block Diagram for Channel C (1996) | 5-16 |
| 5.9 | Simplified Diagram for the Measurement Logic Block | 5-19 |
| 5.10 | Simplified Schematic for the Synchronization Circuitry | 5-19 |
| 5.11 | Simplified Diagram of the TEC Interpolator | 5-21 |
| 5.12 | Simplified Schematic for the Display Board | 5-23 |
| 5.13 | Simplified Schematic for the Microprocessor Block | 5-27 |
| 5.14 | Simplified Diagram for the External Arming/Gating Block | 5-30 |
| 5.15 | Simplified Schematic for the Internal Gate Timer | 5-32 |
| 5.16 | Simplified Diagram for the External Frequency Multiplier Block | 5-33 |
| 5.17 | Input Circuit and Pulse Generator | 5-34 |
| 5.18 | Phase-Locked Loop-Controlled Oscillator | 5-35 |
| 5.19 | External Reference Detector | 5-36 |
| 5.20 | Simplified Block Diagram for Channel D | 5-37 |
| 5.21 | Simplified Diagram for the GPIB Block | 5-38 |
| 6.1 | Internal Reference Adjustment Setup | 6-24 |

| Section | Title | Page |
|---|---|---|
| 4 | SYSTEM OPERATION | 4-1 |
| 4.1 | General Purpose Interface Bus | 4-1 |
| 4.1.1 | Introduction | 4-1 |
| 4.2 | GPIB Description | 4-2 |
| 4.2.3 | GPIB Handshake | 4-5 |
| 4.3 | GPIB Address Assignment | 4-8 |
| 4.4 | Interface Message Repertoire and Response | 4-11 |
| 4.4.1 | Introduction | 4-11 |
| 4.4.2 | Listen and Talk Address Commands | 4-11 |
| 4.4.3 | Addressed and Universal Commands | 4-11 |
| 4.5 | GPIB Operating Modes | 4-14 |
| 4.5.1 | Introduction | 4-14 |
| 4.5.2 | Talk-Only Mode | 4-14 |
| 4.5.3 | Addressed Mode | 4-15 |
| 4.6 | Output Message Format (Talker) | 4-15 |
| 4.6.1 | Introduction | 4-15 |
| 4.7 | Service Request (SRQ) Status Byte | 4-20 |
| 4.7.1 | Introduction | 4-20 |
| 4.8 | Input Commands (Listener) | 4-21 |
| 4.8.1 | Introduction | 4-21 |
| 4.8.2 | Device-Dependent Commands | 4-22 |
| 4.9 | GPIB Errors | 4-37 |
| 5 | THEORY OF OPERATION | 5-1 |
| 5.1 | Introduction | 5-1 |
| 5.2 | Functional Blocks | 5-1 |
| 5.2.2 | Overall Functional Operation | 5-2 |
| 5.3 | Theory of Operation by Block | 5-5 |
| 5.3.1 | Introduction | 5-5 |
| 5.3.2 | Channel A/B Block | 5-7 |
| 5.3.3 | Channel C Block | 5-15 |
| 5.3.4 | Measurement Logic Block | 5-17 |
| 5.3.5 | Display/Keyboard Block | 5-21 |
| 5.3.6 | Microprocessor Block | 5-24 |
| 5.3.7 | Power Supply Block | 5-28 |
| 5.3.8 | External Arming/Gating Block | 5-28 |
| 5.3.9 | Internal Gate Timer Block | 5-30 |
| 5.3.10 | External Reference Multiplier Block | 5-32 |
| 5.3.11 | Channel D Block | 5-36 |
| 5.3.12 | GPIB Block | 5-37 |
| 6 | MAINTENANCE | 6-1 |
| 6.1 | Performance Tests | 6-1 |
| 6.2 | Required Equipment for Performance Tests | 6-1 |
| 6.3 | Performance Test Procedures | 6-3 |
| 6.4 | Calibration | 6-22 |
| 6.5 | Required Equipment for Calibration | 6-22 |
| 6.6 | Calibration Procedure | 6-22 |
| 6.7 | Verification Procedure | 6-23 |
| 6.8 | Internal Reference Adjustment | 6-23 |
| 6.8.3 | Reference Oscillator Frequency Check | 6-24 |
| 6.8.4 | Adjustment Procedure | 6-24 |
| 7 | DRAWINGS | 7-1 |
| 8 | PARTS LIST | 8-1 |

# TABLE OF CONTENTS


| Section | Title | Page |
|---|---|---|
| 1 | GENERAL INFORMATION | 1-1 |
| 1.1 | Introduction | 1-1 |
| 1.2 | Summary | 1-1 |
| 1.3 | Specifications | 1-1 |
| 1.4 | Safety | 1-17 |
| 1.5 | Product Support | 1-17 |
| 1.6 | General Description | 1-17 |
| 1.6.2 | Special Functions | 1-17 |
| 1.6.3 | GPIB Interface | 1-17 |
| 1.6.4 | Models 1995/1996-02M | 1-17 |
| 1.7 | Options | 1-17 |
| 2 | INSTALLATION & PREPARATION FOR USE | 2-1 |
| 2.1 | Introduction | 2-1 |
| 2.2 | Unpacking and Inspection | 2-1 |
| 2.3 | Reshipment Instructions | 2-1 |
| 2.4 | Bench Operation | 2-1 |
| 2.5 | Equipment Rack Installation | 2-1 |
| 2.5.2 | Fixed-Mount Option 60 Installation | 2-1 |
| 2.5.3 | Slide-Mount Option 65 Installation | 2-3 |
| 2.6 | Miscellaneous Option Installation | 2-12 |
| 2.6.1 | Rear-Panel Input Option 01 | 2-12 |
| 2.6.2 | High-Stability Oven Oscillator Option 04E | 2-15 |
| 2.7 | Power Connections | 2-16 |
| 2.7.2 | Line Voltage Selection | 2-16 |
| 2.7.3 | Power Cord and Grounding | 2-17 |
| 2.8 | Storage and Temperature | 2-18 |
| 2.9 | Functional Check | 2-18 |
| 2.9.1 | Introduction | 2-18 |
| 3 | LOCAL OPERATION | 3-1 |
| 3.1 | Introduction | 3-1 |
| 3.2 | General Operating Information | 3-1 |
| 3.2.2 | Power-On and Self Test | 3-1 |
| 3.2.3 | Home State | 3-1 |
| 3.2.4 | Main Display | 3-2 |
| 3.2.5 | Keyboard Organization | 3-2 |
| 3.3 | Panel Descriptions | 3-3 |
| 3.3.1 | Front Panel Features | 3-3 |
| 3.3.2 | Rear Panel Features | 3-14 |
| 3.4 | Operating Procedures | 3-15 |
| 3.4.1 | Measurement Functions | 3-15 |
| 3.4.2 | Trigger Level Setting | 3-27 |
| 3.4.3 | Gate Time and Resolution | 3-29 |
| 3.4.4 | Delay Mode | 3-29 |
| 3.4.5 | Arming/Gating Selection | 3-30 |
| 3.4.6 | Math Function (R-X)Y/Z | 3-30 |
| 3.4.7 | Statistical Functions/(n) Samples | 3-31 |
| 3.4.8 | Special Functions | 3-32 |
| 3.4.9 | Error Codes | 3-35 |

# AMENDMENT

## SLIDE RACK-MOUNT KIT INSTALLATION INSTRUCTIONS

## NOVEMBER, 1987

In recent slide rack-mount kits, the front and rear rack-brackets are the same size and each has only one screw slot. Otherwise, the installation procedure remains as described in the manual.

# AMENDMENT

## RACAL-DANA MODEL 1995/6. PUBLICATION NO. 980599

## RACAL-DANA MODEL 1995/6-02M. PUBLICATION NO. 980607

February 3, 1989

1. Add to Table 7.1 - List of Supplies

   FSC : 34649
   NAME : Intel
   Santa Clara, CA

2. Correct Motherboard Parts List (401725 & 401725-02M)
   FSC and Mfg. P/N for U28.

   FSC : 34649
   MFG. P/N : 8254-2

6. Page 8-7, 404389 Channel C Parts List:

   Ref(erence) Desig(nator)s R9 and R11:

   a. Change Racal-Dana P/N to "R-20-5786".

   b. Change resistor value to "270 ohm".

   c. Change Manu(facturers) P/N to "MCR18-270-5PCT".

7. Page 8-16, 401725 Motherboard Parts List:

   Add R52 and R53, Racal-Dana P/N 000511,

   RES, CARBON, 510 ohm, 5%, 1/4 W,

   FSC: 81349 MFG. P/N: RC07GF511J

8. Page 8-37, 404386, Oscillator Assembly Parts List:

   Ref(erence) Desig(nator) "J4" should be "J14".

9. Page 8-38, 401822, Doubler Parts List:

   Ref(erence) Desig(nator) "58" should be "68".

# AMENDMENT

**Racal-Dana Model 1995/1996**
**Instruction Manual**
**Publication No. 980599**
**January 5, 1989**

1. Add the following subassemblies to the Drawings section:

   a. Insert Change Page 7-48, 404293, Bottom Cover Assembly.

   b. Insert Change Page 7-49, 404183, Rack Slide Kit.

2. Add the following Parts Lists for the above two assemblies:

   a. Insert Change Page 8-39, 404293, Bottom Cover Assembly.

   b. Insert Change Page 8-40, 404183, Rack Slide Kit.

3. Page 7-9. Schematic, Channel C (Zone D4-6):

   a. Change "L2" to "R9".

   b. Change "L3" to "R11".

   c. Change "L4" to "R15".

4. Page 8-5, 404332 Chassis Parts List:

   a. Ref(erence) Desig(nator) "9" should be "4".

   b. Ref(erence) Desig(nator) "12":

      Change Racal-Dana and Manu(facturers) P/N to "454762".

   c. Ref(erence) Desig(nator) "14":

      Change Racal-Dana and Manu(facturers) P/N to "454765".

5. Page 8-6, 404389 Channel C Parts List:

   Ref(erence) Desig(nator) C23:

   a. Change Racal-Dana P/N to "R-21-1788".


   b. Change Manu(facturers) P/N to "VJL206A120JF".

AMENDMENT TO

1995/6 INSTRUCTION MANUAL
PUBLICATION NO. 980599

April 28, 1989

1. Page 8-18, Correct manufacturers part number for U12.
Should be: SN74LS148N



401858 PCB ASSY,*RU OSC PWR SUPPLY

| REF DESIG | RACAL-DANA P/N | DESCRIPTION | FSC | MANUFACTURER'S P/N |
|---|---|---|---|---|
| C1 | 110225 | CAP, AL. ELECT., 2200 UF, 50V | 05397 | SME50T222M18X40LL |
| C2 | 110225 | CAP, AL. ELECT., 2200 UF, 50V | 05397 | SME50T222M18X40LL |
| C3 | 110126 | CAP, TANTA, 6.8UF, 35V, 20 PERCENT | 05397 | T355F685M035AS |
| C4 | 110143 | CAP, TANTA, 1 UF, 35V, 20 PERCENT | 05397 | T355A105M035AS |
| CR1 | 210004 | DIODE, SILICON | 81349 | 1N4004 |
| CR2 | 210004 | DIODE, SILICON | 81349 | 1N4004 |
| CR3 | 210004 | DIODE, SILICON | 81349 | 1N4004 |
| CR4 | 210004 | DIODE, SILICON | 81349 | 1N4004 |
| CR5 | 210004 | DIODE, SILICON | 81349 | 1N4004 |
| CR6 | 210004 | DIODE, SILICON | 81349 | 1N4004 |
| J21 | 601218 | CONNECTOR, PWR, PLUG, 6-PIN | 00779 | 9-350258-1 |
| R1 | 000241 | RES, CARBON, 240 OHM, 5 PERCENT, 1/4W | 81349 | RC07GF241J |
| R2 | 001275 | RES, CARBON, 3.3K, 1/2W, 5PCT | 81349 | RC20GF332J |
| R3 | 040260 | POT, CERMET, 1K, 20PCT | 73138 | 72XW1K |
| T1 | 300106 | TRANSFORMER, 24V, 2A | 95075 | L050-1-524 |
| U1 | 230982 | IC, LINEAR, 338 REGULATOR | 27014 | LM338K |
| (9)4 | 610777 | CABLE TIE | 16956 | 08-432 |
| (11)1 | 411858 | PCB, RUBIDIUM OSC P.S.(UNLOADED) | 21793 | 411858 |
| (12)1 | 600796 | HEATSINK, TESTER, T03-T066 | 53894 | 425GI |
| (13)1 | 600842 | INSULATOR, MICA | 91833 | 4653 |
| (14)A/R | 500009 | TUBING, SHRINK,. 12 ID, BLK | 29005 | RNF-100-1-1/8 |
| (16)4 | 610533 | NUT, PRESS, 6-32, SPLINE (4REQ'D) | 46384 | KF2-632 |
| (17)2 | 610899 | TIE, CABLE, SELF-LOCKING, 1/16X2 | 58730 | TY-232M |
| (19)2 | 615058 | SCREW, PPH, 6-32 X .312 | --- | --- |
| (20)2 | 615059 | SCREW, PPH, 6-32 X .375 | --- | --- |
| (21)4 | 617115 | WASHER, FLAT, #6 (4 REQ'D) | - | - |
| (22)4 | 617128 | WASHER, LOCK, #6, LIGHT SERIES | - | - |
| (23)A/R | 920469 | THERMAL JOINT COMPOUND | 13103 | 250 |
| (24)1 | 920804 | LABEL, HIGH VOLTAGE | 21793 | 920804 |

404565 MODULE ASSY, RU OSC


| REF DESIG | RACAL-DANA P/N | DESCRIPTION | FSC | MANUFACTURER'S P/N |
|---|---|---|---|---|
| P23 | 600379 | RECEPTACLE, 3-PIN | 27264 | 1625-3R |
| {1}1 | 455185 | HEAT SINK, RUBIDIUM OSC. | 21793 | 455185 |
| {2}2 | 455186 | COVER, RUBIDIUM OSC. HOUSING (2 REQ'D) | 21793 | 455186 |
| {3}2 | 455188 | SIDE PLATE, OSC. HOUSING (2 REQ'D) | 21793 | 455188 |
| {5}A/R | 500002 | TUBING, SHRINK, .187 ID | 8C945 | M23053/5-105-0 |
| {6}A/R | 500064 | TUBING, SHRINK, .093 ID, BLK | 29005 | RNF-100-1-3/32 |
| {7}A/R | 500254 | CABLE, COAXIAL, 50 OHM | 92194 | 9178B |
| {9}A/R | 520111 | WIRE, TEFLON STRANDED, 20G, | - | - |
| {10}A/R | 520333 | WIRE, TEFLON STRANDED, 20GA, BRN | - | - |
| {11}A/R | 520444 | WIRE, TEFLON COATED, STRANDED, 20GA, YEL | - | - |
| {12}A/R | 520555 | WIRE, TEFLON STRANDED, 20 GA, GRN | --- | --- |
| {15}3 | 600381 | TERMINAL PIN, FEMALE, .062 (3 REQ'D) | 27264 | 02-06-1855 |
| {17}4 | 610777 | CABLE TIE | 16956 | 08-432 |
| {19}1 | 611052 | KEY, POLARIZING, PLUG | 00779 | 87077-1 |
| {20}2 | 611053 | TERMINAL, CRIMP | 00779 | 530553-2 |
| {21}1 | 611056 | CONNECTOR, CABLE, 5-PIN | 21793 | 611056 |
| {22}1 | 611178 | TIE WRAP, SCREW MOUNT | 06915 | W1TS-18MR |
| {24}2 | 615047 | SCREW, PPH, 4-40 X .625 (2 REQ'D) | - | - |
| {26}4 | 615541 | SCREW, PFH, 4-40X.250 | - | - |
| {27}8 | 615543 | SCREW, PFH, 4-40X.375 | - | - |
| {29}4 | 615705 | SCREW, PFL, 4-40 X .500 (4 REQ'D) | - | - |
| {31}2 | 617102 | WASHER, FLAT, #4, LIGHT SERIES | - | - |
| {33}6 | 617127 | WASHER, LOCK, #4, LIGHT SERIES | - | - |
| {35}A/R | 920469 | THERMAL JOINT COMPOUND | 13103 | 250 |
| {37}1 | 921090 | RUBIDIUM OSCILLATOR | 55761 | FRS-814-102-1 |

404469 OSC., RUBIDIUM STAND. OPTION 04R

| REF DESIG | RACAL-DANA P/N | DESCRIPTION | FSC | MANUFACTURER'S P/N |
|---|---|---|---|---|
| J23 | 600545 | PLUG, 3 PIN | 27264 | 1625-3P-1 |
| P23 | 601216 | CONNECTOR, PWR, HOUSING, 6 PIN | 00779 | 1-35-0241-6 |
| (1)1 | 401858 | PCB ASSY, RUBIDIUM OSC. P.S. | 21793 | 401858 |
| (3)1 | 404565 | MODULE ASSY, RUBIDIUM OSCILLATOR | 21793 | 404565 |
| (5)1 | 455187 | MOUNTING BRACKET, RUBIDIUM OSC. | 21793 | 455187 |
| (6)1 | 455189 | MOUNTING PLATE, POWER SUPPLY | 21793 | 455189 |
| (8)A/R | 500002 | TUBING, SHRINK, .187 ID | 8C945 | M23053/5-105-0 |
| (9)A/R | 500133 | CABLE, SHIELDED, 22GA, 3 COND. | 70903 | 8771 |
| (11)A/R | 520111 | WIRE, TEFLON STRANDED, 20G, | - | - |
| (12)A/R | 520333 | WIRE, TEFLON STRANDED, 20GA, BRN | - | - |
| (13)A/R | 520444 | WIRE, TEFLON COATED, STRANDED, 20GA, YEL | - | - |
| (14)A/R | 520555 | WIRE, TEFLON STRANDED, 20 GA, GRN | --- | --- |
| (16)3 | 600380 | TERMINAL PIN, MALE, .062 (3 REQ'D) | 27264 | 1854 |
| (19)5 | 601212 | TERMINAL, CRIMP, 18-26 | 00779 | 641294-1 |
| (21)3 | 601696 | WIRE SPLICE, 22-18GA (3 REQ'D) | 53387 | 558 |
| (23)4 | 610777 | CABLE TIE | 16956 | 08-432 |
| (25)4 | 615045 | SCREW, PPH, 4-40X.437 | - | - |
| (28)4 | 615556 | SCREW, PFH, 6-32 X .250 | --- | --- |
| (30)6 | 616252 | SCREW, PPH, SEMS ASSY, 4-40X.312 | 78189 | 63-040545-25 |
| (32)4 | 617102 | WASHER, FLAT, #4, LIGHT SERIES | - | - |
| (34)4 | 617127 | WASHER, LOCK, #4, LIGHT SERIES | - | - |

List of Suppliers

| FSC | SUPPLIER |
|---|---|
| 00779 | AMP, INC.<br>HARRISBURG, PA |
| 05397 | UNION CARBIDE CORP.<br>(MATERIALS SYSTEMS DIV.)<br>CLEVELAND, OHIO |
| 06915 | RICHCO PLASTIC CO.<br>CHICAGO, IL. |
| 13103 | THERMALLOY, INC.<br>DALLAS, TEXAS |
| 16956 | DENNISON MFG. CO.<br>FRAMINGTON, MA. |
| 21793 | RACAL-DANA INSTRUMENTS INC.<br>IRVINE, CA |
| 27014 | NATIONAL SEMI-CONDUCTOR CORP.<br>SANTA CLARA, CA |
| 27264 | MOLEX PRODUCTS CO.<br>DOWNERS GROVE, IL. |
| 29005 | STORM PRODUCTS CO.<br>LOS ANGELES, CA. |
| 46384 | PENN ENG. & MFG. CORP<br>DOYLESTOWN, PA. |
| 53387 | THREE (3) M CO.<br>ST. PAUL, MINNESOTA |
| 53894 | AHAM, INC.<br>RANCHO CALIFORNIA, CA. |
| 55761 | EFRATOM<br>IRVINE, CA. |
| 58730 | THOMAS & BETTS CO.<br>ELIZABETH, NJ. |
| 70903 | BELDEN CORP.<br>CHICAGO, ILLINOIS |
| 73138 | BECKMAN INSTRUMENTS<br>FULLERTON, CA. |
| 78189 | ILLINOIS TOOL WORKS, INC.<br>(SHAKEPROOF DIV.)<br>ELGIN, ILLINOIS |
| 81349 | MILITARY SPECIFICATION |
| 8C945 | ELECTRONIZED CHEMICAL CORP.<br>BALTIMORE, MD.<br>DIVISION OF 3M (FSC 53387) |
| 91833 | KEYSTONE ELECTRONICS CORP.<br>NEW YORK, NY. |
| 92194 | ALPHA WIRE<br>ELIZABETH, NEW JERSEY |
| 95075 | ENSIGN COIL CO.<br>BURRIDGE, IL. |

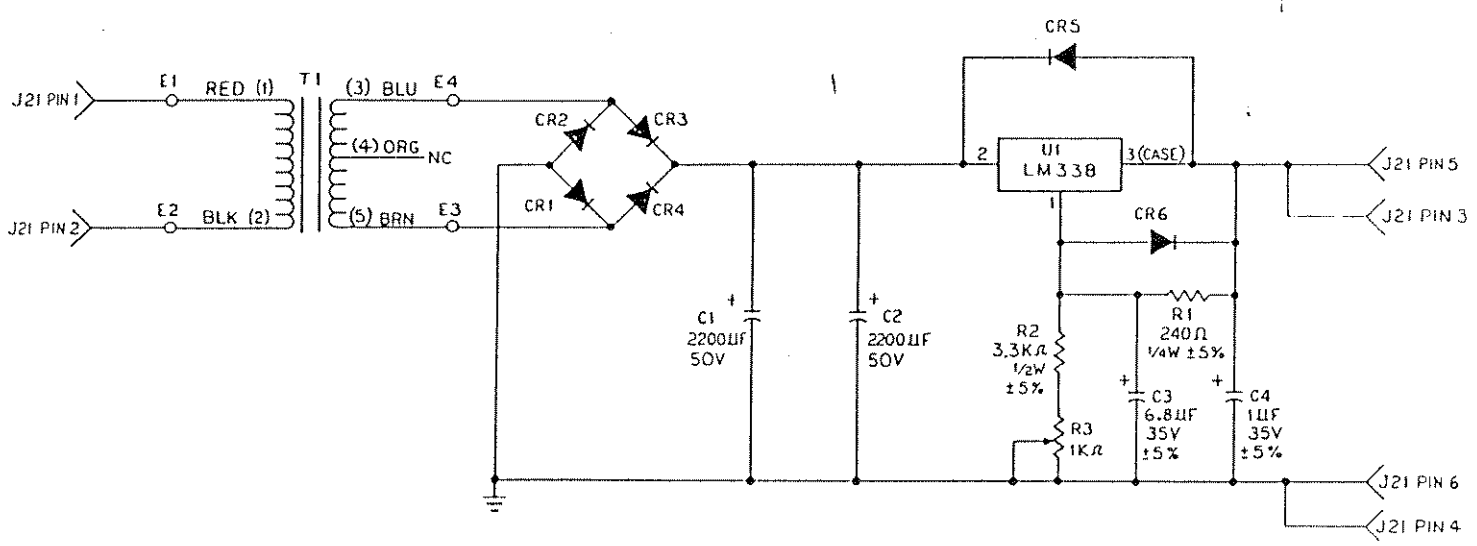


1. DIODES ARE IN4004

NOTES UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE

THIS DRAWING AND SPECIFICATION, WHETHER OR NOT PUBLISHED, ARE THE PROPERTY OF RACAL-DANA INSTRUMENTS INC. AND SHALL NOT BE USED OR REPRODUCED IN WHOLE OR IN PART WITHOUT THE WRITTEN PERMISSION OF RACAL-DANA INSTRUMENTS INC. THEY SHALL NOT BE LOANED, COPIED OR DISCLOSED TO A THIRD PARTY OR USED IN ANY MANNER DETRIMENTAL TO THE INTEREST OF RACAL-DANA INSTRUMENTS INC. EXCEPT AS MAY BE SPECIFICALLY AUTHORIZED BY AGREEMENT WITH RACAL-DANA INSTRUMENTS INC. THIS RESTRICTION DOES NOT LIMIT THE RIGHT TO USE INFORMATION OBTAINED FROM ANOTHER SOURCE.

RACAL-DANA Instruments Inc.


4 GOODYEAR, IRVINE, CALIFORNIA 92714


DOCUMENT TITLE

SCHEM, RU. OSC. PWR SUPPLY

| SIZE | CODE IDENT NO. | DOCUMENT NO. | REV |
|---|---|---|---|
| C | 21793 | 431858 | A |

SCALE — SHEET 1 OF 1

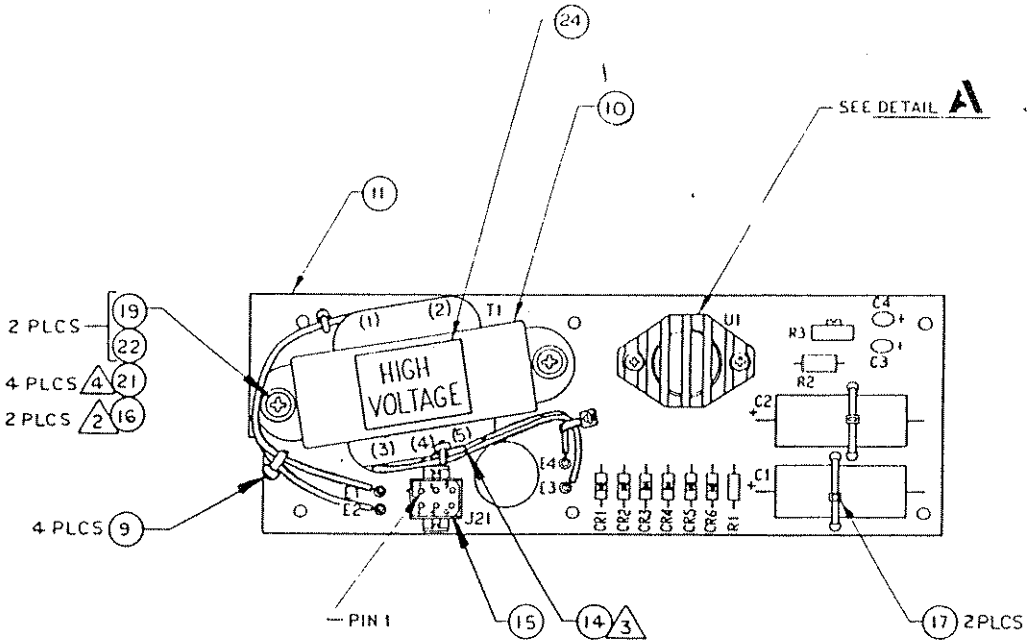

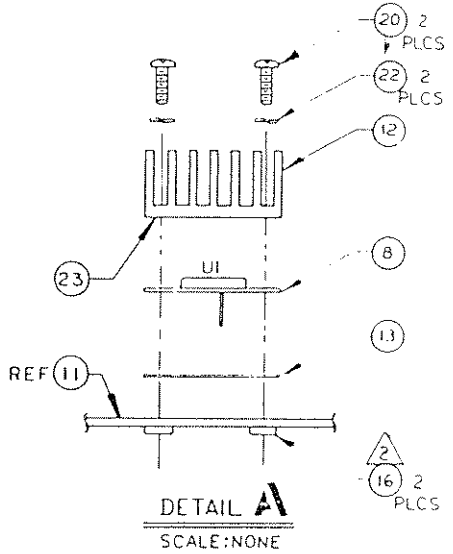
4. INSTALL ITEM 21 (FLAT WASHERS) 4 PLCS, 1 EACH BETWEEN ITEM 22 (LOCKWASHER) AND ITEM 10 (TRANSFORMER) AND 1 EACH BETWEEN ITEM 10 (TRANSFORMER) AND ITEM 11 (PCB).

3. CUT TRANSFORMER LEAD NO. 4 TO APPROX 1 INCH LG. COVER END WITH SLEEVING, ITEM 14.

2. INSTALL PRESS NUTS ON CIRCUIT SIDE.

1. REF. SCHEMATIC 431858.

NOTES UNLESS OTHERWISE SPECIFIED


PROPRIETARY NOTICE
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF RACAL-DANA INSTRUMENTS INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF RACAL-DANA INSTRUMENTS INC. IS PROHIBITED. ANY USE OF THIS DRAWING ON THE SPECIFICATION OF ANY EQUIPMENT OR PROCESS INTENDED FOR MANUFACTURE OR SALE BY OTHERS IS PROHIBITED EXCEPT AS MAY BE AUTHORIZED BY THE WRITTEN CONTRACT WITH RACAL-DANA INSTRUMENTS INC.


RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714


DOCUMENT TITLE
PCB ASSY, RU OSC PWR SUPPLY

| SIZE | CODE IDENT NO. | DOCUMENT NO. | REV |
|---|---|---|---|
| C | 21793 | 401858 | A |


SCALE FULL | SHEET 1 OF 3

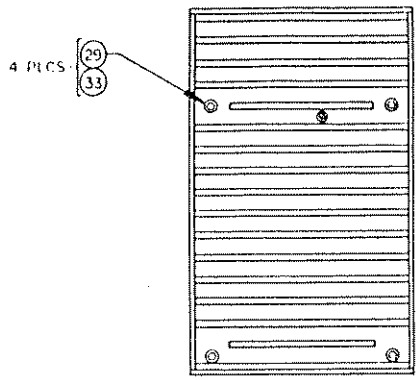

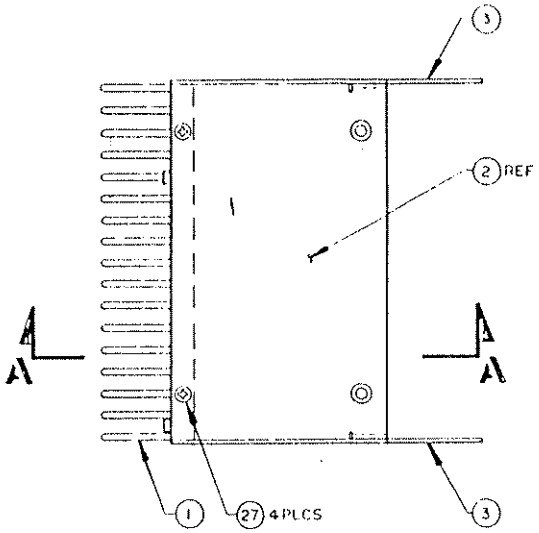


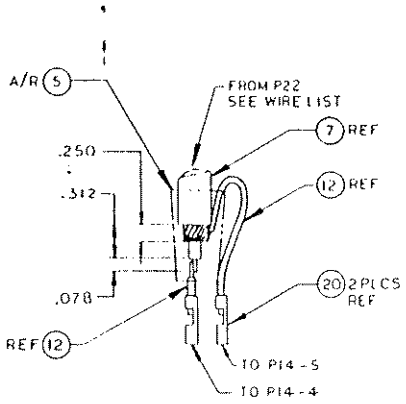
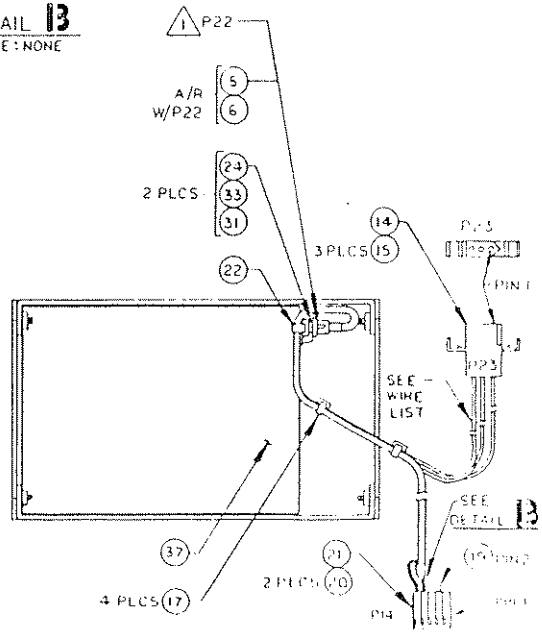


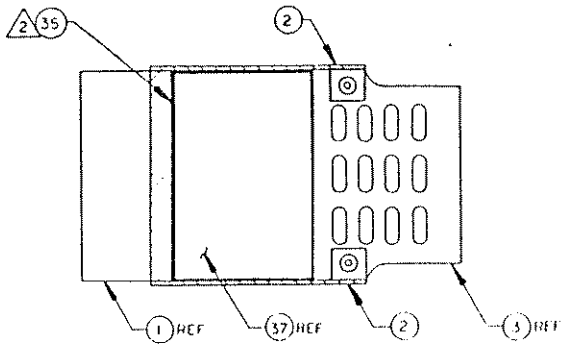

DETAIL B
SCALE: NONE

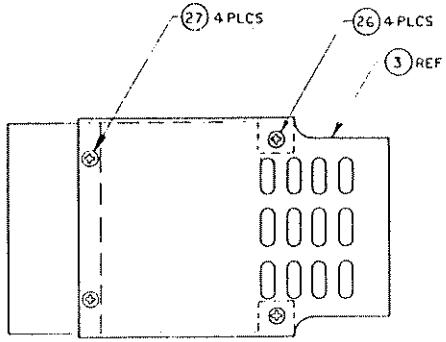


SECTION A-A
SCALE: NONE




2 APPLY EVEN COATING OF THERMAL COMPOND (ITEM # 35) TO BACK OF OSCILLATOR (ITEM # 37) PRIOR TO MOUNTING TO HEATSINK (ITEM # 1).

1 CONNECTOR (P22) IS SUPPLIED WITH OSCILLATOR (ITEM 37).

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREIN DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC. AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED, RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC. THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT FROM RACAL DANA INSTRUMENTS INC.


RACAL-DANA Instruments Inc.
4 GOODYEAR IRVINE CALIFORNIA 92714

DOCUMENT TITLE
MODULE ASSY, RU OSC

| SIZE | CODE IDENT NO | DOCUMENT NO | REV |
|---|---|---|---|
| D | 21793 | 404565 | A |

SCALE FULL | SHEET 1 OF 4

Table 3.9 - Positive/Negative Pulse Width Measurements

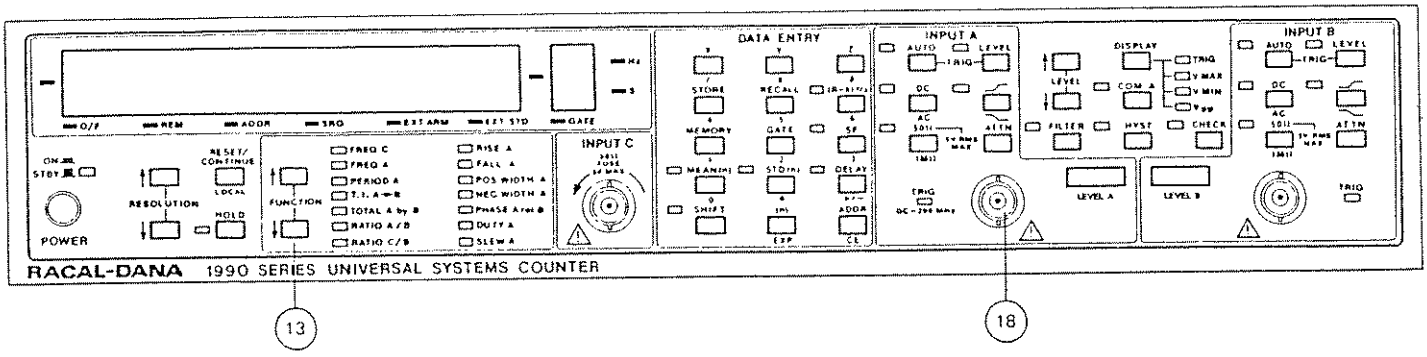



1. Turn power on.
2. Select either POS WIDTH A or NEG WIDTH A using FUNCTION keys (13).
3. Connect measurement signal to INPUT A (18).

NOTE:


All other controls are set automatically.

Table 3.8 - Ratio A/B and C/B Measurements

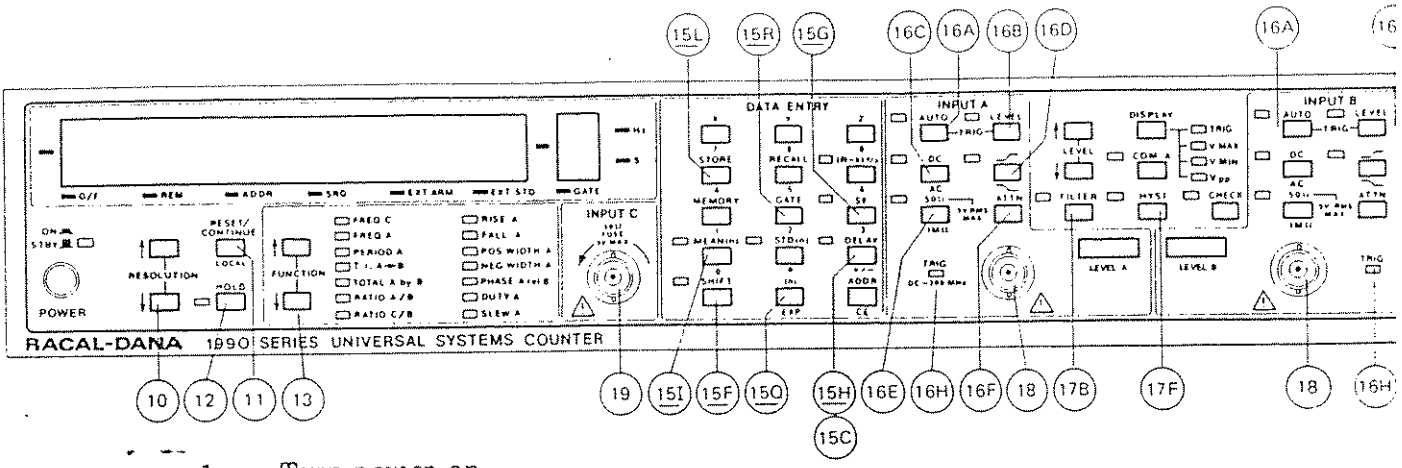


1. Turn power on.
2. Select RATIO A/B or RATIO C/B (1996 only) using FUNCTION keys (13).
3. Set AC/DC coupling (16C), input impedance (16E), and slope(s) (16D) as required.
4. Select the X10 or X50 input attenuation (16F) if desired. Attenuation setting is automatic in the Auto-Trigger mode.
5. Connect one signal to INPUT B (18) and the other to INPUT A (18) or INPUT C (19). The lower frequency signal should be connected to INPUT B.
6. If a specific gate time is desired, enter it (in seconds, using the exponentia format for small values) using key sequence <value> SHIFT (15F) STORE (15L) GATE (15R). Skip step 7 if step 6 is being used to enter the gate time.
7. Use the RESOLUTION ↑↓keys (10) to select the required display resolution.
8. If RATIO A/B is selected, either set trigger levels A/B manually using ke sequence <value> +/- (15C) TRIG-LEVEL (16B), or select AUTO-TRIG A an B (16A). Check that Inputs A and B TRIG LEDs (16H) flash. For RATIO C/B, trigger level for only INPUT B may be specified.
9. If a frequency below 100 kHz is to be measured in the presence of high frequency noise, select the filter (17B).
10. Set the input hysteresis (17F) at low or high as required.
11. If external arming/gating is needed, connect the arming/gating signal and selec the special function number. Enable special functions. Refer to Subsectio 3.4.8 for special function numbers and procedures.
12. Select the Hold mode (12) for single-shot measurements. Press th RESET (11) while in Hold to trigger a new measurement.

Table 3.7 - Manual Totalize Measurement

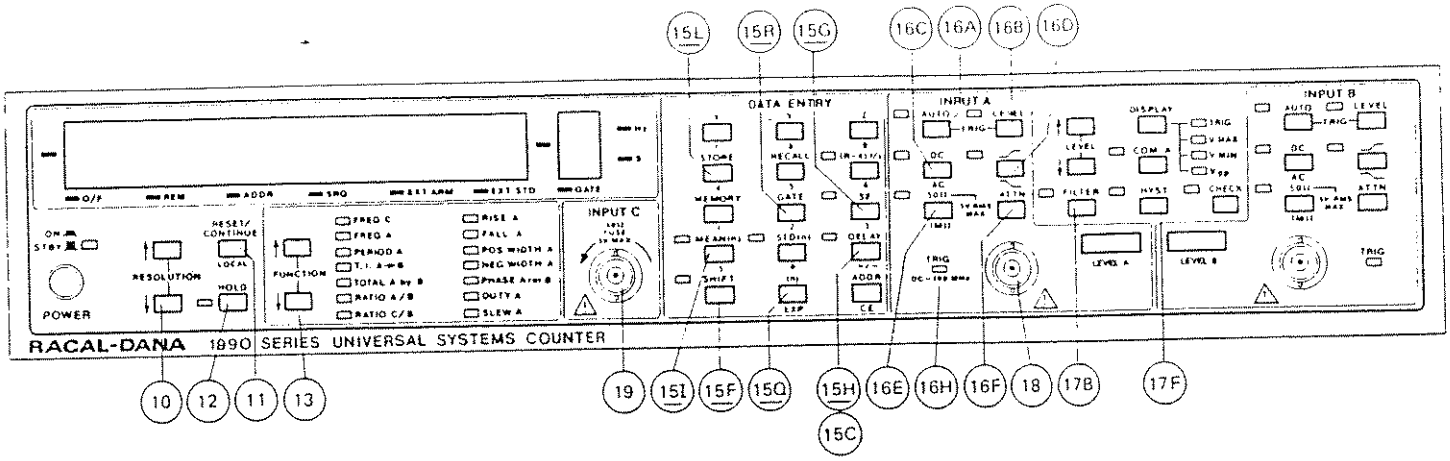


1. Turn power on. Select TOTAL A by B using the FUNCTION keys (13).

2. Set AC/DC coupling (16C), input impedance (16E), and slope (16D) for Input A as required.

3. Select the X10 or X50 input attenuation (16F) if desired. Attenuation setting is automatic in the Auto-Trigger mode.

4. Enter Special Function 61 using key sequence 61 SHIFT (15F) STORE (15L) and SF (15G). Enable special functions using key sequence SHIFT (15F) SF (15G).

5. Connect the measurement signal to INPUT A (18).


6. Either set trigger level A manually using key sequence <value> +/- (15C) TRIG-LEVEL (16B), or select AUTO-TRIG A (16A). Check that Input A TRIG LED (16H) flashes.

7. If a frequency below 100 kHz is to be measured in the presence of high-frequency noise, select the filter (17B).

8. Set the input hysteresis (17F) at low or high as required. The high setting may be used to filter low-frequency noise.

9. Operate the HOLD key (12). Verify that the count stops. The displayed result is cumulative over successive measurement cycles. Use the RESET key (11) to clear the display. Check that the main display blanks before triggering new measurement cycles.

Table 3.6 - Total A by B Measurement

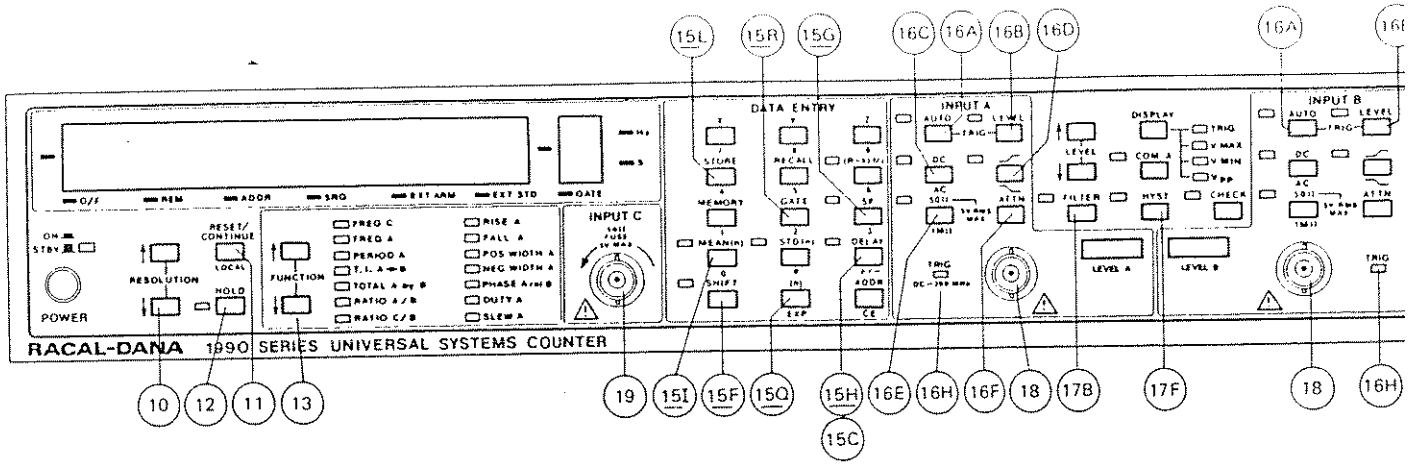


1. Turn power on.

2. Select TOTAL A by B using FUNCTION keys (13).

3. Set AC/DC coupling (16C), input impedance (16E), and slopes (16D) as required.

4. Select the X10 or X50 input attenuation (16F) if desired. Attenuation setting is automatic in the Auto-Trigger mode.

**NOTE:**

Input A slope selects the slope of the events to be totalized. The measurement period, however, starts on Input B slope and stops on the opposite slope.

5. Connect the signal to be totalized to INPUT A (18) and the control signal to INPUT B (18).

6. Either set the trigger levels A/B manually using key sequence <value>+/- (15C) TRIG-LEVEL (16B), or select AUTO-TRIG A/B (16A). Check that Inputs A and B TRIG LEDs (16H) flash.

7. If a frequency below 100 kHz is to be measured in the presence of high-frequency noise, select the filter (17B).


8. Set the input hysteresis (17F) at low or high as required. The high setting may be used to filter low-frequency noise.

9. If internal delayed arming of the stop circuit is required, enter the delay into memory using key sequence <value> SHIFT (15F) STORE (15L) DELAY (15H). Enable the delay using key sequence SHIFT (15F) DELAY (15H).

10. If external arming/gating is needed, connect the arming/gating signal and store the special function number. Enable special functions. Refer to Subsection 3.4.8 for special function numbers and procedures.

11. Select the Hold mode (12) if necessary. Press the RESET (11) while in Hold to trigger a new measurement.

Table 3.5 - Time Interval Measurement

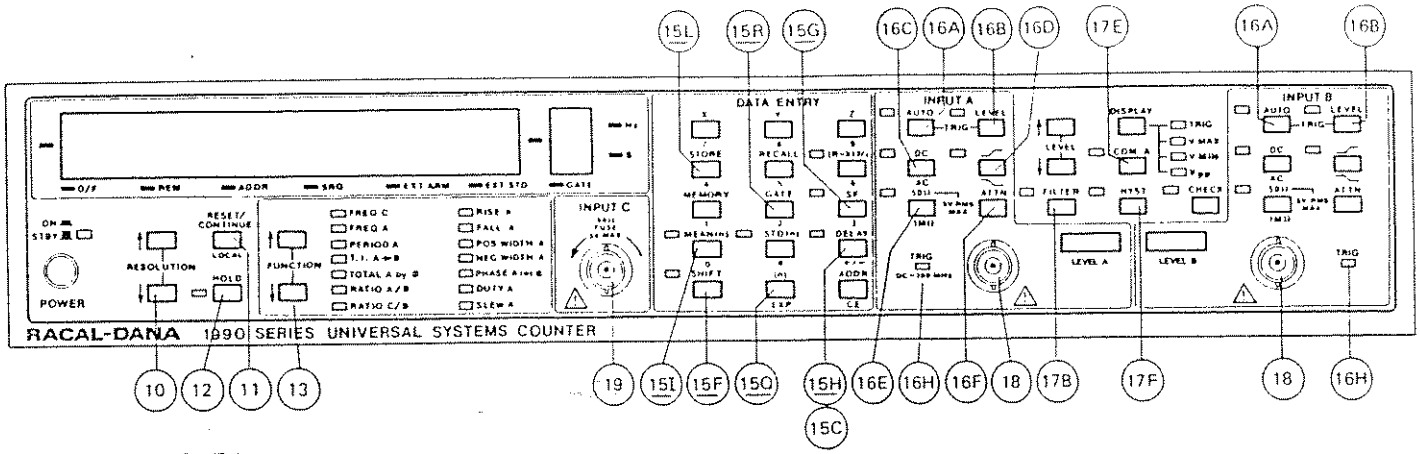


1. Turn power on.

2. Select TI A→B using FUNCTION keys (13).

3. Set AC/DC coupling (16C), input impedance (16E), and slope (16D) for Inputs A/B as required. If the start and stop signals are from the **same source**, select COM A (17E).

4. Select the X10 or X50 input attenuation (16F) if desired. Attenuation setting is automatic in the Auto-Trigger mode.

5. Connect the start signal to INPUT A (18). If a separate source for the stop signal is used, connect the stop signal to INPUT B (18).

6. Either set the trigger levels A/B manually using key sequence <value>+/- (15C) TRIG-LEVEL (16B), or select AUTO-TRIG A/B (16A). Check that Inputs A and B TRIG LEDs (16H) flash.


7. Set the input hysteresis (17F) at low or high as required.

8. If internal delayed arming of the stop circuit is required, enter the delay into memory using key sequence <value> SHIFT (15F) STORE (15L) DELAY (15H). Enable the delay using key sequence SHIFT (15F) DELAY (15H).

9. If external arming/gating is needed, connect the arming/gating signal and store the special function number. Enable special functions. Refer to Subsection 3.4.8 for special function numbers and procedures.


10. Select the Hold mode (12) for single-shot measurements. Press the RESET (11) while in Hold to trigger a new measurement.

Table 3.4 - Period Measurement

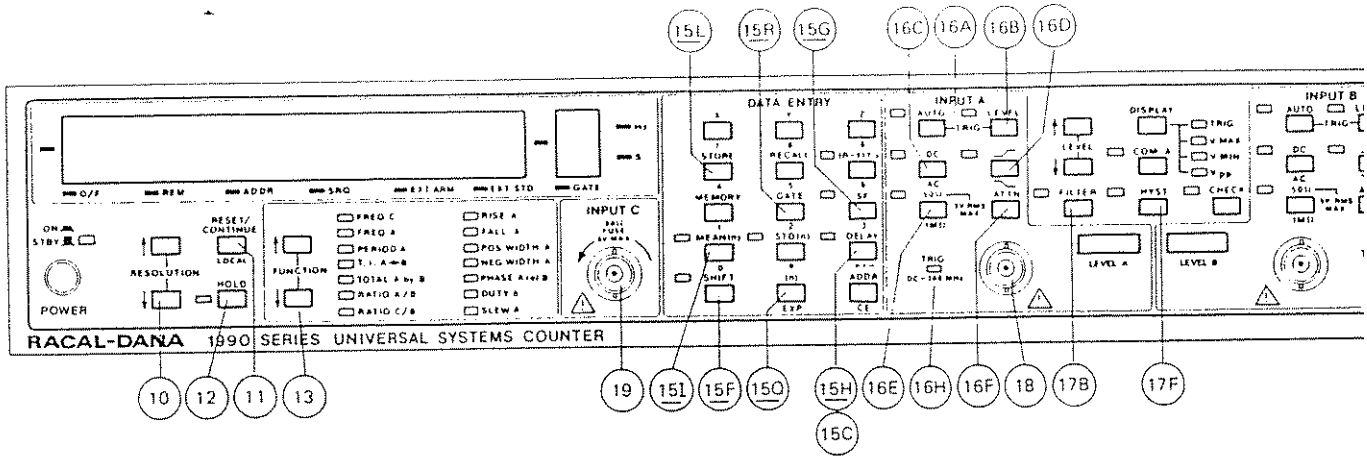


1. Turn power on.
2. Select PERIOD A using FUNCTION keys (13).
3. Set the AC/DC coupling (16C) and input impedance (16E), as required.
4. Select the X10 or X50 input attenuation (16F) if desired. Attenuation setting is automatic in the Auto-Trigger mode.
5. Connect the measurement signal to INPUT A (18).
6. If a specific gate time is desired, enter it (in seconds using the exponential format for small values) using key sequence <value> SHIFT (15F) STORE (15L) GATE (15R). Skip step 7 if step 6 is being used to enter the gate time.
7. Use the RESOLUTION ↑↓ keys (10) to select the required display resolution and gate time if step 6 was not used.
8. Either set the trigger level manually using key sequence <value> +/- (15C) TRIG-LEVEL (A) (16B), or select AUTO-TRIG (A) (16A). Check that Input A TRIG LED (16H) flashes.
9. If a frequency below 100 kHz is to be measured in the presence of high frequency noise, select the FILTER (17B).
10. Set the input hysteresis (17F) at low or high as required. The high setting may be used to filter low-frequency noise.
11. If external arming/gating is needed, connect the arming/gating signal and store the special function number. Enable special functions. Refer to Subsection 3.4.8 for special function numbers and procedures.
12. Select the Hold mode (12) for single-shot measurements. Press the RESET (11) while in Hold to trigger a new measurement.

Table 3.3 - Frequency Measurement

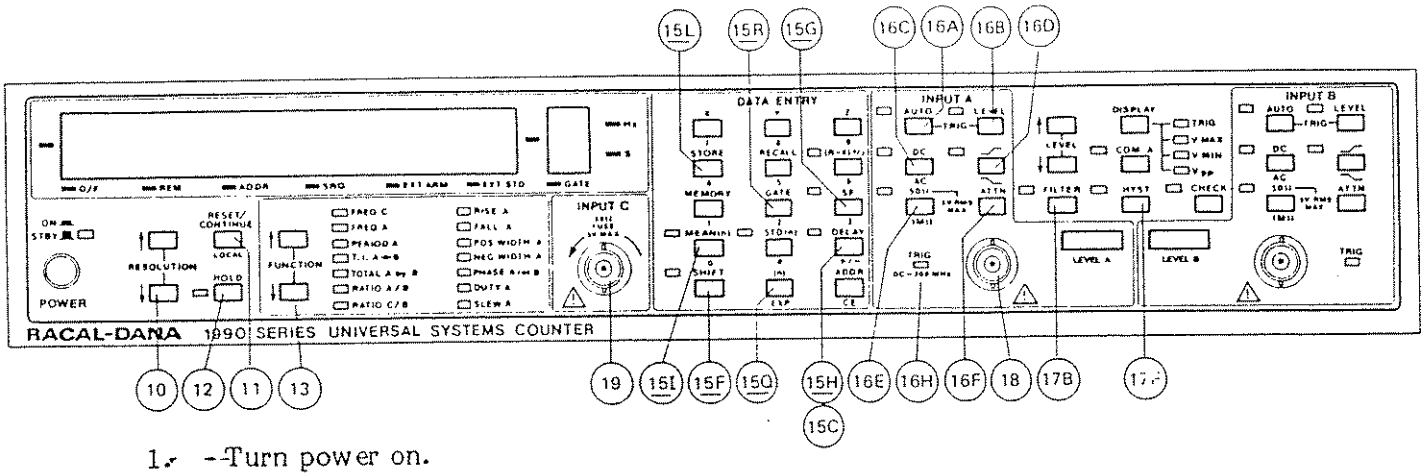


1. Turn power on.

2. Select FREQ A or FREQ C (1996 only) using FUNCTION keys (13).

3. If FREQ A is selected, set the AC/DC coupling (16C) and input impedance (16E) as required.

4. Select the X10 or X50 input attenuation (16F) if desired. Attenuation setting is automatic in the Auto-Trigger mode.

5. Connect the measurement signal to INPUT A (DC to 200 MHz) (18) or INPUT C (40 MHz to 1.3 GHz) (19).

6. If a specific gate time is desired, enter it (in seconds, using the exponential format for small values) using key sequence <value>SHIFT (15F) STORE (15L) GATE (15R) . Skip step 7 if step 6 is being used to enter the gate time.

7. Use the RESOLUTION ↑↓ keys (10) to select the required display resolution and gate time if step 6 was not used.

8. If FREQ A is selected, either set the trigger level manually using key sequence <value>+/- (15C) TRIG-LEVEL (A) (16B), or select AUTO-TRIG (A) (16A). Check that Input A TRIG LED (16H) flashes.

9. If a frequency below 100 kHz is to be measured in the presence of high frequency noise, select the FILTER (17B).

10. Set the input hysteresis (17F) at low or high as required. The high setting may be used to filter low-frequency noise.

11. If external arming/gating is needed, connect the arming/gating signal and select the special function number. Enable special functions. Refer to Subsection 3.4.8 for special function numbers and procedures.

12. Select the Hold mode (12) for single-shot measurements. Press the RESET (11) while in Hold to trigger a new measurement.

Table 3.2 - Rear-Panel Controls and Connectors (Con't)

| Reference | Item | Function/Description |
|---|---|---|
| 8 | INPUT A Connector (Option 01) | Rear-panel Input A |
| 9 | INPUT B Connector (Option 01) | Rear-panel Input B |
| 10 | INPUT C Connector (Option 01)<br>**NOTE:**<br>Front-panel INPUTS A, B, and C are not connected when Option 01 is installed. Input is only via the rear-panel connectors | Rear-panel Input C |
| 11 | GPIB Connector | GPIB (IEEE-STD-488-1978) connector |
| 12 | Power Input Module: | |
| 12A | AC Power Input Socket | Standard connector for the AC power supply |
| 12B | Line Voltage Selector | Small printed circuit card inserted in module to select correct AC line voltage. The selected voltage (100, 120, 220, or 240 VAC) is visible through the small window |
| 12C | Line Fuse | A glass cartridge Slow-Blow fuse. Line fuse ratings for available line voltages are shown on the upper-left of the rear-panel |
| 13 | OSC ADJ | Adjustment of the internal reference frequency standard |

## 3.4 OPERATING PROCEDURES

### 3.4.1 Measurement Functions

3.4.1.1 Tables 3.3-3.13 with figures describe the basic bench functions of the 1995/1996.


**NOTE:**

Review as required Table 3.1, References 18 and 19, for use of Inputs A, B, and C, including Special Function 21 permitting interchange of Inputs A and B. See also Subsection 3.4.8 and Table 3.14 for special functions.

3.3.2 Rear-Panel Features

3.3.2.1 Refer to Table 3.2 and figure at top. They indicate and briefly describe the rear-panel controls and connectors.

Table 3.2 - Rear-Panel Controls and Connectors

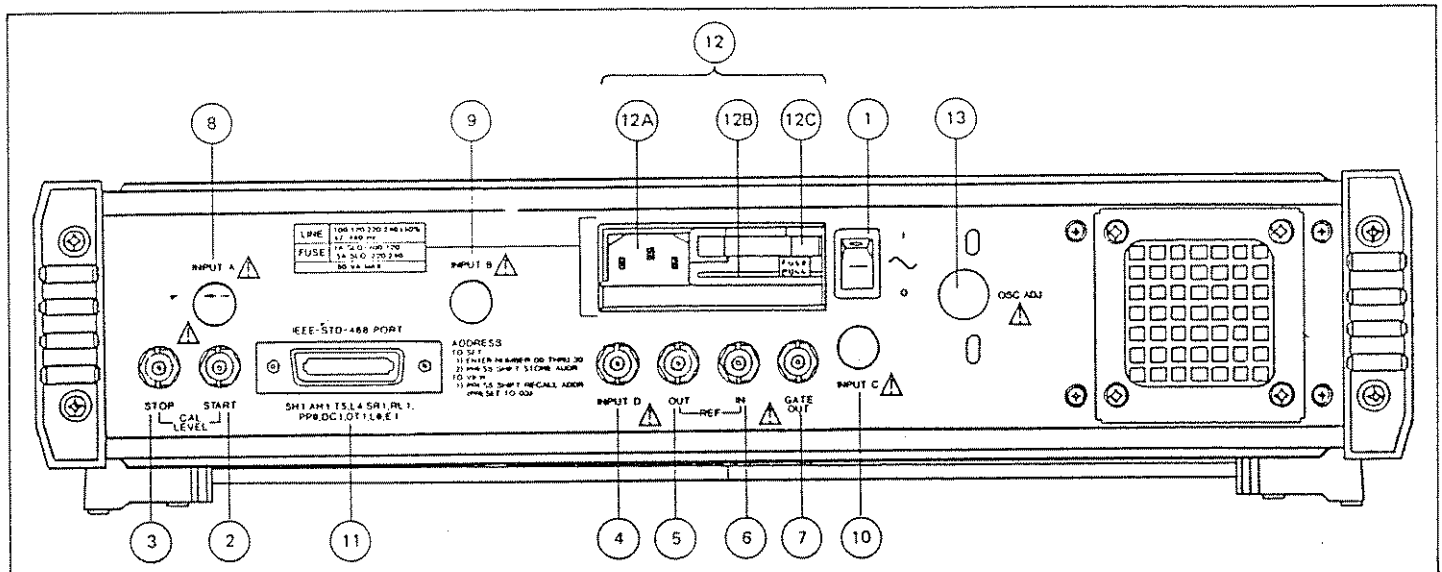


| Reference | Item | Function/Description |
|---|---|---|
| 1 | Main Power Switch | Enables Standby if the front panel POWER (ON/STBY) button is out (▮). This supplies power to the internal frequency standard (timebase). Also, switches counter ON/OFF if front-panel POWER (ON/STBY) button is in (▬) |
| | NOTE: Connectors (2) through (10) are BNCs | |
| 2 | START-CAL LEVEL Connector | Output: analog signal equivalent of the Start trigger level (for calibration only) |
| 3 | STOP-CAL LEVEL Connector | Output: analog signal equivalent of the Stop trigger level (for calibration only) |
| 4 | INPUT D Connector | Input: external arming/gating control signal |
| 5 | REF-OUT Connector | Output: 10 MHz internal reference |
| 6 | REF-IN Connector | Input: external reference frequency (1,5, or 10 MHz at 1V rms) |
| 7 | GATE OUT Connector | Output: negative-going TTL-compatible signal equivalent to the gate signal |


Table 3.1 - Front-Panel Controls, Indicators, and Connectors (Con't)

| Reference | Item | Function/Description |
|---|---|---|
| (19) | INPUT C (1996 only) | BNC connector high-frequency INPUT C (40 MHz-1.3 GHz range). INPUT C is used with INPUT B for Ratio C/B. Special Function 21 provides Ratio C/A capability. Protection against excessive signal levels (>5V rms) is provided by a fuse in the input socket |

**NOTE:**

In the above table, LEDs shown in the "Item" column with an asterisk (*) are described in their lit condition. Certain LEDs are associated with toggle keys; their lit condition is specified.

Table 3.1 - Front-Panel Controls, Indicators, and Connectors (Con't)

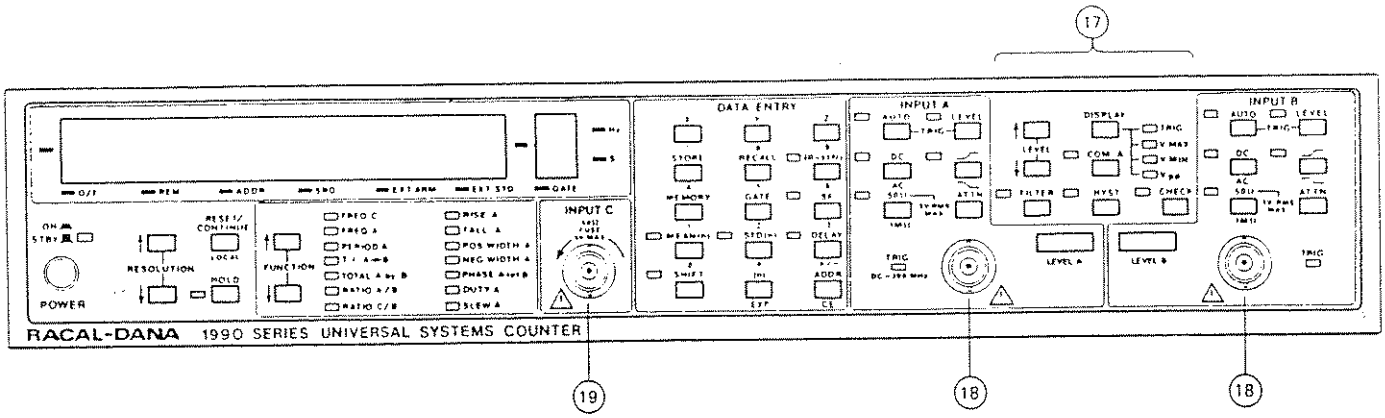


| Reference | Item | Function/Description |
|---|---|---|
| 17C | CHECK Key/LED | Verifies the proper operation of front-panel LEDs and executes internal self-tests. Pressing the CHECK key lights the CHECK LED immediately. However, the CHECK key must be held down about 3 seconds for all LEDs to light, all 8's to display, and the self-test functions to be executed. Release of the CHECK key extinguishes all LEDs and displays the word "TEST", indicating the unit is under self-test. When all self testing is completed the unit displays 5 MHz. Toggle the CHECK key to turn off the CHECK LED. Momentarily pressing the CHECK key will simply cause the counter to measure an internal 5 MHz test waveform |
| 17D | DISPLAY Key/LEDs:<br><br>TRIG *<br>V MAX *<br>V MIN *<br>Vpp * | Scrolls through TRIG, V MAX, V MIN, and Vpp. Values are displayed in LEVEL A and LEVEL B<br><br>Current trigger level<br>Maximum peak voltage<br>Minimum peak voltage<br>Voltage peak-to-peak |
| 17E | COM A Key/ LED | Toggles Input A also to B. LED lit in COM A mode |
| 17F | HYST Key/LED | Toggles the hysteresis level for Inputs A and B between a low (25 mVpp) and high (100 mVpp) setting. HYST LED lights in the higher setting |
| 18 | INPUT(s) A and B | BNC connectors for INPUT(s) A and B. INPUT A is used for all functions except Frequency C (1996 only). INPUT B is used with INPUT A for Time Interval, Ratio A/B, Totalize, and Phase measurements. INPUT B is used with INPUT C for Ratio C/B. Special Function 21 internally exchanges INPUTS A and B (providing, e.g., FREQ B, etc. measurement capability) |

Table 3.1 - Front-Panel Controls, Indicators, and Connectors (Con't)


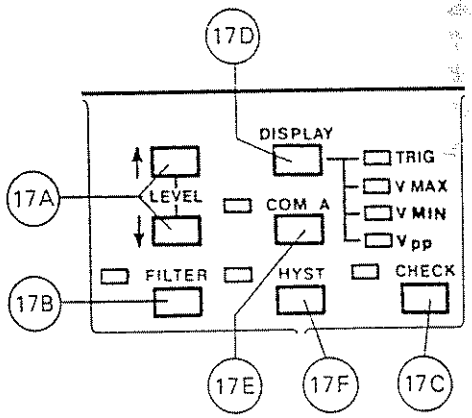
| Reference | Item | Function/Description |
|---|---|---|
| (16D) | ⎍/⎏ Keys/LEDs* | Toggle between positive (⎍) and negative (⎏) trigger slopes of Inputs A and B. LED lit in positive slope |
| (16E) | 50Ω/1MΩ Keys/LEDs* | Toggle between 50Ω and 1MΩ input impedance for Inputs A and B. LED lit in 50Ω mode |
| (16F) | ATTN (X1, X10, X50) Keys | Attenuation for Inputs A and B. The decimal point shifts in the LEVEL A and B displays, indicating attenuation range selected (X1=X.XX, X10=XX.X, and X50=XXX.) |
| (16G) | LEVEL A and B Displays | Indicate current trigger level (manual or auto-trigger). LEVEL A and LEVEL B also show TRIG (current trigger level), V MAX, V MIN, and Vpp when selected using the DISPLAY key (17D) |
| (16H) | TRIG LEDs/Inputs A and B | Flash to indicate input signal is triggering measurement circuits |
| (17) | INPUT CONTROL Keys/LEDs* | Control Input A and B signals<br>NOTE:<br>LEVEL ↑↓ keys have no LED indicators<br>  |
| (17A) | LEVEL ↑ ↓ Keys | Step manually-set trigger levels either up (↑) or down (↓) in increments of 0.01, 0.1, or 1 volts for the X1, X10, and X50 attenuation ranges, respectively. Use key sequence TRIG-LEVEL LEVEL↑↓ TRIG-LEVEL |
| (17B) | FILTER Key/LED | Toggles a low-pass input filter (100 kHz cutoff frequency) for Inputs A and B. LED lights when filter is on. Special Functions 28 and 29 permit separate filter selection for Inputs A and B, respectively |

Table 3.1 - Front-Panel Controls, Indicators, and Connectors (Con't)

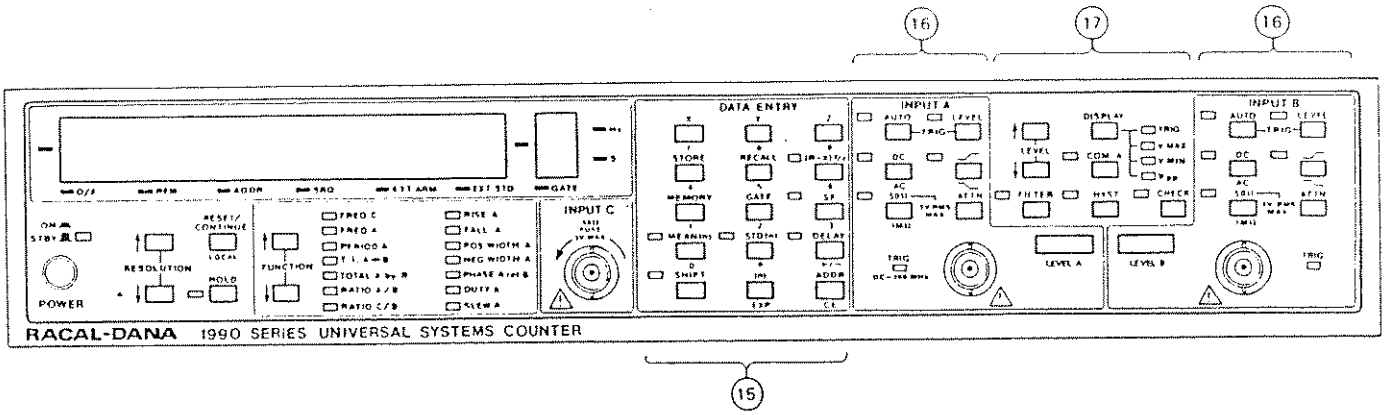


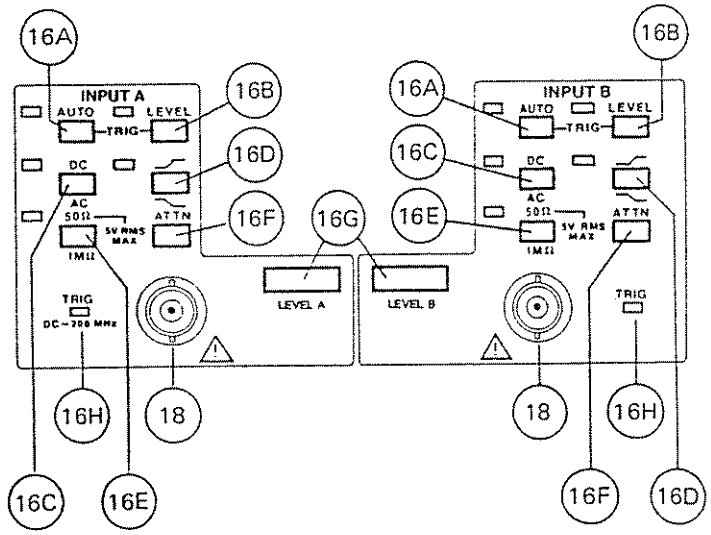

| Reference | Item | Function/Description |
|---|---|---|
| 15P | X/Y/Z Keys | Store and recall Math computation constants (X, Y and Z) |
| 15Q | ADDR Key | Store and recall the counter's GPIB address. Address procedure is shown on rear panel (see Table 3.2) to the right of the GPIB connector |
| 15R | (n) Key | Store and recall of (n) samples for statistics. Range of (n) is 2 to 9999 |
| 15S | GATE Key | Store and recall gate time |
| 16 | INPUT A and B Keys/ LEDs |  |
| 16A | AUTO-TRIG Keys/LEDs* | Automatic trigger setting and tracking for Inputs A and B |
| 16B | TRIG-LEVEL Keys/LEDs* | Manual trigger setting for Inputs A and B |
| 16C | DC/AC Keys/LEDs* | Toggle between DC/AC input coupling for Inputs A and B. LED lit when DC-coupled |

Table 3.1 - Front-Panel Controls, Indicators, and Connectors (Con't)

| Reference | Item | Function/Description |
|---|---|---|
| 15E | CE Key | Clears current display number and entry |
| 15F | Shifted Key Functions:<br>SHIFT Key/LED* | Enables any shifted key function. After pressing a shifted key function (except for STORE, RECALL, and MEMORY), counter immediately returns to its unshifted state with the SHIFT LED turning off |
| 15G | SF Key/LED* | Enables all selected special functions (SHIFT SF). Also stores (<NN> SHIFT STORE SF) and recalls (SHIFT RECALL SF) special functions. See Subsection 3.4.8 for details |
| 15H | DELAY Key/LED* | Enables a time-interval stop delay (SHIFT DELAY) in TI A→B. Also, stores (<value> SHIFT STORE DELAY) and recalls (SHIFT RECALL DELAY) a time-interval stop delay. Enabling a delay in a non- TI function produces an error message. Selecting a non-TI function when in delay disables DELAY and turns off the LED |
| 15I | MEAN(n) Key/LED* | Enables calculation and display of the mean (average) of (n) samples. Pressing SHIFT MEAN(n) deselects the STD(n) key if enabled. Pressing RESET restarts the period of (n) samples |
| 15J | STD (n) Key/LED* | Enables calculation and display of the standard deviation of (n) samples. Pressing SHIFT STD(n) deselects the MEAN(n) key if enabled. Pressing RESET restarts the period of (n) samples |
| 15K | (R-X) Y/Z Math Key/LED* | Selection of Math computation mode |
| 15L | STORE Key | Stores constants for math functions, gate time, time-interval delay, (n) samples, GPIB address and special functions. Used with MEMORY key to store complete measurement (i.e., machine) setups |
| 15M | RECALL Key | Recalls constants for math functions, gate time, time-interval delay, (n) samples, GPIB address and special functions and calibration. Used with MEMORY key to recall complete measurement (i.e., machine) setups |
| 15N | MEMORY Key | Store and recall complete measurement setups, memory locations 0 to 9, and calibration constants, locations 10 to 33 (see Table 3.16). Use the key sequence SHIFT STORE/RECALL MEMORY<N>. Attempted store or recall of an out-of-range number produces an error message |

Table 3.1 - Front-Panel Controls, Indicators, and Connectors (Con't)

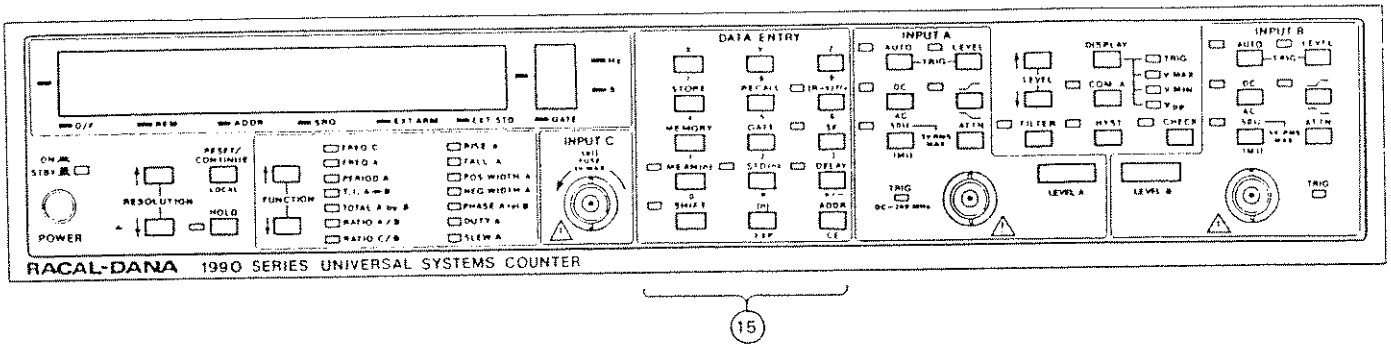

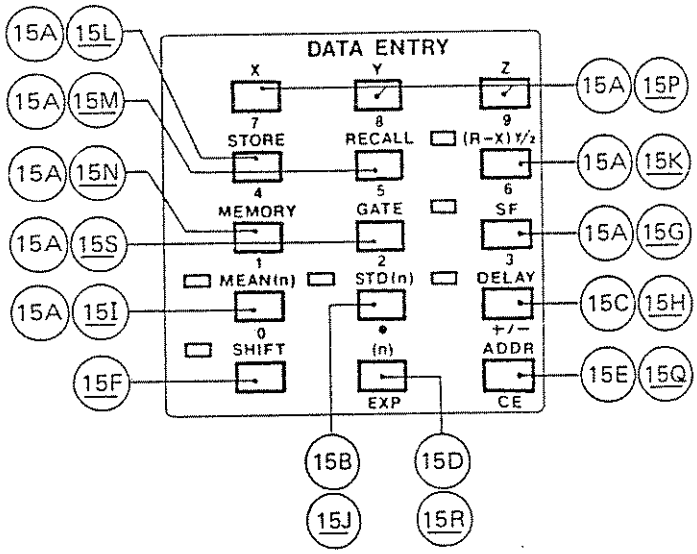

| Reference -- | Item | Function/Description |
|---|---|---|
| (15) | DATA ENTRY Keys/LEDs | Permit data entry and user interface with the 1995/1996 other than input signal conditioning and measurement functions |
| | **NOTE:** Designators for shifted key functions are underlined. Also, designator "150" is not used |  |
| | |  |
| (15A) | Unshifted Key functions: Numeric Keys (0-9) | Entry of numbers and constants for math, special functions, time-interval stop delays, trigger levels, and gate times. Also, used to recall machine setups. When a numeric key is pressed, the measurement in progress is aborted and the display shows the entered number |
| (15B) | Decimal Point (.) Key | Inserts decimal point during numeric entry |
| (15C) | Positive/Negative (+/-) Sign Key | Toggles sign of entered number (mantissa and/or exponent) between positive (no sign displayed) and negative (sign displayed) |
| (15D) | EXP Key | Changes data entry mode so that the next number entered is the exponent |

Table 3.1 - Front-Panel Controls, Indicators, and Connectors (Con't)


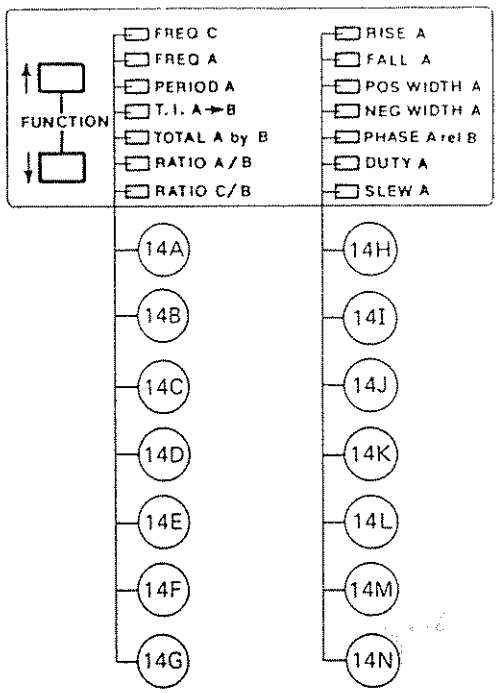
| Reference | Item | Function/Description |
|---|---|---|
| (14) | FUNCTION LEDs: | Indicate selected function   |
| (14A) | FREQ C* | Input C Frequency (1996 only) |
| (14B) | FREQ A* | Input A Frequency |
| (14C) | PERIOD A* | Input A Period |
| (14D) | TI A→B* | Time Interval (Input A for start, Input B for stop) |
| (14E) | TOTAL A by B* | Totalize (Input A events gated by Input B) |
| (14F) | RATIO A/B* | Ratio A/B (Ratio of Frequency A to Frequency B) |
| (14G) | RATIO C/B* | Ratio C/B (Ratio of Frequency C to Frequency B) |
| (14H) | RISE A* | Input A Rise Time (10% start, 90% stop trigger points) |
| (14I) | FALL A* | Input A Fall Time (90% start, 10% stop trigger points) |
| (14J) | POS WIDTH A* | Input A Positive Pulse-Width (50% trigger points) |
| (14K) | NEG WIDTH A* | Input A Negative Pulse-Width (50% trigger points) |
| (14L) | PHASE A rel B* | Phase difference (Input A relative to Input B) |
| (14M) | DUTY A* | Input A Duty Cycle |
| (14N) | SLEW A* | Input A Slew Rate (positive/negative, 20% to 80% trigger points) |

Table 3.1 - Front-Panel Controls, Indicators, and Connectors (Con't)

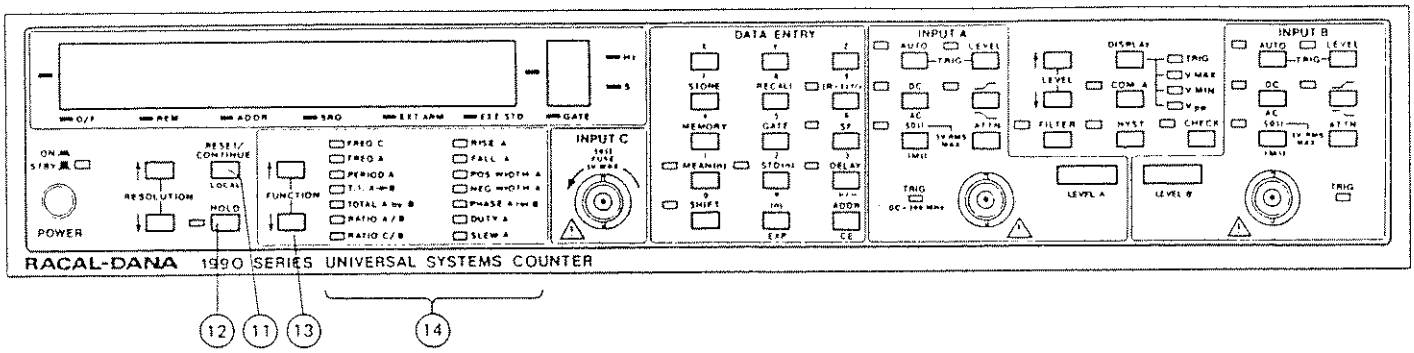



| Reference | Item | Function/Description |
|---|---|---|
| (11) | RESET/CONTINUE, LOCAL Key | This key provides the following:<br>**RESET**<br>Terminates the measurement in progress, clears the main display, and triggers a new measurement<br>**NOTE:**<br>In HOLD mode, pressing this key triggers a new measurement cycle<br>**CONTINUE**<br>Returns the counter to the measurement mode, triggers a new measurement cycle, after the display of recalled number or constant<br>**LOCAL**<br>Returns the counter to front-panel control from remote control on the GPIB, provided local lock-out has not been set |
| (12) | HOLD Key/LED | Toggles counter in and out of HOLD (single-shot measurement). LED lights in HOLD. In HOLD, the measurement in progress is completed and displayed. See NOTE under Reference (11). Special Function 61 causes the HOLD key to successively start and stop measurements for manual Totalize |
| (13) | FUNCTION Keys (▲ ▼) | Select in succession the counter's measurement function. The corresponding FUNCTION LED is lit. Function selection "wraps around" at both ends |

Table 3.1 - Front-Panel Controls, Indicators, and Connectors (Con't)

| Reference | Item | Function/Description |
|---|---|---|
| (4) | O/F LED* | Readout overflows the tenth digit of the display |
| (5) | GPIB LEDs: | |
| (5A) | REM LED* | Counter under remote control over the GPIB interface |
| (5B) | ADDR LED* | Counter is being addressed as either a talker or listener over the GPIB interface |
| (5C) | SRQ LED* | Counter has transmitted a service request over the GPIB interface |
| (6) | EXT ARM LED* | External arming is controlling the measurement start and stop points |
| (7) | EXT STD LED* | Counter is operating from an external frequency standard reference |
| (8) | GATE LED* | Measurement gate is operating, starting or stopping a measurement cycle |
| (9) | Display Units LEDs: | **NOTE:** Neither LED lights when a phase angle, ratio, totalize measurement, or a constant is displayed |
| (9A) | Hz LED* | Units in Hertz for a frequency measurement |
| (9B) | S LED* | Units in Seconds for a time measurement |
| (10) | RESOLUTION Keys (↑↓) | Step the measurement period (i.e., gate time and also the resolution) either up (↑) or down (↓). This increases or decreases the number of digits displayed. In Recall Special Function mode, the **lowest** special function number is initially displayed. Use the RESOLUTION (↑↓) keys to scroll (with wrap-around) through special function numbers on display |

Table 3.1 - Front-Panel Controls, Indicators, and Connectors

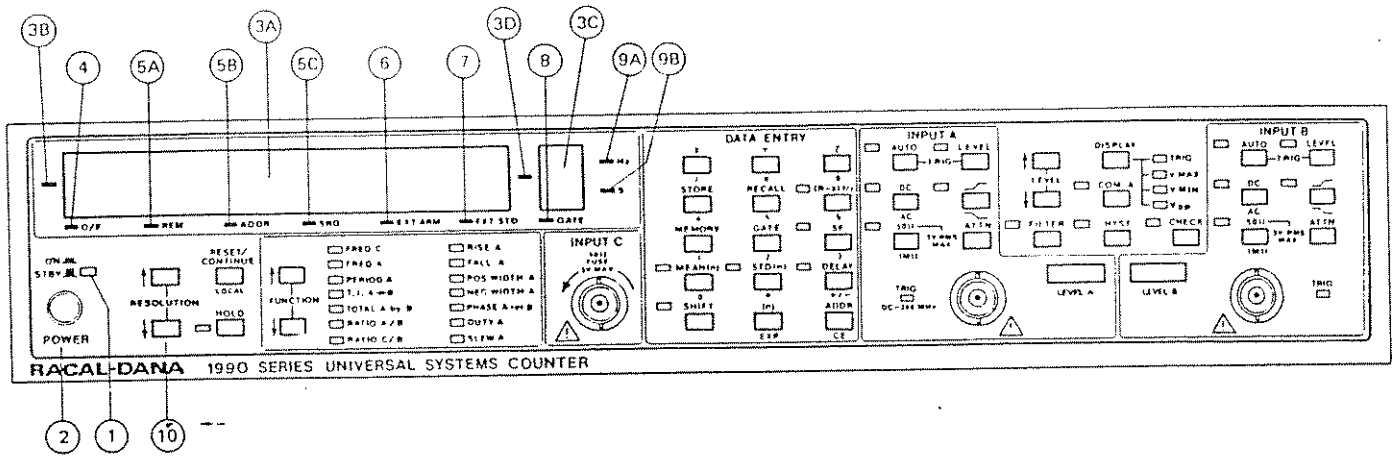


| Reference | Item | Function/Description |
|---|---|---|
| (1) | STBY LED* | In Standby. Rear-panel POWER switch is on, front-panel POWER (ON/STBY) button is out, and power is supplied only to the internal reference standard (timebase) |
| (2) | POWER (ON/STBY) Button | In ON position, power is supplied to the entire counter and the STBY LED is off |
| (3) | Measurement Display: | A 7-segment LED digital display. Uses engineering format with 10-digit mantissa, 1-digit exponent, and floating decimal point. The display shows one of the following depending on operational state:<br>_____ measurement results<br>_____ numbers for data entry<br>_____ numbers for recall from constant or function stores<br>_____ error messages<br>**NOTE:**<br>The exponent LED is blanked and should be considered zero during the following:<br>a. phase measurement<br>b. totalize measurement with less than ten digits<br>c. numeric entries not involving an exponent |
| (3A) | Mantissa Display LEDs* | Display right-justified mantissa |
| (3B) | Mantissa Sign LED* | Negative display number |
| (3C) | Exponent Display LED* | One-digit exponent number |
| (3D) | Exponent Sign LED* | Negative exponent |

## 3.3 PANEL DESCRIPTIONS

### 3.3.1 Front Panel Features

3.3.1.1 Refer to Table 3.1 and the front-panel figures. They show and describe front-pane controls, indicators, and connectors.

**NOTE:**

In the following table, LEDs shown in the "Item" column with an asterisk (*) are described in their lit condition. Certain LEDs are associated with toggle keys; their lit condition is specified.

i. Separate inputs (i.e., Common A LED is off)

j. Filter: off

k. Hysteresis: 25 mV p-p (lower value)

l. Sample(n) value: 100

m. Input A and B trigger levels: Zero (relevant only if auto-trigger is not selected)

n. Input Coupling: AC-coupled (Inputs A and B)

### 3.2.4 Main Display

3.2.4.1 Readings are displayed in engineering format with a 10-digit mantissa, 1-digit exponent, and floating decimal point. It is assumed that the reading is positive unless (1) the negative-sign LED to the left of the display is lit, or (2) a negative sign precedes the displayed mantissa. Keyboard entries are always right-justified. The largest displayed reading is 999.9999999 with a +9 exponent; the smallest number is 1.000000000 with a -9 exponent. The 1-digit exponent range is -9 to +9.

3.2.4.2 The selected function and gate time determine the number of digits displayed. Generally, the longer the gate time, the more digits displayed. The RESOLUTION (↑↓) keys are used to either step the gate time up (to 100 seconds), increasing the number of digits displayed; or down (to 200 nanoseconds), decreasing the number of digits displayed.

3.2.4.3 LED indicators for units in Hz (hertz) and S (seconds) are located at the right of the exponent display. Units for some functions are implied. For example, phase angle measurements are in degrees. Seven LEDs (O/F, REM, ADDR, SRQ, EXT ARM, EXT STD, and GATE) are situated immediately below the display (see Table 3.1).

### 3.2.5 Keyboard Organization

3.2.5.1 The front panel of the 1995/1996 is arranged logically by function into color-coded keyboard/LED groups. Refer to the front-panel figures and Table 3.1 for location and description. Listed below (left to right) are the keyboard groups with their color coding indicated in parentheses:

a. General Operating (gray)

b. FUNCTION (yellow)

c. INPUT C (1996 only-blue)

d. DATA ENTRY (brown)

e. INPUT A (blue)

f. Input Control (gray)

g. INPUT B (blue)

# SECTION 3 LOCAL OPERATION

## 3.1 INTRODUCTION

3.1.1 This section contains information for operating the 1995/1996 as a bench instrument. It provides General Operating Information, Front and Rear Panel Descriptions, and Operating Procedures.

## 3.2 GENERAL OPERATING INFORMATION

3.2.1 If the counter is being used for the first time or at a new location, ensure that the voltage selector is set for the correct local AC supply before turning on the instrument. Refer to Subsection 2.7.2, as required, for details on line voltage selection.

### 3.2.2 Power-On and Self Test

3.2.2.1 Turn on the rear power switch, placing the counter in the Standby mode. The front-panel STBY LED should be lit if the red POWER-ON button is out (▮). In Standby, power is supplied to the instrument's frequency standard (timebase). This eliminates the need for warmup each time the 1995/1996 is turned on.

3.2.2.2 Depress the POWER-ON/OFF button to its ON (▁) position. Power should now be supplied to the entire counter and the STBY LED should be off.

3.2.2.3 After powering-on, the 1995/1996 executes a programmed self-test of the major internal circuitry. This check verifies normal operation of the counter's microcomputer, counting circuitry, timebase, and ROM memory circuitry. Should a failure occur during this self-test, a numbered error is displayed.

### 3.2.3 Home State

3.2.3.1 After self-test, the counter reverts to a home state, ready for operation. The following home-state conditions are selected after "self-test":

a. AUTO-TRIG A enabled; AUTO-TRIG B disabled

b. Time Interval DELAY: 1 millisecond. (Verify using key sequence SHIFT RECALL DELAY)

c. GATE Time: ten milliseconds. (Verify using key sequence SHIFT RECALL GATE)

d. Math constants X, Y and Z: 0, 1 and 1, respectively. (The value for scale constant Z should never be zero.)

e. FREQ A

f. Slope A (positive); Slope B (negative)

g. Attenuation: X1 (Input A); X50 (Input B)

h. Input impedance: 1 MΩ

**NOTE:**

After power-on, the following home-state conditions exist: FREQ A, AUTO-TRIG A, X1, 1 MΩ, AC-coupling, Filter off, and COM A off.

g. Verify that the main display shows 10.000000 ± 1 count E6 Hz; that both the GATE and Input A TRIG LEDs flash

h. Select Input B using key sequence <21> SHIFT STORE SF SHIFT SF. Verify that the SF LED is lit

i. Using the same coaxial test lead, connect the 10 MHz REF-OUT connector to Input B's connector

j. Repeat step g for Input B

k. Toggle the SF key using key sequence SHIFT SF. The SF LED should turn off

l. Disconnect the test lead between the REF-OUT and Input B connectors

m. If the counter is Model 1996, select FREQ C. Connect the test lead between the REF-OUT and Input C connectors

n. Verify that the main display shows 10.000000 ± 1 count E6 Hz and that the GATE LED flashes

2.7.3.3 Use only AC power outlets having a protective ground for connection to the counter. DO NOT USE 2-core extension cords or 3-prong to 2-prong adapters that don't provide a protective ground connection. Connection of the power cord to the power outlet must be made in accordance with the following standard color code:

| | American | European |
|---|---|---|
| Live | Black | Brown |
| Neutral | White | Blue |
| Ground (Earth) | Green | Green/Yellow |

2.7.3.4 Also, all devices connected to or in proximity with the 1995/1996 must maintain the third-wire ground(earth) intact as set forth in current regulations.

## 2.8 STORAGE AND TEMPERATURE

**2.8.1** The 1995/1996 can be stored at temperatures ranging from -40°C to +70°C at 75% relative humidity without adverse effects to PCBs or components. The counter must be brought within its specified operating range of 0°C to +50°C before power-on.

## 2.9 FUNCTIONAL CHECK

### 2.9.1 Introduction

2.9.1.1 The following test procedure confirms whether or not the 1995/1996 is performing correctly by checking most of the counter's circuitry. This procedure should be conducted when the 1995/1996 is first put into service and after shipment to a new location.

2.9.1.2 Now perform the following procedure:

a. - Connect the 1995/1996 to a suitable AC power supply

b. Turn on the rear-panel power switch. It should illuminate. Confirm that the front-panel POWER (ON/STBY) button is out (⏻) and the STBY LED lit

c. Depress the front-panel POWER (ON/STBY) button to ON, supplying power to the entire counter. Verify that the STBY LED turns off

d. Confirm that the instrument model number "1995" or "1996" is displayed for about two seconds, and then the main display blanks

**NOTE:**

Home-state conditions for the 1995/1996 are listed in Subsection 3.2.3. Refer as required.

e. Provide a 50Ω coaxial test lead fitted with BNC connectors. This lead should be 60 cm to 1 m long

f. Using the test lead, connect the 10 MHz REF-OUT connector (see Figure 3.2) on the rear panel to Input A's connector

e. Pull the lever completely back to the right, snapping it closed

f. Replace the fuse in it holder. Line voltage settings of 100 or 120V should have a 1A Slow-Blow fuse installed; settings of 220 or 240V should have a .5A Slow-Blow fuse installed.

g. Slide the fuse cover completely to the right covering the voltage selector card and fuse. The correct line voltage designation should be visible through the window

h. Connect the power cord to the counter again

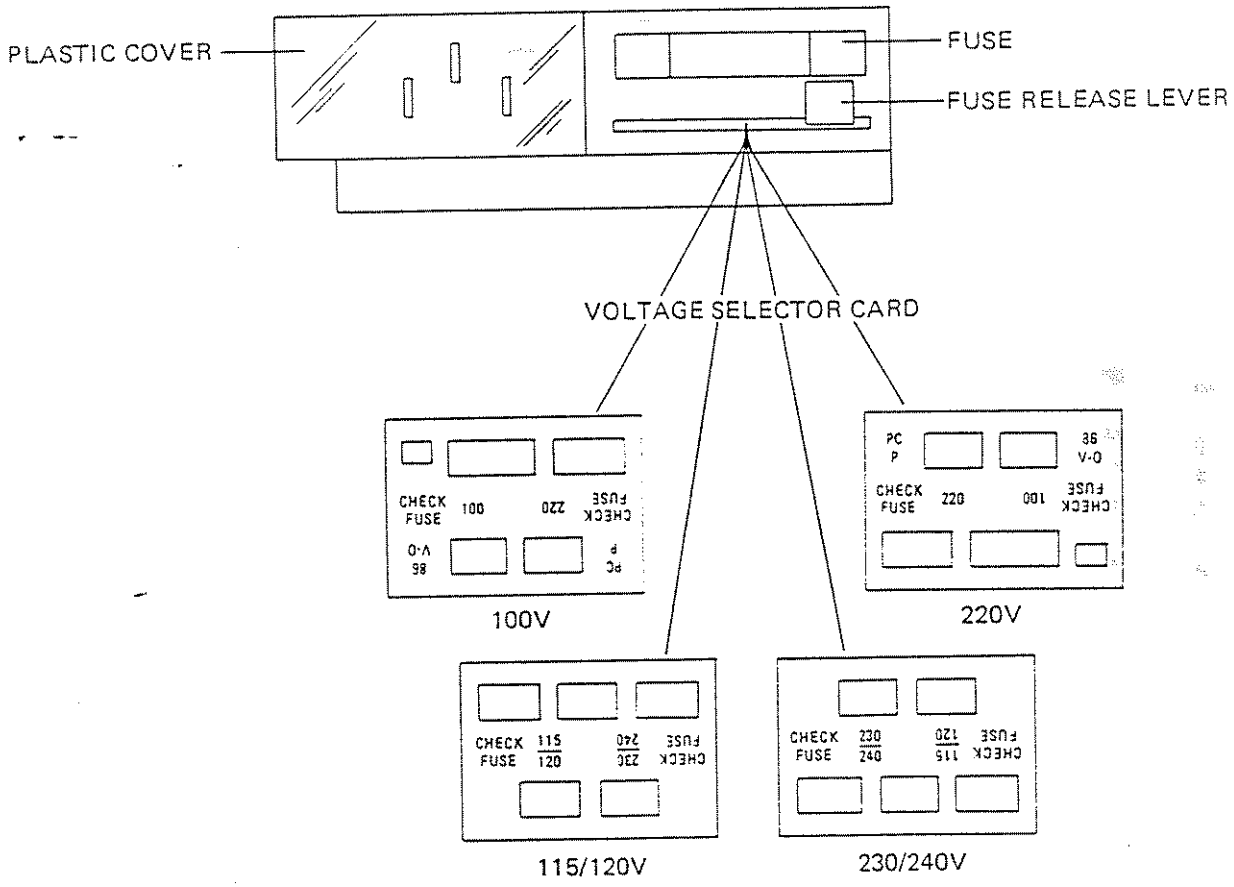



**Figure 2.9 - AC Line Voltage Selection**

### 2.7.3 Power Cord and Grounding

2.7.3.1 The front panel and instrument case are grounded in accord with MIL-T-28800C protecting the user from possible injury due to shorted circuits.

**NOTE**

Both counters are designed to meet IEC Publication 348, "Safety Requirements for Electronic Apparatus for Class I Instruments."

2.7.3.2 A protective ground terminal, forming part of the rear-panel input socket, i provided. Both counters are supplied with a detachable.3-core power cord. Only this cor should be used.

2.6.2.2 Installation

a. Disconnect the AC power cord at the rear panel

b. Loosen, but don't remove, the two rear corner-feet by unfastening the four retaining screws (two per foot). Back the corner feet out approximately 5/8 inch. Slide the top cover toward the rear of the unit, then lift up and out to remove

c. Remove the currently fitted standard 10 MHz oscillator assembly by:

1. Removing the cable tie securing cables to P14/J14 and P13/J13

2. Extracting the two screws and washers attaching the oscillator assembly to the rear panel via the two threaded standoffs

3. Disconnecting the 5-pin connector cable (P14) from the motherboard at J14, then lifting the oscillator assembly out of the chassis

d. Connect the 5-pin connector cable of the option oscillator assembly at J14 on the motherboard

e. Replace the cable tie securing cable to P13/J13

f. Secure the oscillator assembly to the rear panel using the two M3 x 8 screws, two flat washers, and two lock washers. The screws pass directly into the top of the oscillator assembly

g. Replace the top cover; firmly secure the two rear corner-feet, completing the installation

## 2.7 POWER CONNECTIONS

**2.7.1** Before operating the counter, verify that the AC voltage selector is correctly set for the local AC supply. The counter operates on 100, 120, 220, or 240 volts, 50 to 60 Hz. The present voltage range can be seen through the small window in the power input module on the rear panel.

### 2.7.2 Line Voltage Selection

2.7.2.1 The line voltage setting is easily changed by repositioning the small voltage selector card in its slot. Refer to Figure 2.9 and use the following procedure:

a. Remove the power cord from the power input module

b. Fully slide the transparent fuse cover to the left. This exposes the fuse and voltage selector card

c. Pull the small lever marked FUSE PULL completely to the left. This ejects the fuse from its holder, permitting access to the selector card

d. Remove the selector card, then reposition it in its slot so that the desired line voltage designation is visible. (Using a small pair of needle-nose pliers can be helpful in completing this step.)

## 2.6.2 High-Stability Oven Oscillator Option 04E

2.6.2.1 Refer to Figure 2.8 for this procedure. The installation package includes:

| | | |
|---|---|---|
| a. | Oscillator assembly (1) | P/N 404386 for Option 04E |
| b. | #4 split lock washers (2) | P/N 617127 |
| c. | #4 flat washers (2) | P/N 617102 |
| d. | M3 x 8 screws (2) | P/N 611067 |
| e. | Cable tie (1) | P/N 610777 |

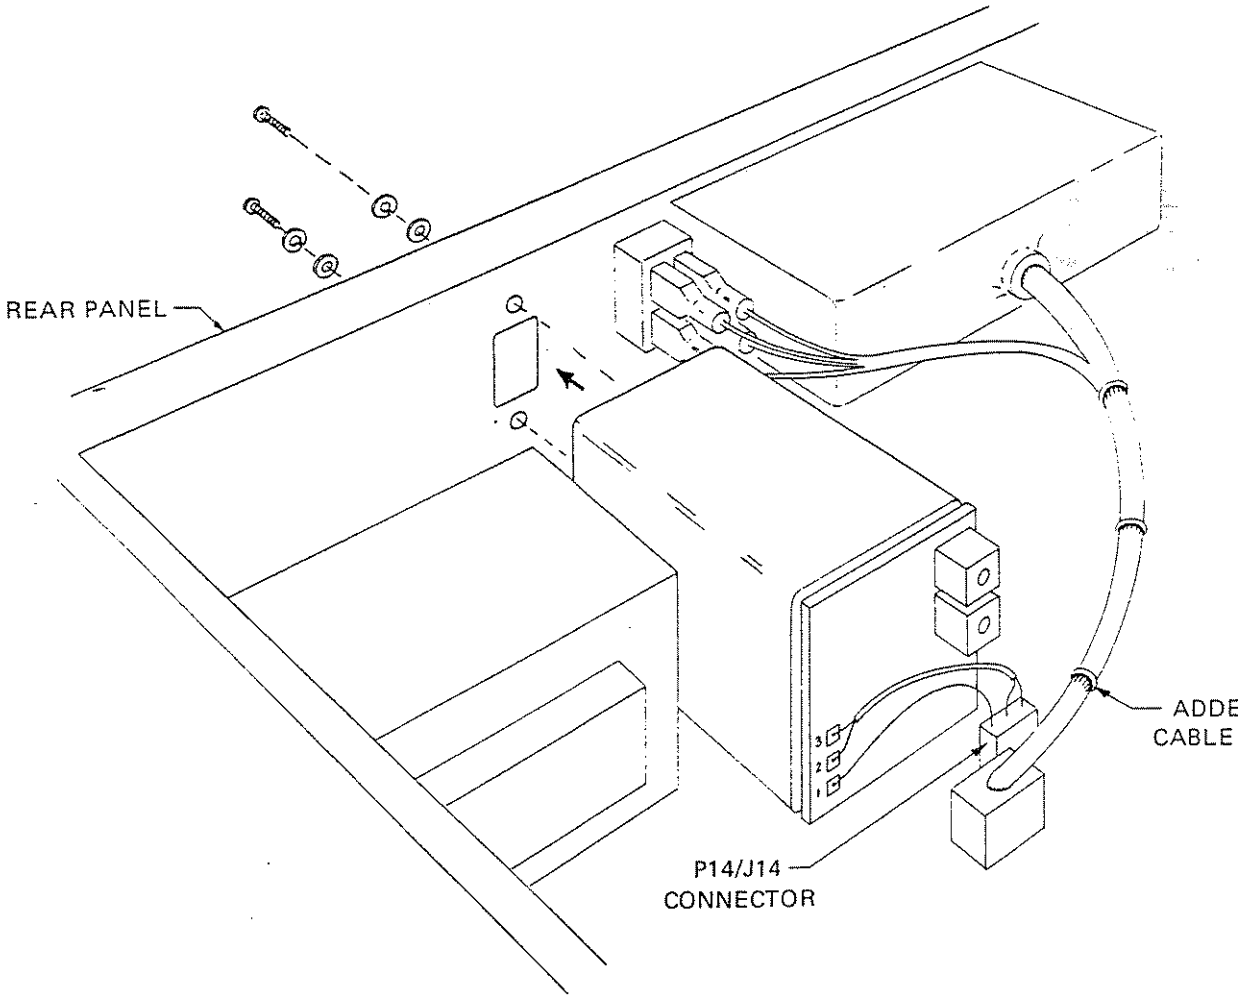



**Figure 2.8 – Option 04E Installation**

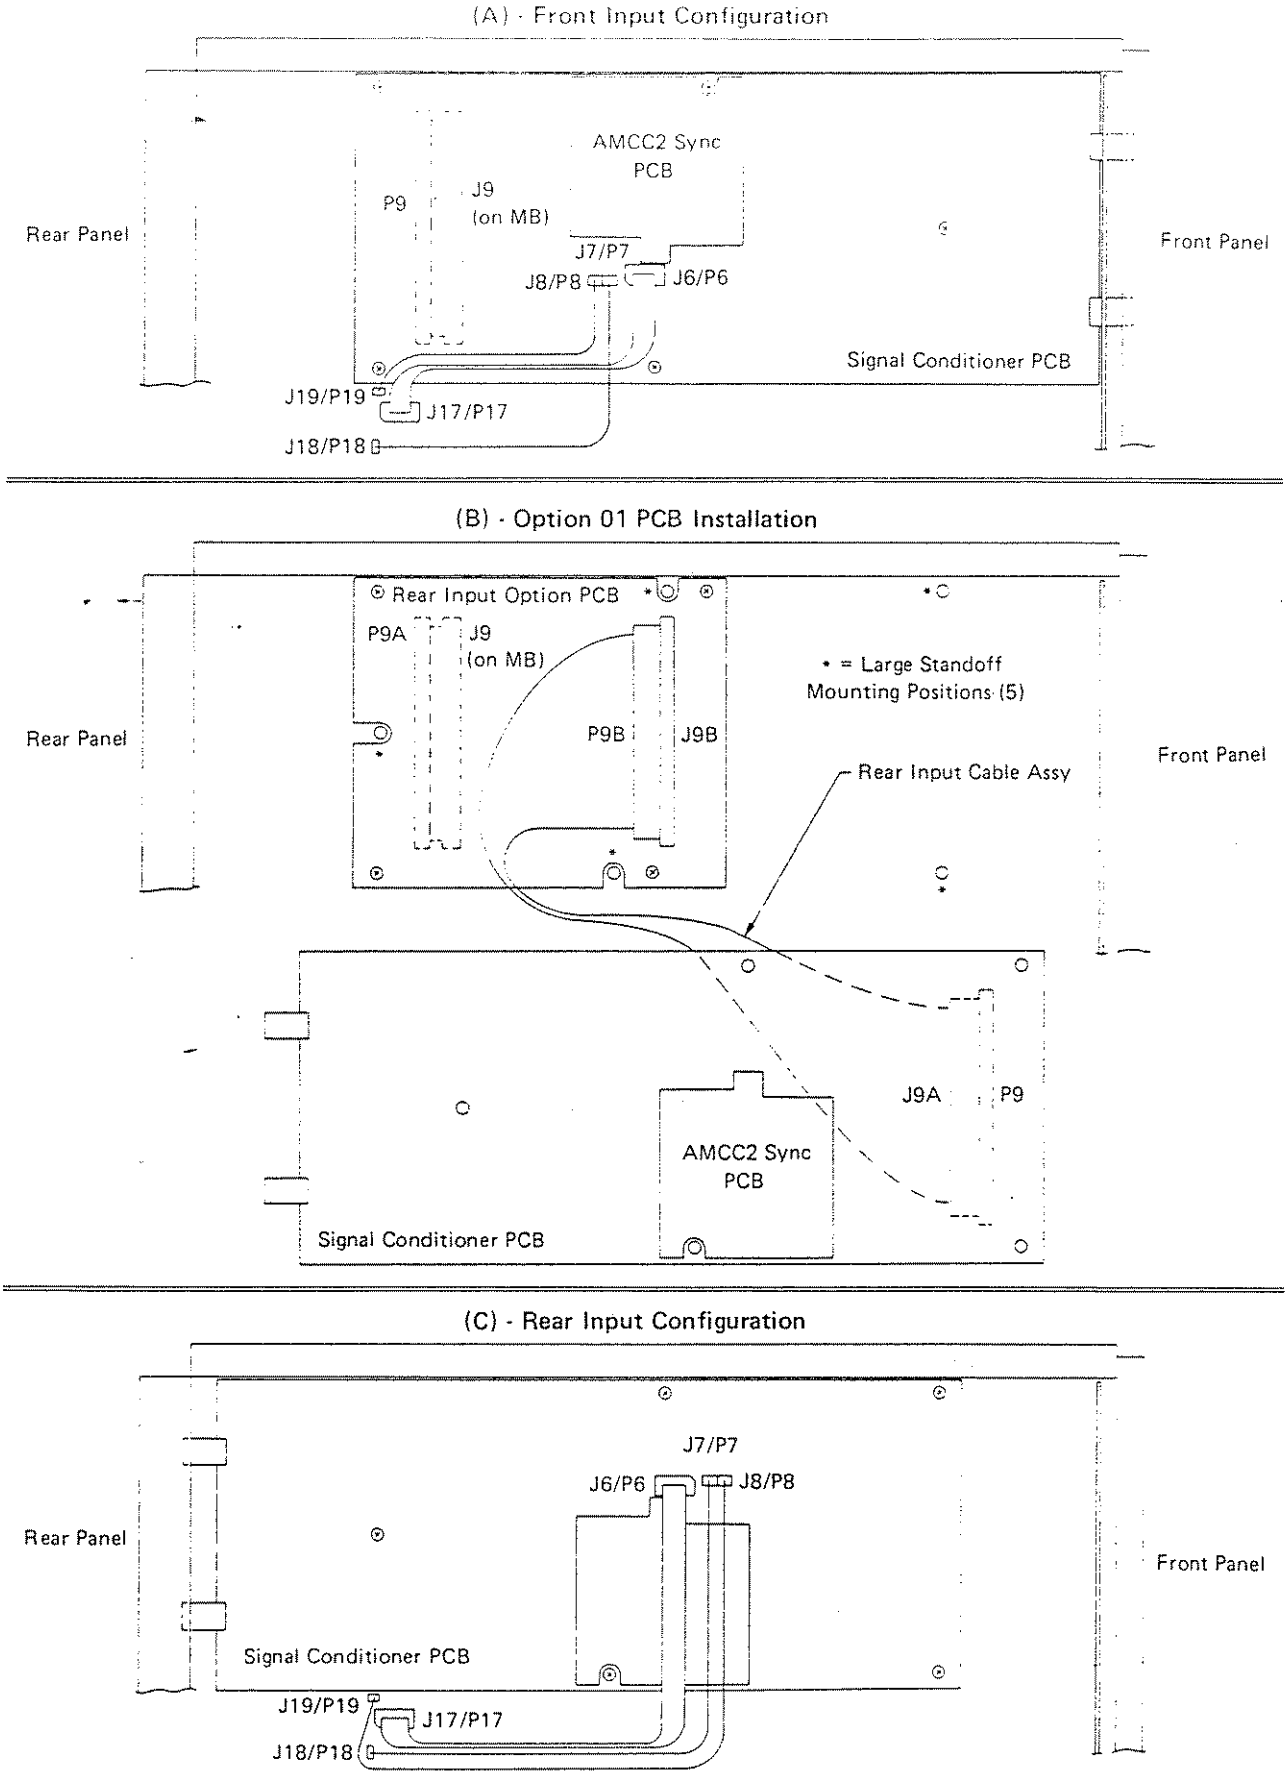



**Figure 2.7-Rear-Panel Input (Option 01) Installation**

f. On the 1995, disconnect the 2-conductor (black & white, twisted-pair) 10 MHz internal frequency reference and 14-conductor twisted-wire power cables connecting the signal conditioner PCB and motherboard. This involves unplugging P8 from J8 (10 MHz cable) and P6 from J6 (power cable) on the signal conditioner board. In addition, on the 1996, unplug P7 from J7 on the signal conditioner board. This disconnects the other 2-conductor (black & white, twisted-pair) 10 MHz internal frequency reference cable. P17/J17, P18/J18 (1996), and P19/J19 can remain connected on the motherboard during this procedure. Set the free ends of the three disconnected cable assemblies safely aside for later reconnection.

g. Slide the signal conditioner board towards the rear of the instrument; pull the board up and remove, setting it aside

h. Remove the two black rear-hole plugs from J201 and J202 and place them on the front panel

i. Place the Option 01 assembly board into the unit, center slot towards the rear. Connect P9A on the option board and J9 on the motherboard

j. Fasten the option board securely to the motherboard using the existing four short standoffs and four self-locking screws

k. Tip the instrument on its side. Insert and securely fasten the five supplied long metal standoffs to the motherboard using five self-locking screws, inserting them from the bottom of the unit through the motherboard

l. Connect the rear-input option ribbon cable to the option board using plug P9B and socket J9B. Fold the cable halfway back towards the rear of the unit

m. Reverse the signal conditioner board 180° (INPUT A and B connectors towards the rear panel) and hold the board in one hand. Connect the other end of the rear-input option cable to the bottom of the signal conditioner board using plug P9 and socket J9A

n. Align INPUT A and B BNC connectors on the signal conditioner board with their corresponding rear-panel holes, then slide the board so that these connectors protrude through the holes

o. Orient the signal conditioner board so that its five holes align with the five longer standoffs just fastened to the motherboard. Secure the signal conditioner board to these standoffs using the original five self-locking screws, inserting them through the top of the board

p. Secure the BNC connectors for all rear-mounted inputs using their lock nuts.

q. Reconnect the single black & white 10 MHz internal frequency reference (two on the 1996) and power cable assemblies to the signal conditioner board as before

r. Replace the top and bottom covers; firmly secure the two rear corner-feet, completing the installation

2.5.3.8 The following assembly is required to lock the instrument into its normal operating position on the rack:

a. Slide two self-anchoring #10-32 tinnerman nuts on the mounting-rail of the rack (each side). These nuts should be aligned with the angle-bracket slots. Omit the tinnerman nuts if the mounting-rail is tapped for #10-32 screws

b. Slide the instrument fully into the rack until the angle brackets strike the slide-mount bracket screws. Secure the instrument in place using four phillips panhead #10-32 x 3/4 screws

## 2.6 MISCELLANEOUS OPTION INSTALLATION

### 2.6.1 Rear-Panel Input Option 01

2.6.1.1 Refer during this procedure to Figure 2.7A, B, and C as well as Option 01 Assy Drawing 404378 in Section 7. The installation package includes:

a. Rear-Input Option Assy PCB (1)

b. Rear-Input 72-conductor Cable Assy (1)

c. Phillips panhead self-locking #6-32 X .312 screws (9)

d. Metal blind-threaded #6 standoffs (5)

2.6.1.2 Complete the following steps:


a. Loosen, but don't remove, the two rear corner-feet by unfastening the four retaining screws (two per foot). Back the corner feet out approximately 5/8 inch. This permits removal of the top and bottom covers

b. Slide both the top and bottom covers toward the rear of the unit, then lift up and out to remove

c. Turning counterclockwise, remove the lock nuts from the front-panel BNC connectors for INPUTs A and B (attached to the signal conditioner board) and INPUT C

d. Remove the black rear-hole plug from J210 on the 1996. Remove INPUT C's BNC connector with its cable from the front panel and install in J210 on the rear panel of the 1996. Place the rear-hole plug for INPUT C on the front panel

e. Remove the five self-locking screws from the top of the signal conditioner board. These screws fasten the signal conditioner PCB to the motherboard. Set these screws aside

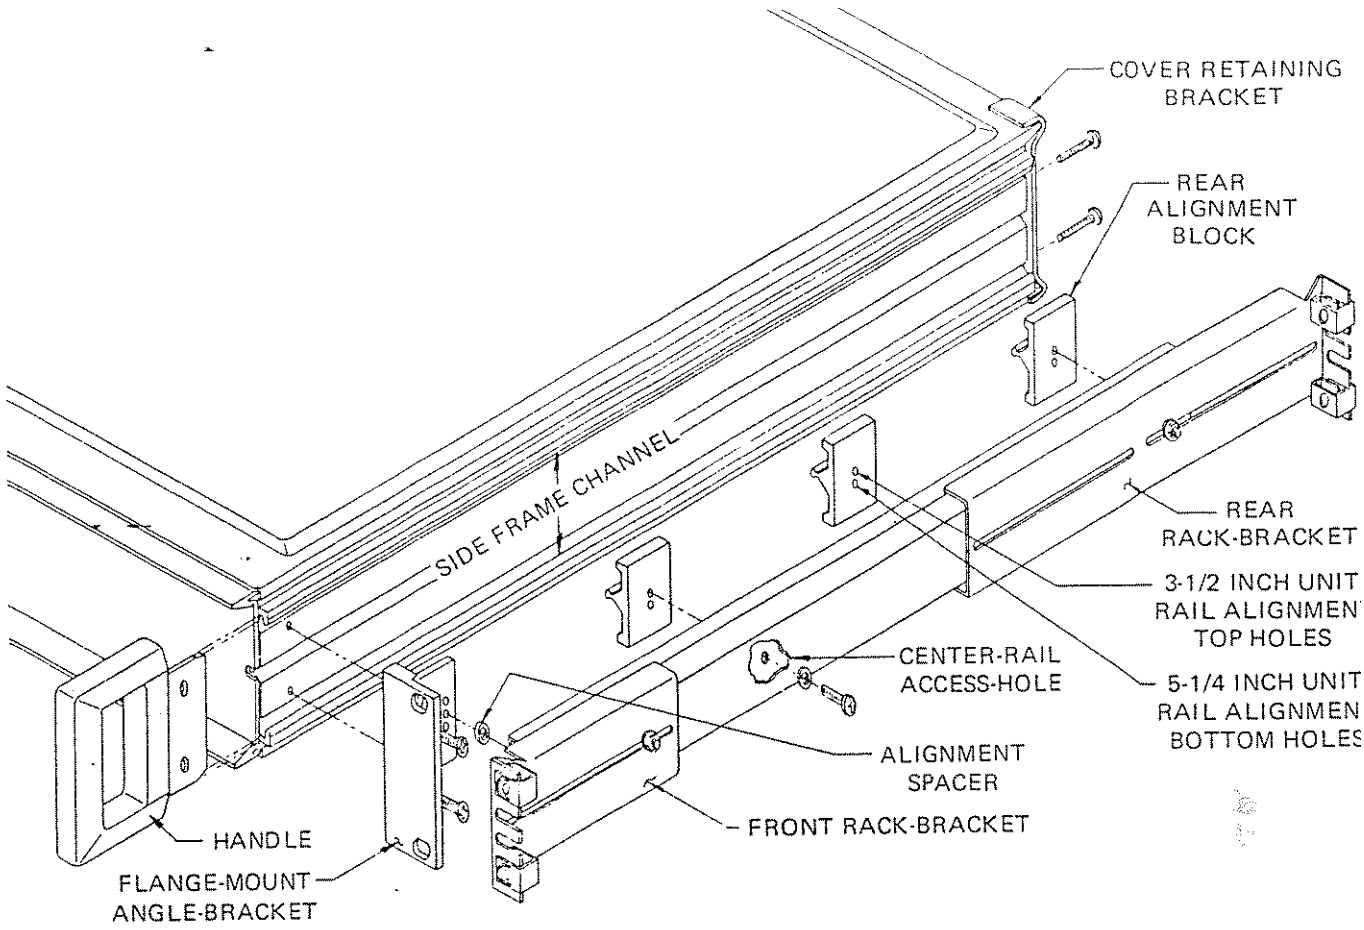

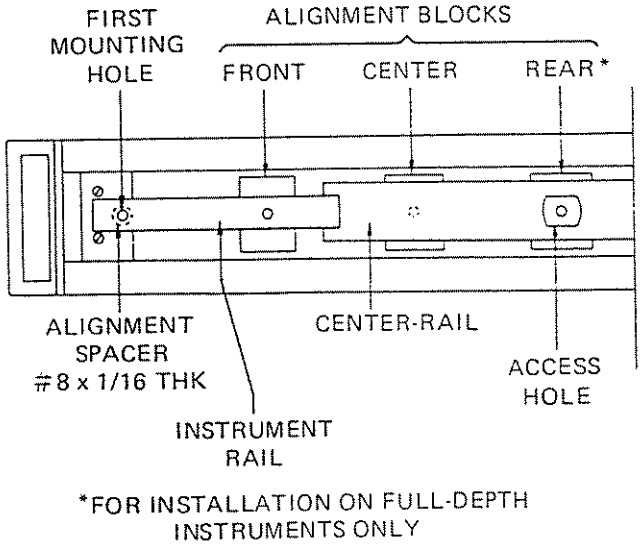




**Figure 2.6-Slide-Mount and Instrument Assembly (with inset)**

NOTE

For 3-1/2 inch high instruments, position the rail access hole over the **top** alignment-block hole; for 5-1/4 inch high instruments, use the **bottom** hole.

d. Insert a phillips panhead self-tapping #8-32 x 5/16 screw through the rail access hole and screw it to pull-up position in the alignment block. At the same time, position the flange-mount angle-bracket in its approximate final location in the side frame channels. Align the other alignment-block screw holes with their attachment holes in the instrument-rail. Insert phillips panhead self-tapping #8-32 x 5/16 screws in the alignment blocks and fasten to pull-up position. Repeat this procedure for the other rail

e. -- Slide the handle/corner insert between the side frames and each angle bracket

f. Align the handle/corner insert and angle-bracket holes with their retaining screw holes in the side frame

g. Insert two phillips flathead #8-32 x 1/2 screws (some models use M4 x 12) through the handle/corner insert and angle-bracket combinations, then fasten firmly to the frame

h. Securely fasten all self-tapping screws in the instrument-rail. The instrument should slide freely on the rails

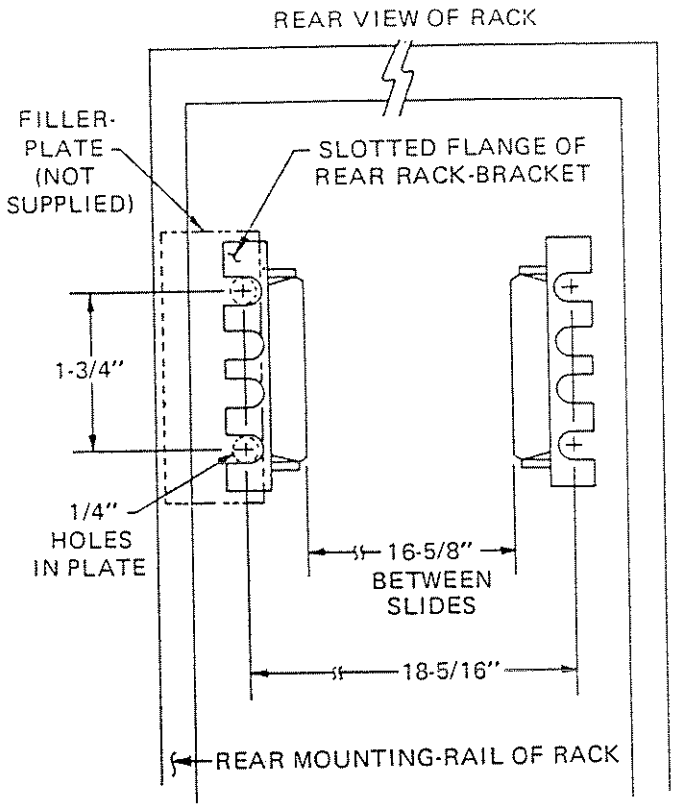



**Figure 2.5–Rear End Slide-Mount Rack Dimensions**

2.5.3.7 Refer to Figure 2.6 (with inset). The assistance of a second person will be needed for the following slide-mount assembly-to-instrument installation.

a. Extend the rails of the slide-mount assemblies to their maximum position. Insert a phillips panhead self-tapping #8-32 x 5/16 screw inward through the first mounting hole in the instrument-rail. Place an alignment (spacer) washer on the screw on the other side of the instrument-rail

b. Screw the flange-mount angle-bracket to pull-up position on the instrument-rail. Check that the alignment washer remains between the angle bracket and instrument-rail. Repeat this procedure for the other instrument-rail

c. With the help of a second person, position the instrument between the fully extended rails. For full-depth instruments, the rear alignment-block hole should be situated immediately behind the fourth attachment hole in the instrument-rail. For intermediate-depth instruments, the rear alignment-block hole should be located behind the third attachment hole

2.5.3.6 The assistance of a second person will be needed for the following instrument-rack assembly. Secure the slide-mount assembly in the designated area of the instrument rack using the procedure below.

**NOTE**

If the mounting-rail of the instrument rack is tapped for #10-32 screws, drill out two places for each bracket using a 1/4 inch diameter bit. Proceed with the assembly:

a. Hold the front end of the slide-mount assembly behind the front mounting-rail of the rack, while the second person holds the rear end of the assembly

b. Secure the front rack-bracket to the front mounting-rail using two phillips panhead #10-32 x 1/2 screws. Seat the front rack-bracket firmly against the mounting-rail before tightening these screws

c. Install the other front rack-bracket on the front mounting-rail in the same manner

d. Set the front dimension between the two slide-mount assemblies at 16 5/8 inches

e. Adjust the length of the rear rack-brackets to touch the inside of the rear mounting-rail. Tighten the rear rack-bracket assembly screws


f. The distance between the two slide-mount assemblies at the rear-bracket should be 16 5/8 inches. Should a filler plate be required to secure the slide-mount assembly to the rear rack mounting-rail at 16 5/8 inches, use the dimensions given in Figure 2.5 to determine filler-plate size

**NOTE**


The rear rack-bracket may require adjustment to accommodate the thickness of the filler plate.

g. Secure the rear rack-bracket to the rear rack mounting-rail (or filler plate) using two phillips panhead #10-32 x 1/2 screws in each bracket

h. The triple-rail slide-mount assemblies should move freely to their maximum extended positions. If not, remove any obstacle before installing the instrument

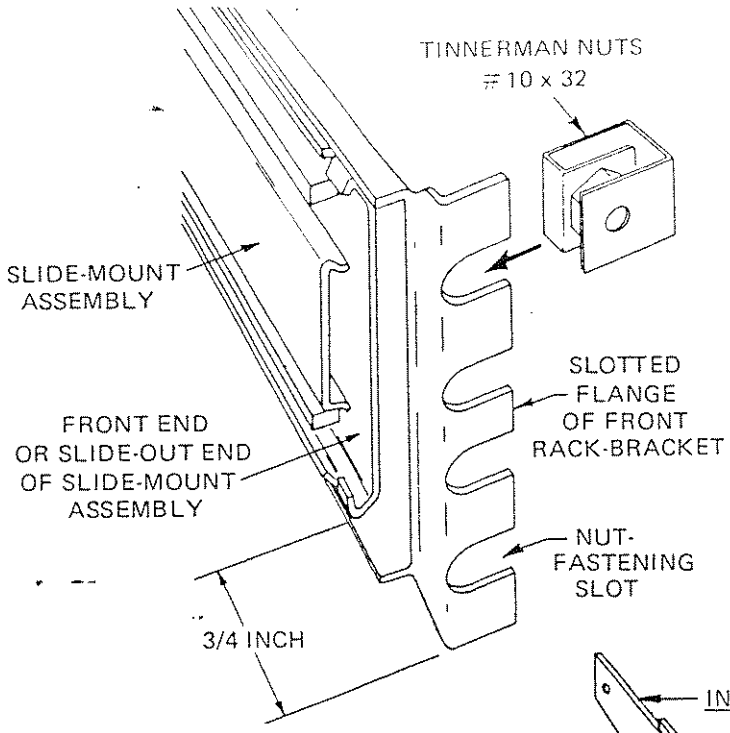


*a. Front bracket 3/4 inch leading edge*

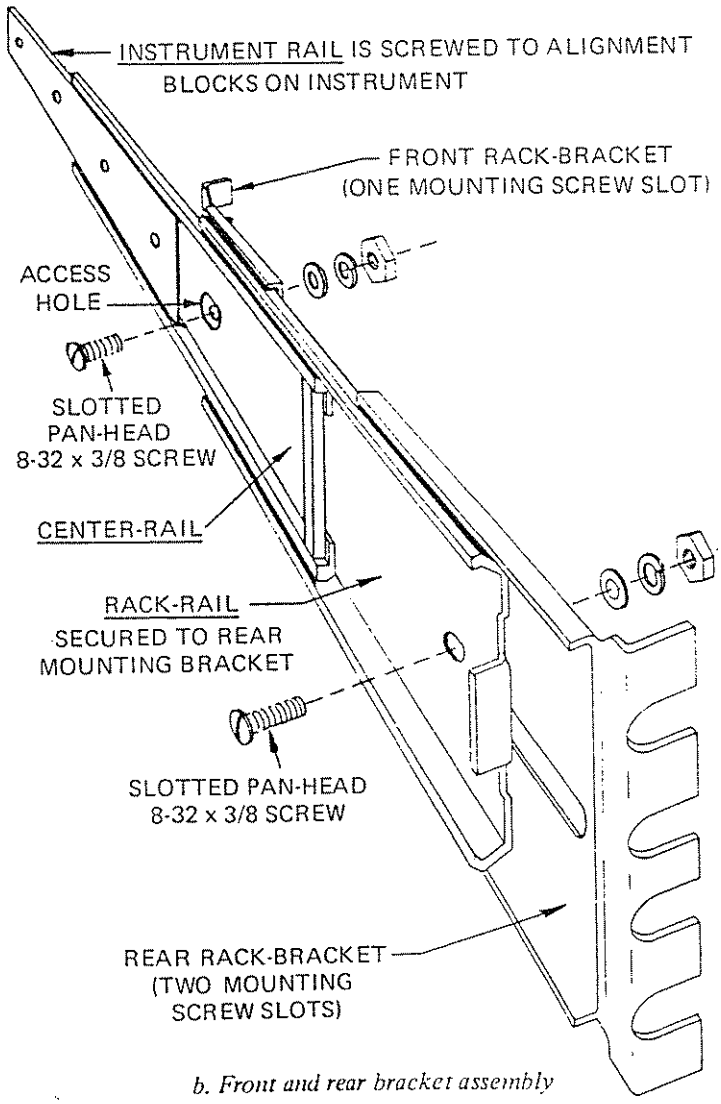


*b. Front and rear bracket assembly*

**Figure 2.4A/B–Slide–Mount and Bracket Assembly**

d. Fully extend the slide-mount assembly. Position a rear rack-bracket (with two elongated mounting slots) on the rear of the assembly in the same way as the front rack-bracket. Align the mounting slot closest to the slotted flange with the rear rack-rail nail hole. Insert a slotted panhead #8-32 x 3/8 screw through the holes. Attach a washer, lock washer, and nut to the screw and secure the rear rack-bracket loosely to the slide-mount assembly

e. Fully extend the slide-mount assembly. Position a rear rack-bracket (with two elongated mounting slots) on the rear of the assembly in the same way as the front rack-bracket. Align the mounting slot farthest from the slotted flange with the rear rack-rail nail hole. Insert a slotted panhead #8-32 x 3/8 screw through the holes. Attach a washer, lock washer, and nut to the screw and secure the rear rack-bracket loosely to the slide-mount assembly

f. Complete the other slide-mount and rack-bracket assembly in the same manner as just described

g. Slide two self-anchoring #10-32 tinnerman nuts on the front and rear rack-brackets at the top and bottom slots of both slide-mount assemblies

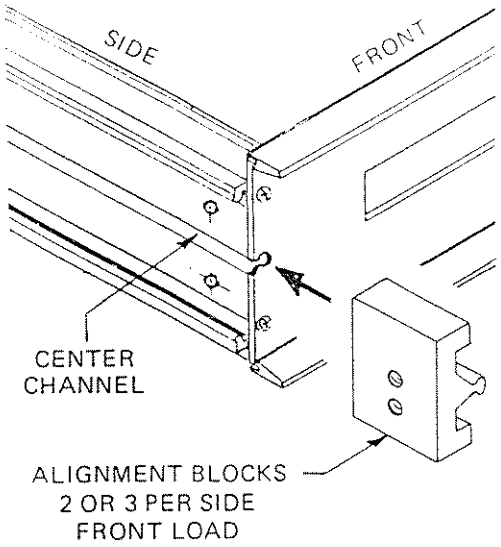



**Figure 2.3-Loading the Alignment Blocks**

2.5.3.4 Replace the top and bottom covers on the instrument. Fasten the covers using t two cover retaining-brackets (see Figure 2.6) and four phillips panhead screws (two per si originally removed from the rear corner-feet. The instrument is now ready for attachment the two triple-rail slide-mount assemblies.

2.5.3.5 Refer to Figure 2.4A/B. Prepare the triple-rail slide-mount assembly for equipm rack installation. First, note that the instrument-rail and rack-rail holes are accessible eit directly or through the enlarged holes in the center-rail (as the assembly is extended retracted). Complete the following procedure:

a. Place a front rack-bracket (with one mounting slot) on the workbench, slot flange facing down

b. Position the front end (i.e., slide-out end) of the slide-mount assembly over parallel to the front rack-bracket. The rack-rail should rest within the brack about 3/4 inch from the bracket's front edge

c. Adjust the rails, aligning the front rack-rail hole with the center-rail acc hole and mounting slot in the front rack-bracket. Insert a slotted panhead 32 x 3/8 screw through the holes. Attach a washer, lock washer, and nut to screw and secure firmly, maintaining the 3/4-inch dimension to the front of bracket

**NOTE**

Measure the distance between the front and rear mounting-rails of the rack at this point. If the distance is **less** than 20 inches, follow instruction "d" next; if the distance is **greater** than 20 inches, follow instruction "e".

2.5.3.2 Prepare the instrument for installing the alignment blocks in the side channels of the unit. Refer to Figures 2.1 and 2.2 and complete the following steps:

a. Remove the two rear corner-feet by extracting the two phillips retaining screws from each foot

b. Slide the top and bottom covers 1/2 inch towards the rear panel, then lift them off

c. Remove the four bench feet and tilt-bail from the bottom cover

d. Slide the side panels down their retaining tracks towards the rear, then remove the panels

e. Store the four panels, four bench feet, and tilt-bail in a convenient location

f. Remove the two front handles/corner inserts from the frame by extracting the two retaining screws from each handle or corner insert

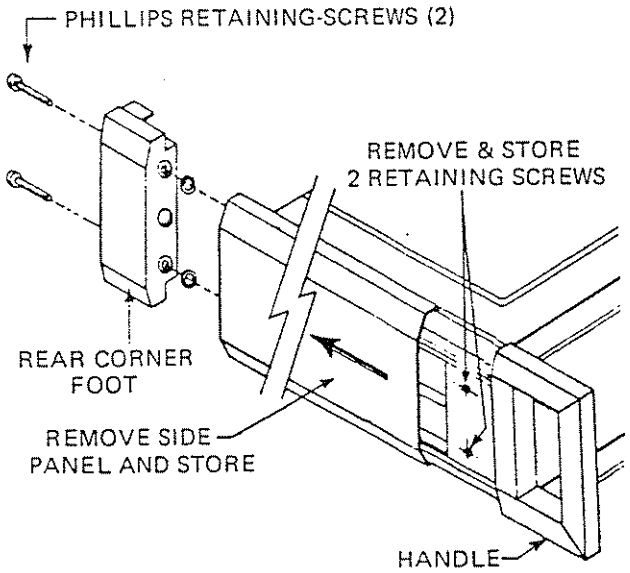



**Figure 2.2-Rear Corner Foot, Side Panel, and Handle Detail**

2.5.3.3 Refer to Figure 2.3 for alignment block loading. Slide the alignment blocks down the center channel of the frame on each side of the instrument. Three alignment blocks per side should be loaded for full-rack depth units; two blocks for intermediate-rack depth units. The two screw holes in each alignment block should be at center position and below, relative the center channel.

b. Place an angle bracket over each handle/corner insert, aligning the mounti holes over the retaining screw holes

c. Insert two replacement flathead #8-32 x 1/2 screws through each angle brack and handle/corner-insert combination, then screw securely to the case

2.5.2.5 Reassemble the instrument by replacing the top and bottom covers, fitting the fr edge of the covers into the groove in the front panel. Do not attempt to replace t instrument's side panels. Complete the procedure by screwing the two rear corner-feet to t case.

2.5.2.6 Store the following items in a convenient location:

Two side-panels, four bench feet and retaining screws, and four replaced retain screws from the front handles/corner inserts.

## 2.5.3 Slide-Mount Option 65 Installation

2.5.3.1 Refer to Figures 2.2-2.6 for this procedure. The installation package includes:

a. Front corner-inserts for nonhandle installations (2) - P/N 454323

b. Flange-Mount angle-brackets (2) - P/N 454422

c. Alignment blocks (6) - P/N 454490

d. Front rack-brackets (2) - Part of P/N 454488

e. Rear rack-brackets (2) - Part of P/N 454488

f. Triple-rail slide-mount assemblies (2) - P/N 454489

g. Self-Anchoring #10-32 tinnerman nuts (12) - P/N 610920

h. Phillips panhead #10-32 x 1/2 screws (8) - P/N 615091

i. Slotted panhead #8-32 x 3/8 screws with nuts, washers, and lock washers each) - Part of 454488

j. Phillips panhead self-tapping #8-32 x 5/16 screws (8) - P/N 610910

k. Phillips flathead #8-32 x 1/2 screws (4) - P/N 615325

l. Phillips panhead #10-32 x 3/4 screws (4) - P/N 615093

m. Alignment #8 x 1/16 (spacers) washers (2) - P/N 610921

n. Cover retaining-brackets (2) - P/N 454597

o. Phillips Flathead Metric Screws M4 x 12 (4) - P/N 611011

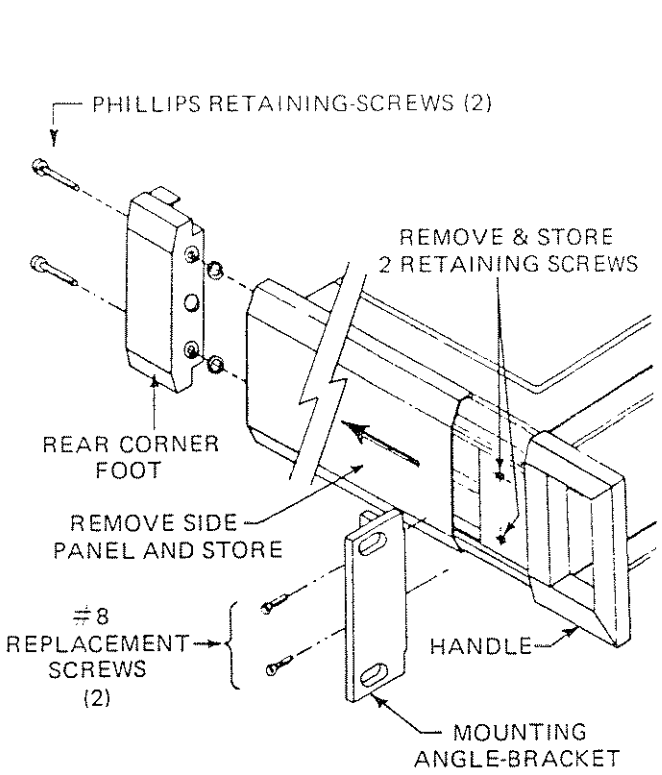



**Figure 2.1-Fixed-Mount Angle-Bracket Detail**

2.5.2.2 Remove the tilt-bail by applying pressure inward on the bail legs, then unhooking the bail from the bench feet.

2.5.2.3 Remove the bench feet and side panels by completing the following steps:

a. Unscrew the two phillips head screws from each rear corner-foot. This frees the corner-feet, covers, and side panels

b. Remove the two rear corner-feet from the case

c. Place the instrument bottom-up, then slide the bottom cover 1/2 inch towards the rear panel and lift off. The top cover slides off in the same manner

d. Remove the four bench feet from the bottom cover by unscrewing the phillips head retaining screws from each foot

e. Slide the side panels down their retaining tracks towards the rear, then remove the panels. (With side panels off, the retaining screws-2 per side-for the front handles/corner inserts are exposed.)

2.5.2.4 Install the flange-mount angle-brackets by completing the following steps:

a. Remove the retaining screws for both handles/corner inserts, leaving the handles/corner inserts in place

# SECTION 2 INSTALLATION PREPARATION FOR US

## 2.1 INTRODUCTION

**2.1.1** This section describes the unpacking and inspection, reshipment, rack installatic miscellaneous option installation, power connections, and storage/temperature requirements f the 1995/1996.

## 2.2 UNPACKING AND INSPECTION

2.2.1 Before unpacking the counter, check the exterior of the shipping carton for any sig of damage. All irregularities should be noted on the shipping bill. Remove the instrume carefully from its carton, preserving the factory packaging as much as possible. Inspect t counter for any defect or damage. Notify the carrier immediately if any damage is appare Have a qualified person check the instrument for safety before use.

## 2.3 RESHIPMENT INSTRUCTIONS

**2.3.1** Use the original packaging if it is necessary to return the counter to Racal-Dana calibration and/or servicing. The original shipping carton and the instrument's plastic-fo form will provide the necessary support for safe reshipment. If the original packaging unavailable, reconstruct it as much as possible. Wrap the counter in plastic; then use plas spray foam to surround and protect the instrument. Reship in either the original or new, stu shipping carton.

## 2.4 BENCH OPERATION

**2.4.1** The 1995/1996 is equipped with a tilt-bail to elevate the front of the instrument easy operation. The tilt-bail is attached to the two front feet on the bottom of the count For use, the bail is pulled down to its vertical position.

## 2.5 EQUIPMENT RACK INSTALLATION

**2.5.1** The 1995/1996 can be mounted in a standard 19-inch equipment rack using either Fixed-Mount Option 60 or Slide-Mount Option 65. Installation instructions for these two opti follow.

### 2.5.2 Fixed-Mount Option 60 Installation

2.5.2.1 Refer to Figure 2.1 for this procedure. The installation package includes:

a. Flange-Mount angle-brackets (2)

b. Front corner-inserts for nonhandle installations (2)

c. Flathead #8-32 x 1/2 screws (4)

## 1.4 SAFETY

1.4.1 The 1995/1996 incorporates a protective earth terminal and is designed to mee international safety requirements. Refer to the safety page "FOR YOUR SAFETY immediately preceding the Table of Contents. Follow all **NOTES**, **CAUTIONS**, and **WARNING** to ensure personal safety and prevent damage to the instrument.

## 1.5 PRODUCT SUPPORT

1.5.1 Racal-Dana supports the 1995/1996 with Product Engineering, Service, and Part Departments. A complete listing of service centers and field representatives is provided on th last two pages of the manual.

## 1.6 GENERAL DESCRIPTION

1.6.1 The 1995/1996 is a universal counter designed for system or bench use. Basi measurement functions include Frequency, Period, Time, Ratio, and Totalize. Inputs A and provide frequency measurement to 200 MHz; Input C (1996 only) extends frequency and rati measurements to 1.3 GHz. Computational capabilities include Rise/Fall Time, Pulse Width Phase Measurement, Duty Cycle, Slew Rate, Statistical Data, and Math Operations. Inputs and B incorporate independent Start and Stop channels with automatic or manual trigge selection. Input D on the rear panel is used for external arming and gating.

### 1.6.2 Special Functions

1.6.2.1 Both the 1995/1996 provide a set of Special Functions, permitting extende measurements and capabilities beyond the front-panel keyboard. See Subsection 3.4.8 fc details.

### 1.6.3 GPIB Interface

1.6.3.1 The 1995/1996 provides a GPIB interface as standard. This permits the execution all front-panel operations except power-on and address selection. See Section 4 for GPI capabilities, addressing, and bus protocol.

### 1.6.4 Models 1995/1996-02M

1.6.4.1 These two special versions incorporate a MATE(R)/CIIL interface and are availab from Racal-Dana.

## 1.7 OPTIONS

1.7.1 Options available for the 1995/1996 are listed below. Those specified on the origin order will be factory installed and ready for use. Section 2 provides information on the fie installation of certain options. See the Specifications in Table 1.1 as required.

a. Option 01 - Rear Panel Input
b. Option 04E - High Stability Oven Oscillator
c. Option 60 - Fixed Rack Mount
d. Option 65 - Slide Rack Mount

Table 1.1 - Technical Specifications (Cont'd)

Trigger Level Timing Error

Timing Error = (Seconds) (Trigger Level Error (V))/ Input Slew Rate at START trig point (V/sec) - (Trigger Level Error (V))/Input Slew Rate at STOP trig point (V/sec)

where Trigger Level Error = ±1% of Trigger Level ±10 mV

## OPTIONS

**Option 01 Rear-Panel Inputs**

**Option 04E High-Stability Oven Oscillator**

Proportionally controlled ovenized Internal Frequency Standard

| | |
|---|---|
| Frequency: | 10 MHz |
| Aging: | $< 5 \times 10^{-10}$ per day at time of shipment |
| Temperature Stability: | $< 7 \times 10^{-9}$ over the range $0^{\circ}C$ to $50^{\circ}C$ |
| Line Voltage Stability: | $< 5 \times 10^{-10}$ two minutes after a 10% line voltage change |

**Option 04R Rubidium Precision Internal Frequency Standard**

| | |
|---|---|
| Frequency: | 10 MHz |
| Long Term Drift: | $\leq 5 \times 10^{-11}$ per month |
| | $\leq 5 \times 10^{-10}$ per year |
| Temperature Stability: | $\leq 3 \times 10^{-10}$ from $0^{\circ}C$ to $+50^{\circ}C$ |
| Line Voltage Stability: | $\leq 2 \times 10^{-11}$ from ±10% voltage change |

**Option 60**

Rack mounting kit (fixed)

**Option 65**

Rack mounting kit (slides)

## DEFINITIONS

LSD Least Significant Digit

Trigger Error

$$\text{Trigger error (Seconds)} = \frac{\sqrt{(e_i^2 + e_n^2)}\ \text{(Volts)}}{\text{Input Slew Rate at Trigger Point (V/sec)}}$$

where $e_i$ = input amplifier rms noise, 250 µV rms max

$e_n$ = input signal rms noise in 250 MHz bandwidth

Table 1.1 - Technical Specifications (Cont'd)

| |
|---|
| NON-VOLATILE MEMORY |
| Up to 10 complete front-panel settings may be stored for subsequent recall. |
| GATE OUT |
| A TTL-compatible signal is provided from a rear-panel BNC connector coincident with the measurement gate + 100 nanoseconds. |
| TRIGGER LEVEL OUTPUTS |
| Start and stop levels are available on the rear panel from BNC connectors for calibration purposes only. |
| DISPLAY |
| LED: 10 digit display, character size 0.43".<br>Exponent digit, character size 0.43"<br><br>When measurement exceeds 10 digits, the least significant 10 digits are displayed, and the overflow indicator is lit. |
| TEMPERATURE PERFORMANCE |
| Operating Temperature: $0^{o}C$ to $+50^{o}C$<br>Storage Temperature: $-40^{o}C$ to $+75^{o}C$ |
| **POWER REQUIREMENTS:** 100, 120, 220, 240V rms ± 10%<br>50 to 400 Hz ± 10%<br>80 VA |
| |
| **DIMENSIONS:** 88.9 mm (3.5 in) High X 427.0 mm<br>(16.8 in) Wide X 475 mm (18.7 in) deep |
| |
| **WEIGHT:** 10 kg (22 lb.) |

| STATISTICS | |
|---|---|
| Sample Size: | 2 to 9999 |
| Standard Deviation: | Displays Standard Deviation of sample size (n) |
| Average: | Displays Average (mean) value of sample size (n) |
| Highest: | Using Special Function 51, the highest value in sample size (n) is displayed |
| Lowest: | Using Special Function 52, the lowest value in sample size (n) is displayed |

**MATH**

Applies to all counting/timing measurement functions. Note Math Function is applied prior to Statistics Function.

$$\text{Display} = \frac{\text{Reading} - X}{Z} Y$$

Where X, Y and Z are constants entered and stored via the keyboard.

| | |
|---|---|
| Constant (X, Y or Z) Range: | ± 0.000000001E-9 to ± 9999999999E9 |
| Power-Up Condition: | X = 0<br>Y = 1<br>Z = 1 |

**GPIB INTERFACE**

| | |
|---|---|
| Standard: | IEEE-STD-488-1978 |
| Programmable Controls | All front panel controls with the exception of Power |
| Universal Commands: | Trigger, Clear, Remote, Local, Local Lockout, Require Service |
| Data Output Format: | Refer to Tables 4.5 and 4.7 |
| Data Output Rate: | 150 readings/second, maximum |

Table 1.1 - Technical Specifications (Cont'd)

| | |
|---|---|
| External Gate: | |
| Input: | Inputs A, B or D, selectable via Special Functions 85.0-88.3 |
| Start Arm: | (+) or (-) edge, selectable via special function applied to external arm input allows counter to start a measurement cycle |
| Stop Arm: | (+) or (-) edge, selectable via special function applied to external arm input allows counter to stop measurement cycle |
| Synchronous Window Auto-Trigger: (Syn. Wind. AT) | |
| Input: | Inputs A, B or D, selectable via Special Functions 91.0-94.3 |
| Start/Stop Edges: | (+) or (-), selectable via special function applied to external arm input allows the auto-trigger function to establish the (+) and (-) signal peaks and trigger level only during the period when the arming signal is present |

**PEAK SIGNAL MEASUREMENT**

The auto-trigger function may be used to determine and indicate the peak maximum, peak minimum, and peak-to-peak values of the measurement signal applied to Inputs A or B.


| | |
|---|---|
| Display: | Individual 3-digit displays for Inputs A and B. |
| Frequency Range: | DC and 30 Hz to 25 MHz |
| Dynamic Range: | .15 to 10V p-p (X1 attenuation) |
| Resolution: | 10 mV (X1 attenuation) |
| Accuracy: | ± 5% of peak-to-peak voltage ± 20 mV for sine waves |
| | ± 2% of peak-to-peak voltage ± 20 mV for pulses > 20-ns wide and ≥ 5 ns rise time |

Table 1.1 - Technical Specifications (Cont'd)

| TIME BASE (See Option 04E) | |
|---|---|
| Frequency: | 10 MHz |
| Aging: | < 1 ppm per month<br>< 2 ppm for first year |
| Temperature Stability: | ± 10 ppm over the range 0° to 50°C, referenced to 25°C |
| External Standard Input: | |
| Frequency: | 1, 5, 10 MHz |
| Level: | Min., 500 mV rms, Max., 5V rms |
| Impedance: | 1 kilohm |
| Internal Standard Output: | |
| Frequency: | 10 MHz |
| Level: | > 1V p-p into 50 ohms |

| ARMING | |
|---|---|
| Start Arm: | |
| Input: | Inputs A, B or D, selectable via Special Functions 82.0-83.3 |
| Start Arm: | (+) or (-) edge, selectable via special function applied to external arm input allows counter to start a measurement cycle |

Table 3.10 - Rise A/Fall A Measurements

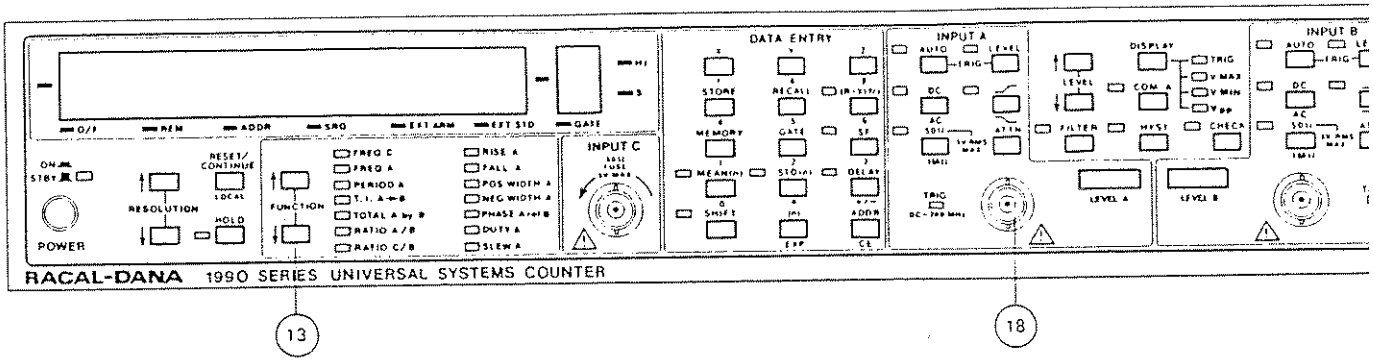



1. Turn power on.
2. Select either RISE A or FALL A using FUNCTION keys (13).
3. Connect measurement signal to INPUT A (18).

**NOTE:**

All other controls are set automatically.

Table 3.11 - Phase A rel B Measurement

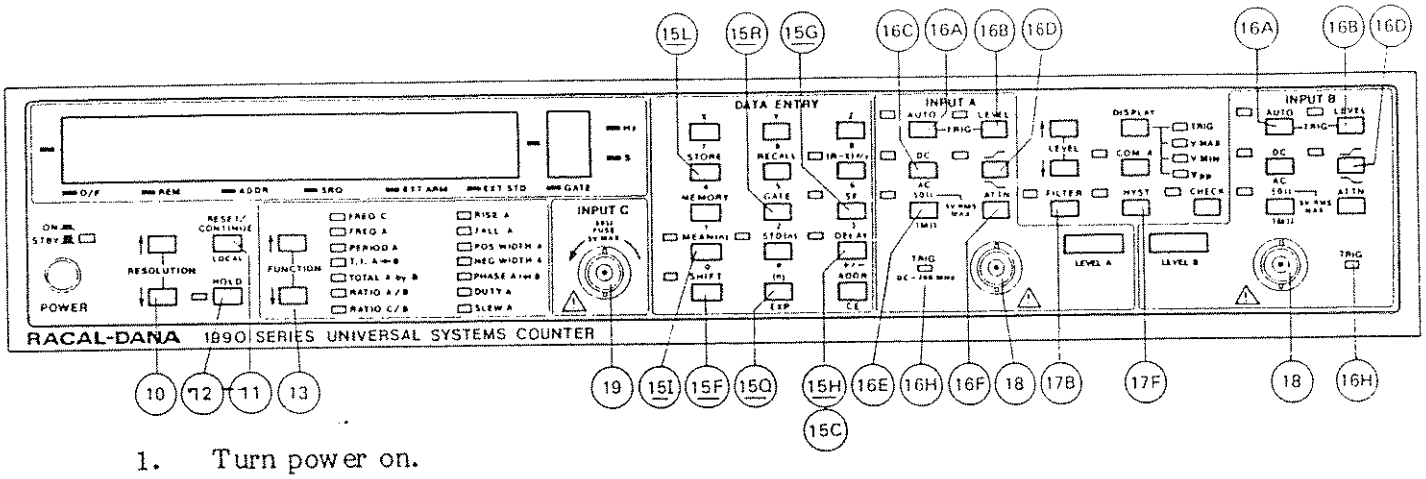



1. Turn power on.
2. Select PHASE A rel B using FUNCTION keys (13).
3. Select AC/DC coupling (16C), input impedance (16E), and slopes (16D) as required. Selected slopes for signals A and B should be the same.
4. Select the X10 or X50 input attenuation (16F) if desired. Attenuation setting is automatic in the Auto-Trigger mode.
5. Connect the signals to be compared to INPUT A and INPUT B (18).
6. Either set the trigger levels A/B manually using key sequence <value> +/- (15C) TRIG-LEVEL (16B), or select AUTO-TRIG A/B levels (16A). Check that Inputs A/B TRIG LEDs (16H) flash.
7. Select the Hold mode (12) for single-shot measurements. Press the RESET (11) while in Hold to trigger a new measurement.

**NOTE:**

A phase measurement is always positive, representing the angle by which Input A's signal leads that of Input B. The signals for phase measurement must be continuous and have the same frequency.

## Table 3.12 - Duty A Measurement

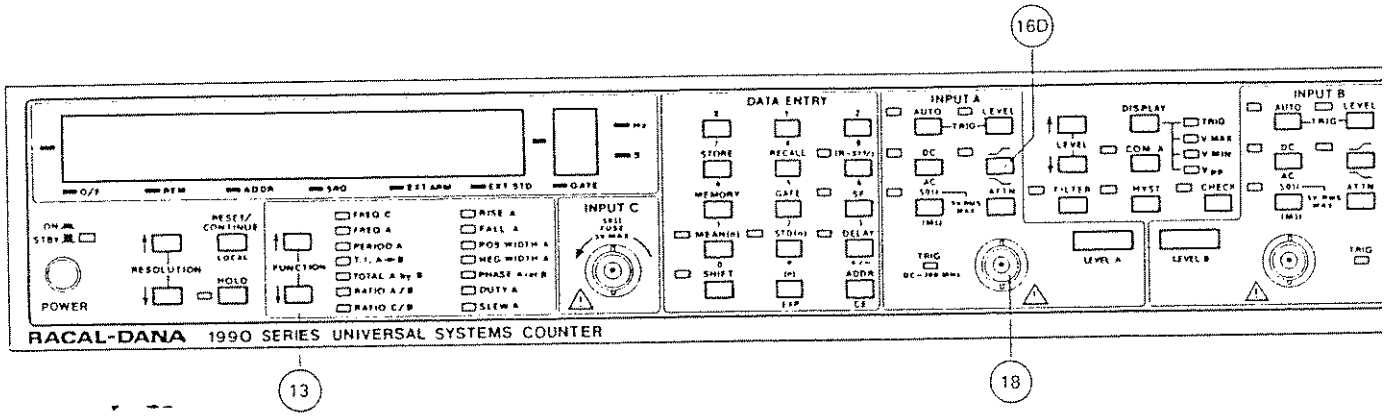



1. Turn power on.
2. Select DUTY A using FUNCTION keys (13).
3. Select the slope (16D) as required.
4. Connect the signal to INPUT A (18).

**NOTE:**

All other controls are set automatically.

Table 3.13 - Slew A Measurement

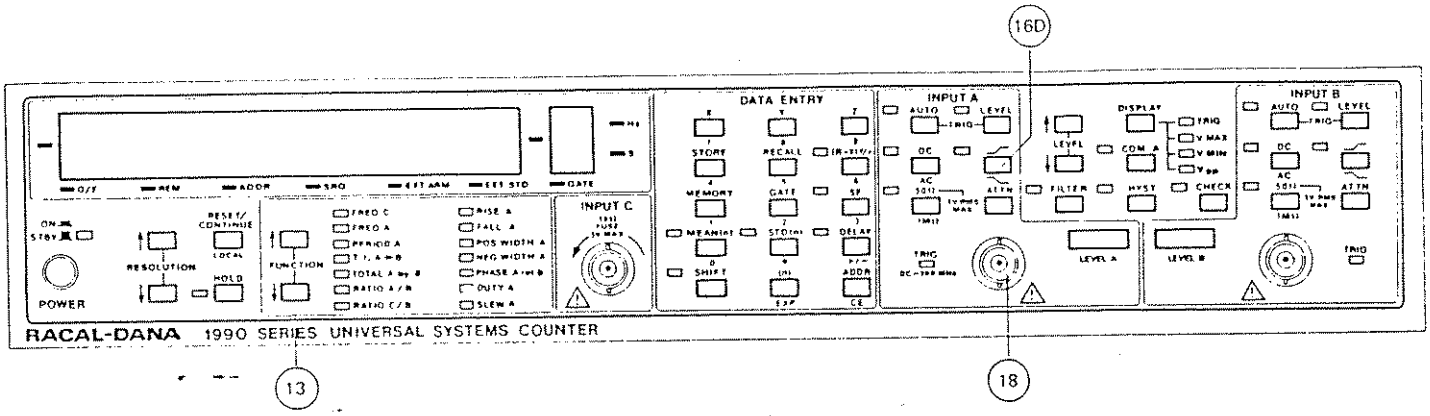


1. Turn power on.
2. Select SLEW A using FUNCTION key (13).
3. Select the slope (16D) as required.
4. Connect the signal to INPUT A (18).

**NOTE:**

All other controls are set automatically.

### 3.4.2 Trigger Level Setting

#### 3.4.2.1 Introduction

3.4.2.1.1 Refer to Figure 3.1 for this subsection. The 1995/1996 both provide manual automatic (including single-shot) trigger setting for Inputs A and B. Manual trigger select involves setting the levels in ±5V, ±50V, and ±250V ranges, with corresponding resolutions of mV, 100 mV, and 1V. These ranges correspond to attenuation settings of 1X, 10X, and 50X LEVEL A and B trigger displays of X.XX, XX.X, and XXX., respectively. Auto-Trigger leve the mean of the positive and negative-peak values of the input signal as automatic determined by the counter.

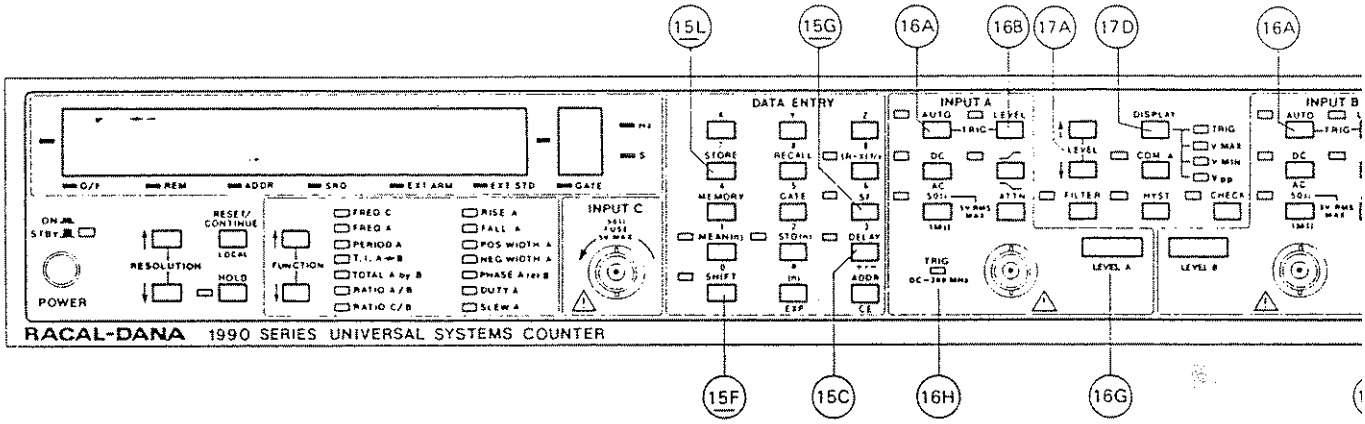



**Figure 3.1 - Trigger Level Setting**

#### 3.4.2.2 Manual Trigger Setting

**NOTE:**

An attenuation setting of X1 and a trigger level of 1.23 volts are used in the following description.

3.4.2.2.1 Set the trigger level manually using one of the following key sequences:

a. For setting a +1.23, use <1.23> TRIG-LEVEL (16B)

b. For setting a -1.23, use +/- (15C) <1.23> TRIG-LEVEL (16B)

3.4.2.2.2 After entering a manual trigger level, it is continuously displayed on the LEVEL A/LEVEL B LED(s) (16G). The 1995/1996 returns immediately to its measurement mode after trigger setting. TRIG A/TRIG B LED(s) (16H) flash if the counter is triggered from the input signal.

3.4.2.2.3 Use key sequence TRIG-LEVEL (16B) LEVEL ↑↓ (17A) TRIG-LEVEL (16B) to step the displayed trigger level up or down by 0.01 (X1), 0.1 (X10), or 1. (X50) as required. Verify the trigger level changes on the LEVEL A/LEVEL B LED(s) (16G).

3.4.2.2.4 A manual trigger level that is out-of-range for the current attenuation setting produces an error message.

NOTE:

INPUT A and B each have one trigger-level store. Using the Auto-Trigger mode overwrites a manually stored trigger setting. Also, pressing the AUTO-TRIG key (16A) while manually setting the level enables the Auto-Trigger mode. Toggle the AUTO-TRIG key (16A) off, then enter a manual trigger level.

3.4.2.2.5 Press the DISPLAY key (17D) to show V MAX, V MIN or Vpp of the input signal in the LEVEL A/LEVEL B display.

### 3.4.2.3 Automatic Trigger Setting

3.4.2.3.1 Press the required AUTO-TRIG key (16A) to calculate and show the trigger level in the LEVEL A/LEVEL B display. Automatic attenuation setting occurs in the Auto-Trigger mode.

3.4.2.3.2 Press the DISPLAY key (17D) to show V MAX, V MIN, or Vpp of the input signal in the LEVEL A/LEVEL B display.

### 3.4.2.4 Single-Shot Automatic Trigger

3.4.2.4.1 Automatic trigger settings vary as peak input levels change. To execute and store a single-shot Auto-Trigger level:

a. Enter Special Function 31 using key sequence 31 SHIFT (15F) STORE (15L) and SF (15G)

b. Enable special functions using key sequence SHIFT (15F) SF (15G)

c. Press the AUTO-TRIG key (16A). The LED lights as the level is calculated and set, then turns off.

3.4.2.4.2 The stored level is retained as a manually set value until either (1) another single-shot measurement is made, or (2) a new manual trigger level is entered.

3.4.2.4.3 To execute additional single-shot trigger settings, press the AUTO-TRIG key (16A) again with Special Function 31 enabled.

### 3.4.3 Gate Time and Resolution

#### 3.4.3.1 Frequency Functions

3.4.3.1.1 Gate Time Mode - by specifying the counter's gate time, the user can set the resolution in the frequency, period, and ratio functions. Gate times from 200 ns to 100s may be selected. To enter a gate time, use the key sequence ⟨value⟩ SHIFT STORE GATE where ⟨value⟩ is either in decimal or exponential form. To recall a gate time for display, use the key sequence SHIFT RECALL GATE. Use the RESOLUTION ↑↓ keys to decadically step the displayed gate time (and resolution) either up(↑) towards 100 s or down (↓) towards 200 ns. The counter's gate time (and resolution) can be set to display from one to ten digits (with overflow).

**EXAMPLE**

Assume EREQ A is selected and a 1 ms gate time specified. Successively pressing the RESOLUTION (↑) key will select and display gate times (and resolutions) of 10 ms, 100 ms, 1s, 10s, and 100s. Successively pressing the RESOLUTION (↓) key will select and display gate times (and resolutions) of 100 μs, 10 μs, and 1 μs. Pressing the RESOLUTION (↓) key again after displaying 1 μs will not produce a gate time of 100 ns as this value is smaller than the 200 ns lower gate-time limit. The 1 μs will continue to display on the counter.

3.4.3.1.2 Resolution Mode - when no gate time is specified in frequency, period, and ratio functions, the counter's resolution can be selected using the RESOLUTION (↑↓) keys. Now the gate time is automatically set via the number of displayed digits of resolution. Except in some Math computations, pressing the RESOLUTION (↑↓) keys will increment/decrement the display by one digit per keyboard maneuver. Each digit displayed decadically increases/decreases the counter's resolution within the counter's gate time range. Gate times from 200 ns to 100 s may be selected. There will be no step-up or-down when the RESOLUTION (↑↓) keys are pressed in Time Interval, Totalize, Rise/Fall Time, Positive/Negative Pulse Width, or Slew Rate functions.

**EXAMPLE**

A 9-digit resolution of a measurement is possible in a 1-second gate time; 10-digit resolution in a 10-second gate time; and 10-digit resolution plus overflow in a 100-second gate time. If one selects a gate time which sets a resolution exceeding the 10-digit display resolution, then an overflow of the most significant digit(s) and lighting of the O/F LED occurs. Two overflow states are permitted in the 1995/1996. In an overflow condition, the user can reduce the gate time to display any "dropped" digit(s). Digits that overflow are not lost, but remain stored in the counter's registers for output over the GPIB.

#### 3.4.3.2 Time Functions

3.4.3.2.1 In Time Interval functions (TI A→B, Rise/Fall, and Pulse Width, e.g.,), the input signal is synchronized with the measurement gate. Thus, there is no gate time as such. The input signal, therefore, determines the counter's resolution. On the 1995/1996, a single-shot Time Interval resolution to 1 ns is possible.

### 3.4.4 Delay Mode

3.4.4.1 When Time Interval (TI), Totalize, or Positive/Negative Pulse Width is selected, an internal delay from 200 ns to 100 s may be entered from the front panel. This permits the user to increase the elapsed time between the start and stop trigger points by the gate time range. Once stored, the delay may be enabled/disabled as required. Use of the Delay mode prevents premature triggering from spurious signals during measurement.

3.4.4.2 The delay is stored using either an exponential or decimal format. Use one of the following key sequences to store, for example, a 1 μs delay:

a. 1 EXPONENT +/- 6 SHIFT STORE DELAY

b. <.000001>SHIFT STORE DELAY

NOTE:

Once the delay is entered, the counter returns to the measurement mode.

3.4.4.3 Recall the delay to the main display using key sequence SHIFT RECALL DELAY.

3.4.4.4 Enable and disable a stored delay by successively using key sequence SHIFT DELAY. The LED lights when the Delay mode is enabled.

### 3.4.5 Arming/Gating Selection

3.4.5.1 Refer to Table 3.14 as required. External arming, external gating, and synchronous window auto-trigger (Syn. Wind. AT) modes are selectable via special functions for Inputs A, B, or D.

### 3.4.5.2 External Arming

3.4.5.2.1 Special Functions 82.0 through 83.3 as applied to the external arming input (A, B, or D) permit selection of positive or negative start edges in the 1995/1996.

### 3.4.5.3 External Gating

3.4.5.3.1 Special Functions 85.0 through 88.3 as applied to external gating inputs (A, B, or D) permit selection of positive or negative start/stop edges in the 1995/1996.

### 3.4.5.4 Synchronous Window Auto-Trigger (Syn. Wind. AT)

3.4.5.4.1 Special Functions 91.0 through 94.3 as applied to the external arming input (A, B, or D) permit selection of positive or negative start/stop edges in the counter. Auto-trigger can establish the positive/negative signal peak measurements and trigger level only during the time when the Syn. Wind. AT signal is present. The auto-trigger can now be used for display of peak voltage values of a specific pulse(s) selected by the operator using the Syn. Window AT signal.

### 3.4.6 Math Function (R-X)Y/Z

3.4.6.1 The Math function applies to all counting and timing functions of the 1995/1996 except phase measurement. This function permits measurement value R to be offset, normalized, and/or scaled before display using stored constants X, Y, and/or Z, respectively. The display indicates (R-X)Y/Z after enabling the Math function. Home state values for X, Y, and Z are 0, 1, and 1, respectively (Z≠0 at any time).

### 3.4.6.2 Math Constant Storage

3.4.6.2.1 Constants X, Y, and/or Z must be stored before enabling the Math function. Use key sequence <value> SHIFT STORE X/Y/Z, where <value> is in decimal or exponential form, to enter any of the constants. The permissible range of values for the Math constants is ± 0.000000001E-9 to ± 9999999999E9. Any number exceeding this range will result in "Error 20" being displayed.

### 3.4.6.3 Math Constant Recall

3.4.6.3.1 Recall stored Math constants to the main display using key sequence SHIFT RECALL X/Y/Z.

### 3.4.6.4 Math Function Enabling/Disabling

3.4.6.4.1 Enable and disable the Math function by successively using key sequence SHIFT (R-X)Y/Z. The LED lights when the Math function is enabled.

### 3.4.7 Statistical Functions/(n) Samples

3.4.7.1 The 1995/1996 Statistical functions include the Mean, Standard Deviation, and Low/High values for user-entered (n) samples. Mean and Standard Deviation are enabled using single front-panel keys; Low/High values by special functions.

### 3.4.7.2 (n) Samples

3.4.7.2.1 The range of (n) samples is any positive integer from 2 to 9999 (fractions entered for n are truncated). Home state value for (n) samples is 100.

3.4.7.2.2 To store (n) samples, use the key sequence <n> SHIFT STORE (n) where <n> is a valid integer. To recall (n) samples for display, use the key sequence SHIFT RECALL (n). Pushing RESET restarts the period of (n) samples.

### 3.4.7.3 High/Low Values

3.4.7.3.1 Use Special Function 51 and key sequences 51 SHIFT STORE SF and SHIFT SF to calculate and display the High value of (n) samples. Use Special Function 52 and key sequences 52 SHIFT STORE SF and SHIFT SF to calculate and display the Low value of (n) samples. If enabled, the MEAN(n) or STD(n) key is disabled during determination of High/Low values.

### 3.4.7.4 MEAN(n)/STD(n) Functions

3.4.7.4.1 Successively use key sequence SHIFT MEAN(n) or SHIFT STD(n) to enable and disable the corresponding statistical function. Pressing SHIFT MEAN(n)/SHIFT STD(n) automatically deselects the opposite function if enabled. Updating of the main display for either statistical function only occurs after (n) samples have been executed.

### 3.4.8 Special Functions

3.4.8.1 Table 3.14 lists the special functions available on the 1995/1996. All special functions are designated by either a two or three-digit special function number (NN or NN.N). In the table, special functions are organized by mutually exclusive groups shown by lined sections. Selecting a member of one of these groups automatically deselects all other special functions in that group. Storing a circled special function disables all special functions in a group. Circled special functions may not be recalled.

#### 3.4.8.2 Special Function Storage

3.4.8.2.1 Special function numbers must be entered into memory before special functions can be enabled. Use the following key sequence to store, for example, special function number 81: 81 SHIFT STORE SF.

3.4.8.2.2 The digits for a special function number are shown on the main display as the numeric keys are pressed. Once the number is stored, the counter automatically returns to the measurement mode. Storing a special function number overwrites other numbers within its group.

#### 3.4.8.3 Special Function Recall

3.4.8.3.1 Stored special functions are recalled to the main display using key sequence SHIFT RECALL SF. The lowest special function number in memory will be shown first on the display. Use the RESOLUTION keys (↑↓) to scroll through the current set of special function numbers.

#### 3.4.8.4 Special Function Enabling/Disabling

3.4.8.4.1 Enable and disable stored special functions by successively using key sequence SHIFT SF. The LED lights when special functions are enabled.

**NOTE:**

Storing a special function when special functions are enabled immediately enables that special function.

Table 3.14 - Special Functions (SFs)

| SF Number | Function |
|---|---|
| 0 | No special functions. Storing SF0 erases all current special functions. SF0 r be recalled for display. SF0 is present after power-up |
| (20) | Default for SF 21. Normal Inputs A and B |
| 21 | Inputs A and B exchanged |
| (27) | Default for SFs 28, 29. Filter functions for both Inputs A and B |
| 28 | Filter key functions with Input A only |
| 29 | Filter key functions with Input B only |
| (30) | Default for SF 31. Continuous Auto-Trigger mode |
| 31 | Single-Shot Auto-Trigger mode |
| (40) | Default for SF 41. Read rate of 300 ms |
| 41 | Maximum read rate |
| (50) | Default for SFS 51, 52. Normal statistics operation |
| 51 | Display highest value for (n) samples |
| 52 | Display lowest value for (n) samples |
| (60) | Default for SF 61. Automatic start/stop totalize |
| 61 | Manual start/stop totalize |
| 70 | Keypad test for front-panel LEDs. No SF enabling necessary; just store the SF to initiate the test |
| (80) | Default for SFs 80 - 90. No external arming, external gate, or synchro window auto-trigger (Syn. Wind. AT) |

Table 3.14 - Special Functions (Cont'd)

| SF Number | Function |
|---|---|
| (81) | External arming off |
| 82.0 | Ext. arming, (+) slope - Input A |
| 82.1 | - Input B |
| 82.2 | - Input D, Zero-Crossing Trigger Level |
| 82.3 | - Input D, TTL-Crossing Trigger Level |
| | (82.3 is the default for SFs 82.0 - 82.3) |
| 83.0 | Ext. arming, (-) slope - Input A |
| 83.1 | - Input B |
| 83.2 | - Input D, Zero-Crossing Trigger Level |
| 83.3 | - Input D, TTL-Crossing Trigger Level |
| | (83.3 is the default for SFs 83.0 - 83.3) |
| (84) | External gate off |
| 85.0 | Ext. gate, start (+) stop (+) - Input A |
| 85.1 | - Input B |
| 85.2 | - Input D, Zero-Crossing Trigger Levels |
| 85.3 | - Input D, TTL-Crossing Trigger Levels |
| | (85.3 is the default for SFs 85.0 - 85.3) |
| 86.0 | Ext. gate, start (+) stop (-) - Input A |
| 86.1 | - Input B |
| 86.2 | - Input D, Zero-Crossing Trigger Levels |
| 86.3 | - Input D, TTL-Crossing Trigger Levels |
| | (86.3 is the default for SFs 86.0 - 86.3) |
| 87.0 | Ext. gate, start (-) stop (+) - Input A |
| 87.1 | - Input B |
| 87.2 | - Input D, Zero-Crossing Trigger Levels |
| 87.3 | - Input D, TTL-Crossing Trigger Levels |
| | (87.3 is the default for SFs 87.0 - 87.3) |
| 88.0 | Ext. gate, start (-) stop (-) - Input A |
| 88.1 | - Input B |
| 88.2 | - Input D, Zero-Crossing Trigger Levels |
| 88.3 | - Input D, TTL-Crossing Trigger Levels |
| | (88.3 is the default for SFs 88.0 - 88.3) |
| (90) | Synchronous Window Auto-Trigger (Syn. Wind. AT) off |
| 91.0 | Syn. Wind. AT, start (+) stop (+) - Input A |
| 91.1 | - Input B |
| 91.2 | - Input D, Zero-Crossing Trigger Levels |
| 91.3 | - Input D, TTL-Crossing Trigger Levels |
| | (91.3 is the default for SFs 91.0 - 91.3) |
| 92.0 | Syn. Wind. AT, start (+) stop (-) - Input A |
| 92.1 | - Input B |
| 92.2 | - Input D, Zero-Crossing Trigger Levels |
| 92.3 | - Input D, TTL-Crossing Trigger Levels |
| | (92.3 is the default for SFs 92.0 - 92.3) |

Table 3.14 - Special Functions (Cont'd)

| SF Number | Function | |
|---|---|---|
| 93.0 | Syn. Wind. AT, start (-) stop (+) | - Input A |
| 93.1 | | - Input B |
| 93.2 | | - Input D, Zero-Crossing Trigger L |
| 93.3 | | - Input D, TTL-Crossing Trigger L |
| | (93.3 is the default for SFs 93.0 - 93.3) | |
| 94.0 | Syn. Wind. AT, start (-) stop (-) | - Input A |
| 94.1 | | - Input B |
| 94.2 | | - Input D, Zero-Crossing Trigger L |
| 94.3 | | - Input D, TTL-Crossing Trigger L |
| | (94.3 is the default for SFs 94.0 - 94.3) | |

**NOTE:**

When the main function of the 1995/1996 is changed, Special Functions 80 - 94 are reviewed. If setup conditions are appropriate for the new function, they are retained; if they are not, they are cancelled. The setup conditions, however, are reactivated when the original function is reselected because of the counter's one level of keyboard memory.

### 3.4.9 Error Codes

3.4.9.1 Table 3.15 lists the error codes that may be displayed by the counter during local operation either as "OP Error" or in the form "Error NN" where NN is a 2-digit code number. Error codes will clear automatically after displaying for about 2-3 seconds.

**Table 3.15 - Error Codes**

| Displayed Codes | | Error |
|---|---|---|
| OP Error | | Key invalid in present machine state or key out-of-sequence |
| Error | 20 | Input number out-of-range |
| | 23 | Phase measurement ratio out-of-range |
| | 24 | Hardware ratio measurement ratio produced divide by zero |
| | 25 | Internal totalize error |
| | 34 | Display underflow |
| | 35 | Display overflow |
| | 40 | Non-Vol Memory error during calibration |
| | 41 | Non-Vol Memory error-data verification failure of machine setup store |
| | 42 | Non-Vol Memory error-attempted recall of nonexistent machine setup store |
| | 50 | Normalize function error (R-X)Y/Z |
| | 51 | Statistical calculation error |
| | 60 | Internal self-test: RAM |
| | 61 | Internal self-test: ROM |
| | 62 | Internal self-test: Non-Vol Memory |
| | 63 | Internal self-test: measurement amplifier failure |

Table 3.15 - Error Codes Cont'd)

| Displayed Codes | Error |
|---|---|
| 64 | Internal self-test: measurement logic failure |
| 70 | Floating point addition error |
| 71 | Floating point multiplication error |
| 72 | Floating point division error |
| 73 | Floating point compare error |
| 74 | Floating point operation undefined |
| 75 | Floating point underflow |
| 76 | Floating point overflow |
| 78 | ASCII to floating point conversion error |
| 79 | Floating point to ASCII conversion error |
| 80 | Double precision compare error |
| 81 | Double precision to ASCII error |
| 82 | Double precision to floating point conversion error |
| 83 | Integer division by zero |
| 99 | Internal software error |

Table 3.16 - Non-Vol Memory Locations

| Function/Description | Location |
|---|---|
| Non-vol memory recall from 0-9 | 0-9 |
| Non-vol memory store from 0-9 | 0-9 (see Notes) |

**NOTE 1:**

Storing a setup (memory locations 0-9) requires a nominal 2-second wait after keyboard entry.

**NOTE 2:**


Calibration constants can only be viewed when the unit is in the Check mode. Also, calibration constants are only stored during the CAL Store step of the calibration procedure (see Section 6).

| | |
|---|---|
| Recall calibration constants: | |
| DAC constants | |
| Input A slope multiplier | 10 |
| Input A slope offset | 11 |
| Input B slope multiplier | 12 |
| Input B slope offset | 13 |
| Input path constants | |
| Input A start, hyst. low, offset | 14 |
| Input A start, hyst. low, hysteresis | 15 |
| Input A start, hyst. high, offset | 16 |
| Input A start, hyst. high, hysteresis | 17 |
| Input A stop, hyst. low, offset | 18 |
| Input A stop, hyst. low, hysteresis | 19 |
| Input A stop, hyst. high, offset | 20 |
| Input A stop, hyst. high, hysteresis | 21 |
| Input B start, hyst. low, offset | 22 |
| Input B start, hyst. low, hysteresis | 23 |
| Input B start, hyst. high, offset | 24 |
| Input B start, hyst. high, hysteresis | 25 |
| Input B stop, hyst. low, offset | 26 |
| Input B stop, hyst. low, hysteresis | 27 |
| Input B stop, hyst. high, offset | 28 |
| Input B stop, hyst. high, hysteresis | 29 |
| Time Interval constants | |
| A-start, B-stop; A-positive, B-negative | 30 |
| A-start, A-stop; A-negative, B-positive | 31 |
| B-start, A-stop; A-positive, B-negative | 32 |
| B-start, B-stop; A-negative, B-positive | 33 |

## 4.1 GENERAL PURPOSE INTERFACE BUS (GPIB)


### 4.1.1 Introduction

4.1.1.1 This subsection provides operating information for the 1995/1996 using the GPIB system interface. The IEEE-488-1978 interface permits remote control of all the counter's functions except POWER ON/OFF. Inputs and outputs are made via a standard 24-pin GPIB connector (see Figure 4.1) on the rear panel. Pin location, signal line identification, and GPIB operation comply with IEEE-STD-488-1978. The GPIB provides interface capability with other instruments and a controller also using the interface-bus structure (see Figure 4.2). This figure also shows signal line designations and pin assignments. IEEE-STD-488-1978 subsets available are listed in Table 4.1.

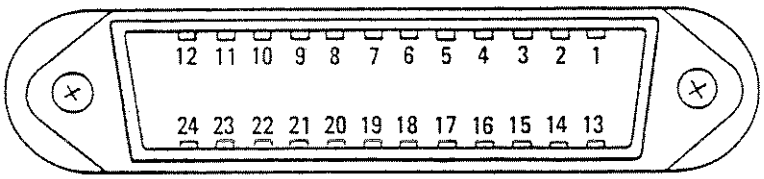


| Pin No. | Assignment | Pin No. | Assignment |
|---|---|---|---|
| 1 | DIO 1 | 13 | DIO 5 |
| 2 | DIO 2 | 14 | DIO 6 |
| 3 | DIO 3 | 15 | DIO 7 |
| 4 | DIO 4 | 16 | DIO 8 |
| 5 | EOI | 17 | REN |
| 6 | DAV | 18 | GND, (6) |
| 7 | NRFD | 19 | GND, (7) |
| 8 | NDAC | 20 | GND, (8) |
| 9 | IFC | 21 | GND, (9) |
| 10 | SRQ | 22 | GND, (10) |
| 11 | ATN | 23 | GND, (11) |
| 12 | SHIELD | 24 | GND, (5 and 17) |

**Figure 4.1 - GPIB Connector (Rear Panel)**

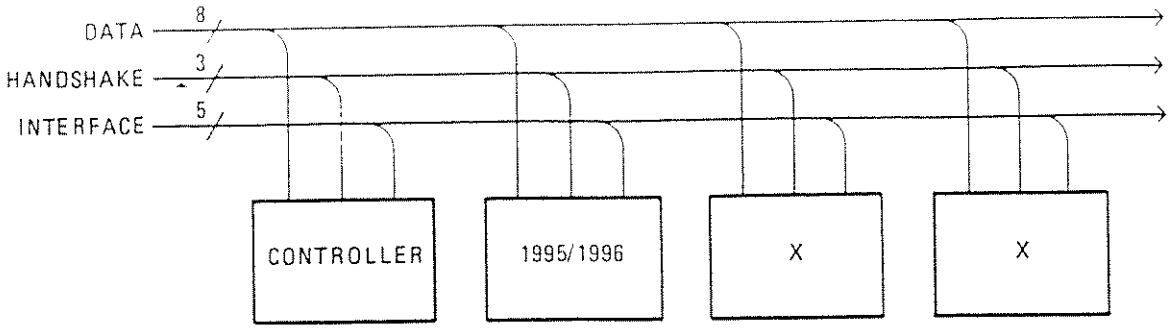


| Pin | Nomenclature | Description |
|---|---|---|
| 1<br>2<br>3<br>4<br>13<br>14<br>15<br>16 | DIO-1 Data In/Out Bit 1 (LSB)<br>DIO-2 Data In/Out Bit 2<br>DIO-3 Data In/Out Bit 3<br>DIO-4 Data In/Out Bit 4<br>DIO-5 Data In/Out Bit 5<br>DIO-6 Data In/Out Bit 6<br>DIO-7 Data In/Out Bit 7<br>DIO-8 Data In/Out Bit 8 | Data lines are used to transfer data from one instrument to another |
| 6<br>7<br>8 | DAV (Data Valid)<br>NRFD (Not Ready for Data)<br>NDAC (Not Data Accepted) | Handshake lines operate in a proper time sequence for complete communication between instruments |
| 5<br>9<br>10<br>11<br>17 | EOI (End or Identify)<br>IFC (Interface Clear)<br>SRQ (Service Request)<br>ATN (Attention)<br>REN (Remote Enable) | Interface lines are used to provide an orderly flow of information between units |
| 12<br>18<br>19<br>20<br>21<br>22<br>23<br>24 | SHIELD<br>GND (6)<br>GND (7)<br>GND (8)<br>GND (9)<br>GND (10)<br>GND (11)<br>GND (5 and 17) | |

**Figure 4.2 - Interface Signal Pin Assignments**

## 4.2 GPIB DESCRIPTION

4.2.1 Refer to Figure 4.2. There are 24 lines available at the GPIB connector, including 16 signal and 7 ground return lines, and one shield. All of the data bus lines are either input or output lines, having the following characteristics:

| | |
|---|---|
| Logic Levels: | 1 = Low = $\leq .8V$ |
| | 0 = High = $\geq 2.0V$ |
| Input Loading: | Each input = one TTL load |
| Output: | The output is capable of driving 15 interface bus loads. It consists of an open-collector driver and is capable of sinking 48 mA with a maximum voltage drop of 0.5 volts. See the IEEE-488 Electrical Specifications. |

Table 4.1 - IEEE-488-1978 Standard Interface Subset Capability

| GPIB Subset | Description | Applicable Capability |
|---|---|---|
| SH1 | Source Handshake | Complete Capability |
| AH1 | Acceptor Handshake | Complete Capability |
| T5 | Talker | Complete Capability<br>(1) Basic Talker<br>(2) Serial Poll<br>(3) Talk Only Mode<br>(4) Unaddress if MLA |
| TE0 | Extended Talker | None |
| L4 | Listener | Complete except Listen Only<br>(1) Basic Listener<br>(2) Unaddress if MTA |
| LE0 | Extended Listener | None |
| SR1 | Service Request | Complete Capability |
| RL1 | Remote/Local | Complete Capability<br>(1) REN - Remote Enable<br>(2) LLO - Local Lockout<br>(3) GTL - Go to Local |
| PP0 | Parallel Poll | No Capability |
| DC1 | Device Clear | Complete Capability<br>(1) DCL - Device Clear<br>(2) SDC - Selected Device Clear |
| DT1 | Device Trigger | Complete Capability<br>GET - Group Execute Trigger |
| C0 | Controller | No Capability |
| E1 | Open Collector Bus Drivers | |

4.2.2 The signal lines shown in Figure 4.2 consist of three functionally separate sets: Data, Handshake, and Interface.

4.2.2.1 Data - the data lines consist of DIO-1 to DIO-8. These lines are the signal channels over which data flows between all instruments on the bus in bit-parallel, byte-serial form.

4.2.2.2 Handshake - these three transfer lines consist of: DAV (Data Valid), NDAC (Not Data Accepted), and NRFD (Not Ready for Data). These lines provide communication between GPIB bus members (i.e., between the instrument that is talking and the instrument(s) that are listening) to synchronize the information flow across the eight data lines. These lines derive their nomenclature from their meaning in the low or 1 state (e.g., when NRFD is low, the device is Not Ready for Data).

a. DAV - signifies that valid information is available on the data lines

b. NRFD - signifies that the instrument is not ready to accept information

c. NDAC - signifies that information is not accepted by the acceptor bus device

4.2.2.3 Interface - these five interface lines coordinate the information flow on the bus.

a. IFC (Interface Clear) - places the instrument in the Idle state (i.e., Untalk, Unlisten)

b. ATN (Attention) - indicates the kind of information on the data lines during a handshake transfer sequence. Low indicates data lines carry interface commands; high indicates that the data lines carry data

c. REN (Remote Enable) - arms the instrument to select Remote operation when it's addressed as a listener

d. SRQ (Service Request) - signals the system controller that a peripheral device or bus member wants attention for purposes such as transmitting measurement, status, or condition information to the system controller

e. EOI (End or Identify) - used for (1) signifying the end of a message and (2) signalling bus peripherals to set the I/O bit assigned for parallel poll identification

### 4.2.3 GPIB Handshake

4.2.3.1 The handshake sequence is the process by which each data byte is transferred from the source to the acceptor.

4.2.3.2 Refer to Figure 4.3. It shows the sequential relationship between the DAV, NFRD, and NDAC lines used to transfer data bytes. Figure 4.4 shows the handshake flow chart.

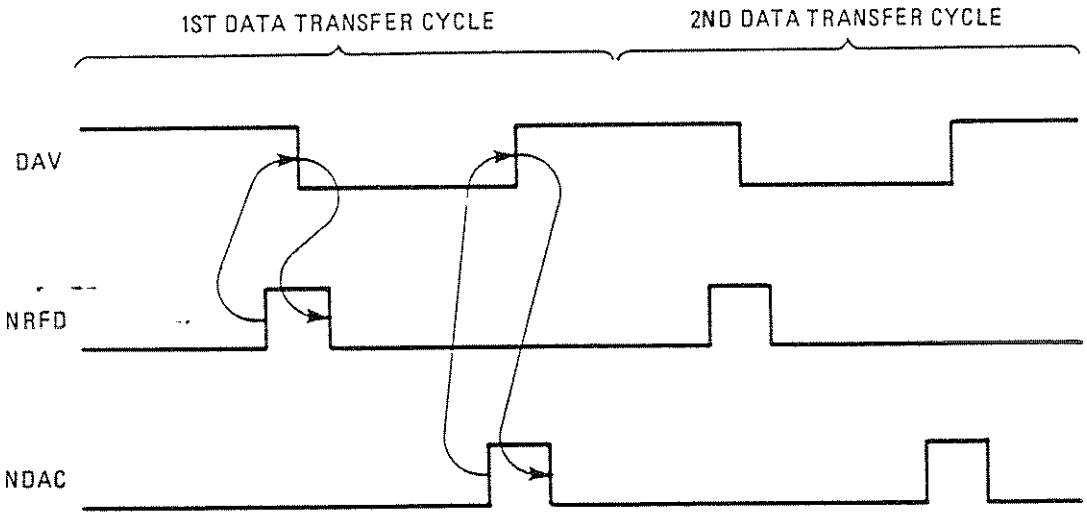



**Figure 4.3 - Handshake Sequence**

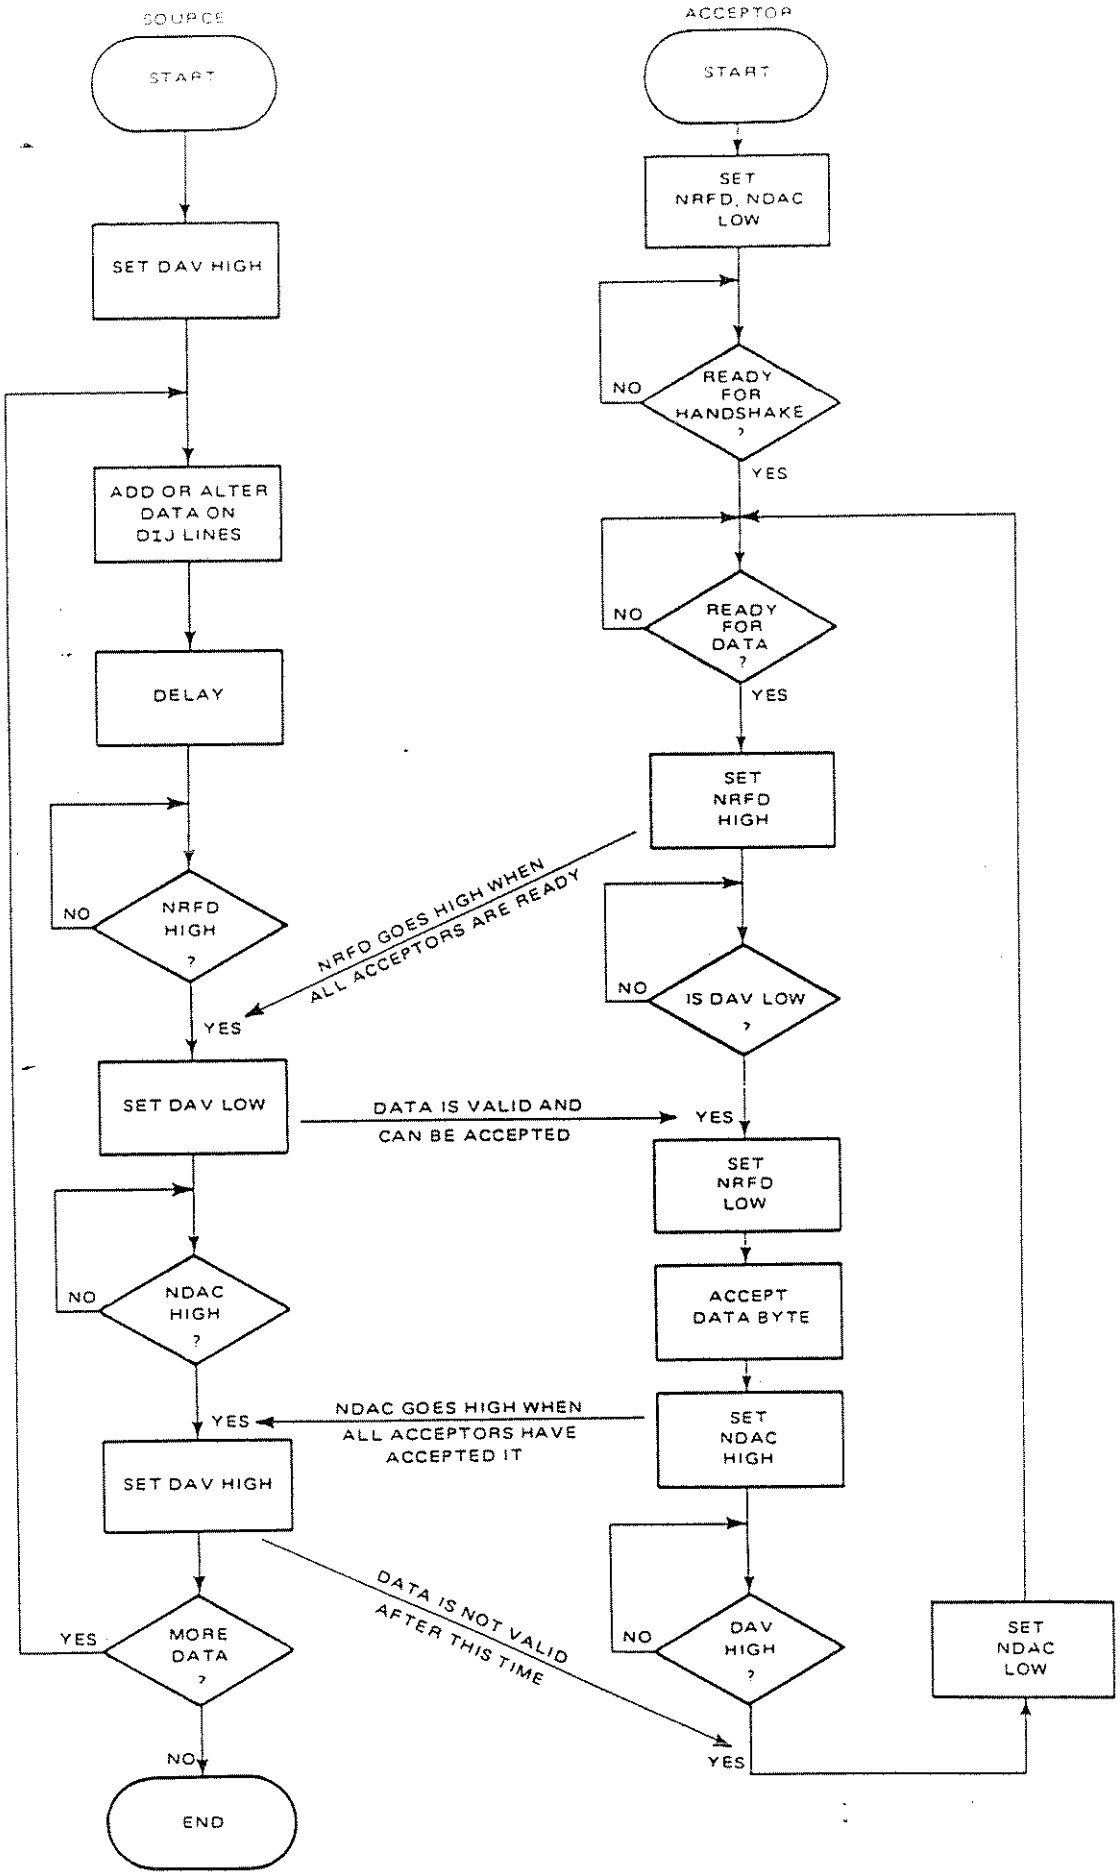



**Figure 4.4 – Handshake Flow Chart**

## 4.3 GPIB ADDRESS ASSIGNMENT

4.3.1 The 1995/1996 must be assigned an address as a bus member when operating in a GPIB system. Assigning an address to the counter permits it to be "called up" by the system controller or other resident bus device without interfering with it.

4.3.2 Table 4.2 provides the available numbers for programming the counter's GPIB address and determining the various talk/listen address codes used in programming the controller.

4.3.3 To program the counter's address, use key sequence <number> SHIFT STORE ADDR where <number> is any number from 00 through 30. To recall the counter's address, use key sequence SHIFT RECALL ADDR. To change the counter's address, simply enter the new address. The new GPIB address will overwrite the old one. The counter will automatically return to its measurement mode.

4.3.4 To enable the Talk-Only mode, just enter 99 as the new address. This will not affect the counter's selected bus address (00 through 30), but will set the unit to respond only as a talker (see Subsection 4.5.2 for details). To exit the Talk-Only mode, just reenter the counter's selected bus address or a new bus address.

**NOTE:**

Printed instructions for address programming are found on the rear panel just to the right of the GPIB connector.

4.3.5 Observe in the table that the far right column lists the number addresses that can be assigned to the counter. Once an address has been selected and stored, the controller may then address the 1995/1996 as a talker/listener by transmitting the appropriate ASCII character on the data lines. The "DATA LINES" column of the table shows the 7-bit binary codes for every talk/listen address assigned to the counter. The controller transmits these codes to the counter to establish its talker/listener status.

4.3.6 Note also in the table that there are two address codes for each GPIB address number. Each code represents a different ASCII character. For example, if an address of 02 is assigned to the counter, the talk address is ASCII character B and the listen address is ASCII character ". The only difference in the binary code in each case is the state of data lines D6 and D7.

4.3.7 The counter is preset at GPIB address 03 when shipped.

Table 4.2 - 1995/1996 GPIB Address and Talk/Listen Codes

| ASCII CHARACTERS | | DATA LINES | | | | | | | DECIMAL ADDRESS |
|---|---|---|---|---|---|---|---|---|---|
| | | $D_7$ | $D_6$ | $D_5$ | $D_4$ | $D_3$ | $D_2$ | $D_1$ | |
| TALK | LISTEN | TALK | LISTEN | ADDRESS | | | | | |
| | | | | 16 | 8 | 4 | 2 | 1 | |
| | SP | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 00 |
| @ | | 1 | 0 | 0 | 0 | 0 | 0 | 0 | |
| | ! | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 01 |
| A | | 1 | 0 | 0 | 0 | 0 | 0 | 1 | |
| | " | 0 | 1 | 0 | 0 | 0 | 1 | 0 | 02 |
| B | | 1 | 0 | 0 | 0 | 0 | 1 | 0 | |
| | # | 0 | 1 | 0 | 0 | 0 | 1 | 1 | 03 |
| C | | 1 | 0 | 0 | 0 | 0 | 1 | 1 | |
| | $ | 0 | 1 | 0 | 0 | 1 | 0 | 0 | 04 |
| D | | 1 | 0 | 0 | 0 | 1 | 0 | 0 | |
| | % | 0 | 1 | 0 | 0 | 1 | 0 | 1 | 05 |
| E | | 1 | 0 | 0 | 0 | 1 | 0 | 1 | |
| | & | 0 | 1 | 0 | 0 | 1 | 1 | 0 | 06 |
| F | | 1 | 0 | 0 | 0 | 1 | 1 | 0 | |
| | ' (APOSTROPHE) | 0 | 1 | 0 | 0 | 1 | 1 | 1 | 07 |
| G | | 1 | 0 | 0 | 0 | 1 | 1 | 1 | |
| | ( | 0 | 1 | 0 | 1 | 0 | 0 | 0 | 08 |
| H | | 1 | 0 | 0 | 1 | 0 | 0 | 0 | |
| | ) | 0 | 1 | 0 | 1 | 0 | 0 | 1 | 09 |
| I | | 1 | 0 | 0 | 1 | 0 | 0 | 1 | |
| | * | 0 | 1 | 0 | 1 | 0 | 1 | 0 | 10 |
| J | | 1 | 0 | 0 | 1 | 0 | 1 | 0 | |
| | + | 0 | 1 | 0 | 1 | 0 | 1 | 1 | 11 |
| K | | 1 | 0 | 0 | 1 | 0 | 1 | 1 | |
| | , | 0 | 1 | 0 | 1 | 1 | 0 | 0 | 12 |
| L | | 1 | 0 | 0 | 1 | 1 | 0 | 0 | |
| | – | 0 | 1 | 0 | 1 | 1 | 0 | 1 | 13 |
| M | | 1 | 0 | 0 | 1 | 1 | 0 | 1 | |
| | . | 0 | 1 | 0 | 1 | 1 | 1 | 0 | 14 |
| N | | 1 | 0 | 0 | 1 | 1 | 1 | 0 | |
| | / | 0 | 1 | 0 | 1 | 1 | 1 | 1 | 15 |
| O | | 1 | 0 | 0 | 1 | 1 | 1 | 1 | |

Table 4.2 - 1995/1996 GPIB Address and Talk/Listen Codes (Cont'd)

| ASCII CHARACTERS | | DATA LINES | | | | | | | DECIMAL ADDRESS |
|---|---|---|---|---|---|---|---|---|---|
| | | $D_7$ | $D_6$ | $D_5$ | $D_4$ | $D_3$ | $D_2$ | $D_1$ | |
| TALK | LISTEN | TALK | LISTEN | ADDRESS | | | | | |
| | | | | 16 | 8 | 4 | 2 | 1 | |
| | ø | 0 | 1 | 1 | 0 | 0 | 0 | 0 | 16 |
| P | | 1 | 0 | 1 | 0 | 0 | 0 | 0 | |
| | 1 | 0 | 1 | 1 | 0 | 0 | 0 | 1 | 17 |
| Q | | 1 | 0 | 1 | 0 | 0 | 0 | 1 | |
| | 2 | 0 | 1 | 1 | 0 | 0 | 1 | 0 | 18 |
| R | | 1 | 0 | 1 | 0 | 0 | 1 | 0 | |
| | 3 | 0 | 1 | 1 | 0 | 0 | 1 | 1 | 19 |
| S | | 1 | 0 | 1 | 0 | 0 | 1 | 1 | |
| | 4 | 0 | 1 | 1 | 0 | 1 | 0 | 0 | 20 |
| T | | 1 | 0 | 1 | 0 | 1 | 0 | 0 | |
| | 5 | 0 | 1 | 1 | 0 | 1 | 0 | 1 | 21 |
| U | | 1 | 0 | 1 | 0 | 1 | 0 | 1 | |
| | 6 | 0 | 1 | 1 | 0 | 1 | 1 | 0 | 22 |
| V | | 1 | 0 | 1 | 0 | 1 | 1 | 0 | |
| | 7 | 0 | 1 | 1 | 0 | 1 | 1 | 1 | 23 |
| W - | | 1 | 0 | 1 | 0 | 1 | 1 | 1 | |
| | 8 | 0 | 1 | 1 | 1 | 0 | 0 | 0 | 24 |
| X | | 1 | 0 | 1 | 1 | 0 | 0 | 0 | |
| | 9 | 0 | 1 | 1 | 1 | 0 | 0 | 1 | 25 |
| Y | | 1 | 0 | 1 | 1 | 0 | 0 | 1 | |
| | : | 0 | 1 | 1 | 1 | 0 | 1 | 0 | 26 |
| Z | | 1 | 0 | 1 | 1 | 0 | 1 | 0 | |
| | ; | 0 | 1 | 1 | 1 | 0 | 1 | 1 | 27 |
| [ | | 1 | 0 | 1 | 1 | 0 | 1 | 1 | |
| | < | 0 | 1 | 1 | 1 | 1 | 0 | 0 | 28 |
| \ | | 1 | 0 | 1 | 1 | 1 | 0 | 0 | |
| | = | 0 | 1 | 1 | 1 | 1 | 0 | 1 | 29 |
| ] | | 1 | 0 | 1 | 1 | 1 | 0 | 1 | |
| | > | 0 | 1 | 1 | 1 | 1 | 1 | 0 | 30 |
| ^ | | 1 | 0 | 1 | 1 | 1 | 1 | 0 | |
| NONE | | ILLEGAL | | | | | | | 31 |

## 4.4 INTERFACE MESSAGE REPERTOIRE and RESPONSE

### 4.4.1 Introduction

4.4.1.1 The 1995/1996 is equipped with a standard GPIB interface designed to meet IEEE-STD-488-1978 specifications. These specifications provide a definition of multiline interface messages, dividing them into two main groups:

a. Primary command group

b. Secondary command group

This counter includes only the primary commands in its interface repertoire.

4.4.1.2 The primary command group is further divided into four categories:

a. Listen address commands

b. Talk address commands

c. Addressed commands

d. Universal commands

### 4.4.2 Listen and Talk Address Commands

4.4.2.1 The counter is designed to include 31 listen and 31 talk addresses. (Table 4.2 lists these addresses.) The instrument responds to address messages as defined by the programmed GPIB address entered from the counter's front panel.

#### 4.4.2.2 Listen Addresses

4.4.2.2.1 Receipt by the counter of a listen address makes it a listener. If previously addressed to talk, the counter ceases to be a talker. In Local mode, the counter reverts to its Remote state, provided the REN message is true.

#### 4.4.2.3 Talk Addresses

4.4.2.3.1 Receipt by the counter of a talk address makes it a talker. If previously addressed to listen, the counter ceases to be a listener. If in Local mode, the counter will remain under local control.

#### 4.4.2.4 Talk Addresses-Other Devices

4.4.2.4.1 If the counter was previously addressed to talk, then receives the talk address of another bus device, the 1995/1996 ceases to be a talker.

### 4.4.3 Addressed and Universal Commands

4.4.3.1 Table 4.3 lists the Addressed and Universal commands to which the 1995/1996 responds. These interface commands are recognized because they are sent with the ATN message as true. The following paragraphs describe the counter's response to each of these commands.

Table 4.3 - Addressed and Universal Commands

| Message | Meaning | Hex Code | Decimal Equivalent | Data Line Code | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|
| | | | | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
| GTL | Go To Local | 01 | 1 | 0 | 0 | 0 | 0 | 0 | 0 | 1 |
| SDC | Selected Device Clear | 04 | 4 | 0 | 0 | 0 | 0 | 1 | 0 | 0 |
| GET | Group Execute Trigger | 08 | 8 | 0 | 0 | 0 | 1 | 0 | 0 | 0 |
| LLO | Local Lock Out | 11 | 17 | 0 | 0 | 1 | 0 | 0 | 0 | 1 |
| DCL | Device Clear | 14 | 20 | 0 | 0 | 1 | 0 | 1 | 0 | 0 |
| SPE | Serial Poll Enable | 18 | 24 | 0 | 0 | 1 | 1 | 0 | 0 | 0 |
| SPD | Serial Poll Disable | 19 | 25 | 0 | 0 | 1 | 1 | 0 | 0 | 1 |
| UNL | Unlisten | 3F | 63 | 0 | 1 | 1 | 1 | 1 | 1 | 1 |
| UNT | Untalk | 5F | 95 | 1 | 0 | 1 | 1 | 1 | 1 | 1 |

#### 4.4.3.2 Go To Local (GTL)

4.4.3.2.1 Provided the counter is in remote and a listener, it reverts to local operation. The counter remains addressed to listen. It now operates by front-panel controls, until returned to remote control by receipt of the first byte of a device-dependent message. The decimal and hex equivalents are both 01. When in local, the SRQ LED is always off.

**NOTE:**

If the counter is in a function having no equivalent in local operation, upon receipt of a GTL command, it will default to home state conditions. These functions include: hardware ratios B/A, A/C, B/C; totalize A or B by gate time; and totalize A or B by D.

#### 4.4.3.3 Selected Device Clear (SDC)

4.4.3.3.1 Provided the counter is in remote and a listener, it reverts to home state. The condition of the GPIB interface remains unchanged. The decimal and hex equivalents are both 04.

4.4.3.4 - Group Execute Trigger (GET)

4.4.3.4.1 Provided the counter is a listener and no measurement is in progress, it executes a previously programmed measurement and, if the SRQ mask is set, issues an SRQ command at completion. The GET command permits several bus devices to simultaneously perform a number of different operations. (All bus members have been previously programmed to perform a function on receiving the GET command or trigger command.) The decimal and hex equivalents are both 08.

**4.4.3.5 Local Lockout (LLO)**

4.4.3.5.1 The counter responds to the LLO command regardless of its addressed state. The LLO command disables the LOCAL key on the front panel. By issuing a GTL command, the counter is returned to local control. However, if the counter is returned to remote operation, the local lockout condition is still active. The only way to deactivate the LLO condition is to turn off the counter.

**4.4.3.6 Device Clear (DCL)**

4.4.3.6.1 Same as the SDC command, except that all bus devices in remote are put in home state. The counter responds to this command regardless of its addressed state. The decimal and hex equivalents are 10 and 14, respectively.

**4.4.3.7 Serial Poll Enable (SPE)**

4.4.3.7.1 This command permits all bus members, including the counter, to set their SRQ line to binary 1, informing the controller that attention is required. For the 1995/1996, bit 7 of the status byte is set. Each bus member, having been made a talker, is then serially interrogated by the controller to determine which bus member(s) requested service and the purpose of each request. Bus members respond by transmitting their respective status bytes to the controller. All members respond to the SPE command regardless of their addressed state. The function and format of the 1995/1996's SRQ status byte is described in Subsection 4.7. The decimal and hex equivalents are 24 and 18, respectively.

**4.4.3.8 Serial Poll Disable (SPD)**

4.4.3.8.1 This command returns all bus members to normal operation after completion of a serial poll. All bus members respond to the SPD command regardless of their addressed state. If addressed to talk, a bus device will put its data output string on the GPIB, provided such data is available in its output buffer. The decimal and hex equivalents are 25 and 19, respectively.

**4.4.3.9 Untalk (UNT)**

4.4.3.9.1 This universal command instructs all talkers, including the counter, to return to their untalk or talker-idle state. All bus members are also removed from their talker state whenever a talk address other than their own is received. In the Untalk state, the front-panel ADDR LED is turned off. The decimal and hex equivalents are 9 and 5F, respectively.

#### 4.4.3.10 Unlisten (UNL)

4.4.3.10.1 This universal command instructs all listeners, including the counter, to return to their unlisten or listen-idle state. In the Unlisten state, the front-panel ADDR LED is turned off. The decimal and hex equivalents are 63 and 3F, respectively.

## 4.5 GPIB OPERATING MODES

### 4.5.1 Introduction

4.5.1.1 Before operating the counter on the GPIB, ensure that the instrument has been assigned its correct bus address (see Subsection 4.3) and that the correct AC line voltage has been selected (see Subsection 2.7.3). The last instruction is especially important if the 1995/1996 is being used for the first time or at a new location.

4.5.1.2 The 1995/1996 can be operated on the GPIB in either its Talk-Only or Addressed mode.

### 4.5.2 Talk-Only Mode

4.5.2.1 To set the counter in this mode, enter counter address 99.

4.5.2.2 The Talk-Only mode may be used in systems not having a controller. Such a system permits remote reading of counter measurement data, however, the instrument is controlled from the front panel (see Section 3).

4.5.2.3 The counter determines the rate at which measurements are made. The output buffer is updated at the end of each measurement cycle, overwriting the previous measurement data if not transferred to the listener.

4.5.2.4 The listener triggers the transfer of data from the counter. The counter's output buffer is cleared when data transfer is completed.

4.5.2.5 Differences between the measurement rate and data transfer rate are resolved as follows:

a. If data transfer is in progress at the end of a measurement cycle, updating of the output buffer is delayed. Data transferred will correspond to the previous measurement cycle

b. If data transfer trigger occurs during a measurement cycle and the output buffer is empty, data transfer is delayed until the buffer is updated. Data transferred will then correspond to the latest measurement cycle

c. If a measurement cycle is completed before any byte from the previous cycle has been transferred to the listener, the buffer will be updated.

4.5.2.6 Measurement rate in the 1995/1996 can be controlled in the following ways:

a. The gate time can be controlled by selecting an appropriate display resolution or setting a specific gate time

b. A time interval delay can be set using the range of 200 ns to 100 s

c. The counter can be operated in the Hold mode (single-shot measurements). Readings are displayed indefinitely in Hold until the RESET key is pressed, initiating a new measurement cycle

### 4.5.3 Addressed Mode

4.5.3.1 In the Addressed mode, all of the counter's functions (except POWER ON/OFF) can be controlled using device-dependent commands (see Subsection 4.8.2). These commands are sent over the GPIB after the counter has been addressed to listen. Completed measurement readings and counter status information are then read back over the bus after the counter has been addressed to talk. If the counter is addressed to talk when its output buffer is empty, no data transfer will occur and bus activity will cease. Data transfer will start again after the output buffer is updated at the completion of the next measurement cycle.

## 4.6 OUTPUT MESSAGE FORMAT (TALKER)

### 4.6.1 Introduction

4.6.1.1 Refer to Tables 4.4 to 4.7 for the following:

a. Table 4.4 - Message formats for the various 1995/1996 measurements and "one-time" (recall) outputs

b. Table 4.5 - Basic 23-byte output format

c. Table 4.6 - Alpha header output codes

d. Table 4.7 - High speed data output format

4.6.1.2 Measurement units should be assumed as hertz, seconds, degrees, or a ratio, depending on commands previously sent to the counter.

**NOTE:**

An SRQ message is not sent by data recall from the counter's stores.

-Table 4.4 - Measurement and "One-Time" Output Formats

| Output | Format |
|---|---|
| Measurement Outputs (see NOTE 1) | |
| Reading (with/without math, statistics) | A single 23-byte output-see Table 4.5 |
| Standard Deviation and Mean | A double 23-byte output (i.e., two numeric fields, with/without headers, separated by a comma, and terminated by a CRLF) |
| Mean, High, and Low | A triple 23-byte output (i.e., three numeric fields, with/without headers, separated by commas, and terminated by a CRLF) |
| "One-Time" (Recall) Outputs (see NOTE 2) | |
| Data Recall (e.g., gate time, math constants, TI delay, and calibration constants) | A single 23-byte output-see Table 4.5 |
| A and B Trigger Levels | A double 23-byte output (i.e., two numeric fields, with/without headers, separated by a comma, and terminated by a CRLF) |
| A and B Trigger Peaks (V max., Vmin) | A double 23-byte output (i.e. two numeric fields, with/without headers, separated by a comma, and terminated by a CRLF) |
| Learn Mode | A 200-byte ASCII-formatted output sent and readable only by the counter |
| Error Message, Identification, or String | Variable number of ASCII bytes, null, CR, and LF |

**NOTE 1:**

The statistics and math outputs will be the result of the calculation with the alpha header code of the function measurement. For special output (SO1), the first measurement will have the alpha header code of the normal measurement, and the second and third readings will have the alpha codes from Table 4.6 (e.g., "H" header for High).

NOTE 2:

"One-Time" (recalled) data commands must be entered in outputs by themselves. (Refer to Input Commands tabulated in Subsection 4.8 and identified with an asterisk(*). When data is recalled, it will be placed in the buffer only once. The output buffer will then default to the previously entered measurement only after the recalled data is read by the controller or the counter is programmed with a new command. Recalled data will not generate an SRQ command.

Table 4.5 - Basic 23-Byte Output Format

| Byte No. | Interpretation | Permitted ASCII Characters | Notes |
|---|---|---|---|
| 1 | Space | | Spaces are transmitted |
| 2 | Alpha header code (See Table 4.6). If turned off using the HD0 command, this byte will be a space | | |
| 3 | Space | | |
| 4 | Measurement Sign | + or - | |
| 5 | Most significant digit | 0 to 9 | Bytes 5 to 19 will always include 14 digits (i.e., the mantissa) and decimal point. The numeric field (bytes 4 to 23) is in scientific notation. Zero's are added as necessary in the less significant digit positions. |
| 6 | Digit | 0 to 9 or . | |
| 7 | ↓ | ↓ | |
| 8 | | | |
| 9 | | | |
| 10 | | | |
| 11 | | | |
| 12 | | | |
| 13 | | | |
| 14 | | | |
| 15 | | | |
| 16 | | | |
| 17 | | | |
| 18 | | | |
| 19 | | | |
| 20 | Exponent indicator | E | |
| 21 | Exponent Sign | + or - | |
| 22 | More significant digit | 0 to 9 | |
| 23 | Less significant digit | 0 to 9 | |
| | CR or , | | Commas are used to separate multiple numeric field outputs. Used as a final output terminator. CRLF is the final output terminator in the buffer. The EOI is always given with LF. No EOI is given if high speed mode is enabled |
| | (LF) | | |

Table 4.6 - Alpha Header Output Codes

| Function/Operation | Header | Function/Operation | Header |
|---|---|---|---|
| Frequency C | F | Ratio B/A (software) | R |
| Frequency A | F | Ratio C/A (software) | R |
| Period A | S | Ratio A/B (hardware) | R |
| Time Interval A→B | S | Ratio B/A (hardware) | R |
| Time Interval A→B with delay | T | Ratio C/B (hardware) | R |
| Totalize A by B | T | Ratio C/A (hardware) | R |
| Ratio A/B (software) | R | Rise Time B | R |
| Ratio C/A (software) | R | Fall Time B | S |
| Rise Time A | S | Positive Pulse Width B | S |
| Fall Time A | S | Positive Pulse Width B with delay | S |
| Positive Pulse Width A | S | Negative Pulse Width B | S |
| Positive Pulse Width A with delay | S | Negative Pulse Width B with delay | S |
| Negative Pulse Width A | S | Phase B rel A | P |
| Negative Pulse Width A with delay | S | Duty Cycle B | U |
| Phase A rel B | P | Slew Rate B | S |
| Duty Cycle A | U | Display Mean | M |
| Slew Rate A | S | Display High | H |
| Additional Functions | | Display Low | L |
| Frequency B | F | Recall A trigger level | A |
| Period B | S | Recall B trigger level | B |
| Time Interval B→A | S | Recall Peaks-Vmax, A or B | V |
| Time Interval B→A with delay | S | Recall X (Offset) | X |
| Manual Totalize B (software) | T | Recall Y (Normalize) | Y |
| Manual Totalize B (software) | T | Recall Z (Scale) | Z |
| Totalize B by A | T | Recall Calibration Constants | C |
| A by D | T | Recall n value | N |
| B by D | T | Recall Gate Time | G |
| A by gate | T | Recall Delay Time | D |
| | | Transmit Time Out | O |

**NOTES:**

1. In general, the following Header Codes **precede** the listed functions:

   F-Frequency measurements
   S-Time measurements (seconds); rise/fall times; pulse width
   P-Phase measurements
   R-Ratio measurements
   U-Duty Cycle measurements
   T-Totalize measurements

Table 4.7 - High Speed Data (ASCII) Output

| ASCII Format | Value Range |
|---|---|
| b#0.nnnnnnnnnnnnnnnE#ddCRLF | 0.1 to 0.999999999999999 |
| b#N.nnnnnnnnnnnnnnnE#ddCRLF | 1.0 to 9.99999999999999 |
| b#NN.nnnnnnnnnnnnnnnE#ddCRLF | 10.0 to 99.9999999999999 |
| b#NNN.nnnnnnnnnnnnnnnE#ddCRLF | 100.0 to 999.999999999999 |
| • | • |
| • | • |
| • | • |
| b#NNNNNNNNNNNNNNN.E#ddCRLF | 1000000000000000.0 to 9999999999999999.9 |
| b#N.nnnnnnnnnnnnnnnE#ddCRLF | Any other number |
| where: b = blank space | • = decimal point |
| # = - or + | E = exponent |
| N = digit | d = ten's exponent digit |
| n = the fractional part | CR = carriage return |
| | LF = line feed |

**NOTE:**

No SRQ requests are generated when in the high-speed mode.

## 4.7 SERVICE REQUEST (SRQ) AND STATUS BYTE

### 4.7.1 Introduction

4.7.1.1 An SRQ may be transmitted by the 1995/1996 whenever:

a. An error occurs

b. A measurement is completed

c. A timeout occurs

4.7.1.2 The seventh bit in the SRQ and status byte is set to a binary 1. One other bit, indicating the status or type of service requested, is also set. If an SRQ is not enabled, this other bit is still set - even if the seventh bit is not. Refer to Table 4.8 which shows the format for the counter's status byte. The front-panel SRQ LED lights when the SRQ is asserted.

Table 4.8 - Status Byte Format

| Bit No. | Bit Weight | Function |
|---|---|---|
| 1 (LSB) | 1 | Unused |
| 2* | 2 | 1 = External frequency reference in use; no SRQ issued |
| 3 | 4 | Unused |
| 4** | 8 | 1 = Timeout has occurred |
| 5* | 16 | 1 = Reading ready; no SRQ issued for recalled data; bit is cleared when measurement is output or when buffer is flushed |
| 6** | 32 | 1 = Error condition exists |
| 7-- | 64 | 1 = Service requested |
| 8 | 128 | Unused |

* = Serial poll alone will not clear this bit
** = Serial poll alone will clear this bit

**NOTE:**

Controllers vary as to positional designation of status-byte bits. Bytes are indexed in two ways: 1 through 8 with bit 1 having a weight of 1 and bit 8 having a weight of 128 (as for the 1995/1996) or 0 through 7 with bit 0 having a weight of 1 and bit 7 having a weight of 128.

4.7.1.3 The counter's SRQ status byte can be conveniently masked to indicate the type of information. This feature is achieved using the Service Request Mask command (QMn) where the value of n is the loaded bit weight (i.e., binary value) - see Table 4.8 - in the range of 0 to 255.

**EXAMPLE:**

If the user wants an SRQ message when (1) a timeout has occurred, and (2) an error condition exists, the correct SRQ Mask command that would generate this would be QM40 (8 + 32). Then by reading the SRQ status byte, bits 4 and 6 can be tested to determine which one caused the SRQ message.

4.7.1.4 The Service Request Mask command QM0 will disable all SRQ messages.

## 4.8 INPUT COMMANDS (LISTENER)

### 4.8.1 Introduction

4.8.1.1 The 1995/1996 responds to device-dependent commands in a "deferred" manner. This means that the GPIB interface continues to accept commands until the terminating character (LF) is received, then the entire string is executed. There is no "immediate" mode in which commands are obeyed as they are received.

4.8.1.2 The counter clears all data in its output buffer upon receiving a device-dependent command. Recalled data and single measurements, therefore, should be read immediately after the command is sent to program the counter.

4.8.2 Device-Dependent Commands

4.8.2.1 When the counter is addressed to listen, it can be controlled (except POWER ON/OFF) by device-dependent commands. These commands are tabulated below:

a. Table 4.10 - Counter Initialize Code
b. Table 4.12-Measurement Function Codes
c. Table 4.15-Math Codes
d. Table 4.16-Memory Codes
e. Table 4.17-Statistics Codes
f. Table 4.18-Gate/Delay Codes
g. Table 4.19 - Input Control Codes
h. Table 4.20 - Arming Codes
i. Table 4.21 - Learn Codes
j. Table 4.22 - Measurement Mode Codes
k. Table 4.23 - Miscellaneous Codes
l. Table 4.24 - Calibration Codes

4.8.2.2 In general, device-dependent commands are executed sequentially beginning with the first one sent, and ending with the last. However, to ensure expected results, it is recommended that the following commands be sent in a separate string: IN (Initialize), RE (Start New Measurement), SMn (Non-Vol Store to Memory, 0-9), and TG1, TG2, TG3 (Output Trigger/Peak Levels).

4.8.2.3 If more than one command is to be sent, no delimiters are required. If necessary, commas, spaces, and semicolons may be included as delimiters in the command strings for clarification without affecting counter operation. Alpha characters in a command string may be upper or lower case. Each command string must be followed by an end-of-string terminator group. Table 4.9 summarizes the valid terminator groups.

**Table 4.9 - Valid Terminators**

| 1 | 2 | 3 |
|---|---|---|
| LF | CRLF<br>EOI True | CRLF |

**NOTE:**
Data output terminators are
CRLF
EOI True
in both standard and high-speed
data output modes

4.8.2.4 Table 4.10 provides the counter initialize code for the 1995/1996.

**Table 4.10 - Counter Initialize Code**

| Function | Code |
|---|---|
| Initializes counter functions/settings to home state | IN |

4.8.2.5 Some of the device-dependent commands in the following tables require additional numerical input data. Such numerical input succeeds its command. "One-time" (recall) outputs are noted by an asterisk(*). Finally, home-state commands (at power-on, after an IN command, or after a diagnostic IST command) are underlined. Refer to Table 4.11 as required for the numerical input format.

Table 4.11 - Numerical Input Format

| Byte No. | Interpretation | Permitted ASCII Characteristics |
|---|---|---|
| 1 | Mantissa | + or - |
| 2 | Most significant digit | 0 to 9 |
| 3 | Digit | ↓ |
| 4 | ↓ | |
| 5 | | |
| 6 | | |
| 7 | | |
| 8 | | |
| 9 | | |
| 10 | | |
| 11 | | |
| 12 | | |
| 13 | | |
| 14 | | |
| 15 | | |
| 16 | | |
| 17 | Least significant digit | ↓ |
| 18 | Exponent indicator | E |
| 19 | Exponent sign | + or - |
| 20 | Digit | 0 to 9 |
| 21 | Digit | 0 to 9 |

**NOTE 1:**

The valid syntax for the numerical input value tabulated above is:

[+ or -] <H digits> [.] <I digits> [E [+ or -] <1 or 2 digits>]
where 1<= H + I<= 16. Characters inside the brackets are optional.

This format is valid for all numerical inputs including measurement functions (e.g., FN10=FN1E1). For enable/disable (i.e., toggle) commands (e.g., CK0/CK1 command), zero (CK0) will turn the command off; and any other valid numeric input (CK+1, CK55.09e-7) will turn the command on.

**NOTE 2:**

The use of a floating point decimal increases the number of characters in the string from 16 to 17.

**NOTE 3:**

Leading zeros in the mantissa and/or the exponent are ignored.

**NOTE 4:**

Byte one may be omitted and a positive mantissa assumed.

NOTE 5:

Bytes 2 to 17 may have up to 16 significant digits and a decimal point. The decimal point is not essential. After entry of 16 digits (without a decimal point), additional digits are ignored and a GPIB programming error is generated. Non-significant zeros will still increase the power-of-ten stored. Also, if fewer than 16 digits are required, unused bytes may by omitted.

**NOTE 6:**

Spaces or nulls are always ignored.

**NOTE 7:**

Bytes 18 to 21 (exponent group) may be omitted. Also, byte 19 may be omitted or transmitted as a space (a positive exponent should be assumed in either case).

**NOTE 8:**

Numbers may be terminated by one of the same terminators used for output messages, or by another device-dependent message.

**NOTE 9:**

Units are implied; volts for trigger levels, seconds for gate/delay times.

4.8.2.6 Table 4.12 presents the measurement function codes for the 1995/1996. Functions FN1 through FN18 are front-panel selections. Functions FN19 through FN45 are selected either as front-panel special functions or are unavailable from the keyboard. When the controller programs one of the functions (FN1-FN45), external arming, external gating, and synchronized window auto-trigger (SWAT) are turned off if invalid for the new function. If an invalid channel is programmed for a function, the command is ignored and arming, gating, or SWAT default to the off condition. No error is generated for this type of programming.

**Table 4.12 - Measurement Function Codes**

| Function | Code |
|---|---|
| Frequency C | FN1 |
| Frequency A | FN2 |
| Period A | FN3 |
| Time Interval A B | FN4 |
| Time Interval A B with delay | FN5 |
| Totalize A by B | FN6 |
| Totalize A by B with delay | FN7 |
| Ratio A/B (software) | FN8 |
| Ratio C/B (software) | FN9 |
| Rise Time A | FN10 |
| Fall Time A | FN11 |
| Positive Pulse Width A | FN12 |
| Positive Pulse Width A with delay | FN13 |

Table 4.12 - Measurement Function Codes (Cont'd)

| Function | Code |
|---|---|
| Negative Pulse Width A | FN14 |
| Negative Pulse Width A with delay | FN15 |
| Phase A rel B | FN16 |
| Duty Cycle A | FN17 |
| Slew Rate A | FN18 |
| Frequency B | FN19 |
| Period B | FN20 |
| Time Interval B→A | FN21 |
| Time Interval B→A with delay | FN22 |
| Manual Totalize A | FN23 |
| Manual Totalize B | FN24 |
| Totalize B by A | FN25 |
| B by A with delay | FN26 |
| A by D (TTL) | FN27 |
| B by D(TTL) | FN28 |
| A by gate time | FN29 |
| B by gate time | FN30 |
| Ratio B/A (software) | FN31 |
| C/A (software) | FN32 |
| A/B (hardware) | FN33 |
| B/A (hardware) | FN34 |
| C/A (hardware) | FN35 |
| C/B (hardware) | FN36 |
| Rise Time B | FN37 |
| Fall Time B | FN38 |
| Positive Pulse Width B | FN39 |
| Positive Pulse Width B with delay | FN40 |
| Negative Pulse Width B | FN41 |
| Negative Pulse Width B with delay | FN42 |
| Phase B rel A | FN43 |
| Duty Cycle B | FN44 |
| Slew Rate B | FN45 |

**NOTE 1:**

Either "FU" or "FN" can be used for the above measurement function codes.

**NOTE 2:**

All measurement function codes are mutually exclusive.

**NOTE 3:**

For FN23 and FN24 (Manual Totalize), refer to the Gate codes to start and stop a measurement.

4.8.2.7 Table 4.13 provides the predefined (forced) setting by functions. The Phase Angle, Duty Cycle, and Slew Rate settings are automatically selected, but can be modified by the controller. In addition, for programming selection of Duty Cycle and Slew Rate settings, use the following guidelines:

a. To change from positive Duty A(B) to negative Duty A(B), program slope A(B) to minus using control code AS1

b. To change from positive Slew Rate A(B) to negative Slew Rate A(B), program slope A(B) to minus using control code AS1

**NOTE:**

The COMMON settings shown in the table for Phase Angle, Duty Cycle, and Slew Rate cannot be modified by the controller.

Table 4.13 - Predefined (Forced) Front-Panel Settings

| Function | Common | Slope A | Slope B | DC (A and B) | Auto-Trig A | Auto-Trig |
|---|---|---|---|---|---|---|
| Rise Time A | On | + | + | DC | On | On |
| Rise Time B | On | + | + | DC | On | On |
| Fall Time A | On | - | - | DC | On | On |
| Fall Time B | On | - | - | DC | On | On |
| Pos. Pulse Width A | On | + | - | DC | On | On |
| Pos. Pulse Width B | On | - | + | DC | On | On |
| Neg. Pulse Width A | On | - | + | DC | On | On |
| Neg. Pulse Width B | On | + | - | DC | On | On |
| Phase A rel B | Off | + | + | DC | On | |
| Phase B rel A | Off | + | + | DC | On | |
| Duty Cycle A | On | + | - | DC | On | |
| Duty Cycle B | On | - | + | DC | | On |
| Slew Rate A | On | + | + | DC | On | |
| Slew Rate B | On | + | + | DC | | On |
| Man. Totalize A (software) | On | | | | | Off |
| Man. Totalize B (software) | On | | | | Off | |
| Totalize A by Gate | On | | | | | Off |
| Totalize B by Gate | On | | | | Off | |
| Totalize A by D | On | | | | | Off |
| Totalize B by D | On | | | | Off | |

**NOTE 1:**

When Common mode is on and the function is controlled by Input A (e.g., Frequency A, Ratio A/B), Input B autotrigger and attenuator commands are disregarded. Also in this mode, Input B levels will be ignored if Input A (and therefore B) auto-trigger is on. Similarly when the Common mode is on, and the function is controlled by Input B, Input A auto-trigger and attenuator commands are disregarded. No error is generated for this kind of inconsistent programming.

**NOTE 2:**

The auto-trigger must be turned off before entering a manual trigger level.

4.8.2.8 Table 4.14 indicates the valid channels for external arming and gating by function. External arming and gating are mutually exclusive commands.

Table 4.14 - Valid Channels for External Arming/Gating

| Function | Valid Channels |
|---|---|
| Frequency C | A, B, D-TTL, D-Zero Crossing |
| Frequency A, Period A | B, D-TTL, D-Zero Crossing |
| Frequency B, Period B | A, D-TTL, D-Zero Crossing |
| Time Interval A to B†; B to A† | D-TTL, D-Zero Crossing |
| Totalize A by B†; B by A† | |
| Totalize A by internal gate†; B by internal gate† | |
| Rise Time A†; Rise Time B† | |
| Fall Time A†; Fall Time B† | |
| Positive Pulse Width A†; Positive Pulse Width B† | |
| Negative Pulse Width A†; Negative Pulse Width B† | |
| Slew Rate A†, Slew Rate B† | |
| Hardware Ratio A/B; Hardware Ratio B/A | |
| Hardware Ratio C/B; Hardware Ratio C/A | |
| Software Ratio A/B; Software Ratio B/A | None |
| Software Ratio C/B; Software Ratio C/A | |
| Duty Cycle A; Duty Cycle B | |
| Phase A rel B; Phase B rel A | |
| Totalize A by D; Totalize B by D | |
| Manual Totalize A; Manual Totalize B | |

**NOTE 1:**

The dagger (†) indicates a function for which external arming is valid; external gating is invalid.

**NOTE 2:**

Valid channels for Synchronous Window Auto-Trig(SWAT) are identical to those for external arming/gating, except for Frequency C. SWAT is disallowed in Frequency C.

**NOTE 3:**

If an invalid channel is programmed for a function, the command is ignored and arming, gating, or SWAT default to the off condition. No error is generated for this type of programming.

Table 4.15 - Math Codes

| Function | Code |
|---|---|
| Disable Math | MD0 |
| Enable Math | MD1 |
| Store Offset ⟨value⟩ (X) | MO ⟨value⟩ (home state=0) |
| Recall Offset | RO * |
| Store Normalize ⟨value⟩ (Y) | MN ⟨value⟩ (home state=1) |
| Recall Normalize | RN * |
| Store Scale ⟨value⟩ (Z) | MS ⟨value⟩ (home state=1) |
| Recall Scale | RS * |

**NOTE:**

The math constant range for offset X, normalize Y, and scale Z is: ±0.000000001E-9 to ±9999999999E9.

**Table 4.16 - Memory Codes**

| Function/Description | Code |
|---|---|
| Non-vol memory recall from 0-9 | RM0-9 |
| Non-vol memory store from 0-9 | SM0-9 (see Notes) |

**NOTE 1:**

SM0-9 requires a 2-second wait after programming.

**NOTE 2:**

If the counter is in a function having no equivalent in local operation, this function cannot be stored in non-vol memory. These functions include: hardware ratios A/B, B/A, A/C, B/C; totalize A or B by gate time; and totalize A or B by D.

| | |
|---|---|
| Recall calibration constants: | |
| DAC constants | |
| Input A slope multiplier | RC10* |
| Input A slope offset | RC11* |
| Input B slope multiplier | RC12* |
| Input B slope offset | RC13* |
| Input path constants | |
| Input A start, hyst. low, offset | RC14* |

Table 4.16 - Memory Codes (Cont'd)

| Function/Description | Code |
|---|---|
| Input A start, hyst. low, hysteresis | RC15* |
| Input A start, hyst. high, offset | RC16* |
| Input A start, hyst. high, hysteresis | RC17* |
| Input A stop, hyst. low, offset | RC18* |
| Input A stop, hyst. low, hysteresis | RC19* |
| Input A stop, hyst. high, offset | RC20* |
| Input A stop, hyst. high, hysteresis | RC21* |
| Input B start, hyst. low, offset | RC22* |
| Input B start, hyst. low, hysteresis | RC23* |
| Input B start, hyst. high, offset | RC24* |
| Input B start, hyst. high, hysteresis | RC25* |
| Input B stop, hyst. low, offset | RC26* |
| Input B stop, hyst. low, hysteresis | RC27* |
| Input B stop, hyst. high, offset | RC28* |
| Input B stop, hyst. high, hysteresis | RC29* |
| Time Interval constants | |
| A-start, B-stop; A-positive, B-negative | RC30* |
| A-start, A-stop; A-negative, B-positive | RC31* |
| B-start; A-stop; A-positive, B-negative | RC32* |
| B-start, B-stop; A-negative, B-positive | RC33* |

**Table 4.17 - Statistics Codes**

| Function/Description | Code |
|---|---|
| Store n value = 100 | SV0 |
| Store n value = 1000 | SV1 |
| Store n value, where value = 2 to 9999 | SV <value> |
| Recall n value | RV * |
| Disable standard deviation | SD0 |
| Enable standard deviation | SD1 - turns off mean |
| Disable mean | SA0 |
| Enable mean | SA1 -turns off standard deviation |
| Special output disable | SO0 |
| Special output enable | SO1 -and enable standard deviation (SD1) will output standard deviation and mean; and enable mean (SA1) will output mean, high, and low |

Table 4.18 - Gate/Delay Codes

| Function/Description | Code |
|---|---|
| Gate Open - used only to start software manual totalize | GO |
| Gate Close - used only to stop software manual totalize | GC |
| Gate Time Adjust - enters gate time <value><br>where <value> range = 200ns to 100 s;<br>home state value = 10 ms; and a value<br>of 0 = a single event reading | GA <value> |
| Recall Gate Time | RG * |
| Delay Time Adjust - enters delay time <value><br>where <value> range = 200 ns to 100 s;<br>home state value = 1 ms | DA <value> |
| Recall Delay Time | RD * |

4.8.2.9 To use software manual totalize (FN23 or FN24), enter the following 3 commands in order:

a. FN23 <CR LF> - sets up the manual totalize (A) function and turns on the Hold LED

b. GO <CR LF> -opens the gate to start the readings. Data can be read from the counter at this point

c. GC <CR LF> - closes the gate, turns on the Hold LED, and puts the last reading in the buffer. The last reading can be read from the counter

To restart the measurement at zero enter:

RE GO <CR LF>

To continue the measurement count enter:

GO <CR LF>

**NOTE:**

If a new function is entered, the single measurement mode will still be in effect.

Table 4.19 - Input Control Codes

| Function/Description | Code |
|---|---|
| Trigger Level A Set | AT <value> |
| Trigger Level B Set - home state value is 0 | BT <value> |
| Auto-Trig off (A and B) | AU0 |
| Auto-Trig on (A and B) | AU1 |
| Auto-Trig Input A off | AU2 |
| Auto-Trig Input A on | AU3 |
| Auto-Trig Input B off | AU4 |
| Auto-Trig Input B on | AU5 |
| Continuous Auto-Trig | ST0 |
| Single Auto-Trig - use AU1, 3, or 5 to start a single autotrigger process | ST1 |
| Coupling Input A to DC | AA0 |
| Coupling Input A to AC | AA1 |
| Coupling Input B to DC | BA0 |
| Coupling Input B to AC | BA1 |
| Slope Input A Positive | AS0 |
| Slope Input A Negative | AS1 |
| Slope Input B Positive | BS0 |
| Slope Input B Negative | BS1 |
| Attenuation Input A X 1 | AX0 |
| Attenuation Input A X 10 | AX1 |
| Attenuation Input A X 50 | AX2 |
| Attenuation Input B X 1 | BX0 |
| Attenuation Input B X 10 | BX1 |
| Attenuation Input B X 50 | BX2 |
| Impedance Input A to 1 Mohm | AZ0 |
| Impedance Input A to 50 ohms | AZ1 |
| Impedance Input B to 1 Mohm | BZ0 |
| Impedance Input B to 50 ohms | BZ1 |
| Filter Input A off | AF0 |
| Filter Input A on | AF1 |
| Filter Input B off | BF0 |
| Filter Input B on | BF1 |
| Hysteresis off | SE0 |
| Hysteresis on | SE1 |
| Common off (Separate mode) | CM0 |
| Common on | CM1 |

Table 4.20 - Arming Codes

| Function/Description | Code |
|---|---|
| External Arming Disable - internal arming enabled is home state | XA0 |
| External Arming Input A | XA1 |
| External Arming Input B | XA2 |
| External Arming Input D - Zero Crossing | XA3 |
| External Arming Input D - TTL | XA4 |
| Arming Slope Positive | XA5 |
| Arming Slope Negative | XA6 |
| External Gate Disable - internal gate enabled is home state (see code GA) | XG0 |
| External Gate Input A | XG1 |
| External Gate Input B | XG2 |
| External Gate Input D-Zero Crossing | XG3 |
| External Gate Input D-TTL | XG4 |
| Gate Slope Start-Negative; Stop-Negative | XG5 |
| Gate Slope Start-Positive; Stop-Negative | XG6 |
| Gate Slope Start-Negative; Stop-Positive | XG7 |
| Gate Slope Start-Positive; Stop-Positive | XG8 |
| Synchronous Window Auto-Trig (SWAT) | |
| SWAT Disable | XS0 |
| SWAT Input A | XS1 |
| SWAT Input B | XS2 |
| SWAT Input D-Zero Crossing | XS3 |
| SWAT Input D-TTL | XS4 |
| SWAT Slope Start-Negative; Stop-Negative | XS5 |
| SWAT Slope Start-Positive; Stop-Negative | XS6 |
| SWAT Slope Start-Negative; Stop-Positive | XS7 |
| SWAT Slope Start-Positive; Stop-Positive | XS8 |

**Table 4.21 - Learn Codes**

| Function/Description | Code |
|---|---|
| Send Machine Setup - Learn<br>Receive Machine Setup - Learn | SL *<br>RL<total machine state string-200 ASCII bytes>; string is readable only by the counter |

**Table 4.22 - Measurement Mode Codes**

| Function/Description | Code |
|---|---|
| Continuous Reading Mode | MM0 |
| Single Reading Mode-use RE code to trigger a new measurement | MM1 |

Table 4.23 - Miscellaneous Codes

| Function/Description | Code |
|---|---|
| Check Off<br>Check On | CK0 or CH0<br>CK1 or CH1 |
| Front Panel Display Disable (turns off front panel measurement display) | DR0 |
| Front Panel Display Enable | DR1 |
| Turns Off Prefix Output Header | HD0 |
| Turns On Prefix Output Header (e.g., "F" for frequency) | HD1 |
| High Speed Output Disable-defaults to previous autotrigger mode (single/continuous) | HS0 |
| High Speed Output Enable-forces continuous measurement mode, turns off statistics, takes single-shot auto-trigger, and no SRQ is given. No data can be recalled at this time | HS1 |
| Transmit Hardware Identification-that is, "RD 1995" or "RD 1996" | ID0 * |
| Transmit Software Identification version that is, 2.1 or other number | ID1 * |
| Internal Self Test-output of <space CR LF> means a successful test. Otherwise, outputs an error message. Counter returns to power-up state on exit | IST |
| Set SRQ Mask-where <value>=0 to 255; home state=255; and QM0 code disables all SRQ commands | QM<value> |
| Start New Measurement-triggers new reading in single measurement mode | RE |
| Program Timeout, Gate Closed home state value is 500 seconds (see Note 2) | TC<value> |
| Program Timeout, Gate Open where the home state value is 500 seconds; <value>=1 to 500 seconds(see Note 2) | TO<value> |
| Transmit Error Code-outputs <space CR LF> if no errors exist | TE * |
| Output Trigger Levels A and B (see Note 3) | TG1 * |

Table 4.23 - Miscellaneous Codes (Cont'd)

| Function/Description | Code |
|---|---|
| Output Peak Levels A ($V_{max}$, $V_{min}$) - auto-trigger A turned off (see Note 3) | TG2 * |
| Output Peak Levels B ($V_{max}$, $V_{min}$) - auto-trigger B turned off (see Note 3) | TG3 * |
| Transmit Timeout Value-total abort time is (TO + GA <value> + TC) or if delay active (TO + DA <value> + TC), or if externally gated (TO + TC + 100 seconds) | TV * |

**NOTE 1:**

Information for the following codes in the above table is not stored in non-vol memory: DR0, DR1; HD0, HD1; HS0, HS1; QM <value>; TC <value>,TO <value>; TV.

**NOTE 2:**

Program Timeout, Gate Closed refers to the time that the counter will wait for the measurement gate to close prior to issuing a timeout error. Program Timeout, Gate Open refers to the time that the counter will wait, upon receipt of trigger, for the measurement gate to open prior to issuing a timeout error.

**NOTE 3:**

For the TG1, TG2, and TG3 codes: if in single measurement mode (or single autotrigger mode), initiate the measurement (or trigger) first, then send the command to output trigger levels. This ensures the output of trigger levels of measurement just taken.

Table 4.24 - Calibration Codes

| Function/Description | | Code |
|---|---|---|
| **NOTE 1:** Each of the eight commands listed below must be on a single line. See Section 5 of this manual for the calibration procedure. | | |
| Step 1 | | CAL |
| Step 2 | Set start and stop DACs to the maximum positive voltage | CLHI |
| | Set start and stop DACs to the maximum negative voltage | CLLO |
| Step 3 | Start DAC positive voltage (+X.XXXX)<br>Stop DAC positive voltage (+X.XXXX)<br>Start DAC negative voltage (-X.XXXX)<br>Stop DAC negative voltage (-X.XXXX) | CLTH <Vstart-high><br>CLPH <Vstop-high><br>CLTL <Vstart-low><br>CLPL <VStop-low> |
| **NOTE 2:** At this point, "CAL" is shown on the main display. About five minutes later, "CAL donE" is displayed when the calibration is finished. Calibration values may now be stored to non-vol memory by holding the front-panel calibration button in and sending the CLST command. | | |
| Step 4 | Stores values to non-vol memory | CLST |
| **NOTE 3:** Upon successful completion of non-vol store, a "donE" message is displayed, a <space CR LF> GPIB output is given, and the calibration button can be released. If at any point, there is an error (e.g., syntax, calibration), the entire procedure must be repeated starting with Step 1. | | |

## 4.9 GPIB ERRORS

**4.9.1** When an error occurs, an SRQ message will be generated and the SRQ LED turned on. Should multiple errors occur, only the latest error is saved. An error will be cleared and the SRQ LED turned off when the controller transmits a new command string to the counter. To read the error message, send a TE (Transmit Error) command immediately after the error occurs.

**4.9.2** Table 4.25 below lists the GPIB error messages and numbered codes. The numbered error codes are in the form "Error NN" where NN is a 2-digit code.

**Table 4.25 - GPIB Error Messages and Codes**

| Message/Code Number | Error |
|---|---|
| ALPHA SYNTAX ERROR | Alpha syntax error while parsing |
| NUMBER SYNTAX ERROR | Number syntax error while parsing |
| LEARN ERROR | Error in machine setup string from "learn" |
| INVALID RANGE | Range error (e.g., FN code number, gate time, delay value) |
| LEVEL OR ATTN INVALID | Level out-of-range for the attenuator setting |
| Error 23 | Phase measurement ratio out-of-range |
| 24 | Hardware ratio measurement produced divide by zero |
| 25 | Internal totalize error |
| 26 | Input buffer overflow |
| 27 | Gate did not open in specified time |
| 28 | Gate did not close in specified time |
| 29 | Frequency C not permitted on Model 1995 |
| 30 | Error during calibration |
| 31 | Invalid syntax during calibration parsing or commands out-of-order |
| 32 | Cannot store calibration values to Non-Vol memory-values must be entered first |
| 33 | Error during calibration store to Non-Vol memory |
| 40 | Non-Vol Memory error-the Non-Vol data did not pass verification |
| 41 | Non-Vol Memory error during recall of memory |
| 42 | Non-Vol Memory-attemped recall of nonexistent machine setup store |
| 50 | Normalize function error (R-X)Y/Z |
| 51 | Statistical calculation error |
| 60 | Internal self-test: RAM |
| 61 | Internal self-test: ROM |
| 62 | Internal self-test: Non-Vol Memory |
| 63 | Internal self-test: measurement amplifier failure |
| 64 | Internal self-test: measurement logic failure |

Table 4.25 - GPIB Error Messages and Codes (Cont'd)

| Message/Code Number | | Error |
|---|---|---|
| Error | 70 | Floating point addition error |
| | 71 | Floating point multiplication error |
| | 72 | Floating point division error |
| | 73 | Floating point compare error |
| | 74 | Floating point operation undefined |
| | 75 | Floating point underflow |
| | 76 | Floating point overflow |
| | 78 | ASCII to floating point conversion error |
| | 79 | Floating point to ASCII conversion error |
| | 80 | Double precision compare error |
| | 81 | Double precision to ASCII conversion error |
| | 82 | Double precision to floating point conversion error |
| | 83 | Integer divison by zero |
| | 99 | Internal software error |

**NOTE:**

If an error is found in a command string, the entire string is ignored. No new programming of the counter will take place and the counter will continue taking measurements as previously set up.

# SECTION 5 THEORY OF OPERATION

## 5.1 INTRODUCTION

5.1.1 This section describes the general theory of operation for the Universal Systems Counters Models 1995/1996.

5.1.2 The theory of operation provided is based on the simplified overall block diagram shown in Figure 5.1. Key circuit blocks of the 1995/1996 are described and supported in this section using simplified block and schematic diagrams. These diagrams supplement the complete schematics found in Section 7 of this manual. As much as possible, the simplified schematic and block diagrams provided here are annotated with the same reference designators found in the complete schematics. This should facilitate cross-referencing between this section of the manual and the schematics.

5.1.3 Integrated circuits (ICs) in the following circuit descriptions are designated by circuit references provided on the supporting simplified block and schematic diagrams. Note that each assembly of the 1995/1996 (see Parts List, Section 8) provides a separate series of IC designations starting with U1. These designations are employed in the following key circuit descriptions. When an IC package contains more than one circuit, suffix letters are used to distinguish them (e.g., U40A). Finally, when it is necessary to identify a specific pin in an IC, the reference designator, with a suffix letter if necessary, is followed by a hyphen and then the required pin number (e.g., U40A-1).

## 5.2 FUNCTIONAL BLOCKS

5.2.1 The 1995/1996 counter is divided into 11 major functional blocks. Most of these blocks are located on the instrument's motherboard. The front panel block, signal conditioner block, measurement block, and channel C block are incorporated on separate board(s) which plug into the motherboard. Figure 5.1 provides an overall simplified block diagram of the 1995/1996 counter. The following is a list of these 11 functional blocks:

1. Channel A/B block (See Subsection 5.3.2)
2. Channel C block (1996 only) (See Subsection 5.3.3.)
3. Measurement logic block (See Subsection 5.3.4)
4. Display/keyboard block (See Subsection 5.3.5)
5. Microprocessor block (See Subsection 5.3.6)
6. Power supply block (See Subsection 5.3.7)
7. External arming/gating block (See Subsection 5.3.8)
8. Internal gate timer block (See Subsection 5.3.9)
9. External reference multiplier block (See Subsection 5.3.10)
10. Channel D block (See Subsection 5.3.11)
11. GPIB block (See Subsection 5.3.12)

5.2.2 Overall Functional Operation

NOTE:

For convenience, since channels A and B are identical, only the former channel is described, unless otherwise indicated.

5.2.2.1 As one reads through the General Information and Theory of Operation sections of this manual, it might prove helpful to refer to the Overall Block Diagram found in Figure 5.1.

5.2.2.2 In general, input signals are conditioned and converted into digital information in the signal conditioning section.

5.2.2.3 The measurement section is internally configured by the microprocessor according to instructions entered via the keyboard or GPIB system. The signal to be measured and the signal from the frequency reference are fed to the measurement logic block. The measured result from here is passed to the microprocessor block. If mathematical manipulation of the result is required, this is performed by the microprocessor before the final output is passed either to the display or GPIB block.

5.2.2.4 In the digital control section, circuit timing and control signals are developed by microprocessor-based logic. This section also provides for keyboard decoding and display logic.

5.2.2.5 The interface section functions as a bidirectional port for data and control signals generated by the digital control section and the external system controller.

5.2.2.6 Overall operation of the 1995/1996 centers in two LSI chips. One chip, the MCC2 (Multiple Counter and Control Chip #2), is a combination of ECL (emitter-coupled logic) and TTL (transistor-transistor logic) circuitry. This LSI chip executes all the high-speed logic steering, gating, and counting. The second LSI chip, the MCC1 (Multiple Counter and Control Chip #1), is a CMOS device that interfaces directly with the CPU. It provides the required logic functions, counting registers for accumulating raw input data, and control lines for the MCC2 chip.

5.2.2.7 Inputs for channel A are first routed through the signal-conditioning circuitry. This circuitry performs the user-selected coupling, impedance, and attenuation operations.

5.2.2.8 After initial signal conditioning, the input measurement signal passes through a protective limiter to two parallel high-input impedance buffer/amplifier stages. These generate a differential output which is applied to a second (Schmitt) amplifier stage.

5.2.2.9 In the Schmitt amplifier stage, the measurement signal is buffered, shaped, and level-shifted. The signal output from this stage is at an ECL level and called the start signal. The start signal is then directed to the divide-by-two/multiplexing circuitry.

5.2.2.10 The multiplexer either selects the divided start signal or the start/stop signals directly. The required signal is then routed to the synchronization circuitry.

5.2.2.11 - The start signal's output from the synchronization circuitry is input to the MCC2 chip. Between the MCC2 and MCC1 chips, measurement pulses are accumulated in the event and time count registers, counted, and stored as unprocessed measurement data.

5.2.2.12 Stored raw data is then retrieved by the microprocessor, manipulated to obtain the desired measurement mode, modified as necessary by special functions, then routed to the 1995/1996's display and GPIB.

5.2.2.13 The 1995/1996 employs a special TEC (Timing Error Correction) configuration which divides the time between the reference oscillator and start/stop signals. This permits the instrument to accumulate measurement pulses to a much greater resolution. In a typical measurement, the instrument's microprocessor reads the time count and TEC registers, performs the necessary calculations, and displays the result. Between measurements, the event, time, and TEC count registers are reset while the microprocessor computes the measurement result.

5.2.2.14 Arming and gating selection for the 1995/1996 are effected through the instrument's arming/gating steering-logic circuitry. For the 1995/1996 user, arming/gating selection is much more flexible than in conventional counters. This ease-of-use results from the operator's ability to employ channel A/B inputs for selecting the various arming/gating modes. This permits input voltages as low as 25 mV at 10 MHz from the front panel. Conventional triggering levels of TTL (1.4V at 10 MHz) and zero-crossing are possible using channel D's rear-panel input.

5.2.2.15 Finally, gate-time setting for the 1995/1996 is not limited to selection by a decade-divided timebase. Rather, the counter uses an internal gate timer to select the desired gate time in a 200 ns to 100 s range. This provides resolutions of 100 ns (gate time < 1 ms resolution) and .1% (gate time > 1 ms resolution).

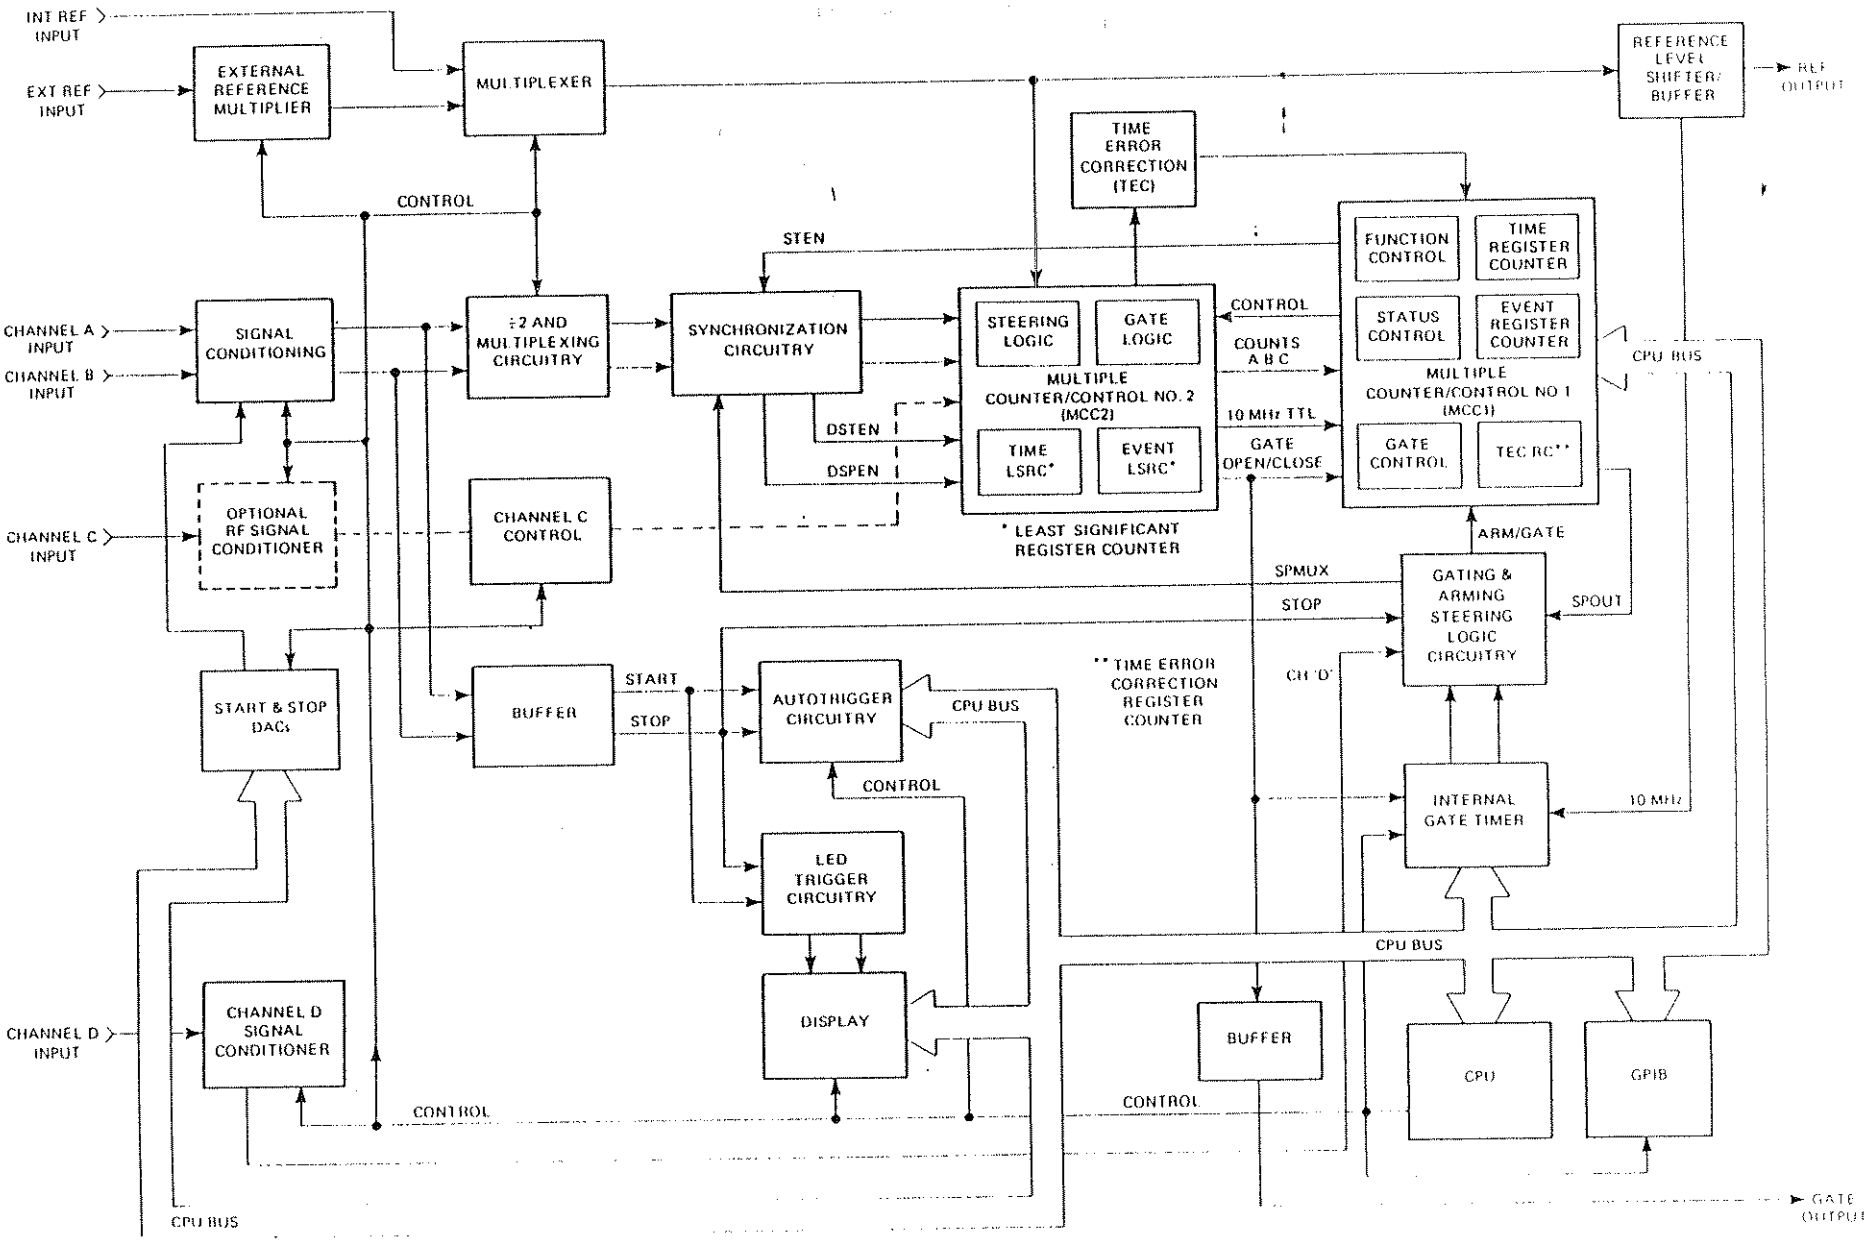



Figure 5.1 - Simplified Overall Block Diagram

## 5.3 THEORY OF OPERATION BY BLOCK

### 5.3.1 Introduction

5.3.1.1 The 1995/1996 is divided into eleven major functional blocks. Functional and circuit theory of operation by block are described in this subsection of the manual. The figures used here are simplified schematic or block diagrams. For complete schematics, refer to Section 7.

5.3.1.2 Table 5.1 presents a list of major signal lines used in the 1995/1996 counters along with a brief functional description. Signals used together are grouped together. Included with the signal description are significant signal sources and destinations.

**Table 5.1 - Signal Lines and Functions**

| SIGNAL NAME | SIGNAL DESCRIPTION |
|---|---|
| ARM | Arming or gating signal applied to either arm or gate a measurement |
| ARMSPSL | Arm stop slope select for the arming and gating circuit |
| ARMSTSL | Arm start slope select for the arming and gating circuit |
| $\overline{\text{AS}}$ | Microprocessor address strobe |
| ATRST | Auto-trigger reset line; initializes an auto-trigger |
| ATSTART+ | START+ signal buffered and applied to the auto-trigger circuitry |
| ATSTOP+ | STOP+ signal buffered and applied to the auto-trigger circuitry |
| BW/$\overline{\text{R}}$ | Microprocessor R/$\overline{\text{W}}$ inverted buffer signal (U5F) |
| CHANLD | Input signal applied to channel D |
| CHCENA | Enables channel C signal to be measured |
| $\overline{\text{DLYWND}}$ | For future use |
| E | Microprocessor's enable signal for 6800-type peripherals |
| $\overline{\text{E}}$ | Inverted microprocessor's E signal |
| $\overline{\text{GATE}}$ | Signal that is low when the measurement gate is open |
| INT/$\overline{\text{EXT}}$ | Selects the external reference or internal reference |
| LDE | Lower data enable signal generated by the microprocessor's $\overline{\text{LDS}}$ and OR-ed with the BW/$\overline{\text{R}}$ signal (U25B) |

Table 5.1 - Signal Lines and Functions (Cont'd)

| SIGNAL NAME | SIGNAL DESCRIPTION |
|---|---|
| $\overline{\text{LDS}}$ | Microprocessor's lower data strobe |
| LTMS | Selects the 200 ns to 1 ms output or greater than 1 ms to 100 s output from the internal timer |
| $\overline{\text{LWE}}$ | Lower write enable signal generated by the microprocessor's lower data strobe ($\overline{\text{LDS}}$) and OR-ed with the Read/Write (R/$\overline{\text{W}}$) signal (U24C) |
| MCC/$\overline{\text{GEND}}$ | Selects the SPOUT or GATE END signal for ending a measurement |
| $\overline{\text{MLRST}}$ | Main logic reset signal from the MCC1 chip |
| $\overline{\text{PRE}}$ | Peripheral read enable signal generated by the microprocessor's R/$\overline{\text{W}}$ signal and NANDed with E signals (U4C) |
| $\overline{\text{RAMENA}}$ | RAM enable signal, generated by the microprocessor's address strobe ($\overline{\text{AS}}$) and inverted address line A21 ($\overline{\text{A21}}$) and OR-ed together (U5C and U24A) |
| R/$\overline{\text{W}}$ | Microprocessor's Read/$\overline{\text{Write}}$ signal |
| SELARM | Enables application of the ARM signal to the auto-trigger or measurement block |
| SELCHD | Selects the CHANLD signal as the arm or gate signal |
| SELSP | Selects the TTLSTOP signal as the arm or gate signal |
| SPMUX | Stop enable signal selection between SPOUT or $\overline{\text{GATE END}}$ signals |
| SPOUT | Stop enable output from MCC1 or SPEN signal |
| $\overline{\text{SPSL}}$ | Selects the slope of the STOP+ signal |
| $\overline{\text{SPSLV}}$ | Indicates whether the stop measurement signal is above or below the stop DAC trigger-level (TL STOP) |
| $\overline{\text{SPSXL}}$ | Indicates that the stop measurement signal has crossed the stop DAC trigger-level (TL STOP) |
| START+ | Input signal applied to channel A or B for selection as the START signal |
| STOP+ | Input signal applied to channel A or B for selection as the STOP signal |
| $\overline{\text{STSL}}$ | Selects the slope of the START+ signal |

Table 5.1 - Signal Lines and Functions (Cont'd)

| SIGNAL NAME | SIGNAL DESCRIPTION |
|---|---|
| $\overline{\text{STSLV}}$ | Indicates whether the start measurement signal is above or below the start DAC trigger-level (TL START) |
| $\overline{\text{STSXL}}$ | Indicates that the start measurement signal has crossed the start DAC trigger-level (TL START) |
| TTLSTOP | STOP+ signal converted to a TTL signal |
| TL START | Start channel trigger level |
| TL STOP | Stop channel trigger level |
| --UDE | Upper data enable signal generated by the microprocessor's $\overline{\text{LDS}}$ signal and OR-ed with the BW/$\overline{\text{R}}$ signal (U25C) |
| $\overline{\text{UDS}}$ | Microprocessor's upper data strobe signal |
| $\overline{\text{UWE}}$ | Upper write enable signal generated by the microprocessor's upper data strobe ($\overline{\text{UDS}}$) and OR-ed with READ/$\overline{\text{WRITE}}$ signal (R/$\overline{\text{W}}$) (U24D) |
| $\overline{\text{VMA+E}}$ | Microprocessor's inverted enable signal ($\overline{\text{E}}$) OR-ed with the valid memory address ($\overline{\text{VMA}}$) signal (U5E and U24B) |
| ZERO/$\overline{\text{TTL}}$ | Selects the channel D trigger point |
| 5.20FF | Shuts down the ECL 5.2 volts |
| $\overline{\text{200MHZ}}$ | Enables the divide-by-two circuitry |

## 5.3.2 Channel A/B Block

### 5.3.2.1 Functional Description

5.3.2.1.1 Refer to the simplified block diagram in Figure 5.2 as required. Channels A and B on the 1995/1996 are identical and only channel A is described here. Measurement signals applied to Input A are first routed through the instrument's signal conditioning circuitry. This circuitry performs selected compensation, coupling, attenuation, and impedance.

5.3.2.1.2 The measurement signal is then applied to the input of the start/stop amplifiers. The start/stop DACs (Digital-to-Analog Converters) provide a DC threshold through which the input signal must swing so that the amplifier's output will toggle.

5.3.2.1.3 The start/stop DACs have a programmable output range of ±5 VDC in increments of 2.5 mVDC. However, the trigger display only shows resolutions of 10 mVDC.

5.3.2.1.4 The signals are then routed to the start/stop output amplifiers. The switches shown in the figure permit selection of either Input A or B signal for routing to the output amplifiers. The following combinations are possible: A-start/A-stop; A-start/B-stop; B-start/B-stop; and B-start/A-stop.

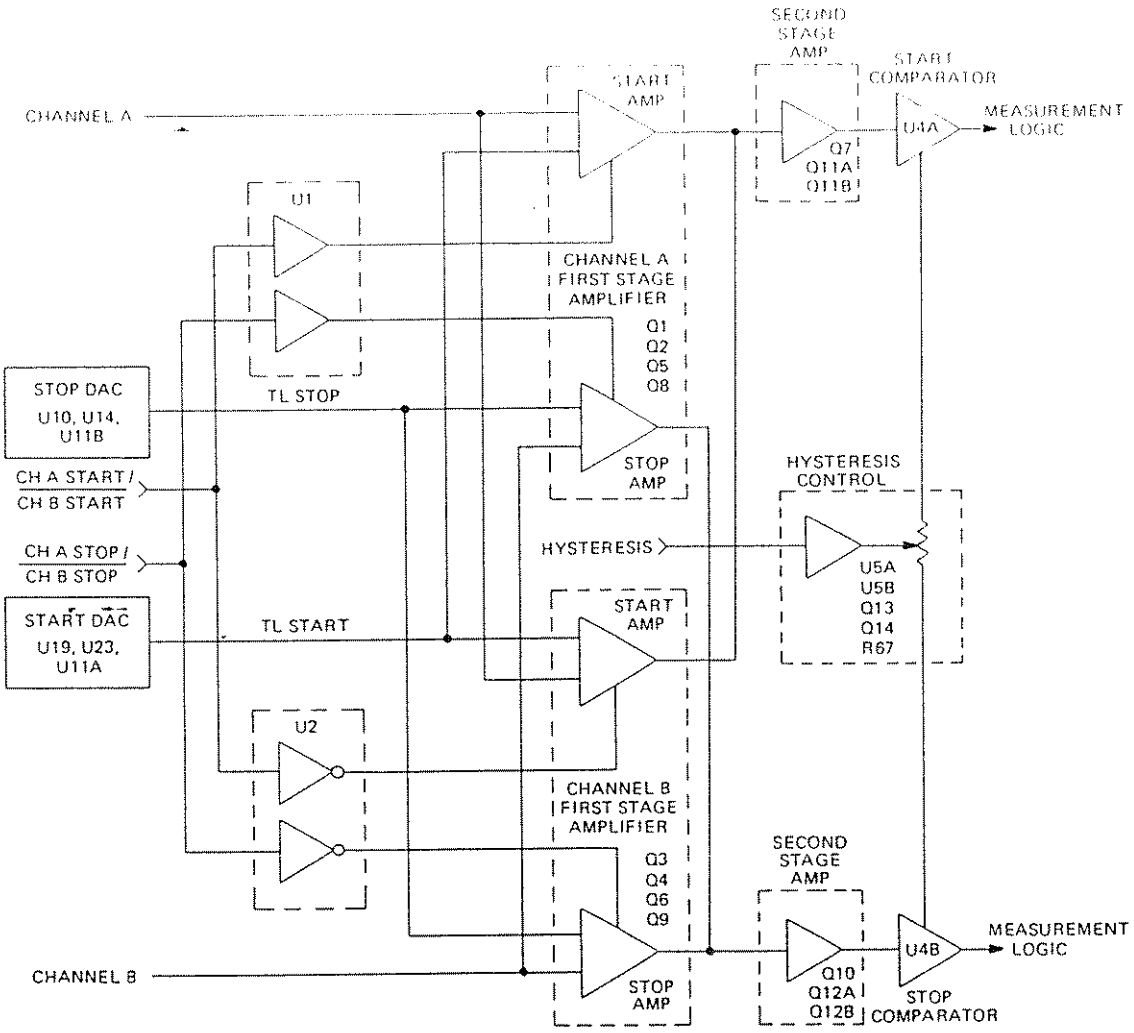



**Figure 5.2 - Simplified Block Diagram for Channel A/B**

### 5.3.2.2 Circuit Description

5.3.2.2.1 Input Conditioning

5.3.2.2.1.1 At the channel A input connector, K1 will select 50-ohm impedance when energized. This is achieved through the two parallel 100-ohm resistors R1 and R3. Refer to Figure 5.3.

5.3.2.2.1.2 AC/DC coupling is effected through K3. When this relay is de-energized, AC coupling is achieved via the two parallel capacitors C7 and C8.

5.3.2.2.1.3 Attenuation is accomplished via the four relays K5, K6, K10 and K12. The X1 range is set by energizing K6. When K6 is de-energized and its companion relay K5 is energized, the user will have the attenuation (X10 or X50) selected. The X10 or X50 range is selected via K12. When K12 is energized, X10 attenuation is selected. The measurement signal is attenuated by RC voltage-divider network R20, R24, C18, C22 and C32. When K12 is de-energized, X50 attenuation is achieved via RC voltage-divider network R19, R23, R82, C148, C17, C21 and C31.

5.3.2.2.1.4 When relay K9 is de-energized, the input signal is filtered by passage through R16. R16 and input capacitance work together to achieve 100 kHz nominal signal filtering.

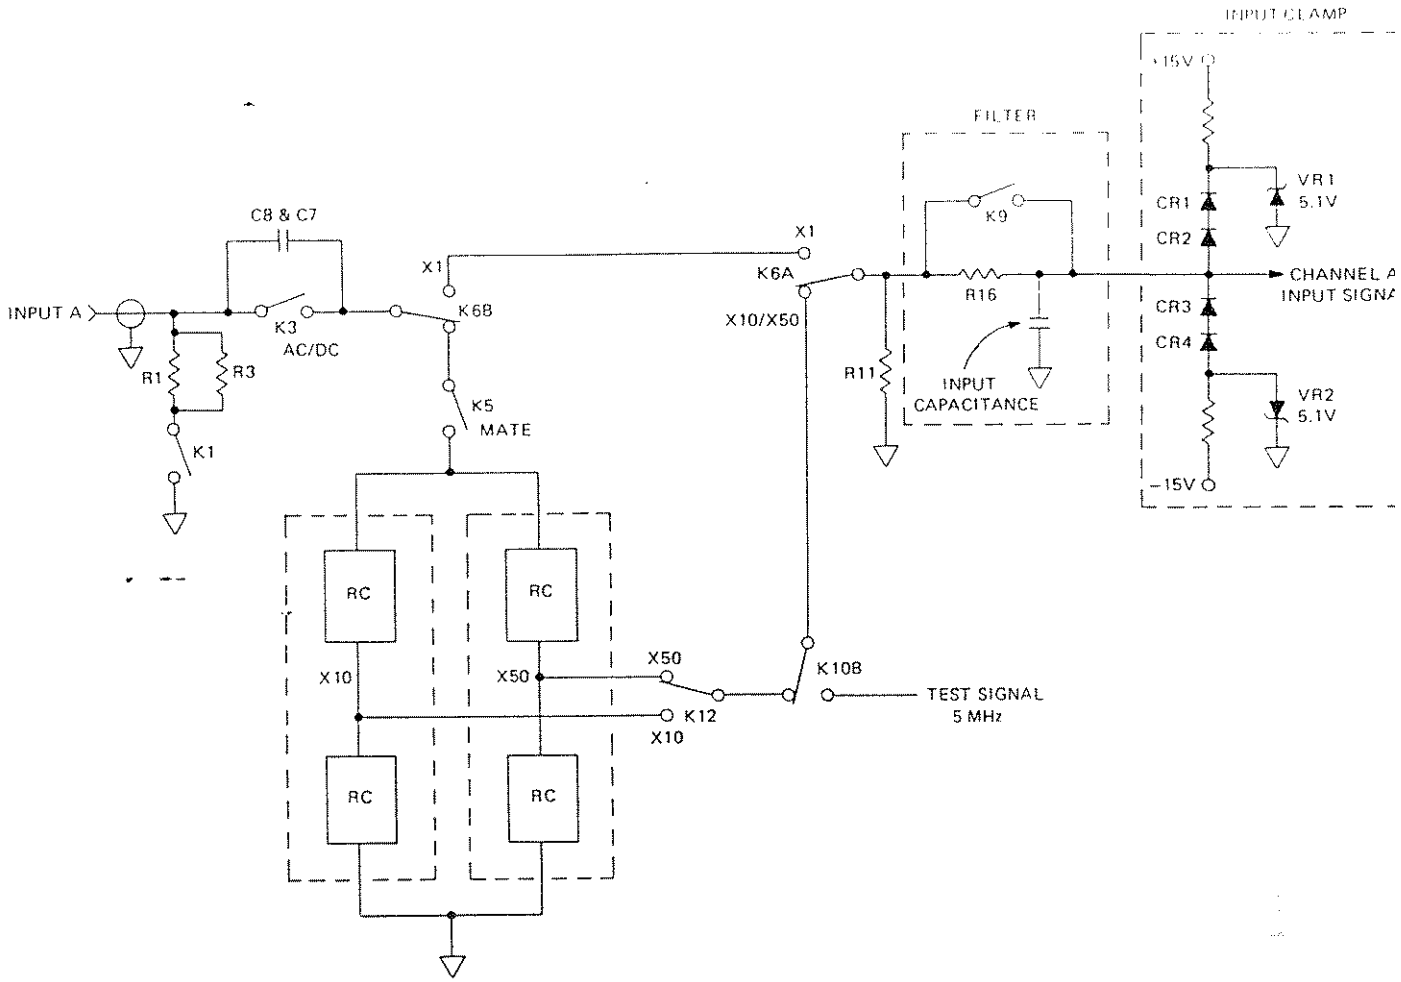



**Figure 5.3 - Input Switch Circuitry for AC/DC and Attenuator**

5.3.2.2.2 Start/Stop Amplifier Circuit Description

5.3.2.2.2.1 Refer to Figure 5.4. The input buffer for channel A (channel B is identical) consists of two ICs, Q8 (transistor array) and Q2 (FET array). These two chips help to comprise two differential amplifiers called the start/stop amplifiers.

5.3.2.2.2.2 Input to the start/stop amplifiers is limited to approximately ±7 volts at the input to Q2A-6 and Q2D-11. This is achieved by the input clamp circuit consisting of R31, R50, CR1, CR2, CR3, CR4, VR1, and VR2 as shown in Figure 5.3.

5.3.2.2.2.3 The current sources for these two differential stages are supplied by Q1, VR4, R32 and R33 for the start amplifier, and Q5, VR6, R36 and R37 for the stop amplifier. Each source is switched on and off by a section of U1, which in turn is controlled by a TTL-control logic signal from the motherboard.

5.3.2.2.2.4 When control line CH A START is high at U1-13, U1-11 is an open circuit. This turns on Q1 and allows current to flow. This selects the channel A input to pass through the start amplifier to the differential output (A3 and A4). If the CH A STOP control line is also high, channel A's input signal would pass through the stop amplifier to the differential output (A1 and A2). When the control line CHA START is low at U1-13, U1-11 connects the base of Q1 to -15V disabling the current source and, hence, the differential amplifier. When the amplifier is disabled, it is no longer able to process input and trigger level signals.

5.3.2.2.2.5 The amount of current through current source Q1 is determined by R32 and R33. With the HYSTERESIS control line low at U1-9 (maximum counter sensitivity), U1-2 and 16 are at -15V which puts R32 and R33 in parallel. This provides 11 mA through Q1 and 5.5 mA through each half of the differential stage. With the HYSTERESIS control line high, R32 is removed from across R33, thereby reducing the current through Q1 to 2 mA, and decreasing the counter sensitivity. Switching the current through the start and stop amplifiers, combined with hysteresis control of dual comparator U4 (Figure 5.5) controls the overall hysteresis of the signal conditioner. The amount of hysteresis determines the counter sensitivity.

5.3.2.2.2.6 The trigger levels are set by two digital-to-analog converter (DAC) circuits on the motherboard. Refer to Figure 5.6. U11A, U19, and U23 are the primary components of the START DAC; U10, U11B, and U14 (not shown) are the primary components of the STOP DAC.

5.3.2.2.2.7 The level at which the start amplifier circuit triggers is controlled by a voltage at Q2B-3 (see Figure 5.4., the TL START line). This voltage comes from U11A-1 on the motherboard as shown in Figures 5.2 and 5.6.

5.3.2.2.2.8 The level at which the stop amplifier circuit triggers is controlled by a voltage at Q2D-11 (see Figure 5.4, the TL STOP line). This voltage comes from U11B-8 on the motherboard as shown in Figure 5.2.

5.3.2.2.2.9 The output of the start/stop amplifiers is taken from the collector of Q8A-6 and Q8B-2 for the start and Q8C-12 and Q8D-11 for the stop amplifier. These four signals are A1, A2, A3, A4 which connect the base of Q11A, Q11B, Q12A, and Q12B as shown in Figure 5.5.

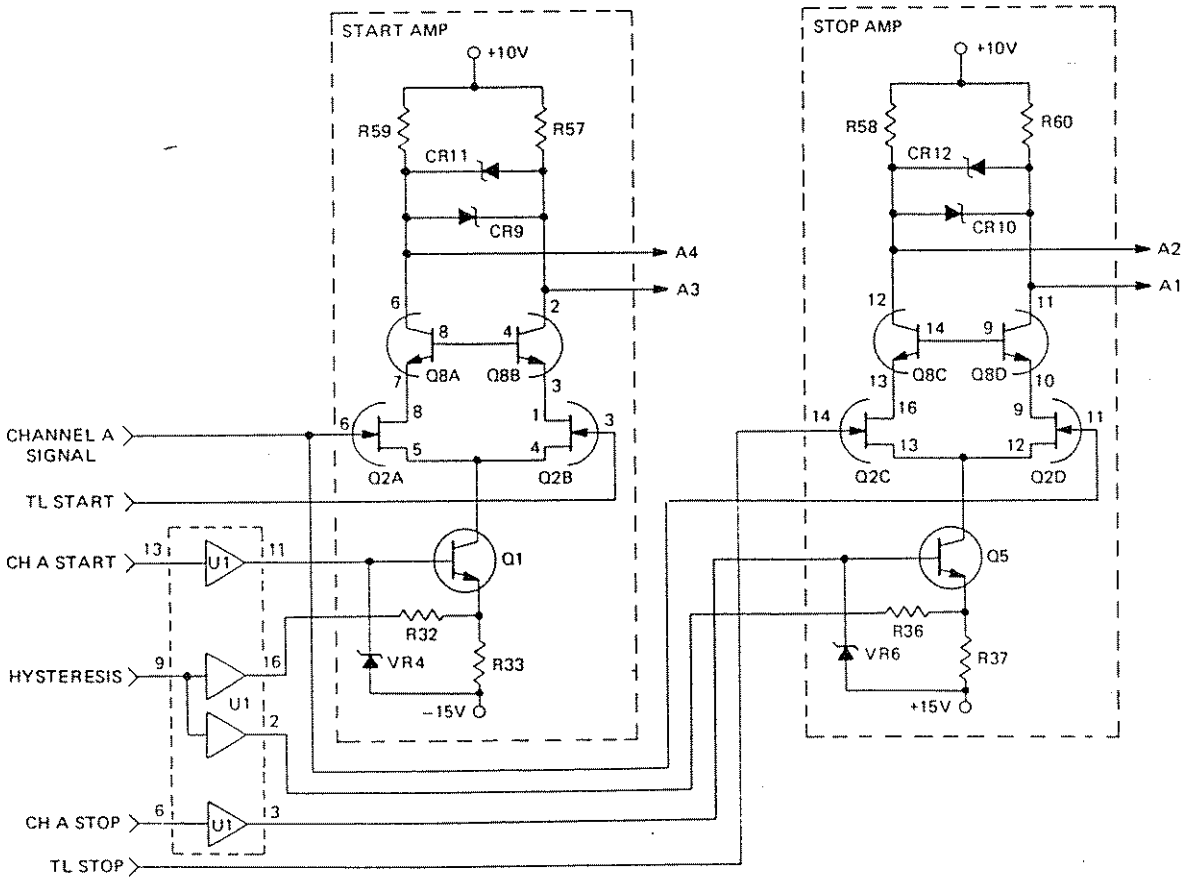



Figure 5.4 - Start/Stop Buffer Amplifier Stage

5.3.2.2.3 Start/Stop Level Shifter Circuit Description

5.3.2.2.3.1 The second amplifier stage is called the start level shifter. (For convenience, since channels A and B are identical, only channel A is discussed.) This stage is also a differential amplifier consisting of Q11A and Q11B with Q7 as the current source. Refer to Figure 5.5.

5.3.2.2.3.2 The second stage's signal is limited to a peak-to-peak swing of 400 millivolts by CR9, CR10, CR11 and CR12. These diodes improve the peak measurement accuracy of the signal conditioner at high frequencies and high input levels.

5.3.2.2.3.3 The second stage operates in the active region with a DC offset at the collector output of Q11A and Q11B. This offset is established by the current-source components Q7, R44, R51, and R52.

5.3.2.2.3.4 R44 and R52 create a voltage divider at the base of Q7, resulting in approximately 1.2 volts across R51. This, in turn, provides about 6.0 milliamps through each leg of the differential amplifier. With 6.0 milliamps through Z7-2 and Z7-3, start comparator U4A has a signal which swings around a DC offset of 200 millivolts.

5.3.2.2.4 Start/Stop Comparator Circuit Description

5.3.2.2.4.1 U4 is a dual high-speed differential comparator with an ECL output. This device receives an input from the start/stop level shifter (second amplifier stage). Refer to Figure 5.5.

5.3.2.2.4.2 U4-7 and 8 are the start differential inputs; U4-9 and 10 are the stop differential inputs. The output of the comparator is directed in two pathways: (1) measurement logic and (2) auto-trigger circuitry.

5.3.2.2.5 Hysteresis Control Circuit Description

5.3.2.2.5.1 Hysteresis control is achieved by changing the voltage applied to U4-5 and 13. This is effected by the HYSTERESIS control line which sets either a logic low or high at U5-6 in order to turn on Q13 or Q14, respectively.

5.3.2.2.5.2 With a logic low at U5-3 and 6, a high is set at the gate of Q13 and a low is set at the gate of Q14. This condition selects the low hysteresis voltage for application to U4-5 and 13 via Q13 to balancing resistor R67. This low hysteresis voltage source is established through the voltage divider network R66, R68 and R70. This voltage can be adjusted during board level calibration via variable resistors R70 and R71.

5.3.2.2.5.3 With a logic high at U5-3 and 6, Q13 is turned off and Q14 turned on. This applies the high hysteresis voltage to U4-5 and 13 via Q14 to R67. This high hysteresis voltage source is established through voltage divider network R65, R69, and R71. This voltage can be adjusted during calibration via resistor R71.

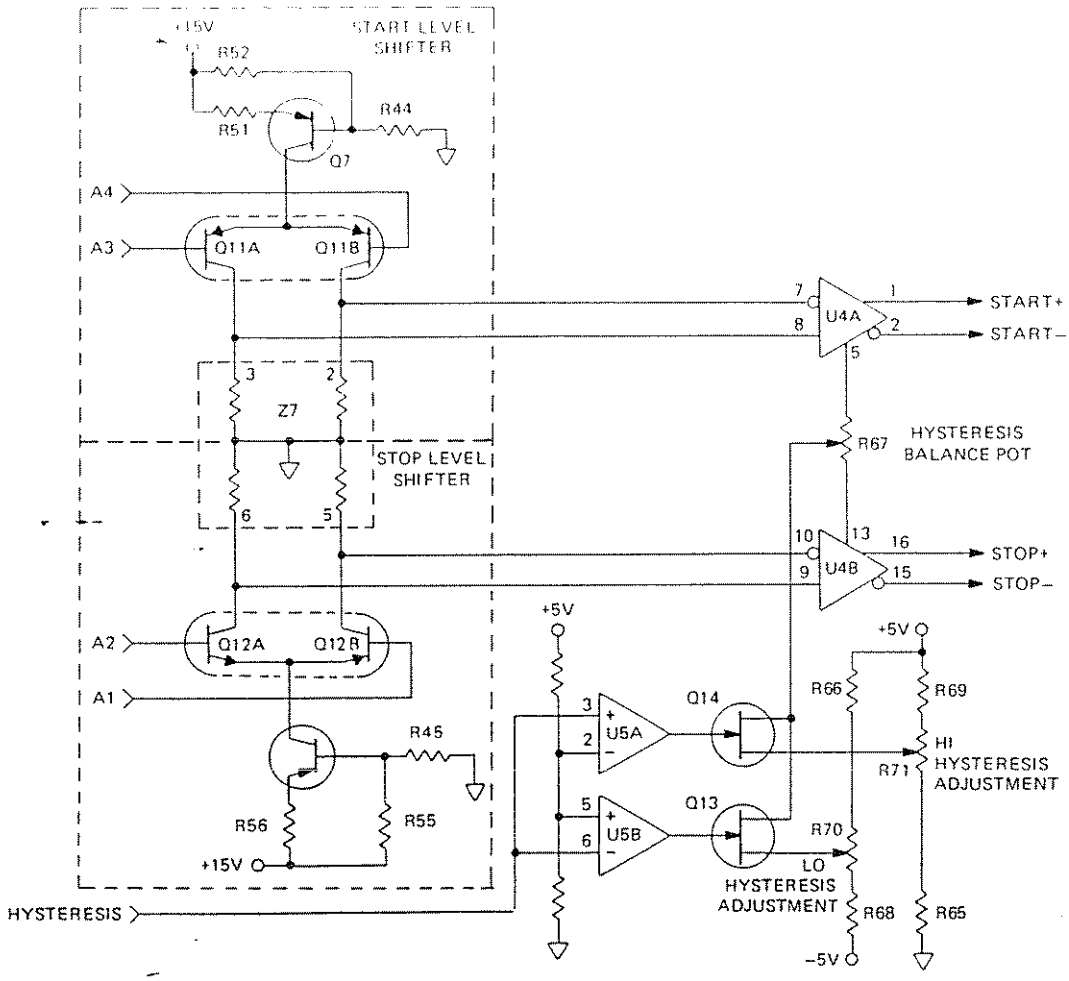



**Figure 5.5 - Level Shifting and Hysteresis Control**

5.3.2.2.6 Digital-to-Analog Converter (DAC) - Functional Description

5.3.2.2.6.1 Refer to Figure 5.6. The DAC block contains two identical circuits, the START DAC and the STOP DAC (START DAC only shown in figure). The DACs convert 12 bits of data from the microprocessor's 16-bit data bus into analog voltage used to program the start/stop buffer's trigger levels. These trigger levels are also routed to the rear panel for calibration purposes.

5.3.2.2.6.2 Each DAC consists of two sections: (1) a voltage section which performs the actual digital-to-analog conversion, and (2) a summing amplifier section.

5.3.2.2.7 START DAC Circuit Description

5.3.2.2.7.1 Refer to Figure 5.6. The following description refers only to the START DAC, but can also be applied to the STOP DAC.

5.3.2.2.7.2 The first half of the START DAC circuit, the voltage section, contains the DAC chip U19 and the operational amplifier feedback loop. U19 outputs a current dependent upon the 12-bit code which is input from the microprocessor. This current is converted into a negative voltage by the operational amplifier U23. This voltage is then applied to R19. R19, R20, U11A, and U20 all work together to convert this negative output into either a positive or negative DC level.

5.3.2.2.7.3 U19, a CMOS IC, receives a 12-bit word code from the microprocessor. The data bus, from where this word code is taken, is shared with many other devices, the DAC must be strobed by the microprocessor's chip select line $\overline{\text{STDAC}}$ and write line $\overline{\text{PWE}}$. When these two lines both go low, they latch the valid data code into U19.

5.3.2.2.7.4 U19 receives a reference voltage from U20. This voltage sets up the current through an internal resistor ladder-network either to ground at pin 2 or to the output at pin 1. The output current is dependent upon the binary code input to the 12 switches. With all data lines latched high, the current at pin 1 is equal to the input current at pin 19 (VREF). There are 4096 incremental steps of the signal level that can appear at the output proportional to the binary weighted input code.

5.3.2.2.7.5 U23 operates in a feedback configuration to act as a current-to-voltage converter. This feedback loop keeps the output voltage of the DAC (pin 1) at zero volts.

5.3.2.2.7.6 The voltage level at the output of U23 is always negative as a result of the signal inversion by operational amplifier U23. R19 and R20 constitute a voltage-divide network with U20 supplying +5 volts to R20 and R19 receiving its supply from the output of U23. As the voltage varies at R19, the amount of current will vary at point A (see Figure 5.6). The amount of current at U11's operational amplifier input will be amplified to achieve the START DAC voltage selected by the microprocessor's binary code. The gain of the summing circuit is about 3.16 and is established by R13, R14, R19 and R20.

5.3.2.2.7.7 The reference voltage input to the DAC is +5 volts and is supplied by U20. The output of the current-to-voltage converter of U23 ranges from zero to -5 volts. Since the DAC has 12 bits, it has the potential for 4096 current increments and its voltage resolution is about 1.2 millivolts. Because of the scaling of current and the gain setup of U11A, the DAC resolution is 2.5 millivolts per step. This provides a trigger level with a voltage range of +5.2 to -5.2 volts.

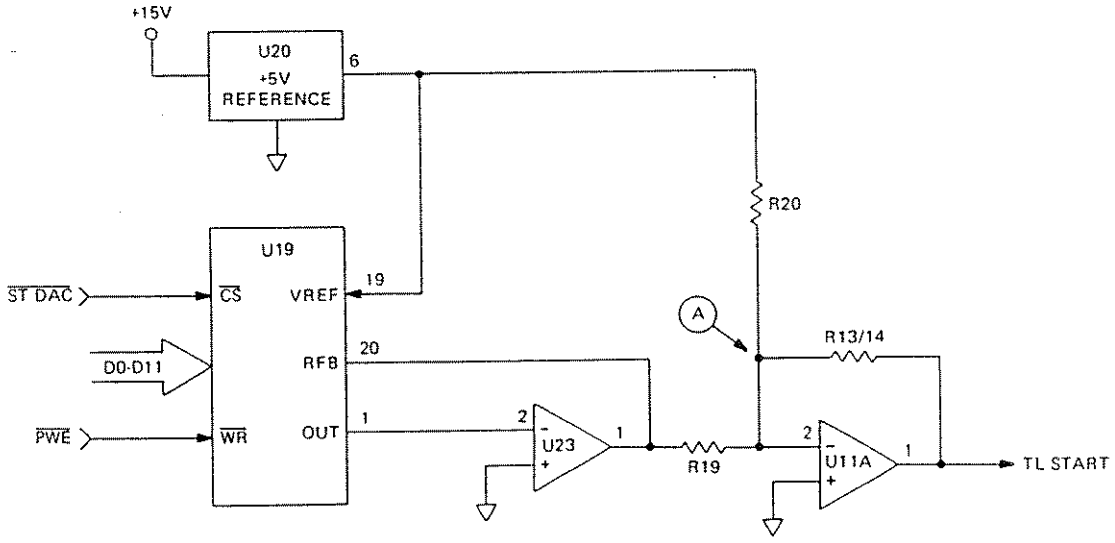



Figure 5.6 - Simplified Schematic for the START DAC

5.3.2.3 Auto-Trigger Circuitry

5.3.2.3.1 Functional Description

5.3.2.3.1.1 The auto-trigger circuit, in conjunction with the microprocessor and DAC circuitry, determines the amplitude of the input measurement signal for channel A and/or B. This is achieved by doing a signal peak search and then automatically setting the trigger level to the optimum 50% point. Depending on the trigger display selected (peak-to-peak, peak maximum, peak minimum, or the 50% point), this trigger value is then sent to channel A and/or B trigger displays on the front panel.

5.3.2.3.1.2 The peak signal search during auto-trigger determination actually involves a search for the positive and the negative peak levels. During each peak signal search, the microprocessor requires information regarding whether (1) the input signal crossed the trigger point that was set and whether (2) the input signal is above or below the trigger point. Now to a brief circuit description.

5.3.2.3.2 Circuit Description

5.3.2.3.2.1 Refer to Figure 5.7. To determine the trigger level automatically, information for calculation by the microprocessor is obtained from U30. When signal line $\overline{\text{CSBUFA}}$ is brought low, tri-state buffer U30 routes the Start Signal Crossing Level ($\overline{\text{STSXL}}$) and Start Signal Voltage Level (STSVL) signals to the microprocessor for reading.

5.3.2.3.2.2 The $\overline{\text{STSXL}}$ signal indicates whether the input measurement signal has crossed the trigger level. The $\overline{\text{STSLV}}$ signal indicates whether the trigger level is above or below the measurement signal. The microprocessor always looks at the $\overline{\text{STSXL}}$ signal first. If the $\overline{\text{STSXL}}$ signal level is high, the microprocessor looks at the $\overline{\text{STSLV}}$ signal to determine if the trigger level is set above or below the measurement signal. The microprocessor never looks at the $\overline{\text{STSLV}}$ signal if the $\overline{\text{STSXL}}$ signal is low because the microprocessor now has all the information to set the next trigger point.

5.3.2.3.2.3 Before the microprocessor can perform an auto-trigger, it first sets the DAC's trigger level to the start/stop amplifiers. Next, the auto-trigger circuitry is set up. First, the microprocessor brings the $\overline{\text{DLYWND}}$ and ARM signal lines high. This forces the ATE (Auto-Trigger Enable) line high and the $\overline{\text{ATE}}$ line low. This enables U54B and U55B.

5.3.2.3.2.4 With the DAC's trigger level and auto-trigger circuitry now set, the microprocessor initializes an auto-trigger process. The $\overline{\text{ATRST}}$ (Auto-Trigger Reset) signal line is first pulsed low, setting U55B's Q output high. If the DAC level was set within the measurement signal's peak-to-peak range, U55B's Q output would be clocked low by the ATSTART+ signal which is the buffered Start measurement signal. Once U55B's Q output has been brought low, U55B's Q output is fed back to the input at U58B-4. This maintains the D input to U55B at a low level which keeps U55B's Q output low during any more clock pulses from the ATSTART+ signal.

5.3.2.3.2.5 U54B and U55B's Q outputs $\overline{\text{STSXL}}$ and $\overline{\text{STSLV}}$ now pass to U53. U53 translates ECL signals to TTL signals, then passes the $\overline{\text{STSXL}}$ and $\overline{\text{STSLV}}$ signals to U30 for reading by the microprocessor.

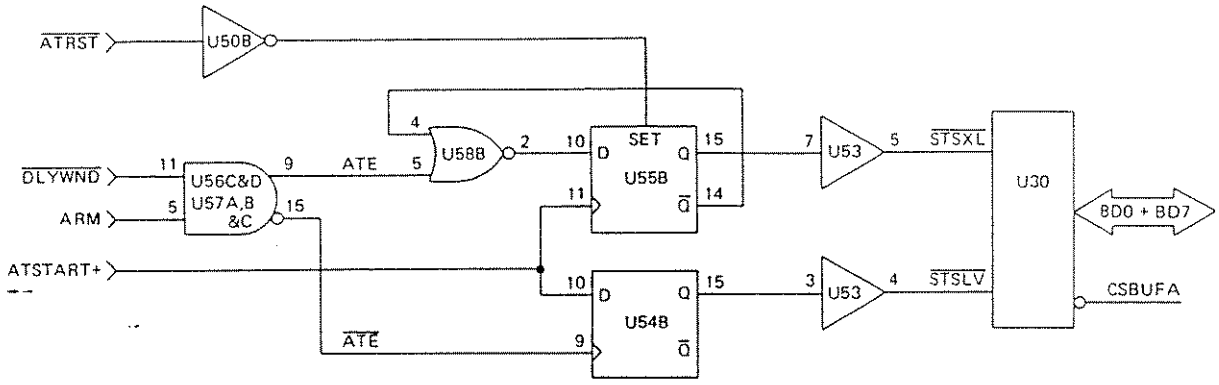



**Figure 5.7 - Simplified Schematic for the Auto-Trigger Start Circuitry**

## 5.3.3 Channel C Block

### 5.3.3.1 Functional Description

5.3.3.1.1 Channel C is provided on Model 1996 only. Refer to Figure 5.8 which provides a simplified block diagram. Channel C processes the signal applied at the channel C input and feeds it to the measurement block.

5.3.3.1.2 Channel C's input is protected by a fuse, mounted in the input connector, and also by a signal-limiting circuit. Next is an automatic level control circuit which reduces the range of the signal level applied to the amplifier.

5.3.3.1.3 After amplification, the signal is prescaled by 64 before being passed via a buffer and a signal gate to the measurement block.

5.3.3.1.4 The amplitude of the signal at the amplifier output is monitored by a detector and a comparator. The comparator output controls the low-signal latch. If the detector output is below the threshold, the latch is set and the channel output is inhibited by the signal gate. When the detector output goes above the threshold, the low-signal latch is armed and opens the signal gate on the next signal edge from the prescaler. This enables the instrument to make measurements on signal bursts.

5.3.3.1.5 The detector output is also applied to the continuous signal latch. This latch is reset at the beginning of each gate period and is set if the detector output falls below the threshold level. The microprocessor system samples the latch output throughout the gate period. If the measured signal falls below the threshold level during this period, the measured result is set to zero.

5.3.3.1.6 If channel C is not selected, the low-signal latch is held in reset by a control signal from the microprocessor and the output to the measurement block is inhibited. The same control signal is used to enable channel A so that the two channels cannot be enabled at the same time.

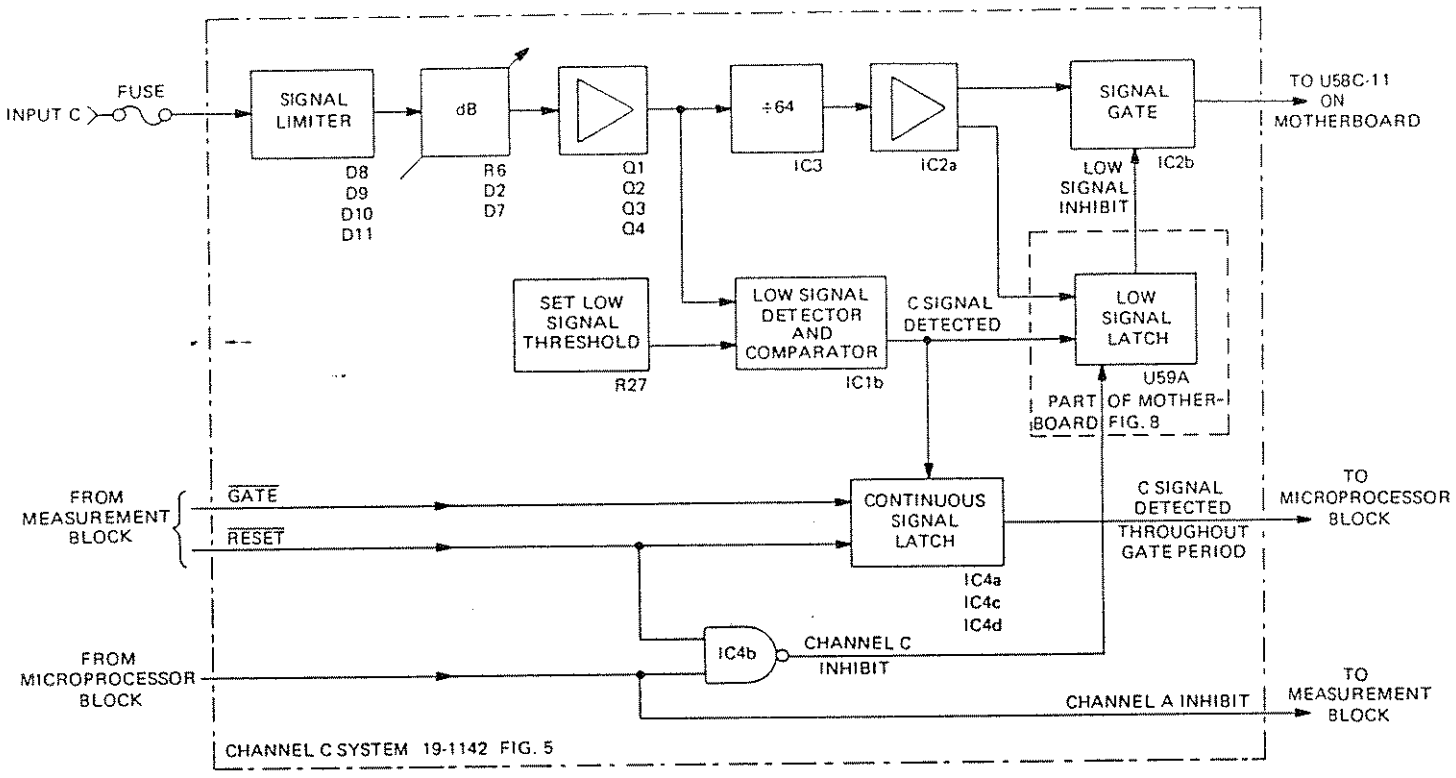



**Figure 5.8 - Simplified Block Diagram for Channel C (1996)**

## 5.3.3.2 Circuit Description

5.3.3.2.1 Refer to Section 7 for the complete channel C schematics. The signal to be measured is applied via SK13 (INPUT C). The circuit is protected by a fuse mounted within SK13. The signal amplitude is limited by the diode clamp comprised of D8, D9, D10 and D11.

5.3.3.2.2 A degree of automatic gain control is achieved by means of an attenuator formed by R6 and the impedance of the PIN diodes D2 and D7. The peak-to-peak detector D1, D3, R7 and C48 produces a negative voltage proportional to the signal amplitude. A direct current proportional to this voltage flows through the PIN diodes via L1. The impedance of the diodes decreases if the current increases so that changes in signal amplitude are offset by changes in attenuation.

5.3.3.2.3 The signal passes through four amplifier stages incorporating Q1, Q2, Q3 and Q4. The amplified signal is fed to the counter IC3 via the shaping circuit formed by R37, C46 and R36.

5.3.3.2.4 The signal frequency is prescaled by 64 in IC3 and buffered in IC2a. Provided that channel C is selected and the amplitude of the signal is adequate, the output at IC2a-2 passes to the measurement logic via the gate IC2b and SK7 pin 5.

5.3.3.2.5 The signal at the output of Q4 is fed to the low-signal detector D5 and C23. The comparator IC1b compares the detector output with a threshold voltage set by R27. The comparator output is at a logic 1 if the detector output is below the threshold (the amplitude of channel C's signal is too low for accurate counting).

5.3.3.2.6 The logic level at the comparator output is inverted in IC1-A and is fed via SK7 pin 14 to the D1 input of U59A-7 on the motherboard. U59A-6 is clocked by the output of IC2a via SK7 pin 8. If the signal from Q4 is below the threshold, U59A-3 goes to a logic 1. This logic level is fed back via SK7 pin 7 to disable the gate IC2-B and inhibit the output to the measurement block.

5.3.3.2.7 The $\overline{\text{GATE}}$ signal enters the system at SK7 pin 17 and is inverted in IC1-C. The resulting signal and the output of the comparator IC1-B are fed to IC4-A. If both inputs are at a logic 1, indicating that the channel C level is too low while the gate is open, the continuous signal latch IC4-C and IC4-D is set. The latch output is fed to the microprocessor via SK7 pin 11 and prevents the result of any measurement made during that gate period from being displayed.

5.3.3.2.8 The STSL signal at SK7 pin 16 is at a logic 1 when channel C is selected. When channel C is not selected, SK7 pin 16 is at a logic 0. This level is inverted and buffered in IC4-B and IC1-D, and then is fed to U59A-4 (see channel C schematic) via SK7 pin 13. U59A-4 is held reset, inhibiting the channel C signal at IC2-B via SK7 pin 7.

## 5.3.4 Measurement Logic Block

### 5.3.4.1 Functional Description

5.3.4.1.1 Refer to Figure 5.1 and 5.9 when reading this description of the measurement logic block.

5.3.4.1.2 The start and stop signals after signal conditioning are applied first to the divider/multiplexer and auto-trigger circuitry (see figure). The multiplexer selects either the start divide-by-2 or the start/stop signals.

5.3.4.1.3 The synchronization circuit is designed to delay the start and stop signals' clocking edge from reaching the MCC2 chip (U6) before the start enable (STEN) and stop enable (SPEN) control signals. After synchronization, the start and stop signals are applied to ECL LSI device U6 along with the reference signal and start and stop enable control signals.

5.3.4.1.3.1 The start enable and stop enable signals define the gate time. The start enable control signal is generated by the CPU or external Input A, B or D; the stop enable control signal follows the start enable signal by a time determined by the gate circuitry.

5.3.4.1.3.2 The reference signal is provided by either a precision 10 MHz oscillator or an external reference signal of 1, 5, or 10 MHz at 500 mVrms to 5 Vrms.

5.3.4.1.4 The ECL LSI device executes a partial reading conversion and passes the information to CMOS LSI device U11. Additional information from the ECL LSI device is directed to the precision TEC assembly U10 which performs a precision timing-error-correction operation. The TEC assembly then passes the information from timing error correction to the CMOS LSI device.

5.3.4.1.4.1 This latter device (U11) performs the remaining reading conversion and also presents the results on the data lines when interrogated by the CPU. The CPU then executes the appropriate function-dependent calculations, displaying the measurement results on the instrument's front-panel display.

### 5.3.4.2 Divider/Multiplexer Circuit Description

5.3.4.2.1 Refer to Figures 5.5 and 5.9 for the following circuit description.

5.3.4.2.2 The four differential output signals from U4 are directed to U7 and U6. One of these, the START+ signal from U4A-1, also passes to the clock input of U8A. U8A (a D-type flip-flop) functions by dividing this clock-input START+ signal by two.

5.3.4.2.3 Q and $\overline{Q}$ are the two outputs of U8A comprising the complementary outputs of the divided START+ signal. Q and $\overline{Q}$ are then routed to U7, a two quad-channel multiplexer.

5.3.4.2.4 U7 selects either the complementary input of the start and stop signals from U4A and B, or the Q and $\overline{Q}$ signals from U8A for presence at its outputs. Selection is effected via the $\overline{200\ MHz}$ ECL control line.

5.3.4.2.5 The $\overline{200\ MHz}$ control signal goes to U8A and U7. U8A will only divide the START+ signal at its clock input when both the $\overline{200\ MHz}$ and Q1 signals at U8A are at an ECL low. This condition permits the START+ signal at U8A's clock input to be divided and routed through U7 to its complementary outputs.

5.3.4.2.6 However, when the $\overline{200\ MHz}$ signal at U7 and U8A is at an ECL high, the divide path is disabled. Then the complementary outputs from U4A and B are selected to pass through U7 to its complementary outputs.

### 5.3.4.3 Synchronization Circuit Description

5.3.4.3.1 Refer to Figures 5.5 and 5.9, and especially 5.10 for the following circuit description. This description is confined to the START+ SYNC circuit as the STOP+ SYNC circuit is essentially the same.

5.3.4.3.2 The START+ input signal is connected to U4A, which is an exclusive-or gate with complementary output. U4A selects the slope of the START+ signal at U4A-7 by setting U4A-9 at an ECL logic level.

5.3.4.3.3 Slope selection is effected by the TTL control signal STSL. When this control line goes low at U3A, the latter converts the TTL signal to an ECL low. U3A's ECL level drives U4A-9 to a corresponding low ECL level. This selects the positive slope of the START+ signal to be at U4A's output.

5.3.4.3.4 When control line STSL is high, the negative slope of the START+ signal is selected to be at U4A's output.

5.3.4.3.5 The complementary outputs of U4A are connected to the latch enable lines of U7A. These latch enable lines (U7A-5 and 6) enable or disable the STEN signal to pass through U7A to Q2 and Q4. See Figure 5.10.

5.3.4.3.6 Q2 and Q4 take the complementary ECL outputs from U7A and convert the ECL level to a TTL level at the collector side of Q2. This signal is named DSTEN.

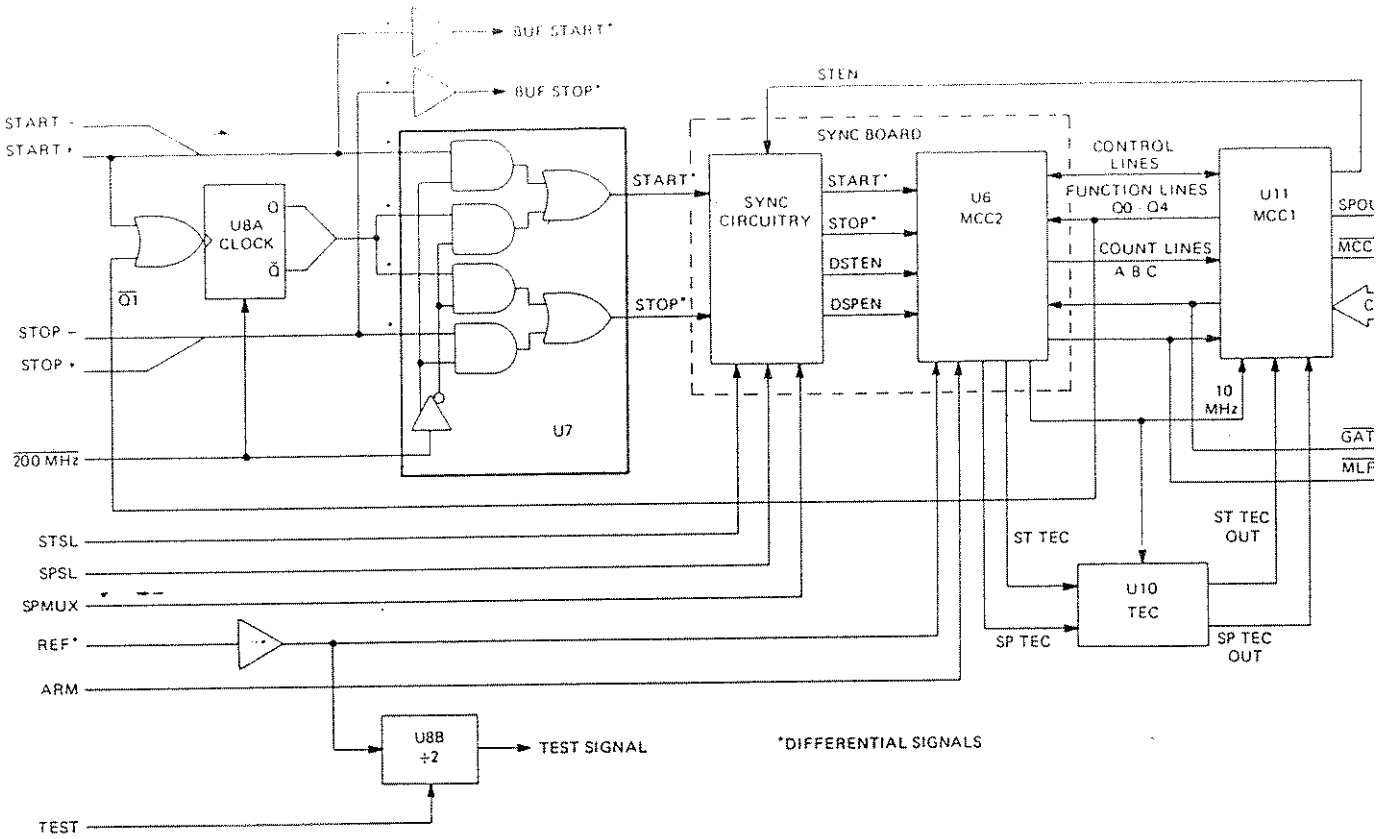



Figure 5.9 - Simplified Diagram for the Measurement Logic Block

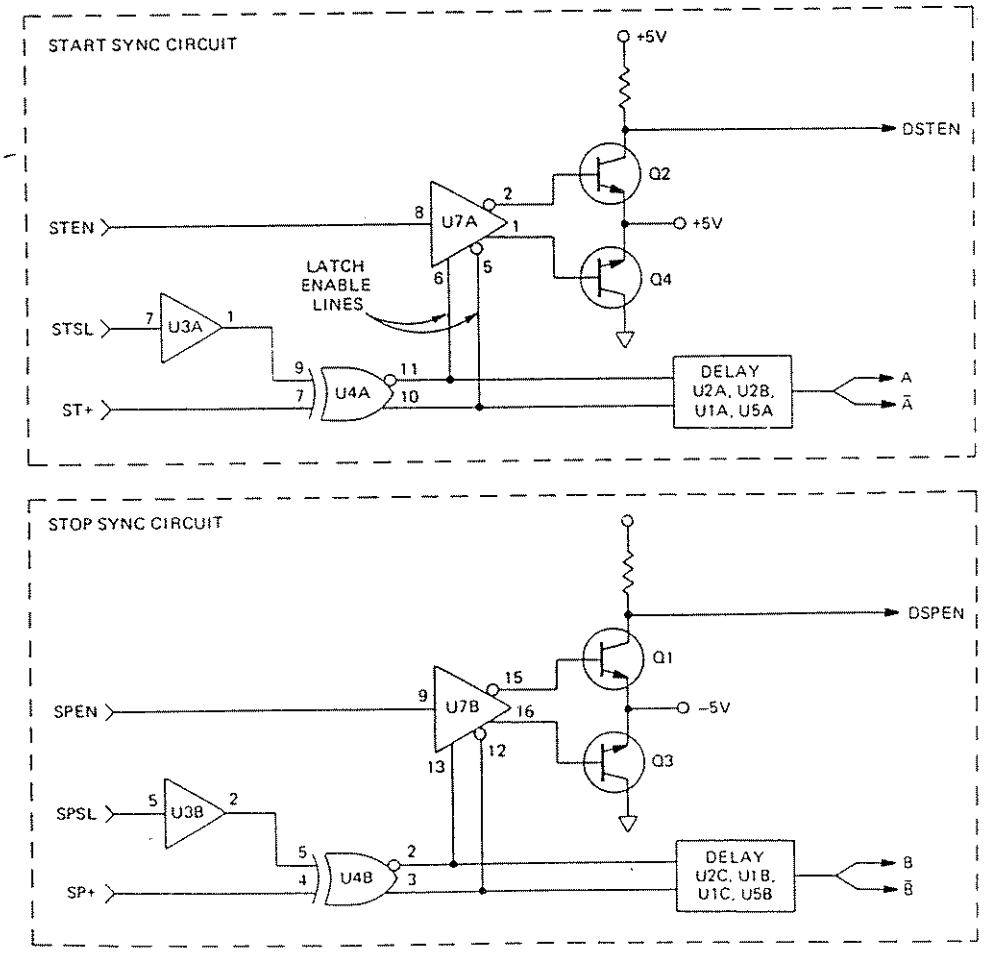



Figure 5.10 - Simplified Schematic for the Synchronization Circuit

5.3.4.4 Measurement Circuit Description

5.3.4.4.1 Refer to Figure 5.9 for the following description of the measurement circuit.

5.3.4.4.2 The measurement circuit consists essentially of the three chips, U6, U10, and U11. U6 is the chip where the input signals from channels A, B and C enter for measurement after signal conditioning. U11 is a CMOS chip and the heart of the measurement circuit. This IC receives all control functions for signal measurement from the microprocessor and, also under microprocessor control, enables a reading to be taken.

5.3.4.4.3 A reading takes place when the microprocessor sets up the function control lines Q0 through Q4 of U11. These control lines are connected from U11 to U6 to direct the input signal(s) through U6's internal logic.

5.3.4.4.4 When the microprocessor is ready, it orders U11 to set the STEN line high. However, this control line cannot go high yet as it has to wait to be clocked high by the 10 MHz timing signal from U6. When the STEN line does go high, it is routed to the synchronization circuit where it is converted to the DSTEN signal. It is the DSTEN signal which goes to U6, enabling a measurement to begin on the first clocking edge of the input signal to U6.

5.3.4.4.5 When U6's internal logic sees the clocking edge of the input signal(s), the ST TEC line from U6 to U10 goes low and so does the $\overline{\text{GATE}}$ line to U6. From 100 to 200 nanoseconds later the REF signal will clock the ST TEC line high.

5.3.4.4.6 Once the measurement begins, count lines A, B and C from U6 to U11 start to toggle. These three lines carry the least significant bits of a counter register that is 26 bits in length. The 23 most significant bits are stored in U11. At the end of the measurement, the DSPEN line at U6 goes high. This enables U6's internal logic to stop the measurement on the next clocking edge of the input signal at U6.

5.3.4.4.7 When U6's internal logic sees the input signal(s) next clocking edge, the SP TEC line from U6 to U10 will go low and the $\overline{\text{GATE}}$ line high. From 100 to 200 nanoseconds later, the REF signal will clock the SP TEC line high.

5.3.4.4.8 The ST TEC and SP TEC signals from U6 to U10 are both ECL low-going pulses. Each lasts from 100 to 200 nanoseconds. This pulse width represents the time difference (an error factor) between the clocking edge of the input signal and the 10 MHz reference signal. Refer to Figure 5.11.

5.3.4.4.9 U10 uses the ST TEC and SP TEC pulses in a dual-slope integration scheme. Using a constant current source, both pulses rapidly charge a capacitor. When the pulses end, the capacitor starts a scaled discharge at about 1/400th of the charge rate. This proportionally expands the TEC error pulse by a factor of 400. This integrated waveshape is then squared and used to gate the 10 MHz reference signal (the ST TEC OUT and SP TEC OUT signals) into U11's TEC register counters. Refer again to Figure 5.11.

5.3.4.4.10 At the end of a measurement,the CPU commands U11 to set the MLRST line low. This line resets all logic and register counters in U6 and U11, preparing for the next measurement.

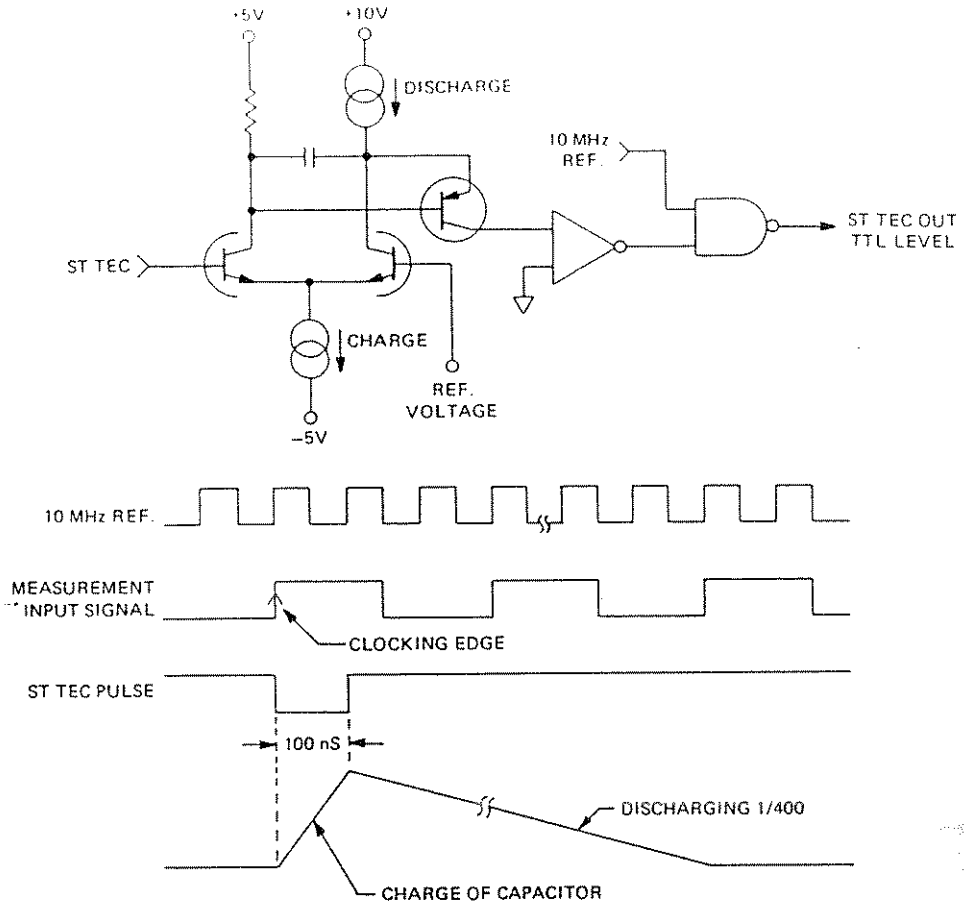



**Figure 5.11 - Simplified Diagram of the TEC Interpolator**

### 5.3.5 Display/Keyboard Block

#### 5.3.5.1 Functional Description

5.3.5.1.1 Refer to Figure 5.12. The front panel contains the display and keyboard circuitry. It has all the operator pushbutton controls for all counter functions, and displays measurement readings and diagnostic data such as errors and failure codes.

5.3.5.1.2 The front panel provides eleven 7-segment LEDs, 53 red LEDs, and two 4-digit trigger-level displays for channels A and B. Ten of the 7-segment LEDs are used for the mantissa. The eleventh 7-segment LED is the measurement reading exponent.

5.3.5.1.3 The keyboard has 40 momentary-contact pushbutton switches. It is continuously monitored via a 7 x 6 line matrix. ROW1 through ROW6 are strobed by a 3-to-8 line decoder/multiplexer. COL1 through COL7 are scanned and read from the data bus via a buffer.

#### 5.3.5.2 Circuit Description

5.3.5.2.1 Refer to Figure 5.12. The display board receives its instructions from the microprocessor through chips U3, U5, U6, U7 and U8. U3, U5 and U6 control display drivers U1, U2 and U4 as well as ten miscellaneous function/indicator LEDs. The microprocessor interfaces with the keyboard via chips U7 and U8.

5.3.5.2.2 Display drivers U1, U2 and U4 are Intersil (ICM7218) 8-digit LED devices. This device contains an 8 x 8 static memory array providing storage for the displayed information of the 7-segment decoders, all the multiplex scan circuitry, and high-power digit and segment drivers. The display driver has two control lines ($\overline{\text{WRITE}}$ and MODE) that define the chip select. The chip select either reads four bits of control information (DE, DF, DG or DH) or eight bits of display input data (DA through DH). The MODE control line defines the selection, with a high loading the control word on the write pulse, or a low loading the input data on the write pulse.

5.3.5.2.3 Any data present (BD0 through BD7) at the input of U3, U5 and U6 is latched out on the rising clock edge of lines CSLCHF, CSLCHG and CSLCHH. U5 handles the control lines (MODE, $\overline{\text{WRU1}}$, $\overline{\text{WRU2}}$ and $\overline{\text{WRU4}}$) and U3 handles the data lines (DA through DH) for the display drivers. Drivers U1 and U2 show the mantissa readings on the 7-segment display DS1 through DS11, and driver U4 shows channel A/B trigger levels on display DS12 and DS13.

5.3.5.2.4 The microprocessor refreshes the counter's measurement readings (mantissa) about every millisecond. Every time the display is updated by the microprocessor, the microprocessor must pass the mode data along with eight consecutive bytes of data for each of the three display drivers.


5.3.5.2.5 Mode data is passed to U1, U2 or U4 when the MODE control line from U5 is high and the $\overline{\text{Write}}$ line ($\overline{\text{WRU1}}$, $\overline{\text{WRU2}}$ or $\overline{\text{WRU4}}$) goes low. Lines DE, DF, DG and DH contain the control word that will be loaded into the display drivers.

5.3.5.2.6 Display data is passed when the MODE control line is low and the appropriate $\overline{\text{Write}}$ line goes low. Lines DA through DH now carry the display data for the mantissa and function/indicator LEDs. All display data directed to U1, U2 and U4 is coded in hexadecimal.

5.3.5.2.7 The function/indicator LEDs are controlled by U6, a part of U5, and the last five digit lines of U2 (L1 through L5).

5.3.5.2.8 The keyboard is scanned about every ten milliseconds. Scanning is effected by sequencing through BA1, BA2 and BA3; bring line $\overline{\text{CSBUFC}}$ low; and then reading buffer chip U7. It takes the microprocessor eight passes to read all 40 keys. For example, in order for the microprocessor to read ROW4 and COL6, lines BA1 and BA3 will be set high and line BA2 will be set low. The microprocessor next would bring line $\overline{\text{CSBUFC}}$ low, enabling U8 to bring the ROW4 line low. If the key across ROW4 and COL6 is depressed, COL6 will be low and the microprocessor will read via buffer chip U7 the value BF in hexadecimal. If that key is not depressed, the microprocessor will read an FF instead.

Figure 5.12 – Simplified Schematic for the Display Board

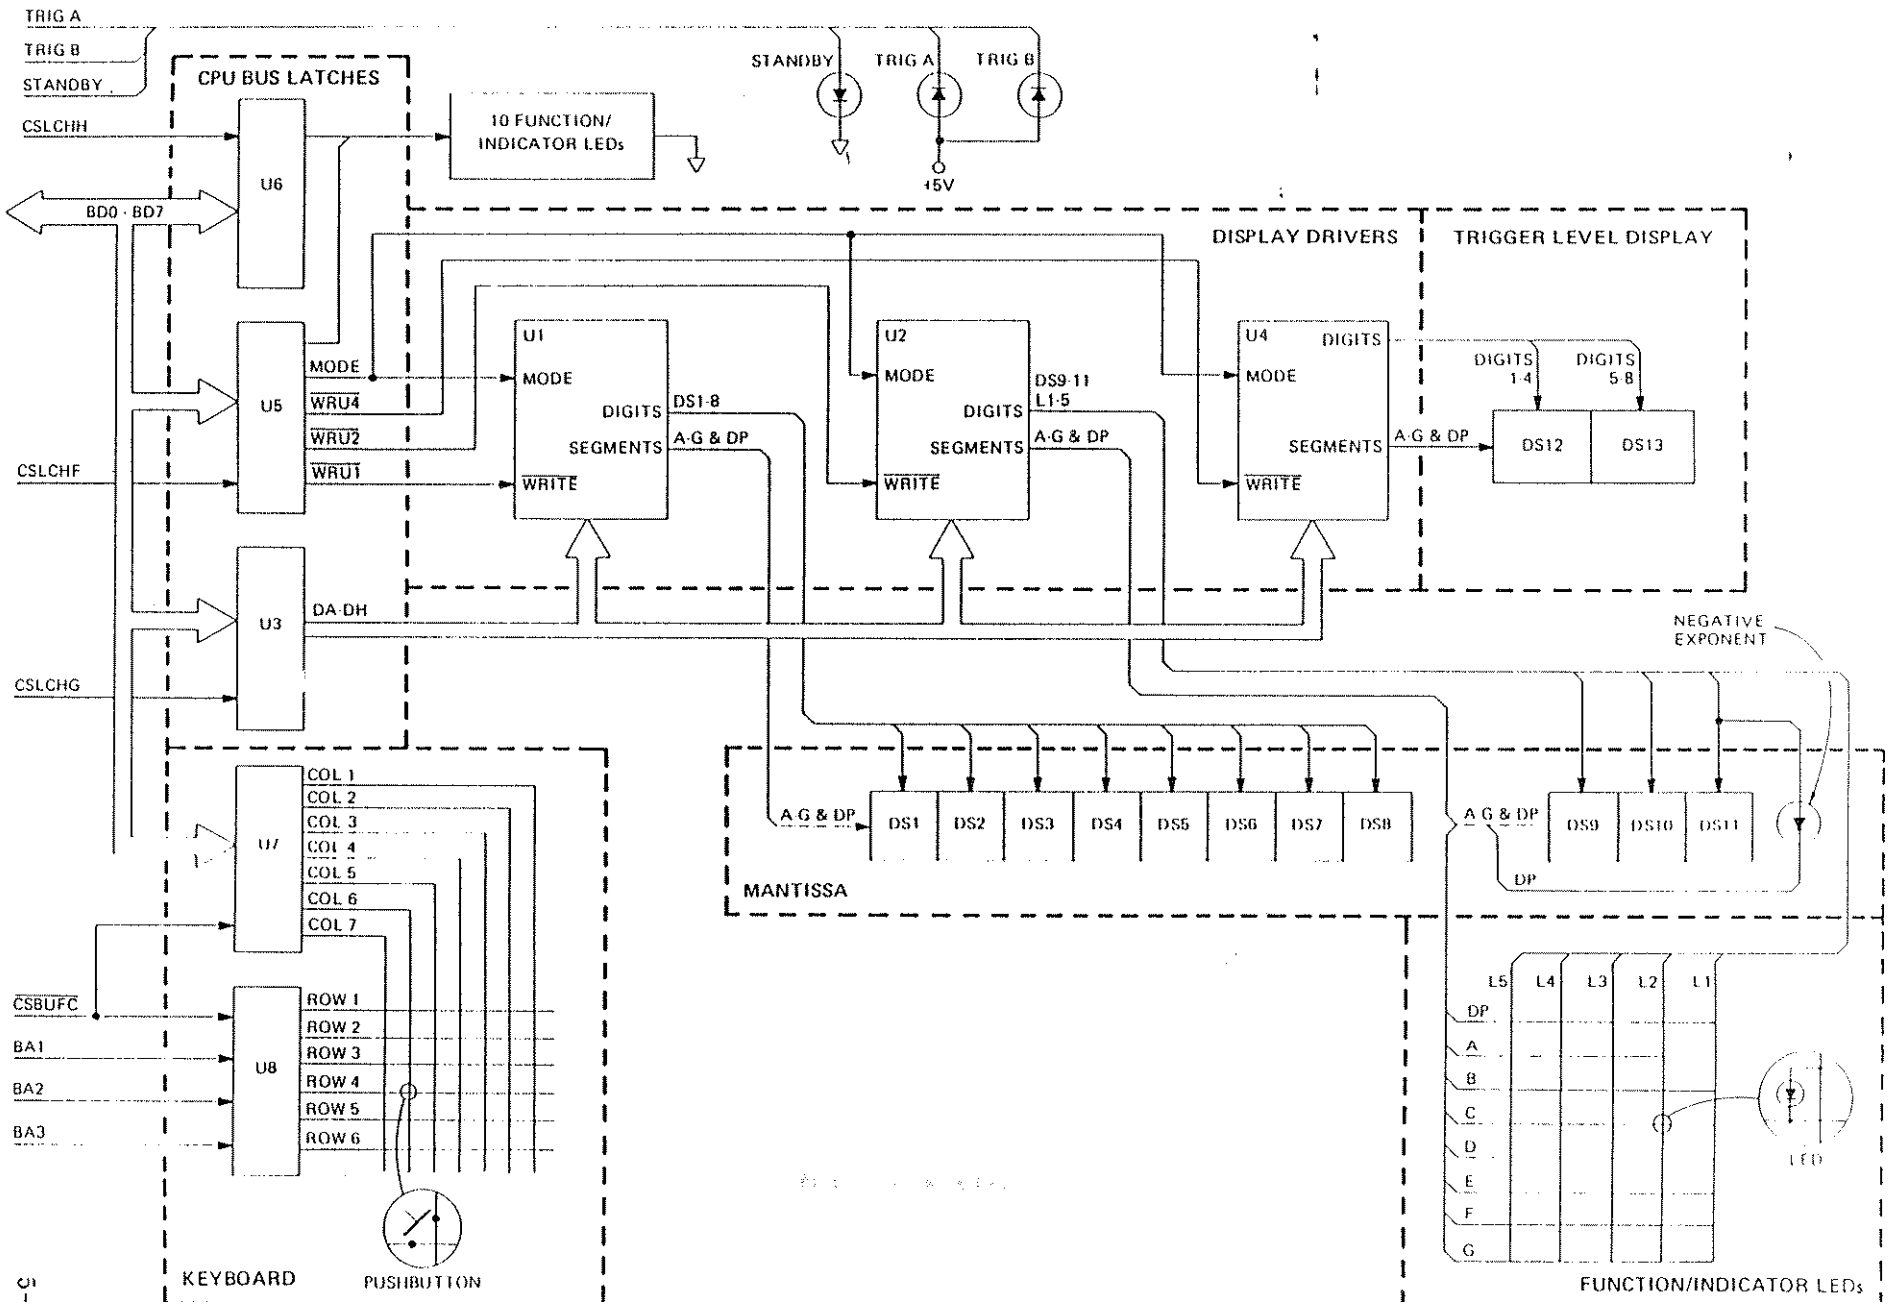

## 5.3.6 Microprocessor Block

### 5.3.6.1 Functional Description

5.3.6.1.1 Refer to Figure 5.1. The overall operation of the 1995/1996 is controlled by the microprocessor which resides in the computer section on the motherboard. The microprocessor itself is a Motorola 68000 device. It receives instructions from the keyboard or the GPIB, then sends instructions to and receives data from other functional blocks within the counter.

5.3.6.1.2 The microprocessor continuously scans the counter's keyboard for any change and then updates the front-panel display annunciators and key indicators.

5.3.6.1.3 The microprocessor block contains eight major divisions. Refer to Figure 5.13. These divisions include the following:

a. Upper and lower RAM (U7 and U8)

b. Upper and lower ROM (U17 and U18)

c. Non-volatile memory

d. Microprocessor control logic

e. Reset logic

f. Interrupt logic

g. Address and data buffer

h. Input/Output decoders

5.3.6.1.4 The microprocessor interfaces to these eight divisions via a 16-bit data bus and a 24-bit address bus. All input/output functions are effected via an 8-bit data bus and a 4-bit address bus. The address bus interfaces with the measurement block, GPIB block, display block, and hardware control circuitry.

5.3.6.1.5 The microprocessor has 16k bytes of RAM and 128k bytes of ROM available for memory.

### 5.3.6.2 Circuit Description

#### 5.3.6.2.1 Microprocessor Control Circuitry

5.3.6.2.1.1 The clock (hybrid IC) U16 provides an 8 MHz clock to the microprocessor U6. The control circuitry of U6 consists of inverter U5, NAND gate U4, and OR gates U24 and U25. These devices develop all the control signals listed in Table 5.1 for the microprocessor, permitting it to interface with peripheral devices within and without the kernel.

5.3.6.2.2 Reset Circuitry

5.3.6.2.2.1 The reset circuitry consists of the power-down and power-up circuits. The power-down circuit brings the output of U1C (RESET) low when U1C-11 reaches approximately 4.7 volts. This prevents the microprocessor from accidentally writing to non-volatile memory. The power-up circuit holds the output of U1B ($\overline{\text{RESET}}$) low until U1C-11's voltage is greater than 1.2 volts. Q1 is the turnoff which permits C2 to begin charging. When C2 reaches a charge that is greater than 1.2 volts, the output of U1B will go high, enabling the microprocessor and other peripherals to return from their reset state.

5.3.6.2.3 ROM

5.3.6.2.3.1 U17 and U18 are EPROMs containing the resident operating-system. This information is accessed by the microprocessor through a 16-bit data bus and a 24-bit address bus. However, only 14 of the 24 address lines are used (A1 through A15). The microprocessor divides the data bus into upper and lower data lines. U17 is connected to the upper 8 bits (D8 through D15), while U18 is connected to the lower 8 bits (D0 through D7). To enable a data output (read) cycle, both $\overline{\text{UDE}}$, $\overline{\text{LDE}}$ and address line A17 are pulled low. Instruction bytes are then put onto the data bus.

5.3.6.2.4 RAM

5.3.6.2.4.1 U7 and U8 are static RAM devices that provide 8k x 16 bits of temporary storage. This information is also accessed by the microprocessor through a 16-bit data bus and a 24-bit address bus. However, only 12 of the 24 address lines are used (A1 through A13). U7 is connected to the upper 8 bits (D8 through D15), while U8 is connected to the lower 8 bits (D0 through D7). To enable a data input (write) cycle, the $\overline{\text{RAMENA}}$, $\overline{\text{LWE}}$ and $\overline{\text{UDE}}$ lines are pulled low. To enable a data output (read) cycle, the $\overline{\text{LWE}}$ line remains high, while the $\overline{\text{RAMENA}}$ and $\overline{\text{UDE}}$ lines are pulled low.

5.3.6.2.5 Non-Volatile Memory

5.3.6.2.5.1 U2 provides 2k x 8 bytes of non-volatile memory storage for calibration constants and machine setups. U2 is connected to the lower half of the data bus (D0 through D7) and A1 through A11 of the address bus. To enable a data input (write) cycle, chip select line $\overline{\text{CSNONVOL}}$, $\overline{\text{LDE}}$ and the output of U3A are pulled low. To enable a data output (read) cycle, the output of U3A remains high while the $\overline{\text{CSNONVOL}}$ and $\overline{\text{LDE}}$ lines are pulled low. This read/write cycle of non-vol memory involves only the lower 1k of U2's memory. The write cycle of the microprocessor is unable to access the upper 1k of U2's memory because U3A, U3B and the calibration switch on the front panel inhibit this write cycle. This ensures protection to the calibration constants which are stored in the upper half of U2's address space.

5.3.6.2.6 Input/Output Decoder Circuit

5.3.6.2.6.1 The input/output decoders consist of the three 3-to-8 multiplexers U9, U15 and U22. These three chips provide the chip select lines and clock signal for the peripheral devices. Refer to Table 5.1 for a definition of the chip select clock names.

5.3.6.2.7 Interrupt Circuit

5.3.6.2.7.1 This circuit consists of one chip, U12, which is an 8-to-3 line priority encoder. This IC handles the interrupt lines from the measurement block ($\overline{\text{MCCIRQ}}$), GPIB block, timer and gating block ($\overline{\text{RTIRQ}}$), and optional interrupts ($\overline{\text{OPTIRQ}}$). These interrupt lines are prioritized, then a 3-line code is sent to the microprocessor.

5.3.6.2.8 Address and Data Buffer

5.3.6.2.8.1 U26 is a bidirectional buffer that buffers data lines D0 through D7 from the microprocessor to the measurement block, display block, GPIB block, and hardware control circuitry. This buffer chip is only enabled when reading and writing from peripheral devices outside the kernel. U27 buffers address lines A1 through A4.

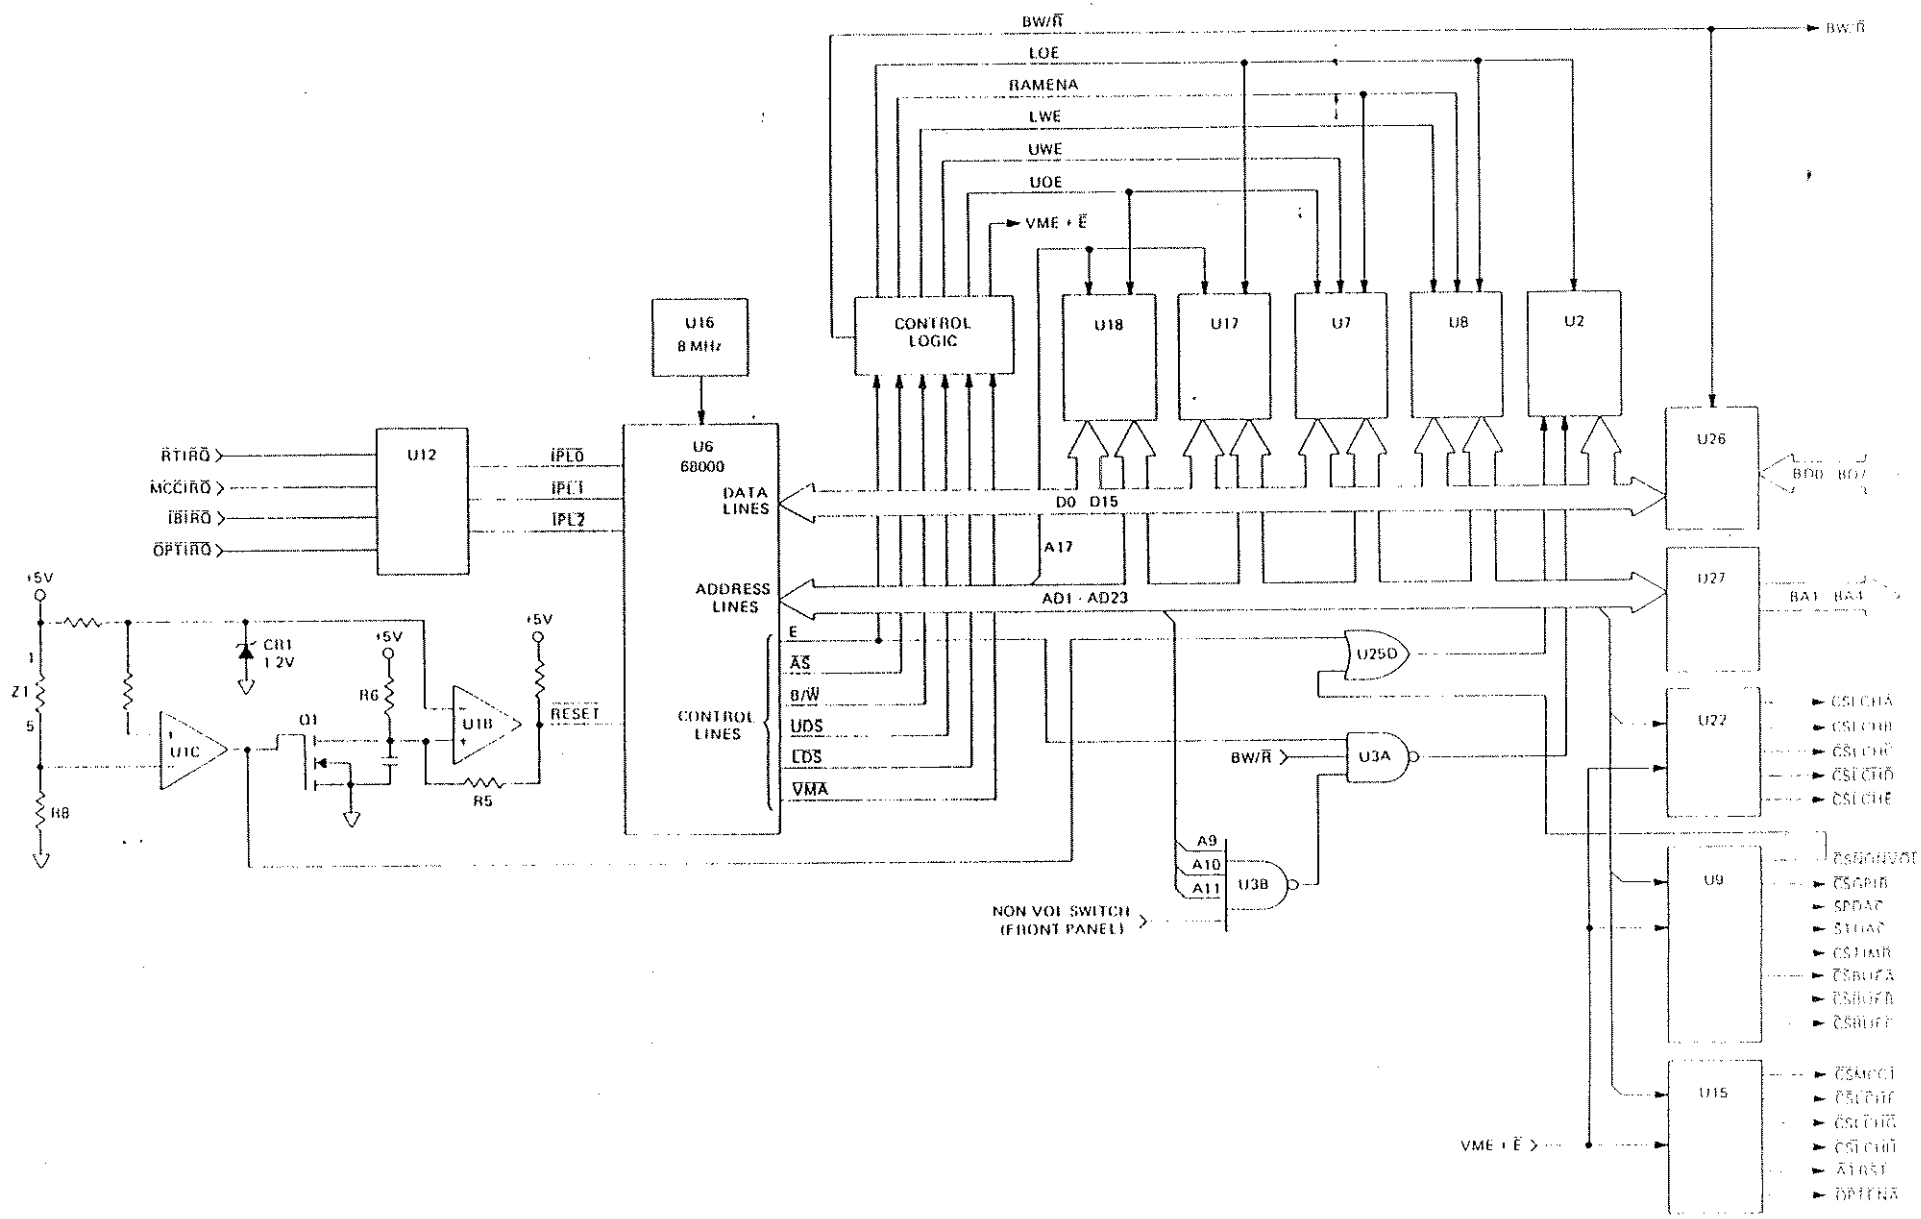



Figure 5.13 - Simplified Schematic for the Microprocessor Block

5.3.7 Power Supply Block

5.3.7.1 The 1995/1996 uses a linear power supply providing the following voltages (±5%) at the indicated current capacities:

a. +5V at 750 mA surge, 350 mA nominal (using ovenized oscillator Option 04E)

b. +5V at 3.2A (TTL)

c. -5.2V at 2.8A (ECL)

d. +15V at 250 mA (Linear)

e. -15V at 100 mA (Linear)

5.3.7.2 -- Line voltage enters the power transformer's primary winding when rear-panel connector S200 is closed. The line voltage selector card is oriented by the user to properly configure the primary winding to match the applied line voltage (see Subsection 2.7.2 in this manual for details).

5.3.7.3 The power transformer is a step-down device with three center-tapped secondary windings. Power transformer output voltages are full-wave, rectified by bridges CR8, CR200, and diodes CR10, CR11, before being capacitor filtered.

5.3.7.4 When switch S1 is closed, the positive and negative 15V supplies come up. The +15V supply enables the +5V TTL supply via Q7. The computer resets and, upon a successful completion of a status check, turns on the -5.2V supply via Q5, Q8 and Q9. When switch S1 is opened, all power supplies shut down except the oven oscillator supply. Q4 turns on and lights the front-panel Standby LED.

5.3.7.5 The +5V TTL and -5.2V ECL power supplies are overvoltage/current protected by thyristors Q10 and Q11. The FANRUN line remains at approximately .7V when the fan is operating. If no current flows through the fan, U1-2 goes low forcing BD5 low when U13 is addressed by the computer. The computer then turns off the -5.2V supply, thereby reducing internal heat dissipation to a safe level.

**5.3.8 External Arming/Gating Block**

**5.3.8.1 Funtional Description**

5.3.8.1.1 The 1995/1996 provides special circuitry permitting control of the measurement gate start and stop time by external means. Measurement gate control in normal operation is a function of the selected measurement mode and input channel(s). External arming and gating is provided by channels A, B, and rear-input D. Thus, a variety of arming and gating signals can be used.

5.3.8.1.2 When in one of the external arming/gating modes, the microprocessor illuminates the EXT LED on the front panel, indicating that the counter is set up for receiving an external arming/gating signal via channel A, B or D.

5.3.8.1.3 The external gating signal defines the beginning (Start) and end (Stop) of the measurement. In using the external gating signal, one of four slope combinations can be selected: positive-to-positive, positive-to-negative, negative-to-negative, and negative-to-positive.

5.3.8.1.4 The external arming signal defines the beginning (Start) of the measurement; the end (Stop) is defined by the internal gate-time setting. Positive and negative slope selections are possible in the external arming mode.

5.3.8.1.5 In addition, the synchronous window auto-trigger (SWAT) mode may be selected. SWAT, which uses the external arming/gating circuitry, permits the auto-trigger to function only within a specified window. For example, the window can be set between possible ringing on both the rising and falling edges of the input measurement signal. Measurements are then taken only during this window, resulting in much more accurate readings. The only difference between the external gating mode and SWAT is that the gate signal is sent to the auto-trigger circuitry between measurements when in the SWAT mode.

### 5.3.8.2 Circuit Description

5.3.8.2.1 Refer to Figure 5.14. The arming and gating controls are set up via two latches, U29 and U31. U29 controls several control signal lines for the arming and gating circuitry which are SELSP, SELCHD, ARMSYNC, and SELARM. SELSP and SELCHD control the selection of channel A, B or D as the external arming or gating signal. SELARM enables the arming or gating signal to pass on to the auto-trigger circuitry or the measurement circuitry. ARMSYNC synchronizes the external arming or gating signal with the measurement circuitry. U31, ARMSTSL, and ARMSPSL controls the arming or gating slopes of the selected signal (Channel A, B, or D).

5.3.8.2.2 U40A serves as a 2-to-1 line signal selector/multiplier. It selects either the TTLSTOP (channel A/B input) or CHANLD (channel D input) signal. The TTLSTOP signal is selected to appear at the output of U40A when control signal SELSP is high and SELCHD is low from U29. The CHANLD signal is selected when the SELSP is low and SELCHD is high. Selected signal TTLSTOP or CHANLD is then passed from the input of U40A to the input of U32A and U32B for slope selection.

5.3.8.2.3 U32A and B is an exclusive-or gate with U32A selecting the start slope and U32B selecting the stop slope of the arming or gating signal. A logic high on the ARMSTSL or ARMSPSL line selects the positive slope for clocking U43A and B. A logic low on ARMSTSL or ARMSPSL selects the negative slope. With a selected arming mode, only the ARMSTSL is used to initialize a measurement.

5.3.8.2.4 U43A and B is a D-type, positive-edge trigger flip-flop. U43A's flip-flop circuit controls the rising edge of the ARM signal and U43B's flip-flop circuit controls the falling edge. With an arming mode, only the rising edge of the ARM signal is processed by the measurement block to start a given measurement. With a gating mode, both the rising and the falling edge of the ARM signal is processed by the measurement block to both start and stop a measurement.

5.3.8.2.5 When the microprocessor brings the ARMSYNC signal high, U43A's Clear (CLR) line is released. With the CLR line high, the output of U32A (ARMSTART) clocks U43A's input, forcing U43A's Q output high and $\bar{Q}$ output low. This low is passed to U37A-10, with U37A-9 low; the output of U37A will go from a high to a low. This low from U37A-8 is passed to U39-1 if U42B-4's SELARM is enabled (high). U39A inverts the $\overline{ARM}$ signal to ARM and passes it to the measurement block. The rising edge of the ARM signal arms U6 to start a measurement.

5.3.8.2.6 U43B is held disabled by U43A's Q output until U43A's ARMSTART signal clocks Q high. Once U43B is enabled, U43A's Q output is passed to U43B's D input. When the clock edge of the ARMSTOP signal clocks U43B, U43B's Q output will go high and the $\bar{Q}$ output will go low. The Q output of U43B is then passed through U37A and U42B to the input of U39A. U39A inverts the high to a low and passes it to the measurement block causing the falling edge of the ARM signal to stop the measurement. U43B's Q output is fed back to U43A's Clear input resetting Q and $\bar{Q}$ and disabling U43B.

5.3.8.2.7 At the end of the measurement, the microprocessor brings the ARMSYNC line low. This disables the arm and gate circuitry until the microprocessor brings the ARMSYNC line high again to start a new measurement.

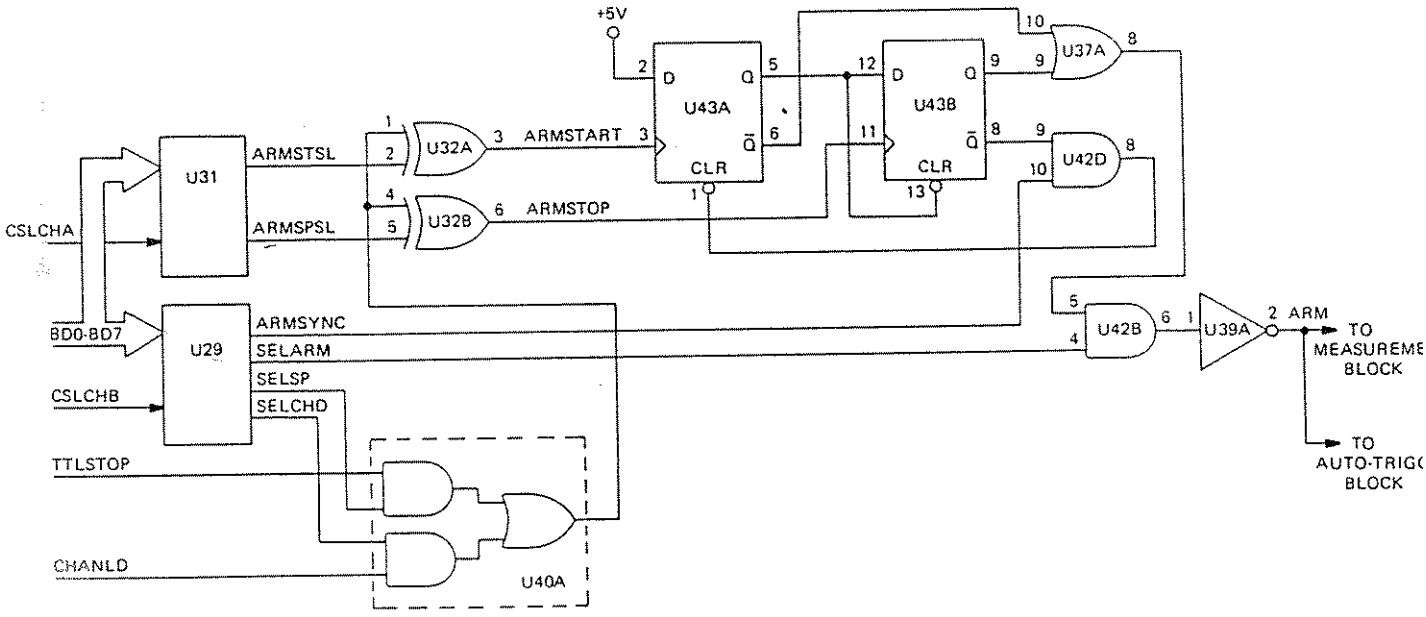



**Figure 5.14 - Simplified Diagram for the External Arming/Gating Block**

## 5.3.9 Internal Gate Timer Block

### 5.3.9.1 Functional Description

5.3.9.1.1 Refer to Figure 5.15. The gate timer controls two functions: (1) real-time interrupts and (2) gate time. U28 is a programmable interval timer that has three independent 16-bit counters. One is used for real-time interrupts, and the other two are cascaded together as the gate timer.

5.3.9.1.2 The timer for real-time interrupts is programmed to interrupt the microprocessor every ten milliseconds. Programming for this counter is effected at power-up and is not changed.

5.3.9.1.3 The gate time is changed whenever the function, resolution, or a new gate time is programmed by the user. 1995/1996 gate times can be programmed as short as 200 nanoseconds or one cycle of the measurement signal to 100 seconds.

5.3.9.1.4 The gate timer block controls the end of a measurement. Depending on the counter's chosen measurement function, the counter will select the gate-ending signal which is either created by the timer chip U28 or the MCC1 chip in the measurement block.

### 5.3.9.2 Circuit Description

5.3.9.2.1 Refer to Figure 5.15. The end of a measurement can be controlled by either the SPOUT or $\overline{\text{GATE END}}$ signals. SPOUT is generated by the MCC2 (U11) of the measurement block and is connected to U41-2. $\overline{\text{GATE END}}$ is generated by the Intel timer chip U28 and is connected to U41-1. U41 functions as a 2-to-1 selector/multiplexer. The control signal MCC/$\overline{\text{GEND}}$ from U29-15 controls the selection of the SPOUT or $\overline{\text{GATE END}}$ signals for application to the measurement block. When $\overline{\text{MCC}}$/GEND is high, the $\overline{\text{GATE END}}$ control signal is passed through U41 and inverted by U39C. This output is called the SPMUX signal. When $\overline{\text{MCC}}$/GEND is low, SPOUT will be present at the output of U39C.

5.3.9.2.2 U38B is a D-type flip-flop which controls U28's counters 1 and 2 and their reset and counting function. U38A controls the $\overline{\text{GEND}}$ signal clock via the OUT1 or 2 signal of U28. At the end of each measurement, the $\overline{\text{MLRST}}$ line is brought low, resetting the two internal counters of U28. When the $\overline{\text{MLRST}}$ line goes high, the GATE signal will follow, clocking a high to U38B's Q output allowing U28's two internal counters to begin counting. Once the U38 counter has timed out, the selected OUT signal (1 or 2) will then clock the $\overline{\text{GEND}}$ line high at U38A's Q output.

5.3.9.2.3 Chip U28 is connected to the buffered data bus (BD0-BD7) from U26 of the CPU block. U28 uses two buffered address lines BA1 and BA2 from U27 of the CPU block to address the internal counter and control register. When the gate time is being programmed, the timer chip U28 will receive two to four bytes of data from the microprocessor, depending on the gate time being programmed. Each time a data byte is written into the timer chip, the CSTIMR line is brought low, BA1 and BA2 lines select the internal register, data is placed on the buffered data bus, and the $\overline{\text{PWE}}$ signal clocks the data into the U28 register.

5.3.9.2.4 U28's three counters (0, 1 and 2) have independent clock inputs. Counter 0's clock input (CLK0) is connected to the microprocessor's E clock which runs at 800 kHz. Counter 1's clock input (CLK1) is connected to the 10 MHz reference signal. Counter 2's clock input (CLK2) is connected to the counter 1's OUT1 signal.

5.3.9.2.5 When a new gate time is programmed into U28, the OUT1 and OUT2 signals of U28 are now selected by the microprocessor through U29's LTMS control signal. LTMS is connected to U40B for selecting either U28's OUT1 or OUT2 signal for U38A's clock input. U40B also inverts the OUT1 and OUT2 signal to give U38A a rising edge when U28's signal (OUT1 or OUT2) times out. This inversion is effected because U38 is a positive-edge triggered device and the OUT1 and 2 signals are high-to-low transitions when the programmed gate time has expired.

5.3.9.2.6 LTMS control lines select OUT1 or OUT2 from U28 to pass through U40B to the clock input of U38B. The LTMS control line is set high for programmed times less than 1 millisecond and low for 1 millisecond or greater times. The selected OUT signal passes through U40B to U38A's clock input when the gate counters of U28 time out. This rising edge to U38's clock input clocks the D input to Q output, forcing GEND high. This signals the end of a measurement.

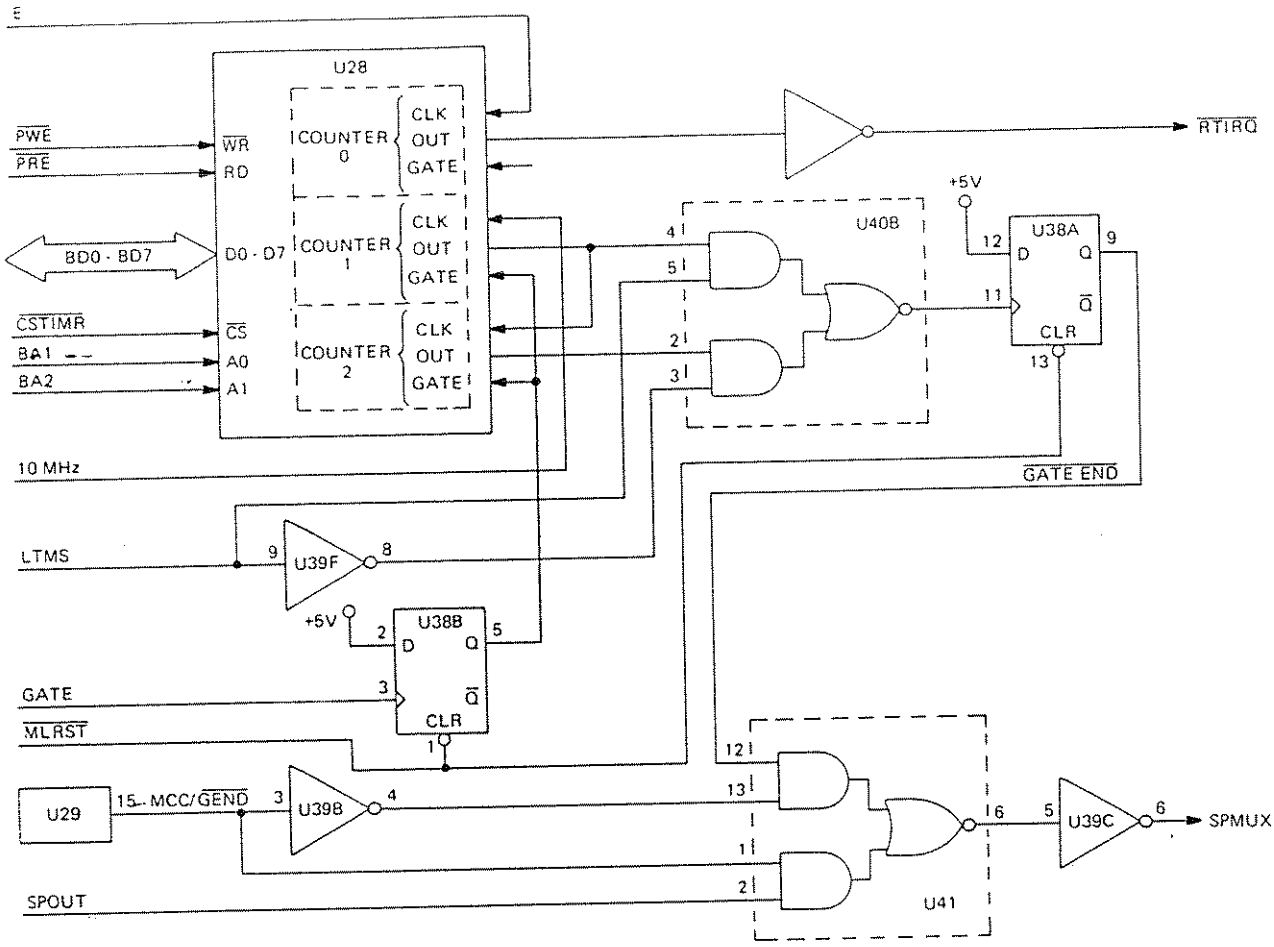



**Figure 5.15 - Simplified Schematic for the Internal Gate Timer**

## 5.3.10 External Reference Multiplier Block

### 5.3.10.1 Functional Description

5.3.10.1.1 Refer to Figure 5.16 which shows a block diagram of the external reference multiplier. The input to the circuit is taken from the REF-IN connector on the instrument's rear panel, via a signal conditioning circuit.

5.3.10.1.2 The circuit contains a 10 MHz oscillator operating in a phase-locked loop. If an external reference signal of suitable amplitude is present at the REF-IN connector, the reference frequency is fed to the external reference detector. The detector output then alerts the CPU through the EXTDET signal that there is an external signal present. The VCO oscillator is then enabled and the INT/EXT logic connects the 10 MHz from the buffer and splitter to the output.

5.3.10.1.3 The pulse generator output is fed to the phase detector, and forms the reference signal for the phase-locked loop. The phase detector is of the sampling type, allowing the oscillator to be phase-locked to a reference signal of 10 MHz or any submultiple of 10 MHz.

5.3.10.1.4- If no external reference signal of suitable amplitude is present at the REF-IN connector, the reference detector output does not trigger the switching signal generator. The oscillator is disabled and the INT/EXT logic connects the internal reference to the measurement logic.

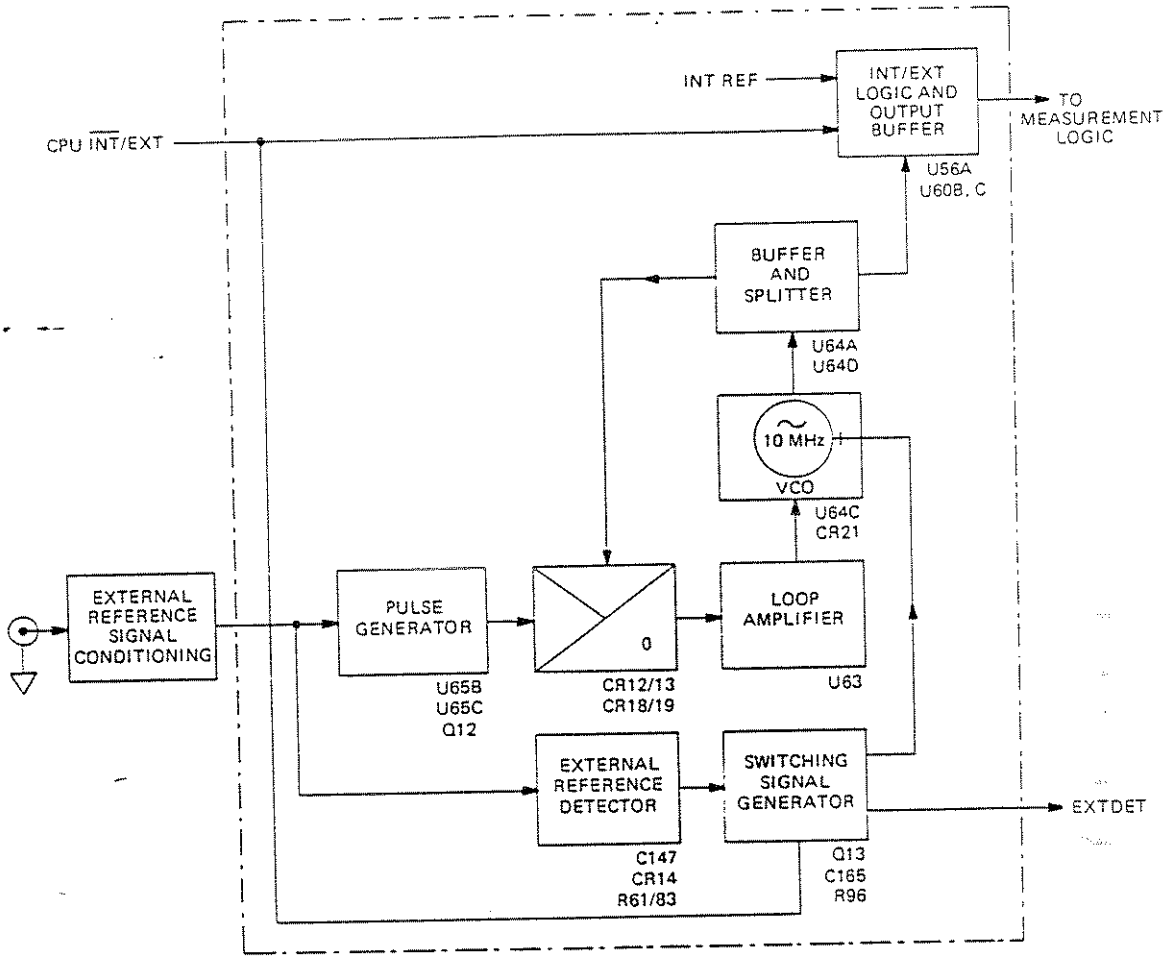



**Figure 5.16 - Simplified Diagram for the External Frequency Multiplier Block**

## 5.3.10.2 Circuit Description

### 5.3.10.2.1 Input Circuit and Pulse Generator

5.3.10.2.1.1 Two antiphase waveforms derived from the external reference signal enter the system at J208 connector. The waveform from J208 is converted to TTL levels by U66 and squared in U65D before being applied to the pulse generator, U65B and U65C. The operation of this circuit is shown in Figure 5.17.

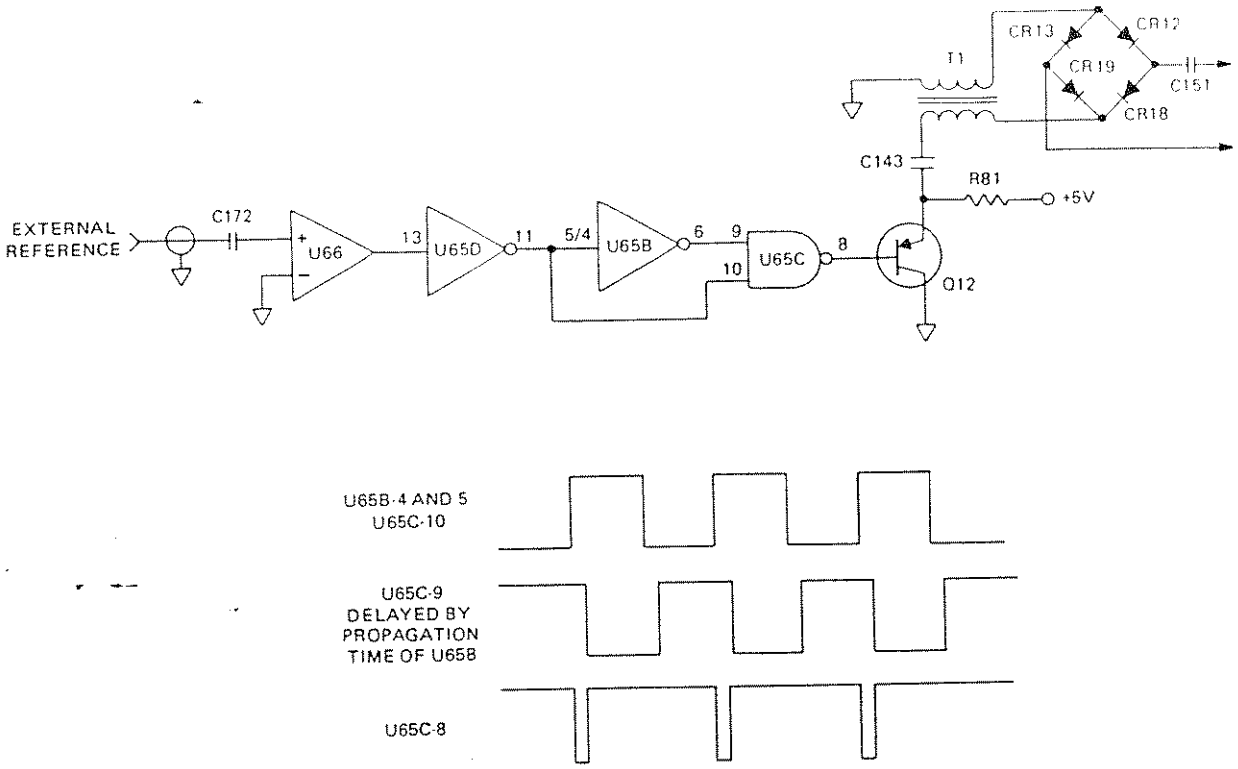



**Figure 5.17 - Input Circuit and Pulse Generator**

5.3.10.2.1.2 The negative-going pulses at U65-C are used to switch Q12 which drives the transmission-line type transformer T1. The transformer acts as a phase splitter. Thus, for the duration of each pulse from U65C-8, the sampling bridge of the phase detector is held forward-biased, with the CR12/CR13 and CR18/19 junctions symmetrical around 0V.

5.3.10.2.2 Phase-Locked Loop

5.3.10.2.2.1 Refer to Figure 5.17 and 5.18. The loop oscillator's active element is U65C. The oscillator frequency is controlled by the crystal Y1 and the varactor diode CR21. The trimming capacitor C142 can be adjusted to compensate for a range of crystal and varactor tolerances.

5.3.10.2.2.2 The oscillator output drives a unity-gain cascade buffer, U64A/D. The buffered signal from the collector of U64A forms the RF input to the phase detector.

5.3.10.2.2.3 When the sampling bridge of the phase detector is forward-biased by the pulses from T1, the CR18/CR19 junction adopts the same potential as the CR12/CR13 junction. At other times, the junctions are isolated from each other by the high impedance of the non-conducting diodes. The bridge output is therefore a series of samples of the loop oscillator waveform, taken at the frequency of the external frequency standard.

5.3.10.2.2.4 The phase detector output depends upon the relative frequency of the loop oscillator and the frequency standard, and upon the phase of the loop oscillator waveform at the instant of sampling. If the standard frequency is 10 MHz, every cycle of the loop oscillator output is sampled, but if it is a submultiple of 10 MHz, only every second, fourth, fifth, or tenth cycle will be sampled. In all cases, however, provided the standard frequency is an exact submultiple of the loop oscillator frequency, the samples will be of constant amplitude. If the standard frequency is not an exact submultiple of the loop oscillator frequency, the output pulses will be amplitude modulated.

5.3.10.2.2.5 The amplitude of each phase detector output pulse depends upon the instantaneous value of the loop oscillator waveform at the instant of sampling. The pulses are integrated in C144 to form the input to the loop amplifier U63. When the loop is in-lock, the voltage across C144 maintains the voltage at U63-6, and therefore across the varactor, at the level needed to maintain the loop oscillator at the lock frequency.

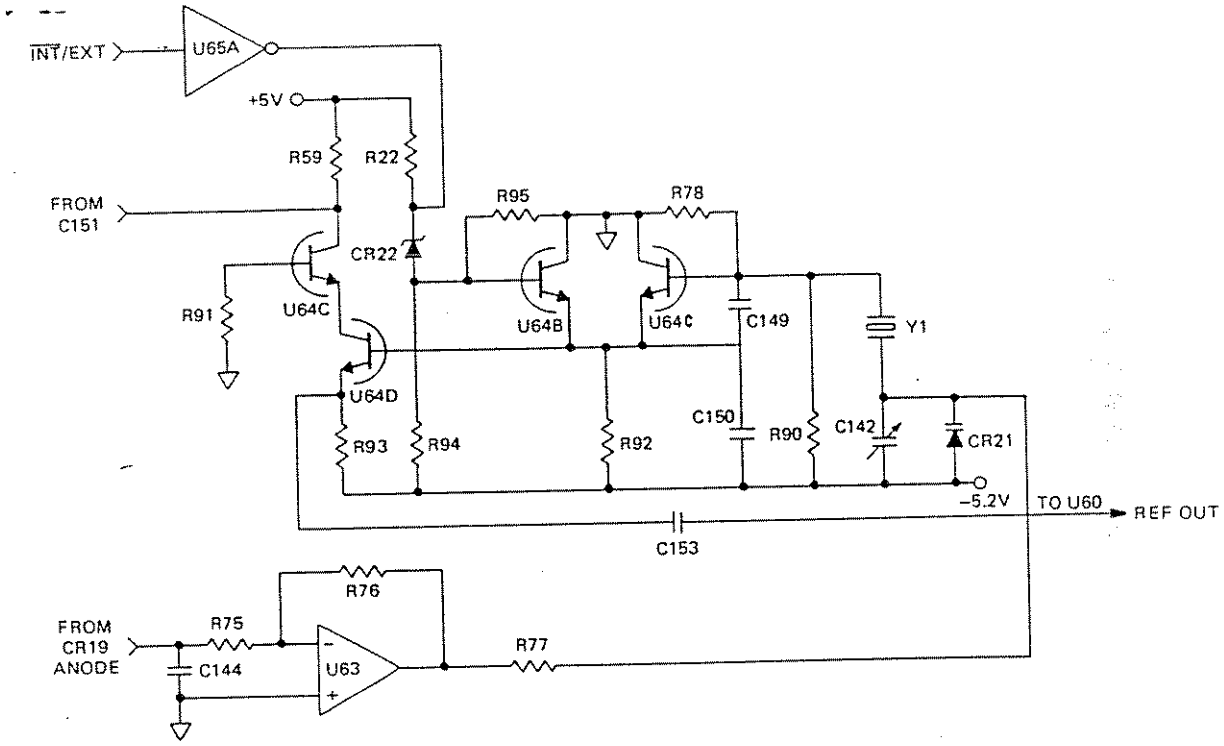



**Figure 5.18 - Phase-Locked-Loop Controlled Oscillator**

5.3.10.2.3 External Reference Detector and INT/EXT Switching

5.3.10.2.3.1 The output from U65D-11 is fed to a detector formed by C147, CR14, and R61/83. Refer to Figure 5.19. If no external reference signal is present at the REF-IN connector, U66-7 will go high and U65D-11 is at a logic 0. The detector output, and therefore the base of Q13, is at +5V and Q13 is switched off. A logic 0 level is applied to U30-2. When the CPU sees the EXTDET signal low at U30-2, it will, in turn, set U31-6 low (INT/EXT). This is applied to U65A-1, 2 giving a logic 1 at U65A-3. See Figure 5.18.

5.3.10.2.3.2 The zener diode CR22 converts the logic levels from TTL to the level required to switch on U64B. With U64B switched on, the voltage across R92 holds the emitter of U64C positive with respect to its base, disabling the oscillator. With the INT/EXT low at U56A-7, this will deselect the external reference by placing an ECL high at U60B-5 and force any ECL at U60C-10 low. This will now select the internal reference from U60C-14 for the measurement logic. This disables U60B and enables U60C.

5.3.10.2.3.3 When an external reference signal is present at the J208 connector, the output from U65D-11 is a TTL square wave at the external reference frequency. The detector output holds the base of Q13 negative, so that Q13 conducts. Q13's collector is at a logic 1 and its voltage (EXTDET) high. The CPU will detect this and set the INT/EXT signal high. Under these conditions, U64B is cut off and the loop oscillator is enabled.

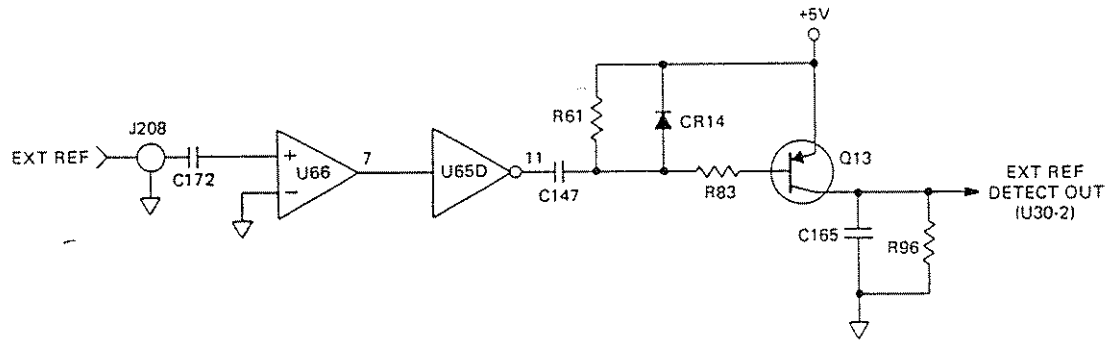



**Figure 5.19 - External Reference Detector**

## 5.3.11 Channel D Block

5.3.11.1 Refer to Figure 5.20. Channel D conditioning circuitry provides input signal limiting/buffering with threshold selection of 0V or 1.25V for AC or TTL channel D input compatibility. Resistors R63 and R99 form a 4:5 DC divider with C163 allowing fast edges to pass through to U62. CR24 and CR25 act as clamps, limiting signal swing from -2.5V to +2.3V.

5.3.11.2 The signal then is fed to voltage comparator U62. The output of U62 will change states when the input crosses the reference voltage on pin 3 of U62. The reference voltage can assume one of two possible levels, 0V or 1.25V. When a TTL logic 0 is applied to the base of Q16, Q16 turns on.

5.3.11.3 Resistors R67 and R100 form a 1:4 voltage divider. The voltage divider then applies a 1.25V reference signal to U62 via resistor R101. When a logic 1 is applied to Q16, Q16 turns off. The reference voltage becomes 0V. Resistor R102 provides positive feedback creating a small amount of hysteresis.

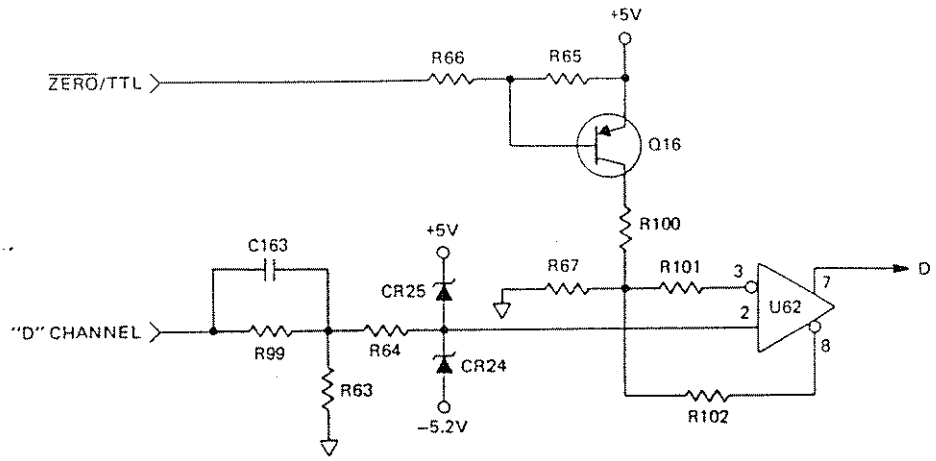



**Figure 5.20 - Simplified Block Diagram for Channel D**

## 5.3.12 GPIB Block

### 5.3.12.1 Functional Description

5.3.12.1.1 Refer to Figure 5.21. The GPIB block for the 1995/1996 consists of only three chips. These include the general interface bus controller (Texas Instruments TMS9914A) and two bus transceivers (75160 and 75161). These provide the necessary interface between the IEEE-bus and the GPIB controller.

5.3.12.1.2 U61 (TMS9914A) is used when it is necessary for an intelligent instrument to communicate with an IEEE-488 General Purpose Interface Bus (GPIB). It performs the interface function between the microprocessor and the bus, relieving the microprocessor of the task of maintaining IEEE protocol. By utilizing the interrupt capabilities of the bus controller U61, the bus does not have to be continually polled, and rapid responses to changes in the interface configuration can be achieved.

5.3.12.1.3 U61 provides an interface between the microprocessor and the GPIB as specified in the IEEE-488 Standard. This device is controlled and configured through 8-bit memory-mapped registers and enables all aspects of the Standard to be implemented, including talker, listener and controller.

5.3.12.1.4 Refer as required to Figure 5.21 which provides a block diagram showing the interfacing of the microprocessor and the GPIB block.

### 5.3.12.2 Circuit Description

5.3.12.2.1 The input/output pins (DI01 through DI08) of U61 are connected to the IEEE-488 bus via bus transceivers U67 and U68. The direction of data flow is controlled by the TE and $\overline{\text{CONT}}$ output signals generated by U61.

5.3.12.2.2 Communication between the microprocessor and U61 is performed via memory-mapped registers. There are 13 registers within U61, six of which are read registers and seven are write registers. These registers are used to both pass control data to and get status information from the microprocessor.

5.3.12.2.3 The least significant address (BA1, BA2 and BA3) lines from the address buffer U27 are connected to the register select lines RS0, RS1 and RS2. These latter lines determine the particular register selected. When U61's $\overline{\text{CE}}$ input is pulled low by the $\overline{\text{CSGPIB}}$ control line, any one of the eight consecutive addresses is selected. Reading and writing to these locations transfers information between U61 and the microprocessor.

5.3.12.2.4 U67 is a 20-pin device used to buffer the IEEE-488 data lines (DI01 through DI08) in all applications. The direction of the buffers is controlled by the Talk-Enable (TE) output of U61. This active high signal becomes true whenever U61 is in TACS (addressed to talk) or SPAS (serial polled) mode.

5.3.12.2.5 U68 is a 20-pin device used to buffer the IEEE-488 measurement lines. It may be used for talker or listener status. The direction of the handshake-line buffers NRFD, NDAC and DAV are again controlled by the TE signal from U61. However, the SRQ, ATN, REN and IFC buffers are controlled by the DC input of U68. U68 connects with the Controller Active ($\overline{\text{CONT}}$) output of U61. The $\overline{\text{CONT}}$ output always remains high because U61 is not being used as a controller device. U68 also includes the logic necessary to control the direction of the EOI buffer. This is dependent on the TE signal when ATN is false (high) and on the DC signal when ATN is true (low).

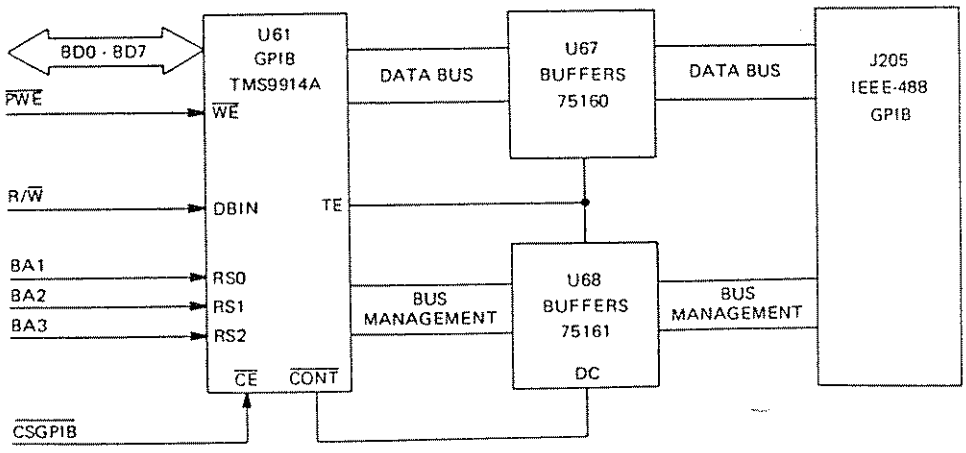



**Figure 5.21 - Simplified Diagram for the GPIB Block**

# SECTION 6 MAINTENANCE

## 6.1 INTRODUCTION

6.1.1 The performance tests in this section are used for (1) receiving inspection/acceptance, (2) periodic determination of the need for recalibration, (3) upon failure of a routine specification check, and (4) after repair of unit. Verify the basic operation of the counter before starting these tests by completing the rapid functional check found in Subsection 2.9.

6.1.2 Satisfactory completion of these performance tests will confirm the 1995/1996's operation by measurement function. Instrument covers need not be removed for any test. Complete the performance tests in the order given.

6.1.3 The following conditions must be maintained during these tests:

a. The counter must be operated from an AC supply

b. The line voltage must be within ± 10% of the indicated value of the line voltage selector

c. The ambient temperature must be $23^{\circ}C \pm 2^{\circ}C$

d. The power supply to the internal frequency standard must remain uninterrupted. (This does not apply if the counter is locked to an external frequency standard.)

6.1.4 Warm up the counter for one hour (switched to standby if necessary) before beginning these tests.

## 6.2 REQUIRED TEST EQUIPMENT

6.2.1 Table 6.1 lists the necessary test equipment for these performance tests. Equipment having operating characteristics equivalent to or better than those listed may be substituted. The procedures described in this section are general in nature and based on the use of the test equipment recommended. Some modification of the procedures may be required if substituted equipment is used.

Table 6.1 - Required Test Equipment

| Item | Minimum Use Specifications | Quantity | Recommended Equipment |
|---|---|---|---|
| 1. Signal Generator | 10 kHz to 1.3 GHz amplitude 5 mV rms to 1V rms into 50 ohms. 1 kHz AF out | 1 | Racal-Dana Model 9087 |
| 2. Audio Generator | 10 Hz to 10 kHz; amplitude of 25 mV rms into 50 ohms | 1 | Racal-Dana Model 845 |
| 3. AC Voltmeter (low frequency) | DC to 10 kHz; .1% resolution, and ± 2.5% accuracy | 1 | Racal-Dana Model 5002 |
| 4. Pulse Generator | 1 Hz to 5 MHz, external lock and trigger capability; ± 2 ns jitter | 1 | Racal-Dana Model 1500 |
| 5. AC Voltmeter (high frequency) | 10 kHz to 2 GHz; .1% resolution,and ± 2.6% accuracy to 500 MHz & ± 5% accuracy to 1.3 GHz | 1 | Racal-Dana Model 9303 |
| 6. BNC T-Connector | 50 Ohms | 1 | — |
| 7. Connector Lead | 50-ohm coaxial cable with BNC connectors, ≈ 4 ft. long | 5 | — |
| 8. Coaxial Load | BNC connector, 50 ohms, 2W BNC ± 1% | 1 | — |
| 9. N-type to BNC adapter/connector | 50 ohm | 1 | — |

## 6.3 PERFORMANCE TEST PROCEDURES

**6.3.1** Power-on/self-test and home state conditions are described in Subsections 3.2.2 and 3.2.3, respectively. Refer to this information as necessary.

**6.3.2** Set up the 1995/1996 and test equipment as shown in the following figures provided for each test procedure. Set the control and inputs as noted in each table and monitor the counter's readout for the indicated values.

Table 5.2 -Self Test

| Applied Frequency | Min. Input Signal Level | Tolerance | Counter Resolution | Special Notes |
|---|---|---|---|---|
| Internal 5 MHz | Internal | | 10 ms gate (default) | |


PROCEDURE

1. Power up the 1995/6.
2. Press the "CHECK" button for 3 seconds until all LEDs light.
3. After the release of "CHECK" button, the unit will be in self-test and the word "test" will appear on the display
4. This test takes a maximum of 75 seconds and any existing error conditions will be displayed momentarily.
5. When the self-test is completed, the unit returns to "CHECK" mode with 5 MHz on the display.

Table 6.3 - Input A Sensitivity Performance Test, I

| Applied Frequency : Performance Standard | Input Signal Level | Tolerance | Counter Resolution | Special Notes |
|---|---|---|---|---|
| 200 MHz<br>100 MHz | 50.0 mV rms<br>25.0 mV rms | ± .2 Hz<br>± .1 Hz | 1-sec gate<br>1-sec gate | Use an AC voltmeter to verify applied input signal level into 50-Ω load before applying to UUT |

**Test Setup**

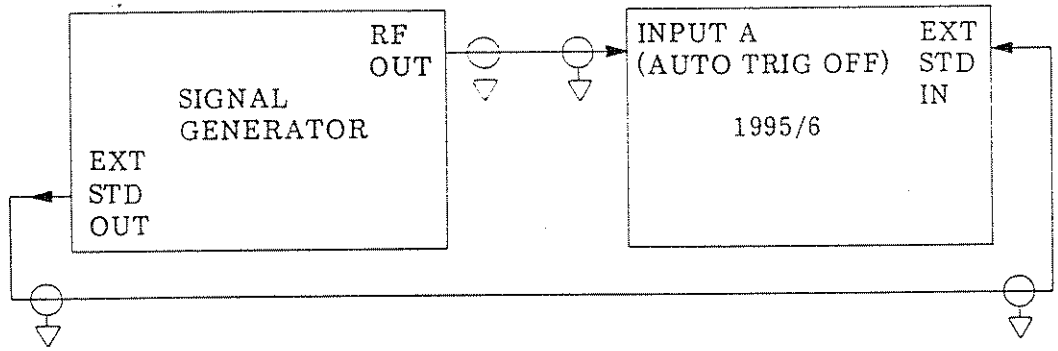


**PROCEDURE**

1. Power up the 1995/6.

2. Set the 1995/6 as follows:
   FREQ A
   Input A 50 ohms input impedance
   Gate time 1 sec
   Disable input A auto trigger
   Set input A trigger level to 0.00V


3. Connect the 1995/6 and signal generator as shown above.

4. Apply the inputs shown in the table above and verify that the measurements taken are within the specified tolerances.

Table 6.4 - Input A Sensitivity Performance Test, II

| Applied Frequency : Performance Standard | Input Signal Level | Tolerance | Counter Resolution | Special Notes |
|---|---|---|---|---|
| 20 Hz | 25 mV rms | ± .1 Hz | 100-ms gate | Use an AC voltmeter to verify applied input signal level into 50-Ω load before applying to UUT |

**Test Setup**

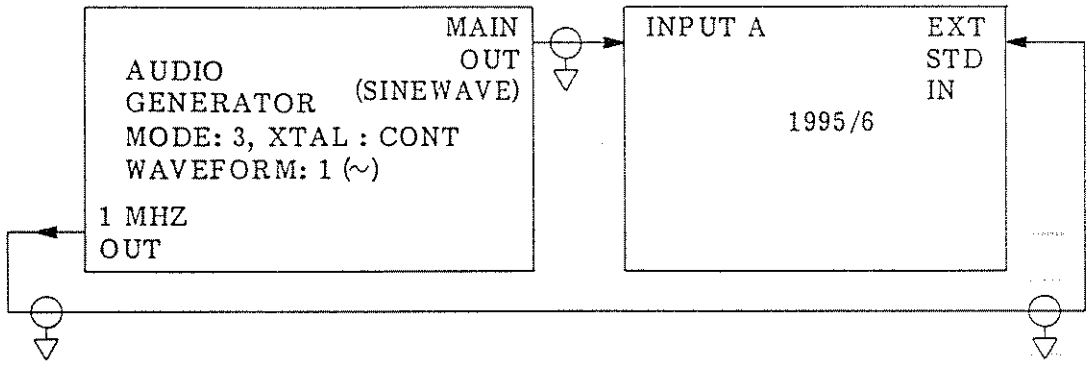


**PROCEDURE**

1. Power up the 1995/6.

2. Set the 1995/6 as follows:
   FREQ A
   Input A 50-ohms input impedance
   Gate time 0.1 sec
   Disable input A auto trigger
   Set input A trigger level to 0.00V


3. Connect the 1995/6 and audio generator as shown above.

4. Apply the inputs shown in the table above and verify that the measurements taken are within the specified tolerances.

Table 6.9 - Time Interval A→B Performance Test

| Applied Frequency : Performance Standard | Required Input Signal | Tolerance | Special Notes |
|---|---|---|---|
| 100 MHz/5 ns<br>1 Hz/1s | 100 mV rms<br>TTL into 50Ω | ± 3 ns<br>± 3 ns | |

**Test Setup**

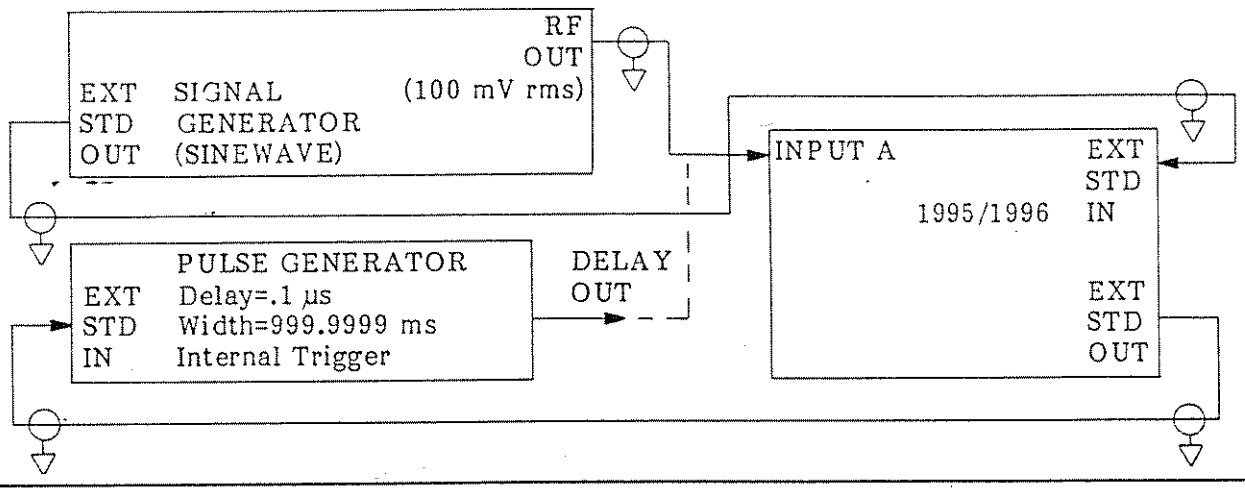


**PROCEDURE**

1. Power up the 1995/6.
2. Set the 1995/6 as follows:
   TI A→B
   Input A 50-ohms input impedance
   Input A DC coupled
   Disable input A auto trigger
   Set input A trigger level to 0.00V
   Enable COM A
3. Connect the 1995/6 and signal generator as shown above.
4. Apply 100 MHz, 100 mV rms to input A of the 1995/6.
5. Verify that the measurement is within the tolerance specified above.
6. Set the 1995/6 to Slope A ⌊, Slope B ⌈.
7. Verify that the measurement is within the tolerance specified above.

Table 6.9 - Time Interval A→B Performance Test (Cont'd)

PROCEDURE

8. Disconnect the signal generator and connect the pulse generator DELAY OUT to input A of the 1995/6. Set the pulse generator to a delay of 0.1 microsec., width 999.9999 msec., INT trigger.

9. Set the 1995/6 inputs A and B trigger levels to 1.30V.

10. Set inputs A and B to Slope $\int$.


11. Set the 1995/6 DELAY to 1 msec and enable the DELAY.

12. Verify that the measurement is within the tolerance specified above.

Table 6.10 - Total A by B Performance Test

| Applied Frequency: A | B | Number of Counts | Tolerance | Special Notes |
|---|---|---|---|---|
| 100 MHz | .9999999 Hz | $99.99999 \times 10^6$ | ± 1 count | |
| 20 kHz | 10 kHz | 1 | ± 1 count | |

Test Setup

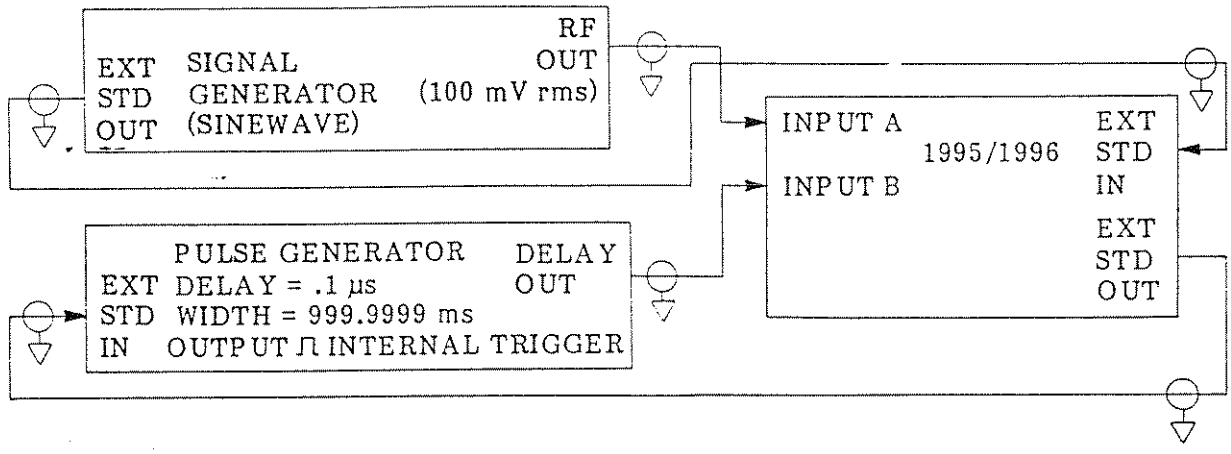



## PROCEDURE

1. Power up the 1995/6.
2. Set the 1995/6 as follows:
   - TOTAL A by B
   - Input A 50 ohms input impedance
   - Input B 50 ohms input impedance
   - Input A DC coupled
   - Input B DC coupled
   - Disable input A auto trigger
   - Set input B attenuation to X1
   - Set input A trigger level to 0.00V
   - Set input B trigger level to 1.30V
   - Select slope ⌠ for input B
3. Connect the 1995/6 to the signal generator and pulse generator as shown above.
4. Set the signal generator to an output of 100 MHz, 100 mV rms.
5. Set the pulse generator to an output of 0.1 microsec. delay and width 999.9999 msec.
6. Verify that the measurement is within the tolerance specified above.
7. Set the signal generator to an output of 20 kHz, 100 mV rms.
8. Set the pulse generator to an output of 50 microsec. delay and width 50 microsec.
9. Verify that the measurement is within the tolerance specified above.

Table 6.11 - Ratio A/B Performance Test

| Applied Frequency: A | B | Performance Standard | Tolerance | Counter Resolution | Special Notes |
|---|---|---|---|---|---|
| 200 MHz | 1 Hz | $200.0000000 \times 10^6$ | ± 1 count | 1-sec gate | |
| 1 Hz | — | 1.000000000 | ± 1 count | | |

**Test Setup**

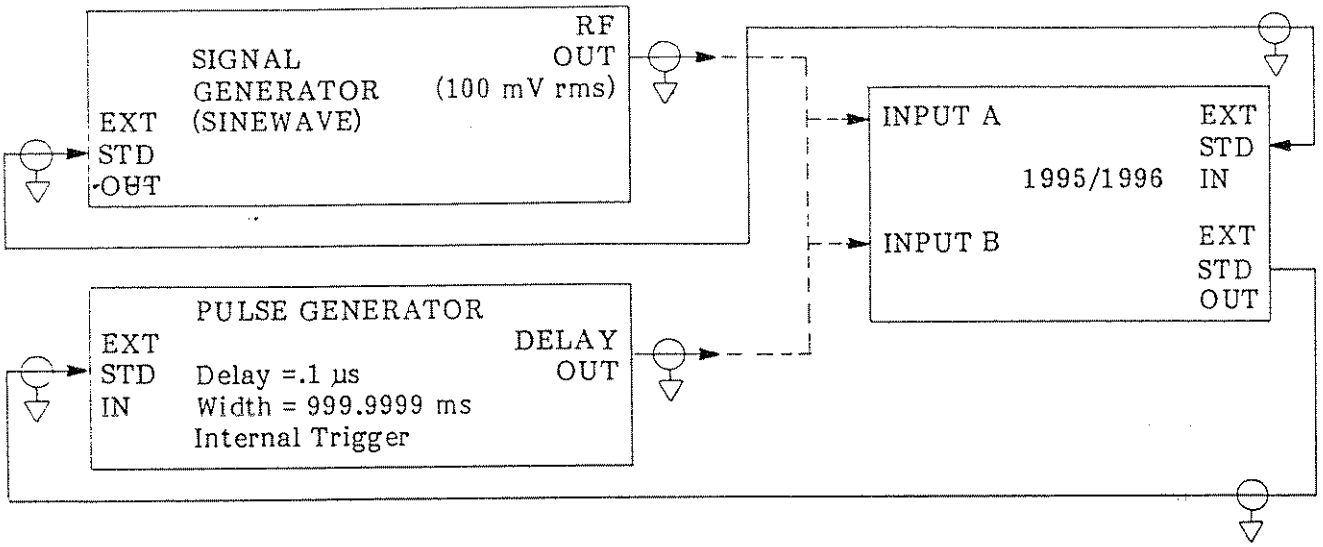


**PROCEDURE**

1. Power up the 1995/6.

2. Set the 1995/6 as follows:
   RATIO A/B
   Input A 50 ohms input impedance
   Input B 50 ohms input impedance
   Input A DC coupled
   Input B DC coupled
   Disable input A auto trigger
   Set input B attenuation to X1
   Set input A trigger level to 0.00V
   Set input B trigger level to 1.30V
   Gate time 1 sec.

3. Connect the 1995/6 to the signal generator and pulse generator as shown above.

4. Set the signal generator to an output of 200 MHz, 100 mV rms.

5. Set the pulse generator to an output of 0.1 microsec. delay and width 999.9999 msec.

6. Verify that the measurement is within the tolerance specified above.

7. Disconnect the signal generator from input A. Transfer the pulse generator output from input B to input A.


8. Enable COM A on the 1995/6 and set input A trigger level to 1.30V.

9. Verify that the measurement is within the tolerance specified above.

Table 6.12 - Ratio C/B Performance Test

| Applied Frequency: C | B | Performance Standard | Tolerance | Counter Resolution | Special Notes |
|---|---|---|---|---|---|
| 1.3 GHz | 1 Hz | $1.30000000 \times 10^9$ | ± 2 count | 1-sec gate | |
| 40 MHz | 1 Hz | $40.0000000 \times 10^6$ | ± 2 count | 1-sec gate | |

**Test Setup**

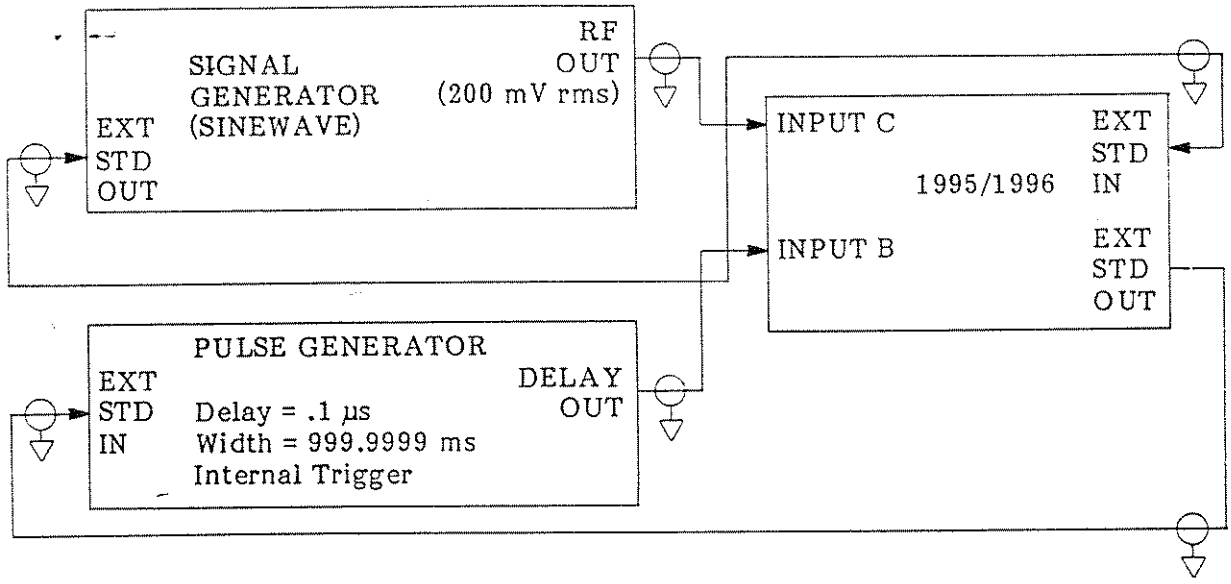


**PROCEDURE**

1. Power up the 1995/6.

2. Set the 1995/6 as follows:
   RATIO C/B
   Input B 50 ohms input impedance
   Input B DC coupled
   Set input B attenuation to X1
   Set input B trigger level to 1.30V
   Gate time 1 sec


3. Connect the 1995/6 to the signal generator and pulse generator as shown above.

4. Apply the inputs shown in the table above and verify that the measurements taken are within the specified tolerances.

Table 6.13 - Rise Time A Performance Test

| Applied Frequency : Performance Standard | Tolerance | Special Notes |
|---|---|---|
| 50 MHz/6.0 ns | ± 3ns | Use an AC voltmeter to verify applied input signal level into 50-Ω load before applying to UUT |


**Test Setup**

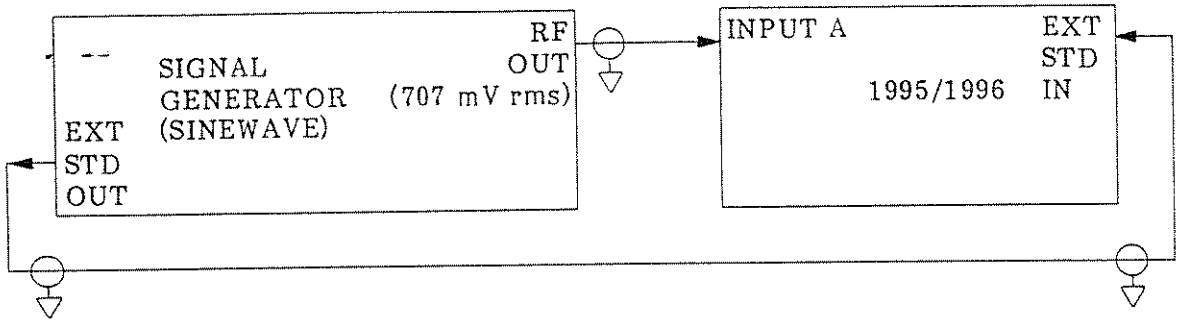


**PROCEDURE**

1. Power up the 1995/6.
2. Set the 1995/6 as follows: RISE A
   Input A 50 ohms input impedance
3. Connect the 1995/6 to the signal generator as shown above.
4. Apply the input shown in the table above and verify that the measurement taken is within the specified tolerance.

**Rise Time A Waveform**

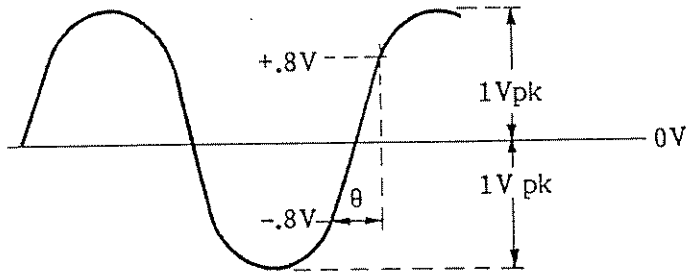



$$\text{Rise Time} = \frac{.3}{50 \times 10^6} = 6 \text{ ns}$$

Table 6.14 - Fall Time A Performance Test

| Applied Frequency : Performance Standard | Tolerance | Special Notes |
|---|---|---|
| 50 MHz/6.0 ns | ± 3 ns | Use an AC voltmeter to verify applied input signal level into 50-Ω load before applying to UUT |


**Test Setup**

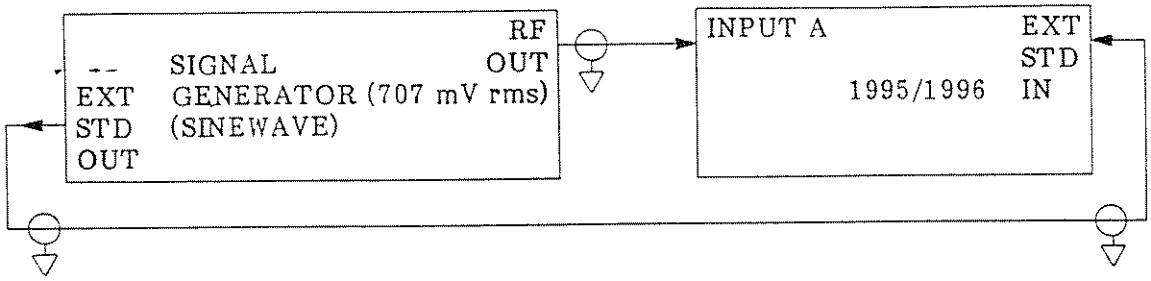


**PROCEDURE**

1. Power up the 1995/6.
2. Set the 1995/6 as follows: FALL A
   Input A 50 ohms input impedance
3. Connect the 1995/6 to the signal generator as shown above.
4. Apply the input shown in the table above and verify that the measurement taken is within the specified tolerance.

**Fall Time A Waveform**

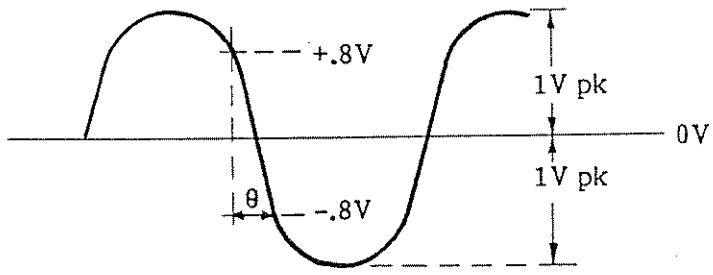



$$\text{Fall Time} = \frac{.3}{50 \times 10^6} = 6.0 \text{ ns}$$

Table 6.15 - Positive Pulse Width Performance Test

| Applied Frequency : Performance Standard | Tolerance | Special Notes |
|---|---|---|
| 100 MHz/5 ns | ± 3 ns | |

**Test Setup**

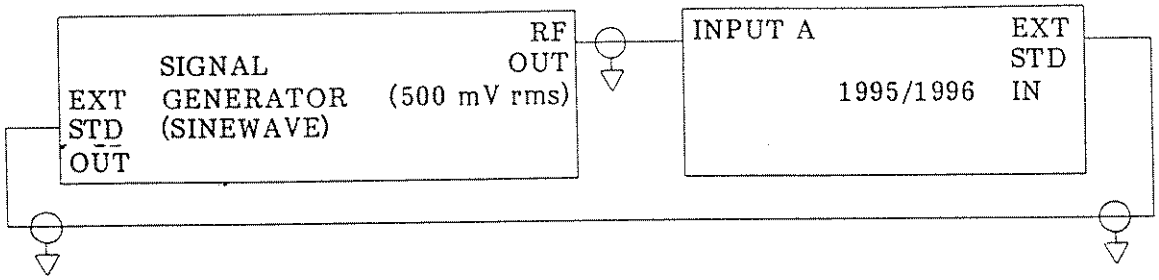


**PROCEDURE**

1. Power up the 1995/6.
2. Set the 1995/6 as follows: POS WIDTH A
   Input A 50 ohms input impedance
3. Connect the 1996 to the signal generator as shown above.
4. Apply the input shown in the table above and verify that the measurement taken is within the specified tolerance.

**Positive Pulse Width Waveform**


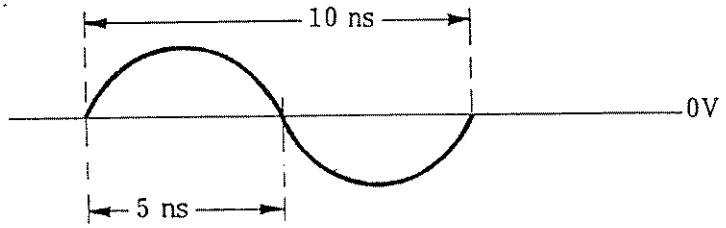


Table 6.16 - Negative Pulse Width Performance Test

| Applied Frequency : Performance Standard | Tolerance | Special Notes |
|---|---|---|
| 100 MHz/5 ns | ± 3 ns | |

**Test Setup**

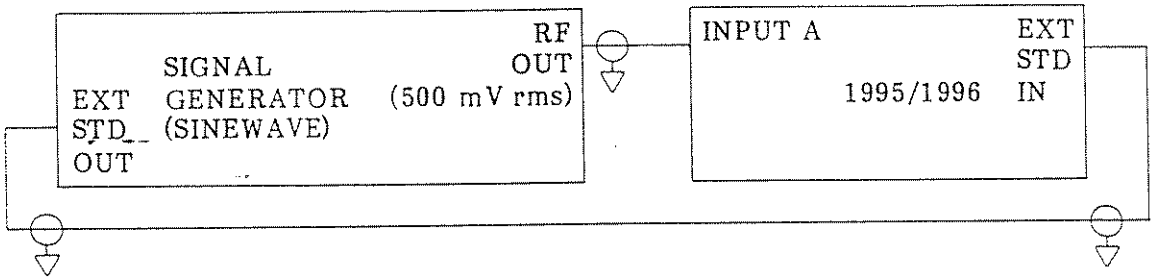


**PROCEDURE**

1. Power up the 1995/6.
2. Set the 1995/6 as follows: NEG WIDTH A
   Input A 50 ohms input impedance
3. Connect the 1996 to the signal generator as shown above.
4. Apply the input shown in the table above and verify that the measurement taken is within the specified tolerance.

**Negative Pulse Width Waveform**


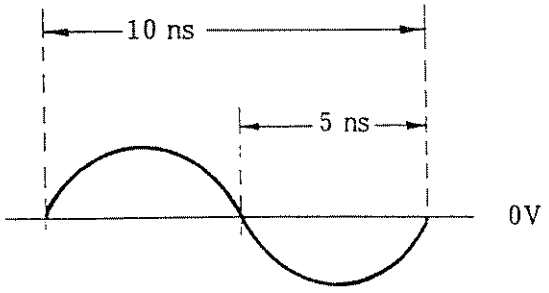


Table 6.17 - Phase A rel B Performance Test

| Applied Frequency | Performance Standard | Tolerance | Counter Resolution | Special Notes |
|---|---|---|---|---|
| 1 kHz | 180° | ± .1° | 1-sec gate | |

**Test Setup**

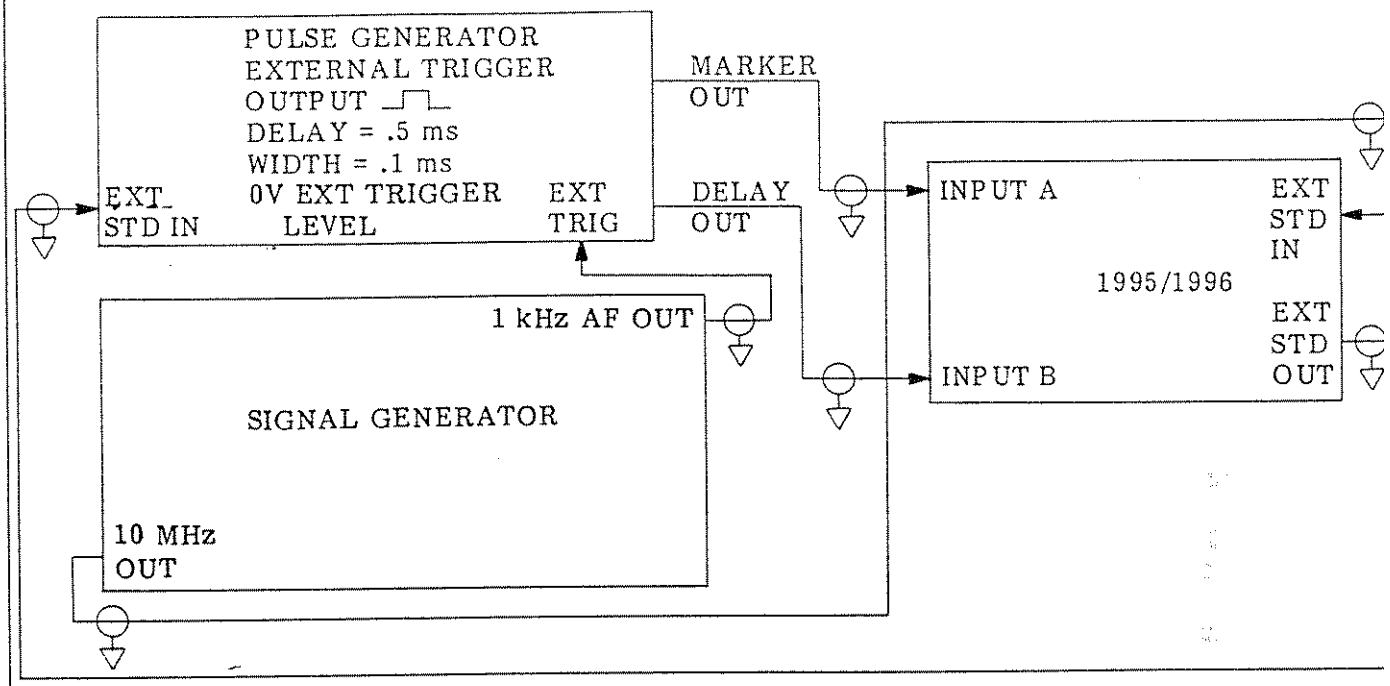


**PROCEDURE**

1. Power up the 1995/6.
2. Set the 1995/6 as follows:
   PHASE A REL B
   Input A 50 ohms input impedance
   Input B 50 ohms input impedance
   Gate time 1 sec
3. Connect the 1996 to the signal generator and pulse generator as shown above.
4. Apply the input shown in the table above and verify that the measurement taken is within the specified tolerance.

**Phase A rel B Waveform**


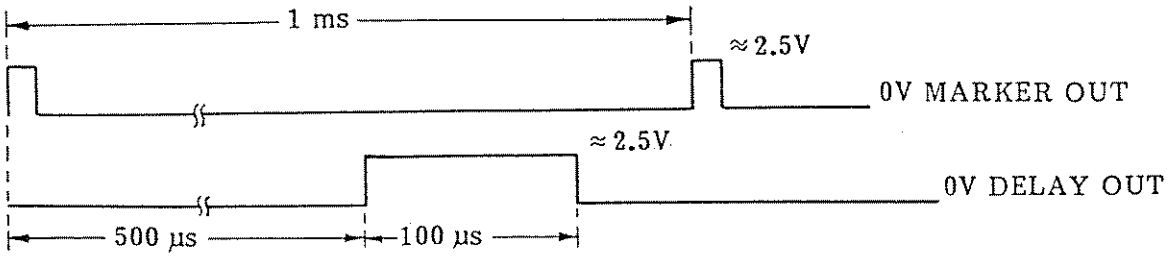


Table 6.18 - Duty Cycle A Performance Test

| Applied Frequency | Performance Standard | Tolerance | Special Notes |
|---|---|---|---|
| 10 MHz | 50% | ± 4% | |

Test Setup

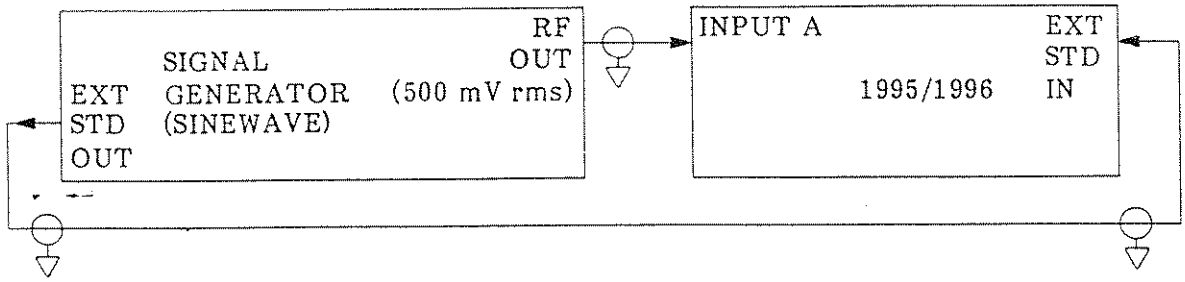



PROCEDURE

1. Power up the 1995/6.
2. Set the 1995/6 as follows: DUTY A
   Input A 50 ohms input impedance
3. Connect the 1996 to the signal generator as shown above.
4. Apply the input shown in the table above and verify that the measurement taken is within the specified tolerance.

Table 6.19 - Slew Rate A Performance Test

| Applied Frequency : Performance Standard | Tolerance | Special Notes |
|---|---|---|
| 5 MHz/29 x $10^6$V/s | ± 6 x $10^6$V/s | Use an AC voltmeter to verify applied input signal level into 50-Ω load before applying to UUT |


**Test Setup**

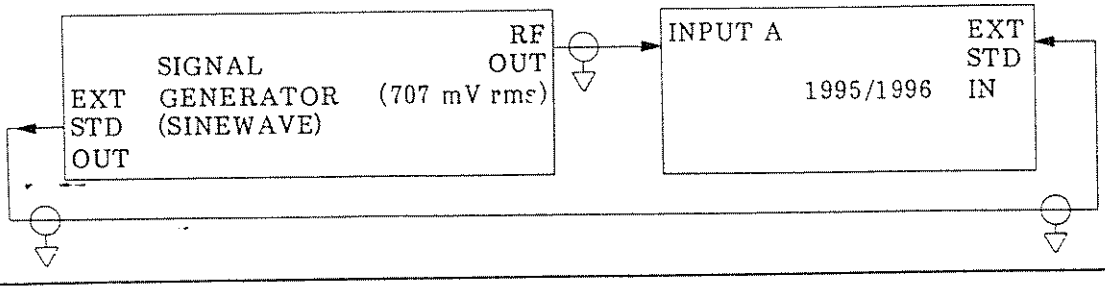


**PROCEDURE**

1. Power up the 1995/6.
2. Set the 1995/6 as follows: SLEW A
   Input A 50 ohms input impedance
3. Connect the 1996 to the signal generator as shown above.
4. Apply the input shown in the table above and verify that the measurement taken is within the specified tolerance.

**Slew Rate A Waveform**

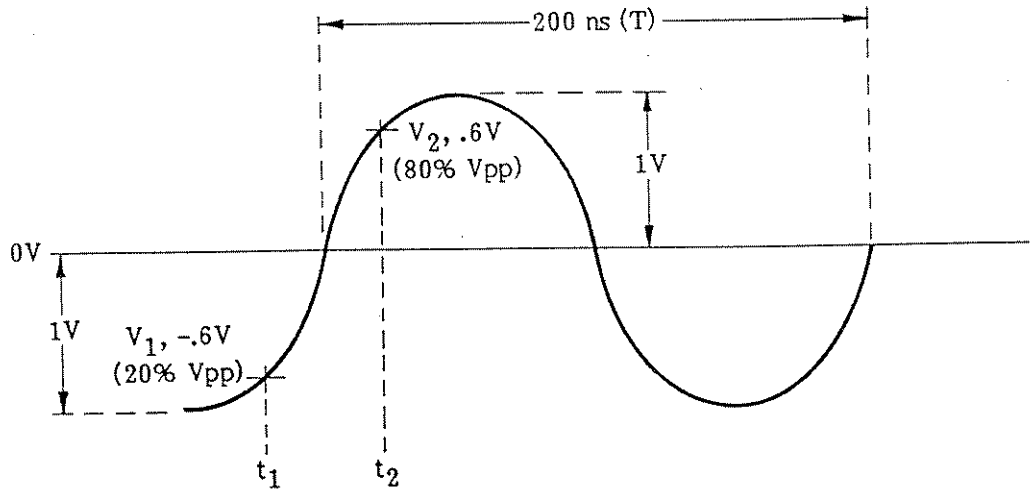


$$\text{Slew Rate} = \left(\frac{V_2 - V_1}{t_2 - t_1}\right) = \frac{1.2V}{40.96 \times 10^{-9}\ \text{sec}} \simeq \frac{29.3 \times 10^6 V}{\text{Sec}}$$

$$V_2 - V_1 = .6 - (-.6) = 1.2V$$

$$t_2 - t_1 = \frac{2\,(\text{SIN}^{-1}\ .6)}{360} \times T = \frac{73.74^\circ}{360^\circ} \times 200\ \text{ns} = 40.96\ \text{ns}$$

## 6.4 CALIBRATION

6.4.1 This procedure provides calibration information for Racal-Dana's Universal Systems Counters Models 1995/1996.

## 6.5 REQUIRED EQUIPMENT FOR CALIBRATION

a. Digital voltmeter with at least a 1 mV accuracy in the 10V range. Use a Racal-Dana Model 5004 or its equivalent

b. GPIB controller. Use a Hewlett-Packard Model 9826 or its equivalent

c. DC source with a single-pole output filter set for a 3-dB cutoff frequency of 1.6 Hz (1 KΩ resistor and 100 μF capacitor)

## 6.6 CALIBRATION PROCEDURE

a. Turn unit-under-test (UUT) on. Allow 15 minutes for thermal stabilization of the counter

b. Send the following string to the counter:

"CAL" <cr lf>

The counter now enters the calibration routine.

**NOTE:**

If at any point during the calibration procedure an error is generated (e.g., syntax or calibration), the entire calibration procedure must be repeated.

c. Send the following string to the counter:

"CLHI" <cr lf>

d. Connect the voltmeter to the Start DAC (START-CAL LEVEL) output on the rear panel of the UUT and record this voltage (Vstart-high)

e. Connect the voltmeter to the Stop DAC (STOP-CAL LEVEL) output on the rear panel of the UUT and record this voltage (Vstop-high)

f. Send the following string to the counter:

"CLLO" <cr lf>

g. Record the voltage reading of the meter at the Stop DAC (STOP-CAL LEVEL) output of the UUT (Vstop-low)

h. Connect the voltmeter to the Start DAC (START-CAL LEVEL) output of the UUT and record this voltage (Vstart-low)

i. Send the following string to the counter:

"CLTH<space>Vstart-high" <cr lf>
"CLPH<space>Vstop-high" <cr lf>
"CLTL<space>Vstart-low" <cr lf>
"CLPL<space>Vstop-low" <cr lf>

where Vstart-high, Vstop-high, Vstart-low, and Vstop-low are the previously recorded values. At this point "CAL" is shown on the main display. The following example shows the command strings to be sent with a Model HP85B controller in performing a 1995/1996 calibration procedure:

Output703;"CAL"
Output703;"CLHI" (Record Vstart-high and Vstop-high)
Output703;"CLLO" (Record Vstart-low and Vstop-low)
Output703;"CLTH<space>5.2664" (5.2664 is Vstart-high)
Output703;"CLPH<space>5.2884" (5.2884 is Vstop-high)
Output703;"CLTL<space>-5.2756" (-5.2756 is Vstart-low)
Output703;"CLPL<space>-5.2661" (-5.2661 is Vstop-low)

**NOTE:**

Header separators, typically commas or semicolons, are controller-dependent.

j. About 5 minutes later, when calibration is completed, "CAL donE" is displayed on the front panel. Values can now be stored to non-vol memory. Depress the calibration switch (through the front-panel opening to the right of the POWER button), while sending the following string to the counter:

"CLST" <cr lf>

k. Keep calibration switch depressed until display shows "donE" indicating successful non-vol memory store

l. A <space><cr lf>GPIB output is given and the calibration switch can now be released

## 6.7 VERIFICATION PROCEDURE

a. Connect the DC source to Inputs A and B of the UUT. Adjust the DC voltage to 4.50V using the voltmeter

b. Set up the counter for time interval A to B, Channels A and B DC coupled

c. Press the RESET key on the front panel, then the AUTO-TRIG keys for both Inputs A and B

d. Verify that the trigger LEVEL A and B displays show trigger levels between 4.45 and 4.55 volts

e. Adjust the DC source to -4.50V using the voltmeter

f. Verify that the trigger LEVEL A and B displays show trigger levels between -4.45 and -4.55 volts

## 6.8 INTERNAL REFERENCE ADJUSTMENT

### 6.8.1 Required Equipment

a. 1 MHz frequency standard. Use Racal-Dana Model 9475 or its equivalent

b. Oscilloscope. 350 MHz, B/W, 4-channel

6.8.2 There are two internal reference oscillators available for the 1995/1996.

6.8.3 The calibration procedure for the standard oscillator is a single variable capacitor adjustment, accessible at OSC ADJ on the rear panel. The Option 04E has two adjustments (COARSE and FINE), accessible at the rear panel.

6.8.4 **Reference Oscillator Frequency Check**

a. Select the following control settings:
(home state at power-up)

| | |
|---|---|
| FUNCTION | FREQ A |
| GATE TIME | 1second |
| INPUT A | |
| SLOPE | ⌜ |
| COUPLING | DC |
| TRIGGER LEVEL | AUTO |

b. Connect the 1 MHz frequency standard to Input A

c. The difference between the internal reference oscillator and the 1 MHz frequency standard can be determined by the following equation:

Internal oscillator frequency = (2E6-display) x 10

d. Some examples of various counter readings and the frequency difference that is indicated are shown below:

| Counter Display | Internal Reference Oscillator |
|---|---|
| 999.9950 E3 | 10,000.05000 kHz |
| 1.0000000 E6 | 10,000.00000 kHz |
| 1.0000025 E6 | 9,999.97500 kHz |

6.8.5 **Adjustment Procedure**

a. Connect the 1 MHz frequency standard to the vertical input of the oscilloscope and connect the OUT REF signal from the rear panel of the counter to the external trigger of the oscilloscope (see wiring diagram below)


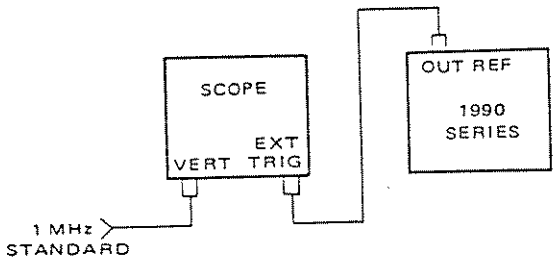



**Figure 6.1 – Internal Reference Adjustment Procedure**

# SECTION 7 DRAWINGS


| | | Figure/Page No. |
|---|---|---|
| 404335 | Counter Assembly (1995) | 7-2 |
| 404336 | Counter Assembly (1996) | 7-3 |
| 404332 | Chassis Assembly | 7-4 |
| 401730 | PCB Assy., 10 MHz Oscillator | 7-6 |
| 431730 | Schematic, 10 MHz Oscillator | 7-7 |
| 404389 | PCB Assy., Channel C (1996) | 7-8 |
| 432152 | Schematic, Channel C (1996) | 7-9 |
| —— | Component Location, Motherboard | 7-10 |
| 401725 | PCB Assy., Motherboard | 7-12 |
| 431725 | Schematic, Motherboard | 7-13 |
| 401726 | PCB Assy., Signal Conditioner | 7-25 |
| 431726 | Schematic, Signal Conditioner | 7-27 |
| 401728 | PCB Assy., AMCC2 Synch | 7-33 |
| 431728 | Schematic, AMCC2 Synch | 7-35 |
| 401727 | PCB Assy., Display | 7-36 |
| 431727 | Schematic, Display | 7-37 |
| 404331 | Assy., Rear Panel | 7-39 |
| 404378 | Assy., Rear Input, Option 01 | 7-40 |
| 401752 | PCB Assy., Option 01 | 7-41 |
| 404384 | Assy., Option 04E | 7-42 |
| 404386 | Oscillator (Option 04E) | 7-43 |
| 401822 | PCB Assy., Doubler | 7-44 |
| 431822 | Schematic, Doubler | 7-45 |
| 404387 | Assy.. 220/240V Operation (Option 71) | 7-46 |
| 454847 | Dimensional Outline | 7-47 |

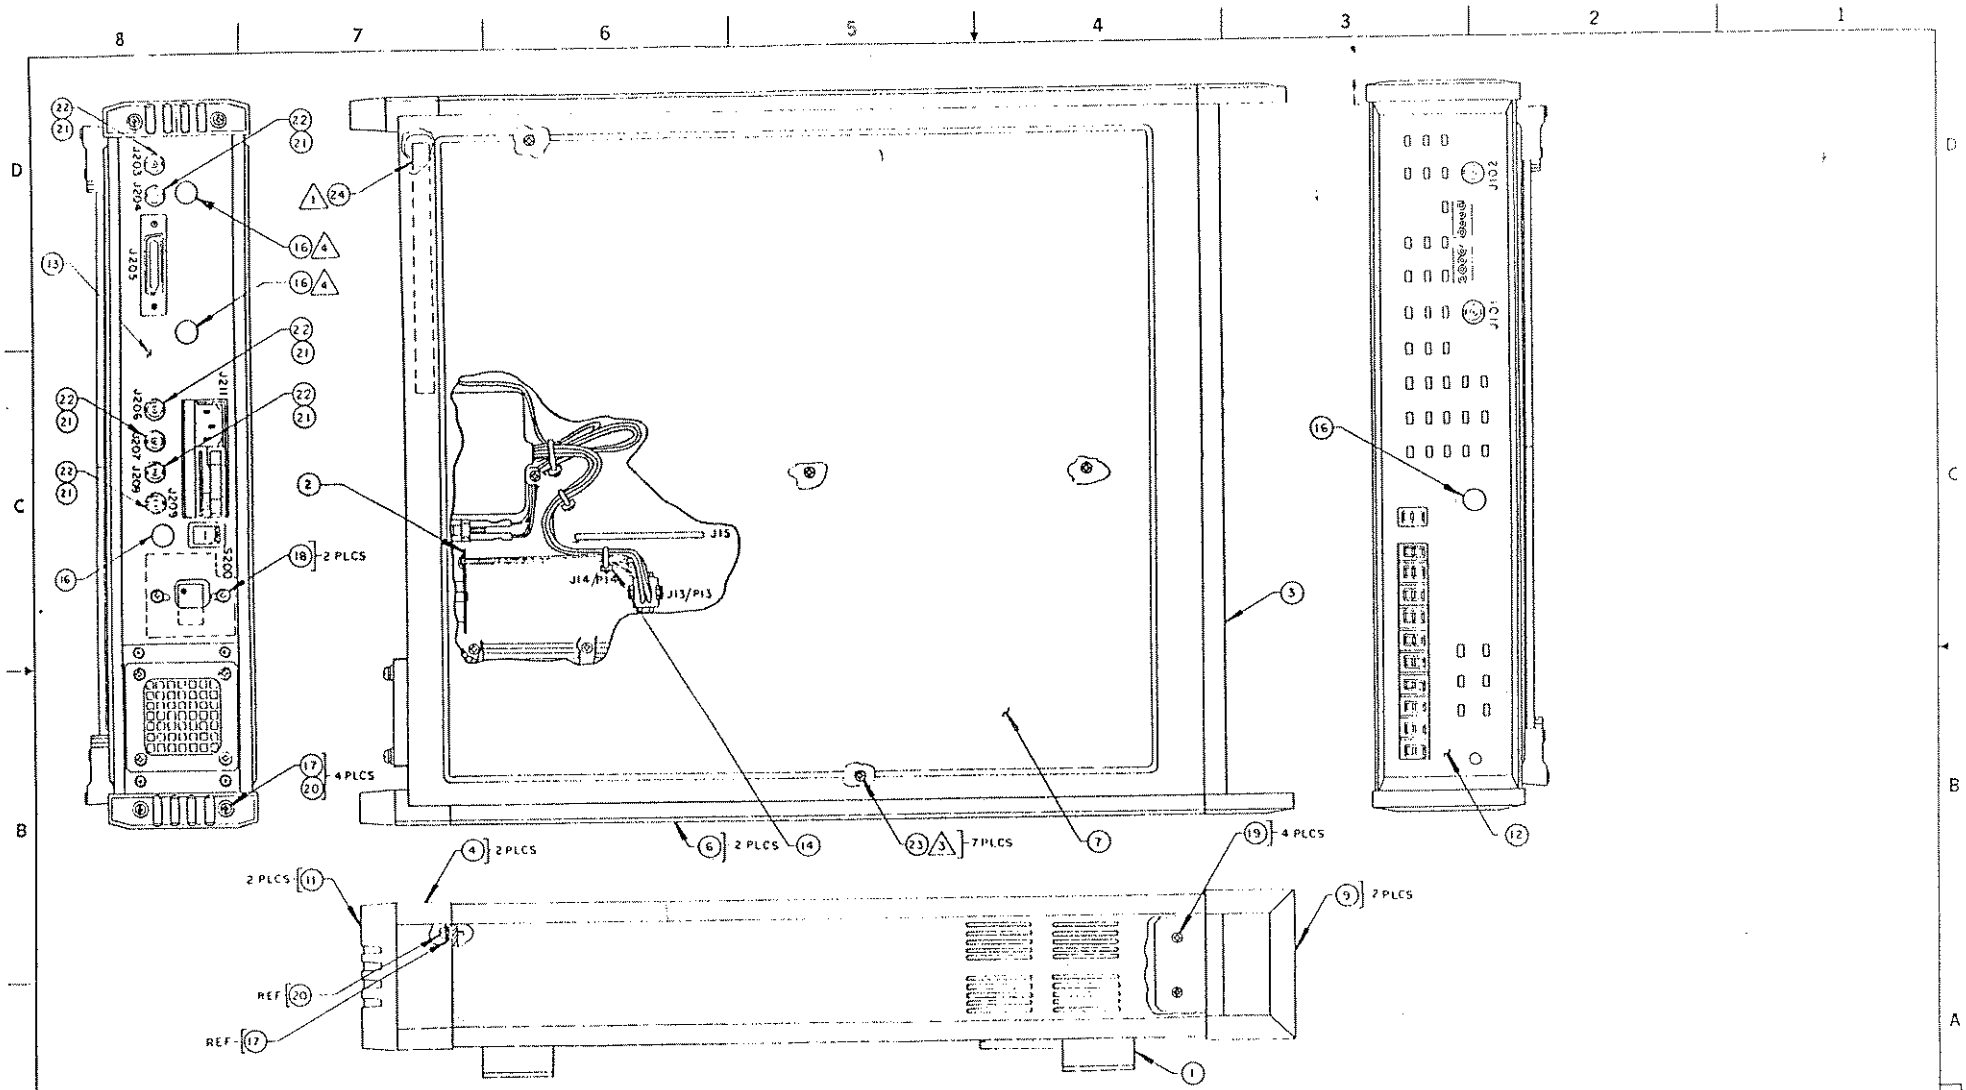


4 PLASTIC HOLE PLUGS ITEM #16 SHOULD BE MOVED TO RELATING HOLES IN FRONT PANEL WHEN CHANNEL A & B REAR INPUT IS INSTALLED.

3 INSTALL SCREWS (ITEM #23) IN MOTHERBOARD PRIOR TO INSTALLING COVERS.


2 ITEMS 15 & 25 TO BE SHIPPED WITH INSTRUMENT.

1 TYPE PERTINENT DATA ON SERIAL NO. TAG., ATTACH TAG APPROXIMATELY WHERE SHOWN.

PROPRIETARY NOTICE

| | | | |
|---|---|---|---|
| DOCUMENT TITLE: COUNTER ASSY, UN. SYS. MODEL 1995 | | | |
| SIZE: D | CODE IDENT NO.: 21793 | DRAWING NO.: 404335 | REV: B |
| SCALE: 3/4 | | SHEET 1 OF 2 | |

DOC NO. 404335

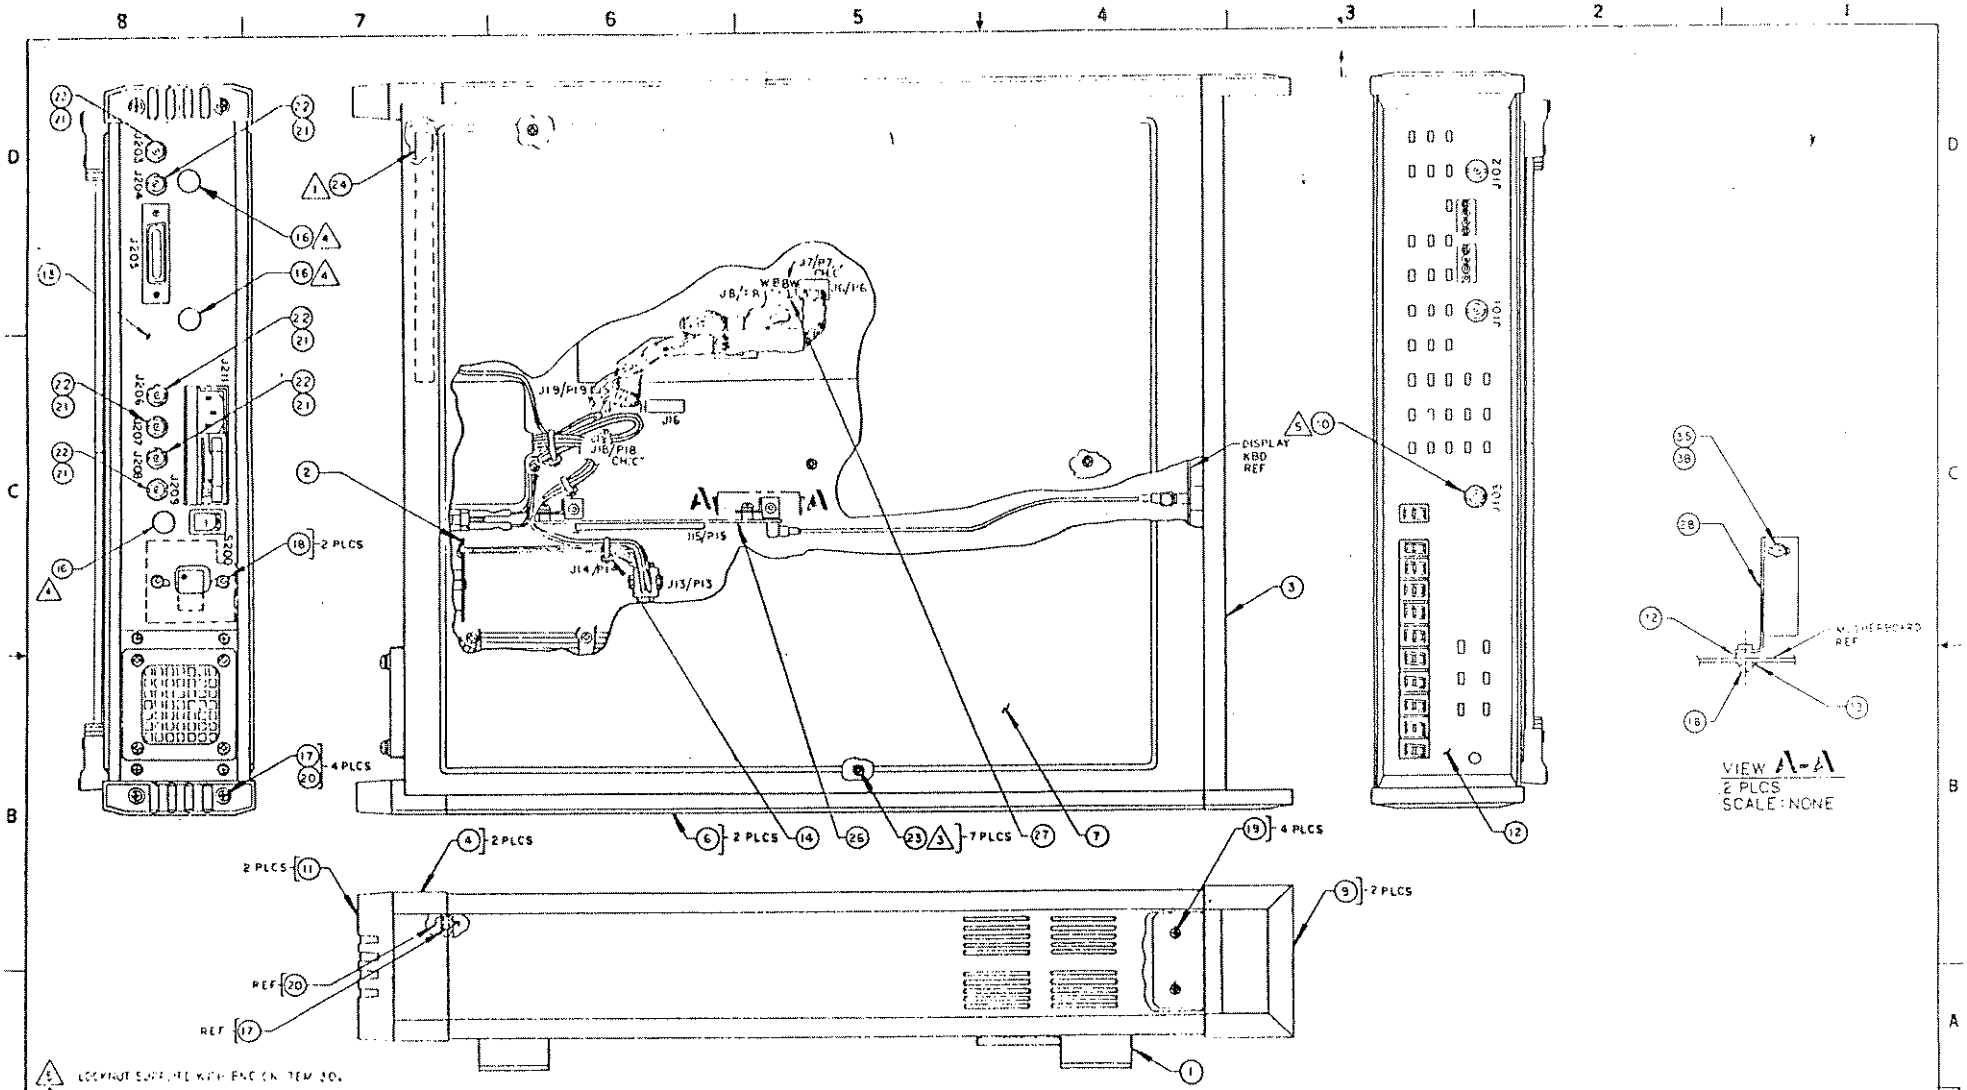



1. TYPE PERTINENT DATA ON SERIAL NO. TAG, ATTACH TAG APPROXIMATELY WHERE SHOWN.
2. ITEMS 15 & 25 TO BE SHIPPED WITH INSTRUMENT.
3. INSTALL SCREWS (ITEM #23) IN MOTHERBOARD PRIOR TO INSTALLING COVERS.
4. PLASTIC HOLE PLUGS ITEM #16 MUST BE MOVED TO RELATING HOLES IN FRONT PANEL WHEN CHANNEL A,B & EXT AR INPUT IS INSTALLED.
5. LOCKNUT SUPPLIED WITH ENC ON ITEM 30.

| NEXT ASSY | USED ON |
|---|---|
| | 404336 |


| DESCRIPTION | |
|---|---|
| COUNTER ASSY, UN. SYS. MODEL 1996 | |

| SIZE | CAGE CODE NO | DWG OR PART NO | REV |
|---|---|---|---|
| D | 21793 | 404336 | B |

SCALE 3/4 SHEET 1 OF 2

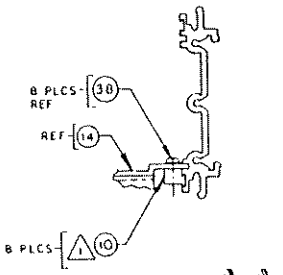


SECTION A-A
SCALE: NONE

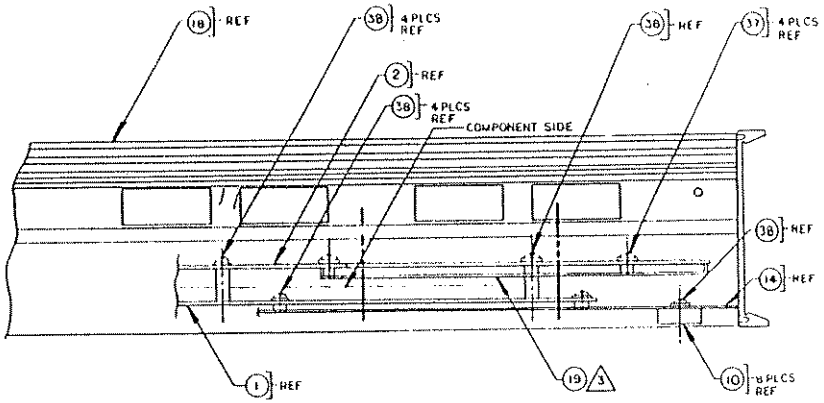


SECTION B-B
SCALE: NONE

3 SHIELD, ITEM NO. 19 MUST BE ATTACHED TO PCB ASSY ITEM NO. 2 PRIOR TO INSTALLING IN CHASSIS.

2 RETAINING NUTS SUPPLIED WITH BNC'S ON ITEM NO. 2.

1 INSTALL & ORIENT ITEM NO. 10 AS SHOWN.

NOTES UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL-DANA INSTRUMENTS INC AND SHALL NOT, WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL-DANA INSTRUMENTS INC BE USED, REPRODUCED OR DISCLOSED IN WHOLE OR IN PART. IT SHALL NOT BE USED FOR QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL-DANA INSTRUMENTS INC THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT FROM RACAL-DANA INSTRUMENTS INC


RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE
CHASSIS ASSY


| SIZE | CODE IDENT NO | DOCUMENT NO | REV |
|---|---|---|---|
| D | 21793 | 404332 | D |

SCALE 3/4 SHEET 1 OF 5

404332

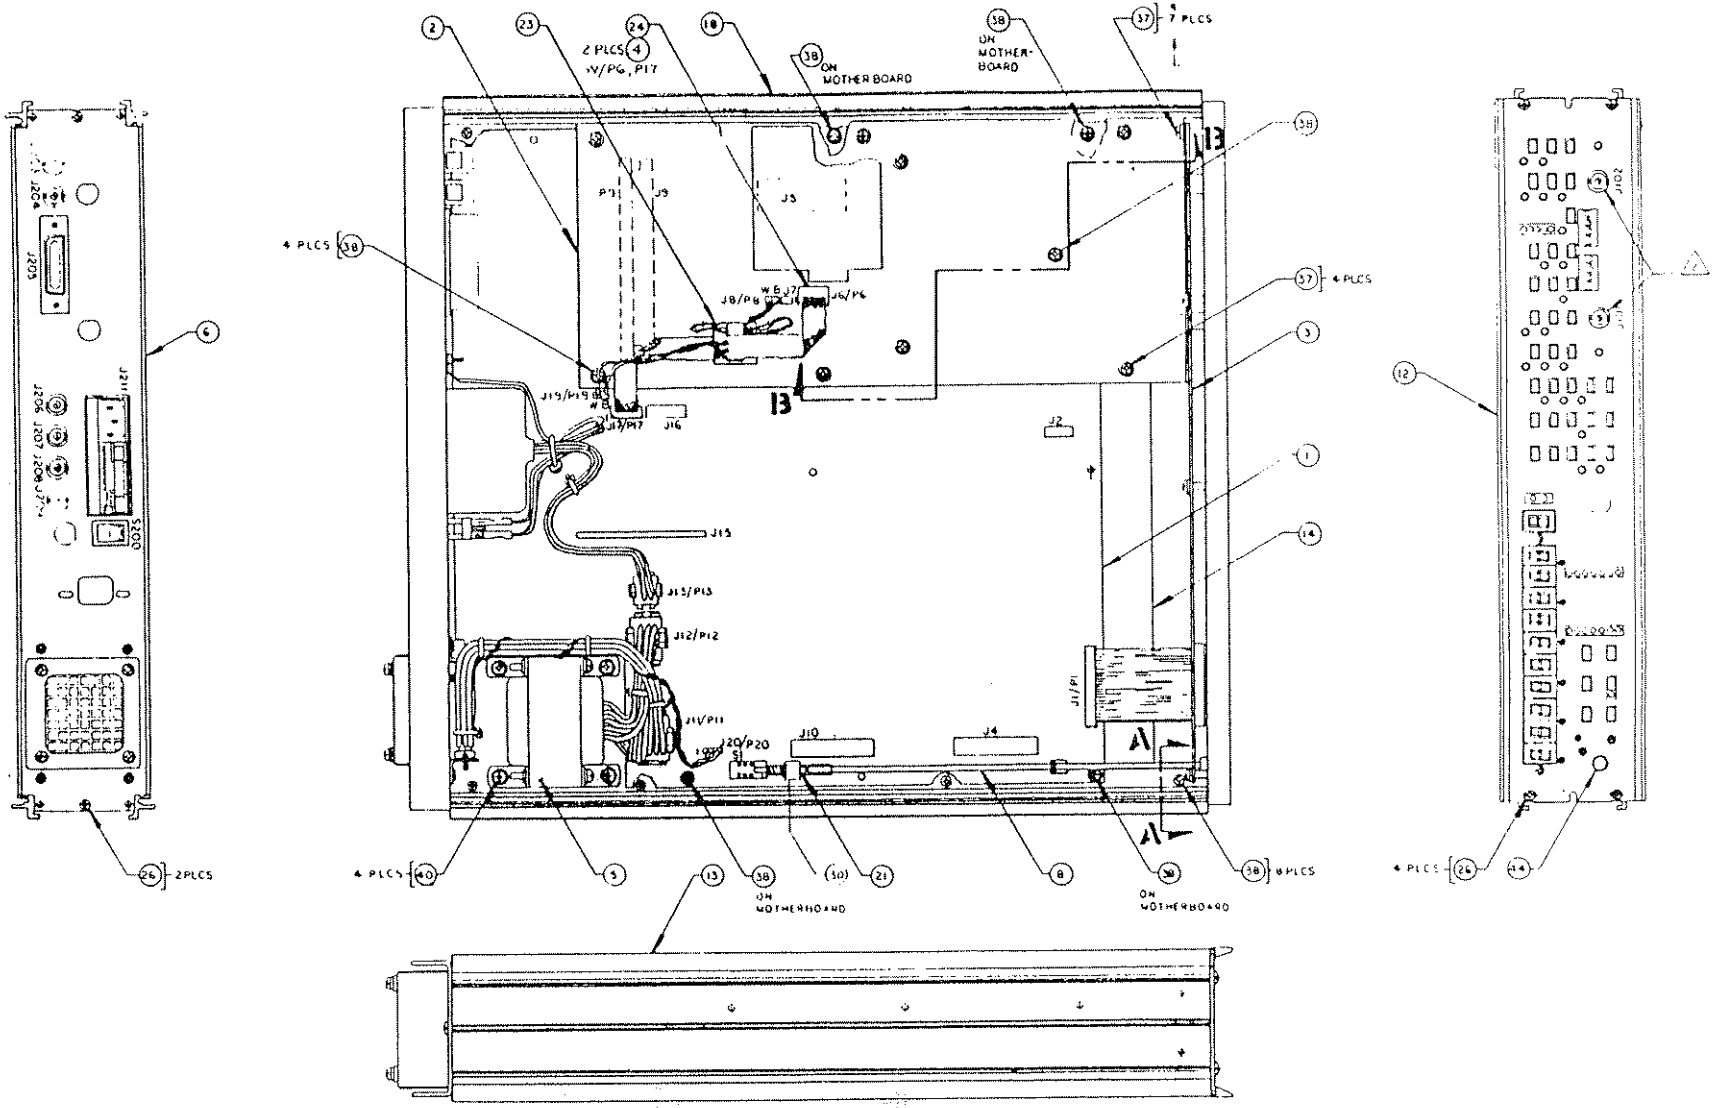


| SIZE | CODE IDENT NO | DRAWING NO | REV |
|---|---|---|---|
| D | 21793 | 404332 | |
| SCALE 3/4 | | SHEET 2 OF 5 | |

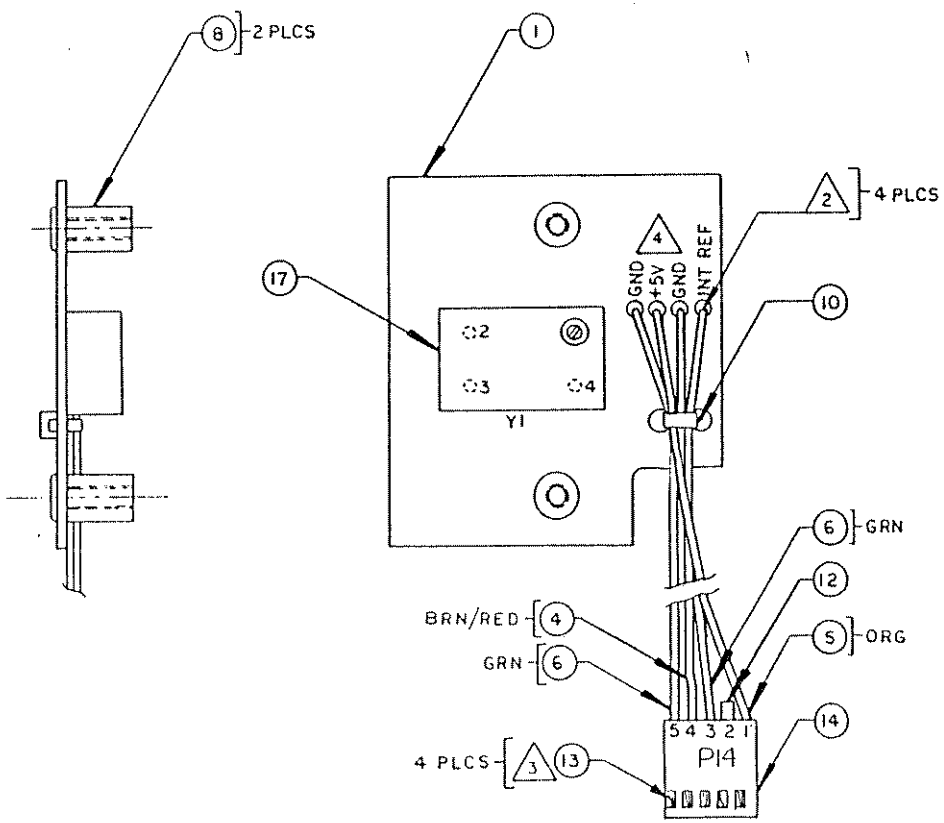


4 NOMENCLATURE SHOWN IS ON FARSIDE OF PC BOARD.

3 STRIP WIRE .14.

2 STRIP WIRE .25.

1. SCHEMATIC REF NO. 431730


PROPRIETARY NOTICE

PCB ASSY, 10MHZ OSC.

| SIZE | DRAWING NO. | REV |
|---|---|---|
| C | 21793 | 401730 | A |

DOC NO 401730

7-6

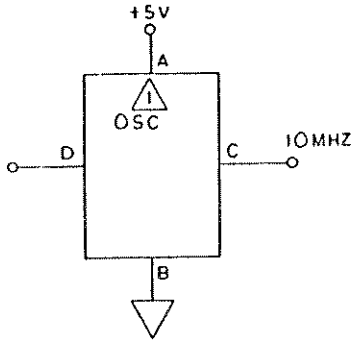


## OSC. VENDOR CHART

| | P/N 921013 NDK | P/N 921014 TCXO | P/N 921013 SEI |
|---|---|---|---|
| A | 4 | 2 | 2 |
| B | 2 | 4 | 1 |
| C | 3 | 1 | 3 |
| D | 1 (NC) | 3 (NC) | 4 (NC) |

(1) FOR SPECIFIC PIN NUMBERS REFER TO OSC. VENDOR CHART.

NOTES: UNLESS OTHERWISE SPECIFIED


PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HERE ON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EX PRESS WRITTEN PERMISSION OF RACAL DANA IN STRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTA TIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC THE INFORMATION HERE ON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF EVAL UATING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOC UMENTS WHICH SPECIFY PROCUREMENT OF PRO DUCTS FROM RACAL DANA INSTRUMENTS INC

# SCHEMATIC, 10MHZ OSC

| SIZE | CODE IDENT NO | DWG NO | REV |
|---|---|---|---|
| B | 21793 | 431730 | A |

SCALE —— SHEET 1 OF 1

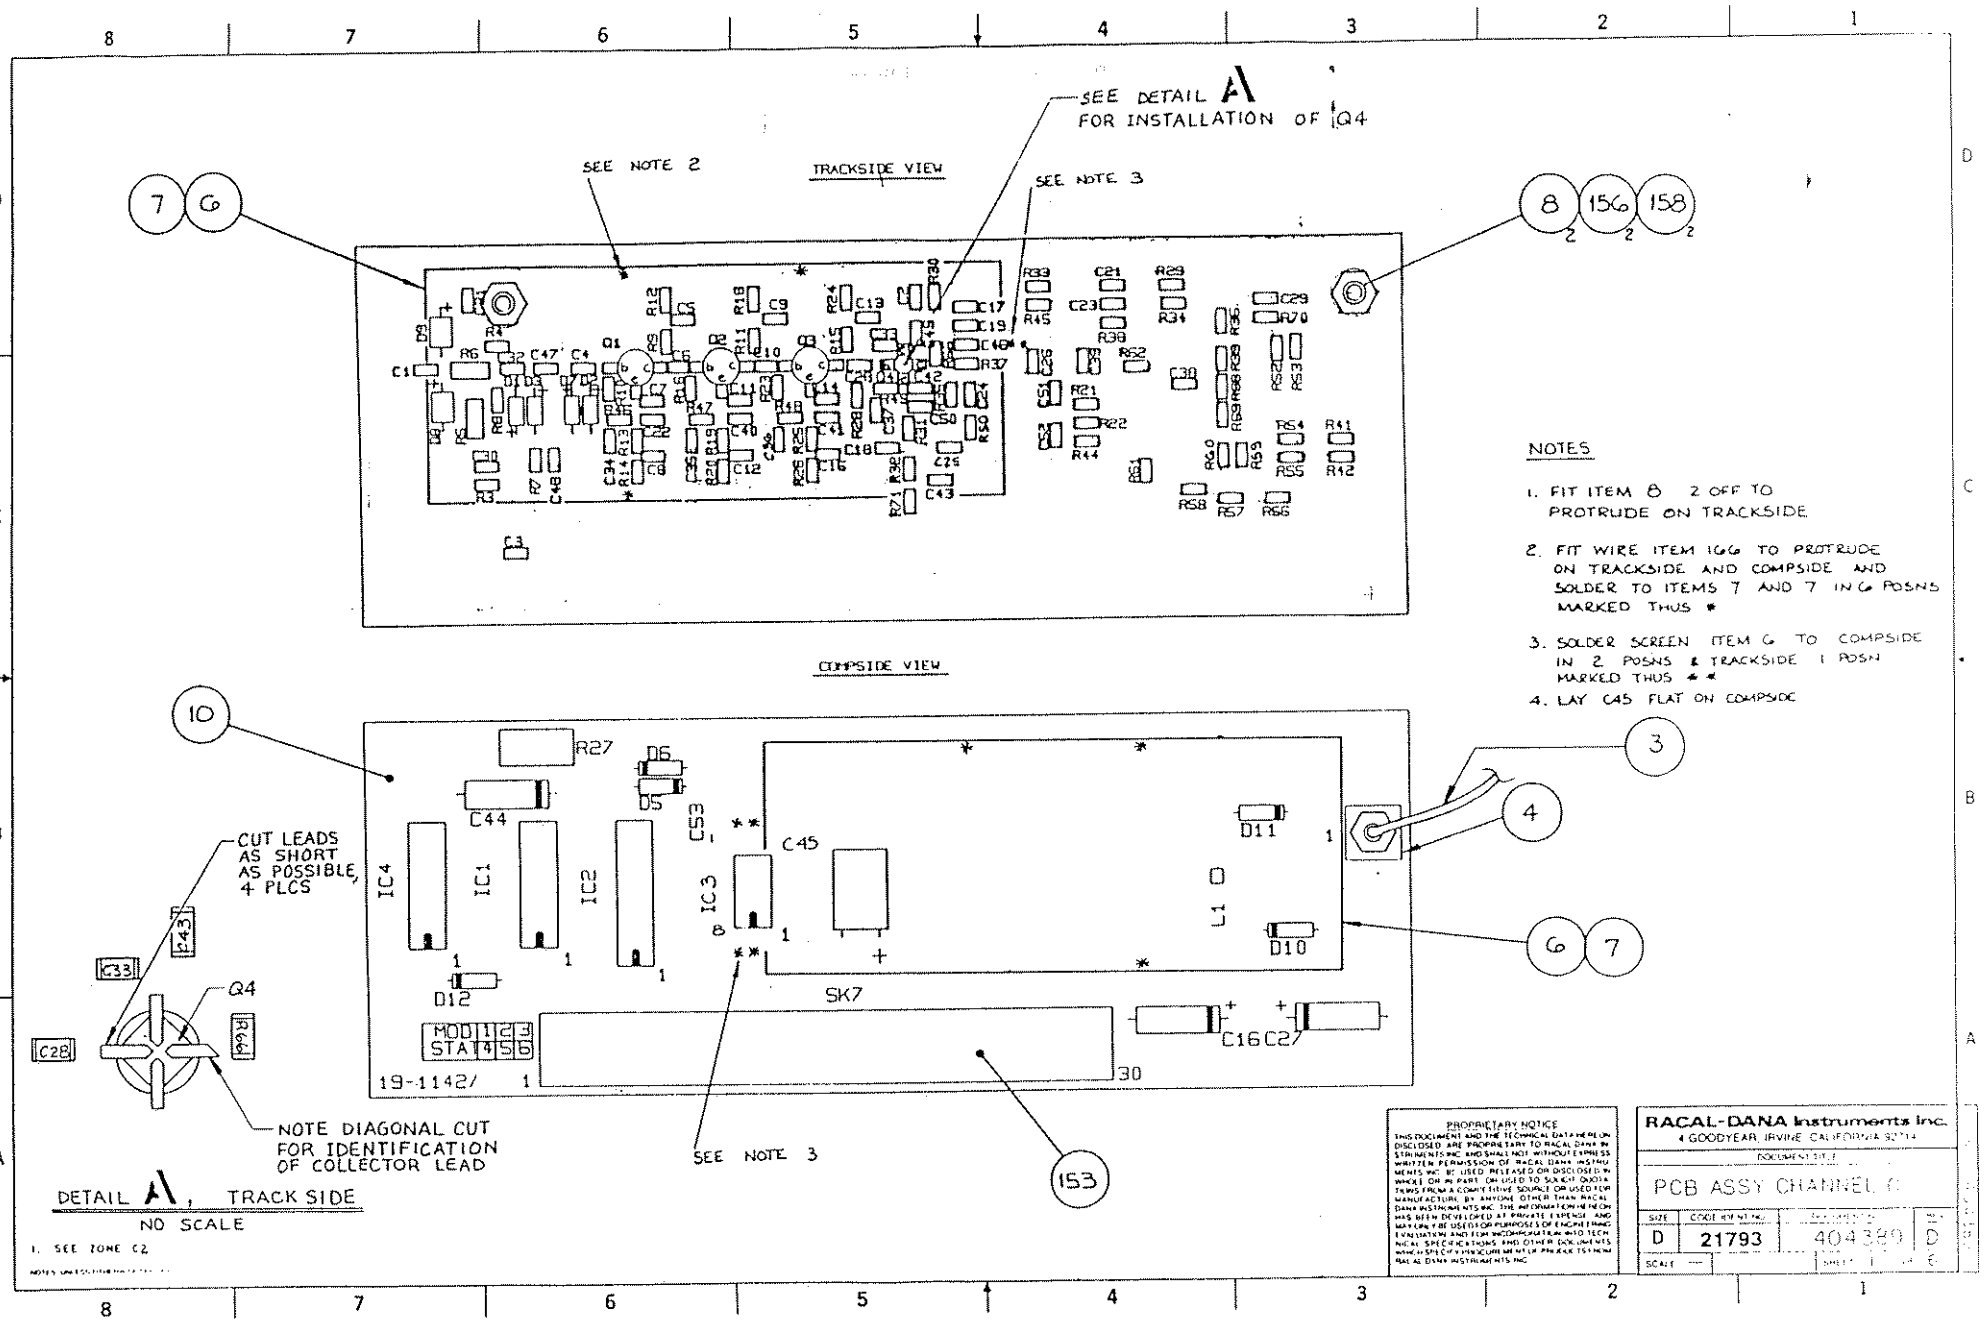



NOTES


1. FIT ITEM 8 2 OFF TO PROTRUDE ON TRACKSIDE
2. FIT WIRE ITEM 166 TO PROTRUDE ON TRACKSIDE AND COMPSIDE AND SOLDER TO ITEMS 7 AND 7 IN 6 POSNS MARKED THUS *
3. SOLDER SCREEN ITEM 6 TO COMPSIDE IN 2 POSNS & TRACKSIDE 1 POSN MARKED THUS **
4. LAY C45 FLAT ON COMPSIDE


PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREIN DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC. THE INFORMATION HEREIN HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC


RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

| DOCUMENT TITLE | | | |
|---|---|---|---|
| PCB ASSY CHANNEL C | | | |
| SIZE | CODE IDENT NO. | DRAWING NO. | REV |
| D | 21793 | 404380 | D |
| SCALE — | | SHEET 1 OF 5 | |

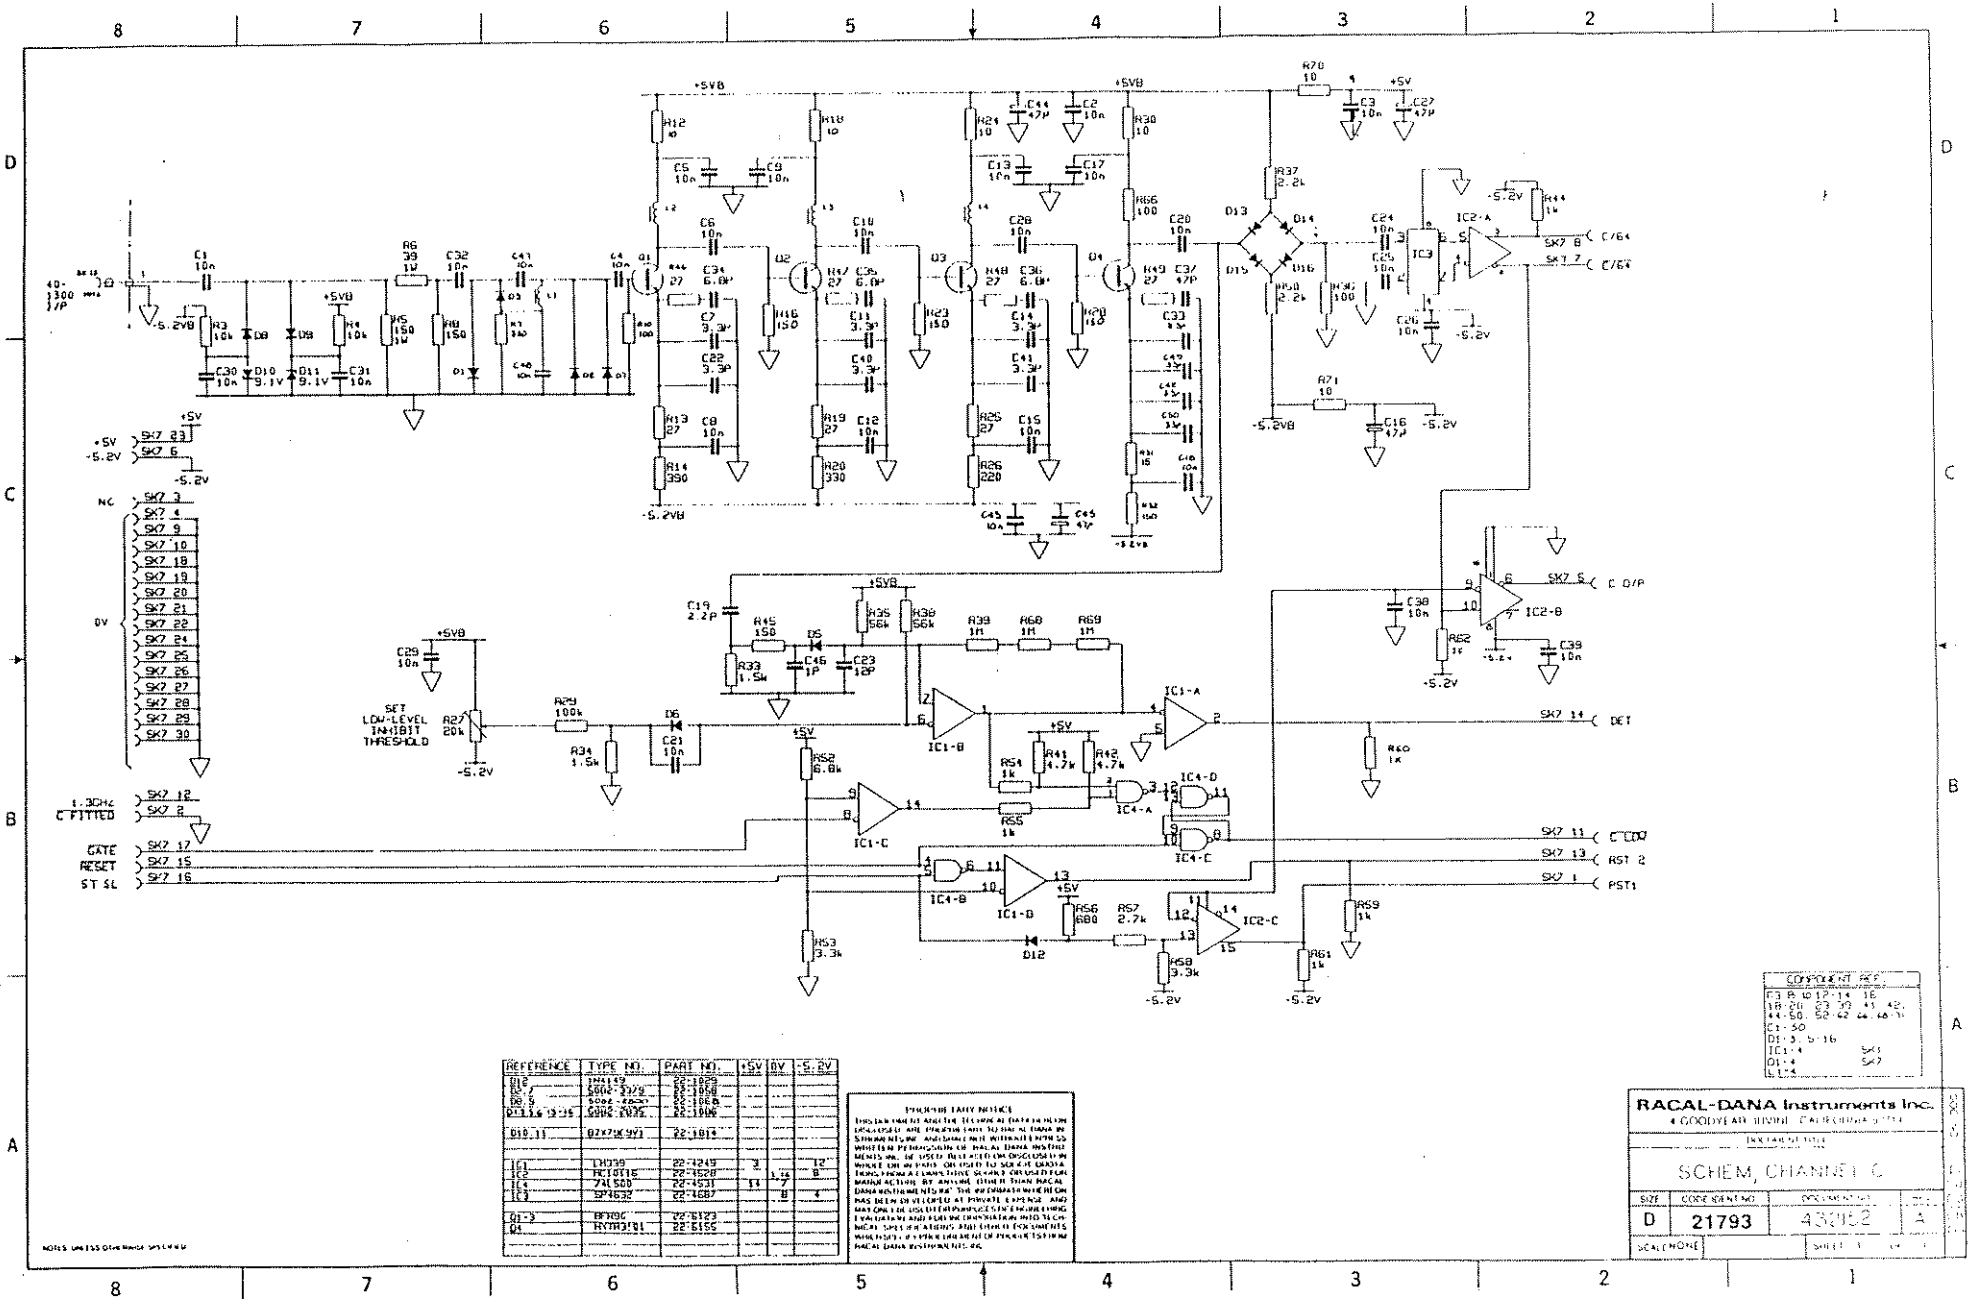
SCHEM, CHANNEL C
RACAL-DANA Instruments Inc.
SIZE D
CODE IDENT NO 21793
DRAWING NO 43052
REV A
SCALE NONE
SHEET 1
+5V
-5.2V
0V
+5VB
-5.2VB
SET LOW-LEVEL INHIBIT THRESHOLD
GATE
RESET
ST SL
DET
RST 2
PST1
C D/P
IC1-A
IC1-B
IC1-C
IC1-D
IC2-A
IC2-B
IC2-C
IC4-A
IC4-B
IC4-C
IC4-D

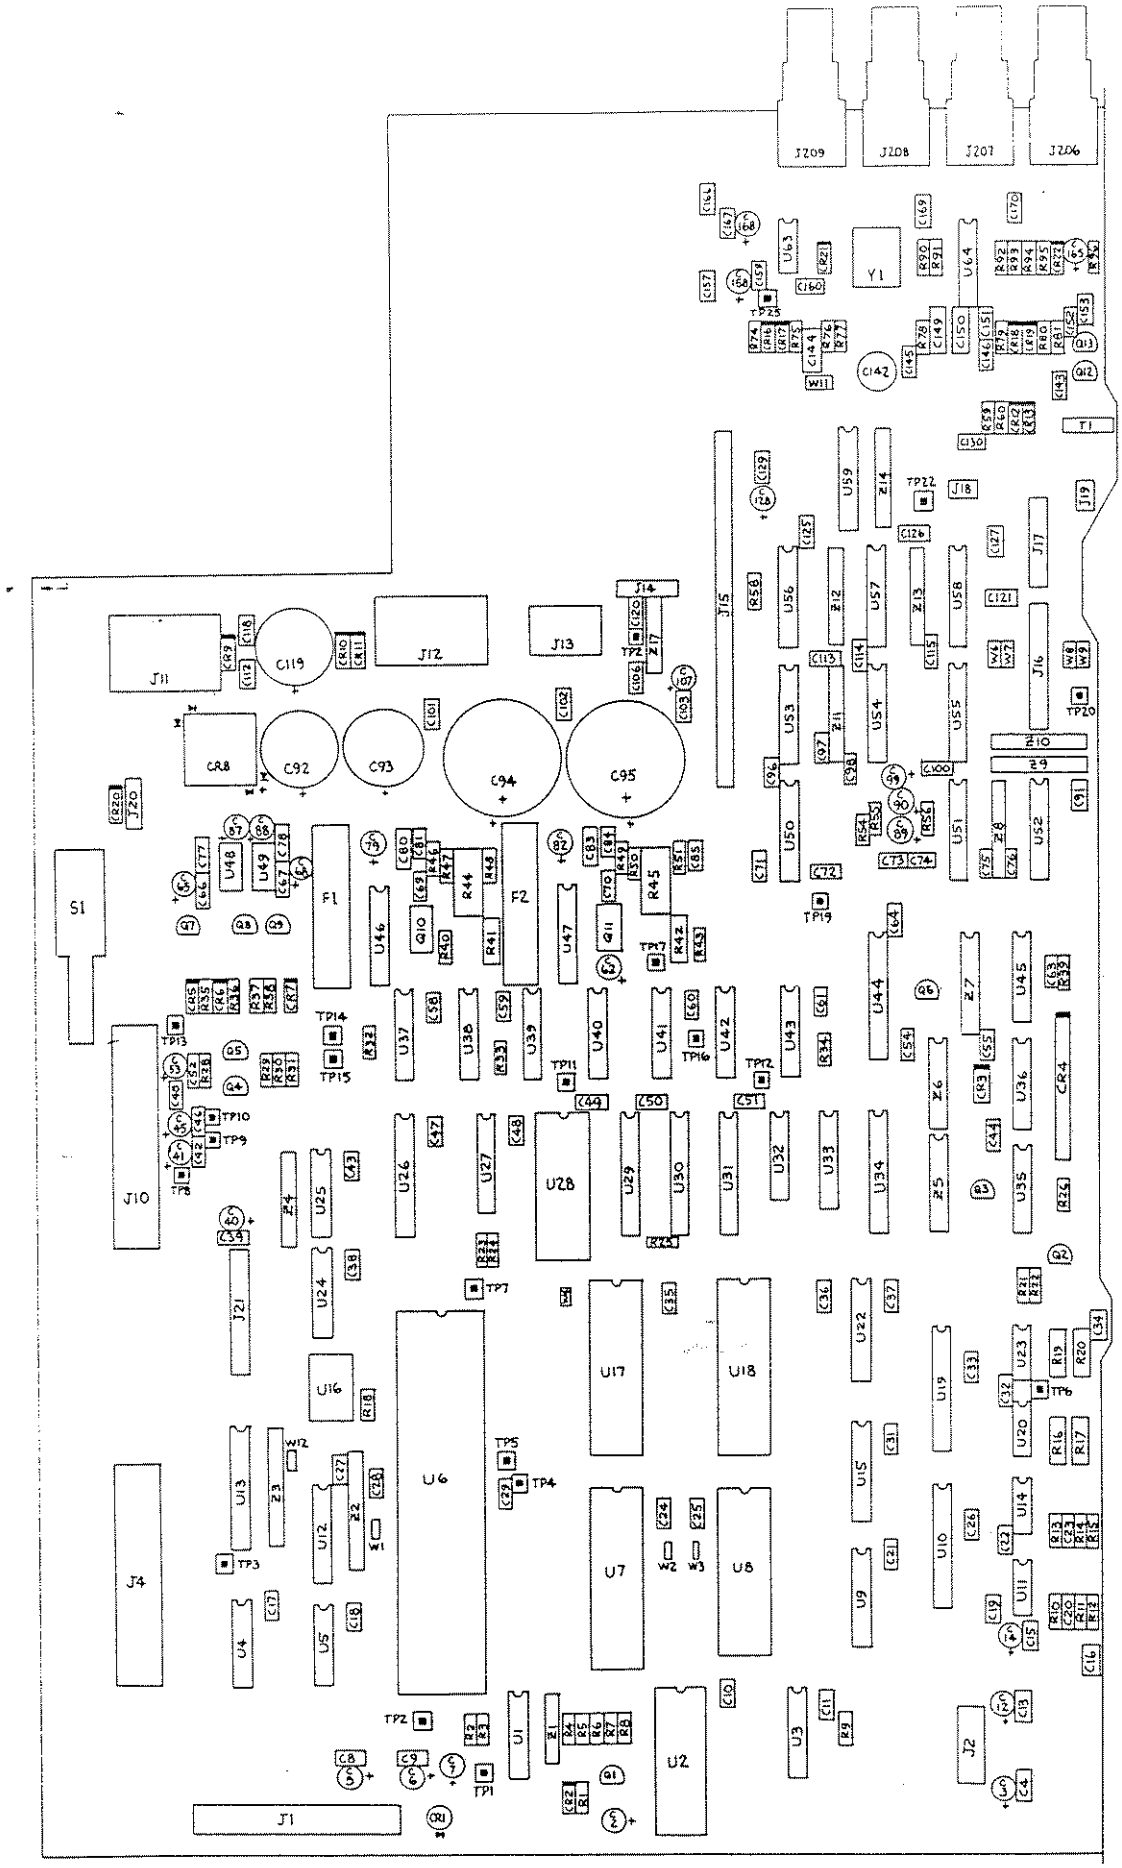
J209
J208
J207
J206
Y1
C142
T1
J15
J19
J17
J16
J14
J12
J13
J11
C119
CR8
C92
C93
C94
C95
S1
F1
F2
J10
J4
J1
J2
J21
U6
U7
U8
U17
U18
U2
U3
U50
U56
U57
U58
U59
U64
U63
U46
U47
U44
U45
U36
U35
U34
U33
U32
U31
U30
U29
U28
U27
U26
U25
U24
U16
U13
U12
U5
U4
U22
U19
U15
U10
U9
U23
U20
U14
U11
TP1
TP2
TP3
TP4
TP5
TP6
TP7
TP9
TP10
TP11
TP12
TP13
TP14
TP15
TP16
TP18
TP19
TP20
TP22
TP25

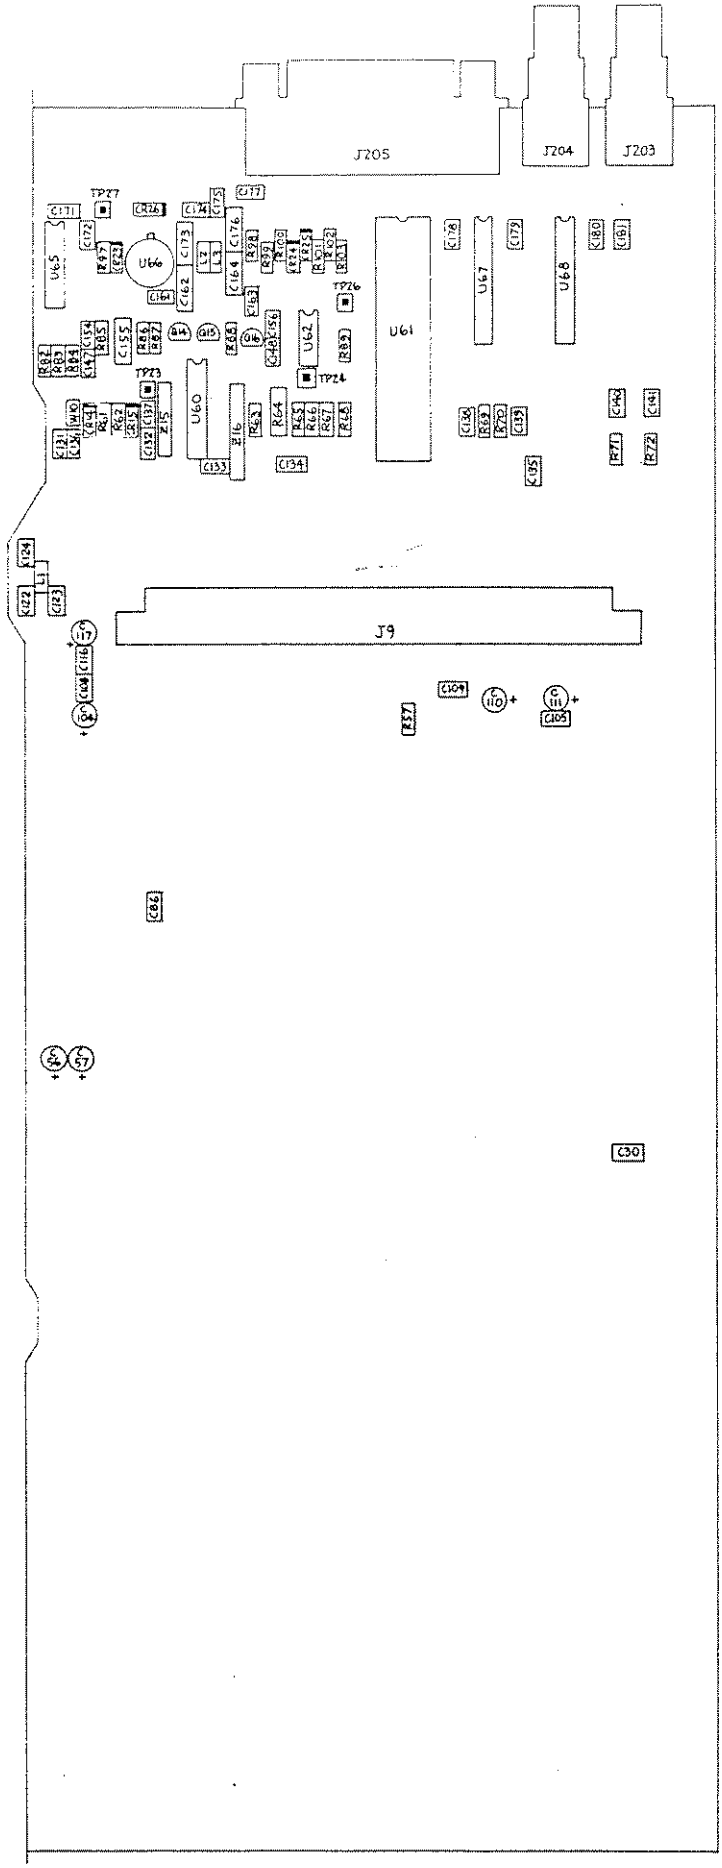
J205
J204
J203
U65
U66
U67
U68
U61
U62
U60
J9
TP27
TP26
TP23
TP24

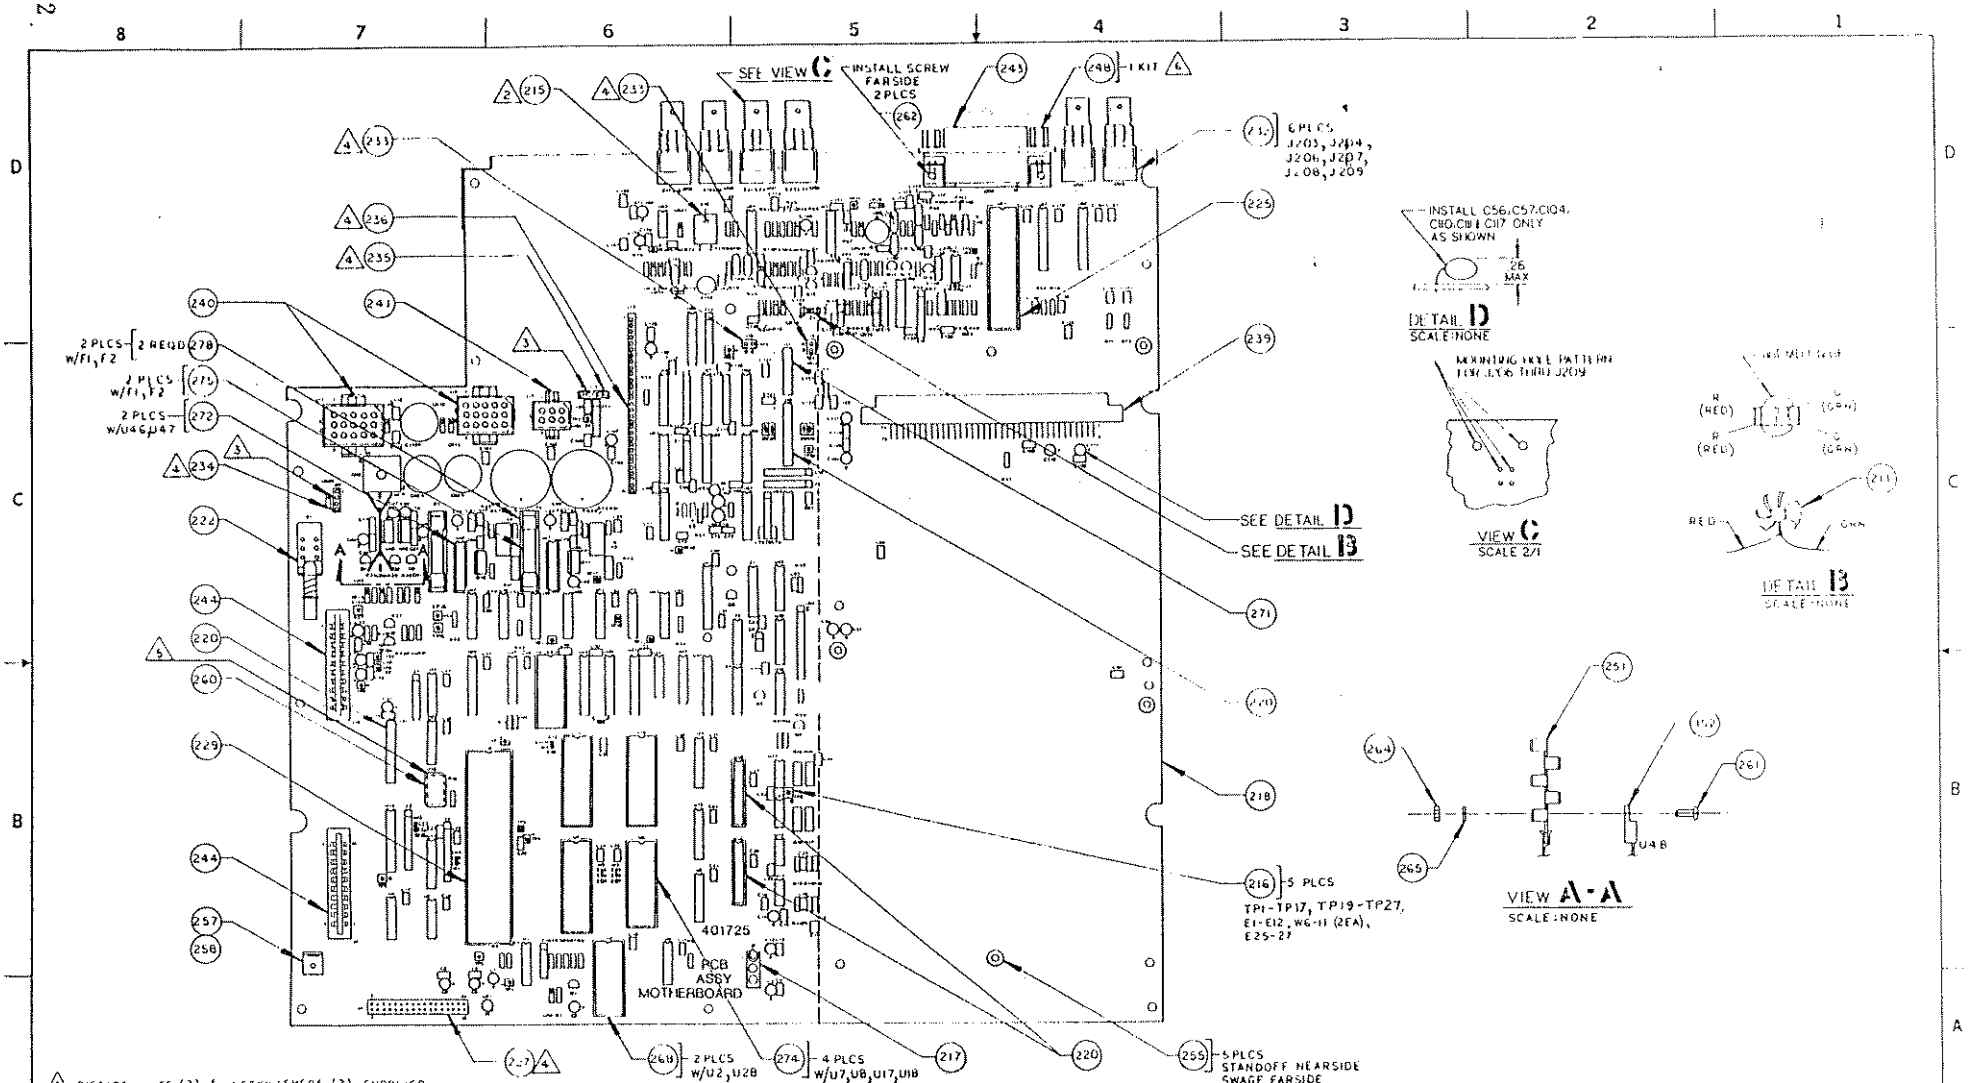


6. DISCARD NUTS (2) & LOCKWASHERS (2) SUPPLIED WITH ITEM 248.
5. SHARP CORNER INDICATES PIN 1 ON ITEM 282.
4. INSTALL WITH SHORT LEADS IN PCB.
3. AFTER INSTALLATION CUT PIN INDICATED FLUSH WITH HOUSING.
2. SOLDER ITEM 215 TO CASE OF Y1 AS SHOWN.
1. REFERENCE SCHEMATIC 431725.

NOTES: UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREIN DISCLOSED ARE PROPRIETARY TO RACAL-DANA INSTRUMENTS INC. AND SHALL NOT, WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL-DANA INSTRUMENTS INC. BE USED, RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL-DANA INSTRUMENTS INC. THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES CONSISTENT WITH EVALUATION AND USE OF EQUIPMENT MANUFACTURED BY RACAL-DANA INSTRUMENTS INC.


RACAL-DANA Instruments Inc.
4 GOODYEAR IRVINE CALIFORNIA 92714


DOCUMENT TITLE: PCB ASSY, MOTHERBOARD

| SIZE | CODE IDENT NO | DOCUMENT NO | REV |
|---|---|---|---|
| D | 21793 | 401725 | K |

SCALE —  SHEET 1 OF 1

401725 REV K

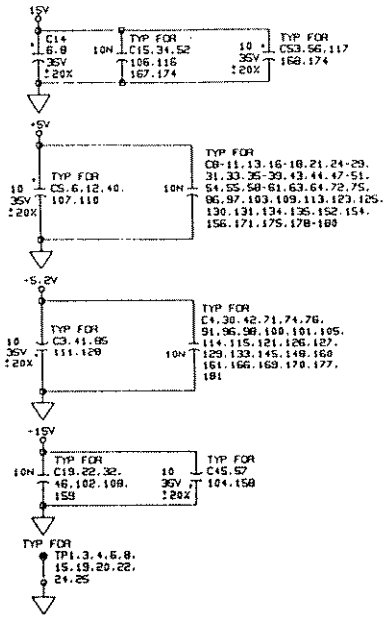

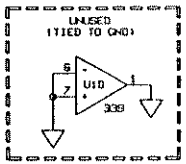
| | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| U60 | 75161 | 20 | | 10 | | | | |
| U67 | 75160 | 20 | | 10 | | | | |
| U66 | 710 | | | 1 | | | | |
| U65 | 74LS132 | 14 | | 7 | | | | |
| U63 | TL001 | | 7 | | | | | |
| U62 | 696 | 1 | | 5,6 | | | | |
| U61 | 9314A | 40 | | 20 | | | | |
| U57,58,60 | 10102 | | | 1,16 | | | 8 | |
| U55,59 | 10231 | | | 1,16 | | | 8 | |
| U54 | 10130 | | | 1,16 | | | 8 | |
| U52 | 10216 | | | 1,16 | | | 8 | |
| U51,53 | 10125 | 9 | | 16 | | | 8 | |
| U50,56 | 10124 | 9 | | 16 | | | 8 | |
| U49 | 7915 | | | 1 | | | | |
| U48 | 7815 | | | 2 | | | | |
| U42 | 74LS08 | 14 | | 7 | | | | |
| U41 | 74LS54 | 14 | | 7 | | | | |
| U40 | 74LS51 | 14 | | 7 | | | | |
| U39 | 74LS04 | 14 | | 7 | | | | |
| U38,43 | 74LS74 | 14 | | 7 | | | | |
| U37 | 74LS32 | 14 | | 7 | | | | |
| U33 | 74LS153 | 16 | | 8 | | | | |
| U32 | 74LS86 | 14 | | 7 | | | | |
| U29,31,34,44 | 74LS273 | 20 | | 10 | | | | |
| U28 | 8254 | 24 | | 12 | | | | |
| U27 | 74LS367 | 16 | | 8 | | | | |
| U26 | 83048 | 20 | | 10 | | | | |
| U25 | 74HC32 | 14 | | 7 | | | | |
| U24 | 74F32 | 14 | | 7 | | | | |
| U20 | 1494 | | 2 | 4 | | | | |
| U17,18 | 27512 | 28 | | 14 | | | | |
| U16 | OSCILLATOR | 14 | | 7 | | | | |
| U14,23 | OP07 | | 7 | | | | | |
| U13,30 | 74LS244 | 20 | | 10 | | | | |
| U12 | 74LS148 | 16 | | 8 | | | | |
| U11 | LF412 | | 8 | | | | | |
| U10,19 | 7545 | 18 | | | 2 | 3 | | |
| U9,15,22 | 74LS139 | 16 | | 8 | | | | |
| U7,9 | THP2016P | 28 | | 14 | | | | |
| U6 | 60000 | 14,49 | | 16,53 | | | | |
| U5 | 74F04 | 14 | | 7 | | | | |
| U4 | 74F00 | 14 | | 7 | | | | |
| U3 | 74F20 | 14 | | 7 | | | | |
| U2 | 5516A | 24 | | 12 | | | | |
| U1 | 339 | 3 | | 12 | | | | |
| REF DES | IC TYPE | +5V PIN NO. | +15V PIN NO. | GND PIN NO. | -12V PIN NO. | -5.2V PIN NO. | -15V PIN NO. | +5.2V PIN NO. |

IC POWER CONNECTIONS

| | |
|---|---|
| Z17 | |
| Y1 | |
| U12 | |
| U68 | U21 |
| TP27 | |
| T1 | |
| S1 | |
| RJ03 | R73,52,53 |
| Q16 | |
| L3 | |
| J209 | |
| F2 | |
| E27 | |
| CR26 | |
| C181 | C1,151 |
| HIGHEST REF. DESIGNATIONS | NOT USED |

| | | |
|---|---|---|
| Z17 | 10K | 4,5,6 |
| Z16 | 500 | 4,5,6,7,8 |
| Z15 | 470 | 5,6 |
| Z14 | 500 | 2,5,7 |
| Z11 | 500 | 6 |
| Z10 | 270 | 8 |
| Z9 | 150 | 8 |
| Z8 | 500 | 7,8 |
| Z6 | 6K | 11 |
| Z4 | 4.7K | 8 |
| Z3 | 10K | 10 |
| U64E | 3046 | 12,14 |
| U598 | 10231 | 10,11,12, 13,14,15 |
| U580 | 10102 | 9,12,13,15 |
| U57D | 10102 | 10,11,14 |
| U508 | 10124 | 2,4,5,6 |
| U37D | 74LS32 | 11,12,13 |
| U37C | 74LS32 | 1,2,3 |
| REF. DES. | TYPE | PINS |

UNUSED LOGIC & NETWORKS

PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREIN DISCLOSED ARE PROPRIETARY TO RACAL-DANA INSTRUMENTS INC. AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL-DANA INSTRUMENTS INC. BE USED, RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL-DANA INSTRUMENTS INC. THE INFORMATION HEREIN HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY NOT BE USED, DISCLOSED OR REPRODUCED EXCEPT IN ACCORDANCE WITH THE ABOVE RESTRICTIONS. ALL TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH ARE NOT A PUBLISHED NEW PRODUCT RELEASE FROM RACAL-DANA INSTRUMENTS INC.


6. FOR LINES TERMINATED WITH (2A3), '2' INDICATES SHEET #, 'A' INDICATES SHEET VERTICAL ZONE, '3' INDICATES SHEET HORIZONTAL ZONE.
5. FOR LINES TERMINATED WITH '(SHT 2)', GO TO INDICATED SHT. FOR ORIGIN.
4. CAPACITOR VALUES ARE IN MICROFARADS, ±10%, 100V UNLESS OTHERWISE SPECIFIED.
3. RESISTOR VALUES ARE IN OHMS, ±5%, 1/4W UNLESS OTHERWISE SPECIFIED.
2. RESISTOR NETWORKS ±2%.
1. CHOKES ARE IN MICROHENRYS.


DOCUMENT TITLE: SCHEM, MOTHERBOARD


| SIZE | CODE IDENT NO. | DOCUMENT NO. | REV |
|---|---|---|---|
| D | 21793 | 431725 | E |


SCALE — SHEET 1 OF 12


DOC NO 431725

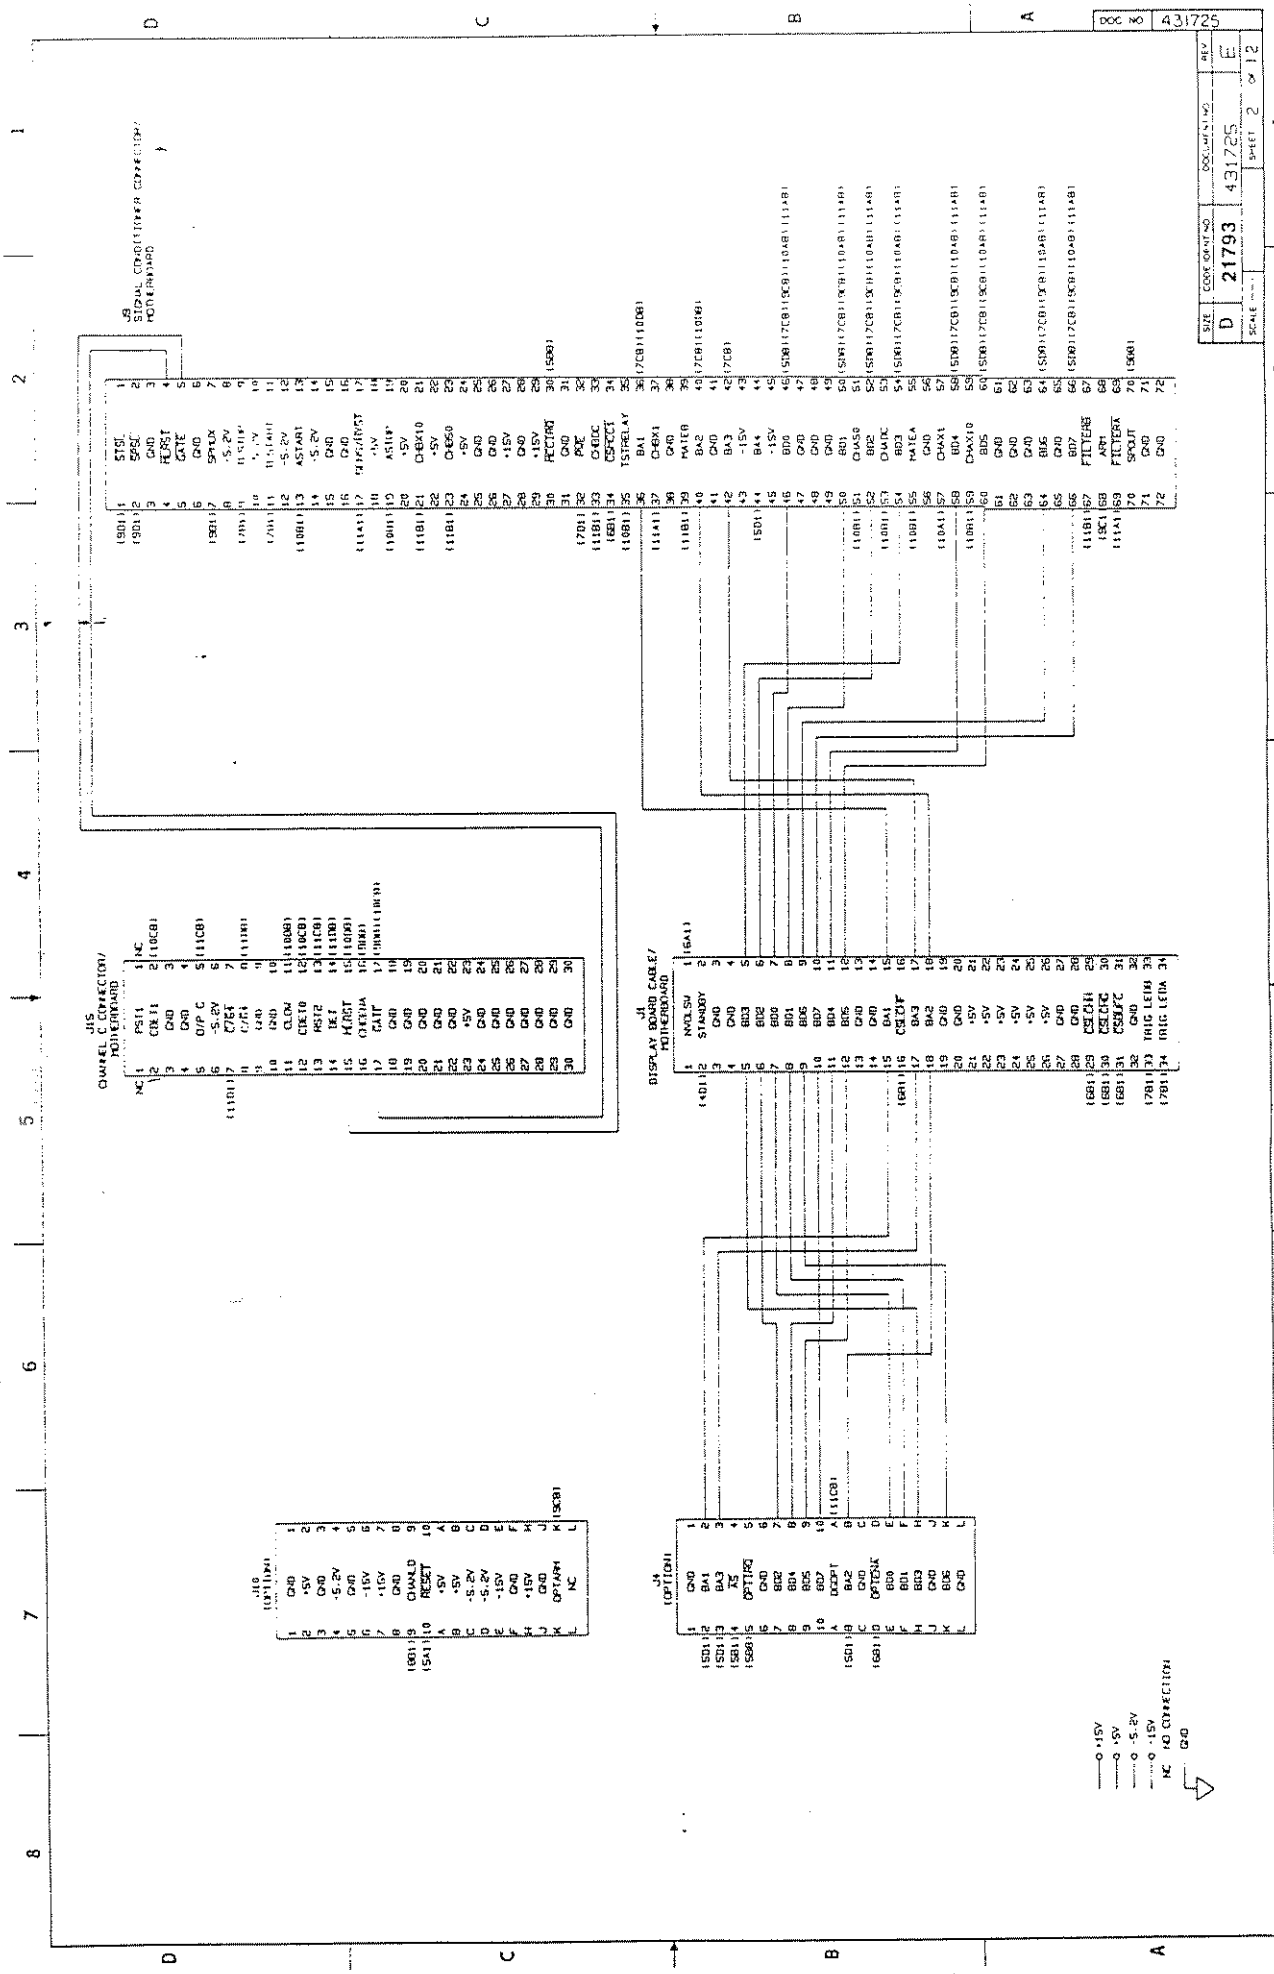


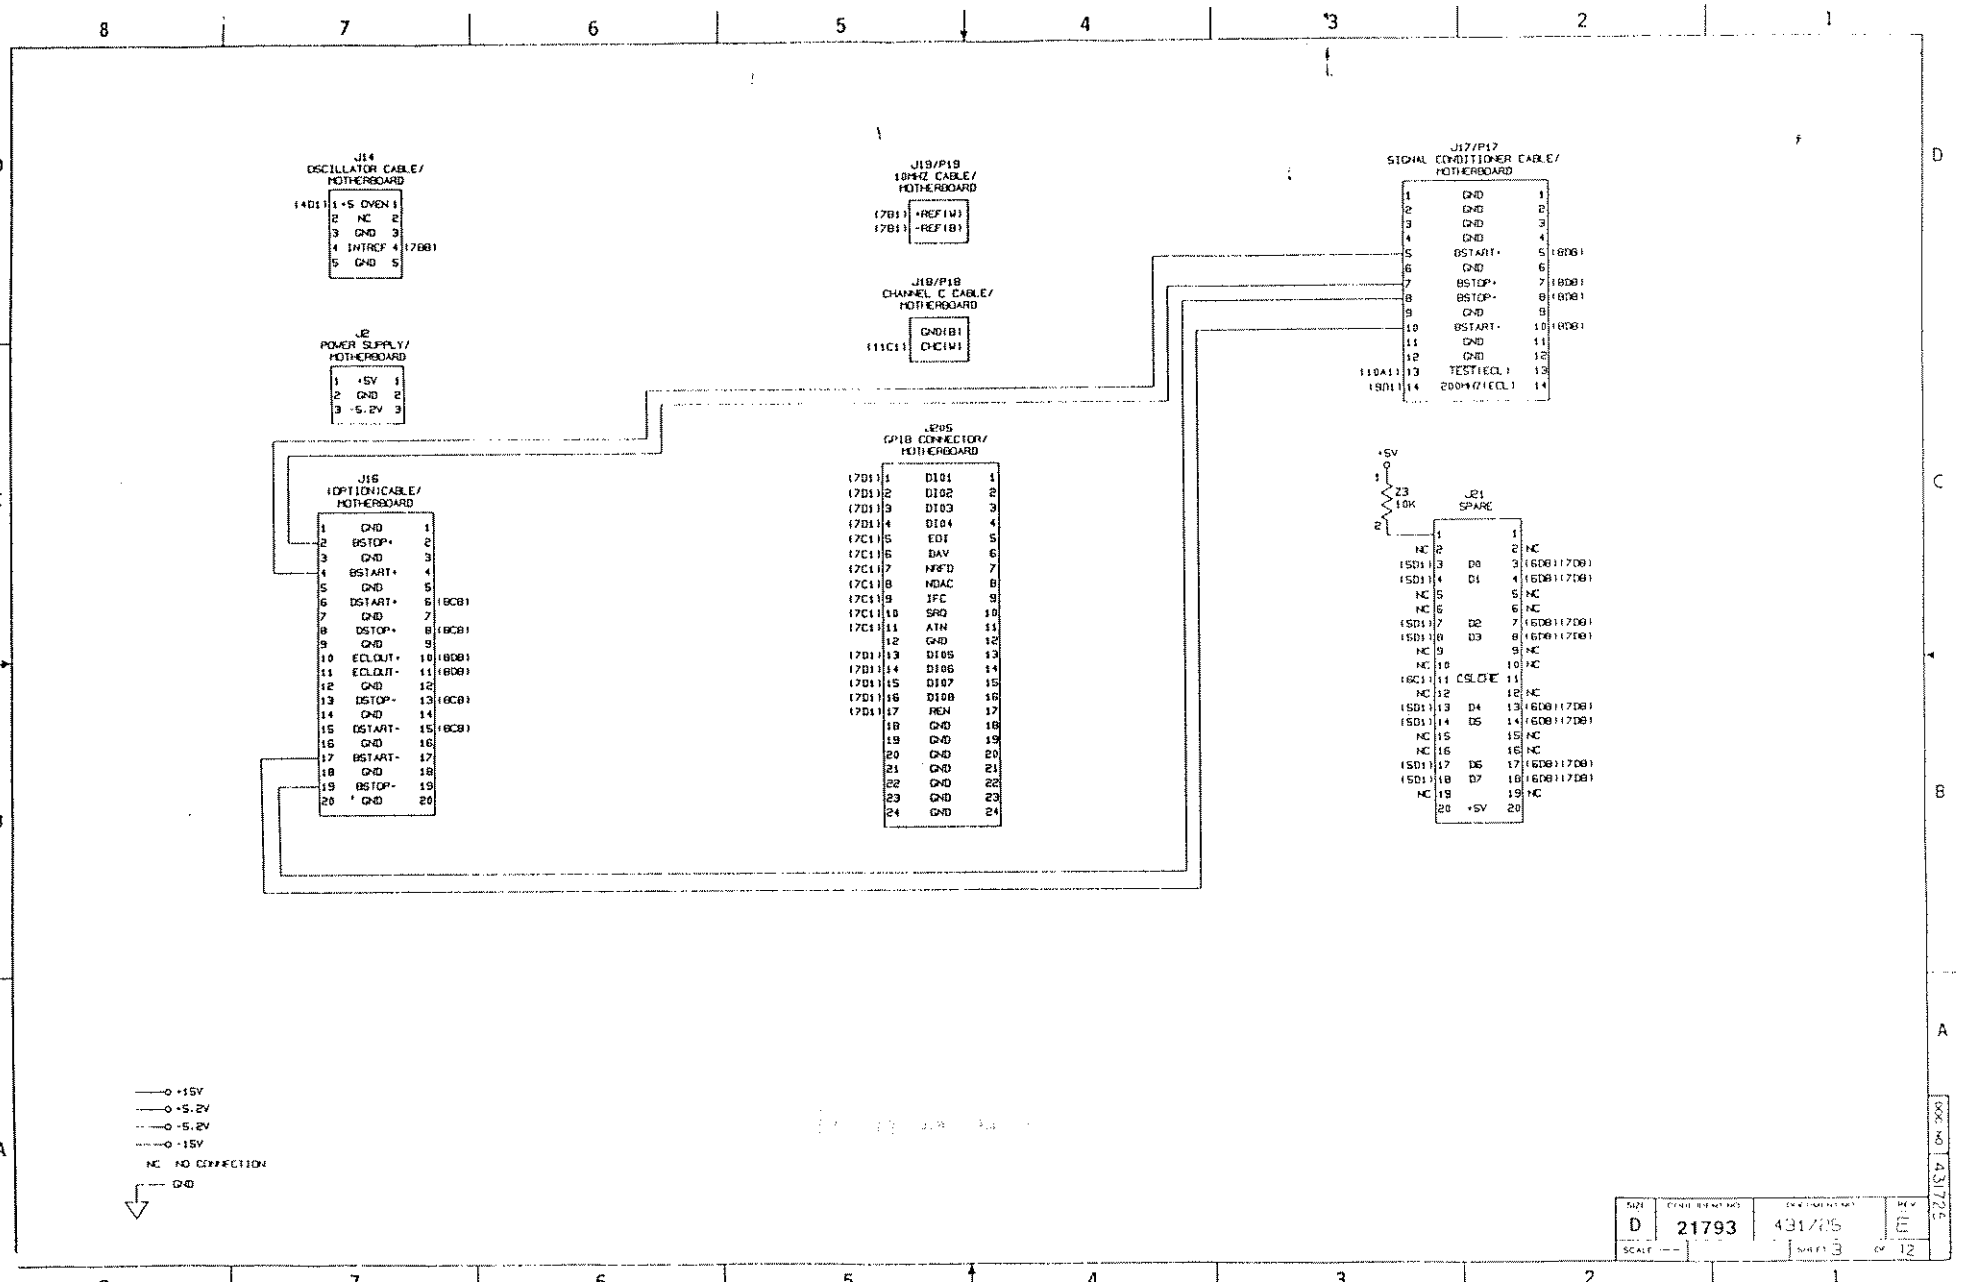

J14
OSCILLATOR CABLE/
MOTHERBOARD
J19/P19
10MHZ CABLE/
MOTHERBOARD
J17/P17
SIGNAL CONDITIONER CABLE/
MOTHERBOARD
J18/P18
CHANNEL C CABLE/
MOTHERBOARD
J2
POWER SUPPLY/
MOTHERBOARD
J16
(OPTION)CABLE/
MOTHERBOARD
J285
GPIB CONNECTOR/
MOTHERBOARD
J21
SPARE
+5V
Z3
10K
+15V
+5.2V
-5.2V
-15V
NC NO CONNECTION
GND
SIZE
D
CAGE NO.
21793
SCALE
SHEET 3 OF 12
REV
E

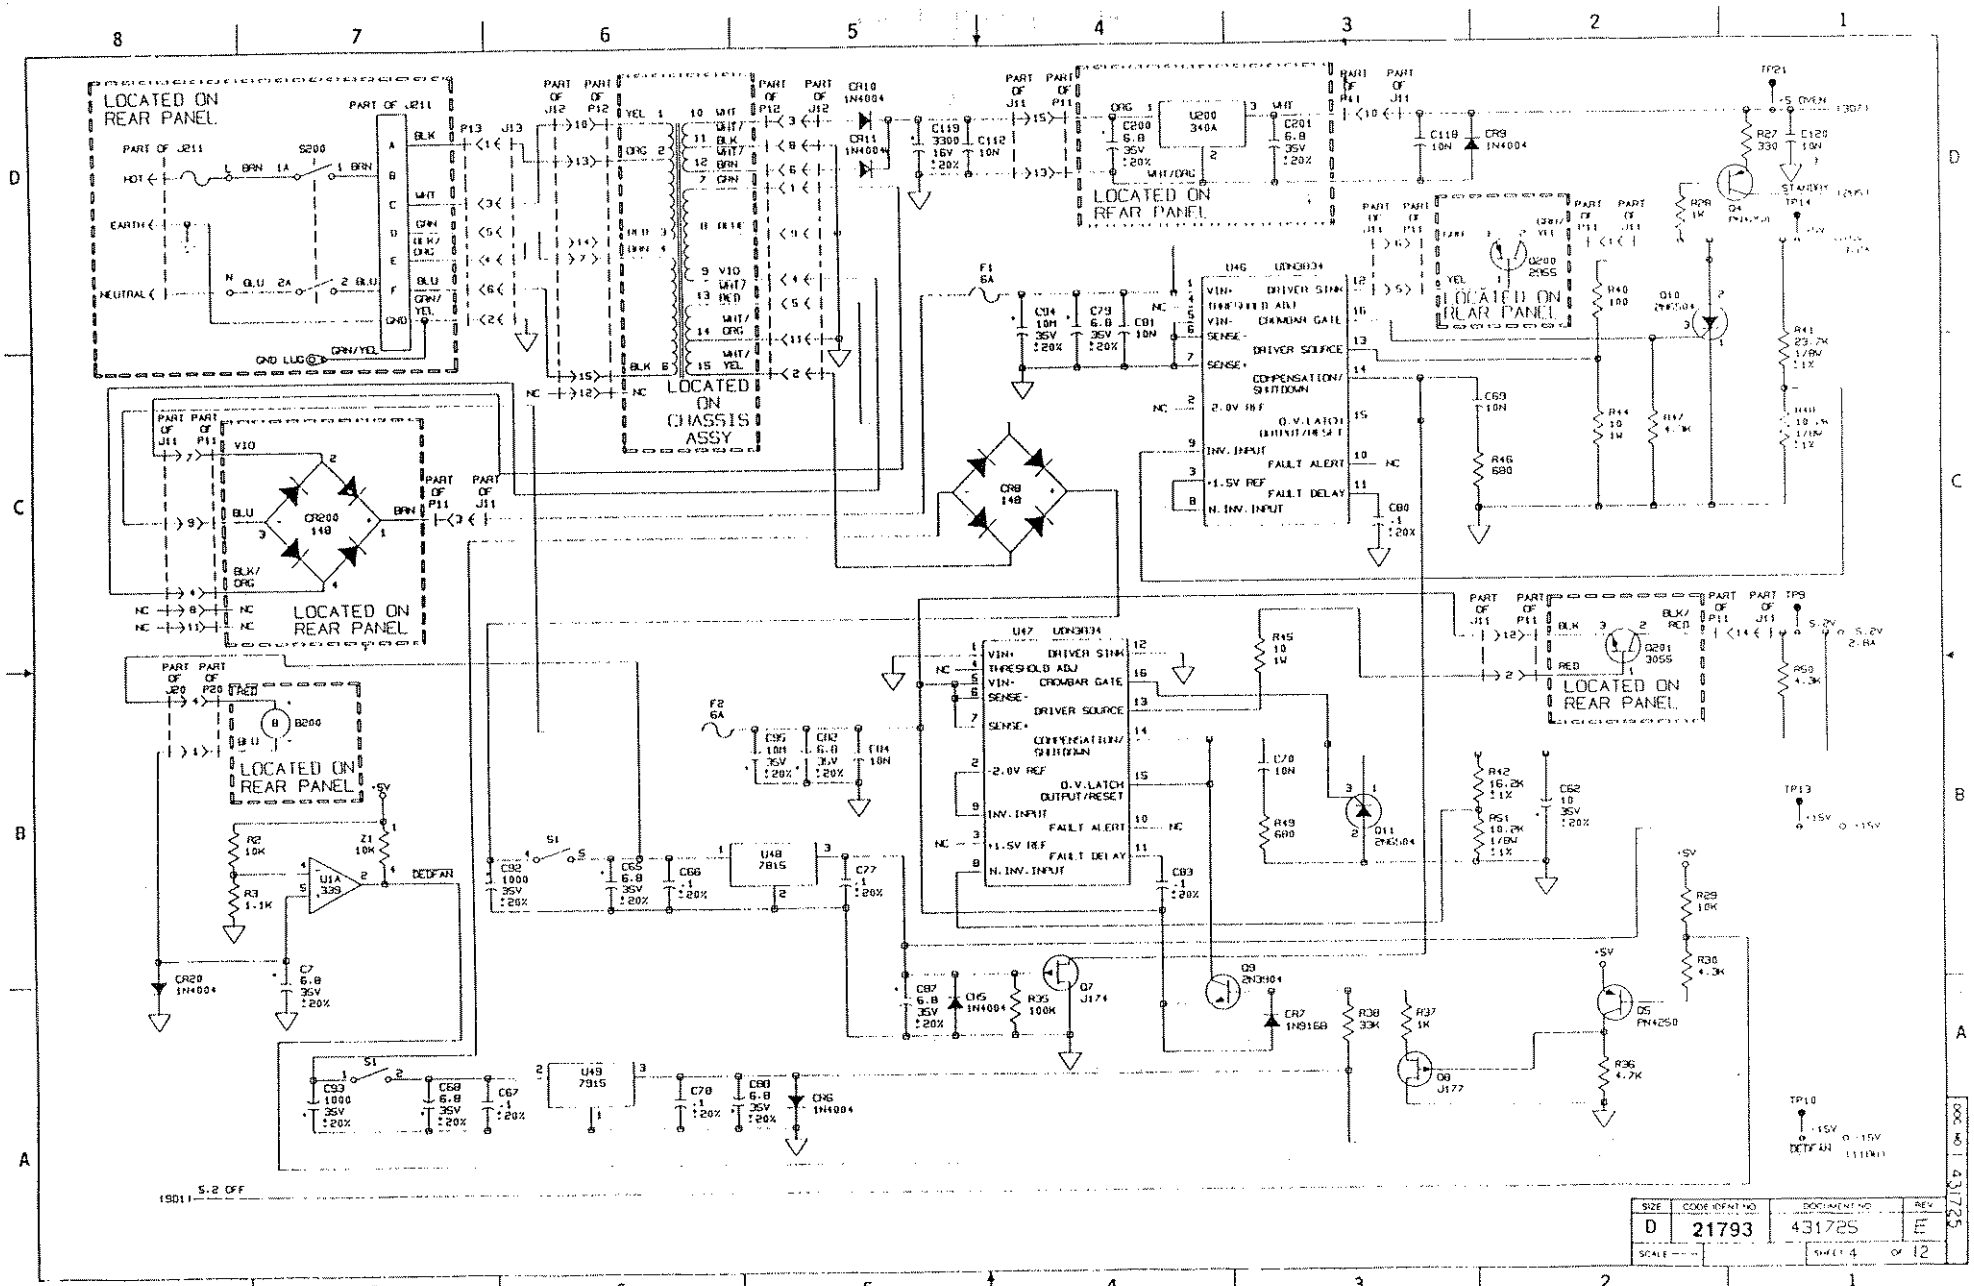
LOCATED ON REAR PANEL
LOCATED ON CHASSIS ASSY
PART OF J211
S200
HOT
EARTH
NEUTRAL
GND LUG
GRN/YEL
BRN 1A
BLU 2A
BLK
WHT
GRN
ORG
BLK/ORG
BLU
YEL
P13
J13
J12
P12
J11
P11
CR10 1N4004
CR11 1N4004
CR9 1N4004
C119 3300 16V ±20%
C112 10N
C118 10N
C120 10N
U200 340A
C200 6.8 35V ±20%
C201 6.8 35V ±20%
WHT/ORG
TP21 +5 OVEN
R27 330
Q4 2N3904
STANDBY
TP14 +15V
R28 1K
Q200 2955
R40 100
Q10 2N3904
R41 23.7K 1/8W ±1%
R44 10 1W
R47 4.7K
R48 10.2K 1/8W ±1%
C69 10N
R46 680
U46 UDN6034
VIN+ DRIVER SINK
THRESHOLD ADJ
VIN- CROWBAR GATE
SENSE-
DRIVER SOURCE
SENSE+
COMPENSATION/ SHUTDOWN
2.0V REF
O.V.LATCH OUTPUT/RESET
INV. INPUT
FAULT ALERT
+1.5V REF
FAULT DELAY
N. INV. INPUT
C80 .1 ±20%
F1 6A
C74 10M 35V ±20%
C79 6.8 35V ±20%
C81 10N
CR8 140
C200 140
V10
BLU
BRN
BLK/ORG
LOCATED ON REAR PANEL
F2 6A
C95 10M 35V ±20%
C82 6.8 35V ±20%
C84 10N
U47 UDN6034
R45 10 1W
C70 10N
R49 680
Q11 2N6504
R42 16.2K ±1%
R51 10.2K 1/8W ±1%
C62 10 35V ±20%
Q201 3055
TP9 +5.2V
R50 4.3K
TP13 +15V
S1
C92 1000 35V ±20%
C65 6.8 35V ±20%
C66 .1 ±20%
U48 7815
C77 .1 ±20%
C87 6.8 35V ±20%
CR5 1N4004
R35 100K
Q7 J174
Q9 2N3904
CR7 1N9168
R38 33K
R37 1K
Q8 J177
R29 10K
R30 4.3K
Q5 PN4250
R36 4.7K
TP10 +15V DETFAN
U2 339
R2 10K
Z1 10K
R3 1.1K
DETFAN
CR20 1N4004
C7 6.8 35V ±20%
C93 1000 35V ±20%
C68 6.8 35V ±20%
C67 .1 ±20%
U49 7915
C78 .1 ±20%
C80 6.8 35V ±20%
CR6 1N4004
+5V
+15V
-15V
5.2 OFF
SIZE D
CODE IDENT NO 21793
DOCUMENT NO 431725
REV E
SCALE
SHEET 4 OF 12
431725

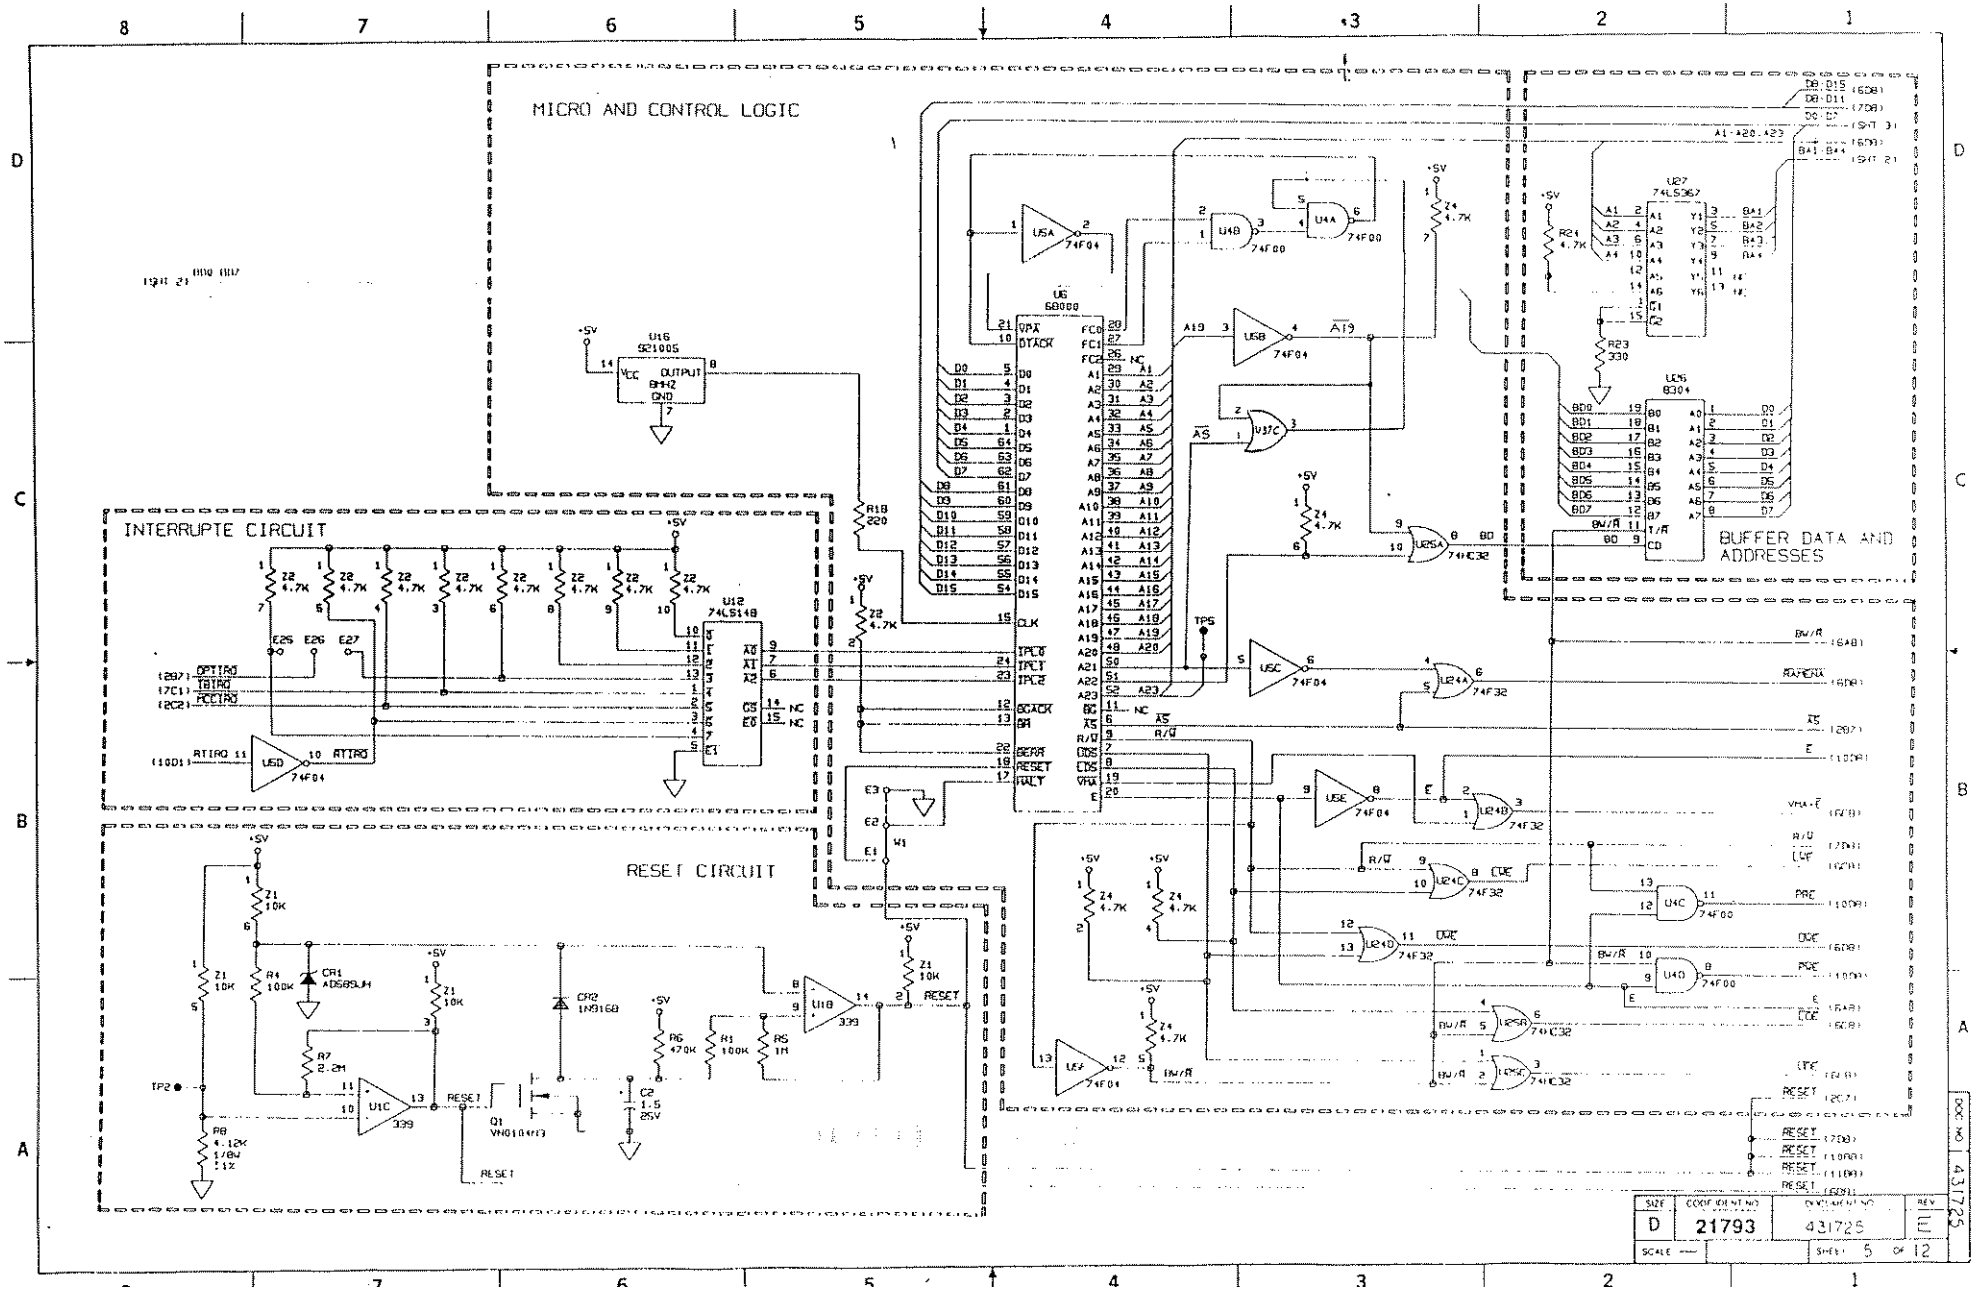
MICRO AND CONTROL LOGIC
INTERRUPTE CIRCUIT
RESET CIRCUIT
BUFFER DATA AND ADDRESSES
U6 68000
U12 74LS148
U16 SP1005
U27 74LS367
U25 8304
U1C 339
U1D 339
U5A 74F04
U5B 74F04
U5C 74F04
U5D 74F04
U5E 74F04
U5F 74F04
U4A 74F00
U4B 74F00
U4C 74F00
U4D 74F00
U3C 74F08
U24A 74F32
U24B 74F32
U24C 74F32
U24D 74F32
U25A 74HC32
U25B 74HC32
U25C 74HC32
U25D 74HC32
RESET
TPS
DOC NO 431725
SIZE D
CODE IDENT NO 21793
DRAWING NO 431725
REV H
SHEET 5 OF 12

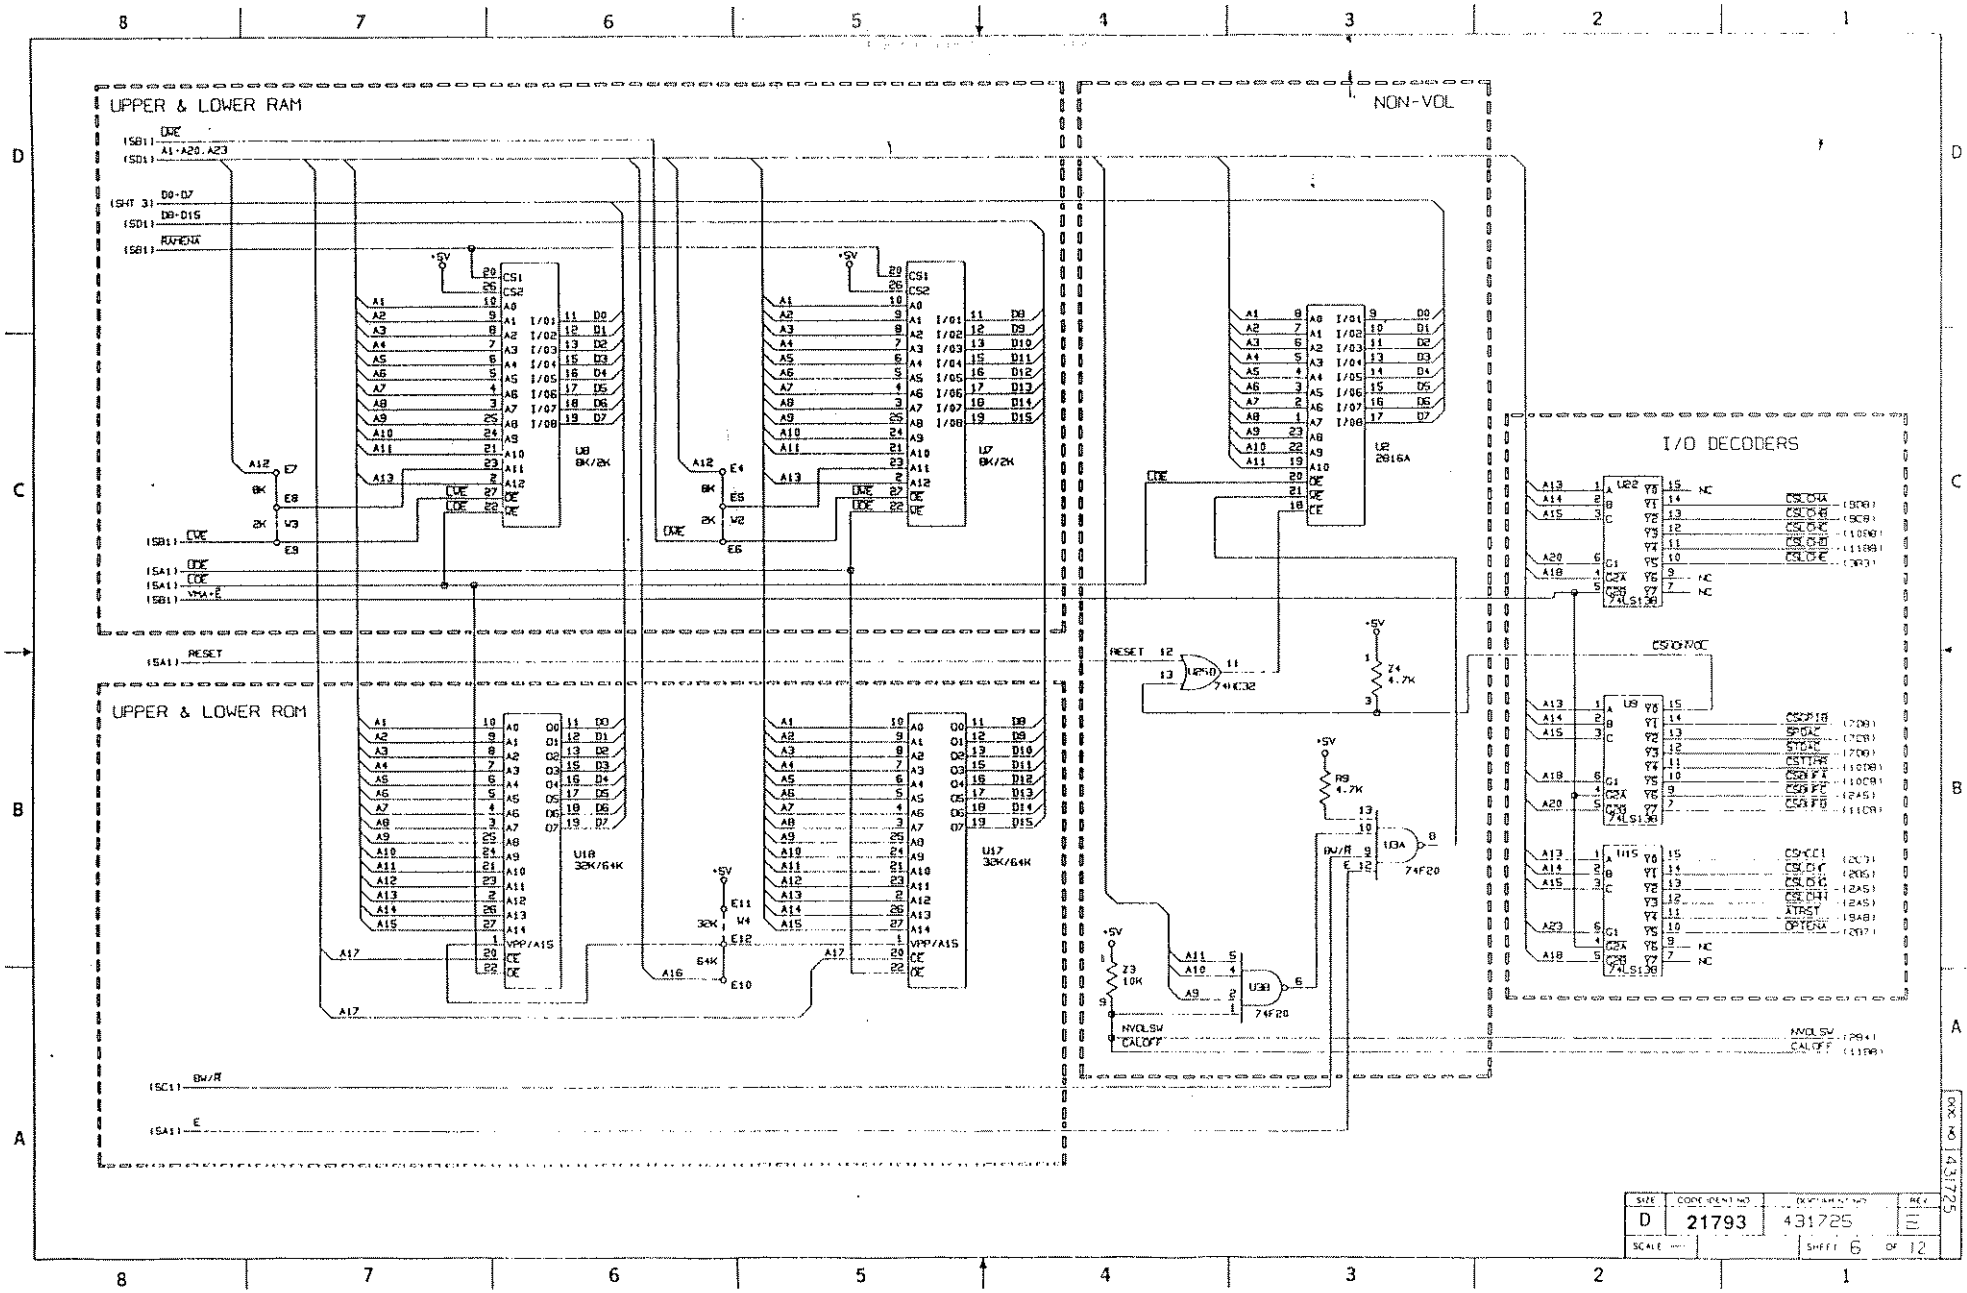

UPPER & LOWER RAM
NON-VOL
I/O DECODERS
UPPER & LOWER ROM
U8 8K/2K
U7 8K/2K
U18 32K/64K
U17 32K/64K
U9 2816A
U22 74LS139
U115 74LS139
U50 74HC32
U33 74F20
U3A 74F20
RESET
R/W
E
NVOLSW
CALOFF
SIZE
D
CODE IDENT NO
21793
DRAWING NO
431725
REV
SCALE
SHEET 6 OF 12

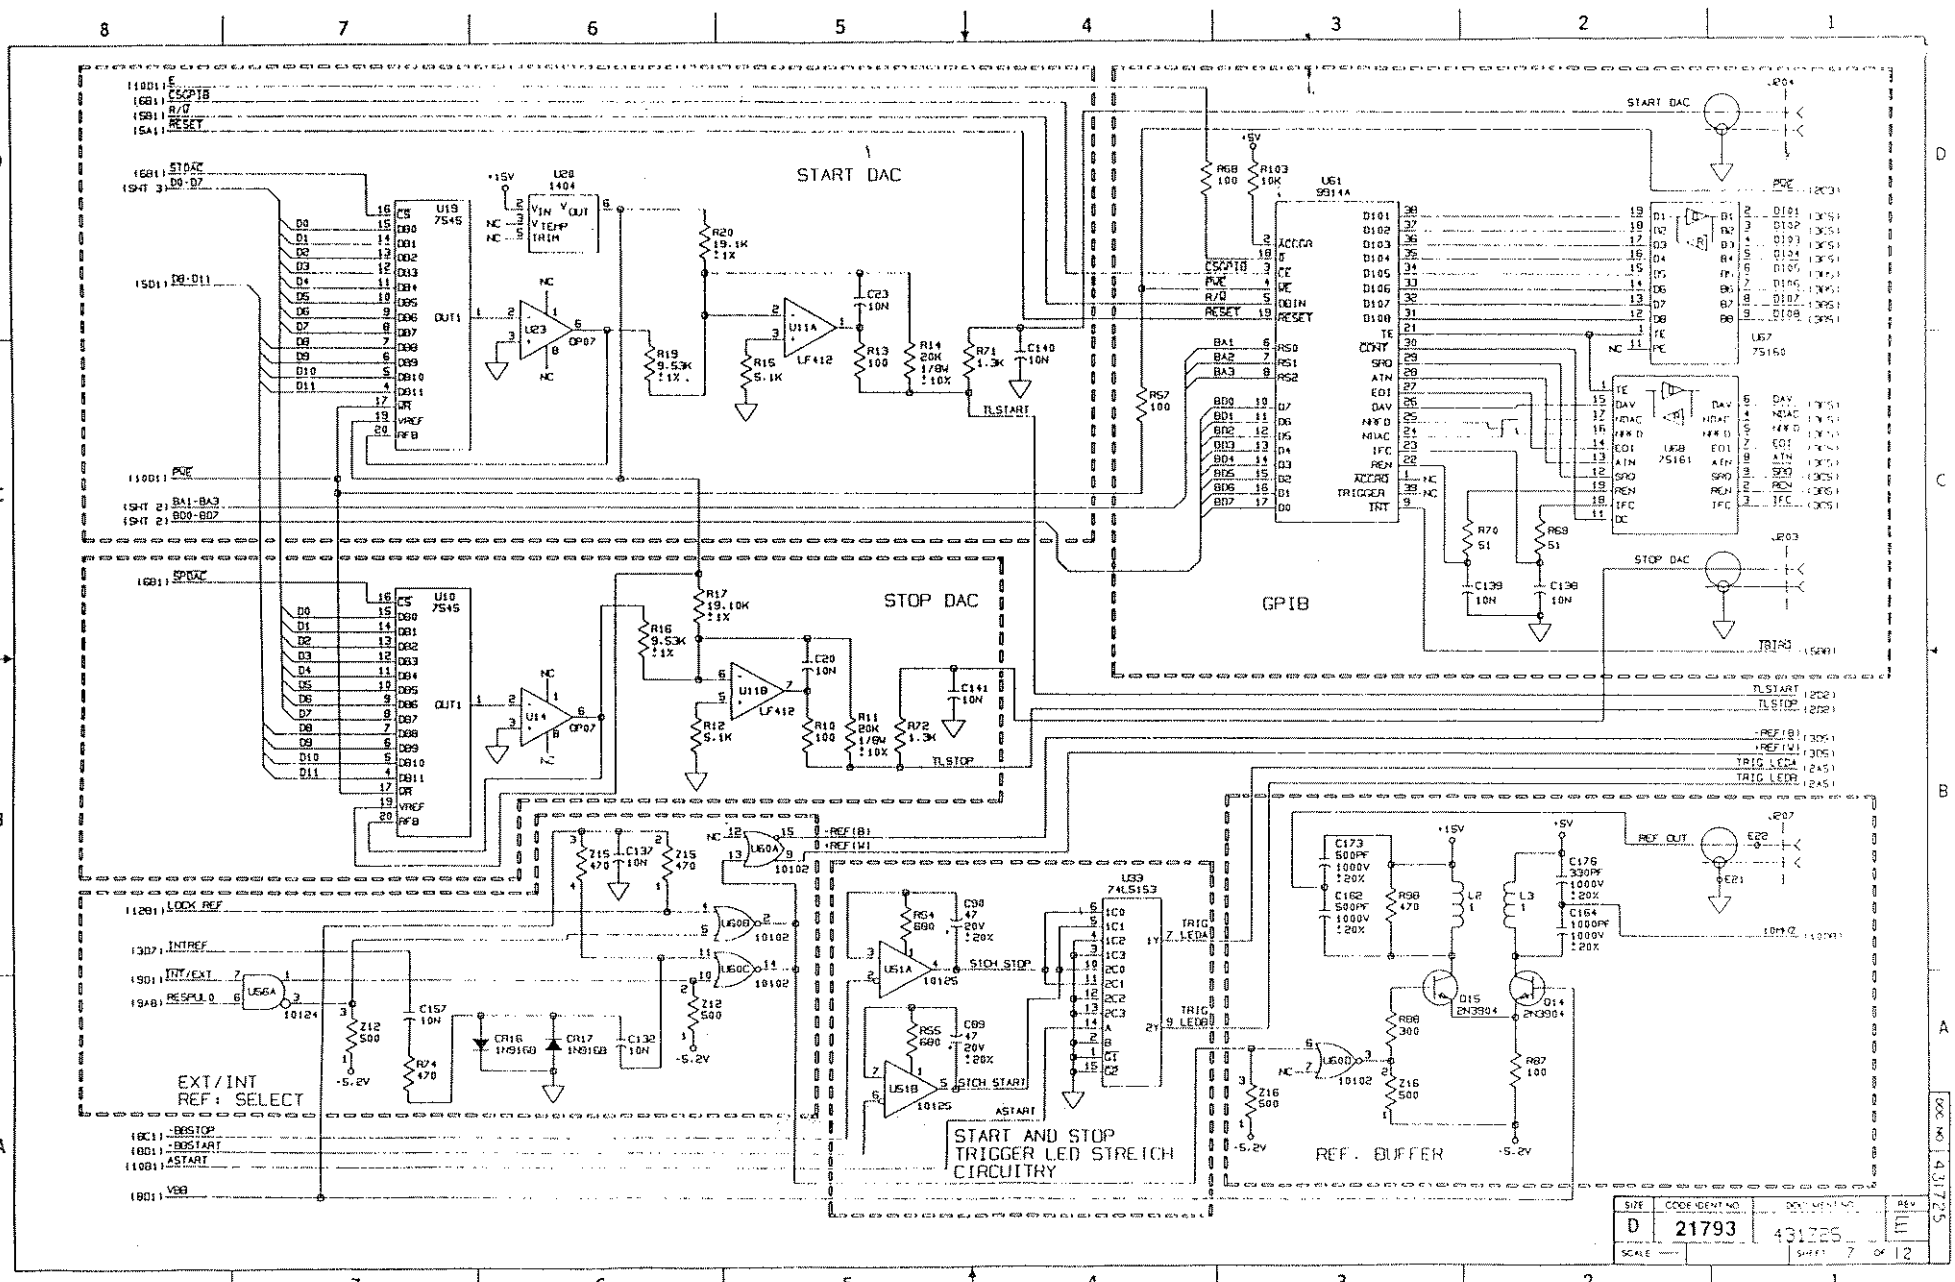
START DAC
STOP DAC
GPIB
EXT/INT REF: SELECT
START AND STOP TRIGGER LED STRETCH CIRCUITRY
REF. BUFFER
U19 7545
U10 7545
U23 OP07
U14 OP07
U11A LF412
U11B LF412
U28 1404
U61 99114A
U57 75160
U58 75161
U60A 10102
U60B 10102
U60C 10102
U60D 10102
U56A 10124
U51A 10125
U51B 10125
U59 74LS153
D15 2N3904
D14 2N3904
CR16 1N9160
CR17 1N9160
START DAC
STOP DAC
GPIB
REF OUT
TRIG LED4
TRIG LED8
LOCK REF
INTREF
INT/EXT
REFSEL 0
-BSTOP
-BSTART
ASTART
VBB
TLSTART
TLSTOP
STCH START
STCH STOP
SIZE D
CODE IDENT NO 21793
DOC NO 431725
REV E
SCALE —
SHEET 7 OF 12

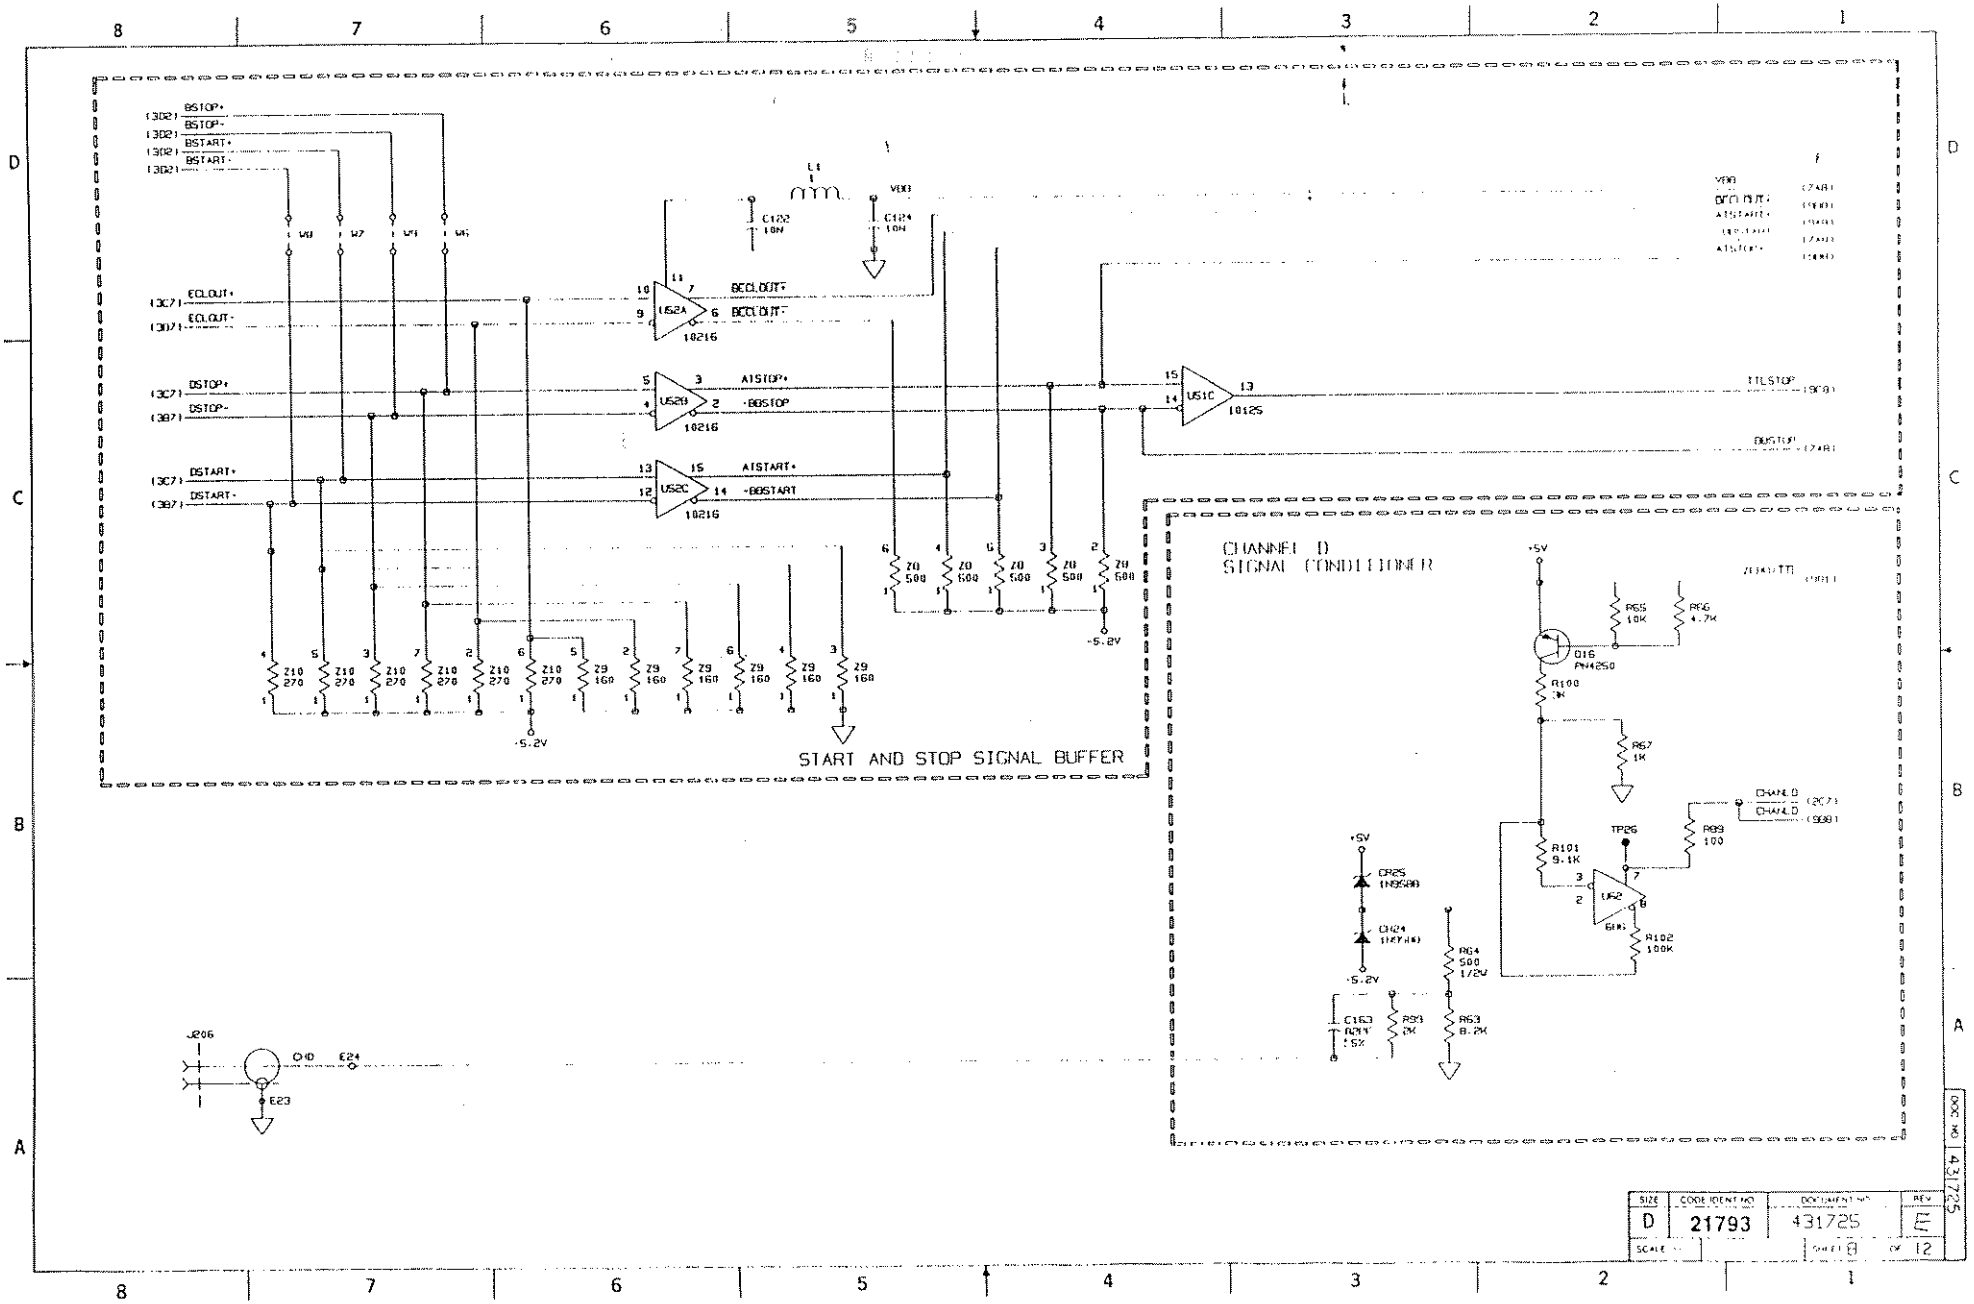



| SIZE | CODE IDENT NO | DOCUMENT NO | REV |
|---|---|---|---|
| D | 21793 | 431725 | W |
| SCALE | | SHEET 8 OF 12 | |


DOC NO 431725

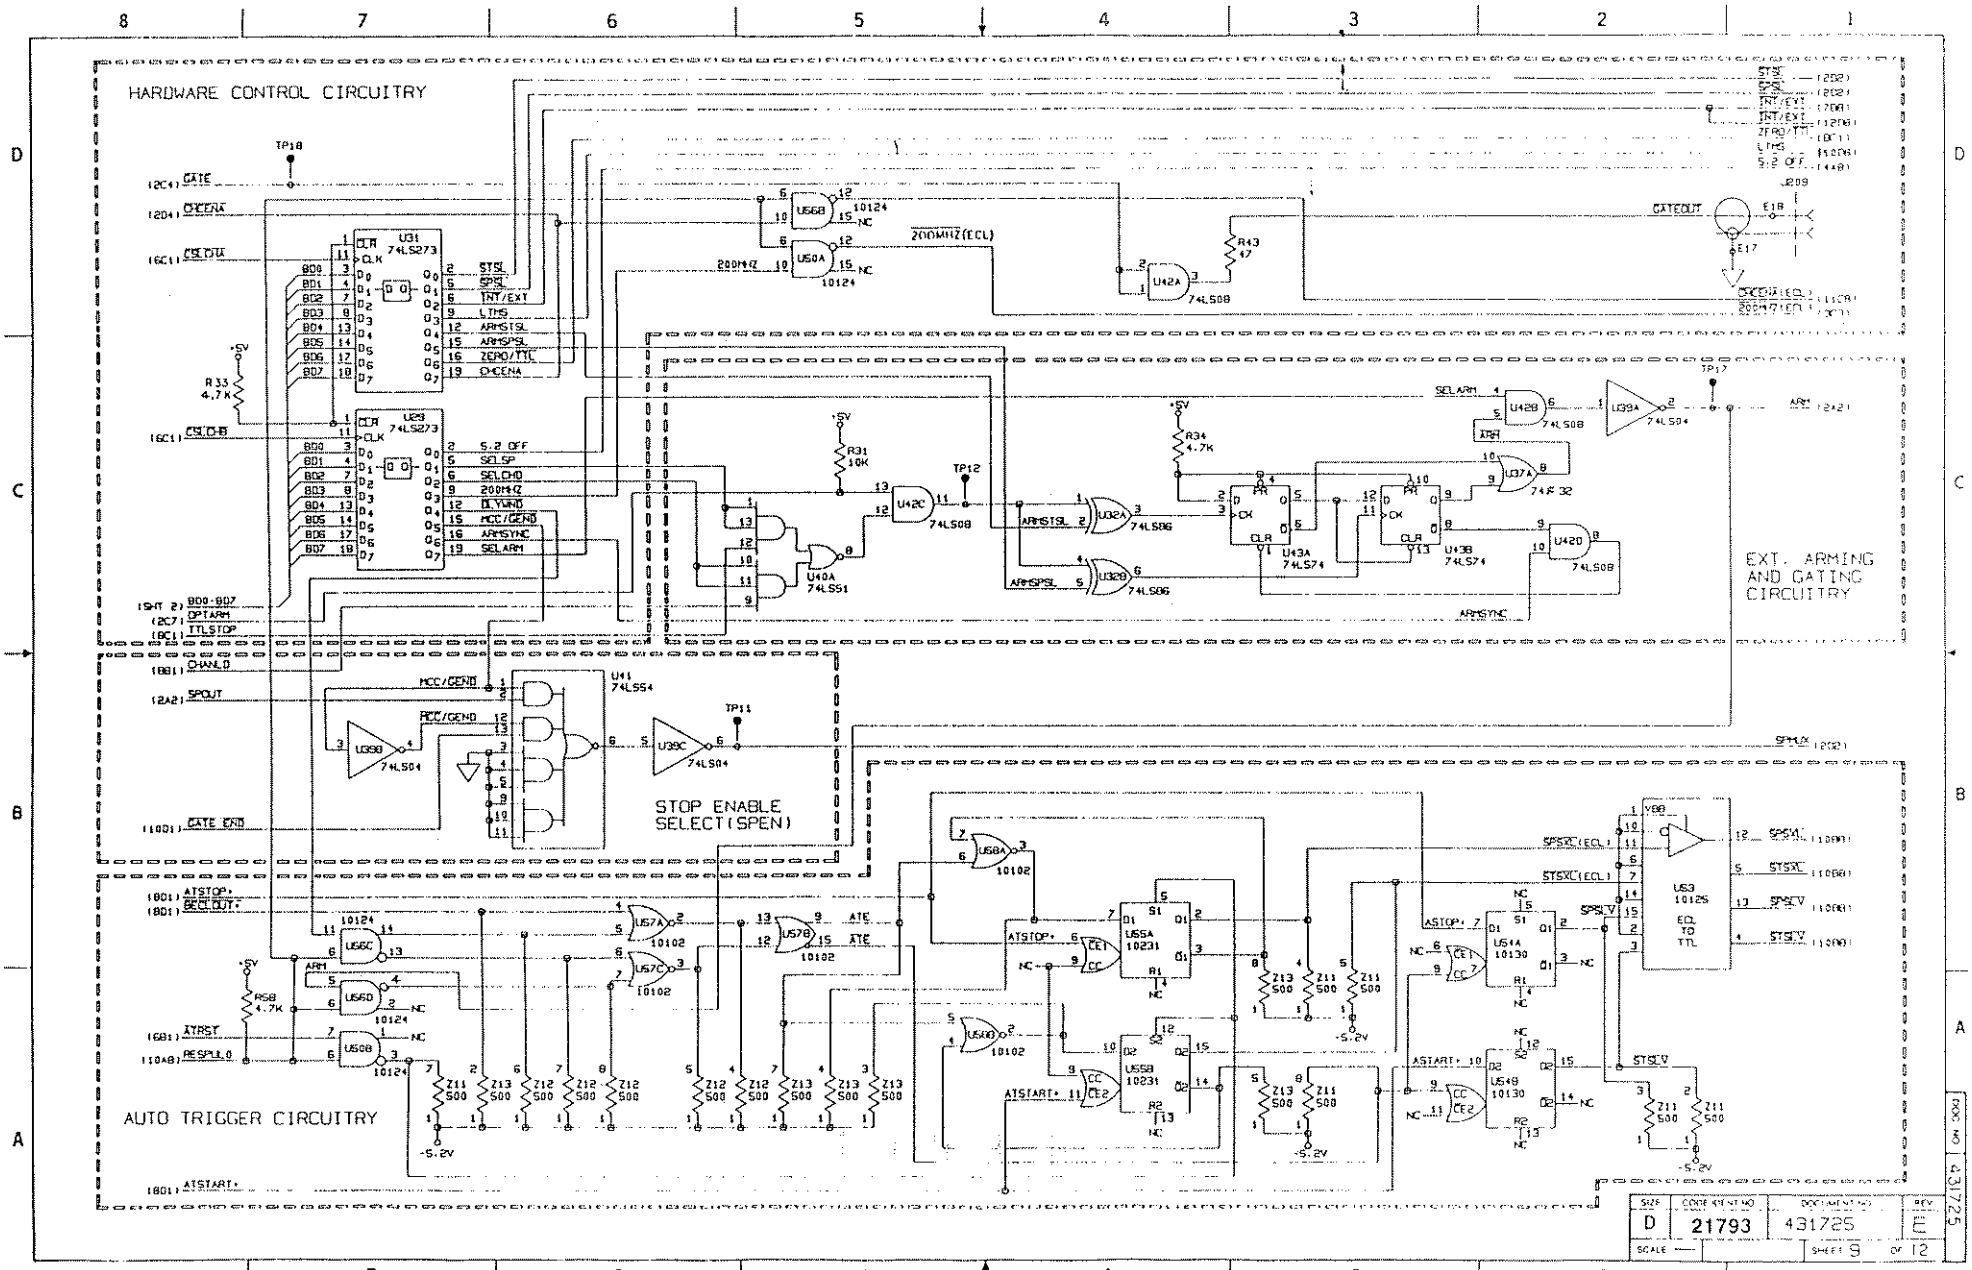




| SIZE | CONFIGURATION NO | DOCUMENT NO | REV |
|---|---|---|---|
| D | 21793 | 431725 | E |
| SCALE | | SHEET 9 OF 12 | |

DOC NO 431725

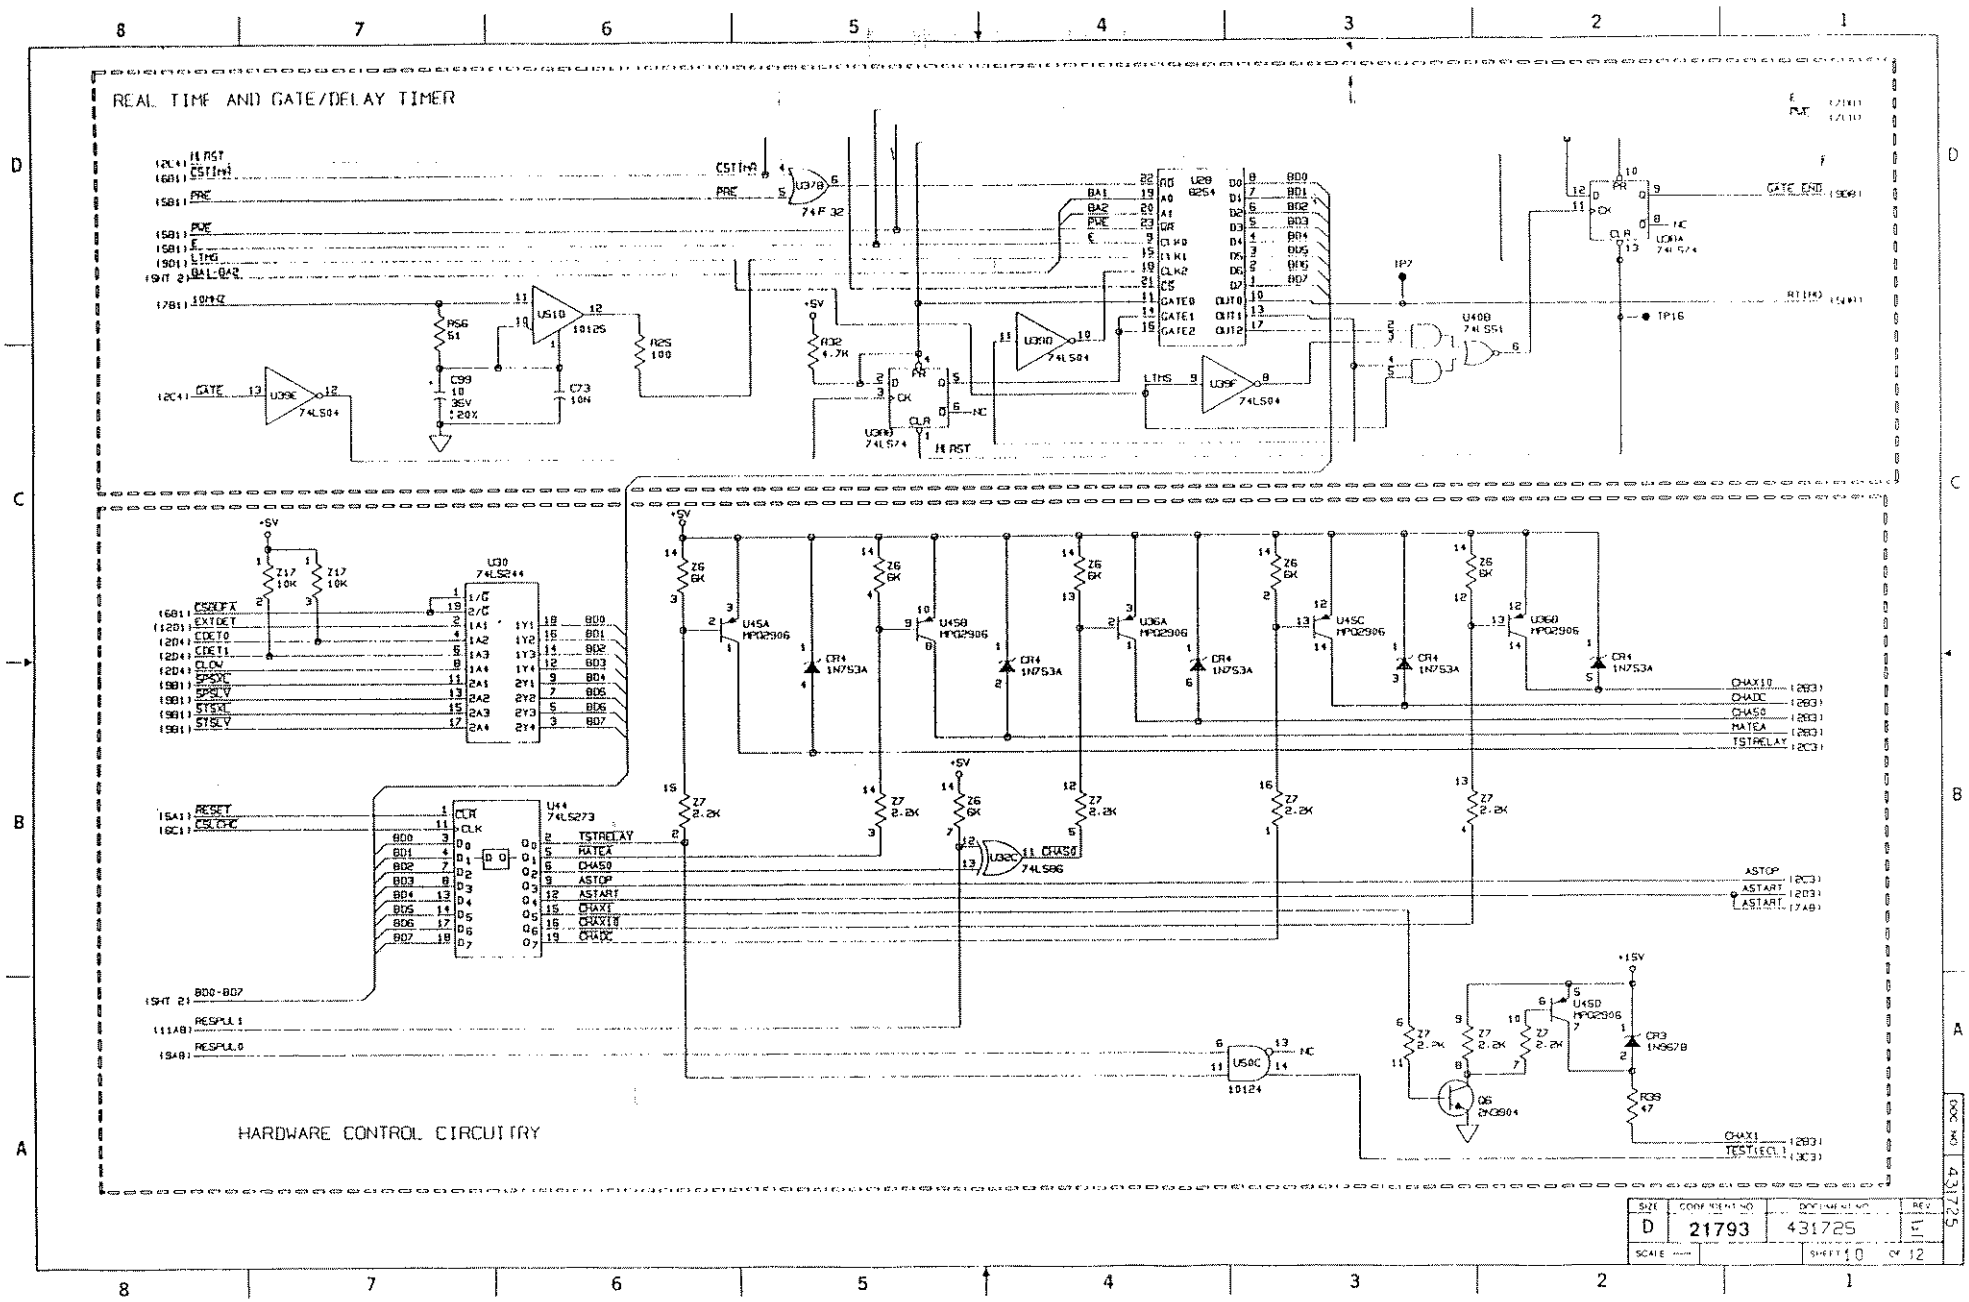
REAL TIME AND GATE/DELAY TIMER
HARDWARE CONTROL CIRCUITRY
D
21793
431725

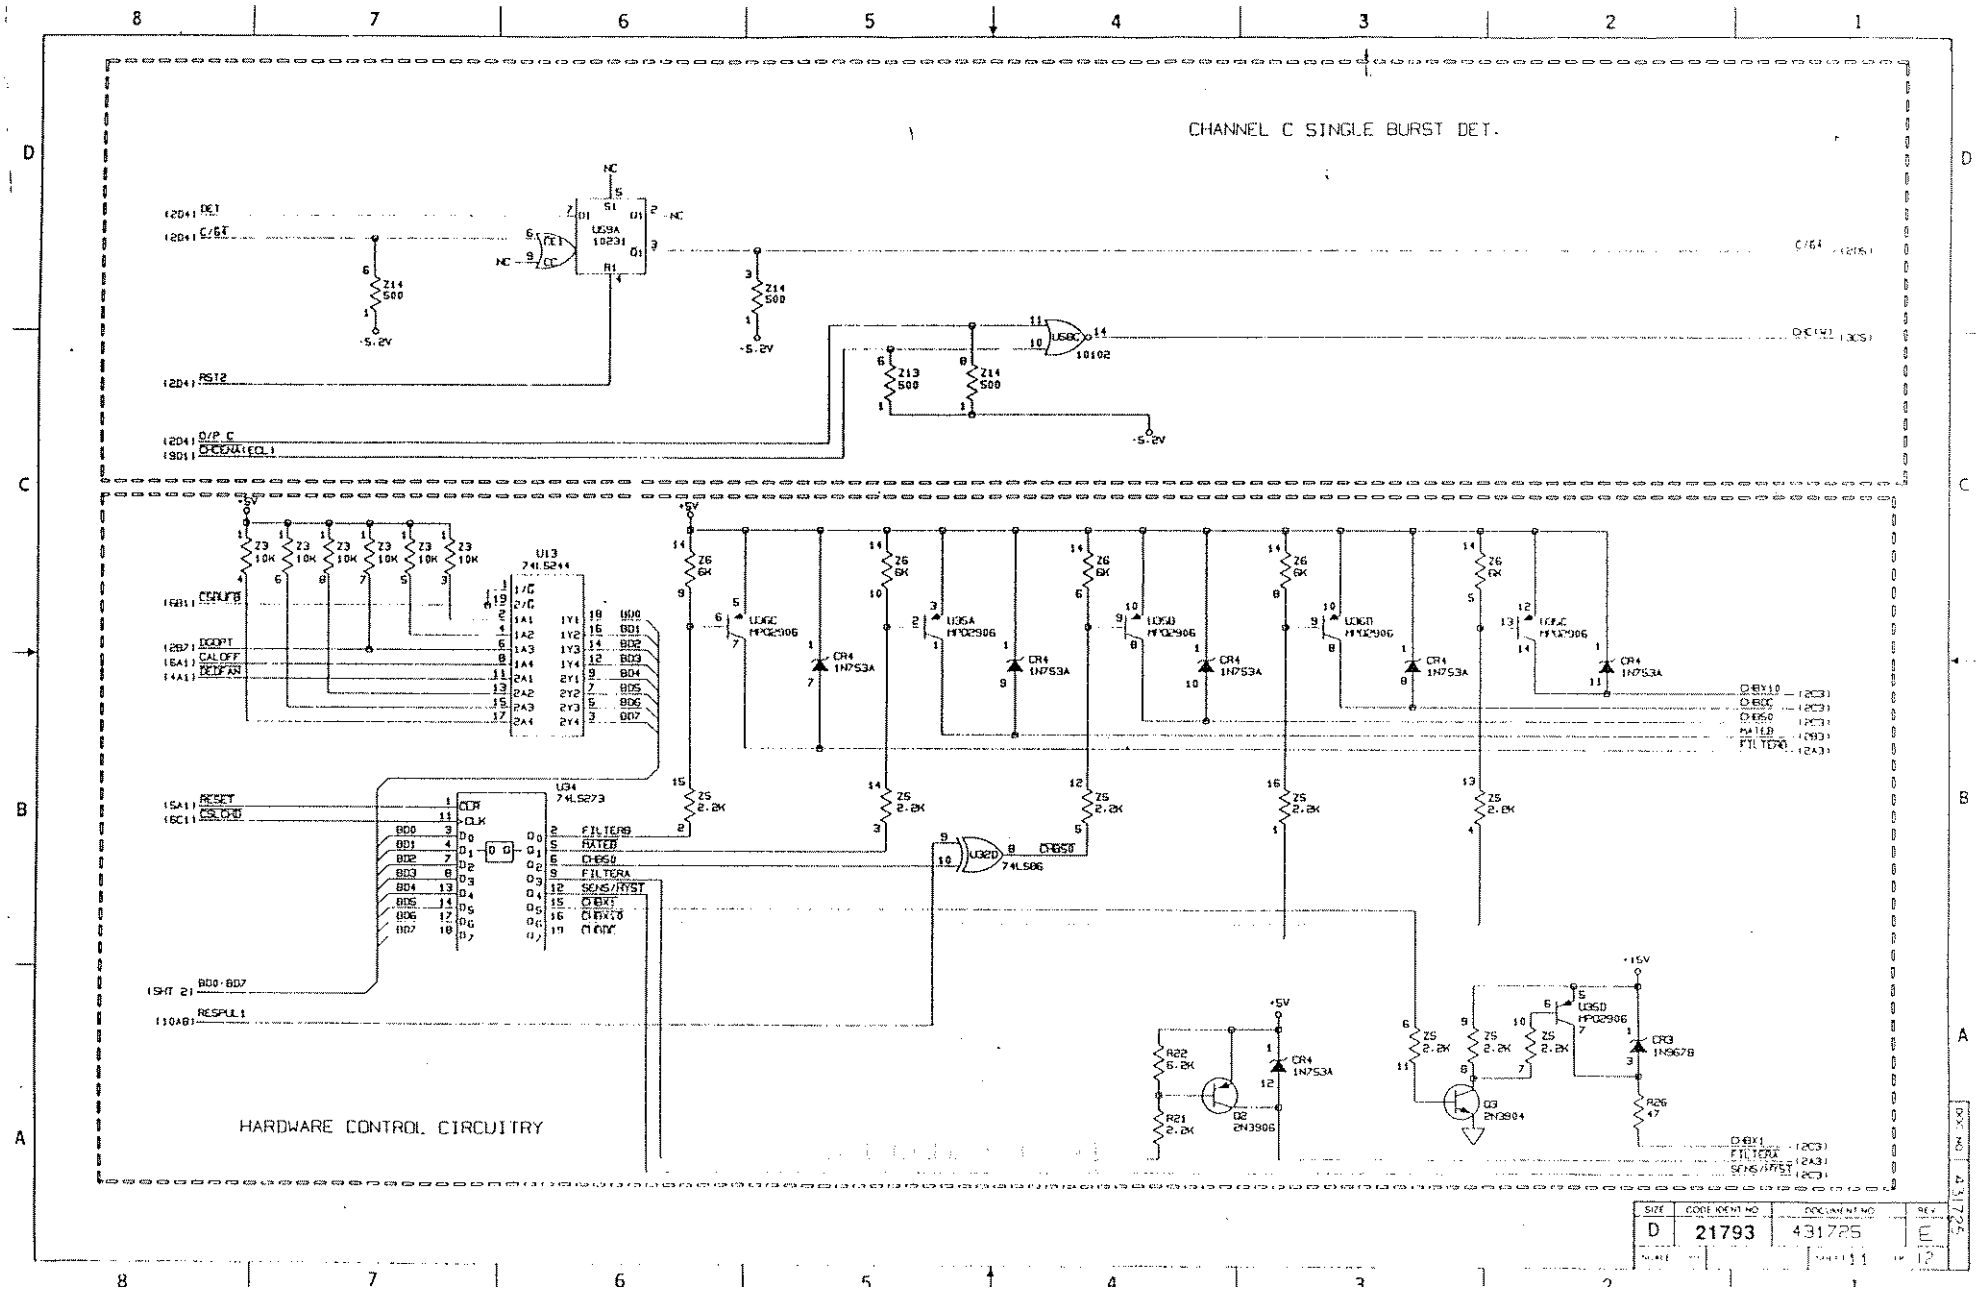
CHANNEL C SINGLE BURST DET.
HARDWARE CONTROL CIRCUITRY
DET
C/BT
RST2
O/P C
CHCENA(EQL)
U59A 10231
U59C 10102
Z14 500
Z13 500
-5.2V
U13 74LS244
CCNTLB
DCOPT
CALOFF
DETPAN
BD0-BD7
RESPUL1
U34 74LS273
RESET
CSLCHB
U32D 74LS86
CHBSB
FILTERB
RATEB
CHBSA
FILTERA
SENS/RYST
CHBX1
CHBX2
CHBXC
Z6 6K
Z5 2.2K
U35C MPQ2906
U35A MPQ2906
U35B MPQ2906
U35D MPQ2906
U35C MPQ2906
CR4 1N753A
CR3 1N967B
Q3 2N3904
Q2 2N3906
R22 6.2K
R21 2.2K
R26 47
+5V
+15V
CHBX1
CHBXC
CHBSB
RATEB
FILTERB
FILTERA
SENS/RYST
SIZE D
CODE IDENT NO 21793
DOCUMENT NO 431725
REV E
SHEET 11 OF 12

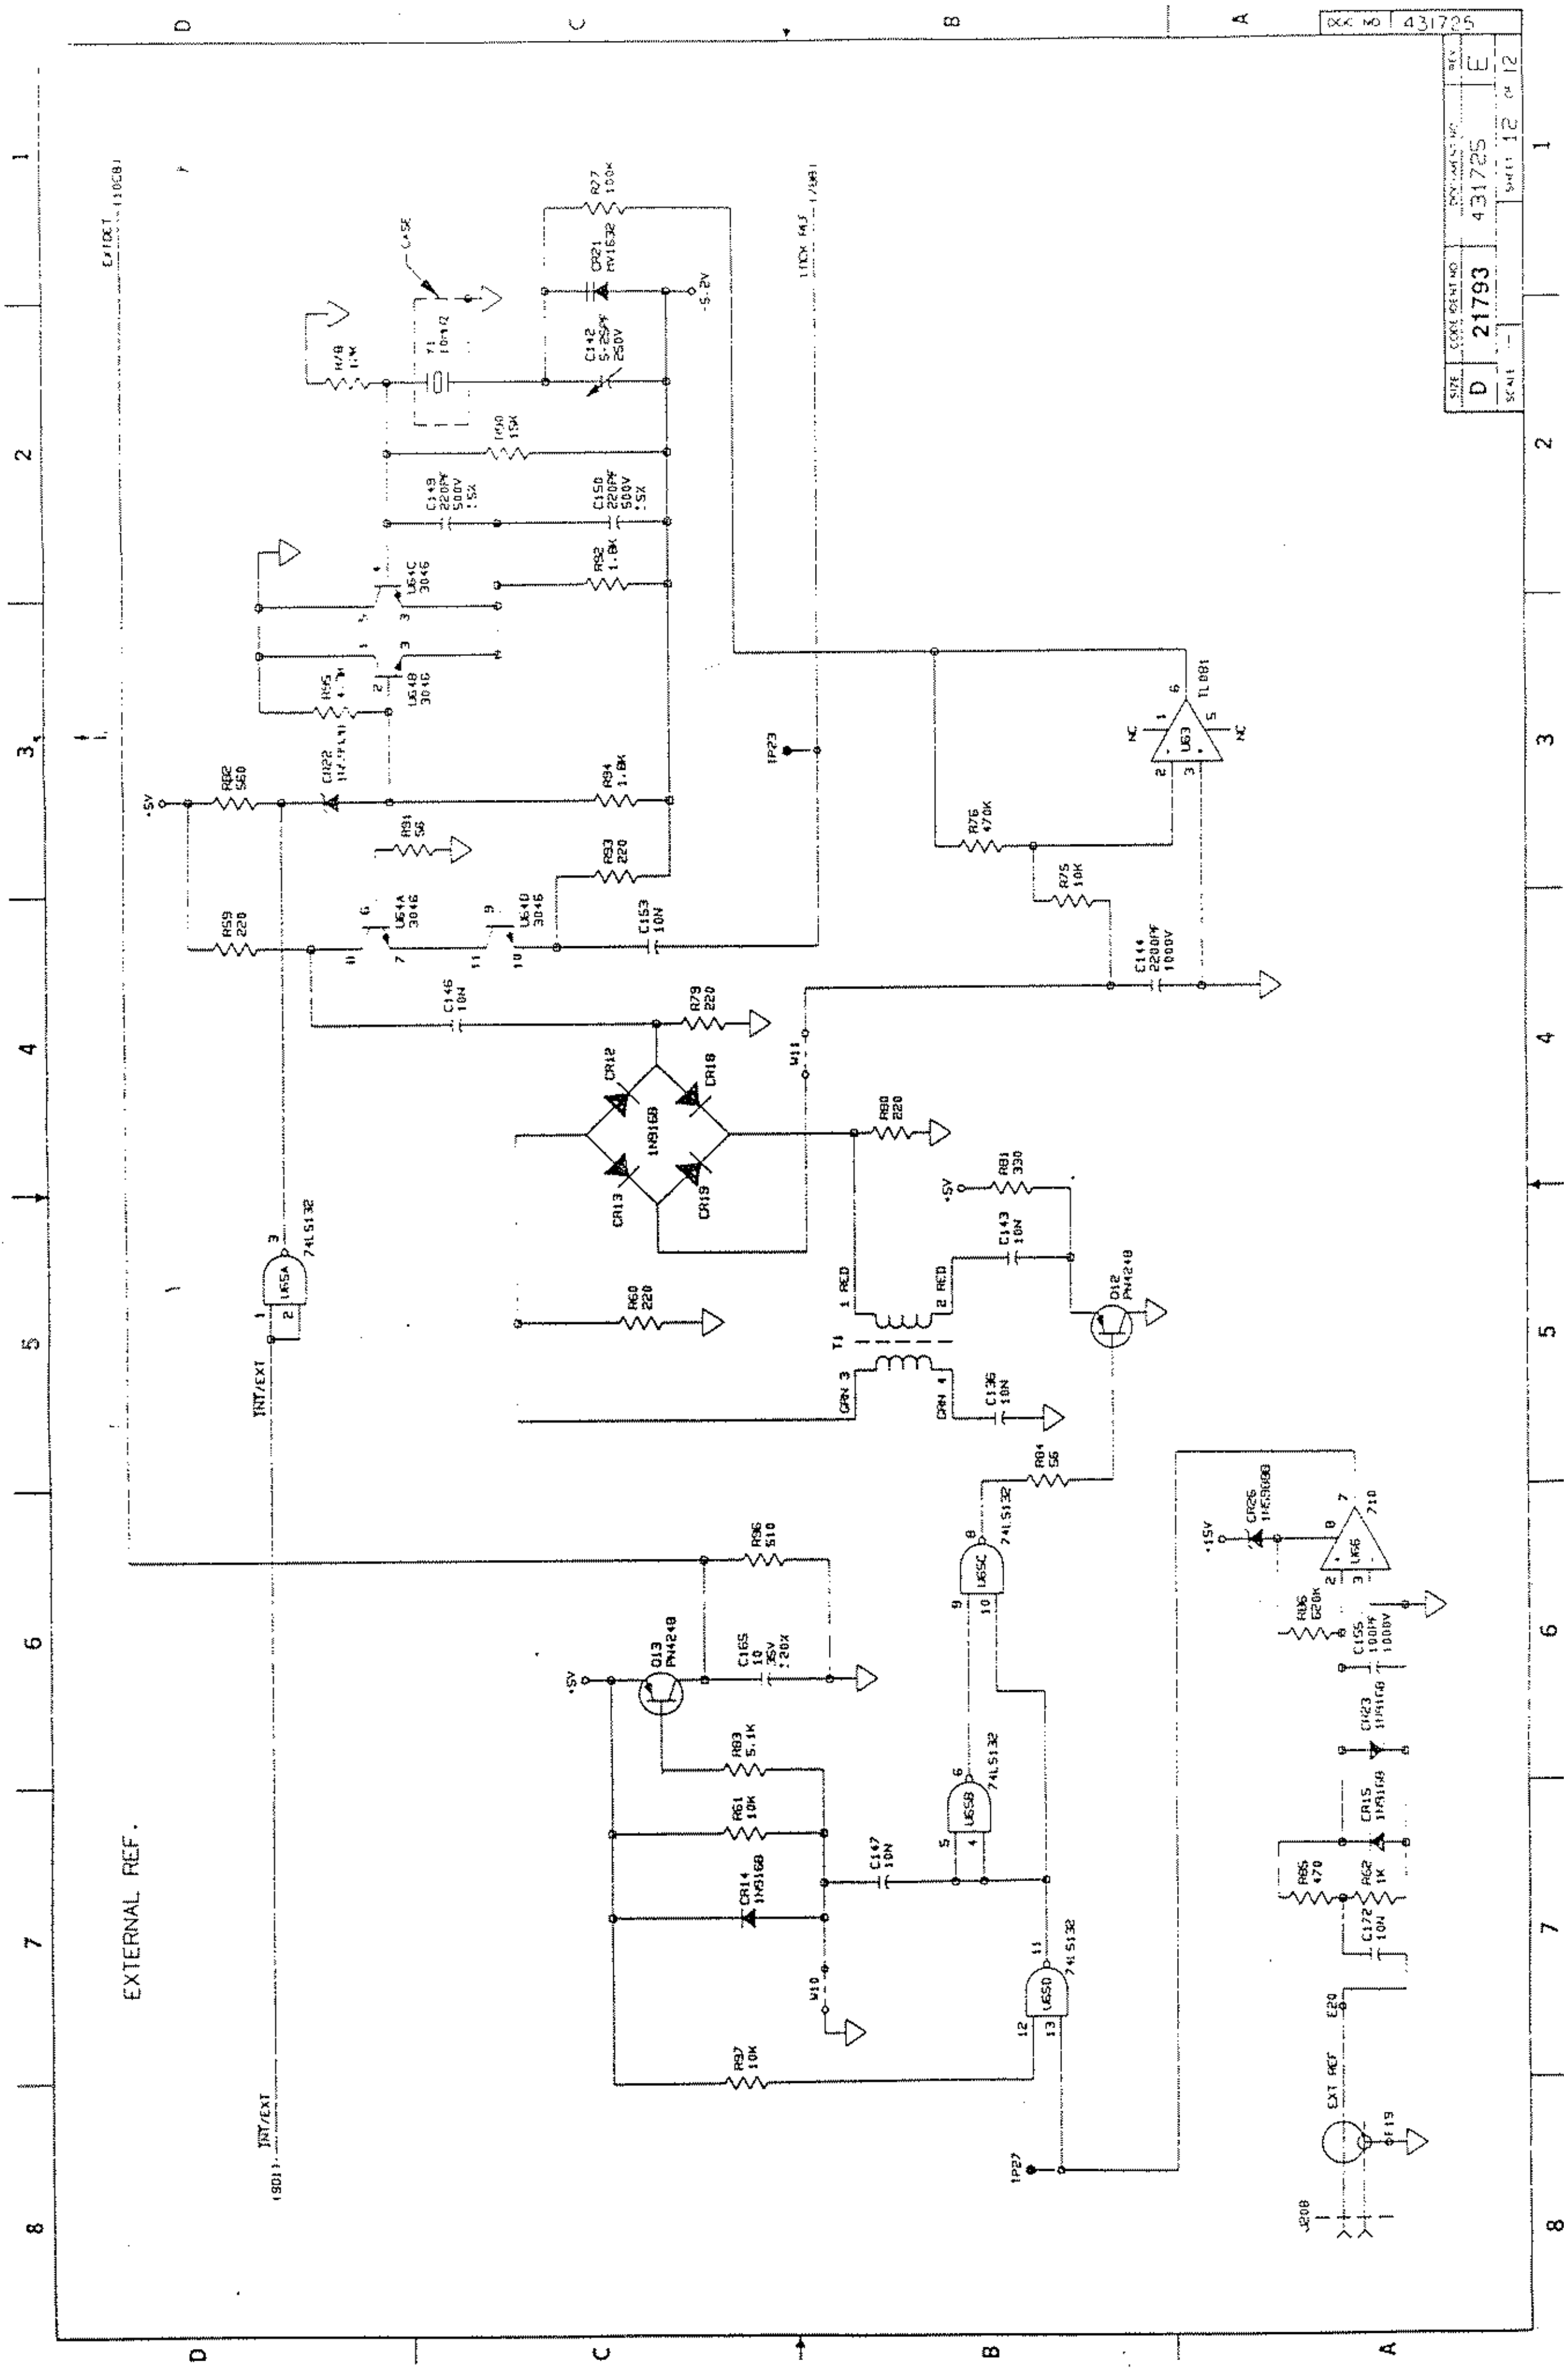
EXTERNAL REF.
21793
431725
74LS132
TL081
EXT REF

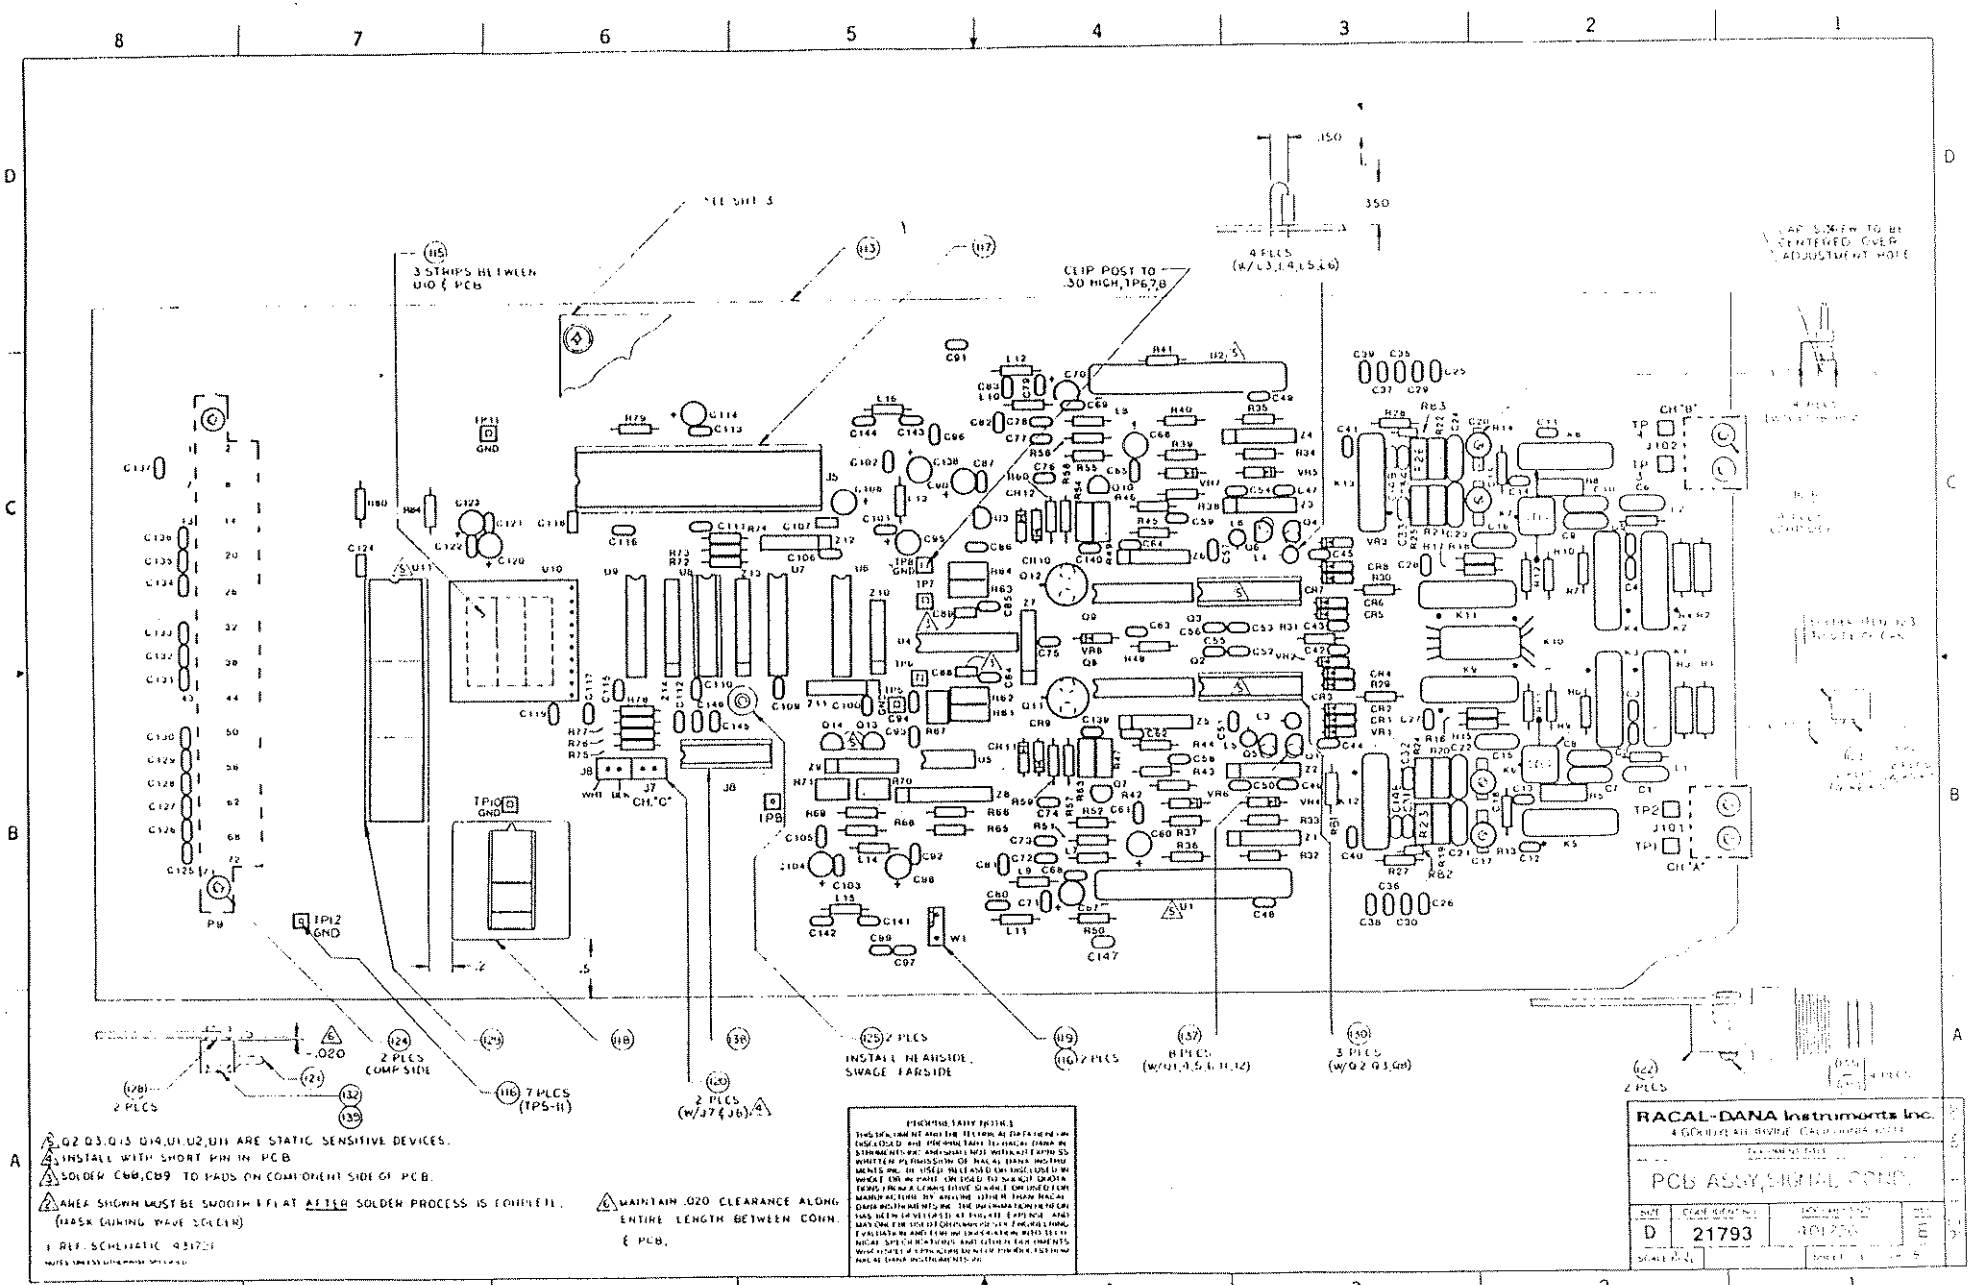



1. Q2 Q3 Q13 Q14 U1 U2 U11 ARE STATIC SENSITIVE DEVICES.
2. INSTALL WITH SHORT PIN IN PCB.
3. SOLDER C88,C89 TO PADS ON COMPONENT SIDE OF PCB.
4. AREA SHOWN MUST BE SMOOTH & FLAT AFTER SOLDER PROCESS IS COMPLETE. (MASK DURING WAVE SOLDER)
5. MAINTAIN .020 CLEARANCE ALONG ENTIRE LENGTH BETWEEN CONN. & PCB.

1 REF. SCHEMATIC 9317-01

PRICING TARIFF NOTICE

THIS DOCUMENT AND THE INFORMATION DISCLOSED HEREIN, INCLUDING ANY DATA OR DRAWINGS FURNISHED IN CONNECTION WITH IT, ARE THE PROPERTY OF RACAL-DANA INSTRUMENTS, INC. AND SHALL NOT BE REPRODUCED OR COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OR SALE OF APPARATUS OR EQUIPMENT WITHOUT OUR PERMISSION, AND SHALL NOT BE DISCLOSED TO OTHERS OR USED IN ANY MANNER DETRIMENTAL TO OUR INTEREST OR THAT OF OUR CUSTOMERS. IN SUBMITTING THIS DOCUMENT TO A PROSPECTIVE SUPPLIER, RACAL-DANA INSTRUMENTS, INC. EXPRESSLY LIMITS THE USE OF THE INFORMATION HEREIN DISCLOSED TO THE EVALUATION OF THE SUPPLIER'S CAPABILITY TO MANUFACTURE THE ITEMS OR PERFORM THE SERVICES DESCRIBED HEREIN AND TO THE SUBMISSION OF A PROPOSAL OR QUOTATION TO RACAL-DANA INSTRUMENTS, INC. THE INFORMATION HEREIN DISCLOSED MAY NOT BE USED FOR ANY OTHER PURPOSE, INCLUDING, BUT NOT LIMITED TO, PROCUREMENT, FABRICATION, ASSEMBLY, INSPECTION, TESTING, OVERHAUL OR MAINTENANCE, WITHOUT THE EXPRESS WRITTEN PERMISSION OF RACAL-DANA INSTRUMENTS, INC. IN ADDITION, ANY SPECIAL PROCESSES OR TECHNIQUES DISCLOSED HEREIN ARE CONFIDENTIAL AND SHALL NOT BE DISCLOSED TO OTHERS WITHOUT THE EXPRESS WRITTEN PERMISSION OF RACAL-DANA INSTRUMENTS, INC.

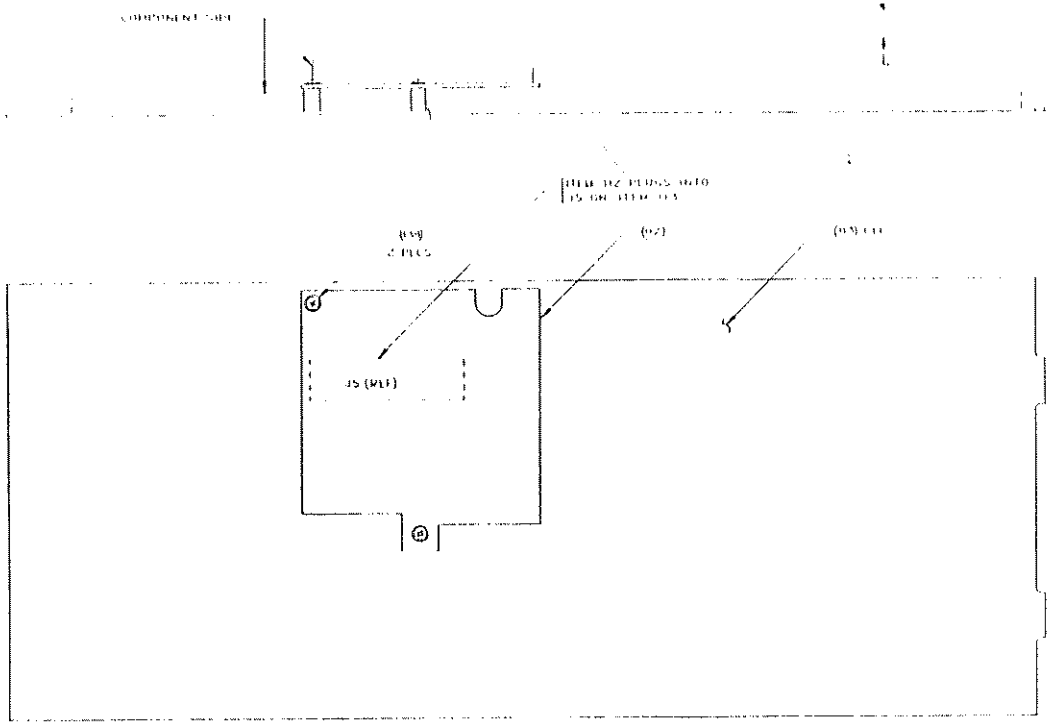




RACAL-DANA Instruments Inc.


PCB ASSY,SIGNAL COND

| SIZE | DWG NO | REV |
|---|---|---|
| D | 21793 | E |

SHEET 3

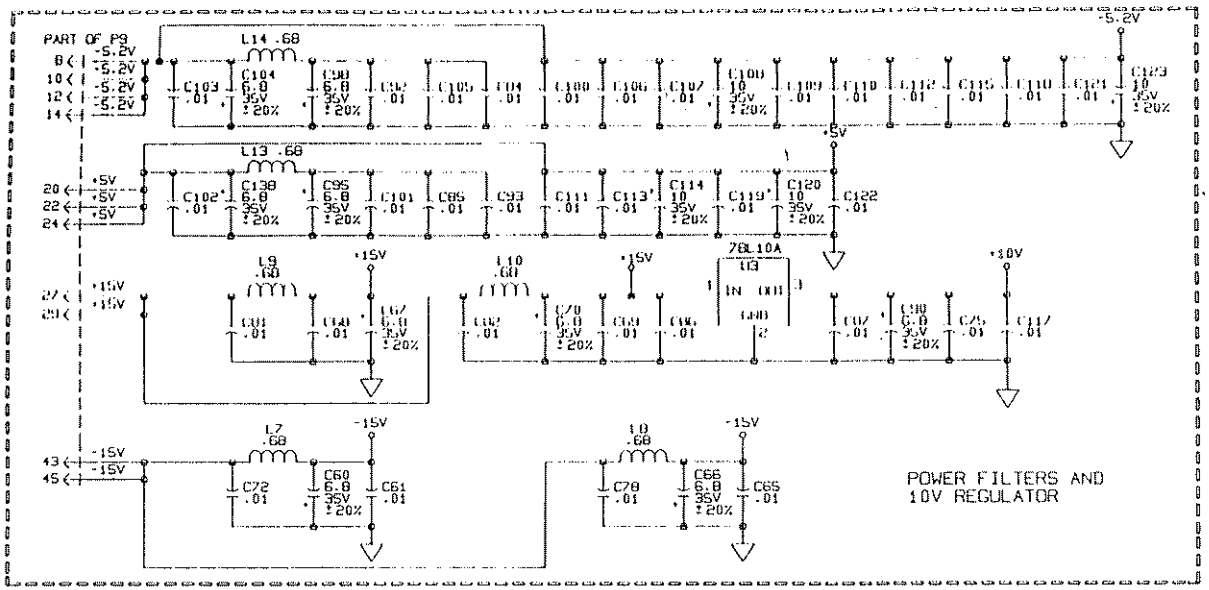

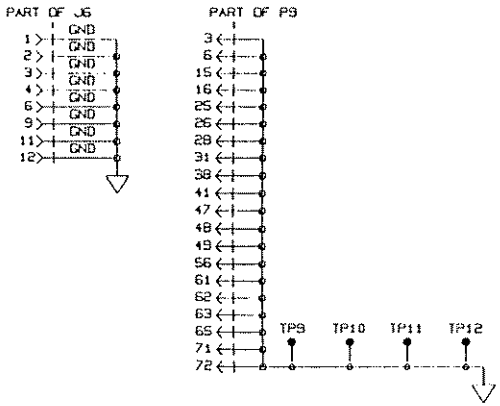
| Z14 | Z11 |
|---|---|
| W1 | |
| VR8 | |
| U11 | |
| TP12 | |
| R84 | |
| Q14 | |
| P9 | |
| L16 | |
| K13 | |
| J102 | |
| C818 | |
| C149 | |
| HIGH LSI | NOT USED |

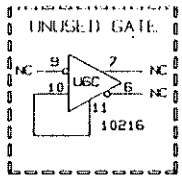REF. DESIGNATIONS

| | | |
|---|---|---|
| Z13 | 330 | 4 5 |
| Z10 | 330 | 4 |
| Z7 | 33 | 4 (CLK) |
| Z6 | 330 | 4 |
| Z5 | 330 | 4 |
| Z4 | 2.2K | 5.6 (TP10) |
| Z3 | 470 | 3.4 (CLK) |
| Z2 | 470 | 3.4 (TP9) |
| Z1 | 2.2K | 5.6 (TP9) |
| U9 | SL3127C | 1 15 16 |
| U8 | SL3127C | 1 15 16 |
| REF DES | TYPE | PINS |

UNUSED LOGIC & ALTERNATES

| J5 | CONNECTOR | 10.29.31 | | | 11.21.30. 35.40 | 1.20 | |
|---|---|---|---|---|---|---|---|
| U8,9 | SL3127C | | | | 5 | | |
| Q2,3 | SDS000N | | | | | | 2.15 |
| U11 | MCC1 | | | | 16.36 | | |
| U10 | 1034 | 2 | 3 | | 7.9 | 5 | |
| U8 | 10231 | | | | 1.16 | 8 | |
| U7 | 1011150 | | | | 16 | 8 | |
| U6,9 | 10216 | | | | 1.16 | 4 | |
| U5 | 2903 | 8 | | | | | 4 |
| U4 | 9687 | 11 | | | 3.14 | 6 | |
| | | | | | | | |
| U1,2 | 230753 | 15 | | | 2.14 | | 1 |
| REF. DES. | IC TYPE | +5V PIN NO. | +10V PIN NO. | -15V PIN NO. | GND PIN NO. | -5.2V PIN NO. | -15V PIN NO. |

IC POWER CONNECTIONS

4. CAPACITOR VALUES ARE IN MICROFARIDS. ±10%.100V UNLESS OTHERWISE SPECIFIED.
3. RESISTOR VALUES ARE IN OHMS. ±1%.1/4W UNLESS OTHERWISE SPECIFIED.
2. RESISTOR NETWORKS ±2%.
1. CHOKES ARE IN MICROHENRYS ±10%.

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREIN DISCLOSED ARE PROPRIETARY TO RACAL-DANA INSTRUMENTS INC. AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL-DANA INSTRUMENTS INC. BE USED, RELEASED OR DISCLOSED IN WHOLE OR IN PART OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL-DANA INSTRUMENTS INC. THE INFORMATION HEREIN HAS BEEN DEVELOPED AT PRIVATE EXPENSE AND MAY ONLY BE USED FOR PURPOSES OF EVALUATION AND USE IN CONJUNCTION WITH TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL-DANA INSTRUMENTS INC.

RACAL-DANA Instruments Inc.
4 GOODYEAR IRVINE CALIFORNIA 92714


SCHEM, SIGNAL COND

| SIZE | CODE IDENT NO. | DOCUMENT NO. | REV. |
|---|---|---|---|
| D | 21793 | 431726 | D |


SCALE — SHEET 1 OF 6


431726


7-2

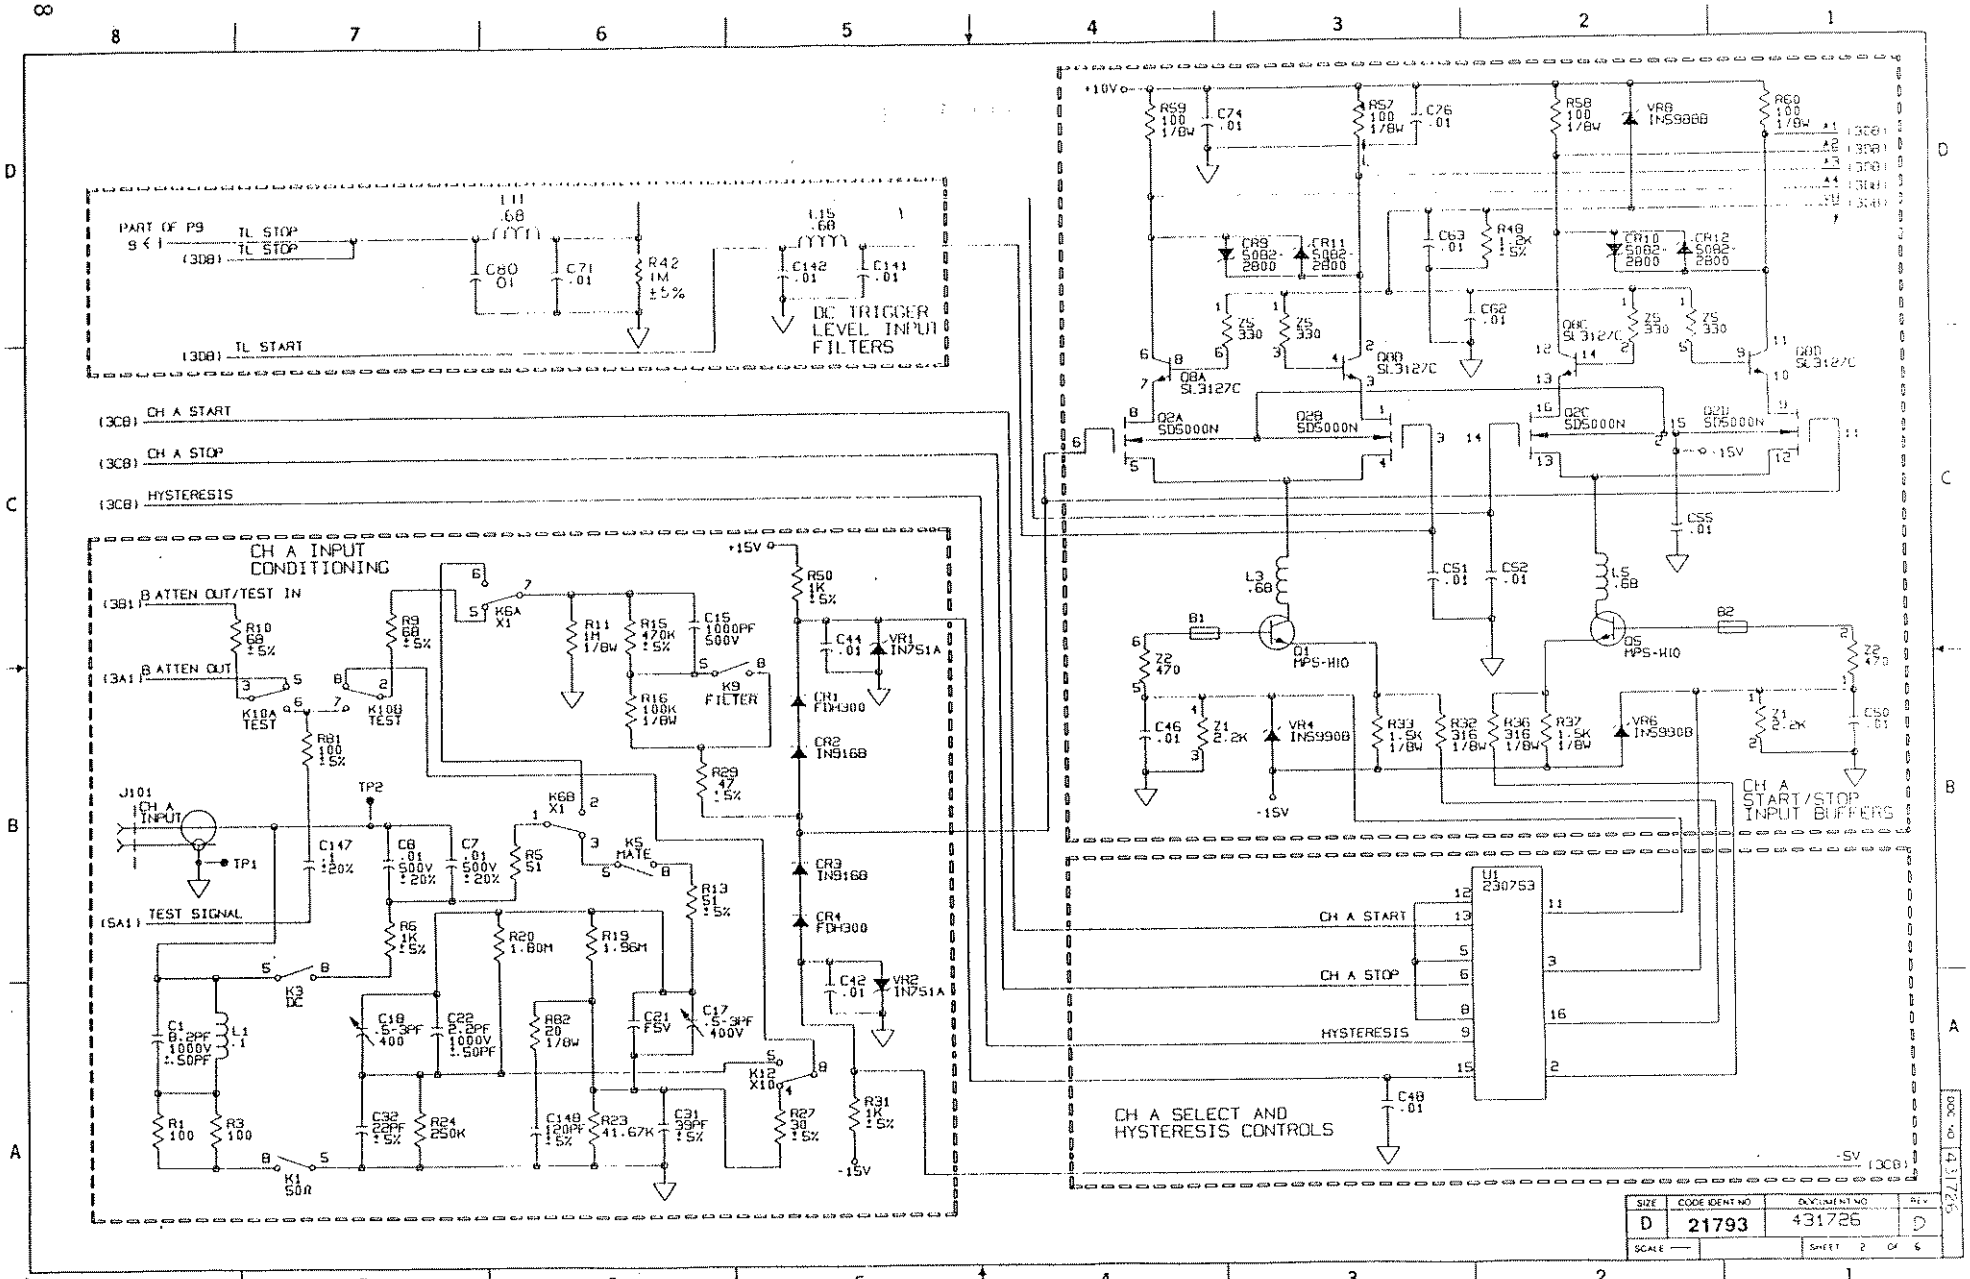




| SIZE | CODE IDENT NO | DOCUMENT NO | REV |
|---|---|---|---|
| D | 21793 | 431726 | D |
| SCALE — | | SHEET 2 OF 6 | |

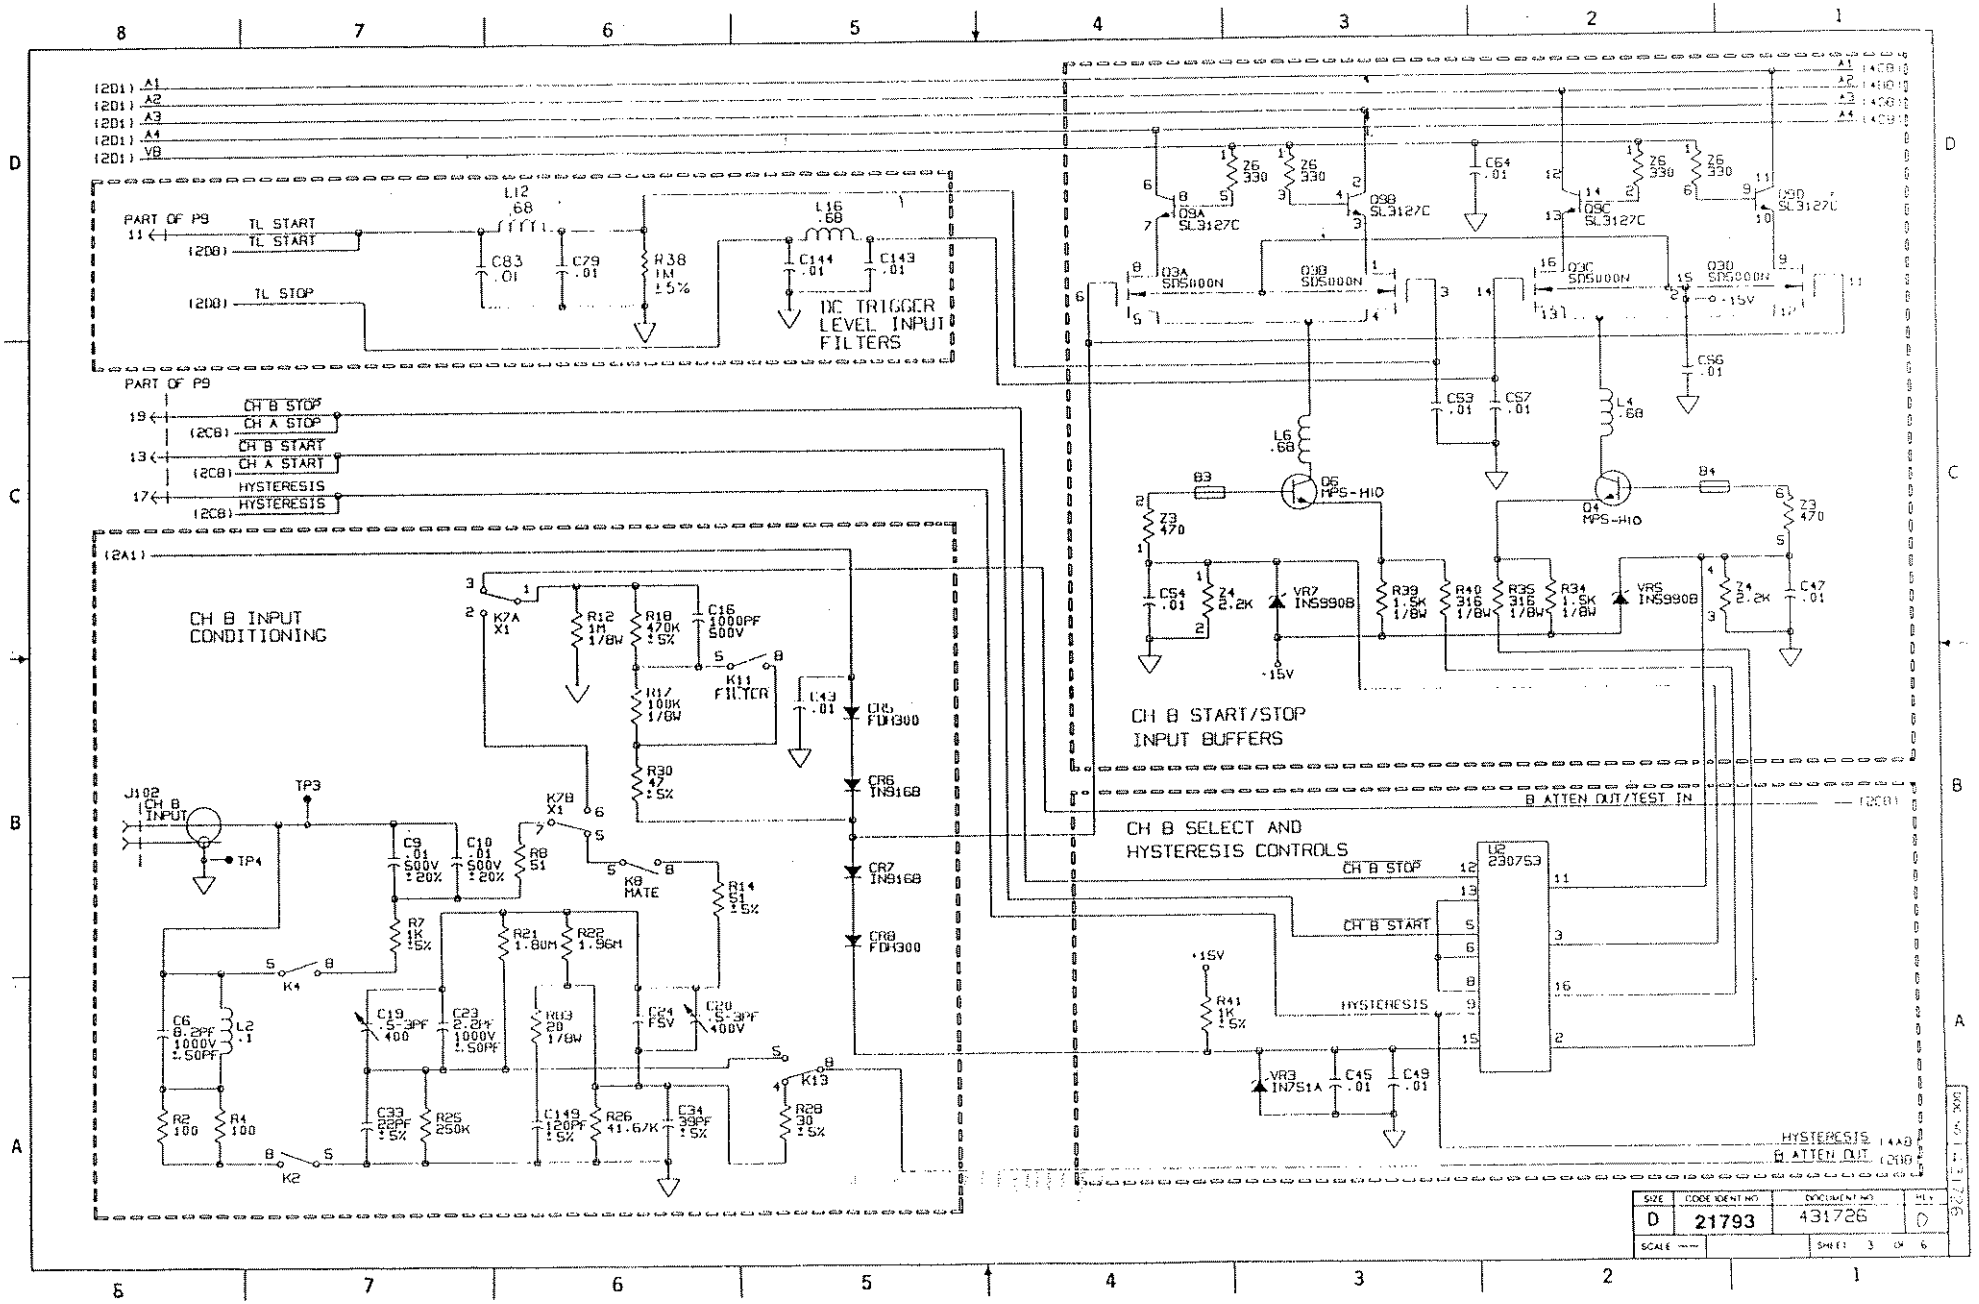
DC TRIGGER LEVEL INPUT FILTERS
CH B START/STOP INPUT BUFFERS
CH B INPUT CONDITIONING
CH B SELECT AND HYSTERESIS CONTROLS
PART OF P9
TL START
TL STOP
CH B STOP
CH A STOP
CH B START
CH A START
HYSTERESIS
B ATTEN OUT/TEST IN
HYSTERESIS
B ATTEN OUT
SIZE
D
CODE IDENT NO
21793
DOCUMENT NO
431726
REV
D
SCALE
SHEET 3 OF 6

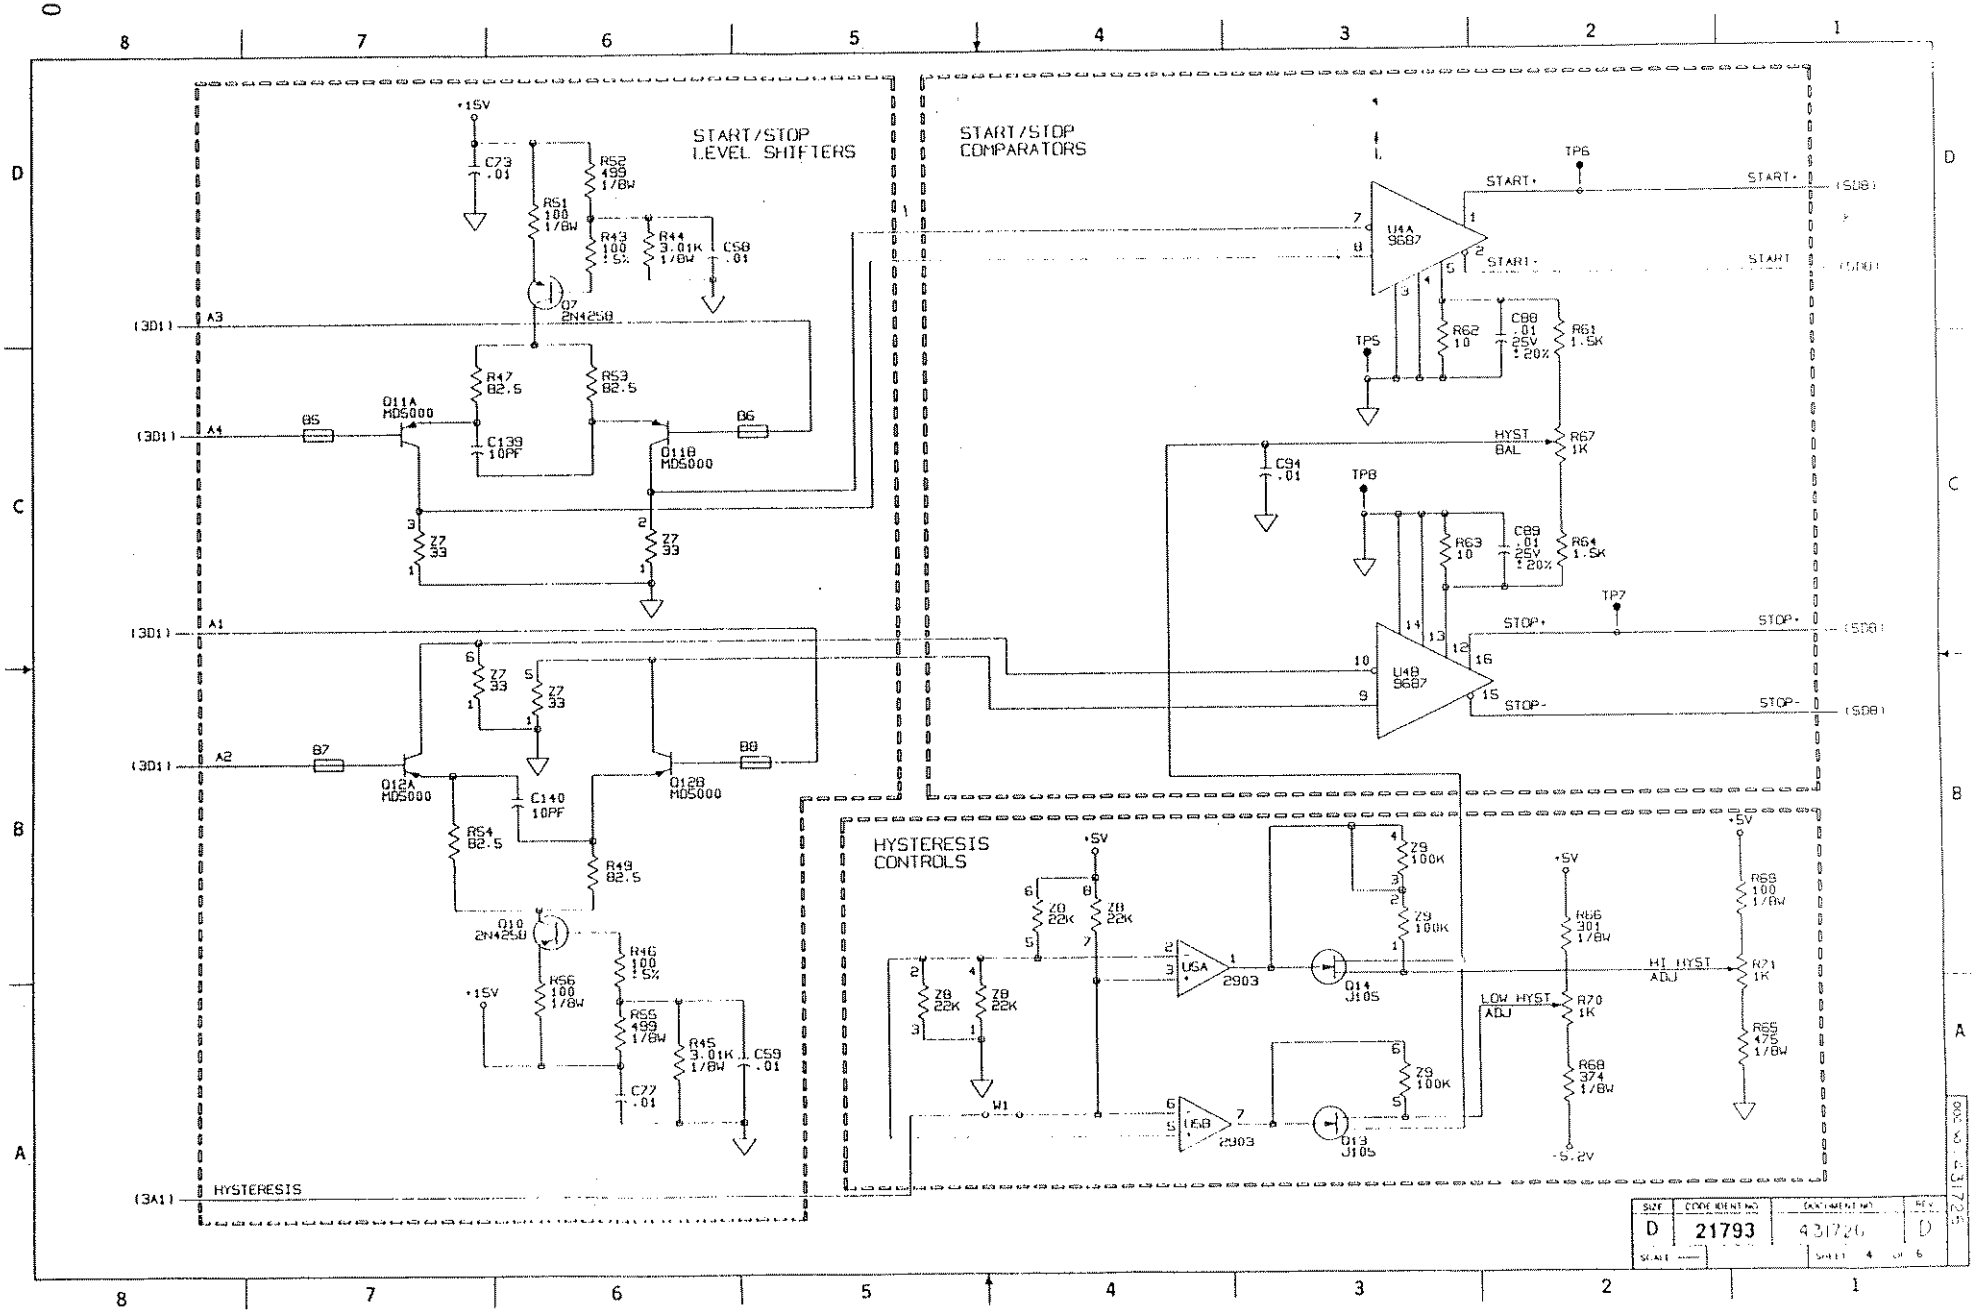

START/STOP
LEVEL SHIFTERS
START/STOP
COMPARATORS
HYSTERESIS
CONTROLS
+15V
+5V
-5.2V
C73 .01
R52 499 1/8W
R51 100 1/8W
R43 100 1%
R44 3.01K 1/8W
C58 .01
Q7 2N4258
R47 82.5
R53 82.5
Q11A MD5000
Q11B MD5000
C139 10PF
B5
B6
Z7 33
C94 .01
TP6
TP5
TP8
TP7
START+
START-
STOP+
STOP-
U4A 9687
U4B 9687
R62 10
C88 .01 25V ±20%
R61 1.5K
HYST BAL
R67 1K
R63 10
C89 .01 25V ±20%
R64 1.5K
Q12A MD5000
Q12B MD5000
C140 10PF
R54 82.5
R49 82.5
Q10 2N4258
R46 100 1%
R66 100 1/8W
R55 499 1/8W
R45 3.01K 1/8W
C59 .01
C77 .01
Z8 22K
Z9 100K
U5A 2903
U5B 2903
Q14 J105
Q13 J105
W1
R66 301 1/8W
R70 1K
R68 374 1/8W
HI HYST ADJ
LOW HYST ADJ
R69 100 1/8W
R71 1K
R65 475 1/8W
A1
A2
A3
A4
B7
B8
HYSTERESIS
(3D1)
(3A1)
(SD8)
(SD7)
SIZE D
CODE IDENT NO 21793
DOCUMENT NO 431726
REV D
SHEET 4 OF 6

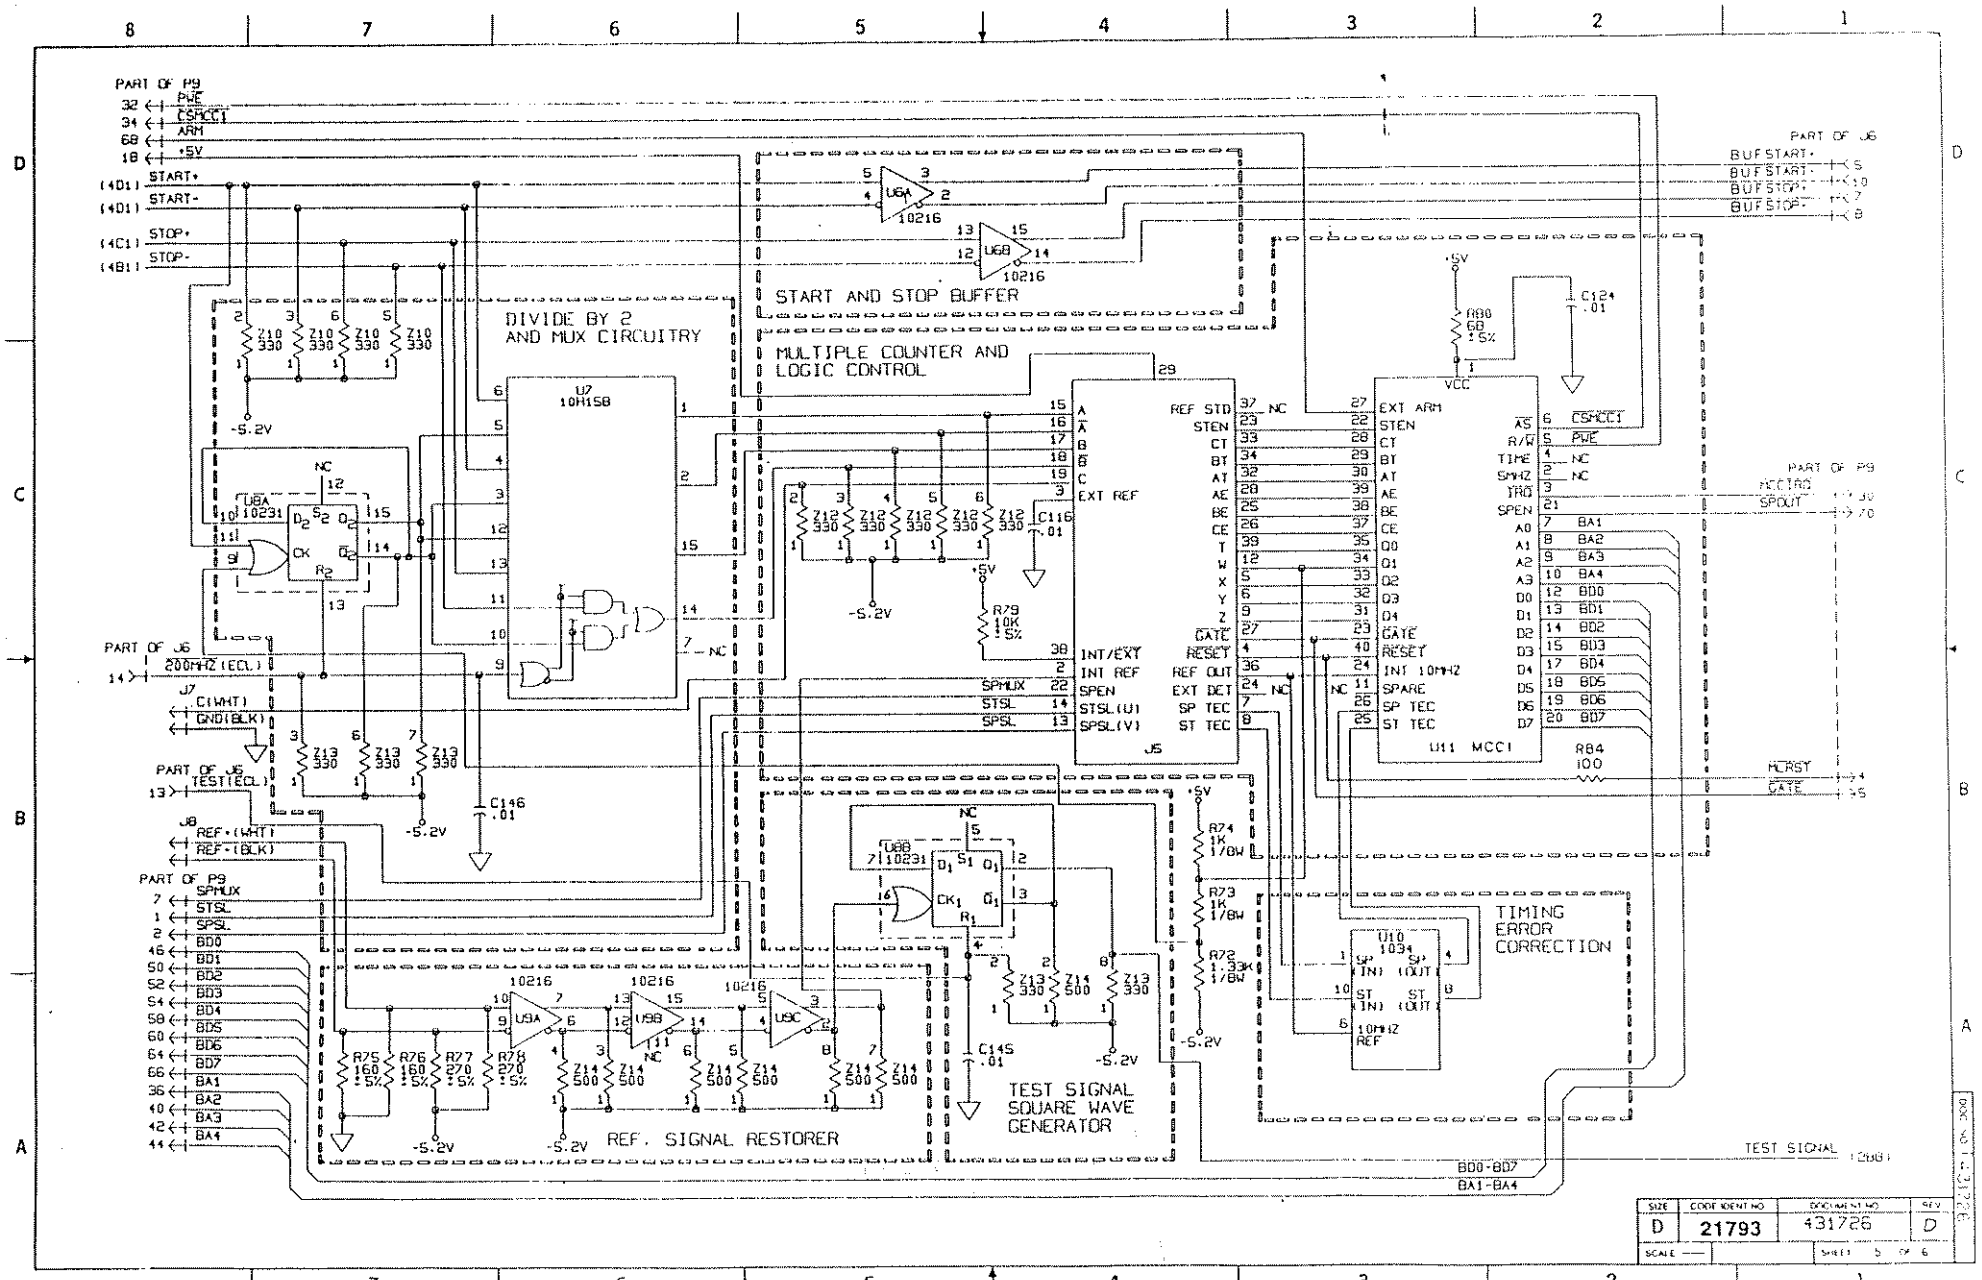
DIVIDE BY 2
AND MUX CIRCUITRY
START AND STOP BUFFER
MULTIPLE COUNTER AND
LOGIC CONTROL
TIMING
ERROR
CORRECTION
REF. SIGNAL RESTORER
TEST SIGNAL
SQUARE WAVE
GENERATOR
U11 MCC1
U7
10H158
U10
1034
PART OF P9
PART OF J6
PART OF J5
BUFSTART+
BUFSTART-
BUFSTOP+
BUFSTOP-
200MHZ (ECL)
TEST(ECL)
REF+(WHT)
REF-(BLK)
C(WHT)
GND(BLK)
TEST SIGNAL
BD0-BD7
BA1-BA4
MCCTRG
SPOUT
MCRST
GATE
SIZE
CODE IDENT NO
21793
DOCUMENT NO
431726
REV
D
SCALE
SHEET 5 OF 6

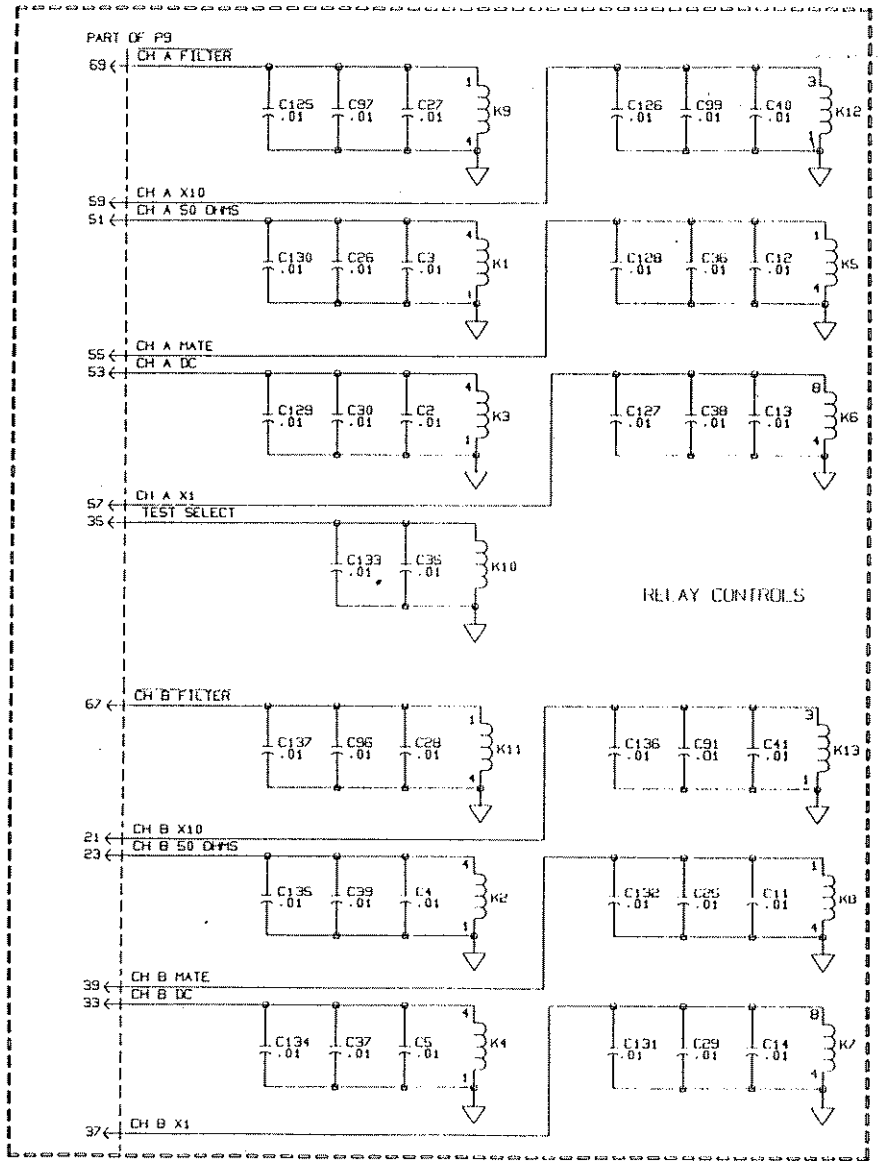


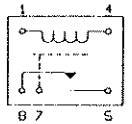
RELAY BOTTOM VIEW
TYP 8 PLCS
K1,2,3,4,5,8,9 & 11

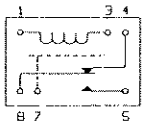

RELAY BOTTOM VIEW
TYP 2 PLCS
K12 & K13

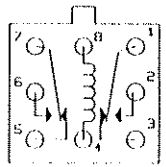


RELAY BOTTOM VIEW
TYP 2 PLCS
K6 & K7

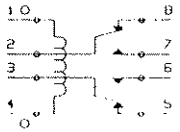

RELAY TOP VIEW
K10

| SIZE | CODE IDENT NO | DOCUMENT NO | REV |
|---|---|---|---|
| D | 21793 | 431726 | |
| SCALE — | | SHEET 6 OF 6 | |

NOTES UNLESS OTHERWISE SPECIFIED

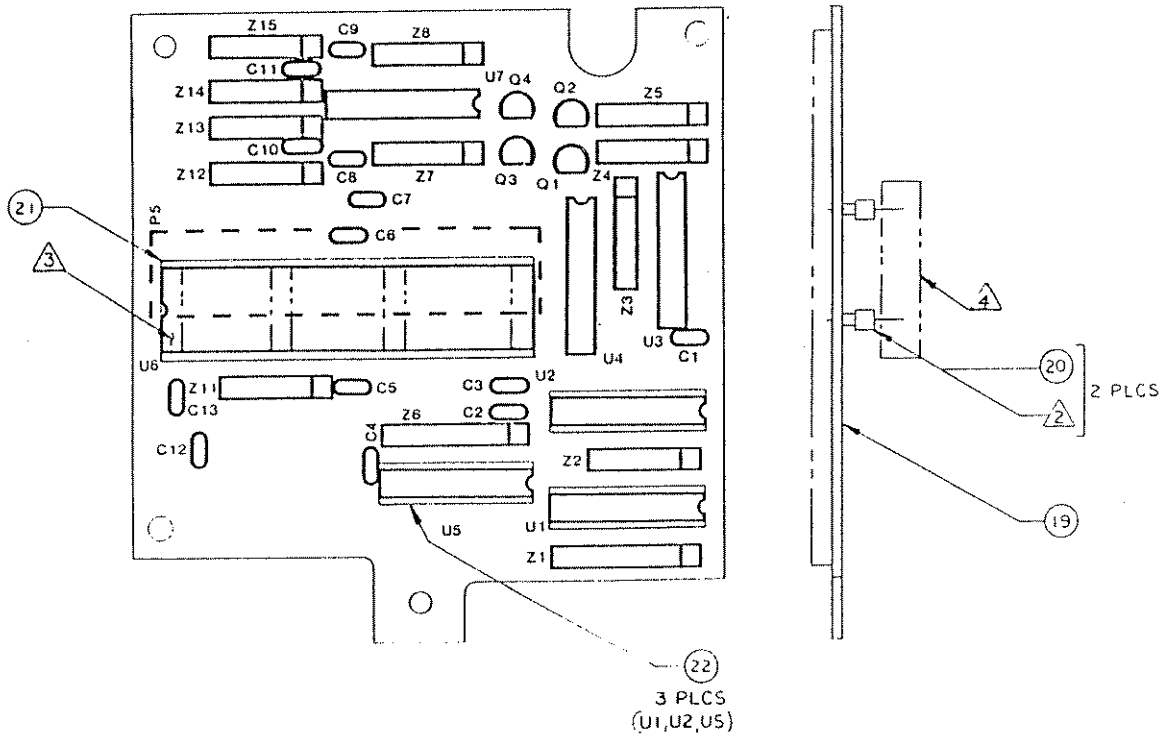


4 ITEM 20 PINS TO BE PROTECTED FROM DAMAGE DURING HANDLING AND STORAGE USING FOAM PAD. ( REF. P/N 454754)

3 CROSS BARS ON ITEM 21 TO BE CLIPPED FLUSH TO SOCKET SIDES AFTER WAVE SOLDER.

2 ITEM NO. 20 TO BE PERPENDICULAR AND FIRMLY SEATED ON PCB.


1. REF. SCHEMATIC 431728.

PROPRIETARY NOTICE

PCB ASSY, AMCC2 SYNCH

| SIZE | DRAWING NO. | REV |
|---|---|---|
| C | 21793 | B |

7-33/7-34 Bla

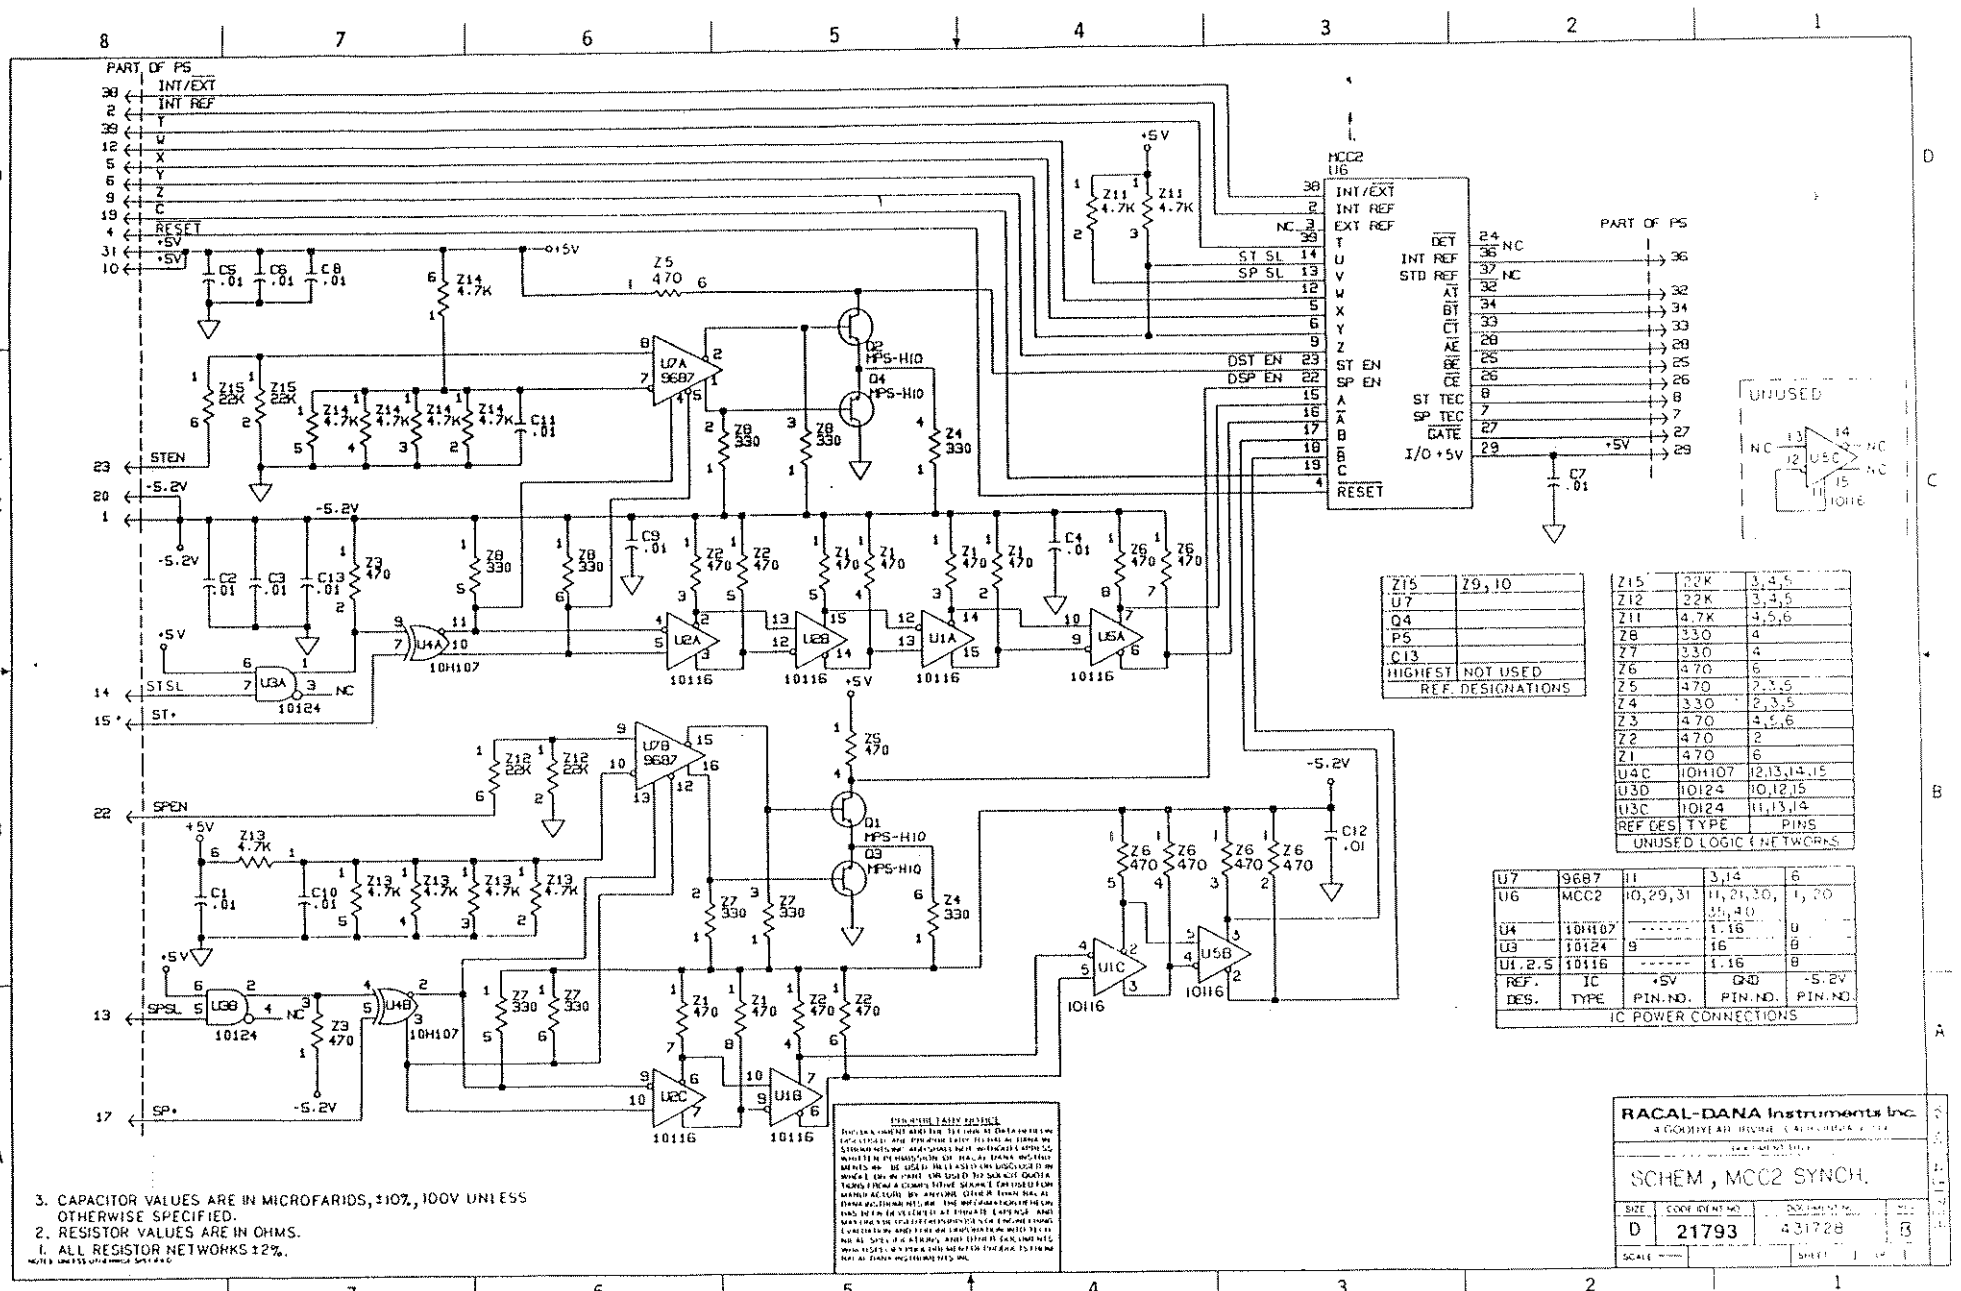


| | |
|---|---|
| Z15 | Z9, 10 |
| U7 | |
| Q4 | |
| P5 | |
| C13 | |
| HIGHEST | NOT USED |


REF. DESIGNATIONS

| | | |
|---|---|---|
| Z15 | 22K | 3,4,5 |
| Z12 | 22K | 3,4,5 |
| Z11 | 4.7K | 4,5,6 |
| Z8 | 330 | 4 |
| Z7 | 330 | 4 |
| Z6 | 470 | 6 |
| Z5 | 470 | 2,3,5 |
| Z4 | 330 | 2,3,5 |
| Z3 | 470 | 4,5,6 |
| Z2 | 470 | 2 |
| Z1 | 470 | 6 |
| U4C | 10H107 | 12,13,14,15 |
| U3D | 10124 | 10,12,15 |
| U3C | 10124 | 11,13,14 |
| REF DES | TYPE | PINS |

UNUSED LOGIC NETWORKS

| | | | | |
|---|---|---|---|---|
| U7 | 9687 | 11 | 3,14 | 6 |
| U6 | MCC2 | 10,29,31 | 11,21,30, 35,40 | 1,20 |
| U4 | 10H107 | ------ | 1,16 | 8 |
| U3 | 10124 | 9 | 16 | 8 |
| U1,2,5 | 10116 | ------ | 1,16 | 8 |
| REF. DES. | IC TYPE | +5V PIN NO. | GND PIN NO. | -5.2V PIN NO. |

IC POWER CONNECTIONS

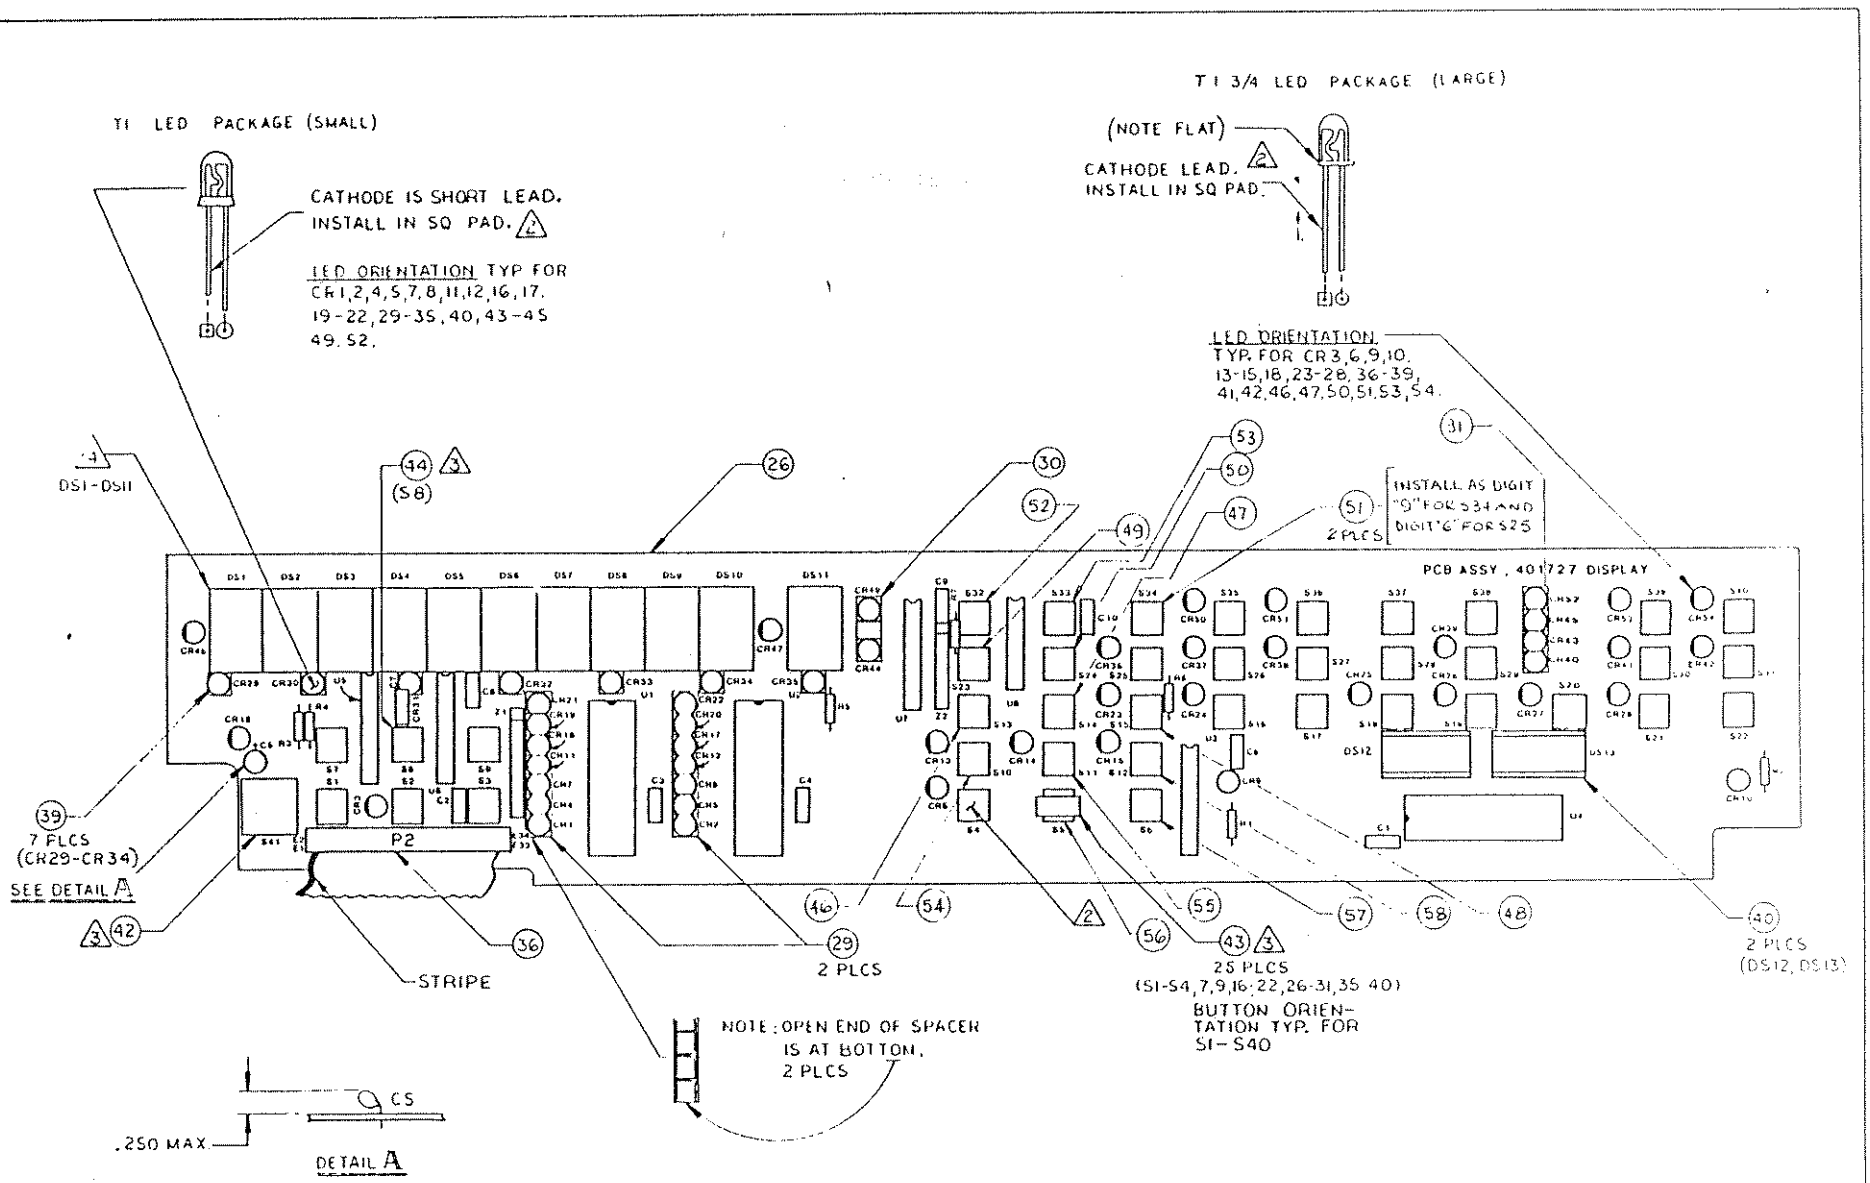


1. DS1-DS11 TO BE INSTALLED USING THE SAME INTENSITY CODE.
2. INSTALL ALL LEDS (CR1-47,49-54) AND SWITCHES (S1-41) FLUSH TO PCB.
3. ENSURE BUTTON IS FIRMLY SEATED ON SWITCH.

1. REF. SCH. 431727.

NOTES UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREON DISCLOSED ARE PROPRIETARY TO RACAL DANA INSTRUMENTS INC AND SHALL NOT, WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL DANA INSTRUMENTS INC BE USED, RELEASED OR DISCLOSED IN WHOLE OR IN PART, OR USED TO SOLICIT QUOTATIONS FROM A COMPETITIVE SOURCE OR USED FOR MANUFACTURE BY ANYONE OTHER THAN RACAL DANA INSTRUMENTS INC. THE INFORMATION HEREON HAS BEEN DEVELOPED AT PRIVATE EXPENSE, AND MAY ONLY BE USED FOR PURPOSES OF ENGINEERING EVALUATION AND FOR INCORPORATION INTO TECHNICAL SPECIFICATIONS AND OTHER DOCUMENTS WHICH SPECIFY PROCUREMENT OF PRODUCTS FROM RACAL DANA INSTRUMENTS INC.


**RACAL-DANA Instruments Inc.**
4 GOODYEAR, IRVINE, CALIFORNIA 92714


DOCUMENT TITLE

PCB ASSY, DISPLAY

| SIZE | CODE IDENT NO | DOCUMENT NO | REV |
|---|---|---|---|
| D | 21793 | 401727 | F |


SCALE None | SHEET 1 OF 3

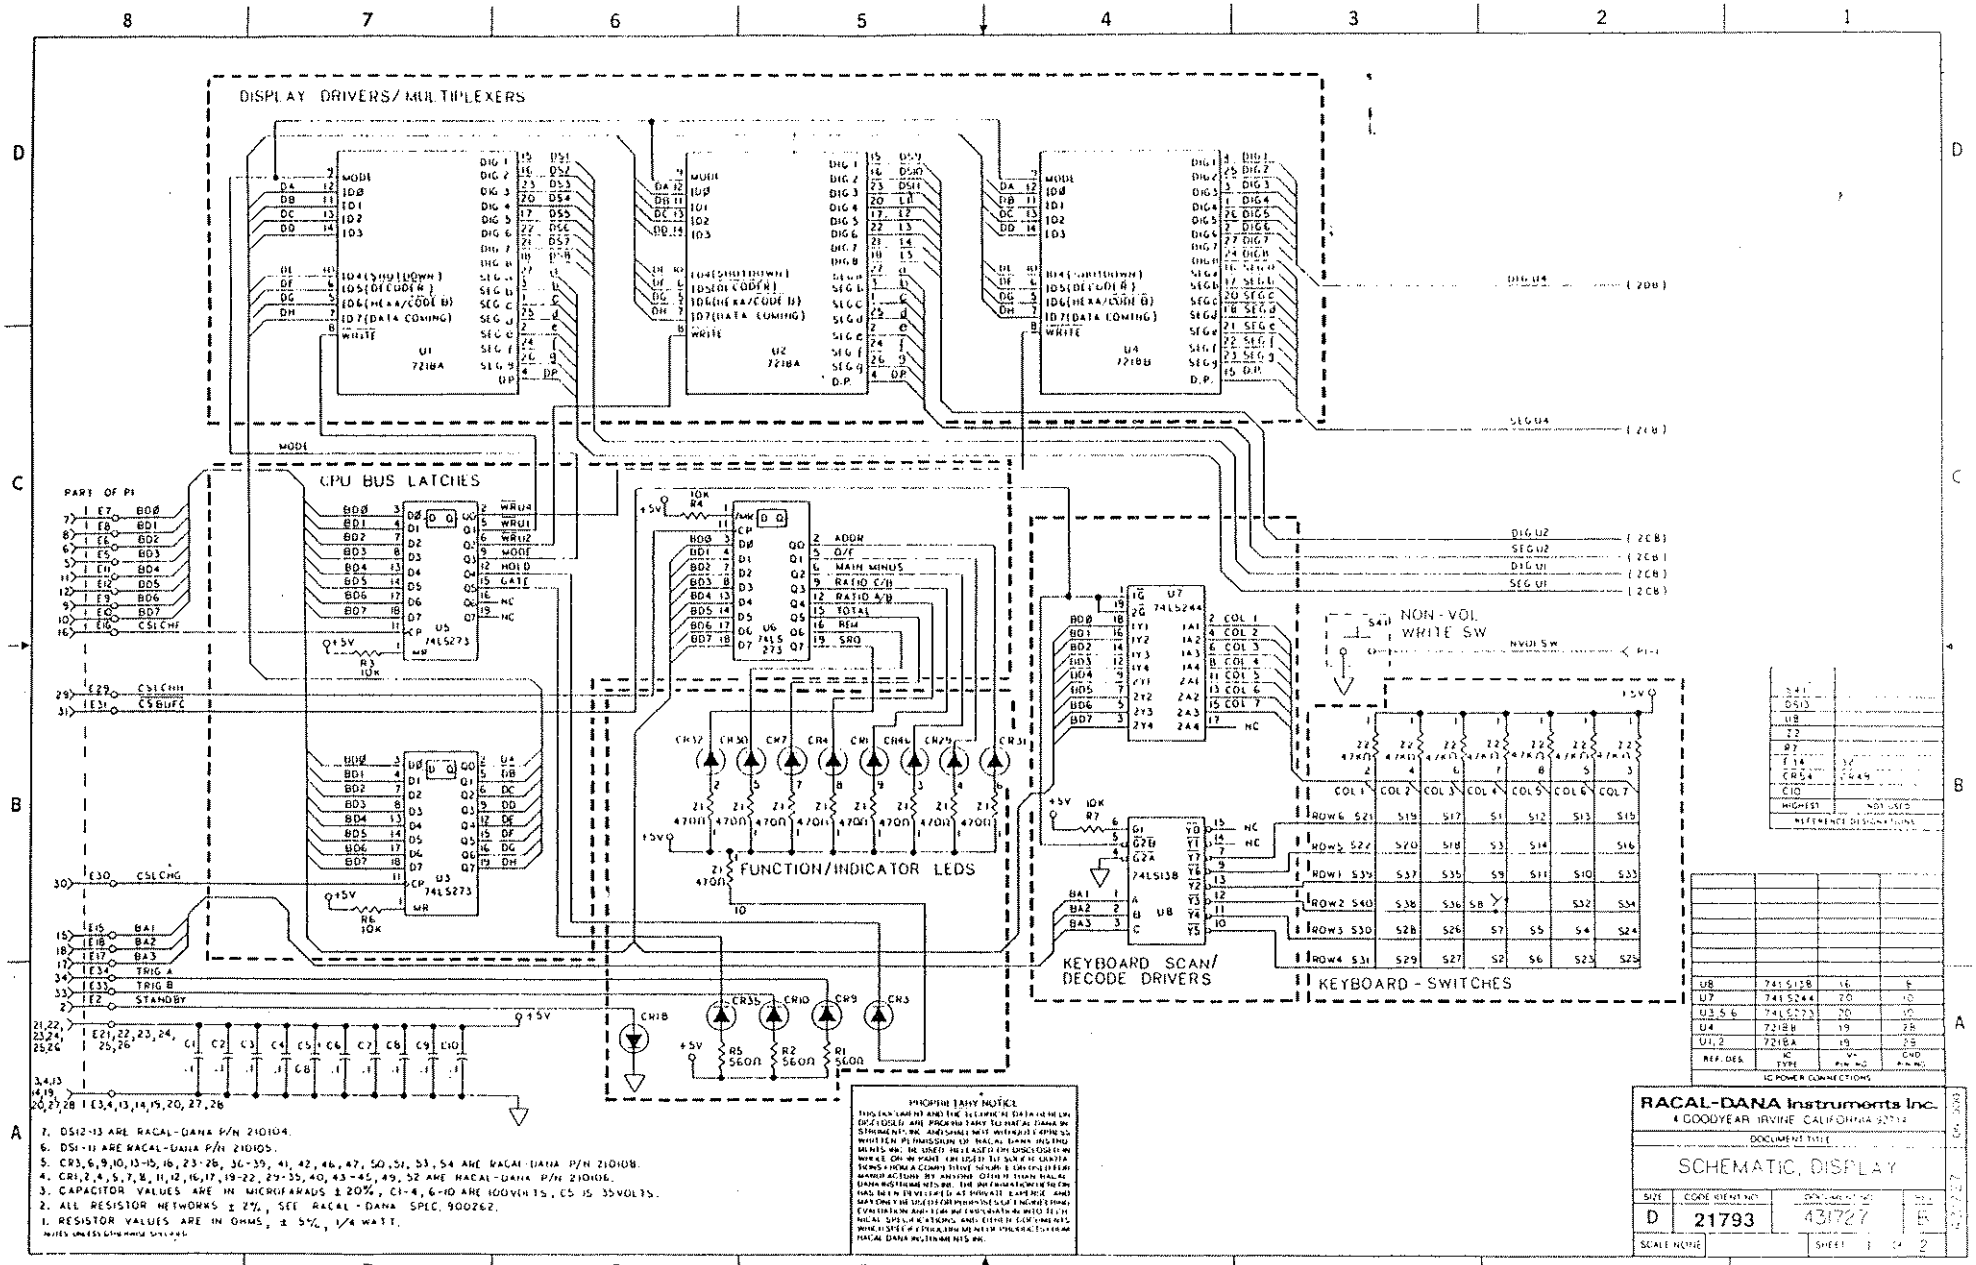
DISPLAY DRIVERS/MULTIPLEXERS
CPU BUS LATCHES
FUNCTION/INDICATOR LEDS
KEYBOARD SCAN/ DECODE DRIVERS
KEYBOARD - SWITCHES
NON-VOL WRITE SW
PROPRIETARY NOTICE
RACAL-DANA Instruments Inc.
SCHEMATIC, DISPLAY
21793
431727

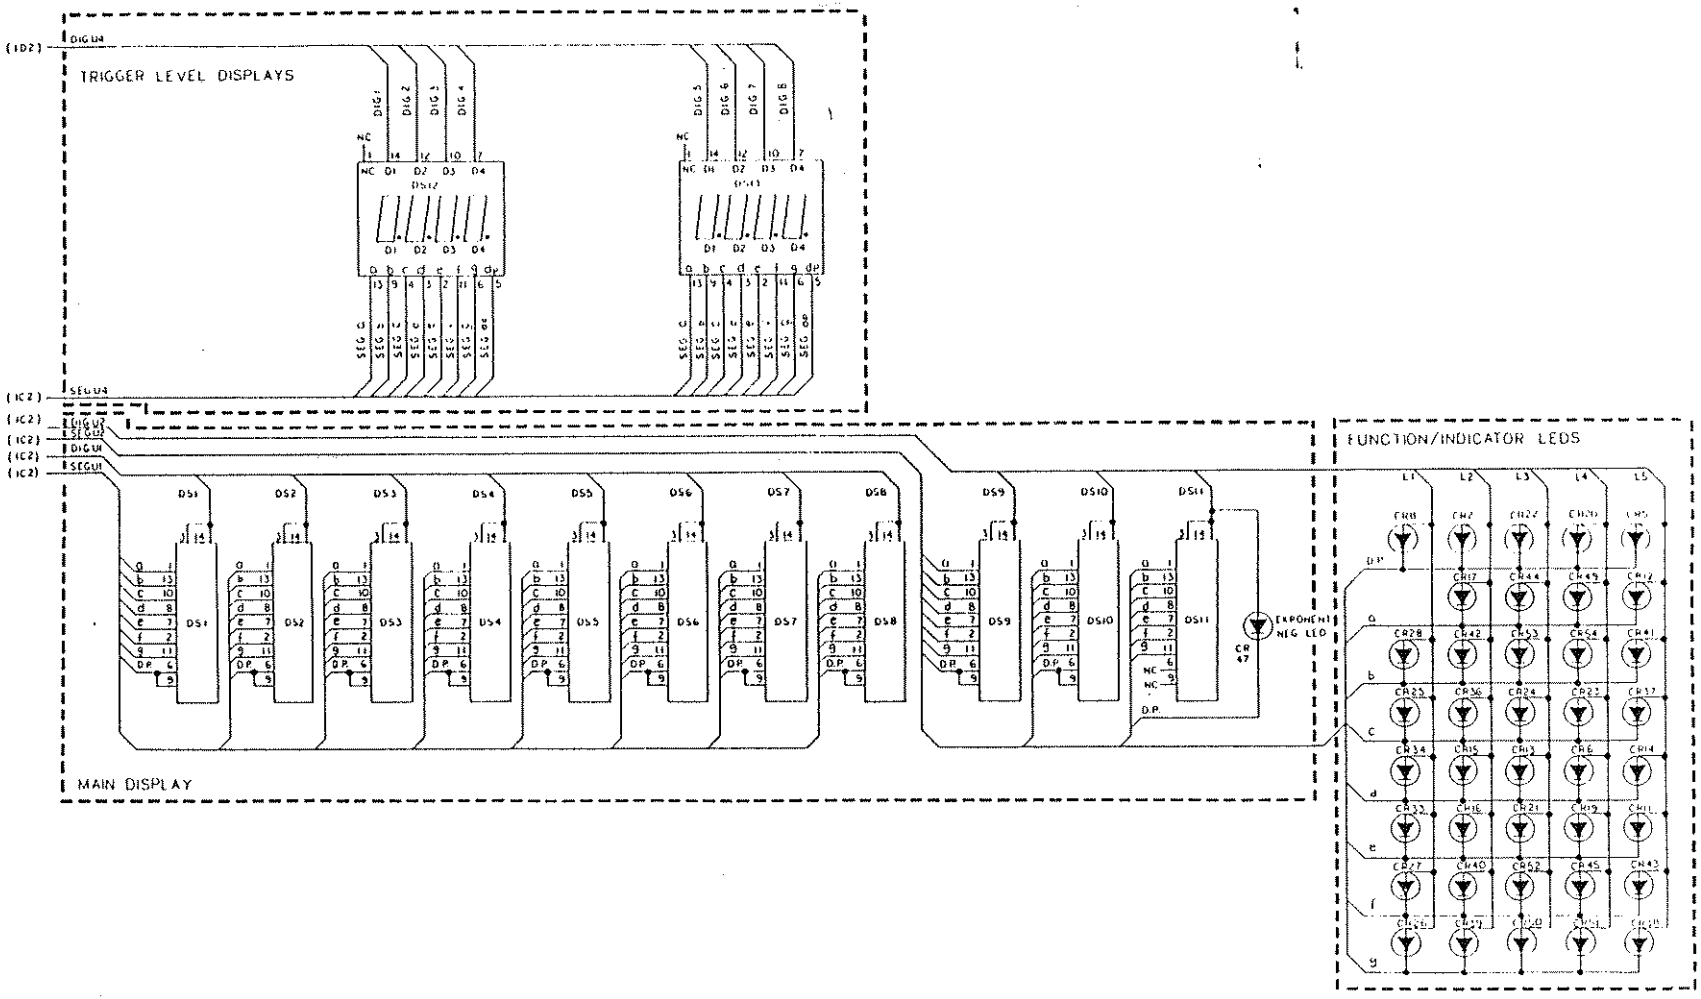


| SIZE | CODE IDENT NO | DOCUMENT NO | REV |
|---|---|---|---|
| D | 21793 | 431727 | B |
| SCALE NONE | | SHEET 2 OF 7 | |

DOC NO 431727

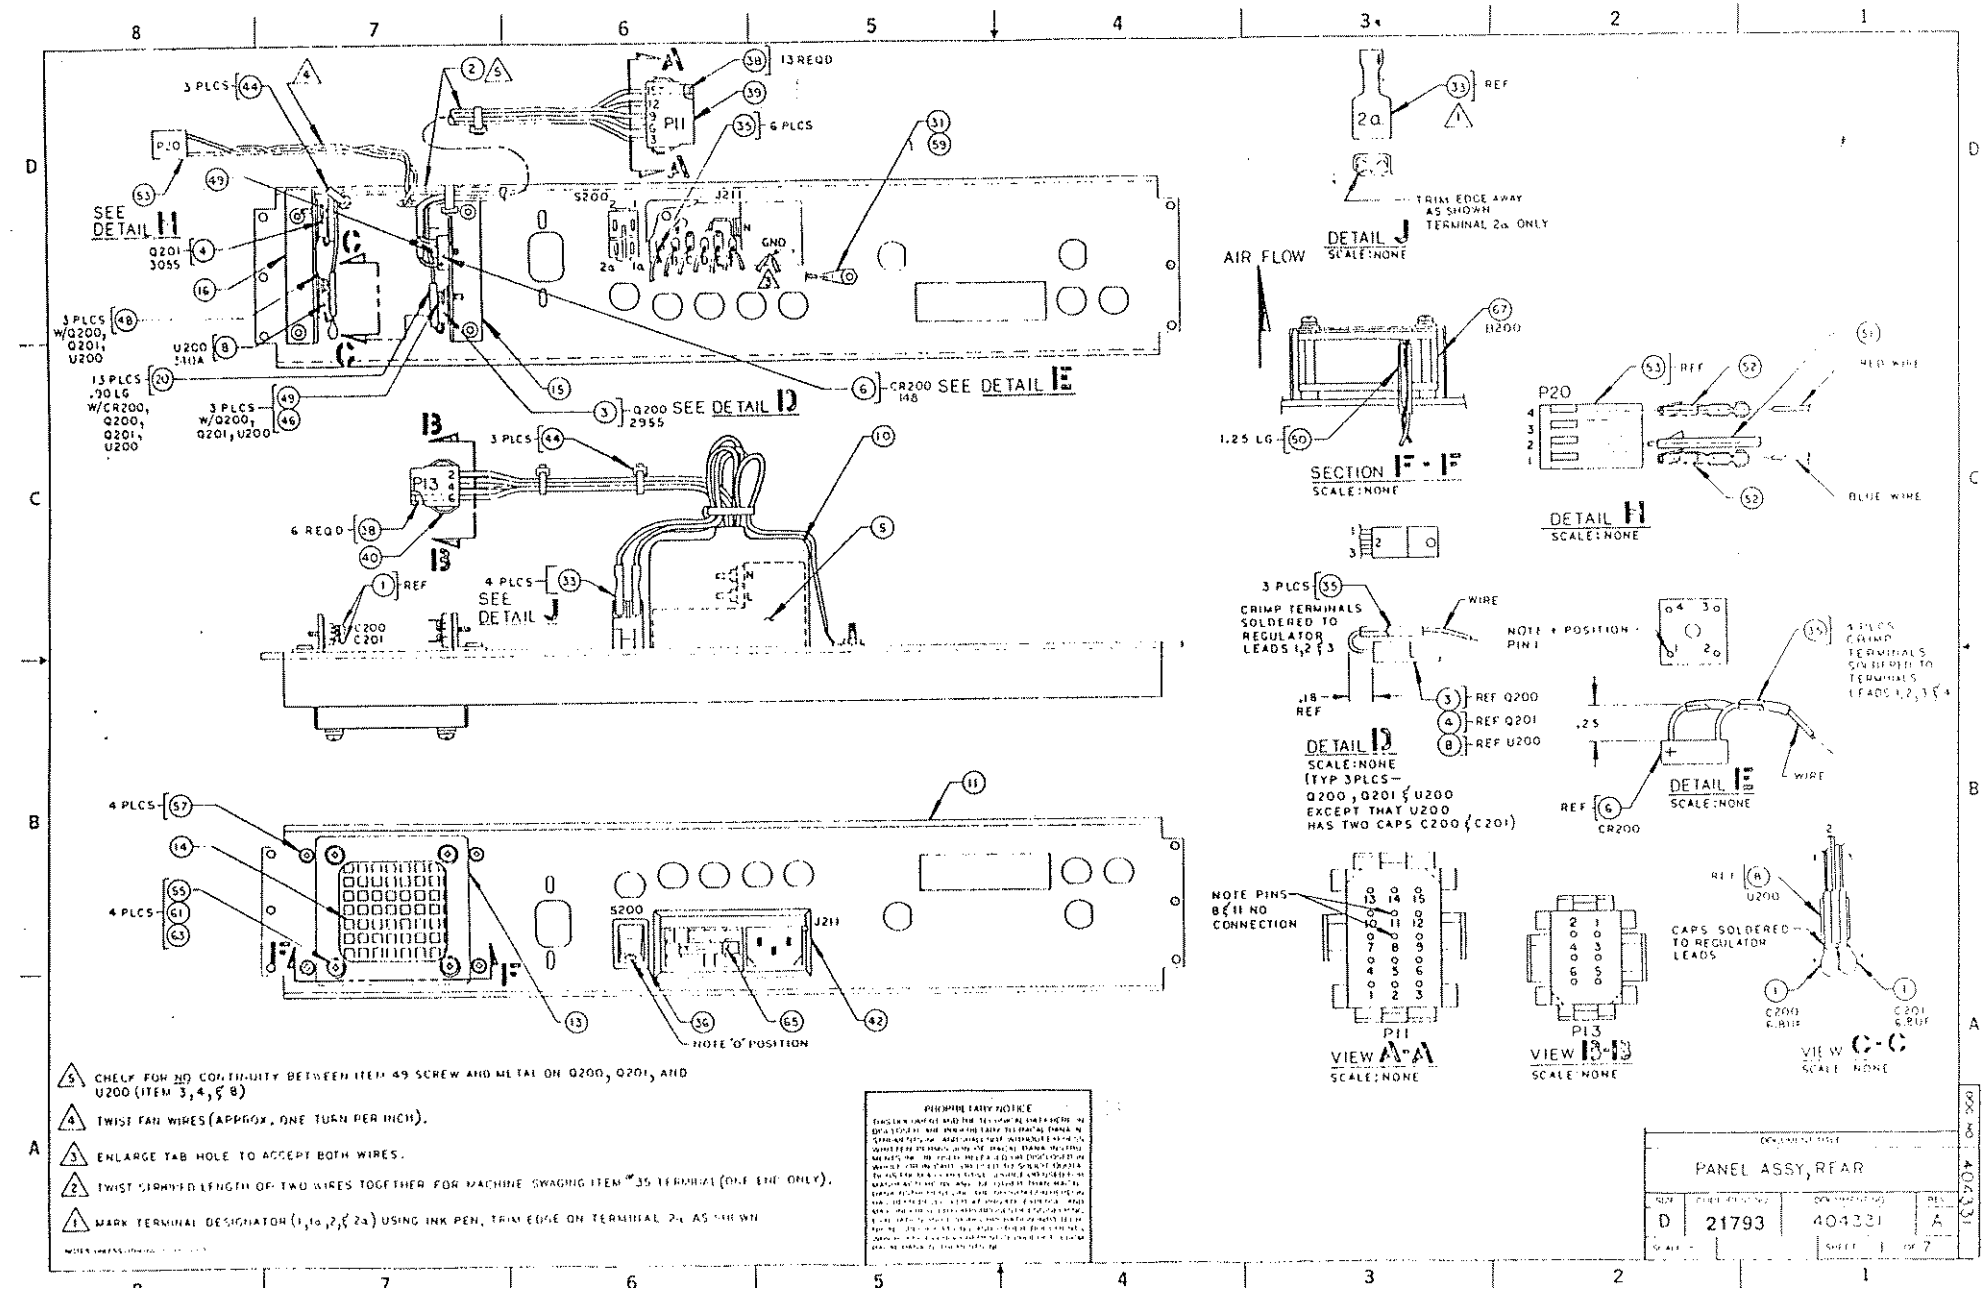


⚠5 CHECK FOR NO CONTINUITY BETWEEN ITEM 49 SCREW AND METAL ON Q200, Q201, AND U200 (ITEM 3, 4, & 8)

⚠4 TWIST FAN WIRES (APPROX. ONE TURN PER INCH).

⚠3 ENLARGE TAB HOLE TO ACCEPT BOTH WIRES.

⚠2 TWIST STRIPPED LENGTH OF TWO WIRES TOGETHER FOR MACHINE SWAGING ITEM #35 TERMINAL (ONE END ONLY).


⚠1 MARK TERMINAL DESIGNATOR (1, 1a, 2, & 2a) USING INK PEN. TRIM EDGE ON TERMINAL 2a AS SHOWN

PROPRIETARY NOTICE

PANEL ASSY, REAR

| SIZE | FSCM NO. | DWG NO. | REV |
|---|---|---|---|
| D | 21793 | 404331 | A |

SCALE — SHEET 1 OF 7

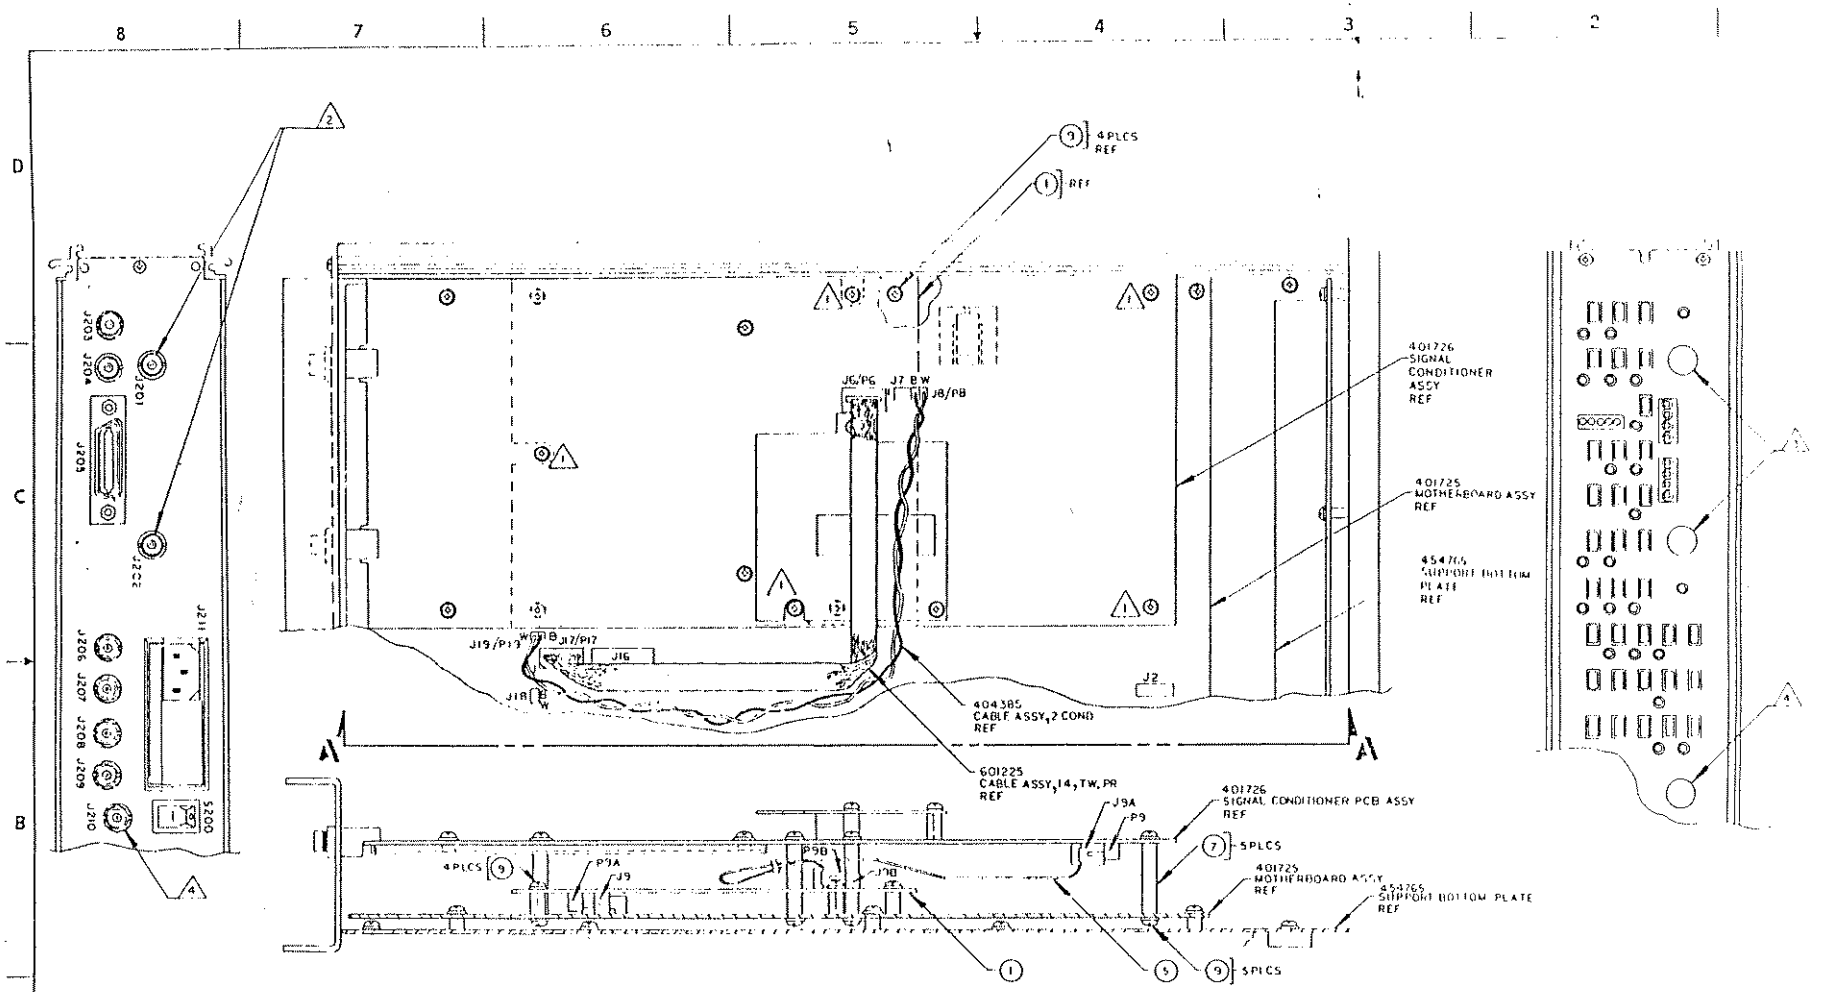


SECTION A-A

4. REMOVE CHANNEL C ENC FROM FRONT PANEL AND INSTALL IN REAR PANEL. ROUTE CAPLT TO REAR PANEL (NO ATTACHMENTS REQD) MOVE HOLE PLUG FROM REAR PANEL TO FRONT PANEL. (REF: MODEL 1996 ONLY).

3. SHIFT PLASTIC PLUGS 610231 (SUPPLIED WITH TOP-LINE REF) FROM REAR PANEL TO RELATING HOLES IN FRONT PANEL. NOTE: ONLY APPLICABLE IF REAR INPUT IS INSTALLED AFTER OR DURING FINAL ASSY BUILD.

2. LOCK NUTS SUPPLIED WITH BNCS ON SIGNAL CONDITIONER.

1. SCREWS NOTED SUPPLIED WITH CHASSIS ASSY. WILL BE USED IN SAME POSITIONS ON SIGNAL CONDITIONER AS IN STD FRONT INPUT CONFIG.


PROPRIETARY NOTICE

DOCUMENT TITLE
REAR INPUT ASSY, OPT. 01

| SIZE | FSCM NO. | DOCUMENT NO. | REV |
|---|---|---|---|
| D | 21793 | 404378 | A |

SHEET 1 OF 2

DOC NO 404378

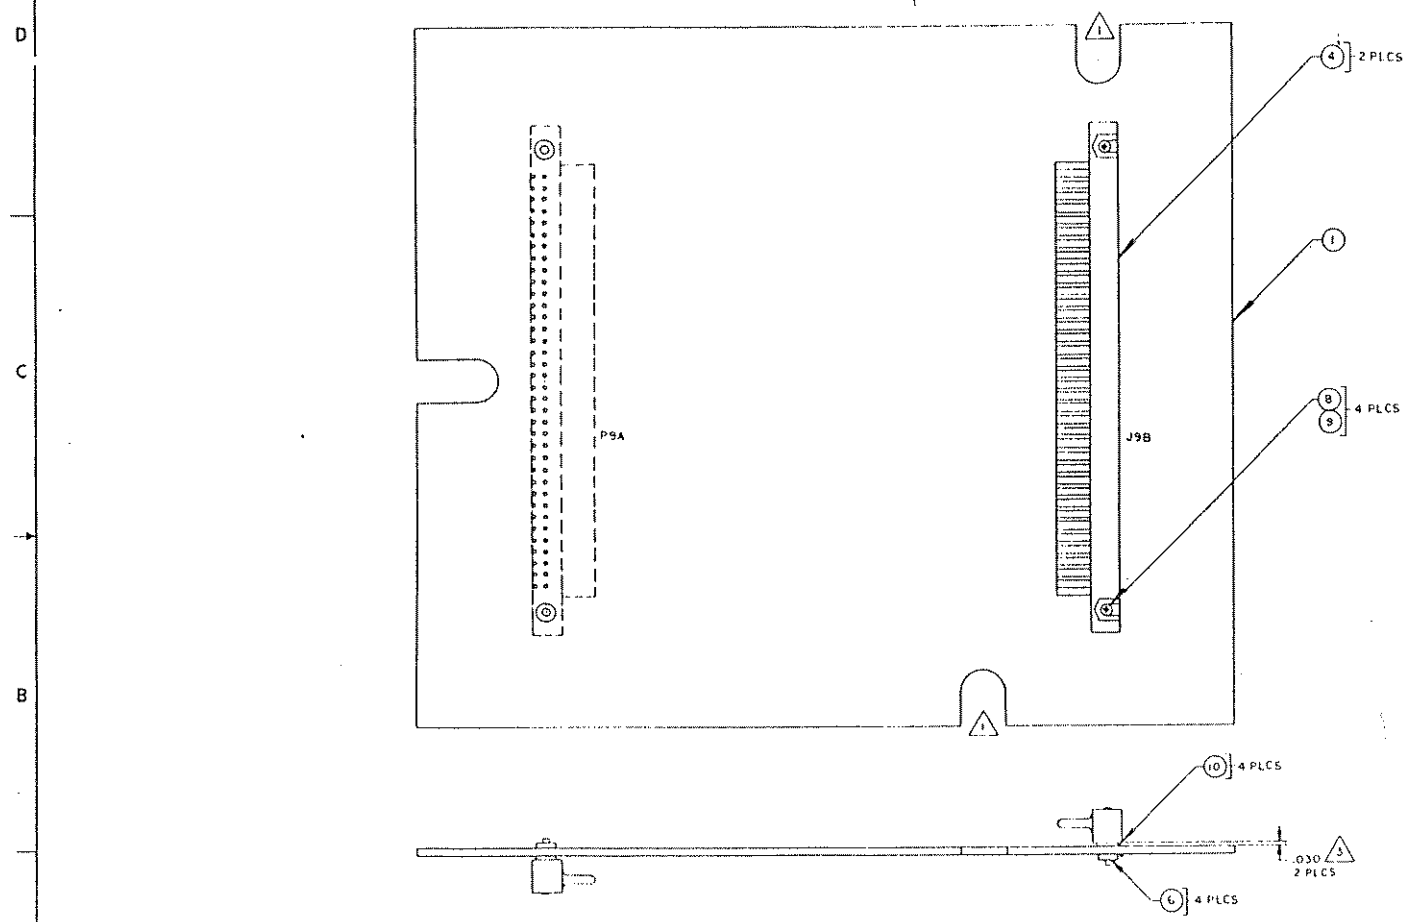


3 MAINTAIN .050 CLEARANCE BETWEEN CONN. (ITEM 4) & PCB TYP.


2. SCHEMATIC REF. 431752.

1 VERIFY ORIENTATION OF SLOTS PRIOR TO CONNECTOR INSTALLATION.

PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREIN DISCLOSED ARE THE PROPRIETARY TECHNICAL DATA OF [illegible] AND SHALL NOT BE DISCLOSED TO OTHERS FOR MANUFACTURE, USE OR SALE WITHOUT WRITTEN PERMISSION OF [illegible]. THIS DOCUMENT IS LOANED SUBJECT TO THE AGREEMENT THAT NEITHER IT NOR THE INFORMATION DISCLOSED THEREIN WILL BE REPRODUCED OR COPIED OR USED IN WHOLE OR IN PART FOR THE USE OF OTHERS EXCEPT UNDER A WRITTEN AGREEMENT WITH [illegible] AND THAT IT WILL BE RETURNED TO [illegible] ON DEMAND. THE INFORMATION DISCLOSED HEREIN WAS DEVELOPED AT PRIVATE EXPENSE AND IT IS NOT TO BE DISCLOSED BY ANYONE EXCEPT THAN NORMAL MANUFACTURING OR USE BY ANYONE EXCEPT THAN NORMAL EVALUATION AND SERVICING WITHOUT PRIOR WRITTEN PERMISSION OF [illegible] AND CONTAINS TRADE SECRETS OF [illegible] AND OTHER RESTRICTIONS AS SET FORTH IN THE LIMITED RIGHTS AND RESTRICTED RIGHTS NOTICES OF [illegible] AND [illegible] CONTRACTS.

| | | | |
|---|---|---|---|
| DOCUMENT TITLE: PCB ASSY, REAR INPUT | | | DOC NO 401752 |
| SIZE D | CODE IDENT NO 21793 | DOCUMENT NO 401752 | REV B |
| SCALE 2/1 | WEIGHT | SHEET 1 OF 2 | |

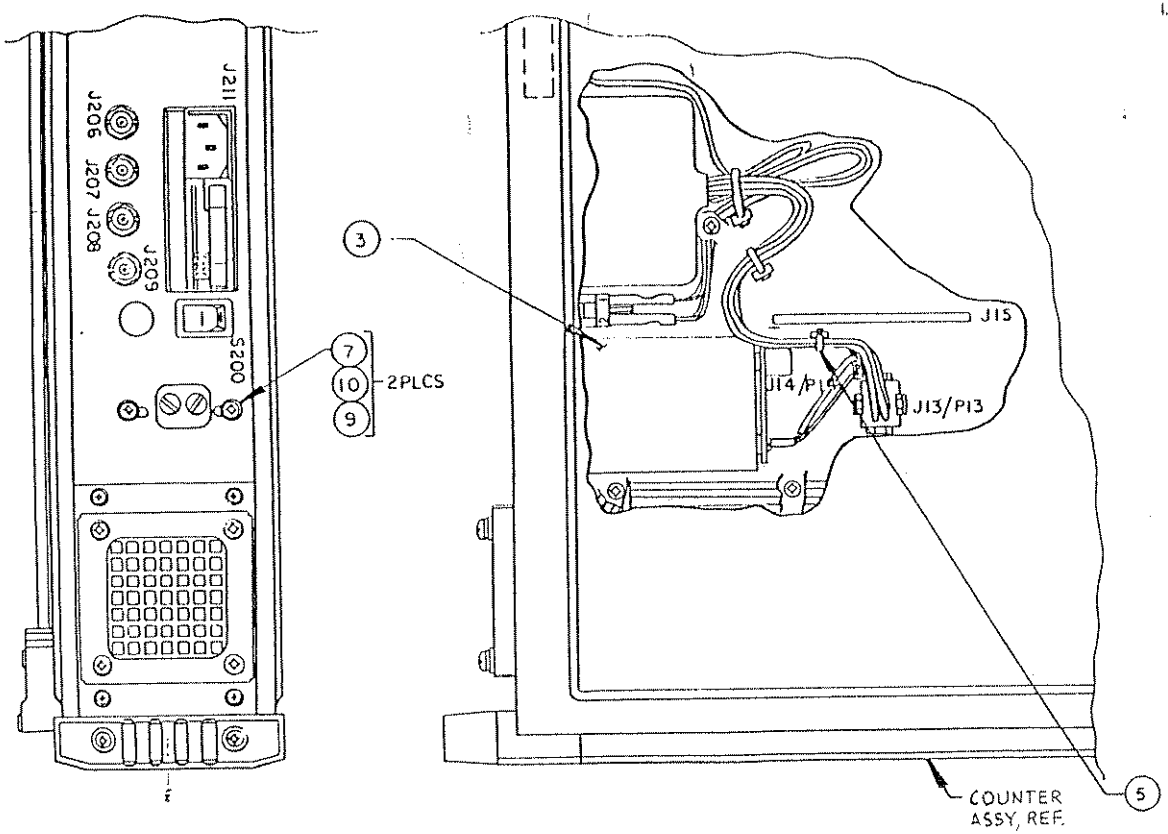


2. REMOVE THE FOLLOWING R/D PART NUMBERS: 10MHZ OSC.PCB ASSY(401730) ℄ SCREW PPH #4-40X.312 ℄ WASHER (616252) 2PLCS.
1. REMOVE CABLE TIE (610777) SECURING CABLES TO J14/P14 AND J13/P13.

PROPRIETARY NOTICE

THIS DOCUMENT AND THE TECHNICAL DATA HEREIN DISCLOSED ARE THE PROPRIETARY PROPERTY OF RACAL-DANA INSTRUMENTS INC. AND SHALL NOT WITHOUT EXPRESS WRITTEN PERMISSION OF RACAL-DANA INSTRUMENTS INC. BE USED OR DISCLOSED TO OTHERS FOR ANY PURPOSE EXCEPT AS SPECIFICALLY AUTHORIZED IN THE CONTRACT UNDER WHICH THE SAME IS DELIVERED. THIS NOTICE SHALL BE MARKED ON ANY REPRODUCTION HEREOF IN WHOLE OR IN PART. ANY DISCLOSURE OF THIS DOCUMENT OR THE INFORMATION CONTAINED HEREIN OTHER THAN UNDER THE CONTRACT UNDER WHICH IT IS DELIVERED AND FOR THE PURPOSE SPECIFIED THEREIN, IS EXPRESSLY PROHIBITED, EXCEPT WITH THE PRIOR WRITTEN PERMISSION OF RACAL-DANA INSTRUMENTS INC. THE RECEIPT OR POSSESSION OF THIS DOCUMENT DOES NOT CONVEY OR IMPLY ANY RIGHTS TO REPRODUCE, DISCLOSE OR MANUFACTURE, OR TO SELL ANYTHING IT MAY DESCRIBE, OR TO USE IN ANY MANNER FOR ANY PURPOSE WHATSOEVER, EXCEPT AS SPECIFICALLY AUTHORIZED IN THE CONTRACT UNDER WHICH IT IS DELIVERED. NEITHER THIS DOCUMENT NOR THE INFORMATION CONTAINED HEREIN IS TO BE USED IN ANY MANNER DETRIMENTAL TO THE INTEREST OF RACAL-DANA INSTRUMENTS INC. OR IN ANY MANNER OTHER THAN FOR RACAL-DANA INSTRUMENTS INC. THE INFORMATION CONTAINED HEREIN IS NOT TO BE DISCLOSED TO ANY PERSON OUTSIDE THE RECIPIENT'S ORGANIZATION EXCEPT AS SPECIFICALLY AUTHORIZED IN THE CONTRACT UNDER WHICH IT IS DELIVERED. IT PERMITS THE USE, AND MAY ONLY BE USED, BY THE RECIPIENT AND ITS EMPLOYEES IN THE EVALUATION AND FOR INCORPORATION INTO THE CONTRACT UNDER WHICH IT IS DELIVERED. IT DOES NOT PERMIT THE RECIPIENT TO MANUFACTURE OR HAVE MANUFACTURED ANY ITEM OR PRODUCTS FROM RACAL-DANA INSTRUMENTS INC. DESIGNS OR MANUFACTURING DATA WITHOUT SEPARATE WRITTEN AUTHORIZATION FROM RACAL-DANA INSTRUMENTS INC. WHICH SPECIFY PROCURE OR USE OF PRODUCTS FROM RACAL-DANA INSTRUMENTS INC.


RACAL-DANA Instruments Inc.
4 GOODYEAR IRVINE CALIFORNIA 92714

DOCUMENT TITLE

OSC ASSY, OPTION 04E

| SIZE | CODE IDENT NO | DOCUMENT NO | REV |
|---|---|---|---|
| C | 21793 | 404384 | C |

DOC NO 404184

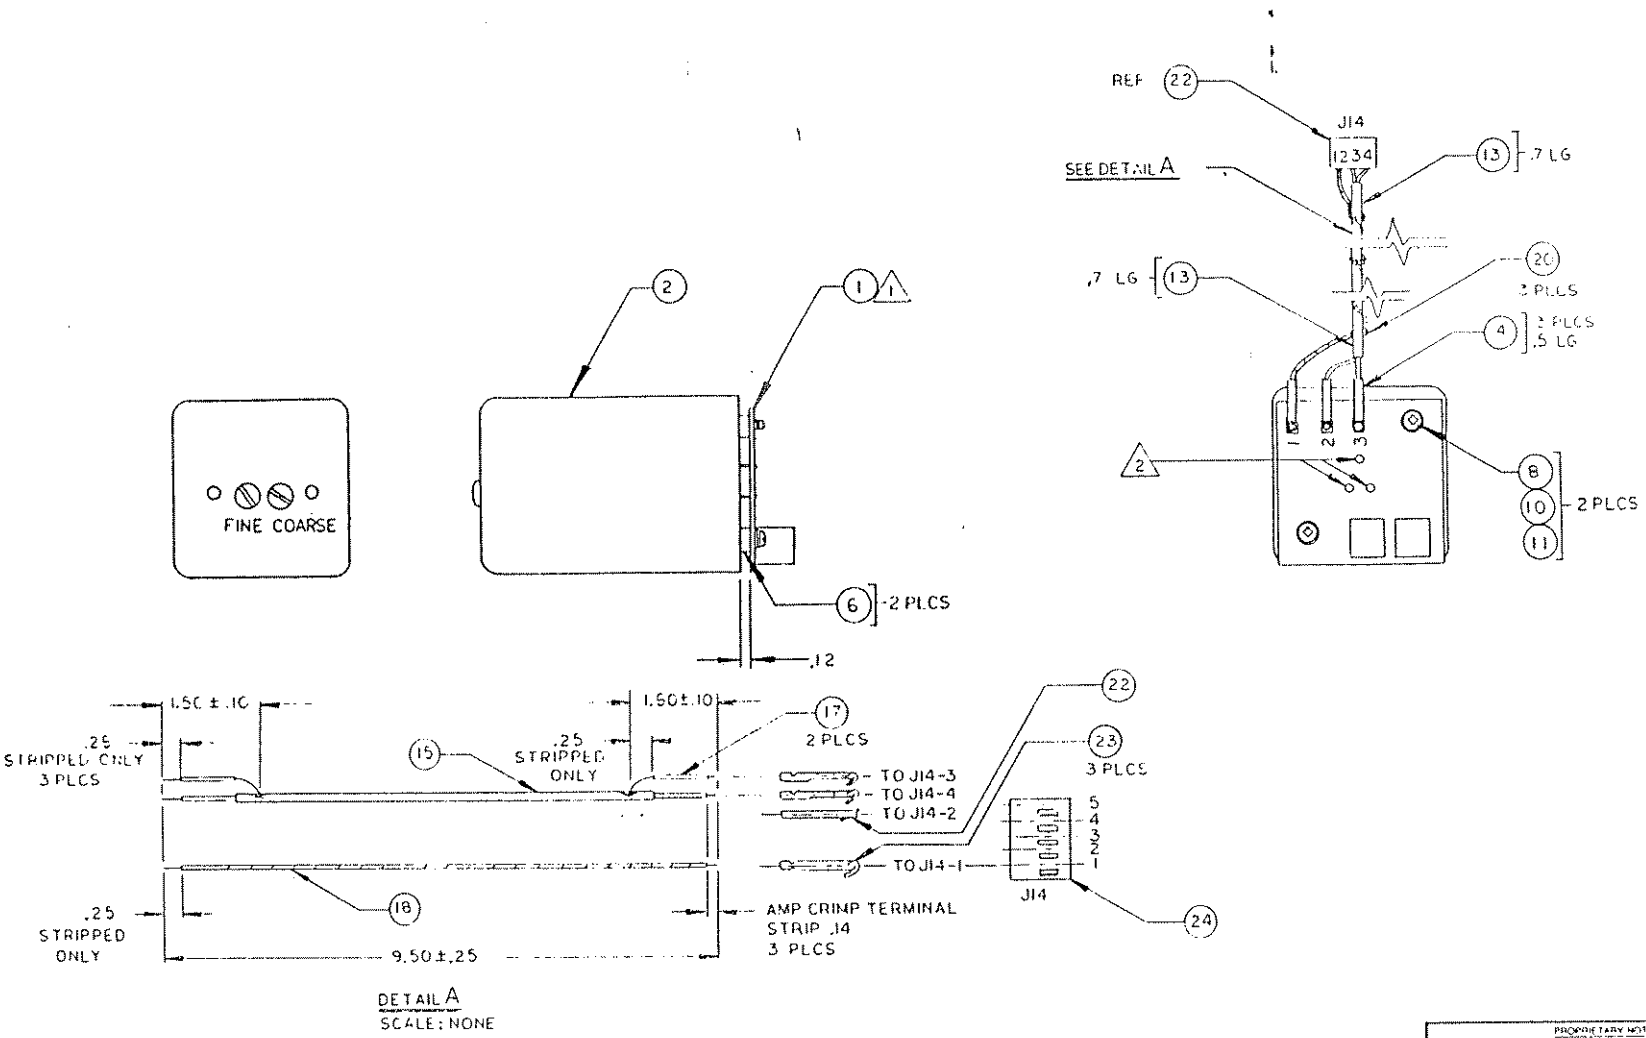


DETAIL A
SCALE: NONE

2. SOLDER AT ASSY.

1. REMOVE AND DISCARD CABLE SUPPLIED WITH ITEM 1 AND REPLACE WITH ITEMS: 4,13,15,17,18,20,22,23,24.

NOTES UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE
THIS DOCUMENT AND THE TECHNICAL DATA HEREIN DISCLOSED ARE PROPRIETARY TO RACAL-DANA INSTRUMENTS INC. AND SHALL NOT BE REPRODUCED OR TRANSFERRED TO OTHER DOCUMENTS OR DISCLOSED TO OTHERS OR USED FOR MANUFACTURING OR FOR ANY OTHER PURPOSE EXCEPT AS SPECIFICALLY AUTHORIZED IN WRITING BY RACAL-DANA INSTRUMENTS INC. THE RECIPIENT OF THIS DOCUMENT BY ITS ACCEPTANCE AGREES TO THE FOREGOING AND TO PROVIDE ANY ADDITIONAL PROTECTION REASONABLY REQUESTED BY RACAL-DANA INSTRUMENTS INC.

RACAL-DANA Instruments Inc.
4 GOODYEAR, IRVINE, CALIFORNIA 92714

DOCUMENT TITLE

# OSCILLATOR ASSY

| SIZE | CODE IDENT NO | DOCUMENT NO | REV |
|---|---|---|---|
| C | 21793 | 404386 | C |

SCALE —— SHEET 1 OF 3

DO NOT SCALE

VIEWED FROM TRACK SIDE
(CIRCUIT SIDE)





VIEWED FROM COMPONENT SIDE

NOTES

1. FIT PIN PART No. 24-3519 ITEM No. 68 IN HOLE POSITIONS MARKED □ TO PROTRUDE ON COMPONENT SIDE 3OFF
2. FIT PIN PART No. 24-3537 ITEM No 70 IN HOLE POSITIONS MARKED △ TO PROTRUDE ON COMPONENT SIDE 1OFF

4018


Component Layout, Doubler (4

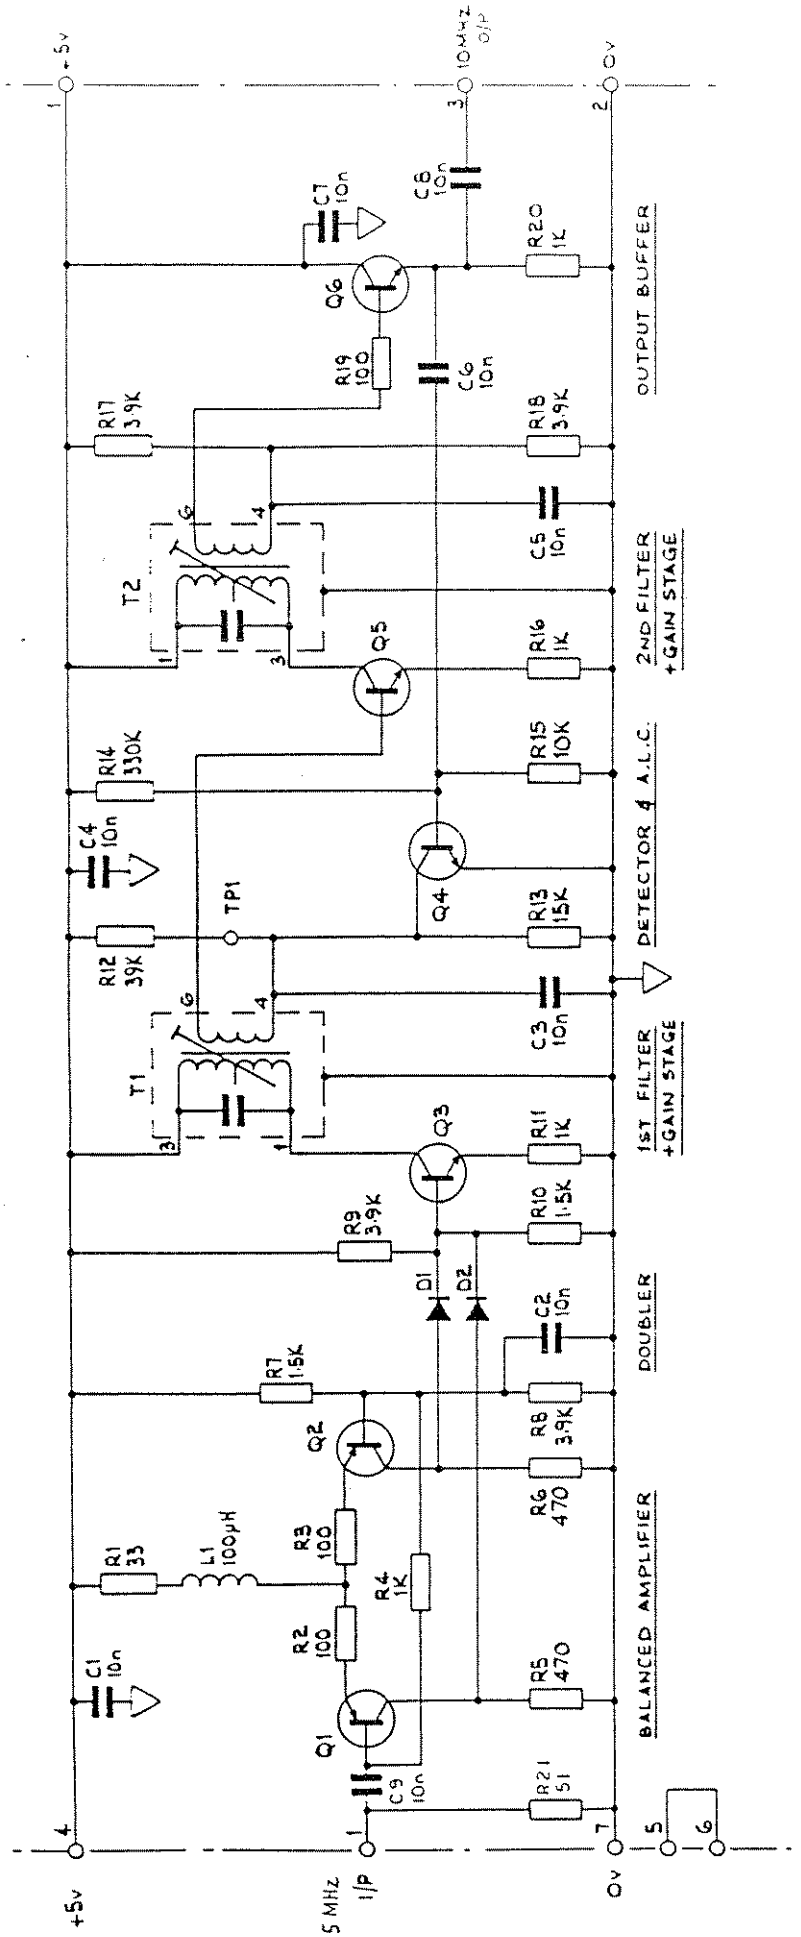



| REFERENCE | PART No | TYP. TYPE No |
|---|---|---|
| D1, 2 | 22-1029 | IN4149 |
| Q3-6 | 22-6007 | 2N3904 |
| Q1, 2 | 22-6008 | 2N3906 |

| COMPONENT REF. | |
|---|---|
| R1-21 | TP1 |
| C1-9 | T1, 2 |
| D1, 2 | L1 |
| Q1-6 | |


Circuit Diagram, Doubler (431822)

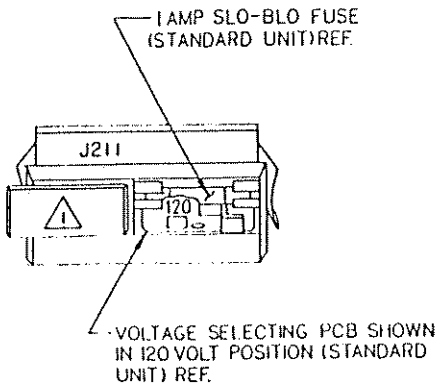



120V (STANDARD UNIT) REF.

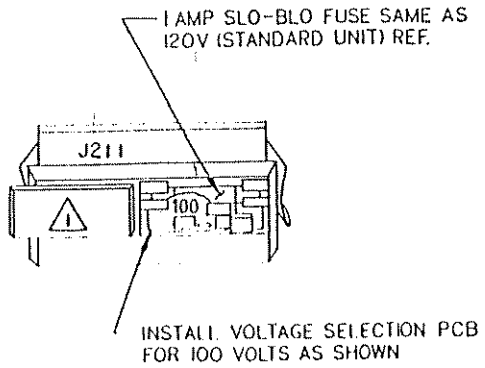


100V OPTION ASSY

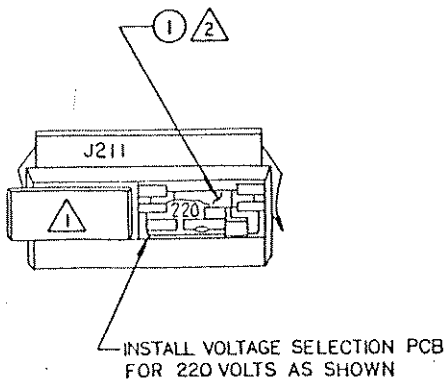


220V OPTION ASSY

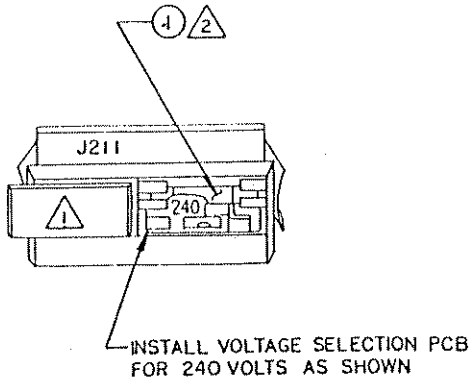


240V OPTION ASSY

3. SERIAL NUMBER LABEL SHOULD BE MARKED AS REQUIRED TO SUIT SPECIFIC OPTION TO INDICATE CORRECT VOLTAGE.

2 REMOVE AND RETURN STANDARD FUSE TO STOCK.

1 FUSE AND PCB ACCESS COVER SHOWN IN OPEN POSITION.


NOTES UNLESS OTHERWISE SPECIFIED

PROPRIETARY NOTICE

220V/240V OPERATION, OPTION 71

| SIZE | CODE IDENT NO | DWG NO | REV |
|---|---|---|---|
| C | 21793 | 404387 | A |

SCALE — SHEET 1 OF 2

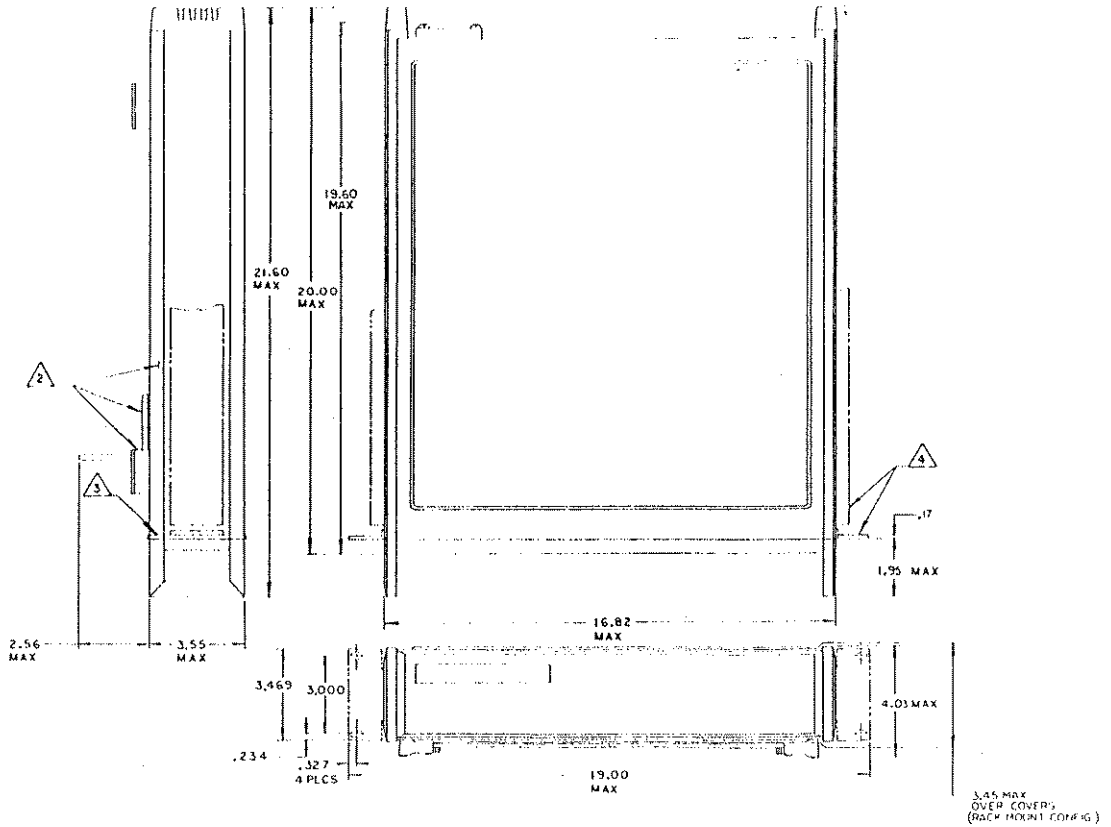


4. REFERENCE: SLIDE RACK MOUNTING KIT 404185.
3. REFERENCE: RACK MOUNTING KIT 404180.
2. FEET, BAIL AND SIDE COVERS ARE REMOVED FOR RACK OR SLIDE INSTALLATION.
1. ALL DIMENSIONS FOR REFERENCE ONLY.

PROPRIETARY NOTICE


This drawing and the information contained herein is the property of Tektronix, Inc. and shall not be reproduced in whole or in part without written permission of Tektronix, Inc. Neither the drawing nor the information contained herein is to be used for manufacture or sale of apparatus or parts thereof by anyone other than Tektronix, Inc. without written permission of Tektronix, Inc.


OUTLINE, DIMENSIONAL
SERIES 1990

| SIZE | DRAWING IDENTIFICATION | REV |
|---|---|---|
| D | 21793 | A |

SHEET 1 OF 1

454647

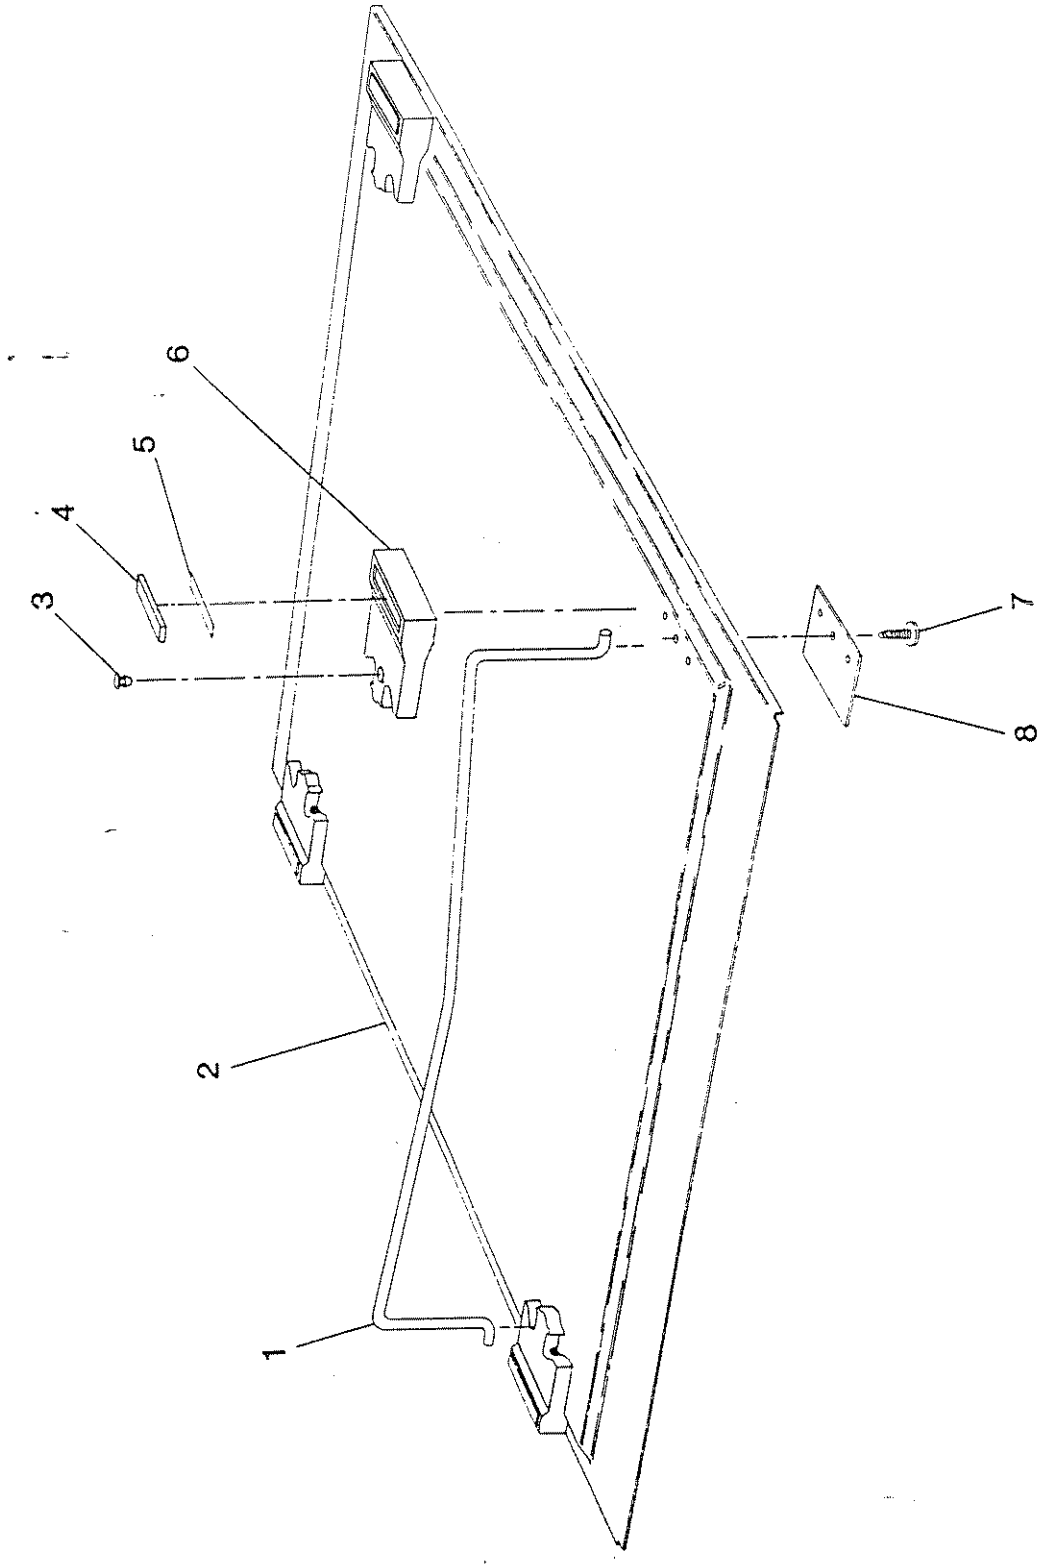
1
2
3
4
5
6
7
8

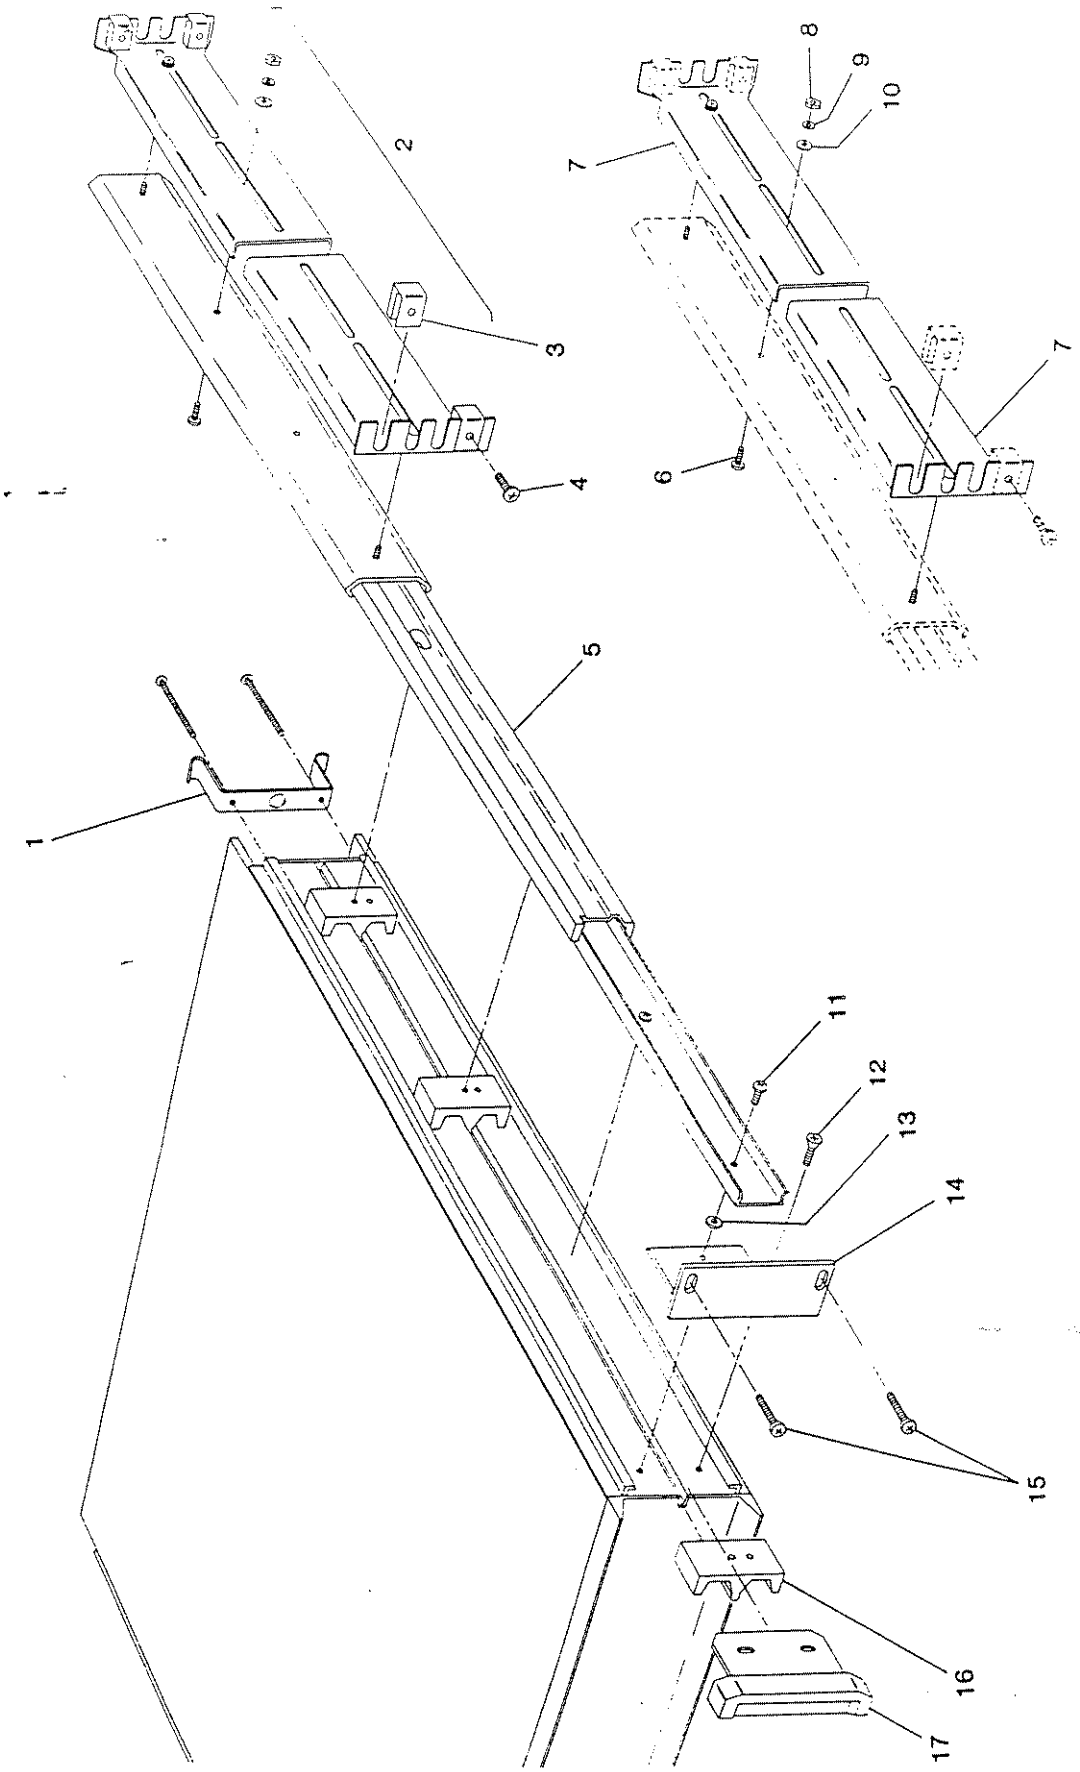
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

# SECTION 8 PARTS LIST

8.1 This section contains lists of replaceable parts arranged in the order of the following subassemblies:


| | | |
|---|---|---|
| 404335 | Counter Assy, 1995 | 8-3 |
| 404336 | Counter Assy, 1996 | 8-4 |
| 404332 | Chassis Assy | 8-5 |
| 401730 | 10 MHz Oscillator | 8-5 |
| 404389 | Channel C, 1996 | 8-6 |
| 401725 | Motherboard | 8-9 |
| 401726 | Signal Conditioner | 8-21 |
| 401728 | AMCC2 Synch | 8-29 |
| 401727 | Display | 8-31 |
| 404331 | Rear Panel | 8-34 |
| 401378 | Option 01, Rear Input | 8-36 |
| 401752 | PCB Rear Input | 8-36 |
| 404384 | Opt 04E, Oscillator | 8-37 |
| 404386 | Oscillator Assy | 8-37 |
| 401822 | Doubler | 8-38 |
| 404387 | Opt 71, 220/240V Operation | 8-38 |


8.2 Manufacturers are identified by FSC numbers listed in table 8.1, "List of Suppliers". The code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1, H4-2, and their supplements.

Table 7.1 - List of Suppliers

| FSC | Name |
|---|---|
| 00779 | Amp, Inc.<br>Harrisburg, PA |
| 00853 | Sangamo Electric Co.<br>Pickens, SC |
| 01295 | Texas Instruments, Inc.<br>Dallas, TX |
| 02114 | Ferroxcube Corp.<br>Saugerties, NY |
| 02735 | RCA-Solid State Division<br>Somerville, NJ |
| 04713 | Motorola, Inc.<br>Semi-Conductor Division<br>Phoenix, AZ |
| 05245 | Corcom, Inc.<br>Chicago, IL |
| 05397 | Union Carbide Corp.<br>Material Systems Division<br>Cleveland, OH |
| 05972 | Loctite Corp.<br>Hartford, CT |
| 06540 | Amatom Electronic Hardware<br>New Rochelle, NY |
| 06776 | Robinson Nugent, Inc.<br>New Albany, IN |
| 07263 | Fairchild<br>Semi-Conductor Division<br>Mountain View, CA |
| 09023 | Cornell-Dubilier Electronics<br>Sanford, NC |
| 11236 | CTS of Berne, Inc.<br>Berne, IN |
| 11532 | Teledyne<br>Northridge, CA |

| FSC | Name |
|---|---|
| 12969 | Unitrode Corp.<br>Watertown, MA |
| 13103 | Thermalloy, Inc.<br>Dallas, TX |
| 14433 | ITT Semiconductors<br>West Palm Beach, FL |
| 14908 | Electronic Instrument &<br>Specialty Corp.<br>Stoneham, MA |
| 14949 | Trompeter Electronics<br>Chatsworth, CA |
| 15636 | Elec-Trol, Inc.<br>Saugus, CA |
| 17856 | Siliconix, Inc.<br>Santa Clara, CA |
| 18324 | Signetics Corp.<br>Sunnyvale, CA |
| 18565 | Chromerics, Inc.<br>Woburn, MA |
| 19505 | Applied Engineering Products<br>New Haven, CT |
| 19647 | Caddock<br>Riverside, CA |
| 19738 | Avdel-Chobert<br>Teleboro, NJ |
| 1CJ86 | Bossard<br>Brookfield, CT |
| 21317 | Electronic Applications Co.<br>So. El Monte, CA |
| 21793 | Racal-Dana Instruments Inc.<br>Irvine, CA |
| 22119 | Ferranti Electric<br>Plainview, NY |

| FSC | Name |
|---|---|
| 24355 | Analog Devices<br>Norwood, MA |
| 25088 | Siemens Corp.<br>Components Group<br>Iselin, NJ |
| 27014 | National Semi-Conductor Corp.<br>Santa Clara, CA |
| 27264 | Molex Products Co.<br>Downers Grove, IL |
| 27777 | Varo Electran Devices, Inc.<br>Garland, TX |
| 28520 | Heyco<br>Kenilworth, NJ |
| 29005 | Storm Products<br>Los Angeles, CA |
| 31918 | ITT Schadow, Inc.<br>Eden Prarie, MN |
| 32293 | Intersil, Inc.<br>Cupertino, CA |
| 32559 | Bivar, Inc.<br>Santa Ana, CA |
| 32997 | Bourns<br>Trimpot Products Division<br>Riverside, CA |
| 34553 | Amperex/Mepco-Electra<br>(Component Division)<br>Hauppauge, NY |
| 34785 | Dek-Inc.<br>St. Charles, IL |
| 46384 | Penn Engineering & Mfg. Corp.<br>Doylestown, PA |
| 50434 | Hewlett-Packard Co.<br>HPA Division<br>Palo Alto, CA |
| 50579 | Litronix, Inc.<br>Cupertino, CA |

| FSC | Name |
|---|---|
| 52072 | Circuit Assembly Corp.<br>Costa Mesa, CA |
| 52531 | Hitachi Magnetics Corp.<br>Edmore, MI |
| 52648 | Plessey Memories<br>Santa Ana, CA |
| 53421 | Tyton Corp.<br>Milwaukee, WI |
| 54473 | Matsushita Electric Co.<br>Secaucus, NJ |
| 55167 | Corona Magnetics<br>Corona, CA |
| 55322 | Samtec, Inc.<br>New Albany, IN |
| 55411 | California Crystal Inc.<br>Anaheim, CA |
| 56235 | State of the Art Inc.<br>State College, PA |
| 56289 | Sprague Electric Co.<br>Pacific Division<br>Los Angeles, CA |
| 57856 | Kel-Am Inc.<br>Eldon, MO |
| 59311 | Communication Instruments<br>El Segundo, CA |
| 61394 | Seeq Technology<br>San Jose, CA |
| 65940 | Rohm Corp.<br>Irvine, CA |
| 70903 | Beldon Corp.<br>Chicago, IL |
| 71590 | Centralab Electronics<br>Milwaukee, WI |

| FSC | Name |
|---|---|
| 71707 | Coto-Coil Co., Inc.<br>Providence, RI |
| 71785 | TRW Electronic Components<br>Cinch Division<br>Elk Grove, IL |
| 72136 | Electro motive Mfg. Co., Inc.<br>Willimantic, CT |
| 72982 | Erie Technological Products, Inc.<br>Erie, PA |
| 73138 | Beckman Instruments, Inc.<br>Fullerton, CA |
| 75915 | Littelfuse, Inc.<br>Des Plaines, IL |
| 76493 | J. W. Miller Co.<br>Compton, CA |
| 78189 | Illinois Tool Works, Inc.<br>Shakeproof Division<br>Elgin, IL |
| 79963 | Zierick Mfg. Corp.<br>New Rochelle, NY |
| 80031 | Mepco-Electra<br>Morristown, NJ |
| 80131 | Electronics Industries Associates<br>Washington, DC |

| FSC | Name |
|---|---|
| 81349 | Military Specification |
| 83125 | Nytronics, Inc.<br>Darlington, SC |
| 83330 | Herman H. Smith, Inc.<br>Brooklyn, NY |
| 86928 | Seastrom Mfg. Co.<br>Glendale, CA |
| 88245 | Litton Precision Products<br>Van Nuys, CA |
| 91506 | Augut, Inc.<br>Attleboro, MA |
| 91637 | Dale Electronics, Inc.<br>Columbus, NE |
| 95275 | Vitramon, Inc.<br>Bridgeport, CT |
| 95987 | Weckesser Co., Inc.<br>Chicago, IL |
| 98291 | Sealectro Corp.<br>Mamaroneck, NY |
| NOTE 1 | RPM Enterprises<br>Santa Ana, CA |
| NOTE 2 | Res-Net Corp.<br>Whippany, NJ |
| NOTE 3 | Universal Components Co.<br>Marquardt Products<br>Los Angeles, CA |

404335-COUNTER ASSY., MODEL 1995 B

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| 1 | 404293 | COVER ASSY., BOTTOM | 21793 | 404293 |
| 2 | 401730 | PCB ASSY., 10 MHZ, OSCILLATOR | 21793 | 401730 |
| 3 | 404332 | CHASSIS ASSY | 21793 | 404332 |
| 4 | 454319 | FOOT REAR (2 REQ'D) | 21793 | 454319 |
| 6 | 454344 | PANEL, SIDE COVER (2 REQ'D) | 21793 | 454344 |
| 7 | 454352 | PANEL, TOP COVER | 21793 | 454352 |
| 9 | 454393 | HANDLE ASSY (2 REQ'D) | 21793 | 454393 |
| 11 | 454768 | BUMPER, REAR FOOT (2 REQ'D) | 21793 | 454768 |
| 12 | 454769 | OVERLAY, FRONT PANEL | 21793 | 454769 |
| 13 | 454770 | OVERLAY, REAR PANEL | 21793 | 454770 |
| 14 | 610777 | CABLE TIE | 53421 | T18R |
| 15 | 600620 | CABLE, POWER AC LINE | 70903 | KMS-7041 |
| 16 | 610231 | BUTTON PLUG, PLASTIC (4 REQ'D) | 28520 | P-500 |
| 17 | 610379 | WASHER, FLAT, #4, NYLON (4 REQ'D) | 95987 | NW4-2812 |
| 18 | 616252 | SCREW, PPH, SEMS ASSY (2 REQ'D) | 21793 | 616252 |
| 19 | 615073 | SCREW, PPH, 8-32 X .312 (4 REQ'D) | —— | —— |
| 20 | 610925 | SCREW, PPH, 6-32 X 1.00 (4 REQ'D) | 78189 | —— |
| 21 | 611026 | NUT, HEX, 112-28 (6 REQ'D) | 00779 | 1-329631-2 |
| 22 | 611027 | WASHER, LOCK, INT, 112 (6 REQ'D) | 00779 | 1-329632-2 |
| 23 | 616255 | SCREW, PPH, SEMS ASSY., 6-32 X .312 (7 REQ'D) | 78189 | —— |
| 24 | 920888 | LABEL, IDENTIFICATION | 21793 | 920888 |
| 25 | 980599 | MANUAL, INSTRUCTION | 21793 | 980599 |

404336-COUNTER ASSY., MODEL 1996 Figure 7-3 B

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| 1 | 404293 | COVER ASSY., BOTTOM | 21793 | 404293 |
| 2 | 401730 | PCB ASSY., 10 MHZ, OSCILLATOR | 21793 | 401730 |
| 3 | 404332 | CHASSIS ASSY | 21793 | 404332 |
| 4 | 454319 | FOOT REAR (2 REQ'D) | 21793 | 404319 |
| 6 | 454344 | PANEL, SIDE COVER (2 REQ'D) | 21793 | 454344 |
| 7 | 454352 | PANEL, TOP COVER | 21793 | 454352 |
| 9 | 454393 | HANDLE ASSY (2 REQ'D) | 21793 | 454393 |
| 11 | 454768 | BUMPER, REAR FOOT (2 REQ'D) | 21793 | 454768 |
| 12 | 454769 | OVERLAY, FRONT PANEL | 21793 | 454769 |
| 13 | 454770 | OVERLAY, REAR PANEL | 21793 | 454770 |
| 14 | 610777 | CABLE TIE | 53421 | T18R |
| 15 | 600620 | CABLE, POWER AC LINE | 70903 | KHS-7041 |
| 16 | 610231 | BUTTON PLUG, PLASTIC (4 REQ'D) | 28520 | P-500 |
| 17 | 610379 | WASHER, FLAT, #4, NYLON (4 REQ'D) | 95987 | NW4-2812 |
| 18 | 616252 | SCREW, PPH, SEMS ASSY (2 REQ'D) | 21793 | 616252 |
| 19 | 615073 | SCREW, PPH, 8-32 X .312 (4 REQ'D) | — | — |
| 20 | 610925 | SCREW, PPH, 6-32 X 1.00 (4 REQ'D) | 78189 | — |
| 21 | 611026 | NUT, HEX, 112-28 (6 REQ'D) | 00779 | 1-329631-2 |
| 22 | 611027 | WASHER, LCOK, INT, 112 (6 REQ'D) | 00779 | 1-329632-2 |
| 23 | 616255 | SCREW, PPH, SEMS ASSY., 6-32 X .312 (7 REQ'D) | 78189 | — |
| 24 | 920888 | LABEL, IDENTIFICATION | 21793 | 920888 |
| 25 | 980599 | MANUAL, INSTRUCTION | 21793 | 980599 |
| 26 | 404389 | PCB ASSY., CHANNEL C | 21793 | 404389 |
| 27 | 404385 | CABLE ASSY., 2 COND. | 21793 | 404385 |

404336-COUNTER ASSY., MODEL 1996 (CONT'D) Figure 7-3 B

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG., P/N |
|---|---|---|---|---|
| 28 | 454868 | BRACKET, SUPPORT, CH. C (2 REQ'D) | 21793 | 454868 |
| 30 | 601235 | CONNECTOR, BNC, PNL, MTG (J103) | 21793 | 601235 |
| 32 | 610127 | WASHER, SHOULDER, #4, NYLON (2 REQ'D) | 86928 | 5607-10 |
| 33 | 610198 | WASHER, FLAT, #4, NYLON (2 REQ'D) | 86928 | 5610-10-31 |
| 35 | 611066 | SCREW, METRIC, M3X6 (2 REQ'D) | — | — |
| 38 | 617127 | WASHER, LOCK, #4, LIGHT SERIES (2 REQ'D) | — | — |

404332 - ASSY., CHASSIS

Figure 7-4 D

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| 1 | 401725 | PCB ASSY., MOTHERBOARD | 21793 | 401725 |
| 2 | 401726 | PCB ASSY., SIGNAL COND. | 21793 | 401726 |
| 3 | 401727 | PCB ASSY., DISPLAY KEYBOARD | 21793 | 401727 |
| 9 | 192552 | FASTENER, LOCK, 14-PIN DIP (2 REQ'D) | 52072 | CA-14-200-DL |
| 5 | 404330 | ASSY., TRANSFORMER | 21793 | 404330 |
| 6 | 404331 | ASSY., REAR PANEL | 21793 | 404331 |
| 8 | 454372 | PUSH ROD | 21793 | 454372 |
| 10 | 454390 | BLOCK MOUNTING (8 REQ'D) | 21793 | 454390 |
| 12 | 454763 | PANEL, FRONT | 21793 | 454763 |
| 13 | 454764 | PANEL, SIDE, RIGHT | 21793 | 454764 |
| 14 | 454763 | PLATE, SUPPORT, BOTTOM | 21793 | 454736 |
| 18 | 454818 | PANEL, SIDE, LEFT | 21793 | 454818 |
| 19 | 454819 | SHIELD, SIG. COND., BTM | 21793 | 454819 |
| 21 | 500213-011 | TUBING, TYGON, 1.0 LG | 21793 | 500231-011 |
| 23 | 404385 | CABLE ASSY., 2 COND. | 21793 | 404385 |
| 24 | 601225 | CABLE ASSY., 14, TWIST PR | 52072 | CA-D14P02-284-TF-010 |
| 26 | 610909 | SCREW, PPH, TAPTITE, 6-32 X .500 (6 REQ'D) | 78189 | —— |
| 30 | 611075 | CLAMP, CLUTCH-TYPE | 78553 | C40588-020-1 |
| 37 | 616252 | SCREW, PPH, SEMS ASSY., 4-40 X .312 (11 REQ'D) | 78189 | —— |
| 38 | 616255 | SCREW, PPH, SEMS ASSY., 6-32 X .312 (9 REQ'D) | 78189 | —— |
| 40 | 616259 | SCREW, PPH, SEMS ASSY., 8-32 X .312 (4 REQ'D) | 78189 | —— |
| 44 | 921006 | BUTTON, PUSH, PWR, RED | 21793 | 921006 |

401730 - PCB ASSY., 10 MHZ OSCILLATOR

A

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| P14 | 611056 | CONNECTOR, CABLE, 5 PIN | 00779 | 530564-4 |
| Y1 | 921013 | OSCILLATOR, 10 MHZ | 21793 | 921013 |
| 1 | 411730 | PCB, 10 MHZ OSCILLATOR (UNLOADED) | 21793 | 411730 |
| 4 | 524211 | WIRE, TEFLON, STRANDED, 24 GA, BRN/RED | —— | —— |
| 5 | 524333 | WIRE, TEFLON, STRANDED, 24 GA, ORG | —— | —— |
| 6 | 524555 | WIRE, TEFLON, STRANDED, 24 GA, GRN | —— | —— |
| 8 | 610160 | STANDOFF, 4-40, THRU SWAGE (2 REQ'D) | 83330 | 4103 |
| 10 | 610777 | CABLE TIE | 53421 | 181R |
| 12 | 611052 | KEY, POLARIZING, PLUG | 00779 | 87077-1 |
| 13 | 611053 | TERMINAL, CRIMP (4 REQ'D) | 00779 | 530553-2 |

404389, CHANNEL "C" ASSY., 1.3 GHZ

Figure 7-8

| REF. DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C1 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C2 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C3 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C4 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C5 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C6 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C7 | R-21-1781 | CAP, CHIP, 3.3 PF, 50V, ±.25 PF | 95275 | VJ1206A3R3CXA |
| C8 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C9 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C10 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C11 | R-21-1781 | CAP, CHIP, 3.3 PF, 50V, ±.25 PF | 95275 | VJ1206A3R3CXA |
| C12 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C13 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C14 | R-21-1781 | CAP, CHIP, 3.3 PF, 50V, ±.25 PF | 95275 | VJ1206A3R3CXA |
| C15 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C16 | R-21-0795 | CAP,ALUM. ELEC., 47 UF, 25V WKG, -10 +50% | 54473 | ECEA1HK2R2E |
| C17 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C18 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C19 | R-21-1783 | CAP, CHIP, 4.7 PF, 50V, ±.25 PF | 95275 | VJ1206A4R7CXA |
| C21 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C22 | R-21-1781 | CAP, CHIP, 3.3 PF, 50V, ±.25 PF | 95275 | VJ1206A3R3CXA |
| C23 | R-21-1799 | CAP, CHIP, 12 PF, 50V, 5% | 95275 | VJ1206A391JXA |
| C24 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |

404389, CHANNEL "C" ASSY., 1.3 GHZ (CONT'D)

Figure 7-8

| REF. DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C25 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C26 | R-21-1800 | CAP, CHIP, 1 NF, 50V, 20% | 95275 | VJ1206Y102MXA |
| C27 | R-21-0795 | CAP, ALUM. ELEC., 47 UF | 54473 | ECEA1HK2R2E |
| C28 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C29 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C30 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C31 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C32 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C33 | R-21-1784 | CAP, CHIP, 5.6 PF, 50V, ±.25 PF | 95275 | VJ1206A5R6CXA |
| C34 | R-21-1785 | CAP, CHIP, 6.8 PF, 50V, ±.25 PF | 95275 | VJ1206A6R8CXA |
| C35 | R-21-1785 | CAP, CHIP, 6.8 PF, 50V, ±.25 PF | 95275 | VJ1206A6R8CXA |
| C36 | R-21-1785 | CAP, CHIP, 6.8 PF, 50V, ±.25 PF | 95275 | VJ1206A6R8CXA |
| C37 | R-20-1795 | CAP, CHIP, 47 PF, 50V, 5% | 95275 | VJ1206A470JXA |
| C38 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C39 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C40 | R-21-1781 | CAP, CHIP, 3.3 PF, 50V, ±.25 PF | 95275 | VJ1206A3R3CXA |
| C41 | R-21-1781 | CAP, CHIP, 3.3 PF, 50V, ±.25 PF | 95275 | VJ1206A3R3CXA |
| C42 | R-21-1784 | CAP, CHIP, 5.6 PF, 50V, ±.25 PF | 95275 | VJ1206A5R6CXA |
| C43 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C44 | R-21-0795 | CAP, ALUM. ELEC., 47 UF | 54473 | ECEA1HK2R2E |
| C45 | R-21-0704 | CAP, ALUM. ELEC., 47 UF | 18324 | 122-53479 |
| C46 | R-21-1782 | CAP, CHIP, 3.9 PF, 50V, ±.25 PF | 95275 | VJ1206A3R9CXA |
| C47 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |
| C48 | R-21-1801 | CAP, CHIP, 10 NF, 50V, 20% | 95275 | VJ1206Y103MXA |

404389, CHANNEL "C" ASSY., 1.3 GHZ (CONT'D) Figure 7-8

| REF. DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C49 | R-21-1781 | CAP, CHIP, 3.3 PF, 50V, ±.25 PF | 95275 | VJ1206A3R3CXA |
| C50 | R-21-1781 | CAP, CHIP, 3.3 PF, 50V, ±.25 PF | 95275 | VJ1206A3R3CXA |
| C51 | R-21-1789 | CAP, CHIP, 15 PF, 50V, 5% | 95275 | VJ1206A150JXA |
| C52 | R-21-1789 | CAP, CHIP, 15 PF, 50V, 5% | 95275 | VJ1206A150JXA |
| C53 | 100133 | CAP, CERAM, .1 UF, 20%, LP | 72982 | 8131LP-100-651-104M |
| D1 | 210089 | DIODE, SILICO | 50434 | 5082-2835 |
| D2 | R-22-1058 | DIODE, SILICO | 50434 | 5082-3379 |
| D3 | 210089 | DIODE, SILICO | 50434 | 5082-2835 |
| D5 | 210089 | DIODE, SILICO | 50434 | 5082-2835 |
| D6 | 210089 | DIODE, SILICO | 50434 | 5082-2835 |
| D7 | R-22-1058 | DIODE, SILICO | 50434 | 5082-3379 |
| D8 | 210017 | DIODE, HOT CARRIER, MATCHED PAIR | 21793 | 210017 |
| D9 | 210017 | DIODE, HOT CARRIER, MATCHED PAIR | 21793 | 210017 |
| D10 | R-22-1814 | DIODE, ZENER | 22119 | BZX79C9V1 |
| D11 | R-22-1814 | DIODE, ZENER | 22119 | BZX79C9V1 |
| D12 | R-22-1029 | DIODE, SILICO | 14433 | 1N4149 |
| IC1 | 230547 | IC, QUAD COMPARATOR | 27014 | LM339N |
| IC2 | 230787 | IC, TRIPLE LINE RECEIVER | 04713 | MC10116P |
| IC3 | R-22-4694 | IC, 1.3 GHz PRESCALER PLESSEY | 52648 | SP4730 |
| IC4 | 230193 | IC, TTL LOW POWER SHOTTY NAND GATES | 01295 | 74LS00 |
| L1 | R-17-3240 | COIL ASSY | 21793 | R-17-3240 |

404389, CHANNEL "C" ASSY., 1.3 GHZ (CONT'D) Figure 7-8

| REF. DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| Q1 | R-22-6123 | TRANSISTOR | 34553 | BFR90 |
| Q2 | R-22-6123 | TRANSISTOR | 34553 | BFR90 |
| Q3 | R-22-6123 | TRANSISTOR | 34553 | BFR90 |
| Q4 | R-22-6155 | TRANSISTOR | 50434 | HXTR3101 |
| R3 | R-20-5768 | RES, CHIP, 10K, 1/8W, 5% | 65940 | MCR18-10K-5PCT |
| R4 | R-20-5768 | RES, CHIP, 10K, 1/8W, 5% | 65940 | MCR18-10K-5PCT |
| R5 | R-20-5841 | RES, CHIP, 150 OHM, 1W | 56235 | 2021CPX151J |
| R6 | R-20-5837 | RES, CHIP, 39 OHM, 1W | 56235 | 2021CPX390J |
| R7 | R-20-5787 | RES, CHIP, 330 OHM, 1/8W, 5%, 200V | 65940 | MCR18-330-5PCT |
| R8 | R-20-5783 | RES, CHIP, 150 OHM, 1/8W, 5%, 200V | 65940 | MCR18-150-5PCT |
| R9 | R-20-5787 | RES, CHIP, 330 OHM, 1/8W, 5%, 200V | 65940 | MCR18-330-5PCT |
| R10 | R-20-5764 | RES, CHIP, 100 OHM, 1/8W, 5% | 65940 | MCR18-100-5PCT |
| R11 | R-20-5787 | RES, CHIP, 330 OHM, 1/8W, 5%, 200V | 65940 | MCR18-330-5PCT |
| R12 | R-20-5771 | RES, CHIP, 10 OHM, 1/8W, 5%, 200V | 65940 | MCR18-10-5PCT |
| R13 | R-20-5776 | RES, CHIP, 33 OHM, 1/8W, 5%, 200V | 65940 | MCR18-33-5PCT |
| R14 | R-20-5787 | RES, CHIP, 330 OHM, 1/8W, 5%, 200V | 65940 | MCR18-330-5PCT |
| R15 | R-20-5786 | RES, CHIP, 270 OHM, 1/8W, 5%, 200V | 65940 | MCR18-270-5PCT |
| R16 | R-20-5788 | RES, CHIP, 390 OHM, 1/8W, 5%, 200V | 65940 | MCR18-390-5PCT |
| R18 | R-20-5771 | RES, CHIP, 10 OHM, 1/8W, 5%, 200V | 65940 | MCR18-10-5PCT |
| R19 | R-20-5776 | RES, CHIP, 33 OHM, 1/8W, 5%, 200V | 65940 | MCR18-33-5PCT |
| R20 | R-20-5787 | RES, CHIP, 330 OHM, 1/8W, 5%, 200V | 65940 | MCR18-330-5PCT |
| R21 | R-20-5784 | RES, CHIP, 180 OHM, 1/8W, 5%, 200V | 65940 | MCR18-180-5PCT |
| R22 | R-20-5784 | RES, CHIP, 180 OHM, 1/8W, 5%, 200V | 65940 | MCR18-180-5PCT |
| R23 | R-20-5788 | RES, CHIP, 390 OHM, 1/8W, 5%, 200V | 65940 | MCR18-390-5PCT |
| R24 | R-20-5771 | RES, CHIP, 10 OHM, 1/8W, 5%, 200V | 65940 | MCR18-10-5PCT |

404389, CHANNEL "C" ASSY., 1.3 GHZ (CONT'D) Figure 7-8

| REF. DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| R25 | R-20-5776 | RES, CHIP, 33 OHM, 1/8W, 5%, 200V | 65940 | MCR18-33-5PCT |
| R26 | R-20-5787 | RES, CHIP, 330 OHM, 1/8W, 5%, 200V | 65940 | MCR18-330-5PCT |
| R27 | R-20-7049 | POT, 20K | 73138 | 72XLR20K |
| R28 | R-20-5788 | RES, CHIP, 390 OHM, 1/8W, 5%, 200V | 06540 | MCR18-390-5PCT |
| R29 | R-20-5813 | RES, CHIP, 100K, 1/8W, 5%, 200V | 06540 | MCR18-100K-5PCT |
| R30 | R-20-5771 | RES, CHIP, 10 OHM, 1/8W, 5%, 200V | 06540 | MCR18-10-5PCT |
| R31 | R-20-5774 | RES, CHIP, 22 OHM, 1/8W, 5%, 200V | 06540 | MCR18-22-5PCT |
| R32 | R-20-5785 | RES, CHIP, 220 OHM, 1/8W, 5%, 200V | 06540 | MCR18-220-5PCT |
| R33 | R-20-5794 | RES, CHIP, 1.5K, 1/8W, 5%, 200V | 06540 | MCR18-1.5K-5PCT |
| R34 | R-20-5794 | RES, CHIP, 1.5K, 1/8W, 5%, 200V | 06540 | MCR18-1.5K-5PCT |
| R35 | R-20-5810 | RES, CHIP, 56K, 1/8W, 5%, 200V | 06540 | MCR18-56K-5PCT |
| R36 | R-20-5771 | RES, CHIP, 10 OHM, 1/8W, 5%, 200V | 06540 | MCR18-10-5PCT |
| R37 | R-20-5779 | RES, CHIP, 56 OHM, 1/8W, 5%, 200V | 06540 | MCR18-56-5PCT |
| R38 | R-20-5810 | RES, CHIP, 56K, 1/8W, 5%, 200V | 06540 | MCR18-56K-5PCT |
| R39 | R-20-5770 | RES, CHIP, 1M, 1/8W, 5%, 200V | 06540 | MCR18-1M-5PCT |
| R41 | R-20-5799 | RES, CHIP, 4.7K, 1/8W, 5%, 200V | 06540 | MCR18-4.7K-5PCT |
| R42 | R-20-5799 | RES, CHIP, 4.7K, 1/8W, 5%, 200V | 06540 | MCR18-4.7K-5PCT |
| R44 | R-20-5792 | RES, CHIP, 1K, 1/8W, 5%, 200V | 06540 | MCR18-1K-5PCT |
| R45 | R-20-5783 | RES, CHIP, 150 OHM, 1/8W, 5%, 200V | 06540 | MCR18-150-5PCT |
| R46 | R-20-5775 | RES, CHIP, 27 OHM, 1/8W, 5%, 200V | 06540 | MCR18-27-5PCT |
| R47 | R-20-5775 | RES, CHIP, 27 OHM, 1/8W, 5%, 200V | 06540 | MCR18-27-5PCT |
| R48 | R-20-5775 | RES, CHIP, 27 OHM, 1/8W, 5%, 200V | 06540 | MCR18-27-5PCT |
| R49 | R-20-5775 | RES, CHIP, 27 OHM, 1/8W, 5%, 200V | 06540 | MCR18-27-5PCT |
| R50 | R-20-5765 | RES, CHIP, 470 OHM, 1/8W, 5%, 200V | 06540 | MCR18-470-5PCT |

404389, CHANNEL "C" ASSY. 1.3 GHZ (CONT'D) Figure 7-8

| REF. DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| R52 | R-20-5801 | RES, CHIP, 6.8K, 1/8W, 5%, 200V | 06540 | MCR18-6.8K-5PCT |
| R53 | R-20-5797 | RES, CHIP, 3.3K, 1/8W, 5%, 200V | 06540 | MCR18-3.3K-5PCT |
| R54 | R-20-5792 | RES, CHIP, 1K, 1/8W, 5%, 200V | 06540 | MCR18-1K-5PCT |
| R55 | R-20-5792 | RES, CHIP, 1K, 1/8W, 5%, 200V | 65940 | MCR18-1K-5PCT |
| R56 | R-20-5790 | RES, CHIP, 680 OHM, 1/8W, 5%, 200V | 65940 | MCR18-680-5PCT |
| R57 | R-20-5766 | RES, CHIP, 2.7K, 1/8W, 5% | 65940 | MCR18-2.7K-5PCT |
| R58 | R-20-5797 | RES, CHIP, 3.3K, 1/8W, 5%, 200V | 65940 | MCR18-3.3K-5PCT |
| R59 | R-20-5792 | RES, CHIP, 1K, 1/8W, 5%, 200V | 65940 | MCR18-1K-5PCT |
| R60 | R-20-5792 | RES, CHIP, 1K, 1/8W, 5%, 200V | 65940 | MCR18-1K-5PCT |
| R61 | R-20-5792 | RES, CHIP, 1K, 1/8W, 5%, 200V | 65940 | MCR18-1K-5PCT |
| R62 | R-20-5792 | RES, CHIP, 1K, 1/8W, 5%, 200V | 65940 | MCR18-1K-5PCT |
| R66 | R-20-5783 | RES, CHIP, 150 OHM, 1/8W, 5% | 65940 | MCR18-150-5PCT |
| R68 | R-20-5770 | RES, CHIP, 1M, 1/8W, 5% | 65940 | MCR18-1M-5PCT |
| R69 | R-20-5770 | RES, CHIP, 1M, 1/8W, 5% | 65940 | MCR18-1M-5PCT |
| R70 | R-20-5771 | RES, CHIP, 10 OHM, 1/8W, 5%, 200V | 65940 | MCR18-10-5PCT |
| R71 | R-20-5771 | RES, CHIP, 10 OHM, 1/8W, 5%, 200V | 65940 | MCR18-10-5PCT |
| SK7 | R-23-5173 | CONNECTOR, 30 WAY | 21793 | R-23-5173 |
| 3 | 601257 | CABLE ASSEMBLY | 19505 | 80-1151-1425 |
| 4 | 601256 | CONNECTOR | 19505 | 2009-7511-000 |
| 6 | R-13-2103 | SCREEN (2 REQ'D) | 21793 | R-13-2103 |
| 7 | R-13-2104 | COVER (2 REQ'D) | 21793 | R-13-2104 |
| 8 | R-14-4000 | SPACER (2 REQ'D) | 21793 | R-14-4000 |
| 10 | R-18-1142 | P.C. BOARD (UNLOADED) | 21793 | R-18-1142 |
| 156 | 617042 | NUT, HEX, M3 (2 REQ'D) | 1CJ86 | DIN934-M3 |
| 158 | R-24-2801 | WASHER, CRINKLE, M3 (2 REQ'D) | 21793 | R-24-2801 |
| 166 | 500022 | WIRE, BARE COPPER/TIN, 22GA | 21793 | 500022 |

401725 - PCB ASSY., MOTHERBOARD Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C2 | 110215 | CAP, TANTA, 1.5 MFD, 25V, 10% | 80031 | 41GS155A025K1A |
| C3 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C4 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100W5R0-103K |
| C5 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C6 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C7 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035AS |
| C8 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100W5R0-103K |
| C9 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100W5R0-103K |
| C10 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100W5R0-103K |
| C11 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100W5R0-103K |
| C12 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C13 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100W5R0-013K |
| C14 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035AS |
| C15 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C16 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C17 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C18 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C19 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C20 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C21 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C22 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C23 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C24 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C25 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C26 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C27 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C28 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C29 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C30 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C31 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C32 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C33 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C34 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C35 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C36 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C37 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C38 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C39 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C40 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C41 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C42 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C43 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C44 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C45 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C46 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C47 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C48 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C49 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C50 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C51 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C52 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C53 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C54 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C55 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C56 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C57 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C58 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C59 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C60 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C61 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C62 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C63 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C64 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C65 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035AS |
| C66 | 100133 | CAP, CERAM, .1 MFD, LOW PROFILE, 20% | 72982 | 8131LP-100-651-104M |
| C67 | 100133 | CAP, CERAM, .1 MFD, LOW PROFILE, 20% | 72982 | 8131LP-100-651-104M |
| C68 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035AS |
| C69 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C70 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C71 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C72 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100W5R0-103K |
| C73 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100W5R0-103K |
| C74 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100W5R0-103K |
| C75 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100W5R0-103K |
| C76 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100W5R0-103K |
| C77 | 100133 | CAP, CERAM, .1 MFD, LOW PROFILE, 20% | 72982 | 8131LP-100-651-104M |
| C78 | 100133 | CAP, CERAM, .1 MFD, LOW PROFILE, 20% | 72982 | 8131LP-100-651-104M |
| C79 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035AS |
| C80 | 100133 | CAP, CERAM, .1 MFD, LOW PROFILE, 20% | 72982 | 8131LP-100-651-104M |
| C81 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C82 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035AS |
| C83 | 100133 | CAP, CERAM, .1 MFD, LOW PROFILE, 20% | 72982 | 8131LP-100-651-104M |
| C84 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C85 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C86 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C87 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035AS |
| C88 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035AS |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C89 | 110218 | CAP, TANTA, 47 MFD, 20V, 20% | 56289 | 199D476X0020EE2 |
| C90 | 110218 | CAP, TANTA, 47 MFD, 20V, 20% | 56289 | 199D476X0020EE2 |
| C91 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C92 | 110217 | CAP, AE, 1000 MFD, 35V, RADIAL | 80031 | 347SKG102M035MBS |
| C93 | 110217 | CAP, AE, 1000 MFD, 35V, RADIAL | 80031 | 347SKG102M035MBS |
| C94 | 110214 | CAP, AE, 10000 MFD, 16V | 00853 | 380-103-M-16-J04 |
| C95 | 110214 | CAP, AE, 10000 MFD, 16V | 00853 | 380-103-M-16-J04 |
| C96 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C97 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C98 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C99 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C100 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C101 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C102 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C103 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C104 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C105 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C106 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C107 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C108 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C109 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C110 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C111 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C112 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C113 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C114 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C115 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C116 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C117 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C118 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C119 | 110219 | CAP, AE, 3300 MFD, 16V, 20% | 80031 | 3476KL332M016 |
| C120 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C121 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C122 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C123 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C124 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C125 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C126 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C127 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C128 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C129 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C130 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C131 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C132 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C133 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C134 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C135 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C136 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C137 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C138 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C139 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C140 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C141 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C142 | 130171 | CAP, TRIMMER, CERAM, 5-25 PFD, 250V | 56289 | GKU25000 |
| C143 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C144 | 100065 | CAP, CERAM, .0022 MFD, 1000V, 10% | 71590 | OD222 |
| C145 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C146 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C147 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C148 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C149 | 130094 | CAP, MICA, 220 PFD, 500V, 5% | 72136 | SCDM10-221J |
| C150 | 130094 | CAP, MICA, 220 PFD, 500V, 5% | 72136 | SCDM10-221J |
| C151 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C152 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C153 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C154 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C155 | 100106 | CAP, CERAM, 100 PFD, 1000V, 10% | 56289 | 10-TS-110 |
| C156 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C157 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C158 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C159 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C160 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C161 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C162 | 100116 | CAP, CERAM, 500 PFD, 1000V, 20% | 56289 | C023B102E501M |
| C163 | 100142 | CAP, CERAM, 82 PFD, 100V, 5% | 05397 | C320C820J1G5CA |
| C164 | 100071 | CAP, CERAM, .001 MFD, 1000V, 20% | 56289 | C023B102E102M |
| C165 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C166 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C167 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C168 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106M035AS |
| C169 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C170 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C171 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C172 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |
| C173 | 100116 | CAP, CERAM, 500 PFD, 1000V, 20% | 56289 | C023B102E501M |
| C174 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5RO-103K |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C175 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C176 | 100124 | CAP, CERAM, 330 PFD, 1KV, 20% | 56289 | C023B102E331M |
| C177 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C178 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C179 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C180 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C181 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| CR1 | 230551 | IC, VOLTAGE REFERENCE | 24355 | AD589JH |
| CR2 | 211083 | DIODE, SILICO | 81349 | 1N916B |
| CR3 | 220095 | DIODE, ZENER, DUAL, 18V | SEE NOTE 1 TABLE 7.1 | DM503CC100SP |
| CR4 | 220100 | DIODE ARRAY, 11 ZENERS, SIP, 6.2V | SEE NOTE 1 TABLE 7.1 | DM512CC100SP |
| CR5 | 210004 | DIODE, SILICO | 81349 | 1N4004 |
| CR6 | 210004 | DIODE, SILICO | 81349 | 1N4004 |
| CR7 | 211083 | DIODE, SILICO | 81349 | 1N916B |
| CR8 | 230594 | IC, FULL WAVE RECT. BRIDGE | 27777 | VM148 |
| CR9 | 210004 | DIODE, SILICO | 81349 | 1N4004 |
| CR10 | 210004 | DIODE, SILICO | 81349 | 1N4004 |
| CR11 | 210004 | DIODE, SILICO | 81349 | 1N4004 |
| CR12 | 211083 | DIODE, SILICO | 81349 | 1N916B |
| CR13 | 211083 | DIODE, SILICO | 81349 | 1N916B |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| CR14 | 211083 | DIODE, SILICO | 81349 | 1N916B |
| CR15 | 211083 | DIODE, SILICO | 81349 | 1N916B |
| CR16 | 211083 | DIODE, SILICO | 81349 | 1N916B |
| CR17 | 211083 | DIODE, SILICO | 81349 | 1N916B |
| CR18 | 211083 | DIODE, SILICO | 81349 | 1N916B |
| CR19 | 211083 | DIODE, SILICO | 81349 | 1N916B |
| CR20 | 210004 | DIODE, SILICO | 81349 | 1N4004 |
| CR21 | 210102 | DIODE, VARACTOR, SILICO | 04713 | MV1632 |
| CR22 | 220099 | DIODE, ZENER, 4.7V | 04713 | 1N5992B |
| CR23 | 211083 | DIODE, SILICO | 81349 | 1N916B |
| CR24 | 220012 | DIODE, SILICO, ZENER | 81349 | 1N5338 |
| CR25 | 220012 | DIODE, SILICO, ZENER | 81349 | 1N5338 |
| CR26 | 220101 | DIODE, ZENER, 3.3V, 5% | 04713 | 1N5988 |
| F1 | 920930 | FUSE, NORMAL BLO, 6A, 250V | 75915 | 312006 |
| F2 | 920930 | FUSE, NORMAL BLO, 6A, 250V | 75915 | 312006 |
| J1 | 601192 | CONNECTOR, PCB, 34P | 52072 | CA-034-230-43 |
| J2 | 600798 | CONNECTOR, PLUG, 3P | 27264 | 09-18-5031 |
| J4 | 601221 | CONNECTOR, EDGE, RECEPT., 20P | 71785 | 50-20SN-4 |
| J9 | 601214 | CONNECTOR, EDGE, RECEPT., 72P | 57656 | RCR36-614J-10 |
| J10 | 601221 | CONNECTOR, EDGE, RECEPT., 20P | 71785 | 50-20SN-4 |
| J11 | 601217 | CONNECTOR, PWR, PLUG, 15P | 00779 | 9-350267-1 |
| J12 | 601217 | CONNECTOR, PWR, PLUG, 15P | 00779 | 9-350267-1 |
| J13 | 601218 | CONNECTOR, PWR, PLUG, 6P | 00779 | 9-350258-1 |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| J14 | 601208-012 | CONNECTOR, PCB, PLUG, 5P | 21793 | 601208-012 |
| J15 | 601208-013 | CONNECTOR, PCB, PLUG, 30P | 21793 | 601208-013 |
| J16 | 600947 | SOCKET, IC, 20P | 52072 | CA-20S-TSD-BC |
| J17 | 920734 | SOCKET, IC, 14P | 00779 | 583527-1 |
| J18 | 601208-010 | CONNECTOR, PCB, PLUG, 2P | 21793 | 601208-010 |
| J19 | 601208-010 | CONNECTOR, PCB, PLUG, 2P | 21793 | 601208-010 |
| J20 | 601208-011 | CONNECTOR, PCB, PLUG, 4P | 21793 | 601208-011 |
| J21 | 600947 | SOCKET, IC, 20P | 52072 | CA-20S-TSD-BC |
| J203 | 601231 | CONNECTOR, BNC, PC MOUNT | 00779 | 227161-2 |
| J204 | 601231 | CONNECTOR, BNC, PC MOUNT | 00779 | 227161-2 |
| J205 | 601253 | CONNECTOR, GPIB, 24P | 00779 | 553811-3 |
| J206 | 601231 | CONNECTOR, BNC, PC MOUNT | 00779 | 227161-2 |
| J207 | 601231 | CONNECTOR, BNC, PC MOUNT | 00779 | 227161-2 |
| J208 | 601231 | CONNECTOR, BNC, PC MOUNT | 00779 | 227161-2 |
| J209 | 601231 | CONNECTOR, BNC, PC MOUNT | 00779 | 227161-2 |
| L1 | 310051 | CHOKE, RF, 1.00 VH, 10% | 76493 | 9230-20 |
| L2 | 310051 | CHOKE, RF, 1.00 VH, 10% | 76493 | 9230-20 |
| L3 | 310051 | CHOKE, RF, 1.00 VH, 10% | 76493 | 9230-20 |
| Q1 | 200295 | TRANS, N-CHAN, MOS FET | 17856 | VN10KM |
| Q2 | 200299 | TRANS, PNP | 04713 | 2N3906 |
| Q3 | 200298 | TRANS, NPN | 04713 | 2N3904 |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| Q4 | 200068 | TRANS, PNP | 80131 | 2N4250 |
| Q5 | 200068 | TRANS, PNP | 80131 | 2N4250 |
| Q6 | 200298 | TRANS, NPN | 04713 | 2N3904 |
| Q7 | 200252 | TRANS, J-FET | 27014 | J174 |
| Q8 | 200296 | TRANS, P-CHAN, J-FET | 17856 | J177 |
| Q9 | 200298 | TRANS, NPN | 04713 | 2N3904 |
| Q10 | 200278 | TRANS, PWR, SCR | 04713 | 2N6504 |
| Q11 | 200278 | TRANS, PWR, SCR | 04713 | 2N6504 |
| Q12 | 200258 | TRANS | 07263 | 2N4248 |
| Q13 | 200258 | TRANS | 07263 | 2N4248 |
| Q14 | 200298 | TRANS, NPN | 04713 | 2N3904 |
| Q15 | 200298 | TRANS, NPN | 04713 | 2N3904 |
| Q16 | 200068 | TRANS, PNP | 80131 | 2N4250 |
| R1 | 000104 | RES, CARBON, 100K, 5%, 1/4W | 81349 | RC07GF104J |
| R2 | 000103 | RES, CARBON, 10K, 5%, 1/4W | 81349 | RC07GF103J |
| R3 | 000112 | RES, CARBON, 1.1K, 5%, 1/4W | 81349 | RC07GF112J |
| R4 | 000104 | RES, CARBON, 100K, 5%, 1/4W | 81349 | RC07GF104J |
| R5 | 000105 | RES, CARBON, 1M, 5%, 1/4W | 81349 | RC07GF105J |
| R6 | 000474 | RES, CARBON, 470K, 5%, 1/4W | 81349 | RC07GF474J |
| R7 | 000225 | RES, CARBON, 2.2M, 5%, 1/4W | 81349 | RC07GF225J |
| R8 | 012004 | RES, METAL, 4.12K, 1%, 1/8W | 81349 | RN55D4121F |
| R9 | 000472 | RES, CARBON, 4.7K, 5%, 1/4W | 81349 | RC07GF472J |
| R10 | 000101 | RES, CARBON, 100 OHM, 5%, 1/4W | 81349 | RC07GF101J |
| R11 | 010392 | RES, METAL, 20K, .1%, 1/8W | 81349 | RN55D2002B |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| R12 | 000512 | RES, CARBON, 5.1K, 5%, 1/4W | 81349 | RC07GF512J |
| R13 | 000101 | RES, CARBON, 100 OHM, 5%, 1/4W | 81349 | RC07GF101J |
| R14 | 010392 | RES, METAL, 20K, .1%, 1/8W | 81349 | RN55C2002B |
| R15 | 000512 | RES, CARBON, 5.1K, 5%, 1/4W | 81349 | RC07GF512J |
| R16 | 010086 | RES, METAL, 9.53K, 1/%, 1/4W | 81349 | RN60D9531F |
| R17 | 010385 | RES, METAL, 19.1K, 1%, 1/4W | 81349 | RN60D1912F |
| R18 | 000221 | RES, CARBON, 220 OHM, 5%, 1/4W | 81349 | RC07GF221J |
| R19 | 010086 | RES, METAL, 9.53K, 1%, 1/4W | 81349 | RN60D9531F |
| R20 | 010385 | RES, METAL, 19.1K, 1%, 1/4W | 81349 | RN60D1912F |
| R21 | 000222 | RES, CARBON, 2.2K, 5%, 1/4W | 81349 | RC07GF222J |
| R22 | 000622 | RES, CARBON, 6.2K, 5%, 1/4W | 81349 | RC07GF622J |
| R23 | 000331 | RES, CARBON, 330 OHM, 5%, 1/4W | 81349 | RC07GF331J |
| R24 | 000472 | RES, CARBON, 4.7K, 5%, 1/4W | 81349 | RC07GF472J |
| R25 | 000101 | RES, CARBON, 100 OHM, 5%, 1/4W | 81349 | RC07GF101J |
| R26 | 000470 | RES, CARBON, 47 OHM, 5%, 1/4W | 81349 | RC07GF470J |
| R27 | 000331 | RES, CARBON, 330 OHM, 5%, 1/4W | 81349 | RC07GF331J |
| R28 | 000102 | RES, CARBON, 1K, 5%, 1/4W | 81349 | RC07GF102J |
| R29 | 000103 | RES, CARBON, 10K, 5%, 1/4W | 81349 | RC07GF103J |
| R30 | 000432 | RES, CARBON, 4.3K, 5%, 1/4W | 81349 | RC07GF432J |
| R31 | 000103 | RES, CARBON, 10K, 5%, 1/4W | 81349 | RC07GF103J |
| R32 | 000472 | RES, CARBON, 4.7K, 5%, 1/4W | 81349 | RC07GF472J |
| R33 | 000472 | RES, CARBON, 4.7K, 5%, 1/4W | 81349 | RC07GF472J |
| R34 | 000472 | RES, CARBON, 4.7K, 5%, 1/4W | 81349 | RC07GF472J |
| R35 | 000104 | RES, CARBON, 100K, 5%, 1/4W | 81349 | RC07GF104J |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| R36 | 000472 | RES, CARBON, 4.7K, 5%, 1/4W | 81349 | RC07GF472J |
| R37 | 000102 | RES, CARBON, 1K, 5%, 1/4W | 81349 | RC07GF102J |
| R38 | 000333 | RES, CARBON, 33K, 5%, 1/4W | 81349 | RC07GF333J |
| R39 | 000470 | RES, CARBON, 47 OHM, 5%, 1/4W | 81349 | RC07GF470J |
| R40 | 000101 | RES, CARBON, 100 OHM, 5%, 1/4W | 81349 | RC07GF101J |
| R41 | 010123 | RES, METAL, 23.7K, 1%, 1/8W | 81349 | RN55D2372F |
| R42 | 010125 | RES, METAL, 16.2K, 1%, 1/4W | 81349 | RN60D1622F |
| R43 | 000470 | RES, CARBON, 47 OHM, 5%, 1/4W | 81349 | RC07GF470J |
| R44 | 001881 | RES, CARBON, 10 OHM, 5%, 1W | 81349 | RC32GF100J |
| R45 | 001881 | RES, CARBON, 10 OHM, 5%, 1W | 81349 | RC32GF100J |
| R46 | 000681 | RES, CARBON, 680 OHM, 5%, 1/4W | 81349 | RC07GF681J |
| R47 | 000432 | RES, CARBON, 4.3K, 5%, 1/4W | 81349 | RC07GF432J |
| R48 | 010631 | RES, METAL, 10.2K, 1%, 1/8W | 81349 | RN55C1022F |
| R49 | 000681 | RES, CARBON, 680 OHM, 5%, 1/4W | 81349 | RC07GF681J |
| R50 | 000432 | RES, CARBON, 4.3K, 5%, 1/4W | 81349 | RC07GF432J |
| R51 | 010631 | RES, METAL, 10.2K, 1%, 1/8W | 81349 | RN55C1022F |
| R54 | 000681 | RES, CARBON, 680 OHM, 5%, 1/4W | 81349 | RC07GF681J |
| R55 | 000681 | RES, CARBON, 680 OHM, 5%, 1/4W | 81349 | RC07GF681J |
| R56 | 000510 | RES, CARBON, 51 OHM, 5%, 1/4W | 81349 | RC07GF510J |
| R57 | 000101 | RES, CARBON, 100 OHM, 5%, 1/4W | 81349 | RC07GF101J |
| R58 | 000472 | RES, CARBON, 4.7K, 5%, 1/4W | 81349 | RC07GF472J |
| R59 | 000221 | RES, CARBON, 220 OHM, 5%, 1/4W | 81349 | RC07GF221J |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| R60 | 000221 | RES, CARBON, 220 OHM, 5%, 1/4W | 81349 | RC07GF221J |
| R61 | 000103 | RES, CARBON, 10K, 5%, 1/4W | 81349 | RC07GF103J |
| R62 | 000102 | RES, CARBON, 1K, 5%, 1/4W | 81349 | RC07GF102J |
| R63 | 000822 | RES, CARBON, 8.2K, 5%, 1/4W | 81349 | RC07GF822J |
| R64 | 001706 | RES, CARBON, 510 OHM, 5%, 1/2W | 81349 | RC20GF511J |
| R65 | 000103 | RES, CARBON, 10K, 5%, 1/4W | 81349 | RC07GF103J |
| R66 | 000472 | RES, CARBON, 4.7K, 5%, 1/4W | 81349 | RC07GF472J |
| R67 | 000102 | RES, CARBON, 1K, 5%, 1/4W | 81349 | RC07GF102J |
| R68 | 000101 | RES, CARBON, 100 OHM, 5%, 1/4W | 81349 | RC07GF101J |
| R69 | 000510 | RES, CARBON, 51 OHM, 5%, 1/4W | 81349 | RC07GF510J |
| R70 | 000510 | RES, CARBON, 51 OHM, 5%, 1/4W | 81349 | RC07GF510J |
| R71 | 000132 | RES, CARBON, 1.3K, 5%, 1/4W | 81349 | RC07GF132J |
| R72 | 000132 | RES, CARBON, 1.3K, 5%, 1/4W | 81349 | RC07GF132J |
| R74 | 000471 | RES, CARBON, 470 OHM, 5%, 1/4W | 81349 | RC07GF471J |
| R75 | 000103 | RES, CARBON, 10K, 5%, 1/4W | 81349 | RC07GF103J |
| R76 | 000474 | RES, CARBON, 470K, 5%, 1/4W | 81349 | RC07GF474J |
| R77 | 000104 | RES, CARBON, 100K, 5%, 1/4W | 81349 | RC07GF104J |
| R78 | 000123 | RES, CARBON, 12K, 5%, 1/4W | 81349 | RC07GF123J |
| R79 | 000221 | RES, CARBON, 220 OHM, 5%, 1/4W | 81349 | RC07GF221J |
| R80 | 000221 | RES, CARBON, 220 OHM, 5%, 1/4W | 81349 | RC07GF221J |
| R81 | 000331 | RES, CARBON, 330 OHM, 5%, 1/4W | 81349 | RC07GF331J |
| R82 | 000561 | RES, CARBON, 560 OHM, 5%, 1/4W | 81349 | RC07GF561J |
| R83 | 000512 | RES, CARBON, 5.1K, 5%, 1/4W | 81349 | RC-8GF512J |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| R84 | 000560 | RES, CARBON, 56 OHM, 5%, 1/4W | 81349 | RC07GF560J |
| R85 | 000471 | RES, CARBON, 470 OHM, 5%, 1/4W | 81349 | RC07GF471J |
| R86 | 000624 | RES, CARBON, 620K, 5%, 1/4W | 81349 | RC07GF624J |
| R87 | 000101 | RES, CARBON, 100 OHM, 5%, 1/4W | 81349 | RC07GF101J |
| R88 | 000301 | RES, CARBON, 300 OHM, 5%, 1/4W | 81349 | RC07GF301J |
| R89 | 000101 | RES, CARBON, 100 OHM, 5%, 1/4W | 81349 | RC07GF101J |
| R90 | 000153 | RES, CARBON, 15K, 5%, 1/4W | 81349 | RC07GF153J |
| R91 | 000560 | RES, CARBON, 56 OHM, 5%, 1/4W | 81349 | RC07GF560J |
| R92 | 000182 | RES, CARBON, 1.8K, 5%, 1/4W | 81349 | RC07GF182J |
| R93 | 000221 | RES, CARBON, 220 OHM, 5%, 1/4W | 81349 | RC07GF221J |
| R94 | 000182 | RES, CARBON, 1.8K, 5%, 1/4W | 81349 | RC07GF182J |
| R95 | 000432 | RES, CARBON, 4.3K, 5%, 1/4W | 81349 | RC07GF432J |
| R96 | 000511 | RES, CARBON, 510 OHM, 5%, 1/4W | 81349 | RC07GF511J |
| R97 | 000103 | RES, CARBON, 10K, 5%, 1/4W | 81349 | RC07GF103J |
| R98 | 000471 | RES, CARBON, 470 OHM, 5%, 1/4W | 81349 | RC07GF471J |
| R99 | 000202 | RES, CARBON, 2K, 5%, 1/4W | 81349 | RC07GF202J |
| R100 | 000302 | RES, CARBON, 3K, 5%, 1/4W | 81349 | RC07GF302J |
| R101 | 000912 | RES, CARBON, 9.1K, 5%, 1/4W | 81349 | RC07GF912J |
| R102 | 000104 | RES, CARBON, 100K, 5%, 1/4W | 81349 | RC07GF104J |
| R103 | 000103 | RES, CARBON, 10K, 5%, 1/4W | 81349 | RC07GF103J |
| S1 | 600975 | SWITCH, PUSHBUTTON | 71590 | SPEC-Pb12.5 |
| T1 | 300104 | TRANSFORMER, PULSE | 55167 | CM1945 |
| U1 | 230547 | IC, QUAD COMPARATOR | 27014 | LM339 |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| U2 | 230746 | IC, MEMORY, NON-VOL, 2K X 8 | 61394 | 5516A-300 |
| U3 | 230731 | IC, DIGITAL, NAND, DUAL QUAD INPUT | 07263 | 74F20PC |
| U4 | 230719 | IC, FAST NAND | 07263 | 74F00 |
| U5 | 230705 | IC, DIGITAL | 04713 | 74F04 |
| U6 | 230744 | IC, MICRO, 68000, 8 MHZ | 04713 | MC68000P8 |
| U7 | 230740 | IC, MEMORY, RAM, 8K, 150 NS | 52531 | HM6264P-15 |
| U8 | 230740 | IC, MEMORY, RAM, 8K, 150 NS | 52531 | HM6264P-15 |
| U9 | 230368 | IC, DEMULTIPLEXER | 27014 | 74LS138 |
| U10 | 230741 | IC, INTERFACE, DAC, 12 BIT | 24355 | AD7545KN |
| U11 | 230743 | IC, LINEAR, DUAL OP AMP | 27014 | LF412CN |
| U12 | 230742 | IC, DIGITAL, PRIORITY ENCODER | 04713 | SN7545KN |
| U13 | 230637 | IC, DIGITAL | 18324 | N74LS244 |
| U14 | 230752 | IC, LINEAR, OP AMP | 24355 | ADOP07CN |
| U16 | 921005 | OSC, CLOCK, 8 MHZ, 0.1% | 04713 | RASC0-3 |
| U17 | 230813 | IC, MEMORY, 64K X 8 | 21793 | 230813 |
| U18 | 230812 | IC, MEMORY, 64K X 8 | 21793 | 230812 |
| U19 | 230741 | IC, INTERFACE, DAC, 12 BIT | 24355 | AD7545KN |
| U20 | 230745 | IC, LINEAR, VOLTAGE REF, 5V | 04713 | MC1404V5 |
| U22 | 230368 | IC, DEMULTIPLEXER | 27014 | 74LS138 |
| U23 | 230752 | IC, LINEAR, OP AMP | 24355 | ADOP07CN |
| U24 | 230711 | IC, DIGITAL | 07263 | 74F32 |
| U25 | 230760 | IC, DIGITAL | 27014 | MM74HC37 |
| U26 | 230422 | IC, OCTAL | 34335 | AM8304B |
| U27 | 230330 | IC, TRI-STATE BUFFER | 01295 | 74LS367 |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| U28 | 230704 | IC, DIGITAL TIMER | 27014 | 8254 |
| U29 | 230386 | IC, 8-BIT REGISTER | 27014 | 74LS273 |
| U30 | 230637 | IC, DIGITAL | 18324 | N74LS244 |
| U31 | 230386 | IC, 8-BIT REGISTER | 27014 | 74LS273 |
| U32 | 230414 | IC, QUAD EXCLUSIVE OR GATE | 27014 | 74LS86 |
| U33 | 230315 | IC, MULTIPLEXER | 01295 | SN74LS153N |
| U34 | 230386 | IC, 8-BIT REGISTER | 27014 | 74LS273 |
| U35 | 200294 | TRANS, PNP, QUAD 40V | 04713 | MPQ2907 |
| U36 | 200294 | TRANS, PNP, QUAD 40V | 04713 | MPQ2907 |
| U37 | 230711 | IC, QUAD 2-INPUT OR GATE | 04713 | SN74F32 |
| U38 | 230194 | IC, 14 DIP, DUAL D FLIP-FLOP | 01295 | SN74LS74A |
| U39 | 230234 | IC, 14 DIP, HEX INVERTER | 01295 | SN74LS04N |
| U40 | 230196 | IC, 14 DIP, AND-OR-INV GATES | 01295 | SN74LS51N |
| U41 | 230507 | IC, DIGITAL | 27014 | DM54LS541J |
| U42 | 230305 | IC, QUAD, 2-INPUT AND GATES | 01295 | SN74LS08 |
| U43 | 230194 | IC, 14 DIP, DUAL D FLIP-FLOP | 01295 | SN74LS74A |
| U44 | 230386 | IC, 8-BIT REGISTER | 27014 | 74LS273 |
| U45 | 200294 | TRANS, PNP, QUAD 40V | 04713 | MPQ2907 |
| U46 | 230747 | IC, LINEAR, VOLTAGE REG. | 12969 | UC3843N |
| U47 | 230747 | IC, LINEAR, VOLTAGE REG. | 12969 | UC3843N |
| U48 | 230373 | IC, VOLTAGE REGULATOR | 04713 | 7815CT |
| U49 | 230378 | IC, 3-TERM NEG. REGULATOR | 27014 | 7915CT |
| U50 | 230442 | IC, QUAD MTTL TO MECL TRANSL. | 04713 | MC10123 |
| U51 | 230443 | IC, QUAD MECL TO MTTL TRANSL. | 04713 | MC10125 |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| U52 | 230750 | IC, DIGITAL, ECL | 04713 | MC10216P |
| U53 | 230443 | IC, QUAD MECL TO MTTL TRANSL. | 04713 | MC10125 |
| U54 | 230751 | IC, DIGITAL, ECL | 04713 | MC10130P |
| U55 | 230733 | IC, DIGITAL, ECL FLIP-FLOP | 04713 | MC10231 |
| U56 | 230442 | IC, QUAD MTTL TO MECL TRANSL. | 04713 | MC10124 |
| U57 | 230205 | IC, QUAD 2, INPUT NOR GATE | 04713 | MC10102P |
| U58 | 230205 | IC, QUAD 2, INPUT NOR GATE | 04713 | MC10102P |
| U59 | 230733 | IC, DIGITAL, ECL FLIP-FLOP | 04713 | MC10231 |
| U60 | 230205 | IC, QUAD 2, INPUT NOR GATE | 04713 | MC10102P |
| U61 | 230793 | IC, DIGITAL, GPIB | 01295 | TMS9914ANL |
| U62 | 230445 | IC, 686 VOLTAGE COMPARATOR | 34335 | AM686CN-1 |
| U63 | 230748 | IC, LINEAR, OP AMP | 01295 | TL081C |
| U64 | 230792 | IC, LINEAR, TRANS ARRAY | 02735 | CA3046 |
| U65 | 230509 | IC, DIGITAL | 27014 | 74LS132N |
| U66 | 230757 | IC, LINEAR, 710 COMPARATOR | 27014 | MC1710CH |
| U67 | 230459 | IC, OCTAL GPIB TRANS | 01295 | SN75160 |
| U68 | 230472 | IC, OCTAL GPIB TRANS | 01295 | SN75161 |
| W1 | 601195 | PLUG, JUMPER, 0.1 CTR, LOW PROFILE | 00779 | 531220-2 |
| W2 | 601195 | PLUG, JUMPER, 0.1 CTR, LOW PROFILE | 00779 | 531220-2 |
| W3 | 601195 | PLUG, JUMPER, 0.1 CTR, LOW PROFILE | 00779 | 531220-2 |
| W4 | 601195 | PLUG, JUMPER, 0.1 CTR, LOW PROFILE | 00779 | 531220-2 |
| W6 | 601195 | PLUG, JUMPER, 0.1 CTR, LOW PROFILE | 00779 | 531220-2 |
| W7 | 601195 | PLUG, JUMPER, 0.1 CTR, LOW PROFILE | 00779 | 531220-2 |
| W8 | 601195 | PLUG, JUMPER, 0.1 CTR, LOW PROFILE | 00779 | 531220-2 |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| W9 | 601195 | PLUG, JUMPER, 0.1 CTR, LOW PROFILE | 00779 | 531220-2 |
| W11 | 601195 | PLUG, JUMPER, 0.1 CTR, LOW PROFILE | 00779 | 531220-2 |
| W12 | 601195 | PLUG, JUMPER, 0.1 CTR, LOW PROFILE | 00779 | 531220-2 |
| Y1 | 921004 | OSC, 10 MHZ, CRYSTAL | 55411 | MC1370 |
| Z1 | 080005 | RES NETWORK, CERMET, 10K, 6P5R, 2% | 11236 | 750-81-R10K OHM |
| Z2 | 080032 | RES NETWORK, CERMET, 4.7K, 10P9R | 11236 | 750-81-R4.7K OHM |
| Z3 | 080015 | RES NETWORK, 10K, 5% | 91637 | CSP-10E-01103J |
| Z4 | 080023 | RES NETWORK, 4.7K, 8P9R, 2% | 11236 | 750-81-R4.7K OHM |
| Z5 | 080067 | RES NETWORK, 2.2K, 8 RES | 11236 | 761-3-2.2K |
| Z6 | 080035 | RES NETWORK, 6K, 1.5W, 14P13R, 2% | 11236 | 760-1-R6K OHM |
| Z7 | 080067 | RES NETWORK, 2.2K, 8 RES | 11236 | 761-3-2.2K |
| Z8 | 080002 | RES NETWORK, 500 OHM, 8P7R, 2% | 11236 | 750-81-R500 OHM |
| Z9 | 080080 | RES NETWORK, 160 OHM, 8P7R | 11236 | 750-81-R160 OHM |
| Z10 | 080081 | RES NETWORK, 270 OHM, 8P7R | 11236 | 750-81-R270 OHM |
| Z11 | 080002 | RES NETWORK, 500 OHM, 8P7R, 2% | 11236 | 750-81-R500 OHM |
| Z12 | 080002 | RES NETWORK, 500 OHM, 8P7R, 2% | 11236 | 750-81-R500 OHM |
| Z13 | 080002 | RES NETWORK, 500 OHM, 8P7R, 2% | 11236 | 750-81-R500 OHM |
| Z14 | 080002 | RES NETWORK, 500 OHM, 8P7R, 2% | 11236 | 750-81-R500 OHM |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| Z15 | 080068 | RES NETWORK, CERMET, 470 OHM, 3 RES | 11236 | 750-63-R470 OHM |
| Z16 | 080002 | RES NETWORK, 500 OHM, 8P7R, 2% | 11236 | 750-81-R500 OHM |
| Z17 | 080005 | RES NETWORK, 10K, 6P5R, 2% | 11236 | 750-61-R10K OHM |
| 215 | 500002 | TUBING, SHRINK, .153 ID | —— | —— |
| 216 | 600786 | POST TERMINAL TP1-TP17, TP19-TP27, E1-E12, E25-E27, W6-W11 (2 EA) (53 REQ'D) | 00779 | 1-87022-0 |
| 218 | 411725 | PCB, MOTHERBOARD (UNLOADED) | 21793 | 411725 |
| 220 | 600947 | SOCKET, IC, 20P (2 REQ'D) | 52072 | CA-205-TSD-BC |
| 225 | 611059 | CONNECTOR, DIP, LOW PROFILE, 40P | 91506 | 240-AG39D |
| 229 | 601199 | SOCKET, 64P, LOW PROFILE | 06776 | ICA-649-S-TG |
| 248 | 630010 | KIT, HDWRE, STANDOFF, STUD MT | 00779 | 552633-3 |
| 251 | 601230 | HEATSINK, TO-220 | 13103 | 6232B-MT |
| 255 | 610001 | STANDOFF, 6-32 X 3/8, CAD PLATED BRASS (5 REQ'D) | 88245 | 1530-B-3/8 |
| 257 | 610905 | BRACKET, ANGLE, 8-32 TAPPED | 79963 | 34S |
| 258 | 610949 | RIVET, .205D X .276L | 19738 | 1601-5307 |
| 260 | 611065 | SPACER, 14-PIN DIP | 32559 | 814-100 |
| 261 | 615043 | SCREW, PPH, 4-40 X .312 | —— | —— |

401725 - PCB ASSY., MOTHERBOARD (CONT'D) Figure 7-12 K

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| 262 | 616252 | SCREW, PPH, SEMS ASSY., 4-40 X .312 (2 REQ'D) | 78189 | [illegible] |
| 264 | 617004 | NUT, HEX, 4-40 | —— | —— |
| 265 | 617077 | WASHER, INT. LOCK, #4 | —— | —— |
| 268 | 920624 | SOCKET, IC, 24P (2 REQ'D) | 71785 | 133-29-[illegible] |
| 272 | 920735 | SOCKET, IC, 16P (2 REQ'D) | 71785 | 133-51-[illegible] |
| 274 | 920891 | SOCKET, 28P, SOLDER TAIL (4 REQ'D) | 52072 | CA-285-TSD |
| 278 | 920971 | FUSEHOLDER, PC MOUNT (4 REQ'D) | 75915 | 122088 |

401726 - PCB ASSY., SIGNAL CONDITIONER

Figure 7-25

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C1 | 100056 | CAP, CERAM, 8.2 PFD, 1000V, 5% | 56289 | C030B102E8R2D |
| C2 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C3 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C4 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C5 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C6 | 100056 | CAP, CERAM, 8.2 PFD, 1000V, 5% | 56289 | C030B102E8R2D |
| C7 | 100063 | CAP, CERAM, .01 MFD, 500V, 20% | 56289 | C023B501E103M |
| C8 | 100063 | CAP, CERAM, .01 MFD, 500V, 20% | 56289 | C023B501E103M |
| C9 | 100063 | CAP, CERAM, .01 MFD, 500V, 20% | 56289 | C023B501E103M |
| C10 | 100063 | CAP, CERAM, .01 MFD, 500V, 20% | 56289 | C023B501E103M |
| C11 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C12 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C13 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C14 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C15 | 101174 | CAP, ELECT, 10000 MFD, 15V | 80031 | 3050HS103U015 |
| C16 | 101174 | CAP, ELECT, 10000 MFD, 15V | 80031 | 3050HS103U015 |
| C17 | 130170 | CAP, TRIMMER, .5-3 PFD, 300V | 80031 | 2502A0R503VP02F00 |
| C18 | 130170 | CAP, TRIMMER, .5-3 PFD, 300V | 80031 | 2502A0R503VP02F00 |
| C19 | 130170 | CAP, TRIMMER, .5-3 PFD, 300V | 80031 | 2502A0R503VP02F00 |

401726 - PCB ASSY., SIGNAL CONDITIONER (CONT'D)

Figure 7-25

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C20 | 130170 | CAP, TRIMMER, .5-3 PFD, 300V | 80031 | 2502A0R503VP02F00 |
| C22 | 100050 | CAP, CERAM, 2.2 PFD, 1000V, 5% | 56289 | C030B102E2R2D |
| C23 | 100050 | CAP, CERAM, 2.2 PFD, 1000V, 5% | 56289 | C030B102E2R2D |
| C25 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C26 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C27 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C28 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C29 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C30 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C31 | 100146 | CAP, CERAM, 39 PFD, 100V, 5% | 05397 | C315C390J1G5CA |
| C32 | 130080 | CAP, MICA, 22 PFD | 72136 | DM5E-220J |
| C33 | 130080 | CAP, MICA, 22 PFD | 72136 | DM5E-220J |
| C34 | 100146 | CAP, CERAM, 39 PFD, 100V, 5% | 05397 | C315C390J1G5CA |
| C35 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C36 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C37 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C38 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C39 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |

401726 - PCB ASSY., SIGNAL CONDITIONER (CONT'D) Figure 7-25 E

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C40 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C41 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C42 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C43 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C44 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C45 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C46 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C47 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C48 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C49 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C50 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C51 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C52 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C53 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C54 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C55 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |

401726 - PCB ASSY., SIGNAL CONDITIONER (CONT'D) Figure 7-25 E

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C56 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C57 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C58 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C59 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C60 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035A |
| C61 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C62 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C63 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C64 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C65 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C66 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035A |
| C67 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035A |
| C68 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C69 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C70 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035A |
| C71 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C72 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C73 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |

401726 - PCB ASSY., SIGNAL CONDITIONER (CONT'D) Figure 7-25 E

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C74 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C75 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C76 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C77 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C78 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C79 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K. |
| C80 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C81 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C82 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C83 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C84 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C85 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C86 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C87 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C88 | 130103 | CAP, CERAM, .01 MFD, 25V, 20% | 72982 | GR42-6X7R103 M50Y |
| C89 | 130103 | CAP, CERAM, .01 MFD, 25V, 20% | 72982 | GR42-6X7R103 M50Y |
| C90 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035AS |

401726 - PCB ASSY., SIGNAL CONDITIONER (CONT'D) Figure 7-25 E

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C91 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C92 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C93 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C94 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C95 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035AS |
| C96 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C97 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C98 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035AS |
| C99 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C100 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C101 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C102 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C103 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C104 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035AS |
| C105 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C106 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C107 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |

401726 - PCB ASSY., SIGNAL CONDITIONER (CONT'D) Figure 7-25 E

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C108 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106MQJ5AS |
| C109 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C110 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C111 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C112 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C113 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C114 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106MQJ5AS |
| C115 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C116 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C117 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C118 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C119 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C120 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106MQJ5AS |
| C121 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C122 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C123 | 110151 | CAP, TANTA, 10 MFD, 35V, 20% | 05397 | T354G106MQJ5AS |
| C124 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |

401726 - PCB ASSY., SIGNAL CONDITIONER (CONT'D) Figure 7-25 E

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C125 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C126 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C127 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C128 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C129 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C130 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C131 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C132 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C133 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C134 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C135 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C136 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C137 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C138 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685MQ35AS |
| C139 | 130088 | CAP, MICA, 5 PFD, 100V | 72136 | DM5D050J-DO |
| C140 | 130088 | CAP, MICA, 5 PFD, 100V | 72136 | DM5D050J-DO |
| C141 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |

401726 - PCB ASSY., SIGNAL CONDITIONER (CONT'D) Figure 7-25 E

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C142 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C143 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C144 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C145 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C146 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C147 | 100133 | CAP, CERAM, .1 MFD, LOW PROFILE, 20% | 72982 | 8131LP-100-651-104M |
| C148 | 100147 | CAP, CERAM, 120 PFD, 100V, 5% | 05397 | C315C121J1G5CA |
| C149 | 100147 | CAP, CERAM, 120 PFD, 100V, 5% | 05397 | C315C121J1G5CA |
| CR1 | 210036 | DIODE | 07263 | FD300 |
| CR2 | 211083 | DIODE, SILICO | 81349 | 1N9168 |
| CR3 | 211083 | DIODE, SILICO | 81349 | 1N9168 |
| CR4 | 210036 | DIODE | 07263 | FD300 |
| CR5 | 210036 | DIODE | 07263 | FD300 |
| CR6 | 211083 | DIODE, SILICO | 81349 | 1N9168 |
| CR7 | 211083 | DIODE, SILICO | 81349 | 1N9168 |
| CR8 | 210036 | DIODE | 07263 | FD300 |
| CR9 | 210090 | DIODE | 50434 | HP5082-2800 |
| CR10 | 210090 | DIODE | 50434 | HP5082-2800 |
| CR11 | 210090 | DIODE | 50434 | HP5082-2800 |
| CR12 | 210090 | DIODE | 50434 | HP5082-2800 |

401726 - PCB ASSY., SIGNAL CONDITIONER (CONT'D) Figure 7-25 E

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| J5 | 600823 | SOCKET, DUAL IN-LINE, 40P | 52072 | CA40S-[illegible] |
| J6 | 920734 | SOCKET, IC, 14P | 00779 | 583527-1 |
| J7 | 601208-010 | CONNECTOR, PCB PLUG, 2 PIN | 21793 | 601208-010 |
| J8 | 601208-010 | CONNECTOR, PCB PLUG, 2 PIN | 21793 | 601208-010 |
| J101 | 601234 | CONNECTOR, BNC, PCB MOUNT | 21793 | 601234 |
| J102 | 601234 | CONNECTOR, BNC, PCB MOUNT | 21793 | 601234 |
| K1 | 310164 | RELAY, REED, 1A, 200V | 71707 | 2900-067 |
| K2 | 310164 | RELAY, REED, 1A, 200V | 71707 | 2900-067 |
| K3 | 310164 | RELAY, REED, 1A, 200V | 71707 | 2900-067 |
| K4 | 310164 | RELAY, REED, 1A, 200V | 71707 | 2900-067 |
| K5 | 310164 | RELAY, REED, 1A, 200V | 71707 | 2900-067 |
| K6 | 310157 | RELAY, CRYSTAL, CAN, 2P-2T | 11532 | 172-12 (x-3) |
| K7 | 310157 | RELAY, CRYSTAL, CAN, 2P-2T | 11532 | 172-12 [illegible] |
| K8 | 310164 | RELAY, REED, 1A, 200V | 71707 | 2900-067 |
| K9 | 310164 | RELAY, REED, 1A, 200V | 71707 | 2900-067 |
| K10 | 310165 | RELAY, REED, 2C | 21317 | M2C5-[illegible] |
| K11 | 310164 | RELAY, REED, 1A, 200V | 71707 | 2900-067 |
| K12 | 310163 | RELAY, REED, 1C | 14908 | 3420 |
| K13 | 310163 | RELAY, REED, 1C | 14908 | 3420 |
| L1 | 310092 | CHOKE, RF, .1 UH | 76493 | 9230-94 |
| L2 | 310092 | CHOKE, RF, .1 UH | 76493 | 9230-94 |
| L3 | 310056 | CHOKE, RF, .68 UH | 76493 | 9230-16 |
| L4 | 310056 | CHOKE, RF, .68 UH | 76493 | 9230-16 |

401726 - PCB ASSY., SIGNAL CONDITIONER (CONT'D) Figure 7-25 E

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| L5 | 310056 | CHOKE, RF, .68 UH | 76493 | 9230-16 |
| L6 | 310056 | CHOKE, RF, .68 UH | 76493 | 9230-16 |
| L7 | 310056 | CHOKE, RF, .68 UH | 76493 | 9230-16 |
| L8 | 310056 | CHOKE, RF, .68 UH | 76493 | 9230-16 |
| L9 | 310056 | CHOKE, RF, .68 UH | 76493 | 9230-16 |
| L10 | 310056 | CHOKE, RF, .68 UH | 76493 | 9230-16 |
| L11 | 310056 | CHOKE, RF, .68 UH | 76493 | 9230-16 |
| L12 | 310056 | CHOKE, RF, .68 UH | 76493 | 9230-16 |
| L13 | 310056 | CHOKE, RF, .68 UH | 76493 | 9230-16 |
| L14 | 310056 | CHOKE, RF, .68 UH | 76493 | 9230-16 |
| L15 | 310056 | CHOKE, RF, .68 UH | 76493 | 9230-16 |
| L16 | 310056 | CHOKE, RF, .68 UH | 76493 | 9230-16 |
| P9 | 601213 | CONNECTOR, EDGE, PLUG, 72 PIN | 57856 | PR36-6101-15 |
| Q1 | 200297 | TRANSISTOR, NPN | 04713 | MPS-H10 |
| Q2 | 200291 | TRANSISTOR, DMOS QUAD | 17856 | SD5000N |
| Q3 | 200291 | TRANSISTOR, DMOS QUAD | 17856 | SD5000N |
| Q4 | 200197 | TRANSISTOR, NPN | 04713 | MPS-H10 |
| Q5 | 200197 | TRANSISTOR, NPN | 04713 | MPS-H10 |
| Q6 | 200197 | TRANSISTOR, NPN | 04713 | MPS-H10 |
| Q7 | 200099 | TRANSISTOR, PNP | 81349 | 2N4258 |
| Q8 | 200290 | TRANSISTOR, NPN | 52648 | SL3127C |
| Q9 | 200290 | TRANSISTOR, NPN | 52648 | SL3127C |
| Q10 | 200099 | TRANSISTOR, PNP | 81349 | 2N4258 |

401726 - PCB ASSY., SIGNAL CONDITIONER (CONT'D) Figure 7-25 E

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| Q11 | 200289 | TRANSISTOR, DUAL, PNP | 04713 | MD5001A |
| Q12 | 200289 | TRANSISTOR, DUAL, PNP | 04713 | MD5001A |
| Q13 | 200288 | TRANSISTOR, FET, N-CHANNEL | 17856 | J105-13 |
| Q14 | 200288 | TRANSISTOR, FET, N-CHANNEL | 17856 | J105-13 |
| R1 | 010137 | RES, METAL 100 OHM, 1%, 1/4W | 81349 | RN60D1000F |
| R2 | 010137 | RES, METAL 100 OHM, 1%, 1/4W | 81349 | RN60D1000F |
| R3 | 010137 | RES, METAL 100 OHM, 1%, 1/4W | 81349 | RN60D1000F |
| R4 | 010137 | RES, METAL 100 OHM, 1%, 1/4W | 81349 | RN60D1000F |
| R5 | 012123 | RES, CERMET, 51 OHM, 1%, 1/4W | 19647 | MK132 |
| R6 | 000102 | RES, CARBON, 1K, 5%, 1/4W | 81349 | RC07GF102J |
| R7 | 000102 | RES, CARBON, 1K, 5%, 1/4W | 81349 | RC07GF102J |
| R8 | 012123 | RES, CERMET, 51 OHM, 1%, 1/4W | 19647 | MK132 |
| R9 | 000680 | RES, CARBON, 68 OHM, 5%, 1/4W, | 81349 | RC07GF680J |
| R10 | 000680 | RES, CARBON, 68 OHM, 5%, 1/4W, | 81349 | RC07GF680J |
| R11 | 010650 | RES, METAL, 1M, 1%, 1/8W | 81349 | RN55E1004F |
| R12 | 010650 | RES, METAL, 1M, 1%, 1/8W | 81349 | RN55E1004F |
| R13 | 000510 | RES, CARBON, 51 OHM, 5%, 1/4W | 81349 | RC07GF510J |
| R14 | 000510 | RES, CARBON, 51 OHM, 5%, 1/4W | 81349 | RC07GF510J |
| R15 | 000474 | RES, CARBON, 470K, 5%, 1/4W | 81349 | RC07GF474J |
| R16 | 010536 | RES, METAL, 100K, 1%, 1/8W | 81349 | RN55C1003F |
| R17 | 010536 | RES, METAL, 100K, 1%, 1/8W | 81349 | RN55C1003F |
| R18 | 000474 | RES, CARBON, 470K, 5%, 1/4W | 81349 | RC07GF474J |
| R19 | 012110 | RES, CERMET, 1.96M, 1%, 1/4W | 19647 | MK132 |
| R20 | 012111 | RES, CERMET, 1.8M, 1%, 1/4W | 19647 | MK132 |

401726 - PCB ASSY., SIGNAL CONDITIONER (CONT'D) Figure 7-25

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| R21 | 012111 | RES, CERMET, 1.8M, 1%, 1/4W | 19647 | MK132 |
| R22 | 012110 | RES, CERMET, 1.96M, 1%, 1/4W | 19647 | MK132 |
| R23 | 012109 | RES, CERMET, 41.67K, 1%, 1/4W | 19647 | MK132 |
| R24 | 012108 | RES, CERMET, 250K, 1%, 1/4W | 19647 | MK132 |
| R25 | 012108 | RES, CERMET, 250K, 1%, 1/4W | 19647 | MK132 |
| R26 | 012109 | RES, CERMET, 41.67K, 1%, 1/4W | 19647 | MK132 |
| R27 | 000300 | RES, CARBON, 30 OHM, 5%, 1/4W | 81349 | RC07GF300J |
| R28 | 000300 | RES, CARBON, 30 OHM, 5%, 1/4W | 81349 | RC07GF300J |
| R29 | 000470 | RES, CARBON, 47 OHM, 5%, 1/4W | 80349 | RC07GF470J |
| R30 | 000470 | RES, CARBON, 47 OHM, 5%, 1/4W | 80349 | RC07GF470J |
| R31 | 000102 | RES, CARBON, 1K, 5%, 1/4W | 81349 | RC07GF102J |
| R32 | 012114 | RES, METAL FILM, 316 OHM, 1%, 1/8W | 81349 | RN55C3160F |
| R33 | 012118 | RES, METAL FILM, 1.5K, 1%, 1/8W | 81349 | RN55C1501F |
| R34 | 012118 | RES, METAL FILM, 1.5K, 1%, 1/8W | 81349 | RN55C1501F |
| R35 | 012114 | RES, METAL FILM, 316 OHM, 1%, 1/8W | 81349 | RN55C3160F |
| R36 | 012114 | RES, METAL FILM, 316 OHM, 1%, 1/8W | 81349 | RN55C3160F |
| R37 | 012118 | RES, METAL FILM, 1.5K, 1%, 1/8W | 81349 | RN55C1501F |
| R38 | 000105 | RES, CARBON, 1M, 5%, 1/4W | 81349 | RC07GF105J |
| R39 | 012118 | RES, METAL FILM, 1.5K, 1%, 1/8W | 81349 | RN55C1501F |
| R40 | 012114 | RES, METAL FILM, 316 OHM, 1%, 1/8W | 81349 | RN55C3160F |
| R41 | 000102 | RES, CARBON, 1K, 5%, 1/4W | 81349 | RC07GF102J |
| R42 | 000105 | RES, CARBON, 1M, 5%, 1/4W | 81349 | RC07GF105J |
| R43 | 000101 | RES, CARBON, 100 OHM, 5%, 1/4W | 81349 | RC07GF101J |
| R44 | 010628 | RES, METAL, 3.01K, 1%, 1/8W | 81349 | RN55C3011F |

401726 - PCB ASSY., SIGNAL CONDITIONER (CONT'D) Figure 7-25

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| R45 | 010628 | RES, METAL, 3.01K, 1%, 1/8W | 81349 | RN55C3011F |
| R46 | 000101 | RES, CARBON, 100 OHM, 5%, 1/4W | 81349 | RC07GF101J |
| R47 | 012121 | RES, CERMET, 82.5 OHM, 1%, 1/4W | 19647 | MK120 |
| R48 | 000122 | RES, CARBON, 1.2K, 5%, 1/4W | 81349 | RC07GF122J |
| R49 | 012121 | RES, CERMET, 82.5 OHM, 1%, 1/4W | 19647 | MK120 |
| R50 | 000102 | RES, CARBON, 1K, 5%, 1/4W | 81349 | RC07GF102J |
| R51 | 012084 | RES, METAL FILM, 100 OHM, 1%, 1/8W | 81349 | RN55C10R0F |
| R52 | 010918 | RES, METAL, 499 OHM, 1%, 1/8W | 81349 | RN55C4990F |
| R53 | 012121 | RES, CERMET, 82.5 OHM, 1%, 1/4W | 19647 | MK120 |
| R54 | 012121 | RES, CERMET, 82.5 OHM, 1%, 1/4W | 19647 | MK120 |
| R55 | 010918 | RES, METAL, 499 OHM, 1%, 1/8W | 81349 | RN55C4990F |
| R56 | 012084 | RES, METAL FILM, 100 OHM, 1%, 1/8W | 81349 | RN55C10R0F |
| R57 | 012084 | RES, METAL FILM, 100 OHM, 1%, 1/8W | 81349 | RN55C10R0F |
| R58 | 012084 | RES, METAL FILM, 100 OHM, 1%, 1/8W | 81349 | RN55C10R0F |
| R59 | 012084 | RES, METAL FILM, 100 OHM, 1%, 1/8W | 81349 | RN55C10R0F |
| R60 | 012084 | RES, METAL FILM, 100 OHM, 1%, 1/8W | 81349 | RN55C10R0F |
| R61 | 012120 | RES, CERMET, 1.5K, 1%, 1/4W | 19647 | MK120 |
| R62 | 012122 | RES, CERMET, 10 OHM, 1%, 1/4W | SEE NOTE 2 TABLE 7.1 | LC-100 |
| R63 | 012122 | RES, CERMET, 10 OHM, 1%, 1/4W | SEE NOTE 2 TABLE 7.1 | LC-100 |
| R64 | 012120 | RES, CERMET, 1.5K, 1%, 1/4W | 19647 | MK120 |
| R65 | 012116 | RES, METAL FILM, 475 OHM, 1%, 1/8W | 81349 | RN55C4750F |
| R66 | 012124 | RES, METAL FILM, 301 OHM, 1%, 1/8W | 81349 | RN55C3010F |
| R67 | 040310 | POT, CERMET, TOP ADJ, 1K, 10% | 32997 | 3006W-1-102 |
| R68 | 012115 | RES, METAL FILM, 374 OHM, 1%, 1/8W | 81349 | RN55C3740F |

401726 - PCB ASSY., SIGNAL CONDITIONER (CONT'D) Figure 7-25 E

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| R69 | 012084 | RES, METAL FILM, 100 OHM, 1%, 1/8W | 81349 | RN55C100R0F |
| R70 | 040310 | POT, CERMET, TOP ADJ, 1K, 10% | 32997 | 3266W-1-102 |
| R71 | 040310 | POT, CERMET, TOP ADJ, 1K, 10% | 32997 | 3266W-1-102 |
| R72 | 010925 | RES, METAL FILM, 1.33K, 1%, 1/8W | 81349 | RN55C1331F |
| R73 | 010704 | RES, METAL, 1K, 1%, 1/8W | 81349 | RN55D1001F |
| R74 | 010704 | RES, METAL, 1K, 1%, 1/8W | 81349 | RN55D1001F |
| R75 | 000161 | RES, CARBON, 160 OHM, 5%, 1/4W | 81349 | RC07GF161J |
| R76 | 000161 | RES, CARBON, 160 OHM, 5%, 1/4W | 81349 | RC07GF161J |
| R77 | 000271 | RES, CARBON, 270 OHM, 5%, 1/4W | 81349 | RC07GF271J |
| R78 | 000271 | RES, CARBON, 270 OHM, 5%, 1/4W | 81349 | RC07GF271J |
| R79 | 000103 | RES, CARBON, 10K, 5%, 1/4W | 81349 | RC07GF103J |
| R80 | 000680 | RES, CARBON, 68 OHM, 5%, 1/4W | 81349 | RC07GF680J |
| R81 | 000101 | RES, CARBON, 100 OHM, 5%, 1/4W | 81349 | RC07GF101J |
| R82 | 001787 | RES, CARBON, 20 OHM, 5%, 1/8W | 81349 | RC05GF200J |
| R83 | 001787 | RES, CARBON, 20 OHM, 5%, 1/8W | 81349 | RC05GF200J |
| R84 | 000101 | RES, CARBON, 100 OHM, 5%, 1/4W | 81349 | RC07GF101J |
| U1 | 230753 | IC, DIGITAL, I & SENSITIVITY CONTROL | 54473 | 3U15C13 |
| U2 | 230753 | IC, DIGITAL, I & SENSITIVITY CONTROL | 54473 | 3U15C13 |
| U3 | 230754 | IC, LINEAR | 01295 | VA78L10ACLP |
| U4 | 230735 | IC, COMPARATOR, DUAL ULTRA FAST | 52648 | SP9687DG |
| U5 | 230736 | IC, INT., DUAL COMPARATOR | 27014 | LM2903N |
| U6 | 230750 | IC, DIGITAL, ECL | 04713 | MC10216P |
| U7 | 230783 | IC, ECL, HS QUAD 2-INPUT MUX | 04713 | MC10H158P |
| U8 | 230733 | IC, DIGITAL, ECL FLIP-FLOP | 04713 | MC10231 |
| U9 | 230750 | IC, DIGITAL, ECL | 04713 | MC10216P |

401726 - PCB ASSY., SIGNAL CONDITIONER (CONT'D) Figure 7-25 E

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| U10 | 230791 | IC, DIGITAL | 21793 | 230791 |
| U11 | 230790 | IC, DIGITAL | 21793 | 230790 |
| VR1 | 220007 | DIODE, SILICO, ZENER | 81349 | 1N751A |
| VR2 | 220007 | DIODE, SILICO, ZENER | 81349 | 1N751A |
| VR3 | 220007 | DIODE, SILICO, ZENER | 81349 | 1N751A |
| VR4 | 220098 | DIODE, ZENER, 3.9V, 5% | 04713 | 1N5990B |
| VR5 | 220098 | DIODE, ZENER, 3.9V, 5% | 04713 | 1N5990B |
| VR6 | 220098 | DIODE, ZENER, 3.9V, 5% | 04713 | 1N5990B |
| VR7 | 220098 | DIODE, ZENER, 3.9V, 5% | 04713 | 1N5990B |
| VR8 | 220101 | DIODE, ZENER, 3.3V, 5% | 04713 | 1N5988B |
| W1 | 601023 | PLUG, JUMPER | 98291 | 026-480 |
| Z1 | 080069 | RES NETWORK, CERMET, 2.2K, 3R | 11236 | 750-63-R2.2K |
| Z2 | 080068 | RES NETWORK, CERMET, 470 OHM, 3R | 11236 | 750-63-R470 |
| Z3 | 080068 | RES NETWORK, CERMET, 470 OHM, 3R | 11236 | 750-63-R470 |
| Z4 | 080069 | RES NETWORK, CERMET, 2.2K, 3R | 11236 | 750-63-R2.2K |
| Z5 | 080064 | RES NETWORK, CERMET, 330 OHM, 5R | 11236 | 750-61-R330 |
| Z6 | 080064 | RES NETWORK, CERMET, 330 OHM, 5R | 11236 | 750-61-R330 |
| Z7 | 080065 | RES NETWORK, CERMET, 33 OHM, 5R | 11236 | 750-61-R33 |
| Z8 | 080040 | RES NETWORK, CERMET, 22K, 8P4R, 2%, 1.1W | 11236 | 750-83-R22K |
| Z9 | 080039 | RES NETWORK, CERMET, 100K, 6P3R, 2%, .9W | 11236 | 750-63-R100K |
| Z10 | 080064 | RES NETWORK, CERMET, 330 OHM, 5R | 11236 | 750-61-R330 |
| Z12 | 080064 | RES NETWORK, CERMET, 330 OHM, 5R | 11236 | 750-61-R330 |
| Z13 | 080001 | RES NETWORK, CERMET, 330 OHM, 8P7R, 2% | 11236 | 750-81-R330 |

401726 - PCB ASSY., SIGNAL CONDITIONER (CONT'D) Figure 7-25 E

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| Z14 | 080002 | RES NETWORK, CERMET, 500 OHM, 8P7R, 2% | 11236 | 750-81-R500 |
| 112 | 401728 | PCB ASSY., MCC2 SYNCH | 21793 | 401728 |
| 113 | 411726 | PC BOARD, SIGNAL COND. (UNLOADED) | 21793 | 411726 |
| 115 | 453936 | RETAINER, FOAM, ADHESIVE | 21793 | 453936 |
| 116 | 600786 | POST, TERMINAL (TP5-12, W1 (2)) (10 REQ'D) | 00779 | 1-87022-0 |
| 118 | 610912 | CLIP, FLAT, CABLE | 34785 | 031-0100 |
| 123 | 500022 | WIRE, BARE COPPER, TRIMMED, SOLID, 22 GA | 21793 | 500022 |
| 124 | 610227 | NUT, PRESS, 2-56 (6 REQ'D) | 46384 | KF2-256 |
| 125 | 610612 | STANDOFF, SWAGE, 4-40 X .453 (2 REQ'D) | 06540 | 9536B-29-A0440-16 |
| 126 | 611032 | SPACER, .2 CTR, .04 SHT, 2-LEAD (2 REQ'D) | 32559 | 302-200 |
| 128 | 611043 | WASHER, FLAT, #2, NYLON (2 REQ'D) | 86928 | 5610-9-20 |
| 129 | 611059 | CONNECTOR, DIP, LOW PROFILE, 40P | 91506 | 240-AG-390 |
| 130 | 611060 | CONNECTOR, DIP, LOW PROFILE, 16P (2 REQ'D) | 91506 | 216-AG-390 |
| 132 | 615017 | SCREW, PPH, 2-56 X .438 (2 REQ'D) | —— | —— |
| 133 | 615019 | SCREW, PPH, 2-56 X .625 (4 REQ'D) | —— | —— |
| 134 | 616252 | SCREW, PPH, SEMS ASSY., 4-40 X .312 (2 REQ'D) | 78189 | —— |
| 135 | 617126 | WASHER, LOCK, #2, LIGHT SERIES (4 REQ'D) | —— | —— |
| 137 | 920563 | BEADS, SHIELDING (8 REQ'D) | 02114 | 56-59065/4B |
| 139 | 920962 | LOCTITE, 242, MED STR. | 05972 | 242 |

401728 - PCB ASSY., AMCC2 SYNCH Figure 7-33 B

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C1 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C2 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C3 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C4 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C5 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C6 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C7 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C8 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C9 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C10 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C11 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C12 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| C13 | 100062 | CAP, CERAM, .01 MFD, 100V, 10% | 72982 | 8121-100-W5R0-103K |
| Q1 | 200197 | TRANSISTOR, NPN | 04713 | MPS-H10 |
| Q2 | 200197 | TRANSISTOR, NPN | 04713 | MPS-H10 |
| Q3 | 200197 | TRANSISTOR, NPN | 04713 | MPS-H10 |
| Q4 | 200197 | TRANSISTOR, NPN | 04713 | MPS-H10 |

401728 - PCB ASSY., AMCC2 SYNCH (CONT'D) Figure 7-33 B

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| U1 | 230787 | IC, DIGITAL, TRIPLE LINE REC'R | 04713 | MC10116P |
| U2 | 230787 | IC, DIGITAL, TRIPLE LINE REC'R | 04713 | MC10116P |
| U3 | 230442 | IC, DIGITAL | 04713 | MC10124 |
| U4 | 230785 | IC, DIGITAL, TRIPLE X OR GATE | 04713 | MC10H107 |
| U5 | 230787 | IC, DIGITAL, TRIPLE LINE REC'R | 04713 | MC10116P |
| U6 | 230789 | IC, DIGITAL, ECL/TTL CHIP | 21793 | 230789 |
| U7 | 230735 | IC, COMPARATOR, DUAL ULTRA FAST | 52648 | SP9687DG |
| Z1 | 080075 | RES NETWORK, CERMET, 470 OHM, 7R | 11236 | 750-81-R470 |
| Z2 | 080073 | RES NETWORK, CERMET, 470 OHM, 5R | 11236 | 750-61-R470 |
| Z3 | 080073 | RES NETWORK, CERMET, 470 OHM, 5R | 11236 | 750-61-R470 |
| Z4 | 080064 | RES NETWORK, CERMET, 330 OHM, 5R | 11236 | 750-61-R330 |
| Z5 | 080073 | RES NETWORK, CERMET, 470 OHM, 5R | 11236 | 750-61-R470 |
| Z6 | 080075 | RES NETWORK, CERMET, 470 OHM, 7R | 11236 | 750-81-R470 |
| Z7 | 080064 | RES NETWORK, CERMET, 330 OHM, 5R | 11236 | 750-61-R330 |
| Z8 | 080064 | RES NETWORK, CERMET, 330 OHM, 5R | 11236 | 750-61-R330 |
| Z11 | 080004 | RES NETWORK, CERMET, 4.7K, 6P5R, 2% | 11236 | 750-61-R4.7K |
| Z12 | 080074 | RES NETWORK, CERMET, 22K, 5R | 11236 | 750-61-R22K |
| Z13 | 080004 | RES NETWORK, CERMET, 4.7K, 6P5R, 2% | 11236 | 750-61-R4.7K |
| Z14 | 080004 | RES NETWORK, CERMET, 4.7K, 6P5R, 2% | 11236 | 750-61-R4.7K |
| Z15 | 080074 | RES NETWORK, CERMET, 22K, 5R | 11236 | 750-61-R22K |
| 19 | 411728 | PCB, AMCC2, SYNCH (UNLOADED) | 21793 | 411728 |
| 20 | 601019 | CONNECTOR, TERM. STRIP, 20P, (2 REQ'D) | 55322 | TS-120-G-A1 |

401728 - PCB ASSY., AMCC2 SYNCH (CONT'D) Figure 7-33 B

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| 21 | 611059 | CONNECTOR, DIP, LOW PROFILE, 40P | 91506 | 240-AG3W |
| 22 | 611060 | CONNECTOR, DIP, LOW PROFILE, 16P (3 REQ'D) | 91506 | 216-AG3W |

401727 - PCB ASSY., DISPLAY KEYBOARD

Figure 7-36 F

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C1 | 100133 | CAP, CERAM, .1 MFD, LOW PROFILE, 20% | 72982 | 8131LP-100-651-104M |
| C2 | 100133 | CAP, CERAM, .1 MFD, LOW PROFILE, 20% | 72982 | 8131LP-100-651-104M |
| C3 | 100133 | CAP, CERAM, .1 MFD, LOW PROFILE, 20% | 72982 | 8131LP-100-651-104M |
| C4 | 100133 | CAP, CERAM, .1 MFD, LOW PROFILE, 20% | 72982 | 8131LP-100-651-104M |
| C5 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035AS |
| C6 | 100133 | CAP, CERAM, .1 MFD, LOW PROFILE, 20% | 72982 | 8131LP-100-651-104M |
| C7 | 100133 | CAP, CERAM, .1 MFD, LOW PROFILE, 20% | 72982 | 8131LP-100-651-104M |
| C8 | 100133 | CAP, CERAM, .1 MFD, LOW PROFILE, 20% | 72982 | 8131LP-100-651-104M |
| C9 | 100133 | CAP, CERAM, .1 MFD, LOW PROFILE, 20% | 72982 | 8131LP-100-651-104M |
| C10 | 100133 | CAP, CERAM, .1 MFD, LOW PROFILE, 20% | 72982 | 8131LP-100-651-104M |
| CR1 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR2 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR3 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR4 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR5 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR6 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR7 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR8 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR9 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |

401727 - PCB ASSY., DISPLAY KEYBOARD (CONT'D)

Figure 7-36 F

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| CR10 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR11 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR12 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR13 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR14 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR15 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR16 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR17 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR18 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR19 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR20 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR21 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR22 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR23 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR24 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR25 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR26 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR27 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR28 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR29 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR30 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR31 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR32 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR33 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |

401727 - PCB ASSY., DISPLAY KEYBOARD (CONT'D) Figure 7-36 F

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| CR34 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR35 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR36 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR37 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR38 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR39 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR40 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR41 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR42 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR43 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR44 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR45 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR46 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR47 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR49 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR50 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR51 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR52 | 210106 | DIODE, LIGHT EMITTING, RED | 25088 | LDH1112 |
| CR53 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| CR54 | 210108 | DIODE, LIGHT EMITTING, RED | 25088 | LDH5122 |
| DS1 | 210105 | DISPLAY, NUMERIC, RED, R.H. DECIMAL | 25088 | DL-76510 |
| DS2 | 210105 | DISPLAY, NUMERIC, RED, R.H. DECIMAL | 25088 | DL-76510 |
| DS3 | 210105 | DISPLAY, NUMERIC, RED, R.H. DECIMAL | 25088 | DL-76510 |
| DS4 | 210105 | DISPLAY, NUMERIC, RED, R.H. DECIMAL | 25088 | DL-76510 |

401727 - PCB ASSY., DISPLAY KEYBOARD (CONT'D) Figure 7-36 F

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| DS5 | 210105 | DISPLAY, NUMERIC, RED, R.H. DECIMAL | 25088 | DL-76510 |
| DS6 | 210105 | DISPLAY, NUMERIC, RED, R.H. DECIMAL | 25088 | DL-76510 |
| DS7 | 210105 | DISPLAY, NUMERIC, RED, R.H. DECIMAL | 25088 | DL-76510 |
| DS8 | 210105 | DISPLAY, NUMERIC, RED, R.H. DECIMAL | 25088 | DL-76510 |
| DS9 | 210105 | DISPLAY, NUMERIC, RED, R.H. DECIMAL | 25088 | DL-76510 |
| DS10 | 210105 | DISPLAY, NUMERIC, RED, R.H. DECIMAL | 25088 | DL-76510 |
| DS11 | 210105 | DISPLAY, NUMERIC, RED, R.H. DECIMAL | 25088 | DL-76510 |
| DS12 | 210104 | DISPLAY, 7 SEGMENT, 4 DIGIT | 25088 | DL340M |
| DS13 | 210104 | DISPLAY, 7 SEGMENT, 4 DIGIT | 25088 | DL340M |
| P1 | 601223 | CABLE ASSY., 34 CONDUCTOR | 52072 | CA-034[illegible]-126/341DS2-5-00-003 |
| R1 | 000561 | RES, CARBON, 560 OHM, 5%, 1/4W | 81349 | RC07GF561J |
| R2 | 000561 | RES, CARBON, 560 OHM, 5%, 1/4W | 81349 | RC07GF561J |
| R3 | 000103 | RES, CARBON, 10K, 5%, 1/4W | 81349 | RC07GF103J |
| R4 | 000103 | RES, CARBON, 10K, 5%, 1/4W | 81349 | RC07GF103J |
| R5 | 000561 | RES, CARBON, 560 OHM, 5%, 1/4W | 81349 | RC07GF561J |
| R6 | 000103 | RES, CARBON, 10K, 5%, 1/4W | 81349 | RC07GF103J |
| R7 | 000103 | RES, CARBON, 10K, 5%, 1/4W | 81349 | RC07GF103J |
| S1 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S2 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S3 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S4 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |

401727 - PCB ASSY., DISPLAY KEYBOARD (CONT'D) Figure 7-36

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| S5 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S6 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S7 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S8 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S9 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S10 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S11 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S12 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S13 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S14 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S15 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S16 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S17 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S18 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S19 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S20 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S21 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S22 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S23 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S24 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S25 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S26 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S27 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S28 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |

401727 - PCB ASSY., DISPLAY KEYBOARD (CONT'D) Figure 7-36

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| S29 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S30 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S31 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S32 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S33 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S34 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S35 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S36 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S37 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S38 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S39 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S40 | 601211 | SWITCH, PUSHBUTTON | 21793 | 601211 |
| S41 | 920905 | SWITCH, MOMENTARY, SPST | 31918 | 81511 |
| U1 | 230457 | IC, LED DRIVER | 50579 | ICM7218A |
| U2 | 230457 | IC, LED DRIVER | 50579 | ICM7218A |
| U3 | 230386 | IC, DIGITAL | 27014 | 74LS273 |
| U4 | 230506 | IC, INTERFACE 8-DIGIT LED DRIVES | 32293 | ICM7218B-1JI |
| U5 | 230386 | IC, DIGITAL | 27014 | 74LS273 |
| U6 | 230386 | IC, DIGITAL | 27014 | 74LS273 |
| U7 | 230636 | IC, OCTAL BUFFER | 18324 | 74LS244F |
| U8 | 230368 | IC, DEMULTIPLEXER | 27014 | 74LS138 |
| Z1 | 080050 | RES NETWORK, 470 OHM, 10P9R | 11236 | 750-101-R470 |
| Z2 | 080023 | RES NETWORK, CERMET, 4.7K, 8P7R, 2% | 11236 | 750-61-R4.7K |

401727 - PCB ASSY., DISPLAY KEYBOARD (CONT'D) Figure 7-36 F

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| 26 | 411727 | PCB, DISPLAY, KEYBOARD (UNLOADED) | 21793 | 411727 |
| 29 | 454817 | SPACER, LED, 7 POSITION (2 REQ'D) | 21793 | 454817 |
| 30 | 454817-021 | SPACER, LED, 3 POS. MOD. | 21793 | 454817-021 |
| 31 | 454817-022 | SPACER, LED, 4 POS. MOD. | 21793 | 454817-022 |
| 39 | 611057 | SPACER, LED, 1 POS. (7 REQ'D) | 21793 | 611057 |
| 40 | 611065 | SPACER, 14-PIN DIP (2 REQ'D) | 32559 | 814-100 |
| 43 | 921007 | CAP, SWITCH, GRAY (25 REQ'D) | 21793 | 921007 |
| 44 | 921009 | CAP, SWITCH, BLUE | 21793 | 921009 |
| 46 | 921049-01 | CAP, SWITCH, "1" | 21793 | 921049-01 |
| 47 | 921049-02 | CAP, SWITCH, "2" | 21793 | 921049-02 |
| 48 | 921049-03 | CAP, SWITCH, "3" | 21793 | 921049-03 |
| 49 | 921049-04 | CAP, SWITCH, "4" | 21793 | 921049-04 |
| 50 | 921049-05 | CAP, SWITCH, "5" | 21793 | 921049-05 |
| 51 | 921049-06 | CAP, SWITCH, "6" (2 REQ'D) | 21793 | 921049-06 |
| 52 | 921049-07 | CAP, SWITCH, "7" | 21793 | 921049-07 |
| 53 | 921049-08 | CAP, SWITCH, "8" | 21793 | 921049-08 |
| 54 | 921049-09 | CAP, SWITCH, "0" | 21793 | 921049-09 |
| 55 | 921049-010 | CAP, SWITCH, "." | 21793 | 921049-010 |
| 56 | 921049-011 | CAP, SWITCH, "EXP" | 21793 | 921049-011 |
| 57 | 921049-012 | CAP, SWITCH, "CE" | 21793 | 921049-012 |
| 58 | 921049-013 | CAP, SWITCH, "+/-" | 21793 | 921049-013 |

404331 - ASSY., REAR PANEL Figure 7-39 E

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| B200 | 921015 | FAN, DC, 20 CFM, 2.38 SQ | 21793 | 921015 |
| C200 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035AS |
| C201 | 110126 | CAP, TANTA, 6.8 MFD, 35V, 20% | 05397 | T355F685M035AS |
| CR200 | 230594 | IC, FULL WAVE RECT. BRIDGE | 27777 | VM148 |
| J211 | 601219 | CONNECTOR, PWR, EMI FILTER | 05245 | 6J4 |
| P11 | 601215 | CONNECTOR, PWR, HOUSING, 15P | 00779 | 1-350244-9 |
| P13 | 601216 | CONNECTOR, PWR, HOUSING, 6P | 00779 | 1-350241-9 |
| P20 | 611055 | CONNECTOR, CABLE, 4 PIN | 00779 | 530554-3 |
| Q200 | 200301 | TRANSISTOR, PNP, PWR, 75W | 04713 | MJE2955T |
| Q201 | 200302 | TRANSISTOR, NPN, PWR, 75W | 04713 | MJE3055T |
| S200 | 601112 | SWITCH, ROCKER, DPST | NOTE 3 TABLE 8.1 | 1855.1102 |
| U200 | 230788 | IC, LINEAR, V REG | 04713 | LM340AT-5.0 |
| 2 | 404331-001 | ASSY., REGULATOR | 21793 | 404331-001 |
| 5 | 404331-002 | ASSY., POWER RECPTLE | 21793 | 404331-002 |
| 10 | 454592 | BOOT, CONN. INSULATOR | 21793 | 454592 |
| 11 | 454763 | PANEL, REAR | 21793 | 454763 |
| 13 | 454822-020 | HOUSING, FAN, STD. | 21793 | 454822-020 |
| 14 | 454823 | GUARD, FINGER, FAN | 21793 | 454823 |
| 15 | 454824 | HEATSINK, BRKT, RIGHT | 21793 | 454824 |
| 16 | 454825 | HEATSINK, BRKT, LEFT | 21793 | 454825 |

404331 - ASSY., REAR PANEL (CONT'D) Figure 7-39 A

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| 17 | 522222 | WIRE, TEFLON, STR, 18G, RED | —— | —— |
| 18 | 500052 | WIRE, TEFLON, STR, 18G, BLK | —— | —— |
| 19 | 500061 | WIRE, TEFLON, STR, 18G, WHT | —— | —— |
| 20 | 500064 | TUBING, SHRINK, .093ID, BLK | —— | —— |
| 21 | 522333 | WIRE, TEFLON, STR, 18G, ORG | —— | —— |
| 22 | 500070 | WIRE, TEFLON, STR, 18G, BLK/RED | —— | —— |
| 23 | 500071 | WIRE, TEFLON, STR, 18G, BLK/ORG | —— | —— |
| 24 | 500074 | WIRE, TEFLON, STR, 18G, WHT/ORG | —— | —— |
| 25 | 522244 | WIRE, TEFLON, STR, 18G, YEL | —— | —— |
| 26 | 500212 | WIRE, TEFLON, STR, 18G, GRN | —— | —— |
| 27 | 500214 | WIRE, TEFLON, STR, 18G, BRN | —— | —— |
| 28 | 500215 | WIRE, TEFLON, STR, 18G, GRN/YEL | —— | —— |
| 29 • | 500216 | WIRE, TEFLON, STR, 18G, BLU | —— | —— |
| 30 | 522777 | WIRE, TEFLON, STR, 18G, VIO | —— | —— |
| 31 | 600022 | LUG, SOLDER | 83330 | 1416-6 |
| 33 | 600745 | TERMINAL, RECEPTACLE | 00779 | 60196-3 |
| 35 | 601011 | TERMINAL, CRIMP, .039 DIA | 00779 | 60059-2 |
| 38 | 601212 | TERMINAL, CRIMP, 18-26 | 00779 | 641294-1 |
| 44 | 610777 | CABLE TIE | 53421 | T18R |
| 46 | 610820 | WASHER, SHOULDER, TO-220 | 13103 | 14875 |
| 48 | 610851 | WASHER, INSULATING, TIP-32 STYLE | 18565 | 60-11-5791-1674 |
| 49 | 610889 | SCREW, PPH, 4-40 X .375 | —— | —— |
| 50 | 500056 | TUBING, CLR, 3/16" DIA | —— | —— |
| 51 | 611052 | KEY, POLARIZING, PLUG | 00779 | 87077-1 |

404331 - ASSY., REAR PANEL (CONT'D) Figure 7-39 A

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| 52 | 611053 | TERMINAL, CRIMP (2 REQ'D) | 00779 | 530553-2 |
| 55 | 615068 | SCREW, PPH, 6-32 X 1.50 (4 REQ'D) | —— | —— |
| 57 | 616252 | SCREW, PPH, SEMS ASSY., 4-40 X .312 (4 REQ'D) | 78189 | —— |
| 59 | 617005 | NUT, HEX, 6-32 | —— | —— |
| 61 | 617103 | WASHER, FLAT, #6, LIGHT SERIES (4 REQ'D) | —— | —— |
| 63 | 617128 | WASHER, LOCK, #6, LIGHT SERIES (4 REQ'D) | —— | —— |
| 65 | 920364 | FUSE, SLO BLO, 1A | 75915 | 313.001 |

404378 - ASSY., REAR INPUT (OPT. 01)

Figure 7-40

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| 1 | 401752 | PCB ASSY., REAR INPUT | 21793 | 401752 |
| 5 | 601222 | CABLE ASSY., 72 CONDUCT | 21793 | 601222 |
| 7 | 611058 | STANDOFF, 6-32 X 1.25 (5 REQ'D) | 06540 | 8224-SS-0632-F |
| 9 | 616255 | SCREW, PPH, SEMS ASSY (9 REQ'D) | 21793 | 616255 |

401752 - PCB ASSY., REAR INPUT

Figure 7-41

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| 1 | 411752 | PCB, REAR INPUT (UNLOADED) | 21793 | 411752 |
| 4 | 601213 | CONNECTOR, EDGE, PLUG 72 PIN (2 REQ'D) | 57856 | PR36-6141-15 |
| 6 | 610227 | NUT, PRESS, 2-56 (4 REQ'D) | 46384 | KF2-256 |
| 8 | 615017 | SCREW, PPH, 2-56 X .438 (4 REQ'D) | ——— | ——— |
| 9 | 920962 | LOCTITE, 242, MED STR | 05972 | 242 |
| 10 | 610198 | WASHER, FLAT, NYLON, #4 (4 REQ'D) | 86928 | 5610-10-31 |

404384 - OPT. 04E, OSCILLATOR Figure 7-42 C

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| 3 | 404386 | OSCILLATOR ASSY | 21793 | 404386 |
| 5 | 610777 | CABLE TIE | 53421 | T18R |
| 7 | 611067 | SCREW, METRIC, M3 X 8 (2 REQ'D) | — | — |
| 9 | 617102 | WASHER, FLAT, #4, LIGHT SERIES (2 REQ'D) | — | — |
| 10 | 617127 | WASHER, LOCK, #4, LIGHT SERIES (2 REQ'D) | — | — |

404386 - OSCILLATOR ASSY. (OPT. 04E) Figure 7-43 C

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| J4 | 611056 | CONNECTOR, CABLE, 5-PIN | 21793 | 611056 |
| 1 | 401822 | PCB ASSY, DOUBLER | 21793 | 401822 |
| 2 | 454879 | FREQUENCY SIO, 5 MHZ | 21793 | 454879 |
| 4 | 500064 | TUBING, SHRINK, .093 ID | — | — |
| 6 | 610304 | SPACER, 1/4 D X 1/2 LG (2 REQ'D) | — | — |
| 8 | 611074 | SCREW, METRIC, M3 X 10 (2 REQ'D) | — | — |
| 10 | 617102 | WASHER, FLAT, #4, LIGHT SERIES (2 REQ'D) | — | — |
| 11 | 617127 | WASHER, LOCK, #4, LIGHT SERIES (2 REQ'D) | — | — |
| 13 | 500009 | TUBING, SHRINK, .125 ID, BLK | 29005 | RNF-100-1-1/5 |
| 15 | 500174 | CABLE, COAX, LOW THERMAL | 21793 | 500174 |
| 17 | 524555 | WIRE, TEFLON, STRANDED, 24 GA, GRN | — | — |
| 18 | 524929 | WIRE, TEFLON, STRANDED, 24 GA, WHT/RED | — | — |
| 20 | 610777 | CABLE TIE | 53421 | T18R |
| 22 | 611052 | KEY, POLARIZING, PLUG | 00779 | 87077-1 |
| 23 | 611053 | TERMINAL, CRIMP | 00779 | 530553-2 |

401822 - PCB ASSY., DOUBLER Figure 7-44 A

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| C1-9 | R-21-1801 | CAP, CHIP, 10NF | 95275 | VJ1206Y103MF |
| D1-2 | R-22-1029 | DIODE, SILICON | 14433 | 1N4149 |
| L1 | 310151 | CHOKE, 10%, 100 UH | 83125 | OD1000H |
| Q1-2 | 200299 | TRANS, PNP | 04713 | 2N3906 |
| Q3-5 | 200298 | TRANS, NPN | 04713 | 2N3904 |
| R1 | R-20-5776 | RES, CHIP, 33 OHM, 1/8W, 5%, 200V | 65940 | MCR18-33 OHM-5% |
| R2-3 | R-20-5764 | RES, CHIP, 100 OHM, 1/8W, 5% | 65940 | MCR18-100 OHM-5% |
| R4 | R-20-5792 | RES, CHIP, 1K, 1/8W, 5%, 200V | 65940 | MCR19-1K-5% |
| R5-6 | R-20-5785 | RES, CHIP, 470 OHM, 1/8W, 5% | 65940 | MCR18-470 OHM-5% |
| R7 | R-20-5794 | RES, CHIP, 1.5K, 1/8W, 5%, 200V | 65940 | MCR18-1.5K-5% |
| R8-9 | R-20-5798 | RES, CHIP, 3.9K, 1/8W, 5%, 200V | 65940 | MCR18-3.9K-5% |
| R10 | R-20-5794 | RES, CHIP, 1.5K, 1/8W, 5%, 200V | 65940 | MCR18-1.5K-5% |
| R11 | R-20-5792 | RES, CHIP, 1K, 1/8W, 5%, 200V | 65940 | MCR18-1K-5% |
| R12 | R-20-5808 | RES, CHIP, 39K, 1/8W, 5%, 200V | 65940 | MCR18-39K-5% |
| R13 | R-20-5803 | RES, CHIP, 15K, 1/8W, 5%, 200V | 65940 | MCR18-15K-5% |
| R14 | R-20-5816 | RES, CHIP, 330K, 1/8W, 5%, 200V | 65940 | MCR18-330K-5% |
| R15 | R-20-5768 | RES, CHIP, 10K, 1/8W, 5%, 200V | 65940 | MCR18-10K OHM-5% |
| R16 | R-20-5792 | RES, CHIP, 1K, 1/8W, 5%, 200V | 65940 | MCR18-1K-5% |
| R17-18 | R-20-5798 | RES, CHIP, 3.9K, 1/8W, 5%, 200V | 65940 | MCR18-3.9K-5% |
| R19 | R-20-5764 | RES, CHIP, 100 OHM, 1/8W, 5% | 65940 | MCR18-100 OHM-5% |
| R20 | R-20-5792 | RES, CHIP, 1K, 1/8W, 5%, 200V | 65940 | MCR18-1K-5% |
| R21 | R-20-5814 | RES, CHIP, 51 OHM, 1/8W, 5%, 200V | 65940 | MCR18-51 OHM-5% |
| T1-2 | R-23-7149 | TRANSFORMER | 21793 | R-23-7143 |
| TP1 | R-24-3537 | TERMINAL ASSY. | 21793 | R-24-3537 |
| 10 | 411822 | PCB, DOUBLER (UNLOADED) | 21793 | 411822 |
| 58 | R-24-3519 | AV LUGS (3 REQ'D) | 19738 | AVLUG1107/0208 |

404387 - 220V/240V OPERATION (OPT. 71). A

| REF DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| 1 | 920204 | FUSE, SLO BLO, .50A., 250V | 75915 | 3AG1/2A250 |

404293 - BOTTOM COVER ASSEMBLY Figure 7-48

| REF. DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| 1 | 454351 | BAIL | 21793 | 454351 |
| 2 | 454354 | COVER | 21793 | 454354 |
| 3 | 920958 | RIVET (4 REQ'D) | 98388 | 3188 |
| 4 | 454355 | PAD, FOOT (4 REQ'D) | 21793 | 454355 |
| 5 | 920504 | ADHESIVE, SCOTCH GRIP | 04963 | 4475 |
| 6 | 454621 | FOOT (4 REQ'D) | 21793 | 454621 |
| 7 | 610554 | SCREW, TAP, #8-18x3/8, TYPE B (4 REQ'D) | 08226 | PTH-8-18x3/8-SS-BLK |
| 8 | 454542 | PLATE (4 REQ'D) | 21793 | 454542 |

404183 - RACK SLIDE KIT Figure 7-49

| REF. DESIG. | RACAL-DANA P/N | DESCRIPTION | FSC | MFG. P/N |
|---|---|---|---|---|
| 1 | 454597 | RETAINER, COVER (2 REQ'D) | 21793 | 454597 |
| 2 | 454488 | KIT, BRACKET (INCLUDES ITEMS 6 THRU 10) | 21793 | 454488 |
| 3 | 610920 | NUT, RETAINER (8 REQ'D) | 21793 | 610920 |
| 4 | 615091 | SCREW, PPH, 10-32x.500 (8 REQ'D) | 21793 | 615091 |
| 5 | 454489 | SLIDE (2 REQ'D) | 21793 | 454489 |
| 6 | -- | SCREW, PPH, 8-32x.375 (8 REQ'D) | 96906 | MS35206-243 |
| 7 | -- | BRACKET (4 REQ'D) | 05236 | SP0551 |
| 8 | -- | NUT, #8-32 (8 REQ'D) | 96906 | MS35649-282 |
| 9 | -- | WASHER, LOCK , #8 (8 REQ'D) | 96906 | MS35338-42 |
| 10 | -- | WASHER, FLAT, #8 (8 REQ'D) | 88044 | AN960-8 |
| 11 | 610910 | SCREW, PPH, 8-32x.312 (8 REQ'D) | 21793 | 610910 |
| 12 | 615325 | SCREW, PFH, 8-32x.500 (4 REQ'D) | 21793 | 615325 |
| 13 | 610921 | WASHER, FLAT, #8 (2 REQ'D) | 21793 | 610921 |
| 14 | 454422 | EAR, MOUNTING (2 REQ'D) | 21793 | 454422 |
| 15* | 615093 | SCREW, PPH, 10-32x.750 (4 REQ'D) | 21793 | 615093 |
| 15* | 611011 | SCREW, PFH, M4x12 (4 REQ'D) | 21793 | 611011 |
| 16 | 454490 | MOUNTING BLOCK, SLIDE (6 REQ'D) | 21793 | 454490 |
| 17 | 454323 | INSERT, CORNER (2 REQ'D) | 21793 | 454323 |

*For Ref. Desig. 15, use screw with English or metric dimensions as appropriate.

**Artisan Technology Group** is an independent supplier of quality pre-owned equipment

## Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

## We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

## Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP