ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Emerson / Rosemount Analytical 4088B2P12A4R2E121AE5* at our website: *Click HERE*

Reference Manual
00809-0100-4088, Rev BA
February 2015

Rosemount 4088 MultiVariable™ Transmitter



Modbus
BSAP/MVS

ROSEMOUNT

EMERSON™
Process Management

Rosemount 4088 MultiVariable™ Transmitter

⚠ WARNING

Read this manual before working with the product. For personal and system safety, and for optimum product performance, make sure the contents are fully understood before installing, using, or maintaining this product.

For technical assistance, contacts are listed below:

Technical support, quoting, and order-related questions

United States - 1-800-999-9307 (7:00 am to 7:00 pm CST)

Asia Pacific- 65 777 8211

Europe/ Middle East/ Africa - 49 (8153) 9390

Equipment service needs

North American Response Center

1-800-654-7768 (24 hours—includes Canada)

Outside of these areas, contact your local Emerson Process Management representative.

⚠ CAUTION

The products described in this document are NOT designed for nuclear-qualified applications. Using non-nuclear qualified products in applications that require nuclear-qualified hardware or products may cause inaccurate readings.

For information on Rosemount nuclear-qualified products, contact your local Emerson Process Management Sales Representative.

Contents

Section 1: Introduction

1.1 Using this manual 1
1.2 Models covered 1
1.3 Service support 2
1.4 Product recycling/disposal 2

Section 2: Installation

2.1 Overview 3
2.2 Safety messages 3
2.2.1 Warnings 3
2.3 Considerations 4
2.3.1 General 4
2.3.2 Mechanical 4
2.3.3 Environmental 5
2.4 Steps required for quick installation 5
2.4.1 Mount the transmitter 6
2.4.2 Consider housing rotation 10
2.4.3 Set the switches 11
2.4.4 Wiring and power up 12
2.4.5 Verify device configuration 16
2.4.6 Trim the transmitter 17
2.5 Rosemount 305, 306 and 304 Manifolds 18
2.5.1 Rosemount 305 Integral Manifold installation procedure 18
2.5.2 Rosemount 306 In-Line Manifold installation procedure 18
2.5.3 Rosemount 304 Conventional Manifold installation procedure 19
2.5.4 Rosemount 305 and 304 Manifold styles 20
2.5.5 Manifold operation 21

Section 3: Communication

3.1 Rosemount 4088A Modbus® communications 25
3.1.1 Modbus communication overview 25
3.1.2 Modbus data types 26
3.1.3 Modbus function codes 27
3.1.4 Registers for process variables 28
3.1.5 Process variable integer scaling 28
3.1.6 Floating point formats 29

3.1.7 Communications 30
3.1.8 Implementing calibration 30
3.1.9 Diagnostics 31
3.1.10 Transmitter register maps 33
3.2 Rosemount 4088B ROC communications 44
3.3 Rosemount 4088B BSAP communications 45
3.3.1 4088B BSAP communications signals 45

Section 4: Configuration

4.1 Safety messages 65
4.2 Software installation and initial setup 66
4.2.1 System requirements 66
4.2.2 RTIS part numbers 66
4.2.3 Installing the RTIS 66
4.2.4 Getting started with RTIS 67
4.2.5 Connecting to a personal computer 69
4.3 Launching the configuration process 70
4.4 Basic device configuration 72
4.4.1 Units of measure and damping 72
4.4.2 Network 73
4.5 Detailed device configuration 74
4.5.1 Display 74
4.5.2 Device information 76
4.5.3 Overview variables 76
4.5.4 Alert setup 77
4.6 Variable configuration 78
4.6.1 Differential pressure 78
4.6.2 Static pressure 78
4.6.3 Process temperature 79
4.6.4 Module temperature 81
4.7 Menu trees and 475 Fast Keys 81
4.7.1 Menu tree 82
4.7.2 Handheld communicator Fast Keys 88
4.8 4088A configuration with legacy tool 89

Section 5: Maintenance

5.1 Calibration 91
5.1.1 Sensor trim overview 91

5.1.2 Differential pressure sensor calibration 92
5.1.3 Static pressure sensor calibration 95
5.1.4 Process temperature sensor calibration 96
5.1.5 Offset 96
5.1.6 Verification 96
5.1.7 Legacy calibration 97
5.2 Simulate device variables 98

Section 6: Troubleshooting

6.1 Overview 99
6.2 Safety messages 99
6.2.1 Warnings 99
6.3 Communications troubleshooting 100
6.4 Alarms and conditions 101
6.5 Field upgrades and replacements 103
6.5.1 Disassembly considerations 103
6.5.2 Housing assembly including electronics board 103
6.5.3 Terminal block 105
6.5.4 LCD display 106
6.5.5 Flange and drain vent 106

Appendix A: Specifications and Reference Data

A.1 Performance specifications 109
A.1.1 Conformance to specification (±3s [Sigma]) 109
A.1.2 Reference accuracy 109
A.1.3 Long-term stability 110
A.1.3 Warranty 110
A.1.4 Ambient temperature effect 110
A.1.4 Line pressure effect 112
A.1.5 Vibration effect 112
A.1.6 Mounting position effect 112
A.1.7 Power supply effect 112
A.1.8 Transient protection (option T1) 113
A.1.9 Electromagnetic Compatibility (EMC) 113
A.2 Functional specifications 113
A.2.1 Service 113
A.2.2 Range and sensor limits 113
A.2.3 Minimum span limits 115

A.2.4 Digital communication protocol 116
A.2.5 Power supply 117
A.2.6 Overpressure limits 117
A.2.7 Static pressure limits 118
A.2.8 Burst pressure limits 118
A.2.9 Maximum working pressure limits 118
A.2.10 Temperature limits 119
A.2.11 Humidity limits 120
A.2.12 Turn-on time 120
A.2.13 Volumetric displacement 120
A.2.14 Damping 120
A.3 Physical specifications 121
A.3.1 Material selection 121
A.3.2 Electrical connections 121
A.3.3 Process connections 121
A.3.4 Process-wetted parts 121
A.3.5 Non-wetted parts 122
A.3.6 Shipping weights 122
A.4 Dimensional drawings 124
A.5 Ordering information 127
A.6 Spare parts list 142

Appendix B: Product Certifications

B.1 Ordinary Location Certification for FM Approvals 147
B.2 European Directive Information 147
B.3 Hazardous Locations Certifications 147
B.3.1 North American Certifications 147
B.3.2 European Certifications 148
B.3.3 INMETRO Certifications 148
B.3.4 IECEx Certifications 148
B.3.5 Combinations of Certifications 148
B.3.6 Factory Mutual (FM) 149
B.3.7 Canadian Standards Association (CSA) 152

Section 1 Introduction

1.1 Using this manual

The sections in this manual provide information on installing, operating, and maintaining the Rosemount 4088 Transmitter. The sections are organized as follows:

- Section 2: Installation contains mechanical and electrical installation instructions.
- Section 3: Communication provides details about the communication protocols supported by the transmitter.
- Section 4: Configuration contains information on software functions, configuration parameters, and online variables.
- Section 5: Maintenance provides techniques for calibrating the transmitter.
- Section 6: Troubleshooting contains troubleshooting techniques for the most common operating problems.
- Appendix A: Specifications and Reference Data provides performance, functional, and physical specifications, as well as dimensional drawings, ordering information, and a list of spare parts.
- Appendix B: Product Certifications contains intrinsic safety approval information, European ATEX directive information, and approval drawings.

1.2 Models covered

The following Rosemount 4088 Transmitters are covered in this manual.

Table 1-1. Rosemount 4088 Coplanar™ Transmitter

Measurement type	Description
1	Differential Pressure, Static Pressure, Temperature
2	Differential Pressure and Static Pressure
3	Differential Pressure and Temperature
4	Differential Pressure
5	Static Pressure and Temperature
7	Static Pressure

Table 1-2. Rosemount 4088 In-Line Transmitter

Measurement type	Description
6	Static Pressure and Temperature
8	Static Pressure

1.3 Service support

To expedite the return process outside of the United States, contact the nearest Emerson Process Management representative.

Within the United States, call the Emerson Process Management Instrument and Valves Response Center using the 1-800-654-RSMT (7768) toll-free number. This center, available 24 hours a day, will assist you with any needed information or materials.

The center will ask for product model and serial numbers, and will provide a Return Material Authorization (RMA) number. The center will also ask for the process material to which the product was last exposed.

⚠ CAUTION

Individuals who handle products exposed to a hazardous substance can avoid injury if they are informed of and understand the hazard. If the product being returned was exposed to a hazardous substance as defined by OSHA, a copy of the required Material Safety Data Sheet (MSDS) for each hazardous substance identified must be included with the returned goods.

Emerson Process Management Instrument and Valves Response Center representatives will explain the additional information and procedures necessary to return goods exposed to hazardous substances.

1.4 Product recycling/disposal

Recycling of equipment and packaging should be taken into consideration and disposed of in accordance with local and national legislation/regulations.

Section 2 Installation

Overview . . . . . page 3
Safety messages . . . . . page 3
Considerations . . . . . page 4
Steps required for quick installation . . . . . page 5
Rosemount 305, 306, and 304 Manifolds . . . . . page 18

2.1 Overview

The information in this section covers installation considerations for the Rosemount 4088 Transmitter. A Quick Start Guide is shipped with every transmitter to describe basic installation, wiring, and startup procedures (reference document number 00825-0100-4088). Dimensional drawings for each transmitter variation and mounting configuration are included in Appendix A: Specifications and Reference Data.

2.2 Safety messages

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operation. Information that raises potential safety issues is indicated with a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.

2.2.1 Warnings

⚠ WARNING

Explosions can result in death or serious injury.

- Do not remove the transmitter covers in explosive environments when the circuit is live.
- Fully engage both transmitter covers to meet explosion-proof requirements.
- Before connecting a communicator in an explosive atmosphere, make sure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.
- Verify the operating atmosphere of the transmitter is consistent with the appropriate hazardous locations certifications.

⚠ WARNING

Electrical shock can result in death or serious injury.

- Avoid contact with the leads and terminals.

Process leaks could result in death or serious injury.

- Install and tighten all four flange bolts before applying pressure.
- Do not attempt to loosen or remove flange bolts while the transmitter is in service.

Replacement equipment or spare parts not approved by Rosemount Inc. for use as spare parts could reduce the pressure retaining capabilities of the transmitter and may render the instrument dangerous.

- Use only bolts supplied or sold by Rosemount Inc. as spare parts.

Improper assembly of manifolds to traditional flange can damage sensor module.

- For safe assembly of manifold to traditional flange, bolts must break back plane of flange web (i.e., bolt hole) but must not contact module housing.

Sensor module and electronics housing must have equivalent approval labeling in order to maintain hazardous location approvals.

- When upgrading, verify sensor module and electronics housing certifications are equivalent. Differences in temperature class ratings may exist, in which case the complete assembly takes the lowest of the individual component temperature classes (for example, a T4/T5 rated electronics housing assembled to a T4 rated sensor module is a T4 rated transmitter.)

2.3 Considerations

2.3.1 General

Measurement performance depends upon proper installation of the transmitter and impulse piping. Mount the transmitter close to the process and use minimum piping to achieve best performance. Also, consider the need for easy access, personnel safety, practical field calibration, and a suitable transmitter environment. Install the transmitter to minimize vibration, shock, and temperature fluctuation.

Important
Install the enclosed pipe plug (found in the box) in the unused conduit opening. For straight threads, a minimum of six threads must be engaged. For tapered threads, install the plug wrench-tight.

For material compatibility considerations, see document number 00816-0100-3045 on www.rosemount.com.

2.3.2 Mechanical

Steam service

For steam service or for applications with process temperatures greater than the limits of the transmitter, do not blow down impulse piping through the transmitter. Flush lines with the blocking valves closed and refill lines with water before resuming measurement.

Side mounting

When the transmitter is mounted on its side, position the coplanar flange to ensure proper venting or draining. Mount the flange as shown in Figure 2-3 on page 9, keeping drain/vent connections on the bottom for gas service and on the top for liquid service.

2.3.3 Environmental

Best practice is to mount the transmitter in an environment that has minimal ambient temperature change. The transmitter electronics temperature operating limits are –40 to 185 °F (–40 to 85 °C). Appendix A: Specifications and Reference Data lists the sensing element operating limits. Mount the transmitter so it is not susceptible to vibration and mechanical shock and does not have external contact with corrosive materials.

2.4 Steps required for quick installation

Start >

Mount the transmitter

Consider housing rotation

Set the switches

Wiring and power up

Verify device configuration

Trim the transmitter

> Finish


2.4.1 Mount the transmitter

Liquid flow applications

1.Place taps to the side of the line.

2.Mount beside or below the taps.


3.Mount the transmitter so that the drain/vent valves are oriented upward.

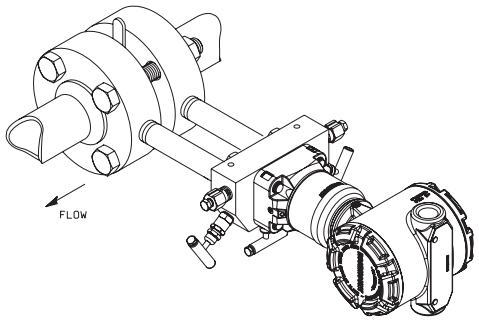

Gas flow applications

1.Place taps in the top or side of the line.

2.Mount beside or above the taps.

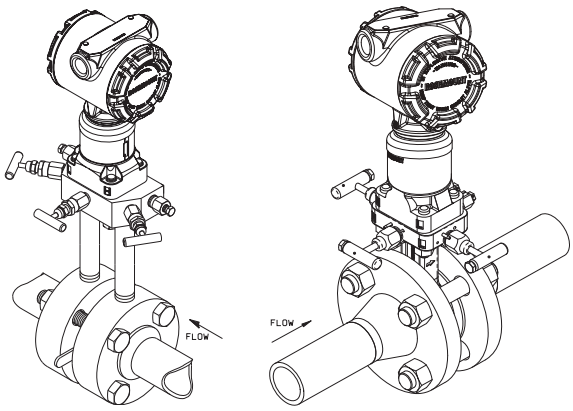


Steam flow applications

1.Place taps to the side of the line.


2.Mount beside or below the taps.

3.Fill impulse lines with water.

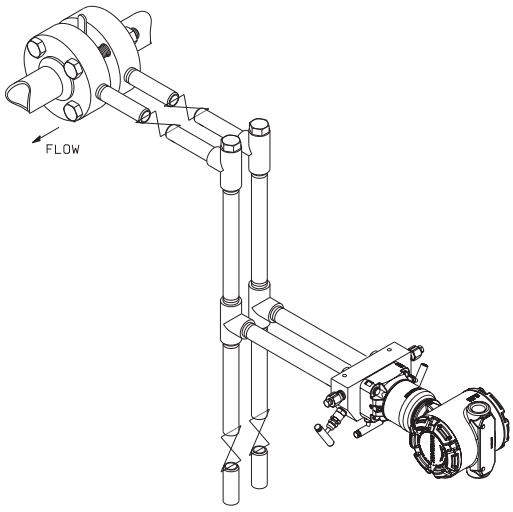


Mounting brackets


Coplanar flange

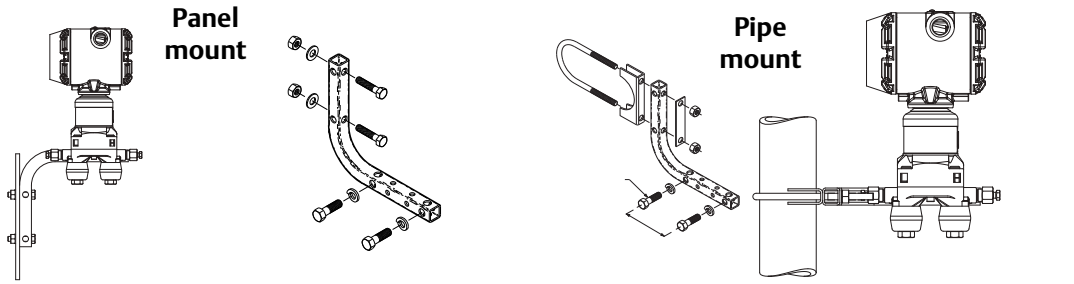

Traditional flange

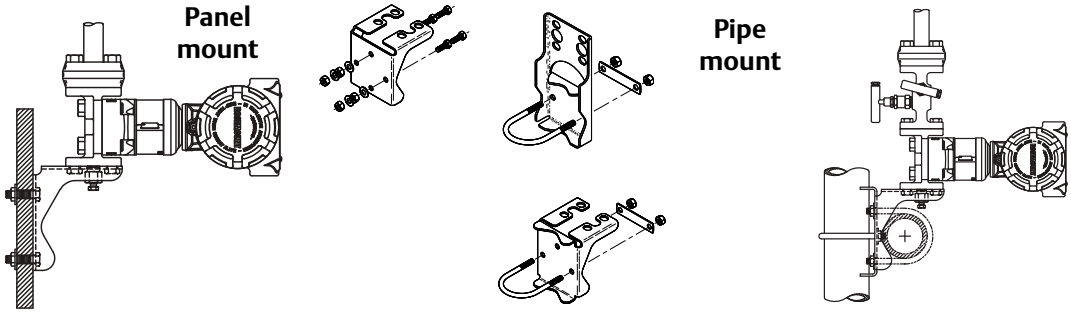


In-Line

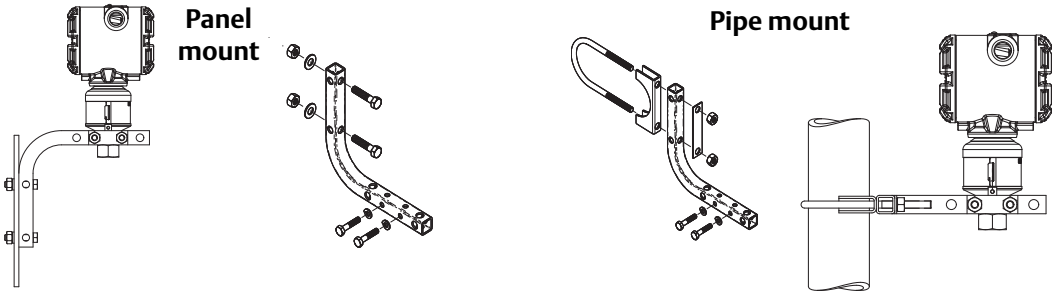

Bolting considerations

If the transmitter installation requires assembly of a process flange, manifold, or flange adapters, follow these assembly guidelines to ensure a tight seal for optimal performance characteristics of the transmitter. Only use bolts supplied with the transmitter or sold by Emerson Process Management as spare parts. Figure 2-1 illustrates common transmitter assemblies with the bolt length required for proper transmitter assembly.

Figure 2-1. Common Transmitter Assemblies

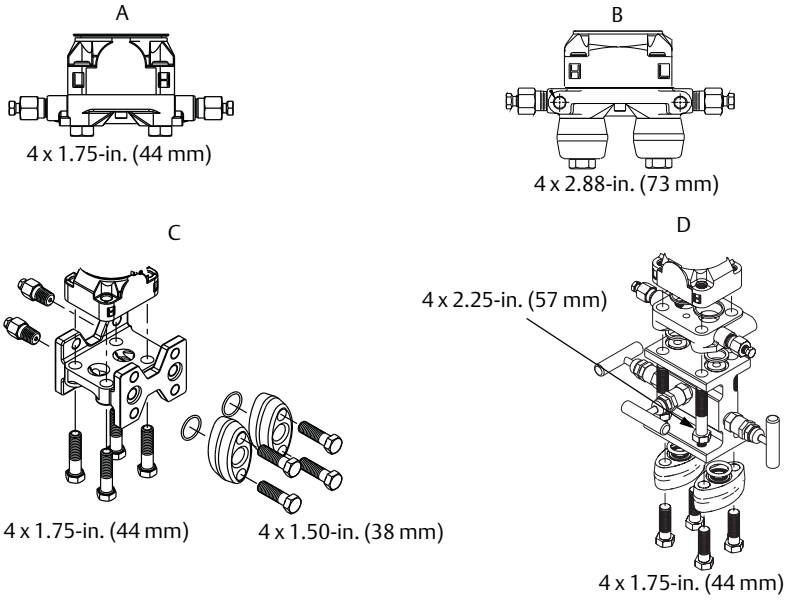

A. Transmitter with coplanar flange
B. Transmitter with coplanar flange and optional flange adapters
C. Transmitter with traditional flange and optional flange adapters
D. Transmitter with coplanar flange and optional Rosemount Conventional Manifold and flange adapters

Note
For all other manifolds, contact Customer Central technical support.

Bolts are typically carbon steel or stainless steel. Confirm the material by viewing the markings on the head of the bolt and referencing Figure 2-2. If bolt material is not shown in Figure 2-2, contact the local Emerson Process Management representative for more information.

Use the following bolt installation procedure:

1. Carbon steel bolts do not require lubrication and the stainless steel bolts are coated with a lubricant to ease installation. However, no additional lubricant should be applied when installing either type of bolt.
2. Finger-tighten the bolts.
3. Torque the bolts to the initial torque value using a crossing pattern. See Figure 2-2 for initial torque value.

4. Torque the bolts to the final torque value using the same crossing pattern. See Figure 2-2 for final torque value.

5. Verify the flange bolts are protruding through the sensor module before applying pressure (see Figure 2-3).

Figure 2-2. Torque Values for the Flange and Flange Adapter Bolts


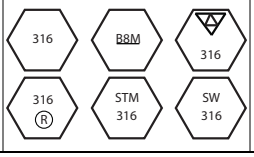
Bolt material	Head markings	Initial torque	Final torque
Carbon Steel (CS)		300 in.-lbs.	650 in.-lbs.
Stainless Steel (SST)		150 in.-lbs.	300 in.-lbs.

Figure 2-3. Proper Bolt Installation

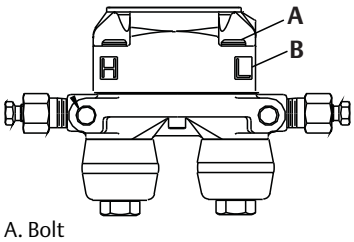


A. Bolt
B. Sensor module

O-rings with flange adapters

⚠ WARNING

Failure to install proper flange adapter O-rings may cause process leaks, which can result in death or serious injury. Only use the O-ring that is designed for its specific flange adapter.

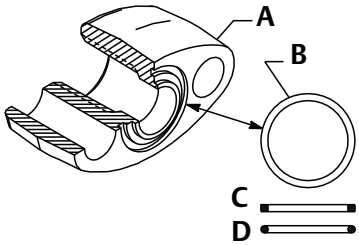

A. Flange adapter
B. O-ring
C. PTFE based profile is square
D. Elastomer profile is round


Whenever the flange or adapters are removed, visually inspect the O-rings. Replace them if there are any signs of damage, such as nicks or cuts. If the O-rings are replaced, re-torque the flange bolts and alignment screws after installation to compensate for seating of the O-rings.

In-line gage transmitter orientation

The low side pressure port (atmospheric reference) on the in-line gage transmitter is located under the sensor module neck label. (See Figure 2-4.)

Keep the vent path free of any obstruction, including but not limited to paint, dust, and lubrication by mounting the transmitter so that any contaminants can drain away.

Figure 2-4. In-Line Gage Transmitter

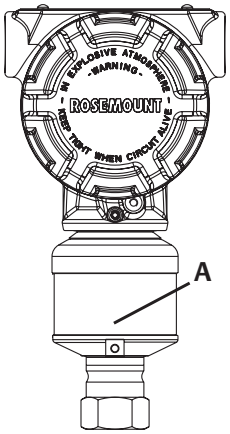


A. Low side pressure port (under neck label)

2.4.2 Consider housing rotation

To improve field access to wiring or to better view the optional LCD display:

1. Loosen the housing rotation set screw.
2. Turn the housing up to 180° left or right of its original (as shipped) position.
3. Re-tighten the housing rotation set screw.

Figure 2-5. Transmitter Housing Set Screw

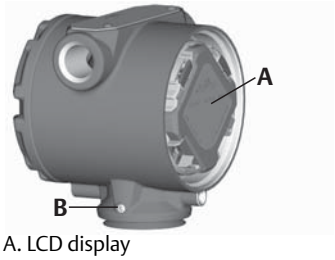

A. LCD display
B. Housing rotation set screw ($^3/_{32}$-in.)

Note
Do not rotate the housing more than 180° without first performing a disassembly procedure (refer to Section 6: Troubleshooting for more information). Over-rotation may sever the electrical connection between the sensor module and the electronics.

Rotate the LCD display

Transmitters ordered with the LCD display will be shipped with the display installed.

In addition to housing rotation, the optional LCD display can be rotated in 90-degree increments by squeezing the two tabs, pulling out, rotating and snapping back into place.

If LCD display pins are inadvertently removed from the electronics board, carefully re-insert the pins before snapping the LCD display back into place.

Use the following procedure and Figure 2-6 to install the LCD display:


1. If the transmitter is installed in a loop, then secure the loop and disconnect power.

⚠ 2. Remove the transmitter cover on the electronics board side (opposite the field terminals side). Do not remove instrument covers in explosive environments when circuit is live.

3. Engage the four-pin connector into the electronics board and snap LCD display into place.

⚠ 4. In order to meet explosion-proof requirements, reinstall the housing cover and tighten so the cover is fully seated with metal to metal contact between the housing and cover. After the cover is seated properly, replace the flathead screw located on the bottom of the housing cover.

Figure 2-6. Optional LCD Display

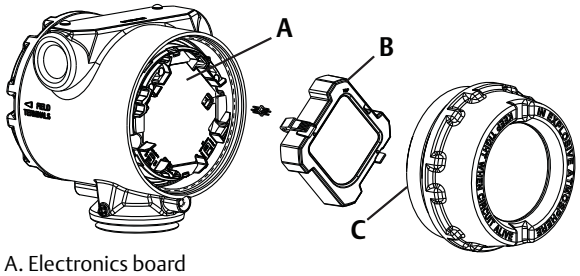

A. Electronics board
B. LCD display
C. Display cover

2.4.3 Set the switches

The transmitter's default configuration for the AC Termination is in the *off* position. The transmitter's electronics board default configuration for the Security switch is in the *off* position.

1. If the transmitter is installed, secure the bus and remove power.

⚠ 2. Remove the transmitter cover opposite the field terminal side. Do not remove the instrument covers in explosive environments when the circuit is live.

3. Slide the Security and AC Termination switches into the preferred position by using a small screwdriver. Note that the Security switch will need to be in the off position in order to make any configuration changes.

⚠ 4. In order to meet explosion-proof requirements, reinstall the housing cover and tighten so the cover is fully seated with metal to metal contact between the housing and cover. After the cover is seated properly, replace the flathead screw located on the bottom of the housing cover.

Figure 2-7. Transmitter Switch Configuration



A. Security
B. AC termination

2.4.4 Wiring and power up

Use the following steps to wire the transmitter:

1. Remove the cover on the field terminals side of the housing.
2. Set up based on optional process temperature input.
   a. If the optional process temperature input is being utilized, follow the procedure "Install optional process temperature input (Pt 100 RTD Sensor)" on page 15.
   b. If there will not be an optional process temperature input, plug and seal the unused conduit connection.

⚠ **Note**
When the enclosed threaded plug is utilized in the conduit opening, it must be installed with a minimum engagement of five threads in order to comply with explosion-proof requirements. For straight threads, a minimum of six threads must be engaged. For tapered threads, install the plug wrench-tight.

3. Connect the 4088A transmitter to the RS-485 bus as shown in Figure 2-8 (for 4088B transmitter wiring and power up instructions, reference the ROC and FloBoss manuals outlined in "Rosemount 4088B ROC communications" on page 44 or the ControlWave manual outlined in "Rosemount 4088B BSAP communications" on page 45).
   a. Connect the A lead to the "A" terminal.
   b. Connect the B lead to the "B" terminal.
4. Connect the positive lead from the power source to the "PWR +" terminal, and the negative lead to the "PWR –" terminal (for power requirements, reference "Power supply" on page 101).

Note
The 4088A uses RS-485 Modbus® with 8 data bits, one stop bit and no parity. The default baud rate is 9600.


Note
Twisted pair wiring is required for RS-485 bus wiring. Wiring runs under 1000 ft (305 m) should be AWG 22 or larger. Wiring runs from 1000 to 4000 feet (305 to 1219 m) should be AWG 20 or larger. Wiring should not exceed AWG 16.

⚠ 5. Reinstall the housing cover and tighten so the cover is fully seated with metal to metal contact between the housing and cover in order to meet explosion-proof requirements.

Note
Installation of the transient protection terminal block does not provide transient protection unless the transmitter housing is properly grounded.

Transmitter wiring

Figure 2-8. Transmitter Wiring for RS-485 Bus

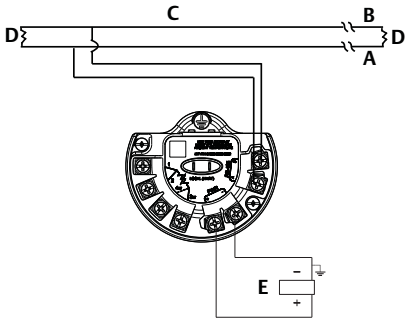

A. RS- 485 (A)
B. RS-485 (B)
C. RS-485 bus, twisted pair required
D. Bus Termination: AC Termination on 4088 (see "Set the switches" on page 11) or 120 Ω resistor
E. User-provided power supply

To configure transmitter via HART® port, reference Figure 4-1 on page 49 for the wiring diagram. To configure using RS-485 network port, reference Figure 4-18 on page 69 for the wiring diagram.

Grounding

Signal wire grounding

Do not run signal wiring in conduit or open trays with power wiring, or near heavy electrical equipment. If shielded wiring is used, ground the shield of the signal wiring at any one point on the signal loop. Device must be properly grounded or earthed according to local electric codes.


Transmitter case

Always ground the transmitter case in accordance with national and local electrical codes. The most effective transmitter case grounding method is a direct connection to earth ground with minimal impedance (< 1 Ω). Methods for grounding the transmitter case include:

Internal ground connection

The internal ground connection screw is inside the terminal side of the electronics housing. The screw is identified by a ground symbol (⏚).

Figure 2-9. Internal Ground Connection

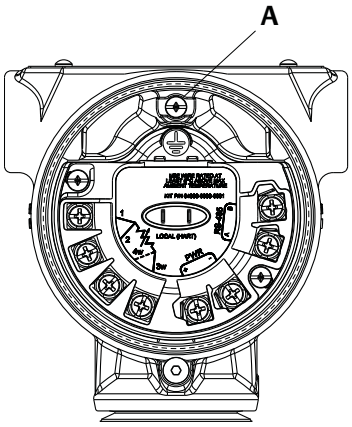


A. Ground Lug

External ground connection

The external ground connection is on the outside of the sensor module housing. The connection is identified by a ground symbol (⏚). An external ground assembly is included with the option codes shown in Table 2-1 on page 15 or is available as a spare part (03151-9060-0001).

Figure 2-10. External Ground Connection

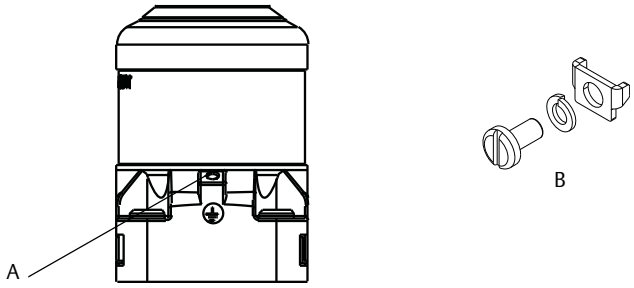

A. External Ground Lug
B. External Ground Assembly 03151-9060-0001

Table 2-1. External Ground Screw Approval Option Codes

Option code	Description
E1	ATEX Flameproof
I1	ATEX Intrinsic Safety
N1	ATEX Type n
ND	ATEX Dust
K1	ATEX Flameproof, Intrinsic Safety, Type n, Dust (combination of E1, I1, N1, and ND)
E7	IECEx Flameproof, Dust Ignition-proof
N7	IECEx Type n
K7	IECEx Flameproof, Dust Ignition-proof, Intrinsic Safety, and Type n (combination of E7, I7, and N7)
KA	ATEX and CSA Explosion-proof, Intrinsically Safe, Division 2 (combination of E1, E6, I1, and I6)
KC	FM and ATEX Explosion-proof, Intrinsically Safe, Division 2 (combination of E5, E1, I5, and I1)
T1	Transient terminal block
D4	External ground screw assembly

Surges/transients

The transmitter will withstand electrical transients of the energy level usually encountered in static discharges or induced switching transients. However, high-energy transients, such as those induced in wiring from nearby lightning strikes, can damage the transmitter.

Optional transient protection terminal block

The transient protection terminal block can be ordered as an installed option (Option Code T1 in the transmitter model number) or as a spare part to retrofit existing 4088 MultiVariable™ Transmitters in the field. For a complete listing of spare part numbers for transient protection terminal blocks, refer to "Spare parts list" on page 126. A lightning bolt symbol on a terminal block identifies it as having transient protection.

Note
Grounding the transmitter case using the threaded conduit connection may not provide a sufficient ground. The transient protection terminal block (Option Code T1) will not provide transient protection unless the transmitter case is properly grounded. See "Grounding" on page 13 to ground the transmitter case. Do not run transient protection ground wire with signal wiring; the ground wire may carry excessive current if a lightning strike occurs.

Install optional process temperature input (Pt 100 RTD Sensor)

Note
To meet ATEX/IECEx Flameproof certification, only ATEX/IECEx Flameproof Cables (Temperature Input Code C30, C32, C33, or C34) may be used.

1. Mount the Pt 100 RTD Sensor in the appropriate location.


Note
Use shielded four-wire or three-wire cable for the process temperature connection.

2. Connect the RTD cable to the transmitter by inserting the cable wires through the unused housing conduit and connect to the screws on the transmitter terminal block. An appropriate cable gland should be used to seal the conduit opening around the cable.

Note
If power is already connected to the Rosemount 4088, power should be removed prior to connecting the RTD wires. This will allow the Rosemount 4088 to detect the RTD type at startup. Once the RTD is installed, reconnect power.

3. Connect the RTD cable shield wire to the ground lug in the housing.

Figure 2-11. Transmitter RTD Wiring Connection

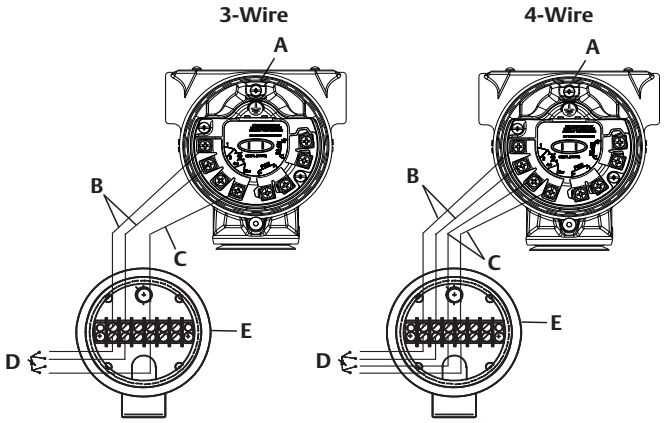

A. Ground lug
B. Red
C. White
D. Pt 100 RTD Sensor
E. Connection Head

Note
Verify the installed PT sensor type (3 or 4 wire) matches the device setting.

2.4.5 Verify device configuration

For Rosemount 4088A, use Rosemount Transmitter Interface Software with the Rosemount 4088 DTM or a HART Field Communicator with the Rosemount 4088 Device Descriptor to communicate with and verify configuration of the transmitter.

For Rosemount 4088B, use ROCLINK™, TechView, or HART Field Communicator to communicate with and verify configuration of the transmitter.

Note
A list of parameters to verify during commissioning is listed in "Handheld communicator Fast Keys" on page 68.

2.4.6 Trim the transmitter

Transmitters are shipped fully calibrated per request or by the factory default.

Zero trim

A zero trim is a single-point adjustment used for compensating mounting position and line pressure effects on static and differential pressure sensors. When performing a zero trim, ensure that the equalizing valve is open and all wet legs are filled to the correct level.

If zero offset is less than 5% of USL, follow the user interface software instructions below to perform a zero trim on a Field Communicator or see the "Zero trim" on page 73 for PC configuration.

Performing a zero trim using the Field Communicator

1. Block, equalize, and vent the transmitter and connect the Field Communicator (for more information on connecting the Field Communicator, see Figure 4-1 on page 49).
2. If the device is equipped with a static pressure sensor, trim the sensor by inputting the following Fast Key sequence at the transmitter menu:

475 Fast Keys	3,4,2,8

3. Follow the appropriate static pressure trim procedure.

- Zero Trim for Gage Pressure Sensors

OR

- Lower Sensor Trim for Absolute Pressure Sensors

Note
It is possible to degrade the performance of the transmitter if the full sensor trim is done improperly or with inaccurate calibration equipment. Use a pressure input source that is at least three times more accurate than the transmitter and allow the pressure input to stabilize for ten seconds before entering any values.

4. Zero the differential pressure sensor by inputting the following Fast Key sequence at the transmitter menu:

475 Fast Keys	3,4,1,8,5

5. Follow the zero DP trim procedure.

2.5 Rosemount 305, 306, and 304 Manifolds

The 305 Integral Manifold mounts directly to the transmitter and is available in two styles: Traditional and Coplanar. The traditional 305 Integral Manifold can be mounted to most primary elements in the market today using mounting adapters.

The 306 Integral Manifold is used with in-line transmitters to provide block-and-bleed valve capabilities of up to 10000 psi (690 bar).

The 304 conventional manifold combines a traditional flange and manifold that can be mounted to most primary elements.

2.5.1 Rosemount 305 Integral Manifold installation procedure

To install a 305 Integral Manifold to a Rosemount 4088 Transmitter:

⚠ 1. Inspect the PTFE sensor module O-rings. If the O-rings are undamaged, reusing them is recommended. If the O-rings are damaged (if they have nicks or cuts, for example), replace them with new O-rings.

Important
If replacing the O-rings, be careful not to scratch or deface the O-ring grooves or the surface of the isolating diaphragm when removing the damaged O-rings.

2. Install the Integral Manifold on the sensor module. Finger tighten the bolts, then tighten the bolts incrementally in a cross pattern (see Figure 2-12) to final torque value. See Figure 2-2 on page 9 for complete bolt installation information and for torque values. When fully tightened, the bolts should extend through the top of the module housing plane of the flange web (i.e. bolt hole) but must not contact the module housing.

3. If the PTFE sensor module O-rings have been replaced, the flange bolts should be re-tightened after installation to compensate for cold flow of the O-rings.

4. If applicable, install flange adapters on the process end of the manifold using the 1.75-in. flange bolts supplied with the transmitter.

Note
Always perform a zero trim on the transmitter/manifold assembly after installation to eliminate mounting effects. See “Zero trim” on page 17.

2.5.2 Rosemount 306 In-Line Manifold installation procedure

The 306 Manifold is for use only with a 4088 In-Line Transmitter.

⚠ Assemble the 306 Manifold to the 4088 In-Line Transmitter with a thread sealant.

1. Place transmitter into holding fixture.

2. Apply appropriate thread paste or tape to threaded instrument end of the manifold.

3. Count total threads on the manifold before starting assembly.

4. Start turning the manifold by hand into the process connection on the transmitter.

Note
If using thread tape, be sure the thread tape does not strip when the manifold assembly is started.

5. Wrench tighten manifold into process connection.

Note
Minimum torque value is 425 in-lbs.

6. Count how many threads are still showing.

Note
Minimum engagement is three revolutions.

7. Subtract the number of threads showing (after tightening) from the total threads to calculate the revolutions engaged. Further tighten until a minimum of 3 rotations is achieved.

8. For block and bleed manifold, verify the bleed screw is installed and tightened. For two-valve manifold, verify the vent plug is installed and tightened.

9. Leak-check assembly to maximum pressure range of transmitter.

2.5.3 Rosemount 304 Conventional Manifold installation procedure


To install a 304 Conventional Manifold to a 4088 Transmitter:

1. Align the Conventional Manifold with the transmitter flange. Use the four manifold bolts for alignment.

2. Finger tighten the bolts, then tighten the bolts incrementally in a cross pattern (see Figure 2-12) to final torque value. See Figure 2-2 on page 9 for complete bolt installation information and for torque values. When fully tightened, the bolts should extend through the top of the module housing plane of the flange web (i.e. bolt hole) but must not contact the module housing.

3. If applicable, install flange adapters on the process end of the manifold using the 1.75-in. flange bolts supplied with the transmitter.


Figure 2-12. Bolt Tightening Pattern

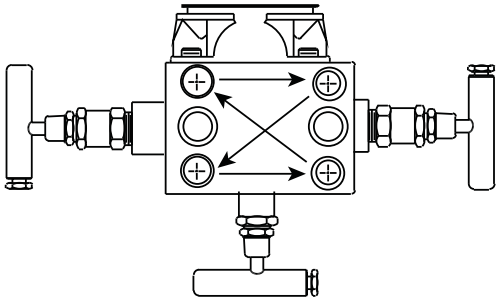


2.5.4 Rosemount 305 and 304 Manifold styles

The Rosemount 305 Integral Manifold is available in two styles: Coplanar and Traditional. The traditional 305 Integral Manifold can be mounted to most primary elements with mounting adapters.

Figure 2-13. Rosemount 305 Manifold Styles

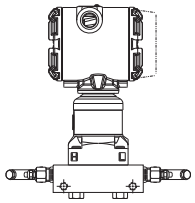


305 INTEGRAL COPLANAR

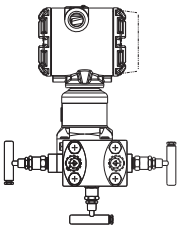


305 INTEGRAL TRADITIONAL

The Rosemount 304 comes in two basic styles: Traditional (flange + flange and flange + pipe) and Wafer. The 304 traditional manifold comes in two, three, and five-valve configurations. The 304 wafer manifold comes in three and five-valve configurations.

Figure 2-14. Rosemount 304 Manifold Styles

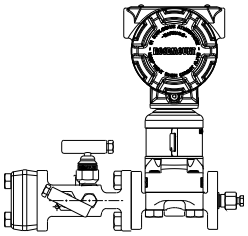

304 TRADITIONAL

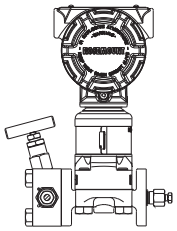

304 WAFER


2.5.5 Manifold operation

⚠ Improper installation or operation of manifolds may result in process leaks, which may cause death or serious injury.


Always perform a zero trim on the transmitter/manifold assembly after installation to eliminate any shift due to mounting effects. See "Zero trim" on page 17 for more information.

Three and five-valve configurations


In normal operation the two block valves between the process and instrument ports will be open and the equalizing valve will be closed.

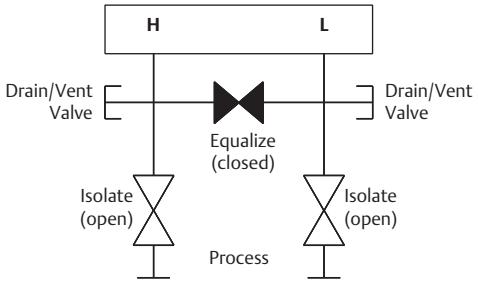


1. To zero the transmitter, close the block valve to the low pressure (downstream) side of the transmitter first.

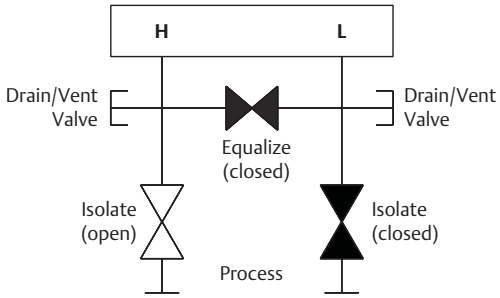


2. Open the center (equalize) valve to equalize the pressure on both sides of the transmitter. The manifold valves are now in the proper configuration for zeroing the transmitter.

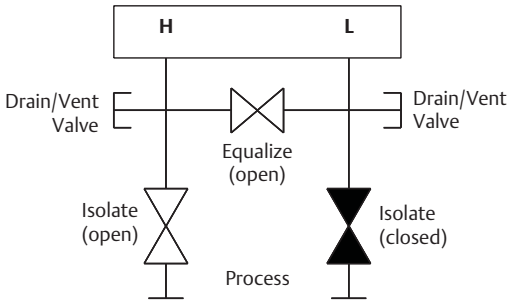

3. After zeroing the transmitter, close the equalizing valve.

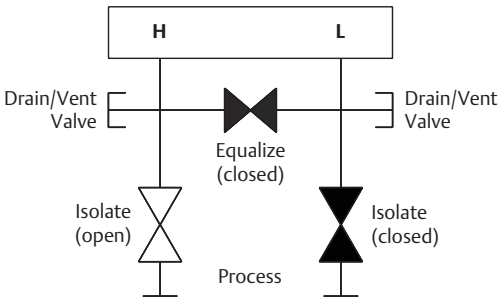


4. Open the block valve on the low pressure side of the transmitter to return the transmitter to service.

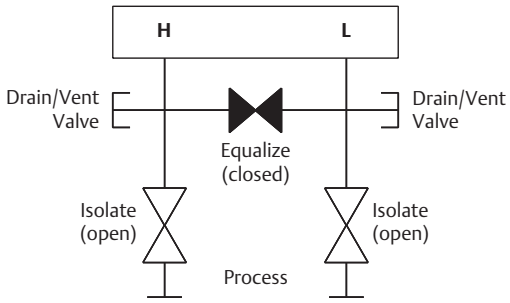


Five-valve natural gas configurations

In normal operation, the two block valves between the process and instrument ports will be open, and the equalizing valves will be closed.

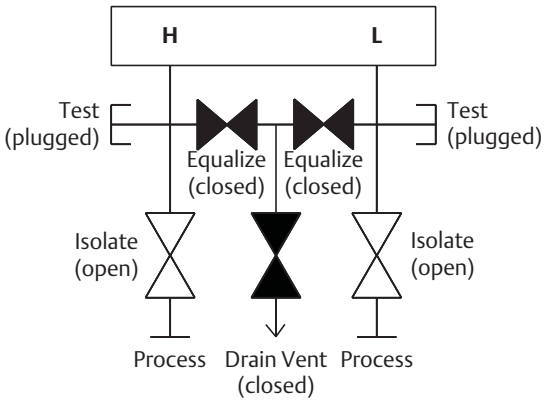


1. To zero the transmitter, first close the block valve on the low pressure (downstream) side of the transmitter.

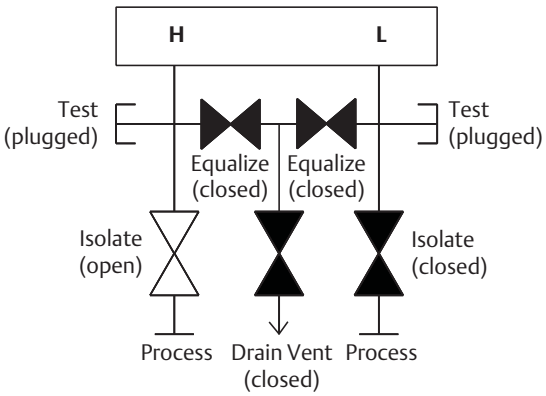


Note
Do not open the low side equalize valve before the high side equalize valve. Doing so will overpressure the transmitter.


2. Open the equalize valve on the high pressure (upstream) side of the transmitter.

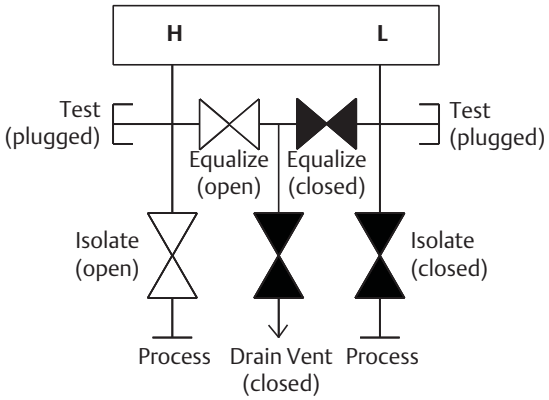


3. Open the equalize valve on the low pressure (downstream) side of the transmitter. The manifold is now in the proper configuration for zeroing the transmitter.

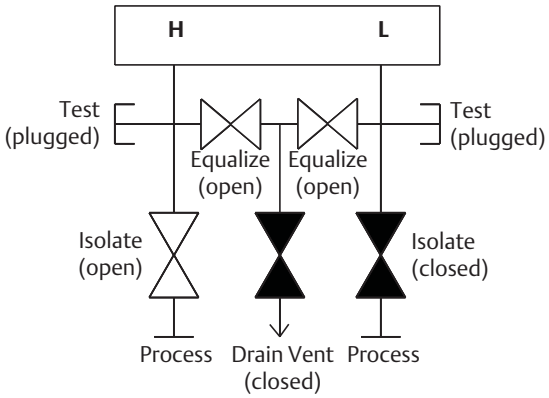


4. After zeroing the transmitter, close the equalize valve on the low pressure (downstream) side of the transmitter.

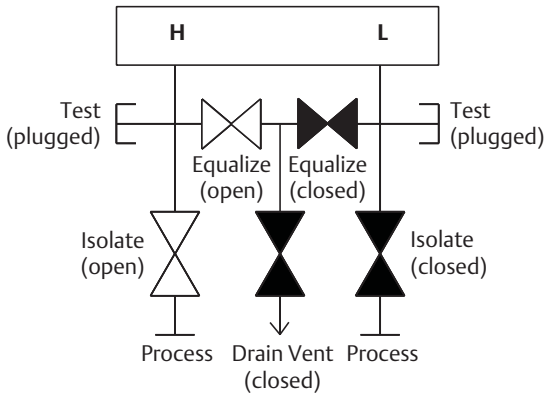

5. Close the equalize valve on the high pressure (upstream) side.

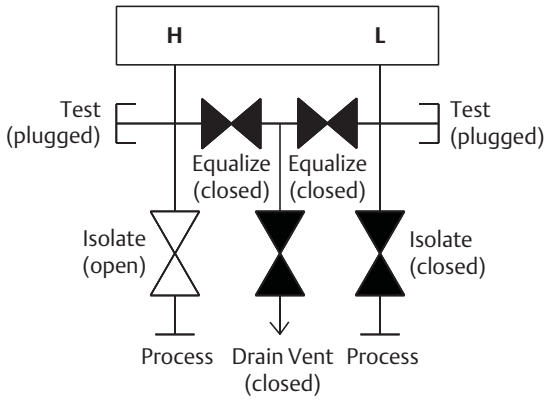

6. Finally, to return the transmitter to service, open the low side isolation valve.

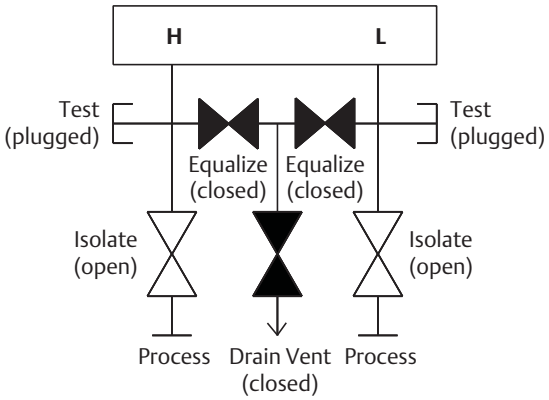

Section 3 Communication

Rosemount 4088A Modbus® communications . . . . . page 25
Rosemount 4088B ROC communications . . . . . page 44
Rosemount 4088B BSAP communications . . . . . page 45

3.1 Rosemount 4088A Modbus® communications

This section contains the Modbus interface and register map used in the Rosemount 4088A Transmitter. Use this section to locate the Modbus register for the process variables and status bits that will be retrieved from the Rosemount 4088A. The purpose of including this register map is to provide the information required to implement this register map within a host in order to achieve an effective exchange of data with the Rosemount 4088A. It is expected that anyone creating such an interface has a thorough understanding of the Modbus protocol. Reference the "Modicon Modbus Protocol Reference Guide PI-MBUS-300 Rev. J" published by Modicon, Inc., Industrial Automation Systems for further information.

3.1.1 Modbus communication overview

The Rosemount 4088A Transmitter is a Modbus-compatible measurement device. The 4088A supports standard Modbus RTU transmission mode.

Physical layer requirements

- RS-485
- 2-Wire
- Half-Duplex

Data format (not configurable)


- Data Bits: 8
- Stop Bits: 1
- Parity: None
- Bit Order: Least Significant Byte (LSB)

Baud rate (software configurable)

- Default Baud Rate: 9600
- Available Baud Rates: 1200, 2400, 4800, 9600, 19200

Make sure the RS-485 network is only terminated twice on the entire bus. Best practice would suggest this be done once on each end. Termination at multiple points on the bus will hamper communication. To help with this, the electronics board features an "AC Termination" switch that allows AC termination to be either enabled or disabled. See "Set the switches" on page 11 for more information.

The format for both query and response frames is as follows:



For communication to a specific 4088A, the address field contains the slave's polling address. In a broadcast frame, the address field contains a 0. Only Modbus function codes that write to a register or coil are valid in a broadcast message. Address 0 is reserved for broadcast messages and therefore is not a valid Modbus slave address.

All Rosemount 4088A Transmitters will respond to messages sent to Address 240. For this reason, Address 240 is considered a universal address. This address is useful when there is only a single device on a segment and its unique polling address is unknown. Using Address 240, the device can be queried to find the device address in Holding Register 0016. Since every device on a segment will respond to commands given to Address 240, it should never be used when there is more than a single device on a segment.

The function field contains a function code, which indicates the read, write or diagnostic command to be performed as part of a query. When the 4088A responds to a query, the function field will either verify the device's response or provide an exception that explains any errors encountered while processing the command. Table 3-1 provides an overview of these response codes. When a transmitter receives a query, it will not respond until the command has been completed. No subsequent commands will be processed until the first command is finished.

Table 3-1. Exception Response Codes

Exception response	Description	Explanation
01	Illegal function	The received message function is not an allowable action for the transmitter.
02	Illegal data address	The address referenced in the data field is not an allowable address for the memory location.
03	Illegal data value	The value referenced in the data field is not allowed in the addressed memory location.
04	Slave device failure	An unrecoverable error occurred while the slave was attempting to perform the requested action.
06	Slave device is busy	The slave is engaged in processing a long duration command. The host should retransmit the message later when the slave is free.

The data field contains information that is specific to each individual function.

The error check field contains a 16-bit CRC checksum that is used to verify the integrity of the message frame.

3.1.2 Modbus data types

The transmitter's mapped addresses store and use data types supported by many Modus-compatible PLC's and host controllers. Table Table 3-2 lists those data types according to their mapped addresses and corresponding function codes.

All registers in this document are referenced to one. The registers in Modbus messages are referenced to zero. This means the number of the mapped address register (i.e. 0005) is one higher than the actual number (i.e. 0004) that is sent in the Modbus frame message. Depending on whether the Modbus host is referenced to a 1 or 0, it may be required to add or subtract a 1

from the register to be accessed (ex. 0400 instead of 0401) for successful data acquisition between the host and transmitter.

Floating point values are stored as single precision IEEE 754 floating point numbers. These floating point numbers are stored as either two 16-bit registers or as one 32-bit register.

Table 3-2. Data Types According to Function Code and Mapped Address

Register start	Register end	Register size (bits)	Function codes	Register type	Description
1	102	1	01, 02, 05	Coil	Single on/off bit per Boolean coil state
397 7399	652 7526	16 32	03, 04, 06[(1)] 16, 69, 70	Floating point register	IEEE 754 floating point number (accessed in either two 16-bit or one 32-bit register).
1	362	16	03, 04 06, 16	Holding registers	One 16-bit unsigned integer per register (shares the same register range with the holding registers and ASCII registers).

(1) Floating Point numbers can only be written with function code 06 if the register is a 32-bit register.

3.1.3 Modbus function codes

The Rosemount 4088 supports the following function codes, which include read, write and diagnostic commands.

Table 3-3. Modbus Function Codes

Function code	Command type	Description	Explanation
01	Read	Read coil status	Read ON/OFF status of one coil or consecutive coils
02	Read	Read input status	Read ON/OFF status of one discrete input or consecutive discrete inputs
03	Read	Read holding registers	Read values of one or more holding registers
04	Read	Read input registers	Read values of one or more input registers
05	Write	Force single coil	Set coil to a specified ON or OFF state
06	Write	Preset single register	Write a value to holding register
08	Diagnostic	Loopback diagnostics	Send a diagnostic test message to the transmitter to evaluate communications processing
16	Write	Preset multiple registers	Write values to consecutive holding registers
69	Read	Read multiple floating point registers	Read values of one or more 32-bit floating point registers
70	Write	Load multiple floating point registers	Write values to consecutive 32-bit floating point registers

Once the transmitter has been configured, the configuration data can be protected by moving the Transmitter Security switch to the ON position. This switch is located on the left side of the Electronics Board and is labeled “Security”. If the Transmitter Security switch is ON and the host tries to write to a register location, the Modbus exception Illegal Data Address (02) will be returned. Any exceptions to this are noted in the Modbus register maps. See “Set the switches” on page 11 for more information.

3.1.4 Registers for process variables

A complete register map, including coils, holding, floating point and diagnostics are found later in this section. The register map for the process variables has been designed such that all dynamic process information can be obtained with a single read. The registers that provide this capability are shown in Table 3-4. In the event of a sensor malfunction, the transmitter will return "NAN" (not a number) for the numeric value.

Table 3-4. Modbus Registers for Process Variables

Register number (16-bit)	Register number (32-bit)	Description
0397-0398 Byte 0	7399 Byte 0	Sensor Module Temperature Variable Status
0397-0398 Byte 1	7399 Byte 1	Differential Pressure Variable Status
0397-0398 Byte 2	7399 Byte 2	Static Pressure Variable Status
0397-0398 Byte 3	7399 Byte 3	Process Temperature Variable Status
0399-0400	7400	Sensor Module Temperature
0401-0402	7401	Differential Pressure
0403-0404	7402	Static Pressure
0405-0406	7403	Process Temperature
0407-0410	7404-7405	Transmitter Status Information

3.1.5 Process variable integer scaling


The process variables can also be read as 16-bit scaled integers, as shown in Table 3-5. Integer scaling can result in significant loss of precision for the process variables and should only be done if the application can support this degradation. If scaled integers are disabled, all scaled integers will be set to 65535.

Table 3-5. Register Locations for Process Variables Presented as Scaled Integers

Process variable	16-bit register
Differential pressure	0116
Static pressure	0117
Process temperature	0118

There are two separate ways to configure the Scaled Integers. In the “Entered Endpoint” method, the (x1, y1) and (x2, y2) endpoints for the scaling line are defined as shown in Figure 3-1. The unit codes for the x-values for the endpoints should be the same as the current process variable unit code. If the process variable unit codes after the scaled integers are set, the x-values will be automatically updated to reflect the new unit code.

Figure 3-1. Integer Scaling

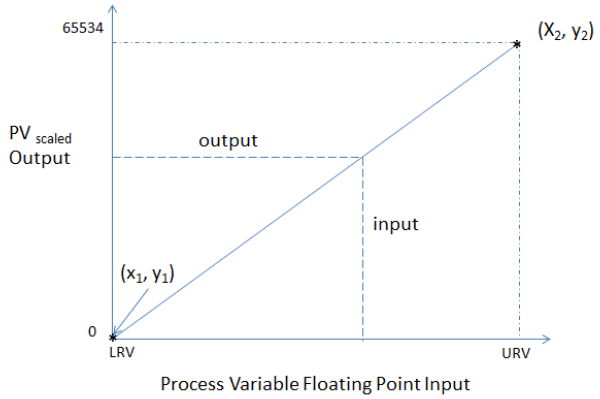

In the “Entered Scale Factor and Offset” method, a scale factor and an offset describing the relationship between the measured variable and the PV_{scaled} output are specified. The scale factor is the change of the scaled integers compared to the change of the measured process variable. The offset should be determined through use of the equation shown below:

PV_{scaled} = (scale factor* input) + (32,768 - offset)

The scale factor and offset must be configured for the correct unit codes. If the unit codes are changed, the scale factor and offset must be recalculated.

⚠ If the measured value derives an integer higher than the maximum integer or lower than 0, the maximum integer plus one will be returned. Also, if any of the defined error conditions occur, the affected scaled integers will be set to the maximum integer plus one. The maximum integer value can be any value from 1 to 65534. The default maximum integer value is 65534.

3.1.6 Floating point formats

The Rosemount 4088A has the capability to rearrange the transmission byte order of the floating point registers. The floating point registers will still be in IEEE 754 format, only the transmission byte order will change. The configuration of the byte transmission order is held in holding register 0132. Changing the configuration of the 4088A with regard to the byte transmission order affects both the reading and writing of floating point registers. It will not affect the byte transmission order of the integer data.

The floating point format byte order is shown in Table 3-6.

Table 3-6. Floating Point Format

	Byte order			
	Byte A	**Byte B**	**Byte C**	**Byte D**
IEEE 754 Floating Point	SEEE EEEE	EMMM MMMM	MMMM MMMM	MMMM MMMM
Format 0	1	2	3	4
Format 1	3	4	1	2
Format 2	4	3	2	1
Format 3	2	1	4	3

Note
"S" is the sign of the floating point number, "E" is the exponent, and "M" is the mantissa.

3.1.7 Communications

The Rosemount 4088A Transmitter can be configured with a Turnaround Delay time (Holding register 0131), which defines how long the transmitter will wait to respond after receiving a query from the host. If the Turnaround Delay Time is set to zero, the device will respond as fast as it can. The default Turnaround Delay Time is 50 milliseconds.

The registers shown in Table 3-7 provide statistics that may be used to gather diagnostic information about the communications between the device and the host. The communications statistics will reset when the Rosemount 4088A loses power or if a Master Reset is performed. The registers will be reset to zero when the value in the registers exceeds the maximum value for an unsigned 16-bit number.

Table 3-7. Communication Statistics

Address	Register type	Attribute	Description
0145	Holding	Read Only	Network Port Framing Error
0147	Holding	Read Only	Network Port Overrun Error
0148	Holding	Read Only	Network Port CRC Error
0150	Holding	Read Only	Network Port Good Message Count

3.1.8 Implementing calibration

Each process variable in the Rosemount 4088A (Differential Pressure (DP), Static Pressure (SP) and Process Temperature (PT) can be calibrated through a trim process, either a zero trim or a two-point trim. The Lower Trim value acts the same as a zero trim. The Upper Trim serves to adjust the span (or slope) of the device. The trim values should be written to the appropriate Floating Point Registers in Table 3-12. A Modbus coil (0003) has been provided as a way of flagging the transmitter is in a calibration state. The host has complete control of the calibration flag. The coil is intended for informational use and does not affect the internal operation of the device. The status of this coil can be read by coil 0050 which is a part of transmitter status.

For accurate calibration, the user should be prompted to wait for the process variable to stabilize before attempting to trim the transmitter. The host should never write the Lower (zero) and Upper (span) trims at the same time; the device will reject this type of request. For best results, a Lower Trim should be completed before attempting the Upper Trim.

3.1.9 Diagnostics

The Rosemount 4088A Transmitter features a number of diagnostic status bits that give information about the status of the transmitter. A complete listing of these diagnostic status bits are shown in Table 3-8. The status bits can be read as coils, holding registers, or floating point registers. In a polling environment, the host should retrieve the Process Variables and Status Registers in a single query. The Rosemount 4088A will automatically perform a continuous self-test, such that there is no requirement for a host to perform any independent procedures. For information on alarms and conditions, see "Alarms and conditions" on page 85.

Activating the Master Reset coil performs a reset of the Rosemount 4088A. This is similar to shutting off the power and then reapplying power. The Master Reset takes approximately 5 seconds to complete. For more information, see Table 3-10 on page 34.

Table 3-8. Transmitter Status and Diagnostic Registers

Transmitter status					
32-bit floating register address	**16-bit floating register address**	**Holding register address**	**Bit position**	**Coil**	**Description**
7404	0407	0119	15	50	Calibration Flag
			14	51	Critical Alarm Set
			13	52	Warning Alarm Set
			12	53	Differential Pressure Out of Limit (High)
			11	54	Reserved
			10	55	Differential Pressure Above Upper Alert Limit
			9	56	Differential Pressure Below Lower Alert Limit
			8	57	Reserved
			7	58	Differential Pressure Out of Limit (Low)
			6	59	Static Pressure Out of Limit (High)
			5	60	Reserved
			4	61	Static Pressure Above Upper Alert Limit
			3	62	Static Pressure Below Lower Alert Limit
			2	63	Reserved
			1	64	Static Pressure Out of Limit (Low)
			0	65	Reserved
7404	0408	0120	15	66	Reserved
			14	67	Reserved
			13	68	Process Temperature Out of Limit (High)
			12	69	Process Temperature Above Upper Alert Limit
			11	70	Process Temperature Below Lower Alert Limit
			10	71	Process Temperature Out of Limit (Low)
			9	72	Reserved
			8	73	Process Temperature Sensor Failure
			7	74	Sensor Module Temperature Out of Limit (High)
			6	75	Sensor Module Temperature Out of Limit (Low)
			5	76	Sensor Module Temperature Above Upper Alert Limit
			4	77	Sensor Module Temperature Below Lower Alert Limit
			3	78	RTD Sensor Type Mismatch
			2	79	LCD Communication Update Failure
			1	80	Sensor Module Failure
			0	81	Reserved

Table 3-8. Transmitter Status and Diagnostic Registers

Transmitter status					
32-bit floating register address	**16-bit floating register address**	**Holding register address**	**Bit position**	**Coil**	**Description**
7405	0409	0121	15	82	Sensor Module Communication Error
			14	83	Power Failure
			13	84	Reserved
			12	85	Reserved
			11	86	Sensor Module Incompatibility
			10	87	Reserved
			9	88	Reserved
			8	89	Differential Pressure Simulation Enabled
			7	90	Static Pressure Simulation Enabled
			6	91	Reserved
			5	92	Electronic Circuit Board Error
			4	93	Reserved
			3	94	Process Temperature Simulation Enabled
			2	95	Reserved
			1	96	Transmitter Security Switch Enabled
			0	97	Sensor Module Temperature Simulation Enabled
	0410	0122	15-0	N/A	Reserved

In addition, each dynamic variable has one byte of status accessible via a holding or floating point register. These dynamic variables include Differential Pressure, Static Pressure, Process Temperature and Sensor Module Temperature. Each variable status reading consists of two parts: Measurement Quality and Limit Status. These variable statuses are found in the register map for Holding and Floating Point registers.

Possible responses for measurement quality status

Good – Displays during normal device operation.

Poor Accuracy – Indicates the accuracy of the variable measurement has been compromised. Example: The sensor module temperature sensor failed and is no longer compensating the differential pressure measurement.

Manual/Fixed – Indicates the variable reading has been set to a fixed, user-specified value and may not represent the actual process. This status is set if a variable reading is being simulated or if the Process Temperature is set to use a fixed value.

Bad – Indicates the variable has failed. Example: The differential pressure sensor has failed.

Possible responses for measurement limit status

Not Limited – Displays during normal device operation.

High Limited – Indicates the current variable reading has gone above the transmitter's maximum possible reading and is no longer representative of the actual measurement.

Low Limited – Indicates that current variable reading has gone below the transmitter's minimum possible reading and is no longer representative of the actual measurement.

Constant – Indicates the variable reading is set to a fixed value. Example: The variable has been left in fixed simulation mode.

3.1.10 Transmitter register maps

This section contains three register maps for the Rosemount 4088A Transmitter. These maps include one for "Coils", one for "Holding Parameters" and one for "Floating Point Parameters" (see "Modbus data types" on page 26 for additional information). The maps are formatted according to Table 3-9. For a spreadsheet of this register map, please contact your local Rosemount representative or visit www.rosemount.com.

Table 3-9. Format for Modbus Register Maps

Column name	Description
Register Number	Indicates register number to be used to read specific parameter. Floating point registers can be read in 16-bit format and 32-bit format. Different sets of register numbers are defined for both formats.
Register Name	Name of parameter; each parameter will have unique meaningful name to understand usage of the parameter.
Access Type	Indicates access options when parameter is used from Modbus; valid options are: 1. RO-Parameter is read only. 2. RW-Parameter can be written when the transmitter Security switch is in the OFF position. Some parameters can be written regardless of the Security switch position. These parameters are noted in the register map.
Description	Gives the valid options for the parameter or the parameter's engineering unit.

Table 3-10. Coil Registers

Register number	Register name	Access type	Description
0002	Master Reset	RW	OFF=No action ON=Perform reset Coil can be written regardless of the transmitter Security switch state
0003	Calibration in Progress	RW	The host is responsible for setting this flag; the device does not change the value. OFF=Calibration not in progress ON=Calibration in progress
0004	Process Temperature Present	RW	OFF=Disabled (Fixed RTD mode) ON=Enabled (Normal/Backup Mode)
0031	Restore Differential Pressure Factory Calibration	RW	OFF=No action ON=Reset Differential Pressure trims to factory default
0032	Restore Static Pressure Factory Calibration	RW	OFF=No action ON=Reset Static Pressure trims to factory default
0033	Restore Process Temperature Factory Calibration	RW	OFF=No action ON=Reset Process Temperature trims to factory default

Table 3-10. Coil Registers

Register number	Register name	Access type	Description
0034	Reset Callendar-Van Dusen to IEC 751 Defaults	RW	OFF=No action ON=Reset Callendar-Van Dusen to IEC 751 defaults
0050-0097	Transmitter Status	RO	See Table 3-8 OFF=Status Bit Cleared ON=Status Bit Set
0098	Enable Differential Pressure Simulation	RW	OFF=Simulation Disabled ON=Simulation Enabled
0099	Enable Static Pressure Simulation	RW	OFF=Simulation Disabled ON=Simulation Enabled
0100	Enable Process Temperature Simulation	RW	OFF=Simulation Disabled ON=Simulation Enabled
0101	Enable Sensor Module Temperature Simulation	RW	OFF=Simulation Disabled ON=Simulation Enabled
0102	Transmitter Security Switch Status	RO	OFF= Disabled ON= Enabled

Table 3-11. Holding Registers

Register number	Register name	Access type	Description
0001	Transmitter Manufacturer	RO	38-Rosemount
0002	Legacy Type Code	RO	N/A
0003	Software Revision	RO	N/A
0005-0006	Sensor Module Serial Number	RO	N/A
0007-0008	Electronics Board Serial Number	RO	N/A
0009	Hardware Revision	RO	N/A
0010	Modbus Revision	RO	N/A
0011	Static Pressure Sensor Type	RO	0=Gage Pressure Sensor 1=Absolute Pressure Sensor
0012	Sensor Module Configuration	RO	0 = Standard coplanar (C) 1 = Standard threaded (T) 2 = Level coplanar (L) 3 = Reference class coplanar (P) 4 = High temperature conventional (H) 252 = Unknown
0013	Sensor Module Type	RO	0 = Differential Pressure (DP) 1 = Gage Pressure (GP) 2 = Absolute Pressure (AP) 6 = DP with AP High Side Static Pressure 7 = DP with GP High Side Static Pressure 253 = Custom
0014	Device Configuration	RO	Bit 0 = DP Sensor Installed Bit 1 = AP Pressure Installed Bit 2 = GP Pressure Installed Bit 3 = PT Sensor Installed Bit 4 = LCD Display Installed Bit 5 = 4088 Mode B Bit 6 = N/A Bit 7 = N/A

Table 3-11. Holding Registers

Register number	Register name	Access type	Description
0015	Device Model	RO	0x2668 1st byte is manufacture id (RMT=26 Hex) 2nd byte is device type (68 Hex).
0016	Device Address	RW	Valid addresses are 1-239
0017	Differential Pressure Sensor Range	RO	0 = 0 1 = 1 2 = 2 3 = 3 4 = 4 5 = 5 10 = A (Extended Range) 253 = Special
0018	Static Pressure Sensor Range	RO	0 = 0 1 = 1 2 = 2 3 = 3 4 = 4 5 = 5 6 = 6 7 = 7 253 = Special
0019	Temperature Sensor Range Code	RO	3 = -200 to 850 °C
0020	Isolating Diaphragm Material	RO	2 = 316L Stainless Steel 3 = Alloy C-276 4 = Alloy 400 5 = Tantalum 15 = Gold-Plated Alloy 400 34 = Gold-Plated 316L SST 35 = Gold Plated Alloy C-276 253 = Special
0021	Sensor Module Fill Fluid	RO	1 = Silicone 2 = Inert 7 = Neobee® M-20 252 = Unknown 253 = Special
0022	Process Connection Material	RW	0 = Carbon Steel 2 = 316 Stainless Steel 3 = Cast C-276 4 = Alloy 400 30 = Alloy C-276 252 = Unknown 253 = Special

Table 3-11. Holding Registers

Register number	Register name	Access type	Description
0023	Process Connection Style	RW	12 = Conventional (Traditional) 13 = Coplanar 14 = Remote Seal 15 = Level; 3 in, 150 lb. 16 = Level; 4in, 150 lb. 17 = Level; 3 in, 300lb. 18 = Level; 4in, 300 lb. 19 = Level; DN 80, PN 40 20 = Level; DN 100, PN 40 21 = Level; DN 100, PN 10/16 22 = Level; 2 in, 150 lb. 23 = Level; 2in, 300 lb. 24 = Level; DN 50, PN 6 25 = Level; DN 50, PN 40 44 = 1/2-in, NPTF 45 = DIN16288G 1/2 A male 46 = 1/4-in, NPTF 240 = Auto Clave F-250-C 241 = Tri-Clamp™ 242 = Fractional Line Fit 243 = 1/8-in, NPTF 244 = VCR 245 = PMC 246 = Traditional RC 1/4 247 = Traditional RC 1/2 252 = Unknown 253 = Special
0024	Drain/Vent Valve Material	RW	0 = Carbon Steel 2 = 316 Stainless Steel 3 = Cast C-276 4 = Alloy 400 30 = Alloy C-276 251 = None 252 = Unknown 253 = Special
0025	O-Ring Material	RW	10 = PTFE 11 = Viton 12 = Buna-N 13 = Ethyl-Prop 36 = PTFE Glass 37 = PTFE Graphite 251 = None 252 = Unknown 253 = Special
0026	Remote Seal Type	RW	2 = CTW 3 = EFW 4 = PFW 5 = RFW 6 = RTW 7 = SCW 8 = SSW 9 = High Temperature 10 = FFW 11 = UCW 12 = TSW 13 = NWSP 14 = SSAP 15 = SSHP 16 = TFS 251 = None 252 = Unknown 253 = Special

Table 3-11. Holding Registers

Register number	Register name	Access type	Description
0027	Remote Seal Fill Fluid	RW	2 = Silicone Oil 3 = SYLTHERM™ 800 4 = Inert 5 = Glycerin H_2O 6 = Prop Gly/H_2O 7 = Neobee M-20 8 = SYLTHERM XLT 9 = Dioctyl phthalate 10 = Dow Corning® 704 11 = Therminol 66 12 = D. C. 210H 13 = Distilled water 14 = D. C. 200 15 = D. C. 705 251 = None 252 = Unknown 253 = Special
0028	Remote Seal Isolating Diaphragm Material	RW	2 = 316 Stainless Steel 3 = Alloy C-276 4 = Alloy 400 5 = Tantalum 9 = Co-Cr-Ni 34 = PTFE Coated 316L SST 240 = Nickel 201 251 = None 252 = Unknown 253 = Special
0029	Number of Remote Seals	RW	1 = One Seal 2 = Two Seals 250 = Not Used 251 = None 252 = Unknown 253 = Special
0030-0031	Date	RW	DDMMYY
0032-0035	Tag	RW	This field can hold numbers, symbols, upper-case letters (8 characters)
0036-0043	Description	RW	This field can hold numbers, symbols, upper-case letters (16 characters)
0044-0059	Message	RW	This field can hold numbers, symbols, upper-case letters (32 characters)
0060	Differential Pressure Units	RW	1 = inH_2O @60degF 2 = Pa 3 = kPa 4 = MPa 5 = psi 6 = inH_2O@68degF 7 = bar 8 = mbar 9 = g/Sqcm 10 = kg/Sqcm 11 = inHg 12 = ftH_2O 13 = torr 14 = atm 15 = mmH_2O 16 = mmHg 238 = inH_2O @4degC 239 = mmH_2O @4degC
0061	Static Pressure Units	RW	
0062	Process Temperature Units	RW	20 - degC 21 - degF

Table 3-11. Holding Registers

Register number	Register name	Access type	Description
0063	Sensor Module Temperature Units	RW	20 - degC 21 - degF
0064	Sensor Module Temperature Variable Status	RO	Status Format: Measurement Quality - Limit Status 0x00 = Bad - Not Limited 0x10 = Bad - Low Limited 0x20 = Bad - High Limited 0x30 = Bad - Constant 0x40 = Poor Accuracy - Not Limited 0x50 = Poor Accuracy - Low Limited 0x60 = Poor Accuracy - High Limited 0x70 = Poor Accuracy - Constant 0x80 = Manual/Fixed - Not Limited 0x90 = Manual/Fixed - Low Limited 0xA0 = Manual/Fixed - High Limited 0xB0 = Manual/Fixed - Constant 0xC0 = Good - Not Limited 0xD0 = Good - Low Limited 0xE0 = Good - High Limited 0xF0 = Good - Constant
0065	Differential Pressure Variable Status	RO	
0066	Static Pressure Variable Status	RO	
0067	Process Temperature Variable Status	RO	
0084	Configuration Change Counter	RO	N/A
0116	Differential Pressure Scaled Integer	RO	N/A
0117	Static Pressure Scaled Integer	RO	N/A
0118	Process Temperature Scaled Integer	RO	N/A
0119-0121	Transmitter Status	RO	See Table 3-8.
0125	Maximum Scale Value	RW	N/A
0126	LCD Display Scroll Time	RW	Value given in seconds
0127-0128	Display Options	RW	Bit 0 = Differential Pressure Bit 1 = Absolute Pressure Bit 2 = Process Temperature Bit 3 = Baud Rate Bit 4 = Gage Pressure Bit 5 = Sensor Module Temperature Bit 7 = Device Address Bit 8 = Parameter 1 Bit 9 = Parameter 2 Bit 10 = Parameter 3 Bit 11 = Parameter 4 Bit 12 = Parameter 5 Bit 13 = Parameter 6 Bit 16 = Variable 1 Bit 17 = Variable 2 Bit 18 = Variable 3
0131	Turnaround Delay Time (ms)	RW	N/A
0132	Floating Byte Transmission Order	RW	0 = FORMAT 0 1 = FORMAT 1 2 = FORMAT 2 3 = FORMAT 3
0133	Baud Rate	RW	1 = 1200 2 = 2400 3 = 4800 4 = 9600 5 = 19200
0134	Temperature Mode	RW	0 = Fixed 1 = Normal 2 = Backup
0135	Temperature Sensor Type	RW	0 = 4-Wire RTD Sensor 1 = 3-Wire RTD Sensor

Table 3-11. Holding Registers

Register number	Register name	Access type	Description
0145	Modbus Port Framing Error Count	RO	N/A
0147	Modbus Port Overrun Error Count	RO	N/A
0148	Modbus Port CRC Error Count	RO	N/A
0150	Modbus Port Good Message Count	RO	N/A
0188	Differential Pressure Minimum Scaled Integer Value	RW	N/A
0189	Differential Pressure Maximum Scaled Integer Value	RW	N/A
0190	Static Pressure Minimum Scaled Integer Value	RW	N/A
0191	Static Pressure Maximum Scaled Integer Value	RW	N/A
0192	Process Temperature Minimum Scaled Integer Value	RW	N/A
0193	Process Temperature Maximum Scaled Integer Value	RW	N/A
0198	Differential Pressure Scale Factor	RW	N/A
0199	Differential Pressure Scale Offset	RW	N/A
0200	Static Pressure Scale Factor	RW	N/A
0201	Static Pressure Scale Offset	RW	N/A
0202	Process Temperature Scale Factor	RW	N/A
0203	Process Temperature Scale Offset	RW	N/A
0204	Integer Scaling Method	RW	0 = Disabled 1 = Entered Endpoints 2 = Entered Scale Factor & Offset
0207-0211	User-Defined Parameter 1 Label	RW	ISO-Latin-1 (10 characters)
0212-0214	User-Defined Parameter 1 Units	RW	ISO-Latin-1 (5 characters, the last byte is truncated)
0215-0219	User-Defined Parameter 2 Label	RW	ISO-Latin-1 (10 characters)
0220-0222	User-Defined Parameter 2 Units	RW	ISO-Latin-1 (5 characters, the last byte is truncated)
0223-0227	User-Defined Parameter 3 Label	RW	ISO-Latin-1 (10 characters)
0228-0230	User-Defined Parameter 3 Units	RW	ISO-Latin-1 (5 characters, the last byte is truncated)
0231-0235	User-Defined Parameter 4 Label	RW	ISO-Latin-1 (10 characters)
0236	Reserved	N/A	N/A
0237-0239	User-Defined Parameter 4 Units	RW	ISO-Latin-1 (5 characters, the last byte is truncated)
0240	Reserved	N/A	N/A
0241-0245	User-Defined Parameter 5 Label	RW	ISO-Latin-1 (10 characters)
0246-0248	User-Defined Parameter 5 Units	RW	ISO-Latin-1 (5 characters, the last byte is truncated)
0249-0253	User-Defined Parameter 6 Label	RW	ISO-Latin-1 (10 characters)
0254-0256	User-Defined Parameter 6 Units	RW	ISO-Latin-1 (5 characters, the last byte is truncated)
0257-0261	User-Defined Variable 1 Label	RW	ISO-Latin-1 (10 characters)
0262-0264	User-Defined Variable 1 Units	RW	ISO-Latin-1 (5 characters, the last byte is truncated)

Table 3-11. Holding Registers

Register number	Register name	Access type	Description
0265-0269	User-Defined Variable 2 Label	RW	ISO-Latin-1 (10 characters)
0270-0272	User-Defined Variable 2 Units	RW	ISO-Latin-1 (5 characters, the last byte is truncated)
0273-0277	User-Defined Variable 3 Label	RW	ISO-Latin-1 (10 characters)
0278-0280	User-Defined Variable 3 Units	RW	ISO-Latin-1 (5 characters, the last byte is truncated)
0281-0296	Long Tag	RW	ISO-Latin-1 (32 characters)
0297-0312	Model Number 1	RW	This field can hold numbers, symbols, and upper-case letters (32 characters)
0313-0328	Model Number 2	RW	This field can hold numbers, symbols, and upper-case letters (32 characters)
0329-0344	Model Number 3	RW	This field can hold numbers, symbols, and upper-case letters (32 characters)
0345-0360	Model Number 4	RW	This field can hold numbers, symbols, and upper-case letters (32 characters)
0361-0362	Transmitter Serial Number	RW	N/A

Table 3-12. Floating Point Registers

Register number (16 Bit)	Register number (32 Bit)	Register name	Access type	Units
0397-0398 Byte 0	7399 Byte 0	Sensor Module Temperature Variable Status	RO	Each byte is independent and can take on values of: Status Format: Measurement Quality - Limit Status 0x00 = Bad - Not Limited 0x10 = Bad - Low Limited 0x20 = Bad - High Limited 0x30 = Bad - Constant 0x40 = Poor Accuracy - Not Limited 0x50 = Poor Accuracy - Low Limited 0x60 = Poor Accuracy - High Limited 0x70 = Poor Accuracy - Constant 0x80 = Manual/Fixed - Not Limited 0x90 = Manual/Fixed - Low Limited 0xA0 = Manual/Fixed - High Limited 0xB0 = Manual/Fixed - Constant 0xC0 = Good - Not Limited 0xD0 = Good - Low Limited 0xE0 = Good - High Limited 0xF0 = Good - Constant
0397-0398 Byte 1	7399 Byte 1	Differential Pressure Variable Status	RO	
0397-0398 Byte 2	7399 Byte 2	Static Pressure Variable Status	RO	
0397-0398 Byte 3	7399 Byte 3	Process Temperature Variable Status	RO	
0399-0400	7400	Sensor Module Temperature	RO	Sensor Module Temperature Units
0401-0402	7401	Differential Pressure	RO	Differential Pressure Units
0403-0404	7402	Static Pressure	RO	Static Pressure Units
0405-0406	7403	Process Temperature	RO	Process Temperature Units
0407-0410	7404-7405	Transmitter Status	RO	Table 3-8 on page 32
0413-0414	7407	Differential Pressure Upper Sensor Limit	RO	Differential Pressure Units
0415-0416	7408	Differential Pressure Lower Sensor Limit	RO	Differential Pressure Units
0417-0418	7409	Differential Pressure Upper Alert Limit	RW	Differential Pressure Units
0419-0420	7410	Differential Pressure Lower Alert Limit	RW	Differential Pressure Units
0421-0422	7411	Static Pressure Upper Sensor Limit (for Installed Sensor)	RO	Static Pressure Units
0423-0424	7412	Static Pressure Lower Sensor Limit (for Installed Sensor)	RO	Static Pressure Units

Table 3-12. Floating Point Registers

Register number (16 Bit)	Register number (32 Bit)	Register name	Access type	Units
0425-0426	7413	Static Pressure Upper Alert Limit	RW	Static Pressure Units
0427-0428	7414	Static Pressure Lower Alert Limit	RW	Static Pressure Units
0429-0430	7415	Process Temperature Upper Sensor Limit	RW	Process Temperature Units
0431-0432	7416	Process Temperature Lower Sensor Limit	RW	Process Temperature Units
0433-0434	7417	Process Temperature Upper Alert Limit	RW	Process Temperature Units
0435-0436	7418	Process Temperature Lower Alert Limit	RW	Process Temperature Units
0437-0438	7419	Differential Pressure Lower Trim	RW	Differential Pressure Units
0439-0440	7420	Differential Pressure Upper Trim	RW	Differential Pressure Units
0441-0442	7421	Differential Pressure Damping	RW	Seconds
0443-0444	7422	Static Pressure Lower Trim	RW	Static Pressure Units
0445-0446	7423	Static Pressure Upper Trim	RW	Static Pressure Units
0447-0448	7424	Static Pressure Damping	RW	Seconds
0449-0450	7425	Process Temperature Lower Trim	RW	Process Temperature Units
0451-0452	7426	Process Temperature Upper Trim	RW	Process Temperature Units
0453-0454	7427	Process Temperature Damping	RW	Seconds
0455-0456	7428	Backup/Fixed Process Temperature	RW	Process Temperature Units
0457-0458	7429	Sensor Module Temperature	RO	Sensor Module Temperature Units
0469-0470	7435	Integer Scaling: Differential Pressure Minimum Process Variable	RW	Differential Pressure Units
0471-0472	7436	Integer Scaling: Differential Pressure Maximum Process Variable	RW	Differential Pressure Units
0473-0474	7437	Integer Scaling: Static Pressure Minimum Process Variable	RW	Static Pressure Units
0475-0476	7438	Integer Scaling: Static Pressure Maximum Process Variable	RW	Static Pressure Units
0477-0478	7439	Integer Scaling: Process Temperature Minimum Process Variable	RW	Process Temperature Units
0479-0480	7440	Integer Scaling: Process Temperature Maximum Process Variable	RW	Process Temperature Units
0481-0482	7441	Process Temperature Callendar-Van Dusen "A"	RW	N/A
0483-0484	7442	Process Temperature Callendar-Van Dusen "B"	RW	N/A
0485-0486	7443	Process Temperature Callendar-Van Dusen "C"	RW	N/A
0487-0488	7444	Process Temperature Callendar-Van Dusen "R0"	RW	Ohms
0489-0490	7445	Sensor Module Temperature Upper Sensor Limit	RO	Sensor Module Temperature Units
0491-0492	7446	Sensor Module Temperature Lower Sensor Limit	RO	Sensor Module Temperature Units
0493-0494	7447	Sensor Module Temperature Lower Alert Limit	RW	Sensor Module Temperature Units
0495-0496	7448	Sensor Module Temperature Upper Alert Limit	RW	Sensor Module Temperature Units
0497-0498	7449	Static Pressure Lower Sensor Limit (Offset by Atmospheric Pressure)	RO	Static Pressure Units

Table 3-12. Floating Point Registers

Register number (16 Bit)	Register number (32 Bit)	Register name	Access type	Units
0499-0500	7450	Static Pressure Upper Sensor Limit (Offset by Atmospheric Pressure)	RO	Static Pressure Units
0501-0502	7451	Absolute Pressure	RO	Static Pressure Units
0503-0504	7452	Gage Pressure	RO	Static Pressure Units
0505-0506	7453	User-Defined Atmospheric Pressure	RW	Static Pressure Units
0507-0508	7454	Differential Pressure Low DP Cutoff	RW	Differential Pressure Units
0509-0510	7455	User-Defined Parameter 1 Value	RW	User-defined
0511-0512	7456	User-Defined Parameter 2 Value	RW	User-defined
0513-0514	7457	User-Defined Parameter 3 Value	RW	User-defined
0515-0516	7458	User-Defined Parameter 4 Value	RW	User-defined
0517-0518	7459	User-Defined Parameter 5 Value	RW	User-defined
0519-0520	7460	User-Defined Parameter 6 Value	RW	User-defined
0521-0522	7461	User-Defined Variable 1 Value	RW	Register can be written to regardless of the state of the transmitter Security switch.
0523-0524	7462	User-Defined Variable 2 Value	RW	Register can be written to regardless of the state of the transmitter Security switch.
0525-0526	7463	User-Defined Variable 3 Value	RW	Register can be written to regardless of the state of the transmitter Security switch.
0527-0528	7464	Differential Pressure Device Reading 1	RO	Differential Pressure Units
0529-0530	7465	Differential Pressure Verification Reference Point 1	RW	Differential Pressure Units
0531-0532	7466	Differential Pressure Device Reading 2	RO	Differential Pressure Units
0533-0534	7467	Differential Pressure Verification Reference Point 2	RW	Differential Pressure Units
0535-0536	7468	Differential Pressure Device Reading 3	RO	Differential Pressure Units
0537-0538	7469	Differential Pressure Verification Reference Point 3	RW	Differential Pressure Units
0539-0540	7470	Differential Pressure Device Reading 4	RO	Differential Pressure Units
0541-0542	7471	Differential Pressure Verification Reference Point 4	RW	Differential Pressure Units
0543-0544	7472	Differential Pressure Device Reading 5	RO	Differential Pressure Units
0545-0546	7473	Differential Pressure Verification Reference Point 5	RW	Differential Pressure Units
0547-0548	7474	Differential Pressure Device Reading 6	RO	Differential Pressure Units
0549-0550	7475	Differential Pressure Verification Reference Point 6	RW	Differential Pressure Units
0551-0552	7476	Static Pressure Device Reading 1	RO	Static Pressure Units
0553-0554	7477	Static Pressure Verification Reference Point 1	RW	Static Pressure Units
0555-0556	7478	Static Pressure Device Reading 2	RO	Static Pressure Units
0557-0558	7479	Static Pressure Verification Reference Point 2	RW	Static Pressure Units
0559-0560	7480	Static Pressure Device Reading 3	RO	Static Pressure Units
0561-0562	7481	Static Pressure Verification Reference Point 3	RW	Static Pressure Units
0563-0564	7482	Static Pressure Device Reading 4	RO	Static Pressure Units

Table 3-12. Floating Point Registers

Register number (16 Bit)	Register number (32 Bit)	Register name	Access type	Units
0565-0566	7483	Static Pressure Verification Reference Point 4	RW	Static Pressure Units
0567-0568	7484	Static Pressure Device Reading 5	RO	Static Pressure Units
0569-0570	7485	Static Pressure Verification Reference Point 5	RW	Static Pressure Units
0571-0572	7486	Static Pressure Device Reading 6	RO	Static Pressure Units
0573-0574	7487	Static Pressure Verification Reference Point 6	RW	Static Pressure Units
0575-0576	7488	Process Temperature Device Reading 1	RO	Process Temperature Units
0577-0578	7489	Process Temperature Verification Reference Point 1	RW	Process Temperature Units
0579-0580	7490	Process Temperature Device Reading 2	RO	Process Temperature Units
0581-0582	7491	Process Temperature Verification Reference Point 2	RW	Process Temperature Units
0583-0584	7492	Process Temperature Device Reading 3	RO	Process Temperature Units
0585-0586	7493	Process Temperature Verification Reference Point 3	RW	Process Temperature Units
0587-0588	7494	Process Temperature Device Reading 4	RO	Process Temperature Units
0589-0590	7495	Process Temperature Verification Reference Point 4	RW	Process Temperature Units
0591-0592	7496	Process Temperature Device Reading 5	RO	Process Temperature Units
0593-0594	7497	Process Temperature Verification Reference Point 5	RW	Process Temperature Units
0595-0596	7498	Process Temperature Device Reading 6	RO	Process Temperature Units
0597-0598	7499	Process Temperature Verification Reference Point 6	RW	Process Temperature Units
0599-0600	7500	Differential Pressure Offset	RW	Differential Pressure Units
0601-0602	7501	Differential Pressure Minimum Span	RO	Differential Pressure Units
0613-0614	7507	Process Temperature Offset	RW	Process Temperature Units
0615-0616	7508	Process Temperature Minimum Span	RO	Process Temperature Units
0627-0628	7514	Static Pressure Offset	RW	Static Pressure Units
0629-0630	7515	Static Pressure Minimum Span	RO	Static Pressure Units
0641-0642	7521	Simulate Differential Pressure	RW	Differential Pressure Units
0643-0644	7522	Simulate Static Pressure	RW	Static Pressure Units
0645-0646	7523	Simulate Process Temperature	RW	Process Temperature Units
0647-0648	7524	Simulate Sensor Module Temperature	RW	Sensor Module Temperature Units
0651-0652	7526	Sensor Module Temperature Minimum Span	RO	Sensor Module Temperature Units

3.2 Rosemount 4088B ROC communications

The Rosemount 4088B Transmitter is designed to provide a seamless transition from the legacy MVS205 sensor. It has been designed to be used with the ROCLINK™ 800 configuration software (either by itself or launched through OpenEnterprise Field Tools) to configure and (if necessary) calibrate the 4088B transmitter.

For further information on the FloBoss™ 107, refer to:

- FloBoss 107 Flow Manager Instruction Manual (part D301232X012)
- ROCLINK 800 Configuration Software User Manual (for FloBoss 107) (part D301249X012)

For further information on the ROC800-Series devices, refer to:

- ROC800-Series Remote Operations Controller Instruction Manual (part D301217X012)
- DL8000 Preset Controller Instruction Manual (part D301244X012)
- ROCLINK 800 Configuration Software User Manual (for ROC800-Series) (part D301250X012)
- ROCLINK 800 Configuration Software User Manual (for DL8000) (part D301259X012)
- ROCLINK 800 Configuration Software User Manual (for ROC800L) (part D301246X012)

For further information on communication protocols, refer to:

- For the FloBoss 107: ROC Protocol Specifications Manual (part D301053X012)
- For the ROC800-Series: ROC Plus Protocol Specifications Manual (part D301180X012)
- For the DL8000: Preset Protocol Specifications Manual (part D301254X012)
- For the ROC800L: ROC800L Protocol Specifications Manual (part D301659X012)

3.3 Rosemount 4088B BSAP communications

Depending on system setup, the ControlWave™ application may need to be modified to work with the 4088B transmitter.

Note
This section assumes familiarity with ControlWave Designer and that the user knows how to edit ControlWave Designer projects and download a ControlWave project into the ControlWave. If unfamiliar with these topics, see Getting Started with ControlWave Designer part D301416X012, the online help in ControlWave Designer, and the ControlWave Designer Programmer's Handbook part D301426X012. For information on TechView see the TechView User's Guide part D301430X012. For information on OpenEnterprise Field Tools, see the OE Field Tools Quick Start Guide part D301703X412.

When using TechView by itself (or launched through OpenEnterprise Field Tools) to communicate with one or more 4088B transmitters that are connected to the RS-485 port of a ControlWave device, modify the ControlWave application to handle the direct communication with the transmitter(s) if any of the following are true:

- ControlWave is used as a data concentrator which collects data from the transmitter(s) which can then be polled from a higher level controller or host computer
- Data from the transmitter(s) in the program logic is running in the ControlWave
- The connection between the PC/laptop running TechView/Field Tools uses Ethernet instead of a serial connection

In all of these cases, TechView communicates locally with the ControlWave device and the application running in the ControlWave device handles the direct connection to the 4088B transmitter(s). The application must use the CLIENT function block to collect the appropriate

list(s) from the 4088B. For details on configuring the CLIENT function block, see the online help in ControlWave Designer.

If connecting serially to the ControlWave device without using data from the transmitters in the ControlWave application or using the ControlWave device as a data concentrator, remote access can be used to communicate through the ControlWave Micro port directly to the transmitter(s). This does not require application modification. Once communications are established with TechView, call up web pages or launch DataView to access particular lists.

3.3.1 4088B BSAP communications signals

Table 3-14 shows each of the lists that reside in the 4088B. To use data from these lists in the ControlWave project, the CLIENT function block needs to be configured to retrieve the lists. The LIST number to retrieve must be specified on the iiServerID parameter of the CLIENT function block.

Note
Some variables in the lists are identified for "3808 legacy support." These variables are not functional and exist only for 3808 list compatibility.

Important
To collect dynamic process information (pressure, temperature) at a rate of up to once per second, only collect List 1 or List 101. Collect other lists only when specifically needed, otherwise data update rates for calculations may be slower.

Table 3-13. Control Bits Definitions

Control bit	Description
LK	Software write protection bit, signals with the LK bit are write protected when MANUAL.LOCK.CFG is set to 1 and write enabled when set to 0. MANUAL.LOCK.CFG is writeable, via BSAP, over the local port only. This parameter has no impact on any other protocol.
MI	Manual Inhibit - when set, this bit prevents the user from writing to the BSAP signal.
N/A	Designates control bit that is not applicable.

Table 3-14. 4088B BSAP Signal Information

List	Index	BSAP signal	Name	Access type	Control bits	Description
1	1	PRESSURE.VAL.INP	Pressure	RO	MI	Value given in pressure units
1	2	STATIC.VAL.INP	Static Pressure	RO	MI	Value given in static pressure units
1	3	TEMP.VAL.INP	Process Temperature	RO	MI	Value given in process temperature units
1	4	ESTTEMP.VAL.LIVE	Sensor Module Temperature	RO	MI	Value given in sensor module temperature units
1	5	ERRFLAGS..	Transmitter Status	RO	None	Possible values are: 0.5 = No Errors 0.53125 = Power Failure 0.50390625 = Process Temperature Out of Limit or Process Temperature Sensor Failure 0.53515625 = Power Failure and Process Temperature Out of Limit or Process Temperature Sensor Failure

Table 3-14. 4088B BSAP Signal Information

List	Index	BSAP signal	Name	Access type	Control bits	Description
2	1	PRESSURE.UNITS.	Pressure Units	RW	LK	0 = psi 1 = kPa 2 = MPa 3 = mmH_20 4 = inH_2O@60degF 5 = mmHg 6 = inHg 7 = mbar 8 = bar 9 = g/Sqcm 10 = kg/Sqcm 11 = ftH_20 12 = inH_2O@68degF 13 = Pa 14 = torr 15 = atm 16 = inH_20@4degC 17 = mmH_20@4degC
2	2	STATIC.UNITS.	Static Pressure Units	RW	LK	
2	3	TEMP.UNITS.	Process Temperature Units	RW	LK	0 = degC 1 = degF
2	4	TEMP.UNITS.	Process Temperature Units	RW	LK	0 = degC 1 = degF
2	5	TAGNAME..	Tag	RW	LK	This field can hold numbers, symbols, and upper-case letters (8 characters).
2	6	REV3508..	N/A	N/A	MI	(3808 legacy support)
3	1	PRESSURE.SPAN.CAL	Pressure Upper Trim	RW	None	User-entered pressure during 2-point span trim in pressure units
4	1	STATIC.SPAN.CAL	Static Pressure Upper Trim	RW	None	User-entered pressure during 2-point SP span trim in static pressure units
5	1	EXECUTE.CALIB.	Calibration Command	RW	LK	0 = No Operation 1 = Dp zero 2 = Dp span. Input is PRESSURE.SPAN.CAL 3 = Sp zero 4 = Sp span. Input is STATIC.SPAN.CAL 5 = RTD zero (expects 100 ohm resistor on RTD) 6 = RTD span (expects 300 ohm resistor on RTD)
5	2	MODBUS.CALIB.	Calibration In Progress	RW	LK	The host is responsible for setting this flag; the device does not change the value. OFF = Calibration Not in Progress ON = Calibration in Progress
6	1	PRESSURE.TARGET.	Pressure Upper Trim Point	RW	LK	Value given In pressure units
6	2	STATIC.TARGET.	Static Pressure Upper Trim Point	RW	LK	Value given in static pressure units
7	1	TEMP.OFFSET.CFG	N/A	N/A	LK	(3808 legacy support)
8	1	A.USER.CAL	Process Temperature Callendar-Van Dusen “A”	RW	LK	N/A
8	2	B.USER.CAL	Process Temperature Callendar-Van Dusen “B”	RW	LK	N/A
8	3	R0.USER.CAL	Process Temperature Callendar-Van Dusen “R0”	RW	LK	N/A
9	1	TEMP.SPAN.CAL	Process Temperature Upper Trim Point	RW	LK	Value given in process temperature units

Table 3-14. 4088B BSAP Signal Information

List	Index	BSAP signal	Name	Access type	Control bits	Description
10	1	PRESSURE.UNITS.	Pressure Units	RW	LK	0 = psi 1 = kPa 2 = MPa 3 = mmH_20@68degF 4 = inH_2O@60degF 5 = mmHg@0degC 6 = inHg@0degC 7 = mbar 8 = bar 9 = g/Sqcm 10 = kg/Sqcm 11 = ftH_20@68degF 12 = inH_2O@68degF 13 = Pa 14 = torr 15 = atm 16 = inH_20@4degC 17 = mmH_20@4degC
10	2	STATIC.UNITS.	Static Pressure Units	RW	LK	
10	3	TEMP.UNITS.	Process Temperature Units	RW	LK	0 = degC 1 = degF
10	4	OUTPUT.SOURCE.	N/A	N/A	None	(3808 legacy support)
10	5	OUTPUT.VAL.EXT	N/A	N/A	None	(3808 legacy support)
10	6	OUTPUT.VAL.LRV	N/A	N/A	None	(3808 legacy support)
10	7	OUTPUT.VAL.URV	N/A	N/A	None	(3808 legacy support)
10	8	BSAP.ADDR.CFG	BSAP Local Address	RW	LK	BSAP local address of the transmitter (1-126)
10	9	BSAP.GROUP.CFG	EBSAP Group Number	RW	LK	EBSAP Group Number (0-127)– leave at 0 unless using EBSAP
10	10	MODBUS.ADDR.CFG	Device Address	RW	LK	Valid addresses are 1 - 239
10	11	MODBUS.MODE.CFG	N/A	N/A	MI	(3808 legacy support)
10	12	BAUDRATE.CFG.	Baud Rate	RW	LK	485 port baud rate: 1200 2400 4800 9600 19200
10	13	RTS.DELAY.CFG	Turnaround Delay Time (ms)	RW	None	N/A
10	14	TEMP.VAL.DAMP	Process Temperature Damping	RW	None	Value given in seconds
10	15	A.USER.CAL	Process Temperature Callendar-Van Dusen “A”	RW	LK	N/A
10	16	B.USER.CAL	Process Temperature Callendar-Van Dusen “B”	RW	LK	N/A
10	17	R0.USER.CAL	Process Temperature Callendar-Van Dusen “R0”	RW	LK	N/A
10	18	RTD.ZERO.CAL	N/A	N/A	LK	(3808 legacy support)
10	19	PRESSURE.VAL.DAMP	Pressure Damping	RW	None	Value given in seconds
10	20	STATIC.VAL.DAMP	Static Pressure Damping	RW	None	Value given in seconds
10	21	PRESSURE.VAL.LRV	Pressure Lower Alert Limit	RW	LK	Value given in pressure units
10	22	PRESSURE.VAL.URV	Pressure Upper Alert Limit	RW	LK	Value given in pressure units
10	23	TEMP.VAL.LRV	Process Temperature Lower Alert Limit	RW	LK	Value given in process temperature units
10	24	TEMP.VAL.URV	Process Temperature Upper Alert Limit	RW	LK	Value given in process temperature units

Table 3-14. 4088B BSAP Signal Information

List	Index	BSAP signal	Name	Access type	Control bits	Description
10	25	STATIC.VAL.LRV	Static Pressure Lower Alert Limit	RW	LK	Value given in static pressure units
10	26	STATIC.VAL.URV	Static Pressure Upper Alert Limit	RW	LK	Value given in static pressure units
10	27	OUTPUT.FAIL.	N/A	N/A	None	(3808 legacy support)
10	28	TEMP.FAIL.	Temperature Mode	RW	LK	When TEMP.FAIL is written, the following values will be automatically loaded into TEMP.MODE: Fail to mode — TEMP.MODE — TEMP.FAIL FIXED value — 0 — 0 Backup value when RTD fails — 1 — 1 Normal RTD operation — 1 — 2
10	29	TEMP.FAIL.CFG	Backup/Fixed Process Temperature	RW	LK	Value given in process temperature units
10	30	BSAP.ANYADR.CFG	Local Port Response Selectivity	RW	None	0 = Respond only for this transmitter's address 1 = Respond to any address
10	31	TEMP.OFFSET.CFG	N/A	N/A	LK	(3808 legacy support)
10	32	MANUAL.LOCK.CFG	BSAP Write Protection	RW	None	BSAP Write Protection 0 = Write enabled 1 = Write protected When set to 1, BSAP signals, with the LK in the signal control bits, are write-protected over the network port only. When set to 0, these signals are write-enabled. MANUAL.LOCK.CFG is writable, via BSAP, over the local port only.
10	33	CU.SEL.CFG	N/A	N/A	LK	(3808 legacy support)
10	34	CU.LRV.CFG	N/A	N/A	LK	(3808 legacy support)
10	35	CU.URV.CFG	N/A	N/A	LK	(3808 legacy support)
10	36	STATIC.LRLADJ.CFG	N/A	N/A	None	(3808 legacy support)
10	37	STATIC.MODE.	Static Mode	RW	None	If enabled, then AP displays on LCD display. 0 = Disabled 1 = Enabled
10	38	TEMP.MODE.	Process Temperature Present	RW	LK	OFF = Disabled (Fixed RTD mode) ON = Enabled (Normal/Backup mode) When TEMP.MODE is written, the following value will be automatically loaded into TEMP.FAIL: Fail to mode — TEMP.MODE — TEMP.FAIL FIXED value — 0 — 0 Backup value when RTD fails — 1 — 1
10	39	OUTPUT.ACTION.	N/A	N/A	None	(3808 legacy support)
10	40	OUTPUT.MODE.	N/A	N/A	None	(3808 legacy support)
10	41	PW..	N/A	RW	MI+LK	Password for write access to the transmitter via BSAP
10	42	TAGNAME..	Tag	RW	LK	This field can hold numbers, symbols, and upper-case letters (8 characters)
10	43	SENSOR.TYPE.CODE	Sensor Module Type	RO	MI	2 = Absolute (AP) 6 = DP with AP High side Static pressure 7 = DP with GP High side Static pressure 12 = Gage Pressure (GP) 32 = Differential (DP) 253 = Custom
11	1	PRESSURE.RESTR.DEF	Restore Pressure Factory Calibration	RW	LK	OFF = No action ON = Reset Pressure trims to factory default
11	2	STATIC.RESTR.DEF	Restore Static Pressure Factory Calibration	RW	LK	OFF = No action ON = Reset Static Pressure trims to factory default

Table 3-14. 4088B BSAP Signal Information

List	Index	BSAP signal	Name	Access type	Control bits	Description
11	3	TEMP.RESTR.DEF	Restore Process Temperature Factory Calibration	RW	LK	OFF = No action ON = Reset Process Temperature trims to factory default
80	1	PROGREV..	N/A	N/A	MI	(3808 legacy support)
80	2	PRESSURE.SPAN.CAL	Pressure Upper Trim	RW	None	User-entered pressure during 2-point span trim in pressure units
80	3	STATIC.SPAN.CAL	Static Pressure Upper Trim	RW	None	User-entered pressure during 2-point SP span trim in static pressure units
80	4	PRESSURE.VAL.LRV	Pressure Lower Alert Limit	RW	LK	Value given in pressure units
80	5	PRESSURE.VAL.URV	Pressure Upper Alert Limit	RW	LK	Value given in pressure units
80	6	TEMP.VAL.LRV	Process Temperature Lower Alert Limit	RW	LK	Value given in process temperature units
80	7	TEMP.VAL.URV	Process Temperature Upper Alert Limit	RW	LK	Value given in process temperature units
80	8	PRESSURE.VAL.LRL	Pressure Lower Sensor Limit	RO	MI	Value given in pressure units
80	9	PRESSURE.VAL.URL	Pressure Upper Sensor Limit	RO	MI	Value given in pressure units
80	10	STATIC.VAL.LRL	Static Pressure Lower Sensor Limit (for installed sensor)	RO	MI	Value given in static pressure units
80	11	STATIC.VAL.URL	Static Pressure Upper Sensor Limit (for installed sensor)	RO	MI	Value given in static pressure units
80	12	STATIC.VAL.LRV	Static Pressure Lower Alert Limit	RW	LK	Value given in static pressure units
80	13	STATIC.VAL.URV	Static Pressure Upper Alert Limit	RW	LK	Value given in static pressure units
80	14	PRESSURE.TARGET.	Pressure Upper Trim Point	RW	LK	Value given in pressure units
80	15	STATIC.TARGET.	Static Pressure Upper Trim Point	RW	LK	Value given in static pressure units
80	16	SENSOR.BLOCK.NUM	Sensor Module Serial Number	RO	MI	Sensor module serial number
80	17	BOARD.SERIAL.NUM	Electronics Board Serial Number	RO	MI	Electronics board serial number
101	1	PRESSURE.VAL.INP	Pressure	RO	MI	Value given in pressure units
101	2	STATIC.VAL.INP	Static Pressure	RO	MI	Value given in static pressure units
101	3	TEMP.VAL.INP	Process Temperature	RO	MI	Value given in process temperature units
101	4	ESTTEMP.VAL.LIVE	Sensor Module Temperature	RO	MI	Value given in sensor module temperature units
101	5	ERRFLAGS..	Transmitter Status	RO	None	Possible values are: 0.5 = No Errors 0.53125 = Power Failure 0.50390625 = Process Temperature Out of Limit or Process Temperature Sensor Failure 0.53515625 = Power Failure and Process Temperature Out of Limit or Process Temperature Sensor Failure
101	6	CONFIG.CHANGE.CNTR	Configuration Change Counter	RO	None	Count of configuration/calibration changes received
101	7	PRESSURE.VAL.LIVE	N/A	N/A	MI	(3808 legacy support)
101	8	STATIC.VAL.LIVE	N/A	N/A	MI	(3808 legacy support)

Table 3-14. 4088B BSAP Signal Information

List	Index	BSAP signal	Name	Access type	Control bits	Description
101	9	TEMP.FAIL.	Temperature Mode	RW	LK	When TEMP.FAIL is written, the following values will be automatically loaded into TEMP.MODE: Fail to mode — TEMP.MODE — TEMP.FAIL FIXED value — 0 — 0 Backup value when RTD fails — 1 — 1 Normal RTD operation — 1 — 2
101	10	STATUS.OPTNS.	Device Configuration	RO	MI	Sum of one or more of the following values: 1 = DP Sensor Installed 2 = AP Pressure Installed 4 = GP Pressure Installed 8 = PT Sensor Installed 16 = LCD Display Present 32 = 4088 Mode B 64 = N/A 128 = N/A For example, 33 = DP sensor installed (1) plus 4088 Mode B (32)
101	11	DP.STATUS.	Differential Pressure Variable Status	RO	MI	Status Format: Measurement Quality - Limit Status 0 = Bad - Not Limited 16 = Bad - Low Limited 32 = Bad - High Limited 48 = Bad - Constant 64 = Poor Accuracy - Not Limited 80 = Poor Accuracy - Low Limited 96 = Poor Accuracy - High Limited 112 = Poor Accuracy - Constant 128 = Manual/Fixed - Not Limited 144 = Manual/Fixed - Low Limited 160 = Manual/Fixed - High Limited 176 = Manual/Fixed - Constant 192 = Good - Not Limited 208 = Good - Low Limited 224 = Good - High Limited 240 = Good - Constant
101	12	SP.STATUS.	Static Pressure Variable Status	RO	MI	
101	13	PT.STATUS.	Process Temperature Variable Status	RO	MI	
101	14	ST.STATUS.	Sensor Module Temperature Variable Status	RO	MI	
102	1	PRESSURE.UNITS.	Pressure Units	RW	LK	0 = psi 1 = kPa 2 = MPa 3 = mmH_20@68degF 4 = inH_2O@60degF 5 = mmHg@0degC 6 = inHg@0degC 7 = mbar 8 = bar 9 = g/Sqcm 10 = kg/Sqcm 11 = ftH_20@68degF 12 = inH_2O@68degF 13 = Pa 14 = torr 15 = atm 16 = inH_20@4degC 17 = mmH_20@4degC
102	2	STATIC.UNITS.	Static Pressure Units	RW	LK	
102	3	TEMP.UNITS.	Process Temperature Units	RW	LK	0 = degC 1 = degF
102	4	TEMP.UNITS.	Process Temperature Units	RW	LK	0 = degC 1 = degF
102	5	TAGNAME..	Tag	RW	LK	This field can hold numbers, symbols, and upper-case letters (8 characters)
102	6	REV3508..	N/A	N/A	MI	(3808 legacy support)
102	7	DESCRIP.USER.CFG	Description	RW	LK	This field can hold numbers, symbols, and upper-case letters (16 characters)
102	8	MESSAGE.USER.CFG	Message	RW	LK	This field can hold numbers, symbols, and upper-case letters (32 characters)
102	9	HART.LONG.TAG	Long Tag	RW	LK	ISO-Latin-1 (32 characters)

Table 3-14. 4088B BSAP Signal Information

List	Index	BSAP signal	Name	Access type	Control bits	Description
102	10	XMT.TYPE.CFG	Device Model	RO	MI	9832 = 0x2668 hex 1st byte is manufacture id (RMT = 26 hex) 2nd byte is device type (68 hex)
102	11	HW.WRITE.PROT	Transmitter Security Switch Status	RO	MI	OFF = Disabled ON = Enabled
102	12	ST.UNITS.	Sensor Module Temperature Units	RW	LK	0 = degC 1 = degF
103	1	PRESSURE.SPAN.CAL	Pressure Upper Trim	RW	None	User-entered pressure during 2-point span trim in pressure units
104	1	STATIC.SPAN.CAL	Static Pressure Upper Trim	RW	None	User-entered pressure during 2-point SP span trim in static pressure units
105	1	EXECUTE.CALIB.	Calibration Command	RW	LK	0 = No Operation 1 = Dp zero 2 = Dp span. Input is PRESSURE.SPAN.CAL 3 = Sp zero 4 = Sp span. Input is STATIC.SPAN.CAL 5 = RTD zero (expects 100 ohm resistor on RTD) 6 = RTD span (expects 300 ohm resistor on RTD)
105	2	MODBUS.CALIB.	Calibration in Progress	RW	LK	The host is responsible for setting this flag; the device does not change the value. OFF = Calibration Not in Progress ON = Calibration in Progress
106	1	PRESSURE.TARGET.	Pressure Upper Trim Point	RW	LK	Value given in pressure units
106	2	STATIC.TARGET.	Static Pressure Upper Trim Point	RW	LK	Value given in static pressure units
107	1	TEMP.OFFSET.CFG	N/A	N/A	LK	(3808 legacy support)
108	1	A.USER.CAL	Process Temperature Callendar-Van Dusen “A”	RW	LK	N/A
108	2	B.USER.CAL	Process Temperature Callendar-Van Dusen “B”	RW	LK	N/A
108	3	R0.USER.CAL	Process Temperature Callendar-Van Dusen “R0”	RW	LK	N/A
108	4	C.USER.CAL	Process Temperature Callendar-Van Dusen “C”	RW	LK	N/A
109	1	TEMP.SPAN.CAL	Process Temperature Upper Trim Point	RW	LK	Value given in process temperature units
109	2	USER.SPAN.CAL	Legacy Calibration Process Temperature Upper Trim Point	RO	LK	Value given in process temperature units
110	1	PRESSURE.UNITS.	Pressure Units	RW	LK	0 = psi 1 = kPa 2 = MPa 3 = mmH_20@68degF 4 = inH_2O@60degF 5 = mmHg@0degC 6 = inHg@0degC 7 = mbar 8 = bar 9 = g/Sqcm 10 = kg/Sqcm 11 = ftH_20@68degF 12 = inH_2O@68degF 13 = Pa 14 = torr 15 = atm 16 = inH_20@4degC 17 = mmH_20@4degC
110	2	STATIC.UNITS.	Static Pressure Units	RW	LK	
110	3	TEMP.UNITS.	Process Temperature Units	RW	LK	0 = degC 1 = degF

Table 3-14. 4088B BSAP Signal Information

List	Index	BSAP signal	Name	Access type	Control bits	Description
110	4	OUTPUT.SOURCE.	N/A	N/A	None	(3808 legacy support)
110	5	OUTPUT.VAL.EXT	N/A	N/A	None	(3808 legacy support)
110	6	OUTPUT.VAL.URV	N/A	N/A	None	(3808 legacy support)
110	7	OUTPUT.VAL.URV	N/A	N/A	None	(3808 legacy support)
110	8	BSAP.ADDR.CFG	BSAP Local Address	RW	LK	BSAP local address of the Rosemount 4088B (1-126)
110	9	BSAP.GROUP.CFG	EBSAP Group Number	RW	LK	EBSAP group number (0-127). Leave at 0 unless using EBSAP
110	10	MODBUS.ADDR.CFG	Device Address	RW	LK	Valid addresses are 1 - 239
110	11	MODBUS.MODE.CFG	N/A	N/A	MI	(3808 legacy support)
110	12	BAUDRATE.CFG.	Baud Rate	RW	LK	485 port baud rate: 1200 2400 4800 9600 19200
110	13	RTS.DELAY.CFG	Turnaround Delay Time (ms)	RW	None	N/A
110	14	TEMP.VAL.DAMP	Process Temperature Damping	RW	None	Value given in seconds
110	15	A.USER.CAL	Process Temperature Callendar-Van Dusen “A”	RW	LK	N/A
110	16	B.USER.CAL	Process Temperature Callendar-Van Dusen “B”	RW	LK	N/A
110	17	R0.USER.CAL	Process Temperature Callendar-Van Dusen “R0”	RW	LK	N/A
110	18	RTD.ZERO.CAL	N/A	N/A	LK	(3808 legacy support)
110	19	PRESSURE.VAL.DAMP	Pressure Damping	RW	None	Value given in seconds
110	20	STATIC.VAL.DAMP	Static Pressure Damping	RW	None	Value given in seconds
110	21	PRESSURE.VAL.LRV	Pressure Lower Alert Limit	RW	LK	Value given in pressure units
110	22	PRESSURE.VAL.URV	Pressure Upper Alert Limit	RW	LK	Value given in pressure units
110	23	TEMP.VAL.LRV	Process Temperature Lower Alert Limit	RW	LK	Value given in process temperature units
110	24	TEMP.VAL.URV	Process Temperature Upper Alert Limit	RW	LK	Value given in process temperature units
110	25	STATIC.VAL.LRV	Static Pressure Lower Alert Limit	RW	LK	Value given in static pressure units
110	26	STATIC.VAL.URV	Static Pressure Upper Alert Limit	RW	LK	Value given in static pressure units
110	27	OUTPUT.FAIL.	N/A	N/A	None	(3808 legacy support)
110	28	TEMP.FAIL.	Temperature Mode	RW	LK	When TEMP.FAIL is written, the following values will be automatically loaded into TEMP.MODE: Fail to mode — TEMP.MODE — TEMP.FAIL FIXED value — 0 — 0 Backup value when RTD fails — 1 — 1 Normal RTD operation — 1 — 2
110	29	TEMP.FAIL.CFG	Backup/Fixed Process Temperature	RW	LK	Value given in process temperature units

Table 3-14. 4088B BSAP Signal Information

List	Index	BSAP signal	Name	Access type	Control bits	Description
110	30	BSAP.ANYADR.CFG	Local Port Response Selectivity	RW	None	0 = Respond only for this transmitter's address 1 = Respond to any address
110	31	TEMP.OFFSET.CFG	N/A	N/A	LK	(3808 legacy support)
110	32	MANUAL.LOCK.CFG	BSAP Write Protection	RW	None	BSAP Write Protection 0 = Write enabled 1 = Write protected When set to 1, BSAP signals with a lock bit are write-protected over the network port only. When set to 0, these signals are write-enabled. MANUAL.LOCK.CFG is writable, via BSAP, over the local port only. Only the signals with LK in the Control Bits column can be locked.
110	33	CU.SEL.CFG	N/A	N/A	LK	(3808 legacy support)
110	34	CU.LRV.CFG	N/A	N/A	LK	(3808 legacy support)
110	35	CU.URV.CFG	N/A	N/A	LK	(3808 legacy support)
110	36	STATIC.LRLADJ.CFG	N/A	N/A	None	(3808 legacy support)
110	37	STATIC.MODE.	Static Mode	RW	None	If enabled, then AP displays on LCD display. 0 = Disabled 1 = Enabled
110	38	TEMP.MODE.	Process Temperature Present	RW	LK	OFF = Disabled (Fixed RTD mode) ON = Enabled (Normal/Backup mode) When TEMP.MODE is written, the following value will be automatically loaded into TEMP.FAIL: Fail to mode — TEMP.MODE — TEMP.FAIL FIXED value — 0 — 0 Backup value when RTD fails — 1 — 1
110	39	OUTPUT.ACTION.	N/A	N/A	None	(3808 legacy support)
110	40	OUTPUT.MODE.	N/A	N/A	None	(3808 legacy support)
110	41	PW..	N/A	RW	MI+LK	The password for write access to the transmitter via BSAP
110	42	TAGNAME..	Tag	RW	LK	This field can hold numbers, symbols, and upper-case letters (8 characters)
110	43	SENSOR.TYPE.CODE	Sensor Module Type	RO	MI	2 = Absolute Pressure (AP) 6 = DP with AP High Side Static Pressure 7 = DP with GP High Side Static Pressure 12 = Gage Pressure (GP) 32 = Differential Pressure (DP) 253 = Custom
110	44	C.USER.CAL	Process Temperature Callendar-Van Dusen "C"	RW	LK	N/A
110	45	RTD.MIN.SPAN	Process Temperature Minimum Span	RO	MI	Value given in process temperature units
110	46	TEMP.ZERO.CAL	Process Temperature Lower Trim Point	RW	LK	Value given in process temperature units
110	47	DP.CUTOFF.LOW	Differential Pressure Low DP Cutoff	RW	LK	Value given in differential pressure units
110	48	ATMOS.PRESS.	User-Defined Atmospheric Pressure	RW	LK	Value given in static pressure units
110	49	ST.URV.	Sensor Module Temperature Lower Alert Limit	RW	LK	Value given in sensor module temperature units
110	50	ST.LRV.	Sensor Module Temperature Upper Alert Limit	RW	LK	Value given in sensor module temperature units
110	51	ST.UNITS.	Sensor Module Temperature Units	RW	LK	0 = degC 1 = degF

Table 3-14. 4088B BSAP Signal Information

List	Index	BSAP signal	Name	Access type	Control bits	Description
110	52	TXMITTER.FAIL.	N/A	N/A	None	(3808 legacy support)
110	53	USER.ZERO.CAL	Legacy Calibration Process Temperature Lower Trim Point	RO	LK	Value given in process temperature units
110	54	ST.MIN.SPAN	Sensor Module Temperature Minimum Span	RO	MI	Value given in sensor module temperature units
110	55	CONFIG.CHANGE .CNTR	Configuration Change Counter	RO	None	Count of configuration/calibration changes received
111	1	PRESSURE.RESTR .DEF	Restore Pressure Factory Calibration	RW	LK	OFF = No action ON = Reset pressure trims and calibrations to factory default
111	2	STATIC.RESTR.DEF	Restore Static Pressure Factory Calibration	RW	LK	OFF = No action ON = Reset static pressure trims and calibrations to factory default
111	3	TEMP.RESTR.DEF	Restore Process Temperature Factory Calibration	RW	LK	OFF = No action ON = Reset process temperature trims and calibrations to factory default
111	4	RESTR.CVD.COEF	Reset Callendar-Van Dusen to IEC 751 Defaults	RW	LK	OFF = No action ON = Reset Callendar-Van Dusen to IEC 751 Defaults
112	1	BSAP.ADDR.CFG	BSAP Local Address	RW	LK	BSAP local address of the transmitter (1-126)
112	2	BSAP.GROUP.CFG	EBSAP Group Number	RW	LK	EBSAP group number (0-127). Leave at 0 unless using EBSAP
112	3	BSAP.ANYADR.CFG	Local Port Response Selectivity	RW	None	0 = Respond only for this transmitter's address 1 = Respond to any address
112	4	MODBUS.ADDR.CFG	Device Address	RW	LK	Valid addresses are 1 - 239
112	5	RTS.MODE.	N/A	N/A	None	(3808 legacy support)
112	6	RTS.DELAY.CFG	Turnaround Delay Time (ms)	RW	None	N/A
112	7	BAUDRATE.CFG.	Baud Rate	RW	LK	485 port baud rate: 1200 2400 4800 9600 19200
115	2	SET.CAL.TYPE	Calibration Type	RW	LK	0 - None 1 - Set Lower Trim 2 - Set Upper Trim 6 - Sensor Setup 7 - Sensor Restore
115	3	SET.CAL.VAL	Calibration Set Value	RW	LK	N/A
117	1	SP_AP.USER.VAL	Absolute Pressure	RO	MI	Value given in static pressure units
117	2	SP_GP.USER.VAL	Gage Pressure	RO	MI	Value given in static pressure units
117	3	STATIC.VAL.LIVE	N/A	N/A	MI	(3808 legacy support)
117	4	SP.STATUS.	Static Pressure Variable Status	RO	MI	Status Format: Measurement Quality - Limit Status 0 = Bad - Not Limited 16 = Bad - Low Limited 32 = Bad - High Limited 48 = Bad - Constant 64 = Poor Accuracy - Not Limited 80 = Poor Accuracy - Low Limited 96 = Poor Accuracy - High Limited 112 = Poor Accuracy - Constant 128 = Manual/Fixed - Not Limited 144 = Manual/Fixed - Low Limited 160 = Manual/Fixed - High Limited 176 = Manual/Fixed - Constant 192 = Good - Not Limited 208 = Good - Low Limited 224 = Good - High Limited 240 = Good - Constant

Table 3-14. 4088B BSAP Signal Information

List	Index	BSAP signal	Name	Access type	Control bits	Description
119	1	ISOLAT.XMIT.CFG	Isolating Diaphragm Material	RO	LK	2 = 316L Stainless Steel 3 = Alloy C-276 4 = Alloy 400 5 = Tantalum 15 = Gold-Plated Alloy 400 34 = Gold-Plated 316L SST 35 = Gold Plated Alloy C-276 253 = Special
119	2	FLUID.XMIT.CFG	Sensor Module Fill Fluid	RO	LK	1 = Silicone 2 = Inert 7 = Neobee 252 = Unknown 253 = Special
119	3	FLANGE.MATL.CFG	Process Connection Material	RW	LK	0 = Carbon Steel 2 = 316 Stainless Steel 3 = Cast C-276 4 = Alloy 400 30 = Alloy C-276 252 = Unknown 253 = Special
119	4	FLANGE.TYPE.CFG	Process Connection Style	RW	LK	12 = Conventional (Traditional) 13 = Coplanar 14 = Remote Seal 15 = Level; 3 in, 150 lb. 16 = Level; 4in, 150 lb. 17 = Level; 3 in, 300lb. 18 = Level; 4in, 300 lb. 19 = Level; DN 80, PN 40 20 = Level; DN 100, PN 40 21 = Level; DN 100, PN 10/16 22 = Level; 2 in, 150 lb. 23 = Level; 2in, 300 lb. 24 = Level; DN 50, PN 6 25 = Level; DN 50, PN 40 44 = 1/2-in, NPTF 45 = DIN16288G 1/2 A male 46 = 1/4-in, NPTF 240 = Auto Clave F-250-C 241 = Tri-Clamp 242 = Fractional Line Fit 243 = 1/8-in, NPTF 244 = VCR 245 = PMC 246 = Traditional RC 1/4 247 = Traditional RC 1/2 252 = Unknown 253 = Special
119	5	DRAIN.VENT.CFG	Drain/Vent Valve Material	RW	LK	0 = Carbon Steel 2 = 316 Stainless Steel 3 = Cast C-276 4 = Alloy 400 30 = Alloy C-276 251 = None 252 = Unknown 253 = Special
119	6	ORING.MATL.CFG	O-Ring Material	RW	LK	10 = PTFE 11 = Viton 12 = Buna-N 13 = Ethyl-Prop 36 = PTFE Glass 37 = PTFE Graphite 251 = None 252 = Unknown 253 = Special

Table 3-14. 4088B BSAP Signal Information

List	Index	BSAP signal	Name	Access type	Control bits	Description
119	7	REMOTE.SEAL.CFG	Remote Seal Type	RW	LK	2 = CTW 3 = EFW 4 = PFW 5 = RFW 6 = RTW 7 = SCW 8 = SSW 9 = High Temperature 10 = FFW 11 = UCW 12 = TSW 13 = NWSP 14 = SSAP 15 = SSHP 16 = TFS 251 = None 252 = Unknown 253 = Special
119	8	REMOTE.FILL.CFG	Remote Seal Fill Fluid	RW	LK	2 = Silicone Oil 3 = SYLTHERM 800 4 = Inert 5 = Glycerin H2O 6 = Prop Gly/H2O 7 = Neobee-M20 8 = SYLTHERM XLT 9 = Dioctyl phthalate 10 = D. C. 704 11 = Therminol 66 12 = D. C. 210H 13 = Distilled water 14 = D. C. 200 15 = D. C. 705 251 = None 252 = Unknown 253 = Special
119	9	REMOTE.ISO.CFG	Remote Seal Isolating Diaphragm Material	RW	LK	2 = 316 Stainless Steel 3 = Alloy C-276 4 = Alloy 400 5 = Tantalum 9 = Co-Cr-Ni 34 = PTFE Coated 316L SST 240 = Nickel 201 251 = None 252 = Unknown 253 = Special
119	10	NUMBER.SEAL.CFG	Number of Remote Seals	RW	LK	1 = One Seal 2 = Two Seals 250 = Not Used 251 = None 252 = Unknown 253 = Special
120	1	SENSOR.BLOCK.NUM	Sensor Module Serial Number	RO	MI	Sensor module serial number
120	2	SENSOR.TYPE.CODE	Sensor Module Type	RO	MI	2 = Absolute (AP) 6 = DP with AP High side Static pressure 7 = DP with GP High side Static pressure 12 = Gage Pressure (GP) 32 = Differential (DP) 253 = Custom
120	3	RTD.SENSOR.TYPE	Temperature Sensor Type	RW	MI	0 = 4-Wire RTD Sensor 1 = 3-Wire RTD Sensor
120	4	SENSOR.CONF.	Sensor Module Configuration	RO	MI	0 = Standard coplanar (C) 1 = Standard threaded (T) 2 = Level coplanar (L) 3 = Reference class coplanar (P) 4 = High temperature conventional (H) 252 = Unknown

Table 3-14. 4088B BSAP Signal Information

List	Index	BSAP signal	Name	Access type	Control bits	Description
120	5	XMT.TYPE.CFG	Device Model	RO	MI	9832 = 0x2668 hex 1st byte is manufacture id (RMT = 26 hex) 2nd byte is device type (68 hex)
120	6	HARDWARE.REV.	Hardware Revision	RO	MI	N/A
128	1	MASTER.RESET.	Master Reset	RW	LK	OFF = No action ON = Perform Reset Signal can be written to regardless of the state of the transmitter security switch.
129	1	RANGE.READ.DP	Differential Pressure Sensor Range	RO	MI	1 = 1 2 = 2 3 = 3 4 = 4 5 = 5 10 = A (Extended Range) 253 = Special
129	2	RANGE.READ.SP	Static Pressure Sensor Range	RO	MI	1 = 1 2 = 2 3 = 3 4 = 4 5 = 5 6 = 6 7 = 7 253 = Special
129	3	FACTORY.XMIT.CFG	Transmitter Manufacturer	RO	MI	38 - Rosemount
129	4	HARDWARE.REV.	Hardware Revision	RO	MI	N/A
130	1	DESCRIP.USER.CFG	Description	RW	LK	This field can hold numbers, symbols, and upper-case letters (16 characters)
130	2	MESSAGE.USER.CFG	Message	RW	LK	This field can hold numbers, symbols, and upper-case letters (32 characters)
139	1	FB_FW1.PROD.VAL	Software Revision	RO	None	N/A
140	1	SCROLL.LCDT.CFG	LCD Display Scroll Time	RW	LK	Value given in seconds
140	2	LCD_BIT.MASK.CFG	Display Options	RW	LK	Each bit can enable/disable a specific LCD screen: Bit 0 = Differential Pressure Bit 1 = Absolute Pressure Bit 2 = Process Temperature Bit 3 = Baud Rate Bit 4 = Gage Pressure Bit 5 = Sensor Module Temperature Bit 7 = Device Address Bit 8 = Parameter 1 Bit 9 = Parameter 2 Bit 10 = Parameter 3 Bit 11 = Parameter 4 Bit 12 = Parameter 5 Bit 13 = Parameter 6 Bit 16 = Variable 1 Bit 17 = Variable 2 Bit 18 = Variable 3
140	3	USERVAL.LABEL.1	User-Defined Parameter 1 Label	RW	LK	ISO-Latin-1 (10 characters)
140	4	USERVAL.PARAM.1	User-Defined Parameter 1 Value	RW	LK	User-defined
140	5	USERVAL.UOFM.1	User-Defined Parameter 1 Units	RW	LK	ISO-Latin-1 (5 characters)
140	6	USERVAL.LABEL.2	User-Defined Parameter 2 Label	RW	LK	ISO-Latin-1 (10 characters)
140	7	USERVAL.PARAM.2	User-Defined Parameter 2 Value	RW	LK	User-defined
140	8	USERVAL.UOFM.2	User-Defined Parameter 2 Units	RW	LK	ISO-Latin-1 (5 characters)

Table 3-14. 4088B BSAP Signal Information

List	Index	BSAP signal	Name	Access type	Control bits	Description
140	9	USERVAL.LABEL.3	User-Defined Parameter 3 Label	RW	LK	ISO-Latin-1 (10 characters)
140	10	USERVAL.PARAM.3	User-Defined Parameter 3 Value	RW	LK	User-defined
140	11	USERVAL.UOFM.3	User-Defined Parameter 3 Units	RW	LK	ISO-Latin-1 (5 characters)
140	12	USERVAL.LABEL.4	User-Defined Parameter 4 Label	RW	LK	ISO-Latin-1 (10 characters)
140	13	USERVAL.PARAM.4	User-Defined Parameter 4 Value	RW	LK	User-defined
140	14	USERVAL.UOFM.4	User-Defined Parameter 4 Units	RW	LK	ISO-Latin-1 (5 characters)
140	15	USERVAL.LABEL.5	User-Defined Parameter 5 Label	RW	LK	ISO-Latin-1 (10 characters)
140	16	USERVAL.PARAM.5	User-Defined Parameter 5 Value	RW	LK	User-defined
140	17	USERVAL.UOFM.5	User-Defined Parameter 5 Units	RW	LK	ISO-Latin-1 (5 characters)
140	18	USERVAL.LABEL.6	User-Defined Parameter 6 Label	RW	LK	ISO-Latin-1 (10 characters)
140	19	USERVAL.PARAM.6	User-Defined Parameter 6 Value	RW	LK	User-defined
140	20	USERVAL.UOFM.6	User-Defined Parameter 6 Units	RW	LK	ISO-Latin-1 (5 characters)
140	21	USERVAL.VAR.1	User-Defined Variable 1 Value	RW	LK	Signal can be written to regardless of the state of the transmitter security switch
140	22	USERVAL.TEXT.1	User-Defined Variable 1 Label	RW	LK	ISO-Latin-1 (10 characters)
140	23	USERVAL.VAR.2	User-Defined Variable 2 Value	RW	LK	Signal can be written to regardless of the state of the transmitter security switch
140	24	USERVAL.TEXT.2	User-Defined Variable 2 Label	RW	LK	ISO-Latin-1 (10 characters)
140	25	USERVAL.VAR.3	User-Defined Variable 3 Value	RW	LK	Signal can be written to regardless of the state of the transmitter security switch
140	26	USERVAL.TEXT.3	User-Defined Variable 3 Label	RW	LK	ISO-Latin-1 (10 characters)
140	27	USERVAL.UOFM.VAR1	User-Defined Variable 1 Units	RW	MI	ISO-Latin-1 (5 characters)
140	28	USERVAL.UOFM.VAR2	User-Defined Variable 2 Units	RW	MI	ISO-Latin-1 (5 characters)
140	29	USERVAL.UOFM.VAR3	User-Defined Variable 3 Units	RW	MI	ISO-Latin-1 (5 characters)
141	1	MODEL.NUM.1	Model Number 1	RW	LK	This field can hold numbers, symbols, and upper-case letters (32 characters)
141	2	MODEL.NUM.2	Model Number 2	RW	LK	
141	3	MODEL.NUM.3	Model Number 3	RW	LK	
141	4	MODEL.NUM.4	Model Number 4	RW	LK	
142	1	BOARD.SERIAL.NUM	Electronics Board Serial Number	RO	MI	Electronics board serial number
152	1	STATIC.ZERO.CAL	Static Pressure Lower Trim Point	RW	None	User-entered pressure during the 2-point SP zero trim In Static Pressure Units
152	2	STATIC.SPAN.CAL	Static Pressure Upper Trim	RW	None	User-entered pressure during 2-point SP span trim in Static Pressure Units
152	6	SP.CAL.ZERO	Legacy Calibration Static Pressure Lower Trim Point	RO	LK	User-entered zero value given in static pressure units

Table 3-14. 4088B BSAP Signal Information

List	Index	BSAP signal	Name	Access type	Control bits	Description
152	7	SP.CAL.SPAN	Legacy Calibration Static Pressure Upper Trim Point	RO	LK	User-entered span value given in static pressure units
153	1	TEMP.ZERO.CAL	Process Temperature Lower Trim Point	RW	LK	Value given in process temperature units
153	2	TEMP.SPAN.CAL	Process Temperature Upper Trim Point	RW	LK	Value given in process temperature units
153	6	USER.ZERO.CAL	Legacy Calibration Process Temperature Lower Trim Point	RO	LK	Value given in process temperature units
153	7	USER.SPAN.CAL	Legacy Calibration Process Temperature Upper Trim Point	RO	LK	Value given in process temperature units
160	1	DP.SIM.VAL	Simulate Differential Pressure	RW	LK	Value given in differential pressure units
160	2	DP.SIM.ENA	Enable Differential Pressure Simulation	RW	LK	OFF = Simulation Disabled ON = Simulation Enabled
160	3	SP.SIM.VAL	Simulate Static Pressure	RW	LK	Value given in static pressure units
160	4	SP.SIM.ENA	Enable Static Pressure Simulation	RW	LK	OFF = Simulation Disabled ON = Simulation Enabled
160	5	PT.SIM.VAL	Simulate Process Temperature	RW	LK	Value given in process temperature units
160	6	PT.SIM.ENA	Enable Process Temperature Simulation	RW	LK	OFF = Simulation Disabled ON = Simulation Enabled
160	7	ST.SIM.VAL	Simulate Sensor Module Temperature	RW	LK	Value given in sensor module temperature units
160	8	ST.SIM.ENA	Enable Sensor Module Temperature Simulation	RW	LK	OFF = Simulation Disabled ON = Simulation Enabled
161	1	DP.USRVAL.PNT1	Differential Pressure Verification Reference Point 1	RW	LK	Value given in differential pressure units
161	2	DP.READ.PNT1	Differential Pressure Device Reading 1	RO	MI	Value given in differential pressure units
161	3	DP.USRVAL.PNT2	Differential Pressure Verification Reference Point 2	RW	LK	Value given in differential pressure units
161	4	DP.READ.PNT2	Differential Pressure Device Reading 2	RO	MI	Value given in differential pressure units
161	5	DP.USRVAL.PNT3	Differential Pressure Verification Reference Point 3	RW	LK	Value given in differential pressure units
161	6	DP.READ.PNT3	Differential Pressure Device Reading 3	RO	MI	Value given in differential pressure units
161	7	DP.USRVAL.PNT4	Differential Pressure Verification Reference Point 4	RW	LK	Value given in differential pressure units
161	8	DP.READ.PNT4	Differential Pressure Device Reading 4	RO	MI	Value given in differential pressure units
161	9	DP.USRVAL.PNT5	Differential Pressure Verification Reference Point 5	RW	LK	Value given in differential pressure units
161	10	DP.READ.PNT5	Differential Pressure Device Reading 5	RO	MI	Value given in differential pressure units

Table 3-14. 4088B BSAP Signal Information

List	Index	BSAP signal	Name	Access type	Control bits	Description
161	11	DP.USRVAL.PNT6	Differential Pressure Verification Reference Point 6	RW	LK	Value given in differential pressure units
161	12	DP.READ.PNT6	Differential Pressure Device Reading 6	RO	MI	Value given in differential pressure units
162	1	SP.USRVAL.PNT1	Static Pressure Verification Reference Point 1	RW	LK	Value given in static pressure units
162	2	SP.READ.PNT1	Static Pressure Device Reading 1	RO	MI	Value given in static pressure units
162	3	SP.USRVAL.PNT2	Static Pressure Verification Reference Point 2	RW	LK	Value given in static pressure units
162	4	SP.READ.PNT2	Static Pressure Device Reading 2	RO	MI	Value given in static pressure units
162	5	SP.USRVAL.PNT3	Static Pressure Verification Reference Point 3	RW	LK	Value given in static pressure units
162	6	SP.READ.PNT3	Static Pressure Device Reading 3	RO	MI	Value given in static pressure units
162	7	SP.USRVAL.PNT4	Static Pressure Verification Reference Point 4	RW	LK	Value given in static pressure units
162	8	SP.READ.PNT4	Static Pressure Device Reading 4	RO	MI	Value given in static pressure units
162	9	SP.USRVAL.PNT5	Static Pressure Verification Reference Point 5	RW	LK	Value given in static pressure units
162	10	SP.READ.PNT5	Static Pressure Device Reading 5	RO	MI	Value given in static pressure units
162	11	SP.USRVAL.PNT6	Static Pressure Verification Reference Point 6	RW	LK	Value given in static pressure units
162	12	SP.READ.PNT6	Static Pressure Device Reading 6	RO	MI	Value given in static pressure units
163	1	PT.USRVAL.PNT1	Process Temperature Verification Reference Point 1	RW	LK	Value given in process temperature units
163	2	PT.READ.PNT1	Process Temperature Device Reading 1	RO	MI	Value given in process temperature units
163	3	PT.USRVAL.PNT2	Process Temperature Verification Reference Point 2	RW	LK	Value given in process temperature units
163	4	PT.READ.PNT2	Process Temperature Device Reading 2	RO	MI	Value given in process temperature units
163	5	PT.USRVAL.PNT3	Process Temperature Verification Reference Point 3	RW	LK	Value given in process temperature units
163	6	PT.READ.PNT3	Process Temperature Device Reading 3	RO	MI	Value given in process temperature units
163	7	PT.USRVAL.PNT4	Process Temperature Verification Reference Point 4	RW	LK	Value given in process temperature units
163	8	PT.READ.PNT4	Process Temperature Device Reading 4	RO	MI	Value given in process temperature units
163	9	PT.USRVAL.PNT5	Process Temperature Verification Reference Point 5	RW	LK	Value given in process temperature units
163	10	PT.READ.PNT5	Process Temperature Device Reading 5	RO	MI	Value given in process temperature units

Table 3-14. 4088B BSAP Signal Information

List	Index	BSAP signal	Name	Access type	Control bits	Description
163	11	PT.USRVAL.PNT6	Process Temperature Verification Reference Point 6	RW	LK	Value given in process temperature units
163	12	PT.READ.PNT6	Process Temperature Device Reading 6	RO	MI	Value given in process temperature units
170	1	DP.STATUS.	Differential Pressure Variable Status	RO	MI	Status Format: Measurement Quality - Limit Status 0 = Bad - Not Limited 16 = Bad - Low Limited 32 = Bad - High Limited 48 = Bad - Constant 64 = Poor Accuracy - Not Limited 80 = Poor Accuracy - Low Limited 96 = Poor Accuracy - High Limited 112 = Poor Accuracy - Constant 128 = Manual/Fixed - Not Limited 144 = Manual/Fixed - Low Limited 160 = Manual/Fixed - High Limited 176 = Manual/Fixed - Constant 192 = Good - Not Limited 208 = Good - Low Limited 224 = Good - High Limited 240 = Good - Constant
170	2	SP.STATUS.	Static Pressure Variable Status	RO	MI	
170	3	PT.STATUS.	Process Temperature Variable Status	RO	MI	
170	4	ST.STATUS.	Sensor Module Temperature Variable Status	RO	MI	
180	1	PROGREV..	N/A	N/A	MI	(3808 legacy support)
180	2	PRESSURE.SPAN.CAL	Pressure Upper Trim	RW	None	User-entered pressure during 2-point span trim in pressure units
180	3	STATIC.SPAN.CAL	Static Pressure Upper Trim	RW	None	User-entered pressure during 2-point SP span trim in static pressure units
180	4	PRESSURE.VAL.LRV	Pressure Lower Alert Limit	RW	LK	Value given in pressure units
180	5	PRESSURE.VAL.URV	Pressure Upper Alert Limit	RW	LK	Value given in pressure units
180	6	TEMP.VAL.LRV	Process Temperature Lower Alert Limit	RW	LK	Value given in process temperature units
180	7	TEMP.VAL.URV	Process Temperature Upper Alert Limit	RW	LK	Value given in process temperature units
180	8	PRESSURE.VAL.LRL	Pressure Lower Sensor Limit	RO	MI	Value given in pressure units
180	9	PRESSURE.VAL.URL	Pressure Upper Sensor Limit	RO	MI	Value given in pressure units
180	10	STATIC.VAL.LRL	Static Pressure Lower Sensor Limit (for Installed Sensor)	RO	MI	Value given in static pressure units
180	11	STATIC.VAL.URL	Static Pressure Upper Sensor Limit (for Installed Sensor)	RO	MI	Value given in static pressure units
180	12	STATIC.VAL.LRV	Static Pressure Lower Alert Limit	RW	LK	Value given in static pressure units
180	13	STATIC.VAL.URV	Static Pressure Upper Alert Limit	RW	LK	Value given in static pressure units
180	14	PRESSURE.TARGET.	Pressure Upper Trim Point	RW	LK	Value given in pressure units
180	15	STATIC.TARGET.	Static Pressure Upper Trim Point	RW	LK	Value given in static pressure units
180	16	SENSOR.BLOCK.NUM	Sensor Module Serial Number	RO	MI	Sensor module serial number
180	17	BOARD.SERIAL.NUM	Electronics Board Serial Number	RO	MI	Electronics board serial number
180	18	RTD.MIN.SPAN	Process Temperature Minimum Span	RO	MI	Value given in process temperature units
180	19	PT.VAL.URL	Process Temperature Upper Sensor Limit	RW	MI	Value given in process temperature units

Table 3-14. 4088B BSAP Signal Information

List	Index	BSAP signal	Name	Access type	Control bits	Description
180	20	PT.VAL.LRL	Process Temperature Lower Sensor Limit	RW	MI	Value given in process temperature units
180	21	DP.MIN.SPAN	Differential Pressure Minimum Span	RO	MI	Value given in differential pressure units
180	22	DP.CUTOFF.LOW	Differential Pressure Low DP Cutoff	RW	LK	Value given in differential pressure units
180	23	SP.MIN.SPAN	Static Pressure Minimum Span	RO	LK	Value given in static pressure units
180	24	SENSOR.TYPE.CODE	Sensor Module Type	RO	MI	2 = Absolute (AP) 6 = DP with AP High side Static pressure 7 = DP with GP High side Static pressure 12 = Gage Pressure (GP) 32 = Differential (DP) 253 = Custom
180	25	SENSOR.CONF.	Sensor Module Configuration	RO	MI	0 = Standard coplanar (C) 1 = Standard threaded (T) 2 = Level coplanar (L) 3 = Reference class coplanar (P) 4 = High temperature conventional (H) 252 = Unknown
180	26	ST.URL.	Sensor Module Temperature Upper Sensor Limit	RO	MI	Value given in sensor module temperature units
180	27	ST.LRL.	Sensor Module Temperature Lower Sensor Limit	RO	MI	Value given in sensor module temperature units
180	28	ST.URV.	Sensor Module Temperature Lower Alert Limit	RW	LK	Value given in sensor module temperature units
180	29	ST.LRV.	Sensor Module Temperature Upper Alert Limit	RW	LK	Value given in sensor module temperature units
180	30	STATUS.OPTNS.	Device Configuration	RO	MI	Sum of one or more of the following values: 1 = DP Sensor Installed 2 = AP Pressure Installed 4 = GP Pressure Installed 8 = PT Sensor Installed 16 = LCD Display Present 32 = 4088 Mode B 64 = N/A 128 = N/A For example, 33 = DP sensor installed (1) plus 4088 Mode B (32)
180	31	SP.LSL.	Static Pressure Lower Sensor Limit (Offset by Atmospheric Pressure)	RO	MI	Value given in static pressure units
180	32	SP.USL.	Static Pressure Upper Sensor Limit (Offset by Atmospheric Pressure)	RO	MI	Value given in static pressure units
180	33	ST.MIN.SPAN	Sensor Module Temperature Minimum Span	RO	MI	Value given in sensor module temperature units
180	34	XMT.SER.NUM	Transmitter Serial Number	RW	LK	N/A

Section 4 Configuration

Safety messages . . . . . page 65
Software installation and initial setup . . . . . page 66
Launching the configuration process . . . . . page 70
Basic device configuration . . . . . page 71
Detailed device configuration . . . . . page 73
Variable configuration . . . . . page 77
Menu trees and 475 Fast Keys . . . . . page 81
4088A configuration with legacy tool . . . . . page 95

The Rosemount Transmitter Interface Software (RTIS) is a PC-based application that performs configuration and maintenance functions for the Rosemount 4088 MultiVariable™ Transmitter.

Instructions for performing configuration functions are given for the RTIS. For convenience, Field Communicator Fast Key sequences are labeled “475 Fast Keys” for each software function below the appropriate headings.

4.1 Safety messages

Instructions and procedures in this section may require special precautions to ensure the safety of the personnel performing the operations. Please refer to the following safety messages before performing an operation.

⚠ WARNING

Explosions could result in death or serious injury.

- Do not remove the transmitter cover in explosive atmospheres when the circuit is live.
- Verify the operating atmosphere of the transmitter is consistent with the appropriate hazardous locations certifications.
- Both transmitter covers must be fully engaged to meet explosion-proof requirements.

Failure to follow these installation guidelines could result in death or serious injury.

- Make sure only qualified personnel perform the installation.

Electrical shock could cause death or serious injury.

- If the sensor is installed in a high-voltage environment and a fault or installation error occurs, high voltage may be present on the transmitter leads and terminals:
- Use extreme caution when making contact with the leads and terminals.

4.2 Software installation and initial setup

4.2.1 System requirements

The following are the minimum system requirements to install the RTIS:

- Microsoft® Windows™ 7 Operating System (32 or 64 bit)

Recommended hardware driver for USB modem option

- MACTek® VIATOR® Modem Driver (included)

4.2.2 RTIS part numbers

The Rosemount 4088 MultiVariable Transmitter is not shipped with RTIS; the RTIS can be ordered separately using the part numbers below.

RTIS CD Only: **04088-9000-0001**


RTIS CD with HART® USB Modem and Cables: **04088-9000-0002**

4.2.3 Installing the RTIS


Multiple DTMs™ are available on the RTIS, however the following FDT® frame and DTMs are required for this installation:

- RTIS
- Rosemount HART CommDTM (Communications driver)
- Rosemount 4088 Device DTM (4088 User interface Configuration application)

1. Right click the setup.exe file and select **Run as administrator**.

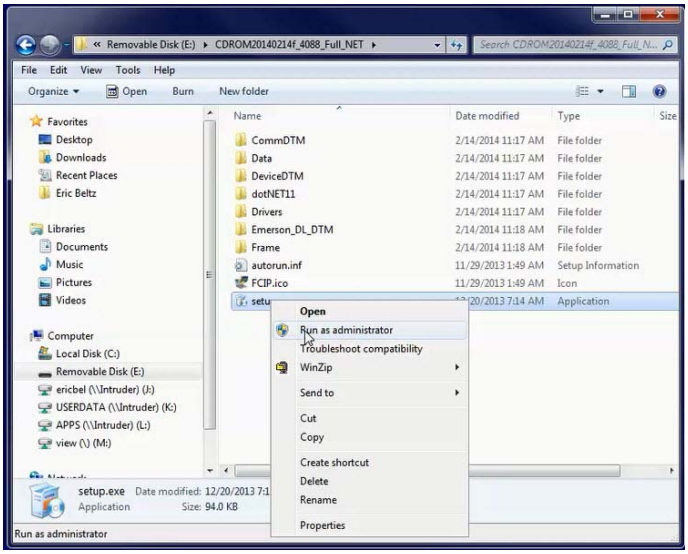

2. Follow the installation wizard. Select all desired DTMs (the first 3 are required).

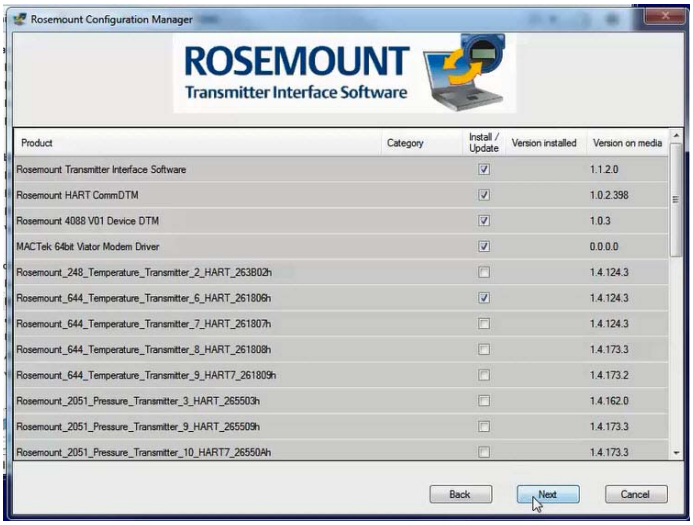

Note
The MACTek modem install will also be automatically selected to run. If the MACTek VIATOR Utility is already installed, this install will allow you to repair or update.
For each additional DTM selected, you will be prompted for individual installation options. Once installation has started, the next prompt would be for any optionally-selected HART Device DTMs.


3. Run a complete installation for the HART Modem driver and each additional selected DTM.

This completes the installation.


4.2.4 Getting started with RTIS

1. Ensure the modem is connected.


2. Launch RTIS from the desktop or *All Programs* menu option.

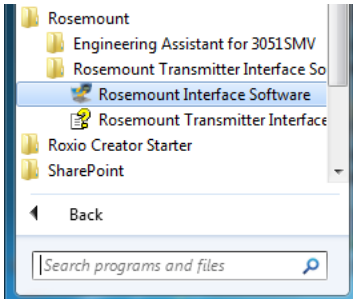


3. Right click **My Network**, and then select **Add...**

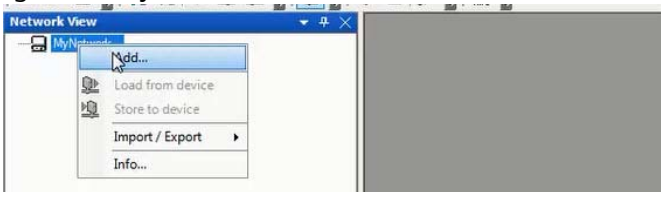

4. Select “Rosemount HART CommDTM” for Device Type and select **OK**.

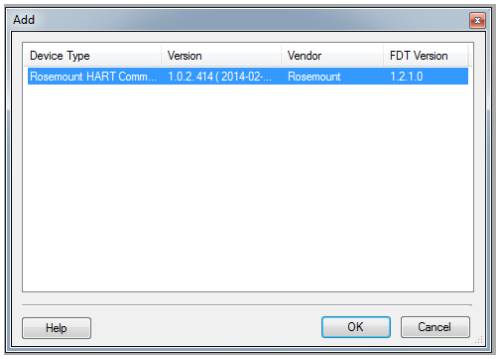


5. Under MyNetwork, right click **Rosemount HART CommDTM**, then select **Configuration**.

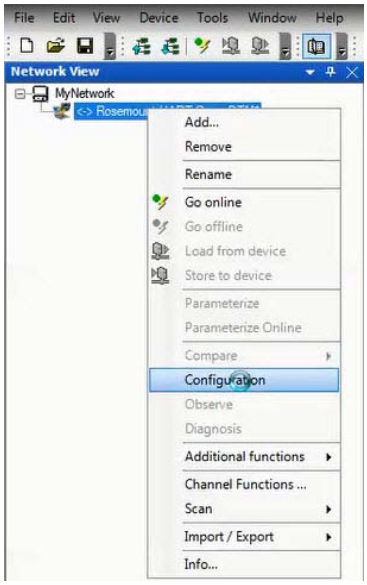

6. Select the correct COM Port.

7. Select the *Access Mode* dropdown and set to **Emulated**.

8. Select **Self Test** to check the connection.

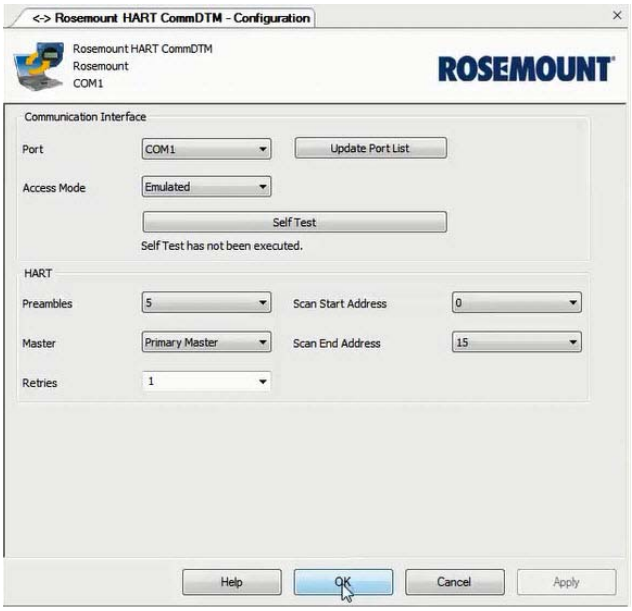


9. Select **OK**.

4.2.5 Connecting to a personal computer

Figure 4-1 shows how to connect a device to either a computer with the RTIS or a handheld communicator.

Figure 4-1. Connecting a Personal Computer to a Transmitter

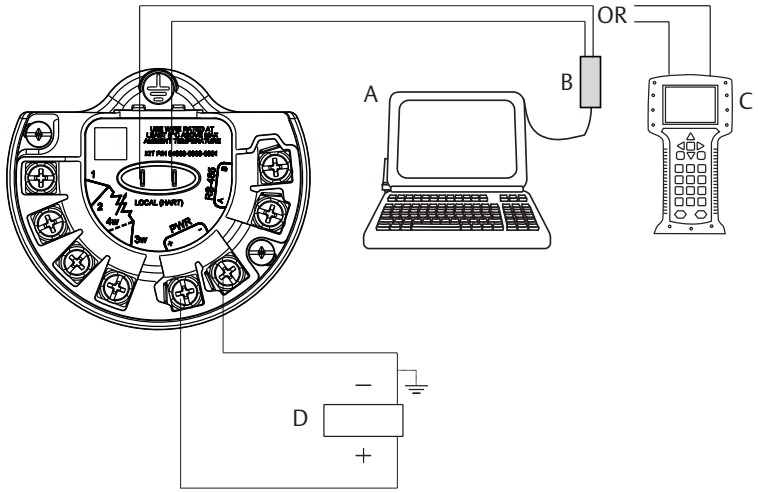

A. RTIS
B. HART Modem
C. Hand-held Communicator
D. User-provided power supply

1. Wire the device as detailed in Section 2: Installation.
2. Connect the MACTek HART Modem to the correct USB communications port on the PC as set up in "Getting started with RTIS" on page 67.
3. Remove the cover of the transmitter above the side marked "FIELD TERMINALS."
4. Connect the mini-grabber connectors to the "LOCAL (HART)" terminals.


⚠ WARNING

Explosions can cause death or serious injury. Do not remove the instrument cover in explosive atmospheres when the circuit is live.

4.3 Launching the configuration process


This section outlines how to configure the transmitter using the RTIS.

1. Right click Rosemount HART CommDTM, select **Scan**, then select **Create Network**.

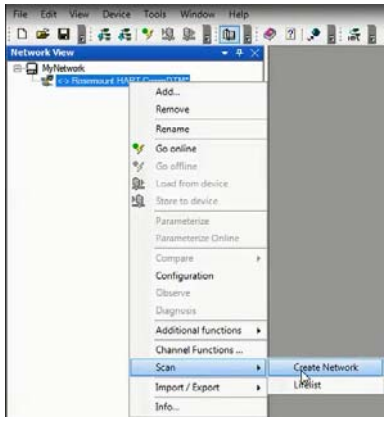


The DTM setup is complete.

2. Right click on the transmitter, then select **Go Online**. Your device is now online.

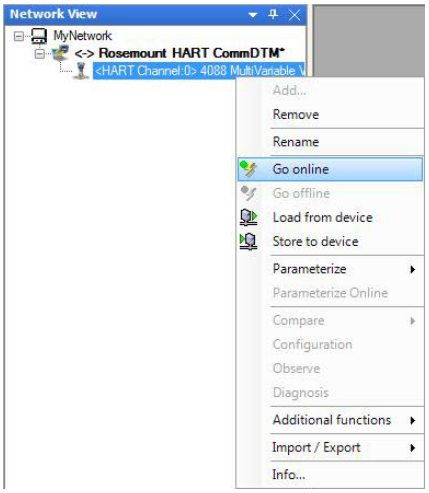


3. Right click on the transmitter again, select **Parameterize Online**, then select **Configure/Setup**.

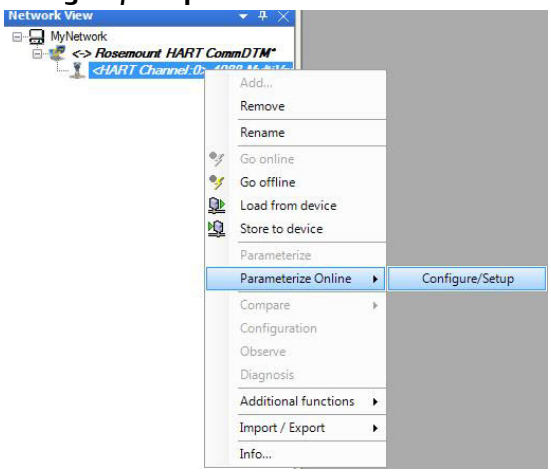

4.4 Basic device configuration

The Guided Setup section provides procedures to commission the transmitter. The **Basic Setup** button can be used to perform all of the required transmitter configuration. See Table 4-2 on page 94 for the complete list of 475 Fast Keys for basic setup.

Figure 4-2. Guided Setup Tab

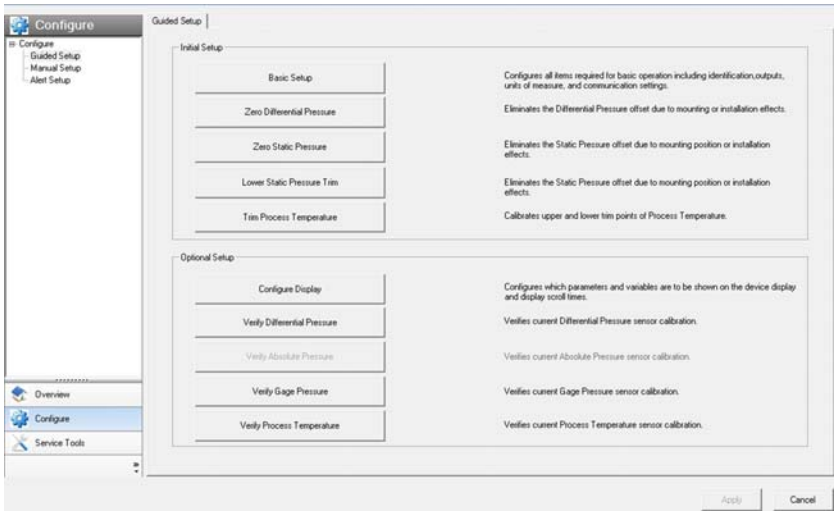

All screens in this section are shown for Measurement Type 1 (Differential Pressure, Static Pressure [Absolute], and Process Temperature) with LCD Display. 475 Fast Keys are given for a transmitter with Measurement Type 1. 475 Fast Keys and Screens for other MultiVariable Types and Measurement Types may vary.

Note
All screens in this section are shown using the RTIS. Edited information is not sent to the transmitter until the Send button is selected.

4.4.1 Units of measure and damping

475 Fast Keys	Units: 2,1,1,2 Damping: 2,1,1,3

The damping command changes the response time of the transmitter; higher values can smooth variations in output readings caused by rapid input changes. Determine the appropriate damping setting based on the necessary response time, signal stability, and other requirements. The damping command utilizes floating point configuration allowing the user to input any damping value between 0 and 60 seconds.

The units and damping for each process variable may be edited by selecting Manual Setup in the menu tree and then the appropriate tab as detailed below:

- Under the *Differential Pressure* tab, the Units and Damping for the Differential Pressure may be edited.
- Under the *Static Pressure* tab, the Units and Damping for the Static Pressure may be edited.

Note
Both absolute and gage pressure are available as variables. The type of transmitter ordered will determine which variable is measured and which is calculated based on the user defined atmospheric pressure. For more information on configuring the atmospheric pressure, see "Static pressure" on page 78. Since only one of the static pressures is actually being measured, there is a single damping setting for both variables which may be edited under the Static Pressure tab.

- Under the *Process Temperature* tab, the Units and Damping for the Process Temperature may be edited.
- Under the *Module Temperature* tab, the Units for the Module Temperature may be set. The sensor module temperature measurement is taken within the module, near the differential pressure and/or static pressure sensors and can be used to control heat tracing or diagnose device overheating.


4.4.2 Network

475 Fast Keys	2,2,6,1

Device address

In the *Network* tab, the *Device Address* field can be used to set the device's address under the Modbus® Configuration heading.

Figure 4-3. Network Tab

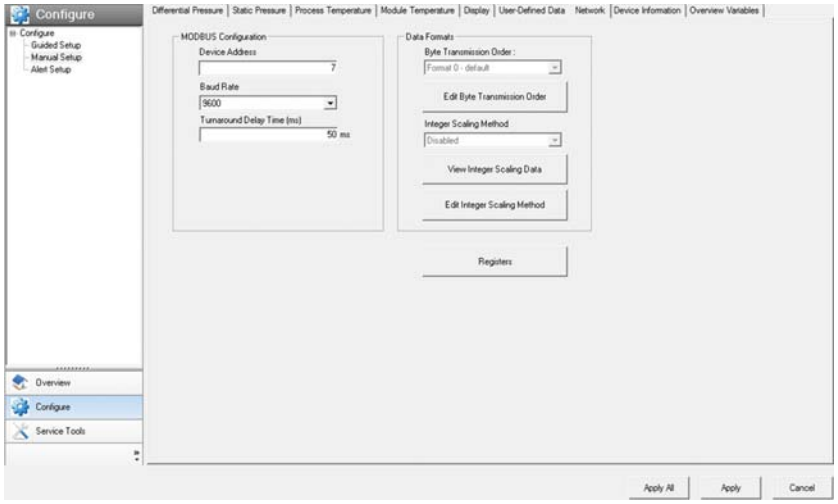

Baud rates

The baud rate is user selectable under the *Modbus Configuration* heading.

For default and available baud rates, see "Baud rate (software configurable)" on page 25.

Turn around delay

The *Turnaround Delay Time (ms)* field can be used to configure the device's turnaround delay time. For more information, reference "Communications" on page 30.

4.5 Detailed device configuration


4.5.1 Display

475 Fast Keys	2,2,5

The LCD display features a four-line display. The first line of five characters displays the output description, the second line of seven digits displays the actual value, and the third line of six characters displays engineering units. The fourth line displays "Error" when there is a problem detected within the transmitter. The LCD display can also display diagnostic messages. These diagnostic messages are listed in "Alarms and conditions" on page 85.

The *Display* tab allows the user to configure which variables will be shown on the LCD display. Click the check box next to each variable to select a variable for display. The transmitter will scroll through the selected variables, showing each for three seconds as a default setting.

Figure 4-4. Display Tab

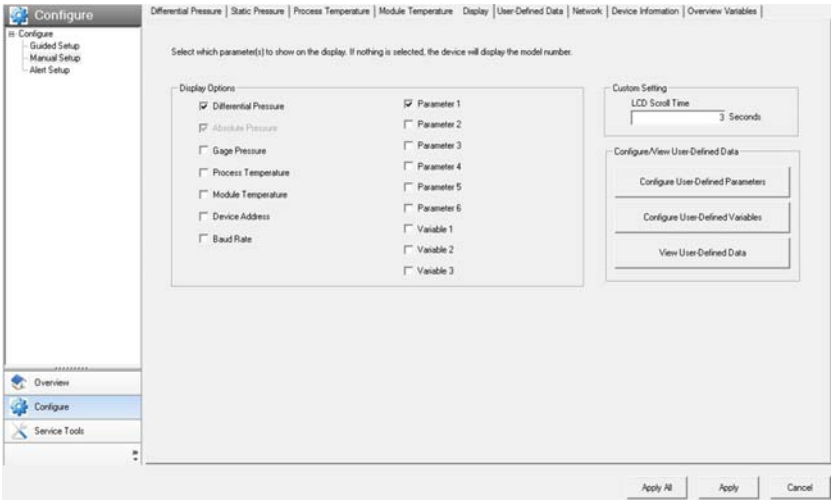

The *Display* tab includes three types of display options (information that appears on the LCD display) including Device Variables, User-Defined Parameters, or User-Defined Variables.


Device variables

The Device Variables include Differential Pressure, Absolute Temperature, Gage Pressure, Process Temperature, Module Temperature, Device Address or Baud Rate. These display variables can be selected or deselected on the left column of the Display Options heading.

User-defined parameters

The User-Defined Parameters fields are for pieces of information the device can store for reference. The device will not modify or update these parameters but they can be written by the user or a host system to be displayed on the LCD display and include Beta Ratio, Pipe Schedule, or Orifice Bore. If the device loses power at any point during operation, these values are stored in memory and will not be lost.

In order to configure User-Defined Parameters, select *Configure User-Defined Parameters*. A screen will appear as shown below.

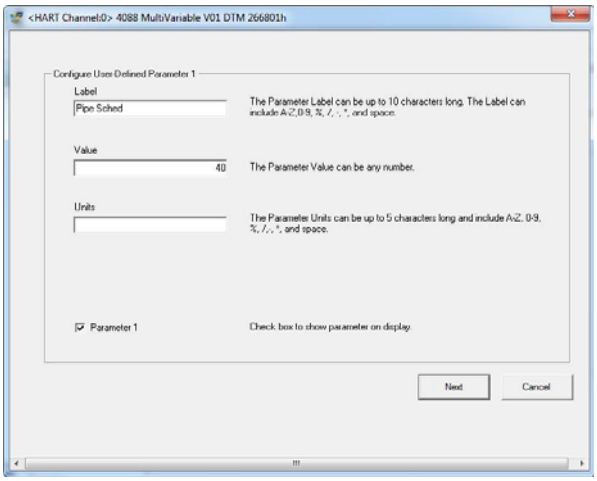


Each parameter can be given a label, value and unit to be stored inside the device.

User-defined variables

Note
Only the value of the user-defined variables should be written on a periodic basis. Regular writes to the other parameters may cause the device memory to fail.

The *User-Defined Variable* fields are for pieces of information that the device can store for a live reference of the application status or production levels, via Modbus. The device itself will not modify or update these variables; rather this is intended to be a live value sent to the device from a host, such as a flow computer or Remote Terminal Unit (RTU). This information can then be displayed on the device's LCD display and include variables such as Last 24-Hours of Gas Volume or Instantaneous Flow Rate.

To configure User-Defined Variables, select *Configure User-Defined Variables*. A screen will appear as shown below.

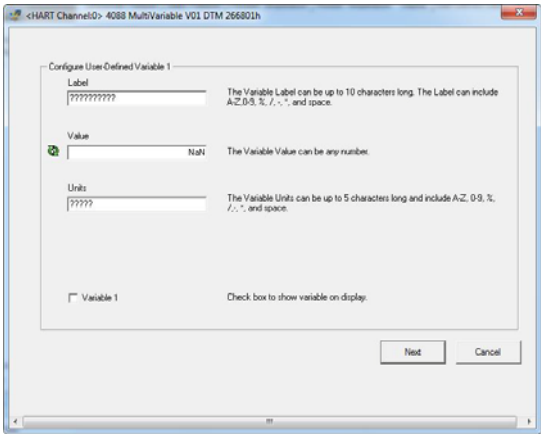

Similar to the *User-Defined Parameters* screen, you can input a label and unit for each variable, however the value will be written by the flow computer or host. The user must program the flow computer or host separately to write the value to the device. If the device loses power at any point during operation, the value will be lost, but the Label and Units will not be lost.

Note
If the transmitter is ordered without an LCD display, the User-Defined Parameters and User-Defined Variables are still available but are configured through the *User-Defined Data* tab in Manual Setup rather than accessing them through the *Display* tab.

LCD display scroll time


The LCD display scroll time controls the amount of time each variable is displayed on the LCD display.

4.5.2 Device information

475 Fast Keys	2,2,7

The *Device Information* tab displays the device identification information on one screen including tags, model numbers and assembly information.

Figure 4-5. Device Information Tab

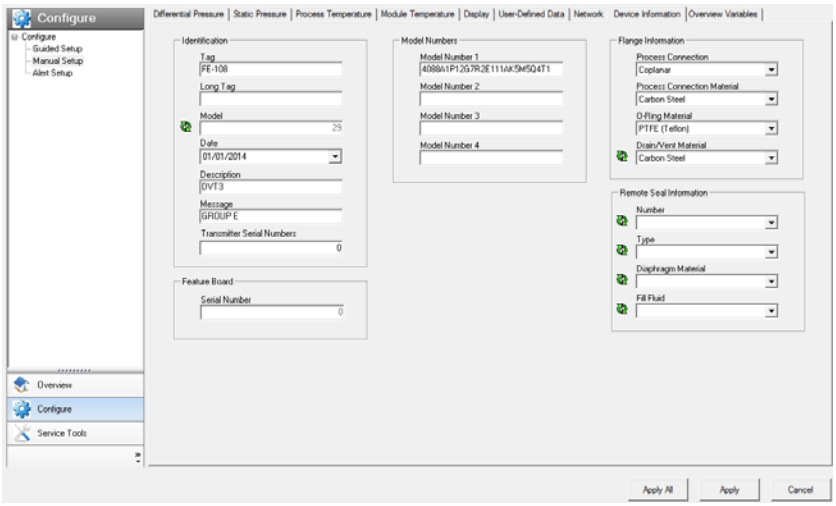

4.5.3 Overview variables

475 Fast Keys	2,2,8

The *Overview Variables* tab allows the user to set which variables are displayed on the RTIS Overview screen.

Figure 4-6. Overview Variables Tab




4.5.4 Alert setup

475 Fast Keys	2,3

The *Alert Configuration* tab is found under the *Alert Setup* menu of the device's configuration menu. From this tab, the user can configure upper and lower alert levels for each of the measured variables. This includes the Differential Pressure, Static Pressure (Absolute or Gage), Module Temperature, or Process Temperature.

Figure 4-7. Alert Configuration Tab

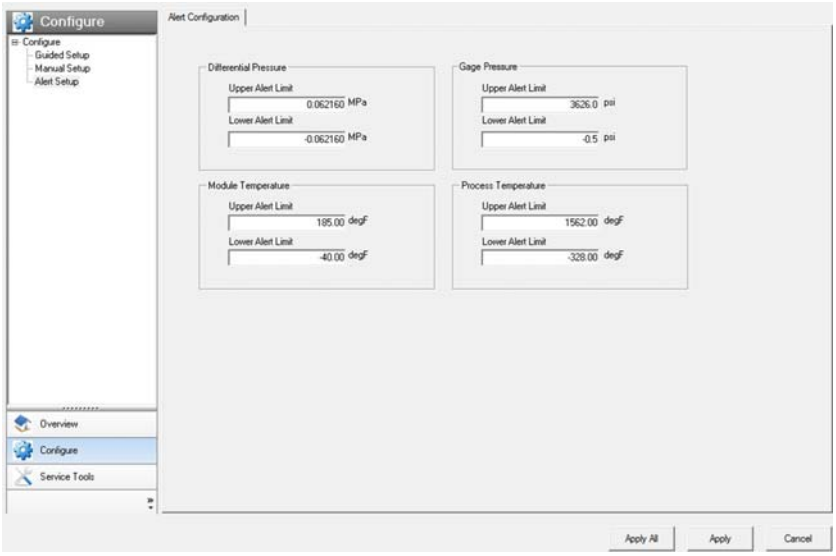


4.6 Variable configuration

4.6.1 Differential pressure

475 Fast Keys	2,2,1

Note
For differential pressure sensor calibration, see page 74.

Figure 4-8. Differential Pressure Tab

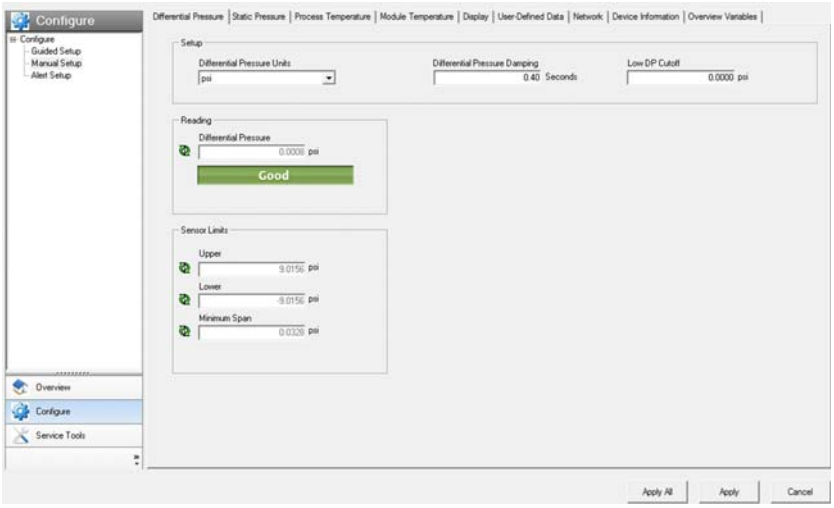


1. Under the *Setup* heading, edit the Units, Damping, and Low DP Cutoff as needed.
2. Under the *Reading* heading, view the Differential Pressure and status.
3. Under the *Sensor Limits* heading, view the Upper, Lower, and Minimum Span.

4.6.2 Static pressure

475 Fast Keys	2,2,2

Note
For static pressure sensor calibration, see page 77.

Figure 4-9. Static Pressure Tab

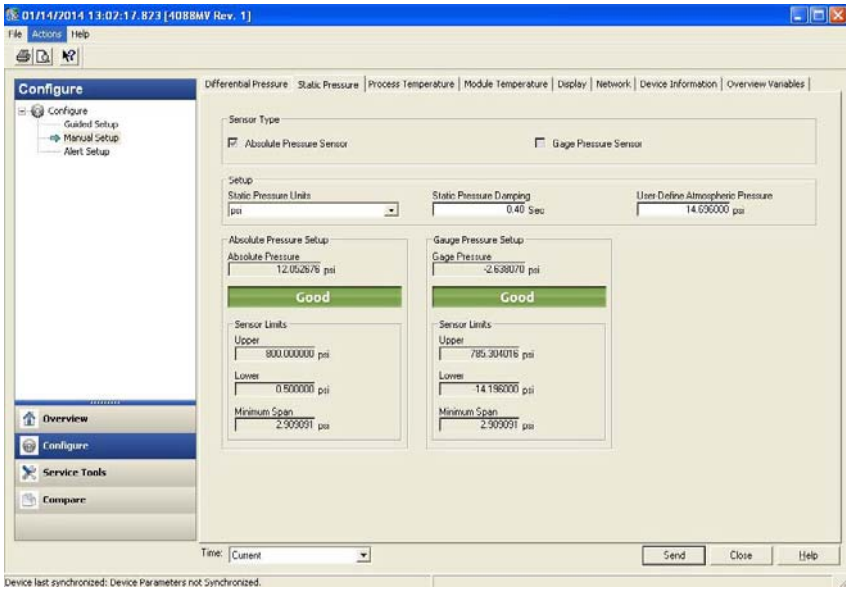


1. Under the *Sensor Type* heading, view whether the sensor is an Absolute Pressure Sensor or a Gage Pressure Sensor.
2. Under the *Setup* heading for Static Pressure, edit the Units, Damping, and User-Defined Atmospheric Pressure as needed.
3. Under the *Absolute Pressure* Setup and *Gage Pressure* Setup heading, view the Pressure, Status, Upper, Lower, and Minimum Span for both Absolute and Gage Pressure respectively.

4.6.3 Process temperature

475 Fast Keys	2,2,3

Note
For process temperature sensor calibration, see page 78.

Figure 4-10. Process Temperature Tab

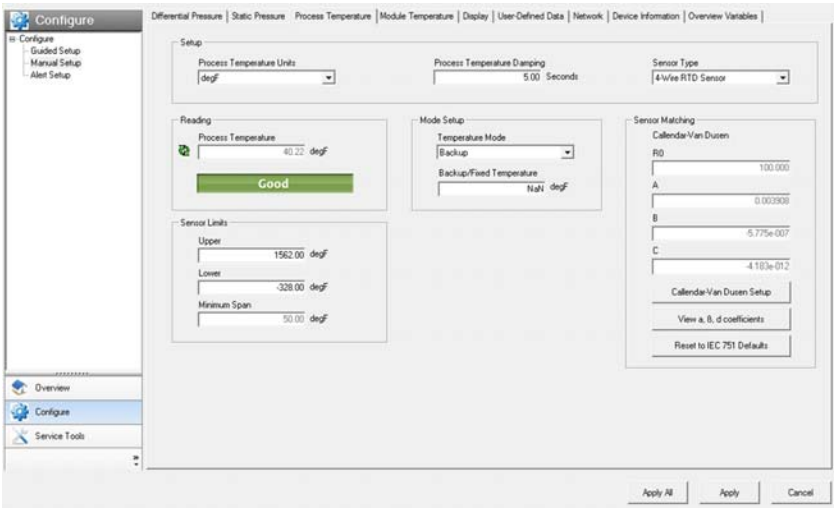

1. Under the *Setup* heading for Process Temperature, edit the Units, Damping, and Sensor Type as needed.

Note
The Rosemount 4088 accepts either a 3-wire or 4-wire RTD sensor, which can be selected under Sensor Type. Ensure the type of sensor being used is selected or an RTD Sensor Type Mismatch will occur. For more information about wiring the RTD, see "Install optional process temperature input (Pt 100 RTD Sensor)" on page 15.

2. Under the *Reading* heading, view the Process Temperature and status.

3. Select the *Temperature Mode* under the *Mode Setup* heading. See Table 4-1 for mode types and descriptions.

Table 4-1. Temperature Modes

Temperature mode	Description
Normal	The transmitter will only use the actual measured Process Temperature value. If the temperature sensor fails, the transmitter process temperature will be NAN (not a number).
Backup	The transmitter will use the actual measured Process Temperature value. If the temperature sensor fails, the transmitter will use the value shown in the Fixed/Backup Temperature field.
Fixed	The transmitter will always use the temperature value shown in the Fixed/Backup Temperature field.

The Rosemount 4088 accepts Callendar-Van Dusen constants from a calibrated RTD schedule and generates a special custom curve to match that specific sensor resistance vs. temperature performance. Matching the specific sensor curve with the transmitter configuration enhances the temperature measurement accuracy.

4. Under the *Sensor Matching* heading, view the Callendar-Van Dusen constants R0, A, B, and C. If the Callendar-Van Dusen constants are known for the user's specific Pt 100 RTD sensor, the constants R0, A, B, and C may be edited by clicking on the Callendar-Van Dusen Setup button and following the on-screen prompts.

The user may also view the α , β , and d coefficients by selecting the **View Alpha, Beta, Delta** button. The constants R0, α , β , and d may be edited by clicking on the Callendar-Van Dusen Setup button and following the on-screen prompts. To reset the transmitter to the IEC 751 Defaults, select the Reset to IEC 751 Defaults button.


5. Under the *Process Temperature Sensor Limits* heading, view and edit the Upper and Lower Sensor Limits. Process Temperature Sensor Limits allow for early detection of RTD failures or abnormal process conditions.

4.6.4 Module temperature

475 Fast Keys	2,2,4

The sensor module temperature variable is the measured temperature of the sensors and electronics within the sensor module assembly. The module temperature value can be used to control heat tracing or diagnose device overheating.

Figure 4-11. Module Temperature Tab

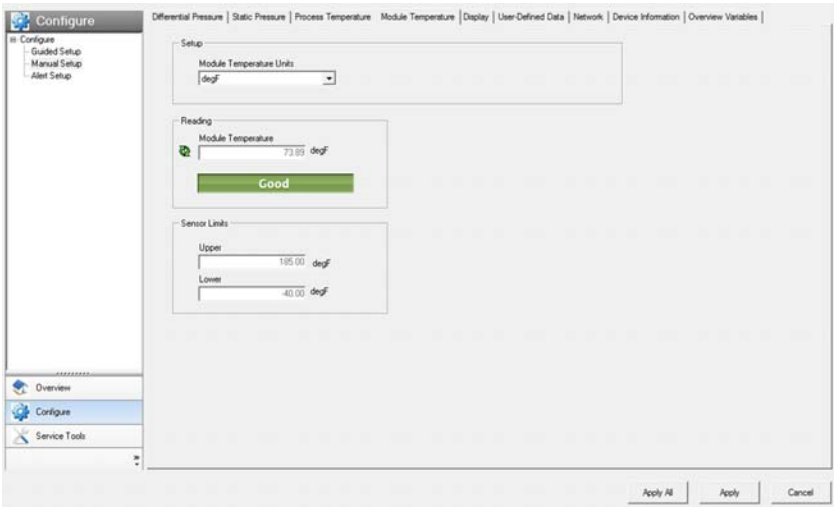

1. Under the *Setup* heading, edit the Units as needed.
2. Under the *Reading* heading, view the Module Temperature and status.
3. After the *Sensor Limits* heading, view the Upper and Lower Module Temperature Limits.

4.7 Menu trees and 475 Fast Keys

Based on the configuration ordered, some measurements (i.e. static pressure, process temperature) may not be available. Available measurements are determined by the MultiVariable Type and Measurement Type codes ordered. See "Ordering information" on page 111 for more information.


The menu trees and 475 Fast Keys in this section are shown for the following model code: Measurement Type 1 [Differential Pressure, Static Pressure (Absolute), Process Temperature] with LCD Display.

The menu trees and 475 Fast Keys for other model codes will vary.

4.7.1 4088A Menu tree

Overview

Figure 4-12. Overview

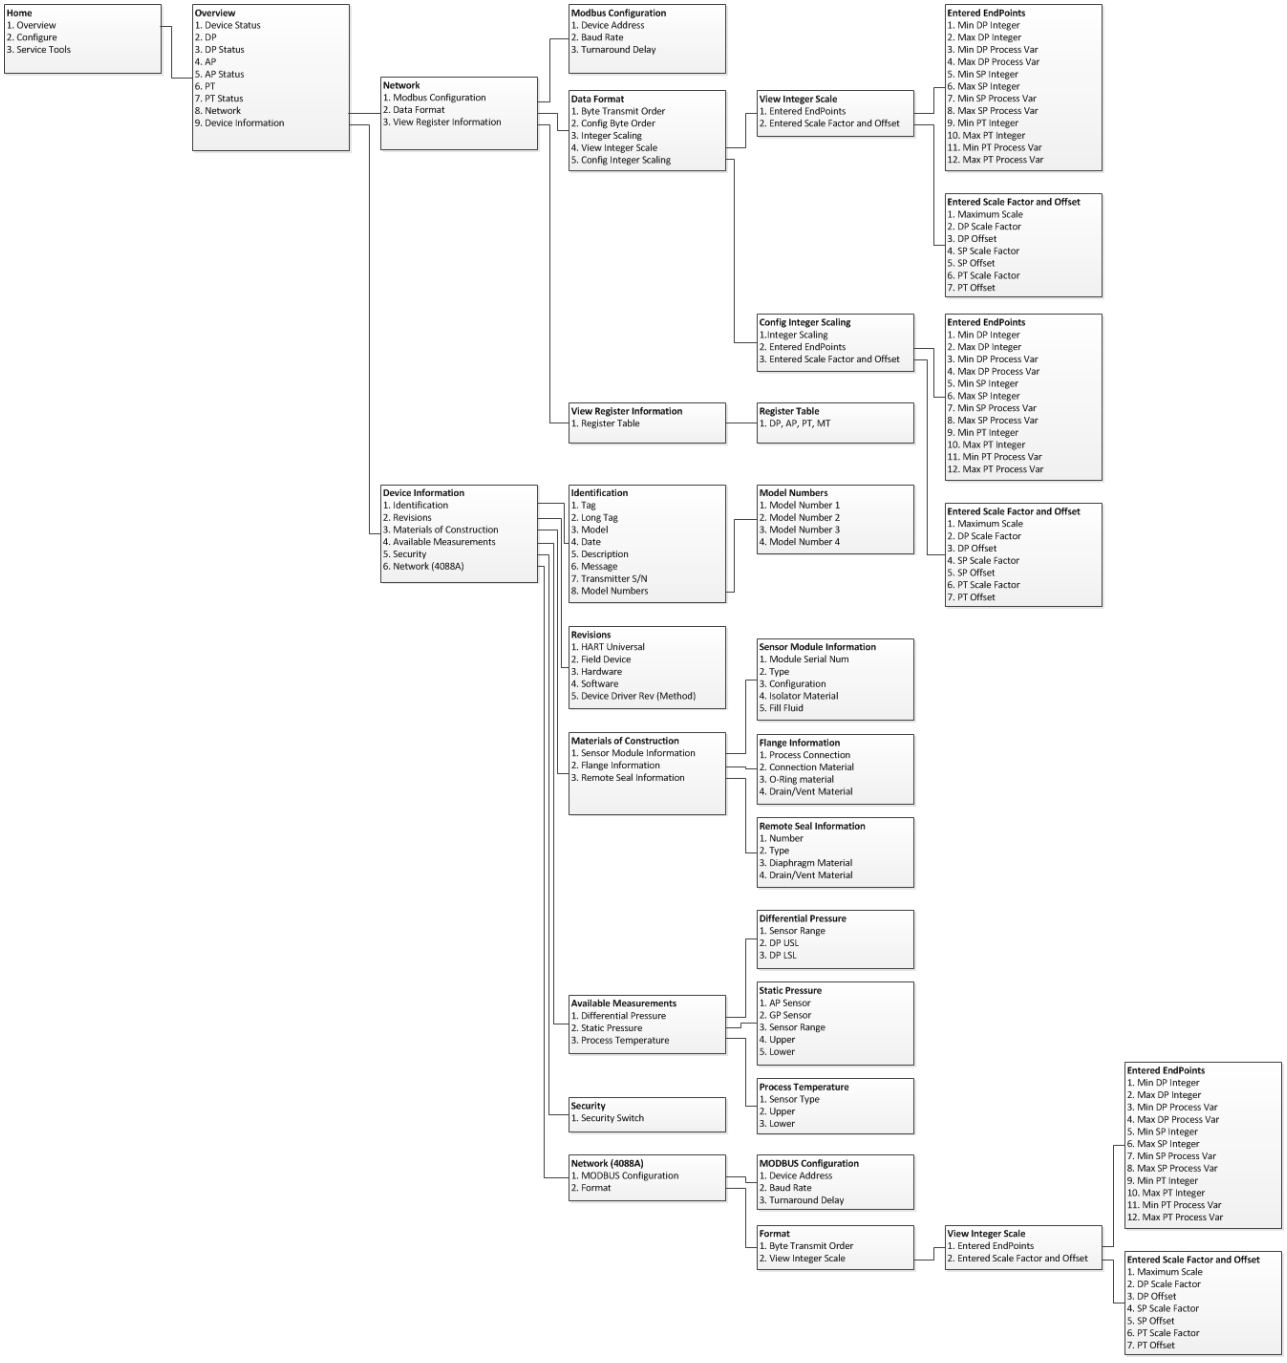

Configure

Figure 4-13. Configure – Guided Setup

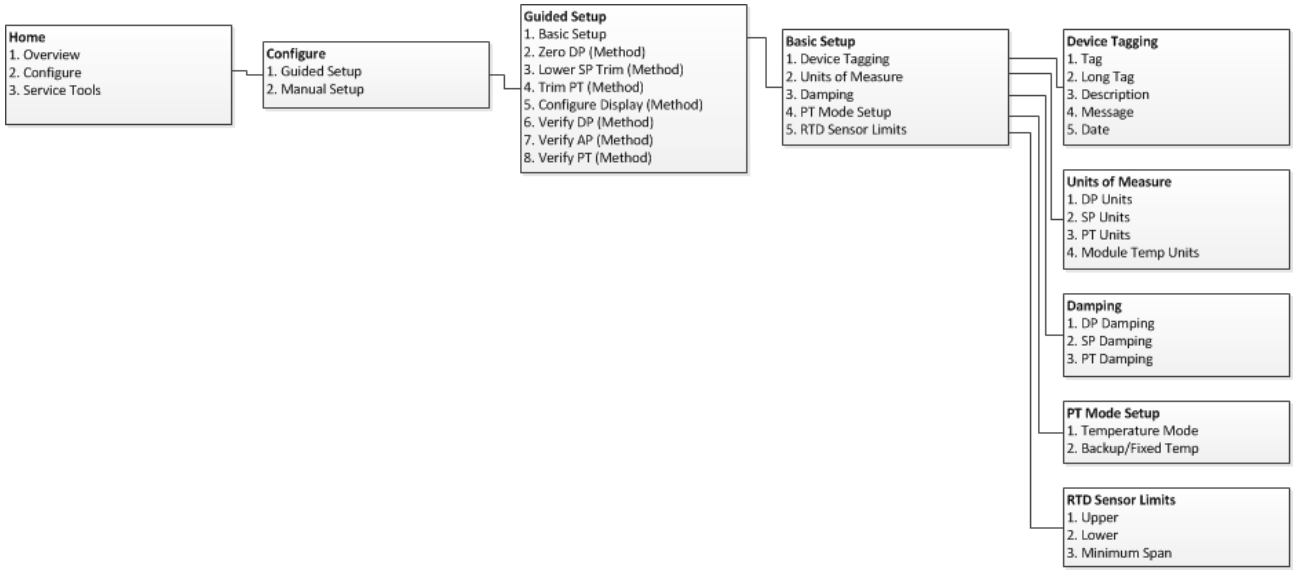


Figure 4-14. Configure – Manual Setup


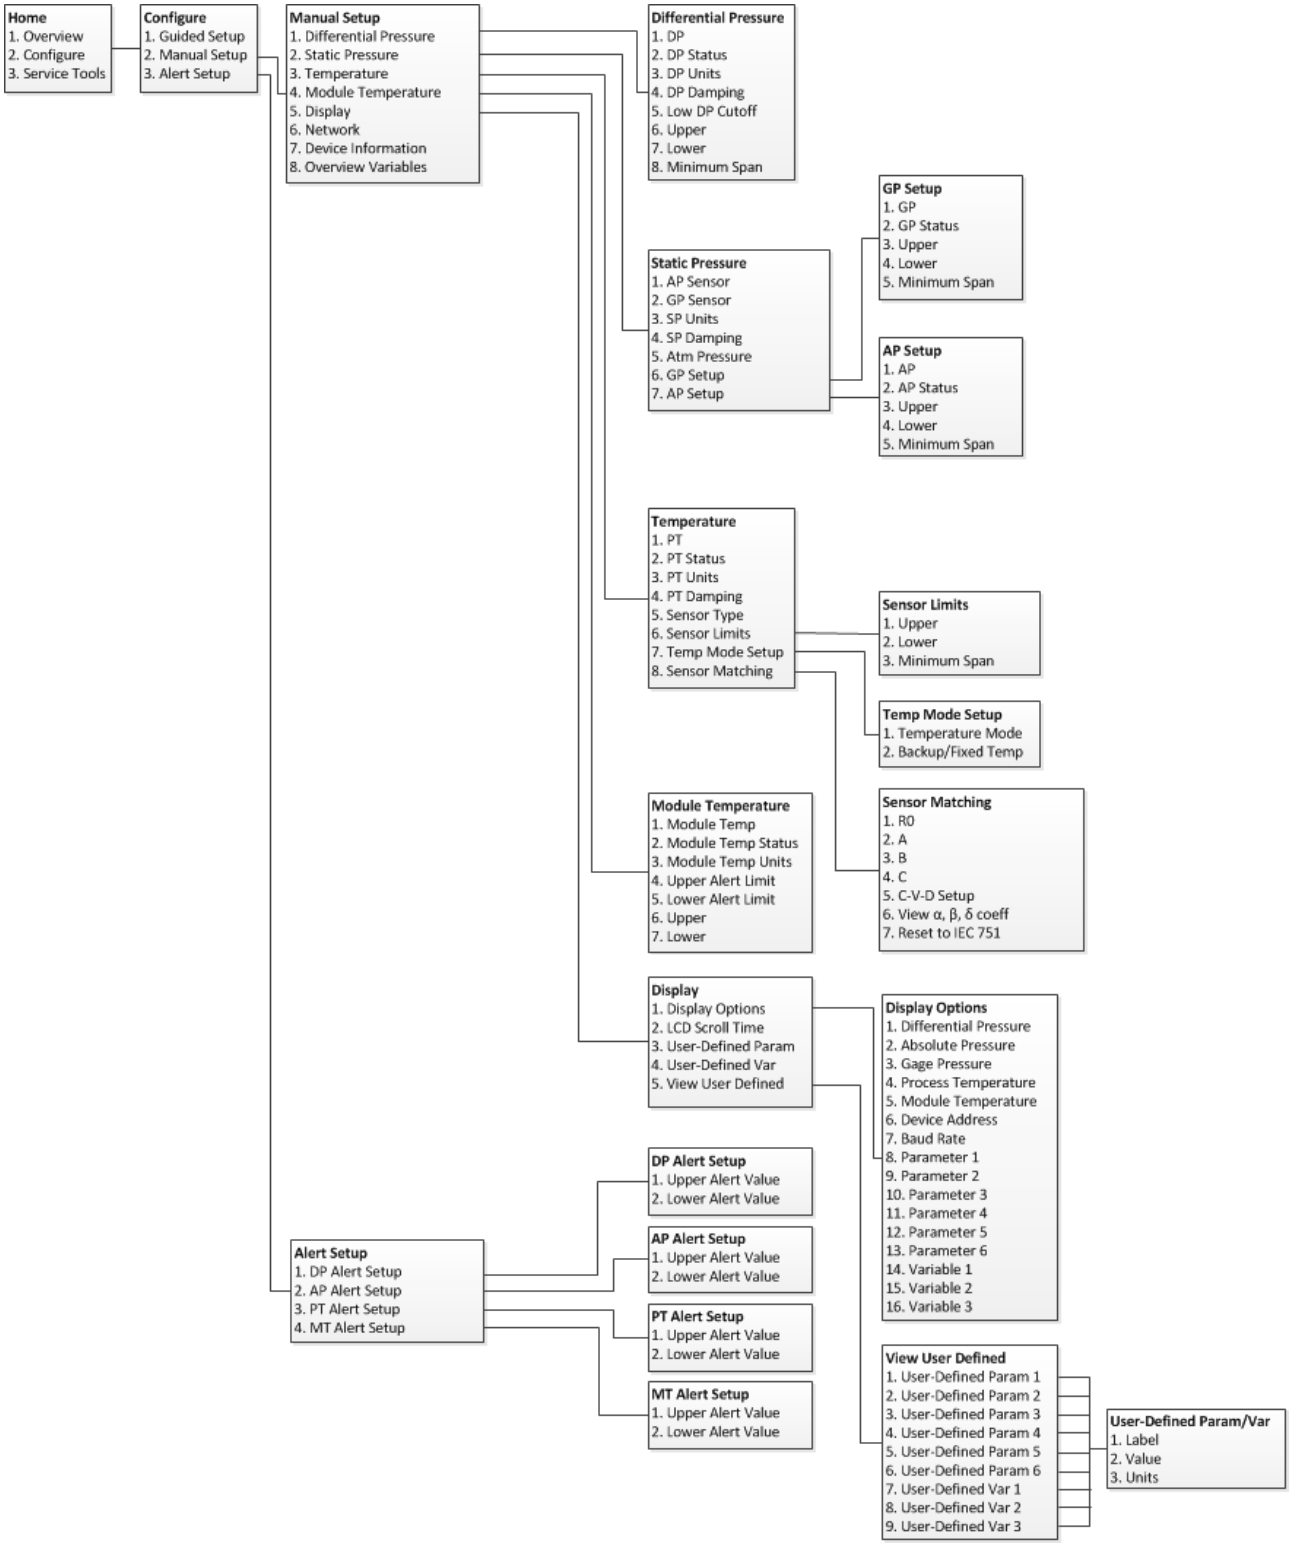


Figure 4-15. Configure – Manual Setup (continued)

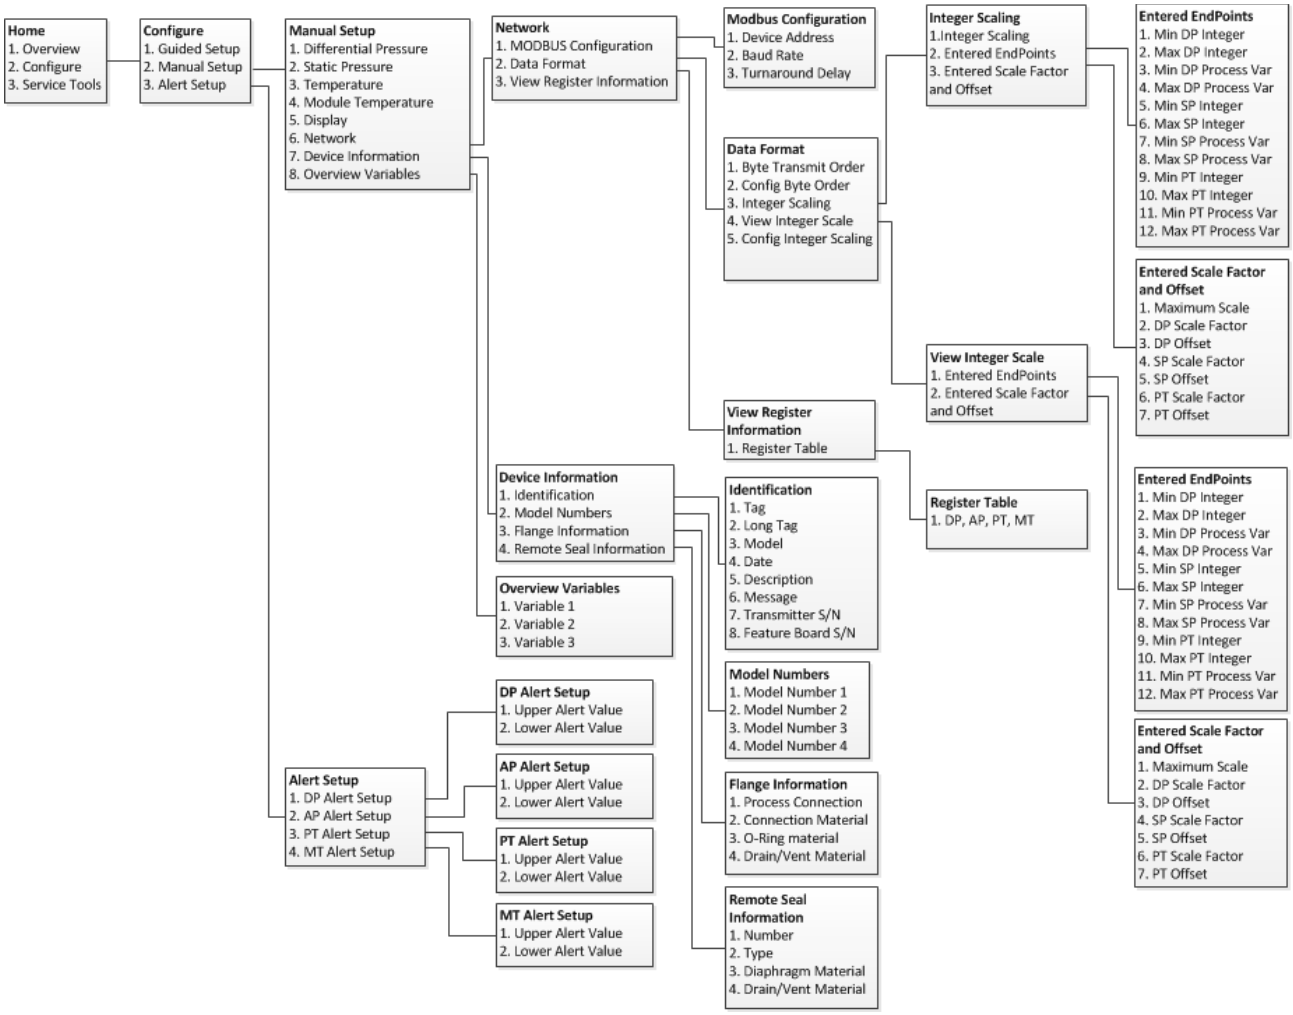

Service Tools

Figure 4-16. Service Tools


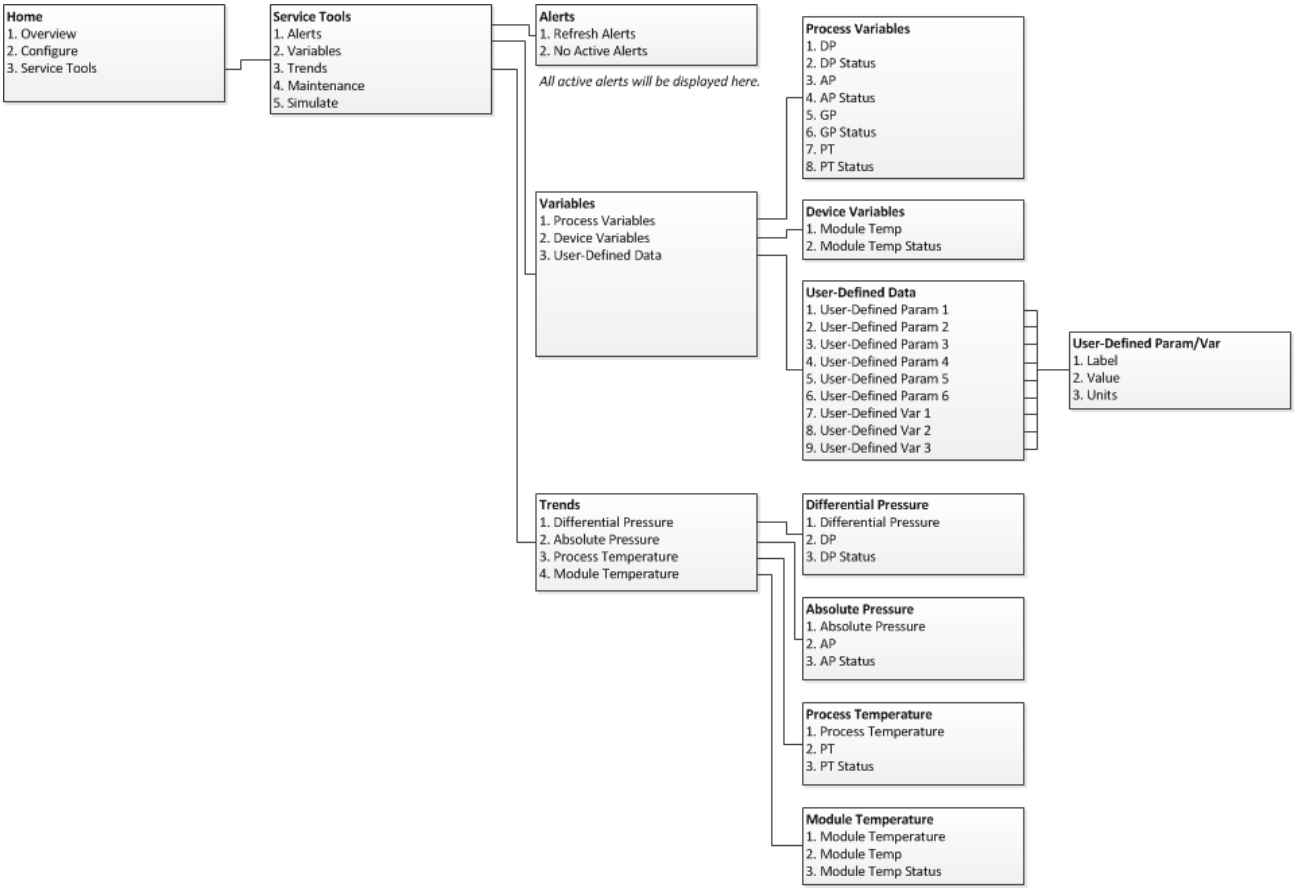



Figure 4-17. Service Tools (continued)

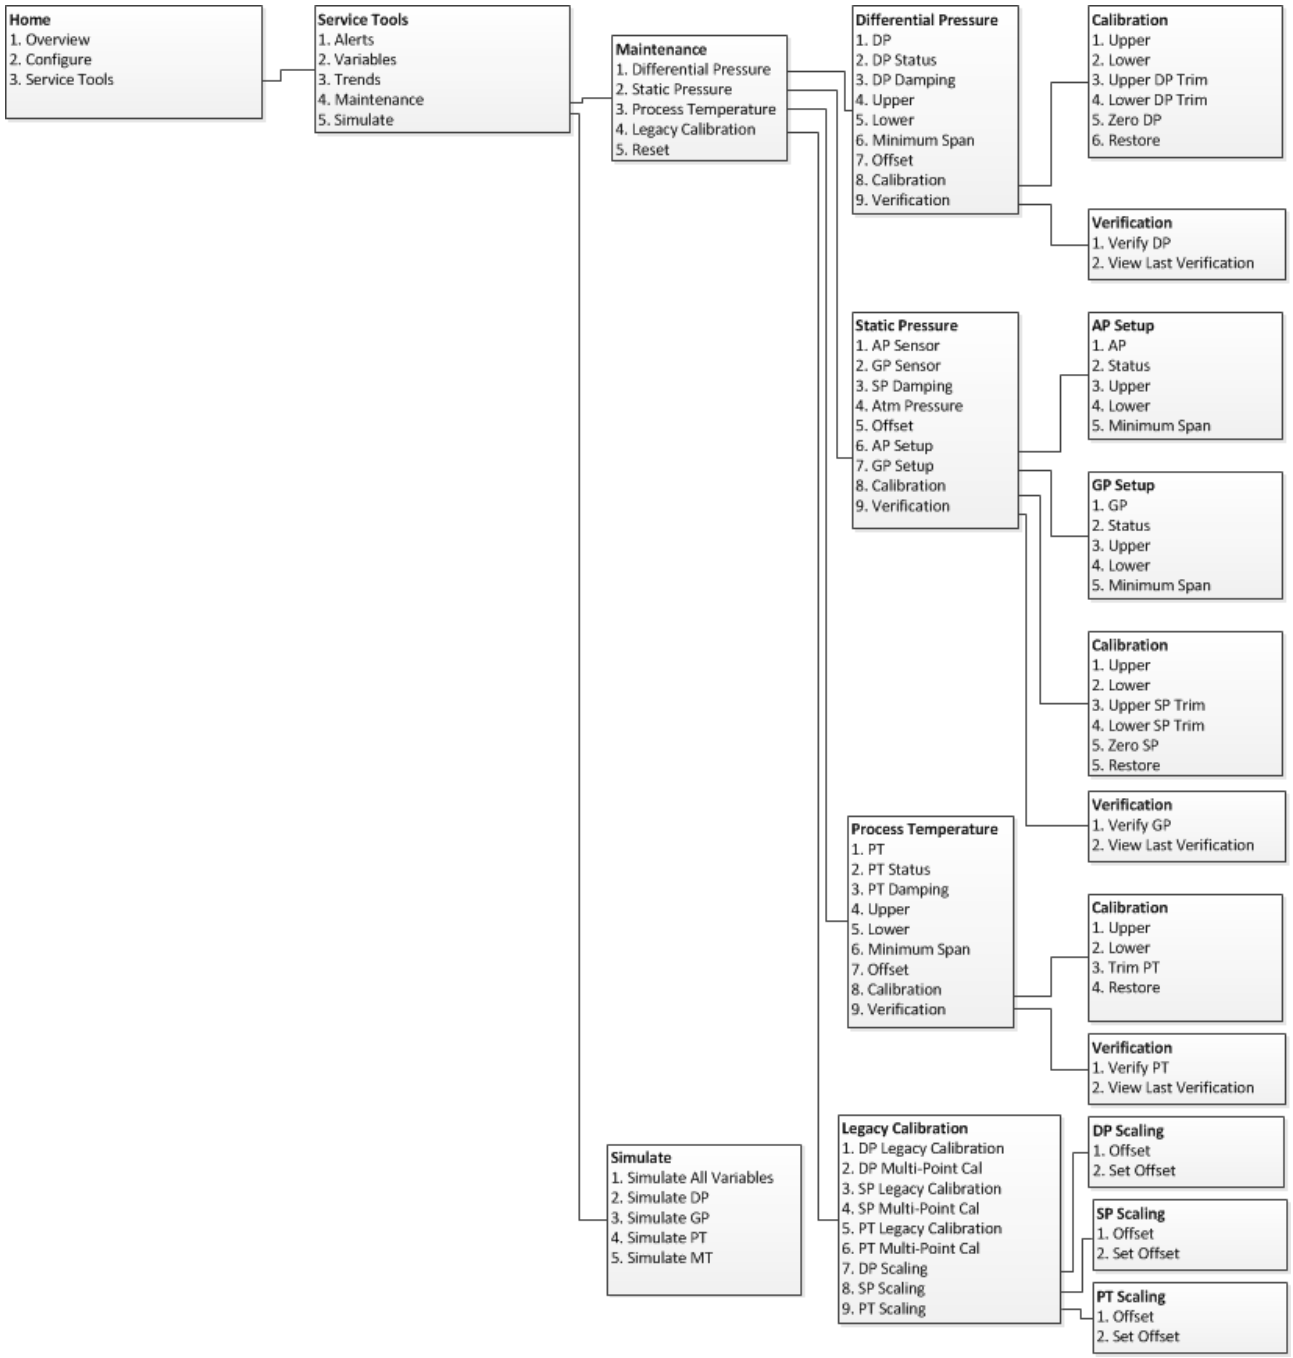

4.7.2 4088B Menu tree

Overview

Figure 4-18. Overview

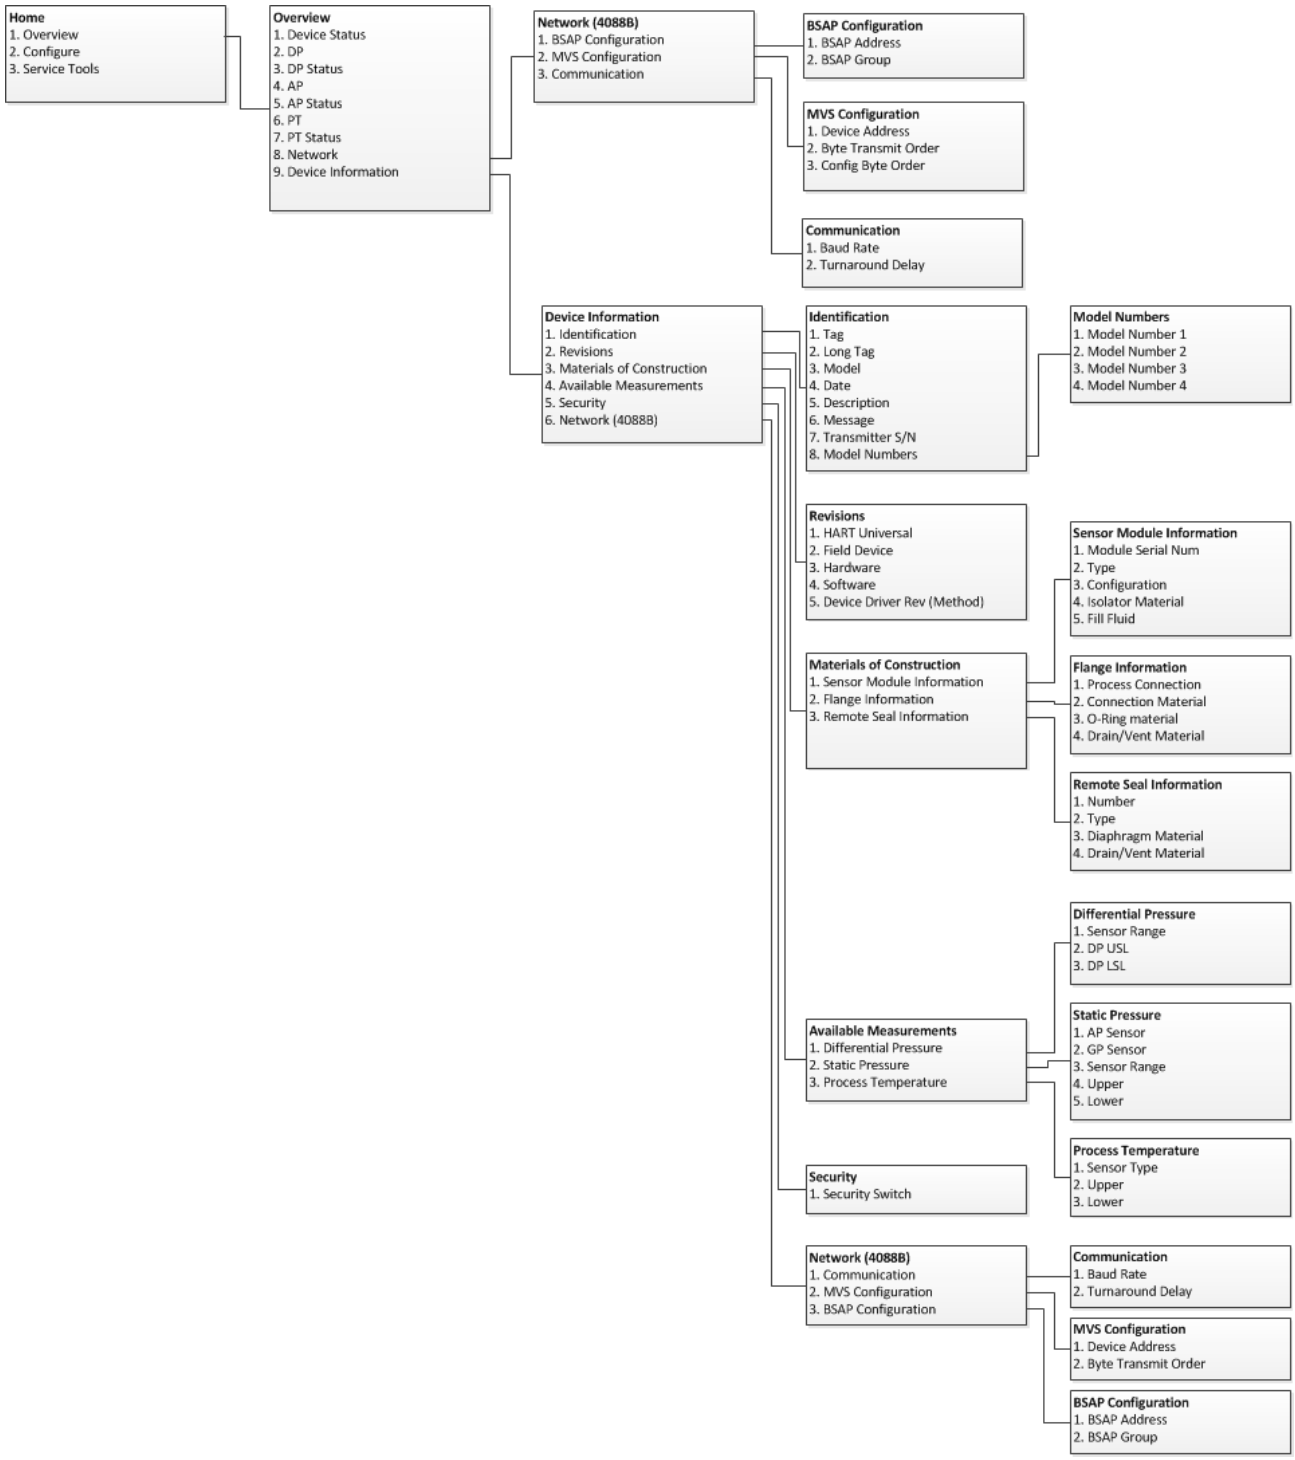

Configure

Figure 4-19. Configure – Guided Setup

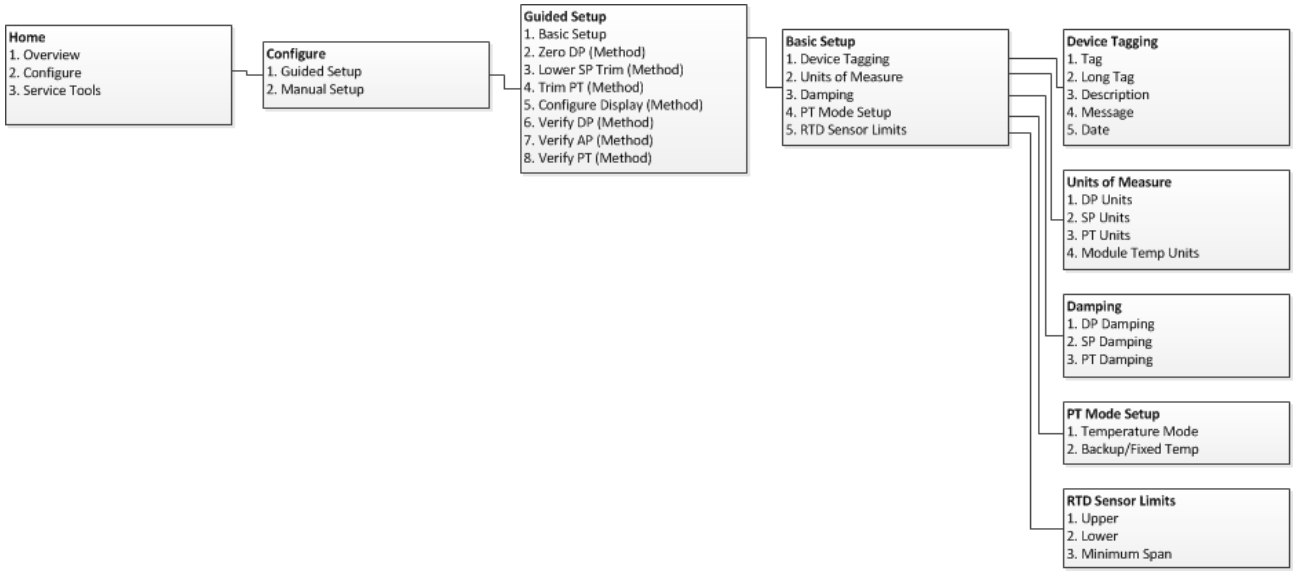


Figure 4-20. Configure – Manual Setup


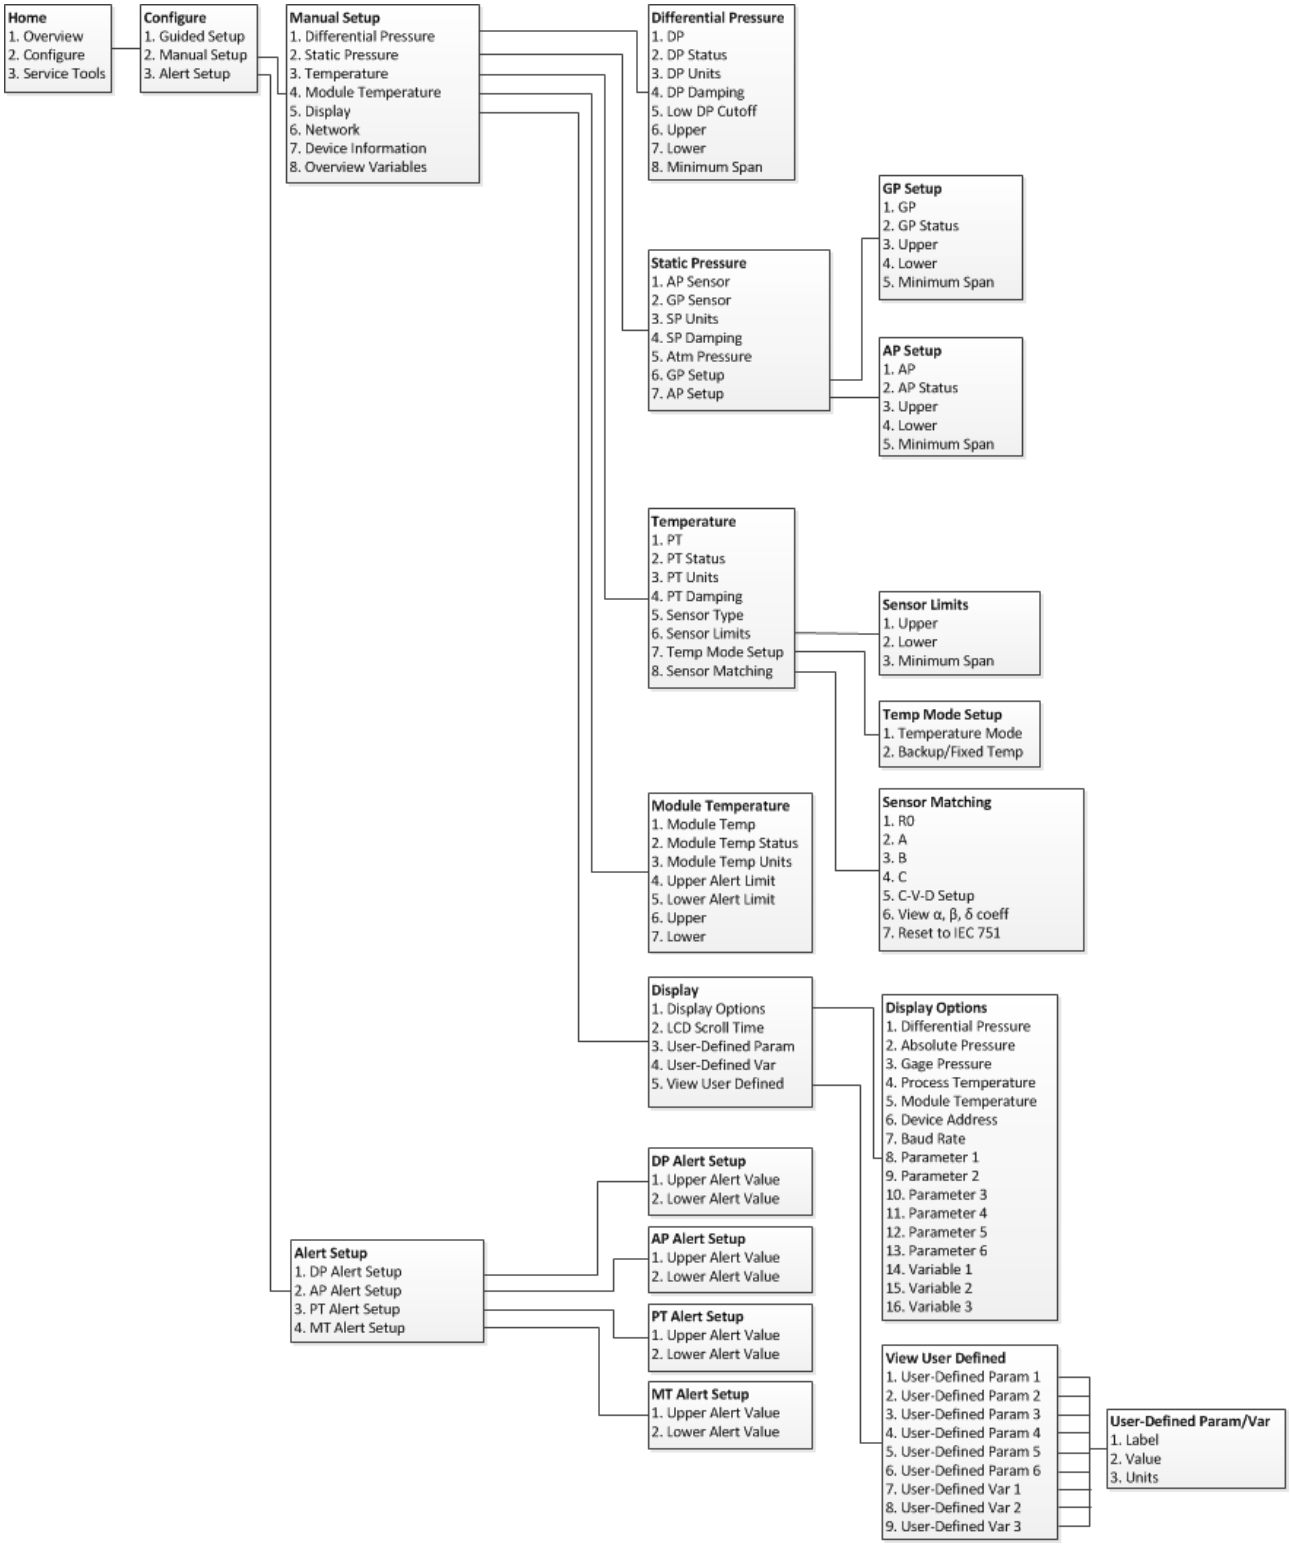


Figure 4-21. Configure – Manual Setup (continued)

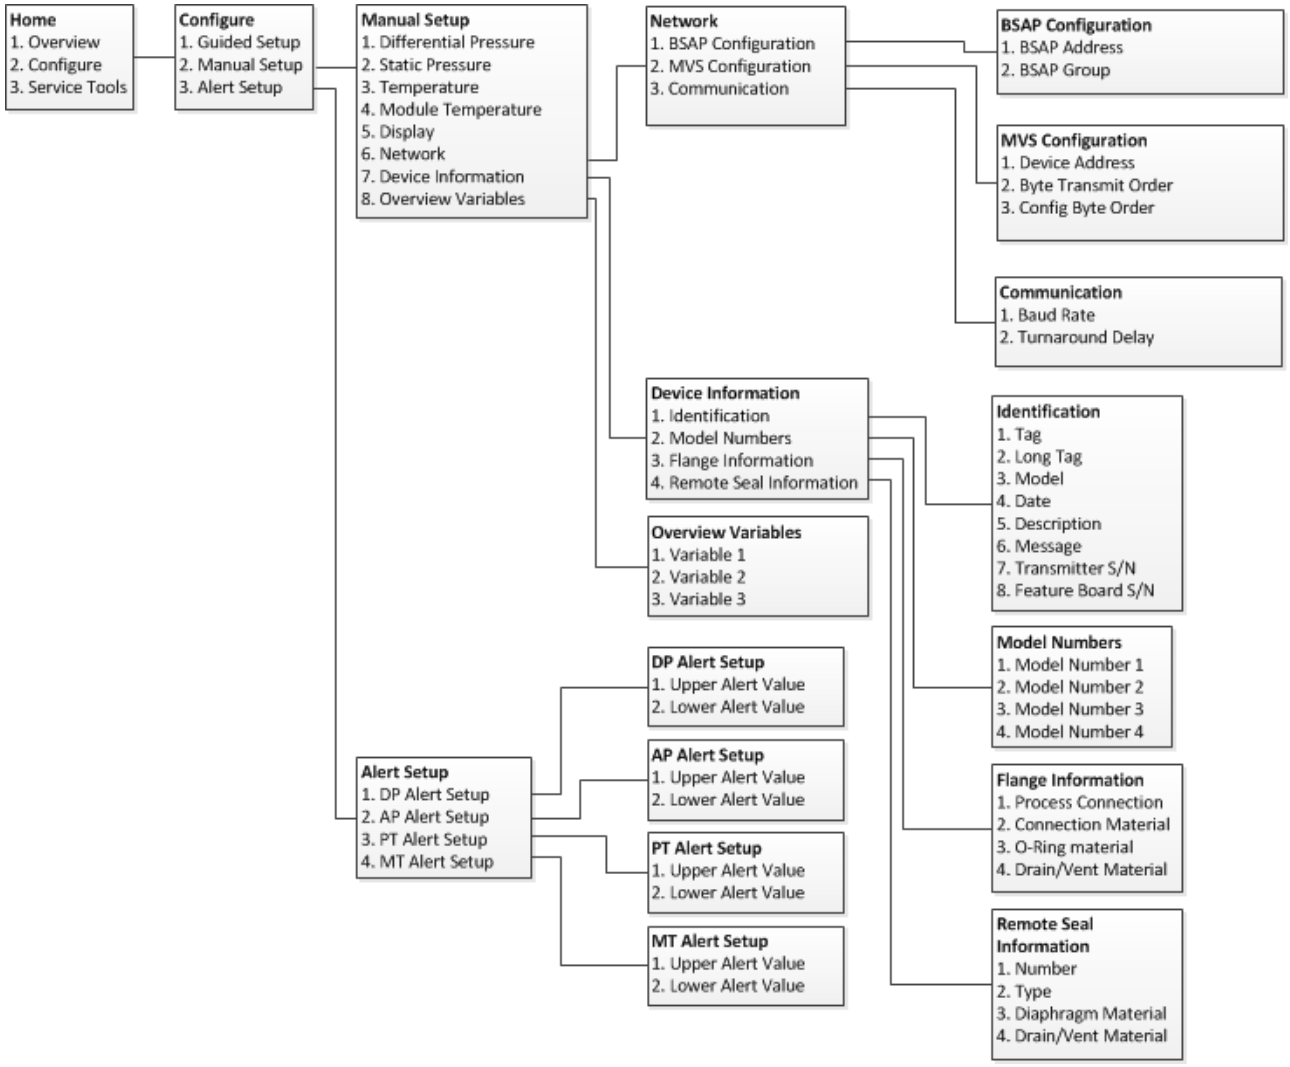

Service Tools

Figure 4-22. Service Tools


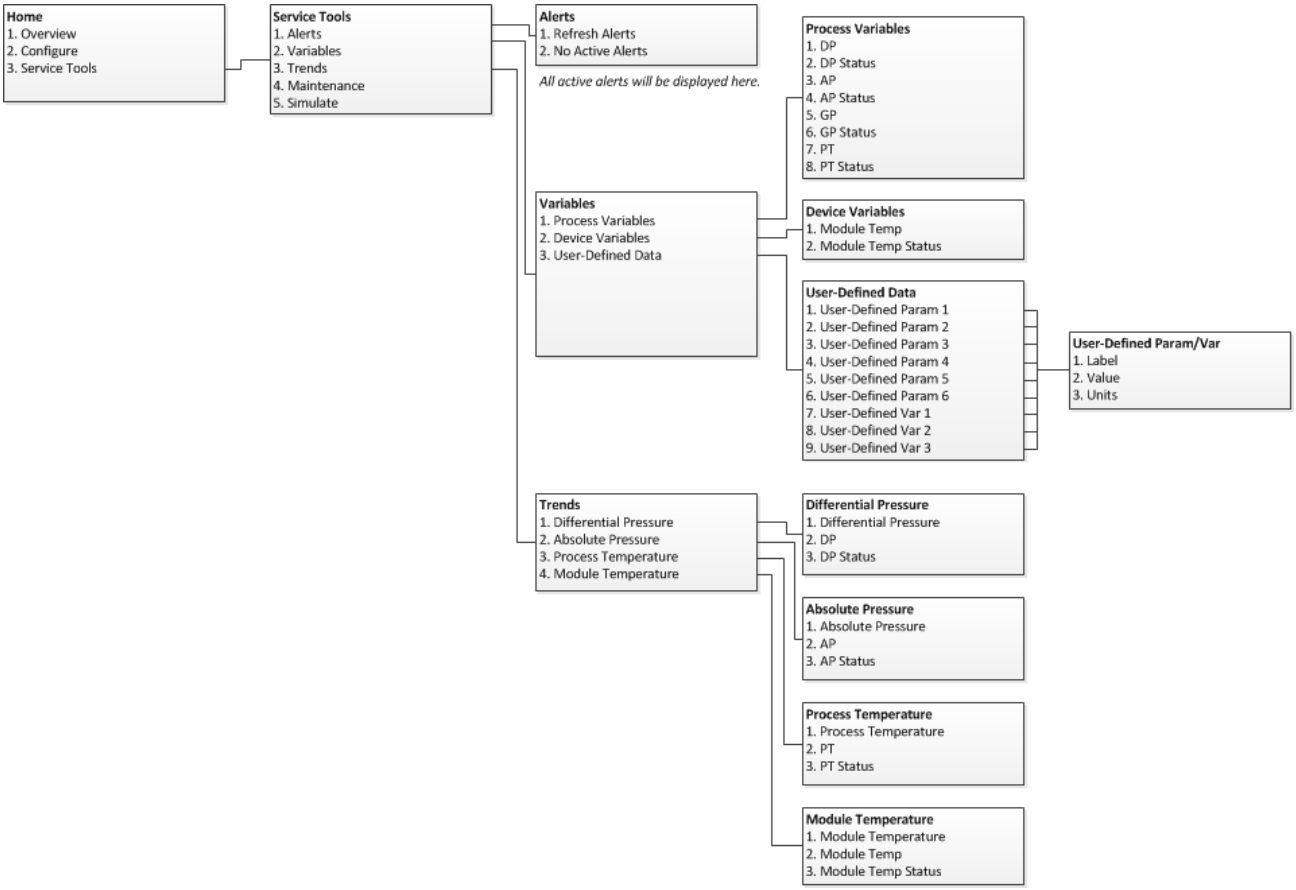


Figure 4-23. Service Tools (continued)

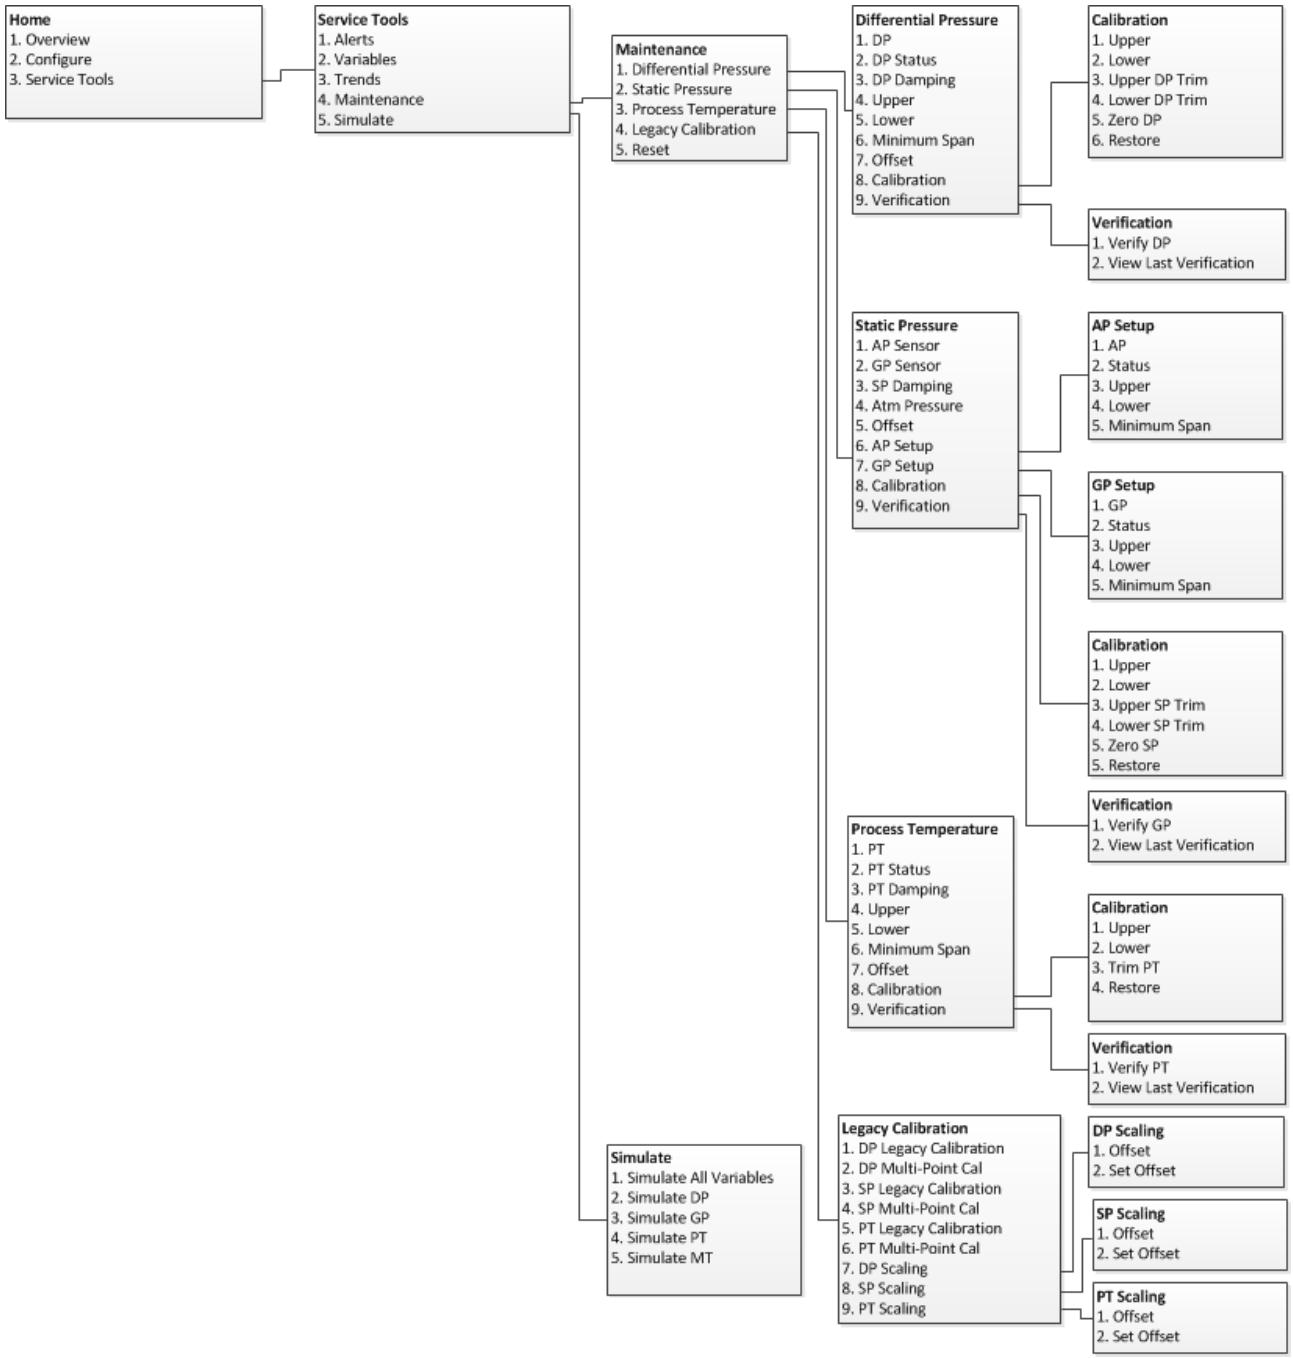

4.7.3 Handheld communicator Fast Keys

A check (✓) indicates the basic configuration parameters. At a minimum, these parameters should be verified as part of the configuration and startup procedure.


Table 4-2. Fast Keys

	Category	Function	Fast Key sequence
✓	Device	Available Measurements	1,9,4
	Device	Display	2,2,5
	Device	Sensor Module Temperature	2,2,4
	Device	Sensor Module Temperature Units	2,2,4,3
	Device	Sensor Module Temperature Upper Alert Limit Sensor Module Temperature Lower Alert Limit	2,2,4,4 2,2,4,5
✓	Device	Device Address	2,2,6,1,1
	Device	Device Status	1,1
	Device	Baud Rate	2,2,6,1,2
	Device	Turnaround Delay	2,2,6,1,3
	Device	Tag	2,2,7,1,1
	Device	Long Tag	2,2,7,1,2
	Device	Transmitter S/N	2,2,7,1,7
	Device	Security Switch	1,9,5,1
	DP Sensor	DP	2,2,1
	DP Sensor	Calibration	3,4,1,8
✓	DP Sensor	DP Units	2,2,1,3
✓	DP Sensor	DP Damping	2,2,1,4
	DP Sensor	Verification	3,4,1,9
	DP Sensor	Upper Alert Limit Lower Alert Limit	2,2,1,6 2,2,1,7
	PT Sensor	Sensor Matching	2,2,3,8
	PT Sensor	PT	2,2,3
	PT Sensor	Calibration	3,4,3,8
✓	PT Sensor	PT Units	2,2,3,3
✓	PT Sensor	PT Damping	2,2,3,4
✓	PT Sensor	Sensor Type	2,2,3,5
	PT Sensor	Verification	3,4,3,9
	PT Sensor	Upper Alert Limit Lower Alert Limit	2,2,3,6,1 2,2,3,6,2
✓	PT Sensor	Temp Mode Setup	2,2,3,7
	SP Sensor	AP	2,2,2,7
✓	SP Sensor	SP Units	2,2,2,3
	SP Sensor	GP	2,2,2,6
✓	SP Sensor	SP Damping	2,2,2,4
	SP Sensor	Calibration	3,4,2,8
	SP Sensor	Verification	3,4,2,9
	SP Sensor	Upper Alert Limit Lower Alert Limit	2,2,2,6,3 2,2,2,6,4

4.8 4088A configuration with legacy tool

The Rosemount 4088A may be configured with the Rosemount 3095FB Configuration Software. When using this legacy tool, only functionality that was available with the Rosemount 3095FB can be accessed. The device must be removed from the Modbus network prior to communicating over the RS-485 bus.

Figure 4-24. Transmitter Configuration via RS-485 Network Port

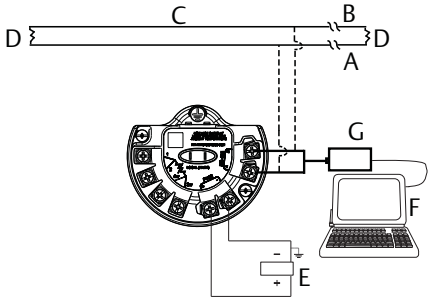

A. RS- 485 (A)
B. RS-485 (B)
C. RS-485 bus, twisted pair required
D. Bus Termination: AC Termination on 4088 (see "Set the switches" on page 11) or 120 Ω resistor
E. User-provided power supply
F. Rosemount 3095FB configuration software
G.RS 232/RS 485 converter

Section 5 Maintenance

Calibration . . . . . page 97
Simulate device variables . . . . . page 104

5.1 Calibration

The following procedures outline the major steps for calibrating and configuring the Rosemount 4088. Refer to the individual screen explanations for more detailed information. It is possible to degrade the performance of the transmitter if a sensor trim is done improperly or with inaccurate calibration equipment. Use an input source that is at least three times more accurate than the transmitter and allow the input to stabilize for ten seconds before entering any values.

Perform the following steps to access the appropriate screen:

1. Select the **Service Tools** menu.
2. Select **Maintenance** on the menu tree.

Note
Whenever the User Interface software is about to change the configuration in the transmitter, a warning message will be displayed. These warnings remind you to put any automatic control loops to manual before changing or modifying the Rosemount 4088 configuration, and to return the control loops to automatic when finished with the configuration procedure.

5.1.1 Sensor trim overview

Trim the sensors using either sensor or zero trim functions. Trim functions vary in complexity and are application-dependent. Both trim functions alter the transmitter's interpretation of the input signal.

Zero trim

Zero trim is a single-point offset adjustment. It is useful for compensating for mounting position effects and is most effective when performed with the transmitter installed in its final mounting position. Since this correction maintains the slope of the characterization curve, it should not be used in place of a sensor trim over the full sensor range.
When performing a zero trim with a manifold, refer to "Rosemount 305, 306 and 304 Manifolds" on page 18.

Note
The transmitter must be within five percent or less of the maximum span of true zero (zero-based) in order to perform a zero trim function. The transmitter will not allow the user to perform a zero trim on an absolute static pressure sensor. To correct mounting position effects on the absolute static pressure sensor, perform a lower sensor trim. The lower sensor trim function provides an offset correction similar to the zero trim function, but it does not require zero-based input.

Full sensor trim

Sensor trim is a two-point sensor calibration where two end-point pressures are applied, and all output is linearized between them. Always adjust the lower sensor trim value first to establish the correct offset. Adjustment of the upper sensor trim value provides a slope correction to the characterization curve based on the lower sensor trim value. The trim values allow the user to optimize performance over a specified measuring range at the calibration temperature.

Restore factory calibration

The Restore factory calibration button will restore the transmitter to the original factory characterization. The Restore factory calibration button can be useful for recovering from an inadvertent zero trim or inaccurate pressure source.

When the restore factory calibration function is used, the transmitter's upper and lower trim values are set to the values configured at the factory. If custom trim values were specified when the transmitter was ordered, the device will recall those values. If custom trim values were not specified, the device will recall the default upper and lower sensor limits.

Last calibration points


The current upper and lower calibration points can be seen under the *Last Calibration Points* heading under the appropriate variable tab.

5.1.2 Differential pressure sensor calibration

Use the *Differential Pressure Calibration* tab to complete a zero trim procedure or a full DP sensor trim, see Figure 5-1.

475 Fast Keys	3,4,1,8

Figure 5-1. Calibration - Differential Pressure Calibration Tab

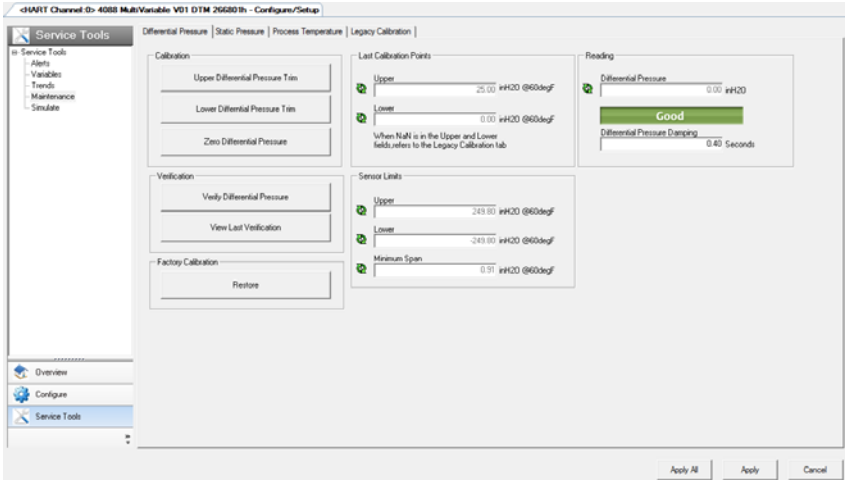

Zero trim

To perform a DP sensor zero trim, go to Service Tools – Maintenance. Under the *Differential Pressure* tab, select the **Zero Differential Pressure** button and follow the on-screen prompts. The transmitter must be within five percent or less of the maximum span of true zero (zero-based) in order to calibrate with zero trim function.

Note
When performing a DP sensor zero trim, ensure the equalizing valve is open and all wet legs are filled to the correct levels.

Full sensor trim

A reference pressure device is required to perform a full sensor trim. Use a reference pressure device that is at least three times more accurate than the transmitter and allow the pressure input to stabilize for ten seconds before entering any values.

To perform a DP full trim, first select the **Lower Differential Pressure Trim** button and follow the on-screen prompts. Next, select the **Upper Differential Pressure Trim** button and follow the on-screen prompts.

Compensating for line pressure (Range 4 and Range 5)

The Rosemount 4088 Range 4 and 5 Pressure Transmitters require a special calibration procedure when used in differential pressure applications. The purpose of this procedure is to optimize transmitter performance by reducing the effect of static line pressure in these applications. The 4088 Differential Pressure Transmitters (Ranges 1, 2, 3, and A) do not require this procedure because optimization occurs in the sensor.

Applying high static pressure to the 4088 Range 4 and Range 5 Pressure Transmitters causes a systematic shift in the output. This shift is linear with static pressure; correct it by performing the “Full sensor trim” on page 98.

The following specifications show the static pressure effect for the 4088 Range 4 and Range 5 Transmitters used in differential pressure applications.

Zero effect

± 0.1% of the upper sensor limit per 1000 psi (69 bar) for line pressures from 0 to 2000 psi (0 to 138 bar)

For line pressures above 2000 psi (138 bar), the zero effect error is ± 0.2% of the upper sensor limit plus an additional ± 0.2% of upper sensor limit error for each 1000 psi (69 bar) of line pressure above 2000 psi (138 bar).

Example: Line pressure is 3000 psi (207 bar). Zero effect error calculation:

± [0.2 + 0.2 x (3 kpsi - 2 kpsi)] = ± 0.4% of the upper sensor limit

Span effect

Correctable to ±0.2% of reading per 1000 psi (69 bar) for line pressures from 0 to 3626 psi (0 to 250 bar)

The systematic span shift caused by the application of static line pressure is -0.85% of reading per 1000 psi (69 bar) for Range 4 transmitters, and -0.95% of reading per 1000 psi (69 bar) for Range 5 transmitters.

Use the following example to compute corrected input values.

Example

A transmitter with model number 4088xxxx4 will be used in a differential pressure application where the static line pressure is 1200 psi (83 bar).

To correct for systematic error caused by high static line pressure, use the following formulas to determine corrected values for the low trim and high trim.

LT = LTP + S x (LTP) x P

Where:	LT =	Corrected Low Trim Value
	LTP =	Lower Trim Point
	S =	Span shift per specification
	P =	Static Line Pressure

HT = UTP + S x (UTP) x P

Where:	HT =	Corrected High Trim Value
	UTP =	Upper Trim Point
	S =	Span shift per specification
	P =	Static Line Pressure

In this example:

UTP =	1500 inH_2O (3.74 bar)
LTP =	500 inH_2O (1.25 bar)
P =	1200 psi (82.74 bar)
S =	0.0085/1000

To calculate the corrected low trim (LT) value:

LT =	500 + (0.0085/1000)(500)(1200)
LT =	505.1 inH_2O (1.26 bar)

To calculate the corrected high trim (HT) value:

HT =	1500 + (0.0085/1000)(1500)(1200)
HT =	1515.3 inH_2O (3.78 bar)

Complete a sensor trim and enter the corrected values for low trim (LT) and high trim (HT), refer to "Full sensor trim" on page 98.

Enter the corrected input values for low trim and high trim through the Field Communicator keypad after you apply the value of pressure as the transmitter input.


Note
After performing a sensor trim on Range 4 and 5 transmitters for high differential pressure applications, verify the upper and lower trim points are at the correct values. For the example above, this would be 500 inH_2O and 1500 inH_2O respectively. The zero effect can be eliminated by doing a zero sensor trim at line pressure after installation without affecting the completed calibration.

5.1.3 Static pressure sensor calibration

475 Fast Keys	3,4,2,8

The *Static Pressure Calibration Tab* allows the user to complete either a zero trim procedure or a full SP sensor trim, see Figure 5-2.

Figure 5-2. Calibration - Static Pressure Calibration Tab

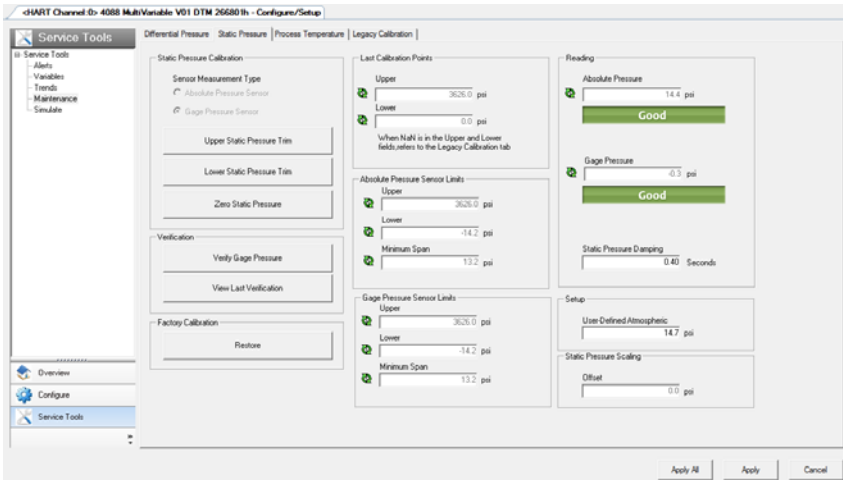

Zero trim or lower sensor trim

The type of static pressure sensor equipped in the transmitter can be determined by referring to the Static Pressure tab. This determines whether a zero trim (gage sensor) or lower sensor trim (absolute sensor) is required to correct for mounting position effects.

To perform a zero trim on a gage static pressure sensor, under the Static Pressure Calibration heading, select the **Zero Static Pressure** button and follow the on-screen prompts. The transmitter must be within five percent or less of the maximum span of true zero (zero-based) in order to calibrate with zero trim function.

To correct for mounting position effects on transmitters equipped with an absolute static pressure sensor, perform a lower sensor trim. This is accomplished by selecting the **Lower Static Pressure Trim** button and following the on-screen prompts. The lower sensor trim function provides an offset correction similar to the zero trim function, but it does not require a zero-based input.

Full sensor trim


To perform a Static Pressure Full Sensor Trim, first select the Lower Sensor Trim button and follow the on-screen prompts. Next, select the Upper Sensor Trim button and follow the on-screen prompts.

5.1.4 Process temperature sensor calibration

475 Fast Keys	3,4,3,8

The Temperature Calibration tab allows the user to perform a sensor trim and configure the sensor matching of a process temperature sensor, see Figure 5-3.

Figure 5-3. Calibration - Temperature Calibration Tab

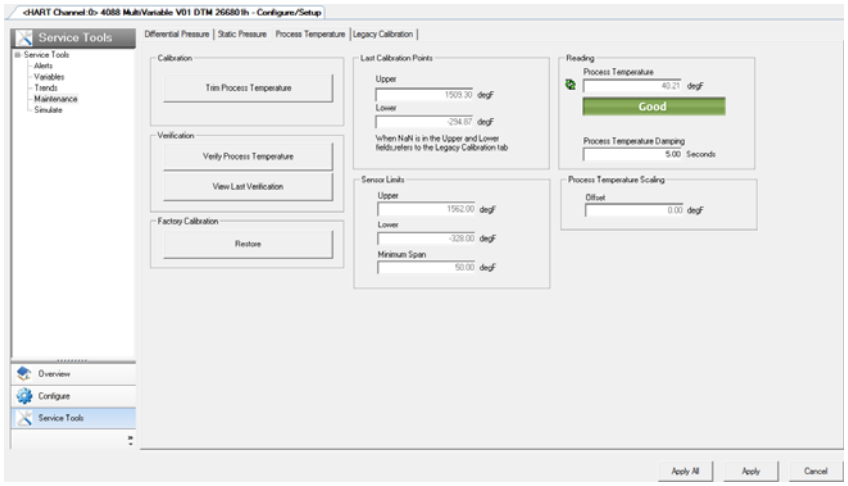

Process temperature full sensor trim

To calibrate the Process Temperature Input using the sensor trim, follow the procedure below.

1. Set up a Temperature Calibrator to simulate a Pt 100 (100-ohm platinum, alpha 385 RTD). Connect the calibrator to the Rosemount 4088 terminal block. See Figure 2-11 on page 16 for more information.
2. Under the *Process Temperature* tab, select the **Trim Process Temperature** button and follow the on-screen prompts.

To configure the calibrated Callendar-Van Dusen constants, see "Process temperature" on page 59.

5.1.5 Offset

An offset can be implemented for each of the process variables by going to the *Legacy Calibration* tab. This feature can be used for applications (e.g. differential pressure) to negate pressures that are more than five percent of the maximum span of the transmitter.

5.1.6 Verification

This process involves applying actual process conditions at a variety of points to verify the device's calibration and store verification results. After creating these verification results, they may be viewed later selecting **View Last Verification**. This allows the user to verify up to six points for each process variable and also generate reports in a spreadsheet format.

Note
This feature stores information, but does not affect Trim or Calibrations. If a Trim is performed, these results will not be cleared.


Perform the following steps to access the appropriate screen:

1. Select the **Service Tools** menu.
2. Select **Maintenance** on the menu tree.
3. Select the tab corresponding to the parameter to be verified.
4. Under the *Verification* heading, select the button corresponding to the parameter to be verified and follow the on-screen prompts.

475 Fast Keys	DP: 3,4,1,9 SP: 3,4,2,9 PT: 3,4,3,9

Note
Once a verification point is written, it can never be deleted; it can only be rewritten.

Figure 5-4. Process Variable Verification Method

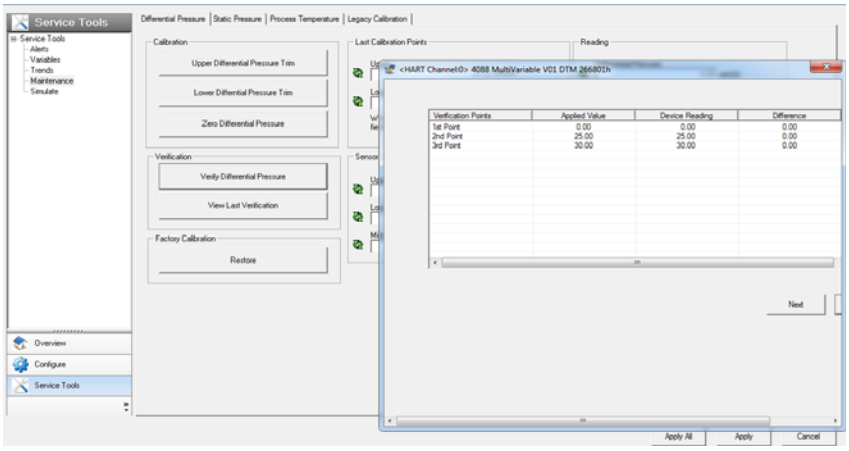

5.1.7 Legacy calibration

For best performance, the Rosemount 4088 MultiVariable Transmitter should be calibrated using the upper and lower trim only. The Legacy Calibration Method uses midpoints between the upper and lower trim point to calibrate the pressure or temperature measurement. This has the potential to create non-linearity in the sensor module.

5.2 Simulate device variables


It is possible to temporarily set the Differential Pressure, Static Pressure (Gage or Absolute), Process Temperature, or Sensor Module Temperature to a user-defined fixed value for testing purposes. After exiting the simulated variable method, the process variable will be automatically returned to a live measurement. Also, if power is cycled or a master reset is performed, the transmitter will revert back to a live measurement.

Perform the following steps to access the appropriate screen:

1. Select the **Service Tools** menu.
2. Select **Simulate** on the menu tree.

475 Fast Keys	3,5

Figure 5-5. Simulate Digital Signal with RTIS

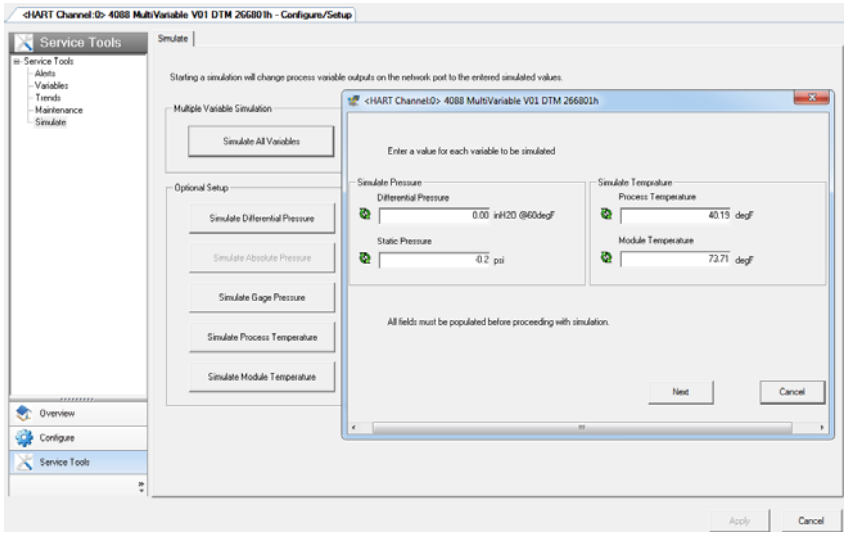

Note

⚠ If the window is closed using the "X" button, simulation will remain on. Select either **Next** or **Cancel** to return to the live measurement.

Section 6 Troubleshooting

Overview . . . . . page 105
Safety messages . . . . . page 105
Communications troubleshooting . . . . . page 106
Alarms and conditions . . . . . page 107
Field upgrades and replacements . . . . . page 109

6.1 Overview

This chapter provides summarized troubleshooting suggestions for the most common operating problems.

If you suspect a malfunction despite the absence of any diagnostic messages on the communicator display, follow the procedures described here to verify transmitter hardware and process connections are in good working order. Always deal with the most likely and easiest-to-check conditions first.

6.2 Safety messages

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that raises potential safety issues is indicated by a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.

6.2.1 Warnings

⚠ WARNING

Explosions could result in death or serious injury.

- Do not remove the transmitter cover in explosive atmospheres when the circuit is live.
- Both transmitter covers must be fully engaged to meet explosion-proof requirements.

⚠ CAUTION

Static electricity can damage sensitive components.

- Observe safe handling precautions for static-sensitive components.

6.3 Communications troubleshooting

The table below identifies the most likely causes for communication problems with the Rosemount 4088 Transmitter.

Symptom	Corrective actions
No communication between Rosemount Transmitter Interface Software and the transmitter	Check for proper voltage across the power terminals of the transmitter (5.4– 30 V dc). Verify there is no loop resistor in line with the HART® terminals. Verify the HART modem is plugged into the correct COM port, as configured within RTIS.
No communication between the transmitter and the host	Check for proper voltage across the power terminals of the transmitter (5.4– 30 V dc). Verify the RS-485 bus is terminated with 120 Ohm resistors or via AC termination, at each end of the bus. Verify the RS-485 bus is NOT terminated at points other than at each end of the bus. Check for intermittent shorts, open circuits, and multiple grounds. Verify the power wiring and RS-485 bus wiring are not switched. Verify the RS-485 wires are connected to the correct A and B communication terminals. Verify identical baud rates for the host and transmitter. Verify the transmitter address. The turnaround delay time for the transmitter may be too fast for host. Try using a longer time (see “Communications” on page 30) The RTU may be polling too fast and cutting off the transmitter response messages. Try adjusting the polling time on the RTU. Verify the software for the host is functioning properly.
Transmitter is not responding with meaningful data	The host may have register addresses referenced to 0 rather than 1. Try subtracting or adding 1 from register addresses when polling. Verify the Rosemount 4088 is transmitting floating point data in the correct format for the host (See “Floating point formats” on page 29).

6.4 Alarms and conditions

Table 6-1. Failed - Fix Now

Alert name	LCD display screen	Problem description	Recommended action	4088A Modbus 16-bit floating point register	BSAP Signal UNIT.STATUS.
Sensor Module Failure	FAIL SENSOR ERROR	Failure has been detected in the sensor module	1. Replace the sensor module.	408 bit 1	Bits 0, 1, and 2
Sensor Module Incompatibility	SNSR INCOMP ERROR	Sensor module is not compatible with the electronic circuit board	1. Replace the sensor module.	409 bit 11	Bits 0, 1, and 2
Electronic Circuit Board Error	FAIL BOARD ERROR	Failure has been detected in the electronic circuit board	1. Replace the electronic circuit board.	409 bit 5	Bits 0,1, 2, and 3
Sensor Module Communication Error	SNSR COMM ERROR	Electronic circuit board has stopped receiving updates from the sensor module	1. Check the cable and cable connection between the sensor module and electronic circuit board. 2. Replace the electronic circuit board. 3. Replace the sensor module.	409 bit 15	Bits 0, 1, and 2
Process Temperature Sensor Failure	PT FAIL ERROR	Process Temperature measurement has failed	1. Ensure all sensor wires are properly connected. 2. Ensure the temperature sensor type is properly configured. 3. Replace the temperature sensor. 4. Replace the electronic circuit board.	408 bit 8	Bit 3

Table 6-2. Maintenance - Fix Soon

Alert name	LCD display screen	Problem description	Recommended action	4088A Modbus 16-bit floating point register	BSAP Signal UNIT.STATUS.
LCD Update Failure	[None]	Electronic circuit board has lost communication with the LCD display	1. Check the connection between the LCD display and electronic circuit board. 2. Replace the LCD display. 3. Replace the electronic circuit board.	408 bit 2	N/A
Power Failure	FAIL POWER ERROR	Transmitter has detected a terminal voltage that is too low	1.Check the DC power supply to make sure the power is correct and stable. 2. Replace the electronic circuit board.	409 bit 14	Bits 0, 1, and 2
RTD Sensor Type Mismatch	PT CONFIG ERROR	Transmitter has detected that the Sensor Type does not match what is configured	1. Ensure all sensor wires are properly connected. 2. Ensure the temperature Sensor Type is properly configured. 3. Replace the electronic circuit board.	408 bit 3	Bit 3
Differential Pressure Out of Limits	DP LIMIT	Differential pressure is either above or below the sensor limits	1. Check the transmitter pressure connection to make sure it is not plugged or isolating diaphragms are not damaged. 2. Replace the pressure sensor module.	407 bit 12 or 7	Bit 4
Static Pressure Out of Limits	AP GP LIMIT	Static pressure is either above or below the sensor limits	1. Check the transmitter pressure connection to make sure it is not plugged and/or the isolating diaphragms are not damaged. 2. Replace the pressure sensor module.	407 bit 6 or 1	Bit 5

Table 6-2. Maintenance - Fix Soon

Alert name	LCD display screen	Problem description	Recommended action	4088A Modbus 16-bit floating point register	BSAP Signal UNIT.STATUS.
Process Temperature Out of Limits	PT LIMIT	Process temperature is either above or below the sensor limits	1.Check the process temperature for conditions outside of sensor limits. 2. Replace the temperature sensor.	408 bit 13 or 10	Bit 7
Module Temperature Out of Limits	SNSRT LIMIT	Module temperature is either above or below the sensor limits	1. Check the process and ambient temperatures to ensure they are within specifications. 2. Replace the sensor module.	408 bit 7 or 6	Bit 6

Table 6-3. Advisory

Alert name	LCD display screen	Problem description	Recommended action	4088A Modbus 16-bit floating point register	BSAP Signal UNIT.STATUS.
Differential Pressure Alert	DP ALERT	Differential pressure alert diagnostic has detected that the pressure has gone beyond the configured alert limits	1. Verify the differential pressure is beyond the alert limits. 2. Modify the alert limits.	407 bit10 or 9	Bit 12
Static Pressure Alert	AP GP ALERT	Static pressure alert diagnostic has detected that the pressure has gone beyond the configured alert limits	1. Verify the static pressure is beyond the alert limits. 2. Modify the alert limits.	407 bit 4 or 3	Bit 13
Process Temperature Alert	PT ALERT	Process temperature alert diagnostic has detected that the temperature has gone beyond the configured alert limits	1. Verify the process temperature is beyond the alert limits. 2. Modify the alert limits.	408 bit 12 or 11	Bit 15
Module Temperature Alert	SNSRT ALERT	Module temperature alert diagnostic has detected that the temperature has gone beyond the configured alert limits	1. Verify the module temperature is beyond the alert limits. 2. Modify the alert limits.	408 bit 5 or 4	Bit 14
Simulation Active	[None]	Device is in simulation mode and may not be reporting actual information	1. Verify that simulation is no longer required. 2. Disable simulation mode in Service Tools. 3. Perform a Device Reset.	409 bit 0,3,7, or 8	Bits 8, 9, 10, or 11

6.5 Field upgrades and replacements

6.5.1 Disassembly considerations

⚠ During disassembly, do not remove the instrument cover in explosive atmospheres when the circuit is live as this may result in serious injury or death. Also, be aware of the following:

- Follow all plant safety rules and procedures.
- Isolate and vent the process from the transmitter before removing the transmitter from service.
- Disconnect optional process temperature sensor leads and cable.
- Remove all other electrical leads and conduit.
- Detach the process flange by removing the four flange bolts and two alignment screws that secure it.
- Do not scratch, puncture, or depress the isolating diaphragms.
- Clean isolating diaphragms with a soft rag and a mild cleaning solution, then rinse with clear water.
- Whenever the process flange or flange adapters are removed, visually inspect the PTFE O-rings. Emerson Process Management recommends reusing O-rings if possible. If the O-rings show any signs of damage, such as nicks or cuts, they should be replaced.

6.5.2 Housing assembly including electronics board

Field device labels

The sensor module label reflects the replacement model code for reordering a complete transmitter.


Replacing the housing assembly including electronics board

Remove the electronics board

The 4088 MultiVariable™ Transmitter electronics board is located opposite the field terminal side in the housing. To remove the electronics board, perform the following procedure:

1. Remove the housing cover opposite the field terminal side.
2. Remove the LCD display, if applicable. To do this, hold in the two clips and pull outward. This will provide better access to the two screws located on the electronics board.
3. Loosen the two captive screws located on the electronics board.
4. Pull out the electronics board to expose and locate the sensor module connector, see Figure 6-1 on page 110.
5. Press the locking tabs and pull the sensor module connector upwards (avoid pulling wires). Housing rotation may be required to access locking tabs. See “Consider housing rotation” on page 10 for more information.

Figure 6-1. Sensor Module Connector View

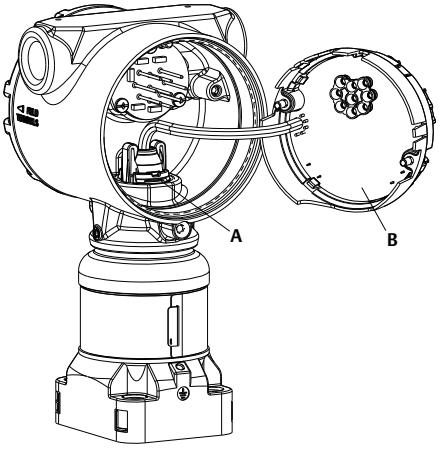


A. Sensor module connector
B. Electronics board

Separate the sensor module assembly from the housing

1. To prevent damage to the sensor module connector, remove the electronics board from the sensor module assembly and remove the connector before separating the sensor module assembly from the housing.
2. Loosen the housing rotation set screw by one full turn with a $^{3}/_{32}$-in. hex wrench (see Figure 6-2).
3. Unscrew the housing from the sensor module threads.

Figure 6-2. Set Screw

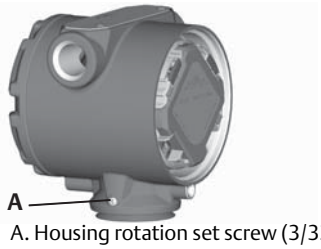


A. Housing rotation set screw (3/32-inch)

Attach the sensor module assembly to the housing

1. Apply a light coat of low temperature silicon grease to the sensor module threads and O-ring.
2. Thread the housing completely onto the sensor module assembly. The housing must be no more than one full turn from flush with the sensor module assembly to comply with flame-proof/explosion-proof requirements.
3. Tighten the housing rotation set screw using a $^{3}/_{32}$-in. hex wrench to a recommended torque of 30 in-lbs (3.4 N-m).

Note
The V-Seal (03151-9061-0001) must be installed at the bottom of the housing (see Figure 6-3).

Figure 6-3. V-Seal

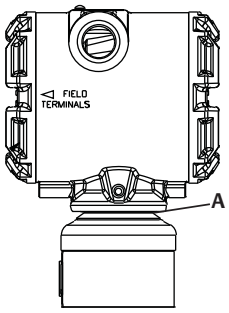

A. Black rubber V-seal

Install electronics board in the housing



1. Apply a light coat of low temperature silicon grease to the sensor module connector O-ring.
2. Insert the sensor module connector into the top of the sensor module assembly. Ensure the locking tabs are fully engaged.
3. Gently slide the electronics board into the housing, making sure the pins from the housing properly engage the receptacles on the electronics board.
4. Tighten the captive screws.
5. ⚠ Attach the housing cover and tighten so that metal contacts metal to meet flame-proof/explosion-proof requirements.

6.5.3 Terminal block

Electrical connections are located on the terminal block in the compartment labeled "FIELD TERMINALS." The terminal block may be replaced or upgraded to add transient protection. Part numbers can be found in "Spare parts list" on page 126.

Loosen the two captive screws (see Figure 6-4), and pull the entire terminal block out.

Figure 6-4. Terminal Blocks

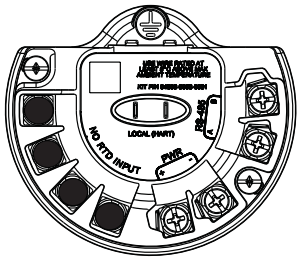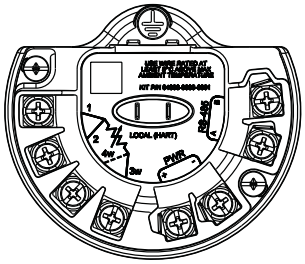Without optional process temperature connections	With optional process temperature connections
	

1. Gently slide the terminal block into the housing, making sure the pins from the Rosemount 4088 housing properly engage the receptacles on the terminal block.
2. Tighten the captive screws on the terminal block.
3. ⚠ Attach the Rosemount 4088 housing cover and tighten so metal contacts metal to meet flame-proof/explosion-proof requirements.


6.5.4 LCD display

Transmitters ordered with the LCD display will be shipped with the display installed. Installing the display on an existing Rosemount 4088 MultiVariable Transmitter requires the LCD display kit (part number 00753-9004-0001 for aluminum housing and 00753-9004-0004 for stainless steel housing).

Use the following procedure and Figure 6-5 to install the LCD display:

1. If the transmitter is installed in a loop, then secure the loop and disconnect power.
2. ⚠ Remove the transmitter cover on the electronics board side (opposite the field terminals side). Do not remove instrument covers in explosive environments when circuit is live.
3. Engage the four-pin connector into the electronics board and snap LCD display into place.
4. ⚠ In order to meet explosion-proof requirements, reinstall the housing cover and tighten so the cover is fully seated with metal to metal contact between the housing and cover.

Figure 6-5. Optional LCD Display

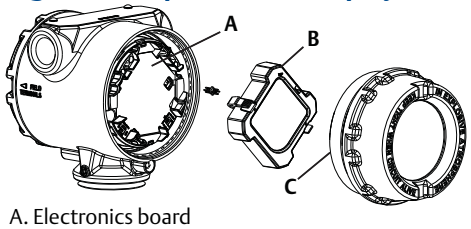


A. Electronics board
B. LCD display
C. Display cover

6.5.5 Flange and drain vent

The Rosemount 4088 MultiVariable Transmitter is attached to the process connection flange by four bolts and two alignment cap screws.

1. Remove the two alignment cap screws.

Figure 6-6. Alignment Cap Screws

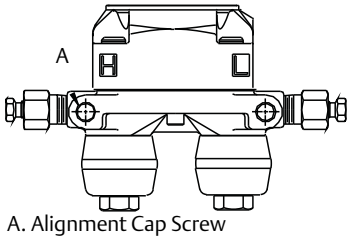

A. Alignment Cap Screw

2. Remove the four bolts and separate the transmitter from the process connection, but leave the process connection flange in place and ready for re-installation.

Note
If the installation uses a manifold, see "Manifold operation" on page 21.

3. Inspect the sensor module PTFE O-rings. If the O-rings are undamaged, they may be reused. Emerson Process Management recommends reusing O-rings if possible. If the O-rings show any signs of damage, such as nicks or cuts, they should be replaced (part number 03151-9042-0001 for glass-filled PTFE and part number 03151-9042-0002 for graphite-filled PTFE).

Note
If replacing the O-rings, be careful not to scratch or deface the O-ring grooves or the surface of the isolating diaphragm when removing the damaged O-rings.

4. Install the process flange on the sensor module process connection. To hold the process flange in place, install the two alignment cap screws finger tight (these screws are not pressure retaining). Do not overtighten; this will affect module-to-flange alignment.

5. Install the appropriate flange bolts.
   a. If the installation requires a 1/4–18 NPT connection(s), use four 1.75-in. flange bolts. Finger tighten the bolts. Go to Step d.
   b. If the installation requires a 1/2–14 NPT connection(s), use flange adapters and four 2.88-in. process flange/adapter bolts.
   c. Hold the flange adapters and adapter O-rings in place while finger-tightening the bolts.
   d. Tighten the bolts to the initial torque value using a crossed pattern. See Table 6-4 for appropriate torque values.
   e. Tighten the bolts to the final torque value using a crossed pattern. See Table 6-4 for appropriate torque values. When fully tightened, the bolts should extend through the top of the module housing.
   f. Torque alignment screws to 30 in-lbs. (3.4 N-m). If the installation uses a conventional manifold, then install flange adapters on the process end of the manifold using the 1.75-in. flange bolts supplied with the transmitter.

Table 6-4. Bolt Installation Torque Values

Bolt material	Initial torque value	Final torque value
CS-ASTM-A449 Standard	300 in-lb. (34 N-m)	650 in-lb. (73 N-m)
316 SST—Option L4	150 in-lb. (17 N-m)	300 in-lb. (34 N-m)
ASTM-A-193-B7M—Option L5	300 in-lb. (34 N-m)	650 in-lb. (73 N-m)
Alloy K-500—Option L6	300 in-lb. (34 N-m)	650 in-lb. (73 N-m)
ASTM-A-453-660—Option L7	150 in-lb. (17 N-m)	300 in-lb. (34 N-m)
ASTM-A-193-B8M—Option L8	150 in-lb. (17 N-m)	300 in-lb. (34 N-m)

6. If the sensor module PTFE O-rings are replaced, re-torque the flange bolts and alignment cap screws after installation to compensate for seating of the PTFE O-ring.

7. Install the drain/vent valve.
   a. Apply sealing tape to the threads on the seat. Starting at the base of the valve with the threaded end pointing toward the installer, apply two clockwise turns of sealing tape.
   b. Take care to place the opening on the valve so that process fluid will drain toward the ground and away from human contact when the valve is opened.
   c. Tighten the drain/vent valve to 250 in-lb. (28.25 N-m).
   d. Tighten the stem to 70 in-lb. (8 N-m)

Note

Due to the Range 1 DP Sensor's high accuracy at low pressures, extra steps are required to optimize performance. It is necessary to temperature soak the assembly using the following procedure.

1. After replacing O-rings on DP Range 1 transmitters and re-installing the process flange, expose the transmitter to a temperature of 185 °F (85 °C) for two hours.
2. Re-tighten the flange bolts in a cross pattern.
3. Again, expose the transmitter to a temperature of 185 °F (85 °C) for two hours before calibration.

Appendix A Specifications and Reference Data

Performance specifications . . . . . page 115
Functional specifications . . . . . page 119
Physical specifications . . . . . page 127
Dimensional drawings . . . . . page 130
Ordering information . . . . . page 133
Spare parts list . . . . . page 148

A.1 Performance specifications

For zero-based spans, reference conditions, silicone oil fill, glass-filled PTFE O-rings, SST materials, coplanar flange or 1/2 in.- 14 NPT process connections, digital trim values set to equal range points.

A.1.1 Conformance to specification (±3σ [Sigma])

Technology leadership, advanced manufacturing techniques, and statistical process control ensure pressure measurement specification conformance to ±3σ or better.

A.1.2 Reference accuracy

Stated reference accuracy equations include terminal based linearity, hysteresis, and repeatability.

MultiVariable and differential pressure sensor configurations (measurement types 1, 2, 3, and 4)

Range	Standard	Enhanced	Enhanced for Flow
DP			
1	± 0.1% span; For spans less than 5:1, ±(0.025+.015 [USL/Span])% span	± 0.1% span; For spans less than 15:1, ±(0.025+.005 [USL/Span])% span	N/A
2 - 3	± 0.1% span; For spans less than 10:1, ±(0.01 [USL/Span])% span	± 0.075% span; For spans less than 10:1, ±(0.025 +0.005 [USL/Span])% span	±0.05% reading; For readings less than 8:1, ±(0.05 + 0.0023 [USL/Rdg])% reading
4(1)	± 0.1% span; For spans less than 10:1, ±(0.01 [USL/Span])% span	± 0.075% span; For spans less than 10:1, ±(0.025 +0.005 [USL/Span])% span	±0.05% reading; For readings less than 3:1, ±(0.05 + 0.00245 [USL/Rdg])% reading(2)
5(1)	± 0.1% span; For spans less than 10:1, ±(0.01 [USL/Span])% span	± 0.075% span; For spans less than 10:1, ±(0.025 +0.005 [USL/Span])% span	N/A
Extended Range (Code A)	N/A	± 0.075% span for spans 25 to 250 inH_2O; For readings above span, ±0.15% reading	N/A

MultiVariable and differential pressure sensor configurations (measurement types 1, 2, 3, and 4)

Range	Standard	Enhanced	Enhanced for Flow
AP & GP			
3, 4, 6, and 7	± 0.1% span; For spans less than 5:1, ±(0.017 [USL/Span])% span	± 0.075% span; For spans less than 5:1, ±(0.013 [USL/Span])% span	±0.05% span; For spans less than 5:1, ±(0.006[USL/Span])% span

(1) For Measurement Types 1 and 2 with Ranges 4 or 5, only available in Alloy C-276.
(2) Only available with Measurement Types 1 and 2.

Static pressure sensor configurations (measurement types 5, 6, 7, and 8)

Range	Standard	Enhanced
0 - 5	± 0.1% span; For spans less than 10:1, ±(0.01 [USL/Span])% span	± 0.075% span; For spans less than 10:1, ±(0.025 +0.005 [USL/Span])% span

Process temperature measurement accuracy (excludes RTD sensor error)

Range	RTD reference accuracy
-200 °C to 850 °C	± 0.56 °C

A.1.3 Long-term stability

4088 model	Standard	Enhanced/Enhanced for Flow
All 4088 products(1)	±0.1% USL for 1 year	±0.125% USL for 5 years; for ±50 °F (28 °C) temperature changes, up to 1000 psi (68,9 bar) line pressure

(1) For Measurement Types 1 and 2 with DP Range 1 and Measurement Types 5 and 7 with Range 0 (absolute) and Range 1 (gage); ±0.2% USL for 1 year.

Process temperature

Temperature element	Specification
RTD Interface(1)	±1.00 °F (0.56 °C) per year (excludes RTD sensor stability).

(1) Specifications for process temperature are for the transmitter portion only. The transmitter is compatible with any Pt 100 (100 ohm platinum) RTD. Examples of compatible RTDs include the Rosemount Series 68 and 78 RTD Temperature Sensors.

Warranty

Models	Standard and Enhanced	Enhanced for Flow
All 4088 products(1)	1-year limited warranty(2)	12-year limited warranty(3)

(1) Warranty details can be found in Emerson Process Management Terms & Conditions of Sale, Document 63445.
(2) Goods are warranted for twelve (12) months from the date of initial installation or eighteen (18) months from the date of shipment by seller, whichever period expires first.
(3) Rosemount Enhanced for Flow transmitters have a limited warranty of twelve (12) years from date of shipment. All other provisions of Emerson Process Management standard limited warranty remain the same.

A.1.4 Ambient temperature effect

Temperature Effect is defined as output at a given temperature minus the output at Reference Operating Conditions, measured in ± percent of USL deviation per 50 °F (28 °C) change from Reference Operating Conditions. Specifications apply only over the Ambient Temperature Limits.

MultiVariable and differential pressure sensor configurations (measurement types 1, 2, 3, and 4)

Range	Standard	Enhanced	Enhanced for Flow
DP	**per 50 °F (28 °C)**	**per 50 °F (28 °C)**	**-40 to 185 °F (-40 to 85 °C)**
1	±(0.2% USL + 0.25% span) from 1:1 to 30:1, ±(0.24% USL + 0.15% span) from 30:1 to 50:1	±(0.1% USL + 0.25% span) from 1:1 to 30:1, ±(0.125% USL + 0.15% span) from 30:1 to 50:1	N/A
2-3	±(0.15% USL) from 1:1 to 30:1, ±(0.20% USL) from 30:1 to 50:1	±(0.0175% USL + 0.1% span) from 1:1 to 5:1, ±(0.035% USL + 0.125% span) from 5:1 to 100:1	±0.15% reading from 1:1 to 8:1, ±[0.15 + 0.02 (USL/RDG)]% reading from 8:1 to 100:1
Extended Range (Code A)(1)(2)	N/A	For units spanned 75 to 250 inH_20, ±(0.025% MSL + 0.125% span) For pressures between span and 250 inH_20, ±(0.025% MSL + 0.125% reading) For units spanned 25 to 75 inH_2O, ±(0.09% MSL + 0.03% span) For pressures between span and 250 inH_2O, ±(0.09% MSL + 0.03% reading) For pressure readings above 250 inH_2O, ±0.15% reading	N/A
4-5(3)	±(0.225% USL) from 1:1 to 50:1	±(0.04% USL + 0.175% span) from 1:1 to 100:1	N/A
AP/GP(2)	**per 50 °F (28 °C)**	**per 50 °F (28 °C)**	**per 50 °F (28 °C)**
3, 4, 6, and 7	±(0.175% USL) from 1:1 to 10:1, ±(0.225% USL) from 10:1 to 25:1	±(0.050% USL + 0.125% span) from 1:1 to 10:1, ±(0.060% USL + 0.175% span) from 10:1 to 40:1	±(0.040% USL + 0.060% span) from 1:1 to 10:1, ±(0.050% USL + 0.150% span) from 10:1 to 40:1

(1) For Extended Range (Code A), MSL is the Maximum Span Limit of 250 inH_2O (621,60 mbar).
(2) Only available with Measurement Types 1 and 2.
(3) For Measurement Types 1 and 2 with Ranges 4 or 5, only available in Alloy C-276.

Static pressure sensor configurations (measurement types 5, 6, 7, and 8)

Range	Standard	Enhanced
0 Coplanar	±(0.25% USL + 0.1% span)	±(0.25% USL + 0.1% span)
1 Coplanar	±(0.2% USL + 0.25% span) from 1:1 to 30:1, ±(0.24% USL + 0.15% span) from 30:1 to 50:1	±(0.1% USL + 0.25% span) from 1:1 to 30:1, ±(0.125% USL + 0.15% span) from 30:1 to 50:1
2-5 Coplanar	±(0.15% USL) from 1:1 to 30:1, ±(0.20% USL) from 30:1 to 50:1	±(0.025% USL + 0.125% span) from 1:1 to 30:1, ±(0.035% USL + 0.175% span) from 30:1 to 100:1
1-4 In-Line	±(0.175% USL) from 1:1 to 30:1, ±(0.225% USL) for 30:1 to 50:1	±(0.050% USL + 0.125% span) from 1:1 to 30:1, ±(0.060% USL + 0.175% span) for 30:1 to 100:1
5 In-Line	±(0.05% USL + 0.075% span) for spans above 4000 psi	±(0.05% USL + 0.075% span) for spans above 2000 psi

RTD interface ambient temperature effects (excludes RTD sensor error)

Range	Ambient temperature effect
-200 °C to 850 °C	± 0.40 °C per 28 °C change

Line pressure effect[1]

Range	Standard	Enhanced and Enhanced for Flow
Zero error[2]		
2-3 and Extended Range (Code A)[3]	± 0.1% USL per 1000 psi (69 bar) For Static Pressures above 2000 psi: ±[0.2 + 0.0001 * (Ps - 2000)]% /1000 psi	± 0.05% USL per 1000 psi (69 bar) For Static Pressures above 2000 psi: ±[0.1 + 0.0001 * (Ps - 2000)]% /1000 psi
1	± 0.25% USL per 1000 psi (69 bar)	± 0.25% USL per 1000 psi (69 bar)
Span error[4]		
2-3 and Extended Range (Code A)	± 0.2% USL per 1000 psi (69 bar)	± 0.2% USL per 1000 psi (69 bar)
1	± 0.4% USL per 1000 psi (69 bar)	± 0.4% USL per 1000 psi (69 bar)

(1) For line pressure specifications for DP Ranges 4 and 5, see the 4088 Reference Manual (document number 00809-0100-4088).
(2) Zero error can be removed by performing a zero trim at line pressure.
(3) For Extended Range (Code A), USL is the Maximum Span Limit (MSL) of 250 inH_2O (621,60 mbar).
(4) Specifications for option code P0 are two times those shown above for Range 2.

A.1.5 Vibration effect

Aluminum housing

Less than ±0.1% USL when tested per the requirements of IEC60770-1:1999 field or pipeline with high vibration level (10-60 Hz 0.21 mm displacement peak amplitude/60-2000 Hz 3g).

Stainless steel housing

Less than ±0.1% USL when tested per the requirements of IEC60770-1:1999 field with general application or pipeline with low vibration level (10-60 Hz 0.15 mm displacement peak amplitude/60-500 Hz 2g).

A.1.6 Mounting position effect

There is no significant span effect due to mounting position. The zero effect can be eliminated by re-trimming output at zero after installation.

Sensor	Maximum zero shift
DP	±1.25 inH_2O (3,11 mbar)
AP & GP	±2.5 inH_2O (6,22 mbar)

A.1.7 Power supply effect

Digital output shift is less than ±0.005% of calibrated span per volt change in voltage at the transmitter terminals.

A.1.8 Transient protection (option T1)

Transient Protection option meets requirements of IEEE C62.41.2-2002, Location Category B.

Ring Wave: 6 kV Crest, 100 kHz (0.5 μs)

Combination Wave: 3 kA Crest (8/20 μs), 6 kV Crest (1.2/50 μs)

A.1.9 Electromagnetic Compatibility (EMC)

Testing to EN61326-2006, Part 1 and Part 2-3

Meets CE compliance requirements (deviations < 1% span in addition to transmitter specification).

A.2 Functional specifications

A.2.1 Service

Liquid, gas, and vapor applications

A.2.2 Range and sensor limits

The range limits are shown in the tables below. The calibrated span must exceed the minimum trim span.

Transmitter with multivariable sensor module (measurement types 1 and 2)

Range	Differential pressure sensor[1]			
	Lower sensor limit (LSL)		Upper sensor limit (USL)	
1	-25 inH_2O (-62,16 mbar)		25 inH_2O (62,16 mbar)	
2	-250 inH_2O (-0,62 bar)		250 inH_2O (0,62 bar)	
3	-1000 inH_2O (-2,49 bar)		1000 inH_2O (2,49 bar)	
4	-150 psi (-10,34 bar)		150 psi (10,34 bar)	
5	-2000 psi (-137,89 bar)		2000 psi (137,89 bar)	
Extended Range (Code A)[2]	-800 inH_2O (-1,99 bar)		800 inH_2O (1,99 bar)	
Range	**Static pressure sensor**			
	Absolute pressure		Gage pressure	
	Lower sensor limit (LSL)[3]	Upper sensor limit (USL)	Lower sensor limit (LSL)[4]	Upper sensor limit (USL)
6	0.5 psia (34,47 mbar)	300 psia (20,68 bar)	-14.2 psi (-0,98 bar)	300 psi (20,68 bar)
7	0.5 psia (34,47 mbar)	1500 psia (103,42 bar)	-14.2 psi (-0,98 bar)	1500 psi (103,42 bar)
4	0.5 psia (34,47 mbar)	3626 psia (250,00 bar)[5]	-14.2 psi (-0,98 bar)	3626 psi (250,00 bar)[5]
3[6]	0.5 psia (34,47 mbar)	800 psia (55,15 bar)	-14.2 psi (-0,98 bar)	800 psi (55,15 bar)

(1) The Lower Sensor Limit (LSL) for Enhanced for Flow Performance Class is 0 inH_2O (0 mbar).
(2) For Extended Range (Code A), the Maximum Span Limit (MSL) is 250 inH_2O (0,62 bar).
(3) Inert Fill: Minimum gage pressure = -13.2 psi (0,91 bar); Minimum absolute pressure: 1.5 psia (103,42 mbar).
(4) Assumes atmosphere pressure of 14.7 psia (1,0 bar).
(5) For static pressure Range 4 with DP Range 1, the USL is 2000 psi (137,89bar).
(6) Available with DP Range 1.

Transmitter with single variable coplanar sensor module (measurement types 3, 4, 5, and 7)

Range	DP sensor (measurement types 3 and 4)		GP sensor (measurement types 5 and 7)		AP sensor (measurement types 5 and 7)	
	Lower (LSL)[1]	Upper (USL)	Lower (LSL)[2]	Upper (USL)	Lower (LSL)	Upper (USL)
0	N/A	N/A	N/A	N/A	0 psia (0 bar)	5 psia (0,34 bar)
1	-25 inH_2O (-62,16 mbar)	25 inH_2O (62,16 mbar)	-25 inH_2O (-62,16 mbar)	25 inH_2O (62,16 mbar)	0 psia (0 bar)	30 psia (2,06 bar)
2	-250 inH_2O (-0,62 bar)	250 inH_2O (0,62 bar)	-250 inH_2O (-0,62 bar)	250 inH_2O (0,62 bar)	0 psia (0 bar)	150 psia (10,34 bar)
3	-1000 inH_2O (-2,49 bar)	1000 inH_2O (2,49 bar)	-393 inH_2O (-0,98 bar)	1000 inH_2O (2,49 bar)	0 psia (0 bar)	800 psia (55,15 bar)
4	-300 psi (-20,68 bar)	300 psi (20,68 bar)	-14.2 psi (-0,98 bar)	300 psi (20,68 bar)	0 psia (0 bar)	4000 psia (275,79 bar)
5	-2000 psi (-137,89 bar)	2000 psi (137,89 bar)	-14.2 psi (-0,98 bar)	2000 psi (137,89 bar)	N/A	N/A

(1) The Lower Sensor Limit (LSL) is 0 inH_2O (0 mbar) for Enhanced for Flow Performance Class.
(2) Assumes atmospheric pressure of 14.7 psia (1 bar).

Transmitter with in-line sensor module (measurement types 6 and 8)

Range	Absolute pressure		Gage pressure	
	Lower (LSL)	Upper (USL)	Lower (LSL)[1]	Upper (USL)
1	0 psia (0 bar)	30 psia (2,06 bar)	-14.7 psi (-1,01 bar)	30 psi (2,06 bar)
2	0 psia (0 bar)	150 psia (10,34 bar)	-14.7 psi (-1,01 bar)	150 psi (10,34 bar)
3	0 psia (0 bar)	800 psia (55,15 bar)	-14.7 psi (-1,01 bar)	800 psi (55,15 bar)
4	0 psia (0 bar)	4000 psia (275,79 bar)	-14.7 psi (-1,01 bar)	4000 psi (275,79 bar)
5	0 psia (0 bar)	10000 psia (689,47 bar)	-14.7 psi (-1,01 bar)	10000 psi (689,47 bar)

(1) Assumes an atmospheric pressure of 14.7 psi.

Process temperature RTD interface (measurement types 1, 3, 5, and 6)[1]

Lower (LSL)	Upper (USL)
-328 °F (-200 °C)	1562 °F (850 °C)

(1) Transmitter is compatible with any Pt 100 RTD sensor. Examples of compatible RTDs include Rosemount Series 68 and 78 RTD Temperature Sensors.

A.2.3 Minimum span limits

Transmitter with MultiVariable sensor module (measurement types 1 and 2)

Differential pressure range	Standard	Enhanced	Enhanced for Flow
1	1.0 inH_2O (2,49 mbar)	0.50 inH_2O (1,24 mbar)	N/A
2	5.0 inH_2O (12,43 mbar)	2.5 inH_2O (6,22 mbar)	2.5 inH_2O (6,22 mbar)
3	20.0 inH_2O (49,73 mbar)	10.0 inH_2O (24,86 mbar)	10.0 inH_2O (24,86 mbar)
4	6.0 psi (0,41 bar)	3.0 psi (0,21 bar)	3.0 psi (0,21 bar)
5	40.0 psi (2,76 bar)	20.0 psi (1,38 bar)	N/A
Extended Range (Code A)[1]	N/A	25 inH_2O (62,16 mbar)	N/A
Static pressure range	**Standard**	**Enhanced**	**Enhanced for Flow**
Allowable static pressure ranges for DP Range 2-5, A			
4	145.00 psi (10,00 bar)	90.00 psi (6,21 bar)	90.00 psi (6,21 bar)
6	12.00 psi (0,83 bar)	7.50 psi (5,17 bar)	7.50 psi (5,17 bar)
7	60.00 psi (4,14 bar)	37.50 psi (2,59 bar)	37.50 psi (2,59 bar)
Allowable static pressure ranges for DP Range 1			
3	32.00 psi (2,21 bar)	20.00 psi (1,38 bar)	N/A
4	145.00 psi (10,00 bar)	90.00 psi (6,21 bar)	N/A

(1) For Extended Range (Code A), the Maximum Span Limit (MSL) is 250 inH_2O (0,62 bar)

Transmitter with single variable coplanar sensor module (measurement types 3, 4, 5, and 7)

DP/GP range	Standard	Enhanced	Enhanced for Flow(1)
1	1.0 inH_2O (2,49 mbar)	0.5 inH_2O (1,24 mbar)	N/A
2	5.0 inH_2O (12,43 mbar)	2.5 inH_2O (6,22 mbar)	2.5 inH_2O (6,22 mbar)
3	20.0 inH_2O (49,73 mbar)	10.0 inH_2O (24,86 mbar)	5.0 inH_2O (12,43 mbar)
4	6.0 psi (0,41 bar)	3.0 psi (0,21 bar)	N/A
5	40.0 psi (2,76 bar)	20.0 psi (1,38 bar)	N/A

(1) Only available for differential pressure sensors (Measurement Types 3 and 4).

Transmitter with coplanar absolute pressure sensor module (measurement types 5 and 7)

AP range	Standard	Enhanced
0	0.3 psia (20,68 mbar)	0.3 psia (20,68 mbar)
1	0.6 psia (41,37 mbar)	0.3 psia (20,68 mbar)
2	3.0 psia (0,21 bar)	1.5 psia (0,10 bar)
3	16.0 psia (1,10 bar)	8.0 psia (0,55 bar)
4	80 psia (5,52 bar)	40 psia (2,76 bar)

Transmitter with in-line sensor module (measurement types 6 and 8)

GP/AP range	Standard	Enhanced
1	0.6 psi (41,37 mbar)	0.3 psi (20,68 mbar)
2	3.0 psi (0,21 bar)	1.5 psi (0,10 bar)
3	16.0 psi (1,10 bar)	8.0 psi (0,55 bar)
4	80 psi (5,52 bar)	40 psi (2,76 bar)
5	4000 psi (275,79 bar)	2000 psi (137,89 bar)

Process temperature RTD interface

Temperature element	Minimum span
RTD Interface	50 °F (27.78 °C)

A.2.4 Digital communication protocol

The Rosemount 4088 MultiVariable™ Transmitter has multiple output protocols available. The Rosemount 4088A communicates via Modbus® (RS-485) with 8 data bits, one stop bit, and no parity. Baud rates supported are 1200, 2400, 4800, 9600, and 19200.

The Rosemount 4088B communicates via MVS 205 and Bristol® Standard Asynchronous/ Synchronous Protocol (BSAP).

Both the 4088A and 4088B have a HART® port that is only available for configuration. This port conforms to the HART Revision 7 Specifications.

A.2.5 Power supply

External power supply required for 4088:

V_{min} (V)	V_{max} (V)
5.4	30

The maximum average current is I_{max} (mA) = 4.6mA @ 5.4VDC. This includes RS-485 communication at a rate of once per second and no HART communication.

A.2.6 Overpressure limits

Transmitter will withstand the following limits without damage.

Transmitter with MultiVariable sensor module (measurement types 1 and 2)

AP/GP Range	Differential pressure range					
	1	**2**	**3**	**4**	**5**	**A**
3	1600 psi (110,32 bar)	N/A	N/A	N/A	N/A	N/A
4	2000 psi (137,89 bar)	3626 psi (250,00 bar)	3626 psi (250,00 bar)	3626 psi (250,00 bar)	3626 psi (250,00 bar)	N/A
6	N/A	1600 psi (110,32 bar)	1600 psi (110,32 bar)	N/A	N/A	1600 psi (110,32 bar)
7	N/A	3626 psi (250,00 bar)	3626 psi (250,00 bar)	N/A	N/A	3626 psi (250,00 bar)

Transmitter with single variable sensor module (measurement types 3, 4, 5, 6, 7, and 8)

Range	Inline style	Coplanar style absolute	Coplanar style gage	Coplanar style DP
0	N/A	60 psia (4,14 bar)	N/A	N/A
1	750 psi (51,71 bar)	750 psia (51,71 bar)	2000 psi (137,89 bar)	2000 psi (137,89 bar)
2	1500 psi (103,42 bar)	1500 psia (103,42 bar)	3626 psi (250,00 bar)	3626 psi (250,00 bar)
3	1600 psi (110,32 bar)	1600 psia (110,32 bar)	3626 psi (250,00 bar)	3626 psi (250,00 bar)
4	6000 psi (413,69 bar)	6000 psia (413,69 bar)	3626 psi (250,00 bar)	3626 psi (250,00 bar)
5	15000 psi (1034,21 bar)	N/A	3626 psi (250,00 bar)	3626 psi (250,00 bar)

A.2.7 Static pressure limits

Operates within specifications between static line pressures of 0.5 psia (0,03 bar) and the values in the tables below.

Transmitter with MultiVariable sensor module (measurement types 1 and 2)

DP Range	Static pressure range (GP/AP)			
	3	**4**	**6**	**7**
1	800 psi (55,15 bar)	2000 psi (137,89 bar)	N/A	N/A
2	N/A	3626 psi (250,00 bar)	300 psi (20,68 bar)	1500 psi (103,42 bar)
3	N/A	3626 psi (250,00 bar)	300 psi (20,68 bar)	1500 psi (103,42 bar)
4	N/A	3626 psi (250,00 bar)	N/A	N/A
5	N/A	3626 psi (250,00 bar)	N/A	N/A
Extended Range (Code A)	N/A	N/A	300 psi (20,68 bar)	1500 psi (103,42 bar)

Transmitter with single variable coplanar sensor module (measurement types 3, 4, 5, and 7)

Range	DP Sensor[1]
0	N/A
1	2000 psi (137,89 bar)
2	3626 psi (250,00 bar)
3	3626 psi (250,00 bar)
4	3626 psi (250,00 bar)
5	3626 psi (250,00 bar)

(1) The static pressure limit of a DP Sensor with the P9 option is 4500 psi (310,30 bar).
The static pressure limit of a DP Sensor with the P0 option is 6092 psi (420,00 bar).

A.2.8 Burst pressure limits

Coplanar sensor module (measurement types 1, 2, 3, 4, 5, and 7)[1][2]

10000 psi (689,47 bar)

(1) 12250 psi (844,61 bar) is the Coplanar sensor module burst pressure limit with option code P9.
(2) 16230 psi (1119,02 bar) is the Coplanar sensor module burst pressure limit with option code P0.

In-Line sensor module (measurement types 6 and 8)

Ranges 1-4: 11000 psi (758,42 bar)

Range 5: 26000 psi (1792,64 bar)

A.2.9 Maximum working pressure limits

Maximum working pressure is the maximum pressure allowed for normal transmitter operation. For a differential pressure transmitter, the maximum working pressure is the static line pressure

under which the transmitter can safely operate. If one side of the transmitter is exposed to the full static line pressure due to mis-valving, the transmitter will experience an output shift and must be re-zeroed. For a gage or absolute pressure transmitter, the maximum working pressure is the same as the Upper Sensor Limit (USL). The maximum working pressure of transmitters with assembled process connection options is limited by the lowest maximum pressure rating of the individual components.

Transmitter with MultiVariable sensor module (measurement types 1 and 2)

DP Range	Static pressure range (GP/AP)			
	3	**4**	**6**	**7**
1	800 psi (55,15 bar)	2000 psi (137,89 bar)	N/A	N/A
2	N/A	3626 psi (250,00 bar)	300 psi (20,68 bar)	1500 psi (103,42 bar)
3	N/A	3626 psi (250,00 bar)	300 psi (20,68 bar)	1500 psi (103,42 bar)
4	N/A	3626 psi (250,00 bar)	N/A	N/A
5	N/A	3626 psi (250,00 bar)	N/A	N/A
Extended Range (Code A)	N/A	N/A	300 psi (20,68 bar)	1500 psi (103,42 bar)

Transmitter with single variable sensor module (measurement types 3, 4, 5, 6, 7, and 8)

Range	Coplanar differential pressure[1] (measurement types 3 and 4)	Coplanar gage pressure (measurement types 5 and 7)	Coplanar absolute pressure (measurement types 5 and 7)	In-Line absolute pressure (measurement types 6 and 8)	In-Line gage pressure (measurement types 6 and 8)
0	N/A	N/A	5 psia (0,35 bar)	N/A	N/A
1	2000 psi (137,89 bar)	0.9 psi (0,06 bar)	30 psia (2,06 bar)	30 psia (2,06 bar)	30 psi (2,06 bar)
2	3626 psi (250,00 bar)	9 psi (0,62 bar)	150 psia (10,34 bar)	150 psia (10,34 bar)	150 psi (10,34 bar)
3	3626 psi (250,00 bar)	36 psi (2,48 bar)	800 psia (55,15 bar)	800 psia (55,15 bar)	800 psi (55,15 bar)
4	3626 psi (250,00 bar)	300 psi (20,68 bar)	4000 psia (275,79 bar)	4000 psia (275,79 bar)	4000 psi (275,79 bar)
5	3626 psi (250,00 bar)	2000 psi (137,89 bar)	N/A	10000 psia (689,47 bar)	10000 psi (689,47 bar)

(1) The maximum working pressure limit of a DP Sensor with the P9 option is 4500 psi (310,30 bar). The maximum working pressure limit of a DP Sensor with the P0 option is 6092 psi (420,00 bar).

A.2.10 Temperature limits

Ambient

-40 to 185 °F (-40 to 85 °C)
With LCD display[1]: -40 to 176 °F (-40 to 80 °C)
With option code P0: -20 to 185 °F (-29 to 85 °C)

(1) LCD display may not be readable and LCD display updates will be slower at temperatures below -4 °F (-20 °C).

Storage

-50 to 185 °F (-46 to 85 °C)
With LCD display: -40 to 185 °F (-40 to 85 °C)

Process temperature limits

At atmospheric pressures and above:

Coplanar sensor module (measurement types 1, 2, 3, 4, 5, and 7)	
Silicone Fill Sensor(1)(2)	
with Coplanar Flange	-40 to 250 °F (-40 to 121 °C)(3)
with Traditional Flange	-40 to 300 °F (-40 to 149 °C)(3)(4)
with Level Flange	-40 to 300 °F (-40 to 149 °C)(3)
with 305 Integral Manifold	-40 to 300 °F (-40 to 149 °C)(3)(4)
Inert Fill Sensor(1)(5)	-40 to 185 °F (-40 to 85 °C)(6)(7)
In-Line sensor module (measurement types 6 and 8)	
Silicone Fill Sensor(1)	-40 to 250 °F (-40 to 121 °C)(3)
Inert Fill Sensor(1)	-22 to 250 °F (-30 to 121 °C)(3)

(1) Process temperatures above 185 °F (85 °C) require derating the ambient limits by a 1.5:1 ratio. For example, for process temperature of 195 °F (91 °C), new ambient temperature limit is equal to 170 °F (77 °C). This can be determined as follows:
(195 °F - 185 °F) x 1.5 = 15 °F,
185 °F - 15 °F = 170 °F
(2) 212 °F (100 °C) is the upper process temperature limit for DP Range 0.
(3) 220 °F (104 °C) limit in vacuum service; 130 °F (54 °C) for pressures below 0.5 psia.
(4) -20 °F (-29 °C) is the lower process temperature limit with option code P0.
(5) 32 °F (0 °C) is the lower process temperature limit for DP Range 0.
(6) For Measurement Types 3, 4, 5, and 7 there is a 160 ° F (71 °C) limit in vacuum service.
For Measurement Types 1 and 2 there is a 140 ° F (60 °C) limit in vacuum service.
(7) Not available Measurement Types 5 and 7 with an absolute static pressure sensor.

A.2.11 Humidity limits

0 to 100% relative humidity

A.2.12 Turn-on time

Transmitter performance will be within specifications within 5 seconds of power being applied.

A.2.13 Volumetric displacement

Less than 0.005 in^3 (0,08 cm^3)

A.2.14 Damping

Output response time to a step change is user-selectable from 0 to 60 seconds for one time constant. Each measured variable (Differential Pressure, Static Pressure, and Process Temperature) can be individually adjusted. Software damping is in addition to sensor module response time.

A.3 Physical specifications

A.3.1 Material selection

Emerson provides a variety of Rosemount products with various product options and configurations including materials of construction that can be expected to perform well in a wide range of applications. The Rosemount product information presented is intended as a guide for the purchaser to make an appropriate selection for the application. It is the purchaser's sole responsibility to make a careful analysis of all process parameters (such as all chemical components, temperature, pressure, flow rate, abrasives, contaminants, etc.), when specifying product materials, options, and components for the particular application. Emerson Process Management is not in a position to evaluate or guarantee the compatibility of the process fluid or other process parameters with the product, options, configuration or materials of construction selected.

A.3.2 Electrical connections

1/2–14 NPT and M20 × 1.5 conduit; Modbus or BSAP/MVS interface connections fixed to terminal block.

A.3.3 Process connections

Coplanar sensor module (measurement types 1, 2, 3, 4, 5, and 7)	
Standard	1/4-18 NPT on 2 1/8-in. centers
Flange Adapters	1/2-14 NPT on 2-in. (50.8 mm), 2 1/8-in. (54.0 mm), or 2 1/4-in. (57.2 mm) centers
In-Line sensor module (measurement types 6 and 8)	
Standard	1/2-14 NPT Female

A.3.4 Process-wetted parts

Process isolating diaphragms

Coplanar sensor module (measurement types 1, 2, 3, 4, 5, and 7)
316L SST (UNS S31603), Alloy C-276 (UNS N10276), Alloy 400 (UNS N04400)
In-Line sensor module (measurement types 6 and 8)
316L SST (UNS S31603), Alloy C-276 (UNS N10276)

Drain/vent valves

316 SST or Alloy C-276 material

Process flanges and flange adapters

Plated carbon steel

SST: CF-8M (Cast 316 SST) per ASTM A743

Cast C-276: CW-12MW per ASTM A494

Wetted O-rings

Glass-filled PTFE

A.3.5 Non-wetted parts

Electronics housing

Low-copper aluminum alloy or CF-8M (Cast 316 SST)

NEMA 4X, IP 66, IP 68 (66 ft [20 m] for 168 hours)

Sensor module housing

SST: CF-3M (Cast 316L SST)

Bolts

Plated carbon steel per ASTM A449, Type 1

Austenitic 316 SST per ASTM F593

ASTM A453, Class D, Grade 660 SST

ASTM A193, Grade B7M alloy steel

ASTM A193, Class 2, Grade B8M SST

Alloy K-500

Sensor module fill fluid

Silicone or inert halocarbon (inert not available with coplanar absolute pressure sensors). Inert for in-line series uses Fluorinert® FC-43.

Paint for aluminum housing

Polyurethane

Cover O-rings

Buna-N

A.3.6 Shipping weights

Sensor module weights(1)

Coplanar sensor module
3.1 lb (1,4 kg)
In-Line sensor module
1.4 lb (0,6 kg)

(1) Flange and bolts not included.

Transmitter weights[1]

Transmitter with coplanar sensor module (measurement types 1, 2, 3, 4, 5, and 7)	
Aluminum housing, SST Flange	5.39 lb (2,44 kg)
Transmitter with in-line sensor module (measurement types 6 and 8)	
Aluminum housing	3.65 lb (1,66 kg)

(1) Fully functional transmitter with sensor module, housing, terminal block, and covers. Does not include LCD display.

Transmitter option weights

Option code	Option	Add lb (kg)
1J, 1K	Stainless Steel housing	1.9 (1,1)
M5	LCD display for Aluminum housing[1] LCD display for Stainless Steel housing[1]	0.3 (0,1) 0.2 (0,1)
B4	SST Mounting Bracket for Coplanar Flange	1.2 (0,5)
B1, B7	Mounting Bracket for Traditional Flange	1.7 (0,8)
B2, B8	Mounting Bracket for Traditional Flange with SST Bolts	1.3 (0,6)
B3, B9	Flat Mounting Bracket for Traditional Flange	1.7 (0,8)
BA, BC	SST Bracket for Traditional Flange	1.6 (0,7)
B4	SST Mounting Bracket for In-Line Configuration	1.3 (0,6)
F12	SST Traditional Flange with SST Drain Vents[2]	3.2 (1,5)
F13	Cast C-276 Traditional Flange with Alloy C-276 Drain Vents[2]	3.6 (1,6)
E12	SST Coplanar Flange with SST Drain Vents[2]	1.9 (0,9)
F15	SST Traditional Flange with Alloy C-276 Drain Vents[2]	3.2 (1,5)

(1) Includes LCD display and display cover.
(2) Includes mounting bolts.

Transmitter component weights


Item	Weight in lb. (kg)
Aluminum Standard Cover	0.4 (0,2)
SST Standard Cover	1.3 (0,6)
Aluminum Display Cover	0.7 (0,3)
SST Display Cover	1.5 (0,7)
LCD Display[1]	0.1 (0,04)
Terminal Block	0.2 (0,1)

(1) Display only

A.4 Dimensional drawings


Process adapters (option D2) and Rosemount 305 Integral Manifolds must be ordered with the transmitter.

Figure A-1. Transmitter with Coplanar Sensor Module and Coplanar Flange

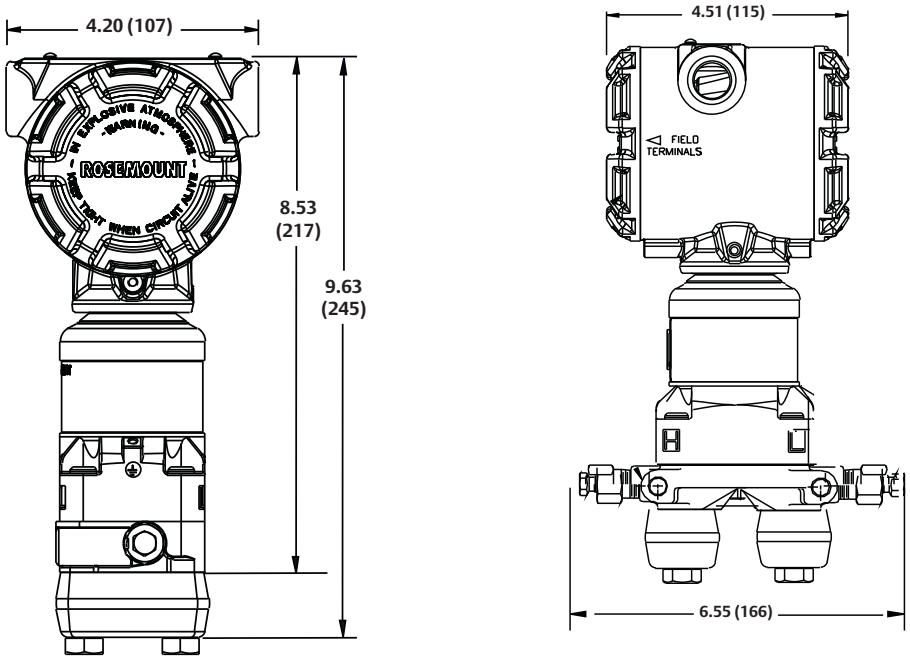


Dimensions are in inches (millimeters).

Figure A-2. Transmitter with Coplanar Sensor Module and Traditional Flange

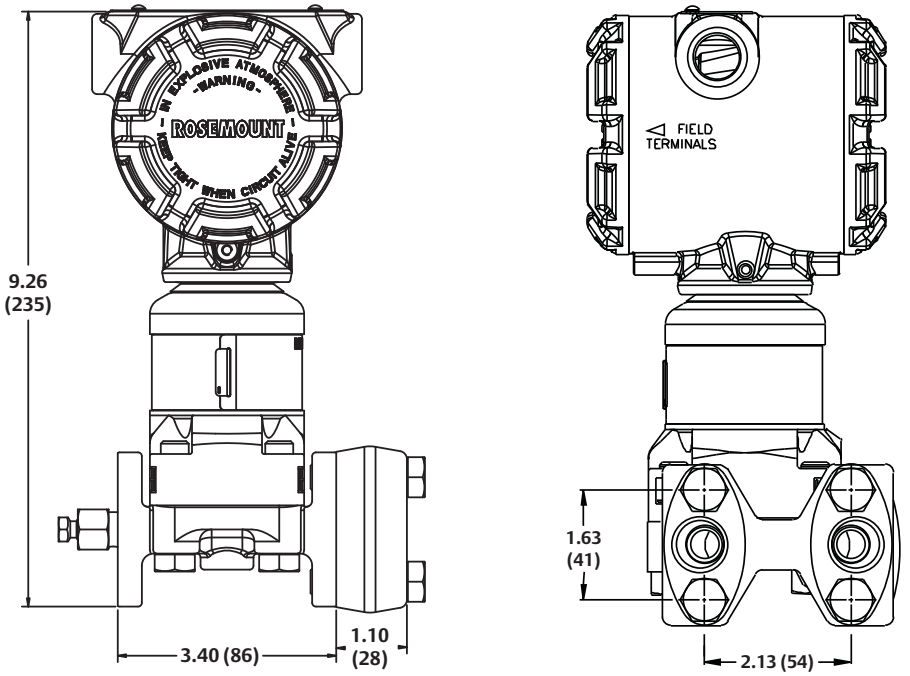


Dimensions are in inches (millimeters).

Figure A-3. Transmitter with In-Line Sensor Module

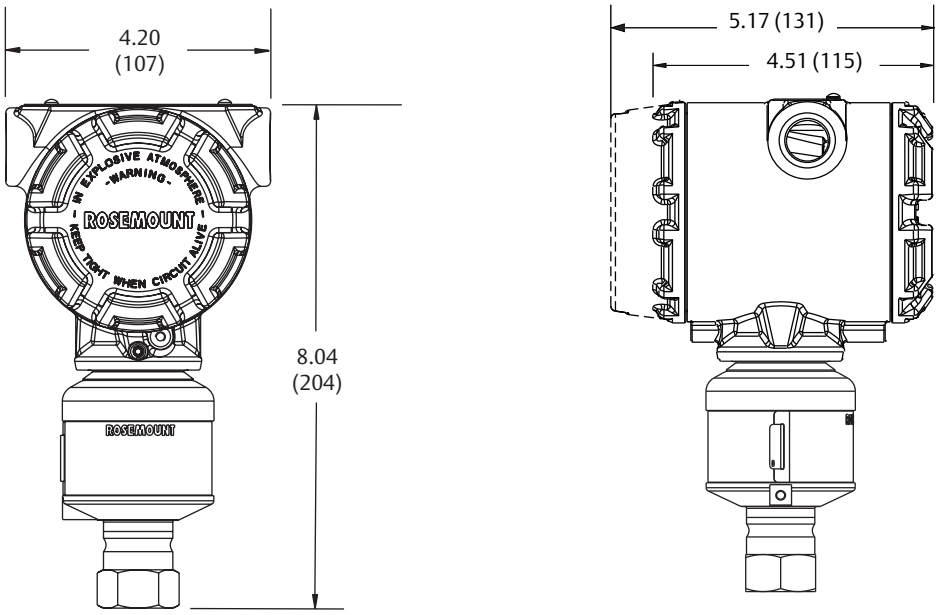


Dimensions are in inches (millimeters).

Figure A-4. Coplanar Flange Mounting Configurations

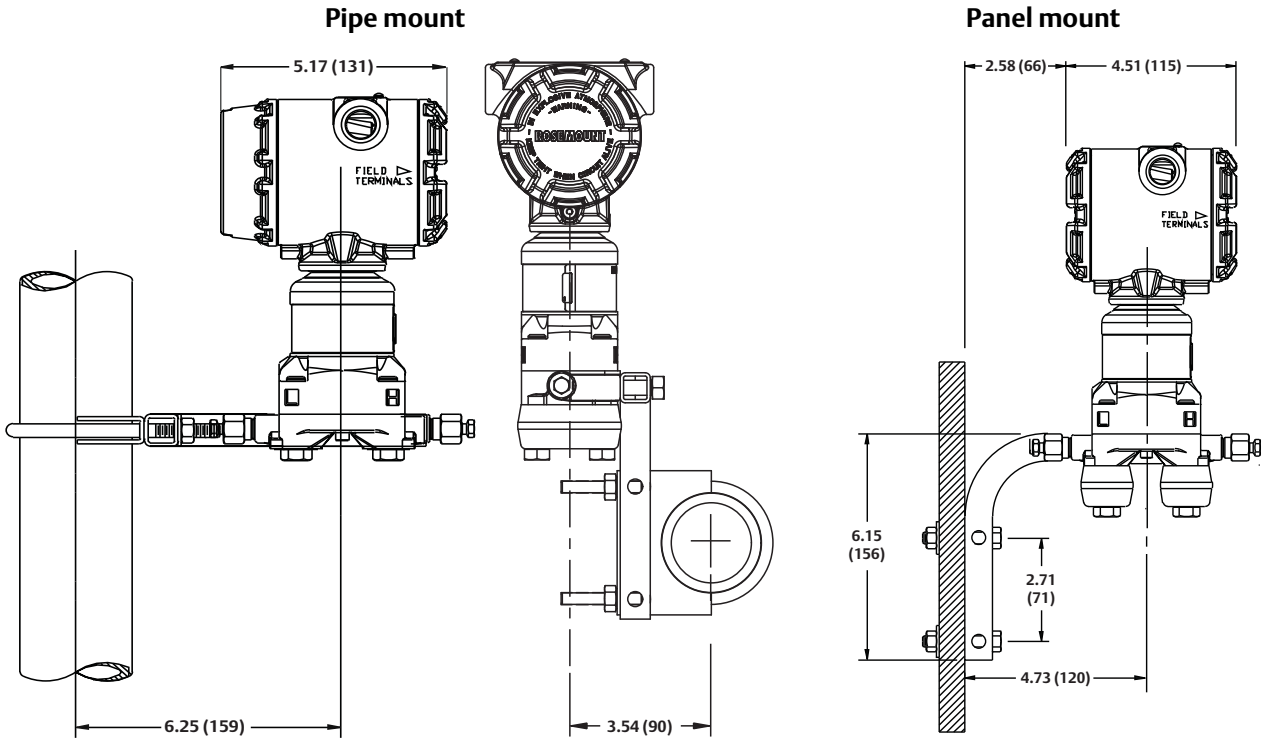


Dimensions are in inches (millimeters).

Figure A-5. Traditional Flange Mounting Configurations

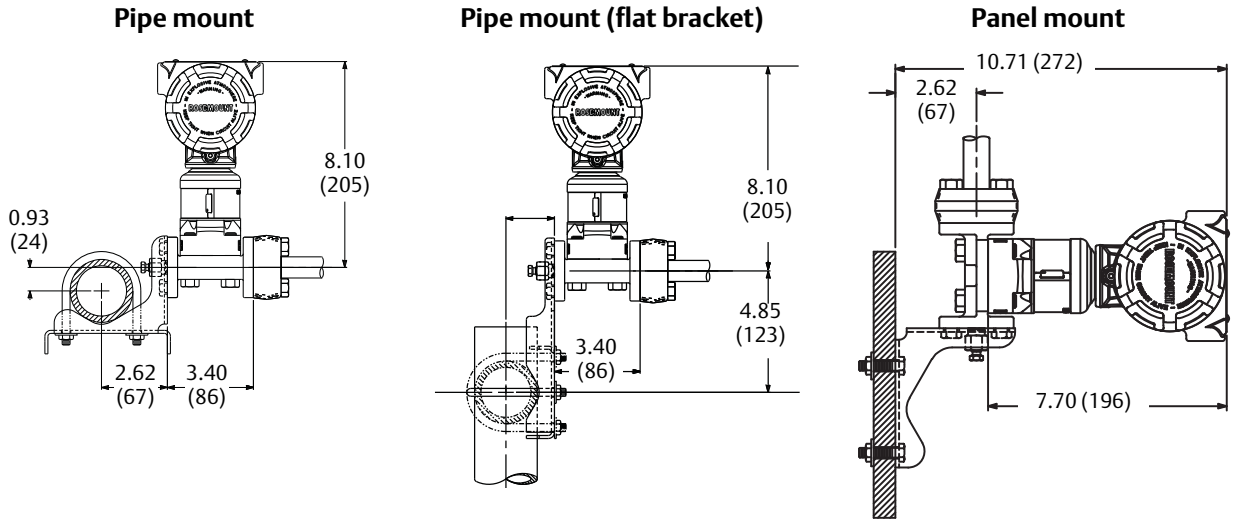

Dimensions are in inches (millimeters).

Figure A-6. In-Line Mounting Configurations

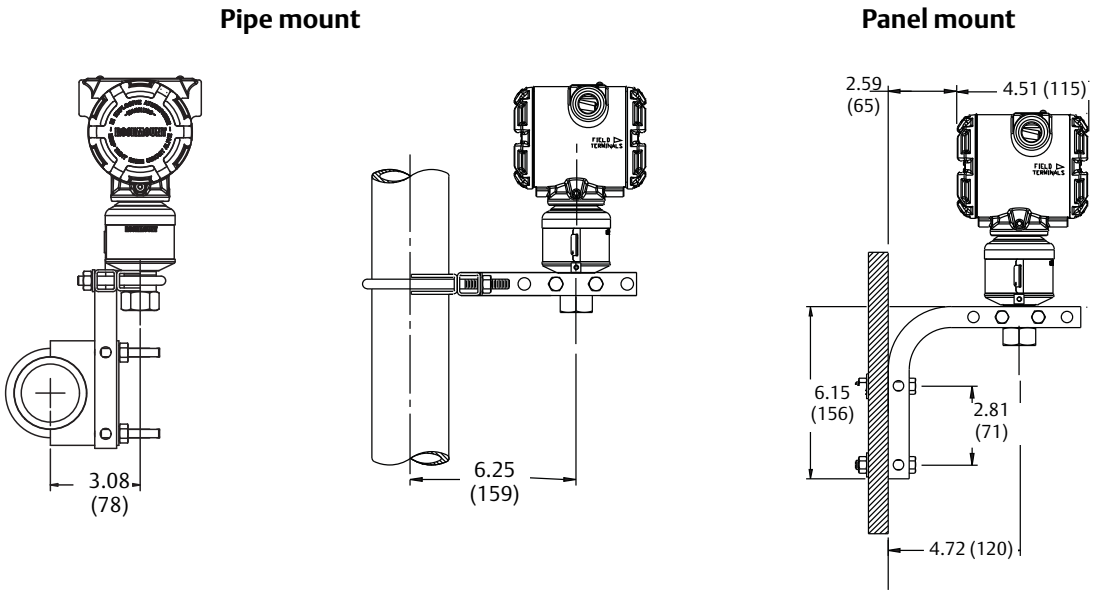

Dimensions are in inches (millimeters).

A.5 Ordering information

Specification and selection of product materials, options, or components must be made by the purchaser of the equipment. See page 127 for more information on Material Selection.

Table A-1. Rosemount 4088 MultiVariable Transmitter with Differential Pressure Sensor Configurations

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Model	Transmitter type			
4088	MultiVariable Pressure Transmitter			
Transmitter register mapping				
A	Modbus Protocol			★
B	Remote Automation Solutions Ready			★
Performance class[1]				
1	Enhanced: 0.075% Span DP Accuracy			★
3[2]	Enhanced for Flow: 0.05% Reading DP Accuracy			★
2	Standard: 0.1% Span DP Accuracy			★
MultiVariable type				
P	MultiVariable Measurement with Direct Process Variable Output			★
Measurement type				
1	Differential Pressure, Static Pressure, and Temperature			★
2	Differential Pressure and Static Pressure			★
3	Differential Pressure and Temperature			★
4	Differential Pressure			★
Differential pressure range				
1	-25 to 25 inH_2O (-62,16 to 62,16 mbar)			★
2	-250 to 250 inH_2O (-621,60 to 621,60 mbar)			★
A[3]	Extended Range Capability: 0 to 250 inH_2O (0 to 621,60 mbar)			★
3	-1000 to 1000 inH_2O (-2,49 to 2,49 bar)			★
4[4]	-150 to 150 psi (-10,34 to 10,34 bar) for Measurement Types 1 and 2; -300 to 300 psi (-20,68 to 20,68 bar) for Measurement Types 3 and 4			★
5[4]	-2000 to 2000 psi (-137,89 to 137,89 bar)			★
Static pressure type				
N[5]	None			★
A	Absolute			★
G	Gage			★
Static pressure range		**Absolute (A)**	**Gage (G)**	
N[5]	None			★
6[6]	Range 6	0.5 to 300 psia (0, 03 to 20,68 bar)	-14.2 to 300 psi (-0,98 to 20,68 bar)	★

Table A-1. Rosemount 4088 MultiVariable Transmitter with Differential Pressure Sensor Configurations

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

3[7]	Range 3	0.5 to 800 psia (0,03 to 55,15 bar)		-14.2 to 800 psi (-0,98 to 55,15 bar)		★
7[6]	Range 7	0.5 to 1500 psia (0, 03 to 103,42 bar)		-14.2 to 1500 psi (-0,98 to 103,42 bar)		★
4[8]	Range 4	0.5 to 3626 psia (0,03 to 250,00 bar)		-14.2 to 3626 psi (-0,98 to 250,00 bar)		★
Temperature input						
N[9]	None					★
R[10]	RTD Input (Type Pt 100, -328 to 1562 Deg F [-200 to 850 Deg C])					★
Isolating diaphragm						
2[11]	316L SST					★
3[11]	Alloy C-276					★
Process connection		**Conn size**	**Material type**			
			Flange material	**Drain vent**	**Bolting**	
A11[12][13]	Assemble to 305 Manifold Integral Manifold					★
A12[12]	Assemble to 304 or AMF Manifold with 316 SST Traditional Flange					★
C11[12]	Assemble to Model 405C or 405P Primary Element					★
D11[12]	Assemble to Rosemount 1195 Integral Orifice and Rosemount 305 Manifold					★
EA2[12]	Assemble to Model 485 or 405A Annubar Primary Element with Coplanar Flange		316 SST	316 SST		★
E11	Coplanar flange	1/4–18 NPT	Carbon Steel	316 SST		★
E12	Coplanar flange	1/4–18 NPT	316 SST	316 SST		★
E13[11]	Coplanar flange	1/4–18 NPT	Cast C-276	Alloy C-276		★
E15[11]	Coplanar flange	1/4–18 NPT	316 SST	Alloy C-276		★
E16[11]	Coplanar flange	1/4–18 NPT	Carbon Steel	Alloy C-276		★
F12	Traditional flange	1/4–18 NPT	316 SST	316 SST		★
F13[11]	Traditional flange	1/4–18 NPT	Cast C-276	Alloy C-276		★
F15[11]	Traditional flange	1/4–18 NPT	316 SST	Alloy C-276		★
F52	DIN-compliant traditional flange	1/4–18 NPT	316 SST	316 SST	7/16-in. bolting	★
Housing style				**Conduit entry size**		
1A	Polyurethane-Covered Aluminum Housing			1/2–14 NPT		★
1B	Polyurethane-Covered Aluminum Housing			M20 x 1.5 (CM20)		★
1J	Stainless Steel Housing			1/2–14 NPT		★
1K	Stainless Steel Housing			M20 x 1.5 (CM20)		★

Table A-1. Rosemount 4088 MultiVariable Transmitter with Differential Pressure Sensor Configurations

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Options (include with selected model number)

Extended product warranty					
WR3	3-year limited warranty				★
WR5	5-year limited warranty				★
RTD cable (RTD Sensor must be ordered separately)			**Cable length**	**Protection type**	
C12	RTD Input		12 ft. (3.66 m)	Shielded Cable	★
C13	RTD Input		24 ft. (7.32 m)	Shielded Cable	★
C14	RTD Input		75 ft. (22.86 m)	Shielded Cable	★
C22	RTD Input		12 ft. (3.66 m)	Armored Shielded Cable	★
C23	RTD Input		24 ft. (7.32 m)	Armored Shielded Cable	★
C24	RTD Input		75 ft. (22.86 m)	Armored Shielded Cable	★
C32	RTD Input		12 ft. (3.66 m)	ATEX/IECEx Flameproof Cable	★
C33	RTD Input		24 ft. (7.32 m)	ATEX/IECEx Flameproof Cable	★
C34	RTD Input		75 ft. (22.86 m)	ATEX/IECEx Flameproof Cable	★
Mounting brackets[13]		**Bracket material**	**Pipe/panel**	**Bolt material**	
B4	Coplanar flange bracket	SST	2-in. pipe and panel	SST	★
B1	Traditional flange bracket	Carbon Steel	2-in. pipe	N/A	★
B2	Traditional flange bracket	Carbon Steel	Panel	N/A	★
B3	Traditional flange flat bracket	Carbon Steel	2-in. pipe	N/A	★
B7	Traditional flange bracket B1	Carbon Steel	2-in. pipe	SST	★
B8	Traditional flange bracket B2	Carbon Steel	Panel	SST	★
B9	Traditional flange flat bracket B3	Carbon Steel	2-in. pipe	SST	★
BA	Traditional flange bracket B1	SST	2-in. pipe	SST	★
BC	Traditional flange flat bracket B3	SST	2-in. pipe	SST	★
Software configuration					
C1[14]	Custom software configuration Note: A Configuration Data Sheet must be completed.				★
Process adapters					
D2	1/2–14 NPT process adapters				★
Custody transfer					
D3	Measurement Canada Accuracy Approval				★

Table A-1. Rosemount 4088 MultiVariable Transmitter with Differential Pressure Sensor Configurations

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

External ground screw assembly		
D4[15]	External ground screw assembly	★
Drain/vent valve		
D5[16]	Delete transmitter drain/vent valves (install plugs)	★
Conduit plug		
DO[17]	316 SST Conduit Plug	★
Product certifications[19]		
E1	ATEX Flameproof	★
I1	ATEX Intrinsic Safety	★
N1	ATEX Type n	★
ND	ATEX Dust	★
K1	ATEX Flameproof, Intrinsic Safety, Type n, Dust (combination of E1, I1, N1, and ND)	★
E5	FM Explosion-proof, Dust Ignition-proof, Division 2	★
I5	FM Intrinsically Safe, Division 2	★
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E5 and I5)	★
E6[18]	CSA Explosion-proof, Dust Ignition-proof, Division 2	★
I6	CSA Intrinsically Safe	★
K6[18]	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E6 and I6)	★
E7	IECEx Flameproof	★
I7	IECEx Intrinsic Safety	★
N7	IECEx Type n	★
K7	IECEx Flameproof, Intrinsic Safety, and Type n (combination of E7, I7, and N7)	★
E2	INMETRO Flameproof	★
I2	INMETRO Intrinsic Safety	★
K2	INMETRO Flameproof, Intrinsic Safety (combination of E2 and I2)	★
KA[18]	ATEX & CSA Explosion-proof, Intrinsically Safe, Division 2 (combination E1, E6, I1, and I6)	★
KB[18]	FM & CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination E5, I5, E6, and I6)	★
KC	FM & ATEX Explosion-proof, Intrinsically Safe, Division 2 (combination E5, I5, E1, and I1)	★
KD[18]	FM, CSA, & ATEX Explosion-proof, Intrinsically Safe (combination E5, E6, E1, I5, I6, and I1)	★
Sensor fill fluid		
L1	Inert sensor fill fluid (Not available with an Absolute static pressure type)	★
O-ring		
L2	Graphite-filled PTFE O-ring	★

Table A-1. Rosemount 4088 MultiVariable Transmitter with Differential Pressure Sensor Configurations

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Bolting material		
L4	Austenitic 316 SST bolts	★
L5	ASTM A193, Grade B7M bolts	★
L6	Alloy K-500 bolts	★
L7	ASTM A453, Class D, Grade 660 bolts	★
L8	ASTM A193, Class 2, Grade B8M bolts	★
Digital display		
M5	LCD Display	★
Pressure testing		
P1	Hydrostatic testing with certificate	★
Cleaning process area		
P2[(16)]	Cleaning for special services	
P3[(16)]	Cleaning for special services with testing for <1PPM chlorine/fluorine	
Maximum static line pressure		
P9	4500 psi (310 bar) static pressure limit Note: Requires Measurement Type 3 or 4	★
P0	6092 psi (420 bar) static pressure limit Note: Requires Measurement Type 3 or 4	★
Calibration data certification		
Q4	Calibration certificate	★
QP	Calibration certificate and tamper evident seal	★
Material traceability certification		
Q8	Material traceability certification per EN 10204 3.1B	★
NACE certificates[(20)]		
Q15	Certificate of Compliance to NACE MR0175/ISO15156 for wetted materials	★
Q25	Certificate of Compliance to NACE MR0103 for wetted materials	★
Terminal block		
T1	Transient terminal block	★

Table A-1. Rosemount 4088 MultiVariable Transmitter with Differential Pressure Sensor Configurations

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Cold temperature		
BRR	-58 °F (-50 °C) Cold Temperature Start-up	★
Typical model numbers: 4088A1P12G7R2A111AC12C1K5M5Q4Q8T1,4088B1P12G7R2A111AC12C1K5Q4Q8T1		

(1) For detailed specifications see "Performance specifications" Section on page 115.
(2) Performance Class 3 is only available with DP range 2, 3, and 4. DP Range 4 with Performance Class 3 is only available with Measurement Type 1 or 2.
(3) DP Range A is only available with Performance Class 1 and Measurement Types 1 and 2.
(4) Only available with static pressure ranges N and 4.
(5) Required for Measurement Types 3 and 4.
(6) SP Ranges 6 and 7 are only available with Measurement Types 1 or 2 and DP Range 2, 3, or A.
(7) Available with Measurement Types 1 and 2, DP Range 1, and Performance Class 1 or 2 only.
(8) Only available with Measurement Types 1 and 2. With DP range 1, absolute limits are 0.5 to 2000 psi (0,03 to 137,89 bar) and gage limits are -14.2 to 2000 psi (-0,98 to 137,89 bar).
(9) Required for Measurement Types 2 and 4.
(10) Required for Measurement Types 1 and 3. RTD Sensor must be ordered separately.
(11) Materials of Construction comply with metallurgical requirements highlighted within NACE MR0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments. Order with Q15 or Q25 to receive a NACE certificate.
(12) “Assemble to” items are specified separately and require a completed model number
(13) For process connection option code A11, the mounting bracket must be ordered as part of the manifold model number.
(14) Not available for 4088B.
(15) This assembly is included with certification options E1, N1, K1, ND, E7, N7, K7, E2, K2, KA, KC, and KD.
(16) Not available with process connection option code A11.
(17) Transmitter is shipped with 316 SST conduit plug (uninstalled) in place of standard carbon steel conduit plug.
(18) Not available with M20 conduit entry size.
(19) Product certifications will not drive explosion-proof RTD cable fitting, glands, or adapters.
(20) NACE compliant wetted materials are identified by Footnote 11.

Specification and selection of product materials, options, or components must be made by the purchaser of the equipment. See page 127 for more information on Material Selection.

Table A-2. Rosemount 4088 MultiVariable Transmitter with Coplanar Static Pressure Sensor Configurations

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Model	Transmitter type			
4088	MultiVariable Pressure Transmitter			
Transmitter register mapping				
A	Modbus Protocol			★
B	Remote Automation Solutions Ready			★
Performance class[1]				
1	Enhanced: 0.075% Span Accuracy			★
2	Standard: 0.1% Span Accuracy			★
MultiVariable type				
P	MultiVariable Measurement with Direct Process Variable Output			★
Measurement type				
5	Static Pressure and Temperature - Coplanar Style			★
7	Static Pressure - Coplanar Style			★
Differential pressure range				
N	None			★
Static pressure type				
A	Absolute			★
G	Gage			★
Static pressure range		**Absolute (A)**	**Gage (G)**	
0	Range 0	0 to 5 psia (0 to 0,34 bar)	N/A	★
1	Range 1	0 to 30 psia (0 to 2,06 bar)	-25 to 25 inH_2O (-62,16 to 62,16 mbar)	★
2	Range 2	0 to 150 psia (0 to 10,34 bar)	-250 to 250 inH_2O (-621,60 to 621,60 mbar)	★
3	Range 3	0 to 800 psia (0 to 55,15 bar)	-393 to 1000 inH_2O (-0,98 to 2,49 bar)	★
4	Range 4	0 to 4000 psia (0 to 275,79 bar)	-14.2 to 300 psi (-0,98 to 20,68 bar)	★
5	Range 5	N/A	-14.2 to 2000 psi (-0,98 to 137,89 bar)	★
Temperature input				
N[2]	None			★
R[3]	RTD Input (Type Pt 100, -328 to 1562 Deg F [-200 to 850 Deg C])			★
Isolating diaphragm				
2[4]	316L SST			★
3[4]	Alloy C-276			★

Table A-2. Rosemount 4088 MultiVariable Transmitter with Coplanar Static Pressure Sensor Configurations

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Process connection		Conn size	Material type			
			Flange material	Drain vent	Bolting	
A11[5][6]	Assemble to 305 Manifold Integral Manifold					★
A12[5]	Assemble to 304 or AMF Manifold with 316 SST Traditional Flange					★
E11	Coplanar flange	1/4–18 NPT	Carbon Steel	316 SST		★
E12	Coplanar flange	1/4–18 NPT	316 SST	316 SST		★
E13[4]	Coplanar flange	1/4–18 NPT	Cast C-276	Alloy C-276		★
E15[4]	Coplanar flange	1/4–18 NPT	316 SST	Alloy C-276		★
E16[4]	Coplanar flange	1/4–18 NPT	Carbon Steel	Alloy C-276		★
F12	Traditional flange	1/4–18 NPT	316 SST	316 SST		★
F13[4]	Traditional flange	1/4–18 NPT	Cast C-276	Alloy C-276		★
F15[4]	Traditional flange	1/4–18 NPT	316 SST	Alloy C-276		★
F52	DIN-compliant traditional flange	1/4–18 NPT	316 SST	316 SST	7/16-in. bolting	★
Housing style				**Conduit entry size**		
1A	Polyurethane-Covered Aluminum Housing			1/2–14 NPT		★
1B	Polyurethane-Covered Aluminum Housing			M20 x 1.5 (CM20)		★
1J	Stainless Steel Housing			1/2–14 NPT		★
1K	Stainless Steel Housing			M20 x 1.5 (CM20)		★

Options (include with selected model number)

Extended product warranty				
WR3	3-year limited warranty			★
WR5	5-year limited warranty			★
RTD cable (RTD sensor must be ordered separately)		**Cable length**	**Protection type**	
C12	RTD Input	12 ft. (3.66 m)	Shielded Cable	★
C13	RTD Input	24 ft. (7.32 m)	Shielded Cable	★
C14	RTD Input	75 ft. (22.86 m)	Shielded Cable	★
C22	RTD Input	12 ft. (3.66 m)	Armored Shielded Cable	★
C23	RTD Input	24 ft. (7.32 m)	Armored Shielded Cable	★
C24	RTD Input	75 ft. (22.86 m)	Armored Shielded Cable	★
C32	RTD Input	12 ft. (3.66 m)	ATEX/IECEx Flameproof Cable	★
C33	RTD Input	24 ft. (7.32 m)	ATEX/IECEx Flameproof Cable	★
C34	RTD Input	75 ft. (22.86 m)	ATEX/IECEx Flameproof Cable	★

Table A-2. Rosemount 4088 MultiVariable Transmitter with Coplanar Static Pressure Sensor Configurations

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Mounting brackets[6]		**Bracket material**	**Pipe/panel**	**Bolt material**	
B4	Coplanar flange bracket	SST	2-in. pipe and panel	SST	★
B1	Traditional flange bracket	Carbon Steel	2-in. pipe	N/A	★
B2	Traditional flange bracket	Carbon Steel	Panel	N/A	★
B3	Traditional flange flat bracket	Carbon Steel	2-in. pipe	N/A	★
B7	Traditional flange bracket B1	Carbon Steel	2-in. pipe	SST	★
B8	Traditional flange bracket B2	Carbon Steel	Panel	SST	★
B9	Traditional flange flat bracket B3	Carbon Steel	2-in. pipe	SST	★
BA	Traditional flange bracket B1	SST	2-in. pipe	SST	★
BC	Traditional flange flat bracket B3	SST	2-in. pipe	SST	★
Software configuration					
C1[7]	Custom software configuration Note: A Configuration Data Sheet must be completed.				★
Process adapters					
D2	1/2–14 NPT process adapters				★
Custody transfer					
D3	Measurement Canada Accuracy Approval				★
External ground screw assembly					
D4[8]	External ground screw assembly				★
Drain/vent valve					
D5[12]	Delete transmitter drain/vent valves (install plugs)				★
Conduit plug					
DO[9]	316 SST Conduit Plug				★
Product certifications[11]					
E1	ATEX Flameproof				★
I1	ATEX Intrinsic Safety				★
N1	ATEX Type n				★
ND	ATEX Dust				★
K1	ATEX Flameproof, Intrinsic Safety, Type n, Dust (combination of E1, I1, N1, and ND)				★
E5	FM Explosion-proof, Dust Ignition-proof, Division 2				★
I5	FM Intrinsically Safe, Division 2				★
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E5 and I5)				★
E6[10]	CSA Explosion-proof, Dust Ignition-proof, Division 2				★
I6	CSA Intrinsically Safe				★

Table A-2. Rosemount 4088 MultiVariable Transmitter with Coplanar Static Pressure Sensor Configurations

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

K6[10]	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E6 and I6)	★
E7	IECEx Flameproof	★
I7	IECEx Intrinsic Safety	★
N7	IECEx Type n	★
K7	IECEx Flameproof, Intrinsic Safety, and Type n (combination of E7, I7, and N7)	★
E2	INMETRO Flameproof	★
I2	INMETRO Intrinsic Safety	★
K2	INMETRO Flameproof, Intrinsic Safety (combination of E2 and I2)	★
KA[10]	ATEX & CSA Explosion-proof, Intrinsically Safe, Division 2 (combination E1, E6, I1, and I6)	★
KB[10]	FM & CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination E5, I5, E6, and I6)	★
KC	FM & ATEX Explosion-proof, Intrinsically Safe, Division 2 (combination E5, I5, E1, and I1)	★
KD[10]	FM, CSA, & ATEX Explosion-proof, Intrinsically Safe (combination E5, E6, E1, I5, I6, and I1)	★
Sensor fill fluid		
L1	Inert sensor fill fluid (not available with an Absolute static pressure type)	★
O-ring		
L2	Graphite-filled PTFE O-ring	★
Bolting material		
L4	Austenitic 316 SST bolts	★
L5	ASTM A193, Grade B7M bolts	★
L6	Alloy K-500 bolts	★
L7	ASTM A453, Class D, Grade 660 bolts	★
L8	ASTM A193, Class 2, Grade B8M bolts	★
Digital display		
M5	LCD Display	★
Pressure testing		
P1	Hydrostatic testing with certificate	★
Cleaning process area		
P2[12]	Cleaning for special services	
P3[12]	Cleaning for special services with testing for <1PPM chlorine/fluorine	
Calibration data certification		
Q4	Calibration certificate	★
QP	Calibration certificate and tamper evident seal	★
Material traceability certification		
Q8	Material traceability certification per EN 10204 3.1B	★

Table A-2. Rosemount 4088 MultiVariable Transmitter with Coplanar Static Pressure Sensor Configurations

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

NACE certificates		
Q15[13]	Certificate of Compliance to NACE MR0175/ISO15156 for wetted materials	★
Q25[13]	Certificate of Compliance to NACE MR0103 for wetted materials	★
Terminal block		
T1	Transient terminal block	★
Cold temperature		
BRR	-58 °F (-50 °C) Cold Temperature Start-up	★
Typical model numbers: 4088A1P5NG2R2E111AC12B4E5M5, 4088B1P5NG2R2E111AC12B4E5M5		

(1) For detailed specifications see "Performance specifications" Section on page 115.
(2) Required for Measurement Type 7.
(3) Required for Measurement Type 5. RTD Sensor must be ordered separately.
(4) Materials of Construction comply with metallurgical requirements highlighted within NACE MR0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments. Order with Q15 or Q25 to receive a NACE certificate.
(5) "Assemble to" items are specified separately and require a completed model number.
(6) For process connection option code A11, the mounting bracket must be ordered as part of the manifold model number.
(7) Not available for 4088B.
(8) This assembly is included with certification options E1, N1, K1, ND, E7, N7, K7, E2, K2, KA, KC, and KD.
(9) Transmitter is shipped with 316 SST conduit plug (uninstalled) in place of standard carbon steel conduit plug.
(10) Not available with M20 conduit entry size.
(11) Product certifications will not drive explosion-proof RTD cable fitting, glands, or adapters.
(12) Not available with Process Connection A11.
(13) NACE compliant wetted materials are identified by Footnote 4.

Specification and selection of product materials, options, or components must be made by the purchaser of the equipment. See page 127 for more information on Material Selection.

Table A-3. Rosemont 4088 MultiVariable Transmitter with In-Line Static Pressure Sensor Configurations

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Model	Transmitter type			
4088	MultiVariable Pressure Transmitter			
Transmitter register mapping				
A	Modbus Protocol			★
B	Remote Automation Solutions Ready			★
Performance class[1]				
1	Enhanced: 0.075% Span Accuracy			★
2	Standard: 0.1% Span Accuracy			★
MultiVariable type				
P	MultiVariable Measurement with Direct Process Variable Output			★
Measurement type				
6	Static Pressure and Temperature - In-line style			★
8	Static Pressure - In-Line Style			★
Differential pressure range				
N	None			★
Static pressure type				
A	Absolute			★
G	Gage			★
Static pressure range		**Absolute (A)**	**Gage (G)**	
1	Range 1	0 to 30 psia (0 to 2,06 bar)	-14.7 to 30 psi (-1,01 to 2,06 bar)	★
2	Range 2	0 to 150 psia (0 to 10,34 bar)	-14.7 to 150 psi (-1,01 to 10,34 bar)	★
3	Range 3	0 to 800 psia (0 to 55,15 bar)	-14.7 to 800 psi (-1,01 to 55,15 bar)	★
4	Range 4	0 to 4000 psia (0 to 275,79 bar)	-14.7 to 4000 psi (-1,01 to 275,79 bar)	★
5	Range 5	0 to 10000 psia (0 to 689,47 bar)	-14.7 to 10000 psi (-1,01 to 689,47 bar)	★
Temperature input				
N[2]	None			★
R[3]	RTD Input (Type Pt 100, -328 to 1562 Deg F [-200 to 850 Deg C])			★

Table A-3. Rosemount 4088 MultiVariable Transmitter with In-Line Static Pressure Sensor Configurations

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.
The Expanded offering is subject to additional delivery lead time.

Isolating diaphragm			
2[4]	316L SST		★
3[4]	Alloy C-276		★
Process connection			
A11[5]	Assemble to 306 Manifold Integral Manifold		★
K11	1/2–14 NPT female		★
Housing style		**Conduit entry size**	
1A	Polyurethane-Covered Aluminum Housing	1/2–14 NPT	★
1B	Polyurethane-Covered Aluminum Housing	M20 x 1.5 (CM20)	★
1J	Stainless Steel Housing	1/2–14 NPT	★
1K	Stainless Steel Housing	M20 x 1.5 (CM20)	★

Options (include with selected model number)

Extended Product Warranty				
WR3	3-year limited warranty			★
WR5	5-year limited warranty			★
RTD cable (RTD Sensor must be ordered separately)		**Cable length**	**Protection type**	
C12	RTD Input	12 ft. (3.66 m)	Shielded Cable	★
C13	RTD Input	24 ft. (7.32 m)	Shielded Cable	★
C14	RTD Input	75 ft. (22.86 m)	Shielded Cable	★
C22	RTD Input	12 ft. (3.66 m)	Armored Shielded Cable	★
C23	RTD Input	24 ft. (7.32 m)	Armored Shielded Cable	★
C24	RTD Input	75 ft. (22.86 m)	Armored Shielded Cable	★
C32	RTD Input	12 ft. (3.66 m)	ATEX/IECEx Flameproof Cable	★
C33	RTD Input	24 ft. (7.32 m)	ATEX/IECEx Flameproof Cable	★
C34	RTD Input	75 ft. (22.86 m)	ATEX/IECEx Flameproof Cable	★
Software configuration				
C1[6]	Custom software configuration Note: A Configuration Data Sheet must be completed.			★
Custody transfer				
D3	Measurement Canada Accuracy Approval			★

Table A-3. Rosemount 4088 MultiVariable Transmitter with In-Line Static Pressure Sensor Configurations

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

External ground screw assembly		
D4[7]	External ground screw assembly	★
Drain/vent valve		
D5[11]	Delete transmitter drain/vent valves (install plugs)	★
Conduit plug		
DO[8]	316 SST Conduit Plug	★
Product certifications[9]		
E1	ATEX Flameproof	★
I1	ATEX Intrinsic Safety	★
N1	ATEX Type n	★
ND	ATEX Dust	★
K1	ATEX Flameproof, Intrinsic Safety, Type n, Dust (combination of E1, I1, N1, and ND)	★
E5	FM Explosion-proof, Dust Ignition-proof, Division 2	★
I5	FM Intrinsically Safe, Division 2	★
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E5 and I5)	★
E6[10]	CSA Explosion-proof, Dust Ignition-proof, Division 2	★
I6	CSA Intrinsically Safe	★
K6[10]	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination of E6 and I6)	★
E7	IECEx Flameproof	★
I7	IECEx Intrinsic Safety	★
N7	IECEx Type n	★
K7	IECEx Flameproof, Intrinsic Safety, and Type n (combination of E7, I7, and N7)	★
E2	INMETRO Flameproof	★
I2	INMETRO Intrinsic Safety	★
K2	INMETRO Flameproof, Intrinsic Safety (combination of E2 and I2)	★
KA[10]	ATEX & CSA Explosion-proof, Intrinsically Safe, Division 2 (combination E1, E6, I1, and I6)	★
KB[10]	FM & CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2 (combination E5, I5, E6, and I6)	★
KC	FM & ATEX Explosion-proof, Intrinsically Safe, Division 2 (combination E5, I5, E1, and I1)	★
KD[10]	FM, CSA, & ATEX Explosion-proof, Intrinsically Safe (combination E5, E6, E1, I5, I6, and I1)	★
Sensor fill fluid		
L1	Inert sensor fill fluid (Not available with an Absolute static pressure type)	★

Table A-3. Rosemount 4088 MultiVariable Transmitter with In-Line Static Pressure Sensor Configurations

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Digital display		
M5	LCD Display	★
Pressure testing		
P1	Hydrostatic testing with certificate	★
Cleaning process area		
P2(11)	Cleaning for special services	
P3(11)	Cleaning for special services with testing for <1PPM chlorine/fluorine	
Calibration data certification		
Q4	Calibration certificate	★
QP	Calibration certificate and tamper evident seal	★
Material traceability certification		
Q8	Material traceability certification per EN 10204 3.1B	★
NACE certificates		
Q15(12)	Certificate of Compliance to NACE MR0175/ISO15156 for wetted materials	★
Q25(12)	Certificate of Compliance to NACE MR0103 for wetted materials	★
Terminal block		
T1	Transient terminal block	★
Cold temperature		
BRR	-58 °F (-50 °C) Cold Temperature Start-up	★
Typical model numbers: 4088A1P6NG2R2K111AC12E5M5, 4088B1P6NG2R2K111AC12E5M5		

(1) For detailed specifications see "Performance specifications" Section on page 115.
(2) Required for Measurement Type 8.
(3) Required for Measurement Type 6. RTD Sensor must be ordered separately.
(4) Materials of Construction comply with metallurgical requirements highlighted within NACE MR0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR0103 for sour refining environments. Order with Q15 or Q25 to receive a NACE certificate.
(5) "Assemble to" items are specified separately and require a completed model number.
(6) Not available for 4088B.
(7) This assembly is included with certification options E1, N1, K1, ND, E7, N7, K7, E2, K2, KA, KC, and KD.
(8) Transmitter is shipped with 316 SST conduit plug (uninstalled) in place of standard carbon steel conduit plug.
(9) Product certifications will not drive explosion-proof RTD cable fitting, glands, or adapters.
(10) Not available with M20 conduit entry size.
(11) Not available with Process Connection A11.
(12) NACE compliant wetted materials are identified by Footnote 4.

A.6 Spare parts list

Electronics board assembly hardware parts description	Part number
4088A - Modbus Protocol Transmitter Register Mapping - Temperature Input Enabled	04088-9030-0001
4088A - Modbus Protocol Transmitter Register Mapping - Temperature Input Disabled	04088-9030-0011
4088B - Remote Automation Systems Ready Transmitter Register Mapping - Temperature Input Enabled	04088-9030-0002
4088B - Remote Automation Systems Ready Transmitter Register Mapping - Temperature Input Disabled	04088-9030-0012
LCD display	**Part number**
Aluminum Housing	
LCD Display Kit: LCD display assembly, 4-pin interconnection header and aluminum cover assembly	00753-9004-0001
LCD Display Only: LCD display assembly, 4-pin interconnection header	00753-9004-0002
Cover Assembly Kit: aluminum cover assembly	03151-9193-0003
SST Housing	
LCD Display Kit: LCD assembly, 4-pin interconnection header, SST cover assembly	00753-9004-0004
LCD Display Kit: LCD assembly, 4-pin interconnection header	00753-9004-0002
Cover Assembly Kit: SST cover assembly	03151-9193-0005
Terminal blocks	**Part number**
Standard Terminal Block Assembly with Temperature Input	04088-9006-0001
Standard Terminal Block Assembly without Temperature Input	04088-9006-0011
Transient Protection Terminal Block Assembly with Temperature Input	04088-9006-0002
Transient Protection Terminal Block Assembly without Temperature Input	04088-9006-0012
Housings	**Part number**
Aluminum Housing	
1/2 - 14 NPT conduit entry	04088-9059-1119
M20 conduit entry	04088-9059-1219
SST Housing	
1/2 - 14 NPT conduit entry	04088-9059-0119
M20 conduit entry	04088-9059-0219
Covers	**Part number**
Aluminum Electronics Cover; Cover and O-ring	03151-9030-0001
SST Electronics Cover; Cover and O-ring	03151-9030-0002
Housing miscellaneous	**Part number**
External Ground Screw Assembly (Option D4): screw, clamp, washer	03151-9060-0001
Housing V-Seal	03151-9061-0001
Housing header cable O-ring (package of 12)	03151-9011-0001
1/2 NPT SST Conduit Plug	03031-0544-0003
M20 SST Conduit Plug	03031-0544-0001
Flanges	**Part number**
Differential Coplanar Flange	
Nickel-plated Carbon Steel	03151-9200-0025
SST	03151-9200-0022
Cast C-276	03151-9200-0023
Gage/Absolute Coplanar Flange	
Nickel-plated Carbon Steel	03151-9200-1025

SST	03151-9200-1022
Cast C-276	03151-9200-1023
Coplanar Flange Alignment Screw (package of 12)	03151-9202-0001
Traditional Flange	
SST	03151-9203-0002
Cast C-276	03151-9203-0003
Flange adapter kits (each kit contains adapters, bolts, and O-ring for one DP transmitter or two GP/AP transmitters)	**Part number**
CS Bolts, Glass Filled PTFE O-Rings	
SST Adapters	03031-1300-0002
Cast C-276 Adapters	03031-1300-0003
Ni Plated CS Adapters	03031-1300-0005
SST Bolts, Glass Filled PTFE O-Rings	
SST Adapters	03031-1300-0012
Cast C-276 Adapters	03031-1300-0013
Ni Plated CS Adapters	03031-1300-0015
CS Bolts, Graphite PTFE O-Rings	
SST Adapters	03031-1300-0102
Cast C-276 Adapters	03031-1300-0103
Ni Plated CS Adapters	03031-1300-0105
SST Bolts, Graphite PTFE O-Rings	
SST Adapters	03031-1300-0112
Cast C-276 Adapters	03031-1300-0113
Ni Plated CS Adapters	03031-1300-0115
Flange adapter union	**Part number**
Nickel-plated Carbon Steel	03151-9259-0005
SST	03151-9259-0002
Cast C-276	03151-9259-0003
Drain/vent kits (each kit contains parts for one transmitter)	**Part number**
Differential Drain/Vent Kits	
SST Valve Stem and Seat Kit	03151-9268-0022
Alloy C-276 Valve Stem and Seat Kit	03151-9268-0023
Gage/Absolute Drain/Vent Kits	
SST Valve Stem and Seat Kit	03151-9268-0012
Alloy C-276 Valve Stem and Seat Kit	03151-9268-0013
O-Ring Packages (package of 12)	**Part number**
Electronic Housing, Cover (standard and LCD display)	03151-9040-0001
Electronic Housing, Module	03151-9041-0001
Process Flange, Glass-filled PTFE	03151-9042-0001
Process Flange, Graphite-filled PTFE	03151-9042-0002
Process Adapter, Glass-filled PTFE	03151-9043-0001
Process Adapter, Graphite-filled PTFE	03151-9043-0002
Gland and collar kits	**Part number**
Gland and Collar Kits	03151-9250-0001

Mounting brackets	Part number
Coplanar Flange Bracket Kit	
B4 Bracket, SST, 2-in. pipe mount, SST bolts	03151-9270-0001
Traditional Flange Bracket Kit	
B1 Bracket, 2-in. pipe mount, CS bolts	03151-9272-0001
B2 Bracket, panel mount, CS bolts	03151-9272-0002
B3 Flat Bracket for 2 in. pipe mount, CS bolts	03151-9272-0003
B7 (B1 style bracket with SST bolts)	03151-9272-0007
B8 (B2 style bracket with SST bolts)	03151-9272-0008
B9 (B3 style bracket with SST bolts)	03151-9272-0009
BA (SST B1 bracket with SST bolts)	03151-9272-0011
BC (SST B3 bracket with SST bolts)	03151-9272-0013
Bolt kits	**Part number**
COPLANAR FLANGE	
Flange Bolt Kit [44 mm (1.75 in.)]	
Carbon Steel (set of 4)	03151-9280-0001
316 SST (set of 4)	03151-9280-0002
ANSI/ASTM-A-193-B7M (set of 4)	03151-9280-0003
Alloy K-500 (set of 4)	03151-9280-0004
Flange/Adapter Bolt Kit [73 mm (2.88 in.)]	
Carbon Steel (set of 4)	03151-9281-0001
316 SST (set of 4)	03151-9281-0002
ANSI/ASTM-A-193-B7M (set of 4)	03151-9281-0003
Alloy K-500 (set of 4)	03151-9281-0004
Manifold/Flange Kit [57 mm (2.25 in.)]	
Carbon Steel (set of 4)	03151-9282-0001
316 SST (set of 4)	03151-9282-0002
ANSI/ASTM-A-193-B7M (set of 4)	03151-9282-0003
Alloy K-500 (set of 4)	03151-9282-0004
TRADITIONAL FLANGE	
Differential Flange and Adapter Bolt Kit	
Carbon Steel (set of 8)	03151-9283-0001
316 SST (set of 8)	03151-9283-0002
ANSI/ASTM-A-193-B7M (set of 8)	03151-9283-0003
Alloy K-500 (set of 8)	03151-9283-0004
Gage/Absolute Flange and Adapter Bolt Kit	
Carbon Steel (set of 6)	03151-9283-1001
316 SST (set of 6)	03151-9283-1002
ANSI/ASTM-A-193-B7M (set of 6)	03151-9283-1003
Alloy K-500 (set of 6)	03151-9283-1004
Manifold/Traditional Flange Bolts	
Carbon Steel	Use Bolts supplied with manifold
316 SST	Use Bolts supplied with manifold

Temperature cables	Part number
AL Housing with 1/2-14 NPT conduit- Kit includes cable and cable glands	
RTD Input with 12 ft (3.66m) of Shielded Cable	03151-9064-0012
RTD Input with 24 ft (7.32m) of Shielded Cable	03151-9064-0024
RTD Input with 75 ft (22.86m) of Shielded Cable	03151-9064-0075
RTD Input with 27 in. (69cm) of Armored Cable	03151-9065-0002
RTD Input with 4 ft (1.22m) of Armored Cable	03151-9065-0004
RTD Input with 12 ft. (3.66m) of Armored Cable	03151-9065-0012
RTD Input with 24 ft. (7.32m) of Armored Cable	03151-9065-0024
RTD Input with 75 ft. (22.86m) of Armored Cable	03151-9065-0075
RTD Input with 25 in. (64 cm) of ATEX / IEXCEx Flameproof Cable	03151-9066-0002
RTD Input with 12 ft. (3.66m) of ATEX / IEXCEx Flameproof Cable	03151-9066-0012
RTD Input with 24 ft. (7.32m) of ATEX / IEXCEx Flameproof Cable	03151-9066-0024
RTD Input with 75 ft. (22.86m) of ATEX / IEXCEx Flameproof Cable	03151-9066-0075
SST Housing with 1/2-14 NPT conduit- Kit includes cable and cable glands	
RTD Input with 12 ft (3.66m) of Shielded Cable	03151-9064-0012
RTD Input with 24 ft (7.32m) of Shielded Cable	03151-9064-0024
RTD Input with 75 ft (22.86m) of Shielded Cable	03151-9064-0075
RTD Input with 27 in. (69cm) of Armored Cable	03151-9065-0102
RTD Input with 4 ft (1.22m) of Armored Cable	03151-9065-0104
RTD Input with 12 ft. (3.66m) of Armored Cable	03151-9065-0112
RTD Input with 24 ft. (7.32m) of Armored Cable	03151-9065-0124
RTD Input with 75 ft. (22.86m) of Armored Cable	03151-9065-0175
RTD Input with 25 in. (64 cm) of ATEX / IEXCEx Flameproof Cable	03151-9066-0102
RTD Input with 12 ft. (3.66m) of ATEX / IEXCEx Flameproof Cable	03151-9066-0112
RTD Input with 24 ft. (7.32m) of ATEX / IEXCEx Flameproof Cable	03151-9066-0124
RTD Input with 75 ft. (22.86m) of ATEX / IEXCEx Flameproof Cable	03151-9066-0175
AL Housing with M20 x 1.5 conduit- Kit includes cable and cable glands	
RTD Input with 12 ft (3.66m) of Shielded Cable	03151-9064-0012
RTD Input with 24 ft (7.32m) of Shielded Cable	03151-9064-0024
RTD Input with 75 ft (22.86m) of Shielded Cable	03151-9064-0075
RTD Input with 27 in. (69cm) of Armored Cable	03151-9065-0202
RTD Input with 4 ft (1.22m) of Armored Cable	03151-9065-0204
RTD Input with 12 ft. (3.66m) of Armored Cable	03151-9065-0212
RTD Input with 24 ft. (7.32m) of Armored Cable	03151-9065-0224
RTD Input with 75 ft. (22.86m) of Armored Cable	03151-9065-0275
RTD Input with 25 in. (64 cm) of ATEX / IEXCEx Flameproof Cable	03151-9066-0202
RTD Input with 12 ft. (3.66m) of ATEX / IEXCEx Flameproof Cable	03151-9066-0212
RTD Input with 24 ft. (7.32m) of ATEX / IEXCEx Flameproof Cable	03151-9066-0224
RTD Input with 75 ft. (22.86m) of ATEX / IEXCEx Flameproof Cable	03151-9066-0275
SST Housing with M20 x 1.5 conduit- Kit includes cable and cable glands	
RTD Input with 12 ft (3.66m) of Shielded Cable	03151-9064-0012
RTD Input with 24 ft (7.32m) of Shielded Cable	03151-9064-0024
RTD Input with 75 ft (22.86m) of Shielded Cable	03151-9064-0075
RTD Input with 27 in. (69cm) of Armored Cable	03151-9065-0302

RTD Input with 4 ft (1.22m) of Armored Cable	03151-9065-0304
RTD Input with 12 ft. (3.66m) of Armored Cable	03151-9065-0312
RTD Input with 24 ft. (7.32m) of Armored Cable	03151-9065-0324
RTD Input with 75 ft. (22.86m) of Armored Cable	03151-9065-0375
RTD Input with 25 in. (64 cm) of ATEX / IEXCEx Flameproof Cable	03151-9066-0302
RTD Input with 12 ft. (3.66m) of ATEX / IEXCEx Flameproof Cable	03151-9066-0312
RTD Input with 24 ft. (7.32m) of ATEX / IEXCEx Flameproof Cable	03151-9066-0324
RTD Input with 75 ft. (22.86m) of ATEX / IEXCEx Flameproof Cable	03151-9066-0375
Rosemount 4088 User Interface Software	**Part number**
Rosemount Transmitter Interface Software (RTIS) CD Only	04088-9000-0001
Rosemount Transmitter Interface Software (RTIS) CD with HART USB Modem and Cables	04088-9000-0002
HART USB Modem and Cables	03095-5105-0002

Appendix B Product Certifications

European Directive Information . . . . . page 153
Ordinary Location Certification . . . . . page 153
Installing Equipment in North America . . . . . page 153
Europe . . . . . page 155
International . . . . . page 157
Combinations . . . . . page 158
Approval drawings . . . . . page 159

This section contains hazardous location certifications for the Rosemount 4088 MultiVariable Transmitter.

B.1 European Directive Information

A copy of the EC Declaration of Conformity can be found at the end of the Quick Start Guide. The most recent revision of the EC Declaration of Conformity can be found at www.emersonprocess.com/rosemount.

B.2 Ordinary Location Certification

As standard, the transmitter has been examined and tested to determine that the design meets the basic electrical, mechanical, and fire protection requirements by a nationally recognized test laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

B.3 Installing Equipment in North America

The US National Electrical Code (NEC) and the Canadian Electrical Code (CEC) permit the use of Division marked equipment in Zones and Zone marked equipment in Divisions. The markings must be suitable for the area classification, gas, and temperature class. This information is clearly defined in the respective codes

B.3.1 USA

E5 FM Explosionproof (XP), Dust-Ignitionproof (DIP) and Nonincendive (NI)

Certificate: 3045445 / 3052850

Standards: FM Class 3600 – 2011, FM Class 3611 – 2004, FM Class 3615 – 2005, FM Class 3616 2011, FM 3810 – 2005, ANSI/NEMA 250 – 1991, ANSI/IEC 60529 - 2004

Markings: XP Class I, Division 1, Groups B, C, D (Ta = -50 °C to 85 °C); DIP Class II and Class III, Division 1, Groups E, F, G (Ta = -50 °C to 85 °C); Class I Zone 0/1 AEx d IIC T5 or T6 Ga/Gb (Ta = -50°C to 80°C); Nonincendive Class I, Division 2, Groups A, B, C, D; T4(-50 °C ≤ Ta ≤ 70 °C); enclosure Type 4X/IP66/IP68; conduit seal not required

Note
Transmitters marked with NI CL 1, DIV 2 can be installed in Division 2 locations using general Division 2 wiring methods or Nonincendive Field Wiring (NIFW). See Drawing 04088-1206.

Special Conditions for Safe Use (X):

1. The device contains a thin wall diaphragm. Installation, maintenance, and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturers instruction for maintenance shall be followed in detail to assure safety during its expected lifetime.

2. In case of repair contact the manufacturer for information on the dimensions of the flameproof joint.

3. Appropriate cable, glands, and plugs need to be suitable for a temperature of 5°C greater than the maximum specified temperature for location where installed.

4. The applicable temperature class, ambient temperature range and process temperature range of the equipment is as follows:

- T4 for -50 °C ≤ Ta ≤ 80 °C with T process = -50 °C to 120 °C
- T5 for -50 °C ≤ Ta ≤ 80 °C with T process = -50 °C to 80 °C
- T6 for -50 °C≤ Ta ≤ 65 °C with T process = -50 °C to 65 °C

I5 FM Intrinsic Safety (IS) and Nonincendive (NI)

Certificate: 3052850

Standards: FM Class 3600 – 2011, FM Class 3610 – 2010, FM Class 3611 – 2004, FM Class 3810 – 2005, ANSI/NEMA 250 – 1991, ANSI/ISA 60529 – 2004, ANSI/ISA 61010-1 - 2004

Markings: Intrinsic Safety Class I, Division 1, Groups C, D; Class II, Groups E, F, G; Class III; Class I Zone 0 AEx ia IIB T4; Nonincendive Class I, Division 2, Groups A, B, C, D; T4(-50 °C ≤ Ta ≤ 70 °C); when connected per Rosemount drawing 04088-1206; Type 4X

Special Conditions for Safe Use (X):

1. The maximum permitted ambient temperature of the Model 4088 Pressure Transmitter is 70°C. To avoid the effects of process temperature and other thermal effects care shall be taken to ensure the surrounding ambient and the ambient inside the transmitter housing does not exceed 70°C.

2. The enclosure may contain aluminum and is considered to present a potential risk of ignition by impact or friction. Care must be taken during installation and use to prevent impact or friction.

3. The Model 4088 Transmitters fitted with transient protection are not capable of withstanding the 500V test. This must be taken into account during installation.

Note
Transmitters marked with NI CL 1, DIV 2 can be installed in Division 2 locations using general Division 2 wiring methods or Nonincendive Field Wiring (NIFW). See Drawing 04088-1206.

B.3.2 Canada

All CSA hazardous approved transmitters are dual seal certified per ANSI/ISA 12.27.01-2003.

E6 CSA Explosionproof, Dust-Ignitionproof, and Division 2

Certificate: 2618446

Standards: CSA C22.2 No. 0-10, CSA C22.2 No. 25-1966, CSA C22.2 No. 30-M1986, CSA C22.2 No. 94-M91, CSA C22.2 No. 142-M1987, CSA C22.2 No. 213-M1987, CSA C22.2 No. 60079-0:2011, CSA C22.2 No. 60079-11:2011, ANSI/ISA 12.27.01-2003

Markings: Class I, Division 1, Groups B, C, D; Class II, Division 1, Groups E, F, G; Class III; Class I, Division 2, Groups A, B, C, D; Temp Code T5; seal not required; when installed per Rosemount Drawing 04088-1053; Type 4X

I6 CSA Intrinsically Safe

Certificate: 2618446

Standards: CSA C22.2 No. 0-10, CSA C22.2 No. 25-1966, CSA C22.2 No. 30-M1986, CSA C22.2 No. 94-M91, CSA C22.2 No. 142-M1987, CSA C22.2 No. 157-92, CSA C22.2 No. 213-M1987, CSA C22.2 No. 60079-0:2011, CSA C22.2 No. 60079-11:2011, ANSI/ISA 12.27.01-2003

Markings: Class I, Division 1, Groups C, D, Temp Code T3C; Class I Zone 0 Ex ia IIB T4; when installed per Rosemount Drawing 04088-1207; Type 4X

B.4 Europe

E1 ATEX Flameproof

Certificate: FM12ATEX0030X

Standards: EN 60079-0:2012, EN 60079-1:2007, EN 60079-26:2008, EN 60529:1991+A1:2000

Markings: ⟨Ex⟩ II 1/2 G Ex d IIC T6...T4, T4/T5 Ta=-50 °C to 80 °C, T6 Ta=-50 °C to 65 °C, Ga/Gb

Special Conditions for Safe Use (X):

1. The device contains a thin wall diaphragm. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instruction for maintenance shall be followed in detail to assure safety during its expected lifetime.

2. In case of repair, contact the manufacturer for information on the dimensions of the flameproof joint.

3. Appropriate cable, glands, and plugs need to be suitable for a temperature of 5°C greater than the maximum specified temperature for location where installed.

4. The applicable temperature class, ambient temperature range and process temperature range of the equipment is as follows:

- T4 for -50 °C ≤ Ta ≤ 80 °C with T process = -50 °C to 120 °C
- T5 for -50 °C ≤ Ta ≤ 80 °C with T process = -50 °C to 80 °C
- T6 for -50 °C ≤ Ta ≤ 65 °C with T process = -50 °C to 65 °C

5. The Transmitter can be installed in the boundary wall between an area of Category 1 and Category 2. In this configuration, the process connection is installed in Category 1, while the transmitter housing is installed in Category 2.

I1 ATEX Intrinsic Safety

Certificate: Baseefa13ATEX0221X

Standards: EN 60079-0:2012, EN 60079-11:2012

Markings: ⟨Ex⟩ II 1 G Ex ia IIB T4 Ga (-60 °C ≤ Ta ≤ +70 °C)

Special Conditions for Safe Use (X):

1. The 4088 MV Transmitters fitted with transient protection are not capable of withstanding the 500V test as defined in Clause 6.3.13 of EN 60079-11:2012. This must be taken into account during installation.

2. The Model 4088 MV enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a Zone 0 area.

ND ATEX Dust

Certificate: FM12ATEX0030X

Standards: EN 60079-0:2012, EN 60079-31:2009, EN 60529:1991+A1:2000

Markings: ⟨Ex⟩ II 2 D Ex tb IIIC T95°C, Ta=-50°C to 80°C

Special Conditions for Safe Use (X):

1. Cable entries must be used which maintain the ingress protection of the enclosure to at least IP66/68.

2. Unused cable entries must be filled with suitable blanking plugs which maintain the ingress protection of the enclosure to at least IP66/68.

3. Cable entries and blanking plugs must be suitable for the ambient range of the apparatus and capable of withstanding a 7J impact test.

N1 ATEX Type n

Certificate: Baseefa13ATEX0222X

Standards: EN 60079-0:2012, EN 60079-15: 2010

Markings: ⟨Ex⟩ II 3 G Ex nA IIC T5 Gc (-40 °C ≤ Ta ≤ 70 °C)

Special Condition for Safe Use (X):

1. The Model 4088 MV Transmitters fitted with transient protection are not capable of withstanding the 500V test as defined in Clause 6.5.1 of EN 60079-15:2010. This must be taken into account during installation.

B.5 International

E7 IECEx Flameproof

Certificate: IECEx FMG 13.0024X

Standards: IEC 60079-0:2011, IEC 60079-1: 2007, IEC 60079-26: 2006

Markings: Ex d IIC T6...T4, T4/T5 Ta=-50 °C to 80 °C, T6 Ta=-50 °C to 65 °C, Ga/Gb

Special Conditions for Safe Use (X):

1. The device contains a thin wall diaphragm. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instruction for maintenance shall be followed in detail to assure safety during its expected lifetime.
2. In case of repair, contact the manufacturer for information on the dimensions of the flameproof joint.
3. Appropriate cable, glands, and plugs need to be suitable for a temperature of 5°C greater than the maximum specified temperature for location where installed.
4. The applicable temperature class, ambient temperature range and process temperature range of the equipment is as follows:
   - T4 for -50 °C ≤ Ta ≤ 80 °C with T process = -50 °C to 120 °C
   - T5 for -50 °C ≤ Ta ≤ 80 °C with T process = -50 °C to 80 °C
   - T6 for -50 °C ≤ Ta ≤ 65 °C with T process = -50 °C to 65 °C
5. The Transmitter can be installed in the boundary wall between an area of EPL Ga and the less hazardous area, EPL Gb. In this configuration, the process connection is installed in EPL Ga, while the transmitter housing is installed in EPL Gb.

I7 IECEx Intrinsic Safety

Certificate: IECEx BAS 13.0110X

Standards: IEC 60079-0:2011, IEC 60079-11:2011

Markings: Ex ia IIB T4 Ga (-60 °C ≤ Ta ≤ +70 °C)

Special Conditions for Safe Use (X):

1. The Model 4088 MV Transmitters fitted with transient protection are not capable of withstanding the 500V test as defined in Clause 6.3.13 of IEC 60079-11:2012. This must be taken into account during installation.
2. The Model 4088 MV enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a Zone 0 area.

NK IECEx Dust

Certificate: IECEx FMG 13.0024X

Standards: IEC 60079-0:2011, IEC 60079-31:2013

Markings: Ex tb IIIC T95 °C, Ta=-20 °C to 85 °C, Db

Special Conditions for Safe Use (X):

1. Cable entries must be used which maintain the ingress protection of the enclosure to at least IP66/68.
2. Unused cable entries must be filled with suitable blanking plugs which maintain the ingress protection of the enclosure to at least IP66/68.
3. Cable entries and blanking plugs must be suitable for the ambient range of the apparatus and capable of withstanding a 7J impact test.

N7 IECEx Type n

Certificate: IECEx BAS 13.0111X

Standards: IEC 60079-0:2011, IEC 60079-15: 2010

Markings: Ex nA IIC T5 Gc (-40 °C ≤ Ta ≤ +70 °C)

Special Condition for Safe Use (X):

1. The Model 4088 MV Transmitters fitted with transient protection are not capable of withstanding the 500V test as defined in Clause 6.5.1 of IEC 60079-15:2010. This must be taken into account during installation.

B.6 Combinations

K1 Combination of E1, I1, N1, and ND

K5 Combination of E5 and I5

K6 Combination of E6 and I6

K7 Combination of E7, I7, N7, and NK

KA Combination of E1, I1, E6, and I6

KB Combination of E5, I5, E6, and I6

KC Combination of E1, I1, E5, and I5

KD Combination of E1, I1, E5, I5, E6, and I6

B.7 Approval drawings

B.7.1 Factory Mutual (FM)

CONFIDENTIAL AND PROPRIETARY INFORMATION IS CONTAINED HEREIN AND MUST BE HANDLED ACCORDINGLY

REVISIONS

REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AA	NEW RELEASE	RTC1056276	M.K.B.	7/11/13
AB	ADD NOTE 11	RTC1059235	A.S.	2/25/14
AC	UPDATE RTD PARAMETERS AND ADD 475	RTC1059591	A.S.	4/14/14
AD	REMOVE INTRINSIC SAFETY	RTC1060174	J.B.	6/9/14
AE	ADD INTRINSIC SAFETY INFO	RTC1061269	A.S.	10/22/14

ENTITY APPROVALS FOR MODEL 4088

I.S. SEE SHEETS 2-3
NONINCENDIVE SEE SHEET 4

THE ROSEMOUNT TRANSMITTER LISTED ABOVE IS F.M. APPROVED AS INTRINSICALLY SAFE WHEN USED IN CIRCUIT WITH F.M. APPROVED BARRIERS WHICH MEET THE ENTITY PARAMETERS LISTED.

TO ASSURE AN INTRINSICALLY SAFE SYSTEM, THE TRANSMITTER AND BARRIER MUST BE WIRED IN ACCORDANCE WITH THE BARRIER MANUFACTURER'S FIELD WIRING INSTRUCTIONS AND THE APPLICABLE CIRCUIT DIAGRAM.

CAD MAINTAINED (MicroStation)

UNLESS OTHERWISE SPECIFIED DIMENSIONS IN INCHES [mm]. REMOVE ALL BURRS AND SHARP EDGES. MACHINE SURFACE FINISH 125

-TOLERANCE-
.X ± .1 [2,5]
.XX ± .02 [0,5]
.XXX ± .010 [0,25]
FRACTIONS ± 1/32
ANGLES ± 2°

DO NOT SCALE PRINT

Form Rev. AC

CONTRACT NO.

DR. M. WEISGURT 2/14/13

CHK'D

APP'D.

APP'D. GOVT.

EMERSON Process Management

ROSEMOUNT®
8200 Market Boulevard • Chanhassen, MN 55317 USA

TITLE
INDEX OF I.S. & NONINCENDIVE F.M. FOR 4088

SIZE	FSCM NO	DWG NO.	
A		04088-1206	
SCALE N/A	WT. ———	SHEET 1 OF 5	

Electronic Master – PRINTED COPIES ARE UNCONTROLLED – Rosemount Proprietary

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AE				

ENTITY CONCEPT APPROVALS

THE ENTITY CONCEPT ALLOWS INTERCONNECTION OF INTRINSICALLY SAFE APPARATUS TO ASSOCIATED APPARATUS NOT SPECIFICALLY EXAMINED IN COMBINATION AS A SYSTEM. THE APPROVED VALUES OF MAX. OPEN CIRCUIT VOLTAGE (Voc, Uo OR Vt) AND MAX. SHORT CIRCUIT CURRENT (Isc, Io, OR It) AND MAX.POWER Po(Voc X Isc/4) OR (Vt X It/4), FOR THE ASSOCIATED APPARATUS MUST BE LESS THAN OR EQUAL TO THE MAXIMUM SAFE INPUT VOLTAGE (Vmax, OR U_T), MAXIMUM SAFE INPUT CURRENT (Imax OR I_1), AND MAXIMUM SAFE INPUT POWER (Pmax OR P_T) OF THE INTRINSICALLY SAFE APPARATUS. IN ADDITION, THE APPROVED MAX. ALLOWABLE CONNECTED CAPACITANCE (Ca) OF THE ASSOCIATED APPARATUS MUST BE GREATER THAN THE SUM OF THE INTERCONNECTING CABLE CAPACITANCE AND THE UNPROTECTED INTERNAL CAPACITANCE (C_1) OF THE INTRINSICALLY SAFE APPARATUS, AND THE APPROVED MAX. ALLOWABLE CONNECTED INDUCTANCE (La) OF THE ASSOCIATED APPARATUS MUST BE GREATER THAN THE SUM OF THE INTERCONNECTING CABLE INDUCTANCE AND THE UNPROTECTED INTERNAL INDUCTANCE (L_1) OF THE INTRINSICALLY SAFE APPARATUS.

NOTE: ENTITY PARAMETERS LISTED APPLY ONLY TO ASSOCIATED APPARATUS WITH LINEAR OUTPUT.

FOR 4088 SUPPLY

CLASS I, DIV 1, GROUPS C,D,E,F,G
CLASS I, ZONE 0, AEx ia IIB T4

U_I or V_{MAX} = 22V	Uo, V_T or V_{OC} IS LESS THAN OR EQUAL TO 22V
I_I or I_{MAX} = 147mA	Io, I_T or I_{SC} IS LESS THAN OR EQUAL TO 147mA
P_I or P_{MAX} = 1 WATT	$(\frac{V_T \times I_T}{4})$ or $(\frac{Voc \times Ios}{4})$ IS LESS THAN OR EQUAL TO 1 WATT
C_I = 2.2nF	C_A IS GREATER THAN 2.2nF
L_I = 1.2mH	L_A IS GREATER THAN 1.2mH
T4 (Ta=-50°C to +70°C)	

FOR 4088 MODBUS

U_I or V_{MAX} = 9V	Uo, V_T or V_{OC} IS LESS THAN OR EQUAL TO 9V
I_I or I_{MAX} = 26mA	Io, I_T or I_{SC} IS LESS THAN OR EQUAL TO 26mA
P_I or P_{MAX} = 1 WATT	$(\frac{V_T \times I_T}{4})$ or $(\frac{Voc \times Ios}{4})$ IS LESS THAN OR EQUAL TO 1 WATT
C_I = 2.2nF	C_A IS GREATER THAN 2.2nF
L_I = 0μH	L_A IS GREATER THAN 0μH

FOR RTD SENSOR PARAMETERS

Voc/Uo = 15.51 V
Isc/Io = 20.87 mA
Po = 80.94 mW
Ca = 3.03 μF
La = 326 mH

475 COMMUNICATOR OUTPUT PARAMETERS

Voc/Uo = 1.9 V
Isc/Io = 32 μA
Po = 61 μW
Ca = 100 μF
La = 5.6 H


Rosemount Inc.
8200 Market Boulevard
Chanhassen, MN 55317 USA

CAD MAINTAINED (MicroStation)

DR. M. WEISGURT	SIZE A	FSCM NO	DWG NO. 04088-1206
ISSUED	SCALE N/A	WT.	SHEET 2 OF 5

Form Rev AC


Electronic Master – PRINTED COPIES ARE UNCONTROLLED – Rosemount Proprietary

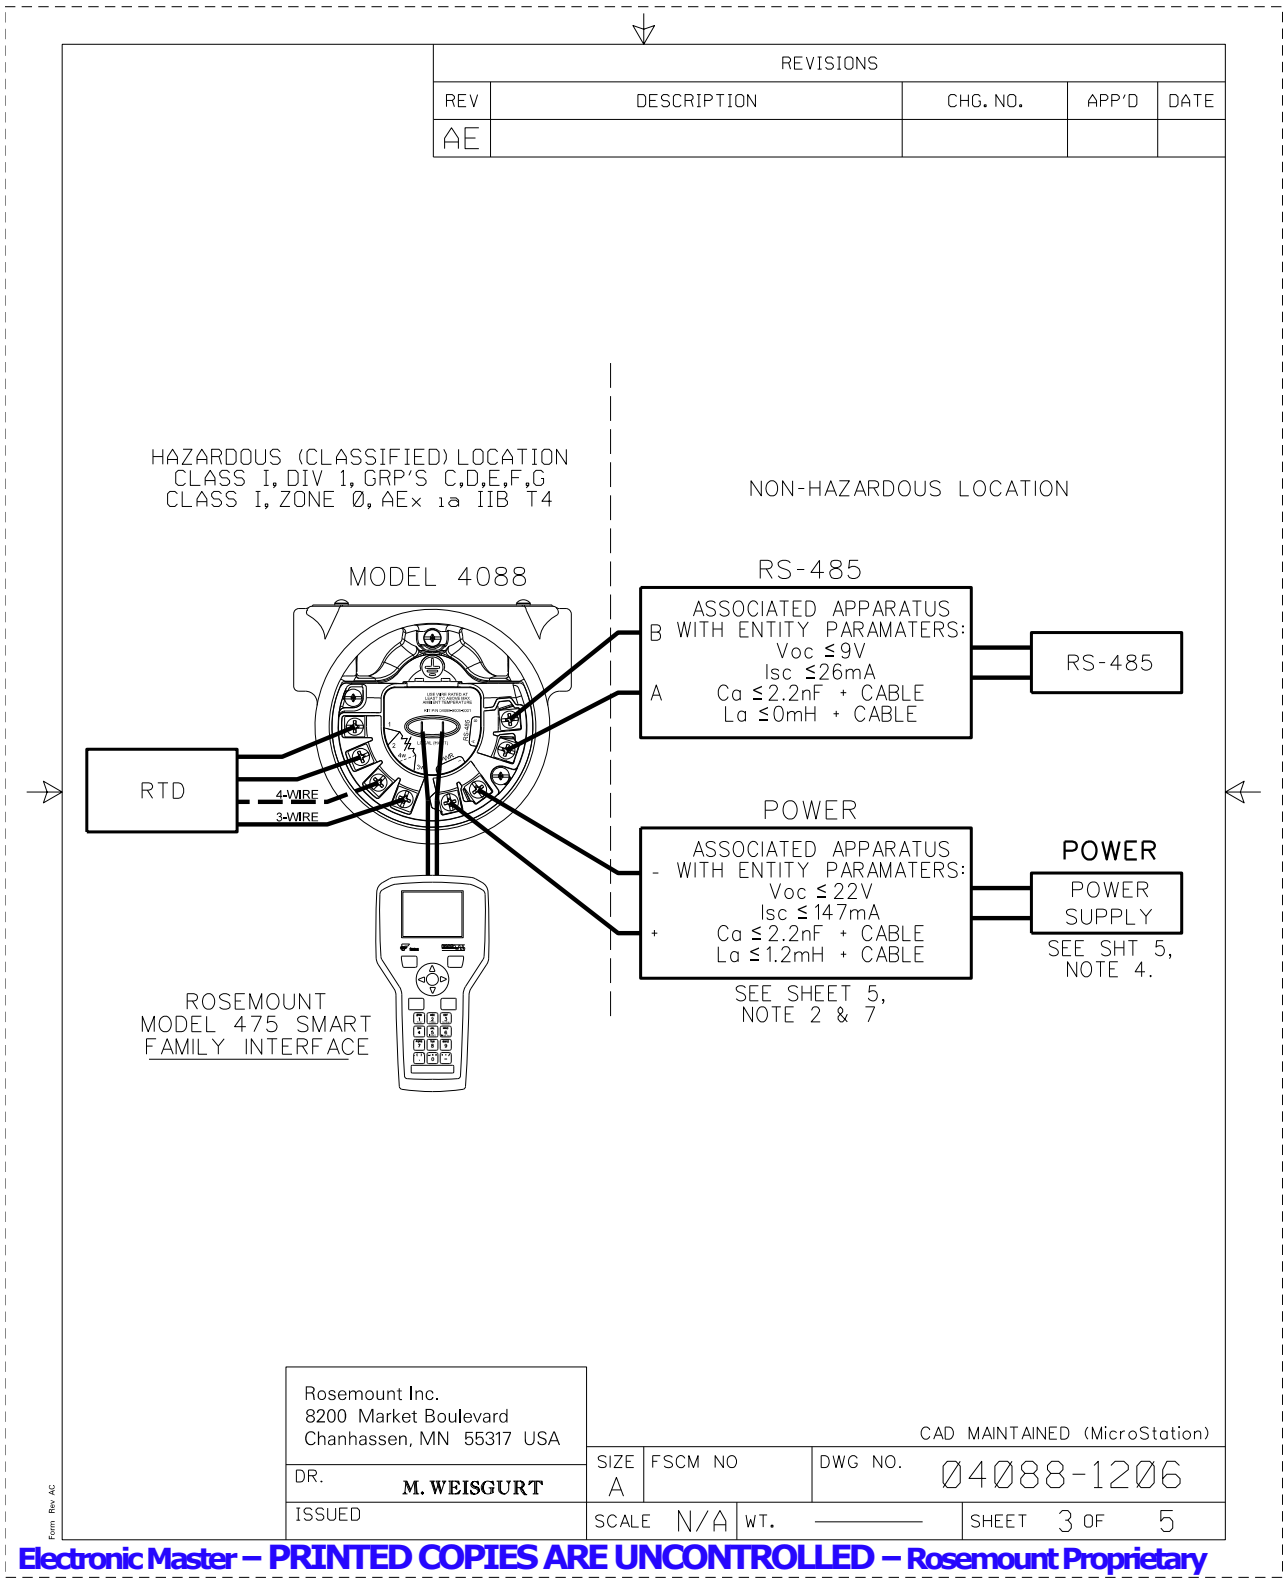

Electronic Master – PRINTED COPIES ARE UNCONTROLLED – Rosemount Proprietary

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AE				

NONINCENDIVE FIELD CIRCUIT
CLASS I, DIV 2 LOCATIONS

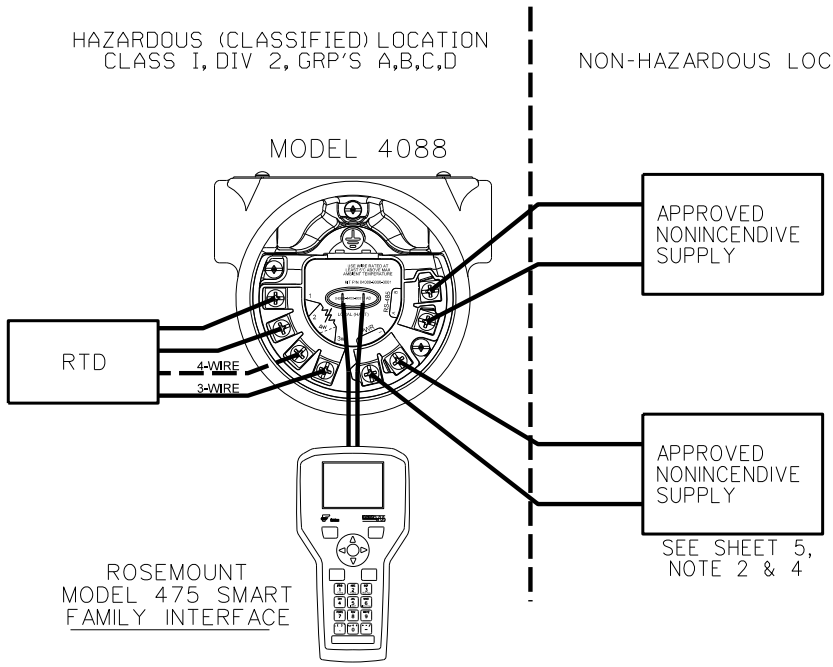

PARAMETERS
(NON-INCENDIVE FIELD WIRING)

	4088 SUPPLY	4088 MODBUS
Vmax	22 V	9 V
Maximum normal operating current	147 mA	26 mA
. C_i	0nF	0nF
. L_i	0uH	0uH
.		

$Imax_N >= Iq_N + Isignal_N$

NFPA 70 National Electrical Code® ARTICLE 501-4(b)
EXCEPTION: "WIRING IN NONINCENDIVE CIRCUITS SHALL BE PERMITTED USING ANY OF THE METHODS SUITABLE FOR WIRING IN ORDINARY LOCATIONS."

WIRING PER NEC® (NFPA 70)
501-4 (b) EXCEPTION
(NONINCENDIVE FIELD CIRCUIT)

REFERENCE: APPENDIX A7 (FM3611 2004)

Rosemount Inc.
8200 Market Boulevard
Chanhassen, MN 55317 USA

CAD MAINTAINED (MicroStation)

DR. M. WEISGURT	SIZE A	FSCM NO	DWG NO. 04088-1206
ISSUED	SCALE N/A	WT. ———	SHEET 4 OF 5

Form Rev AC

Electronic Master – PRINTED COPIES ARE UNCONTROLLED – Rosemount Proprietary

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AE				

NOTES:

1. NO REVISION TO THIS DRAWING WITHOUT PRIOR FM APPROVAL.
2. ASSOCIATED APPARATUS MANUFACTURER'S INSTALLATION DRAWING MUST BE FOLLOWED WHEN INSTALLING THIS EQUIPMENT.
3. DUST-TIGHT CONDUIT SEAL MUST BE USED WHEN INSTALLED IN CLASS II AND CLASS III ENVIRONMENTS.
4. CONTROL EQUIPMENT CONNECTED TO ASSOCIATED APPARATUS MUST NOT USE OR GENERATE MORE THAN 250 Vrms or Vdc.
5. INSTALLATION SHOULD BE IN ACCORDANCE WITH ANSI/ISA-RP12.06.01 "INSTALLATION OF INTRINSICALLY SAFE SYSTEMS FOR HAZARDOUS (CLASSIFIED) LOCATIONS" AND THE NATIONAL ELECTRICAL CODE (ANSI/NFPA 70).
6. THE ASSOCIATED APPARATUS MUST BE FM APPROVED.
7. WARNING - SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY.
8. THE ENTITY CONCEPT ALLOWS INTERCONNECTION OF INTRINSICALLY SAFE APPARATUS WITH ASSOCIATED APPARATUS WHEN THE FOLLOWING IS TRUE:
   Vmax or U_i IS GREATER THAN or EQUAL TO Voc, Vt or Uo
   Imax or I_i IS GRETER THAN or EQUAL TO Isc, It or Io
   Pmax or P_i IS GRETER THAN or EQUAL TO Po
   Ca IS GREATER THAN or EQUAL TO THE SUM OF ALL C_i's PLUS Ccable
   La IS GREATER THAN or EQUAL TO THE SUM OF ALL L_i's PLUS Lcable
9. WARNING - TO PREVENT IGNITION OF FLAMMABLE OR COMBUSTIBLE ATMOSPHERES, DISCONNECT POWER BEFORE SERVICING.
10. THE ASSOCIATED APPARATUS MUST BE A RESISTIVELY LIMITED SINGLE OR MULTIPLE CHANNEL FM APPROVED BARRIER HAVING PARAMETERS LESS THAN THOSE QUOTED, AND FOR WHICH THE OUTPUT AND THE COMBINATIONS OF OUTPUTS IS NON-IGNITION CAPABLE FOR THE CLASS, DIVISION AND GROUP OF USE.
11. USE WIRE RATED AT LEAST 5°C ABOVE MAXIMUM AMBIENT TEMPERATURE.
12. THE WIRING USED IN BOTH THE 4088 POWER INPUT AND 4088 RS-485 (MODBUS) MUST EACH HAVE A MINIMUM INSULATION THICKNESS OF .010" (0,25mm).

Rosemount Inc.
8200 Market Boulevard
Chanhassen, MN 55317 USA

CAD MAINTAINED (MicroStation)

DR. M. WEISGURT	SIZE A	FSCM NO	DWG NO. 04088-1206
ISSUED	SCALE N/A	WT. ———	SHEET 5 OF 5

Form Rev AC

Electronic Master – PRINTED COPIES ARE UNCONTROLLED – Rosemount Proprietary

B.7.2 Canadian Standards Association (CSA)

CONFIDENTIAL AND PROPRIETARY INFORMATION IS CONTAINED HEREIN AND MUST BE HANDLED ACCORDINGLY

REVISIONS

REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AB	UPDATE NOTE 4 & SHEET 2 TABLES	RTC1059235	A.S.	2/25/14
AC	UPDATE RTD PARAMETERS AND ADD 475; UPDATE NOTE 2	RTC1059591	A.S.	4/14/14
AD	UPDATE ZONE, DIVISION, AND PARAMETER INFORMATION	RTC1060174	J.B.	6/9/14

APPROVALS FOR 4088

I.S. ENTITY PARAMETERS SHEET 2
I.S. SEE SHEET 3

TO ASSURE AN INTRINSICALLY SAFE SYSTEM, THE TRANSMITTER AND BARRIER MUST BE WIRED IN ACCORDANCE WITH THE BARRIER MANUFACTURER'S FIELD WIRING INSTRUCTIONS AND THE APPLICABLE CIRCUIT DIAGRAM.

WARNING - EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 1/ZONE 0.

AVERTISSEMENT - RISQUE D'EXPLOSION - LA SUBSTITUTION DE COMPOSANTS PEUT RENDRE CE MATERIEL INACCEPTABLE POUR LES EMPLACEMENTS DE CLASSE I, DIVISION 1/ZONE 0.

CAD MAINTAINED (MicroStation)

UNLESS OTHERWISE SPECIFIED DIMENSIONS IN INCHES [mm]. REMOVE ALL BURRS AND SHARP EDGES. MACHINE SURFACE FINISH 125

-TOLERANCE-
.X ± .1 [2,5]
.XX ± .02 [0,5]
.XXX ± .010 [0,25]

FRACTIONS ± 1/32
ANGLES ± 2°

DO NOT SCALE PRINT

Form Rev AC

CONTRACT NO.

DR. M. WEISGURT 5/6/13

CHK'D

APP'D.

APP'D. GOVT.

EMERSON Process Management

ROSEMOUNT®
8200 Market Boulevard • Chanhassen, MN 55317 USA

TITLE INDEX OF I.S. CSA FOR 4088

SIZE	FSCM NO	DWG NO.	
A		04088-1207	

SCALE N/A WT. SHEET 1 OF 4

Electronic Master – PRINTED COPIES ARE UNCONTROLLED – Rosemount Proprietary

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AD				

ENTITY CONCEPT APPROVALS

THE ENTITY CONCEPT ALLOWS INTERCONNECTION OF INTRINSICALLY SAFE APPARATUS TO ASSOCIATED APPARATUS NOT SPECIFICALLY EXAMINED IN COMBINATION AS A SYSTEM. THE APPROVED VALUES OF MAX. OPEN CIRCUIT VOLTAGE (Voc) AND MAX. SHORT CIRCUIT CURRENT (Isc) AND MAX. POWER (Voc X Isc/4), FOR THE ASSOCIATED APPARATUS MUST BE LESS THAN OR EQUAL TO THE MAXIMUM SAFE INPUT VOLTAGE (Vmax), MAXIMUM SAFE INPUT CURRENT (Imax), AND MAXIMUM SAFE INPUT POWER (Pmax) OF THE INTRINSICALLY SAFE APPARATUS. IN ADDITION, THE APPROVED MAX. ALLOWABLE CONNECTED CAPACITANCE (Ca) OF THE ASSOCIATED APPARATUS MUST BE GREATER THAN THE SUM OF THE INTERCONNECTING CABLE CAPACITANCE AND THE UNPROTECTED INTERNAL CAPACITANCE (C_I) OF THE INTRINSICALLY SAFE APPARATUS, AND THE APPROVED MAX. ALLOWABLE CONNECTED INDUCTANCE (La) OF THE ASSOCIATED APPARATUS MUST BE GREATER THAN THE SUM OF THE INTERCONNECTING CABLE INDUCTANCE AND THE UNPROTECTED INTERNAL INDUCTANCE (L_I) OF THE INTRINSICALLY SAFE APPARATUS.

CLASS I, DIV 1, GROUPS C AND D
CLASS I, ZONE 0, IIB

FOR 4088 SUPPLY

U_I = 22V	V_{OC} IS LESS THAN OR EQUAL TO 22V
I_I = 147mA	I_{SC} IS LESS THAN OR EQUAL TO 147mA
P_I = 1W	$(\frac{V_T X I_T}{4})$ or $(\frac{Voc \times Ios}{4})$ IS LESS THAN OR EQUAL TO 1 WATT
C_I = 0nF	C_A IS GREATER THAN 0nF + Ccable
L_I = 0µH	L_A IS GREATER THAN 0µH + Lcable
T4 (Ta=-50°C to +70°C)	

FOR 4088 MODBUS

U_I = 9V	V_{OC} IS LESS THAN OR EQUAL TO 9V
I_I = 26mA	I_{SC} IS LESS THAN OR EQUAL TO 26mA
P_I = 1W	$(\frac{V_T X I_T}{4})$ or $(\frac{Voc \times Ios}{4})$ IS LESS THAN OR EQUAL TO 1 WATT
C_I = 0nF	C_A IS GREATER THAN 0nF + Ccable
L_I = 0µH	L_A IS GREATER THAN 0µH + Lcable

FOR RTD SENSOR PARAMETERS

Voc/Uo = 15.51 V
Isc/Io = 20.87 mA
Po = 80.94 mW
Ca = 3.1092 µF
La = 1 H

475 COMMUNICATOR OUTPUT PARAMETERS

Voc/Uo = 1.9 V
Isc/Io = 32 µA
Po = 61 µW
Ca = 100 µF
La = 5.6 H

NOTE: ENTITY PARAMETERS LISTED APPLY ONLY TO ASSOCIATED APPARATUS WITH LINEAR OUTPUT.

Rosemount Inc.
8200 Market Boulevard
Chanhassen, MN 55317 USA

DR. M. WEISGURT
ISSUED

CAD MAINTAINED (MicroStation)

SIZE	FSCM NO	DWG NO.	
A		04088-1207	
SCALE N/A	WT. ———	SHEET 2 OF 4	

Form Rev AC

Electronic Master – PRINTED COPIES ARE UNCONTROLLED – Rosemount Proprietary


REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AD				

CSA INTRINSIC SAFETY APPROVALS

CIRCUIT CONNECTION WITH BARRIER OR CONVERTER

Ex ia

INTRINSICALLY SAFE/SECURITE INTRINSEQUE

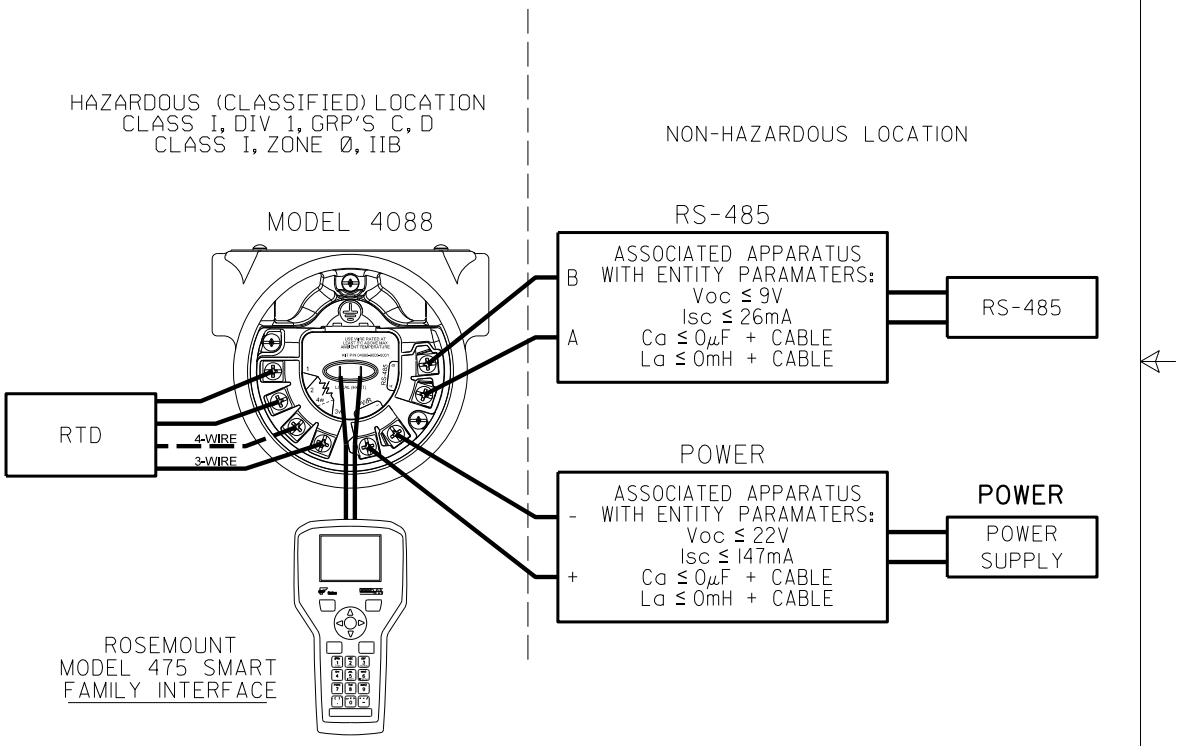

Rosemount Inc. 8200 Market Boulevard Chanhassen, MN 55317 USA			CAD MAINTAINED (MicroStation)
DR. M. WEISGURT	SIZE A	FSCM NO	DWG NO. Ø4088-1207
ISSUED	SCALE N/A	WT.	SHEET 3 OF 4

Form Rev AC

Electronic Master – PRINTED COPIES ARE UNCONTROLLED – Rosemount Proprietary

REVISIONS				
REV	DESCRIPTION	CHG. NO.	APP'D	DATE
AD				

NOTES:

1. APPROVED ASSOCIATED APPARATUS MUST BE INSTALLED IN ACCORDANCE WITH MANUFACTURER'S INSTRUCTIONS.
2. CSA APPROVED ASSOCIATED APPARATUS MUST MEET THE FOLLOWING PARAMETERS: Voc/Uo LESS THAN OR EQUAL TO Vmax/U_i AND Isc/Io LESS THAN OR EQUAL TO Imax/I_i.
3. THE MAXIMUM NON-HAZARDOUS AREA VOLTAGE MUST NOT EXCEED 250V.
4. THE INSTALLATION MUST BE IN ACCORDANCE WITH CANADIAN ELECTRICAL CODE, SECTION 18.
5. CAUTION: USE WIRE RATED AT LEAST 5°C ABOVE MAXIMUM AMBIENT TEMPERATURE.
6. WARNING: SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY.
7. THIS PRODUCT MEETS THE DUAL SEAL REQUIREMENTS OF ANSI/ISA 12.27.01. NO ADDITIONAL PROCESS SEALING IS REQUIRED. THE DUAL SEAL PROCESS TEMPERATURE RANGE IS -50°C TO 315°C. FOR THE IN-SERVICE LIMITS APPLICABLE TO A SPECIFIC MODEL, SEE "PROCESS TEMPERATURE LIMITS" IN APPENDIX "A" OF THE PRODUCT MANUAL.
8. RTD WILL BE A SIMPLE APPARATUS.

Rosemount Inc.
8200 Market Boulevard
Chanhassen, MN 55317 USA

DR. M. WEISGURT
ISSUED

CAD MAINTAINED (MicroStation)

SIZE	FSCM NO	DWG NO.	
A		04088-1207	
SCALE N/A	WT. ———	SHEET 4 OF 4	

Form Rev AC

Electronic Master – PRINTED COPIES ARE UNCONTROLLED – Rosemount Proprietary

Rosemount World Headquarters
Emerson Process Management
6021 Innovation Blvd
Shakopee, MN 55379, USA
+1 800 999 9307 or +1 952 906 8888
+1 952 949 7001
RFQ.RMD-RCC@EmersonProcess.com

North America Regional Office
Emerson Process Management
8200 Market Blvd.
Chanhassen, MN 55317, USA
+1 800 999 9307 or +1 952 906 8888
+1 952 949 7001
RMT-NA.RCCRFQ@Emerson.com

Latin America Regional Office
Emerson Process Management
1300 Concord Terrace, Suite 400
Sunrise, Florida, 33323, USA
+1 954 846 5030
+1 954 846 5121
RFQ.RMD-RCC@EmersonProcess.com

Europe Regional Office
Emerson Process Management Europe GmbH
Neuhofstrasse 19a P.O. Box 1046
CH 6340 Baar
Switzerland
+41 (0) 41 768 6111
+41 (0) 41 768 6300
RFQ.RMD-RCC@EmersonProcess.com

Asia Pacific Regional Office
Emerson Process Management Asia Pacific Pte Ltd
1 Pandan Crescent
Singapore 128461
+65 6777 8211
+65 6777 0947
Enquiries@AP.EmersonProcess.com

Middle East and Africa Regional Office
Emerson Process Management
Emerson FZE P.O. Box 17033,
Jebel Ali Free Zone - South 2
Dubai, United Arab Emirates
+971 4 8118100
+971 4 8865465
RFQ.RMTMEA@Emerson.com

Standard Terms and Conditions of Sale can be found at:
www.rosemount.com\terms_of_sale.
The Emerson logo is a trademark and service mark of Emerson Electric Co.
BSAP is a registered trademark of Emerson Electric Co.
Rosemount and the Rosemount logotype are registered trademarks of Rosemount Inc.
Coplanar and MultiVariable are trademarks of Rosemount Inc.
Halocarbon is a trademark of the Halocarbon Products Corporation.
Fluorinert is a registered trademark of Minnesota Mining and Manufacturing Company Corporation.
SYLTHERM and D.C. are registered trademarks of Dow Corning Corporation.
Neobee M-20 is a registered trademark of PVO International, Inc.
ControlWave, FloBoss, and ROCLINK are trademarks of Remote Automation Solutions, a subsidiary of Emerson Process Management.
HART is a registered trademark of FieldComm Group.
Modbus is a registered trademark of Modicon, Inc.
MACTek and VIATOR are registered trademarks of MACTek Corporation.
Microsoft is a registered trademark of Microsoft Corporation in the United States and other countries.
Windows is a trademark of Microsoft Corporation in the United States and other countries.
DTM is a trademark of the FDT Group.
FDT is a registered trademark of the FDT Group.
© 2015 Rosemount Inc. All rights reserved.

ROSEMOUNT

EMERSON
Process Management

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP