ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *ETAS ES1651.1-E* at our website: *Click HERE*

ES1651.1 Carrier Board

User's Guide

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Copyright

The data in this document may not be altered or amended without special notification from ETAS GmbH. ETAS GmbH undertakes no further obligation in relation to this document. The software described in it can only be used if the customer is in possession of a general license agreement or single license. Using and copying is only allowed in concurrence with the specifications stipulated in the contract.

Under no circumstances may any part of this document be copied, reproduced, transmitted, stored in a retrieval system or translated into another language without the express written permission of ETAS GmbH.

© Copyright 2004 - 2007 ETAS GmbH, Stuttgart

The names and designations used in this document are trademarks or brands belonging to the respective owners.

F 00K 103 396 - 12.2007 TTN F 00K 103 396

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Contents

1 Introduction 5
- **1.1** Applications and Features 6
- **1.2** Block Diagram 9

2 Hardware Features 10
- **2.1** Carrier Board for Piggybacks 10
- **2.2** Synchronization Bus 10
- **2.3** Crankshaft Angle Clock Bus (CAC Bus) 11
- **2.4** Generating an Interrupt 15
- **2.5** Inspection and Versioning Data 16

3 CAN Interfaces (Optional) 17
- **3.1** Features 18
- **3.2** Pin Assignment and Signals 19

4 Configuration 20
- **4.1** Configuration of the Debug Port Connections of the Processor (JP0) 20
- **4.2** JTAG Chain Configuration (JP1) 21
- **4.3** Boot Configuration (SW0) 22
- **4.4** Reset Switch (SW3) 22
- **4.5** Addressing the ES1651.1 at the VMEbus (SW1 and SW2) 23

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5 Installing I/O Modules 26
5.1 Assembling the Front Panel to the PB4350XXX Module 26
5.2 Mounting the CAN Transceivers 29
5.3 Mounting the I/O Modules 30

6 Pin Assignments and Display Elements 34
6.1 CAN Ports CAN0 and CAN1 (CO0, CO1) 34
6.2 Synchronization Bus and CAC Bus Connection "SYNC & CAC" (CO2) . . . 35
6.3 Connectors for CAN Transceiver Modules 36
6.3.1 8-Pin Female Header (CO3, CO5) 36
6.3.2 16-Pin Female Header (CO4, CO6) 37
6.4 Box Headers for I/O Modules (CO7 - CO10) 37
6.5 ETAS-Internal Service Connection (CO11) 38
6.6 Interface for Logic Analyser (CO12) 38
6.7 LEDs 39

7 Technical Data 40

8 ETAS Contact Addresses 43

Index 45

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1 Introduction

This User's Guide contains the description of the ES1651.1 Carrier Board.

It consists of the following chapters:

- "Applications and Features" on page 6

  The introduction contains an overview of the characteristics of the ES1651.1 Carrier Board and also includes a block diagram.

- "Hardware Features" on page 10

  This is where the properties of the ES1651.1 Carrier Board are described in detail. These are:

  – "Carrier Board for Piggybacks" on page 10
  – "Synchronization Bus" on page 10
  – "Crankshaft Angle Clock Bus (CAC Bus)" on page 11
  – "Generating an Interrupt" on page 15
  – "Inspection and Versioning Data" on page 16

- "CAN Interfaces (Optional)" on page 17

  This section contains information on the CAN interfaces.

- "Configuration" on page 20

  This section contains a description of the configuration possibilities of the ES1651.1 Carrier Board and their presettings.

- "Addressing the ES1651.1 at the VMEbus (SW1 and SW2)" on page 23

  This section describes addressing the ES1651.1 at the VMEbus.

- "Installing I/O Modules" on page 26

  This section describes how to assemble I/O modules on the ES1651.1 Carrier Board and any necessary preparatory steps:

  – "Assembling the Front Panel to the PB4350XXX Module" on page 26
  – "Mounting the CAN Transceivers" on page 29
  – "Mounting the I/O Modules" on page 30

- "Pin Assignments and Display Elements" on page 34

  This section contains a description of all connectors on the front panel and on the board as well as the meaning of the LED displays.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- "Technical Data" on page 40
  contains the technical data of the ES1651.1 Carrier Board.

Note

Some components of the ES1651.1 Carrier Board may be damaged or destroyed by electrostatic discharges. Please keep the board in its storage package until it is installed.
The ES1651.1 Carrier Board should only be taken from its package, configured and installed at a working place that is protected against static discharge.

Note

The components, connectors and conductors of the ES1651.1 Carrier Board may carry dangerous voltages.
These voltages may even exist when the board is not installed in the VMEbus system or the VMEbus system is powered off.
Make sure that the board is protected against contact during operation.
Disconnect all connections to the ES1651.1 Carrier Board before removing the board from the VMEbus system.

1.1 Applications and Features

The ES1651.1 Carrier Board acts as a carrier board for up to four I/O modules in VMEbus systems. All modules of types "PB4350XXX" and "PB1651XXX" can be used in any combination. An SPI control unit realized in the FPGA of the board converts the parallel data flow of the processor into a serial bit flow for the SPI interfaces of the I/O modules.

The ES1651.1 Carrier Board has a crankshaft angle clock bus for testing engine ECUs in LABCAR projects; this can be used to synchronize I/O modules with a central crankshaft angle clock for speed-synchronous signal acquisition and signal generation. The crankshaft angle clock bus is routed to the 9-pin Sub-D connector on the front panel of the board so that the crankshaft angle clock can be both supplied externally as well as routed to the outside.

Synchronization Bus

The ES1651.1 has a synchronization bus to synchronize the I/O modules of an ES1651.1 Carrier Board with each other. It consists of four lines which can be configured independently of each other. The bus is also routed to the 9-pin Sub-D connector on the front panel of the board so that the signals can be

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

supplied externally or routed to the outside to synchronize I/O modules on other carrier boards. The synchronization lines can also be stimulated from within the simulation model.

CAN Interfaces

There are two identical CAN channels on the ES1651.1 Carrier Board for connecting the board to the CAN bus. The transceiver functionality is realized on piggybacks so that, if necessary, different transceivers can be used than those intended, i.e. than the PCA82C251 transceiver by Philips for high-speed CAN applications [1] and the MAX3055 transceiver by Maxim for low-speed CAN applications[2].

The ETAS PB1651CAN1 transceiver module is a combined high-speed/low-speed CAN transceiver module[3] with galvanic isolation of the CAN channels. Relays are used to toggle between high-speed and low-speed functionality. The CAN controller functionality is realized in the MPC555 processor of the board which has two CAN channels on board.

VMEbus Interface

The ES1651.1 Carrier Board has a VMEbus slave interface and reacts to "A24 non privileged data access" accesses (VMEbus address modifier 39 hex).

The position of the 64-kByte VMEbus address space of the board can be set either dynamically or statically. Data is exchanged with VMEbus master boards via a 32-kByte DPRAM. The board can trigger interrupts at the VMEbus.

Inspection and Versioning Data

Inspection and versioning data of the board are stored in a serial non-volatile data memory. PB1651CAN1 transceiver modules also have serial data memories for version and inspection data.

Processor

In addition to the CAN channels listed, the MPC555 processor of the board also has a 448-kByte ROM memory which is large enough for program code and data; this is why the optional external ROM memory is not assembled.

1. High-speed CAN systems (data rates between 125 kBaud and 1 MBaud) are used e.g. for engine and transmission controls, ESP, ASR, ACC and ABS.
2. Low-speed CAN systems (data rates up to 125 kBaud) are used in the field of convenience electronics.
3. The terms fault-tolerant CAN and low-speed CAN are synonymous.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Fig. 1-1 shows the front panel of the ES1651.1 Carrier Board.

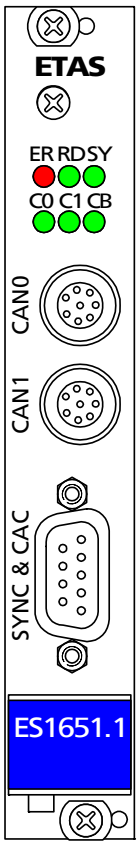


Fig. 1-1 Front Panel of the ES1651.1 Carrier Board

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.2 Block Diagram

Fig. 1-2 shows a block diagram with all important functional units of the ES1651.1 Carrier Board.

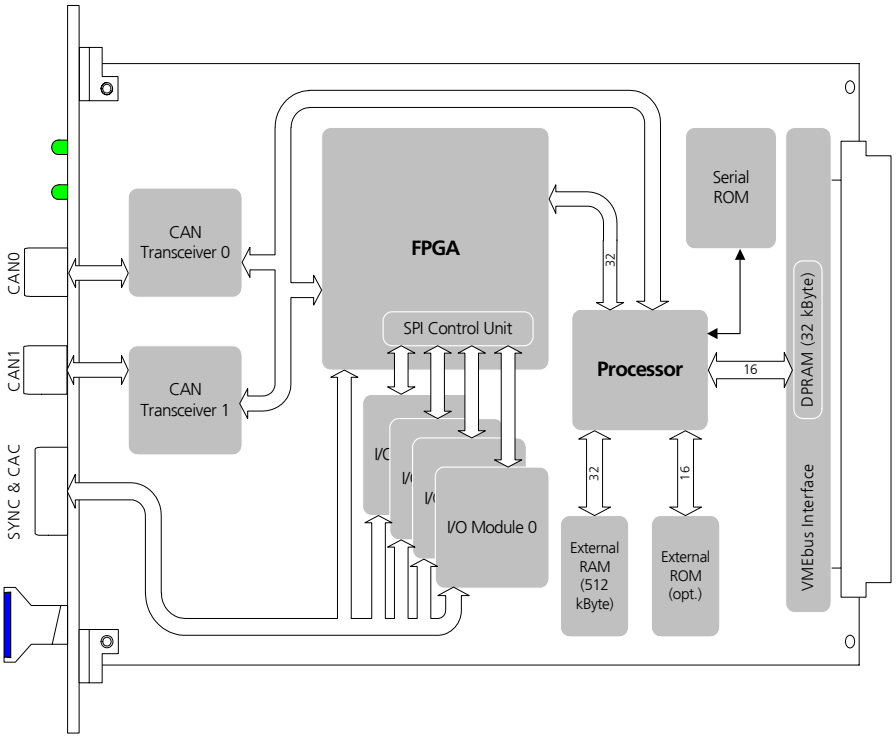


Fig. 1-2 Block Diagram of the ES1651.1 Carrier Board

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2 Hardware Features

This section contains a description of the different hardware features of the ES1651.1 Carrier Board.

These are:

- "Carrier Board for Piggybacks" on page 10
- "Synchronization Bus" on page 10
- "Crankshaft Angle Clock Bus (CAC Bus)" on page 11
- "Generating an Interrupt" on page 15
- "Inspection and Versioning Data" on page 16

2.1 Carrier Board for Piggybacks

The ES1651.1 Carrier Board is used as a carrier board for I/O modules in VME-bus systems. I/O modules are available for various tasks, such as the generation and measuring of ECU signals in real time.

All modules of types "PB4350XXX" and "PB1651XXX" can be used. This means that the LABCAR test system can be equipped both with the standard I/O modules for the ES1651.1 Carrier Board (VME system) and with the highly precise I/O modules for the ES4350 Carrier Board. Up to four I/O modules of both types mentioned above can be used per ES1651.1 Carrier Board.

The I/O modules are connected using ribbon cable. There are four connectors on the ES1651.1 Carrier Board for this purpose. For more details on how to assemble I/O modules, please refer to section 5 on page 26.

2.2 Synchronization Bus

The ES1651.1 Carrier Board has a synchronization bus for synchronizing

- the I/O modules mounted on the carrier board with each other,
- I/O modules with the carrier board,
- I/O modules with other I/O modules which are installed on other ES1651.1 Carrier Boards or ES4350 Carrier Boards in the same or other VMEbus systems,
- with other external hardware which can generate or interpret the relevant synchronization signals.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The synchronization bus has four identical synchronization channels. A block diagram of a single channel is shown in Fig. 2-1.

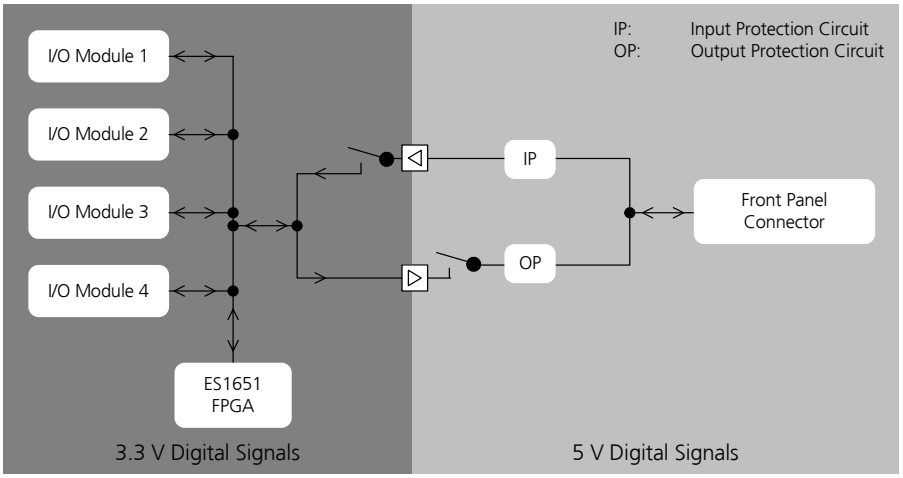


Fig. 2-1 Block Diagram of a Synchronization Channel

The front panel connector can be configured as

- an input which provides the synchronization signals for the carrier board hardware and the I/O modules,
- an output which provides the synchronization signals for external hardware

or can be disconnected from the synchronization bus.

Internally the synchronization bus works with 3.3 V digital signals. To reduce interference sensibility, the signals are transferred to and from external hardware with 5 V digital signals. The direction of an individual synchronization channel can be selected independently of the other synchronization channels.

The input and output stages are protected against overvoltage from -14 V to +19 V (with reference to VMEbus ground).

For more details of the input and output stages, please refer to the section "Technical Data" on page 40.

2.3 Crankshaft Angle Clock Bus (CAC Bus)

The ES1651.1 Carrier Board has a crankshaft angle clock bus (CAC bus) for LABCAR projects which include the stimulation and testing of engine ECUs bus (CAC bus).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Like the synchronization bus, the CAC bus is also connected to the I/O modules and the FPGA of the carrier board. It is connected to I/O modules which are assembled on other ES1651.1 Carrier Boards or ES4350 Carrier Boards, or to other external hardware which can provide or process crankshaft angle clock signals via the 9-pin Sub-D connector on the front panel.

The CAC bus can be driven by the CAC generators on ES1332.1 and ES4320 boards (an I/O module for CAC generation is currently under development). The crankshaft angle clock cannot be generated in the FPGA of the ES1651.1.

The CAC bus of the ES1651.1 consists of the following three signals (refer to Fig. 2-4 on page 14):

- CAC-SYNC signal: Synchronization signal for 0 °CA
- CAC-CLK signal: The actual crankshaft angle clock signal
- CAC-DOR signal: Signal for displaying the direction of rotation

The following two figures show block diagrams of the channel for the synchronization signal (Fig. 2-2) and the CAC signal (Fig. 2-3) respectively. The channel for the direction signal is identical to the channel for hardware synchronization (see Fig. 2-1 on page 11).

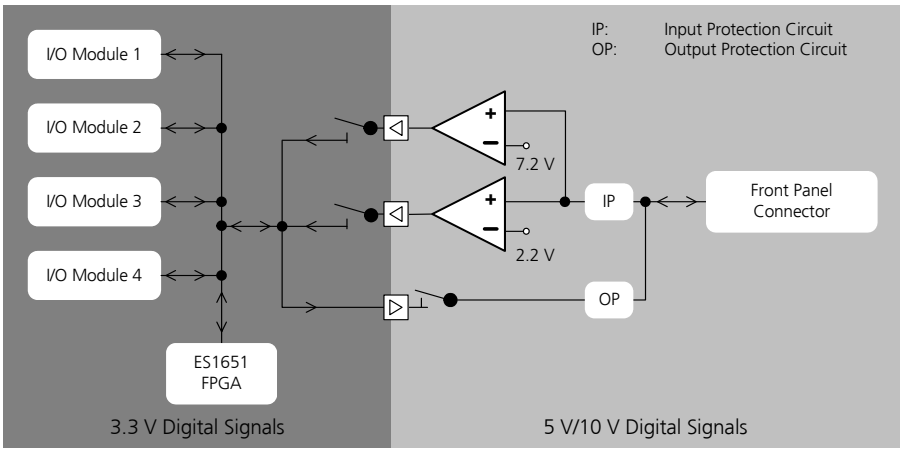


Fig. 2-2 Block Diagram of the CAC Bus Synchronization Channel

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

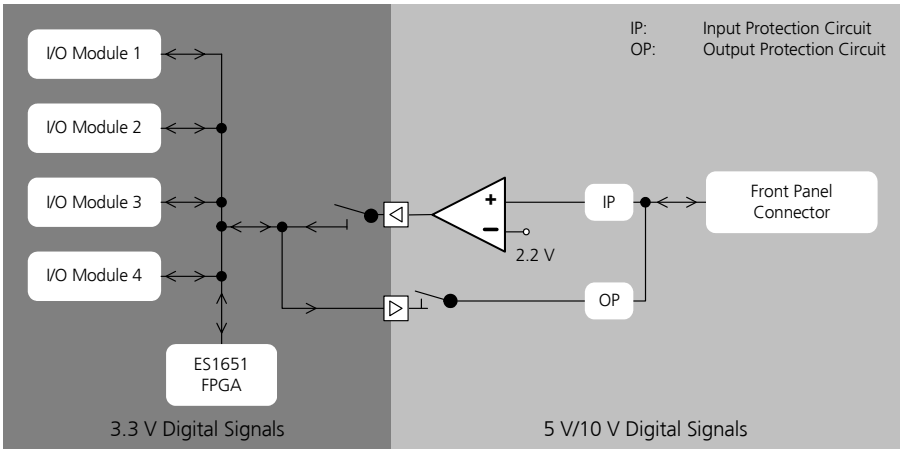


Fig. 2-3 Block Diagram of the CAC Bus Crankshaft Angle Clock Channel

The CAC bus front panel connector can be configured as

- an input which provides the CAC signals for the carrier board hardware and the I/O modules,
- an output which provides the CAC signals for external hardware

or can be disconnected from the crankshaft angle clock.

The input and output stages are protected against overvoltage from -14 V to +19 V (with reference to VMEbus ground).

Internally the synchronization bus works with 3.3 V digital signals – the levels of the output signals of the CAC bus on the front panel are shown in Fig. 2-4 on page 14.

The CAC bus inputs can process two types of CAC signal:

- The combined CAC synchronization and clock signal as generated by ES1332 boards (see Fig. 2-5 on page 15).

  This signal must be connected to the pin of the CAC synchronization signal as well as to the pin of the CAC clock signal of the Sub-D front panel connector for this purpose. In this case, the "Input ES1332 CAC" option must be set in the option box "CAC Port Mode" in the "ES1651-CTRL" RTIO element of the ES1651-RTIO integration. This results in the switch at the output of the 7.2 V comparator (Fig. 2-2 on page 12) and the switch at the output of the 2.2 V comparator (Fig. 2-3 on page 13) being closed.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- Input signals of the type shown in Fig. 2-4.

  The signals are connected to the relevant pins of the Sub-D front panel connector. In this case, the "Input" option must be set in the option box "CAC Port Mode" in the "ES1651-CTRL" RTIO element of the ES1651-RTIO integration. This results in the switch at the output of the 2.2 V comparator (Fig. 2-2 on page 12) and the switch at the output of the 2.2 V comparator (Fig. 2-3 on page 13) being closed.

Note

The pin assignment of the 9-pin Sub-D connector is contained in the section "Synchronization Bus and CAC Bus Connection "SYNC & CAC" (CO2)" on page 35.

The direction of the CAC bus signals (input or output) can only be selected for the bus as a whole.

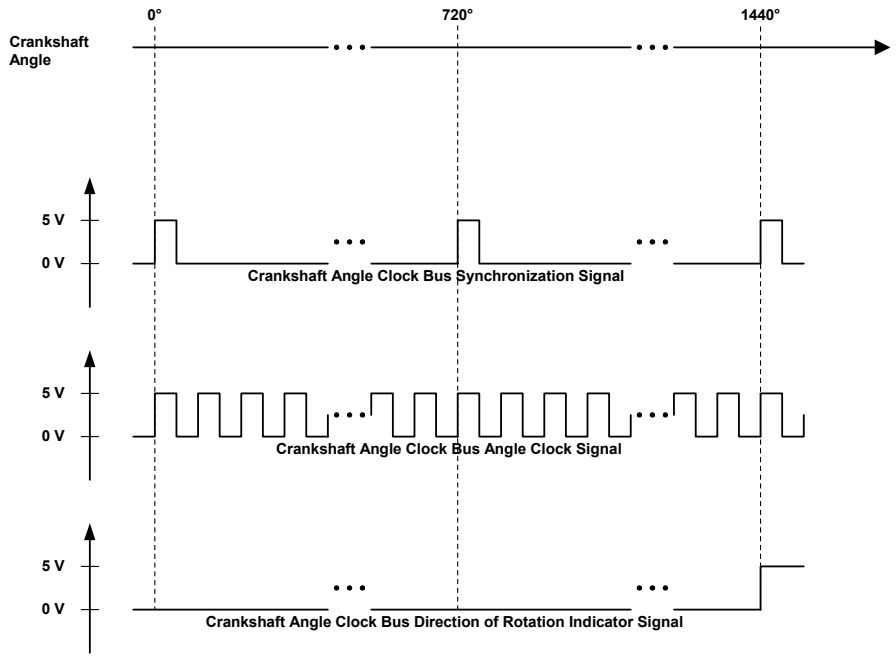


Fig. 2-4 CAC Bus Output Signals

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

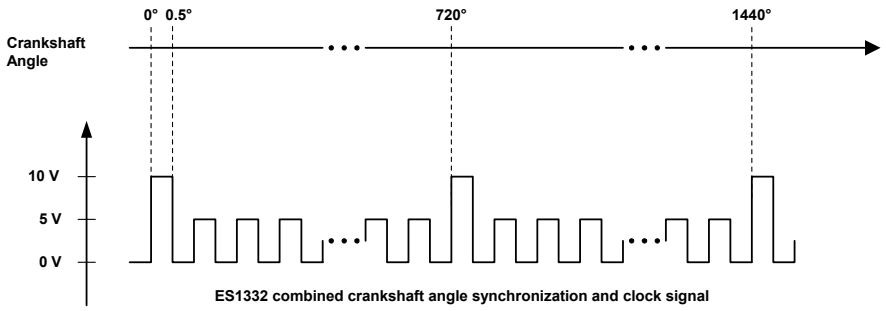


Fig. 2-5 Combined CAC Synchronization and Clock Signal (ES1332)

For more details of the input and output stages, please refer to the section "Technical Data" on page 40.

2.4 Generating an Interrupt

The ES1651.1 Carrier Board has eight interrupt lines which, connected via a logical "OR" operation, generate a common interrupt request on the VMEbus.

Each of these eight interrupt lines can be activated or deactivated using the software. If a line is activated, an interrupt request is generated by a falling signal edge on the interrupt line. The VMEbus interrupt handler then determines which of the interrupt lines was the source of the request.

The interrupt lines PB0_IRQ to PB3_IRQ of the I/O modules are connected to interrupt lines 0 to 3 of the VMEbus interface. The ES1651.1 Carrier Board also makes it possible to connect one of the synchronization bus lines to interrupt line 4 – this is selected using the software.

Interrupt lines 5 to 7 are not assigned to date.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

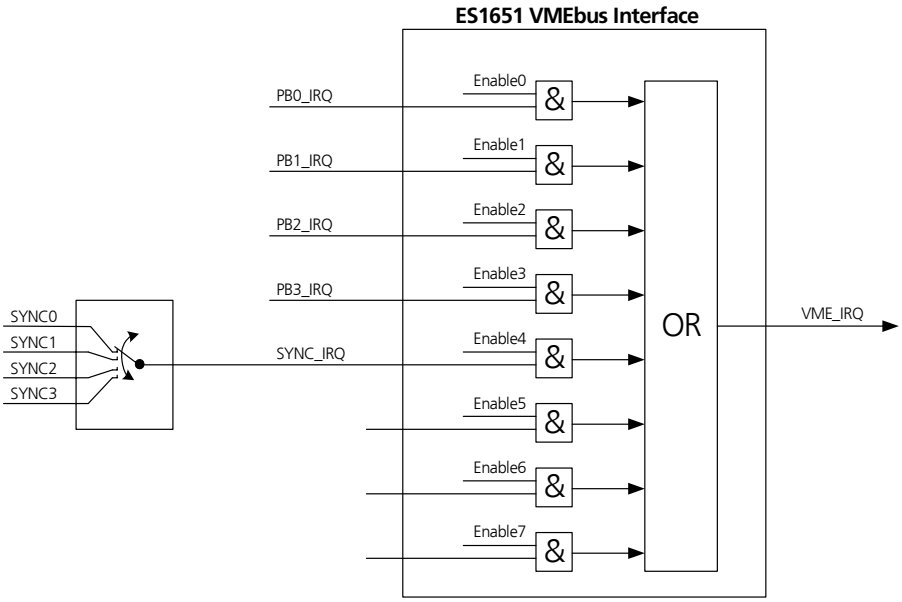


Fig. 2-6 The Interrupt Concept of the ES1651.1

2.5 Inspection and Versioning Data

Inspection and versioning data of the board are stored in a serial non-volatile data memory which is addressed via the processor's SPI (Serial Peripheral Interface). The data can be read out via the operating software LABCAR-OPERATOR.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3 CAN Interfaces (Optional)

There are two identical CAN channels on the ES1651.1 Carrier Board for connecting the board to the CAN bus. The transceiver functionality is realized on piggybacks so that, if necessary, different transceivers can be used than those intended, i.e. than the PCA82C251 transceiver by Philips for high-speed CAN applications and the MAX3055 transceiver by Maxim for low-speed CAN applications.

The ETAS PB1651CAN1 transceiver module is a combined high-speed/low-speed CAN transceiver module with galvanic isolation of the CAN channels. Relays are used to toggle between high-speed and low-speed functionality. A 120 Ohm bus termination of the high-speed CAN interface can also be activated and deactivated using a relay switch.

The relay switches can be controlled using the LABCAR-OPERATOR operating software. The CAN controller functionality is realized in the MPC555 processor of the board which has two CAN channels on board.

The PB1651CAN1 transceiver modules have a serial non-volatile data memory for inspection and versioning data which is addressed via the processor's SPI interface. The data can be read out via the operating software LABCAR-OPERATOR.

The block diagram of a PB1651CAN1 transceiver module is shown in Fig. 3-1.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

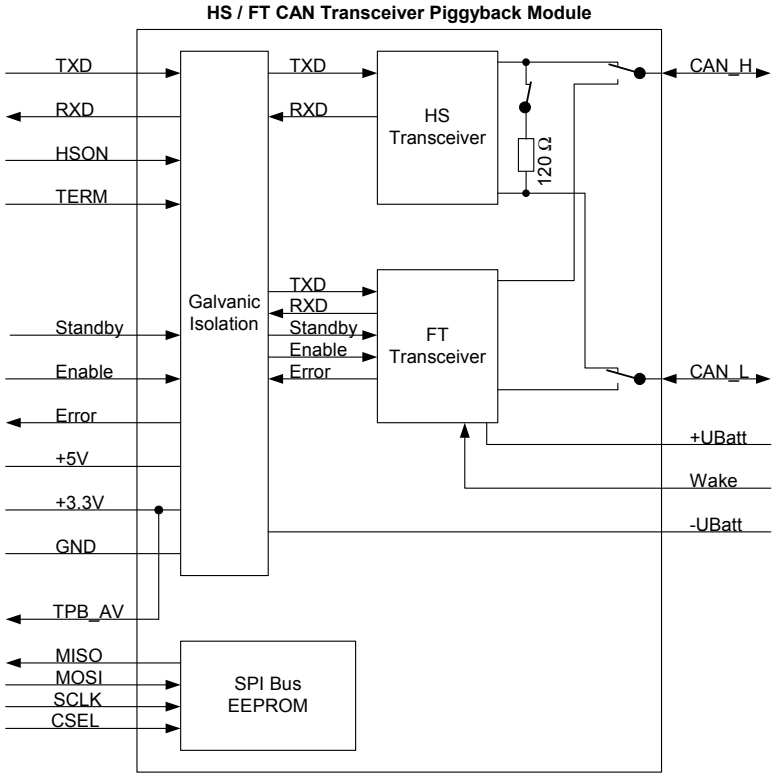


Fig. 3-1 Block Diagram of a PB1651CAN1 Transceiver Module

3.1 Features

The PB1651CAN1 transceiver modules have the following features:

- Galvanic isolation from the VMEbus
- ±36 V on CAN_H and CAN_L
- Toggling between high-speed and low-speed CAN interface via relays
- The high-speed CAN transceiver is fully compatible with the ISO 11898-24 V standard
- 120 Ω terminating resistor of the high-speed CAN interface can be switched using relays

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- Full support of the operating modes ”Standby” and ”Sleep” of the fault-tolerant CAN transceiver as well as error monitoring
- Switch technology for reducing electromagnetic emission and improving the electromagnetic compatibility of the CAN channel
- SPI bus EEPROM for versioning, inspection and maintenance data
- Automatic detection of the transceiver module with the LABCAR-OPERATOR operating software
- The bus lines CAN_H and CAN_L are each terminated on the low-speed CAN transceiver with 2.2 kΩ.

3.2 Pin Assignment and Signals

The CAN transceiver module and the ES1651.1 Carrier Board are connected using an 8-pin and a 16-pin connector. For more details on the pin assignment, please refer to the section "Connectors for CAN Transceiver Modules" on page 36.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4 Configuration

Fig. 4-1 shows the position of all connectors and switches for configuring the ES1651.1 Carrier Board - in addition to important components and connectors for orientation purposes.

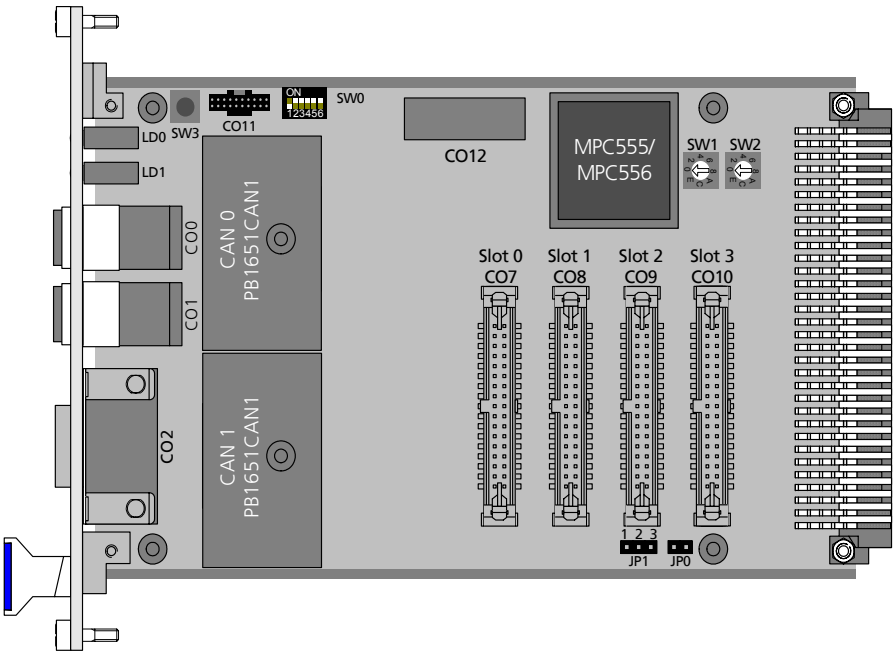


Fig. 4-1 Position of the Connectors, Jumpers and Switches (Component Side)

4.1 Configuration of the Debug Port Connections of the Processor (JP0)

JP0 Jumper	Meaning
set	Debug port connections
open	JTAG interface (preset)

Tab. 4-1 JP0 Jumper

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.2 JTAG Chain Configuration (JP1)

Use the JP1 jumper to set whether the I/O modules are included in the JTAG chain or not.

JP1 Jumper	Meaning
Pos. 1-2	JTAG chain bypasses I/O modules (preset)
Pos. 2-3	I/O moduls are included in the JTAG chain

Tab. 4-2 JP1 Jumper

Note

The jumper at JP1 must be in one of the positions listed in Tab. 4-2. Otherwise the JTAG chain is open which leads to errors.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.3 Boot Configuration (SW0)

The boot configuration is determined using the SW0 switch.

DIL switch	Meaning	Presetting
1	Flash enable – determines whether the MPC555 Flash memory is activated or deactivated after a reset. OFF: Flash disabled – the system is booted from the external memory ON: Flash enabled	ON
2	Determines the base address of the MPC555-internal memory space OFF: 0x0000 0000 ON: 0x0100 0000	OFF
3	Boot port size OFF: 32-bit port ON: 16-bit port	OFF
4	Hard reset configuration word OFF: Configuration word is read by external data bus ON: The internal configuration word is used	OFF
5,6	Source for boot code OFF, OFF: Internal flash memory OFF, ON: External SRAM ON, OFF: Dual-Ported RAM ON, ON: External Flash memory	OFF, OFF

Tab. 4-3 DIL Switch SW0 for Boot Configuration

4.4 Reset Switch (SW3)

Results in a reset of the ES1651.1 Carrier Board, but not a VMebus reset.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.5 Addressing the ES1651.1 at the VMEbus (SW1 and SW2)

The ES1651.1 Carrier Board can be operated both in (standard) VMEbus systems with 96-pin backplane connectors and in VME64x systems with geographical addressing. With two HEX switches, SW1 and SW2, (see Fig. 4-1 on page 20), the board is addressed in the setting "0x00" in "geographical addressing mode" and in all other settings in the relevant address spaces.

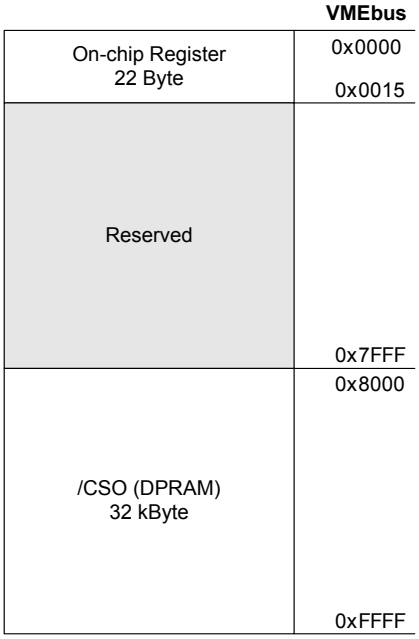


Fig. 4-2 Address Map

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

In the "0x00" setting, the ES1651.1 Board maps 256 bytes into the A24 address space depending on the slot position. Depending on the available memory area, the 64 kB address space is then assigned dynamically by the system controller.

Slot Position	Address	VME Interface (Control Register)
1	E0E000 - E0E0FF	256 bytes
2	E0E100 - E0E1FF	256 bytes
3	E0E200 - E0E2FF	256 bytes
4	E0E300 - E0E3FF	256 bytes
5	E0E400 - E0E4FF	256 bytes
6	E0E500 - E0E5FF	256 bytes
7	E0E600 - E0E6FF	256 bytes
8	E0E700 - E0E7FF	256 bytes
9	E0E800 - E0E8FF	256 bytes
10	E0E900 - E0E9FF	256 bytes
11	E0EA00 - E0EAFF	256 bytes
12	E0EB00 - E0EBFF	256 bytes
13	E0EC00 - E0ECFF	256 bytes
14	E0ED00 - E0EDFF	256 bytes
15	E0EF00 - E0EFFF	256 bytes
16	E0F000 - E0F0FF	256 bytes
17	E0F100 - E0F1FF	256 bytes
18	E0F200 - E0F2FF	256 bytes
19	E0F300 - E0F3FF	256 bytes
20	E0F400 - E0F4FF	256 bytes
21	E0F500 - E0F5FF	256 bytes

Tab. 4-4 Slot Position and Address

Note

VMEbus backplanes can have a maximum of 21 slots.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The 64 kB address space is assigned statically with every other setting of the hex switches (≠ 0x00).

Switch Setting	Address Space
0x01	010000 - 01FFFF
0x02	020000 - 02FFFF
0x03	030000 - 03FFFF
..	.
0xFF	FF0000 - FFFFFF

Tab. 4-5 Setting the Address Spaces

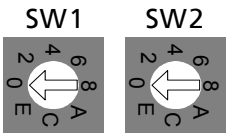


Fig. 4-3 Switch for Address Setting

SW1	SW2
0x**n**0	0x0**n**
Address A23 - A20	Address A16 - A19

Tab. 4-6 Meaning of the Switches SW1 and SW2

Example:

Required: base address A24 at 0xC20000

Settings: SW1=0xC, SW2=0x2

Note

The default setting is: SW1=0x0, SW2=0x0

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5 Installing I/O Modules

This section describes how to install I/O modules.

Note

I/O modules of the type "PB1651XXX" are delivered with the front panel assembled; modules of the type "PB4350XXX" come with a front panel which is not assembled. If you want to mount a module of type "PB4350XXX" on the ES1651.1 Carrier Board, you first have to assemble its front panel.

5.1 Assembling the Front Panel to the PB4350XXX Module

Proceed as follows to assemble the front panel on a module of the type "PB4350XX":

- Tighten the printed board brackets as shown in Fig. 5-1 with the Pozidrive flathead screws M2.5x10 provided on the module.

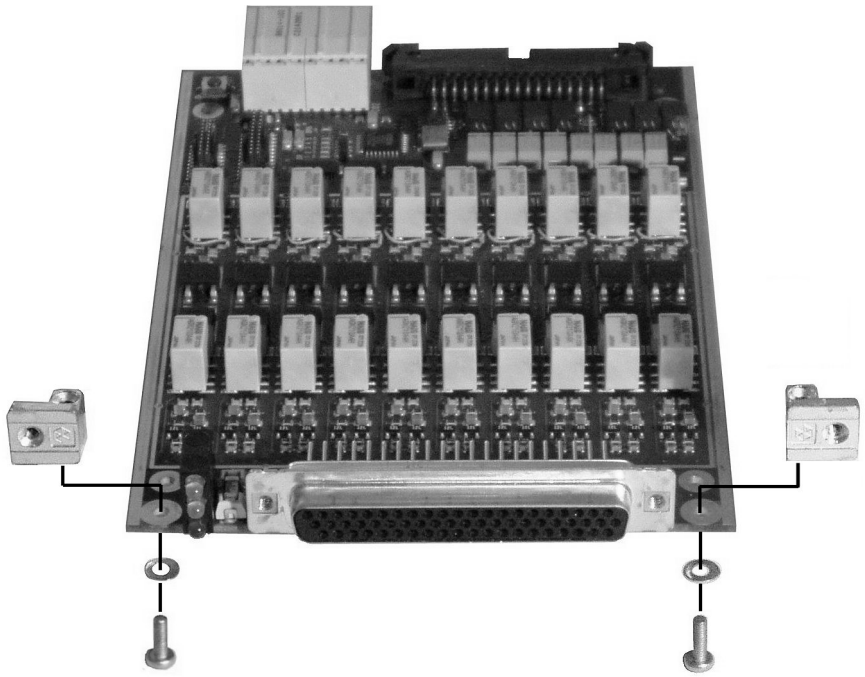


Fig. 5-1 Tightening the Printed Board Brackets

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- Fasten the front panel with the hexagon head screws above and below the "OUTPUT 0-9" connector (Fig. 5-2).

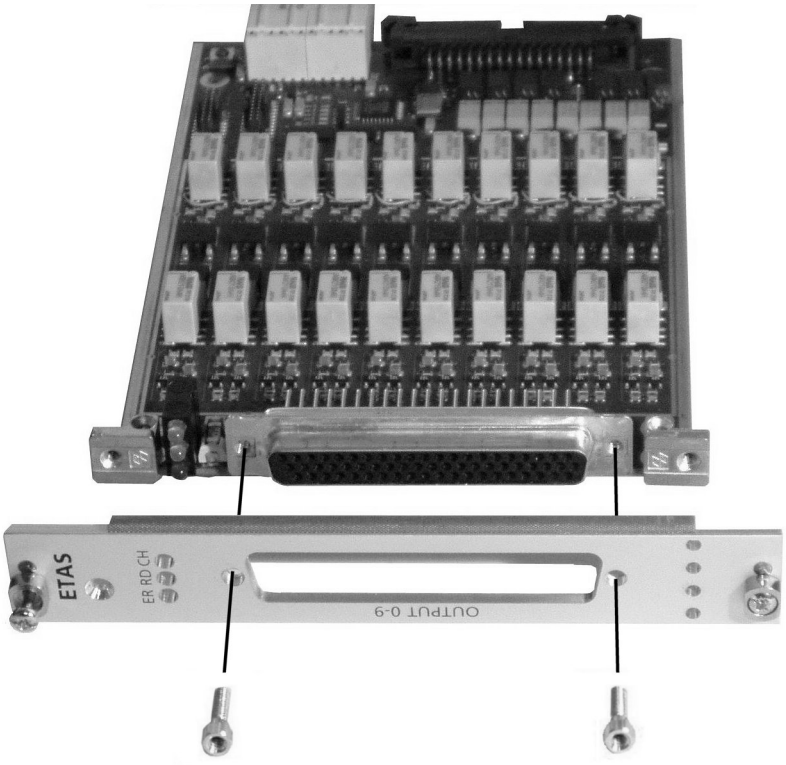


Fig. 5-2 Fastening the Front Panel at the Connector

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- Fasten the front panel at the top with the raised countersunk head screw M2.5x8 to the bracket attached previously.
- Fasten the front panel at the bottom and the front panel handle to the bracket attached previously using the Pozidrive flathead screw M2.5x16 (Fig. 5-3).

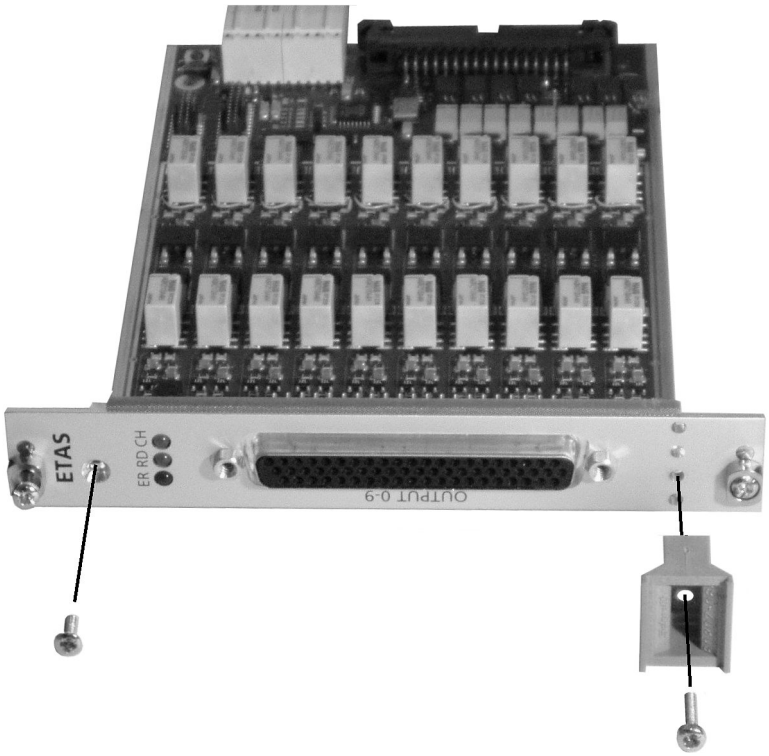


Fig. 5-3 Attaching the Upper and Lower Fastening Screws

- Finally press the identification plate into the extraction handle.

You have now mounted the front panel for a PB4350XXX module.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5.2 Mounting the CAN Transceivers

Note

The ES1651.1 Carrier Board is normally delivered with its CAN transceivers already assembled. The following description is purely for the sake of completeness.

Proceed as follows to mount the piggybacks with the CAN transceivers:

- Position the piggyback on the two female headers intended.
- Make sure the pins of the module match the corresponding contacts exactly.
- Press the module pins into the female headers by pressing left and right alternately (see arrows in Fig. 5-4).

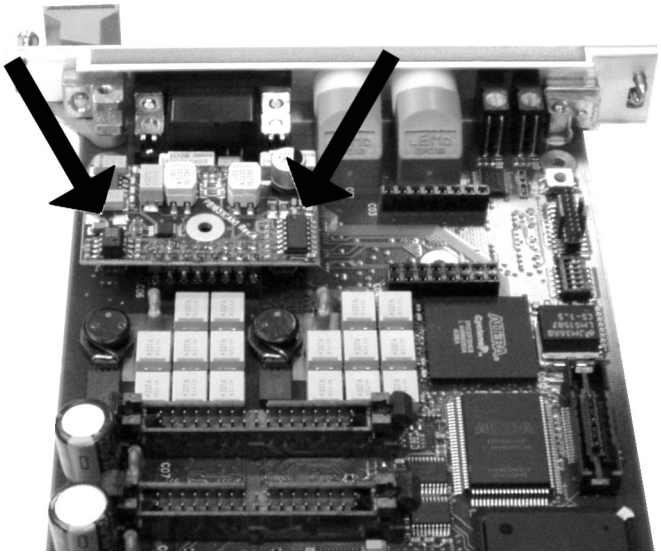


Fig. 5-4 Mounting the CAN Transceivers

- Then tighten the piggyback on the ES1651.1 Carrier Board with the M2.5x13 screw provided.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5.3 Mounting the I/O Modules

Proceed as follows to mount the I/O modules.

To mount distance pins on the ES1651.1 Carrier Board

- Make sure you have four distance pins at hand which have an internal thread on both sides.
- Get out four screws.
- Screw all four distance pins onto the ES1651.1 Carrier Board (distance pins on the component side, screws on the solder (dip) side, see Fig. 5-5)

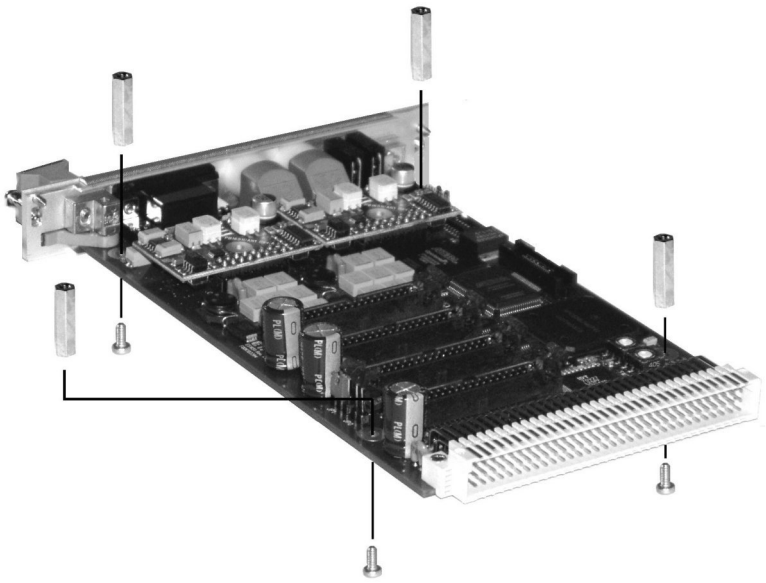


Fig. 5-5 Mounting Distance Pins on the ES1651.1 Carrier Board

To insert ribbon cable in box headers on the ES1651.1 Carrier Board

- Insert the ribbon cable delivered with the corresponding I/O module into Slot 0.
- If you want to mount further I/0 modules, insert the ribbon cable correspondingly into Slot 1, then Slot 2, Slot 3 etc.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

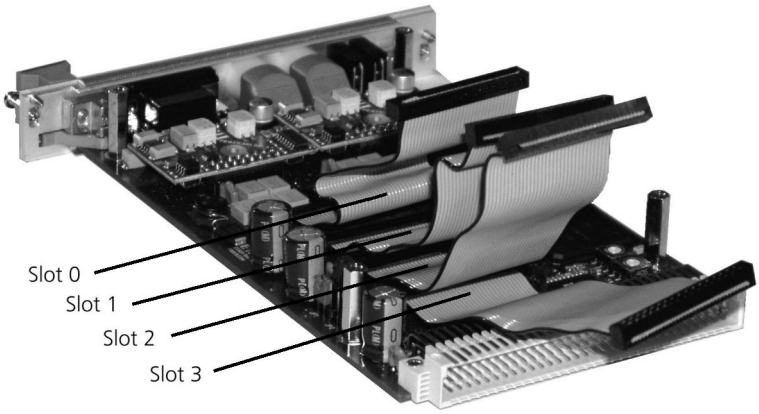


Fig. 5-6 Inserting the Ribbon Cable

To mount I/O modules

Note

If you only want to mount one I/0 module, continue with "To mount the last I/O module" on page 32.

- Make sure you have four distance pins at hand which have an external thread on one side.
- Lie the I/0 module on the distance pins you have just mounted on the Carrier Board.
- Tighten the I/O module with the distancepins (see Fig. 5-7 on page 32).
- Slot the connector of the relevant ribbon cable into the box header of the I/O module.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

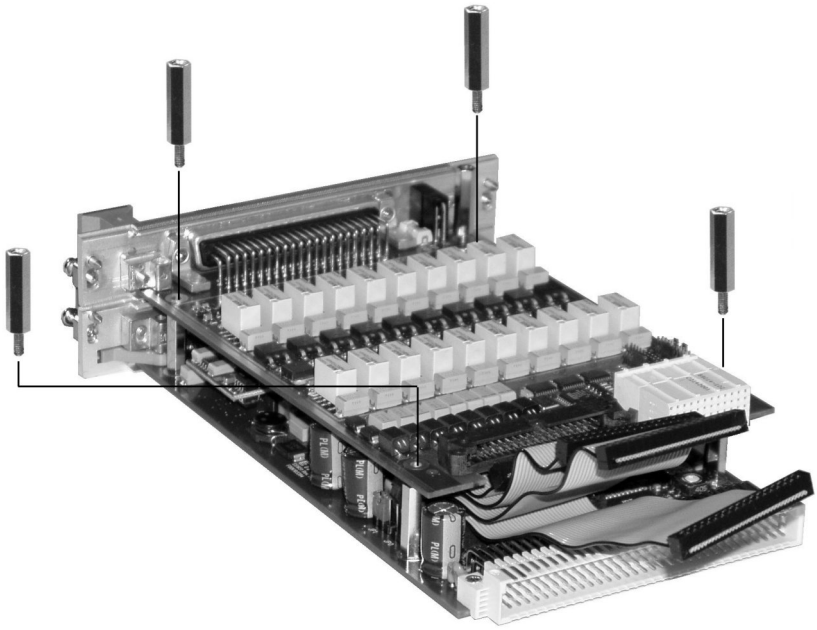


Fig. 5-7 Mounting the I/O Module

- Mount further I/O modules in the same way.

  The mounting of the last module is described in the following section.

To mount the last I/O module

- Mount the last I/O module as described above – it is tightened, however, with four screws (see Fig. 5-8 on page 33).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

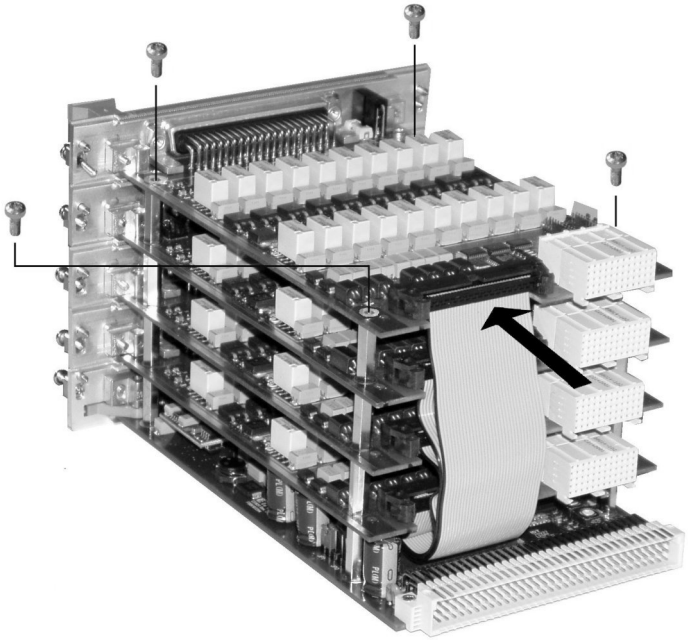


Fig. 5-8 Mounting the Last I/O Module

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6 Pin Assignments and Display Elements

This section contains a description of the pin assignments of the connectors on the front panel and on the board itself and the meaning of the display elements on the front panel.

The position and name of the individual elemenets is shown in Fig. 4-1 on page 20.

These are:

- "CAN Ports CAN0 and CAN1 (CO0, CO1)" on page 34
- "Synchronization Bus and CAC Bus Connection "SYNC & CAC" (CO2)" on page 35
- "Connectors for CAN Transceiver Modules" on page 36
- "Box Headers for I/O Modules (CO7 - CO10)" on page 37
- "LEDs" on page 39

6.1 CAN Ports CAN0 and CAN1 (CO0, CO1)

Socket - LEMO 8-pin. Type: Lemo EPC.1B.308.HLN

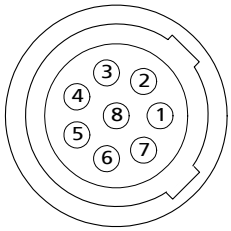


Fig. 6-1 CO0 ("CAN0") and CO1 ("CAN1") Connectors (View from the Plug-In Side)

The mating connector is of type Lemo FGC.1B.308.CLA052.

Pin	Assignment	Pin	Assignment
1	Wake	5	n.c.
2	CAN Low	6	CAN ground/-UBatt
3	CAN ground/-UBatt	7	CAN High
4	n.c.	8	+UBatt

Tab. 6-1 "CAN0" and "CAN1" Pin Assignment

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6.2 Synchronization Bus and CAC Bus Connection "SYNC & CAC" (CO2)

Socket - Sub-D 9-pin.

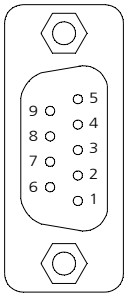


Fig. 6-2 "SYNC & CAC" Socket (View from the Plug-In Side)

Pin	Signal	Direction	Function
1	SYNC0	Bi-directional	Synchronization line 0
2	SYNC1	Bi-directional	Synchronization line 1
3	SYNC2	Bi-directional	Synchronization line 2
4	SYNC3	Bi-directional	Synchronization line 3
5	Ground	-	VMEbus ground
6	CAC_SYNC	Bi-directional	Crankshaft angle clock: Synchronization signal for 0° CA
7	CAC_CLK	Bi-directional	Crankshaft angle clock: Crankshaft angle signal
8	CAC_DOR	Bi-directional	Crankshaft angle clock: Direction of rotation signal
9	Ground	-	VMEbus ground

Tab. 6-2 "SYNC & CAC" Pin Assignment

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6.3 Connectors for CAN Transceiver Modules

CO3: Transceiver Module 0
CO5: Transceiver Module 1



CO4: Transceiver Module 0
CO6: Transceiver Module 1

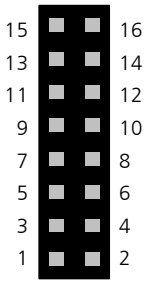


Fig. 6-3 Female Headers for the CAN Transceiver Modules (View of Component Side)

6.3.1 8-Pin Female Header (CO3, CO5)

Pin	Assignment
1	Housing ground
2	+3.3 V
3	/Wake
4	CAN_L
5	CAN_H
6	+UBatt
7	-UBatt/CAN ground
8	VMEbus ground

Fig. 6-4 CO3/CO5 Pin Assignment

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6.3.2 16-Pin Female Header (CO4, CO6)

Pin	Assignment	Pin	Assignment
1	TxD	2	RxD
3	HsON	4	HsTERM
5	/FtStandby	6	FtEnable
7	/FtError	8	MOSI
9	MISO	10	SCLK
11	/CSEL	12	USR0
13	USR1	14	TPB_AV
15	+5 V	16	VMEbus ground

Tab. 6-3 CO4/CO6 Pin Assignment

6.4 Box Headers for I/O Modules (CO7 - CO10)

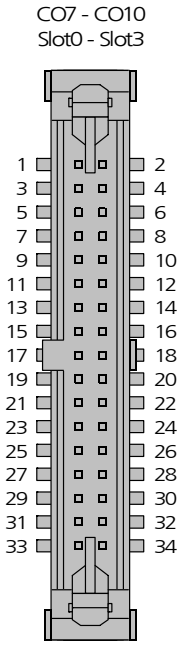


Fig. 6-5 Box Headers for Connecting I/O Modules

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Pin	Assignment	Pin	Assignment
1	/RESET	2	SOUT
3	SDIN	4	SCLK
5	/SCS0	6	/SCS1
7	TDO	8	TDI
9	TMS	10	TCK
11	/IRQ	12	PROG_DONE
13	CAC_CLK	14	CAC_SYNC
15	CAC_DOR	16	SYNC0
17	SYNC1	18	SYNC2
19	SYNC3	20	PB_AV
21	GND	22	+5 V
23	+5 V	24	+3.3 V
25	+3.3 V	26	+2.5 V
27	GND	28	GND
29	AGND	30	AGND
31	+12 V	32	+12 V
33	-12 V	34	-12 V

Tab. 6-4 CO7 - CO10 Pin Assignment

6.5 ETAS-Internal Service Connection (CO11)

CO11 provides various access possibilities for ETAS-internal purposes such as e.g. RS232, Debug, JTAG, Boundary Scan.

6.6 Interface for Logic Analyser (CO12)

A further debug interface for ETAS-internal purposes.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6.7 LEDs

There are 6 LEDs on the front panel of the ES1651.1 Carrier Board, the meaning of which is described below.



LED	Color	Meaning
ER	Red	Error
RD	Green	Ready
SY	Green	There are modules on the ES1651.1 Carrier Board which work in synchronization mode.
C0	Green	CAN interface 0 takes part in communication on the CAN bus
C1	Green	CAN interface 1 takes part in communication on the CAN bus
CB	Green	The CAN channels are connected to the CAN bus of the ES1651.1 Carrier Board.

Tab. 6-5 Significance of the LEDs

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

7 Technical Data

This chapter contains the technical data of the ES1651.1 Carrier Board.

Number of slots	4
Supported types of I/O modules	PB1651XXX and PB4350XXX
Configuration of the I/O modules	PB1651XXX and PB4350XXX, mixed
Synchronization of I/O modules	Yes
Number of synchronization signals	4
Sources of the synchronization signals	- I/O module - ES4350.1 processor/FPGA - ES4300 backplane

Synchronization Bus: Outputs

Logic level	TTL (5 V)
Maximum output current	6 mA
Cutoff frequency f_{max}	1.2 MHz
Overvoltage protection	-14 V ... +19 V

Synchronization Bus: Inputs

Logic level	TTL (5 V)
Input impedance	> 200 kΩ
Cutoff frequency f_{max}	1.2 MHz
Overvoltage protection	-14 V ... +19 V

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

CAC Bus: Output (All CAC Bus Signals)

Logic level	TTL (5 V)
Maximum output current	6 mA
Cutoff frequency f_{max}	1.2 MHz
Overvoltage protection	-14 V ... +19 V

CAC Bus: Input (CAC-SYNC and CAC_CLK Signal)

Supported CAC signal forms	- Combined CAC synchronization and clock signal in acc. with Fig. 2-5 on page 15 - CAC bus signals in acc. with Fig. 2-4 on page 14
Input impedance	> 200 kΩ
Cutoff frequency f_{max}	1.2 MHz
Overvoltage protection	-14 V ... +19 V

CAC Bus: Input (CAC-DOR Signal)

Logic level	TTL (5 V)
Input impedance	> 200 kΩ
Cutoff frequency f_{max}	1.2 MHz
Overvoltage protection	-14 V ... +19 V

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Power Supply

Current consumption*	1 A @ +5 V DC 0.1 A @ +12 V DC 0.1 A @ -12 V DC

* Underlying conditions: No I/O moduls assembled – CAN transceiver moduls assembled and CAN in operation.

Environmental Conditions

Operating temperature	5 °C to 35 °C (5.00 °C to 35.00 °C)
Relative humidity	0 to 95% (non-condensing)

Physical Dimensions

Printed circuit board (L x W)	145 mm x 100 mm
Front panel	Height: 3 U Width: 4 HP

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

8 ETAS Contact Addresses

ETAS HQ

ETAS GmbH

Borsigstraße 14	Phone:	+49 711 89661-0
70469 Stuttgart	Fax:	+49 711 89661-105
Germany	E-mail:	sales@etas.de
	WWW:	www.etasgroup.com

North America

ETAS Inc.

3021 Miller Road	Phone:	+1 888 ETAS INC
Ann Arbor, MI 48103	Fax:	+1 734 997-9449
USA	E-mail:	sales@etas.us
	WWW:	www.etasgroup.com

Japan

ETAS K.K.

Queen's Tower C-17F	Phone:	+81 45 222-0900
2-3-5, Minatomirai, Nishi-ku	Fax:	+81 45 222-0956
Yokohama 220-6217	E-mail:	sales@etas.co.jp
Japan	WWW:	www.etasgroup.com

Great Britain

ETAS Ltd.

Studio 3, Waterside Court	Phone:	+44 1283 54 65 12
Third Avenue, Centrum 100	Fax:	+44 1283 54 87 67
Burton-upon-Trent	E-mail:	sales@etas-uk.net
Staffordshire DE14 2WQ	WWW:	www.etasgroup.com
Great Britain		

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

France

ETAS S.A.S.

1, place des Etats-Unis	Phone:	+33 1 56 70 00 50
SILIC 307	Fax:	+33 1 56 70 00 51
94588 Rungis Cedex	E-mail:	sales@etas.fr
France	WWW:	www.etasgroup.com

Korea

ETAS Korea Co. Ltd.

4F, 705 Bldg. 70-5	Phone:	+82 2 57 47-016
Yangjae-dong, Seocho-gu	Fax:	+82 2 57 47-120
Seoul 137-889	E-mail:	sales@etas.co.kr
Korea		www.etasgroup.com

China

ETAS (Shanghai) Co., Ltd.

2404 Bank of China Tower	Phone:	+86 21 5037 2220
200 Yincheng Road Central	Fax:	+86 21 5037 2221
Shanghai 200120, P.R. China	E-mail:	sales.cn@etasgroup.com
	WWW:	www.etasgroup.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Index

A

Addressing
  at the VMEbus (SW1 and SW2) 23

B

Block diagram 9
  ES1651.1 Carrier Board 9

C

CAC bus 11
CAN interfaces 7, 17
CAN transceiver
  mounting 29
Configuration 20
  boot configuration (SW0) 22
  debug port connections (JP0) 20
  JTAG chain (JP1) 21
  VMEbus addressing (SW1 and SW2) 23
Crankshaft angle clock bus 11

E

ES1651.1 Carrier Board
  block diagram 9
  front panel 8
  technical data 40
ETAS Contact Addresses 43

F

Front panel 8

G

Generating an interrupt 15

H

Hardware features 10

I

I/O modules
  installing 26
Inspection data 16

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

L
LEDs 39

P
Pin assignment
CAN ports CAN0 and CAN1 34
CAN transceiver modules 36
connector strips for I/O modules 37
synchronization bus and CAC bus connection "SYNC & CAC" 35

R
Reset switch (SW3) 22

S
Synchronization bus 6, 10
Synchronization signals 10

T
Technical data
ES1651.1 Carrier Board 40

V
Versioning data 16
VMEbus interface 7

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP