ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Abaco Systems V7865-230003* at our website: *Click HERE*


GE
Intelligent Platforms

Hardware Reference

V7865*

Intel® Core™ Duo Processor VME Single Board Computer

THE V7865 IS DESIGNED TO MEET THE EUROPEAN UNION (EU) RESTRICTIONS OF HAZARDOUS SUBSTANCE (ROHS) DIRECTIVE (2002/95/EC) CURRENT REVISION.

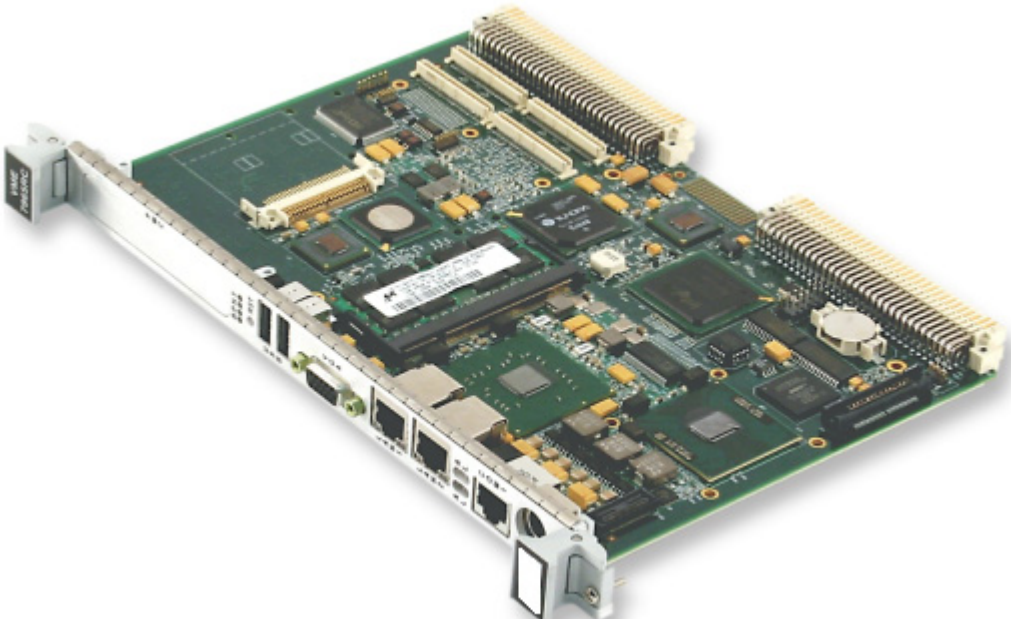

Publication No: 500-9300007865-000 Rev. G

imagination at work

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Document History

Hardware Reference Document Number: 500-9300007865-000 Rev. G

December 14, 2012

Waste Electrical and Electronic Equipment (WEEE) Returns



GE is registered with an approved Producer Compliance Scheme (PCS) and, subject to suitable contractual arrangements being in place, will ensure WEEE is processed in accordance with the requirements of the WEEE Directive.

GE will evaluate requests to take back products purchased by our customers before August 13, 2005 on a case by case basis. A WEEE management fee may apply.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table of Contents

List of Figures 6
List of Tables 7
Overview 8
1 • Handling and Installation 17
1.1 Unpacking Procedures. 17
1.2 Handling Precaution. 17
1.3 Hardware Setup. 17
1.4 Connectors, Headers and Switches. 18
1.5 Jumper Settings. 20
1.6 Installation. 22
1.6.1 Power Requirements 23
1.7 Front Panel. 25
1.7.1 Connectors 25
1.7.2 LEDs 25
1.7.3 LED Definitions 26
1.8 BIOS Setup. 28
1.9 Battery Mounted in Horizontal Holder on the Board. 28
2 • Standard Features 29
2.1 BGA CPU. 29
2.2 Physical Memory. 29
2.3 Memory and Port Maps. 30
2.3.1 Memory Map - Tsi148 Based PCI-to-VME Bridge 30
2.4 I/O Port Map. 30
2.5 Interrupts. 32
2.5.1 System Interrupts 32
2.5.2 PCI Interrupts 35
2.5.3 PCI Device Interrupt Map 36
2.6 Integrated Peripherals. 37
2.7 Ethernet Controllers. 38
2.7.1 10Base-T 38
2.7.2 100Base-TX 38
2.7.3 1000Base-T 38
2.7.4 Boot ROM BIOS 38
2.8 Video Graphics Adapter. 39
2.9 Digital Visual Interface (DVI-D). 39
2.10 Universal Serial Bus. 40
3 • Embedded PC/RTOS Features 41
3.1 VME Bridge. 41
3.1.1 PCI-X To VME Bridge (Tsi148) Software Guidelines 42
3.1.2 I2C/SMBus Temperature Sensor 43
3.2 Embedded PCI Functions. 44

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.3 Timers. 45
3.3.1 General 45
3.3.2 Timer Control Status Register 1 (TCSR1) 45
3.3.3 Timer Control Status Register 2 (TCSR2) 46
3.3.4 Timer 1 & 2 Load Count Register (TMRLCR12) 47
3.3.5 Timer 3 Load Count Register (TMRLCR3) 47
3.3.6 Timer 4 Load Count Register (TMRLCR4) 47
3.3.7 Timer 1 & 2 Current Count Register (TMRCCR12) 48
3.3.8 Timer 3 Current Count Register (TMRCCR3) 48
3.3.9 Timer 4 Current Count Register (TMRCCR4) 48
3.3.10 Timer 1 IRQ Clear (T1IC) 48
3.3.11 Timer 2 IRQ Clear (T2IC) 49
3.3.12 Timer 3 IRQ Clear (T3IC) 49
3.3.13 Timer 4 IRQ Clear (T4IC) 49
3.4 Watchdog Timer. 50
3.4.1 General 50
3.4.2 WDT Control Status Register (WCSR) 50
3.4.3 WDT Keepalive Register (WKPA) 51
3.5 CompactFlash. 51
3.6 Remote Ethernet Booting. 51
Maintenance. 52
A • Appendix A: Connectors and Pinouts 55
A.1 Connector Locations 56
A.2 VME Connector Pinout (P1 and P2) 57
A.3 Optional Vita 41.3 Connector (P0) 59
A.4 Serial Connector Pinout (J35) 60
A.5 USB Connectors (J29/J30) 60
A.6 Video Graphics Adapter (J28) 61
A.7 Ethernet Connector Pinout (J32/J33) 61
A.8 Keyboard and Mouse Connector and Pinout (J36) 62
A.9 PMC Connectors and Pinouts (J11 through J14) 64
A.9.1 J11 Connector and Pinout 64
A.9.2 J12 Connector and Pinout 65
A.9.3 J13 Connector and Pinout 66
A.9.4 J14 Connector and Pinout 67
B • Appendix B: AMI BIOS Setup Utility 68
B.1 Popup Boot Menu 68
B.2 Main Menu 69
B.3 Advanced BIOS Setup 70
B.4 PCI/PnP Setup 71
B.5 Boot Setup 72
B.6 Security Setup 73
B.7 Chipset Setup 74
B.8 Exit Menu 75
C • Appendix C: Remote Booting. 76
C.1 Boot-from-LAN BIOS Option 76
C.1.1 First Boot Menu 76
C.1.2 Boot Menu 77
C.1.3 BIOS Features Setup 77

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

C.2 Managed PC Boot Agent Option 78
C.2.1 First Boot Menu 78
C.2.2 Boot Menu 79
C.2.3 BIOS Features Setup 79

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

List of Figures

Figure 1 V7865 Block Diagram 10
Figure 1-1 V7865 Board Layout 18
Figure 1-2 COM1 Configuration for RS232/RS422 Select 20
Figure 1-3 Installing a PMC Card on the V7865 24
Figure 1-4 Backside Mounting for the V7865 PMC Site 24
Figure 1-5 Front Panel LED Positions 26
Figure 1-6 Standard Front Panel Option 27
Figure 1-7 Battery Removal/Installation 28
Figure 2-1 Connections for the PCI Interrupt Logic Controller 37
Figure A-1 Connector Locations 56
Figure A-2 VME Connector Diagram (P1/P2) 57
Figure A-3 Optional Vita 41.3 Connector (P0) 59
Figure A-4 Serial Connector Pinout (J35) 60
Figure A-5 USB Connector Pinout (J29/J30) 60
Figure A-6 SVGA Connector (J28) 61
Figure A-7 GbE Connector and Pinout (J32/J33) 61
Figure A-8 Keyboard/Mouse Connector and Pinout (J36) 62
Figure A-9 Mouse/Keyboard Y Splitter Cable 63

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

List of Tables

Table 1-1 V7865 Connectors, Headers and Switches. 19
Table 1-2 CMOS Clear - Header E11 20
Table 1-3 Boot Continuation - Header E12 20
Table 1-4 COM Port (RS232/422 Select) - Header E13, E14, E15, E17 20
Table 1-5 Battery Enable (User Configurable) - Header E27 20
Table 1-6 VME System Controller Configuration (User Configurable) - Switch (S3) 21
Table 1-7 Tsi148 Mapping/SYSFAIL Generation (User Configurable) - Switches (S6 & S7) 21
Table 1-8 VME Reset Control - Switch (S8) 22
Table 1-9 Status Indications 26
Table 2-1 V7865, Tsi148 Memory Address Map 30
Table 2-2 V7865 I/O Address Map 31
Table 2-3 Interrupt Line Assignments 32
Table 2-4 Interrupt Vector Table 33
Table 2-5 PCI Device Interrupt Mapping by the BIOS 36
Table 2-6 Partial List of Display Modes Supported 39
Table 3-1 PCI Configuration Space Registers 44
Table 3-2 Timer Control Register 1 (TCSR 1) 45
Table 3-3 Timer x Clock Select Field 45
Table 3-4 Timer Control Status Register 2 (TCSR2) 46
Table 3-5 Timer 1 & 2 Load Count Register (TMRLCR12) 47
Table 3-6 Timer 3 Load Count Register (TMRLCR3) 47
Table 3-7 Timer 4 Load Count Register (TMRLCR4) 47
Table 3-8 Timer 1 & 2 Current Count Register (TMRCCR12) 48
Table 3-9 Timer 3 Current Count Register (TMRCCR3) 48
Table 3-10 Timer 4 Current Count Register (TMRCCR4) 48
Table 3-11 WDT Control Status Register (WCSR) 50
Table 3-12 WDT Timeout Select Field 50
Table A-1 VME Connector Pinout (P1/P2) 58
Table A-2 Optional Vita 1.3 Connector (P0) 59
Table A-3 Keyboard/Mouse Y Splitter Cable 63
Table A-4 PMC Connector Pinout (J11) 64
Table A-5 PMC Connector Pinout (J12) 65
Table A-6 PMC Connector Pinout (J13) 66
Table A-7 PMC Connector Pinout (J14) 67
Table C-1 First Boot Menu 76
Table C-2 Boot-from-LAN BIOS Boot Menu 77
Table C-1 Intel Boot Agent First Boot Menu 78
Table C-2 Managed PC Boot Agent Boot Menu 79
Table C-3 RPL Default Settings 79
Table C-4 TCP/IP Default Settings 80
Table C-5 Netware Default Settings 80
Table C-6 PXE Default Settings 81

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Overview

The V7865* is a full-featured Intel® Core™ Duo Processor compatible single board computer (SBC) in a single-slot, passively cooled, Eurocard form factor. This product utilizes the advanced technology of Intel's 945GM/945GME chipset running a front-side bus rate of 667 MHz. The V7865 is compliant with the VMEbus Specification Rev. C.1 and features a transparent PCI-to-VME bridge, allowing the board to function as a system controller or peripheral CPU in multi-CPU systems.

Desktop Features:

- Up to 3 GByte DDR2 SDRAM
- Two front panel Gigabit Ethernet (GbE) ports
- Front panel SVGA connection
- Rear DVI-D support
- Supports two SATA ports out rear I/O
- Two high-performance 16550-compatible serial ports (RS232/RS422) (COM1 out front panel/COM2 out rear I/O)
- Two front panel USB ports Rev. 2.0
- Two rear USB ports Rev. 2.0
- Real-Time clock/calendar
- Front panel reset switch
- Miniature speaker
- Keyboard/Mouse port

The V7865 is capable of executing many of today's desktop operating systems such as Microsoft®'s Windows® XP and a wide variety of Linux®-based operating systems. The standard desktop features of the V7865 are described in ***Chapter 2: Standard Features***.

Embedded Features:

- Remote Ethernet booting out front panel only
- Up to 4 GByte of bootable CompactFlash (optional)
- Optional support for two rear Vita 41.3 I/O ports
- Four general-purpose programmable timers (two 16-bit and two 32-bit)
- Software-selectable Watchdog Timer with reset
- 32 KByte Non-volatile SRAM
- PMC expansion site with front panel access
- Rear I/O support for PMC site, 46-pin P2 user I/O per Vita 35, P4V2-46dz

The embedded features of the V7865 are described in ***Chapter 3: Embedded PC/ RTOS Features*** of this manual.

The V7865 is suitable for use in a variety of applications, such as: telecommunications, simulation, instrumentation, industrial control, process control and monitoring, factory automation, automated test systems, data acquisition systems and anywhere that the highest performance processing power in a single VME slot is desired.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Intel 945GM/945GME Chipset


The V7865 incorporates the latest Intel chipset technology, the 945GM/945GME. The Intel 945GM/945GME chipset is an optimized integrated graphics solution with a 667 MHz system bus and integrated 32-bit 3D core at 133 MHz with dynamic video memory technology (DVMT). The chipset has a low power design, advanced power management, supporting up to 3 GByte of DDR2 system memory. The 945GM/945GME is a Graphics Memory Controller Hub component (GMCH), providing the processor interface, system memory interface (DDR2 SDRAM), DMI interface, CRT and Digital Visual Interface-Digital (DVI-D) port.

Key features for the 945GM/945GME:

- 667 MHz Processor system bus controller
- Up to 2 GByte DDR2 Memory via SODIMM
- Up to 1 GByte onboard DDR2 memory
- One DVI-D port
- High-speed DMI architecture interface for communication with the ICH7-M (I/O controller)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 1 V7865 Block Diagram

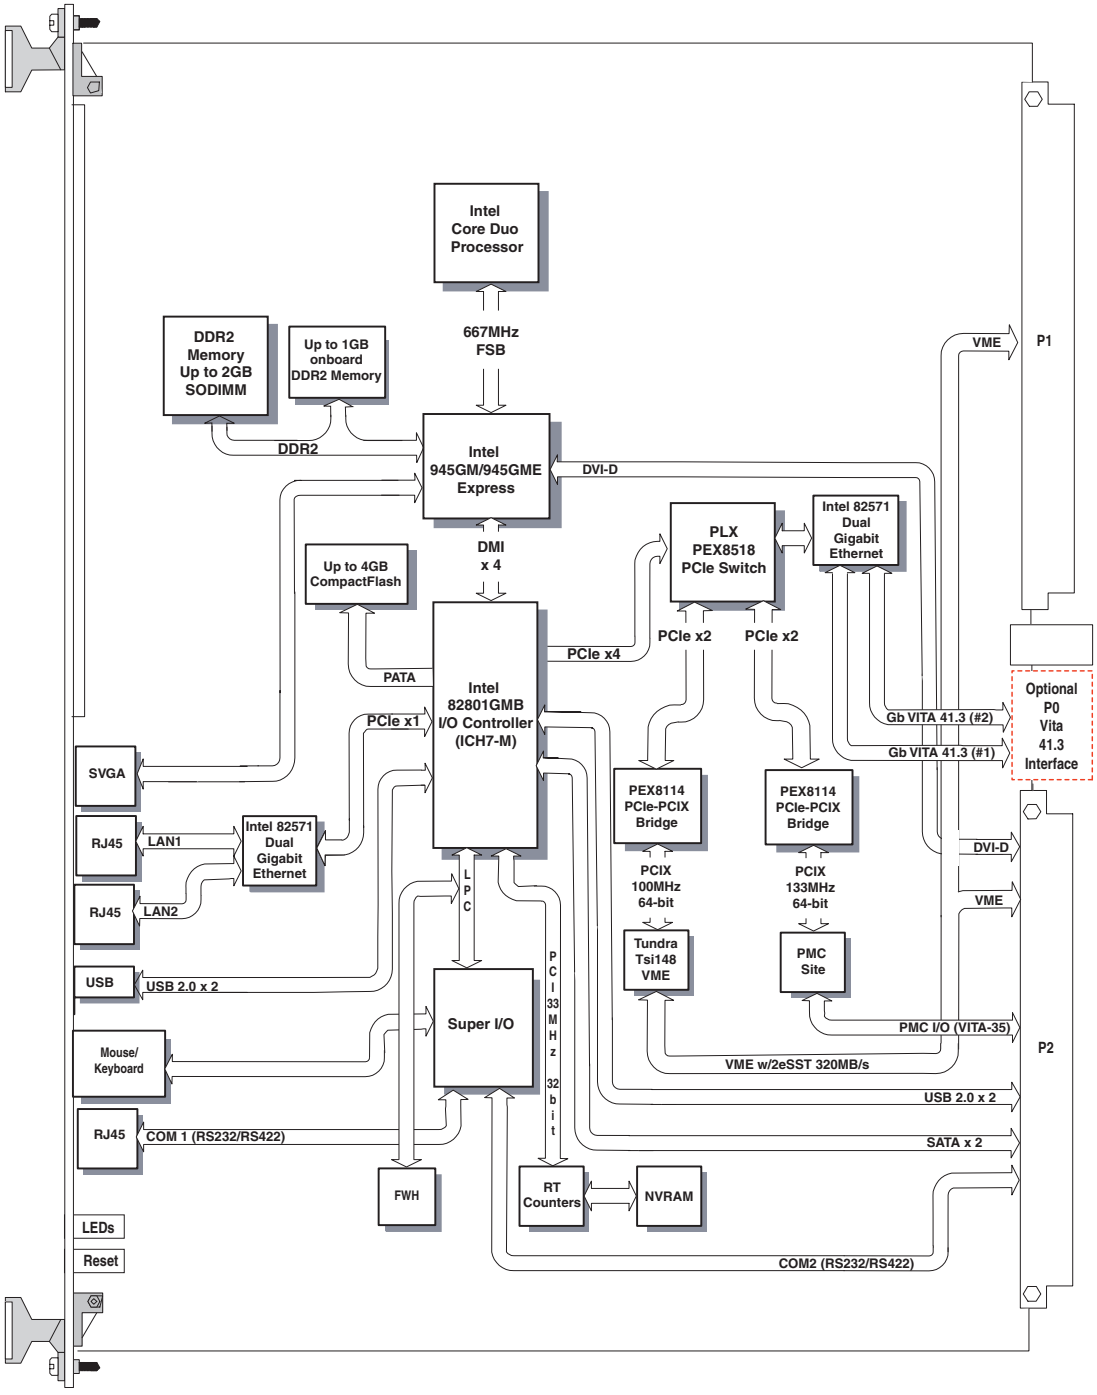

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

References

Intel Core Duo Processor and Intel Core Solo Processor on 65nm Process Datasheet
January 2007, Order Number 309221-006

Mobile Intel 945 Express Chipset Family
November 2006, Order Number 309219-003

Intel I/O Controller Hub 7 (ICH 7) Family Datasheet
January 2006, Order Number 307013-002

Intel 82571EB/82572EI Gigabit Ethernet Controller Product Datasheet
December 2006, Revision 2.0

PCI Local Bus Specification, Rev. 2.1
PCI Special Interest Group
P.O. Box 14070
Portland, OR 97214
(800) 433-5177 (U.S.)
(503) 797-4207 (International)
(503) 234-6762 (FAX)

CMC Specification, P1386/Draft 2.4a from:
IEEE Standards Department
Copyrights and Permissions
445 Hoes Lanes, P.O. Box 1331
Piscataway, NJ 08855-1331, USA

PMC Specification, P1386.1/Draft 2.4 from:
IEEE Standards Department
Copyrights and Permissions
445 Hoes Lanes, P.O. Box 1331
Piscataway, NJ 08855-1331, USA

V7865-SDK-XP User's Guide
Doc. No. 520-007865-001
GE Intelligent Platforms
12090 South Memorial Pkwy.
Huntsville, AL 35803-3308
(800) 322-3616
www.ge-ip.com

V7865-SDK-Linux User's Guide
Doc. No. 520-007865-002
GE Intelligent Platforms
12090 South Memorial Pkwy.
Huntsville, AL 35803-3308
(800) 322-3616
www.ge-ip.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

For a detailed description and specification of the VME, please refer to:

VMEbus Specification Rev. C. and the VMEbus Handbook
VME International Trade Assoc. (VITA)
7825 East Gelding Dr.
Suite 104
Scottsdale, AZ 85260
(602) 951-8866
(602) 951-0720 (FAX)
www.vita.com

VME64
ANSI/VITA 1.0 - 1994 (R2002)

VME64 Extensions
ANSI/VITA 1.1 - 1997

VME 2eSST
ANSI/VITA 1.5 - 2003

PLX Technology PCI Express to PCI-X Bridge (PEX8114BA) Data Boot
V1.2 March 2007
www.plxtech.com

PLX Technology PCI Express Switch (PEX8518AA_AB) Data Boot
V1.1 Jan. 2007
www.plxtech.com

Tsi148 PCI/X-to-VME Bus Bridge User Manual
Doc. No. 80A3020-MA001-08

Tsi148 PCI/X-to-VME Bus Bridge Product Brief
Doc. No. 80A3020_FB001_06

ACC-0602RC Product Specification
Doc. No. 800-9300800602-000
GE Intelligent Platforms
12090 South Memorial Pkwy.
Huntsville, AL 35803-3308
(800) 322-3616
www.ge-ip.com

ACC-0602RC VME Rear Transition Module Installation Guide
Doc. No. 522-9300800602-000
GE Intelligent Platforms
12090 South Memorial Pkwy.
Huntsville, AL 35803-3308
(800) 322-3616
www.ge-ip.com

ACC-0603RC Product Specification
Doc. No. 800-9300800603-000
GE Intelligent Platforms
12090 South Memorial Pkwy.
Huntsville, AL 35803-3308
(800) 322-3616
www.ge-ip.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ACC-0603RC VME Rear Transition Module Installation Guide

Doc. No. 522-9300800603-000
GE Intelligent Platforms
12090 South Memorial Pkwy.
Huntsville, AL 35803-3308
(800) 322-3616
www.ge-ip.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Organization

This manual is composed of the following chapters and appendices:

Overview provides a general description of the V7865 and General Safety terms and symbols.

Chapter 1 Handling and Installation describes unpacking, inspection, hardware jumper settings, connector definitions, installation, system setup and operation of the V7865.

Chapter 2 Standard Features describes the unit design in terms of the standard PC memory and I/O maps, along with the standard interrupt architecture.

Chapter 3 Embedded PC/RTOS Features describes the unit features that are beyond standard functions.

Maintenance provides GE Intelligent Platforms' contact information relative to the care and maintenance of the unit.

Compliance provides the applicable information regarding regulatory compliance.

Appendix A Connector Pinouts illustrates and defines the connectors included in the unit's I/O ports.

Appendix B AMI BIOS describes the menus and options associated with the American Megatrends, Inc. (system) BIOS.

Appendix C Remote Booting describes the menus and options associated with the Intel Boot Agent.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Safety Summary

The following general safety precautions must be observed during all phases of the operation, service and repair of this product. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture and intended use of this product.

GE Intelligent Platforms assumes no liability for the customer's failure to comply with these requirements.

Ground the System

To minimize shock hazard, the chassis and system cabinet must be connected to an electrical ground. A three-conductor AC power cable should be used. The power cable must either be plugged into an approved three-contact electrical outlet or used with a three-contact to two-contact adapter with the grounding wire (green) firmly connected to an electrical ground (safety ground) at the power outlet.

Do Not Operate in an Explosive Atmosphere

Do not operate the system in the presence of flammable gases or fumes. Operation of any electrical system in such an environment constitutes a definite safety hazard.

Keep Away from Live Circuits

Operating personnel must not remove product covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power and discharge circuits before touching them.

Do Not Service or Adjust Alone

Do not attempt internal service or adjustment unless another person capable of rendering first aid and resuscitation is present.

Do Not Substitute Parts or Modify System

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the product. Return the product to GE Intelligent Platforms for service and repair to ensure that safety features are maintained.

Dangerous Procedure Warnings

Warnings, such as the example below, precede only potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.



WARNING

Dangerous voltages, capable of causing death, are present in this system.
Use extreme caution when handling, testing and adjusting.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Warnings, Cautions and Notes



WARNING

WARNING denotes a hazard. It calls attention to a procedure, practice, or condition, which, if not correctly performed or adhered to, could result in injury or death to personnel.



CAUTION

CAUTION denotes a hazard. It calls attention to an operating procedure, practice, or condition, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the system.



NOTE

NOTE denotes important information. It calls attention to a procedure, practice, or condition which is essential to highlight.



TIP

Tip denotes a bit of expert information.



LINK

This is link text.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1 • Handling and Installation

This chapter describes the unpacking procedure; hardware setup; connectors, headers and switches; installation; system setup and operation of the V7865.

1.1 Unpacking Procedures

Any precautions found in the shipping container should be observed. All items should be carefully unpacked and thoroughly inspected for damage that might have occurred during shipment. The board(s) should be checked for broken components, damaged printed circuit board(s), heat damage and other visible contamination. All claims arising from shipping damage should be filed with the carrier and a complete report sent to GE Intelligent Platforms Customer Care.

1.2 Handling Precaution

Electronic assemblies use devices that are sensitive to static discharge. Observe anti-static procedures when handling these boards. All products should be in an anti-static plastic bag or conductive foam for storage or shipment. Work at an approved anti-static workstation when unpacking boards.

1.3 Hardware Setup

The V7865 is factory populated with user-specified options as part of the V7865 ordering information. For option upgrades or for any type of repairs, contact customer care to receive a Return Material Authorization (RMA).

GE Intelligent Platforms Customer Care is available at: (1-800-433-2682), or +1-780-401-7700 for international calls.

Or, visit our website at: www.ge-ip.com

The V7865 is tested for system operation and shipped with factory-installed header jumpers. The physical locations of the jumpers and connectors for the SBC with the PMC option are illustrated in Figure 1-1 on page 18. The definitions of the connectors, headers and switches are included in Table 1-1 on page 19.

CAUTION

All jumpers marked *User Configured* in the following tables may be changed or modified by the user. All jumpers marked *Factory Configured* should not be modified by the user.


Care must be taken when making jumper modifications to ensure against improper settings or connections. Improper settings may result in damage to the unit.

Modifying any jumper not marked *User Configured* will void the Warranty and may damage the unit.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.4 Connectors, Headers and Switches

Figure 1-1 V7865 Board Layout

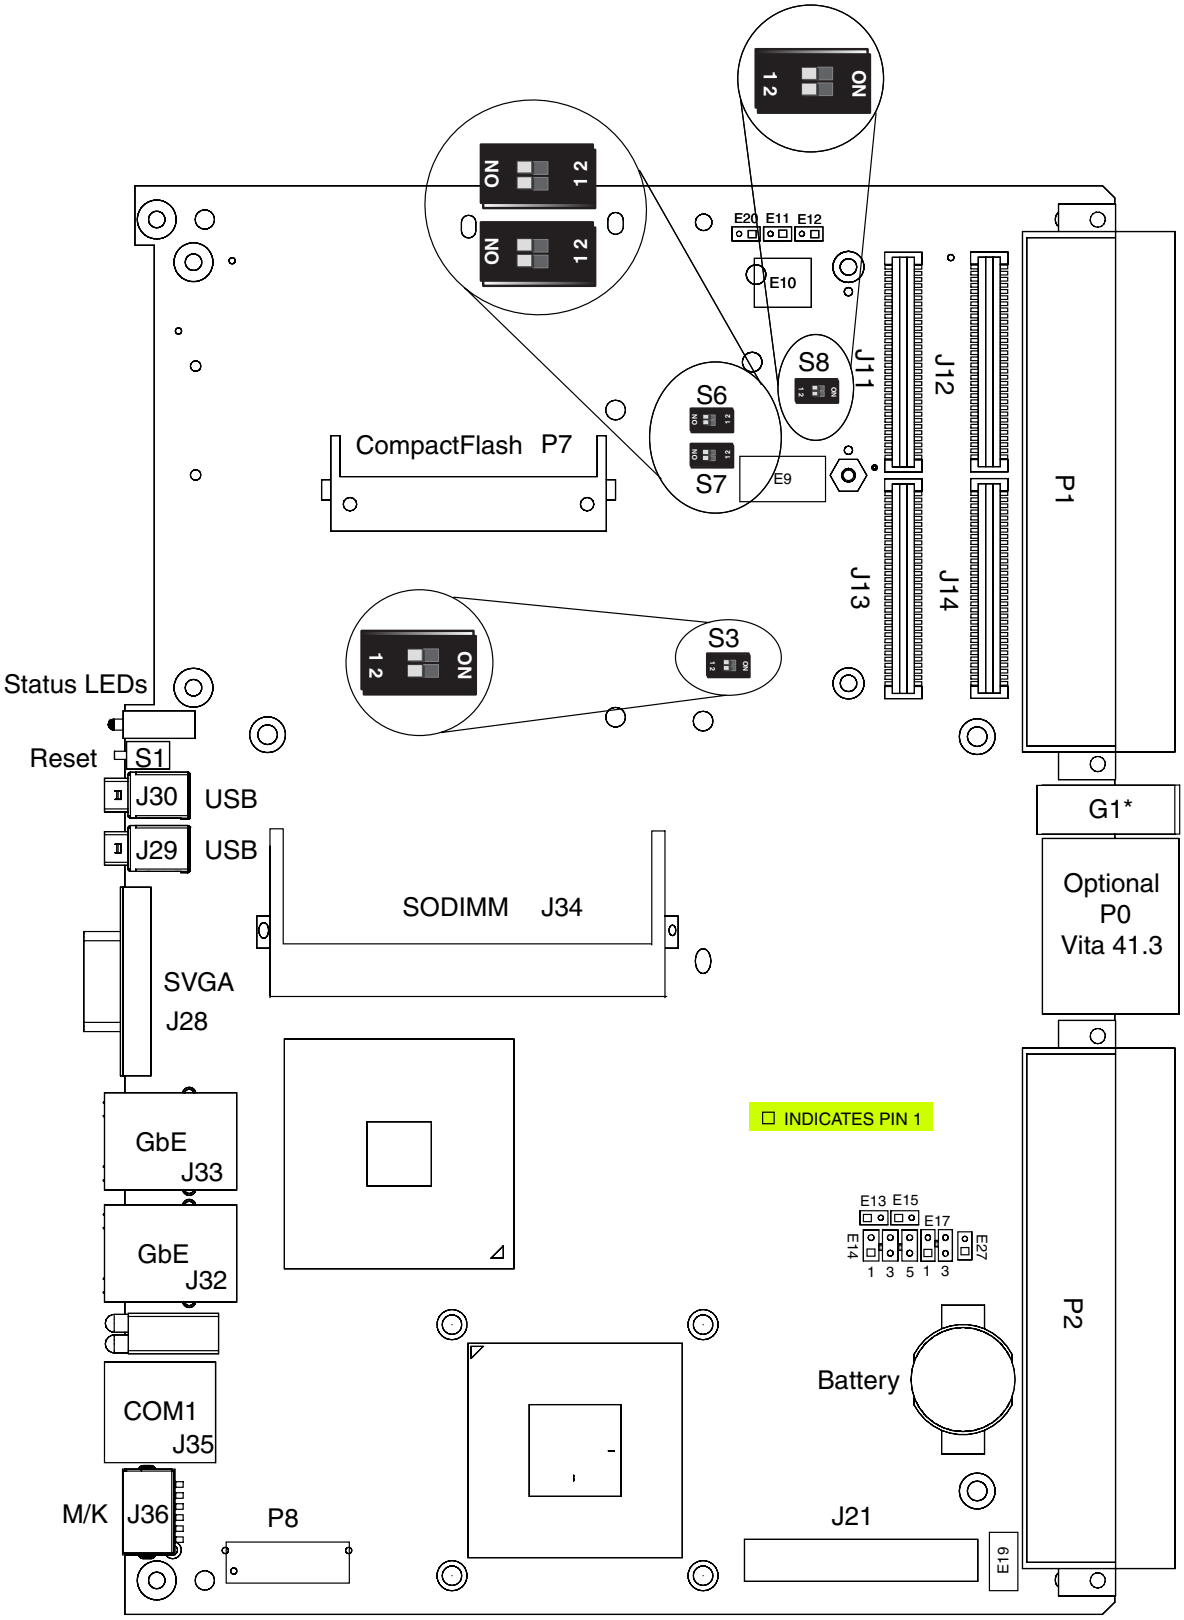

* The G1 keying pin is provided with the Vita 41.3 P0 option.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 1-1 V7865 Connectors, Headers and Switches

Connector	Function
P1, P2	VME Backplane Connectors
P7	CompactFlash Socket
P8	Factory Reserved. Do Not Use
J11 - J14	PMC Expansion Site
J21	GE Intelligent Platforms' PCI expansion connector (PMC237CM1/V)
J28	SVGA Video
J29, J30	USB Ports
J32, J33	GbE, LAN1 & LAN2
J34	SODIMM Socket
J35	COM1
J36	Mouse/Keyboard
E9, E10, E19, E20	Factory Reserved. Do Not Use
E11	CMOS Clear
E12	Boot Continuation
E13	COM1 Configuration
E14	COM1 Configuration
E15	COM 1 Configuration
E17	COM1 (RS422 Termination)
E27	Battery Jumper
Switch	**Function**
S3	VME System Controller Configuration
S6	VME Tsi148 Mapping/Sysfail Configuration
S7	VME Tsi148 Mapping/Sysfail Configuration
S8	VME Reset Control



NOTE

The BIOS has the capability of password protecting casual access to the unit's CMOS set-up screens. The CMOS Clear jumper allows the user to clear the password in the case of a forgotten password.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.5 Jumper Settings

Table 1-2 CMOS Clear - Header E11

Select	Jumper Position
Clear CMOS	In
Normal Operation	**Out**

CMOS Password

To clear the CMOS password:

1. Turn off power to the unit.
2. Momentarily short the pins of E11 for approximately five seconds.
3. Power up the unit.

When power is reapplied to the unit, the CMOS password will be cleared.

Table 1-3 Boot Continuation - Header E12

Select	Jumper Position
Load Default settings and continue booting on CMOS error	In
Stop booting on CMOS error	**Out**

Table 1-4 COM Port (RS232/422 Select) - Header E13, E14, E15, E17

Select	E13 Position	E14 Position	E15 Position	E17 Position
RS232	**In**	**3-5, 4-6**	**In**	**Both Out**
RS422 w/Termination	Out	1-3, 2-4	In	1-3, 2-4
RS422 w/o Termination	Out	1-3, 2-4	In	Both Out

Figure 1-2 COM1 Configuration for RS232/RS422 Select

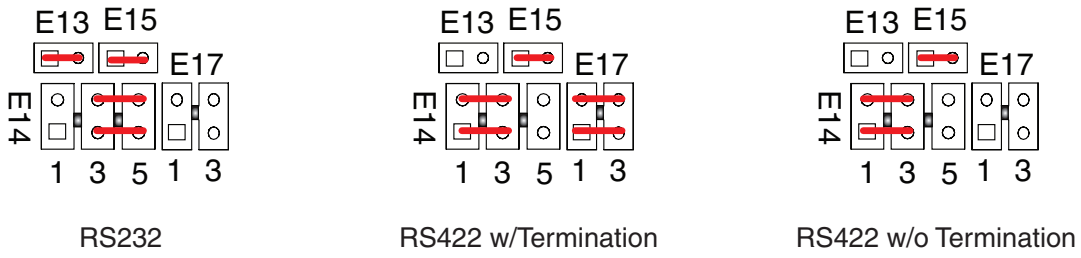


Table 1-5 Battery Enable (**User Configurable**) - Header E27

Select	Jumper Position
Normal Use	**In**
Disable Battery	Out

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 1-6 VME System Controller Configuration (**User Configurable**) - Switch (S3)

Select	Switch S3	
	1	2
System Controller Functions Forced Enabled	ON	OFF
System Controller Functions Forced Disabled	OFF	ON
Auto System Controller Function Enabled	**OFF**	**OFF**



NOTE

When 1 and 2 are both OFF on S3, VBG3IN_ determines the configuration of the System Controller.

Table 1-7 Tsi148 Mapping/SYSFAIL Generation (**User Configurable**) - Switches (S6 & S7)

Select	Switch S6		Switch S7	
	1	**2**	**1**	**2**
CR/CSR disabled CRAT register, EN cleared by sysreset VCTRL register, SFAILAI cleared by sysreset GCTRL register, SFAILEN set by sysreset	**ON**	**X***	**ON**	**ON**
CR/CSR disabled CRAT.EN cleared by sysreset VCTRL.SFAILAI cleared by sysreset GCTRL register, SFAILEN set by sysreset	OFF	X	ON	ON
Auto Slot ID CRAT register, EN cleared by sysreset VCTRL register, SFAILAI set by sysreset GCTRL register, SFAILEN cleared by sysreset	ON	ON	OFF	ON
Illegal Configuration	OFF	X	OFF	ON
Auto Slot ID CRAT register, EN cleared by sysreset VCTRL register, SFAILAI set by sysreset, cleared 1ms after sysreset GCTRL register, SFAILEN cleared by sysreset	ON	OFF	OFF	ON
Geographical Addressing CRAT register, EN set by sysreset VCTRL register, SFAILAI cleared by sysreset GCTRL register, SFAILEN cleared by sysreset	ON	X	ON	OFF
Geographical Addressing CRAT register, EN set by sysreset VCTRL register, SFAILAI cleared by sysreset GCTRL register, SFAILEN set by sysreset	OFF	X	ON	OFF
Geographical Addressing CRAT register, EN set by sysreset VCTRL register, SFAILAI cleared by sysreset GCTRL register, SFAILEN cleared by sysreset	ON	X	OFF	OFF
Illegal Configuration	OFF	X	OFF	OFF
Default to Auto Slot ID CRAT register, EN cleared by sysreset VCTRL register, SFAILAI set by sysreset GCTRL register, SFAILEN cleared by sysreset	ON	ON	OFF	OFF
Default to Auto Slot ID CRAT register, EN cleared by sysreset VCTRL register, SFAILAI set by sysreset GCTRL register, SFAILEN cleared by sysreset	ON	OFF	OFF	OFF

* 'X' indicates a 'Don't Care' position. The switch can be in either position.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 1-8 VME Reset Control - Switch (S8)

Select	Switch 8	
	1	2
SBC will not send or receive reset	OFF	OFF
SBC will send and receive reset	ON	ON
SBC will receive reset, but will not send reset	OFF	ON
SBC will send reset, but will not receive reset	ON	OFF

1.6 Installation

The V7865 conforms to the VME physical specification for a single slot 6U Eurocard (dual height). It can be plugged directly into any standard chassis accepting this type of board.



CAUTION

Do not install or remove the board while power is applied.

The following steps describe the GE Intelligent Platforms recommended method for V7865 installation and power-up:

1. Make sure power to the equipment is off.
2. Choose chassis slot. The V7865 ***must*** be attached to a P1/P2 VME backplane. If the V7865 is to be the VME system controller, choose the first VME slot. If a different board is the VME system controller, choose any slot ***except*** slot one. The V7865 does not require jumpers for enabling/disabling the system controller function.
3. For the Vita 41.3 option, the board ***must*** be installed into a Vita 41.3 compatible backplane.



NOTE

The V7865 should never be used with any of the 74xx boards/cabling from GE Intelligent Platforms, except for the VME-7469, which can support SATA.

Air flow requirements as measured at output side of heatsink is to be greater than 400LFM.

4. Connect all needed peripherals to the front panel. Each connector is clearly labeled on the front panel, and detailed pinouts are in ***Appendix A: Connectors and Pinouts***. Minimally, a keyboard and a monitor are required if the user has not previously configured the system.
5. Apply power to the system. Several messages are displayed on the screen, including names, versions and copyright dates for the various BIOS modules on the V7865.
6. The V7865 features an optional CompactFlash resident on the board. Refer to ***Chapter 3 Embedded PC/RTOS Features*** for set up details.
7. If an external drive module is installed, the BIOS Setup program must be run to configure the drive types. See ***Appendix B: AMI BIOS Setup Utility*** to properly configure the system.
8. If a drive module is present, install the operating system according to the manufacturer's instructions.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.6.1 Power Requirements

The V7865 requires +5 V from the VME backplane. Below are the voltage and current requirements.

Supply	Current (Maximum)
+5 V	9.6 A

The V7865 provides power to the PMC site in accordance with the PMC specification. The maximum current provided on the +5 V supply is 1.5 A per PMC site. The maximum current provided on the +3.3 V supply is 1.5 A per PMC site.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 1-3 Installing a PMC Card on the V7865


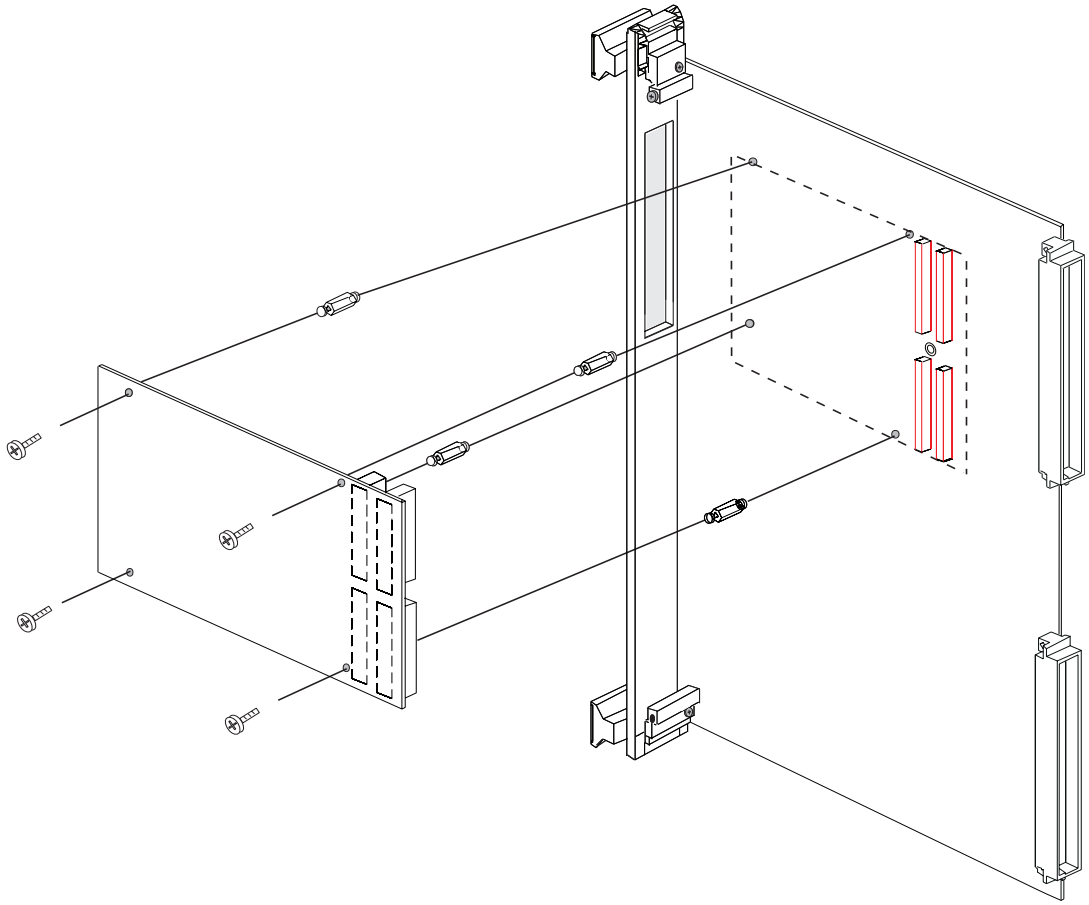


Figure 1-4 Backside Mounting for the V7865 PMC Site

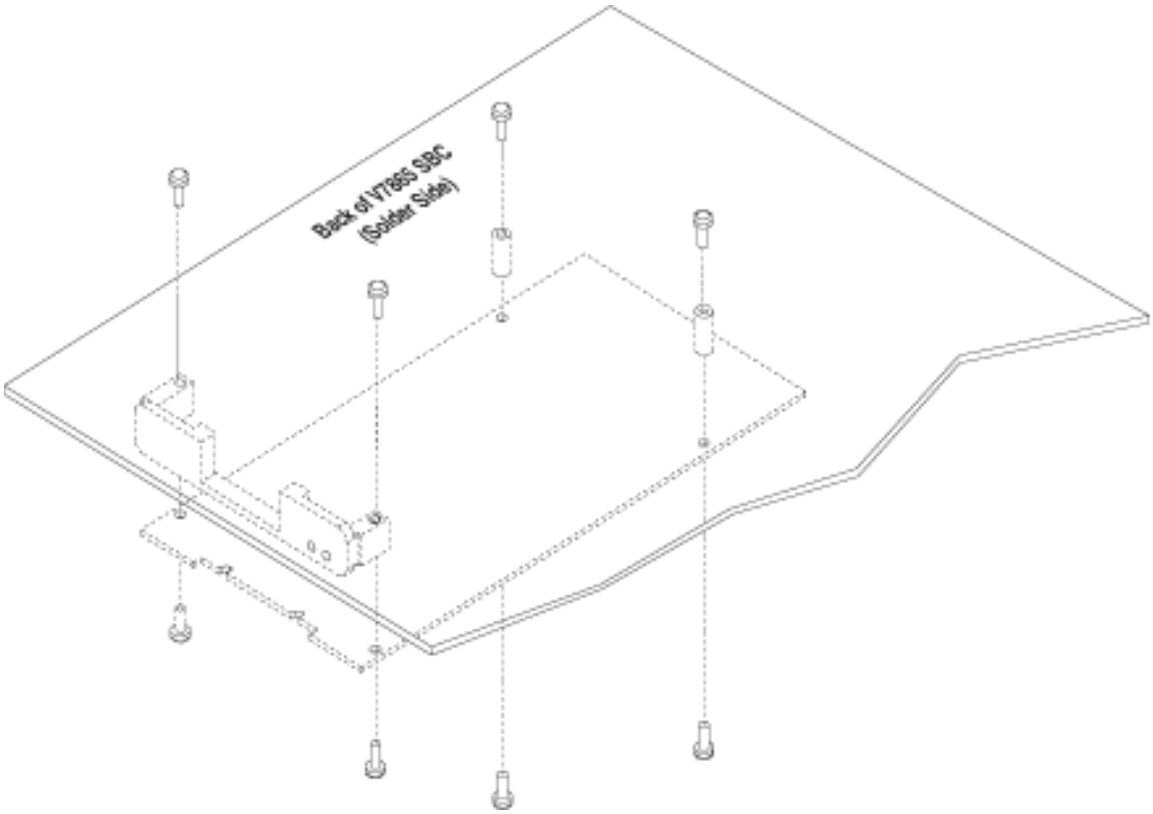

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.7 Front Panel

1.7.1 Connectors

The V7865 provides front-panel access to the PMC expansion site, the VGA connector, the two GbE connectors, the manual reset switch, COM1 port, two USB ports, the Mouse/Keyboard, and the status LEDs. A drawing of the V7865 front panel is shown in Figure 1-5 on page 26. The front panel connectors and indicators are labeled as follows:

- LAN1 GbE connector
- LAN2 GbE connector
- VGA VGA video connector
- RST Manual reset switch
- COM1 COM port
- M/K Combination mouse/keyboard connector
- USB USB connectors
- BPHT Status LEDs

The V7865 provides rear I/O support for VME with 2eSST 320 MByte/s, the optional PMC I/O (Vita 35), DVI-D, two USB 2.0 ports, COM2 (RS232/RS422), and two SATA drives. These signals are accessed by the use of a rear transition module (RTM) such as the ACC-0602RC* or the ACC-0603RC*, which terminate the signals into industry standard connectors. The front panel connectors, including connector pinouts and orientation, for the V7865 are defined in ***Appendix A: Connectors and Pinouts.***



NOTE

RTMs may not support all available V7865 rear I/O mentioned above. RTM connections are defined in the appropriate RTM Installation Guide. Contact Sales for compatible RTMs offered by GE Intelligent Platforms.


1.7.2 LEDs

See Figure 1-5 on page 26 for a diagram of the Rugged Front Panel option. Adjacent to the diagram are the definitions of the various LEDs on the front panel. The connections and the LEDs are the same for the Standard Front Panel option, which is shown in Figure 1-6 on page 27.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.7.3 LED Definitions

Figure 1-5 Front Panel LED Positions

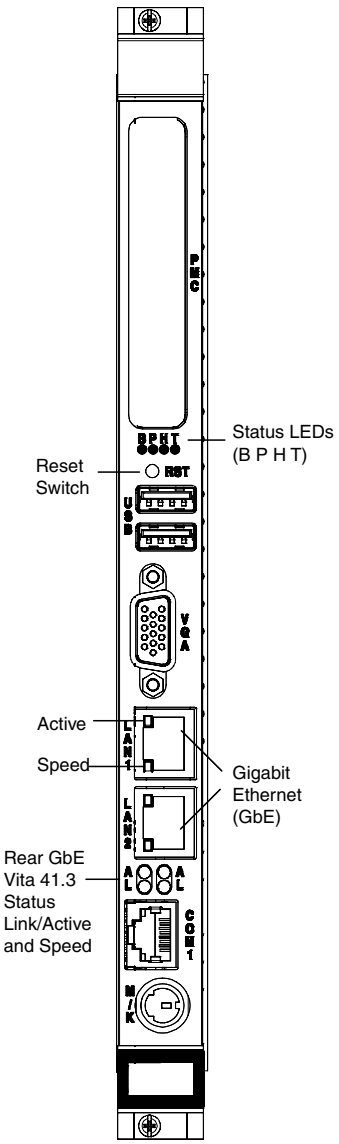

LED B *Boot Done,* - BIOS powerup self test (POST) is in progress, LED is lit (Red LED). Once POST has completed, LED turns off. Once booting has completed, any VME 'SYSFAIL' will cause the LED to turn on.

LED P *Power Good,* - Indicates when all onboard power is within tolerance (Green LED).

LED H *Drive Activity,* - Indicates hard drive activity on either one of the SATA or CompactFlash drives (Yellow LED).

LED T *Thermal Alert*, - When the temperature of the CPU has exceeded the operating temperature, this LED will be lit (Red LED).

Reset Switch *Reset,* - Allows the system to be reset from the front panel.

GbE Active E*thernet Activity,* - This LED will blink when the Ethernet is linked and active. It will be steady if the Ethernet is linked with no activity.

GbE Speed E*thernet Speed,* - This LED will indicate at which speed the Ethernet is running:

- 10Base-T - LED Off
- 100Base-TX - Yellow LED
- 1000Base-T - Green LED

Vita 41.3 GbE A *Rear* E*thernet Activity,* - Same as GbE Active.

Vita 41.3 GbE L *Rear* E*thernet Activity,* - Same as GbE Speed.

(Rugged Front Panel Option shown here)


In addition, the front panel LEDs are used to indicate various modes of operational status that can occur with the V7865. The table below is a summary of these indications.

Table 1-9 Status Indications

State	Indication
VME SYSFAIL	Red "B" LED illuminates with each VME SYSFAIL 'seen' on the bus. The LED will remain on as long as the failure lasts.
Normal Operation	LED B = Off (out of Power On Self Test - POST) LED P = On (power is good) LED H = Off, or Flashing (hard drive activity) LED T = Off (temperature of CPU is within operating limits)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 1-6 Standard Front Panel Option

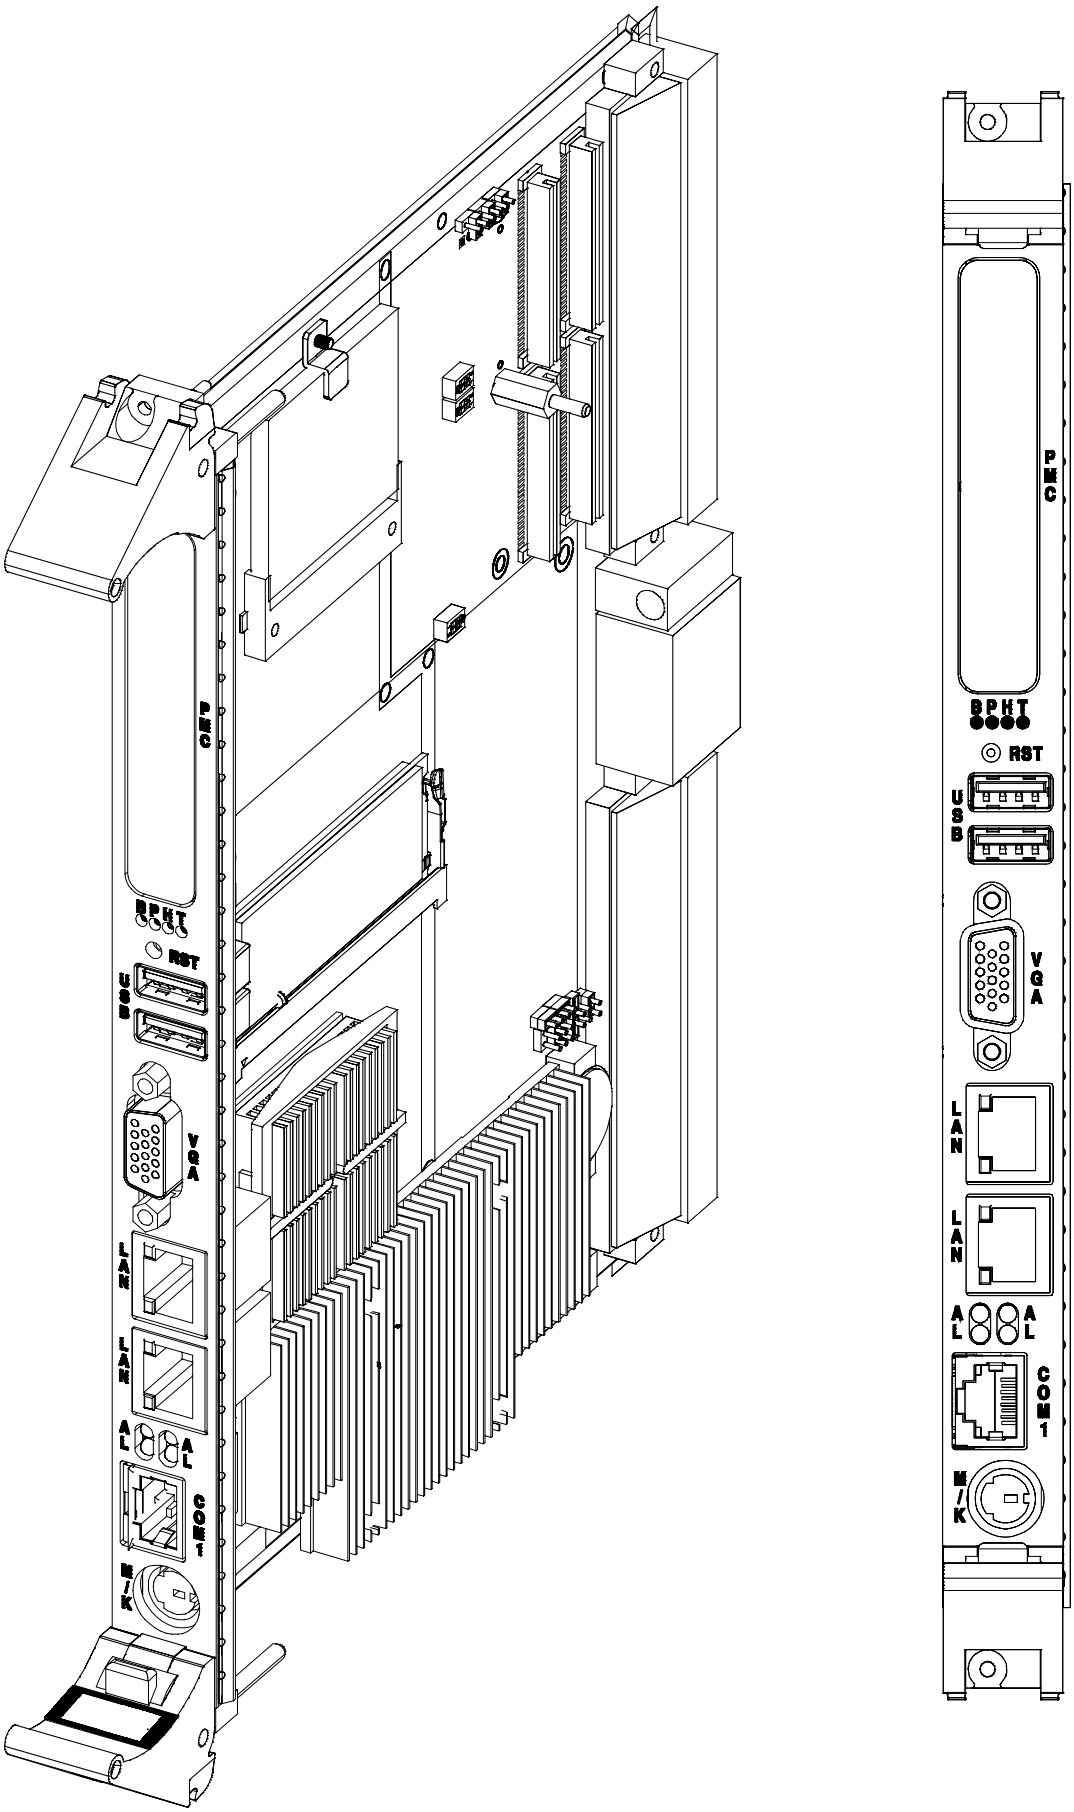

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.8 BIOS Setup

The V7865 has an onboard BIOS Setup program (AMI BIOS) that controls many configuration options. These options are saved in non-volatile, battery-backed memory and are collectively referred to as the board's "CMOS Configuration."

The CMOS configuration controls many details concerning the behavior of the hardware from the moment power is applied. See ***Appendix B: AMI BIOS Setup Utility***.

1.9 Battery Mounted in Horizontal Holder on the Board


For Battery Removal:

1. Locate the battery on the computer. You may need to reference the product manual if it is not easily located. See **Figure 1-1**.
2. Once the battery is located, take a non-conductive tool and gently pry on the edges of the battery to lift it from the socket.

For Battery Installation:

1. Observe correct polarity.
2. Press the new battery into the socket until the battery snaps into place.

Figure 1-7 Battery Removal/Installation

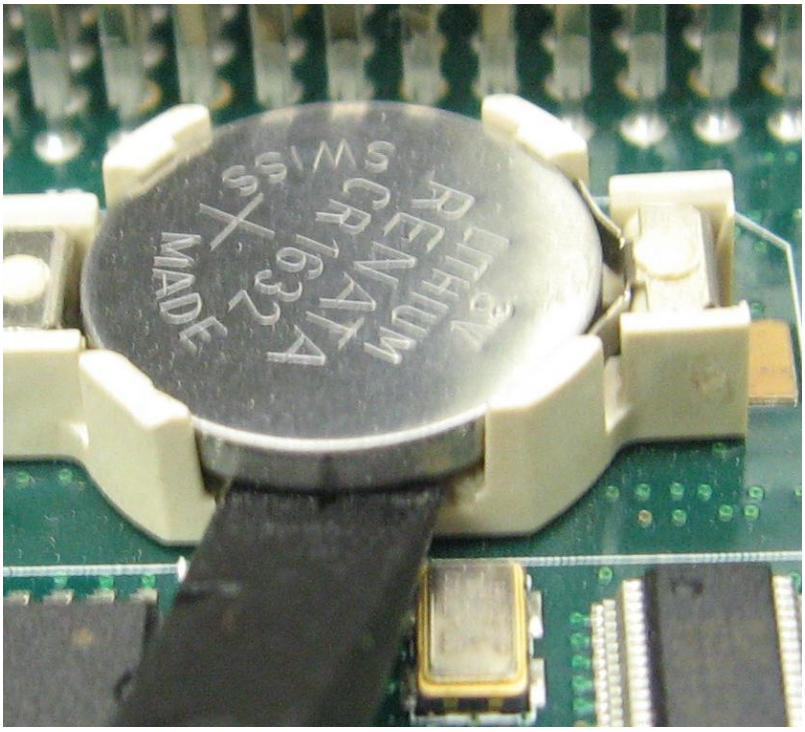

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2 • Standard Features

The V7865 is an Intel Core Duo Processor based SBC compatible with modern industry standard desktop systems. The V7865 therefore retains industry standard memory and I/O maps along with a standard interrupt architecture. The integrated peripherals described in this section (such as serial ports, USB port, video controller and Ethernet controller) are all memory mapped the same as similarly equipped desktop systems, ensuring compatibility with modern operating systems.

The following sections describe the standard features of the V7865.

2.1 BGA CPU

The V7865 CPU is factory populated with a high-speed Core Duo Processor CPU. The CPU speed and RAM/CompactFlash size are user specified as part of the V7865 ordering information.

To change CPU speeds, RAM size or CompactFlash size, contact customer care to receive a Return Material Authorization (RMA).

GE Intelligent Platforms Customer Care is available at: (or 1-800-433-2682), 1-780-401-7700 for international calls.

Or, visit our website at:

www.ge-ip.com

2.2 Physical Memory

The V7865 provides DDR2 Synchronous DRAM (SDRAM) as onboard system memory. Memory can be accessed as bytes, words or longwords.

The V7865 has a maximum memory configuration of 3 GByte of DDR2 SDRAM memory. This configuration calls for a 2 GByte SODIMM (one 200-pin SODIMM DDR2 module) and 1 GByte of onboard memory. The SDRAM is dual-ported to the VME through the PCI-to-VME bridge and is addressable by the local processor, as well as the VME slave interface by another VME master. Caution must be used when sharing memory between the local processor and the VME to prevent a VME deadlock and to prevent a VME master from overwriting the local processor's operating system.



NOTE

When using the Configure utility of GE Intelligent Platforms' IOWorks Access to configure RAM, do not request more than 25 percent of the physical RAM. Exceeding the 25 percent limit may result in known bugs that causes unpredictable behavior during the boot sequence, and requires the use of an emergency repair disk to restore the computer. It is recommended that an emergency repair disk be kept up-to-date and easily accessible.

The V7865 includes 32 KByte of non-volatile SRAM which can be accessed by the CPU at any time, and is used to store system data that must not be lost during power-off conditions.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

NOTE
Memory capacity may be extended as parts become available.

2.3 Memory and Port Maps

2.3.1 Memory Map - Tsi148 Based PCI-to-VME Bridge

The memory map for the V7865 is shown in Table 2-1. All systems share this same memory map.

Table 2-1 V7865, Tsi148 Memory Address Map

MODE	MEMORY ADDRESS RANGE	SIZE	DESCRIPTION
PROTECTED MODE	$FFFF 0000 - $FFFF FFFF	64 KByte	ROM BIOS Image
	$C000 0000 - $FFFE FFFF	0.9 GByte	Unused *
	$0010 0000 - $BFFF FFFF	3 GByte	Reserved for ** Onboard Extended Memory (not filled on all systems)
REAL MODE	$E0000 - $FFFFF	128 KByte	Reserved for BIOS Area
	$D8018 - $DFFFF	32 KByte	
	$D8016 - $D8017	2 bytes	
	$D8014 - $D8015	2 bytes	
	$D8010 - $D8013	2 bytes	
	$D800E - $D800F	2 bytes	
	$D8000 - $D800D	14 bytes	
	$C8000 - $D7FFF	64 KByte	
	$C0000 - $C7FFF	32 KByte	
	$A0000 - $BFFFF	128 KByte	
	$00000 - $9FFFF	640 KByte	

* This space can be used to set up protected mode PCI-to-VME windows (also referred to as PCI slave images). BIOS will also map onboard PCI based NVRAM, Timers and Watchdog Timers in this area.
** This space can be allocated as shared memory (for example, between the BGA CPU and VME Master). Note that if a PMC board is loaded, the expansion BIOS may be placed in this area.

2.4 I/O Port Map

Like a desktop system, the V7865 includes special input/output instructions that access I/O peripherals residing in I/O addressing space (separate and distinct from memory addressing space). Locations in I/O address space are referred to as ports. When the CPU decodes and executes an I/O instruction, it produces a 16-bit I/O address on lines A00 to A15 and identifies the I/O cycle with the M/I/O control line. Thus, the CPU includes an independent 64 KByte I/O address space, which is accessible as bytes, words or longwords.

Standard hardware circuitry reserves only 1,024 byte of I/O addressing space from I/O $000 to $3FF for peripherals. All standard PC I/O peripherals, such as serial and parallel ports, hard and floppy drive controllers, video system, real-time clock, system timers and interrupt controllers are addressed in this region of

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O space. The BIOS initializes and configures all these registers properly; adjusting these I/O ports directly is not normally necessary.

The assigned and user-available I/O addresses are summarized in the I/O Address Map, Table 2-2.

Table 2-2 V7865 I/O Address Map

I/O Address Range	Size In Bytes	HW Device	PC/AT Function
$000 - $00F	16		DMA Controller 1
$010 - $01F	16		Reserved
$020 - $021	2		Master Interrupt Controller
$022 - $03F	30		Reserved
$040 - $043	4		Programmable Timer
$044 - $05F	30		Reserved
$060 - $064	5		Keyboard, Speaker, System Configuration
$065 - $06F	11		Reserved
$070 - $071	2		Real-Time Clock
$072 - $07F	14		Reserved
$080 - $08F	16		DMA Page Registers
$090 - $091	2		Reserved
$092	1		Alt. Gate A20/Fast Reset Register
$093 - $09F	11		Reserved
$0A0 - $0A1	2		Slave Interrupt Controller
$0A2 - $0BF	30		Reserved
$0C0 - $0DF	32		DMA Controller 2
$0E0 - $16F	142		Reserved
$170 - $177	8	ICH7-M	Secondary Hard Disk Controller
$178 - $1EF	120		User I/O
$1F0 - $1F7	8	ICH7-M	Primary Hard Disk Controller
$1F8 - $277	128		User I/O
$278 - $27F	8	I/O Chip	Reserved
$280 - $2E7	104		Reserved
$2E8 - $2EE	7	UART*	COM4 Serial I/O*
$2EF - $2F7	9		User I/O
$2F8 - $2FE	7	Super-I/O Chip	COM2 Serial I/O (16550 Compatible)
$2FF - $36F	113		Reserved
$370 - $377	8	Super-I/O Chip*	Secondary Floppy Disk Controller*
$378 - $37F	8	Super-I/O Chip	Reserved
$380 - $3E7	108		Reserved
$3E8 - $3EE	7	UART*	COM3 Serial I/O*
$3F0 - $3F7	8	Super-I/O Chip*	Primary Floppy Disk Controller*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 2-2 V7865 I/O Address Map

I/O Address Range	Size In Bytes	HW Device	PC/AT Function
$3F8 - $3FE	7	Super-I/O Chip	COM1 Serial I/O (16550 Compatible)
$3FF - $4FF	256		Reserved
$500 - CFF	2048		Reserved

* While these I/O ports are reserved for the listed functions, they are not implemented on the V7865. They are listed here to make the user aware of the standard PC usage of these ports.

2.5 Interrupts

2.5.1 System Interrupts

In addition to an I/O port address, an I/O device has a separate hardware interrupt line assignment. Assigned to each interrupt line is a corresponding interrupt vector in the 256-vector interrupt table at $00000 to $003FF in memory. The sixteen maskable interrupts and the single Non-Maskable Interrupt (NMI) are listed in Table 2-3 along with their functions. Table 2-4 on page 33 details the vectors in the interrupt vector table. The interrupt number in HEX and decimal are also defined for real and protected mode in Table 2-4 on page 33.

The interrupt hardware implementation on the V7865 is standard for computers built around the PC architecture, which evolved from the IBM PC/XT. In the IBM PC/XT computers, only eight interrupt request lines exist, numbered from IRQ0 to IRQ7 at the PIC. The IBM PC/AT computer added eight more IRQx lines, numbered IRQ8 to IRQ15, by cascading a second slave PIC into the original master PIC. IRQ2 at the master PIC was committed as the cascade input from the slave PIC. This architecture is represented in Figure 2-1 on page 37.

To maintain backward compatibility with PC/XT systems, IBM chose to use the new IRQ9 input on the slave PIC to operate as the old IRQ2 interrupt line on the PC/XT Expansion Bus. Thus, in AT systems, the IRQ9 interrupt line connects to the old IRQ2 pin (pin B4) on the AT Expansion Bus (or ISA bus).

Table 2-3 Interrupt Line Assignments

IRQ	AT Function	Comments
NMI	Parity Errors (Must be enabled in BIOS Setup)	Used by V7865 PCI bus Interface
0	System Timer	Set by BIOS Setup
1	Keyboard	Set by BIOS Setup
2	Duplexed to IRQ9	
3	COM2	
4	COM1	
5	Unused	
6	Floppy Controller	
7	Unused	
8	Real-Time Clock	
9	Old IRQ2	SVGA or Network I/O
10	Not Assigned	Determined by BIOS
11	Not Assigned	Determined by BIOS
12	Mouse	
13	Math Coprocessor	
14	AT Hard Drive	
15	Flash Drive	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 2-4 Interrupt Vector Table

Interrupt Number		IRQ Line	Real Mode	Protected Mode
HEX	DEC			
00	0		Divide Error	Same as Real Mode
01	1		Debug Single Step	Same as Real Mode
02	2	NMI	Memory Parity Error, VME Interrupts	Same as Real Mode (Must be enabled in BIOS Setup)
03	3		Debug Breakpoint	Same as Real Mode
04	4		ALU Overflow	Same as Real Mode
05	5		Print Screen	Array Bounds Check
06	6			Invalid OpCode
07	7			Device Not Available
08	8	IRQ0	Timer Tick	Double Exception Detected
09	9	IRQ1	Keyboard Input	Coprocessor Segment Overrun
0A	10	IRQ2	BIOS Reserved	Invalid Task State Segment
0B	11	IRQ3	COM2 Serial I/O	Segment Not Present
0C	12	IRQ4	COM1 Serial I/O	Stack Segment Overrun
0D	13	IRQ5	Unassigned	Unassigned
0E	14	IRQ6	Floppy Disk Controller	Page Fault
0F	15	IRQ7	Unassigned	Unassigned
10	16		BIOS Video I/O	Coprocessor Error
11	17		System Configuration Check	Same as Real Mode
12	18		Memory Size Check	Same as Real Mode
13	19		XT Floppy/Hard Drive	Same as Real Mode
14	20		BIOS Comm I/O	Same as Real Mode
15	21		BIOS Cassette Tape I/O	Same as Real Mode
16	22		BIOS Keyboard I/O	Same as Real Mode
17	23		BIOS Printer I/O	Same as Real Mode
18	24		ROM BASIC Entry Point	Same as Real Mode
19	25		Bootstrap Loader	Same as Real Mode
1A	26		Time of Day	Same as Real Mode
1B	27		Control/Break Handler	Same as Real Mode
1C	28		Timer Control	Same as Real Mode
1D	29		Video Parameter Table Pntr	Same as Real Mode
1E	30		Floppy Parm Table Pntr	Same as Real Mode
1F	31		Video Graphics Table Pntr	Same as Real Mode
20	32		DOS Terminate Program	Same as Real Mode
21	33		DOS Function Entry Point	Same as Real Mode
22	34		DOS Terminate Handler	Same as Real Mode
23	35		DOS Control/Break Handler	Same as Real Mode

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 2-4 Interrupt Vector Table (Continued)

Interrupt Number		IRQ Line	Real Mode	Protected Mode
HEX	DEC			
24	36		DOS Critical Error Handler	Same as Real Mode
25	37		DOS Absolute Disk Read	Same as Real Mode
26	38		DOS Absolute Disk Write	Same as Real Mode
27	39		DOS Program Terminate, Stay Resident	Same as Real Mode
28	40		DOS Keyboard Idle Loop	Same as Real Mode
29	41		DOS CON Dev. Raw Output	Same as Real Mode
2A	42		DOS 3.x+ Network Comm	Same as Real Mode
2B	43		DOS Internal Use	Same as Real Mode
2C	44		DOS Internal Use	Same as Real Mode
2D	45		DOS Internal Use	Same as Real Mode
2E	46		DOS Internal Use	Same as Real Mode
2F	47		DOS Print Spooler Driver	Same as Real Mode
30-60	48-96		Reserved by DOS	Same as Real Mode
61-66	97-102		User Available	Same as Real Mode
67-6F	103-111		Reserved by DOS	Same as Real Mode
70	112	IRQ8	Real Time Clock	
71	113	IRQ9	Redirect to IRQ2	
72	114	IRQ10	Not Assigned	
73	115	IRQ11	Not Assigned	
74	116	IRQ12	Mouse	
75	117	IRQ13	Math Coprocessor	
76	118	IRQ14	AT Hard Drive	
77	119	IRQ15	Flash Drive	
78-7F	120-127		Reserved by DOS	Same as Real Mode
80-F0	128-240		Reserved for BASIC	Same as Real Mode
F1-FF	241-255		Reserved by DOS	Same as Real Mode

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.5.2 PCI Interrupts

The Tsi148 VME Bridge and the PMC site of the V7865 connect Standard PCI Interrupt Lines to the PCI-E to PCI-X bridge as shown in Figure 2-1 on page 37. The PCI-E bridges (PLX PEX8114) convert the PCI INTx interrupts into virtual PCI Express INTA interrupts that are signaled back to the chipset over the PCI Express Interface.

Interrupts on Peripheral Component Interconnect (PCI) Local Bus are optional and defined as “level sensitive,” asserted low (negative true), using open drain output drivers. The assertion and de-assertion of an interrupt line, INTx#, is asynchronous to CLK. A device asserts its INTx# line when requesting attention from its device driver. Once the INTx# signal is asserted, it remains asserted until the device driver clears the pending request. When the request is cleared, the device de-asserts its INTx# signal.

PCI defines one interrupt line for a single function device and up to four interrupt lines for a multifunction device or connector. For a single function device, only INTA# may be used while the other three interrupt lines have no meaning. Figure 2-1 on page 37 depicts the V7865 interrupt logic pertaining to timer NVRAM operations and the PCI expansion site.

Any function on a multifunction device can be connected to any of the INTx# lines. The Interrupt Pin register defines which INTx# line the function uses to request an interrupt. If a device implements a single INTx# line, it is called INTA#; if it implements two lines, they are called INTA# and INTB#; and so forth. For a multifunction device, all functions may use the same INTx# line, or each may have its own (up to a maximum of four functions), or any combination thereof. A single function can never generate an interrupt request on more than one INTx# line.

The slave PIC accepts the PCI interrupts through lines that are defined by the BIOS. The BIOS defines which interrupt line to utilize depending on which system requires the use of the line.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.5.3 PCI Device Interrupt Map

The PCI bus-based external devices include the PMC sites, Ethernet controller and the PCI-to-VME bridge. The default BIOS maps these external devices to the PCI Interrupt Request (PIRQx) lines of the ICH2. This mapping is illustrated in Figure 2-1 on page 37 and is defined in Table 2-5.


The device PCI interrupt lines (INTA through INTD) that are present on each device *cannot* be modified.

Table 2-5 PCI Device Interrupt Mapping by the BIOS

Device	Component	Vendor ID	Device ID	CPU Address Map ID Select	PCI IRQ	Arbitration Request Line
PCI-to-VME Bridge	Tundra Tsi148	0x10E3	0x0148	AD16	INTA	REQ0
Timer/SRAM FPGA	GE Intelligent Platforms Proprietary	0x114A	0x6504	AD21	INTE	N/A
PMC	N/A	N/A	N/A	AD16	INTA	REQ0
Ethernet Controller	Intel 82571EB	0x8086	0x105E	N/A	N/A	N/A
PCI Host Bridge	GMCH	0x8086	0x27A0	N/A	N/A	N/A
VGA Controller	GMCH	0x8086	0x27A2	N/A	N/A	N/A
Integrated Graphics	GMCH	0x8086	0x27A6	N/A	N/A	N/A
PCI-LPC Bridge	ICH7-M	0x8086	0x27B0	N/A	N/A	N/A
USB UHCI Controller	ICH7-M	0x8086	0x27C8 0x27C9 0x27CA 0x27CB	N/A	N/A	N/A
USB EHCI	ICH7-M	0x8086	0x27CC	N/A	N/A	N/A
SMBus Controller	ICH7-M	0x8086	0x27DA	N/A	N/A	N/A
PCI-E Controller	ICH7-M	0x8086	0x27D0	N/A	N/A	N/A
PCI-E Controller	ICH7-M	0x8086	0x27E0	N/A	N/A	N/A
DMI-PCI Bridge	ICH7-M	0x8086	0x2448	N/A	N/A	N/A
PCI-E Switch	PLX 8518	0x10B5	0x8518	N/A	N/A	N/A
PCI-E to PCI-X Bridge	PLX 8114	0x10B5	0x8114	N/A	N/A	N/A
Optional Vita 41 Ethernet	Intel 82571EB	0x8086	0x1060	N/A	N/A	N/A

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 2-1 Connections for the PCI Interrupt Logic Controller

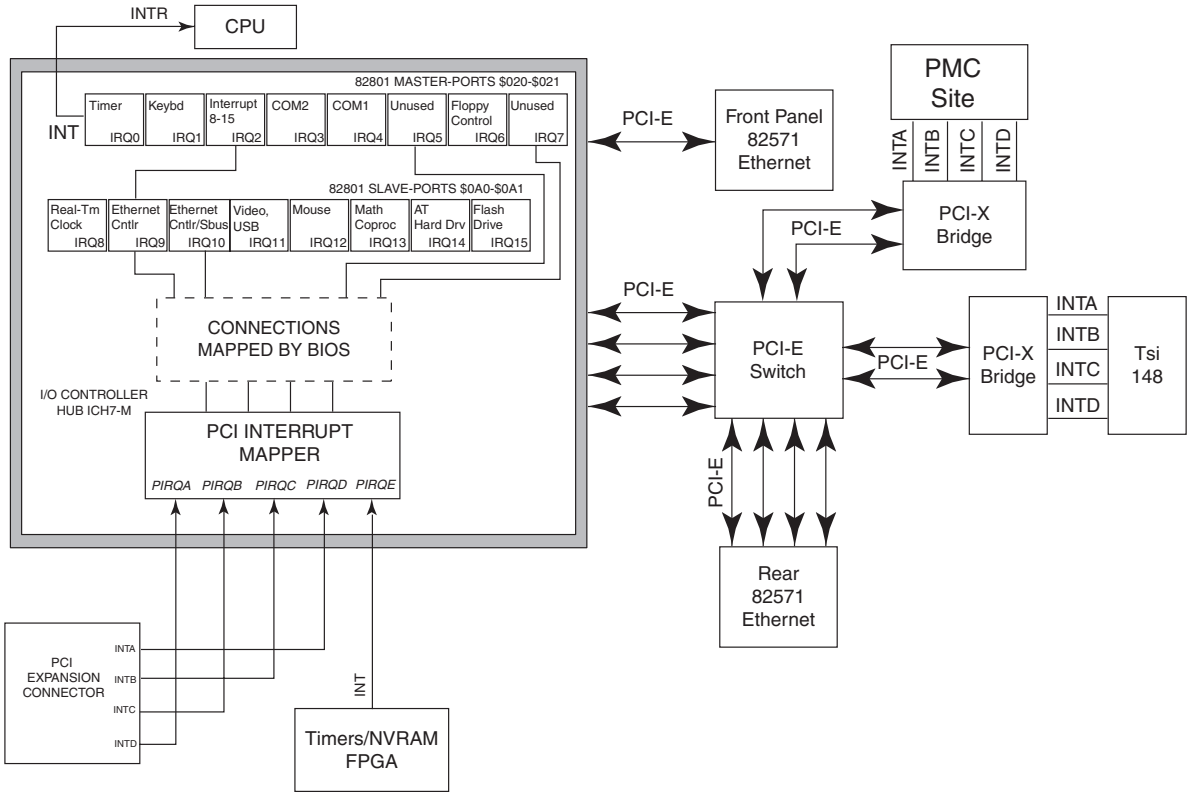

2.6 Integrated Peripherals

The V7865 incorporates an SMSC Super I/O (SIO) chip. The SIO provides the V7865 with two 16550 UART-compatible serial ports, keyboard and mouse ports and general purpose I/O for system monitoring functions. The serial port signals for COM1 are available from the front panel, and the signals for COM2 are available through the rear I/O.

The SATA interface is provided by the Intel I/O Controller Hub (ICH7-M) chip. The SATA interface supports two channels known as the primary and secondary channels. The IDE channel is routed onboard to the optional CompactFlash socket. Both SATA channels are routed out the VME backplane and can be accessed using a ACC-0602RC/ACC-0603RC RTM which terminates into standard SATA connectors.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.7 Ethernet Controllers

The V7865 supports Ethernet LANs with two Intel Ethernet controllers (82571 Dual GbE controller). 10Base-T, 100Base-TX and GbE options are supported via two front panel RJ45 connectors.

2.7.1 10Base-T

A network based on the 10Base-T standard uses unshielded twisted-pair cables, providing an economical solution to networking by allowing the use of existing telephone wiring and connectors. The RJ45 connector is used with the 10Base-T standard. 10Base-T has a maximum length of 100 meters.

2.7.2 100Base-TX

The V7865 also supports the 100Base-TX Ethernet. A network based on a 100Base-TX standard uses unshielded twisted-pair cables and an RJ45 connector. 100Base-TX has a maximum length of 100 meters.

2.7.3 1000Base-T

The V7865 supports GbE offering speeds of 1000 Mbit/s. It is fully compatible with existing Ethernets, as it uses the same CSMA/CD and MAC protocols. 1000Base-T has a maximum length of 3000 meters using Single-mode Fiber-Optic cables.

2.7.4 Boot ROM BIOS

The V7865 supports booting on the front panel GbE ports using a ROM Ethernet BIOS. Refer to ***Appendix C: Remote Booting*** for more information on remote Ethernet booting.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.8 Video Graphics Adapter

High-resolution graphics and multimedia-quality video are supported on the V7865 using the 945GM/945GME (GMCH) chipset internal graphics controller. Screen resolutions up to 1,600 x 1,200 x 256 colors (single view mode) are supported by the graphics adapter

Table 2-6 Partial List of Display Modes Supported

Resolution	Bits Per Pixel (Frequency in Hz)		
	8-bit Indexed	16-bit	32-bit
640 x 480	60, 70, 72, 75, 85, 100, 120	60, 70, 72, 75, 85, 100, 120	60, 70, 72, 75, 85, 100, 120
720 x 1280	60, 75, 85, 100	60, 75, 85, 100	60, 75, 85, 100
768 x 1280	60, 75, 85	60, 75, 85	60, 75, 85
800 x 600	56, 60, 72, 75, 85, 100, 120	56, 60, 72, 75, 85, 100, 120	56, 60, 72, 75, 85, 100, 120
1,024 x 768	60, 70, 75, 85, 100, 120	60, 70, 75, 85, 100, 120	60, 70, 75, 85, 100, 120
1,152 x 864	60, 75, 85, 100	60, 75, 85, 100	60, 75, 85, 100
1,280 x 720	60, 75, 85, 100	60, 75, 85, 100	60, 75, 85, 100
1,280 x 960	60, 75, 85	60, 75, 85	60, 75, 85
1,280 x 1,024	60, 75, 85, 100, 120	60, 75, 85, 100, 120	60, 75, 85, 100, 120
1,600 x 900	60, 75, 85, 100, 120	60, 75, 85, 100, 120	60, 75, 85, 100, 120
1,600 x 1,200	60, 75, 85, 100	60, 75, 85, 100	60, 75, 85, 100

NOTE

Not all SVGA monitors support resolutions and refresh rates beyond 640 x 480 at 85 Hz. Do not attempt to drive a monitor to a resolution or refresh rate beyond its capability.

2.9 Digital Visual Interface (DVI-D)

The V7865 supports a Digital Visual Interface - Digital that provides a high-speed digital connection for visual data types that are display technology independent. DVI-D is a display interface developed in response to the proliferation of digital flat-panel displays.

DVI-D uses Silicon Image's PanelLink, a high-speed serial interface that uses Transition Minimized Differential Signaling (TMDS) to send data to the monitor. The DFP and VESA Plug and Display interfaces also use PanelLink. For this reason, DVI-D can work with these previous interfaces by using adapter cables (depending on the signal quality of the adapter.)

DVI-D also supports the VESA Display Data Channel (DDC) and the Extended Display Identification Data (EDID) specifications. DDC is a standard communications channel between the display adapter and monitor. EDID is a standard data format containing monitor information such as vendor information, monitor timing, maximum image size, and color characteristics. EDID information is stored in the display and is communicated over the DDC. EDID and DDC enable the system, display and graphics adapter to communicate so that the system can be configured to support specific features available in the display.

DVI-D can be accessed via GE Intelligent Platforms' ACC-0602RC/ACC-0603RC rear transition module.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.10 Universal Serial Bus

The V7865 provides a dual Universal Serial Bus (USB) connection on the front panel and two USB interface ports out the VME P2 connector. The onboard USB controller supports the standard USB interface Rev. 2.0.

The USB Host Controller moves data between system memory and the USB by processing and scheduling data structures. The controller executes the scheduled lists, and reports status back to the system.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3 • Embedded PC/RTOS Features

GE Intelligent Platforms' V7865 features additional capabilities beyond those of a typical desktop computer system. The unit provides four software-controlled, general-purpose timers along with a programmable Watchdog Timer for synchronizing and controlling multiple events in embedded applications. The V7865 also provides a bootable CompactFlash system and 32 KByte of non-volatile SRAM. Also, the V7865 supports an embedded intelligent VME bridge to allow compatibility with the most demanding VME applications. These features make the unit ideal for embedded applications, particularly where standard hard drives and floppy disk drives cannot be used.

3.1 VME Bridge

In addition to its PC/AT functions, the V7865 has the following VME features:

The Tundra Tsi148 allows VME to run at a bandwidth of up to 320 MByte/s along the full length of a 21-slot backplane. This increases the performance in the following ways:

- 2eSST VME transfers
- 8x faster than the 40 MByte/s transfer rate of VME64
- 3x faster than a multi-domain, 64-bit/66 MHz CompactPCI bus
- Broadcast Mode support for sending data to multiple cards at one time

Other standard features include:

- Legacy protocol support
- User-configured interrupter
- User-configured interrupt handler
- Full VME system controller functionality
- Two programmable DMA controllers
- System Controller auto detection

The V7865 VME interface is based on the high performance PCIX-to-VME interface from the Tundra Tsi148. Providing a 64-bit bus width capable of operating at 100 MHz, the Tundra Tsi148 uses PCI-X version 2.0 mode 1. Tsi148 is fully compliant with both 2eSST and VME64 Extension standards.

The functions and programming of the Tsi148-based VME interface are addressed in detail in the *Tsi148 PCI/X-to-VME Bus Bridge User Manual.*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.1.1 PCI-X To VME Bridge (Tsi148) Software Guidelines

Programmers writing code or using GE Intelligent Platforms Board Support Packages for the Tsi148 Bridge as used on the V7865 single board computer, must be aware of requirements of the Tsi148 based PCI-X to VME architecture.

The V7865 PCI-X to VME Interface uses the Tundra Tsi148 2eSST Bridge. This architecture interfaces the VME to the onboard SBC PCI-X bus. In doing so, the user must be aware of the following guidelines as related to Software programming of the Tsi148:

Shared V7865 Memory: Any V7865 DRAM memory made available to another VME master through the Tsi148 is subject to dead lock that may cause a VME bus error unless specific precautions are taken. If onboard DRAM memory is slaved to the VME, and a program on the V7865 with slaved memory attempts to write (from the processor) to the VME through the Tsi148, then the user must first request ownership of the VME through the Device Wants Bus (DWB) Bit in the Tsi148, and be granted the VME, prior to doing writes to the Tsi148. (Note, please see the Tsi148 Manual and Errata regarding the requirements to use the DWB bit of the Tsi148). The user may also implement other methods of gaining ownership of the VME, such as Tsi148 semaphores. But, regardless of the method used, when using shared memory, the user must gain exclusive VME ownership prior to generating asynchronous VME writes.

Extremely Long VME Slave Response Time: VME slave devices (or VME BERR conditions) that have a DTAK (or BERR) response time of greater than 16µs can cause Bridge Ordering rule issues with intermixed reads and writes through the Tsi148. If the SBC user wishes to do an extended number (larger than the depth of the Tsi148 write post buffer) of consecutive writes from the processor to the VME through the Tsi148, and those writes can be intermixed with reads from another task, then the user must verify that all slaves within the system have DTACK response time of less than 16µs, and that the VME BERR timer of the system is set to 16µs max. Also it is suggested that prior to doing any large VME transfer, the users should first request ownership of the VME through the DWB Bit in the Tsi148, and be granted the VME, prior to doing writes to the Tsi148. (Note, please see the Tsi148 Manual and Errata regarding the requirements to use the DWB bit of the Tsi148). The user may also implement other methods of gaining ownership of the VME, such as Tsi148 semaphores. But, regardless of the method used, when generating an extended number of consecutive processor to VME writes (larger than the depth of the Tsi148 write post buffer), the user must gain exclusive VME ownership prior to generating these asynchronous VME writes.



NOTE

Failure to implement the procedures outlined above may cause some system implementations to lockup or generate unwanted VME errors.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.1.2 I²C/SMBus Temperature Sensor

There are four temperature sensors:

1. The **MAX6659** senses the CPU and its own temperature remotely for ambient/chassis/room temperature. The MAX6659 can be monitored and controlled on the SMBus at one of three addresses through an address pin. This allows the user to monitor and set up the three alarm outputs: ($\overline{\text{ALERT}}$, $\overline{\text{OVERT1}}$ and $\overline{\text{OVERT2}}$). For more information on the Maxim MAX6659, contact them directly at: 1-888-629-4642, or visit Maxim's website at www.maxim-ic.com.
2. The **LM75** senses the SODIMM/RAM temperature.
   For more information on the LM75 digital Temperature Sensor, go to their website: http://www.national.com/mpf/LM/LM75.html.
3. The **MAX1805** senses the two Ethernet controllers; Intel 82571 dual GByte controllers at the front panel dual Ethernet and the rear VITA 41.3 dual Ethernet. For more information, call 1-888-629-4642, or visit Maxim's website at www.maxim-ic.com.

The three sensors described above can be monitored and controlled on the SMBus. The SMBus controller used to access these temperature sensors is part of the Intel 945GME ICH7, 82801GHM. It can be accessed as a PCI device with the vendor ID 0x8086 (Intel) and the device ID 0x27DA (SMBus Controller).

For more detailed information regarding the ICH7 device 31, function 3, see the ICH7 data sheet at http://www.intel.com/assets/pdf/datasheet/307013.pdf, pages 583-599.

4. Lastly, there is an **internal-to-the-CPU temperature sensor** (see page 89 of the "Intel Core Duo Processor and Intel Core Solo Processor on 65 nm Process" Datasheet at http://download.intel.com/design/mobile/datashts/30922106.pdf.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.2 Embedded PCI Functions

The V7865 provides non-volatile RAM (NVRAM), Timers and a Watchdog Timer via the PCI bus. These functions are required for embedded and real time applications. The PCI configuration space of these embedded functions are shown below.

Table 3-1 PCI Configuration Space Registers

31	16	15	00	Register Address
Device ID 6504		Vendor ID 114A		00h
Status		Command		04h
Class Code			Revision ID	08h
BIST	Header Type	Latency Timer	Cache Line Size	0Ch
PCI Base Address 0 for Memory-Mapped 32KB NVRAM (BAR0)				10h
PCI Base Address 1 for Memory-Mapped Watchdog and other timers (BAR1)				14h
Reserved				18h
Reserved				1Ch
Reserved				20h
Reserved				24h
Reserved				28h
Subsystem ID 7865		Subsystem Vendor ID 114A		2Ch
Reserved				30h
Reserved				34h
Reserved				38h
Max_Lat	Min_gnt	Interrupt Pin	Interrupt Line	3Ch

The “Device ID” field indicates that the device is for VME products (00) and indicates the supported embedded feature set.

The “Vendor ID” and “Subsystem Vendor ID” fields indicate GE Intelligent Platforms’ PICMG® assigned Vendor ID (114A).

The “Subsystem ID” field indicates the model number of the product (7865).



NOTE

V7865 boards with the 3 GByte memory option will begin to lose access to the physical memory if more than 128 MByte is chosen for VME.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.3 Timers

3.3.1 General

The V7865 provides four user-programmable timers (two 16-bit and two 32-bit) which are completely dedicated to user applications and are not required for any standard system function. Each timer is clocked by independent generators with selectable rates of 2 MHz, 1 MHz, 500 kHz and 250 kHz. Each timer may be independently enabled and each is capable of generating a system interrupt on timeout.

Events can be timed by either polling the timers or enabling the interrupt capability of the timer. A status register allows for application software to determine which timer is the cause of any interrupt.

3.3.2 Timer Control Status Register 1 (TCSR1)

The timers are controlled and monitored via the Timer Control Status Register 1 (TCSR1) located at offset 0x00 from the address in BAR2. The mapping of the bits in this register are as follows:

Table 3-2 Timer Control Register 1 (TCSR 1)

Field	Bits	Read or Write
Timer 1 Caused IRQ	TCSR1[0]	R/W
Timer 1 Enable	TCSR1[1]	R/W
Timer 1 IRQ Enable	TCSR1[2]	R/W
Timer 1 Clock Select	TCSR1[4..3]	R/W
Timer 2 Caused IRQ	TCSR1[8]	R/W
Timer 2 Enable	TCSR1[9]	R/W
Timer 2 IRQ Enable	TCSR1[10]	R/W
Timer 2 Clock Select	TCSR1[12..11]	R/W
Timer 3 Caused IRQ	TCSR1[16]	R/W
Timer 3 Enable	TCSR1[17]	R/W
Timer 3 IRQ Enable	TCSR1[18]	R/W
Timer 3 Clock Select	TCSR1[20..19]	R/W
Timer 4 Caused IRQ	TCSR1[24]	R/W
Timer 4 Enable	TCSR1[25]	R/W
Timer 4 IRQ Enable	TCSR1[26]	R/W
Timer 4 Clock Select	TCSR1[28..27]	R/W
Reserved	All Other Bits	R/W
All of these bits default to "0" after system reset.		

Each timer has an independently selectable clock source which is selected by the bit pattern in the "Timer x Clock Select" field as follows:

Table 3-3 Timer x Clock Select Field

Clock Rate	MSb	LSb
2 MHz	0	0
1 MHz	0	1
500 kHz	1	0
250 kHz	1	1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Each timer can be independently enabled by writing a “1” to the appropriate “Timer x Enable” field. Similarly, the generation of interrupts by each timer can be independently enabled by writing a “1” to the appropriate “Timer x IRQ Enable” field.

If an interrupt is generated by a timer, the source of the interrupt may be determined by reading the “Timer x Caused IRQ” fields. If the field is set to “1,” then the respective timer caused the interrupt. Note that multiple timers can cause a single interrupt. Therefore, the status of all timers must be read to ensure that all interrupt sources are recognized.

A particular timer interrupt can be cleared by writing a “0” to the appropriate “Timer x Caused IRQ” field. Alternately, a write to the appropriate Timer x IRQ Clear (TxIC) register will also clear the interrupt. When clearing the interrupt using the “Timer x Caused IRQ” fields, note that it is very important to ensure that a proper bit mask is used so that other register settings are not affected. The preferred method for clearing interrupts is to use the “Timer x IRQ Clear” registers described on page 48.

3.3.3 Timer Control Status Register 2 (TCSR2)

The timers are also controlled by bits in the Timer Control Status Register 2 (TCSR2) located at offset 0x04 from the address in BAR2. The mapping of the bits in this register are as follows:

Table 3-4 Timer Control Status Register 2 (TCSR2)

Field	Bits	Read or Write
Read Latch Select	TCSR2[0]	Read/Write
Reserved	All Other Bits	Read/Write
All of these bits default to “0” after system reset.		

The “Read Latch Select” bit is used to select the latching mode of the programmable timers. If this bit is set to “0,”then each timer output is latched upon a read of any one of its addresses. For example, a read to the TMRCCR12 register latches the count of timers 1 and 2. A read to the TMRCCR3 register latches the count of timer 3. This continues for every read to any one of these registers. As a result, it is not possible to capture the values of all four timers at a given instance in time. However, by setting this bit to “1”, all four timer outputs will be latched only on reads to the Timer 1 & 2 Current Count Register (TMRCCR12). Therefore, to capture the current count of all four timers at the same time, perform a read to the TMRCCR12 first (with a 32-bit read), followed by a read to TMRCCR3 and TMRCCR4. The first read (to the TMRCCR12 register) causes all four timer values to be latched at the same time. The subsequent reads to the TMRCCR3 and TMRCCR4 registers do not latch new count values, allowing the count of all timers at the same instance in time to be obtained.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.3.4 Timer 1 & 2 Load Count Register (TMRLCR12)

Timers 1 & 2 are 16-bits wide and obtain their load count from the Timer 1 & 2 Load Count Register (TMRLCR12), located at offset 0x10 from the address in BAR2. The mapping of bits in this register are as follows:

Table 3-5 Timer 1 & 2 Load Count Register (TMRLCR12)

Field	Bits	Read or Write
Timer 2 Load Count	TMRLCR12[31..16]	Read/Write
Timer 1 Load Count	TMRLCR12[15..0]	Read/Write

When either of these fields are written (either by a single 32-bit write or separate 16-bit writes), the respective timer is loaded with the written value on the next rising edge of the timer clock, regardless of whether the timer is enabled or disabled. The value stored in this register is also automatically reloaded on terminal count (or timeout) of the timer.

3.3.5 Timer 3 Load Count Register (TMRLCR3)

Timer 3 is 32-bits wide and obtains its load count from the Timer 3 Load Count Register (TMRLCR3), located at offset 0x14 from the address in BAR2. The mapping of bits in this register are as follows:

Table 3-6 Timer 3 Load Count Register (TMRLCR3)

Field	Bits	Read or Write
Timer 3 Load Count	TMRLCR3[31..0]	Read/Write

When this field is written, Timer 3 is loaded with the written value on the next rising edge of the timer clock, regardless of whether the timer is enabled or disabled. The value stored in this register is also automatically reloaded on terminal count (or timeout) of the timer.

3.3.6 Timer 4 Load Count Register (TMRLCR4)

Timer 4 is 32-bits wide and obtains its load count from the Timer 4 Load Count Register (TMRLCR4), located at offset 0x18 from the address in BAR2. The mapping of bits in this register are as follows:

Table 3-7 Timer 4 Load Count Register (TMRLCR4)

Field	Bits	Read or Write
Timer 4 Load Count	TMRLCR4[31..0]	Read/Write

When this field is written, Timer 4 is loaded with the written value on the next rising edge of the timer clock, regardless of whether the timer is enabled or disabled. The value stored in this register is also automatically reloaded on terminal count (or timeout) of the timer.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.3.7 Timer 1 & 2 Current Count Register (TMRCCR12)

The current count of timers 1 & 2 may be read via the Timer 1 & 2 Current Count Register (TMRCCR12), located at offset 0x20 from the address in BAR2. The mapping of bits in this register are as follows:

Table 3-8 Timer 1 & 2 Current Count Register (TMRCCR12)

Field	Bits	Read or Write
Timer 2 Count	TMRCCR12[31..16]	Read Only
Timer 1 Count	TMRCCR12[15..0]	Read Only

When either field is read, the current count value is latched and returned. There are two modes that determine how the count is latched depending on the setting of the "Read Latch Select" bit in the WDT Control Status Register (CSR2). See the CSR2 register description for more information on these two modes.

3.3.8 Timer 3 Current Count Register (TMRCCR3)

The current count of Timer 3 may be read via the Timer 3 Current Count Register (TMRCCR3), located at offset 0x24 from the address in BAR2. The mapping of bits in this register are as follows:

Table 3-9 Timer 3 Current Count Register (TMRCCR3)

Field	Bits	Read or Write
Timer 3 Count	TMRCCR3[31..0]	Read Only

When this field is read, the current count value is latched and returned. There are two modes that determine how the count is latched depending on the setting of the "Read Latch Select" bit in the WDT Control Status Register (CSR2). See the CSR2 register description for more information on these two modes.

3.3.9 Timer 4 Current Count Register (TMRCCR4)

The current count of Timer 4 may be read via the Timer 4 Current Count Register (TMRCCR4), located at offset 0x28 from the address in BAR2. The mapping of bits in this register are as follows:

Table 3-10 Timer 4 Current Count Register (TMRCCR4)

Field	Bits	Read or Write
Timer 4 Count	TMRCCR4[31..0]	Read Only

When this field is read, the current count value is latched and returned. There are two modes that determine how the count is latched depending on the setting of the "Read Latch Select" bit in the WDT Control Status Register (CSR2). See the CSR2 register description for more information on these two modes.

3.3.10 Timer 1 IRQ Clear (T1IC)

The Timer 1 IRQ Clear (T1IC) register is used to clear an interrupt caused by Timer 1. Writing to this register, located at offset 0x30 from the address in BAR2, causes the interrupt from Timer 1 to be cleared. This can also be done by writing a "0" to the appropriate "Timer x Caused IRQ" field of the timer Control Status Register (CSR1). This register is write only and the data written is irrelevant.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.3.11 Timer 2 IRQ Clear (T2IC)

The Timer 2 IRQ Clear (T2IC) register is used to clear an interrupt caused by Timer 2. Writing to this register, located at offset 0x34 from the address in BAR2, causes the interrupt from Timer 2 to be cleared. This can also be done by writing a "0" to the appropriate "Timer x Caused IRQ" field of the timer Control Status Register (CSR1). This register is write only and the data written is irrelevant.

3.3.12 Timer 3 IRQ Clear (T3IC)

The Timer 3 IRQ Clear (T3IC) register is used to clear an interrupt caused by Timer 3. Writing to this register, located at offset 0x38 from the address in BAR2, causes the interrupt from Timer 3 to be cleared. This can also be done by writing a "0" to the appropriate "Timer x Caused IRQ" field of the timer Control Status Register (CSR1). This register is write only and the data written is irrelevant.

3.3.13 Timer 4 IRQ Clear (T4IC)

The Timer 4 IRQ Clear (T4IC) register is used to clear an interrupt caused by Timer 4. Writing to this register, located at offset 0x3C from the address in BAR2, causes the interrupt from Timer 4 to be cleared. This can also be done by writing a "0" to the appropriate "Timer x Caused IRQ" field of the timer Control Status Register (CSR1). This register is write only and the data written is irrelevant.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.4 Watchdog Timer

3.4.1 General

The V7865 provides a programmable Watchdog Timer (WDT) which can be used to reset the system if software integrity fails.

3.4.2 WDT Control Status Register (WCSR)

The WDT is controlled and monitored by the WDT Control Status Register (WCSR) which is located at offset 0x08 from the address in BAR2. The mapping of the bits in this register are as follows:

Table 3-11 WDT Control Status Register (WCSR)

Field	Bits	Read or Write
SERR/RST Select	WCSR[16]	Read/Write
WDT Timeout Select	WCSR[10..8]	Read/Write
WDT Enable	WCSR[0]	Read/Write
All of these bits default to "0" after system reset. All other bits are reserved.		

The "WDT Timeout Select" field is used to select the timeout value of the Watchdog Timer as follows

Table 3-12 WDT Timeout Select Field

Timeout	WCSR[10]	WCSR[9]	WCSR[8]
135 s	0	0	0
33.6 s	0	0	1
2.1 s	0	1	0
524 ms	0	1	1
262 ms	1	0	0
131 ms	1	0	1
32.768 ms	1	1	0
2.048 ms	1	1	1

The "SERR/RST Select" bit is used to select whether the WDT generates an SERR# on the local PCI bus or a system reset. If this bit is set to "0", the WDT will generate a system reset. Otherwise, the WDT will make the local PCI bus SERR# signal active.

The "WDT Enable" bit is used to enable the Watchdog Timer function. This bit must be set to "1" in order for the Watchdog Timer to function. Note that since all registers default to zero after reset, the Watchdog Timer is always disabled after a reset. The Watchdog Timer must be re-enabled by the application software after reset in order for the Watchdog Timer to continue to operate. Once the Watchdog Timer is enabled, the application software must refresh the Watchdog Timer within the selected timeout period to prevent a reset or SERR# from being generated. The Watchdog Timer is refreshed by performing a write to the WDT Keepalive register (WKPA). The data written is irrelevant.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.4.3 WDT Keepalive Register (WKPA)

When enabled, the Watchdog Timer is prevented from resetting the system by writing to the WDT Keepalive Register (WKPA) located at offset 0x0C from the address in BAR2 within the selected timeout period. The data written to this location is irrelevant.

3.5 CompactFlash

The V7865 features an optional onboard CompactFlash mass storage system with a capacity of up to 4 GByte. This CompactFlash appears to the user as an intelligent ATA (IDE) disk drive with the same functionality and capabilities as a "rotating media" IDE hard drive. The V7865 BIOS includes an option to allow the board to boot from the CompactFlash.

The CompactFlash resides on the V7865 as an IDE bus primary device.

3.6 Remote Ethernet Booting

The V7865 is capable of booting from a server using the 10/100/1000 Mbit Ethernet ports over a network utilizing the Intel Boot Agent. The Intel Boot Agent gives you the ability to remotely boot the V7865 using the PXE protocol. The Ethernet must be connected through one of the front panel (RJ45) connectors to boot remotely. This feature allows users to create systems without the worry of disk drive reliability, or the extra cost of adding CompactFlash drives. See ***Appendix C: Remote Booting*** for setup details.

BootWare Features:

- PXE boot support
- Unparalleled boot sector virus protection
- Detailed boot configuration screens
- Optional disabling of local boots
- Dual-boot option lets users select network or local booting

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Maintenance

If a GE product malfunctions, please verify the following:

1. Software version resident on the product
2. System configuration
3. Electrical connections
4. Jumper or configuration options
5. Boards are fully inserted into their proper connector location
6. Connector pins are clean and free from contamination
7. No components or adjacent boards were disturbed when inserting or removing the board from the chassis
8. Quality of cables and I/O connections

If products must be returned, contact GE for a Return Material Authorization (RMA) Number. **This RMA Number must be obtained prior to any return from Customer Care.**

GE Customer Care is available at: 1-800-433-2682 in North America, or +1-780-401-7700 for international calls. Or, visit our website at:

www.ge-ip.com

Maintenance Prints

User level repairs are not recommended. The drawings and diagrams in this manual are for reference purposes only.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Compliance

This chapter provides the applicable information regarding regulatory compliance for the V7865.

GE's V7865 has been evaluated and has met the requirements for compliance to the following standards:

International Compliance

- EN55022:1998/CISPR 22:1997
- IEC61000-4-2
- IEC61000-4-3
- IEC61000-4-4
- IEC61000-4-5
- IEC61000-4-6

European Union (CE Mark)

- BS EN55024 (1998 w A1:01 & A2:03)
- BS EN55022 (Class A)

United States

- FCC Part 15, Subpart B, Section 109, Class A

Australia/New Zealand

- AS/NZS CISPR 22 (2002) Class A

Canada

- ICES-003 Class A

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Class A



NOTE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



NOTE

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canadian Regulations

The V7865 Class A digital apparatus complies with Canadian ICES-003.



NOTE

Any equipment tested and found compliant with FCC Part 15 for unintentional radiators or EN55022 (previously CISPR 22) satisfies ICES-003.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A • Appendix A: Connectors and Pinouts

The V7865 VME SBC has several connectors for its I/O ports. Wherever possible, the V7865 uses connectors and pinouts typical for any desktop PC. This ensures maximum compatibility with a variety of systems.


Connector diagrams in this appendix are generally shown in a natural orientation with the controller board mounted in a VME chassis.

J21 connector is available on the Commercial Option boards only. This connector provides support for the GE Intelligent Platforms' PMC237CM1/V expander card (sold separately). The expander card is a 6U form factor board that adds three PMC slots or two PMC slots and one PCMCIA/CardBus socket.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A.1 Connector Locations

Figure A-1 Connector Locations

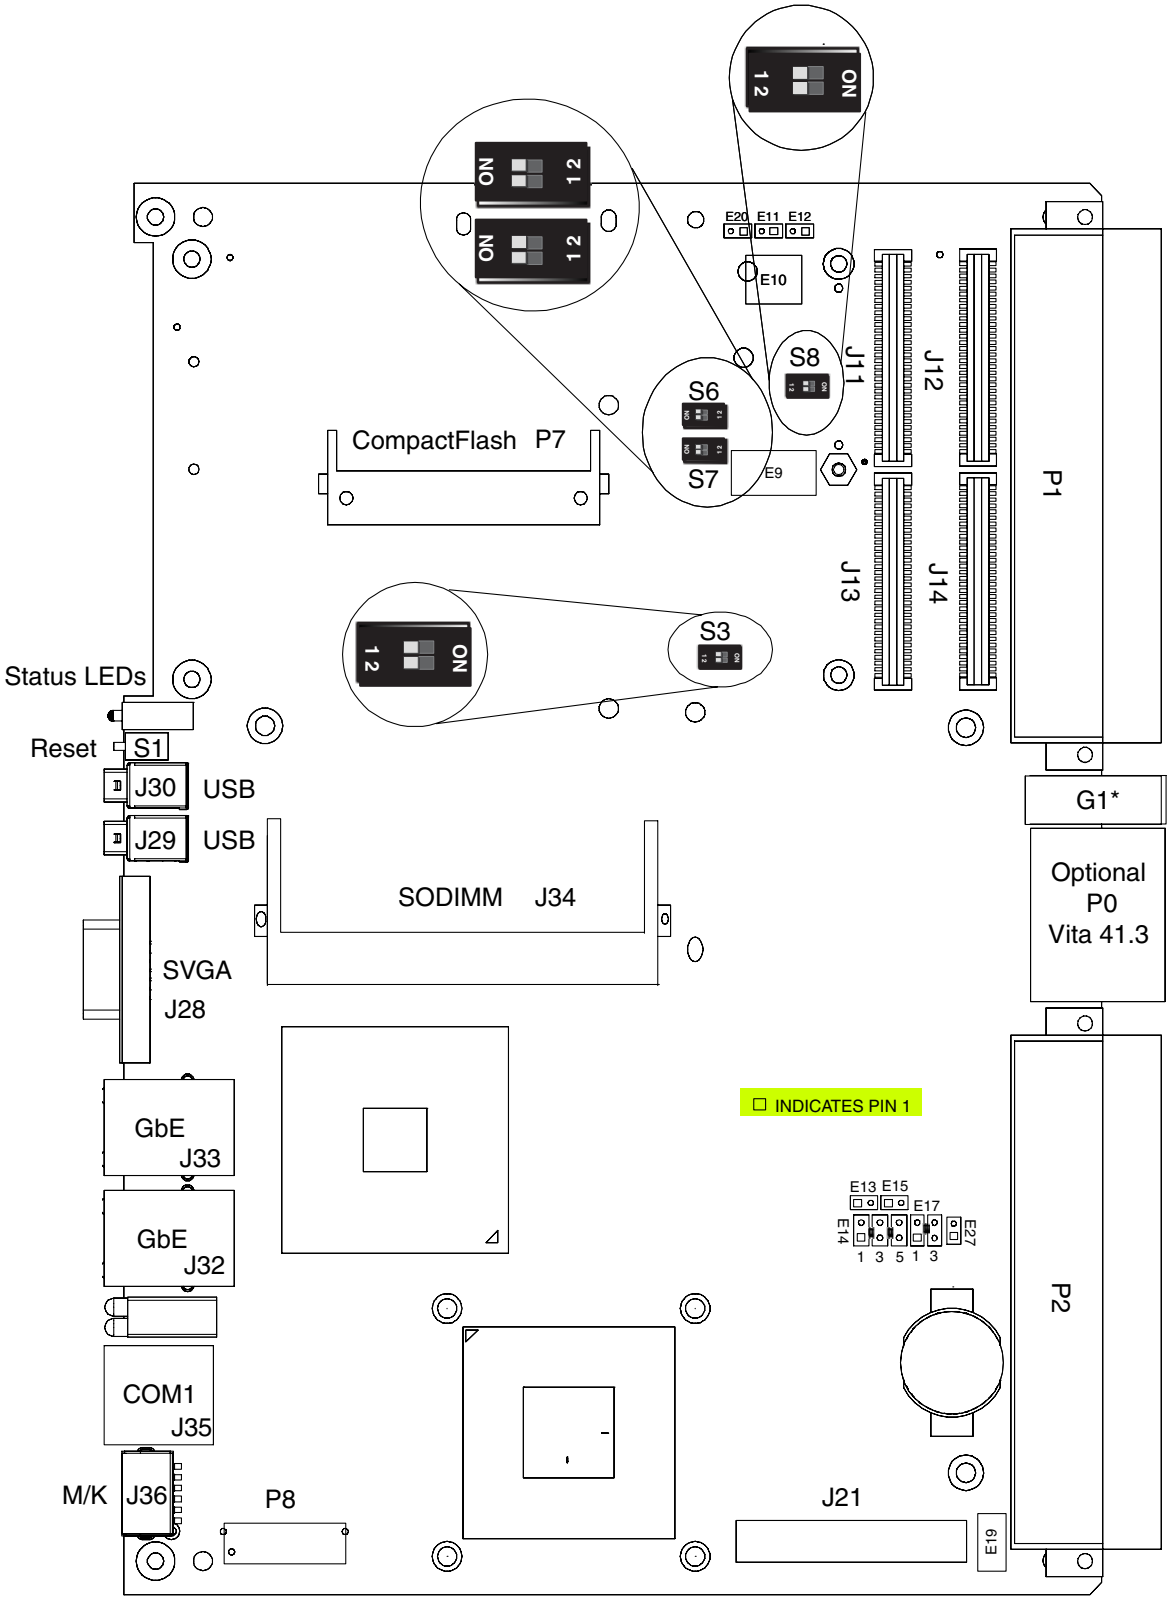


* The G1 keying pin is provided with the Vita 41.3 P0 option.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A.2 VME Connector Pinout (P1 and P2)

Figure A-2 and Table A-1 show the pin assignments for the VME connectors. Note that only Row B of connector P2 is used; all other pins on P2 are reserved and should not be connected.

Figure A-2 VME Connector Diagram (P1/P2)



WARNING

The V7865 board should not be used with IDE rear cabling that is compatible with any VME-74xx boards, except for the VME-7469, which supports SATA.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table A-1 VME Connector Pinout (P1/P2)

Pin#	P1 Row A Signal	P1 Row B Signal	P1 Row C Signal	P2 Row Z Signal	P2 Row A Signal	P2 Row B Signal	P2 Row C Signal	P2 Row D Signal
1	D00	BBSY#	D08	CONN [2]	GND	VCC_5.0	SP1_TX	CONN [1]
2	D01	BCLR#	D09	GND	USB_P5N	GND	SP1_RTS#	CONN [3]
3	D02	ACFAIL	D10	CONN [5]	USB_P5P	RETRY#	SP1_DTR#	CONN [4]
4	D03	BG0IN#	D11	GND	USB_OC5#	A24	SP1_RX	CONN [6]
5	D04	BG0OUT#	D12	CONN [8]	GND	A25	SP1_DCD#	CONN [7]
6	D05	BG1IN#	D13	GND	USB_P4N	A26	SP1_CTS#	CONN [9]
7	D06	BG1OUT#	D14	CONN [11]	USB_P4P	A27	SP1_DSR#	CONN [10]
8	D07	BG2IN#	D15	GND	USB_OC4#	A28	SP1_RI#	CONN [12]
9	GND	BG2OUT#	GND	CONN [14]	GND	A29	RTM_ SCONF_GP	CONN [13]
10	SYSCLK	BG3IN#	SYSFAIL#	GND	USB_P3P	A30	VCC_5.0	CONN [15]
11	GND	BG3OUT#	BERR#	CONN [17]	USB_P3N#	A31	VCC_-12 V	CONN [16]
12	DS1#	BR0#	SYSRST#	GND	USB_OC3#	GND	GND	CONN [18]
13	DS0#	BR1#	LWORD#	CONN [20]	GND	VCC_5.0	SATA1_RXN	CONN [19]
14	WRITE#	BR2#	AM5	GND	USB_P2N	D16	SATA1_RXP	CONN [21]
15	GND	BR3#	A23	CONN [23]	USB_P2P	D17	GND	CONN [22]
16	DTACK#	AM0	A22	GND	USB_OC2#	D18	SATA1_TXN	CONN [24]
17	GND	AM1	A21	CONN [26]	GND	D19	SATA1_TXP	CONN [25]
18	AS#	AM2	A20	GND	VCC_5.0	D20	GND	CONN [27]
19	GND	AM3	A19	CONN [29]	VCC_12.0	D21	GND	CONN [28]
20	IACK#	GND	A18	GND	GND	D22	SATA2_RXN	CONN [30]
21	IACKIN#	N/C	A17	CONN [32]	DVI_TXCN	D23	SATA2_RXP	CONN [31]
22	IACKOUT#	N/C	A16	GND	DVI_TXCP#	GND	GND	CONN [33]
23	AM4	GND	A15	CONN [35]	GND	D24	SATA2_TXN	CONN [34]
24	A07	IRQ7	A14	GND	DVI_TX0N	D25	SATA2_TXP	CONN [36]
25	A06	IRQ6	A13	CONN [38]	DVI_TX0P	D26	GND	CONN [37]
26	A05	IRQ5	A12	GND	GND	D27	GND	CONN [39]
27	A04	IRQ4	A11	CONN [41]	DVI_TX1N	D28	GND	CONN [40]
28	A03	IRQ3	A10	GND	DVI_TX1P	D29	GND	CONN [42]
29	A02	IRQ2	A09	CONN [44]	GND	D30	DVI_ DDCCLK	CONN [43]
30	A01	IRQ1	A08	GND	DVI_TX2N	D31	DVI_ DDCDATA	CONN [45]
31	VCC_-12 V	N/C	VCC_12.0	CONN [46]	DVI_TX2P	GND	DVI_HOT_ PLUG	GND
32	VCC_5.0	VCC_5.0	VCC_5.0	GND	GND	VCC_5.0	Reserved VME_Standby_ 3.3	VCC_5.0

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A.3 Optional Vita 41.3 Connector (P0)

Figure A-3 Optional Vita 41.3 Connector (P0)

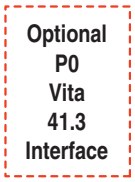


Table A-2 Optional Vita 1.3 Connector (P0)


Optional Vita 41.3 Connector (P0)							
Pin #	Row A	Row B	Row C	Row D	Row E	Row F	Row G
1	SERDES_RX_A[1]	SERDES_RX_A[2]	GND	SERDES_TX_A[1]	SERDES_TX_A[2]	GND	N/C
2	GND	N/C	N/C	GND	N/C	N/C	GND
3	N/C	N/C	GND	N/C	N/C	GND	N/C
4	GND	N/C	N/C	GND	N/C	N/C	GND
5	N/C	N/C	GND	N/C	N/C	GND	N/C
6	GND	N/C	N/C	GND	N/C	N/C	GND
7	N/C	N/C	GND	N/C	N/C	GND	N/C
8	GND	N/C	N/C	GND	N/C	N/C	GND
9	N/C	N/C	GND	N/C	N/C	GND	N/C
10	GND	N/C	N/C	GND	N/C	N/C	GND
11	N/C	N/C	GND	N/C	N/C	GND	N/C
12	GND	SERDES_RX_B[1]	SERDES_RX_B[2]	GND	SERDES_TX_B[1]	SERDES_TX_B[2]	GND
13	N/C	N/C	GND	N/C	N/C	GND	N/C
14	GND	N/C	N/C	GND	N/C	N/C	GND
15	N/C	N/C	GND	N/C	N/C	GND	N/C

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A.4 Serial Connector Pinout (J35)

A single serial port interface is provided on the front panel of the board using an RJ45 style shielded connector. See Figure A-1 on page 56 for its position on the board. This connector meets the specifications for RS232 or RS422.

Figure A-4 Serial Connector Pinout (J35)

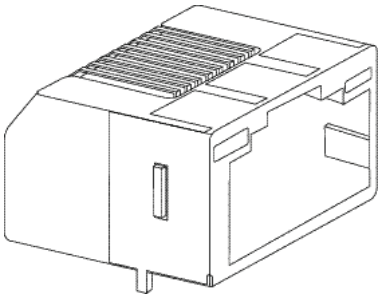


COM 1 Connector RS232 (Default)	
Pin	RS232 Signal
1	DCD
2	RTS
3	GND (jumper)
4	TXD
5	RXD
6	GND (jumper)
7	CTS
8	DTR

COM 1 Connector RS422	
Pin	Signal
1	RXD-
2	RTS+
3	TXD- (jumper)
4	TXD
5	RXD
6	GND (jumper)
7	CTS
8	DTR

A.5 USB Connectors (J29/J30)

The USB 2.0 ports use an industry standard four-position shielded connector. Figure A-5 shows the diagram and pinout of the USB connectors.

Figure A-5 USB Connector Pinout (J29/J30)

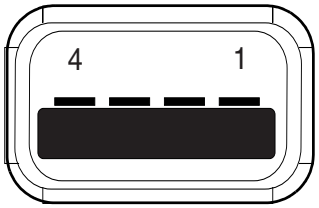


USB Connectors (J29/J30)		
Pin	**Signal**	**Function**
1	USBV	USB Power
2	USB-	USB Data -
3	USB+	USB Data +
4	USBG	USB Ground

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A.6 Video Graphics Adapter (J28)

The SVGA port on the V7865 is controlled by the Intel 945GM/945GME Express GMCH. The GMCH is hardware and BIOS compatible with the industry SVGA and digital video standards supporting both VESA high-resolution and extended video modes. The graphics video modes supported by the GMCH video controller for analog monitors are shown in Table 2-6 on page 39.

Figure A-6 SVGA Connector (J28)

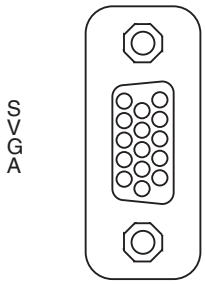


Not all SVGA monitors support resolutions and refresh rates beyond 640 x 480 at 85 Hz. Do not attempt to drive a monitor to a resolution or refresh rate beyond its capability.

A.7 Ethernet Connector Pinout (J32/J33)

The pinout and diagram for the GbE connectors are shown in Figure A-7.

Figure A-7 GbE Connector and Pinout (J32/J33)

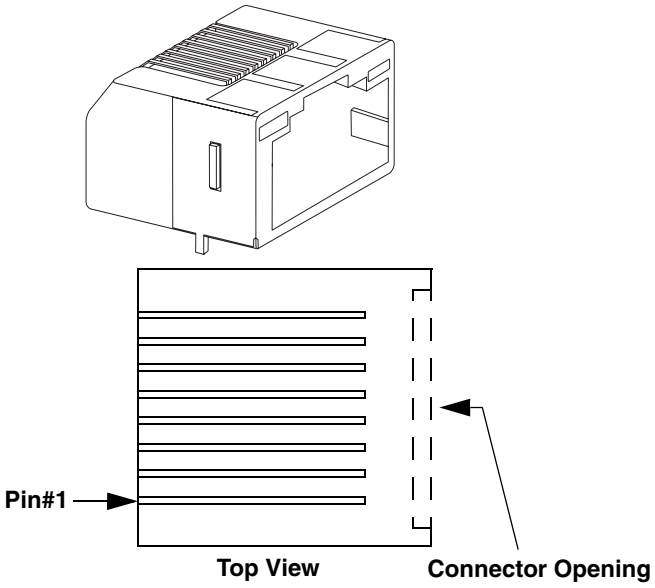

J32/J33 Ethernet Connectors (10/100/1000 Mbit)


PIN	Signal Name	Description
1	BI_DA+	Bi-directional pair A +
2	BI_DA-	Bi-directional pair A -
3	BI_DB+	Bi-directional pair B +
4	BI_DC+	Bi-directional pair C +
5	BI_DC-	Bi-directional pair C -
6	BI_DB-	Bi-directional pair B -
7	BI_DD+	Bi-directional pair D +
8	BI_DD-	Bi-directional pair D -

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A.8 Keyboard and Mouse Connector and Pinout (J36)

The keyboard and mouse connector is a standard 6-pin female mini-DIN PS/2 connector as shown in Figure A-8.

Figure A-8 Keyboard/Mouse Connector and Pinout (J36)

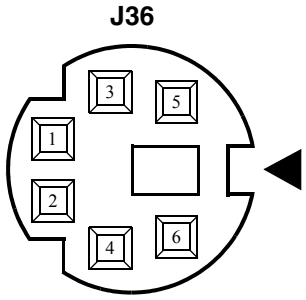

Keyboard/Mouse Connector*		
Pin	Dir	Function
1	In/Out	Mouse Data
2	In/Out	Keyboard Data
3		Ground
4		+5 V
5	Out	Mouse Clock
6	Out	Keyboard Clock
Shield		Chassis Ground

*An adapter cable is included with the V7865 to separate the keyboard and mouse connector.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure A-9 Mouse/Keyboard Y Splitter Cable

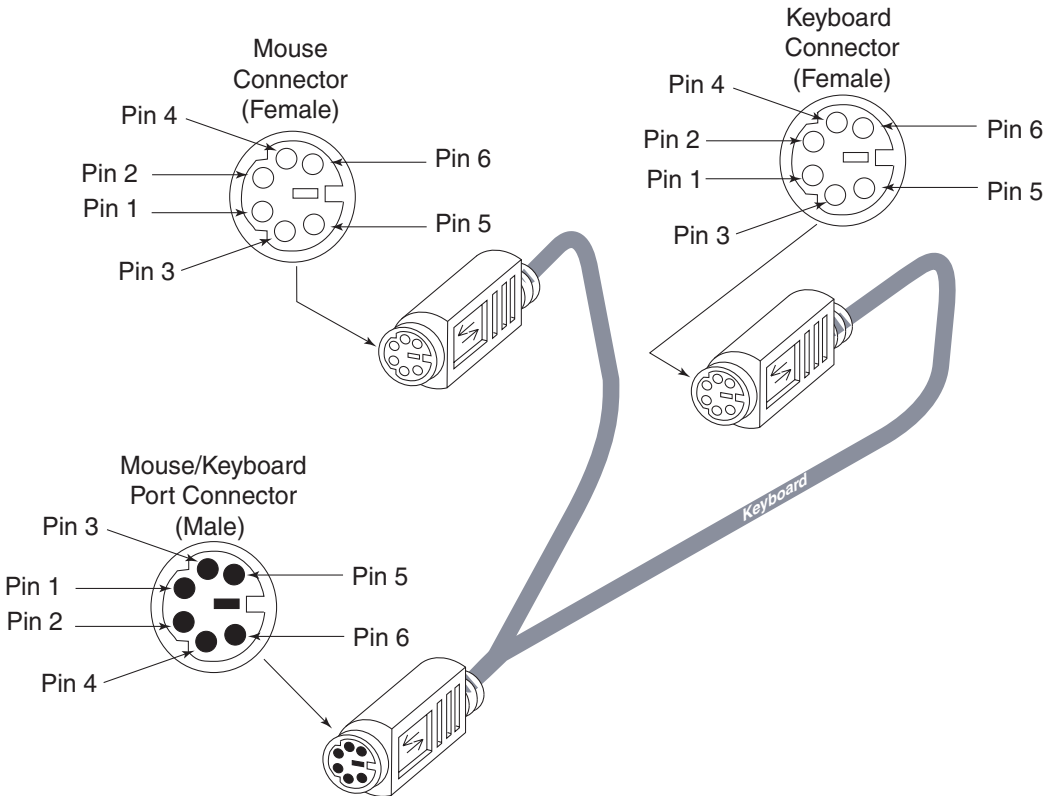


Table A-3 Keyboard/Mouse Y Splitter Cable

Keyboard			Mouse		
Pin	Dir	Function	Pin	Dir	Function
1	In/Out	Keyboard Data	1	In/Out	Mouse Data
2		Unused	2		Unused
3		Ground	3		Ground
4		+5 V	4		+5 V
5	Out	Keyboard Clock	5	Out	Mouse Clock
6		Unused	6		Unused
Shield		Chassis Ground	Shield		Chassis Ground

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A.9 PMC Connectors and Pinouts (J11 through J14)

The PCI Mezzanine Card (PMC) carries the same signals as the PCI standard; however, the PMC standard uses a completely different form factor. Tables A-4 through A-7 are the pinouts for the PMC connectors (J11, J12, J13 and J14).

A.9.1 J11 Connector and Pinout

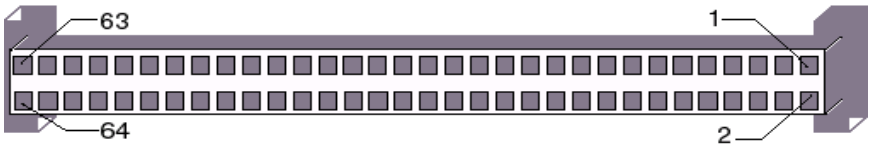


Table A-4 PMC Connector Pinout (J11)

PMC Connector (J11)				PMC Connector (J11)			
Left Side		Right Side		Left Side		Right Side	
Pin	Name	Pin	Name	Pin	Name	Pin	Name
1	GND	2	-12	33	FRAME#	34	GND
3	GND	4	INTA#	35	GND	36	IRDY#
5	INTB#	6	INTC#	37	DEVSEL#	38	+5 V
7	BMODE1	8	+5 V	39	PCIXCAP	40	LOCK#
9	INTD#	10	NC	41	SDONE#	42	+3.3 V
11	GND	12	NC	43	PAR	44	GND
13	CLK	14	GND	45	+3.3 V	46	AD[15]
15	GND	16	GNT#	47	AD[12]	48	AD[11]
17	REQ#	18	+5 V	49	AD[9]	50	+5 V
19	+3.3 V	20	AD[31]	51	GND	52	C/BE[0]#
21	AD[28]	22	AD[27]	53	AD[6]	54	AD[5]
23	AD[25]	24	GND	55	AD[4]	56	GND
25	GND	26	C/BE[3]#	57	+3.3 V	58	AD[3]
27	AD[22]	28	AD[21]	59	AD[2]	60	AD[1]
29	AD[19]	30	+5 V	61	AD[0]	62	+5 V
31	+3.3 V	32	AD[17]	63	GND	64	REQ64#

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A.9.2 J12 Connector and Pinout

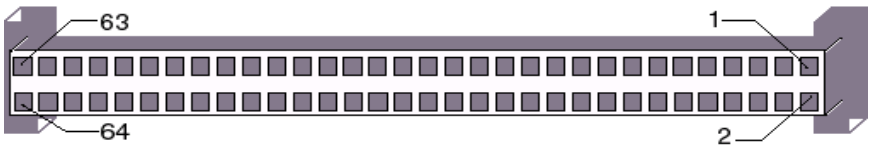


Table A-5 PMC Connector Pinout (J12)

PMC Connector (J12)				PMC Connector (J12)			
Left Side		Right Side		Left Side		Right Side	
Pin	Name	Pin	Name	Pin	Name	Pin	Name
1	+12 V	2	+3.3 V	33	GND	34	NC
3	GND	4	NC	35	TRDY#	36	+3.3 V
5	+3.3 V	6	GND	37	GND	38	STOP#
7	GND	8	NC	39	PERR#	40	GND
9	NC	10	NC	41	+3.3 V	42	SERR#
11	+3.3 V	12	+3.3 V	43	C/BE[1]#	44	GND
13	RST#	14	GND	45	AD[14]	46	AD[13]
15	+3.3 V	16	GND	47	M66EN	48	AD[10]
17	PME#	18	GND	49	AD[8]	50	+3.3 V
19	AD[30]	20	AD[29]	51	AD[7]	52	NC
21	GND	22	AD[26]	53	+3.3 V	54	NC
23	AD[24]	24	+3.3 V	55	NC	56	GND
25	IDSEL	26	AD[23]	57	NC	58	NC
27	+3.3 V	28	AD[20]	59	GND	60	NC
29	AD[18]	30	GND	61	ACK64#	62	+3.3 V
31	AD[16]	32	C/BE[2]#	63	GND	64	NC

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A.9.3 J13 Connector and Pinout

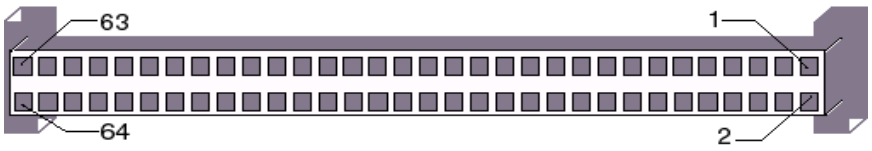


Table A-6 PMC Connector Pinout (J13)

PMC Connector (J13)				PMC Connector (J13)			
Left Side		Right Side		Left Side		Right Side	
Pin	Name	Pin	Name	Pin	Name	Pin	Name
1	NC	2	GND	33	GND	34	AD[48]
3	GND	4	CBE[7]#	35	AD[47]	36	AD[46]
5	CBE[6]#	6	CBE[5]	37	AD[45]	38	GND
7	CBE[4]#	8	GND	39	+3.3 V	40	AD[44]
9	+3.3 V	10	PAR64	41	AD[43]	42	AD[42]
11	AD[63]	12	AD[62]	43	AD[41]	44	GND
13	AD[61]	14	GND	45	GND	46	AD[40]
15	GND	16	AD[60]	47	AD[39]	48	AD[38]
17	AD[59]	18	AD[58]	49	AD[37]	50	GND
19	AD[57]	20	GND	51	GND	52	AD[36]
21	+3.3 V	22	AD[56]	53	AD[35]	54	AD[34]
23	AD[55]	24	AD[54]	55	AD[33]	56	GND
25	AD[53]	26	GND	57	+3.3 V	58	AD[32]
27	GND	28	AD[52]	59	NC	60	NC
29	AD[51]	30	AD[50]	61	NC	62	GND
31	AD[49]	32	GND	63	GND	64	NC

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A.9.4 J14 Connector and Pinout

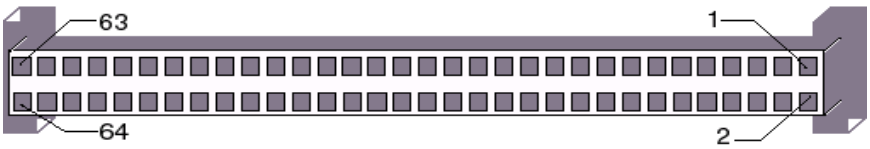


Table A-7 PMC Connector Pinout (J14)

PMC Connector (J14)						PMC Connector (J14)					
Left Side			Right Side			Left Side			Right Side		
Pin	Name	Connected To	Pin	Name	Connected To	Pin	Name	Connected To	Pin	Name	Connected To
1	CONN[1]	P2 pin D1	2	CONN[2]	P2 pin Z1	33	CONN[33]	P2 pin D22	34	CONN[34]	P2 pin D23
3	CONN[3]	P2 pin D2	4	CONN[4]	P2 pin D3	35	CONN[35]	P2 pin Z23	36	CONN[36]	P2 pin D24
5	CONN[5]	P2 pin Z3	6	CONN[6]	P2 pin D4	37	CONN[37]	P2 pin D25	38	CONN[38]	P2 pin Z25
7	CONN[7]	P2 pin D5	8	CONN[8]	P2 pin Z5	39	CONN[39]	P2 pin D26	40	CONN[40]	P2 pin D27
9	CONN[9]	P2 pin D6	10	CONN[10]	P2 pin D7	41	CONN[41]	P2 pin Z27	42	CONN[42]	P2 pin D28
11	CONN[11]	P2 pin Z7	12	CONN[12]	P2 pin D8	43	CONN[43]	P2 pin D29	44	CONN[44]	P2 pin Z29
13	CONN[13]	P2 pin D9	14	CONN[14]	P2 pin Z9	45	CONN[45]	P2 pin D30	46	CONN[46]	P2 pin Z31
15	CONN[15]	P2 pin D10	16	CONN[16]	P2 pin D11	47	CONN[47]	NC	48	CONN[48]	NC
17	CONN[17]	P2 pin Z11	18	CONN[18]	P2 pin D12	49	CONN[49]	NC	50	CONN[50]	NC3
19	CONN[19]	P2 pin D13	20	CONN[20]	P2 pin Z13	51	CONN[51]	NC	52	CONN[52]	NC
21	CONN[21]	P2 pin D14	22	CONN[22]	P2 pin D15	53	CONN[53]	NC	54	CONN[54]	NC
23	CONN[23]	P2 pin Z15	24	CONN[24]	P2 pin D16	55	CONN[55]	NC	56	CONN[56]	NC
25	CONN[25]	P2 pin D17	26	CONN[26]	P2 pin Z17	57	CONN[57]	NC	58	CONN[58]	NC
27	CONN[27]	P2 pin D18	28	CONN[28]	P2 pin D19	59	CONN[59]	NC	60	CONN[60]	NC
29	CONN[29]	P2 pin Z19	30	CONN[30]	P2 pin D20	61	CONN[61]	NC	62	CONN[62]	NC
31	CONN[31]	P2 pin D21	32	CONN[32]	P2 pin Z21	63	CONN[63]	NC	64	CONN[64]	NC

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

B • Appendix B: AMI BIOS Setup Utility

This appendix gives a brief description of the setup options in the system BIOS. Due to the custom nature of GE Intelligent Platforms' Single Board Computers, your BIOS options may vary from the options discussed in this appendix.

AMI refers to their BIOS setup screens as ezPORT.

To Access the First Boot setup screen press the F11 key at the beginning of boot.

To access the ezPORT setup screens, press the DEL key at the beginning of boot. These setup screens have two main areas. The left frame displays all the options that can be configured. "Grayed-out" options cannot be configured. Options in blue can be configured. The right frame displays the key legend. Above the key legend is an area reserved for a text message. When an option is selected in the left frame, it is highlighted in white and a text message in the right frame gives a brief description of the option.

B.1 Popup Boot Menu

If the user wishes to boot from a device not currently selected as the first device in the boot list in setup, there is a shortcut to avoid entering setup to change the list. The user can press F11 from power-up until the boot menu appears. This menu lists all currently enabled boot devices (such as hard drives, enabled network controller option ROMs, USB flash drives or other USB bootable devices). The user selects the desired boot device and the system attempts to boot from that device. If the Onboard Devices (see *Chipset Setup on page 74*) are not enabled, they do not appear in the boot menu.




NOTE

This is a one-time request; the setup-defined boot order is not changed for subsequent boots. Note also that if some devices are not bootable (such as a USB drive, or a USB floppy with a non-bootable disk), the system will not attempt to use another boot device.

This feature is useful when installing from a bootable disk. For example, when installing Windows XP from a CD, enter the Popup Boot menu and use the arrow keys to highlight ATAPI CD-ROM Drive. Press ENTER to continue with system boot.

If you have trouble accessing this feature, disable the QuickBoot Mode in the Boot BIOS setup screen. Exit, saving changes and retry accessing the Popup Boot menu.

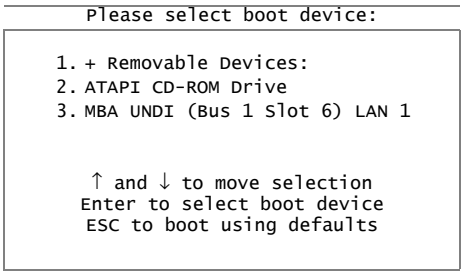


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

B.2 Main Menu

The Main menu reports the BIOS revision, processor type and clock speed, and allows the user to set the system's clock and calendar. Use the left and right arrow keys to select other screens.

Below is a sample of the Main screen. The information displayed on your screen will reflect your actual system.

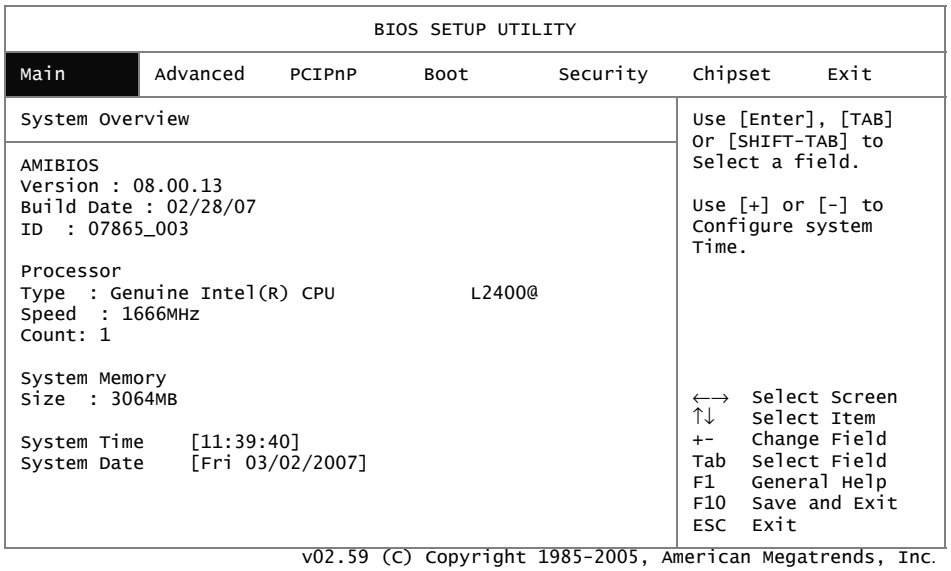

NOTE

Options shown may not be available on your system.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

B.3 Advanced BIOS Setup


The Advanced BIOS Setup menu allows the user to configure some CPU settings, the IDE bus, SCSI devices, other external devices and internal drives.

Select the Advanced tab from the ezPORT setup screen to enter the Advanced BIOS Setup screen. You can select the items in the left frame of the screen, such as SuperIO Configuration, to go to the sub menu for that item. You can display an Advanced BIOS Setup option by highlighting it using the <Arrow> keys. A sample of the Advanced BIOS Setup screen is shown below; options in your system may be different from those shown.



NOTE

Changes in this screen can cause the system to malfunction. If problems are noted after changes have been made, reboot the system and access the BIOS. From the Exit menu select '`Load Failsafe Defaults`' and reboot the system. If the system failure prevents access to the BIOS screens, refer to Chapter One for instructions on clearing the CMOS.

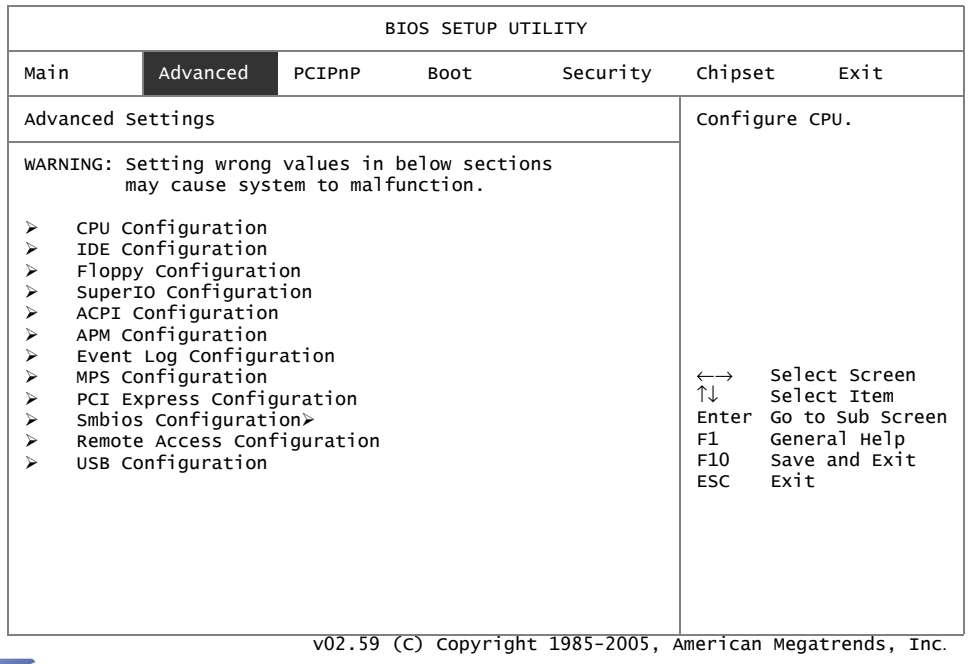



NOTE

Options shown may not be available on your system.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

B.4 PCI/PnP Setup

Included in this screen is the control of internal peripheral cards, as well as various interrupts and DMA channels. From this menu, the user can also determine if the system's plug-and-play is enabled or disabled.

NOTE

Changes in this screen can cause the system to malfunction. If problems are noted after changes have been made, reboot the system and access the BIOS. From the Exit menu select '`Load Failsafe Defaults`' and reboot the system. If the system failure prevents access to the BIOS screens, refer to Chapter One for instructions on clearing the CMOS.

Below is a sample screen of the PCI/PnP menu.

```
                              BIOS SETUP UTILITY
Main      Advanced    PCIPnP    Boot      Security    Chipset    Exit
Advanced PCI/PnP Settings                          NO: lets the BIOS
                                                   configure all the
WARNING: Setting wrong values in below sections    devices in the system.
         may cause system to malfunction.          YES: lets the
                                                   operating system
Clear NVRAM                              [No]      configure Plug and
Plug & Play O/S                          [No]      Play (PnP) devices not
PCI Latency Timer                        [64]      required for boot if
Allocate IRQ to PCI VGA                  [Yes]     your system has a Plug
Palette Snooping                         [Disabled] and Play operating
PCI IDE BusMaster                        [Enabled] system.
OffBoard PCI/ISA IDE Card                [Auto]


IRQ3                                     [Available]
IRQ4                                     [Available]  ←→  Select Screen
IRQ5                                     [Available]  ↑↓  Select Item
IRQ7                                     [Available]  +-  Change Option
IRQ9                                     [Available]  F1  General Help
IRQ10                                    [Available]  F10 Save and Exit
IRQ11                                    [Available]  ESC Exit
IRQ14                                    [Available]
IRQ15                                    [Available]

DAM Channel 0                            [Available]
DMA Channel 1                            [Available]
DMA Channel 3                            [Available]
DMA Channel 5                            [Available]
DAM Channel 6                            [Available]
DAM Channel 7                            [Available]
Reserved Memory Size                     [Disabled]

                    v02.59 (C) Copyright 1985-2005, American Megatrends, Inc.
```


NOTE

Options shown may not be available on your system.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

B.5 Boot Setup

Use the Boot Setup menu to set the priority of the boot devices, including booting from a remote network. The devices shown in this menu are the bootable devices detected during POST. If a drive is installed that does not appear, verify the hardware installation. Also available in this screen are 'Boot Settings' which allow the user to set how the basic system will act, for example, support for PS/2 mouse and whether to use 'Quick Boot' or not.

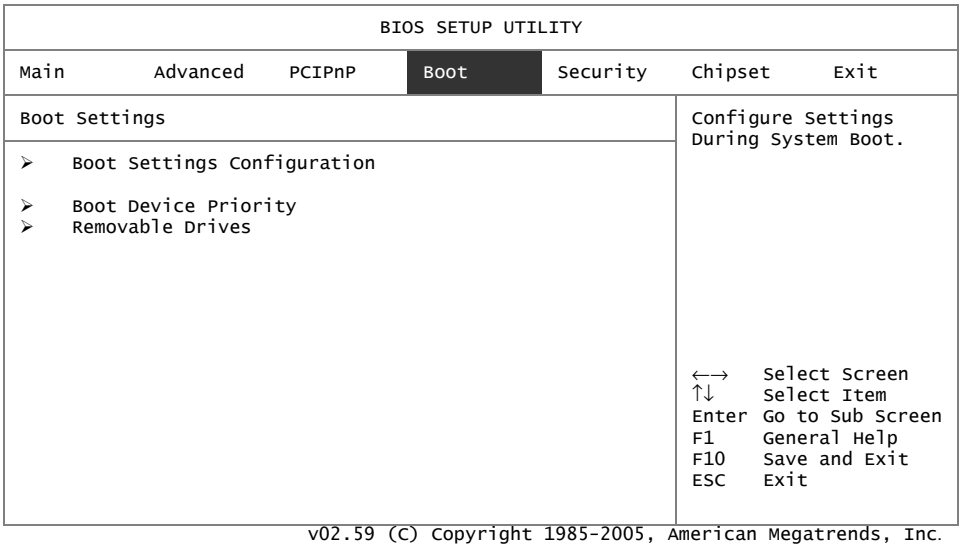

NOTE


Options shown may not be available on your system.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

B.6 Security Setup

The ezPORT setup provides both a Supervisor and a User password. If you use both passwords, the Supervisor password must be set first.

The system can be configured so that all users must enter a password every time the system boots or when ezPORT setup is executed, using either the Supervisor password or the User password.

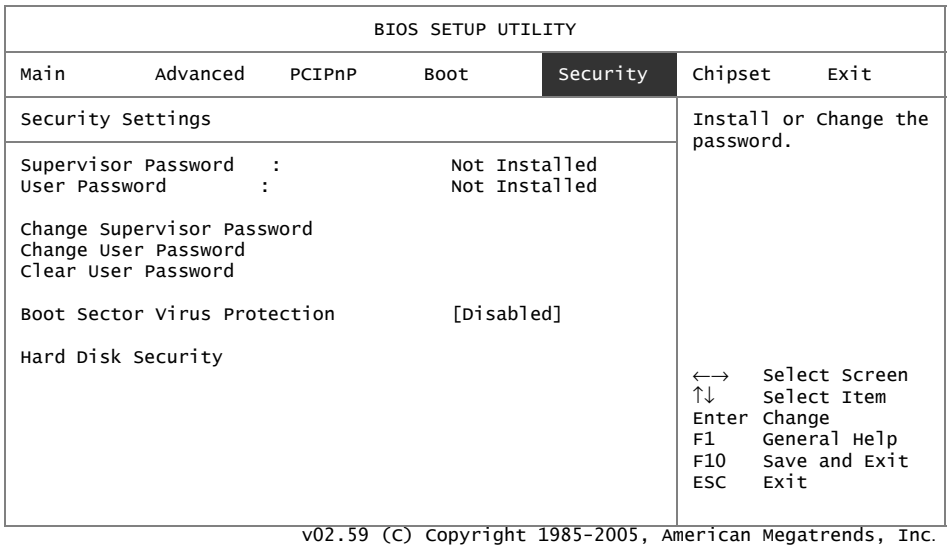

NOTE

Options shown may not be available on your system.

To reset the security in the case of a forgotten password you must drain the NVRAM and reconfigure.

To clear the CMOS password:

- Turn off power to the unit.
- Momentarily short pins of E11 for approximately five seconds.
- Power up the unit.

When power is reapplied to the unit, the CMOS password will be cleared.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

B.7 Chipset Setup

Select the various options for chipsets located in the system (for example, the CPU configuration and configurations for the North and South Bridge). The settings for the chipsets are processor dependent and care must be used when changing settings from the defaults set at the factory. Below is a sample of the Chipset Setup screen. The actual options on your system may vary.

NOTE

Changes in this screen can cause the system to malfunction. If problems are noted after changes have been made, reboot the system and access the BIOS. From the Exit menu select '`Load Failsafe Defaults`' and reboot the system. If the system failure prevents access to the BIOS screens, refer to Chapter One for instructions on clearing the CMOS.

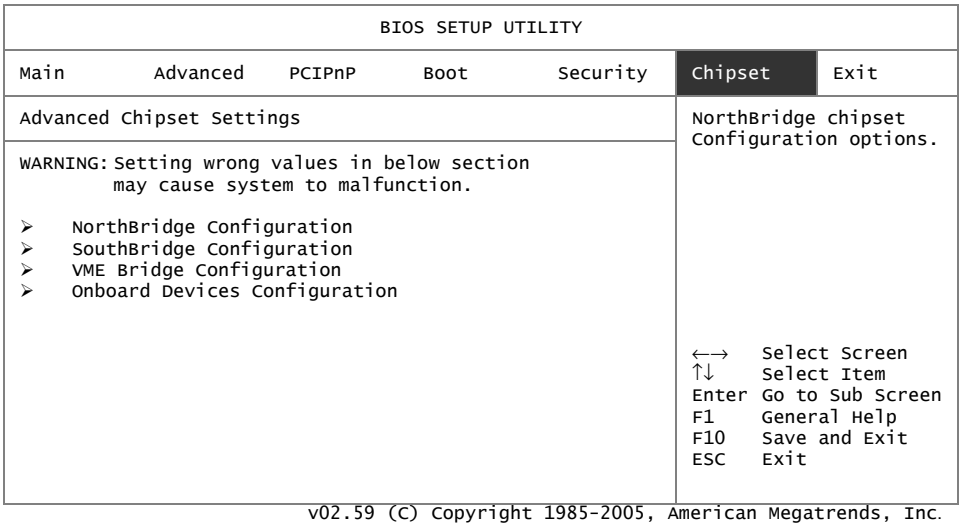


NOTE

Options shown may not be available on your system.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

B.8 Exit Menu

Select the Exit tab from the ezPORT setup screen to enter the Exit BIOS Setup screen. You can display an Exit BIOS Setup option by highlighting it using the <Arrow> keys. The Exit BIOS Setup screen is shown below.

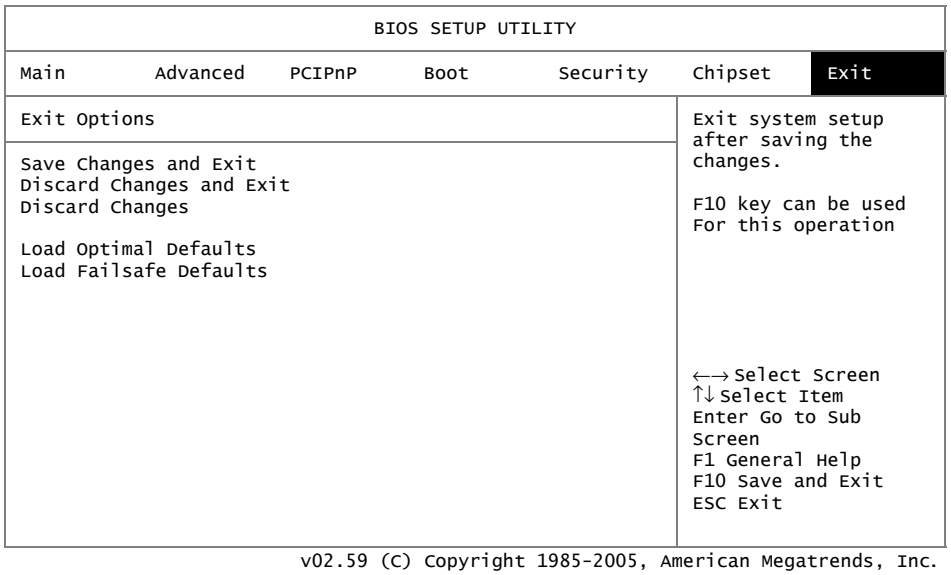

NOTE

Options shown may not be available on your system.

If changes have previously been made in the BIOS and the system malfunctions, reboot the system and access this screen. Select 'Load Failsafe Defaults' and continue the reboot.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

C • Appendix C: Remote Booting

The V7865 currently includes a Boot-from-LAN BIOS option which allows the SBC to be booted from a network.

The older versions of the V7865 include a *Managed PC Boot Agent* (MBA) option which allows the V7865 to be booted from a network.

This appendix describes the procedures to enable these options and to select a LAN connection as the boot device.


C.1 Boot-from-LAN BIOS Option

There are two methods of enabling Remote Booting. The first method is the *First Boot* menu. The second is the *Boot* menu from the BIOS Setup Utility.

C.1.1 First Boot Menu

Press `F11` at the very beginning of the boot cycle, which will access the First Boot menu. Selecting *Network: IBA LAN* to boot from the LAN in this screen applies to the current boot only. At the next reboot the V7865 will revert back to the setting in the Boot menu.

Table C-1 First Boot Menu

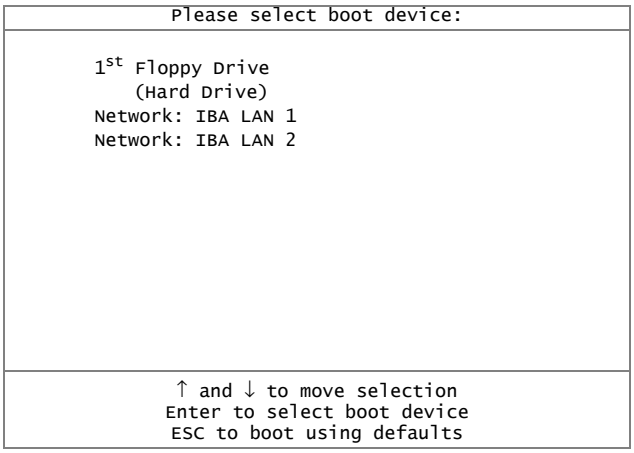

Using the arrow keys, highlight *Network: IBA LAN*, and press the ENTER key to continue with the system boot.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

C.1.2 Boot Menu

The second method of selecting the Boot-from-LAN BIOS option is to press the DEL key during system boot. This will access the *BIOS Setup Utility*. Select the *Boot* menu and then select the *Boot Device Priority* sub-menu. Use the arrow keys to highlight the *Network:IBA LAN 1* option. Repeat entering <+> until the desired Network port is at the top of the list.

Press F10 to Save and Exit, and the computer will then restart the system bootup. The system will boot from this connection until it is changed in the *BIOS Setup Utility*.

Table C-2 Boot-from-LAN BIOS Boot Menu

BIOS SETUP UTILITY		
Boot		
Boot Device Priority		Specifies the boot sequence from the available devices.
1st Boot Device 2nd Boot Device 3rd Boot Device	[Network:IBA LAN 1] [Hard Drive] [Network:IBA LAN 2]	←→ Select Screen ↑↓ Select Item +- Go to Sub Screen F1 General Help F10 Save and Exit ESC Exit

C.1.3 BIOS Features Setup

After the Intel Boot Agent has been enabled, the following information will appear at the top of the screen.

```
Initializing Intel (R) Boot Agent GE v1.2.40
PXE 2.1 Build 085 (WfM2.0)
Press Ctrl+S to enter Setup Menu...
```

Once you press CTRL-S, the Boot Agent setup menu will appear. PXE is the boot option available on the V7865. You can change the settings for the Setup Prompt and Setup Menu Wait Time. You can either enable or disable the prompt, and you can set the amount of wait time for the setup menu.

```
Network Boot Protocol    PXE (Preboot eXecution Environment)
Boot Order               Use BIOS Setup Boot Order
Show Setup Prompt        Enabled
Setup Menu Wait Timer    2 Seconds
```

Once the configuration is set, the SBC will begin to establish the new link.

```
Initializing Intel (R) Boot Agent GE v1.2.40
Copyright (C) 1997-2006, Intel Corporation
Initializing and establishing link...
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


C.2 Managed PC Boot Agent Option

There are two methods of enabling the Managed PC Boot Agent option. The first method is the *First Boot* menu. The second is the *Boot* menu from the BIOS Setup Utility.

C.2.1 First Boot Menu

Press F11 at the very beginning of the boot cycle, which will access the *First Boot* menu. Selecting *Managed PC Boot Agent (MBA)* to boot from the LAN in this screen applies to the current boot only. At the next reboot the V7865 will revert back to the setting in the Boot menu.

Table C-1 Intel Boot Agent First Boot Menu

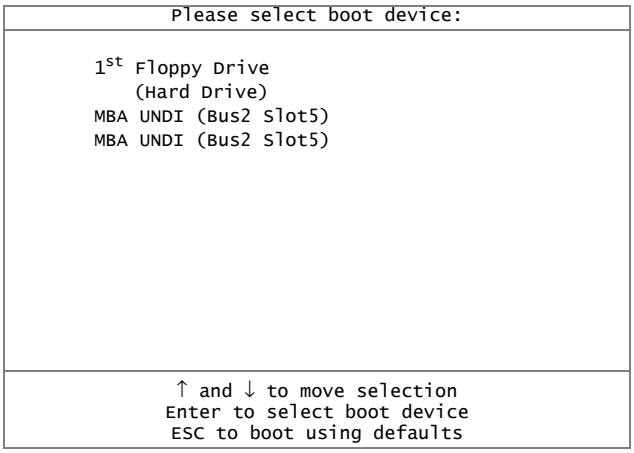

Using the arrow keys, highlight *Managed PC Boot Agent (MBA)*, and press the ENTER key to continue with the system boot.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

C.2.2 Boot Menu

The second method of enabling the Managed PC Boot Agent option is to press the DEL key during system boot. This will access the *BIOS Setup Utility*. Advance to the *Boot* menu, and to the *Boot Device Priority* sub-menu. Use the arrow keys to highlight the *Managed PC Boot Agent (MBA)* option. Repeat entering <+> until the desired MBA is at the top of the list.

Advance to the *Exit* menu, select *Exit Saving Changes* and press ENTER. When the system prompts for confirmation, press *Yes*. The computer will then restart the system bootup.

Table C-2 Managed PC Boot Agent Boot Menu

BIOS SETUP UTILITY		
	Boot	
Boot Device Priority		Specifies the boot sequence from the available devices.
1st Boot Device 2nd Boot Device 3rd Boot Device	[MBA UNDI (Bus2 Slot5)] [1st Floppy Drive] [Hard Drive]	←→ Select Screen ↑↓ Select Item +- Go to Sub Screen F1 General Help F10 Save and Exit ESC Exit

NOTE

Options shown may not be available on your system.

C.2.3 BIOS Features Setup

After the Managed PC Boot Agent has been enabled, there are several boot options available to the user. These options are RPL (default), TCP/IP, Netware and PXE. The proceeding screen shots show the defaults for each boot method.

RPL Menu

Table C-3 RPL Default Settings

```
Argon Managed PC Boot Agent (MBA) v4.00 (BIOS Integrated)
(c) Copyright 2002 Argon Technology Corporation
All rights reserved
```

```
                                Configuration

      Boot Method:              RPL

      Config Message:           Enabled
      Message Timeout:          3 Seconds
      Boot failure Prompt:      Wait for timeout
      Boot Failure:             Next boot device
```

```
Use cursor keys to edit: Up/Down change field, Left/Right change value
ESC to quit, F9 restore previous settings, F10 to save
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TCP/IP Menu

Table C-4 TCP/IP Default Settings

```
  Argon Managed PC Boot Agent (MBA) v4.00 (BIOS Integrated)
  (c) Copyright 2002 Argon Technology Corporation
  All rights reserved
```

```
                                Configuration

      Boot Method:              TCP/IP

      Protocol                  DHCP
      Config Message:           Enabled
      Message Timeout:          3 Seconds
      Boot failure Prompt:      Wait for timeout
      Boot Failure:             Next boot device
```

```
Use cursor keys to edit: Up/Down change field, Left/Right change value
ESC to quit, F9 restore previous settings, F10 to save
```

Netware Menu

Table C-5 Netware Default Settings

```
  Argon Managed PC Boot Agent (MBA) v4.00 (BIOS Integrated)
  (c) Copyright 2002 Argon Technology Corporation
  All rights reserved
```

```
                                Configuration

      Boot Method:              Netware

      Protocol                  802.3
      Config Message:           Enabled
      Message Timeout:          3 Seconds
      Boot failure Prompt:      Wait for timeout
      Boot Failure:             Next boot device
```

```
Use cursor keys to edit: Up/Down change field, Left/Right change value
ESC to quit, F9 restore previous settings, F10 to save
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PXE Menu

Table C-6 PXE Default Settings

```
Argon Managed PC Boot Agent (MBA) v4.00 (BIOS Integrated)
(c) Copyright 2002 Argon Technology Corporation
All rights reserved
```

```
                                Configuration

      Boot Method:              PXE

      Config Message:           Enabled
      Message Timeout:          3 Seconds
      Boot Failure Prompt:      Wait for timeout
      Boot Failure:             Next boot device
```

```
Use cursor keys to edit: Up/Down change field, Left/Right change value
ESC to quit, F9 restore previous settings, F10 to save
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

© 2012 GE Intelligent Platforms Embedded Systems, Inc. All rights reserved.

* indicates a trademark of GE Intelligent Platforms, Inc. and/or its affiliates. All other trademarks are the property of their respective owners.

Confidential Information - This document contains Confidential/Proprietary Information of GE Intelligent Platforms, Inc. and/or its suppliers or vendors. Distribution or reproduction prohibited without permission.

THIS DOCUMENT AND ITS CONTENTS ARE PROVIDED "AS IS", WITH NO REPRESENTATIONS OR WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF DESIGN, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE. ALL OTHER LIABILITY ARISING FROM RELIANCE UPON ANY INFORMATION CONTAINED HEREIN IS EXPRESSLY DISCLAIMED.

GE Intelligent Platforms Information Centers

Americas:
1 800 322 3616 or 1 256 880 0444

Asia Pacific:
86 10 6561 1561

Europe, Middle East and Africa:
Germany +49 821 5034-0
UK +44 1327 359444

Additional Resources

For more information, please visit the GE Intelligent Platforms Embedded Systems web site at:

www.ge-ip.com



500-9300007865-000 Rev. G

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP