ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Hach / GLI T53A4A1N* at our website: ***Click HERE***

OPERATING MANUAL

Accu4™
Low-range
Turbidimeter System

(Model T53 Analyzer and 8320 Sensor)

Worldwide Headquarters and Sales:

GLI International, Inc.
9020 West Dean Road
Milwaukee, Wisconsin 53224
U.S.A.

Phone: [414] 355-3601
Fax: [414] 355-8346
E-mail: info@gliint.com
Web: www.gliint.com

A2852 UL REGISTERED FIRM ISO 9001
GLI INTERNATIONAL, INC.

In the interest of improving and updating its equipment, GLI reserves the right to alter specifications to equipment at any time.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



This operating manual and other GLI operating manuals are available on GLI's web site at gliint.com when viewed using Adobe's free Acrobat reader. To get this reader, link to Adobe through GLI's web site or visit Adobe's web site at adobe.com.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

IMPORTANT SAFETY INFORMATION

This measurement system is compliant with safety standards as outlined in:

FMRC Class Numbers 3600, 3611, and 3810 (U.S.A.)
CSA C22.2 No. 142 and C22.2 No. 213 (Canada)
EN 61010-1 (European Community)

Please read and observe the following:

- Opening the analyzer door exposes you to line power voltage, if present, at terminals on TB2 and TB3 inside the enclosure. This may be hazardous. Always remove line power before entering this area in the analyzer. However, the analyzer door assembly and the sensor contain only low voltages and are completely safe to handle.
- Install this measurement system in accordance with relevant local codes and instructions contained in this operating manual. Also, note and comply with the system's technical specifications. If one line of the line power mains is not neutral, use a double-pole mains switch to disconnect the analyzer.
- Whenever it appears that analyzer safety is questionable, disable line power from the analyzer to ensure against any unintended operation. For example, an unsafe condition is likely when:
  1) The analyzer appears visibly damaged.
  2) The analyzer fails to operate properly or provide the intended measurements.
  3) The analyzer has been stored for long periods at temperatures above 158°F (70°C).
- Only qualified personnel should perform wiring or repairs, and only when the analyzer is not powered.

HELPFUL IDENTIFIERS

In addition to information on installation and operation, this instruction manual may contain WARNINGS pertaining to user safety, CAUTIONS regarding possible instrument malfunction, and NOTES on important, useful operating guidelines.

WARNING:

A WARNING LOOKS LIKE THIS. IT WARNS YOU OF THE POTENTIAL FOR PERSONAL INJURY.

CAUTION:

A CAUTION LOOKS LIKE THIS. IT ALERTS YOU TO POSSIBLE INSTRUMENT MALFUNCTION OR DAMAGE.

☞ ***NOTE:*** *A note looks like this. It alerts you to important operating information.*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Definition of Equipment Symbols



This symbol **means CAUTION** and alerts you to possible danger or instrument malfunction. Refer to this manual before proceeding.



This symbol **means that this is a protective ground terminal** and alerts you to connect an earth ground to it.



This symbol **means that there is alternating current present** and alerts you to be careful.

WARRANTY

GLI International, Inc. warrants the Accu4™ Low-range Turbidimeter System to be free from defects in material or workmanship for a period of 2 years (24 months) from the date this product was shipped from our facility. A warranty claim will not be honored if defects are not reported within the warranty period, or if GLI International determines that defects or damages are due to normal wear, misapplication, lack of maintenance, abuse, improper installation, alteration, or abnormal conditions. GLI International's obligation under this warranty shall be limited to, at its option, replacement or repair of this product. The product must be returned to GLI International, freight prepaid, for examination. The product must be thoroughly cleaned and any process chemicals removed before it will be accepted for replacement or repair. GLI International's liability shall not exceed the cost of the product. Under no circumstances will GLI International be liable for any incidental or consequential damages, whether to person or property. GLI International will not be liable for any other loss, damage or expense of any kind, including loss of profits, resulting from the installation, use, or inability to use this product.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

CONDENSED OPERATING INSTRUCTIONS

This manual contains details for all operating aspects of the Accu4™ Low-range Turbidimeter System. The following condensed instructions are provided to assist you in getting the system started up and operating as quickly as possible. **These condensed instructions only pertain to basic turbidity measurement operation.** To use specific analyzer features, refer to the appropriate sections in this manual for instructions.

1. CONNECTING SENSOR

After properly installing the GLI T53 analyzer and 8320 low-range turbidity sensor (PART TWO, Section 2), connect the sensor to the analyzer matching wire colors to terminals as indicated:

Sensor Wire Colors	Analyzers with "B" Prefix Serial No.	Analyzers with No Letter Prefix Serial No.
Inner Shield	Grounding strip lug	Terminal #11 on TB1
Red	Terminal #12 on TB1	Terminal #12 on TB1
Violet	Terminal #13 on TB1	Terminal #13 on TB1
Green	Terminal #14 on TB1	Terminal #14 on TB1
White	Terminal #15 on TB1	Terminal #15 on TB1
Yellow	Terminal #16 on TB1	Terminal #16 on TB1
Inner Shield	Grounding strip lug	Terminal #17 on TB1
Brown	Terminal #18 on TB1	Terminal #18 on TB1
Gray	Terminal #19 on TB1	Terminal #19 on TB1
Blue	Terminal #20 on TB1	Terminal #20 on TB1
Black	Terminal #21 on TB1	Terminal #21 on TB1
Orange	Terminal #22 on TB1	Terminal #22 on TB1

2. CONNECTING LINE POWER

Important: Follow the instructions in PART TWO, Section 3.5 to connect line power to the analyzer.

3. ADJUSTING DISPLAY CONTRAST

Ambient lighting conditions may make it necessary to adjust display contrast to improve visibility. With the MEASURE screen displayed, press and hold the **ENTER key** and simultaneously press the ⇧ **or** ⇩ **key** until attaining the desired contrast.

4. CALIBRATING SYSTEM

Always initially calibrate the Accu4™ Low-range Turbidimeter System to ensure accurate measurement. Any time thereafter, you can conveniently check system calibration using an optional accessory Cal-Cube™ assembly.

- **When you need to calibrate with a primary standard**, use the "PRIMARY CAL" calibration method. GLI only guarantees measurement accuracy when a 40 NTU formazin suspension is used as the primary standard.
- **When calibration need not conform to USEPA requirements**, use the "CUBE CAL" calibration method (requires optional GLI CAL-CUBE™ assembly) or the "SAMPLE CAL" method.

See PART THREE, Section 5 for instructions on all calibration methods.

5. COMPLETING ANALYZER CONFIGURATION

To further configure the analyzer to your application requirements, use the appropriate CONFIGURE screens to make selections and "key in" values. Refer to PART THREE, Section 4 for complete configuration details.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TABLE OF CONTENTS

PART ONE - INTRODUCTION

SECTION 1 **GENERAL INFORMATION**

1.1 Capability Highlights 13-15
1.2 Modular Construction 15
1.3 Retained Configuration Values 15
1.4 Analyzer and Sensor Serial Numbers 15
1.5 EMI/RFI Immunity 16

SECTION 2 **SPECIFICATIONS** 17-18

PART TWO - INSTALLATION

SECTION 1 **UNPACKING** 19

SECTION 2 **MECHANICAL REQUIREMENTS**

2.1 Sensor Location 19-20
2.2 Sensor Mounting 20-21
2.3 Sensor Plumbing Connections 22
2.4 Analyzer Location 23
2.5 Analyzer Mounting 23-25
2.6 Sensor and Analyzer Conduit Hole Requirements 25

SECTION 3 **ELECTRICAL CONNECTIONS**

3.1 GLI Model 8320 Low-range Turbidity Sensor 26-28
3.2 Analog Outputs 29
3.3 Relay Outputs 29-30
3.4 Closed Contact TTL Input 30-31
3.5 Line Power 31-32

PART THREE - OPERATION

SECTION 1 **USER INTERFACE**

1.1 Display 33
1.2 Keypad 33-34
1.3 MEASURE Screen (normal display mode) 35

SECTION 2 **MENU STRUCTURE**

2.1 Displaying Main Branch Selection Screen 36
2.2 Displaying Top-level Menu Screens 36-37
2.3 Displaying Submenu Screens 37
2.4 Adjusting Edit/Selection Screen Values 37
2.5 Entering (Storing) Edit/Selection Screen Values/Choices 37

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TABLE OF CONTENTS (continued)

SECTION 3 **ADJUSTING DISPLAY CONTRAST** 38

SECTION 4 **ANALYZER CONFIGURATION**

4.1 Selecting LANGUAGE to Operate Analyzer 38
4.2 Configuring Sensor Characteristics:
SELECT UNITS 39
SET FILTER Time 39-40
Select PULSE SUPPRESS (on/off) 40
ENTER NOTE (top line of MEASURE screen) 40-41
4.3 Configuring Analog Outputs (1 and 2):
SET 0/4 and 20 mA VALUES (range expand) 41-42
SET TRANSFER Value (mA) 42-43
SET FILTER Time 43
Select SCALE 0 mA/4 mA (low endpoint) 43
4.4 Configuring Relays (A, B, C, and D):
SET FUNCTION Mode (alarm, control or status) 44-45
SET TRANSFER Mode (relay on or off) 46
ACTIVATION (configuration values) 46-47
4.5 SET PASSCODE (feature enabled or disabled) 48
4.6 Configuration Setting Summary (ranges/choices and defaults) 49

SECTION 5 **ANALYZER CALIBRATION**

5.1 Important Information 50-51
5.2 PRIMARY CAL Method (requires formazin suspension):
Preparing Formazin Solution 51-52
Filling Sensor 52-54
Entering Value 54
Resuming Operation 54-55
5.3 CUBE CAL Method (requires optional Cal-Cube™ assembly):
Inserting Cal-Cube™ Assembly 55-56
Entering Value 56-57
Resuming Operation 57
5.4 SAMPLE CAL Method (requires sample with value determined by laboratory analysis or portable meter) 57-59
5.5 Analog Outputs (1 and 2) Calibration 59-60

SECTION 6 **TEST/MAINTENANCE**

6.1 STATUS Check (analyzer, sensor, and relays) 61-63
6.2 CHECK CAL/HOLD Outputs 63-64
6.3 OVERFEED RESET (relay timers) 65
6.4 OUTPUT (1 and 2) Analog Test Signals 65-66
6.5 RELAY (A, B, C, and D) Operating Test 66
6.6 SENSOR TYPE Check 66-67
6.7 EPROM VERSION Check 67

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TABLE OF CONTENTS (continued)

6.8 SIM SENSOR Setting 67-68
6.9 RESET DEFAULTS 68

SECTION 7 RELAY OVERFEED TIMER FEATURE
7.1 Why Use an Overfeed Timer 69
7.2 Configuring Relay Overfeed Timers 69
7.3 Overfeed Timer "Timeout" Operation 69
7.4 Resetting Overfeed Timers 69
7.5 Interactions with Other Analyzer Functions 69-70

SECTION 8 HART OPTION
8.1 Introduction 71
8.2 Analyzer Operating Modes for HART Network 72-73
8.3 SINGLE MODE (Point-to-Point) Wiring Arrangement 73
8.4 MULTI-DROP Wiring Arrangement 74
8.5 HART Preferences Setup:
Changing Polling Address 75
Viewing Number of Required Preambles 75-76
8.6 Device Preferences Setup:
Viewing Final Assembly Number 76
Viewing Model Number 76-77
Viewing Manufacturer 77
Assigning a Tag 77
Assigning a Descriptor 78
Assigning a Message 78
Assigning User-defined Date 78-79
Viewing Identification (ID) 79
Viewing Revisions 79
8.7 "Master Reset" Function 80
8.8 "Refresh" Function 80
8.9 Protocol Command Set for PC Programming 80

PART FOUR - SERVICE AND MAINTENANCE

SECTION 1 GENERAL INFORMATION
1.1 Cleaning Sensor Flow Chamber 81-82
1.2 Cleaning Optional Cal-Cube™ Assembly 82
1.3 Replacing Sensor Light Source or Detector:
Removing Inoperative Part 83
Installing New Part 83-84
Re-calibrating Measurement System 84
1.4 Replacing Fuse(s) 85
1.5 Replacing Relays 85
1.6 Inspecting Sensor Cable 85

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TABLE OF CONTENTS (continued)

SECTION 2 **PRESERVING MEASUREMENT ACCURACY**

2.1 Eliminating Bubbles in Sensor Flow Chamber:
- Restricting Sensor Outlet 86
- Using an External Bubble Trap 86

2.2 Keeping Sensor Flow Chamber Clean 87

2.3 Keeping System Calibrated 87

2.4 Avoiding Electrical Interference 87

SECTION 3 **TROUBLESHOOTING**

3.1 System Diagnostic Condition Messages 88

3.2 Isolating the Problem:
- Checking Electrical Connections 89
- Checking Operation Using System Diagnostics 89

SECTION 4 **ANALYZER REPAIR/RETURN**

4.1 Customer Assistance 90

4.2 Repair/Return Policy 90

PART FIVE - SPARE PARTS AND ACCESSORIES

..... 91

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TABLE OF CONTENTS (continued)

ILLUSTRATIONS

Figure 1-1 EMI/RFI Immunity Diagram 16
Figure 2-1 Recommended Closed-loop Sensor Piping Arrangement 19
Figure 2-2 Recommended Sample Bypass Line Sensor Piping Arrangement 20
Figure 2-3 Standard Design Model 8320 Sensor -- Installation Dimension Details 21
Figure 2-4 High Pressure Design Model 8320 Sensor -- Installation Dimension Details 21
Figure 2-5 Sampling Point Guidelines for Process Pipe Plumbing Connection 22
Figure 2-6 Analyzer Mounting Arrangements 24
Figure 2-7 Analyzer Installation Dimension Details 25
Figure 2-8 Terminal Designations for Analyzers with “B” Prefix Serial Number 27
Figure 2-9 Terminal Designations for Analyzers with No Letter Prefix Serial Number 27
Figure 2-10 Connecting Model 8320 Low-range Turbidity Sensor to Analyzers with “B” Prefix Serial Number 28
Figure 2-11 Connecting Model 8320 Low-range Turbidity Sensor to Analyzers with No Letter Prefix Serial Number 28
Figure 2-12 Connecting Control/Alarm Device(s) to Electromechanical Relay(s) 30
Figure 2-13 Connecting 115 Volt Single Phase to Analyzers with “B” Prefix Serial Number 32
Figure 2-14 Connecting 230 Volt Single Phase to Analyzers with “B” Prefix Serial Number 32
Figure 2-15 Connecting 230 Volt Split Phase to Analyzers with “B” Prefix Serial Number 32
Figure 2-16 Connecting 115 Volt Single Phase to Analyzers with No Letter Prefix Serial Number 32
Figure 2-17 Connecting 230 Volt Single Phase to Analyzers with No Letter Prefix Serial Number 32
Figure 2-18 Connecting 230 Volt Split Phase to Analyzers with No Letter Prefix Serial Number 32
Figure 3-1 Analyzer Keypad 34
Figure 3-2 Location of SINGLE MODE/MULTI-DROP Switch (HART-equipped analyzers only) 73
Figure 3-3 HART SINGLE MODE (Point-to-Point) Wiring Arrangement (for single analyzer) 73
Figure 3-4 HART MULTI-DROP Wiring Arrangement (for multiple analyzer network) 74
Figure 4-1 Standard Design Sensor -- Component Details 81
Figure 4-2 High Pressure Design Sensor -- Component Details 82
Figure 4-3 Turbidity Sensor Terminal Block Designations 84

TABLES

Table A Relay Configuration Settings 46-47
Table B Analyzer Configuration Settings (Ranges/Choices and Defaults) 49
Table C Relay Overfeed Timer Interactions with Other Analyzer Functions 70
Table D System Diagnostic Condition Status Screens/Meanings 88

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PART ONE - INTRODUCTION

SECTION 1
GENERAL INFORMATION

1.1 Capability Highlights

High Accuracy with Minimal Maintenance

The Accu4™ Low-range Turbidimeter System employs a technologically advanced sensor to provide high measurement accuracy and stability, while reducing maintenance requirements. It is designed to meet the International Standards For Measurement of Turbidity [ISO 7027-1984(E)] and USEPA-approved GLI Method 2. This system features an auto-ranging measuring scale, enabling continuous monitoring over a 0.000-100.0 NTU range with automatic decimal point positioning. **The Accu4™ Low-range Turbidimeter System automatically provides increasing display resolution as measured turbidity decreases.** To further ensure high measuring accuracy, the Model 8320 sensor eliminates air or gas bubbles in the sample with its built-in bubble trap. The system is ideal for critical monitoring and controlling applications including potable water, filtered water, and final product clarity.

MEASURE Screen

With the display in the normal MEASURE screen mode, the measured turbidity is always shown on the main middle line. The bottom auxiliary display line, shown in reverse video, can be changed by pressing the ⇩ **and** ⇧ **keys** to show:

- Measured analog Output 1 value (mA)
- Measured analog Output 2 value (mA)

Passcode-protected Access

For security, you can enable a passcode feature to restrict access to configuration and calibration settings to authorized personnel only. See PART THREE, Section 4.5 for details.

Calibration Methods

Three methods are available to calibrate the system. See PART THREE, Section 5.1 for details. **With the optional Cal-Cube™ assembly, you can conveniently check calibration any time (Section 6.2).** The mA value for each analog output can also be calibrated (Section 5.5).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Outputs

The analyzer provides two isolated analog outputs (1 and 2). Each output represents the measured turbidity, and can be set to be 0-20 mA or 4-20 mA.

Turbidity values can be entered to define the endpoints at which the 0/4 mA and 20 mA analog output values are desired (range expand). For analog output setup details, refer to PART THREE, Section 4.3.

During calibration, both analog outputs can be selected to:

- Hold their present values (HOLD OUTPUTS).
- Transfer to preset values to operate control elements by an amount corresponding to those values (XFER OUTPUTS).
- Remain active to respond to the measured turbidity (ACTIVE OUTPUTS).

Relays

The analyzer has four electromechanical relays, all with SPDT contacts. Each relay can be set to function as a CONTROL, ALARM or STATUS relay. CONTROL and ALARM relays operate in response to the measured turbidity. STATUS relays operate only in response to selected system diagnostic conditions.



NOTE: *Relay D is factory-set to function as a STATUS relay but can be configured as a CONTROL or ALARM relay.*

When a relay is set to function as a STATUS relay, it becomes a dedicated system diagnostic-only alarm relay. A STATUS relay can be configured for:

- FAIL mode -- sets STATUS relay to activate when there is a FAIL condition (analyzer, light source or detector) or a sensor CHAMBER UNKNOWN condition.
- WARN mode -- sets STATUS relay to activate only when there is a sensor flow CHAMBER DIRTY condition.
- ALL mode -- sets STATUS relay to activate when there is any abnormal system condition (any FAIL condition, or sensor CHAMBER DIRTY or UNKNOWN condition).

A “WARNING CHECK STATUS” message automatically flashes on the MEASURE screen whenever the analyzer detects any of these system diagnostic conditions:

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- ANALYZER FAIL
- CHAMBER DIRTY
- CHAMBER UNKNOWN
- SOURCE 1 FAIL
- SOURCE 2 FAIL
- DETECT 1 FAIL
- DETECT 2 FAIL

To determine the condition causing the WARNING message, display the STATUS screens in the TEST/MAINT menu branch. For more details, see PART THREE, Section 6.1.

Except for STATUS relays, during calibration, the relay on/off states are affected in the same way as the analog outputs by the "(HOLD/XFER/ACTIVE) OUTPUTS" screen selection. These relays are also held at their present on/off states, transferred to desired preset on/off states, or remain active to respond to measured turbidity.

Refer to PART THREE, Section 4.4 for relay setup details.

1.2 Modular Construction

The modular construction of the analyzer simplifies field servicing and provides electrical safety. The front door/keypad assembly and the sensor use voltages no greater than 24 VDC, and are completely safe to handle.

Opening the analyzer door accesses terminals inside the enclosure for electrical connections. Line power must be connected to specifically designated terminals on TB3.

WARNING:

REMOVE LINE POWER BEFORE NEARING THIS AREA TO AVOID ELECTRICAL SHOCK.

1.3 Retained Configuration Values

All user-entered configuration values are retained indefinitely, even if power is lost or turned off. The non-volatile analyzer memory does not require battery backup.

1.4 Analyzer and Sensor Serial Numbers

A label with the analyzer model number, serial number, build date, and other items is affixed to the top of the analyzer enclosure. A similar label is affixed to the sensor.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.5 EMI/RFI Immunity

The analyzer is designed to provide protection from most normally encountered electromagnetic interference. This protection exceeds U.S. standards and meets European IEC 801-series testing for electromagnetic and radio frequency emissions and susceptibility. Refer to Figure 1-1 and the specifications in Section 2.2 for more information.

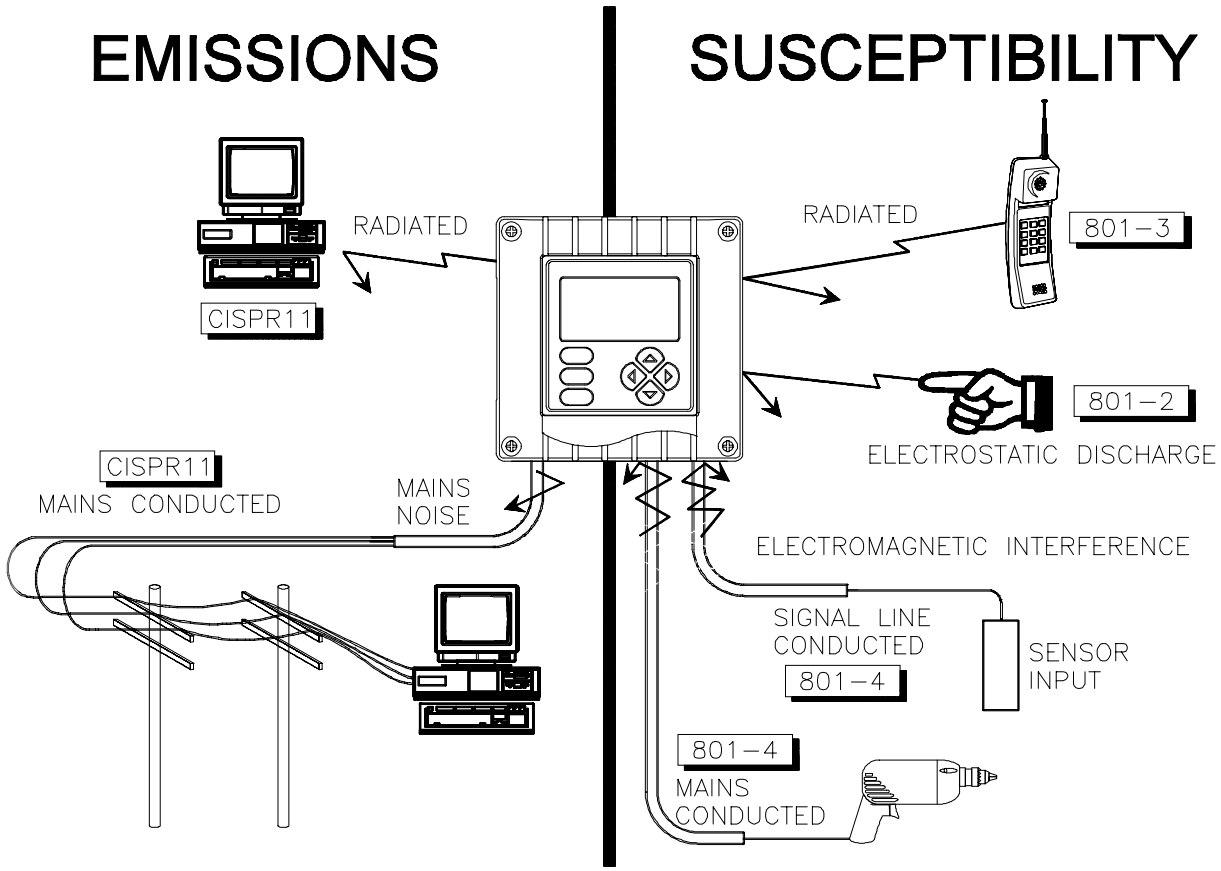


FIGURE 1-1 EMI/RFI Immunity Diagram

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 2
SPECIFICATIONS

2.1 Model 8320 Low-range Turbidity Sensor

Operational

Flow Rate..... 0.05 to 7 GPM (0.19 to 26.5 LPM)
Ambient Conditions..... 32-140°F (0-60°C)
Sample Temperature Range..... 32-140°F (0-60°C)
Pressure Range:
- Standard Sensor Design..... 0-50 psig at 68°F (0-3.4 bar at 20°C)
- High Pressure Design..... 0-150 psig at 68°F (0-10.2 bar at 20°C)

Pressure Drop:
- Standard Sensor Design..... 0.0017 psig at 0.1 GPM (0.0001 bar at 0.36 LPM)
- High Pressure Design..... 0.165 psig at 1.0 GPM (0.012 bar at 3.8 LPM)

Residence Time ..... 9.5 seconds at 1 GPM (3.8 LPM)
Air Venting ..... Integral bubble trap for 0.05 to 0.5 GPM (0.19 to 1.8 LPM) flows. Installation of restrictor valve on the sensor outlet is recommended for flows above 0.5 GPM (1.8 LPM) with air in sample.

Mechanical

Light Sources ..... Two near-infrared (860 nM wavelength) LEDs
Sensor Flow Configuration ..... Flow-through design
Process Connections..... 1/2 inch NPT female standard; adaptable to 3/8 inch or 1/4 inch NPT, barb or tube fittings
Wetted Materials ..... PVC, polycarbonate, polystyrene, PPO, nitrile, and Buna-N
Cleaning Method ..... Water rinse, wipe surfaces
Enclosure:
- Standard Sensor Design ..... NEMA 4X (≅ CSA type 4; ≅ IP65), molded fiber-glass-reinforced polyester (flame retardant) with four integral tabs for surface mounting
- High Pressure Design..... NEMA 4X (≅ CSA type 4; ≅ IP65), PPO structural foam (V-0 flammability rating per U.L. 94 test) with four integral tabs to surface mount

Mounting Configurations..... Surface or pipe mount
Net Weight..... 10 lbs. (4.5 kg) approximately

2.2 Model T53 Analyzer

Operational

Display..... Graphic dot matrix LCD, 128 x 64 pixels with LED backlighting; 1/2 inch (13 mm) main character height; 1/8 inch (3mm) auxiliary information character height; menu screens contain up to six text lines

Measurement	Auto-ranging Scale
Turbidity.....	0.000-100.0 NTU with auto-ranging and decimal point shift above 1.000 NTU and 10.00 NTU (same for other measurement units)

Analog Outputs (1 and 2) ..... 0.00-20.00 mA or 4.00-20.00 mA

Ambient Conditions:
- Operation..... -4 to +140°F (-20 to +60°C); 0-95% relative humidity, non-condensing
- Storage..... -22 to +158°F (-30 to +70°C); 0-95% relative humidity, non-condensing

Relays: Types/Outputs .....Four electromechanical relays; SPDT (Form C) contacts; U.L. rated 5A 115/230 VAC, 5A @ 30 VDC resistive
- Operational Mode.....Each relay (A, B, C, and D) can be assigned to be driven by the measured turbidity or diagnostics
- Function Modes:
  - Control..... Settings for high/low phasing, setpoint, dead-band, overfeed timer, off delay, and on delay

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Alarm ..... Settings for low alarm point, low alarm point deadband, high alarm point, high alarm point deadband, off delay, and on delay

Status ..... Setting for FAIL, WARN or ALL system diagnostic conditions to activate relay when specific conditions exist (analyzer, light source 1/2 or detector 1/2 failure, sensor chamber dirty or sensor chamber unknown)

Indicators ..... Relay annunciators (A, B, C, and D) indicate respective relay on/off status

Sensor-to-Analyzer Distance ..... 30 ft. (9 m) maximum (consult factory if longer distances are required)

Power Requirements ..... 90-130 VAC, 50/60 Hz. (10 VA max.) or 180-260 VAC, 50/60 Hz. (10 VA max.)

Calibration Methods:

PRIMARY ..... Enter one primary standard value (formazin suspension is recommended).

CUBE CAL ..... Temporarily insert an optional Cal-Cube™ assembly into the sensor and enter its factory-certified standard value.

SAMPLE ..... Enter one sample value determined by laboratory analysis or calibrated portable meter.

Analog Outputs ..... Two isolated 0/4-20 mA outputs; each with 0.004 mA (12-bit) resolution and capability to drive up to 600 ohm loads

NOTE: *Each output represents the measured turbidity. Turbidity values can be entered to define the endpoints at which the 0/4 mA and 20 mA output values are desired. During calibration, both outputs can be selected to hold their present values, transfer to preset values to operate control elements by an amount corresponding to those values, or remain active to respond to the measured turbidity.*

Communication: RS-232 ..... Enables configuration and retrieval of measured data for one analyzer using an IBM-compatible PC and optional GLI software tool kit

HART ..... Enables configuration and retrieval of measured data for multiple analyzers over a communication link using appropriate hand-held terminal or data system with HART software

Memory Backup (non-volatile) .... All user settings are retained indefinitely in memory (EEPROM)

Electrical Certifications:

European Community EMC ..... Certified CE compliant for conducted and radiated emissions (EN 50081-2) and immunity (EN 61000-6-2)

General Purpose (pending) ..... CSA, CSA_{NRTL}, and FM (UL pending)

Class I, Div. 2 (Groups A-D) .... CSA, CSA_{NRTL}, and FM (UL pending)

Mechanical

Enclosure ..... NEMA 4X; polycarbonate face panel, epoxy-coated cast aluminum door and case with four 1/2 inch (13 mm) conduit holes, nylon mounting bracket, and stainless hardware

Mounting Configurations ..... Panel, surface, and pipe mounting

Net Weight ..... 5 lbs. (2.3 kg) approximately

2.3 Accu4™ Turbidimeter System Performance (electrical, analog outputs)

System Accuracy ..... ± 2% of reading, all ranges
Sensitivity ..... 0.001 NTU
Repeatability ..... 0.1% of span or better
Temperature Drift ..... Zero and Span: 0.01% of span per °C

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PART TWO - INSTALLATION

SECTION 1
UNPACKING

After unpacking, it is recommended to save the shipping carton and packing materials in case the instrument must be stored or re-shipped. Inspect the equipment and packing materials for signs of shipping damage. If there is any evidence of damage, notify the transit carrier immediately.

SECTION 2
MECHANICAL REQUIREMENTS

2.1 Sensor Location

Locate the Model 8320 turbidity sensor indoors or outdoors within 30 ft. (9 m) of where the Model T53 analyzer is to be installed. The sensor may be installed in an “in line” process configuration using a closed loop piping arrangement (Figure 2-1) or in a sample bypass line configuration using an open drain piping arrangement (Figure 2-2).

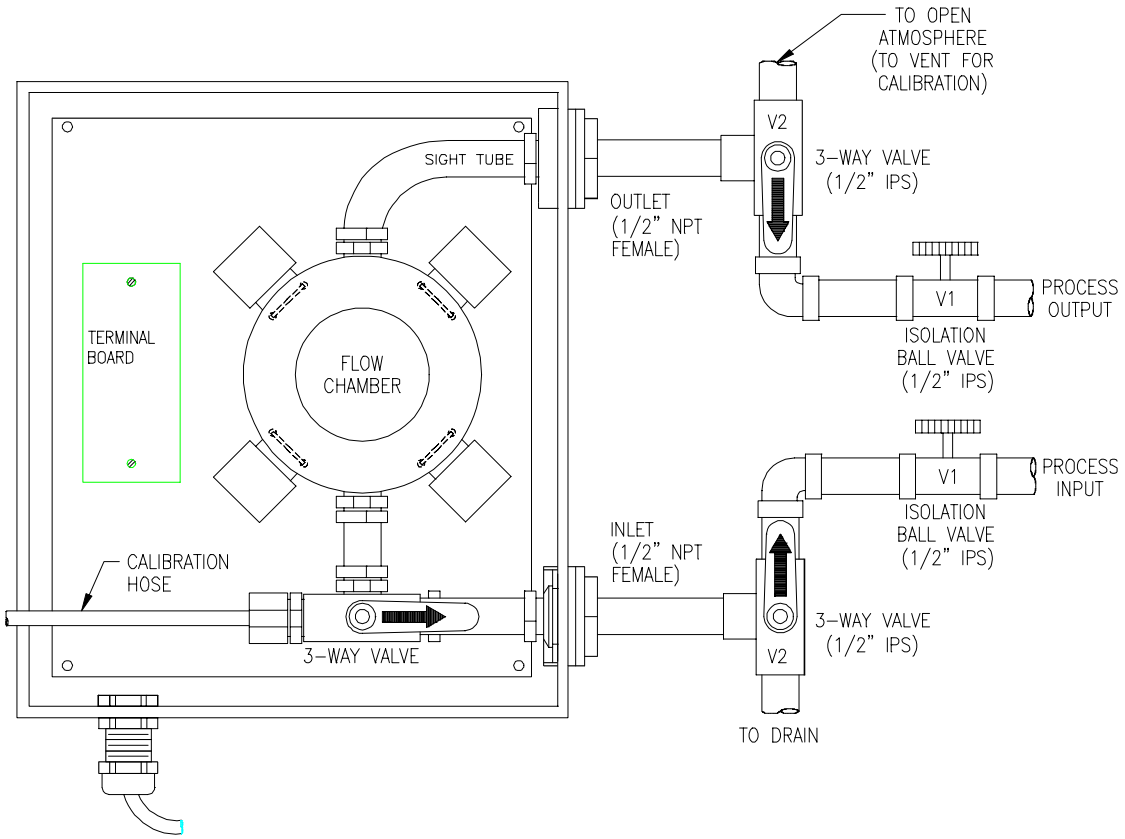


FIGURE 2-1 Recommended Closed-loop Sensor Piping Arrangement

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

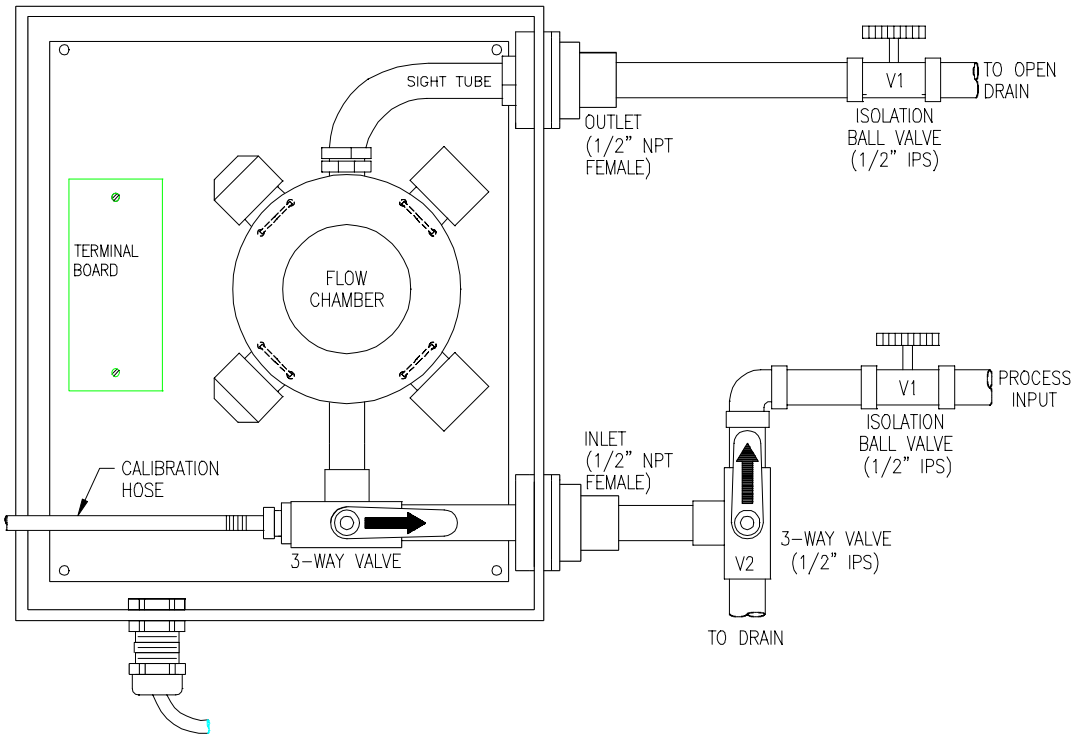



FIGURE 2-2 Recommended Sample Bypass Line Sensor Piping Arrangement

2.2 Sensor Mounting

The Model 8320 low-range turbidity sensor may the standard design sensor (Figure 2-3) or the high pressure design sensor which is housed in a different enclosure (Figure 2-4). In either case, vertically orient the sensor (inlet fitting at bottom) and surface mount it where there is little or no mechanical vibration. Use 1/4 inch screws to fasten the enclosure onto a flat surface. (The sensor may be mounted onto a vertical or horizontal 1-1/2 inch or 2 inch diameter pipe using an optional GLI pipe mount kit. Refer to PART FIVE -- Spare Parts -- for the GLI part number.


☞ ***NOTE:*** *Avoid locations where Model 8320 ambient temperature limits (32-140°F; 0-60°C) may be exceeded.*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

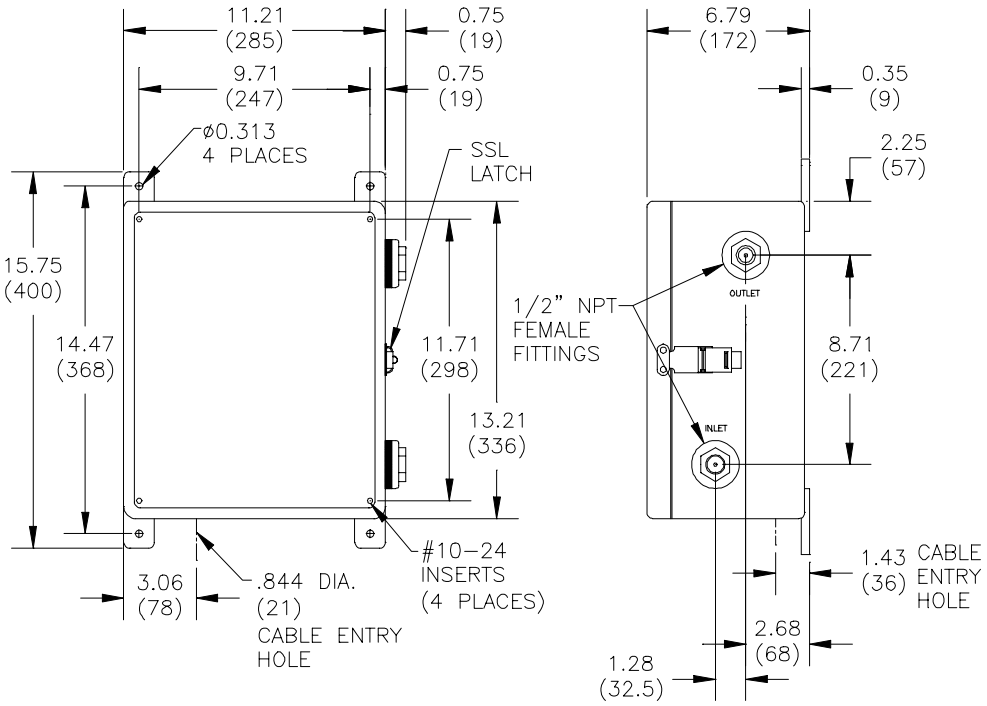

Note: Dimensions shown in inches (mm).

FIGURE 2-3 Standard Design Model 8320 Sensor -- Installation Dimension Details

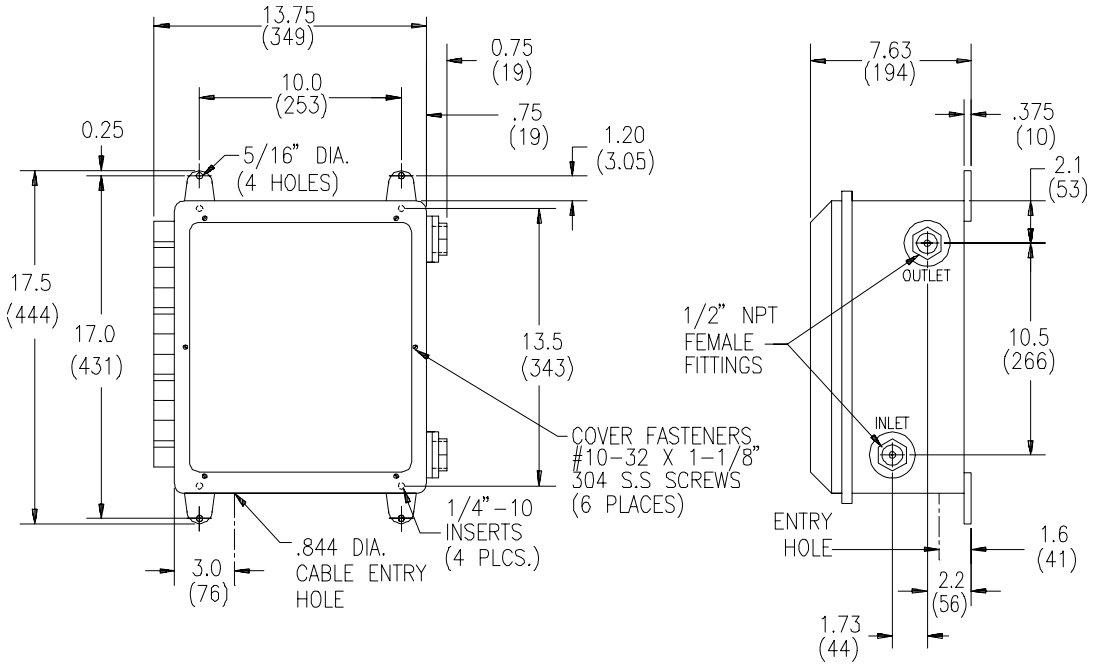

Note: Dimensions shown in inches (mm).

FIGURE 2-4 High Pressure Design Model 8320 Sensor -- Installation Dimension Details

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.3 Sensor Plumbing Connections

Plumb the process into the Model 8320 sensor inlet fitting. Plumb the sensor outlet fitting back into the process line (Figure 2-1) or to an open drain (Figure 2-2). Bushings may be used to reduce to a smaller pipe size. Barb or tube fittings may be installed. **Recommendation:** Use larger sample tubing for applications in which sediment buildup commonly occurs. The resultant faster flow rate helps flush sediment through the sensor.

☞ ***NOTE:*** *Use Teflon tape to seal the inlet and outlet connections. Do not use pipe dope or other liquid sealants.* ***Recommendation:*** *Use ball valves (V1 designations in Figure 2-1 and 2-2) to conveniently isolate the sensor when calibrating or removing the sensor. In a closed-loop piping arrangement (Figure 2-1), 3-way valves (V2 designations) are required to conveniently drain the flow chamber during calibration. A bypass line piping arrangement (Figure 2-2) only requires one 3-way valve.*

CAUTION:

WHEN USING METAL FITTINGS, DO NOT EXCESSIVELY TIGHTEN THEM ONTO THE SENSOR'S PLASTIC INLET AND OUTLET WHICH MAY CRACK.

☞ ***NOTE:*** *When choosing the sampling point for the process pipe plumbing connection, avoid a top-of-pipe or bottom-of-pipe location. Figure 2-5 illustrates the best sampling point location: side-of-pipe with sample line inserted to the process pipe centerline.*

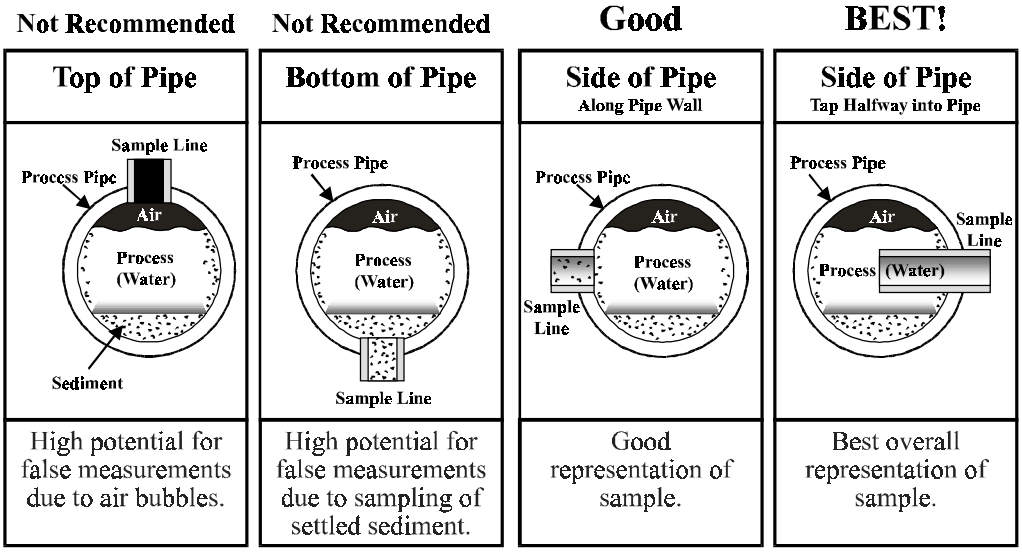


Figure 2-5 Sampling Point Guidelines for Process Pipe Plumbing Connection

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.4 Analyzer Location

1. Locate the analyzer as close as possible to the installed sensor. Do not exceed a maximum distance of 30 feet (9 m) between the sensor and analyzer. (Consult factory if longer distances are required.)

2. Mount the analyzer in a location that is:
   - ➥ Clean and dry where there is little or no vibration.
   - ➥ Protected from corrosive fluids.
   - ➥ Within ambient temperature limits (-4 to +140°F or -20 to +60°C).

CAUTION:

EXPOSING THE ANALYZER TO DIRECT SUNLIGHT MAY INCREASE THE OPERATING TEMPERATURE ABOVE ITS SPECIFIED LIMIT, AND DECREASE DISPLAY VISIBILITY. RECOMMENDATION: IN SEVERE CASES, USE A GLI SUN SHIELD (P/N 1000G3088-001).

2.5 Analyzer Mounting

Figure 2-6 illustrates various ways to mount the analyzer using the supplied bracket and hardware. Determine the mounting method and attach the hardware as shown in the respective illustration. Refer to Figure 2-7 for analyzer installation dimension details.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

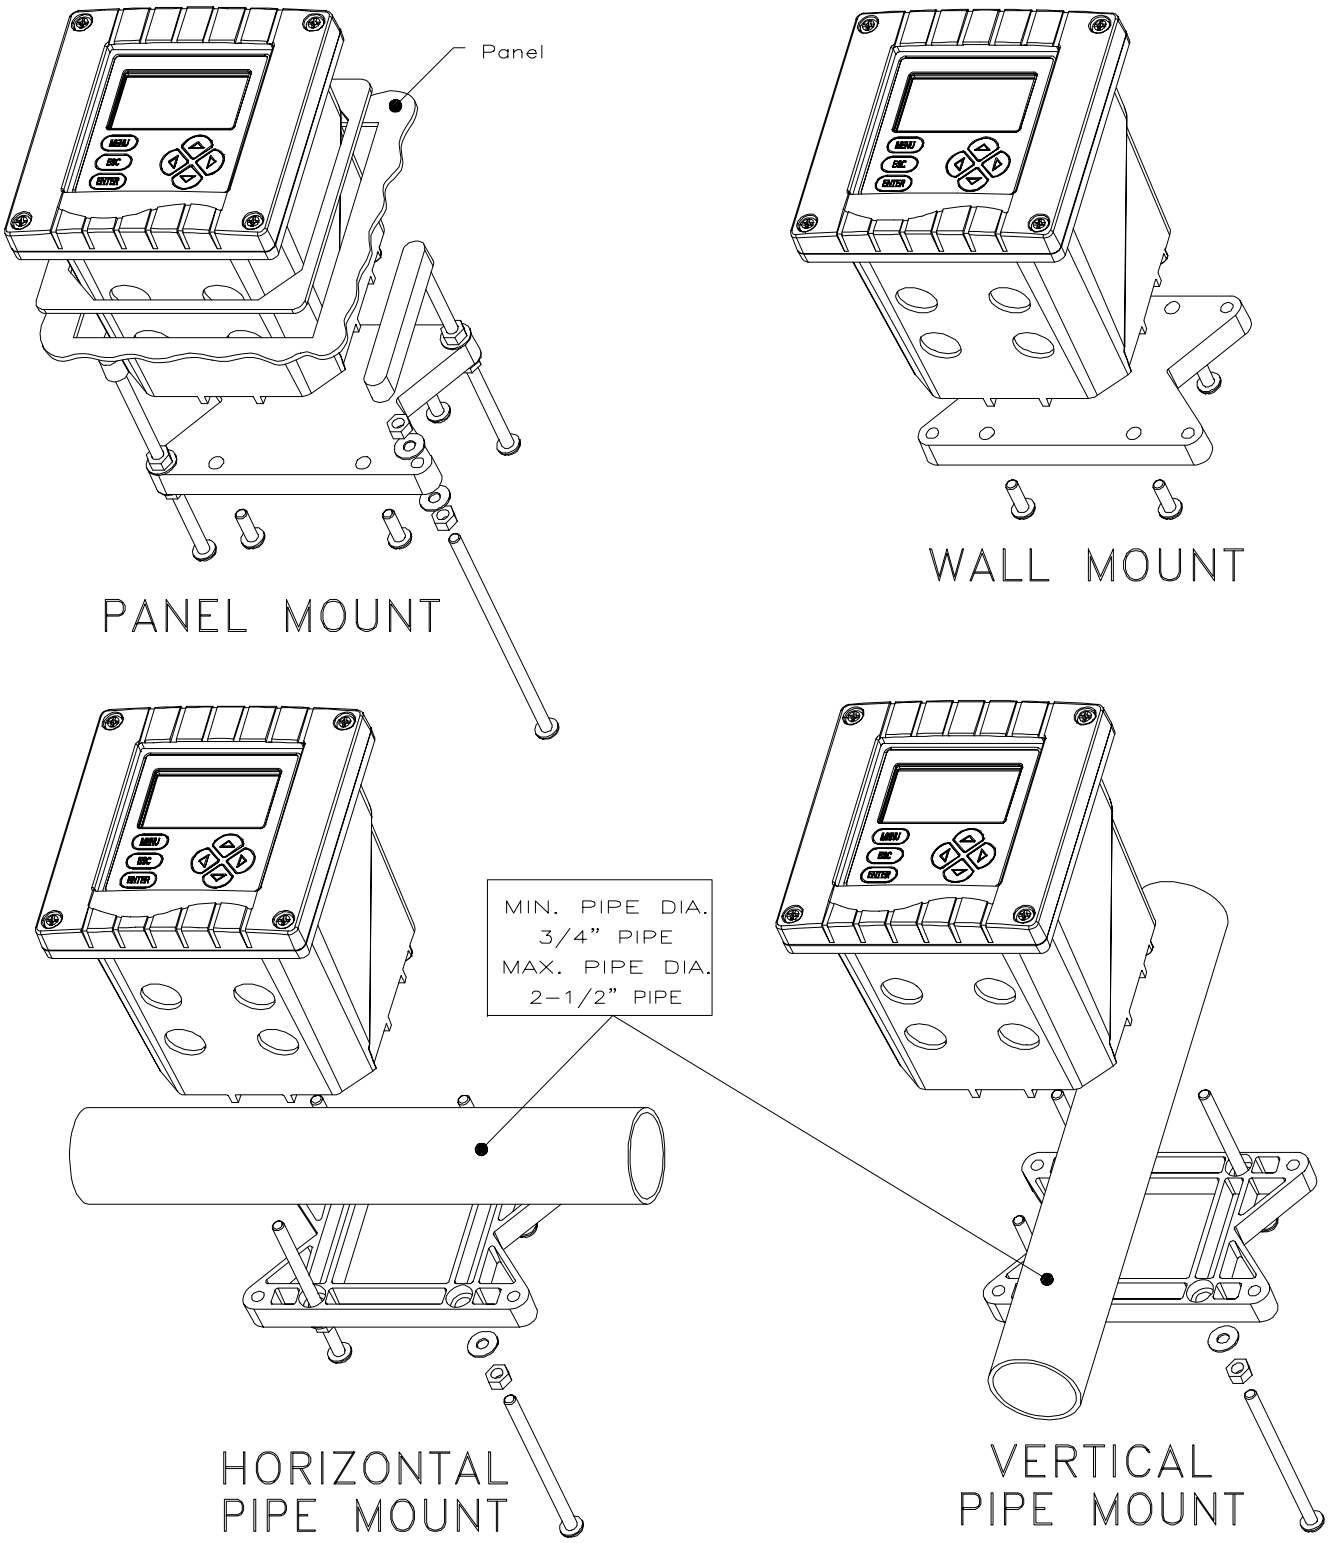


FIGURE 2-6
Analyzer Mounting Arrangements

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

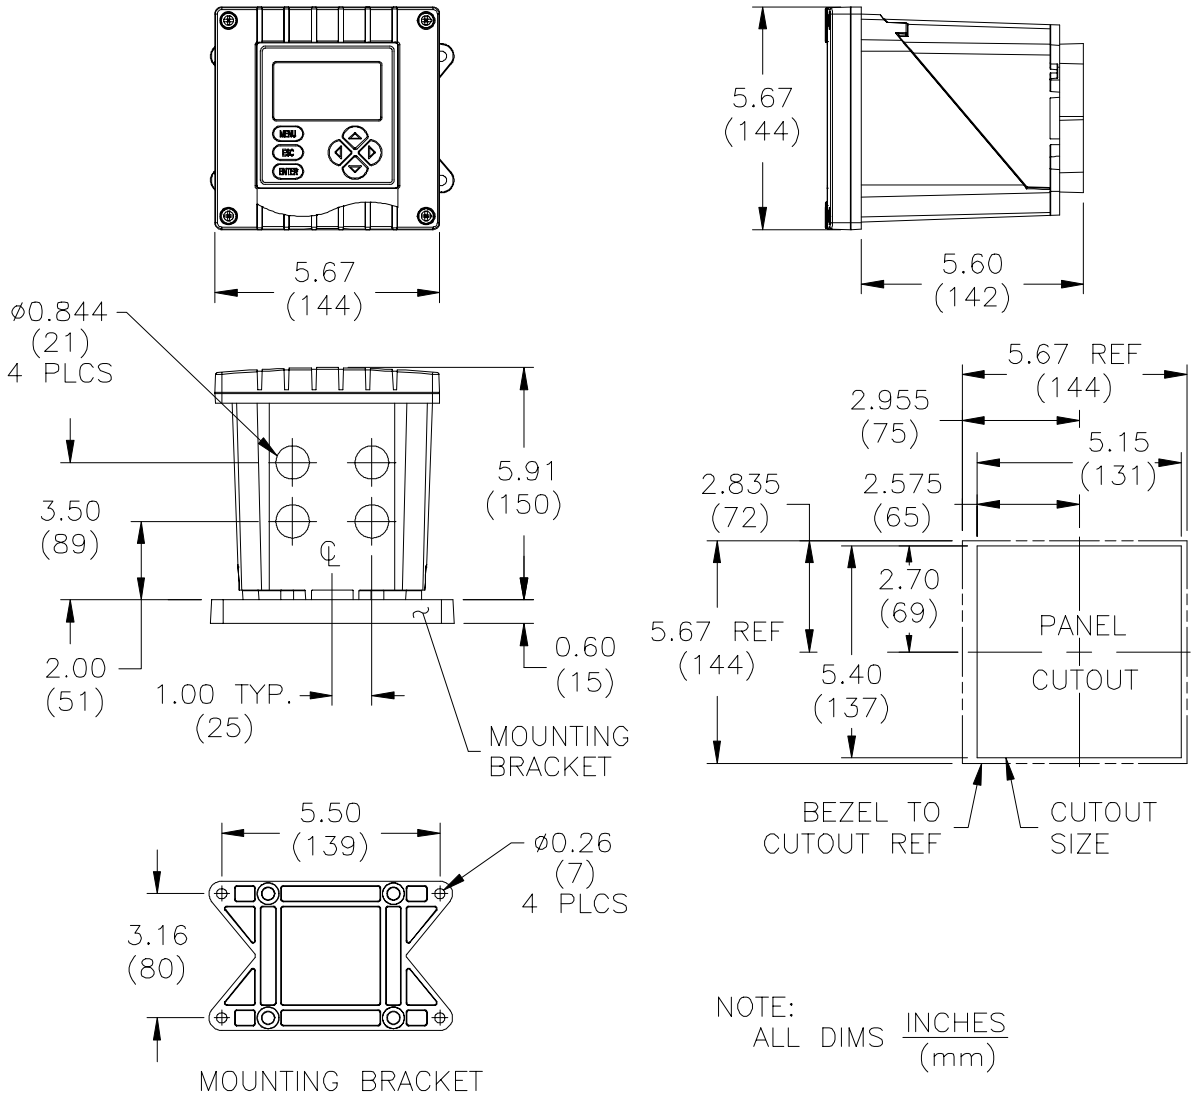


FIGURE 2-7 Analyzer Installation Dimensions Details

2.6 Sensor and Analyzer Conduit Hole Requirements

Recommendation: Run all wiring to the sensor and analyzer in 1/2-inch, grounded metal conduits. If using only shielded cables, appropriate strain reliefs or cable grips are required. (GLI offers accessory cable grips, part number 3H1091, and watertight locknuts, part number 3H1230, for cable entries.) Seal unused cable entry holes with appropriate plugs.

☞ ***NOTE:*** *Use NEMA 4 (≅ CSA type 4; ≅ IP65) rated fittings and plugs to maintain the watertight integrity of the NEMA 4X sensor and analyzer enclosures, and to comply with Div. 2 hazardous area requirements.*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 3
ELECTRICAL CONNECTIONS

To access terminals for electrical connections, open the left-hinged enclosure door by unscrewing the four fasteners. Figure 2-8 or 2-9 shows the terminal arrangement and their designations.

☞ ***NOTE:*** *All terminals are suitable for single wires up to 14 AWG (2.5 mm^2).*

☞ **Wiring Tip!** To comply with European Community (CE) electromagnetic compatibility requirements, follow these general wiring guidelines:

1. Keep all cable shields as short as possible inside the analyzer, and connect them to the ground terminals provided. Performance may be improved by using cable glands that enable the shield to directly contact the analyzer chassis.
2. Use Steward ferrite 28 B0590-000 or equivalent on the sensor cable -- two turns required.
3. In harsh conducted RF conditions, connect the earth ground of the analyzer to a local, known earth ground source.

☞ ***NOTE:*** *For easier wiring, route line power and relay outputs through the back conduit holes before connecting sensor and analog outputs through the front holes.*

3.1 GLI Model 8320 Low-range Turbidity Sensor

The Model 8320 sensor is supplied with LED light source and detector cables connected to its terminal board. Remove its protective cover to check that these cables have not been accidentally disconnected during shipment (refer to wiring diagram on inside of sensor enclosure door).

☞ **Wiring Tip!** Route the sensor cable in 1/2-inch, grounded metal conduit to protect it from moisture, electrical noise, and mechanical damage.

☞ ***NOTE:*** *Do not route the sensor cable in any conduit containing AC or DC power wiring ("electrical noise" may interfere with sensor signal). Also, always recalibrate the system when the cable length between sensor and analyzer changes.*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

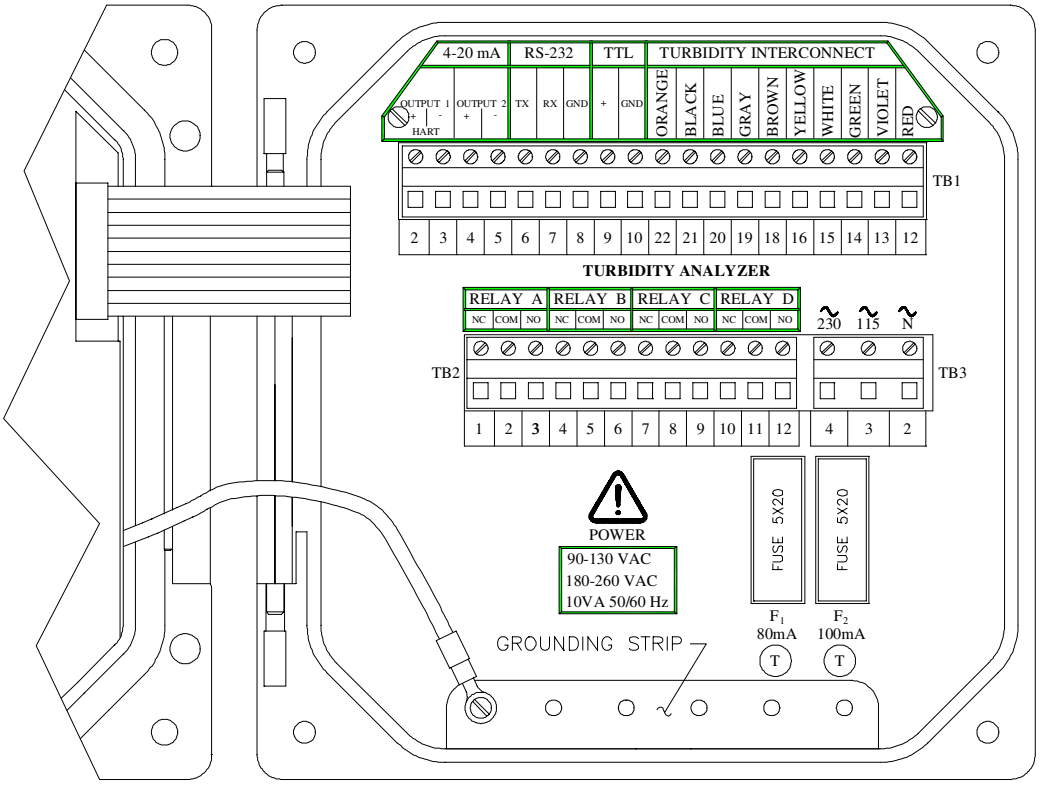


FIGURE 2-8 Terminal Designations for Analyzers with "B" Prefix Serial Number

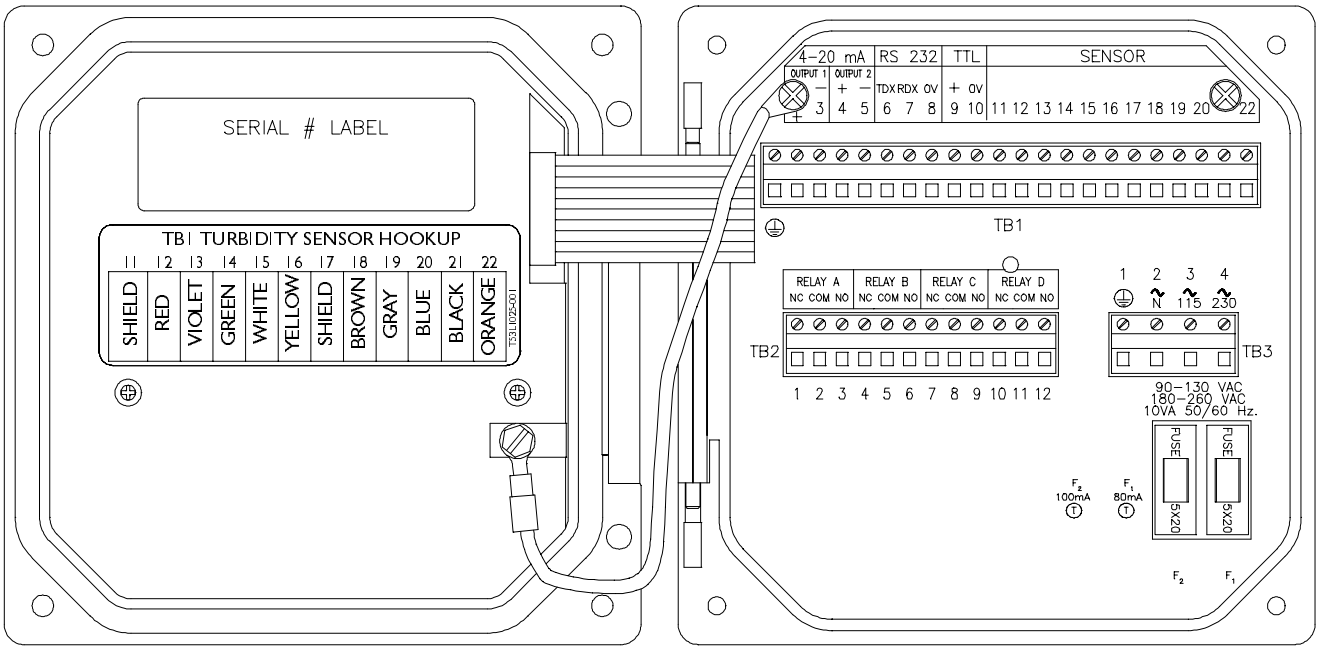


FIGURE 2-9 Terminal Designations for Analyzers with No Letter Prefix Serial Number

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Refer to Figure 2-10 or 2-11 and connect the sensor (or interconnect) cable wires to appropriate terminals on TB1, matching colors as indicated.

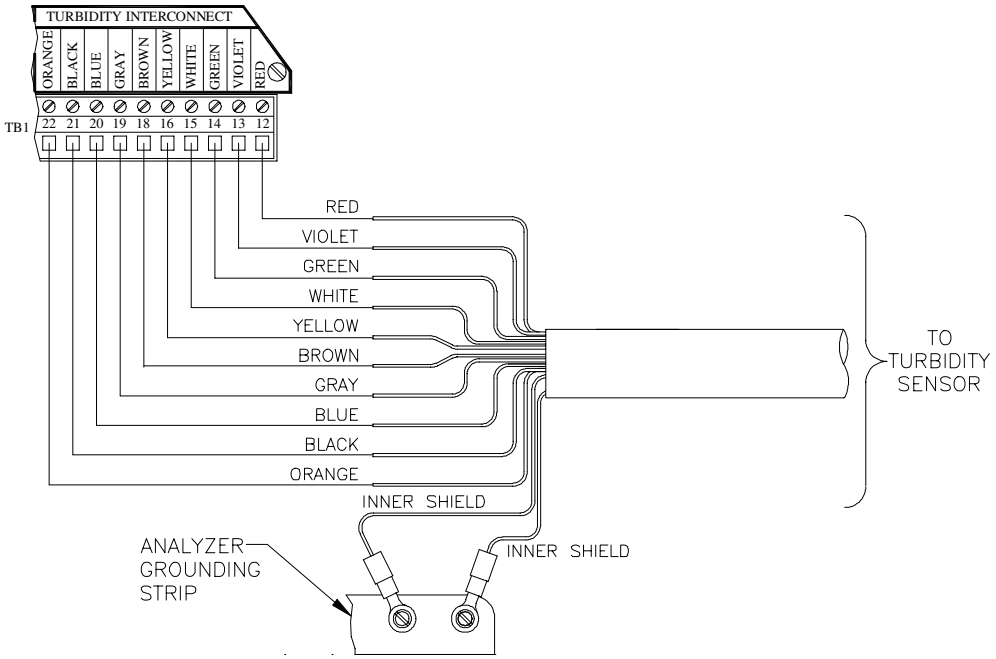


FIGURE 2-10
Connecting Model 8320 Low-range Turbidity Sensor to Analyzers with "B" Prefix Serial Number

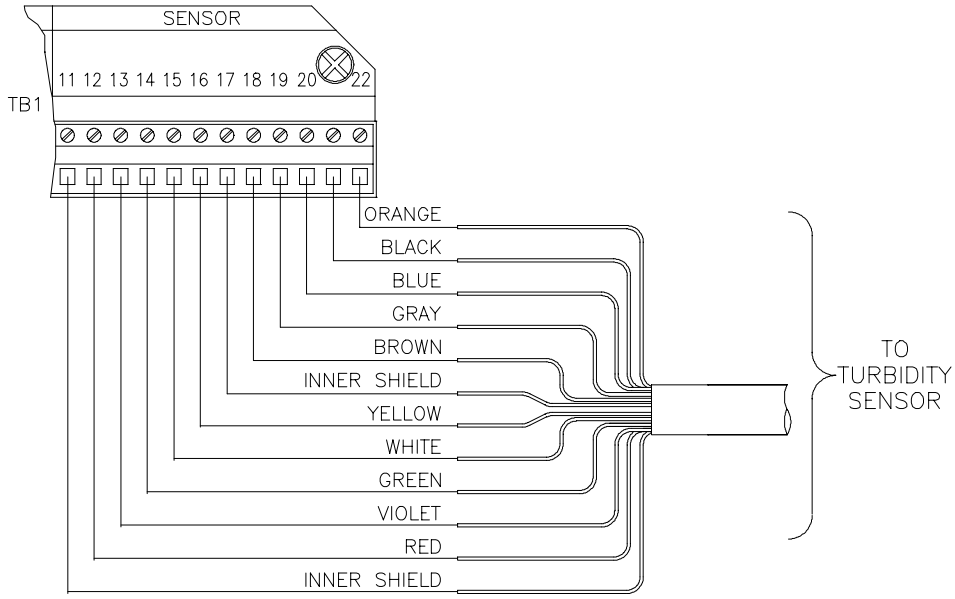


FIGURE 2-11
Connecting Model 8320 Low-range Turbidity Sensor to Analyzers with No Letter Prefix Serial Number

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.2 Analog Outputs

Two isolated analog outputs (1 and 2) are provided. Each output represents the measured turbidity, and can be set to be 0-20 or 4-20 mA. **The outputs are isolated from the inputs and earth ground, but not from each other.** For output configuration details, see PART THREE, Section 4.3.



Wiring Tip! Use high quality, shielded instrumentation cable for connecting the analog outputs. To protect the output signal from EMI/RFI, connect cable shields to:

- The grounding strip at bottom of case (5 open holes, Fig. 2-8) for analyzers with "B" prefix serial number.
- The "ground symbol" Terminal 1 on TB1 (Figure 2-9) for analyzers with no letter prefix serial number.

Each 0/4-20 mA output can drive a load of up to 600 ohms.

- **Output 1:** Connect the load to Terminals 2 and 3 on TB1, matching polarity as indicated.
- **Output 2:** Connect the load to Terminals 4 and 5 on TB1, matching polarity as indicated.



NOTE: *When using the HART communication option, a digital signal is encoded onto the 4-20 mA analog Output 1 signal. In a HART SINGLE MODE wiring configuration, Output 1 remains available for normal use. However, in a HART MULTI-DROP wiring configuration, Output 1 becomes dedicated to that function and cannot be used. See PART THREE, Section 8 for more HART communication information.*

3.3 Relay Outputs

The analyzer is equipped with four electromechanical relays. For relay setup details, see PART THREE, Section 4.4.

CAUTION:

DO NOT EXCEED THE CONTACT RATING FOR EACH RELAY (5A 115/230 VAC). WHEN SWITCHING LARGER CURRENTS, USE AN AUXILIARY RELAY SWITCHED BY THE ANALYZER RELAY TO EXTEND ANALYZER RELAY LIFE. WHEN USING RELAY OUTPUTS, MAKE SURE THAT LINE POWER WIRING CAN ADEQUATELY CONDUCT THE CURRENT DRAW OF THE SWITCHED LOAD(S).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Four sets of SPDT relay outputs (Relays A, B, C, and D) are provided at Terminals 1 through 12 on TB2. **The relay outputs are not powered.** The line power used to power the analyzer may also be used to power control/alarm devices with these relay contacts. Refer to Figure 2-12 for a general wiring arrangement. Always check control wiring to insure that line power will not be shorted by the relay switching action, and that wiring conforms to local codes.

WARNING:

MAKE SURE LINE POWER IS NOT PRESENT WHILE CONNECTING WIRES TO TB2 RELAY TERMINALS.

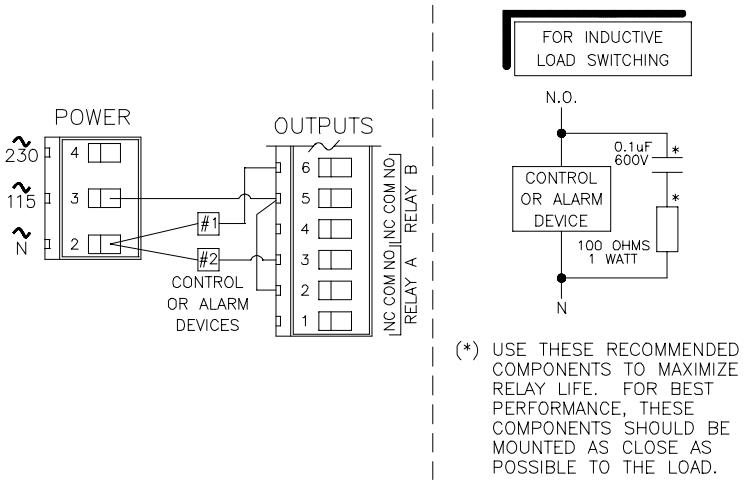


FIGURE 2-12
Connecting Control/Alarm Device(s) to Electromechanical Relay(s)

3.4 Closed Contact TTL Input

The analyzer TTL input feature enables you to conveniently hold or transfer analog outputs and CONTROL and ALARM relays. How the TTL input feature functions depends on what output state (HOLD, XFER or ACTIVE) was selected during the last calibration:

- If HOLD was selected, the TTL input will hold analog outputs at their last measured values, and hold relays at their present on/off states.
- If XFER (transfer) was selected, the TTL input will transfer analog outputs to their user-entered preset values, and transfer relays to their user-entered preset “on/off” states.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- If ACTIVE was selected, the TTL input will becomes disabled, keeping the analog outputs and relays active so they can respond to the measured value.

To apply a TTL hold or transfer, either locally or remotely connect TTL Terminal 9 to Terminal 10 on TB1. When this connection is broken, the applied hold or transfer releases.

☞ ***NOTE:*** *The TTL input hold feature can be affected by these other methods to hold the analog outputs and relays, which are listed in order of precedence:*

1. ***Selected Calibration Output State:*** *The output state (HOLD, XFER or ACTIVE) selected during calibration always takes precedence over the TTL input. If the TTL input was operating, it will be re-applied after calibration (or aborted calibration) and will function according to the last selected output state.*

2. ***TEST/MAINT Menu CHECK CAL/HOLD Function:*** *The TEST/MAINT hold always takes precedence over the TTL input. If the TTL input was operating, it will be re-applied after the TEST/MAINT hold is released.*

3.5 Line Power

Refer to appropriate figures on the next page and connect line power to TB3 terminals using the standard three-wire connection arrangement. **Use wiring practices which conform to local codes** (example: National Electric Code Handbook in the U.S.A.).

WARNING:

REMOVE LINE POWER WHILE CONNECTING LINE POWER WIRES TO THE TB3 TERMINALS. ALSO, USE ONLY THE STANDARD THREE-WIRE CONNECTION ARRANGEMENT FOR SINGLE-PHASE LINE POWER TO PREVENT AN UNSAFE CONDITION, AND TO ENSURE PROPER ANALYZER OPERATION.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

NOTE: *In all cases, connect the line power cable ground wire (usually green) to:*

- *The grounding strip at bottom of case (5 open holes -- Figures 2-13, 2-14, or 2-15) for analyzers with "B" prefix serial number.*
- *The "ground symbol" Terminal 1 on TB3 (Figures 2-16, 2-17, or 2-18) for analyzers with no letter prefix serial number.*

The "115" and "230" voltage circuits are protected with internal, board-mounted slow-blow fuses.

NOTE: *For 230 volt split phase line power, be sure to conform to local codes with regard to fusing the 115 volt line connected to the "N" terminal.*

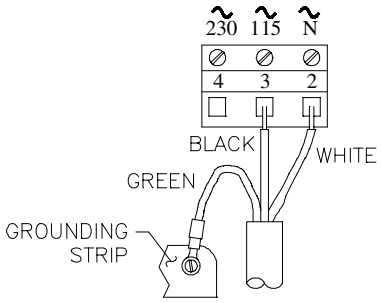


FIGURE 2-13
Connecting 115 Volt Single Phase to Analyzers with "B" Prefix Serial Number

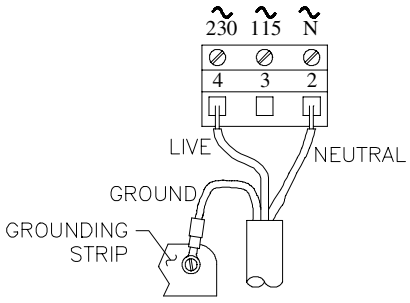


FIGURE 2-14
Connecting 230 Volt Single Phase to Analyzers with "B" Prefix Serial Number

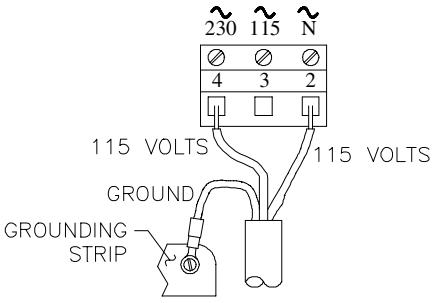


FIGURE 2-15
Connecting 230 Volt Split Phase to Analyzers with "B" Prefix Serial Number

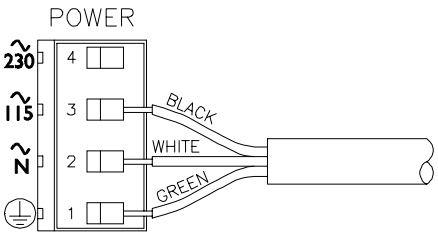


FIGURE 2-16
Connecting 115 Volt Single Phase to Analyzers with No Letter Prefix Serial Number

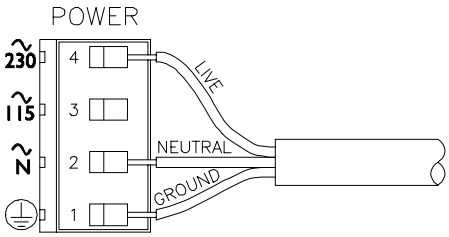


FIGURE 2-17
Connecting 230 Volt Single Phase to Analyzers with No Letter Prefix Serial Number

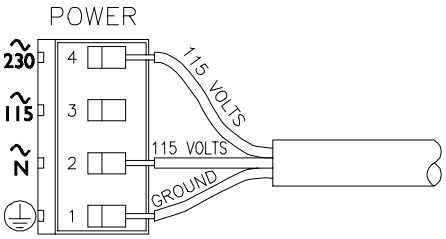


FIGURE 2-18
Connecting 230 Volt Split Phase to Analyzers with No Letter Prefix Serial Number

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PART THREE - OPERATION

SECTION 1
USER INTERFACE


The user interface consists of an LCD display and a keypad with **MENU**, **ENTER**, **ESC**, ⇦, ⇨, ⇧, **and** ⇩ **keys**.

1.1 Display

By using the keypad, you can display three types of screens:

- **MEASURE Screen:** The normal display mode shows measured values. The measured turbidity is always shown on the main middle line. Pressing the ⇩ **and** ⇧ **keys** changes the bottom line (in reverse video) to show the analog Output 1 or 2 value in mA.

  An example of a typical MEASURE screen is:

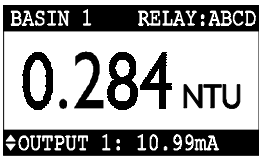

  On the MEASURE screen's top line, Relay A, B, C, and D annunciators will appear when their relay operational state changes. When a relay overfeed timer is used and it has "timed out," the respective relay annunciator continuously blinks until the overfeed condition is resolved.

- **MENU Screens:** These top-level and lower-level (sub-menu) screens within the three main branches of the menu tree are used to access edit/selection screens for configuration. (EXIT screens at the end of each menu branch enable you to move up one level in the menu tree by pressing the **ENTER key**. This is functionally the same as pressing the **ESC key**.)

- **Edit/Selection Screens:** These screens enter values/choices to calibrate, configure, and test the analyzer.

1.2 Keypad

The keypad enables you to move throughout the analyzer menu tree. The keys and their related functions are:

1. **MENU key:** Pressing this key always displays the top of the menu tree ("MAIN MENU" selection screen). To display the top-level menu screen for a desired main

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

branch (CALIBRATE, CONFIGURE or TEST/MAINT), use the ⇩ **and** ⇧ **keys** to select the corresponding line, and press the **ENTER key**. (Pressing the **MENU key** also "aborts" the procedure to change values or selections.)

2. **ENTER key:** Pressing this key does two things: it displays submenu and edit/selection screens, and it enters (saves) configuration values/selections.

3. **ESC key:** Pressing this key always takes the display up one level in the menu tree. (Example: With the "MAIN MENU" branch selection screen displayed, pressing the **ESC key** once takes the display up one level to the MEASURE screen.) This key can also "abort" the procedure to change a value or selection.

4. ⇦ **and** ⇨ **keys:** Depending on the type of displayed screen, these keys do the following:
   - MEASURE/Menu Screen: These keys are non-functional.
   - Edit/Selection Screens: "Coarse" adjusts the displayed numerical value.

5. ⇧ **and** ⇩ **keys:** Depending on the type of displayed screen, these keys do the following:
   - MEASURE Screen: Changes the bottom auxiliary display line, shown in reverse video, between Output 1 mA value and Output 2 mA value.
   - Menu Screens: Moves reverse video cursor up or down respectively to select a displayed line item.
   - Edit/Selection Screens: "Fine" adjusts numerical value, enclosed by parenthesis, up or down respectively or moves up or down respectively between choices enclosed by parenthesis.

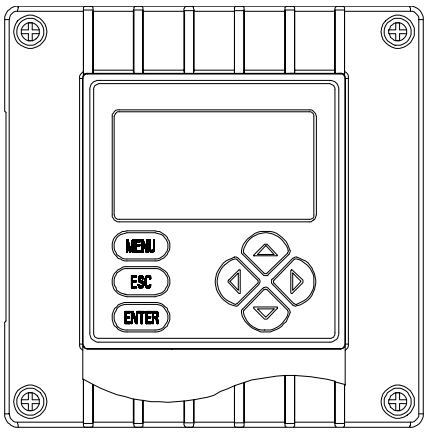



FIGURE 3-1 Analyzer Keypad

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.3 MEASURE Screen (normal display mode)

The MEASURE screen is normally displayed. Pressing the **MENU key** temporarily replaces the MEASURE screen with the "MAIN MENU" branch selection screen. Using the keypad, you can then display other screens to calibrate, configure or test the analyzer. **If the keypad is not used within 30 minutes, except during calibration and while using specific analyzer test/maintenance functions, the display will automatically return to the MEASURE screen.** To display the MEASURE screen at any time, press the **MENU key** once and then the **ESC key** once.

Pressing the ⇩ **or** ⇧ **key** with the MEASURE screen displayed scrolls between other measurements on the bottom auxiliary display line. These MEASURE screen examples illustrate this feature:

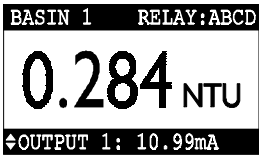



☞ ***NOTE:*** *When the analyzer returns to its normal MEASURE screen mode, the appearing readout is always the version last selected.*

Note that these MEASURE screen examples show "BASIN 1" notations on their top lines, illustrating the analyzer notation feature. To create your own notation, refer to PART THREE, Section 4.2, subheading "ENTER NOTE (top line of MEASURE screen)."

When a measured value is beyond the analyzer measuring range, a series of " + " or " - " screen symbols appear, respectively indicating that the value is above or below range.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 2
MENU STRUCTURE


The analyzer menu tree is divided into three main branches: CALIBRATE, CONFIGURE, and TEST/MAINT. Each main branch is structured similarly in layers with top-level menu screens, related lower-level submenu screens and, in many cases, sub-submenu screens.

Each layer contains an EXIT line or screen to return the display up one level to the previous layer of screens.

☞ **Menu Structure Tip!** For operating convenience, the layers within each main branch are organized with the most frequently used function screens at their beginning, rather than the functions used for initial startup.

2.1 Displaying Main Branch Selection Screen

Press the **MENU key** to always display this main branch selection screen:

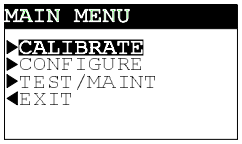



2.2 Displaying Top-level Menu Screens


1. After displaying the main branch selection screen, use the ⇩ **and** ⇧ **keys** to select the line corresponding to the desired branch (shown in reverse video).

2. Press the **ENTER key** to display the top-level menu screen for that branch.

The top-level menu screens for each main branch are:

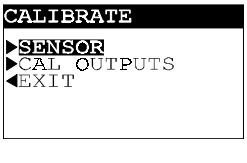

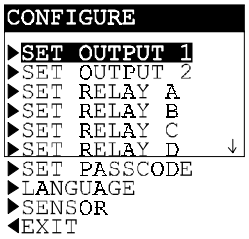

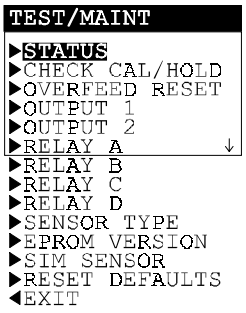

☞ **Menu Structure Tip!** The ▶ symbol pointing at each listed item indicates there is a related lower-level submenu screen, sub-submenu screen or edit/selection screen.

Some menu lists are too long to completely fit on the screen. A ↓ symbol at the bottom right of the list

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

indicates that you can display hidden items by pressing the ⇩ **key**. As you display these items a ↕ symbol appears, indicating that items now hidden above and below the list can be displayed by respectively pressing the ⇧ **or** ⇩ **key**. When a ↑ symbol appears, it indicates you have reached the end of the menu list. You can move back up the list using the ⇧ **key**.

☞ ***NOTE:*** *The ▷ symbol pointing at a listed menu item indicates that this item is not relevant to, nor required for, the previously entered setup choices, and is not available.*

2.3 Displaying Submenu Screens

1. After displaying the top-level menu screen, use the ⇩ **and** ⇧ **keys** to select the line corresponding to the desired lower-level submenu screen.

2. Press the **ENTER key** to display the submenu screen.

When a submenu or sub-submenu screen contains a first line ending with a "?," it is an edit/selection screen. Pressing the ⇩ **or** ⇧ **key** changes the value/choice enclosed by parenthesis (second line on screen).

Example: With this submenu edit screen displayed:

```
SET FUNCTION?
(ALARM          )
```

pressing the ⇩ **key** displays this related choice:

```
SET FUNCTION?
(CONTROL        )
```

2.4 Adjusting Edit/Selection Screen Values

Use the **arrow keys** to edit/change the value/choice enclosed by parenthesis (examples shown above and below).

```
LANGUAGE?
(ENGLISH        )
```

```
SET 4mA VALUE?
(0.236 NTU      )
```

A choice can be changed by simply using the ⇧ **and** ⇩ **keys**. Numerical values can be "coarse" adjusted using ⇦ **and** ⇨ **keys**, and "fine" adjusted using ⇧ **and** ⇩ **keys**. The longer the key is pressed, the faster the number changes.

2.5 Entering (Storing) Edit/Selection Screen Values/Choices

With the desired value/choice displayed, press the **ENTER key** to enter (store) it into the non-volatile analyzer memory. The previous screen will then re-appear.

☞ ***NOTE:*** *You can always press the **ESC key** to abort saving a new setting. The original setting will be retained.*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 3
ADJUSTING DISPLAY CONTRAST


Ambient lighting conditions may make it necessary to adjust the analyzer display contrast to improve visibility. With the MEASURE screen displayed, press and hold the **ENTER key** and simultaneously press the ⇧ **or** ⇩ **key** until attaining the desired contrast.

SECTION 4
ANALYZER CONFIGURATION


☞ ***NOTE:*** *When the passcode feature is enabled (Section 4.5), you must successfully enter the passcode before attempting to enter a configuration setting.*

4.1 Selecting LANGUAGE to Operate Analyzer


The analyzer is equipped to display operating screens in various languages including English, French (Français), German (Deutsche), Spanish (Español), and others. The analyzer is factory-set for English. To change languages:

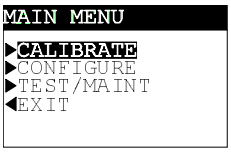1. Press **MENU key** to display 

. Use ⇩ **key** to select the “CONFIGURE” line.

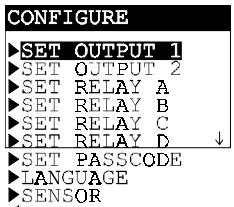2. Press **ENTER key** to display 

. Use ⇩ **key** to select the “LANGUAGE” line.

3. Press **ENTER key** to display 

. Use ⇩ **and** ⇧ **keys** to select a language, and press **ENTER key** to enter it.

☞ ***NOTE:*** *After a language is selected and entered, all screens will be displayed in that language.*


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.2 Configuring Sensor Characteristics


You may want to configure the analyzer to define related sensor characteristics such as measurement units for displayed turbidity, input signal filtering, pulse suppression, and a top line notation for the MEASURE screen to tailor the instrument to your application.

SELECT UNITS


The Accu4™ Low-range Turbidimeter System is factory set to display turbidity in NTUs. However, you may want to select different measurement units:

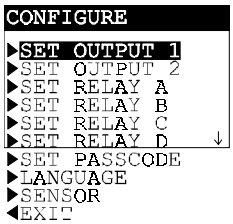

1. With the screen displayed, use ⇩ **key** to select the “SENSOR” line.

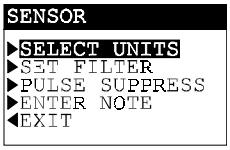


2. Press **ENTER key** to display .

3. With the “SELECT UNITS” line selected, press **ENTER key** to display a screen like 

. Use ⇩ **and** ⇧ **keys** to select the measurement units, which are all equivalent, and press **ENTER key** to enter it:
   - NTU (Nephelometric Turbidity Units)
   - FTU (Formazin Turbidity Units
   - FNU (Formazin Nephelometric Units)
   - TEF (Truebungs Einhelt Formazin -- a German unit)

SET FILTER Time

A time constant (in seconds) can be set to filter or “smooth out” the sensor signal. A minimum value of “0 seconds” has no smoothing effect. A maximum value of “60 seconds” provides maximum smoothing. Deciding what sensor signal filter time to use is a compromise. The higher the filter time, the longer the sensor signal response time will be to a change in the actual turbidity value.

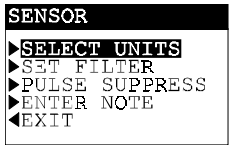

1. With the screen displayed, use ⇩ **key** to select the “SET FILTER” line.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2. Press **ENTER key** to display a screen like
```
SET FILTER?
(30 SECONDS    )
```
. Use **arrow keys** to adjust to a desired filter time, and press **ENTER key** to enter it.

Select PULSE SUPPRESS (on/off)

Sometimes an external interference may occasionally cause the measurement system to provide unstable readings. Common causes include entrained gas bubbles in the sample, and electromagnetic interference (EMI or "electrical noise" pulses). The analyzer has a pulse suppression feature to counteract this condition and stabilize readings. Example: Suppose the analyzer reading is steadily showing 0.284 NTU, then suddenly jumps to 0.396 NTU for a few seconds, and returns to 0.284 NTU. By turning on this feature, the analyzer will perceive this as a temporary upset, "suppressing" most of this pulse change and providing a smoother measurement reading.

1. With the
```
SENSOR
▶SELECT UNITS
▶SET FILTER
▶PULSE SUPPRESS
▶ENTER NOTE
◀EXIT
```
screen displayed, use ⇩ **key** to select the "PULSE SUPPRESS" line.

2. Press **ENTER key** to display a screen like
```
PULSE SUPPRESS?
(OFF           )
```
. Use ⇩ **and** ⇧ **keys** to select the pulse suppress mode (OFF or ON), and press **ENTER key** to enter it.

ENTER NOTE (top line of MEASURE screen)

The top line of the MEASURE screen is factory set to read "ACCU4." This notation can be changed, for example, to "BASIN 1" to tailor the MEASURE screen to the application. The notation is limited to eight characters, which can be a combination of capital letters A through Z, numbers 0 through 9, and spaces.

1. With the
```
SENSOR
▶SELECT UNITS
▶SET FILTER
▶PULSE SUPPRESS
▶ENTER NOTE
◀EXIT
```
screen displayed, use ⇩ **key** to select the "ENTER NOTE" line.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2. Press **ENTER key** to display
```
ENTER NOTE?
([A]CCU4        )
```
. Create the desired notation on the second line:

   A. Starting with extreme left character position, use ⇧ **and** ⇩ **keys** to select the desired first character.

   B. Press ⇨ **key** once to select the next position, and use ⇧ **and** ⇩ **keys** to select its desired character.

   C. Repeat procedure until desired notation is displayed.

3. Press **ENTER key** to enter the displayed notation.

4.3 Configuring Analog Outputs (1 and 2)

The analyzer provides two isolated analog outputs (1 and 2), each representing the measured turbidity. During calibration, the analog outputs can be held, transferred to a preset mA value or remain active. During normal measurement operation, the analog outputs can be held at their last measured values:

- For up to 30 minutes by selecting the “CHECK CAL/ HOLD” line in the TEST/MAINT menu and pressing the **ENTER key**.
- For an indefinite period by locally or remotely connecting the TTL input Terminals 9 and 10 on TB1.

The output state selected during calibration (HOLD, XFER or ACTIVE) always takes precedence over an applied TTL input hold/transfer. For more details on order of precedence for hold functions, refer to PART TWO, Section 3.4.


☞ ***NOTE:*** *When using the HART communication option, a digital signal is encoded onto the 4-20 mA analog Output 1 signal. In a HART SINGLE MODE wiring configuration, Output 1 remains available for normal use. However, in a HART MULTI-DROP wiring configuration, Output 1 becomes dedicated to that function and cannot be used. See PART THREE, Section 8 for more HART communication information.*

These instructions configure Output 1. (Configure Output 2 in the same way using its respective menu screens.)


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SET 0/4 and 20 mA VALUES (range expand)

Turbidity values can be set to define the endpoints at which the 0/4 mA and 20 mA output values are desired.

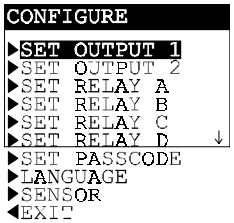


1. With the top-level menu screen displayed and the "SET OUTPUT 1" line selected, press **ENTER key** to display

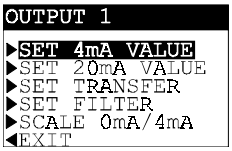


.

2. With the "SET 4 mA VALUE" line selected, press **ENTER key** to display a screen like




. Use **arrow keys** to set the value at which 0/4 mA is desired, and press **ENTER key** to enter it.

3. After the

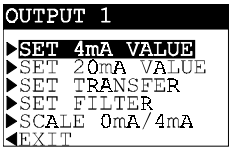

screen re-appears, use ⇩ **key** to select the "SET 20 mA VALUE" line.

4. Press **ENTER key** to display a screen like




. Use **arrow keys** to set the value at which 20 mA is desired, and press **ENTER key** to enter it.

☞ ***NOTE:*** *If the same values are set for 0/4 mA and 20 mA, the output automatically goes to, and remains at, 20 mA.*

SET TRANSFER Value (mA)

Each analog output is normally active, responding to the measured turbidity value. However, during calibration you can transfer (XFER) each output to a preset value to operate a control element by an amount corresponding to that value. To set a mA transfer value for an analog output to suit your application:

1. With the

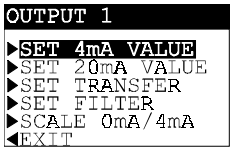

screen displayed, use ⇩ **key** to select the "SET TRANSFER" line.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2. Press **ENTER key** to display a screen like
```
SET TRANSFER?
(4.33 mA      )
```
. Use **arrow keys** to set to a desired transfer value, and press **ENTER key** to enter it.

SET FILTER Time

A time constant (in seconds) can be set to filter or "smooth out" the output signal. A minimum value of "0 seconds" has no smoothing effect. A maximum value of "60 seconds" provides maximum smoothing. Deciding what output filter time to use is a compromise. The higher the filter time, the longer the output signal response time will be to a change in the measured turbidity.

☞ ***NOTE:*** *The output filter time setting combines with the sensor signal filter time setting, providing an additive delay in output response to the actual reading.*

1. With the
```
OUTPUT 1
▶SET 4mA VALUE
▶SET 20mA VALUE
▶SET TRANSFER
▶SET FILTER
▶SCALE 0mA/4mA
◀EXIT
```
screen displayed, use ⇩ **key** to select the "SET FILTER" line.

2. Press **ENTER key** to display a screen like
```
SET FILTER?
(0 SECONDS    )
```
. Use **arrow keys** to adjust to a desired filter time, and press **ENTER key** to enter it.

Select SCALE 0 mA/ 4 mA (low endpoint)

Select each output to be 0-20 mA or 4-20 mA.

1. With the
```
OUTPUT 1
▶SET 4mA VALUE
▶SET 20mA VALUE
▶SET TRANSFER
▶SET FILTER
▶SCALE 0mA/4mA
◀EXIT
```
screen displayed, use ⇩ **key** to select the "SCALE 0mA/4mA" line.

2. Press **ENTER key** to display
```
SCALE 0mA/4mA?
(4mA           )
```
. Use ⇩ **and** ⇧ **keys** to select the minimum value for the analog output (0 mA or 4 mA), and press **ENTER key** to enter it.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.4 Configuring Relays (A, B, C, and D)

The analyzer is equipped with four electromechanical relays (A, B, C, and D). Each relay can be set to function as a CONTROL, ALARM or STATUS relay. For details on each relay function, see subsection “SET FUNCTION Mode.”

During calibration, CONTROL and ALARM relays can be held at their present on/off states, transferred to preset on/off states, or remain active. During normal measurement operation, CONTROL and ALARM relays can be held at their present on/off states:

- For up to 30 minutes by selecting the “CHECK CAL/ HOLD” line in the TEST/ MAINT menu and pressing the **ENTER key**.
- For an indefinite period by locally or remotely connecting the TTL input Terminals 9 and 10 on TB1.

The output state selected during calibration (HOLD, XFER or ACTIVE) always takes precedence over an applied TTL input hold/transfer. For more details on order of precedence for hold functions, refer to PART TWO, Section 3.4.

These instructions configure Relay A. (Configure Relays B, C, and D in the same way using their respective menu screens.)

SET FUNCTION Mode (alarm, control or status)

Each relay can be selected to function as a:

- **ALARM** relay (with separate high and low alarm points and deadbands) that operates in response to the measured turbidity.
- **CONTROL** relay (with phasing, setpoint, deadband, and overfeed timer) that operates in response to the measured turbidity.
- **STATUS** relay that operates only in response to selected system diagnostic conditions. It can be configured for:

  FAIL mode -- sets STATUS relay to activate when there is a FAIL condition (analyzer, light source or detector) or a sensor CHAMBER UNKNOWN condition.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

WARN mode -- sets STATUS relay to activate only when there is a sensor flow CHAMBER DIRTY condition.


ALL mode -- sets STATUS relay to activate when there is any abnormal system condition (any FAIL condition, or sensor CHAMBER DIRTY or UNKNOWN condition).


A "WARNING CHECK STATUS" message automatically flashes on the MEASURE screen whenever the analyzer detects any of these system diagnostic conditions:

- ANALYZER FAIL
- CHAMBER DIRTY
- CHAMBER UNKNOWN
- SOURCE 1 FAIL
- SOURCE 2 FAIL
- DETECT 1 FAIL
- DETECT 2 FAIL


To determine the condition causing the warning message, display the "STATUS" screens in the TEST/ MAINT menu branch. For more details, see PART THREE, Section 6.1.

Relay D is factory-set to function as a STATUS relay but can be configured as a CONTROL or ALARM relay. To set the relay function:

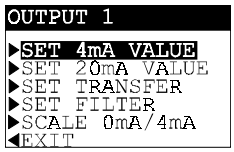
1. With the 

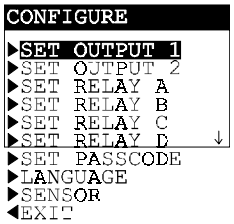screen displayed, press **ESC key** once to display 

.

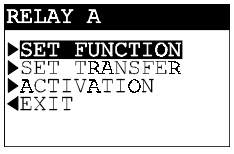2. Use ⇩ **key** to select the "SET RELAY A" line, and press **ENTER key** to display 

.


3. With the "SET FUNCTION" line selected, press **ENTER key** to display a screen like 

. Use ⇩ **and** ⇧ **keys** to select the function for relay operation (ALARM, CONTROL, or STATUS), and press **ENTER key** to enter it.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SET TRANSFER Mode (relay on or off)

Normally, each CONTROL or ALARM relay is active, responding to the measured turbidity. During calibration, however, you can transfer (XFER) each relay to a preset on/off state to suit your application requirements:

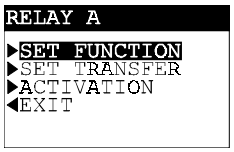

1. With the screen displayed, use ⇩ **key** to select the "SET TRANSFER" line.

2. Press **ENTER key** to display a screen like 

. Use ⇩ **and** ⇧ **keys** to select a desired relay transfer state (DE-ENERGIZED or ENERGIZED), and press **ENTER key** to enter it.

ACTIVATION (configuration values)

The group of configuration settings available to a relay is dependent on its selected function mode (ALARM, CONTROL, or STATUS). TABLE A describes all relay configuration settings, categorized by relay function mode:

TABLE A -- Relay Configuration Settings

Setting	Description
For ALARM Relay	
Low Alarm	Sets the value at which the relay will turn on in response to decreasing measured value.
High Alarm	Sets the value at which the relay will turn on in response to increasing measured value.
Low Deadband	Sets the range in which the relay remains on after the measured value increases above the low alarm value.
High Deadband	Sets the range in which the relay remains on after the measured value decreases below the high alarm value.
Off Delay	Sets a time (0-300 seconds) to delay the relay from normally turning off.
On Delay	Sets a time (0-300 seconds) to delay the relay from normally turning on.
For CONTROL Relay	
Phase	A "high" phase assigns the relay setpoint to respond to increasing measured value; conversely, a "low" phase assigns the relay setpoint to respond to decreasing measured value.
Setpoint	Sets the value at which the relay will turn on.
Deadband	Sets the range in which the relay remains on after the measured value decreases below the setpoint value (high phase relay) or increases above the setpoint value (low phase relay).
Overfeed Timer	Sets the time (0-999.9 min.) to limit how long the relay can remain "on." For more details on overfeed timer operation, see PART THREE, Section 7.

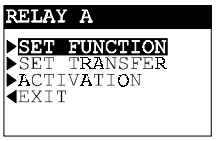
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TABLE A -- Relay Configuration Settings (continued)	
Setting	Description
For CONTROL Relay (continued)	
Off Delay	Sets a time (0-300 seconds) to delay the relay from normally turning off.
On Delay	Sets a time (0-300 seconds) to delay the relay from normally turning on.
For STATUS Relay	
Fail	Sets the relay to turn on only when there is a FAIL condition (analyzer, light source or detector) or a sensor CHAMBER UNKNOWN condition.
Warn	Sets the relay to turn on only when there is a sensor flow CHAMBER DIRTY condition.
All	Sets the relay to turn on when there is any abnormal system condition (any FAIL condition, or sensor flow CHAMBER DIRTY or UNKNOWN condition).


☞ ***NOTE:*** *It is possible to enter values that always keep a relay active or inactive. To avoid this, be sure that "low" values are lower than "high" values.*

The "off delay" and "on delay" settings, available to CONTROL or ALARM function relays, may be beneficial in eliminating process "overshoot" when there are long process pipe runs or delays in mixing.

To set relay configuration values (ACTIVATION):

1. With the 

screen displayed, use ⇩ **key** to select the "ACTIVATION" line.

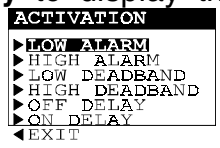2. Press **ENTER key** to display the relay ACTIVATION screen. (Example: 

for an ALARM relay.)

3. Use ⇩ **key** to select the appropriate relay setting line, and press **ENTER key** to display its corresponding edit/selection screen.

4. Use the same basic keypad operations described in previous setup procedures to enter the desired value for the displayed relay activation setting.

5. Repeat this procedure for each relay activation setting.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.5 SET PASSCODE (feature enabled/ disabled)


The analyzer has a passcode feature to restrict access to configuration and calibration settings to only authorized personnel.

- **DISABLED:** With passcode feature disabled, all configuration settings can be displayed and changed, and the analyzer can be calibrated.


- **ENABLED:** With passcode feature enabled, all configuration settings can be displayed -- but they cannot be changed, and the CALIBRATE and TEST/MAINT menus cannot be accessed without the passcode. When you attempt to change a setting in the CONFIGURE menu by pressing the **ENTER key**, a displayed notification requests passcode entry. A valid passcode entry saves the changed setting and returns the display to the "MAIN MENU" branch selection screen. An incorrect passcode entry causes the display to momentarily show an error notification before returning to the "MAIN MENU" branch selection screen. There is no limit on attempts to enter a valid passcode.

The passcode is factory-set to "**3 4 5 6**." It cannot be changed.


To enable or disable the passcode feature:

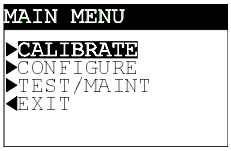1. Press **MENU key** to display 

. Use ⇩ **key** to select the "CONFIGURE" line.

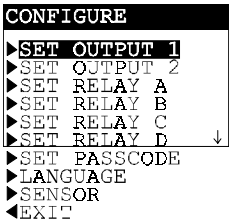2. Press **ENTER key** to display 

. Use ⇩ **key** to select the "SET PASSCODE" line.

3. Press **ENTER key** to display a screen like 

. Use ⇩ **and** ⇧ **keys** to select the desired passcode mode (DISABLED or ENABLED), and press **ENTER key** to enter it.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.6 Configuration Setting Summary

TABLE B lists all configuration settings and their entry ranges/ choices and factory defaults, categorized by basic functions.

TABLE B -- Analyzer Configuration Settings (Ranges/Choices and Defaults)

Displayed Screen Title	Entry Range or Choices (where applicable)	Factory Default	Your Setting
LANGUAGE Setting			
LANGUAGE?	ENGLISH, FRENCH, GERMAN, SPANISH, etc.	ENGLISH	
SENSOR Settings			
SELECT UNITS?	NTU, FTU, FNU or TEF	NTU	
SET FILTER?	0-60 seconds	30 seconds	
PULSE SUPPRESS?	OFF or ON	OFF	
ENTER NOTE?	Replace ACCU4 with up to eight characters	ACCU4	
OUTPUT Settings			
SET 4mA VALUE?	0.000-100.0 NTU	0.000 NTU	
SET 20mA VALUE?	0.000-100.0 NTU	100.0 NTU	
SET TRANSFER?	0-20 mA or 4-20 mA	Both Outputs: 12 mA	
SET FILTER?	0-60 seconds	Both Outputs: 0 seconds	
SCALE 0mA/4mA?	0 mA or 4 mA	Both Outputs: 4 mA	
RELAY Settings			
Settings Common to ALARM and CONTROL Relays:			
SET FUNCTION?	ALARM, CONTROL or STATUS	Relays A and B: ALARM Relay C: STATUS (WARN setting Relay D: STATUS (FAIL setting)	
SET TRANSFER?	DE-ENERGIZED or ENERGIZED	Relays A and B: DE-ENERGIZED	
OFF DELAY?	0-300 seconds	0 seconds	
ON DELAY?	0-300 seconds	0 seconds	
Settings for only ALARM Relays:			
LOW ALARM?	0.000-100.0 NTU	0.000 NTU	
HIGH ALARM?	0.000-100.0 NTU	100.0 NTU	
LOW DEADBAND?	0-10% of meas. range in which set point resides	0.000 NTU	
HIGH DEADBAND?	0-10% of meas. range in which set point resides	0.000 NTU	
Settings for only CONTROL Relays:			
PHASE?	HIGH or LOW	Relays A and B: HIGH	
SET SETPOINT?	0.000-100.0 NTU	100.0 NTU	
DEADBAND?	0-10% of meas. range in which set point resides	0.000 NTU	
OVERFEED TIMER?	0-999.9 minutes	0 minutes	
Setting for only STATUS Relays:			
ACTIVATION?	FAIL, WARN or ALL	STATUS Relays A and B: ALL STATUS Relay C: WARN STATUS Relay D: FAIL	
PASSCODE Setting			
SET PASSCODE?	DISABLED or ENABLED	DISABLED	
TEST/MAINT Simulation Function Setting			
SIM SENSOR?	0.000-100.0 NTU	Present measured turbidity value	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 5
ANALYZER CALIBRATION

5.1 Important Information

The Accu4™ Low-range Turbidimeter System can be calibrated using one of three methods:

- PRIMARY CAL: Requires filling sensor with a primary standard (formazin suspension) and entering its known value.
- CUBE CAL: Requires inserting an optional Cal-Cube™ assembly into the sensor flow chamber and entering its factory-certified standard value.
- SAMPLE CAL: Requires obtaining a sample, determining its value by laboratory analysis or calibrated portable meter, and entering that known value.

With an optional GLI Cal-Cube™ assembly you can conveniently verify system calibration at any time, regardless of the method used. Refer to PART THREE, Section 6.2 for complete details.

☞ ***NOTE:*** *The sensor is equipped with long-lasting light sources and detectors. If these components are eventually replaced, always re-calibrate the system using the appropriate method to ensure measurement accuracy. Also, always re-calibrate if the cable length between sensor and analyzer changes.*

The mA value for each analog output can also be calibrated (Section 5.5).

☞ ***NOTE:*** *When the passcode feature is enabled (Section 4.5), you must successfully enter the passcode before attempting to calibrate the analyzer.*

An in-progress calibration can always be aborted by pressing the ESC key. *After "ABORT: YES?" screen appears, do one of the following:*

- *Press **ENTER key** to abort. After the "CONFIRM ACTIVE?" screen appears, press **ENTER key** to return the analog outputs and relays to their active states (MEASURE screen appears).*
- *Press ⇧ **or** ⇩ **key** to choose the "ABORT: NO?" screen, and press **ENTER key** to continue calibration.*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



Calibration Tip! If a "CONFIRM FAILURE?" screen appears during calibration, press **ENTER key** to confirm. Then, use ⇧ **or** ⇩ **key** to select between "CAL: EXIT?" or "CAL: REPEAT?" and do one of the following:

- With "(CAL: EXIT)" selected, press **ENTER key**. After the "CONFIRM ACTIVE?" screen appears, press **ENTER key** to return the analog outputs and relays to their active states (MEASURE screen appears).
- With "(CAL: REPEAT)" selected, press **ENTER key** to repeat calibration.

5.2 PRIMARY CAL Method (requires formazin suspension)

This calibration method requires you to first fill the sensor flow chamber with a primary standard (formazin suspension) and then enter its known value. Since formazin is the recommended primary standard, it is used in the instructions for this method.

Preparing Formazin Solution

Prepare 2000 milliliters of **20 NTU or higher** formazin suspension (USEPA requires 40 NTU to comply with GLI Method 2) using the following laboratory procedure:

1. Make the dilution water:

   To obtain high-purity, low turbidity water for dilutions, pass distilled water through a 0.2 micron filter. Rinse the flask at least twice with filtered water before collecting the dilution water.

2. Make the stock turbidity suspension:

WARNING:

HYDRAZINE SULFATE IS A KNOWN CARCINOGEN. TAKE PRECAUTIONS TO AVOID INHALATION, INGESTION, AND SKIN CONTACT.

   A. **SOLUTION 1:** Dissolve 5.00 grams of reagent-grade hydrazine sulfate, $(NH_2)_2H_2SO_4$, in distilled water and dilute to 500 ml in a volumetric flask.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

B. **SOLUTION 2:** Dissolve 50.00 grams of reagent-grade hexamethylenetetramine, $(CH_2)_6N_4$, in distilled water and dilute to 500 ml in a volumetric flask.

C. In a flask, mix 50.0 ml of SOLUTION 1 and 50.0 ml of SOLUTION 2. Let this mixture stabilize for 24 hours at 25°C, ± 3°C. The resultant mixture is a 4000 NTU stock turbidity suspension. Transfer the stock suspension to an amber glass (or other UV-light blocking) bottle for storage. Make dilutions from this stock suspension. When properly stored, this stock suspension should remain stable for up to one year.

3. Make the standard formazin suspension for calibration:
   - **20 NTU Standard Suspension:** Use filtered dilution water to dilute 10 ml of 4000 NTU stock suspension to 2000 ml.
   - **40 NTU Standard Suspension:** Use filtered dilution water to dilute 20 ml of 4000 NTU stock suspension to 2000 ml.




Calibration Tip! Use only freshly prepared, properly stored, and carefully measured formazin suspension. Formazin tends to flocculate over time, causing inaccurate readings. Formazin suspensions must be equally distributed within the flask. Gently swirl the flask several times. Do not vigorously shake it since this could introduce air bubbles that may falsely increase readings.

Filling Sensor


1. **Recommendation:** Before filling the sensor with a formazin suspension (primary standard), hold the analyzer analog outputs and relays at their present values/on-off states or transfer them to preset values/states to ensure a safe condition for any connected devices.

A. Press **MENU key** to display

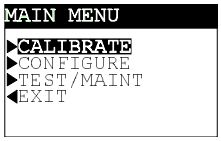


.

B. With the “CALIBRATE” line selected (reverse video), press **ENTER key** to display

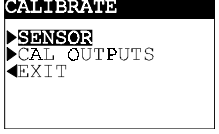


.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

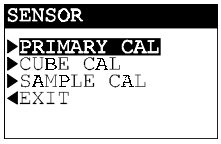C. With the "SENSOR" line selected, press **ENTER key** to display 

.

D. With the "PRIMARY CAL" line selected, press **ENTER key** to display 

. Use ⇧ **or** ⇩ **key** to select the status for analog outputs (and relays) during calibration, and press **ENTER key** to enter it:

- **HOLD OUTPUTS:** Holds their present values.
- **XFER OUTPUTS:** Transfers to preset values.
- **ACTIVE OUTPUTS:** Responds to measured turbidity.

2. Turn the sensor's 3-way valve handle to the **CALIBRATE** position as shown by the label at the base of the flow chamber (⇦ points towards funnel hose).

3. If the recommended isolation valve is used downstream of the sensor OUTLET, open the valve to atmospheric pressure to improve draining.

4. Drain any remaining process from the sensor by removing the funnel from its holder and lowering it below the sensor height. When drained, replace funnel into holder.

5. Remove the baffle assembly from the flow chamber and rinse it with clean water.

6. Clean the inside of the flow chamber and the light source and detector windows with a soft, clean, damp cloth.

7. Re-install the baffle assembly into the flow chamber, and replace and tighten the flow chamber cover.

☞ ***NOTE:*** *The following steps 8, 9, and 10 ensure that only pure, primary standard formazin suspension is being measured in the sensor flow chamber.*

8. Rinse the sensor's internal tubing with the primary standard formazin suspension by pouring it into the funnel until the suspension can be seen in the clear SIGHT TUBE. Now drain this rinse suspension in the same way as described in step 4.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

9. Rinse sensor tubing a second time with another volume of primary standard formazin suspension and drain again (a repeat of step 5).

10. Fill sensor tubing a third time with another volume of primary standard formazin suspension until it can be seen in the clear SIGHT TUBE.

Entering Value

After the sensor is properly filled, enter the exact known value of the formazin suspension.

1. With the `PRIMARY CAL:`
`SAMPLE READY?` screen displayed and the sensor filled with primary standard formazin suspension, press **ENTER key** to confirm. This active `XX.XXX NTU`
`READING STABLE?` screen appears showing the measurement reading.

2. Wait for the reading to stabilize which may take up to 15 minutes. Then press **ENTER key**. The "PLEASE WAIT" screen may appear if the reading is still too unstable. After the reading has stabilized, this static `PRIMARY CAL?`
`(XX.XX NTU )` screen appears showing the "last-entered" calibration value.

3. Use **arrow keys** to adjust this displayed value to exactly match the known NTU value of the primary standard formazin suspension, and press **ENTER key** to enter it and complete calibration ("PRIMARY CAL: CONFIRM CAL OK?" screen appears).

Resuming Operation

To resume normal measurement operation:

1. Drain the sensor flow chamber as described in the previous "Filling Sensor" subsection in step 4.

2. Turn the sensor's 3-way valve handle to the **OPERATE** position as shown by the label at the base of the flow chamber (⇨ points towards INLET fitting).

3. If using the recommended isolation valve downstream of the Model 8320 sensor OUTLET fitting, make sure it is open to allow process flow.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4. Press **ENTER key** to display the active measurement reading on the "CONFIRM ACTIVE?" output status screen. When the reading corresponds to the actual typical process value, press **ENTER key** again to return the analog outputs and relays to their active states (MEASURE screen appears).

This completes "PRIMARY CAL" calibration. The system is now in its normal measurement mode.


5.3 CUBE CAL Method (requires optional Cal-Cube™ assembly)

This calibration method requires you to first insert an optional GLI Cal-Cube™ assembly into the sensor flow chamber, and then enter its known value. This unique turbid glass cube has a factory-certified, 100% reproducible NTU calibration value that is not affected by light, temperature or aging.

Inserting Cal-Cube™ Assembly


1. **Recommendation:** Before inserting the Cal-Cube™ assembly into the sensor, hold the analyzer analog outputs and relays at their present values/on-off states or transfer them to preset values/states to ensure a safe condition for any connected devices.

   A. Press **MENU key** to display

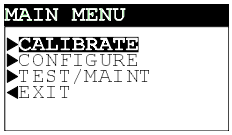
   .

   B. With the "CALIBRATE" line selected (shown in reverse video), press **ENTER key** to display


   .

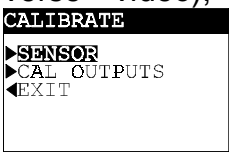   C. With the "SENSOR" line selected, press **ENTER key** to display

   .

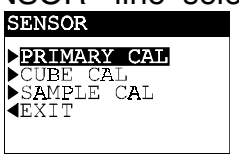   D. Use ⇩ **key** to select the "CUBE CAL" line and press **ENTER key** to display

   . Use ⇧ **or** ⇩ **key** to select the status for the analog outputs (and relays) during calibration, and press **ENTER key** to enter it:

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- **HOLD OUTPUTS:** Holds their present values.
- **XFER OUTPUTS:** Transfers to preset values.
- **ACTIVE OUTPUTS:** Responds to measured turbidity.

2. Turn the sensor's 3-way valve handle to the **CALIBRATE** position as shown by the label at the base of the flow chamber (⇦ points towards funnel hose).

3. If the recommended isolation valve is used downstream of the sensor OUTLET, open the valve to atmospheric pressure to improve draining.

4. Drain any remaining process from the sensor by removing the funnel from its holder and lowering it below the sensor height. When drained, replace funnel into holder.

5. Remove the flow chamber cover and baffle assembly from the Model 8320 sensor flow chamber. Refer to Figure 4-1 (standard sensor design) or Figure 4-2 (high pressure sensor design) for assembly details.

6. Wipe away all moisture from inside the chamber with a clean, dry, soft cloth.

7. Wipe the light source and detector windows clean using a clean, dry, soft cloth.

8. Note the factory-certified value on the Cal-Cube™ assembly, and insert the cube into the sensor in place of the baffle assembly. Without replacing the flow chamber cover, close the sensor enclosure door.

Entering Value

After the Cal-Cube™ assembly is properly inserted in the sensor flow chamber, enter its factory-certified value.

1. With the `CUBE CAL: SAMPLE READY?` screen displayed and the Cal-Cube™ assembly inserted in the sensor, press **ENTER key** to confirm. This active `XX.XXX NTU READING STABLE?` screen appears showing the measurement reading.

2. Wait for the reading to stabilize which may take up to 15 minutes. Then press **ENTER key**. The "PLEASE

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

WAIT" screen may appear if the reading is still too unstable. After the reading has stabilized, this static

```
CUBE CAL?
(X.XXX NTU      )
```

screen appears showing the "last-entered" calibration value.

3. Use **arrow keys** to adjust this displayed value to exactly match the factory-certified value of the Cal-Cube™ assembly, and press **ENTER key** to enter it and complete calibration (CUBE CAL: CONFIRM CAL OK?" screen appears).

Resuming Operation

To resume normal measurement operation:

1. Remove the Cal-Cube™ assembly, re-install the baffle assembly, and replace the flow chamber cover. Make sure the cover O-ring is well lubricated with the supplied silicone lubricant. If not, the cover may be difficult to remove the next time.

2. Turn the sensor's 3-way valve handle to the **OPERATE** position as shown by the label at the base of the flow chamber (⇨ points towards INLET fitting).


3. Press **ENTER key** to display the active measurement reading on the "CONFIRM ACTIVE?" output status screen. When the reading corresponds to the actual typical process value, press **ENTER key** again to return the analog outputs and relays to their active states (MEASURE screen appears).

This completes "CUBE CAL" calibration. The system is now ready for normal measurement operation.


5.4 SAMPLE CAL Method (requires sample with value determined by laboratory analysis or portable meter)

This calibration method requires you to first obtain a process sample, determine its NTU value using laboratory analysis or a comparison reading, and then enter its known value.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

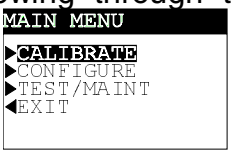1. With the process flowing through the sensor, press **MENU key** to display 


.

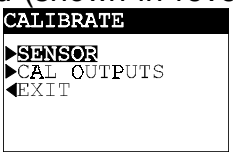2. With the "CALIBRATE" line selected (shown in reverse video), press **ENTER key** to display 

.

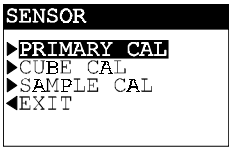
3. With the "SENSOR" line selected, press **ENTER key** to display 


.

4. Use ⇩ **key** to select the "SAMPLE CAL" line and press **ENTER key** to display 


. Use ⇧ **or** ⇩ **key** to select the status for the analog outputs (and relays) during calibration, and press **ENTER key** to enter it:

   - **HOLD OUTPUTS:** Holds their present values.
   - **XFER OUTPUTS:** Transfers to preset values.
   - **ACTIVE OUTPUTS:** Responds to measured turbidity.

5. With the 


screen displayed and the process flowing through the sensor, press **ENTER key** to confirm. This active 

screen appears showing the measurement reading.

6. Wait for the reading to stabilize which may take up to 15 minutes. Then press **ENTER key**. The "PLEASE WAIT" screen may appear if the reading is still too unstable. After the reading has stabilized, this static 

screen appears showing the "last-entered" calibration value.

7. Obtain a process sample and determine its NTU value using laboratory analysis or a calibrated portable meter.

8. With the static 

screen displayed, use **arrow keys** to adjust the displayed value to exactly

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

match the known NTU value of the process sample, and press **ENTER key** to enter it and complete calibration ("SAMPLE CAL: CONFIRM CAL OK?" screen appears).

9. Press **ENTER key** to display the active measurement reading on the "CONFIRM ACTIVE?" output status screen. When the reading corresponds to the actual typical process value, press **ENTER key** again to return the analog outputs and relays to their active states (MEASURE screen appears).

This completes "SAMPLE CAL" calibration.


5.5 Analog Outputs (1 and 2) Calibration

The analyzer analog outputs are factory-calibrated. However, they can be re-calibrated if desired. **These instructions calibrate Output 1.** (Calibrate Output 2 in the same way using its respective menu screens.)

☞ ***NOTE:*** *When the passcode feature is enabled (Section 4.5), you must successfully enter the passcode before attempting to calibrate the analog outputs.*


When an output is configured to be 0-20 mA, the analyzer will calibrate the 4 mA and 20 mA values (not the 0 mA value). Also, the analyzer adjustment range for output values during calibration is ± 2 mA.

1. Press **MENU key** to display

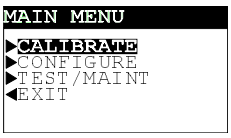


.

2. With the "CALIBRATE" line selected (shown in reverse video), press **ENTER key** to display

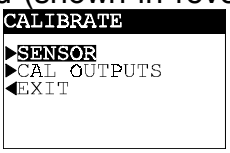


.

3. Use ⇩ **key** to select the "CAL OUTPUTS" line, and press **ENTER key** to display

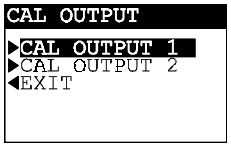


.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

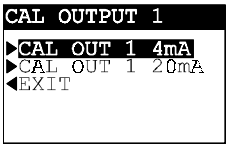4. With the "CAL OUTPUT 1" line selected, press **ENTER key** to display 


.


5. With the "CAL OUT 1 4 mA" line selected, press **ENTER key** to display a screen like 

. The displayed value is "counts" -- not mA -- that dynamically change as the output is adjusted.

6. Use a calibrated digital multimeter to measure Output 1's actual minimum value provided at Terminals 2 and 3 on TB1.

7. Use **arrow keys** to adjust Output 1's minimum value to read exactly "4.00 mA" on the digital multimeter -- not the analyzer display, and press **ENTER key** to complete calibration of the minimum endpoint value.

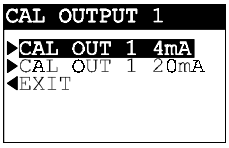8. After the 

screen re-appears, press ⇩ **key** once to select the "CAL OUT 1 20 mA" line, and press **ENTER key** to display a screen like 

. Once again the displayed value is "counts" -- not mA -- that dynamically change as the output is adjusted.

9. Use a calibrated digital multimeter to measure Output 1's actual maximum value.

10. Use **arrow keys** to adjust Output 1's maximum value to read exactly "20.00 mA" on the digital multimeter -- not the analyzer display, and press **ENTER key** to complete calibration of the maximum endpoint value.

This completes analog Output 1 calibration.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 6
TEST/MAINTENANCE


The analyzer has TEST/MAINT menu screens to:

- Check operating status of analyzer, sensor, and relays.
- Check calibration/hold analog outputs at present values.
- Manually reset all relay overfeed timers at once.
- Provide analog output test signals to confirm operation of connected devices.
- Test relay operation (energize or de-energize).
- Identify turbidity sensor type.
- Identify analyzer EPROM version.
- Simulate a turbidity measurement signal to exercise the measurement loop.
- Reset all configuration values to factory-set defaults.

6.1 STATUS Check (analyzer, sensor, and relays)


The system diagnostic capabilities of the analyzer enable you to check the operating status of the analyzer, sensor, and relays. The MEASURE screen will flash the “WARNING CHECK STATUS” message when a system diagnostic “fail” condition has been detected. To determine the condition causing the warning, display the “STATUS” screens:

1. Press **MENU key** to display

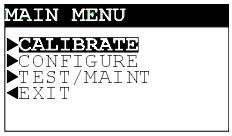

, and use ⇩ **key** to select the “TEST/MAINT” line.

2. Press **ENTER key** to display

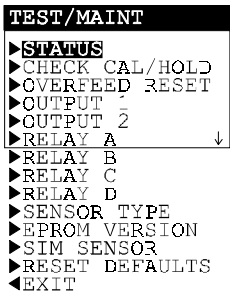

.

3. With the “STATUS” line selected, press **ENTER key** to display the “STATUS: ANALYZER OK” screen. This

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

screen confirms that the analyzer is operating properly. If "FAIL" appears, it may mean:

- EPROM failure (data is not valid).
- Scaling card not present or not recognized.
- Analog-to-digital converter not responding.
- RAM failure.
- Internal serial communications failure.

4. Press **ENTER key** once to view the "STATUS: SENSOR" screen. Sensor status indications can be:
   - CHAMBER OK -- Sensor is operating properly.
   - CHAMBER DIRTY -- Sensor flow chamber needs cleaning. See PART FOUR, Section 1.1 for details.
   - CHAMBER UNKNOWN -- Sensor may be:
     a) Disconnected or incorrectly wired to analyzer.
     b) Providing a very noisy measurement signal.
     c) Inoperative due to disconnected or incorrectly wired light source or detector.
     d) Inoperative due to bad signal processing module.

5. With the "STATUS: SENSOR" screen displayed, press **ENTER key** once to view the "STATUS: SOURCE 1" screen. Press **ENTER key** again to view the "STATUS: SOURCE 2" screen. Source status indications can be:
   - OK -- LED light source is operating properly.
   - FAIL -- LED light source may be disconnected, incorrectly wired, or inoperative. See PART FOUR, Section 1.3 for replacement details.

6. With the "STATUS: SOURCE 2" screen displayed, press **ENTER key** once to view "STATUS: DETECT 1" screen. Press **ENTER key** again to view the "STATUS: DETECT 2" screen. Detector status indications can be:
   - OK -- Detector is operating properly.
   - FAIL -- Detector may be disconnected, incorrectly wired, or inoperative. See PART FOUR, Section 1.3 for replacement details.

7. With the "STATUS: DETECT 2" screen displayed, press **ENTER key** once to view the "STATUS: RLY A" screen. Subsequent **ENTER key** presses display status screens for Relay B, C, and D. Status indications can be:


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Status Indication	Meaning
ACTIVE (Relay energized; annunciator is on)	Control Relay: Measured value exceeds setpoint. Alarm Relay: Measured value exceeds low or high alarm point. Status Relay: Selected system diagnostic condition has been detected.
INACTIVE (Relay not energized; annunciator is off)	Control Relay: Measured value does not exceed setpoint. Alarm Relay: Measured value does not exceed low or high alarm point. Status Relay: Analyzer has not detected selected system diagnostic condition.
TIMEOUT (Relay not energized; annunciator blinks)	Control Relay: Overfeed timer has timed out; manually reset it. ***NOTE:*** *TIMEOUT only applies to control relays.*
COUNTING (Relay energized; annunciator is on)	Control Relay: Overfeed timer is counting, but has not timed out. ***NOTE:*** *COUNTING only applies to control relays.*

8. To end status checking, press **ESC key** or **ENTER key** (display returns to TEST/MAINT top-level menu screen).

6.2 CHECK CAL/HOLD Outputs

The CHECK/CAL HOLD function conveniently checks Accu4™ system calibration while holding the analog outputs at their last measured values for up to 30 minutes to suspend operation of any connected devices. However, this requires using an optional Cal-Cube™ assembly.

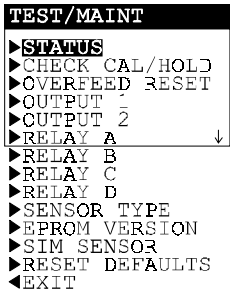

1. With the screen displayed, use ⇩ **key** to select the “CHECK CAL/HOLD” line.

2. Press **ENTER key** to <u>immediately</u> <u>hold</u> the analog outputs (“OUTPUTS ON HOLD” screen appears, acknowledging hold is applied while showing the <u>active</u> measurement reading).

☞ ***NOTE:*** *If the keypad is not used within 30 minutes, the analog outputs will automatically change back to their active states and the display will return to the MEASURE screen.*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3. Temporarily insert the Cal-Cube™ assembly:

   A. Turn sensor's 3-way valve handle to the **CALIBRATE** position as shown by the label at the base of the flow chamber (⇦ points towards funnel hose).

   B. If the recommended isolation valve is used downstream of the sensor OUTLET, open the valve to atmospheric pressure to improve draining.

   C. Drain any remaining process from sensor by removing funnel from its holder and lowering it below the sensor height. When drained, replace funnel into holder.

   D. Remove the flow chamber cover and baffle assembly from the sensor flow chamber. Refer to Figure 4-1 (standard sensor design) or Figure 4-2 (high pressure sensor design) for assembly details.

   E. Wipe away all moisture from inside the chamber with a clean, dry, soft cloth.

   F. Note the factory-certified value on the Cal-Cube™ assembly, and insert the cube into the sensor in place of the baffle assembly. Without replacing the flow chamber cover, close sensor enclosure door.

4. Check analyzer reading. If it is within ± 10% of the Cal-Cube™ value, the system is "in calibration." If not, recalibrate (see PART THREE, Section 5.2, 5.3 or 5.4).

5. After checking calibration, remove the Cal-Cube™ assembly and re-install the baffle assembly.

6. Replace the flow chamber cover. Make sure the cover O-ring is well lubricated with the supplied silicone lubricant. If not, the cover may be difficult to remove the next time.


7. Turn the sensor's 3-way valve handle to the **OPERATE** position as shown by the label at the base of the flow chamber (⇨ points towards INLET fitting).

8. Press **ENTER key** to display the active measurement reading on the "CONFIRM ACTIVE?" output status screen. When the reading corresponds to the actual typical process value and is stable, press **ENTER key** again to release the output hold.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6.3 OVERFEED RESET (relay timers)

The OVERFEED RESET function manually resets all overfeed timers at once. When a relay overfeed timer "times out," as indicated by its blinking annunciator, the timer must be manually reset. After reset, the relay annunciator stops blinking.

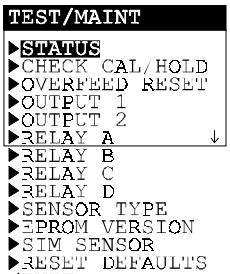


1. With the screen displayed, use ⇩ **key** to select the "OVERFEED RESET" line.

2. Press **ENTER key** to display "OVERFEED RESET" screen. To reset all relay overfeed timers at once, press ENTER key again ("OVERFEED RESET: DONE" screen appears, acknowledging reset has occurred.)

3. To return to the TEST/MAINT top-level menu screen, press **ESC key** or **ENTER key**.


6.4 OUTPUT (1 and 2) Analog Test Signals

The OUTPUT function provides analog output test signals of a desired mA value to confirm operation of connected devices. **These instructions provide an Output 1 test signal.** (Provide an Output 2 test signal in the same way using its respective menu screens.)

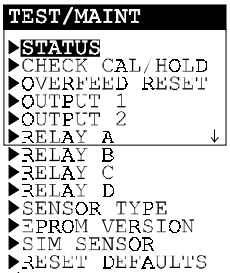

1. With the screen displayed, use ⇩ **key** to select the "OUTPUT 1" line.

2. Press **ENTER key** to display a screen like



.



NOTE: *The mA output test signal is now active. Its value is shown on this screen.*


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3. Use **arrow keys** to adjust the displayed value to obtain the desired mA test signal at Output 1 terminals.

4. To remove the output test signal and return to the TEST/MAINT top-level menu screen, press **ESC key** or **ENTER key**.

6.5 RELAY (A, B, C, and D) Operating Test

The RELAY function tests each relay (A, B, C, and D) to confirm its operation. **These instructions test Relay A.** (Test Relays B, C, and D in the same way using their respective menu screens.)

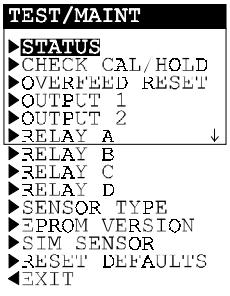

1. With the screen displayed, use ⇩ **key** to select the “RELAY A” line.


2. Press **ENTER key** to display `RELAY A? (ENERGIZE )` . Relay A should be energized. Confirm this by checking its NO and NC output terminals with a continuity meter.

3. Press ⇧ **or** ⇩ **key** once to display `RELAY A? (DE-ENERGIZE )` . Relay A should now be de-energized. Confirm this by checking its NO and NC output terminals with a continuity meter.

4. To end this test and return to the TEST/MAINT top-level menu screen, press **ESC key** or **ENTER key**.

6.6 SENSOR TYPE Check

The SENSOR TYPE function checks the type of sensor.

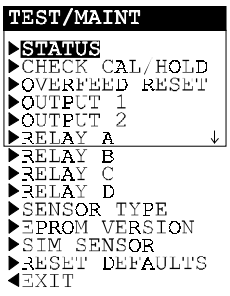

1. With the screen displayed, use ⇩ **key** to select the “SENSOR TYPE” line.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2. Press **ENTER key** to view the sensor type screen.

3. To return to the TEST/MAINT top-level menu screen, press **ESC key** or **ENTER key**.

6.7 EPROM VERSION Check

The EPROM VERSION function checks the version of EPROM used in the analyzer.

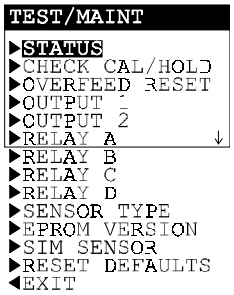


1. With the screen displayed, use ⇩ **key** to select the “EPROM VERSION” line.

2. Press **ENTER key** to view the EPROM version screen.

3. To return to the TEST/MAINT top-level menu screen, press **ESC key** or **ENTER key**.

6.8 SIM SENSOR Setting

The SIM SENSOR function sets a simulated turbidity measurement value to make the relays and analog outputs respond accordingly.

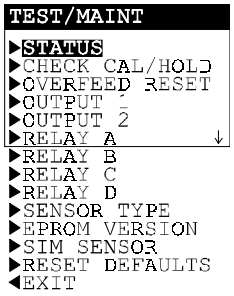

1. With the screen displayed, use ⇩ **key** to select the “SIM SENSOR” line.

2. Press **ENTER key** to display a screen like

```
SIM SENSOR?
(X.XXX NTU     )
```

.



NOTE: *Both analog output signals are now active. They have a mA value that corresponds to the measurement value shown on this screen. (The relays, depending on their configured settings, may also respond to this simulation value.)*


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3. Use **arrow keys** to adjust the displayed simulation value to the desired value.

4. To remove the simulated output and return to the TEST/MAINT top-level menu screen, press **ESC key** or **ENTER key**.

6.9 RESET DEFAULTS

The RESET DEFAULTS function resets <u>all</u> stored configuration settings (all at the same time) **-- including calibration settings --** to factory-set defaults shown in TABLE B.

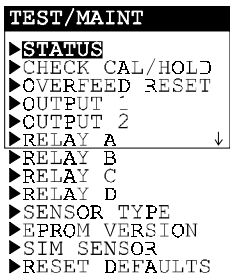

1. With the screen displayed, use ⇩ **key** to select the “RESET DEFAULTS” line.

2. Press **ENTER key** to display the “RESET DEFAULTS: ARE YOU SURE?” screen, asking if you really intend to perform this extreme action. (To abort this procedure, press **ESC key** now.)

3. Press **ENTER key** to reset <u>all</u> stored configuration and calibration settings to factory defaults. The “RESET DEFAULTS: DONE” screen appears, acknowledging that reset has occurred.

4. To return to the TEST/MAINT top-level menu screen, press **ESC key** or **ENTER key**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 7
RELAY OVERFEED TIMER FEATURE

The useful relay overfeed timer feature, **only available to a CONTROL relay,** is described in more detail in this section.

7.1 Why Use an Overfeed Timer

Suppose that you configure a CONTROL relay with a high phase to operate in response to increasing measured turbidity. The CONTROL relay will then turn on whenever the measured turbidity exceeds its preset setpoint. When the measured turbidity decreases below the setpoint by an amount you preset (the deadband setting), the relay will turn off. But what if a damaged sensor or a process upset condition keeps the measured turbidity above the setpoint or deadband setting? The control element (valve, pump, etc.) switched by that relay would then continue to operate. Depending on the application control scheme, this may excessively dispense costly chemical additives or overly drain or divert the process. Also, the control element itself could be damaged due to excessive continuous or unusual operation such as a pump that is running dry. The useful overfeed timer prevents undesirable conditions like these from happening. It restricts how long the relay and its connected control element will remain on regardless of conditions.

7.2 Configuring Relay Overfeed Timers

To set a relay overfeed timer, use its respective configuration menu screen. The time you set to restrict how long the relay stays on (0-999.9 minutes) should be just enough to provide acceptable results. An excessive setting may waste chemicals or the process itself. Initially, set this time as an estimate. Then, by experimenting and observing the response, periodically “fine tune” to optimize the setting.

7.3 Overfeed Timer “Timeout” Operation

When a CONTROL relay is on and its overfeed timer “times out,” its annunciator will blink. This indicates that the relay is now off and will remain off until you manually reset the overfeed timer. After reset, the relay annunciator stops blinking. (All overfeed timers are reset simultaneously.)

7.4 Resetting Overfeed Timers

To manually reset <u>all</u> relay overfeed timers, please refer to PART THREE, Section 6.3.

7.5 Interactions with Other Analyzer Functions

A relay overfeed timer can, and often will, interact with other analyzer functions while those functions are in use. TABLE C on the next page explains common overfeed timer interactions.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TABLE C -- Relay Overfeed Timer Interactions with Other Analyzer Functions

Function Conditions		Resulting Action of Overfeed Timer
Manually Holding Relay Operation (when outputs are held at start of calibration)		
Off relay held in "off"	Overfeed timer was off	Overfeed timer remains off. After you change back to ACTIVE from the HOLD mode, the overfeed timer will remain off until the measured value (or a value you simulate) causes the relay to turn on.
On relay held in "on"	Overfeed timer was counting	Overfeed timer continues its "count down" until it turns the relay off. If you release HOLD before the timer "times out," the timer continues its "count down" until it turns the relay off or the timer automatically resets when the measured value (or a value you simulate) causes the relay to turn off. If you release HOLD after the timer has "timed out," it must be manually reset (PART THREE, Section 6.3).
On relay held in "on"	Overfeed timer was timed out	Overfeed timer remains off which keeps the relay turned off. You must manually reset the timer (PART THREE, Section 6.3).
Manually Transferring Relay Operation (when outputs are transferred at start of calibration)		
Off relay is transferred to "on"	Overfeed timer was off	Overfeed timer starts its "count down" until it turns the relay off. After you change the "on" relay back to "off," the overfeed timer automatically resets.
On relay is transferred to "off"	Overfeed timer was counting	Overfeed timer automatically resets. After you change the "off" relay back to "on," the overfeed timer starts its "count down" until it turns the relay off, or the timer automatically resets again when the measured value (or a value you simulate) causes the relay to turn off.
On relay is transferred to "off"	Overfeed timer was timed out	
Manually Testing Relay Operation (using TEST/MAINT menu screens)		
Off relay is changed to "on"	Overfeed timer was off	Overfeed timer starts its "count down" until it turns the relay off. After you change the "on" relay back to "off," the overfeed timer automatically resets.
On relay is changed to "off"	Overfeed timer was counting	Overfeed timer automatically resets. After you change the "off" relay back to "on," the overfeed timer starts its "count down" until it turns the relay off, or the timer automatically resets again when the measured value (or a value you simulate) causes the relay to turn off.
On relay is changed to "off"	Overfeed timer was timed out	
Operating a Relay By Simulating a Value (using TEST/MAINT menu screens)		
Off relay is turned "on" by simulated value	Overfeed timer was off	Overfeed timer starts its "count down" until it turns the relay off. After you change the "on" relay back to "off," the overfeed timer automatically resets.
On relay is turned "off" by simulated value	Overfeed timer was counting	Overfeed timer automatically resets. After you change the "off" relay back to "on," the overfeed timer starts its "count down" until it turns the relay off, or the timer automatically resets again when the measured value (or a value you simulate) causes the relay to turn off.
On relay is turned "off" by simulation value	Overfeed timer was timed out	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 8
HART OPTION

8.1 Introduction

Your GLI analyzer may be equipped with the HART® Field Communications Protocol option for two-way digital communication. This option enables you to configure the analyzer and retrieve its measured data by using:

- A hand-held terminal such as a HART Communicator Model 275 (or other HART®-compatible configurator) containing GLI Device Specific Command sets in its non-volatile memory
- An IBM-compatible PC with appropriate HART® Field Communications Protocol software

☞ ***NOTE:*** *Any generic hand-held terminal can also communicate with a GLI HART-equipped analyzer, with limited operability, using HART Protocol Universal Commands and/or Common Practice Commands.*

The hand-held terminal or PC must be connected to the analyzer 4-20 mA analog Output 1 signal anywhere along the wiring circuit. See Sections 8.3 or 8.4 for more details.

HART Information Reference Listings

To obtain complete information on the HART Field Communications Protocol, contact:

HART Communication Foundation
9390 Research Blvd, Suite II-250
Austin, Texas 78759 USA

Telephone: [512] 794-0369
Fax: [512] 794-8893
Website: www.hartcomm.org

For information on the HART Communicator Model 275, contact:

Fisher-Rosemount Systems
12000 Portland Avenue South
Burnsville, Minnesota 55337-1535 USA

Headquarters: [612] 895-2000
Service: [800] 654-7768
Fax: [612] 895-2244

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

8.2 Analyzer Operating Modes for HART Network

HART enables simultaneous analog and digital communication. The analyzer can be operated in a SINGLE MODE or MULTI-DROP mode on a HART network. An analyzer switch setting selects the mode.

When the analyzer is set to operate in the SINGLE (Point-to-Point) MODE, as set by the factory, HART preserves the integrity of the 4-20 mA analog Output 1 signal for normal use while enabling two-way digital communication between a single analyzer and querying device(s). The analog signal represents the measured process value. The digital signal, encoded onto the analog signal, can be used to:

- Perform all available analyzer functions (presently, only when using a HART Communicator Model 275.)
- Calibrate, configure, and acquire all analyzer settings, and retrieve analog output values and measured process value(s).
- Assign device preferences such as a tag, descriptor, message, and date field (for example, to show last calibration date).
- Acquire device information such as analyzer model number, identification number, distributor, etc.
- Acquire HART information including polling address and number of required preambles.

Your HART-equipped “smart” GLI analyzer can also be selected to operate in an all-digital MULTI-DROP mode. This enables you to connect multiple analyzers -- all set for MULTI-DROP operating mode -- to the querying device(s) using a common 4-20 mA output cable, creating an efficient multi-analyzer two-way digital communications network.

☞ ***NOTE:*** *In the MULTI-DROP mode, the 4-20 mA analog Output 1 signal of each analyzer becomes dedicated only for network use and cannot be used as a normal output.*

Set for either SINGLE MODE or MULTI-DROP operation, the GLI analyzer is always a “slave,” responding to commands received from the “master.” The master can be a hand-held terminal or an IBM-compatible computer with HART-capable software (or software including GLI Device Specific Command sets). The GLI analyzer never initiates a command sequence, but always responds to commands from the master. Up to two master devices may be

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

connected to each HART loop. Typically, the primary master is a management system or a PC, while the secondary master is usually a hand-held terminal.

☞ ***NOTE:*** *All HART-equipped GLI analyzers are supplied with their **SINGLE MODE/MULTI-DROP** switch set to the **SINGLE MODE** position to preserve analog Output 1 for normal use.*

To set the analyzer operating mode for the HART network, locate the **SINGLE MODE/MULTI-DROP** switch (Figure 3-2) and set it to the desired mode:

- **SM** (left) position for SINGLE MODE
- **MD** (right) position for MULTI-DROP mode

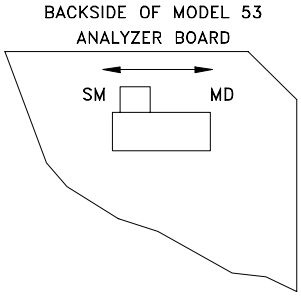


FIGURE 3-2 Location of SINGLE MODE/MULTI-DROP Switch (Hart-equipped analyzers only)

8.3 SINGLE MODE (Point-to-Point) Wiring Arrangement

When the GLI analyzer is set to operate in the SINGLE (Point-to-Point) MODE on a HART network, the master(s) is intended to communicate with only a single analyzer. Refer to Figure 3-3 and connect all devices, including up to two masters, to the 4-20 mA analog Output 1 signal.

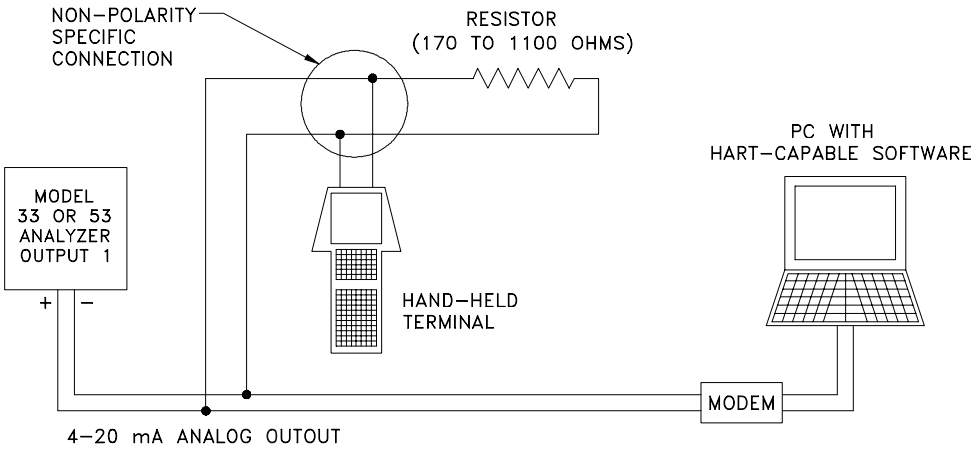


FIGURE 3-3 HART SINGLE MODE (Point-to-Point) Wiring Arrangement (for single analyzer)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

8.4 MULTI-DROP Wiring Arrangement

When the GLI analyzer is set to operate in the MULTI-DROP mode on a HART network, the master(s) is intended to communicate with multiple analyzers.

☞ ***NOTE:*** *When analyzers are operated in the MULTI-DROP mode, the 4-20 mA analog OUTPUT 1 signal of each analyzer is dedicated only for network use -- not its normal use. (During startup, each analyzer is assigned a non-zero polling address, causing its Output 1 to automatically provide a constant 4 mA signal.) Each analyzer's analog OUTPUT 2, however, remains available for normal use.*

1. Make sure the **SINGLE MODE/MULTI-DROP** switch of each analyzer is set to the **MD** (right) position.

2. Refer to Figure 3-4 and connect the 4-20 mA analog Output 1 signal of each analyzer in parallel on one cable, matching polarity as shown.

3. Connect an appropriate-sized power supply in parallel with the analog Output 1 signal, matching polarity as shown.

4. Up to two masters can be connected to the 4-20 mA analog Output 1 signal cable.


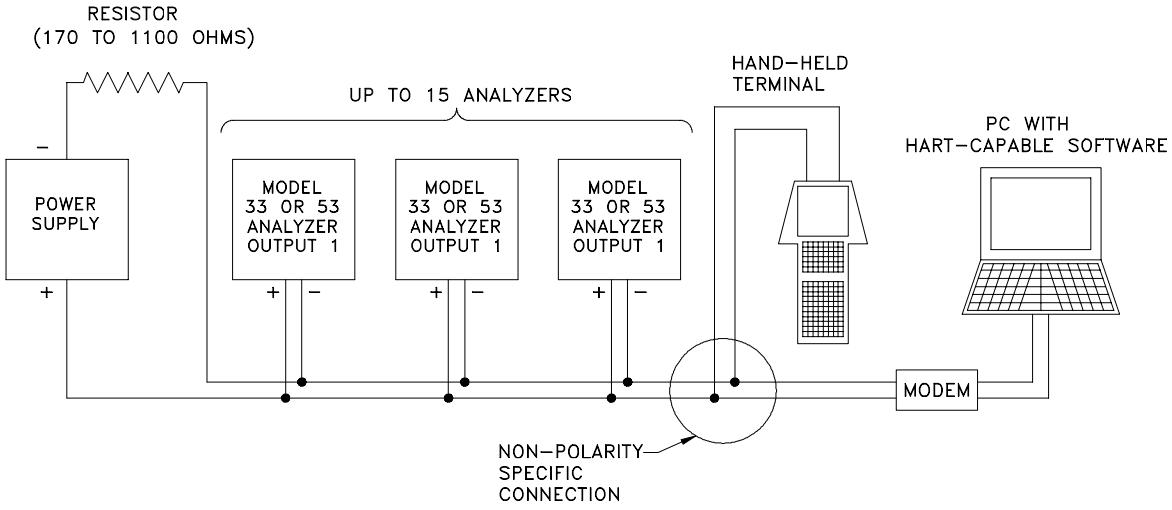


FIGURE 3-4 HART MULTI-DROP Wiring Arrangement (for multiple analyzer network)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

8.5 HART Preferences Setup

Use a hand-held HART terminal or HART-capable PC to set HART preference information. When using a Model 275 HART Communicator to access preference menus, select the "GLI SETUP" line in the MAIN MENU screen and press the → **key** to reveal this screen:

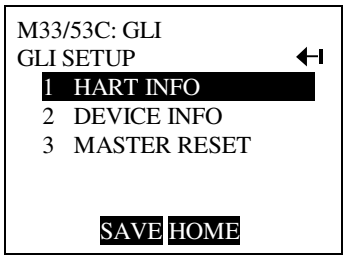

Use the "HART INFO" submenu to:

- Change the polling address used by the master to identify a device (analyzer).
- View the number of preambles required by a device (analyzer) from the master.

Changing Polling Address

1. With the "GLI SETUP" top-level menu screen displayed, select the "HART INFO" line and press → **key**.
2. With the "HART INFO" submenu screen displayed, select the "Poll addr" line and press the → **key** to display its related screen.
3. Assign a polling address of "0" for one analyzer in a point-to-point configuration, or 1 through 15 for two or more analyzers in a multi-drop configuration. Use the alphanumeric keys to directly select the number, or the arrow keys to adjust the number digit by digit.
4. Press the **F4 key** to enter the polling address, and the **F2 key** to send the polling address to the analyzer.

Viewing Number of Required Preambles

The "Num req preams" information screen shows the number of preambles required by the analyzer from the master.

1. With the "GLI SETUP" top-level menu screen displayed, select the "HART INFO" line and press → **key**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2. With the “HART INFO” submenu screen displayed, select the “Num req preams” line and press the → **key** to display its related information screen.

3. Press the **F4 key** to return to the “HART INFO” submenu screen.

8.6 Device Preferences Setup

Using a handheld HART terminal or HART-capable PC, set device (analyzer) preference information.

When using a Model 275 HART Communicator, the “DEVICE INFO” submenu enables you to:

- View the final assembly number of a device.
- View the model number of a device.
- View the manufacturer name of a device.
- Assign a tag associating a device with its installation.
- Assign a descriptor that is associated to a device.
- Assign a message that is associated to a device.
- Assign a user-defined date.
- View the identification number of a device.
- View the revision number(s) of a device.

Viewing Final Assembly Number

The “Final asmbly num” information screen shows the final assembly number of the analyzer.

1. With the “GLI SETUP” top-level menu screen displayed, select “DEVICE INFO” line and press → **key**.

2. With the “DEVICE INFO” submenu screen displayed, select the “Final asmbly num” line and press the → **key** to display its related information screen.

3. Press the **F4 key** to return to the “DEVICE INFO” submenu screen.

Viewing Model Number

The “Model” information screen shows the model number of the analyzer.

1. With the “GLI SETUP” top-level menu screen displayed, select “DEVICE INFO” line and press → **key**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2. With the “DEVICE INFO” submenu screen displayed, select the “Model Type” line and press the → **key** to display its related information screen.

3. Press the **F4 key** to return to the “DEVICE INFO” submenu screen.

Viewing Manufacturer

The “Manufacturer” information screen shows the company that manufactured the analyzer.

1. With the “GLI SETUP” top-level menu screen displayed, select “DEVICE INFO” line and press → **key**.

2. With the “DEVICE INFO” submenu screen displayed, select the “Manufacturer” line and press the → **key** to display its related information screen.

3. Press the **F4 key** to return to the “DEVICE INFO” submenu screen.

Assigning a Tag

A tag is text that associates a device with its installation. Though a tag can be used in any way, there are several recommended uses. For example, the tag can be a unique label for a facility that corresponds to a device label, such as a facility drawing or a control system. The tag can also be used as a type of data link layer address.

1. With the “GLI SETUP” top-level menu screen displayed, select “DEVICE INFO” line and press → **key**.

2. With the “DEVICE INFO” submenu screen displayed, select the “Tag” line and press the → **key** to display its related screen.

3. Assign a tag. Use the alphanumeric keys to directly create the text, or the arrow keys to adjust the text character by character.

4. Press the **F4 key** to enter the tag, and the **F2 key** to send the tag to the analyzer.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Assigning a Descriptor

A descriptor is text that is associated to a device. It can be used in any imaginable way.

1. With the “GLI SETUP” top-level menu screen displayed, select “DEVICE INFO” line and press → **key**.
2. With the “DEVICE INFO” submenu screen displayed, select the “Descriptor” line and press the → **key** to display its related screen.
3. Assign a descriptor. Use the alphanumeric keys to directly create the text, or the arrow keys to adjust the text character by character.
4. Press the **F4 key** to enter the descriptor, and the **F2 key** to send the descriptor to the analyzer.

Assigning a Message

A message is text that is associated to a device. It can be used in any imaginable way.

1. With the “GLI SETUP” top-level menu screen displayed, select “DEVICE INFO” line and press → **key**.
2. With the “DEVICE INFO” submenu screen displayed, select the “Message” line and press the → **key** to display its related screen.
3. Assign a message. Use the alphanumeric keys to directly create the text, or the arrow keys to adjust the text character by character.
4. Press the **F4 key** to enter the message, and the **F2 key** to send the message to the analyzer.

Assigning User-defined Date

The “Date” information screen shows a user-defined date that can be used in any imaginable way.

1. With the “GLI SETUP” top-level menu screen displayed, select “DEVICE INFO” line and press → **key**.
2. With the “DEVICE INFO” submenu screen displayed, select the “Date” line and press the → **key** to display its related information screen.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3. Assign a date.

4. Press the **F4 key** to enter the date, and the **F2 key** to send the date to the analyzer.

Viewing Identification (ID)

The “Device id” information screen shows the number that uniquely identifies the analyzer. The ID number cannot be changed by the communicator (master).

1. With the “GLI SETUP” top-level menu screen displayed, select “DEVICE INFO” line and press → **key**.

2. With the “DEVICE INFO” submenu screen displayed, select the “Device id” line and press the → **key** to display its related information screen.

3. Press the **F4 key** to return to the “DEVICE INFO” submenu screen.

Viewing Revisions

The “DEVICE REVISION” line enables access to three revision level information screens:

- Universal Rev: Revision of the universal device description that the analyzer conforms to.
- Fld Device Rev: Revision of the analyzer-specific description that the analyzer conforms to.
- Software Rev: Revision of the software (firmware) that is embedded in the analyzer.

1. With the “GLI SETUP” top-level menu screen displayed, select “DEVICE INFO” line and press → **key**.

2. With the “DEVICE INFO” submenu screen displayed, select the “Device revision” line and press the → **key**.

3. With the “DEVICE REVISION” sub-submenu screen displayed, select the appropriate line and press the → **key** to display its related information screen.

4. Press the **F4 key** to return to the “DEVICE INFO” submenu screen.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

8.7 "Master Reset" Function

HART enables you to reset the analyzer to factory-default values using the "GLI SETUP" menu of the master. The execution of this command may take a relatively long time to complete. Consequently, the analyzer cannot respond to other commands until reset is complete.

1. With the "GLI SETUP" top-level menu screen displayed, select "MASTER RESET" line and press → **key**.

2. After the "MASTER RESET" submenu screen appears, select the "Yes" line.

3. Press the **F4 key** to execute master reset and to return to the "GLI SETUP" top-level menu screen.

8.8 "Refresh" Function

The "REFRESH" function enables you to initiate HART to re-synchronize the master to the analyzer in case changes made at the analyzer are not reflected by the hand-held terminal.

NOTE: *Since HART only performs housekeeping tasks upon initialization, the "REFRESH" function need only be performed once. However, it may be used anytime thereafter to refresh the variables in the master.*

1. With the "MAIN MENU" top-level menu screen displayed, select the "REFRESH" line and press → **key**.

2. A "Please wait..." message will be displayed until the master has finished retrieving variables from the analyzer. Thereafter, the display will be returned to the "MAIN MENU" top-level screen.

8.9 Protocol Command Set for PC Programming

The Universal Commands and some Common Practice commands inherent in the HART protocol can be used for limited operability. The Device Specific Command set for all existing GLI analyzers is available on request for creating a full-featured HART-capable program to run on an IBM-compatible PC.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PART FOUR - SERVICE AND MAINTENANCE

SECTION 1
GENERAL INFORMATION

1.1 Cleaning Sensor Flow Chamber

1. Open the Model 8320 sensor enclosure door to access the flow chamber.
2. After draining the sensor, remove the flow chamber cover by turning it 1/8 turn counterclockwise to disengage its four tabs, and lift it straight off the chamber.

☞ ***NOTE:*** *For high pressure design sensor (Figure 4-2), remove flow chamber cover lockring and window by unscrewing lockring counterclockwise.*

3. Remove the baffle assembly. It is "keyed" with a slot and guide rib on its left side to fit only one way in the flow chamber.

☞ ***NOTE:*** *The high pressure design sensor uses the same baffle assembly, but this assembly is "keyed" with a rod and hole -- not a slot and guide rib.*

4. Wipe the inside surface of the flow chamber with a soft, clean, damp cloth.

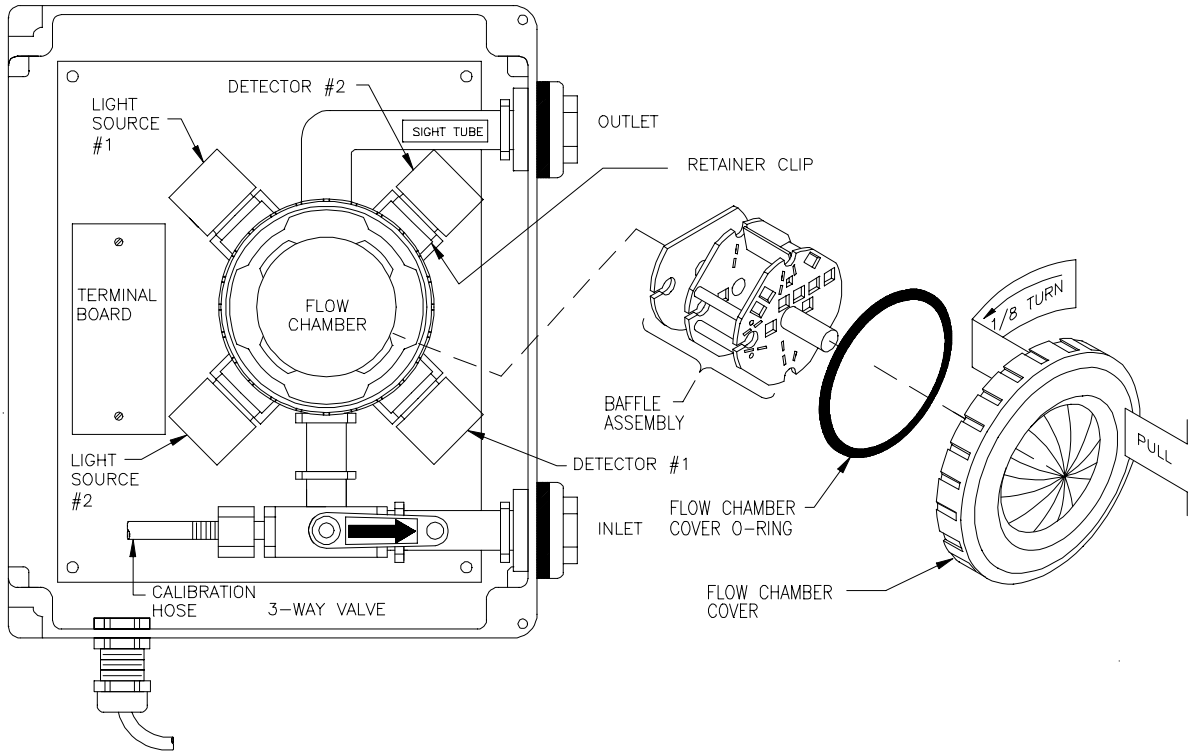


FIGURE 4-1 Standard Design Sensor -- Component Details

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5. Rinse the baffle assembly with clean water. Wipe it off with a clean dry cloth if necessary.

6. Insert the baffle assembly into the flow chamber and replace the cover (for high pressure design sensor, replace O-ring, window, and lockring).

NOTE: *Make sure the cover O-ring is well lubricated with the supplied lubricant, and properly seated before tightening the cover or lockring. If not, the cover may be difficult to remove next time.*

1.2 Cleaning Optional Cal-Cube™ Assembly

Recommendation: When not in use, properly store the Cal-Cube™ assembly inside its protective box in a cool, dry place.

If dirt or dust accumulates on the glass cube, **do not touch its surface with your fingers**. Finger oil will change its certified value. Dip the cube assembly in isopropyl alcohol to remove dust and finger oil. Use compressed air or a soft, clean optical cloth to dry the cube.

CAUTION:

DO NOT WIPE THE GLASS CUBE WITH TISSUES OR PAPER TOWELS. SMALL WOOD FIBERS FOUND IN THESE PRODUCTS WILL SCRATCH THE GLASS SURFACE OF THE CUBE WHICH MAY CHANGE ITS CERTIFIED VALUE.

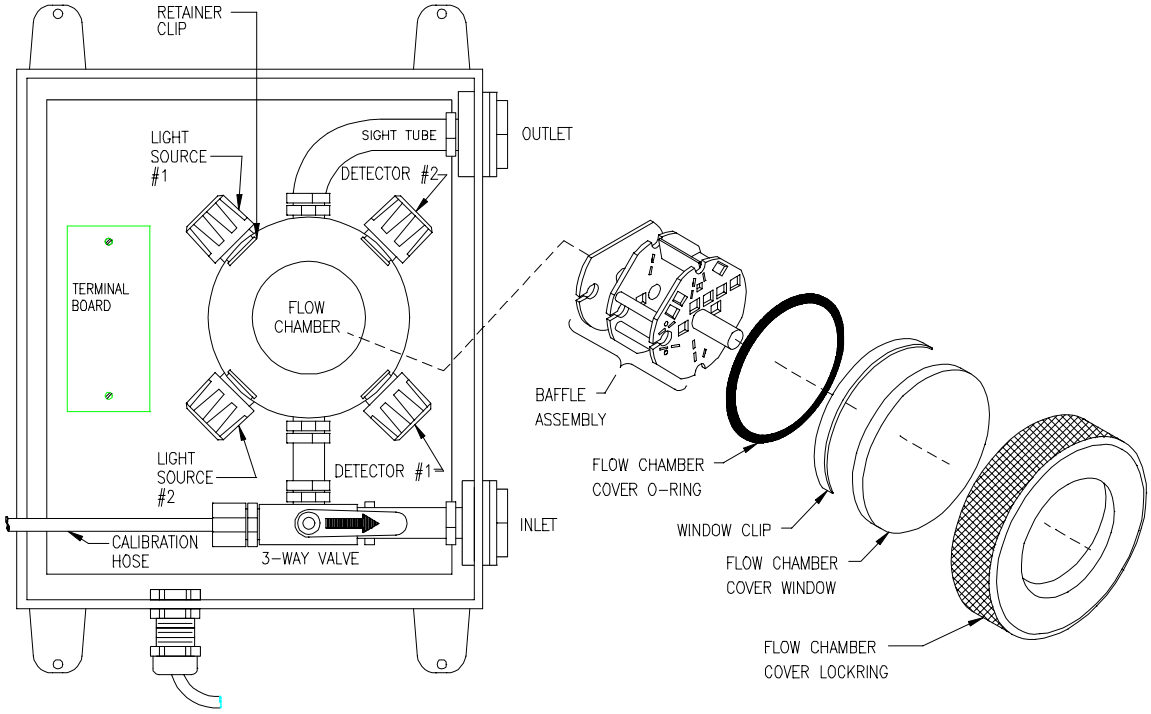


FIGURE 4-2 High Pressure Design Sensor -- Component Details

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.3 Replacing Sensor Light Source or Detector

When the TEST/MAINT "STATUS: SOURCE 1 (or 2)" screen or "STATUS: DETECT 1 (or 2)" screen indicates "FAIL," the respective sensor LED light source or detector may be disconnected, incorrectly wired or inoperative.

Removing Inoperative Part

1. Open the Model 8320 sensor enclosure door to access the inoperative light source or detector.

2. After draining the sensor, remove the flow chamber cover by turning it 1/8 turn counterclockwise to disengage its four tabs, and lift it straight off the chamber.

☞ ***NOTE:*** *For high pressure design sensor (Figure 4-2), remove the flow chamber cover lockring and window by unscrewing the lockring counterclockwise.*

3. Remove the black retainer clip from its slot in the flow chamber.

4. Extract the inoperative light source or detector from its receptacle.

☞ ***NOTE:*** *Extraction may be difficult because light sources and detectors have double O-ring seals. To ease removal, grasp the component by hand and twist it back and forth while extracting it.*

5. Disconnect the wires of the inoperative light source or detector from the sensor terminal board.

- - - - - # - - - - -

Installing New Part

1. Carefully replace the new light source or detector assembly into its receptacle. Refer to PART FIVE -- Spare Parts -- for the GLI assembly part numbers.

☞ ***NOTE:*** *Lubricate O-rings with the lubricant supplied to help ease the component into place. Make sure the light source or detector is fully inserted.*

2. Replace the black retainer clip to secure the new light source or detector.

3. Refer to Figure 4-3 and connect its wires, by color, to the sensor terminal board.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4. Replace the flow chamber cover. (For high pressure design sensor, replace the O-ring, window, and lock-ring.)

☞ ***NOTE:*** *Make sure the cover O-ring is well lubricated with the supplied lubricant, and properly seated before tightening the cover or lockring. If not, the cover may be difficult to remove next time.*

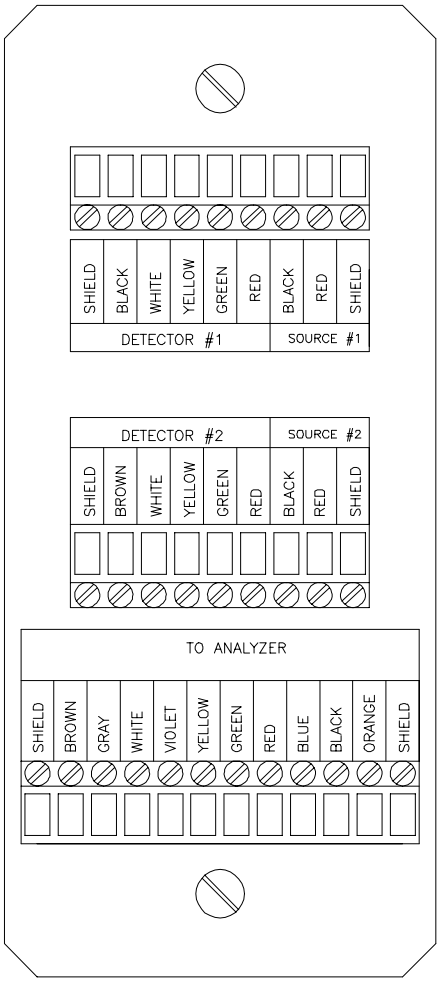


Figure 4-3 Turbidity Sensor Terminal Block Designations

Re-calibrating Measurement System

After replacing any light source or detector, always re-calibrate the measurement system using the appropriate method. Refer to PART THREE, Section 5 for details.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.4 Replacing Fuse(s)

The analyzer is equipped with two board-mounted fuses (type T slow-blow; 5 mm x 20 mm size). Fuse values are shown next to each fuse (Figure 2-8 or 2-9). The fuses protect the 115 and 230 volt line power circuits.

WARNING:

DISCONNECT LINE POWER TO AVOID THE POSSIBILITY OF ELECTRICAL SHOCK.

1. After disconnecting line power, open the analyzer door and locate the fuses (shown in Figure 2-8 or 2-9).

2. Remove the blown fuse and replace it with a GLI fuse or an equivalent. Refer to PART FIVE -- Spare Parts -- for GLI fuse kit part number.

3. Reconnect line power and close the analyzer door.

1.5 Replacing Relays

The analyzer relays are soldered into a complex, multi-layered circuit board. To avoid the possibility of damaging this board while attempting to replace a relay:

- Simply return the complete analyzer to GLI Customer Service or your local factory-authorized service organization for relay replacement.

-- or --

- Replace the complete scaling board assembly containing the relays. Refer to PART FIVE -- Spare Parts -- for the GLI scaling board assembly part number.

1.6 Inspecting Sensor Cable

If a measurement problem exists and you suspect the sensor cable, inspect it for physical damage. If an interconnect cable is used, check the junction box, then disconnect the cable at both ends (sensor and analyzer) and, using an ohmmeter, check its wires for continuity and internal shorts.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 2
PRESERVING MEASUREMENT ACCURACY

2.1 Eliminating Bubbles in Sensor Flow Chamber

Two kinds of air or gas bubbles may exist in the sample: those that can be seen and those that cannot. Visible bubbles are created by mixing liquid and air. For example, water falling down or flowing through a pipe containing air will form bubbles. Bubbles that cannot be seen in liquid, but that do form and become visible in the sensor flow chamber are absorbed in the liquid. This can occur naturally or be the result of human intervention such as when ozone is injected into water to act as a disinfectant.

Restricting Sensor Outlet

To remove visible bubbles in liquid, a bubble trap may be necessary. To minimize the effect of bubbles that cannot be seen, but that eventually form on the flow chamber windows, the liquid must be pressurized while it is being measured. This is easily accomplished by restricting the outflow from the Model 8320 turbidity sensor. To do this:

1. Maintain the flow rate through the sensor within its specified limits (0.05 to 7 GPM).
2. Install a flow restrictor into the sensor outlet line and adjust it until flow is slightly reduced.
3. Close the 3-way valve to stop flow through the sensor.
4. Drain the flow chamber using the 3-way valve and calibration funnel.
5. Slowly open the 3-way valve to allow the flow chamber to slowly fill with sample liquid.

The above procedure should ensure bubble-free operation.

Using an External Bubble Trap

For low sample flow rates (less than 0.5 GPM), the Model 8320 turbidity sensor has a built-in bubble trap to minimize air accumulation in the flow chamber. For higher flow rates, it is recommended to use an external bubble trap/stilling chamber (GLI part number 80A1020) to collect and vent off air or gas from the liquid. The bubble trap must be installed vertically (air vent upward) and upstream of the sensor. (The air vent on GLI's external bubble trap/stilling chamber can be opened or closed. Bubbles remain in solution when the vent is closed, or are vented off when it is opened.)

Periodically, it is recommended to remove the bubble trap drain plug to allow any accumulated sediment sludge to drain.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.2 Keeping Flow Chamber Clean

The Accu4™ Low-range Turbidimeter System has reactive diagnostics to alert you when the sensor flow chamber needs cleaning. When an abnormal system diagnostic condition has been detected, the MEASURE screen will flash the "WARNING CHECK STATUS" message. Depending on the selected activation mode for a STATUS relay (FAIL, WARN or ALL), this may or may not automatically energize a STATUS relay corresponding to that specific type of condition. To determine if the sensor needs cleaning, display the "STATUS: SENSOR" screen in the TEST/MAINT menu branch. When this screen indicates:

- CHAMBER DIRTY -- System diagnostics has detected degrading measurement performance, typically caused by dirty flow chamber windows. Refer to PART FOUR, Section 1.1 for instructions to clean the flow chamber.
- OK -- Check the other status screens to determine the condition causing the warning message.

2.3 Keeping System Calibrated

Depending on application circumstances, periodically verify system calibration to maintain measurement accuracy.



Maintenance Tip! Upon startup, frequently check the system until operating experience can determine the optimum time between calibrations that provides acceptable measurement results.

Calibrate the system using an appropriate method. Refer to PART THREE, Section 5 for details. **A common cause of measurement error is calibrating with an incorrectly prepared formazin suspension.**



NOTE: *When calibrating with a formazin suspension, carefully prepare the suspension using Class A laboratory glassware and correct analytical techniques. This is very essential to attain accurate measurement results.*

2.4 Avoiding Electrical Interference

Recommendation: Do not run the sensor and interconnect cables in the same conduit with AC or DC power wiring.



Maintenance Tip! Excess cable should not be coiled near motors or other equipment that may generate electrical or magnetic fields. Cut cables to proper length during installation to avoid unnecessary inductive pickup ("electrical noise" may interfere with sensor signal).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 3
TROUBLESHOOTING

3.1 System Diagnostic Condition Messages

When the system diagnostics detects an abnormal condition, the MEASURE screen flashes the "WARNING CHECK STATUS" message. To identify the condition causing the warning, display the "STATUS" screens in the TEST/MAINT menu branch (PART THREE, Section 6.1). Pressing the **ENTER key** sequentially displays these status screens:

TABLE D -- System Diagnostic Condition Status Screens/Meanings

Displayed STATUS Screen	Meaning
ANALYZER: OK	Analyzer is operating properly.
FAIL	Analyzer is not operating properly. Call GLI Customer Service Dept.
SENSOR: OK	Sensor is operating properly.
CHAMBER DIRTY	Clean the sensor flow chamber. See PART FOUR, Section 1.1.
CHAMBER UNKNOWN	Sensor is disconnected, incorrectly wired, or sources or detectors are not operating properly. Call GLI Customer Service Dept.
SOURCE 1 (or 2): OK	Light source is operating normally.
FAIL	Light source is disconnected, incorrectly wired, or not operating properly. Call GLI Customer Service Dept.
DETECT 1 (or 2): OK	Detector is operating normally.
FAIL	Detector is disconnected, incorrectly wired, or not operating properly. Call GLI Customer Service Dept.
RELAY (A, B, C, D): ACTIVE	Relay is energized. The measured value has reached the setpoint (control relay) or the low or high alarm point (alarm relay), or a system diagnostic condition exists (status relay).
INACTIVE	Relay is de-energized. The measured value has not reached the setpoint (control relay) or the low or high alarm point (alarm relay), or a system diagnostic condition has not been detected.
TIMEOUT	Relay is de-energized. The overfeed timer has timed out and must be manually reset (control relay only).
COUNTING	Relay is energized. The overfeed timer is counting down, but has not yet timed out (control relay only).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.2 Isolating Measuring System Problem

When experiencing problems, try to determine the primary measurement system component causing the problem (sensor, analyzer or sensor cable).

Checking Electrical Connections

1. Verify that line power exists at the appropriate analyzer TB3 terminals.

2. Check all analyzer and sensor cable connections to ensure that they are correctly wired and securely tightened.

Checking Operation Using System Diagnostics

Use the system diagnostics capability (“STATUS” screens in TEST/MAINT menu branch) to determine if the analyzer or sensor is inoperative.

Successfully calibrating the system usually confirms that the analyzer and sensor are operating properly. If the sensor cable is suspected, disconnect it at both ends (sensor and analyzer) and, using an ohmmeter, check its wires for continuity and internal shorts.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 4
ANALYZER REPAIR/RETURN

4.1 Customer Assistance

If you need assistance in troubleshooting or repair service, please contact your local GLI representative, or GLI Customer Service at:

GLI International, Inc.
9020 West Dean Road
Milwaukee, WI 53224

Phone: [800] 543-8907
Fax: [414] 355-8346
E-mail: info@gliint.com

— GLI CUSTOMER SERVICE HOURS —

	Eastern Std. Time	Central Std. Time	Mountain Std. Time	Pacific Std. Time
Monday through Thursday	8:30 a.m. to 5:30 p.m.	7:30 a.m. to 4:30 p.m.	6:30 a.m. to 3:30 p.m.	5:30 a.m. to 2:30 p.m.
Friday	8:30 a.m. to 4:00 p.m.	7:30 a.m. to 3:00 p.m.	6:30 a.m. to 2:00 p.m.	5:30 a.m. to 1:00 p.m.

4.2 Repair/Return Policy

Call GLI Customer Service before returning an analyzer or sensor for repair. Many problems can be diagnosed and resolved over the telephone. GLI will issue a Return Material Authorization (RMA) number for an analyzer or sensor being returned. **All returned analyzers or sensors must be freight prepaid and include:**

1. A clearly written description of the malfunction.
2. Name of person to contact and the phone number where they can be reached.
3. Proper return address to ship analyzer or sensor back. Include preferred shipping method (UPS, Federal Express, etc.) if applicable.
4. A purchase order if analyzer or sensor is out of warranty to cover costs of repair.

☞ ***NOTE:*** *If the analyzer or sensor is damaged during return shipment because of inadequate packaging, the customer is responsible for any resulting repair costs. (**Recommendation:** Use the original GLI shipping carton or an equivalent.)*

Also, GLI will not accept analyzers or sensors returned for repair or replacement unless they are thoroughly cleaned and all process material is removed.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PART FIVE - SPARE PARTS AND ACCESSORIES

	Description	Part Number
Model T53 Analyzers with "B" Prefix Serial Number	Complete Door Assembly: Without HART option	T53A2010-003
	With HART option	T53A2010-004
	Scaling Board Assembly (for 60 Hz. operation)	T53A2020-001
	Scaling Board Assembly (for 50 Hz. operation)	T53A2020-002
	Ribbon Interconnect Cable	1000A3355-001
Model T53 Analyzers with No Letter Prefix Serial Number	Complete Door Assembly	T53A1010-002
	Scaling Board Assembly (for 60 Hz. operation)	T53A1060-002
	Scaling Board Assembly (for 50 Hz. operation)	T53A1060-004
	Ribbon Interconnect Cable	1000A3334-001
The following parts are common to all T53 analyzers:		
	Fuse Kit (two fuses per kit; 80 mA and 100 mA)	1000G3315-101
	Mounting Hardware Kit	1000G3228-101
Model 8320 Low-range Turbidity Sensors	**Standard Design Sensor:**	
	Flow Chamber Cover	8220C2F1076
	Flow Chamber Cover O-ring	5H1288
	Retainer Clip for Light Source or Detector	8220F1078
	Replacement 3-Way Sensor Valve (w/attached hoses)	8320A1074-001
	Flow Chamber Assembly (with attached inlet and outlet hoses -- all other components excluded)	8220G1090-004
	3-Way Valve for External Plumbing (V2 in Fig. 2-1):	
	Valve with threads (rated 0-50 psig)	6H1185
	Valve without threads (rated 0-50 psig)	6H1183
	Optional Pipe-mount Kit (horizontal or vertical pipe)	8320A1070-001
	High Pressure Design Sensor:	
	Flow Chamber Cover Lock Ring	8220F1016
	Flow Chamber Cover Window	8220A2F1017
	Window Clip	8220F1059
	Flow Chamber Cover O-Ring	5H1265
	Retainer Clip for Light Source or Detector	8220F1075
	Replacement Flow Chamber (with 3-way sensor valve rigidly plumbed)	8220G1090-002
	3-Way Valve for External Plumbing (V2 in Fig. 2-1):	
	Valve with threads (rated 0-150 psig)	6H1184
	Valve without threads (rated 0-150 psig)	6H1182
	Optional Pipe-mount Kit (horizontal or vertical pipe)	8220G1040
The following parts are common to both sensors (standard and high pressure designs):		
	Baffle Assembly	8220G1060
	LED Light Source Ass'y (w/O-ring set & integral cable)	8220G1320-104
	Detector Assembly (w/O-ring set and integral cable)	8220G1330-104
	O-Ring for LED Light Source or Detector Module	5H1251
	Spare Silicone Lubricant	6M0920
	Optional Cal-Cube™ Assembly (for standard and high pressure design sensors)	8220G1300

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP