ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Keysight / Agilent 3325B* at our website: ***Click HERE***

Errata

Title & Document Type:

Manual Part Number:

Revision Date:

HP References in this Manual

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, semiconductor products and chemical analysis businesses are now part of Agilent Technologies. We have made no changes to this manual copy. The HP XXXX referred to in this document is now the Agilent XXXX. For example, model number HP8648A is now model number Agilent 8648A.

About this Manual

We've added this manual to the Agilent website in an effort to help you support your product. This manual provides the best information we could find. It may be incomplete or contain dated information, and the scan quality may not be ideal. If we find a better copy in the future, we will add it to the Agilent website.

Support for Your Product

Agilent no longer sells or supports this product. You will find any other available product information on the Agilent Test & Measurement website:

www.tm.agilent.com

Search for the model number of this product, and the resulting product page will guide you to any available information. Our service centers may be able to perform calibration if no repair parts are needed, but no other support from Agilent is available.

Agilent Technologies

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Operating Manual

MODEL HP 3325B
Synthesizer/Function Generator

Serial Numbers
All

HEWLETT PACKARD

HP Part Number 03325-90014
Microfiche Part No. 03325-90214
Printed in U.S.A.

Print Date: March 1990

©Hewlett-Packard Company, 1978, 1981, 1984, 1988, 1990. All rights reserved.
8600 Soper Hill Road, Everett, WA 98205-1298

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Warning



To prevent potential fire or shock hazard, do not expose equipment to rain or moisture.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SAFETY SUMMARY

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements. This is a Safety Class 1 instrument.

GROUND THE INSTRUMENT

To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument is equipped with a three-conductor ac power cable. The power cable must either be plugged into an approved three-contact electrical outlet or used with a three-contact to two-contact adapter with the grounding wire (green) firmly connected to an electrical ground (safety ground) at the power outlet. The power jack and mating plug of the power cable meet International Electrotechnical Commission (IEC) safety standards.

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

KEEP AWAY FROM LIVE CIRCUITS

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power and discharge circuits before touching them.

DO NOT SERVICE OR ADJUST ALONE

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the instrument. Return the instrument to a Hewlett-Packard Sales and Service Office for service and repair to ensure the safety features are maintained.

DANGEROUS PROCEDURE WARNINGS

Warnings, such as the example below, precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.

WARNING

Dangerous voltages, capable of causing death, are present in this instrument. Use extreme caution when handling, testing, and adjusting.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SAFETY SYMBOLS


General Definitions of Safety Symbols Used On Equipment or In Manuals.



Instruction manual symbol: the product will be marked with this symbol when it is necessary for the user to refer to the instruction manual in order to protect against damage to the instrument.




Indicates dangerous voltage (terminals fed from the interior by voltage exceeding 1000 volts must be so marked.)



Protective conductor terminal. For protection against electrical shock in case of a fault. Used with field wiring terminals to indicate the terminal which must be connected to ground before operating equipment.



Low-noise or noiseless, clean ground (earth) terminal. Used for a signal common, as well as providing protection against electrical shock in case of a fault. A terminal marked with this symbol must be connected to ground in the manner described in the installation (operating) manual, and before operating the equipment.



Frame or chassis terminal. A connection to the frame (chassis) of the equipment which normally includes all exposed metal structures.



Alternating current (power line.)



Direct (power line.)



Alternating or direct current (power line.)

WARNING ***The WARNING sign denotes a hazard. It calls attention to a procedure, practice, condition or the like, which if not correctly performed or adhered to, could result in injury or death to personnel.***

CAUTION *The CAUTION sign denotes a hazard. It calls attention to an operating procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product.*

NOTE The NOTE sign denotes important information. It calls attention to procedure, practice, condition or the like, which is essential to highlight.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Herstellerbescheinigung

Hiermit wird bescheinigt, daß das Gerät/System

HP 3325B SYNTHESIZER/FUNCTION GENERATOR

in Übereinstimmung mit den Bestimmungen von Postverfügung 1046/84 funkentstört ist.

Der Deutschen Bundespost wurde das Inverkehrbringen dieses Gerätes/Systems angezeigt und die Berechtigung zur Überprüfung der Serie auf Einhaltung der Bestimmungen eingeräumt.

Zusatzinformation für Meß- und Testgeräte

Werden Meß- und Testgeräte mit ungeschirmten Kabeln und/oder in offenen Meßaufbauten verwendet, so ist vom Betreiber sicherzustellen, daß die Funk-Entstörbestimmungen unter Betriebsbedingungen an seiner Grundstücksgrenze eingehalten werden.

Manufacturer's declaration

This is to certify that the equipment

HP 3325B SYNTHESIZER/FUNCTION GENERATOR

is in accordance with the Radio Interference Requirements of Directive FTZ 1046/1984. The German Bundespost was notified that this equipment was put into circulation, the right to check the series for compliance with the requirements was granted.

Additional Information for Test- and Measurement Equipment

If Test- and Measurement is operated with unscreened cables and/or used for measurements on open set-ups, the user has to assure that under operating conditions the Radio Interference Limits are still at the border of his premises.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table of Contents

OPERATION AND REFERENCE 1-1
HP 3325B Turn-On and Warm-Up 1-1
Turn-On and Power-Up Self Tests 1-1
Turn-On State 1-4
Power-Down State/Turn-On Preset . . . 1-4
Warm-Up 1-4
The Preset State and the Instrument Preset Key 1-5
Shift Key 1-7
Main Signal Output 1-8
Main Signal Output Connectors 1-8
The High Voltage Option 1-9
Selecting the Output Function 1-11
The Main Function Keys and Indicators 1-11
Data Entry And Modification 1-12
The Data Keys 1-12
Clear Display 1-13
Error Messages 1-13
Viewing Setup Parameters 1-14
Modifying Parameter Values 1-15
Frequency Step 1-15
The Entry Keys 1-16
Frequency 1-16
Amplitude 1-17
DC Offset 1-17
Phase 1-20
Asgn Zero Φ 1-20
Frequency Sweeps 1-21
Introduction to Sweeps 1-21
Start Frequency 1-22
Stop Frequency 1-22
Time 1-22
Marker Frequency 1-23
Mkr → CF 1-23
Reset/Start Sweep 1-24
Δf×2, Δf÷2 (Modify Bandwidth) . . . 1-24
Single Sweep 1-24
Continuous Sweep 1-24
Linear Frequency Sweeps 1-25
Log Frequency Sweep 1-25
Discrete Frequency Sweep 1-26
Modulation 1-28
Introduction 1-28
Amplitude Modulation 1-28
Phase Modulation 1-29
Modulation Source 1-29
Arbitrary Waveforms 1-30
Disabling Modulation 1-30
Storing/Recalling Instrument States . . 1-31
Storing Instrument States 1-31
Recalling Instrument States 1-31
Memory Clear 1-31
Calibration and Self Test 1-32
Amplitude Calibration 1-32
Self Test 1-32
The HP-IB Status Keys/Indicators/Connector 1-33
Local 1-33
Bus Address 1-34
The RS-232 Switches/Indicators/Connector 1-35
RS-232 Local/Remote 1-36
Marker / Z-Blank (Pen Lift) / X-Drive Outputs 1-37
Marker 1-37
Z-Blank 1-38
X-Drive 1-38
Synchronization Outputs 1-40
AUX 0 dBm 21–60 MHz Output (Extended Frequency) 1-41
External Reference or Oven-Stabilized Frequency Option 1-42
10 MHz Oven Output (High-Stability Frequency Reference) 1-42
External Frequency Reference . . . 1-42

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table of Contents (con't)

REMOTE OPERATION **2-1**
Remote Operation via HP-IB 2-2
Description of the HP-IB 2-2
Capabilities of the HP-IB 2-2
Bus Structure 2-3
HP 3325B HP-IB Capability 2-5
Talk/Listen Addresses 2-5
Viewing the HP 3325B HP-IB Address . 2-6
Changing the HP-IB Address 2-7
Bus Commands 2-7
Masking The Status Byte 2-9
The Status Byte 2-10
Remote Operation via RS-232 Interface . 2-11
Description of the RS-232 Interface . . 2-11
The Cable 2-12
Setting the Switches 2-13
Remote and Local Functions 2-15
HP 3325B Remote Operation Command Set 2-16
Command Syntax 2-17
Interrogating The HP 3325B For Setup Parameters 2-18
Remote Operation via RS-232 Interface 2-18
Command Reference 2-19
HP 3325A Compatibility 2-67
Writing Compatible Programs 2-69
Example Programs 2-70
Quick Reference Programing Guide . . . 2-72

GENERAL INFORMATION **3-1**
Introduction 3-1
Specifications 3-1
Safety Considerations 3-1
Instrument Description 3-1
New or Enhanced Features of the HP 3325B 3-5
Compatibility with the HP 3325A 3-5
Options 3-6
Accessories Supplied 3-7
Accessories Available 3-7

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Introduction

This operating manual contains information necessary to operate the Hewlett-Packard Model 3325B Synthesizer/Function Generator. This covers direct operation via the front panel as well as remote operation via the HP-IB or RS-232 interface. Also included with the HP 3325B is an installation manual that provides information and procedures to install and check the performance of the HP 3325B as well as a service manual to adjust, and service the HP 3325B.

- Operation Manual (Chapters 1, 2, 3)
- Installation Manual (Chapter 4, includes perfomance tests)
- Service Manual (Sections 5, 6, 7, 8)

This operating manual is divided into three chapters:

1. Operation and Reference
2. Remote Operation
3. General Information

The HP part number of this operating manual is listed on the title page along with the microfiche part number. The Microfiche part number can be used to order 4 × 6 microfilm transparencies of the operating manual. Each microfiche package also includes the latest manual change supplements for the operating manual.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 1
OPERATION AND REFERENCE

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Chapter 1

OPERATION AND REFERENCE


This chapter contains a description of the manual operation of the HP 3325B Synthesizer/Function Generator. The subdivisions in this chapter describe each major function of the HP 3325B. Chapter 2, "HP 3325B Remote Operation" contains a complete list of commands used for remote operation of the HP 3325B with a computer. Figure 1-1 identifies and describes the front and rear-panel controls, connectors, and indicators.

Caution *Prior to operating the HP 3325B, check that the fuse rating and line voltage setting are correct for the local ac power source. The Power Requirements section in "HP 3325B Installation" contains information for setting the line voltage and selecting the fuse.*

HP 3325B Turn-On and Warm-Up

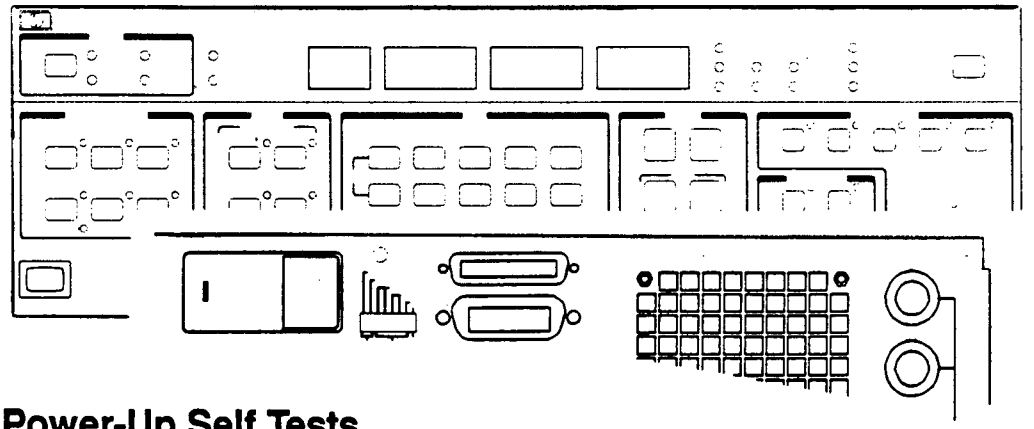


Turn-On and Power-Up Self Tests




Turn on the HP 3325B by pressing the I-side of the power switch. When turned on, power is applied to all of the HP 3325B circuits and the display shows "3325" followed by a list of the installed options. Then the HP 3325B initiates a series of self tests and calibrates internal circuits. When the ⏻-side of the Power key is pressed, the HP 3325B is placed in standby.

Note If Fail appears in the display, the HP 3325B has sensed a circuit failure or an amplitude calibration failure. If the Fail message appears in the display, send the instrument to qualified service personnel for repair.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

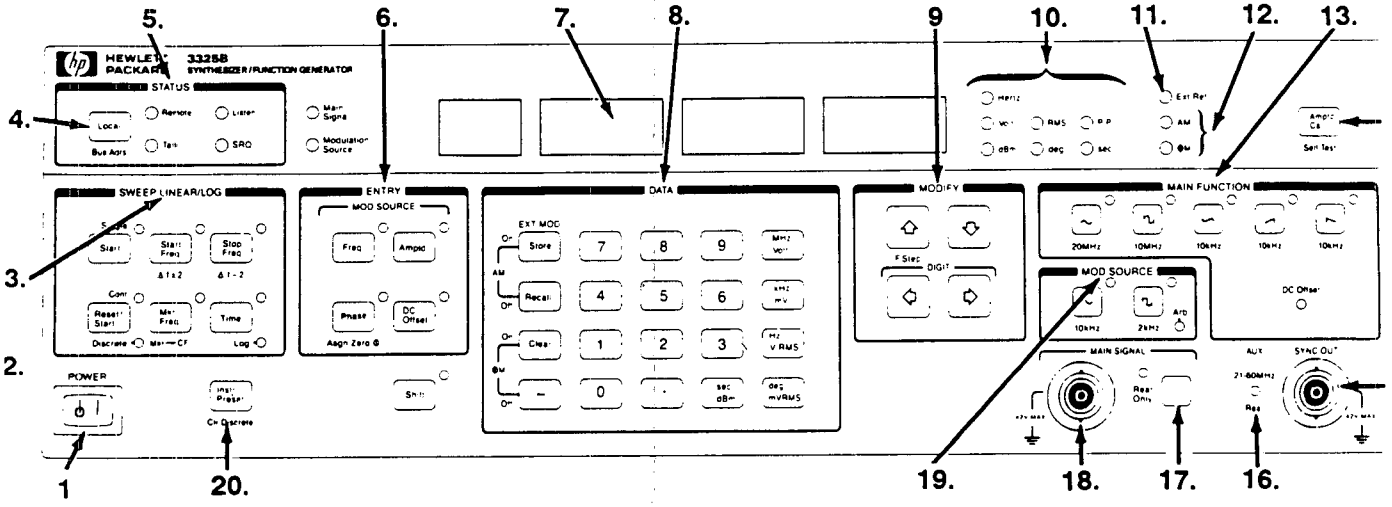

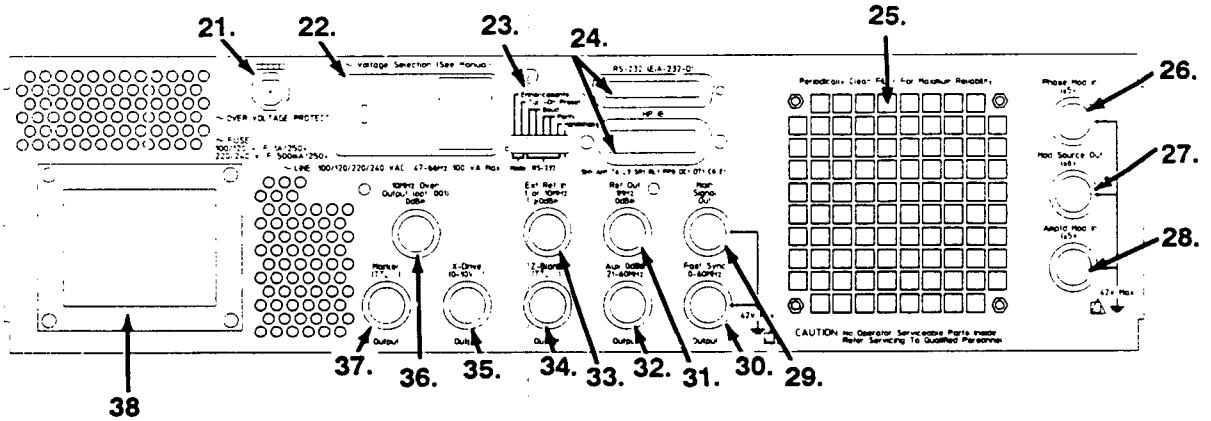

1. **Power switch:** In the standby (⏻) position, power is applied to the oven (option 001), the HP-IB interface circuits external to the isolation barrier, and the high voltage output circuits (option 002), in addition to the power supply circuits.
2. **Blue [Shift] key**: Press the [Shift] key to access the key function labeled in blue.
3. **Sweep Linear/Log key group**: These are entry prefix keys for the sweep parameters, and the sweep start keys. When preceded by the [Shift] key, the sweep parameter keys control sweep modification functions and linear/log/discrete selection.
4. **[Local] key**: Returns HP 3325B from remote control to front-panel control unless local lockout has been programmed. When preceded by the [Shift] key, the HP 3325B HP-IB address is displayed.
5. **Status indicator group**: The indicators show the HP 3325B HP-IB status: Remote, Addressed to Listen, Addressed to Talk, and Request Service (SRQ).
6. **Entry key group**: These are the entry prefix keys for the main and modulation source signal parameters.
7. **Display**: Displays the value of the entry parameter selected, error codes, and self test results.
8. **Data key group**: This group includes the numeric data keys, the data suffix keys, the [Store] and [Recall] keys, and the entry [Clear] key. When preceded by the [Shift] key, the keys in the left column control the modulation functions.
9. **Modify Group**: The horizontal arrow keys select the digit to modify (indicated by the flashing digit), and the vertical arrow keys increment or decrement the digit. Preceding the up-arrow with the [Shift] key selects the frequency step parameter for display and modification.
10. **Units Indicators**: The indicators display the units of the value represented by the numeric display.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

11. **Ext Ref Indicator**: The Ext Ref Indicator illuminates if an external reference or option 001 (internal 10 MHz oven reference) is connected to the rear-panel Ref In connector. The indicator flashes if the internal oscillator is not phase-locked to the external reference.
12. **Modulation Indicators**: The modulation indicators illuminate if amplitude or phase modulation is enabled.
13. **Main Function key group**: These keys select the main signal output function or dc-only.
14. **[Amptd Cal] key**: This key calibrates the amplitude and offset of the output signal. When preceded by the [Shift] key, it initiates an instrument self test.
15. **Sync Out**: A square wave synchronized output signal is available at this connector and rear-panel Fast Sync connector. This signal is synchronized with the output signal crossover point (zero volts or dc offset voltage). The front-panel sync output functions for frequencies below 21 MHz.

Caution *The maximum peak voltage that can be safely applied between chassis and outer conductor of any of the HP 3325B input or output signal connectors is ±42V.*

---

16. **Aux 21-60 MHz Rear Indicator**: This indicator illuminates when the rear-panel Aux output is active.
17. **[Rear Only] key**: In standard instruments, this key switches the signal output from front-panel to rear-panel. The rear-panel output is active when the adjacent indicator illuminates. In instruments with the high voltage option (002), this key switches from normal to high voltage output. The adjacent indicator illuminates when the high voltage output is enabled. The key is labeled "40 V_{pp}, 40 mA, 0-1 MHz" for option 002. In option 002 instruments, no rear-panel signal output is provided.
18. **Main Signal output**: Standard output impedance is 50Ω. High voltage output option 002 output impedance is nominally < 1Ω at dc and < 10Ω at 1 MHz. Load impedance must be at least 500Ω. Standard and high-voltage outputs are fuse-protected.


Note **If the standard instrument signal output is not terminated by an external 50Ω load, undesirable distortion may result, particularly at higher frequencies. Similar conditions may result if the high voltage output (option 002) is terminated by less than 500Ω.**

---

19. **Modulation Source key group**: These keys select the modulation signal function.
20. **[Instr Preset] key**: This key restores the HP 3325B to a predefined state (see table 1-1). When preceded by the [Shift] key, Instr Preset clears the discrete frequency sweep segments from memory.
21. **Circuit Breaker Reset Button:** Disconnects power supply from power line when the line voltage exceeds upper limit. See the Installation Manual for information on resetting the breaker and voltage limits.
22. **Voltage selection vs fuse used:** This module contains the line fuse and configures the HP 3325B for local line voltages. Refer to the HP 3325B Installation Manual for line fuse selection and line voltage configuration.
23. **Mode/RS-232 switch**: These switches enable the HP 3325B enhancements, turn-on configuration, and RS-232 characteristics.
24. **HP-IB/RS-232 connectors**: Remote control of the HP 3325B by an external controller is accomplished through these connectors.
25. **Fan Filter:** See "Instrument Cooling" in the Installation Manual for information concerning the fan and its filter.
26. **Phase Mod In**: Input connector for a phase modulating signal of ±5V maximum peak voltage.
27. **Mod Source Out**: Output connector for the internal modulation source.
28. **Amptd Mod In**: Input connector for an amplitude modulating signal of ±5V maximum peak voltage.
29. **Main Signal Out**: The output signal is switched to this connector by the front-panel [Rear Only] key. Instruments with the high voltage option 002 cannot switch the main signal to the rear-panel connector.
30. **Fast Sync**: A square wave synchronizing output signal is available at this connector. This signal is synchronized to (changes state at) the output signal crossover point (zero volts or dc offset voltage) and operates from 0 to 60 MHZ..
31. **Ref Out**: A 1 MHz signal from the HP 3325B reference circuits is available at this connector.
32. **Aux 0 dBm**: A signal is available at this output for frequencies between 19 MHz and 59 999 999.999 Hz.
33. **Ext Ref In**: This external frequency reference may be used to phase-lock the internal 30 MHz oscillator.
34. **Z-Blank**: A TTL-compatible output is present during a sweep operation.
35. **X-Drive**: This output ramps from 0V to 10V during a sweep-up.
36. **10 MHz Oven Output**: This signal is present only in instruments with option 001. Normally it is connected to the Ext Ref In connector (item 33) with a special connector (HP Part No. 1250-1499) supplied with option 001.
37. **Marker**: This TTL-compatible output goes low at the selected marker frequency during a sweep up, and high at completion of the sweep.
38. **Power Transformer**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Turn-On State

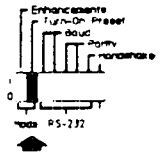

The initial state of the HP 3325B at power up is dependent upon the setting of the rear-panel Turn-On Preset switch. With the Turn-On Preset switch in the up (1) position, the turn-on state is the preset state described in "The Preset State and the Instr Preset Key." With the Turn-On Preset switch in the down (0) position (and the Enhancements switch in the up (1) position), the setup state in effect when power is removed is used as the turn-on state.

Enhancement Mode



Enhanced mode refers to the HP 3325A features that were improved to create the HP 3325B. In this mode all stored information is retained in nonvolatile memory. Stored information may be erased by overwriting the information in memory or by applying power with the green [Instr Preset] key depressed (memory clear).

HP 3325A (Compatibility) Mode

In this mode, stored information cannot be recalled after the power switch is set to the standby position.

Note See table 3-2 for a comparison of compatible and enhanced features.

Power-Down State/Turn-On Preset

The last operating state prior to removing power is also retained in nonvolatile memory. This operating state is restored by pressing the [Recall] key followed by the [−] (minus) key.

The setup state stored in the power-down memory can be selected as the turn-on state through the use of the Enhancements and Turn-On Preset switches. To allow the HP 3325B to restore the power-down state, set the Enhancements switch to the up (1) position, and the Turn-On Preset switch to the down position (0). Restoring the power-down state at turn-on is disabled by setting the Turn-On Preset switch in the up (1) position.


Warm-Up

Warm-up time is the amount of time the HP 3325B is connected to power. The HP 3325B without the high stability frequency reference (option 001) requires 30 minutes of warm-up time to meet all specifications. The HP 3325B with option 001 requires 15 minutes of warm-up time to meet frequency specifications if power is disconnected for less than 24 hours. If power is disconnected from the HP 3325B with option 001 for more than 24 hours, up to 72 hours of warm-up time may be required to meet frequency specifications. The HP 3325B with option 001 requires 30 minutes of warm-up to meet other specifications.

Note Moving the power switch from the I position to the ⏻ position places the HP 3325B in standby. In standby, power is removed from all circuits except those that should be kept warm to minimize warm-up time.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The Preset State and the Instrument Preset Key

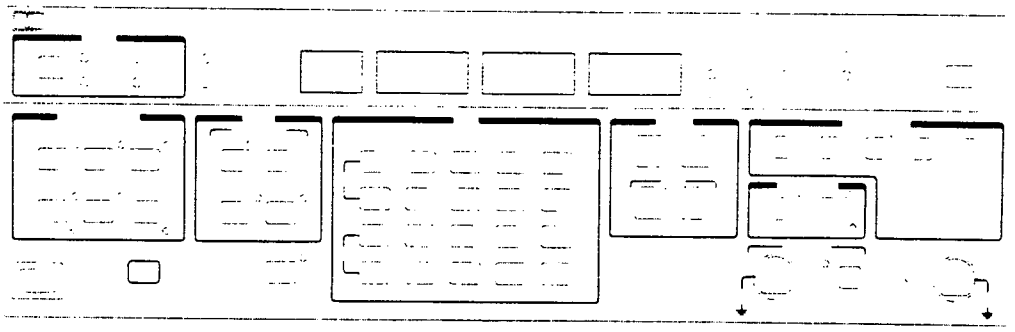

Instr Preset

Table 1-1 lists the *preset state* of the HP 3325B. This is a predefined state selected by pressing the green [Instr Preset] key. It is also the active state at power-up if the rear-panel Turn-On Preset switch is in the up (1) position. Instrument preset provides a convenient starting state for establishing an instrument setup. Instrument preset does not erase instrument states, modulation source ARB waveforms, or the discrete sweep table in internal memory.

Table 1-1. HP 3325B Preset State

Key Group	Parameter	Preset State/Value
Status	Local	No effect
	Bus Adrs	No effect
Function	Sine wave	Enabled
Entry	Freq	1 kHz
	Amptd	0.001 V_{pp}
	Phase	0°
	DC Offset	0V
	Assign Zero Φ	–
	Mod Source Freq	1 Hz
	Mod Source Amptd	0.1 V_{pp}
Sweep Linear/Log	Sweep	Off
	Start Freq	1 MHz
	Stop Freq	10 MHz
	Mkr Freq	5 MHz
	Time	1 second
	Discrete Sweep/Log Sweep	Off


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 1-1. HP 3325B Preset State (Cont'd)

Key Group	Parameter	Preset State/Value
Modulation	Ext Mod AM Ext Mod ΦM	Off Off
Modify	F Step	0.0 Hz
Mod Source	Mod Source	Off
Other Keys	[Shift]	Off
Signal	High Voltage Rear-Only	Off Disabled (Front-panel output)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Shift Key

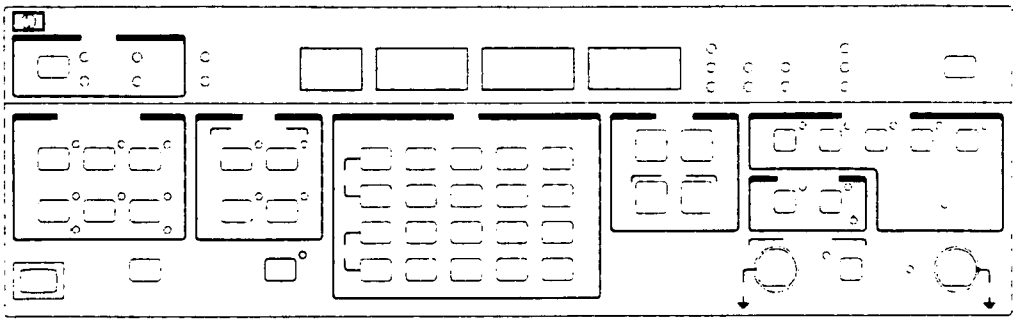




Some keys control two functions. The first function name appears on the key itself and is activated by pressing the key. If a key has another function, its name appears in blue below the key and it is activated by first pressing the blue [Shift] key. This manual may refer to shifted key names with or without reminding you to press the [Shift] key first. Always look for both names of a key when searching the front panel for a key name.


The indicator adjacent to the [Shift] key illuminates when the [Shift] key is pressed to indicate that the shifted key names may be selected.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Main Signal Output

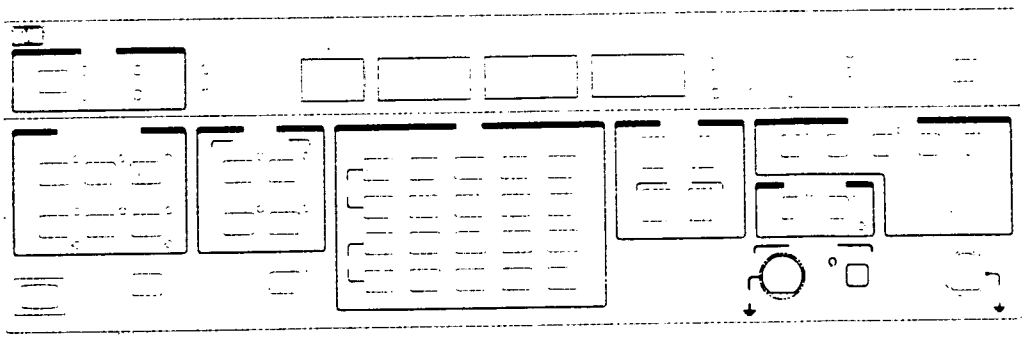

Main Signal Output Connectors

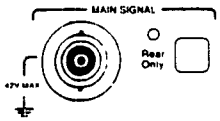

The Main Signal is available at one of two BNC connectors located on the front and rear panels. The front-panel [Rear Only] key selects which of these two connectors has the main signal output. The active connector is indicated by the rear-only indicator; an illuminated rear-only indicator denotes that the rear-panel output is active.

Both outputs share the same ground and may be floated up to ±42 volts peak relative to earth ground.

Caution *The maximum peak voltage (ac + dc) that can be safely applied between chassis and the outer conductor of the HP 3325B input and output connectors is ±42 volts peak.*


Note When the high voltage option (option 002) is installed, the key by the Main Signal output connector (labeled "40 V_{pp}, 40 mA, 0-1 MHz") controls the high voltage amplifier. On these instruments, the rear-panel Main Signal output connector is inactive.


The specifications for the Main Signal output impedance and return loss are:

Impedance:	50Ω ±1Ω from 0 to 10 kHz
Return Loss:	20 dB 10 kHz to 20 MHz except > 10 dB for > 3V, 5 MHz to 20 MHz
High Voltage (option 002):	< 2Ω at dc < 10Ω at 1 MHz

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The High Voltage Option (option 002)

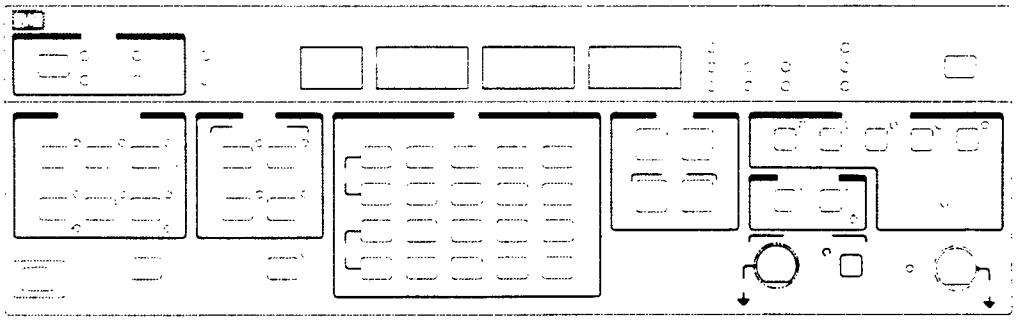

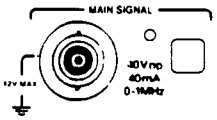

On instruments with the High Voltage Option (option 002)installed, the [40 V_{pp}] key enables or disables the high voltage output. The 40 V_{pp} indicator illuminates when the high voltage output is enabled. The high voltage option increases the available output voltage range to a maximum value of 40 V_{pp} (into a high impedance). Enabling the high voltage option reduces the maximum output frequency for the sine and square waves to 1 MHz, and decreases the output impedance (see Main Signal output). The output signal momentarily drops to zero volts when internal attenuator settings change.

Note

The rear-panel signal output is inactive (no internal signal connection) if the HP 3325B has the high voltage output (option 002) installed. Instructions in the Service Manual describe activation of the rear-panel signal output in one of two ways:

1. Disconnecting the front-panel signal output and placing the standard/high voltage output on the rear panel only, or

2. Disabling the high voltage output and enabling the standard front/rear output.

If one of these modifications is required, arrange for the work to be done by qualified service personnel.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


The HP 3325B specifications apply when the external load resistance is > 500Ω and the total capacitance is < 500 pF. The same entry procedures and display features apply as for the standard configuration. Maximum and minimum amplitudes are listed in table 1-2.

Table 1-2. High Voltage Amplitudes (option 002)


	V_{pp}		V_{rms}	
Function	**Max.**	**Min.**	**Max.**	**Min.**
Sine	40V	4 mV	14.14V	1.42 mV
Square	40V	4 mV	20.0V	2.0 mV
Triangle	40V	4 mV	11.55V	1.16 mV
± Ramp	40V	4 mV	11.55V	1.16 mV

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Selecting the Output Function

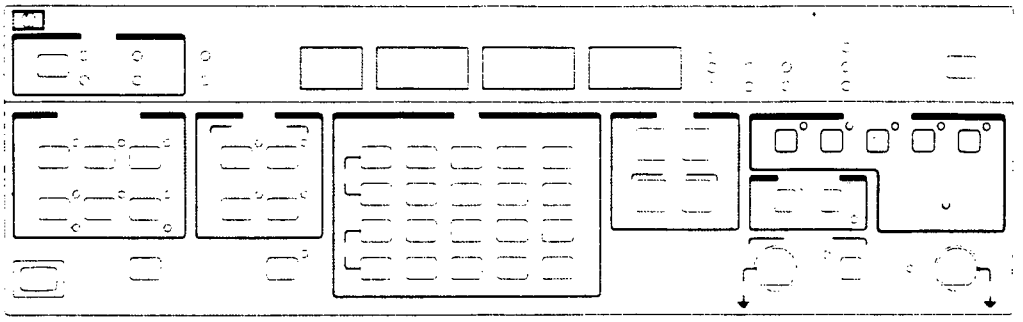

The Main Function Keys and Indicators

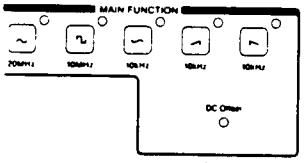


Pressing one of the five Main Function keys selects the function output of the HP 3325B. The indicator adjacent to a function key illuminates when that function is selected. Pressing the function key for the selected function a second time removes the ac component of the signal leaving only the selected dc offset (if any is entered). Removing the ac signal in this way, automatically displays dc offset and illuminates the dc offset entry indicator. Pressing the disabled function key again restores the ac signal. Unless a dc offset is entered, the output signal for each function is centered about zero volts.


The DC Offset indicator illuminates when a non-zero dc offset exists.

Note The standard instrument signal output must be terminated by an external 50Ω load or sine wave distortion and square wave over-shoot may result, particularly at the higher frequencies (> 1 MHz). All specifications apply with a 50Ω load connected to the HP 3325B main signal output except where indicated (table 3-1, Specifications).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

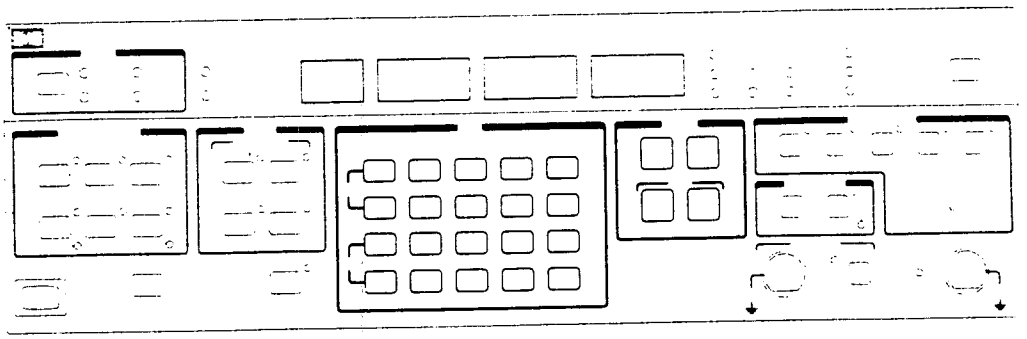

The Data Keys

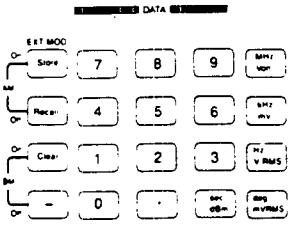

Entering setup values with the numeric keypad is a simple three step process:


1. Select a parameter to change.
2. Enter the desired value (most significant digit first).
3. End the entry with a units key.

For example, to change the output amplitude to 1 V_{rms}, press the [Amptd] (amplitude) key to display the current amplitude value. Press the [1] key in the numeric keypad, and press the [Hz / V RMS] units key to end the entry. For the example, the V_{rms} units from the [Hz / V RMS] units key is assigned to the data value. The HP 3325B assigns the units to the data value that corresponds to the parameter being changed. If an entered value exceeds the HP 3325B range limits, the HP 3325B ignores the entered value and displays an error message (refer to table 1-4). To cancel an incomplete data entry, press any key that requires the display for data entry (see table 1-3).

Table 1-3. Parameters Accepting Data Entry

Amptd	Mod Source Freq
Bus Adrs	Phase
DC Offset	Start Freq
F Step	Stop Freq
Freq	Store
Mkr Freq	Recall
Mod Source Amptd	Time

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



The value entered with the Data keys may be edited during data entry with the left-arrow key in the Modify key group. Each time the left-arrow key is pressed, the least-significant digit or decimal point is removed from the display. After the incorrect digits are removed from the display value, data entry can continue.

Clear Display



Pressing the [Clear] key (in the left column of the Data key group) clears the display to zero. This key is useful when an error is made while entering data.

Error Messages

If an attempt is made to enter or modify operating parameters beyond the HP 3325B capabilities, the new input is ignored and an error message and code is displayed. Table 1-4 lists the error messages and explanations of the errors.

Table 1-4. Error Messages

Error Code	Description
100	The value entered for the selected parameter exceeds the valid limits
200	The units key selected is improper for the selected parameter
201	The units key selected is improper for the selected parameter with high voltage option
300	The frequency entered is too high for the waveform function selected
400	The sweep time entered is too large for the frequency span (sweep span is too small)
401	The sweep time is too small for the frequency span.
500	Amplitude and dc offset values are incompatible
501	The dc offset is too large for amplitude
502	The amplitude is too large for the dc offset
503	Amplitude is too small
600	Sweep frequency improper
601	Sweep frequency too large for function
602	Sweep bandwidth too small
603	Log sweep start frequency too small
604	Log sweep stop frequency less than start frequency
605	Discrete sweep segment is empty
700	Unknown command
701	Illegal query
751	Key ignored front-panel key pressed while the HP 3325B is in remote (press LOCAL key)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 1-4. Error Messages (Cont'd)

Error Code	Description
752	Key ignored front-panel key pressed while the HP 3325B is in local lockout
753	Feature disabled in compatibility mode
754	Attempt to recall a memory register that has not been stored since power up
755	Amplitude modulation not allowed on selected function
756	Modulation source arbitrary waveform memory register is empty
757	Too many modulation source arbitrary waveform points
758	Firmware (program) failure
800	A remote HP-IB or RS-232 command has a syntax error
801	Illegal digit for selection item
802	Illegal binary data block header
803	Illegal string, string overflow
810	RS-232 overrun – characters lost
811	RS-232 parity error
812	RS-232 frame error
900	Option not installed
-CAL-	Calibration in progress
PASS	A self test is successful
FAIL	A self test is unsuccessful – refer the HP 3325B to qualified service personnel for repair


Viewing Setup Parameters

Pressing a front-panel key which accepts data entry (such as the [Freq] or [Amptd] key) displays the current value of a setup parameter. Table 1-3 lists the front-panel keys which accept data entries. Pressing one of these keys does not alter the current setup values.

The units of the displayed parameter are indicated by an illuminated indicator at the right of the display. The indicators at the left of the display indicate whether the display value is associated with the Main Signal or the Modulation Source.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Modifying Parameter Values

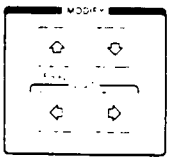

The arrow keys in the Modify key group are used to modify the display value. The right and left-arrow keys select the digit for modification as indicated by the flashing digit. Pressing the right-arrow key selects the next least significant digit for modification; pressing the left-arrow key selects the next most significant digit for modification. To extinguish the flashing digit, press a right or left-arrow key until the flashing digit moves off the display.

The flashing digit is the least significant digit that is modified with the up- and down-arrow keys. The up-arrow key increments the value of the display, while the down-arrow decrements the value of the display. The up-and down-arrows modify the display value until the boundary limit is reached. .

Frequency Step




The frequency step is how much change in the frequency parameter occurs when the up or down-arrow keys are pressed. The [F Step] (Frequency Step) key enables display, entry, or modification of the frequency step parameter. The [F Step] key is selected by pressing the blue [Shift] key prior to the up-arrow key. The displayed frequency value is changed with the numeric keypad and units keys, or modified with the modify controls. The MHz, kHz, and Hz units allow convenient entry of frequency values. During frequency step entry, the Hz units indicator is illuminated but the Frequency Entry indicator is extinguished.

The up-arrow and down-arrow keys increment and decrement the display by the F Step value when all the following are true:

1. The frequency step is non-zero (in the case of the main signal) or less than frequency resolution (for the modulation source)
2. A main signal or modulation source frequency value is displayed, and
3. No flashing digits appear in the display

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The Entry Keys

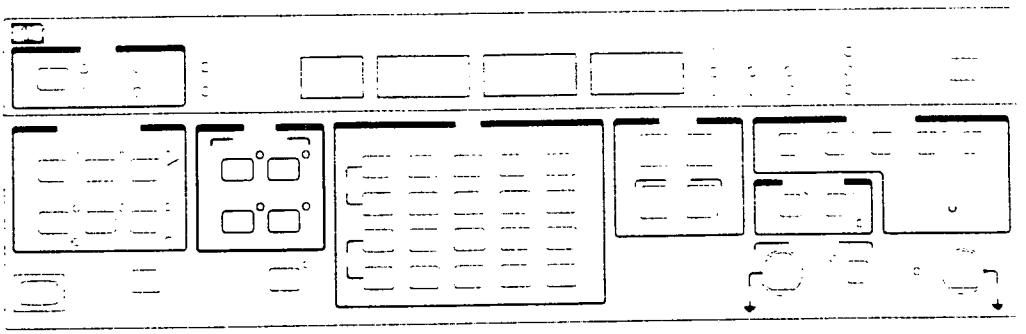

Note An illuminated indicator adjacent to an entry key denotes it as the active entry parameter. For example, if the [Freq] entry key indicator is illuminated, it is not necessary to press that key before entering data.

Frequency



The [Freq] (Frequency) key enables display, entry, or modification of the frequency of the signal output. The indicator adjacent to the [Freq] key illuminates when the output frequency value is displayed. Frequency values are displayed in Hertz and changed with the numeric keypad and units keys or modified with the modify controls. The MHz, kHz, and Hz units allow convenient entry of frequency values.

Resolution of the frequency entry is 1 μHz for frequencies below 100 kHz, and 1 mHz for 100 kHz and above. At 100 kHz and above, 1 μHz resolution is possible through the use of the F Step parameter. Also, as a modify key is used to cross above the 100 kHz boundary, any μHz resolution value is maintained but not displayed. Frequency ranges are dependent upon the function selected and high voltage option (see table 1-5). During a frequency change, the main output signal is phase-continuous; that is, there are no phase discontinuities in the output waveform.

Table 1-5. Frequency Limits

Function	Main Signal
Sine	0 → 20 999 999.999 Hz
Square	0 → 10 999 999.999 Hz
Triangle, Ramps	0 → 10 999.999 999 Hz

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Amplitude



The [Amptd] (amplitude) key enables display, entry, or modification of the amplitude of the signal output. The indicator adjacent to the [Amptd] key illuminates when an amplitude value is displayed. The displayed amplitude value is changed with the numeric keypad and units keys, or modified with the Modify keys. The Volt, mV, V RMS, mV RMS, and dBm units allow convenient entry of amplitude values. Amplitude values are displayed in Volts rms, Volts peak-to-peak (V_{pp}), or dBm as denoted by the indicators at the right of the display. The amplitude range is dependent upon selection of dc offset and the high voltage option (see table 1-6). The output signal is momentarily set at zero volts when internal attenuator settings change.

The HP 3325B units keys convert amplitude values to V_{pp}, V_{rms}, or dBm for any function. For example, if a sine wave amplitude of 10 V_{pp} is displayed, pressing the [V_{rms}] or [mV_{rms}] key displays the same amplitude as 3.536 V_{rms}, while pressing the [dBm] key displays the value as 23.98 dBm. When changing from one function to another, the last amplitude displayed is held constant.

Table 1-6. Amplitude Limits of AC Functions

	V_{pp}		V_{rms}		dBm (50Ω)	
Function	**Max.**	**Min.**	**Max.**	**Min.**	**Max.**	**Min.**
Sine	10V	1 mV	3.536V	0.354 mV	+23.98	−56.02
Square	10V	1 mV	5.000V	0.5 mV	+26.99	−53.01
Triangle	10V	1 mV	2.888V	0.289 mV	+22.22	−57.78
±Ramp	10V	1 mV	2.888V	0.289 mV	+22.22	−57.78

DC Offset



The [DC Offset] key enables display, entry, or modification of the dc offset of the signal output. The indicator adjacent to the [DC Offset] key illuminates when a dc offset value is displayed. The displayed dc offset value is changed with the numeric keypad and [Volt] or [mV] units key, or modified with the modify controls. The dc offset range is dependent upon amplitude and the high voltage option. Figure 1-2, and table 1-7 and 1-8 list the maximum output of the HP 3325B. The output signal momentarily drops to zero volts when internal attenuator settings change.

The DC Offset indicator in Main Function key block illuminates when a non-zero dc offset value exists.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

AC with DC Offset

When dc offset is added to any ac function, there are minimum and maximum offset limits which must be observed. These limits are affected by the ac voltage and internal attenuator settings, listed in table 1-7. Figure 1-2 contains a set of graphs which show the approximate maximum dc offset permissible for a given ac peak-to-peak voltage. Resolution of a dc offset entry (with ac function) is determined by the resolution of the ac amplitude. The following equation may be used to determine maximum offset voltage:

Maximum dc offset = (5 ÷ A) − (Amptd ÷ 2)


Where A = Attenuation factor (from table 1-7)
Amptd = Amplitude in V_{pp} of the ac function.


If a dc offset too large for the amplitude already programmed is entered or if the ac amplitude is increased beyond the level where the amplitude and offset are compatible, an error code between 500 and 503 appears in the display momentarily and the entry value is not accepted. The display then indicates the nearest acceptable value.

Table 1-7. Maximum DC Offset with any AC Functions

AC Amplitude Entry (peak-to-peak)		Maximum DC Offset (+ or −)	Minimum DC Offset Entry	Range	Attenuation Factor
1.000 mV	with	4.500 mV	0.001 mV	7	A = 1000
to					
3.333 mV	with	3.333 mV			
3.334 mV	with	14.99 mV	0.001 mV	6	A = 300
to					
9.999 mV	with	11.66 mV			
10.00 mV	with	45.00 mV	0.010 mV	5	A = 100
to					
33.33 mV	with	33.33 mV			
33.34 mV	with	149.9 mV	0.010 mV	4	A = 30
to					
99.99 mV	with	116.6 mV			
100.0 mV	with	450.0 mV	0.100 V	3	A = 10
to					
333.3 mV	with	333.3 mV			
333.4 mV	with	1.499V	0.100 V	2	A = 3
to					
999.9 mV	with	1.166 mV			
1.000 V	with	4.500 V	1.000 mV	1	A = 1
to					
9.998 mV	with	0.001 mV			

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

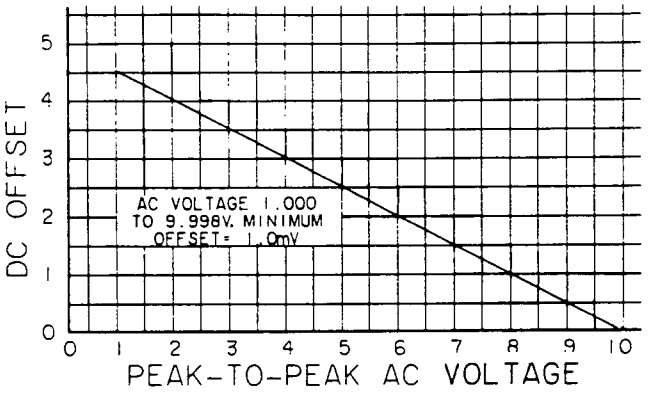

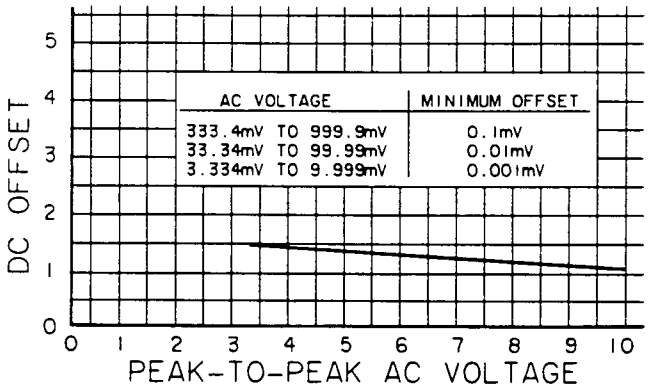

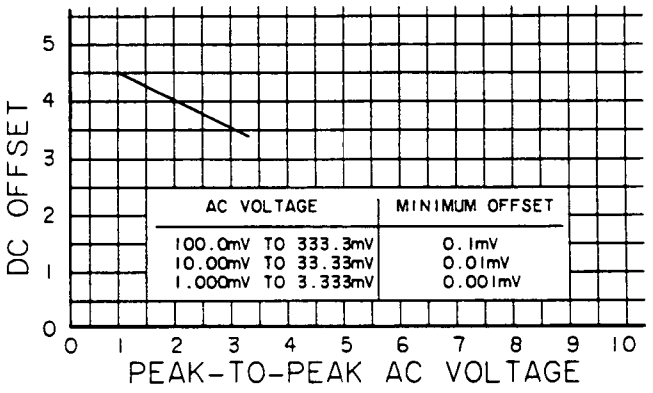


Figure 1-2. Maximum DC Offset with any AC Functions

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

DC Only

When the Main Function selections are disabled (all indicators extinguished), the HP 3325B automatically displays the DC Offset value and selects the [DC Offset] key for entry of DC Offset values. Without an ac function selected, the dc voltage output ranges from 0 mV to ± 5V, with four-digit resolution.

High Voltage Option

With the high voltage option enabled, the dc offset range is ±20 volts (ac + dc peak value or dc only). DC offset with the high voltage option is dependent on the ac amplitude. With the high voltage output (option 002) selected, the minimum and maximum permissible dc offset voltages may be determined by multiplying the amplitude and offset values in table 1-7 (and figure 1-2) by 4. The equation for determining maximum dc offset is:

Maximum dc Offset = (20 ÷A) − (Amptd ÷2)
Where A = Attenuator factor (from table 1-7)
Amptd = Amplitude in V_{pp} of the ac function.

Note When the high voltage output is selected, minimum amplitude for dc only (no ac function) is 0.01 mV and maximum is 20.0V.


Phase



The [Phase] key enables display, entry, or modification for the phase of the Main Signal. The indicator adjacent to [Phase] key illuminates when a phase value is displayed. The displayed phase value is changed with the entry keys and [Deg] (degrees) units key, or modified with the modify controls. The phase display range is ±719.9° with a resolution of 0.1°. Phase values of ±1440° entered with the entry keys are accepted and the value is displayed modulo 720. For square wave frequencies below 25 kHz, phase changes greater than 25° may result in a phase shift ±180° from the desired amount.

After entering a phase shift, the new phase may be assigned the zero-phase position; subsequent changes in phase are with reference to that value. To assign zero phase, press the blue [Shift] key followed by [Asgn Zero Φ] key.


Asgn Zero Φ

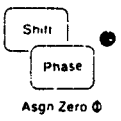

The [Asgn Zero Φ] (Assign Zero phase) key assigns a reference of zero degrees to the existing phase parameter of the Main Signal without changing the phase of the output waveforms. Subsequent changes in phase are with respect to that value. The [Asgn Zero Φ] key is selected by pressing the blue [Shift] key prior to the [Phase] key.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Frequency Sweeps

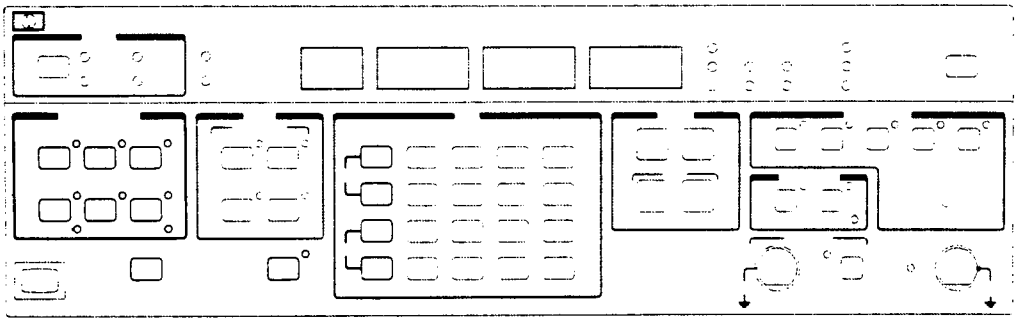

Introduction to Sweeps

The HP 3325B performs three kinds of sweeps: linear, log, and discrete. Linear sweeps of any function have sweep-time limits of 10 ms to 1000s and may be single or continuous. Single linear sweeps may be either up or down in frequency. Continuous sweeps move back and forth between the start and stop frequency in an up/down/up/down. . . fashion. The marker functions only during up-sweeps.

Log sweep times range from 1s to 1000s for single sweeps and from 0.1s to 1000s for continuous sweeps. Single log sweeps are up-only; they always start at the start frequency and sweep up to the stop frequency. The marker does not function during log sweeps.

Discrete sweeps allow the creation of custom sweep patterns. A discrete sweep consists of up to 100 linear sweeps or frequency steps (called segments). Each segment has four parameters: start frequency, stop frequency, sweep time, and marker frequency, which may be entered from the front panel or down-loaded from a computer. The marker functions as specified for each segment whether the sweep is up or down.

Single or continuous frequency sweeps are selectable with the [Start] and [Reset/Start] keys. Sweep parameters are entered with the [Start Freq] (start frequency), [Stop Freq] (stop frequency), and [Time] keys. The [Mkr → CF] (marker into center frequency), [Δf × 2], and [Δf ÷ 2] keys allow convenient modification of the sweep parameters. The [Mkr Freq] (marker frequency) key allows the rear-panel TTL level marker output signal to be specified.

Linear sweeps are phase-continuous over the full frequency range of the main output signal; that is, there are no phase discontinuities in the swept output waveform. When the HP 3325B is turned on, the sweep is off, the sweep mode is set to linear, and the parameters are set as follows:

Start Frequency	1 000 000.0 Hz
Stop Frequency	10 000 000.0 Hz
Marker Frequency	5 000 000.0 Hz
Time	1s

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Note The marker frequency should be lower than the stop frequency by a sufficient amount to permit the marker pulse width to be approximately 400 μs.

To change any of the sweep parameters, press the appropriate Sweep Linear/Log entry key, then enter the desired data. To select log sweep, press the blue [Shift] key followed by the [Log] (Time) key to illuminate the log indicator. The sweep mode is linear unless the log or discrete indicators are illuminated. To select discrete sweep, press the [Shift] key and then the [Discrete] key. When a discrete sweep is selected, the discrete indicator is illuminated.

Start Frequency



The [Start Freq] (start frequency) key enables display, entry, or modification of the sweep start frequency for the main signal. The indicator adjacent to the [Start Freq] key illuminates when a start frequency value is displayed. The displayed frequency value may be changed with the entry and units keys, or with the modify keys. The MHz, kHz, and Hz units allow convenient entry of frequency values. Frequency resolution is 1 μHz for frequencies below 100 kHz and 1 mHz for frequencies above 100 kHz. The upper frequency limit is established by the function selected.

Stop Frequency



The [Stop Freq] (stop frequency) key enables display, entry, or modification of the sweep stop frequency of the main signal. The indicator adjacent to the [Stop Freq] key illuminates when a stop frequency value is displayed. The displayed frequency value is changed with the entry and units keys, or with the modify keys. The MHz, kHz, and Hz units allow convenient entry of frequency values. Frequency resolution is 1 μHz for frequencies below 100 kHz and 1 mHz for frequencies above 100 kHz. The upper frequency limit is established by the Main Function selected.

Time



The [Time] key enables display, entry, or modification of the sweep time for the Main Signal. The indicator adjacent to the [Time] key illuminates when a time value is displayed. The displayed time value is changed with the entry and units keys, or modified with the modify keys. The [SEC] units key ends entry of numeric values.

The maximum time per sweep (up or down) for all sweep modes is 1000 seconds, with a resolution of 0.01s for times ≥ 1s, and 0.001s for times < 1s.

Note The X-Drive output functions only when sweep time is < 100s. See the discussion, later in this chapter, on the marker, Z-blank, and X-drive rear-panel connectors.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Minimum times are:

Single Linear Sweep	0.010s
Continuous Linear Sweep	0.010s
Single Log Sweep	1.000s
Continuous Log Sweep	0.100s

Note When the enhancements are turned off, single log-sweep sweep time is increased by the processing time required between segments. The time increase (in seconds) is approximately equal to:

Time Increase = 0.045[10 log(stop freq. ÷ start freq.)]

Marker Frequency



The marker is a TTL-compatible signal on a rear-panel connector that goes low at the specified marker frequency during linear up-sweeps. It may also be used with discrete sweeps where it operates while sweeping up or down.


The [Mkr Freq] (marker frequency) key enables display, entry, or modification of the sweep marker frequency. The indicator adjacent to the [Mkr Freq] key illuminates when the marker frequency value is displayed. The displayed frequency value is changed with the entry and units keys, or with the modify keys. The MHz, kHz, and Hz units allow convenient entry of frequency values. Frequency resolution is 1 μHz for frequencies below 100 kHz and 1 mHz for frequencies above 100 kHz.

For a marker signal to be generated, the marker frequency may be set to any point within the sweep band to within approximately 400 μs of the stop frequency. If the marker frequency is set beyond this point, the stop frequency is automatically increased so that the marker pulse is approximately 400 μs wide. The following equation may be used to determine the approximate maximum marker frequency:

Max marker freq. = stop freq. − (0.0004 × bandwidth ÷ sweep time)

Note The marker signal is not generated on the down-sweep of a continuous sweep. See the discussion, later in this chapter, on the marker, Z-blank, and X-drive rear-panel outputs.

Mkr → CF



The [Mkr→CF] (marker into center frequency) key centers the sweep band on the frequency value of the marker parameter. The [Mkr→CF] key is selected by pressing the blue [Shift] key followed by the [Mkr Freq] key.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Reset/Start Sweep



The [Reset/Start] key performs three functions for the sweep operations:

1. If a continuous or single sweep is in progress, Reset/Start cancels the sweep. When a sweep is stopped, the current frequency appears in the display.
2. For single sweeps, the first press of the [Reset/Start] key resets the sweep to the start of the sweep.
3. After a single sweep is reset, pressing the [Reset/Start] key again starts the frequency sweep.

Δf×2, Δf÷2 (Modify Bandwidth)

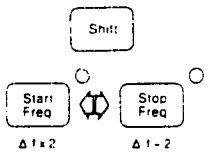

In linear sweep mode, the [Δf×2] and [Δf÷2] keys may be used to double or halve the sweep bandwidth. If either the new sweep start or stop frequency exceeds the frequency limits, an error message is displayed. These two keys have no effect on discrete sweeps.

Single Sweep



The [Reset/Start] key resets the sweep the first time it is pressed. A single sweep starts the second time the [Reset/Start] key is pressed. An illuminated *Single* indicator denotes that a single linear sweep is in progress. A single sweep sweeps from the start frequency to the stop frequency over the specified sweep time.

Continuous Sweep



The [Start] key initiates a continuous (repetitive) sweep. The Cont indicator adjacent to [Start] key illuminates when a continuous sweep is in progress. Continuous sweeps move back and forth between the start and stop frequencies in an up/down/up/down. . . fashion. If the marker is active, it functions only during the up-sweep. Sweep parameters should be entered before starting a continuous sweep. See previous discussion on start and stop frequencies and sweep time.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Linear Frequency Sweeps

In linear mode, either continuous or single sweeps are available. Single sweep is from the start to stop frequency, where either the start or stop frequency may be the higher value.

To begin a single sweep:

1. Press [Reset/Start] to set output and display to the start frequency selected and reset the X-Drive ramp.
2. Press [Reset/Start] again to start the sweep.

The output signal frequency sweeps to the selected stop frequency and remains there. This frequency appears in the display.

Continuous linear sweeps alternate between up and down-sweeps. A continuous sweep begins when the [Start] key is pressed. The Cont indicator illuminates while the continuous sweep is active. Continuous sweeps may be stopped by pressing the [Start] key or by pressing [Reset/Start], [Freq], or [Phase] keys. With enhancements turned off, the sweep may stop when other parameters are changed. With enhancements turned on, the sweep does not stop for parameter changes that do not affect the sweep (i.e., amplitude or offset changes do not cause the sweep to stop). Pressing [Amptd Cal], [Self Test], [Asgn Zero Φ], or changing the function stops a continuous sweep. When a sweep stops, the display indicates the frequency at which the sweep stopped.


Linear Sweep Bandwidth

The maximum bandwidth is the full frequency range for the function selected. The minimum bandwidth for each function is as follows:

Sine	(10 mHz/s) × (sweep time)
Square	(5 mHz/s) × (sweep time)
Triangle	(0.5 mHz/s) × (sweep time)
Ramps	(1 mHz/s) × (sweep time)

For sweep bandwidths of less than 100 times the minimum bandwidth, bandwidth selected should be an integral multiple of the minimum bandwidth or sweep-time errors and stop-frequency errors will occur.

Log Frequency Sweep



In either single or continuous log sweep mode, the stop frequency must be higher than the start frequency and the sweep is up-only (continuous log sweep is a repetitive start-to-stop sweep, only). The minimum bandwidth for log sweep is one decade. Single log sweep is a line-segmented log approximation in one-tenth decade segments, and continuous log sweep is a two-segment-per-decade log approximation.

Note For narrow-band log sweeps, the actual stop frequency may be higher than the selected stop frequency. The error decreases as sweep time is increased. This error is minimized by activating enhancements.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Discrete Frequency Sweep



Discrete sweeps consist of up to 100 linear sweeps (called segments) combined to form a custom sweep pattern. Parameters for each sweep segment consist of start frequency, stop frequency, sweep time, and marker frequency. These parameters are entered by programming a standard linear sweep and storing it into a discrete sweep segment as described in *Storing Discrete Sweep Segments*.

To perform a discrete frequency sweep, the HP 3325B sequences through the segment entries, performing the designated sweeps and skipping blank entries. The sequence is always from segment 00 to 99. For single sweep operation, the HP 3325B sequences through the elements each time the sweep is reset and started with the [Reset/Start] key. For continuous sweeps, the HP 3325B sequences through the segments repeatedly.


Clearing All Discrete Sweep Elements



The [Clr Discrete] (clear discrete) key empties all discrete sweep segments in nonvolatile memory. This should be done before entering new parameters. The [Clr Discrete] key is activated by pressing the blue [Shift] key and then the green [Instr Preset] key.

Storing Discrete Sweep Segments

Discrete sweep entries may be made whether the discrete sweep is active or not. Each sweep segment is a linear sweep; it may be considered a frequency step if the start frequency is the same as the stop frequency. The entries are saved in nonvolatile memory.

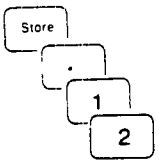


To store a discrete sweep segment:

1. Enter the start and stop frequencies, sweep time, and (optionally) the marker frequency as you would for any linear sweep.
2. Press the [Store] key.
3. Press the [.] key in the data group.
4. Enter a two-digit number by pressing numeric keys in the data group. Numbers between 1 and 9 should be preceded with a 0 (zero). No units or other terminating keystrokes are required. This number is the entry number in the discrete sweep segment list, the order of which determines the pattern of the discrete sweep. Segments may be saved in any order but are always executed sequentially from 00 to 99.

Discrete sweep segment entries may also be made by down-loading the parameters from a computer through one of the rear-panel interface connectors. In some cases, this is the preferred method of setting up discrete sweeps; especially if more than one pattern is used on a regular basis. See Chapter 2, Remote Operation, for more information.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Recalling Discrete Sweep Segments

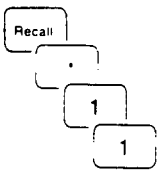


Discrete sweep parameters for any segment (start, stop, and marker frequency and sweep time) may be examined by recalling the discrete sweep segment entry and then pressing the key corresponding to the parameter of interest. To recall a discrete sweep segment:

1. Press the [Recall] key.
2. Press the [.] key.
3. Enter a two-digit number by pressing numeric keys in the data group. Numbers between 1 and 9 should be preceded by a 0 (zero). No units or other terminating keystrokes are required. This number is the entry number in the discrete sweep segment list, the order of which determines the pattern of the discrete sweep. If an empty segment is recalled the message "Error 605" is displayed.

The key sequence [Recall], [.], [1], [1] recalls the linear sweep segment previously stored in segment 11.

Enabling Discrete Sweeps



The [Discrete] key enables and disables discrete frequency sweeps. The [Discrete] key is activated by pressing the blue [Shift] key and then pressing the [Reset/Start] key. The Discrete indicator illuminates when a discrete frequency sweep is enabled.

Single Discrete Sweeps



The [Reset/Start] key initiates a single discrete frequency sweep. The indicator adjacent to [Reset/Start] key illuminates when a single sweep is in progress. The [Reset/Start] key initiates a sweep from discrete frequency sweep segment 00 to 99, skipping empty segments. Pressing the [Reset/Start] key during a sweep stops the sweep and displays the present frequency. Pressing [Reset/Start] again resets the frequency to the start frequency of the first sweep segment.


Continuous Discrete Sweeps



When discrete sweep is selected, pressing the [Start] key initiates a continuous discrete frequency sweep. The indicator adjacent to [Start] key illuminates when a continuous sweep is in progress. Continuous discrete sweeps sequence through the segment table from 00 to 99, starting again at 00, repetitively. Pressing [Start] while a sweep is in progress stops the sweep.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Modulation

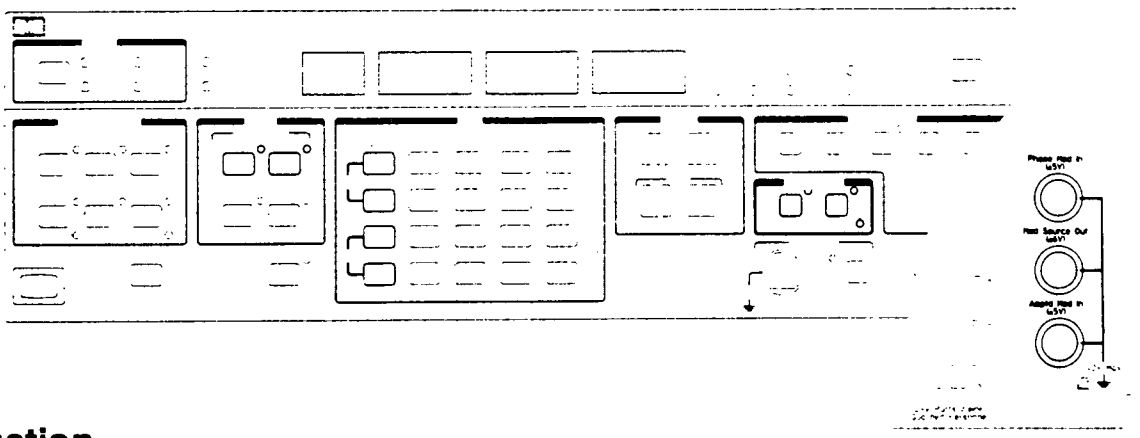



Introduction


The Main Signal may be amplitude or phase-modulated by a signal connected to either of the two corresponding rear-panel connectors (Amptd Mod In or Phase Mod In). The signal may originate from another signal generator or the internal modulation source may provide the signal. After the connections are made to the rear-panel connectors, modulation of the Main Signal is controlled by the operator.

The Mod Source keys provide an independent sine wave, square wave, or arbitrary waveform signal through the rear-panel Mod Source Out connector. This signal may be used to modulate the Main Signal by connecting it to the rear-panel modulation input connector(s) and pressing the appropriate front-panel keys to activate modulation and control the Mod Source signal.

Amplitude Modulation








Amplitude modulation of the Main Signal is enabled by pressing the [AM On] ([Shift] [Store]) key which illuminates the AM indicator. Amplitude modulation is disabled by pressing the [AM Off] ([Shift] [Recall]) key which extinguishes the AM indicator, or by presetting the HP 3325B. The modulating signal is applied to the HP 3325B through the rear-panel Amptd Mod In connectors.

When amplitude modulation is enabled, the value entered for the amplitude of the Main Signal is the maximum value possible, or 100% modulation value. When no modulating signal is present or that signal is 0V, the amplitude of the Main Signal is half the entered value. (0V is considered to be 50% modulation.) A modulation input of approximately 5 V_{pk} results in 100% modulation. Modulation frequency may range from 0 to 400 kHz. If amplitude modulation is on when functions other than sine wave are selected, the output may be gated, depending on the level of the modulation input. Amplitude modulation should only by used with the sine wave function, and the modulation input should not exceed ±10 V_{pk}.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A dc voltage may be applied to the Amptd Mod input to control the HP 3325B output level, or a pulse may be used to gate the output. Approximately +5V cuts off the output signal, while approximately −5V doubles the output (maximum input is 10 V_{pp}). DC or pulse inputs should not exceed ±5 V_{pk}. The impedance of the Amptd Mod input is 10 kΩ (5 kΩ when AM is off).

Phase Modulation

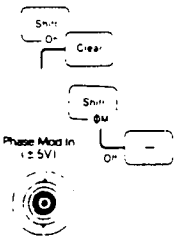

The [ΦM] (phase modulation) keys in the data group enable and disable phase modulation of the Main Signal. Phase modulation is enabled by pressing the [ΦM On] ([Shift] [Clear]) key, which illuminates the ΦM modulation indicator. Phase modulation is disabled by pressing the [ΦM Off] ([Shift] [−]) key, which extinguishes the ΦM modulation indicator, or by presetting the HP 3325B. The modulating signal is applied to the HP 3325B through the rear-panel Phase Mod In connector.

The phase modulation signal at the rear-panel Phase Mod Input connector should not exceed ±10 V_{pk}. The input impedance is 40 kΩ. The modulation signal frequency may be dc to 5 kHz. An input of ±5V results in the following approximate phase deviation (±170° per volt for the sine function):


HP 3325B Function	Phase Deviation
Sine	±850°
Square	±425°
Triangle	±42.5°
±Ramp	±85°

Modulation Source




The modulation source provides a second independent signal source, available at the rear-panel Mod Source Out connector. This signal may be used to modulate the main signal by connecting the mod source out connector to the (amplitude or phase) input modulation connector(s) and then controlling main signal modulation and the mod source signal.

Note The Mod Source output signal should be connected to the Phase or Amplitude Modulation input connector with a BNC coaxial connector at the rear panel. There is no internal connection.




The modulation source is enabled by pressing the Mod Source sine wave or square wave key. The modulation source is disabled by pressing the Mod Source sine wave or square wave key adjacent to the illuminated Mod Source indicator to extinguish that indicator.



The Mod Source amplitude is entered by pressing the [Shift] key followed by the [Amptd] key. The Modulation Source indicator to the left of the display illuminates to indicate the display contains a modulation source value. Valid modulation source amplitudes range from 0.1 to 12 V_{pp} with 0.1V resolution. Amplitudes may be entered in either V_{pp} or V_{rms}.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

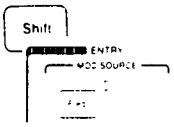

The Mod Source Frequency is entered by pressing the [Shift] key followed by the [Freq] key. The Modulation Source indicator illuminates to indicate the display contains a modulation source value. The sine wave frequency values range from 0.1 Hz to 10 kHz with 2-digit resolution. The square wave frequency values range from 0.1 Hz to 2 kHz with 2-digit resolution. The modulation signal is momentarily disabled during modulation frequency changes.


The Modulation Source is a free-running signal which is not phase-locked to the Main Signal output or External Reference input. It has no DC offset or phase parameters. The Modulation Source output is intended to drive high impedance inputs and should not be terminated in 50Ω. It may be connected to both modulation inputs at the same time but the extra loading may draw the output signal voltage down.

Arbitrary Waveforms



The modulation source may be programmed as an arbitrary waveform source by a computer via HP-IB or RS-232. Once programmed, the waveform is retained in nonvolatile memory and may be initiated from the front panel. Select the arbitrary waveform with the [Shift] Mod Source square wave key which illuminates the Arb indicator. The repetition rate of the arbitrary waveform is set with the [Shift] [Freq] key. Repetition rates range from 0.1 Hz to 10 kHz (the HP 3325B adjusts the value to compatible internal frequencies). The default waveform is dc (after memory is cleared).


Disabling Modulation

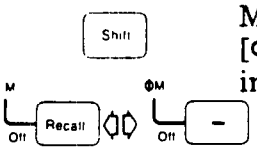

Modulation is disabled by pressing the [AM Off] ([Shift] [Recall]) key or [ΦM Off] ([Shift] [–]) key. The extinguished AM or ΦM modulation indicators provide a visual indication that modulation inputs are disabled.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Storing/Recalling Instrument States

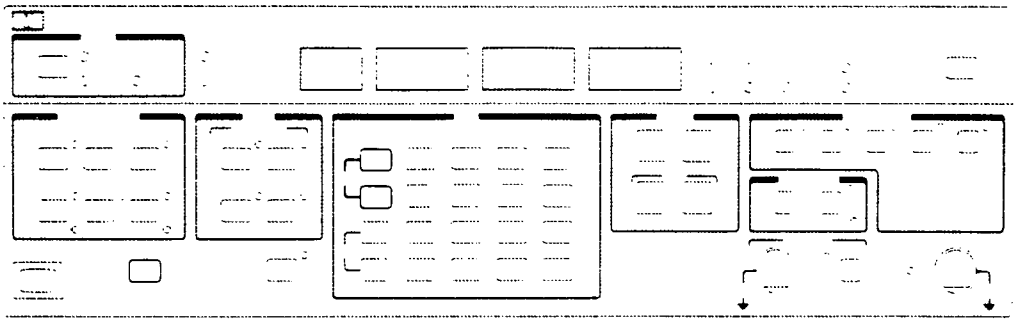

Storing Instrument States

Store

The [Store] key, followed by a digit from 0 to 9, saves the current operating state in internal memory. The digit following the [Store] key specifies the memory location for storing the operating state. If two operating states are saved in the same memory location, the operating state saved first is overwritten. These states are not cleared by instrument preset; they are cleared by a memory clear (power up while pressing the preset key).

Note Any phase information stored is invalid when recalled because the instrument performs an amplitude calibration on Recall. The phase relationship between the output signal and the reference is not maintained when an amplitude calibration occurs.

Recalling Instrument States

Recall


The [Recall] key, followed by a digit from 0 to 9, recalls an operating state saved in internal memory. The digits 0 to 9 select the memory location for the recall operation. Pressing [Recall] [−] recalls the state of the instrument just before it was last powered down.

Memory Clear

Instr Preset

Applying power to the HP 3325B with the green [Inst Preset] key depressed replaces the contents of all nonvolatile memory registers with the instrument preset state. All saved operating states (including power-down) are replaced with the instrument preset state, discrete frequency sweep elements are cleared, the arbitrary waveform registers are set to dc, the HP-IB address is set to 17, and the message "Fail 36" is displayed.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

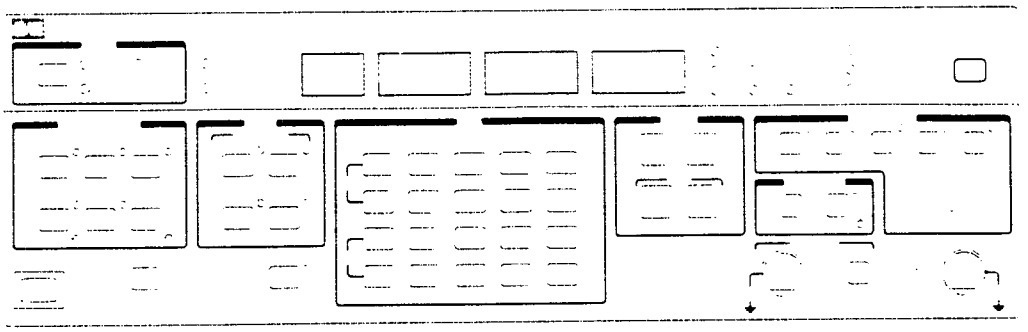


Amplitude Calibration



The [Amptd Cal] key initiates a calibration of the output signal each time the key is pressed. The Main Signal output amplitude changes to less than 4 mV_{pp} while the calibration is in progress. An amplitude and offset calibration is performed automatically whenever the function is changed and at instrument turn-on.

Self Test




A self test is initiated by pressing the blue [Shift] key prior to the [Amptd Cal] ([Self Test]) key. During a self test, all indicators and display segments briefly illuminate, -CAL- is displayed, and a series of internal tests is initiated. After each internal test, Pass or Fail and a number is displayed to indicate the test results. During a self test, the outputs are disabled.

Note If the message "Fail 21" through "Fail 29" is displayed momentarily after a self test, the HP 3325B should be sent to qualified service personnel for repair.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The HP-IB Status Keys/Indicators/Connector

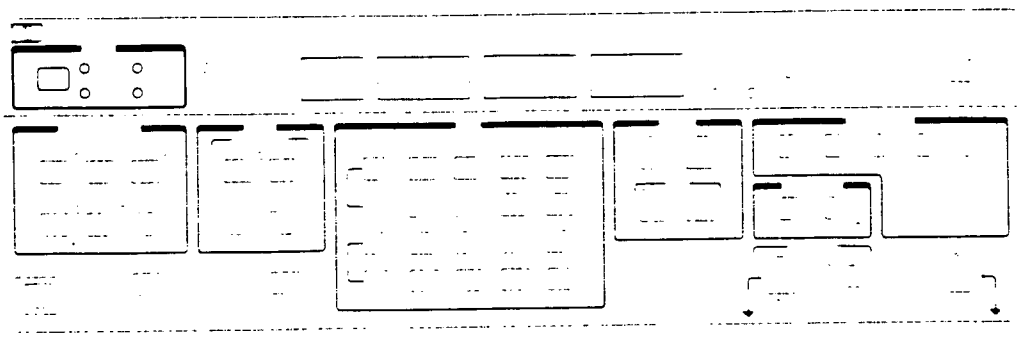

The HP-IB (Hewlett-Packard Interface Bus) key and status indicators are used during remote operation. An overview of the HP-IB and a description of the HP 3325B HP-IB characteristics and commands is contained in Chapter 2.

Local

Local

The [Local] key removes the HP 3325B from remote (HP-IB or RS-232) operation if local lockout is not in effect. Remote operation is indicated by the illuminated Remote indicator.

○ Remote

The Remote indicator illuminates when the HP 3325B is operating under remote control. While in remote (and local lockout is not in effect), only the [Local] key is recognized.

○ Listen

The Listen indicator illuminates when the HP 3325B is addressed to listen over the HP-IB.

○ Talk

The Talk indicator illuminates when the HP 3325B is addressed to talk over the HP-IB.

○ SRQ


The SRQ (service request) indicator illuminates when the HP 3325B has requested service (HP-IB only).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Bus Address




The [Bus Adrs] (bus address) key enables display or entry of the HP-IB address. The [Bus Adrs] key is selected by pressing the blue [Shift] key prior to the [Local] key. After selection of the [Bus Adrs] key, the HP-IB address is entered with the data entry keys or changed with the modify keys. For address values entered with the data entry keys, pressing any units key sets the address. The HP-IB address is an integer in the range of 0 to 31 and is retained in nonvolatile memory. Entering an address value of 31 places the HP 3325B in the listen-only mode and the HP 3325B displays LO rather than the address value.




The HP 3325B is connected to other HP-IB devices through the rear-panel HP-IB connector.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The RS-232 Switches/Indicators/Connector

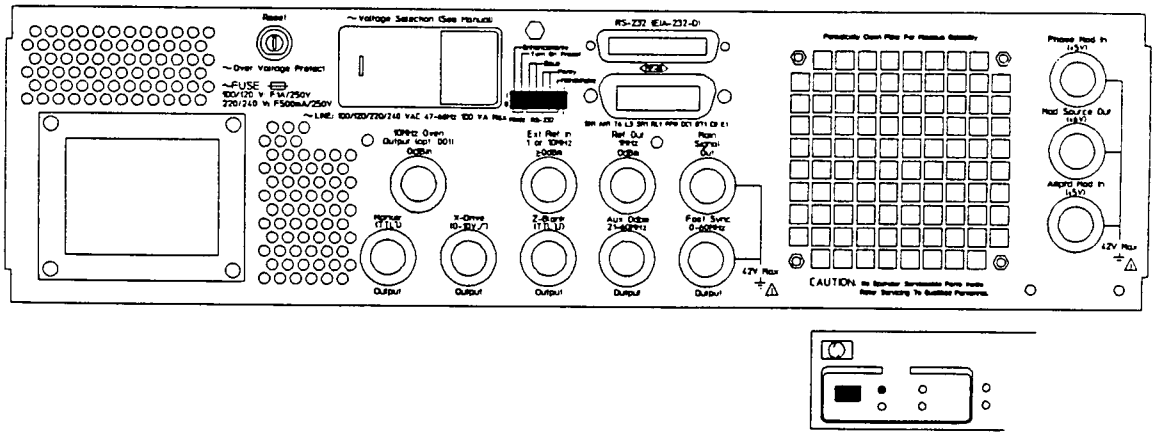


The RS-232 serial interface provides an alternate method (to the HP-IB) of remotely controlling the HP 3325B. Chapter 2 provides an overview of remote operation and contains a complete list of the remote operation commands.



The 25-pin female connector is configured as Data Terminal Equipment (DTE). Chapter 2 contains a description of the characteristics of the connectors. Five of the small switches on the rear panel configure the HP 3325B for operation with the serial RS-232 communications link.

Baud Rate

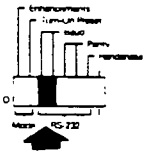

The Baud switches (switches 3 and 4) control the transmission speed (baud rate) of the RS-232 serial interface. Table 1-8 lists the available baud rates and switch settings for them. Whenever the baud switches are changed, the new rate value is displayed. For example, when switch 3 and 4 are placed in the down position, the HP 3325B displays "bAUd = 4800".


Table 1-8. RS-232 Baud Rate

Rate	Switch 3	Switch 4	Display Message
300*	up	up	bAUd = 300
1200	up	down	bAUd = 1200
2400	down	up	bAUd = 2400
4800	down	down	bAUd = 4800

* *Factory setting*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Word Length/Parity

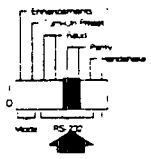


The Parity switches (switches 5 and 6) control the parity and word length of the serial data exchanged with the host computer. Table 1-9 lists the available word lengths and parity and corresponding switch settings. Whenever the parity switches are changed, the new parity value is displayed.

Table 1-9. RS-232 Word Length and Parity

Word Length	Parity	Switch 5	Switch 6
7 data bits *	Even	up	up
7 data bits	Odd	up	down
8 data bits	None	down	up
7 data bits	Zero	down	down

** Factory setting*

Handshaking

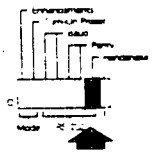

The Handshake switch (switch 7) sets the handshaking characteristics used to communicate with host computer. Table 1-10 lists the handshaking available and corresponding switch settings. Whenever the Handshake switch is changed, the new handshaking characteristics are displayed.

Table 1-10. RS-232 Handshaking

Handshaking	Switch 7	Display Message
Software (Xon/Xoff) *	up	HAnd = Soft
Hardware (DTR/RTS)	down	HAnd = dtr

** Factory setting*

RS-232 Local/Remote




The [Local] key removes the HP 3325B from remote (HP-IB or RS-232) operation if local lockout is not in effect. Remote operation is indicated by the illuminated Remote indicator.



The Remote indicator illuminates when the HP 3325B is operating under HP-IB or RS-232 control. While in remote (and local lockout is not in effect), only the [Local] key is recognized.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Marker / Z-Blank (Pen Lift) / X-Drive Outputs

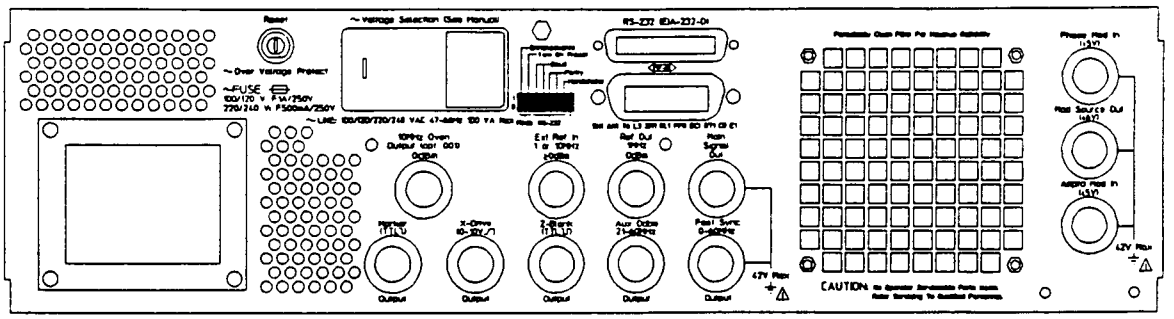

The Marker, Z-Blank, and X-Drive connectors provide outputs to drive an analog plotter or oscilloscope display during sweep operation.

Marker



The rear-panel Marker connector provides a TTL-level signal indicating when the sweep frequency reaches the value entered for the marker frequency.

Single/Continuous Linear Sweep

During a sweep up, the marker signal starts at a high level at the start frequency, drops to a low level at the selected marker frequency, and returns to the high level at the stop frequency. The marker output is disabled during a sweep down. If the marker value entered is out of the sweep span, no marker transition occurs.

Log Sweep

The marker is disabled during log sweeps.

Discrete Sweep

For discrete frequency sweeps, the marker goes to a high value at the start of each frequency segment, drops to a low level at the selected marker frequency and remains low until the start of the next sweep segment. Each of the sweep segments may have a different marker frequency. (See the discussion on discrete sweeps, earlier in this chapter, under Frequency Sweeps.) If the marker value entered is out of the sweep span of the segment, the marker output stays high during the duration of the sweep segment. The marker functions for up or down-sweeps when executing discrete sweeps. If the start, stop, and marker frequency parameters of a segment are equal, the marker output is low during the segment sweep time.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Z-Blank



The Z-Blank output drops low at the start of sweep and remains low until the end of a sweep. At the end of a sweep, the Z-Blank output signal goes to a high level and remains high until another sweep segment is initiated. The Z-Blank connector is located on the rear panel and the output is TTL-compatible. The Z-Blank low level is capable of sinking current from a positive voltage source through a pen-lift circuit or other device. When this output is low the maximum Z-Blank ratings are:

Maximum current sink: 200 mA
Allowable voltage range: 0 to +42V dc
Maximum power (voltage at output × current): 1 W

Single Linear Sweep

Z-Blank drops to a low level at the start of sweep and remains low until the end of a sweep. At the end, the Z-Blank output goes to a high level and remains high until the sweep is restarted.

Continuous Linear Sweep

Z-Blank drops to a low level during the sweep up, and goes to a high level for the sweep down.

Single Log Sweep

Z-Blank drops to a low level at the start frequency, and goes to a high level at the stop frequency and remains high until the sweep is restarted.

Continuous Log Sweep

Z-Blank drops to a low level at the start frequency, and momentarily goes to a high level at the stop frequency.

Discrete Frequency Sweep

Z-Blank drops low at the start of the first segment and stays low until the end of the last segment, when it returns to a high level. During continuous sweeps, Z-Blank remains high for approximately 400 μs.

X-Drive



During sweep operation, the rear-panel X-Drive connector provides a 0 to > 10 volt linear ramp proportional to the sweep time (ramps up). For sweep times of 100 seconds or more the X-drive output stays at 0 volts.

Note The X-Drive output has a nominal voltage of just over 10 volts at the end of a sweep to ensure compatibility with oscilloscopes with a horizontal sensitivity of 10 volts for full-screen deflection.

Single Linear Sweep

During a sweep, X-Drive Out increases linearly from 0 to > 10 volts from the start frequency to the stop frequency. At the end of a sweep, the output remains at approximately 10 volts until reset for the start of the next sweep. (Voltage drifts downward less than 10 mV/s.)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Continuous Linear Sweep

During the up sweep, X-Drive output signal increases linearly from 0 to > 10 volts. The output drops to 0 volts at the start of the down sweep and remains there during the down sweep.

Log Sweep


X-Drive increases linearly from 0 to > 10 volts with the sweep segments.

Discrete Frequency Sweep

The X-Drive output is disabled during discrete sweeps.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Synchronization Outputs

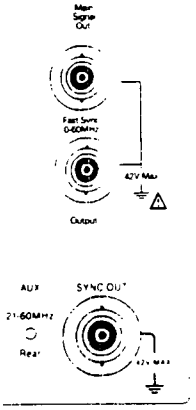

A square wave with the frequency and phase of the main signal output is available at the front-panel Sync (synchronous) Out and rear-panel Fast Sync connectors. The Sync transition occurs at the signal zero-crossing or when the signal crosses the dc offset voltage.

The output impedance of Sync Out is approximately 50Ω with a frequency range matching the main signal output. When the Sync Out output is terminated in a 50Ω resistive load, the output levels are:


Front Sync	Rear Fast Sync
Low level < +0.2V	Low level < +0.5V
High level > +1.2V	High level > +1.5V

Note When the Sync output is connected to a high impedance load (≥ 1 MΩ), the voltage levels are approximately twice the values listed. Improper termination of a 50Ω system may cause ringing at the signal positive and negative transitions. It may be terminated into larger impedances, if necessary to drive TTL circuits to 60 MHz.

The rear-panel Fast Sync output impedance is approximately 50Ω with a frequency range extended to 60 MHz. The output levels for the Fast Sync connector may fall below the TTL minimums when terminated into 50Ω.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

AUX 0 dBm 21–60 MHz Output (Extended Frequency)

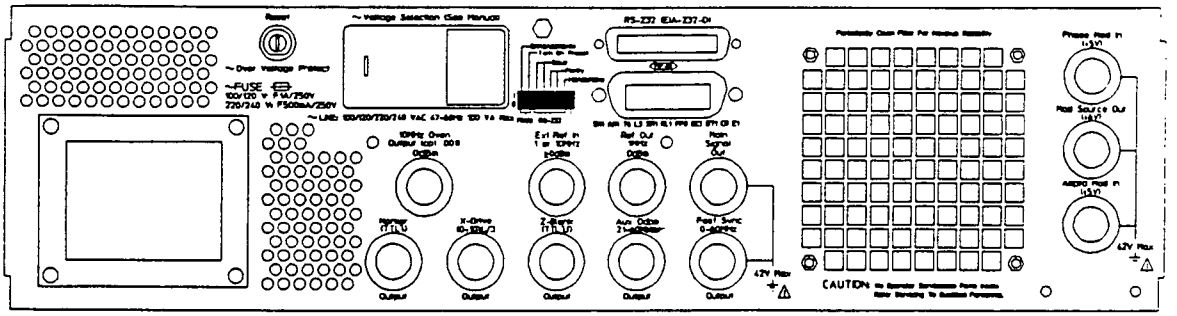





The rear-panel Aux 0 dBm 21–60 MHz connector supplies a signal when the HP 3325B frequency is set above 21 MHz. Once active, the frequency of this output ranges from 19 MHz to a maximum of 60 999 999.999 Hz. Frequencies below 19 MHz reactivate the main signal output connector. The auxiliary output is ac-coupled with a level approximately 0 dBm into 50Ω.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

External Reference or Oven-Stabilized Frequency Option

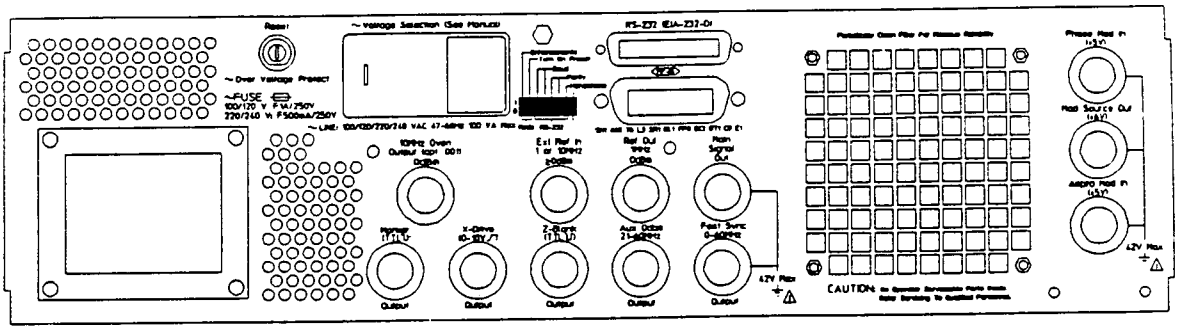

10 MHz Oven Output (High-Stability Frequency Reference)

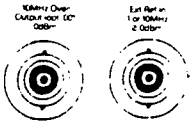

The 10 MHz oven output signal is available at a connector on the rear panel if the high-stability frequency reference (option 001) is installed. It is a 10 MHz temperature-stabilized crystal oscillator which connects to the HP 3325B frequency reference input by connecting the 10 MHz oven output connector to the External Ref In connector with a BNC-to-BNC adapter (HP part number 1250-1499). The 10 MHz oven signal has a level greater than 0 dBm (50Ω). The output signal is present whenever the HP 3325B is connected to a power source.

To reduce the warmup time and obtain maximum performance from an HP 3325B equipped with option 001, leave the HP 3325B connected to a power source. Power is supplied to option 001 whenever the HP 3325B is connected to a power source. An HP 3325B with option 001 requires 15 minutes of warmup time to meet frequency specifications if power is disconnected for less than 24 hours. If power is disconnected for more than 24 hours, the HP 3325B may require up to 72 hours of warmup time to meet frequency specifications.

External Frequency Reference



The External Ref In connector phase-locks the HP 3325B to external frequency references. Phase-locking to an external frequency reference transfers the external reference's frequency accuracy and aging rate to the HP 3325B. The level of the frequency reference must be from 0 dBm to +20 dBm (50Ω). The frequency must be 10 MHz (±10 ppm) or a subharmonic down to 1 MHz (e.g., 1, 2, 3.33, 5, or 10 MHz). The front-panel Ext Ref indicator illuminates when the HP 3325B is connected to an external frequency reference. The Ext Ref indicator blinks if the HP 3325B is unable to synchronize to the reference. The 10 MHz oven output normally connects to the External Ref In connector if the high stability frequency reference (option 001) is installed.



The Ref Out 1 MHz connector supplies a 1 MHz square wave derived from the frequency reference of the HP 3325B. The square wave has a level greater than 0 dBm (50Ω) and can be used to phase-lock an analyzer or other instrumentation to the frequency reference of the HP 3325B.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 2
REMOTE OPERATION

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 2
REMOTE OPERATION

This chapter contains two sections:

1. General information concerning the operation of the selected interface (either HP-IB or RS-232)
2. Interface commands specific to the HP 3325B.

The first is an overview of the Hewlett-Packard Interface Bus (HP-IB) and its relationship to the HP 3325B as well as a general description of the RS-232 interface. Both contain information that is general interface information, only; i.e., commands that might be used with any instrument.

The second section contains descriptions of commands used specifically for the HP 3325B.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Multiple Controller Capability

In systems with more than one controller, only one controller can be active at a time. The active controller can pass control to another controller but only the system controller can assume unconditional control. Only one system controller is allowed per system.

Interface Circuits

Driver and receiver circuits are TTL compatible.

Bus Structure

The HP-IB signal lines consist of eight data lines (DIO1–DIO8), five bus management lines, (explained in following text), and three handshake lines. This is shown in figure 2-1.

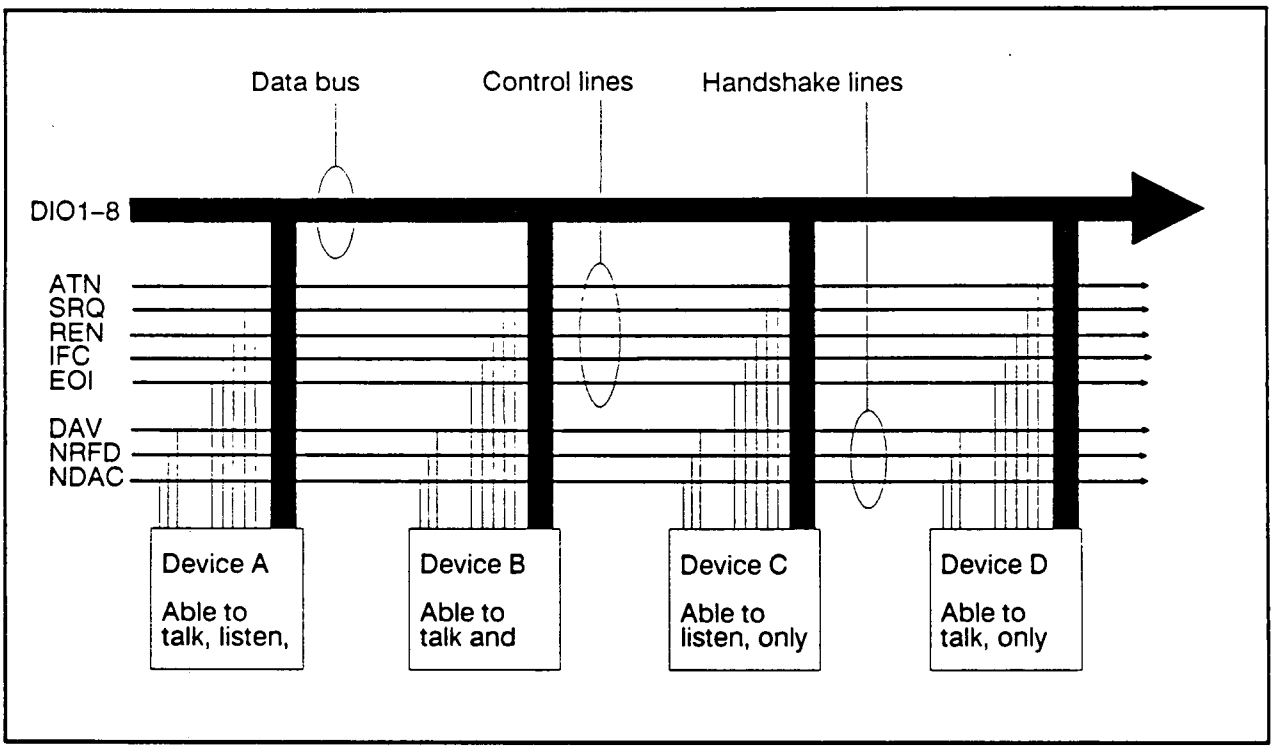


Figure 2-1. HP-IB Structure

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HP-IB Management (Control) Lines

ATN — Attention. This line is used by the active controller to define how information on the data lines should be interpreted by other devices on the bus.

When ATN is low (true) the HP-IB is in the *command mode* and the data lines should be interpreted as *bus commands* (see "Bus Commands" later in this chapter). In the command mode the controller is active and all other devices are waiting for instructions. Also, devices on the HP-IB are addressed or unaddressed as listeners or talkers while the bus is in command mode.

When ATN is false the HP-IB is in *data mode* and the data lines should be interpreted as device-dependent commands. In the *data mode*, data and instructions are transferred between devices on the HP-IB. Instructions transferred to the instrument are called *device-dependent commands*. All the commands specifically for the HP 3325B fall into this category. The HP 3325B device-dependent commands configure the HP 3325B, initiate measurements, initiate data transfers, or define error-reporting conditions. These device-dependent commands are meaningless for other instruments. The HP 3325B device-dependent commands are listed later in this chapter under the heading "HP 3325B Remote Operation Command Set."

SRQ — Service Request. This line is set low (true) by any instrument requiring service. The controller should be programmed to respond to most service requests by polling the devices on the bus to determine which one initiated the request. The HP 3325B responds to a serial poll by putting its status byte on the data lines.

REN — Remote Enable. The system controller must set REN low and then address specific device(s) to listen before they can operate under remote control.

IFC — Interface Clear. Only the *system controller* can activate the IFC line. When IFC is set true (low), all devices on the bus become inactive.

EOI — End Or Identify. This line is used to indicate the end of a multiple-byte transfer sequence (in the *data mode*) or by the controller, in conjunction with ATN, to execute a parallel poll.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HP 3325B HP-IB Capability

The HP 3325B interfaces to the HP-IB as defined by IEEE Standard 488-1978. The interface functional subset which the HP 3325B implements is specified in table 2-1.

Table 2-1. HP 3325B HP-IB Capability

Code	Function
SH1	Complete source handshake capability
AH1	Complete acceptor handshake capability
T6	Basic talker; serial poll; unaddressed to talk if addressed to listen; no talk-only
L3	Basic listener; unaddressed to listen if addressed to talk; listen-only
SR1	Complete service request capability
RL1	Complete remote/local capability
PP0	No parallel poll capability
DC1	Device clear capability
DT1	Device trigger capability
C0	No controller capability
E1	Driver electronics – open collector

Talk/Listen Addresses

Each HP-IB device has at least one talk and one listen address unless the device is either totally transparent or is a talk-only or listen-only device. Device addresses are used by the active controller in the *command mode* (ATN true) to specify the talker (via a talk address) and the listener(s) (via listen addresses). Only one device may be addressed to talk at a time.

The address of a device is usually preset at the factory but may be set to another value during system configuration. In the binary representation of the address, the device address is the decimal equivalent of the five least-significant bits of the address. (On HP-IB devices with selector switches, these are the five address switches.) The address can be from 0 to 31, inclusive. The sixth and seventh bits determine if the address is a talk or listen address, respectively. High-level HP-IB controllers typically configure these two bits automatically. Table 2-2 lists the HP-IB addresses if a controller requires the talk and listen addresses.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 2-2. HP-IB Addresses

Device Address	Binary Address	Address Characters Talk	Listen	
0	0000 0000	@	Space	
1	0000 0001	A	!	
2	0000 0010	B	"	
3	0000 0011	C	#	
4	0000 0100	D	$	
5	0000 0101	E	%	
6	0000 0110	F	&	
7	0000 0111	G	'	
8	0000 1000	H	(	
9	0000 1001	I	)	
10	0000 1010	J	*	
11	0000 1011	K	+	
12	0000 1100	L	,	
13	0000 1101	M	-	
14	0000 1110	N	.	
15	0000 1111	O	/	
16	0001 0000	P	0	
17	0001 0001	Q	1	(HP 3325B default address)
18	0001 0010	R	2	
19	0001 0011	S	3	
20	0001 0100	T	4	
21	0001 0101	U	5	(typically the controller)
22	0001 0110	V	6	
23	0001 0111	W	7	
24	0001 1000	X	8	
25	0001 1001	Y	9	
26	0001 1010	Z	:	
27	0001 1011	[	;	
28	0001 1100	\	<	
29	0001 1101	]	=	
30	0001 1110	^	>	

The talk and listen addresses fall within the printable ASCII character set. When a device receives one of these characters while ATN is true, it becomes addressed. The ASCII character "?" (ASCII 31) unaddresses all devices while ATN is true. The device address (set from the HP 3325B front panel) is used by HP-IB controllers, most of which automatically send the talk and listen address characters.

Viewing the HP 3325B HP-IB Address

The HP-IB address is stored in a nonvolatile memory location(there are no address switches). The address appears in the display when you press [Bus Adrs] key ([Shift] [Local]). The address message is removed from the display by pressing another key that requires the display.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Changing the HP-IB Address

Every device on the HP-IB must have a unique address. The HP 3325B address can be set at any address between 0 and 31, inclusive, and is stored in internal nonvolatile memory. When selecting an address, remember that the controller also has an address (usually 21).
To change the HP-IB address:

1. Press the blue [Shift] key followed by the [Local] key in the HP-IB Status block to display the HP-IB address.
2. Enter the address with the data entry keys or change it with the arrow keys.
3. Press any units key to enter the new address.

Notes

An address entry of 31 sets the HP 3325B to *listen only* and the message "Addr. = LO" appears in the display.

If you enter an address greater than 31, the message "Error 100" appears in the display (entry parameter out of range).

The HP-IB address is reset to 17 after a memory clear operation (hold down the Preset key and cycle power).

Bus Commands

The HP-IB interface system operates in one of two modes, controlled by the ATN bus management line: *command mode* (ATN true) or data mode (ATN false). (If an HP controller is used, the bus management lines are configured automatically and all necessary command strings are issued.)

Bus commands are issued while the HP-IB is in the command mode. These commands may instruct the instrument's HP-IB interface to control the instrument (like Clear or Trigger) but are more often used for bus management (Remote, Local, Polls, Service Request, Abort interface activity, or Pass Control). Bus commands are issued through the use of one of the five bus management lines or through the eight-bit data bus. The bus commands and the HP 3325B responses to them are described in the following:

Abort

The *abort* command (interface clear – IFC true) halts all HP-IB activity. The system controller assumes unconditional control of the bus. The HP 3325B responds by becoming unaddressed.

Clear

The clear command causes all devices addressed to listen to reconfigure themselves to a predefined device-dependent condition. The HP 3325B responds to the clear command (both the device clear, DCL, and selective device clear, SDC) by clearing the interface command buffer of any pending commands, clearing the error register, and resetting the instrument to the Preset state.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Clear Lockout/Set Local

The clear lockout/set local command removes all devices from the local lockout mode and returns the HP 3325B to local (front panel) control. The HP-IB is in the local mode because the REN bus management line is set false.

Local

The *local* command clears the remote command from the listening device and returns the listening device to local (front panel) control. If local lockout is not in effect, the HP 3325B responds by returning to front panel control. The Remote indicator on the front panel extinguishes if the HP 3325B is in Remote prior to the Local command.

Local Lockout

The *local lockout* command disables the Local front panel key to avoid operator interference. The HP 3325B front panel is locked out.

Parallel Poll

The *parallel poll* command is a controller operation used to obtain information from the devices under its control. The HP 3325B does not respond to this bus command.

Pass Control

The *pass control* command shifts system control from one controller to another. The HP 3325B does not respond to this command.

Remote

The *remote* command directs an instrument to take instructions from the HP-IB instead of the instrument's front panel. To implement the remote command, the controller must set the REN bus management line true. When the HP 3325B accepts the remote command, the Remote front panel indicator illuminates and the front panel is disabled except for the Local key which can return control of the instrument to the front panel if pressed. If the *local lockout* message is also issued, the mode cannot be changed from remote to local via the front panel [Local] key.

Serial Poll

The *serial poll* is issued by the active controller along with a specific address. If the address matches the address setting of the HP 3325B, it responds by putting its status byte on the data lines for the controller to read. The HP 3325B status byte consists of eight bits indicating the states of several operating parameters (refer to "The Status Byte").

Service Request

The *service request* (SRQ) bus management line is used by a device to indicate a need for attention from the controller. When the HP 3325B requires service (as is determined by the setting of the status byte mask) it issues an SRQ (pulls the SRQ line low), sets bit 6 of the status byte (see the "Status Byte"), and illuminates the front panel SRQ indicator. The SRQ is cleared by executing a serial poll of the HP 3325B. Bit 6, the require-service bit, is sometimes referred to as the status bit in connection with a poll. Bits 0, 1, 2, and 3 in the status byte may initiate an SRQ, depending on the setting of the status byte mask. The status byte may be masked to select which of the four bits cause the HP 3325B to issue the SRQ.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Trigger

The *group execute trigger* (GET) or *selective device trigger* (SDT) command causes all addressed instruments with HP-IB trigger capability to execute a predefined function simultaneously. The HP 3325B responds to the HP-IB trigger command by starting a single sweep, providing the HP 3325B is in the enhancements mode and the sweep was reset using the RSW command.

Masking The Status Byte

The HP 3325B MS and ESTB commands specify which bits in the status byte are enabled (to generate an SRQ). These commands are described under the HP 3325B Remote Control Command Set. Table 2-3 describes the HP 3325B status byte and lists the decimal value of each bit position.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The Status Byte

The status byte is an eight-bit word transmitted by the HP 3325B in response to a serial poll. The state of each bit indicates the status of an internal HP 3325B function. Table 2-3 describes the HP 3325B status byte bit positions and the events and conditions that set and reset each bit. A status bit is enabled (set) when the condition it represents changes from false to true. When a bit is enabled, bit 6 is also set and an SRQ is generated if the Boolean AND of the status byte and the status byte mask is not equal to zero. See the MS command and table 2-3 for more information on masking the status byte.

Table 2-3. HP 3325B Status Byte

Bit	Value	Description
B0	1	**ERR.** Program or front panel entry error. Use IER or ERR? to query for error number. Set when an error occurs. Cleared by a serial poll, QSTB?, or power on. Not cleared by HP-IB clear, *RST, ERR?, or IER commands.
B1	2	**STOP.** Sweep stopped; set by completion of a single sweep or by and command that stops a single sweep. Cleared by a serial poll, QSTB?, or starting a sweep. Not cleared by the HP-IB clear command, *RST command, or a single sweep reset.
B2	4	**START.** Sweep started. Set when a dingle or continuous sweep starts. Cleared by serial poll, QSTB?, completion of a single sweep, or any command that stops a sweep.
B3	8	**FAIL.** Hardware failure. Set by Self Test failure, Calibration failure, External Reference Unlock, Oscillator Unlocked, or Memory Lost conditions. Cleared by power-on, serial poll, and QSTB?. Not cleared by HP-IB clear or *RST.
B4	16	**Bit 4.** Always zero.
B5	32	**SWEEP.** Set when a sweep is in progress, clear when a sweep is not in progress. Cannot be configured to cause SRQ.
B6	64	**Require Service.** Set when the HP 3325B requires service (sent an SRQ). Its main function is to identify the instrument as having requested service when it is polled by the controller. It is set by the occurrence of an event which sets the ERR, STOP, START, or FAIL bits (if they are not masked; see the MS command and table 2-34). Cleared by a serial poll or QSTB? command, an HP-IB clear command, a *RST (reset) command, when the HP 3325B is preset (front panel), or when power is cycled. NOTE: this status bit is not set if one of the bits which sets it is set but masked, and is then unmasked. Recommend you poll after changing the mask.
B7	128	**BUSY.** Set while a command is being executed, clear when instrument is not busy. Cannot be configured to enable SRQ.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Remote Operation via RS-232 Interface

Description of the RS-232 Interface

The RS-232 interface provides a serial data communications link between the HP 3325B and controllers such as desktop computers.

Note The RS-232C interface can be used when it is not possible or feasible to use the HP-IB. Never try to use both the RS-232 interface and HP-IB at the same time.

Serial data communication differs from the HP-IB in that serial data is transmitted one bit at a time while the HP-IB moves a byte (eight bits) at a time. The serial data format is shown in figure 2-2.

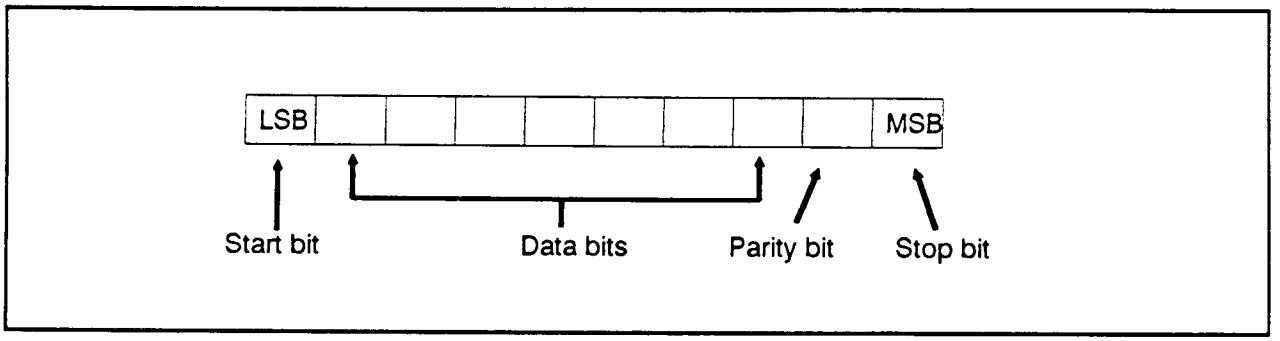


Figure 2-2. Serial Word Configuration

The HP 3325B RS-232 interface implements a subset of the signals defined in ANSI/EIA-232-D-1986 and CCITT V.24. The connector is a standard 25-pin female connector configured as Data Terminal Equipment (DTE). The HP 3325B sends and receives ASCII characters using an asynchronous format.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 2-4. RS-232 Connector Pin Assignments

Pin No.	Signal Name and Description
1	**Shield:** Connected to the HP 3325B chassis.
2	**BA or TXD (transmit data):** Bit-serial data transmitted from the HP 3325B.
3	**BB or RXD (receive data):** Bit-serial data received by the HP 3325B.
4	**CA or RTS (request to send):** An output from the HP 3325B that is usually +10V. If **hardware handshaking** is enabled, this signal changes to −10V when the HP 3325B buffer has room for less than 128 characters.
7	**AB or Signal Ground:** The reference potential for other signals. **Note:** *to prevent ground loops, the HP 3325B RS-232 interface circuits are isolated from earth ground and from signal ground.*
20	**CD or DTR (data terminal ready):** An output from the HP 3325B that is usually +10V. If **hardware handshaking** is enabled, this signal changes to −10V when the HP 3325B buffer has room for less than 128 characters.
	No other pins are connected.

The Cable

A standard printer cable should be used to connect the HP 3325B to another DTE device such as a computer or terminal. The printer cable switches the receive and send connections, as is necessary when a DTE device is connected to another DTE device. Use an HP 13242G to connect the HP 3325B to a controller with a 25-pin connector. Use an HP 24542G to connect to a 9-pin male connector as may be found on a serial interface in a desktop computer. Use an HP 92221P to connect to a 9-pin female connector as may be found on HP Series 9000/300 computers.

A standard modem cable should be used to connect the HP 3325B to a modem (HP 13242N).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Setting The Switches

Seven switches on the RS-232C rear panel determine the interface's baud rate, active handshake, and parity. All switches are set to the up position at the factory. New settings are recognized immediately displayed on the front panel when a switch setting is changed. The switch settings are defined in the following pages.

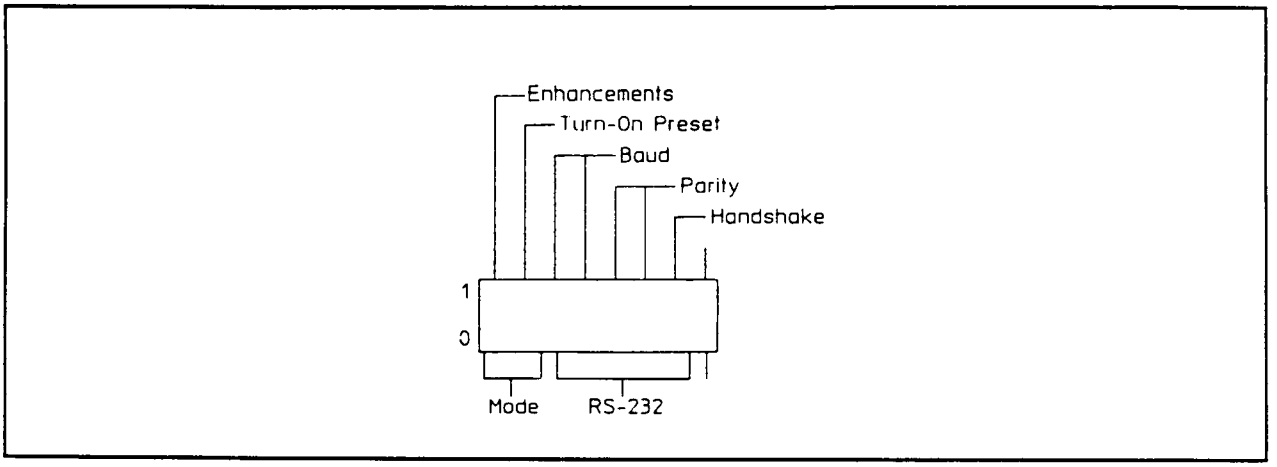


Figure 2-3. Rear-panel RS-232 switches

Mode Settings

Switches 1 and 2 select the enhancements/compatibility setting and the power-on state of the HP 3325B. These two switches are not directly tied to remote operation of the HP 3325B. They are explained here, in the remote control chapter, for the sake of completeness. They are explained again in Chapter 3, General Information.

Enhancements – Switch 1 determines the enhancement setting. *Enhancements* refers to capabilities that are improved on or added to those of the HP 3325A. When the enhancement mode is off, the HP 3325B is in the *compatible* mode. The enhancements mode may also be controlled with the ENH command as described later in this chapter.

Turn-On Preset – Switch 2 determines the turn-on settings. The choice is between the instrument preset state or the state of the instrument when it was last turned off.

Table 2-5. Mode Settings: switches 1 and 2

	Up	Down
Switch 1 – Enhancements	on	off
Switch 2 – Turn-on state	Preset	Turn-off state*

** Requires that enhancements be on*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Baud Rate

Four different baud rates are available. These are selected by changing rear panel switches numbers three and four as shown in table 2-6. When a switch is changed the new baud rate is displayed on the front panel.

Table 2-6. Baud Rate Selection: switches 3 and 4

Baud Rate	Switch 3	Switch 4
300	up	up
1200	up	down
2400	down	up
4800	down	down

Word Length and Parity

Word length and parity are selected by setting switches five and six as shown in table 2-7.

Table 2-7. Switch settings for word length and parity: switches 5 and 6

Description	Switch 5	Switch 6
7 data bits, 1 parity bit, even parity	up	up
7 data bits, 1 parity bit, odd parity	up	down
8 data bits, no parity	down	up
7 data bits, 1 parity bit, parity bit always 0 (zero)	down	down

Handshake Selection

Handshaking, or *receive pacing*, is performed by the HP 3325B to prevent its character buffer from overflowing. Data is lost if it is sent to the HP 3325B when its data buffer is full. The data buffer can hold 256 characters. The handshaking may be accomplished with one of two different methods, selected with switch 7: *software handshake* or the *hardware handshake*.

When *software handshaking* is selected, the HP 3325B sends the Xoff character (decimal 19 or DC3) when there is room for less than 128 characters in its buffer. After sending Xoff the HP 3325B processes characters until there is room for 256 characters, when it sends the Xon character (decimal 17 or DC1) to indicate that it is ready for more characters.

The *hardware handshake* performs the same function using hardware connections to signal its readiness for data. Both the RTS (request to send) and DTR (data terminal ready) lines become false (−10V) when there is room for less than 128 characters in the character buffer. This handshake is not recommended when the HP 3325B is connected to a modem since dropping the DTR line may cause the modem to disconnect.

The HP 3325B uses receive handshaking, only. It does not respond when it receives the Xoff character and no hardware connection is made which would signal it to stop sending data. All data sequences sent by the HP 3325B are short enough that transmit pacing should not be necessary.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 2-8. Setting the Handshake: switch 7

Handshake description	Switch 7
Software (Xon/Xoff)	up
Hardware (DTR/RTS)	down

Remote and Local Functions

The first character of a remote command puts the HP 3325B in *Remote Mode* which causes the Remote LED to illuminate. The Talk and Listen LEDs are not used when using the RS-232 interface for remote control. When the HP 3325B receives the "LCL" command or the [Local] front-panel key is pressed, the HP 3325B returns to front-panel control.

Other remote-control commands that are useful for RS-232 operation are ECHO, RMT, *RST, and QSTB. These are described in more detail later in the chapter.

Note The RS-232 interface does not alert the controlling computer when the instrument issues a service request (SRQ), as the HP-IB does. We recommend checking the status byte periodically with the QSTB? command when the RS-232 interface is used for remote control.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HP 3325B Remote Operation Command Set

The commands for operating the HP 3325B with a computer controller are listed here. Some of these commands correspond to front-panel keystrokes; the rest are remote-only commands. Remote commands corresponding to front panel keys are described in Chapter 1.

The HP-IB Remote status light, located in the HP-IB Status block on the left side of the front panel, indicates whether the instrument is currently operating under *local* (front panel control) or *remote* control. Remote operation is accomplished only via commands transmitted through one of the two interface connectors located on the rear panel.

Note The Remote indicator on the HP 3325B can be used for a quick operational check of the remote interface. If you are using the HP-IB interface, refer to the controller operating manual for a description of the HP-IB Remote message. If you are using the RS-232 interface, send the RMT command. When this message is sent to the HP 3325B, the Remote indicator should illuminate. If this does not occur, check the cabling, the HP 3325B HP-IB address and the syntax of the controller statement (for HP-IB), or the baud rate, word length and parity settings (for RS-232).

Changing from local control to remote control does not alter the current operating state. Changing from local to remote control may be accomplished by issuing a remote command such as REMOTE (HP-IB) or RMT (RS-232).

Changing the HP 3325B from remote control to local control causes the HP 3325B to return to front panel control without changing the operating state. This may be accomplished by either pressing the [Local] key (if local lockout is not in effect), or by issuing a command remote command such as LOCAL (an HP-IB bus message) or LCL (an RS-232 command).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Command Syntax

The following conventions apply to the HP 3325B HP-IB commands:

- The HP 3325B accepts data in 7-bit ASCII code and ignores the 8th (parity) bit.
- All spaces and lower case alphabetic characters are ignored by the HP 3325B; they may be used to improve program readability.
- Under HP-IB control, two data transfer modes are available. Refer to the MD command for more detail. An asterisk or line feed is required to terminate a command string in data transfer mode 2.
- A semicolon can be used to separate commands (recommended but not required).
- Range values may be in integer, real, or exponential form. For positive values, only the first eleven digits of the mantissa are used. For negative values, only the first ten digits of the mantissa are used. Leading zeros before the decimal point are ignored.

The HP 3325B uses the following forms for remote commands:

Command Form	Example	Example Description
<mnemonic>	AC	Amplitude Calibrate
<mnemonic> <data>	FU2	Square wave function select
<mnemonic> <rangedata> <suffix>	AM1.2VO	Amplitude of 1.2 V_{pp}
<mnemonic>?	FR?	Interrogate frequency
<mnemonic>	IFR	Interrogate frequency

where:

- **<mnemonic>** is the HP-IB mnemonic
- **<suffix>** is an alphabetic code for units, function, or mode
- **<data>** is a numeric code for a function or mode
- **<range data>** is the value for an entry parameter
- **?** is used to interrogate the HP 3325B.

A program string for the HP 3325B may contain multiple HP-IB commands such as

"FU2 FR 1 MH AM 2 VO FR?"

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Interrogating The HP 3325B For Setup Parameters

The value of a setup parameter is read over the HP-IB by sending the parameter HP-IB mnemonic followed by a question mark (?). For example, sending the mnemonic FR? sets up the HP 3325B to respond with the frequency value. HP-IB data is transmitted when the HP 3325B is addressed to talk. RS-232 data is transmitted 100 ms after the interrogation. Each interrogation response ends with the carriage return (ASCII 13) and line feed (ASCII 10) characters. Each interrogation may include command mnemonic and suffix, depending on the setting of the HEAD command.

Remote Operation via RS-232 Interface

Setup parameters include frequency, amplitude, offset, phase, sweep start frequency, sweep stop frequency, sweep marker frequency, sweep time, modulation source frequency, and modulation source amplitude.The current value for a setup parameter is displayed on the HP 3325B front panel if the corresponding HP-IB mnemonic is sent without data and a suffix. For example, sending the mnemonic AM displays the amplitude value but does not change the amplitude value.

The units for the displayed value of a setup parameter change to new units if the corresponding command mnemonic and new suffix are sent without data. For example, sending the mnemonic AM DB displays the current amplitude value in dBm. Sending the AM DB command does not change the amplitude value.

Note If the display is disabled with the DSP0 command, the requested value is not displayed.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Command Reference

Syntax Drawing Rules

All characters in circles or ovals are *terminal* symbols and must be sent exactly as shown. Items in boxes are *non-terminal* symbols; descriptions of these items are given following the syntax drawings. Spaces and lower case letters are ignored; they can be inserted to improve readability.

The *Response Format* tables specify what is returned by the instrument in response to a query. All responses are terminated with ‹carriage return› and ‹line feed› with the HP-IB EOI (bus management line) active. The "#" symbol represents one digit.

Definitions

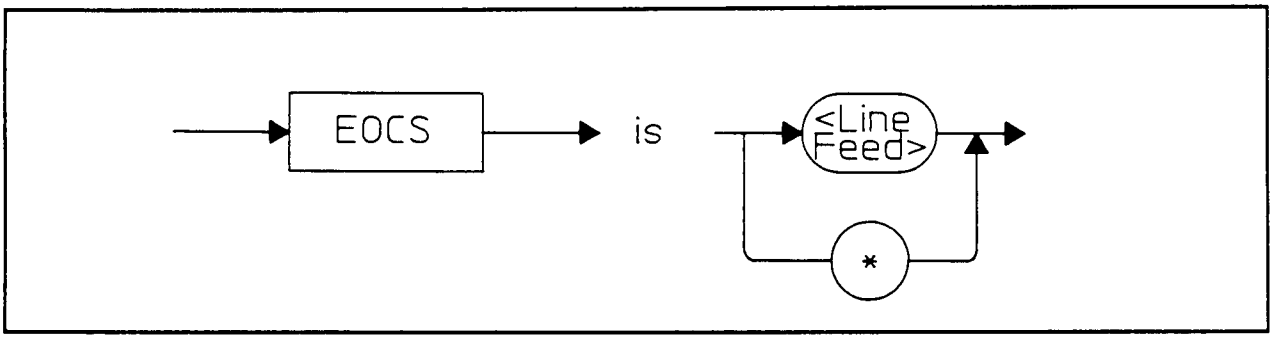


Figure 2-4. Definition of EOCS

The End-Of-Command-String character is used in Data Transfer Mode 2 (see the MD command). In data transfer mode 2, device-dependent commands are accepted and stored in an internal buffer and are not processed until the End-Of-Command-String (EOCS) character is received or the buffer is filled (48 bytes).

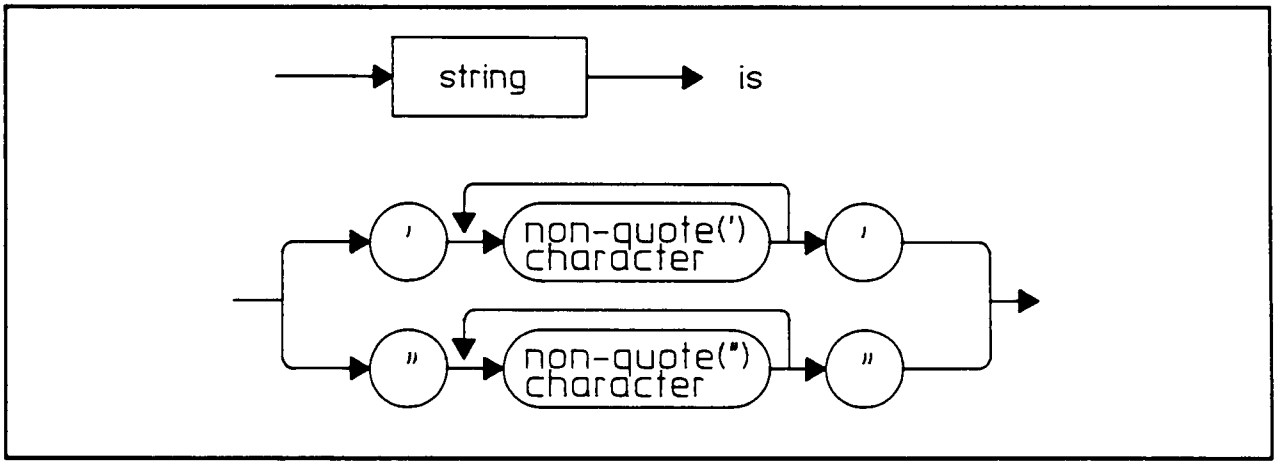


Figure 2-5. Definition of "String"

Strings can not include the End-Of-Command-String characters (* or ‹line feed›).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

AC; Amplitude Calibration Command

The AC command performs an amplitude calibration. If calibration is not successful, the FAIL bit of the status register is set.

Command Availability

	AC
HP 3325B	Yes
HP 3325A	Yes

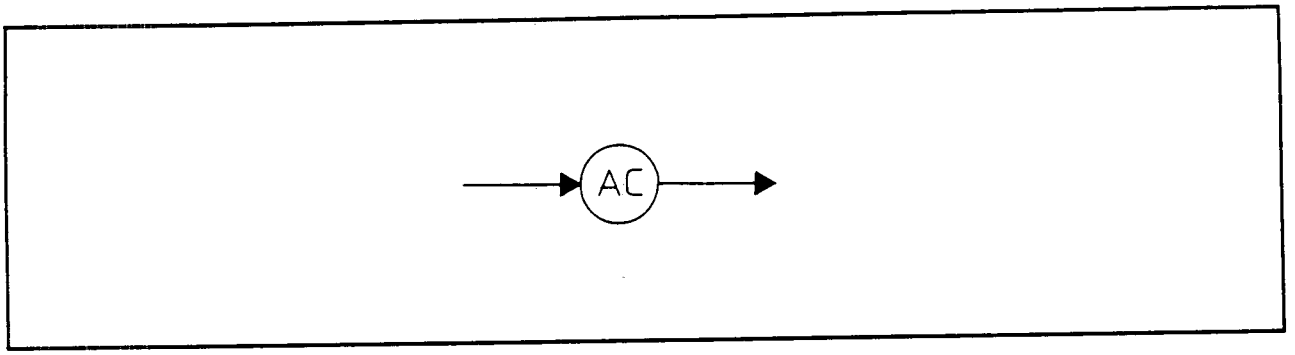


Figure 2-6. AC Syntax Diagram

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

AM; Amplitude Command

The AM command sets the amplitude of the main signal. Sending AM with no value or units displays the current amplitude. Sending AM and units without any value causes the current amplitude to be displayed in the new units. Issuing IAM or AM? causes the instrument to output its current amplitude. See MOAM to set the amplitude of the modulation source.

Instrument Preset value: 1.0 mV_{pp}

Command Availability

	AM	IAM	AM?	DV
HP 3325B	Yes	Yes	Yes	Yes
HP 3325A	Yes	Yes	No	No

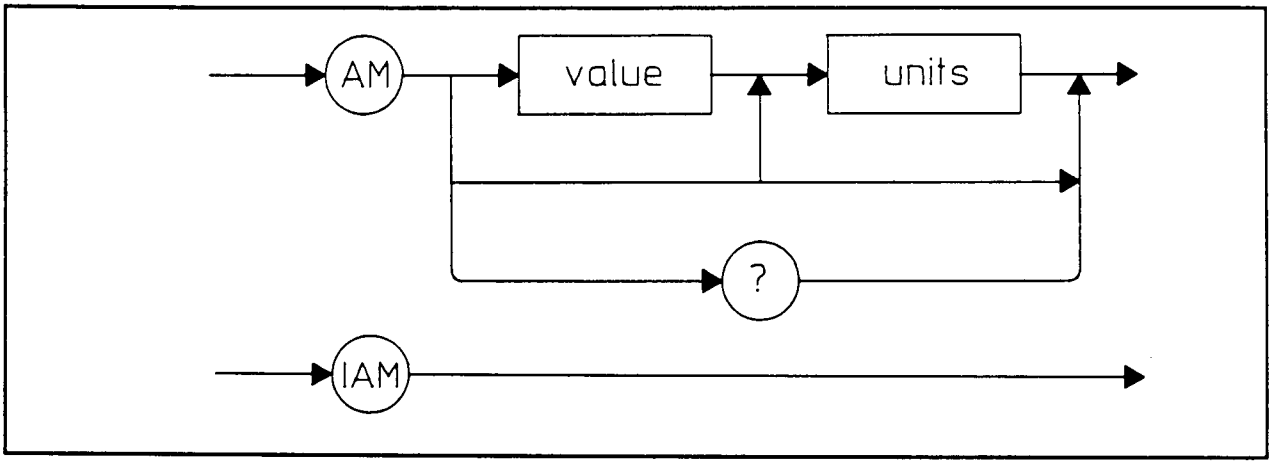


Figure 2-7. AM Syntax Diagram

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 2-9. AM "value" Restrictions Given "units"

Value range	Units	Description	High Voltage"
0.001 →10.0 0.004 → 40.0	VO	V_{pp} On	Off
1.0 → 10000.0 4.0 → 40000.0	MV	mV_{pp} On	Off
0.000354 →3.53 0.00142 → 14.1	VR	V_{rms} On	Off
0.354 → 3530.0 1.42 → 14100.0	MR	mV_{rms} On	Off
−56.02 → 23.98 Illegal	DB	dBm	Off
−69.01 →10.97 −56.97 → 23.01	DV	dBV_{rms} On	Off

Table 2-10. AM? and IAM Response Format

Current Units	HEAD-on response	HEAD-off response
VO or MV	AM#####.######VO	#####.######
VR or MR	AM#####.######VR	#####.######
DB or DV	AM−#######.###DB	−#######.###
DB or DV (special)	AM−#######.###DV	−#######.###

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

AP; Assign Zero Phase Command

The AP command assigns the current phase value to zero; subsequent changes in phase are referenced to that point.

Command Availability

	AP
HP 3325B	Yes
HP 3325A	Yes

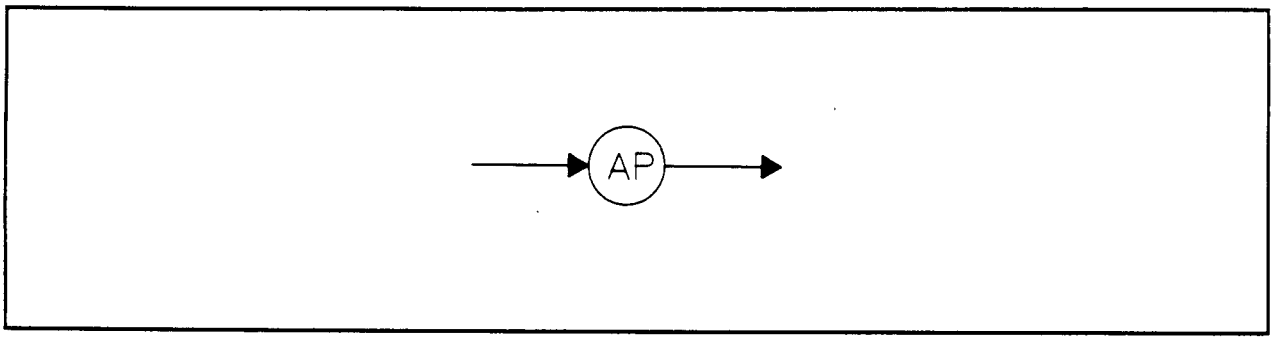


Figure 2-8. AP Syntax Diagram

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

CALM; Calibration Mode Command

The CALM command allows all functions to be calibrated once. In this mode, function changes are faster.

Instrument Power-on value: 0

Instrument Preset, HP-IB clear value: not changed.

Command Availability

	CALM
HP 3325B	Yes
HP 3325A	No

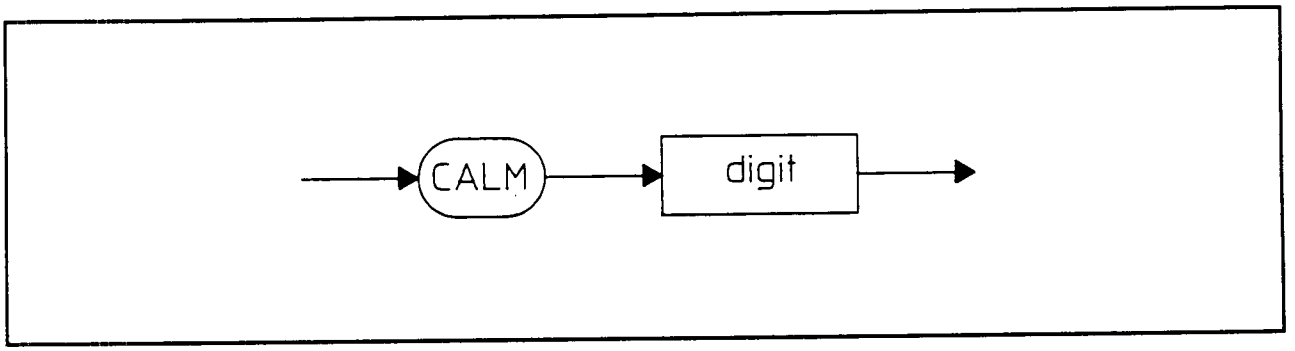


Figure 2-9. CALM Syntax Diagram

Digit	Meaning
0	Perform an Amplitude Calibration whenever the waveform function is changed.
1	Perform an Amplitude Calibration on all functions immediately, do not re-calibrate when waveform function is changed.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

DCLR; Discrete Sweep Table Clear Command

The DCLR command clears all previously stored discrete sweep vectors.

Command Availability

	DCLR
HP 3325B	Yes
HP 3325A	No

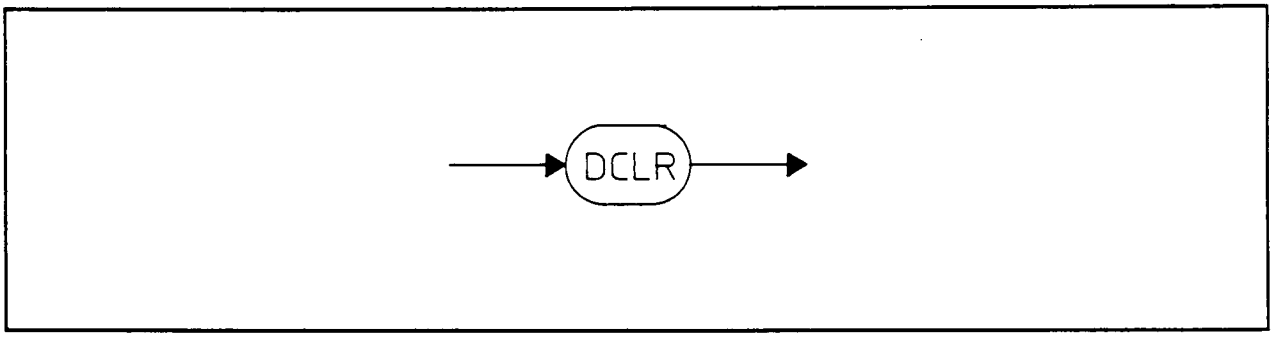


Figure 2-10. DCLR Syntax Diagram

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

DISP; Display On/Off Command

The DISP command and allows the display to be turned off. "DISP OFF" is displayed until the display is turned back on.

Instrument Power-on value: On

Instrument Preset, HP-IB clear value: not changed.

Command Availability

	DISP
HP 3325B	Yes
HP 3325A	No

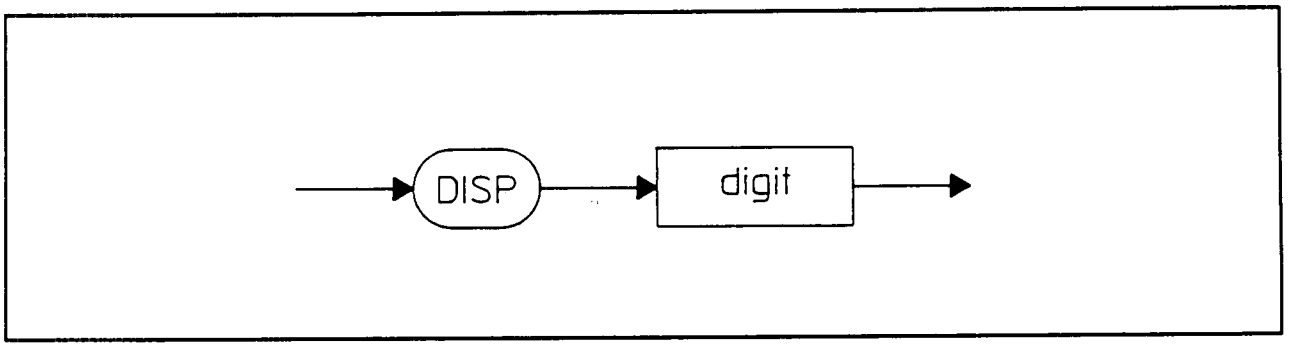


Figure 2-11. DISP Syntax Diagram

digit	Meaning
0	Display off.
1	Display on.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

DRCL and DSTO; Discrete Sweep Store and Recall Commands

DRCL recalls the discrete sweep vector number specified by the two digits. Start frequency, stop frequency, marker frequency, and sweep time values are overwritten with the recalled values.

DSTO saves the current start frequency, stop frequency, marker frequency, and sweep time values in the discrete sweep vector number specified by the two digits.

Command Availability

	DRCL	DSTO
HP 3325B	Yes	Yes
HP 3325A	No	No

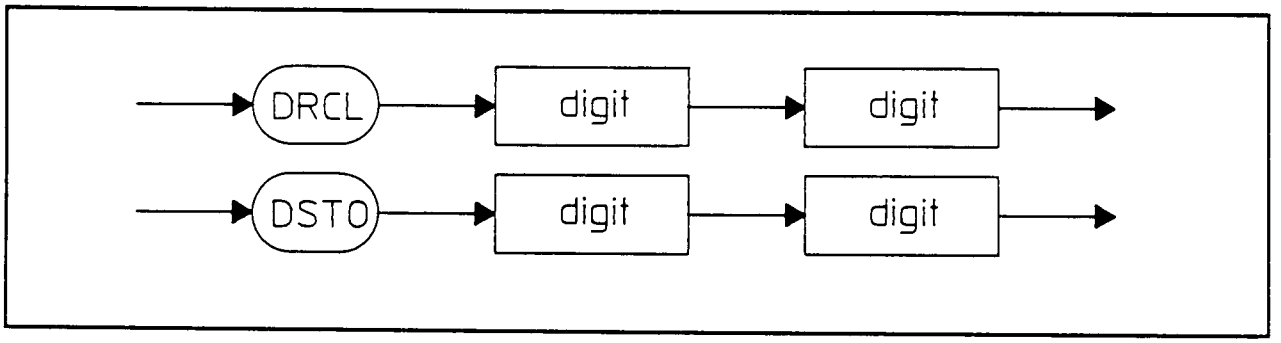


Figure 2-12. DRCL and DSTO Syntax Diagrams

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

DSP; Display String Command

The DSP command allows a message to be put in the instrument's display. Some alphabetic characters may be hard to distinguish when displayed in the 7-segment numeric displays.

Command Availability

	DSP
HP 3325B	Yes
HP 3325A	No

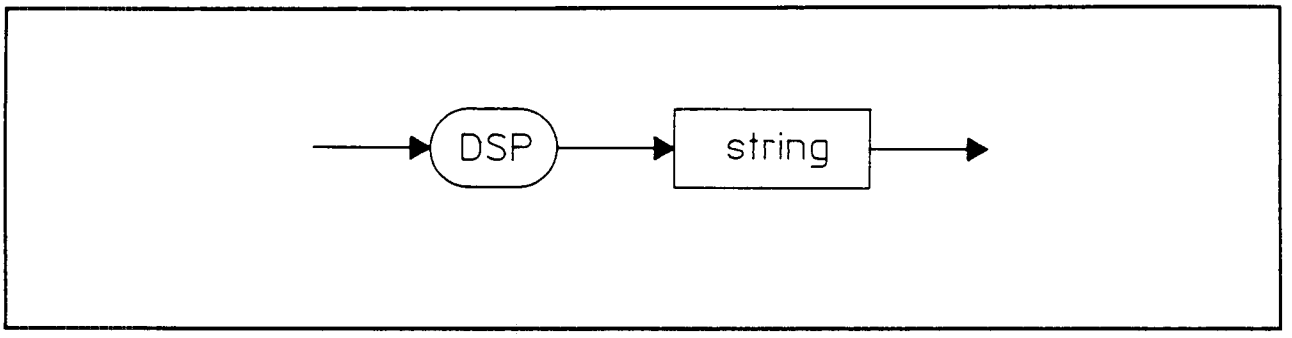


Figure 2-13. DSP Syntax Diagram

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ECHO; RS-232 Echo-Control Command

The ECHO command enables echoing of in-bound RS-232 characters. This is useful when using a full-duplex terminal to program the HP 3325B. The carriage return character is echoed as ‹carriage return› and ‹line feed›.

Instrument Preset, HP-IB clear value: not changed

Instrument Power-on value: 0

Command Availability

	ECHO
HP 3325B	Yes
HP 3325A	No

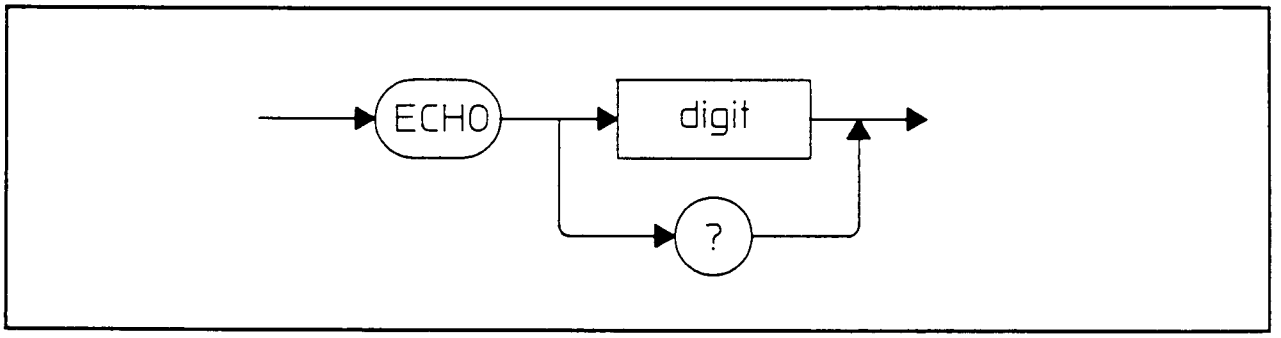


Figure 2-14. ECHO Syntax Diagram

digit	Meaning
0	Do not echo characters.
1	Echo characters.

Table 2-11. ECHO? Response Format

HEAD-on response	HEAD-off response
ECHO#	#

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ENH; Enhancements Control Command

The ENH command selects between the *enhancements* mode and the *compatibility* mode. In the *enhancements* mode, new features of the HP 3325B are enabled. In the *compatibility* mode, some new features are disabled, but only those which may cause compatibility problems. Refer to Chapter 3, General Information, for a description of the differences in the two settings.

Instrument Preset, HP-IB clear value: not changed

Instrument Power-on value: rear-panel switch setting

Command Availability

	ENH
HP 3325B	Yes
HP 3325A	No

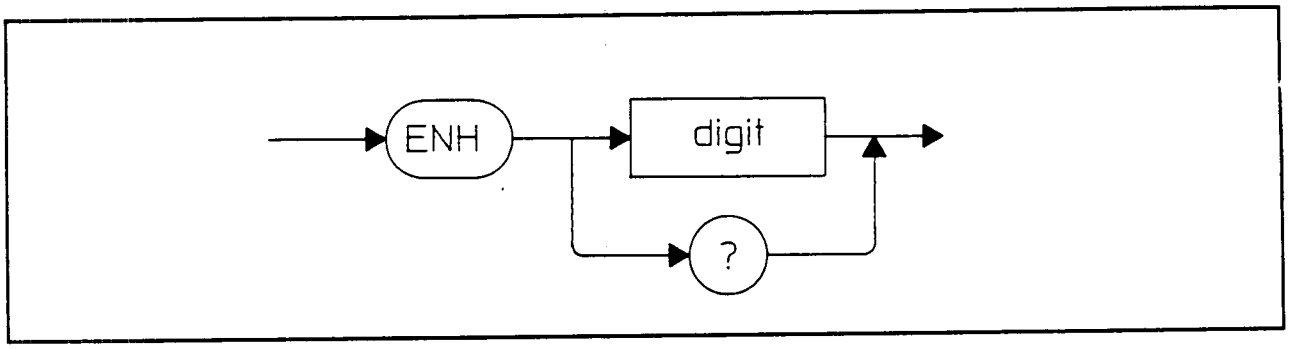


Figure 2-15. ENH Syntax Diagram

digit	Meaning
0	Select the compatibility mode.
1	Select the Enhancements mode.

Table 2-12. ENH? Response Format

HEAD-on response	HEAD-off response
ENH#	#

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ERR? and IER; Error Query

These commands query the instrument for the most recent error code. The IER query returns a one-digit code. The ERR? query returns a three-digit code, the first digit of which is the same as the IER query; the other two digits provide more detail as described in table 2-51 later in this chapter. If no error occurred, 0 is returned. Issuing either command clears both error codes to 0.

Instrument Power-on: Clears any errors.

Instrument Preset, HP-IB Clear: Clears any errors.

Command Availability

	ERR?	IER
HP 3325B	Yes	Yes
HP 3325A	No	Yes

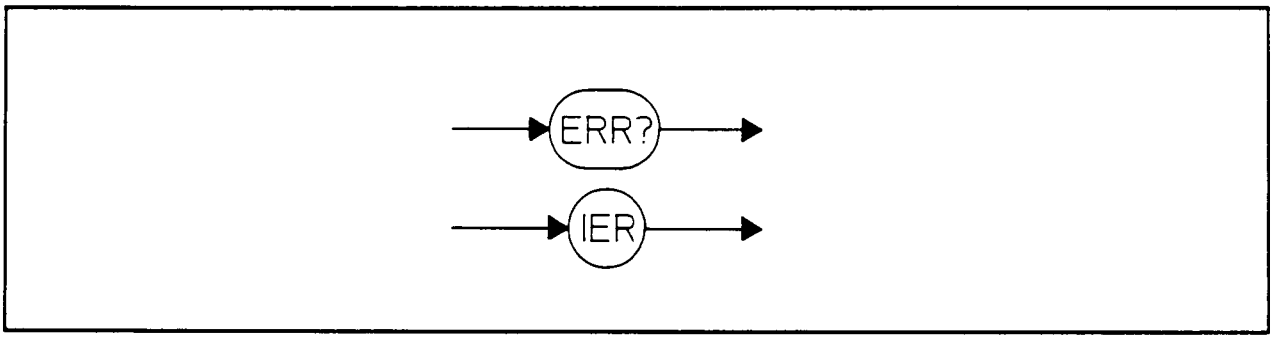


Figure 2-16. ERR Syntax Diagram

Table 2-13. ERR? and IER Response Formats

Command	HEAD-on response	HEAD-off response
ERR?	ERR###	###
IER	ER#	#

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ESTB; Service Request Enable Command

The ESTB command is used to set the status byte mask. Four lists in the status byte are capable of causing a service request (SRQ). When they are enabled (unmasked). They may be enabled or masked in any combination as defined in the table 2-34. The MS Command accomplishes the same thing using alpha characters instead of decimal characters.

In the syntax diagram of Figure 2-17, **value** is a decimal number whose binary (base 2) equivalent represents the bits of the Status Register. The range of **value** is 0 thru 15.

Instrument Power-on value: 0 (all masked)

Instrument Preset, HP-IB-clear value: not changed

Command Availability

	ESTB	ESTB?
HP 3325B	Yes	Yes
HP 3325A	No	No

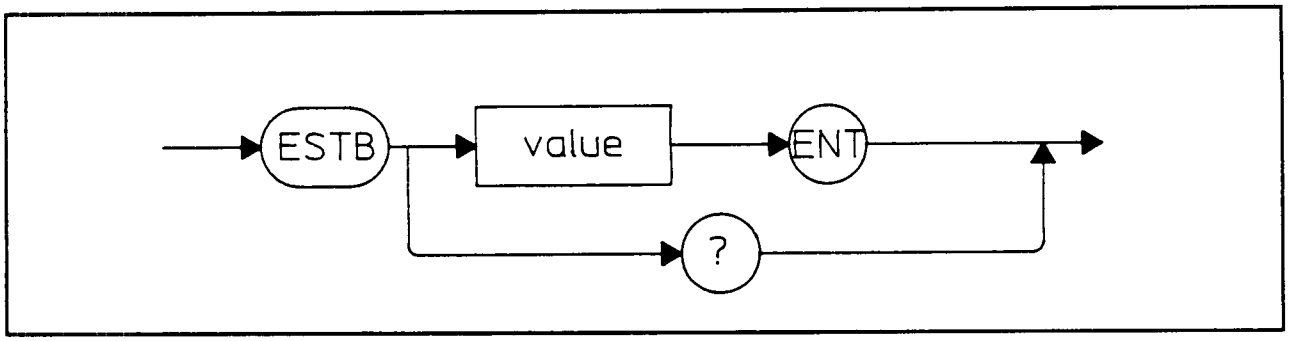


Figure 2-17. ESTB Syntax Diagram

Table 2-14. Status-Register Bits that can be enabled to cause SRQ

Bit	Value	Name	Description
0	1	ERR	Program or keyboard entry error.
1	2	STOP	Sweep stopped.
2	4	START	Sweep started.
3	8	FAIL	Hardware failure.

Table 2-15. ESTB? Response Format

HEAD-on response	HEAD-off response
ESTB###ENT	###

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EXTR?; External Reference Locked Query

The EXTR? query returns 1 if the reference oscillator is locked to an external input, 0 if not.

Command Availability

	EXTR
HP 3325B	Yes
HP 3325A	No

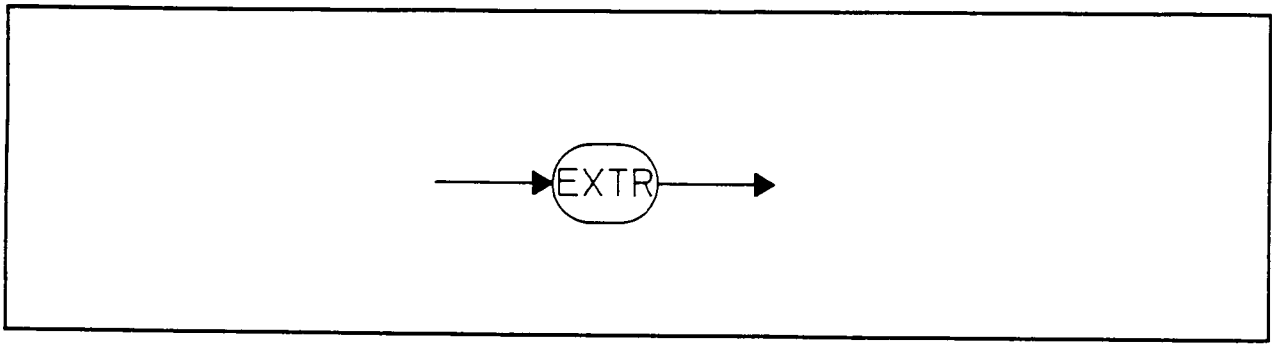


Figure 2-18. EXTR? Syntax Diagram

Table 2-16. EXTR? Response Format

HEAD-on response	HEAD-off response
EXTR#	#

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

FR; Frequency Command

The FR command sets the frequency. Sending FR with no value or units displays the current frequency. IFR and FR? cause the instrument to output its current frequency. See MOFR to set the frequency of the modulation source.

Instrument Preset value: 1000.0 Hz

Command Availability:

	FR	IFR	FR?
HP 3325B	Yes	Yes	Yes
HP 3325A	Yes	Yes	No

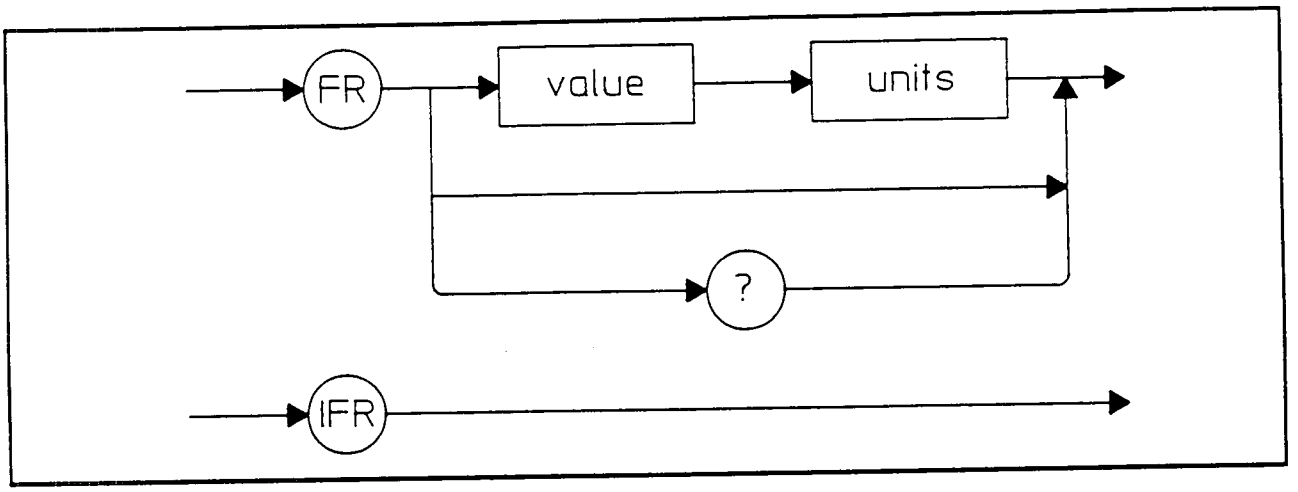


Figure 2-19. FR Syntax Diagram

Table 2-17. FR "value" Restrictions Given "units"

Units	Description	Range Restrictions for "value" (sine)
HZ	Hertz	0.0 → 60999999.999
KH	kHz	0.0 → 60999.999999
MH	MHz	0.0 → 60.999999

Table 2-18. FR? and IFR Response Format

μHz programmed	HEAD-on response	HEAD-off response
No	FR########.###HZ	########.###
Yes	FR#####.######HZ	#####.######

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

FU; Waveform Function Command

The FU command selects the waveform function for the main signal output.

Instrument Preset value: 1

Command Availability

	FU	IFU	FU?
HP 3325B	Yes	Yes	Yes
HP 3325A	Yes	Yes	No

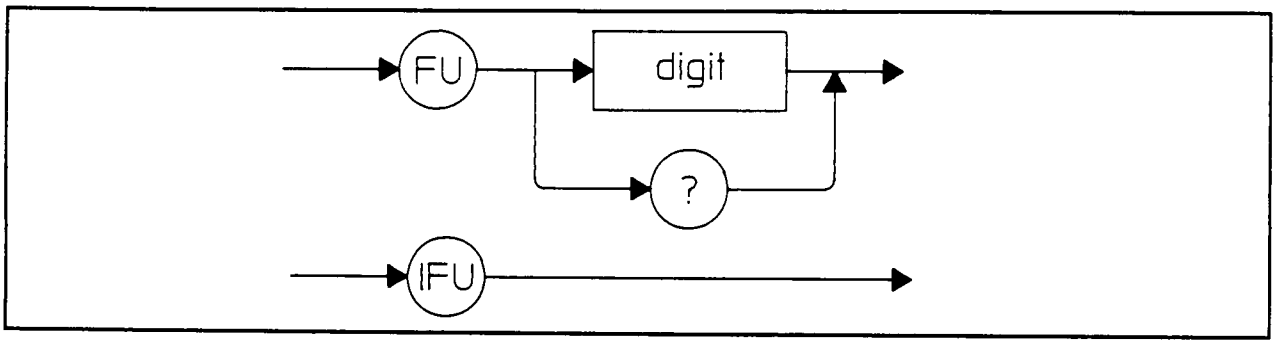


Figure 2-20. FU Syntax Diagram

Table 2-19. Waveform Selections for "digit"

digit	Waveform
0	Selects DC only.
1	Selects Sine wave
2	Selects Square wave.
3	Selects Triangle wave.
4	Selects Positive ramp.
5	Selects Negative ramp.

Table 2-20. FU? and IFU Response Format

HEAD-on response	HEAD-off response
FU#	#

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HEAD; Response Header Control Command

The HEAD command enables or disables the alpha header (and units suffix) for query responses. With HEAD on, the response can be used to re-program the item. With HEAD off, only the numerics are sent which can make it easier to read into a numeric variable in a program.

Instrument Power-on value: 1.

Instrument Preset, HP-IB clear value: not changed.

Command Availability:

	HEAD
HP 3325B	Yes
HP 3325A	No

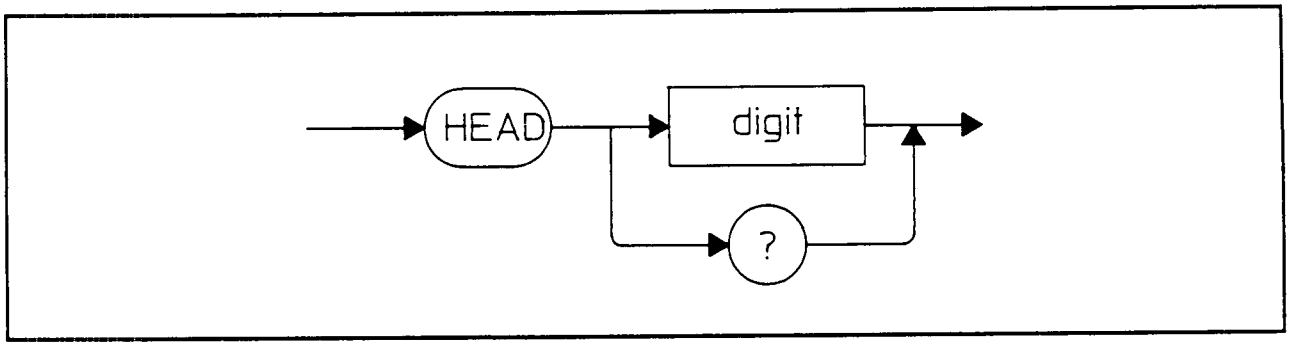


Figure 2-21. HEAD Syntax Diagram

"Digit"	Mode
0	Selects header OFF mode.
1	Selects header ON mode.

Table 2-21. HEAD? Response Format

HEAD-on response	HEAD-off response
HEAD#	#

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HV; High Voltage Output Command

The HV command controls the High Voltage amplifier option for the main signal output.

Instrument Preset value: 1.

Command Availability

	HV	IHV	HV?
HP 3325B	Yes	Yes	Yes
HP 3325A	Yes	Yes	No

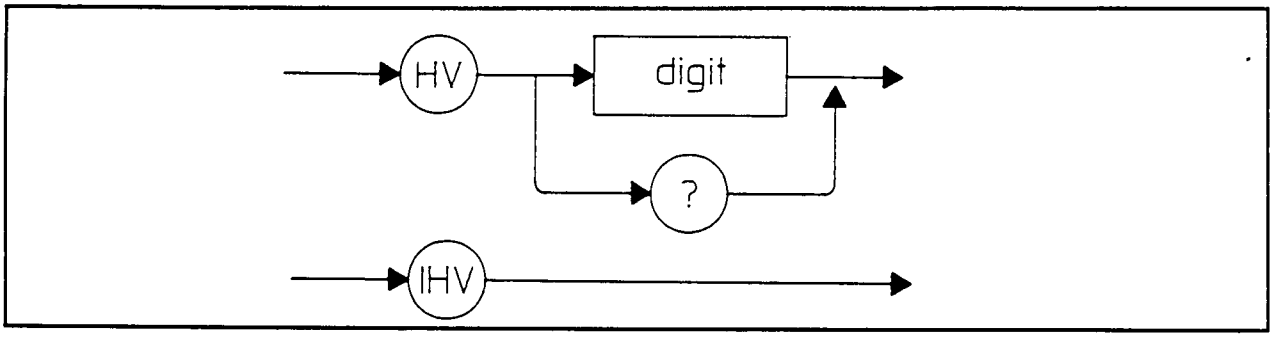


Figure 2-22. HV Syntax Diagram

digit	Meaning
0	Disable the high voltage amplifier.
1	Enable the high voltage amplifier.

Table 2-22. HV? and IHV Response Format

Option Installed	HEAD-on response	HEAD-off response
Yes	HV#	#
No	RF#	#

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ID?, *IDN?; Identification Query

This query returns the instrument manufacturer, model number, serial number, and firmware revision code.

Note In data transfer mode 2, an asterisk terminates a command string. Therefore use IDN?, without an asterisk, in data transfer mode 2.

Command Availability

	*IDN?	ID?
HP 3325B	Yes	Yes
HP 3325A	No	No

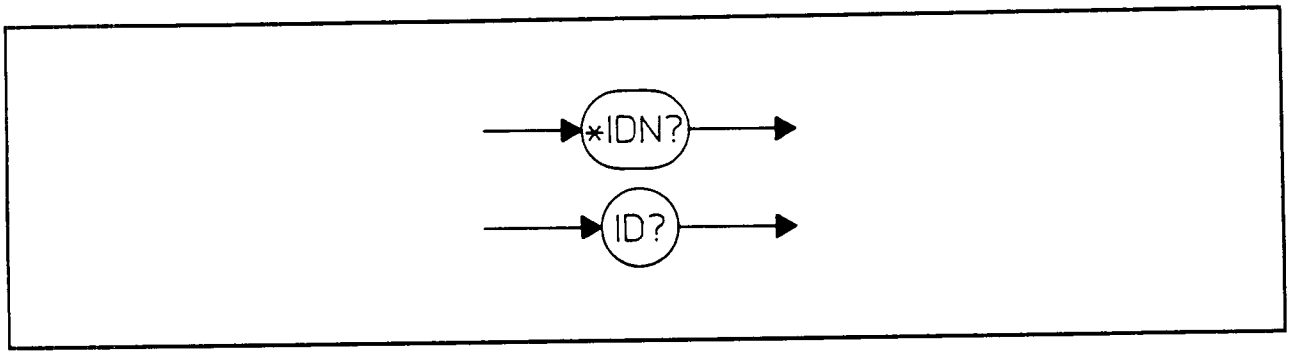


Figure 2-23. ID? and *IDN? Syntax Diagrams

Table 2-23. ID? and *IDN? Response Format

ID? response	*IDN? response
HP3325B	HEWLETT-PACKARD,3325B,2800A00000,2800

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LCL; Local Command

The LCL command places the instrument in *local mode* and clears any local lockout. This command has the same effect as the HP-IB *local* bus command but can be issued when using the RS-232 interface.

Command Availability

	LCL
HP 3325B	Yes
HP 3325A	No

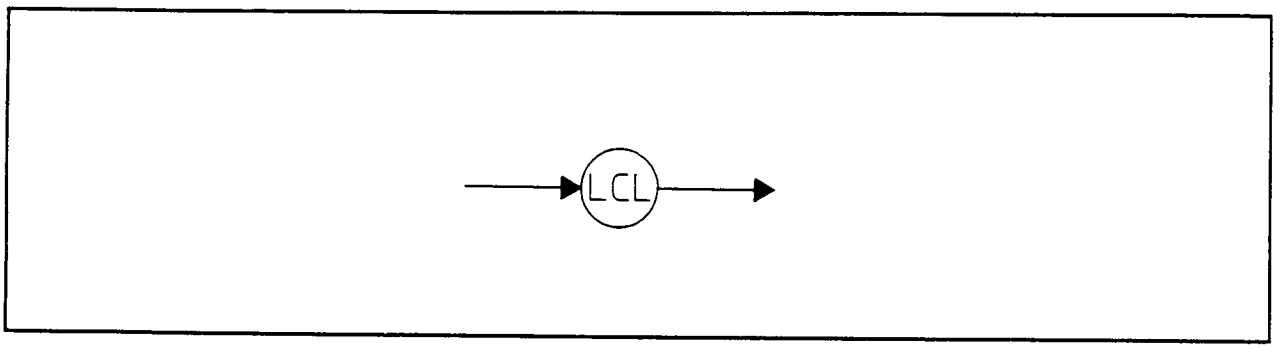


Figure 2-24. LCL Syntax Diagram

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

MA; Amplitude Modulation Command

The MA command enables and disables amplitude modulation of the main signal output. Amplitude modulation is only valid for sine waves.

Note If MA is enabled and no signal is applied to the AMPTD MOD input, the main signal amplitude is one half of its programmed value since 0 Volts corresponds to 50% modulation.

Instrument Preset value: 0.

Command Availability

	MA	IMA	MA?
HP 3325B	Yes	Yes	Yes
HP 3325A	Yes	Yes	No

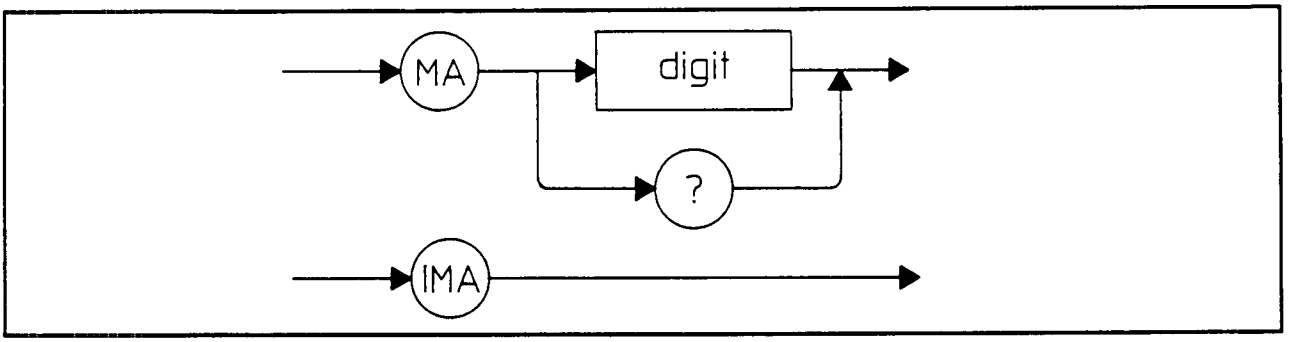


Figure 2-25. MA Syntax Diagram

"Digit	Meaning
0	Disable amplitude modulation.
1	Enable amplitude modulation.

Table 2-24. MA? and IMA Response Format

HEAD-on response	HEAD-off response
MA#	#

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

MD; Data Transfer Mode Command

The MD command selects the HP-IB data transfer mode. (This command has no effect when the RS-232 interface is used.) In mode 1, each device-dependent character is processed when received. No other communications are permitted on the bus until the entire HP 3325B program string has been accepted and all but the last character processed. In mode 2, device-dependent characters are accepted and stored in an internal buffer; they are not processed until the End-Of-Command-String (EOCS) character is received or the buffer is filled (48 bytes). Valid EOCS characters are the ‹line feed› character (ASCII decimal 10) or the asterisk (*) character (ASCII decimal 42).

Instrument Power-on, HP-IB Clear value: 1.

Instrument Preset value: not changed.

Command Availability

	MD	MD?
HP 3325B	Yes	Yes
HP 3325A	Yes	No

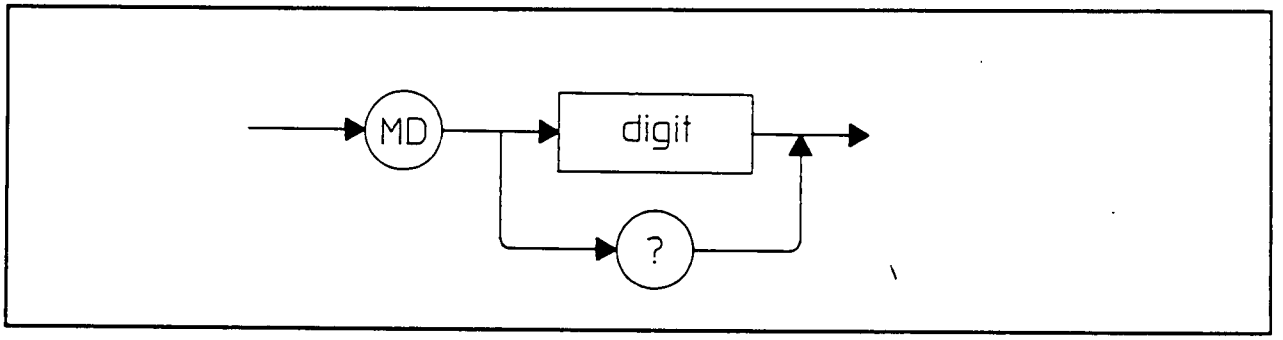


Figure 2-26. MD Syntax Diagram

Digit"	Meaning
1	Each character processed when received.
2	Characters buffered, EOCS starts processing.

Table 2-25. MD? and IMD Response Format

HEAD-on response	HEAD-off response
MD#	#

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

MF; Marker Frequency Command

The MF command sets the marker frequency. Sending MF with no value or units displays the current frequency. IMF and MF? cause the instrument to output its current frequency.

Instrument Preset value: 5.0 MHz

Command Availability

	MF	IMF	MF?
HP 3325B	Yes	Yes	Yes
HP 3325A	Yes	Yes	No

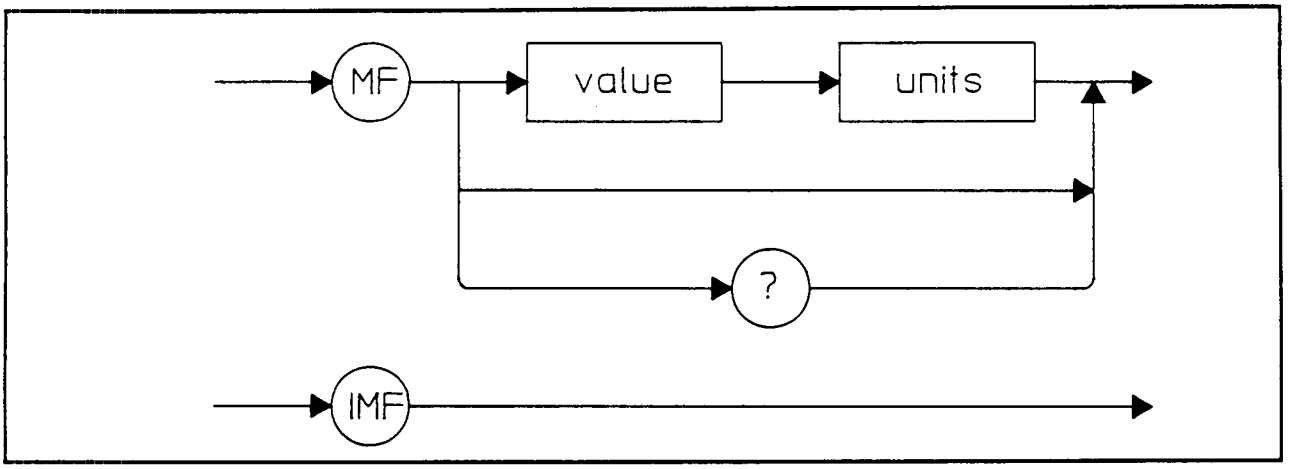


Figure 2-27. MF Syntax Diagram

Table 2-26. MF "value" Restrictions Given "units"

"Units"	Description	Range Restrictions for "value"
HZ	Hertz	0.0 → 20999999.999
KH	kilo-Hz	0.0 → 20999.999999
MH	mega-Hz	0.0 → 20.999999999

Table 2-27. MF? and IMF Response Format

μ Hz programmed	HEAD-on response	HEAD-off response
No	MF########.###HZ	########.###
Yes	MF#####.######HZ	#####.######

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

MOAM; Modulation Source Amplitude Command

The MOAM command sets the amplitude of the modulation signal. Sending MOAM with no value or units displays the current amplitude. Sending MOAM and units without any value displays the current amplitude in the new units. MOAM? causes the instrument to output the current amplitude.

Instrument Preset value: 0.1 Vpp

Command Availability

	MOAM	MOAM?
HP 3325B	Yes	Yes
HP 3325A	No	No

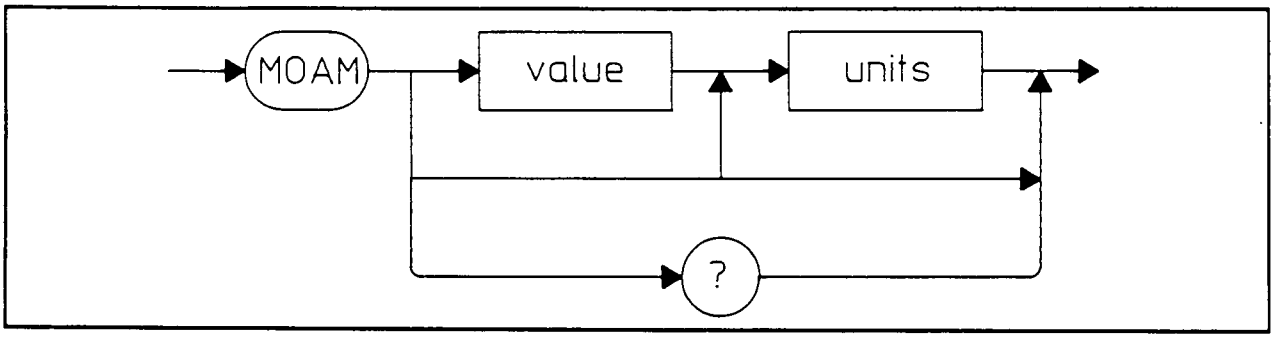


Figure 2-28. MOAM Syntax Diagram

Table 2-28. MOAM "value" Restrictions Given "units"

value range	units	Description
VO	V_{pp}	0.0 → 12.0
MV	mV_{pp}	0.0 → 12000.0
VR	V_{rms}	0.0 → 4.2
MR	mV_{rms}	0.0 → 4200.0

Table 2-29. MOAM? Response Format

Current Units	HEAD-on response	HEAD-off response
VO or MV	MOAM#####.######VO	#####.######
VR or MR	MOAM#####.######VR	#####.######

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

MOAR; Write Modulation Source Arbitrary Waveform Data

The MOAR command defines an arbitrary waveform for the modulation source. From 1 to 4096 waveform sample points can be programmed. A value of 0 corresponds to 0.0 volts, and +1.0 corresponds to full scale which is half the MOAM voltage (since MOAM is in peak-to-peak). Issuing this command turns the modulation source off, so it should be followed with a MOFU3 command.

When using arbitrary waveforms, the MOFR command sets the frequency at which the entire waveform block is repeated. Only certain discrete frequencies are available and these depend on the number of entries in the waveform. The HP 3325B selects a frequency as near as possible to the value entered with the MOFR command.

Command Availability

	MOAR
HP 3325B	Yes
HP 3325A	No


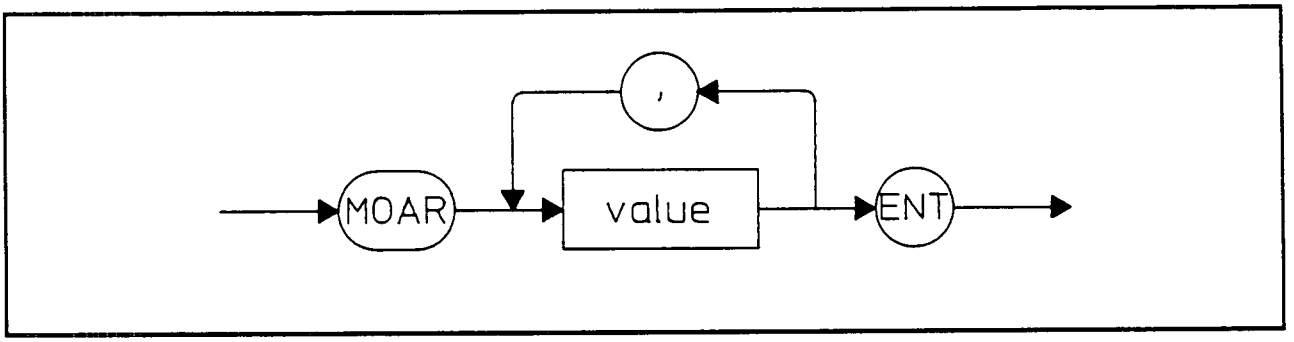


Figure 2-29. MOAR Syntax Diagram

Where *value* is a waveform sample whose value ranges from −1.0 to +1.0.

Example:

MOAR 1,0,- 0.4,0 ENT results in the following waveform:

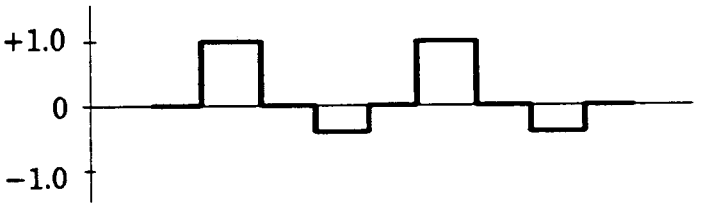

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

MOFR; Modulation Source Frequency Command

The MOFR command sets the modulation source frequency. Sending MOFR with no value or units displays the current frequency. Issuing MOFR? causes the instrument to output its current frequency.

Notes

Only two digits of frequency resolution are available.

The timebase is not locked to the main signal or an external reference input.

Programming the frequency causes the signal to turn off momentarily.

Instrument Preset value: 1000.0 Hz

Command Availability

	MOFR	MOFR?
HP 3325B	Yes	Yes
HP 3325A	No	No

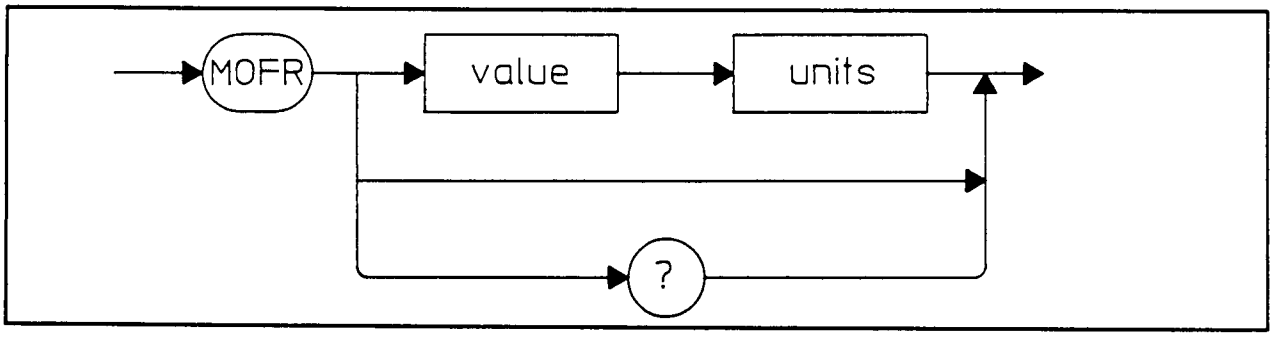


Figure 2-30. MOFR Syntax Diagram

Table 2-30. MOFR "value" Restrictions Given "units"

Value Range	Units	Description
0.0 → 10000.0	HZ	Hertz
0.0 → 10.0	KH	kilo-Hz
0.0 → 0.01	MH	mega-Hz

Table 2-31. MOFR? Response Format

HEAD-on response	HEAD-off response
MOFR########.###HZ	########.###

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

MOFU; Modulation Source Waveform Function Command

The MOFU command selects the waveform function for the modulation source output.

Instrument Preset value: 0.

Command Availability

	MOFR	MOFR?
HP 3325B	Yes	Yes
HP 3325A	No	No

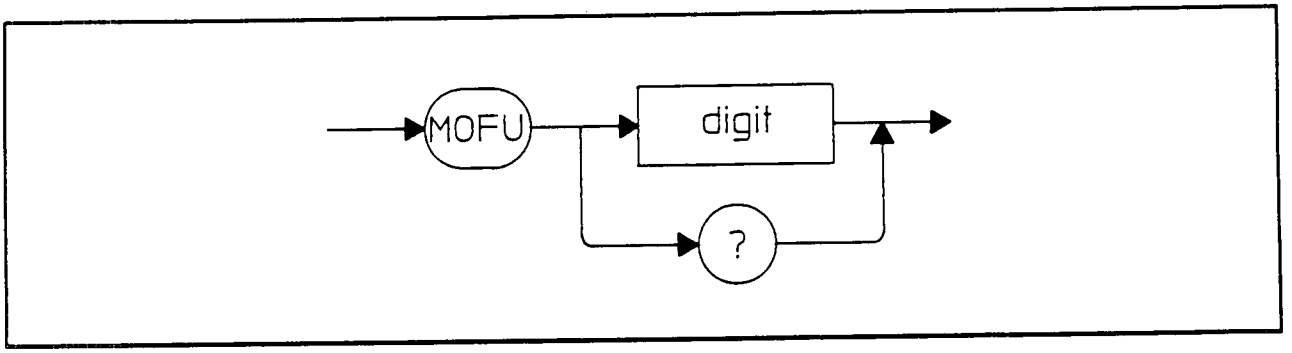


Figure 2-31. MOFU Syntax Diagram

"Digit"	Waveform
0	All functions off.
1	Selects Sine wave.
2	Selects Square wave.
3	Selects Arbitrary wave.

Table 2-32. MOFU? Response Format

HEAD-on response	HEAD-off response
MOFU#	#

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

MP; Phase Modulation Command

The MP command enables and disables phase modulation of the main signal output.

Instrument Preset value: 0.

Command Availability

	MP	IMP	MP?
HP 3325B	Yes	Yes	Yes
HP 3325A	Yes	Yes	No

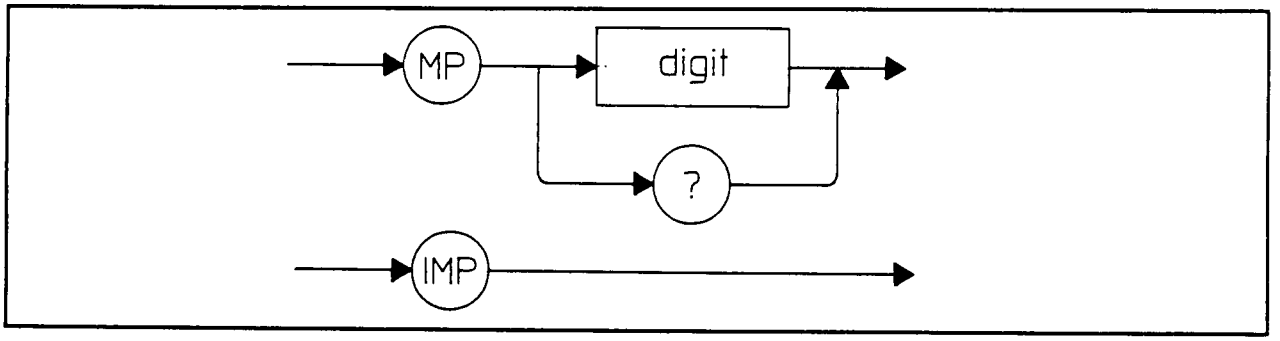


Figure 2-32. MP Syntax Diagram

"Digit"	Meaning
0	Disable phase modulation.
1	Enable phase modulation.

Table 2-33. MP? and IMP Response Format

HEAD-on response	HEAD-off response
MP#	#

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

MS; Status Byte Mask Command

The MS command is used to set the status byte mask. Four lists in the status byte are capable of causing a service request (SRQ) when they are enabled (unmasked). They may be enabled or masked in any combination as defined in table 2-34. The ESTB command accomplishes the same thing using decimal numbers instead of alphabetic characters.

Instrument Power-on value: @ (no bits enabled).

Instrument Preset, HP-IB Clear value: not changed.

Command Availability

	MS
HP 3325B	Yes
HP 3325A	Yes

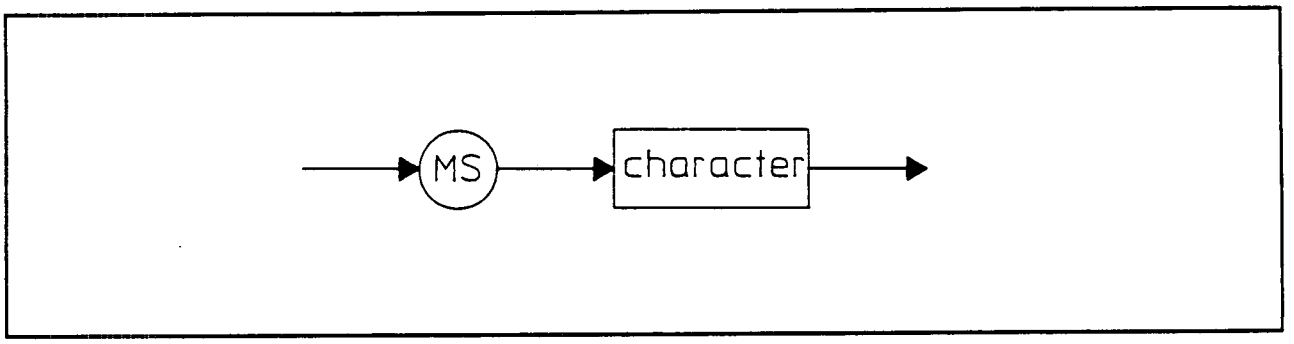


Figure 2-33. MS Syntax Diagram

Table 2-34. Status Byte Mask Characters

"character"	Status Bits FAIL	START	STOP	ERR
@	Mask	Mask	Mask	Mask
A	Mask	Mask	Mask	ENABLE
B	Mask	Mask	ENABLE	Mask
C	Mask	Mask	ENABLE	ENABLE
D	Mask	ENABLE	Mask	Mask
E	Mask	ENABLE	Mask	ENABLE
F	Mask	ENABLE	ENABLE	Mask
G	Mask	ENABLE	ENABLE	ENABLE
H	ENABLE	Mask	Mask	Mask
I	ENABLE	Mask	Mask	ENABLE
J	ENABLE	Mask	ENABLE	Mask
K	ENABLE	Mask	ENABLE	ENABLE
L	ENABLE	ENABLE	Mask	Mask
M	ENABLE	ENABLE	Mask	ENABLE
N	ENABLE	ENABLE	ENABLE	Mask
O	ENABLE	ENABLE	ENABLE	ENABLE

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

OF; DC Offset Command

The OF command sets the DC offset of the main signal. Sending OF with no value or units displays the current offset. When programming DC offset with an AC function, the DC offset range is further restricted by the AM setting and the resulting attenuator range. See the discussion in Chapter 1 under the heading "AC with DC Offset."

Instrument Preset value: 0.0 V_{pp}

Command Availability

	OF	IOF	OF?
HP 3325B	Yes	Yes	Yes
HP 3325A	Yes	Yes	No

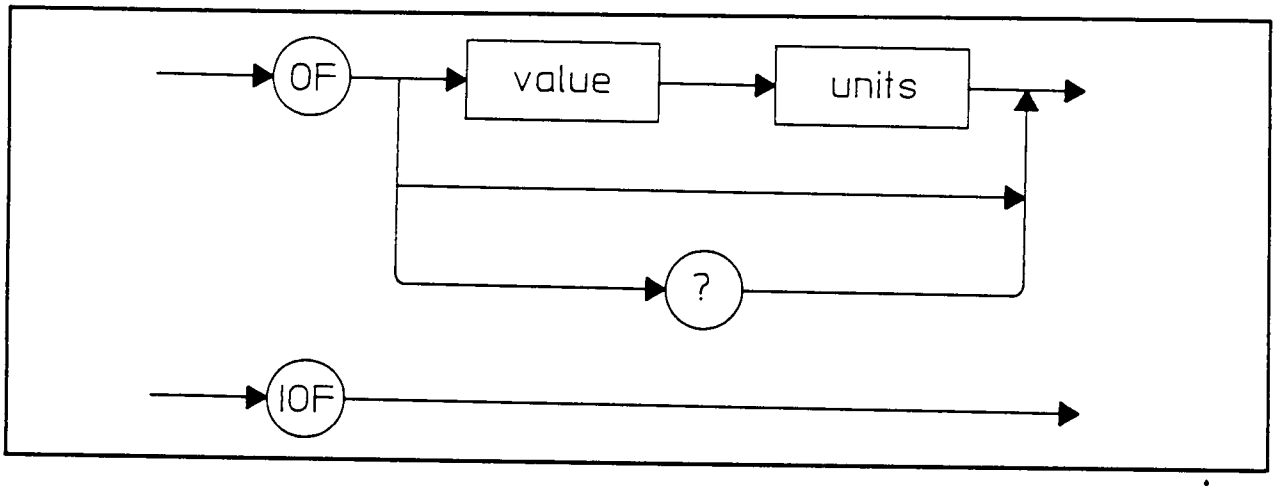


Figure 2-34. OF Syntax Diagram

Table 2-35. OF "value" Restrictions Given "units"

Units	Description	High Voltage	Value Range(DC only)
VO	Volts	Off	−5.0 → 5.0
		On	−20.0 → 20.0
MV	mVolts	Off	−5000.0 → 5000.0
		On	−20000.0 → 20000.0

Table 2-36. OF? and IOF Response Format

Current Units	HEAD-on response	HEAD-off response
VO or MV	OF#####.######VO	#####.######

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

OPT?; Option Query Command

The OPT? query returns a list of the options installed in the instrument.

Command Availability

	OPT?
HP 3325B	Yes
HP 3325A	No

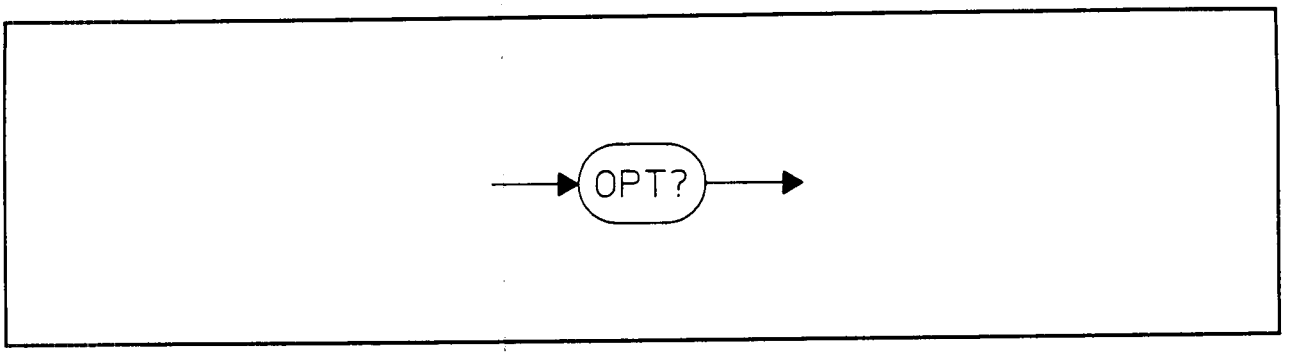


Figure 2-35. OPT? Syntax Diagram

Table 2-37. OPT? Response Format

Options Installed	HEAD-on response	HEAD-off response
none	OPT0,0	0,0
Oven	OPT1,0	1,0
High Voltage	OPT0,2	0,2
Oven and High V.	OPT1,2	1,2

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PH; Phase Command

The PH command sets the phase of the main signal. Sending PH with no value or units displays the current phase. Values outside the −720 to +720 range are treated as (value modulus 720).

Instrument Preset value: 0.0 Degrees

Command Availability

	PH	IPH	PH?
HP 3325B	Yes	Yes	Yes
HP 3325A	Yes	Yes	No

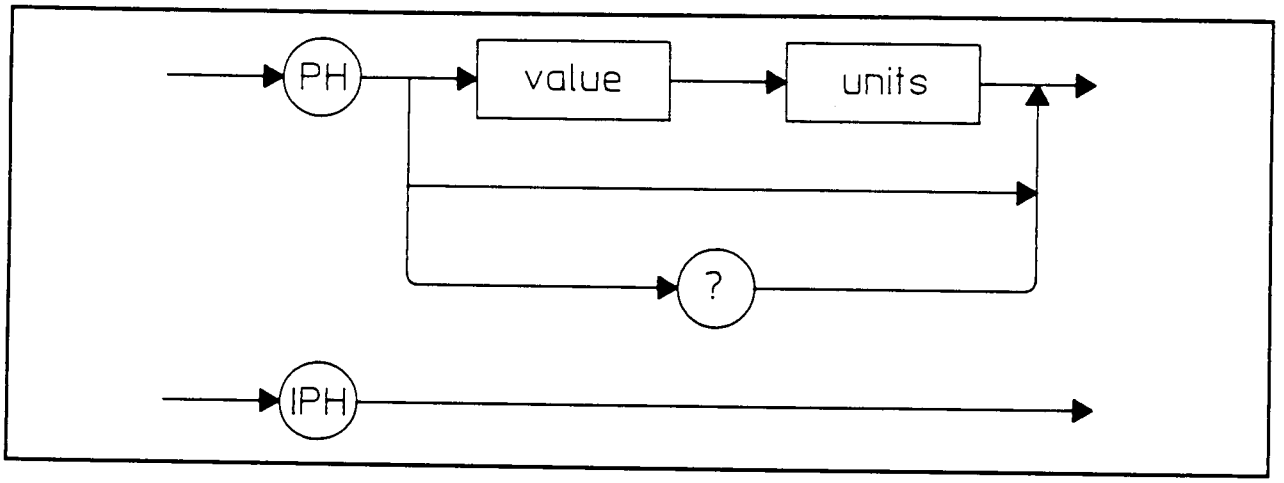


Figure 2-36. PH Syntax Diagram

Table 2-38. PH "value" Restrictions Given "units"

"Units"	Description	Range Restrictions for "value"
DE	Degrees	−720.0 → 720.0

Table 2-39. IPH and PH? Response Format

HEAD-on response	HEAD-off response
PH########.###DE	########.###

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

QSTB; Query Status Byte (RS-232)

The QSTB? query command is used to upload the *status byte* over the RS-232 interface. The HP 3325B responds to this command by returning the contents of the status register in the form of an integer value ranging from 0 to 255. This integer, when converted to binary (base 2), represents the bits of the Status Register. This command reads the same register as the HP-IB *serial poll* and clears the ERR, STOP, START, FAIL and RQS bits of the status byte.

Command Availability

	QSTB?
HP 3325B	Yes
HP 3325A	No

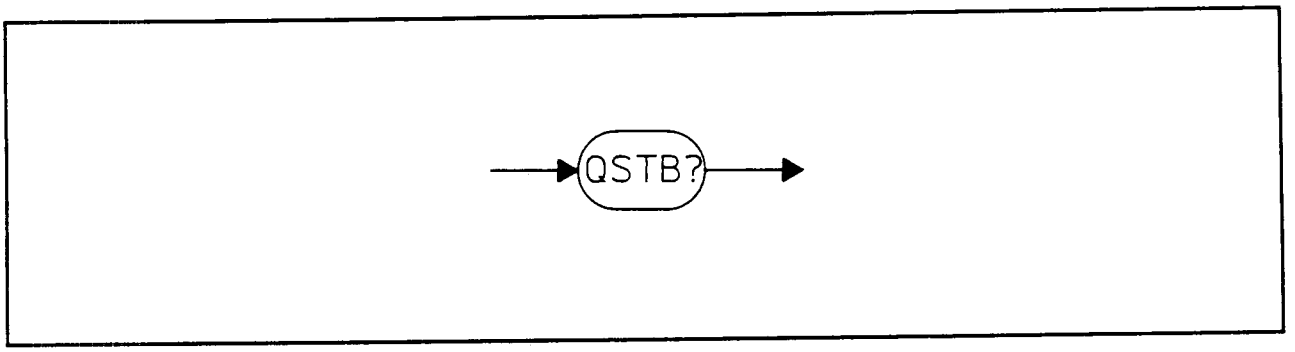


Figure 2-37. QSTB? Syntax Diagram

Table 2-40. Status Register Bit Coding

Bit	Value	Name	Description
0	1	ERR	Program or keyboard entry error.
1	2	STOP	Sweep stopped.
2	4	START	Sweep started.
3	8	FAIL	Hardware failure.
4	16	BIT4	Always zero.
5	32	SWEEP	Sweep in progress.
6	64	RQS	This corresponds to the HP-IB SRQ signal.
7	128	BUSY	Set while a command is being executed.

Table 2-41. QSTB? Response Format

HEAD-on response	HEAD-off response
QSTB###	###

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RE; Recall State Command

The RE command recalls an instrument setup state from 1 of 11 memory locations. Locations 0 through 9 are programmed with the SR command. Memory location "–" is always the state when power is turned off.

Command Availability

	RE0 thru RE9	RE–
HP 3325B	Yes	Yes
HP 3325A	Yes	No

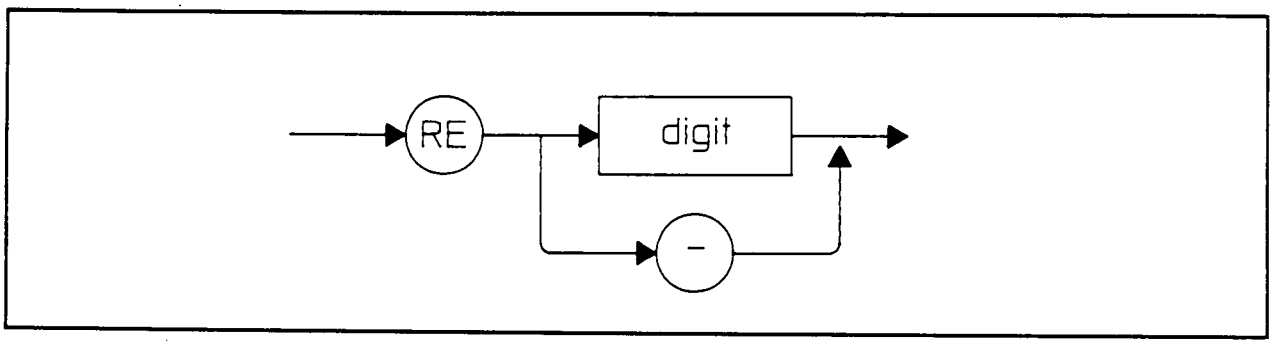


Figure 2-38. RE Syntax Diagram

"Digit"	Meaning
0 → 9	Recalls state stored in register 0 thru 9.
– (minus sign)	Recalls state at power-down.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RF; Rear or Front Signal Output Command

The RF command determines whether the main signal is present at the rear or front BNC connector.

Instrument Preset value: 1 (front).

Command Availability

	RF	IRF	RF?
HP 3325B	Yes	Yes	Yes
HP 3325A	Yes	Yes	No

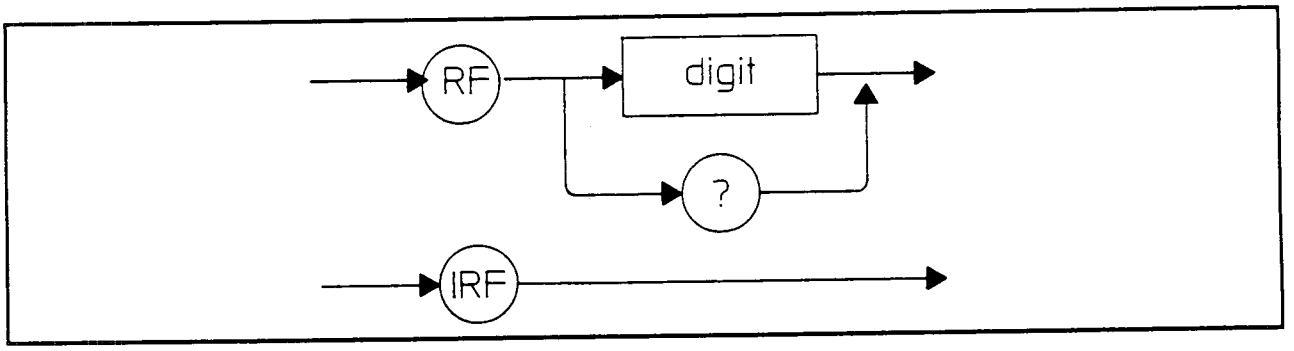


Figure 2-39. RF Syntax Diagram

"Digit"	Meaning
1	Front panel output.
2	Rear panel output.

Table 2-42. RF? and IRF Response Format

HV option	HEAD-on response	HEAD-off response
no	RF#	#
yes	HV#	#

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RMT; Remote (with Local-Lockout) Command

The RMT command places the instrument in *remote* with *local lockout* mode. This command has the same effect as the HP-IB Local Lockout bus command but can be programmed using the RS-232 interface.

Command Availability

	RMT
HP 3325B	Yes
HP 3325A	No

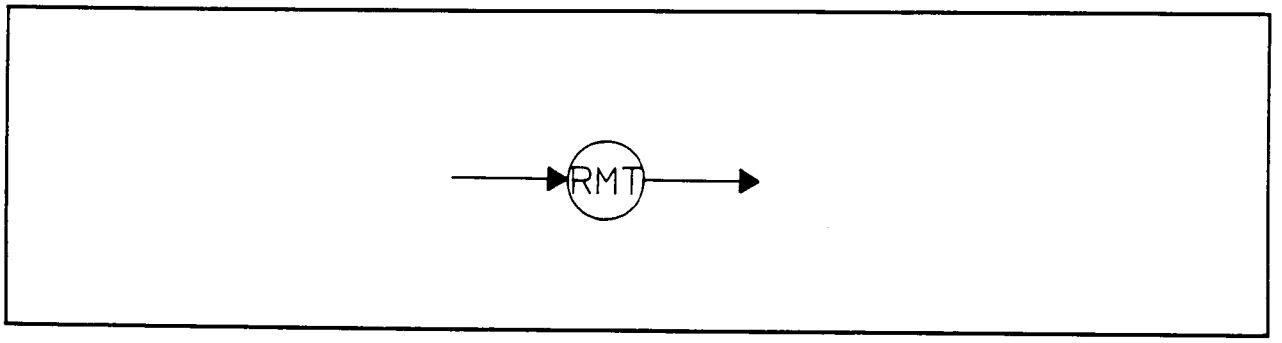


Figure 2-40. RMT Syntax Diagram

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

*RST; Reset Command

The *RST command resets the HP 3325B to the state in table 2-43. This command has the same effect as pressing the Instrument Preset key on the front panel and is similar to the HP-IB Device Clear command. *RST does not change the data transfer mode as does the Device Clear command.

Note In data transfer mode 2, an asterisk terminates a command string. Therefore, use RST without an asterisk, in data transfer mode 2.

Command Availability

	*RST
HP 3325B	Yes
HP 3325A	No

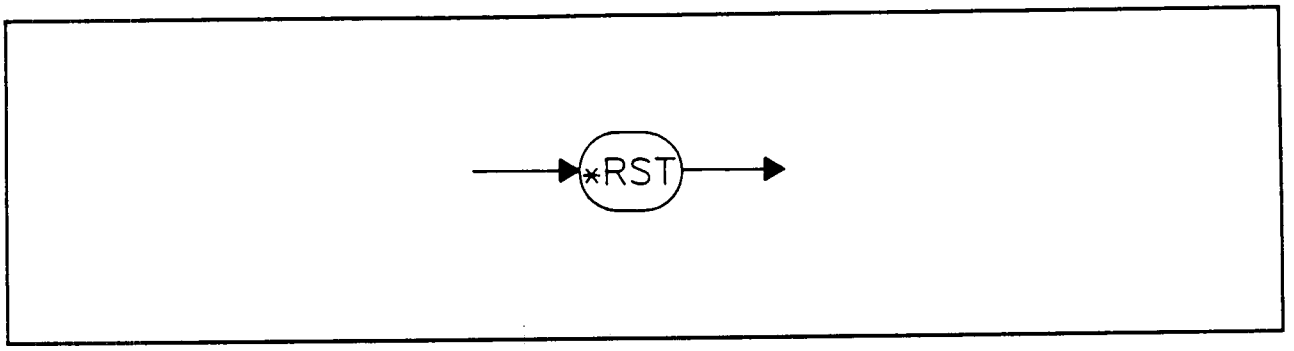


Figure 2-41. *RST Syntax Diagram

Table 2-43. Reset State

Item	Reset Value
Function	Sine
Frequency	1000.0 Hz
Amplitude	1.0 mV_{pp}
Offset	0.0 V
Phase	0.0°
Mod Source Function	Off
Mod Source Frequency	1000.0 Hz
Mod Source Amplitude	0.1 V_{pp}
Start Frequency	1.0 MHz
Stop Frequency	10.0 MHz
Marker Frequency	5 MHz
Sweep Time	1.0 Sec
High voltage	Off
Front/Rear output	Front
Amplitude Modulation	Off
Phase Modulation	Off
Sweep Mode	Linear
Status Byte (bits cleared)	0, 1, 2, 3, & 6

The *RST command does not alter:

- The 10 state storage registers
- HP-IB address
- HP-IB data transfer mode
- Status byte mask
- Enhancement/compatibility mode
- Calibration mode
- Head on/off
- Display on/off
- Echo on/off
- Discrete sweep table
- Modulation source arbitrary waveform data
- Serial number and elapsed time clock

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RSW; Reset Single Sweep Command

The RSW command places the instrument in the sweep reset state. The output frequency returns to the Start Frequency and the next SS command starts a single sweep.

Command Availability

	RSW
HP 3325B	Yes
HP 3325A	No

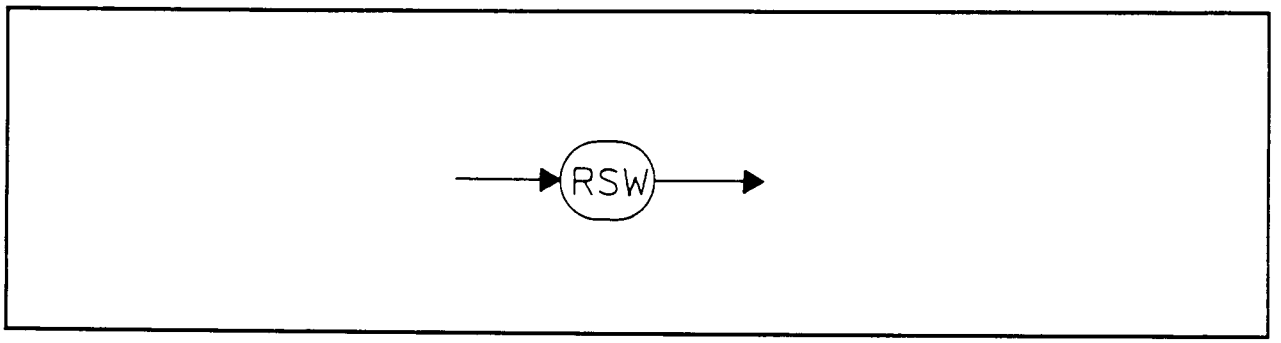


Figure 2-42. RSW Syntax Diagram

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SC; Start Continuous Sweep Command

The SC command starts a continuous sweep. If the instrument is already sweeping, this command stops the sweep and does not restart it. FR can be used to stop a sweep.

Command Availability

	SC
HP 3325B	Yes
HP 3325A	Yes

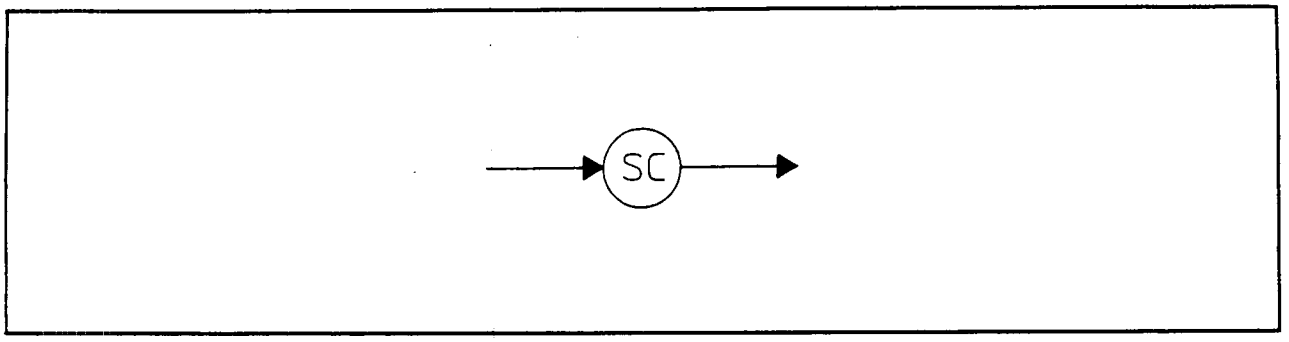


Figure 2-43. SC Syntax Diagram

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SM; Sweep Mode Command

The SM command selects the sweep mode.

Instrument Preset value: 1.

Command Availability

	SM	ISM	SM?	SM3
HP 3325B	Yes	Yes	Yes	Yes
HP 3325A	Yes	Yes	No	No

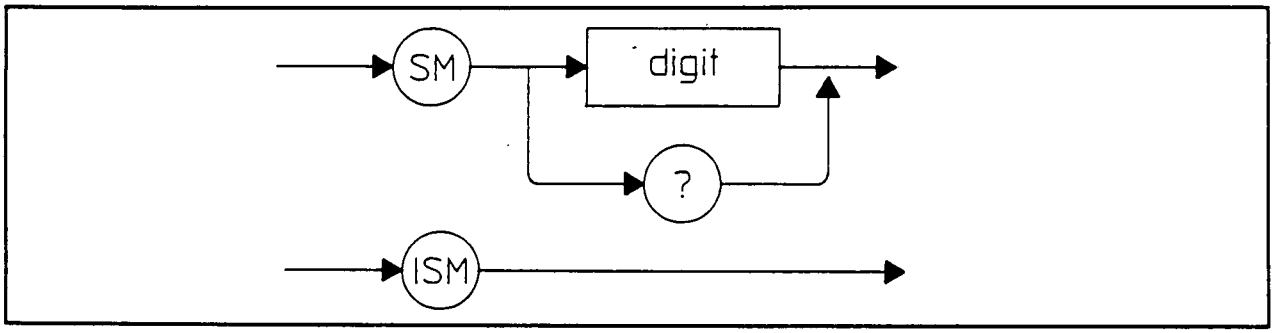


Figure 2-44. SM Syntax Diagram

"Digit"	Waveform
1	Selects Linear sweep mode.
2	Selects Logarithmic sweep mode.
3	Selects Discrete sweep mode.

Table 2-44. SM? and ISM Response Format

HEAD-on response	HEAD-off response
SM#	#

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SP; Sweep Stop Frequency Command

The SP command sets the sweep stop frequency.

Instrument Preset value: 10.0 MHz

Command Availability

	SP	ISP	SP?
HP 3325B	Yes	Yes	Yes
HP 3325A	Yes	Yes	No

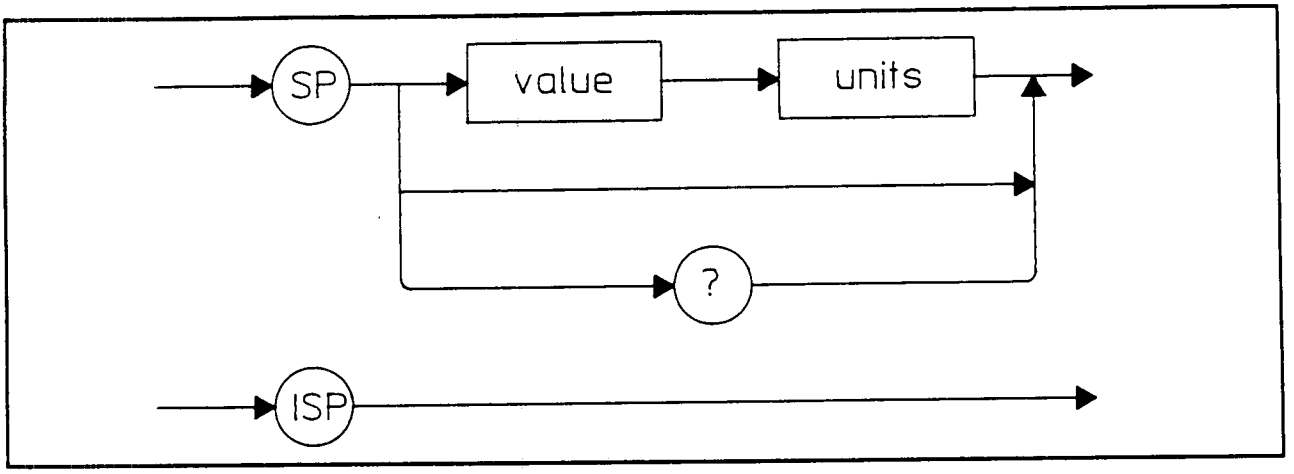


Figure 2-45. SP Syntax Diagram

Table 2-45. SP "value" Restrictions Given "units"

value range	units	Description
0.0 → 20999999.999	HZ	Hertz
0.0 → 20999.9999990	KH	kilo-Hz
0.0 → 20.999999999	MH	mega-Hz

Table 2-46. SP? and ISP Response Format

μHz programmed	HEAD-on response	HEAD-off response
no	SP########.###HZ	########.###
yes	SP#####.######HZ	#####.######

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SR; Store State Command

The SR command stores the current instrument setup state in one of 10 memory locations.

Command Availability

	SR
HP 3325B	Yes
HP 3325A	Yes

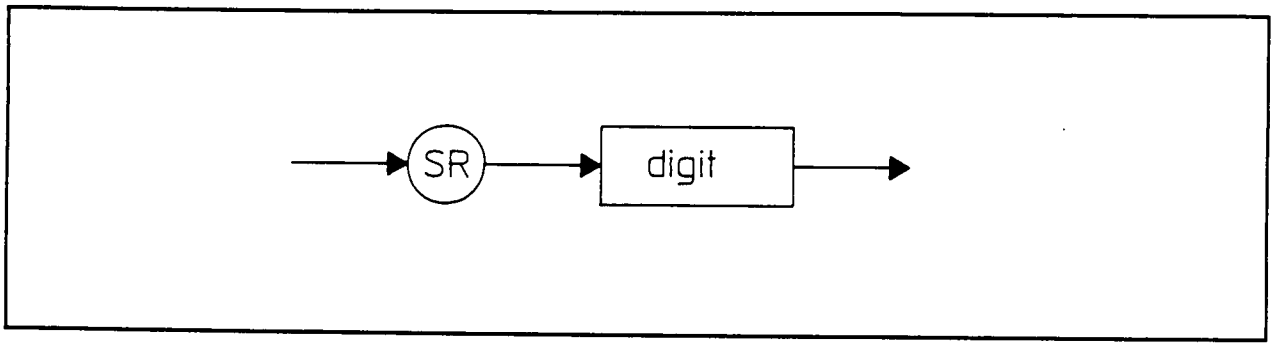


Figure 2-46. SR Syntax Diagram

"Digit"	Meaning
0 → 9	Stores state in location 0 thru 9.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SS; Start Single Sweep Command

The effect of the SS command depends on the state of the instrument. If the instrument is not sweeping and not in the sweep-reset state, then the SS command puts the instrument in the sweep-reset state at the sweep Start Frequency. If the instrument is already in the sweep-reset state, this command starts a single sweep. If the instrument is sweeping, this command stops the sweep and does not restart it.

Single sweeps can be started using the HP-IB Group Execute Trigger command. Before using the GET command, the HP 3325B must be in the enhancements mode and the sweep must be reset using the RSW command.

Command Availability

	SS
HP 3325B	Yes
HP 3325A	Yes

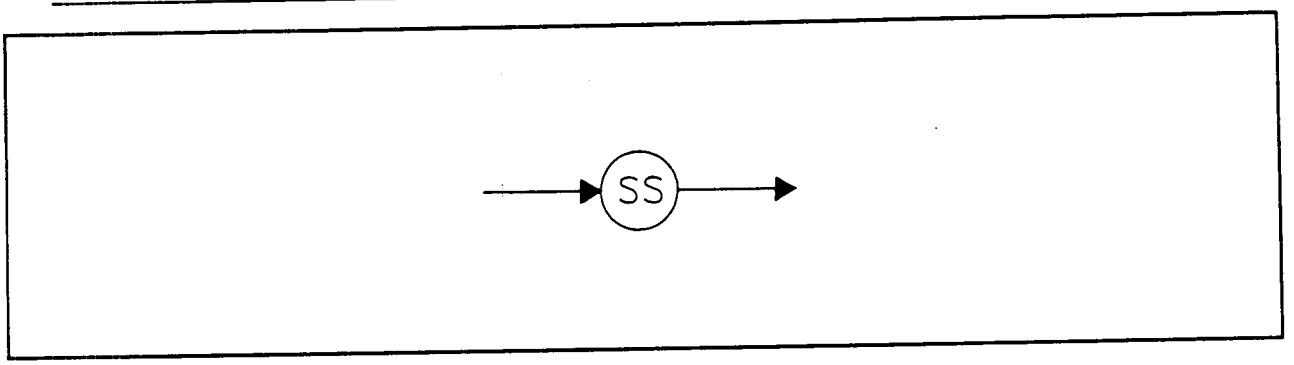


Figure 2-47. SS Syntax Diagram

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ST; Sweep Start Frequency Command

The ST command sets the sweep start frequency.

Start Frequency Preset value: 1.0 MHz

Command Availability

	ST	IST	ST?
HP 3325B	Yes	Yes	Yes
HP 3325A	Yes	Yes	No

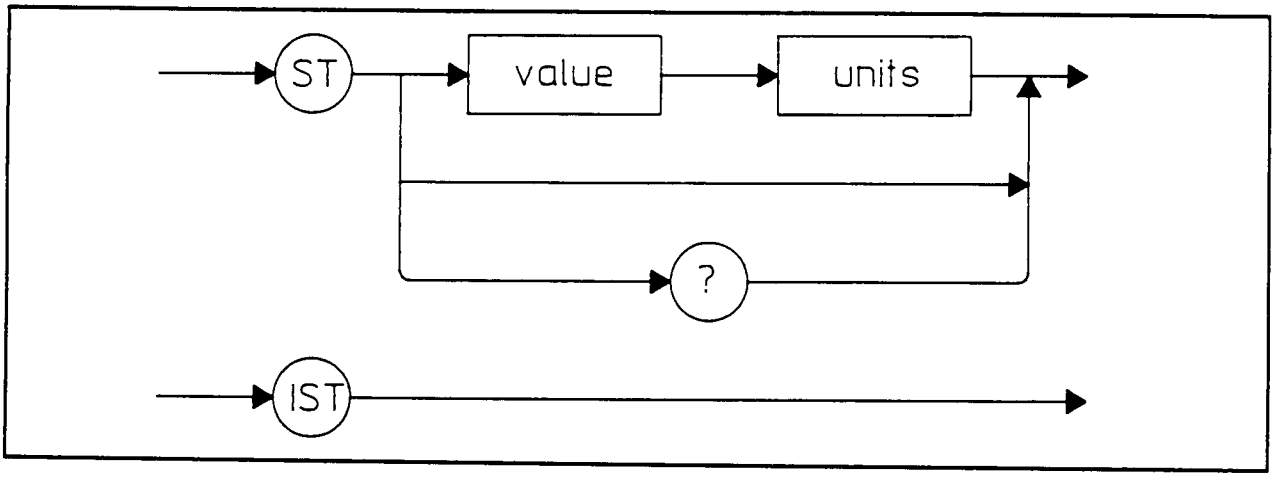


Figure 2-48. ST Syntax Diagram

Table 2-47. ST "value" Restrictions Given "units"

value range	units	Description
0.0 → 20999999.999	HZ	Hertz
0.0 → 20999.999999	KH	kilo-Hz
0.0 → 20.999999999	MH	mega-Hz

Table 2-48. ST? and IST Response Format

μHz programmed	HEAD-on response	HEAD-off response
no	ST########.###HZ	########.###
yes	ST#####.######HZ	#####.######

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TI; Sweep Time Command

The TI command sets the sweep time. Sending TI with no value or units displays the current sweep time. ITI and TI? cause the instrument to output its current sweep time.

Instrument Preset value: 1.0 Sec

Command Availability

	TI	ITI	TI?
HP 3325B	Yes	Yes	Yes
HP 3325A	Yes	Yes	No

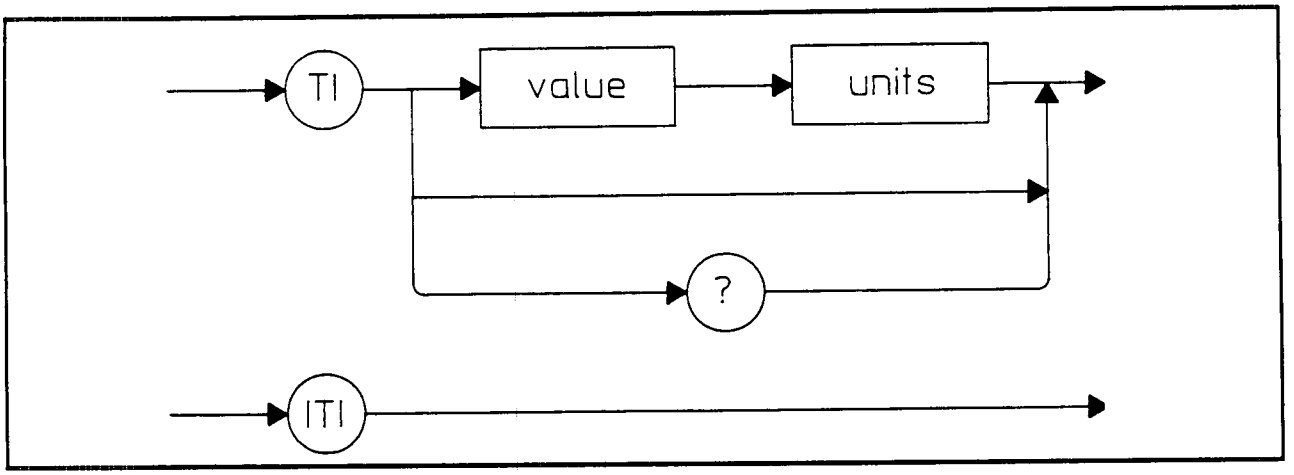


Figure 2-49. TI Syntax Diagram

Table 2-49. TI "value" Restrictions Given "units"

"Units"	Description	Range Restrictions for "value"
SE	Seconds	0.0 → 1000

Table 2-50. TI? and ITI Response Format

HEAD-on response	HEAD-off response
TI########.###SE	########.###

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 2-51. Error Messages

Code	Description
FAIL 010	Hardware failure, DAC range
FAIL 011	Bad checksum, low byte of ROM
FAIL 012	Bad checksum, high byte of ROM
FAIL 013	Machine data bus line stuck low
FAIL 014	Keyboard shift register test failed
FAIL 021	Signal too big during calibration
FAIL 022	Signal too small during calibration
FAIL 023	DC offset too positive during cal
FAIL 024	DC offset too negative during cal
FAIL 025	Unstable/ noisy calibration
FAIL 026	Calibration factor out of range: AC gain offset
FAIL 027	Calibration factor out of range: AC gain slope
FAIL 028	Calibration factor out of range: DC offset
FAIL 029	Calibration factor out of range: DC slope
FAIL 030	External ref unlocked
FAIL 031	Oscillator unlocked, VCO voltage too low
FAIL 032	Oscillator unlocked, VCO voltage too high
FAIL 033	HP-IB isolation circuits test failed self test
FAIL 034	HP-IB IC failed self test
FAIL 035	RS-232 test failed loop-back test
FAIL 036	Memory lost (battery dead)
FAIL 037	Unexpected interrupt
FAIL 038	Sweep-limit-flag signal failed self test
FAIL 039	Fractional-N IC failed self test
FAIL 040	Modulation Source failed self test
FAIL 041	Function-integrity-flag flip-flop always set
Error 100	Entry parameter out of bounds
Error 200	Invalid units suffix for entry
Error 201	Invalid units suffix with high voltage
Error 300	Frequency too large for function
Error 400	Sweep time too large (same as sweep rate too small)
Error 401	Sweep time too small
Error 500	Amplitude/offset incompatible
Error 501	Offset too big for amplitude
Error 502	Amplitude too big for offset
Error 503	Amplitude too small

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 2-51. Error Messages (con't)

Code	Description
Error 600	Sweep frequency improper
Error 601	Sweep frequency too large for function
Error 602	Sweep bandwidth too small
Error 603	Log sweep start freq too small
Error 604	Log sweep stop frequency less than start frequency
Error 605	Discrete sweep element is empty
Error 700	Unknown command
Error 701	Illegal query
Error 751	Key ignored – in remote (press LOCAL)*
Error 752	Key ignored – local lockout*
Error 753	Feature disabled in compatibility mode
Error 754	Attempt to recall a register that has not been stored since power up. (Use enhancements mode)*
Error 755	Amplitude modulation not allowed on selected function (warning only)*
Error 756	Modulation source arbitrary waveform is empty
Error 757	Too many modulation source arbitrary waveform points
Error 758	Firmware failure
Error 759	Error while running XRUN routine
Error 800	Illegal character received
Error 801	Illegal digit for selection item
Error 802	Illegal binary data block header
Error 803	Illegal string, string overflow
Error 810	RS-232 overrun – characters lost
Error 811	RS-232 parity error
Error 812	RS-232 frame error
Error 900	Option not installed

* *These errors do not set the ERR bit in the status byte.*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HP 3325A Compatibility

For compatibility with existing programs, the HP 3325B supports all of the HP 3325A Synthesizer/Function Generator remote commands. Table 2-52 lists the HP 3325B mnemonics alphabetically and shows compatibility of each with the HP 3325A.

Table 2-52. Remote Command Compatibility

HP 3325B Command	HP 3325A Compatible?	Description
*	yes	End-of-string character
AC	yes	Amplitude Calibrate
AM	yes	Amplitude
AP	yes	Assign zero phase
CALM	no	Calibration mode
DB	yes	dBm (suffix)
DCLR	no	Discrete sweep clear
DE	yes	Degrees (suffix)
DISP	no	Display on/off
DRCL	no	Discrete sweep recall
DSP	no	Display string
DSTO	no	Discrete sweep store
DV	no	dBV_{rms} (suffix)
E	no	Exponent character
ECHO	no	Echo; for RS-232
ENH	no	Enhancements on
ENT	no	Enter, no units (suffix)
ER	yes	Error query, 1-digit code
ERR	no	Error query, 3-digit code
ESTB	no	Stat register mask (same as MS)
EXTR	no	Ext Ref query
FR	yes	Frequency
FU	yes	Function select
HEAD	no	Header on/off
HV	yes	High voltage
HZ	yes	Hertz (suffix)
ID	no	Identify, short
*IDN	no	Identify, long
KH	yes	Kilohertz (suffix)
LCL	no	Local, clear lockout (RS-232)
MA	yes	Amplitude modulation
MD	yes	Data transfer mode
MF	yes	Sweep marker frequency
MH	yes	Megahertz (suffix)
MOAM	no	Mod S amp
MOAR	no	Write arbitrary waveform

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 2-52. Remote Command Compatibility (con't)

HP 3325B Command	HP 3325A Compatible?	Description
MOFR	no	Mod S frequency
MOFU	no	Mod S function
MP	yes	Phase modulation
MR	yes	mV_{rms} (suffix)
MS	yes	Status register mask (same as ESTB)
MV	yes	mV_{pp} (suffix)
OF	yes	DC offset entry
OPT	no	Option query
PH	yes	Phase entry
QSTB	no	Status register query
RE	yes	Recall state
RF	yes	Rear or front output selection
RMT	no	Remote with lockout (RS-232)
*RST	no	Reset (preset)
RSW	no	Reset single sweep
SC	yes	Start continuous sweep
SE	yes	Seconds (suffix)
SM	yes	Sweep mode selection
SP	yes	Sweep stop frequency entry
SR	yes	Store state selection
SS	yes	Start a single sweep
ST	yes	Sweep start frequency
TI	yes	Sweep time
VO	yes	V_{pp} (suffix)
VR	yes	V_{rms} (suffix)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Writing Compatible Programs

Backward Compatible with the HP 3325A

- Use only the two-letter HP 3325B command mnemonics such as FR. The three and four-letter mnemonics such as MOFR are not available on the HP 3325A.
- Do not separate commands with a semicolon.
- Use a leading **I** to interrogate setup parameters instead of a trailing **?**.
- Do not send values in scientific notation.

Programming Practices Compatible with IEEE 488.2

- Separate commands with a semicolon or line feed
- Use a trailing **?** to interrogate setup parameters instead of a leading **I**.
- Do not use data transfer mode 2.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Example Programs

HP-IB Interface Example Program

```
30  '
40  ! HP-BASIC Program to control the HP 3325B synthesizer.
50  !
60    ASSIGN @Hp3325 TO 717        !Select code and bus address
70                                 !usually 7 and 17
80    !
90    OUTPUT @Hp3325;"RST"         !reset the 3325B
100   !
110   Stat=SPOLL(@Hp3325)          !read status register
120   IF BIT(Stat,0) OR BIT(Stat,3) THEN PRINT "3325B has an error"
130   '
140   OUTPUT @Hp3325;"FR 123 KH; AM 1 VO"   !program freq and amptd
150   OUTPUT @Hp3325;"FR?"         !ask for frequency
160   ENTER @Hp3325;Freq           !read it back
170   PRINT "Frequency in Hz = ";Freq
180   '
190   LOCAL @Hp3325                !return front panel to local control
200   '
210   PRINT "Program done."
220 END
```

RS-232 Interface Example Program for HP-Vectra or IBM/PC

```
10  'HP Vectra BASIC program to control the 3325B Synthesizer.
20  '
30  'First open a communications file to the 3325B
40  'change COM1 to COM2 if needed.
50  OPEN "COM1:" AS #1
60  'OPEN defaults to 300 baud, 7 bits, parity EVEN
70  '
90  PRINT #1,"RST"               'send reset
100 PRINT #1,"HEAD 0"            'turn off heading in 3325B responses
110 '
120 PRINT #1,"QSTB?"             'ask for status register
130 INPUT #1, STAT               'read response from 3325B
150 IF (STAT AND (1+8)<>0) THEN PRINT "3325B has an error"
160 '
170 PRINT "Programming frequency and amplitude"
180 PRINT #1,"FR 123.4 KH; AM 1 VO"
190 PRINT #1,"FR?"               'ask for frequency
200 INPUT #1,FREQ                'read it back
210 PRINT "Frequency in Hz = ";FREQ
220 '
230 PRINT #1,"LCL"               'return front panel to local control
240 '
250 PRINT "Program done"
260 END
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RS-232 Interface Example Program for HP Series 300

```
30  !
40  ! HP-BASIC Program to control the HP 3325B synthesizer using either
50  ! a HP98644, HP98626, or the build-in serial interface in
60  ! a Series-200 or Series-300 computer.
70  !
80  ! The connecting cable depends on the RS232 interface:
90  !    98644A interface:    use 13242G cable (25 pin M to 25 pin M).
100 !    Built-in interface:  use 92221P cable (9  pin M to 25 pin M).
110 !
120   ASSIGN @Hp3325 TO 9          !Select code for the serial interface,
130                                !usually 9 or 10
140   !
160   GOSUB Initialize_card
170   !
190   OUTPUT @Hp3325;"RST"         !reset the 3325B
200   !
210   OUTPUT @Hp3325;"QSTB?"       !ask for status register
220   ENTER @Hp3325;Stat           !read status from 3325B
240   IF BIT(Stat,0) OR BIT(Stat,3) THEN PRINT "3325B has an error"
250   !
260   OUTPUT @Hp3325;"FR 123 KH; AM 1 VO"   !program freq and amptd
270   OUTPUT @Hp3325;"FR?"         !ask for frequency
280   ENTER @Hp3325;Freq           !read it back
290   PRINT "Frequency in Hz = ";Freq
300   !
310   OUTPUT @Hp3325;"LCL"         !return front panel to local control
320   !
330   PRINT "Program done."
340   STOP
350   !
360   !-----------------------------------------
370 Initialize_card:   !
380    !
390    Isc=SC(@Hp3325)             !Get Interface select code.
400    !
410    Reset_=0                    !constants for CONTROL statements.
420    Baud=3
430    Parity_=4
440    !
450    ! All the RS232 switches on the 3325B rear panel should be
460    ! up. This sets baud=300, parity ON, parity EVEN.
470    !
480    CONTROL Isc,Reset_;1        !reset the card
490    CONTROL Isc,Baud;300        !set baud rate
500    CONTROL Isc,Parity_;16+8+0+2  !set parity
510  RETURN
520 END
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 3
GENERAL INFORMATION

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HEWLETT PACKARD

MANUAL CHANGES

Model Number: HP 3325B
Manual Print Date: January 1988
Manual Part Number: 03325-90014

New or Revised Item

This Manual Change Sheet contains important information for correcting manual errors and for adapting the manual to instruments that contain modifications made after the printing of the manual. Change and correction information in this supplement is itemized by page numbers, corresponding to the original pages in the manual.

To use this supplement:

1. Make all Manual ADDENDA and ERRATA changes.
2. Additionally, make all changes that pertain to your instrument serial number.

Errata

Chapter 3, Page 3-1, Safety Considerations.
The connector shells listed below are common to one another and floating with respect to earth ground.

1. Main Signal (front and rear)
2. Sync Out
3. Mod Source Out
4. Ref. Out
5. 10 MHz Oven Output
6. Marker
7. X-Drive
8. Z-Blank
9. Aux. 0 dBm
10. Fast Sync
11. Ext. Ref In
12. Phase Mod In
13. Amptd Mod In

For operator protection, the maximum float voltage is 42V peak from earth ground.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 3

GENERAL INFORMATION

Introduction

This chapter contains general information about the HP 3325B, including its performance specifications, safety considerations, instrument description, available options, supplied accessories, and available accessories.

Specifications

Instrument specifications are listed in table 3-1. The specifications are the performance standards or limits against which the instrument is tested.

Safety Considerations

This product is a safety class 1 instrument (provided with a protective earth terminal). The instrument and manual should be reviewed for safety markings, instructions, cautions, and warnings to ensure safe operation.

This manual may have a yellow *manual change supplement* with it. This supplement contains information to correct errors and incorporate new information to keep the manual current. The supplement for this manual is identified by the manual print date and part number, both of which appear on the manual title page. Complimentary copies of the supplement are available from Hewlett-Packard.

Instrument Description

The HP 3325B Synthesizer/Function Generator produces sine wave, square wave, triangle waveforms, and positive and negative ramp waveforms from 1 μHz to a maximum frequency of 20 Mhz for sine wave and 10 Mhz for square wave and 10 kHz for the triangle and ramp functions. (The .999 extensions are assumed.) Frequency resolution is 1 μHz or eleven digits. Output amplitude is 1 mV_{pp} to 10 V_{pp}. The output amplitude level may be entered or displayed in V_{rms} or dBm (50Ω) as well as V_{pp}. Any function may have a dc offset of up to $\pm$4.5V or the output may be dc-only up to $\pm$5V. An optional high voltage output produces up to 40 V_{pp} into a load $\geq$ 500Ω, $\leq$ 500 pF.

The HP 3325B performs linear or log frequency sweeps in any of its waveforms at sweep times of 10 ms to 1000s for linear sweeps. Log sweep times are from 1s to 1000s for single sweeps and from 0.1s to 1000s for continuous sweeps. The direction of a single linear sweep may be up or down. A continuous sweep moves back and forth between the start and stop frequencies in an up/down/up/down/. . . fashion. Log sweeps always start at the start frequency and sweep up to the stop frequency. *Discrete sweep* is a feature which allows creation of custom sweep patterns.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-1. Specifications

FREQUENCY

Range:
Sine: 1 μHz to 20.999 999 999 MHz
Square: 1 μHz to 10.999 999 999 MHz
Triangle/Ramps: 1 μHz to 10.999 999 999 kHz
Resolution:
1 μHz, <100 kHz
1 mHz ≥100 kHz (1 μHz available, not displayed)
Accuracy:
$\pm 5 \times 10^{-6}$ of selected value, 20°C to 30°C, at time of calibration ,(Standard Instrument)

Stability:
$\pm 5 \times 10^{-6}$/year, 20°C to 30°C, standard (See also option 001, high stability frequency reference)
Warm-up Time:
20 minutes to within specified accuracy.

MAIN SIGNAL OUTPUT

(all waveforms)
Impedance:
50Ω ± 1Ω, 0–10 kHz
Return Loss:
>20 dB, 10 kHz to 20 MHz, except >10 dB for >3 V, 5 MHz to 20 MHz
Connector:
BNC; switchable to front or rear panel, non-switchable with option 002 except by internal cable change.
Floating:
Output may be floated up to 42V peak (AC + DC)

AMPLITUDE (all waveforms)

Resolution:
0.03% of full range or 0.01 dB (4 digits).
Range:
1 mV to 10 Vp-p in 8 amplitude ranges, 1–3–10 sequence. Ranges are 1 mV–2.999 mV, 3 mV–9.999 mV, 10 mV–29.99 mV, 30 mV–99.99 mV, .1 V–.2999 V, .3 V–.9999 V, 1V–2.999 V, 3 V–10V, (without DC offset).

Function	peak to peak	rms	dBm(50Ω)
Sine min.	1.000 mV	0.354 mV	– 56.02
max.	10.00 V	3.536 V	+ 23.98
Square min.	1.000 mV	0.500 mV	– 53.01
max.	10.00 V	5.000 V	+ 26.99
Triangle/ Ramps min.	1.000 mV	0.289 mV	– 57.78
max.	10.00 V	2.887 V	+ 22.22

Accuracy: (with 0 Vdc offset)
Sine:

	.001 Hz	100 kHz	10 MHz	20 MHz
+23.98 dBm	± .1 dB	± .4 dB		
+13.52 dBm	± .2 dB	± .6 dB	± .6 dB	
– 16.02 dBm			± .9 dB	
– 56.02 dBm				

Square Wave:

	.001 Hz	100 kHz	10 MHz
10 Vp-p	± 1.0%	± 11.1%	
3 Vp-p			
1 mVp-p	± 2.2%	± 13.6%	

Triangle:

	.001 Hz	2 kHz	10 kHz
10 Vp-p	± 1.5%	± 5.0%	
3 Vp-p			
1 mVp-p	± 2.7%	± 6.2%	

Ramps:

	.001 Hz	500 kHz	10 kHz
10 Vp-p	± 1.5%	± 10%	
3 Vp-p			
1 mVp-p	± 2.7%	± 11.2%	

With DC offset, increase all sinewave tolerances by .2 dB and all function tolerances by 2%.

SINEWAVE SPECTRAL PURITY

Phase Noise:
– 60 dBc for a 30 kHz band centered on a 20 MHz carrier (excluding ± 1 Hz about the carrier) with option 001 installed.
Spurious:
All non-harmonically related output signals will be more than 70 dB below the carrier (– 60 dBc with DC offset), or less than – 90 dBm, whichever is greater.

WAVEFORM CHARACTERISTICS

Sinewave Harmonic Distortion:
Harmonically related signals will be less than the following levels relative to the fundamental:

Frequency Range	Harmonic Level
.1 Hz to 50 kHz	– 65 dBc
50 kHz to 200 kHz	– 60 dBc
200 kHz to 2 MHz	– 40dBc
2 MHz to 15 MHz	– 30 dBc
15 MHz to 20 MHz	– 25 dBc

Squarewave Characteristics:
Rise/fall time: ≤20 ns 10% to 90%, at full output.
Overshoot: ≤5% of peak to peak amplitude, at full output.at 1MHz.
Settling time: <1 μs to settle to within .05% of final value, tested at full output with no load, 10 Hz to 500 kHz.
Symmetry: ≤.02% of period + 3 ns.
Triangle/Ramp Characteristics:
Triangle/ramp linearity (10% to 90%, 10 kHz): ± .05% of full p-p output for each range.
Ramp retrace time: ≤3 μs, 90% to 10%.
Period variation for alternate ramp cycles: ≤1% of period.

DC OFFSET

Range:
DC only (no AC signal): 0 to ± 5.0 V/50Ω
DC + AC: Maximum DC offset ± 4.5 V on highest range; decreasing to ± 4.5 mV on lowest range.
Resolution: 4 digits
Accuracy:
DC only: ± .02 mV to ± 20 mV, depends on offset chosen.
DC + AC, to 1 MHz: ± .06 mV to ± 60 mV, depends on AC output level, ± .2 mV to ± 120 mV for ramps to 10 kHz.
DC + AC, 1 MHz to 20 MHz: ± 15 mV to ± 150 mV, depends on AC output level.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-1. Specifications (Cont'd)

PHASE OFFSET
Range:
±719.9° with respect to arbitrary starting phase, or assigned zero phase.
Resolution: 0.1°
Increment Accuracy: ±0.2°
Stability: ±1.0 degree of phase/°C

SINEWAVE AMPLITUDE MODULATION
Modulation Depth (at full output for each range):
0–100%
Modulation Frequency Range:
DC to 400 kHz (0–21 MHz carrier frequency)
Envelope Distortion:
– 30 dB to 80% modulation at 1 kHz, 0 VDC offset
Sensitivity:
±5 V peak for 100% modulation
Input Impedance: 10 kΩ
Connector: Rear panel BNC

PHASE MODULATION
Sine Function Range:
±850°, ±5V input
Sine Function-Linearity:
±0.5%, best fit straight line
Squarewave Range: ±425°
Triangle Range: ±42.5°
Positive and Negative Ramps:
±85°
Modulation Frequency Range:
DC – 5 kHz
Input Impedance: >40 kΩ
Connector: Rear panel BNC

FREQUENCY SWEEP
Sweep Time:
Linear: 0.01s to 1000s
Logarithmic: 1s to 1000s single, 0.1s to 1000s continuous
Maximum Sweep Width:
Full frequency range of the main signal output for the waveform in use except minimum log start frequency is 1 Hz.
Minimum Sweep Width:

Function	Minimum sweep width	
	Sweep time .01 sec.	Sweep time 99.9 sec.
Sine:	.1 mHz	999.9 mHz
Square:	.05 mHz	499.5 mHz
Triangle:	.005 mHz	49.95 mHz
Ramps:	.01 mHz	99.99 mHz

Minimum log sweep width is 1 decade.
Phase Continuity:
Sweep is phase continuous over the full frequency range of the main output.
Discrete Sweep:
Number of segments: 100 maximum (Start and stop frequencies settable for each segment)
Time/segment: 0.01s to 1000s, 0.01s resolution

MODULATION SOURCE:
Frequency Range: Sine 0.1 Hz–10 kHz, Square 0.1 Hz–2 kHz
Frequency Resolution: 2 digits
Frequency Accuracy: Typically 0.1% (Sinewave)
Amplitude Range: 0.1 Vp-p to 12 Vp-p
Amplitude Resolution: 0.1 V
Amplitude Accuracy: Typically ± 200 mV
Impedance: Designed to drive ≥ 10 kOhm loads
Sinewave Purity: Typically better than – 34 dBc
Standard Waveforms: Sine, Square
Arbitrary Waveforms: Vertical resolution 256 points, horizontal resolution 4096 points, 300,000 samples/sec, 10 kHz maximum.
Output Location: Rear Panel BNC

AUXILIARY OUTPUTS
Auxiliary Frequency Output:
Frequency Range: 21 MHz to 60.999 999 999 MHz, underrange coverage to 19.000 000 001 MHz, frequency selection from front panel.
Amplitude: 0 dBm; output impedance: 50Ω
Connector: Rear panel BNC
Sync Output:
Square wave with $V_{high} \geq 1.2$ V, $V_{low} \leq 0.2$ V into 50Ω. Frequency range is the same as the main signal output for front panel sync and DC-60 MHz for rear panel sync.
Output impedance: 50Ω
Connector: BNC front and rear panels.
X-Axis Drive:
(0–100s sweeps only)
0 to +10 Vdc linear ramp proportional to sweep frequency; linearity, 10–90%, ± .1% of final value (applies for sweep widths which are integer multiples of the minimum sweep width).
Connector: Rear panel BNC.
Sweep Marker Output:
High to low TTL compatible voltage transition at keyboard selected marker frequency. (Linear sweep only.)
Connector: Rear panel BNC.
Z-Axis Blank Output:
TTL compatible voltage levels capable of sinking current from a positive source. Current 200 mA, voltage 45V, power dissipation 1 watt maximum.
1 MHz Reference Output:
0 dBm output for phase-locking additional instruments to the HP 3325B.
Connector: Rear panel BNC.
10 MHz Oven Output:
0 dBm internal high stability frequency reference output for phase-locking HP 3325B or other instruments (option 001 only).
Connector: Rear panel BNC.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-1. Specifications (Cont'd)

AUXILIARY INPUTS

Reference Input:
For phase-locking HP 3325B to an external frequency reference. Signal from 0 dBm to + 20 dBm into 50Ω. Reference signal must be a subharmonic of 10 MHz from 1 MHz to 10 MHz.
Connector: Rear panel BNC. With option 001 this input may be jumpered to the 10 MHz reference output.
Amplitude Modulation Input:
See modulation specifications.
Phase Modulation Input:
See modulation specifications.

REMOTE CONTROL

Frequency Switching Time (to within 1 Hz exclusive of programming time:
≤10 ms for 100 kHz step; ≤25 msec for 1 MHz step; ≤70 msec for 20 MHz step.
Phase Switching Time (to within 90° of phase lock exclusive of programming time:
≤15 msec.
Amplitude Switching Time (to within amplitude specifications, exclusive of programming time): <30 ms.
HP-IB Interface Functions:
SH1, AH1, T6, L3, SR1, RL1, PP0, DC1, DT1, C0, E1
RS-232 Interface:
Subset of ANSI/EIA-232D-1986, CCITT V.24
Type: DTE, 25 pin female "D" connector
Baud Rate: 300-4800

OPTION 001 HIGH STABILITY FREQUENCY REFERENCE

Aging Rate:
$\pm 5 \times 10^{-8}$/week, after 72 hours continuous operation; $\pm 1 \times 10^{-7}$ mo., after 15 days continuous operation.
Warm-up time:
Reference will be within $\pm 1 \times 10^{-7}$ of final value 15 minutes after turn-on at 25°C for an off time of less than 24 hours.

OPTION 002 HIGH VOLTAGE OUTPUT

Frequency Range: 1 μHz to 1 MHz
Amplitude:
Range: 4.00 mV to 40.00 Vp-p in 8 ranges, 4-12-40 sequence, into 500Ω < 500 pF load. Ranges are four times the standard instrument ranges, without DC offset.
Accuracy: ± 2% of full output for each range at 2 kHz.
Flatness: ± 10% relative to programmed amplitude.
Sinewave Distortion:
Harmonically related signals will be less than the following levels (relative to the fundamental full output into 500Ω, load):
10 Hz-50 kHz: − 65 dB
50 kHz-200 kHz: − 60 dB
200 kHz-1 MHz: − 40 dB
Square Wave Rise/Fall Time:
± 125 ns, 10% to 90% at full output, with 500Ω, 500 pF load.
Square Wave Overshoot:
± 10% of peak to peak amplitude with 500Ω, 500 pF load.
Output Impedance:
<2Ω at DC, <10Ω at 1 MHz
DC Offset:
Range: 4 times the specified range of the standard instrument.
Accuracy: ± (1% of full output for each range + 25 mV).
Maximum Output Current:
± 20 mA peak

GENERAL

Operating Environment:
Temperature: 0°C to 55° C
Relative Humidity: 95%, 0°C to 40°C
Altitude: ≤15,000 ft.
Power:
100/120/220/240 V, +5%, −10%; 48 to 66 Hz; 90 VA, 120 VA with all options
Weight:
9 kg (20 lbs) net; 14.5 kg (32 lbs) shipping
Dimensions:
133.4 mm high × 425.5 mm wide × 498.5 mm deep (5¼" H × 16¾" W × 19⅝" D)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The HP 3325B is fully programmable through two separate computer interface connectors located on the rear panel. They are the Hewlett-Packard Interface Bus (HP-IB) and an RS-232 serial interface. A desktop computer can be configured and programmed to remotely operate the HP 3325B with either of these two interfaces. Interface information is in Chapter 2, Remote Operation.

New or Enhanced Features of the HP 3325B

The feature set of the HP 3325B is a superset of the HP 3325A features. The additional features and improvements are summarized in the following:

- Non-volatile memory added: battery backup provides power to the memory when the power switch is in the standby position or when the instrument is disconnected from line voltage.
- Modulation source added: a second source of sine wave, square wave, and arbitrary waveforms provides a signal which may be used to modulate the main signal. The output connector for this source is on the rear panel between the two modulation input connectors.
- RS-232 interface added: this serial interface offers an alternative to the HP-IB. Additional remote operation commands have been added to the command set to allow it to be used in the same manner as the HP-IB (i.e.; emulate the HP-IB bus commands).
- Frequency range of the rear-panel sync output extended to 60 MHz.
- Discrete sweep added: a sequence of up to 100 linear sweeps or frequency steps (called segments) offers the ability to create custom sweep patterns. Each segment is composed of a start frequency, stop frequency, sweep time, and marker frequency. Refer to Chapter 1, Operation and Reference, for more information on this feature.
- Additional front-panel conveniences such as a preset key, frequency entry increment and decrement (defined by a new F STEP key), and the use of the left-arrow key as a backspace during parameter entries.
- Over-voltage circuit breaker added: an over-voltage protection circuit provides added reliability and reduces maintenance.
- Extended self-test and diagnostic capabilities to reduce maintenance.

Compatibility with the HP 3325A

The HP 3325B enhancements were designed to improve upon the capabilities of the HP 3325A without sacrificing compatibility. In most cases the new features do not cause compatibility problems. Complete backward compatibility is achieved by turning off the enhancements switch (on the rear panel). This feature is also programmable. Table 3-2 shows a comparison of the HP 3325A features that have been enhanced and are controlled by the enhancements switch.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-2. Comparison of compatible and enhanced features relative to HP 3325A

Compatibility Mode	Enhancement Mode
Store/recall registers cleared when power is turned off.	Store/recall registers are non-volatile.
Programming times compatible with the HP 3325A.	Some items program faster.
Amplitude calibration time compatible with the HP 3325A.	Calibration is faster.
Frequency, time, and phase entries are truncated.	All entries are rounded.
Amplitude or offset entries stop a sweep.	Amplitude and offset values can be changed while sweeping without stopping the sweep.
Actual sweep time can vary significantly from value entered for very narrow-band sweeps.	Actual sweep time value deviates less from value entered.
Actual sweep stop-frequency can vary from value entered for very narrow-band sweeps.	Actual sweep stop-frequency value deviates less from entered value.
Continuous log sweeps always cover an integer number of decades.	Partial decades possible.
Log sweep momentarily pauses between sweeps.	Pause time between log sweep segments minimized.

Options

Table 3-3 lists the options available for the HP 3325B. These options are available when the instrument is ordered by specifying the option number, or are available for later installation by ordering the option part number.

Table 3-3. Options

HP 3325B Option	HP Part Number	Description
001	03325-88801	High Stability Frequency Reference
002	03325-88802	High Voltage Output
907	5061-0089	Front Handle Kit
908	5061-0077	Rack Flange Kit
909	5061-0083	Rack Mount Flange Kit with Handles

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Accessories Supplied

Table 3-4 lists the accessories supplied with the HP 3325B. Additional Operating and Service manuals may be ordered through your HP Sales and Service Office.

Table 3-4. Accessories Supplied

Description	Quantity	HP Part Number
Operating Manual	1 ea.	03325-90014
Installation Manual	1 ea.	03325-90006
Service Manual	1 ea.	03325-90003

Accessories Available

Table 3-5 lists the accessories available for the HP 3325B. These accessories may be obtained through your HP Sales and Service Office.

Table 3-5. Accessories Available

Accessory	HP Part Number
Ground Isolator	15507A
50Ω Feed-Thru Termination	11048C
Transit Case	9211-2655

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HP 3325B HP-IB and RS-232 PROGRAMMING CODES:

COMMANDS:

CODE	FUNCTION
AC	Amplitude Cal
AM	Amplitude
AP	Assign zero phase
CALM	Calibration mode (0-1).
DCLR	Discrete sweep clear.
DISP	Display (0-1).
DRCL	Discrete sweep recall (00-99).
DSP	Display a string (' ').
DSTO	Discrete sweep store (00-99).
ECHO	Echo for RS-232 (0-1).
ENH	Enhancements mode (0-1).
IER	Error query (1 digit).
ERR?	Error query (3 digits).
ESTB	Status reg. mask (also MS) (0-15)
EXTR?	Ext Ref query.
FR	Frequency
FU	Function Select (0-5).
HEAD	Query Header Enabled (0-1).
HV	High voltage (0-1).
ID?	Model Identify (short).
*IDN?	Model Identify (long).
LCL	Local, clear lockout.
MA	Amplitude modulation (0-1).

CODE	FUNCTION
MD	Data transfer mode (1-2).
MF	Sweep marker frequency
MOAM	Modulation Source amplitude
MOAR	Write arb waveform
MOFR	Modulation Source frequency
MOFU	Modulation Source function (0-3).
MP	Phase modulation (0-1).
MS	Status reg. mask (also ESTB) (@,A-O).
OF	DC Offset
OPT?	Option query.
PH	Phase
QSTB?	Status register query.
RE	Recallstate(−,0-9).
RF	Rear or front output (2-1).
RMT	Remote with lockout.
*RST	Reset (Preset).
RSW	Reset single sweep.
SC	Start continuous sweep.
SM	Sweep mode (1-3).
SP	Sweep stop frequency
SR	Store state (0-9).
SS	Reset or Start single sweep.
ST	Sweep start frequency
TE	Self Test
TI	Sweep time

Note that most commands may be followed by a question mark (?) to interrogate the related parameter.

DATA:

0 to 9	Digits
E	Exponent character
'xyz'	Alpha-numeric string
-	Minus sign
.	Decimal point

SUFFIX:

HZ	Hertz
KH	KHz
MH	MHz
MR	milli-Volts RMS
MV	milli-Volts p-p
VO	Volts p-p

VR	Volts RMS
DB	dBm
DV	dBVrms
DE	Degrees
SE	Seconds
ENT	Enter, no units
*	EOS character

STATUS BYTE:

BIT	VALUE	NAME	DESCRIPTION
0	1	ERR*	Program or keyboard entry error.
1	2	STOP*	Sweep stopped.
2	4	START*	Sweep started.
3	8	FAIL*	Hardware failure.
5	32	SWEEP	Sweeping.
6	64	RQS	Requested service
7	128	BUSY	3325 is busy.

** Only bits 0 to 3 may enable an SRQ.*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Bits which can be enabled to generate an SRQ and the arguments for MS and ESTB:

ARGUMENTS	FAIL	START	STOP	ERR
@,0	Mask	Mask	Mask	Mask
A, 1	Mask	Mask	Mask	ENABLE
B, 2	Mask	Mask	ENABLE	Mask
C, 3	Mask	Mask	ENABLE	ENABLE
D, 4	Mask	ENABLE	Mask	Mask
E, 5	Mask	ENABLE	Mask	ENABLE
F, 6	Mask	ENABLE	ENABLE	Mask
G, 7	Mask	ENABLE	ENABLE	ENABLE
H, 8	ENABLE	Mask	Mask	Mask
I, 9	ENABLE	Mask	Mask	ENABLE
J,10	ENABLE	Mask	ENABLE	Mask
K,11	ENABLE	Mask	ENABLE	ENABLE
L,12	ENABLE	Enable	Mask	Mask
M,13	ENABLE	Enable	Mask	ENABLE
N,14	ENABLE	Enable	ENABLE	Mask
O,15	ENABLE	Enable	ENABLE	ENABLE

(Example: MSI or ESTB9ENT cause an SRQ to be generated when an Error or Failure occurs. ESTB? returns the byte value of the mask.)

Hardware Failure Codes:

Fail	010	DAC range error
Fail	011	bad checksum, low byte of ROM
Fail	012	bad checksum, high byte of ROM
Fail	013	machine data bus line stuck low
Fail	014	keyboard shift register test failed
Fail	021	signal too big during calibration
Fail	022	signal too small during calibration
Fail	023	DC offset too positive during cal
Fail	024	DC offset too negative during cal
Fail	025	unstable/ noisy calibration
Fail	026	calibration factor out of range: AC gain offset
Fail	027	calibration factor out of range: AC gain slope
Fail	028	calibration factor out of range: DC offset
Fail	029	calibration factor out of range: DC slope
Fail	030	external ref unlocked
Fail	031	oscillator unlocked, VCO voltage too low
Fail	032	oscillator unlocked, VCO voltage too high
Fail	033	HP-IB isolation circuits failed self test
Fail	034	HP-IB IC failed self test
Fail	035	RS232 test failed loop-back test
Fail	036	memory lost (battery dead)
Fail	037	unexpected interrupt
Fail	038	sweep-limit-flag signal failed self test
Fail	039	Fractional-N IC failed self test
Fail	040	Modulation Source failed self test
Fail	041	function-integrity-flag flip-flop always set

Programming Error Codes:

Error	100	entry parameter out of bounds
Error	200	invalid units delimiter for entry
Error	201	invalid units delimiter with high voltage
Error	300	frequency too large for function
Error	400	sweep time too large, sweep rate too small.
Error	401	sweep time too small.
Error	500	amplitude/offset incompatible
Error	501	offset too big for amplitude
Error	502	amplitude too big for offset
Error	503	amplitude too small for offset
Error	600	sweep frequency
Error	601	sweep frequency too large for function
Error	602	sweep bandwidth too small
Error	603	log sweep start freq too small
Error	604	log sweep stop < start freq
Error	605	discrete sweep element is empty
Error	700	unknown command
Error	701	illegal query
Error	751	key ignored -- in remote (press LOCAL)
Error	752	key ignored -- local lockout
Error	753	feature disabled in compatibility mode
Error	754	attempt to recall a register that has not been stored since power up (use enhancements mode).
Error	755	amplitude modulation not allowed on selected function (warning only)
Error	756	modulation source arbitrary waveform is empty
Error	757	too many modulation source arbitrary waveform points
Error	758	firmware failure Error759 error while running XRUN routine
Error	800	illegal character received
Error	801	illegal digit for selection item
Error	802	illegal binary data block header
Error	803	illegal string, string overflow
Error	810	RS232 overrun -- characters lost
Error	811	RS232 parity error
Error	812	RS232 frame error
Error	900	option not installed

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Index

A

Accessories 3-7
Amplitude calibration key 1-3, 1-32
Amplitude key 1-17
Amplitude limits of ac functions 1-17
Amplitude modulation 1-28
  Input connector 1-3
  input impedance 1-29
Amplitude vs. function 1-10
Arbitrary waveforms 1-30
Arrow keys 1-15
Assign zero phase key 1-20
Attention (ATN) bus line 2-4
Auxiliary output connector 1-3

B

Bandwidth vs. function 1-16
Bandwidth, linear sweep 1-25
Baud rate 1-35, 2-14
Bus commands (HP-IB) 2-7
Bus management lines (HP-IB) 2-3

C

Calibration 1-32
Cancelling sweeps 1-24
Changing sweep bandwidth 1-24
Changing the bus address 2-7
Circuit breaker reset 1-3
Clear command 2-7
Clear discrete key 1-26
Clear display 1-13
Clear key 1-13
Clear lockout 2-8
Clear memory 1-31
  clear all memory 1-4
  Discrete sweep table 1-3
Command Mode 2-4, 2-7
Command syntax 2-17
Compatibility 2-30, 2-67, 2-69, 3-5 - 3-6
Compatibility mode 1-4, 2-13
Connectors
  Amplitude modulation input 1-3, 1-28
  Auxiliary output 1-3, 1-41
  External reference input 1-3
  Fast sync output 1-3
  HP-IB 1-34
  main signal 1-8
  main signal output 1-41
  Main signal output (front panel) 1-3
  Main signal output (rear panel) 1-3
  marker output 1-37
  modulation source 1-29
  Modulation source output 1-3
  Phase modulation input 1-3, 1-29
  Reference output 1-3
  RS-232 1-35
  Synchronized output 1-3
  10 MHz oven 1-42
  X-drive 1-3, 1-37 - 1-38
  Z-blank 1-3, 1-38
  Z-blank output 1-37
Continuous
  discrete sweeps 1-27
  indicator 1-25
  linear sweeps 1-25
  sweeps 1-21, 1-24, 1-37
Converting units 1-17

D

Data entry 1-12
Data keys 1-2, 1-12
Data Mode 2-4, 2-7
Data transfer rate 2-2
DC offset 1-11
  key 1-17
  limits 1-18
Default address 2-7
Description of the HP-IB 2-2
Disabling modulation 1-30
Discrete sweep key 1-27
Discrete sweeps 1-21, 1-26, 1-37
Display 1-2
  clear 1-13
  dc offset 1-11
  indicators 1-14
  parameters 1-14
  units 1-14
Displaying the bus address 2-6
Distortion 1-11
  Causes 1-3

E

Editing data entries 1-13
End or Identify (EOI) 2-4
Enhancements 1-25, 2-13, 2-30
Entering discrete sweep parameters 1-26
Entry keys 1-2
EOCS character 2-19
Error messages 1-13, 2-65
Example Programs 2-70
External frequency reference 1-42
External reference indicator 1-3
External reference input connector 1-3

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

F

Fan 1-3
Fan Filter 1-3
Fast sync output connector 1-3
Fast sync output signal 1-40
Frequency
  bandwidth vs. function 1-16
  entry indicator 1-15
  key 1-16
  reference output 1-42
  resolution 1-16
  step key 1-15
  sweeps 1-21
Function
  amplitude ranges 1-10
  bandwidth 1-16
  keys 1-11

H

Handshake lines (HP-IB) 2-3
Handshake, serial interface 1-36, 2-14
Hardware handshale 2-14
High voltage option 1-9
HP-IB Address
  default 2-6
  displaying 2-6
  talk and listen 2-5
HP-IB Capabilities 2-2, 2-5
HP-IB description 2-2
HP-IB interface 1-3, 1-33

I

Impedance
  of amplitude modulation input 1-29
  of main signal output 1-8
  of phase modulation input 1-29
Indicators
  amplitude 1-17
  arbitrary waveform 1-30
  Auxiliary 1-3
  continuous 1-25
  dc offset 1-17
  display 1-14
  External reference 1-3
  frequency 1-16
  frequency entry 1-15
  function 1-11
  listen 1-33
  marker frequency 1-23
  Modulation 1-3
  modulation source 1-29
  phase 1-20
  rear-only 1-8
  remote 1-33, 1-36, 2-16
  shift 1-7
  SRQ 1-33
  start frequency 1-22
  Status 1-2
  stop frequency 1-22
  Units 1-3
Instrument description 3-1
Instrument preset key 1-3
Interface
  HP-IB 1-3, 1-33
  RS-232 1-3, 1-35, 2-11
Interface clear (IFC) 2-4, 2-7

K

Keys
  amplitude 1-17
  Amplitude calibration 1-3, 1-32
  amplitude modulation 1-28
  amplitude modulation off 1-30
  assign zero phase 1-20
  bus address 1-34
  clear 1-13
  clear discrete 1-26
  Data 1-2
  data entry 1-12
  dc offset 1-17
  discrete sweep 1-27
  Entry 1-2
  frequency 1-16
  frequency step 1-15
  function 1-11
  Instrument preset 1-3
  Local 1-2, 1-33, 1-36, 2-15
  marker frequency 1-23
  marker into center frequency 1-23
  Modify 1-3, 1-15
  Modulation source 1-3
  phase 1-20
  phase modulation 1-29
  phase modulation off 1-30
  Rear-only 1-3, 1-8
  recall 1-31
  reset/start 1-24
  Shift 1-2, 1-7
  start 1-25
  start frequency 1-22
  stop frequency 1-22
  store 1-31
  Sweep 1-2
  time 1-22

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

L

Limits, offset 1-18
Linear sweep bandwidth 1-25
Linear sweeps 1-21, 1-25
Listen-only address 2-7
Local command 2-15
Local HP-IB bus command 2-8
Local key 1-2, 1-33, 1-36, 2-15
Local lockout 2-8, 2-55
Log sweeps 1-21, 1-25, 1-37

M

Main function keys 1-11
Main signal
  bandwidth vs. function 1-16
  impedance 1-8
  loading 1-10
  output connector 1-8
  Output connector (front panel) 1-3
  Output connector (rear panel) 1-3
  return loss 1-8
Rspecification 1-8
  termination 1-11
Marker 1-23
Marker frequency key 1-23
Marker into center frequency key 1-23
Masking the status byte 2-8 - 2-9
Maximum dc offset 1-18
Memory clear 1-31, 2-7
Messages, error 1-13, 2-65
Minimum dc offset 1-18
Modify bandwidth 1-24
Modify keys 1-3, 1-15
Modifying entry values 1-15
Modulation 1-28
  Indicators 1-3
  source 1-28 - 1-29
  source amplitude 1-29
  source frequency 1-30
  Source keys 1-3
  Source output connector 1-3
  voltage limits 1-28

N

New features 3-5

O

Offset 1-11
Offset limits 1-18
Options 3-6
  handles 3-6
  high voltage 1-9
  high-stability frequency reference 1-4
  rack mount 3-6
Overshoot 1-11

P

Parallel poll 2-8
Parameter units 1-14
Parameters 2-18
Parameters, viewing 1-14
Parity 1-36, 2-14
Phase modulation 1-28
  Input connector 1-3
  input impedance 1-29
Phase range 1-20
Power line
  Voltage limits 1-3
  Voltage selection 1-3
  Voltage selection vs fuse used 1-3
Power switch 1-2
Power-down state 1-4
Preset state 1-3 - 1-5, 2-13, 2-56

R

Rear-only key 1-3, 1-8
Rear-panel switches 1-3
Recall discrete sweep segments 1-27
Recall state 2-53
Recalling instrument states 1-31
Receive pacing 2-14
Reference output 1-42
Reference output connector 1-3
Remote (RS-232) 2-55
Remote command 2-8
Remote mode 2-15
Remote operation command list 2-67
Remote operation commands
  amplitude calibration 2-20
  amplitude data entry 2-21
  amplitude modulation control 2-40
  assign zero phase 2-23
  calibration mode 2-24
  clear discrete sweep table 2-25
  control location of main signal 2-54
  data transfer mode control 2-41
  dc offset data entry 2-49
  discrete sweep store/recall 2-27
  discrete sweep table clear 2-25
  display on/off 2-26
  display string 2-28

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

echo characters (RS-232) 2-29
enable SRQ 2-32, 2-48
enhancements control 2-30
error query 2-31
external reference locked query 2-33
frequency data entry 2-34
function select 2-35
high voltage output control 2-37
identification query 2-38
local command 2-39
main signal rear/front connector 2-54
marker frequency data entry 2-42
mask status bye 2-32, 2-48
mod source amplitude data entry 2-43
mod source arb waveform entry 2-44
mod source frequency data entry 2-45
mod source function select 2-46
option query 2-50
phase data entry 2-51
phase modulation control 2-47
query status byte 2-52
recall state 2-53
remote command (RS-232) 2-55
reset 2-56
reset single sweep 2-57
response header control 2-36
set SRQ mask 2-32, 2-48
start continuous sweep 2-58
start frequency data entry 2-63
start single sweep 2-62
status byte query 2-52
stop frequency data entry 2-60
store state 2-61
sweep mode selection 2-59
sweep time data entry 2-64
waveform select 2-35
Reset/start key 1-24
Resolution, frequency 1-16
Resolution, phase 1-20
Return loss
main signal 1-8
RS-232
baud rate 2-14
cable pin assignments 2-12
interface 2-11
remote control 2-18
RS-232 baud rate 1-35
RS-232 interface 1-3, 1-35

S

Safety consideration 3-1
Selecting a function 1-11
Self test 1-3
Serial
baud rate 2-14
handshake 2-14
interface 2-11
poll (HP-IB) 2-8, 2-52
word length 2-14
Serial handshake 1-36
Service request (SRQ) 2-4, 2-8
Set local 2-8
Setup parameters, viewing 1-14
Shift key 1-2, 1-7
Single discrete sweeps 1-27
Single sweeps 1-21, 1-24, 1-37
Software handshake 2-14
Specification 3-1
Square wave
Standby 1-4
Start frequency key 1-22
Start key 1-25
State
power-down 1-4
preset 1-4 - 1-5
turn-on 1-4
Status bit 2-8
Status byte 2-10, 2-52
mask 2-8 - 2-9
Status indicators 1-2
Stop frequency key 1-22
Storing discrete sweep parameters 1-26
Storing instrument states 1-31
Sweep
Keys 1-2
parameter default values 1-21
time limit 1-22
Switches
Rear-panel 1-3
Symbols 2-19
Synchronized output connector 1-3
Synchronous output signal 1-40
Syntax 2-17
Syntax drawings rules 2-19
System controller 2-3

T

Talk/listen addresses 2-5
Termination, main signal 1-11
Tests, self-test 1-3, 1-32
Time key 1-22
Transfer rate 2-2
Trigger (HP-IB) 2-9, 2-62
Turn-on state 1-4, 2-13

U

Units 1-14
conversion 1-17
Indicators 1-3

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

V

Viewing the bus address 2-6
Voltage range vs. function 1-10

W

Warm-up time 1-4

X

X-drive connector 1-3
X-drive signal 1-38

Z

Z-blank connector 1-3
Z-blank signal 1-38

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Hewlett-Packard Sales and Service Offices

To obtain Servicing information or to order replacement parts, contact the nearest Hewlett-Packard Sales and Service Office listed in HP Catalog, or contact the nearest regional office listed below:

In the United States

California
P.O. Box 4230
1421 South Manhattan Avenue
Fullerton 92631

Georgia
P.O. Box 105005
2000 South Park Place
Atlanta 30339

Illinois
5201 Tollview Drive
Rolling Meadows

New Jersey
W. 120 Century Road
Paramus 07652

In Canada
Hewlett-Packard (Canada) Ltd.
17500 South Service Road
Trans-Canada Highway
Kirkland, Quebec H9J 2M5

In France
Hewlett-Packard France
F-91947 Les Ulis Cedex
Orsay

In German Federal Republic
Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Berner Strasse 117
Postfach 560 140
D-6000 Frankfurt 56

In Great Britain
Hewlett-Packard Ltd.
King Street Lane
Winnersh, Wokingham
Berkshire RG11 5AR

In Other European Countries
Switzerland
Hewlett-Packard (Schweiz) AG
7, rue du Bois-du-Lan
Case Postale 365
CH-1217 Meyrin

In All Other Locations
Hewlett-Packard Inter-Americas
3155 Porter Drive
Palo Alto, California 94304

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HP 3325B Installation Manual

Synthesizer/Function Generator

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Installation Manual

MODEL HP 3325B
Synthesizer/Function Generator

Serial Numbers
All

HEWLETT PACKARD

HP Part Number 03325-90006
Microfiche Part Number 03325-90206
Printed in U.S.A.

Print Date: March 1990

©Hewlett-Packard Company, 1978, 1981, 1984, 1988, 1990. All rights reserved.
8600 Soper Hill Road, Everett, WA 98205-1298

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Warning



To prevent potential fire or shock hazard, do not expose equipment to rain or moisture.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HEWLETT PACKARD

SAFETY SUMMARY

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements. This is a Safety Class 1 instrument.

GROUND THE INSTRUMENT

To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument is equipped with a three-conductor ac power cable. The power cable must either be plugged into an approved three-contact electrical outlet or used with a three-contact to two-contact adapter with the grounding wire (green) firmly connected to an electrical ground (safety ground) at the power outlet. The power jack and mating plug of the power cable meet International Electrotechnical Commission (IEC) safety standards.

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

KEEP AWAY FROM LIVE CIRCUITS

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power and discharge circuits before touching them.

DO NOT SERVICE OR ADJUST ALONE

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the instrument. Return the instrument to a Hewlett-Packard Sales and Service Office for service and repair to ensure the safety features are maintained.

DANGEROUS PROCEDURE WARNINGS

Warnings, such as the example below, precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.

WARNING

Dangerous voltages, capable of causing death, are present in this instrument. Use extreme caution when handling, testing, and adjusting.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SAFETY SYMBOLS


General Definitions of Safety Symbols Used On Equipment or In Manuals.



Instruction manual symbol: the product will be marked with this symbol when it is necessary for the user to refer to the instruction manual in order to protect against damage to the instrument.



Indicates dangerous voltage (terminals fed from the interior by voltage exceeding 1000 volts must be so marked.)



Protective conductor terminal. For protection against electrical shock in case of a fault. Used with field wiring terminals to indicate the terminal which must be connected to ground before operating equipment.



Low-noise or noiseless, clean ground (earth) terminal. Used for a signal common, as well as providing protection against electrical shock in case of a fault. A terminal marked with this symbol must be connected to ground in the manner described in the installation (operating) manual, and before operating the equipment.

Frame or chassis terminal. A connection to the frame (chassis) of the equipment which normally includes all exposed metal structures.



Alternating current (power line.)



Direct (power line.)



Alternating or direct current (power line.)

WARNING ***The WARNING sign denotes a hazard. It calls attention to a procedure, practice, condition or the like, which if not correctly performed or adhered to, could result in injury or death to personnel.***

CAUTION *The CAUTION sign denotes a hazard. It calls attention to an operating procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product.*

NOTE The NOTE sign denotes important information. It calls attention to procedure, practice, condition or the like, which is essential to highlight.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table of Contents

HP 3325B Installation 4-1
General Installation Information 4-2
Initial Inspection 4-2
Power Requirements 4-2
Line Voltage Selection 4-3
Over-Voltage Protect Circuit Breaker 4-3
Power Cable and Grounding Requirements 4-4
Operating Environment 4-6
Temperature 4-6
Humidity 4-6
Altitude 4-6
Instrument Cooling 4-6
Installation 4-6
HP-IB System Interface Connections 4-8
Storage And Shipment 4-10
Operational Verification 4-11
Required Test Equipment 4-11
Self Test 4-12
Sine Wave Verification 4-12
Square Wave Verification 4-13
Triangle and Ramp Verification 4-14
Amplitude Flatness Check 4-15
Sync Output Check 4-15
Frequency Accuracy 4-16
Output Level and Attenuator Check 4-16
Harmonic Distortion 4-17
Close-In Spurious Signal 4-19
Performance Tests 4-20
Required Test Equipment 4-20
Harmonic Distortion 4-23
Spurious Signal 4-25
Integrated Phase Noise 4-27
Amplitude Modulation Envelope Distortion 4-28
Square Wave Rise Time and Aberrations 4-29
Ramp Retrace Time 4-30
Sync Output 4-30
Square Wave Symmetry 4-31
Frequency Accuracy 4-32
Phase Increment Accuracy 4-33
Phase Modulation Linearity 4-34
Amplitude Accuracy 4-38
DC Offset Accuracy (DC Only) 4-45
DC Offset Accuracy with AC Functions . . 4-46
Triangle Linearity 4-47
X Drive Linearity 4-50
Ramp Period Variation 4-54
Operational Verification Record
Performance Test Record
Specifications (Appendix A)
Index

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter4

HP 3325B Installation

This section contains instructions for installing and interfacing the HP 3325B Synthesizer/Function Generator as well as tests to verify performance. Included are initial inspection procedures, power and grounding requirements, operating environment, available accessories and options, installation instructions, interfacing procedures, and instructions for repacking and shipping.

There are two sets of tests: the first, operational verification, is a subset of the second, performance tests, an exhaustive test of the HP 3325B specifications. The operational verification is typically used as an incoming inspection tool upon initial receipt. The performance tests are used just before shipping from the factory, after any service work, and when a full calibration is performed.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

General Installation Information

Initial Inspection

The HP 3325B was carefully inspected both mechanically and electrically before shipment. It should be free of mars or scratches and in perfect electrical order upon receipt. To assure that this is the case, perform the following steps:

- Inspect the HP 3325B for physical damage incurred in transit. If the HP 3325B was damaged in transit, file a claim with the carrier.

Warning ***The integrity of the protective earth ground may be interrupted if the HP 3325B is mechanically damaged. Under no circumstances should the HP 3325B be connected to power if it is damaged.***

- Check for supplied accessories (listed in Chapter 3 of the Operating Manual).

Inspection will be completed after testing the electrical performance using the Operational Verification tests which appear later in this document. Also included in this document is the Performance Test. This is a very detailed test procedure designed to verify that the HP 3325B meets all the performance specifications.

Power Requirements

Caution *Before applying ac line power to the HP 3325B, ensure the voltage selector on the HP 3325B rear panel is set for the proper line voltage and the correct line fuse is installed in the fuse holder. Procedures for changing the line voltage selector and fuse are contained in the following section for "Line Voltage Selection."*

The HP 3325B can operate from any single phase ac power source supplying 100V, 120V, 220V or 240V in the frequency range from 47 to 66 Hz (see table 4-1). With all options installed, power consumption is less than 100 VA.

Table 4-1. Line Voltage Ranges

Selector Voltage	AC Voltage Range
100	90-108V
120	108-126V
220	198-231V
240	216-252V

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Line Voltage Selection

The line voltage selector is set at the factory to correspond to the most commonly used line voltage of the country of destination. The line voltage selected for the HP 3325B is indicated on the line voltage selector (refer to figure 4-1). Refer to table 4-1 for the line voltage ranges and table 4-2 to set the line voltage and select the appropriate fuse. To change the line voltage and fuse:

1. Remove the power cord.
2. Pry open the power selector cover on the rear panel with a small screwdriver (see figure 4-1).
3. To check or replace the fuse, pull the white fuse holder out of the power selector and remove the fuse from the fuse holder.
4. To reinstall the fuse, insert a fuse with the proper rating into the fuse holder. The white arrow on the fuse holder handle should point toward the top of the instrument. Push the fuse holder into the power selector.
5. To change the line voltage, remove the cylindrical line voltage selector.

Caution *Remove line voltage selector to change voltage. Rotating the selector without removing the cylinder could damage the module.*

---

6. Reinstall the cylindrical line voltage selector and ensure the required voltage label is facing out of the power selector. The cylinder is keyed so that it can not be installed backwards.
7. Close the power selector by pushing the side catches in (toward the center of the cover) and then pressing down firmly on the cover.
8. Check that the correct line voltage appears through the window in the power selector cover.

Table 4-2. Line Voltage and Fuse Selection

Line Setting	Fuse Type	HP Part Number
100V/120V	1A 250V Quick-Acting (F)	2110-0732
220V/240V	500 mA 250V Quick-Acting (F)	2110-0733

Over-Voltage Protect Circuit Breaker

In addition to the current protection provided by the line fuse, the HP 3325B is protected by an over-voltage circuit breaker. This device disconnects the power supply from the main power connector when the line voltage exceeds the upper limit. The reset switch, located on the rear panel (figure 4-1), pops out when this occurs. If this occurs:

1. Turn the power switch to STANDBY (⏻) and disconnect the power cord.
2. Check the setting of the line-voltage selector, as described earlier in this chapter, to be sure that it matches the power connected to the HP 3325B.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

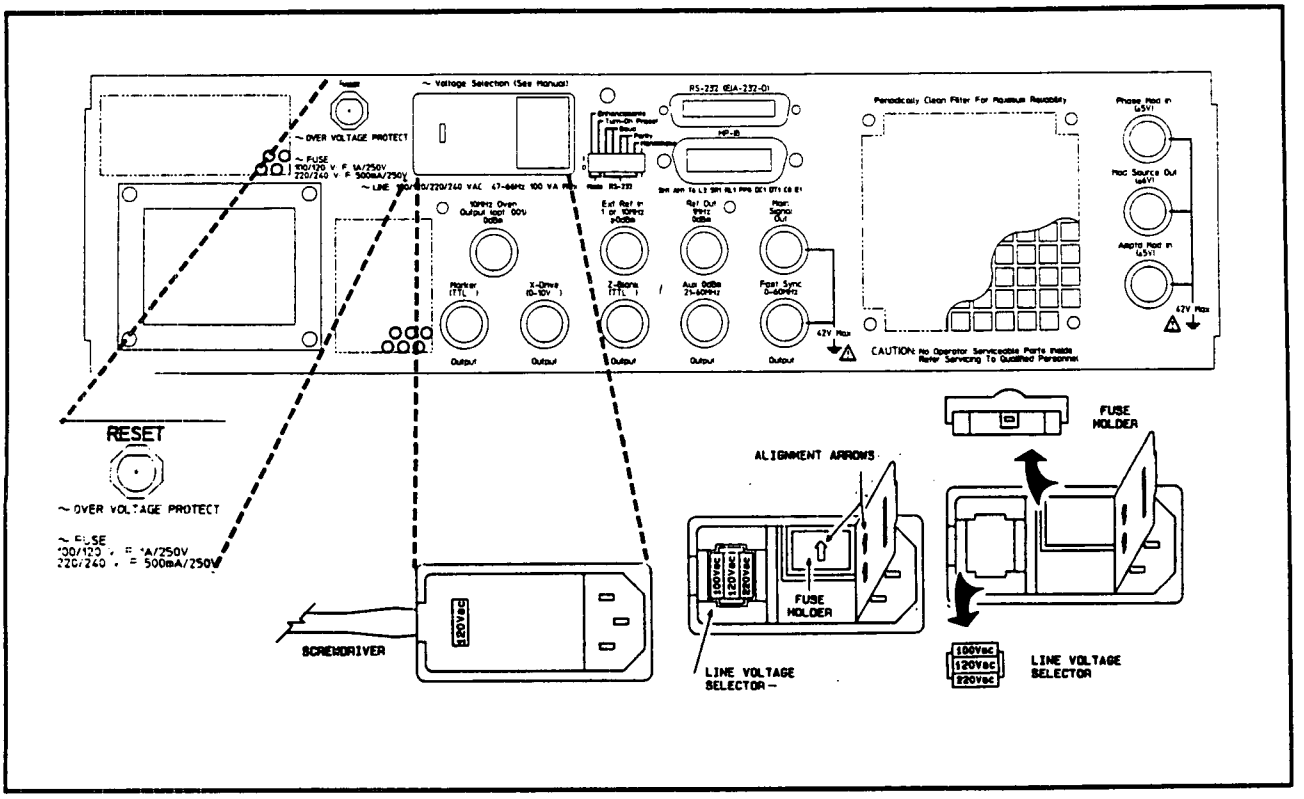


Figure 4-1. Line Voltage Selection, Fuse Replacement, and Circuit Breaker

3. Reset the circuit breaker by pushing the reset switch on the rear panel.
4. Reconnect the power cord and turn the power switch on.

If the circuit breaker pops out when power is restored and the line voltage level is within the limits described in table 4-1, send the HP 3325B to a qualified service facility for repair.


Warning ***Line voltages should be measured by a qualified service person who is aware of the hazards involved.***

If the circuit breaker does not open and the HP 3325B does not operate, remove power and check line fuse.

Power Cable and Grounding Requirements

The HP 3325B is equipped with a three-conductor power cord which, when plugged into an appropriate receptacle, grounds the HP 3325B cabinet. The type of power cable plug shipped with each instrument depends on the country of destination. Refer to figure 4-2 for the part number of the power cable and plug configurations available.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

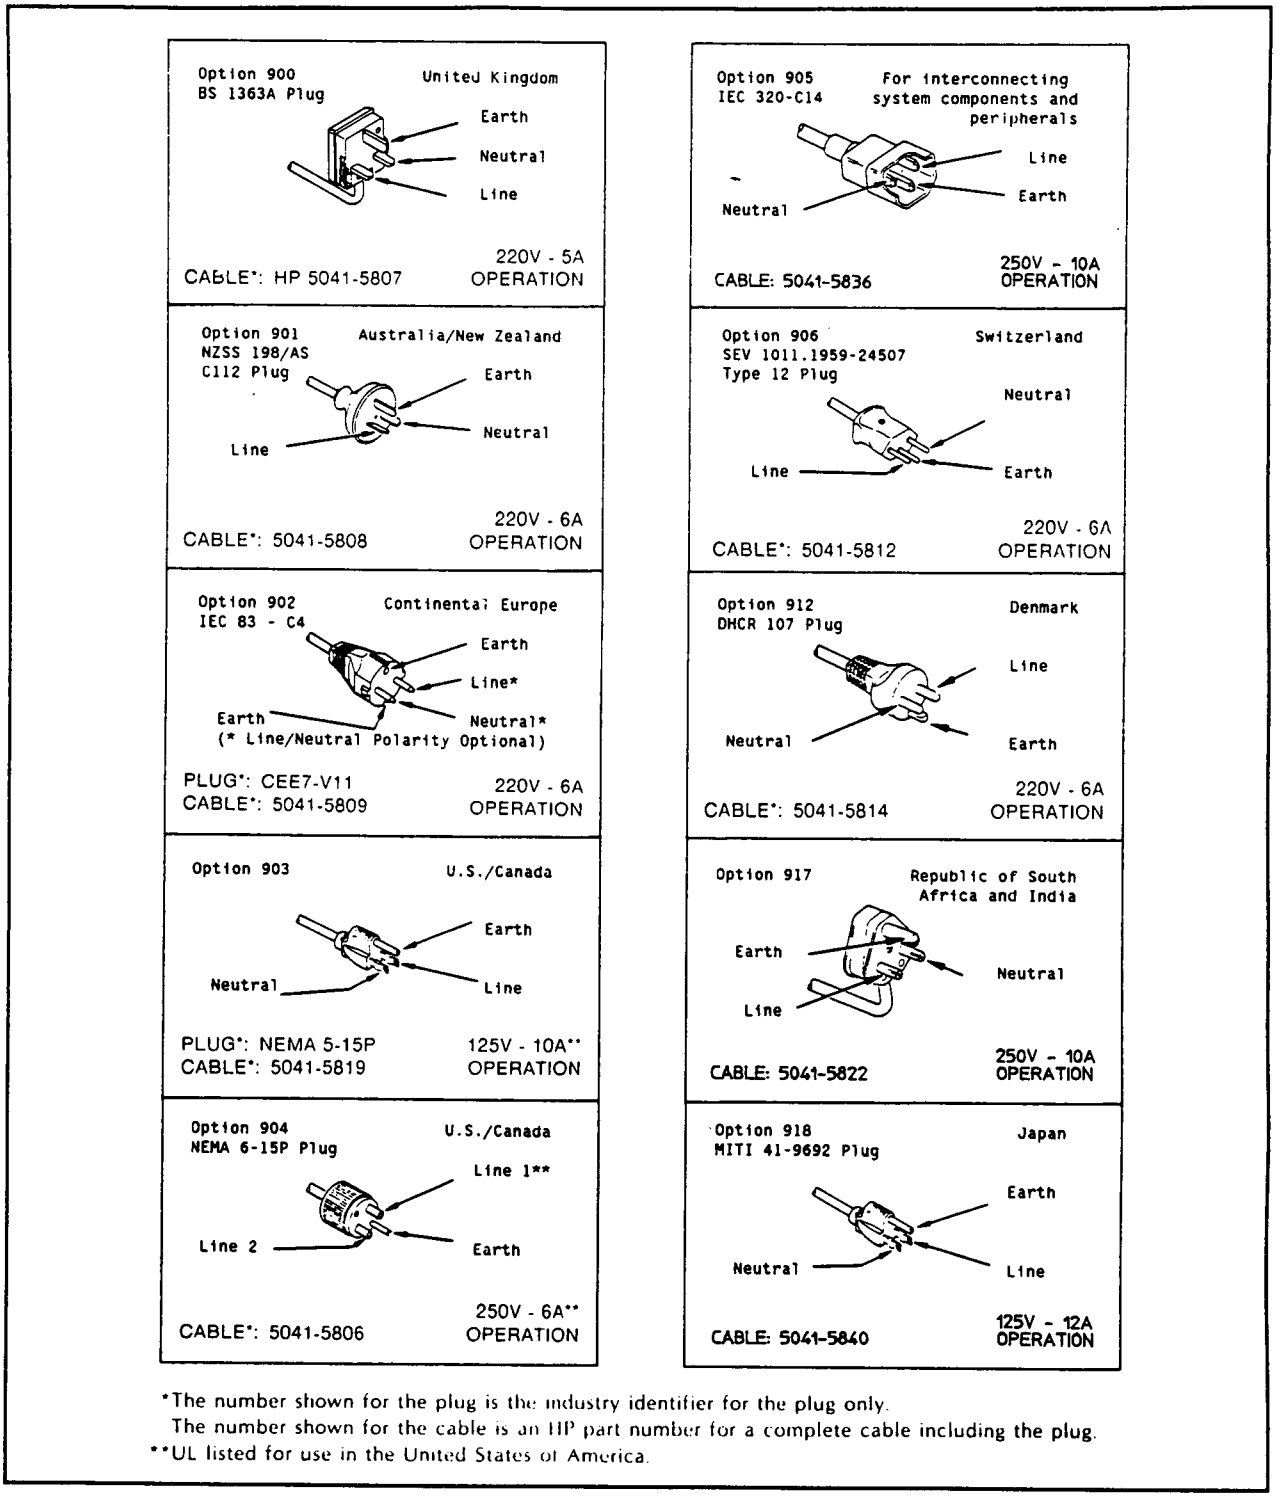

*The number shown for the plug is the industry identifier for the plug only.
The number shown for the cable is an HP part number for a complete cable including the plug.
**UL listed for use in the United States of America.

Figure 4-2. Power Cables

WARNING ***The power cable plug must be inserted into a socket outlet provided with a protective earth terminal. Defeating the protection of the grounded instrument cabinet can subject the operator to lethal voltages.***

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Operating Environment

The following summarizes the HP 3325B operating environment ranges. In order for the HP 3325B to meet specifications, the operating environment must be within these limits.

Warning ***The HP 3325B is not designed for outdoor use. To prevent potential fire or shock hazard, do not expose the HP 3325B to rain or other excessive moisture.***

Temperature

The HP 3325B may be operated in temperatures from 0°C to 55°C.

Humidity

The HP 3325B may be operated in environments with humidity up to 95% (0°C to +40°C). However, the HP 3325B should be protected from temperatures or temperature changes which cause condensation within the instrument.

Altitude

The HP 3325B may be operated at altitudes up to 4572 meters (15,000 feet).

Instrument Cooling

The HP 3325B is equipped with a cooling fan mounted on the rear panel. The HP 3325B should be mounted so that air can freely circulate through it. When operating the HP 3325B, choose a location that provides at least 75 mm (3 inches) of clearance at the rear, and at least 25 mm (1 inch) of clearance at each side. Failure to provide adequate air clearance will result in excessive internal temperature, reducing instrument reliability. The filter for the cooling fan can be cleaned without removing it. The filter (HP part number 3150-0387) should be cleaned with a vacuum cleaner every thirty days.

Installation

The HP 3325B is shipped with plastic feet in place, ready for use as a portable bench instrument. The plastic feet are shaped to make full width modular instruments self-align when they are stacked. The clearances provided by the plastic feet in bench stacking and the filler strip in rack mounting allow air passage across the top and bottom cabinet surfaces.

A front handle kit can be installed for ease of handling the HP 3325B on the bench. The part number for the front handle kit is listed in table 3-3 of the *HP 3325B Operating Manual*.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

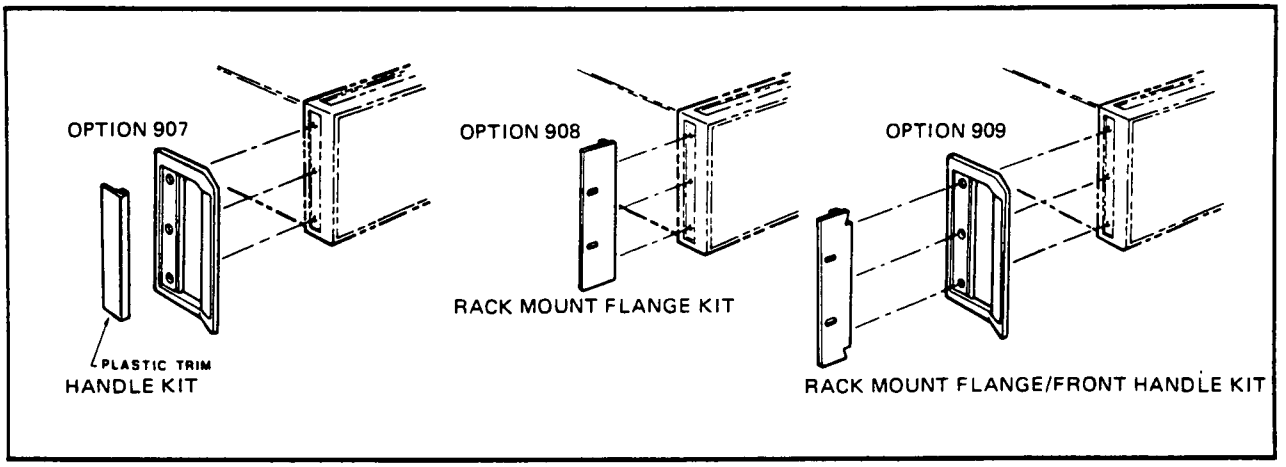


Figure 4-3. Rack Mount and Handle Kits

Option 908 (rack mount flange kit) and 909 (rack mount flange kit with handles) enable the HP 3325B to be mounted in an equipment cabinet. The rack mount for the HP 3325B is EIA standard width of 482.6 mm (19 inches). To install the HP 3325B in an equipment cabinet:

- If installed, remove the plastic trim (see figure 4-3) and front handles from the HP 3325B.
- Remove the plastic feet from the bottom of the HP 3325B.
- Install the rack flange kit with or without handles according to instructions included with the kit. (Kit part numbers are listed in figure 3-3 of the HP 3325B Operation Manual.)

Note The rack mount flange kit of Option 908 will not provide the space requirement for rack mounting when used with the front handle kit of Option 907. If front handles are not available, use the combination kit of Option 909 to rack mount with handles. If Option 907 front handles are available, use Rack Mount Flange Kit, HP part number 5061-2072 to add rack mounting.

- Install an instrument support rail on each side of the instrument cabinet. (The instrument support rails, used to support the weight of the instrument, are included with HP instrument cabinets.)
- Lift the HP 3325B to its position in the cabinet on top of the instrument support rails.
- Using the appropriate screws, fasten the HP 3325B rack mount flanges to the front of the instrument cabinet.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

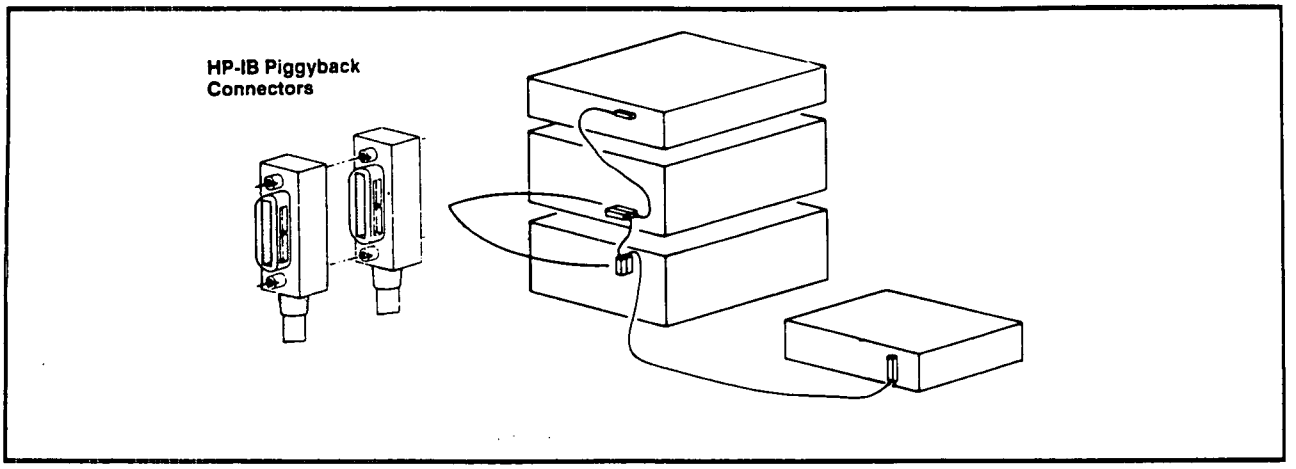



Figure 4-4. Typical HP-IB System Interconnection

HP-IB System Interface Connections

The HP 3325B instrument is compatible with the Hewlett-Packard Interface Bus (HP-IB). The HP-IB is Hewlett-Packard's implementation of IEEE Standard 4881978 and ANSI Standard MC 1.1. The HP 3325B is connected to the HP-IB by connecting an HP-IB interface cable to the connector located on the rear panel. Figure 4-4 illustrates a typical HP-IB system interconnection.


With the HP-IB system, up to 15 HP-IB compatible instruments can be interconnected. The HP 10833 HP-IB cables have identical piggy-back connectors on each end so that several cables can be connected to a single source without special adapters or switch boxes. System components and devices can be connected in virtually any configuration. There must, of course, be a path from the controller to every device operating on the bus. As a practical matter, avoid stacking more than three or four cables on any one connector. If the stack gets too long, any force on the stack can damage the connector mounting. Be sure that each connector is firmly screwed in place to keep it from working loose during use. The HP 3325B uses all the available HP-IB lines, therefore, any damaged connector pins may adversely affect HP-IB operation. Refer to figure 4-5 for a description of the HP-IB connector.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

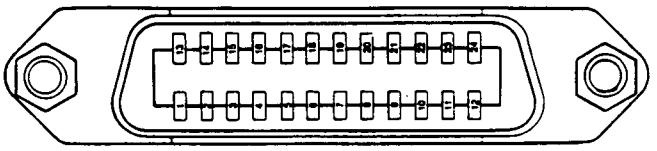

CAUTION

The HP 3325B contains metric threaded HP-IB cable mounting studs as opposed to English threads. Metric threaded HP 10833A, B, C or D HP-IB cable lockscrews must be used to secure the cable to the instrument. Identification of the two types of mounting studs and lockscrews is made by their color. English threaded fasteners are colored silver and metric threaded fasteners are colored black. DO NOT mate silver and black fasteners to each other or the threads of either or both will be destroyed. Metric threaded HP-IB cable hardware illustrations and part numbers follow.

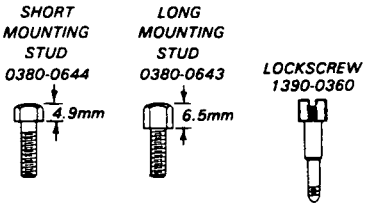

HP-IB Interconnect Cables	
Part Number	Length
10833A	1 m (3.3 ft)
10833B	2 m (6.6 ft)
10833C	4 m 13.2 ft)
10833D	0.5 m (1.6 ft)

PIN	LINE
1	D101
2	D102
3	D103
4	D104
13	D105
14	D106
15	D107
16	D108
5	DO1
17	REN
6	DAV
7	NRFD
8	NDAC
9	IFC
10	SRQ
11	ATN
12	SHIELD - CHASSIS GROUND
18	P/O TIWSTED PAIR WITH PIN 6
19	P/O TWISTED PAIR WITH PIN 7
20	P/O TWISTED PAIR WITH PIN 8
21	P/O TWISTED PAIR WITH PIN 9
22	P/O TWISTED PAIR WITH PIN 10
23	P/O TWISTED PAIR WITH PIN 11
24	ISOLATED DIGITAL GROUND

Figure 4-5. HP-IB Connector Information

To achieve design performance with the HP-IB, proper voltage levels and timing relationships must be maintained. If the system cable is too long, the lines cannot be driven properly and the system will fail to perform (see figure 4-5 for HP-IB cable lengths). Therefore, when interconnecting an HP-IB system, it is important to observe the following rule:

> Total cable length for the system must be less than or equal to 20 meters (65 feet) or 2 meters (6 feet) times the total number of devices connected to the bus, whichever is less.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Storage And Shipment

The HP 3325B should be stored in a clean, dry environment. The following are environmental limitations that apply to both storage and shipment:

Temperature	- 40°C to +75°C
Humidity	Up to 95%
Altitude	Up to 15,300 meters (50,000 feet)

The HP 3325B should also be protected from temperatures or temperature changes which cause condensation within the instrument.

Containers and materials identical to those used in factory packaging are available through Hewlett-Packard offices. If the instrument is being returned to Hewlett-Packard for service, attach a tag indicating the type of service required, return address, model number, and full serial number. Also, mark the container FRAGILE to ensure careful handling. In any correspondence, refer to the instrument by model number and full serial number.

The following general instructions should be used for repacking with commercially available materials:

- Wrap the instrument in heavy paper or anti-static plastic. If shipping to a Hewlett-Packard office or service center, attach a tag to the instrument indicating type of service required, return address, model number, and full serial number.
- Use a strong shipping container. A double-wall carton made of 350-pound test material is adequate.
- Use a layer of shock absorbing material 70 to 100 mm (3 to 4 inch) thick around all sides of the HP 3325B to provide firm cushioning and prevent movement inside of the container. Protect the control panel with cardboard.

Caution *Styrene pellets in any shape should not be used as packing material. The pellets do not adequately cushion the instrument and do not prevent the instrument from shifting in the carton. The pellets also create static electricity which can damage electronic components.*

- Seal shipping container securely.
- Mark shipping container FRAGILE to ensure careful handling.
- In any correspondence, refer to the instrument by model number and full serial number.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Operational Verification

The following procedures are recommended for incoming inspection and for testing the instrument after repair. Additional tests to be performed following repair of certain circuits are indicated in Section VIII of the *HP 3325B Service Manual*. An Operational Verification Record is located at the end of this section. For ease of recording the test data at various times, copies of the blank Operational Verification Record may be made without written permission from Hewlett-Packard.

Operational Verification includes the following procedures:

Self Test
Sine Wave Verification
Square Wave Verification
Triangle and Ramp Verification
Amplitude Flatness Check
Sync Output Check
Frequency Accuracy
Output Level and Attenuator Check
Harmonic Distortion
Close-in Spurious Signal

Required Test Equipment

The test equipment required for Operational Verification is listed in table 4-3. Any equipment that satisfies the critical specifications given in the table may be substituted for the recommended model.

Table 4-3. Test Equipment Required for Operational Verification

Instrument	Critical Specifications	Recommended Model
Analog Oscilloscope	Vertical: Bandwidth: dc to 100 MHz Deflection: 0.01 to 5 V/div Horizontal: Sweep: 0.05 μs to 0.5 s/div × 10 Magnification Delayed Sweep	HP 1740A/TEK 2245
Electronic Counter	Frequency measurement to 20 MHz Accuracy: ± 2 counts Resolution: 8 digits	HP 5328A with Opt. 010,040, and 041/5328B with Opt. 010
DC Digital Voltmeter	Ranges: 0.1 to 100V Resolution: 5 1/2 digits Accuracy: ± 0.1%	HP 3455A/3478A

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 4-3. Test Equipment Required for Operational Verification (Cont'd)

Instrument	Critical Specifications	Recommended model
50Ω Feedthru Termination	Accuracy: ± 0.2% Power Rating: 1W	HP 11048C
High Frequency Spectrum Analyzer	Frequency Range: 1 to 80 MHz Amplitude Accuracy: ± 0.5 dB Noise: >70 dB below reference	HP 141T/8552B/8553B/ 8566A/8568A
Low Frequency Spectrum Analyzer	Frequency Range: 100 Hz to 50 kHz Amplitude Range: 2 mV to 20V Noise: >80 dB below input reference or −140 dBv	HP 3580A/3585A
Resistor	470Ω 2W 5%	HP 0698-3634
Resistor	56.2Ω 1/8W 1.0%	HP 0757-0395
Adapter	BNC female-to-dual banana plug	HP 1251-2277

Self Test

This test uses the control, ROM, and control clock circuits to verify operation of these and other circuits. The following front panel indications result from this test.

LED check: Turns on all LEDs for about two seconds.

The following messages are displayed for about one second:

PASS 0 or FAIL 02*n* – tests Amptd Cal of dc offset.
PASS 1 or FAIL 02*n* – tests Amptd Cal of sine wave.
PASS 2 or FAIL 02*n* – tests Amptd Cal of square wave.
PASS 3 or FAIL 02*n* – tests Amptd Cal of triangle wave.
(*n* is a number from 0 to 9)

Press the blue [Shift] key, then press the [Amptd Cal] key. All LEDs should light, and the display should not indicate any failures.

Sine Wave Verification

This procedure visually checks the sine wave output for the correct frequency and any visible irregularities.

Equipment Required: Analog Oscilloscope

a. Connect the HP 3325B signal output to the oscilloscope vertical input. Set the input switch to the 50Ω position. If your oscilloscope does not have a 50Ω input, use a 50Ω feedthru termination at the input.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

b. Set the HP 3325B as follows:

High Voltage Output (option 002)	Off
Function	Sine
Frequency	20 MHz
Amplitude	10 V_{pp}

c. Set the oscilloscope vertical control to 2 V/div, horizontal to 0.05 μs/div.

d. The oscilloscope should display one cycle per division, approximately five divisions peak-to-peak.

e. Change the HP 3325B frequency to 1 MHz.

f. Change oscilloscope horizontal control to 0.1 μs/div.

g. The oscilloscope should display one sine wave having no visible irregularities.

High Voltage Output (option 002)

h. Set the oscilloscope vertical control to 5 V/div.

i. Set the oscilloscope input switch to 1 MΩ dc coupled position (or disconnect external 50Ω feedthru termination).

j. Select the high voltage output on the HP 3325B. A LED near the key indicates that the high voltage output is on.

k. Change the amplitude to 40 V_{pp}. The oscilloscope should display one sine wave approximately eight divisions peak-to-peak having no visible irregularities.

l. Turn off the high voltage output.

Square Wave Verification

This procedure checks the square wave output for frequency, rise time, and aberrations.

Equipment Required: Analog Oscilloscope

a. Connect the HP 3325B signal output to the oscilloscope vertical input. Set the input switch to the 50Ω position. If your oscilloscope does not have a 50Ω input, use a 50Ω feedthru termination at the input.

b. Set the HP 3325B as follows:

High Voltage Output (option 002)	Off
Function	Square
Frequency	1 MHz
Amplitude	10 V_{pp}

c. Set the oscilloscope vertical control to 2 V/div, horizontal to 0.2 μs/div. The oscilloscope should display two square waves, approximately five divisions peak-to-peak.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

d. Switch the oscilloscope vertical control to 1 V/div, so that the aberrations (overshoot and ringing) can be measured. Aberration excursion should be less than 500 mV (1/2 div).

e. Repeat step d at 2 kHz and 0.1 ms/div.

f. Adjust the oscilloscope vertical and horizontal controls so that the square wave rise time between the 10% and 90% points can be measured. Rise time should be less than 20 ns.

Triangle and Ramp Verification

This procedure checks the triangle and ramp output signals for frequency, shape, and ramp retrace time.

Equipment Required: Analog Oscilloscope

a. Connect the HP 3325B signal output to the oscilloscope vertical input. Set the input switch to the 50Ω position. If your oscilloscope does not have a 50Ω input, use a 50Ω feedthru termination at the input.

b. Set the HP 3325B as follows:

High Voltage Output (option 002)	Off
Function	Triangle
Frequency	10 kHz
Amplitude	10 V_{pp}

c. Set the oscilloscope vertical control to 2 V/div, horizontal to 0.1 ms/div. The oscilloscope should display one triangle wave per division, approximately five divisions peak-to-peak.

d. Change the HP 3325B function to positive slope ramp. The display should be one ramp per division, approximately five divisions peak-to-peak.

e. Change the function to negative slope ramp. The display should be one ramp per division, approximately five divisions peak-to-peak.

f. Change the oscilloscope horizontal and vertical controls so that the ramp retrace time from the 90% to 10% points can be measured. Retrace time should be less than 3 μs.

g. Change the HP 3325B function to positive slope ramp and repeat step f.

h. Change the function to triangle.

i. Set oscilloscope vertical control to 2 V/div, horizontal to 10 μs/div. The oscilloscope should display one triangle wave with no visible irregularities in either slope.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Amplitude Flatness Check

This procedure provides a visual check of the sine wave amplitude flatness.

Equipment Required: Analog Oscilloscope

a. Connect the HP 3325B signal output to the oscilloscope vertical input. Set the input switch to the 50Ω position. If your oscilloscope does not have a 50Ω input, use a 50Ω feedthru termination at the input.

b. Set the HP 3325B as follows:

High Voltage Output (option 002)	Off
Function	Sine
Frequency	2 kHz
Amplitude	10 V_{pp}
Sweep Start Freq	0 Hz
Sweep Stop Freq	20 MHz
Sweep Marker Freq	5 MHz
Sweep Time	0.01 sec

c. Connect the HP 3325B X-Drive output to the oscilloscope channel B input. Connect the signal output to the oscilloscope channel A input.

*d. Set the oscilloscope as follows:

Display	A vs B
Channel A Sensitivity (uncal – adjust for full vertical deflection)	1 V/div
Channel B Sensitivity (uncal – adjust for full horizontal sweep)	0.5 V/div

**Settings may vary from one oscilloscope to another. Note that whichever oscilloscope is used, it should be operated in a X-Y mode with the HP 3325B X-Drive output driving the horizontal (X) channel and the signal output driving the vertical (Y) channel.*

e. Press the HP 3325B [Start Cont] key.

f. The oscilloscope display should show a sweep that is essentially flat, dropping no more than 3.5%. Any dc variations should be ignored, taking the peak-to-peak reading for flatness comparison.

Sync Output Check

This test verifies the sync output signal levels.

Equipment Required: Analog Oscilloscope

a. Connect the HP 3325B sync output to the oscilloscope vertical input. Set the input switch to the 50Ω position. If your oscilloscope does not have a 50Ω input, use a 50Ω feedthru termination at the input.

b. Set the HP 3325B function to sine, frequency to 20 MHz.

c. Adjust the oscilloscope controls to measure the high and low voltage levels of the sync square wave. The high level should be greater than +1.2V and the low level should be less than +0.2V.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Frequency Accuracy

This test compares the accuracy of the HP 3325B output signal to the following specification:

$\pm 5 \times 10^{-6}$ of selected frequency (20°C to 30°C).

Equipment Required: Electronic Counter (calibrated within three months or with an accurate 10 MHz external reference input)

a. Connect the HP 3325B signal output to the electronic counter channel A input with a 50Ω feedthru termination. Allow HP 3325B to warm up for 20 minutes and the counter to warm up for its specified period.

b. Set the HP 3325B output as follows:

Function	Sine
Frequency	20 MHz
Amplitude	0.99 V_{pp}
DC Offset	0V

c. Set the counter to count the frequency of the A input with 0.1 Hz resolution, and adjust for stable triggering. Electronic counter should indicate 20 000 000.0 Hz ±100 Hz.

d. Change the HP 3325B function to square wave. Frequency automatically changes to 10 MHz. Electronic counter should indicate 10 000 000.0 Hz ±50 Hz.

e. Change the function to triangle. Frequency automatically changes to 10 kHz. Move the counter input to the sync output of the HP 3325B. Set the counter to average 1000 periods. Electronic counter should indicate 100 000.00 ns ±0.5 ns.

f. Change the function to positive slope ramp. Electronic counter should indicate 100 000.00 ns ±0.5 ns.

Output Level and Attenuator Check

This procedure checks the output level and the attenuator by using the "dc only" function.

Equipment Required: DC Digital Voltmeter
50Ω Feedthru Termination

a. Connect the HP 3325B signal output directly to a 50Ω feedthru termination and then with a cable to the voltmeter input.

b. If the instrument has high voltage output (option 002), make sure the high voltage output is off (high voltage indicator light in the lower right corner of the front panel is off).

c. Press whichever function key is presently active, indicated by a lighted indicator beside the key. This removes the ac output. The indicator beside the [DC Offset] key should light.

d. Set the HP 3325B dc offset to −5V, then press the [Amptd Cal] key.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

e. The voltmeter reading should be −4.980 to −5.020 V.

f. Change the HP 3325B dc offset to +5V. Voltmeter reading should be +4.980 to +5.020 V.

g. Change the HP 3325B dc offset to the following voltages. The voltmeter reading should be within the tolerances shown.

DC Offset	Tolerances
±1.499V	±1.49300 to 1.50499 V
±499.9 mV	±0.49790 to 0.50190 V
±149.9 mV	±0.14930 t o 0.15050 V
±49.99 mV	±0.04979 to 0.05019 V
±14.99 mV	±0.01493 to 0.01505 V
±4.999 mV	±0.004979 to 0.005019 V
±1.499 mV	±0.001479 to 0.001519 V

High Voltage Output (option 002) DC Offset

h. Remove the 50Ω feedthru termination and connect the HP 3325B output directly to the voltmeter input.

i. Select high voltage output on the HP 3325B. A LED near the key indicates that high voltage output is on.

j. Set the HP 3325B dc offset to 20V. Voltmeter reading should be +19.775 to +20.225 V.

k. Set the HP 3325B dc offset to −20V. Voltmeter reading should be −19.775 to −20.225 V.

Harmonic Distortion

This procedure tests the harmonic distortion of the HP 3325B sine wave output to the following specifications:

Harmonic Distortion (relative to fundamental)

Fundamental Frequency	No Harmonic Greater Than
0.1 Hz to 50 kHz	−65 dB
50 to 200 kHz	−60 dB
200 kHz to 2 MHz	−40 dB
2 to 15 MHz	−30 dB
15 to 20 MHz	−25 dB

Equipment Required:
- High Frequency Spectrum Analyzer
- Low Frequency Spectrum Analyzer
- 50Ω Feedthru Termination
- Resistor 470Ω 2W 5%
- Resistor 56.2Ω 1/8W 1%

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

a. Set the HP 3325B output as follows:

High Voltage Output (option 002)	Off
Function	Sine
Frequency	20 MHz
Amplitude	999 mV_{pp}

b. Connect the HP 3325B signal output to the high frequency spectrum analyzer 50Ω input.

c. Set the spectrum analyzer controls to display the fundamental and at least four harmonics. Verify that all harmonics are 25 dB below the fundamental.

d. Set the HP 3325B to 15 MHz and verify that all harmonics are at least 30 dB below the fundamental.

e. Disconnect the HP 3325B from the high frequency spectrum analyzer and connect it to the low frequency spectrum analyzer 50Ω input. Set the HP 3325B to the following frequencies and verify the specified levels, relative to the fundamental.

2 MHz	−40 dB
200 kHz	−60 dB

f. Set the HP 3325B frequency to 50 kHz and the amplitude to 9.99 mV_{pp}.

g. Set the spectrum analyzer controls to display the fundamental and at least three harmonics. (It may be necessary to decrease the video bandwidth to separate the harmonics from the noise floor.) Verify that all harmonics are at least 65 dB below the fundamental.

h. Set the HP 3325B to the following frequencies and verify that all harmonics are 65 dB below the fundamental.

10 kHz
1 kHz
100 Hz

High Voltage Output (option 002)

i. Connect the HP 3325B signal output to the low frequency spectrum analyzer high impedance input (see figure 4-6).

j. Select the high voltage output on the HP 3325B. Set the amplitude to 40 V_{pp} and the frequency to 100 Hz.

k. Set the spectrum analyzer controls to display the fundamental and at least three harmonics. Verify that all harmonics are 65 dB below the fundamental.

l. Set the HP 3325B to the following frequencies and verify that their harmonics are below the specified levels, relative to the fundamental.

10 kHz	−65 dB
200 kHz	−60 dB
1 MHz	−40 dB

m. Turn off the high voltage output.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

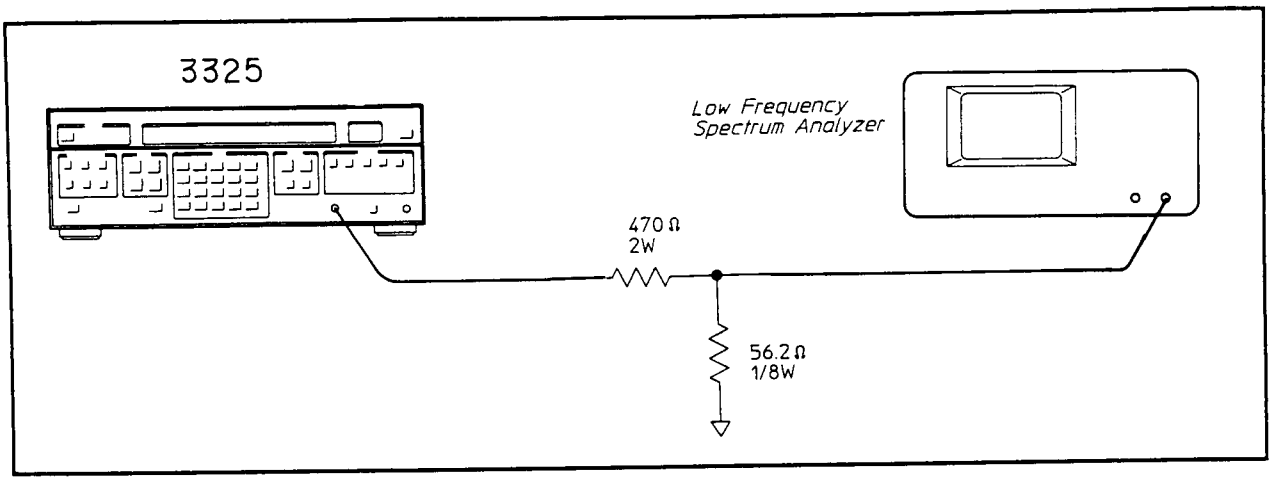


Figure 4-6. Harmonic Distortion Verification (High Voltage Output).

Close-In Spurious Signal

This procedure tests the sine wave output for spurious signals which may be generated by the HP 3325B frequency synthesis circuits. The spurious signals must be more than 70 dB lower than the fundamental signal.

Equipment Required: Spectrum Analyzer

a. Set the HP 3325B as follows:

High Voltage Output (option 002)	Off
Function	Sine
Frequency	20.001 MHz
Amplitude	−2.99 dBm
DC Offset	0V

b. Connect the HP 3325B signal output to the spectrum analyzer 50Ω input.

c. Set the spectrum analyzer controls for a center frequency of 20.001 MHz, a resolution bandwidth of 30 Hz, a frequency span of 100 Hz/div, and the fundamental referenced to the top of the display graticule.

d. Set the spectrum analyzer center frequency to 20.002, 20.003, and 20.004 MHz, verifying in each case that all spurious signals are more than 70 dB below the fundamental.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Performance Tests

The following procedures compare the instrument operation to its specifications listed in Appendix A. Performance Test Records are located at the end of this section. These test records lists all of the tested specifications and acceptable limits. For ease of recording data at various times, copies of the blank Performance Test Records may be made without written permission from Hewlett-Packard.

The Performance Tests include the following:

- Harmonic Distortion
- Spurious Signal
- Integrated Phase Noise
- Amplitude Modulation Envelope Distortion
- Square Wave Rise Time and Aberrations
- Ramp Retrace Time
- Sync Output
- Square Wave Symmetry
- Frequency Accuracy
- Phase Increment Accuracy
- Phase Modulation Linearity
- Amplitude Accuracy
- DC Offset Accuracy (DC Only)
- DC Offset Accuracy with AC Functions
- Triangle Linearity
- X Drive Linearity
- Ramp Period Variation

Required Test Equipment

The test equipment required for the Performance Tests is listed in table 4-4. Any equipment that satisfies the critical specifications given in the table may be substituted for the recommended model.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 4-4. Test Equipment Required for Performance Tests.

Instrument	Critical Specifications	Recommended Model
Analog Oscilloscope	Vertical Bandwidth: dc to 100 MHz Deflection: 0.01 to 5 V/div Horizontal Sweep: 0.05 μs to 0.5 s/div ×10 Magnification Delayed Sweep	HP 1740A/TEK 2245
Sampling Oscilloscope	Vertical Deflection: 2 mV/div Horizontal Sweep: 10 ps to 50 μs/div Transient response Aberrations: < +0.5%, − 3% Vpp first 5 ns following step transition < ±1% Vpp after 5 ms	TEK 7603* with 7T11/ 7S11 and S-1
Electronic Counter	Frequency measurement Frequency Range: to 20 MHz Resolution: 8 digits Accuracy: ± 2 counts Time Interval Average A to B Resolution: 0.01 ns	HP 5328A with Opt. 010, 040, and 041/5328B with Opt. 010
AC/DC Digital Voltmeter	AC Function (True RMS) Ranges: 1 to 100 V Accuracy : ± 0.2% Resolution: 5 1/2 digits Crest Factor: 4:1 DC Functions Ranges: 0.1 to 100 V Accuracy: ± 0.05% Resolution: 5 1/2 digits	HP 3455A\3478A
50Ω Feedthru Termination	Accuracy: ± 0.2% Power Rating: 1W	HP 11048C
High Frequency Spectrum Analyzer	Frequency Range: 1 kHz to 80 MHz Amplitude Accuracy: ± 0.5 dB Noise: > 70 dB below reference	HP 141T/8552B/8553B/ 8566A/8568A
Low Frequency Spectrum Analyzer	Frequency Range: 20 Hz to 50 kHz Amplitude Accuracy: ± 0.5 dB Spurious Responses: 80 dB below reference	HP 3580A/3585A

(*) This equipment is only necessary to perform the Square Wave Rise Time and Aberrations test.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 4-4. Test Equipment Required for Performance Tests. (Cont'd)

Instrument	Critical Specifications	Recommended Model
Frequency Synthesizer	Frequency Range: 100 kHz to 21 MHz Amplitude Range: to +13.01 dBm Output Impedance: 50Ω Phase Noise (Integrated): 9.9 MHz: < – 63 dB 20 MHz: < – 70 dB Spurious: > 75 dB below fundamental	HP 3335A
Double Balanced Mixer	Impedance: 50Ω Frequency Range: 1 – 20 MHz	HP 10534A
1 MHz Low Pass Filter	Cut-off Frequency: 1 MHz Stopband Atten: 50 dB by 4 MHz Stopband Freq: 4 – 80 MHz	Model J903 TTE Inc. 2214 S. Benny Ave. Los Angeles, CA 90064
15 kHz Filter	Consisting of: Resistor: 10 kΩ 1% Capacitor: 1600 pF 5%	 HP 0757-0340 HP 0160-2223
AC Voltmeter	Ranges: 0.1 to 1 V Frequency Range: 20 Hz – 1 MHz Input Impedance: ≥1 MΩ Meter: Log scale Acc (100 Hz to 10 kHz): ±1%	HP 400FL/3400A
Sine Wave Signal Source	Frequency: 10 kHz Amplitude: 1 Vrms into 20 kΩ Distortion: –60 dB	HP 204C/3325/3336
DC Power Supply	Volts: 0 to ±5 V Amps: 10 mA Floating Output	HP 6214A/6214B
Thermal Converter	Input Impedance: 50Ω Input Voltage: 1 Vrms Frequency: 2 kHz to 20 MHz Frequency Response: ±0.05 dB 2 kHz to 20 MHz	HP 11050A/Ballantine Model 1395A-1 with cable 12577A Opt. 10 Ballantine Labs, Inc. P. O. Box 97 Boonton, NJ 07005
Resistive Divider	Consisting of: 2 Resistors: 61.11Ω 0.1% 1/4W 2 Resistors: 36.55Ω 0.1% 1/8W	 HP 0699-0090 HP 0698-7169
Resistive Divider	Consisting of: Capacitor: 300 pF 5% 3 Resistors: 1330Ω 0.1% 1/4W Resistor: 43Ω 0.1% 1/8W	 HP 0160-2207 HP 0698-7453 HP 0698-8264

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 4-4. Test Equipment Required for Performance Tests. (Cont'd)

Instrument	Critical Specifications	Recommended Model
High-Speed DC Digital Voltmeter	DC Voltage: 0 to ±10 V External Trigger: Low True TTL Edge Trigger Trigger Delay: Selectable 10 to 140 μs	HP 3437A
BNC-to-Triax Adapter	Female BNC to Male Triax	HP 1250-0595
Resistive Divider ÷ 2.5	Consisting of: Resistor: 30Ω 1% 1/4W Resistor: 20Ω 1% 1/4W	 HP 0698-7533 HP 0698-6296
Resistive Divider ÷ 2.6	Consisting of: Resistor: 100 kΩ 1% 1/8W Resistor: 162 kΩ 1% 1/8W	 HP 0757-0465 HP 0757-0470
Resistor	470Ω 2W 5%	HP 0698-3634
Resistor	56.2Ω 1/8W 1.0%	HP 0757-0395
Adapter	BNC female to dual banana plug BNC Tee	HP 1251-2277 HP 1250-0781
Step Attenuator	0 – 12 dB; 1 dB steps 0 – 40 dB	HP 355C HP 355D*

(*) This equipment is only necessary to perform the Square Wave Rise Time and Aberrations test.

Harmonic Distortion

This procedure tests the harmonic distortion of the HP 3325B sine wave output to the following specifications:

Harmonic Distortion (relative to fundamental)

Fundamental Frequency	No Harmonic Greater Than
0.1 Hz to 50 kHz	−65 dB
50 to 200 kHz	−60 dB
200 kHz to 2 MHz	−40 dB
2 to 15 MHz	−30 dB
15 to 20 MHz	−25 dB

Equipment Required:
- High Frequency Spectrum Analyzer
- Low Frequency Spectrum Analyzer
- 50Ω Feedthru Termination
- Resistor 470Ω 2W 5%
- Resistor 56.2Ω 1/8W 1%

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

a. Set the HP 3325B output as follows:

High Voltage Output (option 002)	Off
Function	Sine
Frequency	20 MHz
Amplitude	999 mV_{pp}

b. Connect the signal output to the high frequency spectrum analyzer 50Ω input.

c. Set the spectrum analyzer controls to display the fundamental and at least four harmonics. Verify that all harmonics are 25 dB below the fundamental.

d. Set the HP 3325B to 15 MHz and verify that all harmonics are at least 30 dB below the fundamental.

e. Disconnect the HP 3325B from the high frequency spectrum analyzer and connect it to the low frequency spectrum analyzer 50Ω input. Set the HP 3325B to the following frequencies and verify the specified levels, relative to the fundamental.

2 MHz	−40 dB
200 kHz	−60 dB

f. Set the HP 3325B frequency to 50 kHz and the amplitude to 9.99 mV_{pp}.

g. Set the spectrum analyzer controls to display the fundamental and at least three harmonics. (It may be necessary to decrease the video bandwidth to separate the harmonics from the noise floor.) Verify that all harmonics are at least 65 dB below the fundamental.

h. Set the HP 3325B to the following frequencies and verify that all harmonics are 65 dB below the fundamental.

10 kHz
1 kHz
100 Hz

High Voltage Output (option 002)

i. Connect the HP 3325B signal output to the low frequency spectrum analyzer high impedance input (see figure 4-6).

j. Select the high voltage output on the HP 3325B. Set the amplitude to 40 V_{pp} and the frequency to 100 Hz.

k. Set the spectrum analyzer controls to display the fundamental and at least three harmonics. Verify that all harmonics are 65 dB below the fundamental.

l. Set the HP 3325B to the following frequencies and verify that their harmonics are below the specified level, relative to the fundamental.

10 kHz	−65 dB
200 kHz	−60 dB
1 MHz	−40 dB

m. Turn off the high voltage output.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Spurious Signal

This procedure tests the HP 3325B sine wave output for spurious signals. Circuits within the HP 3325B may generate repetitive frequencies that are not harmonically related to the fundamental output frequency. All spurious signals must be more than 70 dB below the fundamental signal or less than −90 dBm, whichever is greater.

Equipment Required: Spectrum Analyzer

Mixer Spurious

a. Connect the HP 3325B signal output to the spectrum analyzer 50Ω (RF) input and the HP 3325B EXT REF input to the analyzer 10 MHz reference output (see figure 4-7).

b. Set the HP 3325B as follows:

Function	Sine
Amplitude	−20 dBm
Frequency	2.001 MHz

c. Set the analyzer controls as follows:

Center Frequency	2.001 MHz
Frequency Span	1 kHz
Video BW	100 Hz
Resolution BW	30 Hz

d. Adjust the spectrum analyzer to reference the fundamental to the top display graticule.

e. Without changing the reference level, change the spectrum analyzer center frequency to 27.999 MHz to display the 2:1 mixer spur. Verify that this spur is at least 70 dB below the fundamental.

f. Change the spectrum analyzer center frequency to 25.998 MHz to display the 3:2 mixer spur. Verify that this spur is at least 70 dB below the fundamental.

g. In a similar manner, change the HP 3325B frequency and the spectrum analyzer center frequency to the following frequencies. For each setting, verify that all spurious signals are 70 dB below the fundamental.

HP 3325B	Spectrum Analyzer Center Frequency	
	2:1 Spur	3:2 Spur
4.100 MHz	25.9 MHz	21.8 MHz
6.100 MHz	23.9 MHz	17.8 MHz
8.100 MHz	21.9 MHz	13.8 MHz
10.100 MHz	19.9 MHz	9.8 MHz
12.100 MHz	17.9 MHz	5.8 MHz
14.100 MHz	15.9 MHz	1.8 MHz
16.100 MHz	13.9 MHz	2.2 MHz
18.100 MHz	11.9 MHz	6.2 MHz
20.100 MHz	9.9 MHz	10.2 MHz

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

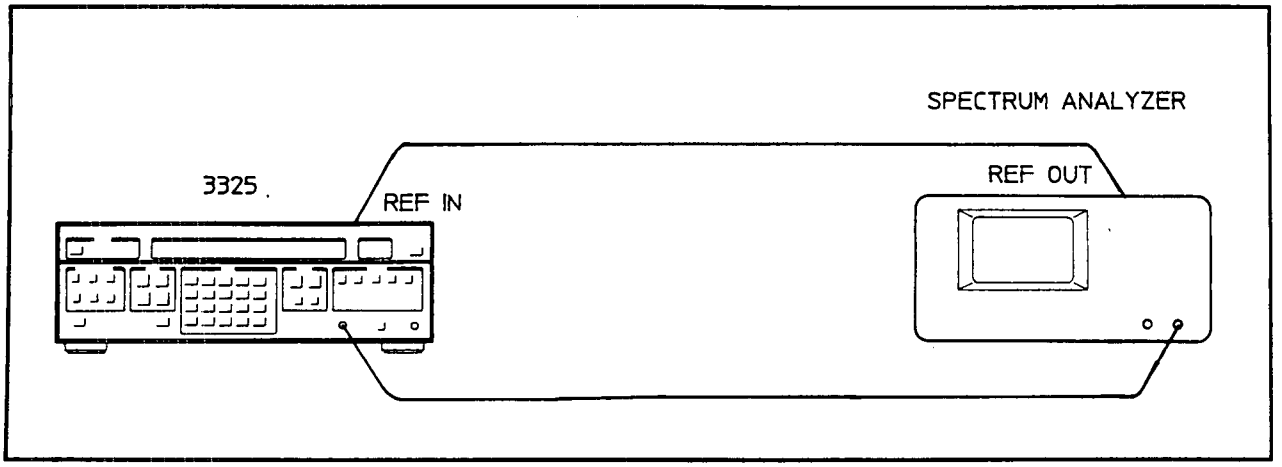


Figure 4-7. Mixer Spurious.

Close-in Spurious (Fractional N Spurs)

h. Set the HP 3325B frequency to 5.001 MHz and the amplitude to −2.99 dBm.

i. Set the spectrum analyzer controls as follows:

Center Frequency	5.001 MHz
Frequency Span	1 kHz
Video BW	100 Hz
Resolution BW	30 Hz

j. Adjust the spectrum analyzer to reference the fundamental to the top display graticule.

k. Without changing the reference level, change the spectrum analyzer center frequency to 5.002 MHz to display the API 1 spur. It may be necessary to decrease the video bandwidth to optimize the display resolution.

l. All spurious (non-harmonic) signals should be at least 70 dB below the fundamental.

m. Without changing the reference level, set the HP 3325B frequency and the spectrum analyzer center frequency to the frequencies listed below. For each setting, verify that all spurious signals are at least 70 dB below the fundamental.

HP 3325B	Spectrum Analyzer Center Frequency
5.0001 MHz	5.0011 MHz
5.00001 MHz	5.00101 MHz
5.000001 MHz	5.001001 MHz
20.001 MHz	20.002 MHz
20.001 MHz	20.003 MHz
20.001 MHz	20.004 MHz
20.001 MHz	20.005 MHz

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Integrated Phase Noise

This test compares the HP 3325B integrated phase noise to the following specification:

−60 dB for a 30 kHz band centered on a 20 MHz carrier (excluding ±1 Hz about the carrier).

Equipment Required:
- Frequency Synthesizer
- Double Balanced Mixer
- 50Ω Feedthru Termination
- AC/DC Digital Voltmeter
- AC Voltmeter
- 15 kHz noise equivalent filter consisting of:
  - Resistor: 10 kΩ ± 1%
  - Capacitor: 1600 pF ± 5% (see figure 4-8)
- 1 MHz Low Pass Filter

a. Connect the equipment as shown in figure 4-8, connecting the 15 kHz noise equivalent filter output to the ac voltmeter. Phase lock the HP 3325B and the signal generator together.

b. Set the HP 3325B as follows:

Function	Sine
Frequency	19.901 MHz
Amplitude	0 dBm

c. Set the synthesizer (reference) as follows:

Frequency	19.9 MHz
Amplitude	+7.00 dBm

d. Record the ac voltmeter reading (dB scale).

e. Change the HP 3325B frequency to 19.9 MHz.

f. Connect the 15 kHz filter output to the digital voltmeter.

g. Press the HP 3325B [Phase] key. Using the modify keys, adjust the output phase for a minimum reading on the digital voltmeter.

h. Disconnect the 15 kHz filter output from the digital voltmeter and connect it to the ac voltmeter.

i. Record the ac voltmeter reading (dB scale) and subtract it from the reading recorded in step d. The difference should be −54 dB or greater. Add −6 dB to this number and enter on the Performance Test Record. The 6 dB is a correction factor compensating for the folding action of the mixer.

NOTE Frequencies used minimize the phase noise contribution of the frequency synthesizer.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

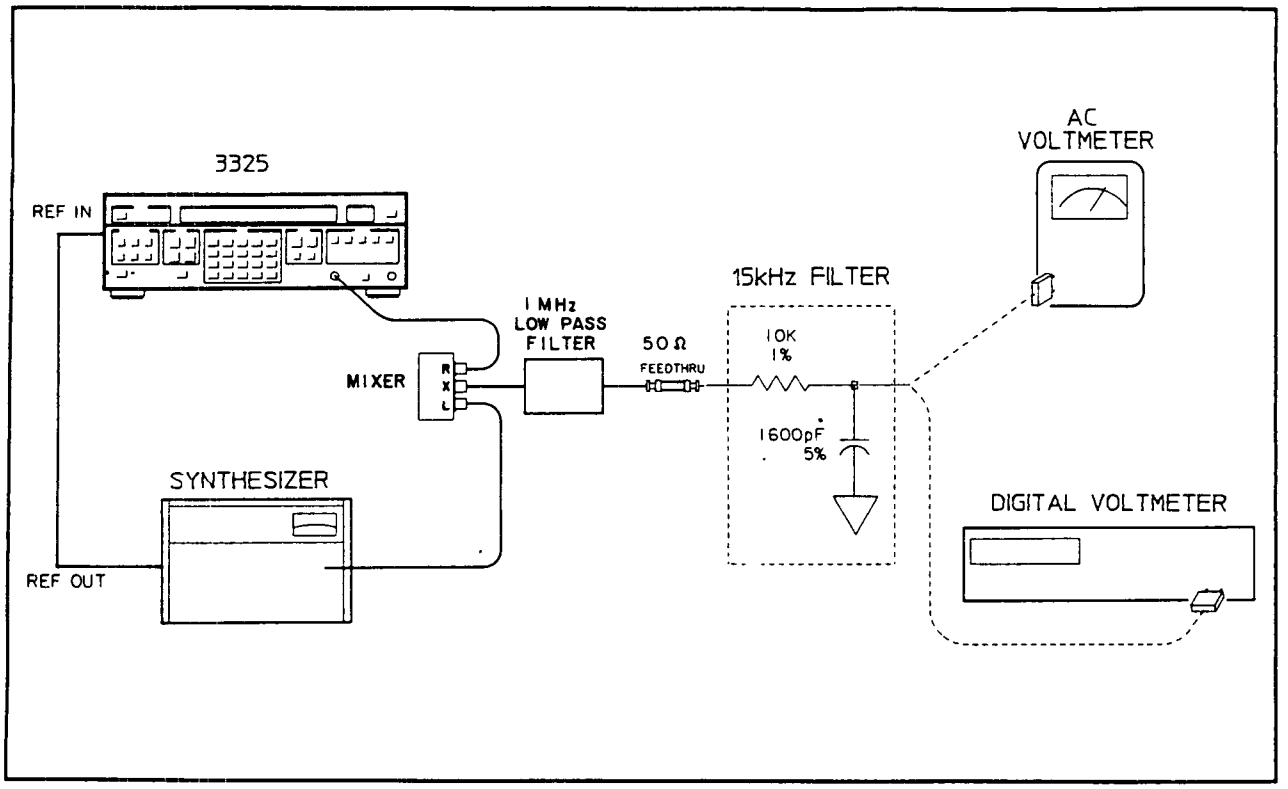


Figure 4-8. Integrated Phase Noise.

Amplitude Modulation Envelope Distortion

This procedure tests the HP 3325B amplitude modulation envelope distortion to the following specification:

--30 dB to 80% modulation at 1 kHz, 0V dc offset

Equipment Required: Sine Wave Signal Source
Spectrum Analyzer

a. Connect the equipment as shown in figure 4-9.

b. Set the HP 3325B output as follows:

Function	Sine
Frequency	1 MHz
Amplitude	3 V_{pp}
DC Offset	0V
High Voltage Output (option 002)	Off
AM	On

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

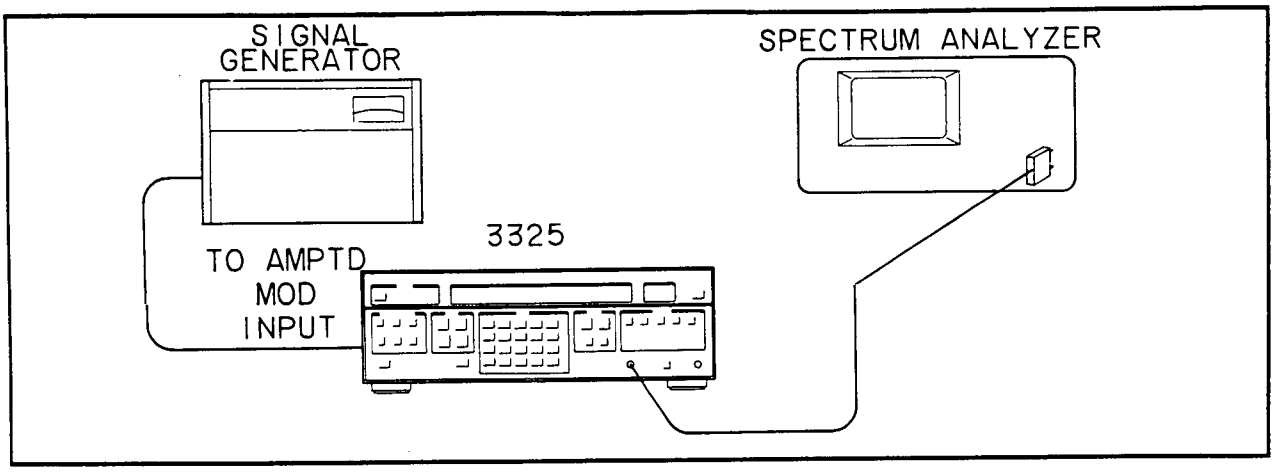


Figure 4-9. AM Envelope Distortion.

c. Set the modulating signal source frequency to 1 kHz and adjust the level to produce 80% modulation of the HP 3325B output. This is indicated by modulation sidebands being 8.0 dB down from the carrier, as viewed on the 2 dB/div display of the spectrum analyzer.

d. Adjust the spectrum analyzer to display the fundamental frequency, the 1 kHz sideband frequency, and at least 4 harmonics of the sidebands. All harmonics should be at least 30 dB lower than the modulation sidebands.

Square Wave Rise Time and Aberrations

This procedure compares the HP 3325B square wave output to its rise/fall time and overshoot specifications.

Rise and Fall Time: ≤20 ns, 10% to 90% at full output

Overshoot: ≤5% of peak-to-peak amplitude at full output

Equipment Required: Sampling Oscilloscope
40 dB Attenuator

a. Connect the HP 3325B signal output to the attenuator input and the attenuator output to the oscilloscope input. Set the attenuator for 40 dB attenuation.

b. Set the HP 3325B as follows:

High Voltage Output (option 002)	Off
Function	Square
Frequency	1 MHz
Amplitude	10 V_{pp}

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

c. Adjust the oscilloscope vertical and horizontal controls so that the square wave rise time between the 10% and 90% points can be measured. Rise time should be less than 20 ns.

d. Adjust the oscilloscope vertical and horizontal controls so that the square wave fall time between the 10% and 90% points can be measured. Fall time should be less than 20 ns.

e. Adjust the oscilloscope vertical and horizontal controls so that the square wave overshoot can be measured. Overshoot should be less than 500 mV at positive and negative peaks.

Ramp Retrace Time

This test compares the HP 3325B retrace time of the positive and negative slope ramps to the following specification:

≤3 μs 90% to 10%

Equipment Required: Analog Oscilloscope

a. Connect the HP 3325B signal output to the oscilloscope vertical input. Set the input switch to the 50Ω position. If your oscilloscope does not have a 50Ω input, use a 50Ω feedthru termination at the input.

b. Set the HP 3325B as follows:

High Voltage Output (option 002)	Off
Function	Positive Slope Ramp
Frequency	10 kHz
Amplitude	10 V_{pp}

c. Adjust the oscilloscope vertical and horizontal controls so that the ramp retrace time from the 90% to 10% points can be measured. Retrace time should be less than 3 μs.

d. Change function to negative slope ramp and repeat step c.

Sync Output

This procedure checks the voltage levels of the square wave on the HP 3325B front and rear panel sync outputs to the following specifications:

V_{high} > +1.2V; V_{low} < +0.2V into 50Ω

Equipment Required: Analog Oscilloscope

a. Connect the HP 3325B front sync output to the oscilloscope vertical input. Set the input switch to the 50Ω position. If your oscilloscope does not have a 50Ω input, use a 50Ω feedthru termination at the input.

b. Set the HP 3325B function to sine, frequency to 20 MHz.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

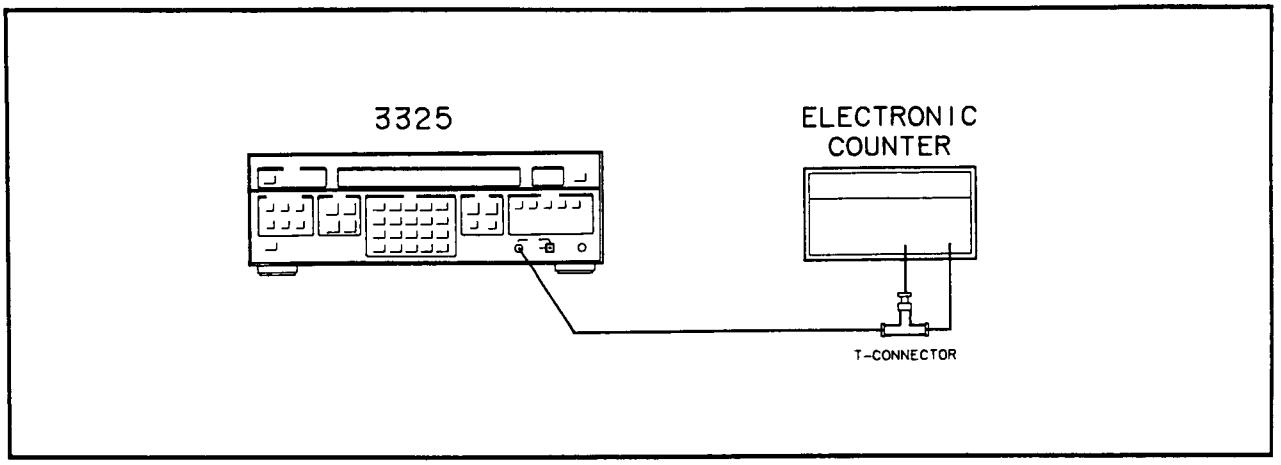


Figure 4-10. Square Wave Symmetry.

c. Adjust the oscilloscope controls to measure the high and low levels of the sync square wave. The high level should be greater than +1.2V and the low level should be less than +0.2V.

d. Repeat the measurement for the rear panel FAST ™sync output. The high level should be greater than +1.5V and the low level less than +0.5V.

Square Wave Symmetry

This procedure checks the symmetry of the HP 3325B square wave signal output to the following specification:

≤0.02% of period +3 nanoseconds

Equipment Required: Electronic Counter

a. Connect the HP 3325B signal output to both inputs of the electronic counter, using a BNC tee (see figure 4-10).

b. Set the HP 3325B output as follows:

Function	Square
Frequency	1 MHz
Amplitude	1 Vrms
DC Offset	0V

c. Adjust the electronic counter to measure time interval average A to B, with Slope A +, Slope B –. Note the reading.

d. Change Slope A to –, Slope B to +. Reading should be equal to the reading in step c ± < 3.2 ns.

FAST ™ is a trademark of Fairchild Semiconductor Corporation.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

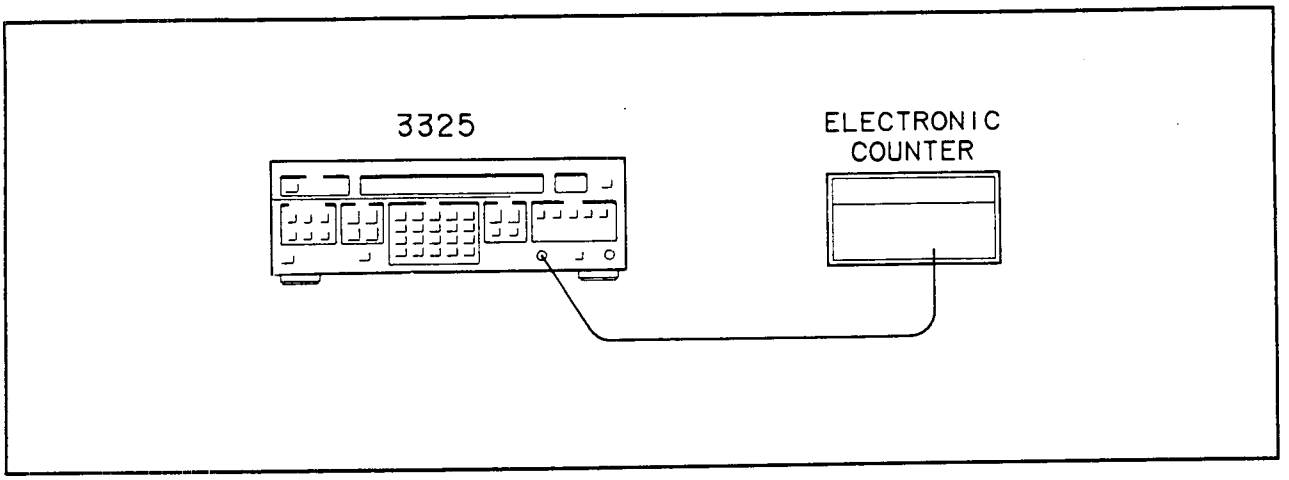


Figure 4-11. Frequency Accuracy.

Frequency Accuracy

This test compares the accuracy of the HP 3325B output signal to the following specifications:

$\pm 5 \times 10^{-6}$ of selected frequency (20°C to 30°C).

Equipment Required: Electronic Counter (calibrated within three months or with an accurate 10 MHz external reference input)

a. Connect the HP 3325B signal output to the electronic counter channel A input with a 50Ω feedthru termination. Allow the HP 3325B to warm up for 20 minutes and the counter's frequency reference to warm up for its specified period.

b. Set the HP 3325B output as follows:

Function	Sine
Frequency	20 MHz
Amplitude	0.99 V_{pp}
DC Offset	0V

c. Set the counter to count the frequency of the A input with 0.1 Hz resolution, and adjust for stable triggering. Electronic counter should indicate 20 000 000.00 Hz ±100 Hz.

d. Change the HP 3325B function to square wave. Frequency automatically changes to 10 MHz. Electronic counter should indicate 10 000 000.0 Hz ±50 Hz.

e. Change the HP 3325B function to triangle. Frequency automatically changes to 10 kHz. Move the counter input to the sync output of the HP 3325B. Set the counter to average 1000 periods. Electronic counter should indicate 100 000.00 ns ±0.5 ns.

f. Change the HP 3325B function to positive slope ramp. Electronic counter should indicate 100 000.00 ns ±0.5 ns.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

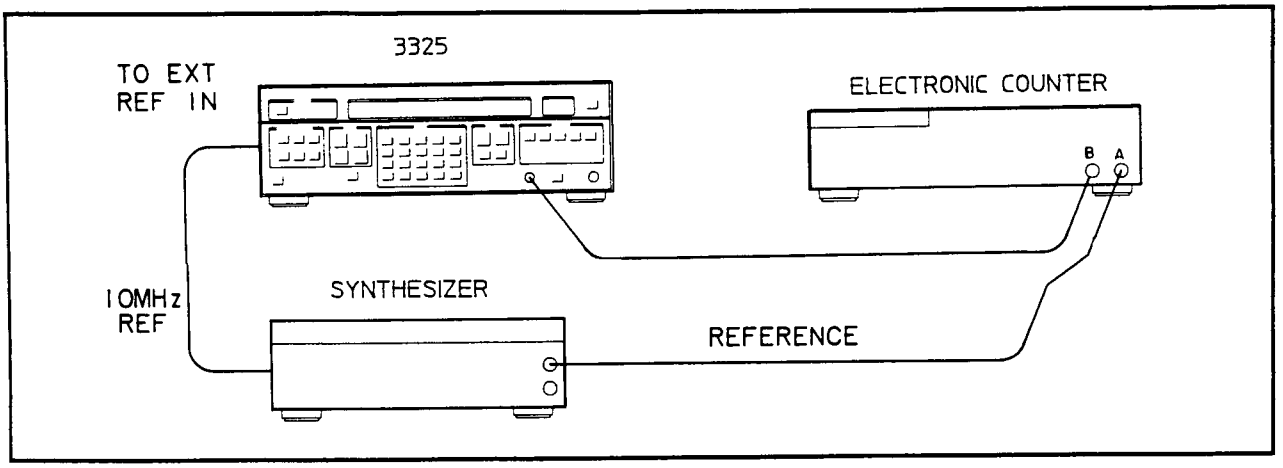


Figure 4-12. Phase Increment Accuracy.

Phase Increment Accuracy

This test compares the HP 3325B phase increment accuracy to the following specification:

±0.2°

Equipment Required: Frequency Synthesizer
Electronic Counter

a. Connect the equipment as shown in figure 4-12.

b. Set the HP 3325B as follows:

High Voltage Output (option 002)	Off
Function	Sine
Frequency	100 kHz
Amplitude	13 dBm

c. Set the synthesizer as follows:

Frequency	0.1 MHz
Amplitude	13 dBm

d. Set the counter as follows:

Function	Time Interval Avg A to B
Frequency Resolution, N	10^5
Inputs	50Ω, Separate
Slope A and B	Positive
Sample Rate	Maximum

e. Press the HP 3325B [Phase] key to display phase. Using the modify keys, adjust the phase until the counter reads approximately 200 ns. Press the blue [Shift] key, then the [Asgn Zero Φ] key.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

f. Set the counter sample rate to hold, then reset the counter. Record the counter reading (to 2 decimal places) on the Performance Test Record in the space for *Zero Phase Time Interval*. This is the phase difference (in nanoseconds) between the HP 3325B output and the reference signal.

g. Set the HP 3325B phase to −1°.

h. Reset the counter. Record the counter reading (to 2 decimal places) in the space for *1° Increment Time Interval*.

i. Determine the time difference between the counter readings in steps h and f, and record in the *Time Difference* column. The difference should be from 22.22 to 33.34 ns.

j. Set the HP 3325B phase to −10°.

k. Reset the counter. Record the counter reading in the space for *10° Increment Time Interval*.

l. Enter the time difference between the *Zero Phase Time Interval* and the reading in step k in the *Time Difference* column. This should be from 272.22 to 283.34 ns.

m. Set the HP 3325B phase to −100°.

n. Reset the counter. Record the counter reading in the space for *100° Incremental Time Interval*.

o. Enter the time difference between the *Zero Phase Time Interval* and the reading in step n in the *Time Difference* column. It should be from 2722.22 to 2783.34 ns.

Phase Modulation Linearity

This procedure compares the HP 3325B phase modulation linearity to the following specification:

±0.5%, best fit straight line

Equipment Required: Frequency Synthesizer
Electronic Counter
DC Power Supply
Digital Voltmeter

a. Connect the equipment as shown in figure 4-13.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

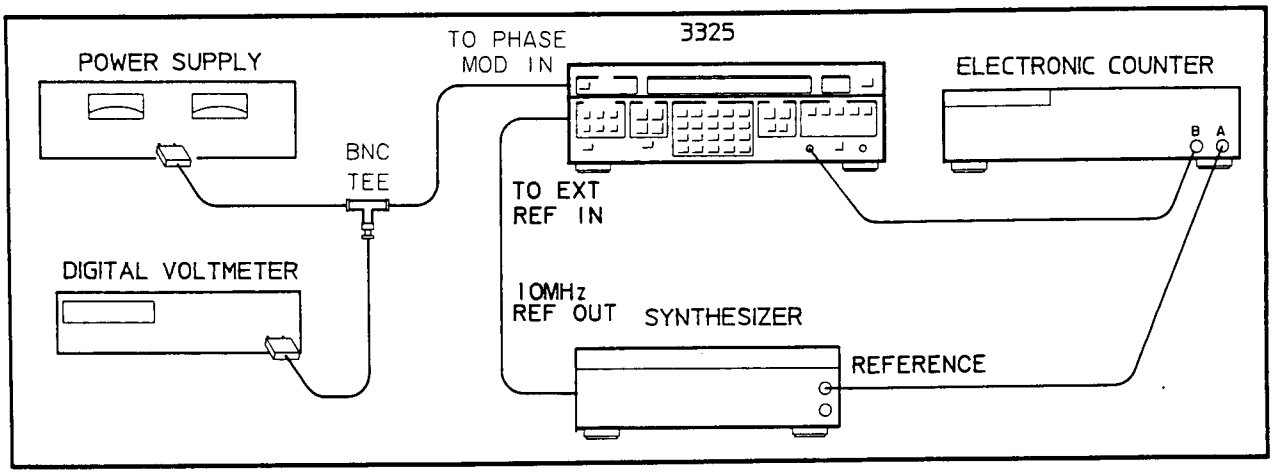


Figure 4-13. Phase Modulation Linearity.

b. Set the HP 3325B as follows:

High Voltage Output (option 002)	Off
Function	Sine
Frequency	100 kHz
Amplitude	13 dBm
Phase Modulation	On

c. Set the synthesizer as follows:

Frequency	100 kHz
Amplitude	13 dBm

d. Set the electronic counter as follows:

Function	Time Interval Avg A to B
Frequency Resolution, N	10^5
Inputs	50Ω, Separate
Slope A and B	Positive
Sample Rate	Maximum

e. Using the voltmeter to monitor the dc power supply output, set the dc voltage as near −5.0000V as possible.

f. Press the HP 3325B [Phase] key to display phase. Using the modify keys, adjust the phase until the counter reads approximately 200 ns. Record the counter reading as a reference for the following steps.

g. As soon as possible after recording the counter reading, note the voltmeter reading and record on the Performance Test Record in the *DVM Reading, x_1* space.

h. Press the HP 3325B blue [Shift] key, then the [Asgn Zero Φ] key.

i. Change the dc power supply output to −4.0000V.

j. Using the modify keys, adjust the HP 3325B phase to return the counter reading to the value recorded in step f.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

k. Record the voltmeter reading in the *DVM Reading, x_2* space.

l. The HP 3325B display indicates the phase change resulting from the 1V change in modulating voltage. Record the phase display in the *Phase Difference, 2* space (positive value).

m. Press the HP 3325B blue [Shift] key, then the [Asgn Zero Φ] key.

n. Change the power supply output to the following voltages and repeat steps j through m for each. Record the DVM reading and phase differences in the appropriate spaces on the Performance Test Record.

DC Voltage	DVM Reading	Phase Difference
−3.0000V	x_3	3
−2.0000V	x_4	4
−1.0000V	x_5	5
0.0000V	x_6	6
+1.0000V	x_7	7
+2.0000V	x_8	8
+3.0000V	x_9	9
+4.0000V	x_{10}	10
+5.0000V	x_{11}	11

o. Enter the cumulative phase change in the *Cumulative Phase* column. That is, enter the *2 Phase Difference* in the y_2 space, then add the y_2 and *3* values and enter in the y_3 space. Add the y_3 and *4* values and enter in y_4, and so on.

p. On the Performance Test Record, multiply each x value by the corresponding y value and enter in the *x times y* column.

q. Total the *DVM Reading* column and enter in the Σx space. Total the *Cumulative Phase* values and enter in the Σy space. Total the *x times y* values and enter in the Σxy space.

r. Square each x value and enter in the x^2 column. Total this column and enter in the Σx^2 space.

s. Square the Σx value and enter in the $(\Sigma x)^2$ space.

t. Multiply the Σx value by the Σy value and enter in the $\Sigma x \Sigma y$ space.

u. The equation for determining the best fit line specification for each y value is:

$y = a_1x + a_0$

Where: a_1x and a_0 are constants to be calculated from data taken previously

Where: x is the value of the modulating voltage, recorded as x_1 through x_{11}

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

v. First determine the value of a_1 using the following equation:

$$a_1 = \frac{\Sigma xy - \frac{\Sigma x \Sigma y}{n}}{\Sigma x^2 - \frac{(\Sigma x)^2}{n}}$$

Where: Σx, Σy, Σxy, $\Sigma x \Sigma y$, Σx^2, and $(\Sigma x)^2$ are the previously calculated values entered on the Performance Test Record

Where: n = 11 (the number of points to be calculated)

w. Determine the value of a_0 using the equation:

$$a_0 = \frac{\Sigma y}{n} - a_1 \frac{\Sigma x}{n}$$

x. Calculate each value for y using the equation: $y = a_1x + a_0$. Enter each result on the Performance Test Record in the *Best Fit Straight Line Values* column, (y_1) through (y_{11}).

y. Determine the test limits for each y value by increasing and decreasing the calculated (y) values by 0.5% of the (y_{11}) value. Enter in the Maximum and Minimum columns.

z. Transfer the y_1 through y_{11} *Cumulative Phase* entries to the *Measured Cumulative Phase* column. Each value should be within the calculated limits.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Amplitude Accuracy

This procedure tests the amplitude accuracy of the HP 3325B ac function output signals to the specifications listed in Appendix A:

Equipment Required:

- AC/DC Digital Voltmeter
  - AC: Accuracy sufficient to verify a 1% specification to 100 kHz
  - DC: Resolution, 1 μV
- High Speed Digital DC Voltmeter
  - At least 3 1/2 digit resolution, 1 1/2 μs or faster settling time.
- 50Ω, 0-12 dB (1 dB/step) Attenuator
- 50Ω Feedthru Termination
- Thermal Converter
- Analog Oscilloscope
  - Must have delayed sweep of 0.05 μs/div and delayed sweep gate output.
- Components:
  - 2 Resistors 36.55Ω 0.1% 0.125W
  - 2 Resistors 61.11Ω 0.1% 0.25W
  - Resistor 43Ω * 0.1% 0.125W
  - 3 Resistors 1330Ω * 0.1% 0.25W
  - Capacitor 300 pF * 5%

**Used only to test High Voltage (option 002)*

Amplitude Accuracy at Frequencies up to 100 kHz

a. Sine Wave Test. Connect the HP 3325B signal output through a 50Ω feedthru termination to the ac digital voltmeter input.

b. Set the HP 3325B as follows:

High Voltage Output (option 002)	Off
Function	Sine
Frequency	100 Hz
Amplitude	3.536 Vrms (10 V_{pp})
DC Offset	0V

c. Press the [Amptd Cal] key.

d. Read ac voltmeter. Change the HP 3325B frequency to 1 kHz and 100 kHz and repeat. Verify that all three voltmeter reading are between 3.495 and 3.577 Vrms (±0.1 dB).

e. Change the HP 3325B amplitude to 1.061 Vrms (3 V_{pp}) and take ac voltage readings for 100 Hz, 1 kHz and 100 kHz as above. Verify that all three voltmeter readings are between 1.048 and 1.073 Vrms (±0.1 dB).

f. Change the HP 3325B amplitude to 0.3536 Vrms and set dc offset to 1 mV. Set the HP 3325B frequency to 100 Hz, 1 kHz and 100 kHz and read ac voltage. Verify that all three readings are between 0.3411 and 0.3660 Vrms (±0.3 dB).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

g. Function Test. Connect the HP 3325B sync output to external trigger input of oscilloscope. Connect the HP 3325B signal output to the voltage divider of figure 4-14A. Connect the voltage divider output to oscilloscope vertical input and to high speed voltmeter input. Connect delayed sweep gate from oscilloscope to external trigger input of high speed voltmeter (see figure 4-14A).

h. Set the HP 3325B as follows:

High Voltage Output (option 002)	Off
DC Offset	0V
Amplitude	10 V_{pp}
Frequency	99.9 Hz
Function	Square

i. Set the oscilloscope as follows:

Display	A or B
Vertical Sensitivity	0.5 V/div
Trigger	Ext
Main Sweep	1 ms/div
Delayed Sweep	5 μs/div
Delay	250

j. Set the voltmeter as follows:

Range	1.0V
Trigger	Ext
Delay	0s
Coupling	DC, 1 MΩ

k. One cycle of the square wave should fill the screen of the oscilloscope, and the sample time for the voltmeter should be seen as the intensified spot of the delayed sweep.

l. Press [Amptd Cal] on the HP 3325B.

m. Read positive peak voltage of attenuated waveform on voltmeter. If the reading is not stable, alternately press hold, then ext to repeat readings. Change oscilloscope delay to 750 and read negative peak. Add the two readings to obtain volts peak-to-peak. Verify that sum is between 3.661 and 3.735 V.

n. Change the HP 3325B function to triangle. Change oscilloscope to:

Vertical Sensitivity	0.2 V/div
Vertical Position	9 o'clock
Main Sweep	0.5 ms/div
Delay	500
Magnify	X10
Delayed Sweep	1 μs/div

o. Adjust oscilloscope delay to place the intensified spot on peak of triangle and read positive peak voltage on the high speed digital voltmeter. Press negative trigger, move vertical position knob of oscilloscope to 3 o'clock and adjust intensified spot to read negative peak on the voltmeter. Verify that sum of positive and negative peak voltage is between 3.643 and 3.754 V.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

p. Change the HP 3325B function to positive ramp. Change oscilloscope to:

Trigger	positive
Main Sweep	2 ms/div

Place intensified spot on positive peak. Alternately press hold, then ext to repeat readings. Record the most positive reading.

q. Move vertical position knob to 3 o'clock, adjust delay and read negative peak. Ramp jitter should be visible on all ramp readings (the high speed digital voltmeter will hold the readings). Verify that sum of positive and negative peaks is between 3.643 and 3.754 V.

r. Change the HP 3325B function to negative ramp. Change oscilloscope trigger to positive and take negative ramp reading as above.

s. Change the HP 3325B function to square and frequency to 1 kHz. Set oscilloscope as follows:

Main Sweep	50 μs/div
Delayed Sweep	0.05 μs/div

Read positive peak; push negative trigger and read negative peak. Verify that sum is between 3.661 and 3.735 V.

t. Change the HP 3325B function to triangle and frequency to 2 kHz. Set oscilloscope main sweep to 20 μs/div and delay to 610. Adjust delay and position. Set positive and negative trigger to read peaks. Verify voltage to be between 3.643 and 3.754 V_{pp}.

u. Change the HP 3325B function to positive ramp and frequency to 500 Hz. Set main sweep of oscilloscope to 0.2 ms/div and adjust sweep vernier to return peaks to center screen (trigger must be negative to see jitter at this point). Verify voltage to be between 3.643 and 3.754 V_{pp}.

v. Change the HP 3325B function to negative ramp and oscilloscope trigger to positive. Verify voltage of 3.643 to 3.754 V_{pp}.

w. Change HP 3325B frequency to 100 kHz and function to square. Return oscilloscope sweep vernier to calibrate and set main sweep to 0.5 μs/div and magnify to off. Read positive and negative peak voltages in the center of the screen. By pressing positive/negative trigger, verify voltage of 3.661 to 3.735 V_{pp}.

x. Change the HP 3325B function to triangle (frequency will go to 10 kHz). Set oscilloscope main sweep to 5 μs/div and press magnify. Verify voltage of 3.513 to 3.883 V_{pp}.

y. Change the HP 3325B function to positive ramp. Set oscilloscope main sweep to 20 μs/div. Adjust delay to set end of intensified spot on highest peak. Verify voltage of 3.328 to 3.996 V_{pp}.

z. Change the HP 3325B function to negative ramp. Verify voltage of 3.328 to 3.996 V_{pp}.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

aa. Change the HP 3325B amplitude to 3 V_{pp}, and remove the voltage divider from the circuit. Reconnect the HP 3325B signal output to the oscilloscope and voltmeter through the 50Ω feedthru termination. Set the HP 3325B frequency to 99.9 Hz and the function to square.

bb. Repeat tests i through z. Test limits are as follows:

Test	Frequency	Function	Minimum	Maximum
m	99.9 Hz	Square	2.970V	3.030V
o	99.9 Hz	Triangle	2.955V	3.045V
q	99.9 Hz	+ Ramp	2.955V	3.045V
r	99.9 Hz	– Ramp	2.955V	3.045V
s	1 kHz	Square	2.970V	3.030V
t	2 kHz	Triangle	2.955V	3.045V
u	500 Hz	+ Ramp	2.955V	3.045V
v	500 Hz	– Ramp	2.955V	3.045V
w	100 kHz	Square	2.970V	3.030V
x	10 kHz	Triangle	2.850V	3.150V
y	10 kHz	+ Ramp	2.700V	3.300V
z	10 kHz	– Ramp	2.700V	3.300V

cc. Change the HP 3325B amplitude to 1 V_{pp}, and set dc offset to 1 mV. Set frequency to 99.9 Hz and function to square. Set oscilloscope vertical sensitivity to 0.05 V/div for all 1 V_{pp} tests.

dd. Repeat tests i through z. Test limits are as follows:

Test	Frequency	Function	Minimum	Maximum
m	99.9 Hz	Square	0.970V	1.030V
o	99.9 Hz	Triangle	0.960V	1.040V
q	99.9 Hz	+ Ramp	0.960V	1.040V
r	99.9 Hz	– Ramp	0.960V	1.040V
s	1 kHz	Square	0.970V	1.030V
t	2 kHz	Triangle	0.960V	1.040V
u	500 Hz	+ Ramp	0.960V	1.040V
v	500 Hz	– Ramp	0.960V	1.040V
w	100 kHz	Square	0.970V	1.030V
x	10 kHz	Triangle	0.940V	1.060V
y	10 kHz	+ Ramp	0.890V	1.110V
z	10 kHz	– Ramp	0.890V	1.110V

High Voltage Output Amplitude Accuracy for Frequencies to 100 kHz (for instruments with high voltage option 002)

ee. Sine Wave Test. Connect the HP 3325B signal output to the ac voltmeter with a 6 foot cable. Connect a 500Ω, 300 pF load (at either end) in parallel with the line.

ff. Select the high voltage output on the HP 3325B. A LED near the key indicates that the high voltage output is on.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

gg. Set the HP 3325B function to sine, frequency to 2 kHz, and amplitude to 14.14 Vrms (40 V_{pp}). Press [Amptd Cal]. The ac voltmeter reading should be 13.86 to 14.42 Vrms.

hh. High Voltage Function Test. Connect the HP 3325B signal output to oscilloscope and voltage divider with a 6 foot cable. Trigger oscilloscope on HP 3325B sync output. Trigger high speed voltmeter on delayed sweep gate from oscilloscope (see figure 4-14B).

ii. The voltage divider shown in figure 4-14B is built into a small metal box with 2 BNC connectors. Parts used are:

R3, 443Ω consists of 3 parallel 1330Ω resistors, each 0.1%, 0.25W
R4, 43Ω, 0.1%, 0.125W
C1, 300 pF, 5%

Connect the tap to the input of high speed voltmeter as shown in figure 4-14B.

jj. Set the HP 3325B frequency to 2 kHz and amplitude to 40 V_{pp}. Set voltmeter to 1V range and external trigger. Set oscilloscope as follows:

Vertical Sensitivity	2 V/div
Vertical Position	8 o'clock
Trigger	External
Main Sweep	20 μs/div
Delayed Sweep	0.05 μs/div
Delay	615
Magnify	× 10

kk. Set the HP 3325B to square wave and read positive peak on voltmeter. Switch oscilloscope to negative trigger, vertical position to 4 o'clock, and read negative peak. Verify that voltage is between 3.466 and 3.607 V_{pp}.

ll. Change the HP 3325B function to triangle, and read peak voltages. Voltage should be 3.466 to 3.607 V_{pp}.

mm. Change the HP 3325B to positive ramp. Change oscilloscope main sweep to 0.1 ms/div and delay to 500. Verify voltage of 3.466 to 3.607 V_{pp}. Repeat for negative ramp by changing oscilloscope trigger to positive.

Amplitude Flatness: (Frequencies above 100 kHz)

nn. Set the HP 3325B as follows:

High Voltage Output (option 002)	Off
Function	Sine
Frequency	1 kHz
Amplitude	3 V_{pp}

oo. Set the 50Ω attenuator to 3 dB and connect to signal output. Connect 1 V_{rms} thermal converter to attenuator output. Connect voltmeter with microvolt resolution to thermal converter output (see figure 4-14C).

pp. Press the HP 3325B [Amptd Cal] key. Record the voltmeter reading in the 3V sine wave 1 kHz reference space on the Performance Test Record.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

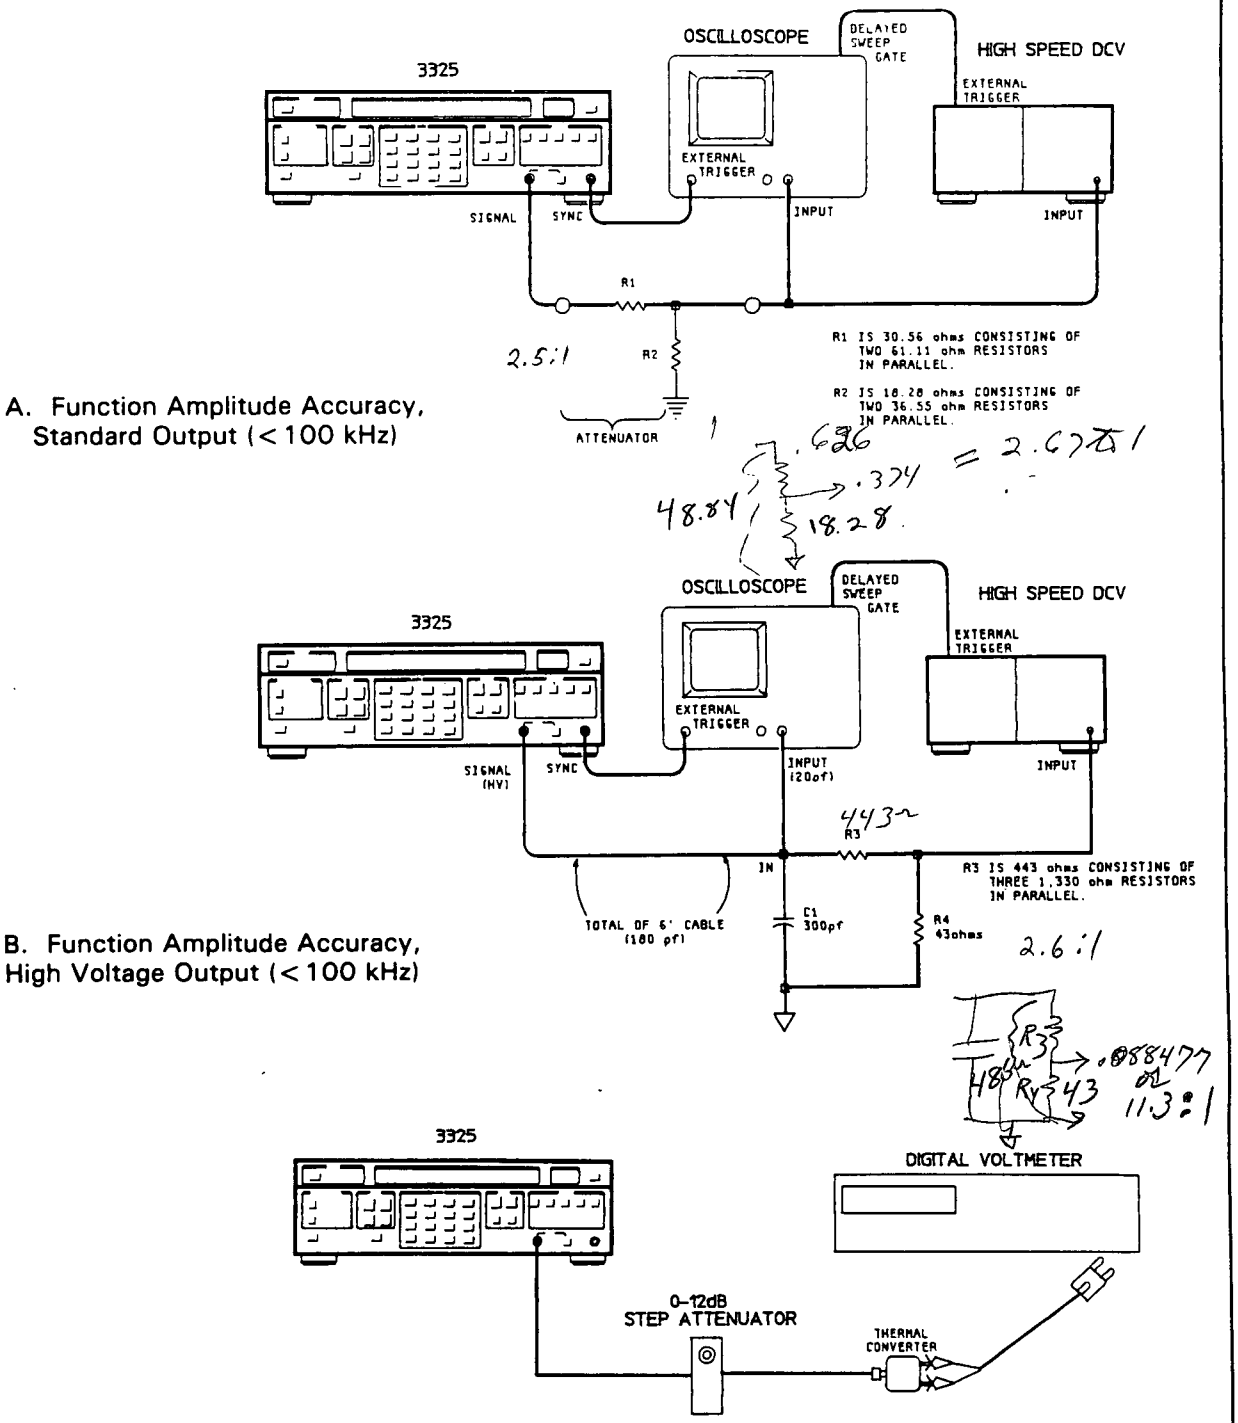


Figure 4-14. Amplitude Accuracy and Flatness.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

qq. Use the modify keys to increase the frequency in 2 MHz steps from 1 kHz to 20.001 MHz, recording the voltmeter reading at each frequency. In each case, allow the thermal converter several seconds to stabilize.

rr. Verify that all flatness readings are within ±6.6% of the 1 kHz reference reading.

ss. Change attenuator to 12 dB. Change the HP 3325B amplitude to 10 V_{pp}. Repeat steps pp and qq for 10 V_{pp}. Verify that all readings are within 6.3% of the 1 kHz reference.

tt. Disconnect the thermal converter from the HP 3325B output.

uu. Square wave flatness. Set the HP 3325B as follows:

High Voltage Output (option 002)	Off
Function	Square
Frequency	1 kHz
Amplitude	10 V_{pp}

vv. Connect the HP 3325B signal output to an oscilloscope with a 50Ω feedthru termination. Set the oscilloscope as follows:

Vertical Sensitivity	2 V/div
Time/Div	0.1 ms

ww. Use the modify keys to increase the HP 3325B frequency from 1 kHz to 10.001 MHz in 2 MHz steps. Two lines will appear on the oscilloscope. Verify that they remain within 1/2 major division of 5 divisions apart for all 11 frequencies.

High Voltage Output (option 002)
Amplitude Flatness above 100 kHz

xx. Connect the HP 3325B output to an oscilloscope with a 500Ω, 500 pF load (load attached at either end). Cable capacitance (30 pF/foot) must be included in the 500 pF. The HV divider (figure 4-14B) may be used with 6 feet of cable.

yy. Set the oscilloscope as follows:

Vertical Sensitivity	10 V/div
Time/Div	1 ms

zz. Set the HP 3325B to 40 Vpp sine wave and 1 kHz. Adjust oscilloscope intensity and focus for a sharp trace.

aaa. Use the modify keys to increase the HP 3325B frequency from 1 kHz to 1.001 MHz in 200 kHz steps. Verify that the width of the bright region of the screen is 4 ±0.4 divisions for all 11 frequencies.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

DC Offset Accuracy (DC Only)

This procedure tests the HP 3325B dc offset accuracy when no ac function output is present to the following specifications:

±0.4% of full range*

** Except lowest attenuator range where accuracy is ±20 μV*

Equipment Required: DC Digital Voltmeter with 5 digit resolution, capable of measuring > 20V for high voltage output (option 002)
50Ω Feedthru Termination

a. Connect the HP 3325B signal output directly to the 50Ω feedthru termination and then with a cable to the dc digital voltmeter input (see figure 4-15A).

b. Press whichever function key is presently active, indicated by a lighted indicator beside the key. This removes the ac output. The indicator beside the [DC Offset] key should light.

c. Set the HP 3325B dc offset to 5V, then press [Amptd Cal].

d. The voltmeter reading should be +4.980 to +5.020 V.

e. Change the HP 3325B dc offset to −5V. Voltmeter reading should be −4.980 to −5.020 V.

Attenuator Test

f. Set the dc offset to the positive and negative voltages shown below. The digital voltmeter reading should be within the tolerances shown for each voltage.

DC Offset	Tolerances
±1.499V	±1.49300 to 1.50499 V
±499.9 mV	±0.49790 to 0.50190 V
±149.9 mV	±0.14930 to 0.15050 V
±49.99 mV	±0.04979 to 0.05019 V
±14.99 mV	±0.01493 to 0.01505 V
±4.999 mV	±0.004979 to 0.005019 V
±1.499 mV	±0.001479 to 0.001519 V

High Voltage Output (option 002) DC Offset

g. Remove the 50Ω feedthru termination and connect the HP 3325B output directly to the voltmeter input.

h. Select the high voltage output on the HP 3325B. A LED near the key indicates that the high voltage output is on.

i. Set the HP 3325B dc offset to 20V. Voltmeter reading should be +19.775 to 20.225 V.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

j. Set the HP 3325B dc offset to −20V. Voltmeter reading should be −19.775 to−20.225 V

DC Offset Accuracy with AC Functions

This procedure compares the HP 3325B dc offset with ac functions accuracy to the following specifications:

DC + AC, ≤ 1 MHz: ±1.2%, Ramps ±2.4%
DC + AC, > 1 MHz: ±3%

Equipment Required: DC Digital Voltmeter
50Ω Feedthru Termination

a. Connect the equipment as shown in figure 4-15A. Set the voltmeter to measure dc voltage.

b. Set the HP 3325B output as follows:

High Voltage Output (option 002)	Off
Function	Sine
Frequency	20.999 999 999 MHz
Amplitude	1 V_{pp}
DC Offset	+4.5V

c. Press [Amptd Cal]. After amplitude calibration (approximately 2 seconds) the voltmeter reading should be +4.350 to +4.650 Vdc.

d. Change the dc offset to −4.5V. Voltmeter reading should be −4.350 to −4.650 Vdc.

e. Change the HP 3325B frequency to 999.9 kHz. The voltmeter reading should be −4.440 to −4.560 Vdc.

f. Change the HP 3325B dc offset to +4.5V. The voltmeter reading should be +4.440 to +4.560 Vdc.

g. Set the HP 3325B function to square. The voltmeter reading should be +4.440 to +4.560 Vdc.

h. Change the HP 3325B dc offset to −4.5V. The voltmeter reading should be −4.440 to −4.560 Vdc.

i. Change the HP 3325B frequency to 9.9999 MHz. The voltmeter reading should be −4.350 to −4.650 V.

j. Set the HP 3325B function to triangle, frequency to 9.9 kHz. The voltmeter reading should be −4.440 to −4.560 V.

k. Set the function to positive ramp. The voltmeter reading should be −4.380 to −4.620 V.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Triangle Linearity

This procedure tests the linearity of the HP 3325B triangle wave output to the following specifications:

±0.05% of full output, 10% to 90%, best fit straight line

Because the triangle and ramp outputs are generated by the same circuits, this procedure effectively tests the ramp linearity also.

Equipment Required: High-Speed DC Digital Voltmeter (This procedure is written to use the high speed and delay capabilities of the HP 3437A)
Resistive Divider, ÷ 2.5, consisting of:
30Ω ±1% 1/4W
20Ω ±1% 1/4W
BNC-to-Triax Adapter

a. Connect the HP 3325B and the high-speed voltmeter through the divider as shown in figure 4-15B.

b. Set the HP 3325B as follows:

High Voltage Output (option 002)	Off
Function	Triangle
Frequency	10 kHz
Amplitude	10 V_{pp}

c. Set the voltmeter as follows:

Range	1V
Number of Readings	1
Trigger	External

NOTE The HP 3437A triggers on the negative going edge of the HP 3325B sync square wave.

d. Set the voltmeter delay to 0.00003 (seconds). Record the voltmeter reading on the Performance Test Record under *Positive Slope Measurement, (10%)* y_1. This is the 10% point on the positive slope of the triangle (see figure 4-15C).

e. Measure the voltage at each 10% segment point by setting the voltmeter delay to the following. Enter on the Performance Test Record in the appropriate spaces under *Positive Slope Measurement*.

Delay	Percent of Slope
0.000035	20
0.00004	30
0.000045	40
0.00005	50
0.000055	60
0.00006	70
0.000065	80
0.00007	90

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

f. Measure the voltage at each 10% segment point on the negative slope by setting the voltmeter delay to the following. Enter the reading on the Performance Test Record in the appropriate spaces under *Negative Slope Measurement*.

Delay	Percent of Slope
0.00008	90
0.000085	80
0.00009	70
0.000095	60
0.0001	50
0.000105	40
0.00011	30
0.000115	20
0.00012	10

g. Algebraically add the voltages recorded in the *Positive Slope Measurement* column and enter the total in the Σy space.

h. Multiply Σy by 45 (which is Σx) and enter the result in the $\Sigma x \Sigma y$ space.

i. Multiply each y value by the corresponding x value and enter in the *x times y* column. Total these values and enter in the Σxy space.

j. The equation for determining the best fit straight line specification for each y value is:

$$y = a_1 x + a_0$$

Where: a_1 and a_0 are constants to be calculated from data taken previously.

NOTE Calculate the values of a_1 and a_0 to at least five decimal places.

k. First determine the value of a_1 using the following equation:

$$a_1 = \frac{\Sigma xy - \frac{\Sigma x \Sigma y}{n}}{\Sigma x^2 - \frac{(\Sigma x)^2}{n}}$$

Where: Σx, Σy, Σxy, $\Sigma x \Sigma y$, Σx^2, and $(\Sigma x)^2$ are the previously calculated values entered on the Performance Test Record.

Where: $n = 9$ (the number of points to be calculated)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

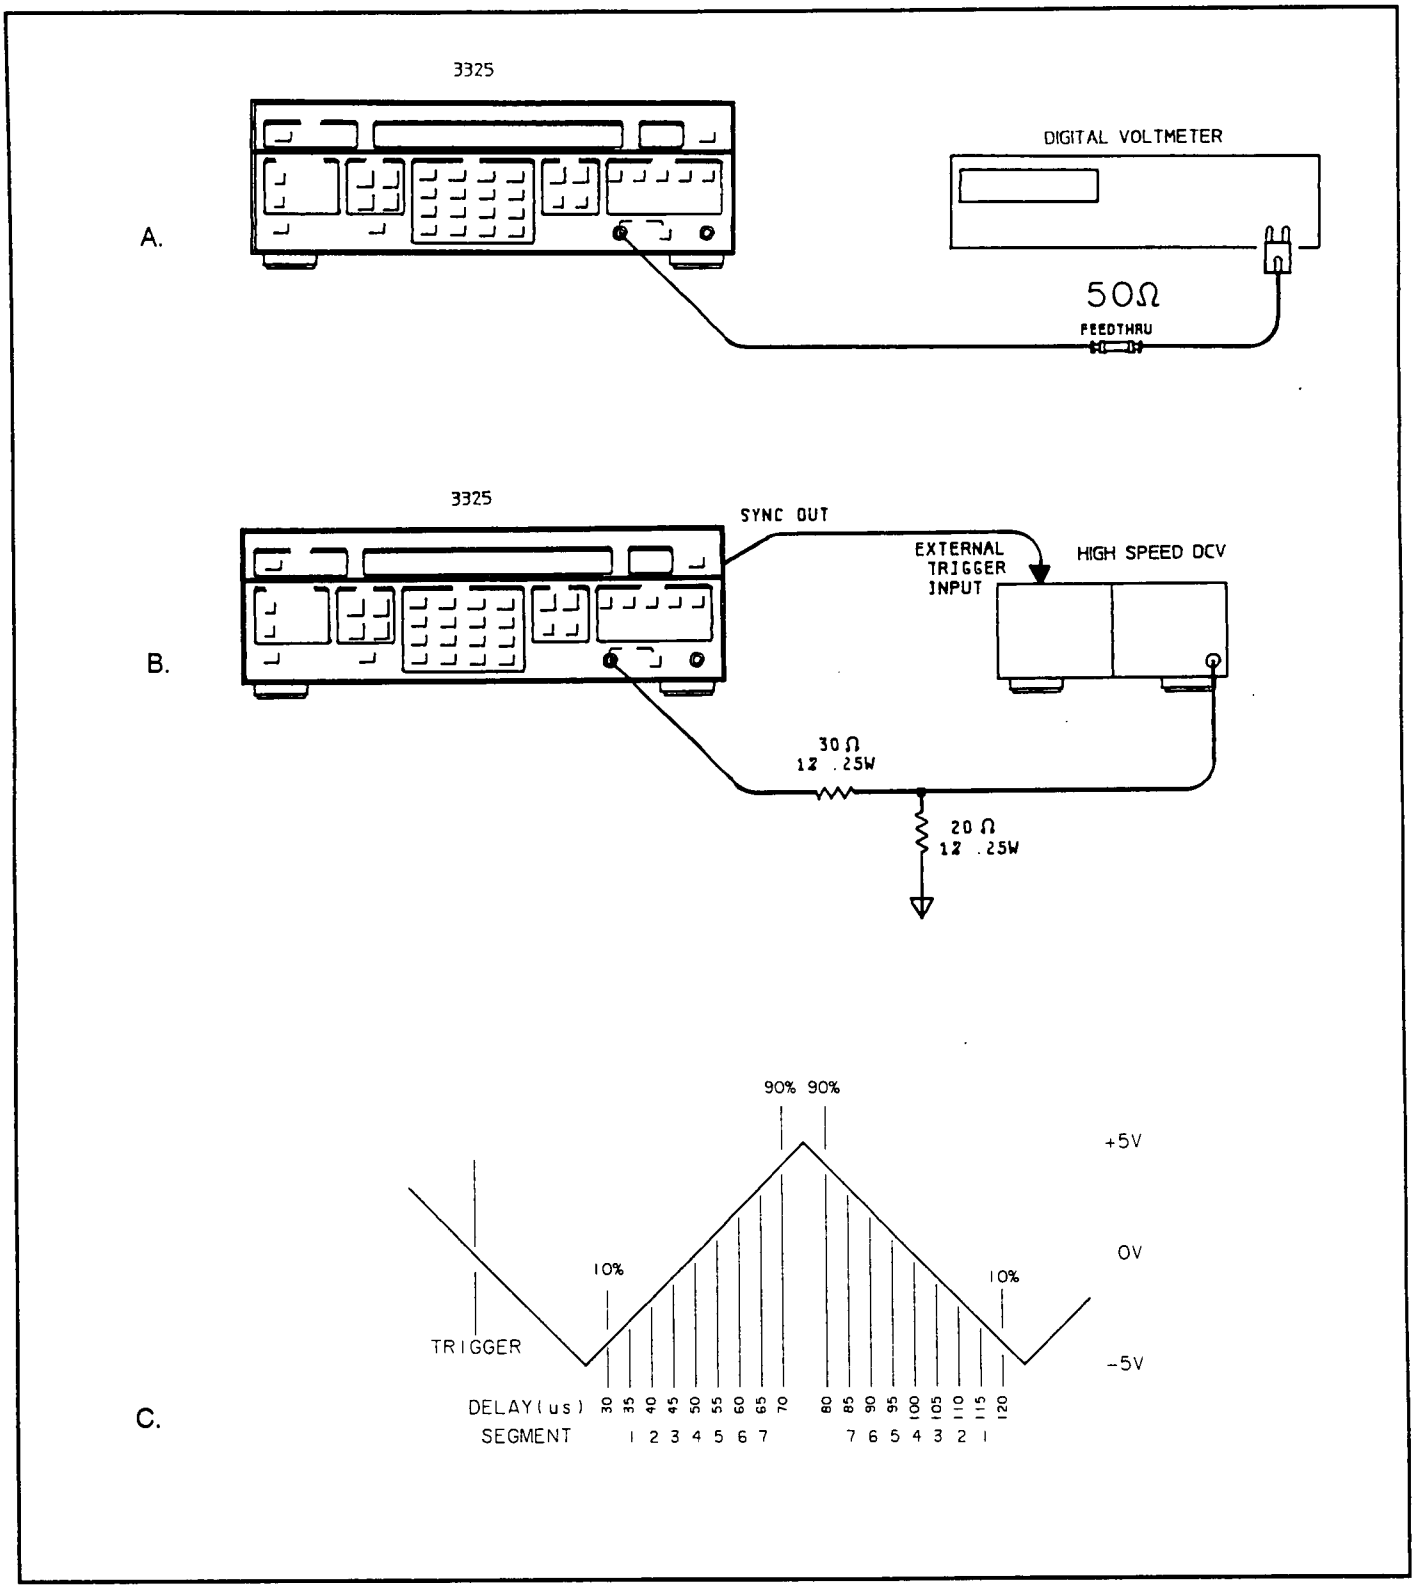


Figure 4-15. Triangle Linearity.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

l. Determine the value of a_0 using the equation:

$$a_0 = \frac{\Sigma y}{n} - a_1 \frac{\Sigma x}{n}$$

m. Calculate the best fit straight line value for each point (y_1 through y_9) using the equation:

$$y = a_1 x = a_0$$

Enter each result on the Performance Test Record in the *Best Fit Straight Line* column.

n. For each delay (x), subtract the calculated voltage (y') from the measured voltage (y). Find the largest positive voltage difference ($+V_{max}$) and the largest negative difference ($-V_{max}$). Using the following formula, compute the % linearity.

$$\% \text{ LINEARITY} = \frac{|+V\text{max}| + |-V\text{max}|}{8 \text{ Volts}} \times 100\%$$

o. Algebraically add the voltages recorded in the *Negative Slope Measurement* column and enter the total in the Σy space.

p. Repeat steps h through n to determine the best fit straight line values and tolerances for the negative slope. The voltages measured and recorded in the *Negative Slope Measurement* column should be within the calculated tolerances.

X Drive Linearity

This procedure tests the linearity of the HP 3325B rear panel X Drive output to the following specifications: for all linear sweep widths which are integral multiples of the minimum sweep width for each function and sweep time:

±0.1% of final value, 10% to 90%, best fit straight line.

Equipment Required:
- High-Speed DC Digital Voltmeter (This procedure is written to use the high speed and delay capabilities of the HP 3437A)
- Resistive Divider, ÷ ~2.6, consisting of:
  - 100 kΩ 1% 1/8W
  - 162 kΩ 1% 1/8W
- DC Power Supply
- BNC-to-Triax Adapter

a. Connect the equipment as shown in figure 4-16A.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

b. Set the HP 3325B as follows:

High Voltage Output (option 002)	Off
Function	Sine
Amplitude	10 V_{pp}
Sweep Start Frequency	1 MHz
Sweep Stop Frequency	10 MHz
Sweep Marker Frequency	4 MHz
Sweep Time	0.01s

c. Press the HP 3325B [Start Cont] key.

d. Set the voltmeter as follows:

Range	1V
Number of Readings	1
Trigger	External

NOTE The HP 3437A triggers on the negative going edge of the Z Blank signal, which occurs at the start of a sweep up.

e. Set the voltmeter delay to 0.001 (seconds). Adjust the dc power supply for a voltmeter reading of −1.600V. Record the voltmeter reading on the Performance Test Record under *X Drive Ramp Measurement, (10%), y_1*. This is the 10% point on the X Drive ramp (see figure 4-16B).

f. Measure the voltage at each 10% segment point by setting the voltmeter delay to the following. Enter on the Performance Test Record in the appropriate spaces under *X Drive Ramp Measurement*.

Delay	Percent of Ramp
0.002	20
0.003	30
0.004	40
0.005	50
0.006	60
0.007	70
0.008	80
0.009	90

g. Algebraically add the voltages recorded in the *X Drive Ramp Measurement* column and enter the total in the Σy space.

h. Multiply Σy by 45 (which is Σx) and enter the result in the $\Sigma x \Sigma y$ space.

i. Multiply each y value by the corresponding x value and enter in the *x times y* column. Total these values and enter in the Σxy space.

j. The equation for determining the best fit straight line specification for each y value is:

$$y = a_1 x + a_0$$

Where: a_1 and a_0 are constants to be calculated from data taken previously.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

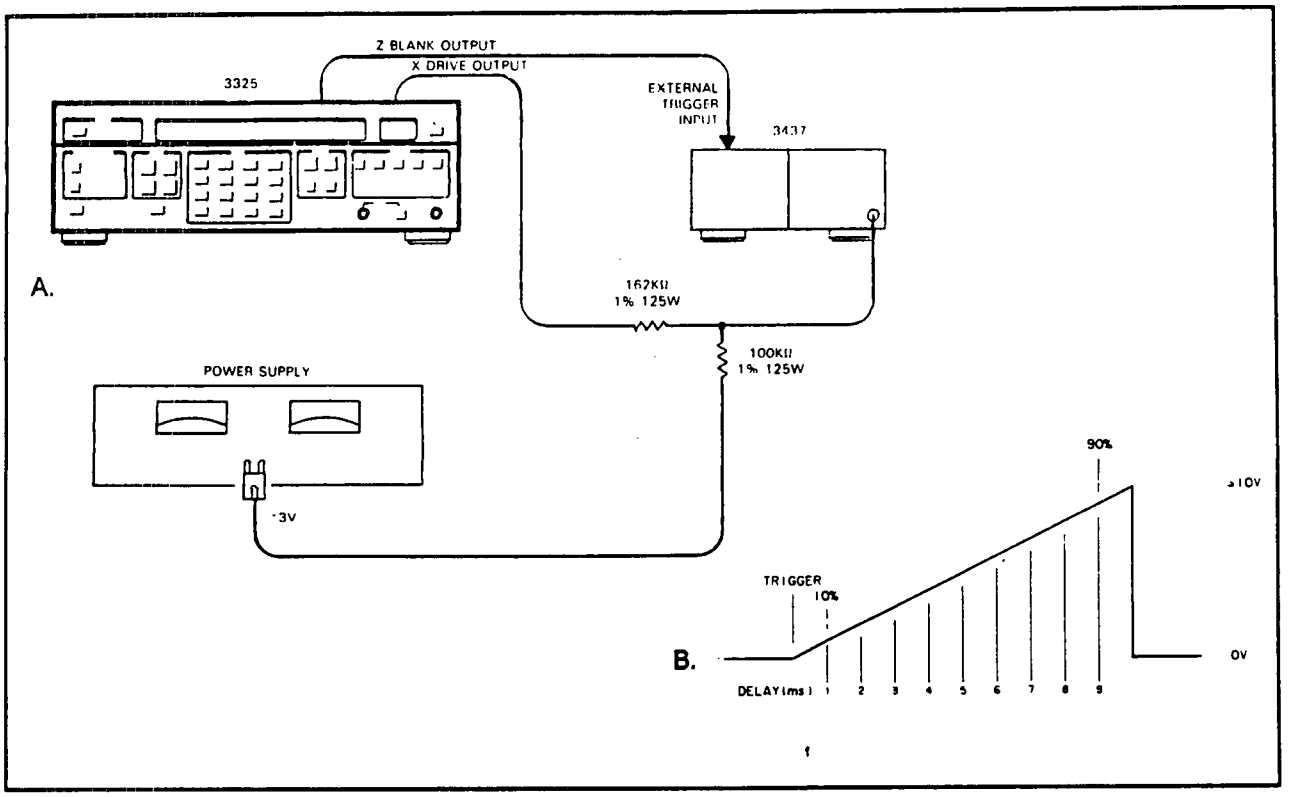


Figure 4-16. X Drive Linearity

NOTE Calculate the values of a_1 and a_0 to at least five decimal places.

k. First determine the value of a_1 using the following equation:

$$a_1 = \frac{\Sigma xy - \frac{\Sigma x \Sigma y}{n}}{\Sigma x^2 - \frac{(\Sigma x)^2}{n}}$$

Where: Σx, Σy, Σxy, $\Sigma x \Sigma y$, Σx^2, and $(\Sigma x)^2$ are the previously calculated values entered on the Performance Test Record.

Where: $n = 9$ (the number of points to be calculated)

l. Determine the value of a_0 using the equation:

$$a_0 = \frac{\Sigma y}{n} - a_1 \frac{\Sigma x}{n}$$

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

m. Calculate the best fit straight line value for each point (y_1 through y_9) using the equation:

$$y = a_1x + a_0$$

Enter each result on the Performance Test Record in the *Best Fit Straight Line* column.

n. Determine the minimum and maximum allowable voltages at each point by subtracting and adding 0.004V to the voltage calculated in step m (10.5V ÷ 2.6 × 0.1%). Enter these voltage limits on the Performance Test Record under *Minimum* and *Maximum*. The voltage measured and recorded in the *X Drive Ramp Measurement* column should be within these calculated tolerances.

NOTE The HP 3325B X Drive maximum voltage (100%) is set at the factory to +10.5V.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

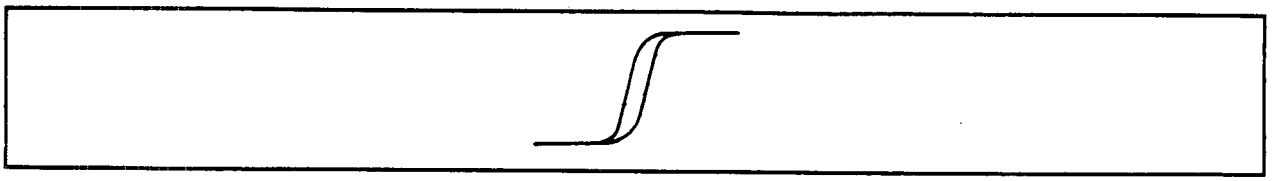


Figure 4-17. Ramp Period Variation.

Ramp Period Variation

This procedure tests the variation between alternate cycles of the HP 3325B positive and negative slope ramps to the following specification:

< ±1% of period, maximum

Equipment Required: Analog Oscilloscope, with delayed sweep

a. Connect the HP 3325B signal output to the oscilloscope vertical input. (Do NOT use a 10:1 probe.) Set the input switch to the 50Ω position. If your oscilloscope does not have a 50Ω input, use a 50Ω feedthru termination at the input.

b. Set the HP 3325B as follows:

Function	Negative Slope Ramp
Frequency	100 Hz
Amplitude	10 V_{pp}

c. Set the oscilloscope as follows:

Vertical	2 V/div
Main sweep	2.0 ms/div
Delayed sweep	20 µs/div
Trigger	Positive

d. With the oscilloscope horizontal controls set to main sweep, adjust the intensified portion of the trace to the reset (positive going) portion of the ramp.

e. Set the horizontal controls to delayed sweep and position the ramp reset portion near the center of the display.

f. The reset portion should show more than one line, as in figure 4-17. The lines should not be separated by more than ten divisions on the display.

g. Change the HP 3325B function to positive slope ramp and set oscilloscope trigger to negative to verify the positive ramp.

h. Increase the HP 3325B frequency to 99.999999 Hz to check the low frequency ramps. Verify that ramp period variations do not exceed ten divisions.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

OPERATIONAL VERIFICATION RECORD

Hewlett-Packard
Model 3325B
Synthesizer/Function Generator
Serial No. _____

Tested by _____

Date _____

	Self Test	Passed _____
	Sine Wave Verification	
Step d	20 MHz: Frequency and Amplitude	Passed _____
Step g	Signal Purity	Passed _____
	High Voltage Output (1 MHz)	Passed _____
	Square Wave Verification	
Step c	Frequency and Amplitude	Passed _____
Steps d & e	Aberrations	Passed _____
Step f	Rise Time	Passed _____
	Triangle and Ramp Verification	
Step c	Triangle Freq. and Amptd.	Passed _____
Step d	+ Ramp Freq. and Amptd.	Passed _____
Step e	− Ramp Freq. and Amptd.	Passed _____
Step f	− Ramp Retrace Time	Passed _____
Step g	+ Ramp Retrace Time	Passed _____
Step i	Triangle Linearity	Passed _____
	Amplitude Flatness	Passed _____

	Spec	
Sync Output Check	High _____	> + 1.2 V
	Low _____	< 0.2 V

	Frequency Accuracy	Spec.
Step c	Sine, 20 MHz	_____ ± 100 Hz
Step d	Square, 10 MHz	_____ ± 50 Hz
Step e	Triangle, 10 kHz (100,000 ns)	_____ ± .5 ns
Step f	Ramp, 10 kHz (100,000 ns)	_____ ± .5 ns

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Fall Time	_____ < 20 ns
Overshoot, Positive Peak	_____ < 500 mV
Overshoot, Negative Peak	_____ < 500 mV
Ramp Retrace Time	
+ Ramp	_____ < 3 μs
− Ramp	_____ < 3 μs
Sync Output	
V_{high}	_____ > +1.2 V
V_{low}	_____ < +0.2 V
Square Wave Symmetry	_____ < 3.2 ns
Frequency Accuracy	
Sine, 20 MHz	_____ ± 100 Hz
Square, 10 MHz	_____ ± 50 Hz
Triangle, 10 kHz (100,000 ns)	_____ ± .5 ns
Ramp, 10 kHz (100,000 ns)	_____ ± .5 ns

Phase Increment Accuracy

	Minimum	Time Difference	Maximum
Zero Phase Time Interval _____			
1° Increment Time Interval _____	22.22 ns	_____	33.34 ns
10° Increment Time Interval _____	272.22 ns	_____	283.34 ns
100° Increment Time Interval _____	2772.22 ns	_____	2783.34 ns

Phase Modulation Linearity

DVM Reading	Phase Difference	Cumulative Phase	x times y	x^2
x_1 _____	1 0	y_1 0	0	
x_2 _____	2 _____	y_2 _____		
x_3 _____	3 _____	y_3 _____		
x_4 _____	4 _____	y_4 _____		
x_5 _____	5 _____	y_5 _____		
x_6 _____	6 _____	y_6 _____		
x_7 _____	7 _____	y_7 _____		
x_8 _____	8 _____	y_8 _____		
x_9 _____	9 _____	y_9 _____		
x_{10} _____	10 _____	y_{10} _____		
x_{11} _____	11 _____	y_{11} _____		
Σx _____		Σy _____	Σxy _____	Σx^2 _____
$(\Sigma x)^2$ _____		$\Sigma x \Sigma y$ _____		

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PERFORMANCE TEST RECORD

Hewlett-Packard
Model 3325B
Synthesizer/Function Generator
Serial No._____

Tested By_____

Date_____

Harmonic Distortion

Fundamental Frequency	Specification
20 MHz	_____ – 25 dB
15 MHz	_____ – 30 dB
2 MHz	_____ – 40 dB
200 kHz	_____ – 60 dB
50 kHz	_____ – 65 dB
10 kHz	_____ – 65 dB
1 kHz	_____ – 65 dB
100 Hz	_____ – 65 dB

High Voltage Output (Option 002)

100 Hz	_____ – 65 dB
10 kHz	_____ – 65 dB
200 kHz	_____ – 60 dB
1 MHz	_____ – 40 dB

Spurious Signal

Mixer Spurious (2:1 spur/3:2 spur) _____ – 70 dB

	2:1 spur	3:2 spur	
4.100MHz	___	___	– 70dB
6.100MHz	___	___	– 70dB
8.100MHz	___	___	– 70dB
10.100MHz	___	___	– 70dB
12.100MHz	___	___	– 70dB
14.100MHz	___	___	– 70dB
16.100MHz	___	___	– 70dB
18.100MHz	___	___	– 70dB
20.100MHz	___	___	– 70dB

Close-in Spurious

5.0001MHz	_____ – 70dB
5.00001MHz	_____ – 70dB
5.000001MHz	_____ – 70dB
20.001MHz	_____ – 70dB
	_____ – 70dB
	_____ – 70dB
	_____ – 70dB

Integrated Phase Noise

19.901 MHz _____ – 60 dB

Amplitude Modulation Envelope Distortion _____ – 30 dB

Square Wave Rise Time and Aberrations

Rise Time _____ < 20 ns

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Operational Verification

Output Level and Attenuator Check

(DC Offset Only)

Entry	Min.		Max.
−5 V	−4.980 V	_____	−5.020 V
(+)5 V	+4.980 V	_____	+5.020 V
* (±) 1.499V	(±) 1.49300V	_____	(±) 1.50499V
499.9 mV	+0.49790 V	_____	+0.50190 V
149.9 mV	+0.14930 V	_____	+0.15050 V
49.99 mV	+0.04979 V	_____	+0.05019 V
14.99 mV	+0.01493 V	_____	+0.01505 V
4.999 mV	+0.04979 V	_____	+0.005019 V
1.499 mV	+0.001479 V	_____	+0.001519 V

* All entries and limits are ±

High Voltage Output (Option 002)

20 V	+19.775 V	_____	+20.225 V
−20 V	−19.775 V	_____	−20.225 V

Harmonic Distortion

		All Harmonics Below:
20 MHz	_____	−25 dB
15 MHz	_____	−30 dB
2 MHz	_____	−40 dB
200 kHz	_____	−60 dB
50 kHz	_____	−65 dB
10 kHz	_____	−65 dB
1 kHz	_____	−65 dB
100 Hz	_____	−65 dB

High Voltage Output (Option 002)

100 Hz	_____	−65 dB
10 kHz	_____	−65 dB
200 kHz	_____	−60 dB
1 MHz	_____	−40 dB

Close-In Spurious Signal Test Passed _____

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Best Fit Straight Line Phase	Minimum Limit	Measured Cumulative Phase	Maximum Limit
(y_1) _____	_____	y_1 0	_____
(y_2) _____	_____	y_2 _____	_____
(y_3) _____	_____	y_3 _____	_____
(y_4) _____	_____	y_4 _____	_____
(y_5) _____	_____	y_5 _____	_____
(y_6) _____	_____	y_6 _____	_____
(y_7) _____	_____	y_7 _____	_____
(y_8) _____	_____	y_8 _____	_____
(y_9) _____	_____	y_9 _____	_____
(y_{10}) _____	_____	y_{10} _____	_____
(y_{11}) _____	_____	y_{11} _____	_____

Specification: ±0.5% of (y_{11}) = ±_____°

Amplitude Accuracy

Entry	Minimum	Measured	Maximum
Sine Wave Test			
Amplitude: 3.536 Vrms			
Sine, 100 Hz	3.495 V	_____	3.577 V
Sine, 1 kHz	3.495 V	_____	3.577 V
Sine, 100 kHz	3.495 V	_____	3.577 V
Amplitude: 1.061 Vrms			
Sine, 100 Hz	1.048 V	_____	1.073 V
Sine, 1 kHz	1048 V	_____	1.073 V
Sine, 100 kHz	1.048 V	_____	1.073 V
Amplitude: 0.3536 Vrms			
DC, 1 mV			
Sine, 100 Hz	0.3411 V	_____	0.3660 V
Sine, 1 kHz	0.3411 V	_____	0.3660 V
Sine, 100 Hz	0.3411 V	_____	0.3660 V
Function Test			
Amplitude:10 Vpp			
Square, 99.9 Hz	3.661V	_____	3.735V
Triangle, 99.9 Hz	3.643V	_____	3.754V
Pos Ramp, 99.9 Hz	3.643V	_____	3.754V
Neg Ramp, 99.9 Hz	3.643V	_____	3.754V
Square, 1 kHz	3.661V	_____	3.735V

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Triangle, 2 kHz	3.643V	_____	3.754V
Pos Ramp, 500 Hz	3.643V	_____	3.754V
Neg Ramp, 500 Hz	3.643V	_____	3.754V
Square, 100 kHz	3.661V	_____	3.735V
Triangle, 10 kHz	3.513V	_____	3.883V
Pos Ramp, 10 kHz	3.328V	_____	3.996V
Neg Ramp, 10 kHz	3.328V	_____	3.996V

Amplitude: 3 Vpp

Square, 99.9 Hz	2.970 V	_____	3.030 V
Triangle, 99.9 Hz	2.955 V	_____	3.045 V
Pos Ramp, 99.9 Hz	2.955 V	_____	3.045 V
Neg Ramp, 99.9 Hz	2.955 V	_____	3.045 V
Square, 1 kHz	2.970 V	_____	3.030 V
Triangle, 2 kHz	2.955 V	_____	3.045 V
Pos Ramp, 500 Hz	2.955 V	_____	3.045 V
Neg Ramp, 500 Hz	2.955 V	_____	3.045 V
Square, 100 kHz	2.970 V	_____	3.030 V
Triangle, 10 kHz	2.850 V	_____	3.150 V
Pos Ramp, 10 kHz	2.700 V	_____	3.300 V
Neg Ramp, 10 kHz	2.700 V	_____	3.300 V

Amplitude: 1 Vpp
DC: 1 mV

Square, 99.9 Hz	0.970 V	_____	1.030 V
Triangle, 99.9 Hz	0.960 V	_____	1.040 V
Pos Ramp, 99.9 Hz	0.960 V	_____	1.040 V
Neg Ramp, 99.9 Hz	0.960 V	_____	1.040 V
Square, 1 kHz	0.970 V	_____	1.030 V
Triangle, 2 kHz	0.960 V	_____	1.040 V
Pos Ramp, 500 Hz	0.960 V	_____	1.040 V
Neg Ramp, 500 Hz	0.960 V	_____	1.040 V
Square, 100 kHz	0.970 V	_____	1.030 V
Triangle, 10 kHz	0.940 V	_____	1.060 V
Pos Ramp, 10 kHz	0.890 V	_____	1.110 V
Neg Ramp, 10 kHz	0.890 V	_____	1.110 V

High Voltage (Option 002) Sinewave Test

Amplitude: 14.14 Vrms

Sine, 2 kHz	13.86 V	_____	14.42 V

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

High Voltage (Option 002) Function Test

Amplitude: 40 Vpp

Square, 2 kHz	3.466V	_____	3.607V
Triangle, 2 kHz	3.466V	_____	3.607V
Pos Ramp, 2 kHz	3.466V	_____	3.607V
Neg Ramp, 2 kHz	3.466V	_____	3.607V

Amplitude Flatness

Sine, 3 Vpp, 1 kHz (Reference)		_____	= Y
Allowable tolerance (±6.6%)	_____ (0.934Y)		_____ (1.066Y)
2.001 MHz		_____	
4.001 MHz		_____	
6.001 MHz		_____	
8.001 MHz		_____	
10.001 MHz		_____	
12.001 MHz		_____	
14.001 MHz		_____	
16.001 MHz		_____	
18.001 MHz		_____	
20.001 MHz		_____	
Sine, 10 Vpp, 1 kHz (Reference)		_____	= Y
Allowable tolerance (±6.3%)	_____ (0.937Y)		_____ (1.063Y)
2.001 MHz		_____	
4.001 MHz		_____	
6.001 MHz		_____	
8.001 MHz		_____	
10.001 MHz		_____	
12.001 MHz		_____	
14.001 MHz		_____	
16.001 MHz		_____	
18.001 MHz		_____	
20.001 MHz		_____	

Square, 10 Vpp, _____ Pass (check one) _____ Fail

High Voltage (Option 002) Flatness

Sine, 40 Vpp, _____ Pass (check one) _____ Fail

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

DC Offset Accuracy (DC Only)

Entry	Minimum	Maximum
5 V	+4.980 V	+5.020 V
−5 V	−4.980 V	−5.020 V
−1.499 V	−1.49300 V	−1.50499 V
1.499 V	+1.49300 V	+1.50499 V
499.9 mV	+0.49790 V	0.50190 V
−499.9 mV	−0.49790 V	−0.50190 V
−149.9 mV	−0.14930 V	−0.15050 V
149.9 mV	+0.14930 V	+0.15050 V
49.99 mV	+0.04979 V	+0.05019 V
−49.9 mV	−0.04979 V	−0.05019 V
−14.99 mV	−0.01493 V	−0.01505 V
14.99 mV	+0.01493 V	+0.01505 V
4.999 mV	+0.004979 V	+0.005019 V
−4.999 mV	−0.004979 V	−0.005019 V
−1.499 mV	−0.001479 V	−0.001519 V
1.499 mV	+0.001479 V	+0.001519 V

High Voltage Output Option 002

20 V	+19.775 V	+20.225 V
−20 V	−19.775 V	−20.225 V

DC Offset Accuracy with AC Functions

Sine 20.999 999 999 MHz	Minimum	Maximum
4.5 V	+4.350 V	+4.650 V
−4.5 V	−4.350 V	−4.650 V

Sine 999.9 kHz

−4.5 V	−4.440 V	−4.560 V
4.5 V	+4.440 V	+4.560 V

Square 999.9 kHz

4.5 V	+4.440 V	+4.560 V
−4.5 V	−4.440 V	−4.560 V

Square 9.9999 MHz

−4.5 V	−4.350 V	−4.650 V

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Triangle 9.9 kHz

– 4.5 V	– 4.440 V_____	– 4.560 V

Ramp 9.9 kHz

– 4.5 V	– 4.380 V_____	– 4.620 V

Triangle Linearity

x Values	Positive Slope Measurement	x times y	Calculated Best Fit Straight Line	Tolerances Minimum	Tolerances Maximum
$x_1 = 1$	(10%) y_1_____	_____	(y_1)_____	_____	_____
$x_2 = 2$	(20%) y_2_____	_____	(y_2)_____	_____	_____
$x_3 = 3$	(30%) y_3_____	_____	(y_3)_____	_____	_____
$x_4 = 4$	(40%) y_4_____	_____	(y_4)_____	_____	_____
$x_5 = 5$	(50%) y_5_____	_____	(y_5)_____	_____	_____
$x_6 = 6$	(60%) y_6_____	_____	(y_6)_____	_____	_____
$x_7 = 7$	(70%) y_7_____	_____	(y_7)_____	_____	_____
$x_8 = 8$	(80%) y_8_____	_____	(y_8)_____	_____	_____
$x_9 = 9$	(90%) y_9_____	_____	(y_9)_____	_____	_____
$\Sigma x = 45$	Σy_____	Σxy ____			
$(\Sigma x)^2 = 2025$	$\Sigma x \Sigma y$ _____				
$\Sigma x^2 = 285$					

x Values	Negative Slope Measurement	x times y	Calculated Best Fit Straight Line	Tolerances Minimum	Tolerances Maximum
$x_9 = 9$	(90%) y_9_____	_____	(y_9)_____	_____	_____
$x_8 = 8$	(80%) y_8_____	_____	(y_8)_____	_____	_____
$x_7 = 7$	(70%) y_7_____	_____	(y_7)_____	_____	_____
$x_6 = 6$	(60%) y_6_____	_____	(y_6)_____	_____	_____
$x_5 = 5$	(50%) y_5_____	_____	(y_5)_____	_____	_____
$x_4 = 4$	(40%) y_4_____	_____	(y_4)_____	_____	_____
$x_3 = 3$	(30%) y_3_____	_____	(y_3)_____	_____	_____
$x_2 = 2$	(20%) y_2_____	_____	(y_2)_____	_____	_____
$x_1 = 1$	(10%) y_1_____	_____	(y_1)_____	_____	_____
$\Sigma z = 45$	Σy_____	Σxy ____			
$(\Sigma x)^2 = 2025$	$\Sigma x \Sigma y$ _____				
$\Sigma x^2 = 285$					

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

x Drive Linearity

x Values	Positive Slope Measurement	x times y	Calculated Best Fit Straight Line	Tolerances Minimum	Tolerances Maximum
$x_1 = 1$	(10%) y_1 _____	_____	(y_1) _____	_____	_____
$x_2 = 2$	(20%) y_2 _____	_____	(y_2) _____	_____	_____
$x_3 = 3$	(30%) y_3 _____	_____	(y_3) _____	_____	_____
$x_4 = 4$	(40%) y_4 _____	_____	(y_4) _____	_____	_____
$x_5 = 5$	(50%) y_5 _____	_____	(y_5) _____	_____	_____
$x_6 = 6$	(60%) y_6 _____	_____	(y_6) _____	_____	_____
$x_7 = 7$	(70%) y_7 _____	_____	(y_7) _____	_____	_____
$x_8 = 8$	(80%) y_8 _____	_____	(y_8) _____	_____	_____
$x_9 = 9$	(90%) y_9 _____	_____	(y_9) _____	_____	_____
$\Sigma z = 45$	Σy _____	Σxy ____			
$(\Sigma x)^2 = 2025$	$\Sigma x \Sigma y$ _____				
$\Sigma x^2 = 285$					

Ramp Period Variation

Negative Slope Ramp, 100 Hz _____ < ± 100 μs

Positive Slope Ramp, 100 Hz _____ < ± 100 μs

Positive Slope Ramp, 99.9 Hz _____ < ± 100 μs

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

FREQUENCY

Range:
Sine: 1 μHz to 20.999 999 999 MHz
Square: 1 μHz to 10.999 999 999 MHz
Triangle/Ramps: 1 μHz to 10.999 999 999 kHz
Resolution:
1 μHz, <100 kHz
1 mHz ≥ 100 kHz (1 μHz available, not displayed)
Accuracy:
$\pm 5 \times 10^{-6}$ of selected value, 20°C to 30°C, at time of calibration ,(Standard Instrument)

Stability:
$\pm 5 \times 10^{-6}$/year, 20°C to 30°C, standard (See also option 001, high stability frequency reference)
Warm-up Time:
20 minutes to within specified accuracy.

MAIN SIGNAL OUTPUT

(all waveforms)
Impedance:
50Ω ± 1Ω, 0–10 kHz
Return Loss:
>20 dB, 10 kHz to 20 MHz, except >10 dB for >3 V, 5 MHz to 20 MHz
Connector:
BNC; switchable to front or rear panel, non-switchable with option 002 except by internal cable change.
Floating:
Output may be floated up to 42V peak (AC + DC)

AMPLITUDE (all waveforms)

Resolution:
0.03% of full range or 0.01 dB (4 digits).
Range:
1 mV to 10 Vp-p in 8 amplitude ranges, 1–3–10 sequence. Ranges are 1 mV–2.999 mV, 3 mV–9.999 mV, 10 mV–29.99 mV, 30 mV–99.99 mV, .1 V–.2999 V, .3 V–.9999 V, 1V–2.999 V, 3 V–10V, *(without DC offset).*

Function	peak to peak	rms	dBm(50Ω)
Sine min.	1.000 mV	0.354 mV	−56.02
max.	10.00 V	3.536 V	+23.98
Square min.	1.000 mV	0.500 mV	−53.01
max.	10.00 V	5.000 V	+26.99
Triangle/ Ramps min.	1.000 mV	0.289 mV	−57.78
max.	10.00 V	2.887 V	+22.22

Accuracy: (with 0 Vdc offset)
Sine:

	.001 Hz	100 kHz	10 MHz	20 MHz
+23.98 dBm	± .1 dB	± .4 dB		
+13.52 dBm	± .2 dB	± .6 dB	± .6 dB	
−16.02 dBm			± .9 dB	
−56.02 dBm				

Square Wave:

	.001 Hz	100 kHz	10 MHz
10 Vp-p	± 1.0%	± 11.1%	
3 Vp-p			
1 mVp-p	± 2.2%	± 13.6%	

Triangle:

	.001 Hz	2 kHz	10 kHz
10 Vp-p	± 1.5%	± 5.0%	
3 Vp-p			
1 mVp-p	± 2.7%	± 6.2%	

Ramps:

	.001 Hz	500 kHz	10 kHz
10 Vp-p	± 1.5%	± 10%	
3 Vp-p			
1 mVp-p	± 2.7%	± 11.2%	

With DC offset, increase all sinewave tolerances by .2 dB and all function tolerances by 2%.

SINEWAVE SPECTRAL PURITY

Phase Noise:
− 60 dBc for a 30 kHz band centered on a 20 MHz carrier (excluding ±1 Hz about the carrier) with option 001 installed.
Spurious:
All non-harmonically related output signals will be more than 70 dB below the carrier (−60 dBc with DC offset), or less than −90 dBm, whichever is greater.

WAVEFORM CHARACTERISTICS

Sinewave Harmonic Distortion:
Harmonically related signals will be less than the following levels relative to the fundamental:

Frequency Range	Harmonic Level
.1 Hz to 50 kHz	−65 dBc
50 kHz to 200 kHz	−60 dBc
200 kHz to 2 MHz	−40dBc
2 MHz to 15 MHz	−30 dBc
15 MHz to 20 MHz	−25 dBc

Squarewave Characteristics:
Rise/fall time: ≤20 ns 10% to 90%, at full output.
Overshoot: ≤5% of peak to peak amplitude, at full output.at 1MHz.
Settling time: <1 μs to settle to within .05% of final value, tested at full output with no load, 10 Hz to 500 kHz.
Symmetry: ≤.02% of period + 3 ns.
Triangle/Ramp Characteristics:
Triangle/ramp linearity (10% to 90%, 10 kHz): ± .05% of full p-p output for each range.
Ramp retrace time: ≤3 μs, 90% to 10%.
Period variation for alternate ramp cycles: ≤1% of period.

DC OFFSET

Range:
DC only (no AC signal): 0 to ± 5.0 V/50Ω
DC + AC: Maximum DC offset ± 4.5 V on highest range; decreasing to ± 4.5 mV on lowest range.
Resolution: 4 digits
Accuracy:
DC only: ± .02 mV to ± 20 mV, depends on offset chosen.
DC + AC, to 1 MHz: ± .06 mV to ± 60 mV, depends on AC output level, ± .2 mV to ± 120 mV for ramps to 10 kHz.
DC + AC, 1 MHz to 20 MHz: ± 15 mV to ± 150 mV, depends on AC output level.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PHASE OFFSET

Range:
±719.9° with respect to arbitrary starting phase, or assigned zero phase.
Resolution: 0.1°
Increment Accuracy: ±0.2°
Stability: ±1.0 degree of phase/°C

SINEWAVE AMPLITUDE MODULATION

Modulation Depth (at full output for each range):
0–100%
Modulation Frequency Range:
DC to 400 kHz (0–21 MHz carrier frequency)
Envelope Distortion:
–30 dB to 80% modulation at 1 kHz, 0 VDC offset
Sensitivity:
±5 V peak for 100% modulation
Input Impedance: 10 kΩ
Connector: Rear panel BNC

PHASE MODULATION

Sine Function Range:
± 850°, ±5V input
Sine Function-Linearity:
±0.5%, best fit straight line
Squarewave Range: ±425°
Triangle Range: ±42.5°
Positive and Negative Ramps:
±85°
Modulation Frequency Range:
DC – 5 kHz
Input Impedance: >40 kΩ
Connector: Rear panel BNC

FREQUENCY SWEEP

Sweep Time:
Linear: 0.01s to 1000s
Logarithmic: 1s to 1000s single, 0.1s to 1000s continuous
Maximum Sweep Width:
Full frequency range of the main signal output for the waveform in use except minimum log start frequency is 1 Hz.
Minimum Sweep Width:

	Minimum sweep width	
Function	Sweep time .01 sec.	Sweep time 99.9 sec.
Sine:	.1 mHz	999.9 mHz
Square:	.05 mHz	499.5 mHz
Triangle:	.005 mHz	49.95 mHz
Ramps:	.01 mHz	99.99 mHz

Minimum log sweep width is 1 decade.
Phase Continuity:
Sweep is phase continuous over the full frequency range of the main output.
Discrete Sweep:
Number of segments: 100 maximum (Start and stop frequencies settable for each segment)
Time/segment: 0.01s to 1000s, 0.01s resolution

MODULATION SOURCE:

Frequency Range: Sine 0.1 Hz–10 kHz, Square 0.1 Hz–2 kHz
Frequency Resolution: 2 digits
Frequency Accuracy: Typically 0.1% (Sinewave)
Amplitude Range: 0.1 Vp-p to 12 Vp-p
Amplitude Resolution: 0.1 V
Amplitude Accuracy: Typically ± 200 mV
Impedance: Designed to drive ≥ 10 kOhm loads
Sinewave Purity: Typically better than –34 dBc
Standard Waveforms: Sine, Square
Arbitrary Waveforms: Vertical resolution 256 points, horizontal resolution 4096 points, 300,000 samples/sec, 10 kHz maximum.
Output Location: Rear Panel BNC

AUXILIARY OUTPUTS

Auxiliary Frequency Output:
Frequency Range: 21 MHz to 60.999 999 999 MHz, underrange coverage to 19.000 000 001 MHz, frequency selection from front panel.
Amplitude: 0 dBm; output impedance: 50Ω
Connector: Rear panel BNC
Sync Output:
Square wave with $V_{high} \geq 1.2$ V, $V_{low} \leq 0.2$ V into 50Ω. Frequency range is the same as the main signal output for front panel sync and DC-60 MHz for rear panel sync.
Output impedance: 50Ω
Connector: BNC front and rear panels.
X-Axis Drive:
(0–100s sweeps only)
0 to +10 Vdc linear ramp proportional to sweep frequency; linearity, 10–90%, ± .1% of final value (applies for sweep widths which are integer multiples of the minimum sweep width).
Connector: Rear panel BNC.
Sweep Marker Output:
High to low TTL compatible voltage transition at keyboard selected marker frequency. (Linear sweep only.)
Connector: Rear panel BNC.
Z-Axis Blank Output:
TTL compatible voltage levels capable of sinking current from a positive source. Current 200 mA, voltage 45V, power dissipation 1 watt maximum.
1 MHz Reference Output:
0 dBm output for phase-locking additional instruments to the HP 3325B.
Connector: Rear panel BNC.
10 MHz Oven Output:
0 dBm internal high stability frequency reference output for phase-locking HP 3325B or other instruments (option 001 only).
Connector: Rear panel BNC.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

AUXILIARY INPUTS

Reference Input:

For phase-locking HP 3325B to an external frequency reference. Signal from 0 dBm to + 20 dBm into 50Ω. Reference signal must be a subharmonic of 10 MHz from 1 MHz to 10 MHz.

Connector: Rear panel BNC. With option 001 this input may be jumpered to the 10 MHz reference output.

Amplitude Modulation Input:

See modulation specifications.

Phase Modulation Input:

See modulation specifications.

REMOTE CONTROL

Frequency Switching Time (to within 1 Hz exclusive of programming time:

≤10 ms for 100 kHz step; ≤25 msec for 1 MHz step; ≤70 msec for 20 MHz step.

Phase Switching Time (to within 90° of phase lock exclusive of programming time:

≤15 msec.

Amplitude Switching Time (to within amplitude specifications, exclusive of programming time): <30 ms.

HP-IB Interface Functions:

SH1, AH1, T6, L3, SR1, RL1, PP0, DC1, DT1, C0, E1

RS-232 Interface:

Subset of ANSI/EIA-232D-1986, CCITT V.24

Type: DTE, 25 pin female "D" connector

Baud Rate: 300-4800

OPTION 001 HIGH STABILITY FREQUENCY REFERENCE

Aging Rate:

$\pm 5 \times 10^{-8}$/week, after 72 hours continuous operation; $\pm 1 \times 10^{-7}$ mo., after 15 days continuous operation.

Warm-up time:

Reference will be within $\pm 1 \times 10^{-7}$ of final value 15 minutes after turn-on at 25°C for an off time of less than 24 hours.

OPTION 002 HIGH VOLTAGE OUTPUT

Frequency Range: 1 μHz to 1 MHz

Amplitude:

Range: 4.00 mV to 40.00 Vp-p in 8 ranges, 4-12-40 sequence, into 500Ω < 500 pF load. Ranges are four times the standard instrument ranges, without DC offset.

Accuracy: ± 2% of full output for each range at 2 kHz.

Flatness: ± 10% relative to programmed amplitude.

Sinewave Distortion:

Harmonically related signals will be less than the following levels (relative to the fundamental full output into 500Ω, load):

10 Hz-50 kHz: − 65 dB

50 kHz-200 kHz: − 60 dB

200 kHz-1 MHz: − 40 dB

Square Wave Rise/Fall Time:

± 125 ns, 10% to 90% at full output, with 500Ω, 500 pF load.

Square Wave Overshoot:

± 10% of peak to peak amplitude with 500Ω, 500 pF load.

Output Impedance:

<2Ω at DC, <10Ω at 1 MHz

DC Offset:

Range: 4 times the specified range of the standard instrument.

Accuracy: ± (1% of full output for each range + 25 mV).

Maximum Output Current:

± 20 mA peak

GENERAL

Operating Environment:

Temperature: 0°C to 55° C

Relative Humidity: 95%, 0°C to 40°C

Altitude: ≤15,000 ft.

Power:

100/120/220/240 V, + 5%, − 10%; 48 to 66 Hz; 90 VA, 120 VA with all options

Weight:

9 kg (20 lbs) net; 14.5 kg (32 lbs) shipping

Dimensions:

133.4 mm high × 425.5 mm wide × 498.5 mm deep (5¼" H × 16¾" W × 19⅝" D)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Index

A

Amplitude
- Accuracy test 4-38
- Flatness check 4-15
- Modulation envelope distortion test 4-28

Attenuator check 4-16

C

Circuit breaker 4-3

D

DC offset accuracy
- AC functions test 4-46
- DC only test 4-45

F

Frequency accuracy test 4-16, 4-32

H

Harmonic distortion test 4-17, 4-23
High voltage output
- Amplitude accuracy test 4-41, 4-44
- DC offset accuracy test 4-45
- Harmonic distortion check 4-18
- Harmonic distortion test 4-24
- Sine wave verification 4-13

HP-IB system interface connections 4-8

I

Initial inspection 4-2
Installation 4-6
Instrument cooling 4-6

L

Line voltage selection 4-3

O

Operating environment 4-6
Operational verification
- Amplitude flatness 4-15
- Close-in spurious signal 4-19
- Frequency accuracy 4-16
- Harmonic distortion 4-17
- Output level and attenuator 4-16
- Required test equipment 4-11
- Self test 4-12
- Sine wave 4-12
- Square wave 4-13
- Sync output 4-15
- Triangle and ramp 4-14

Output level check 4-16
Over-voltage circuit breaker 4-3

P

Performance tests
- Amplitude accuracy 4-38
- Amplitude modulation envelope distortion 4-28
- DC offset accuracy 4-45
- DC offset accuracy with ac functions 4-46
- Frequency accuracy 4-32
- Harmonic distortion 4-23
- Integrated phase noise 4-27
- Phase increment accuracy 4-33
- Phase modulation linearity 4-34
- Ramp period variation 4-54
- Ramp retrace time 4-30
- Required test equipment 4-20
- Spurious signal 4-25
- Square wave rise time and aberrations 4-29
- Square wave symmetry 4-31
- Sync output 4-30
- Triangle linearity 4-47
- X drive linearity 4-50

Phase
- Increment accuracy test 4-33
- Integrated phase noise test 4-27
- Modulation linearity test 4-34

Power
- Cable grounding requirements 4-4
- Requirements 4-2

R

Ramp
- Period variation test 4-54
- Retrace time test 4-30
- Verification 4-14

Required test equipment
- Operational verification 4-11
- Performance tests 4-20

S

Self test 4-12
Sine wave verification 4-12
Spurious signal test 4-19, 4-25
Square wave
- Rise time and aberrations test 4-29
- Symmetry test 4-31
- Verification 4-13

Storage and shipment 4-10
Sync output test 4-15, 4-30

T

Triangle
- Linearity test 4-47
- Verification 4-14

X

X drive linearity test 4-50

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP