ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions


Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Inficon BPG400 DN 40 CF-R* at our website: ***Click HERE***

Bayard-Alpert Pirani Gauge

BPG400
BPG400-SD
BPG400-SP
BPG400-SR

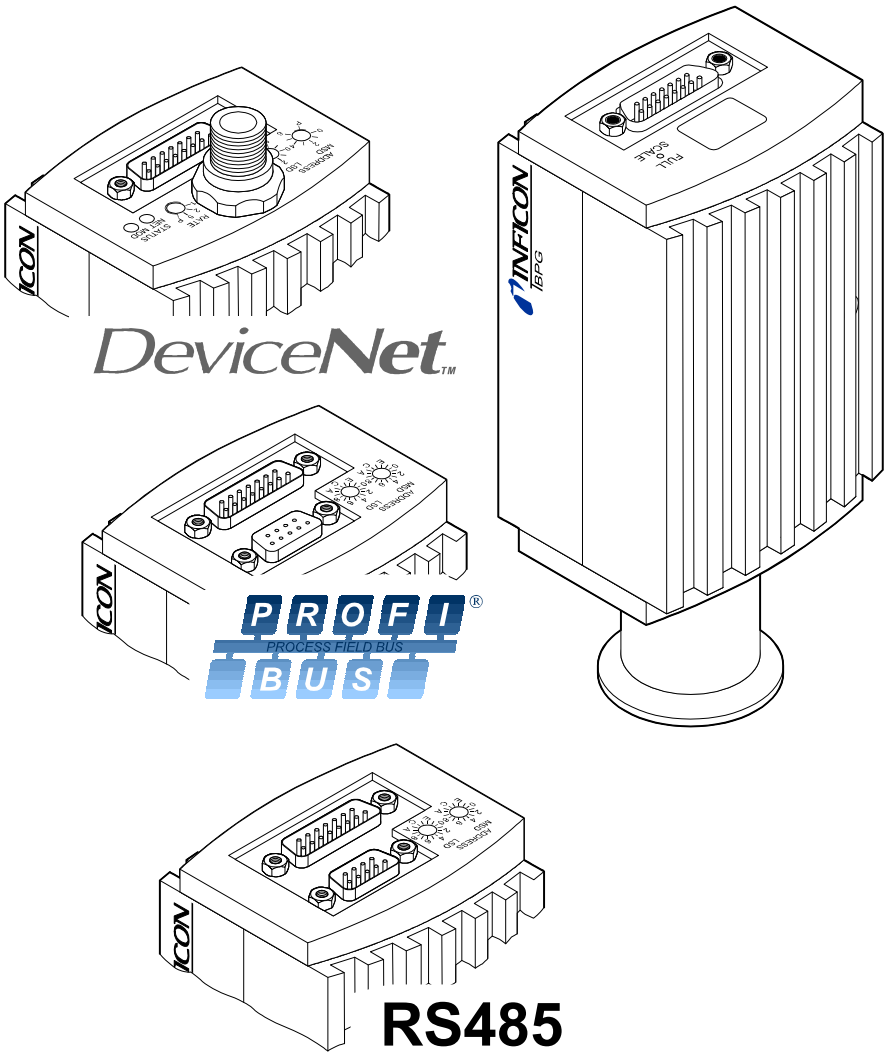


CE

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Product Identification

In all communications with INFICON, please specify the information on the product nameplate. For convenient reference copy that information into the space provided below.

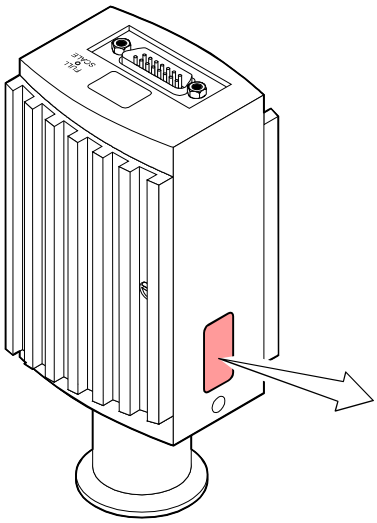

Validity

This document applies to products with the following part numbers:

BPG400 (without display)

353-500 (vacuum connection DN 25 ISO-KF)
353-502 (vacuum connection DN 40 CF-R)

BPG400 (with display)

353-501 (vacuum connection DN 25 ISO-KF)
353-503 (vacuum connection DN 40 CF-R)

BPG400-SD (with DeviceNet interface and switching functions)

353-507 (vacuum connection DN 25 ISO-KF)
353-508 (vacuum connection DN 40 CF-R)

BPG400-SP (with Profibus interface and switching functions)

353-505 (vacuum connection DN 25 ISO-KF)
353-506 (vacuum connection DN 40 CF-R)

BPG400-SR (with RS485 interface and switching functions)

353-509 (vacuum connection DN 25 ISO-KF)
353-513 (vacuum connection DN 40 CF-R)

The part number (PN) can be taken from the product nameplate.

If not indicated otherwise in the legends, the illustrations in this document correspond to gauge with part number 353-500. They apply to the other gauges by analogy.

All BPG400 versions are shipped with an instruction sheet (→ 🕮 [8]). BPG400-SD, BPG400-SP and BPG400-SR come with a supplementary instruction sheet describing the fieldbus interfaces and the switching functions (→ 🕮 [9]).

We reserve the right to make technical changes without prior notice.

Intended Use

The BPG400 gauges have been designed for vacuum measurement of non-flammable gases and gas mixtures in a pressure range of 5×10^{-10} … 1000 mbar.

The gauges can be operated in connection with the INFICON Vacuum Gauge Controller VGC103 or VGC40x or with other control devices.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Functional Principle

Over the whole measuring range, the gauge has a continuous characteristic curve and its measuring signal is output as logarithm of the pressure.

The gauge functions with a Bayard-Alpert hot cathode ionization measurement system (for $p < 2.0 \times 10^{-2}$ mbar) and a Pirani measurement system (for $p > 5.5 \times 10^{-3}$ mbar). In the overlapping pressure range of 2.0×10^{-2} … 5.5×10^{-3} mbar, a mixed signal of the two measurement systems is output. The hot cathode is switched on by the Pirani measurement system only below the switching threshold of 2.4×10^{-2} mbar (to prevent filament burn-out). It is switched off when the pressure exceeds 3.2×10^{-2} mbar.

Trademarks

DeviceNet™ Open DeviceNet Vendor Association, Inc.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Contents

Product Identification 2
Validity 2
Intended Use 2
Functional Principle 3
Trademarks 3

1 Safety 6
1.1 Symbols Used 6
1.2 Personnel Qualifications 6
1.3 General Safety Instructions 7
1.4 Liability and Warranty 7

2 Technical Data 8

3 Installation 13
3.1 Vacuum Connection 13
3.1.1 Removing and Installing the Electronics Unit 14
3.1.2 Installing the Optional Extension 16
3.1.3 Using the Optional Baffle 17
3.2 Electrical Connection 19
3.2.1 Use With INFICON VGC103 or VGC40x Vacuum Gauge Controller 19
3.2.2 Use With Other Controllers 19
3.2.2.1 Making an Individual Sensor Cable 20
3.2.2.2 Making a DeviceNet Interface Cable (BPG400-SD) 22
3.2.2.3 Making a Profibus Interface Cable (BPG400-SP) 23
3.2.2.4 Making a RS485 Interface Cable (BPG400-SR) 24
3.2.3 Using the Optional Power Supply (With RS232C Line) 25

4 Operation 27
4.1 Measuring Principle, Measuring Behavior 27
4.2 Operational Principle of the Gauge 28
4.3 Putting the Gauge Into Operation 29
4.4 Degas 29
4.5 Display (BPG400) 30
4.6 RS232C Interface 31
4.6.1 Description of the Functions 31
4.6.1.1 Output String (Transmit) 31
4.6.1.2 Input String (Receive) 33
4.7 DeviceNet Interface (BPG400-SD) 34
4.7.1 Description of the Functions 34
4.7.2 Operating Parameters 34
4.7.2.1 Operating Software 34
4.7.2.2 Node Address Setting 34
4.7.2.3 Data Rate Setting 35
4.7.3 Status Lights 35
4.8 Profibus Interface (BPG400-SP) 36
4.8.1 Description of the Functions 36
4.8.2 Operating Parameters 36
4.8.2.1 Operating Software 36
4.8.2.2 Node Address Setting 36
4.9 RS485 Interface (BPG400-SR) 37
4.9.1 Description of the Functions and Modes 37
4.9.2 Data Exchange 37
4.9.2.1 Operational Parameters 37
4.9.2.2 Device Address 38
4.9.2.3 Command Structure (Host) 38
4.9.2.4 Response Structure 38
4.9.2.5 Error Messages 38
4.9.3 Syntax Description 39
4.9.3.1 Definitions, Legend 39
4.9.3.2 Commands and Responses 40
4.9.4 Switching Functions 42
4.9.4.1 Programming the Switching Functions 43
4.10 Switching Functions (BPG400-SD, -SP, -SR) 44
4.10.1 Setting the Switching Functions 44

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5 Deinstallation **46**

6 Maintenance, Repair **47**
6.1 Maintenance 47
6.1.1 Cleaning the Gauge 47
6.2 Adjusting the Gauge 47
6.2.1 Adjustment at Atmospheric Pressure 47
6.2.2 Zero Point Adjustment 48
6.3 What to Do in Case of Problems 49
6.4 Replacing the Sensor 51

7 Options **52**

8 Spare Parts **52**

9 Storage **52**

10 Returning the Product **53**

11 Disposal **53**

Appendix **54**
A: Relationship Output Signal – Pressure 54
B: Gas Type Dependence 55
C: Literature 57

Declaration of Contamination **58**

For cross-references within this document, the symbol (→ 🗎 XY) is used, for cross-references to further documents and data sources, the symbol (→ 🕮 [Z]).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1 Safety

1.1 Symbols Used

DANGER

Information on preventing any kind of physical injury.

WARNING

Information on preventing extensive equipment and environmental damage.

Caution

Information on correct handling or use. Disregard can lead to malfunctions or minor equipment damage.



Notice



Hint, recommendation



The result is O.K.



The result is not as expected



Optical inspection



Waiting time, reaction time

1.2 Personnel Qualifications



Skilled personnel

All work described in this document may only be carried out by persons who have suitable technical training and the necessary experience or who have been instructed by the end-user of the product.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.3 General Safety Instructions

- Adhere to the applicable regulations and take the necessary precautions for the process media used.

  Consider possible reactions between the materials (→ 🗎 11) and the process media.

  Consider possible reactions of the process media (e.g. explosion) due to the heat generated by the product.
- Adhere to the applicable regulations and take the necessary precautions for all work you are going to do and consider the safety instructions in this document.
- Before beginning to work, find out whether any vacuum components are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

Communicate the safety instructions to all other users.

1.4 Liability and Warranty

INFICON assumes no liability and the warranty becomes null and void if the end-user or third parties

- disregard the information in this document
- use the product in a non-conforming manner
- make any kind of interventions (modifications, alterations etc.) on the product
- use the product with accessories not listed in the corresponding product documentation.

The end-user assumes the responsibility in conjunction with the process media used.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2 Technical Data

Measurement

Measuring range (air, N_2, O_2)	5×10^{-10} … 1000 mbar, continuous
Accuracy	15% of reading in the range of 10^{-8} … 10^{-2} mbar (after 5 min stabilization)
Repeatability	5% of reading in the range of 10^{-8} … 10^{-2} mbar (after 5 min stabilization)
Gas type dependence	→ Appendix B

Emission

Switching on threshold	2.4×10^{-2} mbar
Switching off threshold	3.2×10^{-2} mbar
Emission current	
$p \leq 7.2\times10^{-6}$ mbar	5 mA
7.2×10^{-6} mbar $< p < 3.2\times10^{-2}$ mbar	25 µA
Emission current switching	
25 µA ⇒ 5 mA	7.2×10^{-6} mbar
5 mA ⇒ 25 µA	3.2×10^{-5} mbar

Degas

Degas emission current ($p < 7.2\times10^{-6}$ mbar)	≈16 mA (P_{degas} ≈4 W)
Control input signal	0 V/+24 VDC, active high (control via RS232 → 🗎 31)
Duration	max. 3 min, followed by automatic stop

In degas mode, BPG400 gauges keep supplying measurement values, however their tolerances may be higher than during normal operation.

Output signal

Output signal (measuring signal)	0 … +10 V
Measuring range	0.774 V (5×10^{-10} mbar) … +10 V (1000 mbar)
Relationship voltage-pressure	logarithmic, 0.75 V/decade (→ Appendix A)
Error signal	<0.3 V/0.5 V (→ 🗎 49)
Minimum loaded impedance	10 kΩ

Display (BPG400)

Display panel	LCD matrix, 32×16 pixels, with background illumination
Dimensions	16.0 mm × 11.2 mm
Pressure units (pressure p)	mbar (default), Torr, Pa (selecting the pressure unit → 🗎 31)

Power supply

DANGER

The gauge must only be connected to power supplies, instruments or control devices that conform to the requirements of a grounded extra-low voltage (SELV-E according to EN 61010). The connection to the gauge has to be fused (INFICON-controllers fulfill these requirements).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Operating voltage at the gauge	+24 VDC (20 … 28 VDC) [1)] ripple max. 2 V_{pp}
Power consumption	
Standard	≤0.5 A
Degas	≤0.8 A
Emission start (<200 ms)	≤1.4 A
Power consumption	
BPG400	≤16 W
BPG400-SD, -SP, -SR	≤18 W
Fuse necessary	1.25 AT

BPG400-SD requires an additional, separate power supply for the DeviceNet interface (→ 🗎 22).

Supply voltage at the DeviceNet connector, (Pin 2 and Pin 3)	+24 VDC (+11 … 25 VDC)
Power consumption	<2 W
The gauge is protected against reversed polarity of the supply voltage.	

Sensor cable connection

For reasons of compatibility, the expression "sensor cable" is used for all BPG400 versions in this document, although the pressure reading of the gauges with fieldbus interface (BPG400-SD, BPG400-SD and BPG400-SR) is normally transmitted via the corresponding bus.

Electrical connector	D-Sub,15 pins, male
BPG400	→ 🗎 20
BPG400-SD, -SP, -SR	→ 🗎 21
Cable for BPG400	
Analog values only Without degas function	4 conductors plus shielding
Analog values With degas function	5 conductors plus shielding
Analog values With degas function And RS232C interface	7 conductors plus shielding
Cable for BPG400-SD, -SP, -SR	depending on the functions used, max. 15 conductors plus shielding
Max. cable length (supply voltage 24 V [1)])	
Analog and fieldbus operation	≤35 m, conductor cross-section 0.25 mm² ≤50 m, conductor cross-section 0.34 mm² ≤100 m, conductor cross-section 1.0 mm²
RS232C operation	≤30 m
Gauge identification	42 kΩ resistor between Pin 10 (sensor cable) and GND
Switching functions	
BPG400	none
BPG400-SD, -SP, -SR	2 (setpoints A and B)
Adjustment range	$1×10^{-9}$ mbar … 100 mbar Setpoints adjustable via potentiometers (setpoints A and B), one floating, normally open relay contact per setpoint (→ 🗎 21, 44) Adjusting the setpoints via field bus is described in the corresponding bus sections.
Relay contact rating	
Voltage	≤60 V
Current	≤0.5 ADC

[1)] Measured at sensor cable connector (consider the voltage drop as function of the sensor cable length).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RS232C interface

Data rate	9600 Baud
Data format	binary 8 data bits one stop bit no parity bit no handshake
Connections (sensor cable connector)	
TxD (Transmit Data)	Pin 13
RxD (Receive Data)	Pin 14
GND	Pin 5

(Function and communication protocol of the RS232C interface → 🗎 31)

DeviceNet interface (BPG400-SD)

Fieldbus name	DeviceNet
Standard applied	→ 🕮 [6]
Communication protocol, data format	→ 🕮 [1], [4]
Interface, physical	CAN bus
Data rate (adjustable via "RATE" switch)	125 kBaud 250 kBaud 500 kBaud "P" (125 kBaud, 250 kBaud, 500 kBaud programmable via DeviceNet (→ 🕮 [1])
Node address (MAC ID) (Adjustable via "ADDRESS", "MSD", "LSD" switches)	$0 \ldots 63_{dec}$ "P" (0 … 63 programmable via DeviceNet, → 🕮 [1])
DeviceNet connector	Micro-Style, 5 pins, male
Cable	Shielded, special DeviceNet cable, 5 conductors (→ 🗎 22 and 🕮 [4])
Cable length, system wiring	According to DeviceNet specifications (→ 🕮 [6], [4])

Profibus interface (BPG400-SP)

Fieldbus name	Profibus
Standard applied	→ 🕮 [7]
Communication protocol data format	→ 🕮 [10], [7]
Interface, physical	RS485
Data rate	≤12 MBaud (→ 🕮 [10])
Node address	
Local (Adjustable via hexadecimal "ADDRESS", "MSD", "LSD" switches)	$00 \ldots 7D_{hex}$ ($0 \ldots 125_{dec}$)
Via Profibus (hexadecimal "ADDRESS" switches set to $>7d_{hex}$ ($>125_{dec}$))	$00 \ldots 7D_{hex}$ ($0 \ldots 125_{dec}$)
Profibus connection	D-Sub, 9 pins, female
Cable	Shielded, special Profibus cable (→ 🗎 23 and 🕮 [5])
Cable length, system wiring	According to Profibus specifications (→ 🕮 [7], [5])

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RS485 interface (BPG400-SR)

Fieldbus name	RS485
Data rate	300 … 28'800 Baud
Device address (Adjustable via hexadecimal "ADDRESS", "MSD", "LSD" switches)	00 … $7F_{hex}$ (0 … 127_{dec}), (→ 🗎 38)
RS485 connection	D-Sub, 9 pins, male
Cable	shielded RS485 cable (→ 🗎 24)
Cable length	≤100m

Vacuum

Materials exposed to vacuum	
Housing, supports, screens	stainless steel
Feedthroughs	NiFe, nickel plated
Insulator	glass
Cathode	iridium, yttrium oxide (Y_2O_3)
Cathode holder	molybdenum
Pirani element	tungsten, copper
Internal volume	
DN 25 ISO-KF	≤24 cm^3
DN 40 CF-R	≤34 cm^3
Pressure max.	2 bar (absolute)

Weight

Part number	
353-500, 353-501	≈290 g
353-502, 353-503	≈550 g
353-505, 353-507, 353-509	≈430 g
353-506, 353-508, 353-513	≈695 g


Ambiance


Admissible temperatures	
Storage	-20 … 70 °C
Operation	0 … 50 °C
Bakeout	+150 °C (without electronics unit or with bakeout extension → 🗎 16)
Relative humidity (year's mean / during 60 days)	≤65 / 85% (no condensation)
Use	indoors only altitude up to 2000 m NN
Type of protection	IP 30

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Dimensions


Part number	Part number
353-500	353-502
353-501	353-503
353-505	353-506
353-509	353-513
(353-507) [1]	(353-508) [1]

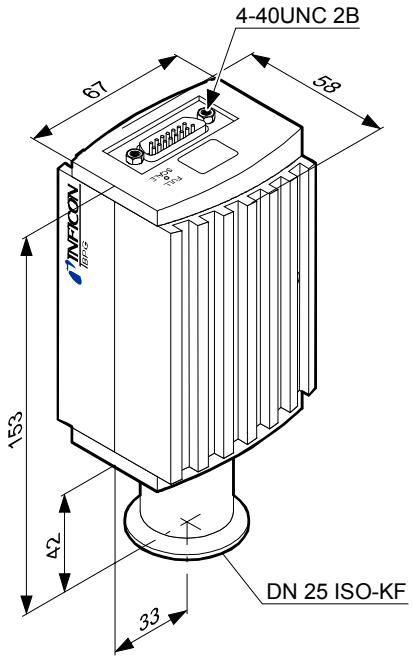

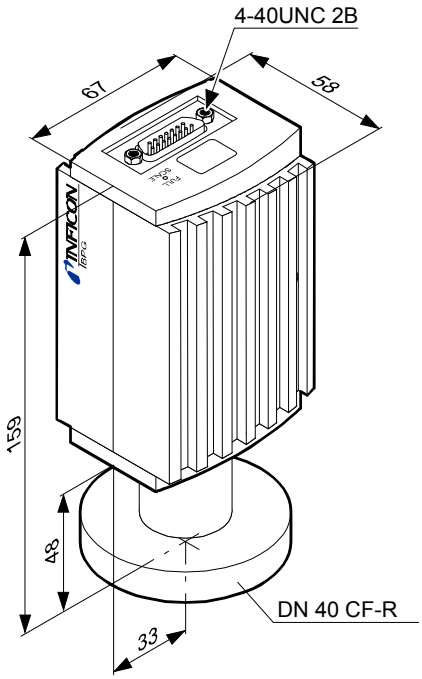

[1] Gauges with DeviceNet connector are 14 mm longer.
The other dimensions of housing and vacuum connection are identical.

Part number
353-507
353-508

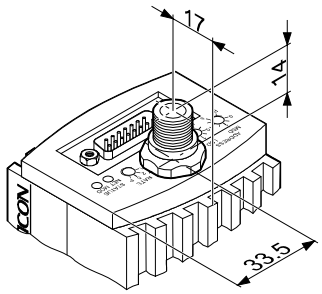

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3 Installation

3.1 Vacuum Connection

DANGER

Caution: overpressure in the vacuum system >1 bar

Injury caused by released parts and harm caused by escaping process gases can result if clamps are opened while the vacuum system is pressurized.

Do not open any clamps while the vacuum system is pressurized. Use the type of clamps which are suited to overpressure.

DANGER

The gauge must be electrically connected to the grounded vacuum chamber. This connection must conform to the requirements of a protective connection according to EN 61010:

- CF connections fulfill this requirement
- For gauges with a KF vacuum connection, use a conductive metallic clamping ring.

Caution

Caution: vacuum component

Dirt and damages impair the function of the vacuum component.

When handling vacuum components, take appropriate measures to ensure cleanliness and prevent damages.


The gauge may be mounted in any orientation. To keep condensates and particles from getting into the measuring chamber, preferably choose a horizontal to upright position. See dimensional drawing for space requirements (→ 🗎 12).

- The gauge is supplied with a built-in grid. For potentially contaminating applications and to protect the electrodes against light and fast charged particles, installation (→ 🗎 17) of the optional baffle is recommended (→ 🗎 52).
- The sensor can be baked at up to 150 °C. At temperatures exceeding 50 °C, the electronics unit has to be removed (→ 🗎 14) or an extension (Option → 🗎 52) has to be installed (→ 🗎 16).

Procedure


❶ Remove the protective lid.

The protective lid will be needed for maintenance.

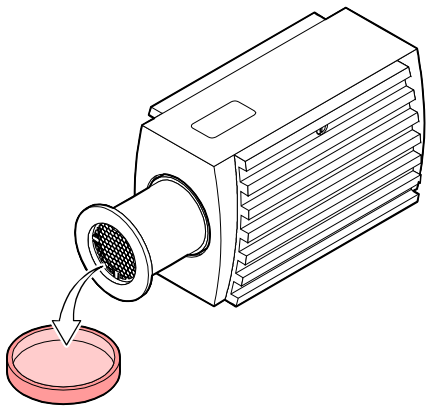

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

❷ Make the flange connection to the vacuum system, preferably without applying vacuum grease.

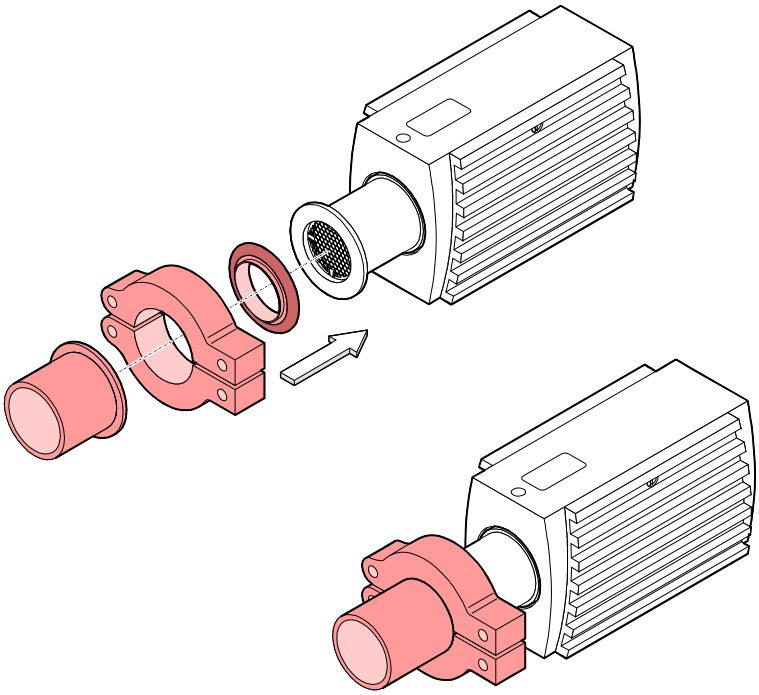

When installing the gauge, make sure that the area around the connector is accessible for the tools required for adjustment while the gauge is mounted (→ 🗎 44, 47).

When installing the gauge, allow for installing/deinstalling the connectors and accommodation of cable loops.

If you are using a gauge with display, make sure easy reading of the display is possible.

✓ The gauge is now installed.


3.1.1 Removing and Installing the Electronics Unit

Required tools / material

- Allen key, size 2.5 mm


Removing the electronics unit

❶ Unscrew the hexagon socket set screw (1) on the side of the electronics unit (2).

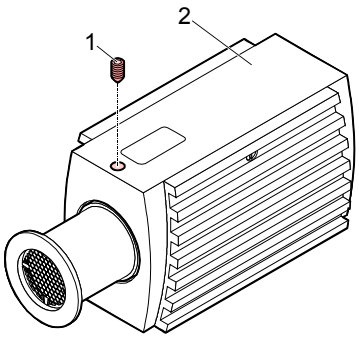

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


❷ Remove the electronics unit **without twisting it**.

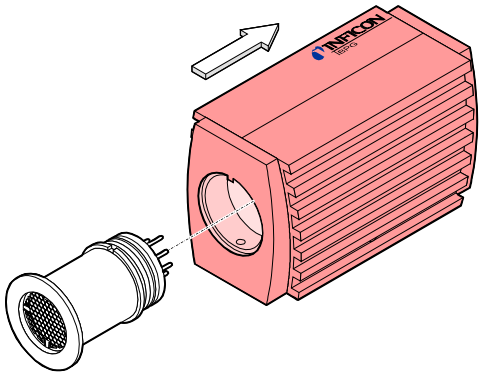

✓ Removal of the electronics unit is completed.

Installing the electronics unit

❶ Place the electronics unit on the sensor (3) (be careful to correctly align the pins and notch (4)).

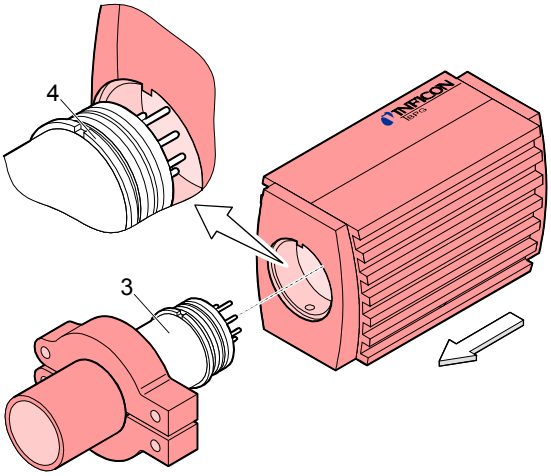

❷ Slide the electronics unit in to the mechanical stop and lock it with the hexagon socket set screw (1).

✓ The electronics unit is now installed.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.1.2 Installing the Optional Extension


With the optional extension (→ 🗎 52) the sensor can also be baked during operation at temperatures up to 150 °C (only at $p<10^{-2}$ mbar because at high temperatures, the accuracy of the Pirani sensor decreases).

Caution

Caution: rising heat

The electronics unit of gauges that are installed vertically, above the source of heat can be damaged through rising heat even with an installed extension.

Bakeout area

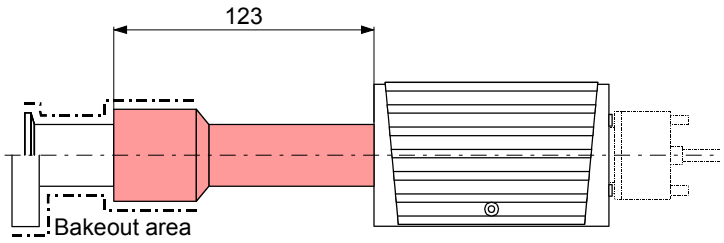

When installing the extension, make sure that the area around the connector is accessible for the tools required for adjustment while the gauge is mounted (→ 🗎 44, 47).

When installing the gauge, allow for installing/deinstalling the connectors and accommodation of cable loops.

If you are using a gauge with display, ensure easy reading of the display.

Required tools / material


- Extension (→ 🗎 52)
- Allen key, size 2.5 mm
- Allen key, size 1.5 mm

Procedure

❶ Remove the electronics unit (2) (→ 🗎 14).

❷ Slide the sensor (3) into the extension (6) to the mechanical stop (be careful to correctly position the pins and notch (4)).

❸ Secure the sensor with the hex socket set screws (7) using an Allen key, size 1.5 mm.

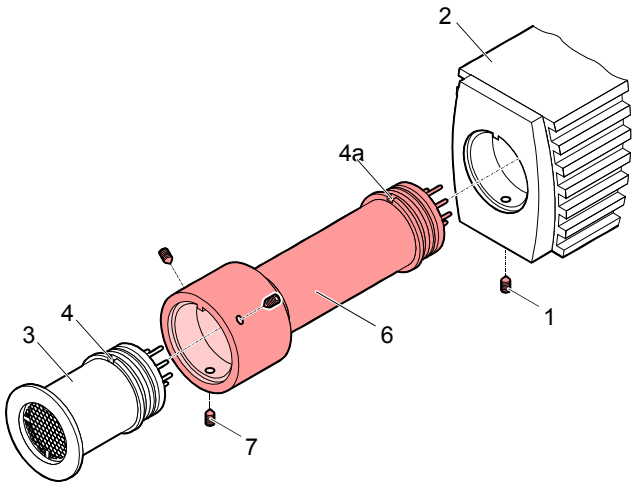

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

❹ Slide the electronics unit (2) in to the mechanical stop (be careful to correctly align the pins and notch (4a)).

❺ Secure the electronics unit (2) with the hex socket set screw (1) using an Allen key, size 2.5 mm.

✓ The extension is now installed.

3.1.3 Using the Optional Baffle

In severely contaminating processes and to protect measurement electrodes optically against light and fast charged particles, replacement of the built-in grid by the optional baffle (→ 🗎 52) is recommended.

Installing/deinstalling the baffle

The optional baffle will be installed/deinstalled at the sensor opening of the deinstalled gauge (Deinstallation gauge → 🗎 46).

Caution

Caution: dirt sensitive area

Touching the product or parts thereof with bare hands increases the desorption rate.


Always wear clean, lint-free gloves and use clean tools when working in this area.

Required tools / material

- Baffle (→ 🗎 52)
- Pointed tweezers
- Pin (e.g. pencil)
- Screwdriver No 1


Installation

❶ Carefully remove the grid with tweezers.

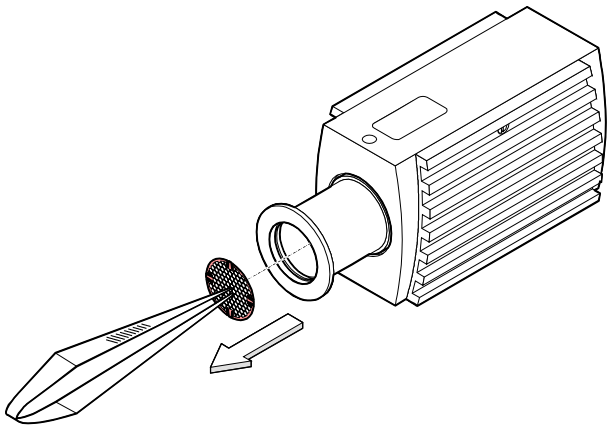


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

❷ Carefully place the baffle onto the sensor opening.

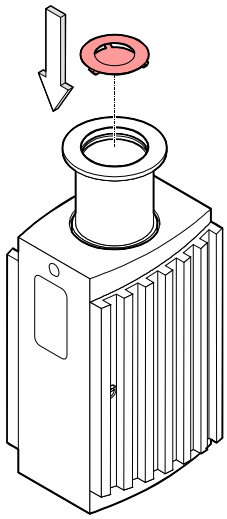


❸ Using a pin, press the baffle down in the center until it catches.

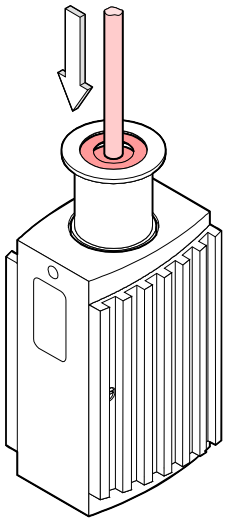

✓ The baffle is now installed (Installation of the gauge → 🗎 13).

Deinstallation

Using a pin, press the baffle down in the center until it catches.

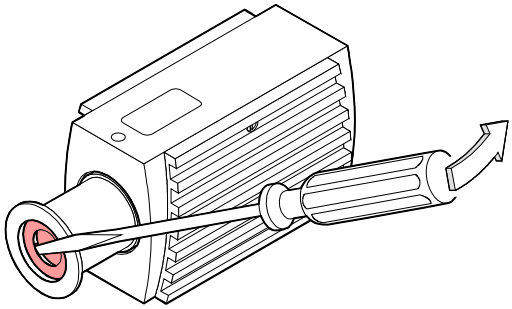

✓ The new baffle is now installed (Installation of the gauge → 🗎 13).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.2 Electrical Connection

3.2.1 Use With INFICON VGC103 or VGC40x Vacuum Gauge Controller

If the gauge is used with an INFICON VGC103 or VGC40x controller, a corresponding sensor cable is required (→ 🕮 [10]). The sensor cable permits supplying the gauge with power, transmitting measurement values and gauge statuses, and making parameter settings.

Caution

Caution: data transmission errors

If the gauge is operated with the INFICON VGC103 or VGC40x Vacuum Gauge Controller (RS232C) and a fieldbus interface at the same time, data transmission errors may occur.

The gauge must not be operated with an INFICON VGC103 or VGC40x controller and DeviceNet, Profibus or RS485 at the same time.


Required material

- Sensor cable (→ 🕮 [10], INFICON sales literature)

Procedure

❶ Plug the sensor connector into the gauge and secure it with the locking screws.

❷ Connect the other end of the sensor cable to the INFICON controller and secure it.

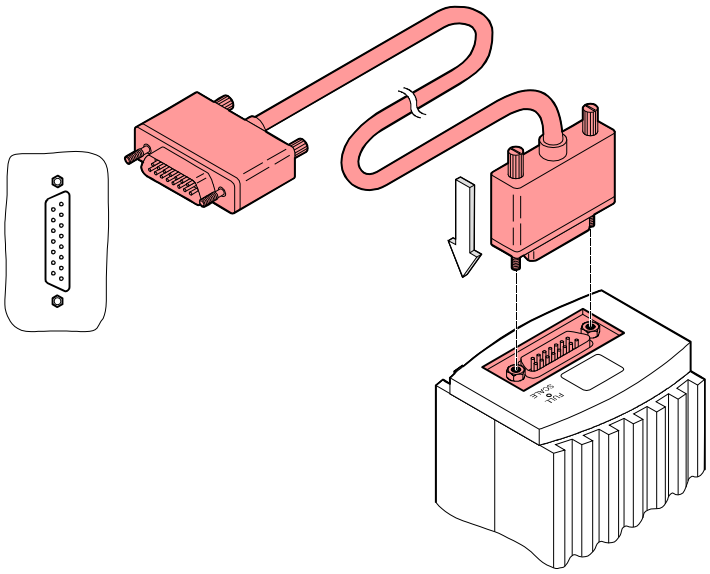

✓ The gauge can now be operated with the VGC103 or VGC40x controller.

3.2.2 Use With Other Controllers

The gauge can also be operated with other controllers.

Especially the fieldbus versions BPG400-SD (DeviceNet), BPG400-SP (Profibus) and BPG400-SR (RS485) are usually operated as part of a network, controlled by a master or bus controller. In such cases, the control system has to be operated with the appropriate software and communication protocol (→ 🕮 [1], [10] or 🗎 37 respectively).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.2.2.1 Making an Individual Sensor Cable

For reasons of compatibility, the expression "sensor cable" is used for all BPG400 versions in this document, although the pressure reading of the gauges with fieldbus interface (BPG400-SD, BPG400-SP or BPG400-SR) is normally transmitted via DeviceNet, Profibus or RS485.

The sensor cable is required for supplying all BPG400 types with power. In connection with the gauges with fieldbus interface (BPG400-SD, BPG400-SP and BPG400-SR), it also permits access to the relay contacts of the switching functions (→ 🗎 21, 44).

Cable type


The application and length of the sensor cable have to be considered when determining the number and cross sections of the conductors (→ 🗎 9).

Procedure

❶ Open the cable connector (D-Sub, 15 pins, female).

❷ Prepare the cable and solder/crimp it to the connector as indicated in the diagram of the gauge used:


Sensor cable connection BPG400

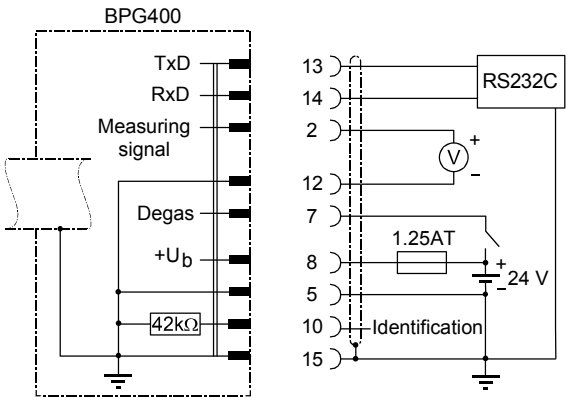

Electrical connection

Pin 2	Signal output (measuring signal)	0 … +10 V
Pin 5	Supply common, GND	
Pin 7	Degas on, active high	+24 VDC
Pin 8	Supply	+24 VDC
Pin 10	Gauge identification	
Pin 12	Signal common, GND	
Pin 13	RS232C, TxD	
Pin 14	RS232C, RxD	
Pin 15	Shielding, housing, GND	

Pins 1, 3, 4, 6, 9 and 11 are not connected internally.

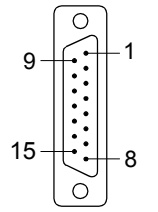


D-Sub, 15 pins female, soldering side

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Sensor cable connection BPG400-SD, -SP, -SR

BPG400-SD, BPG400-SP, BPG400-SR

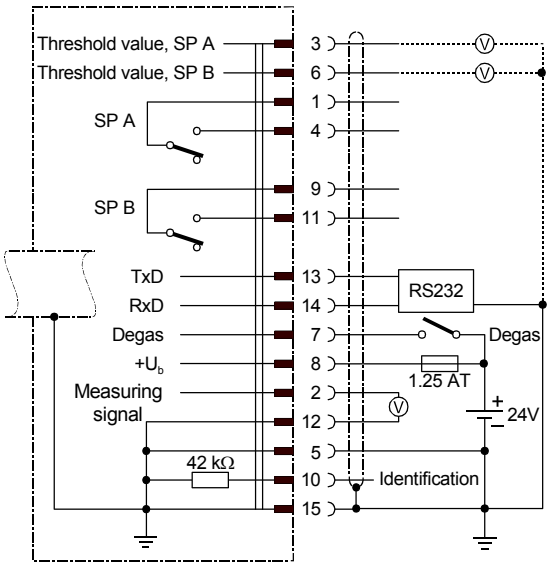

Electrical connection

Pin 1	Relay Switching function A, COM contact	
Pin 2	Signal output (measuring signal)	0 … +10 V
Pin 3	Threshold value (Setpoint) A	0 … +10 V
Pin 4	Relay Switching function A, N.O. contact	
Pin 5	Supply common, GND	
Pin 6	Threshold value (Setpoint) B	0 … +10 V
Pin 7	Degas on, active high	+24 V
Pin 8	Supply voltage	+24 V
Pin 9	Relay Switching function B, COM contact	
Pin 10	Gauge identification	
Pin 11	Relay Switching function B, N.O. contact	
Pin 12	Signal common GND	
Pin 13	RS232, TxD	
Pin 14	RS232, RxD	
Pin 15	Shielding, housing GND	

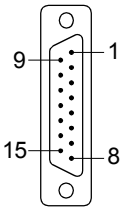

D-Sub, 15 pins female, soldering side

.

WARNING

The supply common (Pin 5) and the shielding (Pin 15) must be connected at the supply unit with protective ground.

Incorrect connection, incorrect polarity or inadmissible supply voltages can damage the gauge.


For cable lengths up to 5 m (0.34 mm^2 conductor cross-section) the output signal can be measured directly between the positive signal output (Pin 2) and supply common GND (Pin 5) without loss of accuracy. At greater cable lengths, differential measurement between signal output (Pin 2) and signal common (Pin 12) is recommended.

❸ Reassemble the cable connector.

❹ On the other cable end, terminate the cable according to the requirements of the gauge controller you are using.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

❺ Plug the sensor connector into the gauge and secure it with the locking screws.

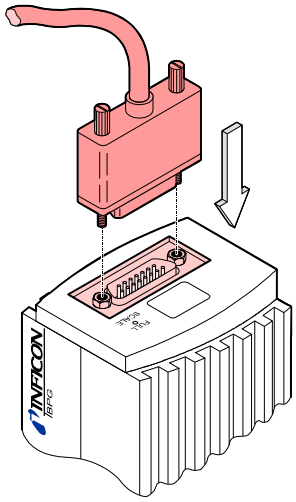

❻ Connect the other end of the sensor cable to the connector of the instrument or gauge controller you are using.

✓ The gauge can now be operated via analog and RS232C interface.

3.2.2.2 Making a DeviceNet Interface Cable (BPG400-SD)


For operating BPG400-SD via DeviceNet, an interface cable conforming to the DeviceNet standard is required.
If no such cable is available, make one according to the following indications.

Cable type

A shielded special 5 conductor cable conforming to the DeviceNet standard has to be used (→ 🕮 [4], [6]).

Procedure

❶ Make the DeviceNet cable according to the following indications.

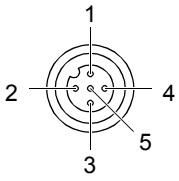


Micro-Style, 5 pins,
(DeviceNet)
female, soldering side

Pin	Function (BPG400-SD)		
1	Drain		
2	Supply	+24 VDC	(DeviceNet) interface only
3	Supply common	GND	(DeviceNet interface only)
4	CAN_H		
5	CAN_L		

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

❷ Plug the DeviceNet (and sensor) cable connector into the gauge.

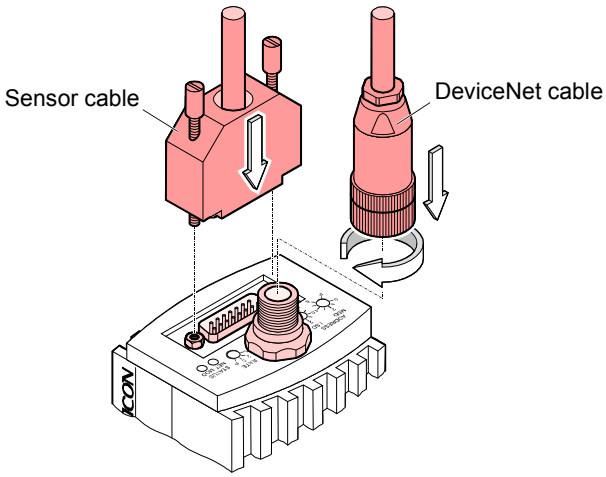

❸ Lock the DeviceNet (and sensor) cable connector.

✓ The gauge can now be operated via DeviceNet interface (→ 🗎 34).

3.2.2.3 Making a Profibus Interface Cable (BPG400-SP)


For operating BPG400-SP via Profibus, an interface cable conforming to the Profibus standard is required.
If no such cable is available, make one according to the following indications.

Cable type

Only a cable that is suited to Profibus operation may be used (→ 🕮 [5], [7]).

Procedure

❶ Make the Profibus interface cable according to the following indications:

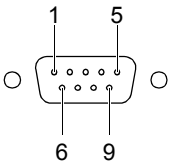

D-Sub, 9 pins
male, soldering side


Pin	Function (BPG400-SP)	
1	Do not connect	
2	Do not connect	
3	RxD/TxD-P	
4	CNTR-P	1)
5	DGND	2)
6	VP	2)
7	Do not connect	
8	RxD/TxD-N	
9	Do not connect	

1) Only to be connected if an *optical link* module is used.

2) Only required as line termination for devices at both ends of bus cable (→ 🕮 [5]).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

❷ Plug the Profibus (and sensor) cable connector into the gauge.

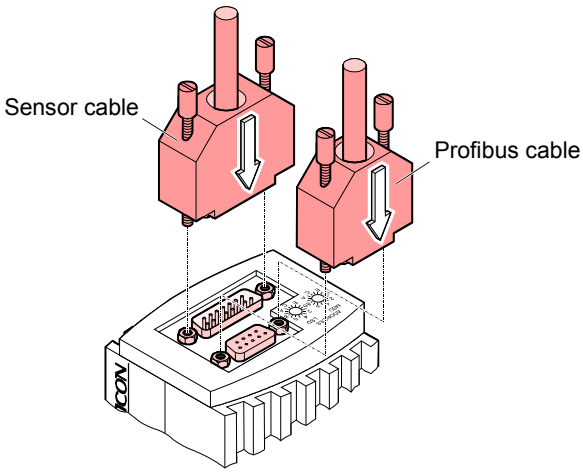

❸ Lock the Profibus (and sensor) cable connector.

✓ The gauge can now be operated via Profibus interface (→ 🗎 36).

3.2.2.4 Making a RS485 Interface Cable (BPG400-SR)

For operating BPG400-SR via RS485 bus, a suitable interface cable is required. If no such cable is available, make one according to the following indications.


Cable type

For RS485 operation, the following cable data are required:

Cable type:	1 twisted pair, shielded
Coductor cross section:	≥0.22 mm^2 (recommended)
Impedance (Z):	135 … 165 Ω
Capacity between conductors and screen:	≤60 pF/m

Procedure

❶ Make the RS485 interface cable according to the following indications.

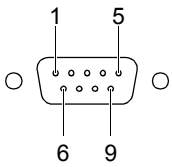

D-Sub, 9-pin,
male, soldering side


Pin 1	Setpoint A relay, N.O.	1)
Pin 2	Do not connect	
Pin 3	No connection	
Pin 4	Do not connect	
Pin 5	Setpoint A relay, N.C.	1)
Pin 6	RS485 (-) Input	2)
Pin 7	Setpoint A relay, COM	1)
Pin 8	No connection	
Pin 9	RS485 (+) Input	2)

1) The changeover relay contact available on the RS485 interface connector is galvanically connected to the N.O. contact of the setpoint A relay available on the 25 pin D-sub connector on the BPG400 (→ 🗎 21).

2) In order to minimize cable reflections, the bus cable must be terminated at both ends with appropriate termination resistors.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

❷ Plug the RS485 (and sensor) cable connector into the gauge.

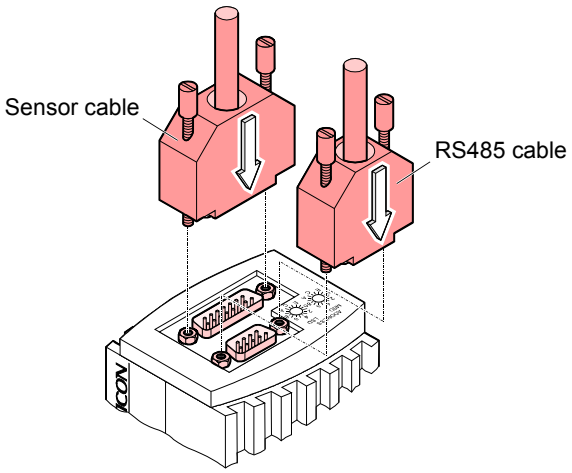

❸ Lock the RS485 (and sensor) cable connector.

✓ The gauge can now be operated via RS485 interface (→ 🗎 37).

3.2.3 Using the Optional Power Supply (With RS232C Line)


The optional 24 V power supply (→ 🗎 52) allows RS232C operation of the BPG400 gauge with any suitable instrument or control device (e.g. PC).

The instrument or control device needs to be equipped with a software that supports the RS232C protocol of the gauge (→ 🗎 31).

Technical data

Mains connection	
Mains voltage	90 … 250 VAC 50 … 60 Hz
Mains cable	1.8 meter (Schuko DIN and U.S. connectors)
Output (operating voltage of gauge)	
Voltage	21 … 27 VDC, set to 24 VDC
Current	Max. 1.5 A
Gauge connection	
Connector	D-Sub, 15 pins, female
24 V cable	5 m, black
Connection of the instrument or control device	
RS232C connection	D-Sub, 9 pins, female
Cable	5 m, black, 3 conductors, shielded


Wiring diagram

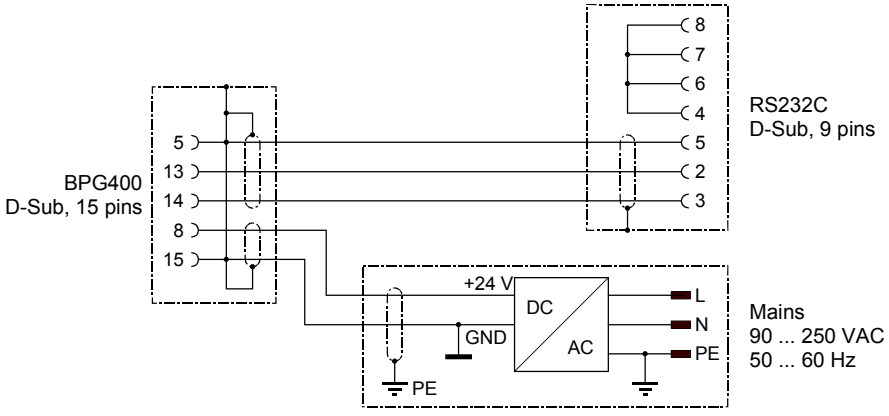

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Connecting the power supply

1. Connect the gauge to the power supply and lock the connector with the screws.
2. Connect the RS232C line to the instrument or control device and lock the connector with the screws.

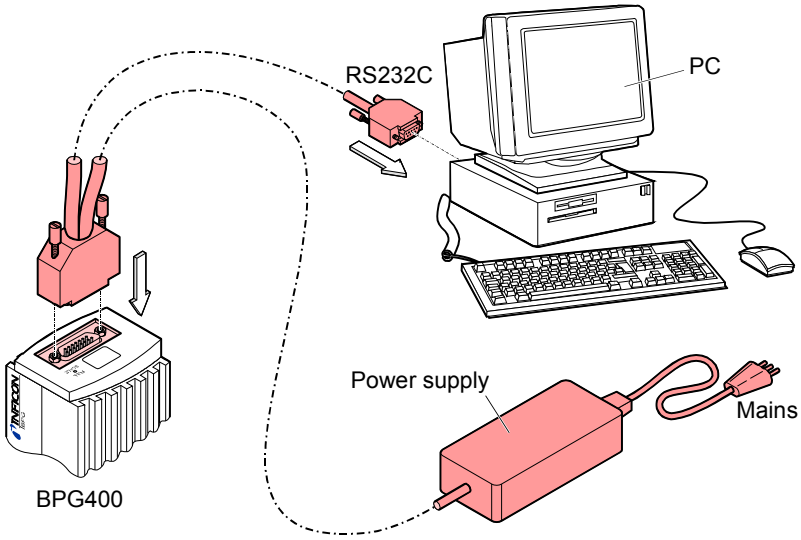

3. Connect the power supply to the mains.
4. Turn the power supply on.

✓ The gauge can now be operated via RS232C interface (→ 🗎 31).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4 Operation

4.1 Measuring Principle, Measuring Behavior

The BPG400 vacuum gauges consist of two separate measuring systems (hot cathode Bayard-Alpert (BA) and Pirani).

Bayard-Alpert

The BA measuring system uses an electrode system according to Bayard-Alpert which is designed for a low x-ray limit.

The measuring principle of this measuring system is based on gas ionization. Electrons emitted by the hot cathode (F) ionize a number of molecules proportional to the pressure in the measuring chamber. The ion collector (IC) collects the thus generated ion current I^+ and feeds it to the electrometer amplifier of the measurement instrument. The ion current is dependent upon the emission current I_e, the gas type, and the gas pressure p according to the following relationship:

$$I^+ = I_e \times p \times C$$

Factor C represents the sensitivity of the gauge head. It is generally specified for N_2.

The lower measurement limit is 5×10^{-10} mbar (gauge metal sealed).

To usefully cover the whole range of 5×10^{-10} mbar … 10^{-2} mbar, a low emission current is used in the high pressure range (fine vacuum) and a high emission current is used in the low pressure range (high vacuum). The switching of the emission current takes place at decreasing pressure at approx. 7.2×10^{-6} mbar, at increasing pressure at approx. 3.2×10^{-5} mbar. At the switching threshold, the BPG400 can temporarily (<2 s) deviate from the specified accuracy.


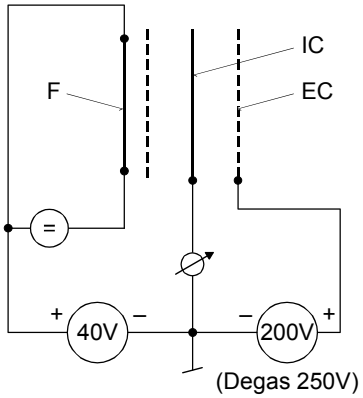


Diagram of the BA measuring system
- F hot cathode (filament)
- IC ion collector
- EC anode (electron collector)




Pirani

Within certain limits, the thermal conductibility of gases is pressure dependent. This physical phenomenon is used for pressure measurement in the thermal conductance vacuum meter according to Pirani. A self-adjusting bridge is used as measuring circuit (→ schematic). A thin tungsten wire forms the sensor element. Wire resistance and thus temperature are kept constant through a suitable control circuit. The electric power supplied to the wire is a measure for the thermal conductance and thus the gas pressure. The basic principle of the self-adjusting bridge circuit is shown in the following schematic.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Schematic

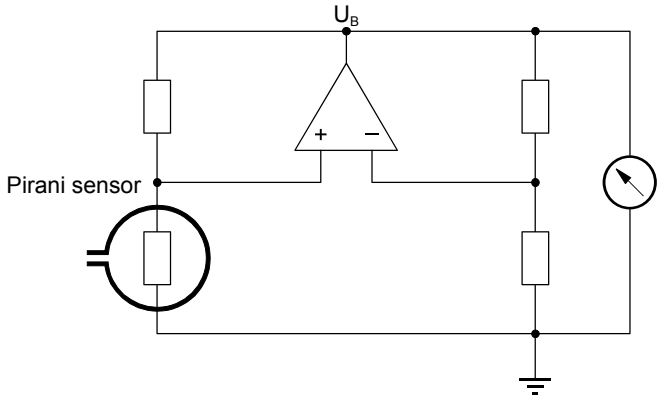

The bridge voltage U_B is a measure for the gas pressure and is further processed electronically (linearization, conversion).

Measuring range

The BPG400 gauges continuously cover the measuring range 5×10^{-10} mbar … 1000 mbar.

- The Pirani constantly monitors the pressure.
- The hot cathode (controlled by the Pirani) is activated only at pressures $<2.4\times10^{-2}$ mbar.

If the measured pressure is higher than the switching threshold, the hot cathode is switched off and the Pirani measurement value is output.

If the Pirani measurement drops below the switching threshold ($p = 2.4\times10^{-2}$ mbar), the hot cathode is switched on. After heating up, the measured value of the hot cathode is fed to the output. In the overlapping range of 5.5×10^{-3} … 2.0×10^{-2} mbar, the output signal is generated from both measurements.

Pressure rising over the switching threshold ($p = 3.2\times10^{-2}$ mbar) causes the hot cathode to be switched off. The Pirani measurement value is output.

Gas type dependence

The output signal is gas type dependent. The characteristic curves are accurate for dry air, N_2 and O_2. They can be mathematically converted for other gases (→ Appendix B).

4.2 Operational Principle of the Gauge

The measuring currents of the Bayard-Alpert and Pirani sensor are converted into a frequency. A micro-controller converts this frequency into a digital value representing the measured total pressure. After further processing this value is available as analog measurement signal (0 … +10 V) at the output (sensor cable connector Pin 2 and Pin 12). The maximum output signal is internally limited to +10 V (atmosphere). The measured value can be read as digital value through the RS232C interface (Pins 13, 14, 15) (→ 🗎 31). Gauges with a display show the value as pressure. The default setting of the displayed pressure unit is mbar. It can be modified via the RS232C interface (→ 🗎 31).

In addition to converting the output signal, the micro controller's functions include monitoring of the emission, calculation of the total pressure based on the measurements of the two sensors, and communication via RS232C interface.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.3 Putting the Gauge Into Operation

When the operating voltage is supplied (→ Technical Data), the output signal is available between Pin 2 (+) and Pin 12 (–) of the sensor cable connector (Relationship Output Signal – Pressure → Appendix A).

Allow for a stabilizing time of approx. 10 min. Once the gauge has been switched on, permanently leave it on irrespective of the pressure.

Communication via the digital interfaces is described in separate sections.

4.4 Degas

Contamination

Gauge failures due to contamination are not covered by the warranty.

Deposits on the electrode system of the BA gauge can lead to unstable measurement readings.

The degas process allows in-situ cleaning of the electrode system by heating the electron collector grid to approx. 700 °C by electron bombardment.

Depending on the application, this function can be activated by the system control via one of the gauges digital interfaces. The BPG400 automatically terminates the degas process after 3 minutes, if it has not been stopped before.

The degas process should be run at pressures below 7.2×10^{-6} mbar (emission current 5 mA).

For a repeated degas process, the control signal first has to change from ON (+24 V) to OFF (0 V), to then start degas again with a new ON (+24 V) command. It is recommended that the degas signal be set to OFF again by the system control after 3 minutes of degassing, to achieve an unambiguous operating status.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.5 **Display** (BPG400)


The gauges with part number

353-501 and
353-503

have a built-in two-line display with an LCD matrix of 32×16 pixels. The first line shows the pressure, the second line the pressure unit, the function and possible errors. The background illumination is usually green, in the event of an error, it changes to red. The pressure is displayed in mbar (default), Torr or Pa. The pressure unit can be changed via RS232C interface (→ 🗎 31).


Pressure display

Pressure reading, pressure unit

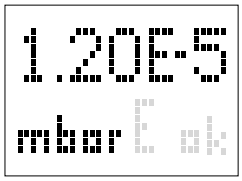

Function display

(none) Pirani operation
E Emission 25 µA
E, Emission 5 mA
D Degas
A 1000 mbar adjustment (Pirani)

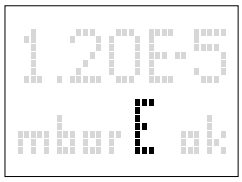


Error display


ok no error
(green background illumination)

5 Pirani sensor warning
(red background illumination)


9 Pirani sensor error
(red background illumination)

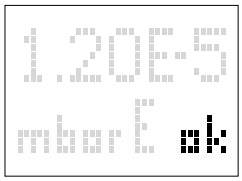

8 BA sensor error
(red background illumination)

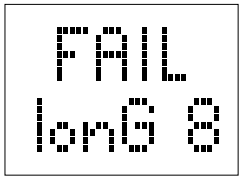

Internal data connection failure
(red background illumination)

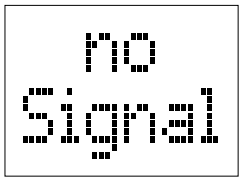

What to do in case of problems → 🗎 49.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.6 RS232C Interface

The built-in RS232C interface allows transmission of digital measurement data and instrument conditions as well as the setting of instrument parameters.

Caution

Caution: data transmission errors

If the gauge is operated with the RS232C interface and a fieldbus interface at the same time, data transmission errors may occur.

The gauge must not be operated with the RS232C interface and DeviceNet, Profibus or RS485 at the same time.

4.6.1 Description of the Functions

The interface works in duplex mode. A nine byte string is sent continuously without a request approx. every 20 ms.

Commands are transmitted to the gauge in a five byte input (receive) string.

Operational parameters

- Data rate 9600 Baud set value, no handshake
- Byte 8 data bits
  1 stop bit

Electrical connections

- TxD Pin 13
- RxD Pin 14
- GND Pin 5

  (Sensor cable connector)

4.6.1.1 Output String (Transmit)

The complete output string (frame) is nine bytes (byte 0 … 8). The data string is seven bytes (byte 1 … 7).

Format of the output string

Byte No	Function	Value	Comment
0	Length of data string	7	(Set value)
1	Page number	5	(For BPG400)
2	Status		→ Status byte
3	Error		→ Error byte
4	Measurement high byte	0 … 255	→ Calculation of pressure value
5	Measurement low byte	0 … 255	→ Calculation of pressure value
6	Software version	0 … 255	→ Software version
7	Sensor type	10	(For BPG400)
8	Check sum	0 … 255	→ Synchronization

Synchronization

Synchronization of the master is achieved by testing three bytes:

Byte No	Function	Value	Comment
0	Length of data string	7	Set value
1	Page number	5	(For BPG400)
8	Check sum of bytes No 1 … 7	0 … 255	Low byte of check sum [1)]

[1)] High order bytes are ignored in the check sum.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Status byte

Bit 1	Bit 0	Definition
0	0	Emission off
0	1	Emission 25 µA
1	0	Emission 5 mA
1	1	Degas

Bit 2	Definition
0	1000 mbar adjustment off
1	1000 mbar adjustment on

Bit 3	Definition
0 ⇔ 1	Toggle bit, changes with every string received correctly

Bit 5	Bit 4	Definition
0	0	Current pressure unit mbar
0	1	Current pressure unit Torr
1	0	Current pressure unit Pa

Bit 7	Bit 6	Definition
x	x	Not used

Error byte

Bit 3	Bit 2	Bit 1	Bit 0	Definition
x	x	x	x	Not used

Bit 7	Bit 6	Bit 5	Bit 4	Definition
0	1	0	1	Pirani adjusted poorly
1	0	0	0	BA error
1	0	0	1	Pirani error

Software version

The software version of the gauge can be calculated from the value of byte 6 of the transmitted string according to the following rule:

$$\text{Version No} = \text{Value}_{\text{Byte 6}} / 20$$

(Example: According to the above formula, $\text{Value}_{\text{Byte 6}}$ of 32 means software version 1.6)

Calculation of the pressure value

The pressure can be calculated from bytes 4 and 5 of the transmitted string. Depending on the currently selected pressure unit (→ byte 2, bits 4 and 5), the appropriate rule must be applied.

As result, the pressure value results in the usual decimal format.

$$p_{mbar} = 10^{((\text{high byte} \times 256 + \text{low byte}) / 4000 - 12.5)}$$

$$p_{Torr} = 10^{((\text{high byte} \times 256 + \text{low byte}) / 4000 - 12.625)}$$

$$p_{Pa} = 10^{((\text{high byte} \times 256 + \text{low byte}) / 4000 - 10.5)}$$

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Example

The example is based on the following output string:

Byte No	0	1	2	3	4	5	6	7	8
Value	7	5	0	0	242	48	20	10	69

The instrument or controller (receiver) interprets this string as follows:

Byte No	Function	Value	Comment
0	Length of data string	7	(Set value)
1	Page number	5	BPG400
2	Status	0	Emission = off Pressure unit = mbar
3	Error	0	No error
	Measurement		
4	High byte	242	Calculation of the pressure:
5	Low byte	48	$p = 10^{((242 \times 256 + 48) / 4000 - 12.5)} = 1000$ mbar
6	Software version	20	Software version = 20 / 20 = 1.0
7	Sensor type	10	BPG400
8	Check sum	69	5 + 0 + 0 + 242 + 48 + 20 + 10 = 325_{dec} 🖬 $01\ 45_{hex}$ High order byte is ignored ⇒ Check sum = 45_{hex} 🖬 69_{dec}

4.6.1.2 Input String (Receive)

For transmission of the commands to the gauge, a string (frame) of five bytes is sent (without <CR>). Byte 1 to byte 3 form the data string.

Format of the input string

Byte no	Function	Value	Comment
0	Length of data string	3	(Set value)
1	Data		→ admissible input strings
2	Data		→ admissible input strings
3	Data		→ admissible input strings
4	Check sum (from bytes No 1 … 3)	0 … 255	(low byte of sum) [1]

[1] High order bytes are ignored in the check sum.

Admissible input strings

For commands to the gauge, six defined strings are used:

	Byte No				
Command	0	1	2	3	4 [2]
Set the unit mbar in the display	3	16	62	0	78
Set the unit Torr in the display	3	16	62	1	79
Set the unit Pa in the display	3	16	62	2	80
Power-failure-safe storage of current unit	3	32	62	62	156
Switch degas on (switches itself off after 3 minutes)	3	16	93	148	1
Switch degas off before 3 minutes	3	16	93	105	214

[2] Only low order byte of sum (high order byte is ignored).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.7 DeviceNet Interface (BPG400-SD)

This interface allows operation of BPG400-SD with part number

353-507 and
353-508

in connection with other devices that are suited for DeviceNet operation. The physical interface and communication firmware of BPG400-SD comply with the DeviceNet standard (→ 🕮 [4], [6]).

Two adjustable switching functions are integrated in BPG400-SD. The corresponding relay contacts are available at the sensor cable connector (→ 🗎 8, 21, 44).

The basic sensor and sensor electronics of all BPG400 gauges are identical.

Caution

Caution: data transmission errors

If the gauge is operated via RS232C interface and DeviceNet interface at the same time, data transmission errors may occur.

The gauge must not be operated via RS232C interface and DeviceNet interface at the same time.

4.7.1 Description of the Functions

Via this interface, the following and further data are exchanged in the standardized DeviceNet protocol (→ 🕮 [1]):

- Pressure reading
- Pressure unit (Torr, mbar, Pa)
- Degas function
- Gauge adjustment
- Status and error messages
- Status of the switching functions

4.7.2 Operating Parameters


As the DeviceNet protocol is highly complex, the parameters and programming of BPG400-SD are described in detail in the separate Communication Protocol (→ 🕮 [1]).

4.7.2.1 Operating Software

Before the gauge is put into operation, it has to be configured for DeviceNet operation. A configuration tool and the device specific EDS file (Electronic Data Sheet) are required for this purpose. The EDS file can be downloaded via internet (→ 🕮 [3]).

4.7.2.2 Node Address Setting

For unambiguous identification of the gauge in a DeviceNet environment, a node address is required. The node address setting is made on the gauge or programmed via DeviceNet.

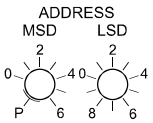

Set the node address (0 … 63_{dec}) via the "ADDRESS" "MSD" and "LSD" switches. The node address is polled by the firmware when the gauge is switched on. If the setting deviates from the stored value, the new value is taken over into the NVRAM. If a setting higher than 63 is made, the previous node address setting remains valid.

If the „MSD“ switch is in the "P" position, the node address is programmable via DeviceNet (→ 🕮 [1]).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.7.2.3 Data Rate Setting

The admissible data rate depends on a number of factors such as system parameters and cable length → 🕮 [4], [6]). It can be set on the gauge or programmed via DeviceNet.



By means of the "RATE" switch, the data rate can be set to 125 ("1"), 250 ("2") or 500 kBaud ("5").

If the switch is in any of the "P" positions, the data rate is programmable via DeviceNet (→ 🕮 [1]).

4.7.3 Status Lights

Two lights (LEDs) on the gauge inform on the gauge status and the current DeviceNet status.



"STATUS MOD" (gauge status):

Light status	Description
Dark	No supply
Flashing red/green	Selftest
Green	Normal operation
Red	Non recoverable error

"STATUS NET" (network status):

Light status	Description
Dark	Gauge not online: – Selftest not yet concluded – No supply, → "STATUS MOD" light
Flashing green	Gauge online but no communication: – Selftest concluded but no communication to other nodes established – Gauge not assigned to any master
Green	Gauge online; necessary connections established
Flashing red	One or several input/output connections in "timed out" status
Red	Communication error. The gauge has detected an error that impedes communication via the network (e.g. two identical node addresses (MAC IC) or "Bus-off")

Electrical connections

The gauge is connected to the DeviceNet system via the 5-pin DeviceNet connector (→ 🗎 22).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.8 Profibus Interface (BPG400-SP)

This interface allows operation of BPG400-SP with part number

353-505 and
353-506

in connection with other devices that are suited for Profibus operation. The physical interface and communication firmware of BPG400-SP comply with the Profibus standard (→ 🕮 [7], [5].

Two adjustable switching functions are integrated in the BPG400-SP. The corresponding relay contacts are available at the sensor cable connector (→ 🗎 8, 21, 44).

The basic sensor and sensor electronics of all BPG400 gauges are identical.

Caution

Caution: data transmission errors

If the gauge is operated via RS232C interface and Profibus interface at the same time, data transmission errors may occur.

The gauge must not be operated via RS232C interface and Profibus interface at the same time.

4.8.1 Description of the Functions

Via this interface, the following and further data are exchanged in the standardized Profibus protocol (→ 🕮 [2]):

- Pressure reading
- Pressure unit (Torr, mbar, Pa)
- Degas function
- Gauge adjustment
- Status and error messages
- Status of the switching functions

4.8.2 Operating Parameters


As the DeviceNet protocol is highly complex, the parameters and programming of BPG400-SP are described in detail in the separate Communication Protocol (→ 🕮 [2]).

4.8.2.1 Operating Software

For operating the gauge via Profibus, prior installation of the BPG400 specific GSD file is required on the bus master side. This file can be downloaded via internet (→ 🕮 [3]).

4.8.2.2 Node Address Setting

For unambiguous identification of the gauge in a Profibus environment, a node address is required. The node address setting is made on the gauge.

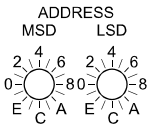

The node address (0 … 125_{dec}) is set in hexadecimal form (00 … $7D_{hex}$) via the "ADDRESS", "MSD", and "LSD" switches. The node address is polled by the firmware when the gauge is switched on. If the setting deviates from the stored value, the new value is taken over into the NVRAM. If a value >$7D_{hex}$ (>125_{dec}) is entered, the node address setting currently stored in the device remains valid but it can now be defined via Profibus ("Set slave Address", → 🕮 [2]).

Electrical connections

The gauge is connected to Profibus via the 9-pin Profibus connector (→ 🗎 23).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.9 RS485 Interface (BPG400-SR)

This interface allows operation of BPG400-SR with part number

353-509 and
353-513

in connection with other devices that are suited for RS485 bus operation.

Two adjustable switching functions are integrated in BPG400-SR. The corresponding relay contacts are available on the sensor cable connector (→ 🗎 21).

Additionally, the relay contact of the switching function A is accessible on the RS485 interface connector (→ 🗎 24).

The basic sensor and sensor electronics of all BPG400 gauges are identical.

Caution

Caution: data transmission errors

If the gauge is operated via RS485 and RS232C interface at the same time, data transmission errors may occur.

The gauge must not be operated via RS485 and RS232C interface at the same time.

4.9.1 Description of the Functions and Modes

Via this interface, the following and further data are exchanged between a bus master (host) and the BPG400-SR (device) in the RS485 protocol.

- Pressure reading
- Pressure unit (Torr, mbar, Pa)
- Degas function
- Operation modes
- Status and error messages
- Thresholds of the switching functions

Operation modes of the BPG400-SR

The BPG400-SR can be operated in two operation modes. While the "BPG" mode (default mode) takes full advantage of all the gauges capabilities.

The "RIG" mode has a somewhat reduced scope of parameters (→ 40).

4.9.2 Data Exchange

The controlling host sends its commands to the individually addressed devices connected to the bus. In replay the device returns the data requested via bus to the host.

A maximum of 127 devices can be connected to a RS485 bus system.

4.9.2.1 Operational Parameters

- Data rates: 300, 1200, 2400, 4800, 9600, 19'200 [1)], 28'800 Baud
- Byte: 8 data bits [1)]
  1 stop bit [1)]
  No parity [1)]

[1)] Default settings

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.9.2.2 Device Address

For unambiguous identification of the gauge in a RS485 bus environment, a device address is required.


The device address (base address) setting is primarily made on the gauge. Via RS485 communication, an address offset can be added from the host:

Operating device address	=	base address	+	offset

where:

Operating device address	00 … $7F_{hex}$ [1]	*aa* (→ 🗎 39)
Base address	00 … $7F_{hex}$	Gauge setting (switches, → below)
Offset	00 … $7F_{hex}$	From host, *oo* (→ 🗎 39)

[1] Sum of base address and offset must not exceed $7F_{hex}$

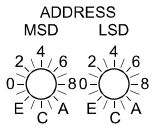

The base address (0 … 127_{dec}) is set in hexadecimal form (00 … $7F_{hex}$) via the "ADDRESS", "MSD", and "LSD" switches. The address is polled by the firmware when the gauge is switched on only. If the address set by the switches is above the allowed range, all parameters are set to the factory default values. Communication is not possible in this case.

4.9.2.3 Command Structure (Host)

Commands sent by the host must include the following elements:

Element:	Start character	Operating device address (*aa*)	_ [3]	Data [1]	Terminator
Value:	#	00 … FF_{hex}	*Space*	→ "commands and responses"	*CR* [2]

[1] Characters can be upper or lower case.

[2] Carriage return ($0D_{hex}$ or *ctrl M*)

[3] A *Space* character is signified by a "_" (underline) character in the text.

4.9.2.4 Response Structure

The response message returned by the BPG400-SR has the following structure:

Element:	Start character	Operating device address (*aa*)	_ [3]	Data [1]	Terminator
Value:	*	00 … FF_{hex}	*Space*	→ "commands and responses"	*CR* [2]

[1] Characters returned by the BPG400-SR are always upper case.

[2] Carriage return ($0D_{hex}$ or *ctrl M*)

[3] A *Space* character is signified by a "_" (underline) character in the text.

4.9.2.5 Error Messages

If an incorrect data string is sent by the host, the BPG400-SR will return an error message with the following structure:

Element:	Start character	Operating device address (*aa*)	_ [3]	Data [1] [3]	Terminator
Value:	?	00 … FF_{hex}	*Space*	*ERROR*	*CR* [2]

[1] Characters returned by the BPG400-SR are always upper case.

[2] Carriage return ($0D_{hex}$ or *Ctrl M*)

[3] A *Space* character is signified by a "_" (underline) character in the text.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.9.3 Syntax Description

4.9.3.1 Definitions, Legend

In the table "Commands and Responses" (→ 🗎 40) the following variables are used:

Variable	Description	Values, range,	
aa	Operating device address	00 … $3F_{hex}$	
fff	Emission current	_25UA 5.0MA _20MA	= 25 µA = 5 mA = 20 mA
modeR	Gauge operation mode, response	BPG_400_ RIG_____	= BPG400 mode = RIG mode (reduced ion gauge mode)
modeT	Gauge operation mode, command	BPG400 RIG	= BPG400 mode = RIG mode (reduced ion gauge mode)
n	Filament selected	1 2	No action, for future use
oo	Address offset	00 … $3F_{hex}$	
rate	Data transfer rate	300, 1200, 2400, 4800, 9600, 19'200 or 28'800 Baud	
status	Gauge status	BPG mode: BPG_ST_0 BPG_ST_5 BPG_ST_8 BPG_ST_9 RIG mode: 01_OVPRS 02_EMISS 00_ST_OK	 = no error = Pirani warning = BA error = Pirani error If emission is switched off = BA error = normal operation
t	Toggle status	ON OFF	= toggle function on = toggle function off
unit	Pressure unit	MBAR, TORR, PASCAL	
v.vv	Firmware version of gauge	Three characters and a decimal point. Higher revision numbers indicate newer versions of firmware. Example: 1.00.	
x.xx	Mantissa of pressure values	1.00 … 9.99	
syy	Signed exponent of pressure values	s yy	= Sign of exponent, +/– = Exponent 00 … 09
z	Operation of relays (switching function)	+ –	= Relay on below threshold = Relay on above threshold

All Commands and responses are terminated by "carriage return" (*CR*).

All response messages contain 13 characters, including *CR*.

For better readability, a space character is signified by a " _ " (underline) character in the table below.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.9.3.2 Commands and Responses

The following table lists all permissible commands of the RS485 host and the corresponding responses of a BPG400 SR during data transfer.

Depending on the operation mode selected (BPG or RIG mode) the BPG400-SR responses may differ. Syntax errors will produce an error message.

For each command listed, a programming example is given in the last column where:

T: Command data transmitted by the host
R: Data received by the host (from BPG400-SR), in BPG and RIG mode
R_{BPG}: Data received by the host (from BPG400-SR), only in BPG mode
R_{RIG}: Data received by the host (from BPG400-SR), only in RIG mode

Host Command	Host Command syntax	BPG mode Response syntax	RIG mode Response syntax	Programming example and remarks
Read pressure measured value	#*aa*RD *CR*	**aa_x.xx*Esyy *CR*	→ BPG mode	T: #02RD *CR* R: *02_5.36E–04 *CR* R_{RIG}: *02_9.99E+09 *CR* If gauge is switched off and during the first 3 seconds after gauge is switched on.
Read status	#*aa*RS *CR*	**aa_status CR*	→ BPG mode	T: #02RS *CR* R_{BPG}: *02_BPG_ST_5 *CR* R_{RIG}: *02_00_ST_OK *CR*
Set address (offset)	#*aa*SA*oo CR*	**aa*_PROGM_OK *CR*	→ BPG mode	T: #02A3_*CR* R *02_PROGM_OK *CR* New address becomes effective after power is cycled or a reset command is executed. If the user sets the offset address to a value so that the operating device address would be >0x3F$_{Hex}$, the offset address is set to "0" by the device itself.
Set pressure unit	#*aa*SU*unit CR*	**aa*_PROGM_OK *CR*	*Error message*	T: #02SUPASCAL *CR* R_{BPG}: *02_PROGM_OK *CR* New unit becomes effective after power is cycled or a reset command is executed. R_{RIG}: ?02_SYNTX_ER *CR*
Read pressure unit	#*aa*RU *CR*	**aa_unit CR*	*Error message*	T: #02RU *CR* R_{BPG}: *02_PASCAL *CR* R_{RIG}: ?02_SYNTX_ER *CR*
Set filament	#*aa*SFn *CR*	For future use	**aa*_PROGM_OK *CR*	T: #02SF2 *CR* R: *02_PROGM_OK *CR*
Set overpressure	#*aa*SO*x.xx*Esyy *CR*	For future use	**aa*_PROGM_OK *CR*	T: #02SO5.00E–02 *CR* R: *02_PROGM_OK *CR*
Set degas off	#*aa*DG0 *CR*	**aa*_PROGM_OK *CR*	→ BPG mode	T: #02DG0 *CR* R: *02_PROGM_OK *CR*
Set degas on	#*aa*DG1 *CR*	**aa*_PROGM_OK *CR*	→ BPG mode	T: #02DG1 *CR* R: *02_PROGM_OK *CR* When the gauge is switched off, a degas on command will produce an error message: R: ?02_COMM_ERR *CR* If pressure is >7.20E–06 mbar, the degas on command is disabled
Read emission	#*aa*SES *CR*	**aa_xxF*A_EM *CR*	→ BPG mode	T: #02SES *CR* R: *02_ _20MA_EM *CR*
Read version	#*aa*VER *CR*	**aa*_VER*v.vv CR*	→ BPG mode	T: #02VER *CR* R: *02_VER_1.04 *CR*

Table continued on following page

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

"Commands and Responses" continued:

Host Command	Host Command syntax	BPG mode Response syntax	RIG mode Response syntax	Programming example and remarks
Set + threshold (Setpoint A)	*#aa*SL+*x.xx*E*syy CR*	**aa*_PROGM_OK *CR* (**aa_z*MIN_HYS *CR*)	→ BPG mode	T: #02SL+1.00E–04 *CR* R: *02_PROGM_OK *CR*
Set – threshold (Setpoint A)	*#aa*SL–*x.xx*E*syy CR*	**aa*_PROGM_OK *CR* (**aa_z*MIN_HYS *CR*)	→ BPG mode	T: #02SL–2.00E–04 *CR* R: *02_PROGM_OK *CR* (SL+ ≠ SL–)
Read + threshold (Setpoint A)	*#aa*RL+*x.xx*E*syy CR*	**aa*_PROGM_OK *CR*	→ BPG mode	T: #02SL+3.00E–04 *CR* R: *02_PROGM_OK *CR*
Read – threshold (Setpoint A)	*#aa*RL–*x.xx*E*syy CR*	**aa*_PROGM_OK *CR*	→ BPG mode	T: #02SL–3.00E–04 *CR* R: *02_–MIN_HYS *CR* (SL+ = SL–)
Set + threshold (Setpoint B)	*#aa*SH+*x.xx*E*syy CR*	**aa*_PROGM_OK *CR* (**aa_z*MIN_HYS *CR*)	→ BPG mode	SL+/SL– and SH+/ SH– commands define the setpoints of the switching functions and the operation of the corresponding relays (→ 🗎 42).
Set – threshold– (Setpoint B)	*#aa*SH–*x.xx*E*syy CR*	**aa*_PROGM_OK *CR* (**aa_z*MIN_HYS *CR*)	→ BPG mode	
Read + threshold (Setpoint B)	*#aa*RH+*x.xx*E*syy CR*	**aa*_PROGM_OK *CR*	→ BPG mode	
Read – threshold– (Setpoint B)	*#aa*RH–*x.xx*E*syy CR*	**aa*_PROGM_OK *CR*	→ BPG mode	
Read threshold potentiometer (Setpoint A)	*#aa*GT1 *CR*	**aa_x.xx*E*syy CR*	→ BPG mode	T: #02GT1 *CR* *R:* *02_3.50E–04 *CR*
Read threshold potentiometer (Setpoint B)	*#aa*GT2 *CR*	**aa_x.xx*E*syy CR*	→ BPG mode	
Set factory settings (default)	*#aa*FAC *CR*	**aa*_PROGM_OK *CR*	→ BPG mode	All communication parameters will be set to default values (default mode: BPG400)
Set data rate *)	*#aa*SB*rate CR*	**aa*_PROGM_OK *CR*	→ BPG mode	T: #02SB9600 *CR* R: *02_PROGM_OK *CR* New data rate becomes effective after power is cycled or a reset command is executed.
Set parity none *)	*#aa*SPN *CR*	**aa*_PROGM_OK *CR*	→ BPG mode	New setting becomes effective after power is cycled or a reset command is executed.
Set parity odd *)	*#aa*SPO *CR*	**aa*_PROGM_OK *CR*	→ BPG mode	
Set parity even *)	*#aa*SPE *CR*	**aa*_PROGM_OK *CR*	→ BPG mode	
Unlock	*#aa*UNL *CR*	**aa*_PROGM_OK *CR*	→ BPG mode	T: #*02*UNL *CR* R: *02_PROGM_OK *CR* Prior to the commands SB, SPN, SPO, SPE, SDM and GDM, a UNL command must be executed. An attempt to execute the listed commands without a UNL command will produce the error message ?02_COM_ERR *CR*
Toggle unlock	*#aa*TLU *CR*	**aa*_1_UL_*t CR*	→ BPG mode	T: #02TLU *CR* R: *02_1_UL_ON *CR* T: #02TLU *CR* R: *02_1_UL_OFF *CR* The TLU command toggles the UNL function. When TLU is in the ON state, the commands SB, SPN, SPO, SPE, SDM or GDM can be executed after a UNL command has been carried out. An attempt to execute the commands SB, SPN, SPO, SPE or GDM while TLU is in the OFF state, an error message ?02_SYNTX_ER *CR* will result.
Reset	*#aa*RST *CR*	No response	No response	After a reset command, communication can be reestablished after 3 seconds.
Set device mode *)	*#aa*SDM*modeT CR*	**aa*_PROGM_OK *CR*	→ BPG mode	T: #02SDM_RIG *CR* R: *02_PROGM_OK *CR*
Get device mode *)	*#aa*GDM *CR*	**aa_modeR CR*	→ BPG mode	T: #02GDM *CR* R: *02_BPG_400_ *CR*

*) To prevent accidental changes of these parameters, a TLU - UNL sequence has to be executed prior to the SB, SPN, SPO, SPE, SDM and GDM commands (→ "Toggle unlock" and "Toggle" commands).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.9.4 Switching Functions

The BPG400-SR has two independent switching functions. A floating relay contact is available for each switching function (→ 🗎 21). Additionally, the relay contact of the switching function A is accessible on the RS485 interface connector (→ 🗎 24).

The functionality of the switching functions (setting of thresholds and relay operation) depends on the gauges threshold potentiometer settings:

Selecting the Source of the Threshold Values

Threshold potentiometer setting	Functionality of switching function
≤0.5 Volt [1)]	• Thresholds defined by stored values (SL+/–, SH+/–, sent by the host) • Hysteresis defined by independent setting of "+" and "–" values • Relay operation defined by "+" and "–" values and sequential order of data transfer (→ following table)
>0.5 Volt [1)]	• Thresholds defined by potentiometer settings • Hysteresis = 10% of threshold • Relays energize when pressure falls below threshold (Same as BPG400-SD/SP, → 🗎 44)





1) Threshold voltages can be read by the host using the appropriate commands (→ 🗎 41) or measured on the corresponding pins of the gauges 25 pin D-Sub connector (→ 🗎 21).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.9.4.1 Programming the Switching Functions

The programming procedure of the switching functions via the RS485 interface implemented in the BPG400-SR differs from the one used on BPG400-SD/SP.

The table below describes the programming possibilities.

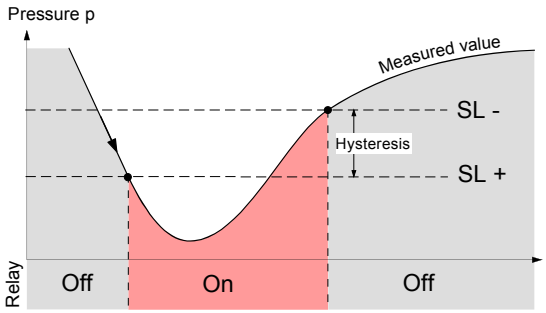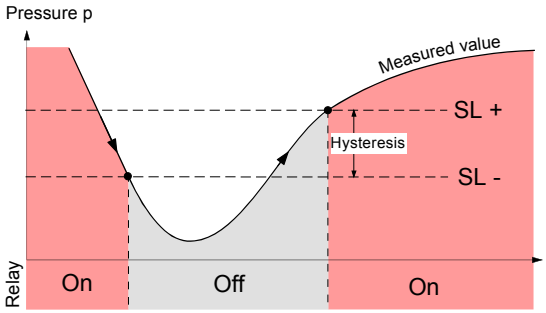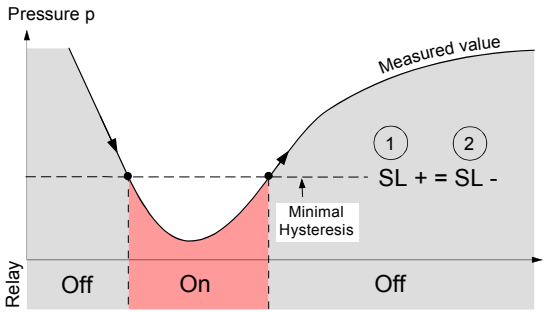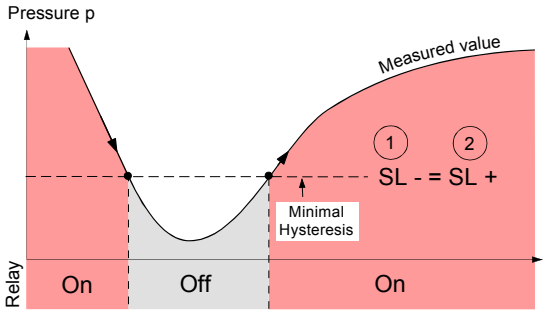Function	Threshold values, relay operation	Programming example (→ table, 🗎 40)
	SL+ < SL– ⇒ relay on below SL+	T: #02SL+1.00E–04 *CR* R: *02_PROGM_OK *CR* T: #02SL–2.00E–04 *CR* R: *02_PROGM_OK *CR*
	SL+ > SL– ⇒ relay off below SL–	T: #02SL+2.00E–04 *CR* R: *02_PROGM_OK *CR* T: #02SL–1.00E–04 *CR* R: *02_PROGM_OK *CR*
	SL– = SL+, SL+ command sent last ⇒ relay off below SL+/SL– (minimal hysteresis)	T: #02SL–3.00E–04 *CR* R: *02_PROGM_OK *CR* T: #02SL+3.00E–04 *CR* R: *02_+MIN_HYS *CR*
	SL+ = SL–, SL– command sent last ⇒ relay on below SL+/SL– (minimal hysteresis)	T: #02SL+3.00E–04 *CR* R: *02_PROGM_OK *CR* T: #02SL–3.00E–04 *CR* R: *02_–MIN_HYS *CR*

Programming the second switching function (setpoint B) is identical to the procedure described above. Threshold variables are SH+ and SH– in this case.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.10 Switching Functions (BPG400-SD, -SP, -SR)

The gauges BPG400-SD, BPG400-SP and BPG400-SR have two independent, manually settable switching functions. Each switching function has a floating normally open relay contact. The relay contacts are accessible at the sensor cable connector (→ 🗎 21).

On the BPG400-SR, the change over relay contact of setpoint A is also accessible at the RS485 interface connector (→ 🗎 24).


The threshold values of switching functions A and B can be set within the pressure range 1×10^{-9} mbar … 100 mbar via potentiometers "SETPOINT A" and "SETPOINT B".

The Formula applied to calculate the corresponding threshold voltage $U_{Threshold}$ depends on the gauge version used.

For BPG400-SD, -SR : $U_{Threshold} = 0.75 \times (\log p_{Setpoint} - c) + 7.75$

For BPG400-SP: $U_{Threshold} = 0.8129401 \times (\log p_{Setpoint} - c + 9.30102999)$

Constant c is pressure unit dependent (→ Appendix A).

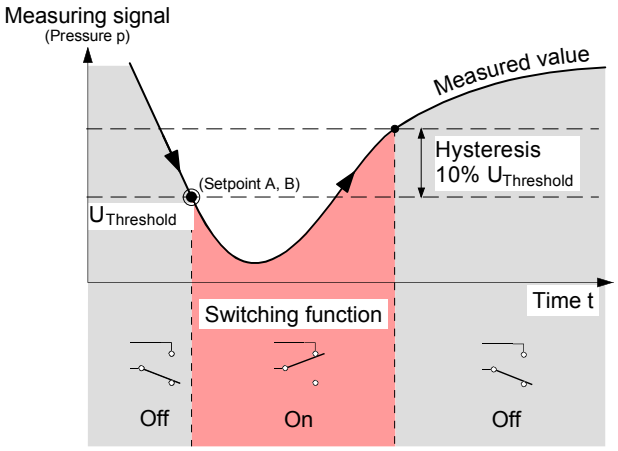

The hysteresis of the switching functions is 10% of the threshold setting.

4.10.1 Setting the Switching Functions

The threshold values of the two switching functions "SETPOINT A" and "SETPOINT B" are set locally on the potentiometers of the gauge that are accessible via the openings on one side of the gauge housing.

Required tools

- Voltmeter
- Ohmmeter or continuity checker
- Screwdriver, max. ø2.5 mm


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Procedure

The procedure for setting thresholds is identical for both switching functions.

❶ Put the gauge into operation.

❷ Connect the **+** lead of a voltmeter to the threshold measurement point of the selected switching function ("Setpoint A" Pin 3, "Setpoint B" Pin 6) and its **–** lead to Pin 5.

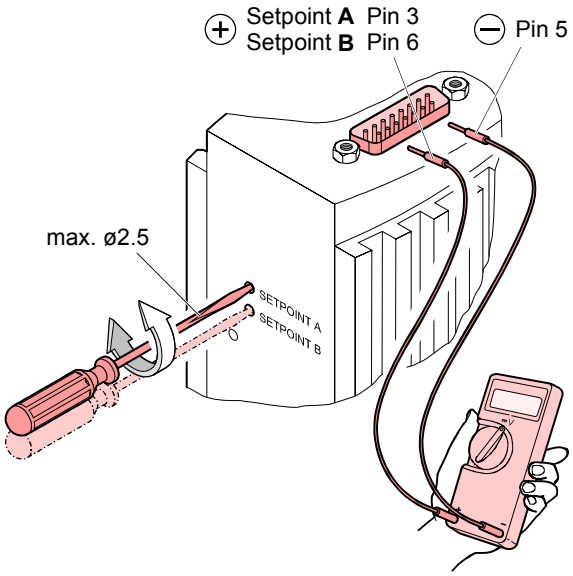

❸ Using a screwdriver (max. ø2.5 mm), set the voltage of the selected switching function (Setpoint A, B) to the desired value $U_{Threshold}$.

On the BPG400-SR, threshold potentiometer settings ≤0.5 V are ignored, threshold values defined via RS485 will be effective instead (→ 🗎 42).

✓ Setting of the switching functions is now concluded.

There is no local visual indication of the statuses of the switching functions. However, a functional check of the switching functions (On/Off) can be made with one of the following methods:

- Reading the status via fieldbus interface → 🕮 [1] for BPG400-SD, → 🕮 [2] for BPG400-SP, → 🗎 41 for BPG400-SR.
- Measurement of the relay contacts at the sensor cable connector with a ohmmeter/continuity checker (→ 🗎 21).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5 Deinstallation

DANGER

Caution: contaminated parts

Contaminated parts can be detrimental to health and environment.

Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

Caution

Caution: vacuum component

Dirt and damages impair the function of the vacuum component.

When handling vacuum components, take appropriate measures to ensure cleanliness and prevent damages.

Procedure

1. Vent the vacuum system.

   Before taking the gauge out of operation, make sure that this has no adverse effect on the vacuum system.


   Depending on the programming of the superset controller, faults may occur or error messages may be triggered.

   Follow the appropriate shut-down and starting procedures.

2. Take gauge out of operation.

3. Disconnect all cables from the gauge.

4. Remove gauge from the vacuum system and replace the protective lid.

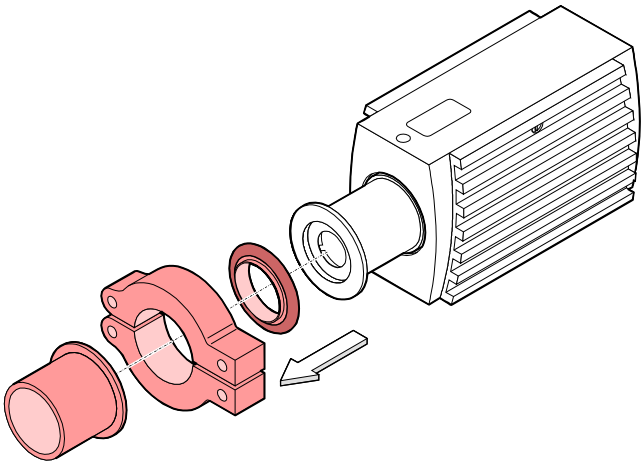

✓ The gauge is now deinstalled.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6 Maintenance, Repair

6.1 Maintenance

DANGER



Caution: contaminated parts

Contaminated parts can be detrimental to health and environment.

Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

6.1.1 Cleaning the Gauge

Small deposits on the electrode system can be removed by baking the anode (Degas → 🗎 29). In the case of severe contamination, the baffle can be exchanged easily (→ 🗎 17). The sensor itself cannot be cleaned and needs to be replaced in case of severe contamination (→ 🗎 51).

A slightly damp cloth normally suffices for cleaning the outside of the unit. Do not use any aggressive or scouring cleaning agents.



Make sure that no liquid can penetrate the product. Allow the product to dry thoroughly before putting it into operation again.



Gauge failures due to contamination are not covered by the warranty.

6.2 Adjusting the Gauge

The gauge is factory-calibrated. Through the use in different climatic conditions, fitting positions, aging or contamination (→ 🗎 29) and after exchanging the sensor (→ 🗎 51) a shifting of the characteristic curve can occur and readjustment can become necessary. Only the Pirani part can be adjusted.

6.2.1 Adjustment at Atmospheric Pressure

At the push of a button the digital value and thus the analog output are adjusted electronically to 10 V at atmospheric pressure.

Adjustment is necessary if

- at atmospheric pressure, the output signal is <10 V
- the display reads < atmospheric pressure (if the gauge has a display)
- at atmosphere, the digital value of the RS232C interface is < atmospheric pressure
- at atmosphere, the digital value received by the bus controller of the fieldbus gauges (DeviceNet, Profibus or RS485) is < atmospheric pressure
- when the vacuum system is vented, the output voltage reaches 10 V (limited to 10 V by the software) before the measured pressure has reached atmosphere (gauges with display will show the error "5" at atmospheric pressure (Pirani sensor warning → 🗎 30))
- when the vacuum system is vented, the digital value of the RS232C interface reaches its maximum before the measured pressure has reached atmosphere
- when the vacuum system is vented, the digital value received by the bus controller of the fieldbus (DeviceNet, Profibus or RS485) reaches its maximum before the measured pressure has reached atmosphere.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Required tools

- Pin approx. ø1.3 × 50 mm (e.g. a bent open paper clip)

Procedure

Gauges BPG400-SD, -SP and -SR are mechanically slightly different from the BPG400. The adjustment opening of BPG400-SD, -SP and -SR is on one side of the gauge housing. However, the adjustment procedure is the same for all gauge versions.


❶ Operate gauge for approx. 10 minutes at atmospheric pressure.

If the gauge was operated before in the BA range, a cooling-down time of approx. 30 minutes is to be expected (gauge temperature = ambient temperature).

❷ Insert the pin through the opening and push the button inside for at least 5 s.

BPG400

BPG400-SD
BPG400-SP
BPG400-SR

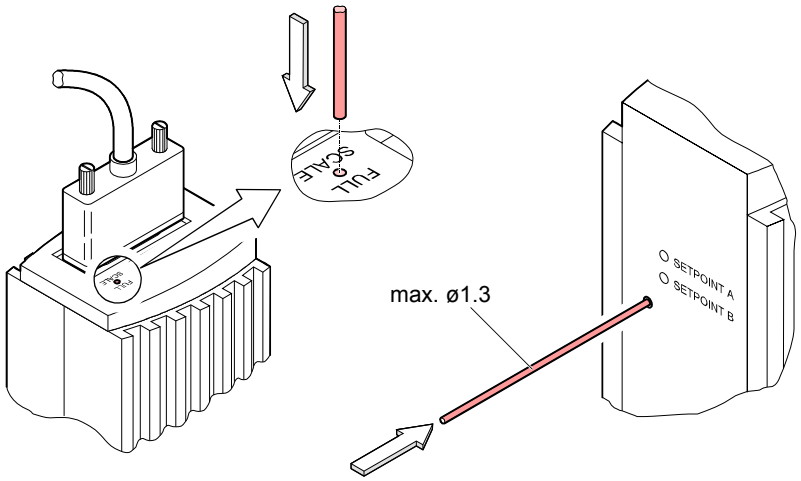

Gauges with display will show the reading "1000 mbar" and the function "A" when the button has been pushed for 4 s. Upon completion of the adjustment, the function indication "A" disappears.

The gauge is automatically adjusted (≈10 s).

The gauge is now adjusted at atmospheric pressure.

6.2.2 Zero Point Adjustment

A zero point adjustment is recommended

- after the sensor has been exchanged
- if display shows "FAIL 5" (→ 🗎 30)
- as part of the usual maintenance work for quality assurance

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Required tools

- Pin approx. ø1.3 × 50 mm (e.g. a bent open paper clip)

Procedure

The push button used for the adjustment at atmospheric pressure is also used for the zero point adjustment (→ 🗎 47).

❶ Operate gauge for approx. 10 minutes at a pressure of ≤1×10^{-4} mbar.

❷ Insert the pin through the opening and push the button inside for at least 2 s.

The adjustment is done automatically and ends after 2 minutes.

The zero point of the gauge is now adjusted.

6.3 What to Do in Case of Problems

Required tools / material


In the event of a fault or a complete failure of the output signal, the gauge can easily be checked.

- Voltmeter / ohmmeter
- Allen key, size 2.5 mm
- Spare sensor (if the sensor is faulty)

Troubleshooting (BPG400)

The output signal is available at the sensor cable connector (Pin 2 and Pin 12).

In case of an error, it may be helpful to just turn off the mains supply and turn it on again after 5 s.

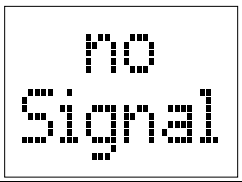Problem	Possible cause	Correction
Output signal permanently ≈0V	Sensor cable defective or not correctly connected	Check the sensor cable
	No supply voltage	Turn on the power supply
	Gauge in an undefined status	Turn the gauge off and on again (reset)
Output signal ≈0.3 V (Display: error = 8)	Hot cathode error (sensor faulty)	Replace the sensor (→ 🗎 51)
Output signal ≈0.5 V (Display: error = 9)	Pirani error (sensor defective)	Replace the sensor (→ 🗎 51)
Output signal ≈0.5 V	Electronics unit not mounted correctly on sensor	Check the connection
Display: 	Internal data connection not working	Turn the gauge off and on again after 5 s Replace the electronics unit
Gauge does not switch over to BA at low pressures	Pirani zero point out of tolerance	Carry out a zero point adjustment (→ 🗎 48)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Troubleshooting (sensor)

If the cause of a fault is suspected to be in the sensor, the following checks can be made with an ohmmeter (the vacuum system need not be vented for this purpose).

Separate the sensor from the electronics unit (→ 🗎 14). Using an ohmmeter, make the following measurements on the contact pins.

Ohmmeter measurement between pins	👍	👎	Possible cause
2 + 4	≈37 Ω	≫37 Ω	Pirani element 1 broken
4 + 5	≈37 Ω	≫37 Ω	Pirani element 2 broken
6 + 7	≈0.15 Ω	≫0.15 Ω	Filament of hot cathode broken
4 + 1	∞	≪∞	Electrode - short circuit to ground
6 + 1	∞	≪∞	Electrode - short circuit to ground
3 + 1	∞	≪∞	Electrode - short circuit to ground
9 + 1	∞	≪∞	Electrode - short circuit to ground
6 + 3	∞	≪∞	Short circuit between electrodes
9 + 3	∞	≪∞	Short circuit between electrodes

View on sensor pins

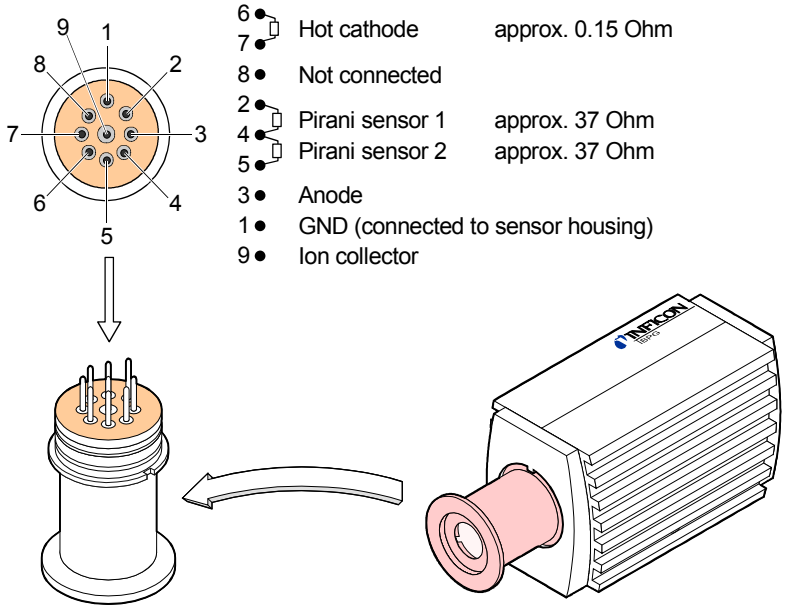

Correction

All of the above faults can only be remedied by replacing the sensor (→ 🗎 51).

Troubleshooting on Fieldbus Gauges (BPG400-SD, -SP, -SR)

Error diagnosis of fieldbus gauges can only be performed as described above for the basic sensor and sensor electronics. Diagnosis of the fieldbus interface can only be done via the superset bus controller (→ 🕮 [1], [2] or 🗎 37).

For diagnosis of the BPG400-SD (DeviceNet) gauges, the status lights might produce some useful information (→ 🗎 35).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6.4 Replacing the Sensor

Replacement is necessary, when

- the sensor is severely contaminated
- the sensor is mechanically deformed
- the sensor is faulty, e.g. filament of hot cathode broken (→ 🗎 49)
- the sensor is faulty, e.g. Pirani element broken (→ 🗎 49)

Required tools / material

- Allen key, size 2.5 mm
- Spare sensor (→ 🗎 52)

Procedure

❶ Deinstall the gauge (→ 🗎 46).

❷ Deinstall the electronics unit from the faulty sensor and mount it to the new sensor (→ 🗎 14).

❸ Adjust the gauge (→ 🗎 47).

✓ The new sensor is now installed.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

7 Options

	Part number
24 VDC power supply / RS232C line (→ 🗎 25)	353-511
Extension 100 mm (→ 🗎 16)	353-510
Baffle DN 25 ISO-KF / DN 40 CF-R (→ 🗎 17)	353-512

8 Spare Parts

When ordering spare parts, always indicate:

- All information on the product nameplate
- Description and part number

	Part number
Replacement sensor BPG400, vacuum connection DN 25 ISO-KF (including Allen key)	354-490
Replacement sensor BPG400, vacuum connection DN 40 CF-R (including Allen key)	354-491

9 Storage

Caution

Caution: vacuum component

Inappropriate storage leads to an increase of the desorption rate and/or may result in mechanical damage of the product.

Cover the vacuum ports of the product with protective lids or grease free aluminum foil. Do not exceed the admissible storage temperature range (→ 🗎 11).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

10 Returning the Product



WARNING

Caution: forwarding contaminated products

Contaminated products (e.g. radioactive, toxic, caustic or biological hazard) can be detrimental to health and environment.

Products returned to INFICON should preferably be free of harmful substances. Adhere to the forwarding regulations of all involved countries and forwarding companies and enclose a duly completed declaration of contamination (→ 🗎 58).

Products that are not clearly declared as "free of harmful substances" are decontaminated at the expense of the customer.

Products not accompanied by a duly completed declaration of contamination are returned to the sender at his own expense.

11 Disposal



DANGER

Caution: contaminated parts

Contaminated parts can be detrimental to health and environment.

Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.



WARNING

Caution: substances detrimental to the environment

Products or parts thereof (mechanical and electric components, operating fluids etc.) can be detrimental to the environment.

Dispose of such substances in accordance with the relevant local regulations.

Separating the components

After disassembling the product, separate its components according to the following criteria:

Contaminated components

Contaminated components (radioactive, toxic, caustic or biological hazard etc.) must be decontaminated in accordance with the relevant national regulations, separated according to their materials, and disposed of.

Other components

Such components must be separated according to their materials and recycled.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Appendix

A: Relationship Output Signal – Pressure

Conversion formulae


$$p = 10^{(U - 7.75) / 0.75 + c}$$

$$U = 0.75 \times (\log p - c) + 7.75$$

where

U	p	c
[V]	[mbar]	0
[V]	[Pa]	2
[V]	[Torr]	-0.125

Conversion curve

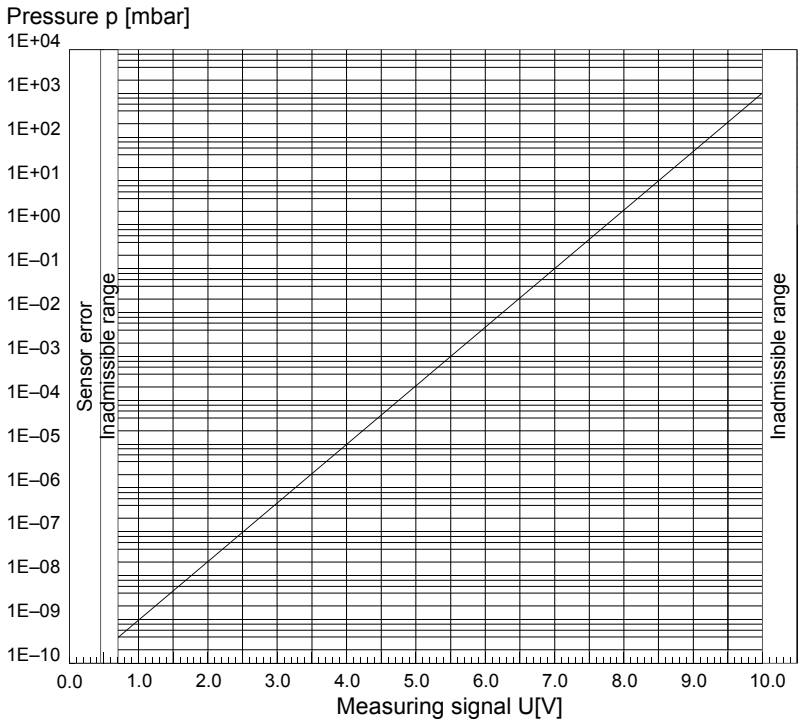

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Conversion table

Output signal U [V]	Pressure p [mbar]	[Torr]	[Pa]
0.3 / 0.5	Sensor error (→ 🗎 49)		
0.51 … 0.774	Inadmissible range		
0.774	5×10^{-10}	3.75×10^{-10}	5×10^{-8}
1.00	1×10^{-9}	7.5×10^{-10}	1×10^{-7}
1.75	1×10^{-8}	7.5×10^{-9}	1×10^{-6}
2.5	1×10^{-7}	7.5×10^{-8}	1×10^{-5}
3.25	1×10^{-6}	7.5×10^{-7}	1×10^{-4}
4.00	1×10^{-5}	7.5×10^{-6}	1×10^{-3}
4.75	1×10^{-4}	7.5×10^{-5}	1×10^{-2}
5.50	1×10^{-3}	7.5×10^{-4}	1×10^{-1}
6.25	1×10^{-2}	7.5×10^{-3}	1×10^{0}
7.00	1×10^{-1}	7.5×10^{-2}	1×10^{1}
7.75	1×10^{0}	7.5×10^{-1}	1×10^{2}
8.50	1×10^{1}	7.5×10^{0}	1×10^{3}
9.25	1×10^{2}	7.5×10^{1}	1×10^{4}
10.00	1×10^{3}	7.5×10^{2}	1×10^{5}
>10.00	Inadmissible range		

B: Gas Type Dependence

Indication range above 10^{-2} mbar

Pressure indicated (gauge adjusted for air, Pirani-only mode)

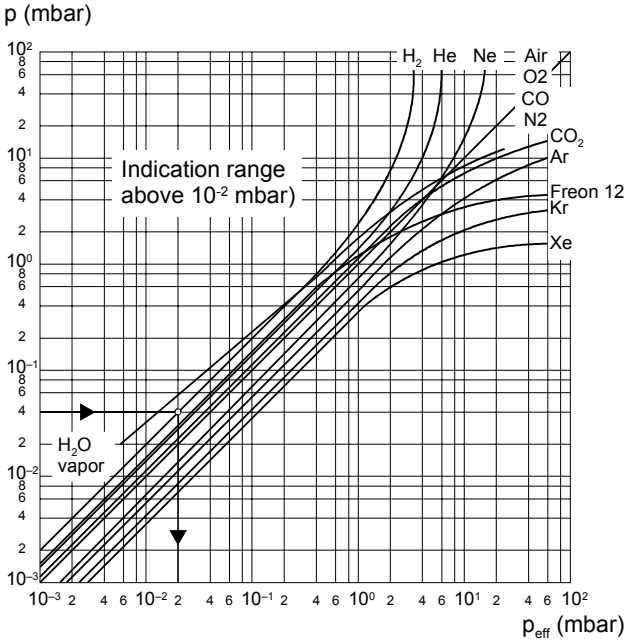

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Calibration in pressure range 10^{-2} … 1 mbar

The gas type dependence in the pressure range 10^{-2} … 1 mbar can be compensated by means of the following formula:

$$p_{eff} = C \times \text{indicated pressure}$$

where

Gas type	Calibration factor C
Air, O_2, CO	1.0
N_2	0.9
CO_2	0.5
Water vapor	0.7
Freon 12	1.0
H_2	0.5
He	0.8
Ne	1.4
Ar	1.7
Kr	2.4
Xe	3.0

(The above calibration factors are mean values.)

Calibration in pressure range $<10^{-3}$ mbar

The gas type dependence in the pressure range $<10^{-3}$ mbar can be compensated by means of the following formula (gauge adjusted for air):

$$p_{eff} = C \times \text{indicated pressure}$$

where

Gas type	Calibration factor C
Air, O_2, CO, N2	1.0
N_2	1.0
He	5.9
Ne	4.1
H_2	2.4
Ar	0.8
Kr	0.5
Xe	0.4

(The above calibration factors are mean values.)



A mixture of gases and vapors is often involved. In this case, accurate determination is only possible with a partial-pressure measuring instrument.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

C: Literature

🕮 [1] www.inficon.com
Communication Protocol
DeviceNet™ BPG400-SD
tira03e1
INFICON AG, LI–9496 Balzers, Liechtenstein

🕮 [2] www.inficon.com
Communication Protocol
Profibus BPG400-SP
tira36e1
INFICON AG, LI–9496 Balzers, Liechtenstein

🕮 [3] www.inficon.com
Product descriptions and downloads
INFICON AG, LI–9496 Balzers, Liechtenstein

🕮 [4] www.odva.org
Open DeviceNet Vendor Association, Inc.
DeviceNet™ Specifications

🕮 [5] www.profibus.com
Profibus user organization

🕮 [6] European Standard for DeviceNet EN 50325

🕮 [7] European Standard for Profibus EN 50170

🕮 [8] www.inficon.com
Instruction Sheet
BPG400 (all versions)
tima03e1
INFICON AG, LI–9496 Balzers, Liechtenstein

🕮 [9] www.inficon.com
Instruction Sheet
BPG400-SD, BPG400-SP, BPG400-SR
tima36e1
INFICON AG, LI–9496 Balzers, Liechtenstein

🕮 [10] www.inficon.com
INFICON AG, LI–9496 Balzers, Liechtenstein

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Declaration of Contamination

The service, repair, and/or disposal of vacuum equipment and components will only be carried out if a correctly completed declaration has been submitted. Non-completion will result in delay.

This declaration may only be completed (in block letters) and signed by authorized and qualified staff.

1 Description of product

Type _____

Part number _____

Serial number _____

2 Reason for return

_____

3 Operating fluid(s) used (Must be drained before shipping.)

_____

4 Used in copper process

no ❑ yes ❑ → Seal product in plastic bag and mark it with a corresponding label.

5 Process related contamination of product:

toxic	no ❑ 1)	yes ❑
caustic	no ❑ 1)	yes ❑
biological hazard	no ❑	yes ❑ 2)
explosive	no ❑	yes ❑ 2)
radioactive	no ❑	yes ❑ 2)
other harmful substances	no ❑ 1)	yes ❑



1) or not containing any amount of hazardous residues that exceed the permissible exposure limits

2) Products thus contaminated will not be accepted without written evidence of decontamination.

The product is free of any substances which are damaging to health. yes ❑

6 Harmful substances, gases and/or by-products

Please list all substances, gases, and by-products which the product may have come into contact with:

Trade/product name	Chemical name (or symbol)	Precautions associated with substance	Action if human contact

7 Legally binding declaration:

We hereby declare that the information on this form is complete and accurate and that we will assume any further costs that may arise. The contaminated product will be dispatched in accordance with the applicable regulations.

Organization/company _____

Address _____ Post code, place _____

Phone _____ Fax _____

Email _____

Name _____

Date and legally binding signature

_____

Company stamp

This form can be downloaded from our website.

Copies:
Original for addresee - 1 copy for accompanying documents - 1 copy for file of sender

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Notes

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Original: German tina03d1-b (2004-02)



INFICON
LI–9496 Balzers
Liechtenstein
Tel +423 / 388 3111
Fax +423 / 388 3700
reachus@inficon.com

www.inficon.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP