ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Instek GLA-1016 Series* at our website: *Click HERE*

Logic Analyzer

GLA-1016/1032/1132

USER MANUAL

GW INSTEK PART NO. 82LA-11320M0



ISO-9001 CERTIFIED MANUFACTURER

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EC Declaration of Conformity

We
GOOD WILL INSTRUMENT CO., LTD.
(1) No.7-1, Jhongsing Rd., Tucheng City, Taipei County, Taiwan
(2) No. 69, Lu San Road, Suzhou City (Xin Qu), Jiangsu Sheng, China
declare, that the below mentioned product
Type of Product: Logic Analyzer
GLA-1016, GLA-1032, GLA-1132
are herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Law of Member States relating to Electromagnetic Compatibility (89/336/EEC) and the amendments in the Council Directive 92/31/EEC, 93/68/EEC.
For the evaluation regarding the Electromagnetic Compatibility, the following standards were applied:

◎ **EMC**

EN 55022: 1998 + A1:2000 +A2:2003	**EN 55024: 1998+A1:2001+A2:2003**
Conducted Emission Class A Radiated Emission	Electrostatic Discharge IEC 61000-4-2: A2:2001
	Radiated Immunity IEC 61000-4-3: 2002 + A1:2002
	Electrical Fast Transients IEC 61000-4-4: 2004 (Not Applied)
	Surge Immunity IEC 61000-4-5: :2001(Not Applied)
	Conducted Susceptibility IEC 61000-4-6: 2003 + A1:2004 (Not Applied)
	Power Frequency Magnetic Field IEC 61000-4-8: 2001
	Voltage Dip/ Interruption IEC 61000-4-11: 2004 (Not Applied)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table of Contents

Safety Instructions 5

GLA Overview.....6

Main Features 7
Package Contents..... 8
Panel Overview 9
Display Overview 11
Operation Shortcuts 16

Installation 20

Software Installation 21
Power Up 26
Functionality Check..... 28

File Operation 29

Open/Close..... 30
Save 32
Printout..... 36
Handling Multiple Files 37

Bus/Signal Setup.....39

Sampling/Compression Setup..... 40
Signal/Bus setup..... 43

Trigger Setup 47

Signal Triggering Condition Setup..... 48
Bus Triggering Condition Setup 51
General Triggering Properties Setup 53
Enable Trigger Function Setup 57
Trigger Output Signal..... 61

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Display Setup 62

Toolbar Setup 63
Horizontal/Vertical Scale Setup 65
Signal Display Setup 67
Color Setup 71

Signal Capturing 74

Data Operation 76

Data Bar Operation 77
Waveform Position 81
Data Search 83
Zoom In/Out 87
I^2C Bus Analysis 90
RS-232C Signal Analysis 94
Waveform Statistics 97

System Setting 100

Keyboard Shortcut Setup 100
System Information 102

Help Information 103

FAQ 105

Specification 107

Index 109

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Safety Instructions

This chapter contains important safety instructions that must be followed when operating GLA and when keeping it in storage. Read the following before any operation to insure safety and to keep the best condition for GLA.

Symbols and Guidelines

Symbol  CAUTION	Caution symbol identifies conditions or practices that could result in damage to GLA or to other properties.
General Guideline  CAUTION	• Do not place any heavy object on GLA. • Avoid severe impacts or rough handling that leads to damaging GLA. • Do not discharge static electricity to GLA. • Do not disassemble GLA unless you are qualified as service personnel.
Cleaning GLA	• Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid into GLA. • Do not use chemicals or cleaners containing harsh materials such as benzene, toluene, xylene, and acetone.
Operation Environment  WARNING	Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below) • Relative Humidity: < 80% • Altitude: < 2000m • Temperature: 0°C to 50°C
Storage Environment	Location: Indoor • Relative Humidity: < 80% • Temperature: −40°C to 80°C

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

GLA Overview

This chapter describes GLA series features and appearances in a nutshell. Use the Package Contents section to check if there is any missing component.

Main features	Series lineup	7
	Characteristics	7
Package contents	Package Contents	8
Panel overview	Panel Overview	9
	Input Connector	10
Display overview	Menu bar	11
	Tool bar	12
	Horizontal measurement bar	14
	Bus/Signal and Trigger list	15
Operation shortcuts	File menu	16
	Bus/Signal menu	16
	Trigger menu	17
	Run/Stop menu	17
	Data menu	17
	Tools menu	19
	Window menu	19
	Help menu	19

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Main Features

Series lineup

- GLA-1016: 16 channels, 256Kbit/channel
- GLA-1032: 32 channels, 128Kbit/channel
- GLA-1132: 32 channels, 1Mbit/channel

Characteristics


- Internal clock range: 100Hz ~ 200MHz
- External clock range: 0.001Hz ~ 100MHz
- Rich trigger functionalities: voltage level, count, page, position, delay time and clock, edge and level configuration
- Memory utilization: max. x255 ratio data compression
- Signal characteristic filtering: Enable function
- Various signal display mode: waveform, listing, time, frequency, and address
- I^2C, RS-232C waveform analyzer
- Waveform statistics function
- Compact, lightweight profile
- PC operation with GUI environment
- Fast communication: USB 2.0, 1.1 compatible
- USB bus powered
- Various file export: operation setting, waveform data, display image

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Package Contents

Check the contents before using GLA series. Contact your local dealer in case there is a missing item.

Carrying case contents

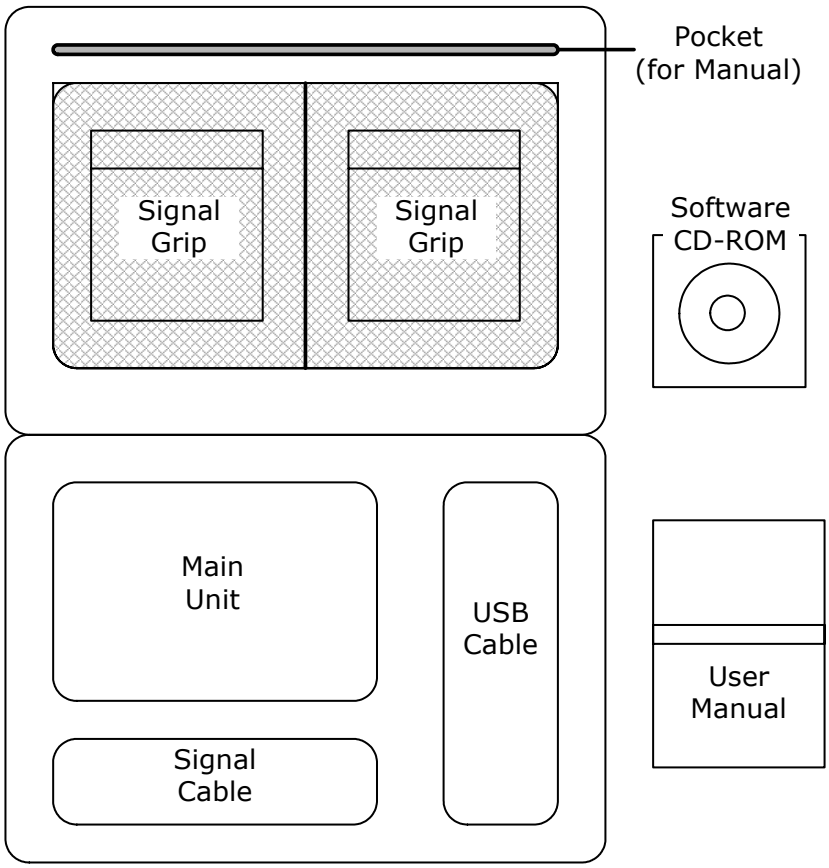


GLA-1016
- Signal Cable: 8pin*2, 2pin*1, 1pin*1, 250mm
- Signal Grip: 20pcs

GLA-1032
- Signal Cable: 16pin*1, 8pin*2, 2pin*1, 1pin*1, 250mm
- Signal Grip: 36pcs

GLA-1132
- Signal Cable: 16pin*1, 8pin*2, 2pin*1, 1pin*1, 250mm
- Signal Grip: 36pcs

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Panel Overview

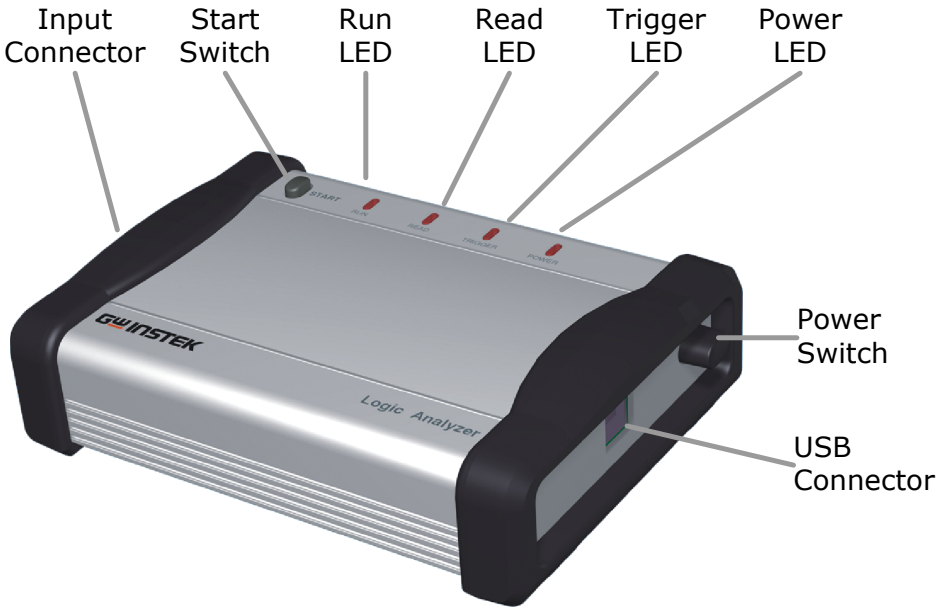


USB Connector	For power input (USB bus) and communication between the PC. USB 1.1/2.0 compatible.
⚠	USB2.0 is strongly recommended for smooth display update. Make sure the cable is also compatible with 2.0 high speed (use the attached cable).
Power Switch Power LED	Switch On▬: LED On (red) Switch Off▬: LED Off
Trigger LED	Turns On when the trigger condition is met. For details, see page61 (LED details), page47 (trigger in general).
Read LED	Turns On when GLA transmit waveform data to PC. For details, see page61.
Run LED	Turns On when GLA is waiting for trigger condition. For details, see page61.
Start Switch	Triggers signal capturing. This is the same functionality as the Single Run ▶. For Run/Stop details, see page74.




Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Input Connector

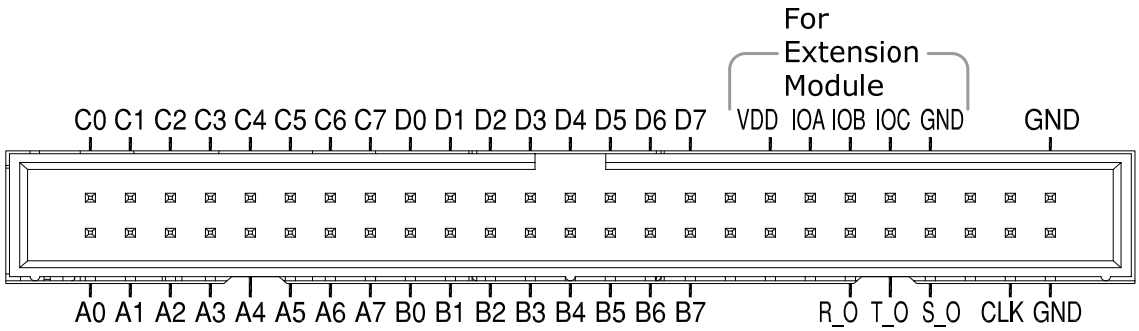


A0~D7	Signal input terminal. C0 ~ C7, D0 ~ D7 are not applicable to GLA-1016.
VDD, IOA/B/C, GND	+3.3V power, IO port, GND terminal for extension module.
⚠	Do not use these connectors other than extension module usage purpose.
R_O, T_O, S_O	Output signals for monitoring data capturing and trigger timing. Read output (R_O) indicates waveform data is transferred to PC, Trigger output (T_O) indicates trigger condition has occurred, and Start output (S_O) indicates GLA started waiting for trigger condition. For details, see page61.
CLK	External (synchronous) clock signal input, 0.001Hz ~ 100MHz. For details, see page41.
GND	Ground terminal.
⚠	We strongly recommend connecting both two Ground terminals to ensure stable data capturing.

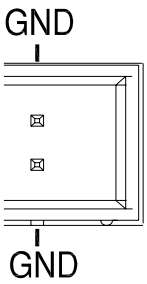

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Display Overview

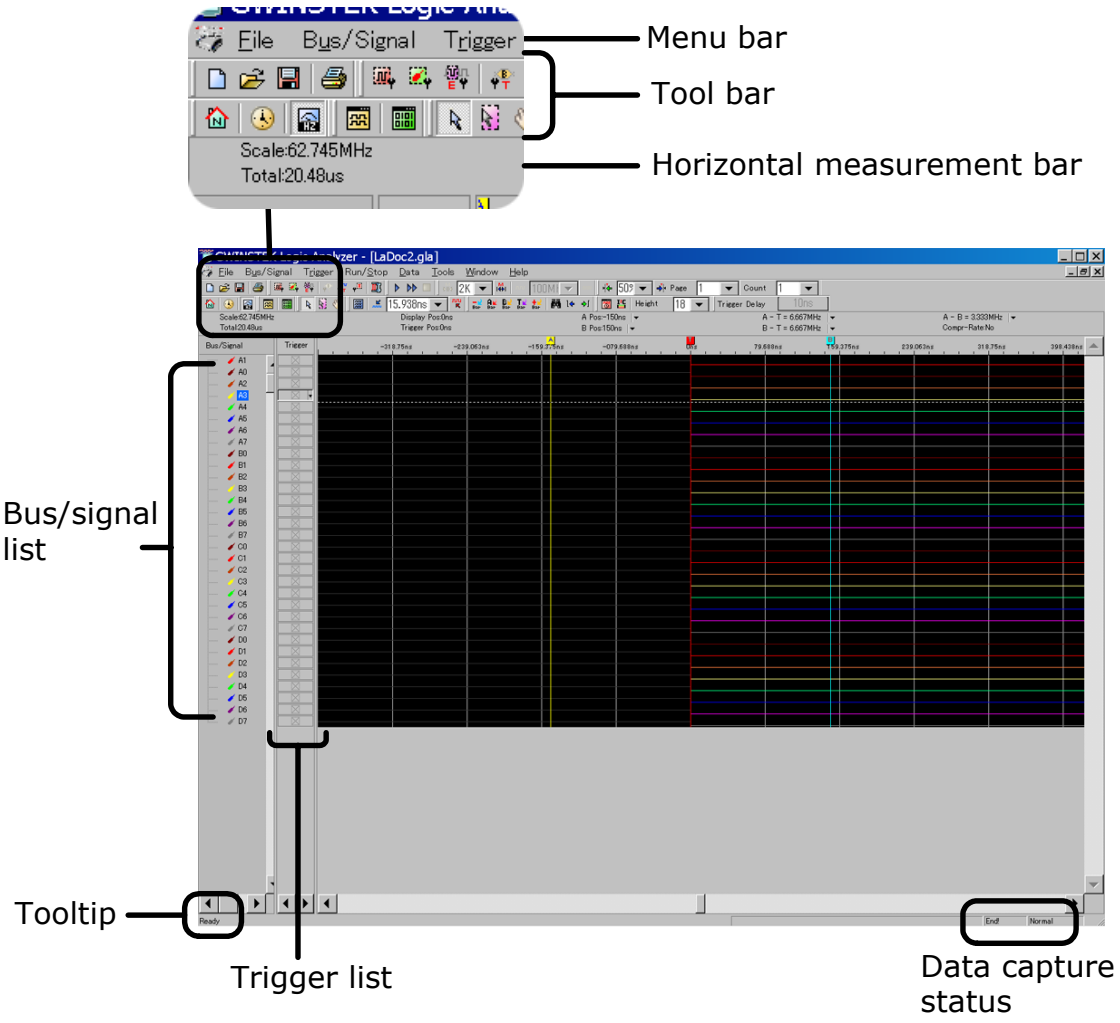

Menu bar

Shortcut	Display	Description
Alt + f	File	File operation (page29).
Alt + u	Bus/Signal	Bus/Signal configuration (page39).
Alt + r	Trigger	Trigger configuration (page47).
Alt + s	Run/Stop	Data capturing (page74).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Alt + d	Data	Data operation (page76) and display setup (page62).
Alt + t	Tools	Display setup (page62), Shortcut key setup (page100), I^2C analysis (page90), and RS-232C analysis (page94).
Alt + w	Window	Display configuration (page67) and organizing multiple files (page37).
Alt + h	Help	Help file (page103) and system information (page102).

Tool bar

Toolbar collects icons for major operations, sorted in groups.
To enable/disable each group, select Tools→Customize… from the menu and go to the Toolbar tab. For details, see page63.

Standard group

 Page30
Create a new project file

 Page31
Open a project file

 Page32
Save the project file

 Page36
Print out the display

Trigger group

 Page40
Configure sampling rate

 Page43
Configure signal/bus

 Page57
Setup enable function

 Page51
Setup bus trigger properties

 Page48
Setup signal trigger properties

 Page53
Setup general trigger properties

 Page42 Enable/disable data compression


Run/Stop group

 Page74
Single run

 Page74
Continuous run

 Page75 Stop running

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Sampling group	 Page41 Select sampling memory size	 Page41 Select sampling frequency
Trigger content set group	 Page56 Set trigger position	 Page54 Set trigger page
	 Page54 Set trigger count	
Display mode group	 Page65 Horizontal unit in address	 Page65 Horizontal unit in time
	 Page65 Horizontal unit in frequency	
Windows group	 Page67 Waveform display mode	 Page67 Listing display mode
Mouse pattern group	 Normal arrow mode	 Page88 Area selection (Enclose) mode
	 Page79 Hand mode	 Page97 Show waveform statistics
Zoom group	 Page88 Show all waveform data	 Page89 Limit the waveform display area
	 Page87 Zoom in to/out of data	
Data group	 Page78 Delete data bar	 Page79 Move A bar to the center
	 Page79 Move B bar to the center	 Page79 Move T bar (trigger) to the center

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



Page78
Add data bar


Page83
Search data


Page81
Go to the previous edge


Page81
Go to the next edge

Show time/height group


Page69
Show waveform timing



Page90
Analyze I²C waveform


Page94
Analyze RS-232C waveform



Page66
Change the waveform bar height

Trigger delay group




Page56
Set and show the amount of trigger delay

Horizontal measurement bar

Displays the horizontal scale and measurement results of the display. For details, see page65.


Horizontal range




Scale (upper line) shows the data acquisition clock frequency.

Total (lower line) shows the total length of data acquired by GLA, followed by the length covered by the analysis range bar. For analysis range details, see page89.

Position






Display Pos (position) shows the timing of the display center position.

Trigger Pos (position) shows the trigger timing. For details, see page79.

A/B Position shows user-defined bar timings. For details, see page79.

Time/frequency difference

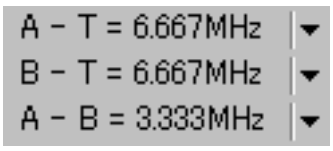


Shows the distance between two bars, whether trigger or user-defined, in time, frequency, or address point. For details, see page65.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Compression	Compr-Rate:0.063	Shows the data compression ratio when the compression mode is enabled. For details, see page42.

Bus/Signal and Trigger list

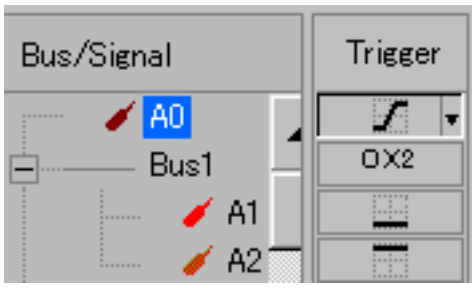

Signal and bus names are shown in colored codes, with matching trigger setting on the right side.

Bus/signal setup details→page39.

Trigger setup details→page47.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Operation Shortcuts

This is the collection of all operations available from the menu, icon, or keyboard shortcut. The "Keyboard map" on the Help menu also opens the shortcut list.

File menu

Description	Shortcut	Icon	Menu
Close GLA software.	Alt+F4	—	File→Exit
Create a new file.	Ctrl+N		File→New
Open a file.	Ctrl+O		File→Open
Close the file.	Ctrl+F4	—	File→Close
Save the file.	Ctrl+S		File→Save
Save the file in a different name.	—	—	File→Save As
Save waveform data and setting info into *.txt or *.csv file.	Ctrl+Shift+E	—	File→Export
Save the screen snapshot into *.jpg or *.bmp file.	Ctrl+C	—	File→Capture Window
Select the language.	—	—	File→Language
Prints out the screen snapshot.	Ctrl+P		File→Print
Shows the screen snapshot printout preview.	—	—	File→Print Preview
Opens the standard printer setup window.	—	—	File→Print Setup
Switch between files.	Ctrl+Tab	—	Window→1, 2, …
Display multiple files at once.	—	—	Window→Cascade, Horizontal, Vertical

Bus/Signal menu

Description	Shortcut	Icon	Menu
Open the Sampling setup dialogue window.	—		Bus/Signal→Sampling Setup
Decrease the sampling rate.	F2	—	—
Increase the sampling rate.	F3	—	—
Open the Channel setup dialogue window.	—		Bus/Signal→Channels Setup
Group signals into bus.	Ctrl+G	—	Bus/Signal→Group into Bus
Ungroup bus into signals.	Ctrl+U	—	Bus/Signal→Ungroup from Bus

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Expand the bus.	—	—	Bus/Signal→Expand
Collapse the bus.	—	—	Bus/Signal→Collapse
Automatically adjust the channel row width (only in listing mode)	—	—	Bus/Signal→Format Row→Auto Size
Move the cursor up.	Up	—	Bus/Signal→Format Row→Move Up
Move the cursor down.	Down	—	Bus/Signal→Format Row→Move Down
Hide the signal/bus.	—	—	Bus/Signal→Format Row→Hide
Show all the signal/bus.	—	—	Bus/Signal→Format Row→Show All
Set the signal/bus color.	—	—	Bus/Signal→Format Row→Color
Rename signal or bus.	—	—	Bus/Signal→Rename

Trigger menu

Description	Shortcut	Icon	Menu
Open the Bus trigger setup dialogue window.	—		Trigger→Bus
Open the Signal trigger setup dialogue window.	—		Trigger→Signal
Open the General trigger properties dialogue window.	—		Trigger→Properties
Change signal trigger condition.	Space	—	Trigger→…

Run/Stop menu

Description	Shortcut	Icon	Menu
Single run.	F5		Run/Stop→Single Run
Continuous run.	F6		Run/Stop→Repetitive Run
Stop running.	F7		Run/Stop→Stop

Data menu

Description	Shortcut	Icon	Menu
Go to the next data page.	PageDown	—	—
Go to the previous data page.	PageUp	—	—
Go to the beginning of data.	Home	—	—
Go to the end of data.	End	—	—
Move the waveform position right.	Right	—	—

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Move the waveform position left.	Left	—	—
Add data bar.	Alt+A		Data→Add Bar
Delete data bar.	Alt+B		Data→Delete Bar
Move T bar to the display center.	T, Ctrl+T		Data→GoTo→GoTo Trigger
Move A bar to the display center.	A, Ctrl+A		Data→GoTo→GoTo A Bar
Move B bar to the display center.	B, Ctrl+B		Data→GoTo→GoTo B Bar
Move any bar (T, A, B, Ds, Dp, user defined bar) to the display center.	—	—	Data→GoTo→GoTo More
Move to the previous edge.	F11		Data→Before
Move to the next edge.	F12		Data→After
Move the display sideway (use the Hand pointer).	H		Data→Hand
Select the zoom area (use the Enclose pointer)	E		Data→Enclose
Use the normal pointer.	Esc		Data→Normal
Search data.	Ctrl+F		Data→Find Data Value
Zoom in.	F9		Data→Zoom In
Zoom out.	F8		Data→Zoom Out
Undo the last zoom.	Ctrl+Z		Data→Undo Last Zoom
Show all data.	F10		Data→Show All Data
Adjust the display range to analysis bar.	—		—
Select the data analysis range.	—	—	Data→Select Analytic Range
Show waveform analysis result.	—		—
Show waveform data in binary.	—	—	Data→Show As→Binary
Show waveform data in decimal.	—	—	Data→Show As→ Decimal
Show waveform data in hexadecimal.	—	—	Data→Show As→ Hexadecimal
Show waveform in square form.	—	—	Data→Wave Mode→ Square Waveform
Show waveform in sawtooth form.	—	—	Data→Wave Mode→ Sawtooth Waveform
Activate data compression.	—		—

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Tools menu

Description	Shortcut	Icon	Menu
Open the display customize dialogue window.	—	—	Tools→Customize
Open the I²C analysis dialogue window.	—		Tools→Analy IIC Wave
Open the RS-232 analysis dialogue window.	—		Tools→Analy UART Wave
Show the waveform timing.	—		Tools→Show time of waveform

Window menu

Description	Shortcut	Icon	Menu
Open the display customize dialogue window.	—	—	Tools→Customize
Show the waveform view.	—		Window→Waveform Display
Show the listing view.	—		Window→Listing Display
Show the waveform timing.	—		Window→Show time of waveform
Switch between files.	Ctrl+Tab	—	Window→1, 2, …
Display multiple files at once.	—	—	Window→Cascade, Horizontal, Vertical

Help menu

Description	Shortcut	Icon	Menu
Open the Help file.	F1	—	Help→GWInstek Logic Analyzer
Open the keyboard shortcut list.	—	—	Help→Keyboard Map
Send a bug reporting email.	—	—	Help→Report a Problem
Show the software version.	—	—	Help→About GWInstek Logic Analyzer

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Installation

This chapter describes software installation, activation, and functionality check. Follow these instructions to properly install GLA series.

Software installation	PC requirement 21
	Setup activation 22
	License agreement 22
	User information 23
	Setup type 23
	Custom setup 24
	PC reboot 24
	Driver installation 24
	Uninstall, repair, modification 25
Power Up	Power Up 26
	Demonstration mode 27
Functionality check	Hardware connection 28
	Signal capturing 28

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Software Installation

PC requirement

The readme.txt file in the CD-ROM also contains this information.

OS	Windows 98 Windows Me Windows 2000 Windows XP
CPU	Windows 98/Me: 166MHz minimum Windows 2000/XP: 300MHz minimum
RAM	Windows 98/Me/2000: 128MB minimum Windows XP: 256MB minimum
Hard disc	100MB minimum
USB	1 USB host connector, 1.1 or 2.0 compatible (2.0 strongly recommended)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Installation procedure

Setup activation


Insert the software CD-ROM into the PC. If the below Setup screen does not appear, double-click the Setup.exe file.

Click the INSTALL button.



License agreement


Read the license term and select accept, click Next.

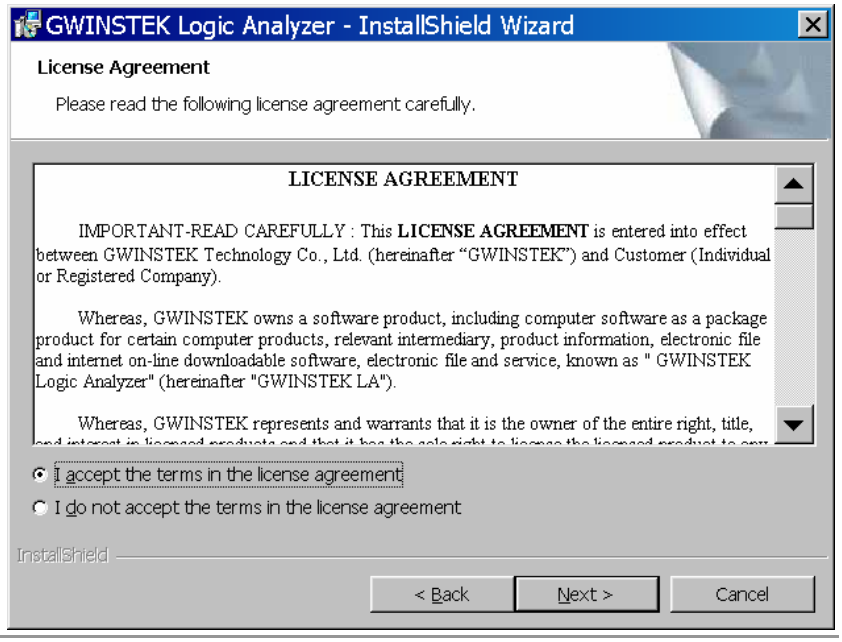

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

User information

Enter your user name and organization. Set the range of user access: All users or the user currently logged in.

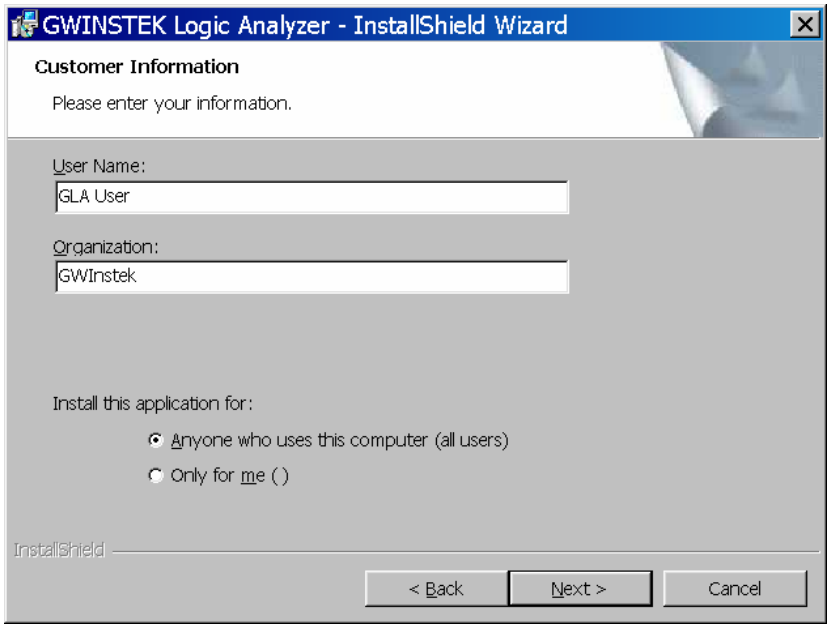


Setup type

Select the setup type.

Complete setup: All features will be installed. The program directory is automatically set.


Custom setup: Installed features and program directory are set by the user. See the next page.

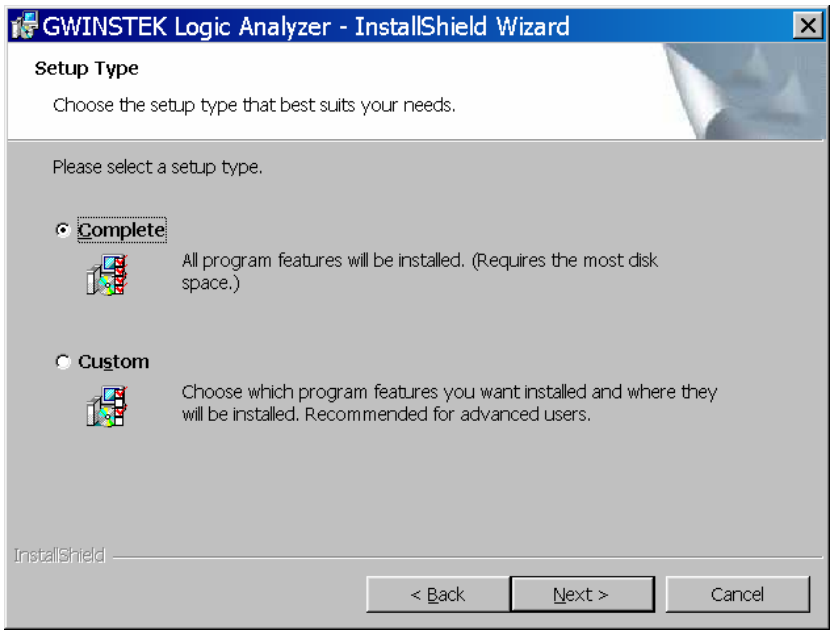

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Custom setup

The custom setup option allows users to select the program features and directory. Installed features can be modified later (page25).

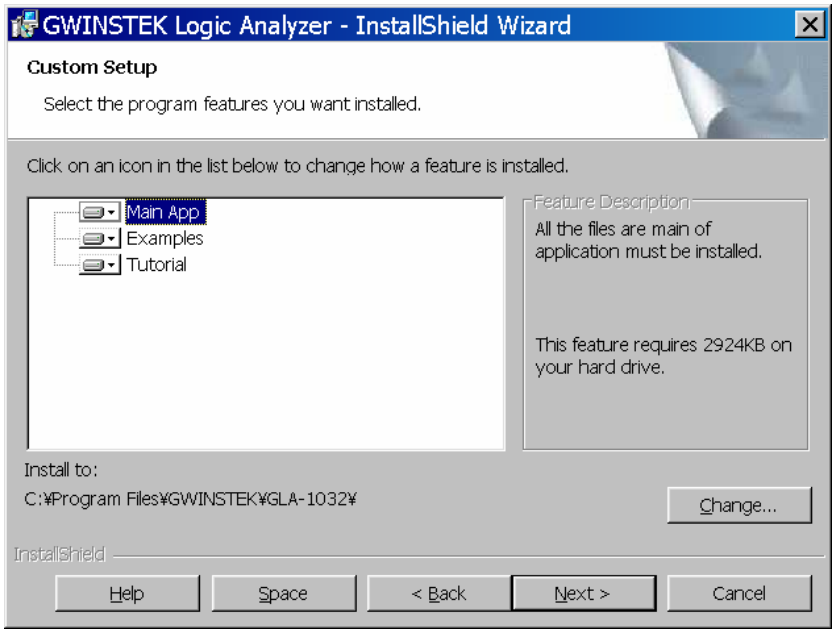

PC reboot

Reboot the PC when the installation is completed.

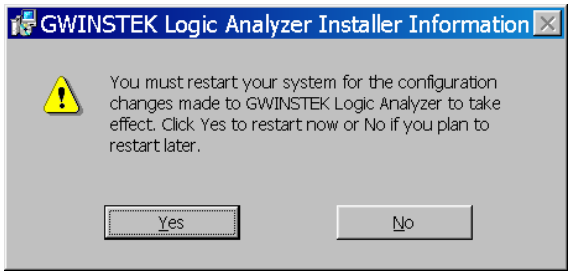

Driver installation

By default the driver is installed together with the main program. In case the PC requires a separate software driver installation, select USB_LA.inf file in the software package.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Uninstall, repair, modification

This page assumes the GLA software is already installed.

Uninstall


Select UnInstall from the PC startup menu,



Or select Remove in the Program Maintenance mode (see below).

Modify/repair

Insert the software CD-ROM and activate Setup.exe. The Program Maintenance menu appears.

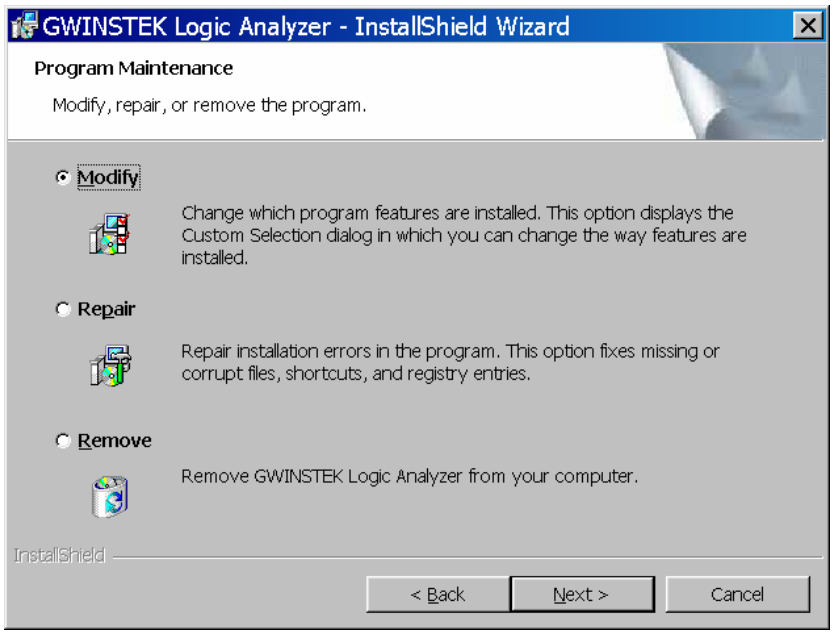

Modify option: Lets the user re-select the installed features.

Repair option: Checks the program status and fixes any broken files.

Remove option: Uninstalls the software.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Power Up

This section assumes the software is already installed.

Hardware connection

Connect GLA and the PC via the USB cable. Press the GLA power switch and make sure the power LED turns On.

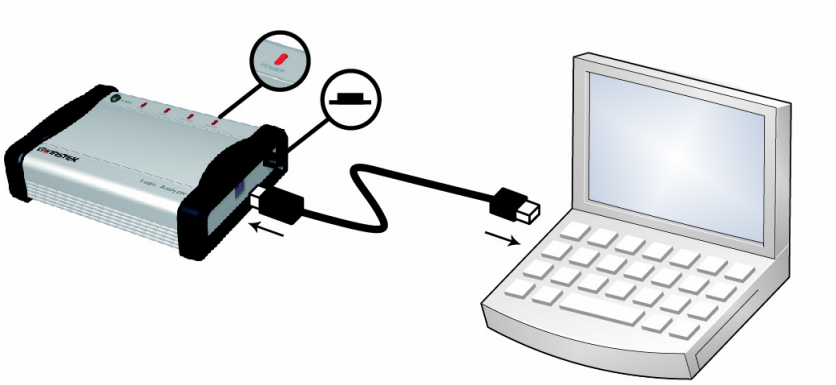


Software activation

1. Double-click the desktop GLA icon 


or activate the GLA from the program startup menu.



2. If the hardware connection error message appears, try the following.
   * Reset the GLA USB connection and try again.
   * Make sure GLA and PC are connected by a single USB cable (Do not use USB extension cable).

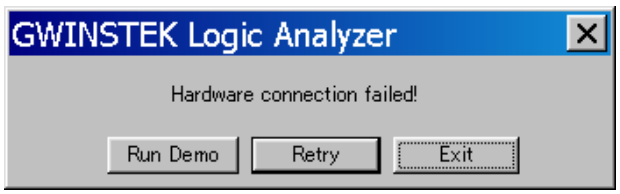


3. If there is already a setup file (*.gla) being saved, the software asks whether to open it.

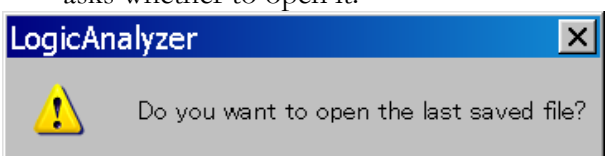


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4. The display appears.

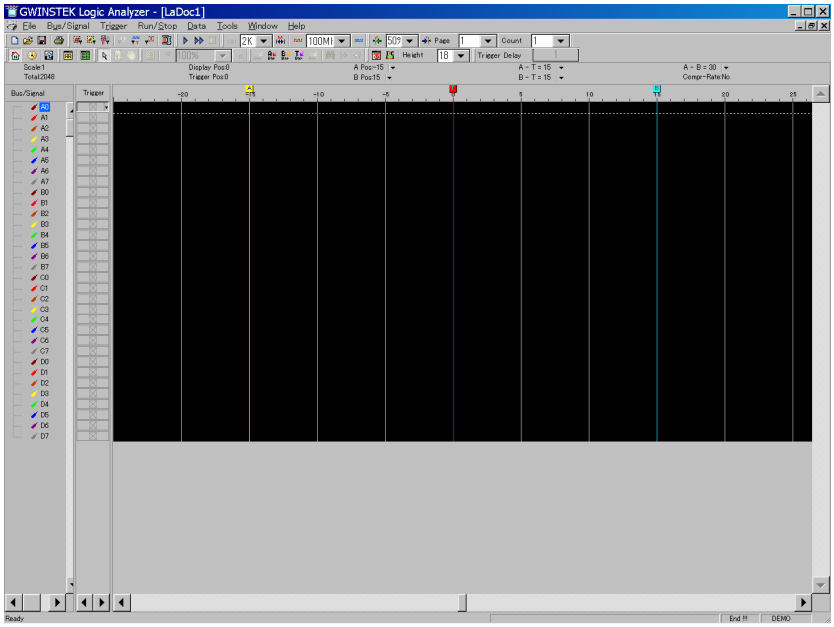

Demonstration mode

You can still run the software without the GLA hardware. When the Hardware connection failure message appears, click Run Demo button.

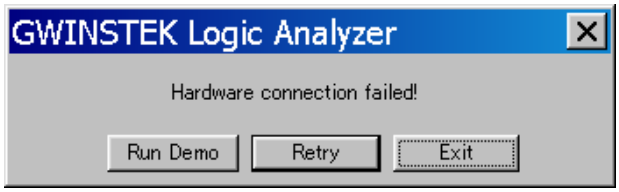

Most of the software features are available, except for signal capturing. You can even recall the old waveform data to be displayed.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Functionality Check


Hardware connection

Activate GLA (page26) and connect the signal source to one of the input terminals.

Signal capturing

Do one of the following actions to capture the signal.

- Press the Start button on GLA
- Click the Run  button on the display
- Press F5 (shortcut for the single run)
- Select Single Run from the Run/Stop menu

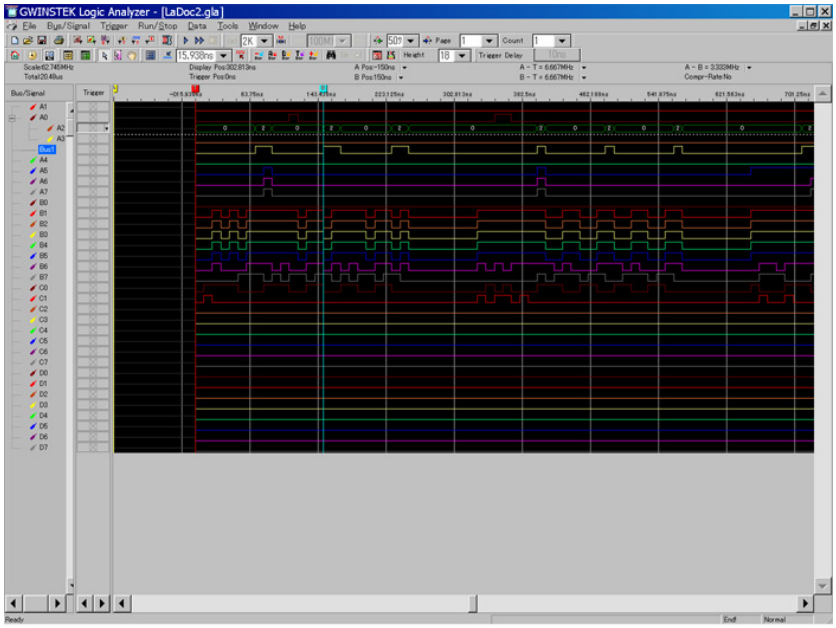

Make sure the signals appear on the display, at the corresponding terminals.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

File Operation


Open/Close	Open GLA software	30
	Close GLA software	30
	Create a file	30
	Open a file	31
	Close the file	31
Save	Save the project file	32
	Save the project file in a different name	32
	Export the data	32
	Save the display image	34
Printout	Print	36
	Print Preview	36
	Printer Setup	36
Handling multiple files	Switch between files	37
	Display multiple files	37

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Open/Close

Open GLA software

Activates GLA software.

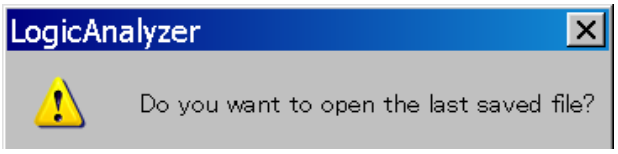Startup Menu	
Desktop icon	
Note	If there is already a setup file (*.gla) being saved, the software asks whether to open it or not. 

Close GLA software

Closes GLA software.

Menu	File → Exit
Shortcut key	Alt+F4

Create a file


Creates a new project file.

Menu	File → New
Shortcut key	Ctrl+N
Icon	
File format	LaDoc**x**.gla (**x** stands for integers: 1, 2, 3...)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Open a file

Opens an existing setup file.

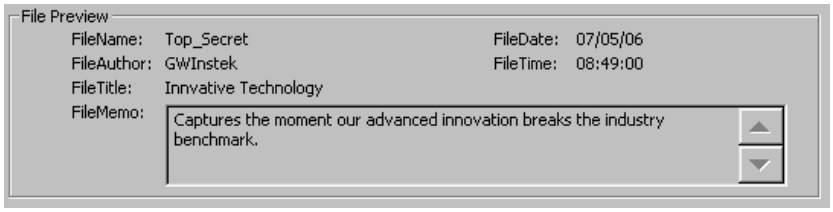Menu	File → Open...
Shortcut key	Ctrl+O
Icon	
File format	*.gla
File properties	

The File open dialogue windows shows the file properties of the pointed *.gla file.

File name, project, author, title, and note can be set at Save As dialogue (page32).

Close the file

Closes the active project file.

Menu	File → Close
Shortcut key	Ctrl+F4

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Save

Save the project file


Overwrites and saves the active Logic Analyzer project file. If the file has never been saved before, the Save As window appears.

Menu	File → Save...
Shortcut key	Ctrl+S
Icon	

Save the project file in a different name

Saves the active Logic Analyzer file in a different name, or in a different directory.

Menu	File → Save As...
File format	*.gla
Dialogue window	The Save As dialogue window includes File property corner where you can fill in the project name, project staff name, and additional note. These information can be viewed when opening the file,

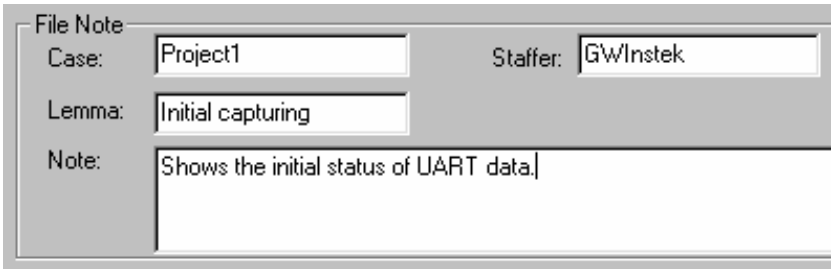


Export the data

Saves waveform data and setup information into *.txt or *.csv format.

Menu	File → Export...

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

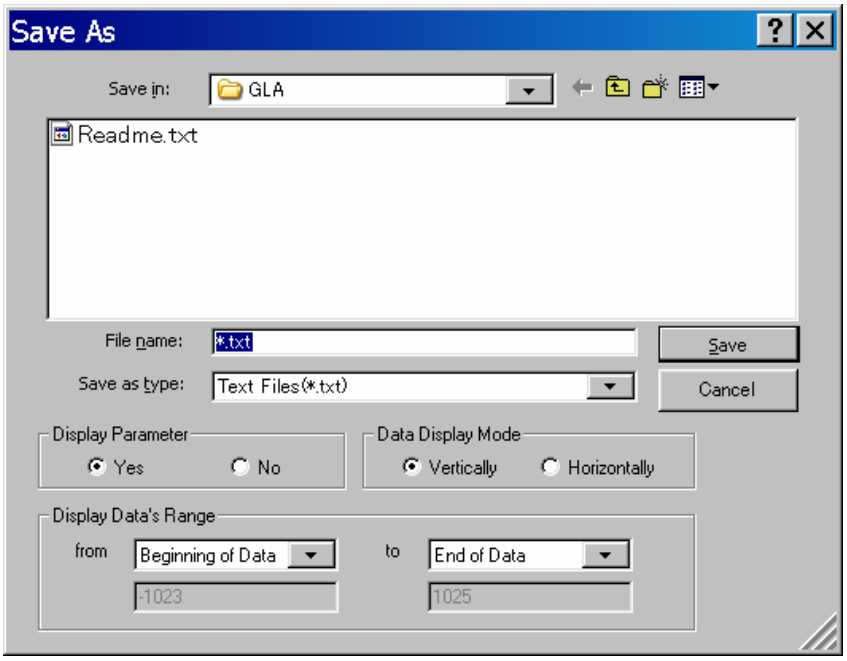
Shortcut key	Ctrl+Shift+E	
Dialogue window		
File Type	*.txt	Plain Text format.
	*.csv	Comma-Separated Values format. Each waveform data is listed in tables as separate entities.
Display parameter	The setup information includes the following: • File name, size, date • Sampling mode, sampling frequency • Ram size, data compression ratio • The number of Bus/channel • Trigger level, count, page, Enable setting • Bar position	
	Yes	The file contains system measurement setup information as well as waveform data.
	No	The file contains only the waveform data.
Data display mode	Vertical	Sets the waveform data format into: Horizontal direction – channel Vertical direction – waveform data
	Horizontal	Sets the waveform data format into: Horizontal direction – waveform data Vertical direction – channel

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Display data range	Specifies the range of the saved data. The gray area shows the position of the selected item.
From:/ To:	• Beginning of data • End of data • Trigger bar • A bar • B bar • User defined


Save the display image

Saves the whole or part of the PC screen snapshot image, in Jpeg (*.jpg) or Bitmap (*.bmp) format.

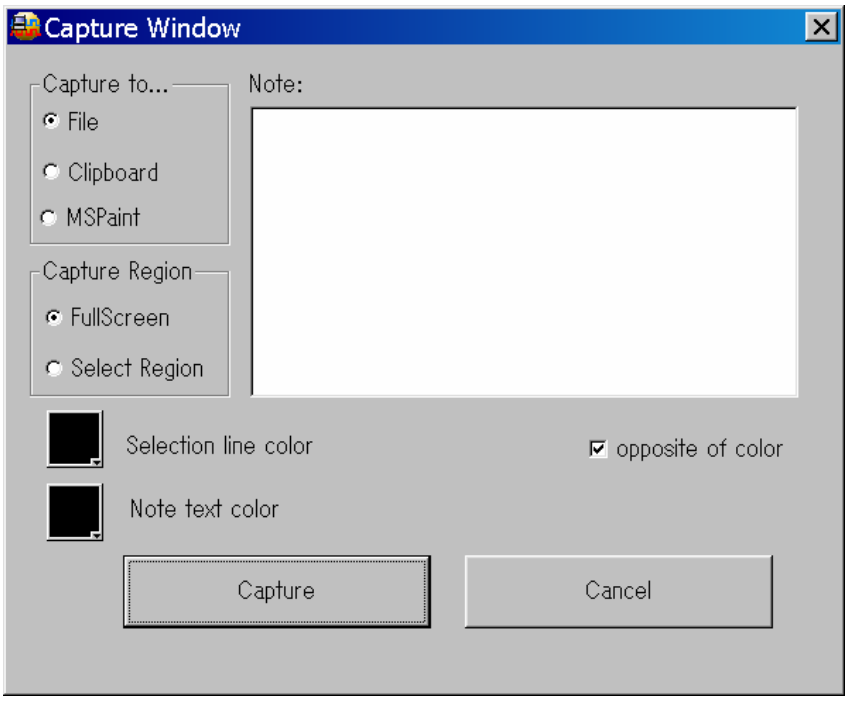Menu	File → Capture Window...
Shortcut key	Ctrl+C
Dialogue window	

Note	Note:	Adds the entered comment to the captured snapshot.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

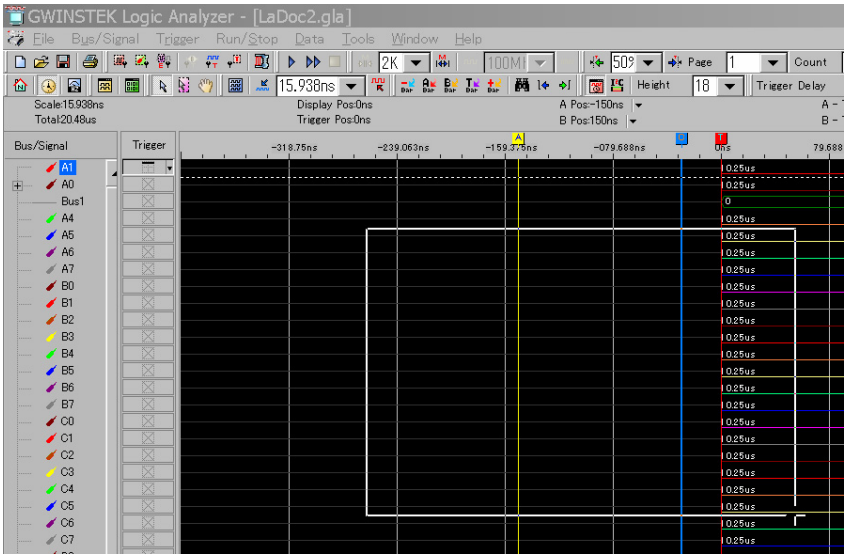	Note color 	Clicking the icon opens the chart for selecting the note text color. Default: black.
Capture to...	File	The captured snapshot is saved to an external file. File format: *.jpg, *.bmp
	Clipboard	The captured snapshot is saved to the Windows Clipboard, to be pasted into other applications.
	MSPaint	The captured snapshot is opened in Microsoft Paint, in *.bmp format.
Capture region	FullScreen	The full screen is captured (same as pressing the PrtSc key).
	Select Region	A cropping tool appears, allowing capture of selected area.
		
	Selection line 	Clicking the icon opens the crop tool color chart. Checking the opposite of color radio  selects the opposite of the specified color, as in the above figure (white line).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Printout

Print

Prints out the waveform image.

Menu File → Print...


Shortcut key Ctrl+P

Icon 

Print Preview

Shows waveform image printout preview. The file name and the date are also printed out.

Menu File → Print Preview

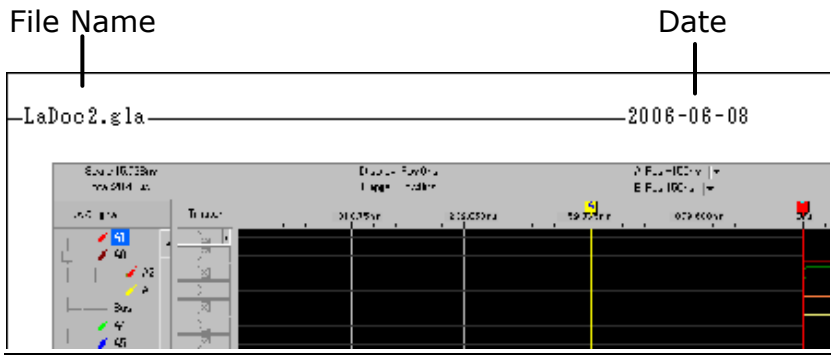

Printer Setup

Opens the standard printer setup dialog window.

Menu File → Print Setup...

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Handling Multiple Files

This section assumes more than one files are already opened.

Switch between files

Menu

Click the target file accessible from the Windows menu.

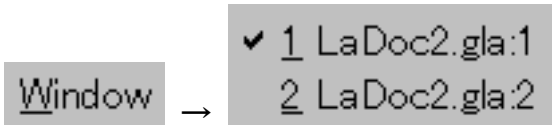


Shortcut key


Ctrl+Tab

Display multiple files

Menu

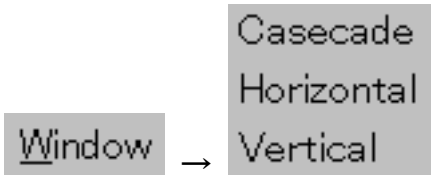


Cascade format

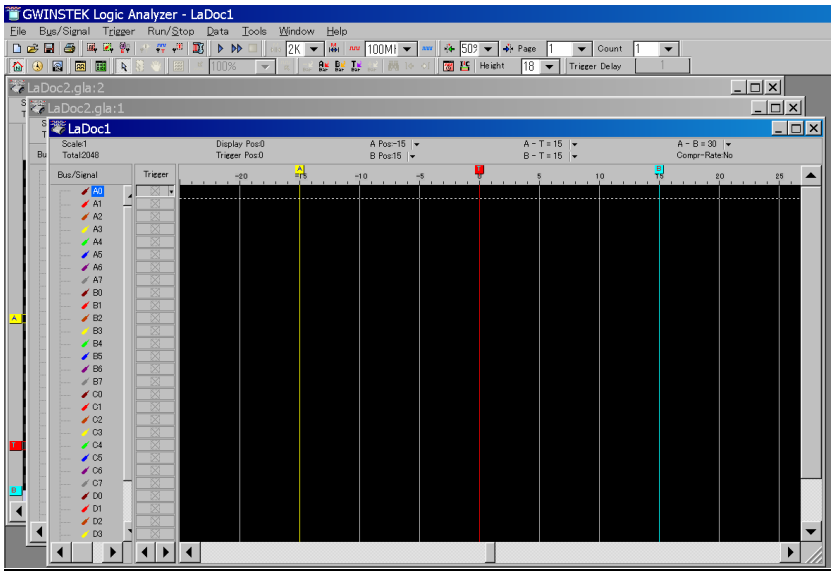


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Horizontal format

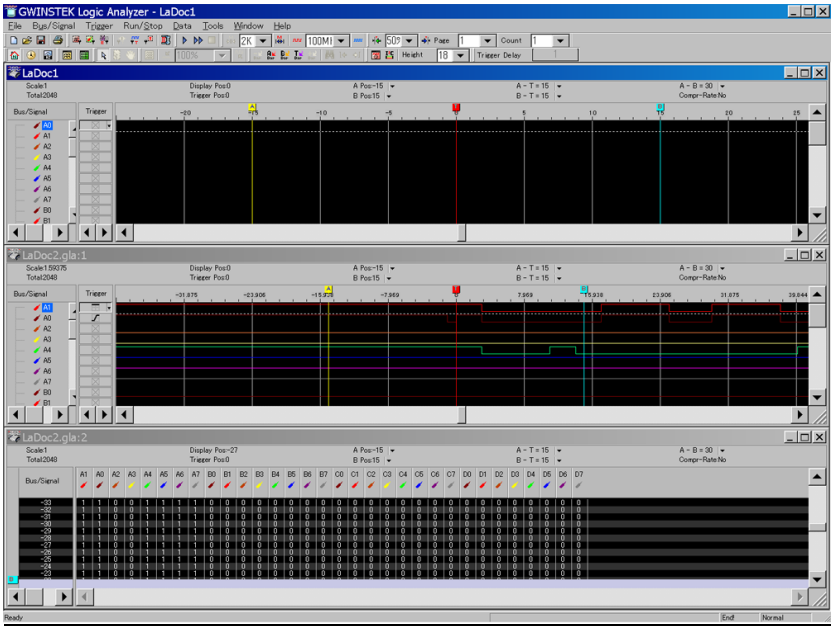

Vertical format

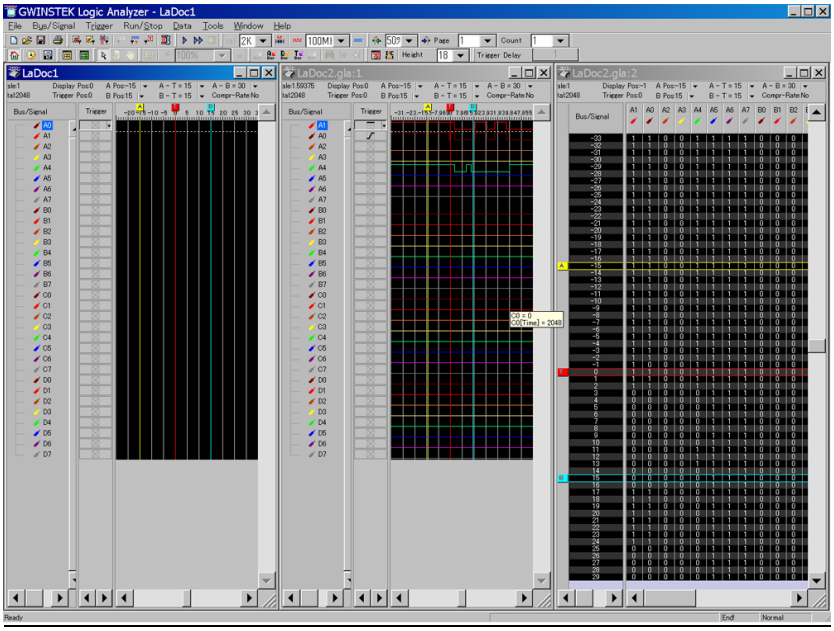

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Bus/Signal Setup

Sampling / Compression setup	Clock source	41
	Sampling RAM size	41
	Compression mode	42
Bus/Signal setup	Add/Delete	43
	Group/Ungroup	44
	Rename	45
	Hide/Show signals and buses	46

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Sampling/Compression Setup

GLA can setup the clock source, sampling frequency, memory size, and data compression.


Menu

Bus/Signal → Sampling Setup ...

Icon




Context menu

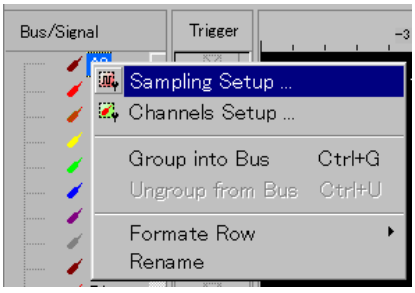


Right-click on the Bus/Signal list, then select Sampling Setup.

Dialogue Window

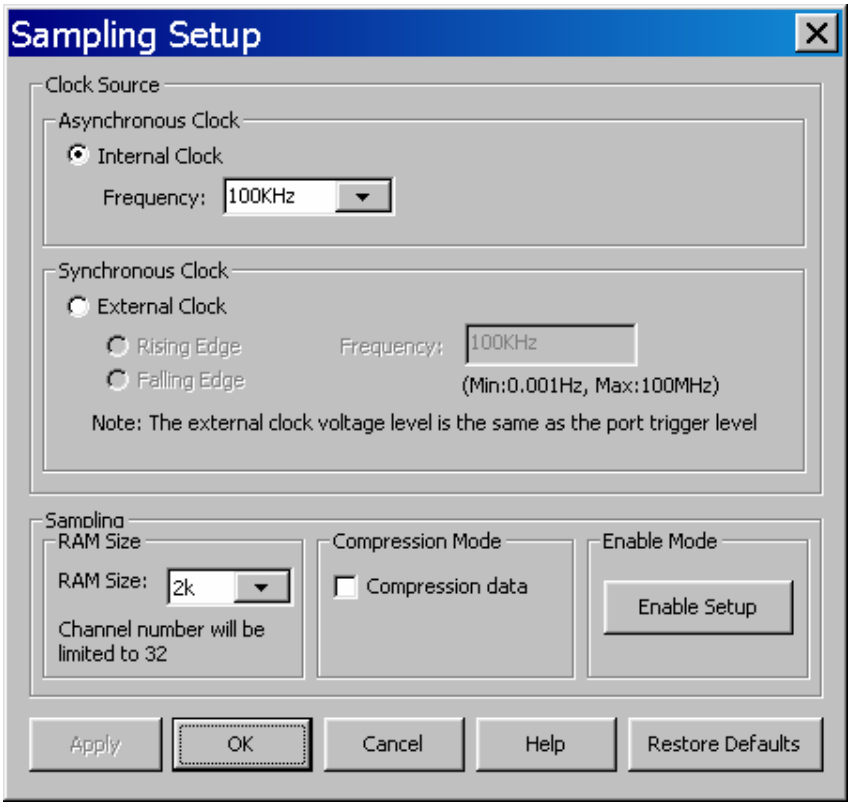

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

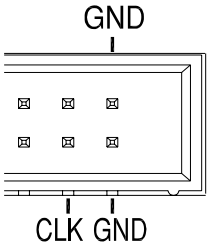Clock source	Internal (asynchronous) clock	Toolbar icon  Frequency is selectable from 18 frequency range. Range: 100Hz ~ 200MHz.
	External (synchronous) clock	The clock signal needs to be connected to the CLK input terminal. Range: 0.001Hz ~ 100MHz. Rising edge or falling edge is selectable. 
Sampling frequency		To ensure accurate measurement, choose a sampling frequency at least four times that of the target signal.

Sampling RAM size	Toolbar icon	

Select the amount of waveform memory GLA captures in a single run. Note that large memory size slows down display update rate.

RAM size	Channel	Compression	Enable mode
2k bits	16/32	Yes	Yes
16k bits	16/32	Yes	Yes
32k bits	16/32	Yes	Yes
64k bits	16/32	Yes	Yes
128k bits	16/32	Yes	Yes
256k bits (GLA-1016/1032)	16 only	No	No
256k bits (GLA-1132)	32	Yes	Yes
512k bits (GLA-1132 only)	32	Yes	Yes
1M bits (GLA-1132 only)	32	Yes	Yes
2M bits (GLA-1132 only)	16	No	No

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

limitation

Using large amount of memory (256k bits for GLA-1016/1032, 2M bits for GLA-1132) imposes the following restrictions.

- Only 16 channels, A0 ~ B7, available
- Compression not available
- Enable mode not available


Compression mode

Toolbar Icon 

When selected, GLA uses a lossless compression technique to expand the signal record length. The compression ratio is maximum 255, automatically adjusted.

The maximum record length per channel is:
GLA-1016, 1032: 128kbit x 255 = 32Mbit
GLA-1132: 1024kbit x 255 = 256Mbit

The actual compression rate is displayed on the upper-right side of the display (In the below case, 1.391).

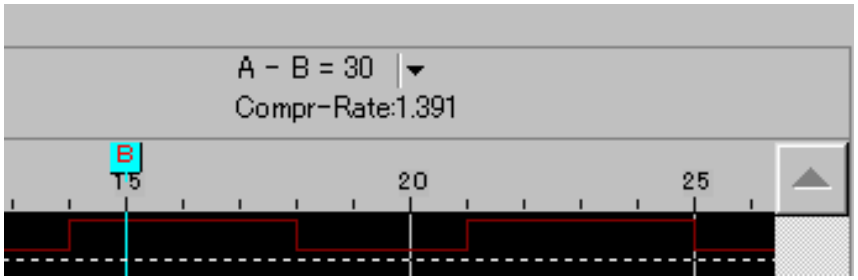

Compression limitation

Compression mode imposes the following restrictions.

- For 32 channel model, channel number is reduced to 24, A0 ~ C7, regardless of the memory size.
- Enable mode becomes unavailable.

Enable mode

Opens the Enable function setup dialogue window. For details, see the Trigger setup chapter, page57.

When completed...

Press Apply/OK/Cancel button to save or cancel the setting.

Restore Defaults button setting: Internal clock, 100MHz/ 2k RAM size/ No compression.



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Signal/Bus setup

Add/Delete


Menu

Bus/Signal → Channels Setup ...

Icon




Context menu

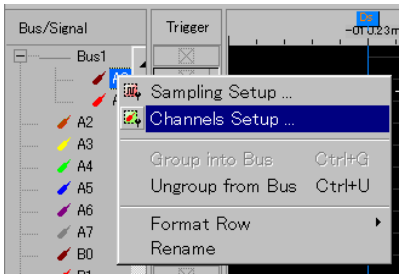

Right-click on the Bus/Signal list and select Channel Setup.

Dialogue window

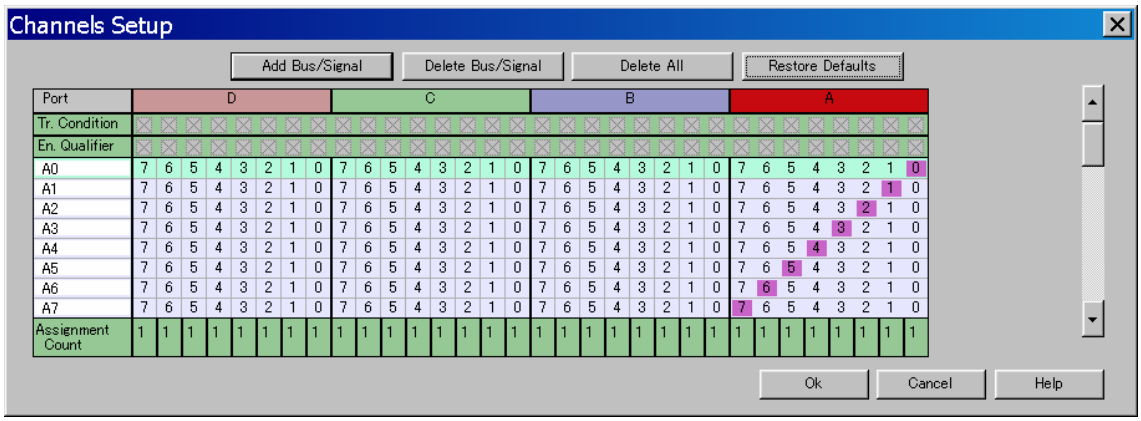


Use the right side bar to scroll up or down. Port C and D are not available in GLA-1016.

Add Bus/Signal



Click the Add Bus/Signal button. A new signal named Newx (x stands for 0, 1, 2...) appears on top of A0.

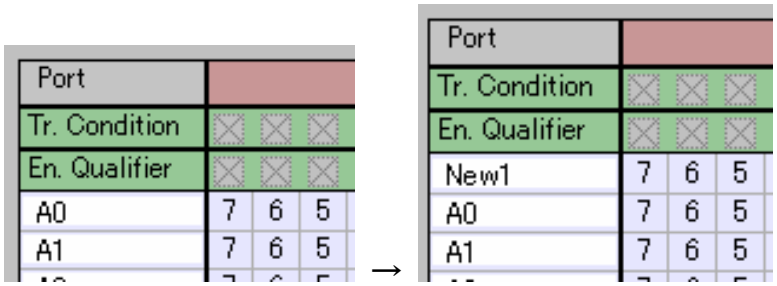

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Delete Bus/Signal



Select the target signal/bus and click either:

Delete Bus/Signal – the selected single bus or signal. Or

Delete All – all buses and signals.

Restore Default



Restores the default status (all channels are active).

Group/Ungroup

Group signals into bus, or ungroup a bus into signals.

Menu

Bus/Signal → Group into Bus (group)

Bus/Signal → Ungroup from Bus (ungroup)

Shortcut keys


Ctrl+G (group)

Ctrl+U (ungroup)


Method1

Open the Channels setup dialogue window, select the grouped signals and press Ok. The following example shows that ChannelD0 ~ D3 are grouped into D0 bus.

Channel Setup dialogue

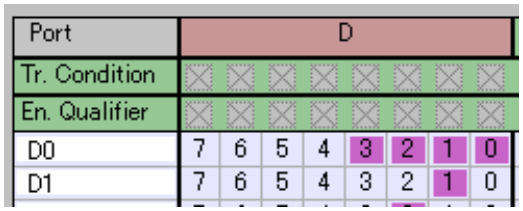

Result

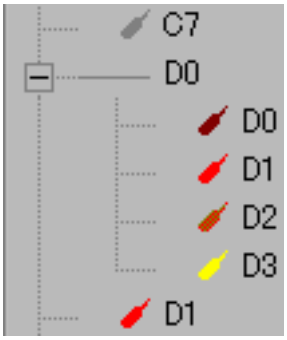



Method2

In the main display, select the range of signals by pressing the Shift key and clicking the signal names. Then choose Bus/Signal → Group. A bus named Busx (x stands for 1, 2, 3…) is formed. To ungroup the bus, choose Ungroup from Bus menu.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Picking up the signal (D0 ~ D3) Result

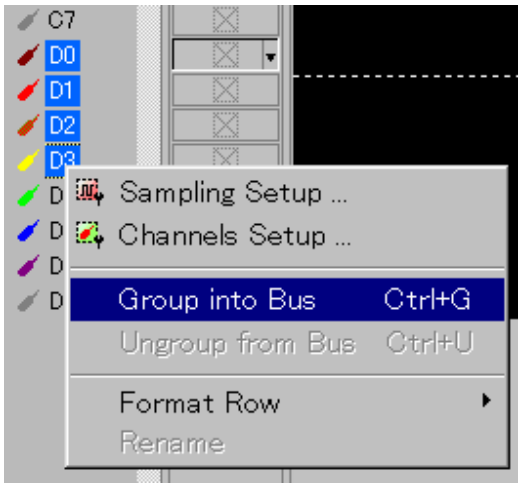


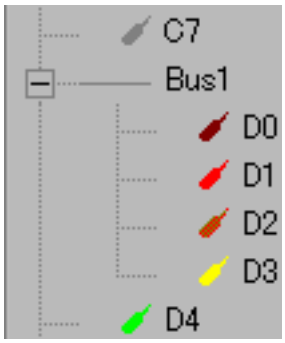

Rename

Method1

Click the target signal in the display.

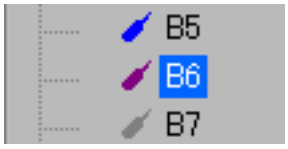


Click again on the target signal, OR


Select Rename from the menu,

Bus/Signal → Rename OR

Right-click and select Rename from the context menu.

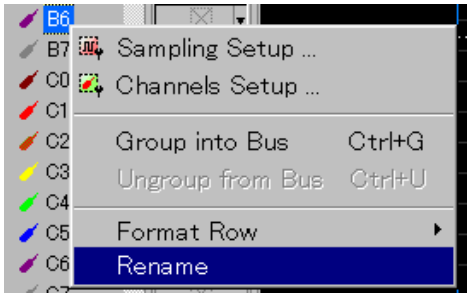


Type in the new name and press Enter key to confirm.

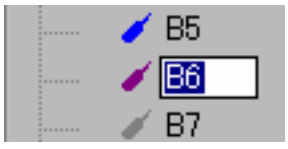

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Method 2

In the Channels setup dialogue window (page43), Click the target signal name, and type in the new name.

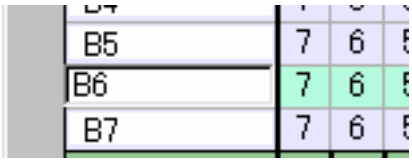

Hide/Show signals and buses


This function hides signals and buses from display but do not delete them. Show All function can reveal them. For deleting signals and buses, see page43.

Menu

Bus/Signal → Format Row → Hide / Show All


Context menu

Right-click on Bus/Signal list and select Format Row menu.

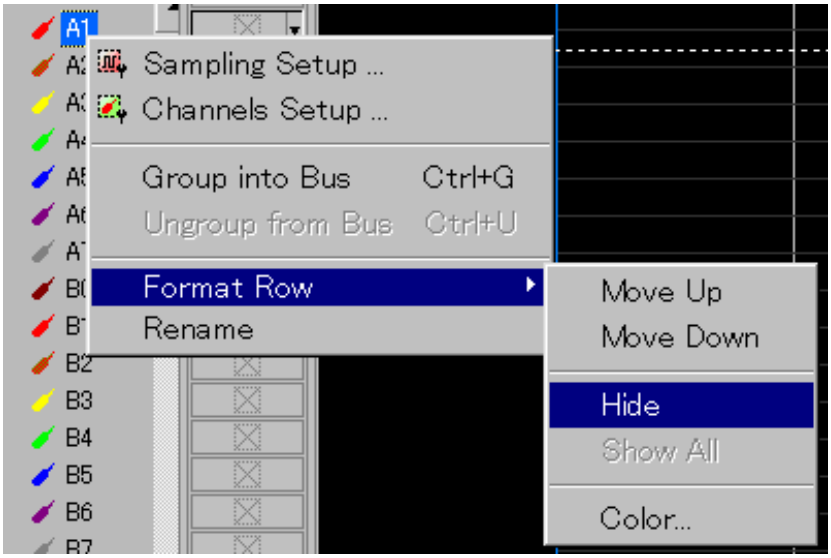

Example

Before hiding A1

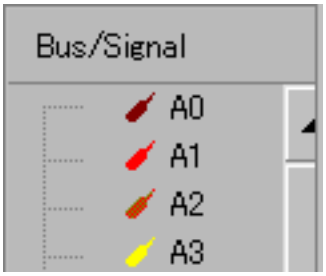

After hiding A1



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Trigger Setup

This chapter describes how to configure the triggering conditions.

Signal triggering condition setup	Set the condition individually 48
	Set conditions for multiple channels 49
	Reset all trigger conditions 50
Bus triggering condition setup	Operator (Trigger condition) 52
	Reset all trigger conditions 52
General triggering properties setup	Trigger level 53
	Trigger Count 54
	Trigger Page 54
	Trigger position 56
	Trigger delay 56
Enable Trigger function setup	Enable Qualifier 58
	Enable Period 59
	Delay Start Point 59
Trigger output signal	Trigger Output Signal 61

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Signal Triggering Condition Setup

Trigger condition	Don't care 	GLA captures all data regardless of its condition.
	High 	GLA triggers capturing the signal when the level is high.
	Low 	GLA triggers capturing the signal when the level is low.
	Rising edge 	GLA triggers capturing the signal when the level is changing from low to high.
	Falling edge 	GLA triggers capturing the signal when the level is changing from high to low.
	Either edge 	GLA triggers capturing the signal when the level is changing from one level to another, low to high or high to low.

Set the condition individually

The following method sets the trigger condition for each channel individually.

Method1

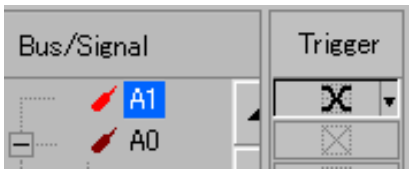

Select the target signal (A1 in this case) and:


Click the Trigger condition icon repeatedly

OR

Press the space bar repeatedly.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Method2

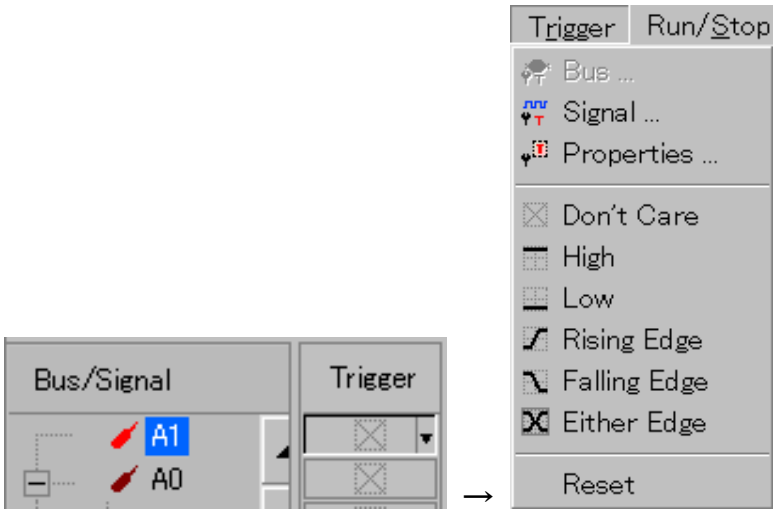


Select the target signal (A1 in this case) and click the Trigger list, then select the trigger condition from the Trigger menu.

Set conditions for multiple channels

This method sets the trigger condition for multiple channels at once.

Open the Trigger dialogue window.


Menu



Icon




Context menu

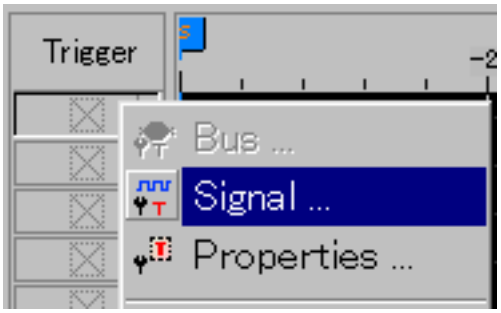

Right-click on the Trigger list area and select Signal.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Dialogue window

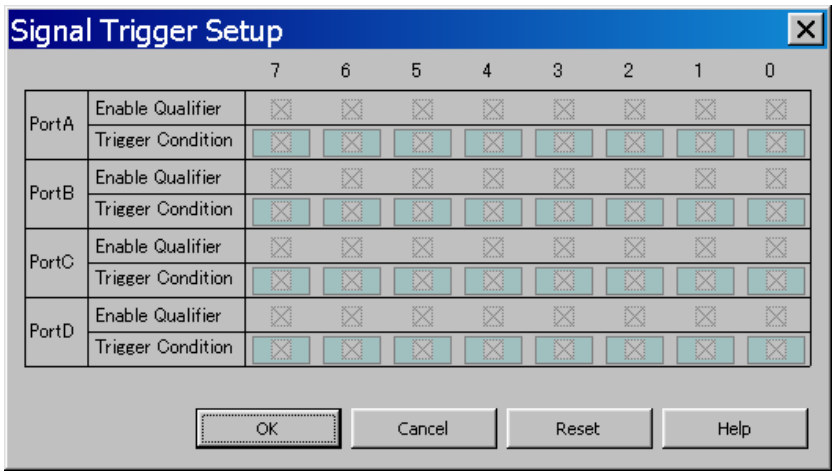

Click the the target signal repeatedly and select the appropriate trigger condition.


Reset all trigger conditions

Resets all the channel trigger conditions to Don't care (default) state.

Choose Reset from the Trigger menu

Trigger → Reset OR

Click the Reset button in Signal Trigger Setup dialogue.

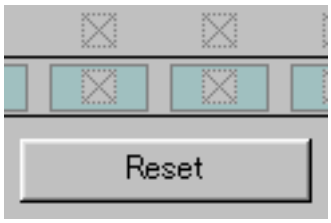

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Bus Triggering Condition Setup


Menu

Trigger → Bus ...

Icon




Context menu

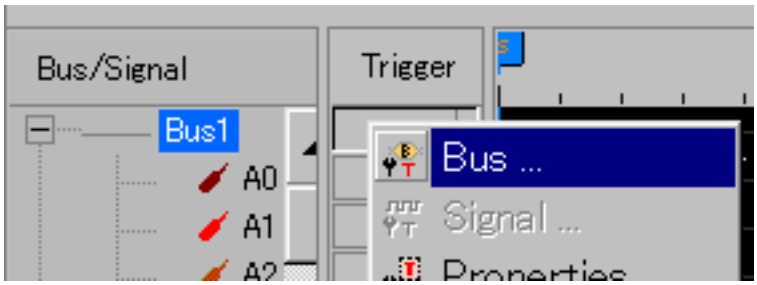

Right-click on the Trigger list for the target bus (Bus1 in this case) and select Bus menu.

Dialogue window

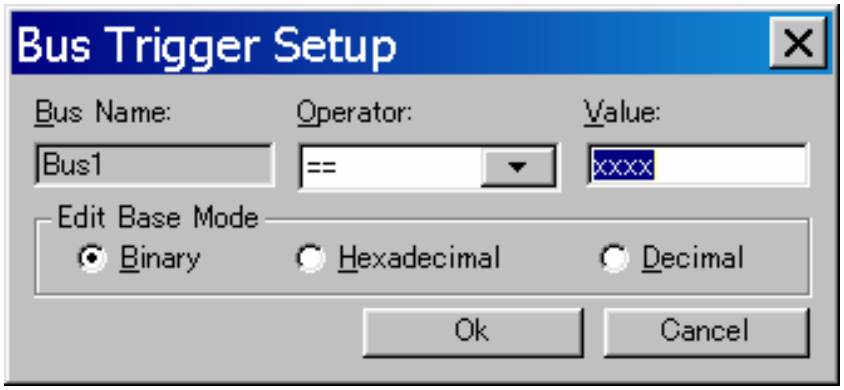

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Operator (Trigger condition)	==	GLA triggers capturing data when the entered value matches the real data.  **Binary** Sets the value in binary mode: 0, 1, x (don't care). **Hexadecimal** Sets the value in Hexadecimal value: 0 ~ F. **Decimal** Sets the value in Decimal value: 0 ~ 9.
	Don't care	GLA triggers capturing data regardless of the value.

Reset all trigger conditions	Resets all the bus trigger conditions to Don't care (default) state. Choose Reset from the Trigger menu. 

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

General Triggering Properties Setup

This function sets the triggering properties applicable to all channels and buses.


Menu



Icon




Context menu

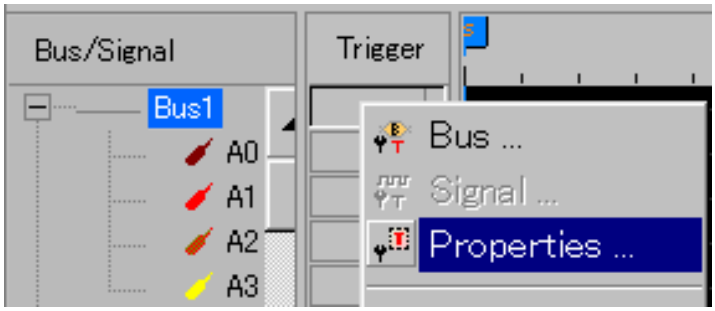

Right-click on the Trigger list and select Properties menu.

Trigger Properties Dialogue window

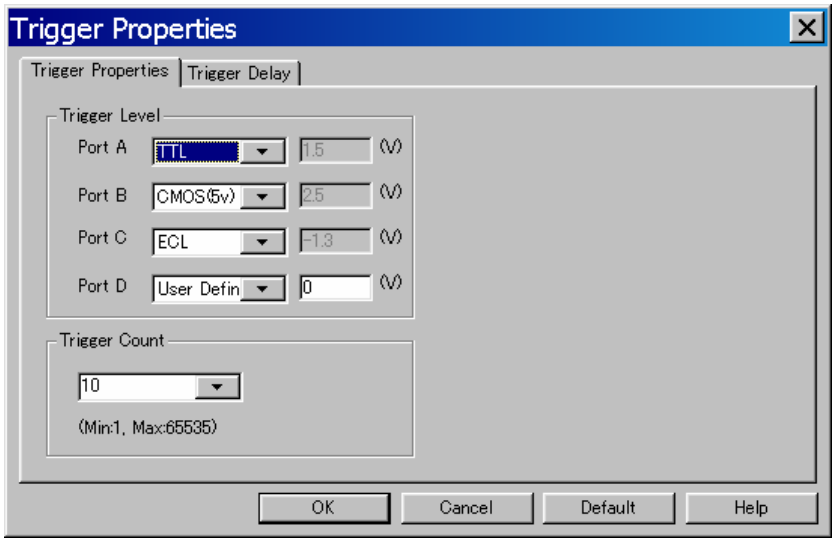

Port C and Port D are not available for GLA-1016.

Trigger level

Set the triggering level for each port, A ~ D.

Type	Level
TTL	1.5V
CMOS (5V)	5V
CMOS (3.3V)	3.3V
ECL	−1.3V
User Defined	−6 ~ 6V

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Trigger Count

Toolbar icon



Sets the number of times GLA skips triggering condition. Setting is available in pull-down (1, 2, 3, 4, 5, 10, 15, 20) or direct entering.

Example



GLA starts capturing data at the first triggering condition (default).




GLA starts capturing data at the fifth triggering condition.



You can directly type in any number, up to 65,535.

Trigger Delay dialogue window

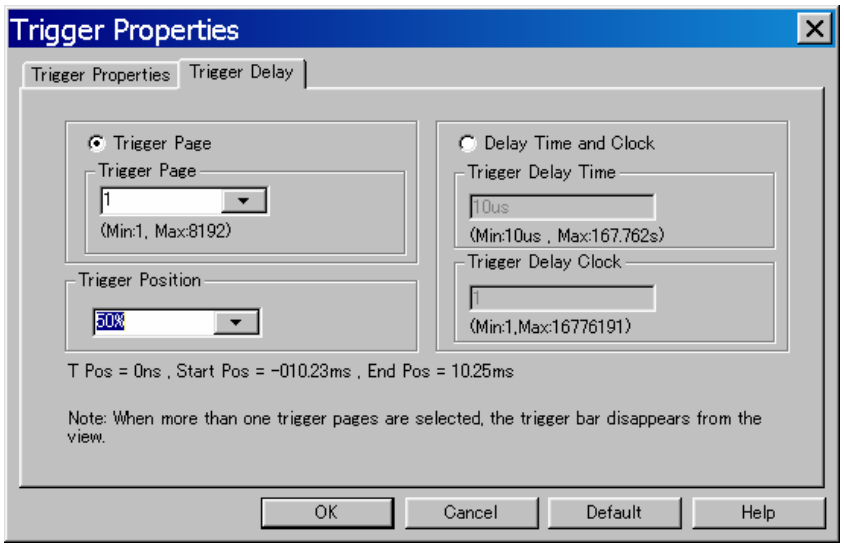

Select the Trigger Delay tab in the Trigger Properties dialogue.

Trigger Page

Toolbar icon



This function sets the length of skipped waveform (in data memory blocks) after the triggering condition. Setting is available in pull-down (1, 2, 3, 4, 5, 10, 15) or direct entering.

Waveform data in a single page = Sampling RAM size
(for RAM size setting, see page41)

Maximum trigger page for different RAM size

RAM size	GLA-1016	GLA-1032	GLA-1132
2Kbit	8192	8192	8192
16Kbit	1024	1024	1024
32Kbit	512	512	512


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

64Kbit	256	256	256
128Kbit	128	128	128
256Kbit	128	128	64
512Kbit	N/A	N/A	32
1Mbit	N/A	N/A	16
2Mbit	N/A	N/A	16

Trigger Page Example




GLA captures the data at the first triggering condition (default).

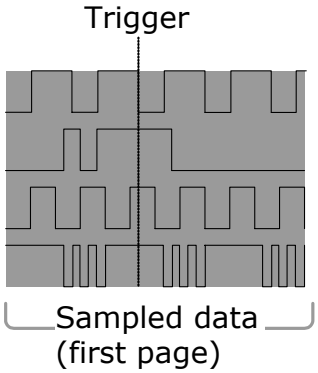


Sampled data = the first memory block



GLA captures the data at the third memory block after triggering condition occurs.

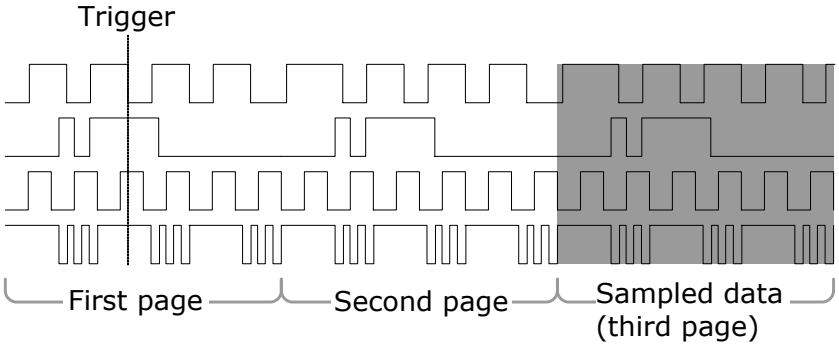

Sampled data = the third memory block



You can directly type in any number, up to the value shown below.

Trigger page / delay

Trigger page disables Trigger delay/clock function (page56), vice versa.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Trigger position

Toolbar icon



Sets the amount of pre-triggering data that GLA captures, selectable from the pull-down menu.

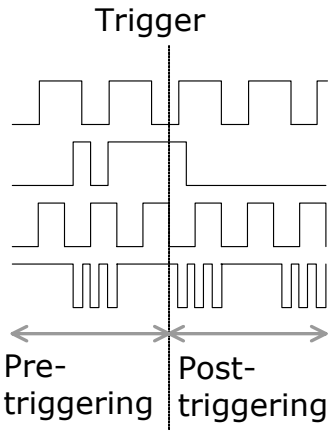


- 0% means GLA starts capturing data right after the triggering condition (no pre-triggering data).
- 50% means half of the captured data belongs to waveform prior to the triggering condition (default).
- 100% means all of the captured data belongs to waveform prior to the triggering condition.

Trigger delay


Toolbar icon




Delays the data capturing range in reference to the Trigger condition.

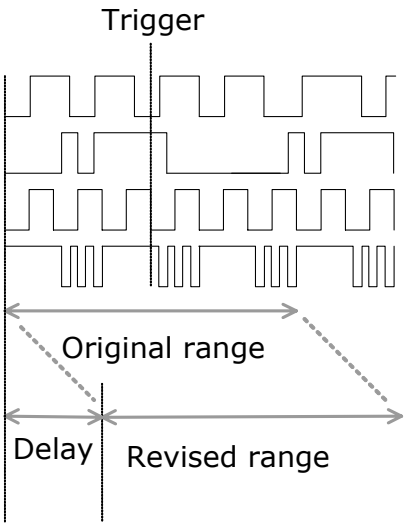

The amount of delay can be set as Time…



Or number of clocks.




Trigger delay / Trigger page

Trigger delay disables Trigger page function (page54), vice versa.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Enable Trigger Function Setup

Enable function lets GLA capture data portions only that match specified waveform condition – in other words, filters out unnecessary signal. The collected data portions are presented as a continuous stream of signal.

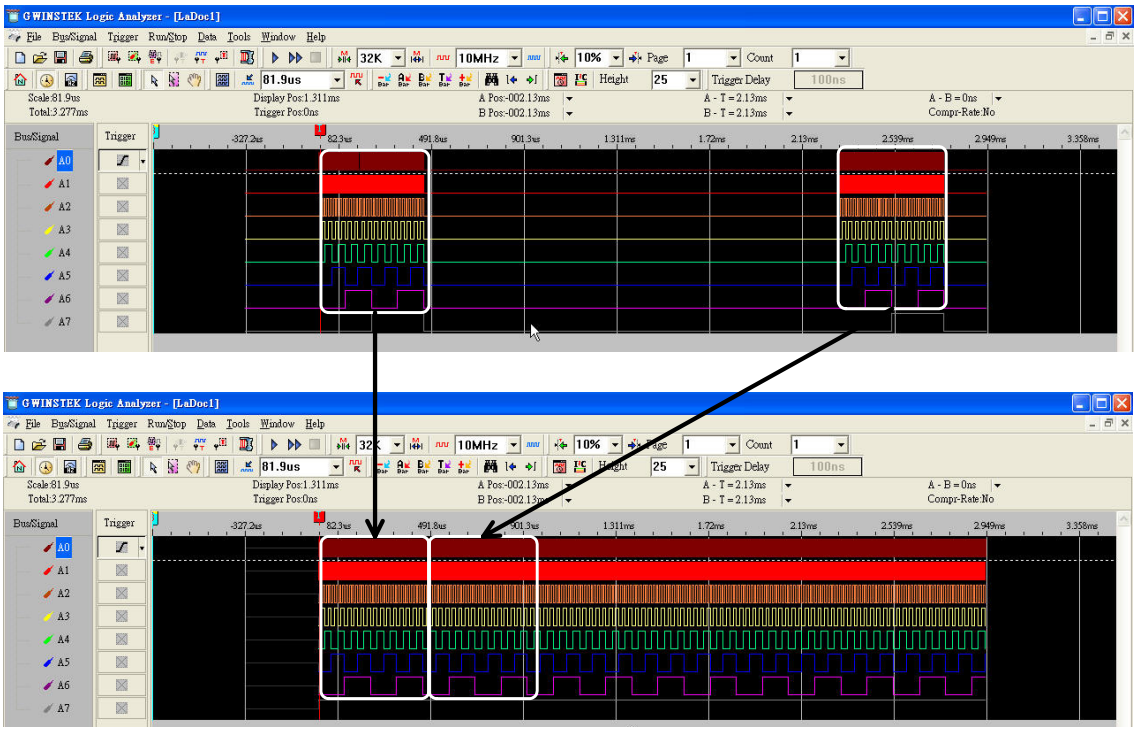

NOT available

- When using 128k byte memory for each channel (page41).
- When using the Compression mode (page42).

Menu


Select Sampling Setup from the Bus/Signal menu. Click Enable Setup button in the dialogue window.

Bus/Signal → Sampling Setup ... →

Enable Setup

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Dialogue window

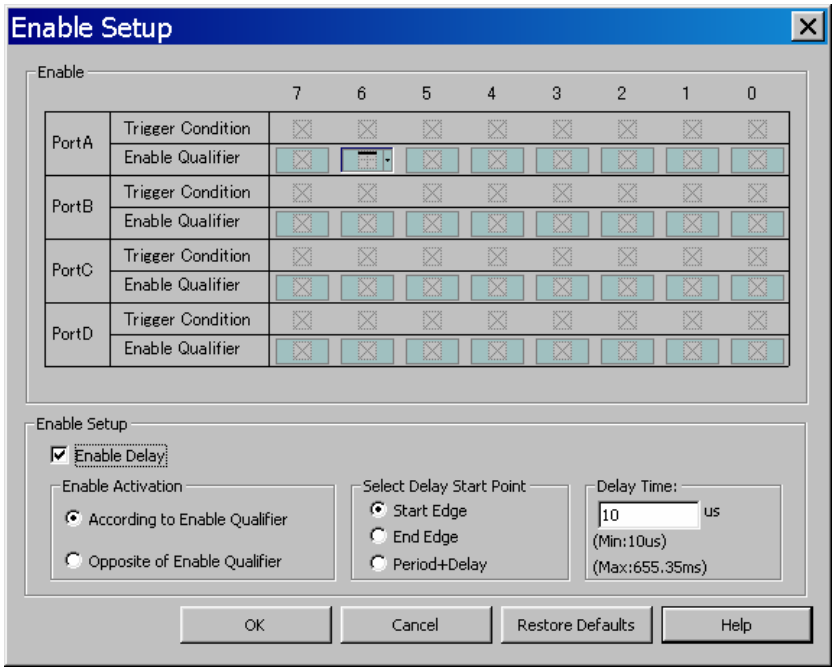

Enable Qualifier

Click on the target channel icon and select the condition.

Don't care




The signal level does not matter – always captured (default).

High



The signal level must be high.

Low



The signal level must be low.

Example

The following Enable condition means:



GLA captures signals only when Port A has the following condition.
A0 ~ A7: 01101101

The minimum distance, between each Enable qualified data block, is 2 clocks. Otherwise (if the distance is only one clock) GLA continues capturing data and do not delete unnecessary bits.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Enable Period

This options controls when GLA actually captures data, in reference to the Enable Qualifier condition set.

Check the Enable Delay radio button.




According to	GLA captures signals when input signals match the Enable Qualifier.
Opposite of	GLA captures signals when input signals DO NOT match the Enable Qualifier.

Delay Start Point

This function fine-tunes the length of captured waveform, in reference to the Enable Qualifier condition. Delay Time configures the length of time (user-defined). Three types of delay setting, Start Edge, End Edge, and Period+Delay are available.


Example Enable Qualifier

A0 ~ A3 condition is set as follows.
Enable Qualifier condition: 0001, Delay Time: 100us

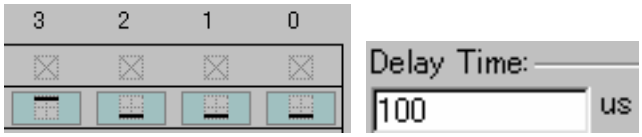

Start Edge


GLA starts recording (capturing) signals at the beginning of Enable Qualifier match, for the Delay Time duration.

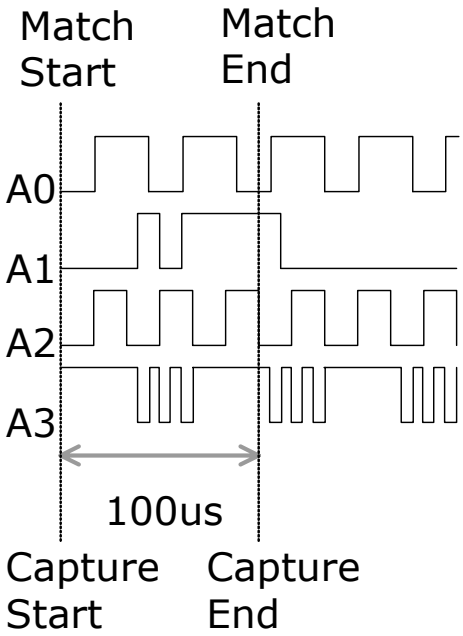

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


End Edge

GLA starts recording (capturing) signals at the end of Enable Qualifier match, for the Delay Time duration.

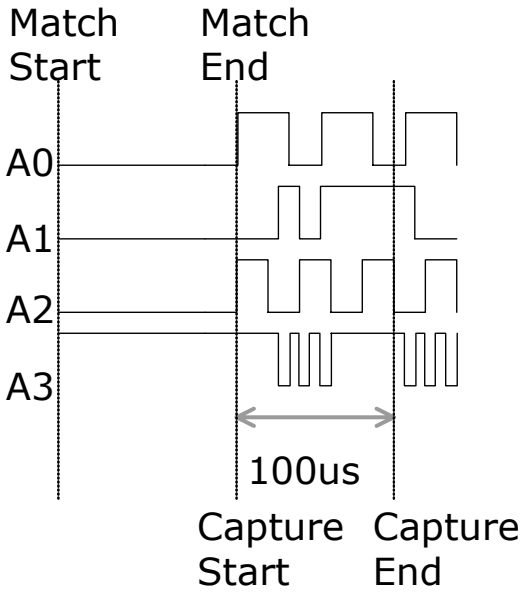

Period + Delay

GLA starts recording (capturing) signals at the beginning of Enable Qualifier match, continues after the end of match for the Delay Time duration.

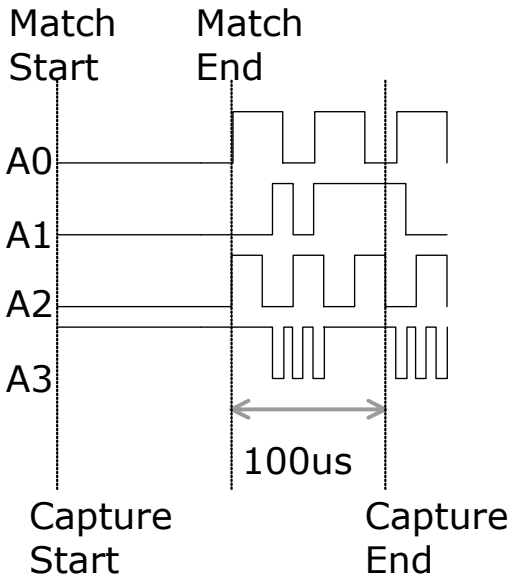

When completed...

When the Enable setting is completed, press OK (confirm) or Cancel button. Restore Defaults disables all the qualifier settings.




Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Trigger Output Signal


GLA has three output signals which can be used for monitoring trigger condition.

Connector

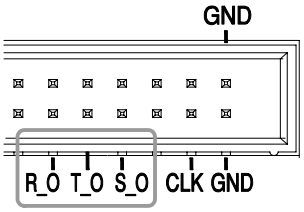


Three signals, S_O, T_O, and R_O, output high level (3.3V) under specific conditions.

Signal description

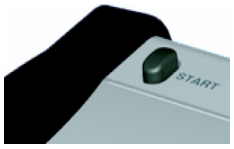S_O (Start Out)	Outputs high level from when the Start key is pressed, or the Run command becomes active, until the end of data capturing.   or F5
T_O (Trigger Out)	Outputs high level from when the trigger condition is met, until the end of data capturing.
R_O (Read Out)	Outputs high level from when the data capturing has finished (GLA starts transferring data to PC) until the transfer is completed.

Diagram

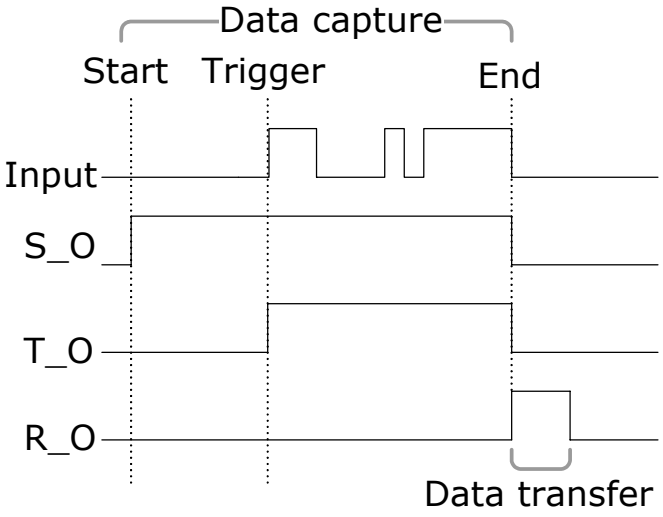



GLA cannot capture the next data while R_O is high (data transfer not completed yet).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Display Setup

Toolbar setup	Toolbar Setup	63
	Toolbar list	64
Horizontal / Vertical scale setup	Horizontal unit	65
	Horizontal ruler	65
	Waveform height	66
Waveform view setup	Signal display	67
	Enable/Disable grid	68
	Square/Sawtooth waveform	69
	Waveform timing display	69
Color setup	Background color	71
	Waveform (Foreground) color	72


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Toolbar Setup

Menu


Select Customize from the Tools menu. Click the Toolbars tab. Click the target toolbar to activate/deactivate it.

Tools → Customize ...

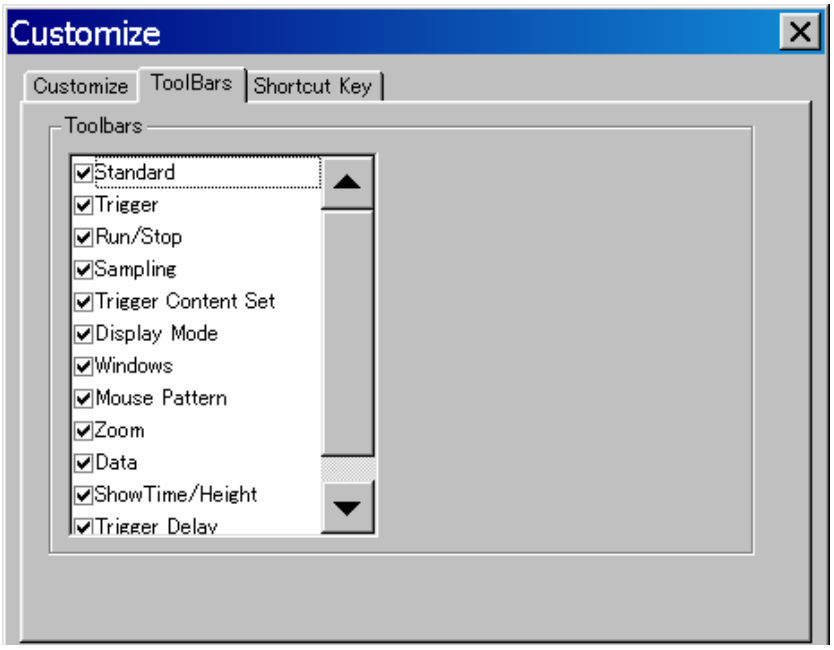

Context menu

Right-click on the blank space in the Toolbar. Click the target toolbar to activate/de-activate each group.

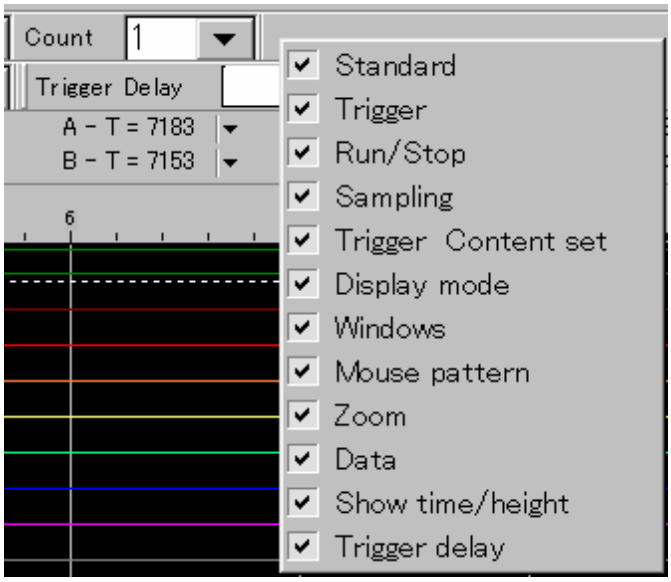

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Toolbar list

Standard



Trigger




Run/Stop



Sampling



Trigger Content Set



Display Mode




Windows



Mouse Pattern



Zoom



Data



Show Time/Height



Trigger Delay



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Horizontal/Vertical Scale Setup

Horizontal unit

Sets the horizontal unit used in the Scale and Position bar.

Menu: Tools → Customize ...

Dialogue Window:

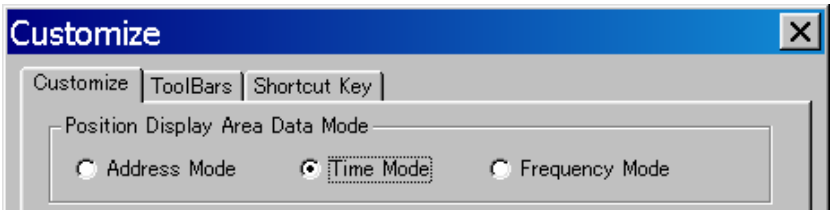

Icon & Display


Address mode (default)	Time mode	Frequency mode
		
Scale:1.59375	Scale:15.938ns	Scale:62.745MHz
A - T = 15	A - T = 150ns	A - T = 6.667MHz

Horizontal ruler


Sets the horizontal ruler scale.

Menu: Tools → Customize ... → Customize

Dialogue Window:

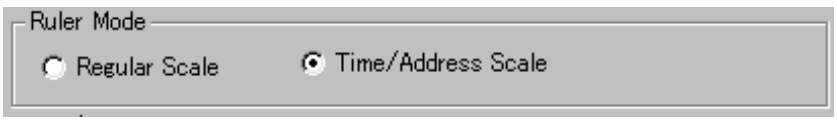


Display: Regular Scale (default)

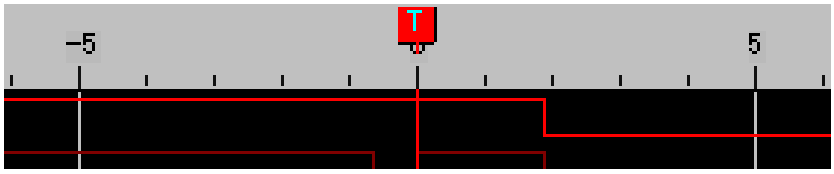

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Time/Address Scale

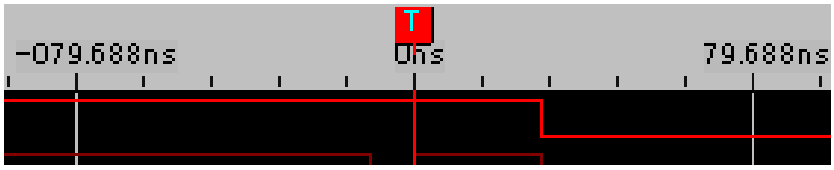


Waveform height

Sets the signal/bus displayed height.

Menu	Tools → Customize ... → Customize
Toolbar icon	Height 18
Dialogue Window	Bus/Signal Height 18
Range	18 (default) ~ 100 points
Display	18 points (default)

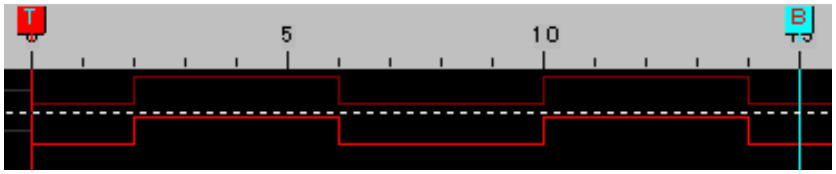

30 points

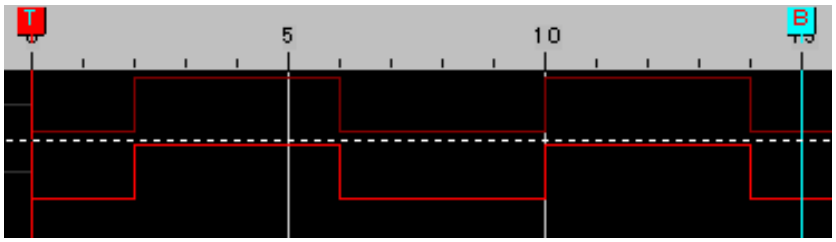

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Signal Display Setup

Signal display

Sets the viewing style for signals and buses.

- Waveform view puts each channel waveform horizontally.
- Listing view puts each channel vertically, in binary form.

Menu




Toolbar icon


(Waveform view)



(Listing view)

Waveform view (default)

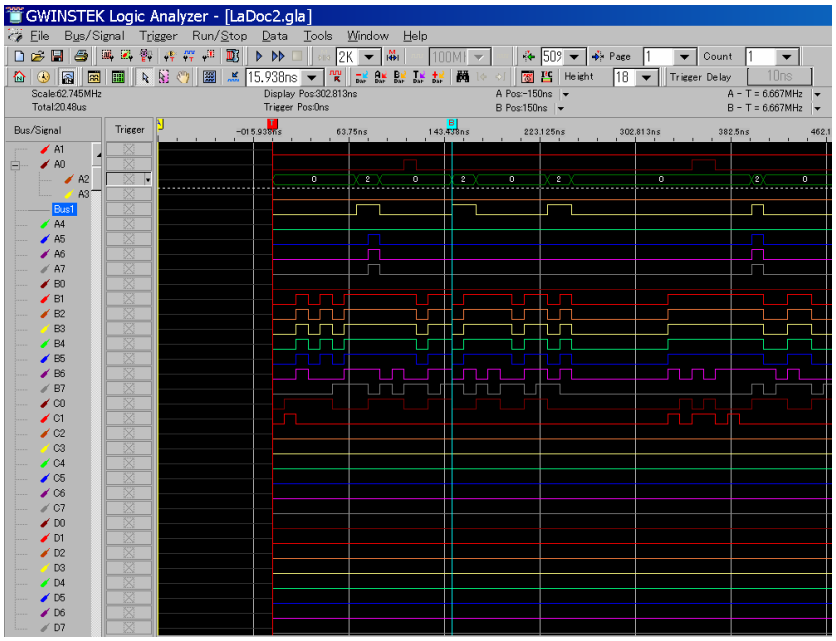

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Listing view

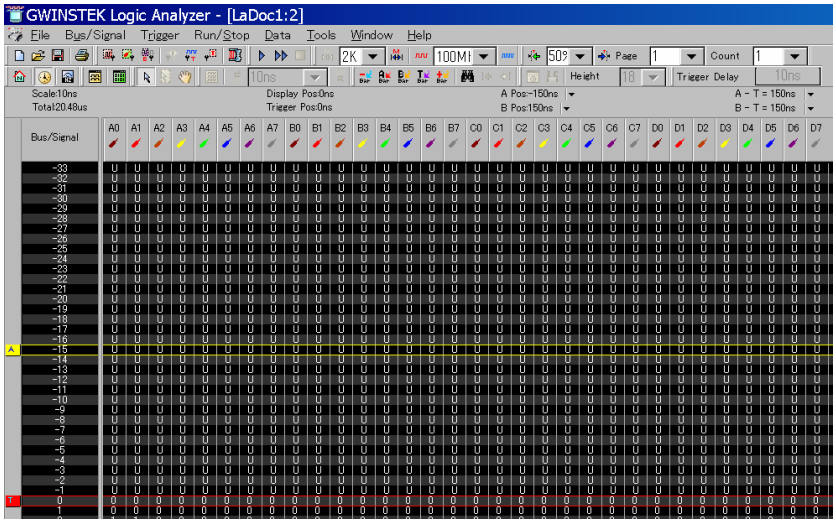

Enable/Disable grid

Show/hide the vertical gridline in the waveform area.

Menu




Dialogue Window




Display

With grid (default)

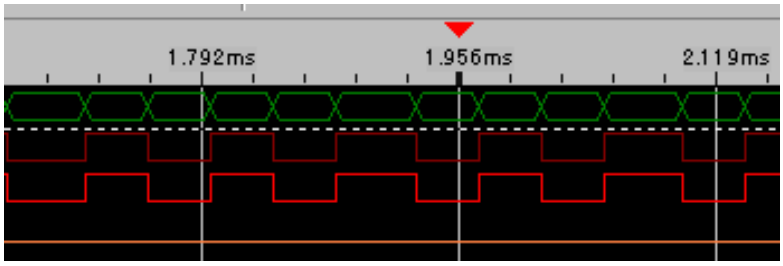

Without grid

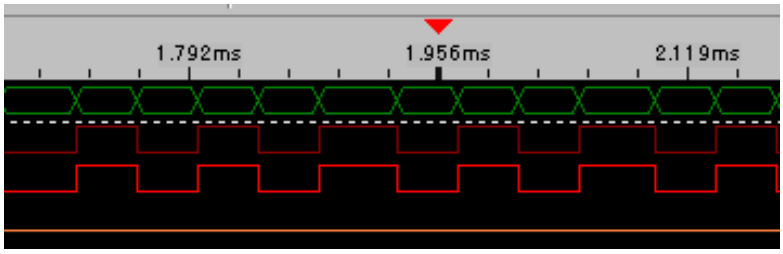

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Square/Sawtooth waveform


Selects the waveform edge shape.

Menu

Data → Wave Mode → Square waveform / Sawtooth waveform


Context menu

Right-click on the waveform area and select Wave Mode.

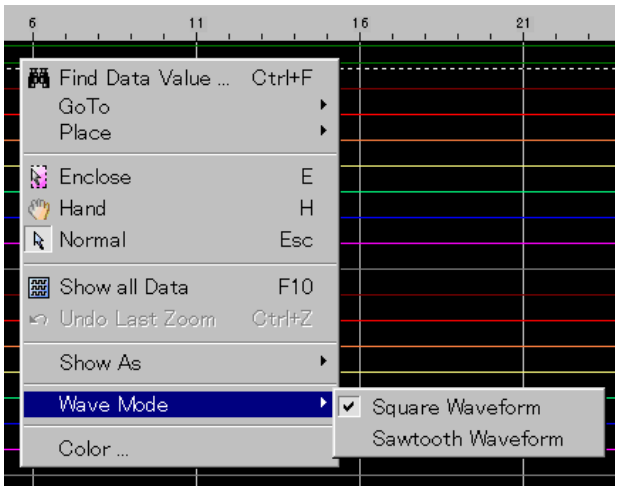


Display

Square waveform (default)

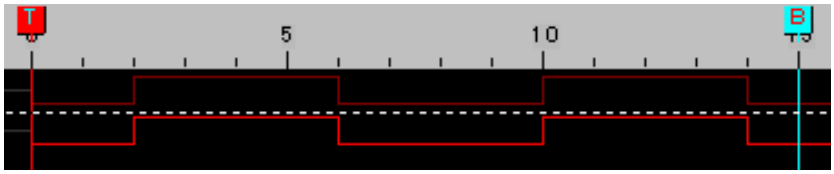

Sawtooth waveform

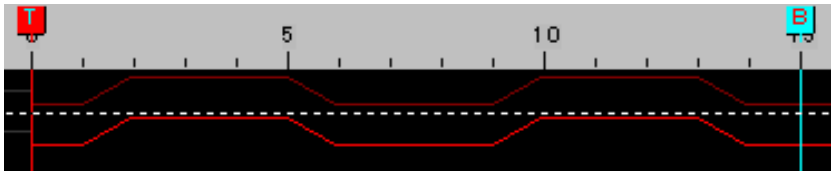

Waveform timing display

Shows/hides timing information inside waveforms.

Menu

Tools → Show Time of Waveform


Toolbar icon




Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Display

Without timing information (default)

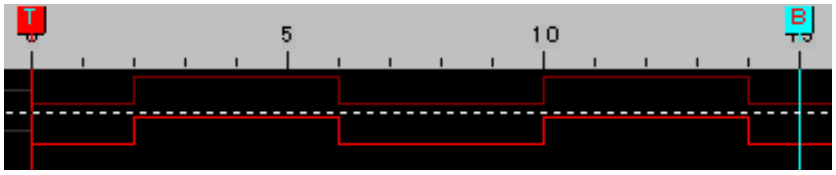

With timing information

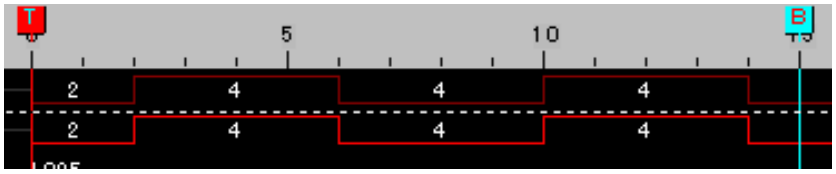


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Color Setup


Background color

Sets the waveform background color.

Menu




Dialogue Window

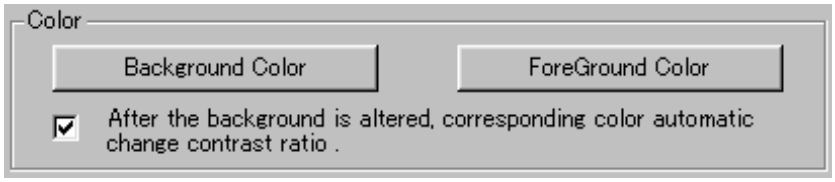

Change color

Press the Background Color bar.



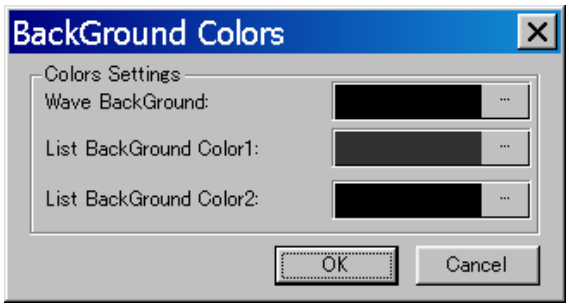

Click the color bar and select color from the color chart.


Contrast with foreground

Check the radio if you want the foreground (waveform) color to be automatically adjusted, following the background color change.




Display

Black background (default)

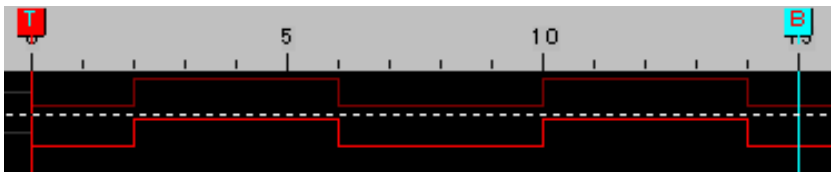

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

White background

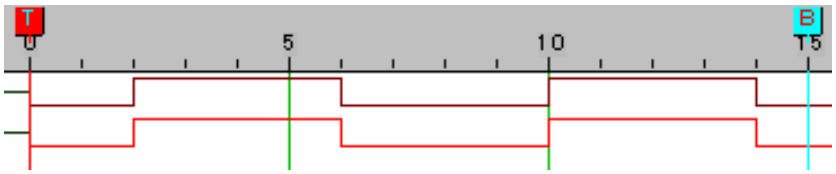


Waveform (Foreground) color

Sets the waveform color.

Menu

Tools → Customize ... → Customize


Dialogue window

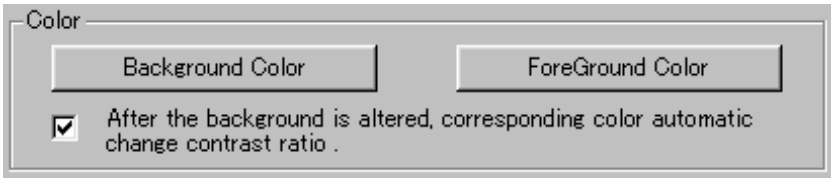


Context menu

Right-click on the Bus/Signal list, Trigger list, or on the waveform, select Color menu. The target waveform color can be changed on the spot.


Bus/Signal list

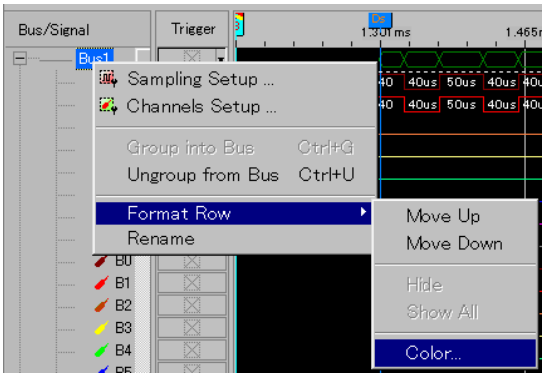


Waveform

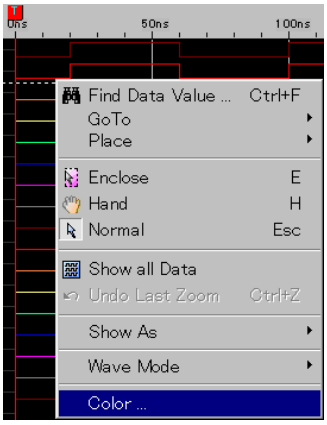

Trigger list

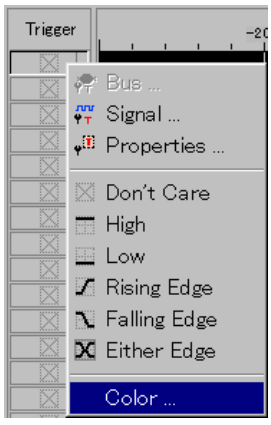

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

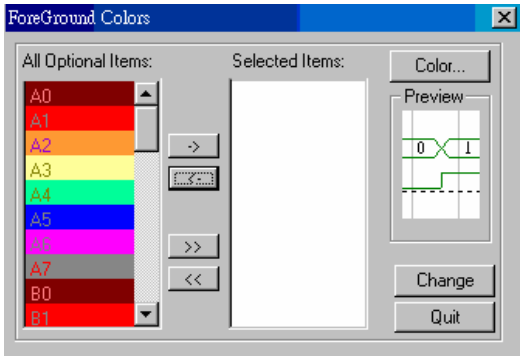Dialogue Window	Use the single arrow  to change individual waveform color. Use the dual arrows  to change all waveform colors at once. 
Restore default settings	When the changes become complicated, use the Restore button  in the Configure dialogue window.




Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Signal Capturing

This chapter describes how to run/stop capturing signals.

Single Run

Captures data for a single period.

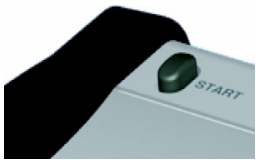Menu	Run/Stop → Single Run	
Toolbar icon		
Shortcut key	F5	
Panel operation		Press the Start switch.
Capturing succeeded	Toolbar icon (go back to default) 	Status bar (left bottom) 
Capturing failed	Toolbar icon 	Status bar (left bottom) 

Continuous Run

Continuously captures data. Once the memory becomes full, GLA dumps the waveform data on the display, then restart capturing. This process is repeated until the Stop command (see next page) is issued.

Menu	Run/Stop → Repetitive Run	
Toolbar icon		

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Shortcut key	F6
Capturing succeeding	Status bar (bottom left) keeps updating the amount of captured data in reference to the memory. 
Capturing failed	Status bar (bottom left) stays in the waiting mode. 



Data is not captured while GLA is dumping stored waveform data on the display.

Stop Running

Stops capturing data.

Menu	Run/Stop → Stop
Toolbar icon	
Shortcut key	F7
Capturing stopped	Toolbar icon (go back to default)  Status bar (left bottom) 

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Data Operation

Once GLA captures the data, several operations become available. This chapter describes how to search, view, and analyze the captured data effectively.

Data bar operation	Activate data bar	77
	Add/Delete data bar	78
	Move data bar	79
Waveform position	Waveform Position	81
	Move the cursor up/down	82
Data search	Data Search	83
	Data Search Step	83
	Bus search step	85
Zoom	Zoom In/Out	87
	Enclose (flexible ratio zoom)	88
	Show all data	88
	Manual Display/Analysis Range Setting	89
I^2C bus analysis	I^2C Bus Analysis	90
	Analysis step	91
RS-232 signal analysis	RS-232C Signal Analysis	94
	Analysis step	95
Waveform statistics	Waveform Statistics	97
	Statistics setup step	97

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Data Bar Operation

Data bar shows the signal position which can be used as a place marker. Using the data bar, you can measure relative time, frequency, and points between data.

Activate data bar

Default state

Five data bars are available by default: From left, Ds (start range) A, T (trigger), B, and Dp (end range).

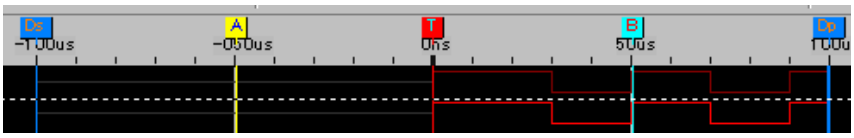

Unit

Data bar unit is selectable from address point, time, and frequency. Press the toolbar icon to select. For unit selection details, see page65.


Address mode	Time mode	Frequency mode
A - T = 15	A - T = 150ns	A - T = 6.667MHz

Position

The positions of the bars are shown on the toolbar.

A Pos:-15
B Pos:15

Click the arrow to select the displayed bar.

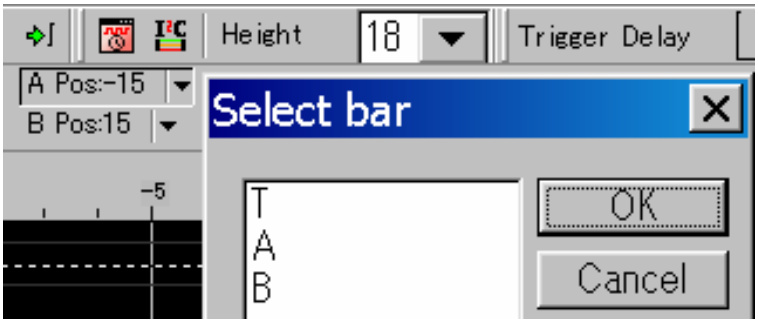

Relative distance

The distance between each bar is also shown on the toolbar.

A - T = 15
B - T = 15
A - B = 30

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Click the arrow icon to select the displayed distance.




Add/Delete data bar

Add a bar

Menu: Data → Add Bar...

Toolbar icon: Bar

Dialogue window:

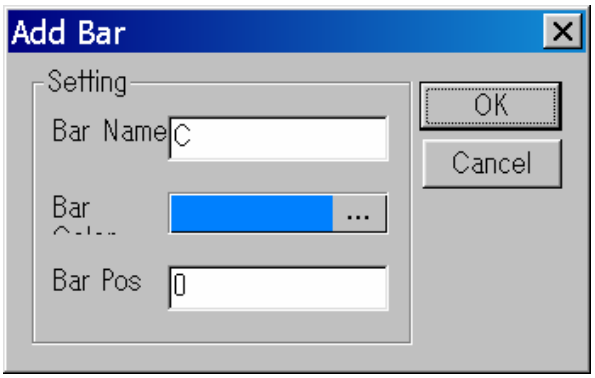


You can specify the bar color and position.

Delete a bar

Menu: Data → Delete Bar...

Toolbar icon: Bar

Dialogue window:

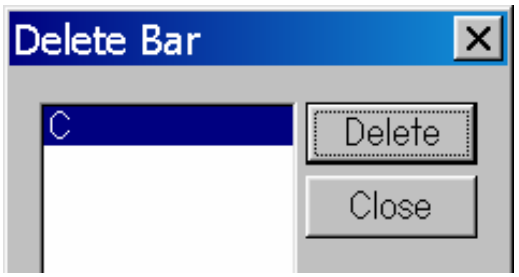

Select the added bar and delete it.

Note: The default bars (T, A, B, Ds, Dp bar) cannot be deleted.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Move data bar


Move a bar manually

Toolbar icon 


Move the bars manually using the mouse. Point the arrow close to the bar until it changes into Hand shape or double arrow. Move the bar right or left.

Note: The T bar position is fixed to the center.

Hand

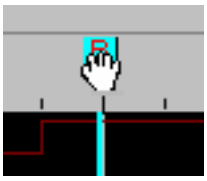


Double arrow

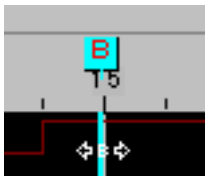


Move a bar to the pointed location

You can move a bar to the exact location that you point in the display.

Right-click the location you want to move the bar, in the display. Select Place from the context menu.

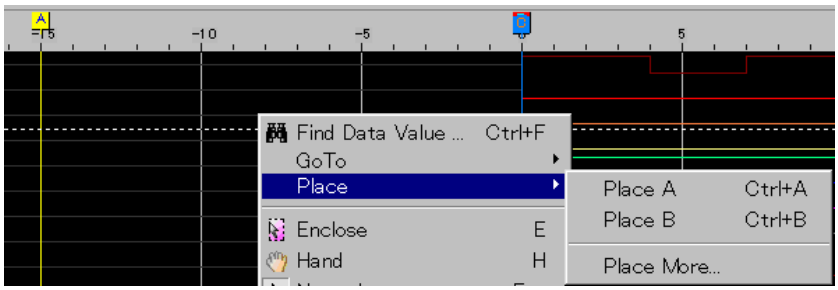

The target bar (in this case, A bar) moves to the click location.



For moving bars other than A or B, select the Place More... option from the context menu.

Note: The T bar position is fixed.

Move a bar to the display center

Move the bars to the center position of the display instantly.

Menu Data → GoTo

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Toolbar icon  (T bar)  (B bar)

 (A bar)

Shortcut key T (T bar)/ A (A bar)/ B (B bar)

Context menu

Right-click on the display and select Go to.

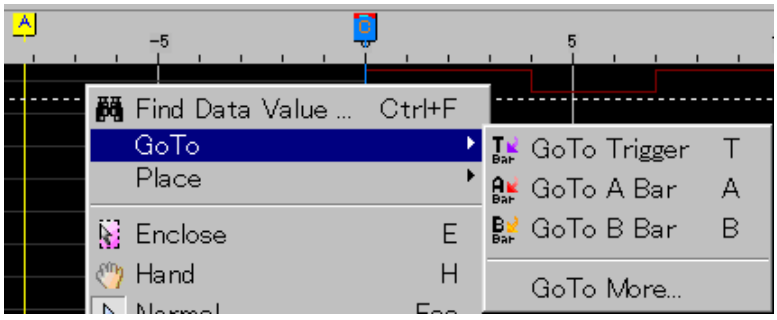


Automatically adjust bar position to signal edge

When this option is enabled, the bars automatically moves to signal edges when there are close.

Menu Tools → Customize ... → Customize

Check the Auto-Close radio.

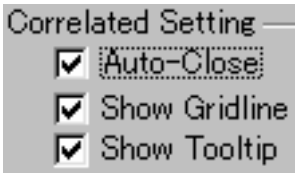

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Waveform Position

Here we describe how to move the whole waveform display together.

Move the previous edge to the center	Search the previous data edge of the selected signal, move it to the display center.	
	Menu	Data → Before
	Icon	
	Shortcut key	F11
Move the next edge to the center	Search the next data edge of the selected signal, move it to the display center.	
	Menu	Data → After
	Icon	
	Shortcut key	F12
Move the display left-right manually	Move the display area left or right manually. The mouse arrow changes into Hand style, allowing direct manipulation of waveform positions.	
	Menu	Data → Hand
	Icon	
	Shortcut key	H


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Context menu	Right-click on the display area and select Hand.

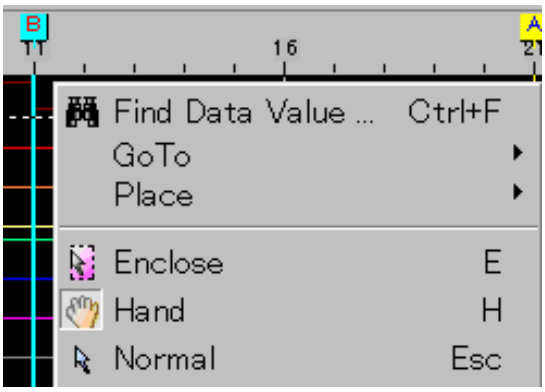

Move the cursor up/down

Menu	Bus/Signal → Format Row → Move Up / Move Down
Shortcut key	Up/Down
Context menu	Right-click on the Bus/Signal list, select Format Row menu.

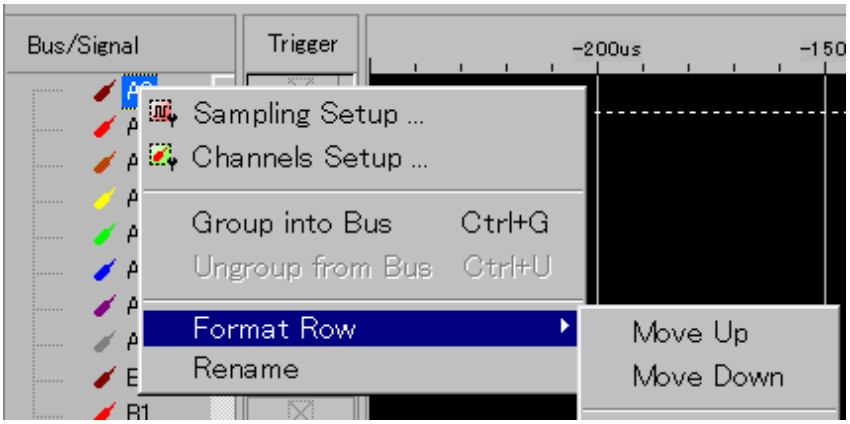


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Data Search

Search data in the waveform and move the data bars.

Menu	Data → Find Data Value ...
Icon	
Shortcut key	Ctrl+F
Context menu	Right-click on the display and select Find Data Value.

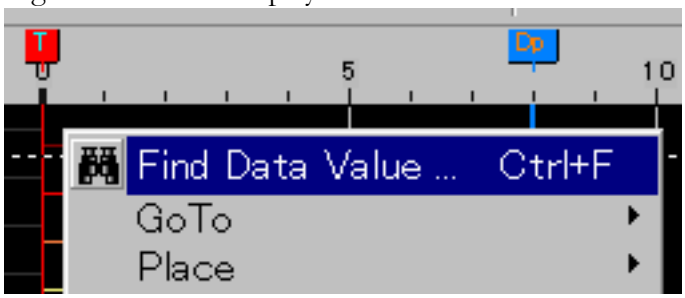

Dialogue window

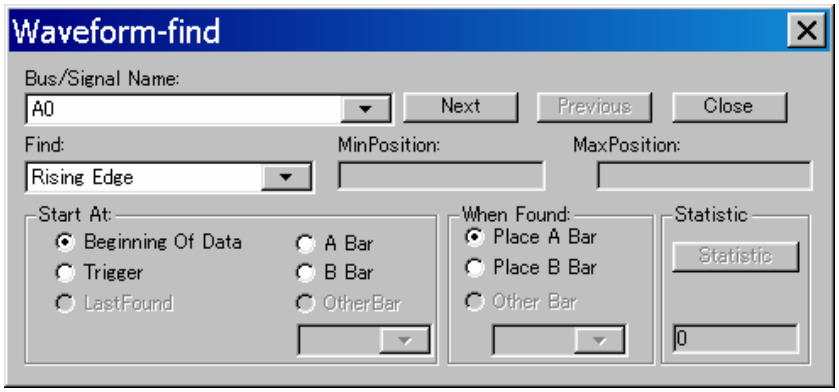


Data Search Step

1. Select the signal.



2. Select the signal condition.

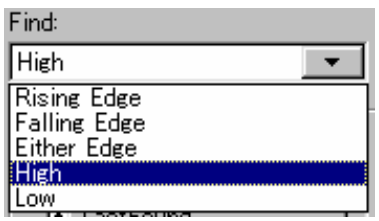


Rising Edge	Falling Edge	Either Edge

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

High	Low
	

3. Select the search start position.

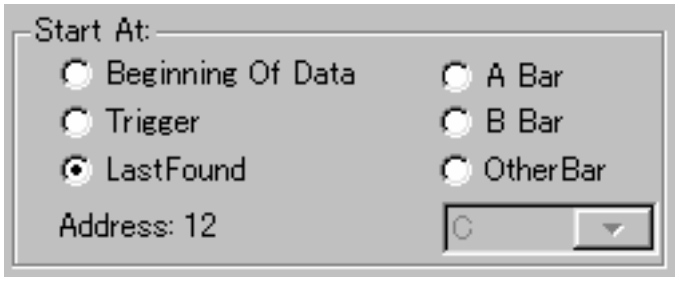

Beginning	The beginning of the captured data.
Trigger	Where the trigger condition occurred.
Last Found	Where the last data search ended (available after at least one data search).
A Bar	A Bar position.
B Bar	B Bar position.
Other Bar	The bar other than A or B. Click  Toolbar icon for adding a new Bar. For more details, see page43.

4. Select which bar to place when the target data is found.



5. Search the data. Press Next or Previous, to search forward or backward in the waveform.





Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Bus search step

1. Select the Bus.




2. Select the Bus condition.

Normal Bus

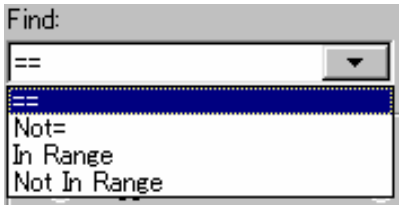

I^2C Bus

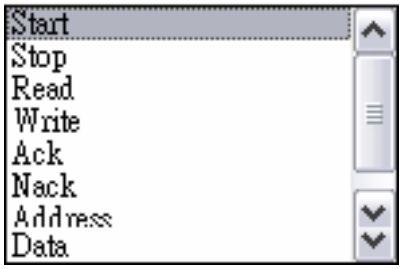


3. Set the Bus value range. Enter the value directly into Minimum and Maximum column.





==	Search the Bus condition where its value equals the MinPosition value.
Not=	Search the Bus condition where its value is NOT equal to the MinPosition value.
In Range	Search the Bus condition where its value is within the Min/Max Position range.
Not In Range	Search the Bus condition where its value is outside the Min/Max Position range.

4. Select the search start position.

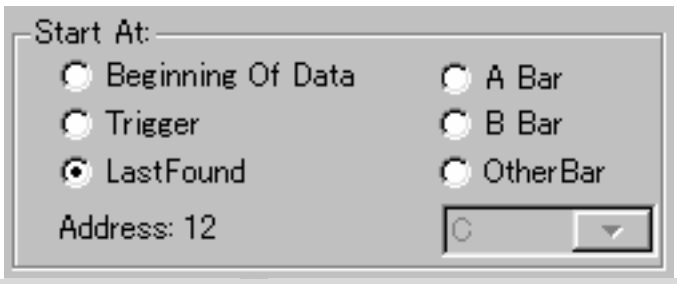

Beginning	The beginning of the captured data.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Trigger	Where the trigger condition occurred.
Last Found	Where the last data search ended (available after at least one data search).
A Bar	A Bar position.
B Bar	B Bar position.
Other Bar	The bar other than A or B. Click Bar Toolbar icon for adding a new Bar. For more details, see page78.


5. Select which bar to place when the target data is found.



6. Search the data. Click Next or Previous, to search forward or backward in the waveform.

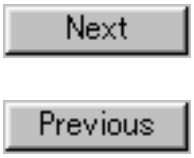


7. To see the total number of data match, click the statistic button.

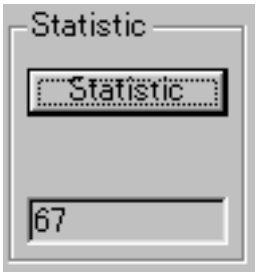

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Zoom In/Out

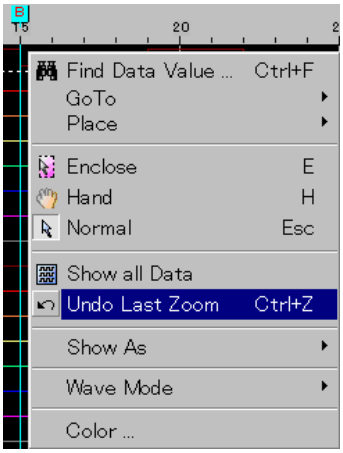Zoom in	Menu	Data → Zoom In
	Toolbar icon	
	Shortcut key	F9
	Zoom ratio	x2
Zoom out	Menu	Data → Zoom Out
	Toolbar icon	
	Shortcut key	F8
	Zoom ratio	÷2
Undo the last zoom	Menu	Data → Undo Last Zoom
	Shortcut key	Ctrl+Z
	Context menu Right-click on the signal display and select Undo Last Zoom.	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Enclose (flexible ratio zoom)

Enclose function zooms the selected area into full screen horizontal size. When selected, the mouse arrow changes into a cropping tool to select the zoom range.

Menu



Icon




Shortcut key

E

Context menu


Right-click on the signal display and select Enclose.

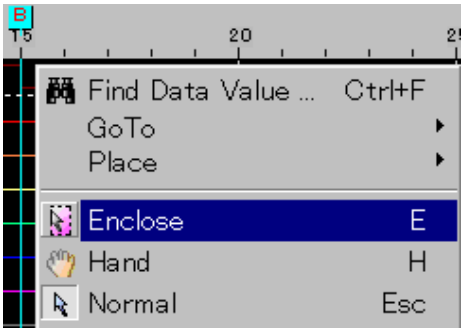

Show all data

Squeeze and show all the captured data into a single screen.

Menu

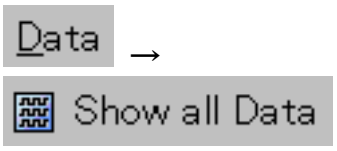


Icon



Context menu

Right-click on the signal display and select Show all Data.

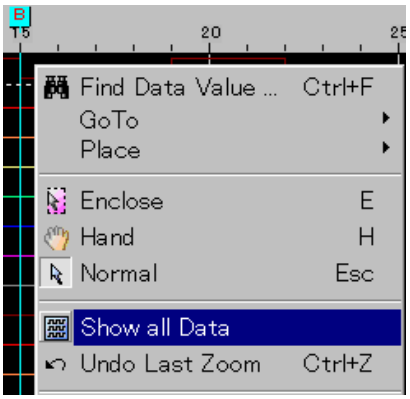

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Manual Display/Analysis Range Setting

You can set the display range manually, OR

You can limit the range of data for I2C (page90), or RS-232 (page94), or Waveform statistics (page97) analysis, to delete unnecessary chunk of data.


Menu


Data → Select a Analytic Range


Selection step

The pointer changes into a hand tool. Grab the Ds (Start point) and Dp (End point) bar and move it manually or press the toolbar icon to adjust the displayed range automatically.

Start point | End point | Manual setting | Automatic setting






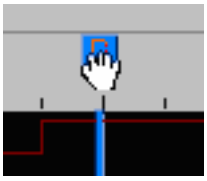



Example

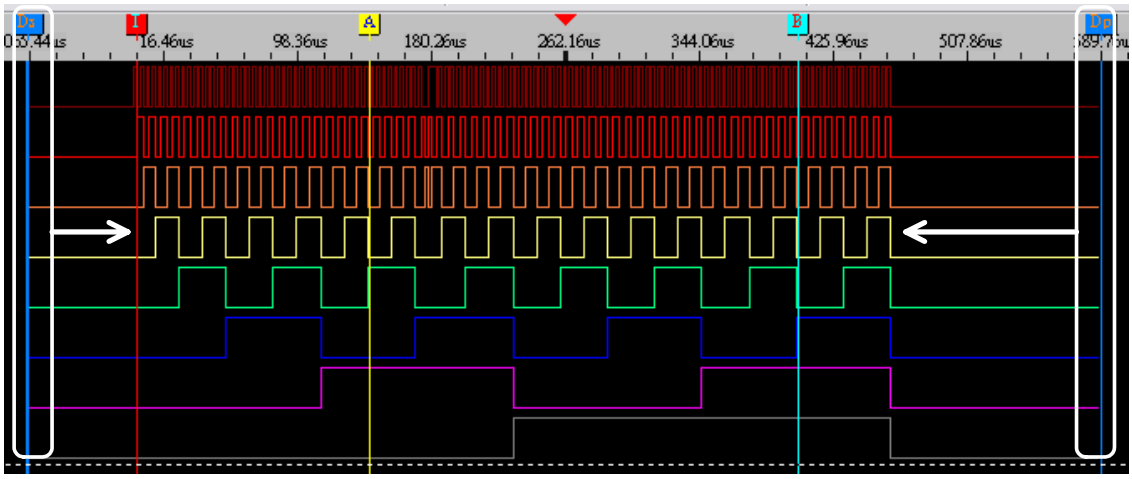

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I²C Bus Analysis

Background

This function analyzes the widely popular I²C (Inter-Integrated Circuit) bus protocol by extracting the attributes from the captured data.

The bus consists of two lines, SDA (Serial Data Line) and SCL (Serial Clock Line).

The Data consists of the following elements.

Start condition	Indicates the beginning of communication.
↓ Address	7-bit device address, MSB first.
↓ R/W	Read or Write acknowledge bit.
↓ ACK	Acknowledgement bit. Confirms reception of the previous byte.
↓ Data	8-bit (one byte) data, MSB first. The combination of ACK and Data is repeated for the duration of the communication.
↓ Stop condition	Indicates the end of communication.

Menu


Tools → Analyze IIC Wave

Icon





Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Dialogue window

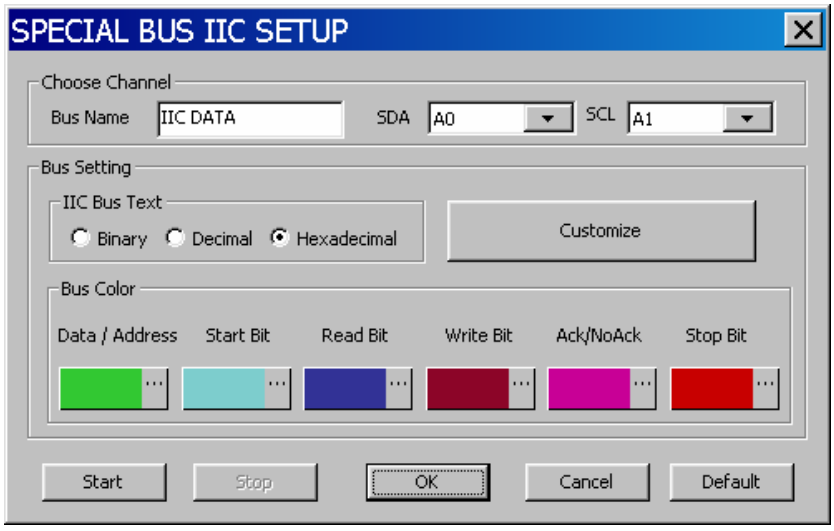

Analysis step

1. Limit the analysis range if necessary. Select "Select Analytic Range" from the Data menu. Limit the analysis range by moving Ds 

and Dp bar 

. For details, see page89.

2. Enter the name of the new I²C Bus, created upon analysis completion. 

3. Select the SDA (Serial Data Line) and SCL (Serial Clock Line) channel.





4. Select how the I2C Bus value will be displayed: Binary, Decimal, or Hexadecimal.




5. Select the color of the new I²C analysis Bus. Click each bus element's color bar and select a new color from color chart.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

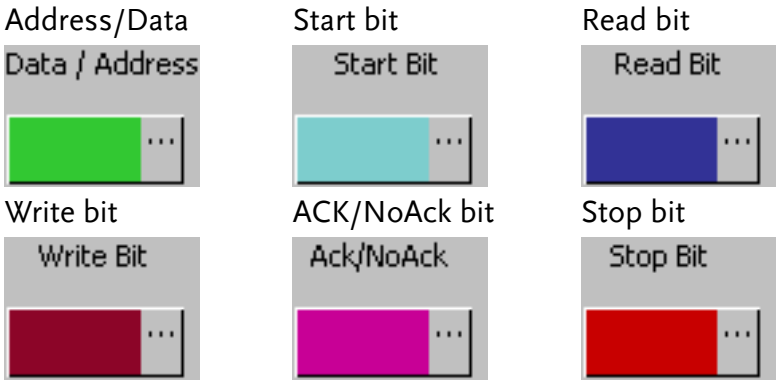


6. Click the I2C Customize button 

and open the Customize window.

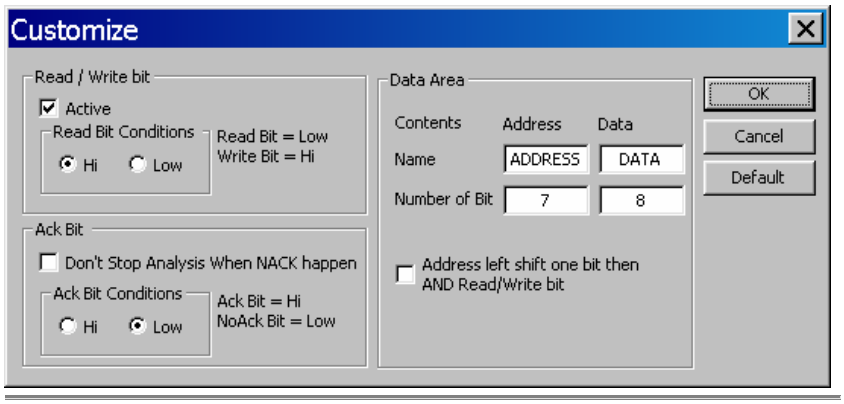


7. Select the Read/Write bit activation and polarity. Click the Active radio button and activate or deactivate Read/Write bit.

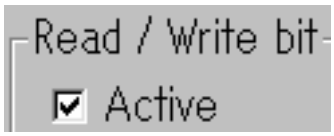

8. In active mode, click the Read Bit Conditions radio button and select the polarity. The Write Bit gets the opposite polarity.



9. Select whether the NACK (Non-acknowledge) sign stops I^2C analysis or not.

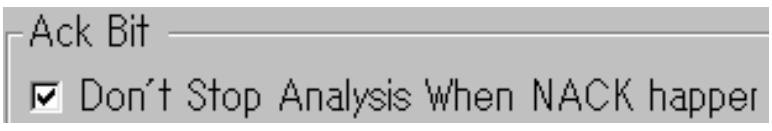

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


10. Select the ACK bit polarity. NoACK bit gets the opposite polarity.



11. Enter the Data/Address display name and their bit length.



12. Address can be shifted one bit left and then ANDed with Read/Write bit.

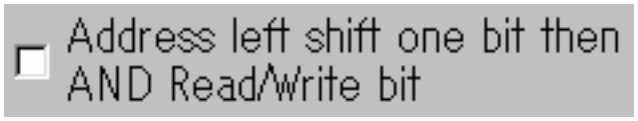


13. Press OK, Cancel, or Default.
Default contents:
Read/Write active
Read Bit High
Stop analysis upon NACK
Ack Bit Low
Address 7 bit/Data 8 bit
No Address shift



14. Start/Stop I^2C analysis.



A new I2C bus will be created with the result shown as configured.

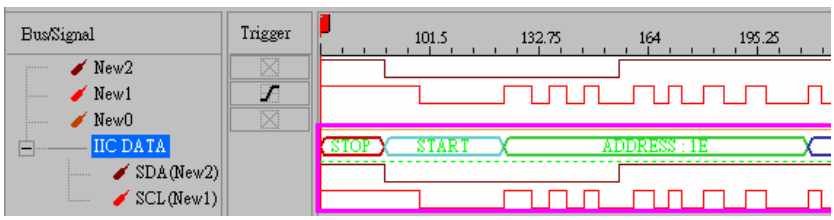

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RS-232C Signal Analysis

Background

This function analyzes the RS-232C signal protocol by extracting the attributes from the captured data.

RS-232C consists of a single line, including the following elements.

Start bit	A single bit which indicates the beginning of data packet.
↓	
Data	4 to 8 bits data contents.
↓	
Parity bit	A single bit for detecting error: the number of 1s in the data, including parity bit, is always odd or even.
↓	
Stop bit	A single bit which indicates the end of data packet.

The other elements include:

Baud Rate	The transmission speed: 300 ~ 115200 bit/s.
Direction	The data order: MSB or LSB first.


Menu

Tools → Analyze UART Wave

Icon




Dialogue window

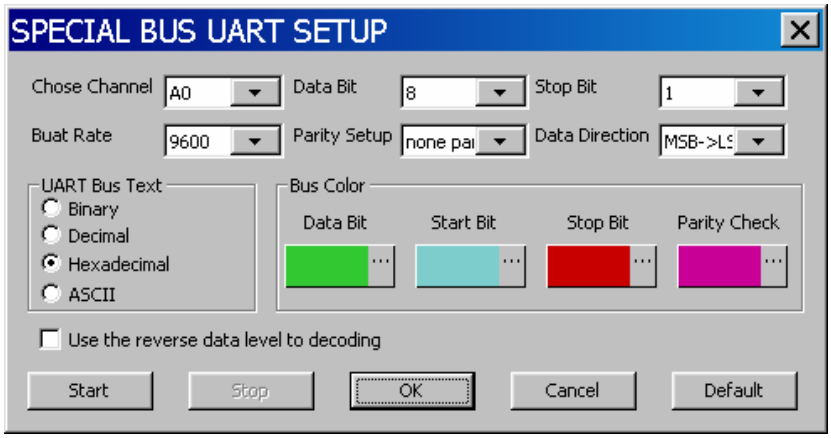

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analysis step

1. Limit the analysis range if necessary. Select "Select Analytic Range" from the Data menu. Move Ds and Dp bar and limit the range. For details, see page89.

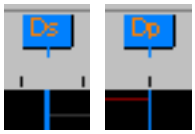


2. Select the signal channel.




3. Select the Baud rate.




4. Select the Data Bit: 4 ~ 8.

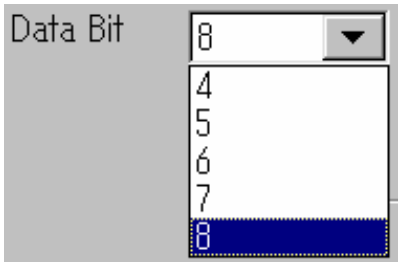


5. Select the Stop Bit width: 1, 1.5, 2.

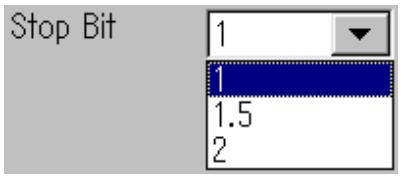


6. Select the Parity: none, odd, even.

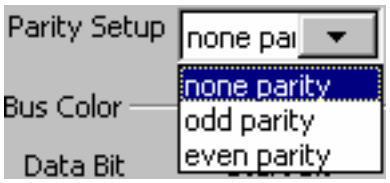

7. Select the Data direction: MSB first, or LSB first.

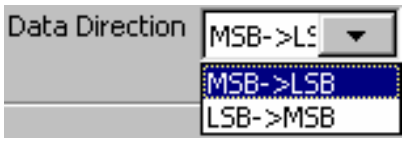


8. Select how the data value is displayed in the analysis result: binary, decimal, hexadecimal, or ASCII text.

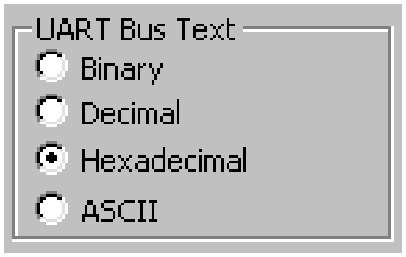

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

9. Select the color of the RS-232 analysis result. Click each element's color bar and select a new color from color chart.

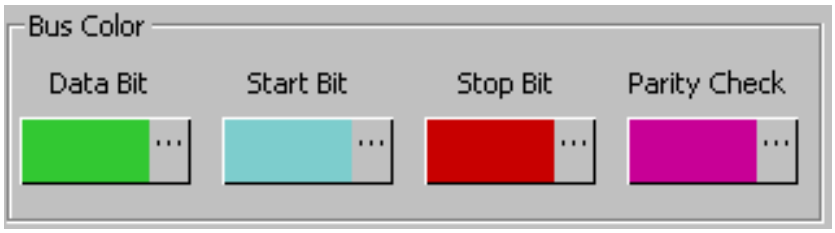


10. If the reversed polarity data should be used, click the radio.



11. Start/Stop RS-232 analysis. 

The result is displayed as configured.

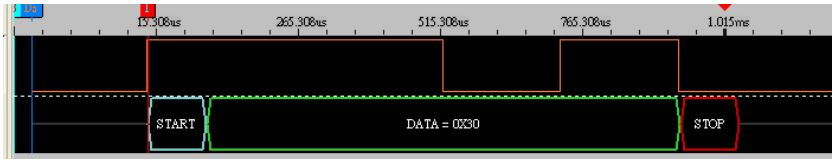

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Waveform Statistics


The Statistics function shows the number of cycles included in the waveform. Cycle period and waveform range are configurable.

Toolbar icon




Dialogue window

The statistics window appears at the bottom of the display.

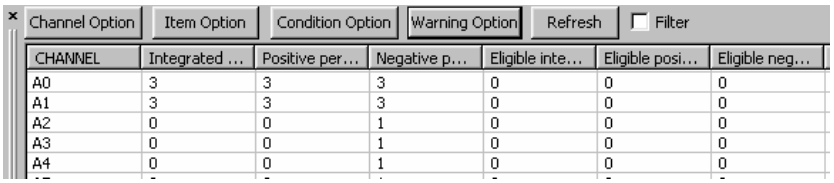


CHANNEL	Integrated ...	Positive per...	Negative p...	Eligible inte...	Eligible posi...	Eligible neg...
A0	3	3	3	0	0	0
A1	3	3	3	0	0	0
A2	0	0	1	0	0	0
A3	0	0	1	0	0	0
A4	0	0	1	0	0	0

Definition

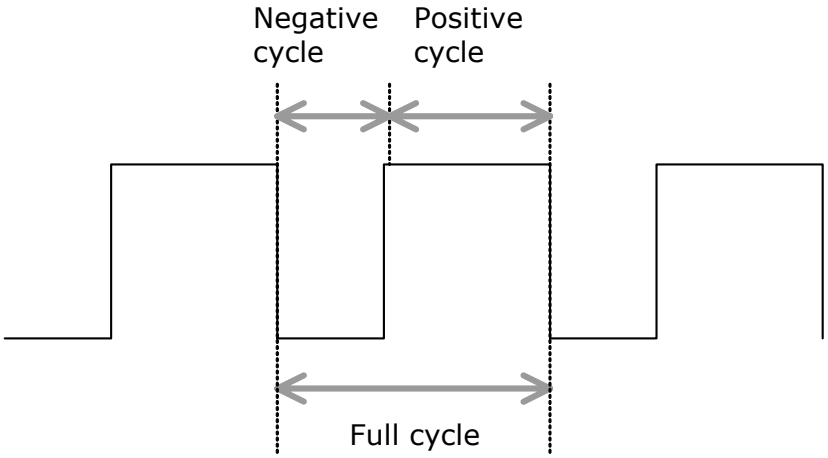

Statistics setup step

1. Limit the analysis range if necessary. Select "Select Analytic Range" from the Data menu. Move Ds and Dp bar and limit the range. For details, see page89.

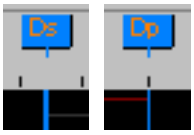


2. Press the Statistics icon. The statistics window appears.




Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3. Select the target channel if necessary. Press the Channel Option button. The option window opens. Check or uncheck the signals.

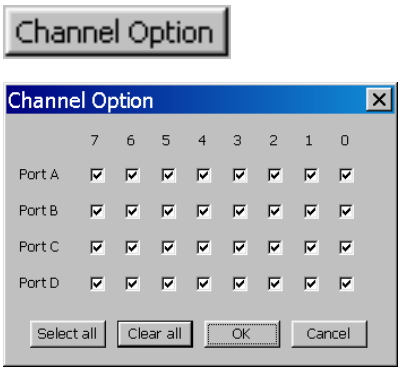


4. Select the included item. Press the Item Option button. The Item selection window appears. Check (uncheck) items to be included (excluded) in the statistics window.

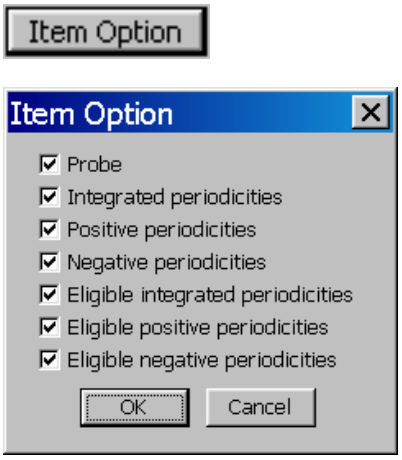


Probe	The probe name for each signal.
Integrated periodicities	The number of full cycles included in the waveform.
Positive periodicities	The number of positive cycles included in the waveform.
Negative periodicities	The number of negative cycles included in the waveform.
Eligible integrated periodicities	The number of full cycles included in the waveform, which meet the conditions (see below).
Eligible positive periodicities	The number of full cycles included in the waveform, which meet the conditions (see below).
Eligible negative periodicities	The number of full cycles included in the waveform, which meet the conditions (see below).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5. Set the cycle period condition, if necessary. Press the Condition Option button. The conditions window opens. Make sure the radio is checked.

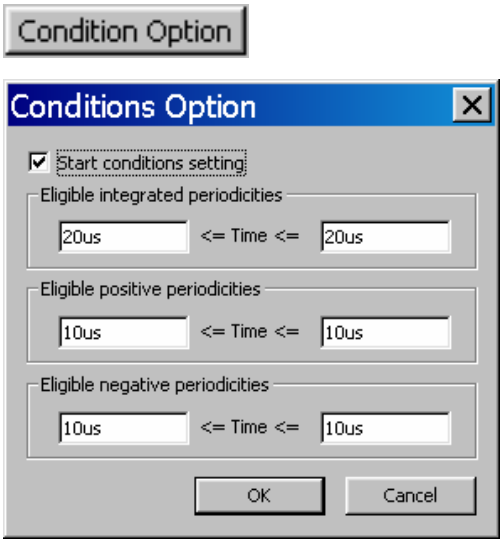



Eligible integrated periodicities	Full cycle period, in ns/us/ms/s. GLA counts the number of full cycle that has the same period.
Eligible positive periodicities	Positive cycle period, in ns/us/ms/s. GLA counts the number of positive cycle that has the same period.
Eligible negative periodicities	Negative cycle period, in ns/us/ms/s. GLA counts the number of negative cycle that has the same period.

6. Check the Filter radio to filter out incomplete data.



7. Press the Refresh button. The statistics windows updates the result.




Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

System Setting


Keyboard Shortcut Setup

Shows the model name and software version. The default setting can be viewed from the setup dialogue window, or from Help menu → Keyboard Map, or this user manual page16.

Menu



Dialogue Window

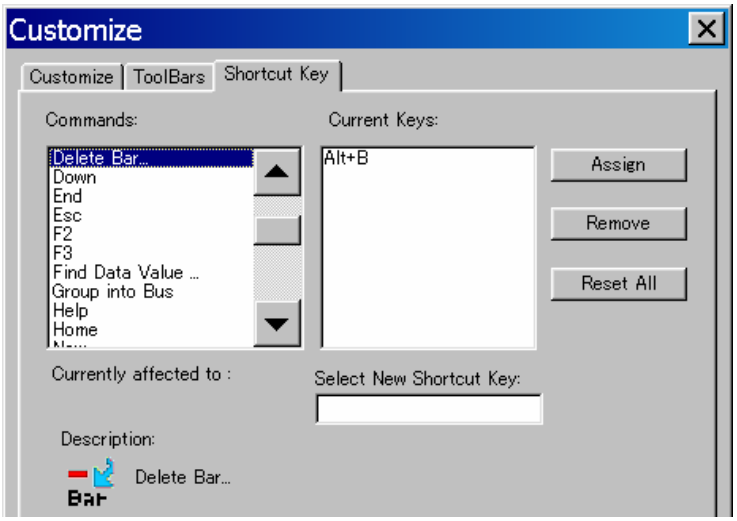


Assign a new shortcut

Click inside the New Shortcut key window and press the keys.



Click the Assign button.



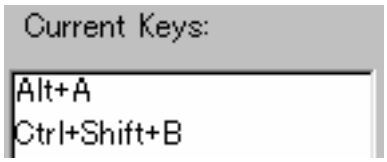


The new shortcut is added to the list.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Remove a shortcut

Select the target shortcut key inside the Current Keys window.

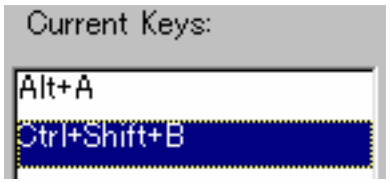

Click the Remove button. 

The shortcut gets deleted.



Restore default

Click the Reset All button. 

All shortcut keys settings goes back to the default state.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

System Information


Version Information

Shows the model name and software version.

Menu

Help → About GWINSTEK Logic Analyzer

Dialogue Window

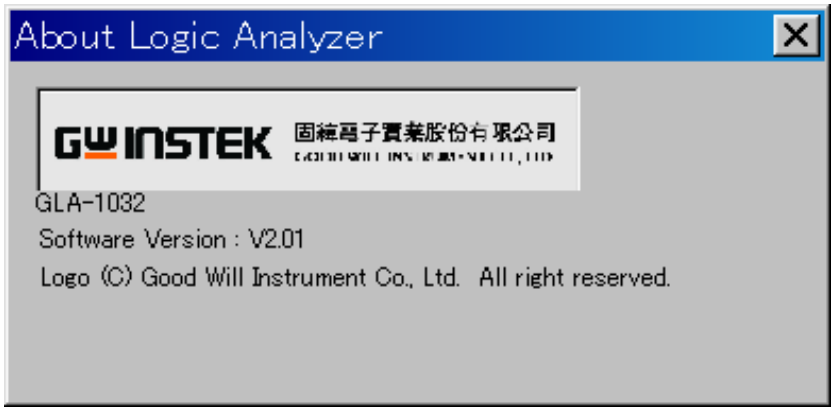

Automatic Software Update

GLA checks the software update at power up, then automatically installs the applicable files.

Menu

Check On/Off the Update radio button.

Tools → Customize ... → Check for Update

Internet connection

GLA checks the update information by accessing the server on the web. When there is no internet connection, a warning message will be generated.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Help Information

Main Help

Opens the main Help file, which includes this manual contents.

Menu	Help → GWINSTEK Logic Analyzer Help
Shortcut key	F1

Keyboard Shortcut

Opens the keyboard shortcut file.

Menu	Help → Keyboard Map

Tooltip

Shows/hides popup window for showing brief descriptions when the mouse scrolls over toolbar icons and waveforms.

Menu	Check On/Off the Show Tooltip radio button. Tools → Customize ... → Customize
Dialogue window	


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Example

Toolbar (I^2C setup)



Waveform

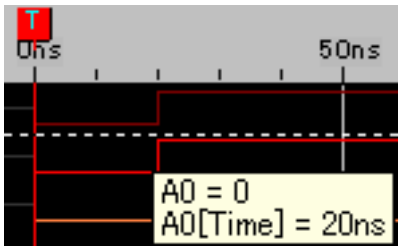

The tooltip on the status bar (the bottom left side of the display) is always On.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

FAQ

The USB is slow, though the PC is USB 2.0 compatible.

Make sure the cable is compatible with 2.0 high speed (use the attached one).

The message "Hardware connection failed" pops up.

Make sure GLA is powered up and pressing the Retry button.

Disconnect/reconnect USB cable.

Do not use extension cable for USB. Make sure GLA and PC are connected by a single USB cable.

GLA does not capture signal, or the result is inaccurate.

Check all signal connections, including the ground terminal, are secure. Use both 2 GND cables for stable ground connection. Make the distance between GLA and device under test as short as possible.

The sampling rate has to be more than four times that of the signal frequency.

Regarding trigger: Make sure the trigger threshold matches the signal settings. Trigger counter and trigger page should not be too large.

If the external clock is used, the clock rate might be too low, especially if the internal clock captures signals.

A large portion of the input signal is irrelevant and consumes memory.

Use the Enable function to set a specific signal condition that triggers data capturing. In this way, you will not waste too much memory for irrelevant data. See page57 for details.

A large amount of data (more than 32Mbit) is required.

Use the Data compression feature. It uses lossless compression technique so there will be no data loss. See page42 for details.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Trigger condition does not occur.

Make sure trigger threshold matches signal setting. If the trigger condition is too complex, simplify the setting to make it easier for data capturing.

Sampling frequency of the input signal is very low.

Try using the external clock so that the acquiring period is extended. Here is the frequency range for internal and external clock.

Internal: 100Hz ~ 200MHz
External: 0.001Hz ~ 150MHz

If there is still a problem, please contact your local dealer or GWInstek at www.gwinstek.com.tw / marketing@goodwill.com.tw.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specification

The specifications apply under the following conditions: GLA is powered on for at least 30 minutes, within +20°C~+30°C.

		GLA-1016	GLA-1032	GLA-1132
Channels		16	32	32
Memory Total/Per Channel		4Mbits/ 256kbits	4Mbits/ 128kbits	32Mbits/ 1Mbits
Interface		USB 2.0(1.1)		
Operating System		Win98/ 98SE /Me /2000 /XP		
Time Analysis		Maximum 200MHz		
State Analysis		0.001Hz ~ 100MHz		
Trigger	Channel	16	32	32
	Condition	Edge/Pattern		
	Pre/Post trigger	0% ~ 100%		
	Level	1		
	Threshold	+6V ~ −6V		
	Accuracy	±93mV		
	Count	1 ~ 65535		
	Page	Maximum 8191		
Input	Maximum Input Voltage	±30V		
	Impedance	500kΩ/10pF		

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specification (cont.)

The specifications apply under the following conditions: GLA is powered on for at least 30 minutes, within +20°C~+30°C.

		GLA-1016	GLA-1032	GLA-1132
Enable	Channel	16	32	32
	Enable Condition	Don't care, Low, High		
	Enable Delay	1 ~ 65535ms		
Data	Skew	<1.5ns		
	Compression Channels	16	24	24
	Compression Ratio	Maximum 255		
	Signal Statistics	Positive/ Negative, Full cycle within length condition		
	Protocol Analyzer	I2C, RS-232C		
Current Consumption	Static	Maximum 200mA		
	Working	Maximum 400mA		
Power dissipation	Static	Maximum 1W		
	Working	Maximum 2W		
Power	Interface	USB		
	Working voltage	4.5V ~ 5.5V		
Temperature	Operating	0°C ~ 50°C		
	Storage	−40°C ~ 80°C		
Dimension		102D × 39H × 137W(mm)		
Weight		Approx. 340g		

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Index

A

analysis
- I2C 90
- number of cycles 97
- range setup 89
- RS-232 94

B

bar
- icon overview 13
- move bar 79
- place after search 84, 86
- setup 77
- shortcuts 17

bus/signal
- sampling setup 40
- shortcuts 16

C

cleaning GLA 5

color
- setup 71

cursor 82

D

data
- analysis range 89
- compression setup 42
- search 83
- selective capturing 57
- specification 108

data compression
- bar 14
- icon overview 12

data operation
- shortcuts 17

demonstration mode 27

display
- color 71
- grid 68
- show all 88

E

extension module connection 10

external clock
- input terminal 10
- specification 107

external clock input
- setup 41

F

faq 105

feature list 7

file operation
- icon overview 12
- open/close 30
- print 36
- save 32
- shortcuts 16, 19

functionality check 28

G

GLA lineup 7

ground
- faq 105
- location 10

H

hardware

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

faq 105
help
shortcuts 19
tooltip 103
horizontal
bar overview 14
icon overview 13
manual range setting 88
setup 65

I

I2C
analysis 90
icon overview 14
range 89
shortcuts 18
icon
list 16
input connector 10

K

keyboard shortcut 16
setup 100

L

LED location 9

M

menu
list 16
menu overview 11
mouse
icon overview 13

O

operation environment 5

P

package contents 8
panel description 9
pointer
enclose mode 88
power
power up sequence 26
switch location 9

R

RS-232
analysis 94
icon overview 14
range 89
shortcuts 18
run/stop
icon overview 12
repetitive run 74
shortcuts 17
single run 74
stop 75
switch location 9

S

sampling
icon overview 12
search 83
bus 85
icon overview 13
signal edge
icon overview 13
signal/bus
add/delete 43
software
activation 26
automatic update 102
hardware requirement 21
installation 22
overview 11
uninstallation 25
version 102
statistics
bus search result 86

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

storage environment 5

T

table of contents 3
toolbar
icon overview 12
setup 63
trigger
bus condition setup 51
conditional triggering 57
delay 54
faq 106
icon overview 12, 13, 14
level 53
pre-triggering data 56
shortcuts 17
signal condition setup 48
specification 107
trigger output 61

U

USB
connector location 9
faq 105
specification 107
warning 9

V

vertical
bar height icon 14
setup 66

W

waveform
color 72
cycle analysis 97
direction setup 67
display mode icon 13
move waveform 81
sawtooth/square 69
timing icon 14
view shortcuts 19

Z

zoom
icon overview 13
in 87
manually 88
out 87
shortcuts 17
undo 87

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP