ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *VIAVI Solutions / JDSU BBS1590+1FP* at our website: *Click HERE*

BBS SERIES
OPTICAL BROADBAND SOURCE

User's Manual

JDS Uniphase

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Contents

Safety Information, Instructions, and Symbols 1

Safety Information 1
Classification 1
Disconnecting from Line Power 1
Line Power Requirements 1
Fuse Type 1
Laser Specifications 1
Safety Instructions 3
Before Initializing and Operating the Unit 3
Operating the Unit 3
Safety Symbols 4
Compliance 5
FCC Compliance 5
CE Compliance 5
FDA-CDRH Compliance 6

General Information and Specifications 7

General Information 7
Optics 7
Key Features 7
Applications 7
Standard Accessories 8
Specifications 9

Getting Started 11

Before Initializing and Operating the Unit 11
Initial Inspection 11
Operating Environment 11
Temperature 11
Humidity 12
Ventilation 12
Storing and Shipping 12
Claims and Repackaging 12
Returning Shipments to JDS Uniphase 12
Cleaning Connectors 13

Operating and Maintenance Instructions 15

Front Panel 15
Rear Panel 15
Connecting the Remote Interlock 16
Using the Broadband Source 16
Checking Calibration 17
Maintaining the Unit 17

Customized Features and Test Data 18

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

For sales and service information,
contact JDS Uniphase or your local representative.

JDS Uniphase Corporation
570 West Hunt Club Road
Nepean, Ontario, Canada
K2G 5W8
Phone: 613 727-1303
Fax: 613 727-8284
E-mail: sales@jdsunph.com
Website: http://www.jdsunph.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PRODUCT WARRANTY

JDS Uniphase Inc. warrants only to the original Buyer that all products, other than Software, made by JDS Uniphase Inc. are free from defects in material and workmanship for a period of one (1) year from the date of shipment. The Furukawa Electric Co., Ltd., ("FEC") and Seikoh Giken Co. Ltd. ("SG") guarantee their products sold by JDS Uniphase Inc., to be free from defects in material and workmanship for a period of one (1) year from the date of shipment from JDS Uniphase Inc. All other products sold by JDS Uniphase Inc. as distributor carry only the original manufacturer's warranty.

Under warranty, JDS Uniphase Inc. will repair returned products or provide a replacement product at its sole option, for any product made by it, which upon inspection by JDS Uniphase Inc. and in the sole opinion of JDS Uniphase Inc., is determined to be defective in workmanship or material and has in fact failed. JDS Uniphase Inc. will accept for repair, replacement or credit under warranty products made by FEC and SG, and products made by third parties if authorized to do so. All products repaired or replaced under warranty are only warranted for the remaining unexpired period of time in the original warranty for the particular defective product. JDS Uniphase Inc., FEC and SG all reserve the right, at their sole option, to issue a credit note for any defective product as an alternative to repair or replacement. These warranties shall extend to any product which has proved defective and has failed through normal use, but excludes and does not cover any products or parts thereof which have been accidentally damaged, disassembled, modified, misused, used in applications which exceed their specifications or ratings, neglected, improperly installed or otherwise abused. Buyer must claim under the warranty in writing not later than thirty (30) days after the claimed defect is discovered. All claims under this warranty must be made by the Buyer and no claim will be accepted from any third party.

JDS Uniphase Inc. will only accept returns for which an approved Return Material Authorization (RMA) has been issued by JDS Uniphase Inc. Defective products shall be returned prepaid and insured to JDS Uniphase Inc. at the address shown herein. All products which have been returned to JDS Uniphase Inc. but which are found to meet all previously applicable specifications for such products, shall be subject to JDS Uniphase Inc.'s standard examination charge in effect at the time, which shall be charged to the Buyer. All products returned to JDS Uniphase Inc. which are not accompanied by an itemized statement of defects, shall be returned to the Buyer at the Buyer's expense and no evaluation of such products shall be carried out by JDS Uniphase Inc.

Where Goods contain software ("Software"), JDS Uniphase Inc. does not transfer ownership but only grants the Buyer a perpetual, non-exclusive license to use Software but restricted only to use related to the operation of the products. Such license is transferable only with the transfer of ownership of the product in which it is used. Except for backup copies as permitted by law, Buyer shall not (i) modify, reproduce, copy, reverse engineer, decompile or disassemble all or any portion of the Software, (ii) distribute, market, disclose, rent, lease or sublicense the use of the Software to any third party, or (iii) permit or authorize anyone within Buyer's reasonable control to do any acts in (i) or (ii). JDS Uniphase Inc. warrants that Software under normal use and service as originally delivered to Buyer will function substantially in accordance with the functional description set out in the product specification and/or user manual supplied with the Software for a period of 90 days from the date of shipment. JDS Uniphase Inc.'s sole liability and Buyer's sole remedy for a breach of this warranty shall be JDS Uniphase Inc.'s good faith efforts to rectify the nonconformity or, if after repeated efforts JDS Uniphase Inc. is unable to rectify the non-conformity, JDS Uniphase Inc. shall accept return of the Software and shall refund to you all amounts paid in respect thereof. This warranty is void if failure of the Software has resulted from accident, misuse, abuse, misapplication or modification.

SD000031 Rev. H July 1999

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Safety Information, Instructions, and Symbols

Safety Information

Classification

The unit consists of an exposed metal chassis that is connected directly to earth via a power cord and, therefore, is classified as a Class 1 instrument. Class 1 refers to equipment relying on ground protection as a means of shock protection.

The following symbol is used to indicate a protective conductor terminal in the unit.



Disconnecting from Line Power

Some of the circuits are powered whenever the unit is connected to the AC power source (line power). To ensure that the unit is not connected to the line power, disconnect the power cord from either the power inlet on the unit's rear panel or from the AC line-power source (receptacle). The power cord must always be accessible from one of these points. If the unit is installed in a cabinet, the operator must be able to disconnect the unit from the line power by the system's line-power switch.

Line Power Requirements

The unit can operate from any single-phase AC power source that supplies between 100 and 240 V at a frequency range of 50 to 60 Hz. The maximum power consumption is 80 VA.

Fuse Type

The fuse type used by the unit is (5x20) mm, T1A/250 V (slow).

Laser Specifications


Laser specifications are outlined in Table 1.

Table 1: Laser Specifications

Parameter	Specification
Wavelength	varies by model
Class	IIIb
Output power	20 mW maximum

Under the laser classification of the US Food and Drug Administration (FDA) Center for Devices and Radiological Health (CDRH), the laser contained in the unit is a Class IIIb laser.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

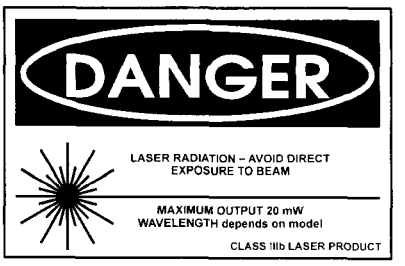

Warning

Class IIIb lasers are hazardous to eyes and skin if viewed directly.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Safety Instructions

The following safety instructions must be observed whenever the unit is operated, serviced, or repaired. Failure to comply with any of these instructions or with any precaution or warning contained in the user's manual is in direct violation of the standards of design, manufacture, and intended use of the unit. JDS Uniphase assumes no liability for the customer's failure to comply with any of these safety requirements.

Before Initializing and Operating the Unit

☑ Inspect the unit for any signs of damage, and read the user's manual thoroughly.

☑ Install the unit as specified in the **Getting Started** section.

☑ Ensure that the unit and any devices or cords connected to it are properly grounded.

Operating the Unit



Warning

To avoid the risk of injury or death, always observe the following precautions before initializing the unit:

- If using a voltage-reducing autotransformer to power the unit, ensure that the common terminal connects to the earthed pole of the power source.
- Use only the type of power cord supplied with the unit.
- Connect the power cord only to a power outlet equipped with a protective earth contact. Never connect to an extension cord that is not equipped with this feature.
- Willfully interrupting the protective earth connection is prohibited.
- Never look into the end of an optical cable connected to an optical output device that is operating. Laser radiation is invisible, and direct exposure can severely injure the human eye. For more information, see the user's manual of the laser source in use.
- To prevent potential fire or shock hazard, do not expose the unit to any source of excessive moisture.
- Do not operate the unit when its covers or panels have been removed.
- Do not interrupt the protective earth grounding. Any such action can lead to a potential shock hazard that can result in serious personal injury.
- Do not operate the unit if an interruption to the protective grounding is suspected. In this case, ensure that the unit remains inoperative.
- Use only the type of fuse specified by the manufacturer as appropriate for this unit. Do not use repaired fuses, and avoid any situations that can short-circuit the fuse.
- Unless absolutely necessary, do not attempt to adjust or perform any maintenance or repair procedure when the unit is opened and connected to a power source.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

	• Repairs are to be carried out only by a qualified professional. • Operating the unit in the presence of flammable gases or fumes is extremely hazardous. • Do not perform any operating or maintenance procedure that is not described in the user's manual. • Some of the unit's capacitors can be charged even when the unit is not connected to the power source.

Safety Symbols

The following symbols and messages can be marked on the unit (Table 2). Observe all safety instructions that are associated with a symbol.

Table 2: Safety Symbols

Symbol	Description
	Laser safety. See the user's manual for instructions on handling and operating the unit safely.
	See the user's manual for instructions on handling and operating the unit safely.
	Electrostatic discharge (ESD). See the user's manual for instructions on handling and operating the unit safely.
	Frame or chassis terminal for electrical grounding within the unit.
	Protective conductor terminal for electrical grounding to the earth.
WARNING	**The procedure can result in serious injury or loss of life if not carried out in proper compliance with all safety instructions. Ensure that all conditions necessary for safe handling and operation are met before proceeding.**
CAUTION	The procedure can result in serious damage to or destruction of the unit if not carried out in compliance with all instructions for proper use. Ensure that all conditions necessary for safe handling and operation are met before proceeding.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Compliance

FCC Compliance

The Federal Communications Commission (FCC) of the United States of America requires that equipment operating in that country does not cause interference to communications. The unit has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of Title 47 of the Code of Federal Regulations for Radio Frequency Devices. Operation is subject to the following two conditions, which the FCC requires to be labeled on the unit:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

FCC rules require that the following note and subsequent information be included in this manual:

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

These limits are designed to provide reasonable protection against harmful interference in a commercial installation. The unit generates, uses, and radiates radio frequency energy and, if not installed and used in accordance with instructions, can cause harmful interference to radio communications.

Any user modification made to the unit voids the user's authority to operate the unit under the FCC rules.

If this unit is used in a residential setting, resulting interference must be corrected by the user.

For more information, see Title 47 of the Code of Federal Regulations at http://www.access.gpo.gov/nara/cfr/cfr-table-search.html.

CE Compliance

The unit has been designed and tested to comply with directive 73/23/EEC and its subsequent amendments by the European Community (EC or CE). The directive relates to electrical equipment designed for use within certain voltage limits. It ensures that electrical equipment is constructed with good engineering practice in safety matters.

The unit has been designed and tested to comply with directive 89/336/EEC and its subsequent amendments. The directive relates to electromagnetic compatibility. It demands that electromagnetic disturbance does not exceed a prescribed level; that the equipment be immune to a prescribed level of ambient level of interference; that the equipment be protected against electrostatic discharges; and that the equipment be immune to all electrical shock wave

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

disturbances. As of 1997, measures have been added to test for fire hazard, electric shock hazard, and also external exposure to other forms of energy.

The requirements specified by directive 89/336/EEC are as follows. CE compliance requires that the manufacturer or its authorized representative established within the Community affix the EC conformity mark to the apparatus or else to the packaging, instructions for use, or guarantee certificate. The EC conformity mark shall consist of the letters CE as specified and the figures of the year in which the mark was affixed. This mark should, where appropriate, be accompanied by the distinctive letters used by the notified body issuing the EC type-examination certificate. Where the apparatus is the subject of other Directives providing for the EC conformity mark, the affixing of the EC mark shall also indicate conformity with the relevant requirements of those other Directives.

FDA-CDRH Compliance

Under the US Food and Drug Administration (FDA) Center for Devices and Radiological Health (CDRH), the unit complies with the Code of Federal Regulations (CFR), Title 21, Subchapter J, which pertains to laser safety and labeling. See http://www.fda.gov/cdrh/radhlth/cfr/21cfr1000-1050.pdf for more information.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

General Information and Specifications

General Information

This user's manual for the BBS Series Optical Broadband Source contains complete operating instructions. The inspection report and a description of any customer-requested information are found in the **Customized Features and Test Data** section.

The BBS Series Optical Broadband Source is a high-power, broadband, optical source unit ideal for laboratory or manufacturing use. Spectral measurements of couplers, wavelength division multiplexers (WDMs), isolators, and other optical components can be tested or verified easily with this instrument when combined with a scanning receiver.

Optics

The optics of the BBS unit consist of either an erbium doped fiber amplifier (EDFA), a semi-conductor amplifier (SOA), or a super-luminescent laser diode (SLD), and supporting components specifically designed to achieve maximum output power at the bulkhead-mounted optical connector.

Key Features

- Total output power from >3 to >20 mW (depending on model)
- High stability (< 0.05 dB) for EDFA-based models
- Broadband source spectral density from -25 to -3 dBm/nm (depending on model)
- Bulkhead optical output connector (FC/HPC, FC/APC, SC/HPC, SC/APC)
- Half width of a 19 inch (48.26 cm) rack
- Remote interlock and key enable switch

Applications

The BBS source is used for optical component measurement and telecommunications transmission testing:

- Spectral measurements of couplers, WDMs, isolators, and other optical components
- Noise loading in system experiments
- Polarization mode dispersion (PMD) measurements

Figure 1 shows how a BBS source can be interconnected for optical component and transmission system testing.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

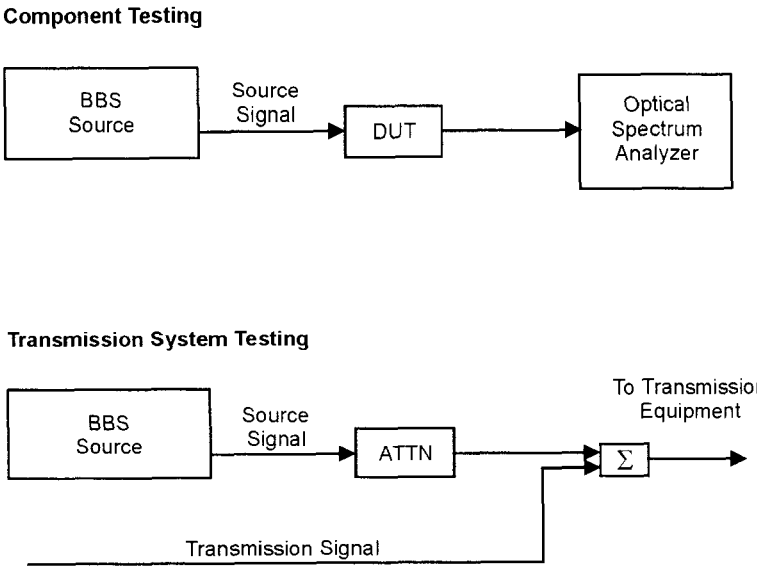


Figure 1: Component and Transmission System Testing

Standard Accessories

- AC power cord
- Remote interlock connector
- Two keys
- Rack-mount kit with assembly instructions
- User's manual

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

The following optical specifications describe the warranted characteristics of the unit (Table 3). Supplementary specifications describe the typical non-warranted performance of the unit (Table 4).

Table 3: Optical Specifications

Parameter	BBS1550	BBS1590	BBS1560	BBS1460	BBS980	BBS980-1	BBS1310
Operating wavelength (minimum)	1530 to 1559 nm	1570 to 1600 nm	1530 to 1560 nm, 1570 to 1600 nm	1440 to 1540 nm	950 to 980nm	950 to 980 nm	1290 to 1360 nm
Operating wavelength (typical)	1525 to 1565 nm	1565 to 1605 nm	1525 to 1560 nm, 1570 to 1605 nm	1420 to 1580 nm	950 to 1010nm	950 to 1010 nm	1250 to 1400 nm
Pump	Single	Single	Single	Single	Single	Single	Single
Total output power (minimum)	≥20 mW[1]	≥8 mW[1]	≥10 mW[1]	≥5 mW[2]	≥3.2 mW[2]	≥3.2 mW[2]	≥18 mW[2]
Optical spectral density[3] (minimum)	≥-5 dBm/nm	≥-8 dBm/nm	≥-15 dBm/nm	≥-25 dBm/nm	≥-18 dBm/nm	≥-18 dBm/nm	≥-15 dBm/nm
Optical spectral uniformity[4]	2 dB	2 dB	10 dB	--	--	--	--
Optical output stability[5] (minimum)	≤0.05 dB[1]	≤0.05 dB[1]	≤0.05 dB[1]	≤0.15dB[2]	≤0.15dB[2]	≤0.15dB[2]	≤0.02dB[2]
Output isolation	35 dB	20 dB	20 dB	≥15dB[2]	--	≥15dB[2]	≥20dB[2]
Output polarization[2]	--	--	--	5%	5%	5%	5%
Optical interface	FC/HPC, FC/APC, SC/HPC, SC/APC						

[1] Measured at 1550 / 1590 / 1570 nm at 23 °C.
[2] Measured at 1475 / 980 / 1310 nm at 23 °C.
[3] Measured over operating wavelength range with 1nm resolution bandwidth.
[4] Measured peak to peak over minimum operating wavelength range.
[5] Measured over 12 hours after 15 minute warm-up with broadband detector at 1550/1590/1570/980/1310 nm at 23 °C.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 4: Other Specifications

Electrical	
Input voltage	100 to 240 V AC, 50 to 60 Hz
Power consumption	80 VA maximum
Physical	
Dimensions (W x H x D)	21.2 cm x 8.9 cm x 35.5 cm, 1/2 rack wide benchtop
Weight	<4 kg
Environmental	
Operating temperature	-10 to 60 °C
Storage temperature	0 to 50 °C
Humidity	maximum 95% RH non condensing

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Getting Started

The BBS Series Optical Broadband Source consists of the source unit, an AC power cord, two keys, and a rack-mount kit.

Before Initializing and Operating the Unit

☑ Inspect the unit for any signs of damage.

☑ Read the user's manual thoroughly, and become familiar with all safety symbols and instructions to ensure that the unit is operated and maintained safely.

Initial Inspection



Warning

To avoid electrical shock, do not initialize or operate the unit if it bears any sign of damage to any portion of its exterior surface, such as the outer cover or panels.

Check that the unit and contents are complete:

1. Wear an anti-static wrist strap, and work in an electrostatic discharge (ESD) controlled area.
2. Inspect the shipping container for any indication of excessive shock to the contents, and inspect the contents to ensure that the shipment is complete.
3. Inspect the unit for structural damage that can have occurred during shipping.
4. Connect the unit to a power source, using the AC power cord provided.
5. Set the power switch to **I** (on).
6. Keep the packaging.

Immediately inform JDS Uniphase and, if necessary, the carrier if the contents of the shipment are incomplete, if the unit or any of its components are damaged or defective, or if the unit does not pass the initial inspection.

Operating Environment

In order for the unit to meet the warranted specifications, the operating environment must meet the following conditions for temperature, humidity, and ventilation.

Temperature

The unit can be operated in the temperature range of 0 to 50 °C.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Humidity

The unit can be operated in environments with up to 95% humidity. Do not expose it to any environmental conditions or changes to environmental conditions that can cause condensation to form inside the unit.

Ventilation

The unit contains a built-in cooling fan. Do not install it in any location where the ventilation is blocked. For optimum performance, the unit must be operated from a location that provides at least 75 mm (3 inches) of clearance at the rear and at least 12.5 mm (0.5 inch) of clearance at the bottom. Blocking the air circulation around the unit can cause the unit to overheat, compromising its reliability.



Warning

- Do not use the unit outdoors.
- To prevent potential fire or shock hazard, do not expose the unit to any source of excessive moisture.

Storing and Shipping

To maintain optimum operating reliability, do not store the unit in locations where the temperature falls below -10 °C or rises above 60 °C. Avoid any environmental condition that can result in internal condensation. Ensure that these temperature and humidity requirements can also be met whenever the unit is shipped.

Claims and Repackaging

Immediately inform JDS Uniphase and, if necessary, the carrier, if

- The contents of the shipment are incomplete
- The unit or any of its components are damaged or defective
- The unit does not pass the initial inspection

In the event of carrier responsibility, JDS Uniphase will allow for the repair or replacement of the unit while a claim against the carrier is being processed.

Returning Shipments to JDS Uniphase

JDS Uniphase only accepts returns for which an approved Return Material Authorization (RMA) has been issued by JDS Uniphase sales personnel. This number must be obtained prior to shipping any material to JDS Uniphase. The owner's name and address, the model number and full serial number of the unit, the RMA number, and an itemized statement of claimed defects must be included with the return material.

Ship return material in the original shipping container and packing material. If these are not available, packaging guidelines are as follows:

1. Wear an anti-static wrist strap and work in an ESD controlled area.

2. Cover the front panel with a strip of cardboard.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3. Wrap the unit in anti-static packaging. Use anti-static connector covers, if applicable.

4. Pack the unit in a reliable shipping container.

5. Use enough shock-absorbing material (10 to 15 cm or 4 to 6 in on all sides) to cushion the unit and prevent it from moving inside the container. Pink poly anti-static foam is the best material.

6. Seal the shipping container securely.

7. Clearly mark FRAGILE on its surface.

8. Always provide the model and serial number of the unit and, if necessary, the RMA number on any accompanying documentation.

9. Ship the unit only to the address given at the beginning of this document.

Cleaning Connectors



Caution

- Connecting damaged or dirty fibers to the unit can damage the connectors on the unit.
- Never force an optical connector. Some connectors have a ceramic ferrule that can easily be broken.

Optical cable ends need to be cleaned before using them with the unit.

The following items are required for cleaning:

- Filtered compressed air or dusting gas (for example, Tech Spray Envi-Ro-Tech Duster 1671 gas, available from http://www.techspray.com/1671.htm)
- Lint-free pipe cleaners (for example, from 3M[1]) or lint-free swab
- Lint-free towels (for example, 10 x 10 cm or 4 x 4 in HydroSorb III wipers, available from http://www.focenter.com/acctech/hydrosobr_wipers.htm)
- Optical grade isopropyl alcohol or optical grade 200° ethanol (do not use rubbing alcohol, which contains 30% water)

To clean the connectors:

1. Blow the sleeve with filtered compressed air (Figure 2).

[1] 3M is a trademark of 3M.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

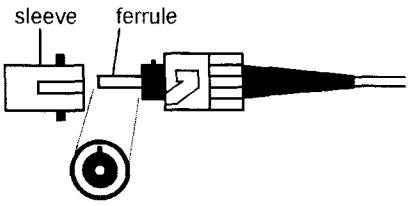


Figure 2: Connector Cleaning (connector type can vary)

2. Apply optical grade isopropyl alcohol or optical grade ethanol (do not use rubbing alcohol) to a small area of a lint-free towel and rub the end of the ferrule over the wet area.

3. Wipe the ferrule on a dry area of the lint-free towel.

4. Using the dusting gas or compressed air, blow the end of the ferrule.

5. Apply the alcohol or ethanol to a lint-free pipe cleaner or swab and wipe off the remaining parts of the connector.

6. With the other end of the pipe cleaner or swab, dry the areas cleaned.

7. Using the dusting gas or compressed air, blow the areas cleaned.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Front Panel

The front of the unit is shown in Figure 3 and described in Table 5.

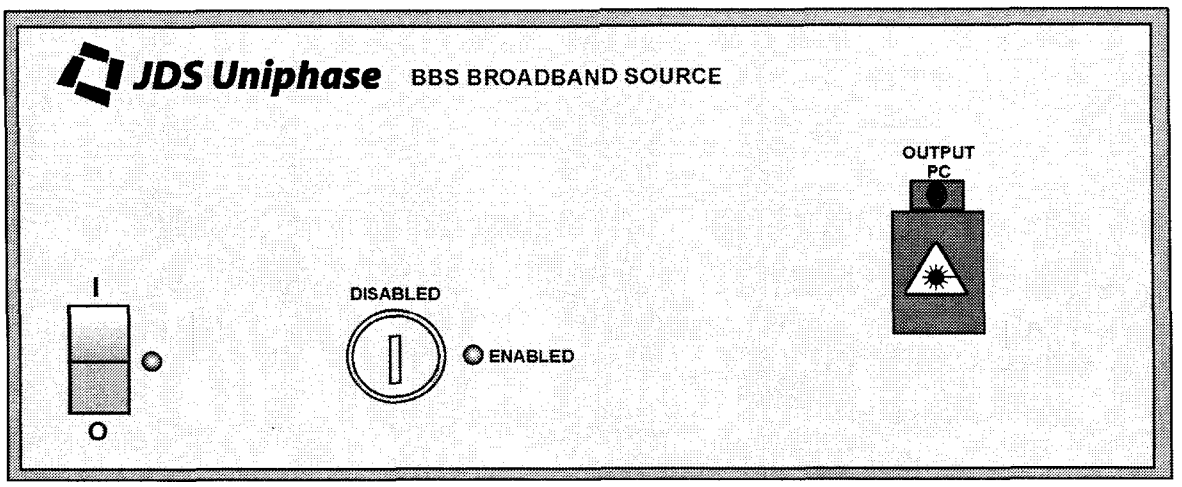


Figure 3: Front of Unit

Table 5: Operating Controls and LEDs

Control or LED	Description
I/O	Power on (**I**) off (**O**) switch.
I/O LED indicator	Power-on LED--an illuminated green LED indicates power is on
Enabled/Disabled key switch	When Enabled, turns on current supply to laser diode. When Disabled, turns off the current supply to laser diode.
Enabled/Disabled LED indicator	Power-on laser LED--an illuminated green LED indicates laser diode is enabled
Output	Provides the amplified output signal from the source to the device under test (DUT)

Rear Panel

The back of the unit is shown in Figure 4 and described in Table 6.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

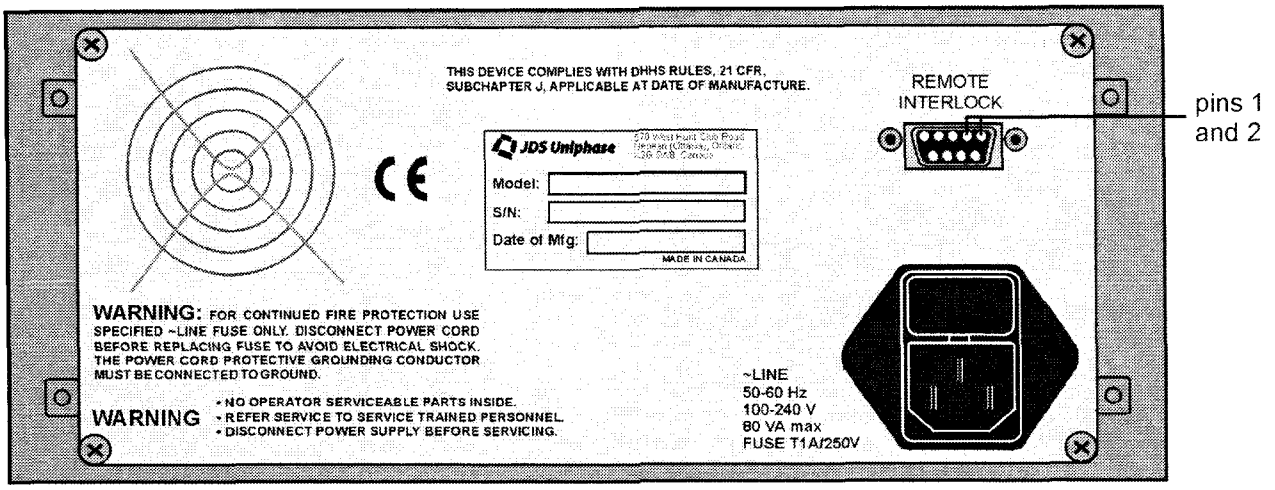


Figure 4: Back of Amplifier

Table 6: Rear Panel Details

Feature	Description
AC line connector	100 to 240 V AC, 50 to 60 Hz line cord interconnection
Remote Interlock	Pins 1 and 2 of the remote interlock connector must be interconnected to enable operation of the broadband source

Connecting the Remote Interlock

Before the BBS unit can be operated, the remote interlock must be connected. The remote interlock allows a connection for a remote on/off switch.

To connect the remote interlock:

1. Do this remotely with an electrical relay circuit or locally by utilizing the electrical connector supplied with the instrument, interconnecting pins 1 and 2 of the connector at the back of the unit.

Using the Broadband Source



Warning

Use of protective eyewear is recommended.

Use of the BBS unit entails its key switch and connections:

1. Ensure that the unit is turned off (**O**) and that the key switch on the front panel is set to the Disabled position.

2. Raise the Output optical connector port protective safety cover to expose the output connector and remove the protective optical connector cap.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3. Connect the DUT to the Output connector on the front panel via a suitable connectorized optical fiber (Figure 5). Ensure that APC connectors, if used, are mated to like connectors.

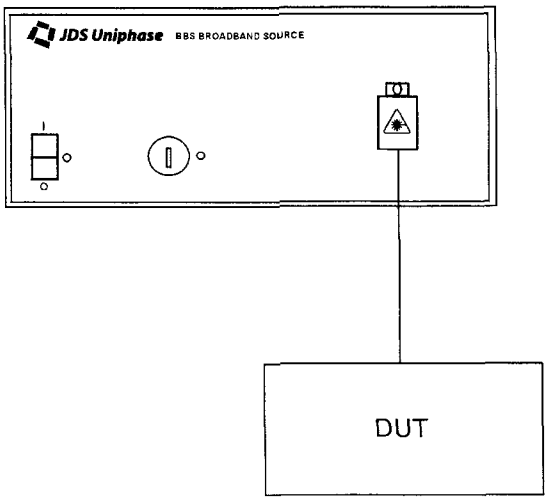


Figure 5: Setup

4. Turn the power switch on (**I**) and turn the key switch to the Enabled position. The Enabled LED lights and the laser starts emitting after approximately 3 s. This delay is a safety feature that enables the user to turn off the unit quickly in an emergency situation during start-up. With the unit operating, there are no user adjustments.

5. To turn off the amplifier, set the key switch to the Disabled position or turn the power switch off (**O**).

	**Caution** After turning off the unit, wait at least 30 seconds before powering it up again. Avoid switching off the unit before it is fully initialized.

Checking Calibration

The unit does not require routine calibration. It is recommended that a yearly spectral plot be produced and compared with the spectrum supplied at time of purchase. Address any variation of more than ±5% of optical specifications following maintenance instructions (next section).

Maintaining the Unit

Before every optical connector mating, thoroughly clean the connector end with a lint-free tissue and alcohol (see the **Cleaning Connectors** section).

When the unit is used in a high capacity environment, such as a manufacturing or quality assurance department, ensure that the front panel bulkhead optical connector is cleaned daily with compressed "clean air":

1. Carefully remove the optical connector protective cap and gently blow compressed air into the units bulkhead connector.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Customized Features and Test Data

There are two attachments:

- Inspection report
- Optical spectrum

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP