

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Keithley 707A* at our website: ***Click HERE***

KEITHLEY

MODEL 707
SWITCHING MATRIX

QUICK REFERENCE GUIDE

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

INTRODUCTION

This quick reference guide contains descriptions of various features and information concerning the operation of the Model 707. Also included are programming examples using various controllers.

©1988, Keithley Instruments, Inc.
Instruments Division
Cleveland, Ohio, U.S.A.
Document Number: 707-903-01 Rev. A

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

Asyst is a registered trademark of Asyst Software Technologies.

Hewlett-Packard is a registered trademark of Hewlett-Packard Company.

IBM and AT are registered trademarks and PC/XT is a trademark of International Business Machines, Inc.

PC< >488 is a registered trademark of Capital Equipment Corporation.

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

TABLE OF CONTENTS

SAFETY PRECAUTIONS 2
FRONT PANEL FAMILIARIZATION 3
DISPLAY MESSAGES 18
REAR PANEL FAMILIARIZATION 20
INSTALLING AND REMOVING CARDS 25
MASTER/SLAVE SYSTEMS 27
BASIC SWITCHING OPERATION 30
Selecting Make/Break and Break/Make Rows 31
Modifying a Relay Setup 31
Storing Setup and Sending to Relays 32
IEEE-488 PROGRAMMING 35
Device-Dependent Commands 35
Data Formats 40
Hit Key Commands 44
SRQ Mask and Serial Poll Byte 45
Status Words 46
PROGRAMS 52
IBM PC/XT/AT with CEC PC< >488 52
IBM PC/XT/AT with CEC PC< >488 and ASYST . 54
HP Model 9000 Series 200/300 57

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

SAFETY PRECAUTIONS

1. Exercise extreme caution when a shock hazard is present at the test circuit. User-supplied lethal voltages may be present on the matrix card connector jacks. The American National Standards Institute (ANSI) states that a shock hazard exists when voltage levels greater than 30V RMS or 42.4V peak are present. A good safety practice is to expect that hazardous voltage is present in any unknown circuit before measuring.

2. Inspect the connecting cables and test leads for possible wear, cracks, or breaks before each use.

3. For maximum safety, do not touch the test cables or any instruments while power is applied to the circuit under test. Turn off the power and discharge any capacitors before connecting or disconnecting cables from the matrix card.


4. Do not touch any object which could provide a current path to the common side of the circuit under test or power line (earth) ground. Always make measurements with dry hands while standing on a dry, insulated surface capable of withstanding the voltage being measured.

5. Do not exceed the maximum allowable input of the matrix cards, as defined in the specifications and operation sections of their manual.

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

FRONT PANEL FAMILIARIZATION


POWER

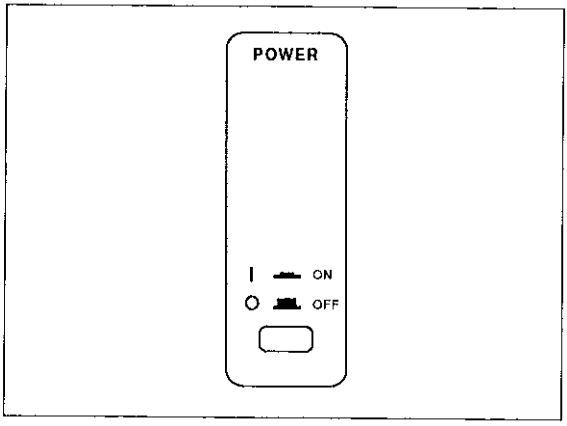

AC power switch turns the unit on or off.

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

CROSSPOINT DISPLAY GROUP

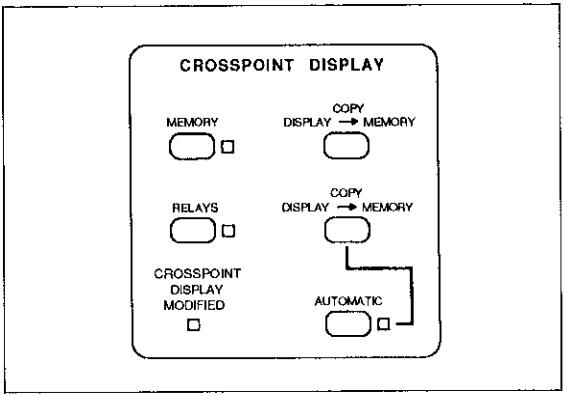

MEMORY—Displays a stored relay setup (from location shown in MEMORY STEP field) on the crosspoint display and lights the MEMORY indicator.

RELAYS—Displays the current relay setup on the crosspoint display and lights the RELAYS indicator.

CROSSPOINT DISPLAY MODIFIED—Lights when changes are made to the crosspoint display (by front panel keys or light pen), making it different from the original configuration.


COPY DISPLAY→MEMORY—Copies the displayed crosspoint configuration to the location shown in the MEMORY STEP field.

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

COPY DISPLAY→RELAYS—Copies the displayed crosspoint configuration to the relays.

AUTOMATIC (COPY DISPLAY→RELAYS)—When this LED is lit, any change to the crosspoint display is sent to the relays at the same time. The pushbutton toggles the LED on and off. (To affect change in memory, display must be copied to memory.)

SCROLL GROUP

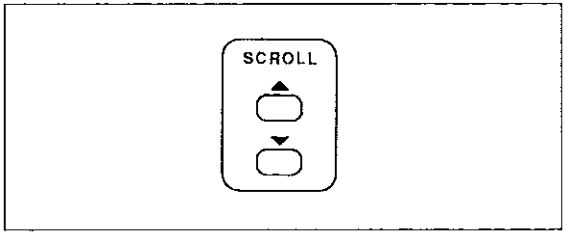


SCROLL ▲—If MEMORY indicator is lit, increments MEMORY STEP field and displays setup on crosspoint LEDs. If RELAYS indicator is lit, increments RELAY STEP field, displays setup on crosspoint LEDs, and sends setup to relays. Also used for scrolling up through a list of multiple choice parameters.

SCROLL ▼—Same actions as the SCROLL ▲ key except that it decrements and scrolls down.

chnology Group - Quality Instrumentation ..5Guaranteed | (888) 88-SOURCE | www


MEMORY GROUP

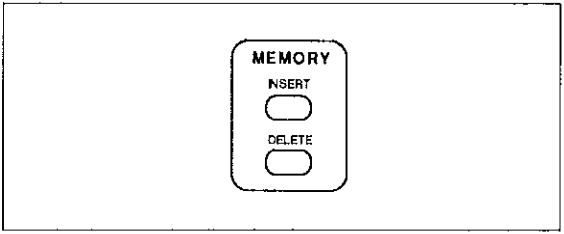

INSERT—Inserts a blank setup at the location shown in the MEMORY STEP Field. Moves higher stored setups up one memory location.

DELETE—Deletes the setup at the location shown in the MEMORY STEP field. Moves higher stored setups down one memory location.

MENU

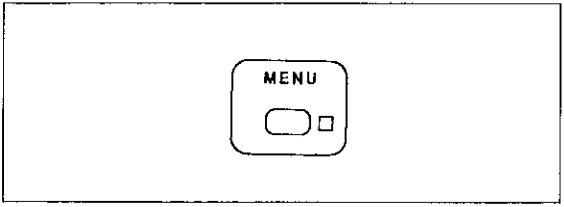


chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

Message	Item Description
IN iii OUT ooo	View digital input, program digital output.
EXT TRIG FALL EXT TRIG RISE	Select which edge of external trigger pulse triggers Model 707 (falling or rising).
MATRIX RDY LO MATRIX RDY HI	Select matrix ready output level (active LO or HI).
STANDALONE MASTER	Select stand-alone or master/ slave operation.
IEEE-488 nn	Program IEEE-488 bus address.
HWSETL nnn mS	View longest relay (hardware) settling time of cards in system.
n cccc	View slot number (n) and card label (cccc).
SELF TEST	Execute self test.
FACTORY INIT	Return to factory defaults. (All stored setups are cleared.)

Programmable parameters can be changed with the SCROLL or data entry keys and then pressing ENTER.

chnology Group - Quality Instrumentation ...Guaranteed | (888) 88-SOURCE | www

SWITCHING GROUP

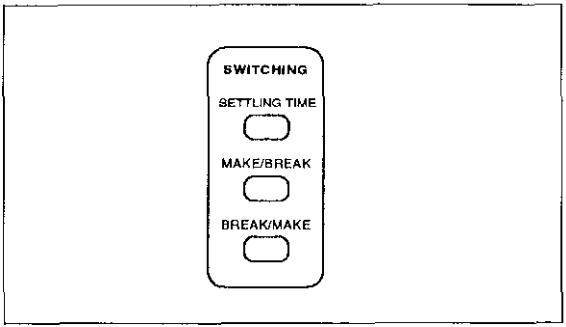


SETTLING TIME—Displays the current value of programmed settling time. (This delay begins after the relay settling time.) To change the value, enter between 0-65000msec and press ENTER.

MAKE/BREAK—Selects rows to operate as make/break (make-before-break) for all setups. First enter row designation (A-H), then press MAKE/BREAK to toggle the state for that row and immediately reprogram the Model 707 for the new operation.

BREAK/MAKE—Same action as MAKE/BREAK except that it selects break/make (break-before-make) rows. (Selecting a row for break/make de-selects it for make/break and vice versa.)


chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

LOCAL

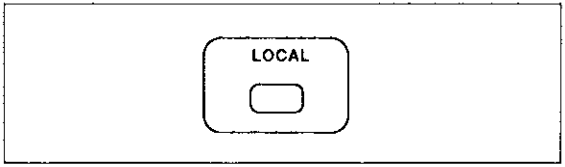

When in remote (REMOTE on), return the Model 707 to local mode (REMOTE off). It restores operation of other front panel controls unless LLO (Local Lockout) is in effect.

TRIGGER GROUP

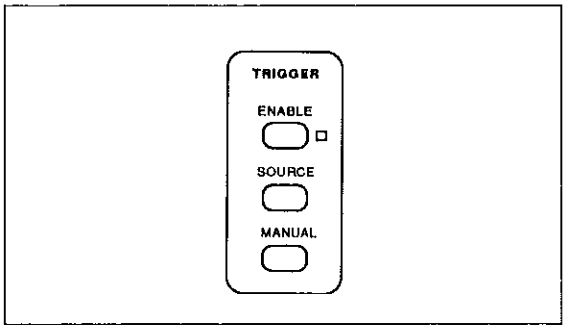

ENABLE—Toggles between triggers enabled and triggers disabled. When triggers are enabled, the LED is lit.


chnology Group - Quality Instrumentation ...Guaranteed | (888) 88-SOURCE | www

SOURCE—Displays current trigger source. Use SCROLL keys to display sources, then press ENTER to select the desired source:

TRIG ON TALK	— IEEE-488 talk command
TRIG ON GET	— IEEE-488 GET command
TRIG ON X	— IEEE-488 X command
TRIG ON EXT	— External trigger pulse (rear panel input)
TRIG ON KEY	—Front panel MANUAL key only

MANUAL—Generates a trigger from front panel if triggers are enabled (no matter which trigger source is selected). If the trigger source is TRIG ON KEY, only the MANUAL key generates a trigger.

DATA ENTRY

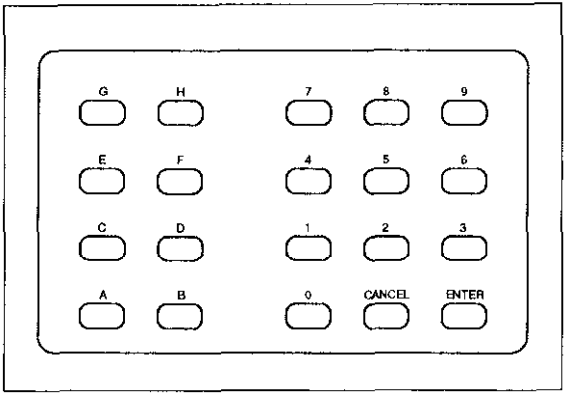


chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

A-H, 0-9—These keys are for entering row/column addresses and setup locations, selecting make/break and break/make rows, and entering various numeric values.

CANCEL—If the value in the alphanumeric display has been modified, this key restores the current parameter value. If the value in the alphanumeric display has not been modified, this key returns the Model 707 to the previous display. CANCEL also exits from menu mode if no changes have been made.

ENTER—If the value in the alphanumeric display has been modified, pressing this key stores the parameter value. Also invokes immediate action items from the menu and exits menu mode (except when digital I/O is displayed).


RESET

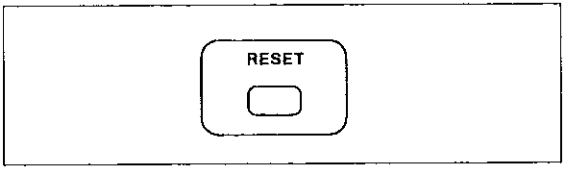

Performs the same functions as cycling power (all relays are opened, triggers are disabled, RELAY STEP to 000, MEMORY STEP to 001, etc.), except powerup self-checking and master/slave loop initialization.

chnology Group - Quality Instrumentation ...Guaranteed | (888) 88-SOURCE | www

CLEAR, OPEN, CLOSE

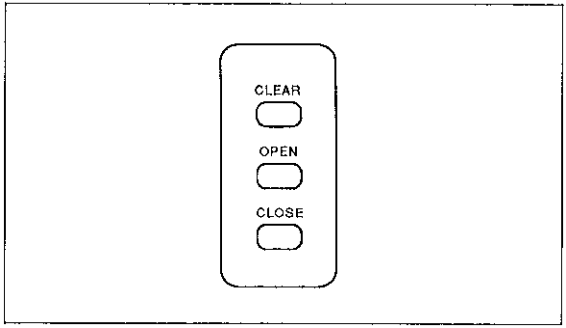


CLEAR—Turns off all crosspoint display LEDs. If the AUTOMATIC (COPY DISPLAY→RELAYS) indicator is lit, all relays are opened immediately.

OPEN—Turns off crosspoint LED of row/column shown on alphanumeric display. If the AUTOMATIC (COPY DISPLAY→RELAYS) indicator is lit, the corresponding relay opens immediately.

CLOSE—Same action as OPEN key except that it turns on the crosspoint LED and relay.

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

ALPHANUMERIC DISPLAY

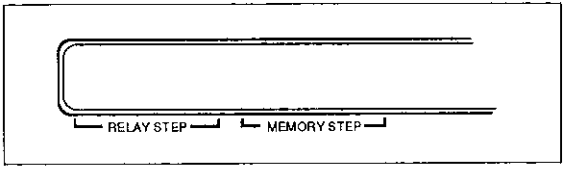


A 14-character display that can show:

- Error messages.
- Menu item selections.
- Last setup sent from memory to the relays (RELAY STEP field).
- Last setup recalled from memory to the crosspoint display (MEMORY STEP field).
- Trigger source.
- Programmed settling time.
- Alphanumeric key presses (row/column addresses, setup locations).

chnology Group - Quality Instrumentation ..Guaranteed | (888) 88-SOURCE | www


IEEE-488 STATUS INDICATORS

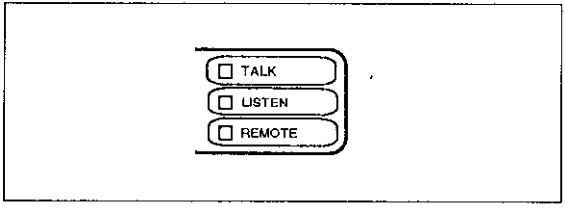

These three LED indicators apply to instrument operation over the IEEE-488 bus. The TALK and LISTEN indicators show when the unit has been addressed to talk or listen. REMOTE turns on to show when the unit is in the IEEE-488 remote state.

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www


CROSSPOINT DISPLAY LEDs

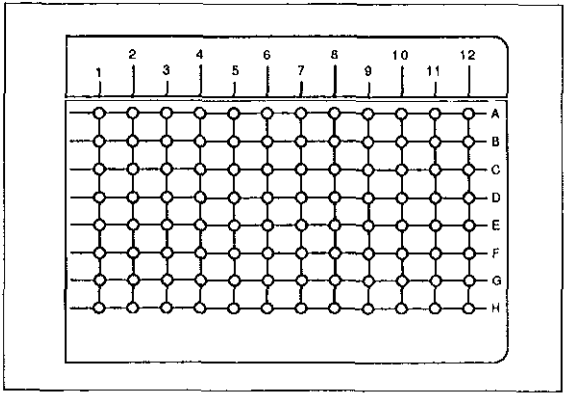

Show open and closed crosspoints of the current relay setup, a stored relay setup, or an edited relay setup. Each LED block of 8 rows by 12 columns shows on/off states of one card. States can be changed by front panel keys, triggers, or optional light pen. Crosspoint configurations can be stored in memory or sent to relays.

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.

MAKE/BREAK and BREAK/MAKE LEDs

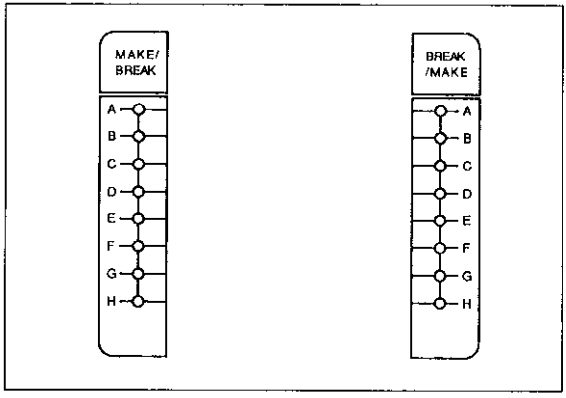


MAKE/BREAK ROW LEDs—Shows which rows are selected for make/break operation. The LEDs can be turned on or off by the MAKE/BREAK, BREAK/MAKE keys or an optional light pen.

BREAK/MAKE ROW LEDs—Same function as MAKE/BREAK row LEDs except for showing which rows are selected for break/make operation. Note that selecting a row for break/make de-selects it for make/break and vice versa.

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

LIGHT PEN

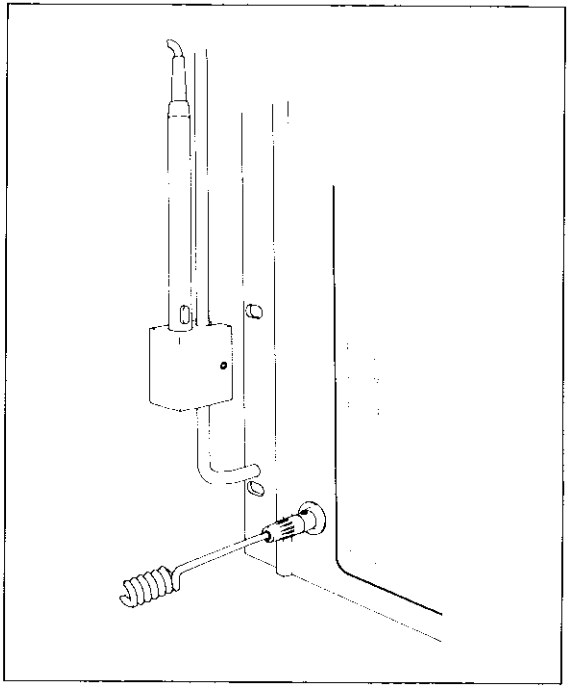

An optional input device for toggling the on/off state of the Crosspoint Display LEDs, MAKE/BREAK row LEDs, and BREAK/MAKE row LEDs. One light pen is used to control the LEDs of up to five Model 707 mainframes.

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

DISPLAY MESSAGES

Table 1 lists display messages not previously listed under menu operations or trigger sources.

Table 1. Additional Messages

Message	Description
CARD ID ERROR*	Checksum test failed on one or more matrix cards.
IDDC	Invalid device-dependent command.
IDDCO	Invalid device-dependent command option.
INVALID INPUT	Invalid crosspoint address, setup location, make/break or break/make row, or parameter out of range.
LIGHT PEN????	Light pen button pressed when pen was not pointed at crosspoint LED or make/break or break/make LED.
M/S ERROR*	Error in master/slave communication loop (overrun, parity, framing, count imbalance, or time-out).
M/S LOOP DOWN	One or more units connected in master/slave loop are not powered up.
NOT IN REMOTE	"X" character received over IEEE-488 bus but Model 707 is not in remote.

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

Table 1. Additional Messages (Cont.)

Message	Description
NOT SETTLED	Additional trigger received before programmed settling time expired (trigger is processed).
RAM FAIL*	Self-test detected error in RAM.
ROM FAIL*	Self-test detected checksum error in ROM.
SETUP ERROR*	Self-test detected checksum error in stored setup.
TRIG OVERRUN	An additional trigger was received before the Model 707 asserts the READY signal.

*Message remains displayed until next operation.


chnology Group - Quality Instrumentation Guaranteed | (888) 88-SOURCE | www

REAR PANEL FAMILIARIZATION

CARD SLOTS

The Model 707 accepts up to six plug-in matrix cards (8 rows by 12 columns) per mainframe.

MASTER/SLAVE

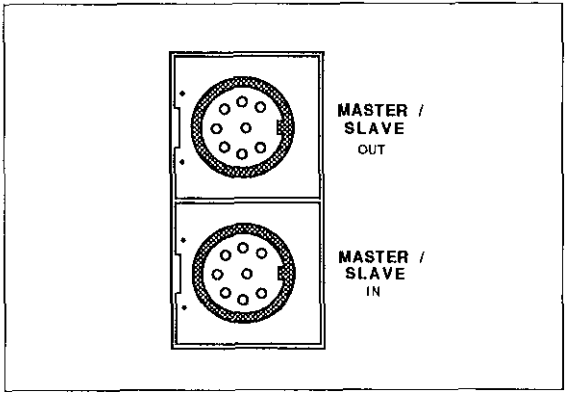


MASTER/SLAVE OUT—An 8-pin DIN connector for connecting a cable to the next mainframe in a master/slave daisy chain configuration.

MASTER/SLAVE IN—An 8-pin DIN connector for connecting a cable from the previous mainframe in a master/slave daisy chain configuration.

echnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.

BNC JACKS

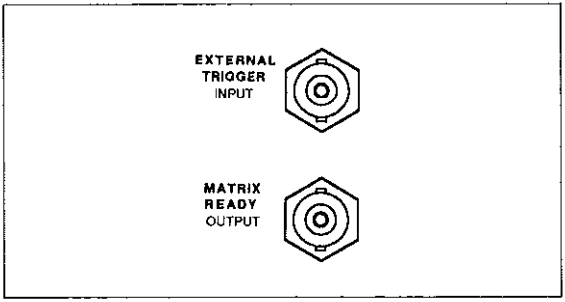


EXTERNAL TRIGGER INPUT—A BNC jack for applying a trigger pulse to change to the next relay setup, if triggers are enabled and TRIG ON EXT is selected as the source. Pulses must be TTL-compatible, negative- or positive-going (selected by a menu item), with a duration greater than 600nsec.

MATRIX READY OUTPUT—A BNC jack providing a TTL-compatible, high- or low-true level (selected by a menu item). It goes false when relays are switched and goes true after the sum of the relay settling time and the programmed settling time.


chnology Group - Quality Instrumentation Guaranteed | (888) 88-SOURCE | www

RELAY TEST

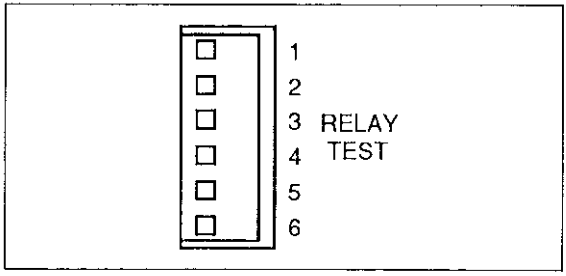

A 6-pin quick-disconnect terminal block with logic ground and four logic inputs for testing crosspoint relay closures. Wiring between this terminal block and rows A and B of any card in the group of cards to be tested is necessary for the test. Test connections are detailed in the card manuals.

DIGITAL I/O

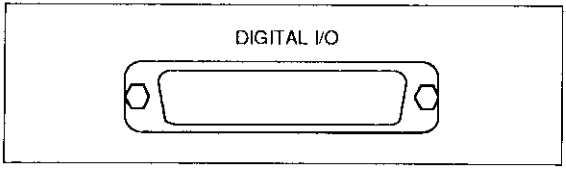


A DB-25 connector for the TTL-compatible digital I/O with data lines for eight inputs and eight outputs. It also con-

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www


tains control lines for handshaking (Input Latch and Output Strobe). Input lines are viewed and output lines are programmed through a menu item.

IEEE-488 INTERFACE

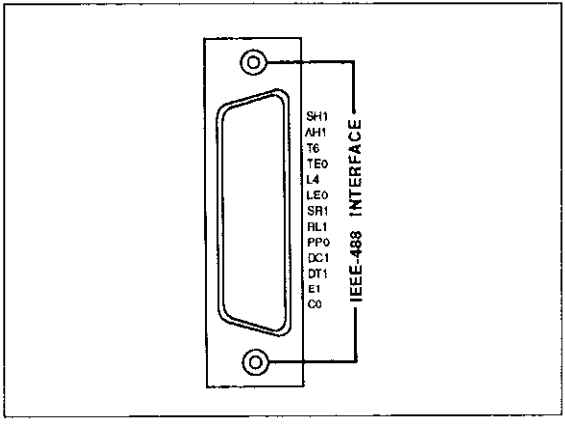

This connector interfaces the Model 707 to the IEEE-488 bus. IEEE-488 interface function codes are marked adjacent to the connector.

AC POWER

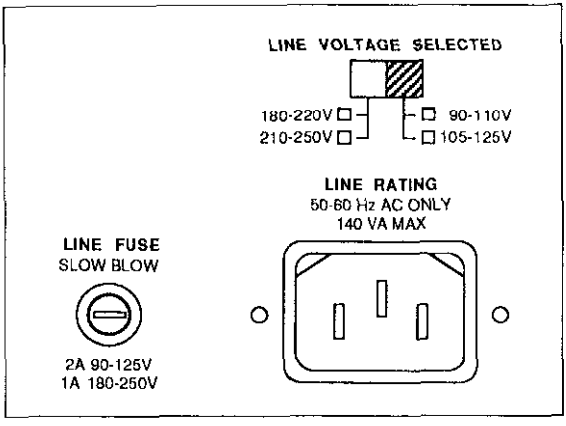

LINE VOLTAGE SELECTED—The position of this switch determines the operating voltage range of the instrument: 90-110V, 105-125V, or 180-220V, 210-250V.

AC RECEPTACLE—Power is applied through the supplied power cord to the 3-terminal AC receptacle.

LINE FUSE—The line fuse provides protection for the AC power line input. The fuse rating must match the line voltage setting.

echnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.

INSTALLING AND REMOVING CARDS

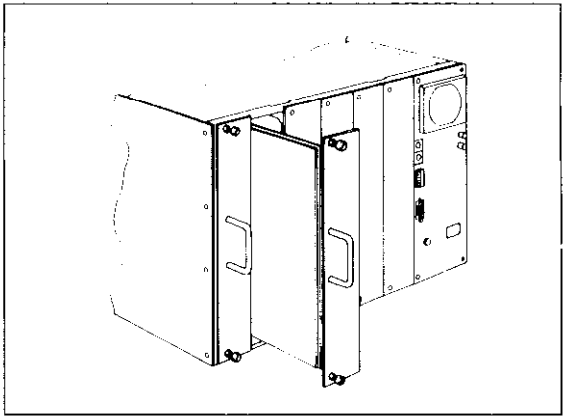


Figure 1. Installing a Card

WARNING
Turn off mainframe power and disconnect the line cord before installing or removing cards.

Install a card in the Model 707 as follows, using Figure 1 as a guide. Instructions specific to each card can be found in the appropriate card manual.

chnology Group - Quality Instrumentation... Guaranteed | (888) 88-SOURCE | www

CAUTION

Do not touch the card surfaces, connectors, or components to avoid contamination that could degrade card performance.

1. Ensure that the access door on top of the mainframe is fully closed and locked down. (The bottom side of the access door has card guides.)
2. Remove the slot cover from the desired slot.
3. With one hand grasping the card's handle, and the other supporting its weight, line up the card with the card guides in the slot. Ensure that the component side is facing the fan of the mainframe.
4. Slide the card into the mainframe until it is fully seated in the backplane connectors. Finger-tighten the spring-loaded mounting screws at the back of the card to lock it in place.

WARNING

The mounting screws must be secured to ensure a proper chassis ground connection between the card and the mainframe. Failure to properly secure this ground connection may result in personal injury or death due to electric shock.

5. To remove a matrix card, first turn off the mainframe and disconnect the line cord. Ensure no voltage is applied from the user's circuit. Remove any internal cabling between cards through the unit's access door. Loosen the spring-loaded mounting screws and pull out the card by its handle.

chnology Group - Quality Instrumentation... Guaranteed | (888) 88-SOURCE | www

MASTER/SLAVE SYSTEMS

A method of expanding a matrix with multiple mainframes is to connect up to five units in a master/slave configuration. This is done by connecting the rows of like cards in separate units and by connecting the units in a closed loop of DIN cables for communication and control. A master/slave system configuration appears as one unit with expanded card capacity. That is, only the master unit is addressed by the IEEE-488 bus controller and controlled from the front panel.

A master/slave configuration extends matrix rows yielding a long, narrow matrix. Figure 2 shows the connections between two units having Model 7071 cards. With five units, the maximum matrix size is 8 rows by 360 columns. Table 2 shows the column assignments for the maximum configuration.

If the mainframes of a master/slave configuration contain different card models, group like cards as much as possible. This will reduce the need to extend the analog buses with external cables.

chnology Group - Quality Instrumentation... Guaranteed | (888) 88-SOURCE | www.

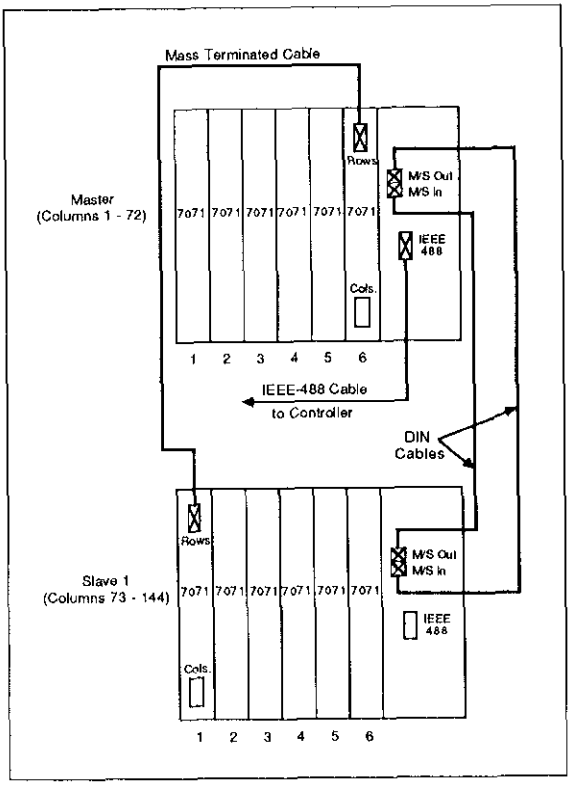


Figure 2. Example of Master/Slave Interconnect Cables

echnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.

Table 2. Master/Slave Columns

Unit	Slot	Columns (1-12)
1	1	1-12
	2	13-24
Master	3	25-36
	4	37-48
	5	49-60
	6	61-72
2	1	73-84
	2	85-96
Slave 1	3	97-108
	4	109-120
	5	121-132
	6	133-144
3	1	145-156
	2	157-168
Slave 2	3	169-180
	4	181-192
	5	193-204
	6	205-216
4	1	217-228
	2	229-240
Slave 3	3	241-252
	4	253-264
	5	265-276
	6	277-288
5	1	289-300
	2	301-312
Slave 4	3	313-324
	4	325-336
	5	337-348
	6	349-360

chnology Group - Quality Instrumentation... Guaranteed | (888) 88-SOURCE | www

BASIC SWITCHING OPERATION

The following paragraphs will take you through a simple, general, step-by-step procedure to edit a matrix setup, store it in memory, and send the setup to the relays. Although the steps are described with front panel operations, the procedure can be performed over the IEEE-488 bus.

Figure 3 shows the setup data paths for these steps.

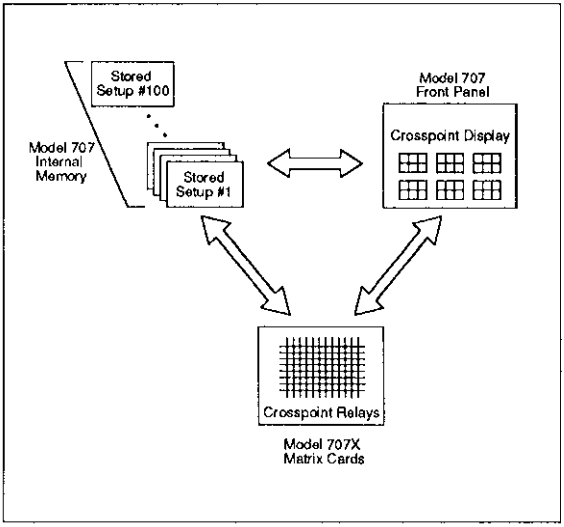


Figure 3. Setup Data Transfers

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

Selecting Make/Break and Break/Make Rows

Select make-before-break, break-before-make, or don't care operation for the rows. The selections will be in effect for all relay switching, even if a stored setup is not used. (As a general rule, use make/break operation for current sources and break/make for voltage sources.)

Use the data entry keys to select a row, then press MAKE/BREAK or BREAK/MAKE to toggle the state. (Selecting one state for a row de-selects it for the other.) This operation can also be performed with the light pen by using it to turn on/off the MAKE/BREAK and BREAK/MAKE LEDs.

Modifying a Relay Setup

Step 1: Select a Stored Setup

If you want to modify setup #1, just press the MEMORY key. The MEMORY indicator light will light. To select another setup (up to location 100), use the numeric data entry keys (leading zeros are not necessary), then press the MEMORY key.

Step 2: Modify the Displayed Setup

Use the data entry keys to select a crosspoint address (A1 through H72), then press the OPEN or CLOSE key. Keystrokes will be shown on the alphanumeric display and the CROSSPOINT DISPLAY MODIFIED indicator will light.

chnology Group - Quality Instrumentation Guaranteed | (888) 88-SOURCE | www

If you have the optional light pen, toggle the state of a crosspoint LED by holding the light pen perpendicular to and touching the front panel overlay and pressing the light pen button.

Continue editing with the front panel key or light pen until the crosspoint display shows the desired configuration.

Storing Setup and Sending to Relays

Step 1: Storing Setup in Memory

To store the modified setup at the location shown in the MEMORY STEP field, just press the COPY DISPLAY→MEMORY KEY. This action overwrites the old setup data at that location with the newly modified setup.

To select a different memory location, key in a valid location number, then press the COPY DISPLAY→MEMORY key. The MEMORY STEP field is set to the new location.

Step 2A: Sending Setup to Relays

To make the newly modified setup the current relay setup, just press the COPY DISPLAY→RELAYS key. The relay states will be changed to reflect the modified setup data. If the MEMORY LED is lit, the RELAY STEP field will be set equal to the MEMORY STEP field. In effect, this copies a setup from memory to the relays.

chnology Group - Quality Instrumentation... Guaranteed | (888) 88-SOURCE | www

Step 2B: Triggering Setup to Relays

If you modified setup #1 and restored it to memory at the same location, a single trigger will copy the setup to the relays. Do this by pressing the trigger SOURCE key, scrolling to the "TRIG ON KEY" display and pressing ENTER. Then press the trigger ENABLE key. Pressing the trigger MANUAL key will copy setup #1 to the relays and set the RELAY STEP field to 001.

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

IEEE-488 PROGRAMMING

DEVICE-DEPENDENT COMMANDS

External Trigger	
A0	Falling edge triggers Model 707
A1	Rising edge triggers Model 707

Matrix Ready	
B0	Negative true Matrix Ready output
B1	Positive true Matrix Ready output

Close Crosspoint	
Crc(,rc)...(,rc)	Close crosspoints of setup indicated by edit pointer (rows A-H, cols. 1-360)

Display	
Dccccccccccccc	Display ASCII characters (14 max.)
DX	Return alphanumeric display to normal

chnology Group - Quality Instrumentation Guaranteed | (888) 88-SOURCE | www

Edit Pointer	
E0	Point to current relay setup
En	Point to stored relay setup (1-100)

Enable/Disable Triggers	
F0	Disable triggers
F1	Enable triggers

Data Format	
G0	Full output, all data in one talk
G1	Full output, one mainframe row per talk
G2 or G3	Inspect output, all data in one talk
G4	Condensed output, all data in one talk
G5	Condensed output, one mainframe per talk
G6	Binary output, all data in one talk
G7	Binary output, one mainframe per talk

Hit Key	
Hn	Emulate front panel key press (1-41)

chnology Group - Quality Instrumentation... Guaranteed | (888) 88-SOURCE | www

Insert Blank Setup	
In	Insert blank setup in memory (1-100)

Self-test	
J0	Perform self-test

EOI and Hold-off	
K0	Send EOI, hold-off on X until Ready
K1	No EOI, hold-off on X until Ready
K2	Send EOI, do not hold-off on X
K3	No EOI, do not hold-off on X
K4	Send EOI, hold-off on X until Matrix Ready
K5	No EOI, hold-off on X until Matrix Ready

Download Setups	
Lbbb...X	Download setups from controller to Model 707

SRQ	
M0	SRQ disabled
M1	not used
M2	Front panel key press
M4	Digital I/O interrupt
M8	Matrix Ready
M16	Ready for trigger
M32	Error
M128	not used

chnology Group - Quality Instrumentation... Guaranteed | (888) 88-SOURCE | www

Open Crosspoint	
Nrc(,rc)...(,rc)	Open crosspoints of setup indicated by edit pointer (rows A-H, cols. 1-360)

Digital Output	
Onnn	Set states of digital output lines (000-255)

Clear Crosspoints	
P0	Open all crosspoint relays
Pn	Clear all crosspoints of stored setup (1-100)

Delete Setup	
Qn	Delete setup from memory (1-100)

Restore Defaults	
R0	Restore factory defaults

Programmed Settling Time	
Sn	Program settling time in msec (0-65000)

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

Trigger	
T0 or T1	Trigger on talk
T2 or T3	Trigger on GET
T4 or T5	Trigger on X
T6 or T7	Trigger on External Trigger pulse
T8 or T9	Trigger on front panel MANUAL key only

Status	
U0	Send machine status word
U1	Send error status word
U2,n	Output setup "n" (0-100) with current G format
U3	Send RELAY STEP pointer
U4	Send number of slaves
U5,u	Send model number of each card in unit "u" (0-4)
U6	Send relay settling time
U7	Send digital input of unit
U8	Send RELAY TEST input

Make/Break	
Vabcdefgh	Select rows for make/break operation (00000000 - 11111111)

Break/Make	
Wabcdefgh	Select rows for break/make operation (00000000 - 11111111)

chnology Group - Quality Instrumentation Guaranteed | (888) 88-SOURCE | www

Execute	
X	Execute commands

Terminator	
Y0	<CR><LF>
Y1	<LF><CR>
Y2	<CR>
Y3	<LF>

Copy Setup	
Z0,n	Copy current relay setup to memory location "n" (1-100)
Zn,0	Copy setup from memory location "n" (1-100) to relays
Zm,n	Copy setup from location "m" (0-100) to location "n" (0-100)

DATA FORMATS

When uploading setup data to the controller, the data will be in one of the formats that follow. The example data shown is for setup #3 of a stand-alone unit with crosspoints A1, A2, B19, B20, C27, C28, D37, D38, F61, and F62 being closed.


chnology Group - Quality Instrumentation... Guaranteed | (888) 88-SOURCE | www

G0 and G1 Full Output

echnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.a

A001,A002,B019,B020,C027,C028,D037,D038,F061,F062


G2 and G3 Inspect Output

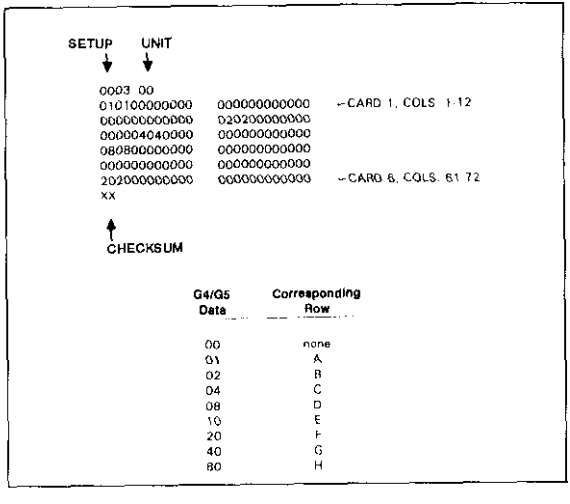

G4/G5 Data	Corresponding Row
00	none
01	A
02	B
04	C
08	D
10	E
20	F
40	G
80	H

G4 and G5 Condensed Output

echnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.a

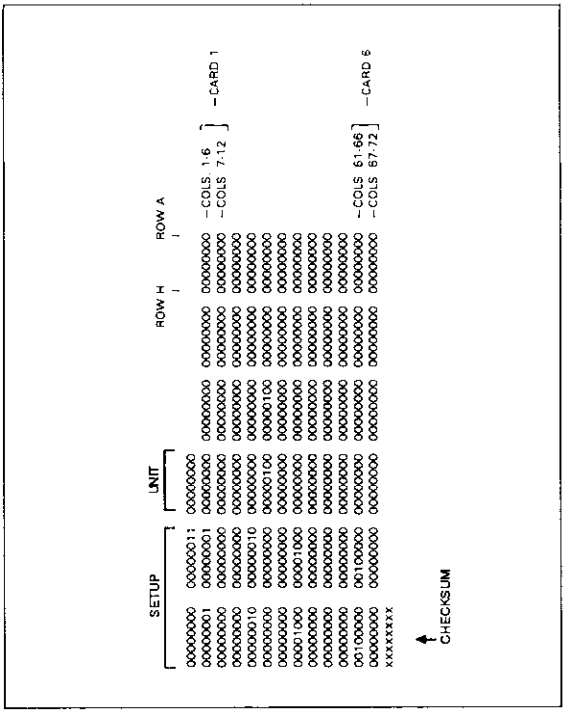

G6 and G7 Binary Output

chnology Group - Quality Instrumentation Guaranteed | (888) 88-SOURCE | www

HIT KEY COMMANDS


Table 3 lists hit key commands sent over the IEEE-488 bus to emulate front panel key presses.

Table 3. Hit Keys

Command	Key	Command	Key
H1	MEMORY	H22	H
H2	RELAYS	H23	F
H3	COPY DISPLAY→MEMORY	H24	D
H4	COPY DISPLAY→RELAYS	H25	B
H5	AUTOMATIC	H26	7
H6	SCROLL ▲	H27	4
H7	SCROLL ▼	H28	1
H8	INSERT	H29	0
H9	DELETE	H30	8
H10	MENU	H31	5
H11	SETTLING TIME	H32	2
H12	MAKE/BREAK	H33	CANCEL
H13	BREAK/MAKE	H34	9
H14	LOCAL	H35	6
H15	ENABLE	H36	3
H16	SOURCE	H37	ENTER
H17	MANUAL	H38	RESET
H18	G	H39	CLEAR
H19	E	H40	OPEN
H20	C	H41	CLOSE
H21	A		


chnology Group - Quality Instrumentation... Guaranteed | (888) 88-SOURCE | www

SRQ MASK AND SERIAL POLL BYTE

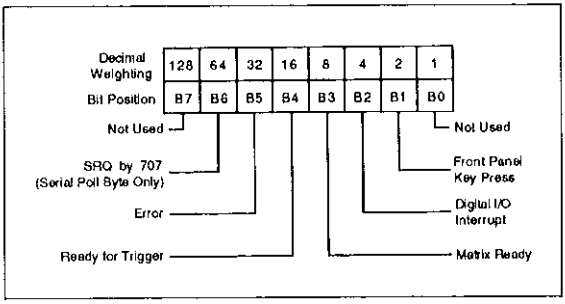


chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

STATUS WORDS

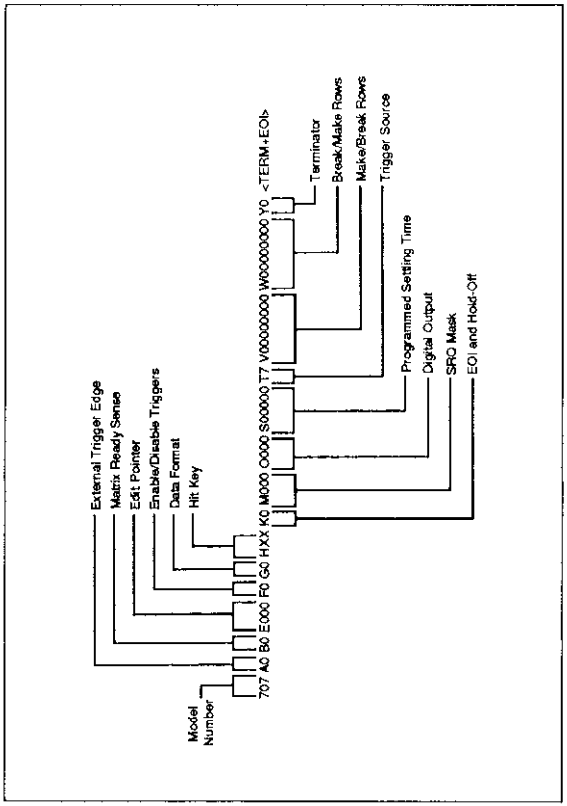


U0 Machine Status Word

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

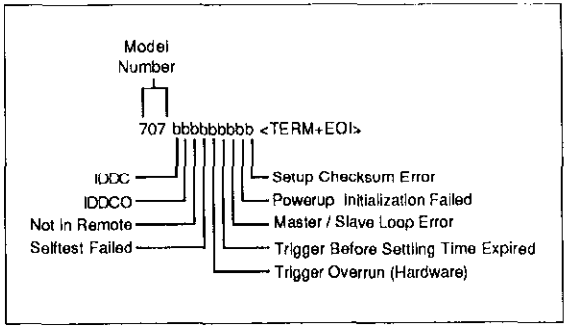


U1 Error Status Word

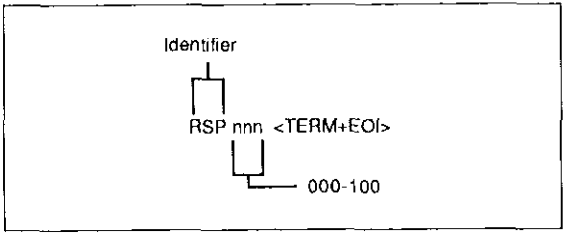


U3 Relay Step Pointer

chnology Group - Quality Instrumentation... Guaranteed | (888) 88-SOURCE | www.

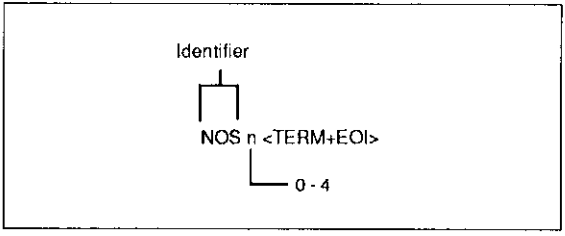


U4 Number of Slaves

chnology Group - Quality Instrumentation... Guaranteed | (888) 88-SOURCE | www

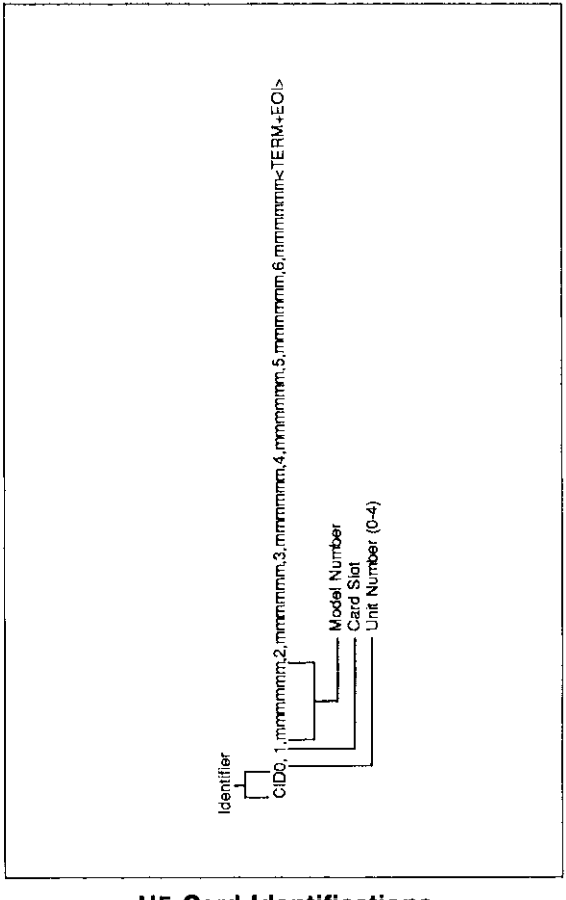


U5 Card Identifications

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

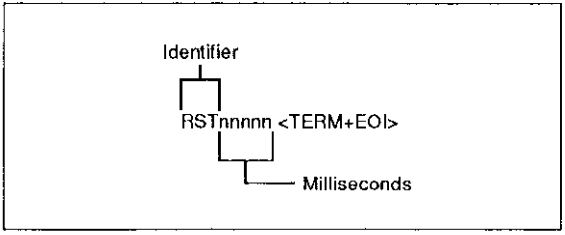


U6 Relay Settling Time

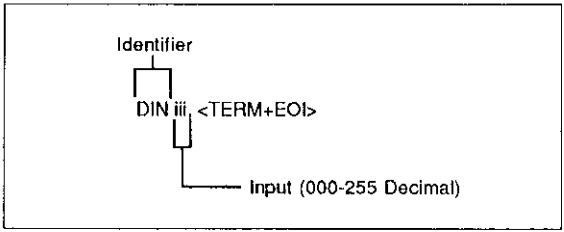

U7 Digital Input

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

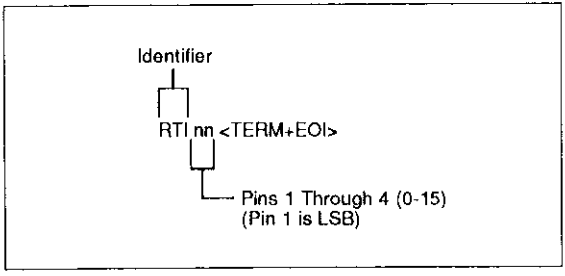

U8 Relay Test Input

chnology Group - Quality Instrumentation. Guaranteed | (888) 88-SOURCE | www

PROGRAMS

IBM PC/XT/AT with Capital Equipment Corporation PC< >488 Interface (Keithley PC-488-CEC)

The following program sends a command string from an IBM PC/XT/AT computer to the Model 707 and displays the response on the CRT. The computer must be equipped with a CEC interface card and DOS 2.0 (or later revision) operating system.

DIRECTIONS

1. Using the front panel menu feature, set the primary IEEE-488 address of the Model 707 to 18.
2. With the power off, connect the Model 707 to the IEEE-488 interface card installed in the IBM computer.
3. Type in BASICA on the computer keyboard to get into the IBM interpretive BASIC language.
4. Enter the lines below using the return key after each line.
5. Run the program and type in the desired command string at the ENTER COMMAND STRING? prompt. For example, to close crosspoint A1, type in CA1X and press the return key. (The Model 707 software revision, e.g. 707A01, will then appear on the computer display for device-dependent commands which have no response.)

   If the command "G2U2,0X" is typed in at the prompt, the response will be a display of the closed crosspoints of the current relay setup.

chnology Group - Quality Instrumentation... Guaranteed | (888) 88-SOURCE | www

PROGRAM	COMMENTS
10 DEF SEG=&HC400	' Memory address
20 INITIALIZE=0	' Offset address of routine
30 SEND=9:ENTER=21	' Routine addresses
40 MY.ADDRESS%=21	' Set PC< >488 address
50 INST.ADDRESS%=18	' Set 707 address
60 CONTROLLER%=0	' Set for system control
70 CALL INITIALIZE (MY. ADDRESS%, CONTROLLER%)	' Initialize system
80 LINE INPUT ''ENTER COMMAND STRING: ''; CMD$	' Prompt for string
90 CALL SEND (INST. ADDRESS%,CMD$, STATUS%)	' Send command string
100 RESPONSE$=SPACE$ (80)	' Make room for data
110 CALL ENTER (RE- SPONSE$,LENGTH%, INST.ADDRESS%, STATUS%)	' Get response from 707
120 PRINT RESPONSE$	' Display response
130 GOTO 80	' Repeat
140 END	

chnology Group - Quality Instrumentation Guaranteed | (888) 88-SOURCE | www

IBM PC/XT/AT with Capital Equipment Corporation PC< >488 Interface and ASYST Software

The ASYST program listed here sends a command string from an IBM PC/XT/AT computer to the Model 707 and displays the response on the CRT. The computer must be equipped with a CEC interface card and DOS 2.0 (or later revision) operating system.

The optional GPIB/IEEE-488 software module for the ASYST package is required. Hardware requirements for ASYST include: 640K RAM, math coprocessor, parallel port, and hard drive (recommended).

DIRECTIONS

1. Using the front panel menu key, set the primary IEEE-488 address of the Model 707 to 18.
2. With the power off, connect the Model 707 to the IEEE-488 interface card installed in the IBM computer.
3. Boot ASYST software from DOS. You will get an OK prompt.
4. Use the <F2> key to enter the Main Configuration Menu. In addition to the usual configuration requirements of ASYST, the GPIB must be configured.

   From the Overlay Configuration Menu, select overlays GPIB Master and Type 1 NEC GPIB Driver.

   From the GPIB Configuration Menu, select a bus number, board type (National GPIB-PC1 or GPIB-PC2), memory address (2B8), primary address (0), and interrupt line.

chnology Group - Quality Instrumentation... Guaranteed | (888) 88-SOURCE | www.

5. Save your changes and return to the OK prompt.
6. Use the command line editor (EDIT 707.DMO) to enter the following program. Save the program and exit the editor.
7. When prompted, load the program with the L key, or type LOAD 707.DMO from the OK prompt.
8. When the program loads properly, type MAIN from the OK prompt to start execution.
9. Type in the desired command string at the "Enter command string:" prompt. For example, to close crosspoint A1, type in CA1X and press the return key. (The Model 707 software revision, e.g. 707A01, will then appear on the computer display for device-dependent commands which have no response.)

   If the command "G2U2,0X" is typed in at the prompt, the response will be a display of the closed crosspoints of the current relay setup.
10. Type <Control-Break> to exit the program loop of 707.DMO and return to the OK prompt. The program-defined words can be removed from the ASYST dictionary by typing FORGET 707.

PROGRAM	COMMENTS
BUS.INIT	\ Initialize bus
SEND.INTERFACE.CLEAR	\ Take control of bus
REMOTE.ENABLE.ON	\ Allow remote operation
SYNCHRONOUS.GPIB	\ Make sure ASYST is in sync. mode
?GPIB.DEVICES	\ List controller parameters
18 GPIB.DEVICE 707	\ Set 707 address and name

chnology Group - Quality Instrumentation Guaranteed | (888) 88-SOURCE | www

```
  EOI.ON                    \ Enable end or identify
  EOS.ON                    \ Enable end of string
                              terminator
  10 EOS.CHARACTER          \ Use LF terminator
  1000 TIMEOUT              \ Set timeout of 1sec
?GPIB.DEVICE                \ List 707 parameters
100 STRING COMMAND          \ Allocate 100 bytes for
                              user input
100 STRING RESPONSE         \ Allocate 100 bytes for
                              707 response

: GET.INPUT                 \ Definition for user input
  CR ." Enter command       \ Prompt user
    string: "
  "INPUT COMMAND ":=        \ Get DDCs
;

: MAIN                      \ Definition for main
                              program
  BEGIN                     \ Start loop
  ME                        \ Make controller current
                              device
  GET.INPUT                 \ Get DDCs from user
  707                       \ Make 707 current
                              device
  COMMAND GPIB.WRITE        \ Send DDCs to 707
  RESPONSE GPIB.READ        \ Get response
  CR RESPONSE "TYPE         \ Display response
  AGAIN                     \ Return for more
                              commands
;
```


chnology Group - Quality Instrumentation... Guaranteed | (888) 88-SOURCE | www.

Hewlett-Packard Model 9000 Series 200/300

The following program sends a command string to the Model 707 from a Hewlett-Packard Model 9000 Series 200/300 computer and displays the response on the computer CRT. The computer must be equipped with HP BASIC 4.0.

DIRECTIONS

1. Using the front panel menu feature, set the primary IEEE-488 address of the Model 707 to 18.
2. With the power off, connect the Model 707 to the IEEE-488 interface card installed in the HP computer.
3. Enter the lines in the program below, using the ENTER/RETURN key after each line.
4. Press the RUN key and type in the desired command string at the COMMAND STRING prompt. For example, to close crosspoint A1, type in CA1X and press the ENTER/RETURN key. (The Model 707 software revision, e.g. 707A01, will then appear on the computer display for device-dependent commands which have no response.)

   If the command "G2U2,0X" is typed in at the prompt, the response will be a display of the closed crosspoints of the current relay setup.

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

PROGRAM	COMMENTS
10 DIM A$[50],B$[50]	
20 REMOTE 718	! Place 707 in remote.
30 LINPUT "COMMAND STRING: ",A$	! Prompt for and input command.
40 OUTPUT 718;A$	! Address 707 to listen, send string.
50 ENTER 718;B$	! Address 707 to talk, input response.
60 PRINT B$	! Display response string.
70 GOTO 30	! Repeat.
80 END	

chnology Group - Quality Instrumentation... Guaranteed | (888) 88-SOURCE | www

chnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www

KEITHLEY

Test Instrumentation Group
28775 Aurora Road / Cleveland, Ohio 44139

echnology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP