

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction


All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Visit our website - *Click HERE*

Installation Guide

Publication number E5363-92001
September 1997

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

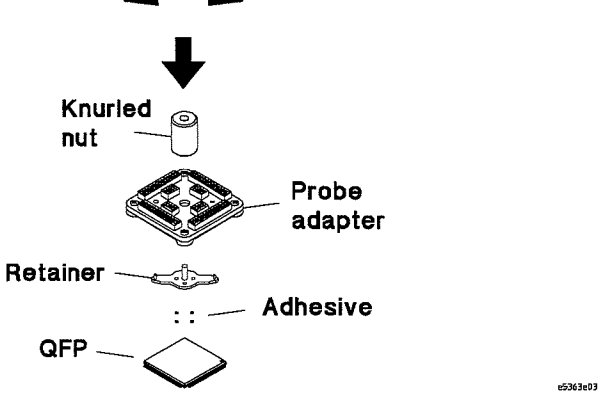

This Installation Guide explains how to use Hewlett-Packard's advanced probing system for 0.50 mm pitch Quad Flat Pack (QFP) surface-mounted integrated circuits. This probing system provides a quick and reliable connection from these devices to Hewlett-Packard oscilloscopes, logic analyzers, and emulators.

This information also explains how to use optional accessories that will enhance the adapter's use in particular probing situations. Drawings are included that instruct you in laying out printed circuit boards with the proper component spacing to allow correct use of the adapter.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

In This Book

1 Installing the probe adapter

2 Installing optional flexible adapters

3 Reference

This manual is organized in three chapters.

Chapter 1 contains dimensions of the probe adapter for laying out printed circuit boards and the procedure for installing the probe adapter onto your QFP.

Chapter 2 contains the instructions for installing optional flexible adapters.

Chapter 3 contains reference information such as pinout and cross-reference maps, replaceable parts list, retainer and adhesive removal.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1

This chapter includes the procedure for installing the probe adapter onto your QFP. The major steps are:


1 Prepare to attach the retainer to the QFP 1-3

2 Test the alignment before adhering the retainer 1-4

3 Adhere the retainer to your QFP 1-7

4 Install the probe adapter 1-10

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

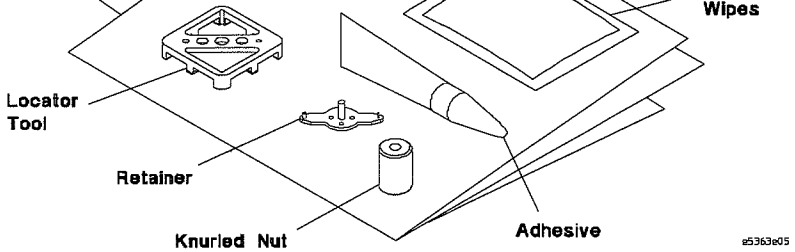

Electrical Characteristics

Operating Voltage	< 40 V (dc + Peak ac)
Operating Current	0.5 Amps Maximum
Insulation Resistance	> 100 MΩ

Model Parameters:

Capacitance between Contacts	0.5 pF (Typical)
Self-Inductance	10 nH (Typical)
Contact Resistance	< 0.25 Ω (Typical)
Operating Bandwidth	dc – 750 MHz (Typical)

Environmental Characteristics


Operating Temperature	0 °C to 55 °C
Maximum Operating Humidity	75% Relative Humidity

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Prepare to attach the retainer to the QFP

1 Check the area around the package to be probed. The minimum required clearance from the package and any components is shown in the illustration below. The probe will work within the parameters shown.

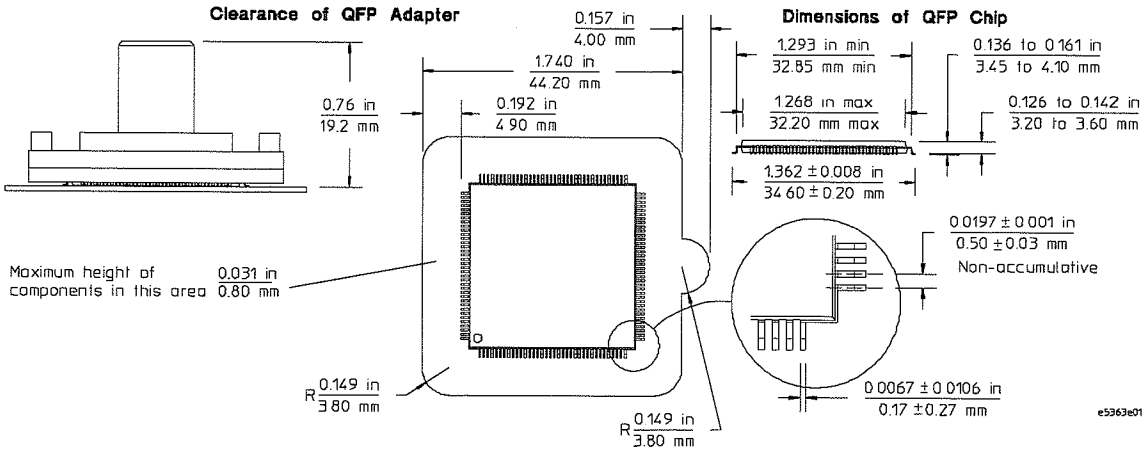


2 Assemble the locator and the retainer, using the knurled nut to hold them together.

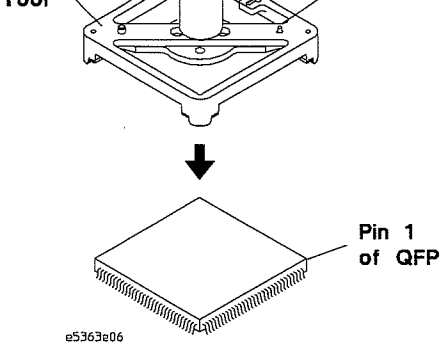

It is possible that the bump on the side of the probe adapter may interfere with components on your target system if the locator is mounted as described in this section. If so, then rotate the locator tool. Keep in mind as you proceed with the following steps that your pin 1 location will be different from the instructions in this manual.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


2 Place the assembled locator tool on the QFP, making sure that it aligns squarely. You will feel the teeth drop between the QFP legs when it is aligned.

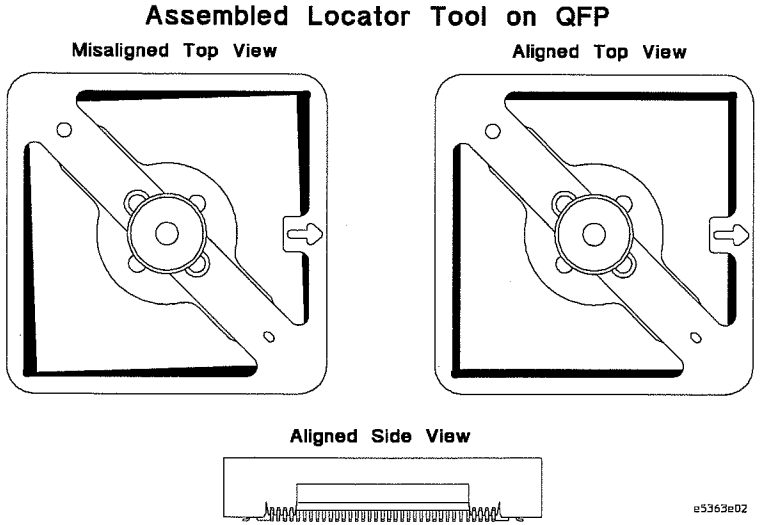

3 Press down on the middle of both sides of the locator tool.

If the tool is down far enough, it will not rock when pressed on the sides.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

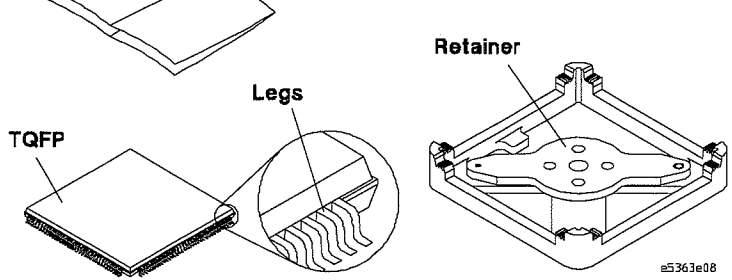

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Adhere the retainer to your QFP

CAUTION

You will use adhesive to attach a retainer to the top of the QFP. The retainer ensures precise alignment between the probe adapter and the device. Read the following steps to understand the process of applying adhesive before doing them.

CAUTION

Make sure you can control the amount of adhesive. Excess adhesive can cause problems, so it is better to use too little than too much. Follow the manufacturer's recommended temperature parameters for the adhesive.


WARNING

Read the Material Safety Data Sheet enclosed for handling precautions on the Loctite Prism 405 White Toughened Instant Adhesive or call Loctite Corporation at (203) 571-5100.


Cyanoacrylate adhesive is a very fast setting and strong adhesive. It bonds human tissue including skin in seconds. Experience has shown that accidents due to cyanoacrylates are handled best by passive, nonsurgical first aid. Treatment of specific types of accidents are given in the data sheet.

1 Apply four small drops of adhesive to the underneath side of the retainer as shown.



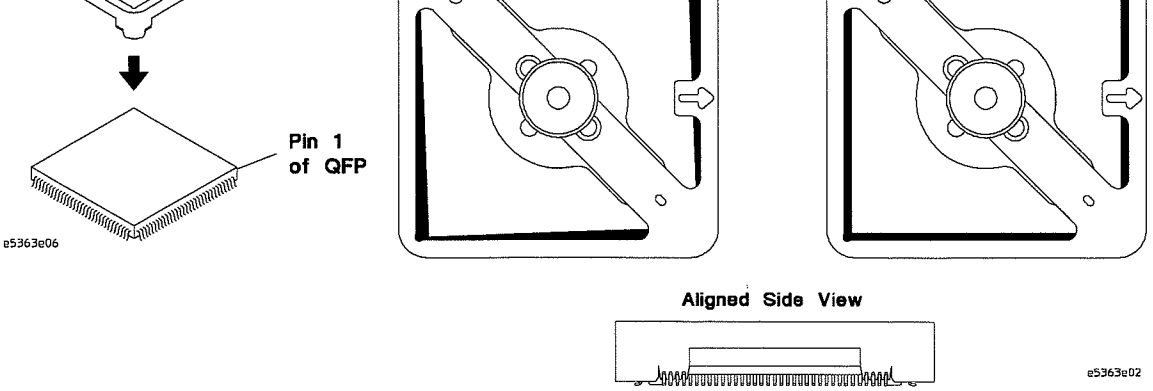


3 Hold down on the sides of the locator tool and loosen the knurled nut two turns. Continue to hold down on the sides of the locator tool and press down on the knurled nut to drop the retainer onto the top of the QFP. Hold for 30 seconds.

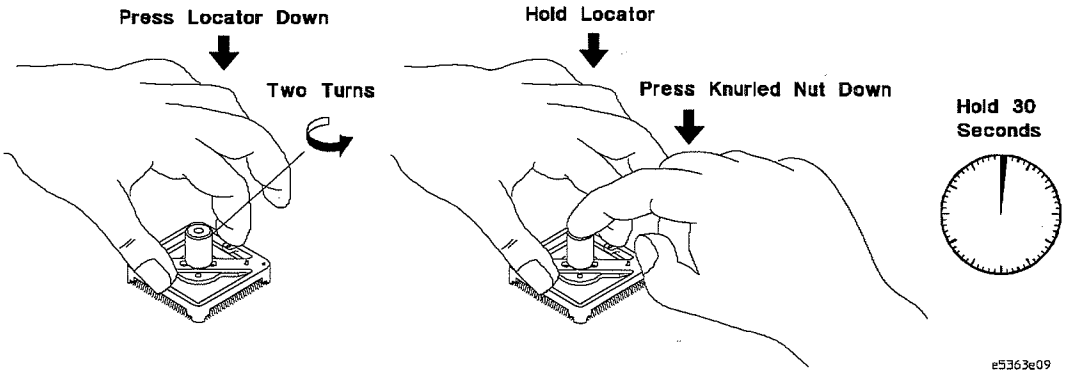


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


4 Wait 15 minutes for the adhesive to cure.

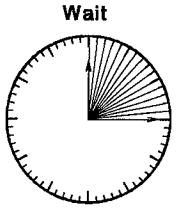

5 Remove the locator tool, by completely unscrewing the knurled nut and lifting the locator off the QFP.

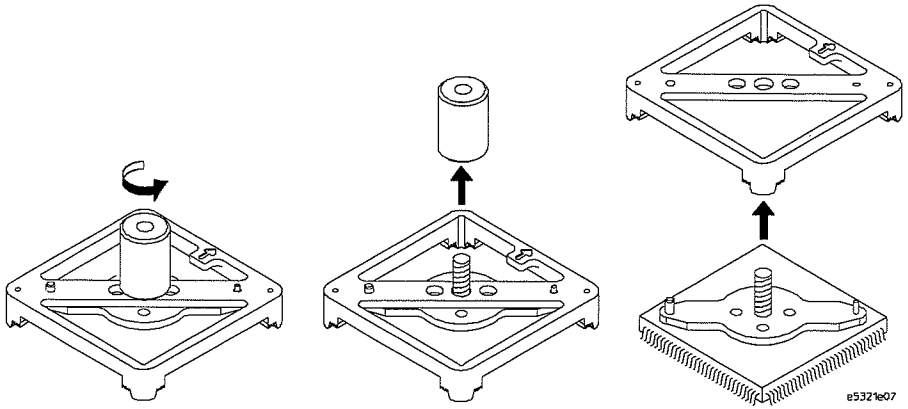


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

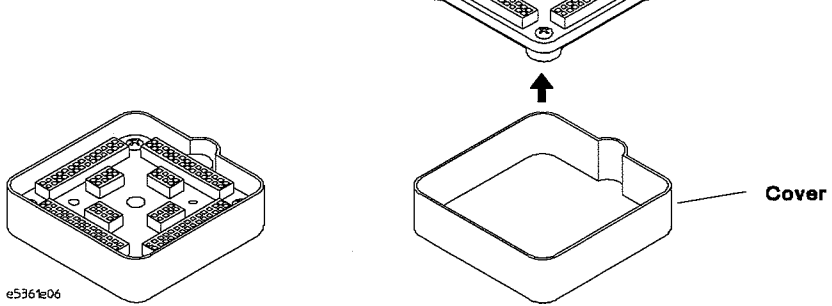

CAUTION

Do not touch the contact area on the conductive elastomer, which is on the bottom of the probe adapter. Contamination or damage to the conductive elastomer will cause shorts or poor contact.

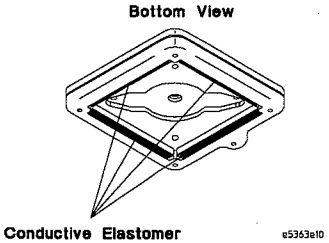

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


3 Install the elastomeric probe adapter on the retainer.

- **a** Place the probe adapter over the retainer so that the threaded stud passes through the center hole of the adapter, and the dowel pins of the retainer enter the holes in the adapter.
- **b** Avoid touching the elastomers to the threaded stud or dowel pins of the retainer as the probe is inserted.
- **c** Make sure the dowels on the retainer are inserted in the holes on the probe adapter and that it is laying flat against the QFP before tightening the nut.

4 Turn the knurled nut until it stops.

CAUTION

Do not over-tighten the knurled nut. Over-tightening the nut will make it difficult to remove.

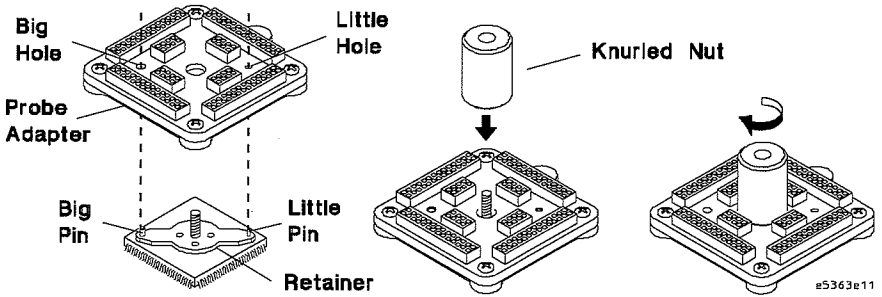

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2

This chapter includes procedures to install optional flexible adapters for use with Hewlett-Packard logic analyzers, oscilloscopes, and emulators.

- The HP E5371A 1/4 flexible adapters, 2-2
- The HP E5372A general-purpose flexible adapter, 2-5


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Model Parameters

Pin-to-Ground Capacitance	3.5 pF Typical First Row 5.0 pF Typical Second Row 8.0 pF Typical Third Row
Pin-to-Pin Capacitance	2 pF Typical
Self-Inductance	30 nH Typical First Row 40 nH Typical Second Row 50 nH Typical Third Row
Operating Band width	350 Mhz Typical

Environmental Characteristics

Operating Temperature	0 °C to 55 °C
Maximum Operating Humidity	75% Relative Humidity

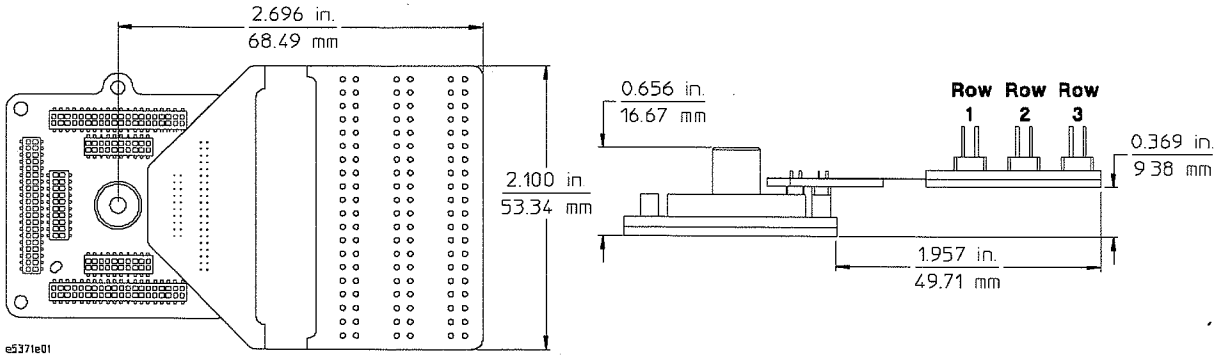

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

To connect an HP logic analyzer or oscilloscope using a 1/4 flexible adapter

1 Power-off the preprocessor, logic analyzer, and target system.

2 Follow the steps in chapter 1 to install the elastomeric probe adapter.

CAUTION


Damage to the QFP. Once the 1/4 flexible adapter has had its common pins connected to ground it should not be used in any other quadrant of the elastomeric probe adapter or in any other device. Remove the solder connecting the common pins to ground before reuse.

3 Apply a small amount of solder across the gap between the signal pins that are ground on your device under test and the common pins of the 1/4 flexible adapter. This will facilitate the connection of the HP logic analyzer or oscilloscope probe ground.


All of the common pins are connected together through a grid on the bottom of the flexible adapter as shown below.


The pin numbers printed on the label correspond to the pins in one quadrant of the probe adapter. Refer to the pinout and cross-reference maps in the Reference chapter of this document when using multiple 1/4 flexible adapters.

Top View of 1/4 Flex

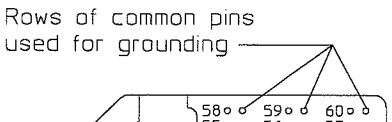


Bottom View of 1/4 Flex

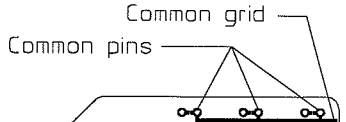

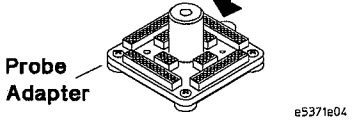

5 Connect the appropriate logic analyzer or oscilloscope probe to the correct circuit as indicated by the adapter pin numbers.

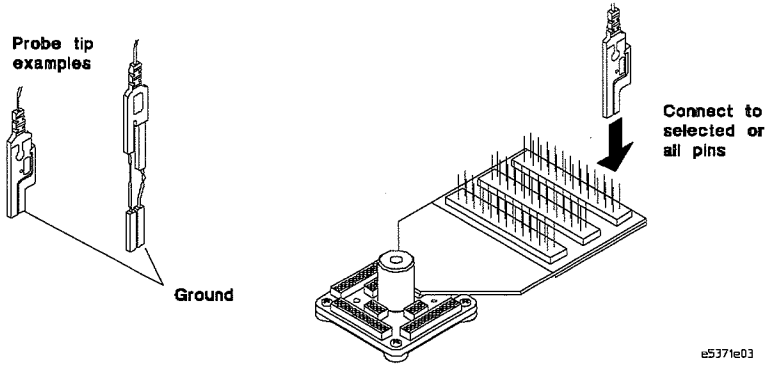

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The HP E5372A general-purpose flexible adapter

The HP E5372A general-purpose adapter gives you access to predefined processor support for a Hewlett-Packard preprocessor and logic analyzer or emulator.

Performance characteristics of the HP E5372A general-purpose flexible adapter

Used with Elastomeric Probe Adapter		HP E5363A 240-pin 0.50 mm
Electrical Characteristics	Signal loading per line in addition to emulator or preprocessor load	< 5 pF typical (no target grounds connected) 20 pF typical (with target grounds connected)
	Maximum operating frequency	33 MHz
Environmental Characteristics	Operating Temperature	0 °C to 55°C
	Maximum Operating Humidity	75% Relative Humidity

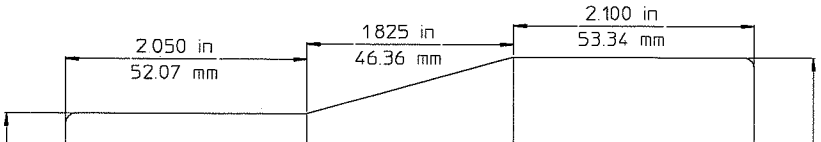

The general-purpose flexible adapter can be attached to the probe adapter in one of four orientations to avoid interfering with tall components on the target system.

CAUTION

To prevent pin damage and ensure a proper connection, make sure the pins of the preprocessor probe, transition board, general-purpose flexible adapter, and elastomeric probe adapter are aligned and seated correctly in the sockets.

4 Connect the preprocessor, transition board, general-purpose flexible adapter, and elastomeric probe adapter using the orientation selected in the previous step.

Refer to the pinout and cross-reference maps in the Reference chapter of this document for pin numbers on the general-purpose flexible adapter.


See Also

Refer to your HP preprocessor or emulator manual for information on connecting to and using the preprocessor or emulator.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Example

The following illustration shows one of four possible orientations for connecting the QFP elastomeric probing system using the general-purpose flexible adapter.

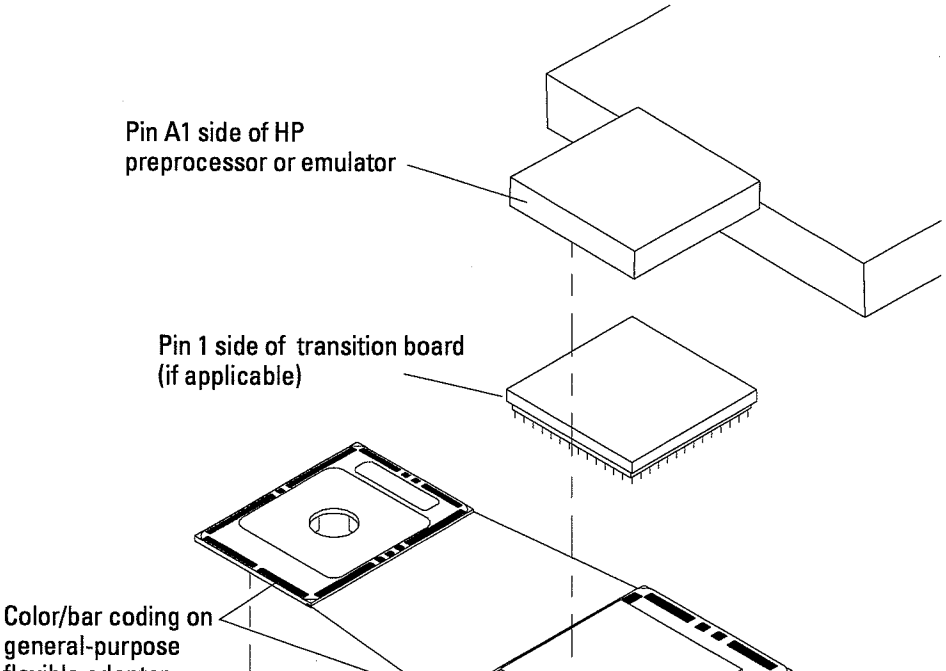

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3


This chapter includes the following reference information:

- Pinout and cross-reference maps and tables
- Grounding
- Replaceable parts
- Removing retainers

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

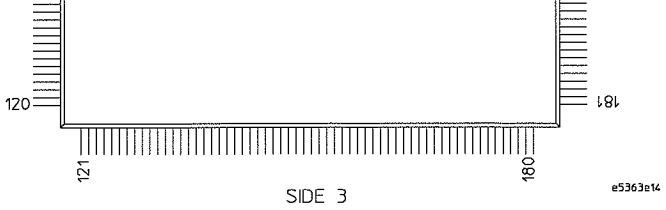


Probe adapter pinout map

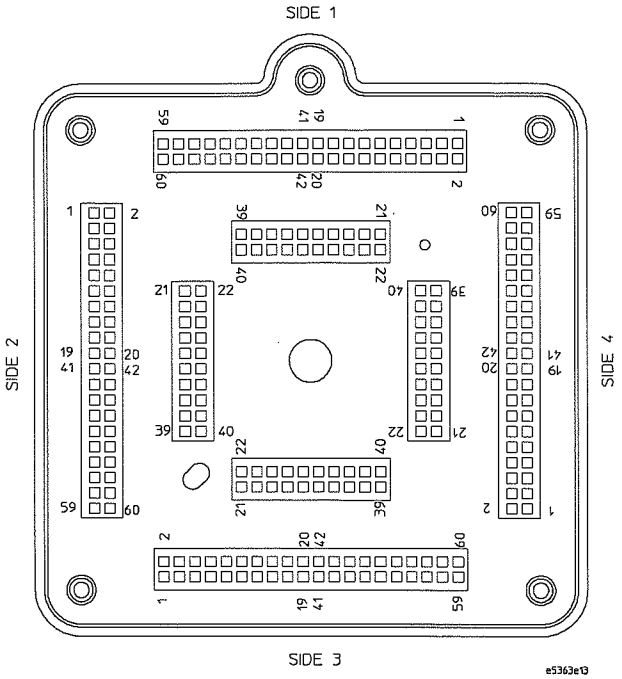

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

HP E5372A General-Purpose Flexible Cable

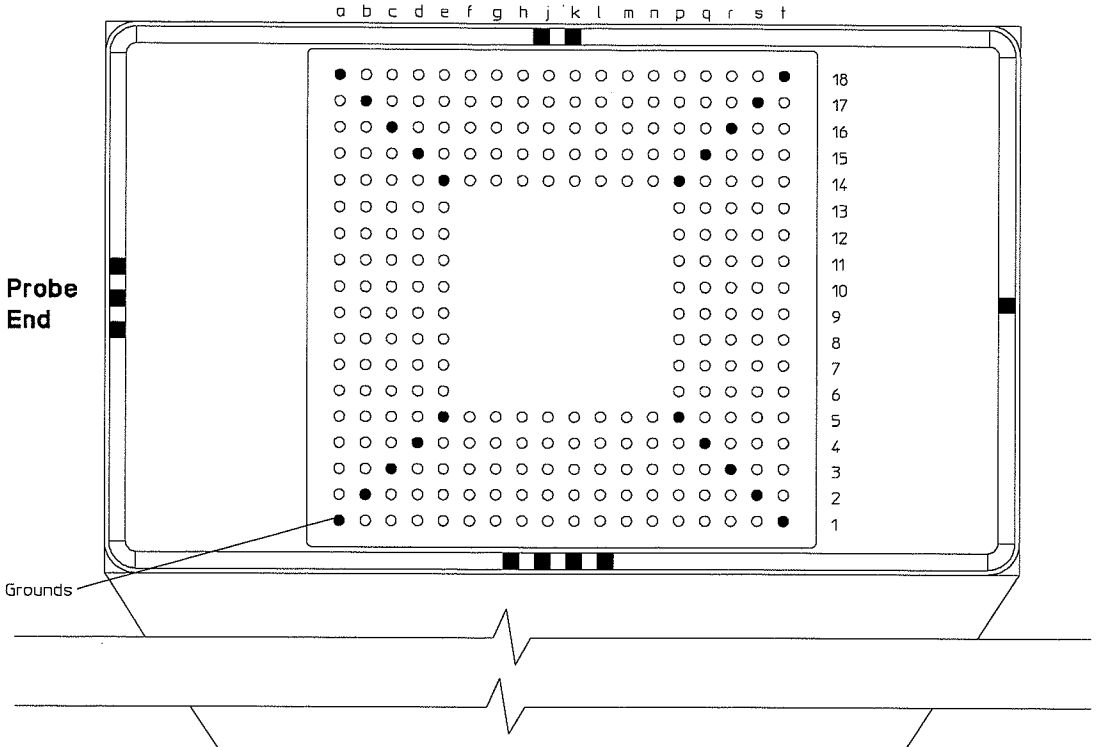

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

7	7	E2	67	7	S5	127	7	P17	187	7	B14
8	8	E1	68	8	T5	128	8	P18	188	8	A14
9	9	E4	69	9	Q5	129	9	P15	189	9	D14
10	10	E3	70	10	R5	130	10	P16	190	10	C14
11	11	F4	71	11	Q6	131	11	N15	191	11	D13
12	12	F3	72	12	R6	132	12	N16	192	12	C13
13	13	G3	73	13	R7	133	13	M16	193	13	C12
14	14	G2	74	14	S7	134	14	M17	194	14	B12
15	15	H2	75	15	S8	135	15	L17	195	15	B11
16	16	H1	76	16	T8	136	16	L18	196	16	A11
17	17	J1	77	17	T9	137	17	K18	197	17	A10
18	18	H5	78	18	P8	138	18	L14	198	18	E11
19	19	J5	79	19	P9	139	19	K14	199	19	E10
20	20	J4	80	20	Q9	140	20	K15	200	20	D10
21	21	F1	81	21	T6	141	21	N18	201	21	A13
22	22	F2	82	22	S6	142	22	N17	202	22	B13
23	23	F5	83	23	P6	143	23	N14	203	23	E13
24	24	G1	84	24	T7	144	24	M18	204	24	A12
25	25	G4	85	25	Q7	145	25	M15	205	25	D12
26	26	G5	86	26	P7	146	26	M14	206	26	E12
27	27	H3	87	27	R8	147	27	L16	207	27	C11
28	28	H4	88	28	Q8	148	28	L15	208	28	D11
29	29	J2	89	29	S9	149	29	K17	209	29	B10
30	30	J3	90	30	R9	150	30	K16	210	30	C10

* Side 1 is the side that is connected to pin 1 side of QFP
** The target end refers to the pin numbers on the probe adapter, the target end of the general-purpose flexible cable, and the 1/4 flexible cable when using more than one.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Side 1 *			Side 2			Side 3			Side 4		
QFP	Target End **	Probe End	QFP	Target End **	Probe End	QFP	Target End **	Probe End	QFP	Target End **	Probe End
31	31	K1	91	31	T10	151	31	J18	211	31	A9
32	32	K2	92	32	S10	152	32	J17	212	32	B9
33	33	K5	93	33	P10	153	33	J14	213	33	E9
34	34	L1	94	34	T11	154	34	H18	214	34	A8
35	35	L4	95	35	Q11	155	35	H15	215	35	D8
36	36	L5	96	36	P11	156	36	H14	216	36	E8
37	37	M3	97	37	R12	157	37	G16	217	37	C7
38	38	M4	98	38	Q12	158	38	G15	218	38	D7
39	39	N2	99	39	S13	159	39	F17	219	39	B6
40	40	N3	100	40	R13	160	40	F16	220	40	C6
41	41	K4	101	41	Q10	161	41	J15	221	41	D9
42	42	K3	102	42	R10	162	42	J16	222	42	C9
43	43	L3	103	43	R11	163	43	H16	223	43	C8
44	44	L2	104	44	S11	164	44	H17	224	44	B8
45	45	M2	105	45	S12	165	45	G17	225	45	B7
46	46	M1	106	46	T12	166	46	G18	226	46	A7
47	47	N1	107	47	T13	167	47	F18	227	47	A6
48	48	M5	108	48	P12	168	48	G14	228	48	E7
49	49	N5	109	49	P13	169	49	F14	229	49	E6
50	50	N4	110	50	Q13	170	50	F15	230	50	D6

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Connecting target grounds to the flexible cable ground will provide a low impedance path for return currents resulting in more accurate measurements by your instrument. This increases the load capacitance seen by your target system. In some cases you may not need to connect ground signals in order to get accurate measurements, but it is recommended that you do so to ensure optimal signal fidelity at your measurement tool.

Loading


< 5 pF typcial	No target grounds connected to the flexible adapter cable
20 pF typical	Target ground signals connected to ground grid of flexible adapter cable

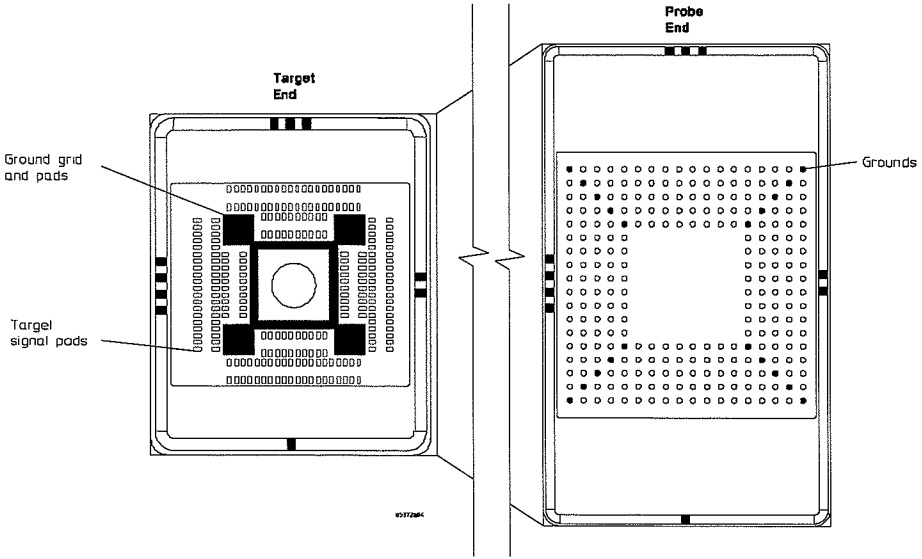


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Replaceable Parts


Part Description	Part Number
Elastomeric Probe Adapter (Includes retainers and locators)	HP E5363A
General-purpose flexible adapter	HP E5372A
Retainer Kit (shown in the following illustration)	HP E5363A opt. 201
Locator Kit (shown in the following illustration)	HP E5363A opt. 202

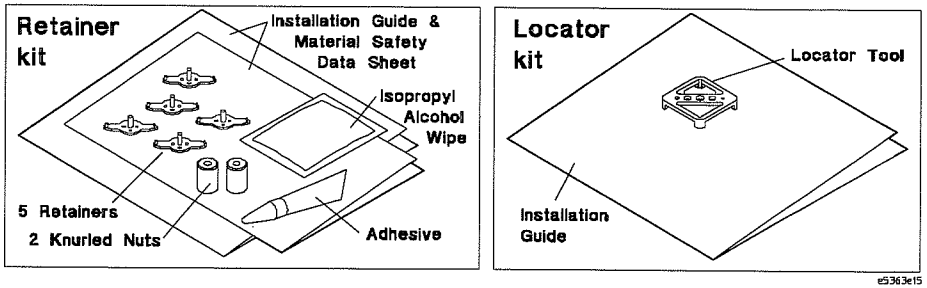


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

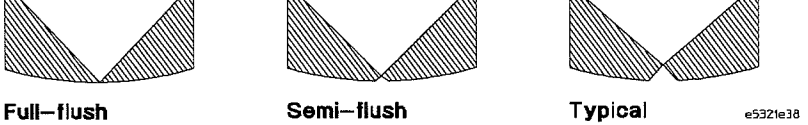

2 Place the tip of the plier against the slanted edge of the retainer.

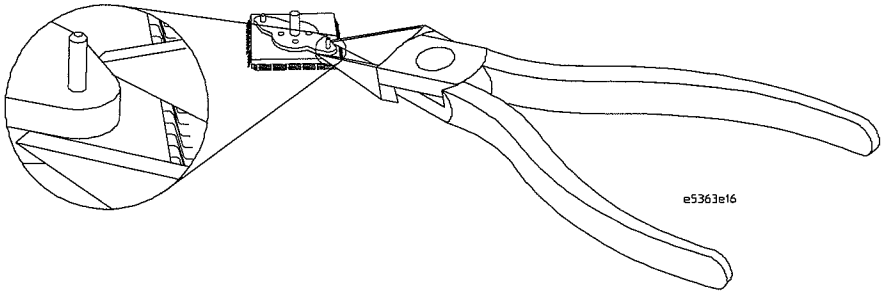

3 Ensure that the tip edge of the plier is as nearly parallel as possible and resting on the surface of the QFP.

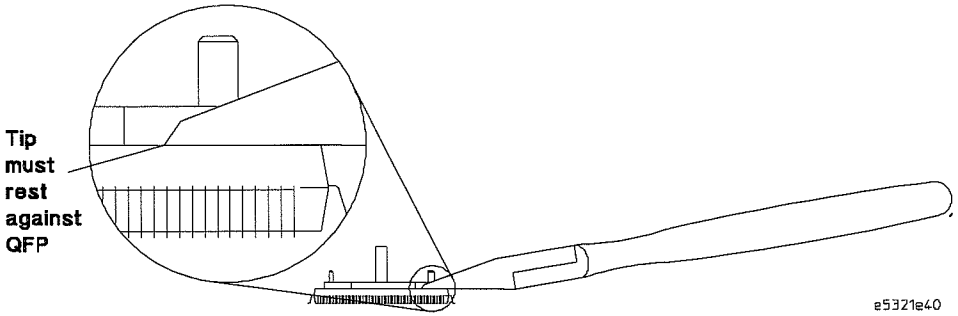


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

WARNING **Possible injury.** Exercise care when using any sharp cutting tool.

4 Hold your hand over the QFP during removal to prevent the part from flying when it pops off.

CAUTION Prevent the retainer from landing on any electrical circuits which might cause shorting.

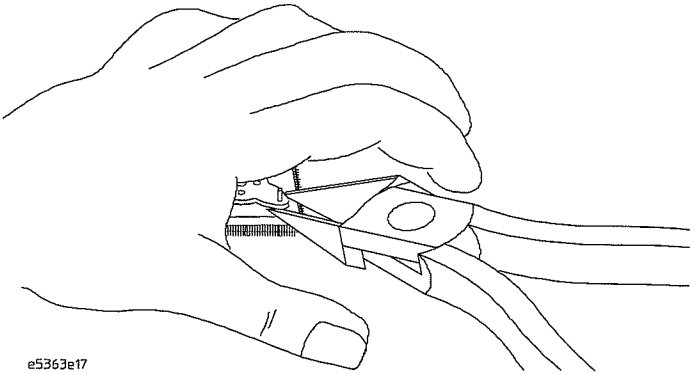

5 Squeeze the pliers to pop the retainer off.

6 Discard the retainer.

WARNING **Possible injury.** Exercise care when using any sharp cutting tool.

7 Scrape the adhesive off the top of your QFP using a single-edge razor blade or similar tool.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Index

0.50 mm QFP ii

A
adhesive 1-7
adhesive removal 3-8 - 3-9
advanced probing system ii
alignment
  flexible adapter to preprocessor/emulator 2-6
  locator tool to QFP 1-4 - 1-5
assembled locator tool 1-4

B
bandwidth
  1/4 flexible adapter 2-2
  QFP probe adapter 1-2

C
capacitance
  1/4 flexible adapter 2-2
  QFP probe adapter 1-2
Caution
  Alignment of preprocessor or emulator 2-6
  Control the amount of adhesive 1-7
  Damage to the QFP 2-3
  Do not over-tighten knurled nut 1-11
conductive elastomer 1-10
contact resistance
  QFP probe adapter 1-2
contamination 1-10
cover 1-10
current
  1/4 flexible adapters 2-2
  QFP probe adapter 1-2
cutting plier 3-8

D
damage to elastomer 1-10
dimensions
  1/4 flexible adapter 2-2
  general-purpose flexible adapter 2-5
  QFP probe adapter 1-3
dowels 1-11

E
elastomer 1-10
electrical characteristics
  1/4 flexible adapter 2-2
  general-purpose flexible adapter 2-5
  QFP probe adapter 1-2
electrostatic discharge 1-4
environmental characteristics
  1/4 flexible adapter 2-2

H
HP E5372A
  general-purpose flexible adapter 2-5 - 2-7
HP E5371A
  1/4 flexible adapter 2-2 - 2-4
humidity
  1/4 flexible adapter 2-2
  general-purpose flexible adapter 2-5
  QFP probe adapter 1-2

I
inductance
  1/4 flexible adapter 2-2
  QFP probe adapter 1-2
insulation resistance
  1/4 flexible adapter 2-2
  QFP probe adapter 1-2
Isopropyl Alcohol wipe 1-6

K
knurled nut 1-3

L
locator 1-3
locator tool 1-4

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

P
parameters
1/4 flexible adapters 2-2 - 2-4
general-purpose flexible adapters 2-5 - 2-7
QFP probe adapter 1-2
parts
replaceable 3-7
performance characteristics
1/4 flexible adapter 2-2
general-purpose flexible adapter 2-5
QFP probe adapter 1-2
Pin 1 1-4
pin-to-ground capacitance
1/4 flexible adapter 2-2
pin-to-pin capacitance
1/4 flexible adapter 2-2
Probe adapter installation 1-10 - 1-11
probing system ii

Q
QFP probe adapter 1-2
Quad Flat Pack ii
retainer
adhereing to QFP 1-7 - 1-9
discard used 3-9
prepare to attach 1-3
removal 3-8 - 3-9
test alignment 1-4 - 1-6

S
self-inductance
1/4 flexible adapter 2-2
QFP probe adapter 1-2
semi-flush cutting plier 3-8
signal loading
general-purpose flexible adapter 2-5

T
teeth, locator 1-4
temperature
1/4 flexible adapter 2-2
general-purpose flexible adapter 2-5
QFP probe adapter 1-2

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

© Copyright Hewlett-Packard Company 1997
All Rights Reserved.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

Restricted Rights Legend

Use, duplication, or disclosure by the U.S. Government is subject to restrictions set forth in subparagraph (C) (1) (ii) of the Rights in Technical Data and Computer Software Clause in DFARS 252.227-7013.
Hewlett-Packard Company, 3000 Hanover Street, Palo Alto, CA 94304 U.S.A.
Rights for non-DOD U.S. Government Departments and Agencies are set forth in FAR 52.227-19(c)(1,2).

Document Warranty

The information contained in this document is subject to change without notice.

Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of

Safety

This apparatus has been designed and tested in accordance with IEC Publication 348, Safety Requirements for Measuring Apparatus, and has been supplied in a safe condition. This is a Safety Class I instrument (provided with terminal for protective earthing). Before applying power, verify that the correct safety precautions are taken (see the following warnings). In addition, note the external markings on the instrument that are described under "Safety Symbols."

Warning

- Before turning on the instrument, you must connect the protective earth terminal of the instrument to the protective conductor of the (mains) power cord. The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. You must not negate the protective action by using an extension cord (power cable) without a protective conductor (grounding). Grounding one conductor of a two-conductor outlet is not sufficient protection.
- Service instructions are for trained service personnel. To avoid dangerous electric shock, do not perform any service unless qualified to do so. Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.
- If you energize this instrument by an auto transformer (for voltage reduction), make sure the common terminal is connected to the earth terminal of the power source.
- Whenever it is likely that the ground protection is impaired, you must make the instrument inoperative and secure it against any unintended operation.
- Do not operate the instrument in the presence of flammable gasses or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.
- Do not install substitute parts or perform any unauthorized modification to the instrument.
- Capacitors inside the instrument may retain a charge even if the instrument is disconnected from its

Safety Symbols



Instruction manual symbol: the product is marked with this symbol when it is necessary for you to refer to the instruction manual in order to protect against damage to the product.



Hazardous voltage symbol.



Earth terminal symbol: Used to indicate a circuit common connected to grounded chassis.

WARNING

The Warning sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a Warning sign until the indicated conditions are fully understood and met.

CAUTION

The Caution sign denotes a

However, the Buyer shall pay all shipping charges, duties, and taxes for products returned to Hewlett-Packard from another country.

Hewlett-Packard warrants that its software and firmware designated by Hewlett-Packard for use with an instrument will execute its programming instructions when properly installed on that instrument. Hewlett-Packard does not warrant that the operation of the instrument software, or firmware will be uninterrupted or error free.

Limitation of Warranty

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by the Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

No other warranty is expressed or implied. Hewlett-Packard specifically disclaims the implied warranties of

Certification

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology, to the extent allowed by the Institute's calibration facility, and to the calibration facilities of other International Standards Organization members.

product updates and manual updates.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



HP PART NUMBER E5363-92001
PRINTED JULY,1997

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP