

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Kontron CTM80-2* at our website: ***Click HERE***

CTM80-2

Rear Panel I/O

kontron

Board Rev. 1

QUICK REFERENCE

Document version 1.2

CONNECTORS

4HP		8HP	
J3-J5	CompactPCI	J2	PS/2 Mouse
J6, J7	USB2, USB1	J7	HDD 2.5" (Secondary IDE)
J8	Mouse / Keyboard	J10	COM 2
J9	Floppy Drive header	J5	Floppy Drive
J10	IDE header	J12	Floppy Drive header
J11	Video (SVGA)	J14	IDE1 header
J12	Hard Disk Power	J15	PS/2 Mouse & HD Power
J13	SCSI 3 LVD Internal	J19	COM2 header
J14	SCSI 3 LVD External		
J15, J16	LAN 2, LAN 1		
J19	COM 1		
J20	COM 2 Header		

Note:
4HP refers to the Rear I/O Board
8HP refers to the Mezzanine Board

JUMPER SETTINGS

W2
HDD Configuration, on Mezzanine

	Master	Slave
W2	2-3	1-2

Note 1
SCSI-3 LVDS supports Ultra160

Note 2
RTM is compatible with cPCI-DT64, CP6000, CP6010 and CP6011

Note 3
When using the 2.16 backplane, U1, U2, J15 (LAN1) and J16 (LAN2)are removed.

Note 4
For J14, IDE connector in 8HP, use the 7" cable provided with the RTM (Kontron PN: 150-544-00).
Device on the IDE cable connected on J14 should bet set to "Slave" if a 2.5" hard disk is present on the mezzanine.

Note 5
* Populated with PIM option (T6701#B_#-## or T6701#D_#-##)
** Populated with SCSI option (T6701#A_#-## or T6701#C_#-##)


First Level Debugging

HDD IDE is not detected or fails to boot
Check the HDD configuration jumpers (see jumper settings)

Rev. 1


8HP Configuration

Mezzanine Board - Top View

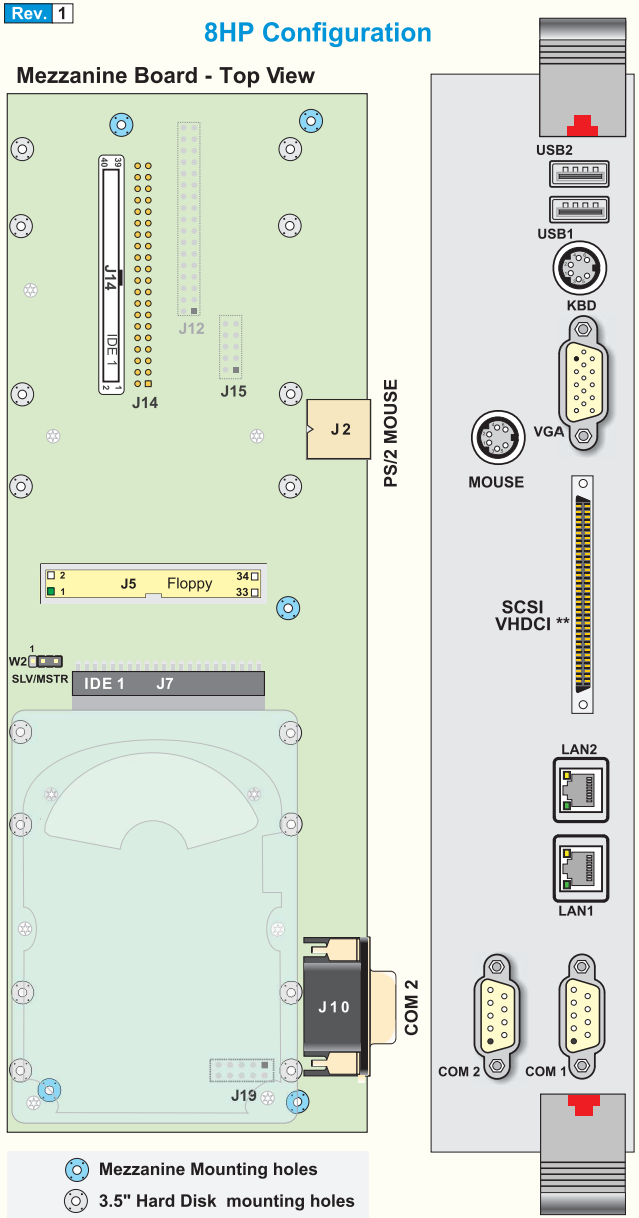

Mezzanine Mounting holes
3.5" Hard Disk mounting holes

4HP Configuration

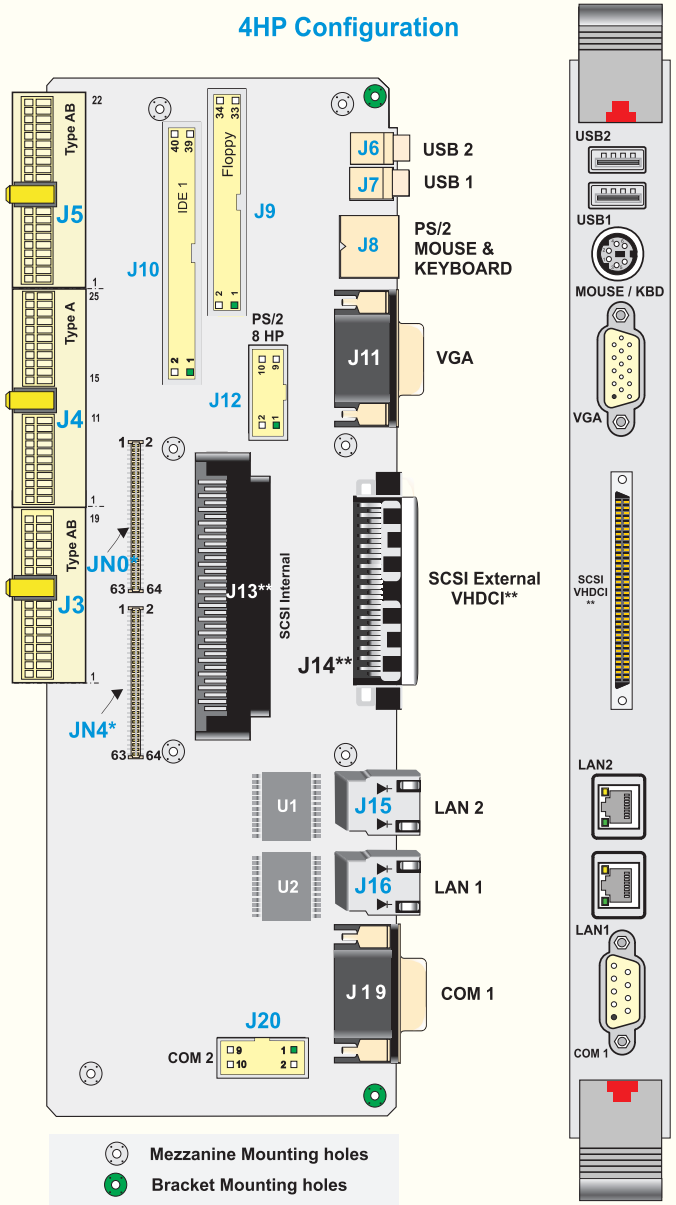

Mezzanine Mounting holes
Bracket Mounting holes

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Connector Pinouts

CTM80-2

Board Rev. 1

Internal

J3 - CompactPCI I/O

	ROW A	ROW B	ROW C	ROW D	ROW E
1	COM1::RTS	COM1::RX	COM1::DSR	COM1::DCD	ID1
2	COM1::RI	COM1::DTR	COM1::CTS	COM1::TX	MOUSE:CLK
3	COM2::RTS	COM2::RX	COM2::DSR	COM2::DCD	MOUSE:DATA
4	COM2::RI	COM2::DTR	COM2::CTS	COM2::TX	KB:DATA
5	VGA:BLUE	VGA:HSYNC	VGA:VSYNC	VGA:SCL	KB:CLK
6	VGA:RED	VGA:GREEN	VGA:SDA	POST:CLK	POST:DATA
7	ID0	ID2	ID3	ID4	SPEAKER
8	USB0:DATA-	USB0:DATA+	RSV	RSV	RSV
9	USB1:DATA-	USB1:DATA+	RSV	RSV	RSV
10	USB1:VCC	USB0:VCC	RSV	RSV	RSV
11	RSV	RSV	RSV	RSV	RSV
12	RSV	RSV	RSV	RSV	RSV
13	LAN0:ACT	LAN1:ACT	RSV	RSV	RSV
14	LAN0:LINK	LAN1:LINK	LAN:CT	RSV	RSV
15	LAN1:DB+	LAN1:DB-	GND	LAN1:DD+	LAN1:DD-
16	LAN1:DA+	LAN1:DA-	GND	LAN1:DC+	LAN1:DC-
17	LAN0:DB+	LAN0:DB-	GND	LAN0:DD+	LAN0:DD-
18	LAN0:DA+	LAN0:DA-	GND	LAN0:DC+	LAN0:DC-
19	VCC	VCC	VCC3	+12V	-12V

J5 - CompactPCI I/O

	ROW A	ROW B	ROW C	ROW D	ROW E
1	RSV	RSV	GND	RSV	RSV
2	RSV	RSV	GND	RSV	RSV
3	RSV	RSV	GND	RSV	RSV
4	RSV	RSV	GND	RSV	RSV
5	RSV	RSV	GND	RSV	RSV
6	RSV	RSV	GND	RSV	RSV
7	RSV	RSV	GND	RSV	RSV
8	RSV	RSV	GND	RSV	RSV
9	RSV	RSV	GND	RSV	RSV
10	FD:MSEN0	FD:MSEN1	GND	RSV	RSV
11	FD: MTR0#	FD: INDEX#	GND	FD: FDEDIN#	FD: DENSEL#
12	FD: DIR#	FD: MTR1#	GND	FD: DSEL0#	FD : DSEL1#
13	FD: TRK0#	FD: WGATE#	GND	FD: WDATA#	FD: STEP#
14	FD: DSKCHG#	FD: HDSEL#	GND	FD: RDATA#	FD: WRPROT#
15	IDE:D6	IDE:D8	GND	IDE:D7	IDE:RESET#
16	IDE:D4	IDE:D10	GND	IDE:D5	IDE:D9
17	IDE:D2	IDE:D12	GND	IDE:D3	IDE:D11
18	IDE:D0	IDE:D14	GND	IDE:D1	IDE:D13
19	IDE:IOR#	IDE:IOW#	GND	IDE:REQ	IDE:D15
20	N.C.	IDE:IRQ	GND	IDE:ACK#	IDE:IORDY
21	IDE:A2	IDE:A0	GND	IDE:A1	IDE:DIAG#
22	IDE:ACT#	IDE:CS3#	GND	IDE:CS1#	RSV

Floppy Disk J9 - 4HP Mezz: J5, J12 - 8HP

Odd Pin Number	
1-3, 7-33	GND
4, 5	N.C.

Even Pin Number	
2	DENSEL0#
6	DENSEL1#

8	INDEX#	22	WDATA#
10	MTR0#	24	WGATE#
12	DSEL1#	26	TRK0#
14	DSEL0#	28	WRPROT#
16	MTR1#	30	RDATA#
18	DIR#	32	HDSEL#
20	STEP#	34	DSKCHG#

J10 - Secondary IDE (4HP)
Mezz : J7, J14 - Secondary IDE (8HP)

Odd Pin Number				Even Pin Number			
1	RST#	25	IOR#	39	ACT#	30	GND
3-17	D7-D0	27	IOCHRDY	2,22-26	GND	32	N.C.
19	GND	29	DMACK#	4-18	D8-D15	34	DIAG#
21	REQ	31	IRQ14	20	N.C.	36	A2
23	IOW#	33, 35	A1, A0	28	CSEL	38	CS 3 #
		37	CS1#	41	VCC	40	GND
		J7 only		43	GND	42	VCC
						44	N.C.

J4 - PIM Connections (PMC Rear Access)

	ROW A	ROW B	ROW C	ROW D	ROW E
1	PIM:61	PIM:63	GND	PIM:62	PIM:64
2	PIM:57	PIM:59	GND	PIM:58	PIM:60
3	GND	GND	GND	GND	GND
4	PIM:53	PIM:55	GND	PIM:54	PIM:56
5	PIM:49	PIM:51	GND	PIM:50	PIM:52
6	GND	GND	GND	GND	GND
7	PIM:45	PIM:47	GND	PIM:46	PIM:48
8	PIM:41	PIM:43	GND	PIM:42	PIM:44
9	GND	GND	GND	GND	GND
10	PIM:37	PIM:39	GND	PIM:38	PIM:40
11	PIM:33	PIM:35	GND	PIM:34	PIM:36
12					
13	Key Area				
14					
15	PIM:29	PIM:31	GND	PIM:30	PIM:32
16	PIM:25	PIM:27	GND	PIM:26	PIM:28
17	GND	GND	GND	GND	GND
18	PIM:21	PIM:23	GND	PIM:22	PIM:24
19	PIM:17	PIM:19	GND	PIM:18	PIM:20
20	GND	GND	GND	GND	GND
21	PIM:13	PIM:15	GND	PIM:14	PIM:16
22	PIM:9	PIM:11	GND	PIM:10	PIM:12
23	VCC	VCC	GND	VCC3	VCC3
24	PIM:5	PIM:7	GND	PIM:6	PIM:8
25	PIM:1	PIM:3	GND	PIM:2	PIM:4

J4 - PIM SCSI Ultra 160/320 connections (VHDCI)

	ROW A	ROW B	ROW C	ROW D	ROW E
1	D12+	D12-	GND	D13+	D13-
2	D14+	D14-	GND	D15+	D15-
3	GND	GND	GND	GND	GND
4	DPH+	DPH-	GND	D0+	D0-
5	D1+	D1-	GND	D2+	D2-
6	GND	GND	GND	GND	GND
7	D3+	D3-	GND	D4+	D4-
8	D5+	D5-	GND	D6+	D6-
9	GND	GND	GND	GND	GND
10	D7+	D7-	GND	DPL+	DPL-
11	DIFFSENS	TERMPWR7	GND	TERMPWR8	TERMPWR9
12					
13	Key Area				
14					
15	TERMPWR3	TERMPWR4	GND	TERMPWR5	TERMPWR6
16	TERMPWR1	TERMPWR2	GND	ATN+	ATN-
17	GND	GND	GND	GND	GND
18	BSY+	BSY-	GND	ACK+	ACK-
19	RST+	RST-	GND	MSG+	MSG-
20	GND	GND	GND	GND	GND
21	SEL+	SEL-	GND	CD+	CD-
22	REQ+	REQ-	GND	IO+	IO-
23	VCC	VCC	GND	VCC3	VCC3
24	D8+	D8-	GND	D9+	D9-
25	D10+	D10-	GND	D11+	D11-

PS/2 Mouse, Mezz HD-Power
J12 - (4HP) J15 - (8HP)

1	KB:VCC	6	GND
2	MOUSE:DATA	7	GND
3	MOUSE:CLK	8	VCC
4	VCC	9	VCC
5	VCC	10	GND

* JN4 - PIM

1	P1+	2	P2+
3	P1-	4	P2-
5	P3+	6	P4+
7	P3-	8	P4-
9	P5+	10	P6+
11	P5-	12	P6-
13	P7+	14	P8+
15	P7-	16	P8-
17	P9+	18	P10+
19	P9-	20	P10-
21	P11+	22	P12+
23	P11-	24	P12-
25	P13+	26	P14+
27	P13-	28	P14-
29	P15+	30	P16+
31	P15-	32	P16-
33	P17+	34	P18+
35	P17-	36	P18-
37	P19+	38	P20+
39	P19-	40	P20-
41	P21+	42	P22+
43	P21-	44	P22-
45	P23+	46	P24+
47	P23-	48	P24-
49	P25+	50	P26+
51	P25-	52	P26-
53	P27+	54	P28+
55	P27-	56	P28-
57	P29+	58	P30+
59	P29-	60	P30-
61	P31+	62	P32+
63	P31-	64	P32-

*JN0 - PIM


1	N.C.	2	+12V
3	N.C.	4	N.C.
5	+5V	6	N.C.
7	N.C.	8	N.C.
9	N.C.	10	+3.3V
11	N.C.	12	N.C.
13	GND	14	N.C.
15	N.C.	16	N.C.
17	N.C.	18	GND
19	N.C.	20	N.C.
21	+5V	22	N.C.
23	N.C.	24	N.C.
25	N.C.	26	+3.3V
27	N.C.	28	N.C.
29	GND	30	N.C.
31	N.C.	32	N.C.
33	N.C.	34	GND
35	N.C.	36	N.C.
37	+5	38	N.C.
39	N.C.	40	N.C.
41	N.C.	42	+3.3V
43	N.C.	44	N.C.
45	GND	46	N.C.
47	N.C.	48	N.C.
49	N.C.	50	GND
51	N.C.	52	N.C.
53	+5	54	N.C.
55	N.C.	56	N.C.
57	N.C.	58	+3.3V
59	N.C.	60	N.C.
61	-12	62	N.C.
63	N.C.	64	N.C.

*For PIM Option only

External

J13, J14 - SCSI 3 LVD (4HP)
J13 - Internal J14 - External

1	D12+	35	D12-
2	D13+	36	D13-
3	D14+	37	D14-
4	D15+	38	D15-
5	DPH+	39	DPH-
6	D0+	40	D0-
7	D1+	41	D1-
8	D2+	42	D2-
9	D3+	43	D3-
10	D4+	44	D4-
11	D5+	45	D5-
12	D6+	46	D6-
13	D7+	47	D7-
14	DPL+	48	DPL-
15	GND	49	GND
16	DIFFSENS	50	DIFFSENS
17	TERMPWR	51	TERMPWR
18	TERMPWR	52	TERMPWR
19	N.C.	53	N.C.
20	GND	54	GND
21	ATN+	55	ATN-
22	GND	56	GND
23	BSY+	57	BSY-
24	ACK+	58	ACK-
25	RESET+	59	RESET-
26	MSG+	60	MSG-
27	SEL+	61	SEL-
28	CD+	62	CD-
29	REQ+	63	REQ-
30	IO+	64	IO-
31	D8+	65	D8-
32	D9+	66	D9-
33	D10+	67	D10-
34	D11+	68	D11-



J15, J16 - Ethernet 1 & 2

1	DA+	5	DC+
2	DA-	6	DC-
3	DB+	7	DD+
4	DC+	8	DD+



J8 - PS/2 KBD / Mouse (4HP)

1	KB:DATA	4	VCC
2	MOUSE:DATA	5	KB:CLK
3	GND	6	MOUSE:CLK

Needs splitter cable to get both devices connected

J8 -PS/2 Keyboard (8HP)

1	DATA	4	VCC
2	N.C.	5	CLOCK
3	GND	6	N.C.

No splitter cable needed

J2 - Mezz. PS/2 Mouse (8HP)

1	DATA	4	VCC
2	N.C.	5	CLOCK
3	GND	6	N.C.



J7 - USB1


USB1:VCC	1	1	USB2:VCC
USB1:DATA-	2	2	USB2:DATA-
USB1:DATA+	3	3	USB2:DATA+
USB1:GND	4	4	USB2:GND

J6 - USB2




J11 - Video SVGA (4HP)

Row 1 (1-5)			
1	RED	9	N.C.
2	GREEN	10	GND
3	BLUE	Row 3 (11-15)	
4	N.C.	11	N.C.
5	GND	12	SDATA
Row 2 (6-10)		13	HSYNC
6-8	A_GND	14	VSYNC
		15	SCLK




J19 - COM1 (4HP)
J10 - COM2 (8HP)

1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RI		



J20 - COM2 (4HP)
J19 - COM2 (8HP)

1	DCD	2	DSR
3	RXD	4	RTS
5	TXD	6	CTS
7	DTR	8	RI
9	GND	10	N.C.



For Technical Support please contact:

1 . Internet : www.kontron.com
2 . E-Mail : support@kontron.com
3. Tel : (800) 354-4223
4. Fax : (450) 437-8053

M6701_QR_1

Document version 1.2

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP