

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

**Artisan Technology Group**
(217) 352-9330 | sales@artisantg.com | artisantg.com

**Full-service, independent repair center**
with experienced engineers and technicians on staff.

**We buy your excess, underutilized, and idle equipment**
along with credit for buybacks and trade-ins.

**Custom engineering**
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

**Expert team | Trust guarantee | 100% satisfaction**

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

**Visit our website - *Click HERE***

# USER'S MANUAL

# Model DRC-91C

## Temperature Controller

**Obsolete Notice:**

This manual describes an obsolete Lake Shore product. This manual is a copy from our archives and may not exactly match your instrument. Lake Shore assumes no responsibility for this manual matching your exact hardware revision or operational procedures. Lake Shore is not responsible for any repairs made to the instrument based on information from this manual.



Lake Shore Cryotronics, Inc.
575 McCorkle Blvd.
Westerville, Ohio 43082-8888 USA

Internet Addresses:
sales@lakeshore.com
service@lakeshore.com

Fax: (614) 891-1392
Telephone: (614) 891-2243

Methods and apparatus disclosed and described herein have been developed solely on company funds of Lake Shore Cryotronics, Inc. No government or other contractual support or relationship whatsoever has existed which in any way affects or mitigates proprietary rights of Lake Shore Cryotronics, Inc. in these developments. Methods and apparatus disclosed herein may be subject to U S. Patents existing or applied for. Lake Shore Cryotronics, Inc. reserves the right to add, improve, modify, or withdraw functions, design modifications, or products at any time without notice. Lake Shore shall not be liable for errors contained herein or for incidental or consequential damages in connection with furnishing, performance, or use of this material.

Manual No. MAN-DRC-91C

**December, 1987**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SERIAL NUMBER _____

SOFTWARE _____

# I N S T R U C T I O N  M A N U A L

## M O D E L  D R C - 9 1 C
## T E M P E R A T U R E  C O N T R O L L E R

### Input Card Configuration

| | | Input A | Input B |
|---|---|---|---|
| 9210-3 | Standard 3 volt Configuration | ☐ | ☐ |
| -6 | 6 Volt Diode Configuration | ☐ | ☐ |
| 9215-15 | Standard 15 Nanofarad Capacitance Input | ☐ | ☐ |
| -150 | 150 Nanofarad Configuration | ☐ | ☐ |
| 9220-3 | Standard 3 volt Configuration | ☐ | ☐ |
| -6 | 6 Volt Configuration | ☐ | ☐ |
| -P2 | 100 ohm platinum conversion module | ☐ | ☐ |
| -P3 | 1000 ohm platinum conversion module | ☐ | ☐ |
| -R1 | 27 ohm Rh-Fe conversion module | ☐ | ☐ |
| 9305 | Thermocouple Input Card | ☐ | ☐ |
| 9317C | Ultra-low (0.3K) Germanium input Card | ☐ | ☐ |
| 9318C | Germanium/Carbon Glass Input Card | ☐ | ☐ |
| | No Input Card | ☐ | ☐ |

| | | Precision Option(s) | | | |
|---|---|---|---|---|---|
| 8223 RS-232C Interface | ☐ | 8001 | ☐ | 8002 | ☐ |
| 8225 Analog Output Interface (0-10 volt) | ☐ | Output Power Option | | | |
| 8229 Scanner Input Option | ☐ | W50 | ☐ | W60 | ☐ |
| High Resolution Set Point | ☐ | | | | |

This manual applies directly to instruments with Serial Number 16000 and higher.

COPYRIGHT 1987, Lake Shore Cryotronics, Inc.
Westerville, Ohio U.S.A.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

## WARRANTY

Lake Shore Cryotronics, Inc., the manufacturer, warrants this product to the owner for a period of 12 months from the date of shipment. During the warranty period, under authorized return of instruments or component parts to Lake Shore freight prepaid, the company will repair, or at its option replace, any part found to be defective in material or workmanship, without charge to the Owner for parts, service labor or associated customary shipping cost. Replacement or repaired parts will be warranted for only the unexpired portion of the original warranty.

All products are thoroughly tested and calibrated to published specifications prior to shipment. Calibration Certifications are offered for six month periods only. Where such documentation must be updated, a re-certification service is offered by Lake Shore Cryotronics, Inc. at a reasonable cost.

## LIMITATION OF WARRANTY

This warranty does not apply to defects resulting from improper or inadequate maintenance, unauthorized modification or misuse, operation outside of the environmental specifications for any product or part or buyer-supplied software or interfacing.

THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE EXPRESSLY EXCLUDED. THE OWNER AGREES THAT LAKE SHORE'S LIABILITY WITH RESPECT TO THIS PRODUCT SHALL BE SET FORTH IN THIS WARRANTY, AND INCIDENTAL OR CONSEQUENTIAL DAMAGES ARE EXPRESSLY EXCLUDED.

## CERTIFICATION

Lake Shore Cryotronics, Inc. certifies that this product has been inspected and tested in accordance with its published specifications and that this product met its published specifications at the time of shipment.

The accuracy and calibration of this product at the time of shipment are traceable to the United States National Bureau of Standards.

Copyright 12/87

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# TABLE OF CONTENTS

## SECTION I - GENERAL INFORMATION


1.1 INTRODUCTION . . . . . 1-1
1.2 DESCRIPTION . . . . . 1-1
1.3 SPECIFICATIONS . . . . . 1-3
1.4 OPTIONS . . . . . 1-3


## SECTION II - INSTALLATION


2.1 INTRODUCTION . . . . . 2-1
2.2 INITIAL INSPECTION . . . . . 2-1
2.3 PREPARATION FOR USE . . . . . 2-1
2.3.1 Power Requirements . . . . . 2-1
2.3.2 Power Cord . . . . . 2-2
2.3.3 Grounding Requirements . . . . . 2-2
2.3.4 Bench Use . . . . . 2-2
2.3.5 Rack Mounting . . . . . 2-2
2.3.6 Sensor Input Connections . . . . . 2-2
2.3.7 J3 Sensor Output MONITORS . . . . . 2-3
2.3.8 SENSOR ID Switches . . . . . 2-3
2.3.9 Heater Power . . . . . 2-4
2.3.9.1 MAX HEATER POWER Limit . . . . . 2-5
2.3.9.2 Current or Power Output Display . . . . . 2-5
2.4 REMOTE SENSOR ID Connector . . . . . 2-5
2.5 IEEE-488 INTERFACE Connector . . . . . 2-5
2.6 OPTIONS . . . . . 2-6
2.6.1 The RS-232C Option . . . . . 2-6
2.6.2 The 8229 Scanner Option . . . . . 2-6
2.6.3 The 8225 Linear Analog Option . . . . . 2-6
2.6.4 High Resolution Set Point . . . . . 2-6
2.6.5 The 8001 and 8002 Precision Options . . . . . 2-6
2.6.6 The W50 and W60 Power Output Options . . . . . 2-6
2.7 ENVIRONMENTAL REQUIREMENTS . . . . . 2-6
2.7.1 Operating Temperature . . . . . 2-6
2.7.2 Humidity/Altitude . . . . . 2-6
2.8 REPACKAGING FOR SHIPMENT . . . . . 2-6


## SECTION III - OPERATING INSTRUCTIONS


3.1 INTRODUCTION . . . . . 3-1
3.2 INSTRUMENT CONFIGURATION . . . . . 3-1
3.2.1 Input Card Configurations . . . . . 3-1
3.2.2 Single Input Card . . . . . 3-1
3.2.3 Dual Input Cards . . . . . 3-1
3.2.4 Old Version Input Cards . . . . . 3-1
3.3 CURVE ENTRY . . . . . 3-1
3.4 PRECISION OPTIONS . . . . . 3-2
3.4.1 The Model 8000 Precision Option . . . . . 3-2
3.4.2 The Model 8001 Precision Option . . . . . 3-2
3.4.3 The Model 8002-05 Precision Option . . . . . 3-2
3.5 CONTROL FUNDAMENTALS . . . . . 3-2
3.6 CONTROLS AND INDICATORS . . . . . 3-2


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# TABLE OF CONTENTS (Cont'd)

## FRONT PANEL DESCRIPTION


3.7 POWER ON . . . . . 3-2
3.7.1 POWER UP Sequence . . . . . 3-2
3.7.2 POWER-UP Status . . . . . 3-4
3.8 DISPLAY SENSOR Block . . . . . 3-4
3.8.1 DISPLAY SENSOR Input . . . . . 3-4
3.8.2 8229 Scanner Conversion Option . . . . . 3-4
3.8.3 SCAN Function . . . . . 3-4
3.8.4 The SCAN Dwell Time . . . . . 3-4
3.8.5 DISPLAY AND DISPLAY SENSOR Units . . . . . 3-5
3.8.5.1 Units Select . . . . . 3-5
3.8.5.2 Sensor Units Mode . . . . . 3-5
3.8.5.3 Voltage Units . . . . . 3-5
3.8.5.4 Resistance Units . . . . . 3-5
3.8.5.5 Capacitance Units . . . . . 3-6
3.8.6 Display Resolution . . . . . 3-6
3.8.6.1 Temperature Display Resolution Set . . . . 3-6
3.8.7 Filtering the Display . . . . . 3-7
3.9 SENSOR CURVES . . . . . 3-7
3.9.1 Standard Curves . . . . . 3-7
3.9.2 The Precision Option Table . . . . . 3-7
3.10 SENSOR CURVE SELECTION . . . . . 3-8
3.10.1 SENSOR ID Switch 4 Open (0) . . . . . 3-8
3.10.1.1 Display of Accessed Curve . . . . . 3-8
3.10.2 SENSOR ID Switch 4 Closed (1) - No REMOTE SENSOR ID Present . . . . . 3-9
3.10.3 SENSOR ID Switch 4 Closed (1) - REMOTE SENSOR ID Present . . . . . 3-9
3.10.4 Addition of 8229 Scanner Option . . . . . 3-10
3.10.5 Display of Accessed Position and Assigned Curve . . 3-10
3.10.6 Sensor Curve assignment to Sensor Position . . . . . 3-10
3.11 CONTROL BLOCK . . . . . 3-10
3.11.1 SET POINT . . . . . 3-10
3.11.2 GAIN . . . . . 3-10
3.11.3 RATE . . . . . 3-10
3.11.4 RESET . . . . . 3-11
3.11.5 HEATER % . . . . . 3-11
3.11.6 The HEATER POWER RANGE . . . . . 3-11
3.12 LOCAL/REMOTE BLOCK . . . . . 3-11
3.12.1 LOCAL . . . . . 3-11
3.12.2 REMOTE . . . . . 3-11


## REAR PANEL DESCRIPTION


3.13 REMOTE SENSOR ID . . . . . 3-13
3.14 HEATER CURRENT LIMIT . . . . . 3-13


## SECTION IV - REMOTE OPERATION


4-1. IEEE-488 INTERFACE . . . . . 4-1
4.2 GENERAL IEEE SPECIFICATIONS AND OPERATION . . . . . 4-1
4.3 INTERFACE CAPABILITIES . . . . . 4-2




Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.4 DRC-91C IEEE-488 ADDRESS SWITCH . . . . . 4-3
4.4.1 Terminating Characters (delimiters) . . . . . 4-3
4.4.2 Talker and/or Listener Configuration . . . . . 4-3
4.4.3 The IEEE-488 INTERFACE bus address . . . . . 4-5
4.5 IEEE-488 BUS COMMANDS . . . . . 4-5
4.5.1 Uniline Commands . . . . . 4-5
4.5.2 Universal Commands . . . . . 4-5
4.5.3 Addressed Commands . . . . . 4-5
4.5.4 Unaddress Commands . . . . . 4-6
4.5.5 Device-Dependent Commands . . . . . 4-6
4.5.6 Talker and Listener Status . . . . . 4-6
4.6 PROGRAMMING INSTRUCTIONS . . . . . 4-7
4.6.1 Commands and Requests . . . . . 4-8
4.7 INSTRUMENT SETUP COMMANDS AND REQUESTS . . . . . 4-8
4.7.1 EOI Status - The $ZN_1$ Command . . . . . 4-8
4.7.2 Interface Mode - The $MN_1$ Command . . . . . 4-8
4.7.2.1 Local . . . . . 4-8
4.7.2.2 Remote . . . . . 4-10
4.7.2.3 Local Lockout . . . . . 4-10
4.7.3 Terminating Characters - The $TN_1$ Command . . . . . 4-10
4.7.4 Clear . . . . . 4-10
4.7.5 The "W2" Data String . . . . . 4-10
4.7.6 The "WI" Data String . . . . . 4-10
4.8 SELECTION OF SET POINT UNITS, INPUT UNITS, DISPLAY SENSOR, RESOLUTION (Table 4-7) . . . . . 4-10
4.8.1 Units for Set Point - The $F0C_1$ Command . . . . . 4-10
4.8.2 Units for A and B Inputs - The $F1AC_1$ and $F1BC_1$ Commands . . . . . 4-11
4.8.3 Display Sensor Selection - The $F2C_1N_1$ Command . . 4-11
4.8.4 Resolution for A and B Inputs - The $F3AN_1$ and $F3BN_1$ Commands . . . . . 4-11
4.8.5 The A and B SENSOR ID Information - The $AC_1C_2$ and $BC_1C_2$ Commands . . . . . 4-11
4.8.6 The Sensor ID on Return to Local . . . . . 4-11
4.8.7 The "W1" Data String . . . . . 4-13
4.9 THE CONTROL COMMANDS . . . . . 4-13
4.9.1 The Set Point Value - The S Command . . . . . 4-13
4.9.2 The "WP" Request Data String . . . . . 4-14
4.9.3 Setting the GAIN (Proportional) - The P Command . 4-15
4.9.4 Setting the RESET (Integral) - The I Command . . . 4-16
4.9.5 Setting the RATE (Derivative) - The D Command . . 4-16
4.9.6 Heater Range - The R Command . . . . . 4-16
4.9.7 NOTE: The Return to Local . . . . . 4-16
4.9.8 The "W3" Data String . . . . . 4-16
4.10 THE SCANNER INPUT CARD . . . . . 4-16
4.10.1 SCAN Programming Instructions. . . . . 4-16
4.10.2 Setting the Dwell Time - The $YAN_1N_2N_3$ and $YB0N_2N_3$ Commands . . . . . 4-16
4.10.3 Selecting the Scanner Channel - The $YCAC_1$ Command . . . . . 4-16
4.10.4 Enabling the Scan Function - The YS Command . . . 4-16
4.10.5 Holding the Scan Function - The YH Command . . . . 4-17
4.10.6 The "WY" Data String . . . . . 4-17




Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.11 THE SERVICE REQUEST, STATUS REGISTER, STATUS REPORTS, AND THE STATUS REGISTER MASK . . . . . 4-17
4.11.1 The Service Request . . . . . 4-18
4.11.2 The Status Register and Status Reports . . . . . 4-18
4.11.2.1 Status Reports 0 and 1 - Display and Control Data Ready . . . . . 4-18
4.11.2.2 Status Report 2 - The Control Channel Limit . . . . . 4-18
4.11.2.3 Status Report 3 - Display Sensor Channel Change . . . . . 4-19
4.11.2.4 Status Report 5 -Overload Error Indicator 4-19
4.11.2.5 When operating without the Service Request 4-19
4.11.3 The Status Register Mask - The $QC_1C_2$ Command . . . 4-19
4.11.3.1 Status Register Mask Bits 0 and 1 - Display and Control Data Ready Enables . 4-20
4.11.3.2 Status Register Mask Bit 2 - The Control Channel Limit Enable . . . . 4-20
4.11.3.3 Status Register Mask Bit 3 - Display Sensor Channel Change Enable . . 4-20
4.11.3.4 Status Register Mask Bit 5 - Overload/Error Indicator Enable . . . . . 4-20
4.11.3.5 Examples for setting Mask . . . . . 4-21
4.11.3.6 Status Register Mask at Power up . . . . 4-21
4.11.4 The "WQ" Data String . . . . . 4-23
4.12 Command Operations . . . . . 4-23
4.12.1 Output Data Statemants . . . . . 4-23
4.12.2 The "W0" Data String . . . . . 4-23
4.13 Sample Programming . . . . . 4-24
4.13.1 HP86B Keyboard Interactive Program . . . . . 4-24
4.13.2 National Instruments IBM Example . . . . . 4-25
4.13.3 National Instruments QUICK BASIC IBM Example . . . 4-25
4.13.4 HP86B Bus Commands Program . . . . . 4-26
4.14 SENSOR CURVE PROGRAMMING INSTRUCTIONS . . . . . 4-27
4.14.1 The XDT Command . . . . . 4-27
4.14.2 The $XDN_1N_2$ Command . . . . . 4-27
4.14.3 The XDA Command . . . . . 4-30
4.14.4 The $XCN_1N_2$ Command . . . . . 4-30
4.14.5 The $XEN_1N_2$ Command . . . . . 4-31
4.14.6 The $XKN_1N_2$* Command . . . . . 4-31
4.14.7 The $XAC_1C_2=N_1N_2$* and $XBC_1C_2=N_1N_2$* Commands . . . . 4-31

**SECTION V - MAINTENANCE**

5.1 INTRODUCTION . . . . . 5-1
5.2 GENERAL MAINTENANCE . . . . . 5-1
5.3 FUSE REPLACEMENT . . . . . 5-1
5.4 LINE VOLTAGE SELECTION . . . . . 5-1
5.5 PERFORMANCE VERIFICATION . . . . . 5-2
5.5.1 Performance Verification Connector . . . . . 5-2
5.5.2 Performance Verification Procedure . . . . . 5-2
5.6 CALIBRATION . . . . . 5-2
5.6.1 Input Card Calibration . . . . . 5-2
5.6.2 Set Point Voltage Calibration . . . . . 5-2


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# TABLE OF CONTENTS (Cont'd)


5.6.3 Calibration of GAIN, RATE and RESET . . . . . 5-3
5.6.4 Calibration of Power Output . . . . . 5-3
5.7 TROUBLESHOOTING . . . . . 5-4

**SECTION VI - ACCESSORIES, INPUT CARDS AND OPTIONS**

**APPENDIX A - Standard Curve Data**

**APPENDIX B - Sensor Curve Character Information**

**APPENDIX C - Error Code Summary**


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# LIST OF TABLES AND ILLUSTRATIONS

## SECTION I - GENERAL INFORMATION


Table 1-1. Specifications, Model DRC-91C Temperature Controller . . 1-4


## SECTION II - INSTALLATION


Table 2-1. Line Voltage Selection . . . . . 2-1
Figure 2-1. Typical Rack Configuration . . . . . 2-2
Table 2-2. INPUT Connections for J1 INPUT A and J2 INPUT B . . 2-2
Figure 2-2. Sensor Connections . . . . . 2-2
Table 2-3. J3 MONITORS Connections. . . . . 2-3
Figure 2-3. SENSOR ID Definitions . . . . . 2-3
Table 2-4. SENSOR ID Standard Curve Address . . . . . 2-4
Table 2-5. REMOTE SENSOR ID Connector Assignments. . . . . 2-4


## SECTION III - OPERATING INSTRUCTIONS


Figure 3-1. DRC-91C Temperature Controller - Front Panel. . . . . 3-3
Table 3-1. SYSTEM RESOLUTION VERSUS SENSOR SENSITIVITY . . . . . 3-5
Table 3-2. Standard Curve Information . . . . . 3-6
Table 3-3. Sensor Curve Table Information - Precision Option Table 3-7
Table 3-4. Position # versus Curve # Correlation Table - SENSOR ID Switch 4 = 1 . . . . . 3-8
Figure 3-3. Reset and Rate Ties for 91C . . . . . 3-9
Figure 3-2. DRC-91C Temperature Controller - Rear Panel . . . . . 3-10
Table 3-5. Pin Assignments for the J5 REMOTE SENSOR ID Connector 3-11


## SECTION IV - REMOTE OPERATION


Table 4-1. Interface Functions. . . . . 4-2
Figure 4-1. IEEE-488 Address Switch for the DRC-91C . . . . . 4-3
Table 4-2. Allowable Address Codes for the DRC-91C . . . . . 4-4
Table 4-3. IEEE-488 Bus Commands . . . . . 4-6
Table 4-4. DRC-91C Program Code Summary - Instrument Setup . . . 4-7
Table 4-5. DRC-91C Summary of Output Requests. . . . . 4-8
Table 4-6. DRC-91C Interface Setup Commands and Request Status . 4-9
Table 4-7. DRC-91C Command Summary for Instrument Setup. . . . . 4-12
Table 4-8. DRC-91C Output Request Summary for Instrument Setup . 4-13
Table 4-9. DRC-91C Command/Request Summary for Setpoint Setup. . 4-14
Table 4-10. DRC-91C Command/Request Summary for the Control Parameters. . . . . 4-15
Table 4-11. DRC-91C Command/Request Summary for Scanner . . . . . 4-17
Table 4-13. DRC-91C Command/Request Summary for Status Register Mask. . . . . 4-21
Figure 4-2. DRC-91C SRQ MASK and Status Byte Format . . . . . 4-22
Table 4-14. Commands to Fix the Status Register Mask . . . . . 4-22
Table 4-15. DRC-91C Output Data Statements . . . . . 4-24
Table 4-16. Sensor Curve Commands and Description . . . . . 4-28
Table 4-17. Sensor Curve Information Table Output Format . . . . 4-29
Table 4-18. $XDN_1N_2$ Sensor Curve output Format . . . . . 4-29
Table 4-19. Conversion of Raw Units Data for the XC Command . . . 4-32




Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# S E C T I O N I

# G E N E R A L I N F O R M A T I O N

## 1.1 INTRODUCTION

The information contained in this operations manual pertains to the installation, operation, remote programming, options and accessories for the Lake Shore Cryotronics, Inc. Model DRC-91C Temperature Controller. This manual also contains troubleshooting and calibration procedures, schematics, component layouts and a complete parts list.

This section contains general information for the Lake Shore Cryotronics, Inc. DRC-91C Temperature Controller. Included is an instrument description, specifications, instrument identification, option and accessory information.

## 1.2 DESCRIPTION

The DRC-91C Temperature Controller is a microprocessor based instrument which provides true analog control. It is capable of scanning multiple sensor inputs and displaying temperature with up to 5 digits of resolution in K, °C or °F or sensor units (volts, ohms or nanofarads) to five digits.

The DRC-91C can be used with either 1 or 2 input cards. When two input cards are used, these cards can be different to allow two separate types of sensors to be used with the controller.

The dual sensor input with the optional 8229 Scanner Conversion Card expand the input capability of the DRC-91C to up to 6 input sensors. Depending on the input option selected, the DRC-91C handles silicon (9210-3 or 9220-3) or the patented Gallium-Aluminum-Arsenide (9210-6 or 9220-6) diodes, platinum or rhodium-iron resistors (9220 series), germanium or carbon glass resistors (9317C, 9318C), or capacitance sensors (9215).

With or without the 8229 Scanner Card, the DRC-91C can be set to scan automatically with an individual dwell time of 1 to 99 seconds per channel or stepped to any available input and held there. Setting the dwell time to zero causes a particular channel to be skipped. If all dwell times are zero, the instrument stays on the channel selected.

The DRC-91C gives a direct reading in temperature when used with any DT-470 Series Temperature Sensor. All DT-470 Sensors follow the same temperature response curve. Four bands of tracking accuracy are available. Refer to DT-470 technical data for details.

Diode sensor voltages are digitized to a resolution of 100 microvolts with full scale dependent on input card configuration. The temperature display has a resolution capability of 0.01 kelvin above 100 kelvin and 0.001 kelvin below 100 kelvin.

For greater precision individual sensor calibrations can be accommodated with the 8001 Precision Calibration Option which programs the instrument with calibration data for a specific Sensor. The algorithm within the instrument

COPYRIGHT 1/88 LSCI


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

interpolates between data points to an interpolation accuracy which exceeds 0.01K over the entire temperature range of the Precision Option. The 16 bit analog-to-digital converter is accurate to plus or minus the least significant bit, which for the 470 series sensor results in an uncertainty of 1mK below 28K and 45mK above 40K with a transitional region between these two temperatures. Therefore, at temperatures below 28K, the overall system accuracy, the sum of the instrument accuracy (11mK) and that of the calibration itself (Lake Shore calibrations are typically better than 20mK within this region) is ± 0.03K. Above 28K, system accuracy gradually moderates to a typical value of ±75mK above 40K. See the Lake Shore Cryotronics, Inc. Low Temperature Calibration Service brochure for additional discussion of calibration accuracy.

The Model DRC-91C can also be used with the 9220 input card which handles both diodes and positive temperature coefficient metallic resistors., i.e., platinum or rhodium-iron resistors. The DIN curve is standard within the instrument and is called up automatically unless a positive temperature coefficient precision option is selected by the SENSOR ID for that input. The accuracy of the reading is dictated by the sensor and its conformity to the DIN curve. The tolerance on these devices is given on the technical data sheet for the Lake Shore PLATINUM RTDs. The combined accuracy of the instrument and a calibrated resistor with a precision option is on the order of 40mK over the useful range of the sensor (above 40K for the platinum). Note that a precision option is required for a rhodium-iron to read correctly in temperature.

The Model DRC-91C with the 9318C germanium/carbon-glass input card results in the most accurate system below 50K in temperature. For both sensors, a precision option is required to read in temperature. Near 4K, the overall accuracy of the system, including the calibration accuracy, the software interpolation accuracy and the calculation of the resistance results in an overall accuracy on the order of 10mK.

These input option cards are easily installed by the user; thus, units can be changed or upgraded to satisfy changing requirements.

The ample memory space provided in the DRC-91C allows several response curves to be stored in the instrument. Depending on the complexity of the curves, up to 25 can be programmed into the unit. A rear-panel DIP switch (Sensor ID) is used to select the particular sensor response curve for each input.

The data for calibrated sensors can be stored in the instrument as an 8001 Precision Option or by the customer via the IEEE-488 interface. These curves can contain up to 99 sensor temperature data points. With the standard precision option format of 31 data points and an 18 character information line, up to twenty curves can be stored.

Although data points are stored as a table, the interpolation algorithm used results in the equivalent of a high order Chebychev polynomial calculation in the converting of the input voltage



COPYRIGHT 1/88 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

(or resistance) to temperature. This is done by means of a proprietary algorithm developed at Lake Shore Cryotronics.

An averaging algorithm can be selected to average up to ten temperature readings. This mode eliminates noise within the system analogous to averaging with a digital voltmeter. This averaging mode can be deselected by switch 2 of the SENSOR ID dip switch on the back panel for a given input if the customer prefers not to average readings.

The control set-point selection is made via increment and decrement buttons on the front panel. The display above the buttons indicates the set-point value. The set-point units may be selected independently from the display sensor units.

The standard set point temperature can be set to 0.1 degree. This temperature is converted to an equivalent voltage with a resolution of 100 microvolts out of 3 volts full scale. The optional High Resolution Set Point expands the set point resolution to 0.01 kelvin above 100K and 0.001 kelvin below 100K. the equivalent voltage is expanded to 25 microvolts out of 3 volts full scale. This results in a setability of approximately 0.01 kelvin above 40K and 0.001 kelvin below 28K for the DT-470 series sensors.

The control section of the DRC-91C provides three-term temperature control. Proportional (GAIN), integral (RESET) and derivative (RATE) are individually tuned via front-panel potentiometers. The gain, reset and rate are in a nominal log per cent.

Heater power output of the DRC-91C Temperature Controller is a maximum of 25 watts when a 25 ohm heater is used. A digital meter on the front panel displays the output as a percentage of output range selected. Thus, the user can conveniently monitor power applied to his system. To accommodate systems which require lower heater power, the maximum output can be attenuated in three steps of a decade each. When greater output power is required, the optional W50 and W60 output stages can provide either 50 or 60 watts respectively.

An IEEE-488 interface is standard in the DRC-91C. This interface can be used to remotely control all front-panel functions. When two input cards are used, data from both inputs is available via the interface.

### 1.3 SPECIFICATIONS

Instrument specifications are listed in Table 1.1. These specifications are the performance standards or limits against which the instrument is tested.

### 1.4 OPTIONS

The options for the DRC-91C Controller are listed in Section VI.

Three option ports are designed into the DRC-91C. The options are field installable by the user.

822x-series options can be factory installed in the DRC-91C or field-installed at a later time. The 8223 RS-232C Interface Option operates similar to the IEEE-488 interface. The Model 8225 Analog Output option is available to provide a linearized analog output

COPYRIGHT 1/88 LSCI


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

of 10mV/K independent of the display temperature units. If the display is in sensor units, the output for diodes is 1V/V; for 100 ohm platinum, 10mV/ohm; for 1000 ohm platinum, 1mV/ohm; for rhodium-iron, 100mv/ohm; and for capacitance units, 100mV/nF and 10mV/nF.

The Model 8229 Scanner Option provides four additional channels of sensor input to the "A" input. The A input is channel A0 with the additional inputs designated A1-A4 with the selection indicated on the display.

**Table 1.1. Specifications, Model DRC-91C Temperature Controller**

**Input Characteristics:**

**Inputs:** Two Sensor Inputs. The 8229 Scanner Conversion Option provides for four additional channels of Sensor Input. Display sensor can be selected from front panel or interface, or display can be set to scan between sensor inputs. Dwell time per channel can be set independently from 0 (skip) to 99 seconds. Input characteristics are a function of Sensor Input Option Installed. The DRC-91C can accommodate two input options which allows the A input and the B input to each be assigned their own input card. This allows concurrent use of different sensors dependent on the application.

**Sensors:** Ordered Separately. DRC-91C will handle all types of diodes; germanium, carbon glass, carbon, etc. negative temperature coefficient resistors, thermistors; platinum, rhodium-iron, etc. metallic resistors and thermocouples as well as capacitance thermometers with proper choice of input option cards. See the Lake Shore Cryotronics, Inc. Sensor catalog for details on the above Sensors.

**Display Readout:**

**Display:** 5-digit LED Display of Sensor reading in Sensor Units (Volts, Ohms or Nanofarads) or temperature in K, °C, or °F shown with annunciators.

**Resolution:** Display resolution is 0.001K below 100K, 0.01K above 100K (0.0001K below 10K for 9317C Resistance Sensor Input Card). Resolution can be user-limited to 1K, 0.1K or 0.01K. Same resolution considerations apply for °C, °F and Sensor Units. Changes made by front panel keys or over interface.

**Temperature Accuracy:** Dependent on Sensor Input Card and Sensor. See Input Options available.

**Temperature Range:** Dependent of Sensor Input Card and Sensor.

**Temperature Control:**

**Set Point:** Button increment (either fast or slow) of set-point in set-point units.

**Set Point Resolution:** Selection in kelvin, celsius, fahrenheit or Sensor Units. Temperature to 0.1 in corresponding units; in Sensor Units, 0.1mV in voltage, 0.01 ohms but limited to five digits in resistance and 0.001 nanofarads out of 15 nanofarads (0.01 nanofarads out of 150 nanofarads for second scale) in capacitance. May also be set over the interface.



COPYRIGHT 1/88 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

**Typical Controllability:** Dependent on Sensor, its temperature and the resultant Sensor "gain", i.e., sensitivity. Typically better than 0.001K in a properly designed system below 30K and 10mK above 30K using a Diode Sensor. But, for example, a thermistor, due to its large sensitivity, may result in a controllability approaching 0.5mK above 200K over a narrow temperature range in certain systems and a germanium below 10K may control to 0.1mK in another system.

**Control Modes:** Proportional (GAIN), integral (RESET) and derivative (RATE). Set via front-panel knobs or with interface.

**Heater output:** Up to 25 watts (1A,25V) standard. Four output ranges can be selected either from front-panel or interface and provide approximate decade step reductions of maximum power output. Optional 50 or 60 watt outputs available. Rear panel maximum current limit for MAX scale.

**Heater output Monitor:** LED display continuously shows heater current or power output as a percentage of range with a resolution of 1%.

**Control Sensor:** Either Sensor Input (designated from rear panel).

**General:**

**Sensor Voltage Monitor:** For 9210 and 9220 diode Option configurations (-3, -6), buffered output of diode sensor voltage. Multiplier is 0.457771 for -6 configurations. For 9220 Option positive temperature coefficient configurations (-P2, -P3, -R1), buffer is sensor voltage output times -10. Buffered outputs for 9210-6 and 9220-6 are multiplied by 0.457771. For 9215, signal is proportional to capacitance value; for 9317C or 9318C, monitor not of use.

**Response time (electronics):** Less than 1 second to rated accuracy for non-Lagrangian calculations. Lagrangian curves result in update times between one and two seconds. Three readings on channel change or range change to reach rated accuracy.

**IEEE-488 Interface:** Allows remote control of set-point, gain, rate, reset, units and heater power range. Provides output of display in units chosen, units and all front panel functions (except power on/off and Display Sensor Selection). Allows input of curve data for calibrated sensors.

**Dimensions, Weight:** 432mm wide x 102mm high x 330mm deep (17in. x 4in. x 13in.) Style L, full-rack package. Net weight 8kg (17 lb.).

**Power:** 90-110, 105-125, or 210-250 VAC (selected via rear panel with instrument off), 50 or 60 Hz, 75 watts.

**Accessories Supplied:** Mating connector for sensor/monitor connector, instruction manual.

COPYRIGHT 1/88 LSCI


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# S E C T I O N I I

# I N S T A L L A T I O N

## 2.1 INTRODUCTION

This Section contains information and instructions pertaining to instrument set-up. Included are inspection procedures, power and grounding requirements, environmental information, bench and rack mounting instructions, a description of interface connections, and repackaging instructions.

## 2.2 INITIAL INSPECTION

This instrument was electrically, mechanically and functionally inspected prior to shipment. It should be free from mechanical damage, and in perfect working order upon receipt. To confirm this, the instrument should be visually inspected for damage and tested electrically to detect any concealed damage upon receipt. Be sure to inventory all components supplied before discarding any shipping materials. If there is damage to the instrument in transit, be sure to file appropriate claims promptly with the carrier, and/or insurance company. Please advise Lake Shore Cryotronics, Inc. of such filings. In case of parts shortages, advise LSCI immediately. LSCI can not be responsible for any missing parts unless notified within 60 days of shipment. The standard Lake Shore Cryotronics Warranty is given on the first page of this manual.

## 2.3 PREPARATION FOR USE

### 2.3.1 Power Requirements

The Model DRC-91C requires a power source of 100, 120, 220 or 240 VAC (+5%, -10%), 50 to 60 Hz single phase.

**CAUTION**

Verify that the AC Line Voltage Selection Wheel (Figure 3-2, Key 1) located on the rear panel of the Model DRC-91C is set to the AC voltage to be used (Table 2-1) and that the proper fuse is installed before inserting the power cord and turning on the instrument.

**Table 2-1. Line Voltage Selection**


| Line Voltage (Volts) | Operating Range (Volts) | Fuse (A) |
|---|---|---|
| 100 | 90-105 | 1 - SB |
| 120 | 108-126 | 1 - SB |
| 220 | 198-231 | 0.5- SB |
| 240 | 216-252 | 0.5- SB |

COPYRIGHT 12/87 LSCI



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

**Figure 2-1. Typical Rack Configuration**

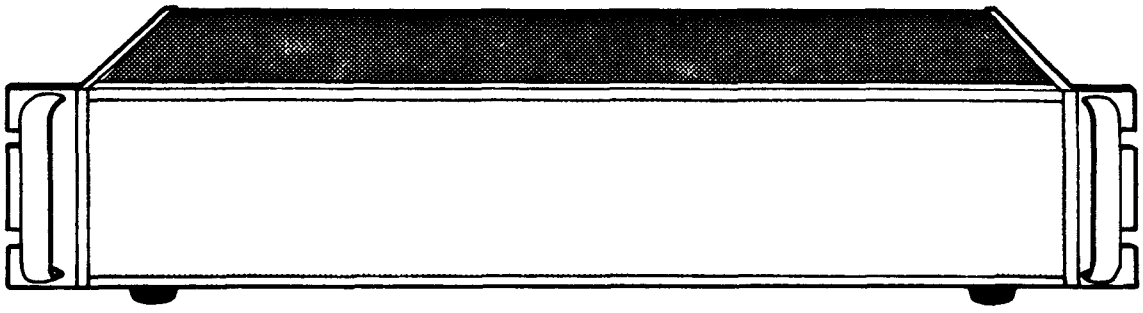

### 2.3.2 Power Cord

A three-prong detachable power cord for 120 VAC operation which mates with the rear panel UL/IEC/ICEE standard plug is included with the instrument.

### 2.3.3 Grounding Requirements

To protect operating personnel, the National Electrical Manufacturer's Association (NEMA) recommends, and some local codes require, instrument panels and cabinets be grounded. This instrument is equipped with a three-conductor power cable which, when plugged into an appropriate receptacle, grounds the instrument.

### 2.3.4 Bench Use

The DRC-91C is shipped with plastic "feet" and a tilt stand installed and is ready for use as a bench instrument. The front of the instrument may be elevated for convenient operation and viewing by extending the tilt stand.


### 2.3.5 Rack Mounting


The DRC-91C can be installed in a standard 19 inch instrument rack by using the optional RM-3F or RM-3F-H rack mounting kit. A typical RM-3F-H kit installation is shown in Figure 2-1.


### 2.3.6 Sensor Input Connections

The DRC-91C has two rear panel 5-pin input connectors for diode and resistance sensors. The lead connection definition for the sensor(s) is given in Table 2-2 and is shown in Figure 2-2.

**Figure 2-2. Sensor Connections**

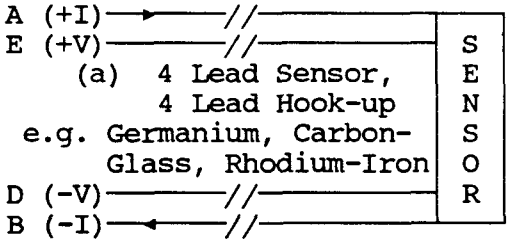

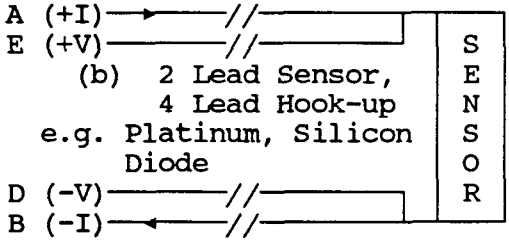

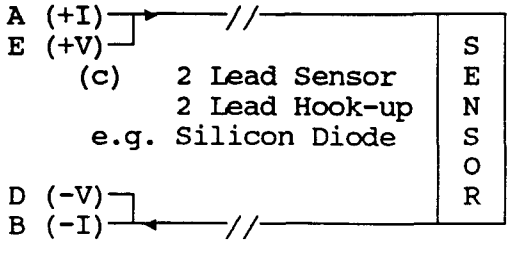COPYRIGHT 12/87 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Connections for capacitance sensors and thermocouples are made through alternate connectors. Refer to the appropriate input card section for sensor connections.

The four lead connection (a) is required for a four lead sensor.

The use of a four wire connection (Figure 2-2b) is highly recommended for two lead resistive elements and diodes to avoid introducing IR drops in the voltage sensing pair which translates into a temperature measurement error.

An alternate two line wiring method (Terminals A and E shorted together, B and D shorted) may be used for the DT-470 and TG-120 series diodes in less critical applications where lead resistance is small and small readout errors can be tolerated (c). Measurement errors due to lead resistance for a two lead hook-up can be calculated using; $\delta T = IR/[dV/dT]$ where I is 10 microamperes, R is the total lead resistance; dV/dT is the diode sensitivity and $\delta T$ is the measurement error. For example, R = 250Ω with dV/dT = 2.5 mV/K results in a temperature error of 1 kelvin. Two wire connections are not recommended for other sensor types.

**Table 2-2. INPUT Connections for J1 Input A and J2 Input B**

| Terminal | Description |
|---|---|
| A | + Current Out |
| B | - Current Out |
| D | - Voltage Sense |
| E | + Voltage Sense |
| H | Shield |

The Lake Shore Cryotronics, Inc. QUAD-LEAD™ 36 Gauge Cryogenic wire is ideal for connections to the sensor since the four leads are run together and color-coded. The wire is Phosphor Bronze with a Formvar insulation and Butryral bonding between the four leads. Color coding is red, green, clear and blue on the four leads which makes it extremely easy to determine one wire from another.

### 2.3.7 J3 Sensor Output MONITORS

Buffered voltage outputs for both Sensor Input A and B are available on the J3 connector on the back panel of the instrument. The voltage from the Model 8225 Analog Output Option is present on this connector also. The connector pin assignments are given in Table 2-3.

**Table 2-3. J3 MONITORS Connections**

| Terminal | Description |
|---|---|
| A | Voltage Output (Input A) |
| B | Voltage Output (Input B) |
| C | 10 mV/K Analog Output |
| D | Ground for Analog Output |
| E | Setpoint Output |
| F | Ground (A + B, Setpoint) |
| H | (Optional Shield) |

### 2.3.8 SENSOR ID Switches


The A SENSOR ID and B SENSOR ID switches determine slope for a 9215 capacitance input card, if present, activate or deactivate digital filtering and enables thermal averaging on the 9317C or 9318C resistance input card when present or ice-point compensation when a 9305 thermocouple input card is present. Switch 4 determines whether Switches 5-8 select a stored curve directly or a curve via the position correlation table, i.e., a table of position versus curve number for non-thermocouple inputs. Switches 5-8 define the thermocouple type when a 9305 thermocouple input card is present. The switch information is described in Figure 2-3.

COPYRIGHT 12/87 LSCI


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 2-4 indicates the position of the address switches to select standard curves stored within the instrument. Information on Precision Option Curves is given in Appendix B.

**Figure 2-3. SENSOR ID Definitions**

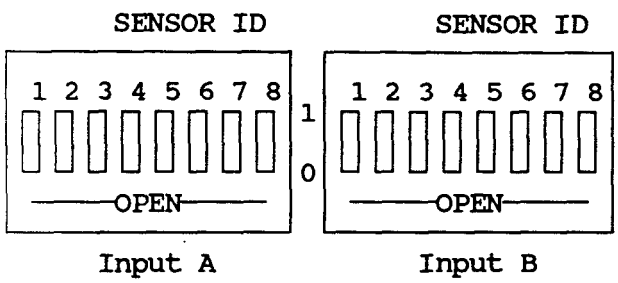


| Switch | Setting | Description |
|---|---|---|
| 1 | OPEN<br>CLOSED | - Negative T. C.<br>- Positive T. C. |
| 2 | OPEN<br>CLOSED | - Continuous Update<br>- Digital Filter On |
| 3 | OPEN<br>CLOSED | - No Thermal Cnsdrd<br>- Thermal Considered |
| 4 | OPEN<br>CLOSED | - Curve Selection<br>- Position selection |
| 5 | | Multiple Bit 3 |
| 6 | | Multiple Bit 2 |
| 7 | | Multiple Bit 1 |
| 8 | | Multiple Bit 0 |

**Table 2-4. SENSOR ID Standard Curve Address**

| SENSOR ID 4 5 6 7 8 | Crve # | Non-TC Card | TC Card |
|---|---|---|---|
| 0 0 0 0 0 | 00 | DRC-D | Au0.07%Fe |
| 0 0 0 0 1 | 01 | DRC-E1 | Au0.03%Fe |
| 0 0 0 1 0 | 02 | CRV 10 | E |
| 0 0 0 1 1 | 03 | DIN-PT | K |
| 0 0 1 0 0 | 04 | CRV 10 | T |
| 0 0 1 0 1 | 05 | RSVRD | RSVRD |

See SECTION III for more information on sensor selection and the operation of the SENSOR ID switches and J5 REMOTE SENSOR ID. Note that Curve 10 is given twice; Curve 02 has a set point limit of 325K and Curve 04 has an upper limit of 475 kelvin. Switch 4 of the SENSOR ID, must be 0 for the instrument to read the curve directly from the rear panel SENSOR ID hardware.

If a thermocouple card is present, the SENSOR ID switches select the appropriate thermocouple table instead of the diode or platinum curves.

### 2.3.9 Heater Power

The heater output leads should be electrically isolated from the sensor(s) ground(s) to preclude the possibility of any of the heater current affecting the sensor input signal. The heater leads should not run coincident with the sensor leads due to the possibility of capacitive pick-up between the two sets of leads. If they are in close proximity, they should be wound so as to cross the sensor leads at ninety degrees if at all possible.

The heater output is a current drive and does not have to be fused. The DRC-91C is designed to power a 25 ohm heater for maximum heater output. If a smaller resistance is used, the maximum heater power corresponds to the heater resistance, i.e., 10 ohms yields 10 watts. A larger heater can also be used. Since the compliance voltage is 25 volts; a 50 ohm heater will allow a maximum power output of 12.5 watts $[(25)^2/50]$.

Two optional output power stages (W50 and W60) of 50 and 60 watts respectively are available for the DRC-91C. The W50 is rated at 1 ampere and 50 volts (into 50 ohm



COPYRIGHT 12/87 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

load) while the W60 is rated at 1.5 amperes at approximately 43 volts (into 25 ohm load).

A 50 ohm, 50 watt (1/4" dia. x 1" long) cartridge heater is available as well as a 25 ohm, 25 watt (3/8" dia. x 1" long) cartridge heater.

A 30 gauge stranded copper lead wire (ND-30) is recommended for connecting to the heater.

#### 2.3.9.1 MAX HEATER POWER Limit

Make sure that the MAX HEATER POWER limit potentiometer is turned fully clockwise during the setup of the instrument so that full power is available on the MAX power scale, if desired. Fully clockwise corresponds to approximately 1 ampere while fully counterclockwise corresponds to the -1 range (330mA).

#### 2.3.9.2 Current or Power Output Display

The HEATER % meter can be set to read either % of output power or % of output current. The internal DIP switch setting (main board S7, switch 1) controls whether the meter reads in % current (closed) or % power (open). The DRC-91C is shipped to read in % power.

### 2.4 REMOTE SENSOR ID Connector

The REMOTE SENSOR ID connector, J5, on the rear panel receives POSITION DATA from a Model 8084 or 8085 Sensor Scanner or a Model SW-10A Ten-Sensor Selector Switch. The REMOTE SENSOR ID Interconnecting Cable and REMOTE SENSOR ID connector assignments are given in Table 2-5.

**Table 2-5. REMOTE SENSOR ID Connector Assignments**

| REMOTE SENSOR ID Connector Pin | Function |
|---|---|
| 10 | Bit 0 (B0-LSB) |
| 8 | Bit 1 (B1) |
| 6 | Bit 2 (B2) |
| 4 | Bit 3 (B3) |
| 14 | Bit 4 (B4-MSB) |
| 12 | Digital Ground |

The POSITION DATA is the binary representation of the remote position. Table 3-4 gives the POSITION DATA binary combinations. The remote position input can be used to select specific sensor curve tables stored in the DRC-91C. The correlation between remote position and sensor curve is given in Section III. The REMOTE SENSOR ID can be expanded to allow for the use of up to three 8084 or 8085 Sensor Scanners with the 8082 Position Data Adapter. Remote position 1F (31) is reserved to indicate that more than one scanner is active to the 8082. When this condition is present, the DRC-91C displays ERR09 until the fault is corrected.

### 2.5 IEEE-488 INTERFACE Connector

The IEEE-488 Connector on the back of the DRC-91C is in full compliance with the IEEE Standard 488-19-78. The connector has metric threaded mounting studs, visually indicated by the color black. Metric threaded cable lockscrews (also black) must be used to secure an IEEE-488 interface cable to the instrument. Model 8072 IEEE-488 Interconnect Cables (one meter long) are available from Lake Shore.

COPYRIGHT 12/87 LSCI


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

## 2.6 OPTIONS

**2.6.1 The 8223 RS-232C Interface.** The RS-232C option is described in Section VI of this manual including connections.

**2.6.2 The 8225 Linear Analog output** is described in Section VI of this manual.

**2.6.3 The 8229 Scanner Input Option** is described in Section III and Section VI of this manual.

**2.6.4 The High Resolution Set Point** expands the set point resolution to 0.01 kelvin above 100K and 0.001 kelvin below 100K. The equivalent voltage is expanded to 25 microvolts out of 3 volts full scale. This results in a setability of approximately 0.01 kelvin above 40K and 0.001 kelvin below 28K for the DT-470 series sensors.

**2.6.5 8001 Precision Option.** Custom programming of specific Sensor calibration curve(s) at factory. Provides highest degree of readout accuracy.

**2.6.6 The W50 and W60 Output Options** will deliver 50 or 60 watts respectively. The W50 is rated at 1 ampere and 50 volts into a 50 ohm load with the W60 rated at 1.5 amperes at approximately 43 volts into a 25 ohm load. These are factory options only.

## 2.7 ENVIRONMENTAL REQUIREMENTS

WARNING

> To prevent electrical fire or shock hazards, do not expose the instrument to rain or excess moisture.

### 2.7.1 Operating Temperature

In order to meet and maintain the specifications in Table 1-1, the DRC-91C should be operated at an ambient temperature range of 23°C ± 5°C. The unit may be operated within the range of 15-35°C with less accuracy.

### 2.7.2 Humidity/Altitude

The DRC-91C is for laboratory use and no humidity or altitude specifications have been determined for this unit.

## 2.8 REPACKAGING FOR SHIPMENT

If the Model DRC-91C appears to be operating incorrectly, refer to the Technical Service Guide for troubleshooting advice. If these tests indicate that there is a fault with the instrument, contact LSCI or a factory representative for a Return Goods Authorization (RGA) number before returning the instrument to our service department.

When returning an instrument for service, the following information must be provided before Lake Shore can attempt any repair.

1. Instrument Model and Serial #s
2. User's Name, Company, Address, and Phone Number
3. Malfunction Symptoms
4. Description of system
5. Returned Goods Authorization #

If the original carton is available, repack the instrument in a plastic bag, place it in the carton using original spacers to protect protruding controls. Seal the carton with strong paper or nylon tape. Affix shipping labels and "FRAGILE" warnings.

If the original carton is not available, pack the instrument similar to the above procedure, being careful to use spacers or suitable packing material on all sides of the instrument.



COPYRIGHT 12/87 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# SECTION III

# OPERATING INSTRUCTIONS

## 3.1 INTRODUCTION

This section contains information and instructions concerning the operation of the Model DRC-91C Temperature Controller. Included is a description of the front and rear panel controls and indicators.

## 3.2 INSTRUMENT CONFIGURATION

### 3.2.1 Input Card Configurations

The Model DRC-91C can be used with either one or two input cards. The input cards available for use with the DRC-91C are summarized in Section I. The input cards available allow the 91C to be used with almost any type of cryogenic sensor. Input cards can be mixed, allowing two different sensor types to be used with the DRC-91C.

### 3.2.2 Single Input Card

When only one input card is present within the unit, it occupies the A INPUT CARD slot of the DRC-91C mainframe and is connected to the Sensor A input of the controller. Only one sensor can be used with the controller under these conditions.

### 3.2.3 Dual Input Cards

When two input cards are present in the unit, the input card that occupies the A INPUT CARD slot is routed to the Sensor A input and the input card that occupies the B INPUT CARD slot is routed to the Sensor B input. Consequently, both sensors are energized at all times.

The second input card allows the instrument to mix sensor types, e.g., both a diode thermometer and a resistance thermometer can be used on the two inputs. Another possibility with the 9318C and 9220 Options would be the presence of a GR-200A Series Germanium Sensor as well as a PT-100 Series Platinum Resistance Sensor. Both inputs are updated independently, which allows them both to be queried under IEEE-488 or RS-232C control independent of which input is displayed.

The addition of the 8229 Sensor Scanner Option adds capability for 4 additional inputs to the A channel resulting in up to 5 sensors of the same type being allowed on inputs A, A1, A2, A3 and A4.

### 3.2.4 Old Version Input Cards

The 8210, 8211 diode input cards can be used in the 91C as well as the 8219 series resistance input card. The installation of these cards is covered in Section VI of this manual. Note that there are Dip Switch settings on the main board which must be set in order for these older cards to work properly.

## 3.3 CURVE ENTRY

The DRC-91C allows the user to enter his own sensor calibration over the remote interface. Section IV of the manual covers entry over the IEEE-488 or RS-232C interfaces. The curve is stored in a battery back-up non-volatile RAM (NOVRAM) which can be read and wrote to an unlimited number of times and that the number of data points stored per curve can be anywhere between 2 and 99; two being the lower limit which defines a straight line.

COPYRIGHT 12/87 LSCI



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

## 3.4 PRECISION OPTIONS

### 3.4.1 The Model 8000 Precision Option

There are three types of Precision Options available for the DRC-91C. The Model 8000 Precision Option generates the data table from a Lake Shore calibrated sensor. The upper limit of data points is again 99, with a typical calibration ranging between 30 and 40 points, depending on sensor type and temperature range for the calibration. The data and accuracy of the fit is supplied to the user as a separate document. This information can then be entered by the user over the computer interface.

### 3.4.2 The Model 8001 Precision Option

Lake Shore can also generate custom sensor response curves from the individual sensor calibrations as indicated above and store them in the DRC-91C via the 8001 Precision Option prior to shipment. The data and accuracy of the fit is then supplied to the user as a Appendix to this manual.

### 3.4.3 The Model 8002-05 Precision Option

The 8002 Precision Option is used when the customer already owns a DRC-91C and wants new sensor calibration data stored in the instrument. LSCI stores the calibration data in a NOVRAM and sends the programmed chip to the customer. The PROM is then installed in the DRC-91C by the customer.

Note that additional calibrations can be added to the instrument at a later time by specifying with the sensor calibration at time of order, the serial number of the instrument and with which input the sensor will be associated if remote operation is used.

## 3.5 CONTROL FUNDAMENTALS

An application note entitled "Fundamentals for Usage of Cryogenic Temperature Controllers" is included as an appendix in this manual and should be read in detail if you are not familiar with cryogenic temperature controllers.

## 3.6 CONTROLS AND INDICATORS

Figures 3-1 and 3-2 identify the DRC-91C displays, annunciators, controls, and connectors. The identification of each item is keyed to the appropriate figure.

## FRONT PANEL DESCRIPTION

## 3.7 POWER ON

Before connecting AC power to the DRC-91C, make sure the rear panel voltage selector is set to correspond to the available power line voltage. Be certain the correct fuse is installed in the instrument.

### 3.7.1 POWER UP SEQUENCE

Immediately on POWER ON the 91C runs through a power up sequence as follows:

1. The Display Block indicates ±8.8.8.8.8. in both the upper and lower displays and the Heater % indicates 188. In addition all the annunciators and LED's are turned on. The annunciators A1 A2 A3 A4 are displayed in a column on the left of the display. The LED's include: DISPLAY SENSOR A, B, and ↑↓ (scan); CONTROL SENSOR A and B as well as six sets of units for both DISPLAY SENSOR and CONTROL SENSOR; HEATER POWER RANGE from OFF to MAX; LOCAL and REMOTE.



COPYRIGHT 12/87 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 3-1. DRC-91C Temperature Controller Front Panel

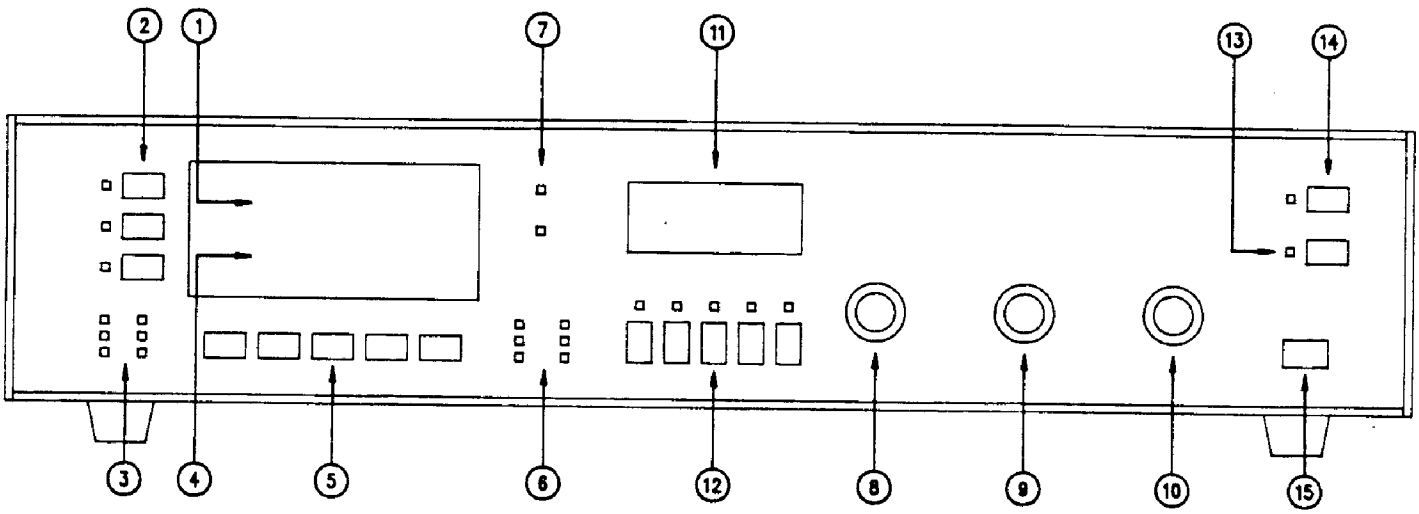



**Figure 3-1. Model DRC-91C Cryogenic Thermometer Front Panel Description**

**Display Sensor**

1. Display Sensor reading in temperature (kelvin, celsius, or fahrenheit), or sensor units (voltage, resistance or capacitance).
2. Annunciated Display Sensor Selector Buttons with annunciated Scan Button.
3. Annunciators indicating units of Display Sensor.

**Set Point**

4. Display of Set Point in temperature (kelvin, celsius, or fahrenheit), or sensor units (voltage, resistance or capacitance) as indicated by Set Point Units annunciators.
5. Buttons which increment or decrement Units, Set Point, Dwell and where appropriate change sign of Set Point.
6. Annunciators indicating units of Set Point.

**Control**

7. Annunciated CONTROL SENSOR indicator.
8. Variable GAIN (proportional) control potentiometer.
9. Variable RATE (derivative) control potentiometer.
10. Variable RESET (integral) control potentiometer.
11. HEATER CURRENT or HEATER POWER INDICATOR in percent of full scale.
12. Full Scale selection of HEATER CURRENT or HEATER POWER for four orders of magnitude. Includes output power OFF position.
13. Return-to-LOCAL key with annunciator.
14. REMOTE key with annunciator.
15. POWER ON-OFF switch

COPYRIGHT 12/87 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2. Next the unit displays -91C- in the upper display and indicates the IEEE-488 interface address in the lower display. For a factory set IEEE address of 12 the display would indicate Add12. This address can obviously be changed by the user and verification of that change is always given on power-up. Note that this address is only read by the instrument on power-up.

3. The unit then displays for INPUT A the curve number associated with that input on the upper display and on the lower display the input option card and its configuration.

4. The unit then displays the same information for Input B.

5. The unit then goes into normal operation.

### 3.7.2 POWER-UP STATUS

A provision has been made to store parameter changes in the DRC-91C memory (NOVRAM). The A and B units, the control units, heater range and set point, as well as the scan dwell times can be stored as power-up settings. When enabled, any time the parameter is changed, either in the LOCAL or REMOTE mode, the NOVRAM is updated. The internal DIP switch setting (main board S7, switch 2) controls whether or not the settings are updated. The updating is disabled (switch 2 off) at the factory prior to shipment.

## 3.8 DISPLAY SENSOR Block

### 3.8.1 DISPLAY SENSOR Input

The choice of DISPLAY SENSOR input as well as enabling the ↑↓ (scan) function is made with keys located in the DISPLAY SENSOR Block. The selection of A or B input and SCAN is indicated by the LEDs to the left of these keys.
When the 8229 Scanner Conversion Option is not present the display can be toggled between the A and B inputs with the A and B keys or automatically toggle between the two inputs by pressing the SCAN button for less than one second to initiate the scanning function.

### 3.8.2 8229 Scanner Input Option

With the addition of the Model 8229 Scanner Input Option, four more inputs are added to the A channel input. These additional inputs are designated A1-A4 and their selection identified in the left side of the display window.

With the scanner conversion option present, the SENSOR A button increments the inputs in the sequence A-A1-A2-A3-A4-A etc.

The 8229 Scanner Input Option is covered in Section VI of this manual.

### 3.8.3 SCAN Function

The SCAN function allows the instrument to step between the two inputs with a scan rate independently set between 0 (Skip) and 99 seconds for each input. If the scanner option is present, inputs (A1-A4) are included in the SCAN function and may each be set independently in their dwell (scan) time. Setting a dwell time to zero automatically skips the channel only when in the SCAN mode.

### 3.8.4 The SCAN Dwell Time

The dwell time for each input can be displayed and changed by selecting an input for DISPLAY, pressing the SCAN key down for more than one second and using the ▲ and ▼ keys to increment or decrement the displayed dwell time for the input chosen. A similar result may be obtained by holding down the A or B


COPYRIGHT 12/87 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

input button for longer than one second. This operation differs if a scanner is present. If the A button is pressed, the A input increments; also for both the A and B buttons, the resolution as well as the dwell time is displayed.

### 3.8.5 DISPLAY AND DISPLAY SENSOR Units

#### 3.8.5.1 Units Select

The display units are indicated by LEDs in the block directly below the DISPLAY SENSOR block. The units of the display are changed by simultaneously depressing the +/- UNITS button with the double UP ARROW ▲▲ or double DOWN ARROW ▼▼ until the units desired are obtained. Each time the ▲▲ key is pressed the units cycle clockwise and each time the ▼▼ key is pressed the units cycle counterclockwise. The units which do not pertain to the input card selected are automatically skipped, i.e., only one of the sensor units (V, Ω , or nF) is possible depending on which sensor input card is present within the instrument.

For any input card **except** the 9215, the DRC-93C will read temperature regardless of whether a curve is stored within the instrument which corresponds to the temperature sensor being interrogated. For diodes, germanium, carbon glass, and all other negative temperature dependence sensors; the default curve is Curve 00 which is the D curve for the DT-500-DRC sensors. For a positive temperature dependence temperature sensor such as platinum and rhodium-iron, the default curve is Curve 03 which is the standard 3750 DIN curve for platinum. This default will only occur if a curve of opposite temperature dependence has been inadvertently selected by the user. In the case of the 9215 card, temperature units are not allowed due to the inability of this sensor to hold a calibration upon cycling.

#### 3.8.5.2 Sensor Units Mode

#### 3.8.5.3 Voltage Units

The voltage mode is allowed for the 9210-3 and -6 configurations, the 9220-3 and -6 configurations as well as the older version 8210 and 8211 cards. In the voltage mode, the display has a resolution of 0.1 millivolt with the full scale range dependent on the input card (2.9999 volts for the -3 configurations and the 8210 card and 6.5535 volts for the -6 configurations and the 8211 input card). The actual Input Card resolution is 0.05 millivolts and 0.1 millivolts, respectively. If a voltage exceeding full scale is applied to the displayed input an overload condition is present and is indicated by OL on the display.

#### 3.8.5.4 Resistance Units

The Resistance mode is allowed for the 9317C, 9318C, and the 9220-P2, -P3, and -R1 configurations as well as the older 8219-P2, the 8219-P3 and 8219-R1 cards. The display range and resolution for the 9317C is 0.000 to 9999.9 ohms; the 9318C is 0.000 to 99999 ohms. Note that the resistance automatically ranges from --.--- to ---.-- to ----.- to ----- as the resistance increases in value. If the input resistance exceeds the resistance range for the card, an overload condition is present and is indicated by OL on the display.

The display ranges and resolutions for the 9220-P2 (and 8219-P2), 9220-P3 (and 8219-P3) and 9220-R1 (and 8219-R1) are 0.00 to 299.99 ohms, 0.0 to 2999.9 and 0.000 to 99.999 ohms respectively. Again, if a resistance exceeding full scale is applied to the input, OL is indicated on the display.

COPYRIGHT 12/87 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

### 3.8.5.5 Capacitance Units

The capacitance mode is allowed for the 9215 Input Card which can be configured in the -15 or -150 configurations. The display range and resolution is 0.000 to 30.000 or 0.00 to 150.00 nanofarads, respectively. An input in excess of the configured maximum is indicated by OL on the display.

### 3.8.6 Display Resolution

The Model DRC-91C allows the user to set the display resolution over the range from 1 kelvin to 1 millikelvin (0.1 millikelvin for the 9317C input card). The temperature is rounded to the least significant digit of the resolution range selected. Since the temperature display resolution is dependent on both the sensor units (voltage, resistance or capacitance) resolution of the Input Card as well as the sensor sensitivity, temperature resolution is greatly dependent on the sensor. Refer to Table 3-1 for a representative summary of "system" resolution, (sensor plus instrument resolution, versus sensor sensitivity).

### 3.8.6.1 Temperature Display Resolution Set

To change the display resolution from the front panel, hold in the DISPLAY SENSOR A or B button or the ↑↓ (scan) button for longer than one second. The display will read ---. , ---.- , ---.-- , --.--- or -.---- . Use the ▲▲ or ▼▼ keys to move the decimal point in the direction of increased or decreased resolution. Changing the display resolution fixes the resolution transmitted over the bus as well but does not change the resolution of the "system". Display resolution can also be different for each input card, i.e., A and B. Also note, that the chosen resolution will only be displayed when "appropriate". In other words, only five digits can be displayed.

In the temperature mode, the chosen input is displayed in the selected scale (K, °C or °F) with a maximum display capability of 0.01 degrees above 100 kelvin, to 0.001 degrees between 1 and 100 kelvin and in the case of the 8217 resistance card to 0.0001 kelvin (0.1 millikelvin) below 1 kelvin. Please note that this is display capability and **neither** system resolution **nor**

**TABLE 3-1. SYSTEM RESOLUTION VERSUS SENSOR SENSITIVITY**

| Sensor Sensitivity | Maximum Temperature Resolution (in K) | | Sensor Sensitivity | Maximum Temperature Resolution (in K) |
|---|---|---|---|---|
| Voltage Mode | 9210/9220 | | Resistance Mode | 9317C/9318C |
| mv/K | -3[1] | -6[1] | (1/R)(dR/dT), $K^{-1}$ | 9220-P2,-P3,-R1[2] |
| 0.1 | 0.5 | 1. | 0.001 | 0.1 to 0.01 |
| 1.0 | 0.05 | 0.1 | 0.01 | 0.01 to 0.001 |
| 10.0 | 0.005 | 0.01 | 0.1 | 0.001 to 0.0001 |
| 100.0 | 0.0005 | 0.001 | 1. | 0.0001 to 0.00001 |

Note 1. The input resolution is 0.05 millivolts for the 9210/9220-3 and is 0.1 millivolts for the 9210/9220-6.

Note 2. This assumes an ability to resolve between 1 part in $10^4$ and 1 part in $10^5$, where $\blacktriangle T = (\blacktriangle R/R)/[(1/R)(dR/dT)]$ and $(\blacktriangle R/R)$ varies between $10^{-4}$ and $10^{-5}$.


COPYRIGHT 12/87 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

necessarily accuracy of the reading. Also note that if the sensitivity of the sensor is too low to support this resolution, i.e., one bit corresponds to greater than the above resolution, some temperatures may be skipped. This will be true for a silicon diode sensor between 30 kelvin and 100 kelvin where the sensitivity is approximately 2.5 millivolts per kelvin and the voltage resolution is 0.05 millivolts. For this case, the resulting temperature resolution is 0.05/2.5 = 0.02 kelvin. However, below 30 kelvin the silicon diode sensitivity is approximately 25 millivolts per kelvin which results in an approximate resolution of 0.002 kelvin (0.05/25).

### 3.8.7 Filtering the Display

An averaging algorithm within the instrument is available which averages up to ten readings. This reading mode eliminates noise within the cryogenic system analogous to averaging within a digital voltmeter. This function can be selected or deselected by switch 2 of the SENSOR ID on the back panel for each input separately. The DRC-91C is shipped from the factory with the filtering function selected for both inputs.

The decimal point on the sign digit at the far left of the display window flags "Filter-on" and will indicate whether the averaging algorithm is being used for that input. The averaging algorithm is a moving average in that when a A/D reading is taken, the new reading replaces the oldest reading and the new average is displayed. If the averaging algorithm is used, displayed temperature is on the average somewhere between 1 and ten readings depending on the temperature variation. If an abrupt change in temperature is observed, averaging is disabled and the last calculated reading is displayed. As the disturbance is reduced in value, the averaging gradually increases until a total of ten readings are considered.

## 3.9 SENSOR CURVES

### 3.9.1 Standard Curves

The standard curves with their curve number, temperature range and SENSOR ID switch position are given in Table 3-2.

**Table 3-2. Standard Curve Information**

| Curve No. | Switch 45678 | Temperature Range(K) | Curve Dscrptn |
|---|---|---|---|
| 00 | 00000 | 1 - 324.9 | DRC-D |
| 01 | 00001 | 1 - 324.9 | DRC-E1 |
| 02 | 00010 | 1 - 324.9 | CRV 10 |
| 03 | 00011 | 14 - 799.9 | DIN-PT |
| 04 | 00100 | 1 - 474.9 | CRV 10 |
| 05 | 00101 | | RESVRD |

### 3.9.2 The Precision Option Table

Table 3-3 gives the standard curves present in the DRC-91C as well as any Precision Options which are factory installed including their address and the number of data points associated with each curve. This Table should be updated for the instrument if additional curves are added at a later time.

A Precision Option Curve can have up to 97 points with two additional end points automatically put into the curve table by the DRC-91C software. Up to 25 Precision Option Curves can be stored in the DRC-91C with an average of 31 points per curve.

Note: For Lake Shore stored Germanium and Carbon Glass Precision Option Curves, a proprietary algorithm is used to fit the calibration data to within a few millikelvin over the entire temperature range.

COPYRIGHT 12/87 LSCI



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 3-3. Sensor Curve Table Information Precision Option Table

| Crve No. | Switch 45678 | # of Lines | Address | Dscrptn |
|---|---|---|---|---|
| 00 | 00000 | 31 | 1D40 | DRC-D |
| 01 | 00001 | 31 | 1DF0 | DRC-E1 |
| 02 | 00010 | 31 | 1EA0 | CRV 10 |
| 03 | 00011 | 31 | 1F50 | DIN-PT |
| 04 | 00100 | 31 | 2000 | CRV 10 |
| 05 | 00101 | 31 | 20B0 | RESVRD |
| 06 | 00110 | ____ | ____ | ____ |
| 07 | 00111 | ____ | ____ | ____ |
| 08 | 01000 | ____ | ____ | ____ |
| 09 | 01001 | ____ | ____ | ____ |
| 10 | 01010 | ____ | ____ | ____ |
| 11 | 01011 | ____ | ____ | ____ |
| 12 | 01100 | ____ | ____ | ____ |
| 13 | 01101 | ____ | ____ | ____ |
| 14 | 01110 | ____ | ____ | ____ |
| 15 | 01111 | ____ | ____ | ____ |
| 16 | | ____ | ____ | ____ |
| 17 | | ____ | ____ | ____ |
| 18 | | ____ | ____ | ____ |
| 19 | | ____ | ____ | ____ |
| 20 | | ____ | ____ | ____ |
| 21 | | ____ | ____ | ____ |
| 22 | | ____ | ____ | ____ |
| 23 | | ____ | ____ | ____ |
| 24 | | ____ | ____ | ____ |
| 25 | | ____ | ____ | ____ |
| 26 | | ____ | ____ | ____ |
| 27 | | ____ | ____ | ____ |
| 28 | | ____ | ____ | ____ |
| 29 | | ____ | ____ | ____ |
| 30 | | ____ | ____ | ____ |
| 31 | | RESERVED | | (ERR 09) |

## 3.10 SENSOR CURVE SELECTION

### 3.10.1 SENSOR ID Switch 4 Open (0)

The DRC-91C software interrogates the appropriate SENSOR ID switch (i.e., A or B) to determine which standard curve or Precision Option curve has been selected (Switches 5-8). The SENSOR ID switch functions are defined in Figure 2-3.

The first sixteen curves (00 through 15) in Table 3-3 can be selected from the SENSOR ID switches 5-8 with switch number 4 off.

### 3.10.1.1 Display of Accessed Curve

To determine which curve you are using is a simple matter for the DRC-91C. Select either the A or B input and depress and hold the LOCAL key. After approximately one second, the display will show the following format:

A 02
20-3

Since the HEATER % display is now blank, we know that SENSOR ID switch number 4 is off and the curve is being selected from the SENSOR ID Switches (5-8). The above example indicates that a 9220 card is installed in Input A and that the input is reading Curve 2, which from Table 3-2 we know is the CRV 10 for the DT-470 Series Sensors. Consequently, switches 4-8 for the A SENSOR ID are 00010.

Since the DRC-91C knows which type of input card is present for each input (assuming that two input cards were installed), it will not, for example, allow the selection of the platinum curve (Curve No. 03) for a diode input card. If Curve 03 is selected from the back panel SENSOR ID switch, the DRC-91C will default to the lowest curve number with the correct temperature coefficient, in this case, curve 00.

For the case of a platinum input card and no Precision Option curves present, the DRC-91C will select Curve Number 03, regardless of the settings for switches 5-8, unless, of course a Precision Option exists for a positive coefficient temperature sensor and that curve has been selected by the SENSOR ID.

This is true for any type of input card. If the SENSOR ID selects the wrong type of curve, the DRC-91C will default to the lowest order



COPYRIGHT 12/87 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

curve of the correct type. The input card type and curve number for each input is also displayed on Power Up for a fraction of a second.

**Table 3-4. Position # versus Curve # Correlation Table-SENSOR ID Switch 4=1**

| REMOTE SENSOR ID | SNSRID Switch 45678 | Internal Correlation Table INPUT A | INPUT B |
|---|---|---|---|
| * | *0010000 | **A00** _____ | B00 _____ |
| 01 | 10001 | **A01** _____ | B01 _____ |
| 02 | 10010 | **A02** _____ | B02 _____ |
| 03 | 10011 | **A03** _____ | B03 _____ |
| 04 | 10100 | **A04** _____ | B04 _____ |
| 05 | 10101 | A05 _____ | B05 _____ |
| 06 | 10110 | A06 _____ | B06 _____ |
| 07 | 10111 | A07 _____ | B07 _____ |
| 08 | 11000 | A08 _____ | B08 _____ |
| 09 | 11001 | A09 _____ | B09 _____ |
| 10 | 11010 | A0A _____ | B0A _____ |
| 11 | 11011 | A0B _____ | B0B _____ |
| 12 | 11100 | A0C _____ | B0C _____ |
| 13 | 11101 | A0D _____ | B0D _____ |
| 14 | 11110 | A0E _____ | B0E _____ |
| 15 | 11111 | A0F _____ | B0F _____ |
| 16 | | A10 _____ | B20 _____ |
| 17 | | A11 _____ | B21 _____ |
| 18 | | A12 _____ | B22 _____ |
| 19 | | A13 _____ | B23 _____ |
| 20 | | A14 _____ | B24 _____ |
| 21 | | A15 _____ | B25 _____ |
| 22 | | A16 _____ | B26 _____ |
| 23 | | A17 _____ | B27 _____ |
| 24 | | A18 _____ | B28 _____ |
| 25 | | A19 _____ | B29 _____ |
| 26 | | A1A _____ | B2A _____ |
| 27 | | A1B _____ | B2B _____ |
| 28 | | A1C _____ | B2C _____ |
| 29 | | A1D _____ | B2D _____ |
| 30 | | A1E _____ | B2E _____ |
| 31 | | A1F ERR09 | B1F ERR09 |

It is possible to store up to 31 curves total in the DRC-91C. These additional Precision Option Curves (25 possible), if present, can be accessed by means of the Position Number versus Curve Number Correlation Table. The first 10 Precision Options (Curves 06 through 15) can also be accessed through either SENSOR ID with Switch 4 open (0).

### 3.10.2 SENSOR ID Switch 4 Closed (1) - No REMOTE SENSOR ID Present

With no external Remote Position, i.e., REMOTE SENSOR ID reading 00, and SENSOR ID switch 4 closed (1), switches 5 through 8 give an equivalent sensor "position" in the Position # versus Curve # Correlation Table 3-4, Column 2.

It is therefore possible to assign any curve number (00 through 30) to any of 16 "positions" - [A00 through A0F] for the A SENSOR ID and [B00 through B0F] for the B SENSOR ID.

### 3.10.3 SENSOR ID Switch 4 Closed (1) - REMOTE SENSOR ID Present

Up to three 8084 or 8085 Scanners can be daisy-chained together to give 30 remote positions for either the A input or the B input of the DRC-91C. If the remote position is non-zero, then the correlation table of Table 3-4, column 1 is valid for positions 01 through 30. The differences from the SENSOR ID's is that the position can be changed remotely and 30 positions rather than 16 are available for one (but not both) of the inputs. Note that A00 (or B00) is available over the REMOTE SENSOR ID if the SENSOR ID switch is set at 10000. The DRC-91C is shipped from the factory with curve 02 stored in all positions of this table.

**Caution**

Do not set both SENSOR ID switch 4's to 1 since only one input should be tied to the REMOTE SENSOR ID and its position.

COPYRIGHT 12/87 LSCI



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

### 3.10.4 Addition of 8229 Scanner Option

Adding the 8229 Scanner to Input A with Switch 4 closed (1) overrides the correlation Table for that input and switches 5678 of the A SENSOR ID. Scanner Inputs A0 through A4 now correspond to positions A00 through A04, which are indicated in Bold letters in Table 3-4. Consequently, different curves can be assigned to each of the five scanner inputs if desired.

### 3.10.5 Display of Accessed Position and Assigned Curve

By holding in the LOCAL key for more than one second, the Display and the Heater % windows will have the following format:

| Display | Heater % |
|---|---|
| 07 00<br>20-3 | 09 |

For the input chosen, switches 45678 are set as 10111 selecting position 7, the curve selected is curve 09. Either that curve does not exist or it is not a diode curve since the instrument is defaulting to the lowest number diode curve, 00. Since the Heater % display is not blank, we know that the SENSOR ID switches are indicating position and **not** curve number. The other possibility is that the REMOTE SENSOR ID is on position 7.

### 3.10.6 Sensor Curve assignment to Sensor Position

After selecting either the A or B input along with the selected position from the SENSOR ID, the REMOTE SENSOR ID or the position from the 8229 scanner option, the curve number associated with the selected position number is changed by depressing the LOCAL button for more than one second simultaneously with the ▲ or ▼ as desired to select the Sensor Curve. The current curve number selected is displayed in the Heater % window with the default curve number shown in the display window along with selected position.

Curves associated with positions 00 through 15 in Table 3-4 are changed as described above. Curves associated with positions 16-30 can only be changed over the IEEE-488 Bus (see Section 4.16.7).

## 3.11 CONTROL BLOCK

### 3.11.1 SET POINT

To change the Set Point numerically, pressing the ▲ or ▼ key increments or decrements the least significant digit, pressing the ▲▲ or ▼▼ key changes the third digit from the right and using the combination of the ▲▲ and ▲ keys or ▼▼ and ▼ keys alters the fourth digit from the right. If one of these keys is held down for over 1 second, the rate at which the set point changes is increased by a factor of five.

If in degrees celsius or degrees fahrenheit, the (+/-) button can be used to toggle the sign of the set point.

The set point is limited in temperature to the range of the curve stored in the instrument. Table 3-2 gives these limitations in kelvin for curves 00 through 04.

**3.11.2 GAIN.** Variable gain (proportional) allows adjustment of overall controller gain over a 1000 to 1 range. Maximum gain is full clockwise. Logarithmic scaling is used; Therefore a gain setting of x100 is approximately two-thirds of full rotation.

**3.11.3 RATE.** Adjusts rate time constant of differentiator. Effectively sets time constant between 1000 seconds and 1 second with full clockwise rotation representing the shortest time constant (or between 0.001 and 1 beat(s) per




COPYRIGHT 12/87 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

second [BPS]). For a discussion of beats per second and time constants, see the Application Note enclosed as an Appendix to this manual.

**3.11.4 RESET.** Adjusts reset (integral) time constant of integrator. Effectively sets time constant between 1000 seconds and 1 second with full clockwise rotation representing the shortest time constant.

**Figure 3-3 Reset and Rate Times for 91C**

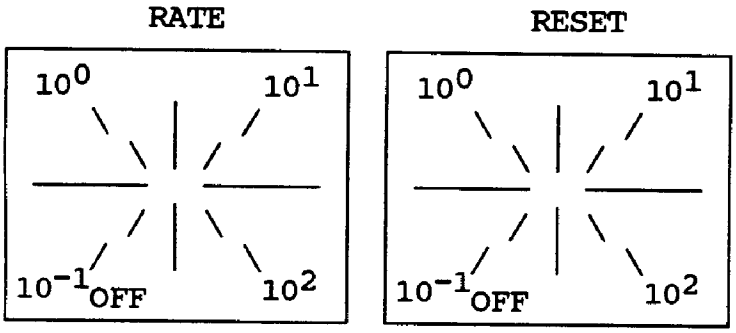


| SETTING-LOG% | TIME(SEC) | BPS |
|---|---|---|
| OFF | ∞ | 0 |
| 0.1 ($10^{-1}$) | 1000 | 0.001 |
| 0.5 | 300 | 0.003 |
| 1. ($10^0$) | 100 | 0.01 |
| 5. | 30 | 0.03 |
| 10. ($10^1$) | 10 | 0.1 |
| 50. | 3 | 0.3 |
| 100. ($10^2$) | 1 | 1. |

**3.11.5 HEATER %.** Displays the magnitude of the heater power in percent of full scale. Full scale is defined as the product of the maximum heater current of one ampere squared times the heater resistance times the range setting. The DRC-91C Temperature Controller is shipped from the factory with the front panel meter indicating power. If the user prefers, he can change this to a current meter by turning on switch 6 of S7 (the eight station dip switch located at the rear center of the main board).

**3.11.6 The HEATER POWER RANGE** setting is determined by the Push Buttons directly below the HEATER POWER display. MAX corresponds to a $10^0$ or 1 multiplier, while -1, -2 and -3 corresponds to a $10^{-1}$, $10^{-2}$, and $10^{-3}$ multiplier respectively. The OFF button turns off the output power independent of the set point and the control parameters.

NOTE. The DRC-91C is equipped with a current limit vernier on the rear panel which can limit the output current on the MAX scale between 0.33 and 1 ampere, dependent on setting. If your instrument will not deliver full power, this vernier may be set wrong or your load resistance may be too large and you are compliance voltage limited.

NOTE: On a range change, the DRC-91C ramps the GAIN to 0 and turns OFF the RESET and RATE prior to changing ranges. After the range is changed, the settings are returned to what they were prior to the range change. This protects the load from seeing the increase or decrease in range power as a step function.

### 3.12 LOCAL/REMOTE BLOCK

**3.12.1 LOCAL.** The LOCAL key is used to return the instrument from remote control by the IEEE-488 BUS or the RS-232C optional interface to front-panel control. When the LOCAL key is depressed and held down for more than one second, the display shows the curve information for the input indicated.

**3.12.2 REMOTE**

The REMOTE key is used to place the controller under remote control and to disable the front panel. When the REMOTE key is depressed for more than one second, the display shows the IEEE-488 address of the instrument.

COPYRIGHT 12/87 LSCI



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 3-2. DRC-91C Temperature Controller Rear Panel

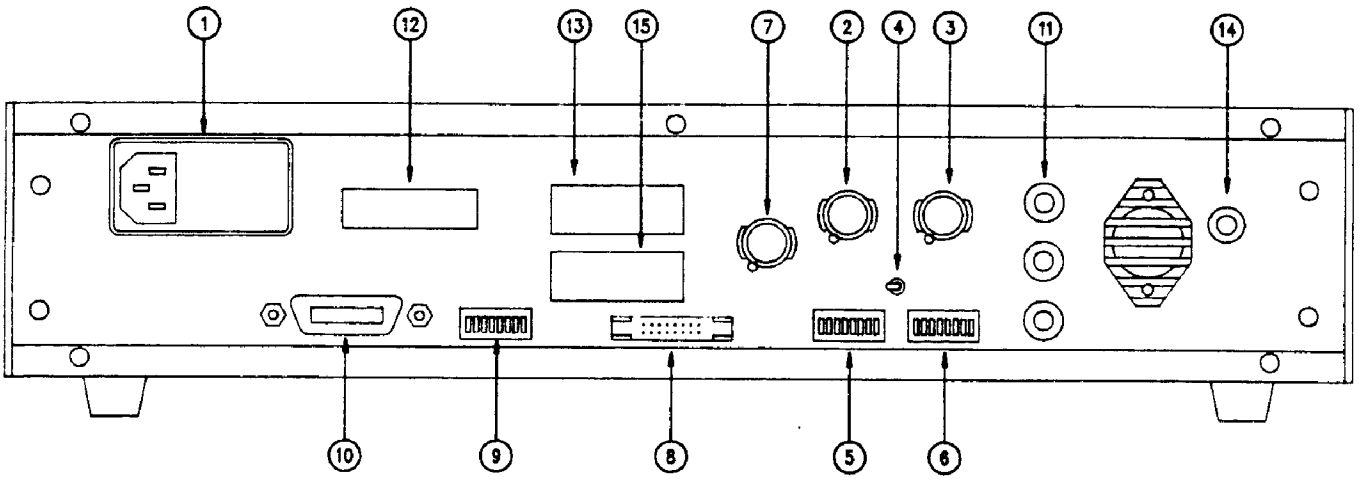



**Figure 3-2. Model DRC-91C Cryogenic Thermometer Rear Panel Description**

1. Line cord receptacle with fuse and voltage selection
2. Sensor INPUT A connector (J1)
3. Sensor INPUT B connector (J2)
4. CONTROL input selector switch
5. SENSOR A ID
6. SENSOR B ID
7. Monitors output of Sensor INPUT A and Sensor INPUT B buffered voltages and 8225 linear analog output option (J3)
8. REMOTE SENSOR ID (J5) - Position data for option only
9. IEEE-488 address switch
10. IEEE-488 connector (J4)
11. HEATER OUTPUT Power terminals (J6, J7, J8)
12. Optional interface access plate (J10) (8223 RS-232C Option)
13. Optional interface access plate (J9) (8229 Scanner Option)
14. MAX HEATER POWER Limit
15. Optional connector access plate (J11)


COPYRIGHT 12/87 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

## REAR PANEL DESCRIPTION

### 3.13 REMOTE SENSOR ID

The REMOTE SENSOR ID connector receives position data from a Model 8084 or Model 8085 Sensor Scanner or a Model SW-10A ten-position switch. This input allows the user to automatically call up different curves for different sensor/channel positions when the instrument is used with either remote switch (see Section 3.10.2). The Parallel input data format is given in Table 3-5.

**Table 3-5. Pin Assignments for the J5 REMOTE SENSOR ID Connector**

J5 CONNECTOR Pin Assignments

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| 15 | 13 | 11 | 9 | 7 | 5 | 3 | **1** |
| **16** | **14** | **12** | **10** | **8** | **6** | **4** | **2** |

ONLY BOLD PINS USED

| J5 | Function |
|---|---|
| 1 | +5 |
| 2 | RESERVED |
| 4 | Bit 3 |
| 6 | Bit 2 |
| 8 | Bit 1 |
| 10 | Bit 0 (LSB) |
| 12 | DIGITAL GROUND |
| 14 | Bit 4 (MSB) |
| 16 | RESERVED |

The user may supply to the REMOTE SENSOR ID his own parallel BCD 5 volt signal referred to the DIGITAL GROUND on pin 12.

### 3.14 HEATER CURRENT LIMIT

The DRC-91C Temperature Controller has a current drive output with a maximum current rating of one ampere unless the optional 1.5 ampere output (W60) was ordered, or the current-limiting vernier has been set at a lower value.

With the current-limiting vernier on the back of the instrument, the output current on the MAX scale can be limited anywhere between 1 ampere and the maximum current for the $10^{-1}$ scale (330 mA). This allows the user to limit the maximum power to between 25 watts and 2.5 watts, dependent on his requirements.

COPYRIGHT 12/87 LSCI



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# S E C T I O N I V

# R E M O T E O P E R A T I O N

## 4-1. IEEE-488 INTERFACE

The IEEE-488 INTERFACE is an instrumentation bus with hardware and programming standards designed to simplify instrument interfacing. The IEEE-488 INTERFACE of the DRC-91C fully complies with the IEEE-488-1978 standard and incorporates the functional, electrical and mechanical specifications of the standard. It also follows the supplement to that standard titled "Code and Format Conventions for use with IEEE Standard 488-1978". This section contains general bus information, Model DRC-91C interface capabilities, addressing and the programming instructions that control the DRC-91C functions.

## 4.2 GENERAL IEEE SPECIFICATIONS AND OPERATION

The following discussion covers the general operation of the IEEE-488 interface. For a more detailed description of signal level and interaction, refer to the IEEE Standard 488-1978 publication "IEEE Standard Digital Interface for Programmable Instrumentation".

All instruments on the interface bus must be able to perform one or more of the interface functions of TALKER, LISTENER, or BUS CONTROLLER. A TALKER transmits data onto the bus to other devices. A LISTENER receives data from other devices through the bus. The BUS CONTROLLER designates to the devices on the bus which function to perform.

The DRC-91C performs the functions of TALKER and LISTENER but cannot be a BUS CONTROLLER. The BUS CONTROLLER is your Digital Computer which tells the DRC-91C which functions to perform.

The interface works on a party line basis with all devices on the bus connected in parallel. All the active circuitry of the bus is contained within the individual devices with the cable connecting all the devices in parallel to allow the transfer of data between all devices on the bus.

The following discussion of the signal lines on the bus are for general information. Your digital computer handles these lines through its circuitry and software. The user need never concern himself with these lines or signals, however, knowledge of their purpose will help one to understand the operation of the Interface.

There are 16 signal lines contained on the bus:

1. 8 Data Lines
2. 3 Transfer Control Lines
3. 5 General Interface Management Lines

The data lines consist of 8 signal lines that carry data in a bit parallel, byte serial format. These lines carry universal commands, addresses, program data, measurement data and status to all the devices on the bus.

The three Transfer Control lines and the five Interface Management lines are asserted low which means that they carry out their function when pulled low. When the voltage on one of these lines is high then the line is not asserted and the function is inhibited. The General Interface Management Lines IFC (Interface Clear), ATN (Attention), REN (Remote Enable), EOI (End or Identify) and the SRQ (Service request) manage the bus and control

COPYRIGHT 3/88 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

the orderly flow of commands on the bus. The IFC, ATN, and REN management lines are issued only by the BUS CONTROLLER.

The IFC (Interface Clear) management line is pulled low by the BUS CONTROLLER to clear the interface.

The ATN (Attention) line is the management line used by the BUS CONTROLLER to get the attention of the devices on the bus. The BUS CONTROLLER does this by pulling the ATN line low and sending talk or listen addresses on the DATA lines. When the ATN line is low, all devices listen to the DATA lines. When the ATN line goes high, then the devices addressed to send or receive data (for example, the DRC-91C) perform their functions while all others ignore the DATA lines.

The REN (Remote Enable) management line is pulled low by the BUS CONTROLLER to enable a device (the DRC-91C) to perform the functions of TALKER or LISTENER.

The EOI (End or Identify) management line is pulled low by the BUS CONTROLLER or a TALKER (the DRC-91C) to indicate the end of a multiple byte transfer sequence. Also the EOI line along with the ATN line are pulled low by the BUS CONTROLLER to execute a polling sequence.

The SRQ (Service Request) management line is pulled low by a device (for example, the DRC-91C) to signal the BUS CONTROLLER that a process is completed, a limit, overload or error encountered. In some cases this means that service is required.

Transfer of the information on the data lines is accomplished through the use of the three signal lines: DAV (Data Valid), NRFD (Not Ready for Data) and NDAC (Not Data Accepted). Signals on these lines operate in an interlocking handshake mode. The two signal lines, NRFD and NDAC, are each connected in a logical AND to all devices connected to the bus.

The DAV line is pulled low by the TALKER after it places its data on the DATA lines. This tells the LISTENERS that information on the DATA lines is valid. A LISTENER holds the NRFD line low to indicate it is not ready. Since these lines are connected in a logical AND to all other devices, then the NRFD line will not go high until all of the devices are ready.

The NDAC line is pulled low by a LISTENER while it is receiving the DATA and lets it go high when the DATA is captured. Since the NDAC lines of all devices are connected in a logical AND, the NDAC line will not go high until all devices have received the DATA.

## 4.3 INTERFACE CAPABILITIES

The IEEE-488 Interface capabilities of the Model DRC-91C are listed in Table 4-1 as well as in mnemonic format on the instrument's rear panel.

**Table 4-1. Interface Functions.**

| Mnemonic | Interface Function Name |
|---|---|
| SH1 | Source Handshake Capability |
| AH1 | Acceptor Handshake Capability |
| T5 | Basic TALKER, serial poll capability, Talk only,Unaddressed to Talk if addressed to Listen |
| L4 | Basic LISTENER, Unaddressed to Listen if addressed to Talk |
| SR1 | Service Request capability |
| RL1 | Complete Remote/Local capablty |
| PP0 | No Parallel Poll capability |
| DC1 | Full Device Clear capability |
| DT0 | No Device Trigger capability |
| C0 | No System Controller capablty |
| E1 | Open Collector Electronics |


COPYRIGHT 3/88 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

## 4.4 DRC-91C IEEE-488 ADDRESS SWITCH

The IEEE-488 Address Switch is located on the instrument's rear panel (see Figure 3-2, Key No. 9). Refer to Figure 4-1 for the following discussion.

### 4.4.1 Terminating Characters (delimiters)


Switch 1 (*) is used to define the instrument's terminating characters (delimiters). The OPEN (0) position selects the ASCII characters CR and LF (Carriage Return and Line Feed) as the terminating characters for input and output data. For the output data from the DRC-91C back to the computer over the Bus, the EOI line is set by the DRC-91C with the output of the Line Feed (LF). This setting (0) for switch 1 is the setting for all Hewlett-Packard computers.

When Switch 1 (*) is CLOSED (1), a variable terminating character format may be selected for the input and output data. In this configuration the power-up (default) terminating characters are LF and CR with the EOI line being set with the output of the Carriage Return (CR). However, the two terminating characters can be changed via input data to the DRC-91C as detailed in Table 4-6. If the terminating characters are changed by the user, these are only in effect until the instrument is turned off.

### 4.4.2 TALKER and/or LISTENER Configuration

Since the DRC-91C is both a TALKER and a LISTENER, normally switches two and three should both be OPEN (0). These switches are usually of use when one instrument is a TALKER and another instrument is a LISTENER and they are to share the same address.

**Figure 4-1. IEEE-488 Address Switch for the DRC-91C**

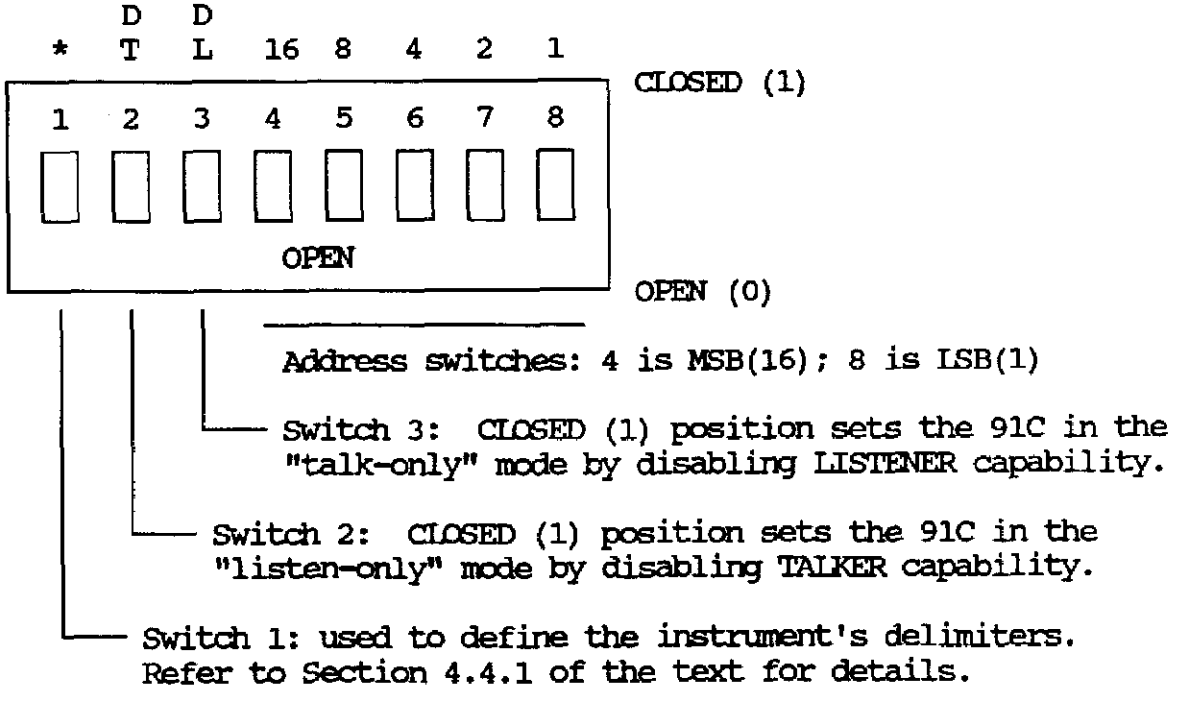


COPYRIGHT 3/88 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 4-2. Allowable Address Codes for the DRC-91C
(Factory preset address is decimal 12)

| ASCII Code Character | | Bit 2* | 3 | Address Switches 4 | 5 | 6 | 7 | 8 | 5-bit Decimal Code |
|---|---|---|---|---|---|---|---|---|---|
| Listen | Talk | B7 | B6 | B5 | B4 | B3 | B2 | B1 | |
| SP | @ | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 00 |
| ! | A | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 01 |
| " | B | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 02 |
| # | C | 0 | 0 | 0 | 0 | 0 | 1 | 1 | 03 |
| $ | D | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 04 |
| % | E | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 05 |
| & | F | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 06 |
| ' | G | 0 | 0 | 0 | 0 | 1 | 1 | 1 | 07 |
| ( | H | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 08 |
| ) | I | 0 | 0 | 0 | 1 | 0 | 0 | 1 | 09 |
| * | J | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 10 |
| + | K | 0 | 0 | 0 | 1 | 0 | 1 | 1 | 11 |
| , | L | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 12 |
| - | M | 0 | 0 | 0 | 1 | 1 | 0 | 1 | 13 |
| . | N | 0 | 0 | 0 | 1 | 1 | 1 | 0 | 14 |
| / | O | 0 | 0 | 0 | 1 | 1 | 1 | 1 | 15 |
| 0 | P | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 16 |
| 1 | Q | 0 | 0 | 1 | 0 | 0 | 0 | 1 | 17 |
| 2 | R | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 18 |
| 3 | S | 0 | 0 | 1 | 0 | 0 | 1 | 1 | 19 |
| 4 | T | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 20 |
| 5 | U | 0 | 0 | 1 | 0 | 1 | 0 | 1 | 21 |
| 6 | V | 0 | 0 | 1 | 0 | 1 | 1 | 0 | 22 |
| 7 | W | 0 | 0 | 1 | 0 | 1 | 1 | 1 | 23 |
| 8 | X | 0 | 0 | 1 | 1 | 0 | 0 | 0 | 24 |
| 9 | Y | 0 | 0 | 1 | 1 | 0 | 0 | 1 | 25 |
| : | Z | 0 | 0 | 1 | 1 | 0 | 1 | 0 | 26 |
| ; | [ | 0 | 0 | 1 | 1 | 0 | 1 | 1 | 27 |
| < | \ | 0 | 0 | 1 | 1 | 1 | 0 | 0 | 28 |
| = | ] | 0 | 0 | 1 | 1 | 1 | 0 | 1 | 29 |
| > | ^ | 0 | 0 | 1 | 1 | 1 | 1 | 0 | 30 |

Factory preset address

* Only the first five bits of the binary code are listed. These bits are the same for the TALK and LISTEN address. The sixth and seventh bits (BUS CONTROLLER originated) determine whether the instrument is being addressed to TALK or LISTEN.

| Function | Bit 2 | 3 |
|---|---|---|
| TALK | 1 | 0 |
| LISTEN | 0 | 1 |


COPYRIGHT 3/88 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

**4.4.3 The IEEE-488 INTERFACE bus address** for the DRC-91C is set by switches 4 through 8 which are reserved for the address selection. Switch 4 is the most significant bit (MSB[=16]) and 8 is the least significant bit (LSB[=1]).

The factory preset address of this instrument is 12 (see Table 4-2). Address switch numbers 5 and 6 should be CLOSED (1) which will result in the Address Switch having a setting of 00001100 or 10001100 dependent on the requirements for the delimiters.

## 4.5 IEEE-488 BUS COMMANDS

### 4.5.1 A Uniline Command

A Uniline Command (Message) is a command which results in a single signal line being asserted. The DRC-91C recognizes two of these messages from the BUS CONTROLLER, REN and IFC (See Table 4-3). When the BUS CONTROLLER executes the appropriate software code the effect is to pull the corresponding Interface Management line low. For example, when the software command REMOTE712 is executed by the HP86 digital computer, the management line REN is pulled low and the listen address 12 issued to signal the instrument having address 12 (DRC-91C) to go into the remote mode.

The SRQ is a uniline command asserted by the DRC-91C when it wishes to signal the BUS CONTROLLER. The BUS CONTROLLER will in turn use the Addressed command SPE (Serial Poll Enable) described below to interrogate the DRC-91C about the reason or reasons for the communication.

**4.5.2 The Universal Commands** shown in Table 4-3 are those multiline commands that address all devices on the bus. A multiline command involve a group of signal lines. All devices equipped to implement such commands will do so simultaneously when the command is transmitted. As with all multiline commands, these commands are transmitted with ATN line asserted (low). There are two Universal commands recognized by the DRC-91C, LLO (Local Lockout) and DCL (Device Clear).
LLO (Local LOckout)-LLO is sent to instruments to lock out (prevent the use of) their front panel controls.

DCL (Device CLear)-DCL is used to return the DRC-91C to the power-up conditions.

**4.5.3 The Addressed Commands** shown in Table 4-3 are multiline commands that must include the DRC-91C listen address before it will respond to the command in question. Note that only the addressed device will respond to these commands. The DRC-91C recognizes three of the Addressed commands; SDC (Selective Device Clear), GTL (Go To Local), and SPE (Serial Poll Enable).

SDC (Selective Device Clear)-The SDC command performs essentially the same function as the DCL command except that only the addressed device responds. Generally, instruments return to their power-up default conditions when responding to the SDC command.

GTL (Go To Local)-The GTL command is used to remove instruments from the remote mode. With some instruments, GTL also unlocks front panel controls if they were previously locked out with the LLO command.

SPE (Serial Poll Enable), SPD (Serial Poll Disable) - Serial polling is used to obtain the SRQ Status Register. The Status Register contains important operational information from the unit requesting service. The SPD command ends the polling sequence.

COPYRIGHT 3/88 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

### 4.5.4 The Unaddress Commands

The Unaddress Commands in Table 4-3 are used by the BUS CONTROLLER to remove any TALKERS or LISTENERS from the bus. The ATN line is asserted (low) when these commands are asserted.

UNL (Unlisten) - LISTENERS are placed in the listener idle state by the UNL command.

UNT (Untalk) - Previous TALKERS will be placed in the TALKER idle state by the UNT command.

Table 4-3 summarizes the IEEE-488 Bus Commands acknowledged by the DRC-91C.

### 4.5.5 Device-Dependent Commands

The DRC-91C supports a variety of device-dependent commands to allow the user to program the instrument remotely from a digital computer and to transfer measurements to the computer. These commands are sent from the computer (BUS CONTROLLER) to the DRC-91C as one or more ASCII characters that tell the device to perform a specific function. For example, the command sequence F0K sent by the BUS CONTROLLER to the DRC-91C is used to select kelvin as the set point units. The IEEE-488 bus actually treats these commands as data in that ATN is high when these device-dependent commands are transmitted.

### 4.5.6 TALKER and LISTENER Status

For the DRC-91C to be a LISTENER, it has to be in REMOTE and can be returned to LOCAL with the M0 (device-dependent) command or GTL (addressed) command as desired. For most, but not all computers, the DRC-91C as a TALKER does not have to be placed in REMOTE operation, but can remain under LOCAL control. This allows the user to collect data while maintaining front panel control. The HP computers will allow this mode of operation. If your computer automatically places the DRC-91C in remote and keeps it in remote after the transmission is over, sending the additional command M0 after the request for data will return the DRC-91C to LOCAL.

**Table 4-3. IEEE-488 Bus Commands**

| Message Mnemonic | HP9825A Command | HP86 Command | IEEE-488 Bus Format |
|---|---|---|---|
| **Uniline Commands** | | | |
| Remote/REN | rem712 | REMOTE712 | ?U* |
| Interface Clear/IFC | | | (IFC) |
| **Universal Commands** | | | |
| Local Lock Out/LLO | llo7 | LOCAL LOCKOUT 7 | ?U(LLO) |
| Device Clear/DCL | clr7 | CLEAR7 | ?U(DCL) |
| **Addressed Command** | | | |
| Selected Device Clear/SDC | clr712 | CLEAR712 | ?U,(SDC) |
| Go to Local/GTL | lcl712 | LOCAL712 | ?U,(GTL) |
| Serial Poll Enable/SPE | rds(712)→S | S=SPOLL(712) | ?U,(SPE) |
| **Unaddress Commands** | | | |
| Unlisten/UNL | | | ? |
| Untalk/UNT | | | - |

* U is the controller (computer) Talk Address (Address 21)


COPYRIGHT 3/88 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

## 4.6 PROGRAMMING INSTRUCTIONS

The following discussion references the DRC-91C at address 12. The allowable address codes are given in Table 4-2. Therefore, its Talk ASCII Code is "L" and its LISTENER ASCII Code is "," (comma). The controller referred to in the following discussion is the BUS CONTROLLER and is normally a digital computer. It should not be confused with the temperature controller on the bus (DRC-91C). Set the IEEE Address of the DRC-91C to 12 by making Switches 5 and 6 CLOSED (1), 4, 7 and 8 (OPEN) (0) and make sure Switch 1 is OPEN (0) to select (CR)(LF) as the terminating characters. Note that this should be done prior to turning on the instrument since the DRC-91C updates the IEEE address on power-up **only**. Confirm that the address selected is correct by holding in the REMOTE button for longer than one second and observe the IEEE address on the front panel display as follows:

-91C-
Add12

**Table 4-4. DRC-91C Command Summary of Instrument Setup**

| Summary of Input Command Formats. Choices of the commands are: | |
|---|---|
| Table 4-6 | Interface Setup Commands:<br>$ZN_1$ Selects EOI status<br>$MN_1$ Selects Remote Interface Mode<br>$TN_1$ Changes terminating Characters<br>C "Clear" Command |
| Table 4-7 | Instrument Setup Commands:<br>$F0C_1$ Select Control Units<br>$F1AC_1$,$F1BC_1$ Select A or B Input Units<br>$F2C_1N_1$ Select Display Sensor<br>$F3AN_1$,$F3BN_1$ Select the A or B Input Resolution |
| Table 4-9<br>4-10 | Control Setup Commands:<br>S,etc Set Point Input<br>$PN_1N_2$,etc. Proportional (GAIN)<br>$IN_1N_2$,etc. Integral (RESET)<br>$DN_1N_2$,etc. Derivative (RATE)<br>$RN_1$ Heater Range |
| Table 4-11<br>4-10 | Scanner Setup and Selection Commands:<br>$YAN_1N_2N_3$ Set the Scanner channel dwell time<br>or $YB0N_2N_3$<br>$YCAC_1$ Select Channel $AC_1$ (A0 thru A4).<br>YS Enable the (S)CAN function.<br>YH Disable, or (H)old, the SCAN. |
| Table 4-13 | Status Register Mask Command:<br>$QC_1C_2$ Set the Status Register mask |


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

### 4.6.1 Commands and Requests

The device-dependent commands to program the DRC-91C are given in Table 4-4. The 91C must be addressed as a "LISTENER" to receive any instruction or string of instructions from the Command list.

The DRC-91C input data format does not require a set number or set sequence of Commands to implement proper instrument set-up. These Commands are processed only after the terminators [TERM1][TERM2] are sent across the bus. The listing and explanation of the 91C commands are summarized in Table 4-4. There are commands for Interface Setup, Instrument Setup, Control Setup, Scanner Setup and Status Register.

The Output Statement Requests are sent by the BUS CONTROLLER to the DRC-91C to tell the 91C what data to output when data output is requested. These requests are listed in Table 4-5 and the data formats are described in detail in the following tables as well as the adjoining text associated with those tables.

## 4.7 INSTRUMENT SETUP COMMANDS AND REQUESTS

### 4.7.1 EOI Status - The $ZN_1$ Command

When EOI (end or identify) is enabled ("Z0"; Table 4-6), the EOI line is set active concurrent with the last byte of a transfer. Use of EOI identifies the last byte allowing for variable length data transmissions. EOI can be disabled ("Z1"; Table 4-6).

### 4.7.2 Interface Mode - the $MN_1$ Command

**4.7.2.1 Local** - This message ["M0"; Table 4-6] clears the remote operation of the DRC-91C and enables front panel operation. Pressing the front panel LOCAL button also sets the instrument to local, provided the button has not been disabled by the Local Lockout Message (see Section 4.7.2.3).

See Section 4.5.6 for a discussion of the DRC-91C under local operation while acting as a TALKER.

**Table 4-5. DRC-91C Summary of Output Requests**

| Table | Request | Output |
|---|---|---|
| 4-6 | W2<br>WI | Interface Status<br>Input and Option Card Data |
| 4-7 | W1 | Sample, Control,A and B Input Information |
| 4-9 | WP | Set Point Data |
| 4-10 | W3 | Control Data (Gain, Reset, etc.) |
| 4-11 | WY | Scan Information |
| 4-13 | WQ | Service Request Data |
| 4-15 | WS<br>WC<br>W0 | Display Sensor Data<br>Control Sensor Data<br>Display, Control Sensors and Set Point Data |


COPYRIGHT 3/88 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

**Table 4-6. DRC-91C Interface Setup Commands and Request Status**

| Command | Functional Description |
|---|---|
| $ZN_1$[a] | Selects IEEE EOI status. Forms of the command are Z0 and Z1.<br><br>When $N_1$ is: — EOI Status is:<br>0 — EOI line is set/accepted on last character input or output.<br>1 — EOI line is not set on last character output or acknowledged on input. |
| $MN_1$ | Selects Remote Interface mode. Forms of the command are M0, M1 and M2.<br><br>When $N_1$ is: — Mode is:<br>0 — Local<br>1 — Remote<br>2 — Remote with Local Lockout |
| $TN_1$ | Changes terminating characters (when IEEE Address Switch #1 is CLOSED [1]). Forms of the command are T0, T1, T2 and T3.<br><br>When $N_1$ is: — Terminators are:[b]<br>0 — (CR)(END[c] ^ LF) [also with Switch OPEN]<br>1 — (LF)(END ^ CR) [default, unless changed]<br>2 — (END ^ LF)<br>3 — (END ^ DAB[d]) |
| C | "Clear" command, returns unit to power up state (Restart). |

**********

| Request | Functional Description |
|---|---|
| W2 | Interface Status - $ZN_1,MN_2,TN_3$<br><br>8 Characters plus up to 2 Terminators where:<br>$ZN_1$ is EOI status<br>$MN_2$ is Mode status<br>$TN_3$ is Terminator status |
| WI | Input and Option Card Data[e]<br>$A\text{-}C_1C_2C_3C_4C_5C_6C_7,B\text{-}C_8C_9C_{10}C_{11}C_{12}C_{13}C_{14},$<br>$1\text{-}C_{15}C_{16}C_{17}C_{18},2\text{-}C_{19}C_{20}C_{21}C_{22},3\text{-}C_{23}C_{24}C_{25}C_{26}$<br><br>40 Characters plus up to 2 Terminators where:<br>$C_1$-$C_7$ is the A Input Card.<br>$C_8$-$C_{14}$ is the B Input Card.<br>$C_{15}$-$C_{18}$ is the Option 1 Present.<br>$C_{19}$-$C_{22}$ is the Option 2 Present.<br>$C_{23}$-$C_{26}$ is the Option 3 Present. |

a) $N_i$ corresponds to a numeric value (0 - 9)
b) The AND symbol (^) is used to indicate messages sent concurrently.
c) END = EOI; d) DAB = last data byte
e) $C_i$ corresponds to an alphanumeric (0 - F)

COPYRIGHT 3/88 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

**4.7.2.2 Remote** - The DRC-91C is in the local front panel mode when first turned on. A remote message ["M1"; see Table 4-6] allows the 91C to be controlled over the IEEE-488 interface. In Remote, the front panel controls are disabled (except the LOCAL button) and are then controllable over the IEEE Bus. The instrument's initial set up is determined by the front panel settings at the time when the instrument is placed into Remote. The DRC-91C may also be placed into remote by pressing the REMOTE button on the front panel or addressed to talk by the BUS CONTROLLER.

**4.7.2.3 Local Lockout** - This message ["M2"; Table 4-6] disables the DRC-91C's Local Front Panel controls, including the LOCAL button. The message is in effect until the message is cleared over the Bus or power is cycled.

Many IEEE-488 cards (for IBM PC's) automatically place addressed instruments into Local Lockout. To be able to place the DRC-91C into Remote without Local Lockout the user may need to reconfigure his IEEE-488 card.

### 4.7.3 Terminating Characters - The $TN_1$ Command

Terminating characters ["T0", "T1", "T2" and "T3"; Table 4-6] are used to indicate the end of a record. Record terminators are used when the unit has completed its message transfer. Switch 1 of the IEEE address defines the terminator status. If switch 1 is OPEN (0) the terminator status is defined as "T0" [(CR)(LF)] and terminator status can not be changed over the interface. When switch 1 is CLOSED (1) the terminator status is defined as "T1" [(LF))(CR)] and the status can be changed using the "T0", "T1", "T2" or "T3" commands.

### 4.7.4 Clear

The (C)lear Message [see Table 4-6] sets the DRC-91C to the turn-on state. This action is similar to turning the instrument OFF and then turning it back ON, except that it occurs in milliseconds, rather than seconds and the DRC-91C does not go through the power-up display sequence.

### 4.7.5 The "W2" Data String

For the case of W2, the data string would have the following format:

Z0,M2,T1[TERM1][TERM2]

where the Z0, M2 and T1 are defined in Table 4-6.

### 4.7.6 The "WI" Data String

This Data String gives the input cards present (9210, 9220, 9215, 9305, 9317C or 9318C) in Input A and B, whether the analog option is presentand the interface option is present. A typical data string would be:

A-9220-P2,B-9318C,1-8225,2-8223,
3-8229

which indicates 9220 card configured as a 100 ohm platinum input for Input A; a germanium/carbon glass input for Input B; a linear analog option in Option Slot 1; a RS-232C option in Option Slot 2 and a Scanner Card option in Option Slot 3.

## 4.8 SELECTION OF SET POINT UNITS, INPUT UNITS, DISPLAY SENSOR, AND RESOLUTION (Table 4-7)

### 4.8.1 Units for Set Point - The $F0C_1$ Command

The $F0C_1$ command sets the temperature or sensor units for the set point. Sensor units (volts, ohms or nanofarads) are selected automatically by the input card type.


COPYRIGHT 3/88 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Consequently, the command for selecting sensor units for control is F0S. Temperature units are selected with the same command with K, C, or F substituted for S. Note that only one choice of sensor units (volts, ohms or nanofarads) is available which is dependent on the control input and the input card type and configuration selected.

### 4.8.2 Units for A and B Inputs - The $F1AC_1$ and $F1BC_1$ Commands

The A input units and the B input units may be set independently by the commands $F1AC_1$ and $F1BC_1$, respectively. The units are tied to the input and not to the display. Sensor units are selected automatically by the input card type. Consequently, the command for selecting sensor units is F1AS (or F1BS). Temperature units are selected with the same command with K, C, or F substituted for S for either input.

### 4.8.3 Display Sensor Selection - The $F2C_1N_1$ Command

The sensor to be selected for display can be changed by the $F2C_1N_1$ command. This command is important with a scanner card because it chooses which sensor on Input A will be read over the bus when data is output from the instrument.

### 4.8.4 Resolution for A and B Inputs- The $F3AN_1$ and $F3BN_1$ Commands

The resolution for the A input and the B input can be set independently with the $F3AN_1$ and $F3BN_1$ commands. The resolution is tied to the A and B inputs and **not** to the display. The quantity $N_1$ is a number 0 through 4 where

| | | |
|---|---|---|
| 0 | for a resolution of | xxx. |
| 1 | for a resolution of | xxx.x |
| 2 | for a resolution of | xxx.xx |
| 3 | for a resolution of | xx.xxx |
| 4 | for a resolution of | x.xxxx |

### 4.8.5 The A and B SENSOR ID Information - The $AC_1C_2$ and $BC_1C_2$ Commands

The purpose of this command is to select Filtering of the A and B input, whether the Remote Position Data is used to establish the curve numbers, the Temperature Coefficient sign for the 9215 card, and whether or not the thermal correction is desired on the 9317C/9318C cards.

The information for these commands is sent to the DRC-91C to set the functional parameters as described in Table 4-7.

Table 4-7 defines the $AC_1C_2$ and $BC_1C_2$ definitions as independent functions. If multiple functions are to be selected, the character equivalents are additive (see examples below, which are given as SENSOR A ID's - they pertain to SENSOR B ID's as well).

A20 - Select Sensor Curve02 to be used to determine temperature.

A22 - Enable digital filtering and select Sensor Curve 02 to be used to determine temperature.

A28 - Enables the REMOTE SENSOR ID. If the remote position data is 0, then the sensor curve reverts to the curve in A00 (or B00) rather than being selected from the REMOTE SENSOR ID Table.

A2A - Enable digital filtering in addition to the A28 description.

### 4.8.6 The SENSOR ID on Return to Local

When the DRC-91C is returned to local, the SENSOR ID's on the back panel are read and data entered over the IEEE-488 Bus using the commands $AC_1C_2$ or $BC_1C_2$ is lost.

COPYRIGHT 3/88 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

**Table 4-7. DRC-91C Command Summary for Instrument Setup**

| Command | Functional Description |
|---|---|
| Selection of Units, Sensors, Resolution, and Deviation | |
| $F0C_1$ | Function 0 - Select Set Point (Control) Units. Forms of the command are F0K (kelvin), F0C (celsius), F0F (fahrenheit), and F0S for Sensor Units in volts, ohms or nanofarads. |
| $F1AC_1$ or $F1BC_1$ | Function 1 - Select the A or B Input Units. Forms of the command are F1K (kelvin), F1C (celsius), F1F (fahrenheit), and F1S for Sensor Units in volts, ohms or nanofarads. |
| $F2C_1N_1$ | Function 2 - Select Display Sensor (Input A or Input B). Forms of the command are F2A0, F2A1*, F2A2*, F2A3*, F2SA4* and F2SB (or F2SB0). * With 8229 Scanner Card Only. |
| $F3AN_1$ or $F3BN_1$ | Function 3 - Select the A or B Input Resolution. $N_1$ is 0 (xxx.), 1 (xxx.x), 2 (xxx.xx), 3 (xx.xxx) or 4 (x.xxxx). Forms of the command are F3A0 (or F3B0), F3A1 (or F3B1), etc. |
| $AC_1C_2$ or $BC_1C_2$ | Input A ID and B ID. $C_1C_2$ are 00 thru FF. Forms of the command are A00 thru AFF. $C_1$ ranges between 0 and F. If $C_2$ is between 0 and 7, then $C_1$ selects the Sensor Curve number 00(0) thru 15(F). If $C_2$ is between 8 and F, then $C_1$ corresponds to a Remote Position between 0 and F. |

$C_2$ $C_1$

1 2 3 4 4 3 2 1 — 4 is MSB, 1 is LSB

1 2 3 4 5 6 7 8 — Switch Nos on SENSOR ID



1 2 4 8 8 4 2 1 — Binary Weighting

↑ ↑ ↑ ↑— Remote Position (On), Curve # (Off) Bit

↑ ↑ └— Thermal Correction

↑ └— Digital Filtering

└— Thermal Correction or Ice-Point Compensation

| $C_1$ | $C_2$ | | | |
|---|---|---|---|---|
| Curve # or Remote Position | Select Curve # (0) or Remote Position (8) | 9317C/9218C Card Thermal Correction | Digital Filtering | 9215 Card Temperature Coefficient |
| 0 to F | 0 or 8 | OFF (0) | OFF (0) | + (0) |
| " | 1 or 9 | OFF (0) | OFF (0) | - (1) |
| " | 2 or A | OFF (0) | ON (2) | + (0) |
| " | 3 or B | OFF (0) | ON (2) | - (1) |
| " | 4 or C | ON (4) | OFF (0) | + (0) |
| " | 5 or D | ON (4) | OFF (0) | - (1) |
| " | 6 or E | ON (4) | ON (2) | + (0) |
| " | 7 or F | ON (4) | ON (2) | - (1) |


COPYRIGHT 3/88 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 4-8. DRC-91C Output Request Summary for Instrument Setup

| Request | Functional Description |
|---|---|
| W1 | A and B Input Information<br>$C_1C_2,C_3C_4,C_5,C_6C_7,AC_8C_9,N_1N_2,N_3,C_{10},BC_{11}C_{12},N_4N_5,N_6,C_{13}$<br>32 characters plus up to 2 terminators where:<br><br>$C_1C_2$ is the Display Sensor A0, A1, A2, A3, A4 or B0.<br>$C_3C_4$ is the Control Sensor A0, A1, A2, A3, A4 or B0.<br>$C_5$ is the Set Point Units K, C, F, V, N or R.<br>$C_6C_7$ is the Remote Position (00 through 1F).<br><br>$C_8C_9$ is the A ID (00 through FF).<br>$N_1N_2$ is the A curve number (00 through 31).<br>$N_3$ is the A Input Resolution 0 (xxx) to 4 (x.xxxx)<br>$C_{10}$ is the A Display Units (K, C, F, V, N or R).<br><br>$C_{11}C_{12}$ is the B ID (00 through FF).<br>$N_4N_5$ is the B Curve Number (00 through 31).<br>$N_6$ is the B Input Resolution 0 (xxx) to 4 (x.xxxx)<br>$C_{13}$ is the B Input Units (K, C, F, V, N or R). |

### 4.8.7 The "W1" Data String

This Data String gives the Display Sensor, Control Sensor, Set Point Units, Remote Position; the A ID, A curve number, A display resolution and units; the B ID, B curve number and the B display resolution and units. The data string will have the following format:

A0,B0,K,00,A20,02,3,K,B42,04,2,K

The above string indicates that the Display Sensor is A0; the Control Sensor is B0; set point is in kelvin units; the remote position is off; the SENSOR A ID indicates that the Digital Filtering for this channel is ON and the curve assigned is 4; the curve being used is also 4; B resolution is 10mK; B units are also in kelvin.

Both channels are using the DT-470 "Curve 10", the difference is that INPUT A is set for an upper limit of 325K and INPUT B is set with an upper limit of 475K.

## 4.9 THE CONTROL COMMANDS

### 4.9.1 The Set Point Value - The S Command

The set point is sent from the controller to the DRC-91C in a free field format of which examples are given in Table 4-9. Note that the sign only has to be present if negative celsius or fahrenheit settings are desired. Although the limits on the input range above the values possible for the various sensors, the set point is limited by the input card present as shown in the table. Note that the temperature limit can be different for the DT-470 depending on whether curve number 02 (324.9K) or curve number 04 (474.9K) has been selected. If a number above the limitation for the card is entered, the set point is set to the upper temperature limit. Also note that an S sent by itself to the 91C sets the set point to 0 kelvin (or its equivalent in the units chosen) which will result in shutting down the heater

COPYRIGHT 3/88 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

output stage of the temperature controller.

Note: Although limitations on the range of the set point are set within the software when in temperature units; these limits are not possible for sensor units due to the different characteristics for each sensor.

Since the set point is soft, the transition from REMOTE to LOCAL does not result in a change in the set point.

### 4.9.2 The "WP" Request Data String

This request is a subset of the "WO" command; the "WP" command giving the set point value by itself.

**Table 4-9. DRC-91C Command/Request Summary for Setpoint Setup**

| Command | Functional Description |
|---|---|
| S<br>or $SN_1$<br>or $SN_1.N_2$<br>or $SN_1N_2$<br>or $SN_1N_2.N_3$<br>or $SN_1N_2N_3.N_4$<br>or $SN_1.N_2N_3$<br>etc.<br>or ( )$SN_1$<br>or ( )$SN_1.N_2$<br>or ( )$SN_1N_2$<br>or ( )$SN_1N_2.N_3$<br>etc. | Set Point Input. The decimal point is "FREE FIELD" and its allowable position depends on the control units. Limits are<br>Units — Range<br>K: 0 through 999.9<br>C,F: -999.9 through 999.9<br>V: 0.0000 through 9.9999<br>R: 0 through 99999<br>N: 0 through 99.999 or 999.99<br>The Set Point is limited based on input card and Sensor. Lower limit is 0 K (-273.1 °C or -459.6 °F). |

| Input Card | Sensor Type | Upper Set Point Limit K | °C | °F | Sensor Units |
|---|---|---|---|---|---|
| 9210/20-3 | DT-470, DT-500 | 324.9 | 51.7 | 125.1 | 2.9999 volt |
| 9210/20-6 | TG-100,TG-120 | " | " | " | 6.5535 volt |
| 9317C | Germanium/Carbon Glass | " | " | " | 9999.9 ohms |
| 9318C | Germanium/Carbon Glass | " | " | " | 99999 ohms |
| 9215-15 | CS-400,CS-501 | N/A | N/A | N/A | 29.999 nF |
| 9215-150 | CS-401,CS-501 | N/A | N/A | N/A | 149.99 nF |
| 9210/20-3 | DT-470 | 474.9 | 201.7 | 395.1 | 2.9999 volt |
| 9220-P2 | PT-100 Series | 999.9 | 526.7 | 980.1 | 299.99 ohms |
| 9220-P3 | PT-1000 Series | " | " | " | 2999.9 ohms |
| 9220-R1 | Rhodium-iron | " | " | " | 99.999 ohms |

**********

| Request | Output of Instrument Data |
|---|---|
| WP | Set Point Data - ( )$N_{11}N_{12}N_{13}$(.)$N_{14}N_{15}$( )<br>8 Characters plus up to 2 terminators where the $N_{11}$-$N_{15}$ variations are the same as for WO (see Table 4-15). |


COPYRIGHT 3/88 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

### 4.9.3 Setting the GAIN (Proportional) - The P Command

The gain is a multiplier between 0.1 and 99., a range of 990, i.e., 99./0.1 = 990. A gain of 0.0 is not allowed. The format is free field with examples of the command being P.1, P0.1, P9, P9., P9.0, P99, P99., etc.

The string P987.12 will be interpreted as P87, i.e., the first valid combination tied to the decimal point or end of string will be retained. A P transmitted by itself is equivalent to P0 or P0.0 and sets the gain to 0.1. When returning to LOCAL, the gain setting if changed over the IEEE-488 Bus is no longer valid since the 91C will now read the front panel gain potentiometer setting.

**Table 4-10. DRC-91C Command/Request Summary for the Control Parameters**

| Command | Functional Description |
|---|---|
| | Setting of all other Control Parameters |
| $PN_1.N_2$ or $PN_1N_2$ | Proportional (GAIN). $N_1N_2$ is 0.1 through 99. Examples the command are P, P0, P0.0 and P99. |
| $IN_1.N_2$ or $IN_1N_2$ | Integral (RESET). $N_1N_2$ is 0.0 (OFF) through 99. (three characters including the decimal point). Forms of the command are I0 (I0.0) through I99. |
| $DN_1.N_2$ or $DN_1N_2$ | Derivative (RATE). $N_1N_2$ is 0.0 (OFF) through 99. (three characters including the decimal point). Forms of the command are D0 (D0.0) through D99. |
| $RN_1$ | Heater Range. $N_1$ is 0 through 5. Forms of the command are R0 through R5.<br><br>$N_1$ — Range — Heater Current<br>0 — OFF — 0<br>1 — OFF — 0<br>2 — -3 — 33 mA<br>3 — -2 — 100 mA<br>4 — -1 — 330 mA<br>5 — MAX — 1 A |

**********

| Request | Functional Description |
|---|---|
| W3 | Control Parameters $N_1N_2N_3,N_4N_5N_6,N_7N_8N_9,N_{10},N_{11}N_{12}N_{13}$<br><br>17 characters plus up to 2 terminators where:<br>$N_1N_2N_3$ is the Gain Value<br>$N_4N_5N_6$ is the Rate Value<br>$N_7N_8N_9$ is the Reset Value<br>$N_{10}$ is the Heater Range<br>$N_{11}N_{12}N_{13}$ is the % of Heater Power or Current out. |



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

### 4.9.4 Setting the RESET (Integral) - The I Command

The reset is set from 0.1 through 99 (1 to 990) seconds. Like the gain command, it is free field with the same characteristics and format. It will also revert back to front panel settings under LOCAL control. A setting of 0.0 turns the reset off.

### 4.9.5 Setting the RATE (Derivative) - The D Command

The rate is also set in seconds/10 (0.1 to 99, 0.0 off). It handles its input format exactly the same as both gain and reset commands as well as the transition to front panel control from REMOTE.

### 4.9.6 Heater Range - The R Command

The heater range can be changed over the bus with the $RN_1$ command. R1 or R6 and up are equivalent to the R0 command (see Table 4-10).

### 4.9.7 NOTE: The Return to Local

Although the Gain, Rate, Reset and Sensor ID's can be changed over the IEEE Bus with the 91C in REMOTE, when the 91C returns to LOCAL, these settings are read and updated from the hardware, i.e., the front panel (gain, rate and reset) and the SENSOR ID switches on the back panel.

### 4.9.8 The "W3" Data String

The settings for the gain, rate, reset, heater range as well as the instantaneous % of Heater Power can be transmitted from the DRC-91C with the "W3" command.

The command "SPIDR" or any combination without a value following the letter sets the chosen parameters to 0, e.g., "SP" sets the set point and gain to 0.

## 4.10 THE SCANNER INPUT CARD

### 4.10.1 SCAN Programming Instructions

NOTE: The YA, YB and YC commands should be issued when the SCAN mode is Holding. Changing a SCAN time or Scanner Channel while the unit is actively scanning may cause unpredictable results.

### 4.10.2 Setting the Dwell Time - The $YAN_1N_2N_3$ and $YBON_2N_3$ Commands

The time spent on a given scanner channel can be varied between 0 and 99 seconds by setting the dwell time for that channel. This can be done over the IEEE-488 Bus with these commands or from the front panel. Setting the dwell time to 0 skips that channel.

### 4.10.3 Selecting the Scanner Channel - The $YCAC_1$ Command

The A channel input (A0, A1, A2, A3 or A4) is selected by this command. This channel will be read over the IEEE-488 Bus only if the channel is designated as the Display Sensor or Control Sensor. Normal operation would be for the B input to be Control Sensor input with the Display assigned to the A channel selected by this command directing the appropriate sensor from the scanner input to the A input card.

### 4.10.4 Enabling the Scan Function - The YS Command

Upon sending the YS command from the BUS CONTROLLER, the DRC-93C starts its scan of the inputs from the channel input which it is currently on. The scan sequence is A0, A1, A2, A3, A4, B, A0, etc. with any channel whose dwell time is set to zero being skipped.

It is strongly recommended that the control channel be the B channel when the scanner is used. If it is not, it will be changed if a scanner


COPYRIGHT 3/88 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 4-11. DRC-91C Command/Request Summary for Scanner

| Command | Functional Description |
|---|---|
| $YAN_1N_2N_3$ or $YB0N_2N_3$ (After YH cmmd) | Set the $AN_1$ (A0 - A4) or B0 Scanner channel dwell time time to $N_2N_3$ seconds. $N_2N_3$ is 00 to 99 seconds. Forms are YA000 thru YA099, YA100 thru YA199, etc. |
| $YCAN_1$ | Select Scanner Channel $AC_1$ (A0 thru A4). Forms of the Command are YCA0< YCA1, YCA2, YCA3 and YCA4. Command asynchronously selects a scanner channel for readout. |
| YS | Enable the (S)CAN function. |
| YH | Disable, or (H)old, the SCAN. |

**********

| Request | Functional Description |
|---|---|
| WY | Scan Information $C_1,C_2C_3,C_4C_5,C_6C_7,C_8C_9,C_{10}C_{11},C_{12}C_{13},C_{14}C_{15}$<br><br>22 characters plus up to 2 terminators where:<br>$C_1$ is the SCAN status, (H)olding or (S)canning.<br>$C_2C_3$-$C_{12}C_{13}$ is the A0 - A4 and B0 dwell times in seconds.<br>$C_{14}C_{15}$ is the SCAN position A0, A1, A2, A3 or A4. |

card is present, since one current source is associated with the A0-A4 inputs. The display which will scan is the sample display.

### 4.10.5 Holding the Scan Function - The YH Command

The Scan can be stopped any time over the IEEE-488 Bus by sending out the YH command. The scanner should be in hold when any of the other scanner commands are sent to the scanner.

### 4.10.6 The "WY" Data String

This command gives the scan information, including whether the instrument is scanning or holding, the channel dwell information and the scan position.

## 4.11 The Service Request, Status Register, Status Reports, and the Status Register Mask

As mentioned earlier, a Service Request can be initiated by the DRC-91C to indicate a function has been performed, or a limit, overload or error has been encountered. The DRC-91C does this by pulling its SRQ (Service Request) management line low. The BUS CONTROLLER uses the serial poll (SPOLL) to obtain the contents of the register in the DRC-91C called the Status Register.

The DRC-91C Status Register is a single byte of data from the DRC-91C containing five bits called the Status Reports. These Status Reports indicate when certain processes are complete, whether the channel was changed, or a limit, overload or error encountered. The Status Register Mask is provided so that the Status Request interrupt and


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

undesired Status Reports can be inhibited.

Reading the Status Register resets the Status Register to all zeros so that only new status reports will be registered by the DRC-91C. Thus, through the SRQ management line and the Status Register, the DRC-91C is able to signal Status Reports on five conditions immediately to the BUS CONTROLLER.

It is possible to disable the DRC-91C SRQ line thereby preventing the DRC-91C from interrupting the BUS CONTROLLER. However, the BUS CONTROLLER can still read the Status Register to determine appropriate instrument conditions.

### 4.11.1 The Service Request

The Service Request Message is independent of all other IEEE-488 activity and is sent on a single line called the SRQ line. When the Service Request is sent and more than one instrument on the Bus has the capability to send this message, the BUS CONTROLLER must decide which instrument is sending the request. This is done by conducting a "Serial Poll" of the instruments on the Bus. The instrument polled responds by sending a Status Register. The Status Register indicates whether the device has requested service and if so, for what reason.

Once the reading on a given channel becomes stable (or valid), a service request is issued by the DRC-91C provided that Bit 6 in the Status Register Mask is set (See Section 4.11.3).

With the SRQ bit of the Status Register mask disabled, no SRQ interrupt by the DRC-91C will be generated, however, the BUS CONTROLLER can still read the Status Register to determine appropriate instrument conditions.

### 4.11.2 The Status Register and Status Reports

The DRC-91C Status Register is a single byte of data from the DRC-91C containing five bits called the Status Reports which give information indicating which process is complete, whether the channel was changed, or a limit, overload or error encountered.

The Status Register can be read at any time by means of a Serial Poll Enable command.

Reading the Status Register resets the Status Register to all zeros so that only new status reports will be registered by the DRC-91C. Executing the Q command (Section 4.11.3) also resets the Status Register to all zeros. Reading the Status Register resets all of its bits to zero.

#### 4.11.2.1 Status Reports 0 and 1 - Display and Control Data Ready

Bit 0 of the Status Register is set when a valid Display data reading is available. Bit 1 of the Status Register is set when a valid Control data reading is available. If the Service Request is enabled, either one of these being set will cause the DRC-91C to pull the SRQ management low to signal the BUS CONTROLLER. These bit(s) are reset to zero upon reading the Status Register on response to a serial poll or if the reading is no longer valid.

These functions can be inhibited by turning their corresponding bits in the Status Register mask off.

#### 4.11.2.2 Status Report 2 - The Control Channel Limit.

When the control sensor reading gets within the chosen limit from the set point, bit 2 is set in the Status Register. If the Service Request is enabled this bit being


COPYRIGHT 3/88 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

set will cause the DRC-91C to pull the SRQ management low to signal the BUS CONTROLLER. As with all of the Status Reports, this bit is reset to zero upon reading the Status Register. The bit will not revert to zero if the control sensor difference from the set point later exceeds the limit selected.

The control channel limit is entered using the Q command. (See Section 4.11.4.2).

This function can be inhibited by turning off bit 2 in the Status Register mask.

#### 4.11.2.3 Status Report 3 - Display Sensor Channel Change

Bit 3 of the Status Register is set when a channel change occurs for the Display. If the Service Request is enabled this bit being set will cause the DRC-91C to pull the SRQ management low to signal the BUS CONTROLLER. This Status Register bit is reset to zero upon reading the Status Register.

This function can be inhibited by turning off the bit 3 in the Status Register Mask.

#### 4.11.2.4 Status Report 5 - Overload Error Indicator.

If the display has an overload condition on any selected channel or an error occurs, then bit 5 of the Status Register is set and a Service Request is issued if enabled. This Status Register bit is reset to zero upon reading the Status Register.

This function can be inhibited by turning bit 5 off in the Status Register Mask.

#### 4.11.2.5 When operating without the Service Request

It is still possible for the BUS CONTROLLER to read the Status Register. The Service Request is inhibited by turning off the SRQ bit (bit 6) in the Status Register Mask.

However, it must be understood that certain bits in the Status Register are continually changing. The Status Reports for the Overload/Error, Display Data Ready, and Control Data Ready are continuously updated to reflect current instrument status. The Channel Change and Control Channel Limit once encountered are latched (set to 1) and remain latched until the Status Register is read.

### 4.11.3 The Status Register Mask - The $QC_1C_2$ Command

The Status Reports listed above may not be desired or perhaps only a few are of interest. The Status Register Mask is provided to allow the user to select whether he wants a given Status Report or not. The various bits of the Status Register Mask enable the various Status Reports. The bits in the Status Register Mask have the same bit position as the bits in the Status Register.

Only those bits which are allowed by the Status Register Mask Command are potentially changeable in the Status Register. Note that the corresponding bit in the Status Register Mask determines whether its counterpart in the Status Register can change.

The Status Register Mask is shown in Figure 4-2. It consists of 8 bits, one bit (bit 6) which determines whether the DRC-91C is to report via the SRQ line and five bits to determine which Status Reports to make. Bit 6 is the SRQ



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

(Service Request) bit and if set allows the DRC-91C to send out a Service Request on the SRQ IEEE-488 line. If the SRQ bit is not set (off) then the DRC-91C is inhibited from producing a Service Request. The Status Register can still be read by the BUS CONTROLLER to examine the Status Reports, but the BUS CONTROLLER will not be interrupted by the Service Request. Five of the other seven bits select which of the five Status Reports to make. If one of these five bits is set (on), the DRC-91C will update the corresponding Status Report bit in the Status Register. Then if the SRQ bit (bit 6) of the Status Register Mask is set, the DRC-91C will send out a Service Request on the SRQ IEEE-488 line. By means of a serial poll enable (SPE), the BUS CONTROLLER determines that the DRC-91C has sent out a service request and then reads the Status Register. Reading the Status Register resets the Status Register to all zeros. Executing the Q command also resets the Status Register to all zeros. The Status Register Mask command is the ASCII letter Q followed by two alphanumerics representing the most significant four bits and the least significant four bits, respectively. Note that the controller can be programmed for more than one set of conditions simultaneously. To enable the Service Request, Bit 6 must be a 1.

**4.11.3.1 Status Register Mask Bits 0 and 1 - Display and Control Data Ready Enables.** If either Bit 0 or Bit 1 of the Status Register Mask is set (1), then for that data, the corresponding bit in the Status Register is set when a valid data reading is available.

**4.11.3.2 Status Register Mask Bit 2- The Control Channel Limit Enable.** If the control channel limit (Figure 4-2, Bit 2) is selected, the limit must follow the Q command and is in a free field format. Examples are xxx.x, .x, x.x, xx.x, x., xx., etc. If Bit 2 of the Mask is set (1), then when the control sensor reading gets within the chosen limit from the set point, the corresponding bit is set in the Status Register.

**4.11.3.3 Status Register Mask Bit 3- Display Sensor Channel Change Enable.** If the Sensor Channel Change (Bit 3) is selected, the bit 3 in the Status Register is set when a channel change occurs.

**4.11.3.4 Status Register Bit 5 - Overload/Error Indicator Enable.** If the Overload/Error Indicator Enable Bit (5) is set, then if the display has an overload condition on any channel or an error occurs, the corresponding bit on the Status Register is set and a Service Request is issued if the SRQ bit of the mask is a 1.

The user can check which overload or error was detected by sending the Output Data Statement W0 (See Section 4.12.2 and Table 4-15).

For example, in Figure 4-2, Q21 will allow the setting of the Overload/-Error Indicator and Display Data Ready bits in the Status Register, but will not send an Service Request if either condition is met. Q61 however will allow either of these bits to be set and when either is set, an Service Request will be issued by the DRC-91C over the IEEE-488 Bus. This Service Request will remain on the Bus until either a Serial Poll is initiated or the cause of the setting of the SRQ is eliminated.

The Status Register mask and control channel limit is part of the power-up save settings like the set point and units. It is updated on power-up to the last settings with internal switch 2 set. If this switch is not set, then the Status Register mask is set to 00 and the control channel limit to 000.0.


COPYRIGHT 3/88 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

### 4.11.3.5 Examples for setting Mask

Example #1: Q61 - Sample Data Ready with the Service Request bit (SRQ) on. With the SRQ bit of the Status Register mask enabled, the DRC-91C SRQ interrupt will be generated. The BUS CONTROLLER can read the Status Register to determine appropriate instrument conditions. In this case bit 1 is continuously updated to reflect current instrument status of the Sample Data Ready.

Example #2: Q2F - All Status Reports with the SRQ bit off. With the SRQ bit of the Status Register mask disabled, no SRQ interrupt by the DRC-91C will be generated, however, the BUS CONTROLLER can still read the Status Register and this command will give all five Status Reports.

Example #3: Q06000.1 - Enable the Control Data Ready and Control Channel Limit with a band of 0.1 about the control point.

### 4.11.3.6 Status Register Mask at Power Up

The Status Register Mask at power-up is set to zero as is the Status Register.

**Table 4-13. DRC-91C Command/Request Summary for Status Register Mask**

| Command | Functional Description |
|---|---|
| $QC_1C_2{}^e$ | The Status Register mask is set using the Q command. Forms of the command are $Q0C_2$, $Q2C_2$, $Q4C_2$, $Q6C_2$ and $QC_10$, $QC_11$, $QC_12$, $QC_13$, $QC_14$, $QC_15$, $QC_16$, $QC_17$.<br><br>Status Register Mask is:<br>$C_1$ $C_2$ Error/Overload Indicator Request Service Request<br>0 X OFF OFF<br>2 X ON OFF<br>4 X OFF ON<br>6 X ON ON<br>-------Control---------<br>Display Data Data Channel Limit<br>X 0 OFF OFF OFF<br>X 1 ON OFF OFF<br>X 2 OFF ON OFF<br>X 3 ON ON OFF<br>X 4 OFF OFF ON<br>X 5 ON OFF ON<br>X 6 OFF ON ON<br>X 7 ON ON ON |

**********

| Request | Output of Instrument Setup |
|---|---|
| WQ | SRQ Mask Data - $C_1C_2,N_1N_2N_3.N_4$<br><br>8 Characters plus up to 2 terminators where:<br>$C_1C_2$ is the SRQ Mask Byte<br>$N_1N_2N_3.N_4$ is the control channel limit band |


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 4-2. DRC-91C Status Register Mask and Status Register Format

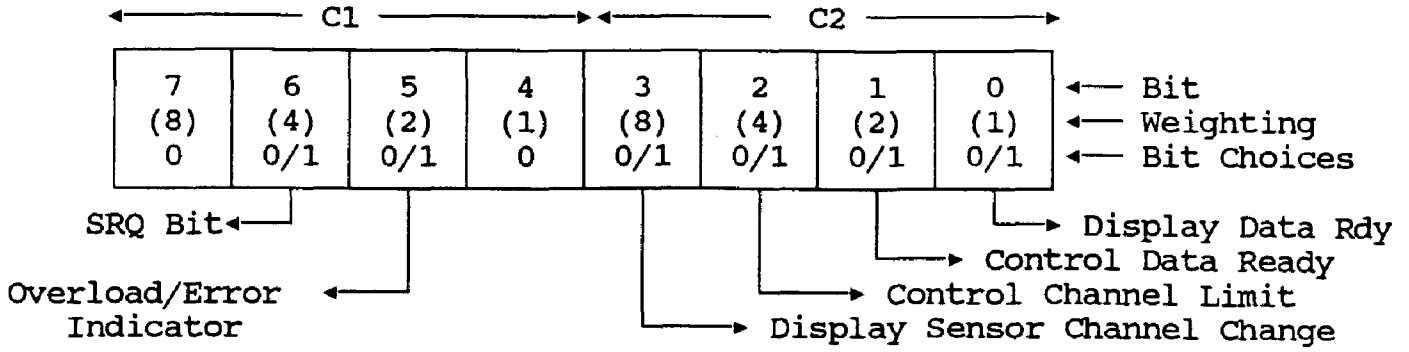



**Table 4-14 Commands to Fix the Status Register Mask**

| $QC_1C_2$ | Not Used | SRQ Bit | Overload /Error Indicator | Not Used | Display Channel Change | Control Data Limit | Control Data Ready | Display Data Ready |
|---|---|---|---|---|---|---|---|---|
| Bit | 3 | 2 | 1 | 0 | 3 | 2 | 1 | 0 |
| Weight | 8 | 4 | 2 | 1 | 8 | 4 | 2 | 1 |
| Q2F | | | On | | On | On | On | On |
| Q40 | | On | | | | | | |
| Q41 | | On | | | | | | On |
| Q42 | | On | | | | | On | |
| Q43 | | On | | | | | On | On |
| Q44 | | On | | | | On | | |
| Q45 | | On | | | | On | | On |
| Q46 | | On | | | | On | On | |
| Q47 | | On | | | | On | On | On |
| Q48 | | On | | | On | | | |
| Q49 | | On | | | On | | | On |
| Q4A | | On | | | On | | On | |
| Q4B | | On | | | On | | On | On |
| Q4C | | On | | | On | On | | |
| Q4D | | On | | | On | On | | On |
| Q4E | | On | | | On | On | On | |
| Q4F | | On | | | On | On | On | On |
| Q60 | | On | On | | | | | |
| Q61 | | On | On | | | | | On |
| . | | . | . | | . | . | . | . |
| . | | . | . | | . | . | . | . |
| Q6E | | On | On | | On | On | On | |
| Q6F | | On | On | | On | On | On | On |

Note: On means 1. Those entries left blank are OFF (0).


COPYRIGHT 3/88 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

### 4.11.4 The "WQ" Data String

This command gives the Status Register Mask and control channel limit information.

## 4.12 COMMAND OPERATIONS

The following example in HP Basic sets the set point to 123.4 K, the gain to 45, the reset (integral) to 30, the rate (derivative) to 25, the heater range to $10^{-1}$ and the output statement to be W1.

```
OUTPUT  712 ; "S123.4P45I30D25R4W1"
                              └── Data
          └── 12 = 91C preset address
               7 = IEEE card address
   └── Output Data Command
```

If the user were to monitor the IEEE-488 Bus when the computer sent its command string over the Bus, the following IEEE-488 Format would be observed.

```
? U , S123.4P45I30D25R4W1 (CR)(LF)
```

The Universal Unlisten Command (?) is sent so that no other instruments on the Bus will eavesdrop on the Bus and assume that the data being sent is for their attention. The DRC-91C's Talk Address (L) is sent to unaddress any existing TALKER. Note that the BUS CONTROLLER could have designated another instrument as the TALKER. Therefore, to keep the format consistent, it must send a Talk Address even when the DRC-91C is going to be that TALKER. The Listen Address (,) must be sent to tell which instrument on the Bus is to receive the Data String. Note that [TERM1][TERM2] have been indicated to be CR LF (carriage return, line feed); these are the correct terminators for the HP computer example.

Note that the string "P45I30P40" would result in a gain of 40 and an integral value of 30, i.e., only the last value sent over the bus for that program code will be entered after the appropriate terminators have been sent over the bus.

### 4.12.1 Output Data Statements

The DRC-91C's Output Requests for Data Statements are summarized in Table 4-5.

The DRC-91C will always respond when asked to talk with the last command sent to it, i.e., if W0 is sent once then the 91C will always output the W0 information whenever it is asked to talk as long as it has not received another output data statement.

### 4.12.2 The "W0" Data String

The following example in HP Basic illustrate the commands associated with obtaining output data from the DRC-91C. The addition of the M0 command returns the instrument to front panel control where it stays even when data is requested from the 91C by the HP computer.

```
10  DIM A$ [19]
20  OUTPUT  712; "W0M0"
30  ENTER   712; A$
```

The following information is sent across the bus in the IEEE-488 format as a result of the above software commands.

Command mode sent:

```
? U , W 0 M 0 (CR)(LF)
```

Data returned:

```
? 5 L +123.45K,+123.42,+123.40K
                          (CR)(LF)
                   └── Data returned
          └── 91C's Talk Address
     └── BUS CONTROLLER's Listen Add
└── Universal Unlisten Command
```

The data above indicates that the display temperature is 123.45K and that the set point is 123.40K.



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 4-15. DRC-91C Output Data Statements

| Request | Output of Instrument Data |
|---|---|
| WS | Sample Sensor Data - ( )$N_1N_2N_3$(.)$N_4N_5$( )<br><br>8 Characters plus up to 2 Terminators where the $N_1$-$N_5$ variations are the same as for W0 (see below). |
| WC | Control Sensor Data - ( )$N_6N_7N_8$(.)$N_9N_{10}$( )<br><br>8 Characters plus up to 2 terminators where the $N_6$-$N_{10}$ variations are the same as for W0 (see below). |
| WP | Set Point Data - ( )$N_{11}N_{12}N_{13}$(.)$N_{14}N_{15}$( )<br><br>8 Characters plus up to 2 terminators where the $N_{11}$-$N_{15}$ variations are the same as for W0 (see below). |
| W0 | Sample (WS), Control Sensor (WC) and Set Point (WP) Data<br><br>( )$N_1N_2N_3$(.)$N_4N_5$( ),( )$N_6N_7N_8$(.)$N_9N_{10}$( ),( )$N_{11}N_{12}N_{13}$(.)$N_{14}N_{15}$()<br><br>26 characters plus up to 2 terminators where:<br>(.) may vary in position dependent on units and temperature.<br>( )$N_1$-$N_5$( ) is the Sign, Display Sensor reading and units.<br>( )$N_6$-$N_{10}$( ) is the Sign, Control Sensor reading and units.<br>( )$N_{11}$-$N_{15}$( ) is the Sign, Set Point and units.<br>Examples of the Display reading are (±)$N_1N_2N_3$(.)$N_4N_5$(F), (±)$N_1N_2N_3$(.)$N_4N_5$(C), ( )$N_1N_2N_3$(.)$N_4N_5$(R) or ( )$N_1$(.)$N_2N_3N_4N_5$(V)<br>Note that all are "free field" where the units are K, C, F, V or R and the sign ( ) may be (±) for the ° and °C scales. |

## 4.13 SAMPLE PROGRAMMING

### 4.13.1 HP86B Keyboard Interactive Program

The following program for the HP86B is an interactive program with the keyboard of the computer. For example, when the user sees the prompt on the screen and types in a valid DRC-91C command such as "W0", the program will result in the display of the DRC-91C response on the screen.

```
10  REM Set IEEE Address to 12
20  REM Address Switch 1 OPEN(0) to get (CR)(LF)
30 REM This program allows the user to communicate with the 91C, interactively
       from the computer keyboard
40  DIM A$[100]                  ! Must be increased for curve information
50  INPUT B$                     ! INPUT KEYBOARD COMMAND
60  OUTPUT 712 ;B$               ! SEND COMMAND TO 91C
70  ENTER 712 ; A$               ! RECEIVE ANSWER FROM 91C
80  DISP A$                      ! DISPLAY ANSWER
90  GOTO 50
100 END
```


COPYRIGHT 3/88 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

### 4.13.2 National Instruments GWBASIC or BASICA IBM Example

The following is the same program written for the National Instruments GPIP-PC2 IEEE-488 Card for IBM PCs and Compatibles using Quick Basic 3.0.

```
10  CLEAR,60969                    ! BASIC DECLARATIONS
20  IBINIT1 = 60969                ! This number is different for each computer
30  IBINIT2 = IBINIT1 + 3
40  BLOAD "bib.m",IBINIT1
50  CALL IBINIT1(IBFIND,IBTRG,IBCLR,IBPCT,IBSIC,IBLOC,IBPPC,IBBNA,IBONL,
IBRSC,IBSRE,IBRSV,IPPAD,IBSAD,IBIST,IBDMA,IBEOS,IBTMO,IBEOT,IBRDF,IBWRTF)
60 CALL IBINT2(IBGTS,IBCAC,IBWAIT,IBPOKE,IBWRT,IBWRTA,IBCMD,IBCMDA,IBRD,IBRDA,
IBSTOP,IBRPP,IBRSP,IBDIAG,IBXTRC,IBRDI,IBWRTI,IBRDIA,IBWRTIA,IBSTA%,IBERR%,
IBCNT%)
70  TEMP$="91C"                    ! 91C is IEEE address label set up in IBCONF
80  CALL IBFIND(TEMP$,TEMP%)       ! Required command to address 91C
90  A$=SPACE$(255)                 ! 255 largest transfer allowed by IBM format
100 INPUT B$                       ! Entered from keyboard while running
110 B$=B$+CHR$(13)+CHR$(10)        ! Add CR and LF to command
120 CALL IBWRT(TEMP%,B$)           ! Send command to 91C
130 CALL IBRD(TEMP%,A$)            ! ENTER from 91C (SEE NOTE BELOW)
140 PRINT A$                       ! Display received information on screen
150 A$=SPACE$(255)                 ! Clear A$
160 GOTO 110
170 END
180 REM  The 91C will return the data requested, but if the command input
190 REM  does not request new information, the 91C will give the information
200 REM  last requested.
```

### 4.13.3 National Instruments QUICK BASIC IBM Example

```
'   IEEE-488 TEST PROGRAM   Quick Basic 3.0 Example
'   THIS PROGRAM WAS WRITTEN FOR THE NATIONAL INSTRUMENTS GPIP-PC2
'   IEEE-488 CARD FOR IBM PC AND COMPATIBLES
'   This program will allow the user to communicate with Lake Shore's
'   instruments, interactively from the keyboard of an IBM compatible
'   computer which has a National Instruments GPIB-PC2 installed.

            common shared IBSTA%, IBERR%, IBCNT%
            TEMP$="dev12"
            call IBFIND(TEMP$,TEMP%)   'Required command to address instrument
            A$=space$(10000)
Loop1:      input B$                    'Entered from keyboard while running
            B$=B$+chr$(13)+chr$(10)     'Add CR and LF to command
            call IBWRT(TEMP%,B$)        'Send command to instrument
            call IBRD(TEMP%,A$)         'ENTER from instrument (SEE BELOW)
            FOR I = 1 to 10000
            C$ = MID$(A$, I,1)
            IF C$ = CHR$(13) THEN GOTO Loop2
            PRINT C$;
            NEXT I
Loop2:      PRINT
            A$ = space$(10000)             'Clear A$
            GOTO Loop1
            END
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

```
'   Lake Shore Cryotronics instruments will return the data requested, but
'   if the command input to the instrument does not request any information
'   the instrument will respond with the information last requested.
```

### 4.13.4 HP86B Bus Commands Program

The following program is for the HP86B and exercises the various bus commands.

```
10 REM Set IEEE Address to 12
20 REM Address Switch 1 OPEN (0) to get (CR)(LF)
30 DIM A$[42]                                   ! For longest string
40 OUTPUT 712;"W0"                              ! Note W0
50 ENTER 712;A$                                 ! Ask for string W0
60 DISP "W0 = ";A$                              ! Display string W0
70 DISP "Display Sensor =";A$[1,8]              ! Display Sensor reading
80 DISP "Control Sensor =";A$[10,17]            ! Display Control Sensor Reading
90 DISP "Set Point =";A$[19,26]                 ! Display Set Point Reading
100 DISP                                        ! Space a Line
110 OUTPUT 712;"W1"                             ! A and B Input information
120 ENTER 712;A$                                ! Ask for string W1
130 DISP "W1 = ";A$                             ! Display string W1
140 DISP                                        ! Space a Line
150 OUTPUT 712;"W2"                             ! Interface Status
160 ENTER 712;A$                                ! Ask for string W2
170 DISP "W2 = ";A$                             ! Display string W2
180 DISP                                        ! Space a Line
190 OUTPUT 712;"W3"                             ! Control Data (Gain, Reset, etc.)
200 ENTER 712;A$                                ! Ask for string W3
210 DISP "W3 = ";A$                             ! Display string W3
220 DISP "Gain =";A$[1,3]                       ! Display Gain setting
230 DISP "Rate =";A$[5,7]                       ! Display Rate setting
240 DISP "Reset =";A$[9,11]                     ! Display Reset setting
250 DISP "Heater Range =";A$[13]                ! Heater Range
260 DISP "% Power =";A$[15,17]                  ! % Power
270 DISP                                        ! Space a Line
280 OUTPUT 712;"WS"                             ! Set for WS
290 ENTER 712;A$                                ! Ask for string WS
300 DISP "WS = ";A$                             ! Display Sensor Reading
310 DISP                                        ! Space a Line
320 OUTPUT 712;"WC"                             ! Set for WC
330 ENTER 712;A$                                ! Ask for string WC
340 DISP "WC = ";A$                             ! Display Control Sensor Reading
350 DISP                                        ! Space a Line
360 OUTPUT 712;"WP"                             ! Set for WP
370 ENTER 712;A$                                ! Ask for set point data
380 DISP "WP = ";A$                             ! Display string WP
390 DISP                                        ! Space a Line
400 OUTPUT 712;"WY"                             ! Set for WY
410 ENTER 712;A$                                ! Ask for Scan Information
420 DISP "WY = ";A$                             ! Display Scan Information
430 DISP                                        ! Space a Line
440 OUTPUT 712;"WI"                             ! Set for WI
450 ENTER 712;A$                                ! Ask Input Cards and Options
460 DISP "WI = ";A$                             ! Display string WI
470 END
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com
COPYRIGHT 3/88 LSCI

## 4.14 SENSOR CURVE PROGRAMMING INSTRUCTIONS

The commands which will either output, input, edit or erase a Sensor Curve are given in Table 4-16. In addition, the commands to assign or change assignments of the various curves to the Sensor ID tables (both A and B) are given in Table 4-16.

### 4.14.1 The XDT Command

This command from the BUS CONTROLLER tells the DRC-91C that when it is asked to output data, that data should be the output of the standard Sensor Curves stored, Precision Option Curves stored and the format associated with the REMOTE SENSOR ID Remote Position to Sensor Curve assignments as given in Table 4-17. This output is defined as the Sensor Curve Information Table (SCIT). As can be seen from the output shown on this page, the instrument is shipped with all remote positions calling up Standard Curve 02.

The information lines for Sensor Curves 05 through 31 will only be present if these curves are actually present either as user generated curves or as Precision Option curves. The Information Table is output as **one very long character string**.

The following program is for the HP86B and is an example of the XDT output (SCIT) for a unit with only Standard Curves 00 thru 05 present.

```
10 REM Program to Output SCIT
20 DIM FILETABLE$[321]
30 OUTPUT 712;"XDT"      !Ask for
40 ENTER 712;FILETABLE$ !Input SCIT
50 DISP FILETABLE$[1,16]!Bytes Free
60 DISP FILETABLE$[17,38] !Nxt Loc
70 DISP FILETABLE$[39,56] !Curve 00
80 DISP FILETABLE$[57,74] !Curve 01
90 DISP FILETABLE$[75,92] !Curve 02
100 DISP FILETABLE$[93,110] !Crv 03
110 DISP FILETABLE$[111,128]!Crv 04
110 DISP FILETABLE$[129,152]!A00
120 DISP FILETABLE$[153,176]
130 DISP FILETABLE$[177,200]
140 DISP FILETABLE$[201,224]!TO A1F
150 DISP FILETABLE$[225,248]!B00
160 DISP FILETABLE$[249,272]
170 DISP FILETABLE$[273,296]
180 DISP FILETABLE$[297,319]!TO B1F
190 END
```

Note that the last character to be displayed is number 319 since the Terminators (CR)(LF) have to be input but not displayed. This program results in the following output of the Sensor Curve Information Table.

```
3584 BYTES FREE,
0200 IS NEXT LOCATION,
00,31,1D40,DRC-D ,
01,31,1DF0,DRC-E1,
02,31,1EA0,CRV 10,
03,31,1F50,DIN-PT,
04,31,2000,CRV 10,
05,31,20B0,RESVRD,
02,02,02,02,02,02,02,02,
02,02,02,02,02,02,02,02,
02,02,02,02,02,02,02,02,
02,02,02,02,02,02,02,02,
02,02,02,02,02,02,02,02,
02,02,02,02,02,02,02,02,
02,02,02,02,02,02,02,02,
02,02,02,02,02,02,02,02
```

### 4.14.2 The XDN$_1$N$_2$ Command

The XDN$_1$N$_2$ command is used to output a particular Sensor Curve (rather than all the curves stored within the instrument as in the XDA command) with N$_1$N$_2$ being the curve number 00 thru 31. The format of the Sensor Curve output is given in Table 4-17. The information is output as **one very long character string**. The following program is for the HP86B and is an example of the XDN$_1$N$_2$ to output Sensor Curve 00.



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

**Table 4-16. Sensor Curve Commands and Description**

| Commands | Output of Information Table, Sensor Curve or All Curves |
|---|---|
| XDT | Output the Sensor Curve Information Table. Refer to Table 4-17 for the format of the output. |
| $XDN_1N_2$ | Output Sensor Curve number $N_1N_2$ where $N_1N_2$ is from 00 to 31. Refer to Table 4-18 for the format of the Sensor Curve output. |
| XDA | Output the Sensor Curve Information Table (XDT) and all the Sensor Curves stored in the unit. Refer to Table 4-17 for format of the Information Table output and Table 4-18 for format of the Sensor Curve output. |
| | Curve Input, Curve Edit and Curve Erasure |
| $XCN_1N_2$, $C_1....C_{18}$, X.XXXXX,TTT.T, . . . . . . . * | Sensor Curve Input. $N_1N_2$ is Sensor Curve number from 06 to 31. Immediately after Sensor Curve cmmnd $XCN_1N_2$ a comma is required. Up to 18 characters can be input as a curve description. When all 18 characters are input, the last 6 are used in the Sensor Curve table (in the 8000 Series Precision Option curves these 6 characters are used to indicate the sensor serial no.) The 18 characters must be immediately followed by a comma. The data is input in units/temperature pairs with the units in the form of Voltage, $R_{equiv}$ or LogR. Data points **must** be entered in ascending units order. The * character terminates the Sensor Curve input. |
| $XEN_1N_2$, X.XXXXX,TTT.T* | Edit Sensor Curve $N_1N_2$. The point is either inserted in its proper position in the curve or it is added to the curve as a new data point. |
| $XKN_1N_2$* | Erases (kills) Sensor Curve $N_1N_2$ and repacks all curve data (Standard Curves 00 thru 05 cannot be erased). |
| XR&I* | Command sent five times will delete all Precision Options and any curves stored in unit by user. |
| | Assignment of Curve # to Position # in Correlation Tables |
| $XAC_1C_2=N_1N_2$* $XBC_1C_2=N_1N_2$* | Assign the Input A or Input B Remote Position $C_1C_2$ to Sensor Curve number $N_1N_2$. $C_1C_2$ is the Remote Position 00 thru 1F. $N_1N_2$ is the Sensor Curve number 00 thru 31 This Command modifies the Remote Position to Sensor Curve Correlation Table 3-3 (and XDT output data). |

**NOTE:** The * added to the end of the $XAC_1C_2$, $XBC_1C_2$, $XCN_1N_2$, $XEN_1N_2$ and XK commands is required for the command to operate properly. Due to the length of some of the data strings, appropriate computer time outs must be allowed when performing these functions. If a hardware problem is detected in modifying one of the NOVRAM locations, an **Err01** error will be displayed and instrument operation is halted. An **Err02** error is displayed if the unit detects a NOVRAM hardware problem.


COPYRIGHT 3/88 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 4-17. Sensor Curve Information Table Output Format

| Command | Output |
|---|---|
| XDT | $N_1N_2N_3N_4$( BYTES FREE)(,)<br>$H_1H_2H_3H_4$( IS NEXT LOCATION)(,)<br>(00)(,)(31)(,)(1D40)(,)(DRC-D )(,)<br>(01)(,)(31)(,)(1DF0)(,)(DRC-E1)(,)<br>(02)(,)(31)(,)(1EA0)(,)(CRV 10)(,)<br>(03)(,)(31)(,)(1F50)(,)(DIN PT)(,)<br>(04)(,)(31)(,)(2000)(,)(CRV 10)(,)<br>(05)(,)(31)(,)(20B0)(,)(RESVRD)(,)<br>.<br>(31)(,).....(,)<br>$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)<br>$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)<br>$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)<br>$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)<br>$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)<br>$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)<br>$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$(,)$C_1C_2$<br>[TERM1][TERM2]<br><br>A minimum of 321 Characters (when only the 6 Standard Curves are present) and a maximum of 805 Characters (when all 32 Curves are present) plus up to 2 Terminators where:<br>$N_1N_2N_3N_4$ is the decimal number of curve locations available (BYTES FREE).<br>$H_1H_2H_3H_4$ is the Hex address the next curve will start at.<br>$C_1C_2$ is the Sensor Curve assigned to Remote Position A00 through A1F and B00 through B1F. |

Table 4-18. $XDN_1N_2$ Sensor Curve Output Format

| Command | Output |
|---|---|
| $XDN_1N_2$ | $N_1N_2$(,)<br>$C_1$.....$C_{18}$(,)$C_{19}$(,)$N_3N_4$(,)<br>(X.XXXXX)(,)(TTT.T)(,)<br>.<br>(X.XXXXX)(,)(TTT.T)<br><br>A minimum of 54 Characters (for a curve with the minimum of 2 data points) and a maximum of 1412 Characters (for a curve the maximum of 97 data points) plus up to 2 Terminators where:<br>$N_1N_2$ is the Sensor Curve number 00 thru 31.<br>$C_1$-$C_{18}$ is the 18 Character Information line.<br>$C_{19}$ is the Temperature Coefficient, P or N.<br>$N_3N_4$ is the number of data points 00 thru 99.<br>X.XXXXX is the Voltage, Equivalent V or Log R.<br>TTT.T is the Temperature to 0.1 only. |

COPYRIGHT 3/88 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

```
10  REM Program to output Curve
    Table
20  DIM Curve$[462]
30  OUTPUT 720;"XD00"
40  ENTER 720;Curve$
50  REM Display Curve #, Title,
    Temperature
60  REM Coefficient and Number of
    Breakpoints
70  DISP Curve$[1,27]
80  REM Display voltage and temp
    data points
90  I=28
100 DISP Curve$[I,I+41] ! Voltage;
    Temp.
110 IF I=447 THEN 140 ! I=477 for
    D.Pnt 31
120 I=I+42
130 GOTO 100
140 DISP Curve$ [448,460]
150 END
```

Note that the last character to be displayed is number 460 since the Terminators (CR)(LF) have to be input but not displayed. This results in the following display.

```
00,      STANDARD DRC-D ,N,31,
0.00000,499.9,0.19083,365.0,
0.24739,345.0,0.36397,305.0,
0.42019,285.0,0.47403,265.0,
0.53960,240.0,0.59455,220.0,
0.73582,170.0,0.84606,130.0,
0.95327,090.0,1.00460,070.0,
1.04070,055.0,1.07460,040.0,
1.09020,034.0,1.09700,032.0,
1.10580,030.0,1.11160,029.0,
1.11900,028.0,1.13080,027.0,
1.14860,026.0,1.07200,025.0,
1.25070,023.0,1.35050,021.0,
1.63590,017.0,1.76100,015.0,
1.90660,013.0,2.11720,009.0,
2.53660,003.0,2.59840,001.4,
6.55360,000.0
```

The N indicates that the silicon diode is a negative temperature coefficient device. For the platinum curve (03), which is a positive temperature coefficient device, a P will appear in that position.

### 4.14.3 The XDA Command

The XDA command asks for the output of the Sensor Curve Information Table as well as **all** the Sensor Curves stored in the unit. When the command XDA is used, the 91C will output the Information Table formatted as in Table 4-17 followed by a comma (in place of the Terminators) followed by each Sensor Curve in ascending order with a comma between each Sensor Curve (in place of the Terminators) as in Table 4-18 until all the curves have been output followed by the Terminators. The information is output as **one very long character string**.

### 4.14.4 The $XCN_1N_2$ Command

The $XCN_1N_2$ command is the most powerful curve command in the 91C. It allows for the remote input of Sensor Curves. The Sensor Curves that can be input using the XC command are 06 thru 31 (note that the first five curves 00 thru 04 are the Standard Curves with Curve 05 reserved). The format for the XC command is given in Table 4-16. The format for the XC command **must** be followed for the curve entry to be successful. Following the $XCN_1N_2$ (where $N_1N_2$ is between 06 and 31) is a comma. Then up to 18 characters can be entered as a curve information line. At least one character is required and any more than 18 characters are ignored. If 18 characters are input, the last 6 are used in the Sensor Curve Information Table as a capsule description of the curve (in the 8000 Series Precision Option curves these 6 characters are used to indicate the sensor serial number). The 18 characters must be immediately followed by a comma. The data points are then input in the form X.XXXXX, comma, TTT.T. The X.XXXXX input is in Voltage, Capacitance or LogR. Refer to Table 4-19 for the conversion of the raw units information into the format required for the XC command. The unit automatically


COPYRIGHT 3/88 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

fills in leading and trailing zeroes in the data point. A data point entered as ...,0.8,70,... would be converted by the unit into ...,0.80000,070.0,... . The data points **must be entered in ascending units order**. After all the data points are entered the (*) character terminates the Sensor Curve input.

Following the input of the (*) to indicate to the unit that the there are no more data points, it determines and stores whether the curve is a positive or negative temperature coefficient curve. Based on temperature coefficient, the unit then stores the curve end points. For a negative temperature coefficient curve the first end point is 0.00000,499.9 and the last end point is 6.55360,000.0. For a positive temperature coefficient curve the first end point is 0.00000,000.0 and the last end point is 6.55360,999.9. Therefore, the minimum number of data points which the user can input for a curve is 1 (which would result in a 3 data point curve) and the maximum number of data points is 97 (which would result in a 99 point curve). The XC information **must be output to the unit as one very long character string**.

The first character of the 18 character management string indicates the type of breakpoints to be entered. If the character is an "L", then the unit performs Lagrangian calculations on the data. If the character is anything else, the unit performs Straight-Line interpolation on the data. See Appendix B for a description of the difference between the two. In addition, sensor type and temperature range is included in this 18 characters as well.Curves 06 thru 31 are stored in Non-Volatile RAM (NOVRAM) where the first 0200 hex bytes are reserved for file management. There are 3584 bytes free for the storage of curves. If the curve stored has 31 data points, it will take up 177 bytes. For this length curve, up to 20 curves can be stored in the unit. Refer to Appendix B for additional information on curve entry and how the curves are generated.

### 4.16.5 The $XEN_1N_2$ Command

The command $XEN_1N_2$,X.XXXXX,TTT.T* either adds a point to or edits the $N_1N_2$ curve (provided that this curve is present). The * terminates the data point input. If either the units or temperature information matches one of the data points in the curve the curve data point edited to match the XE data point If the information does not match any of the data points for the curve, the unit inserts the point in its proper position in the table.

### 4.16.6 The $XKN_1N_2$* Command

The command $XKN_1N_2$* erases all the data associated with curve number $N_1N_2$ and repacks the remaining curves stored within the NOVRAM. Standard Curves 00 thru 05 are stored in a Prom and are not erasable by this command.

### 4.16.7 The $XAC_1C_2$=$N_1N_2$* and $XBC_1C_2$=$N_1N_2$* Commands

The XA an XB commands allows Table 3-4 which defines the correlation between the Remote Position and Sensor Curves for the REMOTE SENSOR ID. Note that this correlation exists for both inputs and normally only one input would select the REMOTE SENSOR ID position data. Once this data has been changed, it would be good practice to read out the changed table by means of the XDT command and update Table 3-4. $C_1C_2$ is the hex Remote Position, 00 thru 1F, and $N_1N_2$ is the decimal curve number 00 thru 31.

COPYRIGHT 3/88 LSCI



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 4-19. Conversion of Raw Units Data for the XC Command

| Input Card | Units | Conversion |
|---|---|---|
| 9210/20-3<br>9210/20-6 | Voltage | Input range is 0.00000 to 6.55350 volts. No conversion is necessary. |
| 9215 | Capacitance | No conversion to temperature is allowed |
| 9317C<br>9318C | Resistance | Input range is 1 to $10^4$ Ω for the 9317C, 1 to $10^5$ Ω for the 9318C. Input must be in Log R where 1 Ω would look like 0.00000 and $10^5$ Ω would look like 5.00000. |
| 9220-P2 | Resistance | Input range is 0.00 to 299.99 ohms. 0.00 ohms looks like 0.00000 and 299.99 ohms looks like 2.99990 (0.01 times R). |
| 9220-P3 | Resistance | Input range is 0.0 to 2999.9 ohms. 0.0 ohms looks like 0.00000 and 2999.9 ohms looks like 2.99990 (0.001 times R). |
| 9220-R1 | Resistance | Input range is 0.00 to 100.00 ohms. 0.00 ohms looks like 0.00000 and 100.00 ohms looks like 3.00000 (0.03 times R). |


COPYRIGHT 3/88 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# S E C T I O N V

# M A I N T E N A N C E

## 5.1 INTRODUCTION

This section contains information necessary to maintain the Model DRC-91C. General maintenance, fuse replacement, line voltage selection and performance testing is contained in this section.

## 5.2 GENERAL MAINTENANCE

Clean the DRC-91C periodically to remove dust, grease and other contaminants. Use the following procedure:

1. Clean the front and back panels and case with a soft cloth dampened with a mild detergent and water solution.

Note: **DO NOT** use aromatic hydrocarbons or chlorinated solvents to clean the DRC-91C. They may react with the plastic materials used in the unit or the silk screen printing on the back panel.

2. Clean the surface of the printed circuit boards (PCB) using clean, dry air at low pressure. If grease is encountered, spray with Freon T.F. degreaser and remove grime with dry, low-pressure air.

## 5.3 FUSE REPLACEMENT

The line fuse is accessible from the rear of the DRC-91C. Use the following procedure to check and/or replace the fuse:

**WARNING**

To prevent shock hazard, turn off instrument and disconnect it from AC line power and all test equipment before replacing the fuse.

1. Set the POWER switch to OFF and disconnect the power cord from the unit. The fuse compartment is located just to the right of the power connector.

2. Open the fuse compartment by prying open the cover with a small screw driver.

3. Remove the lower fuse holder by sliding it out of its position with the aid of the small screw driver.

**CAUTION**

For continued protection against fire hazard, replace only with the same type and rating of fuse as specified for the line for the line voltage selected.

4. Replace the fuse per Table 2-1.

5. Replace fuse holder, close fuse compartment and connect power cord.

## 5.4 LINE VOLTAGE SELECTION

The rear-panel, three-pronged line power connector permits the DRC-91C to be connected to 100, 120, 220, or 240 VAC line voltages. Use the following procedure to change the line voltage:

COPYRIGHT 3/88
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

**WARNING**

To prevent shock hazard, turn off the instrument and disconnect it from AC line power and all test equipment before changing the line voltage selection.

1. Pull fuse compartment cover using the procedure found in Section 5.3.

2. Remove voltage selector wheel and insert with the proper voltage facing out. Note that the wheel can only be inserted with the writing read from the left.

3. Install the proper fuse as outlined in Section 5.3.

## 5.5 OPERATIONAL CHECKS

### 5.5.1 Test Connector

A test connector for the rear panel J1 INPUT A or J2 INPUT B connector to simulate a diode sensor input is required for operational checks of the DRC-91C. The test connector can be made by taking one of the plugs supplied with the DRC-91C and configuring a resistor to simulate the temperature sensor in the two wire configuration as described in Section 2.3.6. The test resistors specified in Table 5-1 are used in the operational checks.

### 5.5.2 Operational Test Procedure

The operational test procedure is designed to verify the overall operation of the DRC-91C and can be used as a periodic maintenance check. The following equipment is used in the test.

1. Digital Voltmeter - 4½ digit resolution or better.

2. Test Connector - fabricated per Section 5.5.1.

Complete the following set-up procedure for this test:

1. Plug the connector into INPUT A.

2. Connect the DVM across the test resistor of Input A.

3. Connect the DRC-91C to line power and turn the unit ON. Verify that the DRC-91C initializes to the proper POWER-ON state as defined in Section 3.7.

The following procedure is used to test the overall DRC-91C operation.

Note: The unit should be allowed a one-hour warm-up time to achieve rated specifications.

### 5.5.3 Current Source Check

The DVM across the test resistor should read as follows:

| | |
|---|---|
| 9210/20-3 | 1.0000V ± 100μV |
| 9210/20-6 | 1.0000V ± 100μV |
| 9220-P2 | 0.10000V ± 10μV |
| 9220-P3 | 0.10000V ± 10μV |
| 9220-R1 | 0.03000V ± 10μV |
| 9317C | N/A |
| 9318C | N/A |

### 5.5.4 Monitor Voltage

The voltage across the sensor or test resistor is also available on the monitor plug. The connections are given in Section II of this manual. The monitor voltage will be equal to the sensor voltage for 3 volt (-3) diode inputs and all platinum (-P2, -P3) and rhodium iron (-R1) inputs. If the input is a GaAlAs Diode (-6) input then the monitor voltage will be 0.458 times the sensor voltage. This test is not applicable for the 9215, 9305, 9317C or 9318C input cards.


COPYRIGHT 3/88 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

### 5.5.5 Temperature Display

**5.5.5.1 Determine Input Type** - The first step to check the instrument's display and operation is to determine the type of sensor input.

a. The type of input option card(s) installed in the DRC-91C is located on the front page of every DRC-91C manual.

b. The DRC-91C displays the type of input card(s) installed in the A and B inputs sequentially when the instrument is powered on. Possibilities are 9210-3, 9210-6, 9215-30, 9215-150, 9220-3, 9220-6, 9220-P2, 9220-P3, 9220-R1, 9305, 9317C or 9318C.

c. The type of input can also be displayed by holding down the A or B Display key.

**5.5.5.2 Check units display-** Verify that the A units can be changed by holding in the UNITS key and using the ▲▲ or the ▼▼ to scroll through the sequence K, C, F, V, K, etc. (Note: the unit goes to V for a diode configuration 9210-3, -6 or 9220-3, -6) or Ω for a resistance card configuration (9220-P2, -P3, -R1 or 9317C/ 9318C Input card).

**5.5.5.3 Check sensor units reading** Next, check to see if the instrument is reading the correct sensor units (volts, ohms or nanofarads) value for the appropriate test resistor or capacitor from Table 5.1. The reading should match the value given in the Display in Sensor Units column of Table 5-1. The allowable error is provided in the Input A/D Accuracy column.

**5.5.5.4 Check temperature reading-** Confirm that the temperature in kelvin displayed corresponds to the selected curve number.

a. Check the Sensor Curve Table (Table 3-2 or below) to determine the curve number that selects the standard curve or precision option that is needed. A 9215 card will not read temperature. The 9317C/9318C will not read accurately in temperature unless a precision option is present.

b. Select the curve as described in Section 3-9.

| Curve No. | Switch 45678 | Temperature Displayed,K | Curve |
|---|---|---|---|
| 00 | 00000 | 71.79 | DRC-D |
| 01 | 00001 | 71.42 | DRC-E1 |
| 02 | 00010 | 87.77 | CRV 10 |
| 03 | 00011 | 273.1 | DIN-PT |
| 04 | 00100 | 87.77 | CRV 10 |

**5.5.5.5 Check Input B** - Change the connector from J1 INPUT A to J2 INPUT B. Repeat the above process by verifying the current source and the A/D settings for this input as well as the units change.

### 5.5.6 Heater Output Test

**5.5.6.1 Heater Output Conditions-** The heater should output power when the setpoint temperature is above the display temperature, as long as the heater is on and a gain value has been entered. If the sensor is a diode, the voltage across the device will change inversely with temperature. Therefore the higher the voltage the lower the temperature. For Platinum sensors the resistance increases as the temperature increases. Germanium and carbon glass sensors are negative temperature coefficient resistance sensors which vary several orders of magnitude in resistance with temperature.



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5.5.6.2 **Test Setup** - Test the heater by placing an appropriate test resistor (see Table 5-1) into the control sensor input, and place a 10 ohm (at least 10 watts) up to 50 ohm (at least 50 watts) resistor across the heater terminals.

5.5.6.3. **The Heater Display** - The heater display is shipped from the factory reading the percent of power out. If the heater is 10 ohms then at 100 percent output current, the heater will have 1 amp through it and 10 volts across it. If the heater bar graph is reading 50% then the instrument is delivering 5 watts (0.707 amps and 7.07 volts) to the 10 ohm load. If the unit is reading in current a reading of 50 will mean 2.5 watts (0.5 amps and 5 volts). The heater display can be changed from power to current by switching internal dip switch S7-1.

5.5.7 **Checking Gain, Reset and Rate**

Check the operation of the Gain, Rate and Reset as follows:

1. Place a dummy load into the selected sensor input.
   a. 50K to 100K for a diode.
   b. Short $V^+$ to $V^-$ for 9317C or 9318C Input Card.
   c. 10nF capacitor for 9215 Input Card.

2. Place a 10 ohm, 10 watt (or greater) resistance load on the heater terminals.

3. Set the Display Units to Sensor Units, i.e., volts, ohms or nanofarads.
   a. If 9210-3/20-3 enter a voltage 0.01 volts less than the display.
   b. If 9317C or 9318C, enter a resistance of 1 ohm for the set point.
   c. If 9215 enter 11nF set point.

5.5.7.1. **Gain** - Enter a gain value. The heater display should now indicate that power is being delivered to the heater. The amount of power is a scaled factor of the error signal times the gain ([Sensor voltage - Setpoint voltage] * Gain). If the setpoint temperature is increased or the gain is increased the output power will increase.

Keep the LO lead of the DVM at TP1 and move the HI lead to TP29. Turn off the GAIN, RATE and RESET by entering a value of 0.0 for each. The DVM will now read approximately 0.0 volts. Change the GAIN to 1.0 and the DVM will read approximately 0.1 volts which is the error 0f 0.01 times the gain of 10. Change the GAIN to 10 and the DVM will read approximately 1 volt. Setting the GAIN to 99 will result in a reading of approximately 7.2 volts.

5.5.7.2 **Reset** - Set up the controller as instructed in step 5.5.6.1. Enter a gain and setpoint value that results in less than full power to the load. If a Reset value is now entered, the instrument will try to integrate out the error. With a test resistor in the control sensor input and a fixed setpoint, the error signal will be constant. With a constant error the Reset will continue to increase the analog output control signal until the heater display reads 100 percent. If the heater output increases to approximately 100 percent for these conditions the reset circuit is operating.

To check the RESET circuit in more detail use the same set point and a GAIN of 10. Move the HI lead of the DVM to TP30 and enter a RESET of 1.0. The reading on the DVM should gradually integrate to approximately 7.2 volts. The time required will depend on the amount


COPYRIGHT 3/88 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

of reset with time required being the shortest for higher settings. Next, turn the reset off and make sure that the reading returns to 0.0 volts.

**5.5.7.3 Rate** - The operation of the Rate can not be observed without measuring voltages in the unit.

To check the RATE move the DVM HI lead to TP31, keep the GAIN at 10, turn the RESET off (0.0) and enter a RATE to 99. The DVM should read 0.0 volts. Quickly change the set point value from approximately equal to the display value to a value 20% higher in equivalent kelvin temperature, e.g. from 1.00 volts to 0.80 volts. The DVM should show a positive transient whose peak value will lie between 0.1 and 7 volts depending on the rate at which you change the set point, the amount of gain, the speed at which you change the voltage as well as when the reading is read by the DVM. For the change from .80 to 1.00 the reading will be negative in value.

The GAIN, RATE and RESET values are summed together before the heater drive circuit with the GAIN being multiplied by two in signal strength before summation. The sum of the three terms can be measured at TP28 ANA OUT.

### 5.5.8 Checking the Heater Ranges

**5.5.8.1 Standard 25 Watt output** - Set up the unit so that 100 percent is output to the heater load. At full power out on the Max scale 1 amp should be through the resistor, as long as the resistor is 25 ohms or less. The heater circuit has a compliance voltage limit of 25 volts, so a resistor larger than 25 ohms will limit the current to 25 divided by the load's Resistance. If the next lower range (-1) is selected then the heater will put 0.33 amperes through the resistor at 100 percent. The -2 range will output 0.10 amperes at full scale output. At the -3 range the output will be 0.033 amperes full scale and at the -4 range the output will be 0.001 amperes

**5.5.8.2 W60 Watt Option** - If the unit has a W60 output option the Max scale has a 1.55 amp, 40 volt limit. If a 25 ohm resistor is used the controller will supply 60 watts to the load. If a 100 ohm resistor is used on the Max scale the unit will output 40 volts at 0.4 amps or 16 watts. The lower ranges are scaled as explained in 5.5.7.1 above except the voltage limit is 44 volts.

NOTE: The values given above are nominal values. If they are slightly off it should not effect operation since the heater circuit is part of a feedback loop.

## 5.6 CALIBRATION

The adjustments and test points referred to in this section are labeled on the instrument calibration cover. Remove the two top panel screws and slide the top cover off to gain access to the adjustments and test points.

Note: The unit should be allowed a one-hour warm-up time to achieve rated specifications. This calibration procedure is for a DRC-91C with standard diode A and B inputs. For other configurations, refer to Section VI for the specific Input Card present in the unit.

### 5.6.1 Input Card Calibration

Calibrate each input card as specified in Section VI for that card.

COPYRIGHT 3/88

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

### 5.6.2 Set Point Voltage Calibration

Calibrate the Set Point Voltage as follows:

1. Remove the instrument cover.

2. Calibrate with the Control Switch selecting either a 9210 or 9220 Input Card and the -3 configuration. If the DRC-93C does not contain one of these input cards, calibrate the set point by following the procedure described with that Input Card.

3. To calibrate the Set Point voltage with a 9210 or 9220 card, connect the LO lead of your DVM to TP1 and the HI lead to TP25 SP V.

4. Enter a set point of 0.0000V and adjust the potentiometer labeled SP ZERO ADJ until the DVM reads 0.0000 volts.

5. Enter a set point of 2.7000V and adjust the potentiometer labeled SP SPAN ADJ until the DVM reads -2.7000 volts.

6. Repeat the two settings until the values are constant.

### 5.6.4 Calibration of Power Output

If the heater output is not the standard 25 watts for the DRC-91C, the optional power output installed should be indicated on the front page of this manual.

1. Use a load resistor between 10 and 25 ohms with a wattage rating equivalent to its resistance. The W60 output requires a 25 ohm load with a wattage rated 1.5 times the resistance value.

Set a set point and gain value which results in full scale output on the MAX Heater Range scale.

2. With full power across the load resistor on the -1 scale, place the DVM LO probe in TP19 PWR V+ and the DVM HI probe in TP21 and adjust PWR V+ until the DVM reads 1.000 volts. There now should be one ampere through the load (1.5 amperes in the case of the W60). The heater can now be turned off.

3. Place the DVM LO into TP15 PWR V- and the DVM HI into TP17 HTR V+ and adjust PWR V- ADJ until the DVM reads 1.0000 volts.

4. Place the DVM LO into TP20 PWR LO and the DVM HI into TP16 VREF and adjust PWR VREF until the DVM reads 1.0000 volts.

5. Repeat 3 and 4 until they do not change.

Note: TP 24 CNT V is the control voltage. For the 9210/20-3 it is the voltage across the sensor; for the 9210/20-6 it is 0.458 times the voltage across the sensor. TP 25 is the set point voltage and is of opposite sign from TP 24. These two voltages algebraically sum to the error signal.

## 5.7 TROUBLESHOOTING

Information on troubleshooting the Model DRC-91C controller is contained in this Section.

### 5.7.1 Sensor Current

If the sensor current is not within specifications (Section 5.5.3) then adjust the current trimpot on the input card (Section VI).


COPYRIGHT 3/88 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

### 5.7.1 Monitor Voltage, Display Voltage or Resistance

The display reading in volts or resistance should match the monitor reading and the voltage across the sensor, except for the 9215, 9305, 9317C and 9318C input cards and the -6 configuration. If the readings do not match then the input card should be calibrated. If the monitor reading is incorrect and can not be adjusted then the following IC's may need to be replaced.

"Old" Input cards
1. 8210, 8211 cards - replace U5
2. 8219, 8220 cards - replace U5. If that does not solve the problem then replace U4.

"New" Input Cards
1. 9210, 9220 cards - replace U5
2. For the 9318C, the monitor voltage should be approximately ±10mV. If it is not between 5-16mV then U16, U13 or U10 could be bad. For the 9317C the monitor voltage should be approximately a factor of ten lower. The same three IC's are involved.

If the monitor voltage is incorrect, the input card may control at an offset or not at all.

If the sensor voltage matches the monitor voltage and the display voltage is incorrect then the A/D needs to be calibrated.

### 5.7.2 Units Display is correct but temperature reading is incorrect

If the units display matches the voltage or resistance value of the sensor, but the temperature display is incorrect then check the curve selected. This can be accomplished by holding down the LOCAL button or by reading the selected curve over the interface using the W1 command. If the correct curve is selected, but the display in temperature is still incorrect, then check the data in the curve. This can be done over the IEEE by using the test program and the $XDN_1N_2$ command.

### 5.7.3 The Heater Circuit

If the DRC-91C does not have output power check to see that U13 on Figure 91C-1C (the LM317HVK) is tightly screwed into its heat sink. It is on standoffs near the fan in the left rear of the unit.

Configure the DRC-91C as in Section 5.5.6.2. Verify that there is heater current going to the load resistor.

Next, measure the analog out signal to be sure the PID circuits are operating correctly. The analog out signal can be measured at TP28 (Gnd at TP1). If this is a positive value that varies from 0-7.3 volts as the gain, setpoint, or reset values are changed then the circuit is probably operating correctly. Now measure the voltage across from TP19 to TP21. The voltage should vary from 0 to 1 volt as the analog out signal varies from 0 to 7.3 volts. As the gain or manual heater is increased the analog signal will increase and the voltage between TP19 and TP21 will increase. If the voltage stays at 0 Volts then U45 or U46 is probably bad as long as the raw V+(TP21 to TP6) is close to 28 volts. The V+ can be checked by measuring approximately 28V from TP21 to TP1. The V+ value is over 50 Volts if a W50 watt option is installed in a DRC-91C or if the resistor setting is 50 ohms on the DRC-93C. If a W60 Watt option is installed the V+ voltage should be approximately 44 volts.

If the Voltage from TP19 to TP21 is


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

correct, and there is no heater power on any range than U47 or U48 are probably bad and both should be replaced. Before it is decided that U47 and U48 are bad be sure the relays K4-K8 are working. If they can be heard clicking as they are turned off and on, then they are probably operating properly. They are turned off and on by selecting different heater ranges.



COPYRIGHT 3/88 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 5-1: Input Card Characteristics

| Sensor Input | Sensor Type | Temp Range and Units Range | Sensor Current | Input A/D Resolution | Input A/D Accuracy | Test Resistor | Display in Sensor Units | Standard Curves | Display with Std Curves (K) |
|---|---|---|---|---|---|---|---|---|---|
| 8210<br>9210-3<br>9220-3 | Si<br>Diodes | 1.4 to 475K<br>0-2.9999V | 10μA | 0.05mV | ±0.1mV | 100kΩ<br>0.01% | 1.0000V | DRC-D (00)<br>DRC-E1(01)<br>CRV 10(02)<br>CRV 10(04) | 71.79<br>71.42<br>87.77<br>87.77 |
| 9210-6<br>9220-6 | GaAlAs<br>Diodes | 1.4 to 325K<br>0-6.5535V | 10μA | 0.1mV | ±0.2mV | 100kΩ<br>0.01% | 1.0000V | no std crv<br>see note 3 | |
| 8219-P2<br>9220-P2 | 100Ω<br>Pt RTD | 14 to 800K<br>0-299.99Ω | 1mA | 0.005Ω | ±0.01Ω | 100Ω<br>0.01% | 100.0Ω | Din 43760<br>(03) | 273.1 |
| 8219-P3<br>9220-P3 | 1000Ω<br>Pt RTD | 14 to 800K<br>0-2999.9Ω | 0.1mA | 0.05Ω | ±0.1Ω | 1000Ω<br>0.01% | 1000Ω | Din 43760<br>(03) | 273.1 |
| 8219-R1<br>9220-R1 | RhFe<br>RTDs | 14 to 800K<br>0-99.999Ω | 3mA | 0.003Ω | ±0.01Ω | 10Ω<br>0.01% | 10.00Ω | no std crv<br>see note 3 | |
| 9317C | Ge<br>CGR | 0.3 to 100K<br>see note 1<br>1.4 to 325K<br>1 to 10,000Ω | see<br>note 2 | 1 in $10^4$ | +0.1% fr<br>I0-1000Ω<br>+0.5% fr<br>Ik-100kΩ | 100Ω<br>0.01% | 100.00Ω | no std crv<br>see note 3 | |
| 9318C | Ge<br>CGR | 1.4 to 100K<br>see note 1 | see<br>note 2 | 1 in $10^4$ | +0.05%fr<br>I0-10kΩ<br>+0.25%fr<br>I0k-100k | 100Ω<br>0.01% | 100.00Ω | no std crv<br>see note 3 | |

Note 1: The lower temperature limit is dependent upon resistance-temperature characteristic of sensor used.
Note 2: 0.1μA to 1.0mA. Sensor voltage pinned at 1mV (9317C) or 10mV (9318C).
Note 3: To read correctly in temperature these input cards must be used with calibrated sensors and the 8001 precision option.
Note 4: 9317C and 9318C will read to 1 ohm full scale with reduced accuracy.

COPYRIGHT 3/88



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

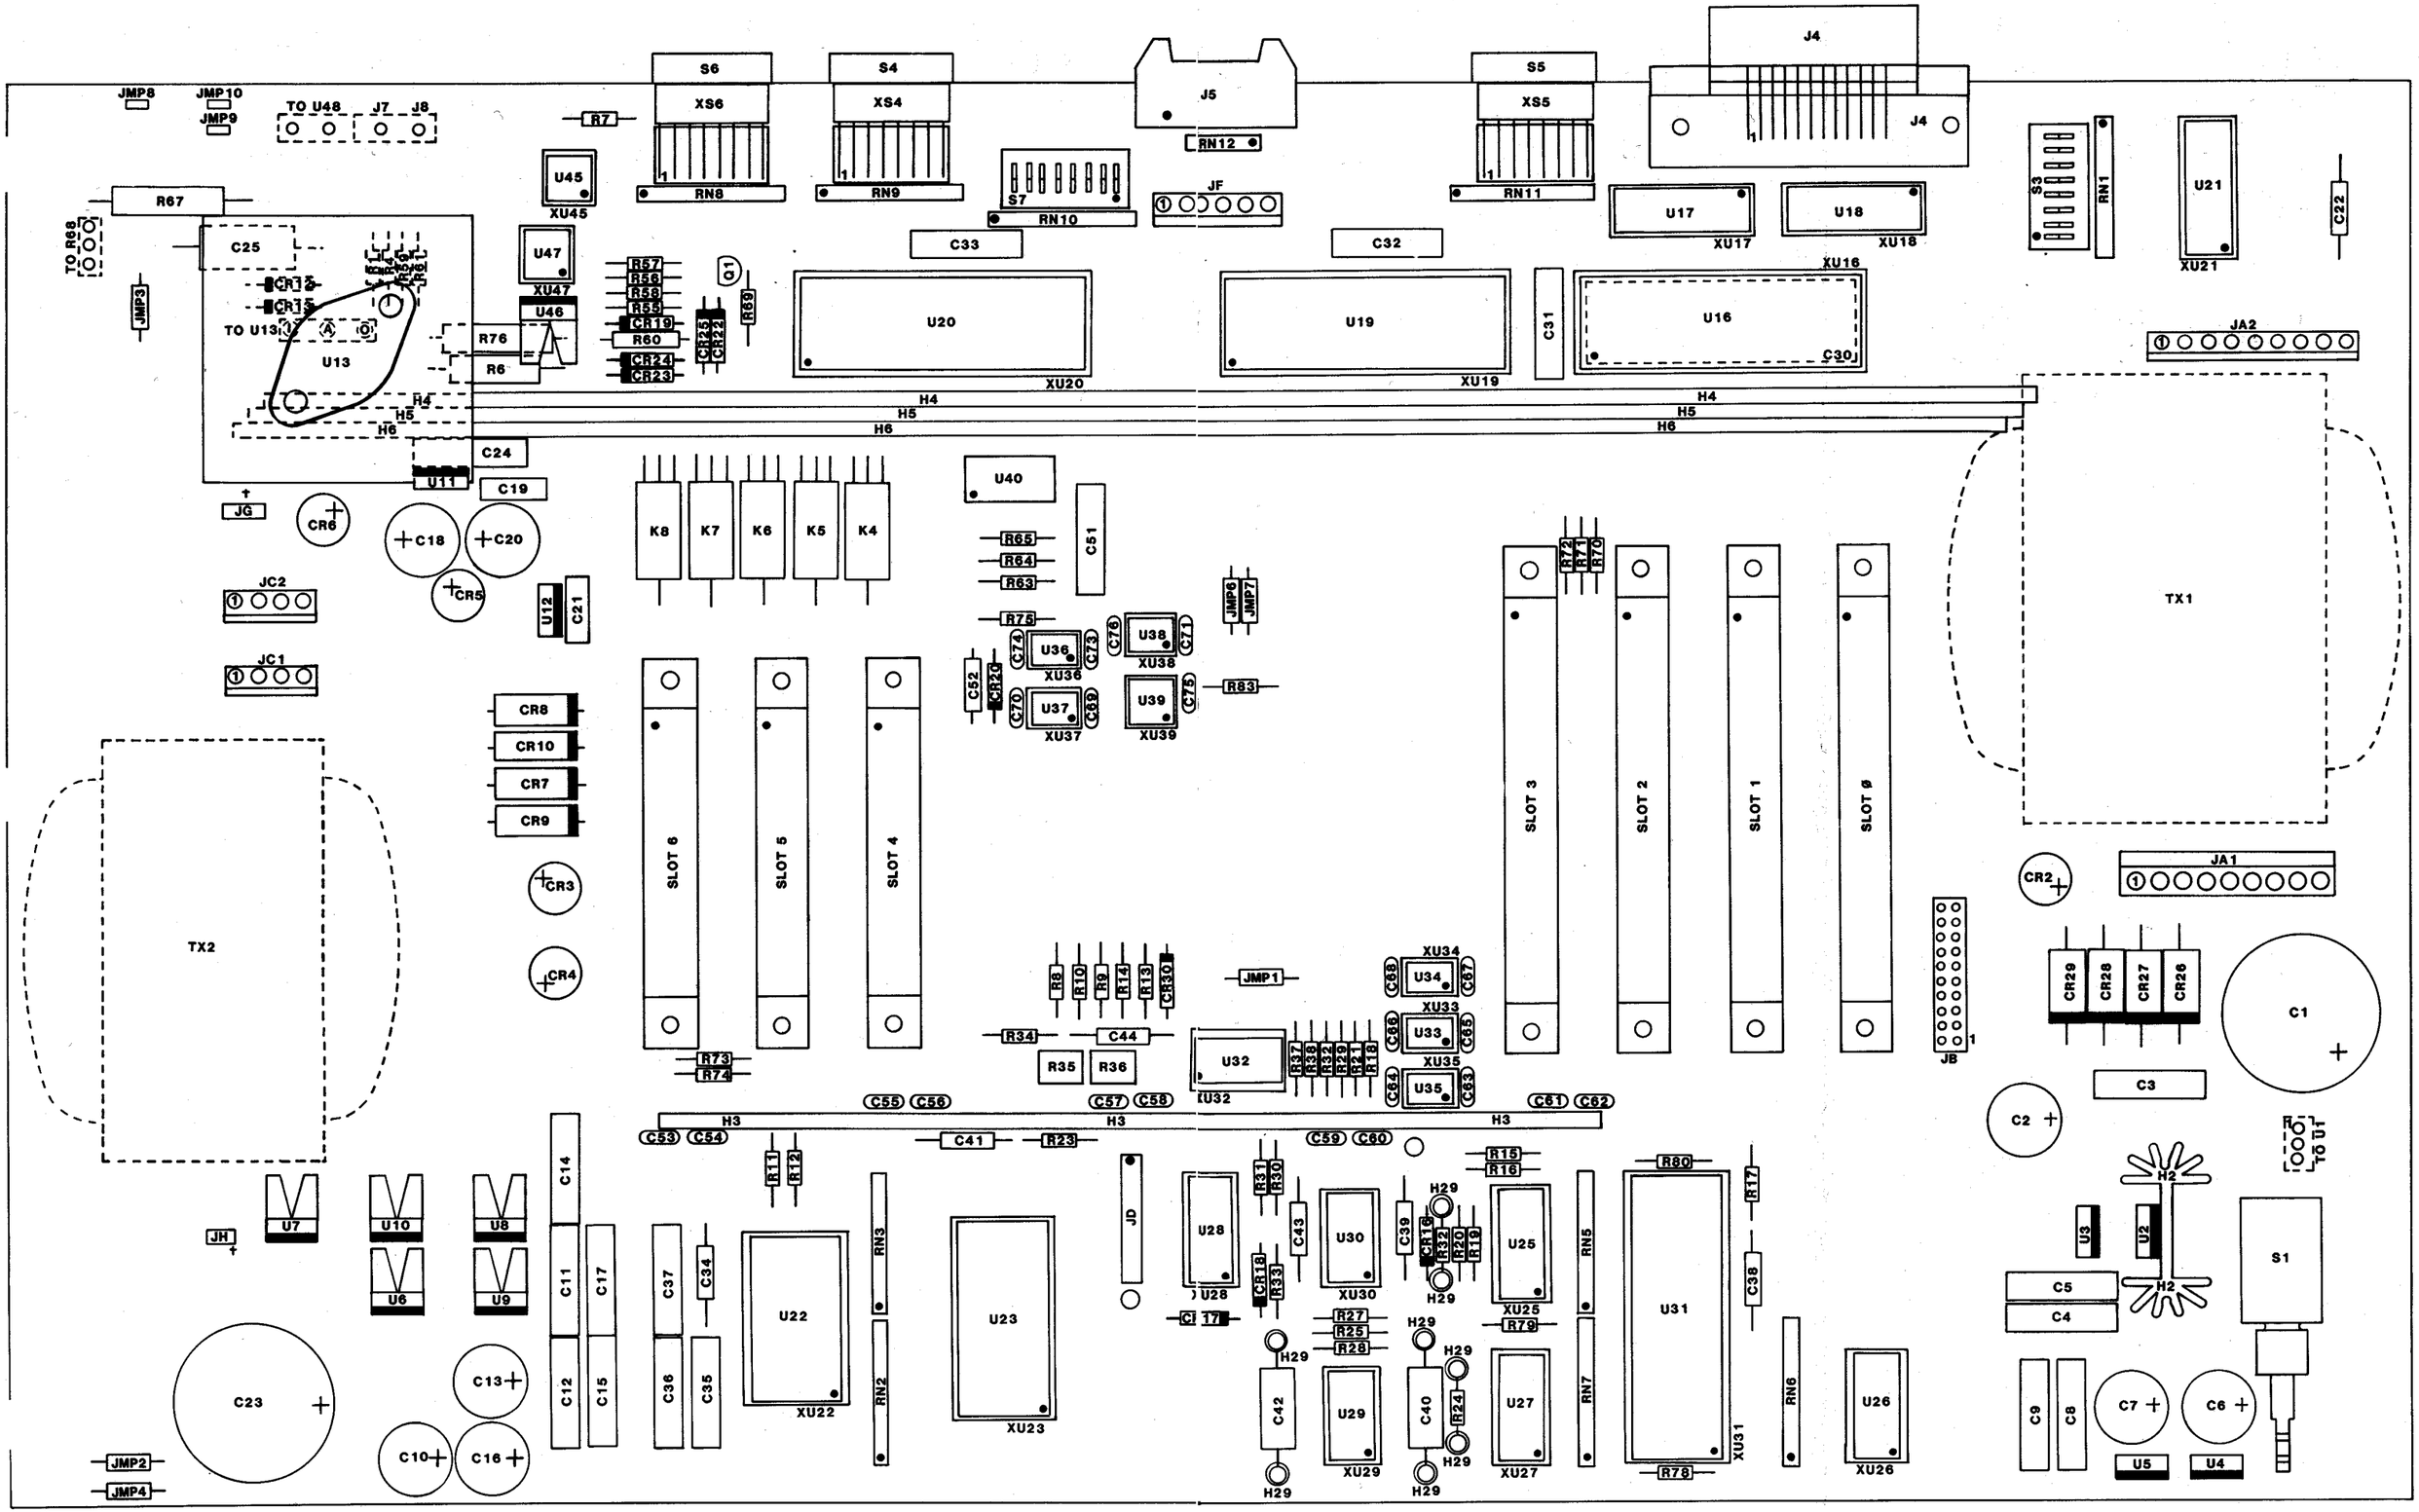



Figure 91C-1a. Component Layout - DRC-91C Main Board

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# REPLACEABLE PARTS LIST - DRC-91C MAIN BOARD

| ITEM NO | LSCI Part Number | Qty | Description | MFR | MFR PART NO |
|---|---|---|---|---|---|
| C1 | 101-275 | 1 | CAP,ELECT,9500MF,15V | MEP | 3188BA952U015AMA1 |
| C2,6,10 7,13,16 18,20 | 101-225 | 8 | CAP,ELECT,470MF,35V | PAN | ECEAIVV471S |
| C23 | 101-238 | 1 | CAP,ELECT,2100MF,75V | MEP | 3186BA212U075AMA1 |
| C40,42 | 101-034 | 2 | CAP,PP,1MF,100V | FDYNE | MPP2X-1.0-100-10 |
| CR2-6 | 102-008 | 5 | BRIDGE RECTIFIER | GI | W02M |
| CR7-10 26-29 | 102-003 | 8 | DIODE RECTIFIER | MOT | MR501 |
| CR12,13 | 102-001 | 2 | DIODE RECTIFIER | MOT | 1N4006 |
| CR19 | 102-058 | 1 | DIODE, ZENER 24V | MOT | 1N4749A |
| CR20 | 102-053 | 1 | DIODE, ZENER 5.1V | MOT | 1N751A |
| J4 | 106-310 | 1 | CONNECTOR (IEEE) | AML | 57-92245-12 |
| J5 | 106-412 | 1 | CONNECTOR (REMOTE ID) | TBAN | 609-1602M |
| JA1,2 | 106-146 | 2 | CONNECTOR (TX1 TO MB) | MOL | 2630-09-74-1091 |
| JB | 106-419 | 1 | CONNECTOR (DB TO MB) | 3M | 3592-6002 |
| JC1,2 | 106-139 | 2 | CONNECTOR (TX2 TO MB) | MOL | 2630-09-74-1041 |
| JF | 106-143 | 1 | CONNECTOR (BP TO MB) | MOL | 2630-09-74-1061 |
| JG,JH | 106-129 | 4 | CONNECTOR POSTS | SAMT | TSW-120-04-06 |
| K4-K7 | 105-302 | 4 | DRY REED RELAY, 20 W | EAC | B1A5AH |
| K8 | 105-304 | 1 | DRY REED RELAY, 50 W | EAC | P1A5A |
| Q1 | 102-072 | 1 | TRANSISTOR, PNP | MOT | 2N3906 |
| R35,36 | 113-063 | 2 | RES,PREC,100K,.01% MATCHED PAIR | LSCI | |
| R63 | 103-399 | 1 | RES,MTF,30.1 ,1/4W,1% | | |
| R64 | 103-495 | 1 | RES,MTF,9.84 ,1/4W,1% | | |
| R65 | 103-540 | 1 | RES,MTF,2.92 ,1/4W,1% | | |
| R66 | 103-586 | 1 | RES,MTF,3.5 , 1 W,1% | | |
| R67 | 103-583 | 1 | RES,MTF,1.25 , 3 W,1% | | |
| R76 | 103-675 | 1 | RES,WWD,587 , 3 W,1% | | |
| S1 | 105-014 | 1 | POWER SWITCH (2 POLE) | ITT | F-01-2UEE/NE15-1B |
| S3-7 | 105-408 | 5 | DIP SWITCH 8 POS | GYH | 76SB08 |
| SL0-3 | 106-229 | 4 | CONNECTOR (25/50) | BRDY | PWBH25DBF1F |
| SL4-6 | 106-227 | 3 | CONNECTOR (18/36) | BRDY | PWBH18DBS1B |
| U1,2,10 | 102-011 | 3 | REGULATOR, +5V | MOT | MC7805ACT |
| U3 | 102-021 | 1 | REGULATOR, -5V | | 7905CT |
| U4,7 11,12 | 102-014 | 4 | REGULATOR, +15V | | 7815CT |
| U5,8 | 102-024 | 2 | REGULATOR, -15V | | 7915CT |
| U6 | 102-012 | 1 | REGULATOR, +8V | | 7808CT |
| U9 | 102-022 | 1 | REGULATOR, -8V | | 7908CT |
| U13 | 102-036 | 1 | REGULATOR, ADJ, 1.2-57V | NAT | LM317HVK-STEEL |
| U16 | 104-712 | 1 | IC, IEEE CHIP | TI | TMS9914ANL |
| U17 | 104-710 | 1 | IC, IEEE SUPPORT CHIP | TI | SN75160AN |
| U18 | 104-711 | 1 | IC, IEEE SUPPORT CHIP | TI | SN75161AN |
| U19,20 | 104-529 | 2 | IC, PORT EXPANDER | INT | 82C55A-5 |
| U21 | 104-310 | 1 | IC, 8 BIT MULTIPLEXER | NAT | 81LS95 |
| U22 | 104-419 | 1 | IC, 16 BIT D/A CONVERTER | BB | DAC703BH-5 |
| U23 | 104-061 | 1 | IC, DISPLAY DRIVER | NAT | MM5480N |
| U25-27 | 104-408 | 3 | IC, 10 BIT D/A CONVERTER | ISL | AD7533JN |
| U28 | 104-076 | 1 | IC, DUAL SPDT ANL SWITCH | HAR | HI5043-5 |
| U29,30 32 | 104-088 | 3 | IC, QUAD OP AMP | TSC | TSC914A |
| U31 | 104-162 | 1 | IC, DISPLAY DRIVER | NAT | MM5451N |
| U33-37 | 104-355 | 5 | IC, OPTOCOUPLER | GI | 740L6000 |
| U38 | 104-456 | 1 | IC, OPTOCOUPLER | GI | 740L6010 |
| U39 | 104-453 | 1 | IC, 8 BIT A/D CONVERTER | NAT | ADC0831CCN |
| U40 | 104-210 | 1 | IC, HEX INVERTER, O.C. | | 7406 |
| U45 | 104-022 | 1 | IC, OP AMP, JFET INPUT | NAT | LF356N |
| U46 | 102-104 | 1 | POWER MOSFET, 90V N-CH | SPTX | VN0109N5 |
| U47 | 104-068 | 1 | IC, OP AMP, DUAL MC1741 | MOT | 1458PI |
| U48 | 102-095 | 1 | POWER MOSFET, 100V P-CH | IR | IRF9130 |
| W1 | | 1 | CABLE (MB TO U1) | LSCI | |
| XU13 | 106-571 | 1 | SOCKET, TO-3 | AUG | M8080-1G40 |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

## REPLACEABLE PARTS LIST - DRC-91C

| ITEM NO | LSCI Part Number | Qty | Description | MFR | MFR PART NO |
|---|---|---|---|---|---|
| MP3 | 113-131 | 1 | CONNECTOR KIT consisting of | LSCI | 113-131 |
| | 106-010 | 2 | 5 PIN PLUG - MATE TO J3: | AML | 126-127 |
| | 106-012 | 1 | 7 PIN PLUG - MATE TO J5: | AML | 126-195 |
| | 106-414 | 2 | 16 PIN IDC SOCKET | TBA | 609-1630 |
| | 106-415 | 2 | 16 PIN STRAIN RELIEF | TBA | 609-1631SP |
| | 107-017 | 1 | RMA INSERTS | LSCI | 107-017 |
| | 115-006 | 1 | POWER CORD | | |
| | 110-014 | 1 | FUSE: 1.0A SB (115 VAC) | BUS | MDL-1 |
| | | | 0.5A SB (230 VAC) | BUS | MDL 1/2 |
| H5 | 105-671 | 1 | KEY TOP - BLUE | LSCI | 105-671 |
| H6 | 105-676 | 2 | KEY TOP - LIGHT GREY | LSCI | 105-676 |
| H7 | 105-143 | 3 | KNOBS | ALCO | KNS501BA |
| H8 | 105-677 | 12 | KEY TOP - MEDIUM GREY | LSCI | 105-677 |
| F1 | 106-028 | 1 | AC LINE CORD PLUG/FUSE HOLDER/LINE VLTG SLCTR | SFR | FN372-6/22 |
| JF | 106-140 | 3 | CNNCTR (J3 ON RB TO MB) | MOL | 2139-09-50-3061 |
| | 110-150 | 18 | CONNECTOR TERMINALS | MOL | 2878-08-50-0116 |
| J1/2 | 106-011 | 2 | CONNECTOR 5 PIN SOCKET | AML | 126-218 |
| J3 | 106-013 | 1 | CONNECTOR 7 PIN SOCKET | AML | 126-198 |
| J6 | 106-002 | 1 | HEATER HI OUT - GRAY | EFJ | 111-0113-001 |
| J7 | 106-001 | 1 | HEATER LO OUT - BLACK | EFJ | 111-0103-001 |
| J8 | 106-001 | 1 | HEATER GND - BLACK | EFJ | 111-0103-001 |
| R68 | 103-765 | 1 | POT,20 OHM, 10%,Z TAPER | CLAR | LSCI-765 |
| S8 | 105-504 | 1 | A/B CONTROL SELECT | C&K | 7301-M-Y-Z-Q |
| U48 | 102-095 | 1 | POWER MOSFET, 100V P-CH | IR | IRF9130 |
| XU48 | 106-571 | 1 | SOCKET,TO-3 | AUG | M8080-1G40 |
| JA | 106-147 | 2 | TX1 TO MB 9 POST CNNCTR | MOL | 2139-09-50-3091 |
| | 110-150 | 16 | CONNECTOR TERMINALS | MOL | 2878-08-50-0116 |
| TX1 | 109-019 | 1 | INPUT TRANSFORMER | LSCI | C696-114 |
| JC | 106-135 | 2 | TX2 TO MB 4 POST RCPTCL | MOL | 2139-09-50-1041 |
| | 110-150 | 3 | CONNECTOR TERMINALS | MOL | 2878-08-50-0116 |
| TX2 | 109-021 | 1 | OUTPUT TRANSFORMER | LSCI | C696-115 |
| B1 | 107-180 | 1 | FAN ASSEMBLY | LSCI | 107-180 |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

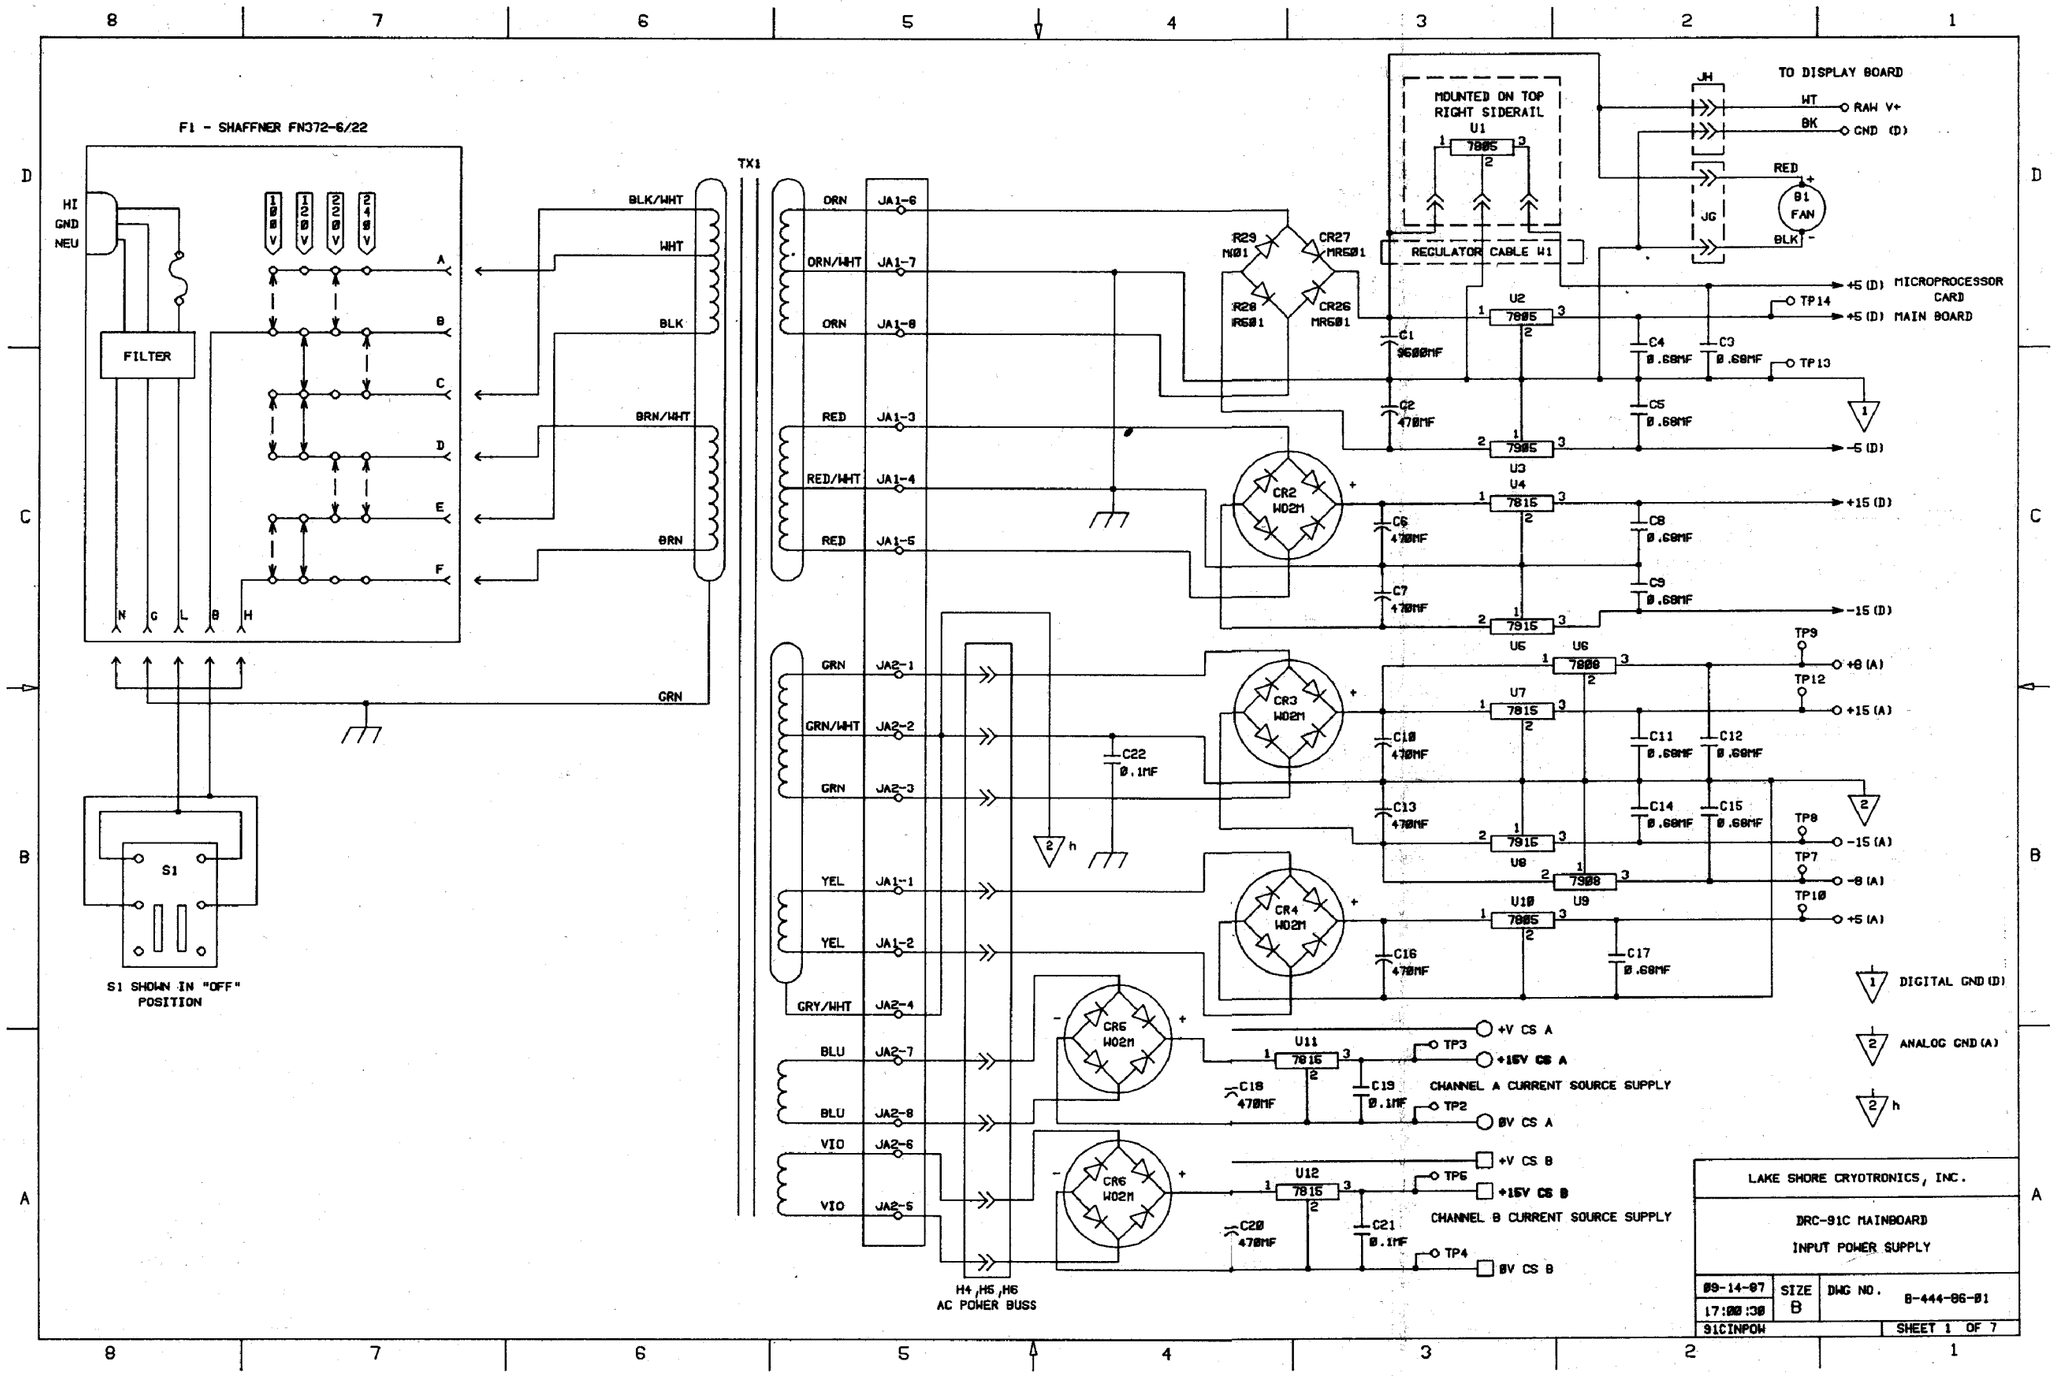



**Figure 91C-1b. Schematic – DRC-91C Main Board #1 (Input Power Supply)**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

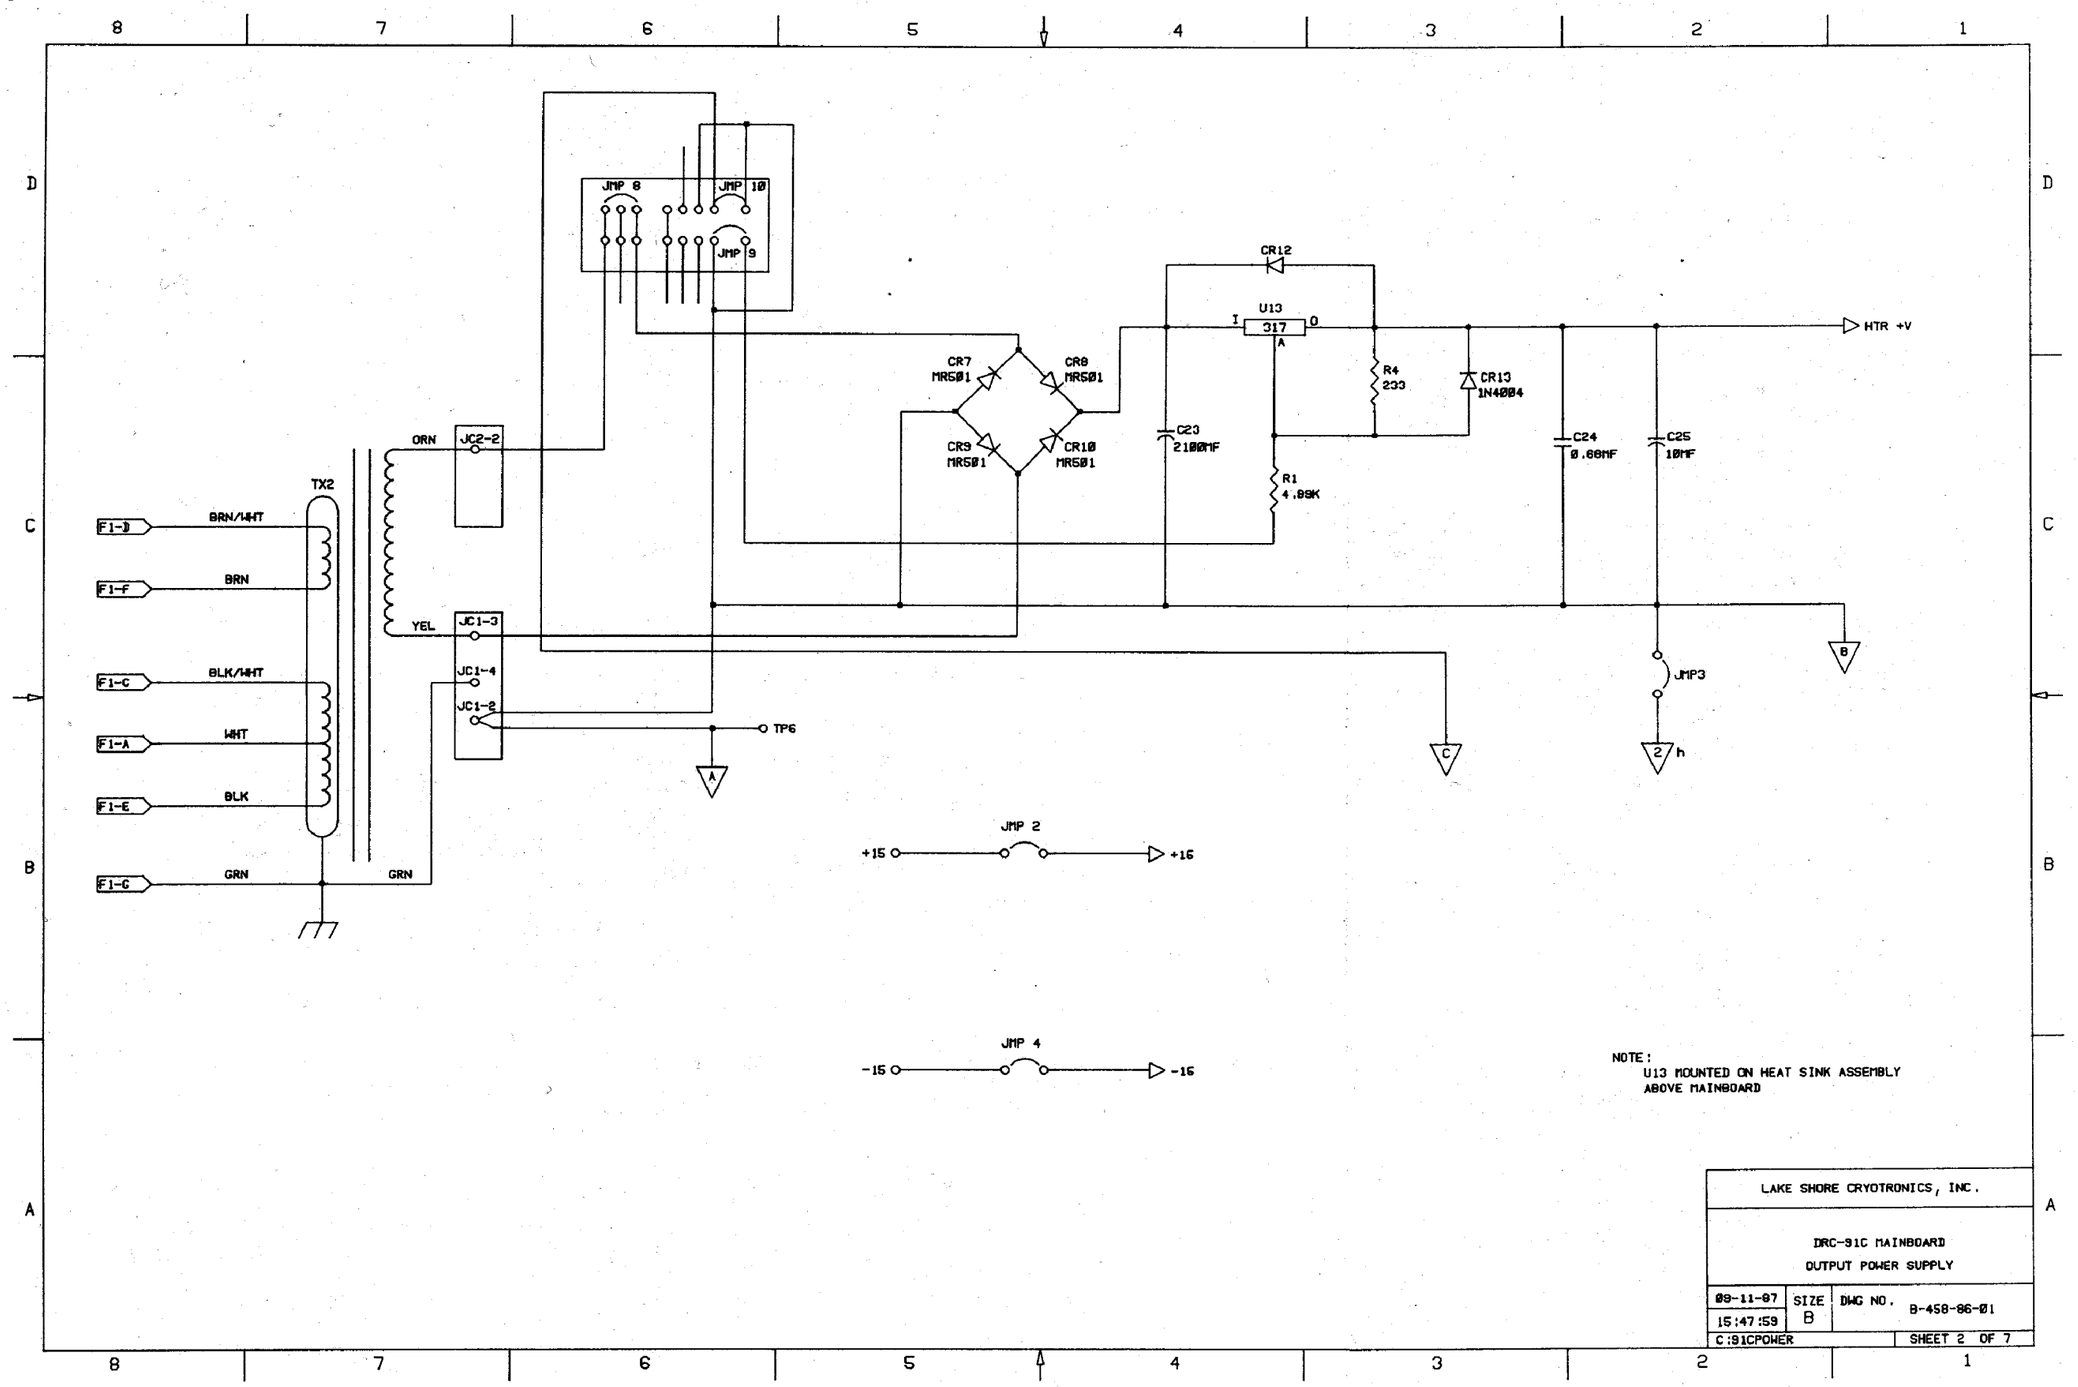



**Figure 91C-1c. Schematic - DRC-91C Main Board #2 (Output Power Supply)**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

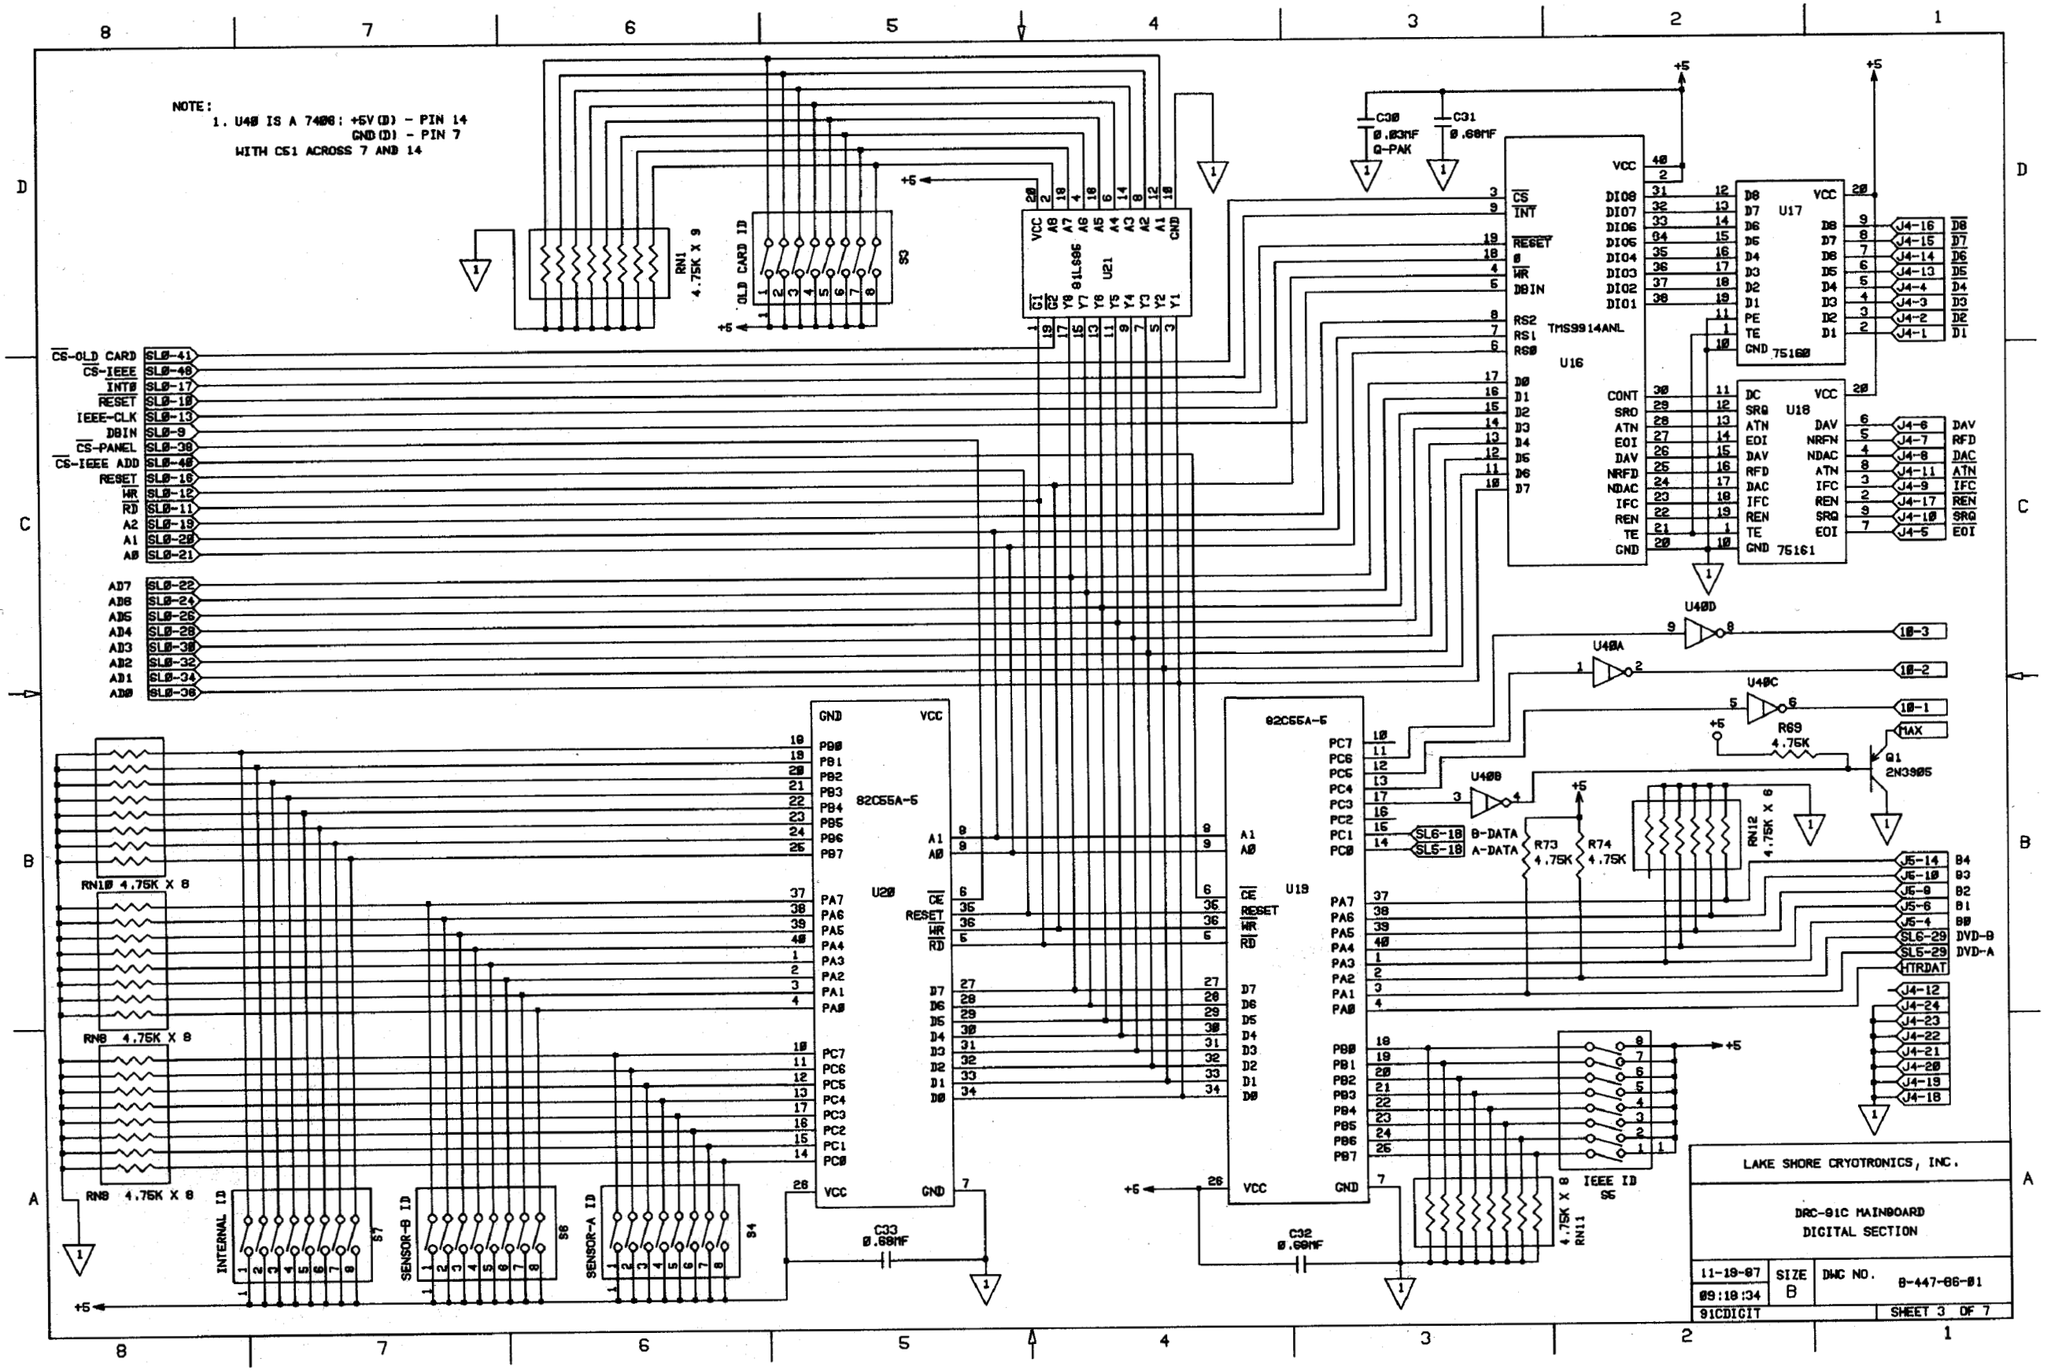



**Figure 91C-1d. Schematic - DRC-91C Main Board #3 (Digital Section)**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

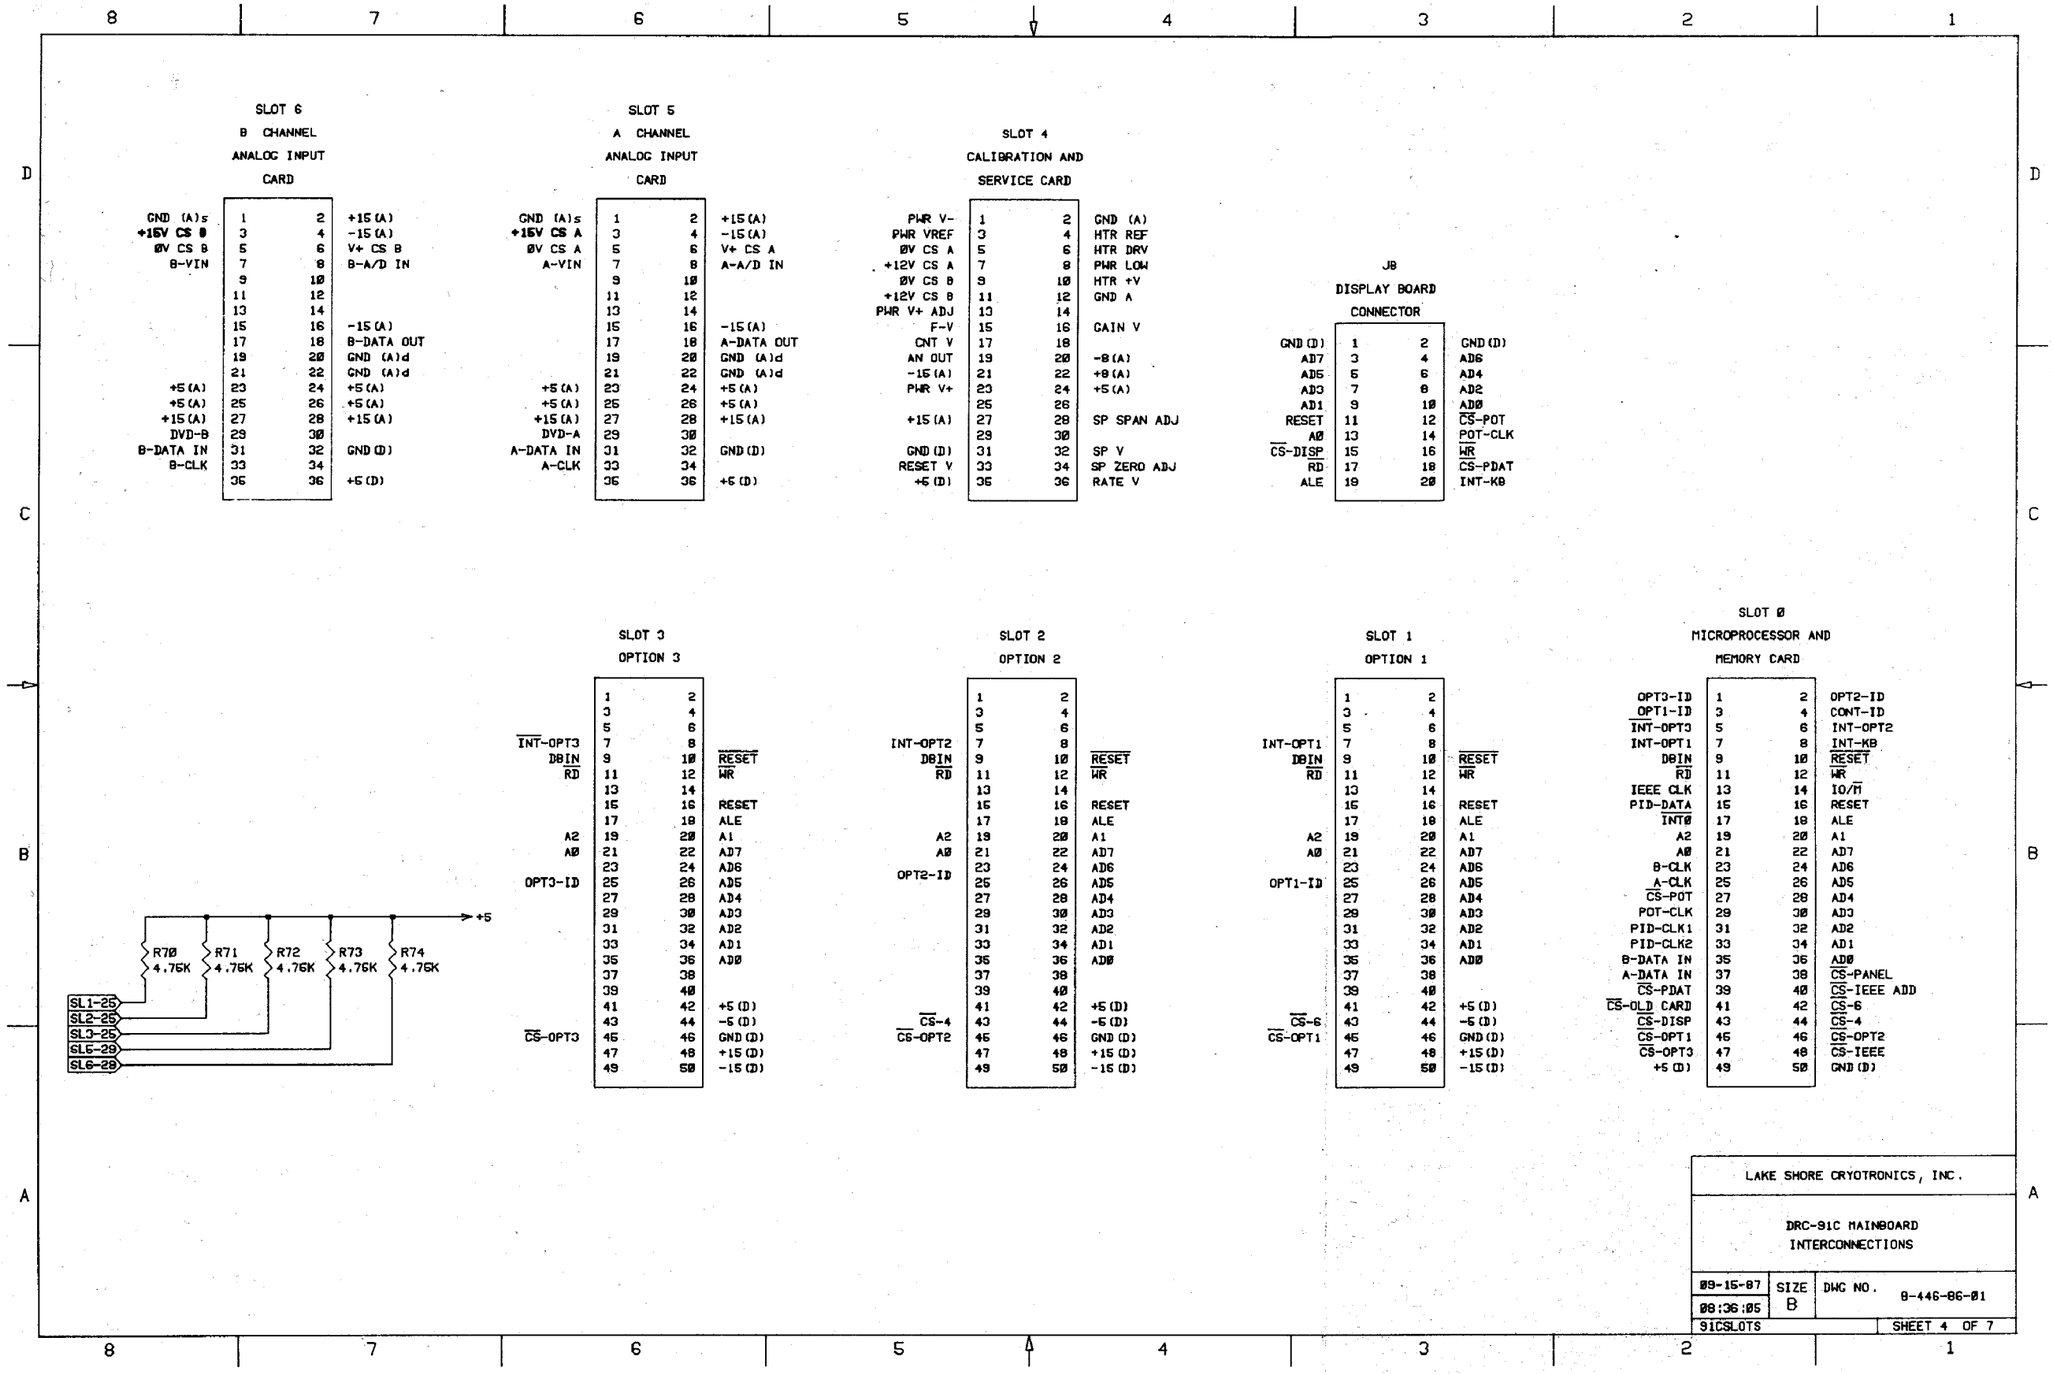



**Figure 91C-1e. Schematic - DRC-91C Main Board #4 (Interconnections)**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

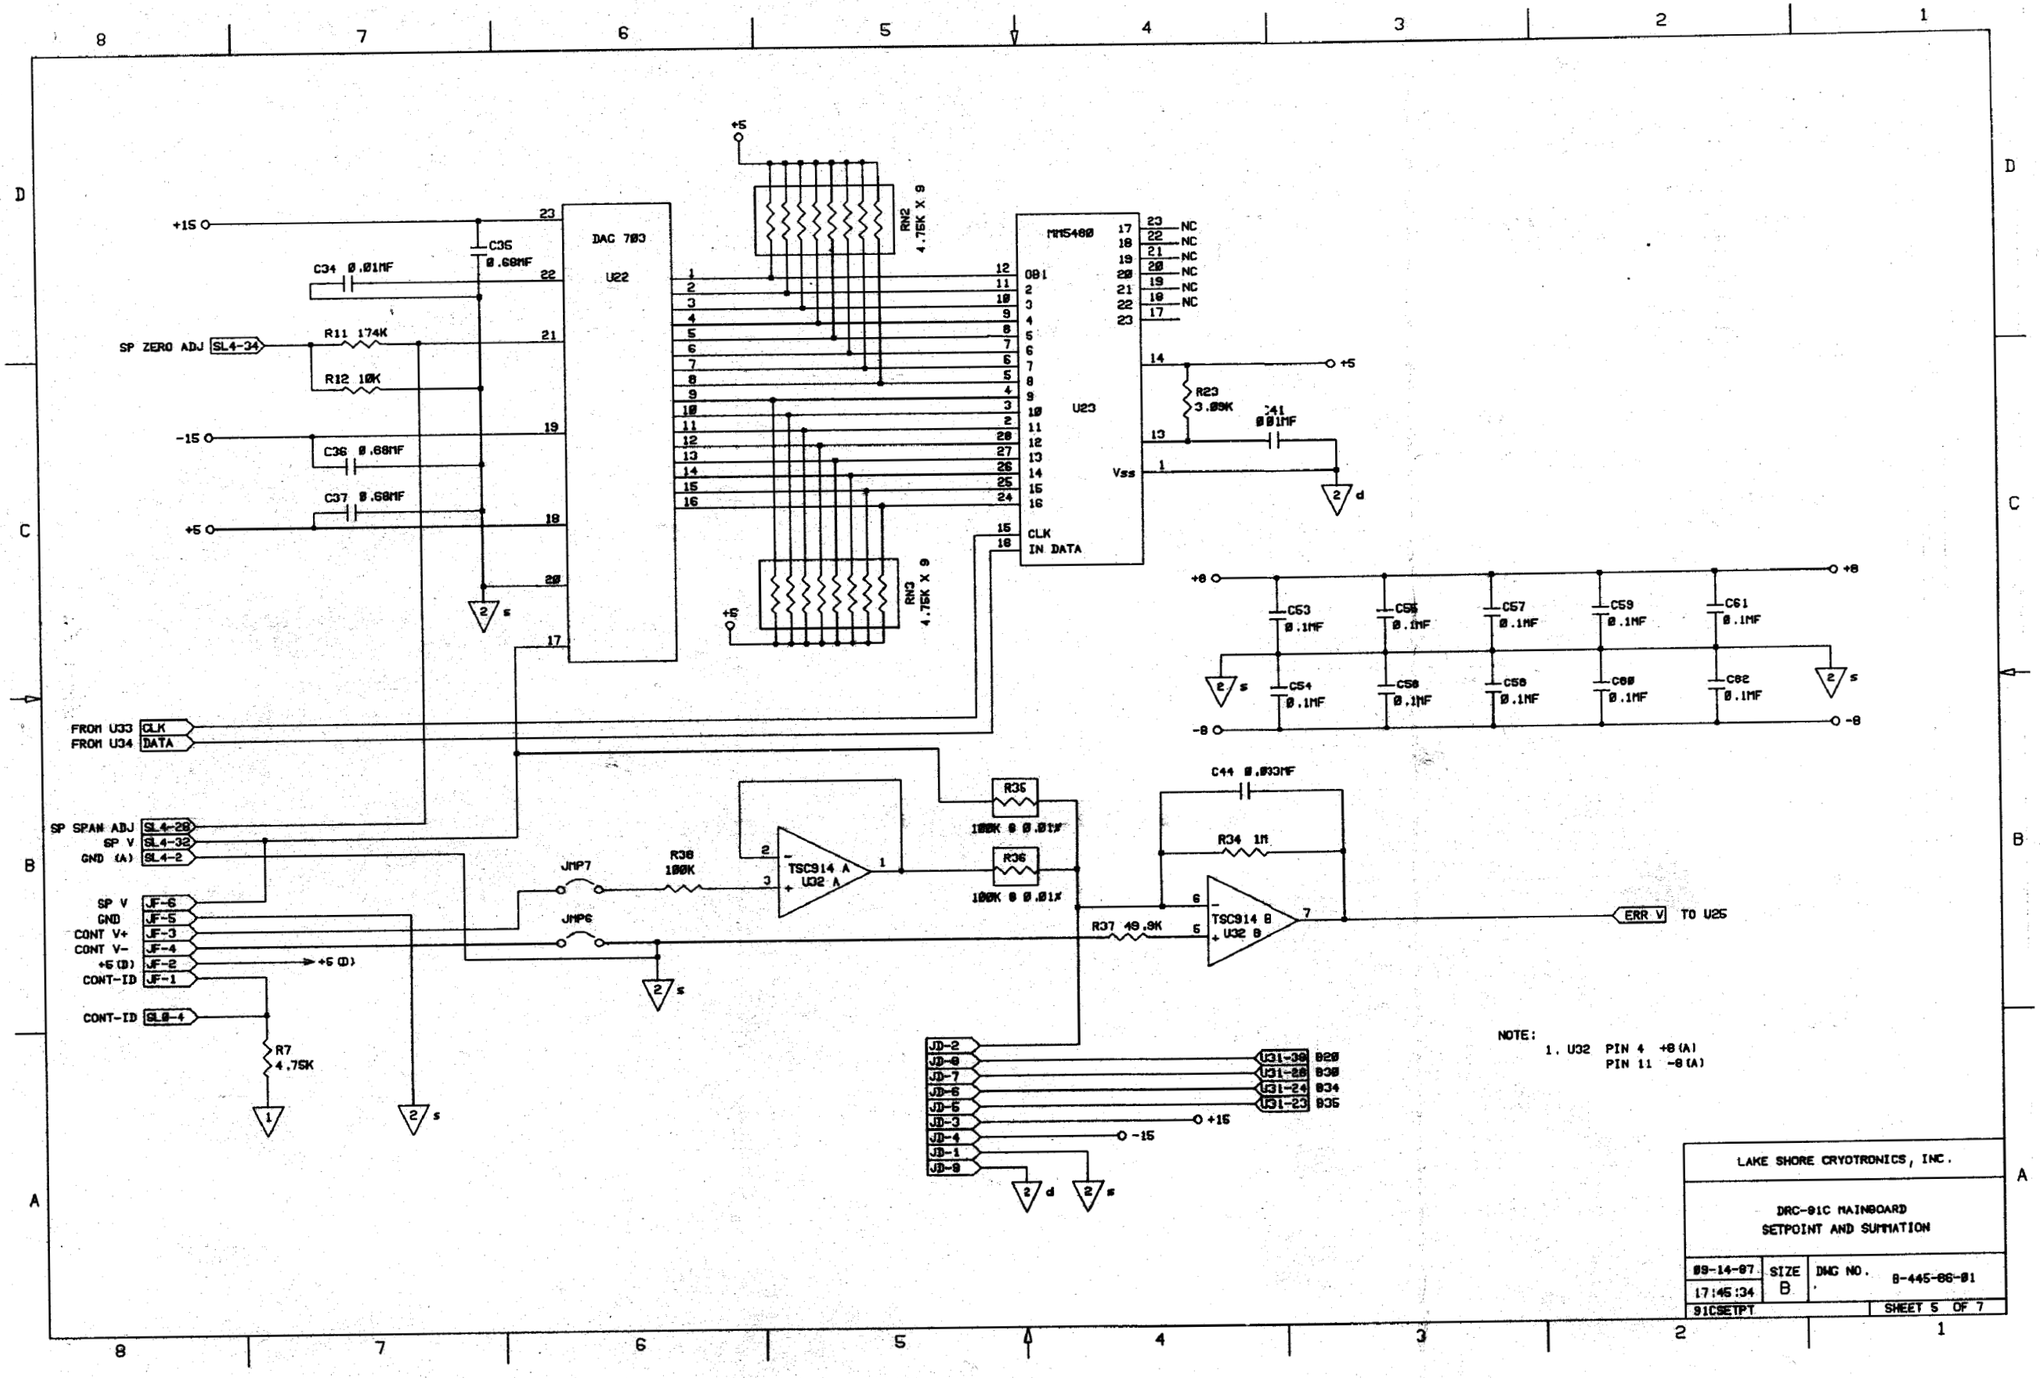



**Figure 91C-1f. Schematic – DRC91C Main Board #5 (Setpoint and Summation)**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

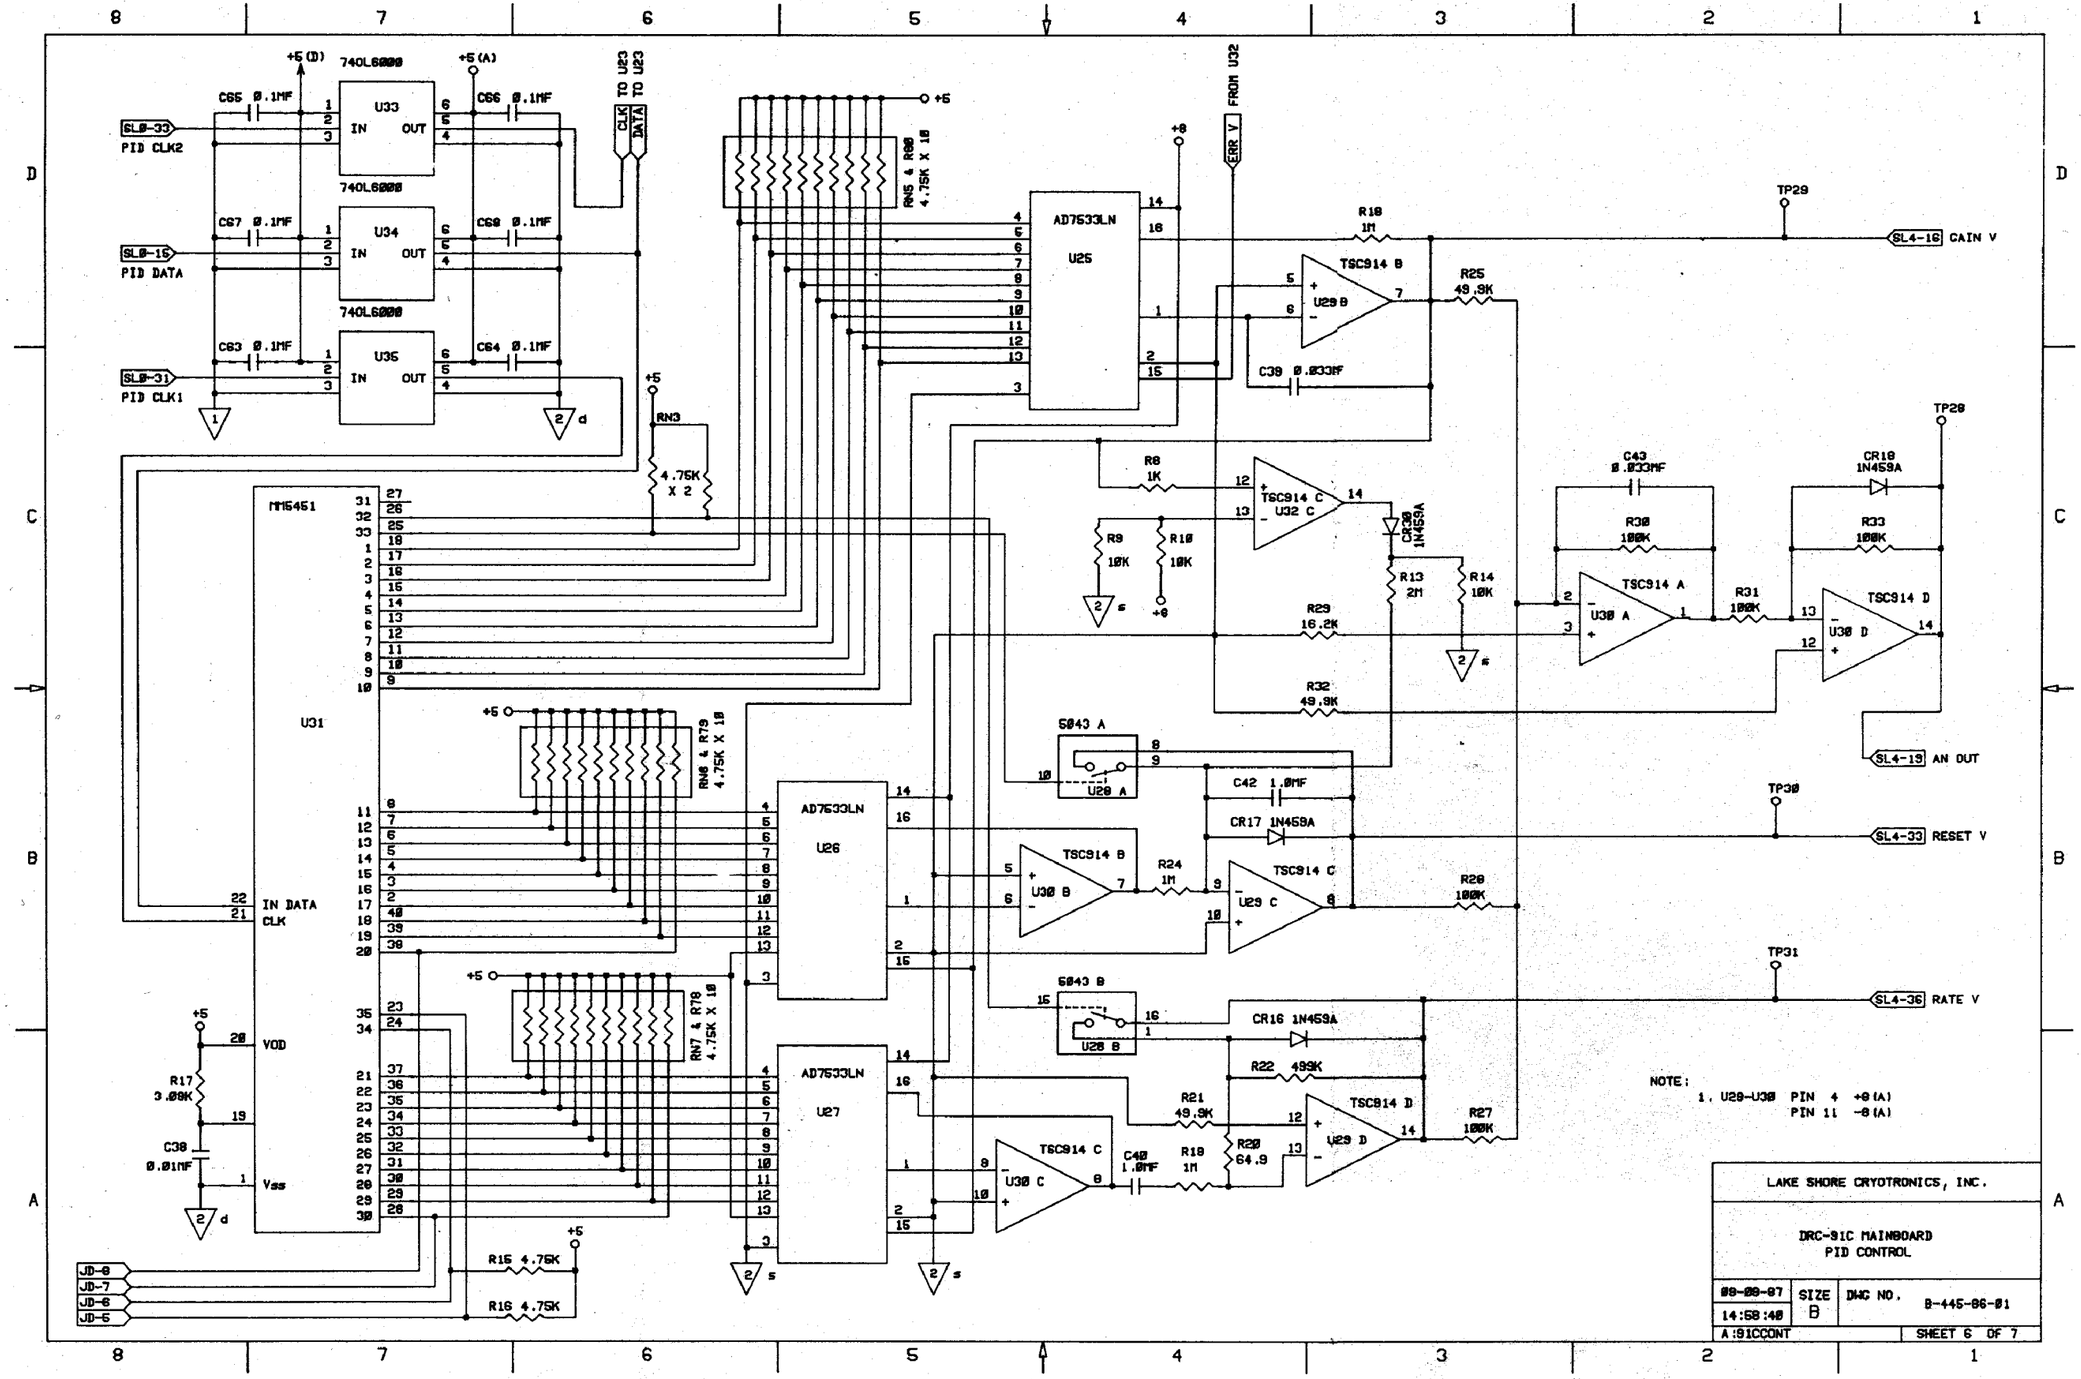



Figure 91C-1g. Schematic - DRC-91C Main Board #6 (PID Control)

Artisan Technology Group (c) Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

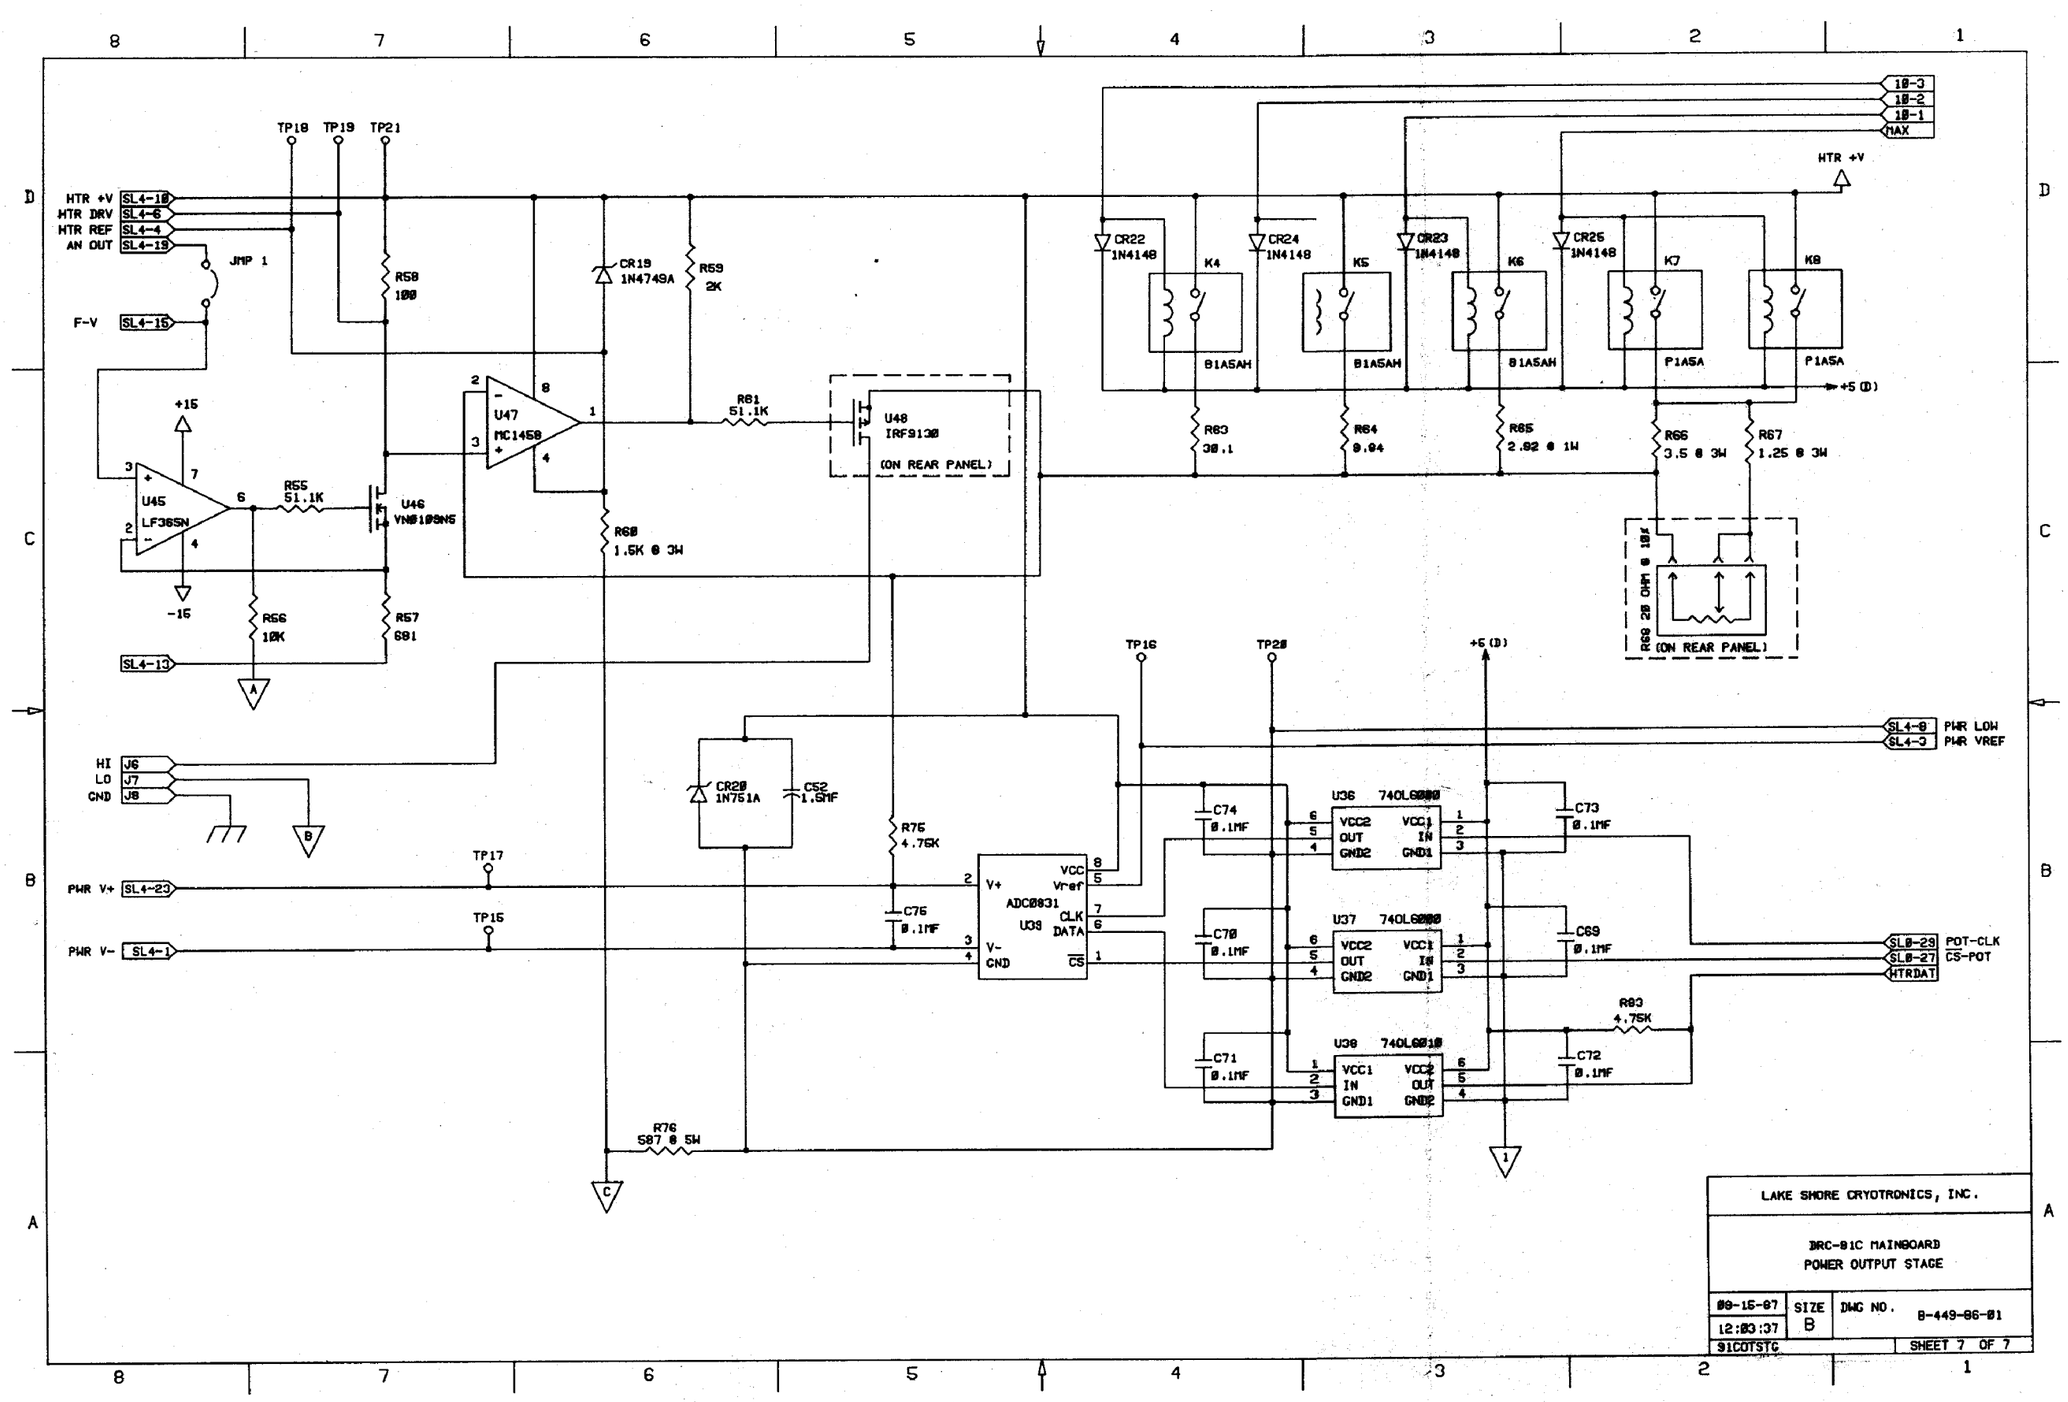



Figure 91C-1h. Schematic – DRC-91C Main Board #7 (Output Stage)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


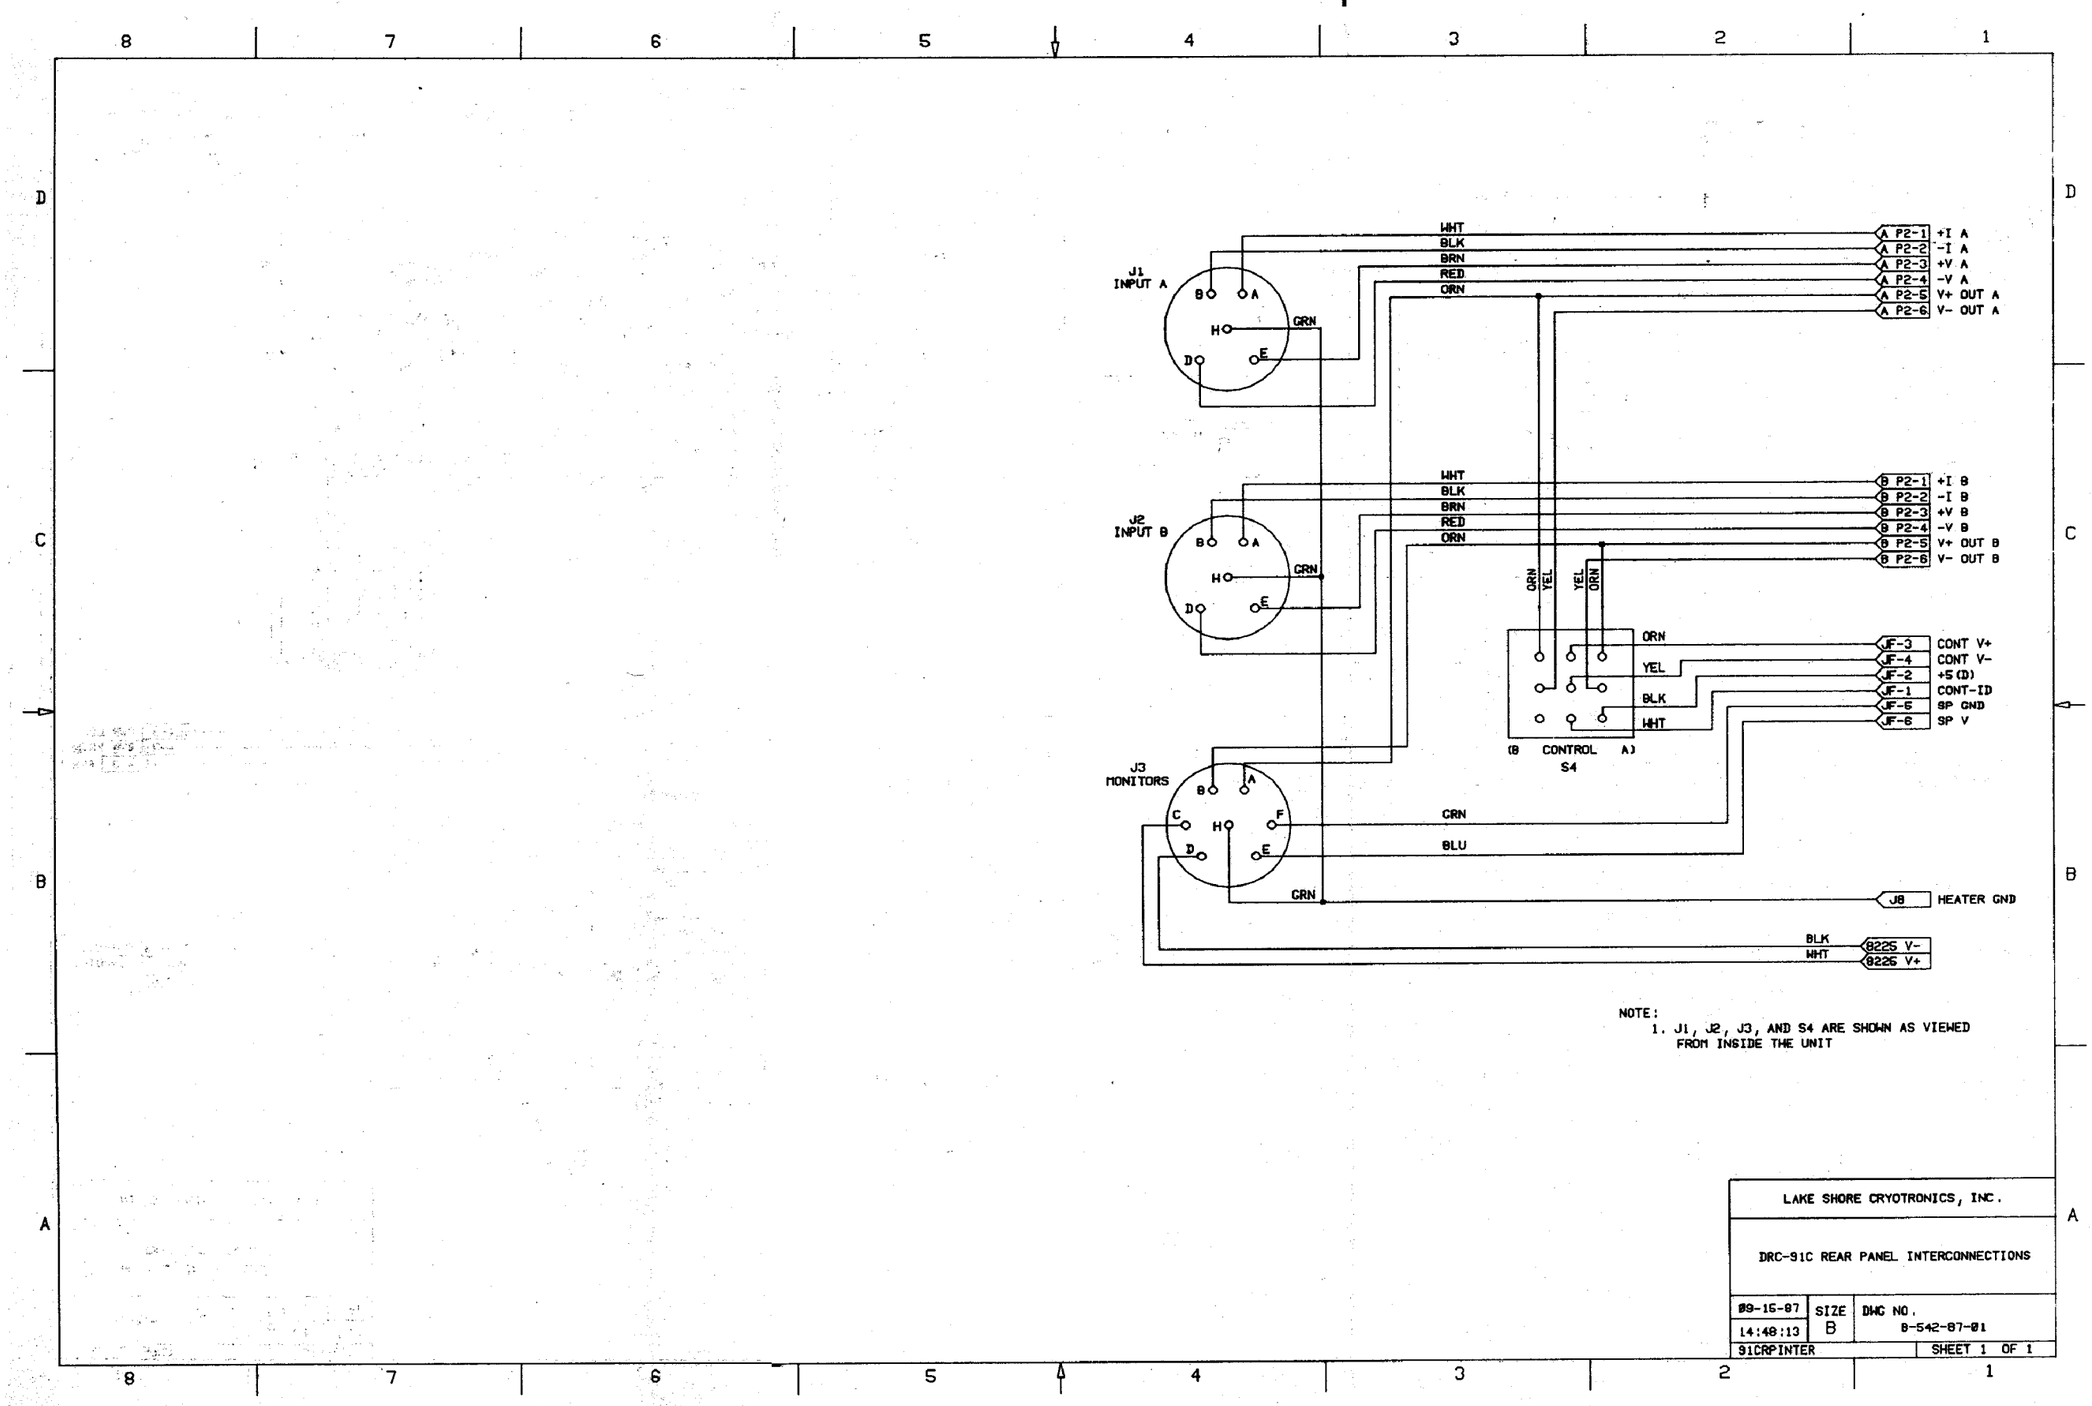



**Figure 91C-1i. Schematic – DRC-91C Main Board #8 (Rear Panel Interconnections)**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

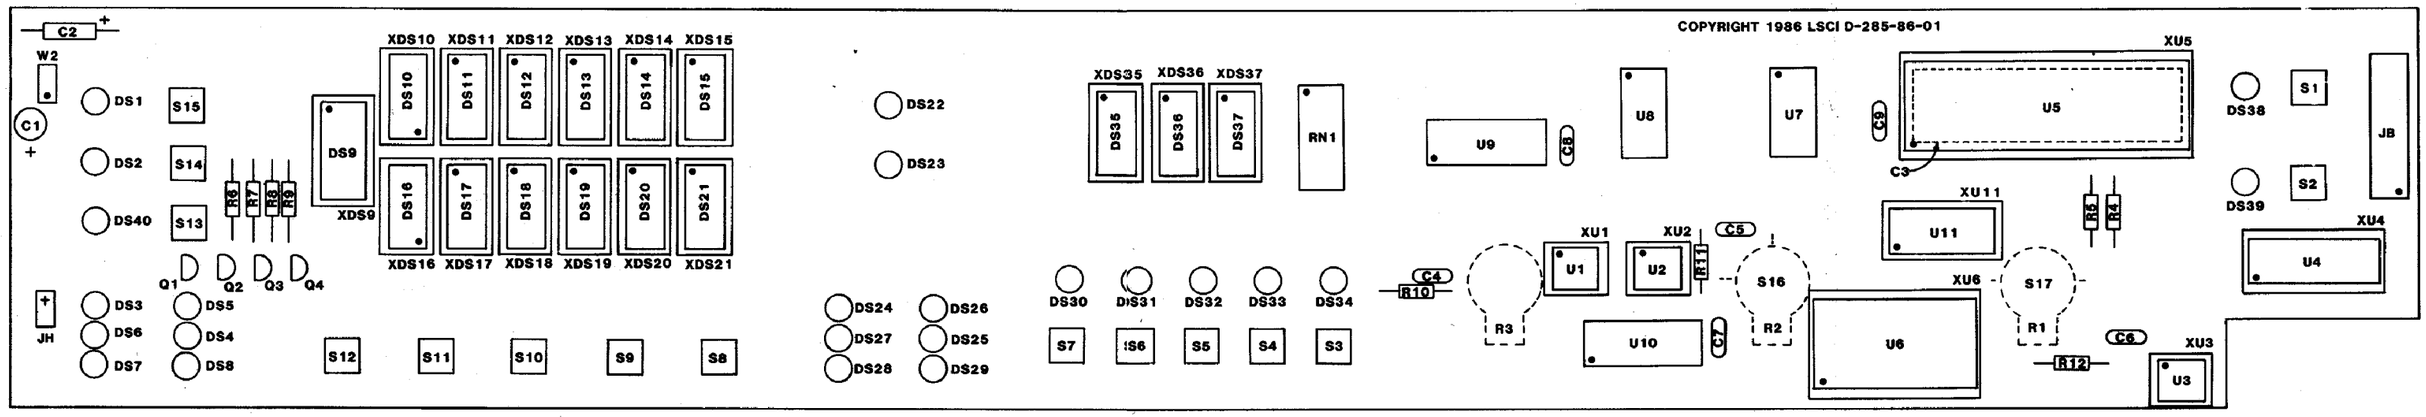


REPLACEABLE PARTS LIST - DRC-91C DISPLAY BOARD

| ITEM NO | LSCI Part Number | Qty | Description | MFR | MFR PART NO |
|---|---|---|---|---|---|
| JB | | 1 | CABLE (MB TO DB) | LSCI | |
| Q1-4 | 102-072 | 4 | TRANSISTOR, SIGNAL PNP | | 2N3906 |
| R1/S17 R2/S16 | 105-146 | 2 | SWITCH POT, 100K,CCW DET | CENT | BA12030018 |
| R3 | 105-145 | 1 | POT, 100K | CENT | BA12010043 |
| R6-9 | 103-200 | 4 | RES, MTF, 4.99, 1W | | |
| RN1 | 103-181 | 1 | RES NET, 8X22 OHM IND | BOR | 4116R-001-220 |
| S1-15 | 105-651 | 15 | SWITCH | ALPS | KEF 10901 |
| U1-3 | 104-453 | 3 | IC, 8 BIT A/D CONVERTER | NAT | ADC0831CCN |
| U4 | 104-310 | 1 | IC, 8 BIT MULTIPLEXER | NAT | DM81LS95AN |
| U5 | 104-526 | 1 | IC, KB/DISPLAY INTERFACE | INT | P8279-5 |
| U6 | 104-277 | 1 | IC, 4-16 LINE DECODER | | 74LS154N |
| U7,8 | 104-210 | 2 | IC, INVERTER, O.C. | | 7406 |
| U9,10 | 104-160 | 2 | IC, TRANSISTOR DRIVER | SPRG | UDN-2585A |
| U11 | 104-261 | 1 | IC, 3-8 LINE DECODER | | 74LS138 |
| W1 | | 1 | CABLE (DB TO MB) | LSCI | |
| W2 | | 1 | CABLE (DB TO U12) | LSCI | |

Figure 91C-2a. Component Layout - DRC-91C Display Board

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

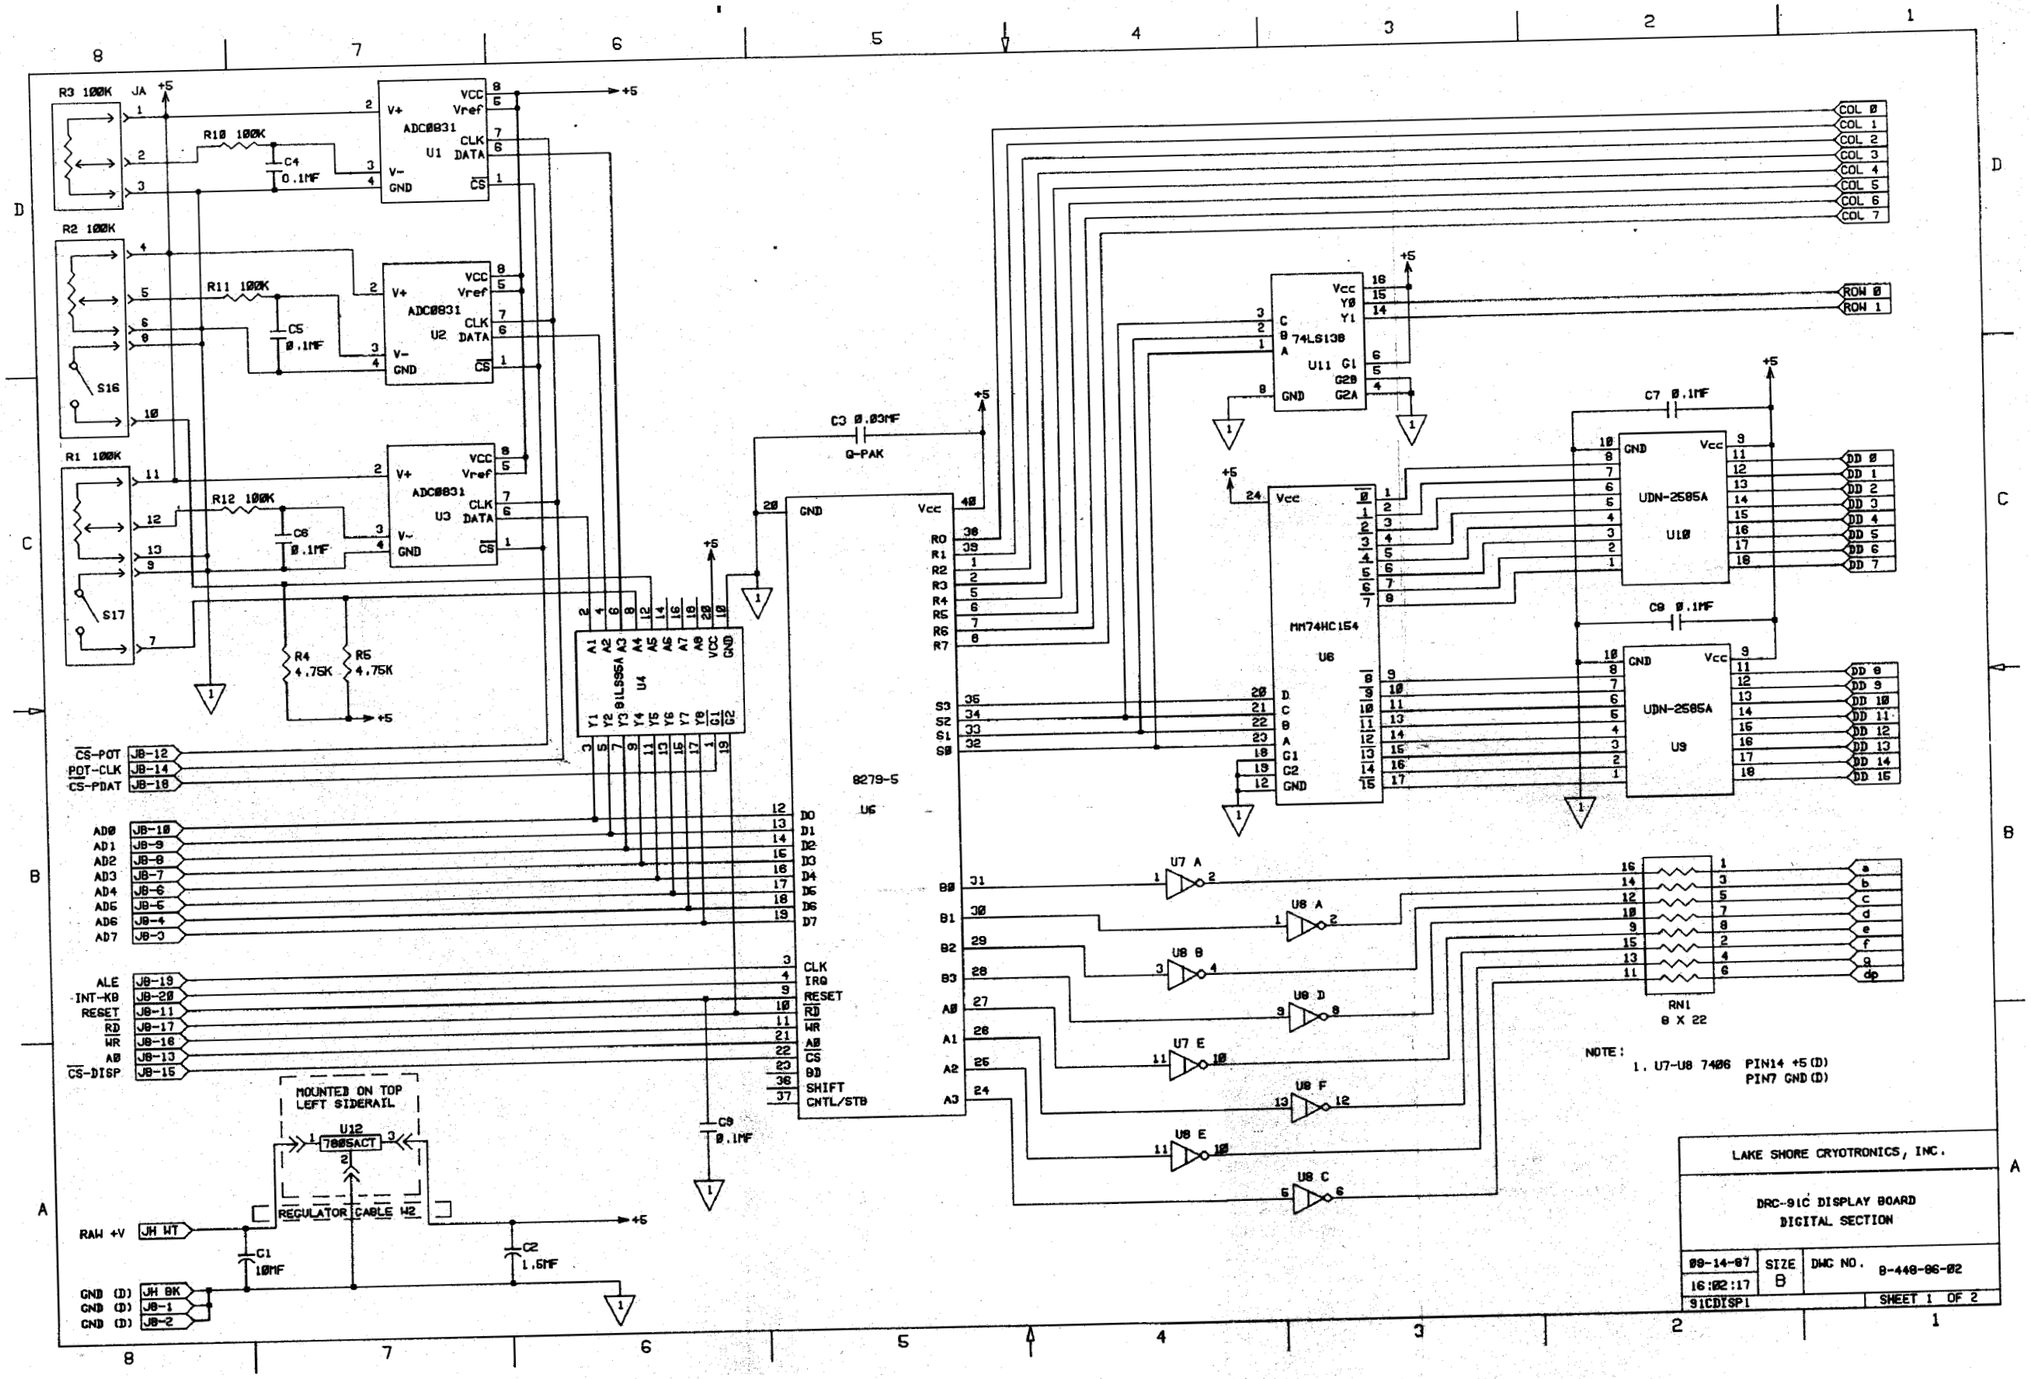



**Figure 91C-2b. Schematic - DRC-91C Display Board #1**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


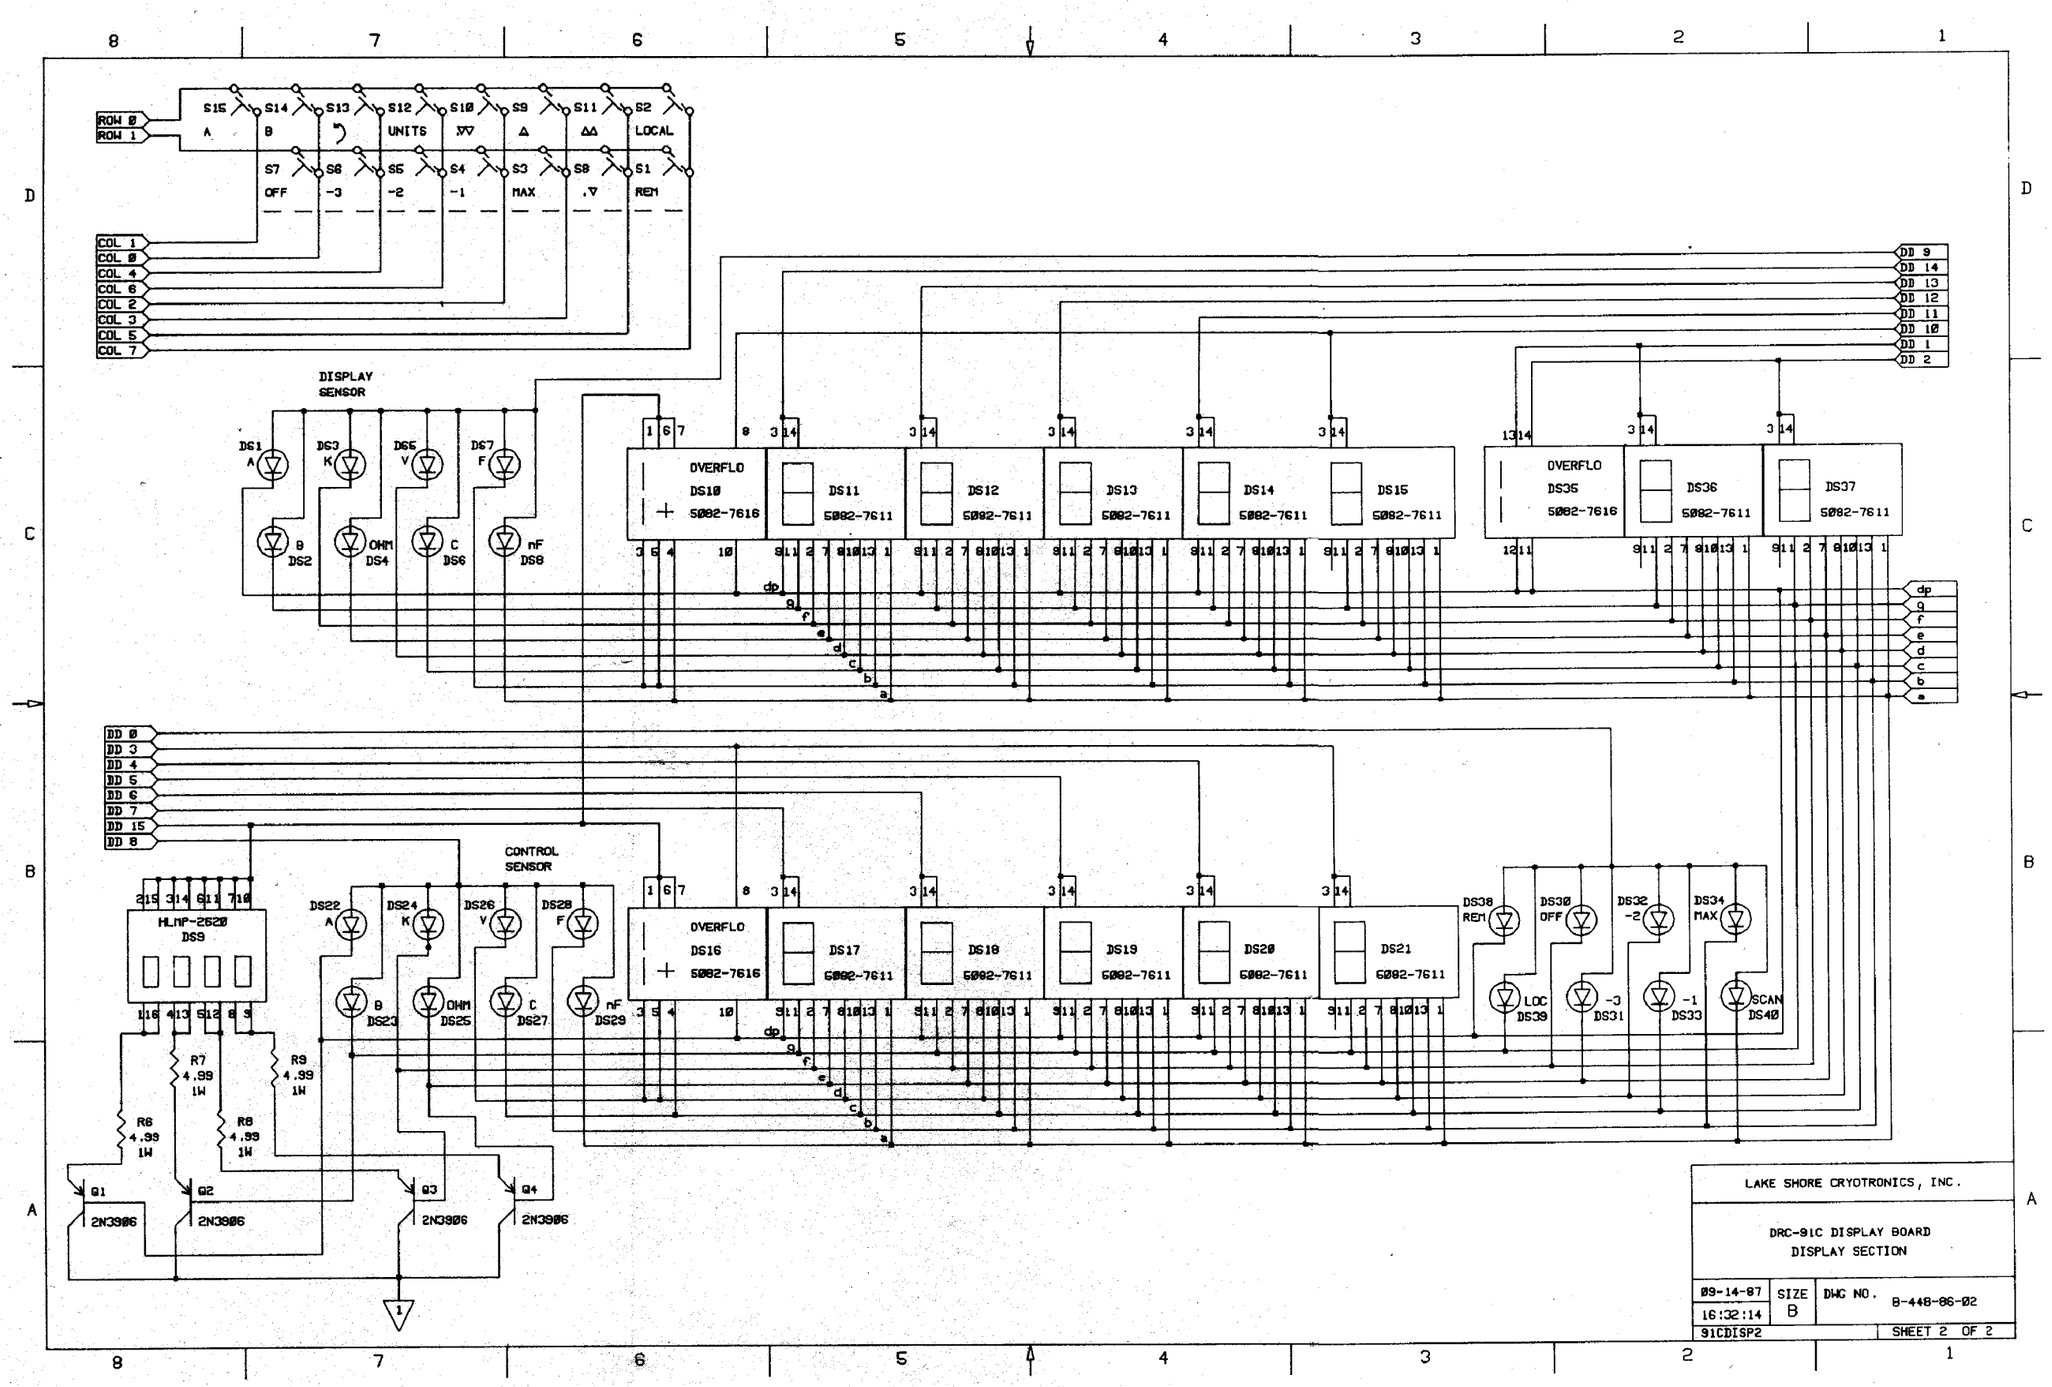



**Figure 91C-2c. Schematic – DRC-91C Display Board #2**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

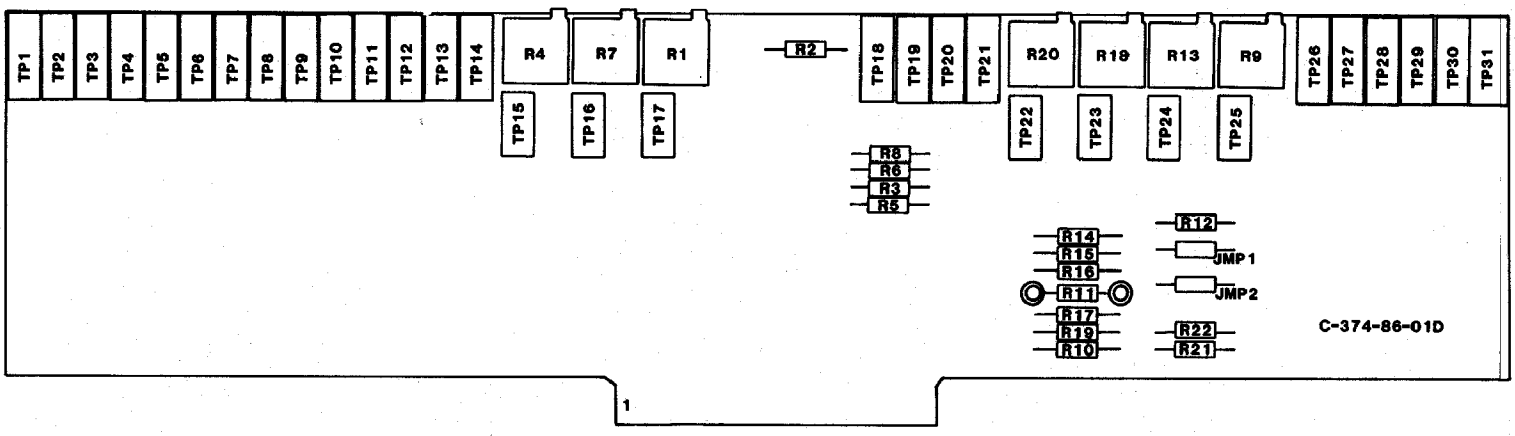


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


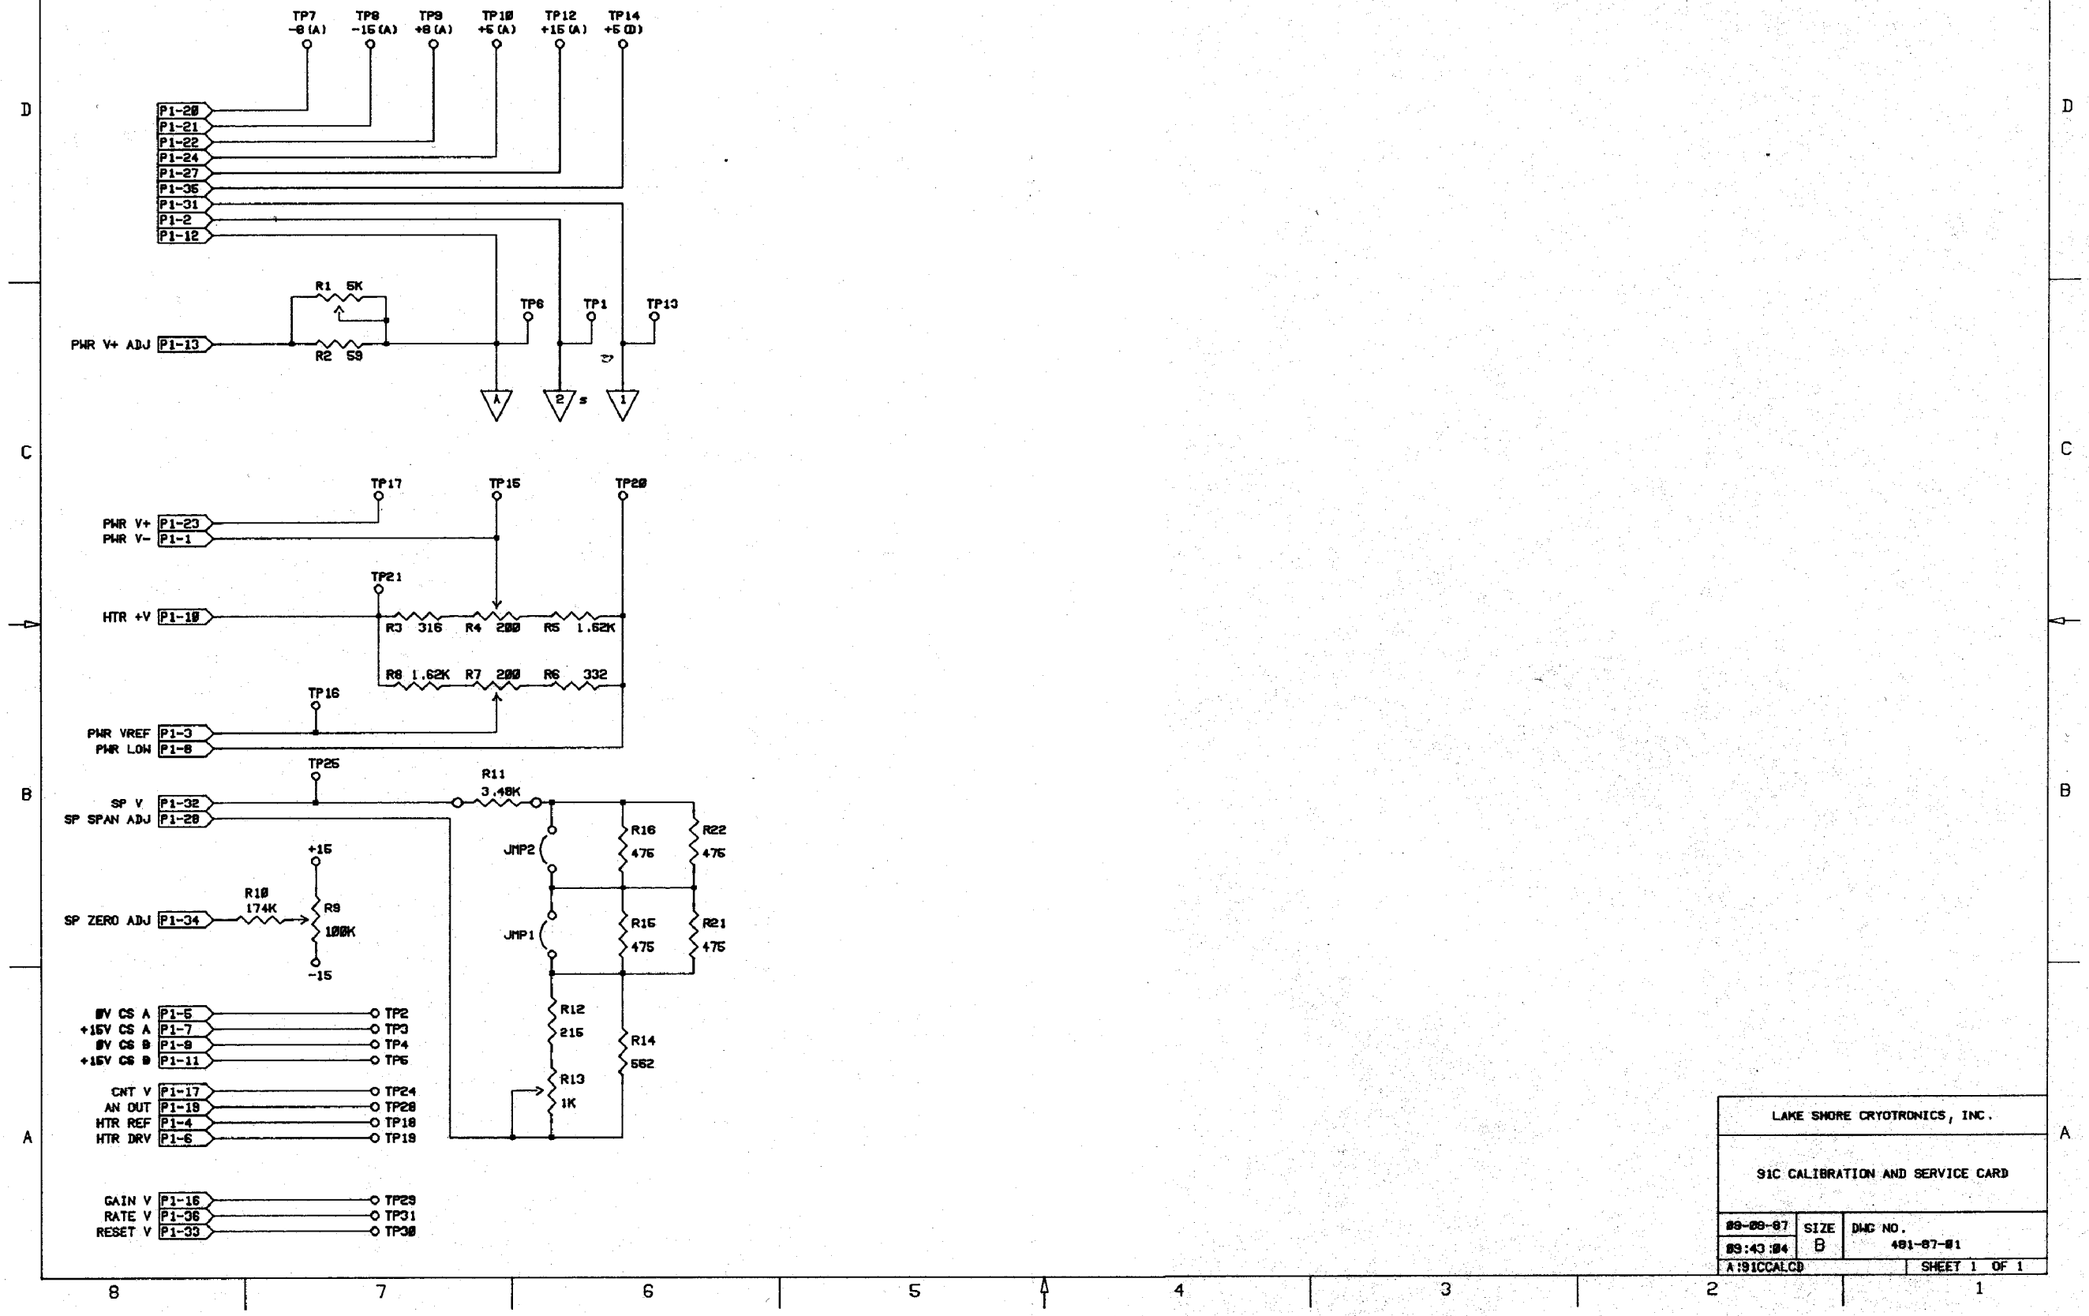



**Figure 91C-3. DRC-91C Calibration and Service Card**


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

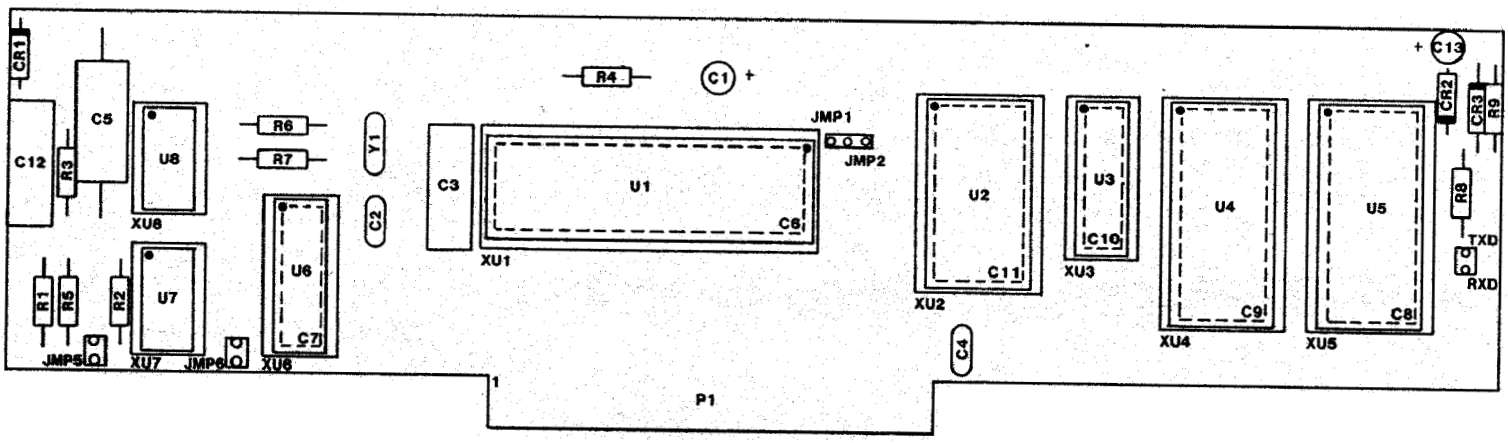


## REPLACEABLE PARTS LIST - A9 MICROPROCESSOR CARD

| ITEM NO | LSCI Part Number | Qty | Description | MFR | MFR PART NO |
|---|---|---|---|---|---|
| C1 | 101-137 | 1 | CAP,TANT,10MF,10V | SPRG | 119D106X0035DB1 |
| C2 | 101-059 | 1 | CAP,MICA,10PF,500V | CDE | CD15CD100D03 |
| C5 | 101-018 | 1 | CAP,.047MF,POLY,600V | CDE | WMF6S47 |
| C13 | 101-144 | 1 | CAP,TANT,33MF,25V | SPRG | 199D336X0025EA2 |
| U1 | 104-511 | 1 | IC,MICROPROCESSOR | INT | P80C31 |
| U2 | 104-125 | 1 | IC,4-16 LINE DECODER | | 74HC154 |
| U3 | 104-528 | 1 | IC,8 BIT LATCH | | P82C82 |
| U4 | 104-661 | 1 | IC,EPROM (PROGRAM) | | 27C256 |
| U5 | 104-653 | 1 | IC 8KX8 NOVRAM | DAL | DS1225Y |
| U6 | 104-310 | 1 | IC,8 BIT MULTIPLEXER | NAT | DM81LS95 |
| U7 | 104-210 | 1 | IC,O.C. HEX INVERTER | | 7406 |
| U8 | 104-207 | 1 | IC,HEX INVERTER | | 74LS04 |
| Y1 | 103-990 | 1 | CRYSTAL,5.000 MHZ | MTRON | MP1 5.000 MHZ |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

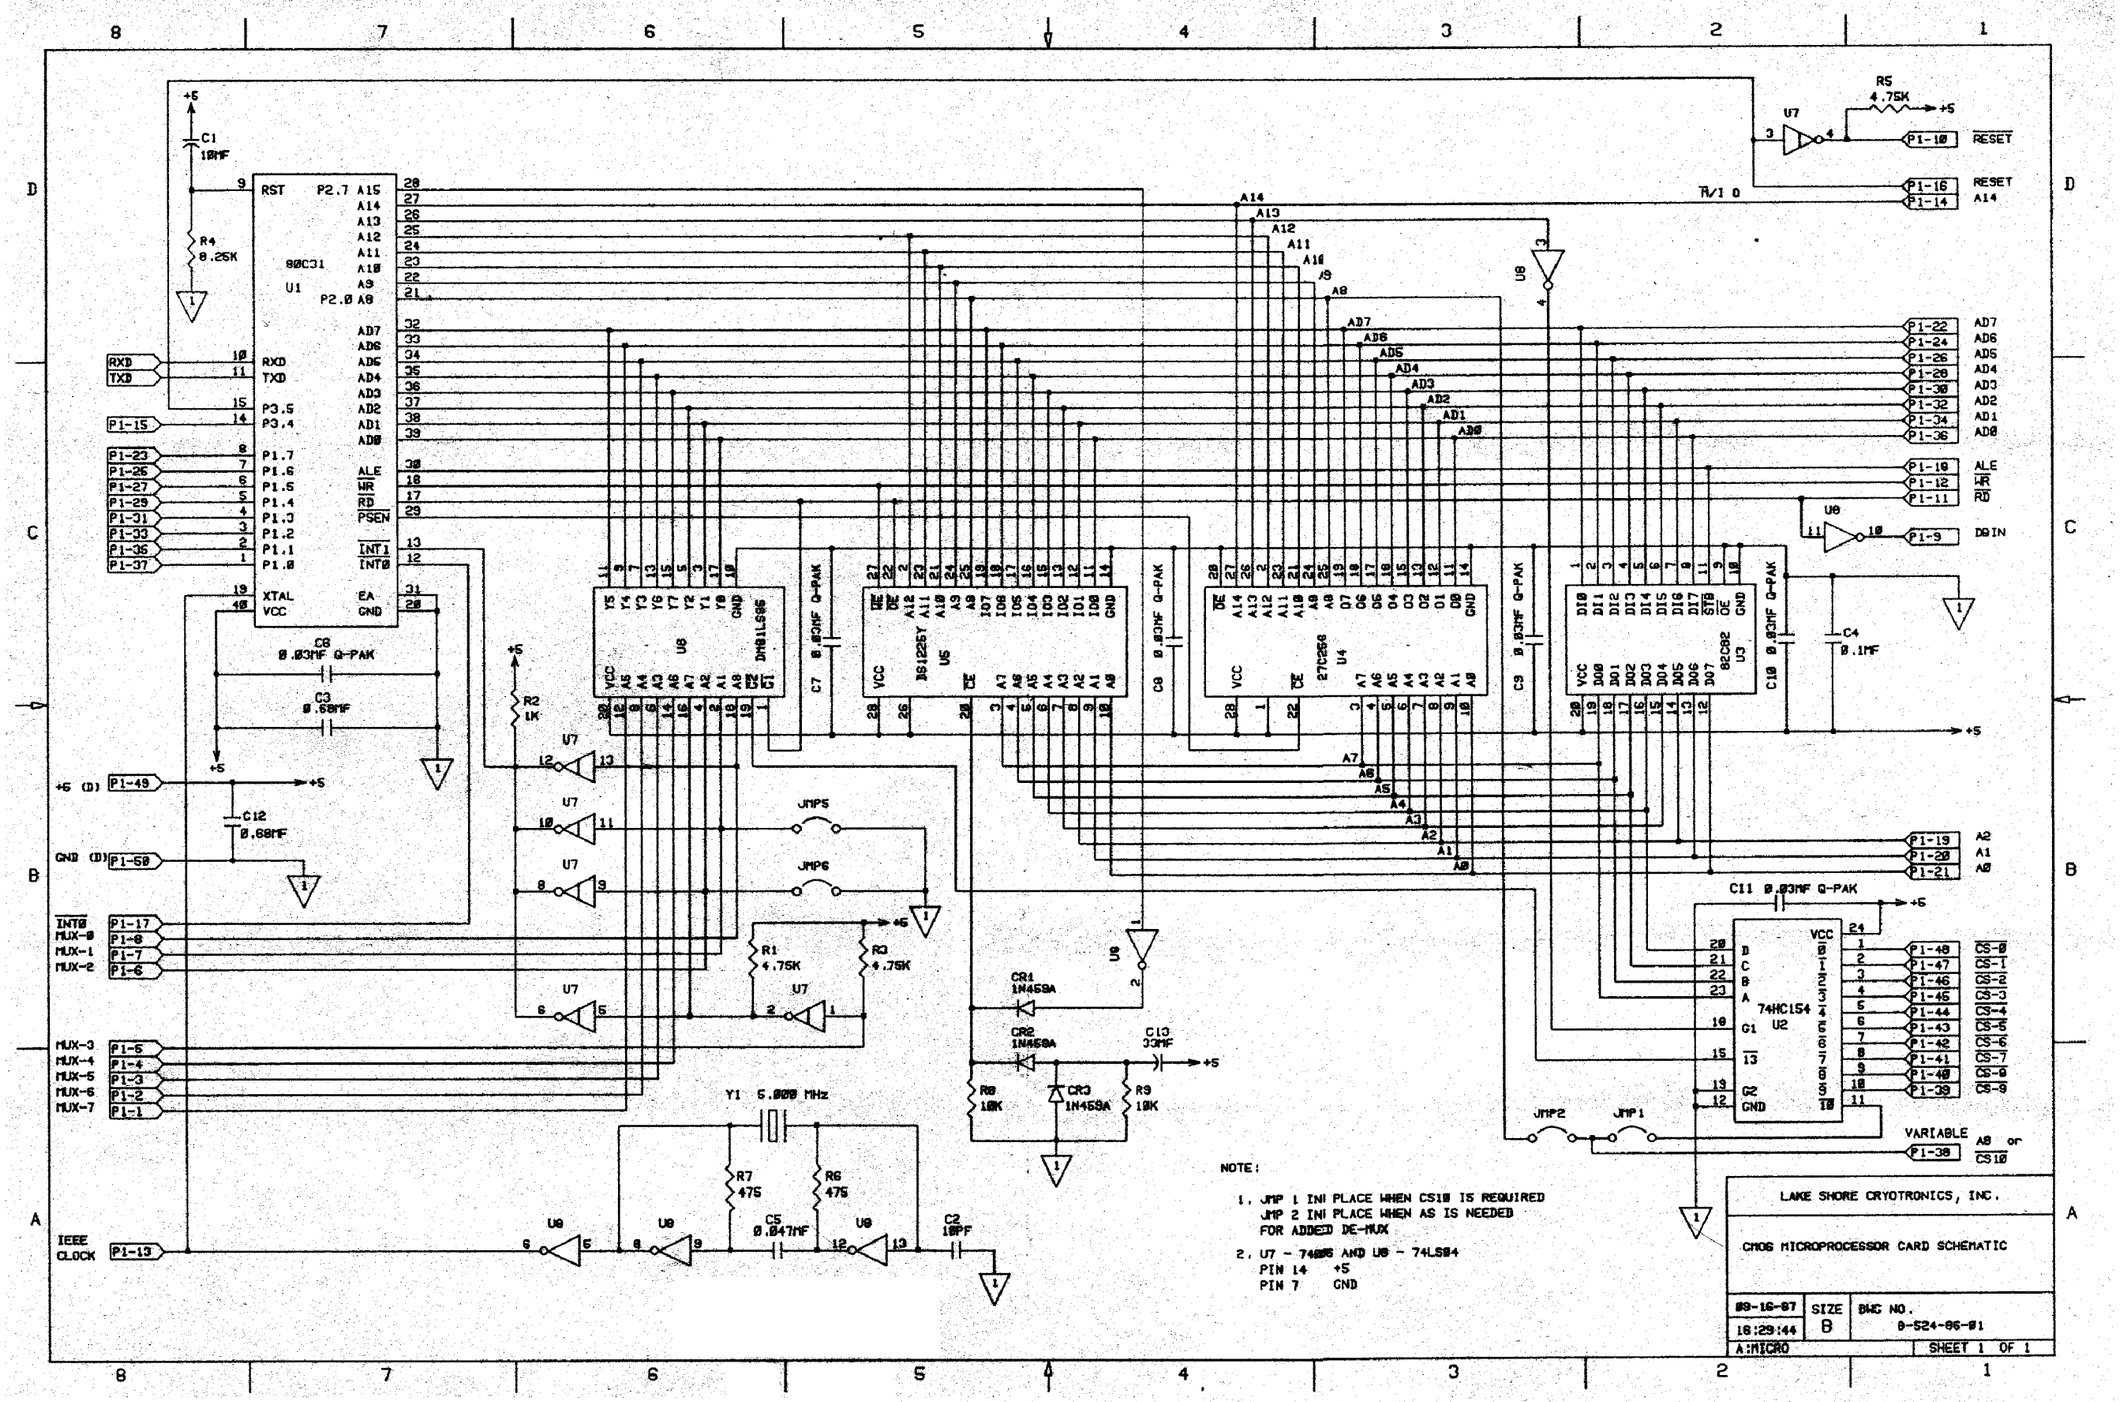


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 053. Microprocessor Card

# SECTION VI

# ACCESSORIES, INPUT CARDS AND OPTIONS

## TABLE OF CONTENTS


| MODEL OR PART NUMBER | DESCRIPTION | PAGE |
|---|---|---|
| | **ACCESSORIES** | |
| RM-3F | Rack Mounting Kit . . . . . | 6-2 |
| 8072 | IEEE-488 Interface Cable . . . . . | 6-2 |
| 8271-04 | Scanner Sensor Cable for 8229 . . . . . | 6-2 |
| 8271-21 | Sensor/Heater Cable . . . . . | 6-2 |
| 8271-22 | Sensor/Heater/Output Cable . . . . . | 6-2 |
| HTR-50 | 50 ohm Cartridge Heater, 50 W . . . . . | 6-3 |
| HTR-25 | 25 ohm Cartridge Heater, 25 W . . . . . | 6-3 |
| | **INPUT CARDS** | |
| | "Old" Input Card Dip Switch Definitions (8210, 8211, 8219-P2, 8219-P3, 8219-R1) | 6-3 |
| 9210 | Diode Input Card . . . . . | 9210-1 |
| 9215 | Capacitance Input Card . . . . . | 9215-1 |
| 9220 | User configurable Input Card . . . . . | 9220-1 |
| 9305 | Thermocouple Input Card . . . . . | 9305-1 |
| 9317C | Ultra-low (0.3K) Resistance Card . . . | 9317C-1 |
| 9318C | Germanium/Carbon Glass Resistance Card | 9318C-1 |
| | **OPTIONS** | |
| 8223 | RS-232C Interface Option . . . . . | 8223-1 |
| 8225 | Analog Output Option . . . . . | 8225-1 |
| 8229 | Scanner Conversion Option . . . . . | 8229-1 |
| 9126 | High Resolution Set Point Option . . . | 9126-1 |


COPYRIGHT 12/87 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

## 6.1 INTRODUCTION

This section contains information concerning the Accessories, Input Cards and Options for use with the DRC-91C Temperature Controller. Each Accessory, Input Card and Option is listed by part number in the Table on page 6-1.

## 6.2 ACCESSORIES

### 6.2.1 RM-3F Rack Mounting Kit

The DRC-91C can be rack mounted in a standard 19 inch instrument rack by using the RM-3F Rack Mounting Kit. The RM-3F mounts one controller in a height of 3.5 inches. Use the following procedure to install the RM-3F Kit.

1. Remove the two blue rack mount access covers, if present, from the front-side corners of the unit to be rack mounted. This is easily done by sliding the cover up as far as possible and using a blade screwdriver on the bottom edge to remove it from its position.

2. If the -H (handles) option was added, mount the handles onto the rack ears.

3. Attach the rack ears on opposite sides of the unit.

### 6.2.2 Cables

**6.2.2.1 8072 IEEE-488 Interface Cable** - The 8072 IEEE-488 Interface cable is one meter long and is equipped with double-ended connectors so it may be interconnected in serial or star patterns common in IEEE-488 instrument configurations.

**6.2.2.2 8271-04 Scanner Sensor Cable** - The 8271-04 Scanner Sensor cable for the 8229 Scanner Card is 3 meters long and brings out leads for the four additional input sensors provided by the 8229 Option. The cable's mechanical and electrical specifications are included with the cable.

**6.2.2.3 8271-21 Sensor/Heater Cable** - The 8271-21 Sensor/Heater Cable. is a six pair individually shielded cable with two five pin miniature hexagonal plugs which mate with the SENSOR A and SENSOR B connectors on the back panel of the DRC-91C Temperature Controller. In addition to the sensor connectors, it has a dual banana plug for heater output and a single banana plug for heater output shield.

The cable's mechanical and electrical specifications are included with the cable.

**6.2.2.4 8271-22 Sensor/Heater/ Output Cable** - The 8271-22 Sensor/Heater/Output Cable consists of two discrete cables. The first is a six pair individually shielded cable with two five pin miniature hexagonal plugs which mate with the SENSOR A and SENSOR B connectors on the back panel of the DRC-91C Temperature Controller. In addition to the sensor connectors, it has a dual banana plug for heater output and a single banana plug for heater output shield. The second cable is a three pair overall shielded cable for the Monitors Outputs.

The cable's mechanical and electrical specifications are included with the cable.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

COPYRIGHT 12/87 LSCI

### 6.2.3 Cartridge Heaters

#### 6.2.3.1 50 Ohm Cartridge Heater

This cartridge heater is 1/4" in diameter by 1" in length and is rated at 50 watts.

#### 6.2.3.2 25 Ohm Cartridge Heater

This cartridge heater is 3/8" in diameter by 1" in length and is rated at 25 watts.


### 6.3 Installation of Input Cards from a DRC-81C or DRC-82C

Input cards from the DRC-81C or DRC-82C can be used in the DRC-91C. The DRC-91C will recognize these cards if the dip switch settings are set correctly. This Dip Switch is located in the rear right hand corner of the main board below the AC input connector.

**WARNING**

To prevent shock hazard, turn off the instrument and disconnect it from the AC line power before changing the Input Card switch settings.

"OLD" INPUT CARD DIP SWITCH DEFINITIONS

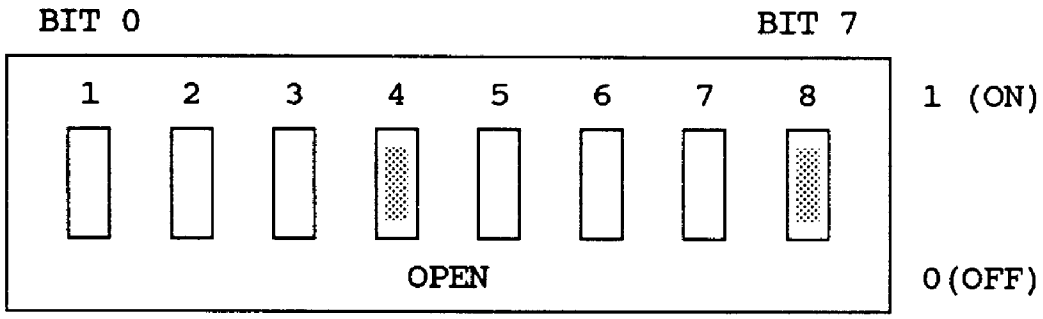


| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | A INPUT CARD | B INPUT CARD |
|---|---|---|---|---|---|---|---|---|---|
| 0 | 0 | 0 | X | 0 | 0 | 0 | X | NEW CARD (NON 8210,8211 OR 8219) | |
| 0 | 0 | 1 | X | 0 | 0 | 0 | X | 8210 | NEW CARD |
| 0 | 1 | 0 | X | 0 | 0 | 0 | X | 8211 | NEW CARD |
| 1 | 0 | 0 | X | 0 | 0 | 0 | X | 8219-P2 | NEW CARD |
| 1 | 0 | 1 | X | 0 | 0 | 0 | X | 8219-P3 | NEW CARD |
| 1 | 1 | 0 | X | 0 | 0 | 0 | X | 8219-R1 | NEW CARD |
| 1 | 1 | 1 | X | 0 | 0 | 0 | X | EMPTY | NEW CARD |
| 0 | 0 | 0 | X | 0 | 0 | 1 | X | NEW CARD | 8210 |
| 0 | 0 | 0 | X | 0 | 1 | 0 | X | NEW CARD | 8211 |
| 0 | 0 | 0 | X | 1 | 0 | 0 | X | NEW CARD | 8219-P2 |
| 0 | 0 | 0 | X | 1 | 0 | 1 | X | NEW CARD | 8219-P3 |
| 0 | 0 | 0 | X | 1 | 1 | 0 | X | NEW CARD | 8219-R1 |
| 0 | 0 | 0 | X | 1 | 1 | 1 | X | NEW CARD | EMPTY |
| ALSO COMBINATIONS OF A AND B | | | | | | | | | |

X DON'T CARE - SWITCHES 4 AND 8 ARE RESERVED

COPYRIGHT 12/87 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

# 9210 DIODE INPUT CARD OPTION

## 9210.1 INTRODUCTION

This section contains information pertaining to the Model 9210 Diode Input Card. Included is a description, specifications, installation, operation and maintenance information.

## 9210.2 DESCRIPTION

The Model 9210 Diode Input Card is designed to be installed in a DRC-91C or DRC-93C to convert either the Input A or Input B (or both with two options) to accommodate diode sensors with a voltage output of up to 3.0000 volts (9210-3 configuration). The 9210-3 is used with Lake Shore DT-500-DRC or DT-470 Series Sensors. Calibrated DT-500 or DT-470 Series Sensors can be accommodated with an 8000 Series Precision Option.

The 9210-6 configuration will accommodate diode sensors (TG-120 series) with voltages between 0 and 6.5535 volts. A calibrated sensor and 8001 Precision Option is required for the DRC-91C/93C to read accurately in temperature. 9210-3 can be converted to 9210-6 configuration by switch on the 9210 Diode Input Option Card. This configuration will also read DT-470 and DT-500 series sensors but with reduced resolution and accuracy. See Table 9210-1.

## 9210.3 SPECIFICATIONS

Specifications for the Model 9210 Diode Input Card are given in Table 9210-1. The card can be configured by the user as either a 3 volt (9210-3) or a 6 volt (9210-6) card.

**Table 9210-1. 9210 Diode Card**

**Sensor (ordered separately):** DT-470 series, DT-500 series and TG-120 series from LSCI as well as any other diode sensor. See Lake Shore Diode Sensor brochures.

**Temperature Range:** Dependent on Diode Sensor. See Sensor brochure.

**Sensor Excitation:** DC current source. 10 microamperes (±0.005%). AC current noise less than 0.01% of DC current.— Compliance voltage - 7 volts minimum

**Maximum Sensor Power Dissipation** 20 microwatts @ 4.2K for DT-470 Series. 25 microwatts @ 4.2K for DT-500 Series. Dissipation under other conditions is a product of Sensor Excitation Current and developed sensor voltage.

**9210-3:**
**Input Voltage Range:** 0 to 3 V
**Resolution:** 0.05 millivolts
**Accuracy:** 0.1 millivolts
**Display Resolution:** 5 digits. Displays 0.0000 to 2.9999 volts. Equivalent temperature accuracy is a function of sensor type, sensitivity and curve specification or Precision Option.

**9210-6:**
**Input Voltage Range:** 0-6.5535V
**Resolution:** 0.1 millivolts
**Accuracy:** 0.2 millivolts
**Display Resolution:** 5 digits. displays 0.0000 to 6.5535 volts. equivalent temperature accuracy is a function of sensor type and sensitivity. Precision Option required for TG-120 Sensors.

COPYRIGHT 12/87 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

## 9210.4 INSTALLATION

The 9210 can be installed in the 91C/93C as either Input A or Input B (or both with two options). The 9210 is factory installed if ordered with a DRC-91C/93C Temperature Controller or can be field installed at a later date. If field installation is required, use the following procedure.

1. Set the POWER switch to OFF and disconnect the power cord from the unit. Remove the three top panel screws and slide the panel off. Note on the calibration cover the position of the Input Card the 9210 will occupy.

**WARNING**

**To prevent shock hazard, turn off the instrument and disconnect it from AC line power and all test equipment before removing cover.**

2. Remove the four screws that secure the calibration cover to its clips and remove the cover.

3. If an Input Card must be removed, disconnect the wiring harness mating connector by lifting the locking tab on the Input Card connector and gently pulling on the body of the wiring harness mating connector.

4. Plug the new 9210 Input Card into the A Input Card Slot 5 or the B Input Card Slot 6 with the component side to the left of the unit as viewed from the front. Connect the wiring harness mating connector to the 9210 making sure that the wiring harness locking tab is seated over the extended edge of the wiring harness mating connector. Verify that the wiring harness is in place correctly by noting that the "A" or "B" on the harness mating connector is facing up (if it is not, review the harness installation again). Thread the wiring harness along the rear edge of the unit and slip it into the harness strain relief on the rear panel.

5. Install the calibration cover by reversing procedure 2.

6. Install the top panel.

## 9210.5 OPERATION

The Model 9210-3 Diode Configuration provides the 10 microampere excitation current to the sensor. The resulting sensor voltage is digitized by a 16 bit A/D converter with a resolution of 50 microvolts and a full scale input voltage of 3.0000 volts (100 microvolts and 6.5535 volts for the 9210-6 configuration). The digitized value is converted to a serial data string and transferred to the main microprocessor using optical isolation. The sensor voltage is also buffered and transferred to the rear panel MONITORS connector for external monitoring as well as for control selection. For the 9210-3 configuration, it is multiplied by 1, for the 9210-6 configuration it is multiplied by 0.457771 (3.0000/6.5535).

## 9210.6 CALIBRATION

The 9210 was calibrated to specification in the configuration specified prior to shipment. If recalibration is needed, refer to the following procedure. The following equipment is used to calibrate the 9210 Diode Input Card:

1. Digital Voltmeter/Multimeter (DVM) - 4½ digit resolution or better.


COPYRIGHT 12/87 LSCI
Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2. Precision Standard Resistor - 100 kilohms with a tolerance of ±0.01% or better.

3. Precision Voltage Source - capable of supplying a voltage with an accuracy and resolution of 100 microvolts out of 10 volts or better.

The unit should be allowed a one hour warm-up time to achieve rated specifications. Use the following procedure to calibrate the 9210 Diode Input Card.

1. Remove the three top panel screws and slide the panel cover off.

2. **Set 10μA Current** - Connect the precision resistor across the A (+I) and B (-I) pins of the five pin input connector for the input the 9210 occupies. Connect the DVM plus lead to the +I pin and the minus lead to the -I pin. Adjust the trimpot marked 10μA on the calibration cover for the appropriate Input Card until the voltage across the resistor is 1.0000 ± 0.0001 volts.

3. **Calibrate the Buffered Sensor Output Signal.** Connect the DVM plus lead to the +V Buffered Sensor Output Signal pin for the appropriate Input Card and the minus lead to the -V pin on the MONITORS connector. Connect the precision voltage source across the E (+V) and D (-V) pins of the five pin input connector for the appropriate input. Set the standard to 1.5000 volts and adjust the trimpot marked **B** on the calibration cover until the DVM reads as close to 1.5000 volts as possible for the 9210-3 configuration and adjust the value to 0.68666 volts for the 9210-6 configuration.

4. **Calibrate the A/D Converter.** Verify that the Display selects the desired Input Card and that the units selected are V. Set the standard to 1.5000 volts for the 9210-3 and adjust the trimpot marked **A/D** until the display reads 1.5000 V. Check linearity by inputting 2.0000 and 1.0000 volts and verify that the unit displays those settings within ± 0.0001 volts (5.0000 and 1.0000 volts for the 9210-6). If this specification is not met, check the Technical Service Guide for further instructions.

5. Install the top cover panel.

## 9210.7 SENSOR CURVE INFORMATION


Sensor Curve data for use with the 9210 Diode Input Card must be put in table form consisting of voltage and temperature points with the voltage in ascending voltage order. Refer to Section 4 of this manual for a discussion of how the data must be formatted for entry into the unit over the remote interfaces and to Appendix B for a discussion of Precision Option curves and examples of curves that would be used with the 9210.

## 9210.8 REPLACEABLE PARTS

Included in this section is Figure 9210-1. It includes the Model 9210 Diode Input Schematics, replaceable parts list and illustrated component layout. Refer to the manual for ordering information.

COPYRIGHT 12/87 LSCI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

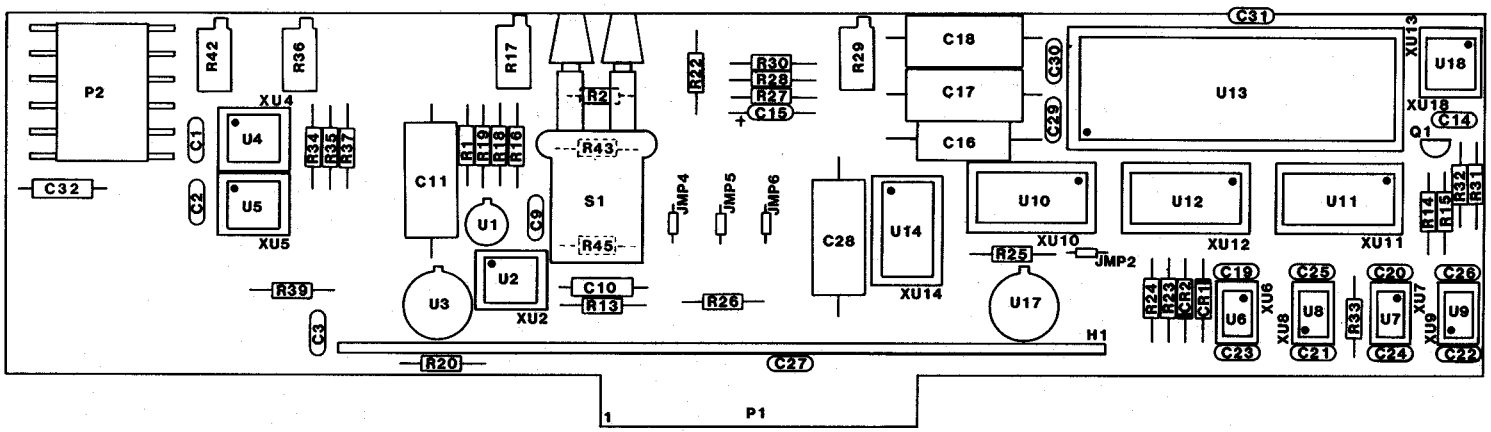


## REPLACEABLE PARTS LIST - 9210 ANALOG INPUT CARD

| ITEM NO | LSCI Part Number | Qty | Description | MFR | MFR PART NO |
|---|---|---|---|---|---|
| C11,17 18,28 | 101-034 | 4 | CAP,PP,1.0MF,100V | FDYNE | MPP2X-1.0-100-10 |
| C16 | 101-025 | 1 | CAP,PP,.33MF,100V | FDYNE | MPP-11.33MFD |
| P2 | 106-142 | 1 | CONNECTOR, (IC TO BP) 6 POST LOCKING HEADER | MOL | 2420-09-75-1061 |
| Q1 | 102-072 | 1 | TRANSISTOR,PNP,SIGNAL | | 2N3906 |
| S1 | 105-649 | 1 | SWITCH,2 POS,4 POLE INTERLOCKING | EGC | 2XMTA7.5(NONE) 4UGRP |
| U1 | 102-074 | 1 | MOSFET,P CHANNEL | SIL | 3N163 |
| U2 | 104-005 | 1 | IC, OP AMP | | LM308 |
| U3,17 | 102-043 | 2 | VOLTAGE REFERENCE,6.95V | NAT | LM399H |
| U4,5 | 104-001 | 2 | IC, OP AMP | PMI | OP07E |
| U6,8,9 | 104-355 | 3 | IC, OPTOCOUPLER | GI | 740L6000 |
| U7 | 104-356 | 1 | IC, OPTOCOUPLER | GI | 740L6010 |
| U10-12 | 104-099 | 3 | IC, P-S SHIFT REGISTER | | CD4021BCN |
| U13 | 104-461 | 1 | IC, A/D CONVERTER | ISL | ICL7104-16CPL |
| U14 | 104-460 | 1 | IC, A/D REFERENCE | ISL | ICL8068ACPD |
| U18 | 104-051 | 1 | IC, TIMER | ISL | ICM7555IPA |

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

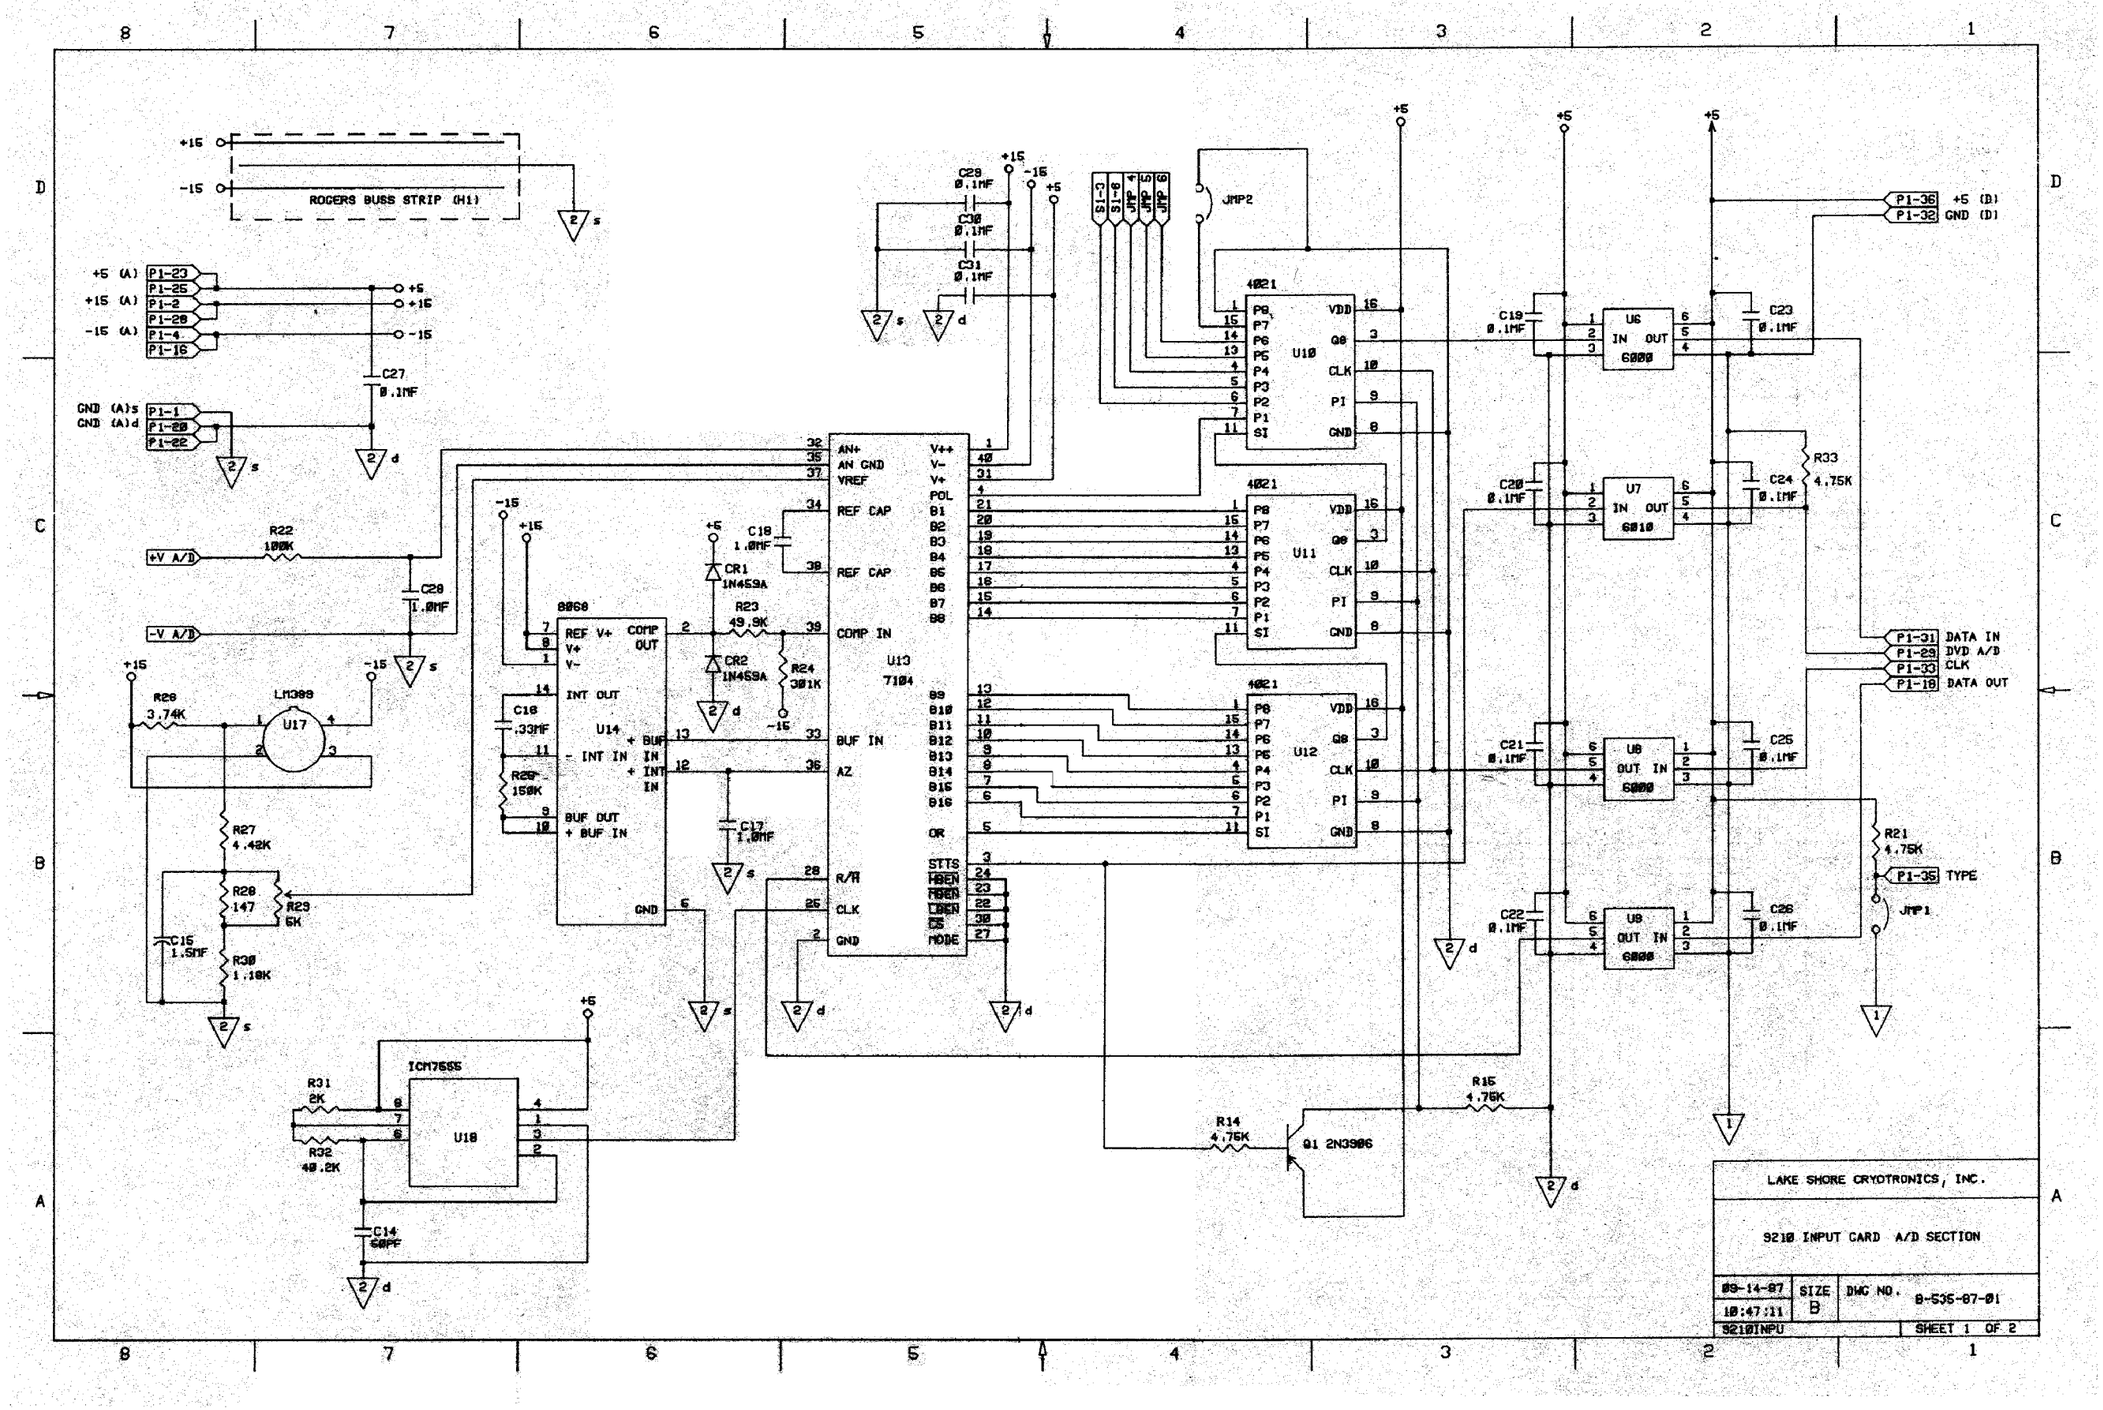



**Figure 9210-1. Model 9210 Diode Input Card**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

**Artisan Technology Group** is an independent supplier of quality pre-owned equipment

## Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

## We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

## Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP