ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *National Instruments PCI-5922* at our website: *Click HERE*

GETTING STARTED GUIDE

NI PXI/PCI-5922

24-Bit Flexible-Resolution Oscilloscope

Note Before you begin, install and configure your chassis and controller.

This document explains how to install, configure, and test the NI PXI/PCI-5922 (NI 5922). The NI 5922 is a 2-channel, high-resolution oscilloscope offering state-of-the-art resolution for sampling rates up to 15 MS/s.

To access NI 5922 documentation, navigate to **Start»All Programs»National Instruments»NI-SCOPE»Documentation**. In Windows 8, click **NI Launcher** and select **NI-SCOPE** in the window that appears.

Contents

Electromagnetic Compatibility Guidelines....2
Verifying the System Requirements....2
Unpacking the Kit....2
Preparing the Environment....3
    PXI Modules....3
    PCI Modules....3
Kit Contents....4
    Other Equipment....4
Installing the Software....5
Installing the Spectral Measurements Toolkit....5
Installing the Hardware....6
    Installing the NI PXI-5922....6
    Installing the NI PCI-5922....7
    Hardware Front Panel Connectors....8
Configuring the NI 5922 in MAX....10
Programming the NI 5922....11
    NI-SCOPE Examples....12
    Programming Flow....13
Making a Measurement....14
    Making a Measurement with NI-SCOPE SFP....14
    Making a Measurement with LabVIEW....14
Setting Up Your Device for Synchronization....14
    PXI Modules....14
    PCI Modules....15

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Troubleshooting....15
Why Is the ACCESS LED Off When the Chassis is On?....15
What Should I Do if the NI 5922 Doesn't Appear in MAX?....15
What Should I Do if the Module Fails the Self-Test?....16
Thermal Shutdown Error....16
Where to Go Next....16
Worldwide Support and Services....17

Electromagnetic Compatibility Guidelines

This product was tested and complies with the regulatory requirements and limits for electromagnetic compatibility (EMC) stated in the product specifications. These requirements and limits provide reasonable protection against harmful interference when the product is operated in the intended operational electromagnetic environment.

This product is intended for use in industrial locations. However, harmful interference may occur in some installations, when the product is connected to a peripheral device or test object, or if the product is used in residential or commercial areas. To minimize interference with radio and television reception and prevent unacceptable performance degradation, install and use this product in strict accordance with the instructions in the product documentation.

Furthermore, any changes or modifications to the product not expressly approved by National Instruments could void your authority to operate it under your local regulatory rules.



Caution To ensure the specified EMC performance, operate this product only with shielded cables and accessories.



Caution To ensure the specified EMC performance, the length of all I/O cables must be no longer than 3 m (10 ft).

Verifying the System Requirements

To use the NI-SCOPE instrument driver, your system must meet certain requirements.

Refer to the product readme, which is available on the driver software media or online at *ni.com/manuals*, for more information about minimum system requirements, recommended system, and supported application development environments (ADEs).

Unpacking the Kit



Caution To prevent electrostatic discharge (ESD) from damaging the device, ground yourself using a grounding strap or by holding a grounded object, such as your computer chassis.

1. Touch the antistatic package to a metal part of the computer chassis.
2. Remove the device from the package and inspect the device for loose components or any other sign of damage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Caution Never touch the exposed pins of connectors or exposed circuitry.

Notify NI if the device appears damaged in any way. Do not install a damaged device.

3. Unpack any other items and documentation from the kit.

Store the device in the antistatic package when the device is not in use.

Preparing the Environment

Ensure that the environment in which you are using the NI 5922 meets the following specifications:

PXI Modules

Operating Environment

Ambient temperature range.....0 °C to 55 °C (Tested in accordance with IEC 60068-2-1 and IEC 60068-2-2.)

Relative humidity range.....10% to 90%, noncondensing (Tested in accordance with IEC 60068-2-56.)

Maximum altitude.....2,000 m (at 25 °C ambient temperature)

Pollution Degree.....2

Indoor use only.

PCI Modules

Operating Environment

Ambient temperature range.....0 °C to 45 °C (Tested in accordance with IEC 60068-2-1 and IEC 60068-2-2.)

Relative humidity range.....10% to 90%, noncondensing (Tested in accordance with IEC 60068-2-56.)

Maximum altitude.....2,000 m (at 25 °C ambient temperature)

Pollution Degree.....2

Indoor use only.


Caution Clean the hardware with a soft, nonmetallic brush. Make sure that the hardware is completely dry and free from contaminants before returning it to service.

For complete specifications, refer to specifications document for your device at *ni.com/manuals*.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Kit Contents

Figure 1. NI 5922 Kit Contents

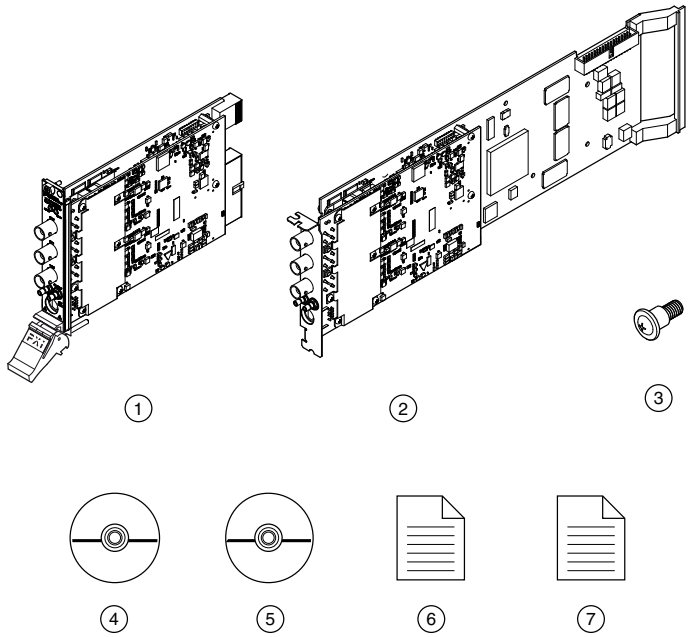

1. NI PXI-5922 Device
2. NI PCI-5922 Device
3. Screw Kit, part number 191306A-01 (ships with PCI devices only)
4. NI Spectral Measurements Toolkit DVD (not included with 8 MB/ch device)
5. Driver Software DVD
6. NI PXI/PCI-5922 Getting Started Guide (this document)
7. Maintain Forced-Air Cooling Note to Users

Other Equipment

There are required items not included in your device kit that you need to install or operate the NI 5922.

- 1/8 in. flat-head screwdriver
- **(PXI Devices)** A PXI chassis, a PXI/SCXI combination chassis, a PXI/CompactPCI chassis, or a PXI Express chassis with a controller and the chassis documentation
- **(PCI Devices)** A desktop computer and its documentation

Note If your application uses NI-TClk synchronization for PCI devices, you must use a RTSI cable to connect the PCI devices. For more information, refer to **NI High-Speed Digitizers Help»Programming»Reference»NI-TClk Synchronization Help**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Installing the Software

You must be an Administrator to install NI software on your computer.

1. Install an ADE, such as LabVIEW or LabWindows™/CVI™.
2. Insert the driver software media into your computer. The installer should open automatically.

   If the installation window does not appear, navigate to the drive, double-click it, and double-click `autorun.exe`.
3. Follow the instructions in the installation prompts.

   Note Windows users may see access and security messages during installation. Accept the prompts to complete the installation.

   Note If installing from the NI Device Drivers DVD, select **Modular Instruments»NI-SCOPE** for installation.
4. When the installer completes, select **Restart** in the dialog box that prompts you to restart, shut down, or restart later.
5. If you are using a system running the LabVIEW Real-Time Module, download NI-SCOPE to the target using Measurement & Automation Explorer (MAX). For more information, refer to the *Max Remote Systems Help* by selecting **Help»Help Topics» Remote Systems** in MAX.

Installing the Spectral Measurements Toolkit

The Spectral Measurements Toolkit is packaged with the NI 5922 (32 MB/ch and 256 MB/ch only). The Spectral Measurements Toolkit extends the capability of the NI 5922 to include frequency- and modulation-domain measurements and analysis of analog-modulated IF signals.

To use the full functionality of the NI 5922, you must install the toolkit, and it must be installed after you install NI-SCOPE.

1. Insert the Spectral Measurements Toolkit DVD.
2. Install the Spectral Measurements Toolkit for the ADE you intend to use by following the instructions in the installation window.
3. When the installation completes, remove the Spectral Measurements Toolkit DVD.
4. Restart your system.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Installing the Hardware


Installing the NI PXI-5922

Caution To prevent damage to the device caused by ESD or contamination, handle the device using the edges or the metal bracket.

1. Ensure the AC power source is connected to the chassis before installing the modules.

   The AC power cord grounds the chassis and protects it from electrical damage while you install the modules.
2. Power off the chassis.
3. Inspect the slot pins on the chassis backplane for any bends or damage prior to installation. Do not install a module if the backplane is damaged.
4. Remove the black plastic connectors from all the captive screws on the module front panel.
5. Identify a supported slot in the chassis. The following figure shows the symbols that indicate the slot types.

Figure 2. Chassis Compatibility Symbols

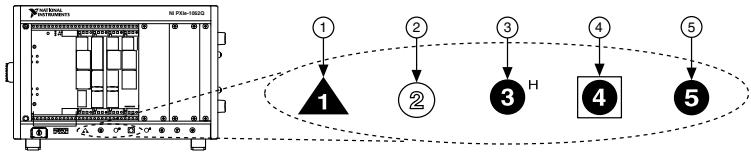


1. PXI Express System Controller Slot
2. PXI Peripheral Slot
3. PXI Express Hybrid Peripheral Slot
4. PXI Express System Timing Slot
5. PXI Express Peripheral Slot

   PXI modules can be placed in PXI peripheral slots or PXI Express Hybrid peripheral slots. PXI Express modules can be placed in PXI Express peripheral slots, PXI Express Hybrid peripheral slots, or PXI Express System Timing slots.
6. Touch any metal part of the chassis to discharge static electricity.
7. Ensure that the ejector handle is in the unlatched (downward) position.
8. Place the module edges into the module guides at the top and bottom of the chassis. Slide the device into the slot until it is fully inserted.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 3. Module Installation

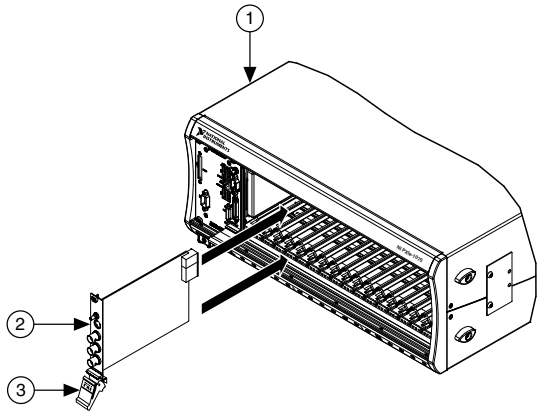

1. Chassis
2. Hardware Module
3. Ejector Handle in Down (Unlatched) Position

9. Latch the module in place by pulling up on the ejector handle.
10. Secure the device front panel to the chassis using the front-panel mounting screws.

Caution It is important to completely screw the device into the slot, both for mechanical stability and for creating a solid ground connection, which reduces signal noise. Improperly secured devices may affect the accuracy of device specifications.

11. Cover all empty slots using filler panels or slot blockers to maximize cooling air flow.
12. Power on the chassis.

Note For more information about maximizing cooling air flow, refer to the *Maintain Forced-Air Cooling Note to Users* included in your kit.

Installing the NI PCI-5922


1. Power off and unplug the computer.
2. Access the computer system expansion slots. This step might require you to remove one or more access panels on the computer case.
3. Locate a compatible slot and remove the corresponding slot cover on the computer back panel. NI PCI-5922 modules can only be inserted into PCI slots.

Tip To maximize airflow and extend the life of the PCI device, leave any adjacent PCI slots empty.

4. Touch any metal part of the computer to discharge any static electricity.
5. Insert the module into the slot you selected. Gently rock the module in to place without forcing it.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 4. Module Installation

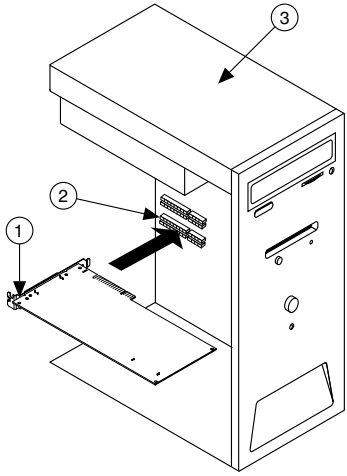

1. Module
2. System Expansion Slot
3. PC

6. Secure the module mounting bracket to the computer back panel rail.

Note Tightening the top mounting screw increases mechanical stability and also electrically connects the front panel to the chassis, which can improve the signal quality and electromagnetic performance.

7. Some computer manufacturers use a securing lever made of plastic to secure PCI devices; such a lever is unacceptable and must be removed. Use the screw provided in the kit to screw down the device. Otherwise, you must use a different computer chassis.
8. Replace any access panels on the computer case.
9. Plug in and power on your computer.
10. Verify that spread-spectrum clocking is enabled in the PC BIOS. For information about how to verify this setting, refer to the PC user documentation

Note For SMC-based devices, spread-spectrum clocking varies the clock signal to spread the timing clock signal over a small frequency range. Disabling spread-spectrum clocking may affect the accuracy of device specifications.

Hardware Front Panel Connectors

Refer to the following figure and table for the NI 5922 front panels and signal connectors.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 5. NI 5922 Front Panels

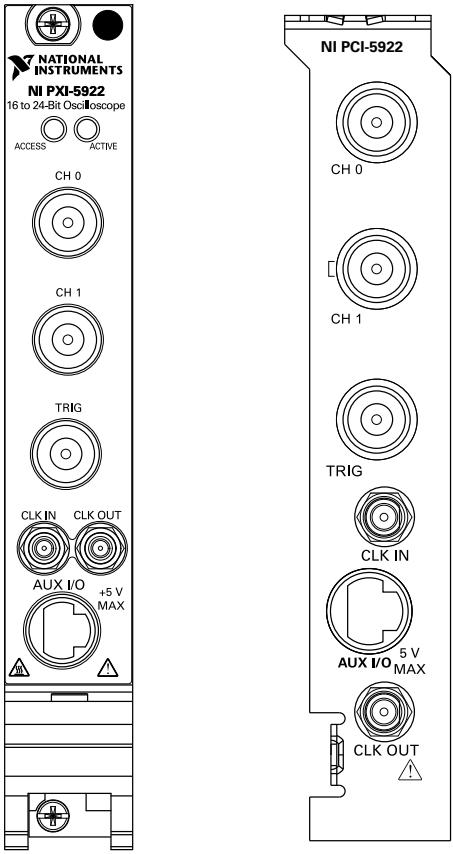


Table 1. NI 5922 Front Panel Signal Connections


Connector	Description	Function
CH 0, CH 1	Standard BNC female connector	Analog input connection; digitizes data and triggers acquisitions.
TRIG	Standard BNC female connector	External analog trigger connection; signals on the TRIG connector cannot be digitized.
CLK IN	Standard SMB jack connector	Input for an external reference clock to the device.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 1. NI 5922 Front Panel Signal Connections (Continued)

Connector	Description	Function
CLK OUT	Standard SMB jack connector	Output for the reference clock.
AUX I/O	9-pin mini-circular DIN connector	Provides access to the multipurpose digital timing and triggering lines, PFI 0, PFI 1 (with optional cable). For pinout information, refer to the 9-Pin DIN Connector Pin Assignments.

Figure 6. 9-Pin DIN Connector Pin Assignments for NI 5922

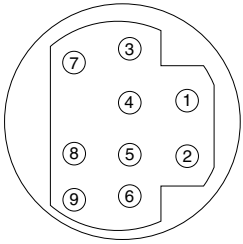

1. +5 V (Fused)
2. GND
3. Reserved
4. Reserved
5. Reserved
6. PFI 1
7. Reserved
8. Reserved
9. PFI 0

Note The NI PXI-5900 is a differential amplifier designed for use with NI high-speed oscilloscopes/digitizers, particularly the NI 5922.

Configuring the NI 5922 in MAX

Use Measurement & Automation Explorer (MAX) to configure your National Instruments hardware. MAX informs other programs about which devices reside in the system and how they are configured. MAX is automatically installed with NI-SCOPE.

1. Launch MAX.
2. In the configuration tree, double-click **Devices and Interfaces** to see the list of installed devices.

   Installed devices appear under the name of their associated chassis.
3. Expand your **Chassis** tree item.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

MAX lists all devices installed in the chassis. Your default device names may vary.

Note If you do not see your device listed, press <F5> to refresh the list of installed devices. If the device is still not listed, power off the system, ensure the device is correctly installed, and restart.

4. Record the device identifier MAX assigns to the hardware. Use this identifier when programming the NI 5922.
5. Self-test the device by selecting the device in the configuration tree and clicking **Self-Test** in the MAX toolbar.

   The MAX self-test performs a basic verification of hardware resources.
6. Run the test panels on the device to verify the signal.
   a) To access the test panels, right-click the device and select **Test Panels**. The NI-SCOPE Soft Front Panel (SFP) launches automatically.
   b) Do one of the following to connect a signal to the device:
      - Connect an external signal by clicking **Auto** or by selecting the appropriate device parameters for the signal.
      - Connect a cable from PFI 1 to an input channel and select **Utility»Probe Compensation** from the SFP menu.

Note The NI 5922 has self-calibration capabilities, which you can access programmatically with NI-SCOPE and your ADE, or interactively with NI-SCOPE SFP or MAX.

Programming the NI 5922

You can acquire data interactively using the NI-SCOPE SFP, or you can use the NI-SCOPE instrument driver to program your device in the supported ADE of your choice.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 2. NI 5922 Programming Options

Application Programming Interface (API)	Location	Description
NI-SCOPE SFP	Available from the start menu at **Start»All Programs»National Instruments»NI-SCOPE»NI-SCOPE Soft Front Panel**.	The NI-SCOPE SFP acquires, controls, analyzes, and presents data, similar to stand-alone oscilloscopes. The NI-SCOPE SFP operates on the PC, so you can view and control waveforms directly from your computer. You can also run multiple sessions of the NI-SCOPE SFP simultaneously.
NI-SCOPE Instrument Driver	LabVIEW—Available on the LabVIEW Functions palette at **Measurement I/O»NI-SCOPE**.	NI-SCOPE configures and operates the device hardware and performs basic waveform acquisition and measurement options using LabVIEW VIs or LabWindows/CVI functions.
	C or LabWindows/CVI—Available at **Program Files»IVI Foundation»IVI»Drivers»niScope**.	
	Microsoft Visual C/C++—Use examples located in the `<NIDocDir>\NI-SCOPE\examples` directory, where `<NIDocDir>` is one of the following directories: • Windows 8/7/Vista—`Users\Public\Documents\National Instruments` • Windows XP—`Documents and Settings\All Users\Shared Documents\National Instruments`	You can modify an NI-SCOPE C example to create an application with Microsoft Visual C/C++. Copy an NI-SCOPE example to copy required project settings for include paths and library files. Alternatively, refer to the *Creating an Application with Microsoft Visual C and C++* topic of the *NI High-Speed Digitizers Help* to manually add all required include and library files to your project.

NI-SCOPE Examples

Examples demonstrate the functionality of the device and serve as programming models and building blocks for your own applications. The NI Example Finder is a utility available for some ADEs that organizes examples into categories and allows you to easily browse and search installed examples. You can see descriptions and compatible hardware models for each example, or see all the examples compatible with one particular hardware model.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


To locate examples, refer to the following table.

Table 3. Locating NI-SCOPE Examples

Application Development Environment (ADE)	Locating Examples
LabVIEW or LabWindows/CVI	Locate examples with the NI Example Finder. Within LabVIEW or LabWindows/CVI, select **Help»Find Examples**, and navigate to **Hardware Input and Output»Modular Instruments**.
ANSI C or Visual Basic	Locate examples in the `<NIDocDir>\NI-SCOPE\examples` directory, where `<NIDocDir>` is one of the following directories: • Windows 8/7/Vista—`Users\Public\Public Documents\National Instruments` • Windows XP—`Documents and Settings\All Users\Shared Documents\National Instruments`

Programming Flow

The following diagram shows the programming flow of applications using NI-SCOPE.

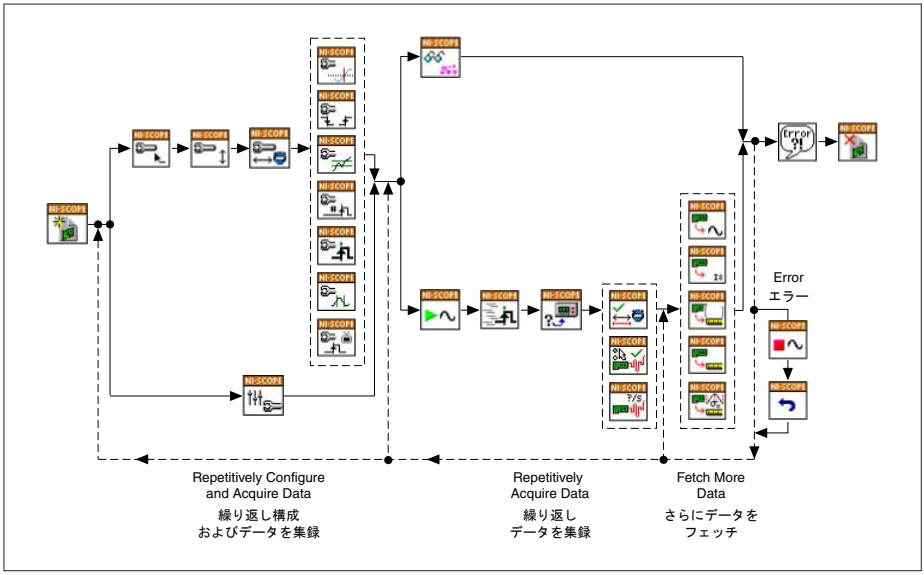

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Making a Measurement

You can make a measurement interactively using the NI-SCOPE SFP or programmatically using LabVIEW.

Making a Measurement with NI-SCOPE SFP

1. Connect CH 0 to input signal PFI 1 using a BNC to SMB cable.
2. Launch the NI-SCOPE SFP from the **Start** menu.
3. In the **Select Device** dialog box, select the device name assigned to the device in MAX.
4. To enable signal output on PFI 1, activate the probe compensation by selecting **Utility**» **Probe Compensation**.
5. Click **Auto** to display the data as a square wave.
6. If the SFP is not already running, click **Run**.

Making a Measurement with LabVIEW

1. Launch LabVIEW.
2. Select **Help**»**Find Examples**.
3. Open the example VI that you want to use by selecting **Hardware Input and Output**» **Modular Instruments**»**NI-SCOPE (High-Speed Digitizers)**.

   Tip If you are not sure which example to run, use the Quick Start VI, which is found under **Hardware Input and Output**»**Modular Instruments**»**NI-SCOPE (High-Speed Digitizers)**»**Demos**»**niScope EX Quick Start.vi**.
4. Follow any setup instructions in the VI.
5. In the **Resource Name** drop-down menu, select the device name assigned to the device in MAX.
6. Click **Run** to run the example program.

Setting Up Your Device for Synchronization

The following steps are required for any type of synchronization, including NI-TClk synchronization.

Note If you plan to share triggers and/or clocks for the purpose of synchronizing devices, you must identify or configure certain components in MAX.

PXI Modules

You must identify the PXI system controller by completing the following steps:

1. Launch MAX.
2. In the MAX configuration pane, expand the chassis tree.
3. Right-click the name of the chassis you are using, and select **Identify As**.
4. Select your controller from the list. For example, select **External PC** if you are using an MXI controller in an external PC.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PCI Modules

You must configure the RTSI cable by completing the following steps:

1. Connect an RTSI cable between the PCI devices to physically share triggers and/or clocks.
2. Launch MAX.
3. In the MAX configuration pane, right-click **Devices and Interfaces**, and select **Create New**.
4. In the dialog box that opens, select **NI-RTSI Cable**.
5. Click **Finish**.
6. In the MAX configuration pane, right-click the NI-RTSI cable, select **Add Device to NI-RTSI Cable**, and select the device you want to add.

For more information about connecting PCI devices, refer to **NI High-Speed Digitizers Help»Programming»Reference»NI-TClk Synchronization Help**.

Troubleshooting

Why Is the ACCESS LED Off When the Chassis is On?

The LEDs may not light until the device has been configured in MAX. Before proceeding, verify that the NI 5922 appears in MAX.

If the ACCESS LED fails to light after you power on the chassis, a problem may exist with the chassis power rails, a hardware module, or the LED.

Caution Apply external signals only while the NI 5922 is powered on. Applying external signals while the device is powered off may cause damage.

1. Disconnect any signals from the module front panels.
2. Power off the chassis.
3. Remove the module from the chassis and inspect it for damage. Do not reinstall a damaged device.
4. Reinstall the module in a different chassis slot.
5. Power on the chassis.
6. Verify that the device appears in MAX.
7. Reset the device in MAX and perform a self-test.

What Should I Do if the NI 5922 Doesn't Appear in MAX?

1. In the MAX configuration tree, click **Devices and Interfaces**.
2. Expand the **Chassis** tree to see the list of installed devices, and press <F5> to refresh the list.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3. If the module is still not listed, power off the system, ensure that all hardware is correctly installed, and restart the system.
4. Navigate to the Device Manager.

Operating System	Description
Windows 8	Right-click the Start screen, and select **All apps»Control Panel» Hardware and Sound»Device Manager**.
Windows 7	Select **Start»Control Panel»Device Manager**.
Windows Vista	Select **Start»Control Panel»System and Maintenance»Device Manager**.
Windows XP	Select **Start»Control Panel»System»Hardware»Device Manager**.

5. If you are using a PXI controller, verify that a **National Instruments** entry appears in the system device list. Reinstall NI-SCOPE and the device if error conditions appear in the list. If you are using an MXI controller, right-click **PCI-to-PCI Bridge**, and select **Properties** from the shortcut menu to verify that the bridge is enabled.

What Should I Do if the Module Fails the Self-Test?

1. Restart the system.
2. Launch MAX, and perform the self-test again.
3. Power off the chassis.
4. Reinstall the failed module in a different slot.
5. Power on the chassis.
6. Perform the self-test again.

Thermal Shutdown Error

If you receive an over-temperature or thermal shutdown error and your device shuts down, complete the following steps to re-enable your device:

1. Power off the computer or chassis that contains the device.
2. Reinstall the device and make any necessary adjustments to make sure that the device is effectively cooled.
3. Power on the computer or chassis.


Note The thermal shutdown error is reported until the device has cooled to an acceptable operating temperature and has been successfully reset.

For more information about cooling the device, refer to the *Maintain Forced-Air Cooling Note to Users* included in your kit.

Where to Go Next

Refer to the following figure for information about other product tasks and associated resources for those tasks.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

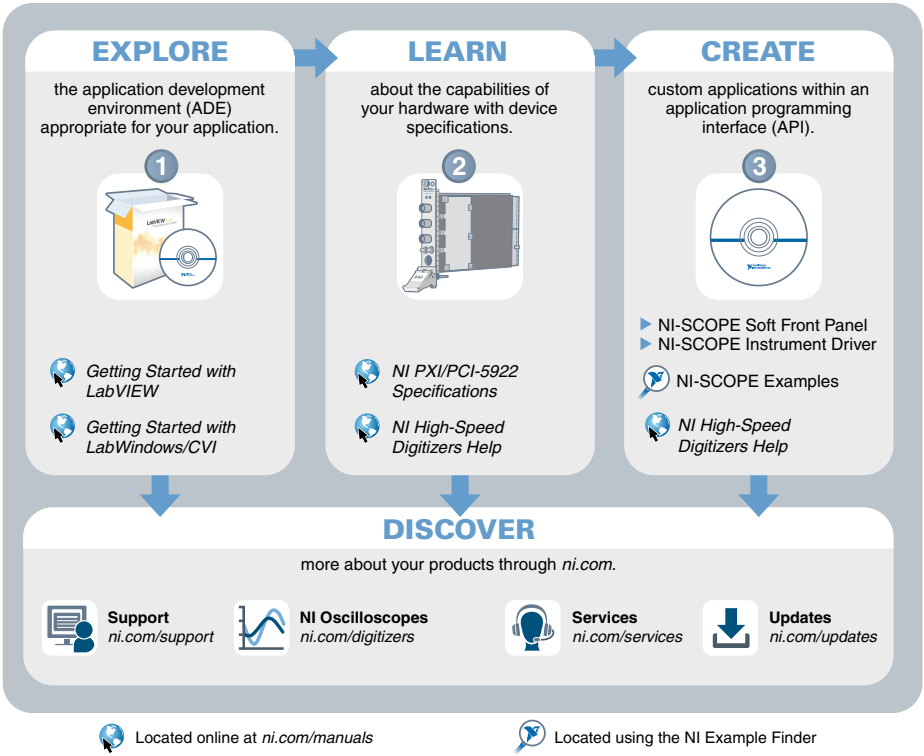

Related Information

The NI High-Speed Digitizers Help is an HTML version of a traditional user manual that includes detailed information about oscilloscope fundamentals, device features, and programming with NI-SCOPE.

Worldwide Support and Services

The National Instruments website is your complete resource for technical support. At *ni.com/support*, you have access to everything from troubleshooting and application development self-help resources to email and phone assistance from NI Application Engineers.

Visit *ni.com/services* for NI Factory Installation Services, repairs, extended warranty, and other services.

Visit *ni.com/register* to register your National Instruments product. Product registration facilitates technical support and ensures that you receive important information updates from NI.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A Declaration of Conformity (DoC) is our claim of compliance with the Council of the European Communities using the manufacturer's declaration of conformity. This system affords the user protection for electromagnetic compatibility (EMC) and product safety. You can obtain the DoC for your product by visiting *ni.com/certification*. If your product supports calibration, you can obtain the calibration certificate for your product at *ni.com/calibration*.

National Instruments corporate headquarters is located at 11500 North Mopac Expressway, Austin, Texas, 78759-3504. National Instruments also has offices located around the world. For telephone support in the United States, create your service request at *ni.com/support* or dial 1 866 ASK MYNI (275 6964). For telephone support outside the United States, visit the *Worldwide Offices* section of *ni.com/niglobal* to access the branch office websites, which provide up-to-date contact information, support phone numbers, email addresses, and current events.

Refer to the *NI Trademarks and Logo Guidelines* at `ni.com/trademarks` for information on National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products/technology, refer to the appropriate location: **Help**» **Patents** in your software, the `patents.txt` file on your media, or the *National Instruments Patent Notice* at `ni.com/patents`. You can find information about end-user license agreements (EULAs) and third-party legal notices in the readme file for your NI product. Refer to the *Export Compliance Information* at `ni.com/legal/export-compliance` for the National Instruments global trade compliance policy and how to obtain relevant HTS codes, ECCNs, and other import/export data. NI MAKES NO EXPRESS OR IMPLIED WARRANTIES AS TO THE ACCURACY OF THE INFORMATION CONTAINED HEREIN AND SHALL NOT BE LIABLE FOR ANY ERRORS. U.S. Government Customers: The data contained in this manual was developed at private expense and is subject to the applicable limited rights and restricted data rights as set forth in FAR 52.227-14, DFAR 252.227-7014, and DFAR 252.227-7015.

© 2015 National Instruments. All rights reserved.

374856A-01 Mar15

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP