ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *National Instruments PXIe-1095* at our website: *Click HERE*

PXI Express™

PXIe-1095 User Manual

March 2018
377169B-01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Worldwide Technical Support and Product Information
ni.com

Worldwide Offices
Visit ni.com/niglobal to access the branch office websites, which provide up-to-date contact information, support phone numbers, email addresses, and current events.

National Instruments Corporate Headquarters
11500 North Mopac Expressway Austin, Texas 78759-3504 USA Tel: 512 683 0100

For further support information, refer to the *NI Services* appendix. To comment on NI documentation, refer to the NI website at ni.com/info and enter the Info Code feedback.

© 2017–2018 National Instruments. All rights reserved.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Legal Information

Limited Warranty

This document is provided ‘as is’ and is subject to being changed, without notice, in future editions. For the latest version, refer to `ni.com/manuals`. NI reviews this document carefully for technical accuracy; however, NI MAKES NO EXPRESS OR IMPLIED WARRANTIES AS TO THE ACCURACY OF THE INFORMATION CONTAINED HEREIN AND SHALL NOT BE LIABLE FOR ANY ERRORS.

NI warrants that its hardware products will be free of defects in materials and workmanship that cause the product to fail to substantially conform to the applicable NI published specifications for one (1) year from the date of invoice.

For a period of ninety (90) days from the date of invoice, NI warrants that (i) its software products will perform substantially in accordance with the applicable documentation provided with the software and (ii) the software media will be free from defects in materials and workmanship.

If NI receives notice of a defect or non-conformance during the applicable warranty period, NI will, in its discretion: (i) repair or replace the affected product, or (ii) refund the fees paid for the affected product. Repaired or replaced Hardware will be warranted for the remainder of the original warranty period or ninety (90) days, whichever is longer. If NI elects to repair or replace the product, NI may use new or refurbished parts or products that are equivalent to new in performance and reliability and are at least functionally equivalent to the original part or product.

You must obtain an RMA number from NI before returning any product to NI. NI reserves the right to charge a fee for examining and testing Hardware not covered by the Limited Warranty.

This Limited Warranty does not apply if the defect of the product resulted from improper or inadequate maintenance, installation, repair, or calibration (performed by a party other than NI); unauthorized modification; improper environment; use of an improper hardware or software key; improper use or operation outside of the specification for the product; improper voltages; accident, abuse, or neglect; or a hazard such as lightning, flood, or other act of nature.

THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND THE CUSTOMER’S SOLE REMEDIES, AND SHALL APPLY EVEN IF SUCH REMEDIES FAIL OF THEIR ESSENTIAL PURPOSE.

EXCEPT AS EXPRESSLY SET FORTH HEREIN, PRODUCTS ARE PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND AND NI DISCLAIMS ALL WARRANTIES, EXPRESSED OR IMPLIED, WITH RESPECT TO THE PRODUCTS, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE OR NON-INFRINGEMENT, AND ANY WARRANTIES THAT MAY ARISE FROM USAGE OF TRADE OR COURSE OF DEALING. NI DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATIONS REGARDING THE USE OF OR THE RESULTS OF THE USE OF THE PRODUCTS IN TERMS OF CORRECTNESS, ACCURACY, RELIABILITY, OR OTHERWISE. NI DOES NOT WARRANT THAT THE OPERATION OF THE PRODUCTS WILL BE UNINTERRUPTED OR ERROR FREE.

In the event that you and NI have a separate signed written agreement with warranty terms covering the products, then the warranty terms in the separate agreement shall control.

Copyright

Under the copyright laws, this publication may not be reproduced or transmitted in any form, electronic or mechanical, including photocopying, recording, storing in an information retrieval system, or translating, in whole or in part, without the prior written consent of National Instruments Corporation.

National Instruments respects the intellectual property of others, and we ask our users to do the same. NI software is protected by copyright and other intellectual property laws. Where NI software may be used to reproduce software or other materials belonging to others, you may use NI software only to reproduce materials that you may reproduce in accordance with the terms of any applicable license or other legal restriction.

End-User License Agreements and Third-Party Legal Notices

You can find end-user license agreements (EULAs) and third-party legal notices in the following locations:

- Notices are located in the `<National Instruments>\_Legal Information` and `<National Instruments>` directories.
- EULAs are located in the `<National Instruments>\Shared\MDF\Legal\license` directory.
- Review `<National Instruments>\_Legal Information.txt` for information on including legal information in installers built with NI products.

U.S. Government Restricted Rights

If you are an agency, department, or other entity of the United States Government (“Government”), the use, duplication, reproduction, release, modification, disclosure or transfer of the technical data included in this manual is governed by the Restricted Rights provisions under Federal Acquisition Regulation 52.227-14 for civilian agencies and Defense Federal Acquisition Regulation Supplement Section 252.227-7014 and 252.227-7015 for military agencies.

Trademarks

Refer to the *NI Trademarks and Logo Guidelines* at `ni.com/trademarks` for more information on National Instruments trademarks.

ARM, Keil, and µVision are trademarks or registered of ARM Ltd or its subsidiaries.

LEGO, the LEGO logo, WEDO, and MINDSTORMS are trademarks of the LEGO Group.

TETRIX by Pitsco is a trademark of Pitsco, Inc.

FIELDBUS FOUNDATION™ and FOUNDATION™ are trademarks of the Fieldbus Foundation.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EtherCAT® is a registered trademark of and licensed by Beckhoff Automation GmbH.

CANopen® is a registered Community Trademark of CAN in Automation e.V.

DeviceNet™ and EtherNet/IP™ are trademarks of ODVA.

Go!, SensorDAQ, and Vernier are registered trademarks of Vernier Software & Technology. Vernier Software & Technology and vernier.com are trademarks or trade dress.

Xilinx is the registered trademark of Xilinx, Inc.

Taptite and Trilobular are registered trademarks of Research Engineering & Manufacturing Inc.

FireWire® is the registered trademark of Apple Inc.

Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

Handle Graphics®, MATLAB®, Real-Time Workshop®, Simulink®, Stateflow®, and xPC TargetBox® are registered trademarks, and TargetBox™ and Target Language Compiler™ are trademarks of The MathWorks, Inc.

Tektronix®, Tek, and Tektronix, Enabling Technology are registered trademarks of Tektronix, Inc.

The Bluetooth® word mark is a registered trademark owned by the Bluetooth SIG, Inc.

The ExpressCard™ word mark and logos are owned by PCMCIA and any use of such marks by National Instruments is under license.

The mark LabWindows is used under a license from Microsoft Corporation. Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Other product and company names mentioned herein are trademarks or trade names of their respective companies.

Members of the National Instruments Alliance Partner Program are business entities independent from National Instruments and have no agency, partnership, or joint-venture relationship with National Instruments.

Patents

For patents covering National Instruments products/technology, refer to the appropriate location: **Help»Patents** in your software, the patents.txt file on your media, or the *National Instruments Patent Notice* at ni.com/patents.

Export Compliance Information

Refer to the *Export Compliance Information* at ni.com/legal/export-compliance for the National Instruments global trade compliance policy and how to obtain relevant HTS codes, ECCNs, and other import/export data.

WARNING REGARDING USE OF NATIONAL INSTRUMENTS PRODUCTS

YOU ARE ULTIMATELY RESPONSIBLE FOR VERIFYING AND VALIDATING THE SUITABILITY AND RELIABILITY OF THE PRODUCTS WHENEVER THE PRODUCTS ARE INCORPORATED IN YOUR SYSTEM OR APPLICATION, INCLUDING THE APPROPRIATE DESIGN, PROCESS, AND SAFETY LEVEL OF SUCH SYSTEM OR APPLICATION.

PRODUCTS ARE NOT DESIGNED, MANUFACTURED, OR TESTED FOR USE IN LIFE OR SAFETY CRITICAL SYSTEMS, HAZARDOUS ENVIRONMENTS OR ANY OTHER ENVIRONMENTS REQUIRING FAIL-SAFE PERFORMANCE, INCLUDING IN THE OPERATION OF NUCLEAR FACILITIES; AIRCRAFT NAVIGATION; AIR TRAFFIC CONTROL SYSTEMS; LIFE SAVING OR LIFE SUSTAINING SYSTEMS OR SUCH OTHER MEDICAL DEVICES; OR ANY OTHER APPLICATION IN WHICH THE FAILURE OF THE PRODUCT OR SERVICE COULD LEAD TO DEATH, PERSONAL INJURY, SEVERE PROPERTY DAMAGE OR ENVIRONMENTAL HARM (COLLECTIVELY, "HIGH-RISK USES"). FURTHER, PRUDENT STEPS MUST BE TAKEN TO PROTECT AGAINST FAILURES, INCLUDING PROVIDING BACK-UP AND SHUT-DOWN MECHANISMS. NI EXPRESSLY DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS OF THE PRODUCTS OR SERVICES FOR HIGH-RISK USES.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Contents

About This Manual

Related Documentation vii

Chapter 1
Getting Started

Unpacking 1-1
What You Need to Get Started 1-1
Key Features 1-2
Chassis Description 1-3
Optional Equipment 1-5
- Timing and Synchronization 1-5
- EMC Filler Panels 1-5
- Slot Blockers 1-5
- Replacement Power Supply 1-5
- Replacement Fan Kit 1-5
- Rack Mount Kits 1-5

PXIe-1095 Backplane Overview 1-5
- Interoperability with CompactPCI 1-5
- System Controller Slot 1-6
- Hybrid Peripheral Slots 1-7
- PXI Express Peripheral Slots 1-7
- System Timing Slot 1-8
- PXI Local Bus 1-9
- PXI Trigger Bus 1-9
- System Reference Clock 1-10

Chapter 2
Installation and Configuration

Safety Information 2-1
Chassis Cooling Considerations 2-2
- Providing Adequate Clearance 2-2
- Chassis Ambient Temperature Definition 2-5
- Setting Fan Speed 2-5
- Power Supply Filler Panel 2-5
- Installing Filler Panels 2-5
- Installing Slot Blockers 2-5

Rack Mounting 2-6
Connecting the Safety Ground 2-7
Connecting to a Power Source 2-7
Installing a PXI Express System Controller 2-8
Installing Peripheral Modules 2-9
LED Indicators 2-10

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

DIP Switches....2-11
Inhibit Mode....2-12
Inhibit Mode Selection....2-12
Fan Mode....2-13
Cooling Profiles....2-13
Fan Mode Selection....2-13
PXI Express System Configuration with MAX....2-13
Trigger Configuration in MAX....2-15
PXI Trigger Bus Routing....2-16
Fan Configuration in MAX....2-16
Using System Configuration and Initialization Files....2-17

Chapter 3
Maintenance
Service Interval....3-1
Preparation....3-1
Cleaning....3-1
Interior Cleaning....3-1
Exterior Cleaning....3-2
Replacing the Power Supply....3-2
Removal....3-3
Installation....3-3
Connecting Safety Ground....3-4
Connecting to Power Source....3-4
Installing Replacement Fan Assemblies....3-5
Replacing the PXI Module Fan Assembly....3-5
Replacing the Side Fan Assembly....3-7

Appendix A
Pinouts

Appendix B
NI Services

Glossary

Index

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

About This Manual

The *PXIe-1095 Series User Manual* describes the features of the PXIe-1095 chassis and contains information about configuring the chassis, installing the modules, and operating the chassis.

Related Documentation

The following documents contain information that you might find helpful as you read this manual:

- IEEE 1101.1-1991, *IEEE Standard for Mechanical Core Specifications for Microcomputers Using IEC 603-2 Connectors*
- IEEE 1101.10, *IEEE Standard for Additional Mechanical Specifications for Microcomputers Using IEEE 1101.1 Equipment Practice*
- *PICMG EXP.0 R1.0 CompactPCI Express Specification*, PCI Industrial Computers Manufacturers Group
- *PCI Express Base Specification*, Revision 1.1, PCI Special Interest Group
- *PXI-5 PXI Express Hardware Specification*, Revision 2.0, PXI Systems Alliance

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1 Getting Started

This chapter describes the key features of the PXIe-1095 chassis and lists the kit contents and optional equipment you can order from National Instruments.

Unpacking

Carefully inspect the shipping container and the chassis for damage. Check for visible damage to the metal work. Check to make sure all handles, hardware, and switches are undamaged. Inspect the inner chassis for any possible damage, debris, or detached components. If damage appears to have been caused during shipment, file a claim with the carrier. Retain the packing material for possible inspection and/or reshipment.

What You Need to Get Started

The PXIe-1095 chassis kit contains the following items:

- ☐ PXIe-1095 chassis
- ☐ Filler panels
- ☐ *PXIe-1095 Safety, Environmental, and Regulatory Information*
- ☐ Software media with *PXI Platform Services 17.3* or newer
- ☐ Chassis number labels

Note You will also need an AC power cable, sold separately. Refer to Table 1-1 for more information about AC power cables.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 1-1. AC Power Cables

Power Cable	Plug Types
Standard 120 V (USA)	ANSI C73.11/NEMA 5-15-P
Switzerland 220 V	SEV 6534-2
Australia 240 V	AS C112
Universal Euro 230 V	CEE (7), II, IV, VII
United Kingdom 230 V	BS 1363
Japan 100 V	JIS 8303

If you are missing any of the items listed in Table 1-1, or if you have the incorrect AC power cable, contact National Instruments.

Key Features

The PXIe-1095 chassis combines a high-performance 18-slot PXI Express backplane with a high-output power supply and a structural design that has been optimized for maximum usability in a wide range of applications. The chassis' modular design ensures a high level of maintainability, resulting in a very low mean time to repair (MTTR). The PXIe-1095 chassis fully complies with the *PXI-5 PXI Express Hardware Specification*, offering advanced timing and synchronization features.

The key features of the PXIe-1095 chassis include the following:

High Performance for Instrumentation Requirements

- Up to 8 GB/s (single direction) per PXI Express slot dedicated bandwidth (x8 Gen-3 PCI Express).
- 58 W per slot cooling meets increased PXI Express cooling requirements
- Low-jitter internal 10 MHz reference clock for PXI/PXI Express slots with ± 25 ppm stability
- Low-jitter internal 100 MHz reference clock for PXI Express slots with ± 25 ppm stability
- Quiet operation for 0 to 30 °C at 37.7 dBA
- Variable speed fan controller optimizes cooling and acoustic emissions
- Complies with PXI and CompactPCI Specifications

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

High Reliability

- 0 to 55 °C extended temperature range
- Power supply, temperature, and fan monitoring
- Field replaceable fans
- Dual redundant, hot-swappable power supplies

Multi-Chassis Support

- PXI Express System Timing Slot for tight synchronization across multiple chassis
- Switchless CLK10 routing

Optional Features

- Timing and synchronization upgrade
- Front and rear rack-mount kits
- Replacement power supply
- EMC filler panels
- Slot blockers for improved cooling performance
- Factory installation services
- Replacement fan kit


Chassis Description

Figures 1-1 and 1-2 show the key features of the PXIe-1095 chassis front and back panels. Figure 1-1 shows the front view of the chassis. Figure 1-2 shows the rear view of the chassis.

Refer to Figure 2-2, *PXIe-1095 Chassis Vents*, for chassis vent locations.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 1-1. Front View of the PXIe-1095 Chassis

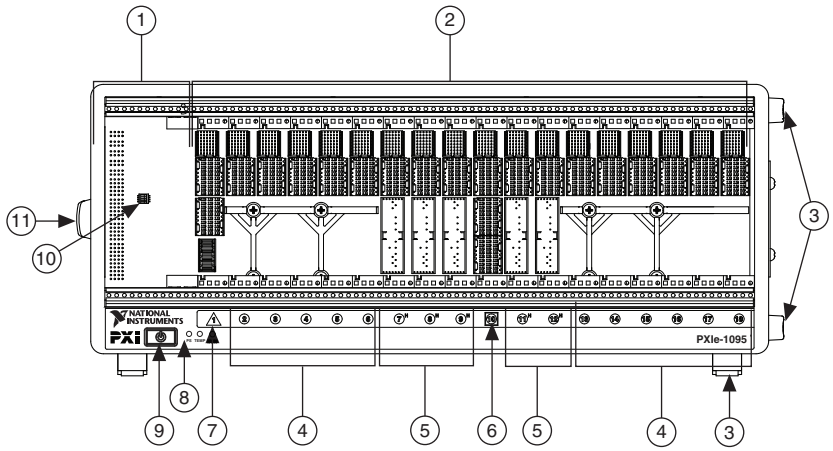

1	System Controller Expansion Slot	7	PXI Express System Controller Slot
2	Backplane Connectors	8	Front Panel LEDs
3	Removable Feet	9	Power Inhibit Switch
4	PXI Express Peripheral Slots (11x)	10	DIP Switch
5	PXI Express Hybrid Peripheral Slots (5x)	11	Chassis Carry Handle
6	PXI Express System Timing Slot		

Figure 1-2. Rear View of the PXIe-1095 Chassis

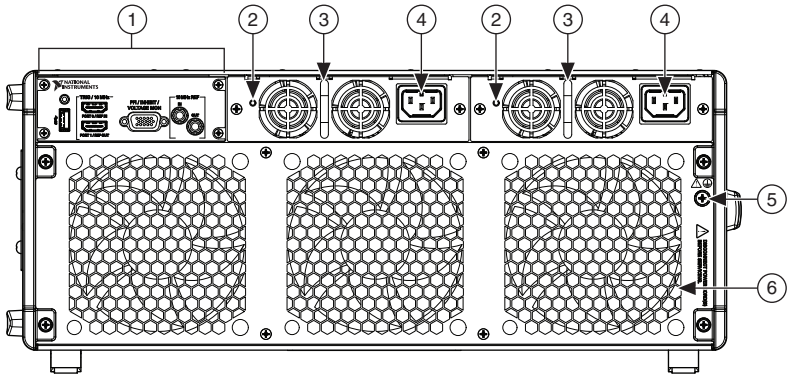

1	Timing and Synchronization Upgrade	4	Universal AC Input
2	Rear Panel Power Supply LED	5	Chassis Protective Earth Terminal
3	Power Supply	6	Fan Module

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Optional Equipment

Contact National Instruments to order the following options for the PXIe-1095 chassis.

Timing and Synchronization

An optional timing and synchronization accessory available from National Instruments provides trigger routing capability, higher accuracy CLK10/CLK100, connectors for 10 MHz reference clock input and output, and remote chassis monitoring and inhibit control.

EMC Filler Panels

EMC filler panel kits are available from National Instruments.

Slot Blockers

PXI Slot Blocker kits are available from National Instruments for improved thermal performance when all slots are not used.

Replacement Power Supply

Replacement power supply kits are available from National Instruments. You easily can install replacement power supplies without powering off the system.

Replacement Fan Kit

A fan kit is available from National Instruments, includes both side and PXI module fan assemblies.

Rack Mount Kits

Rack mounting kits are available from National Instruments that can accommodate a variety of rack depths.

PXIe-1095 Backplane Overview

This section provides an overview of the backplane features for the PXIe-1095 chassis.

Interoperability with CompactPCI

The design of the PXIe-1095 chassis provides you the flexibility to use the following devices in a single PXI Express chassis:

- PXI Express compatible products
- CompactPCI Express compatible 2-Link system controller products
- CompactPCI Express compatible Type-2 peripheral products
- PXI peripheral products modified to fit in a hybrid slot
- Standard CompactPCI peripheral products modified to fit in a hybrid slot

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

System Controller Slot

The system controller slot is Slot 1 of the chassis and is a 2-Link configuration system slot as defined by the CompactPCI Express and PXI Express specifications. It has three system controller expansion slots for system controller modules that are wider than one slot. These slots allow the system controller to expand to the left to prevent the system controller from using peripheral slots.

The backplane connects the system slot to two PCI Express switches using a Gen-3 x8 and a Gen-3 x16 PCI Express link. These switches distribute PCI Express connections to the peripheral slots and to a PCI Express-to-PCI bridge to provide a PCI bus to the hybrid peripheral slots. Refer to Figure 1-3 for an overview of the PXIe-1095 architecture.

System slot link 1 is a Gen-3 x8 PCI Express link to PCI Express switch 1, providing a nominal bandwidth of 8 GB/s (single direction) between the system controller and PCI Express switch 1. PXI Express peripheral slots 2-10 are connected to PCI Express switch 1 with Gen-3 x8 PCI Express links and are downstream of system slot link 1. The PCI Express-to-PCI bridge is connected to PCI Express switch 1 and provides a 32-bit, 33 MHz PCI bus for hybrid peripheral slots 7, 8, 9, 11, and 12. PCI Express switch 1 also is connected to PCI Express switch 2 with a Gen-3 x8 PCI Express link for advanced backplane configurations.

System slot link 2 is a Gen-3 x16 PCI Express link to PCI Express switch 2, providing a nominal bandwidth of 16 GB/s (single direction) between the system controller slot and PCI Express switch 2. PXI Express peripheral slots 11-18 are connected to PCI Express switch 2 with Gen-3 x8 PCI Express links and are downstream of system slot link 2.

The system controller slot also has connectivity to some PXI features such as: PXI_CLK10, PXI Star, PXI Trigger Bus and PXI Local Bus 6.

By default, the system controller will control the power supply with the PS_ON# signals. A logic low on this line will turn the power supply on.



Note The chassis Inhibit Mode must be set to **Default** mode for the system controller to control the power supply. Refer to the *Inhibit Mode* section of Chapter 2, *Installation and Configuration*, for details about configuring Inhibit Mode.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Hybrid Peripheral Slots

The chassis provides five (5) hybrid peripheral slots as defined by the *PXI-5 PXI Express Hardware Specification*: slots 7, 8, 9, 11, and 12. A hybrid peripheral slot can accept the following peripheral modules:

- A PXI Express peripheral with x8, x4, or x1 PCI Express link through a switch to the system slot. Each PXI Express peripheral slot can link up to a Gen-3 x8 PCI Express, providing a maximum nominal single-direction bandwidth of 8 GB/s.
- A CompactPCI Express Type-2 Peripheral with x8, x4, or x1 PCI Express link through a switch to the system slot.
- A hybrid-compatible PXI Peripheral module that has been modified by replacing the J2 connector with an XJ4 connector installed in the upper eight rows of J2. Refer to the *PXI Express Specification* for details. The PXI Peripheral communicates through the backplane's 32-bit PCI bus.
- A CompactPCI 32-bit peripheral on the backplane's 32-bit PCI bus.


The hybrid peripheral slots provide full PXI Express functionality and 32-bit PXI functionality except for PXI Local Bus. The hybrid peripheral slot only connects to PXI Local Bus 6 left and right.

PXI Express Peripheral Slots

There are eleven (11) PXI Express peripheral slots: slots 2 to 6 and 13 to 18. PXI Express peripheral slots can accept the following peripheral modules:

- A PXI Express peripheral with x8, x4, or x1 PCI Express link to the system slot through a PCIe switch. Each PXI Express peripheral slot can link up to a Gen-3 x8 PCI Express, providing a maximum nominal single-direction bandwidth of 8 GB/s.
- A CompactPCI Express Type-2 Peripheral with x8, x4, or x1 PCI Express link to the system slot through a PCIe switch.

Figure 1-3. PXIe-1095 PCI Express Backplane Diagram

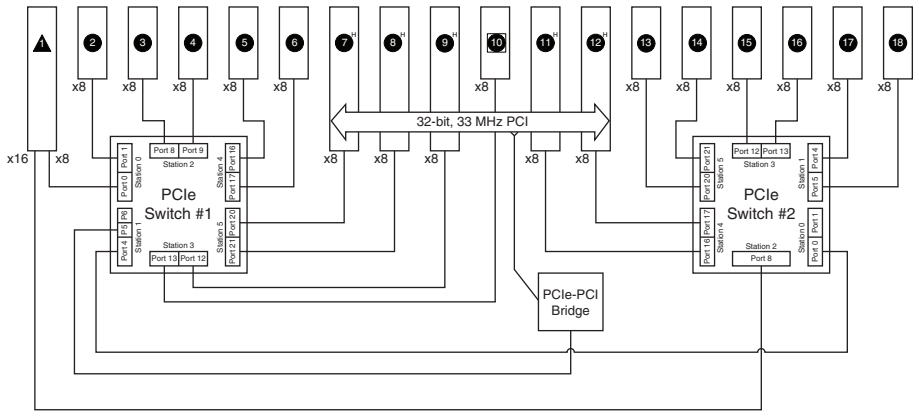

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

System Timing Slot

The System Timing Slot is slot 10. The system timing slot will accept the following peripheral modules:


- A PXI Express System Timing Module with x8, x4, or x1 PCI Express link to the system slot through a PCI Express switch. Each PXI Express peripheral or hybrid peripheral slot can link up to a Gen-3 x8 PCI Express, providing a maximum nominal single-direction bandwidth of 8 GB/s.
- A PXI Express Peripheral with x8, x4, or x1 PCI Express link to the system slot through a PCI Express switch.
- A CompactPCI Express Type-2 Peripheral with x8, x4, or x1 PCI Express link to the system slot through a PCI Express switch.

The system timing slot has 3 dedicated differential pairs (PXIe_DSTAR) connected from the TP1 and TP2 connectors to the XP3 connector for each PXI Express peripheral or hybrid peripheral slot, as well as routed back to the XP3 connector of the system timing slot as shown in Figure 1-4. The PXIe_DSTAR pairs can be used for high-speed triggering, synchronization and clocking. Refer to the *PXI Express Specification* for details.

The system timing slot also has a single-ended (PXI Star) trigger connected to every slot. Refer to Figure 1-4 for details.

The system timing slot has a pin (PXI_CLK10_IN) through which a system timing module may source a 10 MHz clock to which the backplane will phase-lock. Refer to the *System Reference Clock* section for details.

Figure 1-4. PXI Express Star Connectivity Diagram

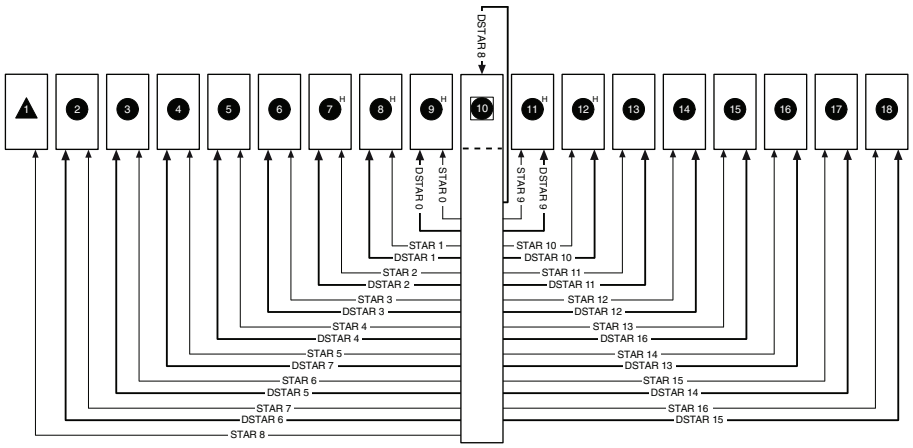

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PXI Local Bus

The PXI backplane local bus is a daisy-chained bus that connects each peripheral slot with adjacent peripheral slots to the left and right.

The backplane routes PXI Local Bus 6 between all slots. The left local bus 6 from slot 1 is not routed anywhere and the right local bus 6 from slot 18 is not routed anywhere.

Local bus signals may range from high-speed TTL signals to analog signals as high as 42 V.

Initialization software uses the configuration information specific to each adjacent peripheral module to evaluate local bus compatibility.


PXI Trigger Bus

All slots on the same PXI bus segment share eight PXI trigger lines. You can use these trigger lines in a variety of ways. For example, you can use triggers to synchronize the operation of several different PXI peripheral modules. In other applications, one module located in the system timing slot can control carefully timed sequences of operations performed on other modules in the system. Modules can pass triggers to one another, allowing precisely timed responses to asynchronous external events the system is monitoring or controlling.

The PXI trigger lines from adjacent PXI trigger bus segments can be routed in either direction across the PXI trigger bridges through buffers. This allows you to send trigger signals to, and receive trigger signals from, every slot in the chassis. Static trigger routing (user-specified line and directional assignments) can be configured through Measurement & Automation Explorer (MAX). Dynamic routing of triggers (automatic line assignments) is supported through certain National Instruments drivers like NI-DAQmx.

Note Although any trigger line may be routed in either direction, it cannot be routed in more than one direction at a time.

Figure 1-5. PXI Trigger Bus Connectivity Diagram

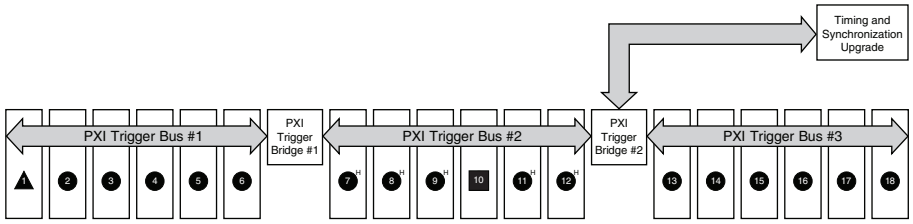

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

System Reference Clock

The PXIe-1095 chassis supplies PXI_CLK10, PXIe_CLK100, and PXIe_SYNC100 independently driven to each peripheral slot.


An independent buffer (having a source impedance matched to the backplane and a skew of less than 250 ps between slots) drives PXI_CLK10 to each slot. You can use this common reference clock signal to synchronize multiple modules in a measurement or control system.

An independent buffer drives PXIe_CLK100 to each peripheral slot. These clocks are matched in skew to less than 100 ps. The differential pair must be terminated on the peripheral with LVPECL termination for the buffer to drive PXIe_CLK100 so that when there is no peripheral or a peripheral that does not connect to PXIe_CLK100, there is no clock being driven on the pair to that slot.

An independent buffer drives PXIe_SYNC100 to each peripheral slot. The differential pair must be terminated on the peripheral with LVPECL termination for the buffer to drive PXIe_SYNC100 so that when there is no peripheral or a peripheral that does not connect to PXIe_SYNC100, there is no SYNC100 signal being driven on the pair to that slot.

PXI_CLK10, PXIe_CLK100 and PXIe_SYNC100 have the default timing relationship described in Figure 1-6.

Figure 1-6. System Reference Clock Default Behavior

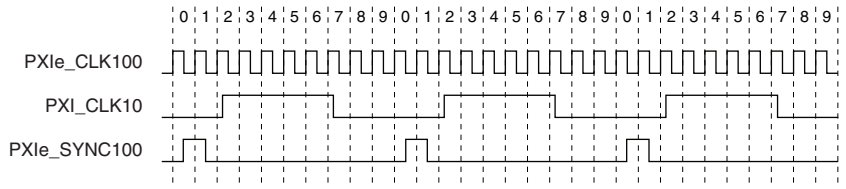

To synchronize the system to an external clock, you can drive PXI_CLK10 from an external source through the PXI_CLK10_IN pin on the System Timing Slot, or from an external SMA connector on the rear of the chassis (Timing and Synchronization upgrade). Refer to Table A-8, *XP4 Connector Pinout for the System Timing Slot*, for the pinout. When an external clock is detected, the backplane automatically phase-locks the PXI_CLK10, PXIe_CLK100, and PXIe_SYNC100 signals to this external clock and distributes these signals to the slots. Refer to the *PXIe-1095 Specifications* for the specification information for an external clock provided on the PXI_CLK10_IN pin of the system timing slot or rear panel SMA.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2 Installation and Configuration

This chapter describes how to prepare and operate the PXIe-1095 chassis.

Before connecting the chassis to a power source, read this chapter and the *Read Me First: Safety and Electromagnetic Compatibility* document included with your kit.

Safety Information

Caution Before undertaking any troubleshooting, maintenance, or exploratory procedure, carefully read the following caution notices.

Protection equipment may be impaired if equipment is not used in the manner specified.

This equipment contains voltage hazardous to human life and safety, and is capable of inflicting personal injury.

Caution High leakage current present when operating dual power supplies at 400 to 440 Hz. Connect the chassis to earth ground before connecting to AC power.

- The facility installation shall provide a means for connection to protective earth; *and*
- Qualified personnel shall install a protective earthing conductor from the chassis protective earth terminal (# 8 -32 SEMS screw) on the rear to the protective earth wire in the facility.

Protective earth terminal wiring

Grounding wire	2.1 mm^2 (14 AWG)
Ring lug	# 8
Protective earth terminal torque	1.13 N · m (10 lb · in.)

- **Chassis Grounding**—The chassis requires a connection from the premise wire safety ground to the chassis ground. The earth safety ground must be connected during use of this equipment to minimize shock hazards. Refer to the *Connecting the Safety Ground* section for instructions on connecting safety ground.
- **Live Circuits**—Operating personnel and service personnel *must* not remove protective covers when operating or servicing the chassis. Adjustments and service to internal components must be undertaken by qualified service technicians. During service of this

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

product, the mains connector to the premise wiring must be disconnected. Dangerous voltages may be present under certain conditions; use extreme caution.

- **Explosive Atmosphere**—Do *not* operate the chassis in conditions where flammable gases are present. Under such conditions, this equipment is unsafe and may ignite the gases or gas fumes.
- **Part Replacement**—Only service this equipment with parts that are exact replacements, both electrically and mechanically. Contact National Instruments for replacement part information. Installation of parts with those that are not direct replacements may cause harm to personnel operating the chassis. Furthermore, damage or fire may occur if replacement parts are unsuitable.
- **Modification**—Do *not* modify any part of the chassis from its original condition. Unsuitable modifications may result in safety hazards.

Chassis Cooling Considerations

The PXIe-1095 Series chassis is designed to operate on a bench or in an instrument rack. You must adhere to the cooling clearances as outlined in the following section.

Providing Adequate Clearance

The module and power supply exhaust vents for the PXIe-1095 are on the top of the chassis. The module intake vents are on the rear of the chassis. There are also intake and exhaust vents located along the sides of the chassis. The vent locations are shown in Figure 2-2, *PXIe-1095 Chassis Vents*.

Adequate clearance between the chassis and surrounding equipment, heat generating devices, and air flow blockages must be maintained to ensure proper cooling. Minimum cooling clearances are shown in Figure 2-1, *PXIe-1095 Chassis Minimum Cooling Clearances*. For rack mount applications adequate forced air ventilation is required. For benchtop applications additional cooling clearances may be required for optimal air flow and reduced hot air recirculation to the air inlet fans.


Caution Failure to provide these clearances may result in undesired thermal-related issues with the chassis or modules.

To aid in thermal health monitoring for either rack or benchtop use you can monitor the chassis intake temperatures in Measurement & Automation Explorer (MAX) to ensure the temperatures do not exceed the ratings in the *Operating Environment* section of the *PXIe-1095 Specifications*.

Additionally, many PXI modules provide temperature values you can monitor to ensure critical temperatures are not exceeded. Increasing chassis clearances, ventilation, reducing external ambient temperatures, and removing nearby heat sources are all options for improving overall chassis thermal performance.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 2-1. PXIe-1095 Chassis Minimum Cooling Clearances

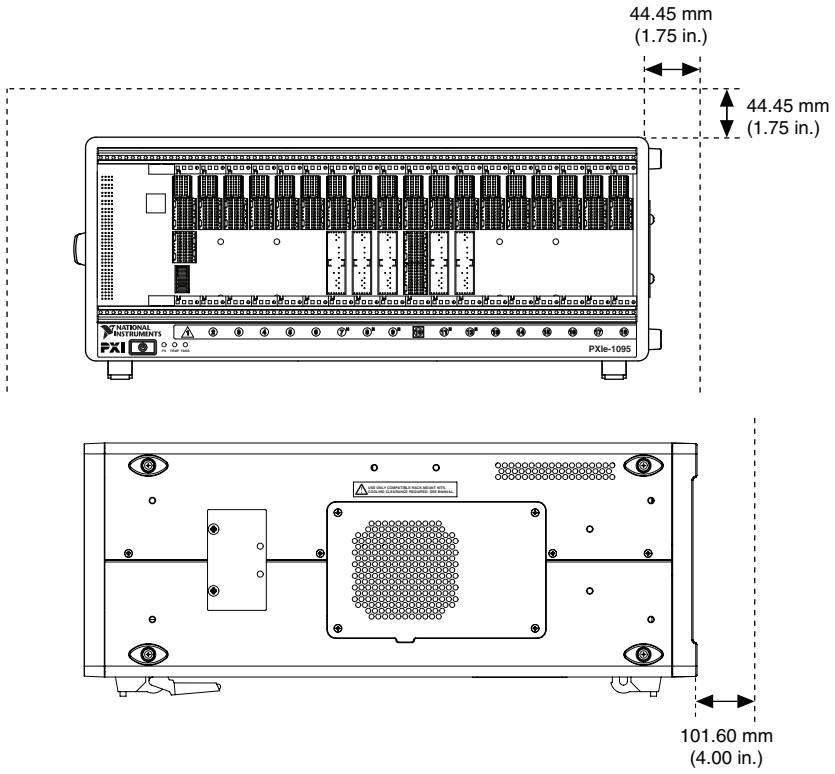

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 2-2. PXIe-1095 Chassis Vents

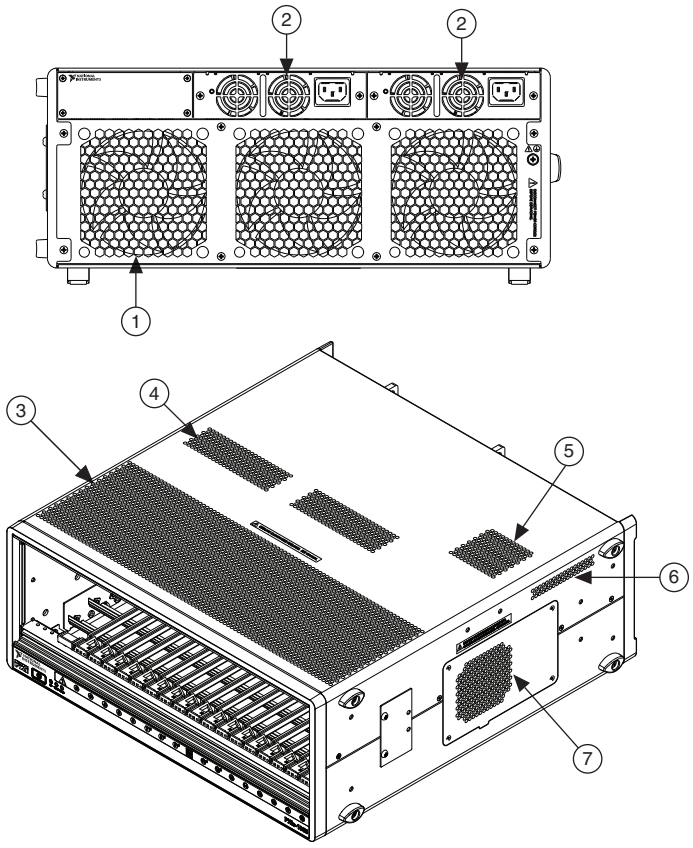

1	PXI Module Air Intake (3x)	5	Timing and Synchronization Upgrade Air Exhaust Vent
2	Power Supply Intake (2x)	6	Timing and Synchronization Upgrade Air Intake
3	PXI Module Air Exhaust Vent	7	Side Air Intake Vent (Right)/Side Air Exhaust Vent (Left)
4	Power Supply Air Exhaust Vent (2x)		

Note The side exhaust vent (not shown) is located on the left side of the chassis.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chassis Ambient Temperature Definition

The chassis fan control system uses ambient intake air temperatures for controlling fan speeds when in **Auto** mode. These temperatures may be higher than ambient room temperature depending on surrounding equipment and/or blockages. Ensure ambient intake temperatures do not exceed the ratings in the *Operating Environment* section of the *PXIe-1095 Specifications*. The module and side ambient intake temperatures can be monitored in National Instruments Measurement and Automation Explorer (MAX).

Setting Fan Speed

The PXIe-1095 chassis supports multiple fan operating modes. Refer to the *Fan Mode* section for more information.

Power Supply Filler Panel

To maintain proper chassis cooling performance a power supply filler panel must be used when operating with a single power supply. Refer to *Replacing the Power Supply* in Chapter 3, *Maintenance* for more information.

Installing Filler Panels

To maintain proper module cooling performance, install filler panels (provided with the chassis) in unused or empty slots. Secure with the captive mounting screws provided.

Installing Slot Blockers

The cooling performance of the chassis can be improved by installing optional slot blockers. Refer to the National Instruments website at `ni.com/info` and enter the Info Code `slotblocker` for more information about slot blockers.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Rack Mounting

Rack mount applications require optional rack mount kits available from National Instruments. Refer to the instructions supplied with the rack mount kits to install your PXIe-1095 chassis in an instrument rack.

Note You may want to remove the feet or carrying handle from the PXIe-1095 chassis when rack mounting.

Figure 2-3. PXIe-1095 Rack Mount Kit Components

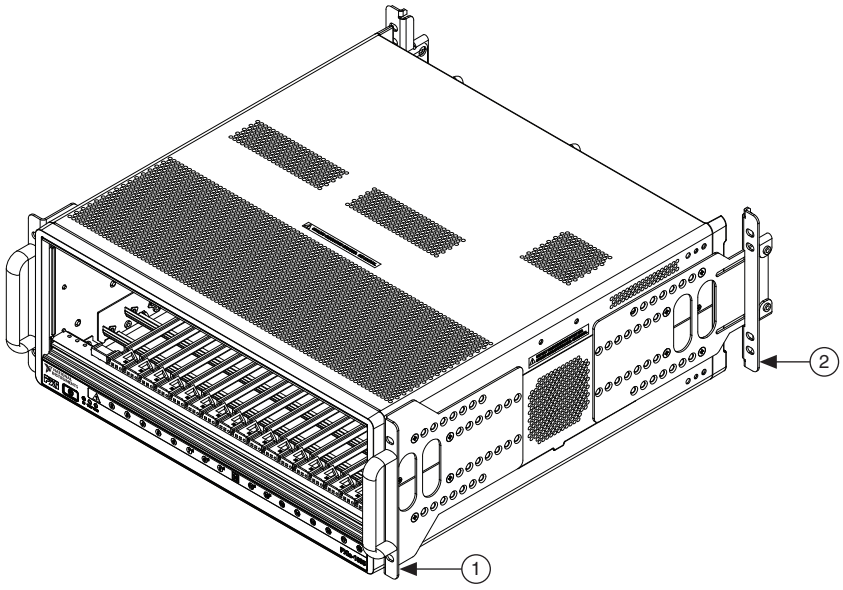

1	Front Rack Mount	2	Rear Rack Mount

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Connecting the Safety Ground

Caution The PXIe-1095 chassis are designed with a three-position IEC 60320 C14 inlet for the U.S. that connects the ground line to the chassis ground. For proper grounding, a suitable cordset must be used to connect this inlet to an appropriate earth safety ground.

If your power outlet does not have an appropriate ground connection, you must connect the premise safety ground to the chassis grounding screw located on the rear panel. Refer to Figure 1-2, *Rear View of the PXIe-1095 Chassis*, to locate the chassis grounding screw.
To connect the safety ground, complete the following steps:

1. Connect a 14 AWG (2.1 mm^2) wire to the chassis grounding screw (# 8-32 SEMS) using a grounding lug. The wire must have green insulation with a yellow stripe or must be noninsulated (bare).
2. Attach the opposite end of the wire to permanent earth ground using toothed washers or a toothed lug.

Connecting to a Power Source

Cautions Do *not* install modules prior to performing the following power-on test.

To completely remove power, you *must* disconnect all power cords.

Attach input power through the rear AC inlet using the appropriate AC power cable supplied. Refer to Figure 1-2, *Rear View of the PXIe-1095 Chassis*, to locate the AC inlet.

The Power Inhibit switch allows you to power on the chassis or place it in standby mode. With an empty chassis in Default Mode, press down the Power Inhibit button and hold it down for four seconds. Observe that all fans become operational and all three front panel LEDs are a steady green. Pressing and holding the Power Inhibit button again for four seconds will return the chassis to standby.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Installing a PXI Express System Controller

This section contains general installation instructions for installing a PXI Express system controller in a PXIe-1095 chassis. Refer to your PXI Express system controller user manual for specific instructions and warnings. To install a system controller, complete the following steps:

1. Connect the AC power source to the PXI Express chassis before installing the system controller. The AC power cord grounds the chassis and protects it from electrical damage while you install the system controller.
2. Install the system controller into the system controller slot (slot 1, indicated by the red card guides) by first placing the system controller PCB into the front of the card guides (top and bottom). Slide the system controller to the rear of the chassis, making sure that the injector/ejector handle is pushed down as shown in Figure 2-4.

Figure 2-4. Installing a PXI Express System Controller

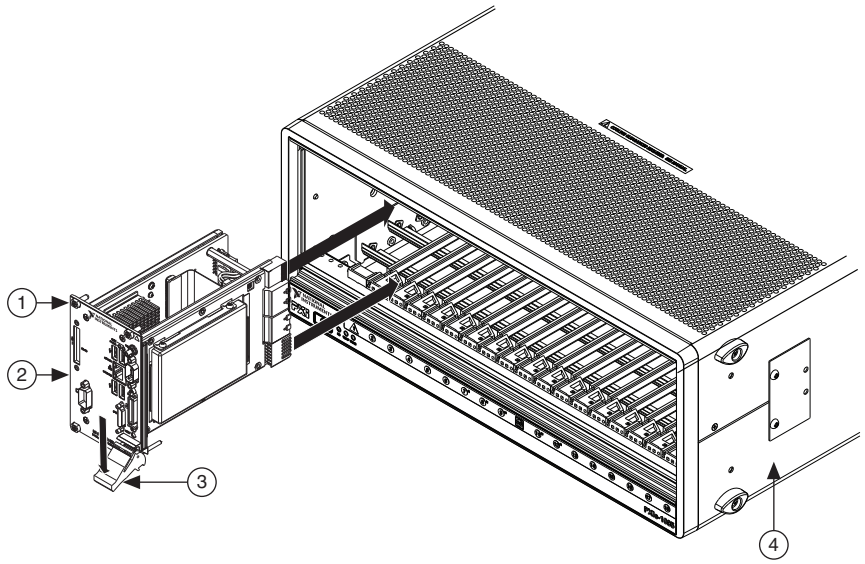

1	System Controller Front Panel Mounting Screws (4x)	3	Injector/Ejector Handle
2	PXI Express System Controller	4	PXIe Chassis

3. When you begin to feel resistance, pull up on the injector/ejector handle to seat the system controller fully into the chassis frame. Secure the system controller front panel to the chassis using the system controller front-panel mounting screws.
4. Connect the keyboard, mouse, and monitor to the appropriate connectors. Connect devices to ports as required by your system configuration.
5. Power on the chassis. Verify that the system controller boots. If the system controller does not boot, refer to your system controller user manual.

You can place CompactPCI, CompactPCI Express, PXI, or PXI Express modules in other slots depending on the slot type.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Installing Peripheral Modules

Caution The PXIe-1095 chassis has been designed to accept a variety of peripheral module types in different slots. To prevent damage to the chassis, ensure that the peripheral module is being installed into a slot designed to accept it. Refer to Chapter 1, *Getting Started*, for a description of the various slot types.

This section contains general installation instructions for installing a peripheral module in a PXIe-1095 chassis. Refer to your peripheral module user manual for specific instructions and warnings. To install a module, complete the following steps:

1. Connect the AC power source to the PXI Express chassis before installing the module. The AC power cord grounds the chassis and protects it from electrical damage while you install the module.
2. Ensure that the chassis is powered off.
3. Install a module into a chassis slot by first placing the module card PCB into the front of the card guides (top and bottom), as shown in Figure 2-5. Slide the module to the rear of the chassis, making sure that the injector/ejector handle is pushed down as shown in Figure 2-5.
4. When you begin to feel resistance, push up on the injector/ejector handle to fully seat the module into the chassis frame. Secure the module front panel to the chassis using the module front-panel mounting screws.

Figure 2-5. Installing PXI, PXI Express, or CompactPCI Peripheral Modules

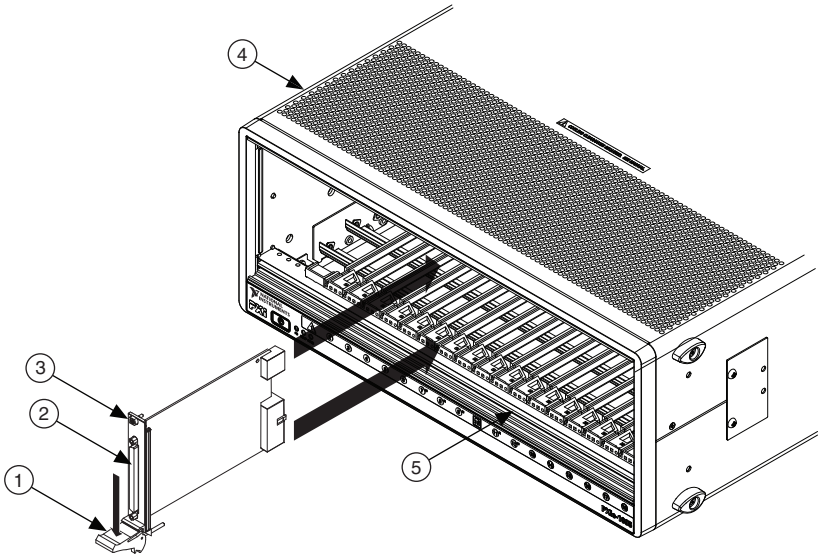


1	Injector/Ejector Handle	4	PXIe Chassis
2	PXI Peripheral Module	5	Injector/Ejector Rail
3	Peripheral Module Front Panel Mounting Screws (2x)		

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Indicators

Figure 2-6 shows the front panel LEDs. Table 2-1 describes the front panel LED states. Refer to Figure 1-1, *Front View of the PXIe-1095 Chassis* for LED locations.

Figure 2-6. Front Panel LEDs

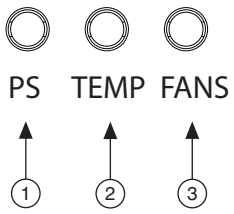

1 Power Supply LED 2 Temperature LED 3 Fan LED

Table 2-1. Front Panel LED States

LED	State	Description
Power Supply LED	Off	Chassis is powered off.
	Steady green	Chassis power supply or supplies are active, and operating normally.
	Blinking red	In a redundant power setup, one power supply has failed.
	Steady red	The chassis power supply or supplies have failed.
Temperature LED	Off	Chassis is powered off.
	Steady green	Intake or exhaust temperature is within chassis operating range.
	Steady red	Intake or exhaust temperature is outside of chassis operating range.
Fan LED	Off	Chassis is powered off.
	Steady green	All chassis fans are enabled and operating normally.
	Steady red	One or more chassis fans have failed.
All LEDs	Blinking red	An internal chassis fault has occurred.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Each power supply has a single LED that indicates the health of that supply. Table 2-2 describes the rear panel LED states. Refer to Figure 1-2, *Rear View of the PXIe-1095 Chassis* for LED location.

Table 2-2. Rear Power Supply LED States

State	Description
Off	Power supply is unplugged or in standby.
Steady green	Main power is active and supply is operating normally.
Blinking red	Power supply is operating outside of specification.
Steady red	Power supply has failed.


DIP Switches

The backplane has a DIP switch that may be used to control chassis behavior. Refer to Figure 1-1, *Front View of the PXIe-1095 Chassis* for the backplane DIP switch location.

DIP switch #1 (first from the bottom) controls the chassis fan mode. When this switch is in the off (right) position, **Auto** mode is selected. When this switch is in the on (left) position, **High** mode is selected.

DIP switch #2 (second from the bottom) controls the chassis Inhibit Mode. When this switch is in the off (right) position, **Default** mode is selected. When this switch is in the on (left) position, **Manual** mode is selected.

Figure 2-7. Backplane DIP Switches

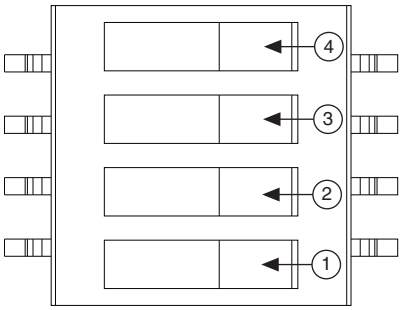

1 Switch #1 (Fan) 2 Switch #2 (PWR) 3 Switch #3 (NC) Switch #4 (NC)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 2-3. DIP Switch States

Location	Switch	State	Description
1	FAN	Off (Right)	Set chassis fan mode to Auto. Refer to the *Fan Mode* section for information.
		On (Left)	Set chassis fan mode to High.
2	PWR	Off (Right)	Set chassis inhibit mode to **Default**. Refer to the *Inhibit Mode* section for information.
		On (Left)	Set chassis inhibit mode to **Manual**.
3	NC	—	—
4	NC	—	—

Inhibit Mode

The PXIe-1095 chassis supports operation in two inhibit modes. **Default** mode is used when normal power inhibit button functionality is desired. In **Default** mode, when a system controller is installed in Slot 1 of the chassis, the user can press the power inhibit button to power on the chassis.

Note In **Default** mode, you can also power on the chassis without a system controller installed in slot 1. To power on the chassis from standby, press and hold the power inhibit button for 4 seconds. To power off the chassis, again press and hold the power inhibit button for 4 seconds.

Manual mode is used when you would like to manually control the inhibit state of the chassis. In **Manual** mode, driving the Remote Inhibit signal high or floating it will cause the chassis to be powered on. Driving the Remote Inhibit signal low or shorting it to ground will cause main power to be inhibited.

Note The Timing and Synchronization upgrade is required for access to the Remote Inhibit signal. Without this upgrade, a chassis in **Manual** mode will always be powered on when AC power is connected.

Inhibit Mode Selection

The chassis Inhibit Mode on the PXIe-1095 chassis is selected using a DIP switch on the backplane. Refer to the *DIP Switches* section for more information about the DIP switch. Refer to Figure 1-1, *Front View of the PXIe-1095 Chassis* for the location of this switch.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Fan Mode

The PXIe-1095 chassis operates in two main fan modes.

In **Auto** mode, the speed of the chassis fans is determined by chassis intake air temperature. Select **Auto** mode for improved acoustic performance.

In **High** mode, the speed of the chassis fans is fixed at high speed regardless of chassis intake air temperature. Select **High** mode for maximum cooling performance.

Cooling Profiles

Both fan modes are available within the 38 W and 58 W cooling profiles.

- **38 W cooling profile**—Supports NI modules up to 38 W max power dissipation
- **58 W cooling profile**—Supports NI modules up to 58 W max power dissipation

Fan Mode Selection

The chassis fan mode can be selected using Measurement & Automation Explorer (MAX). Refer to the *Fan Configuration in MAX* section for more information.

Alternatively, the fan mode on the PXIe-1095 chassis is selected using a DIP switch on the backplane. Refer to the *DIP Switches* section for more information about the DIP switch. Refer to Figure 1-1, *Front View of the PXIe-1095 Chassis* for the location of this switch.

Note The DIP switch must be in the Auto position for software configuration in MAX to work. If the DIP switch is in the High position, the chassis Fan Mode will be High regardless of the software setting.

PXI Express System Configuration with MAX

The PXI Platform Services software included with your chassis automatically identifies your PXI Express system components to generate a `pxiesys.ini` file. You can configure your entire PXI system and identify PXI-1 chassis through Measurement & Automation Explorer (MAX), included with your system controller. PXI Platform Services creates the `pxiesys.ini` and `pxisys.ini` file, which define your PXI system parameters.

Note The configuration steps for single or multiple-chassis systems are the same.


MAX provides the following chassis information:

- Asset information, such as serial number or part number
- Chassis number
- Voltages, temperatures, and fan speeds
- Fan and cooling settings

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- Number and type of power supplies
- Slot details
- Chassis self-test
- Firmware Update

Figure 2-8. Chassis Settings in MAX

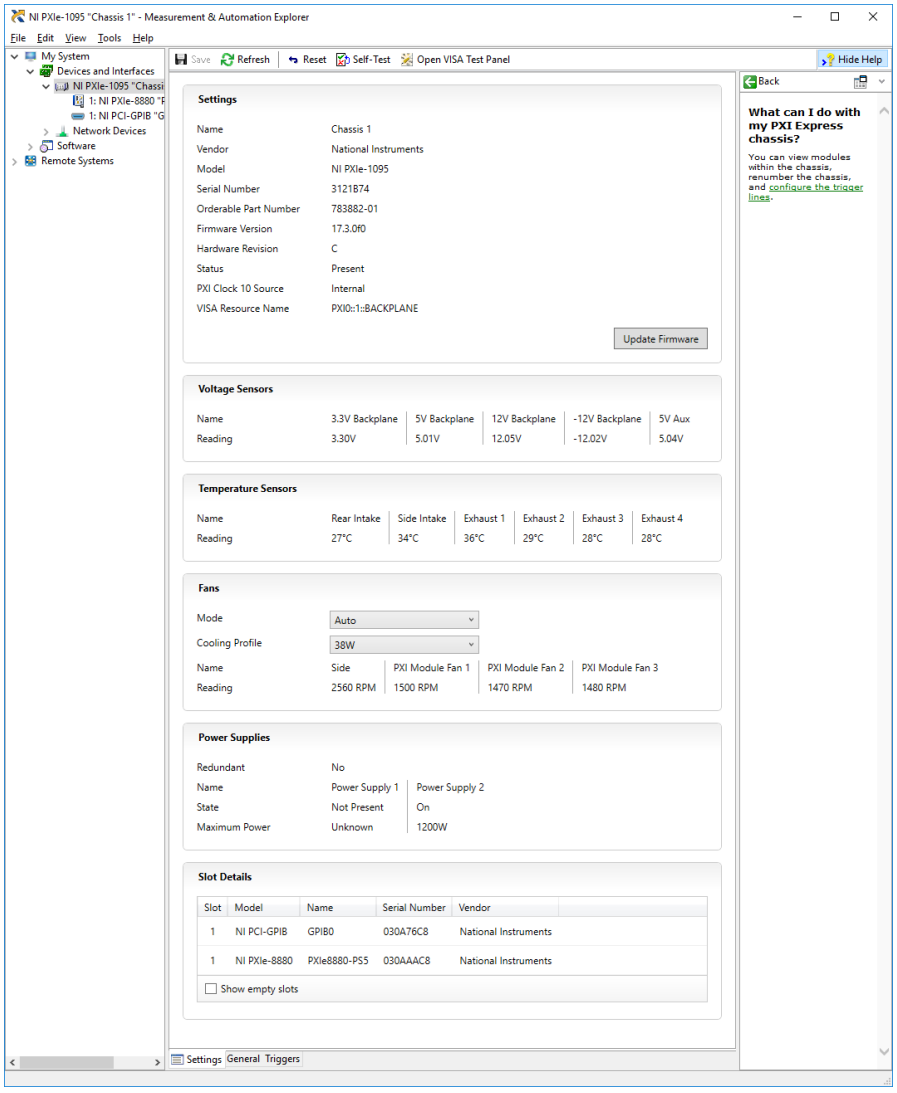

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Trigger Configuration in MAX


PXI Platform Services provides an interface to route and reserve triggers so dynamic routing, through drivers such as DAQmx, avoids double-driving and potentially damaging trigger lines. For more information about routing and reserving PXI triggers, refer to KnowledgeBase 3TJDOND8 at `ni.com/support`.

Each chassis has one or more trigger buses, each with eight lines numbered 0 through 7 that can be reserved and routed statically or dynamically. Static reservation *pre-allocates* a trigger line to prevent its configuration by a user program. Dynamic reservation/routing/deallocation is *on the fly* within a user program based upon National Instruments APIs such as NI-DAQmx. NI recommends dynamic reservations and routing are used whenever possible. If static reservations are required, static reservation of trigger lines can be implemented by the user in MAX through the **Triggers** tab. Reserved trigger lines will not be used by PXI modules dynamically configured by programs such as NI-DAQmx. This prevents the instruments from double-driving the trigger lines, possibly damaging devices in the chassis. In the default configuration, trigger lines on each bus are independent. For example, if trigger line 3 is asserted on trigger bus 0, by default it will not be automatically asserted on any other trigger bus.

Complete the following steps to reserve these trigger lines in MAX.

1. In the Configuration tree, click on the PXI chassis branch you want to configure.
2. Then, in the right-hand pane, toward the bottom, click on the **Triggers** tab.
3. Select which trigger lines you would like to statically reserve.
4. Click the **Save** button.

Figure 2-9. Trigger Configuration in MAX

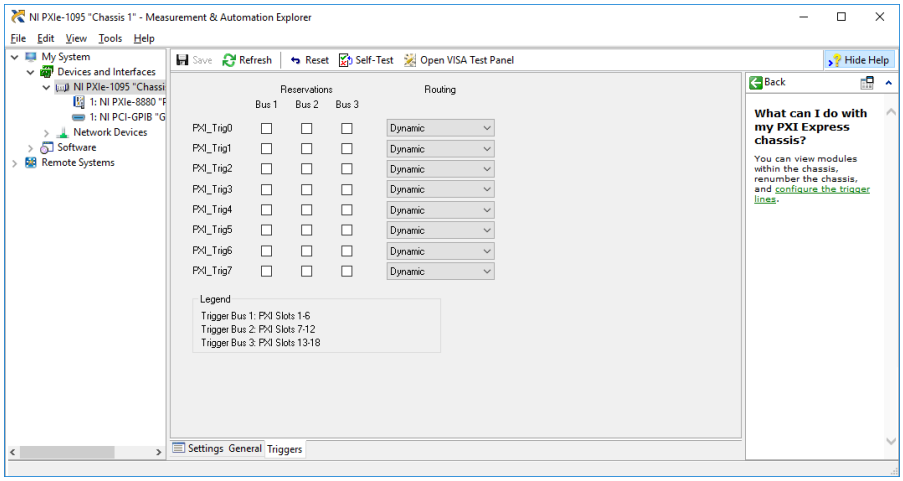

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PXI Trigger Bus Routing

Some National Instruments chassis, including the PXIe-1095, have the capability to route triggers from one bus to others within the same chassis using the **Trigger Routing** tab in MAX, as shown in Figure 2-9.

Note Selecting any non-disabled routing automatically reserves the line in all trigger buses being routed to. If you are using NI-DAQmx, it will reserve and route trigger lines for you, so you won't have to route trigger lines manually.

Complete the following steps to configure trigger routings in MAX.

1. In the **Configuration** tree, select the chassis in which you want to route trigger lines.
2. In the right-hand pane, select the **Trigger Routing** tab near the bottom.
3. For each trigger line, select **Away from Bus 1**, **Away from Bus 2,** or **Away from Bus 3** to route triggers on that line in the described direction, or select **Dynamic** for the default behavior with no manual routing.
4. Click the **Save** button.

Fan Configuration in MAX

You can configure fan behavior using software settings in MAX.

The PXIe-1095 supports both Auto and High fan modes for both the 38 W and 58 W cooling profiles. Refer to the *Fan Mode* section for more information on these modes.

The user may also select a **Manual** fan mode. In this mode, the user may manually set the fan speeds to achieve the desired performance.

Note You may not set the fan speeds or power settings lower than the minimum level required to maintain required cooling levels.

Complete the following steps to change the fan settings in MAX.

1. In the Configuration tree, click on the PXI chassis you want to configure.
2. In the right-hand pane, click on the **Settings** tab.
3. In the **Fans** group, select the desired Mode and Cooling Profile using the drop-down menus.
4. Click the **Save** button. Shortly after clicking the **Save** button, you should see the fan speeds change.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Using System Configuration and Initialization Files

The PXI Express specification allows many combinations of PXI Express chassis and system modules. To assist system integrators, the manufacturers of PXI Express chassis and system modules must document the capabilities of their products. The minimum documentation requirements are contained in `.ini` files, which consist of ASCII text. System integrators, configuration utilities, and device drivers can use these `.ini` files.

The capability documentation for the PXIe-1095 chassis is contained in the `chassis.ini` file on the software media that comes with the chassis. The information in this file is combined with information about the system controller to create a single system initialization file called `pxisys.ini` (PXI System Initialization). The system controller manufacturer either provides a `pxisys.ini` file for the particular chassis model that contains the system controller or provides a utility that can read an arbitrary `chassis.ini` file and generate the corresponding `pxisys.ini` file. System controllers from NI provide the `pxisys.ini` file for the PXIe-1095 chassis, so you should not need to use the `chassis.ini` file. Refer to the documentation provided with the system controller or to `ni.com/support` for more information on `pxisys.ini` and `chassis.ini` files.

Device drivers and other utility software read the `pxisys.ini` file to obtain system information. The device drivers should have no need to directly read the `chassis.ini` file. For detailed information regarding initialization files, refer to the PXI Express specification at `www.pxisa.org`.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3 Maintenance

This chapter describes basic maintenance procedures you can perform on the PXIe-1095 chassis.

Caution Disconnect all power cables prior to servicing a PXIe-1095 chassis.

Service Interval

Clean dust from the chassis exterior (and interior) as needed, based on the operating environment. Periodic cleaning increases reliability.

Preparation

The information in this section is designed for use by qualified service personnel. Read the *Read Me First: Safety and Electromagnetic Compatibility* document included with your kit before attempting any procedures in this chapter.

Caution Many components within the chassis are susceptible to static discharge damage. Service the chassis only in a static-free environment. Observe standard handling precautions for static-sensitive devices while servicing the chassis. *Always* wear a grounded wrist strap or equivalent while servicing the chassis.

Cleaning

Cleaning procedures consist of exterior and interior cleaning of the chassis. Refer to your module user documentation for information on cleaning the individual CompactPCI or PXI Express modules.

Caution *Always* disconnect the AC power cables before cleaning or servicing the chassis.

Interior Cleaning

Use a dry, low-velocity stream of air to clean the interior of the chassis. Use a soft-bristle brush for cleaning around components.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Exterior Cleaning

Clean the exterior surfaces of the chassis with a dry lint-free cloth or a soft-bristle brush. If any dirt remains, wipe with a cloth moistened in a mild soap solution. Remove any soap residue by wiping with a cloth moistened with clear water. Do not use abrasive compounds on any part of the chassis.

Cautions Avoid getting moisture inside the chassis during exterior cleaning, especially through the top vents. Use just enough moisture to dampen the cloth.

Do *not* wash the front- or rear-panel connectors or switches. Cover these components while cleaning the chassis.

Do *not* use harsh chemical cleaning agents; they may damage the chassis. Avoid chemicals that contain benzene, toluene, xylene, acetone, or similar solvents.

Replacing the Power Supply

This section describes how to remove, configure, and install the AC power supply in the PXIe-1095 chassis.

Caution Disconnect the power cable and wait 30 seconds prior to removing the power supply.


Before connecting the power supply to a power source, read this section and the *Read Me First: Safety and Electromagnetic Compatibility* document included with the kit.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Removal

The PXIe-1095 power supply is a replacement part for the PXIe-1095 chassis. Before attempting to replace the power supply, verify that there is adequate clearance behind the chassis. Disconnect the power cables from the power supplies on the back of the chassis, or, if operating in redundant mode and you wish to replace a single supply, only disconnect the power cable to the supply being replaced. If operating in redundant power mode, wait at least 30 seconds for the supply's internal power to dissipate. Identify the two #6-32 mounting screws that attach the power supply to the chassis. Refer to Figure 3-1, *Removing PXIe-1095 Power Supply*, for the screw locations. Using a Phillips screwdriver, remove the screws. Pull on the rear handle of the power supply to remove it from the back of the chassis, as shown in Figure 3-1.

Figure 3-1. Removing PXIe-1095 Power Supply

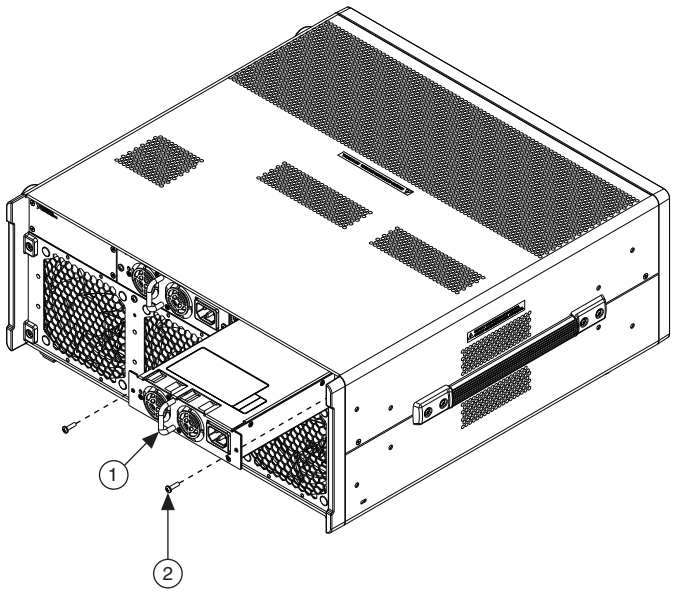

1 Power Supply
2 Power Supply Screws (2x)
3 PXIe-1095 Chassis

Installation

Note The power supply should be disconnected from AC power for at least 30 seconds before it is installed in the chassis.

Ensure that there is no visible damage to the new power supply. Verify that the housing and connector on the new power supply have no foreign material inside. Install the new power supply into the chassis in the reverse order of removal. Replace and tighten two #6-32 screws with a Phillips screwdriver. Connect the AC inlet power cable.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

To meet the Shock and Vibration specifications listed in the *PXIe-1095 Specifications*, tighten screws to 11.5 in · lb (1.3 N · m) of torque.

Connecting Safety Ground

Refer to the *Connecting the Safety Ground* section of Chapter 2, *Installation and Configuration*.

Connecting to Power Source

Refer to the *Connecting to a Power Source* section of Chapter 2, *Installation and Configuration*.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Installing Replacement Fan Assemblies

This section describes how to remove and install fan assemblies in the PXIe-1095 chassis.

Caution Disconnect all power cables and wait at least 30 seconds prior to replacing fan assemblies.

Replacing the PXI Module Fan Assembly

Before attempting to replace the rear module fan assembly, verify that there is adequate clearance behind the chassis. Disconnect all power cables from the power supplies on the back of the chassis. Wait at least 30 seconds for the supplies' internal power to dissipate.

Follow these steps to remove the fan assembly:


1. Using a Phillips screwdriver, remove the eight #6-32 mounting screws and #8-32 ground screw that attach the fan panel to the chassis.
2. Remove rear chassis feet.
3. With internal fan harness still connected, carefully pull and rotate fan assembly from rear cavity of chassis. Use caution when removing the fan assembly to avoid damaging the fan wire harness.
4. Disconnect fan harness from the internal chassis receptacle as shown in Figure 3-3.

Follow these steps to install a new fan assembly:

1. Angle the fan assembly to install the fan harness plug into the internal chassis receptacle. Use care to avoid damaging the fan harness or receptacle.
2. Connect the internal fan harness and install fan assembly into rear cavity of chassis as shown in Figure 3-3, *Internal Fan Harness*. Use caution when installing the fan panel assembly to avoid pinching or damaging the wire harness.
3. Replace chassis feet.
4. Using a Phillips screwdriver, tighten the eight #6-32 mounting screws and #8-32 ground screw into the rear of the chassis. To meet Shock and Vibration specifications listed in the *PXIe-1095 Specifications*, tighten screws to 11.5 in · lb (1.3 N · m) of torque.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 3-2. Replacing Rear Fan Module

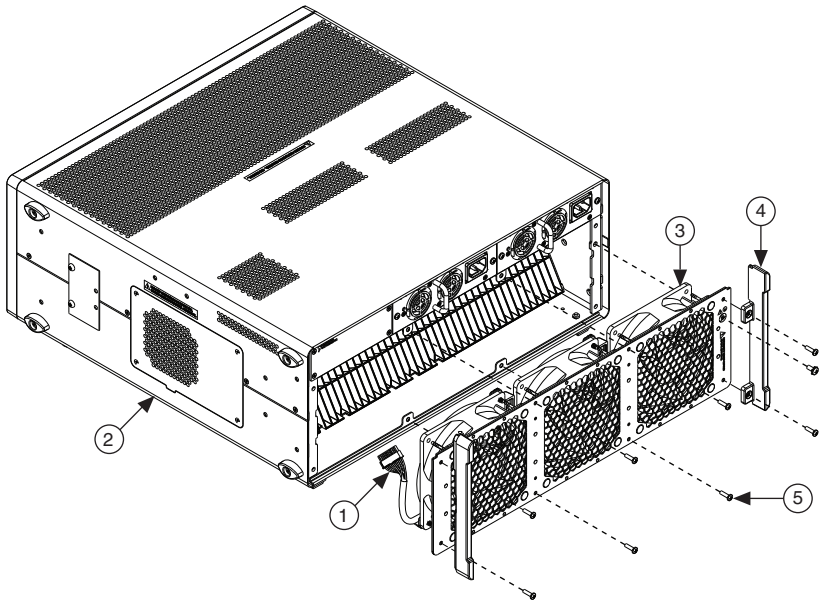

1	Fan Harness Plug	4	Rear Chassis Feet (2x)
2	PXIe-1095 Chassis	5	Mounting Screws (8x)
3	PXI Module Fan Assembly		

Figure 3-3. Internal Fan Harness

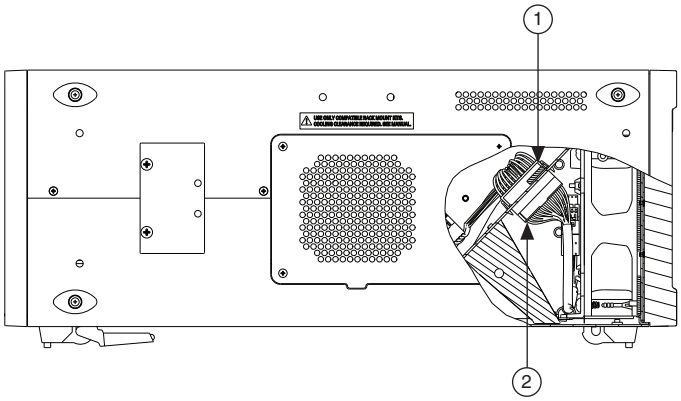

1	Fan Receptacle	2	Fan Harness Plug

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Replacing the Side Fan Assembly

Before attempting to replace the side fan assembly, verify that there is adequate clearance to the side of the chassis. Disconnect all power cables from the power supplies on the back of the chassis. Wait at least 30 seconds for the power supplies' internal power to dissipate.

Complete the following steps to remove the side fan assembly:


1. Using a Phillips screwdriver, remove the four mounting screws that attach the side fan cover.
2. Remove side fan cover from chassis.
3. Using a Phillips screwdriver, remove the two mounting screws that hold the side fan assembly onto the chassis.
4. Locate side fan assembly harness in internal chassis cavity and disconnect the fan from the chassis receptacle. Use caution when removing the fan assembly to avoid damaging the internal wire harness.
5. Pull side fan assembly straight from chassis and remove.

Complete the following steps to install a new side fan assembly.

1. Plug side fan assembly plug into internal chassis fan receptacle.
2. Set side fan assembly into chassis side fan cavity. Use caution when placing wire harness into chassis to avoid damaging the internal or fan wire harness.
3. Using a Phillips screwdriver, hand tighten two side assembly mounting screws. Use the side fan cutout to pull clear extra cable from chassis side panels to prevent pinching.
4. Place all extra cable into chassis side fan cavity.
5. Using a Phillips screwdriver, tighten the four side fan cover mounting screws to the chassis. To meet Shock and Vibration specifications listed in the *PXIe-1095 Specifications*, tighten screws to 6.7 in · lb (0.8 N · m) of torque.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 3-4. Replacing Side Fan Assembly

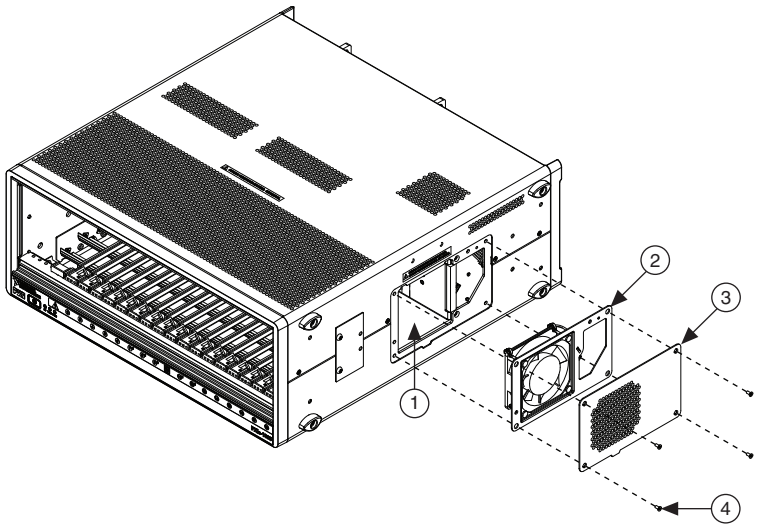

1	Chassis Side Fan Cavity	3	Side Fan Cover
2	Side Fan Assembly	4	Side Fan Cover Mounting Screws (4x)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A

Pinouts

This appendix describes the connector pinouts for the PXIe-1095 chassis backplane.

Table A-1 shows the XP1 Connector Pinout for the System Controller slot.

Table A-2 shows the XP2 Connector Pinout for the System Controller slot.

Table A-3 shows the XP3 Connector Pinout for the System Controller slot.

Table A-4 shows the XP4 Connector Pinout for the System Controller slot.

Table A-5 shows the TP1 Connector Pinout for the System Controller slot.

Table A-6 shows the TP2 Connector Pinout for the System Timing slot.

Table A-7 shows the XP3 Connector Pinout for the System Timing slot.

Table A-8 shows the XP4 Connector Pinout for the System Timing slot.

Table A-9 shows the P1 Connector Pinout for the Hybrid peripheral slots.

Table A-10 shows the XP3 Connector Pinout for the Hybrid peripheral slots.

Table A-11 shows the XP4 Connector Pinout for the Hybrid peripheral slots.

For more detailed information, refer to the *PXI-5 PXI Express Hardware Specification*, Revision 2.0. Contact the PXI Systems Alliance for a copy of the specification.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

System Controller Slot Pinouts

Table A-1. XP1 Connector Pinout for the System Controller Slot

Pins	Signals
A	GND
B	12V
C	12V
D	GND
E	5V
F	3.3V
G	GND

Table A-2. XP2 Connector Pinout for the System Controller Slot

Pin	A	B	ab	C	D	cd	E	F	ef
1	2PETp1	2PETn1	GND	2PERp1	2PERn1	GND	2PETp2	2PETn2	GND
2	2PETp3	2PETn3	GND	2PERp3	2PERn3	GND	2PERp2	2PERn2	GND
3	2PETp4	2PETn4	GND	2PERp4	2PERn4	GND	2PETp5	2PETn5	GND
4	2PETp6	2PETn6	GND	2PERp6	2PERn6	GND	2PERp5	2PERn5	GND
5	2PETp7	2PETn7	GND	2PERp7	2PERn7	GND	2PETp8	2PETn8	GND
6	2PETp9	2PETn9	GND	2PERp9	2PERn9	GND	2PERp8	2PERn8	GND
7	2PETp10	2PETn10	GND	2PERp10	2PERn10	GND	2PETp11	2PETn11	GND
8	2PETp12	2PETn12	GND	2PERp12	2PERn12	GND	2PERp11	2PERn11	GND
9	2PETp13	2PETn13	GND	2PERp13	2PERn13	GND	2PETp14	2PETn14	GND
10	2PETp15	2PETn15	GND	2PERp15	2PERn15	GND	2PERp14	2PERn14	GND

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table A-3. XP3 Connector Pinout for the System Controller Slot

Pin	A	B	ab	C	D	cd	E	F	ef
1	RSV	RSV	GND	RSV	RSV	GND	RSV	RSV	GND
2	RSV	RSV	GND	PWR_OK	PS_ON#	GND	LINKCAP	PWRBTN#	GND
3	SMBDAT	SMBCLK	GND	RSVD	RSVD	GND	RSVD	RSVD	GND
4	RSV	PERST#	GND	2RefClk+	2RefClk-	GND	1RefClk+	1RefClk-	GND
5	1PETp0	1PETn0	GND	1PERp0	1PERn0	GND	1PETp1	1PETn1	GND
6	1PETp2	1PETn2	GND	1PERp2	1PERn2	GND	1PERp1	1PERn1	GND
7	1PETp3	1PETn3	GND	1PERp3	1PERn3	GND	1PETp4	1PETn4	GND
8	1PETp5	1PETn5	GND	1PERp5	1PERn5	GND	1PERp4	1PERn4	GND
9	1PETp6	1PETn6	GND	1PERp6	1PERn6	GND	1PETp7	1PETn7	GND
10	2PETp0	2PETn0	GND	2PERp0	2PERn0	GND	1PERp7	1PERn7	GND

Table A-4. XP4 Connector Pinout for the System Controller Slot

Pin	Z	A	B	C	D	E	F
1	GND	GA4	GA3	GA2	GA1	GA0	GND
2	GND	5Vaux	GND	SYSEN#	WAKE#	ALERT#	GND
3	GND	RSV	RSV	RSV	RSV	RSV	GND
4	GND	RSV	RSV	RSV	RSV	RSV	GND
5	GND	PXI_TRIG3	PXI_TRIG4	PXI_TRIG5	GND	PXI_TRIG6	GND
6	GND	PXI_TRIG2	GND	RSV	PXI_STAR	PXI_CLK10	GND
7	GND	PXI_TRIG1	PXI_TRIG0	RSV	GND	PXI_TRIG7	GND
8	GND	RSV	GND	RSV	RSV	PXI_LBR6	GND

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

System Timing Slot Pinouts

Table A-5. TP1 Connector Pinout for the System Timing Slot

Pin	A	B	ab	C	D	cd	E	F	ef
1	PXIe_DSTARA3+	PXIe_DSTARA3-	GND	NC	NC	GND	NC	NC	GND
2	PXIe_DSTARC4+	PXIe_DSTARC4-	GND	PXI_STAR12	PXI_STAR13	GND	NC	NC	GND
3	PXIe_DSTARB4+	PXIe_DSTARB4-	GND	NC	NC	GND	NC	NC	GND
4	PXIe_DSTARA4+	PXIe_DSTARA4-	GND	NC	NC	GND	NC	NC	GND
5	PXIe_DSTARC5+	PXIe_DSTARC5-	GND	PXI_STAR14	PXI_STAR15	GND	NC	NC	GND
6	PXIe_DSTARB5+	PXIe_DSTARB5-	GND	NC	NC	GND	NC	NC	GND
7	PXIe_DSTARA5+	PXIe_DSTARA5-	GND	NC	NC	GND	NC	NC	GND
8	PXIe_DSTARC6+	PXIe_DSTARC6-	GND	PXI_STAR16	RSV	GND	NC	NC	GND
9	PXIe_DSTARB6+	PXIe_DSTARB6-	GND	NC	NC	GND	NC	NC	GND
10	PXIe_DSTARA6+	PXIe_DSTARA6-	GND	NC	NC	GND	NC	NC	GND

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table A-6. TP2 Connector Pinout for the System Timing Slot

Pin	A	B	ab	C	D	cd	E	F	ef
1	NC	NC	GND	PXIe_DSTARC8+	PXIe_DSTARC8-	GND	PXIe_DSTARB8+	PXIe_DSTARB8-	GND
2	NC	NC	GND	NC	NC	GND	PXIe_DSTARA8+	PXIe_DSTARA8-	GND
3	NC	NC	GND	PXIe_DSTARC1+	PXIe_DSTARC1-	GND	NC	NC	GND
4	PXIe_DSTARB1+	PXIe_DSTARB1-	GND	PXI_STAR0	PXI_STAR1	GND	NC	NC	GND
5	PXIe_DSTARA1+	PXIe_DSTARA1-	GND	PXI_STAR2	PXI_STAR3	GND	NC	NC	GND
6	PXIe_DSTARC2+	PXIe_DSTARC2-	GND	PXI_STAR4	PXI_STAR5	GND	NC	NC	GND
7	PXIe_DSTARB2+	PXIe_DSTARB2-	GND	PXI_STAR6	PXI_STAR7	GND	NC	NC	GND
8	PXIe_DSTARA2+	PXIe_DSTARA2-	GND	PXI_STAR8	PXI_STAR9	GND	PXIe_DSTARC11+	PXIe_DSTARC11-	GND
9	PXIe_DSTARC3+	PXIe_DSTARC3-	GND	PXI_STAR10	PXI_STAR11	GND	PXIe_DSTARA11+	PXIe_DSTARA11-	GND
10	PXIe_DSTARB3+	PXIe_DSTARB3-	GND	NC	NC	GND	PXIe_DSTARB11+	PXIe_DSTARB11-	GND

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table A-7. XP3 Connector Pinout for the System Timing Slot

Pin	A	B	ab	C	D	cd	E	F	ef
1	PXIe_CLK100+	PXIe_CLK100-	GND	PXIe_SYNC100+	PXIe_SYNC100-	GND	PXIe_DSTARC+	PXIe_DSTARC-	GND
2	PRSNT#	PWREN#	GND	PXIe_DSTARB+	PXIe_DSTARB-	GND	PXIe_DSTARA+	PXIe_DSTARA-	GND
3	SMBDAT	SMBCLK	GND	RSV	RSV	GND	RSV	RSV	GND
4	MPWRGD*	PERST#	GND	RSV	RSV	GND	1RefClk+	1RefClk-	GND
5	1PETp0	1PETn0	GND	1PERp0	1PERn0	GND	1PETp1	1PETn1	GND
6	1PETp2	1PETn2	GND	1PERp2	1PERn2	GND	1PERp1	1PERn1	GND
7	1PETp3	1PETn3	GND	1PERp3	1PERn3	GND	1PETp4	1PETn4	GND
8	1PETp5	1PETn5	GND	1PERp5	1PERn5	GND	1PERp4	1PERn4	GND
9	1PETp6	1PETn6	GND	1PERp6	1PERn6	GND	1PETp7	1PETn7	GND
10	RSV	RSV	GND	RSV	RSV	GND	1PERp7	1PERn7	GND

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table A-8. XP4 Connector Pinout for the System Timing Slot

Pin	Z	A	B	C	D	E	F
1	GND	GA4	GA3	GA2	GA1	GA0	GND
2	GND	5Vaux	GND	SYSEN#	WAKE#	ALERT#	GND
3	GND	12V	12V	GND	GND	GND	GND
4	GND	GND	GND	3.3V	3.3V	3.3V	GND
5	GND	PXI_TRIG3	PXI_TRIG4	PXI_TRIG5	GND	PXI_TRIG6	GND
6	GND	PXI_TRIG2	GND	ATNLED	PXI_CLK10_IN	PXI_CLK10	GND
7	GND	PXI_TRIG1	PXI_TRIG0	ATNSW#	GND	PXI_TRIG7	GND
8	GND	PXIe_SYNC_CTRL	GND	RSV	PXI_LBL6	PXI_LBR6	GND

Hybrid Slot Pinouts

Table A-9. P1 Connector Pinout for the Hybrid Slot

Pin	Z	A	B	C	D	E	F
25	GND	5V	REQ64#	ENUM#	3.3V	5V	GND
24	GND	AD[1]	5V	V(I/O)	AD[0]	ACK64#	GND
23	GND	3.3V	AD[4]	AD[3]	5V	AD[2]	GND
22	GND	AD[7]	GND	3.3V	AD[6]	AD[5]	GND
21	GND	3.3V	AD[9]	AD[8]	M66EN	C/BE[0]#	GND
20	GND	AD[12]	GND	V(I/O)	AD[11]	AD[10]	GND
19	GND	3.3V	AD[15]	AD[14]	GND	AD[13]	GND
18	GND	SERR#	GND	3.3V	PAR	C/BE[1]#	GND
17	GND	3.3V	IPMB_SCL	IPMB_SDA	GND	PERR#	GND
16	GND	DEVSEL#	GND	V(I/O)	STOP#	LOCK#	GND
15	GND	3.3V	FRAME#	IRDY#	BD_SEL#	TRDY#	GND
12 to 14	Key Area						
11	GND	AD[18]	AD[17]	AD[16]	GND	C/BE[2]#	GND
10	GND	AD[21]	GND	3.3V	AD[20]	AD[19]	GND
9	GND	C/BE[3]#	IDSEL	AD[23]	GND	AD[22]	GND
8	GND	AD[26]	GND	V(I/O)	AD[25]	AD[24]	GND
7	GND	AD[30]	AD[29]	AD[28]	GND	AD[27]	GND
6	GND	REQ#	GND	3.3V	CLK	AD[31]	GND

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table A-9. P1 Connector Pinout for the Hybrid Slot (Continued)

Pin	Z	A	B	C	D	E	F
5	GND	BRSVP1A5	BRSVP1B5	RST#	GND	GNT#	GND
4	GND	IPMB_PWR	HEALTHY#	V(I/O)	INTP	INTS	GND
3	GND	INTA#	INTB#	INTC#	5V	INTD#	GND
2	GND	TCK	5V	TMS	TDO	TDI	GND
1	GND	5V	-12V	TRST#	+12V	5V	GND

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table A-10. XP3 Connector Pinout for the Hybrid Slot

Pin	A	B	ab	C	D	cd	E	F	ef
1	PXIe_CLK100+	PXIe_CLK100-	GND	PXIe_SYNC100+	PXIe_SYNC100-	GND	PXIe_DSTARC+	PXIe_DSTARC-	GND
2	PRSNT#	PWREN#	GND	PXIe_DSTARB+	PXIe_DSTARB-	GND	PXIe_DSTARA+	PXIe_DSTARA-	GND
3	SMBDAT	SMBCLK	GND	RSV	RSV	GND	RSV	RSV	GND
4	MPWRGD*	PERST#	GND	RSV	RSV	GND	1RefClk+	1RefClk-	GND
5	1PETp0	1PETn0	GND	1PERp0	1PERn0	GND	1PETp1	1PETn1	GND
6	1PETp2	1PETn2	GND	1PERp2	1PERn2	GND	1PERp1	1PERn1	GND
7	1PETp3	1PETn3	GND	1PERp3	1PERn3	GND	1PETp4	1PETn4	GND
8	1PETp5	1PETn5	GND	1PERp5	1PERn5	GND	1PERp4	1PERn4	GND
9	1PETp6	1PETn6	GND	1PERp6	1PERn6	GND	1PETp7	1PETn7	GND
10	RSV	RSV	GND	RSV	RSV	GND	1PERp7	1PERn7	GND

Table A-11. XP4 Connector Pinout for the Hybrid Slot

Pin	Z	A	B	C	D	E	F
1	GND	GA4	GA3	GA2	GA1	GA0	GND
2	GND	5Vaux	GND	SYSEN#	WAKE#	ALERT#	GND
3	GND	12V	12V	GND	GND	GND	GND
4	GND	GND	GND	3.3V	3.3V	3.3V	GND
5	GND	PXI_TRIG3	PXI_TRIG4	PXI_TRIG5	GND	PXI_TRIG6	GND
6	GND	PXI_TRIG2	GND	ATNLED	PXI_STAR	PXI_CLK10	GND
7	GND	PXI_TRIG1	PXI_TRIG0	ATNSW#	GND	PXI_TRIG7	GND
8	GND	RSV	GND	RSV	PXI_LBL6	PXI_LBR6	GND

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

B

NI Services

National Instruments provides global services and support as part of our commitment to your success. Take advantage of product services in addition to training and certification programs that meet your needs during each phase of the application life cycle; from planning and development through deployment and ongoing maintenance.

To get started, register your product at `ni.com/myproducts`.

As a registered NI product user, you are entitled to the following benefits:

- Access to applicable product services.
- Easier product management with an online account.
- Receive critical part notifications, software updates, and service expirations.

Log in to your National Instruments `ni.com` User Profile to get personalized access to your services.

Services and Resources

- **Maintenance and Hardware Services—**NI helps you identify your systems' accuracy and reliability requirements and provides warranty, sparing, and calibration services to help you maintain accuracy and minimize downtime over the life of your system. Visit `ni.com/services` for more information**.**
  - **Warranty and Repair—**All NI hardware features a one-year standard warranty that is extendable up to five years. NI offers repair services performed in a timely manner by highly trained factory technicians using only original parts at a National Instruments service center.
  - **Calibration—**Through regular calibration, you can quantify and improve the measurement performance of an instrument. NI provides state-of-the-art calibration services. If your product supports calibration, you can obtain the calibration certificate for your product at `ni.com/calibration`.
- **System Integration**—If you have time constraints, limited in-house technical resources, or other project challenges, National Instruments Alliance Partner members can help. To learn more, call your local NI office or visit `ni.com/alliance`.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- **Training and Certification—**The NI training and certification program is the most effective way to increase application development proficiency and productivity. Visit `ni.com/training` for more information.
  - The Skills Guide assists you in identifying the proficiency requirements of your current application and gives you options for obtaining those skills consistent with your time and budget constraints and personal learning preferences. Visit `ni.com/skills-guide` to see these custom paths.
  - NI offers courses in several languages and formats including instructor-led classes at facilities worldwide, courses on-site at your facility, and online courses to serve your individual needs.
- **Technical Support—**Support at `ni.com/support` includes the following resources:
  - **Self-Help Technical Resources—**Visit `ni.com/support` for software drivers and updates, a searchable KnowledgeBase, product manuals, step-by-step troubleshooting wizards, thousands of example programs, tutorials, application notes, instrument drivers, and so on. Registered users also receive access to the NI Discussion Forums at `ni.com/forums`. NI Applications Engineers make sure every question submitted online receives an answer.
  - **Software Support Service Membership—**The Standard Service Program (SSP) is a renewable one-year subscription included with almost every NI software product, including NI Developer Suite. This program entitles members to direct access to NI Applications Engineers through phone and email for one-to-one technical support, as well as exclusive access to online training modules at `ni.com/self-paced-training`. NI also offers flexible extended contract options that guarantee your SSP benefits are available without interruption for as long as you need them. Visit `ni.com/ssp` for more information.
- **Declaration of Conformity (DoC)—**A DoC is our claim of compliance with the Council of the European Communities using the manufacturer's declaration of conformity. This system affords the user protection for electromagnetic compatibility (EMC) and product safety. You can obtain the DoC for your product by visiting `ni.com/certification`.

For information about other technical support options in your area, visit `ni.com/services`, or contact your local office at `ni.com/contact`.

You also can visit the Worldwide Offices section of `ni.com/niglobal` to access the branch office websites, which provide up-to-date contact information, support phone numbers, email addresses, and current events.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Glossary

Symbol	Prefix	Value
p	pico	10^{-12}
n	nano	10^{-9}
µ	micro	10^{-6}
m	milli	10^{-3}
k	kilo	10^{3}
M	mega	10^{6}
G	giga	10^{9}
T	tera	10^{12}

Symbols

°	Degrees.
≥	Equal or greater than.
≤	Equal or less than.
%	Percent.

A

A	Amperes.
AC	Alternating current.
ANSI	American National Standards Institute.
Auto	Automatic fan speed control.
AWG	American Wire Gauge.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

B

backplane	An assembly, typically a printed circuit board, with connectors and signal paths that bus the connector pins.

C

C	Celsius.
cfm	Cubic feet per minute.
CFR	Code of Federal Regulations.
cm	Centimeters.
CompactPCI	An adaptation of the Peripheral Component Interconnect (PCI) Specification 2.1 or later for industrial and/or embedded applications requiring a more robust mechanical form factor than desktop PCI. It uses industry standard mechanical components and high-performance connector technologies to provide an optimized system intended for rugged applications. It is electrically compatible with the PCI Specification, which enables low-cost PCI components to be utilized in a mechanical form factor suited for rugged environments.
CSA	Canadian Standards Association.

D

daisy-chain	A method of propagating signals along a bus, in which the devices are prioritized on the basis of their position on the bus.
DC	Direct current.
DoC	Declaration of Conformity.

E

efficiency	Ratio of output power to input power, expressed as a percentage.
EIA	Electronic Industries Association.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EMC	Electromagnetic Compatibility.
EMI	Electromagnetic Interference.

F

FCC	Federal Communications Commission.
filler panel	A blank module front panel used to fill empty slots in the chassis.

G

g	(1) grams; (2) a measure of acceleration equal to 9.8 m/s^2.
GPIB	General Purpose Interface Bus (IEEE 488).
g_{RMS}	A measure of random vibration. The root mean square of acceleration levels in a random vibration test profile.

H

hr	Hours.
Hz	Hertz; cycles per second.

I

IEC	International Electrotechnical Commission; an organization that sets international electrical and electronics standards.
IEEE	Institute of Electrical and Electronics Engineers.
I_{MP}	Mainframe peak current.
in.	Inches.
inhibit	To turn off.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

J

jitter	A measure of the small, rapid variations in clock transition times from their nominal regular intervals. Units: seconds RMS.

K

kg	Kilograms.
km	Kilometers.

L

lb	Pounds.
LED	Light emitting diode.
line regulation	The maximum steady-state percentage that a DC voltage output will change as a result of a specified change in input AC voltage (step change from 90 to 132 VAC or 180 to 264 VAC).
load regulation	The maximum steady-state percentage that a DC voltage output will change as a result of a step change from no-load to full-load output current.

M

m	Meters.
MHz	Megahertz. One million Hertz; one Hertz equals one cycle per second.
mi	Miles.
ms	Milliseconds.
MTBF	Mean time between failure.
MTTR	Mean time to repair.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

N

NEMA	National Electrical Manufacturers Association.
NI	National Instruments.

P

power supply shuttle	A removable module that contains the chassis power supply.
PXI	PCI eXtensions for Instrumentation.
PXI_CLK10	10 MHz PXI system reference clock.

R

RH	Relative humidity.
RMS	Root mean square.

S

s	Seconds.
skew	Deviation in signal transmission times.
slot blocker	An assembly installed into an empty slot to improve the airflow in adjacent slots.
SMA	SubMiniature version A connector; a commonly used coaxial connector.
standby	The backplane is unpowered (off), but the chassis is still connected to AC power mains.
System controller	A module configured for installation in Slot 1of a PXI chassis. This device is unique in the PXI system in that it performs the system controller functions, including clock sourcing and arbitration for data transfers across the backplane. Installing such a device into any other slot can damage the device, the PXI backplane, or both.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

system reference clock	A 10 MHz clock, also called PXI_CLK10, that is distributed to all peripheral slots in the chassis, as well as a BNC connector on the rear of chassis labeled *10 MHz REF OUT*. The system reference clock can be used for synchronization of multiple modules in a measurement or control system. The 10 MHz REF IN and OUT BNC connectors on the rear of the chassis can be used to synchronize multiple chassis to one reference clock. The PXI backplane specification defines implementation guidelines for PXI_CLK10.
System Timing slot	This slot is located at slot 4 and has dedicated trigger lines to other slots.

T

TTL	Transistor-transistor logic.

U

UL	Underwriter's Laboratories.

V

V	Volts.
VAC	Volts alternating current.
V_{pp}	Peak-to-peak voltage.

W

W	Watts.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Index

A

AC power cables (table), 1-2

B

backplane
    hybrid peripheral slots, 1-7
    interoperability with CompactPCI, 1-5
    overview, 1-5
    PXI local bus, routing, 1-9
    system controller slot, 1-6
    system reference clock, 1-10
    system timing slot, 1-8
    trigger bus, 1-9

C

cables, power (table), 1-2
chassis ambient temperature definitions, 2-5
chassis cooling considerations
    ambient temperature definitions, 2-5
    clearances, 2-2
chassis initialization file, 2-17
clearances for chassis cooling, 2-2
CompactPCI
    interoperability with PXIe-1095 backplane, 1-5
configuration. *See* installation, configuration, and operation
cooling
    filler panel installation, 2-5
    slot blocker installation, 2-5

E

EMC filler panel kit, 1-5

F

fan module, replacing, 1-5
filler panel installation, 2-5

G

ground, connecting, 2-6

H

hybrid peripheral slots, description, 1-7
hybrid slot pinouts
    P1 connector (table), A-7
    XP3 connector (table), A-9
    XP4 connector (table), A-9

I

IEC 320 inlet, 2-7
installation, configuration, and operation
    chassis initialization file, 2-17
    connecting safety ground, 2-6
    filler panel installation, 2-5
    installing a PXI Express system controller, 2-7
    peripheral module installation, 2-9
    PXI Express configuration in MAX, 2-13
    rack mounting, 2-5
    site considerations, 2-2
    slot blocker installation, 2-5
    testing power up, 2-7
    unpacking the PXIe-1095, 1-1
interoperability with CompactPCI, 1-5

K

key features, 1-2
kit contents, 1-1

L

LED indicators, 2-10
    front panel LED states (table), 2-10, 2-11, 2-12

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

M

maintenance of PXIe-1095 chassis, 3-1
    cleaning
        exterior cleaning, 3-2
        interior cleaning, 3-1
    preparation, 3-1
    service interval, 3-1
    static discharge damage (caution), 3-1

O

optional equipment, 1-5

P

peripheral module installation, 2-9
pinouts, A-1
power cables (table), 1-2
power supply
    connecting to, 2-7
    replacement, 1-5
    replacing, 3-2
        connecting safety ground, 3-3
        connecting to power source, 3-3
        installation, 3-3
        removal, 3-2
power up, testing, 2-7
PXI Express configuration in MAX, 2-13
PXI Express system controller, 2-7
PXI local bus, routing, 1-9
PXIe-1095 backplane
    hybrid peripheral slots, 1-7
    interoperability with CompactPCI, 1-5
    overview, 1-5
    PXI local bus, routing, 1-9
    system controller slot, 1-6
    system reference clock, 1-10
    system timing slot, 1-8
    trigger bus, 1-9
PXIe-1095 chassis
    installation. *See* installation, configuration, and operation
    key features, 1-2
    maintenance. *See* maintenance of PXIe-1095 chassis
    optional equipment, 1-5
    rack mounting, 2-5
    safety ground, connecting, 2-6
    unpacking, 1-1

R

rack mounting, 2-5
    kit, 1-5
replacement power supply, 1-5
replacing the power supply, 3-2

S

safety and caution notices, 2-1
safety ground, connecting, 2-6
service interval, 3-1
slot blocker
    installation, 2-5
    kit, 1-5
static discharge damage (caution), 3-1
system controller slot
    description, 1-6
    pinouts
        XP1 connector (table), A-2
        XP2 connector (table), A-2
        XP3 connector (table), A-3
        XP4 connector (table), A-3
system reference clock, 1-10
system timing slot
    description, 1-8
    pinouts
        TP1 connector (table), A-4
        TP2 connector (table), A-5
        XP3 connector (table), A-6
        XP4 connector (table), A-7

T

testing power up, 2-7
trigger bus, 1-9

U

unpacking the PXIe-1095 chassis, 1-1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP