

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Newport 5060* at our website: ***Click HERE***

5000 Series Laser Diode Driver

User's Manual

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



Certificate No.: FM 27207

Newport Corporation, Irvine, California, has been certified compliant with ISO 9002 by the British Standards Institution.

Newport®

Corporate Headquarters
Newport Corporation
1791 Deere Avenue
Irvine, CA 92714
Telephone: 949-863-3144
Facsimile: 949-253-1800

Belgium
Telephone: 016-402927
Facsimile: 016-402227

Canada
Telephone: 905-567-0390
Facsimile: 905-567-0392

France
Telephone: 1-60 91 68 68
Facsimile: 1-60 91 68 69

Germany
Telephone: 06151-36 21-0
Facsimile: 06151-36 21-52

Italy
Telephone: 02-924-5518
Facsimile: 02-923-2448

Japan
Telephone: 03-5379-0261
Facsimile: 03-5379-0155

Netherlands
Telephone: 030-6592111
Facsimile: 030-6570242

Switzerland
Telephone: 01-740-2283
Facsimile: 01-740-2503

Taiwon R.O.C.
Telephone: 2-2769-9796
Facsimile: 2-2769-9638

United Kingdom
Telephone: 01635-521757
Facsimile: 01635-521348

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Warranty

Newport Corporation warrants that this product will be free from defects in material and workmanship and will comply with Newport's published specifications at the time of sale for a period of one year from date of shipment. If found to be defective during the warranty period, the product will either be repaired or replaced at Newport's option.

To exercise this warranty, write or call your local Newport office or representative, or contact Newport headquarters in Irvine, California. You will be given prompt assistance and return instructions. Send the product, freight prepaid, to the indicated service facility. Repairs will be made and the instrument returned freight prepaid. Repaired products are warranted for the balance of the original warranty period or 90 days, whichever first occurs.

Limitation of Warranty

The above warranties do not apply to products which have been repaired or modified without Newport's written approval, or products subjected to unusual physical, thermal or electrical stress, improper installation, misuse, abuse, accident or negligence in use, storage, transportation or handling. This warranty also does not apply to fuses, batteries, or damage from battery leakage.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE. NEWPORT CORPORATION SHALL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE PURCHASE OR USE OF ITS PRODUCTS.

©1996-2001, Newport Corporation
Irvine, California, USA
Part No. 8800500000
IN-08971
Rev. C
Printed 5 September 2001

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EC DECLARATION OF CONFORMITY

5000 Series Laser Diode Driver

We declare that the accompanying product, identified with the "CE" mark, meets all relevant requirements of Directive 89/336/EEC and Low Voltage Directive 73/23/EEC.

Compliance was demonstrated to the following specifications:

EN50081-1 EMISSIONS:

Radiated and conducted emissions per EN55011, Group 1, Class A

EN50082-1 IMMUNITY:

Electrostatic Discharge per IEC 1000-4-2, severity level 3
Rated Emission Immunity per IEC 1000-4-3, severity level 2
Fast Burst Transients per IEC 1000-4-4, severity level 3
Surge Immunity per IEC 1000-4-5, severity level 3

IEC SAFETY:

Safety requirements for electrical equipment specified in IEC 1010-1.

Alain Danielo

VP European Operations
Zone Industrielle
4534 Beaune-la-Rolande, France

Robert LaTouche

VP Integrated Management Systems
1791 Deere Avenue
Irvine, Ca. USA

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table of Contents

1. General Information ____ *11*

1.1 Introduction ____ **11**

1.2 Product Overview ____ **11**

1.3 Available Options and Accessories ____ **12**

1.4 Safety Terms and Symbols ____ **13**

1.4.1 Terms ____ 13

1.4.2 Symbols ____ 13

1.5 General Warnings and Cautions ____ **14**

2. System Operation ____ *15*

2.1 Introduction ____ **15**

2.2 Installation ____ **15**

2.2.1 AC Power Considerations ____ 15

2.2.2 Tilt-Foot Adjustment ____ 16

2.2.3 Rack Mounting ____ 16

2.2.4 Ventilation Requirements ____ 16

2.2.5 Power-Up Sequence ____ 16

2.2.6 Quick Start ____ 16

2.3 Introduction to the 5000 Front Panel ____ **17**

2.3.1 Model 5000 ____ 17

2.4 General Operation ____ **18**

2.4.1 Display Elements ____ 18

2.4.1.1 Static Fields ____ 18

2.4.1.2 Non-Editable Data Fields ____ 18

2.4.1.3 Editable Data Fields ____ 18

2.4.1.3.1 Changing Data Fields ____ 19

2.4.1.4 Controls ____ 19

2.4.2 Main Screen ____ 19

2.4.3 Menu Structure ____ 20

2.4.3.1 Laser Setup Menu ____ 20

2.4.3.2 Modulation Setup Menu ____ 20

2.4.3.3 Communications Menu ____ 21

2.4.3.4 System Menu ____ 22

2.4.3.5 Save/Recall Menu ____ 23

2.4.3.6 Calibration Menu ____ 23

2.5 Rear Panel Familiarization ____ **24**

2.5.1 RS-232 Connector ____ 24

2.5.2 GPIB Connector ____ 24

2.5.3 Modulation BNC Connector ____ 24

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.5.4 Photodiode Bias Adjust 25
2.5.5 Photodiode BNC Connector 25
2.5.6 LDD Output Connector 25
2.5.7 Key Switch 25
2.5.8 Input Power Connector 25
2.5.9 GND Post 25

2.6 Warm Up and Environmental Consideration 26

3. Laser Diode Driver Operation 27

3.1 Laser Diode Driver 27
3.1.1 Introduction 27
3.1.2 Laser Diode Protection Requirements 27

3.2 Laser Safety Features 29
3.2.1 Conditions Which Can Automatically Shut Off the Laser Output. 29
3.2.2 Key switch interlock 29
3.2.3 Lockout Dial Button 30
3.2.4 Turn On Delay 30

3.3 The Laser Connectors 30
3.3.1 External Modulation 30
3.3.2 Photodiode Bias Control 31
3.3.3 Photodiode 31
3.3.4 Interlock 31

3.4 Connecting to Your Laser 31
3.4.1 Laser Diode Connections and Shielding 32
3.4.2 Photodiode Feedback Connections 33
3.4.3 Grounding Consideration 34

3.5 Laser Driver Operation 35
3.5.1 Quick Start 35
3.5.2 Laser Main Screen 35
3.5.3 Laser Setup Menu 35
3.5.3.1 Mode 36
3.5.3.2 Bandwidth (BW) 37
3.5.3.3 Io Lim 37
3.5.3.4 Vcomp 37
3.5.3.5 Im Lim 37
3.5.3.6 Po Lim 37
3.5.3.7 Tol Time and Tol Iop 38
3.5.3.8 Intermittent Contact (Int Contact) 38
3.5.3.9 Vf Loss 38
3.5.3.10 Resp 38
3.5.3.11 PD Zero 39
3.5.4 Modulation Setup Menu 39
3.5.4.1 Modulation Enable (Mod En) 39
3.5.4.2 Frequency (Freq) 39

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.5.4.3 Modulation Type (Mod Type) 40
3.5.4.4 Modulation Amplitude (Mod Amp) 40
3.5.4.5 Io min and Io max 40

4. Principles of Operation 41

4.1 Introduction 41

4.2 Laser Driver Theory of Operation 41
4.2.1 Laser Interface 42
4.2.2 Limit DAC 43
4.2.3 Set Point DAC 43
4.2.4 A/D Converter 43
4.2.5 Current Source Voltage 43
4.2.6 Output Shorting 43
4.2.7 Modulation/Voltage Control Input Port 43
4.2.8 Photodiode Feedback Amplifier 44
4.2.9 Constant Current, High Bandwidth Mode 44
4.2.10 Constant Current, Low Bandwidth Mode 44
4.2.11 Constant Power Mode 46
4.2.12 Internal Modulation 46

4.3 Microprocessor Board 47
4.3.1 Microprocessor 47
4.3.2 Memory 48
4.3.3 Laser Interface 48
4.3.4 Front Panel Interface 48
4.3.5 GPIB Interface 48
4.3.6 RS-232 Serial Interface 48

4.4 Power Supplies 48
4.4.1 LDD Power Supplies 48
4.4.2 CPU Supply 49

4.5 Interlock Operation 49
4.5.1 Laser Interlock 49

5. Tips and Techniques 51

5.1 Introduction 51

5.2 Laser Limits 51

5.3 Modulating 52
5.3.1 Grounding with Modulation 53
5.3.2 Current Limit when Modulating 53

5.4 Grounding A Laser Diode 54

5.5 Noise Specifications 55

5.6 Intermittent Contact Feature 55

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5.7 V_f Measurements 55

6. Maintenance 57

6.1 Introduction 57

6.2 Fuse Replacement 57

6.3 Cleaning 57

7. Calibration 59

7.1 Calibration Overview 59
7.1.1 Environmental Conditions 59
7.1.2 Warm-Up 59

7.2 Laser Calibration 59
7.2.1 Recommended Equipment 59
7.2.2 Drive Current Load Resistor Selection 60
7.2.3 Local Operation Current Source Calibration 60
7.2.4 Remote Operation Current Source Calibration 61
7.2.5 Local Operation I_{PD} Current Calibration 62
7.2.6 Remote Operation I_{PD} Current Calibration 64
7.2.7 Local Operation Laser Voltage Measurement Calibration 66
7.2.8 Remote Operation Laser Voltage Measurement Calibration 66

8. Factory Service 69

8.1 Introduction 69

8.2 Obtaining Service 69

9. Error Messages 73

9.1 Introduction 73

10. Specifications 75

10.1 Laser Diode Drivers 75

10.2 General Specifications 76

Tables

Table 1 - Laser Connector Pinouts 30
Table 2 - Recommended Test Equipment 59
Table 3 - Drive Current Load Resistor Selection 60
Table 4 - Error Codes 73

Figures

Figure 1 - Model 5000 Front Panel 17
Figure 2 - Main Screen 20
Figure 3 - Model 5000 Menu Groups 20

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 4 - Communications Menu ____ *21*
Figure 5 - System Configure Menu ____ *22*
Figure 6 - Save/Recall Menu ____ *23*
Figure 7 - Calibration Menu ____ *23*
Figure 8 - Rear Panel ____ *24*
Figure 9 - Laser Diode Protection Circuit ____ *29*
Figure 10 - Common Laser Cathode / Photodiode Cathode ____ *33*
Figure 11 - Common Laser Cathode / Photodiode Anode ____ *34*
Figure 12 - Common Laser Anode / Photodiode Cathode ____ *34*
Figure 13 - Common Laser Anode / Photodiode Anode ____ *34*
Figure 14 - Main Screen ____ *35*
Figure 15 - Laser Setup Menu ____ *36*
Figure 16 - Modulation Setup Menu ____ *39*
Figure 17 - 5000 Block Diagram ____ *41*
Figure 19 - Laser Driver Block Diagram ____ *42*
Figure 20 - Constant Current - High Bandwidth Mode ____ *44*
Figure 21 - Constant Current - Low Bandwidth Mode ____ *45*
Figure 22 - Constant Power Mode ____ *46*
Figure 23 - Microprocessor Board Block Diagram ____ *47*
Figure 24 - Power Supply Block Diagram ____ *49*
Figure 25 - Current Limit Example ____ *54*
Figure 26 - I_{PD} Calibration Circuit ____ *63*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

C H A P T E R 1

1. General Information

1.1 Introduction

This chapter describes the features, options, accessories, and specifications of the Model 5000.

1.2 Product Overview

PRODUCT FEATURES

- ❑ GPIB/IEEE 488.2 and RS-232C Interfaces
- ❑ Full 16-bit control and characterization capabilities
- ❑ Laser Diode Driver (LDD)
  - 500 mA to 6 Amp low noise outputs
  - External analog modulation
  - Adjustable photodiode bias voltage
  - Comprehensive laser diode protection features

The Model 5000 Laser Diode Driver is a result of Newport's continuing commitment to provide advanced laser diode instrumentation at affordable prices.

Complete Test and Characterization Capabilities

Advanced circuit designs and careful layout of laser diode drivers provide you with an extremely low noise, highly stable output current. Current outputs range from 500 mA, 3 Amps, and 6 Amps. External analog modulation input allows precision control of the laser output for a variety of applications including power level control and wavelength tuning. An internal sine or square wave modulator is also available. A monitor photodiode may be zero biased for CW low noise applications or reversed biased up to 5 volts for high frequency modulation. All laser diode parameters are accessible with 16-bit resolution including the laser diode's forward voltage for full characterization.

Comprehensive Safety Features

Time tested laser diode protection safety features are incorporated into every Laser Diode Driver offered. Input power module filters provide first stage

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

protection against transients. Additional filtering and power regulation stages coupled with high speed transient detection circuits let you operate your laser diode worry free from transients. A slow turn-on sequence, multiple output shorting circuits, and an independent current limiting feature provide the superior protection you demand from all your laser diode instrumentation.

Simplified Control and Test Procedures

Improved data presentation and system control are achieved using a character LCD display. Real-time control of an output is accomplished either by entering the set point via the cursor keys or control dial. MENU keys access saved system configurations and repetitive procedures. All controls are clearly marked and instructions easily understood for simple operation.

Support for Remote Data Collection

For ultimate control a GPIB/IEEE-488.2 interface is available. All control and measurement functions are accessible via the GPIB interface. In addition, standard serial RS-232C ports allow simpler interfacing to a PC. As your instrumentation needs change the Model 5000 Modular Controller will adapt to all your new laser diode applications giving you the ultimate in flexible laboratory equipment.

1.3 Available Options and Accessories

Model 5000 Laser Diode Drivers

5005	500 mA Laser Diode Driver
5030	3.0 Amp Laser Diode Driver
5060	6.0 Amp Laser Diode Driver

Accessories

500-02	Laser Diode Driver Cable
500-04	Laser Diode Driver/Mount Cable
5000-RACK	Rack Mount Kit

Newport Corporation also supplies temperature controlled mounts, lenses, and other accessories. Please consult with your representative for additional information.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.4 Safety Terms and Symbols

1.4.1 Terms

The following safety terms are used in this manual:

The **WARNING** heading in this manual explains dangers that could result in personal injury or death.

The **CAUTION** heading in this manual explains hazards that could damage the instrument.

In addition, a **NOTES** heading gives information to the user that may be beneficial in the use of this instrument.

1.4.2 Symbols

The following symbols are used in this manual and on the instrument:


Power Off

Power On



Refer to the documentation.


Earth Ground

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.4.3 General Warnings and Cautions

The following general warnings and cautions are applicable to this instrument:

WARNING

This instrument is intended for use by qualified personnel who recognize shock hazards or laser hazards and are familiar with safety precautions required to avoid possible injury. Read the instruction manual thoroughly before using, to become familiar with the instrument's operations and capabilities.

WARNING

The American National Safety Institute (ANSI) states that a shock hazard exists when probes or sensors are exposed to voltage levels greater then 42 VDC or 42V peak AC. Do not exceed 42V between any portion of the Model 5000 (or any attached detector or probe) and earth ground or a shock hazard will result.

CAUTION

There are no serviceable parts inside the Model 5000. Work performed by persons not authorized by Newport Corporation may void the warranty. For instructions on obtaining warranty repair or service please refer to Chapter 8 of this manual.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

CHAPTER 2

2. System Operation

2.1 Introduction

This chapter describes how to operate the 5000 Laser Diode Driver. Unless otherwise noted, 5000 refers to the entire Model 5000 family.

2.2 Installation

CAUTION
Although ESD protection is designed into the 5000, operation in a static-fee work area is recommended.

2.2.1 AC Power Considerations

The 5000 can be configured to operate at a nominal line voltage of 100, 120, 220, or 240 VAC. Normally, this is done at the factory and need not be changed before operating the instrument. However, be sure that the voltage setting is correct on the power input module and correct fuses are installed per section 0 before connecting to an AC source. The 5000 is shipped set for 120 VAC and a caution sticker is placed on the input power connector.

CAUTION
Do not exceed 250VAC on the line input.

Do not operate with a line voltage that is not within ±10% of the line setting. Too low of an input voltage may cause excessive ripple on the DC supplies. Too high of an input voltage will cause excessive heating.

WARNING
To avoid electrical shock hazard, connect the instrument to properly earth-grounded, 3-prong receptacles only. Failure to observe this precaution can result in severe injury or death.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.2.2 Tilt-Foot Adjustment

The 5000 has front legs that extend to make it easier to view the LCD display. To use them, place the 5000 on a stable base and rotate the legs downward until they lock into position.

2.2.3 Rack Mounting

The 5000 may be rack mounted by using a 5000 rack mount kit. All rack mount accessory kits contain detailed mounting instructions.

2.2.4 Ventilation Requirements

Rear panel area needs 2 to 4 inches of clearance for air circulation.

2.2.5 Power-Up Sequence

With the 5000 connected to an AC power source, set the power switch to "**I**" to supply power to the instrument and start the power-up sequence.

During the power-up sequence, the initialization screen is displayed. The software version is displayed in the lower left corner of the screen. During this time a self-test is performed to ensure that the 5000 hardware and software are communicating. If the 5000 cannot successfully complete this test, an error message will be displayed.

After this test, the 5000 is configured to the state it was in when the power was last shut off and displays the main display.

2.2.6 Quick Start

After the power-on sequence is complete, the 5000 goes to the laser display. To set up the laser driver, press the **MENU** button, then select laser setup. At this point, the display shows all laser parameters. Using the cursor keys and dial, select the desired functions and set the parameter values. When finished, return to laser display by pressing the **MENU** button.

Enter the desired set point value using the cursor keys or the dial. Press the **LDD ON** button to operate the laser. The LED illuminates to indicate laser operation. To turn the laser off, press the **LDD ON** button.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.3 Introduction to the 5000 Front Panel

2.3.1 Model 5000

Described below are the functions of each area of the Model 5000 front panel, as shown in Figure 1.

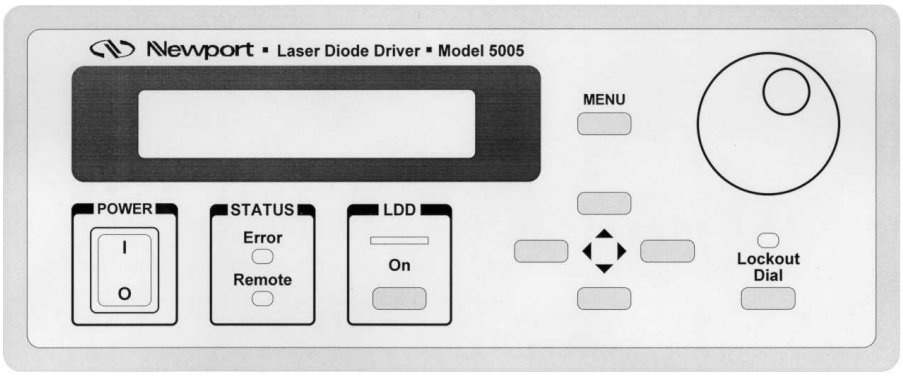


Figure 1 - Model 5000 Front Panel

1. **Power On/Off Switch** - Switches on/off the AC power to the unit.
2. **Error LED** - Indicates that an error has occurred. Instrument will also display the error message on the LCD display. See section 9 for additional information on errors.
3. **Remote LED** - Indicator will light to show when the unit is being computer controlled. See section 2.4.3.3 for additional information on remote mode.
4. **Laser Active LED** - Indicates laser output is on.
5. **LDD On Button** - Turns the laser output on/off.
6. **Cursor Control Keys** - Moves cursor up or down between editable data fields. The left arrow decrements values in numerical entry fields, or as a previous choice in a multi-choice entry field. The right arrow increments values in numerical entry fields, or as a next choice in multi-choice entry fields. See section 2.4.1.3 for a description of data fields.
7. **MENU Key** - Switches to the menu from the main screen, or back to the main screen from the menu (see section 2.4).
8. **Lockout Dial Indicator Key** - Used to enable/disable use of the dial.
9. **Dial** - Used to continuously vary certain parameters. The dial has an acceleration factor that causes the rate of change to increase as the dial is turned faster. Turning slowly allows for a fine adjustment at the smallest displayed decimal place.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.4 General Operation

2.4.1 Display Elements

The Model 5000 uses a character display to depict information about the current state of the system. The display can be broken down into four basic elements: static fields, non-editable data fields, editable data fields, and controls.

2.4.1.1 Static Fields

Static fields are elements on the display which do not change from moment to moment. These can include screen titles and error messages.

2.4.1.2 Non-Editable Data Fields

Non-editable data fields are used mainly to display read back information, such as laser current, voltage, etc. These fields can have a prefix or suffix label, such as "**Io=**" or "**mA**", and are periodically updated by the system.

2.4.1.3 Editable Data Fields

Editable data fields are used for laser and system settings such as current set point, voltage limit, display contrast, etc. An editable field has three distinct display states: focused, non-focused, and read-only.

The focused state indicates that the field has the input "focus." When the field has the focus, a right pointing arrow (→) is placed to the left of the field. Any keyboard entry or dial adjustment will be applied to the field, and only one field at a time on the display can have focus. Move between fields using the up and down arrow keys.

The non-focused state indicates that the field is editable, but does not currently have the focus. These fields are indicated with a right pointing triangle (‣) to the left of the field. Using the up and down arrows, focus can be moved to these fields.

When the editable data field is in the read-only state, it looks and acts exactly like a non-editable data field. Like the non-editable data field, it cannot have focus, and the up or down arrow keys will skip over the field. This state is used primarily to lockout specific data elements from front panel change when the Model 5000 is in remote mode. Any IEEE-488 or RS-232 communication will place the unit in remote mode, and editable fields that are protected during remote operations change to the read only state.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.4.1.3.1 Changing Data Fields

A data field can only be changed from the front panel when the field is the focus. Some fields are numeric-based, such as current set point or limits. Other fields are multi-choice fields, such as Yes/No fields. Both types are changed with the left and right arrows or the dial.

2.4.1.4 Controls

There are certain functions in the 5000, such as setting the photodiode zero reference, that require a “button push”. Because the 5000 has no additional buttons to do this function, it uses a “soft button”. A soft button is similar to an edit field, but instead of selecting a value with the left and right arrow keys when the field is selected, the left and right arrow keys function as custom defined buttons for as long as that field is selected. For example, the return to local function is not a setting or value, but a state of operation. A soft button for return to local might look like this:



When this field is selected, as in this example, pressing the right arrow key would set the unit to local mode. There are also elements on the 5000 which us the left arrow as well, such as this example:



In this case, pressing the left arrow key will set the photodiode zero reference to the current input level, and pressing the right arrow key would clear the zero reference.

2.4.2 Main Screen

The system main screen is shown below, and is discussed in detail in section 3.5.2 and later. The screen is displayed after power on initialization, and its displayed elements will depend on the mode of operation. In this example, the unit is in constant current mode, displaying the current set point, photodiode read back, and voltage read back.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

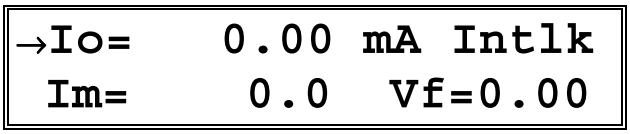


Figure 2 - Main Screen

2.4.3 Menu Structure

The 5000 has a simple menu structure for changing the operation settings, such as limits, communications parameters, and so forth. Each menu group has settings accessible by first pressing the **MENU** button, then using the cursor keys to navigate through the menus. When discussing the menu items within a menu, all the items are shown in a single box.

NOTE
The 5000 display is a two line display, therefore only two elements will be visible at a time.

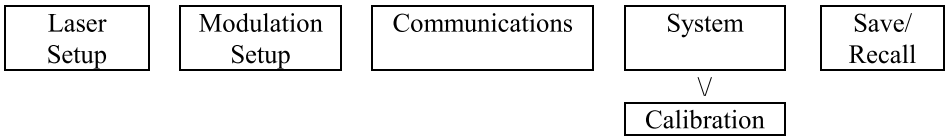


Figure 3 - Model 5000 Menu Groups

2.4.3.1 Laser Setup Menu

The Laser Setup menu is covered in section 3.5.3, and covers settings that pertain to the operation of the laser, such as mode, limits, bandwidth, and so forth.

2.4.3.2 Modulation Setup Menu

The Modulation Setup menu is covered in section 3.5.4, and covers settings that pertain to the modulation operating mode (off, internal, external) and the internal modulator settings.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.4.3.3 Communications Menu

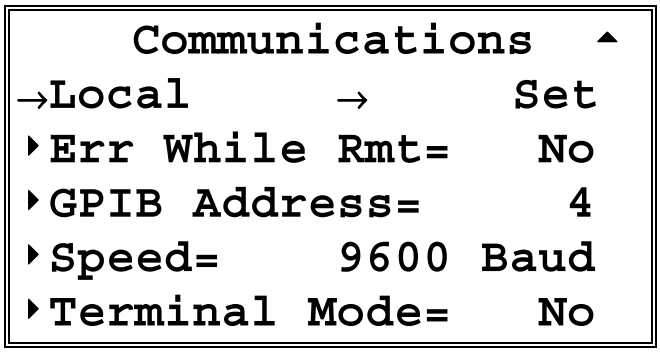


Figure 4 - Communications Menu

The Communications menu contains the setup parameters for GPIB and RS-232C communications.

The **Local** soft button will return the 5000 to local mode after being controlled over GPIB or RS-232C.

Error messages may appear on the display when error conditions occur which force the output off or reflect hardware errors in the 5000. Display of error messages on the 5000 screen may be disabled while in remote mode by setting **Err While Rmt** to **No**. Errors will continue to accumulate in the error queue, but will not be displayed on-screen.

GPIB Address selects the device address on the GPIB bus. The allowed range is 1 to 31.

Speed controls the speed of the RS-232C interface. The allowed speeds are 300, 1200, 2400, 4800, 9600, 19200, and 38400. The parity is NONE, and data bits are 8.

Terminal Mode controls the system prompt when communicating over the RS-232C interface. See the section on terminal mode in the ***Computer Interfacing Manual***.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.4.3.4 System Menu

The system configure menu controls basic operation of the 5000 system.

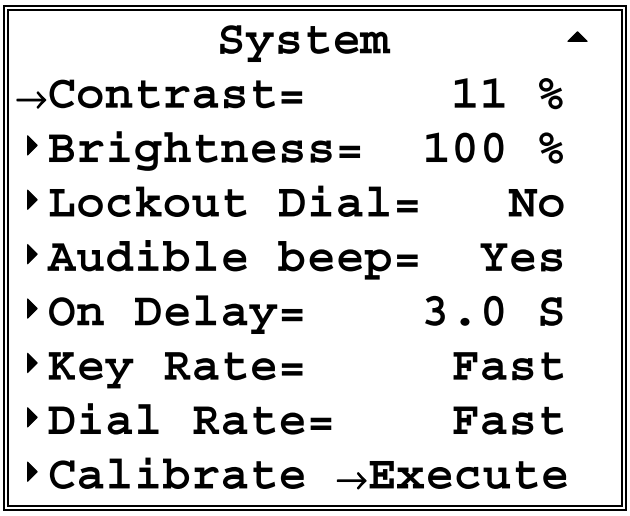


Figure 5 - System Configure Menu

Brightness varies the back lighting intensity. **Contrast** is used to optimize the viewing angle.

Audible Beep controls the system's audible beeper. The beeper indicates errors, invalid data entry, and other situations where the 5000 needs to alert the user.

Lockout dial disables the unit's dial. This is the same as pressing the **Lockout Dial** key on the front panel.

On Delay controls the delay time from the moment a Laser Diode Driver is turned on by the user to the actual time the output is energized. The delay time is programmable from 0 seconds to 30 seconds. The default setting is 3 seconds.

Key Rate - this controls the speed at which, when a key is held down, it repeats. Settings are **Slow**, **Medium**, and **Fast**.

Dial Rate - like the **Key Rate** setting, this controls the acceleration of the dial as it is turned. Settings are **Slow**, **Medium**, and **Fast**.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Calibrate->Execute gains access to the Calibration menu. See section 2.4.3.4.1 below for additional information on the calibration menu.

2.4.3.4.1 Calibration Menu

The calibration menu is used to access the 5000 calibration functions. Only qualified persons who fully understand the calibration procedure should perform these calibrations. Each of the calibration procedures are described if detail in Chapter 7.

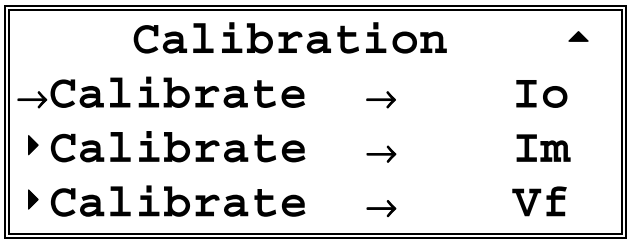


Figure 6 - Calibration Menu

Because these are soft buttons, to use any of the calibration functions, first select the function, then press the right arrow key.

For each of the functions, see the following sections:

Io calibration: section 7.2.3.
Im calibration: section 7.2.5.
Vf calibration: section 7.2.7.

2.4.3.5 Save/Recall Menu

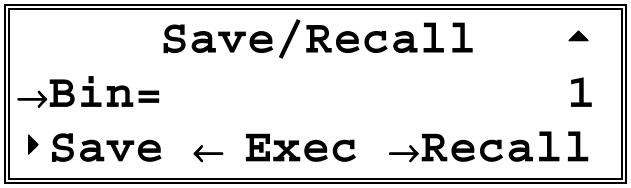


Figure 7 - Save/Recall Menu

The Save and Recall functions are used to store and retrieve 5000 setup configurations for future use. For example, a specific test setup may be saved for later use, and then another setup may be used presently. Then, when the user desires to perform the specific test, its setup is simply recalled.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Non-volatile memory is used for saving the instrument parameters. When a save operation is performed, all of the parameters that are currently in effect on the 5000 are stored. The user selects a "bin" number (1 - 5) for saving the parameters. Then, when that "bin" number is recalled, the 5000 is restarted and the parameters are reconfigured to the previously stored values.

A special "bin 0" is reserved for the reset state. Recalling bin 0 will reset the driver to factory defaults.

2.5 Rear Panel Familiarization

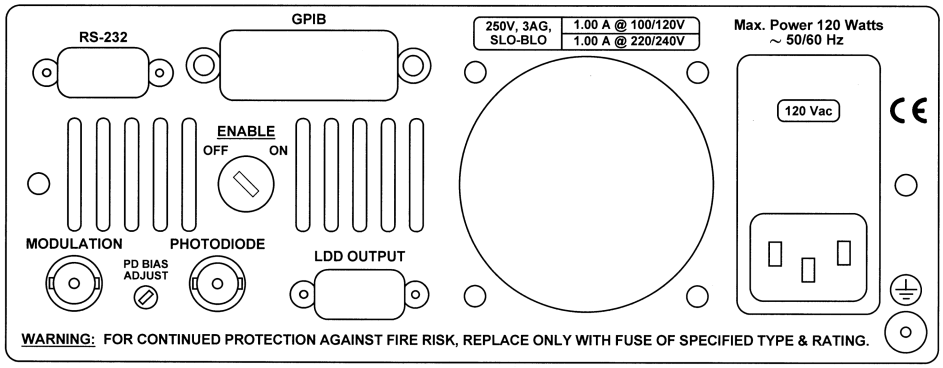


Figure 8 - Rear Panel

2.5.1 RS-232 Connector

The 5000 has an RS-232 connector located on the back panel. See the ***Computer Interfacing Manual*** for a more complete description of the RS-232 interface.

2.5.2 GPIB Connector

The GPIB connector, located on the back panel, allows full remote control as described in the Computer Interfacing Manual. It accepts a standard IEEE-488 cable for remote control, and uses Metric lock screws. See the ***Computer Interfacing Manual*** for a more complete description of the GPIB interface.

2.5.3 Modulation BNC Connector

The Modulation connector provides external modulation control.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.5.4 Photodiode Bias Adjust

The photodiode bias adjust controls the photodiode bias voltage.

2.5.5 Photodiode BNC Connector

The photodiode connector allows the connection of a BNC terminated photodiode. This connection is the same as the photodiode pins on the LDD connector.

2.5.6 LDD Output Connector

The LDD Output connector provides the laser and photodiode connection. See section 3.4.1 for a detailed description of the LDD output connector.

2.5.7 Key Switch

The key switch provides a method of locking the unit from unauthorized use.

2.5.8 Input Power Connector

Accepts a standard line cord for AC input. Also selects one of four AC input settings: 100V, 120V, 220V, and 240V. The cord must be removed to change the setting. A small screwdriver will open the top of the module and expose the rotary switch. Select the range that is closest to your expected nominal RMS line voltage. The voltage selection is set for 120 VAC prior to shipping.

CAUTION

Do not exceed 250 VAC on the line input.

Do not operate with a line voltage that is not within ±10% of the line setting. Too low of an input voltage may cause excessive ripple on the DC supplies. Too high of an input voltage will cause excessive heating.

2.5.9 GND Post

Provides access to chassis ground, which is also an earth ground as long as a standard 3-wire line cord is used. This is a protective conductor terminal to be used to achieve chassis grounding requirements when the main connectors don’t provide an earth ground terminal. Use a minimum of 18 gauge wire to connect to this terminal.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.6 Warm Up and Environmental Considerations

Operate the 5000 at an ambient temperature in the range of 0 to +40°C. Storage temperatures should be in the range of -20 to +60°C. To achieve rated accuracy, let the 5000 warm up for 1 hour. For greatest accuracy, recalibrate when ambient temperature changes more than a few degrees.

CAUTION
Operating above +40°C can cause excessive heating and possible component failures.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

CHAPTER 3

3. Laser Diode Driver Operation

3.1 Laser Diode Driver

3.1.1 Introduction

Features of the 5000 Series include:

- Closed-case calibration
- High-stability, low noise design
- Flexible setup with 5000 Save/Recall front panel functions
- Photodiode feedback control mode
- Internal modulation source
- External modulation input
- Fault detection
- Current and voltage limiting

CAUTION
Although ESD (electrostatic discharge) protection is designed into the driver, operation in a static-free work area is recommended.

3.1.2 Laser Diode Protection Requirements

Laser diodes are extremely sensitive to electrostatic discharge and current spikes (transients). ESD is the primary cause of premature laser failure. Damage can result in reduced output power, shift in threshold current, changes in beam divergence, and ultimately failure to lase (resulting in LED-like output only).

Newport precision current sources and controllers offer the most advanced laser protection features available, including power line filters, clamping current limits, and slow-start-up circuits.

However, no instrument can protect against all conditions, especially ESD at the laser. In order to optimize immunity from radiated or conducted

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

electromagnetic energy, e.g. static discharge, the following guidelines for the laser diode must be adhered to:

- As a minimum, use anti-static wrist straps (grounded with 1 MΩ resistor), anti-static floor coverings, grounded soldering irons, and grounded work areas. Ionized air blowers are also recommended.
- Laser diode leads should be shorted whenever the laser is transported or stored.
- Select a driver with the lowest possible current rating that still exceeds the laser's maximum operating current. For example, a laser with a maximum operating current of 150 mA should be driven by the 5005 500mA laser driver.
- Recess the laser diode inside a metal shielded enclosure, such as a Model 700C laser diode mount, recessed at least ¼" with the minimum aperture necessary to allow beam exit (less than 0.125").
- If industrial loads are switched in or near your laboratory, use isolation transformers and/or surge suppressor power strip with your laser current source.
- Isolate your laser current driver with a surge suppresser when using a common line with laboratory power supplies, soldering irons, or other electronic instruments. Avoid using such devices on the same surge suppresser as your laser source.
- Make sure all the cables to the laser diode are securely fastened. Avoid "bundling" current source cables with other cables in your laboratory,
- Set current and voltage limits to appropriate levels, following the laser manufacturer's recommendations (or to just above the expected operating current). Suggestions include setting the compliance voltage no more than 10% above Vf, and setting the current limit at or below the maximum operating current of the laser diode.
- ***Avoid ground loops. Don't ground the LDD cable shield to a grounded enclosure in which you mount the laser diode***.

Added protection from electrostatic surges or surges from the circuitry can be obtained by inserting ferrite beads and capacitors near the laser diode as shown below.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

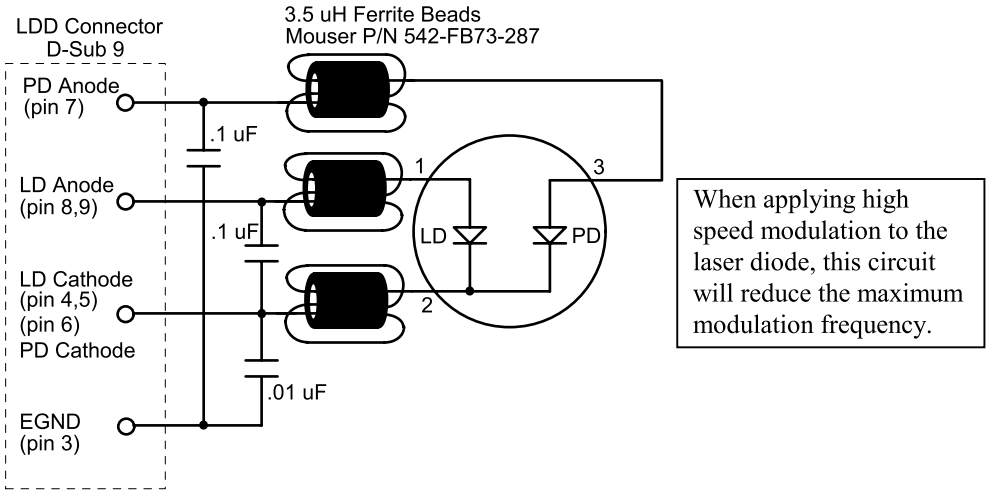


Figure 9 - Laser Diode Protection Circuit

3.2 Laser Safety Features

3.2.1 Conditions Which Can Automatically Shut Off the Laser Output.

- Laser Open Circuit[1]
- Laser Compliance Voltage Limit[1]
- Laser Hard Current Limit[1]
- Laser Interlock State Changed[1]
- Laser Photodiode High Current Limit
- Laser Photodiode High Power Limit
- Laser Intermittent Contact (if enabled, default disabled)

Clearing the appropriate bits in the Laser OUTOFF register can disable some of these conditions. See ***Computer Interfacing Manual*** for more information.

3.2.2 Key switch interlock

The keyswitch, located on the back panel of the 5000, will shutoff, or not allow to be turned on, the laser output while in the OFF position, per CDRH requirements.

[1] This condition will always shutdown the laser output, and cannot be disabled.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.2.3 Lockout Dial Button

The **Lockout Dial** button on the front panel located below the control dial disables the dial. This prevents any inadvertent changes in the output by accidental movement of the control dial.

3.2.4 Turn On Delay

The 5000 is CDRH Compliant with a user programmable turn on delay. The default turn on delay is three seconds, but is user programmable from 0 to 30 seconds. The delay setting is in the system menu (see section 2.4.3.4). The field is labeled **On Delay**.

3.3 The Laser Connectors

On all laser drivers, a 9-pin female D-connector is used for input and output connections, as shown by the pin-out diagram below. See Figure 8 for an illustration of the back panel.

Pin	Description
1,2	Interlock
3	Chassis Ground
4,5	Laser Cathode
6	Photodiode Cathode (+)
7	Photodiode Anode (-)
8,9	Laser Anode

Table 1 - Laser Connector Pinouts

3.3.1 External Modulation

CAUTION
Do not connect or disconnect a signal to the modulation input with the laser on.

A BNC connector is provided for an external modulation signal. See section 3.5.3.2 for a description of modulation bandwidth. See section 3.5.4 for a description of modulation setup.

Each 100 mV change in the modulation input is equal to 1% of the maximum drive current of the driver. For example, 100 mV input on a 5060 LDD driver (6 Amp) would equate to 60 mA of drive current. However, regardless of the input voltage, the current cannot exceed the current limit.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.3.2 Photodiode Bias Control

An adjustment is provided on the back panel for 0V to 5V reverse bias adjust.

3.3.3 Photodiode

CAUTION
Do not disconnect the photodiode with the laser on.

A BNC connector is provided for photodiode connections, with the center pin the anode connection and the outer shell the cathode connection. It is the same input as pins 6 and 7 in the 9-pin D connector with the anode on the shell.

3.3.4 Interlock

The interlock pins, 1 and 2, must be connected together to complete the circuit and allow the laser operation. Internally, pin 1 is connected to a +5V supply through a 10 kΩ resistor and pin 2 is connected to ground through a 1 kΩ resistor.

3.4 Connecting to Your Laser

When connecting laser diodes and other sensitive devices to the driver, we recommend that the 5000 be powered-up and the laser output be off. In this condition, a low impedance shunt is active across the output terminals. When disconnecting devices, it is only necessary to turn the laser output off.

Pins 4 and 5 of the 9-pin D-connector are the negative output, and pins 8 and 9 are the positive output current connections. These pins are jumpered to provide greater contact area for the output connection.

NOTE
Whenever external connections are made to the output at pins 4 and 5, and 8 and 9, these connector leads should be jumpered to ensure the greatest laser diode safety.

We also recommend the use of the 9-pin D-connector for your interface rather than binding posts, or loose wires. This will insure the best connection.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.4.1 Laser Diode Connections and Shielding

CAUTION

Before connecting the laser diode to the unit, be sure that the **ENABLE** key switch is in the OFF position. Before turning on the laser output, be sure that the current limit and voltage compliance limit has been correctly set.

NOTE

The cable connections to the laser must be secure to avoid an open circuit, should they be jostled or bumped. Should an open circuit occur during laser operations, the laser output will normally be turned off automatically.

Special circuits in the laser driver are present for detecting intermittent contacts and connections. These circuits detect the abrupt change in current that occurs when the output circuit is opened, and the 5000 will generate an E-503 error.

Experience indicates that should an open circuit occur during laser operation, the laser may be damaged. Therefore, secure cabling is important.

NOTE

Although the intermittent contact circuitry works well in helping to protect the laser diode, there is still a danger in having poor connections, as no circuit can protect completely.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

NOTE

It is possible with some modes of modulation, especially square-wave, to trigger the intermittent contact circuit and cause a shutdown. If this is the case for you, the intermittent contact feature may be disabled in the laser set up menu, with reduced laser protection in the case of poor connections.

It is recommended that the connections to the unit output be made using twisted wire pairs with an earth-grounded shield available at pin 3. The output terminals of the unit are left floating relative to earth ground to suppress AC power-on/power-off transients that may occur through an earth-ground path. If the output circuit is earth-grounded at some point (such as through the laser package and mount), the user must be careful to avoid multiple earth grounds in the circuit. Multiple earth grounds may short out the driver and may damage the laser.

See section 3.1.2 for additional information on laser diode protection.

3.4.2 Photodiode Feedback Connections

The photodiode signal is input at the 9-pin D-connector at pins 6 and 7, or the photodiode BNC.

Many laser diode drivers contain an internal photodiode that monitors the back-facet emission of the laser. Usually, one side of the photodiode is internally connected to either the laser anode or cathode. Figure 10 through Figure 13 show the recommended connections and shielding for the various configurations of laser diode drivers and photodiode feedback schemes. The photodiode circuit is isolated from ground and the laser circuit. The output connector shown below is the 9-pin D-sub on standard laser drivers.

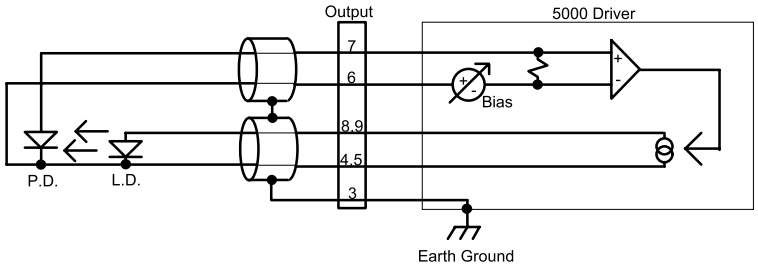


Figure 10 - Common Laser Cathode / Photodiode Cathode

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

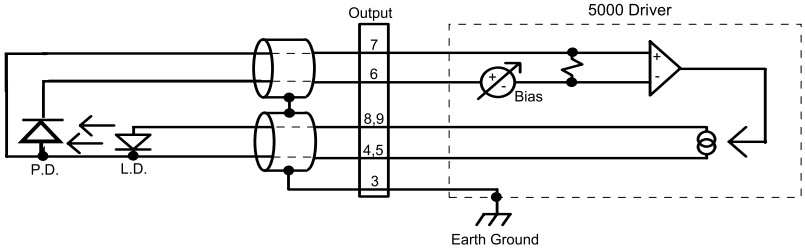


Figure 11 - Common Laser Cathode / Photodiode Anode

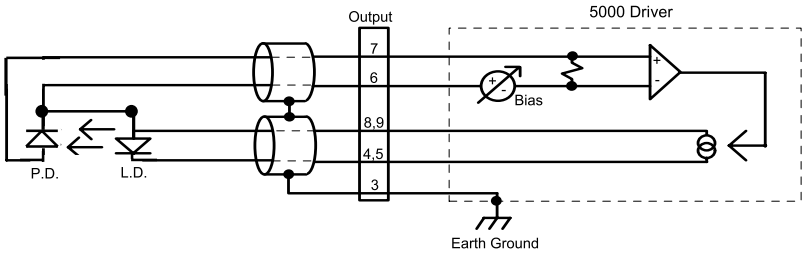


Figure 12 - Common Laser Anode / Photodiode Cathode

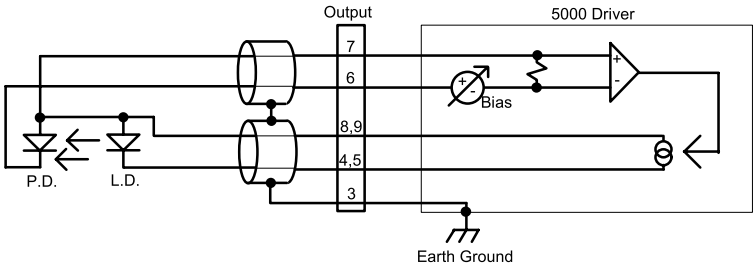


Figure 13 - Common Laser Anode / Photodiode Anode

3.4.3 Grounding Consideration

The laser outputs of the driver are isolated from chassis ground allowing either output terminal to be grounded at the user's option.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.5 Laser Driver Operation

3.5.1 Quick Start

After the power-on sequence is complete, the 5000 goes to the main display. To set up a laser driver, press the **MENU** button, then select laser setup. At this point, the display shows all laser parameters. Using the cursor keys and dial, select the desired functions and set the parameter values. When finished, return to laser display by pressing the **MENU** button.

Enter the desired set point value using the cursor keys or the dial. Press the **LDD ON** button to operate the laser. The LED illuminates to indicate laser operation. To turn the laser off, press the **LDD ON** button.

3.5.2 Laser Main Screen

The laser main screen in shown in Figure 14 and described in detail below.

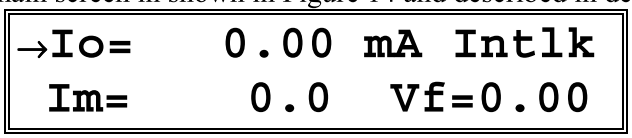


Figure 14 - Main Screen

Io=, **Im=** or **Po=** : When these fields are editable, such as the **Io=** field in the figure above, they indicate the corresponding set point. Non-editable fields, such as the **Im=** and **Vf=** fields above, indicate measured values, such as laser current or voltage, photodiode current, or photodiode power.

The upper right corner of the display functions as a status indicator. The possible status conditions include:

Ilim	Driver is operating at the Io current limit
Imlim	Driver is operating at or over the Im current limit
Polim	Driver is operating at or over the Po current limit
Intlk	Interlock fault: key switch is off or interlock circuit is open
OutT	Driver set point is out of tolerance

3.5.3 Laser Setup Menu

The laser setup menu for the Model 5000 is shown in Figure 15 and described in detail below.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

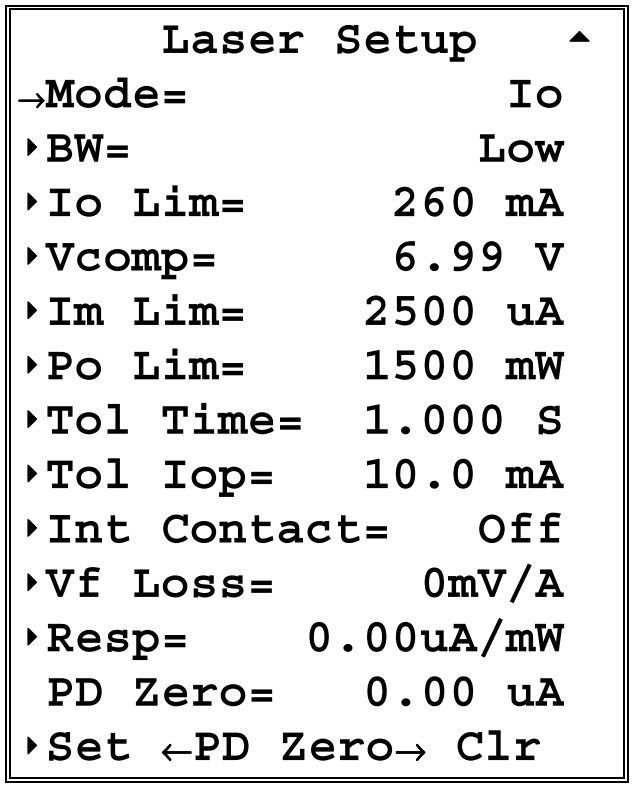


Figure 15 - Laser Setup Menu

3.5.3.1 Mode

The **Mode** setting controls how the laser driver current is controlled. There are three modes: **Io**, **Im**, and **Po**.

In the **Io** mode, the active set point is the actual drive current. A set point of 1000 mA will cause the driver to drive 1000 mA through the laser diode, assuming the **Io Lim** is set at or above 1000 mA.

In **Im** mode, the set point is the desired amount of photodiode current, in µA. Unlike the **Io** mode, **Im** mode will drive whatever current is necessary though the laser diode, up to the limit, to achieve the set point photodiode current.

Po mode is simply an extension on the **Im** mode, allowing the user to operate the system in milliwatts of power. The photodiode power set point,

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

in mW, is converted to photodiode current using the **PD Resp** value from the setup menu.

3.5.3.2 Bandwidth (BW)

This setting is used to control noise and laser current modulation rates. Allowable settings are **Low** and **High**. **Low** allows up to 10 kHz modulation, while **High** allows full bandwidth modulation.

3.5.3.3 Io Lim

As one of the safety features of the laser driver, the **Io Lim** sets a maximum allowable current drive for the laser diode. The system will also limit current set points to this value when operating in the **Io** mode. Two conditions can be generated when the driver reaches this limit. The lesser of the two is the soft current limit. The soft limit, indicated by **I** on the status line of the Laser Main Screen, indicates that the laser driver is limiting the current drive to the laser diode, but otherwise operating as normal. The second condition is a hard limit, which indicates that the current drive attempted to exceed the current limit faster than the circuitry could limit it. This condition causes the laser driver's output to be shutdown. Both of these conditions are monitored in circuitry on the driver itself, and in the case of the hard limit, shutdown is within microseconds of the condition being detected. See section 3.1.2 for additional information on laser diode protection.

3.5.3.4 Vcomp

The voltage compliance setting controls the shutdown of the laser driver output when the forward voltage of the laser exceeds the compliance setting. Like the current limit described above, the voltage compliance is monitored in circuitry on the driver itself, allowing for shutdown within microseconds of the condition. See section 3.1.2 for additional information on laser diode protection.

3.5.3.5 Im Lim

The photodiode current limit is a software monitored limit on the current delivered from the photodiode. Because this limit is a software monitored limit, shutdown can occur up to a second after the condition is true.

3.5.3.6 Po Lim

Like the **Im Lim**, the photodiode power limit is a software monitored limit on the power delivered from the photodiode. For this limit to function, the user must set a **PD Resp** value other than zero. Because this limit is a

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

software monitored limit, shutdown can occur up to a second after the condition is true.

3.5.3.7 Tol Time and Tol Iop

The **Tol Time** and **Tol Iop** elements are used for determining when the laser is "in tolerance." The **Tol Time** value is expressed in seconds, and can range from 0.001 seconds to 50 seconds. The **Tol Iop** value is displayed in mA, and can range from 0.1 mA to 100 mA. When operating in **Im** or **Po** modes, The **Tol Iop** setting is ignored, and fixed values of 50 µA and 50 mW, respectively, are used. The laser is considered in tolerance after it has been within the tolerance setting for the set number of seconds. If at any time it goes outside the tolerance range, the time restarts at zero.

As an example, if the **Tol Time** is set to 5 seconds, the **Tol Iop** is set to 2 mA, and the current set point was 1000 mA, the laser driver would have to stay within 998 mA and 1002 mA to be within tolerance. Out of tolerance is indicated by a **OutT** status field on the bottom of the Laser Main Screen.

3.5.3.8 Intermittent Contact (Int Contact)

The **Int Contact** setting controls the detection of intermittent contacts caused by faults cables or connectors. An intermittent contact, if enabled, will shutdown the laser with an open circuit error. The system allows the user to disable the circuit when working in an electrically noisy environment that might cause a false detection.

3.5.3.9 Vf Loss

Vf Loss allows for compensation of voltage loss in the output cable. In applications where small gauge wire is used, current can cause a measurable loss in voltage across the cable. By measuring the voltage directly at the diode and comparing the difference of the displayed voltage reading, an error factor can be calculated and entered as the Vf loss. Note, however, that the Vf loss value does ***not*** affect the Vcomp setting. Voltage compliance settings must include any loss in the cable.

3.5.3.10 Resp

The **Resp** element is the photodiode response conversion factor between photodiode current and photodiode power, and is expressed in µA per mW. If this value is zero, the system will not operate in **Po** mode.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.5.3.11 PD Zero

The **PD Zero** element is the photodiode offset that is removed from the photodiode read back before any values are displayed, and conversely, is added to any photodiode set point. The photodiode offset is a combination of any dark current or stray light picked up while the laser is off. Pressing the **Set** function (left arrow) while the **PD Zero** soft button is selected sets this element to the photodiode current that is present on the photodiode input. To clear it, simply press the **Clr** soft button.

3.5.4 Modulation Setup Menu

The modulation setup menu for the Model 5000 is shown in Figure 15 and described in detail below.

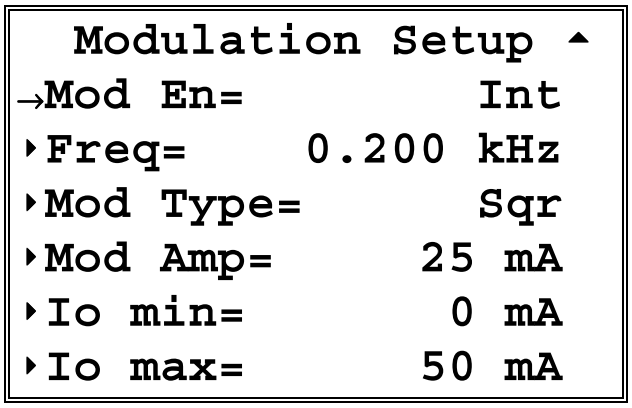


Figure 16 - Modulation Setup Menu

3.5.4.1 Modulation Enable (Mod En)

The **Mod En** sets the over modulation control. The possible settings are **Off**, **Int**, and **Ext**, for off, internal, and external, respectively. **Int** is for using the internal modulator as a modulation source. **Ext** enables the external modulation input port. **Off** disables all modulation and shorts the modulation input.

3.5.4.2 Frequency (Freq)

The **Freq** setting controls the modulation output frequency of the internal modulator. When the modulation is off, changes to this setting have no effect.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.5.4.3 Modulation Type (Mod Type)

Mod Type selects the output waveform, either sine or square wave. The square wave has a fixed 50% duty cycle.

3.5.4.4 Modulation Amplitude (Mod Amp)

The **Mod Amp** value sets the waveform amplitude, which has both a positive and negative component around the set point.

3.5.4.5 Io min and Io max

Io min and **Io max** are an alternative method to using the set point and amplitude values. Instead of thinking of the modulation as a ± value around the set point, **Io min** and **Io max** can be used to set the minimum and maximum current points on the modulation waveform. They will, in effect, change the modulation amplitude and current set point, and simply allow a different method of inputting modulation information.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

C H A P T E R 4

4. Principles of Operation

4.1 Introduction

A functional block diagram of the 5000 is shown in Figure 17. In each of the following sections there are functional block diagrams for the various circuit boards of the 5000.

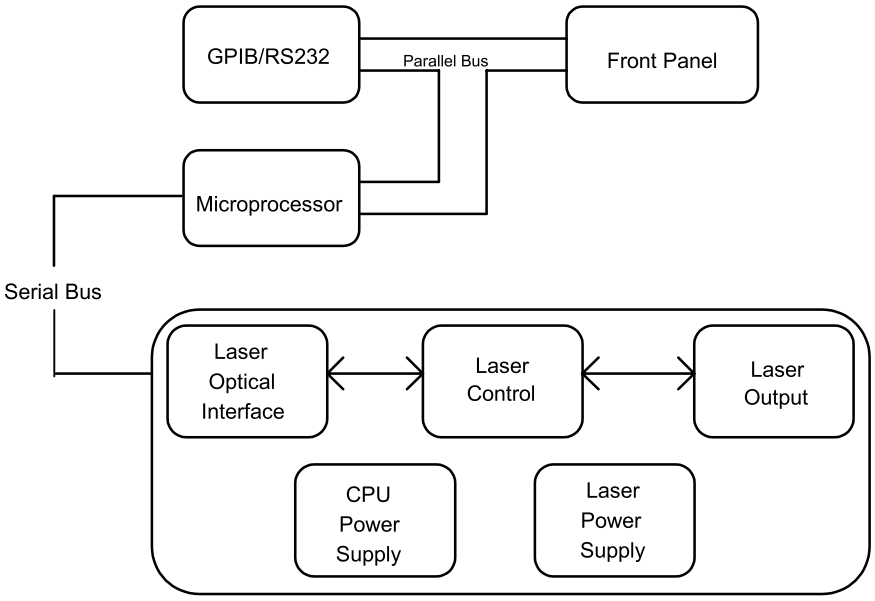


Figure 17 - 5000 Block Diagram

4.2 Laser Driver Theory of Operation

Figure 18 shows the functionality of the Laser Driver. The following sections detail the theory of operation for each of the blocks in Figure 18.

The circuit block diagrams for each laser mode of operation are shown in Figure 19, Figure 20, and Figure 21. The theory of operation for each mode of operation is discussed in Sections 4.2.9 - 4.2.11.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

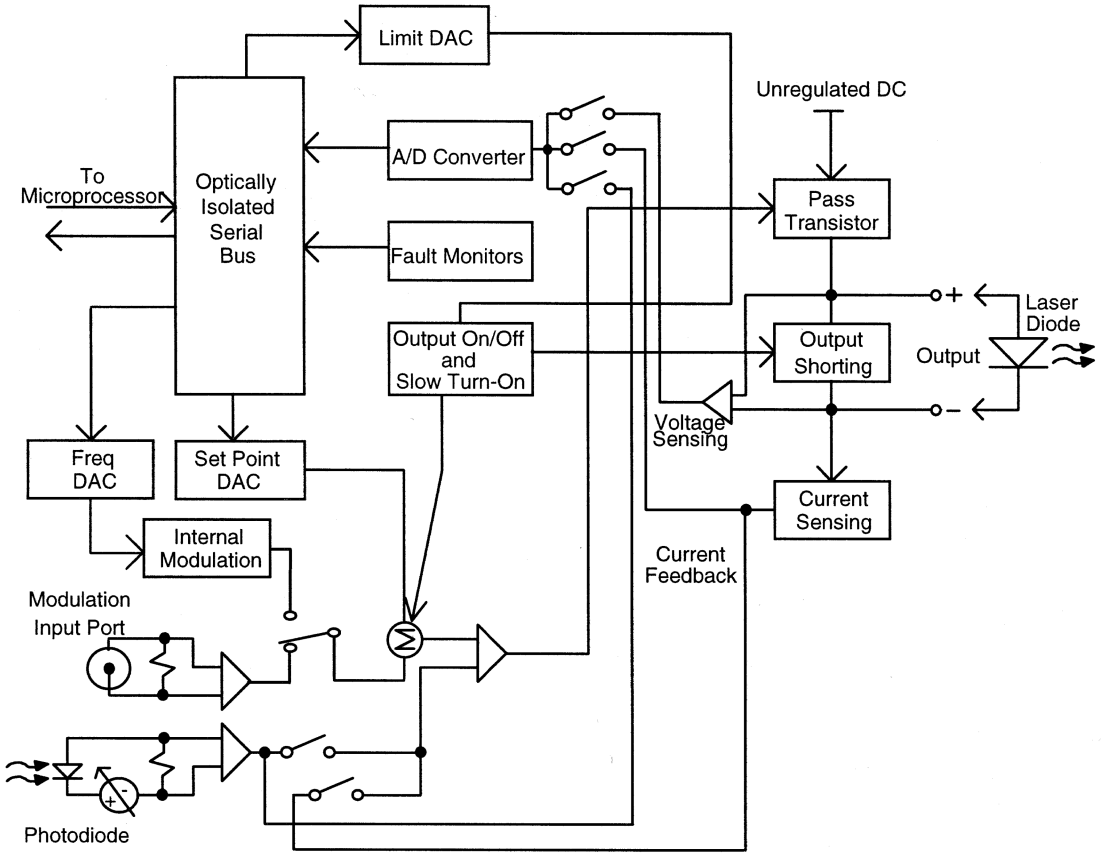


Figure 18 - Laser Driver Block Diagram

Figure 18 - Laser Driver Block Diagram

4.2.1 Laser Interface

The laser interface provides optically isolated serial communications between the laser board and the microprocessor. Control signals are passed to the laser board to set the laser board status, current limit, current set points, and photodiode feedback functions. Instructions and data are sent over the serial interface to the optical barrier. Status and data are serially passed back to the microprocessor.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.2.2 Limit DAC

The microprocessor loads the current limit value into the 12-bit DAC. The Limit DAC converts a digital limit signal from the microprocessor to a voltage which becomes the Limit Set Point voltage for the Output Stage. The current limit value is updated at power-up, at a "bin" recall, and whenever a LIM I value is changed.

4.2.3 Set Point DAC

The microprocessor loads the current set point value into the 16-bit DAC. The Set Point DAC converts a set point value from the microprocessor to a voltage which becomes the current or I_{PD} set point input to the laser output stage. The laser current set point value is updated at power-up, at a "bin" recall, and whenever a laser set point value is changed.

4.2.4 A/D Converter

The 16-bit A/D converter measures the forward voltage, laser current, and photodiode current.

4.2.5 Current Source Voltage

Taking the unregulated DC voltage from the power supply forms the current source voltage.

4.2.6 Output Shorting

A relay shorts the LD anode and LD cathode terminals whenever the laser output is turned off. At the same time a FET is switched on to shunt any current which may appear at the output. When the laser output is turned on, the shunt circuit and short are removed gradually, and in two stages. This ensures transient protection of the laser output.

4.2.7 Modulation/Voltage Control Input Port

The rear panel modulation input connector drives a precision wide-band instrumentation amplifier allowing the differential control signal applied to this port to use a different ground than the laser output terminals. However, due to the input common-mode voltage restrictions the MOD input should be within ±10 volts of the laser output terminals.

Each 100 mV change in the modulation input is equal to 1% of the maximum drive current of the driver. For example, 100 mV input on a 5060 LDD driver (6 A driver) would equate to 60 mA of drive current. However, regardless of the input voltage, the current cannot exceed the current limit.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.2.8 Photodiode Feedback Amplifier

A precision instrumentation amplifier amplifies photodiode feedback. When constant Power mode is selected, the photodiode feedback signal is used to control the laser output.

4.2.9 Constant Current, High Bandwidth Mode

This mode of laser operation is shown in Figure 19. In this mode, current feedback is used to control the laser output. The bandwidth is between 100 kHz and 350 kHz, depending on the model.

4.2.10 Constant Current, Low Bandwidth Mode

This mode of laser operation is shown in Figure 20. In this mode, current feedback is used to control the laser output.

In this mode, capacitors are switched into the circuit. These capacitors act as a filter and therefore prevent the laser output from changing too rapidly. This gives added laser diode protection. This also limits the laser output bandwidth to about 10 kHz.

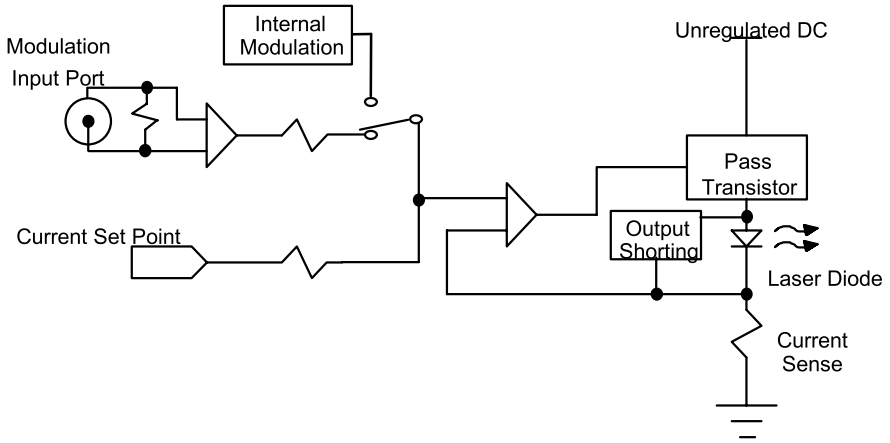


Figure 19 - Constant Current - High Bandwidth Mode

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

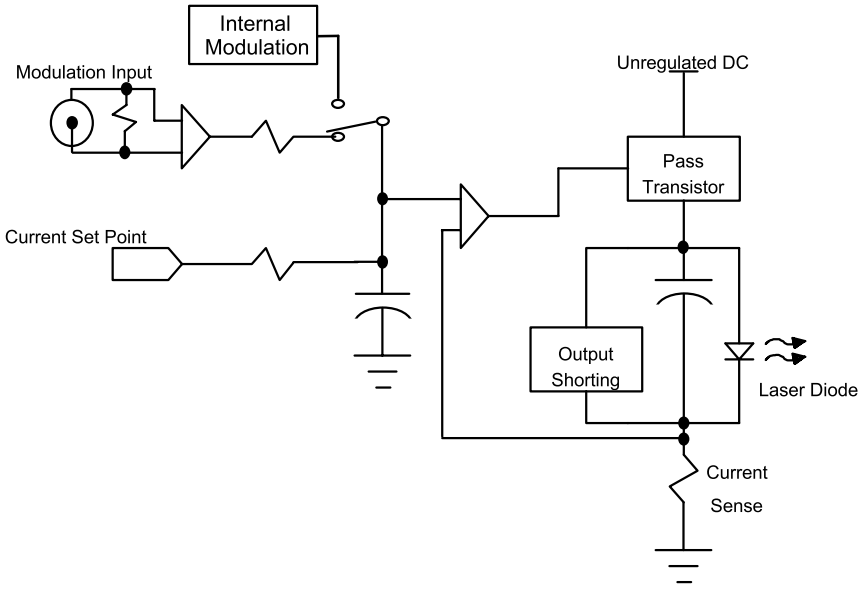


Figure 20 - Constant Current - Low Bandwidth Mode

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.2.11 Constant Power Mode

In constant P mode the laser circuit is configured as shown in Figure 21. Photodiode feedback is used to control the laser output and the bandwidth is held low.

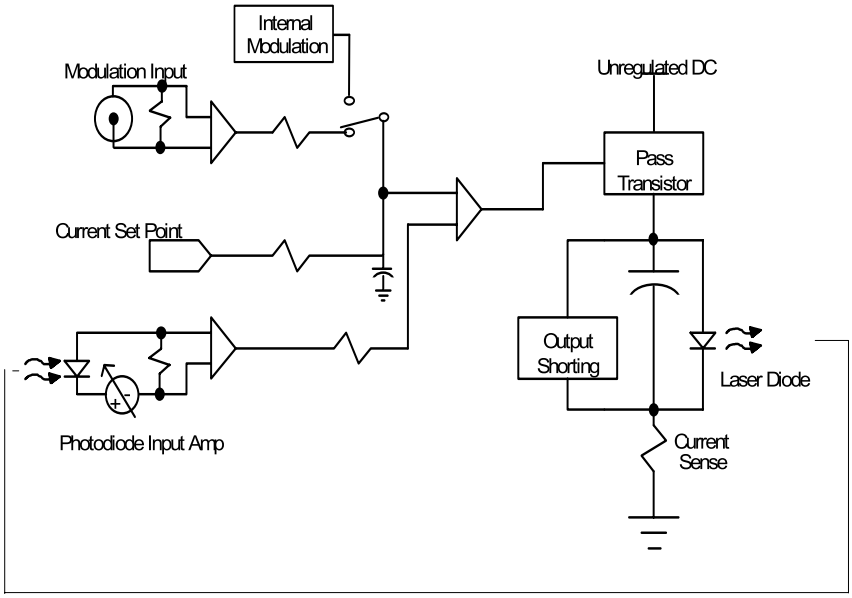


Figure 21 - Constant Power Mode

4.2.12 Internal Modulation

A sine or square wave function generator can be selected for internal modulation. The frequency is controlled by the frequency DAC's output and the sine or square function is controlled by a digital signal.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.3 Microprocessor Board

The Microprocessor Board contains the microprocessor, memory, front panel interface, and circuitry which monitors the AC line voltage and saves the state of the 5000 at power down. The block diagram of the Microprocessor Board is shown in Figure 22.

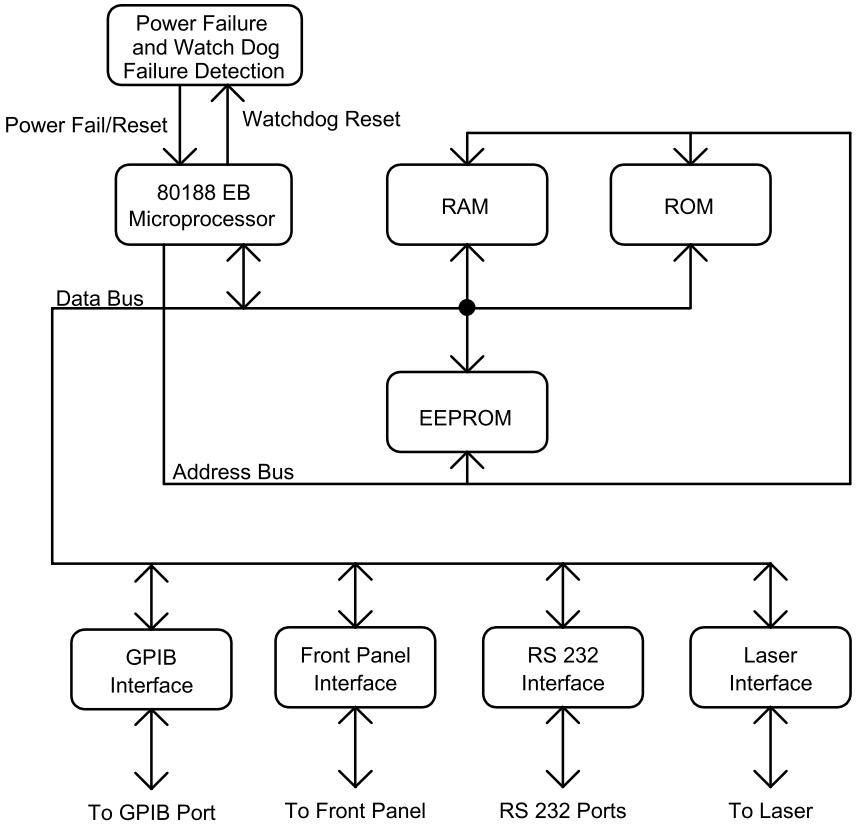


Figure 22 - Microprocessor Board Block Diagram

4.3.1 Microprocessor

The 5000 uses a CMOS 80188EB microprocessor to control its internal operations. The 5000 provides a fail-safe timer which generates a reset in the event of a malfunction. A 1 Hz watchdog pulse is normally present. If for any reason this clock pulse fails to appear it will reset the 5000.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.3.2 Memory

The 5000 uses three types of memory. RAM memory is retained only while power is applied to the unit. ROM memory contains the firmware. The third type of memory is electrically erasable programmable memory: EEPROM.

EEPROM stores calibration constants and other data that must be retained even when power is removed from the unit, and does not require battery backup. Examples of data stored in this memory include the laser parameters and calibration constants.

4.3.3 Laser Interface

The 80188 communicates with the laser driver through a serial port. Parallel data from the microprocessor is converted to bi-directional serial data at the asynchronous serial interface.

4.3.4 Front Panel Interface

Provides parallel communication with the front panel.

4.3.5 GPIB Interface

Provides parallel communication with the GPIB port.

4.3.6 RS-232 Serial Interface

Provides communication with the RS-232C serial port.

4.4 Power Supplies

AC power is supplied through the rear panel input power connector which provides in-line transient protection and RF filtering. The input power connector contains the fuses and the switch to select series or parallel connection of the transformer primaries for operation at 100 VAC, 120 VAC, 220 VAC, or 240 VAC.

4.4.1 LDD Power Supplies

These linear supplies provide analog and digital circuit power to the driver as well as laser drive and photodiode bias.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

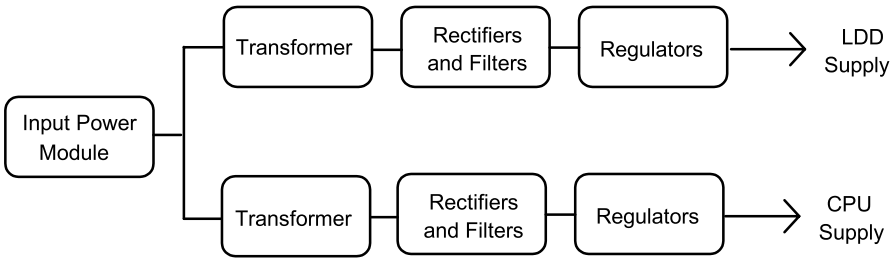


Figure 23 - Power Supply Block Diagram

4.4.2 CPU Supply

This supply provides digital circuit power for all functions except the laser driver. It also provides fan power.

4.5 Interlock Operation

The back panel laser input/output connector has interlock connections that must be connected before the laser output will be enabled. See section 3.3.4 for additional information.

4.5.1 Laser Interlock

On the laser input/output connector pins 1 and 2 form the interlock path. If there is not a connection between these pins the laser output will not be enabled. When this path is broken, the laser Interlock Error condition/event will be reported in the laser Condition Status Register and the Laser Event Status Register.

This interlock is a safety feature for laser protection. It requires that the connecting cable be secure before the laser output is enabled. A secure connection significantly reduces the possibility of an intermittent open circuit to the laser drive current.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

CHAPTER 5

5. Tips and Techniques

5.1 Introduction

This chapter is intended to further explain specific operational details of the Model 5000, as well as provide application examples.

5.2 Laser Limits

The laser driver has several limits to protect the laser diode from damage. The limits include current, compliance, photodiode current, and photodiode power.

Io Limit and Vcomp Limit

Two of these limits, current and compliance, are implemented in hardware. By implementing these limits in hardware, these limits are continuously monitored without any additional load on the main processor. The current limit is actually two limit circuits. The first circuit maintains the current limit by not allowing the drive current to exceed the limit's set point. The form of limiting is called soft limiting, and does not affect the operation of the laser except to limit the drive current. The second circuit monitors the actual current drive, and if that exceeds the limit set point, will shutdown the output. This form of limit is called the hard limit. The laser will always be shutdown on a hard limit.

Operating at or Near Io and Vcomp Limits

Because of the sensitivity of the limit circuits, operating at or near the limit unless necessary is not recommended because AC line transients, RF interference, or static can be enough to trigger these limits. The causes for hard limits and voltage compliance limits can vary, but can include the following:

- Static discharges, which may cause enough noise to trigger the circuit.
- Turning on the laser when its set point is at or near the limit. When turning on the output with the set point at the limit can cause a small overshoot in the drive current, which the limit circuitry may pick up as a hard limit and shutdown the laser.
- The same is true of Im set points that are much higher than what the laser is capable. When turning the laser on with an excessive Im set

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

point, the driver will attempt to drive the necessary current to reach the set point, and hit the current limit so hard that a hard limit condition will occur, shutting down the laser.

Im Limit and Po Limit

Photodiode current and power limits, on the other hand, are implemented in software. Because of this software implementation, it is possible to exceed the photodiode current or power limits for a brief period of time before the condition is detected by the microprocessor. These conditions are checked once per second, so the latency time from the time the condition occurs to when the output would be shut off is at most two seconds. For more detailed information see LASer:TOLerance section of the manual (Computer Interfacing chapter).

5.3 Modulating

Laser modulation is supported by many of the Newport laser diode controllers, and allows external control of the laser operating current. By supplying an input voltage, the operator can set the operating current anywhere within the full range of the laser controller, although the output will still be limited by the current limit.

The modulation input takes a voltage range of 10V. Each 100 mV represents 1% of the driver's maximum operating current, which gives a range of 0% at 0V to 100% at 10V.

Using the Modulation Input as the Set Point

It is possible to fully control the laser set point through the modulation input by setting the laser current at zero from the front panel and turning on the laser output. The modulation input is then summed with the set point (which is zero) to give the actual set point. The voltage can then be ranged from 0V to 10V to give the full range of current output. Note, however, that the current limit is still active, and will not allow the current to exceed the current limit. The set point on the front panel could also be set at 50% full scale and the current could be modulated between zero and full scale by inputting a ±5V modulation signal.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5.3.1 Grounding with Modulation

Most modulators have a BNC output that is connected to earth ground. This is not a problem as long as the laser anode or cathode is not also connected to earth ground. However, in many systems, it is. When it is, the following must be considered:

When the anode is tied to earth ground, this effectively connects earth ground to the laser power supply, which can be up to +10V dc. When the BNC on the modulator is connected to the modulation input, it biases the input to the laser power supply voltage. Since the common mode input range is only about +12V dc, the modulation signal range is reduced. 12V-10V leaves only 2V for the modulation. Thus, it may appear that the modulation input is not working properly.

5.3.2 Current Limit when Modulating

A special limiting circuit prevents overdriving the Laser Diode current when using external modulation.

The diagram below shows a sine wave of approximately 200 kHz that is being clamped at I_{lim}.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

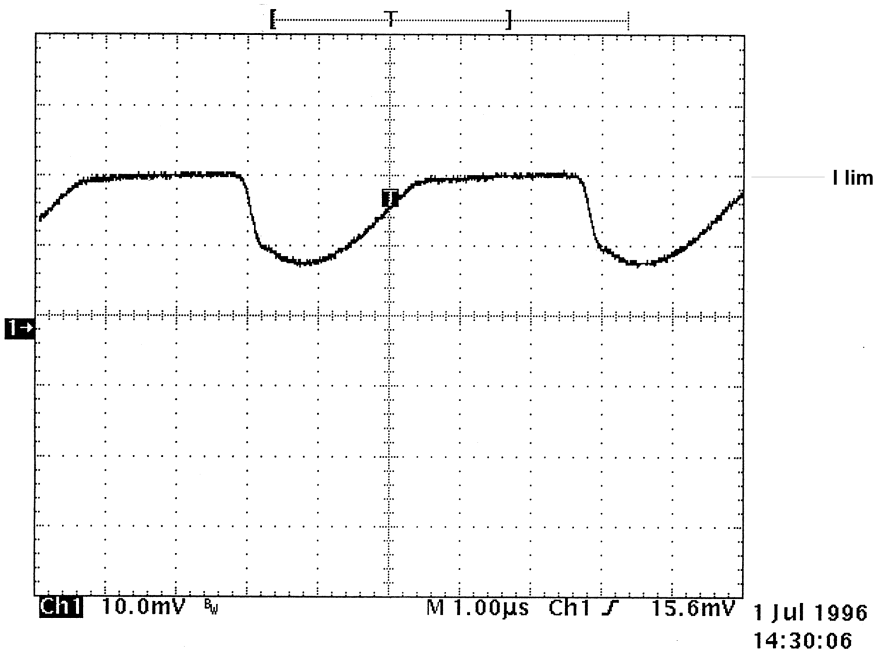


Figure 24 - Current Limit Example

5.4 Grounding A Laser Diode

The laser outputs are isolated from earth (chassis) ground. Isolating the laser diode case avoids damaging the device from multiple ground loop potentials, AC transients, or static discharge. Since test equipment probes, signal sources, and package mounts are often partially earth grounded, it is often necessary to also bond the device case to earth ground. It is strongly recommended that a single point ground scheme be established, specifically at either pin 3 of the DB-9 connector or the binding post. This will help minimize noise, transients, and ground loop hazards. Be sure to include any modulators in your ground circuit.

Newport cables are especially designed for use with our controllers and mounts. They provide a shield for noise reduction and proper grounding.

If you have additional questions about your earth grounding method, contact a Newport applications engineer.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5.5 Noise Specifications

Newport measures the noise on its Laser Driver outputs using a resistive load and an HP 34401A true-rms ac voltmeter with a bandwidth from 3 Hz to 300 kHz.

Some manufacturers use a Millivac MV-812A for noise measurements. It should be noted that an MV-812A is an average-responding meter calibrated for a sine wave. Random-noise measurements on this kind of meter can yield ambiguous data.

5.6 Intermittent Contact Feature

When a loose wire breaks the connection to your laser, the driver sees a decrease in current through the laser and attempts to increase it back to the correct value. When the loose wire regains contact, the current may momentarily be higher than the set point. If this happens and the current is 10% or more above the setpoint and the intermittent contact feature is active, the unit will shut down with an “open circuit” error message.

It may be necessary to disable this feature when the following conditions exist:

1) Operating at extremely low set points. For example, 1mA on a 6 Amp driver.
2) When modulating at high frequencies or with square waves.

5.7 V_f Measurements

The Laser’s forward voltage (V_f) is sensed at the D-sub connector on the driver. It is not the actual V_f of the laser. The difference being the voltage drop in the cables due to the laser current.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

CHAPTER 6

6. Maintenance

6.1 Introduction

There is no user serviceable parts inside the unit, do not attempt to remove the cover.

6.2 Fuse Replacement

The fuses are accessible on the back panel of the 5000. Before replacing a fuse, turn power off and disconnect the line cord. Use only the fuses indicated below.

Fuse Replacement	Line Voltage
1 Amp, (T) 3 AG, 250V	100/120 VAC
1 Amp, (T) 3 AG, 250V	220/240 VAC

6.3 Cleaning

Use mild soap solution on a damp but not wet cloth. Disconnect AC power before cleaning.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

CHAPTER 7

7. Calibration

7.1 Calibration Overview

All calibrations are done with the case closed. The instrument is calibrated by changing the internally stored digital calibration constants. All calibrations may be performed locally or remotely.

7.1.1 Environmental Conditions

Calibrate this instrument under laboratory conditions. We recommend calibration at 25°C ± 1.0°C. When necessary, however, the 5000 may be calibrated at its intended use temperature if this is within the specified operating temperature range of 0°C to 40°C.

7.1.2 Warm-Up

The 5000 should be allowed to warm up for at least 1 hour before calibration.

7.2 Laser Calibration

This chapter describes how to calibrate the 5000 Series laser drivers.

7.2.1 Recommended Equipment

Recommended test equipment for calibrating the driver is listed in Table 1. Equipment other than that shown in the table may be used if the specifications meet or exceed those listed.

Description	Mfg./Model	Specification
DMM	HP 34401A	DC Amps @ 1.0 A): ±1% Resistance (@ 10 ohms): 0.02%
Resistor	High Power, Low Temperature Coefficient	1 Ω, 50 W; 2 Ω, 25 W; 5 Ω, 10 W; 10 Ω, 5 W; 30 Ω, 2 W
Optical Isolator	NEC PS2501-1	or equivalent, 6-pin
Connector	D-sub	9-pin male

Table 2 - Recommended Test Equipment

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

7.2.2 Drive Current Load Resistor Selection

Laser Drive Current	Resistor
200 mA	30 Ω, 2 W
500 mA	10 Ω, 5 W
1,000 mA	5 Ω, 10 W
3,000 mA	2 Ω, 25 W
6,000 mA	1 Ω, 50 W

Table 3 - Drive Current Load Resistor Selection

7.2.3 Local Operation Current Source Calibration

This procedure calibrates the feedback circuits for constant current mode. The user enters the actual value of the current, as measured by an external DMM. The 5000 then automatically calibrates the laser feedback circuits.

Use Table 3 above to select load resister that matches the maximum drive current of the 5000 unit.

a. With the output off, connect a load resistor, as selected Table 3, and a calibrated ammeter in series across the laser output terminals. If an ammeter with the appropriate current ratings is unavailable, connect a calibrated DMM across the laser output terminals to measure the voltage across the resistor. Calculate the current in the following steps by using Ohm's Law:

$$I = V / R$$

where V is the measured voltage across the resistor, and R is the measured load resistance.

b. With the unit in Io mode, press the **LDD ON** key to turn the laser output on, if it is not on already. If a laser on delay has been set, wait that amount of time to allow the laser output to engage.

c. Start the calibration procedure by first pressing the **MENU** button, then right arrow until the **Calibration** menu is reached, then presses the down arrow until the **Io Calibration** function is selected, then the right arrow key to execute the Io calibration

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

function.

d. The output will be set at ½ full scale and allowed to settle. Once settled, enter the actual current measurement from the ammeter display, then select the **Next** soft button and press the right arrow.

e. The output will then be moved to ¼ the current set point and allowed to settle. Once settled, enter the actual current measurement from the ammeter display, then select the **Next** soft button and press the right arrow.

f. The calibration procedure is complete.

7.2.4 Remote Operation Current Source Calibration

a. With the output off, connect a load resistor, as selected Table 3, and a calibrated ammeter in series across the laser output terminals. If an ammeter with the appropriate current ratings is unavailable, connect a calibrated DMM across the laser output terminals to measure the voltage across the resistor. Calculate the current in the following steps by using Ohm's Law:

$$I = V / R$$

where V is the measured voltage across the resistor, and R is the measured load resistance.

b. Select the channel via the **LAS:CHAN** command. Set the current limit to one-half scale plus 100 mA via the **LAS:LIM:LDI** command, output bandwidth as desired via the **LAS:MODE:I**, **LAS:MODE:ICW**, or **LAS:MODE:ILBW** command, and current set point to one-half scale via the **LAS:LDI** command.

c. Enter the **LAS:OUTPUT ON** command to turn the laser output on.

d. Enter the laser LDI calibration mode by issuing the **LAS:CAL:LDI** command.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

e. Input the actual (measured) laser output current (as an <nrf value>) via the **LAS:LDI <nrf value>** command.

The 5000 will be ready to receive the current value when, after a **LAS:CAL:LDI?** query is sent, the response from the 5000 is "1".

f. Once the actual current value is entered via the **LAS:LDI** command, the 5000 will apply a new current equal to approximately one-fourth (¼) the previous set point.

The 5000 will be ready to receive the second current value when, after a **LAS:CAL:LDI?** query is sent, the response from the 5000 is "1".

g. Input the second actual (measured) laser output current as in Step e.

h. Once the actual current value is entered via the second **LAS:LDI** command, the 5000 leaves the current calibration mode.

If, at any time prior to the second **LAS:LDI,** a command other than **LAS:LDI** or **LAS:CAL:LDI?** is sent to the 5000, the 5000 will cancel the calibration mode and then process the command(s).

The ***OPC?** query may be used to determine when the calibration is completed.

The operation complete flag (bit 0 of the Standard Event Status Register) may be used to trigger an interrupt. This type of interrupt is enabled by setting bit 0 of the Service Request Enable register and using the ***OPC** command.

7.2.5 Local Operation I_{PD} Current Calibration

This procedure calibrates the feedback circuits for constant I_{PD} and constant P_{PD} modes. The user enters the actual value of the current, as measured by an external DMM. The 5000 then automatically calibrates the laser feedback circuits.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The I_{PD} calibration circuit is diagrammed below. Use Table 3 above to select a value for the R2 resister that matches the maximum drive current of the laser diode driver.

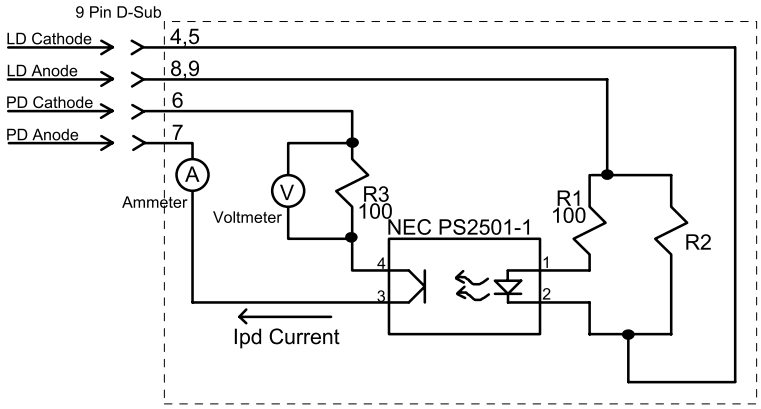


Figure 25 - I_{PD} Calibration Circuit

a. With the laser output off, connect a calibrated ammeter to the PD Anode output of the driver and connect the circuit of Figure 25 to the laser and PD outputs.

   If a calibrated ammeter (with 0.1 µA resolution) is not available, place a calibrated DMM (with 0.1 mV resolution) to measure the voltage across the resistor, R3, as shown in Figure 25. Calculate the current in the following steps by using Ohm's Law:

   $$I = V / R$$

   where V is the measured voltage across the resistor, and R is the measured load resistance.

b. With the unit in Im mode, press the **LDD ON** key to turn the laser output on, if it is not on already. If a laser on delay has been set, wait that amount of time to allow the laser output to engage.

c. Start the calibration procedure by first pressing the **MENU** button, then right arrow until the **Calibration** menu is reached, then presses the down arrow until the **Im Calibration** function

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

is selected, then the right arrow key to execute the Im calibration function.

d. The output will be set at ½ full scale and allowed to settle. Once settled, enter the actual current measurement from the ammeter display, then select the **Next** soft button and press the right arrow.

e. The output will then be moved to ¼ the current set point and allowed to settle. Once settled, enter the actual current measurement from the ammeter display, then select the **Next** soft button and press the right arrow.

f. The calibration procedure is complete.

7.2.6 Remote Operation I_{PD} Current Calibration

a. With the laser output off, connect a calibrated ammeter to the photodiode anode output of the driver and connect the circuit of Figure 25 to the laser and photodiode outputs.

If a calibrated ammeter (with 0.1 µA resolution) is not available, place a calibrated DMM (with 0.1 mV resolution) to measure the voltage across the resistor, R3, as shown in Figure 25. Calculate the current in the following steps by using Ohm's Law:

$$I = V / R$$

where V is the measured voltage across the resistor, and R is the measured load resistance.

b. Select the channel via the **LAS:CHAN** command. Set the laser current limit to full scale via the **LAS:LIM:LDI** command. Set the photodiode current set point to ½ full scale via the **LAS:MDI** command. Place the unit into constant photodiode current mode via the **LAS:MODE:MDI** command.

c. Enter the **LAS:OUTPUT ON** command to turn the laser output on.

d. Enter the **LAS:CAL:MDI** command to place the 5000 in its laser photodiode current calibration mode.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

e. After a few seconds, the 5000 will be ready for the actual photodiode current to be entered via the **LAS:MDI** command. The measured value of the current should not be entered until the 5000 is ready to receive it.

   The 5000 will be ready to receive the current value when, after a **LAS:CAL:MDI?** query is sent, the response from the 5000 is "1".

f. Once the actual photodiode current value is entered via the **LAS:MDI** command, the 5000 will apply a new photodiode current equal to approximately one-fourth (¼) the previous set point.

   The 5000 will be ready to receive the second current value when, after a **LAS:CAL:MDI?** query is sent, the response from the 5000 is "1".

g. Input the second actual (measured) photodiode current as in Step e.

h. Once the actual photodiode current value is entered via the second **LAS:MDI** command, the 5000 leaves the current calibration mode.

   If, at any time prior to the second **LAS:MDI,** a command other than **LAS:MDI** or **LAS:CAL:MDI?** is sent to the 5000, the 5000 will cancel the calibration mode and then process the command(s).

   The ***OPC?** query may be used to determine when the calibration is completed.

   The operation complete flag (bit 0 of the Standard Event Status Register) may be used to trigger an interrupt. This type of interrupt is enabled by setting bit 0 of the Service Request Enable register and using the ***OPC** command.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

7.2.7 Local Operation Laser Voltage Measurement Calibration

a. With the output off, connect a calibrated voltmeter, in parallel with a load resistor, as selected Table 3, to the laser output terminals.

b. With the unit in Io mode, press the **LDD ON** key to turn the laser output on, if it is not on already. If a laser on delay has been set, wait that amount of time to allow the laser output to engage.

c. Start the calibration procedure by first pressing the **MENU** button, then right arrow until the **Calibration** menu is reached, then presses the down arrow until the **Im Calibration** function is selected, then the right arrow key to execute the Im calibration function.

d. The current output will be set at ½ full scale and allowed to settle. Once settled, enter the actual voltage measurement from the ammeter display, then select the **Next** soft button and press the right arrow.

e. The output will then be moved to ¼ of the current set point and allowed to settle. Once settled, enter the actual voltage measurement from the ammeter display, then select the **Next** soft button and press the right arrow.

f. The calibration procedure is complete.

7.2.8 Remote Operation Laser Voltage Measurement Calibration

a. With the output off, connect a calibrated voltmeter, in parallel a load resistor, as selected Table 3, to the laser output terminals.

b. Select the channel via the **LAS:CHAN** command. Set the voltage limit to full scale via the **LAS:LIM:LDV** command, and the current set point necessary to read approximately 80% of full scale voltage. For example, with a 5060 driver, with a resistance of 1 Ω, set the current to 4,800 mA. Place the unit into constant current mode via the **LAS:MODE:LDI** command.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

c. Enter the **LAS:OUTPUT ON** command to turn the laser output on.

d. Enter the laser voltage calibration mode by issuing the **LAS:CAL:LDV** command.

e. Input the actual (measured) laser voltage (as an <nrf value>) via the **LAS:LDV <nrf value>** command.

   The 5000 will be ready to receive the value when, after a **LAS:CAL:LDV?** query is sent, the response from the 5000 is "1".

f. Once the actual voltage value is entered via the **LAS:LDV** command, the 5000 will apply a new current equal to approximately one-fourth (¼) the previous set point.

   The 5000 will be ready to receive the second voltage value when, after a **LAS:CAL:LDV?** query is sent, the response from the 5000 is "1".

g. Input the second actual (measured) voltage as in Step e.

h. Once the actual voltage value is entered via the **LAS:LDV** command, the 5000 leaves the current calibration mode.

   If, at any time prior to the second **LAS:LDV,** a command other than **LAS:LDV** or **LAS:CAL:LDV?** is sent to the 5000, the 5000 will cancel the calibration mode and then process the command(s).

   The ***OPC?** query may be used to determine when the calibration is completed.

   The operation complete flag (bit 0 of the Standard Event Status Register) may be used to trigger an interrupt. This type of interrupt is enabled by setting bit 0 of the Service Request Enable register and using the ***OPC** command.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

CHAPTER 8

8. Factory Service

8.1 Introduction

This section contains information regarding obtaining factory service for the Model 5000. The user should not attempt any maintenance or service of this instrument and/or accessories beyond the procedures given in chapters 6 and 7. Any problems which cannot be resolved using the guidelines listed in chapters 6 and 7 should be referred to Newport Corporation factory service personnel. Contact Newport Corporation or your Newport representative for assistance.

8.2 Obtaining Service

To obtain information concerning factory service, contact Newport Corporation or your Newport representative. Please have the following information available:

1. Instrument model number (On front panel)

2. Instrument serial number (On rear panel)

3. Description of the problem.

If the instrument is to be returned to Newport Corporation, you will be given a Return Materials Authorization (RMA) number, which you should reference in your shipping documents as well as clearly marked on the outside of the shipping container.

Please fill out the service form located on the following pages, and have the information ready when contacting Newport Corporation. Return the completed service form or a facsimile of it with the instrument.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Service Form

Newport	*Telephone (in the United States):* **800-222-6440**	*FAX:* **949-253-1680**
	Telephone: **949-863-3144**	*Internet:* **www.newport.com**

Please complete this form and return it with the item to be repaired. ***This form has two sides.***

Name _____ RMA Number _____

Company _____ (NOTE: Please obtain Return Materials

Address _____ Authorization (RMA) number prior to return of item.)

Country _____ Date _____

P.O. Number _____ Phone Number _____

Item(s) Being Returned:

Please create a new sheet for every model returned

Model Number _____ Serial Number _____

Description _____

Reason for return of goods (please list any specific problems) _____

_____

List all control settings, error codes, and messages, describing the problem in detail: _____

_____

_____

_____

(Attach additional sheets as necessary)

System Diagram:

Provide a block diagram of your measurement system including all instruments connected (whether power is turned on or not). List all Newport or other instruments used during the failure. Describe signal source. If source is laser, describe output mode, peak power, pulse width, and repetition rate.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

System Settings:

Where is measurement being performed (factory, controlled laboratory, outside, etc.)?

What input power line voltage is used? _____ Variation? _____

Input Power Frequency? _____ Ambient Temperature? _____

What settings are being used?

(specify set temperatures, temperature limits, gain, and operating current)

_____

_____

If the problem seems computer-related:

Have any programs not provided with this system by Newport been installed? _____

If yes, which programs?_____

Does the computer show problems with specific software? _____

If yes, which software? _____

Does the computer show problems with several programs or the operating system? _____

Does the operating system lock up? _____

Does the computer show hardware problems with any of the following (circle as appropriate)?

Network

Modem

Monitor

Hard Disk

Does the computer fail to boot or fail to find the operating system? _____

Has data on the computer been backed up? _____

Is it safe to wipe the system? _____

Any Additional Information: (i.e., If any special modifications were made, please describe them below)

_____

_____

_____

CHAPTER 9

9. Error Messages

9.1 Introduction

Error messages may appear on the display when error conditions occur in the respective functions of the 5000.

In remote operation, the current error list can be read by issuing the "ERR?" query. When this is done, a string will be returned containing all of the error messages which are currently in the error message queue.

The errors codes are numerically divided into areas of operation as shown below.

Error Code Range	Area of Operation
E-001 to E-099	Internal Program Errors
E-100 to E-199	Parser Errors
E-200 to E-299	Execution Control Errors
E-300 to E-399	GPIB/RS232 Errors
E-500 to E-599	Laser Control Errors
E-900 to E-999	System Errors

Table 4 contains all of the error messages that may be generated by the 5000.

Table 4 - Error Codes

Error Code	Explanation
E-001	Memory allocation failure.
E-002	Floating point error
E-104	Numeric type not defined.
E-106	Digit expected.
E-107	Digit not expected.
E-115	Identifier not valid.
E-116	Parser syntax error, character was not expected.
E-126	Too few or too many program data elements.
E-201	Value out of range.
E-214	Length exceeds maximum.
E-217	Attempted to recall a bin from a unsaved position.
E-218	Additional link could not be added to the link table because the link table is already full.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Error Code	Explanation
E-301	A response message was ready, but controller failed to read it.
E-302	5000 is talker, but controller didn't read entire message.
E-303	Input buffer overflow
E-304	Output buffer overflow
E-305	Parser buffer overflow
E-501	Laser interlock disabled output.
E-502	Laser hard current limit disabled output
E-503	Laser open circuit disabled output.
E-504	Laser current limit disabled output.
E-505	Laser voltage limit disabled output.
E-506	Laser photodiode current limit disabled output
E-507	Laser photodiode power limit disabled output.
E-509	Laser short circuit disabled output
E-510	Laser out of tolerance disabled output.
E-512	Analog section status is all 1's or 0's (power down).
E-514	Laser mode change disabled output
E-515	Laser bandwidth change disabled output
E-516	Incorrect Configuration for Calibration Sequence to start.
E-517	Calibration for Laser Diode current must have the output on to start.
E-518	Calibration for the Monitor Diode must have the output on and the sensitivity set to zero to start.
E-531	Laser link condition forced output on
E-532	Laser link condition forced output off
E-533	Attempted to select non-laser channel for laser operation.
E-900	Calculation Error shutdown output
E-901	System over temperature shutdown all outputs
E-902	Front laser enable panel key lock in off position, shutdown all laser outputs
E-903	Loading of a saved bin shutdown driver output

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

CHAPTER 10

10. Specifications

10.1 Laser Diode Drivers

Specifications	5005	5030	5060
Laser Output			
Output Current Range (mA)[2]	0 to 500 mA	to 3,000 mA	0 to 6,000 mA
Output Current Resolution (mA) (16-bit)	0.0076	0.0458	0.0916
Output Current Accuracy[3]	0.03 + 15 µA	0.03 + 90 µA	0.03 + 180 µA
Compliance Voltage	7 Volts	5 Volts	5 Volts
Temperature Coefficient (Full Scale)	< 50 ppm/°C	< 50 ppm/°C	< 50 ppm/°C
Short Term Stability (1 hr., Full Scale)	< 10 ppm	< 10 ppm	< 10 ppm
Long Term Stability (24 hr., Full Scale)	< 50 ppm	< 50 ppm	< 50 ppm
Noise/Ripple (rms)[4]			
Hi BW	< 8.0 µA	< 15 µA	< 25 µA
Lo BW	< 4.0 µA	< 10 µA	< 20 µA
Current Limit			
Range	0 to 500 mA	0 to 3,000 mA	0 to 6,000 mA
Resolution	1 mA	1 mA	1 mA
Accuracy	± 2 mA	± 4 mA	± 6 mA
Internal Function Generator			
Waveforms	Sine, Square	Sine, Square	Sine, Square
Frequency Range	200 Hz to 300 kHz	200 Hz to 300 kHz	200 Hz to 300 kHz
Squareware Duty Cycle [%]	50 ± 5	50 ± 5	50 ± 5
Independent Output Set-Points	Imax, Imin	Imax, Imin	Imax, Imin
External Analog Modulation			
Input range, Input Impedance	0 to 10V, 10kΩ	0 to 10V, 10kΩ	0 to 10V, 10kΩ
Transfer Function	50 mA/V	100 mA/V	600 mA/V
Bandwidth (3 dB)			
Hi BW (ACC Mode)[5]	DC to 350 kHz	DC to 100 kHz	DC to 100 kHz
Lo BW (ACC & APC Modes)	DC to 10 kHz	DC to 10 kHz	DC to 10 kHz
Photodiode Current Input			
Temperature Coefficient (% Full Scale/°C)	< 0.02	< 0.02	< 0.02
Range	0 µA to 5 mA	0 µA to 20 mA	0 µA to 20 mA
Stability (Full Scale, 24 hours)	± 0.02 %	± 0.02 %	± 0.02 %
Accuracy[3]	0.004 + 0.5 µA	0.004 + 1 µA	0.004 + 1 µA
Photodiode Reverse Bias (± 10%)	0 to 5 Volts	0 to 5 Volts	0 to 5 Volts

[2] Other current ranges are available upon request - please consult with factory.
[3] ± (% reading + fixed error)
[4] True RMS, 3 Hz to 300 kHz, ½ scale, resistive load
[5] ACC – automatic current control, APC – automatic power control

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Measurement Display			
Output Current Range (mA)	0 to 500.00	0 to 3,000.0	0 to 6,000.0
Output Current Resolution (mA)	0.01	0.1	0.1
Output Current Accuracy[6]	0.02 + 20 µA	0.02 + 200 µA	0.02 + 200 µA
Forward Voltage Range (Volts)	0.000 to 7.000	0.000 to 5.000	0.000 to 5.000
Forward Voltage Resolution (mV)	1	1	1
Forward Voltage Accuracy[6]	0.005 + 1 mV	0.005 + 1 mV	0.005 + 1 mV
Photodiode Current Range (µA)	5 - 5,000	15 - 20,000	15 - 20,000
Photodiode Current Resolution (µA)	0.1	0.1	0.1
Photodiode Current Accuracy[6]	0.01 + 0.5 µA	0.01 + 1 µA	0.01 + 1 µA
PD Resp. Range (µA/mW)	0.00 to 600.00	0.00 to 600.00	0.00 to 600.00
PD Resp. Resolution (µA/mW)	0.01	0.01	0.01
Optical Power Range (mW)	0.00 to 500.00	0.00 to 3000.0	0.00 to 6000.0
Optical Power Resolution (mW)	0.01	0.1	0.1

10.2 General Specifications

Display	
Type	LCD character display, 2 lines by 20 characters
Back Lighting	Green LED
Controls	Brightness and Contrast (contrast optimizes viewing angle)
Channel Active	For Model 5000, Green LDD LED indicates that Laser Diode output is on.
Output Connectors	
Laser Diode Driver (LDD)	9-pin female D-sub, BNC (external modulation), BNC (auxiliary photodiode input)
Chassis Ground	4 mm Banana Jack
GPIB Connector	24 pin IEEE-488
RS232 Connector	9-pin male D-sub
Power Requirements	90 to 250 volts, 1 Amp Max. (user selectable), 50 to 60 Hz
Size (H x W x D)	86 mm x 215 mm x 280 mm (3.5 " x 8.5" x 12")
Weight	3.6 kg (8 lbs.)
Operating Temperature	0 to +40°C, < 70% relative humidity non-condensing
Storage Temperature	-20°C to +60°C, < 90% relative humidity non-condensing
Laser Safety Features	Output On/Off Key switch, Interlock, Output Delay (meets CDRH US21 CFR 1040.10).
Isolation	Laser sections electrically isolated with respect to each other and from earth ground.

In accordance with ongoing efforts to continuously improve our products, Newport Corporation reserves the right to modify product specifications without notice and without liability for such changes.

[6] ± (% reading + fixed error)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP