ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.


- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *One Stop Systems OSS-PCIe-HIB25-x8-H* at our website: *Click HERE*

OSS
ONE STOP SYSTEMS

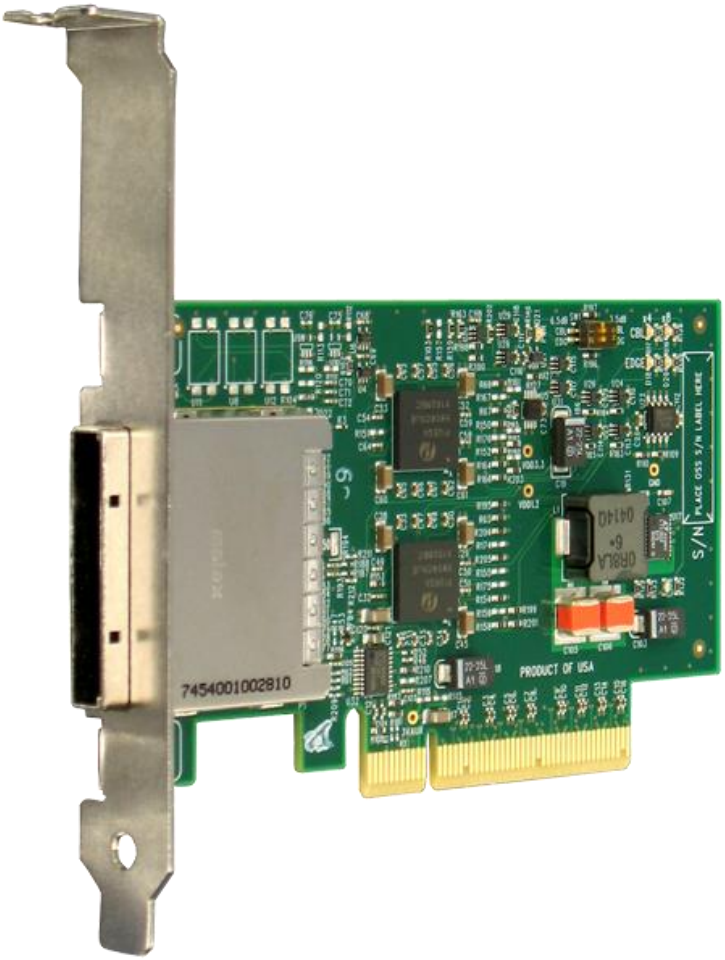

User Manual,
PCIe x8 GEN 2 Cable Adapter

OSS-PCIe-HIB25-x8-H (Host)
OSS-PCIe-HIB25-x8-T (Target)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table of Contents

1. Overview

1.a. Host cable adapter 3

1.b. Target cable adapter 3

1.c. Specifications 4

1.d. Block diagram 5

2. Initial set-up

2.a. Unpacking instructions 6

2.b. Installation and Removal 6

2.c. Installing the host cable adapter 6

2.d. Removing the host cable adapter 7

2.e. When using with any third party I/O device 7

3. Ordering information

3.a. Ordering Information 8


4. Appendix

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1. Overview


1.a. Host cable adapter

The host adapter (Part # OSS-PCIe-HIB25 x8-H) installs into the host computer's slot, allowing communication between a processor and an I/O point.

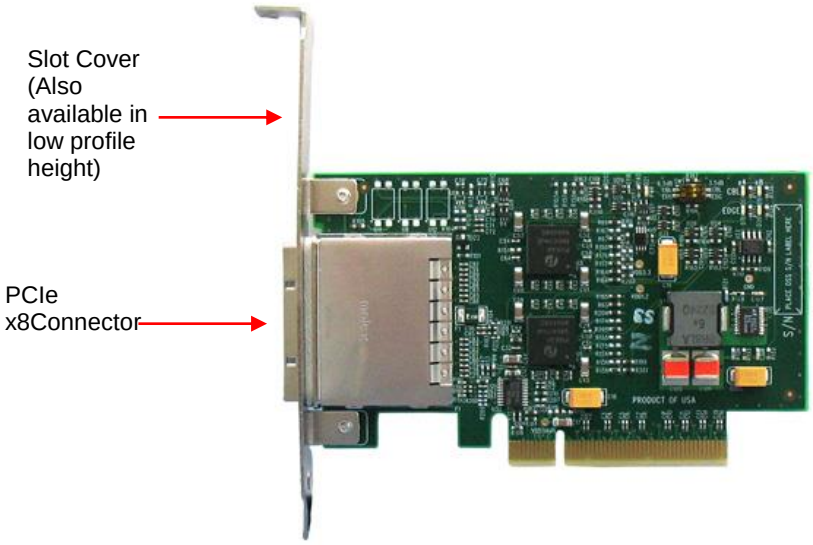

1.b. Target cable adapter

The target cable adapter (Part# OSS-PCIe-HIB25-x25-x8-T) installs into the target slot of an OSS 2-slot backplane and extends the PCIe bus to a single add-in board installed in the I/O slot of the 2-slot backplane.

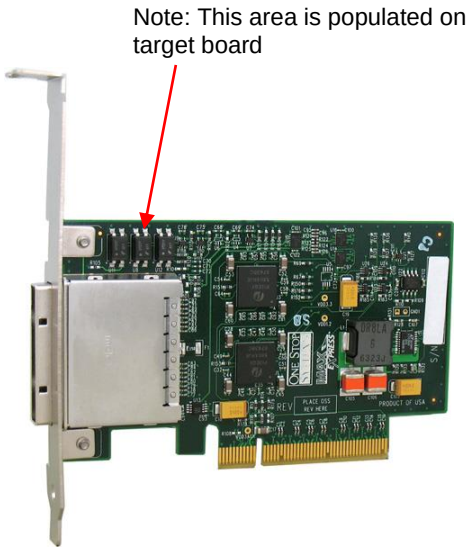

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.c. Specifications

Dimensions (H x L): 2.2 x 4.5 inches (55 x 114mm)

Front Panel Connectors: One PCIe x8 cable connector

Front Panel Indicators: Power On / Cable Present LEDs

Power Consumption (designed to meet the following conditions) 3.75W typical, 3.3@1.3A

Operating Environment (designed to meet the following conditions)

Temperature Range: 0° to 50°C (32° to 122°F)

Relative Humidity: 10 to 90% non-condensing

Shock: 30g acceleration peak (11ms pulse)

Vibration: 5-17 Hz 0.5” double amplitude displacement; 7-2000Hz, 1.5g acceleration.

Agency Compliance: UL60950, FCC Class A, CE, KCC Class B,


이 기기는 가정용(B 급) 전자파적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며,

모든 지역에서 사용할 수 있습니다.

Environmental Compliance: EU Directive 2002/95/EC (RoHS)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.d. Block Diagram

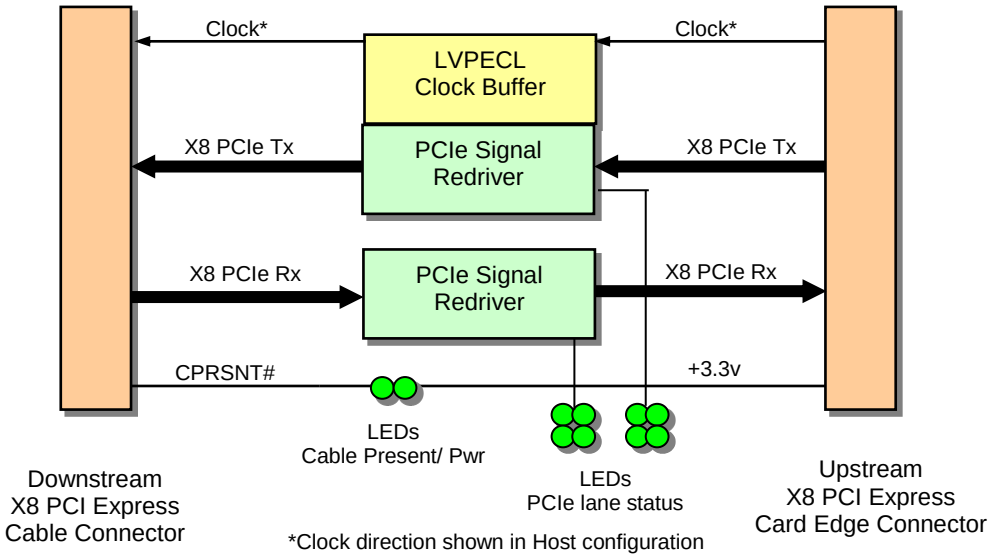

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2. Initial Set-Up

2.a. Unpacking Instructions


1) If the carton is damaged when you receive it, request that the carrier's agent be present when you unpack and inspect the equipment.
2) After unpacking, verify that all items listed in the packing list are present.
3) Inspect the equipment for shipping damage.
4) Save all packing material for storage or return shipment of the equipment.

2.b. Installation and Removal

1) Power down the host system.
2) Open the chassis according to your system documentation.
3) Remove the Host Cable Adapter from the protective bag, observing proper ESD safety procedures.

2.c. Installing the Host Cable Adapter:


1) Insert the Host Cable Adapter into a PCIe x8 or x16 add-in card slot. Make sure that the card is well seated and tighten the screw.
2) Attach the cable by first pulling back on the retractor ring. With the keyed slot aligned with the connector key ridge on the slot cover, insert the cable connector into the connector shell on the board **until the connector teeth snap securely into the holes in the cable shell.**
3) The connectors on either end of the PCIe x8 cable are identical. Each connector is equipped with a retractor to allow the connector to be locked into place.

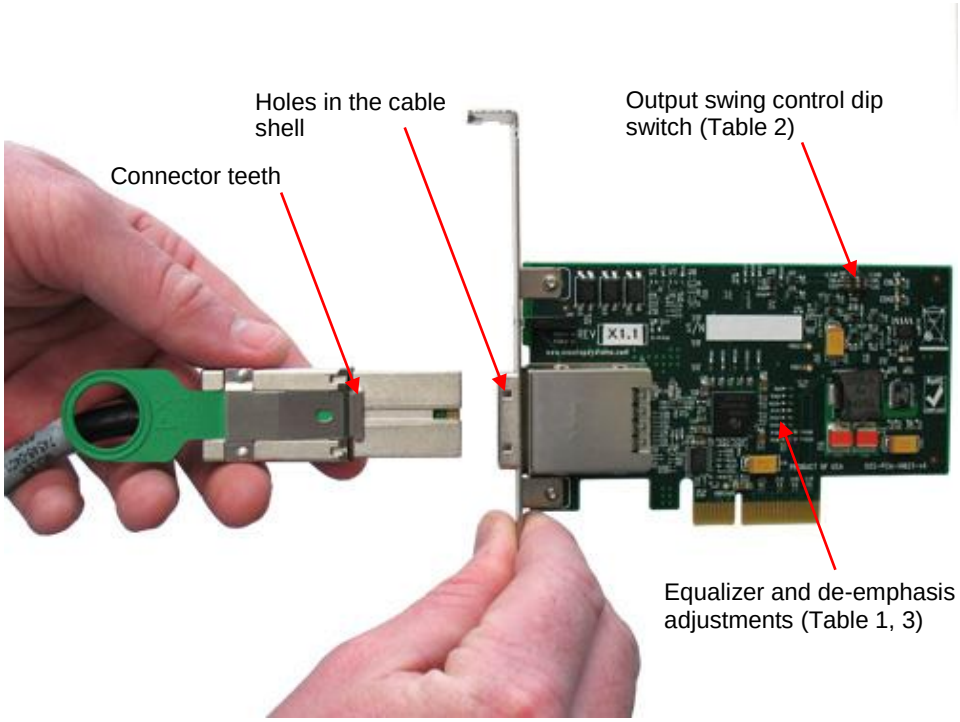


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.d. Removing the host cable adapter

1) To remove cable pull back on green thumb tab to release metal pins and gently separate.

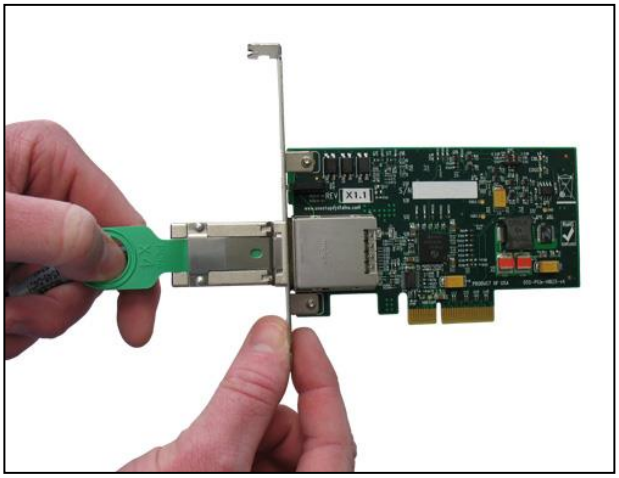

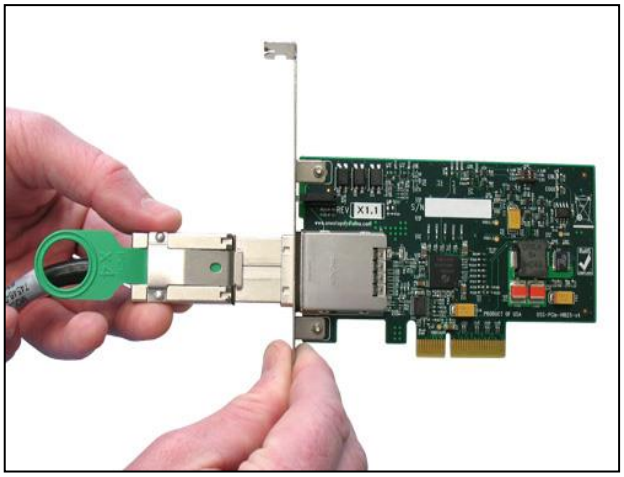

2) Loosen and remove the screw before removing the Host Cable Adapter from the card slot.

2.e. When using with any third party I/O device:

1) Install the downstream board into the appropriate PCIe slot.
2) Connect the external power source (separate from the host system power supply) to the downstream device if necessary.
3) Connect the PCIe cable to both the upstream host adapter and the downstream device.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4. Ordering Information

OSS-PCIe-HIB25-x8-H - One Stop Systems HIB25 x8 host cable adapter.
OSS-PCIe-HIB25-x8-T - One Stop Systems HIB25 x8 target cable adapter.

OSS-PCIe-HIB25-x4-H – PCIe x4 Gen 2 host cable adapter installs in a x4, x8, x16 expansion slot of a host system to extend the host PCIe bus to an expansion system or PCIe device.
OSS-PCIe-HIB25-x4-T – PCIe x4 Gen 2 target cable is only used with the OSS 2-slot PCIe backplane to add a single PCIe card to a host.
OSS-PCIe-HIB25-x8-H – PCIe x8 Gen 2 host cable adapter installs in a x8 or x16 expansion slot of a host system to extend the host PCIe bus to an expansion system or PCIe device.
OSS-PCIe-HIB25-x8-T – PCIe x8 Gen 2 target cable adapter is only used with the OSS 2-slot PCIe backplane to add a single PCIe card to a host.
OSS-PCIe-HIB25-x16-H – PCIe x16 Gen 2 host cable adapter installs in a x16 expansion slot of a host system to extend the host PCIe bus to an expansion system or PCIe device.
OSS-PCIe-HIB25-x16-T – PCIe x16 Gen 2 target cable adapter is only used with the OSS 2-slot PCIe backplane (OSS-PCIeBP-2010, P.34) to add an additional PCIe slot to any device.
OSS-XMC-HIB25-x8 – XMC PCIe x8 Gen 2 host cable adapter installs in an XMC connector on a host carrier board and cables to a PCIe downstream device or expansion chassis.
OSS-PCIe-HIB35-x4 – PCIe x4 Gen 2 cable adapter with PCIe switch (including NT port and DMA controller) operates in upstream or downstream mode with DIP switch setting change.
OSS-SHB-ELB-x4/x8-2.0 – PCIe x8 or x4 Gen 2 expansion link board installs in SHBe slot of a PCIe Gen 2 backplane, allowing either x8 or x4 cable inputs from upstream host system.
OSS-PCIe-CA-x1/x4 – PCIe cable adapter fits into slot or stand-alone, converts PCIex1 cable to PCIex4 cable.
OSS-PCIe-CA-x4/x8 – PCIe cable adapter fits into slot or stand alone, converts PCIex4 cable to PCIe x8 cable.
OSS-PCIe-CBL-x4-1M – 1 meter PCIe x4 cable with PCIe x4 connectors.
OSS-PCIe-CBL-x4-2M – 2 meter PCIe x4 cable with PCIe x4 connectors.
OSS-PCIe-CBL-x4-3M – 3 meter PCIe x4 cable with PCIe x4 connectors.
OSS-PCIe-CBL-x4-5M – 5 meter PCIe x4 cable with PCIe x4 connectors.
OSS-PCIe-CBL-x4-7M – 7 meter PCIe x4 cable with PCIe x4 connectors.
OSS-PCIe-CBL-ACT-x4-10M – 10 meter active optical cable with PCIe x4 connectors.
OSS-PCIe-CBL-ACT-x4-100M – 100 meter active optical cable with PCIe x4 connectors.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Appendix

Pin Assignments

Connectors PCIe x8 Card Edge Connector

- The pins are numbered as shown with side A on the top of the centerline on the solder side of the board and side B on the bottom of the centerline on the component side of the board.
- The PCIe interface pins PETpx, PETnx, PERpx, and PERnx are named with the following convention: “PE” stands for PCIe high speed, “T” for Transmitter, “R” for Receiver, “p” for positive (+), and “n” for negative (-).
- Note that adjacent differential pairs are separated by two ground pins to manage the connector crosstalk.

Pin #	Side B		Side A	
	Name	Description	Name	Description
1	+12V	12V Power	PRSNT1#	Hot-Plug presence detect
2	+12V	12V Power	+12V	12V Power
3	+12V	12V Power	+12V	12V Power
4	GND	Ground	GND	Ground
5	SMCLK	SMBus clock	JTAG2	TCK
6	SMDAT	SMBus data	JTAG3	TDI (Test Data Input)
7	GND	Ground	JTAG4	TDO (Test Data Output)
8	+3.3V	3.3 V power	JTAG5	TMS (Test Mode Select)
9	JTAG1	TRST# (Test Reset)	+3.3V	3.3 V power
10	3.3Vaux	3.3 V auxiliary power	+3.3V	3.3 V power
11	WAKE#	Signal for link reactivation	PERST#	Fundamental reset
Mechanical key				
12	RSVD	Reserved	GND	Ground
13	GND	Ground	REFCLK+	Reference clock (differential pair)
14	PETp0	Transmitter differential pair, Lane 0	REFCLK	
15	PETn0		GND	Ground
16	GND	Ground	PERp0	Receiver differential pair, Lane 0
17	PRSNT2#	Hot-Plug presence detect	PERn0	
18	GND	Ground	GND	Ground
19	PETp1	Transmitter differential pair, Lane 1	RSVD	Reserved
20	PETn1		GND	Ground
21	GND	Ground	PERp1	Receiver differential pair, Lane 1
22	GND	Ground	PERn1	
23	PETp2	Transmitter differential pair, Lane 2	GND	Ground
24	PETn2		GND	Ground
25	GND	Ground	PERp2	Receiver differential pair, Lane 2
26	GND	Ground	PERn2	
27	PETp3	Transmitter differential pair, Lane 3	GND	Ground
28	PETn3		GND	Ground

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

29	GND	Ground	PERp3	Receiver differential pair, Lane 3
30	RSVD	Reserved	PERn3	
31	PRSNT2#	Hot-Plug presence detect	GND	Ground
32	GND	Ground	RSVD	Reserved
33	PETp4	Transmitter differential pair, Lane 4	RSVD	Reserved
34	PETn4		GND	Ground
35	GND	Ground	PERp4	Receiver differential pair, Lane 4
36	GND	Ground	PERn4	
37	PETp5	Transmitter differential pair, Lane 5	GND	Ground
38	PETn5		GND	Ground
39	GND	Ground	PERp5	Receiver differential pair, Lane 5
40	GND	Ground	PERn5	
41	PETp6	Transmitter differential pair, Lane 6	GND	Ground
42	PETn6		GND	Ground
43	GND	Ground	PERp6	Receiver differential pair, Lane 6
44	GND	Ground	PERn6	
45	PETp7	Transmitter differential pair, Lane 7	GND	Ground
46	PETn7		GND	Ground
47	GND	Ground	PERp7	Receiver differential pair, Lane 7
48	PRSNT2#	Hot-Plug presence detect	PERn7	
49	GND	Ground	GND	Ground

Table 1: Pin-out for the PCIe x8 Card Edge Connector on the Host Cable Adapter

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Notes:


1 Optional signals that are not implemented are to be left as no connects on the board side connector.

2 Reserved signals must be left as no connects on the board side connector.

3 Although support of CWAKE# is optional from the board side connector perspective, an allocated wire is mandated for the cable assembly.

4 Board side pin-out on both sides of the Link is identical. The cable assembly incorporates a null modem for the PCIe transmit and receive pairs.

PCI Express x8 Connector Pin Assignment

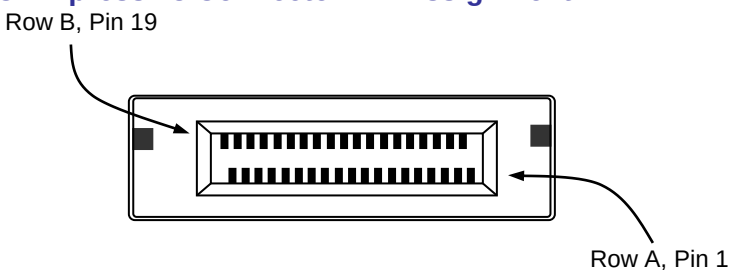

	Row A	Row B		Row A	Row B		Row A	Row B
Pin #	**Signal Name**	**Signal Name**	**Pin #**	**Signal Name**	**Signal Name**	**Pin #**	**Signal Name**	**Signal Name**
1	GND	GND	**13**	GND	GND	**24**	PETn4	PERp4
2	PETp0	PERp0	**14**	CREFCLK+	PWR (3.3V)	**25**	GND	GND
3	PETn0	PERn0	**15**	CREFCLK-	PWR (3.3V)	**26**	PETp5	PERp5
4	GND	GND	**16**	GND	PWR (3.3V)	**27**	PETn5	PERn5
5	PETp1	PERp1	**17**	RSVD	PWR RTN	**28**	GND	GND
6	PETn1	PERn1	**18**	RSVD	PWR RTN	**29**	PETp6	PERp6
7	GND	GND	**19**	SB_RTN	PWR RTN	**30**	PETn6	PERn6
8	PETp2	PERp2	**20**	CPSRNT$#	CWAKE#	**31**	GND	GND
9	PETn2	PERn2	**21**	CPWRON	CPERST#	**32**	PETp7	PERp7
10	GND	GND	**22**	GND	GND	**33**	PETn7	PERn7
11	PETp3	PERp3	**23**	PETp4	PETp4	**34**	GND	GND
12	PETn3	PERn3	**24**	PETn4	PERp4			

PIN- out for the PCIe x8 Cable

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Signal Descriptions

PETp(x)	PCI Express Transmit Positive signal of (x) pair.
PETn(x)	PCI Express Transmit Negative signal of (x) pair.
PERp(x)	PCI Express Receive Positive signal of (x) pair.
PERn(x)	PCI Express Receive Negative signal of (x) pair.
CREFCLK+/-	Cable REFerence CLocK: Provides a reference clock from the host system to the remote system.
SB_RTN	Side Band ReTurN: return path for single ended signals from remote systems.
CPRSNT#	Cable PReSeNT: Indicates the presence of a device beyond the cable.
PWR	PoWeR: Provides local power for in-cable redriver circuits. Only needed on long cables. Power does not go across the cable.)
PWR_RTN	PoWeR ReTurN: Provides local power return path for PWR pins.
CWAKE#	Cable WAKE
CPERST#	Cable PCI Express Reset

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP