ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Pilz PNOZ mo3p* at our website: *Click HERE*



PNOZ mo3p

PILZ
THE SPIRIT OF SAFETY

- Configurable safety systems PNOZmulti

Operating Manual 21134-EN-06

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

This document is a translation of the original document.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Source code from third-party manufacturers or open source software has been used for some components. The relevant licence information is available on the Internet on the Pilz homepage.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.


SD means Secure Digital

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Section 1	**Introduction**		**5**
	1.1	Validity of documentation	5
	1.2	Using the documentation	5
	1.3	Definition of symbols	5
Section 2	**Overview**		**7**
	2.1	Scope	7
	2.2	Unit features	7
	2.3	Front view	8
Section 3	**Safety**		**9**
	3.1	Intended use	9
	3.2	Safety regulations	9
	3.2.1	Use of qualified personnel	9
	3.2.2	Warranty and liability	10
	3.2.3	Disposal	10
	3.2.4	For your safety	10
	3.3	System requirements	10
Section 4	**Function description**		**11**
	4.1	Integrated protection mechanisms	11
	4.2	Functions	11
	4.3	Block diagram	11
	4.4	System reaction time	11
Section 5	**Installation**		**12**
	5.1	General installation guidelines	12
	5.2	Dimensions in mm	12
	5.3	Connecting the base unit and expansion modules	13
Section 6	**Commissioning**		**14**
	6.1	General wiring guidelines	14
	6.2	Connection	15
	6.3	Connection example	16
	6.4	Download modified project to the PNOZmulti system	16
Section 7	**Operation**		**17**
	7.1	Messages	17
Section 8	**Technical details**		**18**
	8.1	Safety characteristic data	20
Section 9	**Order reference**		**21**
	9.1	Product	21
	9.2	Accessories	21

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Section 10	Supplementary data		22
	10.1	Maximum capacitive load C (µF) with load current I (mA) at the semiconductor outputs	22

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1 Introduction

1.1 Validity of documentation

This documentation is valid for the product PNOZ mo3p. It is valid until new documentation is published.

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

1.2 Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

1.3 Definition of symbols

Information that is particularly important is identified as follows:



DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



INFORMATION

This gives advice on applications and provides information on special features.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2 Overview

2.1 Scope

- Expansion module PNOZ mo3p
- Jumper

2.2 Unit features

Using the product PNOZ mo3p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti

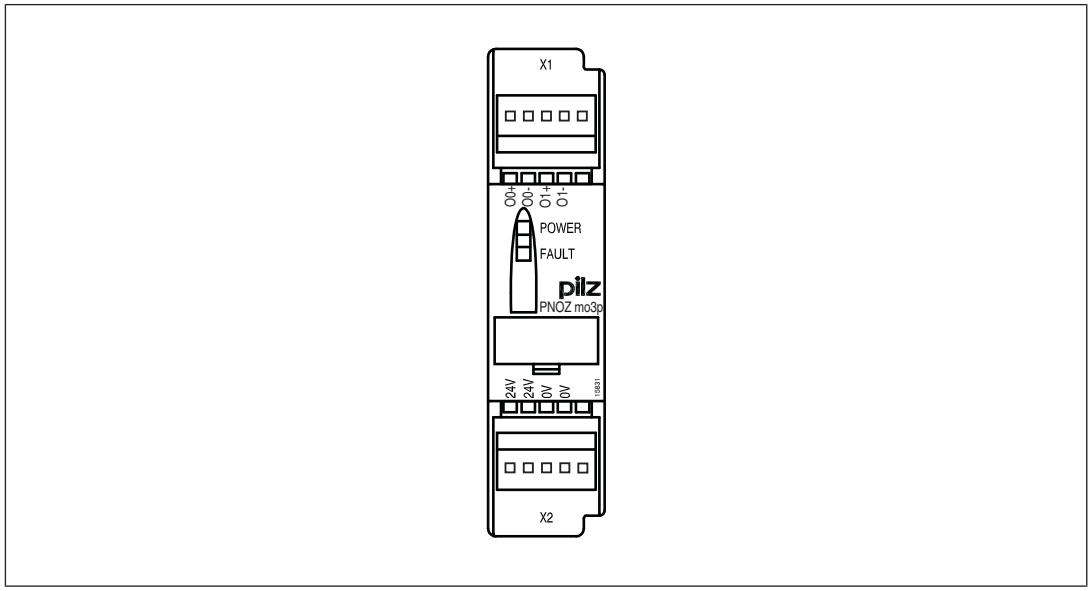
The product has the following features:

- Can be configured in the PNOZmulti Configurator
- Semiconductor outputs:

  2 dual-pole safety outputs
  up to PL e of EN ISO 13849-1 and SIL CL 3 of EN IEC 62061, depending on the application
- Open circuit detection
- Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.
- Plug-in connection terminals:
  either spring-loaded terminal or screw terminal available as an accessory (see order reference)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.3 Front view



Legend:

- 0 V, 24 V
  Supply connections
- O0+, O0- and O1+, O1-
  Dual-pole semiconductor outputs

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3 Safety

3.1 Intended use

The expansion module may only be connected to a base unit from the PNOZmulti system (please refer to the document "PNOZmulti System Expansion" for details of the base units that can be connected).

The configurable small control systems PNOZmulti are used for the safety-related interruption of safety circuits and are designed for use in:

- E-STOP equipment
- Safety circuits in accordance with VDE 0113 Part 1 and EN 60204-1

The following is deemed improper use in particular:

- Any component, technical or electrical modification to the product
- Use of the product outside the areas described in this manual
- Use of the product outside the technical details (see Technical details [18]).



NOTICE

EMC-compliant electrical installation

The product is designed for use in an industrial environment. The product may cause interference if installed in other environments. If installed in other environments, measures should be taken to comply with the applicable standards and directives for the respective installation site with regard to interference.

3.2 Safety regulations

3.2.1 Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by competent persons.

A competent person is someone who, because of their training, experience and current professional activity, has the specialist knowledge required to test, assess and operate the work equipment, devices, systems, plant and machinery in accordance with the general standards and guidelines for safety technology.

It is the company's responsibility only to employ personnel who:

- Are familiar with the basic regulations concerning health and safety / accident prevention
- Have read and understood the information provided in this description under "Safety"
- And have a good knowledge of the generic and specialist standards applicable to the specific application.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.2.2 Warranty and liability

All claims to warranty and liability will be rendered invalid if

- The product was used contrary to the purpose for which it is intended
- Damage can be attributed to not having followed the guidelines in the manual
- Operating personnel are not suitably qualified
- Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

3.2.3 Disposal

- When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

3.2.4 For your safety

The unit meets all the necessary conditions for safe operation. However, you should always ensure that the following safety requirements are met:

- This operating manual only describes the basic functions of the unit. The expanded functions are described in the PNOZmulti Configurator's online help. Only use these functions once you have read and understood the documentations.
- Do not open the housing or make any unauthorised modifications.
- Please make sure you shut down the supply voltage when performing maintenance work (e.g. exchanging contactors).

3.3 System requirements

Please refer to the "Product Modifications PNOZmulti" document in the "Version overview" section for details of which versions of the base unit and PNOZmulti Configurator can be used for this product.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4 Function description

4.1 Integrated protection mechanisms

The relay conforms to the following safety criteria:

- The circuit is redundant with built-in self-monitoring.
- The safety function remains effective in the case of a component failure.
- The safety outputs are tested periodically using a disconnection test.

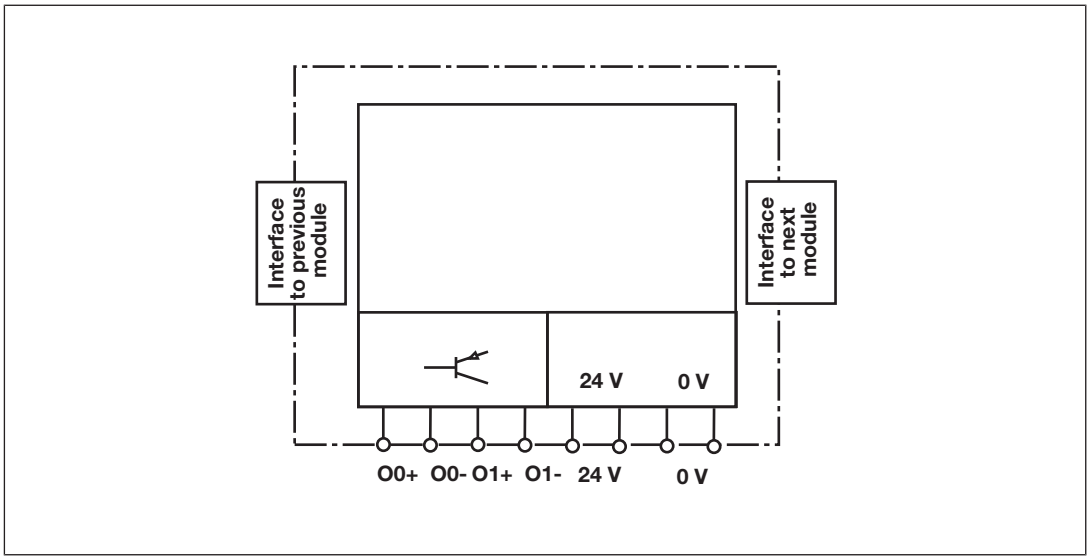
4.2 Functions

The expansion module provides additional semiconductor outputs.

The function of the outputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

4.3 Block diagram



4.4 System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti System Expansion".

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5 Installation

5.1 General installation guidelines

- The control system should be installed in a control cabinet with a protection type of at least IP54. Fit the control system to a horizontal mounting rail. The venting slots must face upward and downward. Other mounting positions could destroy the control system.
- Use the notches on the rear of the unit to attach it to a mounting rail. Connect the control system to the mounting rail in an upright position, so that the earthing springs on the control system are pressed on to the mounting rail.
- The ambient temperature of the PNOZmulti units in the control cabinet must not exceed the figure stated in the technical details, otherwise air conditioning will be required.
- To comply with EMC requirements, the mounting rail must have a low impedance connection to the control cabinet housing.

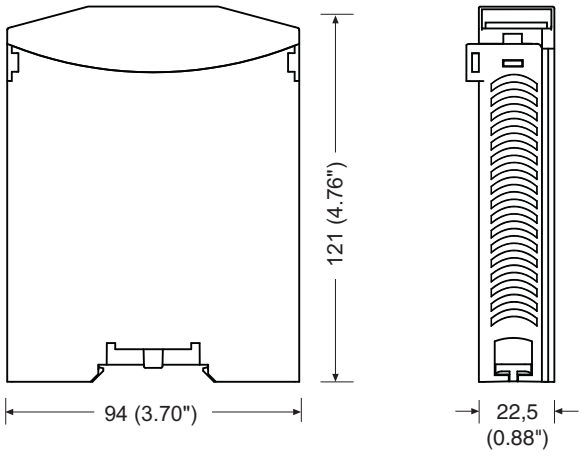


CAUTION!

Damage due to electrostatic discharge!

Electrostatic discharge can damage components. Ensure against discharge before touching the product, e.g. by touching an earthed, conductive surface or by wearing an earthed armband.

5.2 Dimensions in mm



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5.3 Connecting the base unit and expansion modules

Connect the base unit and the expansion modules as described in the operating manuals for the base modules.

- The terminator must be fitted to the last expansion module
- Install the expansion module in the position configured in the PNOZmulti Configurator.

The position of the expansion modules is defined in the PNOZmulti Configurator. The expansion modules are connected to the left or right of the base unit, depending on the type.

Please refer to the document "PNOZmulti System Expansion" for details of the number of modules that can be connected to the base unit and the module types.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6 Commissioning

6.1 General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- Information given in the Technical details [18] must be followed.
- Use copper wire that can withstand 75° C.
- Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.
- Please note: The supply voltage always must be present at X2, even if you do not use the semiconductor outputs.

The unit has 2 dual-pole semiconductor outputs. These may be configured as single-pole or redundant outputs. The output assignment is defined in the PNOZmulti Configurator. Wire the output circuit as described in the table.





NOTICE





A resistance greater than 3 kOhm at the outputs is detected as an open circuit. On the following base units, only the outputs configured in the PNOZmulti Configurator are tested:



- PNOZ m1p (coated version) from Version 5.0, PNOZ m0p, PNOZ m2p from Version 2.0.
- On earlier versions of the base units, unused outputs must be loaded with a resistance of less than 3 kOhm. Example: R = 2.7 kOhm, 0/3 W at 24 V.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

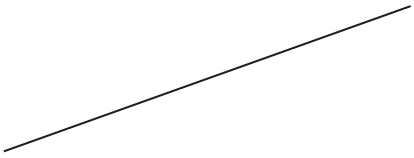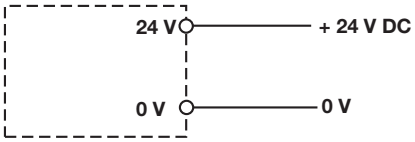6.2 Connection


Supply voltage	AC	DC
		

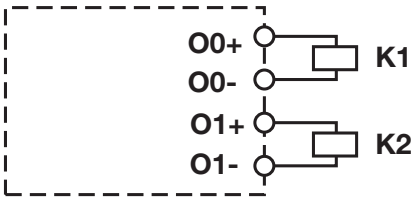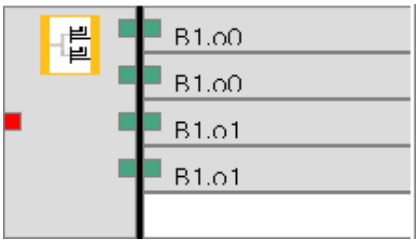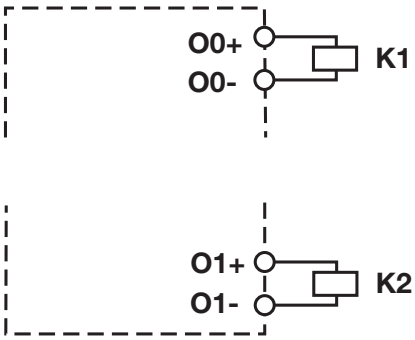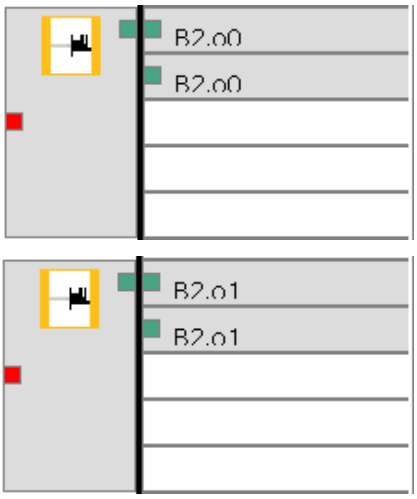Redundant output		
Single output		

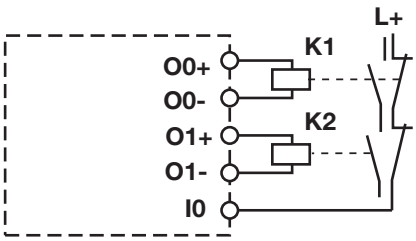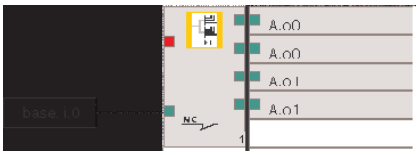Feedback loop	Redundant output
Contacts from external contactors	 

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

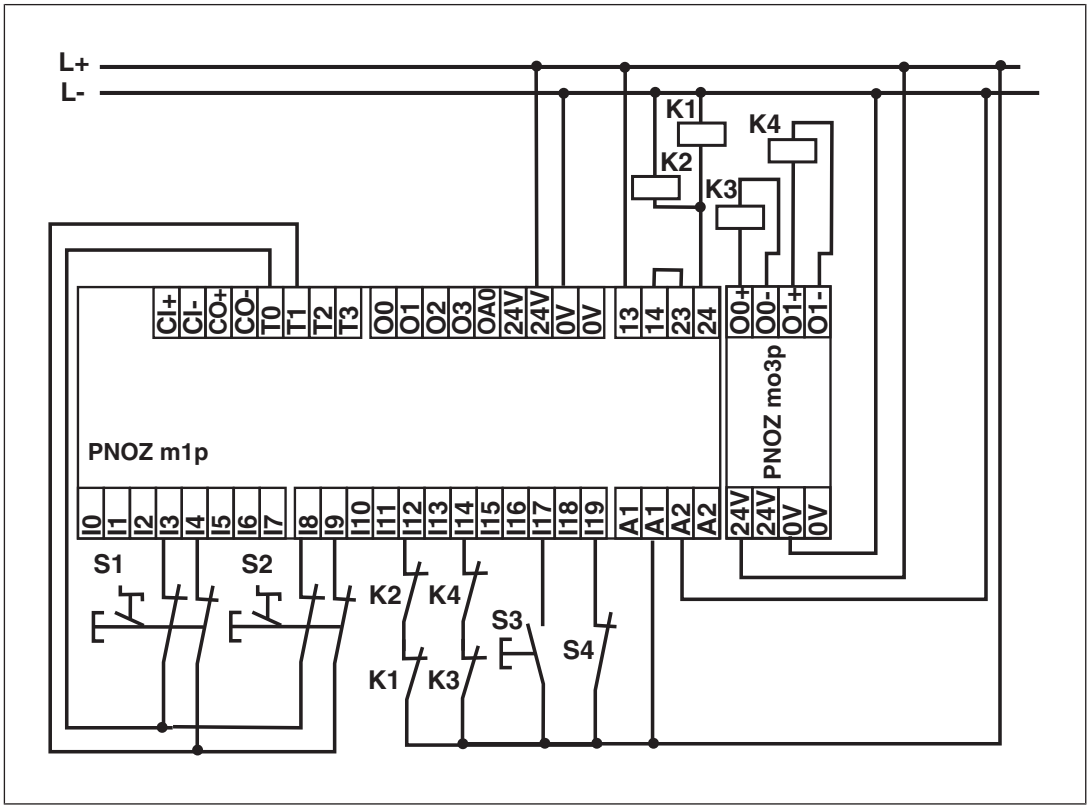6.3 Connection example



6.4 Download modified project to the PNOZmulti system

As soon as an additional expansion module has been connected to the system, the project must be amended using the PNOZmulti Configurator. Proceed as described in the operating instructions for the base unit.

NOTICE

For the commissioning and after every program change, you must check whether the safety devices are functioning correctly.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

7 Operation

When the supply voltage is switched on, the PNOZmulti safety system copies the configuration from the chip card.

The LEDs “POWER”, “DIAG”, “FAULT”, “IFAULT” and “OFAULT” will light up on the base unit.

The PNOZmulti safety system is ready for operation when the "POWER" and "RUN" LEDs on the base unit are lit continuously.

Legend

- LED on
- LED flashes
- LED off

7.1 Messages

Base unit						PNOZ mo3p		Error
Input Ix	RUN	DIAG	FAULT	IFAULT	OFAULT	FAULT	Output Ox	
								External error, which leads to a safe state; the fault is at the outputs whose LEDs are flashing, e.g. short across the contact
	●							External error on the output
	●							Internal error on the expansion module

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

8 Technical details

General	
Approvals	**BG, CCC, CE, EAC (Eurasian), KOSHA, TÜV, cU-Lus Listed**
Electrical data	
Supply voltage	
for	**Supply to the SC outputs**
Voltage	**24 V**
Kind	**DC**
Voltage tolerance	**-15 %/+20 %**
Output of external power supply (DC)	**96,0 W**
Residual ripple DC	**5 %**
Potential isolation	**yes**
Supply voltage	
for	**Module supply**
internal	**Via base unit**
Voltage	**5,0 V**
Kind	**DC**
Voltage tolerance	**-2 %/+2 %**
Power consumption	**2,5 W**
Status indicator	**LED**
Semiconductor outputs, 2-pole	
Number	**2**
Switching capability	
Voltage	**24 V DC**
Current	**2 A**
Power	**48 W**
Residual current at "0"	**0,5 mA**
Signal level at "1"	**2 A: UB - 0,5 V DC**
Switch-off delay	**30 ms**
Open circuit detection off	**3,00 kOhm**
Galvanic isolation	**yes**
Short circuit-proof	**yes**
Times	
Switch-on delay	**5,00 s**
Supply interruption before de-energisation	**20 ms**
Environmental data	
Ambient temperature	
In accordance with the standard	**EN 60068-2-14**
Temperature range	**0 - 60 °C**
Forced convection in control cabinet off	**55 °C**
Storage temperature	
In accordance with the standard	**EN 60068-2-1/-2**
Temperature range	**-25 - 70 °C**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Environmental data	
Climatic suitability	
In accordance with the standard	**EN 60068-2-30, EN 60068-2-78**
Humidity	**93 % r. h. at 40 °C**
Condensation during operation	**Not permitted**
EMC	**EN 61131-2**
Vibration	
In accordance with the standard	**EN 60068-2-6**
Frequency	**10,0 - 150,0 Hz**
Acceleration	**1g**
Shock stress	
In accordance with the standard	**EN 60068-2-27**
Acceleration	**15g**
Duration	**11 ms**
Max. operating height above sea level	**2000 m**
Airgap creepage	
In accordance with the standard	**EN 61131-2**
Overvoltage category	**III**
Pollution degree	**2**
Rated insulation voltage	**30 V**
Protection type	
In accordance with the standard	**EN 60529**
Mounting area (e.g. control cabinet)	**IP54**
Housing	**IP20**
Terminals	**IP20**
Potential isolation	
Potential isolation between	**SC output and system voltage**
Type of potential isolation	**Protective separation**
Rated surge voltage	**2500 V**
Mechanical data	
Mounting position	**Horizontal on top hat rail**
DIN rail	
Top hat rail	**35 x 7,5 EN 50022**
Recess width	**27 mm**
Material	
Bottom	**PPO UL 94 V0**
Front	**ABS UL 94 V0**
Connection type	**Spring-loaded terminal, screw terminal**
Conductor cross section with screw terminals	
1 core flexible	**0,25 - 1,50 mm², 24 - 16 AWG**
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	**0,25 - 0,75 mm², 24 - 20 AWG**
Torque setting with screw terminals	**0,25 Nm**
Stripping length with screw terminals	**7 mm**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mechanical data	
Conductor cross section with spring-loaded terminals	
1 core flexible without crimp connector	**0,25 - 1,50 mm², 24 - 16 AWG**
1 core flexible with crimp connector	**0,25 - 0,75 mm², 24 - 20 AWG**
Spring-loaded terminals: Terminal points per connection	**1**
Stripping length with spring-loaded terminals	**9 mm**
Dimensions	
Height	**94,0 mm**
Width	**22,5 mm**
Depth	**121,0 mm**
Weight	**127 g**

Where standards are undated, the 2008-03 latest editions shall apply.

8.1 Safety characteristic data

NOTICE

You must comply with the safety-related characteristic data in order to achieve the required safety level for your plant/machine.

Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN 62061 SIL CL	EN 62061 PFH_D [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2015 T_M [year]
2-channel	**PL e**	**Cat. 4**	**SIL CL 3**	**1,74E-09**	**SIL 3**	**2,48E-05**	**20**

All the units used within a safety function must be considered when calculating the safety characteristic data.

INFORMATION

A safety function's SIL/PL values are **not** identical to the SIL/PL values of the units that are used and may be different. We recommend that you use the PAScal software tool to calculate the safety function's SIL/PL values.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

9 Order reference

9.1 Product

Product type	Features	Order No.
PNOZ mo3p	Expansion module, 2 dual-pole semiconductor outputs, safe	773 510

9.2 Accessories

Connection terminals

Product type	Features	Order No.
Set spring terminals	1 set of spring-loaded terminals	783 400
Set screw terminals	1 set of screw terminals	793 400


Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779 110
KOP-XE	Jumper	774 639

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

10 Supplementary data

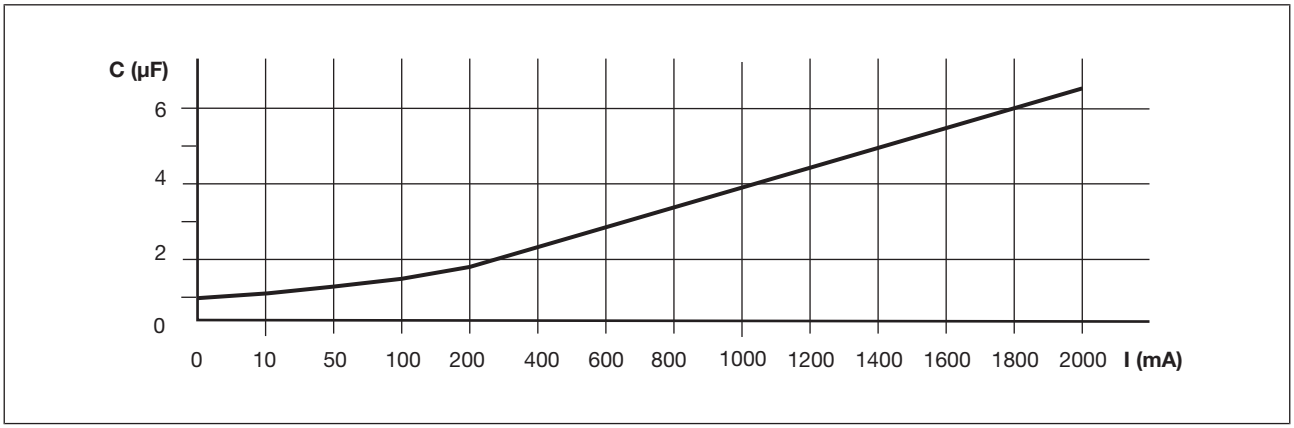10.1 Maximum capacitive load C (µF) with load current I (mA) at the semiconductor outputs



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Support

Technical support is available from Pilz round the clock.

Americas
Brazil
+55 11 97569-2804
Canada
+1 888-315-PILZ (315-7459)
Mexico
+52 55 5572 1300
USA (toll-free)
+1 877-PILZUSA (745-9872)

Asia
China
+86 21 60880878-216
Japan
+81 45 471-2281
South Korea
+82 31 450 0680

Australia
+61 3 95446300

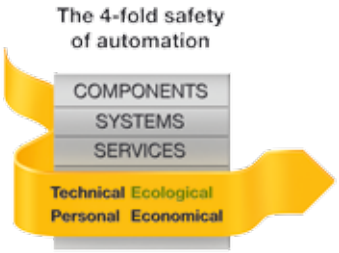
Europe
Austria
+43 1 7986263-0
Belgium, Luxembourg
+32 9 3217575
France
+33 3 88104000
Germany
+49 711 3409-444
Ireland
+353 21 4804983
Italy
+39 0362 1826711
Scandinavia
+45 74436332
Spain
+34 938497433
Switzerland
+41 62 88979-30
The Netherlands
+31 347 320477
Turkey
+90 216 5775552
United Kingdom
+44 1536 462203

You can reach our international hotline on:
+49 711 3409-444
support@pilz.com

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.

Energy saving by Pilz

BLUECOMPETENCE Alliance Member
Partner of the Engineering Industry Sustainability Initiative



pilz
Partner of:
The Best of German Engineering

Pilz GmbH & Co. KG
Felix-Wankel-Straße 2
73760 Ostfildern, Germany
Tel.: +49 711 3409-0
Fax: +49 711 3409-133
info@pilz.com
www.pilz.com

PILZ
THE SPIRIT OF SAFETY

21134-EN-06, 2016-04 Printed in Germany
© Pilz GmbH & Co. KG, 2015

CMSE®, InduraNET p®, PAS4000®, PAScal®, PASconfig®, Pilz®, PIT®, PLID®, PMCprimo®, PMCprotego®, PMCtendo®, PMD®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS SafetyEYE®, SafetyNET p®, THE SPIRIT OF SAFETY® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries. We would point out that product features m from the details stated in this document, depending on the status at the time of publication and the scope of the equipment. We accept no responsibility for the validity, accuracy and entirety of the text and graphics presented in this information. Please contact our Technical Support if you have any questions.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP