ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Pilz PSS1 DI 2* at our website: *Click HERE*

Programmable Safety Systems
PSS-Range

PSS DI2, PSS1 DI2
Operating Manual
Item No. 20 295-05



The spirit of safety.

All rights to this manual are reserved by Pilz GmbH & Co. KG. Copies may be made for internal purposes.

While every effort has been made to ensure that the information in this manual is accurate, no responsibility can be accepted for errors or omissions contained within it.

We reserve the right to amend specifications without notice. We are grateful for any feedback on the contents of this manual.

The names of products, goods and technologies used in this manual are trademarks of the respective companies.

Contents

Introduction 1-1

Validity of documentation 1-1
Overview of documentation 1-2
Definition of symbols 1-3

Overview 2-1

Front view 2-2


Safety 3-1

Intended use 3-1
System requirements 3-1
CPU versions 3-1
System software versions 3-2
Categories in accordance with EN 954-1 3-2
Digital inputs (DI2) 3-2

Function Description 4-1


Digital inputs DI2 4-1

Contents

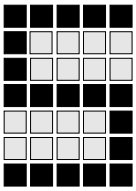


Wiring **5-1**

Configuration **5-1**
Notes on wiring **5-2**
Example: Single-channel, failsafe input device, without test pulse **5-2**
Example: Dual-channel input devices, without test pulses **5-4**
Example: Single-channel, failsafe input device, with test pulse **5-6**
Example: Dual-channel, failsafe input device, with test pulses **5-8**

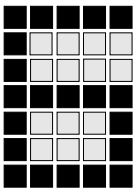


Operation and Maintenance **6-1**

Commissioning **6-1**
Faults **6-1**

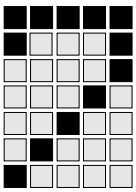

Technical Details **7-1**

Power dissipation **7-2**

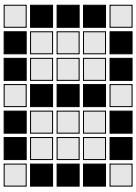

Appendix **8-1**

Changes in the documentation **8-1**
Changes from Version II to Version III 8-1
Changes from Version III to Version IV 8-1
Changes in Version 20 295-05 8-1

Introduction

This operating manual explains the function and operation of the centralised input module PSS(1) DI2.

Please also refer to the following documentation:
During installation:

- Installation Manual: PSS 3000/PSS 3100 Series

During configuration:

- PSS-Range Safety Manual
- Installation Manual: PSS 3000/PSS 3100 Series
- PSS-Range: FS System Description

This documentation is intended for instruction and should be retained for future reference.

Validity of documentation

This documentation is valid for the PSS(1) DI2 from Version 1.2.

It is valid until new documentation is published. The latest documentation is always enclosed with the unit.

Introduction

Overview of documentation

1 Introduction
The introduction is designed to familiarise you with the contents, structure and specific order of this manual.

2 Overview
This chapter provides information on the module's most important features.

3 Safety
This chapter **must** be **read** as it contains important information on safety regulations and intended use.

4 Function Description
This chapter describes the module's functions.

5 Wiring
This chapter describes the module's safety-related wiring.

6 Operation and Maintenance
This chapter explains how to commission the module and advises on what to do if a fault occurs.

7 Technical Details

8 Appendix

Definition of symbols

Information in this manual that is of particular importance can be identified as follows:



DANGER!

This warning must be heeded! It warns of a **hazardous situation that poses an immediate threat of serious injury and death** and indicates preventive measures that can be taken.



WARNING!

This warning must be heeded! It warns of a **hazardous situation that could lead to serious injury and death** and indicates preventive measures that can be taken.



CAUTION!


This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



NOTICE
This describes a situation in which the unit(s) could be damaged and also provides information on preventive measures that can be taken.



INFORMATION
This gives advice on applications and provides information on special features, as well as highlighting areas within the text that are of particular importance.

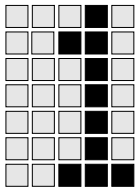

Notes

Overview

The input module PSS(1) DI2 has 32 digital inputs. The inputs can be used to monitor emergency stop circuits, for example. They are generally suitable for connecting:

- Single-channel safety-related input devices
  - with test pulses
  - without test pulses
- Multi-channel safety-related input devices
  - with test pulses
  - without test pulses.

The test pulses may come from a PSS(1) DI2O T module, for example.

Overview

Front view

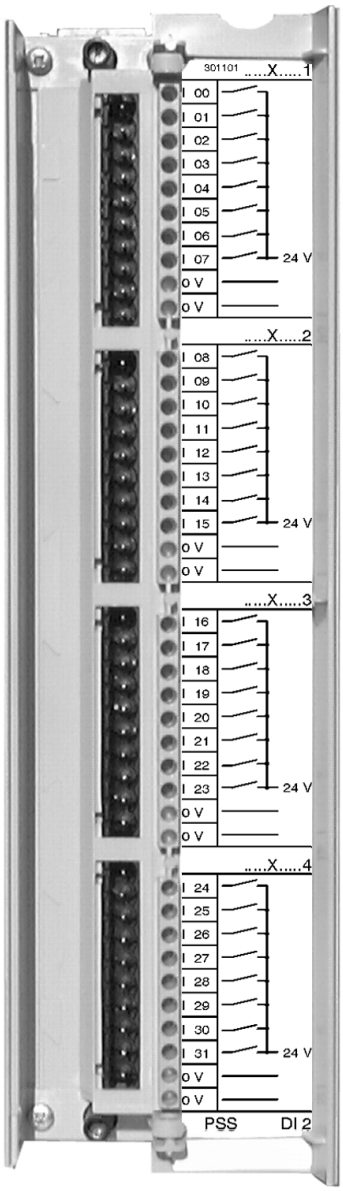


Fig. 2-1: Front view of the PSS(1) DI2

Safety

Intended use

The input module PSS(1) DI2 is designed for use in safety-related applications. It is used in the failsafe section of the PSS.

The PSS DI2 module is designed for use on a module rack from the PSS 3000 series.
The PSS1 DI2 module is designed for use on a module rack from the PSS 3100 series.

The following is deemed improper use:

- Any component, technical or electrical modification to the module
- Use of the module outside the areas described in this manual
- Use of the module outside the documented technical details (see chapter entitled “Technical Details”).

Intended use includes making the installation EMC-compliant. Please refer to the guidelines given in the “PSS 3000/PSS 3100 Series Installation Manual” and the “PSS-Range Safety Manual”. The safety manual also includes check lists designed to help you with the safety-related planning, construction and operation of a plant.

System requirements

CPU versions

If you wish to use the PSS(1) DI2 module, it is essential that the operating system can support it. On the CPUs listed below, the module is only supported from the stated version number onwards:

- PSS CPU from Version 1.7
- PSS1 CPU from Version 1.1

All other CPUs support the module without restrictions.

System software versions

The following system software is required in order to configure the module:

- PSS SW PG from Version 4.0
- PSS WIN-PRO from Version 1.0

Please contact Pilz if you have an older version of the system software.

Categories in accordance with EN 954-1



WARNING!

Please note: To achieve the corresponding category or requirement class, the whole system including all safety-related components (parts, devices, user program etc.) must be included in the assessment. For this reason, Pilz cannot accept liability for the correct classification into a category or requirement class.

Digital inputs (DI2)

Depending on the application area and its respective regulations, the inputs may be used without test pulses for applications up to Category 3 in accordance with EN 954-1. The possibility of a short circuit occurring in the external wiring between different inputs or against L+ must be eliminated through appropriate wiring.

For Category 4 applications, shorts between the input contacts must be detected. This can be achieved through the use of test pulses on the PSS or, depending on the type of input device, through a feasibility test or through detection of shorts across the contacts on the input device (e.g. light barrier) (for connection examples please see Chapter 5, “Wiring”).

Function Description

Digital inputs DI2

The module PSS(1) DI2 has 32 DI2 type inputs (I0 ... I31).


Input signals must show a “High” of 24 VDC (+15 ... +30 VDC) or a “Low” of 0 VDC (-3 ... +5 VDC). The inputs have a filter and are galvanically isolated from the control electronics through optocouplers and converters.

Input status is transmitted to the CPU as a “0” signal (“Low”) or “1” signal (“High”). LEDs indicate the status of the inputs. An LED lights up as soon as a “1” signal is present at the input.

Diagnostic circuitry checks the function of the inputs, including the input filter and optocoupler. If an error occurs, the PSS will switch to a STOP condition, switch off the outputs and trigger a message on the CPU-display.

INFORMATION
Please note the different input delays on the inputs:


- I0 ... I15: 1 ms
- I16 ... I31: 3 ms

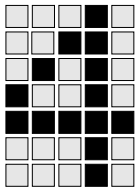

Notes

Wiring

Configuration

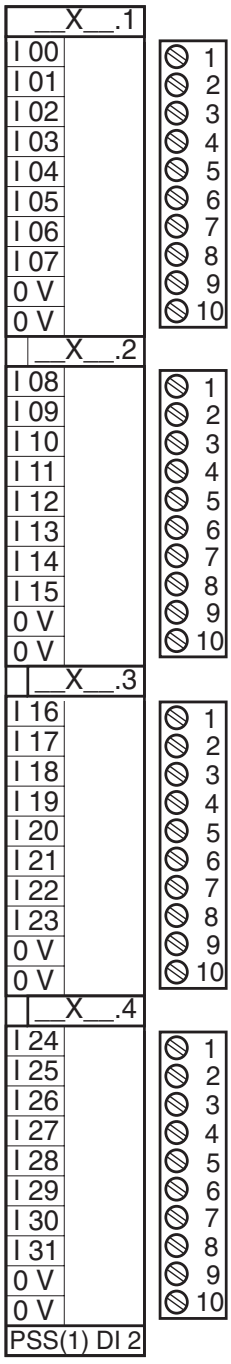

X1 Digital inputs DI2
I0 ... I7

X2 Digital inputs DI2
I8 ... I15

X3 Digital inputs DI2
I16 ... I23

X4 Digital inputs DI2
I24 ... I31

Fig. 5-1: Configuration of the PSS(1) DI2

Wiring

Notes on wiring

In addition to the “Notes on wiring” in the “PSS 3000/PSS 3100 Series Installation Manual”, please note the following:

- Safety-related input signals must operate in accordance with the failsafe principle (on switching off).
- In the user program, make sure that a “0” signal from the module always causes the relevant outputs to shut down.
- Do not assign the same test pulse to adjacent inputs.
- Only one 0 V terminal needs to be connected.
- Use copper as the conductive material.
- The torque setting on the connection terminals should be 0.5 ..0.6 Nm.



NOTICE
Please refer to the following application examples!

Example: Single-channel, failsafe input device, without test pulse

Features:

- Depending on the application area and its respective regulations, this connection diagram is suitable for **input devices with frequent and infrequent operation** in accordance with EN 954-1, **up to Category 2**. The possibility of a short circuit occurring in the external wiring between different inputs or against L+ must be eliminated through appropriate wiring.
- **The input device must be approved for failsafe applications.**
- Please read the instructions provided with the input device.



CAUTION!

A short circuit in the cable between the input device and input with the L+ line or between adjacent inputs will not be detected. Neither will a short circuit between several input devices be detected. Depending on the type of input device connected, this could create a risk to both personnel and machinery (e.g. E-STOP). Always ensure that the unit is suitably wired to eliminate the risk of short circuits.

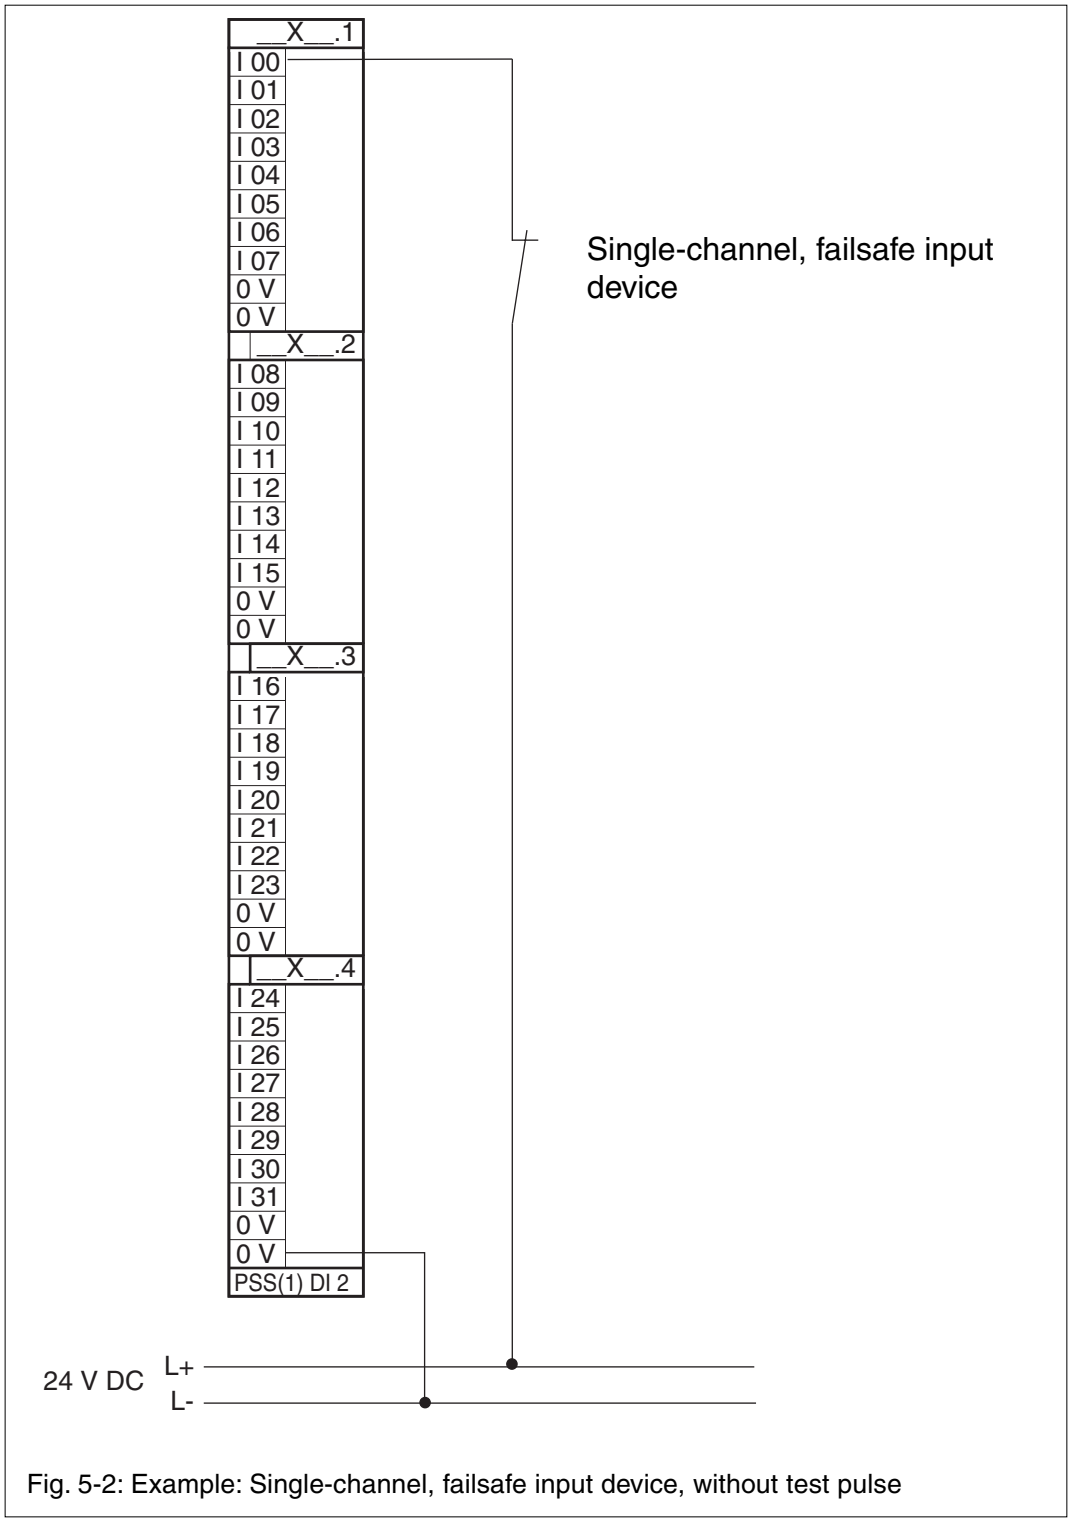


Fig. 5-2: Example: Single-channel, failsafe input device, without test pulse

Please ensure safety regulations and EMC guidelines are met!

Example: Dual-channel, failsafe input devices, without test pulses

Features:

- Depending on the application area and its respective regulations, this connection diagram is suitable for input devices with **frequent operation** and diverse channels, **up to Category 4** in accordance with EN 954-1, provided the functionality of both input device channels is monitored in the user program via a **feasibility check** (see example in the Programming Manual).
- Depending on the application area and its respective regulations, this connection diagram is suitable for input devices with **infrequent operation up to Category 3** in accordance with EN 954-1, provided the functionality of both input device channels is monitored in the user program via a **feasibility check**.
- The possibility of a short circuit occurring between adjacent connector terminals cannot be eliminated. For this reason, the two identical (homogenous) channels on an input device must **not** be connected to adjacent inputs.
- If you are using input devices with different (diverse) channels, adjacent inputs may be used. The user program will detect short circuits via the feasibility check.



CAUTION!

A short circuit in the cable between the input device and input with the L+ line or between several inputs will not be detected. Depending on the type of input device connected, this could create a risk to both personnel and machinery (e.g. E-STOP). Always ensure that the unit is suitably wired to eliminate the risk of short circuits.

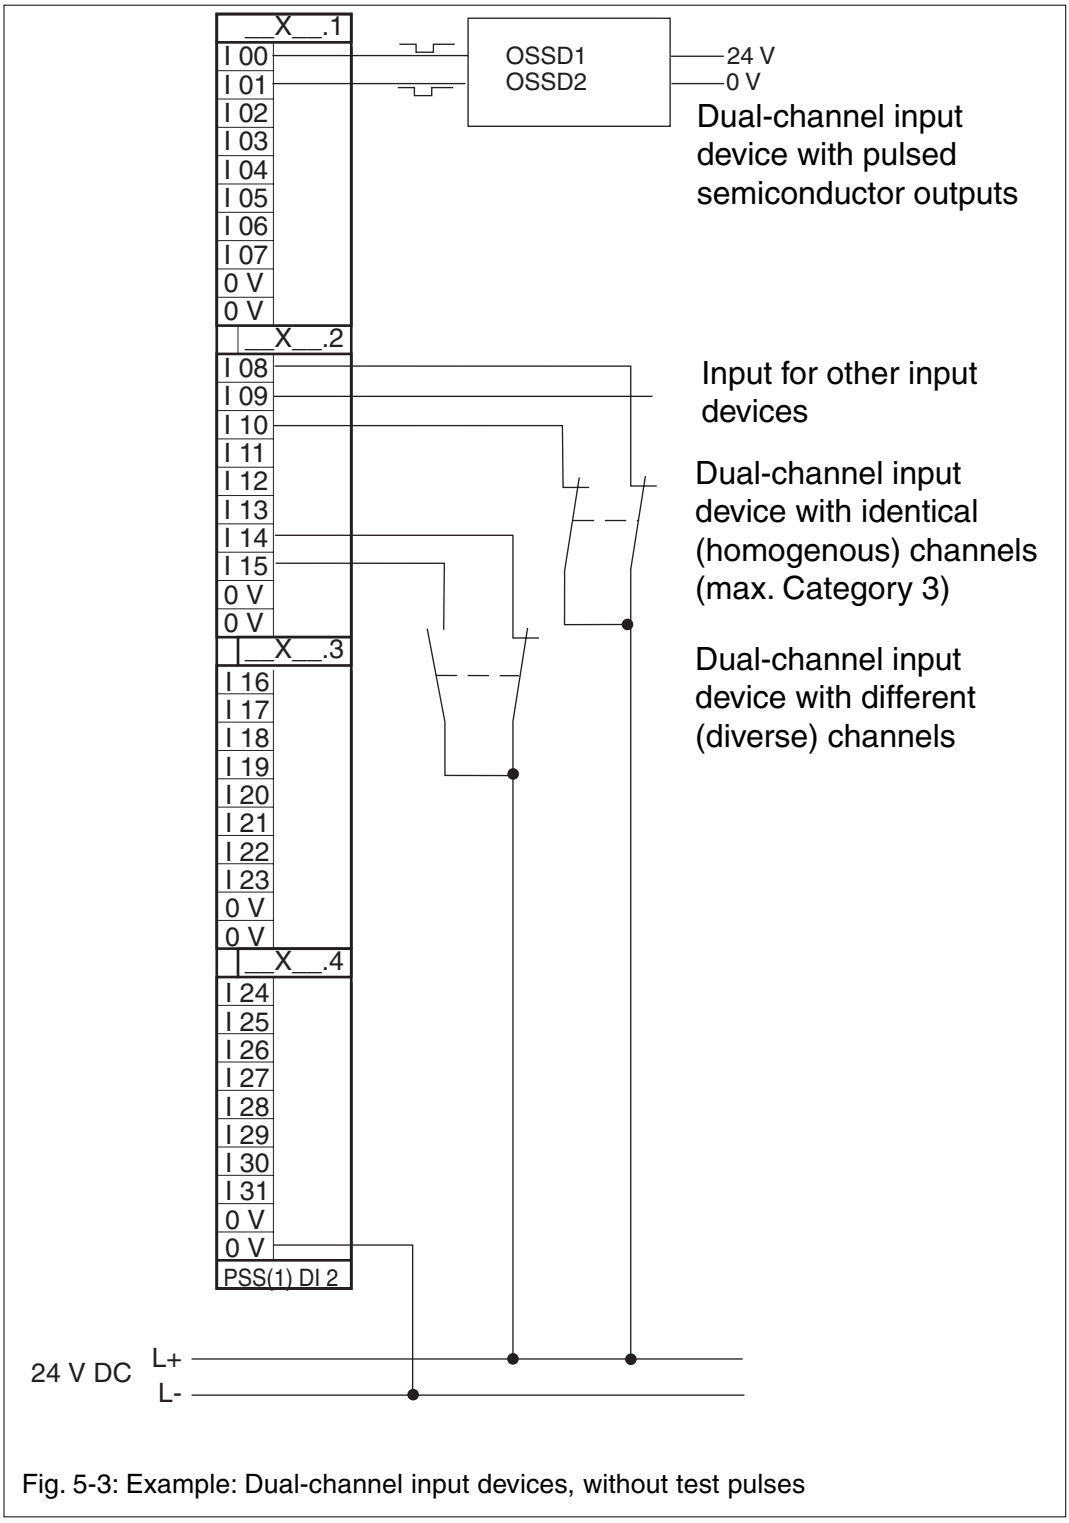


Fig. 5-3: Example: Dual-channel input devices, without test pulses

Please ensure safety regulations and EMC guidelines are met!

Wiring

Example: Single-channel, failsafe input device, with test pulse

Features:

- Depending on the application area and its respective regulations, this connection diagram is suitable for applications **up to Category 2** in accordance with EN 954-1.
- The input device must be approved for failsafe applications.
- Please read the instructions provided with the input device.
- The test pulse must be allocated to the input in the system software's PSS Configurator (e.g. PSS WIN-PRO).
- Testing will detect short circuits on the input device cable to L+ and to other test pulses.
- Only input devices with N/C contacts can be tested.
- Cable runs (distance from input device)
  - Inputs with input delay of 1 ms:
    200 m; with 1 kOhm resistance parallel to input max. 800 m
  - Inputs with input delay of 3 ms:
    800 m



CAUTION!

Short circuits between the cable from the test pulse to the input device and the cable from the input device to the input will not be detected.

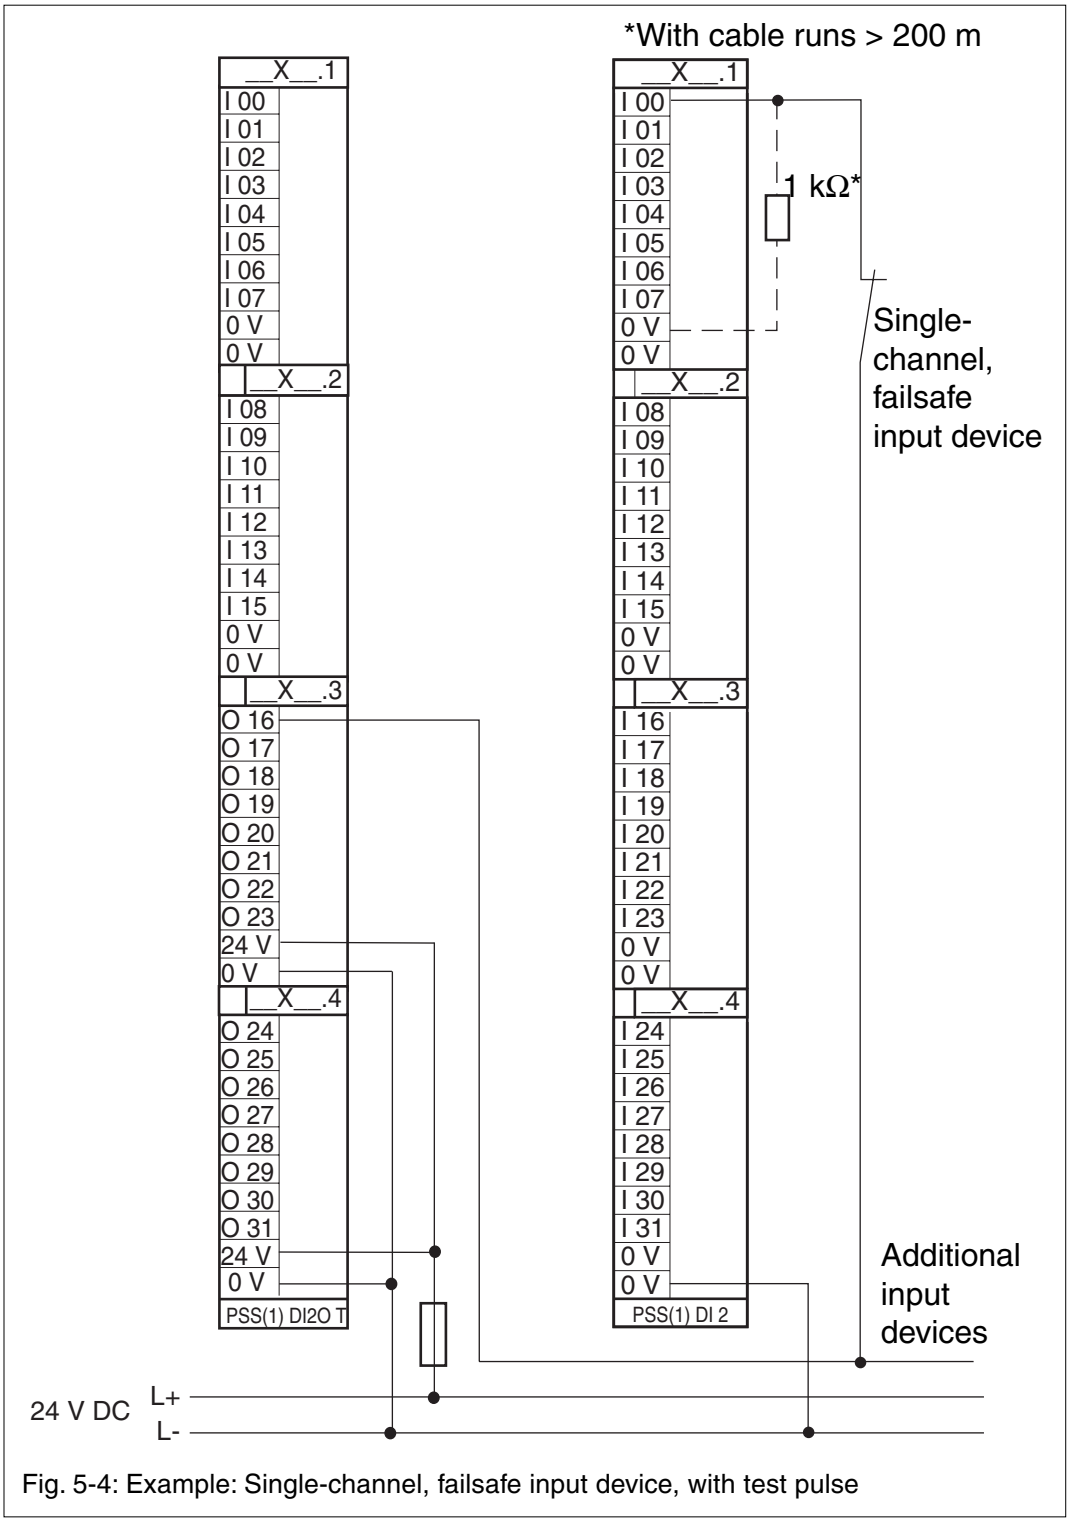


Fig. 5-4: Example: Single-channel, failsafe input device, with test pulse

Please ensure safety regulations and EMC guidelines are met!

Example: Dual-channel, failsafe input device, with test pulse

Features:

- Depending on the application area and its respective regulations, this connection diagram is suitable for applications **up to Category 4** in accordance with EN 954-1.
- This type of connection is mainly used for signal inputs with infrequent operation.
- The operating system will detect all shorts between contacts and short circuits to L+ and L-.
- Short circuits across the contact can be detected via the feasibility check in the user program.
- The test pulse must be allocated to the input in the system software's PSS Configurator (e.g. PSS WIN-PRO).
- On input devices with identical channels, each channel should be given a separate test pulse. This will ensure that all short circuits are detected, with the exception of short circuits that short out the input device (cable from the test pulse to the input device and cable from the input device to the input).
- Cable runs (distance from input device)
  - Inputs with input delay of 1 ms:
    200 m; with 1 kOhm resistance parallel to input max. 800 m
  - Inputs with input delay of 3 ms:
    800 m


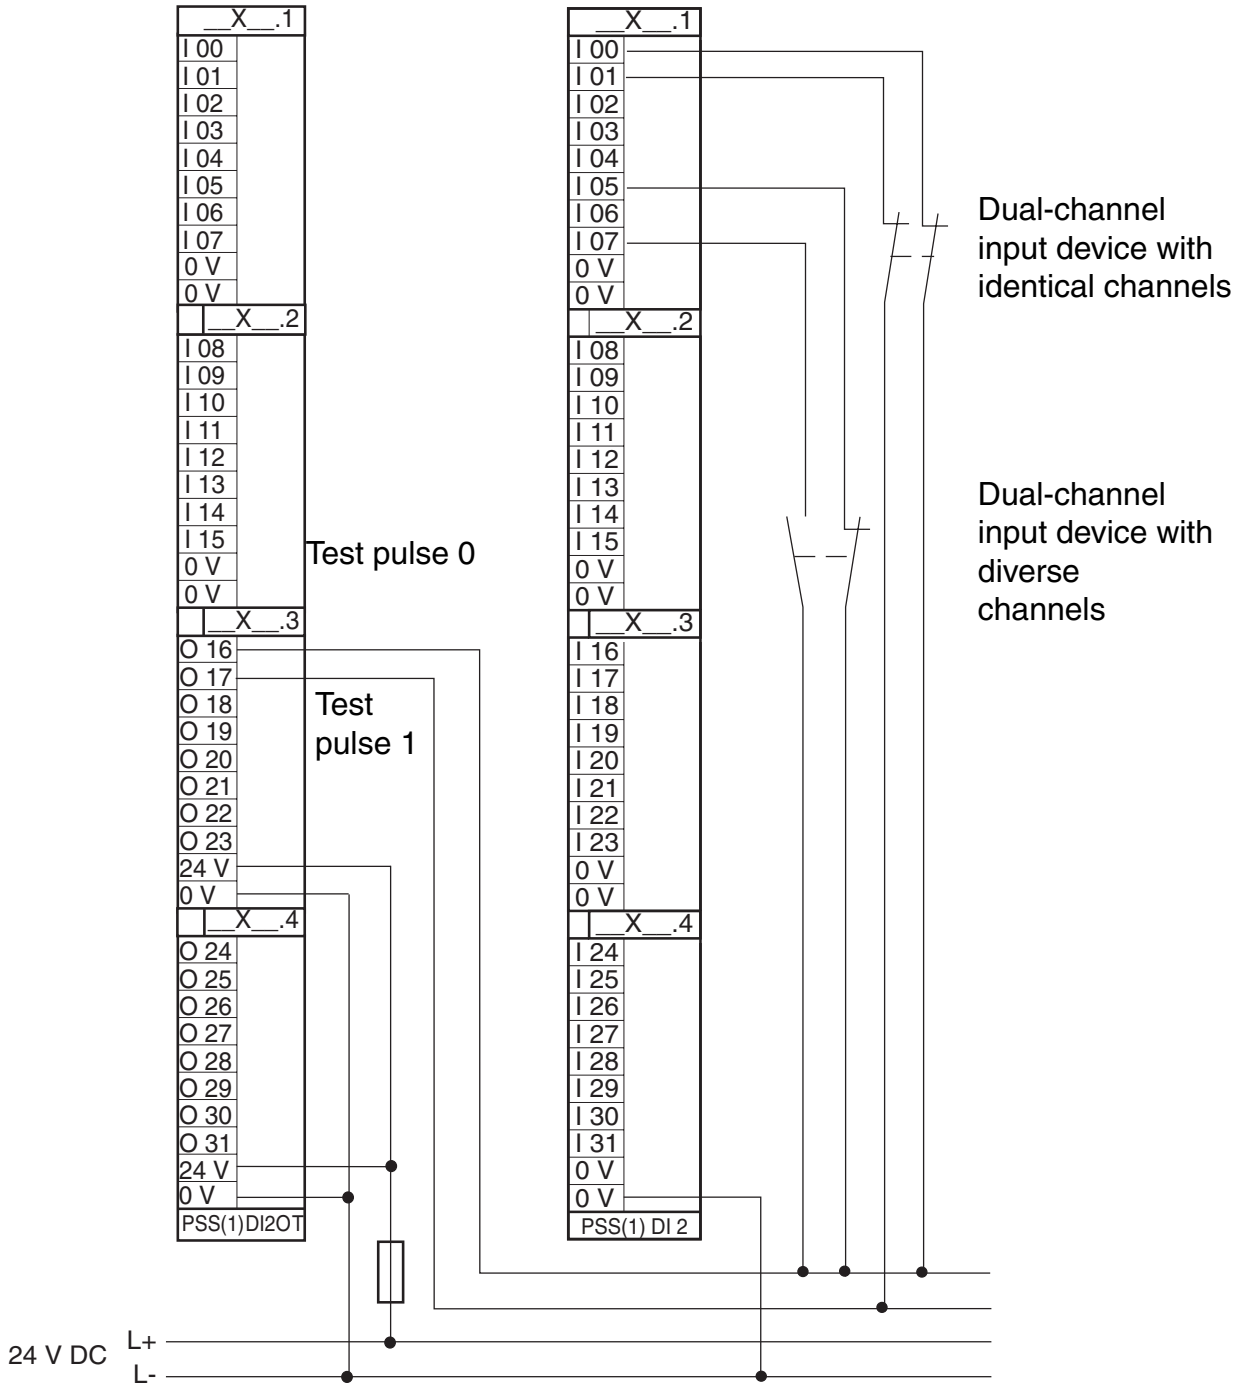


Fig. 5-5: Example: Dual-channel, failsafe input device, with test pulse

Please ensure safety regulations and EMC guidelines are met!

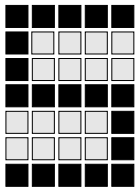

Notes

Operation and Maintenance

Commissioning

- Install the module on the module rack as described in the “PSS 3000/ PSS 3100 Series Installation Manual”.
- Connect the module as described in the chapter entitled “Wiring”.




CAUTION!

Electrostatic discharge can damage components on the module.
Ensure against discharge before touching the module, e.g. by touching an earthed, conductive surface or by wearing an earthed armband.

Faults


If a fault occurs on the module or there is a wiring error, the PSS will switch to a STOP condition, switch off all the outputs and trigger a message on the display.
The error stack display in the system software (e.g. PSS WIN-PRO) can be used to locate the error.

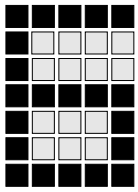

Notes

Technical Details

Electrical data	
Supply voltage	24 VDC
Tolerance range	20 ... 30 VDC including residual ripple
Current consumption	260 mA via backboard bus
Galvanic isolation	Yes (optocoupler, converter)
Polarity protection	Yes
Connection type	Screw connectors, max. 2.5 mm^2 (AWG 12)
Inputs	
Number of inputs	32
Input signal level “1” signal (high): “0” signal (low):	 +15 ... +30 VDC -3 ... +5 VDC
Input current	Typ. 6 mA
Input delay I0 ... I15 I16 ... I31	 1 ms 3 ms
Pulse suppression	≤ 300 µs (requirement: in the PSS Configurator, ≥ 3 ms must be configured under “Max. delay of digital inputs” and “DI test time”)
Status display	One LED per input
Environmental data	
Protection type (EN 60 529, 10/91)	IP20 (installed in module rack)
Mounting position	Vertical in module rack
Ambient temperature (DIN IEC 68-2-14, 06/87)	0 ... 60 °C
Storage temperature (EN 60 068-2-1/-2, 03/93)	-25 ... +70 °C
Climatic suitability (DIN IEC 68-2-30, 09/86)	Max. 95 % r.h.
Condensation	Not permitted
Vibration (EN 60 068-2-6, 04/95)	Frequency range: 10 ... 100 Hz Amplitude: 0.1 mm, max. 5g
Shock (DIN IEC 68-2-29)	30g, 11 ms/10g, 16 ms

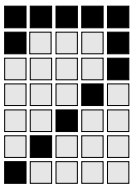

EMC	EN 50 082-2, 03/95 EN 55 011-A, 08/96
Mechanical data	
Torque setting for the screws	0.5 ... 0.6 Nm
Weight	PSS DI2: 900 g PSS1 DI2: 480 g

The names of products, goods and technologies used in this manual are trademarks of the respective companies.

Power dissipation

The power dissipation on the module is as follows:

P = P1 + k x P2

- P1: Basic power dissipation
- P2: Power dissipation on one input at a “1” signal
- k: Number of inputs at which a “1” signal may be present simultaneously.

Relationship between power dissipation and supply voltage:

	Supply voltage in V		
	20 V	**24 V**	**30 V**
P1 in W	1.3	1.3	1.3
P2 in W	0.1	0.17	0.28

Appendix

Changes in the documentation

Changes from Version II to Version III


Old page	New page	Change
5	3	Note added: module can be damaged by electrostatic discharge.
7	5	EMC information amended

Changes from Version III to Version IV

Old page	New page	Change
5	5	Pulse suppression
5	5	Protection class
5	5	Condensation not permitted

Changes in Version 20 295-05

The operating manual was completely revised.

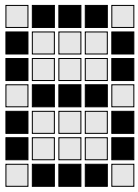

Notes

Hotline
+49 711 3409-444

...
In many countries we are represented by sales partners.

Please refer to our Homepage for further details or contact our headquarters.

www
www.pilz.com

Pilz GmbH & Co. KG
Sichere Automation
Felix-Wankel-Straße 2
73760 Ostfildern, Germany
Telephone: +49 711 3409-0
Telefax: +49 711 3409-133
E-Mail: pilz.gmbh@pilz.de

pilz
more than automation
safe automation

20 295-05-07/04 Printed in Germany

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP