

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Pisco RVUM4-4* at our website: *Click HERE*




Push-In Fitting Type Pressure Control Valve

Regulator Series

●*Adjust Pressure by Relief Air Function.*

Primary pressure from thread side is reduced and flowed out from fitting side.

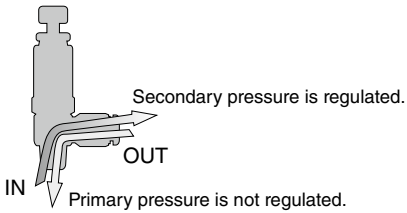

●*Equipped with Check Function.*

It can be used as check type regulator by installing between solenoid valve and actuator.


●*Push-In Fitting Built-In.*

●*Compact Design and Easy Layout.*

●*Pressure Gauge Type Line-up.*

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Model Designation (Example)

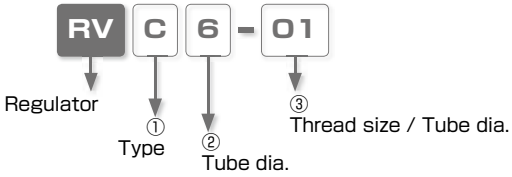

① Type

Code	Type	Code	Type	Code	Type	Code	Type
C	Elbow	S	Straight	U	Union	CM	Gauge Mounted Elbow
Code	Type						
UM	Gauge Union						

② Tube dia.

Code	4	6	8
Size (mm)	ø4	ø6	ø8

③ Thread size / Tube dia.


	Metric thread (mm)	Taper pipe thread		Tube dia.(mm)		
Code	M5	01	02	4	6	8
Size	M5 × 0.8	R1/8	R1/4	ø4	ø6	ø8
Applicable type	C(Elbow)、S(Straight)、CM(Gauge Mounted Elbow)			U(Union)、UM(Gauge Union)		


Specifications


Fluid medium	Air
Operating pressure range	0～0.9MPa
Pressure setting range	0.1～0.8MPa
Indicated pressure range(gauge)	0～0.8MPa
Tolerance (gauge)	±5% (Full scale)
Full scale	0～60℃ (No freezing)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Construction (Elbow: RVC)


Symbol


Symbol for Regulator with pressure gauge

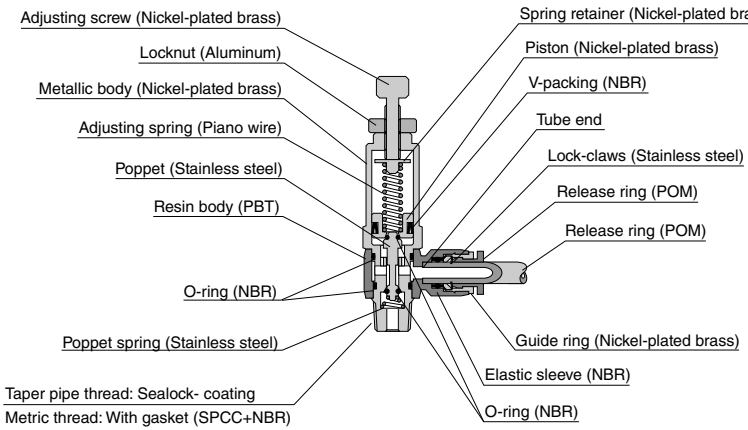

⚠ Detailed Safety Instructions

Before using PISCO products, be sure to read “Safety Instructions” and “Safety Instruction Manual” on page 23 to 27 and “Common Safety Instructions for Controllers” on page 367 to 368.

Warning

1. Do not swing or rotate resin body of the products by force. It may damage to the products and cause a fluid leakage.
2. Do not use Regulator when the fluctuation of the secondary pressure is large and exceeds the adjusted range. There is a possibility to cause malfunctions, since Regulator is not designed as a relief valve. In such case, install a safety device in the system to avoid malfunctions.

Caution

1. In order to adjust the amount of pressure, turn the adjusting screw in the clockwise direction. The pressure must be adjusted from low to high. The adjustment is not accurate if the adjusting screw is turned in the counterclockwise direction.
2. The direction of gauge can be changed by tuning the hexagonal-column under a gauge with a proper tool. It may cause damage to the gauge or a pressure reading failure if turning a gauge cap itself.
3. Tolerance of regulator gauge is ±5% FS (free scale). In case further accuracy is required, use an accurate gauge in addition.
4. Sympathetic vibration can be generated by exhausting open-air from secondary side and it can cause an internal damage of Regulator. Avoid open-air exhaustion from secondary side for a long time.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Standard Size List

Connection: Thread ⇔ Tube

Type	Page	Thread size	Tube O.D. (mm) 4	6	8
RVC Elbow	P.509	M5 × 0.8	●	●	
		R1/8	●	●	●
		R1/4		●	●

Type	Page	Thread size	Tube O.D. (mm) 4	6	8
RVS Straight	P.509	M5 × 0.8	●	●	
		R1/8	●	●	●
		R1/4		●	●

Type	Page	Thread size	Tube O.D. (mm) 4	6	8
RVCM Gauge Mounted Elbow	P.511	M5 × 0.8	●	●	
		R1/8	●	●	●
		R1/4		●	●

Connection: Tube ⇔ Tube

Type	Page	IN tube O.D. (mm)	OUT tube O.D. (mm) 4	6	8
RVU Union	P.510	4	●		
		6	●	●	
		8		●	●


Type	Page	IN tube O.D. (mm)	OUT tube O.D. (mm) 4	6	8
RVUM Gauge Union	P.512	4	●		
		6	●	●	
		8		●	●

How to adjust pressure

1. Pressure adjustment


①. How to increase pressure

Turn the adjusting screw in the clockwise direction from a fully opened state to the increase pressure. Make sure to tighten the locknut at the desired pressure. The pressure setting can be changed without tightening the locknut.

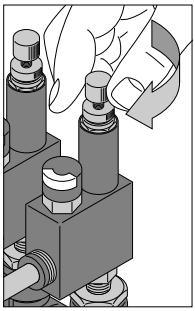

②. How to reduce pressure

In order to reduce the pressure, turn the adjusting screw in the counterclockwise direction. The pressure is reduced by the relief function, then carry out the same adjustment as ①. Make sure to tighten the locknut at the desired pressure. The pressure setting can be changed without tightening the locknut.

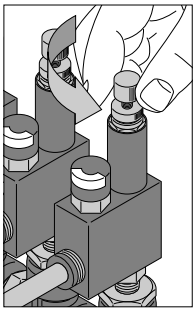


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

How to insert and disconnect

1. How to insert and disconnect tubes


① Tube insertion

Insert a tube into Push-In Fitting up to the tube end. Lock-claws bite the tube and fix it automatically, then the elastic sleeve seals around the tube.
Refer to "2. Instructions for Tube Insertion" under "Common Safety Instructions for Fittings" .

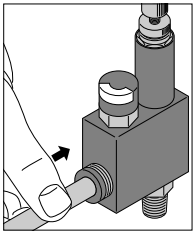

② Tube disconnection


The tube is disconnected by pushing release-ring to release Lock-claws.
Make sure to stop air supply before the tube disconnection.

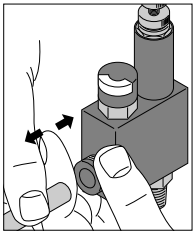

2. How to tighten thread

① Tightening thread

Use a spanner to tighten a hexagonal-column.
Refer to "Table: Recommended tightening torque" under "2. Instructions for Installing Controllers" in "Common Safety Instructions for Controllers".

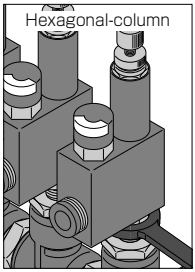

Applicable Tube and Related Products

Polyurethane Tube·····P.596
Nylon Tube·····P.608
Pressure Gauge Series·····P.526


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RVC Elbow

RoHS compliant

Chart P.513 OP. P.754 CAD



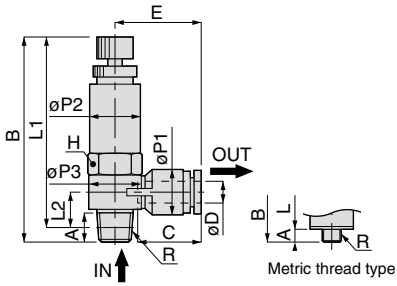

Unit : mm

Model code	Tube O.D. øD	R	A	B max.	B min.	L1 max.	L1 min.	L2	øP1	øP2	øP3	Tube end C	E	Hex. H	Weight (g)	CAD file name
RVC4-M5	4	M5×0.8	2.9	48.7	44.6	45.8	41.7	7.6	8	10	9.8	11	15.4	10	16	
RVC4-01		R1/8	7.8	60	56	56	52	10.5	10	14	14.4	14.9	21.4	14	36	
RVC6-M5	6	M5×0.8	2.9	48.7	44.6	45.8	41.7	8.4	10.5	10	9.8	11.6	17.5	10	16	
RVC6-01		R1/8	7.8	60	56	56	52	10.7	12.4	14	14.4	17	23.5	14	36	CRR-001
RVC6-02		R1/4	11.3	64.8	60.8	58.8	54.8	12.2		17	18.4		25.5	17	59	
RVC8-01	8	R1/8	7.8	60	56	56	52	11.7	14.4	14	14.4	18.1	26.9	14	38	
RVC8-02		R1/4	11.3	64.8	60.8	58.8	54.8	13.2		17	18.4		28.4	17	60	


※. "L1" and "L2" are reference values for height dimensions after tightening taper thread.

RVS Straight

RoHS compliant

Chart P.513 OP. P.754 CAD



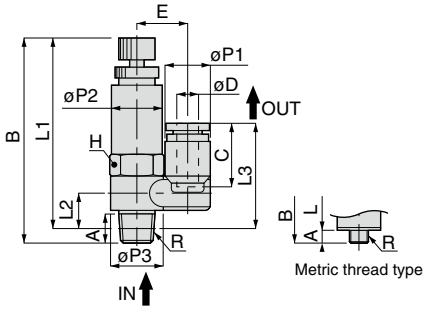

Unit : mm

Model code	Tube O.D. øD	R	A	B max.	B min.	L1 max.	L1 min.	L2	L3	øP1	øP2	øP3	Tube end C	E	Hex. H	Weight (g)	CAD file name
RVS4-M5	4	M5×0.8	2.9	48.7	44.6	45.8	41.7	7.7	24.8	10.2	10	9.8	14.9	10.5	10	18	
RVS4-01		R1/8	7.8	60	56	56	52	10.7	28.7		14	14.4		13	14	37	
RVS6-M5	6	M5×0.8	2.9	48.7	44.6	45.8	41.7	7.7	26.9	12.6	10	9.8	17	12.2	10	18	
RVS6-01		R1/8	7.8	60	56	56	52	10.7	30.8		14	14.4		14.2	14	38	CRR-002
RVS6-02		R1/4	11.3	64.8	60.8	58.8	54.8	12	32.1		17	18.4		17.2	17	60	
RVS8-01	8	R1/8	7.8	60	56	56	52	10.7	32.2	14.6	14	14.4	18.1	15.2	14	39	
RVS8-02		R1/4	11.3	64.8	60.8	58.8	54.8	12	33.6		17	18.4		18.2	17	62	

※. "L1" , "L2" and "L3" are reference values for height dimensions after tightening taper thread.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RVU Union

RoHS compliant



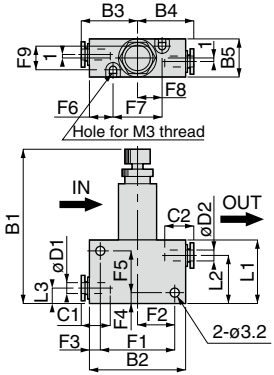


Chart P.514 OP. P.754 CAD

Unit：mm

Model code	Tube O.D. øD1	Tube O.D. øD2	B1 max.	B1 min.	B2	B3	B4	B5	L1	L2	L3	øP	Tube end C1	Tube end C2
RVU4-4	4	4	63.3	58.8	38.6	21.9	21.9	15.1	25.4	19.2	9.1	15	11	11
RVU6-4	6	4	63.3	58.8	38.6	22.3	21.9	15.1	25.4	19.2	9.1	15	11.6	11
RVU6-6		6					22.3							11.6
RVU8-6	8	6	67.5	63.2	47.6	28.5	28.6	19.2	29.5	21.3	9	19.2	19.6	17
RVU8-8		8					28.5							19.6

Model code	F1	F2	F3	F4	F5	F6	F7	F8	F9	Weight (g)	CAD file name
RVU4-4	30	15	4.3	4.2	17	9	20.6	10.3	9	36	CRR-003
RVU6-4	30	15	4.3	4.2	17	9	20.6	10.3	9	37	
RVU6-6											
RVU8-6	39.6	19.8	4	4	21.5	12.1	23.4	11.7	13	61	
RVU8-8										62	


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


RVCM Gauge Mounted Elbow

RoHS compliant

Chart P.515 OP. P.754 CAD



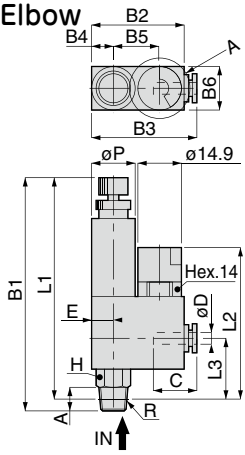



Magnified drawing of A

Metric thread type

Unit：mm

Model code	Tube O.D. øD	R	A	B1		B2	B3	B4	B5	B6	L1		L2	L3	Tube end C	E	øP	Hex. H	Weight (g)	CAD file name
				max.	min.						max.	min.								
RVCM4-M5	4	M5×0.8	3	60.6	56.6	24.8	27.4	5.8	13.7	15.1	57.6	53.6	42.8	11.8	11	4.7	11	8	28	
RVCM4-01		R1/8	7.8	81.8	77.4	32	36.2	7.8	15.8	15	77.8	73.4	51.6	18.6	15.9	7.3	15.2	12	55	
RVCM6-M5	6	M5×0.8	3	60.6	56.6	24.8	27.8	5.8	13.7	15.1	57.6	53.6	42.8	11.8	11.6	4.7	11	8	28	
RVCM6-01		R1/8	7.8	81.8	77.4	32	36.8	7.8	15.8	15	77.8	73.4	51.6	18.6	17	7.3	15.2	12	56	CRR-004
RVCM6-02		R1/4	11.3	90	85.7	35.1	39.9	9.9	17.7	19.1	84	79.7	57.3	22.8		8.7	19.1	16	84	
RVCM8-01	8	R1/8	7.8	81.8	77.4	32	36.7	7.8	15.8	15	77.8	73.4	51.6	18.6	18.1	7.3	15.2	12	56	
RVCM8-02		R1/4	11.3	90	85.7	35.1	39.8	9.9	17.7	19.1	84	79.7	57.3	22.8		8.7	19.1	16	85	

※. "L1", "L2" and "L3" are reference values for height dimensions after tightening taper thread.


Speed Controller Series
Stainless Series
PP Series
Anti-spatter Series
Constant Flow Series
Throttle (Needle) Valve Series
Stainless Series
PP Series
Anti-spatter Series
Quick Exhaust Valve Series
Exhaust Valve Series
Fixed orifice Series
Pressure Controller Series

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RVUM Gauge Union

RoHS compliant



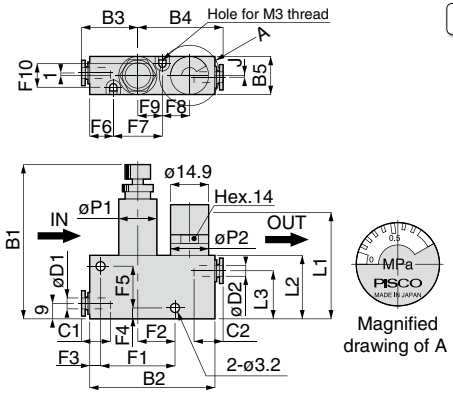

Magnified drawing of A

Chart P.516 OP. P.754 CAD

Unit : mm

Model code	Tube O.D. øD1	Tube O.D. øD2	B1 max.	B1 min.	B2	B3	B4	B5	L1	L2	L3	øP1	øP2	Tube end C1	Tube end C2
RVUM4-4	4	4	63.4	58.9	49.5	21.8	32.9	15.1	46.6	25.4	19	15	15	11	11
RVUM6-4	6	4	63.4	58.9	49.5	22.2	32.9	15.1	46.6	25.4	19	15	15	11.6	11
RVUM6-6		6					33.3								11.6
RVUM8-6	8	6	67.4	63.2	59.7	28.5	40.7	19.2	48.5	29.4	21.3	19	15.2	18.1	17
RVUM8-8		8					40.6								18.1

Model code	J	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	Weight (g)	CAD file name
RVUM4-4	1	30	15	4.2	4.2	17	9.1	20.2	10.1	10.1	9	47	CRR-005
RVUM6-4	1	30	15	4.2	4.2	17	9.1	20.2	10.1	10.1	9	47	
RVUM6-6													
RVUM8-6	0	39.7	19.8	3.9	4.1	21.3	12.2	23.2	9.1	11.6	13	74	
RVUM8-8													


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Flow characteristic

Elbow / Straight


RVC 4-M5 6-M5 RVS 4-M5 6-M5

Flow characteristic

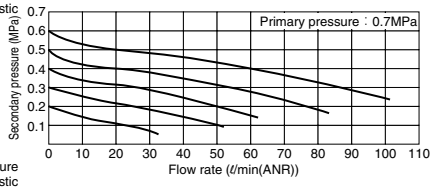

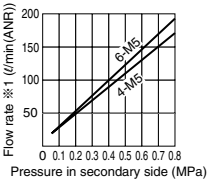


Pressure characteristic ※2

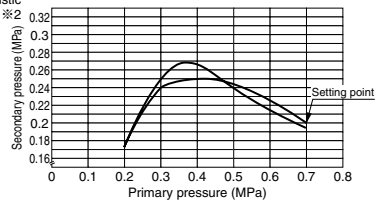


※1. Flow direction: Secondary side → Primary side
※2. Fluctuations of pressure characteristic (primary pressure): 0.7MPa → 0.2MPa → 0.7MPa


RVC 4-01 6-01 8-01 RVS 4-01 6-01 8-01

Flow characteristic

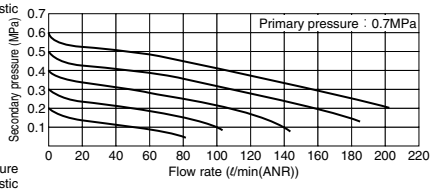

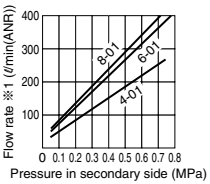


Pressure characteristic ※2

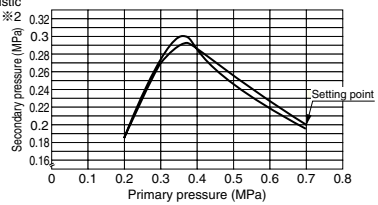


※1. Flow direction: Secondary side → Primary side
※2. Fluctuations of pressure characteristic (primary pressure): 0.7MPa → 0.2MPa → 0.7MPa


RVC 6-02 8-02 RVS 6-02 8-02

Flow characteristic

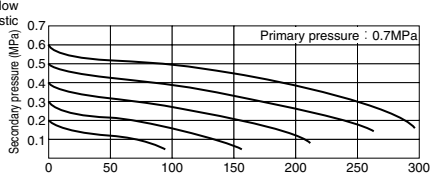

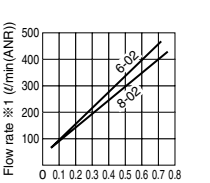

Pressure characteristic ※2

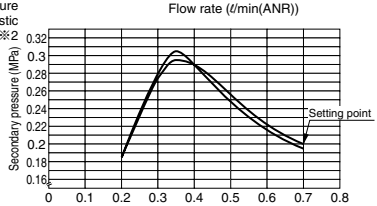


※1. Flow direction: Secondary side → Primary side
※2. Fluctuations of pressure characteristic (primary pressure): 0.7MPa → 0.2MPa → 0.7MPa


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RVU 4-4
6-4
6-6

Flow characteristic

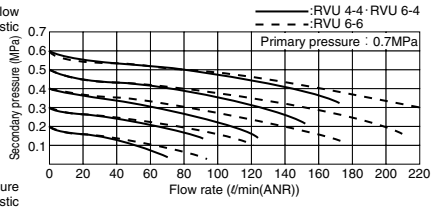


Pressure characteristic ※2

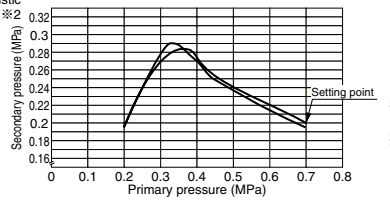


※1. Flow direction: Secondary side → Primary side
※2. Fluctuations of pressure characteristic (primary pressure): 0.7MPa → 0.2MPa → 0.7MPa

RVU 8-6
8-8

Flow characteristic

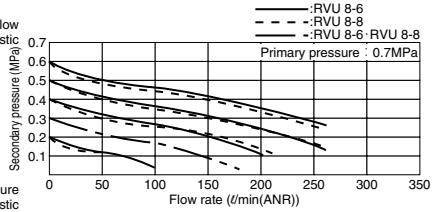

Pressure characteristic ※2

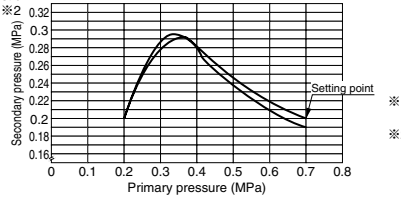


※1. Flow direction: Secondary side → Primary side
※2. Fluctuations of pressure characteristic (primary pressure): 0.7MPa → 0.2MPa → 0.7MPa

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Gauge Mounted Elbow

RVCM 4-M5 / 6-M5

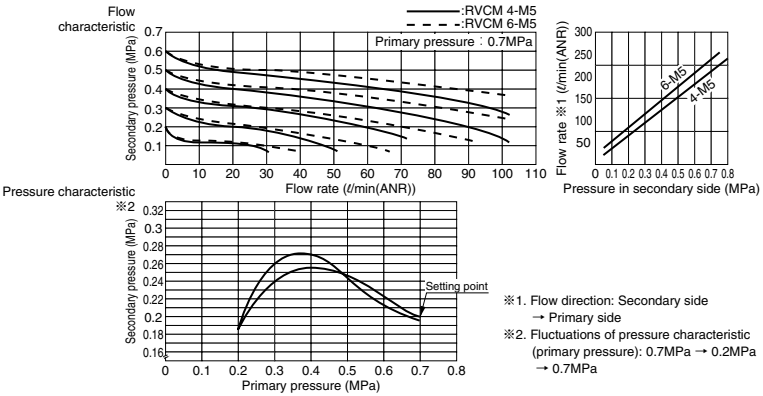


※1. Flow direction: Secondary side → Primary side
※2. Fluctuations of pressure characteristic (primary pressure): 0.7MPa → 0.2MPa → 0.7MPa

RVCM 4-01 / 6-01 / 8-01

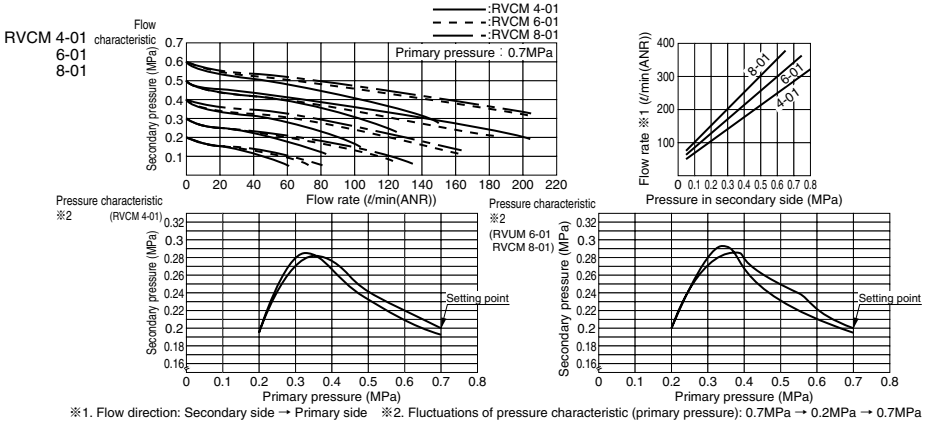

※1. Flow direction: Secondary side → Primary side ※2. Fluctuations of pressure characteristic (primary pressure): 0.7MPa → 0.2MPa → 0.7MPa

RVCM 6-02 / 8-02

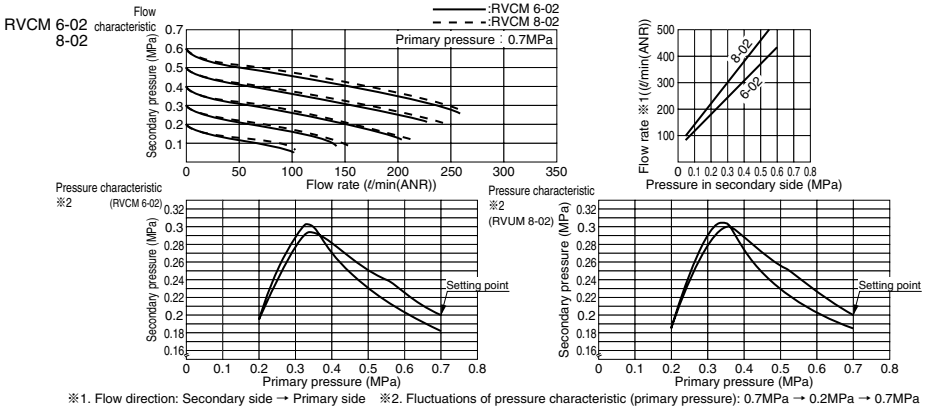


※1. Flow direction: Secondary side → Primary side ※2. Fluctuations of pressure characteristic (primary pressure): 0.7MPa → 0.2MPa → 0.7MPa


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RVUM 4-4
6-4
6-6

Flow characteristic

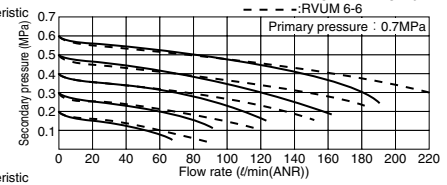


Pressure characteristic ※2

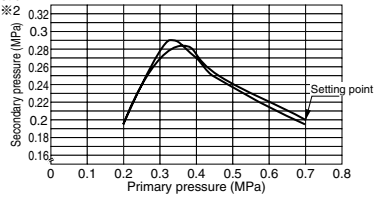


※1. Flow direction: Secondary side → Primary side
※2. Fluctuations of pressure characteristic (primary pressure): 0.7MPa → 0.2MPa → 0.7MPa

RVUM 8-6
8-8

Flow characteristic

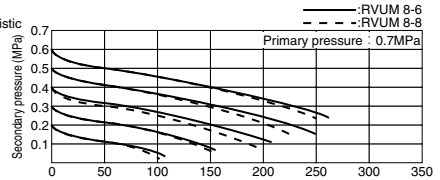

Pressure characteristic ※2

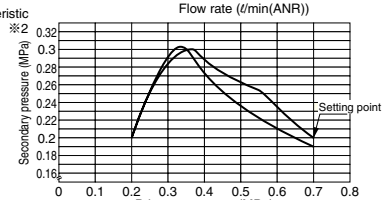

※1. Flow direction: Secondary side → Primary side
※2. Fluctuations of pressure characteristic (primary pressure): 0.7MPa → 0.2MPa → 0.7MPa

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Speed Controller Series
Stainless Series
PP Series
Anti-sputter Series
Constant Flow Series
Throttle (Needle) Valve Series
Stainless Series
PP Series
Anti-sputter Series
Quick Exhaust Valve Series
Exhaust Valve Series
Fixed orifice Series
Pressure Controller Series

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

⚠ SAFETY Instructions

This safety instructions aim to prevent personal injury and damage to properties by requiring proper use of PISCO products.

Be certain to follow ISO 4414 and JIS B 8370

ISO 4414 : Pneumatic fluid power…Recomendations for the application of equipment to transmission and control systems.

JIS B 8370 : General rules and safety requirements for systems and their components.

This safety instructions is classified into “Danger”, “Warning” and “Caution” depending on the degree of danger or damages caused by improper use of PISCO products.

⚠ Danger	Hazardous conditions. It can cause death or serious personal injury.
⚠ Warning	Hazardous conditions depending on usages. Improper use of PISCO products can cause death or serious personal injury.
⚠ Caution	Hazardous conditions depending on usages. Improper use of PISCO products can cause personal injury or damages to properties.

⚠ Warning

1. Selection of pneumatic products
   ① A user who is a pneumatic system designer or has sufficient experience and technical expertise should select PISCO products.
   ② Due to wide variety of operating conditions and applications for PISCO products, carry out the analysis and evaluation on PISCO products. The pneumatic system designer is solely responsible for assuring that the user's requirements are met and that the application presents no health or safety hazards. All designers are required to fully understand the specifications of PISCO products and constitute all systems based on the latest catalog or information, considering any malfunctions.

2. Handle the pneumatic equipment with enough knowledge and experience
   ① Improper use of compressed air is dangerous. Assembly, operation and maintenance of machines using pneumatic equipment should be conducted by a person with enough knowledge and experience.

3. Do not operate machine / equipment or remove pneumatic equipment until safety is confirmed.
   ① Make sure that preventive measures against falling work-pieces or sudden movements of machine are completed before inspection or maintenance of these machine.
   ② Make sure the above preventive measures are completed. A compressed air supply and the power supply to the machine must be off, and also the compressed air in the systems must be exhausted.
   ③ Restart the machines with care after ensuring to take all preventive measures against sudden movements.

※ This safety instructions are subject to change without notice.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Disclaimer

1. PISCO does not take any responsibility for any incidental or indirect loss, such as production line stop, interruption of business, loss of benefits, personal injury, etc., caused by any failure on use or application of PISCO products.

2. PISCO does not take any responsibility for any loss caused by natural disasters, fires not related to PISCO products, acts by third parties, and intentional or accidental damages of PISCO products due to incorrect usage.

3. PISCO does not take any responsibility for any loss caused by improper usage of PISCO products such as exceeding the specification limit or not following the usage the published instructions and catalog allow.

4. PISCO does not take any responsibility for any loss caused by remodeling of PISCO products, or by combinational use with non-PISCO products and other software systems.

5. The damages caused by the defect of Pisco products shall be covered but limited to the full amount of the PISCO products paid by the customer.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

⚠ SAFETY INSTRUCTION MANUAL

PISCO products are designed and manufactured for use in general industrial machines. Be sure to read and follow the instructions below.

⚠ Danger

1. Do not use PISCO products for the following applications.
   ① Equipment used for maintaining / handling human life and body.
   ② Equipment used for moving / transporting human.
   ③ Equipment specifically used for safety purposes.

⚠ Warning

1. Do not use PISCO products under the following conditions.
   ① Beyond the specifications or conditions stated in the catalog, or the instructions.
   ② Under the direct sunlight or outdoors.
   ③ Excessive vibrations and impacts.
   ④ Exposure / adhere to corrosive gas, inflammable gas, chemicals, seawater, water and vapor. *
   * Some products can be used under the condition above(④), refer to the details of specification and condition of each product.
2. Do not disassemble or modify PISCO products, which affect the performance, function, and basic structure of the product.
3. Turn off the power supply, stop the air supply to PISCO products, and make sure there is no residual air pressure in the pipes before maintenance and inspection.
4. Do not touch the release-ring of push-in fitting when there is a working pressure. The lock may be released by the physical contact, and tube may fly out or slip out.
5. Frequent switchover of compressed air may generate heat, and there is a risk of causing burn injury.
6. Avoid any load on PISCO products, such as a tensile strength, twisting and bending. Otherwise, there is a risk of causing damage to the products.
7. As for applications where threads or tubes swing / rotate, use Rotary Joints, High Rotary Joints or Multi-Circuit Rotary Block only. The other PISCO products can be damaged in these applications.
8. Use only Die Temperature Control Fitting Series, Tube Fitting Stainless SUS316 Series, Tube Fitting Stainless SUS316 Compression Fitting Series or Tube Fitting Brass Series under the condition of over 60℃ (140° F) water or thermal oil. Other PISCO products can be damaged by heat and hydrolysis under the condition above.
9. As for the condition required to dissipate static electricity or provide an antistatic performance, use EG series fitting and antistatic products only, and do not use other PISCO products. There is a risk that static electricity can cause system defects or failures.
10. Use only Fittings with a characteristic of spatter-proof such as Anti-spatter or Brass series in a place where flame and weld spatter is produced. There is a risk of causing fire by sparks.
11. Turn off the power supply to PISCO products, and make sure there is no residual air pressure in the pipes and equipment before maintenance. Follow the instructions below in order to ensure safety.
    ① Make sure the safety of all systems related to PISCO products before maintenance.
    ② Restart of operation after maintenance shall be proceeded with care after ensuring safety of the system by preventive measures against unexpected movements of machines and devices where pneumatic equipment is used.
    ③ Keep enough space for maintenance when designing a circuit.
12. Take safety measures such as providing a protection cover if there is a risk of causing damages or fires on machine / facilities by a fluid leakage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

⚠ Caution


1. Remove dusts or drain before piping. They may get into the peripheral machine / facilities and cause malfunction.
2. When inserting an ultra-soft tube into push-in fitting, make sure to place an Insert Ring into the tube edge. There is a risk of causing the escape of tube and a fluid leakage without using an Insert Ring.
3. The product incorporating NBR as seal rubber material has a risk of malfunction caused by ozone crack. Ozone exists in high concentrations in static elimination air, clean-room, and near the high-voltage motors, etc. As a countermeasure, material change from NBR to HNBR or FKM is necessary. Consult with PISCO for more information.
4. Special option "Oil-free" products may cause a very small amount of a fluid leakage. When a fluid medium is liquid or the products are required to be used in harsh environments, contact us for further information.
5. In case of using non-PISCO brand tubes, make sure the tolerance of the outer tube diameter is within the limits of Table 1.


● Table 1. Tube O.D. Tolerance

mm size	Nylon tube	Polyurethane tube
ø1.8mm	—	±0.05mm
ø3mm	—	±0.15mm
ø4mm	±0.1mm	±0.15mm
ø6mm	±0.1mm	±0.15mm
ø8mm	±0.1mm	±0.15mm
ø10mm	±0.1mm	±0.15mm
ø12mm	±0.1mm	±0.15mm
ø16mm	±0.1mm	±0.15mm

inch size	Nylon tube	Polyurethane tube
ø1/8	±0.1mm	±0.15mm
ø5/32	±0.1mm	±0.15mm
ø3/16	±0.1mm	±0.15mm
ø1/4	±0.1mm	±0.15mm
ø5/16	±0.1mm	±0.15mm
ø3/8	±0.1mm	±0.15mm
ø1/2	±0.1mm	±0.15mm
ø5/8	±0.1mm	±0.15mm

6. Instructions for Tube Insertion
   ① Make sure that the cut end surface of the tube is at right angle without a scratch on the surface and deformations.
   ② When inserting a tube, the tube needs to be inserted fully into the push-in fitting until the tubing edge touches the tube end of the fitting as shown in the figure below. Otherwise, there is a risk of leakage.

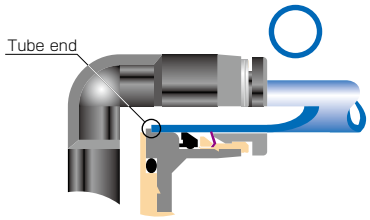

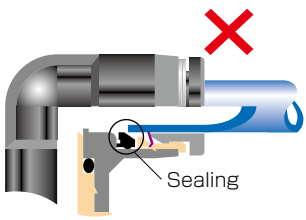

Tube is not fully inserted up to tube end.

   ③ After inserting the tube, make sure it is inserted properly and not to be disconnected by pulling it moderately.

※. When inserting tubes, Lock-claws may be hardly visible in the hole, observed from the front face of the release-ring. But it does not mean the tube will surely escape. Major causes of the tube escape are the followings;
①Shear drop of the lock-claws edge
②The problem of tube diameter (usually small)
Therefore, follow the above instructions from ① to ③, even lock-claws is hardly visible.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

7. Instructions for Tube Disconnection
   ① Make sure there is no air pressure inside of the tube, before disconnecting it.
   ② Push the release-ring of the push-in fitting evenly and deeply enough to pull out the tube toward oneself. By insufficient pushing of the release-ring, the tube may not be pulled out or damaged by scratch, and tube shavings may remain inside of the fitting, which may cause the leakage later.
8. Instructions for Installing a fitting
   ① When installing a fitting, use proper tools to tighten a hexagonal-column or an inner hexagonal socket. When inserting a hex key into the inner hexagonal socket of the fitting, be careful so that the tool does not touch lock-claws. The deformation of lock-claws may result in a poor performance of systems or an escape of the tube.
   ② Refer to Table 2 which shows the recommended tightening torque. Do not exceed these limits to tighten a thread. Excessive tightening may break the thread part or deform the gasket and cause a fluid leakage. Tightening thread with tightening torque lower than these limits may cause a loosened thread or a fluid leakage.
   ③ Adjust the tube direction while tightening thread within these limits, since some PISCO products are not rotatable after the installation.

● Table 2: Recommended tightening torque / Sealock color / Gasket materials

Thread type	Thread size	Tightening torque	Sealock color	Gasket materials
Metric thread	M3 × 0.5	0.7N·m	—	SUS304 NBR
	M5 × 0.8	1.0 ~ 1.5N·m		
	M6 × 1	2 ~ 2.7N·m		
	M3 × 0.5	0.5 ~ 0.6N·m		POM
	M5 × 0.8	1 ~ 1.5N·m		
	M6 × 0.75	0.8 ~ 1N·m		
	M8 × 0.75	1 ~ 2N·m		
Taper pipe thread	R1/8	7 ~ 9N·m	White	—
	R1/4	12 ~ 14N·m		
	R3/8	22 ~ 24N·m		
	R1/2	28 ~ 30N·m		
Unified thread	No.10-32UNF	1.0 ~ 1.5N·m	—	SUS304、NBR
National pipe thread taper	1/16-27NPT	7 ~ 9N·m	White	—
	1/8-27NPT	7 ~ 9N·m		
	1/4-18NPT	12 ~ 14N·m		
	3/8-18NPT	22 ~ 24N·m		
	1/2-14NPT	28 ~ 30N·m		

※ These values may differ for some products. Refer to each specification as well.

9. Instructions for removing a fitting
   ① When removing a fitting, use proper tools to loosen a hexagonal-column or an inner hex bolt.
   ② Remove the sealant stuck on the mating equipment. The remained sealant may get into the peripheral equipment and cause malfunctions.
10. Arrange piping avoiding any load on fittings and tubes such as twist, tensile, moment load, shaking and physical impact. These may cause damages to fittings, tube deformations, bursting and the escape of tubes.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Common Safety Instructions for Controllers

Before selecting or using PISCO products, read the following instructions. Read the detailed instructions for individual series as well as the instructions below.

⚠ Warning

1. Some products have an air direction to control. Make sure to distinguish the direction by marking on the products. Installing the product with the wrong direction may cause personal injury or property damage.

2. Avoid any load on PISCO products such as a tensile strength, twisting, bending, dropping and excessive impacts. These may cause damage to the products.

3. Locknut needs to be tightened by hand. Do not use any tool. Using tools to tighten the locknut may cause damage to the products. Also, inadequate tightening may loosen the locknut and the initial setting can be changed.

4. Use clean air to supply. Dusts and sludge may result in the change of the initial setting.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

⚠ Caution

1. Refer to "Common Safety Instructions for Fittings" for the safety instructions for fitting part.

2. Instructions for Installing Controllers
   ① Use proper tools to tighten a hexagonal-column or a knurling, when installing the controller.

   ② Refer to the following table which shows the recommended tightening torque to tighten thread. Excessive tightening may break the thread part or deform the gasket to cause a fluid leakage. Tightening thread with the tightening torque lower than these limits may cause a loosened thread or a fluid leakage.

● Table: Recommended tightening torque

(hexagonal-column)

Thread type	Thread size	Tightening torque
Metric thread	M3 × 0.5	0.7N·m
	M5 × 0.8	1～1.5N·m
	M6 × 1	2～2.7N·m
Taper pipe thread	R1/8	7～9N·m
	R1/4	12～14N·m
	R3/8	22～24N·m
	R1/2	28～30N·m
Unified thread	No.10-32UNF	1.5～1.9N·m
National pipe thread taper	1/16-28NPT	7～9N·m
	1/8-27NPT	7～9N·m
	1/4-18NPT	12～14N·m
	3/8-18NPT	22～24N·m
	1/2-14NPT	28～30N·m
Parallel pipe thread	G3/8	After hand tightening
	G1/2	1/2~1 turns

(knurling)


Thread type	Thread size	Tightening torque
Metric thread	M5 × 0.8	1/6 turns after hand tightening
	M6 × 1	
	M10 × 1	
Parallel pipe thread	G3/8	1/2~1 turns after hand tightening
	G1/2	

3. Instructions for removing Controller
   ① When removing controllers, use proper tools to loosen a hexagonal-column or a knurling.
   ② Remove the sealant stuck on the mating equipment. The remained sealant may get into the peripheral equipment and cause malfunctions.

4. Fixed Orifice Joint Series and Speed Controller Constant Flow Series have deviation of flow rate. Contact us, in case a very accurate amount of flow rate is required.

5. If PISCO products generate heat by an adiabatic compression, total temperature including the heat from the product must be controlled within the range of the specification.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

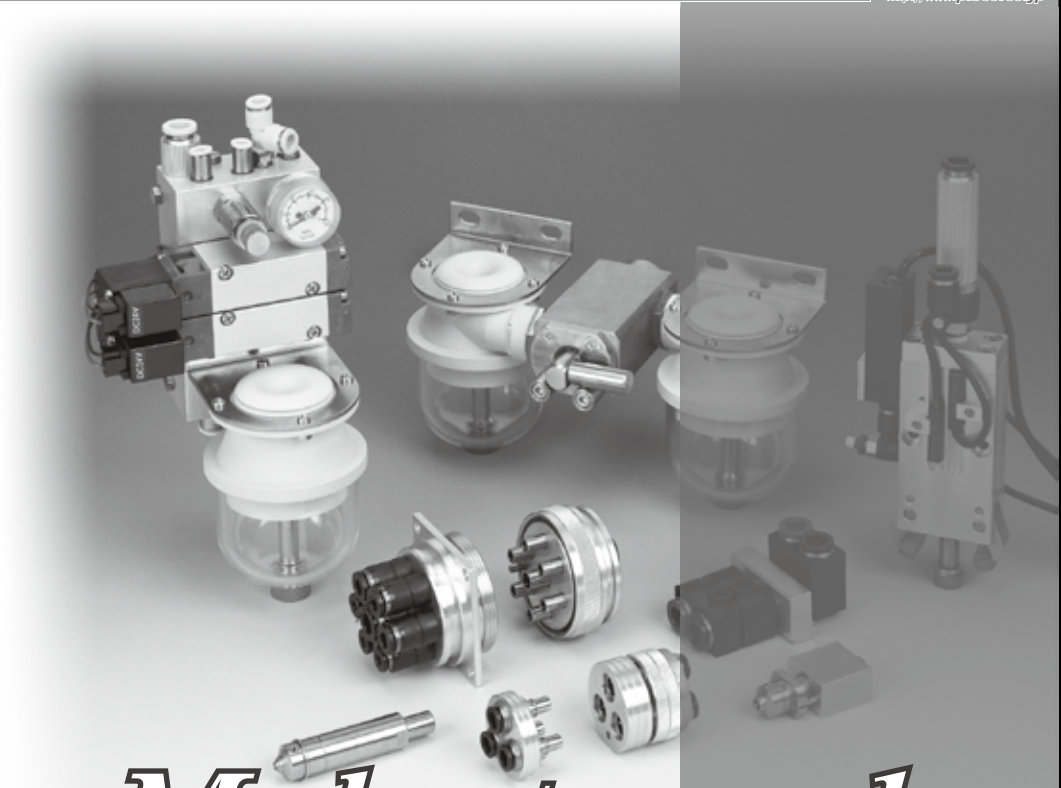

Make-to-order products

PISCO offers make-to-order products
to support customer's various requirements
such as special specifications,
and special appearances.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Special Options

Characteristics

●*Color option*

Light-gray color option for resin body and release-ring.

●*Seal rubber material option*

Seal Rubber Selection: FKM or EPDM.

●*Oil-free option*

Suitable for Oil-free Enviroment.

●*Release-ring color option*

Changeable to Red Color

●*Non-purple option*


Suppress CU ion and F ion.

※ Note: With this option, Check Valve and Stop Fitting, etc. do not have marking on the brass parts. Be careful when piping.

※Contact the nearest sales office for other special specifications.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Model Designation (Example)

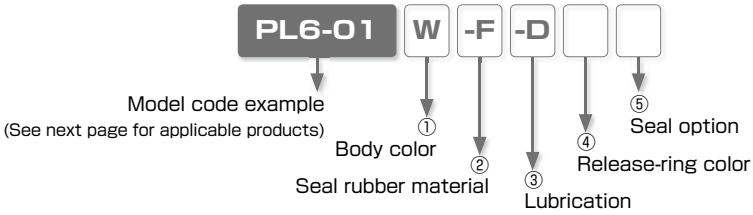

① Body color

Code	W	No code
Body color	Light-gray	Standard color

※ . W: Release-ring color is light-gray

② Seal rubber material

Code	-F	-E	No code
Material	FKM	EPDM (Oil-free)	Standard seal rubber

※ 1. FKM: Release-ring color is brown. Non-purple option is not available with FKM option.
※ 2. EPDM: All oil-free. Release-ring color is yellow.
※ 3. EPDM: Not available for Thread size M3, M6 and Fittings with Inch sized Tube dia.

③ Lubrication

Code	-D	No code
Option	Oil-free	Standard lubrication

※ 1. Oil-free : Release-ring color is yellow.
※ 2. The products with oil-free option are assembled without intentional use of lubrication through its production process. It may cause problems such as degradation of airtightness and increase of friction.

④ Release-ring color

Code	-R	No code
Color	Red	Standard color

⑤ Seal option (Taper pipe thread only)

Code	-P	No code
Option	Non-purple	Standard

※ 1. Non-purple option is not available with seal rubber FKM

※. See next page for "Reference Chart of Special Option" .
※. Contact the nearest sales office for the price.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Reference Chart of Special Option

○ : Available、× : Not available

Series	Standard specification						Special specification					
	Body Color and Packaging Option	Body color	Release-ring color	Seal rubber material	Lubrication	Seal option	① Body color	② Seal rubber material		③ Lubrication	④ Release-ring color	⑤ Seal option
							W*1	-F*2	-E*3	-D*4	-R	-P*2
							Light-gray	FKM	EPDM	Oil-free	Red	Non-purple
Tube Fitting **Standard Series**	—	Black	Black	NBR	Turbin oil	With sealock coat	—	○*5	○	○	○	○
	Light-gray	Light-gray	Light-gray				Std. option	○	○	○	×	○
	Clean-room pkg	Light-gray	Light-blue		Fluorochemical grease		—	○	○*6	○*6	×	×
	Light-gray + Clean-room pkg	Light-gray	Light-gray				Std. option	○	○	○	×	×
Tube Fitting **Mini Series**	—	Black	Black	NBR	Turbin oil	With sealock coat	—	○*5	○	○	○	○
	Light-gray	Light-gray	Light-gray				Std. option	○	○	○	×	○
	Clean-room pkg	Light-gray	Light-blue		Fluorochemical grease		—	○	○*6	○*6	×	×
	Light-gray + Clean-room pkg	Light-gray	Light-gray				Std. option	○	○	○	×	×
Tube Fitting **Stainless SUS304 Series**	—	Black	Dark-blue	FKM	Turbin oil	With sealock coat	×	Std. spec.	×	○*7	×	×
Tube Fitting Stainless SUS303 Equivalent Corrosivity Series	—	Black	Dark-blue	HNBR	Turbin oil	With sealock coat	○	○	○*7	○*7	×	○
Tube Fitting **EG Series**	—	Black	Black	NBR	Turbin oil	With sealock coat	×	○	○*8	×	×	○
Tube Fitting **Brass Series**	—	—	—	HNBR / FKM / NBR	Turbin oil	With sealock coat	×	Std. option	○	○	×	○
Tube Fitting **Long Type**	—	—	Black	NBR	Turbin oil	With sealock coat	×	○*5	○	○	○	○
Speed Controller Series	—	Black	Black	NBR	Turbin oil	With sealock coat	—	○*5	×	×	○	○
	Light-gray	Light-gray	Light-gray				Std. option	○	×	×	×	○
	Clean-room pkg	Light-gray	Light-blue		Fluorochemical grease		—	○	×	×	×	×
	Light-gray + Clean-room pkg	Light-gray	Light-gray				Std. option	○	×	×	×	×
Speed Controller SUS303 Equivalent Corrosivity	—	Black	Dark-blue	HNBR	Turbin oil	With sealock coat	○	○	×	×	×	○
Throttle (Needle) Valve Standard Series	—	Black	Black	NBR	Turbin oil	With sealock coat	—	○*5	×	×	○	○
	Light-gray	Light-gray	Light-gray				Std. option	○	×	×	×	○
	Clean-room pkg	Light-gray	Light-blue		Fluorochemical grease		—	○	×	×	×	×
	Light-gray + Clean-room pkg	Light-gray	Light-gray				Std. option	○	×	×	×	×
Fixed Orifice Joint Series	—	Black	Black	NBR	Turbin oil	With sealock coat	○	○	○	○	○*9	○
Regulator Series (RVC, RVS, RVU, RVCM, RVUM)	—	Black	Black	NBR	Turbin oil	With sealock coat	○	×	×	×	○*9	○
Check Valve Series	—	Black	Black	NBR	Turbin oil	With sealock coat	○*10	×	×	×	○*9	○
Check Valve Series (Resin Type)	—	Light-gray	Light-gray	NBR	Turbin oil	With sealock coat	Std. option	×	×	×	×	○

※ 1. W: Release-ring color is light-gray
※ 2. Seal option non-purple is not available with seal rubber material FKM
※ 3. EPDM: All oil-free. Release-ring color is yellow. Thread size M3, M6 and Fitting with inch sized Tube dia are not available.
※ 4. Release-ring color: Yellow.
※ 5. Release-ring color: Brown.
※ 6. Release-ring color: Light-blue.
※ 7. Release-ring color: Dark-blue.
※ 8. Release-ring color: Black
※ 9. Release-ring Red is not selectable with body color Light-gray.
※ 10. Not available for CVU4-4, CVU6-6 and CVU8-8.

※Contact the nearest sales office for other special specifications.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Reference chart of Apperance Color Combination (For Fitting)

Series	Resin color or Option	Tube dia.		Seal rubber material -F FKM	Seal rubber material -E EPDM	Lubrication -D Oil-free	Release-ring color -R Red
Tube Fitting **Standard Series** Tube Fitting **Mini Series**	–	mm size					
		inch size					
	Light-gray	mm size					
		inch size					
	Clean-room pkg	mm size					
		inch size					
	Light-gray + Clean-room pkg	mm size					
		inch size					
Tube Fitting **Stainless SUS304 Series**	–	mm size		Std. spec.			
Tube Fitting **Stainless SUS303 Equivalent Corrosivity Series**	–	mm size					
	Light-gray	mm size					

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Reference chart of Apperance Color Combination (For Controller)

Series	Resin color or Option	Tube dia.		Seal rubber material -F FKM	Release-ring color -R レッド
Speed Controller Series Throttle (Needle) Valve Standard Series	–	mm size			
		inch size			
	Light-gray	mm size			
		inch size			
	Clean-room pkg	mm size			
		inch size			
	Light-gray + Clean-room pkg	mm size			
		inch size			

※Contact the nearest sales office for other special specifications.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Space-Saving Options

Characteristics

●*Suitable for Installing in Limited Spaces.*

Model Designation (Example)

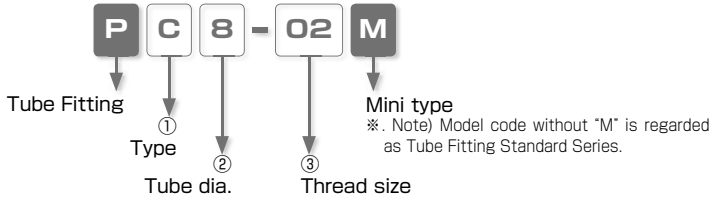

① Type

Code	Type	Code	Type	Code	Type
L	Elbow	B	Branch Tee	D	Run Tee

② Tube dia.

Code	8	10
Size (mm)	ø8	ø10


③ Thread size

Thread size	Taper pipe thread		
Code	01	02	03
Size	R1/8	R1/4	R3/8

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PL Mini Elbow



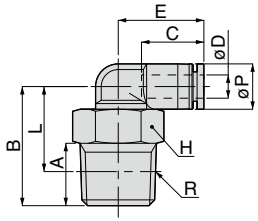


Unit : mm

Model code	Tube O.D. øD	R	A	B	Tube end C	L	Hex. H	E	øP	Weight (g)
PL8-01M	8	R1/8	8	22.5	18.1	18.5	12	21.9	15	11.9
PL8-02M		R1/4	11	25.5		19.5	14			17.5
PL8-03M		R3/8	12	26.5		20.2	17			27.9
PL10-02M	10	R1/4	11	27	20.2	21	14	24.4	18	20.9
PL10-03M		R3/8	12	28		21.7	17			28.8

※. "L" is a reference value for height dimension after tightening thread.

PB Mini Branch Tee



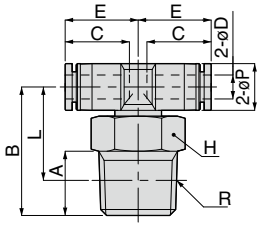

Unit : mm

Model code	Tube O.D. øD	R	A	B	Tube end C	L	Hex. H	E	øP	Weight (g)
PB8-01M	8	R1/8	8	22.5	18.1	18.5	12	21.9	15	12.8
PB8-02M		R1/4	11	25.5		19.5	14			18.2
PB8-03M		R3/8	12	26.5		20.2	17			26.1
PB10-02M	10	R1/4	11	27	20.2	21	14	24.4	18	22.3
PB10-03M		R3/8	12	28		21.7	17			30.4


※. "L" is a reference value for height dimension after tightening thread.

※Contact the nearest sales office for other special specifications.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PD Mini Run Tee



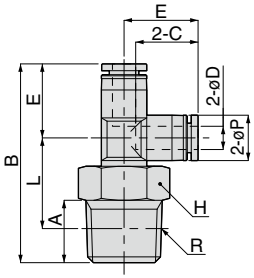

Unit：mm

Model code	Tube O.D. øD	R	A	B	Tube end C	L	Hex. H	E	øP	Weight (g)
PD8-01M	8	R1/8	8	44.2	18.1	18.5	12	21.7	15	11.9
PD8-02M		R1/4	11	47.2		19.5	14			17.5
PD8-03M		R3/8	12	48.2		20.2	17			25.3
PD10-02M	10	R1/4	11	52.3	20.2	21	14	25.3	18	21
PD10-03M		R3/8	12	53.3		21.7	17			28.8

※ .L" is a reference value for height dimension after tightening thread.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP