ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Kikusui RMF3-WU* at our website: ***Click HERE***

INSTRUCTION MANUAL

ELECTRONIC LOAD

PLZ-WU SERIES

APLICABLE MODELS

RMF 3-WU
PZL 50WU
PLZ 150WU
PLZ 300WU

KIKUSUI ELECTRONICS CORPORATION

(KIKUSUI PART NO. Z1-737-220)

IA001261

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Power Requirements of this Product

Power requirements of this product have been changed and the relevant sections of the Operation Manual should be revised accordingly.
(Revision should be applied to items indicated by a check mark ☑.)

☐ Input voltage

The input voltage of this product is _____ VAC,
and the voltage range is _____ to _____ VAC. Use the product within this range only.

☐ Input fuse

The rating of this product's input fuse is _____A, _____VAC, and _____.

WARNING

- To avoid electrical shock, always disconnect the AC power cable or turn off the switch on the switchboard before attempting to check or replace the fuse.
- Use a fuse element having a shape, rating, and characteristics suitable for this product. The use of a fuse with a different rating or one that short circuits the fuse holder may result in fire, electric shock, or irreparable damage.


☐ AC power cable

The product is porvided with AC power cables described below. If the cable has no power plug, attach a power plug or crimp-style terminals to the cable in accordance with the wire colors specified in the drawing.


WARNING

- The attachment of a power plug or crimp-style terminals must be carried out by qualified personnel.


☐ Without a power plug




☐ Without a power plug



☐ Plugs for USA



☐ Plugs for Europe

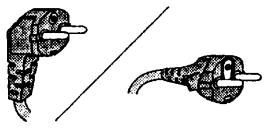

☐ Provided by Kikusui agents

Kikusui agents can provide you with suitable AC power cable.
For further information, contact your Kikusui agent.

☐ Another Cable _____

© 1998 Kikusui Electronics Corporation
Kikusui Part No. Z9-000-027 IB001681

KIKUSUI

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TABLE OF CONTENTS






	PAGE
1. FEATURES	1
2. PRECAUTIONS	2
3. LAYOUT OF COMPONENTS	3
4. ELECTRICAL CONNECTIONS	5
5. APPLICATION EXAMPLES	6
6. LOCAL CONTROL	8
7. REMOTE CONTROL	8
8. MONITORS	13
9. ALARMS	13
10. RACK MOUNT FRAME, RMF3-WU	14
11. TO INSTALL LOAD UNIT(S) IN RACK MOUNT FRAME	16
12. INSTALLING BLANK PANEL(S)	18
13. SPECIFICATIONS	19
14. OVERALL DIMENSIONS	23
15. OPERABLE RANGE CHARTS	24

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Introduction







The Electronic Load, Series PLZ-WU, is a versatile device with features as described below.
Be sure to read this manual before using the Electronic Load in order to make the correct use of it.

1. <FEATURES>

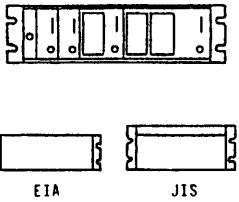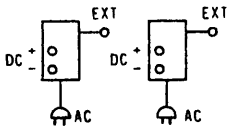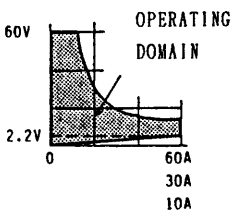	o The PLZ-WU is of a unit structure and housed in a rack mount frame. The frame can be installed on an EIA or JIS standard cabinet. (The model number of the frame is RMF3-WU.)
	o Individual units of PLZ-UW are mutually isolated.
	o The PLZ-UW can operate in a constant current, constant resistance or constant voltage mode, and can be remote-controlled when in constant current or constant voltage mode.
	o The PLZ-WU has a wide operation range and can draw the rated maximum current with 2.2 volts DC.
	o The PLZ-WU can operate on an AC line voltage of 90 V - 250 V, without requiring any switching over or modification of the AC line power input circuit.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2 . <PRECAUTIONS>

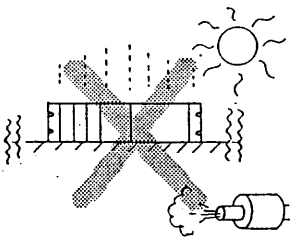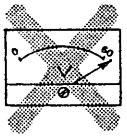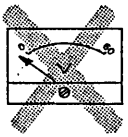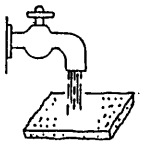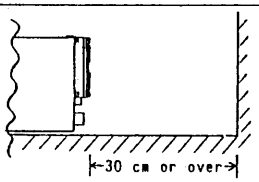	○ Do not expose the PLZ-WU to heat(direct sunlight) dusty or corrosive atmosphere, mechanical vibration, or other adverse environment.
	○ Do not apply a voltage of 60 volts DC or more to the input circuit of the Load. Note that the Load may bedamaged if such voltage is applied to it.
	○ When applying a voltage or feeding a current to the Load, make certain that it is connected in the correct polarity to the Load. If it is connected in the wrong polarity, the Load may be damaged. (The Load has a fuse to protect it against this type of failure.)
	○ The Load units are cooled by the fan of the rack mount frame. Do not use the units being removed from the frame.
	○ Clean the dust filter at appropriate intervals. If it is clogged, cooling power will be degraded.
	○ Do not block the fan air outlet. Keep a clearance of 30 cm at least from the air outlet.


876271


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3 . <LAYOUT OF COMPONENTS>


The layout of the control switches, indicator lamps and other components of the PLZ-WU is as shown in this section.

○ Front Panel

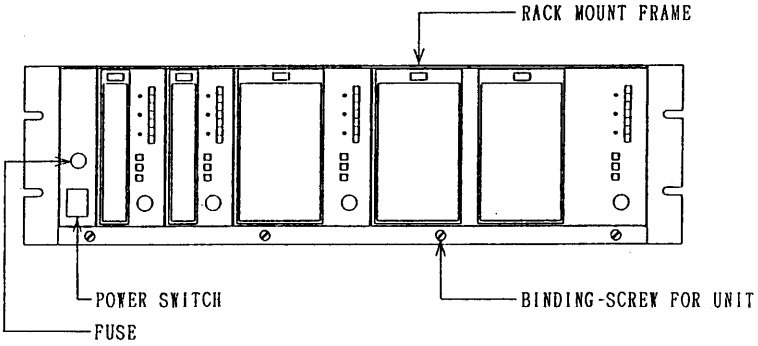

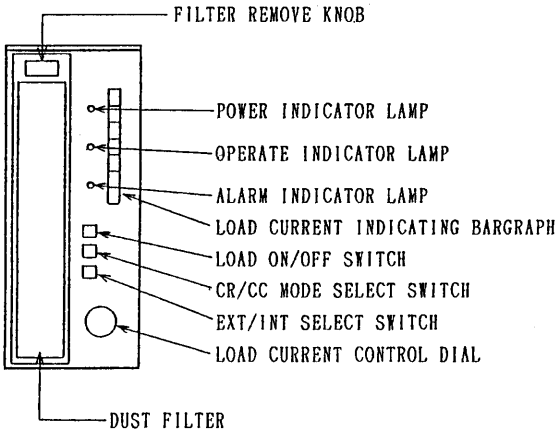

○ Rear Panel

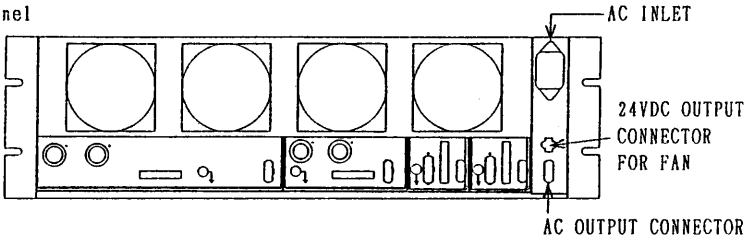


876272


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

○ Rear Panel of Load Unit


PLZ150WU

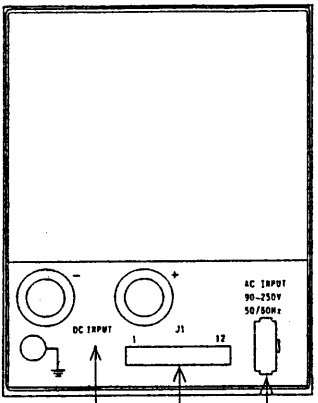

PLZ50WU

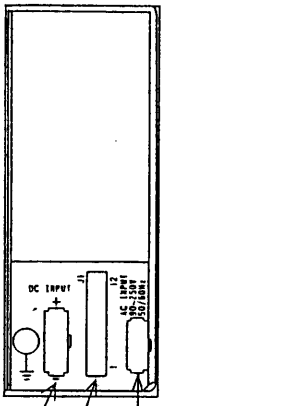

PLZ300WU

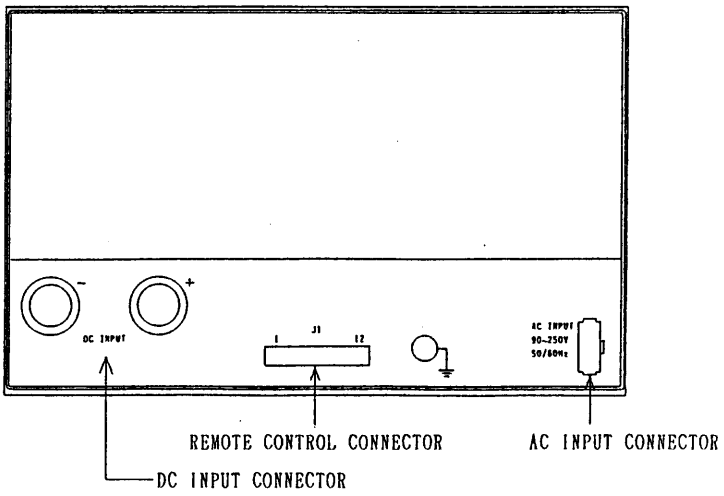

876273

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4 . <ELECTRICAL CONNECTIONS>

For electrical connections between the rack mount frame and the Load units, cables are provided as shown in Figure 4-1.


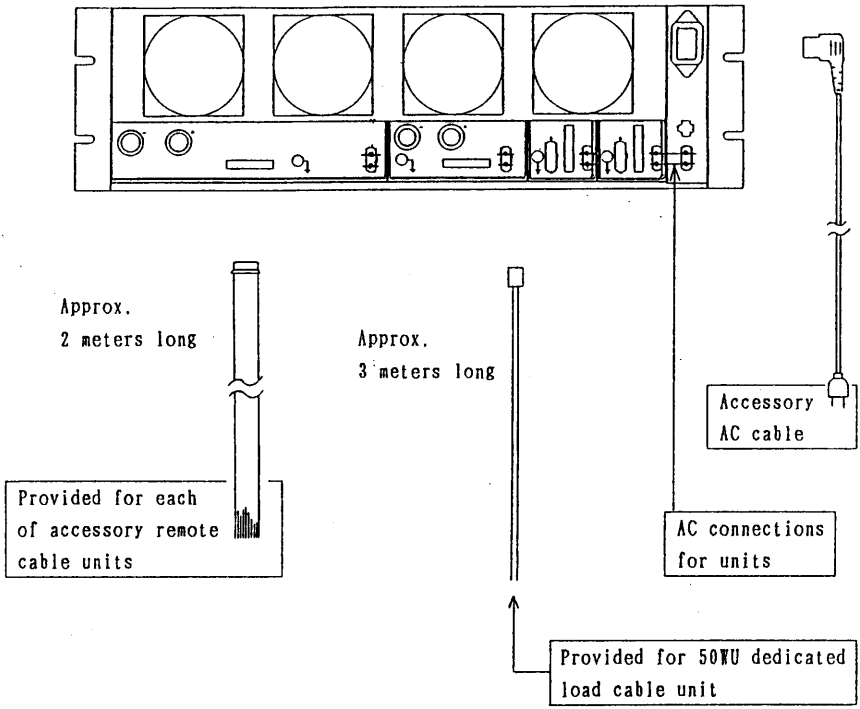


Figure 4-1

No load cables are provided accompanying Models PLZ150WU and PLZ300WU Electronic Loads, for which load cables should be prepared by the user as follows.

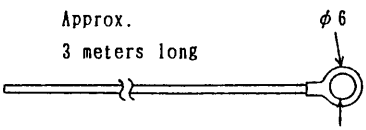

Solderless terminal

Current Rating	Sectional Area of Conductor
30A	14mm²
60A	22mm²

Note: Note that noise may be introduced if a remote control cable or a load cable longer than the standard length is used.











876274

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5 . <APPLICATION EXAMPLES>

Typical application examples of the Electronic Load are illustrated in this section.

Constant Current Mode

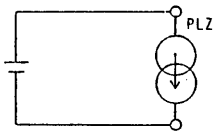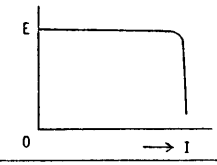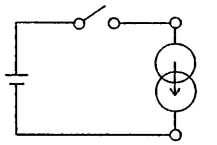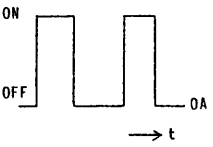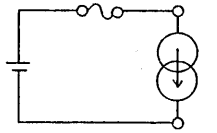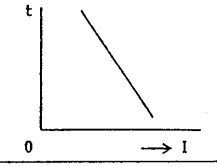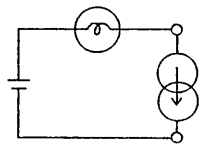
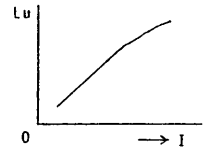
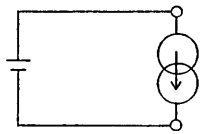
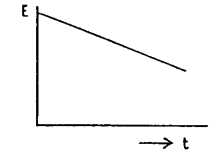
Type of Test	Test Setup	Test Characteristics
Load Test of Regulated DC Power Supply		
Contact Test		
Fuse Test		
Lamp Test		
Constant-current Discharge Test of Battery		

Constant-current setting can be remote-controlled.

87697





Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Constant Voltage Mode

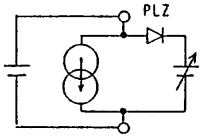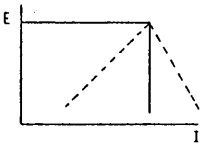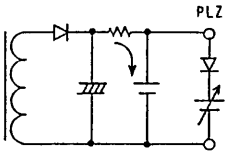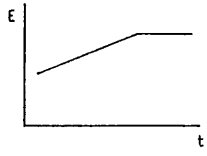Type of Test	Test Setup	Test Characteristics
Drooping Characteristic Test	 The diode is a VF zero-volt equivalent one.	
To Prevent Overcharge		

Constant voltage setting can be done only in the remote control mode.

Constant Resistance Test

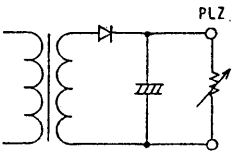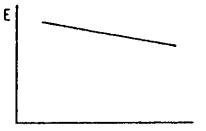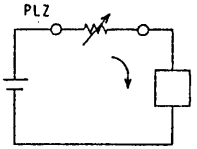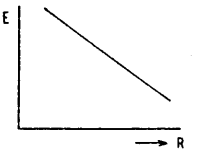
Type of Test	Test Setup	Test Characteristics
Load Test of Transformer		
To Limit Current		

The constant-resistance mode remote-control feature is optional.
CR01-PLZ: Factory-installed option

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

6 . <Local Control>

○Setting of Controls for Constant Current Mode




Control	Setting
CR/CC switch	CC
EXT/INT switch	INT
ON/OFF switch	ON
LOAD dial	As required(continuously variable current)

○Setting of Controls for Constant Resistance Mode

Control	Setting
CR/CC switch	CR
LOAD dial	As required(continuously variable resistance)

7 . <Remote Control>



Control	Setting
EXT/INT	EXT

Setting to the remote control mode is complete by the above procedure.

Function	Local	Remote
ON/OFF select		○
CC mode		○
LOAD adjustment	△	○

Note1

Note2

Note1: CR mode can't be remote-controlled.

Note2: Turn to the full clockwise position. Adjustment is effective even when in the remote control mode.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


○ Table of Remote Control Functions


The digital signal is of a positive logic.

Pin No.	Function	Signal Level	Recommendable external circuit
12	NC		
11	NC		
10	Not used		Contact Voltage approx. 12 V 0.4mA Fanout, approx. 4 mA
9	Load ON(operate)	L (Internal pull up)	
8	Not used		
7	Digital ground	Ground	
6	CC mode current change	0～10V	
5	CV mode voltage change	0～10V	
4	Analog ground	Ground	
3	Current monitor output	FS/1V	
2	Alarm	Open collector	
1	Photocoupler isolation	Emitter	


When connecting the cables, make certain that the connections are in the correct polarity.



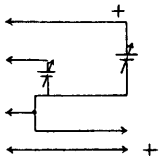




Observe that the connections are in the correct polarity.

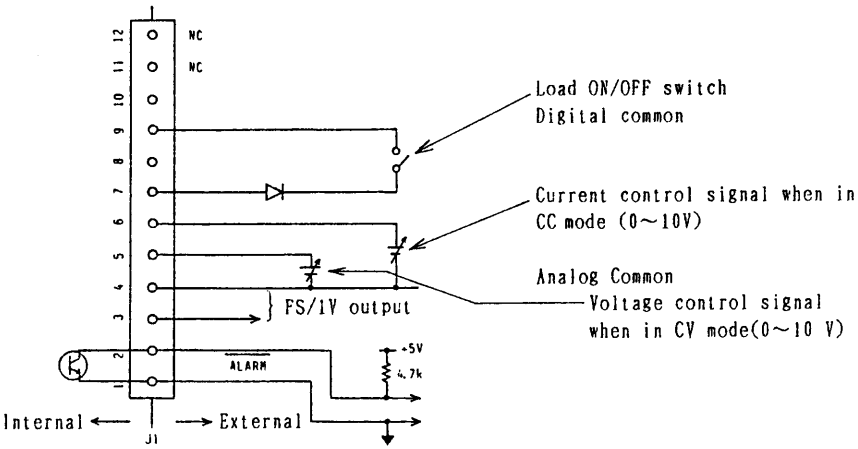

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


○ Remote Control Cable (Accessory)

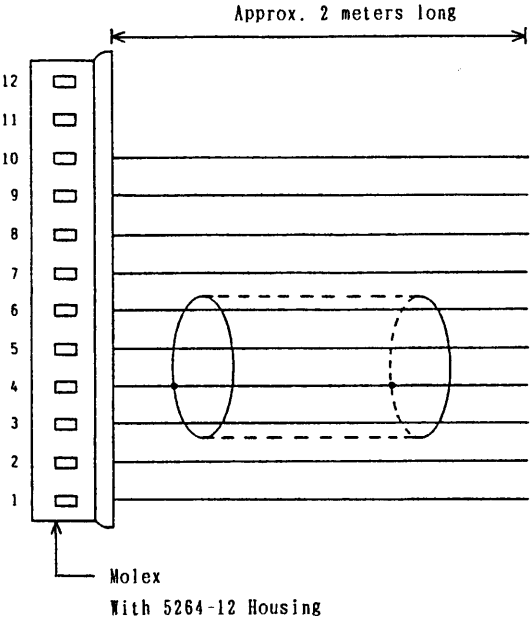

No. 8 and 10 are not used.
Use this accessory when operating the PLZ-WU in the remote control mode.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

○ Setting of Controls for Constant Current Mode

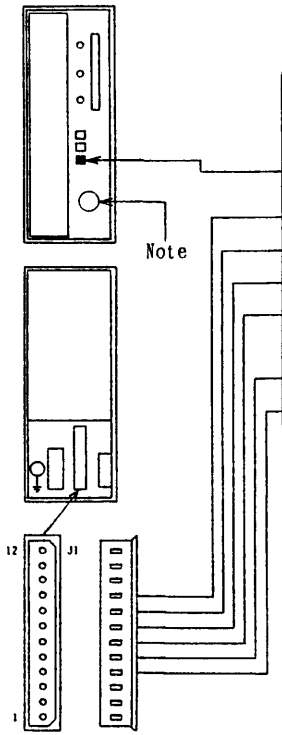

For remote control of the load current in the constant current mode, see the following.

Setting Item	Control Signal Level	Circuit Example	Status
EXT/INT switch			EXT
J1, Pin 9	L		ON
Pin 8	OPEN		C.C
Pin 7	Digital common		
J1, Pin 6	DC 0～10V		Current adjustable
Pin 5			
Pin 4	Analog common		

The load current which is set by the analog control voltage is expressed as follows:

$$Io = K1 \times Es$$

where, Io: Load current [ampere]
Es: Control voltage [volt]
K1: Constant, 1 for PLZ50WU
3 for PLZ150WU
6 for PLZ300WU

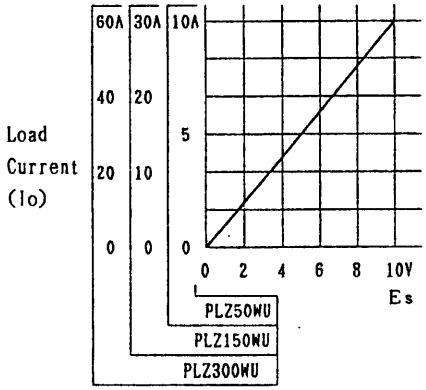



Figure 7-1 shows the relationship of analog control voltage versus load current.

Note: Turn to the full clockwise position. Adjustment is effective even when in the remote control mode.

Figure 7-1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

○ Setting of Controls for Constant Current/Constant Voltage Mode

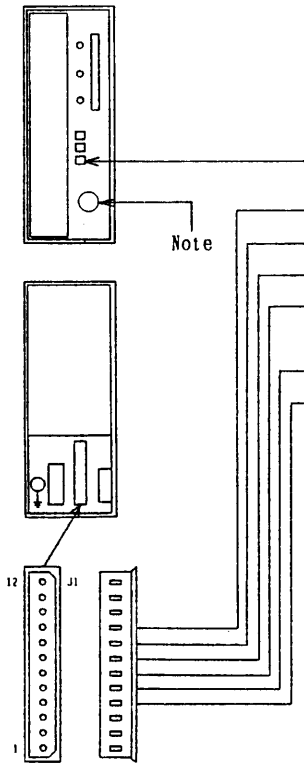

This mode can be used for test and adjustment of output drooping range of a power supply.

Setting Item	Control Signal Level	Circuit Example	Status
EXT/INT switch			EXT
J1, Pin 9	L		ON
Pin 8	OPEN		C.C
Pin 7	Digital common		
J1, Pin 6	DC 0～10V		Current adjustable
Pin 5	DC 0～10V		Voltage adjustable
Pin 4	Analog common		

For setting of the controls for the constant current mode, see the preceding page.

The load voltage which is set by the analog control voltage is expressed as follows:

$$Eo = 6 \times Ev$$

Where, Eo: Load voltage [volt]
Ev: Control voltage [volt]

Even when the load current (Io) is after setting the load voltage (Eo), the output of the tested power supply is maintained at Eo as shown is Figure 7-2.

Example of power supply output characteristics


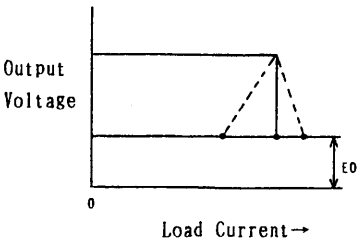


Figure 7-2

Note: Turn to the full clockwise position.
Adjustment is effective even when in the remote control mode.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

8. <MONITORS>

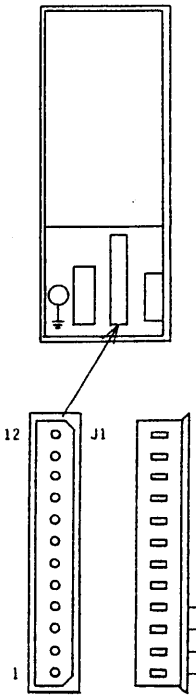

A monitor signal representing the load current is delivered.

Monitor Terminal	Output Signal	Output Impedance
J1, Pin 4	Analog Common	
Pin 3	FS/1V 2%	Approx. 500 ohms


The monitor signal voltage is 1 V ±2% when at the maximum rated current of the Load.

9. <ALARMS>

ALARM






Protected Items	Indication	Output
Overvoltage	Alarm flag	Photocoupler isolated open collector
Overcurrent		
Overpower		
Overtemperature		
Reverse polarity		



When an alarm is indicated immediately stop operating the Load and eliminate the cause of the alarm.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

10. <COMPOSITION OF RACK MOUNT FRAME RMF3-WU>

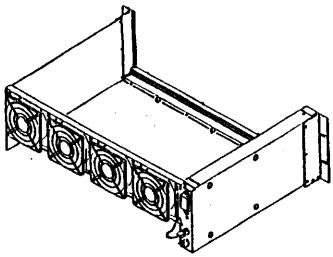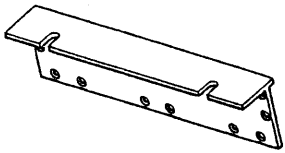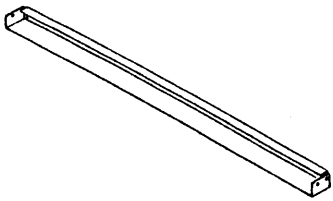Item No.	Name	Form	Q'ty
①	Rack mount frane (for EIA rack)		1
②	Brackets (right and left) for JIS rack		2
③	Blank panel for JIS rack		1
④	Screws, flat head M3×6		4
⑤	Screws, oval head M5×14		4
⑥	Finishing washer		4

876984

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

[For JIS Rack]

To assemble the rack mount frame for a JIS (Japanese Industrial Standard), proceed as follows:

1. Replace the front pillar of the right and left panel units (for EIA rack) ① with the right and left brackets for JIS rack ②, using the original binding -screws for both brackets.

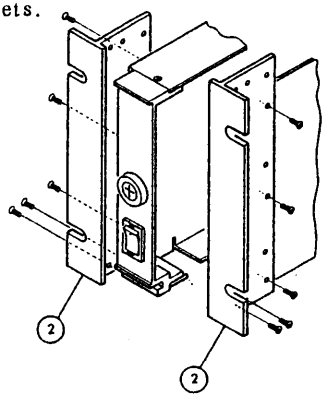


Figure 10-3

2. After installing the Load Unit(s) (See <TO INSTALL LOAD UNIT(S) IN RACK MOUNT FRAME>), fix the blank panel for JIS rack ③ with the screws M3×6 ④.

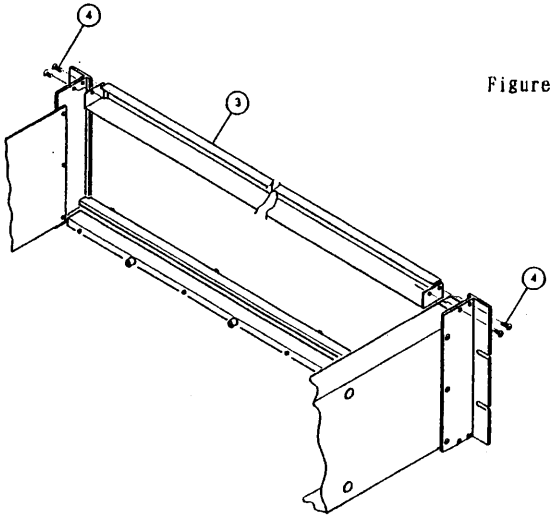


Figure 10-2

Assembly of the rack mount frame for JIS rack is complete by the above procedure.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

11. <TO INSTALL LOAD UNIT(S) IN RACK MOUNT FRAME>

To install the Load Unit(s) in the rack mount frame RMF3-WU, follow the instructions given below.

Note: Note that the rack mount frame should be assembled in a different manner depending on whether the rack is of the EIA or JIS standard as mentioned in Section 10.

Installing Procedure

1. Loosen the four unit binding-screws ① at the front of RMF3-WU and widen the gap "A". (B－B view)

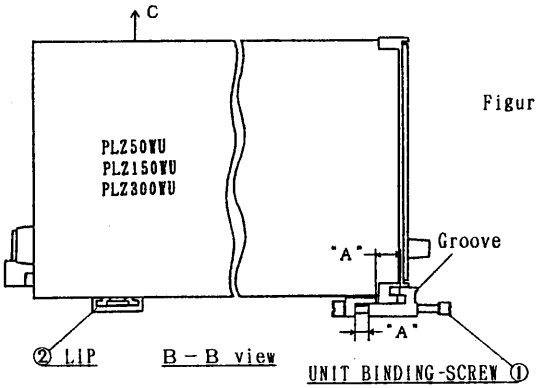


Figure 11-1

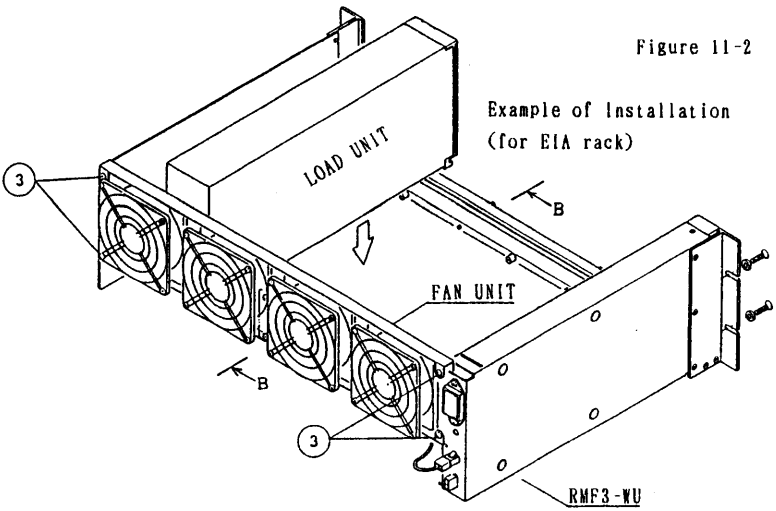


Figure 11-2

Example of Installation
(for EIA rack)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2. Loosen the four fan unit binding-screws ③. (The fan unit can move to the rear.)
3. Put the Load Unit in the frame. Make sure that the lip ② is in the groove.
4. Move the Load Unit to the required position (to the right or left as required).
5. Tighten the four unit binding-screws ①.
6. Make sure that the lip ② is securely engaged in the groove.
   (This can be made by raising the unit in the C direction shown in Figure 11-1.)
7. Tighten the four fan unit binding-screws ③.

The installation procedure is complete by the above.

Notes: 1. The groove indicated with the asterisk in Figure 11-1 may be used for identification marks (such as "CH1", "CH2").
2. Figure 11-2 shows only an example of installation of PLZ50WU. PLZ 150WU and PLZ300WU also can be installed in the same manner. Any combination of PLZ50WU, PLZ150WU and PLZ300WU also can be installed.
3. To cover up the unused void space of the rack mount space, blank panels (BP8-WU, BP4-WU, and BP2-WU) are available as options.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

12. <INSTALLING BLANK PANEL>

To cover up the unused void space of the rack mount frame, blank panels are available as shown in Figure 12-1.

Note: Note that the rack mount frame should be assembled in a differnt manner depending on whether the rack is of the EIA or JIS standard as mentioned in Section 10.

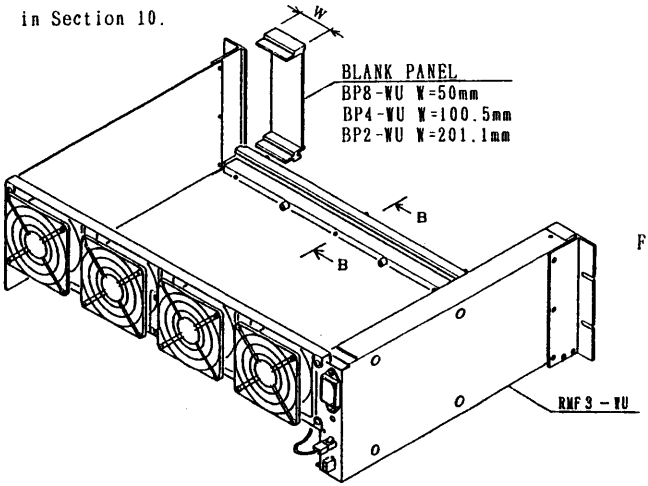


Figure 12-1

To install a blank panel, proceed as follows:

1. Loosen the four unit binding-screws ① at the front of RMF3-WU and widen the gap "A". (B－B view)
2. Place a blank panel at the required position on the rack mount frame. (The panel can be moved to the right or left on the rack as required.)
3. Tighten the four unit binding-screws ①.

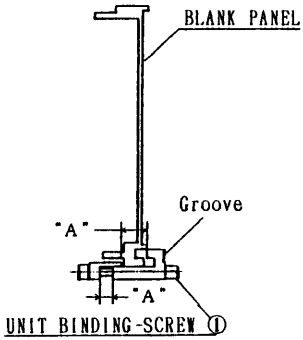


Figure 12-2

Notes: 1. The groove indicated with the asterisk in Figure 12-2 may be used for identification marks (such as "CH1", "CH2").

2. The above illustrations are only for the sake of explanation. Actually, the blank panel may be installed at the same time as the Load Unit(s) is installed on the rack mount frame.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


13. <SPECIFICATIONS>

Item / Model	PLZ-50WU	PLZ-150WU	PLZ-300WU	Remarks
Power Requirements	90－250 V, 50/60 Hz single-phase AC, approx. 12 VA			
Load Input				
Maximum Operable Voltage	60 VDC			
Minimum Operable Voltage	2 VDC, 10A	2.2 VDC, 30A	2.2 VDC, 60A	Refer to Section 15 "Operable Range Charts".
Maximum Current	10 A	30 A	60 A	
Maximum Wattage	50 W	150 W	300 W	
Constant Current Mode				
Current Range	0 - 10 A	0 - 30 A	0 - 60 A	
Stability	±0.1% +2mA	±0.1% +3mA	±0.1% +5mA	Note 1, Note 2
Response Time	100 μs or less	150 μs or less	200 μs or less	For change of 10 - 90% of full scale
Ripple Noise	0.05% A rms of full scale			Within 5Hz - 1MHz
Constant Resistance Mode				
Resistance Range	0.2 - 10 Ω or over	0.1 - 5 Ω or over	0.05 - 2 Ω or over	
Stability	±0.1% +2mA	±0.1% +3mA	±0.1% +5mA	Note 2
Constant Voltage Mode				
Type	Shunt regulator			For remote control only
Operable Voltage Range	2 - 60 VDC	2.2 - 60VDC		

Note 1: For change within load input operable voltage

Note 2: For ±10% change of AC line voltage



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Item \ Model	PLZ-50WU	PLZ-150WU	PLZ300-WU	Remarks
Remote Control				
Constant Current Mode	Control of load current with voltage signal (Maximum load current with 10V siganal)			Input impedance approx. 70 kΩ
Constant Voltage Mode	Control of load voltage with to voltage signal (Maximum load voltage with 10V signal)			Input impedance approx. 15 kΩ
CC/CR Select	CR mode/L Contact signal or photo- CC mode/H isolated open collector			12 VDC, 0.4 mA 
Load ON/OFF Control	Load ON/L With internal pull up circuit Load OFF/H 12 VDC fanout approx. 0.4 mA			
Protectors				
Overvoltage	Cuts out current when voltage has exceeded approx. 70 V			Alarm lamp blinks
Overcurrent	Approx. 11A	Approx. 33A	Approx. 65A	
Overpower	Approx. 55W	Approx. 160W	Approx. 330W	
Overtemperature	At approx. 90 deg.C (194 deg.F) of heat sink			
Reverse Polarity	Fuse to break the circuit			
Output Signals				
Current Monitor Signal	1 volt for maximum load current. Accuracy: ±2% of maximum load current			Output impedance approx. 500 Ω
Alarm Signal	When one of the protectors has tripped, the photoisolated open-collector output becomes L.			
Indicator Lamps				
POWER Lamp	Green LED (illuminates to indecate power on)			
OPERATE Lamp	Red LED (illuminates to indicate load on)			
ALARM Lamp	Red LED (illuminates to indicate protector trip)			
CURRENT Lamp	Red 7-dot bargraph (illuminates to indicate load current level)			

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Item \ Model	PLZ-50WU	PLZ-150WU	PLZ-300WU	Remarks
General Items				
Parallel Operation	Can be done in constant current mode with remote control			
Cooling System	Forced air cooling with fans on Rack Mount Frame RMF3-WU			
Operable Ambient Temperature and Humidity	0 to 40 deg C (32 to 104 deg F), 80% RH or lower			
Withstanding Voltage	1500 VAC, between AC input terminal and casing, for 1 minute			
Insulation Resistance	Between load input terminal and casing: > 20 MΩ, with 500 VDC Between AC input terminal and casing: > 30 MΩ, with 500 VDC			
Overall Dimensions, Including Extrusions	50W × 128H × 330D mm (1.96W × 5.04H × 13.0D in.)	100W × 128H × 330D mm (3.94W × 5.04H × 13.0D in.)	202W × 128H × 330D mm (7.95W × 5.04H × 13.0D in.)	
Weight	Approx. 1.1kg (Approx. 2.4 lbs)	Approx. 2.2kg (Approx. 4.8 lbs)	Approx. 4kg (Approx. 8.8 lbs)	
Accessories				
Instruction Manual	1 copy			
Fuse	15 A × 1	10 A × 4	75 A × 1	
Terminal Parts for load input	Load wires (3m) with molex 3191-02P··· 1 sets			
Remote Control Cable	Cable with Molex 5264-12 ··· 2 m × 1			

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Item \ Model	RMF3-WU Rack Mount Frame *1	Remarks
Number of Units Accommodated	(1) 8 units of PLZ50WU *2  (2) 4 units of PLZ150WU *3  (3) 2 units of PLZ300WU *4  (4) Combination of PLZ50WU, PLZ150WU and PLZ300WU also is possible.	
Air Cooling Unit	80-mm 24 V DC four fans	
Power Requirements	90 - 250 V, 50/60 Hz single-phase AC, approx. 25 VA	
Withstanding Voltage	1500 VAC, between AC input terminal and casing, for 1 minute	
Insulation Resistance	Between AC input terminal and casing: > 30 MΩ, with 500 VDC	
Dimensions (Frame Only)	See Figure 14-2.	
Weight (Frame Only)	Approx. 3 kg (6.6 lbs)	
Accessories		
Instruction Manual	1 copy	Z1-737-220
Power Cord	VM1165B-VM1172 AC Cord Set	85-10-0121
Power Cord for Unit	Wire Kit for RMF	91-87-3748

*1 : Can be installed on an EIA or JIS standard rack. See Section 10 for details.

*2 : Cover up the void space with Blank Panel BP8-WU (optional).

*3 : Cover up the void space with Blank Panel BP4-WU (optional).

*4 : Cover up the void space with Blank Panel BP2-WU (optional).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

14. <OVERALL DIMENSIONS>

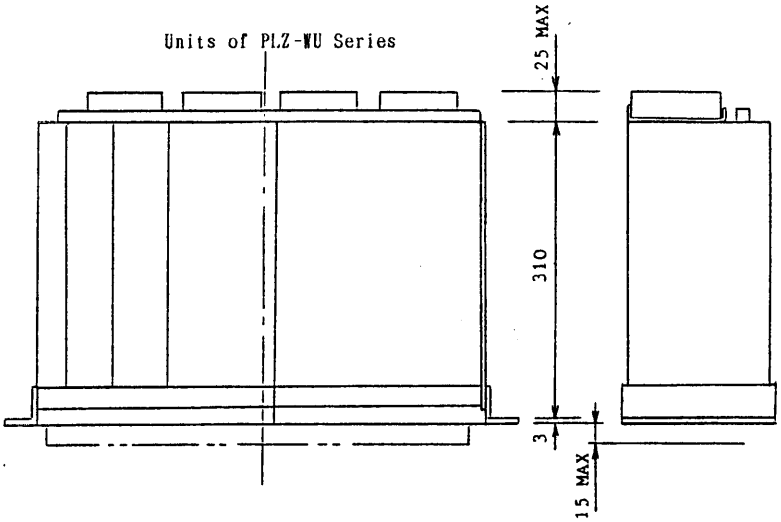


Figure 14-1


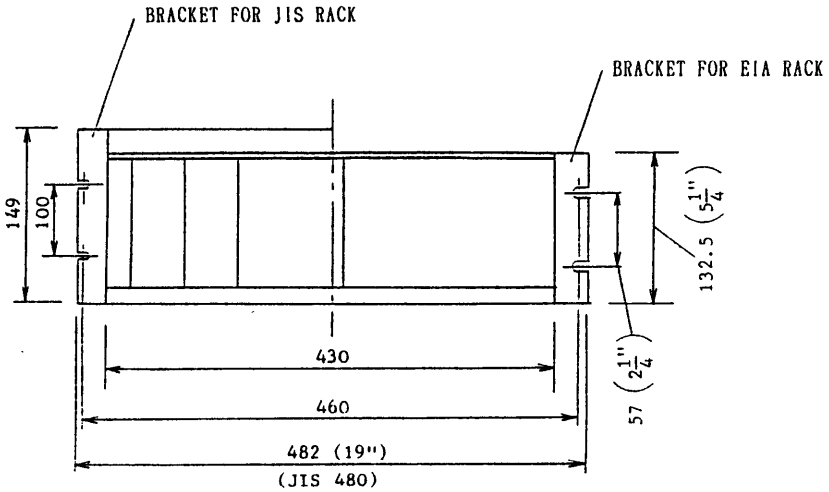



Figure 14-2

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


15. <OPERABLE RANGE CHARTS>

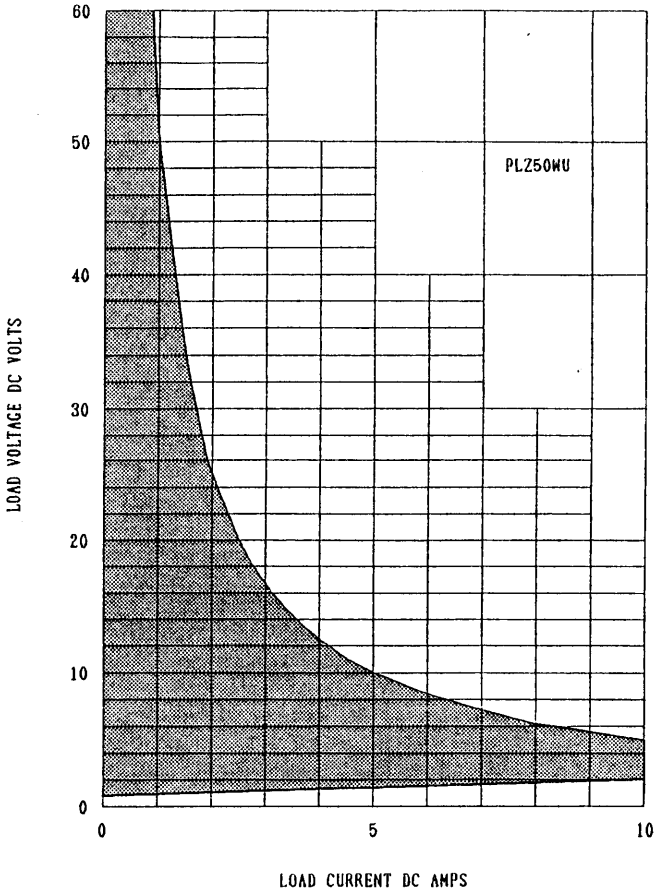

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

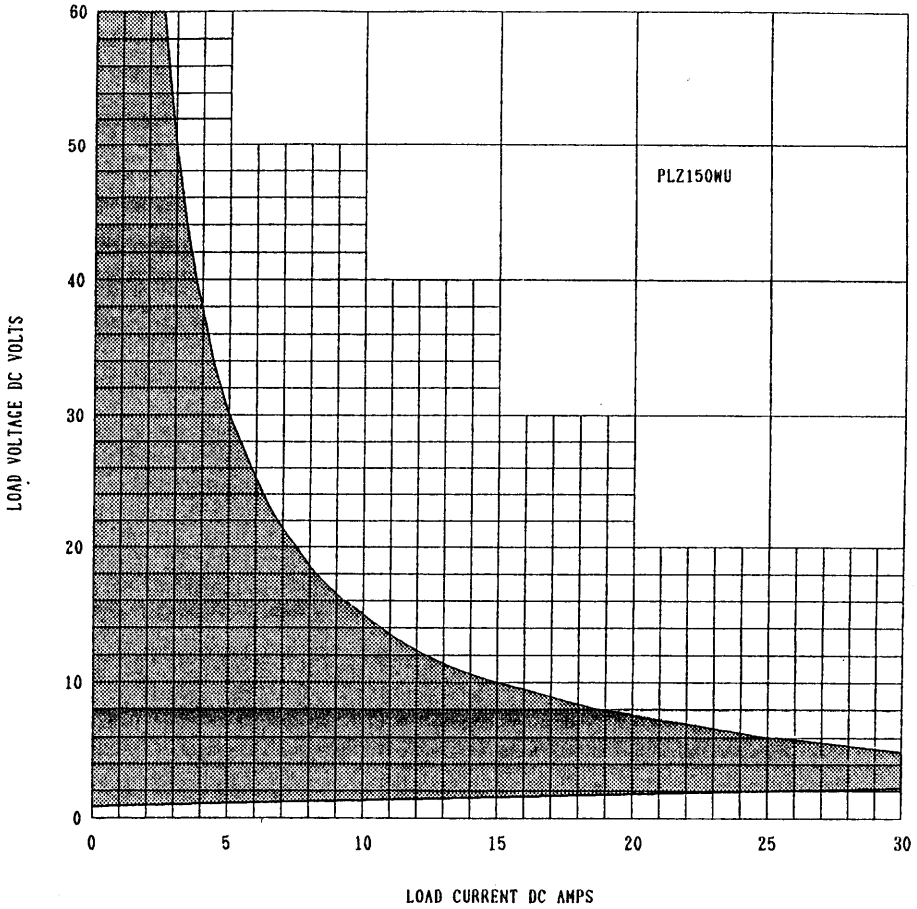

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

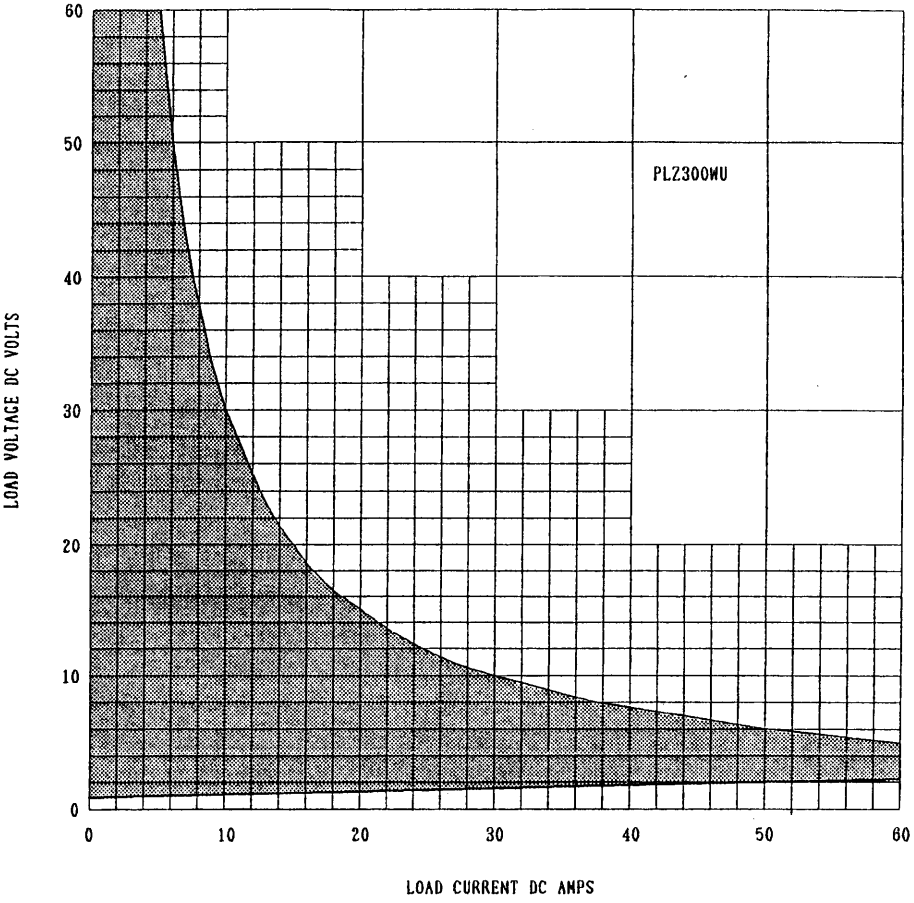

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP