ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.


Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Rockwell / Allen-Bradley 8720MC-RPS065-VB-M* at our website: *Click HERE*

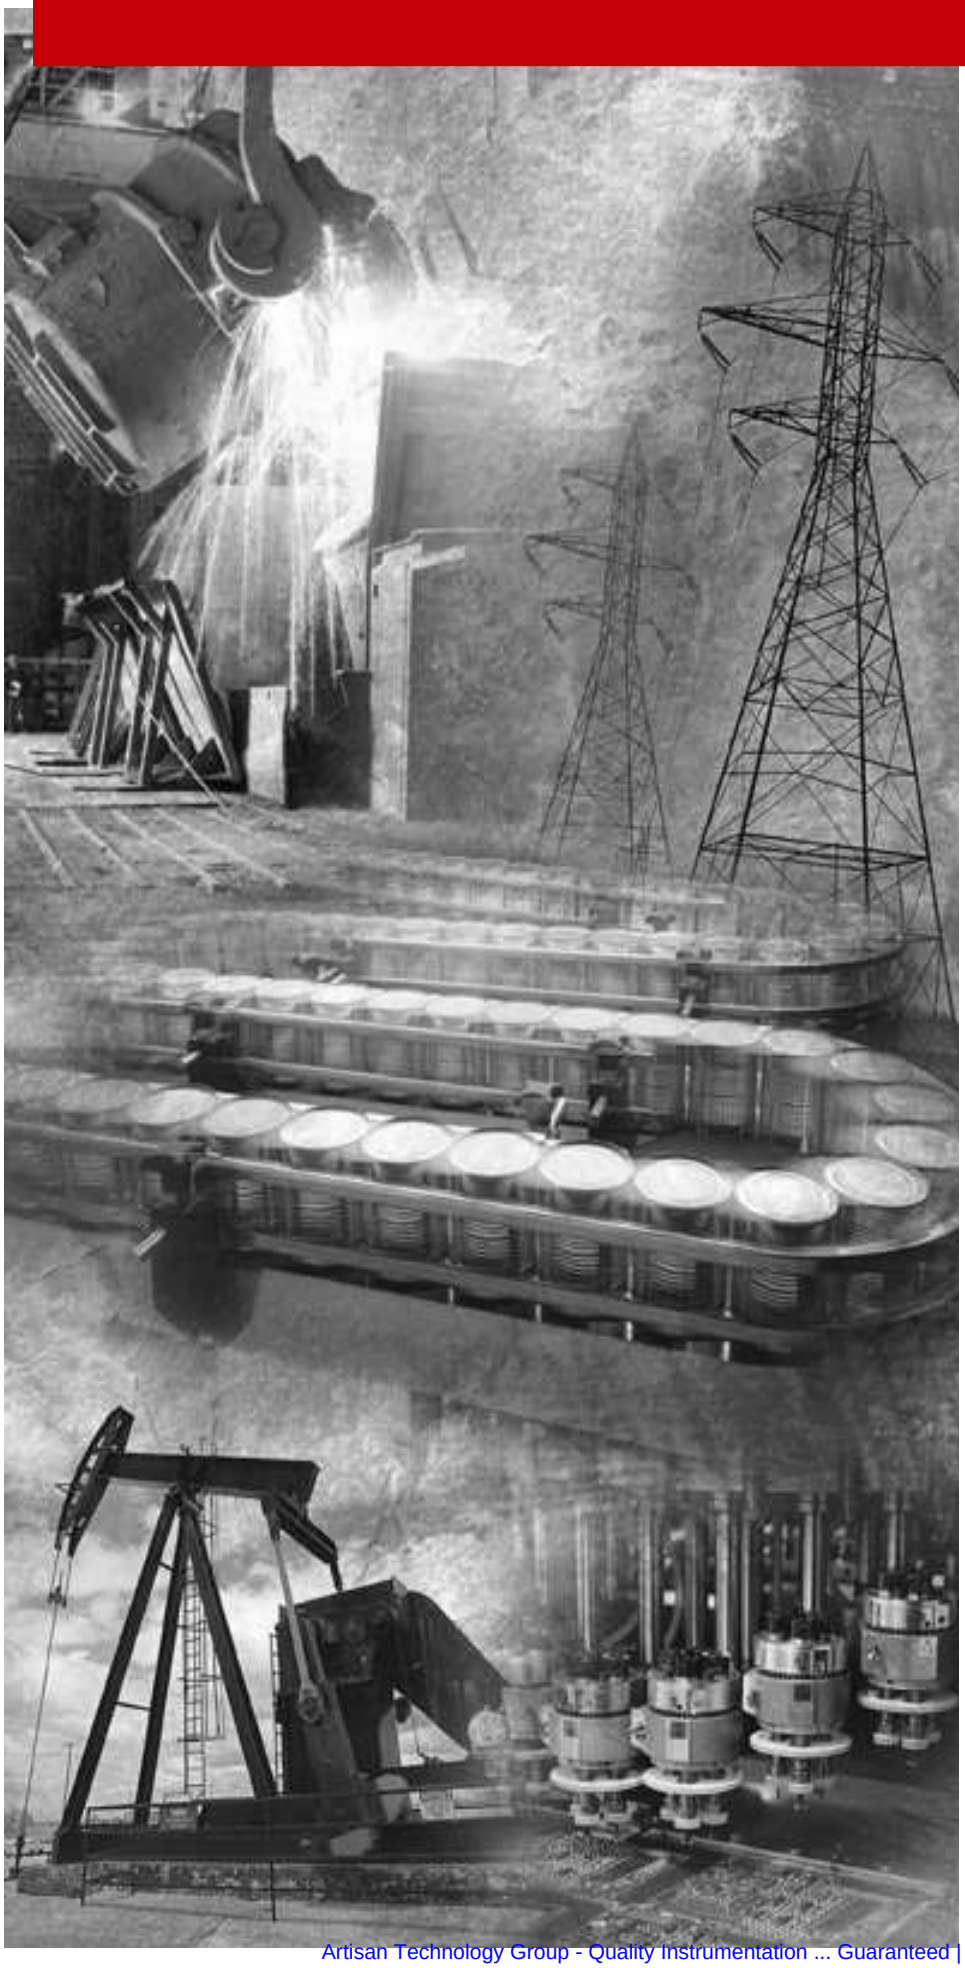

Allen-Bradley

8720MC Regenerative Power Supply

Installation Manual

Rockwell Automation

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Important User Information

Because of the variety of uses for the products described in this publication, those responsible for the application and use of this control equipment must satisfy themselves that all necessary steps have been taken to assure that each application and use meets all performance and safety requirements, including any applicable laws, regulations, codes and standards.

The illustrations, charts, sample programs and layout examples shown in this guide are intended solely for purposes of example. Since there are many variables and requirements associated with any particular installation, Allen-Bradley does not assume responsibility or liability (to include intellectual property liability) for actual use based upon the examples shown in this publication.

Allen-Bradley publication SGI-1.1, *Safety Guideline for the Application, Installation and Maintenance of Solid-State Control* (avialable from your local Allen-Bradley office), describes some inportant differences between solid-state equipment and electromechanical devices that should be taken into consideration when applying products such as those described in this publication.

Reproduction of the contents of this copyrighted publication, in whole or part, without written permission of Rockwell Automation, is prohibited.



ATTENTION: Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss.

Attention help you:

- identify a hazard
- avoid the hazard
- recognize the consequences

Important: Identifies information that is especially important for successful application and understanding of the product.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

European Communities (EC) Directive Compliance

If this product has the CE mark it is approved for installation within the European Union and EEA regions. It has been designed and tested to meet the following directives.

EMC Directive

This product is tested to meet the Council Directive 89/336/EC Electromagnetic Compatibility (EMC) by applying the following standards, in whole or in part, documented in a technical construction file:

- EN 50081-2 EMC - Generic Emission Standard, Part 2 - Industrial Environment
- EN 50082-2-EMC - Generic Immunity Standard, Part 2 - Industrial Environment

This product is intended for use in an industrial environment.

Low Voltage Directive

This product is tested to meet Council Directive 73/23/EEC Low Voltage, by applying the safety requirements of EN 61131-2 Programmable Controllers, Part 2 - Equipment Requirements and Tests. For specific information required by EN 61131-2, see the appropriate sections in this publication, as well as the Allen-Bradley pulbication Industrial Automation Wiring and Grounding Guidelines For Noise Immunity, publication 1770-4.1.

This equipment is classified as open equipment and must be mounted in an enclosure during operation to provide safety protection.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Contents of This Manual

Chapter 1

Introduction 1-1
Finding Information 1-1
Assumptions About the Audience 1-2
Notes on Handling the 8720MC-RPS Regenerative Power Supply 1-3

About 8720MC-RSP Regenerative Power Supply

Chapter 2

Model Numbers of the 8720MC-RPS Regenerative Power Supply and its Accessories 2-1
Power Rating 2-2
Appearance of the 8720MC-RPS Regenerative Power Supply .. 2-2
- Appearance of Model 8720MC-RPS027 and 8720MC-RPS065 2-2
- Appearance of Model 8720MC-RPS190 2-4

Main Components and Locations 2-5
Terminal Blocks on the Main Circuit 2-10
- Main Power Terminal Block (TB1) for Model 8720MC-RPS027 and 8720MC-RPS065 2-12
- Control Power Terminal Block (TB2) for Model 8720MC-RPS027 and 8720MC-RPS065 2-12
- Mainl Power Terminal Bar for Model 8720MC-RPS190 2-13
- Control Power Terminal Block (TB2) and Control Terminal Block (TB4) for Model 8720MC-RPS190 2-13

Regulator Board 2-14
- Jumpers and Switches 2-15
- Sequence Signal Terminal Block (TB3) 2-17

Installation

Chapter 3

Installation Site 3-1
- Environmental Conditions to be Met 3-1
- Required Total Area 3-2
- Recommended Air Flow Clearance 3-7

Notes on Installation 3-7

Wiring

Chapter 4

Recommended Wire Sizes 4-1
- Recommended Wire Sizes for Power Wiring to the Main Power Terminal Block (TB1) and the Main Power Terminal Bars 4-2
- Recommended Wire Sizes for Power Wiring to the Control Power Terminal Block (TB2) and the Control Terminal Block (TB4) 4-2

AC Input Power Wiring fot Model 8720MC-RPS027 and 8720MC-RPS065 4-3
- When Model 8720MC-RPS027 or 8720MC-RPS065 is operated in the Power Regeneration Mode only 4-7
- When Model 8720MC-RPS027 and 8720MC-RPS065 are adapted to Capacitors having large capacity 4-9
- Installing Circuit Breaker 4-11

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Installing Main Magnetic Contactor 4-11
Installing Reactor 4-12
Installing Varistor 4-13
Installing Harmonic Filter 4-14
Installing Input Fuses 4-14
Installing Line Filters 4-14
Bus Bar and Output Fuses 4-15
AC Input Power Wiring for Model 8720MC-RPS190 4-16
When Model 8720MC-RPS190 is operated in the Power Regeneration Mode only 4-22
When Model 8720MC-RPS190 is adapted to Capacitors having large capacity 4-24
Installing Circuit Breaker - 8720MCRPS190 4-26
Installing ACL Unit (Reactor Assembly) - 8720MC-RPS190 4-26
Installing Fuses - 8720MC-RPS190 4-27
Installing 8720MC-EF190-VB EMC Filter Unit 4-28
Installing DC Bus Power Output Wiring - All RPS units 4-29
Grounding the 8720MC-RPS Regenerative Power Supply 4-29
Wiring To Comply with EMC 4-30
Sequence Signal Wiring 4-32
Sequence Signal Wiring 4-32
Operation Timing of Sequence Control Signals 4-33
Installing Ribbon Cables 4-36
Notes on Wiring 4-37

Start and Adjustment — **Chapter 5**

Checking before Powering up the 8720MC-RPS Regenerative Power Supply 5-1
Verifying the Installation 5-1
Verifying the Rating of the 8720MC-RPS Regenerative Power Supply 5-2
Verifying Wiring 5-2
Powering up the 8720MC-RPS Regenerative Power Supply 5-2
Operating the 8720MC-RPS Regenerative Power Supply 5-3

Operation Panel — **Chapter 6**

Configuration of the Operation Panel 6-1
Operation Modes 6-1
Monitor Mode 6-2
Program Mode 6-3
Display 6-3
Keypad 6-4
Status LEDs 6-5

Parameters — **Chapter 7**

Parameter Types 7-1
Protecting Parameters with Password 7-3
Displaying and Changing Parameter Values 7-3
User Parameters 7-3
Factory Parameters 7-5

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Error Codes and Warning Buzzer — **Chapter 8**

Contents of Error Codes and Recovering 8-2
Accessing and Clearing the Entries in the Error Log 8-5
Recovering from Fatal Error 8-6
Warning Buzzer 8-6

Inspecting Trouble and Recovering — **Chapter 9**

Safety Precautions 9-1
Preliminary Review 9-2
Troubleshooting Flow Charts 9-2
8720MC-RPS Regenerative Power Supply Does Not Run 9-2
DC Bus Voltage Does Not Go Up 9-3

Special Replacement Parts — **Chapter 10**

Outline Drawings of the Peripheral Devices — **Chapter 11**

Outline Drawings of the Reactors 11-1
Outline Drawing of the Varistors 11-3
Outline Drawing of the Harmonic Filters 11-4
Outline Drawing of the Line Filters 11-5
8720MC-EF190-VB EMC Filter Unit for Model 8720MC-RPS190BM and 8720MC-RPS190BS 11-7

Technical Specifications — **Appendix A**

Default Parameter Settings — **Appendix B**

Control Block Diagram — **Appendix C**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

End of Table of Contents

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Contents of This Manual

Introduction

The 8720MC-RPS Regenerative Power Supply Bidirectional Converter is a sinusoidal PWM converter which can control increase of DC bus voltage and perform continuous power generation.

The 8720MC-RPS Regenerative Power Supply, therefore, can be used as power supply unit for various drives and inverter units.

This instruction manual covers the 8720MC-RPS Regenerative Power Supply for 380-460 VAC, and describes the hardware and the start-up and programming procedure for the 8720MC-RPS Regenerative Power Supply. Read and understand this manual before proceeding.

All the following units are UL/C-UL listed:

8720MC-RPS027BM,
8720MC-RPS065BM and 8720MC-RPS065BS,
8720MC-RPS190BM and 8720MC-RPS190BS

Also, the Declaration of Conformity with the requirement for CE Mark was already issued for all the units.

Finding Information

The 8720MC-RPS Regenerative Power Supply is a bidirectional converter with the following features:

- Use of chopper type voltage increasing method with sinusoidal pulse-width-modulated (PWM) waveform control.
- Programmable DC bus voltage.
- Continuous power regeneration.
- Attenuation of the higher order harmonics in the line current.
- Safety interlocks and protection.

This manual describes the details of the 8720MC-RPS Regenerative Power Supply in order to provide the user with a complete understanding of the installation, wiring, operation and adjustment of the product. As an aid in finding information in this manual, each chapter is briefly described below:

- Chapter 1: Contents of This Manual

  Provides situation for acquiring UL Marks and CE Marks for the 8720MC-RPS Regenerative Power Supply and information on how this manual is organized and where to find additional information.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- Chapter 2: About 8720MC-RPS Regenerative Power Supply

  Identifies components of the 8720MC-RPS Regenerative Power Supply, shows their locations, and describes the main components.
- Chapter 3: Installation

  Describes how to mount the 8720MC-RPS Regenerative Power Supply properly.
- Chapter 4: Wiring

  Describes how to properly wire and connect the 8720MC-RPS Regenerative Power Supply.
- Chapter 5: Start and Adjustment

  Provides information on how to perform a final check before power is applied, and instructions on basic operation.
- Chapter 6: Operation Panel

  Describes the composition and contents of the operation panel.
- Chapter 7: Parameters

  Provides detailed description of each parameter.
- Chapter 8: Error Codes and Warning Buzzer

  Describes contents of error codes and how to correct problems.
- Chapter 9: Inspecting Trouble and Recovering

  Describes how to inspect and troubleshoot the 8720MC-RPS Regenerative Power Supply.
- Chapter 10: Special Replacement Parts

  Provides a list of required replacement parts.
- Chapter 11: Outline Drawings of the Peripheral Devices

  Provides outline dimensions of converters, reactors, varistors, harmonic filters and line filters.
- Appendix A: Technical Specifications

  Lists specifications of the 8720MC-RPS Regenerative Power Supply in table form.
- Appendix B: Default Parameter Settings

  Provides the default values of the parameters in table form.
- Appendix C: Control Block Diagram

  Provides a control block diagram.

Assumptions About the Audience


This manual is intended for electrical personnel familiar with the operation of this equipment and the hazards involved.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Notes on Handling the 8720MC-RPS Regenerative Power Supply

The following three labels are put on the 8720MC-RPS Regenerative Power Supply, advising the user of the notes on handling the unit. Read and understand the contents before using the unit.



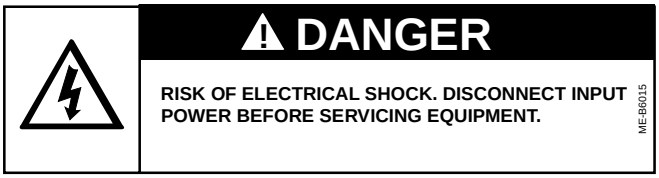

CAUTION !

THIS EQUIPMENT MUST BE MOUNTED IN A SUITABLE UL RECOGNIZED ENCLOSURE OR NEMA ENCLOSURE. USE COPPER 60/75 DEGREE C WIRE ONLY.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

End of Chapter


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

About 8720MC-RPS Regenerative Power Supply

This chapter describes model numbers, major components, their locations, and terminal blocks of 8720MC-RPS Regenerative Power Supply.

Model Numbers of the 8720MC-RPS Regenerative Power Supply and its Accessories

For operation of the 8720MC-RPS Regenerative Power Supply, a line reactor is required for each incoming phase as well as a varistor, a harmonic filter and a contactor. The following figure shows the model numbers of the 8720MC-RPS Regenerative Power Supply and its accessories.

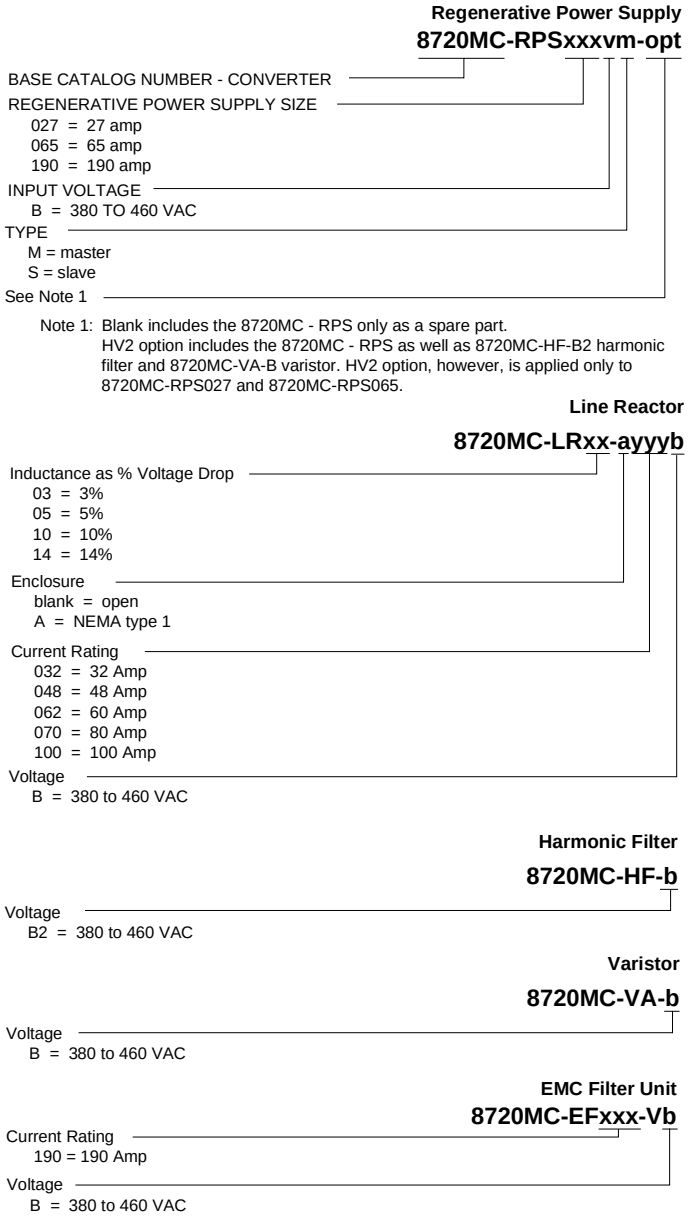

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Power Rating

Power rating of 8720MC-RPS Regenerative Power Supply depends on the number of units connected in parallel as shown in the table below. Up to three units can be connected.


Table 2.1
Kind, Connection and Power Ratings

Kind of Unit	Connection	Model Number	Power Rating
15 kW	Single Unit	8720MC-RPS027BM x 1	15 kW
37 kW	Single Unit	8720MC-RPS065BM x 1	37 kW
	Two paralleled units	8720MC-RPS065BM + 8720MC-RPS065BS x 1	75 kW
	Three paralleled units	8720MC-RPS065BM + 8720MC-RPS065BS x 2	110 kW
125 kW	Single Unit	8720MC-RPS190BM x 1	125 kW
	Two paralleled units	8720MC-RPS190BM + 8720MC-RPS190BS x 1	250 kW
	Three paralleled units	8720MC-RPS190BM + 8720MC-RPS190BS x 2	375 kW

Appearance of the 8720MC-RPS Regenerative Power Supply

Appearance of Model 8720MC-RPS027 and 8720MC-RPS065

The figure below shows the front view of the 8720MC-RPS027 and 8720MC-RPS065 covered by the front cover.
The operation panel (only for master unit) and the power lamp can be seen through the front cover. All the terminals blocks to connect wiring are covered by the front cover.

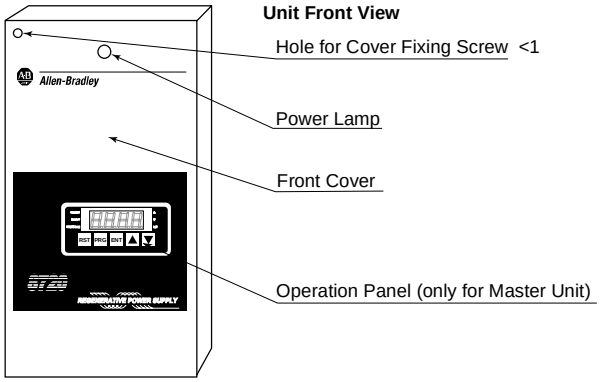


1> Model 8720MC-RPS027 has the cover fixing screw at the right upper corner instead of the left upper corner.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


When the front cover is removed from the 8720MC-RPS027 and 8720MC-RPS065 , the main power terminal block (TB1) and the Regulator Board (only for master unit) will appear as shown in the following figure. To remove the front cover, first remove the screw at the upper left corner of the unit, and then lift up the cover. Note, however, that Model 8720MC-RPS027 has the cover fixing screw at the upper right corner instead of the upper left corner. Do not drop the screw from the cover.

Unit After Removing Front Cover

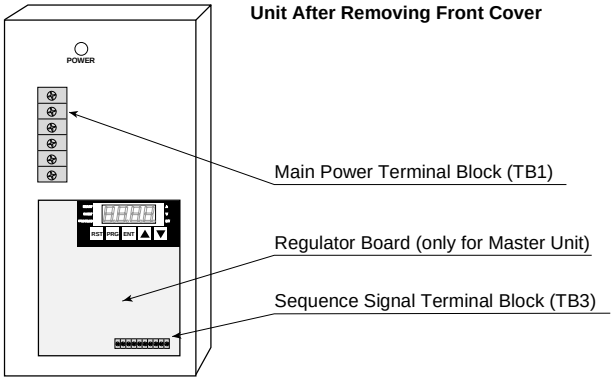

The control power terminal block (TB2) for Model 8720MC-RPS027 and 8720MC-RPS065 will be disclosed as shown in the figure below, when the Regulator Board is opened to the left hand side by removing the two fixing screws on the right hand side of the bracket supporting the Regulator Board.

Unit After Removing Regulator Board

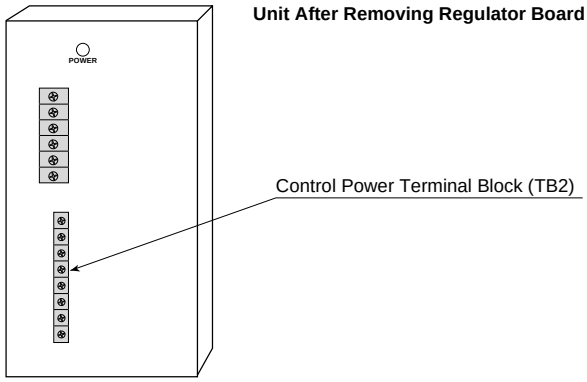


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Appearance of Model 8720MC-RPS190

The figure below shows the front view of the 8720MC-RPS190 covered by the front cover.

This unit has the main power terminals L1 to L3 at the top of the unit, and DC bus terminals P and N at the bottom of the unit.

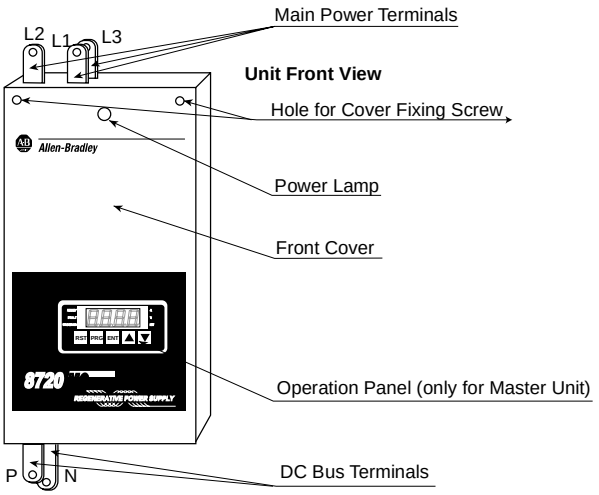

When the front cover is removed from the 8720MC-RPS190 Regenerative Power Supply, the Control Power Terminal Block (TB2), the Control Terminal Block (TB4), the Regulator Board (only for master unit) and Sequence Signal Terminal Block (TB3) will appear as shown in the following figure.

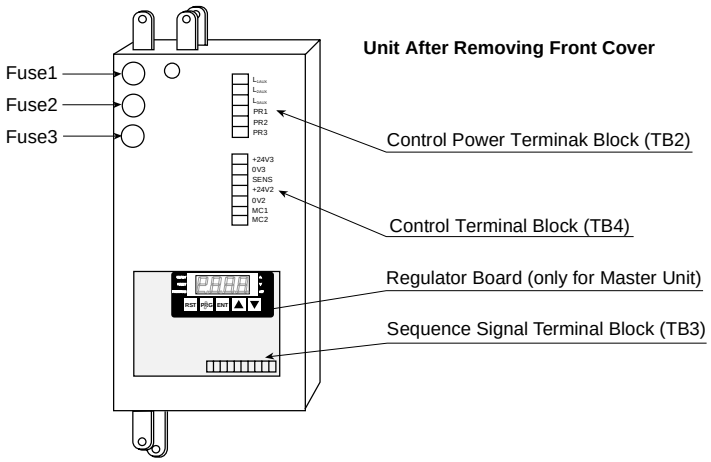


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Main Components and Locations

Model 8720MC-RPS027BM has the following main components. The identification numbers provided correspond to the numbers used in the following figure. The main components are included in the special replacement part list shown in Chapter 10.

1. Regulator Board (BDSR) (only master unit has a Regulator Board, not on slave unit)
2. Power Interface Board (PIFS)
3. Driver Board (RCPB)
4. Bus Capacitors
5. Cooling Fan
6. Power Modules
7. Fuse-1
8. Precharge/Discharge Resistor

The following figure shows the locations of the main components of Model 8720MC2-RPS027BM.

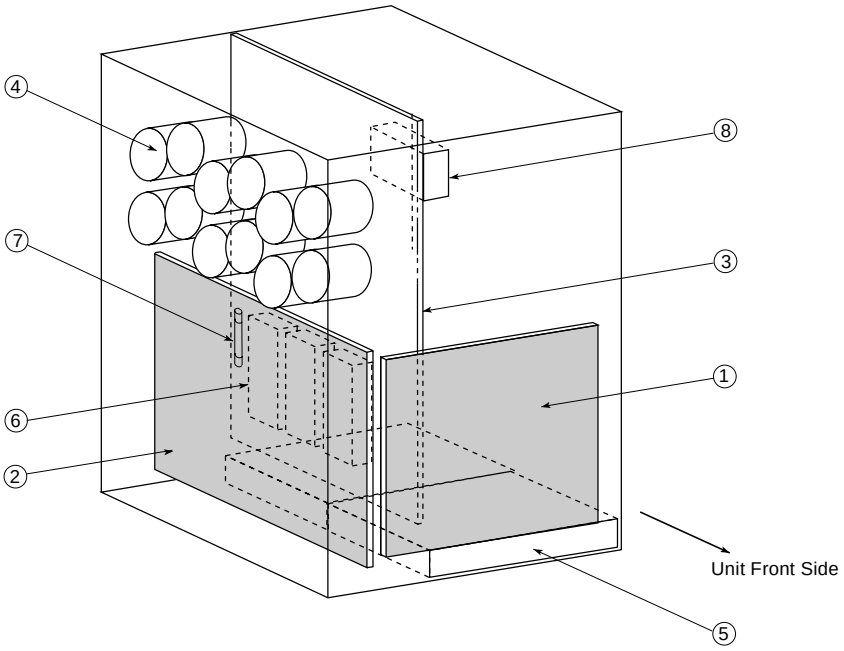


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Model 8720MC-RPS065BM and 8720MC-RPS065BS have the following main components.

1. Regulator Board (BDSR) (only master unit has a Regulator Board, not on slave unit)
2. Power Interface Board (PIFS)
3. Driver Board (RCPB)
4. Bus Capacitors
5. Cooling Fan
6. Power Modules
7. Fuse-1
8. Precharge/Discharge Resistor

The following figure shows the locations of main components of Model 8720MC-RPS065BM and 8720MC-RPS065BS.

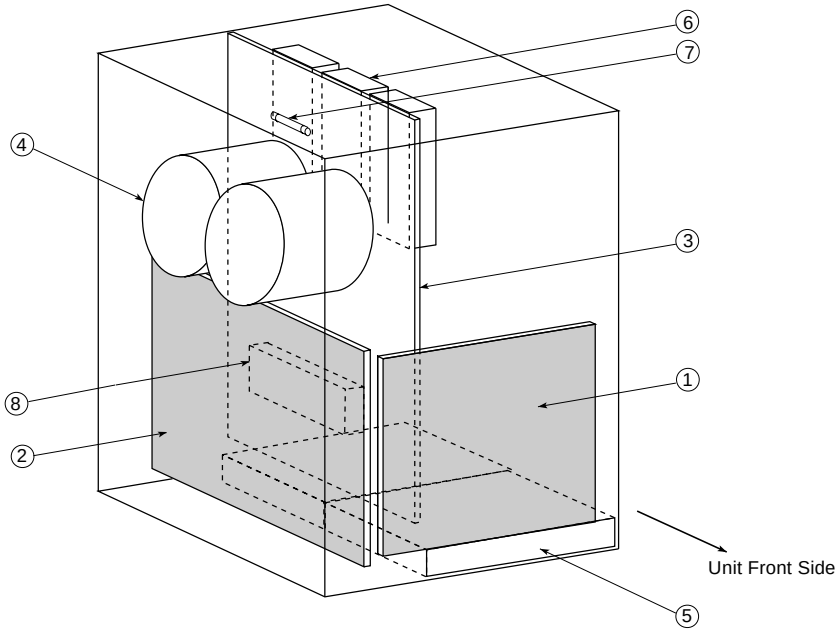


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Model 8720MC-RPS190BM and 8720MC-RPS190BS have the following main components.

1. Regulator Board (BDSR) (only master unit has a Regulator Board, not on slave unit)
2. Power Interface Board (PIFS)
3. Bus Capacitors
4. Cooling Fan
5. Power Modules
6. Fuses 1, 2, 3

The following figure shows the locations of main components of Model 8720MC-RPS190BM and 8720MC-RPS190BS.

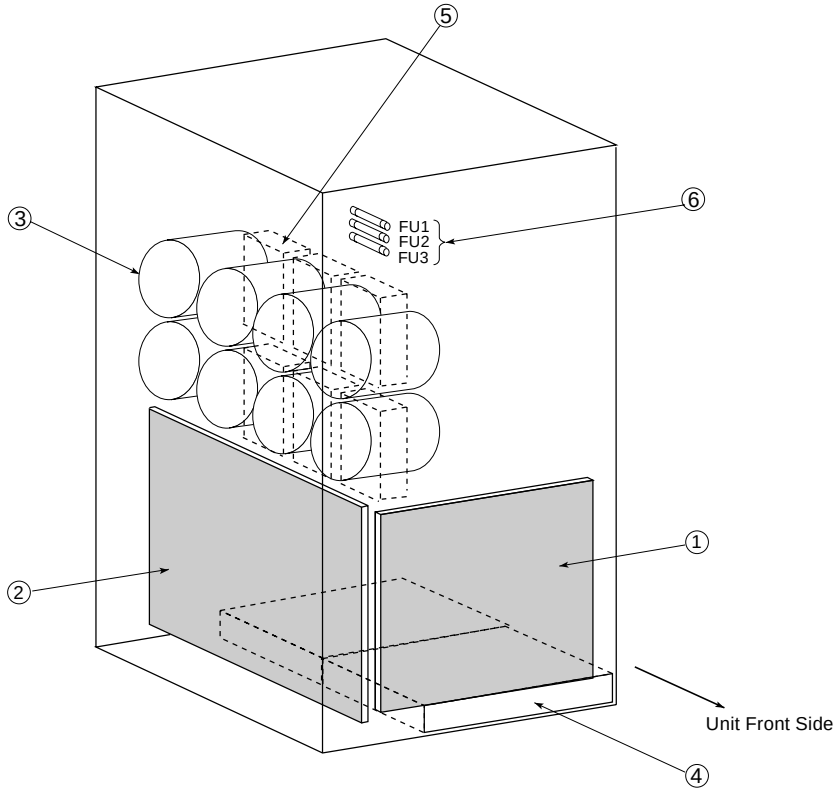


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Model 8720MC-RPS027 and 8720MC-RPS065 are composed of the following components.

1) 8720MC-RPS
2) Line filter for main circuit*
3) Line filter for sequence power*
4) Circuit breaker
5) AC input fuse
6) DC output fuse
7) Varistor
8) Harmonic filter
9) Main magnetic contactor
10) Reactor

* Not necessary when compliance with CE mark is not required.

The following figure shows system configuration of 8720MC-RPS027 and 8720MC-RPS065.

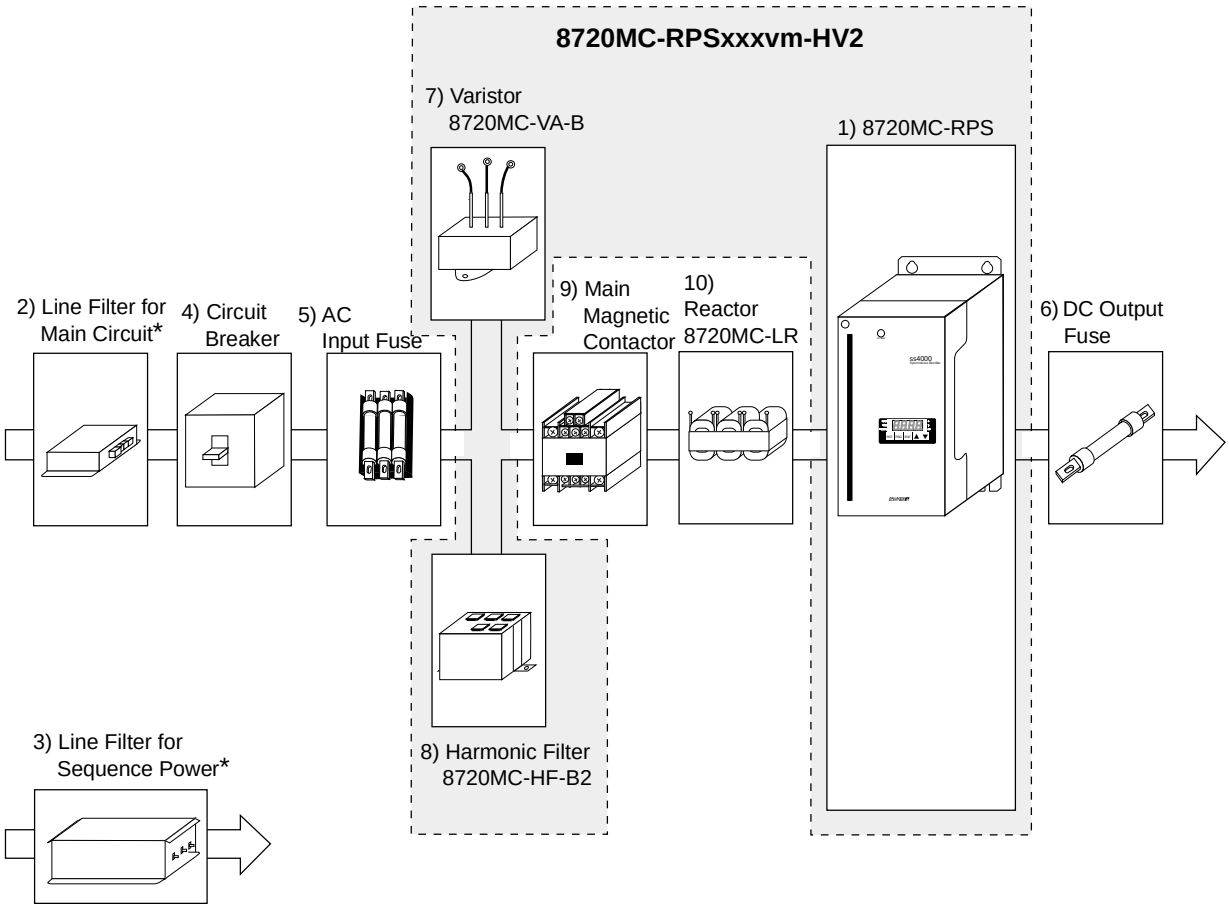


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Model 8720MC-RPS190 is composed of the following components.

1) 8720MC-RPS
2) Circuit breaker
3) AC input fuse
4) DC output fuse
5) EMC filter unit
6) ACL unit

The following figure shows system configuration of Model 8720MC-RPS190.

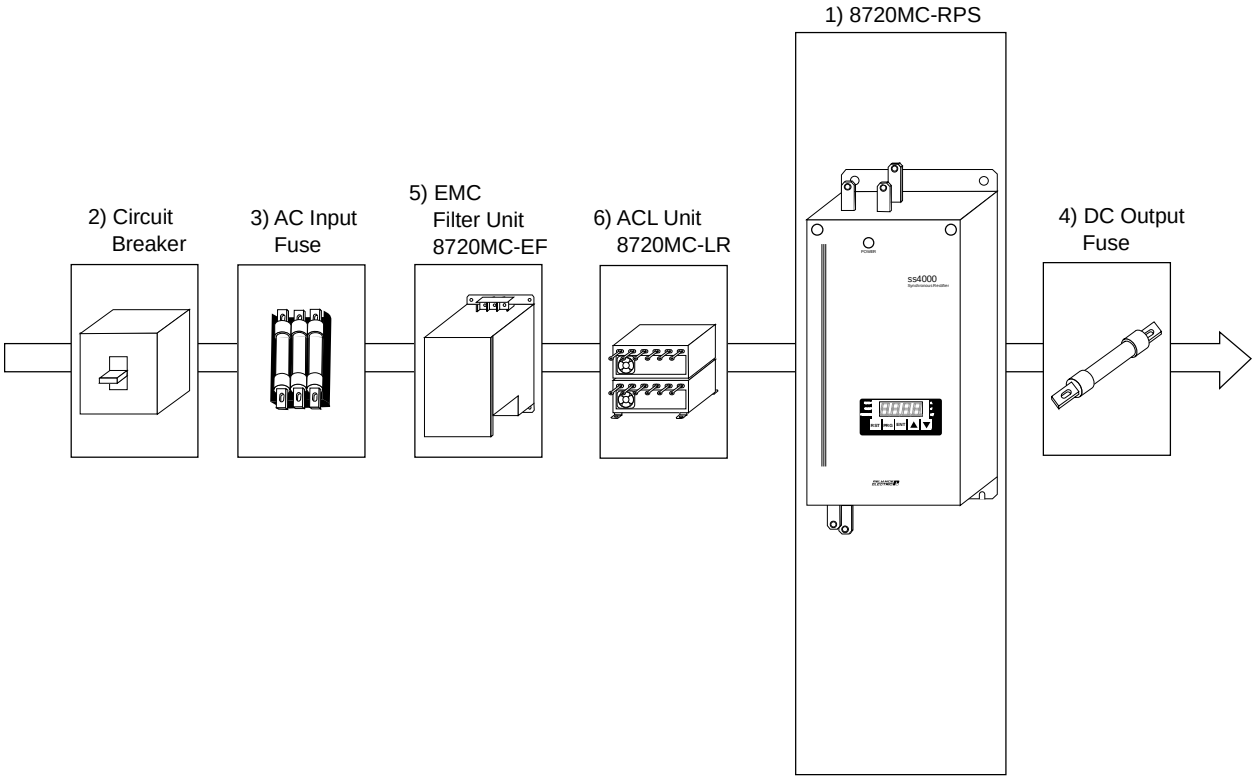


For more information, refer to Chapter 4 of this manual.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Terminal Blocks on the Main Circuit

This section provides the main circuit block diagram and the description of the main power terminal block (TB1) and the control power terminal block (TB2). The main circuit block diagram for Model 8720MC-RPS027BM, 8720MC-RPS065BM and 8720MC-RPS065BS is shown in Figure 2.1.

Figure 2.1
Terminal Blocks on the Main Circuit for RPS027 and RPS065 units

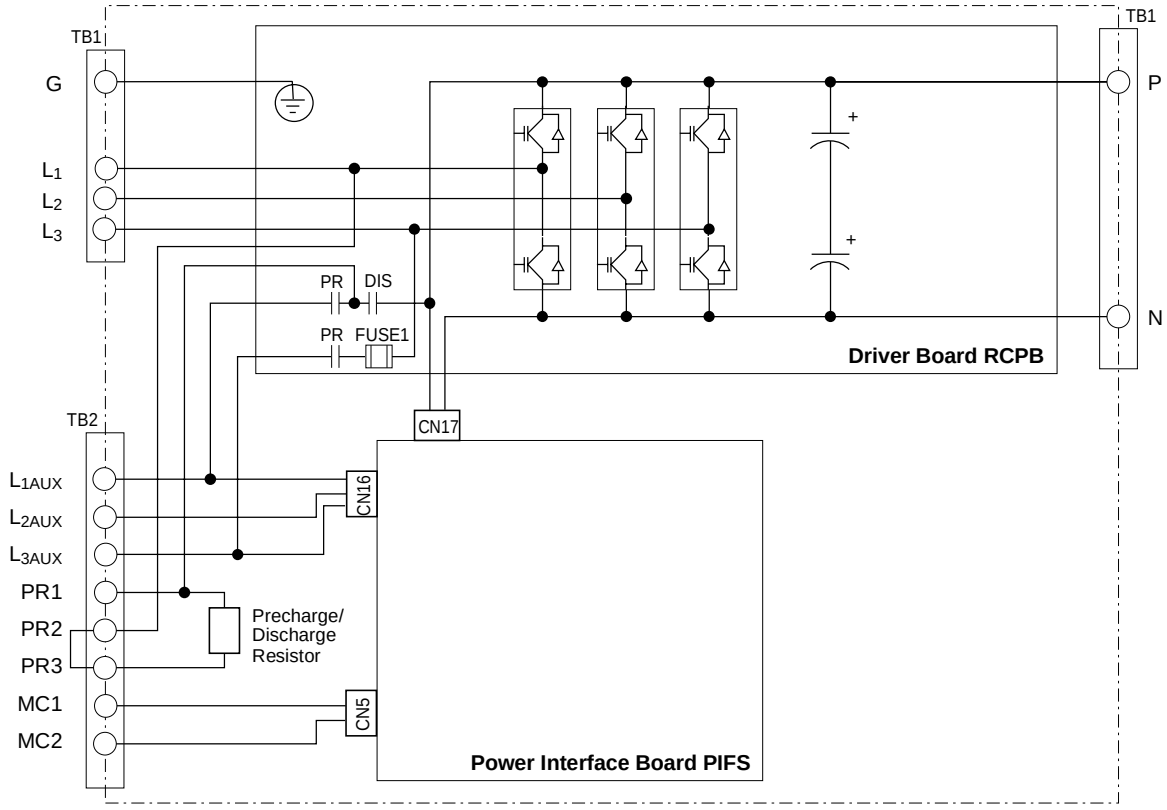


1> The G terminal for Model 8720MC-RPS027 is located on the front surface of the chassis.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 2.2 shows the main circuit block diagram for Model 8720MC-RPS190BM and 8720MC-RPS190BS.

Figure 2.2
Terminal Blocks on the Main Circuit for RPS190 unit

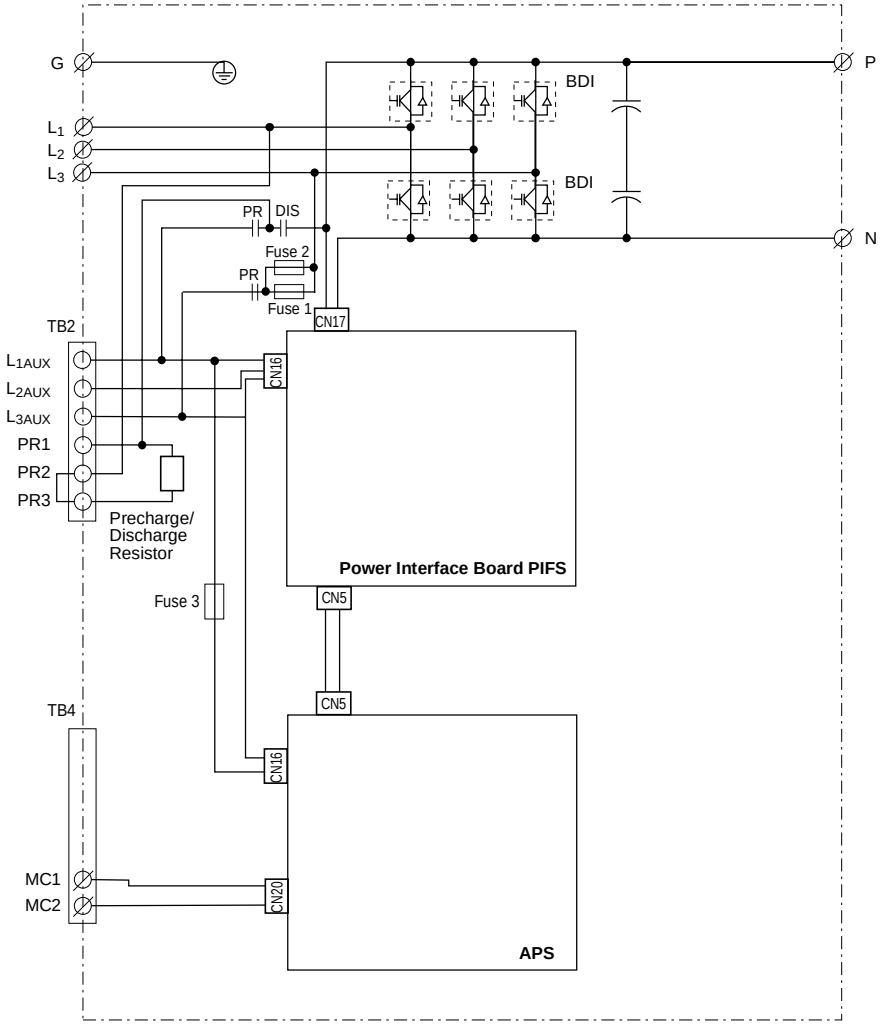

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Main Power Terminal Block (TB1) for Model 8720MC-RPS027 and 8720MC-RPS065

The table below provides the information of the terminals on use of the terminals on the main power terminal block (TB1) for Model 8720MC-RPS027 and 8720MC-RPS065.

Terminal Name	Symbol	Description
Main Power Terminals	L_1, L_2, L_3	To connect three-phase AC input power to the main circuit. For 460 V unit: 380 to 460 VAC +10%, -15%, 50/60 Hz +/-5%
DC Bus Terminals	P, N	To connect the 8720MC-RPS Regenerative Power Supply to load equipment.
Grounding Terminal	G	To ground the 8720MC-RPS Regenerative Power Supply.

Control Power Terminal Block (TB2) for Model 8720MC-RPS027 and 8720MC-RPS065

The table below describes the terminals on the control power terminal block (TB2) for Model 8720MC-RPS027 and 8720MC-RPS065.

Terminal Name	Symbol	Description
Control Power Terminals	L_{1AUX}, L_{2AUX}, L_{3AUX}	To connect three-phase AC input power to the control circuit. For 460 V unit: 380 to 460 VAC +10%, -15%, 50/60 Hz +/-5%
Terminals to Connect Precharge/Discharge Resistor	PR1, PR2, PR3	To connect precharge/discharge resistor. When the built-in resistor is used: Jumper between PR2 and PR3, and open PR1. When an external resistor is used: Connect the resistor between PR1 and PR2, and open PR3. When the unit is connected for power regeneration mode only: Open all the terminals PR1, PR2 and PR3.
Control Terminals for Main Magnetic Contactor	MC1, MC2	To be used as the control terminals for the main magnetic contactor (rated for 250 VAC/ 1 Amp or 30 VDC/1 Amp).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Main Power Terminal Bar for Model 8720MC-RPS190

The table below describes the terminals on the main power terminal bar for Model 8720MC-RPS190.

Terminal Name	Symbol	Description
Main Power Terminals	L_1, L_2, L_3	To connect three-phase AC input power to the main circuit. For 460 V unit: 380 to 460 VAC +10%, -15%, 50/60 Hz +/-5%
DC Bus Terminals	P, N	To connect the 8720MC-RPS Regenerative Power Supply to load equipment.
Grounding Terminal	G	To ground the 8720MC-RPS Regenerative Power Supply.

Control Power Terminal Block (TB2) and Control Terminal Block (TB4) for Model 8720MC-RPS190

The table below describes the terminals on the control power terminal block (TB2) and the terminals on the control terminal block (TB4) for Model 8720MC-RPS190.


Terminal Name		Symbol	Description
Control Power Terminal	TB2	L_{1AUX}, L_{2AUX}, L_{3AUX}	To connect three-phase AC input power to the control circuit. For 460 V unit: 380 to 460 VAC +10%, -15%, 50/60 Hz +/-5%
Terminals to Connect Precharge/Discharge Resistor		PR1, PR2, PR3	To connect precharge/discharge resistor. When the built-in resistor is used: Jumper between PR2 and PR3, and open PR1. When an external resistor is used: Connect the resistor between PR1 and PR2, and open PR3. When the unit is connected for power regeneration mode only: Open all the terminals PR1, PR2 and PR3.
AC Reactor Fan Power Terminals	TB4	+24V3 0V3	To supply AC power to the fan for the AC reactor unit through the EM4000 EMC filter unit.
Terminals for Fan Fault Signal		SENS	To enter fault signal of the fan for the AC reactor unit.
Power Terminals for Main Magnetic Contactor MC and Optional Fan		+24V2 0V2	To supply power to the main magnetic contactor and the fan for the cabinet fan through the 8720MC-EF190 EMC filter unit.
Control Terminaks for Main Magnetic Contactor		MC1 MC2	To be used as the control terminals for the main magnetic contactor.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Regulator Board

The Regulator Board exists only on master unit. The slave unit for parallel connection has no Regulator Board and is controlled by the microprocessor of the Regulator Board on the master unit.

The 8720MC-RPS Regenerative Power Supply regulation is performed by a microprocessor on the Regulator Board. The figure below shows the locations of the main components on the Regulator Board. The operation of the 8720MC-RPS Regenerative Power Supply is adjusted by the parameters set by the keypad.

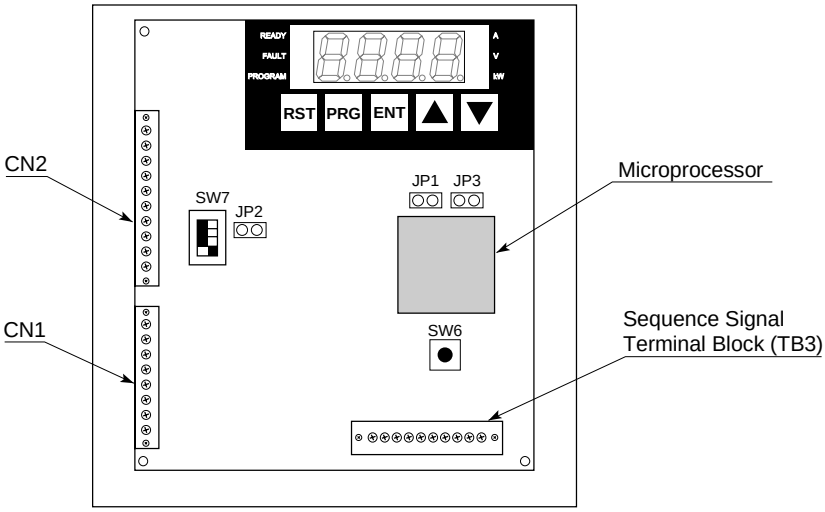

- PWM Gating Signals

  Based on the output of the current/voltage control loop, the Regulator Board sends PWM gating signals through the Power Interface Board to the Power Modules (transistors), producing a pulse-width-modulated (PWM) waveform.

- Sequence Output Signals

  Sequence output signals are provided from the sequence signal terminal block (TB3) of the Regulator Board to indicate the unit status .

- Four-character Display and Six LEDs

  A four-character seven-segment LED display is used to monitor values, parameter numbers, parameter values, and error codes. Six LEDs show the display mode of the operation panel and the units of the monitored values.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Jumpers and Switches

ATTENTION: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should set jumpers and switches. Read and understand this manual in its entirety before proceeding. Failure to observe this precaution could result in severe bodily injury or loss of life.

ATTENTION: Do not press the reset button switch (SW6) during operation. Also, do not alter the setting of any jumpers and switches during operation. Failure to observe this precaution could result in destruction of the equipment, severe bodily injury or loss of life.

ATTENTION: Do not alter the settings of any jumpers not described in this manual. Failure to observe this precaution could result in damage to, or destruction of, the equipment.

The jumpers JP1 to JP3 and the switches SW6 and SW7 are set before shipment from factory. If you need to change the jumpers and/or switch settings, read and understand the following description of these jumpers and switches before proceeding.

- Jumper JP1 to Enable Operation

  Short this jumper to start switching operation of transistors of the 8720MC-RPS Regenerative Power Supply when the RUN sequence input is enabled. This jumper should always be kept closed.

- Jumper JP2 to Enable Inspection Mode

  Keep this jumper open always.

- Reset Switch SW6

  Pressing this switch resets the CPU.

  Important: Do not press the reset switch SW6 during operation.


- Switch SW7 to Enable Base Block

  This switch is used to stop switching of transistors that produce PWM waveform by interrupting the base signal from the Power Modules. To interrupt the base signal, turn the switch to the OFF side.

  As shown in the figure below, SW7 consists of four switches, and SW7-1 to SW7-3 can be allocated to the master unit and slave units 1 and 2. In the case of a master with paralleled slave units, it is possible to interrupt the base signal of each unit by turning the corresponding switch to the OFF side. SW7-4 must always be kept to the OFF side.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com







When two units are connected in parallel, turn the switches SW7-1 and SW7-2 to the ON side, and when three units are connected in parallel, turn the switches SW7-1 through SW7-3 to the ON side.

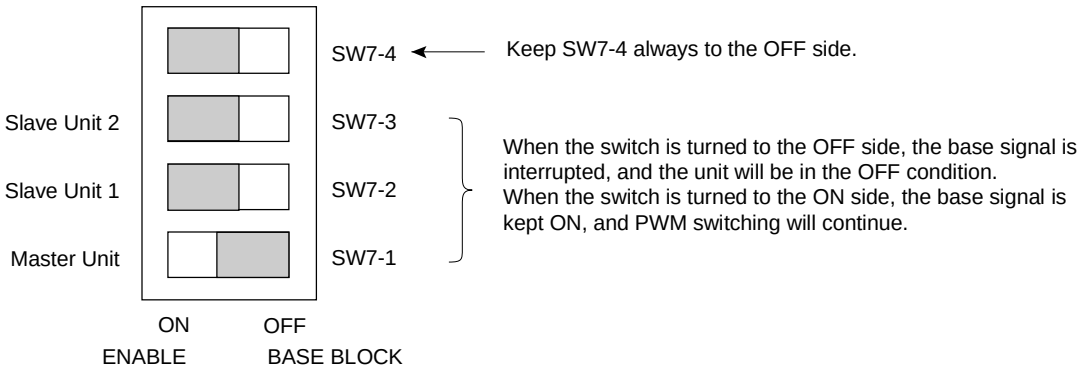

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Sequence Signal Terminal Block (TB3)

As shown in the figure in page 2-14, there is a sequence signal terminal block (TB3) on the Regulator Board. The following table provides the information on each terminal of TB3.

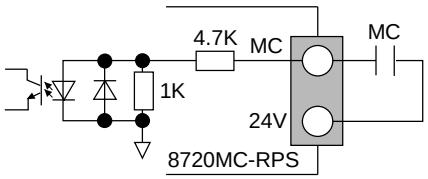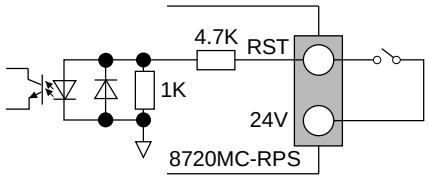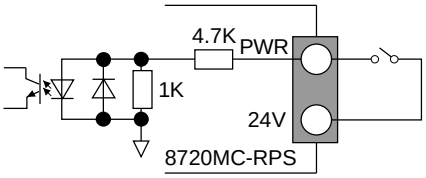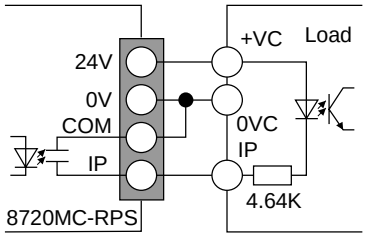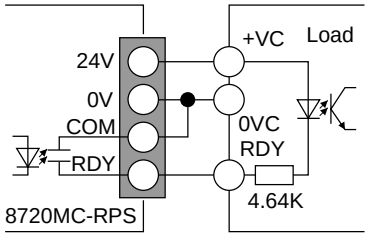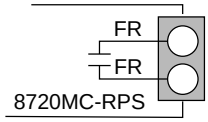Name of Terminal	Symbol	Description
Sequence Input Signals	MC	Enter the supplemental contact signal (normally open contact) of the main magnetic contactor.*  * Because driving current of sequence input signals is 5mA and below, use a contact of which minimum applicable load is 5mA and below.
	RST	The reset signal (+24 VDC) is used to reset fault. Close this reset signal as required.*  * Because driving current of sequence input signals is 5mA and below, use a contact of which minimum applicable load is 5mA and below.
	PWR	Enter the RUN signal (+24 VDC)*.  * Because driving current of sequence input signals is 5mA and below, use a contact of which minimum applicable load is 5mA and below.
Power for Sequence Signals	0 V	0 V of +24 VDC power.
	24 V	+24 VDC power (rating : 24 VDC/0.2 Amps).
Sequence Output Signals	COM	Common for IP and RDY signals.
	IP	This is a contact signal that is turned ON during instantaneous power loss (contact rating : 30 VDC/ 50 mA). 
	RDY	This is a contact signal that is turned ON while the unit is ready for operation (contact rating : 30 VDC/ 50 mA). 
	FR, FR	This is a contact signal that opens while fault occurs (contact rating : 250 VAC/1 Amp or 30 VDC/ 1 Amp). 

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

End of Chapter

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Installation

This chapter shows how to mount the 8720MC-RPS Regenerative Power Supply properly, and provides information on the items to be checked.

ATTENTION: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should install, adjust, operate, or service this equipment. Read and understand this manual in its entirety before proceeding. Failure to observe this precaution could result in destruction of the equipment, severe bodily injury, or loss of life.

ATTENTION: The user is responsible for conforming with all applicable local, national and international codes. Failure to observe this precaution could result in damage to, or destruction of, the equipment.

Installation Site

It is important to properly plan before installing the 8720MC-RPS Regenerative Power Supply to ensure that the environment and operating conditions of the units are satisfactory. Read this section before continuing with the unit installation.

Environmental Conditions to be Met

The Declaration of Conformity with the requirements for CE Mark was issued for the following units, and these units must be used in cabinet.

8720MC-RPS027BM,
8720MC-RPS065BM, 8720MC-RPS065BS,
8720MC-RPS190BM and 8720MC-RPS190BS

Also, before deciding on an installation site, consider the following guidelines:

- Verify that the units can be kept clean, cool and dry.
- Be sure that the units are always away from oil, metal powder, other airborne contaminants, and direct sunlight.
- Check that the units will not be exposed to excessive vibration and noise, and that they will not be close to instruments sensitive to electrical noise.
- The area chosen should allow the space required for proper air flow as defined in the following.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- Check that the temperatures within the vicinity of the units are between -10 to 50 degree C (14 to 122 degree F). In case of 8720MC-RPS190, however, the ambient temperature must be between -10 to 40 degree C (14 to 104 degree F).
- Check that the relative humidity is between 5 and 95% without condensation.
- Do not install the units above 1,000 meters (3,300 feet) without derating output power. For every 300 meters (1,000 feet) above 1,000 meters (3,300 feet), derate the output power 4%. When you need to install the units above 1,500 meters (5,000 feet), contact The Allen-Bradley Company.


In case of Model 8720MC-RPS190BM and 8720MC-RPS190BS, it is possible to ship the units from the factory after mounting each of these units in a cabinet together with the required peripheral devices and installing wiring in the cabinet. When the user purchases from The Allen-Bradley Company the units mounted in the cabinet, the above-mentioned guidelines should be considered for selection of the installation site.

Required Total Area

Overall unit dimensions are shown in Figures 3.1 and 3.2. Figure 3.1 illustrates the dimensions of Model 8720MC-RPS027 and 8720MC-RPS065 units, and Figure 3.2 shows the outline dimensions of 8720MC-RPS190 unit. Also as an aid in calculating the required total area, Figures 3.3 and 3.4 show the required distance between two adjacent units in case of two or three paralleled units of Model 8720MC-RPS027 and 8720MC-RPS065, and Figures 3.5 and 3.6 show the required distance between two adjacent units in case of two or three paralleled units of Model 8720MC-RPS190 unit installed in a cabinet provided by the user.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 3.1
Overall Dimensions of a Single Unit of Model 8720MC-RPS027 and 8720MC-RPS065 Units

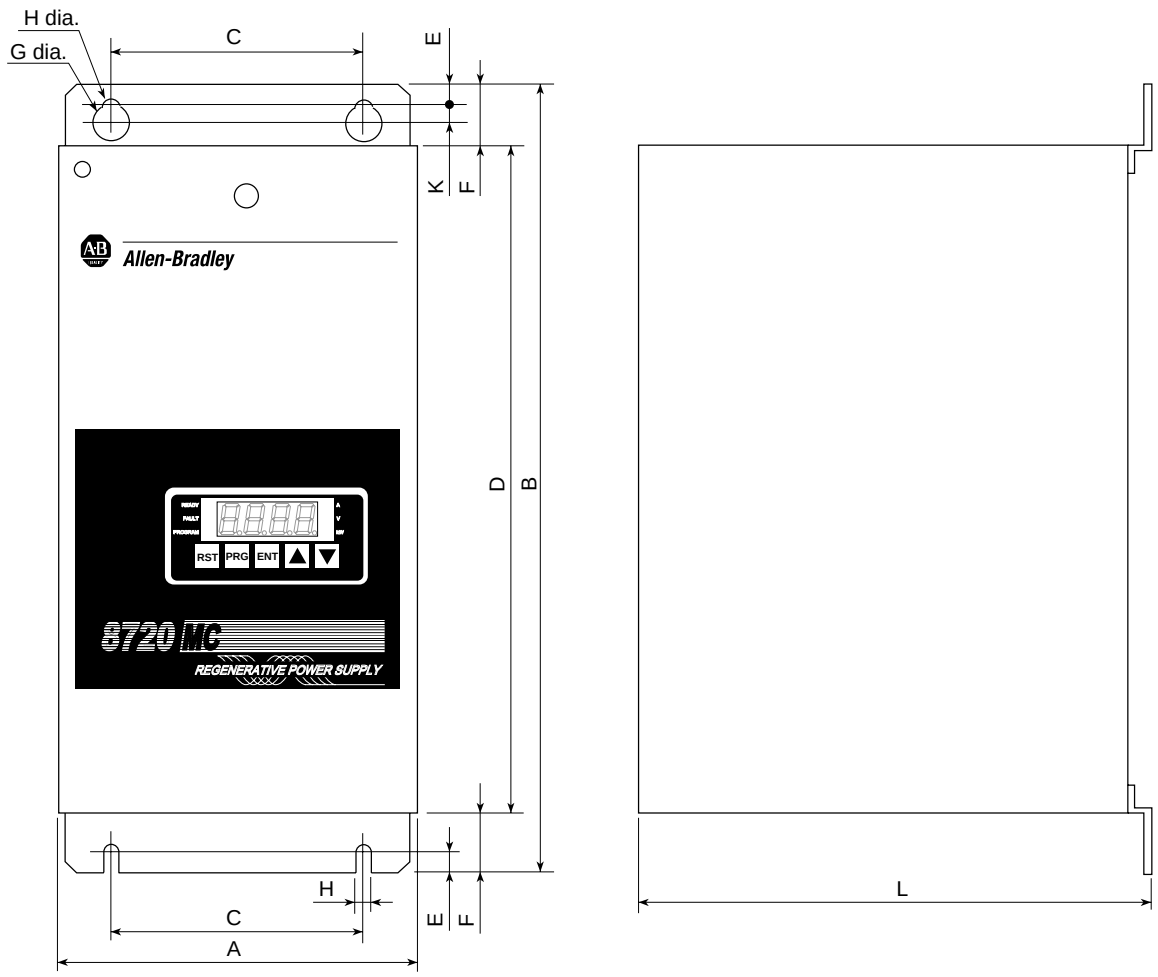


Model	A	B	C	D	E	F	G	H	K	L
8720MC-RPS065	179.4 (7.06)	395 (15.6)	127 (5.0)	333.2 (131.2)	10 (0.39)	30 (1.2)	18 (0.71)	9 (0.35)	9 (0.35)	318.3 (12.53)
8720MC-RPS027	167 (6.57)	320 (12.6)	120 (4.72)	260 (10.24)	10 (0.39)	30 (1.2)	17 (0.67)	8.2 (0.32)	8 (0.31)	310 (12.20)

Unit: Millimeter (Inch)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Figure 3.2
Overall Dimensions of a Single Unit of Model 8720MC-RPS190 Unit

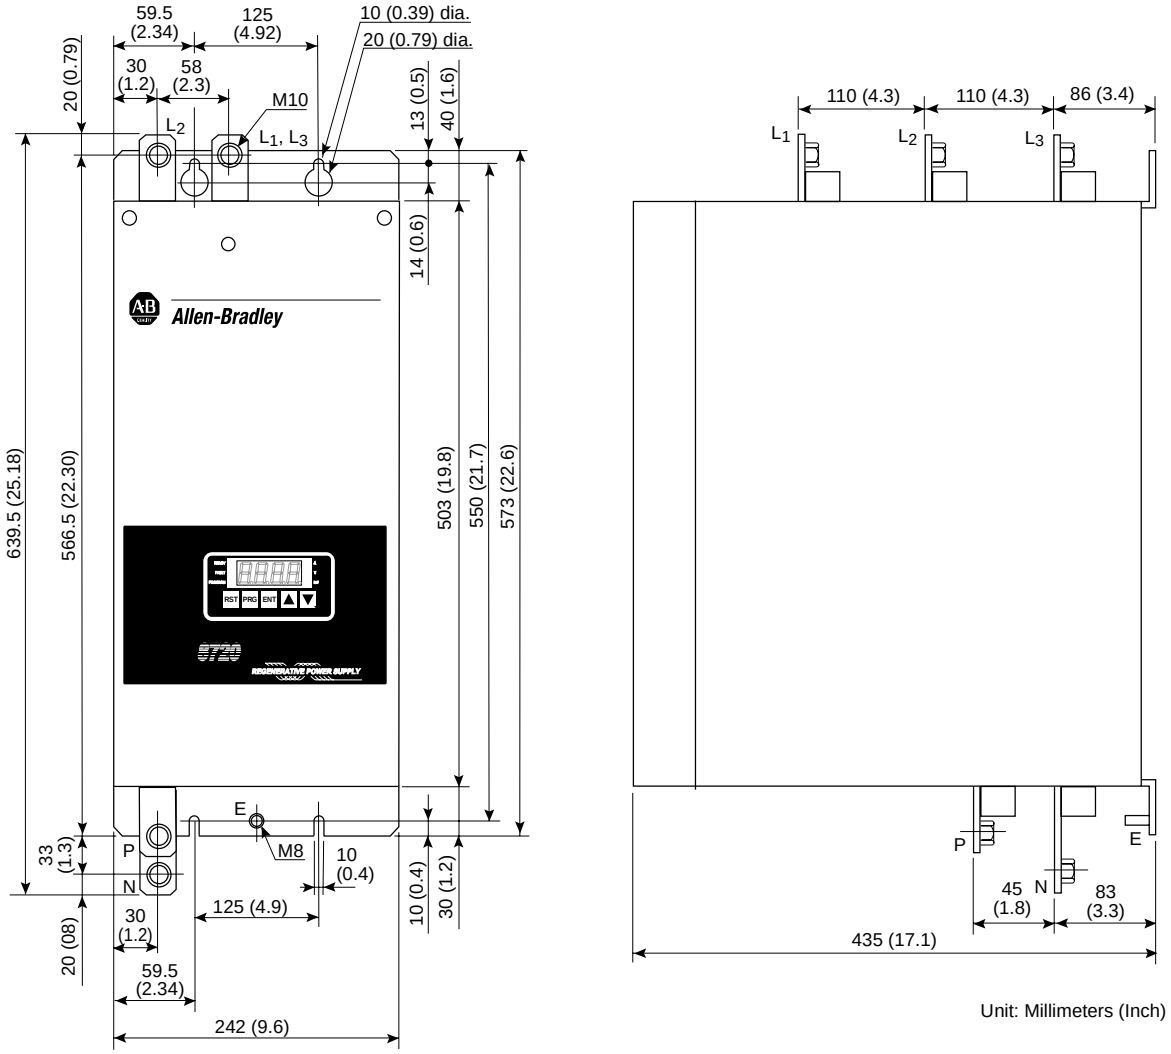

Unit: Millimeters (Inch)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Figure 3.3
Required Distance between Units in Case of Two Paralleled Units of Model 8720MC-RPS027 or 8720MC-RPS065 Units

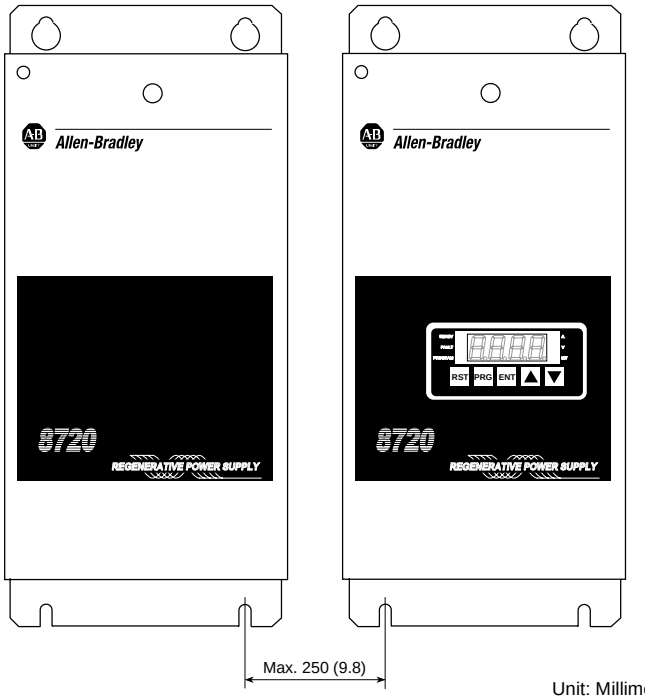

Unit: Millimeter (Inch)

Note: In case two units of Model 8720MC-RPS027 or 8720MC-RPS065 unit are installed in parallel, the master unit must be on the right hand side as shown in the above.

Figure 3.4
Required Distance between Units in Case of Three Paralleled Units of Model 8720MC-RPS027 or 8720MC-RPS065 Units

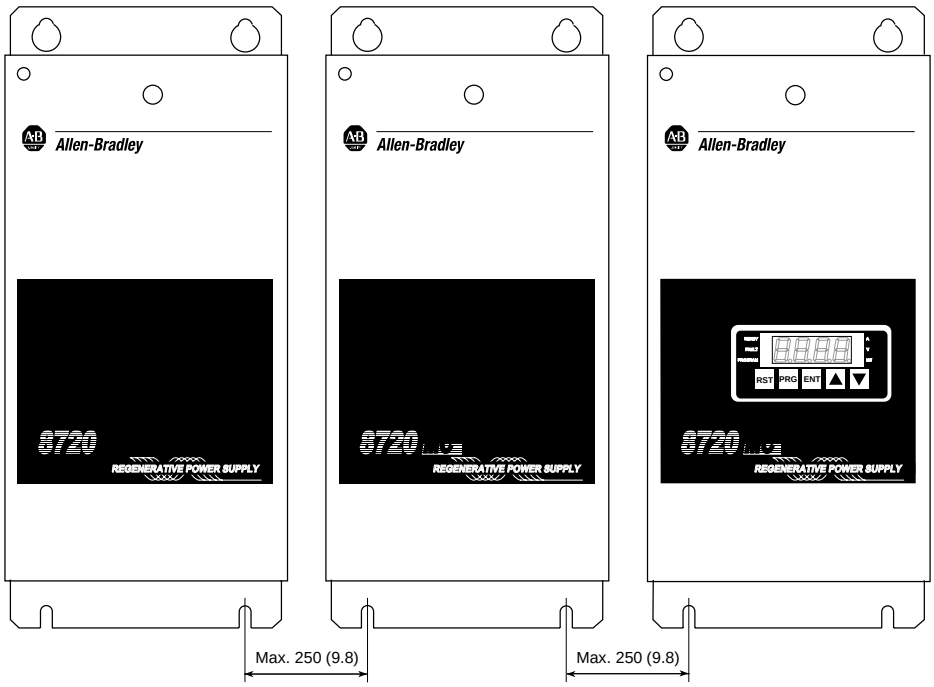


Unit: Millimeter (Inch)

Note: In case three units of Model 8720MC-RPS027 or 8720MC-RPS065 unit are installed in parallel, the master unit must be installed at the rightmost end as shown in the above.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Figure 3.5
Required Distance between Units in Case of Two Paralleled Units of Model 8720MC-RPS190 Unit

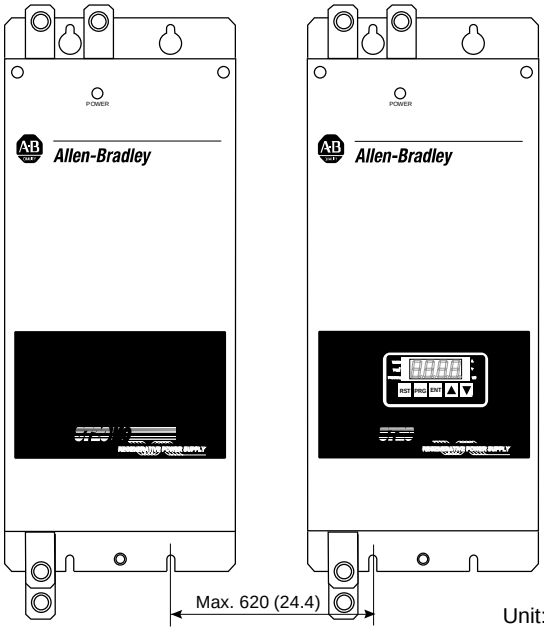

Unit: Millimeters (inch)

Note: In case two units of Model 8720MC-RPS190 unit are installed in parallel, the master unit must be installed on the right hand side as shown in the above.

Figure 3.6
Required Distance between Units in Case of Three Paralleled Units of Model 8720MC-RPS190 Unit

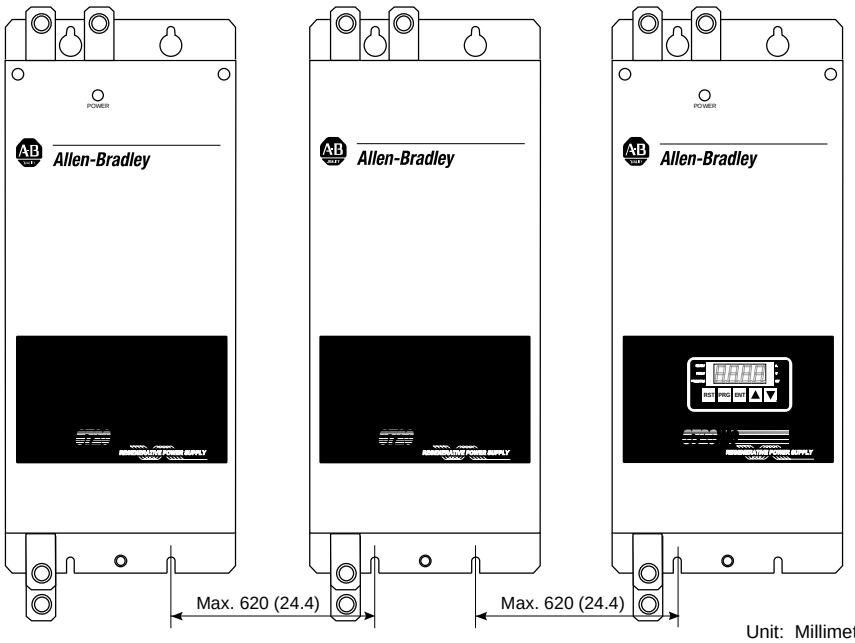


Unit: Millimeters (inch)

Note: In case three units of Model 8720MC-RPS190 unit are installed in parallel, the master unit must be installed at the rightmost end as shown in the above.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Recommended Air Flow Clearance

Be sure that there is adequate clearance for air ventilation around the 8720MC-RPS Regenerative Power Supply. Cooling air flows from the bottom to the top of the units. For best cooling effect, do not mount the 8720MC-RPS Regenerative Power Supply directly above each other. The figure below shows recommended air flow clearance.

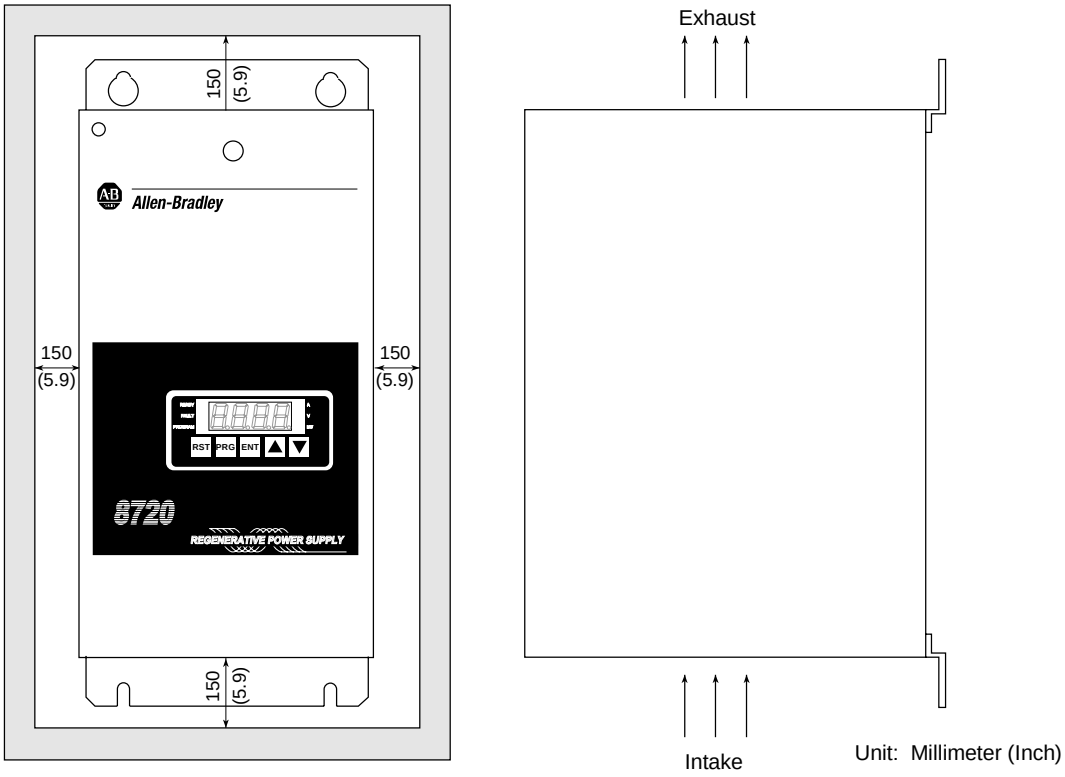

Notes on Installation

When mounting the 8720MC-RPS Regenerative Power Supply, pay attention to the following:

- Mount the units vertically.
- When two or three units of 8720MC-RPS Regenerative Power Supply are installed in parallel, install the master unit at the rightmost end viewed from the front side.
- Be sure that the ambient temperatures surrounding the units is between -10 to 50 degree C (14 to 122 dgree F). In case of Model 8720MC-RPS190BM and 8720MC-RPS190BS units, the ambient temperature is -10 to 40 degree C (14 to 104 degree F). To cool down the temperature in the cabinet, provide sufficient space to allow adequate air flow over the components. If necessary, add circulating fans to assure good convective heat transfer.
- Do not mount any devices behind the units. This area must be kept clear of all power wiring (control power wiring, main power supply wiring and DC bus power wiring).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- Do not expose the units to excessive electrical noise. If it is not avoidable to install the 8720MC-RPS Regenerative Power Supply close to a noise source or to use the units in environment where noise trouble is expected, take sufficient noise suppression measures.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring

This chapter provides instructions on how to properly wire the 8720MC-RPS Regenerative Power Supply units. It also provides information on the selection of the circuit breaker, the main magnetic contactor, reactor, and the harmonic filter, etc.

ATTENTION: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should install, adjust, operate, or service this equipment. Read and understand this manual in its entirety before proceeding. Failure to observe this precaution could result in destruction of the equipment, severe bodily injury or loss of life.

ATTENTION: The user is responsible for conforming with all the applicable codes. Wiring practices, grounding, disconnects, and overcurrent protection are of particular importance. Failure to observe this precaution could result in severe bodily injury or loss of life.

ATTENTION: Do not use a megger to perform continuity checks in the equipment. Use higher range of a circuit tester for this purpose. Failure to observe this precaution could result in damage to, or destruction of, the equipment.

ATTENTION: The user is responsible for conforming with all applicable local, national and international codes. Failure to observe this precaution could result in damage to, or destruction of, the equipment.

Recommended Wire Sizes

This section shows the recommended wire sizes for the wires to be used in cabinet. Select the wire sizes in consideration of the following:

- Applicable local, national and international codes.
- Temperature increase and voltage drop due to type of wires, wiring method, wiring distance, etc.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Recommended Wire Sizes for Power Wiring to the Main Power Terminal Block (TB1) and the Main Power Terminal Bars

Table 4.1 to 4.3 show the recommended wire sizes for power wiring to the main power terminal block (TB1) and the Main Power Terminal Bars. Table 4.1 shows the wire sizes for Model 8720MC-RPS027 unit, Table 4.2 shows the wire sizes for Model 8720MC-RPS065 unit, and Table 4.3 shows the wire sizes for Model 8720MC-RPS190 unit. The wire sizes shown assume full utilization of the rated capacity of the RPS unit.

Table 4.1
Recommended Maximum Wire Sizes for Model 8720MC-RPS027 Unit

Name of Terminal	Symbol	Screw Size	Size of Wire AWG/mm^2
Main Terminals (Input)	L_1, L_2, L_3	M5	#10 / 5.5 mm^2
DC Bus Terminals (Output)	P, N	M5	#10 / 5.5 mm^2
Grounding Terminal (Earth)	G	M5	#10 / 5.5 mm^2

Table 4.2
Recommended Maximum Wire Sizes for Model 8720MC-RPS065 Unit

Name of Terminal	Symbol	Screw Size	Size of Wire AWG/mm^2
Main Terminals (Input)	L_1, L_2, L_3	M6	#4 / 22 mm^2
DC Bus Terminals (Output)	P, N	M6	#4 / 22 mm^2
Grounding Terminal (Earth)	G	M6	#5 / 22 mm^2

Table 4.3
Recommended Maximum Wire Sizes for Model 8720MC-RPS190 Unit

Name of Terminal	Symbol	Screw Size	Size of Wire AWG/mm^2	Attached Lugs [1]
Main Power Supply Terminals	L_1, L_2, L_3	M10	Larger than 38 mm^2 - 2 in parallel (AWG #2 - 2 in parallel)	JST, R38-10 (M10) (6 Pieces)
DC Bus Terminals	P, N	M10	Larger than 100mm^2 (AWG #4/0)	JST, R100-10 (M10) (2 Pieces)
Grounding Terminal	G	M8	Larger than 38mm^2 (AWG #2)	JST, R38-8 (M10) (1 Piece)

[1] UL-listed wires must be lugged by attached lugs.
JST is Japan Solderless Terminal Co.

Recommended Wire Sizes for Power Wiring to the Control Power Terminal Block (TB2) and the Control Terminal Block (TB4)

Table 4.4 shows the recommended wire sizes for power wiring to the control power terminal block (TB2) and the control terminal block (TB4).

Table 4.4
Recommended Wire Sizes for Power Wiring to the Control Power Terminals and the control terminal block (TB4)

Name of Terminal	Symbol	Size of Wire
Main Terminals (Input)	L_{1AUX}, L_{2AUX}, L_{3AUX}	3.5 mm^2 (AWG #12)
DC Bus Terminals (Output)	PR1, PR2, PR3	3.5 mm^2 (AWG #12)
Grounding Terminal (Earth)	MC1, MC2	2.0 mm^2 (AWG #14)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

AC Input Power Wiring for Model 8720MC-RPS027 and 8720MC-RPS065

ATTENTION: Equipment as the 8720MC-RPS Regenerative Power Supply units using high speed switching elements generates noise regarding emission due to noise generated during switching. To avoid influence of such noise, it is very important to use as thick and short grounding wire as possible.

ATTENTION: It is required to install a power disconnecting device, a main magnetic contactor and an AC reactor in the AC input power line. When 8720MC-RPS027 and 8720MC-RPS065 must conform with the requirements of CE Mark, install a line filter in the AC input power line. Failure to observe these precautions could result in damage to, or destruction of, the equipment.

ATTENTION: When a thyristor or similar equipment is connected to AC input power line of 8720MC-RPS Regenerative Power Supply unit, large distortion may be produced in the AC input power voltage and the 8720MC-RPS Regenerative Power Supply may not operate normally. Remove such large distortion from the AC input power voltage.

The capacity (rating) of the 8720MC-RPS Regenerative Power Supply depends on the number of units connected in parallel, i.e., single unit, two paralleled units, or three paralleled units. The relation between the number of paralleled units and the unit capacity is shown in Table 2.1.


Figure 4.1 to 4.3 show typical connection of AC input power wiring for Model 8720MC-RPS027 and 8720MC-RPS065 units. Figure 4.1 shows AC input power wiring for the single unit, and Figures 4.2 and 4.3 show AC input wiring for parallel connection of two units and three units respectively. Install appropriate reactors, magnetic contactors, disconnects, line filters, etc. at the positions shown in these figures.

The phases of the AC input power to the main power supply terminals L_1, L_2 and L_3 must be same as the phases of the control power to the control power terminals L_{1AUX}, L_{2AUX}, and L_{3AUX}. In case of paralleled units, the phases of the control power L_{1AUX}, L_{2AUX}, and L_{3AUX} for the slave unit(s) must also be same as those for the master unit.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ATTENTION: Special caution must be paid to wiring to the 8720MC-RPS Regenerative Power Supply when connecting multiple units in parallel. The phases of AC input power to the main power supply terminals (L_1, L_2 and L_3) and to the control power terminals (L_{1AUX}, L_{2AUX}, and L_{3AUX}) and the polarity of DC bus output (P and N) of all the connected units must be the same. Failure to observe this precaution could result in destruction of the equipment, severe bodily injury or loss of life.


Figure 4.1
Typical Connection of AC Input Power Wiring for Single Unit of Model 8720MC-RPS027 and 8720MC-RPS065

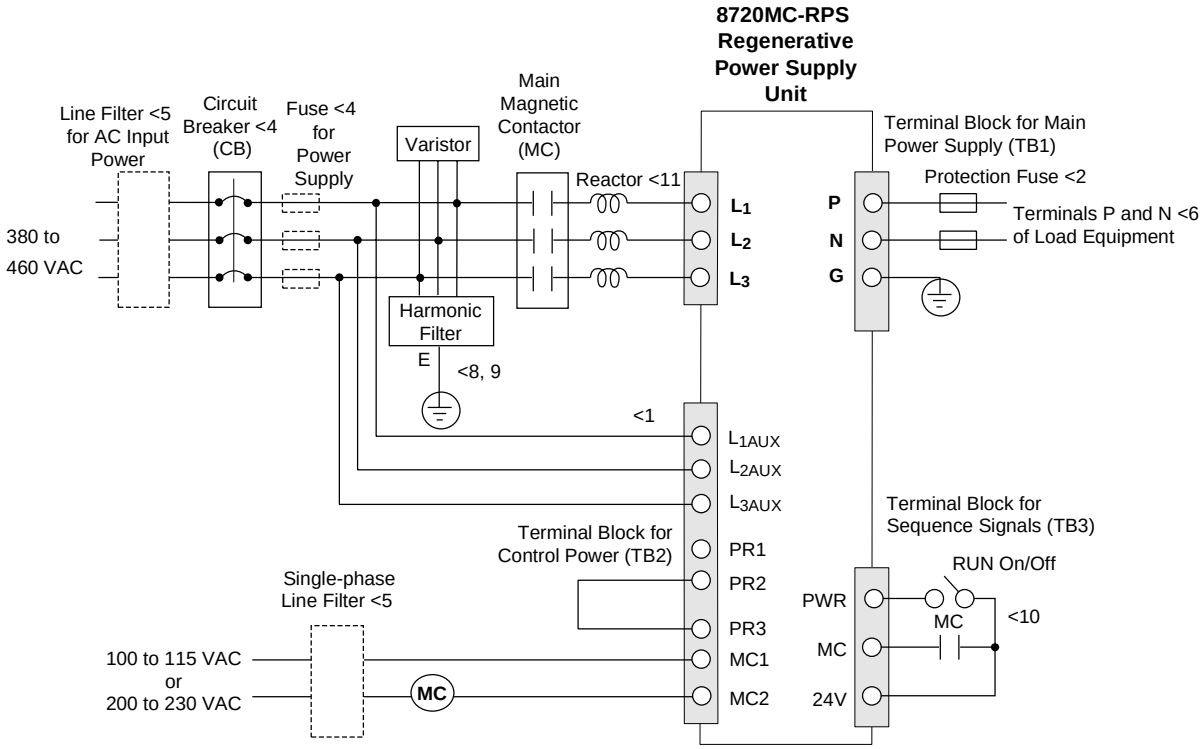

1> The phases of the AC input power to the main supply terminals L_1, L_2 and L_3 must be same as those of the control power to the control power terminals L_{1AUX}, L_{2AUX} and L_{3AUX}.
2> It is recommended to install the DC bus protection fuses on the both lines to the terminals P and N to prevent ground fault, when more than one drive is connected to the 8720MC-RPS Regenerative Power Supply.
3> Turn ON the switch SW7-1 on the Regulator Board without fail.
4> Both a three-phase circuit breaker and fuses are not required. Check your local code to determine if fuses should be used instead of a circuit breaker.
5> When the 8720MC-RPS Regenerative Power Supply must conform with the requirements of CE Mark, install a line filter in the AC input power line and a single-phase line filter in the power supply line to the main magnetic contactor.
6> The length of the DC bus wiring runs should not exceed 2 meters. It is also recommended to use twisted shielded cable.
7> The length of the wiring in the cabinet must be as short as possible.
8> The length of the wiring from the E terminal of the Harmonic Filter to the Grounding Terminal must be as short as possible.
9> The physical location of the Harmonic Filter and Varistor relative to the Contactor and Line Reactor is important. Connect these devices in the relative positions shown in this illustration.
10> Because driving current of sequence input signals is 5mA and below, use a contact of which minimum applicable load is 5mA and below.
11> Use the reactor in maximum surrounding air temperature of 55 degree C (131 degree F) and below.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Figure 4.2
Typical Connection of AC Input Power Wiring for Two Paralleled Units of Model 8720MC-RPS027 and 8720MC-RPS065

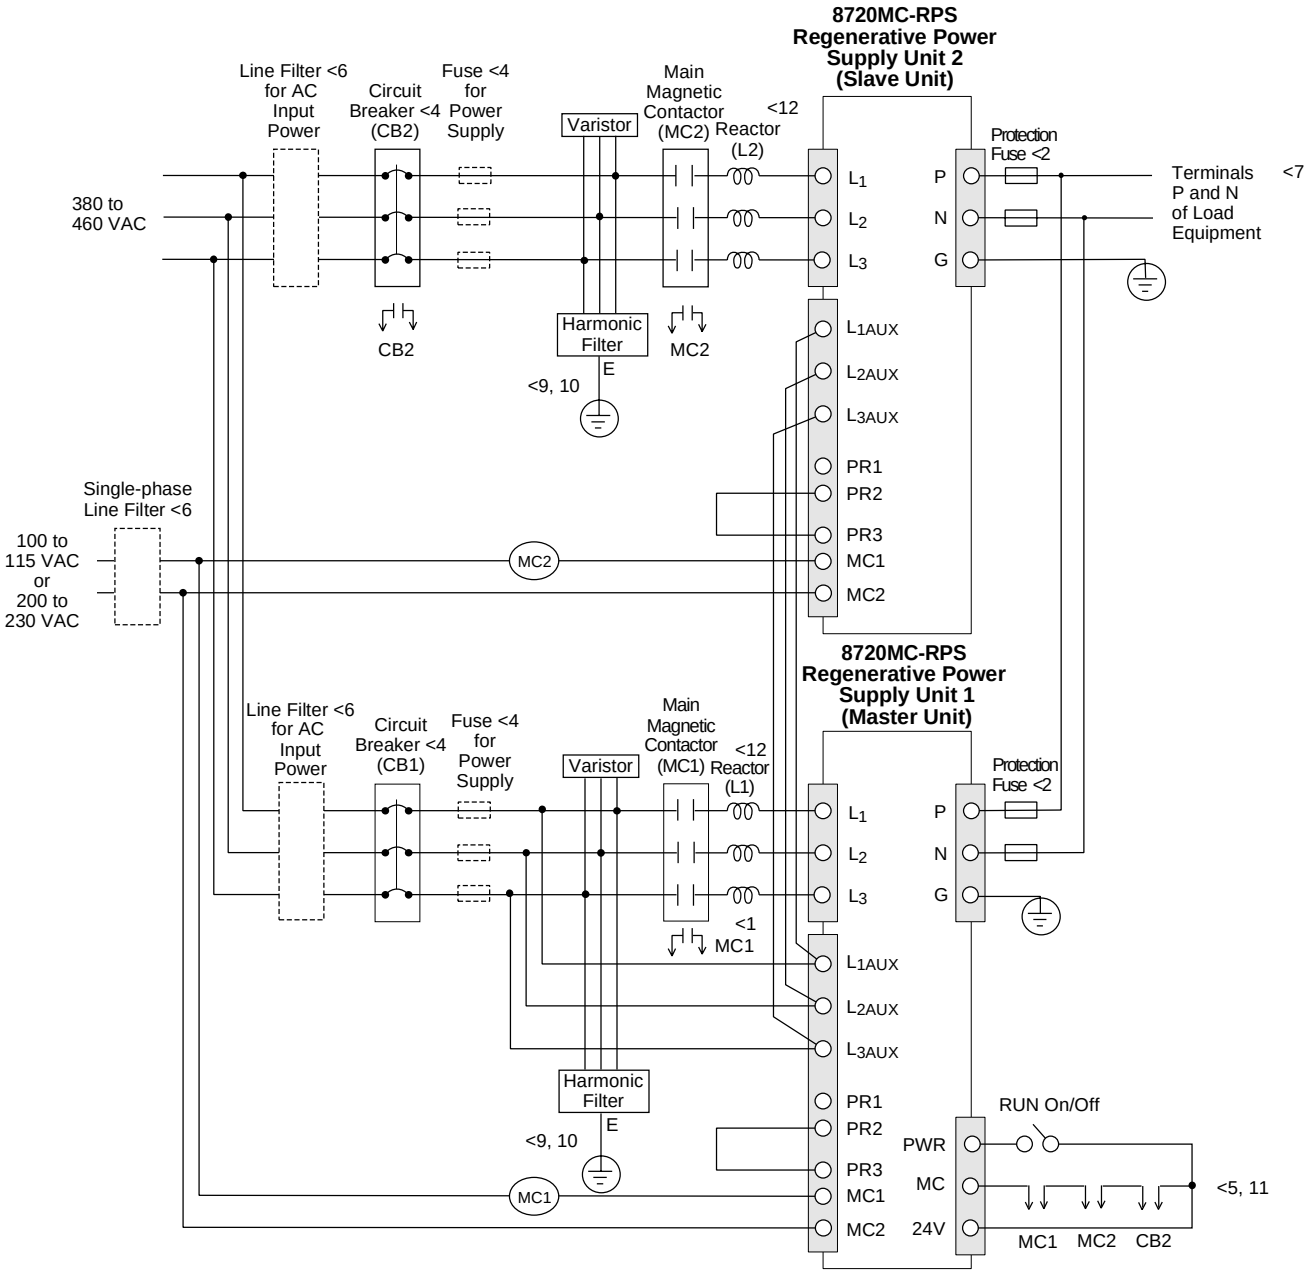

1> The phases of the AC input power to the main supply terminals L_1, L_2 and L_3 must be same as those of the control power to the control power terminals L_{1AUX}, L_{2AUX} and L_{3AUX}. The phases of the control power L_{1AUX}, L_{2AUX} and L_{3AUX} for the slave unit(s) must also be same as those for the master unit.
2> It is recommended to install the DC bus protection fuses on the both lines to the terminals P and N to prevent ground fault, when more than one drive is connected to the 8720MC-RPS Regenerative Power Supply.
3> Turn ON the switches SW7-1 and SW7-2 on the Regulator Board without fail.
4> Both a three-phase circuit breaker and fuses are not required. Check your local code to determine if fuses should be used instead of a circuit breaker.
5> The slave circuit breaker must be provided with an auxiliary contact as a safety interlock to the master. Use fuses with a slightly higher current rating if your local code requires them.
6> When the 8720MC-RPS Regenerative Power Supply must comform with the requirements of CE Mark, install a line filter in the AC input power line and a single-phase line filter in the power supply line to the main magnetic contactor.
7> The length of the DC bus wiring runs should not exceed 2 meters. It is also recommended to use Bus bar for the common bus sized to 1.75 times the total continuous current output of the RPS units.
8> The length of the wiring in the cabinet must be as short as possible.
9> The length of the wiring from the E terminal of the Harmonic Filter to the Grounding Terminal must be as short as possible.
10> The physical location of the Harmonic Filter and Varistor relative to the Contactor and Line Reactor is important. Connect these devices in the relative positions shown in this illustration.
11> Because driving current of sequence input signals is 5mA and below, use a contact of which minimum applicable load is 5mA and below.
12> Use the reactor in maximum surrounding air temperature of 55 degree C (131 degree F) and below.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 4.3
Typical Connection of AC Input Power Wiring for Three Paralleled Units of Model 8720MC-RPS027 and 8720MC-RPS065

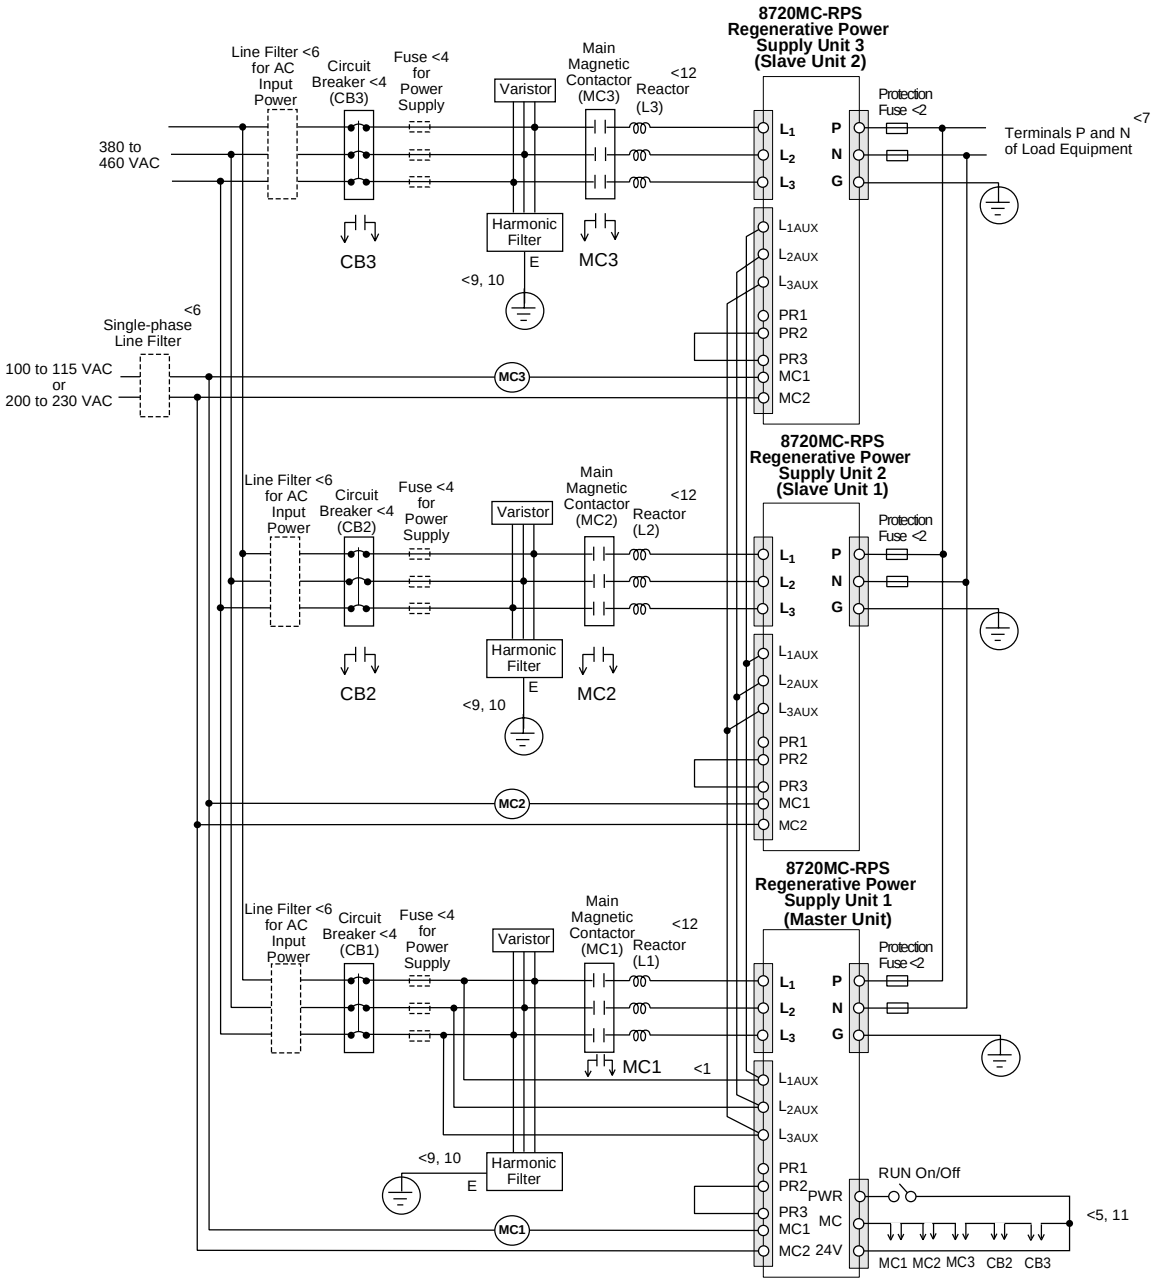


1> The phases of the AC input power to the main supply terminals L_1, L_2 and L_3 must be same as those of the control power to the control power terminals L_{1AUX}, L_{2AUX} and L_{3AUX}. The phases of the control power L_{1AUX}, L_{2AUX} and L_{3AUX} for the slave unit(s) must also be same as those for the master unit.
2> It is recommended to install the DC bus protection fuses on the both lines to the terminals P and N to prevent ground fault, when more than one drive is connected to the 8720MC-RPS Regenerative Power Supply.
3> Turn ON the switches SW7-1, SW7-2 and SW7-3 on the Regulator Board without fail.
4> Both a three-phase circuit breaker and fuses are not required. Check your local code to determine if fuses should be used instead of a circuit breaker.
5> The slave circuit breaker must be provided with an auxiliary contact as a safety interlock to the master. Use fuses with a slightly higher current rating if your local code requires them.
6> When the 8720MC-RPS Regenerative Power Supply must comform with the requirements of CE Mark, install a line filter in the AC input power line and a single-phase line filter in the power supply line to the main magnetic contactor.
7> The length of the DC bus wiring runs should not exceed 2 meters. It is also recommended to use Bus bar for the common bus sized to 1.75 times the total continuous current output of the RPS units.
8> The length of the wiring in the cabinet must be as short as possible.
9> The length of the wiring from the E terminal of the Harmonic Filter to the Grounding Terminal must be as short as possible.
10> The physical location of the Harmonic Filter and Varistor relative to the Contactor and Line Reactor is important. Connect these devices in the relative positions shown in this illustration.
11> Because driving current of sequence input signals is 5mA and below, use a contact of which minimum applicable load is 5mA and below.
12> Use the reactor in maximum surrounding air temperature of 55 degree C (131 degree F) and below.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

When Model 8720MC-RPS027 or 8720MC-RPS065 is operated in the Power Regeneration Mode only

Figure 4.4
Wiring Model 8720MC-RPS027 or 8720MC-RPS065 Unit Used as a Converter for the Power Regeneration Mode Only

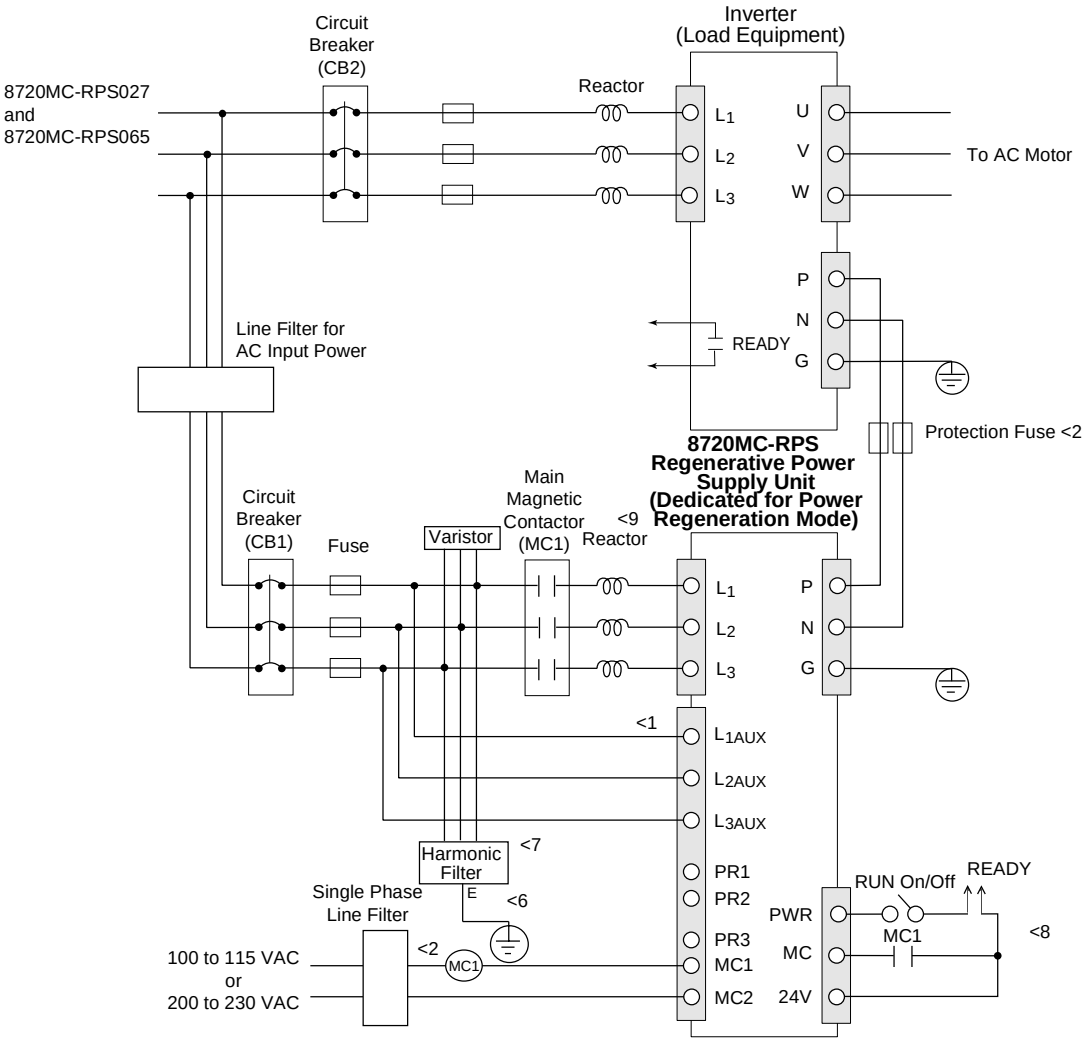

1> The phases of the AC input power to the main supply terminals L_1, L_2 and L_3 must be same as those of the control power to the control power terminals L_{1AUX}, L_{2AUX} and L_{3AUX}.
2> It is recommended to install the DC bus protection fuses on the both lines to the terminals P and N to prevent ground fault, when plural number of load equipment is connected to the 8720MC-RPS Regenerative Power Supply.
3> Turn ON the switch SW7-1 on the Regulator Board without fail.
4> Wiring to be taken into cabinet must be as short as possible.
5> This connection is only used with AC input drives.
6> The length of the wiring from the E terminal of the Harmonic Filter to the Grounding Terminal must be as short as possible.
7> The physical location of the Harmonic Filter and Varistor relative to the Contactor and Line Reactor is important. Connect these devices in the relative positions shown in this illustration.
8> Because driving current of sequence input signals is 5mA and below, use a contact of which minimum applicable load is 5mA and below.
9> Use the reactor in maximum surrounding air temperature of 55 degree C (131 degree F) and below.

It is possible to select the 8720MC-RPS units depending on the regenerative power when only regenerated power of the unit integrating converter and inverter is used. In this case, however, the following cautions must be observed. Figure 4.4 shows wiring of the 8720MC-RPS027 or 8720MC-RPS065 unit used as a converter for the power regeneration mode only.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- Rating of regenerative power of the 8720MC-RPS is less than rated power both in the instantaneous rating and continuous rating.
- When rectifier portion of inverter is composed of thyristor, CR snubber circuit between anode and cathode of thyristor may become overloaded. Therefore, treating time for regenerative power must be within 5 seconds for 3 minutes. Because the current "I_{CR}" flowing through CR snubber circuit in the power regeneration mode is represented by the following formula, verify the specifications of CR snubber circuit.

$$I_{CR}[A] \fallingdotseq (8 - 0.03 \times R\ [\Omega]) \times \sqrt{C\ [\mu F]}$$

- Do not fail to connect ACL unit of 3% impedance toward inverter rating with the AC input line of inverter. Without ACL unit, excessive circulating current will flow between the 8720MC-RPS units.
- Even during the power running, current will be supplied from the 8720MC-RPS unit to DC bus proportionally to the impedance ratio of both reactors at the 8720MC-RPS unit and inverter. This current must not exceed the rating of the 8720MC-RPS unit.
- Set the parameter of the FWD Current Limit (U.001) to zero (0).
- Set the parameter of the Discharging Function Enable (F.017) to zero (OFF).
- Set the DC bus voltage to start power regeneration to the parameter of the DC Bus Voltage Reference (U.000).
- Open all the terminals PR1, PR2 and PR3 for connecting precharge/discharge resistor. Because these terminals are open, the unit does not perform precharge/discharge operations. Precharge/discharge must be performed on inverter side.
- Do not fail to enter the READY signal of inverter to (PWR).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

When Model 8720MC-RPS027 and 8720MC-RPS065 are adapted to Capacitors having large capacity

8720MC-RPS027 and 8720MC-RPS065 units charge to capacitors with a single phase, full-wave rectification circuit through the built-in precharge/discharge resistor. When the load capacitors have large capacitance, it takes more time for charging, and the wattage of the internal resistor becomes insufficient. When the load capacitance is large, disable the built-in precharge/discharge resistor and connect an external resistor or external circuit for precharging/discharging (Note that minimum precharging/ discharging cycle is 3 minutes).

Calculate the rated wattage of the external precharge/discharge resistor to be connected to the outside in accordance with the following formula depending on the total capacitance of all the capacitors including the built-in capacitor.

Rated wattage [W] = 17000 x C[F]
But, serge resistivity of J[J] = 28000 x C[F] must be provided.

When an external precharge/discharge resistor is connected between PR1 and PR2, change the set value of the following parameters, if necessary.

- Precharge/Discharge Time (F.014)
- Wattage of Precharge/Discharge Resistor (F.015)

Table 4.5
Maximum Applicable Capacitance of Capacitor and Minimum Resistance Value

	8720MC-RPS027	8720MC-RPS065
Capacitance of built-in Capacitor	990µF	1900µF
Built-in Resistor (Resistance Value/Wattage)	4500µF (33 ohm/80W)	7000µF (22 ohm/120W)
External Resistor (Minimum Resistance Value), Connect to PR1 and PR2	55000µF (30 ohm)	110000µF (20 ohm)
External Circuit (Minimum Resistance Value), Refer to figure 4.5	82500µF (10 ohm)	220000µF (4.7 ohm)

External resistor case

Most applications are successfully integrated using the internal precharge resistor provided in the 8720MC-RPS Regenerative Power Supply. For instances where there is a large amount of load capacitance, caused by connecting several 8720MC drives to a single 8720MC-RPS Regenerative Power Supply, an external precharge resistor may be required. To determine the total capacitance C[F] add the capacitance for the applicable RPS027 or RPS065 unit, as determined from row 1 of Table 4.5, to the sum of the drive capacitance as determined by the drive specifications in Chapter 2 of the 8720MC-RPS User Manual, Publication 8720-UM-001-B-US-P FEB 2001. In the case of the RPS027 if the total capacitance is above 4,500µf, but less than 55,000µf an external precharge resistor connected to PR1 and PR2 is required. In the case of RPS065 if the total capacitance is above 7,000µf but less than 110,000µf an external resistor connected to PR1 and PR2 is


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

required. Table 4.5 provides the minimum resistance value for the external precharge resistor, 30 ohms in the case of the RPS027 and 20 ohms in the case of the RPS065. The wattage [W] is determined by the equation presented above. Connect the external precharge resistor to terminals PR1 and PR2 on terminal block TB2. Terminal PR3 should be left open. See Chapter 2, Figure 2.1 under "Terminal Blocks on the Main Circuit". The Precharge/Discharge Time (F.014) may require a larger value to accommodate the increased precharge time. The Wattage of Precharge/Discharge Resistor (F.015) should also be increased to the external precharge resistor wattage.

External circuit case

In the case of the RPS027 if the total capacitance is above 55,000µf but less than 82,500µf an external precharge resistor connected as shown in Figure 4.5 must be provided. In the case of the RPS065 if the total capacitance is above 110,000µf but less than 220,000µf an external resistor connected as shown in Figure 4.5 must be provided. Table 4.5 provides the minimum resistance value for the external precharge resistor, 10 ohms in the case of the RPS027 and 4.7 ohms in the case of the RPS065. The wattage [W] is determined by the equation presented above.

Figure 4.5
Example of Wiring when Precharge/Discharge Circuit of the 8720MC-RPS027 or 8720MC-RPS065 is configured with an External Circuit

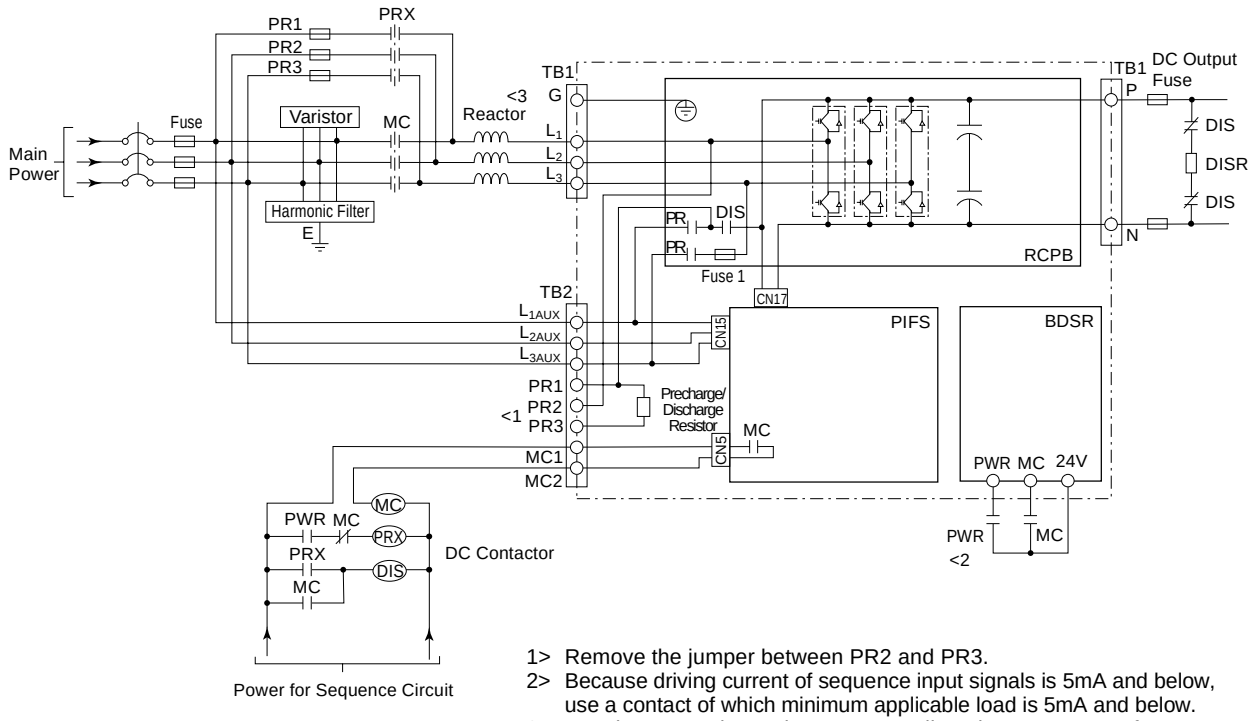

1> Remove the jumper between PR2 and PR3.
2> Because driving current of sequence input signals is 5mA and below, use a contact of which minimum applicable load is 5mA and below.
3> Use the reactor in maximum surrounding air temperature of 55 degree C (131 degree F) and below.

If a totally external resistor network is used as shown in Figure 4.5, the calculated wattage, [W] = 17,000 x C farads, is divided in half to size the precharge and discharge resistors.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Parameter F.015 should be set to the sum of the wattage for both resistors.

Installing Circuit Breaker

To protect the AC input power, install a circuit breaker with supplemental contact (CB) in the AC input power line. Refer to Figures 4.1 to 4.3 for the wiring. The rated ampacities of the circuit breakers are as follows:

For Model 8720MC-RPS027BM unit : 50 Amps
For Model 8720MC-RPS065BM and
8720MC-RPS065BS units : 100 Amps

The following are the recommended circuit breakers with supplemental contact.

For Model 8720MC-RPS027BM unit:

Fuji Electric - SA100BA/50WD
BU3ESB-50 W (UL-listed)*
Westinghouse - FDB3050*
or equivalent

For Model 8720MC-RPS065BM and 8720MC-RPS065BS units:

Fuji Electric - SA100BA/100WD
BU3ESB-100 W (UL-listed)*
Westinghouse - FDB3100*
or equivalent

* Because supplemental contact of this circuit breaker does not conform with load of 5mA, relay with less than 5mA should be used for connection when a supplemental contact is connected with sequence input PWR.

Be sure to provide required quantity of circuit breakers with supplemental contact (CB) for all units connected in parallel (see Figure 4.2 or 4.3).

Installing Main Magnetic Contactor

The 8720MC-RPS Regenerative Power Supply uses a magnetic contactor for turning the main power supply ON/OFF. Install and wire the main magnetic contactors as shown in Figure 4.1 to 4.4. After the RUN sequence signal entered and the precharge operation is completed, the main magnetic contactor will be turned ON. Conversely, when the RUN sequence signal is turned OFF, or when a fault occurs, the main magnetic contactor will be turned OFF and the discharge operation will begin.

The following are the recommended main magnetic contactors.

For Model 8720MC-RPS027BM unit:

Allen-Bradley - 100-C23x10 or 100-C30x10 (CE marked) (where x is voltage suffix code of operating coil)
Fuji Electric - SC-N1 (UL listed component)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

For Model 8720MC-RPS065BM and 8720MC-RPS065BS units:

Allen-Bradley	-	100-C43x10 (CE marked) (where x is voltage suffix code of operating coil)
Fuji Electric	-	SC-N2S (UL listed component)

(Select an adequate operating coil for the magnetic contactor within the range of 100 to 230 VAC depending on the used voltage.)

Be sure to provide required quantity of magnetic contactors (MC) for all units connected in parallel (see Figure 4.2 or 4.3).

Installing Reactor

ATTENTION: During operation of the 8720MC-RPS Regenerative Power Supply, the reactor is at a high temperature. Do not touch the reactor during operation or immediately after the unit has been turned OFF. Failure to observe this precaution could result in bodily injury.

ATTENTION: During operation of the 8720MC-RPS Regenerative Power Supply, the reactor operates at a high temperature. Install the reactor in a location where high temperature does not present a problem.

The 8720MC-RPS Regenerative Power Supply boosts up and controls the DC bus voltage, by utilizing the magnetic characteristics of a reactor. Therefore, reactors are required for the 8720MC-RPS Regenerative Power Supply.

Install a single-phase type reactor to each of L_1-phase, L_2-phase and L_3-phase. Do not use three-phase AC reactors, since this will cause unwanted coupling between the phases.

The following inductance of the reactor must be maintained in a high frequency as 10 to 20 kHz. Note that use of a reactor for commercial power supply may not maintain the required inductance, resulting in increased heat generation or saturation due to iron loss.

When multiple units are connected in parallel, a current unbalance between the units is produced due to variation of reactor inductance. To make the current difference between the connected units as small as possible, use reactors having a variation of no more than +/-2.5%.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The following are the designated reactors. These reactors are integrated for three phases consisting of three single phase reactors. When selected reactors are installed, set their capacity to the parameter F.013.

Model 8720MC-LR14-070B (1200 micro-henry):
For Model 8720MC-RPS065BM and 8720MC-RPS065BS units that are used at 80 Amps or less (capacity of applicable motor is 37 kW or less)

Model 8720MC-LR10-062B (1100 micro-henry):
For Model 8720MC-RPS065BM and 8720MC-RPS065BS units that are used at 60 Amps or less (capacity of applicable motor is 30 kW or less).

Model 8720MC-LR05-048B (800 micro-henry):
For Model 8720MC-RPS065BM and 8720MC-RPS065BS units that are used at 48 Amps or less (capacity of applicable motor is 22 kW or less).

Model 8720MC-LR03-032B (850 micro-henry):
For Model 8720MC-RPS027BM, 8720MC-RPS065BM and 8720MC-RPS065BS units that are used at 32 Amps or less (capacity of applicable motor is 15 kW or less).

The reactor should operate in an ambient temperature of 50 degree C (122 degree F) or lower. If it is not avoidable to use a reactor above 50 degree C (122 degree F) , decrease current 1% for every 1 degree C above 50 degree C.

Select temperature rating of wire to connect a reactor as follows.

For Model 8720MC-LR14-070B reactor used with current of 60 Amps or lower, and for Model 8720MC-LR10-062B, 8720MC-LR05-048B and 8720MC-LR03-032B reactors, select a temperature rating 105 degree C (221 degree F) or higher.

For Model 8720MC-LR14-070B reactor used with a current between 60 and 80 Amps, select a temperature rating 130 degree C (266 degree F) or higher.

Be sure to provide required quantity of reactors for all units connected in parallel (see Figure 4.2 or 4.3).

Installing Varistor

Install a varistor to absorb serge voltage between AC input power wires. The following is the designated varistor.

For 8720MC-RPS027BM, 8720MC-RPS065BM and 8720MC-RPS065BS units: 8720MC-VA-B

Be sure to provide required quantity of varistors for all units connected in parallel (see Figure 4.2 or 4.3). Also be sure to connect the varistor on the incoming AC line side of the AC contactor.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Installing Harmonic Filter

Install an adequate harmonic filter as shown in Figure 4.1, 4.2 or 4.3 to remove higher order harmonics generated by switching operation of Power Modules, from AC input power. Also be sure to connect the harmonic filter on the incoming AC line side of the AC contactor. The following are the designated harmonic filter and wire size.

8720MC-HF-B2

Wire size: 3.5 square millimeters

Installing Input Fuses

Install a fuse on the AC incoming power line. The following is the recommended fuse for the single unit.

Gould A4J or equivalent (Class J Fuse)

Rated current of fuse unit is shown in Table 4.6.

Table 4.6
Rated Current of Fuses for Unit

Unit	8720MC-RPS027	8720MC-RPS065
Rated Current	50 Amps	100 Amps

The table assumes the maximum rated RPS current is required. The 8720MC drive user manual, publication 8720-RM001C-US-P provides fuse data for specific drive/RPS combinations in chapter 4.

Also, as a measure against ground fault, install a fuse to protect the DC bus. The recommended fuses are as follows.

For Model 8720MC-RPS065BM and 8720MC-RPS065BS units: FERRAZ SHAWMUT A130URD70LI0100

For Model 8720MC-RPS027BM unit: FERRAZ SHAWMUT A100P50-4

Installing Line Filters

If an 8720MC-RPS Regenerative Power Supply is used as a unit conforming with the requirements of CE Mark, install a line filter for AC input power on each AC incoming power line. Table 4.7 shows the designated line filters for AC input power. The 8720MC-RPS Regenerative Power Supply listed in Table 4.7 have CE marks.

Table 4.7
Designated Line Filter for AC Input Power

8720MC-RPS Regenerative Power Supply Unit	8720MC-RPS065BM/ 8720MC-RPS065BS	8720MC-RPS027BM
When units are used for both of the power supply mode and power regeneration mode	Schaffner: FN3100-80-35 Soshin Electric: HF3080C-TOA	Schaffner: FN3100-35-33 Soshin Electric: HF3030C-TMA

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Install also a line filter on single phase AC incoming power line for a main magnetic contactor. The following are designated single phase line filters:

For Model 8720MC-RPS027BM, 8720MC-RPS065BM and 8720MC-RPS065BS units:

Schaffner FN2010-6-06 or
Soshin Electric NF2005A-YX

Bus Bar and Output Fuses

When multiple drives and/or master/slave RPS units are needed for a common bus application, bus bar is recommended. Size the bus bar to at least 175% of the total continuous RPS output current. The DC bus input wire and fuses to the drive can be sized to 175% of the drive continuous DC input current requirements. All fuses on the DC bus must be rated for 1,000 VDC operation. Use Gould A1-100P, Gould A1-100C (80 amps and higher) or equal. The 8720MC drive user manual, publication 8720MC-RM001C-US-P provides DC bus fuse data for specific drive/RPS combinations in chapter 4.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

AC Input Power Wiring for Model 8720MC-RPS190

ATTENTION: Equipment as the 8720MC-RPS Regenerative Power Supply units using high speed switching elements generates noise regarding emission due to noise generated during switching. To avoid influence of such noise, it is very important to use as thick and short grounding wire as possible.

ATTENTION: It is required to install a power disconnecting device, a main magnetic contactor, an AC reactor and a line filter in the AC input power line. Failure to observe these precautions could result in damage to, or destruction of, the equipment.

ATTENTION: When a thyristor or similar equipment is connected to AC input power line of 8720MC-RPS Regenerative Power Supply unit, large distortion may be produced in the AC input power voltage and the 8720MC-RPS Regenerative Power Supply may not operate normally. Remove such large distortion from the AC input power voltage.

The capacity (rating) of the 8720MC-RPS Regenerative Power Supply unit depends on the number of units connected in parallel, i.e., single unit, two paralleled units, or three paralleled units. The relation between the number of paralleled units and the unit capacity is shown in Table 2.1.


Figure 4.6 to 4.8 show typical connection of AC input power wiring for Model 8720MC-RPS190 unit. Figure 4.6 shows AC input power wiring for the single unit, and Figures 4.7 and 4.8 show AC input wiring for parallel connection of two units and three units respectively. Select appropriate ACL units (reactor assemblies), 8720MC-EF190-VB EMC filter units, disconnects, etc., and installed them at the positions shown in these figures.

ATTENTION: When two or three paralleled units of Model 8720MC-RPS190 unit are operated, special care should be paid to the countermeasure against noise generated by each of the paralleled units during switching operation. If each of the paralleled units is installed in a separate cabinet, be careful for selection of cabinet and installation of the units.

ATTENTION: The temperature inside the cabinet must be kept below 40 degree C (104 degree F). Because Model 8720MC-RPS190 unit generates large amount of heat, exercise special caution for exhausting air. Also, be careful for selection of installation location of the 8720MC-EF190-VB EMC filter units.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Figure 4.6
Typical Connection of AC Input Power Wiring for Single Unit of Model 8720MC-RPS190 Unit

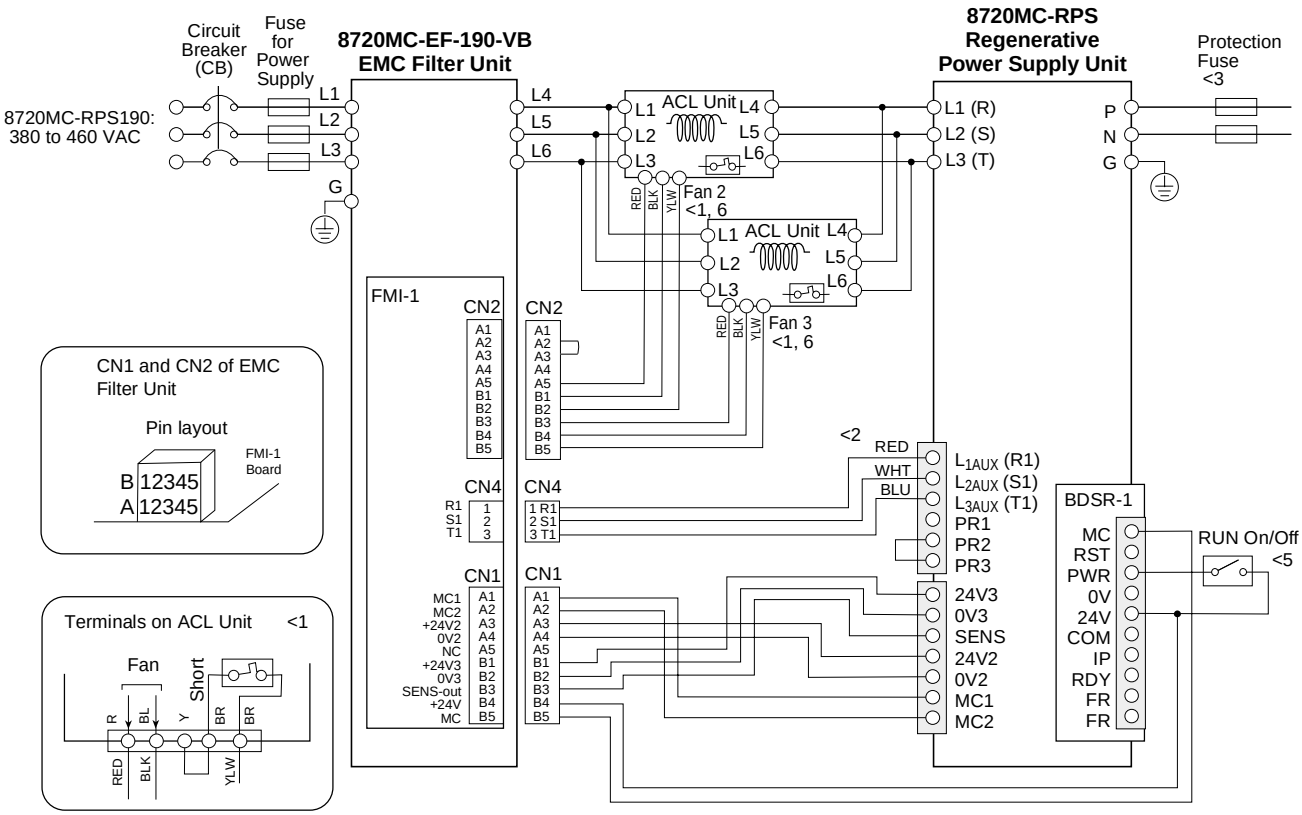

1> Refer to the figure at the lower left corner of this figure indicating the terminals on the ACL unit. When the fan inside the ACL unit is connected with an external power supply, do not fail to connect with the power supply designated by NEC Class 2 (Power supply limited to 100VA and below and 8A and below even in case of Error). Avoid the high voltage portion and the high temperature portion of the ACL unit when wiring the fan inside the ACL unit.
2> The phases of the AC input power to the main supply terminals L_1, L_2 and L_3 must be same as those of the control power to the control power terminals L_{1AUX}, L_{2AUX} and L_{3AUX}.
3> It is recommended to install the DC bus protection fuses on the both lines to the terminals P and N to prevent ground fault, when plural number of load equipment is connected to the 8720MC-RPS Regenerative Power Supply.
4> Turn ON the switch SW7-1 on the Regulator Board without fail.
5> Because driving current of sequence input signals is 5mA and below, use a contact of which minimum applicable load is 5mA and below.
6> Use the ACL unit in maximum surrounding air temperature of 55 degree C (131 degree F) and below.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 4.7
Typical Connection of AC Input Power Wiring for Two Paralleled Units of Model 8720MC-RPS190 Unit

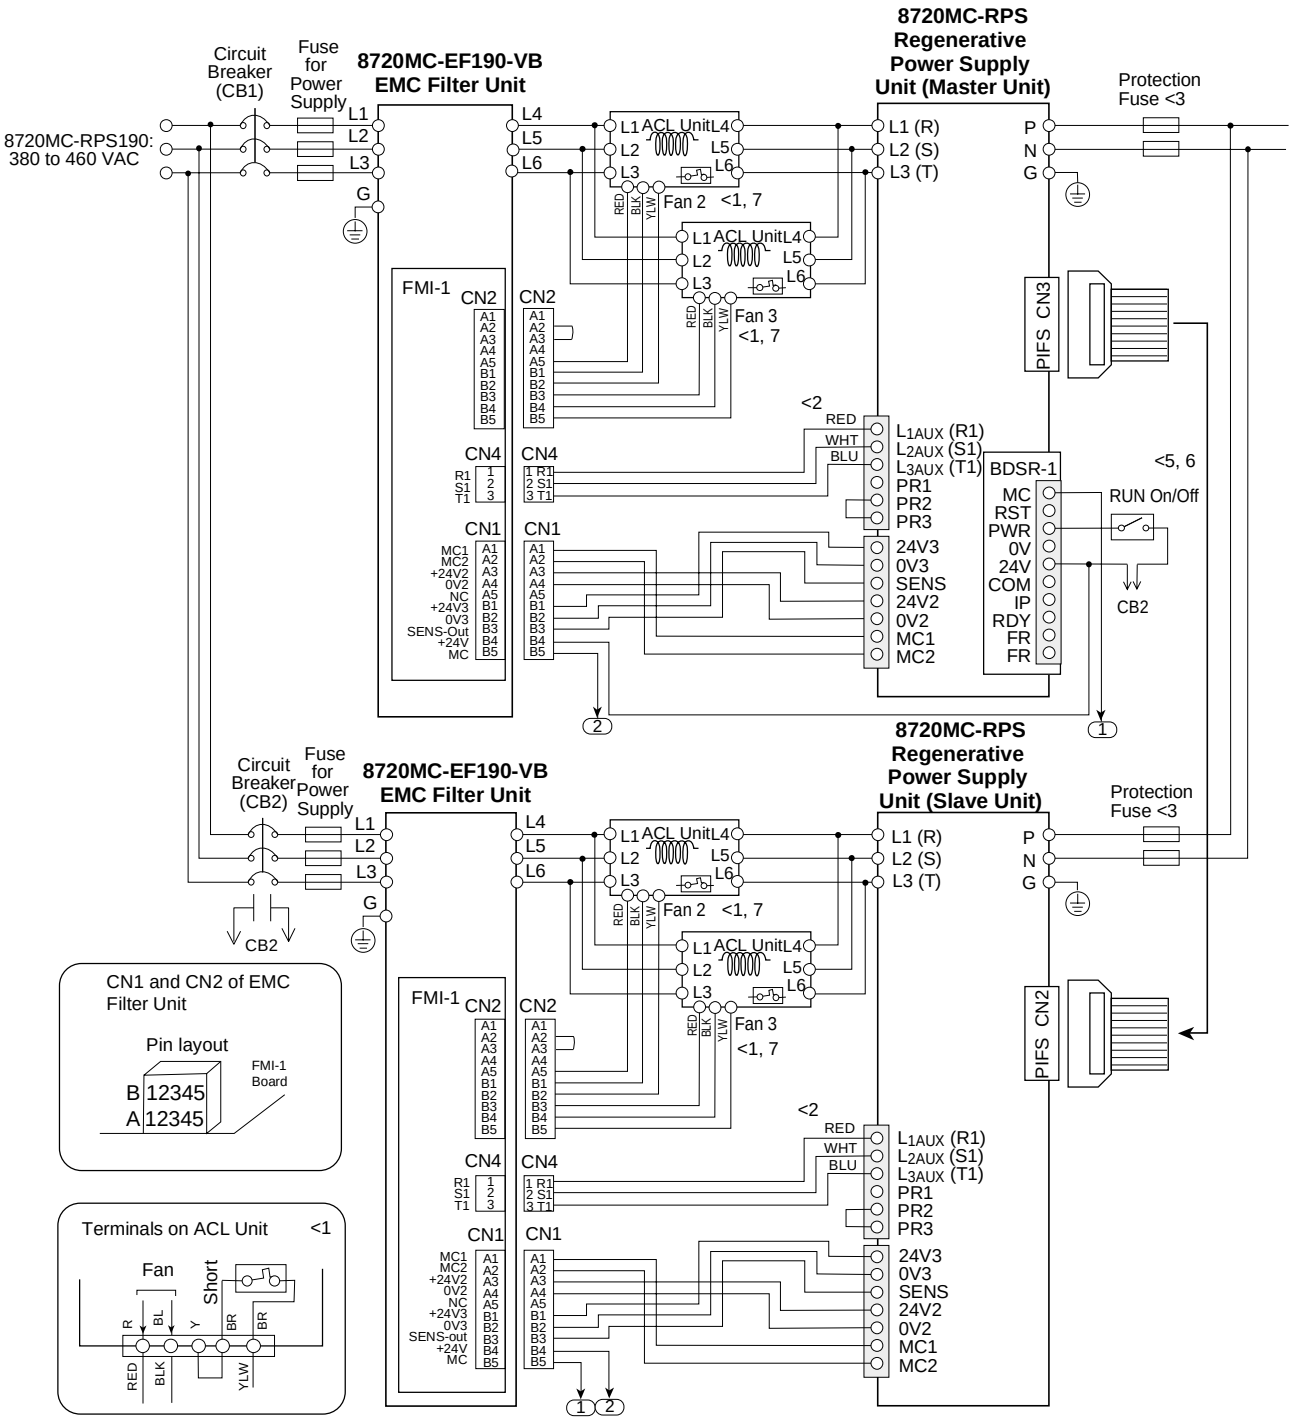


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1> Refer to the lower left corner of Figure 4.7 indicating the terminals on the ACL unit. When the fan inside the ACL unit is connected with an external power supply, do not fail to connect with the power supply designated by NEC Class 2 (Power supply limited to 100VA and below, and 8A and below even in case of Error). Avoid the high voltage portion and the high temperature portion of the ACL unit when wiring the fan inside the ACL unit.
2> The phases of the AC input power to the main supply terminals L_1, L_2 and L_3 must be same as those of the control power to the control power terminals L_{1AUX}, L_{2AUX} and L_{3AUX}.
3> It is recommended to install the DC bus protection fuses on the both lines to terminals P and N to prevent ground fault, when plural number of load equipment is connected to the 8720MC-RPS Regenerative Power Supply.
4> Turn on the switch SW7-1 and SW7-2 on the Regulator Board without fail.
5> Slave circuit breakers must be provided with an auxiliary contact as a safety interlock to the master. Use fuses with a slightly higher current rating also if your local code requires them.
6> Because driving current of sequence input signals is 5mA and below, use a contact of which minimum applicable load is 5mA and below.
7> Use the ACL unit in maximum surrounding air temperature of 55 degree C (131 degree F) and below.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 4.8
Typical Connection of AC Input Power Wiring for Three Paralleled Units of Model 8720MC-RPS190

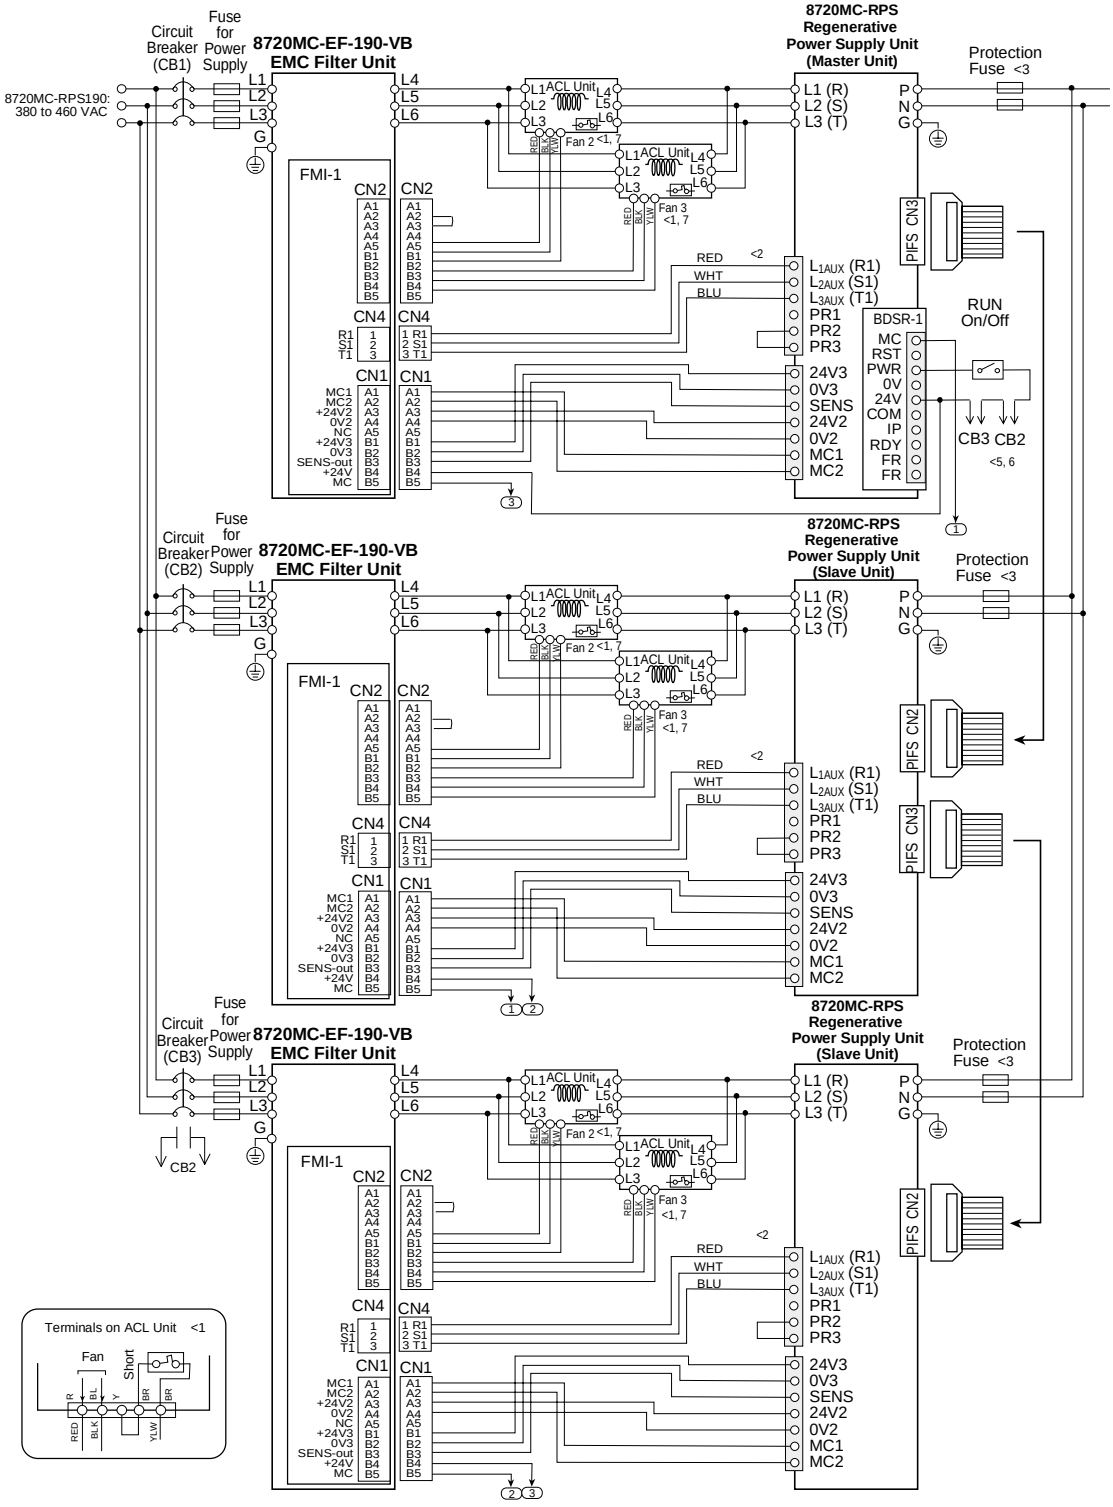


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1> Refer to the lower left corner of Figure 4.7 indicating the terminals on the ACL unit. When the fan inside the ACL unit is connected with an external power supply, do not fail to connect with the power supply designated by NEC Class 2 (Power supply limited to 100VA and below, and 8A and below even in case of Error). Avoid the high voltage portion and the high temperature portion of the ACL unit when wiring the fan inside the ACL unit.
2> The phases of the AC input power to the main supply terminals L_1, L_2 and L_3 must be same as those of the control power to the control power terminals L_{1AUX}, L_{2AUX} and L_{3AUX}.
3> It is recommended to install the DC bus protection fuses on the both lines to terminals P and N to prevent ground fault, when plural number of load equipment is connected to the 8720MC-RPS Regenerative Power Supply.
4> Turn on the switch SW7-1, SW7-2 and SW7-3 on the Regulator Board without fail.
5> Slave circuit breakers must be provided with an auxiliary contact as a safety interlock to the master. Use fuses with a slightly higher current rating also if your local code requires them.
6> Because driving current of sequence input signals is 5mA and below, use a contact of which minimum applicable load is 5mA and below.
7> Use the ACL unit in maximum surrounding air temperature of 55 degree C (131 degree F) and below.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

When Model 8720MC-RPS190 is operated in the Power Regeneration Mode only.

Figure 4.9
Wiring Model 8720MC-RPS190 Used as a Converter for the Power Regeneration Mode Only

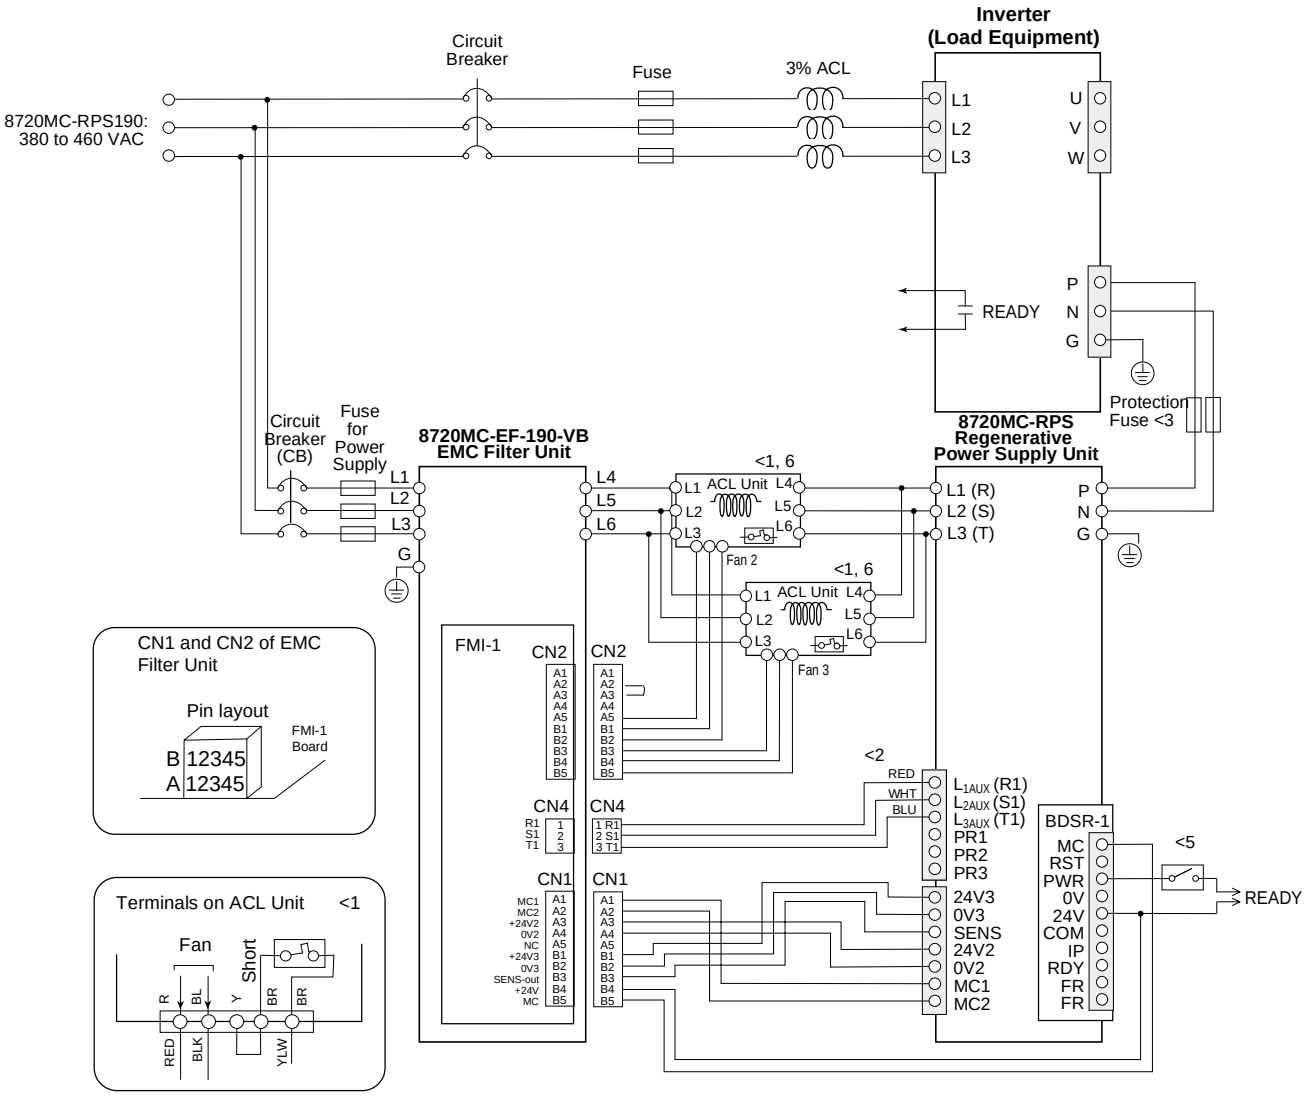

1> Refer to the lower left corner of Figure 4.7 indicating the terminals on the ACL unit. When the fan inside the ACL unit is connected with an external power supply, do not fail to connect with the power supply designated by NEC Class 2 (Power supply limited to 100VA and below, and 8A and below even in case of Error). Avoid the high voltage portion and the high temperature portion of the ACL unit when wiring the fan inside the ACL unit.

2> The phases of the AC input power to the main supply terminals L_1, L_2 and L_3 must be same as those of the control power to the control power terminals L_{1AUX}, L_{2AUX} and L_{3AUX}.

3> It is recommended to install the DC bus protection fuses on the both lines to terminals P an N to prevent ground fault, when plural number of load equipment is connected to the 8720MC-RPS Regenerative Power Supply.

4> Turn on the switch SW7-1 on the Regulator Board without fail.

5> Because driving current of sequence input signals is 5mA and below, use a contact of which minimum applicable load is 5mA and below.

6> Use the ACL unit in maximum surrounding air temperature of 55 degree C (131 degree F) and below.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

It is possible to select the 8720MC-RPS units depending on the regenerative power when only regenerated power of the unit integrating converter and inverter is used. In this case, however, the following cautions must be observed. Figure 4.4 shows wiring of the 8720MC-RPS027 or 8720MC-RPS065 unit used as a converter for the power regeneration mode only.

- Rating of regenerative power of the 8720MC-RPS is less than rated power both in the instantaneous rating and continuous rating.
- When rectifier portion of inverter is composed of thyristor, CR snubber circuit between anode and cathode of thyristor may become overloaded. Therefore, treating time for regenerative power must be within 5 seconds for 3 minutes. Because the current "I_{CR}" flowing through CR snubber circuit in the power regeneration mode is represented by the following formula, verify the specifications of CR snubber circuit.

$$I_{CR}[A] \fallingdotseq (8 - 0.03 \times R\ [\Omega]) \times \sqrt{C\ [\mu F]}$$

- Do not fail to connect ACL unit of 3% impedance toward inverter rating with the AC input line of inverter. Without ACL unit, excessive circulating current will flow between the 8720MC-RPS units.
- Even during the power running, current will be supplied from the 8720MC-RPS unit to DC bus proportionally to the impedance ratio of both reactors at the 8720MC-RPS unit and inverter. This current must not exceed the rating of the 8720MC-RPS unit.
- Set the parameter of the FWD Current Limit (U.001) to zero (0).
- Set the parameter of the Discharging Function Enable (F.017) to zero (OFF).
- Set the DC bus voltage to start power regeneration to the parameter of the DC Bus Voltage Reference (U.000).
- Open all the terminals PR1, PR2 and PR3 for connecting precharge/discharge resistor. Because these terminals are open, the unit does not perform precharge/discharge operations. Precharge/discharge must be performed on inverter side.
- Do not fail to enter the READY signal of inverter to (PWR).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

When Model 8720MC-RPS190 is adapted to Capacitors having large capacity

8720MC-RPS190 unit charges to capacitors with a single phase, full-wave rectification circuit through the built-in precharge/ discharge resistor. When the load capacitors have large capacitance, it takes more time for charging, and the wattage of the internal resistor becomes insufficient. When the load capacitance is large, disable the built-in precharge/discharge resistor and connect an external resistor or external circuit for precharging/discharging (Note that minimum precharging/discharging cycle is 3 minutes).

Calculate a rated wattage of the external precharge/discharge resistor to be connected to the outside in accordance with the following formula depending on the total capacitance of all the capacitors including the built-in capacitor.

Rated wattage [W] = 17000 x C[F]
But, serge resistivity of J[J] = 28000 x C[F] must be provided.

When an external precharge/discharge resistor is connected, change the set value of the following parameters, if necessary.

- Precharge/Discharge Time (F.014)
- Wattage of Precharge/Discharge Resistor (F.015)

Table 4.8
Maximum Applicable Capacitance of Capacitor and Minimum Resistance Value

	8720MC-RPS190 Unit
Capacity of built-in Capacitor	7600µF
Built-in Resistor (Resistance Value/Wattage)	25000µF (10 ohm/400W)
External Resistor (Minimum Resistance Value), Connect to PR1 and PR2	165000µF (10 ohm)
External Circuit (Minimum Resistance Value), Refer to figure 4.10	495000µF (1.5 ohm)

External resistor case

Most applications are successfully integrated using the internal precharge resistor provided in the 8720MC-RPS Regenerative Power Supply. For instances where there is a large amount of load capacitance, caused by connecting several 8720MC drives to a single 8720MC-RPS Regenerative Power Supply, an external precharge resistor may be required. To determine the total capacitance C[F] add the capacitance for the applicable RPS190 unit, as determined from row 1 of Table 4.5, to the sum of the drive capacitance as determined by the drive specifications in Chapter 2 of the 8720MC-RPS User Manual, Publication 8720-UM-001-B-US-P FEB 2001. In the case of the RPS190 if the total capacitance is above 25,000µf, but less than 165,000µf an external precharge resistor connected to PR1 and PR2 is required. Table 4.8 provides the minimum resistance value for the external resistor od 10 ohms. The wattage is determined by the equation presented above. Connect the external precharge resistor to terminals PR1 and PR2


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

on the terminal block TB2. Terminal PR3 should be left open. See Chapter 2, Figure 2.2 "Terminals Blocks on the Main Circuit". The Precharge/Discharge Time (F.014) may require a larger value to accommodate the increased precharge time. The Wattage of Precharge/Discharge Resistor (F.015) should also be increased to the external precharge resistor wattage.

External circuit case

In the case of the RPS190 if the total capacitance is above 165,000µf but less than 495,000µf an external precharge resistor connected as shown in Figure 4.10 must be provided. Table 4.8 provides the minimum resistance value for the external precharge resistor, 1.5 ohms in the case of the RPS190. The wattage [W] is determined by the equation presented above.

Figure 4.10
Example of Wiring when Precharge/Discharge Circuit of the 8720MC-RPS190 is configured with an External Circuit

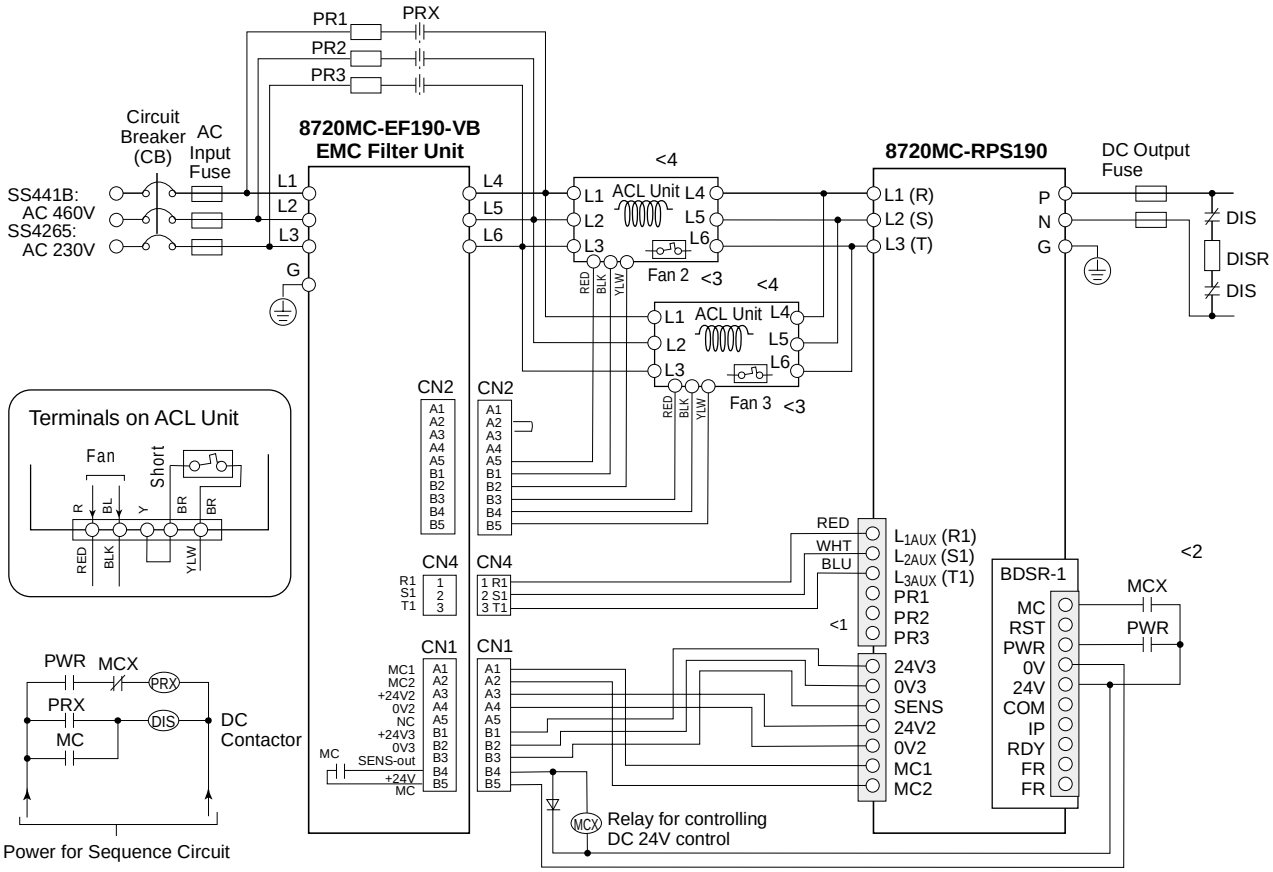

1> Remove the jumper between PR2 and PR3.
2> Use a relay with contact of which minimum applicable load is 5 mA and below.
3> Refer to the figure at the lower left corner of this figure indicating the terminals on the ACL unit. When the fan inside the ACL unit is connected with an external power supply, do not fail to connect with the power supply designated by NEC Class 2 (Power supply limited to 100VA and below and 8A and below even in case of Error). Avoid the high voltage portion and the high temperature portion of the ACL unit when wiring the fan inside the ACL unit.
4> Use the ACL unit in maximum surrounding air temperature of 55 degree C (131 degree F) and below.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

If a totally external resistor network is used as shown in figure 4.10, the calculated wattage, [W] = 17,000 x C farads, is divided in half to size the precharge and discharge resistors.
Parameter F.015 should be set to the sum of the wattage for both resistors.

Installing Circuit Breaker - 8720MC-RPS190

To protect AC input power, install a circuit breaker with supplemental contact (CB) in the AC input power line. Refer to Figures 4.6 to 4.8 for wiring. The rated ampacities of the circuit breakers are as follows:

For Model 8720MC-RPS190BM and 8720MC-RPS190BS units: 350 Amps

The following are the recommended circuit breakers with supplemental contact.

For Model 8720MC-RPS190BM and 8720MC-RPS190BS units:

Fuji Electric - BU-KSB3350LW
Westinghouse - KDB3350
or equivalent

Because supplemental contact of this circuit breaker does not conform with load of 5mA, relay with less than 5mA should be used for connection when a supplemental contact is connected with sequence input PWR.

Be sure to provide required quantity of circuit breakers with supplemental contact (CB) for all units connected in parallel (see Figures 4.6 and 4.7).

Installing ACL Unit (Reactor Assembly) - 8720MC-RPS190



ATTENTION: During operation of the 8720MC-RPS Regenerative Power Supply, the reactor is at a high temperature. Do not touch the reactor during operation or immediately after the unit has been turned OFF. Failure to observe this precaution could result in bodily injury.



ATTENTION: During operation of the 8720MC-RPS Regenerative Power Supply, the reactor operates at a high temperature. Install the reactor in a location where high temperature does not present a problem.

The 8720MC-RPS Regenerative Power Supply boosts up and controls the DC bus voltage, by utilizing the magnetic characteristics of reactor. Therefore, reactors are required for the 8720MC-RPS Regenerative Power Supply.

Install a single-phase type reactor to each of L_1-phase, L_2-phase and L_3-phase. Do not use three-phase AC reactors, since this will cause unwanted coupling between the phases.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The following inductance of the reactor must be maintained in a high frequency as 10 to 20 kHz. Note that use of a reactor for commercial power supply may not maintain the required inductance, resulting in increased heat generation or saturation due to iron loss.

When multiple units are connected in parallel, a current unbalance between the units is produced due to vibration of reactor inductance. To make the current difference between the connected units as small as possible, use reactors having a vibration of no more than +/-2.5%.

The following are the designated reactors. These reactors are integrated for three phases consisting of three single phase reactors. Depending on the motor capacity, single unit of the designated reactor is used or two units of reactors connected in parallel are used as shown below. When selected reactors are installed, set their capacity to the parameter F.013.

One (1) Model 8720MC-LR10-100B (800 micro-henry):
For Model 8720MC-RPS190BM and 8720MC-RPS190BS that are used at 100 Amps or less (capacity of applicable motor is 65 kW or less)

Two (2) Model 8720MC-LR10-100B (800 micro-henry) connected in parallel:
For Model 8720MC-RPS190BM and 8720MC-RPS190BS that are used at 190 Amps or less (capacity of applicable motor is 125 kW or less)

Cooling fan and thermoswitch are mounted on the ACL unit. The thermo switch opens at about 150 degree C (302 degree F) and produces a reactor fan fault signal.

The reactor should operate in an ambient temperature of 50 degree C (122 degree F) or lower. If it is not avoidable to use a reactor above 50 degree C (122 degree F), decrease current 1% for every 1 degree C above 50 degree C.

Select temperature rating of 105 degree C (221 degree F) or higher for the wire to connect Model 8720MC-LR10-100B reactors.

Installing Fuses - 8720MC-RPS190

Install a fuse on the AC incoming line. The following is the recommended fuse for the single unit.

FERRAZ SHAWMUT or equivalent (Class J Fuse)

Rated current of the fuse for Model 8720MC-RPS190 is 350 Amps.

Also, as a measure against ground fault, install a fuse to protect the DC bus. The recommended fuses are as follows:

For Model 8720MC-RPS190BM and 8720MC-RPS190BS units: FERRAZ SHAWMUT, A130URD71LLI0350

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Installing 8720MC-EF190-VB EMC Filter Unit

The 8720MC-EF190-VB EMC filter unit contains line filter, magnetic contactor, varistor and harmonic filter, and are used for Model 8720MC-RPS190BM and 8720MC-RPS190BS units. Because the 8720MC-EF190-VB unit is completely assembled, wiring can be simplified in combination with Model 8720MC-LR10-100B reactor, and also the space to be required can be reduced considerably.

The recommended wire sizes for proper wiring to the main power terminals of 8720MC-EF190 EMC filter unit are shown in Table 4.9.

Table 4.9
Recommended Power Wire Sizes for the 8720MC-EF190-VB Unit

Terminal Name	Symbol	Screw Size	Wire Size	Attached Lug [1]
Main Terminals (Input)	L1, L2, L3	M8	Larger than 38 mm^2 - 2 in parallel (AWG #2 - 2 in parallel)	JST, R38-8 (M8) (6 Pieces)
Main Terminals (Output)	L4, L5, L6	M10	Larger than 38 mm^2 - 2 in parallel (AWG #2 - 2 in parallel)	JST, R38-10 (M10) (6 Pieces)
Grounding Terminal (Earth)	G	M8	Larger than 38 mm^2 (AWG #2)	JST, R38-8 (M8) (1 Piece)

[1] UL-listed wires must be lugged by attached lugs.
JST is Japan Solderless Terminal Co.

For wiring the 8720MC-EF190-VB unit, refer to Figures 4.6 to 4.8.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Installing DC Bus Power Output Wiring - All RPS units

ATTENTION: When connecting the DC bus to plural number of external load equipment, the user is responsible for installing fuses to protect the DC bus from shorting, if no fuse is provided in the load equipment. Failure to observe this precaution could result in damage to, or destruction of, the equipment

ATTENTION: Exercise extreme caution for polarity of wiring when wiring DC bus. Failure to observe this precaution could result in damage to, or destruction of, the 8720MC-RPS Regenerative Power Supply and the connected load equipment.

The DC bus output terminals on the main power terminal block (TB1) or the DC bus terminal bars of the 8720MC-RPS Regenerative Power Supply are used for connecting to load equipment such as inverter. Use the recommended wire size shown in Tables 4.1 to 4.3 for wiring between the 8720MC-RPS Regenerative Power Supply and the load equipment. Connect the terminal P on the main power terminal block (TB1) or the terminal bar P of the 8720MC-RPS Regenerative Power Supply to the positive (plus) DC bus terminal of the load equipment, and the terminal N on the terminal block TB1 or the terminal bar N to the negative (minus) DC bus terminal of the load equipment. Do not connect the positive (plus) side with the wiring of the negative (minus) side. Such miswiring will damage the 8720MC-RPS Regenerative Power Supply and the connected load equipment.

When multiple drives are connected to the 8720MC-RPS Regenerative Power Supply, always install input fuses before each drive to protect the wiring and the drive. Select adequate fuse(s) for the drives.

Grounding the 8720MC-RPS Regenerative Power Supply

Connect an adequate equipment grounding conductor to ground terminal of load equipment, remote control station (if used), input transformer (if used), and ground terminal of the 8720MC-RPS Regenerative Power Supply. Run earth conductor to earth ground after confirming that the conductors are unbroken.

This system is operated by switching DC bus line from + (plus) bus voltage to - (minus) bus voltage viewing from the ground for the purpose of controlling. For this reason, plus and minus voltages are always added on a circuit if equipment has a circuit between the bus line of equipment to be connected and the ground (earth). Even if there exists no direct circuit between the bus line and the ground, pulse current will flow through the stray capacity of the equipment by bus voltage switching. When 8720MC-RPS and equipment to be connected to 8720MC-RPS are not securely grounded, this current will flow through the circuit and may cause malfunction of them. If grounding is not made properly, it will cause the malfunction of the other system on the same line.

Install an insulating transformer to the input line of the 8720MC-RPS if unbalanced current flows and earth leakage breaker malfunctions due to the power supply conditions.

For grounding, use the wire size of grounding terminal as shown in Table 4.1 through 4.3.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring To Comply with EMC

To declare the conformity with the requirements for CE Mark, 8720MC-RPS Regenerative Power Supply must comply with both EMC directive and low voltage directive. This section describes notes on wiring to comply with EMC directive.

Important: 8720MC-RPS Regenerative Power Supply itself is not subject to Machine directive. When 8720MC-RPS Regenerative Power Supply is combined with other equipment, control cabinet and machine, it is needed to declare the compliance with Machine directive. Noise level will vary depending on the installation and wiring of 8720MC-RPS Regenerative Power Supply, other equipment and control cabinet. It has been already confirmed that 8720MC-RPS Regenerative Power Supply complies with EMC standards only when 8720MC-RPS Regenerative Power Supply is composed of the component parts designated by Reliance Electric. In order for users to declare the conformity with the requirements for CE Mark, do not fail to confirm that the unit complies with EMC standards on the final conditions after completion of installation and wiring.

The following show with which EMC standards each of the 8720MC-RPS Regenerative Power Supply complies.

8720MC-RPS027	EN61800-3:1996 including Amendment A11:2000
8720MC-RPS065	EN55011:1991 Group 1, Class A, and Amendment A1:1999 EN50082-2:1995
8720MC-RPS190	EN61800-3:1996 including Amendment A11:2000

Wiring must be made taking into consideration of the following countermeasures since there is the possibility that input and output lines of the 8720MC-RPS Regenerative Power Supply may yield strong noise.

1. Use a control cabinet made of metal for installing the 8720MC-RPS Regenerative Power Supply (It has been confirmed that this unit complies with EMC standards when installed inside the control cabinet).
2. Install a line filter designated by Reliance Electric to the power input line of the 8720MC-RPS units. Wiring to the line filter must be as short as possible.
3. Because current will leak to the earth when a line filter is installed, connection to the earth must be secured. Due to leaked current, the earth leakage breaker may malfunction. Select a proper breaker complying with leaked current (Rated current 100 to 500mA and operating time within 0.1 to 2 seconds).
4. The control cabinet must be securely grounded. Wiring to be taken into grounding terminal of the control cabinet must be as thick and short as possible.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5. The input and output line of the 8720MC-RPS units must be separated from the output line of the inverter unit as far as possible.

6. Wiring of the control signal must be terminated within the control cabinet. Should the control cable be needed to extend out of the control cabinet, it is recommended to use shielded cables. When ferrite cores are used, install them possibly to the side of the 8720MC-RPS units. The following are the ferrite cores for the control cables recommended.

   ZCAT2032-0930 (Inside diameter 9 +/- 1mm) : TDK

   ZCAT2035-1330 (Inside diameter 13 +/- 1mm) : TDK


7. For notes on wiring to the other equipment and motors to be connected with the 8720MC-RPS, refer to the manuals of relevant equipment.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Sequence Signal Wiring

Figure 4.11 shows a typical connection of sequence control signals.

Figure 4.11
Typical Connection of Sequence Control Signals

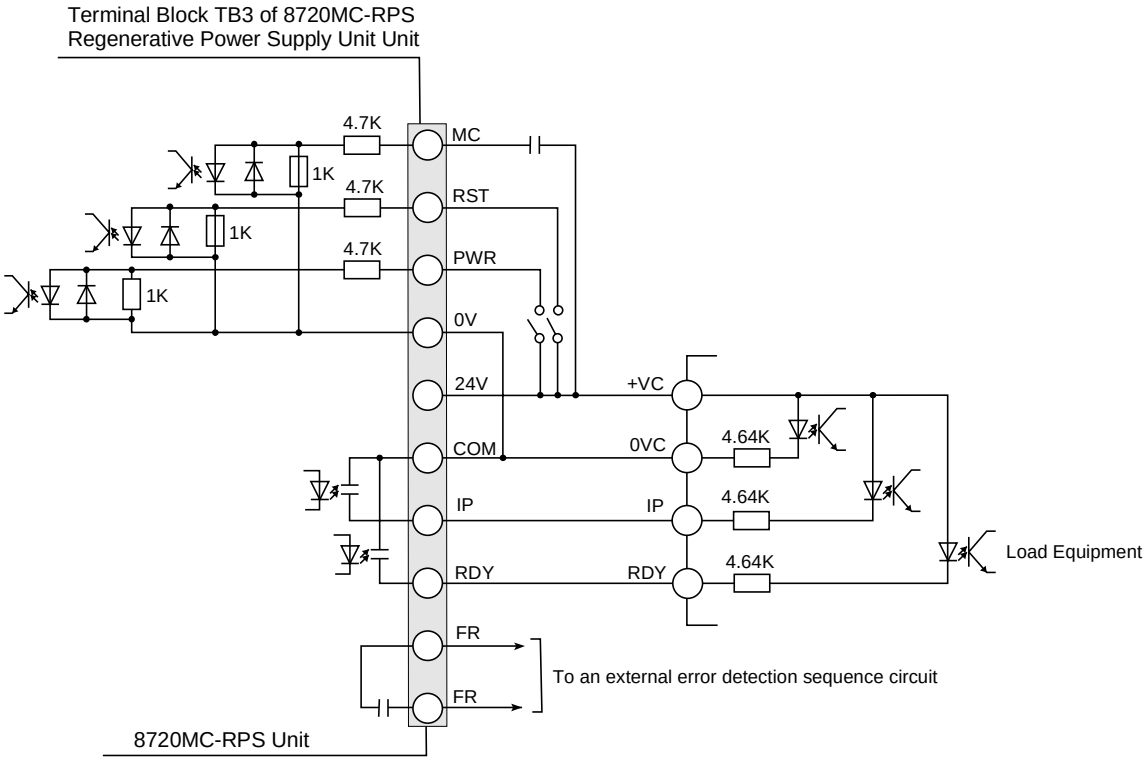

Sequence Signal Wiring

Verify the following when installing sequence signal wiring:

- Twisted pair wires of 0.2 to 0.5 mm^2 should be used for the signal line.
- Verify that the sequence signal wiring is separated from the power wiring (main power supply wiring, control power wiring and DC bus power wiring). Malfunction of the 8720MC-RPS Regenerative Power Supply is possible if the control wires are separated from the AC and DC power wires.
- Use a separate duct for the sequence signal wiring. It is recommended to use a dedicated duct for the sequence signal wiring.
- Do not route the sequence signal wiring near any equipment which is producing electromagnetic interference.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Operation Timing of Sequence Control Signals

Figures 4.12 through 4.17 show timing of various sequence control signal operations.

Figure 4.12
Sequence Operation of Precharging


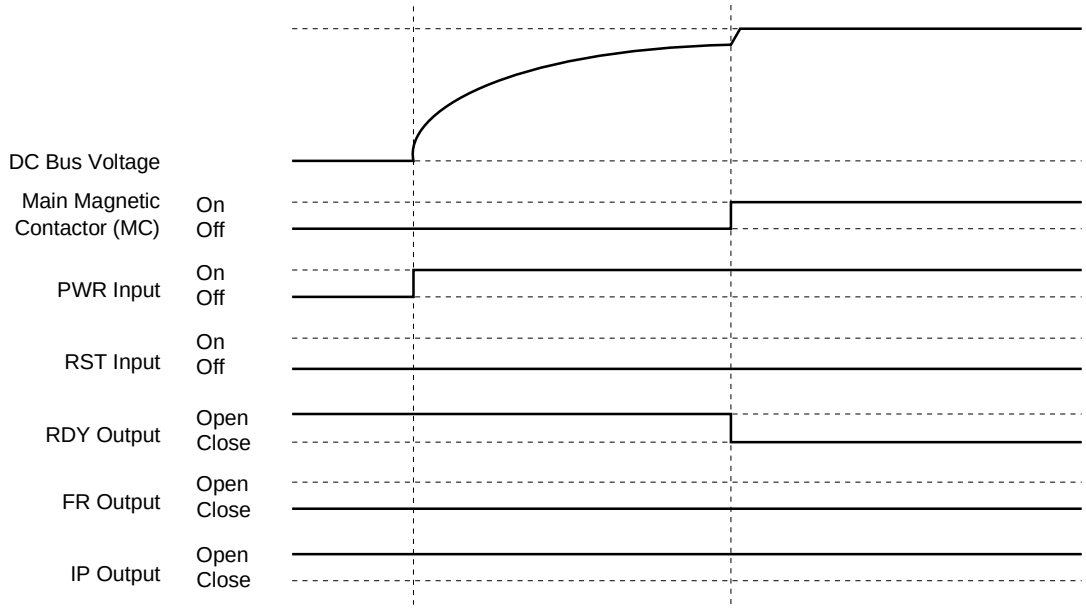


Figure 4.13
Sequence Operation of Discharging

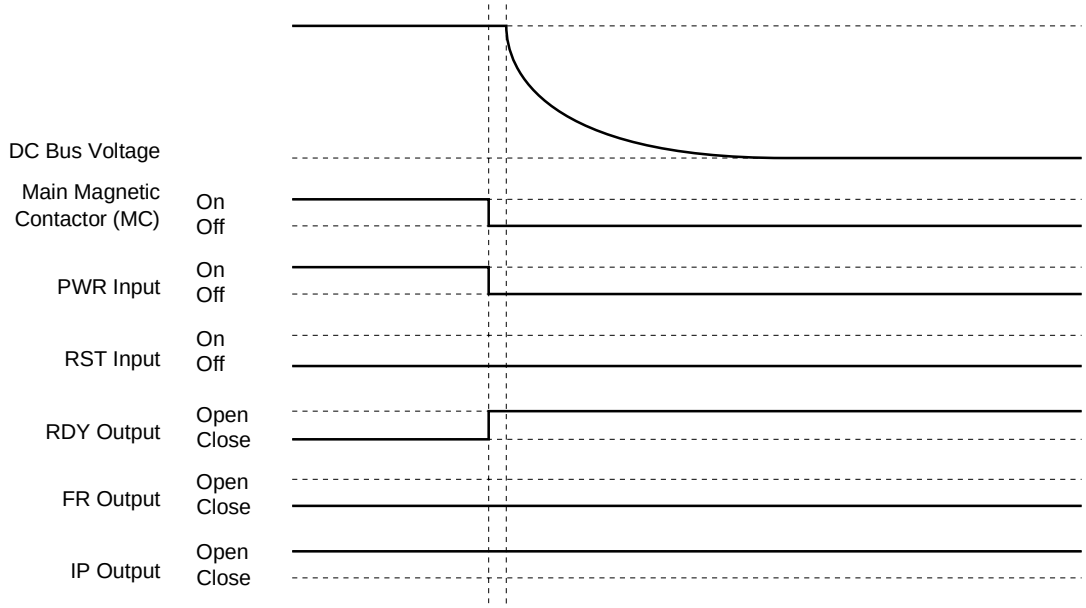

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 4.14
Sequence Operation of Error Detection


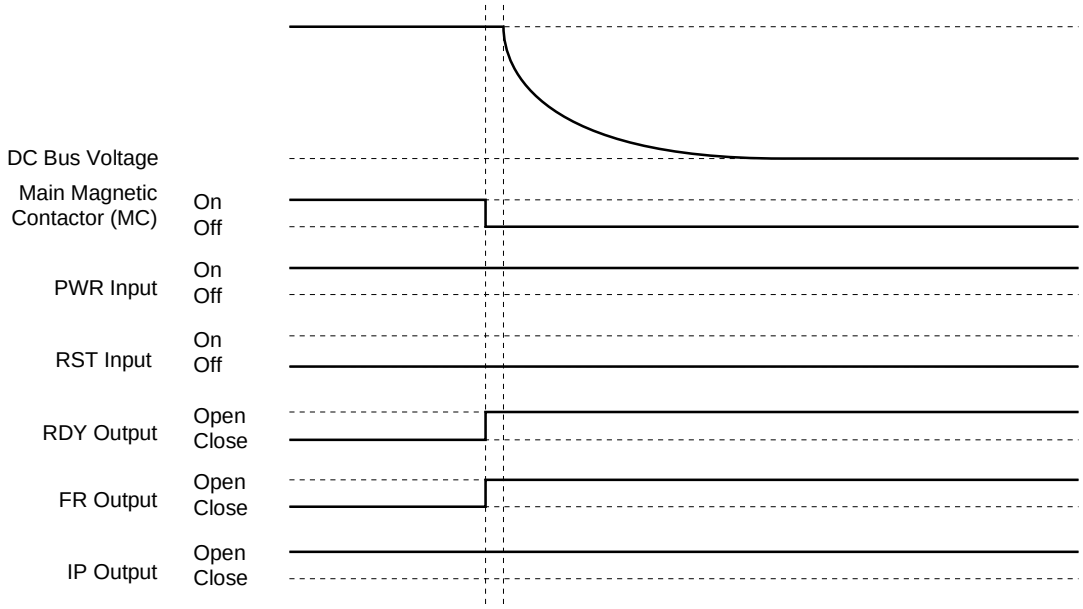


Figure 4.15
Sequence Operation of Resetting Error

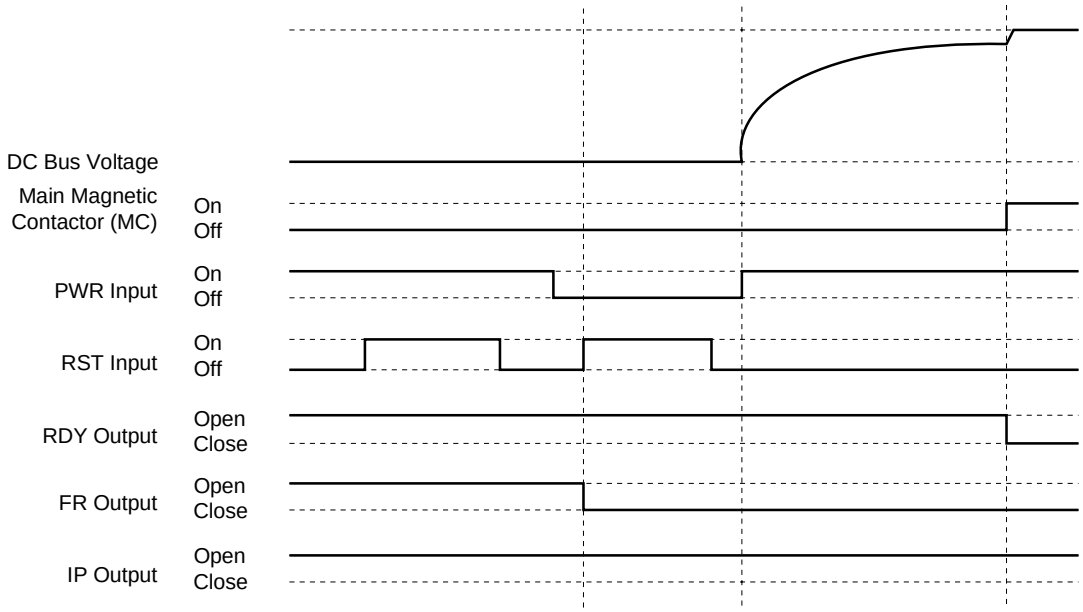

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 4.16
Sequence Operation of Detecting Instantaneous Power Loss
(When Main Magnetic Contactor is not Turned OFF)


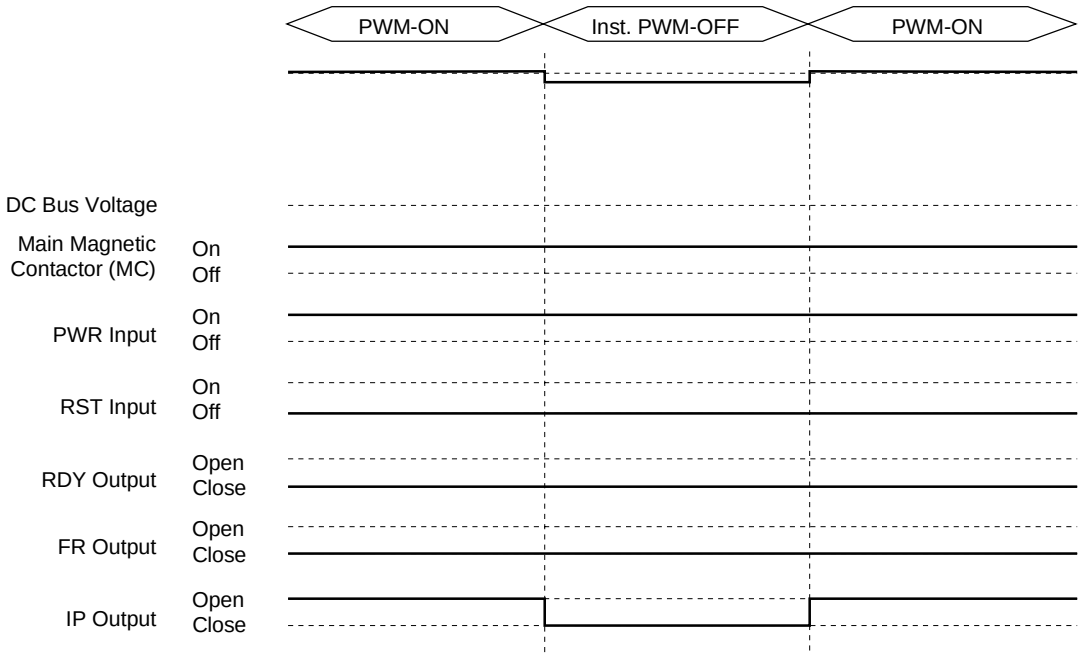


Figure 4.17
Sequence Operation of Detecting Instantaneous Power Loss
(When Main Magnetic Contactor is Turned OFF)

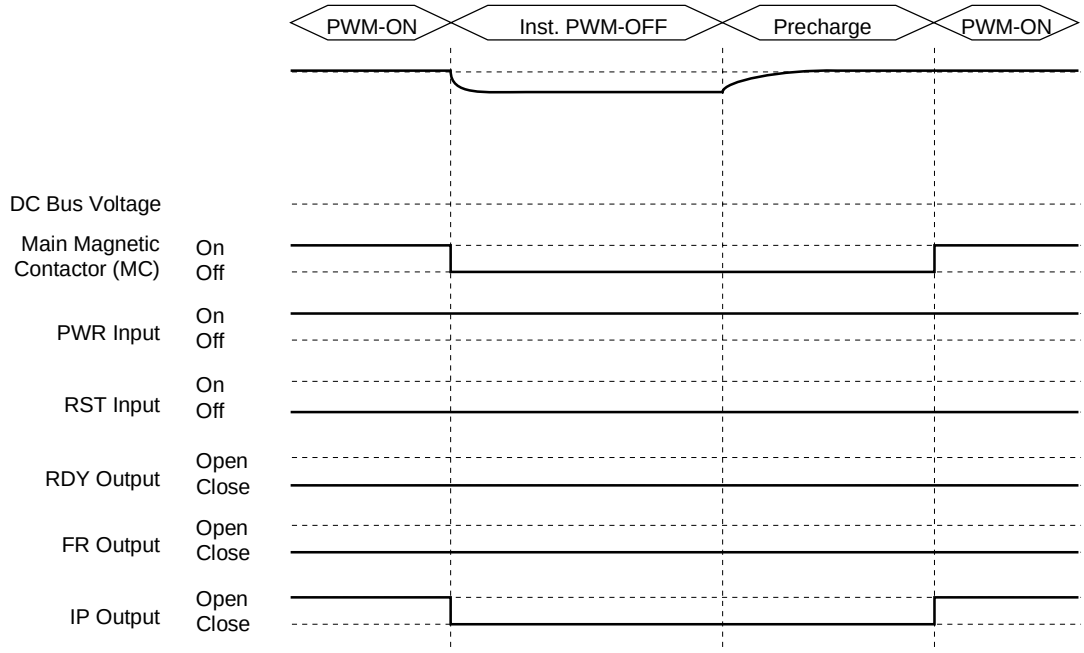

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Installing Ribbon Cables

Ribbon cables are used for connecting:


- Between Regulator Board (BDSR) and Power Interface Board (PIFS),
- Between Power Interface Boards (PIFS).

For a single unit or for master unit with multiple units connected in parallel, the Regulator Board is connected to the Power Interface Board with a ribbon cable. Also, ribbon cable is used for connection between the Power Interface Boards of the master unit and the slave unit, and between the Power Interface Boards of the slave units.

Figure 4.18 shows typical connection with ribbon cables.

When multiple units are connected in parallel, the master unit must be installed at the rightmost end viewed from the front side as shown in Figure 4.18.

Figure 4.18
Wiring with Ribbon Cables

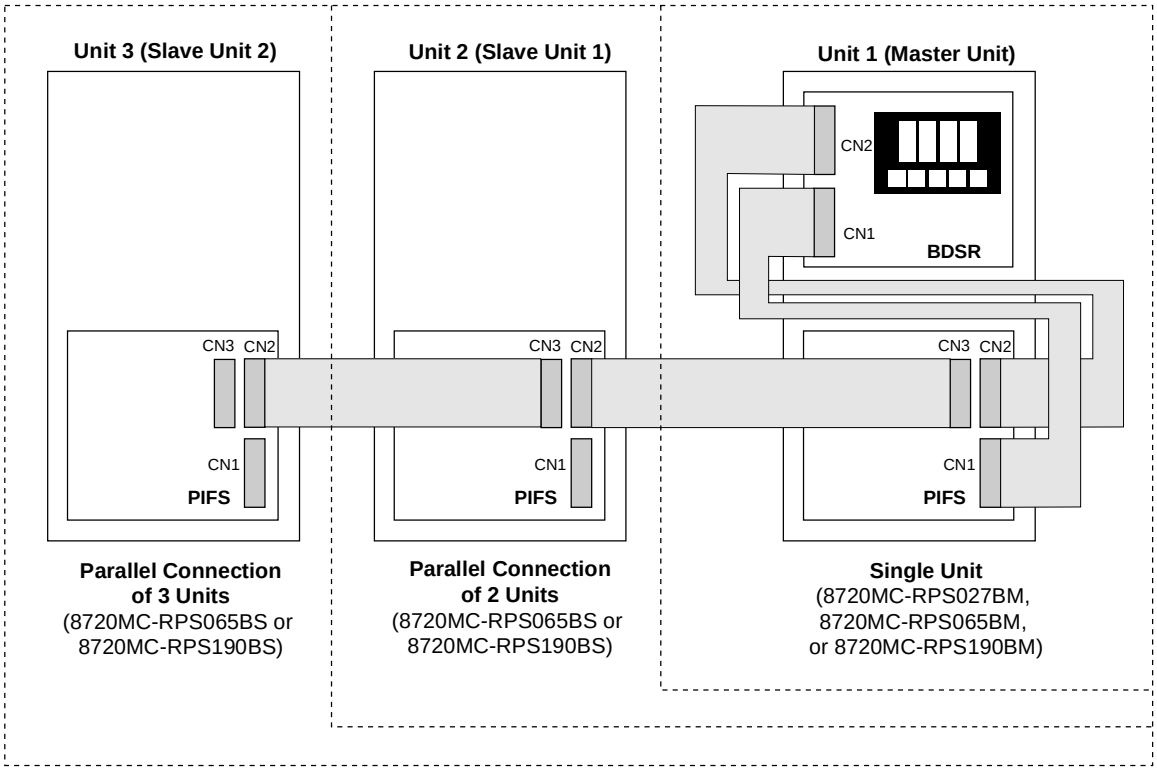

Note: In case two or three units of 8720MC-RPS Regenerative Power Supply Unit are installed in parallel, the master unit must be installed at the rightmost end as shown in the above.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Notes on Wiring

8720MC-RPS units comply with the requirements of CE Mark and a Declaration of Conformity was issued for these units. Insert the specified line filter into the power supply line if these units are used as the units conforming to the requirements of CE Mark.

Caution must be paid to the following when performing wiring:

- Because instantaneous large power is required at overload, provide sufficient AC power supply facility having a smaller voltage fluctuation to prevent the input voltage from dropping below the minimum specified requirement.
- The 8720MC-RPS Regenerative Power Supply does not contain a circuit breaker. Install an adequate circuit breaker on the AC input power line (see Sections "Installing Circuit Breaker" in this chapter). When an earth leakage breaker is used, select a breaker equipped with harmonic suppressor.
- The phases of the main terminals L_1, L_2 and L_3 must be same as the phases of the control power terminals L_{1AUX}, L_{2AUX} and L_{3AUX}. Failure to keep the phase relationship the same will cause malfunction of the 8720MC-RPS Regenerative Power Supply.
- Completely separate the sequence control signal wiring from the power wiring, and do not put the both into a same duct. Also, do not route the both wires in parallel.
- To prevent noise problem, peripherals of the 8720MC-RPS Regenerative Power Supply such as magnetic contactors and relays must be provided with adequate surge suppressor, such as CR filter for AC circuit and inverse-parallel diodes for DC operation circuit.
- Install a varistor for absorbing surge between AC input wires and a specified harmonic filter for reducing higher order harmonics generated by fast switching.
- When wiring is finished, check that all the wiring has been connected correctly before supplying power.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

End of Chapter

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Start and Adjustment

This chapter provides instructions on how to perform a final check before power is applied to the 8720MC-RPS Regenerative Power Supply, how to power up the unit and how to operate the unit.

ATTENTION: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should install, adjust, operate, or service this equipment. Read and understand this manual in its entirety before proceeding. Failure to observe this precaution could result in destruction of the equipment, severe bodily injury or loss of life.

ATTENTION: DC bus capacitors retain hazardous voltages after input power has been disconnected. After disconnecting power, wait for a while for the DC bus capacitors to discharge and then check the voltage with a voltmeter to ensure the DC bus capacitors are discharged before touching any internal components. Failure to observe this precaution could result in severe bodily injury or loss of life.

ATTENTION: Be sure that the input disconnect (breaker) is in the correct position either ON or OFF depending on the work to be performed. Failure to observe this precaution could result in severe bodily injury or loss of life.

ATTENTION: A back up technician must be in line of sight when this work is performed, to assist in case of emergency. Failure to observe this precaution could result in severe bodily injury or loss of life.

Checking before Powering up the 8720MC-RPS Regenerative Power Supply

This section describes the procedure to perform a final check before powering up the 8720MC-RPS Regenerative Power Supply.

Verifying the Installation

Confirm the following points of the installation before powering up the 8720MC-RPS Regenerative Power Supply:

- Check that no foreign materials such as wire fragments and screws are left inside the unit.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- Verify that there is no debris such as metal shavings around the unit.
- Check that there is adequate clearance around the unit.

Verifying the Rating of the 8720MC-RPS Regenerative Power Supply

Before powering up the 8720MC-RPS Regenerative Power Supply, check the following:

- Check the unit's nameplate and confirm that the installed 8720MC-RPS Regenerative Power Supply has an enough rating for the load.
- Check that the incoming power is rated correctly for the rating of the 8720MC-RPS Regenerative Power Supply.
- Check that the disconnect (breaker) and the fuses provided for the branch circuit protection are rated correctly.
- Check that the AC reactor is rated correctly.

Verifying Wiring

Check the following before powering up the 8720MC-RPS Regenerative Power Supply:

- Verify that the 8720MC-RPS Regenerative Power Supply was installed rigidly.
- Check that there is no miswiring.
- Check that no terminals or connection are loose.
- Verify that there are no short circuits with regard to the terminals L_1, L_2, L_3, P, N and G. Also verify that there are no ground faults with regard to these terminals except terminal G.
- Check that the terminals L_{1AUX}, L_{2AUX} and L_{3AUX} are not shorted.
- Verify that the electronic size is within the specification range and the wire is tightened correctly.
- Verify that the operations of the sequence control signals are normal.

Powering up the 8720MC-RPS Regenerative Power Supply

Use the following procedure to turn power to the 8720MC-RPS Regenerative Power Supply ON:

Step 1. Turn the RUN sequence signal OFF.

Step 2. Turn the input power breaker to the ON position.

Step 3. Apply power to the 8720MC-RPS Regenerative Power Supply.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Step 4. Verify that the unit powers up properly without incident such as abnormal sound or nasty smell.

Step 5. Verify that there is no input power voltage drop or short circuit.

Step 6. Verify that the rating of the 8720MC-RPS Regenerative Power Supply matches the parameter setting of the Unit Selection (F.001).

For Step 6, more information will be given in the section "Operating the 8720MC-RPS Regenerative Power Supply" in this Chapter.

Operating the 8720MC-RPS Regenerative Power Supply

This section describes the following basic start-up and operation procedure:

- Powering up
- Precharging
- Verifying the parameter of the Unit Selection
- Checking the DC bus voltage
- Changing the DC bus voltage reference value
- Discharging
- Disconnecting power

This start-up procedure describes how to set the minimum set of parameters. Your application may require programming other parameters in addition to those described in this start-up procedure. Refer to Chapter 8 for description of all parameters to verify whether you need to program any additional parameters as well.

In this manual, you will see references to parameters names and the numbers that identify them for the 8720MC-RPS Regenerative Power Supply. This manual uses the same format that will be shown on the display to refer to parameters:

U.nnn
F.nnn


where: nnn is a number
U designates User parameters
F designates Factory parameters.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Step 1. Power Up the 8720MC-RPS Regenerative Power Supply

This step verifies that the 8720MC-RPS Regenerative Power Supply powers up and passes the power-up self-diagnostics. After the unit passes the diagnostics, the operation panel automatically enters monitor mode, with input current displayed.

Step 1.1 Turn power ON.

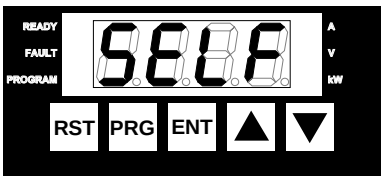

The initial display shows SELF, with all six status LEDs ON, indicating the unit is performing power-up self-diagnostics.

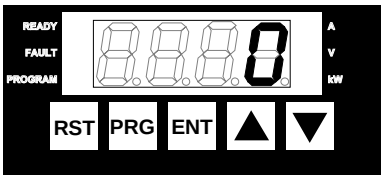


After the diagnostics are complete (approx. 0.5 seconds), the operation panel is in monitor mode. The display shows input current value, and the "A" status LED turns ON. This display shows that the input current is 0 Amp.

Step 2. Verifying the Parameter of the Unit Selection


In this step, you will verify that the unit rating matches the parameter setting of the Unit Selection.

Step 2.1 Press the PRG key.

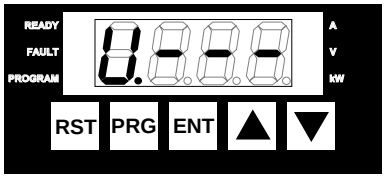


The operation panel changes to program mode and the "PROGRAM" status LED turns ON. The display shows "U.---" indicating you can access the User parameters.

Step 2.2 Press the ▼ key.

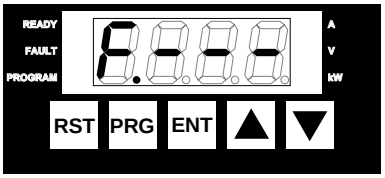

The display shows "F.---" indicating that the Factory parameters can be accessed.


Step 2.3 Press the ENT key.

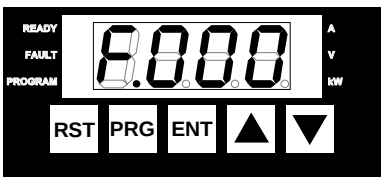

The display shows the first Factory parameter (F.000).


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Step 2.4 Press the ▼ key.

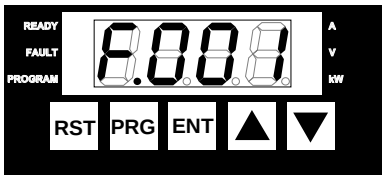


The display indicates the second Factory parameter.

Step 2.5 Press the ENT key.

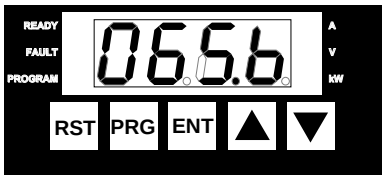


The display shows that 37 KW (65 Amps.) unit for 460 V is selected. If the display does not match the actual unit rating, first set the password (F.000), and then set again the Unit Selection conforming to the unit rating (refer to the section "Factory Parameters" in Chapter 7).

Step 2.6 Press the PRG key.

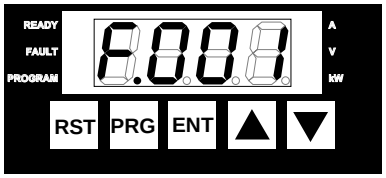


The display indicates the second Factory parameter (F.001).

Step 2.7 Press the PRG key.

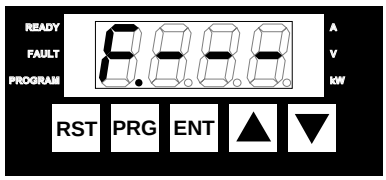

The display shows "F.---" indicating that you can access the Factory parameters.

Step 2.8 Press the PRG key.

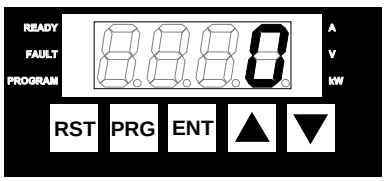


The operation panel returns to monitor mode again. The display indicates the input current and the "A" status LED turns ON. This display shows the input current is 0 Amp.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Step 3. Precharging

In this step, you will turn the RUN sequence control signal ON. When the RUN sequence signal is enabled, the 8720MC-RPS Regenerative Power Supply will start precharge operation. When precharge operation is completed, the main magnetic contactor will be turned ON and the PWM switching will begin.

Step 3.1 Turn the RUN sequence signal ON.

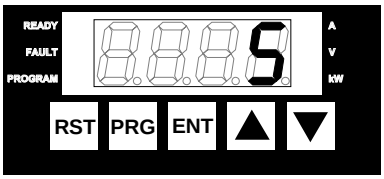


The precharge operation starts. When the precharge operation is completed, the main magnetic contactor is turned ON and the PWM switching starts. When the precharge operation is finished, the DC bus voltage goes up to the reference value. This displays the input current is 5 Amps.

Step 4. Verifying DC Bus Voltage


When PWM switching begins and controlling the DC bus voltage starts, the DC bus voltage will be maintained at the reference value (U.000). Then, you will verify that the DC bus voltage value is same as the reference value.

Step 4.1 Press the ▼ key.

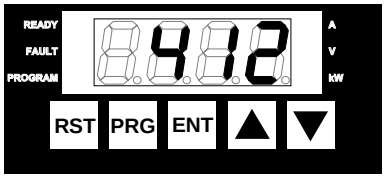

The display shows AC input power voltage, with the "V" status LED turned ON. This display indicates that the input power voltage is 412 V.

Step 4.2 Press the ▼ key.

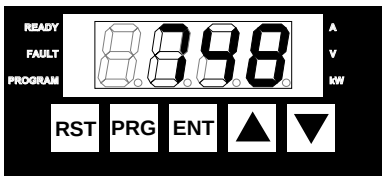


The display indicates the DC bus voltage and the "V" status LED turns ON. This display shows that the DC bus voltage is 748 V.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Step 5. Changing the DC Bus Voltage Reference Value


The default value of the DC Bus Voltage Reference (U.000) is 750 V. This procedure assumes that the DC Bus Voltage Reference value is to be changed to 650 V. In the actual procedure, use the value of your application.

Step 5.1 Press the PRG key.

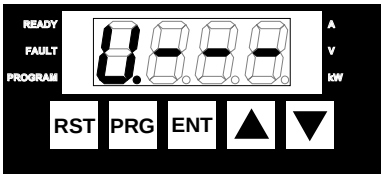


The operation panel is now in program mode, and the "PROGRAM" status LED is ON. The display shows "U.---" indicating that the User parameters can be accessed.

Step 5.2 Press the ENT key.

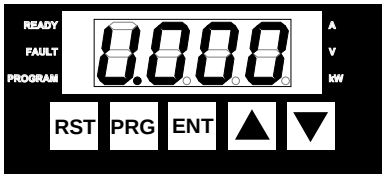


The display shows the first User parameter, U.000.

Step 5.3 Press the ENT key.

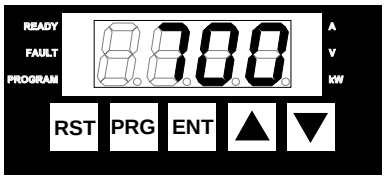

The display indicates the value of the DC bus Voltage Reference (U.000). The default value is 700 V.


Step 5.4 Press the ▼ key until the display shows 650.

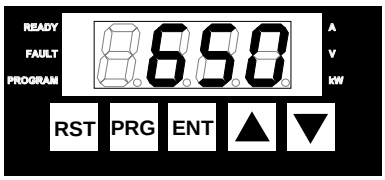

Pressing the ▼ key decrements the value on the display. Holding down the ▼ key will increase the scroll speed.

When the display shows 650, stop pressing the ▼ key. If you desire to increase the set value, press the ▲ key.


Step 5.5 Press the ENT key.

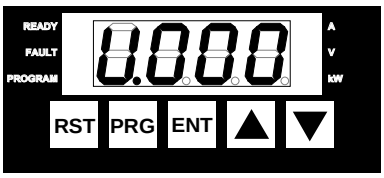

The set value is decided and is written to the EEPROM. After pressing the ENT key, the display returns to the first User parameter (U.000), indicating that the set value has been decided.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Step 5.6 Press the PRG key.

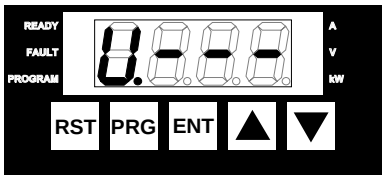


The display shows "U.---" indicating that the User parameters can be accessed.

Step 5.7 Press the PRG key.

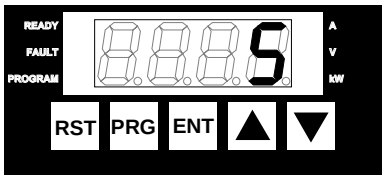


The operation panel returns to monitor mode, and the display indicates the input current, with the "A" status LED turned ON. This display shows that the input current is 5 Amps.

Step 5.8 Press the ▼ key.

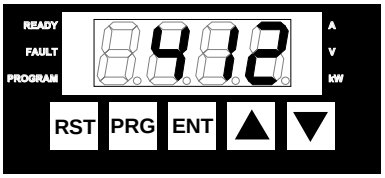

The display shows the AC input power voltage and the "V" status LED turns ON. This display shows that the input power voltage is 412 V.

Step 5.9 Press the ▼ key.

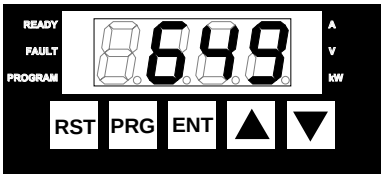


The display indicates the DC bus voltage and the "V" status LED turns ON. Verify that the DC bus voltage is almost same as the reference value (U.000).

Step 6. Discharging

In this step, you will turn the RUN sequence signal OFF. When the RUN sequence signal is turned OFF, the 8720MC-RPS Regenerative Power Supply starts discharge operation, stops the PWM switching and turns magnetic contactor OFF.

Step 6.1 Turn the RUN sequence control signal OFF.

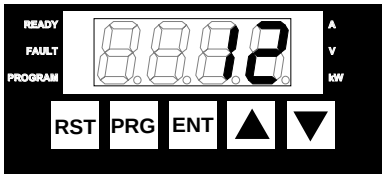


The discharge operation starts, and the PWM switching stops. Turn the main magnetic contactor OFF. When the discharge operation is completed, the DC bus voltage drops to 50 V or lower. The display shows the DC bus voltage is 12 V.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Step 7. Disconnecting Power to the 8720MC-RPS Regenerative Power Supply

As the final step, disconnect power to the 8720MC-RPS Regenerative Power Supply.

Step 7.1 Disconnect input power.

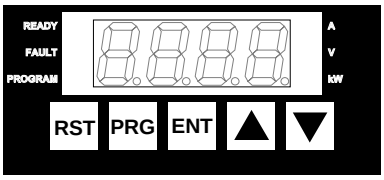

Power to the Regulator Board is turned OFF, and the display and the LEDs are turned OFF. But when you desire to touch the internal portion of the 8720MC-RPS Regenerative Power Supply, pay extreme caution to the DC bus voltage which might be retained.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

End of Chapter


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Operation Panel

This chapter describes the configuration of operation panel and the operation modes.

Configuration of the Operation Panel

The operation panel is used for setting parameters, monitoring operating conditions and resetting faults. The figure below shows the configuration of the operation panel and the names of the components.

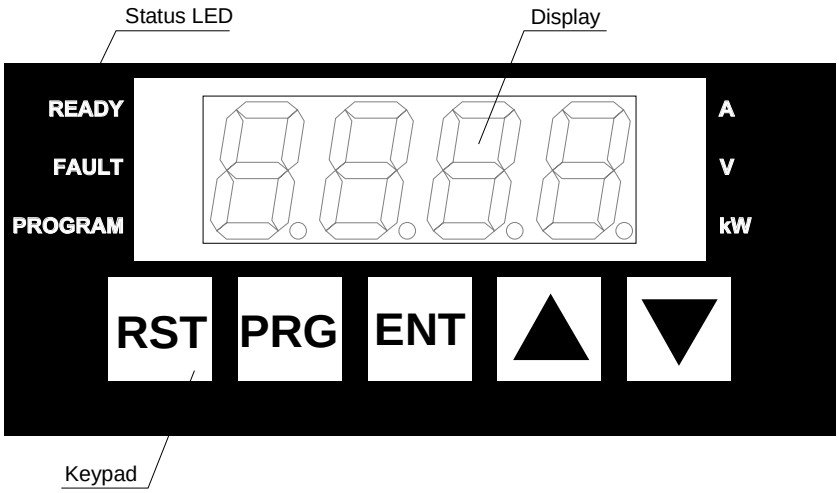

On the keypad of the operation panel, there are five push-button switches, to be used for selecting monitoring information, setting parameters and resetting faults.

The display on the operation panel consists of four seven-segment LEDs that display monitored values, parameter numbers, parameter values and error codes.

Six status LEDs on the operation panel are used to display the operation status and the units of the monitored values.

Operation Modes

The operation panel operates in the two modes:

1) Monitor mode
2) Program mode

In monitor mode, you can monitor various operating conditions including input current of the 8720MC-RPS Regenerative Power Supply, DC bus voltage, etc.

In program mode, you can view and change parameter values, and examine the error log.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Monitor Mode

Monitor mode is the operation mode to display operating conditions. The following data can be displayed in this mode:

- Input current *
- AC input power voltage
- DC bus voltage
- Power
- Load ratio.

* The displayed value of input current is only an approximate value and no accuracy can be guaranteed. If you need an accurate input current, measure it by using a dedicated measuring device.

To select a value to monitor, press the ▲ key or the ▼ key until the desired value is displayed. Pressing the ▲ key or the ▼ key will move you through the each of the displays.

The unit of the displayed value is shown by turning ON the status LEDs as follows:

- "A" : Shows the unit when the input current is displayed.
- "V" : Shows the unit when monitoring the AC input power voltage or the DC bus voltage.
- "KW" : Shows the unit when monitoring the power.
- Turning OFF all LEDs : Shows the unit when the load ratio is displayed.

In both cases of monitoring the AC input power voltage and the DC bus voltage, the "V" status LED is ON. You can judge which item is being monitored, by the display order. The unit of the load ratio is percent (%). But in this case, no status LED is ON.

In case of monitoring the power, the "KW" status LED is ON continuously when the operation is in power running, and the "KW" status LED flashes when the operation is regenerative.


In monitor mode, the "PROGRAM" status LED is turned OFF, indicating that the operation panel is not in program mode.

When any fault occurs, the operation panel cannot be changed to monitor mode.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The following figure shows an example of display in monitor mode.

The "PROGRAM" status LED will not turn ON.

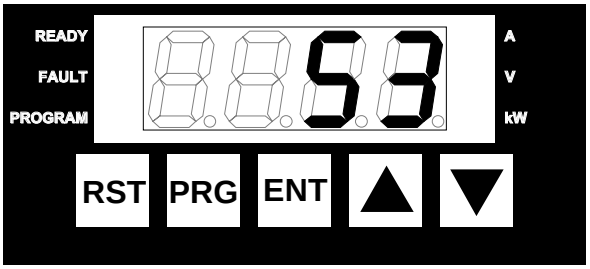

A status LED ("A", "V" or "KW") will turn ON, corresponding to the selected monitor display.

Program Mode


Program mode allows you to display and modify parameter values, and to display the error log. The following can be displayed in program mode:

- Types of parameters
- Parameter numbers
- Parameter values
- Selection of error log
- Error log number
- Error codes.

In program mode, the "PROGRAM" status LED is ON, indicating that the operation panel is in program mode.

The figure below shows an example of display in program mode.

The "PROGRAM" status LED will turn ON.

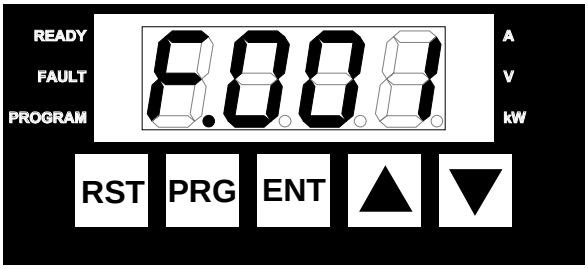

Display


The display portion of the operation panel is a four-character, seven-segment LED. When the unit is powered up, SELF is displayed as the 8720MC-RPS Regenerative Power Supply performs the power-up self-diagnostics. When the diagnostics are completed, the display indicates various monitor values, parameter numbers, parameter values and error codes.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Keypad

The keypad portion of the operation panel has five push-button switches that are used to select monitoring items, to set parameters and to reset faults.



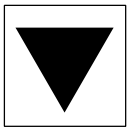

The UP (▲) and DOWN (▼) arrow keys are used to:

- Select monitoring items in monitor mode.
- Select parameters, and move through the error log in case of program mode.
- Increase or decrease a numeric value when a parameter value is displayed.

Holding down these keys will increase the scroll speed.



The ENT key is used to:

- Display a selected parameter value and the contents of the error log in program mode.
- Save a parameter value when the parameter value is displayed.



The PRG key is used to:

- Move between program and monitor modes. The "PROGRAM" status LED will turn OFF when the operation panel is in monitor mode and turn ON when the operation panel is in program mode.
- Return to the display of parameter number without saving a parameter value when a parameter value is displayed.



The RST key is used to:

- Reset fault when fault occurred and the display shows the error code.

Before resetting fault, remove the reasons of the fault. Note that when the RUN sequence signal has entered, fault cannot be reset.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Status LEDs

The operation panel contains six LEDs that show the present status of the 8720MC-RPS Regenerative Power Supply. Each status LED has the following meaning.

LED	Status	Meaning
READY	On	PWM switching is being performed.
	Off	PWM switching is not performed.
FAULT	On	Fault occurred, or the error log is being displayed.
	Off	Operation is normal.
PROGRAM	On	The operation panel is in program mode.
	Off	The operation panel is in monitor mode.
A	On	The root mean square value of the monitored input current is displayed in the unit of ampere. (1)
V	On	The root mean square value of the monitored AC input power voltage or DC bus voltage is displayed in the unit of volt.
KW	On	The monitored power (power running) is displayed in the unit of kilowatt.
	Flashing	The monitored power (regenerated) is displayed in the unit of kilowatt.
A, V, and KW	Off	The load ratio (2) is displayed in the unit of % when A, V and KW are turned OFF in monitor mode.

(1) The displayed value of input current is only an approximate value and no accuracy can be guaranteed. If you need an accurate value, measure it by using a dedicated measuring device.

(2) The load ratio is a ratio of the input current to the rated current.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

End of Chapter

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Parameters

The parameters are used to define characteristics of the 8720MC-RPS Regenerative Power Supply. To program the unit for a specific application, you display the appropriate parameter and adjust it as required. This chapter provides information on parameter types as well as detailed descriptions of each parameter. This chapter also describes how to access, display, and modify parameters.

Parameter Types



ATTENTION: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should adjust and operate this equipment. Read and understand this manual in its entirety before proceeding. Failure to observe this precaution could result in destruction of the equipment, severe bodily injury or loss of life.

There are two types of parameters:

1) User Parameters

   These parameters can be adjusted or modified at any time.

2) Factory Parameters

   These parameters are initially set before shipping out from the factory. Usually, these parameters are not required to be adjusted or modified.

   The Factory parameters are protected by password, and the adequate password must be set to access these parameters. Note, however, that some of these parameters cannot be modified during operation even though the password has been set.

Each parameter is described in detail in this chapter. The following information is provided for each parameter.

- **Parameter Number**

  A unique number is assigned to each parameter. The number is preceded by either U or F to identify it as a User or Factory parameter, respectively. The parameter number is shown on the display of the operation panel.

- **Parameter Name**

  A name is assigned to a parameter. The parameter name is not displayed when programming the 8720MC-RPS Regenerative Power Supply using the operation panel.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- **Parameter Description**

  This is a description of the parameter's function.

- **Parameter Range**

  This shows the predefined upper and lower limits of the parameter value.

- **Default Setting**

  The parameters are initially set before shipping from the factory, and the default setting is such factory setting.


- **Parameter Type**

  The parameter type identifies whether the parameter can be modified at any time, is protected by password, or cannot be modified during operation.

- **Refer also to Parameters**

  This shows a list of associated parameters that may provide additional or related information.

The parameter structure is shown in the following figure.

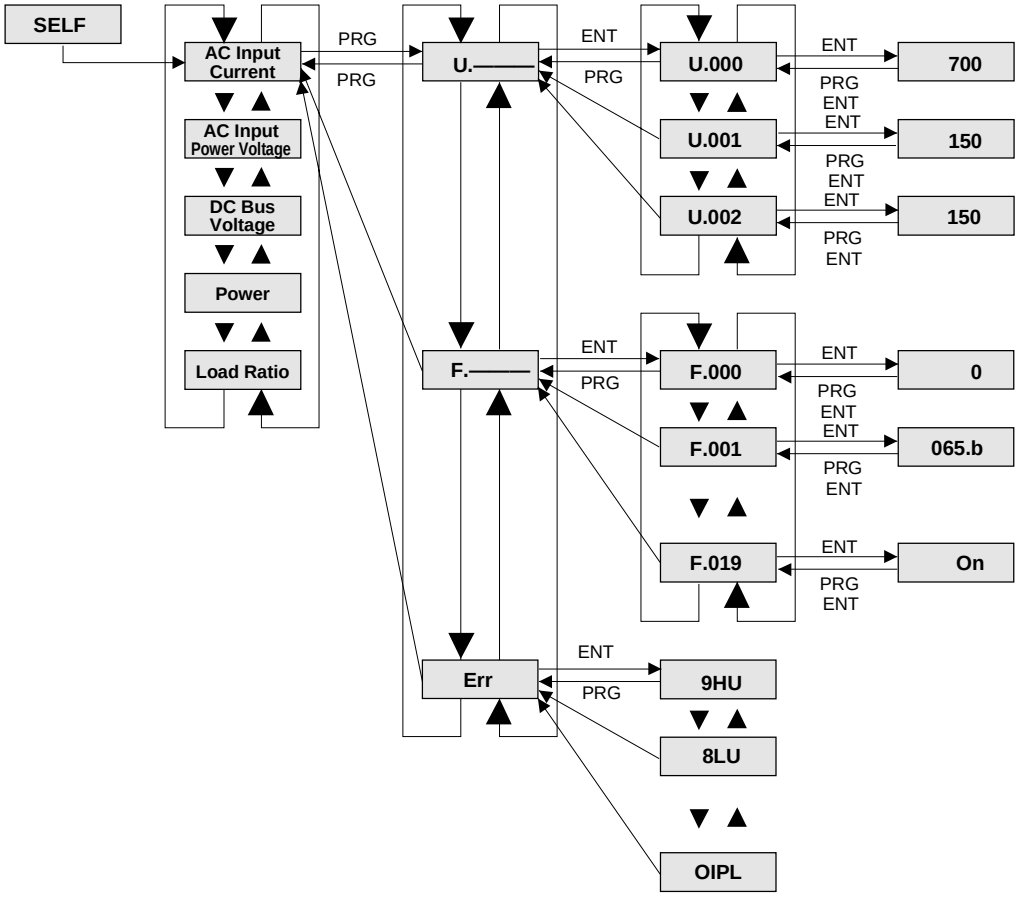

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Protecting Parameters with Password

Factory parameter values are password protected using Parameter F.000 (Setting Password). But even after the password has been set, some Factory parameters cannot be modified. Such parameters must be set after operation stopped.

Note that Parameter F.018 (Version Information) is a read-only parameter, and therefore, cannot be modified.



ATTENTION: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should change the Factory Parameters. Read and understand this instruction manual in its entirety before proceeding. Failure to change parameter values could result in destruction of the equipment, severe bodily injury or loss of life.

Displaying and Changing Parameter Values

To display or change parameter values, the operation panel must be in program mode. Use the procedure described in the following sections to change parameters in program mode. For calling out the error log and resetting faults, refer to Chapter 9.

User Parameters

The User parameters contain basic parameters that are modified depending on applications of the 8720MC-RPS Regenerative Power Supply. Use the following procedure to modify the User parameters.

Step 1. Press the PRG key until the "PROGRAM" status LED turns ON and the display shows "U.---". You can access the User parameters. If "U.---" is not shown on the display, press the ▲ key or the ▼ key until "U.---" appears on the display.

Step 2. Press the ENT key. The first User parameter number (U.000) will be displayed.

Step 3. Use the ▲ key or the ▼ key to move through the User parameters.

Step 4. When the desired parameter appears, press the ENT key. The parameter will be called out, and the parameter value will be displayed.

Step 5. Use the ▲ key to increment the value and the ▼ key to decrement the value.

Step 6. Press the ENT key to save changed value. Pressing the ENT key will display the same parameter number again, indicating that the value was saved.

Note 1: The value is not written to the memory until the ENT key has been pressed.

Note 2: Pressing the PRG key will also return to the same parameter number, without saving the value.

Parameter values are retained through a line dip or power shutdown.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

U.000 DC Bus Voltage Reference

This parameter sets the DC bus voltage reference value. The 8720MC-RPS Regenerative Power Supply controls to maintain the DC bus voltage at the set value.

Parameter Range:	275 to 750 V
Default Setting:	700 V
Parameter Type:	Configurable only when the unit is normal
Refer also to Parameters:	U.001 FWD Current Limit U.002 REV Current Limit F.005 Voltage Control Proportional Gain F.007 Bus Overvoltage Detection Level F.008 Bus Low Voltage Detection Level

Set the desired DC bus voltage (V) to this parameter. When the actual DC bus voltage is lower than the set value, current flows to the direction of power running, resulting in increase of voltage. On the contrary, if the actual DC bus voltage is higher than the set value, current flows to the regenerative direction, and the voltage will drop. But when the current limits (U.001 and U.002) are set to low values, the DC bus voltage might fluctuate because the current to be used for controlling the DC bus voltage is limited.

When the DC bus voltage is set too low, control will become impossible, and the DC bus voltage will swing widely. Set the DC bus voltage to a value equal to or higher than the peak value of AC input power voltage plus 30 V.

When regenerated power enters rapidly due to rapid deceleration of load equipment or other reasons, the DC bus voltage might go up instantaneously. To prevent such rapid change of the DC bus voltage, adjust the Voltage Control Proportional Gain (F.005).

If the difference between the set values of the DC Bus Voltage Reference and the Bus Overvoltage Detection Level (F.007) is small, bus overvoltage fault may be caused.

When a fault occurred, the DC Bus Voltage Reference cannot be set until the fault has been reset.

U.001 FWD Current Limit

This parameter limits current flowing from the AC input power to the 8720MC-RPS Regenerative Power Supply during operation.

Parameter Range:	0 to 150%
Default Setting:	150%
Parameter Type:	Configurable only when the unit is normal
Refer also to Parameters:	U.000 DC Bus Voltage Reference U.002 REV Side Current Limit F.002 Rated Current

Set the FWD current value (flowing in the direction to power running) to be limited as a ratio (%) of the Rated Current (F.002). What is to be limited is the current value flowing by the PWM switching. It is impossible to limit the current flowing through diodes.

When the set value of the FWD Current Limit is too small, the DC bus voltage might not go up to the set value of the DC Bus Voltage Reference (U.000).

If the 8720MC-RPS Regenerative Power Supply operates in the power regeneration mode only, set this parameter to 0%. The DC bus voltage to start power regeneration is the set value of the DC Bus Voltage Reference (U.000).

When an error occurred, the FWD Current Limit cannot be set until the error has been reset.

U.002 REV Current Limit

This parameter limits current flowing from the 8720MC-RPS Regenerative Power Supply unit to the AC input power during operation.

Parameter Range:	0 to 150%
Default Setting:	150%
Parameter Type:	Configurable only when the unit is normal
Refer also to Parameters:	U.000 DC Bus Voltage Reference U.001 FWD Current Limit F.002 Rated Current

Set the REV current value (flowing in the direction to power regeneration) to be limited as a ratio (%) of the Rated Current (F.002). What is to be limited is the current value flowing by the PWM switching.

When the set value of the REV Current Limit is too small, the DC bus voltage might not go down to the set value of the DC Bus Voltage Reference (U.000), and DC bus overvoltage error might be detected.

When an error occurred, the REV Current Limit cannot be set until the error has been reset.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Factory Parameters

F.000 Password

A password must be set to this parameter to change the Factory parameters.

Parameter Range:	0 to 999
Default Setting:	0
Parameter Type:	Configurable
Refer also to Parameters:	F.001 Unit Selection

ATTENTION: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should change the Factory Parameters. Read and understand this instruction manual in its entirety before proceeding. Failure to change parameter values could result in destruction of the equipment, severe bodily injury or loss of life.

Once a password is set, it will be retained until power to the 8720MC-RPS Regenerative Power Supply is disconnected. Note, therefore, that once a password is set to this parameter, the Factory parameters can be changed at any time until the power to the unit is disconnected.

Even though a password has been set to this parameter, the password can be cancelled by setting other value than the password to this parameter.

Password can be set at any time while the 8720MC-RPS Regenerative Power Supply is operating or stopping, or fault occurred.

Use the following procedure to set a password:

Step 1. Press the PRG key. "U.---" will be displayed, and the status LED of "PROGRAM" will light ON.

Step 2. Press the ▲ key or the ▼ key until "F.---" is displayed.

Step 3. Press the ENT key. "F.000" will be displayed.

Step 4. Press the ENT key. "0" will be displayed.

Step 5. Press the ▲ key until "55" is displayed. (Holding down the ▲ key will increase the scroll speed.)

Step 6. Press the ENT key to enter the value.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

F.001 Unit Selection (Note 1)

As the type of the 8720MC-RPS Regenerative Power Supply, this parameter sets a character code representing the input power supply voltage and the unit capacity.

For most applications, it is recommended that this parameter not be adjusted.

Note 1: This parameter is available from software version No. 3.00 (to be shown on the parameter F.018) or later only.

Parameter Range:

027.b	(15 kW (28 Amps) unit for 460 V, single 15 kW unit)
054.b	(30 kW (56 Amps) unit for 460 V, 2 paralleled 15 kW units)
081.b	(45 kW (84 Amps) unit for 460 V, 3 paralleled 15 kW units)
065.b	(37 kW (65 Amps) unit for 460 V, single 37 kW unit)
130.b	(75 kW (130 Amps) unit for 460 V, 2 paralleled 37 kW units)
195.b	(110 kW (195 Amps) unit for 460 V, 3 paralleled 37 kW units)
190.b	(125 kW (190 Amps) unit for 460 V, single 125 kW unit)
380.b	(250 kW (380 Amps) unit for 460 V, 2 paralleled 125 kW units)
570.b	(375 kW (570 Amps) unit for 460 V, 3 paralleled 125 kW units)

Default Setting: Unit-dependent

Parameter Type: Requiring the password, configurable only while the unit stops


Refer also to Parameters: F.002 Rated Current

ATTENTION: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should change this parameter. Read and understand this manual in its entirety before proceeding. Failure to change parameter values could result in destruction of the equipment, severe bodily injury or loss of life.

As shown in the figure below, the unit type is represented by the numbers showing the AC input current.

Be careful that setting a unit type to this parameter resets all the parameters to factory default settings, and cancels the password.

When the password has not been set, or during operation even though the password has been set, the unit capacity cannot be changed.

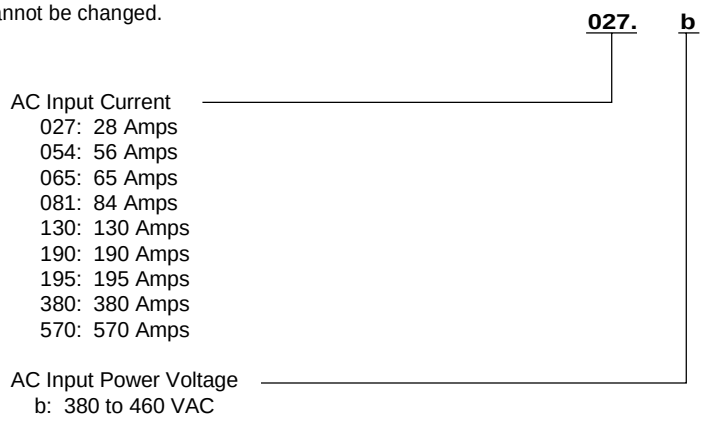

Important: The setting of this parameter must be either one of "027.b", "054.b", "065.b", "081.b", "130.b", "190.b", "195.b", "380.b" or "570.b". Do not set to any other value.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

F.002 Rated Current (Note 1)

This parameter sets the rated input current of the 8720MC-RPS Regenerative Power Supply. In case of multiple units connected in parallel, the total current of the connected units must be set.

For most applications, it is recommended that this parameter not be adjusted.

Note 1: This parameter is available from software version No. 3.00 (to be shown on the parameter F.018) or later only.

Parameter Range:	10 to 35 Amps 15 kW unit (single 15 kW unit) 20 to 70 Amps 30 kW unit (2 paralleled 15 kW units) 30 to 105 Amps 45 kW unit (3 paralleled 15 kW units) 10 to 70 Amps 37 kW unit (single 37 kW unit) 20 to 140 Amps 75 kW unit (2 paralleled 37 kW units) 30 to 210 Amps 110 kW unit (3 paralleled 37 kW units) 30 to 215 Amps 125 kW unit (single 125 kW unit) 60 to 430 Amps 250 kW unit (2 paralleled 125 kW units) 90 to 645 Amps 375 kW unit (3 paralleled 125 kW units)
Default Setting:	28 Amps 15 kW unit (single 15 kW unit) 56 Amps 30 kW unit (2 paralleled 15 kW units) 84 Amps 45 kW unit (3 paralleled 15 kW units) 65 Amps 37 kW unit (single 37 kW unit) 130 Amps 75 kW unit (2 paralleled 37 kW units) 195 Amps 110 kW unit (3 paralleled 37 kW units) 190 Amps 125 kW unit (single 125 kW unit) 380 Amps 250 kW unit (2 paralleled 125 kW units) 570 Amps 375 kW unit (3 paralleled 125 kW units)
Parameter Type:	Requiring the password, configurable only while the unit stops
Refer also to Parameters:	U.001 FWD Current Limit U.002 REV Current Limit F.001 Unit Selection

This parameter sets the rated input current in units of amperes. The set value affects the FWD and REV Current Limits (U.001 and U.002), overload detection, etc.

In case of paralleled units, the total current value of the connected units must be set to this parameter. When pressing the ▲ key or the ▼ key, the displayed value changes 1 Amp per stroke in case of single unit, 2 Amps per stroke in case of two paralleled units, and 3 Amps per stroke in case of three paralleled units.

The Rated Current cannot been changed, when the password has not been set, while operating even if the password has already been set, or when an error occurred.

ATTENTION: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should change this parameter. Read and understand this instruction manual in its entirety before proceeding. Failure to change parameter values could result in destruction of the equipment, severe bodily injury or loss of life.

F.003 Current Control Proportional Gain

This parameter determines the response of the current control.

For most applications, it is recommended that this parameter not be adjusted.

Parameter Range:	0.01 to 10.00 times
Default Setting:	1.00 times
Parameter Type:	Requiring the password, configurable only when the unit is normal
Refer also to Parameters:	F.004 Current Control Integral Gain

Larger values of the Current Control Proportional Gain set in this parameter result in faster response of the current control loop. But if the gain is set to a too large value, the unit becomes more susceptible to overcurrent detection and unstable by starting vibration of input current. Decreasing the gain value will help increase stability, but result in less respondence.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

F.004 Current Control Integral Gain

This parameter determines the dynamic characteristics of the current control.

For most applications, it is recommended that this parameter not be adjusted.

Parameter Range:	1 to 3,000 rad/sec
Default Setting:	64 rad/sec
Parameter Type:	Requiring the password, configurable only when the unit is normal
Refer also to Parameters:	F.003 Current Control Proportional Gain

Larger values of the Current Control Integral Gain set in this parameter result in shorter arrival time to the reference current value. If the gain is set too large, the current vibrates and becomes unstable. Decreasing the gain will help increase stability, but the arrival time to the reference current value becomes longer to a change of input current.

F.005 Voltage Control Proportional Gain

This parameter determines the response of the voltage control.

Parameter Range:	0.01 to 30.00 times
Default Setting:	5.00 times
Parameter Type:	Requiring the password, configurable only when the unit is normal
Refer also to Parameters:	F.006 Voltage Control Integral Gain

Larger values of the Voltage Control Proportional Gain set in this parameter result in faster response to change of DC bus voltage. But If the gain is set too large, the unit becomes unstable. Decreasing the gain value will help increase stability, but may result in less respondence to a change of DC bus voltage.

If capacity of load equipment capacitors is large, increase the set value of the Voltage Control Proportional Gain.

F.006 Voltage Control Integral Gain

This parameter determines the dynamic characteristics of the voltage control.

For most applications, it is recommended that this parameter not be adjusted.

Parameter Range:	1 to 3,000 rad/sec
Default Setting:	128 rad/sec
Parameter Type:	Requiring the password, configurable only when the unit is normal
Refer also to Parameters:	F.005 Voltage Control Proportional Gain

Larger values of the Voltage Control Integral Gain set in this parameter result in shorter arrival time to the set value. But if the gain is set too large, the voltage vibrates and becomes unstable. Decreasing the gain will help increase stability, but the arrival time to the set value becomes longer to a change of DC bus voltage.

When capacity of load equipment capacitors is large, increase the set value of the Voltage Control Integral Gain.

F.007 Bus Overvoltage Detection Level

This parameter sets the voltage level to detect the DC bus overvoltage error.

Parameter Range:	325 to 900 V
Default Setting:	800 V
Parameter Type:	Requiring the password, configurable only while the unit stops
Refer also to Parameters:	U.000 DC Bus Voltage Reference F.001 Unit Selection F.008 Bus Low Voltage Detection Level

When the DC bus voltage reaches the set value of the Bus Overvoltage Detection Level, the DC bus overvoltage error will be detected. When the error is detected, the PWM switching will stop, the discharge operation will start, and operation will stop.

When load changes largely due to rapid deceleration of load equipment or other reasons, the DC bus voltage might be increased instantaneously. If the voltage difference between the set values of the DC Bus Voltage Reference (U.000) and the Bus Overvoltage Detection Level is not large enough, the bus overvoltage error might be detected.

Set the Bus Overvoltage Detection Level to the same value as the detection level of the load equipment.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ATTENTION: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should change this parameter. Read and understand this instruction manual in its entirety before proceeding. Failure to change parameter values could result in destruction of the equipment, severe bodily injury or loss of life.

F.008 Bus Low Voltage Detection Level

This parameter sets the voltage level to detect the DC bus low voltage error.

Parameter Range:	200 to 600 V
Default Setting:	400 V
Parameter Type:	Requiring the password, configurable only while the unit stops
Refer also to Parameters:	U.000 DC Bus Voltage Reference F.001 Unit Selection F.007 Bus Overvoltage Detection Level

When the DC bus voltage reaches the set value of the Bus Low Voltage Detection Level, the DC bus low voltage error will be detected. Detection of the error will stop the PWM switching, start the discharge operation, and stop operation.

ATTENTION: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should change this parameter. Read and understand this instruction manual in its entirety before proceeding. Failure to change parameter values could result in destruction of the equipment, severe bodily injury or loss of life.

F.009 AC Overvoltage Detection Level

This parameter sets the voltage level to detect the AC input power overvoltage error.

Parameter Range:	200 to 550 V
Default Setting:	550 V
Parameter Type:	Requiring the password, configurable only while the unit stops
Refer also to Parameters:	F.001 Unit Selection

When the AC input power voltage reaches the set value of the AC Overvoltage Detection Level, the AC overvoltage error will be detected. Detection of the error will stop the PWM switching, start the discharge operation, and stop operation.

When the AC Overvoltage Detection Level is carelessly set lower than the AC input power voltage, the AC overvoltage error cannot be reset. In such a case, use the following steps to reset the AC overvoltage error.

Step 1. Press the PRG key while the "AC" error is shown on the display. The operation panel will be in program mode, and the display will show "U.---".

Step 2. Press the ▲ key or the ▼ key until "F.---" will be shown in the display.

Step 3. Press the ENT key. The display will show "F.000".

Step 4. Press the ENT key. The display will show "0".

Step 5. Set the password (55), and press the ENT key. The display will show "F.000".

Step 6. Press the ▲ key or the ▼ key until "F.009" will be shown in the display.

Step 7. Press the ENT key. The display will show the AC Overvoltage Detection Level.

Step 8. Press the ▲ key to increment the set value to an adequate value.

Step 9. Press the ENT key to decide the set value. The display will show "F.009".

Step 10. Press the PRG key. The display will show "AC".

Step 11. Press the RST key or enter the RST sequence signal. Resetting "AC" will return to monitor mode.

ATTENTION: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should change this parameter. Read and understand this instruction manual in its entirety before proceeding. Failure to change parameter values could result in destruction of the equipment, severe bodily injury or loss of life.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

F.010 Carrier Frequency (Note 1)

This parameter sets the carrier frequency of the PWM switching.

Note 1: This parameter is available from software version 3.00 (to be shown on the parameter F.018) or later only.

Parameter Range:	5 kHz, 10 kHz, or 15 kHz
Default Setting:	10 kHz: For Model 8720MC-RPS027 and 8720MC-RPS065 5 kHz: For Model 8720MC-RPS190
Parameter Type:	Requiring the password, configurable only when the unit is normal
Refer also to Parameters:	F.002 Rated Current



ATTENTION: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should change this parameter. Read and understand this manual in its entirety before proceeding. Failure to change parameter values could result in destruction of the equipment, severe bodily injury or loss of life.

The carrier frequency is largely concerned with heat generation of the 8720MC-RPS Regenerative Power Supply and the reactor. When the carrier frequency is increased from 10 kHz to 15 kHz, use the unit by derating the Rated Current (F.002) by 20%.

F.011 Deadtime

This parameter sets the deadtime of PWM.

For most applications, it is recommended that this parameter not be adjusted.

Parameter Range:	1.5 to 15.0 microseconds
Default Setting:	6.0 microseconds
Parameter Type:	Requiring the password, configurable only while the unit is normal and stops
Refer also to Parameters:	N/A



ATTENTION: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should change this parameter. Read and understand this instruction manual in its entirety before proceeding. Failure to change parameter values could result in destruction of the equipment, severe bodily injury or loss of life.

The deadtime is the time provided for protecting the power modules from shorting. Therefore, the set value depends on the transistor modules to be used for the power modules. Careless change of the deadtime might damage the unit. If you need to change the setting of this parameter, contact the Allen-Bradley Company.

F.012 Allowable Time for Instantaneous Power Loss

This parameter sets the time period within which the 8720MC-RPS Regenerative Power Supply can return to operation automatically, when the input power voltage dropped (lower than 200 VAC for 460 V units) instantaneously, or when instantaneous phase loss occurred.

When the power dip or phase loss continued longer than the set value, a phase loss error will be detected.

Parameter Range:	0.05 to 3.00 seconds
Default Setting:	0.50 seconds
Parameter Type:	Requiring the password, configurable only while the unit is normal and stops
Refer also to Parameters:	N/A

If an instantaneous power loss or phase loss is detected, the PWM switching will stop. When the unit returns from the instantaneous power loss or phase loss, the PWM switching will restart.

When the power to the main magnetic contactor was turned OFF due to an instantaneous power loss or phase loss and the main power supply was turned OFF, returning from the instantaneous power loss or phase loss will start precharge operation. After the precharge operation is completed, the PWM switching will restart.

When an instantaneous power loss or phase loss continued longer than the value set to this parameter, it is considered as a power loss, and a phase loss error will be detected. Detecting a phase loss error will start discharge operation.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

F.013 AC Reactor Capacity (Note 1)

This parameter sets the capacity of the AC reactor installed in the main power wiring.

Note 1: This parameter is available from software version No. 3.00 (to be shown on the parameter F.018) or later only

Parameter Range:	100 to 8,000 micro-henry
Default Setting:	1,200 micro-henry: For Model 8720MC-RPS065BM and 8720MC-RPS065BS units 850 micro-henry: For Model 8720MC-RPS027BM 400 micro-henry: For Model 8720MC-RPS190BM and 8720MC-RPS190BS units
Parameter Type:	Requiring the password, configurable only while the unit is normal and stops
Refer also to Parameters:	F.003 Current Control Proportional Gain F.004 Current Control Integral Gain F.010 Carrier Frequency

This parameter sets the capacity of the AC reactor in the unit of micro-henry. Note that the AC reactor capacity set to the parameter is not the total capacity for three phases but the capacity for one phase only. This is also applicable to multiple units connected in parallel.

F.014 Precharge/Discharge Time (Note 1)

This parameter sets the precharge/discharge time. If the DC bus voltage did not go up in precharge even if the set time period has elapsed, a precharge error will be detected. In case of discharge, the discharge operation will continue for the time period set to this parameter.

Note 1: This parameter must be set to 6.0 seconds when 8720MC-RPS190 unit is used.

Parameter Range:	0.5 to 15.0 seconds
Default Setting:	3.0 seconds
Parameter Type:	Requiring the password, configurable only while the unit is normal and stops
Refer also to Parameters:	F.015 Wattage of Precharge/Discharge Resistor

Larger capacity of capacitors connected to the DC bus requires a longer precharge time. In such a case, set a large value to this parameter.

When the DC bus voltage does not reach the precharge voltage even if the time period set to this parameter has already elapsed, a precharge error will be detected. Set a larger value. (Remarks: The precharge voltage is 90% of the peak value of the AC input power voltage.)

In case of precharge, the precharge operation will be finished when the DC bus voltage arrives at a certain value, even though the set Precharge/Discharge Time has not elapsed yet. But in case of discharge, the discharge operation continues for the set value of this parameter, regardless of the DC bus voltage.

When an external resistor for precharge/discharge or an external circuit is used, set again the Precharge/Discharge Time, if necessary. For connection of the external resistor for precharge/discharge or the external circuit, refer to Section 4.3 and 4.4.

F.015 Wattage of Precharge/Discharge Resistor (Note 1)

This parameter sets the rated wattage of the precharge/discharge resistor.

Note 1: This parameter is available from software version No. 3.00 (to be shown on the parameter F.018) or later only.

Parameter Range:	50 to 2,000 W
Default Setting:	120 W: For Model 8720MC-RPS065BM and 8720MC-RPS065BS units 80 W: For Model 8720MC-RPS027BM 400 W: For Model 8720MC-RPS190BM and 8720MC-RPS190BS units
Parameter Type:	Requiring the password, configurable only while the unit is normal and stops
Refer also to Parameters:	F.014 Precharge/Discharge Time

When an external resistor for precharge/discharge or an external circuit is used, set again the Precharge/Discharge Time, if necessary. For connection of the external resistor for precharge/discharge or the external circuit, refer to Section 4.3 and 4.4.

The 8720MC-RPS Regenerative Power Supply has an overload protection function for precharge/discharge resistor. When the resistor becomes overload condition as a result of repeated precharge and discharge, an overload error of the precharge/discharge resistor will be detected.

The standard indication of overload of the precharge/discharge resistor is as follows:

Temperature increase of resistor:

$$\text{Temp. Increase of Resistor (degree C)} = \frac{500 \times \text{Precharge/Discharge Time (F.014)}}{\text{Wattage of Precharge/Discharge Resistor}}$$

Temp. of Resistor to Detect Overload = 120 degree C (248 degree F)

When the temperature of the precharge/discharge resistor reaches 120 degree C (248 degree F), an overload error of the resistor will be detected. But if precharge/discharge operation is not performed for 10 minutes, the integrated values will be cleared.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

F.016 DC Bus Voltage Offset (Note 1)

This parameter is used to compensate error of monitored DC bus voltage from actual value, by multiplying feedback value of DC bus voltage by offset (gain).

Note 1: This parameter is available from software version No. 2.00 (to be shown on the parameter F.018) or later only.

Parameter Range:	0.900 to 1.100
Default Setting:	1.000
Parameter Type:	Requiring the password, configurable only while the unit is normal
Refer also to Parameters:	U.000 DC Bus Voltage Reference

ATTENTION: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should change this parameter. Read and understand this manual in its entirety before proceeding. Failure to change parameter values could result in destruction of the equipment, severe bodily injury or loss of life.

An error of monitored value of DC bus voltage shown on the display (usually almost same as the set value of the DC Bus Voltage Reference (U.000) from actually measured DC bus voltage can be compensated by setting an adequate value to this parameter.

The value to be set to the DC Bus Voltage Offset (F.016) is determined by using the following formula:

DC Bus Voltage Offset (F.016) = Measured DC Bus Voltage (*) / DC Bus Voltage Reference (U.000)

* Measured DC Bus Voltage is value actually measured by a voltmeter.

After setting this parameter, confirm that the error was reduced.

F.017 Discharging Function Enable (Note 1)

This parameter selects whether the discharging function of DC bus voltage is performed or not, when the 8720MC-RPS Regenerative Power Supply is stopped or aborted. When "On" is selected, DC bus voltage will be discharged at stopping the unit. If "OFF" is set, DC bus voltage will not be discharged.

Note 1: This parameter is available from software version No. 2.00 (to be shown on the parameter F.018) or later only.

Parameter Range:	OFF, On
Default Setting:	On
Parameter Type:	Requiring the password, configurable only while the unit is normal
Refer also to Parameters:	N/A

ATTENTION: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should change this parameter. Read and understand this manual in its entirety before proceeding. Failure to change parameter values could result in destruction of the equipment, severe bodily injury or loss of life.

ATTENTION: DC bus capacitors retain hazardous voltages after input power has been disconnected. After disconnecting power, wait for a while for the DC bus capacitors to discharge and then check the voltage with a voltmeter to ensure the DC bus capacitors are discharged before touching any internal components. Failure to observe this precaution could result in severe bodily injury or loss of life.

Setting this parameter to "OFF" will not discharge the DC bus voltage when the 8720MC-RPS Regenerative Power Supply is stopped or aborted, resulting in retaining an almost same voltage as the set value of the DC Bus Voltage Reference (U.000) in the DC bus capacitors. Exercise extreme care when this parameter is set to "OFF".

When using by setting this parameter to "OFF",

1) When a GV3000/SE unit is connected to the 8720MC-RPS Regenerative Power Supply as load equipment, set this parameter to "OFF", and perform discharging on the GV3000/SE unit side. In this case, the discharging time is determined by the GV3000/SE unit.

2) When the 8720MC-RPS Regenerative Power Supply is used in the power regeneration mode (Figures 4.4 and 4.9), set this parameter to "OFF", and perform discharging on the inverter unit side. In this case, the discharging time is determined by the Inverter unit to be connected.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

F.018 Version Information

This parameter displays the software version number.

Parameter Range:	N/A
Default Setting:	N/A
Parameter Type:	Read only
Refer also to Parameters:	N/A

F.019 Selection of Wiring Error (LE) Detecting Function (Note 1)

This parameter selects whether detecting function of wiring error (LE) during operation is used or not. When "On" is selected, existence of wiring error will be verified when operation is started. If "OFF" is selected, verification of existence of wiring error will not be performed.

Note 1: This parameter is available from software version No.3.00 (to be shown on the parameter F.018) or later only.

Parameter Range:	OFF, On
Default Setting:	On
Parameter Type:	Requiring the password, configurable only while the unit is normal
Refer also to Parameters:	N/A

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

End of Chapter

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Error Codes and Warning Buzzer

This chapter describes contents of error codes and how to correct problems.

When an error occurs in the 8720MC-RPS Regenerative Power Supply, an error code corresponding to the error is shown on the display. The error codes are two- or three-letter codes flashing on the display.

When an error occurs while the unit stops, the precharge operation and the PWM switching cannot be started by entering the RUN sequence signal, and thus, operation cannot be started, until the error has been reset.

When an error occurs during operation, the PWM switching will stop, the discharge operation will start and the unit will stop. In this case, the unit cannot be started until the error has been reset.

For resetting an error, press the RST key or enter the RESET sequence signal after removing the cause of the error. In either case, the error cannot be reset when the RUN sequence signal has been entered.

If multiple errors occurred at a time, the corresponding error codes will be scrolled flashing one by one.

It is possible to view all the parameters, while an error occurred and the error code is being displayed. But in such a case, any parameters except some special ones cannot be changed. To view a parameter, press the PRG key while an error code is displayed. Pressing the PRG key will display "U.---", indicating the operation panel is changed to program mode.

A maximum of ten error codes can be stored in the error log. The last error that occurred is the first one to appear on the display when accessing the error log. The last error will be identified with the highest number (up to 9).

The first error that occurred will appear as the last one in the error log. The first error will be identified by the number 0.

When viewing the error log, pressing the ▲ key or the ▼ key will scroll the error codes.

The error log will be retained even if power to the unit is lost. If the error log is full, more entries can be added by clearing older entries. If you desire to clear the error log, press the RST key while the error log is displayed.

In the course of error processing, an error code (LE*) other than original errors may be incidentally displayed.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Contents of Error Codes and Recovering

The error codes are shown in tables 8.A to 8.D. Table 8.A shows the error codes common to all units regardless of single unit connection or parallel connection of multiple units. Table 8.B shows the error codes caused by master unit (unit having Regulator Board) regardless of single unit connection or parallel connection of multiple units. Table 8.C shows the error codes caused by slave unit 1 (slave unit adjacently connected to master unit) in case of parallel connection of multiple units. Table 8.D shows the error codes caused by slave unit 2 (slave unit adjacently connected to slave unit 1) in case of parallel connection of multiple units.

To reset error codes, first remove the causes of the errors, and then press the RST key or enter the RESET sequence signal. In either case, resetting cannot be performed when the RUN sequence signal has been entered.

Table 8.A
List of Error Codes Common to All 8720MC-RPS Regenerative Power Supply

Error Code	Error Description	Error Cause	Corrective Action
PrC	Precharge Error	The DC bus voltage did not reach a certain level in precharge even if the precharge/discharge time has elapsed.	Check that the set value of the Precharge/ Discharge Time (F.014) is correct. If no other problem is found, increase the set value.
			Precharge/discharge resistor or its wiring is faulty. Check the resistor and wiring, and remove the cause. If Fuse 1 the precharge fuse is blown, replace the fuse. Check that the recommended line reactor has been selected.
CHr	Precharge/ Discharge Overload Error	The precharge/discharge resistor is in overload condition.	Do not perform precharge and discharge for a while.
			Replace the precharge/discharge resistor with one having a larger wattage, and set again the Wattage of Precharge/Discharge Resistor (F.015).
oL	Overload Error	Output current is excessive.	Check that the power rating of the unit is adequate for the input of the load.
			Decrease the input of the load.
AC	AC Input Frequency or High Voltage Error	The AC input power frequency exceeds the base frequency (50 Hz or 60 Hz) by +/-3% or more.	Check the AC input power supply.
		There is large distortion (notches) in AC input power voltage.	
		The AC input power is too high.	Check that the set value of the AC Overvoltage Detection Level (F.009) is adequate. If no other problem is found, increase the set value.
HU	High Bus Voltage	The DC bus voltage is too high.	Check the AC input power voltage.
			Check that the set value of the Voltage Control Proportional Gain (F.005) is adequate.
			Check that the set value of the Bus Overvoltage Detection Level (F.007) is adequate. If no other problem is found, increase the set value.
			The capacity of the AC reactor is too large. Replace it with a reactor having a smaller capacity.
			The load change is too fast. Reduce the load change speed.
LU	Low Bus Voltage Error	The DC bus voltage is too low.	Check the AC input power voltage and the line fuse.
			Check that the set value of the Allowable Time for Instantaneous Power Loss (F.012) is adequate. If no other problem is found, increase the set value.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Error Code	Error Description	Error Cause	Corrective Action
IPL	Input Phase Loss Error	Phase loss occurred for the AC input power.	Check the AC input power voltage and the line fuse.
		Power loss occurred (The allowable time for instantaneous power loss was exceeded.)	Check that the set value of the Allowable Time for Instantaneous Power Loss (F.012) is adequate. If no other problem is found, increase the set value.
Con	Magnetic Contactor Error	No answer-back signal was received from the main magnetic contactor.	Check the operation of the main magnetic contactor.
			Verify that the answer-back signal of the main magnetic contactor is correctly wired to the sequence input signal terminal.
Fr	Faulty Relay Signal	An error was received from the Power Interface Board (PIFS).	Verify that the connecter to connect the Regulator Board and the Power Interface Board is correctly inserted.

Table 8.B
List of Error Codes Relating to Master Units

Error Code	Error Description	Error Cause	Corrective Action
P.U1	Power Module Phase L_1 Error	The Phase L_1 Power Module of the master unit is faulty.	Check the wiring of the AC input power.
			Check the ambient temperature, the cooling fan, and the clearances around the unit.
			If the error occurs intermittently, contact the Allen-Bradley Company or replace the unit. Check that the harmonic filter is located on the primary side of the line reactor and the secondary side of the line reactor is connected to the RPS.
PU.1	Power Module Phase L_2 Error	The Phase L_2 Power Module of the master unit is faulty.	Check the wiring of the AC input power.
			Check the ambient temperature, the cooling fan, and the clearances around the unit.
			If the error occurs intermittently, contact the Allen-Bradley Company or replace the unit. Check that the harmonic filter is located on the primary side of the line reactor and the secondary side of the line reactor is connected to the RPS.
PU1.	Power Module Phase L_3 Error	The Phase L_3 Power Module of the master unit is faulty.	Check the wiring of the AC input power.
			Check the ambient temperature, the cooling fan, and the clearances around the unit.
			If the error occurs intermittently, contact the Allen-Bradley Company or replace the unit. Check that the harmonic filter is located on the primary side of the line reactor and the secondary side of the line reactor is connected to the RPS.
FA1	Fan Error	The cooling fan(s) of the master unit and/or the AC reactor is (are) defective. The AC reactor is overheated (1).	Check the wiring of the cooling fan for the master unit and the AC reactor. Verify that no foreign material is caught in the cooling fans for the master unit and the AC reactor.
			If the error occurs intermittently, contact the Allen-Bradley Company or replace the cooling fan or the Power Interface Board (PIFS).
LE1	Line Connect Error	The phases (L_1, L_2 and L_3) of the AC input power of the master unit do not match with those of the control power.	Make the phases (L_1, L_2 and L_3) of the AC main power same as those of the control power.
PS1	Power Supply Board Error	The Power Interface Board (PIFS) of the master unit is faulty.	If the error occurs intermittently, contact the Allen-Bradley Company or replace the Power Interface Board (PIFS).

(1) This is applicable only to Model 8720MC-RPS190BM and 8720MC-RPS190BS units.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 8.C
List of Error Codes Relating to Slave Units 1

Error Code	Error Description	Error Cause	Corrective Action
P.U2	Power Module Phase L_1 Error	The Phase L_1 Power Module of the slave unit 1 is faulty.	Check the wiring of the AC input power.
			Check the ambient temperature, the cooling fan, and the clearances around the unit.
			If the error occurs intermittently, contact the Allen-Bradley Company or replace the unit.
PU.2	Power Module Phase L_2 Error	The Phase L_2 Power Module of the slave unit 1 is faulty.	Check the wiring of the AC input power.
			Check the ambient temperature, the cooling fan, and the clearances around the unit.
			If the error occurs intermittently, contact the Allen-Bradley Company or replace the unit.
PU2.	Power Module Phase L_3 Error	The Phase L_3 Power Module of the slave unit 1 is faulty.	Check the wiring of the AC input power.
			Check the ambient temperature, the cooling fan, and the clearances around the unit.
			If the error occurs intermittently, contact the Allen-Bradley Company or replace the unit.
FA2	Fan Error	The cooling fan(s) of the slave unit 1 and/or the AC reactor is (are) defective. The AC reactor is overheated (1).	Check the wiring of the cooling fans for the slave unit 1 and the AC reactor.
			Verify that no foreign material is caught in the cooling fans for the slave unit 1 and the AC reactor.
			If the error occurs intermittently, contact the Allen-Bradley Company or replace the cooling fan or the Power Interface Board (PIFS).
LE2	Line Connect Error	The phases (L_1, L_2 and L_3) of the AC input power of the slave unit 1 do not match with those of the control power.	Make the phases (L_1, L_2 and L_3) of the AC main power same as those of the control power.
PS2	Power Supply Board Error	The Power Interface Board (PIFS) of the slave unit 1 is faulty.	If the error occurs intermittently, contact the Allen-Bradley Company or replace the Power Interface Board (PIFS).

(1) This is applicable only to Model 8720MC-RPS190BM and 8720MC-RPS190BS units.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 8.D
List of Error Codes Relating to Slave Units 2


Error Code	Error Description	Error Cause	Corrective Action
P.U3	Power Module Phase L_1 Error	The Phase L_1 Power Module of the slave unit 2 is faulty.	Check the wiring of the AC input power.
			Check the ambient temperature, the cooling fan, and the clearances around the unit.
			If the error occurs intermittently, contact the Allen-Bradley Company or replace the unit.
PU.3	Power Module Phase L_2 Error	The Phase L_2 Power Module of the slave unit 2 is faulty.	Check the wiring of the AC input power.
			Check the ambient temperature, the cooling fan, and the clearances around the unit.
			If the error occurs intermittently, contact the Allen-Bradley Company or replace the unit.
PU3.	Power Module Phase L_3 Error	The Phase L_3 Power Module of the slave unit 2 is faulty.	Check the wiring of the AC input power.
			Check the ambient temperature, the cooling fan, and the clearances around the unit.
			If the error occurs intermittently, contact the Allen-Bradley Company or replace the unit.
FA3	Fan Error	The cooling fan(s) of the slave unit 2 and/or the AC reactor is (are) defective. The AC reactor is overheated (1).	Check the wiring of the cooling fan for the slave unit 2 and the AC reactor.
			Verify that no foreign material is caught in the cooling fans for the slave unit 2 and the AC reactor.
			If the error occurs intermittently, contact the Allen-Bradley Company or replace the cooling fan or the Power Interface Board (PIFS).
LE3	Line Connect Error	The phases (L_1, L_2 and L_3) of the AC input power of the slave unit 2 do not match with those of the control power.	Make the phases (L_1, L_2 and L_3) of the AC main power same as those of the control power.
PS3	Power Supply Board Error	The Power Interface Board (PIFS) of the slave unit 2 is faulty.	If the error occurs intermittently, contact the Allen-Bradley Company or replace the Power Interface Board (PIFS).

(1) This is applicable only to Model 8720MC-RPS190BM and 8720MC-RPS190BS units.

Accessing and Clearing the Entries in the Error Log


The following procedure shows how to access and clear the error log. Note that you cannot clear a single entry from the error log. The entire log will be cleared simultaneously using this procedure.

Step 1. Press the PRG key.

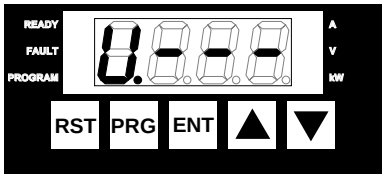


When the operation panel becomes program mode, the User parameter will be displayed and the "PROGRAM" status LED will turn ON.

Step 2. Press the ▼ key until the "Err" is displayed.

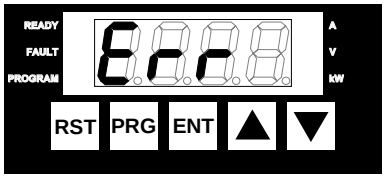


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Step 3. Press the ENT key.

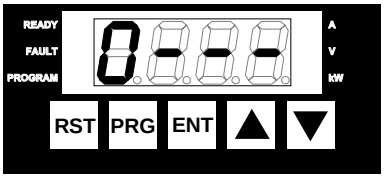


If there is no error that occurred, "0---" will be displayed.

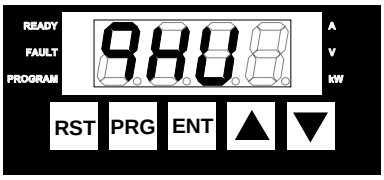

If there is any error that occurred, the last error that occurred will be displayed.

Step 4. When the RST key is pressed while the error log is being displayed, all the entries of the error log will be cleared, and "Err" will be displayed again, indicating that the error log became empty.

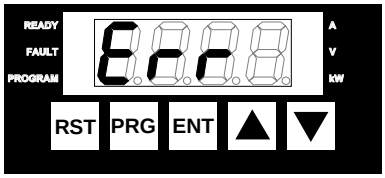

Recovering from Fatal Error

Fatal error codes normally indicate a malfunction of the Regulator Board. In some cases, fatal error codes can be reset by once disconnecting the power supply and reapplying power. But in order to prevent any problem, the Regulator Board must be replaced.

The table below lists the fatal error codes.

Error Code	Error Description	Error Cause	Corrective Action
SCx	Self Check Error	Error was detected during self-diagnostics. "x" in the error code shows an integer value of 1 to 7.	Contact the Allen-Bradley Company or replace the Regulator Board.
CHS	Checksum Error	Writing parameter value to EEPROM was not successful.	Set again the Unit Selection (F.001), and restore all the parameters to the default values.
			If this error occurs intermittently, contact the Allen-Bradley Company or replace the Regulator Board.
CPU	CPU Error	Unexpected error occurred during CPU internal calculation.	Contact the Allen-Bradley Company or replace the Regulator Board.
SYS	System Error	Unexpected error occurred.	Contact the Allen-Bradley Company or replace the Regulator Board.

Warning Buzzer

Model 8720MC-RPS190BM and 8720MC-RPS190BS units are provided with thermo switch so that warning buzzer will alert operators when intake air temperature to the 8720MC-RPS Regenerative Power Supply exceeds about 50 degree C (122 degree F). In such a case, check the ambient temperature and the cooling fans.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Inspecting Trouble and Recovering

This chapter describes how to inspect troubles and take recovery actions.

ATTENTION: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should install, adjust, operate or service this equipment. Read and understand this instruction manual in its entirety before proceeding. Failure to observe this precaution could result in destruction of the equipment, severe bodily injury or loss of life.

ATTENTION: Do not install or remove any components with power applied to the 8720MC-RPS unit. Disconnect and lock out incoming power before attempting such installation or removal. Failure to observe this precaution could result in destruction of the equipment, severe bodily injury or loss of life.

ATTENTION: DC bus capacitors retain hazardous voltages after input power has been disconnected. After disconnecting input power, wait for a while for the DC bus capacitors to discharge and then check the voltage with a voltmeter to ensure the DC bus capacitors are discharged before touching any internal components. Failure to observe this precaution could result in destruction of the equipment, severe bodily injury or loss of life.

Safety Precautions

1. Be sure that the input disconnect is in the correct position, either ON or OFF, depending on the work to be performed.

2. A backup technician must be in line of sight when the work is being performed, to assist in case of emergency.

ATTENTION: Do not use a megger to perform continuity checks in the 8720MC-RPS Regenerative Power Supply. Use high resistance range of a circuit tester for this purpose. Failure to observe these precautions could result in damage to, or destruction of, the unit.

3. Use one hand to hold and connect test probes of multimeter and others.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Preliminary Review

1. Turn OFF the input power to the 8720MC-RPS Regenerative Power Supply and wait until "POWER" lamp goes OFF.
2. Verify that the DC bus voltage is zero and the DC bus capacitors are completely discharged.
3. Check the following:
   - Check that no terminal is loose and that termination to the connectors is correct.
   - Check that the incoming power voltage is correct.
   - Check that the unit was installed correctly.
   - Verify that all the coils possibly generating electrical noise around the unit, such as relays, solenoid-valves, and magnetic brakes are provided with surge suppressors.


Troubleshooting Flow Charts

8720MC-RPS Regenerative Power Supply Does Not Run

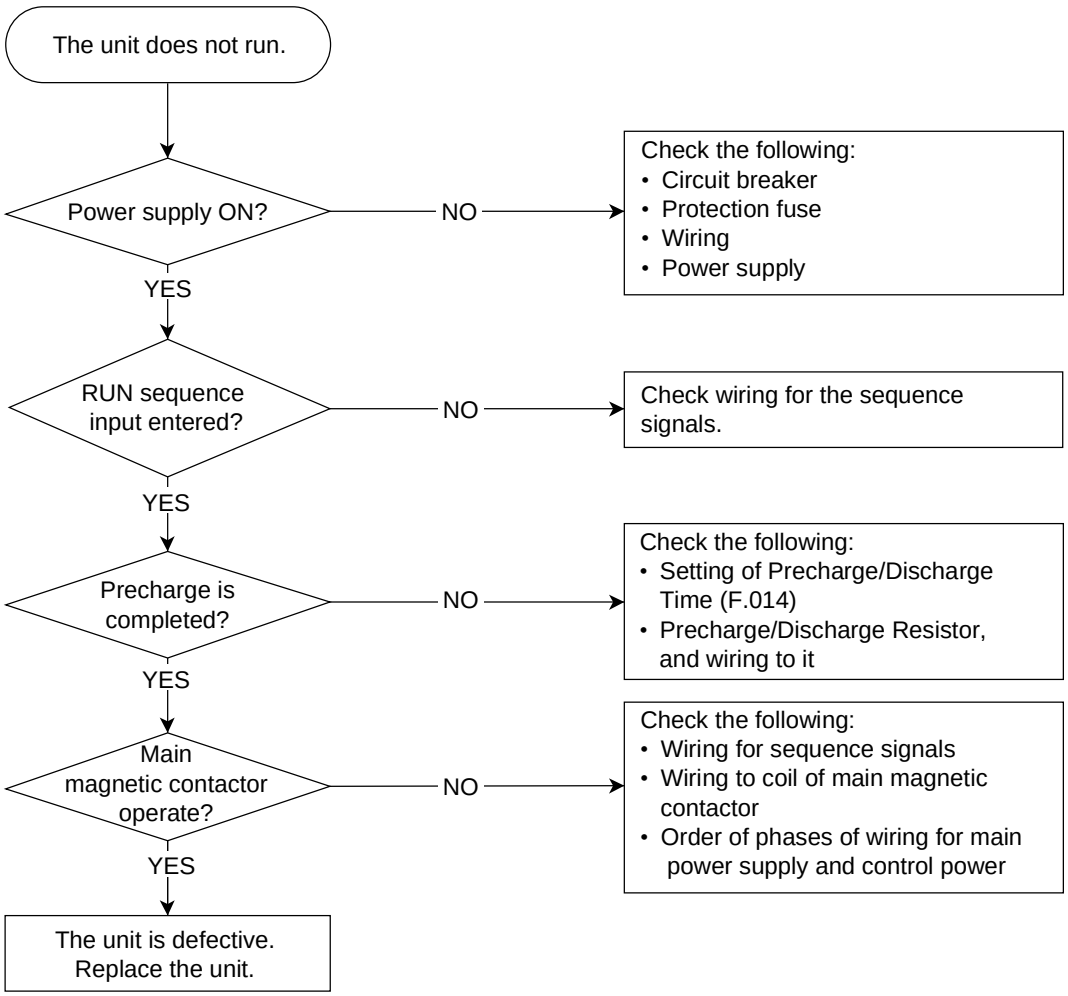

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

DC Bus Voltage Does Not Go Up

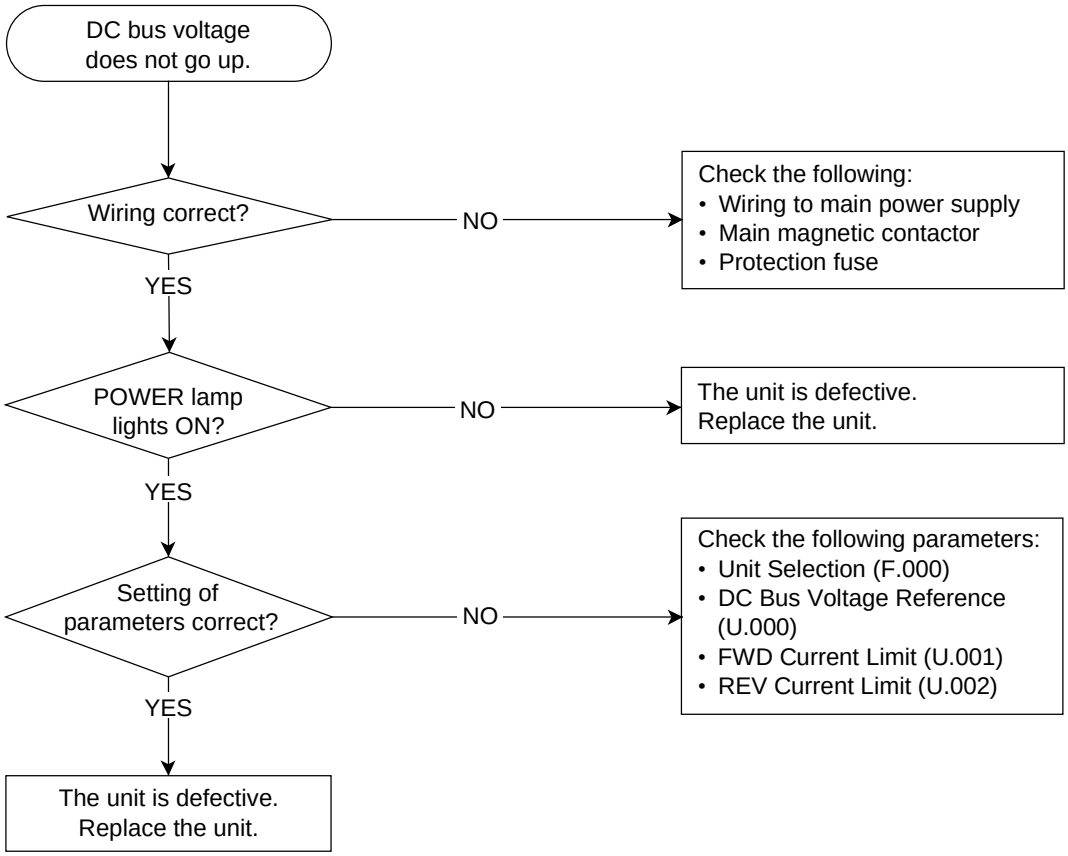

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

End of Chapter

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Special Replacement Parts

This chapter describes the required replacement parts.

The table below lists the replacement parts. The figures shown in the table show required quantities of the corresponding parts.

The standards or specifications of the parts in the table might be changed by integration or abolition of parts. If you need spare parts, contact The Allen-Bradley Company.

Part Name	Standards and Specifications	REJ Part Number	Required Quantities				
			8720MC-RPS027BM	8720MC-RPS065BM	8720MC-RPS065BS	8720MC-RPS190BM	8720MC-RPS190BS
Regulator Board BDSR-1	S-B0001	826751	1	1	0	1	0
Power Interface Board PIFS-11	S-B0002-1	826752	1	1	1	1	1
Driver Board RCPB-1	S-B0003	826754	0	1	1	0	0
Driver Board RCPB-2	S-B0008	826755	1	0	0	0	0
Base Driver Board BDI-091	S-B5081	826739	0	0	0	6	6
Snubber Resistance Board RB-1	05-03162-50	926531	0	0	0	1	1
Fan Power Supply APS-011	05-03162-52	926522	0	0	0	1	1
Fuse	500V FA16A 6X32	286040	1	1	1	0	0
	6JX30 (600V 30A)	286005	0	0	0	2	2
	6JX4 (600V 4A)	286011	0	0	0	1	1
Power Module	PM75DSA120	536700	3	0	0	0	0
	PM150DSA120	536603	0	3	3	0	0
	PM600HSA120-18	536170	0	0	0	6	6
Capacitor	ECOS2W331DB	450293	12	0	0	0	0
	450LGSN3800M	453783	0	2	2	8	8
Cooling Fan	U0A528500	926024	2	0	0	0	0
	MB-B0012	926504	0	2	2	0	0
	CN26 60-03136-00	926524	0	0	0	1	1
	CN27 60-03136-01	926525	0	0	0	1	1
Resistor for Precharging and Discharging	U0A528400	926023	1	0	0	0	0
	MB-B0011	926503	0	1	1	0	0
	60-03137-00	926526	0	0	0	1	1
Cable for Parallel Connection	MB-B0013	352311	0	0	1	0	0
	60-03173-00	926523	0	0	0	0	1
Interface Board FMI-1 for EMC Filter Unit	05-03202-50	926530	0	0	0	1	1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Part Name	Standards and Specifications	REJ Part Number	Required Quantities				
			8720MC-RPS027BM	8720MC-RPS065BM	8720MC-RPS065BS	8720MC-RPS190BM	8720MC-RPS190BS
Capacitor for EMC Filter Unit	SME35LGSN 68000	450071	0	0	0	2	2
Cooling Fan for ACL Unit	60-03177-00	926529	0	0	0	2	2

Decide the quantities of spare parts in consideration of the number of the connected units.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Outline Drawings of the Peripheral Devices

This chapter provides dimensional outline drawings of reactors, varistors, harmonic filters, line filters and EMC filter unit out of the peripheral devices to be connected to the 8720MC-RPS Regenerative Power Supply.

Outline Drawing of the Reactors

The figure below shows the dimensional outline drawing of the recommended reactors for Model 8720MC-RPS027BM, 8720MC-RPS065BM and 8720MC-RPS065BS units.

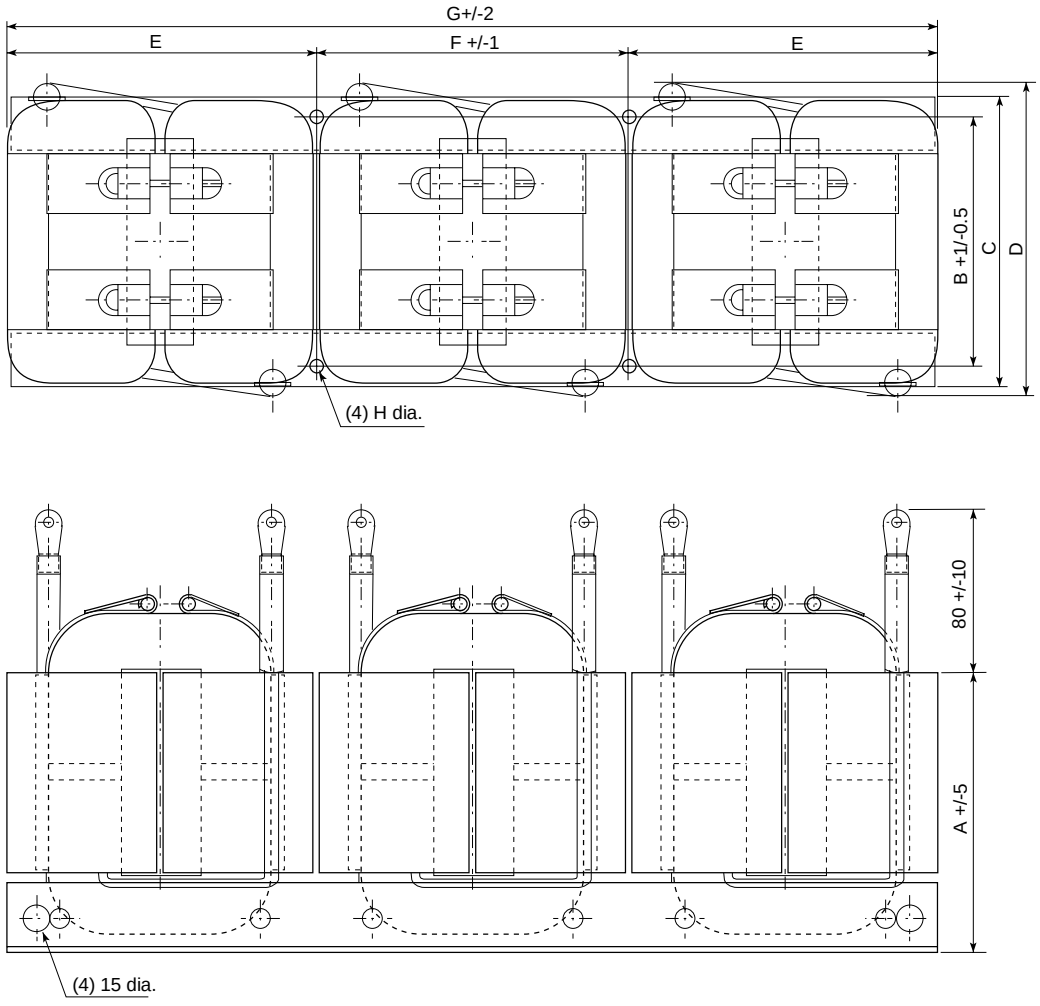


Model	Part Number	A	B	C	D	E	F	G	H	Weight [kg]
8720MC-LR14-070B	261301	140	125	145	Max. 180	155	150	460	9.5	38
8720MC-LR10-062B	261302	125	110	130	Max. 160	145	150	440	9.5	27
8720MC-LR05-048B	261303	125	105	125	Max. 155	132.5	135	400	7	21
8720MC-LR03-032B	261304	127	100	120	Max. 140	112.5	120	345	7	17

(Unit: Millimeters)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


The figure below shows the dimensional outline drawing of the recommended ACL units (AC reactor assemblies, Model 8720MC-LR10-100B) for Model 8720MC-RPS190BM and 8720MC-RPS190BS units.

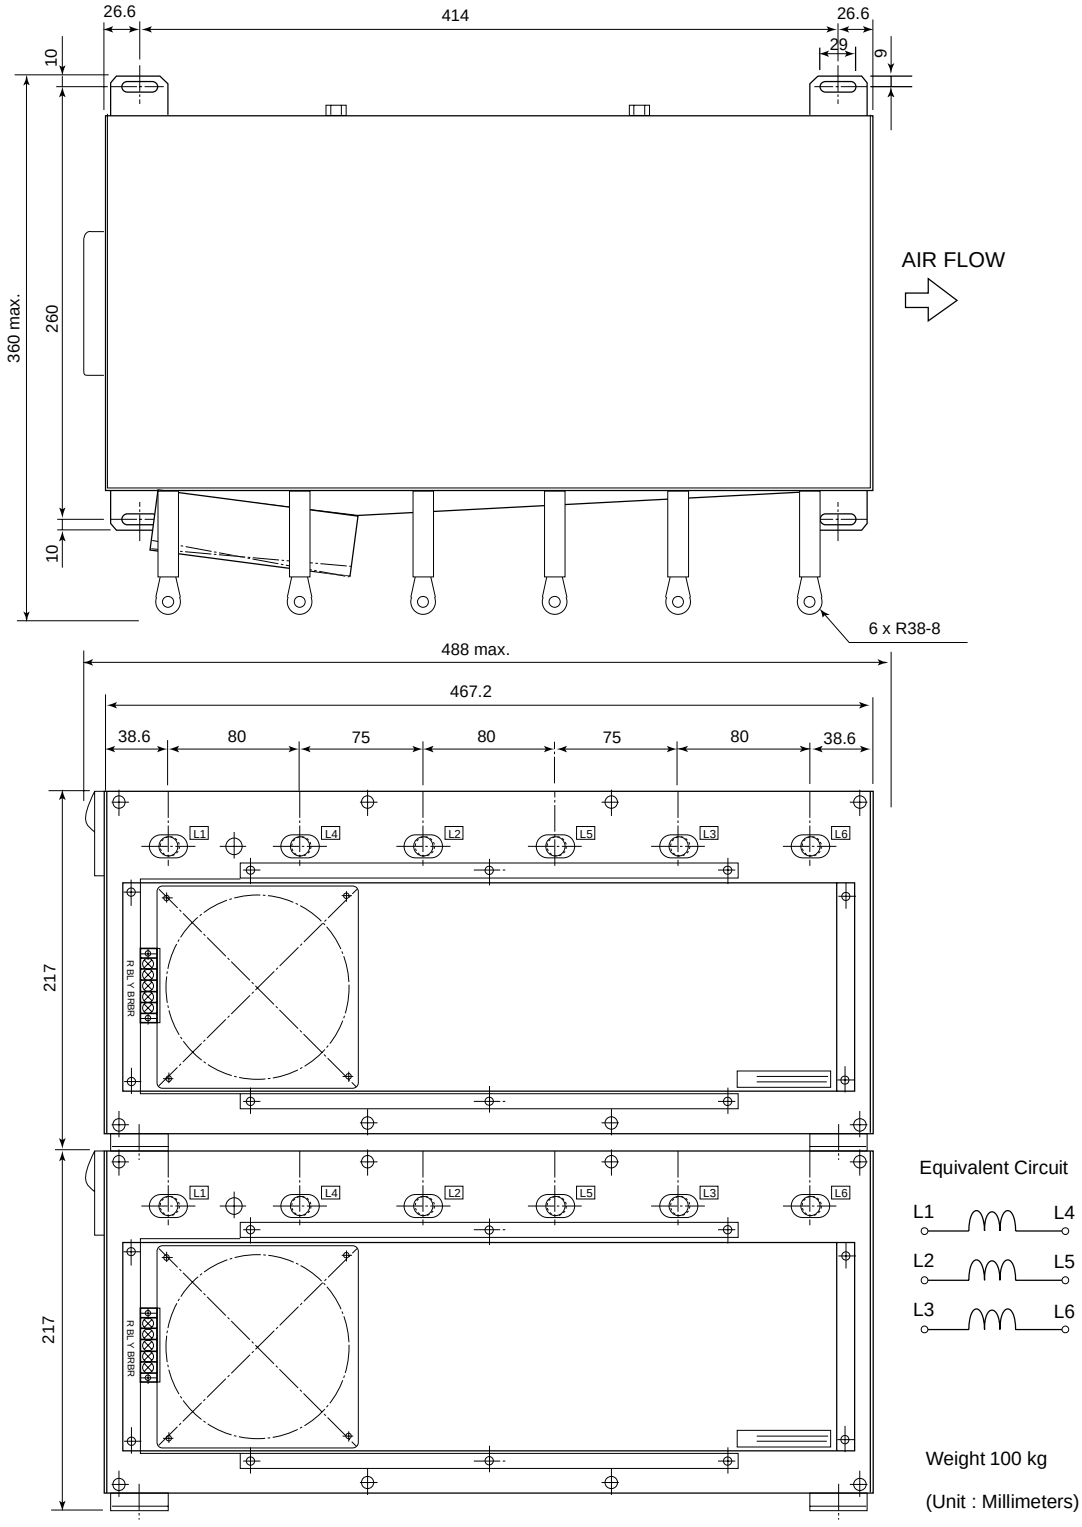

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Outline Drawing of the Varistors


The following figure shows the dimensional outline drawing of the varistors to be used for Model 8720MC-RPS027BM, 8720MC-RPS065BM and 8720MC-RPS065BS units.

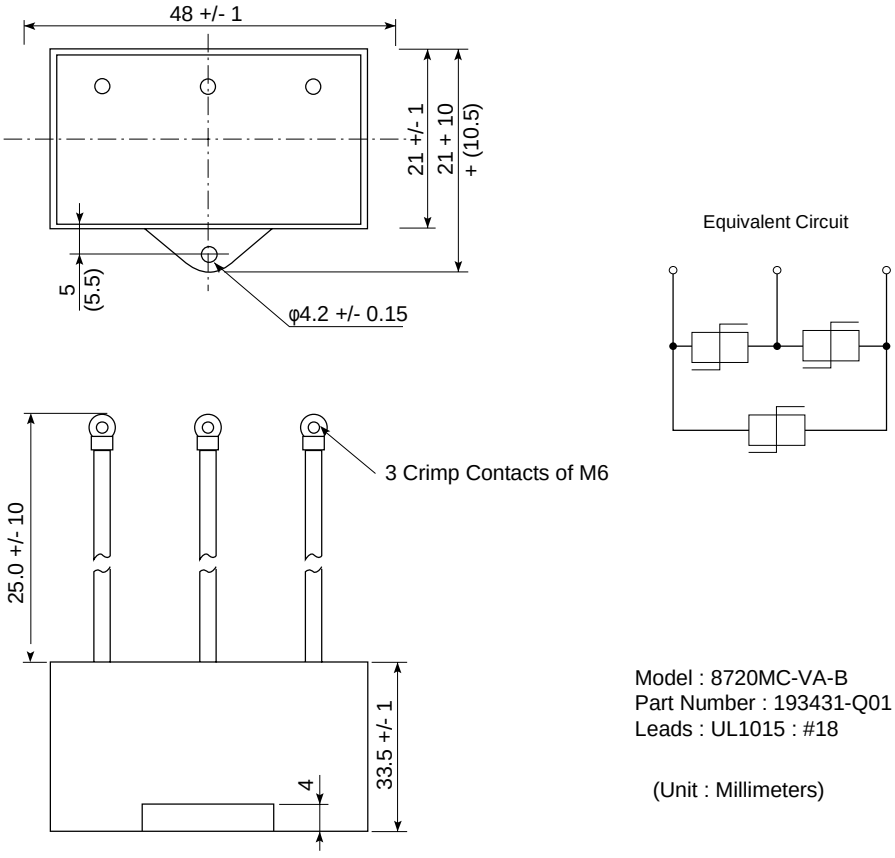



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Outline Drawing of the Harmonic Filters

The following figure shows the dimensional outline drawing of the recommended harmonic filters to be used for Model 8720MC-RPS027BM, 8720MC-RPS065BM and 8720MC-RPS065BS units.

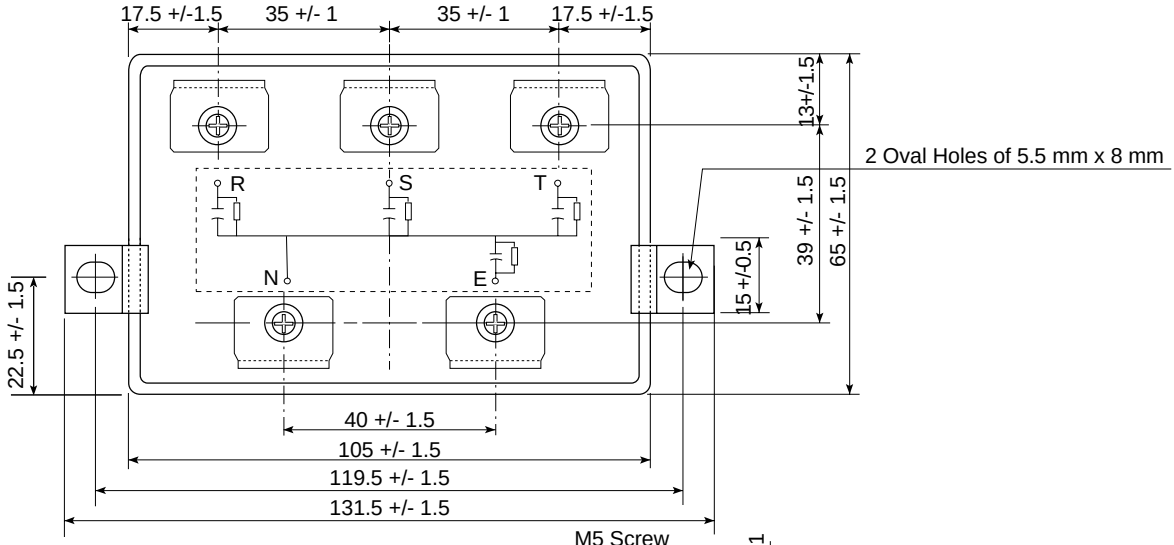

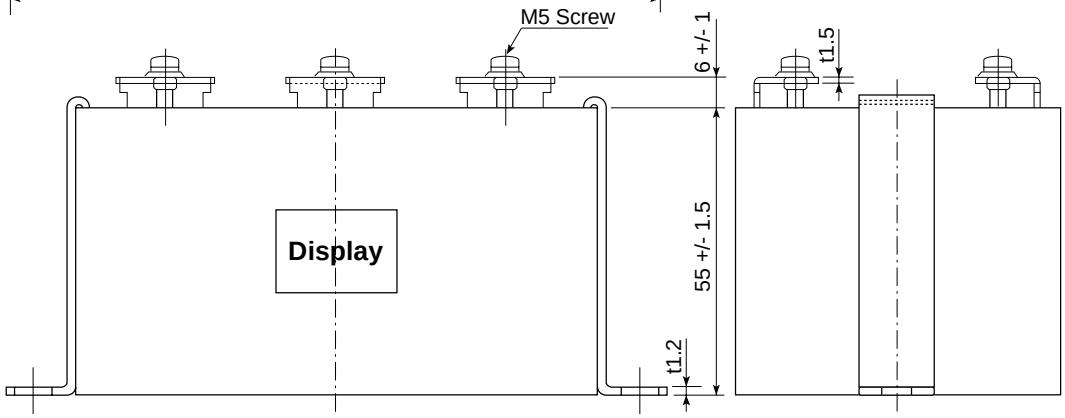

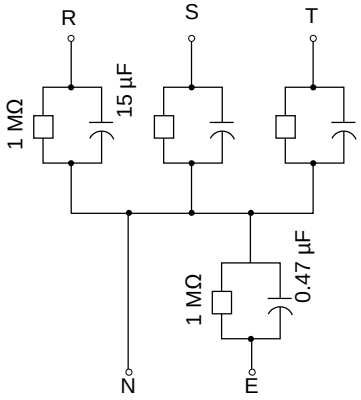


Equivalent Circuit

Model : 8720MC-HF-B2
Part Number : 193432-Q02
Note 1 : The N terminal is not usually used.

(Unit : Millimeters)


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

For your reference, the following figure shows the dimensional outline drawing of the harmonic filter used for Model 8720MC-RPS027BM, 8720MC-RPS065BM and 8720MC-RPS065BS units.

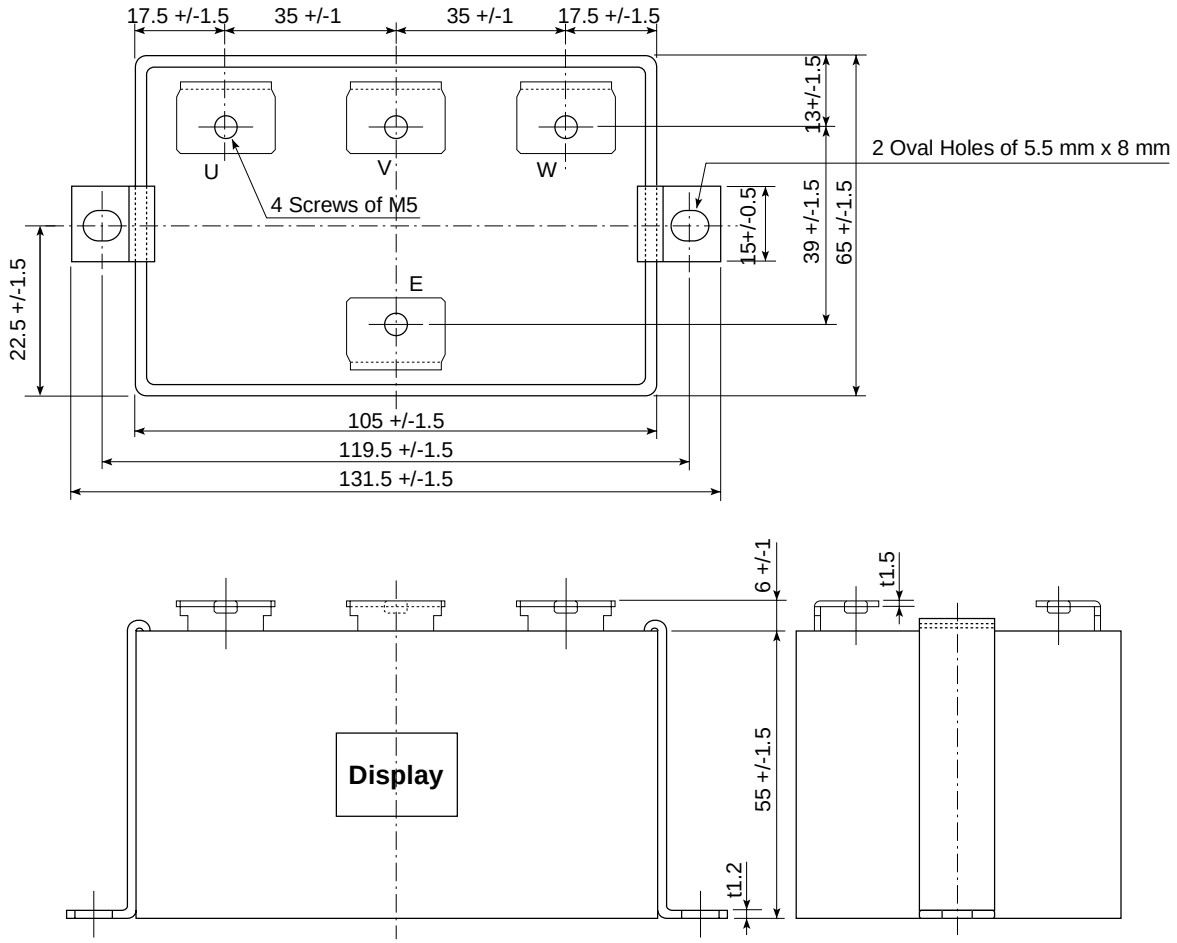

Model : 8720MC-HF-B
Part Number : 193432-Q01

(Unit: Millimeters)

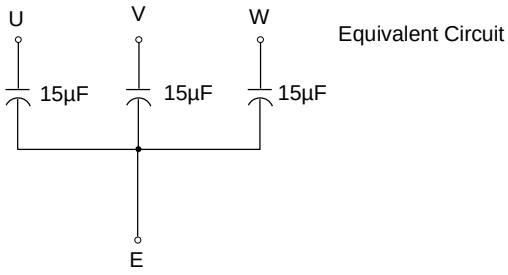


Equivalent Circuit

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Outline Drawing of the Line Filters

Figure 11.1 and 11.2 show the dimensional outline drawing of the recommended line filters for AC input power to be used for Model 8720MC-RPS027BM, 8720MC-RPS065BM and 8720MC-RPS065BS units when these units must conform with the requirements of CE Mark. Figure 11.1 shows Schaffner's products and Figure 11.2 shows Soshin Electric's product.

Figure 11.1
Dimensional Outline Drawing of the Recommended Line Filter of Schaffner for AC input power for Model 8720MC-RPS027 and 8720MC-RPS065 Units

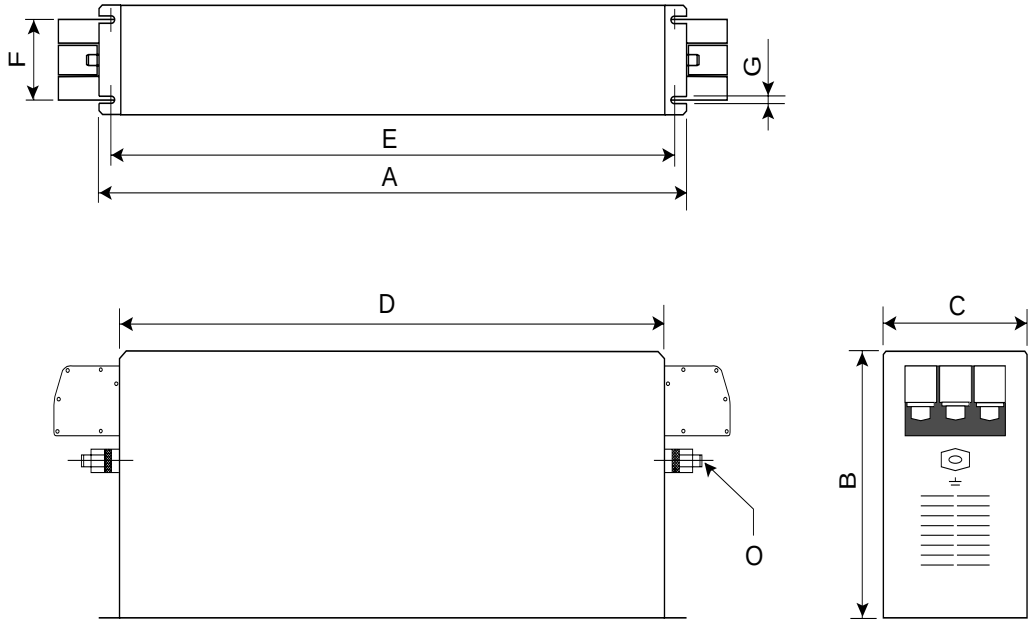


Model	A	B	C	D	E	F	G	O
FN3100-35-33	335+/-1	150+/-1	60+/-0.6	305+/-1	320	35	6.5	M5
FN3100-80-35	379	220	90	350	364	65	6.5	M10

(Unit: Millimeters)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 11.2
Dimensional Outline Drawing of the Recommended Line Filter of Soshin Electric for AC input power for Model 8720MC-RPS027 and 8720MC-RPS065 Units

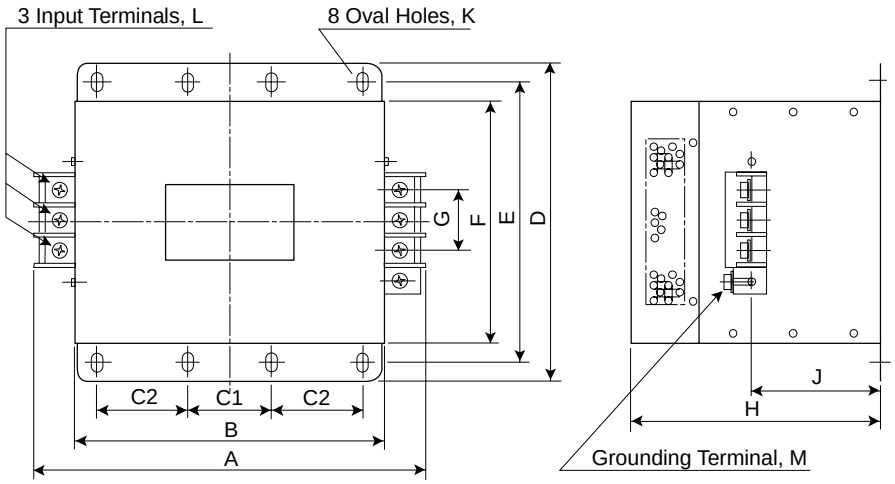

Model	A	B	C1	C2	D	E	F
HF3080C-TOA	405+/-5	350+/-2	100+/-1	100+/1	220+/-2	200+/-1	180+/-2
HF3030C-TMA	260	210	85	-	155	140	125

Model	G	H	J	K	L	M
HF3080C-TOA	56+/-1	210+/-2	135+/-2	4.25 mm R x 12 mm long	M8	M6
HF3030C-TMA	44	140	70	3.25 mm R x 8 mm long	M5	M4


(Unit: Millimeters)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

8720MC-EF190-VB EMC Filter Unit for Model 8720MC-RPS190BM and 8720MC-RPS190BS

Figure 11.3 shows the outline dimensions of Model 8720MC-EF190-VB EMC filter unit for Model 8720MC-RPS190BM and 8720MC-RPS190BS units. The Model 8720MC-EF190-VB unit includes the varistor, magnetic contactor, harmonic filter, line filter, grounding capacitor, fan and MC interface card and cable assembly for this unit. The connection diagram of Model 8720MC-EF190-VB EMC filter unit is shown in Figure 11.3.

Figure 11.3
Dimensional Outline Drawing of Model 8720MC-EF190-VB EMC Filter Unit

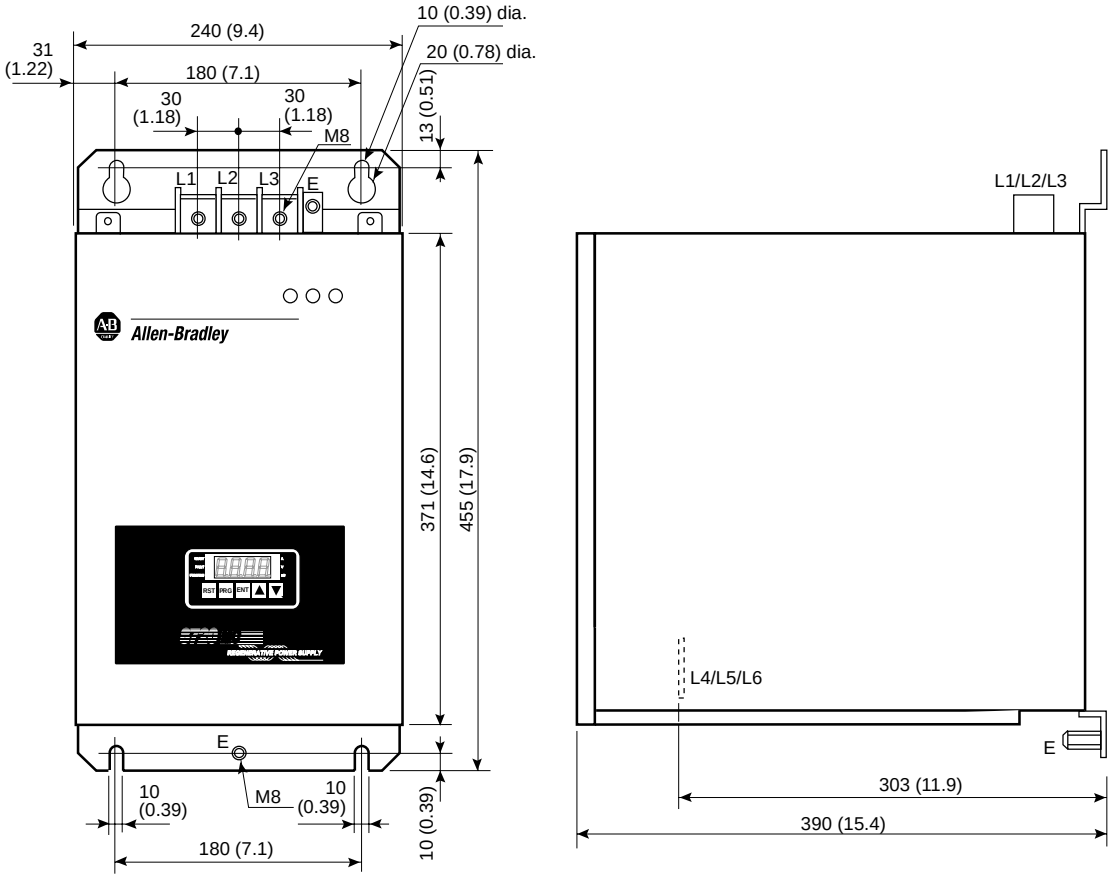


Weight : 34 kg

Unit: Millimeters (Inch)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Figure 11.4
Connection Diagram of Model 8720MC-EF190-VB EMC Filter Unit

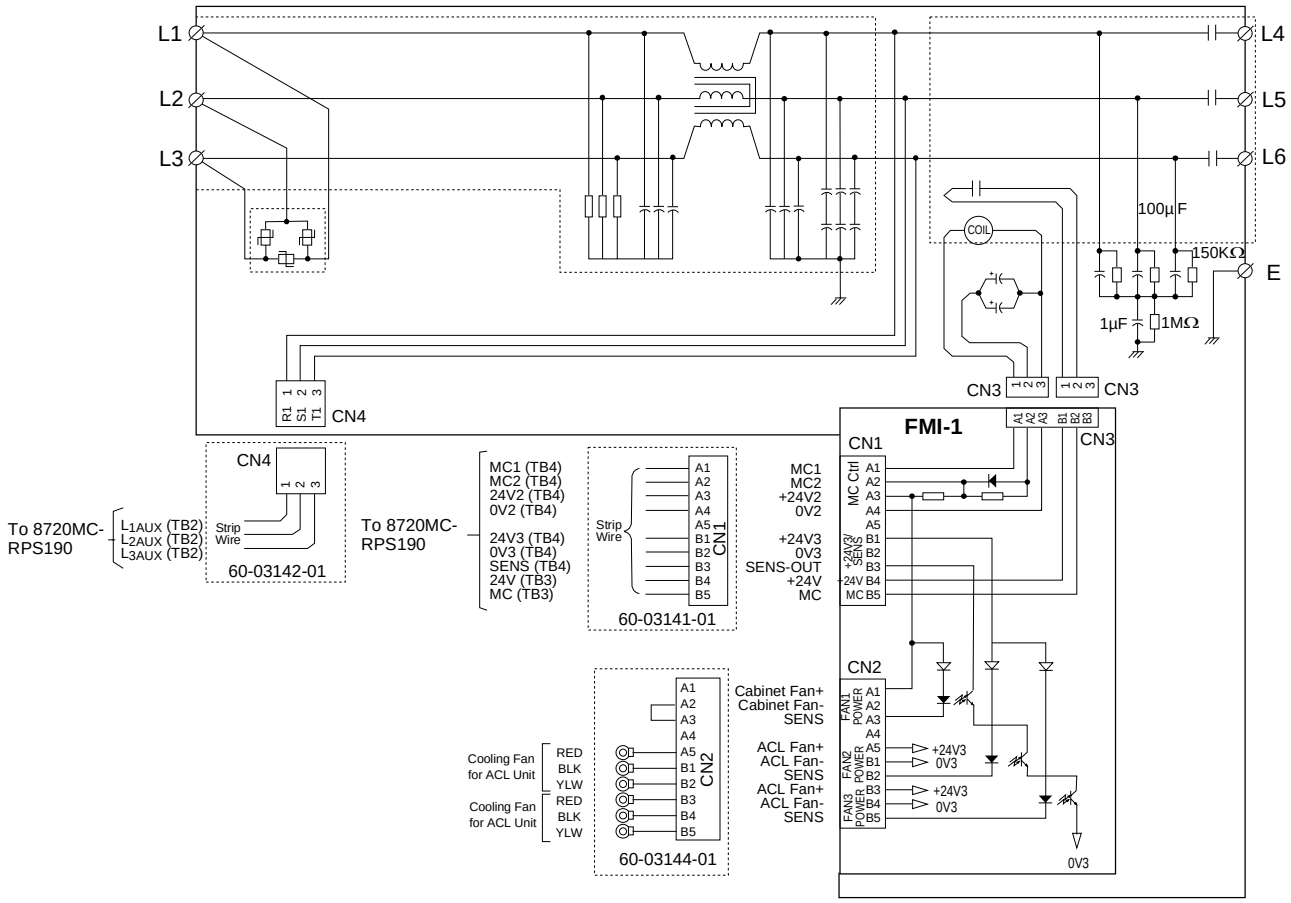

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

End of Chapter

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Technical Specifications

Specifications for 8720MC Regenerative Power Supply

Voltage Class		**15 kW Unit**	**37 kW Unit**			**125 kW Unit**		
Number of Units Connected in Parallel		Single Unit	Single Unit	2 Units in Parallel	3 Units in Parallel	Single Unit	2 Units in Parallel	3 Units in Parallel
Model Number		8720MC-RPS027BM	8720MC-RPS065BM	RPS065BM RPS065BS	RPS065BM RPS065BS RPS065BS	8720MC-RPS190BM	RPS190BM RPS190BS	RPS190BM RPS190BS RPS190BS
Capacity of Motor to be Applied (kW)		15	37	75	110	125	250	375
Input	**Rated Capacity of Power Supply (kVA)**	20	45	90	135	152	304	457
	Input Power Factor	0.95 or higher						
	Power Supply	380 to 460 VAC +10/-15%, 50/60 Hz +/- 5%						
	Rated Current (Arms)	28	65	130	195	190	380	570
	Maximum Current (1 min.) (Arms)	42	98	196	294	285	570	855
	PWM Carrier Frequency (kHz)	5, 10 (standard), and 15				5 (standard), 10 and 15		
Output	**Rated Output Capacity (kVA)**	19	45	90	135	133	266	399
	Voltage (V)	750 (standard)						
	Rated Current (A)	27	64	128	192	190	380	570
	Maximum Current (1 min.) (A)	40.5	96	192	288	285	570	855
	Bus Capacitance (μF)	990	1900	1900 x 2	1900 x 3	7600	7600 x 2	7600 x 3
Protection Functions		Overcurrent, overload, overvoltage, low voltage, and phase loss						
Output Signals		RDY signal, FR signal, instantaneous power loss signal, and main magnetic contactor reference contact						
Monitor Display (WITH four character seven-segment LED)		Input current, input power supply voltage, DC bus voltage, power and load ratio						
Input Signals		RUN signal, RESET signal, and answer-back signal of main magnetic contactor						
Environment	**Place of Installation**	In a control cabinet (kept away from corrosive and dangerous gas)						
	Ambient Temp. (In use)	-10 to 50 degree C (14 to 122 degree F)				-10 to 40 degree C (14 to 104 degree F),		
	Ambient Temp. (Stored)	-40 to 65 degree C (-40 to 149 degree F)				-40 to 65 degree C (-40 to 149 degree F)		
	Heat Dissipation (kW)	0.5	1.1	1.1 x 2	1.1 x 3	4.0	4.0 x 2	4.0 x 3
	Ambient Humidity	5 to 95% (non-condensation)						
	Elevation	Lower than 1,000 meters (3,300 feet) above sea level						
	Vibration	Less than 1 G (25 Hz)						
	Shock	Less than 2 G						
Weight (kg (lbs))		11.0 (24.3)	13.5 (29.7)	13.5 x 2 (29.7 x 2)	13.5 x 3 (29.7 x 3)	48.5 (108)	48.5 x 2 (108 x 2)	48.5 x 3 (108 x 3)

Note 1: The above specifications are those for the power supply of 400 Vrms AC (or 200 Vrms AC). If you continuously use the unit under a lower voltage than those stated, derating is required.

2: In case of units connected in parallel, derating is required proportionally to the fluctuation (dispersion) of inductances of AC reactors connected to phases.

3: The values of the input power factor are those at the rated current of the units.

4: When you desire to install a unit above 1,000 meters (3,300 feet), derate 4% for every 300 meters (1,000 feet) above 1,000 meters (3,300 feet). If you install a unit above 1,500 meters (5,000 feet), contact Reliance Electric.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

End of Appendix

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Default Parameter Settings

Default Parameter Settings Depending on the Unit and Number of Units Connected in Parallel

Parameter Number	Parameter Name	Unit	Unit Capacity					
			8720MC-RPS027	8720MC-RPS065			8720MC-RPS190	
			Single Unit	Single Unit	2 Units in Parallel	3 Units in Parallel	Single Unit	2 Units in Parallel	3 Units in Parallel
F.001	Unit Selection		027.b	065.b	130.b	195.b	190.b	380.b	570.b
F.002	Rated Current	Amps	28	65	130	195	190	380	570
F.013	AC Reactor Capacity	µH	850	1200			400		
F.015	Wattage of Precharge/Discharge Resistor	W	80	120			400		

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Default Settings of All Parameters

Parameter Number		Parameter Name	Setting Range	Default Value	User's Setting	
					Setting	Date
User Parameters	U.000	DC Bus Voltage Reference	275 to 750 V	750 V		
	U.001	FWD Current Limit	0 to 150%	150%		
	U.002	REV Current Limit	0 to 150%	150%		
Factory Parameters	F.000	Password	0 to 999	0		
	F.001	Unit Selection	027.b 065.b 130.b 190.b 195.b 380.b 570.b	28 Amps 65 Amps 130 Amps 190 Amps 195 Amps 380 Amps 570 Amps		
	F.002	Rated Current	027.b: 10 to 35Amps 065.b: 10 to 70 Amps 130.b: 20 to 140 Amps 190.b: 30 to 210 Amps 195.b: 30 to 215 Amps 380.b: 60 to 430 Amps 570.b: 90 to 645 Amps	027.b: 28 Amps 065.b: 65 Amps 130.b: 130 Amps 190.b: 190 Amps 195.b: 195 Amps 380.b: 380 Amps 570.b: 570 Amps		
	F.003	Current Control Proportional Gain	0.01 to 10.0 times	1.00 times		
	F.004	Current Control Integral Gain	1 to 3,000 rad/sec	64 rad/sec		
	F.005	Voltage Control Proportional Gain	0.01 to 30.00 times	5.00 times		
	F.006	Voltage Control Integral Gain	1 to 3,000 rad/sec	128 rad/sec		
	F.007	Bus Overvoltage Detection Level	325 to 900 V	800 V		
	F.008	Bus Low Voltage Detection Level	200 to 600 V	400V		
	F.009	AC Overvoltage Detection Level	200 to 550 V	550 V		
	F.010	Carrier Frequency	5, 10 and 15 kHz	10 kHz: For Model 8720MC-RPS027 and 8720MC-RPS065 5 kHz: For Model 8720MC-RPS190		
	F.011	Deadtime	1.5 to 15.0 microseconds	6.0 microseconds		
	F.012	Allowable Time for Instantaneous Power Loss	0.05 to 3.00 seconds	0.50 seconds		
	F.013	AC Reactor Capacity	100 to 8,000 micro-henry	See the previous section.		
	F.014	Precharge/Discharge Time	0.5 to 15.0 seconds	3.0 seconds (3)		
	F.015	Wattage of Precharge/Discharge Resistor	50 to 2,000 W	See the previous section.		
	F.016	DC Bus Voltage Offset (1)	0.900 to 1.100	1.000		
	F.017	Discharge Function Enable (1)	OFF, On	On		
	F.018	Version Information				
	F.019	Selecting of Wiring Error (LE) Detecting Function (2)	OFF, On	On		

(1) These parameters are available from software version No. 2.00 or later only.
(2) This parameter is available from software version No. 3.00 or later only.
(3) This parameter must be set to 6.0 seconds for 8720MC-RPS190 unit.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Control Block Diagram

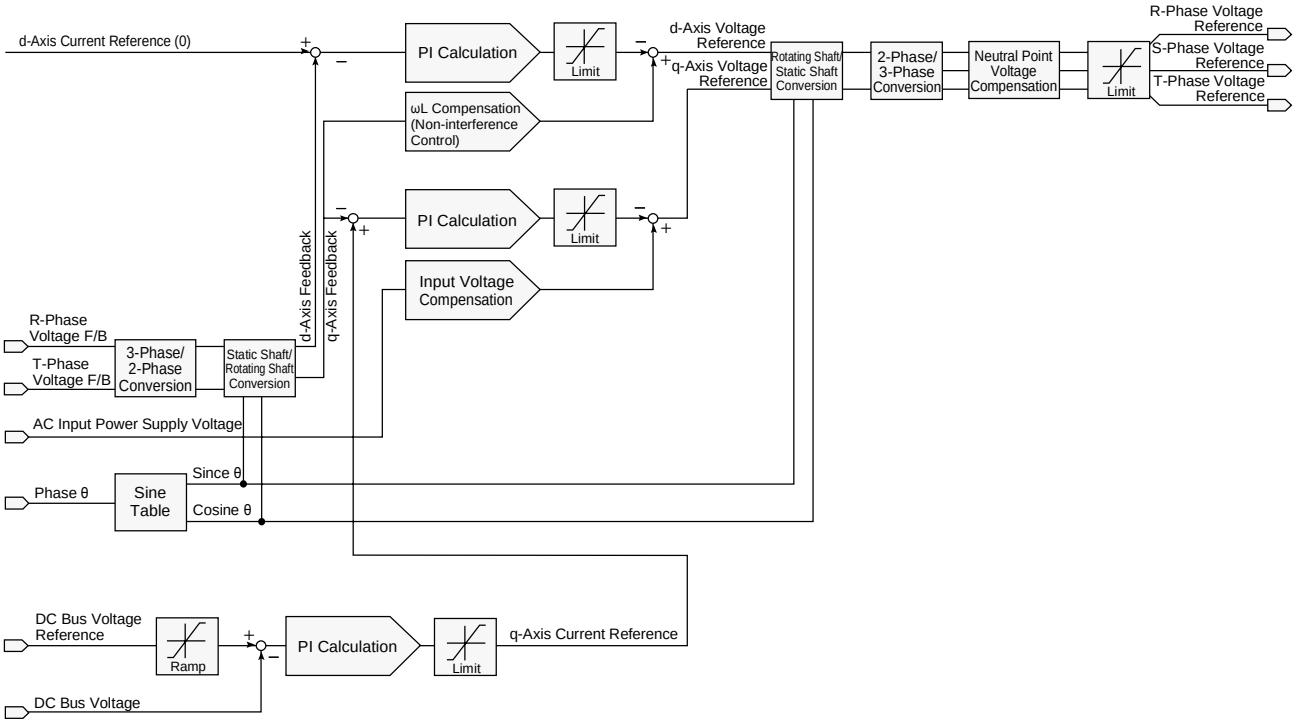

End of Appendix

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444
Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640
Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 8720MC-RM001C-US-P, Nov 01

© 2001 Rockwell International Corporation. Printed in Japan

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP