

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Visit our website - *Click HERE*

DM6854
Isolated Digital I/O dataModule
User's Manual



BDM-610010032
Rev. C



RTD Embedded Technologies, Inc.
103 Innovation Blvd.
State College, PA 16803-0906

Phone: +1-814-234-8087
FAX: +1-814-234-5218

E-mail
sales@rtd.com
techsupport@rtd.com

web site
http://www.rtd.com

Copyright 1999-2012 RTD Embedded Technologies, Inc.
All rights reserved

The RTD Logo is a registered trademark of RTD Embedded Technologies. cpuModule and dataModule are trademarks of RTD Embedded Technologies. PC/104 is a registered trademark of PC/104 Consortium. All other trademarks appearing in this document are the property of their respective owners.

Manual Revision History

Rev. A	New RTD USA Manual	
Rev. B	RTD ISA ID added Added AS9100 Information Updated board photo to current PCB revision Updated jumper diagrams to match Added information on CN9 Replaced PC/104 connector pinout with a link to PC/104 Consortium Corrected description of isolated input inversion Added Dimension Drawing	
Rev. C	Added opto I/O detail drawings. Changed opto-output current specification to 4mA minimum, 8mA typical.	November 5, 2012

TABLE OF CONTENTS

CHAPTER 1 INTRODUCTION 6

FEATURES 6
GENERAL PURPOSE DIGITAL I/O 6
ISOLATED DIGITAL INPUTS 6
ISOLATED DIGITAL OUTPUTS 6
MECHANICAL DESCRIPTION 6
CONNECTOR DESCRIPTION 7
WHAT COMES WITH YOUR BOARD 7
BOARD ACCESSORIES 7
USING THIS MANUAL 7
WHEN YOU NEED HELP 7

CHAPTER 2 CONFIGURING THE DATAMODULE 8

FACTORY-CONFIGURED JUMPER SETTINGS 8
BASE ADDRESS (JP9) 8
INTERRUPT CHANNEL (JP10) 9
PD/PU PULL-UP OR PULL-DOWN RESISTOR SELECTION 10
IN1-IN8 OPTOCOUPLER INPUT RANGE 10

CHAPTER 3 INSTALLING THE DATAMODULE 12

RECOMMENDED PROCEDURE 12

CHAPTER 4 CONNECTING THE DATAMODULE 13

FINDING PIN 1 OF CONNECTORS 13
ISOLATED I/O CONNECTIONS, JP15 & JP16 13
EXPANSION INTERFACE CONNECTIONS, JP14 14
PC/104 BUS CONNECTORS, CN1 AND CN2 15
RESERVED CONNECTOR, CN9 15

CHAPTER 5 HARDWARE DESCRIPTION 16

DIGITAL I/O, PROGRAMMABLE PERIPHERAL INTERFACE (PPI) 16
ISOLATED OPTOCOUPLER INPUTS 17
Input Protection 17
Optocouplers 17
Input bit mask stage 17
Input bit inverter stage 17
ISOLATED OPTOCOUPLER OUTPUTS 18
Output data register 18
Schmidt triggers 18
Optocouplers 18
TRIGGER OUTPUT 18
INTERRUPTS 18

CHAPTER 6 BOARD OPERATION AND PROGRAMMING 19

DEFINING THE I/O MAP 19
BA+0 Digital input register (Write) 19
BA+0 Digital inputs (Read) 19
BA+1 Input mask register (Read / Write) 0 after reset 19
BA+2 Input inversion register (Read / Write) 0 after reset 19
BA+3 Configuration / digital output register (Read / Write) 0 after reset 20
BA+4 PPI Port A (Read/Write) 20

BA+5 PPI Port B (Read/Write) *20*
BA+6 PPI Port C (Read/Write) *20*
BA+7 PPI Control Byte (Write only) *20*
BA + 400h/BA + 401h RTD ID Data (read only, 8-bit or 16-bit) *21*
BA + 402h RTD ID Reset Pointer (read only, 8-bit only) *21*
RTD ID Data Read Indexes *21*
PROGRAMMING THE DM6854HR 22
Clearing and setting bits in an I/O port *22*
Initializing the 8255 PPI *22*
Isolated digital input programming *23*
Software controlled direct read 23
Interrupt driven read upon change in bits 23
Isolated digital output programming *23*
Trigger output programming *24*
Interrupts *24*
What is an interrupt? 24
Interrupt request lines 24
8259 Programmable Interrupt Controller 24
Interrupt Mask Register (IMR) 24
End-of-Interrupt (EOI) Command 25
What exactly happens when an interrupt occurs? 25
Using Interrupt in your Program 25
Writing an Interrupt Service Routine (ISR) 25
Saving the Startup Interrupt Mask Register (IMR) and interrupt vector 26
Common Interrupt mistakes 27
Example of Interrupt vector table setup in C-code: 27

CHAPTER 7 SPECIFICATIONS 29

GENERAL SPECIFICATIONS 29
Interface *29*
Digital I/O (non isolated) *29*
Digital inputs (isolated) *29*
Digital outputs (isolated) *29*
Connectors *29*
DC CHARACTERISTICS 30
DIMENSION DRAWING 31

CHAPTER 8 RETURN POLICY AND WARRANTY 32

RETURN POLICY 32
LIMITED WARRANTY 33

Chapter 1 INTRODUCTION

This user's manual describes the operation of the DM5854HR/DM6854HR Isolated Digital Interface board.

Features

- 8 channel-by-channel isolated digital inputs with masking modes
- 4 Optocoupled digital outputs with open collector configuration, 30V range
- 24 non isolated TTL/CMOS compatible 8255-based digital I/O lines
- Optional Pull-up or Pull-down resistors
- Software enabled interrupts XT and AT interrupts available
- Single +5V operation
- Support for direct PC/104 interface with RTD dataModules®
- XT (DM5854HR) and AT (DM6854HR) boards available
- PC/104 compliant
- RTD IDAN compatible

The following paragraphs briefly describe the major features of the DM6854HR. A more detailed discussion is included in Chapter 5 (Hardware description) and in Chapter 6 (Board operation and programming. The board setup is described in Chapter 2 (Configuring the dataModule).

General purpose digital I/O

The DM6854HR board has 24 8255-based TTL/CMOS compatible general purpose digital I/O lines which can be directly interfaced with external devices or signals to interface to alphanumerical displays, sense switch closures, trigger digital events, or activate solid-state relays. These lines may be pulled down or pulled up or pulled down with 10K Ohm resistor networks. Installation procedures will be described later in this manual.

Isolated digital inputs

Eight optocoupler inputs may be used to connect high voltage signals to a computer. Eight channel-by-channel jumper configurable input ranges are available: +5V, +12V and +24V. The optocoupler inputs have a reverse voltage protection diode across the input. This enables AC-signals to be connected to the isolated optocoupler inputs. This input diode also acts as a rectifier. The programmable functions of the DM6854HR enable input masking and input pattern recognition with interrupts. This relieves the host computer from processor capacity consuming input polling.

Isolated digital outputs

Four open collector optocoupler outputs may be used to directly drive loads such as switches or relays with voltages up to 30V DC.

Mechanical description

The DM6854HR is designed on a PC/104 form factor. An easy mechanical interface to both PC/104 and PC/104-*Plus* systems can be achieved. Stack your PC/104 compatible computer directly on the DM6854HR using the onboard mounting holes. A dimension drawing with connector locations is provided in Chapter 7.

Connector description

There is a 50 pin digital interface connectors on the DM6854HR to directly interface to the non-isolated 8255-based digital I/O signals. The signal definition of this connector is compatible with the digital PC/104 dataModules manufactured by RTD.

Isolated outputs and inputs are connected to the DM6854HR by either a screw terminal discrete wire connector, or with a 50-pin flat ribbon cable header connector. Use this type of interface connector with a TB50 screw terminal block. Please consult the factory for more details on different connector options.

What comes with your board

You receive the following items in your DM6854HR package:

- DM6854HR Isolated digital interface module
- Companion CD

Notes: Latest software and drivers can be downloaded from our website.

If any item is missing or damaged, please contact RTD Embedded Technologies.

Board accessories

Several software and hardware accessories are available for the DM6854. Call your distributor for more information on these accessories and for help in choosing the best items to support your control system,

- Application software and drivers
- Hardware accessories such as IDAN aluminum enclosure systems. For more information in IDAN please visit our websites at **www.rtd.com**.
- Power Supplies
- Terminal Adapter Board (TB50)

Using this manual

This manual is intended to help you install your new DM6854HR card and get it running quickly, while also providing enough detail about the board and its functions so that you can enjoy maximum use of its features even in the most demanding applications.

When you need help

This manual and all the example programs will provide you with enough information to fully utilize all the features on this board. If you have any problems installing or using this board, contact our Technical Support Department (814) 234-8087 during EST business hours, or send an Email to techsupport@rtd.com. When sending an Email request, please include your company's name and address, your name, your telephone number, and a brief description of the problem.

Chapter 2 CONFIGURING THE DATAMODULE

The following sections contain information on configuring the dataModule. Please read this entire section before attempting to use the dataModule. The DM6854HR Isolated digital I/O board has jumper settings that you can change to suit your application and I/O configuration setup.

Factory-Configured Jumper Settings

Table 2.1 illustrates the factory jumper setting for the DM6854HR. Figure 2.1 shows the board layout and the locations of the jumpers. The following paragraphs explain how to change the factory jumper settings to suit your specific application.

Table 2.1: Factory Default Jumper Settings

Jumper Name	Description	Number of Jumpers	Factory Default
BASE (JP9)	Base Address	5	0x300
IRQ (JP10)	Interrupt Selection	12 (11+1)	IRQ5, G
PD/PU	Pullup or Pulldown for PPI Ports	3-terminal (4x)	Pulldown
IN1-8	Input Range for Isolated input 1-8	3 (8x)	+24V

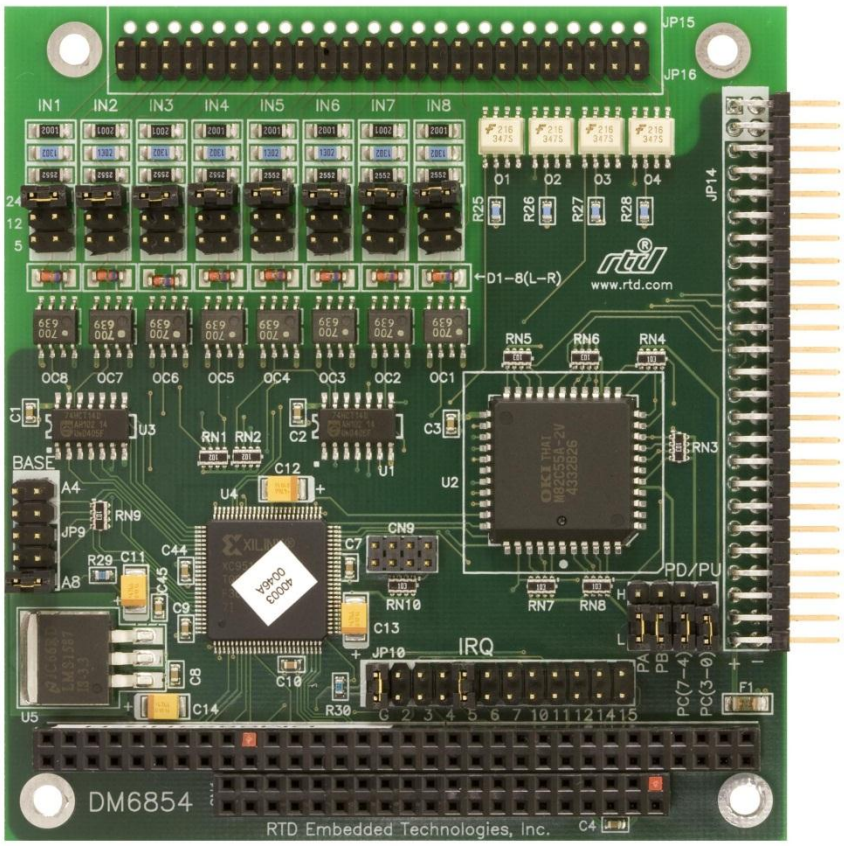


Figure 2.1: Board layout showing jumper locations

Base Address (JP9)

(Factory setting: 300h)

The most common cause of failure when you are first setting up your module is address contention. Some of your computers I/O space is already occupied by other internal I/O devices and expansion boards. When the DM6854HR attempts to use its reserved I/O addresses already used by another peripheral device erratic performance may occur and data read from the board may be corrupted.

To avoid this problem make sure you set up the base address first using the jumpers marked "BASE" which let you choose from 32 different I/O addresses in your computers I/O map. Should the factory installed setting of 300H be unusable for your system configuration, you may change this setting to another using the options illustrated in Table 2.2. The table shows the jumper settings and their corresponding I/O address in values hexadecimal and decimal. Make sure you verify the correct location of the base address jumpers

Table 2.2: Base Address Jumper Settings

Base Address Hex / (Decimal)	Jumper Settings A8 – A4	Base Address Hex / (Decimal)	Jumper Settings A8 – A4
200/(512)	00000	300/(768)	10000
210/(528)	00001	310/(784)	10001
220/(544)	00010	320/(800)	10010
230/(560)	00011	330/(816)	10011
240/(576)	00100	340/(832)	10100
250/(592)	00101	350/(848)	10101
260/(608)	00110	360/(864)	10110
270/(624)	00111	370/(880)	10111
280/(640)	01000	380/(896)	11000
290/(656)	01001	390/(912)	11001
2A0/(672)	01010	3A0/(928)	11010
2B0/(688)	01011	3B0/(944)	11011
2C0/(704)	01100	3C0/(960)	11100
2D0/(720)	01101	3D0/(976)	11101
2E0/(736)	01110	3E0/(992)	11110
2F0/(752)	01111	3F0/(1008)	11111

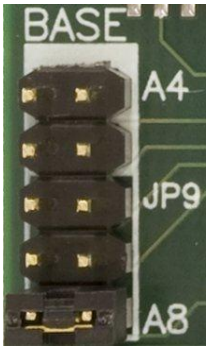


Figure 2.2: Base Address jumper block (A4 to top, A8 to bottom; open = 0, closed = 1)

Interrupt channel (JP10)

(Factory setting: IRQ5, G)

The header connector, shown on Figure 2.3 lets you connect the board interrupt to one of the 6 interrupt channels available on the XT/AT-bus. The "G" setting installs a pull-down resistor on the selected interrupt. The "G" jumper is used to share an IRQ line between multiple devices.

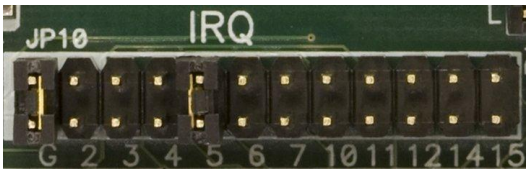


Figure 2.3: Interrupt Selection Jumpers

Note: There must be exactly one "G" jumper installed on any interrupt line.

The interrupt is caused by an external trigger event that has transferred the storage latch data to the output latch of the isolated digital output stage.

PD/PU Pull-up or Pull-down resistor selection

(Factory setting: PA, PB and PC pulled "Low")

The 8255 programmable digital I/O interface provides 24 TTL/CMOS compatible lines which can be interfaced with external devices. These lines are divided into three groups: eight Port A lines, eight Port B lines and eight Port C lines. You can connect pull-up or pull-down resistor networks for ports A, B and C. There is a separate jumper for the upper four lines of Port C, and one for the lower four lines. You may want to pull lines up for connection with switches. This will pull the lines high if the switch is disconnected. Or you may want to pull lines down for connection to relays which control turning motors on or off. The port A, B, and C lines of the 8255 programmable digital I/O interface are set as inputs after reset. This can cause the external devices connected to these lines to operate erratically. Pulling these lines down, when the board is powered up the lines will not be active before the 8255 is initialized. Figure 2.4 shows both Ports A, B and C set in the Pull-down configuration.

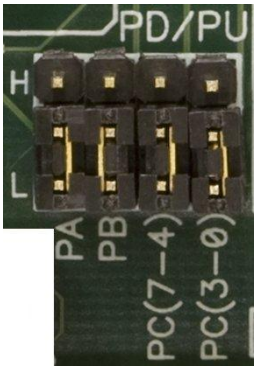


Figure 2.4: Pull-up and Pull-down jumpers for Ports A, B and C.

IN1-IN8 Optocoupler Input Range

(Factory setting: +24V range)

The Optocoupler inputs can be jumper configured for different input ranges. Each channel can be set for a different range. The different ranges use different current limiting resistors at the optocoupler diode input. Make sure you set the range correctly since overloading the optocoupler with over current may cause permanent damage to the device. All the channels are set in a similar manner. Figure 2.5 illustrates one channel set for a 24V-level input signal. The jumper topmost

toward the spring loaded connectors selects +24V input range, the middle position +12V and the bottom most (toward the center of the board) +5V.

The optocoupler forward current is 0.13 mA for switching.



Figure 2.5: Optocoupler Input Range Jumpers set for 24V input range

Chapter 3 INSTALLING THE DATAMODULE

Recommended Procedure

We recommend you follow the procedure below to ensure that stacking of the modules does not damage connectors or electronics.

- Turn off power to the PC/104 system or stack.
- Select and install standoffs to properly position the dataModule on the PC/104 stack.
- Touch a grounded metal part of the stack to discharge any buildup of static electricity.
- Remove the dataModule from its anti-static bag.
- Verify the jumper settings of the dataModule.
- Check that keying pins in the PC/104 bus connector are properly positioned.
- Hold the dataModule by its edges and orient it so the bus connector pins line up with the matching connector on the stack.
- Gently and evenly press the dataModule onto the PC/104 stack.

CAUTION: Do not force the module onto the stack! Wiggling the module or applying too much force may damage it. If the module does not readily press into place, remove it, check for bent pins or out-of-place keying pins, and try again.

Chapter 4 CONNECTING THE DATAMODULE

The following sections describe connectors of the dataModule.

Finding Pin 1 of Connectors

A white area silk-screened on the PC board indicates the pin 1 end of connectors. A square solder pad visible on the bottom of the PC board also indicates it.

Please make certain you have correctly identified pin 1 of a connector before you connect to it and attempt to use the dataModule.

Isolated I/O connections, JP15 & JP16

The pin assignments for the isolated I/O are shown in Table 4.1. The DM6854 is available with either a terminal block connection, or a 48 pin header connection. In the 48 pin header configuration, each column of the header is connected to the same signal, i.e. pin 1 and 2 are both IN1+.

Pin 1 is to the left side of the connector (when board is oriented as in Figure 2.1).
ALL SIGNALS ARE ISOLATED

Table 4.1: Isolated I/O Pin Assignments

Terminal Block Pin	Header Pin	Description
1	1,2	IN1+
2	3,4	IN1-
3	5,6	IN2+
4	7,8	IN2-
5	9,10	IN3+
6	11,12	IN3-
7	13,14	IN4+
8	15,16	IN4-
9	17,18	IN5+
10	19,20	IN5-
11	21,22	IN6+
12	23,24	IN6-
13	25,26	IN7+
14	27,28	IN7-
15	29,30	IN8+
16	31,32	IN8-
17	33,34	OUT1_COLLECTOR
18	35,36	OUT1_EMITTER
19	37,38	OUT2_COLLECTOR
20	39,40	OUT2_EMITTER
21	41,42	OUT3_COLLECTOR
22	43,44	OUT3_EMITTER
23	45,46	OUT4_COLLECTOR
24	47,48	OUT4_EMITTER

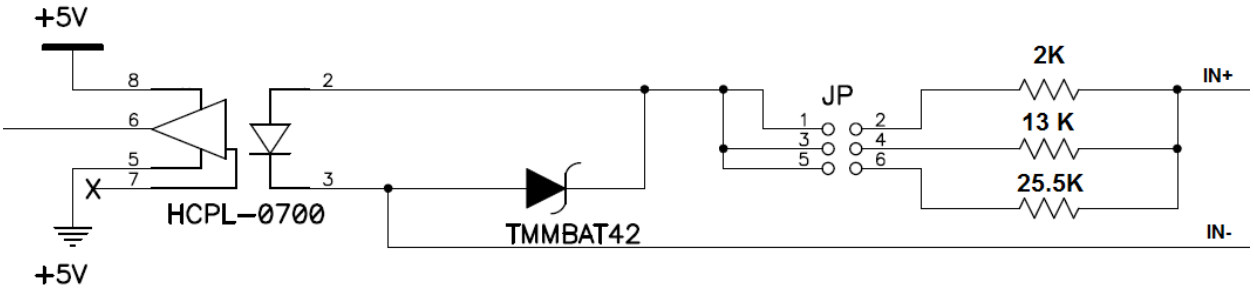


Figure 6 - Opto-input Detail

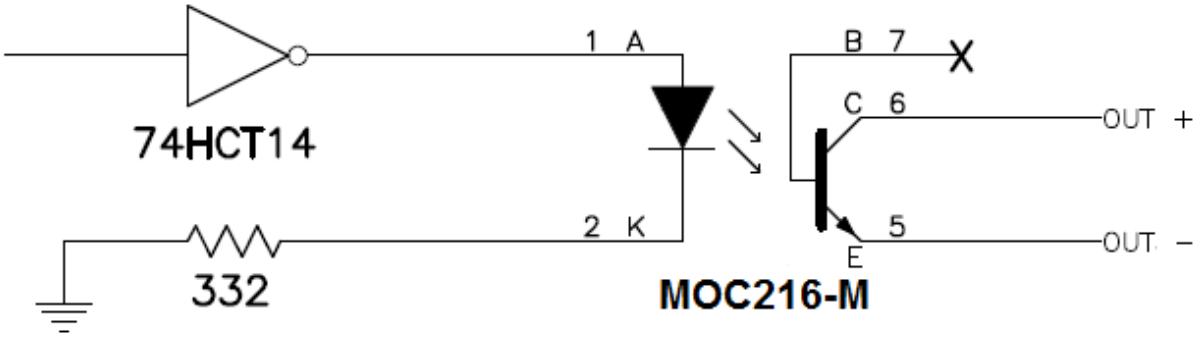


Figure 7 - Opto-output Detail

Expansion Interface Connections, JP14

Figure 2-4 shows the 50-pin expansion interface connector layout of the DM6854HR. This connector is used to interface to the non-isolated 8255 based digital I/O signals.

Table 4.2: 50-pin expansion interface connector pinout

Pin	Description	Description	Pin
1	Port_C(0)	Ext_Trigger(Output)	2
3	Port_C(1)	GND	4
5	Port_C(2)	GND	6
7	Port_C(3)	GND	8
9	Port_C(4)	GND	10
11	Port_C(5)	GND	12
13	Port_C(6)	GND	14
15	Port_C(7)	GND	16
17	Port_B(0)	GND	18
19	Port_B(1)	GND	20
21	Port_B(2)	GND	22
23	Port_B(3)	GND	24
25	Port_B(4)	GND	26
27	Port_B(5)	GND	28
29	Port_B(6)	GND	30
31	Port_B(7)	GND	32
33	Port_A(0)	GND	34

35	Port_A(1)	GND	36
37	Port_A(2)	GND	38
39	Port_A(3)	GND	40
41	Port_A(4)	GND	42
43	Port_A(5)	GND	44
45	Port_A(6)	GND	46
47	Port_A(7)	GND	48
49	+5V(fused)	GND	50

PC/104 Bus Connectors, CN1 and CN2

Connectors CN1 and CN2 provide PC/104 bus connections. CN1 carries XT bus signals, and CN2 carries additional signals for the AT bus. The signals on CN1 and CN2 conform to the IEEE P966 standard for the PC/104 bus. The PC/104 connector pinout may be found at www.pc104.org.

Note: Two locations on the bus have mechanical keying pins to help prevent misconnection of the PC/104 bus. These keying pins are a part of the PC/104 standard, and we strongly recommend you leave them in place.

If you have other modules without keying pins, we suggest you modify them to include keying.

Reserved Connector, CN9

CN9 is reserved for factory use. Nothing should be attached to this connector.

Chapter 5 HARDWARE DESCRIPTION

This chapter describes the major features of the DM6854HR: the 8255 based digital I/O, isolated optocoupler inputs, isolated optocoupler outputs, interrupts and output triggering. Figure 5.1 shows the general block diagram of the DM6854HR.

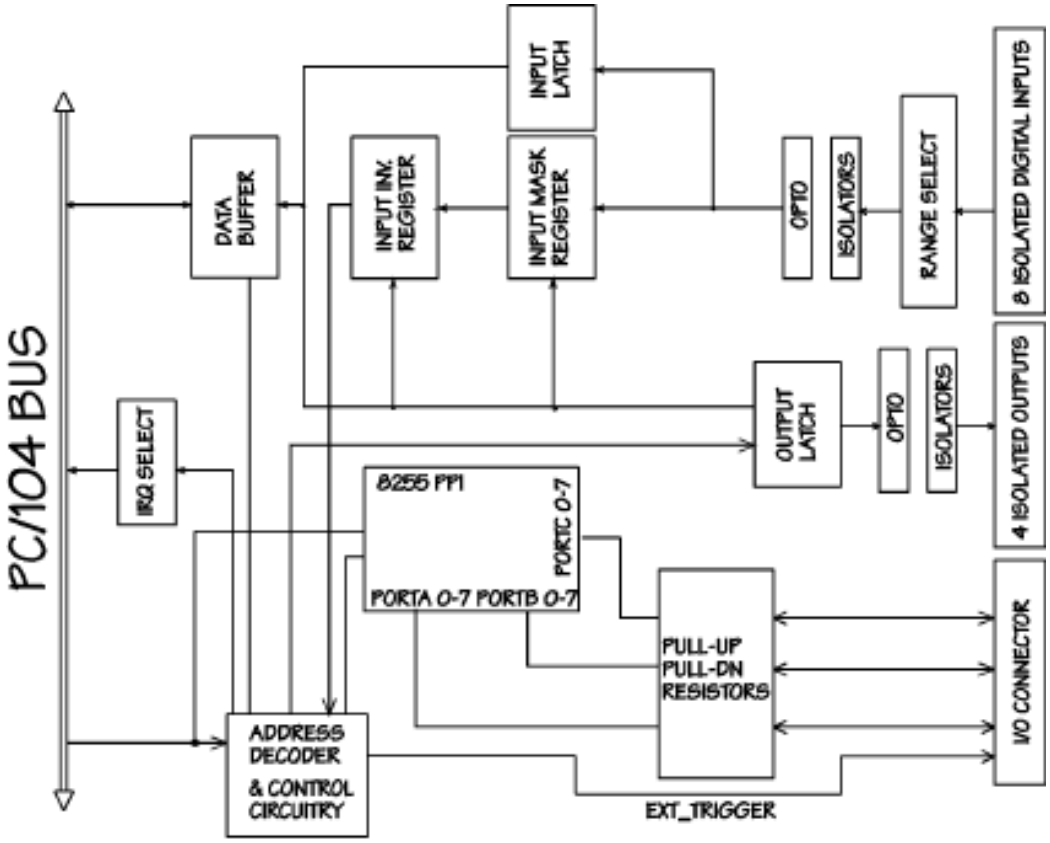


Figure 5.1: DM6854HR Block diagram

Digital I/O, Programmable Peripheral Interface (PPI)

The programmable peripheral interface (PPI) is used for general purpose digital I/O functions. This high performance TTL/CMOS compatible chip has 24 digital I/O lines divided into two groups of 12 lines each.

- Group A: Port A (8) lines and Port C upper (4) lines
- Group B: Port B (8) lines and Port C lower (4) lines

Port A, Port B and Port C are available at the 50 pin expansion connector. You can use Ports A, B and C in one of these three operating modes:

Mode 0: Basic I/O. Lets you use simple input output functions for a port. Data is written to or read from the specified port

Mode 1: Strobed Input/Output. Lets you transfer data I/O from port A in conjunction with strobed or handshake signals.

Mode 2: Strobed bi-directional input/output. Lets you communicate with an external device through port A. Handshaking is similar to mode 1.

Available Port direction definitions:

- Port A may be Inputs or Outputs
- Port C lower bits may be Inputs or Outputs
- Port C higher bits may be Inputs or Outputs

All these modes are discussed in detail in the 8255 datasheet from Intel.

Isolated optocoupler inputs

The Isolated input stage of the DM6854HR consists of 4 major parts:

- Input protection
- Input optocouplers
- Input bit mask stage
- Input bit inverter stage.

Input Protection

The input circuitry of the DM6854HR consists of a range selection jumper field and an input protection Schottky diode. The optocoupler is current driven, so the input range is selected by connecting different current limiting resistors in series with the optocoupler input diode. To protect the optocoupler input diode from over current and reverse voltage, a diode is connected in reverse with the optocoupler input diode. Make sure you do not exceed the absolute maximum voltage of each nominal input range. Exceeding this limit may cause permanent damage to the optocouplers.

Optocouplers

The SMD-optocouplers provide the galvanic isolation between the computer and the process signals as well as isolation between input channels. The optocouplers are logically inverting, i.e. a voltage on the isolated digital input will be interpreted as a logical "0". To avoid false triggering on the inputs special "Schmidt trigger" buffers are used to provide reliable and precise switching of the inputs.

Input bit mask stage

The programmable input processing section of the DM6854HR includes an input bit mask filter stage. This mask may be is used to select bits or groups of interesting bits for pattern recognition. Bit selection is performed by writing to the mask register (BA+1). A bit is selected for comparison if it is set to one "1". The currently active mask can be read back from the same address (BA+1). After reset condition all bits are "0" and disabled.

Input bit inverter stage

The trigger logic of the DM6854HR uses OR-logic from the inputs. This means that a transition from low to high on any input will cause a trigger condition. To enable bitwise selection of the polarity of the signals an inverter stage may be used. Bit inversion is performed by writing to the input inversion register (BA+2). An input channel is inverted by writing "1" to the corresponding inversion register bit. Example: outp(BA+2,0x0f); will invert input channels 1-4.

Isolated optocoupler outputs

The Isolated optocoupler output stage of the DM6854HR consists of 3 major parts:

- Output data register
- Schmidt triggers
- Optocouplers.

Output data register

The four bit output register holds the output pattern for the output stage. Data can be updated and read from address (BA+3), bits 4-8. The lower bits (1-4) hold the configuration bits of your DM6854HR. Make sure these bits are unchanged when writing to this register.

To avoid accidental changes in configuration, read the data in the register (BA+3) before writing to it.

Schmidt triggers

The output of the optocoupler has a Schmidt trigger to condition the output of the optocouplers, this will reduce false triggering.

Optocouplers

Small SMD-optocouplers are used to isolate each channel of the isolated outputs. Individual optocouplers are used for each channel. The optocouplers are directly connected to the Output data register. The optocouplers are connected in a non inverting configuration in open collector configuration. The maximum switching current is 8mA at 30V.

Trigger output

Your DM6854HR is capable of generating a trigger signal caused by an input condition. This feature is especially useful when monitoring for a predefined input condition. When this predefined condition occurs, an interrupt will indicate this condition to the host. This trigger is also available as an external output signal on the 50-pin connector Pin #2. You may use this to trigger other devices or other boards in your system such as the isolated digital output board and DM6854HR. The polarity of this trigger signal is programmable and is driven by a tristate buffer. This enables several boards to drive the same trigger output signal.

Interrupts

The DM6854HR has an interrupt available to indicate an external trigger. This interrupt can be used to tell the host computer that the pre-programmed input pattern condition has occurred. Chapter 6 will provide programming information on interrupts.

Chapter 6 BOARD OPERATION AND PROGRAMMING

This chapter shows you how to program and use your DM6854HR. It provides a complete detailed description of the I/O-map and a detailed discussion of programming operations to aid you in application programming.

Defining the I/O Map

The I/O map of the DM6854HR is shown in Table 4-1 below. As shown the module occupies 8 addresses. The Base Address (designated as BA) can be set using the jumpers as described in Chapter 1, *Module Settings*. The following sections describe the register contents of each address used in the I/O map.

Table 6.1: DM6854HR I/O Map

Address	Read Function	Write Function
BA + 0	Digital Inputs 1-8	Clear IRQ / Trigger
BA + 1	Read Input Mask	Write Input Mask
BA + 2	Read Input Inversion Register	Write Input Inversion Register
BA + 3	Read Configuration / Output Register	Write Configuration / Output Register
BA + 4	82C55 Read Port A Data	82C55 Write Port A Data
BA + 5	82C55 Read Port B Data	82C55 Write Port B Data
BA + 6	82C55 Read Port C Data	82C55 Write Port C Data
BA + 7	Reserved	82C55 Write to Control Byte
BA+400h	RTD ID Data (Read next Character)	n/a
BA+401h	RTD ID Data (Read next Character)	n/a
BA+402h	Reset RTD ID (Reset counter)	n/a

BA+0 Digital input register (Write)

The trigger condition is latched on the DM5854/6854. The interrupt request will remain high until the host acknowledges the interrupt. This is done with a write to **BA+0**.

Example: outp(BA,data); // Clears trigger and interrupt; data is irrelevant

BA+0 Digital inputs (Read)

The eight isolated digital input bits available in connector J4 can be read from address BA+0.

BA+1 Input mask register (Read / Write) 0 after reset

The input mask register selects which bits are monitored for a trigger condition. A "1" corresponds to a selected bit.

Example: outp(BA+1, 0x7F); // Bits 1-7 are selected

BA+2 Input inversion register (Read / Write) 0 after reset

The input inversion register may be used to invert input channels selected by the input mask register. If a logical 0 on the input bit is should cause a trigger; the respective inversion bit should be set (to "1").

Example: Bits 1-7 are monitored for a condition where any bit changes state from condition 0x3E.

Step 1:	Mask required bits	outp(BA+1,0x7F);	// 0 1 1 1 1 1 1 1
Step 2:	Set inversion register	outp(BA+2,0x3E);	// 0 0 1 0 1 1 1 0

BA+3 Configuration / digital output register (Read / Write) 0 after reset

BIT 0 1 -> External host IRQ enabled

0 -> External host IRQ disabled

BIT 1 1 -> External trigger output (50-pin header, pin 2) tristate buffer enabled

0 -> External trigger output tristate buffer in tristate (externally pulled low)

BIT 2 1 -> External trigger output active low

0 -> External trigger output active high

BIT 3 1 -> Interrupt/trigger active (Read only)

0 -> Interrupt/trigger not active (Read only)

BITS 4-7 4-bit isolated digital output port

BA+4 PPI Port A (Read/Write)

Transfers the 8-bit Port A digital input and output data between the module and an external device. A read transfers data from the external device, through connector J5, and into port A; a write transfers the written data from port A through J5 to the external devices.

BA+5 PPI Port B (Read/Write)

Transfers the 8-bit Port B digital input and output data between the module and an external device. A read transfers data from the external device, through connector J5, and into port B; a write transfers the written data from port B through J5 to the external devices.

BA+6 PPI Port C (Read/Write)

Transfers the 4-bit low nibble of the Port C digital input and output data between the module and an external device. A read transfers data from the external device, through connector J5, and into bits 0-7 of port C; a write transfers the written data bits 0-7 from port C through J5 to the external devices.

BA+7 PPI Control Byte (Write only)

Table 6.2: Control Byte, Control Word Mode

<table>
<tr><th>Bit</th><th>Name</th><th>Description</th></tr>
<tr><td>D7</td><td>Mode Set Flag</td><td>1 = Active
When bit 7 is set to 1, a write programs the PPI configuration.</td></tr>
<tr><td colspan="3">Group # 1</td></tr>
<tr><td>D6-D5</td><td>Mode select for group #1</td><td>
<table>
<tr><th>D6</th><th>D5</th><th>Mode</th></tr>
<tr><td>0</td><td>0</td><td>Mode 0</td></tr>
<tr><td>0</td><td>1</td><td>Mode 1</td></tr>
</table>
</td></tr>
</table>

		1 1 Mode 2
D4	Direction of Port A	0 = Output 1 = Input
D3	Direction of Port C Upper (bits 4-7)	0 = Output 1 = Input
Group # 2		
D2	Mode select for group #2	0 = Mode 0 1 = Mode 1
D1	Direction of Port B	0 = Output 1 = Input
D0	Direction of Port C Lower (bits 0-3)	0 = Output 1 = Input

Table 6.3: Control Byte, Bit Set Mode

Bit	Name	Description
D7	Mode Set Flag	0 = Active When bit 7 is set to 0, a write can program individual lines of port C.
D6-D4	Reserved	Can be any value
D3-D1	Bit Select	D3 D2 D1 Bit Select 0 0 0 PC0 0 0 1 PC1 0 1 0 PC2 0 1 1 PC3 1 0 0 PC4 1 0 1 PC5 1 1 0 PC6 1 1 1 PC7
D0	Value	0 = Set bit to 0 1 = Set bit to 1

BA + 400h/BA + 401h RTD ID Data (read only, 8-bit or 16-bit)

RTD ID is a method to identify a board on the ISA bus. There are two 8-bit registers mapped at **BA + 400h** and **BA + 401h**. The registers can be read as two 8-bit or one 16-bit. An internal pointer is auto-incremented with every read to either address so the data read will step through each index as indicated below. The pointer is set to zero at reset and can be reset to zero by a read to **BA + 402h**.

BA + 402h RTD ID Reset Pointer (read only, 8-bit only)

A read to **BA + 402h** will set the internal pointer to zero. The pointer is set to zero at reset.

RTD ID Data Read Indexes

Index	Data	8-Bit Read	16-Bit Read
0	Device ID	545h	6854h
1	Device ID	68h	—
2	RTD Vendor ID	35h	1435h
3	RTD Vendor ID	14h	—
4	EPLD Revision	Revision LSD	Revision
5	EPLD Revision	Revision MSD	—
6–9	Reserved	Ignore	Ignore

10	Board Name String	D	DM
11	Board Name String	M	—
12	Board Name String	6	68
13	Board Name String	8	—
14	Board Name String	5	54
15	Board Name String	4	—
16	Board Name String	<nul>	<nul><nul>
17	Board Name String	<nul>	—
18-255	Unused	FFh	FFFFh

Programming the DM6854HR

This section gives you some general information about programming the DM6854HR board, and then walks you through the major programming functions of the board. These descriptions will help you as you use the example programs and function libraries included with this board. All of the program descriptions use decimal values unless otherwise specified.

The DM6854HR is programmed by writing to and reading from the correct I/O-port addresses of the board. These I/O ports were described in the previous section of this chapter. The following example shows how to perform a 8-bit read and write I/O port addresses using"C"-syntax and assembly code:

Table 6.4: Code Examples

	Read	Write
"C" Syntax	var = **inp**(address);	**outp**(address,data);
Assembly	**mov** dx,address **in** ax,dx	**mov** dx,address **mov** ax,data **out** dx,ax

Clearing and setting bits in an I/O port

When you clear or set bits in an I/O port you must be careful not to alter the status of other bits. You can preserve the status of all the bits you do not wish to change by proper use of the bitwise AND- and OR-operators. Using and or operators, single or multiple bits can easily be set or cleared in one line operations.

- To clear a single bit in a port, AND the current value of the port with the value "B" , where B = 255-2(exp) bit.
- To set a single bit in a port, OR the current value of the port with the value "B", where B = 2(exp) bit.
- Bits are numbered from 0-7 for the low byte of a word and from 8-15 for the high byte of a word. Setting and clearing of multiple bits in a bye or word is more complex.
- To clear multiple bits in a port, AND the current value of the port with the value "B", where B = 255-(the sum of the values of the bits to be cleared). Note that the bits do not have to be consecutive.
- To set multiple bits in a port, OR the current value of the port with the value "B", where B = (sum of the individual bits to be set).

Initializing the 8255 PPI

Before you can operate the non isolated general purpose digital I/O through the 8255 PPI it must be initialized. This step must be performed every time you start up, reset or reboot your computer.

The 8255 PPI is initialized by writing the appropriate control byte to the I/O Port **BA+7**

The contents of your control word will vary, depending on how you want to configure your I/O lines. Use the control word description in the previous I/O map section to help you program the right value.

Example:

Port A -> Output

Port B -> Output

Port C Upper -> Input

Port C Lower -> Output

Control Byte : 88h

Isolated digital input programming

The optoisolated digital inputs may be addressed directly by reading the digital input register in address (BA+0). The DM6854HR features more advanced modes of input pattern or bit change recognition to reduce software overhead. This is possible with the hardware interrupt generated by the onboard comparison logic.The following two subsections will illustrate how to program the different modes of the isolated digital input port.

Software controlled direct read

```
in_data=inp(BA);      // Loads data from inputs into variable in_data
```

Interrupt driven read upon change in bits

```
mask = 0x55;          // Odd bits are of interest
state = 0x01;         // Any of bits 3,5,7 goes high or bit 1 goes low
outp(BA+1,mask)       // Program mask register
outp(BA+2,state);     // Program bit inversion register outp(BA+3,0x01);
// Enable interrupts
outp(BA,0x00);      // Clear hardware interrupt , if state had already occurred
// Now if any of bits 3,5,7 goes high or bit 1 goes low it will cause a
// hardware interrupt. In your ISR. you will read the input data with
// "in_data = inp(BA);".
```

Isolated digital output programming

The four bit digital output port can directly be programmed from software by writing output data to the high bits (4-8) of I/O-port address BA+3. Care must be taken to ensure the lower four bits remain unchanged since they hold the configuration data of

your DM6854HR. The example below illustrates a safe way of controlling the digital outputs.

Example in "C" syntax:

```
// Step 1     store the current contents of the Control/Output register
reg_data = inp(BA+3);            // reg_data holds all information
conf_data = 0x0f && reg_data;    // mask lower bits to store configuration
// Step 2     prepare output data stored in variable out_data
out_data =  out_data<<4;         // shift left 4 bits
// Step 3     combine configuration and output data and write to port
outp(BA+3,out_data || conf_data);// write to correct address
```

This code can be compressed into more elegant and optimum code. The steps above illustrate the logic of operation.

Trigger output programming

As described in the previous sections an external trigger may be used to indicate to the host or other devices that a predetermined input condition has occurred. Before you can use an external trigger you must first program your DM6854HR to enable correct operation. The following steps must be taken.

1. Program the mask and inversion register first
2. Program the polarity of the trigger output to other devices
3. Clear interrupt and trigger register
4. Enable trigger output tristate buffer
5. Enable interrupts, this also enables the operation of the external trigger output

Interrupts

What is an interrupt?

An interrupt is an event that causes the processor in your computer to temporarily halt its current process and execute another routine. Upon completion of the new routine, control is returned to the original routine at the point where its execution was interrupted.

Interrupts are a very flexible way of dealing with asynchronous events. Keyboard activity is a good example; your computer cannot predict when you might press a key and it would be a waste of processor time to do nothing while waiting for a keystroke to occur. Thus the interrupt scheme is used and the processor proceeds with other tasks. Then when a keystroke occurs , the keyboard 'interrupts' the processor , and the processor gets the keyboard data , placed it into memory, and then returns to what it was doing before the interrupt occurred. Other common devices that use interrupts are network boards, A/D boards, serial ports etc.

Your DM6854HR can interrupt the main processor when an external trigger event occurs if interrupts are enabled on the board. By using interrupts you can write powerful code to deal with real world events.

Interrupt request lines

To allow different peripheral devices to generate interrupts on the same computer, the PC XT bus has eight interrupt request channels (IRQ's). A rising edge transition on one of these lines will be latched into the interrupt controller. The interrupt controller checks to see if the interrupts are to be acknowledged from that IRQ and, if another interrupt is being processed, it decides if the new request should supersede the one in progress or if it has to wait until the one in progress is done. The priority level of the interrupt is determined by the number of the IRQ; IRQ0 has the highest priority IRQ7 the lowest. Many of the IRQ's are used by the standard system resources. IRQ0 is dedicated for the internal timer, IRQ1 is dedicated to the keyboard input, IRQ3 for serial port COM2 and IRQ4 for serial port COM1. Often interrupts 5 and 7 are free for the user.

8259 Programmable Interrupt Controller

The chip responsible for handling interrupt requests in a PC is the 8259 Interrupt Controller. To use interrupts you will need to know how to read and set the 8259's internal interrupt mask register (IMR) and how to send the end-of-interrupt (EOI) command to acknowledge the 8259 interrupt controller.

Interrupt Mask Register (IMR)

Each bit in the interrupt mask register (IMR) contains the mask status of the interrupt line. If a bit is set (equal to 1), then the corresponding IRQ is masked and it will not generate an interrupt. If a

bit is cleared (equal to 0), then the corresponding IRQ is not masked and it can generate an interrupt. The interrupt mask register is programmed through **port 21h**.

End-of-Interrupt (EOI) Command

After an interrupt service routine is complete, the 8259 Interrupt Controller must be acknowledged by **writing the value 20h to port 20h**.

What exactly happens when an interrupt occurs?

Understanding the sequence of events when an interrupt is triggered is necessary to correctly write interrupt handlers. When an interrupt request line is driven high by a peripheral device (such as the DM5854), the interrupt controller checks to see if interrupts are enabled for that IRQ, and then checks to see if other interrupts are active or requested and determines which interrupt has priority. The interrupt controller then interrupts the processor. The current code segment (CS), instruction pointer (IP), and flags are pushed onto the system stack, and a new set if CS and IP are loaded from the lowest 1024 bytes of memory.

This table is referred to as the interrupt vector table and each entry to this table is called an interrupt vector. Once the new CS and IP are loaded from the interrupt vector table , the processor starts to execute code from the new Code Segment (CS) and from the new Instruction Pointer (IP). When the interrupt routine is completed the old CS and IP are popped from the system stack and the program execution continues from the point it was interrupted.

Using Interrupt in your Program

Adding interrupt support to your program is not as difficult as it may seem especially when programming under DOS. The following discussion will cover programming under DOS. Note, that even the smallest mistake in your interrupt program may cause the computer to hang up and will only restart after a reboot. This can be frustrating and time-consuming.

Writing an Interrupt Service Routine (ISR)

The first step in adding interrupts to your software is to write an interrupt service routine (ISR). This is the routine that will be executed automatically each time an interrupt request occurs for the specified IRQ. An ISR is different from other subroutines or procedures. First, on entrance the processor registers must be pushed onto the stack before anything else! Second, just before exiting the routine , you must clear the interrupt on the DM6854HR by writing to address BA+0, and write the EOI command to the interrupt controller. Finally, when exiting the interrupt routine the processor registers must be popped from the system stack and you must execute the IRET assembly instruction. This instruction pops the CS, IP and processor flags from the system stack. These were pushed onto the stack when entering the ISR.Most compilers allow you to identify a function as an interrupt type and will automatically add these instructions to your ISR with one exception: most compilers do not automatically add the EOI command to the function, you must do it yourself. Other than this and a few exceptions discussed below, you can write your ISR as any code routine. It can call other functions and procedures in your program and it can access global data. If you are writing your first ISR, we recommend you stick to the basics; just something that enables you to verify you have entered the ISR and executed it successfully. For example: set a flag in your ISR and in your main program check for the flag.

Note:	If you choose to write your ISR in in-line Assembly , you must push and pop registers correctly, and exit the routine with the IRET instruction instead of the RET instruction.

There are a few precautions you must consider when writing ISR's. The most important is, **do not use any DOS functions or functions that call DOS functions from an interrupt routine.** DOS is not reentrant; that is, a DOS function cannot call itself. In typical programming, this will not

happen because of the way DOS is written. But what about using interrupts? Then, you could have the situation such as this in your program. If DOS function X is being executed when an interrupt occurs and the interrupt routine makes a call to the DOS function X, then function X is essentially being called while active. Such cases will cause the computer to crash. DOS does not support such operation. A general rule is , that do not call any functions that use the screen, read keyboard input and any file I/O routines should not be used in ISR's.

The same problem of reentrancy exists for many floating point emulators as well, meaning you should avoid floating point mathematical operations in your ISR.

Note, that the problem of reentrancy exists, no matter what programming language you use. Even, if you are writing your ISR in Assembly language, DOS and many floating point emulators are not reentrant. Of course, there are ways to avoid this problem, such as those which involve checking if any DOS functions are currently active when your ISR is called, but such solutions are beyond the scope of this manual.

The second major concern when writing ISR's is to make them as short as possible in term of execution time. Spending long times in interrupt service routines may mean that other important interrupts are not serviced. Also, if you spend too long in your ISR, it may be called again before you have exited. This will lead to your computer hanging up and will require a reboot.

Your ISR should have the following structure:

- Push any processor registers used in your ISR. Most C compiler do this automatically
- Put the body of your routine here
- Clear the interrupt bit by writing to address BA+3
- Issue the EOI command to the 8259 by writing 20h to address 20h
- Pop all registers. Most C compilers do this automatically

The following C example shows what the shell of your ISR should be like:

```
/*---------------------------------------------------------------------
| Function:       new_IRQ_handler
| Inputs:           Nothing
| Returns:         Nothing           - Sets the interrupt flag for the EVENT.
|---------------------------------------------------------------------*/
void interrupt far new_IRQ_handler(void)
{

IRQ_flag = 1;              // Indicate to main process interrupt has occurred
{
// Your program code should be here
}
outp(BA+0,0x00);      // Clears interrupt on DM6854HR
outp(0x20, 0x20);       /* Acknowledge the interrupt controller. */
     }
```

Saving the Startup Interrupt Mask Register (IMR) and interrupt vector

The next step after writing the ISR is to save the startup state of the interrupt mask register (IMR) and the original interrupt vector you are using. The IMR is located in address **21h**. The interrupt vector you will be using is located in the interrupt vector table which is an array of 4-byte pointers (addresses) and it is locate din the first 1024 bytes of the memory (Segment 0 offset 0). You can read this value directly, but it is a better practice to use DOS function 35h (get interrupt vector) to do this. Most C compilers have a special function available for doing this. The vectors for the

hardware interrupts on the XT - bus are vectors 8-15., where IRQ0 uses vector 8 and IRQ7 uses vector 15. Thus if your DM6854HR is using IRQ5 it corresponds to vector number 13.

Before you install your ISR, temporarily mask out the IRQ you will be using. This prevents the IRQ from requesting an interrupt while you are installing and initializing your ISR. To mask the IRQ, read the current IMR at I/O port 21h, and set the bit that corresponds to tout IRQ. The IMR is arranged so that bit 0 is for IRQ0 and bit 7 is for IRQ7. See the paragraph entitled *Interrupt Mask Register (IMR)* earlier in this discussion for help in determining your IRQ's bit. After setting the bit, write the new value to I/O port 21h.With the startup IMR saved and the interrupts temporarily disabled, you can assign the interrupt vector to point to your ISR. Again you can overwrite the appropriate entry in the vector table with a direct memory write, but this is not recommended. Instead use the DOS function 25h (Set Interrupt Vector) or, if your compiler provides it, the library routine for setting up interrupt vectors. Remember , that interrupt vector 8 corresponds to IRQ0 , vector 9 for IRQ1 etc.

If you need to program the source of your interrupts, do that next. For example, if you are using the input compare on the DM6854HR as an interrupt source, program it to do that. Finally, clear the mask bit for your IRQ in the IMR. This will enable your IRQ.

Common Interrupt mistakes

- Remember, hardware interrupts are from 8-15, IRQ's are numbered 0-7
- Forgetting to clear the IRQ mask bit in the IMR
- Forgetting to send the EOI command after ISR code. Disables further interrupts.

Example of Interrupt vector table setup in C-code:

```
void far _interrupt new_IRQ1_handler(void );  /* ISR function prototype */
#define IRQ1_VECTOR        3                  /* Name for IRQ */
void (interrupt far *old_IRQ1_dispatcher)
(es,ds,di,si,bp,sp,bx,dx,cx,ax,ip,cs,flags);  /* Variable to store old
IRQ_Vector */
void far _interrupt new_IRQ1_handler(void );

/*-------------------------------------------------------------------------
| Function:       init_irq_handlers
| Inputs:           Nothing
| Returns:         Nothing
| Purpose:        Set the pointers in the interrupt table to point to
|                       our funtions ie. setup for ISR's.
|-------------------------------------------------------------------------*/
void init_irq_handlers(void)
{
_disable();
old_IRQ1_handler = _dos_getvect(IRQ1_VECTOR + 8);
_dos_setvect(IRQ1_VECTOR + 8, new_IRQ1_handler); Gi_old_mask = inp(0x21);
outp(0x21,Gi_old_mask & ~(1 << IRQ1_VECTOR));
_enable();
}

|/*-------------------------------------------------------------------------
| Function:       restore do this before exiting program
```

```
| Inputs:           Nothing
| Returns:         Nothing
| Purpose:        Restore interrupt vector table.
|-------------------------------------------------------------------------*/
void restore(void)
{
/* Restore the old vectors */

_disable();

_dos_setvect(IRQ1_VECTOR + 8, old_IRQ1_handler);
outp(0x21,Gi_old_mask);

_enable();

}
```

Chapter 7 SPECIFICATIONS

General Specifications

Interface

Jumper-selectable base address, I/O mapped

Jumper selectable interrupts

Digital I/O (non isolated)

Number of lines	24
Logic compatibility	TTL/CMOS

Digital inputs (isolated)

Number of lines	8
Input ranges (individually jumper selectable)	5V, 12V, 24V

Digital outputs (isolated)

Number of lines	4
Output stage	Open collector

Connectors

Isolated I/O	Header connector 48-Pin (-H)
	24 position screw terminal connector (-S)
Non Isolated I/O	Header connector 50-Pin

DC Characteristics

Table 7.1: Absolute Maximum Ratings

Parameter	Symbol	Min.	Max.	Units
Storage Temperature	T_S	-55	+125	C
Operating Temperature	T_A	-40	+85	C
Supply Voltage	V_{CC}	-0.5	7	V
Digital I/O (non-isolated)				
Input Voltage	V_I	-0.5	V_{CC} + 0.5	V
Output Voltage	V_O	-0.5	V_{CC} + 0.5	V
Isolated Inputs				
Input Voltage (IN+ with respect to IN-)	V_I			V
+5V Range		-50	50	
+12V Range		-70	70	
+24V Range		-100	100	
Isolation Voltage	V_{ISO}		1500	V_{RMS}
Isolated Outputs				
Collector Current	I_C		150	mA
Collector-Emitter Voltage	V_{CEO}	-7	30	V
Isolation Voltage	V_{ISO}		1500	V_{RMS}

Table 7.2: Recommended Operating Conditions

Parameter	Symbol	Min.	Max.	Units
Supply Voltage	V_{CC}	4.75	5.25	V
Digital I/O (non-isolated)				
Low Input Voltage	V_{IL}	-0.3	0.8	V
High Input Voltage	V_{IH}	2.2	V_{CC} + 0.3	V
Low Output Voltage (I_{OL} = 2.5 mA)	V_{OL}		0.4	V
High Output Voltage	V_{OH}			V
I_{OH} = -40 μA		4.2		
I_{OH} = -2.5 mA		3.7		
Pullup / Pulldown Resistor	R	9	11	kΩ
Isolated Inputs				
Low Input Voltage (IN+ with respect to IN-)	V_{IL}			V
+5V Range		-25	2.0	
+12V Range		-35	2.5	
+24V Range		-50	4.5	
High Input Voltage (IN+ with respect to IN-)	V_{IH}			V
+5V Range		4.5	25	
+12V Range		6	35	
+24V Range		14	50	
Isolated Outputs				
Collector Current	I_C	4	8 typ.	mA
Collector-Emitter Voltage	V_{CEO}	0	30	V

Dimension Drawing

Figure 7.1 shows the connector locations. The dimensions are specified in thousandths of an inch.

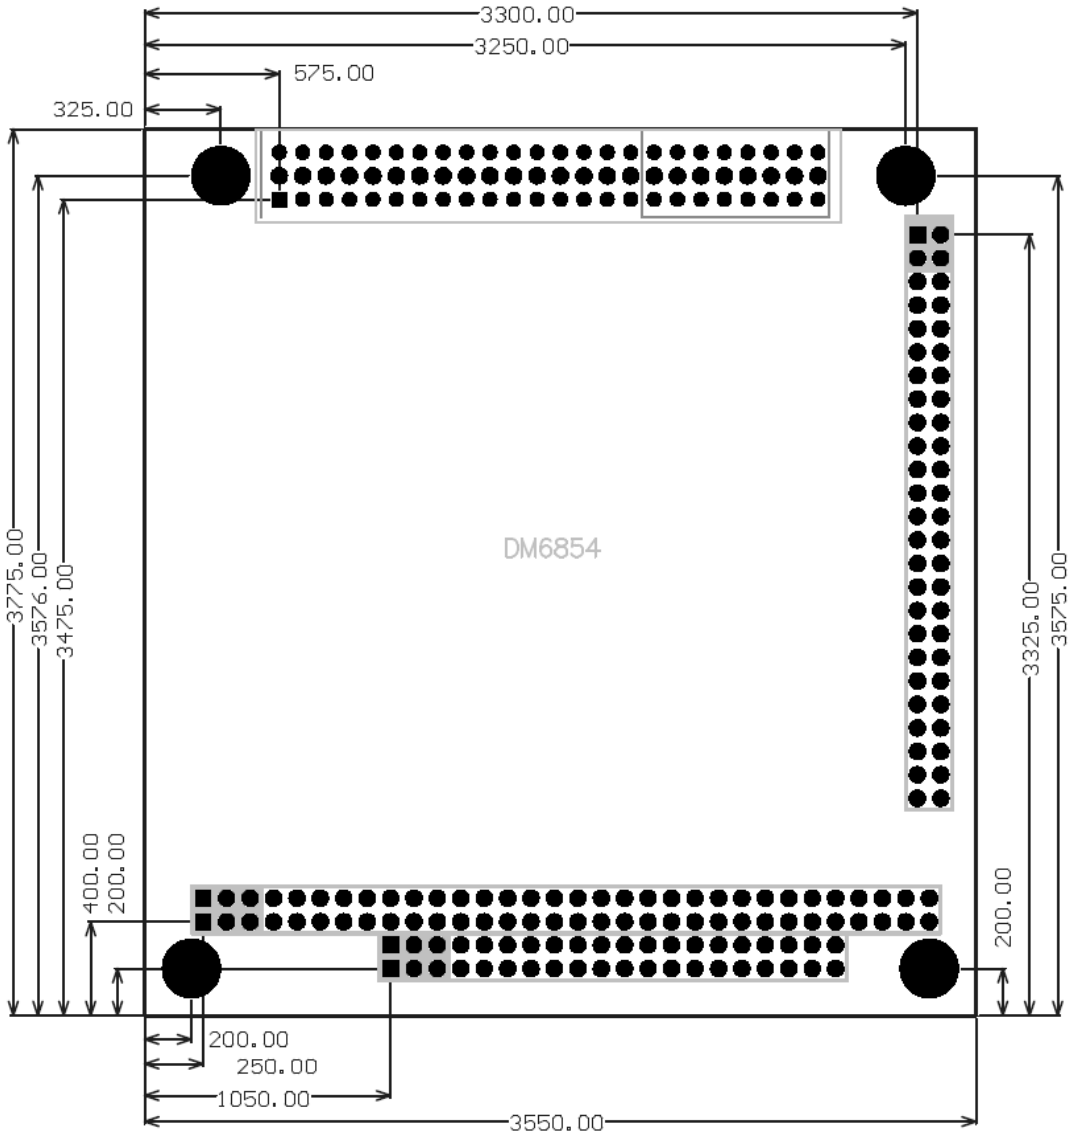


Figure 7.1: DM6854HR Dimension Drawing

Chapter 8 RETURN POLICY AND WARRANTY

Return Policy

If you wish to return a product to the factory for service, please follow this procedure:

Read the Limited Warranty to familiarize yourself with our warranty policy.

Contact the factory for a Return Merchandise Authorization (RMA) number.

Please have the following available:

- Complete board name
- Board serial number
- A detailed description of the board's behavior

List the name of a contact person, familiar with technical details of the problem or situation, **along with their phone and fax numbers, address, and e-mail address** (if available).

List your shipping address!!

Indicate the shipping method you would like used to return the product to you.

We will not ship by next-day service without your pre-approval.

Carefully package the product, using proper anti-static packaging.

Write the RMA number in large (1") letters on the outside of the package.

Return the package to:

RTD Embedded Technologies, Inc.
103 Innovation Blvd.
State College PA 16803-0906
USA

Limited Warranty

RTD Embedded Technologies, Inc. warrants the hardware and software products it manufactures and produces to be free from defects in materials and workmanship for one year following the date of shipment from RTD Embedded Technologies, INC. This warranty is limited to the original purchaser of product and is not transferable.

During the one year warranty period, RTD Embedded Technologies will repair or replace, at its option, any defective products or parts at no additional charge, provided that the product is returned, shipping prepaid, to RTD Embedded Technologies. All replaced parts and products become the property of RTD Embedded Technologies. Before returning any product for repair, customers are required to contact the factory for an RMA number.

THIS LIMITED WARRANTY DOES NOT EXTEND TO ANY PRODUCTS WHICH HAVE BEEN DAMAGED AS A RESULT OF ACCIDENT, MISUSE, ABUSE (such as: use of incorrect input voltages, improper or insufficient ventilation, failure to follow the operating instructions that are provided by RTD Embedded Technologies, "acts of God" or other contingencies beyond the control of RTD Embedded Technologies), OR AS A RESULT OF SERVICE OR MODIFICATION BY ANYONE OTHER THAN RTD Embedded Technologies. EXCEPT AS EXPRESSLY SET FORTH ABOVE, NO OTHER WARRANTIES ARE EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND RTD Embedded Technologies EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED HEREIN. ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES FOR MECHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS WARRANTY. IN THE EVENT THE PRODUCT IS NOT FREE FROM DEFECTS AS WARRANTED ABOVE, THE PURCHASER'S SOLE REMEDY SHALL BE REPAIR OR REPLACEMENT AS PROVIDED ABOVE. UNDER NO CIRCUMSTANCES WILL RTD Embedded Technologies BE LIABLE TO THE PURCHASER OR ANY USER FOR ANY DAMAGES, INCLUDING ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, EXPENSES, LOST PROFITS, LOST SAVINGS, OR OTHER DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, AND SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP