ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions


Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Schneider Electric / AEG / Modicon 170 ADO 540 50* at our website: ***Click HERE***

Modicon
TSX Momentum I/O Base
User Guide

870 USE 002 00 Version 4.0

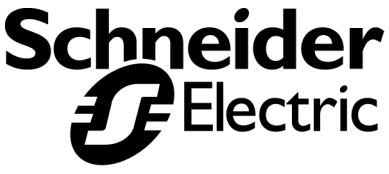

31001697 04

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Document Set

At a Glance

This manual consists of two volumes.

Volume 1

- Introducing the TSX Momentum I/O Baes
- Selecting Other TSX Momentum Components
- Assembly
- Dimenstions and Mounting Instructions
- Power and Grounding Guidelines
- 170 AAI 030 00 Analog 8 Channel Differential Input Module Base
- 170 AAI 140 00 Analog 16 Channel Single-Ended Input Module Base
- 170 AAI 520 40 Analog 4 Channel RTD, Therm. and mV Input Module Base
- 170 AAO 120 00 Analog 4 Channel Output Module Base +/- 10 V, 0 - 20 mA
- 170 AAO 921 00 Analog 4 Channel Output Module Base +/- 10 V, 4 ... 20 mA
- 170 ADI 340 00 24 VDC - 16 Pt. Discrete Input Module Base
- 170 ADI 350 00 24 VDC - 32 Pt. Discrete Input Module Base
- 170 ADI 540 50 120 VAC - 16 Pt. Discrete Input Module Base
- 170 ADI 740 50 230 VAC - 16 Pt. Discrete Input Module Base
- 170 ADM 350 10 24 VDC - 16 Pt. In / 16 Pt. Out Module Base
- 170 ADM 350 11 24 VDC - 16 Pt. In / 16 Pt. Out Module Base
- 170 ADM 350 15 24 VDC - 16 Pt. In / 16 Pt. Out Module Base
- 170 ADM 370 10 24 VDC - 16 Pt. In / 8 Pt. Out @ 2 Amp. Module Base
- 170 ADM 390 10 24 VDC - 16 Pt. In / 12 Pt. Out Monitored Module Base
- 170 ADM 390 30 24 VDC - 10 Pt. In / 8 Pt. Relay Out Module Base


Volume 2

- 170 ADM 540 80 120 VAC - 6 Pt. In / 3 Pt. Out Discrete MCC Module Base
- 170 ADM 690 50 120 VAC - 10 Pt. In / 8 Pt. Out Module Base
- 170 ADM 690 51 120 VAC - 10 Pt. In / 8 Pt. Out Module Base
- 170 ADO 340 00 24 VDC - 16 Pt. Discrete Output Module Base
- 170 ADO 350 00 24 VDC - 32 Pt. Discrete Output Module Base
- 170 ADO 530 50 120 VAC - 8 Pt. Discrete Output @ 2A Module Base
- 170 ADO 540 50 120 VAC - 16 Pt. Discrete Output Module Base
- 170 ADO 730 50 230 VAC - 8 Pt. Discrete Output @ 2A Module Base
- 170 ADO 740 50 230 VAC - 16 Pt. Discrete Output Module Base
- 170 AMM 090 00 Analog 4 Ch. In / 2 Ch. Out Module Base w / 24 VDC I/O Pts.
- 170 ANR 120 90 Unipolar Analog 6 Ch. In / 4 Ch. Out Module Base w/ 24 VDC I/O Pts.
- 170 ANR 120 91 Bipolar Analog 6 Ch. In / 4 Ch. Out Module Base w/ 24 VDC I/O Pts.
- 170 ARM 370 30 24 VDC - 10 Pt. In / 8 Pt. Relay Out Module Base (120 VAC powered)
- 170 CPS 111 00 TIO Power Supply Module
- System Specifications
- Interference Suppression
- IEC 1131 Input Types
- Field Wire Length
- IEC Symbols

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table of Contents

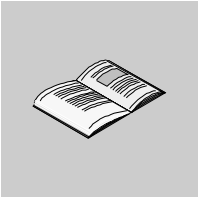

Safety Information xv

About the Book xvii

Part I Using Momentum I/O Bases 1

At a Glance 1

Chapter 1 Introducing the TSX Momentum I/O Bases 3

At a Glance 3
Basic Features of I/O Bases 4
Types of I/O Bases 6

Chapter 2 Selecting Other TSX Momentum Components 9

At a Glance 9
Which Components Should I Use? 10
Communication Adapters 11
Processor Adapters 12
Option Adapters 14
Terminal Connectors 15
Busbars 16

Chapter 3 Assembly 19

At a Glance 19
Assembling an Adapter and an I/O Base 20
Disassembling an Adapter from an I/O Base 23
Assembling a Processor Adapter and an Option Adapter 25
Mounting the Assembled Adapters on the I/O Base 27
Disassembling a Module with an Option Adapter 29
Using Terminal Connector Coding Keys 32
Inserting Terminal Connectors 33
Removing a Terminal Connector 34
Attaching a Busbar 35
Labeling the Components in the Assembly 36

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 4 Dimensions and Mounting Instructions 37
At a Glance 37
Dimensions of Assembled TSX Momentum Devices 38
Standard Adapter on a Typical Base 39
Standard Adapter on a Discrete VAC Base 40
Processor and Option Adapter on a Typical Base 41
Processor and Option Adapter on a Discrete VAC Base 42
Mounting TSX Momentum Devices 43

Chapter 5 Power and Grounding Guidelines 45
At a Glance 45
Voltage Types 46
Structuring Your Power Supply System 47
Selecting Power Supplies 48
Single Power Supply Configuration 49
Protective Circuits for DC Actuators 51
Protective Circuits for AC Actuators 53
Suggested Component Values for AC and DC Actuators 54
Grounding TSX Momentum Devices 55
Grounding DIN Rail Terminals and Cabinets 57
Grounding Analog I/O Lines 58

Part II I/O Base Descriptions 59
At a Glance 59

Chapter 6 170 AAI 030 00 Analog 8 Channel Differential Input Module Base 61
Overview 61
Front Panel Components 62
Specifications 64
Internal Pin Connections 67
Field Wiring Guidelines 68
Wiring Illustrations 70
I/O Mapping 71
Analog Channel Parameters 72
Analog Inputs 74
Input Measuring Ranges 76

Chapter 7 170 AAI 140 00 Analog 16 Channel Single-Ended Input Module Base 79
Overview 79
Front Panel Components 80
Specifications 82
Internal Pin Connections 85
Field Wiring Guidelines 86

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams 88
I/O Mapping. 89
Analog Channel Parameters 90
Analog Inputs 92
Input Measuring Ranges 94

Chapter 8 170 AAI 520 40 Analog 4 Channel RTD, Therm. and mV Input Module Base 97
Overview 97
Front Panel Components 98
Specifications 100
Internal Pin Connections 108
Field Wiring Guidelines 109
Wiring Diagrams 111
I/O Mapping. 112
Analog Channel Parameters 113
Analog Inputs 118
RTD, Thermocouple and mV Input Measuring Ranges 119

Chapter 9 170 AAO 120 00 Analog 4 Channel Output Module Base +/- 10 V, 0 - 20 mA 121
Overview 121
Front Panel Components 122
Specifications 124
Internal Pin Connections 127
Field Wiring Guidelines 128
Wiring Diagrams 130
I/O Mapping. 131
Analog Channel Parameters 132
Analog Outputs 134
Output Ranges 135

Chapter 10 170 AAO 921 00 Analog 4 Channel Output Module Base +/- 10 V, 4 ... 20 mA 137
Overview 137
Front Panel Components 138
Specifications 140
Internal Pin Connections 142
Field Wiring Guidelines 143
Wiring Diagrams 145
I/O Mapping. 146
Analog Channel Parameters 147
Analog Outputs 149
Output Ranges 150

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 11 170 ADI 340 00 24 VDC - 16 Pt. Discrete Input Module Base 151
Overview 151
Front Panel Components 152
Specifications 154
Internal Pin Connections 156
Field Wiring Guidelines 157
Wiring Diagrams 159
I/O Mapping 161

Chapter 12 170 ADI 350 00 24 VDC - 32 Pt. Discrete Input Module Base 165
Overview 165
Front Panel Components 166
Specifications 168
Internal Pin Connections 170
Field Wiring Guidelines 171
Wiring Diagrams 173
I/O Mapping 175

Chapter 13 170 ADI 540 50 120 VAC - 16 Point Discrete Input Module Base 179
Overview 179
Front Panel Components 180
Specifications 182
Internal Pin Connections 185
Field Wiring Guidelines 186
Wiring Diagrams 187
I/O Mapping 189

Chapter 14 170 ADI 740 50 230 VAC - 16 Point Discrete Input Module Base 193
Overview 193
Front Panel Components 194
Specifications 196
Internal Pin Connections 199
Field Wiring Guidelines 200
Wiring Diagrams 201
I/O Mapping 203

Chapter 15 170 ADM 350 10 24 VDC - 16 Pt. In / 16 Pt. Out Module Base 207
Overview 207
Front Panel Components 208
Specifications 210

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Internal Pin Connections 213
Field Wiring Guidelines 214
Wiring Diagrams 216
I/O Mapping. 221

Chapter 16 170 ADM 350 11 24 VDC - 16 Pt. In / 16 Pt. Out Module Base 225
Overview 225
Front Panel Components 226
Specifications 228
Internal Pin Connections 231
Field Wiring Guidelines 232
Wiring Diagrams 234
I/O Mapping. 239

Chapter 17 170 ADM 350 15 24 VDC - 16 Pt. In / 16 Pt. Out Module Base 243
Overview 243
Front Panel Components 244
Specifications 246
Internal Pin Connections 249
Field Wiring Guidelines 250
Wiring Diagrams 252
I/O Mapping. 253

Chapter 18 170 ADM 370 10 24 VDC - 16 Pt. In / 8 Pt. Out @ 2 Amp. Module Base 257
Overview 257
Front Panel Components 258
Specifications 260
Internal Pin Connections 263
Field Wiring Guidelines 264
Wiring Diagrams 266
I/O Mapping. 271

Chapter 19 170 ADM 390 10 24 VDC - 16 Pt. In / 12 Pt. Out Monitored Module Base 275
Overview 275
Front Panel Components 276
Specifications 278
Internal Pin Connections 281
Field Wiring Guidelines 282
Wiring Diagrams 284
I/O Mapping. 287

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 20 170 ADM 390 30 24 VDC - 10 Pt. In / 8 Pt. Relay Out Module Base 291
Overview 291
Front Panel Components 292
Specifications 294
Internal Pin Connections 297
Field Wiring Guidelines 298
Wiring Diagrams 300
I/O Mapping 303

Chapter 21 170 ADM 540 80 120 VAC - 6 Pt. In / 3 Pt. Out Discrete MCC Module Base 307
Overview 307
Front Panel Components 308
Specifications 310
Internal Pin Connections 314
Field Wiring Guidelines 315
Wiring Diagrams 318
I/O Mapping 319
General Modbus Message Rules 321
Output Words 324
Output Words Control Modes 328
Input Words 334
Input Words Control Modes 336

Chapter 22 170 ADM 690 50 120 VAC - 10 Pt. In / 8 Pt. Out Module Bases 339
Overview 339
Front Panel Components 340
Specifications 342
Internal Pin Connections 345
Field Wiring Guidelines 346
Wiring Diagrams 348
I/O Mapping 351

Chapter 23 170 ADM 690 51 120 VAC - 10 Pt. In / 8 Pt. Out Module Bases 355
Overview 355
Front Panel Components 356
Specifications 358
Internal Pin Connections 361
Field Wiring Guidelines 362
Wiring Diagrams 364
I/O Mapping 368

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 24 170 ADO 340 00 24 VDC - 16 Pt. Discrete Output Module Base 371
Overview 371
Front Panel Components 372
Specifications 374
Internal Pin Connections 376
Field Wiring Guidelines 377
Wiring Diagrams 379
I/O Mapping 381

Chapter 25 170 ADO 350 00 24 VDC - 32 Pt. Discrete Output Module Base 385
Overview 385
Front Panel Components 386
Specifications 388
Internal Pin Connections 390
Field Wiring Guidelines 391
Wiring Diagrams 393
I/O Mapping 395

Chapter 26 170 ADO 530 50 120 VAC - 8 Point Discrete Output @ 2A Module Base 399
Overview 399
Front Panel Components 400
Specifications 402
Internal Pin Connections 405
Field Wiring Guidelines 406
Wiring Diagrams 408
I/O Mapping 411

Chapter 27 170 ADO 540 50 120 VAC - 16 Point Discrete Output Module Base 415
Overview 415
Front Panel Components 416
Specifications 418
Internal Pin Connections 421
Field Wiring Guidelines 422
Wiring Diagrams 424
I/O Mapping 427

Chapter 28 170 ADO 730 50 230 VAC - 8 Point Discrete Output @ 2A Module Base 431
Overview 431
Front Panel Components 432
Specifications 434

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Internal Pin Connections 437
Field Wiring Guidelines 438
Wiring Diagrams 440
I/O Mapping 443

Chapter 29 170 ADO 740 50 230 VAC - 16 Point Discrete Output Module Base 447
Overview 447
Front Panel Components 448
Specifications 450
Internal Pin Connections 453
Field Wiring Guidelines 454
Wiring Diagrams 456
I/O Mapping 459

Chapter 30 170 AMM 090 00 Analog 4 Ch. In / 2 Ch. Out Module Base w/ 24 VDC I/O Pts 463
Overview 463
Front Panel Components 464
Specifications 466
Internal Pin Connections 471
Field Wiring Guidelines 472
Wiring Diagrams 474
I/O Mapping 477
Analog Channel Parameters 479
Analog Outputs 481
Analog Inputs 482
Discrete Inputs and Outputs 483
Input Measuring Ranges 484
Error Messages 490

Chapter 31 170 ANR 120 90 Unipolar Analog 6 Ch. In / 4 Ch. Out Module Base with 24 VDC I/O pts 493
Overview 493
Front Panel Components 494
Specifications 496
Internal Pin Connections 500
Field Wiring Guidelines 501
Wiring Diagrams 503
I/O Mapping 505
Output Words 508
Inputs Words 512
Input and Qutput Measuring Ranges 514
Error Messages 516

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter 32 170 ANR 120 91 Bipolar Analog 6 Ch. In / 4 Ch. Out Module Base with 24 VDC I/O pts. 517
Overview 517
Front Panel Components 518
Specifications 520
Internal Pin Connections 525
Field Wiring Guidelines 526
Wiring Diagrams 528
I/O Map 530
Register for Outputs 531
4x Registers 534
Register for Inputs 535
Analog Map 537
Discrete I/O Points and IEC Compliant Data Mapping 538
Input and Output Ranges 539
Interpreting the Error Bits 541

Chapter 33 170 ARM 370 30 24 VDC - 10 Pt. In / 8 Pt. Relay Out Module Base (120 VAC powered) 543
Overview 543
Front Panel Components 544
Specifications 546
Internal Pin Connections 549
Field Wiring Guidelines 550
Wiring Diagrams 553
I/O Mapping 556

Chapter 34 170 CPS 111 00 TIO Power Supply Module 559
Overview 559
Front Panel Components 560
Specifications 562
Terminal Connectors 566
External Operating Voltage Connections 568

Appendices 571
Overview 571

Appendix A System Specifications 573
At a Glance 573
Power Supply Specifications 574
Field Device Interfaces 575
Environmental Specifications 576


Appendix B Interference Suppression 579
Interference Suppression 579

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Appendix C IEC 1131 Input Types 581
Input Voltage and Current Thresholds 581
Appendix D Field Wire Length 583
Calculating Field Wire Length for AC and DC Devices 583
Appendix E IEC Symbols 585
Glossary of Symbols 585
Index xix

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Safety Information

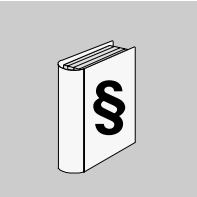

Important Information

NOTICE

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a Danger or Warning safety label indicates that an electrical hazard exists, which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠ DANGER

DANGER indicates an imminently hazardous situation, which, if not avoided, **will result** in death, serious injury, or equipment damage.

⚠ WARNING

WARNING indicates a potentially hazardous situation, which, if not avoided, **can result** in death, serious injury, or equipment damage.

⚠ CAUTION

CAUTION indicates a potentially hazardous situation, which, if not avoided, **can result** in injury or equipment damage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PLEASE NOTE Electrical equipment should be serviced only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material. This document is not intended as an instruction manual for untrained persons.

© 2003 Schneider Electric All Rights Reserved

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

About the Book



At a Glance

Document Scope

This manual contains complete information about the TSX Momentum I/O Bases. It contains only passing references to other TSX Momentum components, including Processor Adapters, Option Adapters and Communication Adapters

Validity Note

The data and illustrations found in this book are not binding. We reserve the right to modify our products in line with our policy of continuous product development. The information in this document is subject to change without notice and should not be construed as a commitment by Schneider Electric.

Related Documents

Title of Documentation	Reference Number
TSX Momentum Processor Adapter and Option Adapter User Guide	870 USE 101 00
TSX Momentum InterBus Communication Adapter User Manual	870 USE 009 00
TSX Momentum Profibus-DP Communication Adapter User Manual	870 USE 004 00
TSX Momentum FIPI/O Communication Adapter User Manual	870 USE 005 00
TSX Momentum ControlNet Communication Adapter User Manual	870 USE 007 00
TSX Momentum Modbus Plus PNT Series Communication Adapter User Manual	870 USE 103 00
TSX Momentum DeviceNet Communication Adapter User Manual	870 USE 104 00
TSX Momentum Modbus Plus NEF Series Communication Adapter User Manual	870 USE 111 00
TSX Momentum Ethernet Communication Adapter User Manual	870 USE 112 00

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Product Related Warnings

Schneider Electric assumes no responsibility for any errors that may appear in this document. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

No part of this document may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without express written permission of Schneider Electric. All rights reserved. Copyright 2002

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When controllers are used for applications with technical safety requirements, please follow the relevant instructions.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this product related warning can result in injury or equipment damage.

User Comments

We welcome your comments about this document. You can reach us by e-mail at TECHCOMM@modicon.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Using Momentum I/O Bases

I

At a Glance

Purpose

This part describes how to assemble TSX Momentum I/O bases with other Momentum components, how to mount assembled modules and how to ground them.

What's in this Part?

This part contains the following chapters:

Chapter	Chapter Name	Page
1	Introducing the TSX Momentum I/O Bases	3
2	Selecting Other TSX Momentum Components	9
3	Assembly	19
4	Dimensions and Mounting Instructions	37
5	Power and Grounding Guidelines	45

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Introducing the TSX Momentum I/O Bases

1

At a Glance

Purpose

This chapter introduces the basic features and types of TSX Momentum I/O bases.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Basic Features of I/O Bases	4
Types of I/O Bases	6

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Basic Features of I/O Bases

Overview

This section provides a drawing of a typical I/O base and describes basic features of I/O bases.

Front View

The front panel components of a typical I/O base are shown in the illustration below.

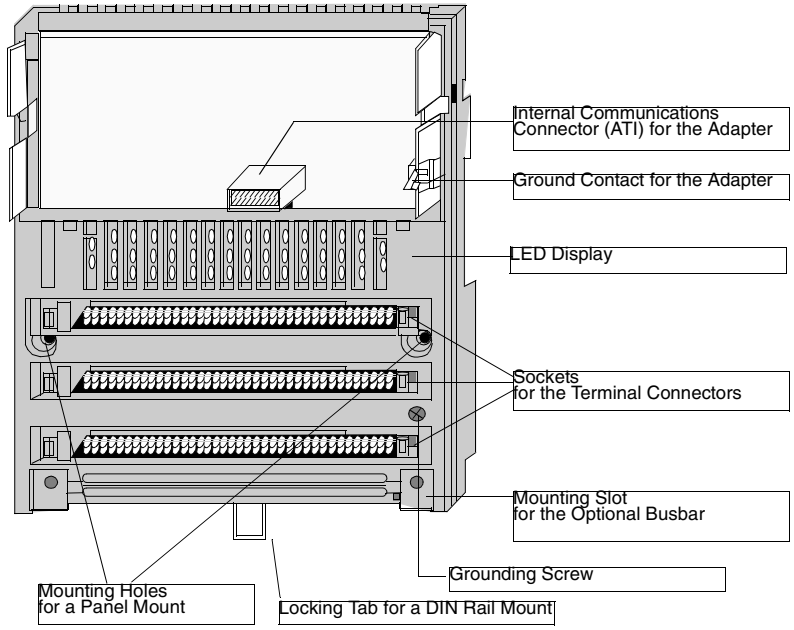

Internal Communications Connector

The internal communications connector on an I/O base provides automatic communication to any adapter mounted on the base.

LED Display

Each I/O base has a custom LED display, providing information about the status of input and output devices. Refer to the LED illustration and description for your I/O base for details.

Ground Contact

This contact provides an earth ground connection to any adapter mounted on the base.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Terminal Connector Sockets	Each I/O base has sockets for as many as three terminal connectors. Terminal connectors are required for connecting I/O devices and must be ordered separately. For ordering information, see *Terminal Connectors, p. 10*.
Busbar Slot	A slot at the bottom of the I/O base allows a busbar to be attached to support 3- and 4-wire field devices. Busbars are optional. They must be ordered separately. For ordering information, see *Busbar Numbers, p. 35*.
Mounting	Each I/O base has mounting holes for a panel mount and a locking tab for a DIN rail mount. For mounting instructions, see *Mounting TSX Momentum Devices, p. 43*.
CE Compliant	TSX Momentum I/O bases are designed to meet CE mark requirements for open equipment. Other agency approvals can be found in the specifications for each I/O Base module.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Types of I/O Bases

Overview

This section provides part numbers and descriptions for the TSX Momentum I/O bases.

Analog

The following analog I/O bases are available.

Part Number	Channels	Type	Details
170 AAI 030 00	8	Input	Broken wire detection
170 AAI 140 00	16	Input	Single-ended
170 AAI 520 40	4	Input	RTD/Thermocouple/mV
170 AAO 120 00	4	Output	0...20 mA
170 AAO 921 00	4	Output	4...20 mA

Combination

The following I/O bases support a combination of analog and discrete I/O.

Part Number	Channels	Type	Details
170 AMM 090 00	4 analog in 2 analog out 4 discrete in 2 discrete out	Input/Output	24 VDC
170 ANR 120 90 Unipolar	6 analog in 4 analog out 8 discrete in 8 discrete out	Input/Output	24 VDC
170 ANR 120 91 Bipolar	6 analog in 4 analog out 8 discrete in 8 discrete out	Input/Output	24 VDC

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete

The following discrete I/O bases are available.

Part Number	Points	Type	Details
170 ADI 340 00	16	Input	24 VDC
170 ADI 350 00	32	Input	24 VDC
170 ADI 540 50	16	Input	120 VAC
170 ADI 740 50	16	Input	230 VAC
170 ADM 350 10	16 in 16 out	Input Output	24 VDC, True High
170 ADM 350 11	16 in 16 out	Input Output	24 VDC, True High Fast Inputs
170 ADM 350 15	16 in 16 out	Input Output	24 VDC, True Low
170 ADM 370 10	16 in 8 out	Input Output	24 VDC @ 2 A
170 ADM 390 10	16 in 12 out	Input Output	24 VDC
170 ADM 390 30	10 in 8 relay out	Input Output	24 VDC
170 ADM 690 51	10 in 8 out	Input Output	120 VAC
170 ADO 340 00	16	Output	24 VDC
170 ADO 350 00	32	Output	24 VDC
170 ADO 530 50	8	Output	115 VAC @ 2A
170 ADO 540 50	16	Output	120 VAC
170 ADO 730 50	8	Output	230 VAC @ 2A
170 ADO 740 50	16	Output	230 VAC
170 ARM 370 30	10 in 8 out	Input Output	120 VAC Powered 24 VDC in

Note: The 170 ADM 690 50 has been replaced by the 170 ADM 690 51.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specials

The following specialty I/O bases are available.

Part Number	Points	Type	Details
170 AEC 920 00	2	Counter	24 VDC
170 ANM 050 10		Seriplex	
170 ADM 540 80	6 in/3 out	Modbus	120 VAC

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Selecting Other TSX Momentum Components

2

At a Glance

Purpose

A TSX Momentum I/O base must be assembled with a Communication Adapter or Processor Adapter in order to function. If you choose a Processor Adapter, you may also use an Option Adapter.
This chapter describes:

- TSX Momentum adapters
- Terminal connectors
- Busbars.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Which Components Should I Use?	10
Communication Adapters	11
Processor Adapters	12
Option Adapters	14
Terminal Connectors	15
Busbars	16

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Which Components Should I Use?

Purpose

This section explains the choices you have in assembling a Momentum I/O device.


Primary Adapter

Each TSX Momentum I/O base must be assembled with a Communication Adapter or a Processor Adapter. Without one of these adapters, the I/O base will not function.

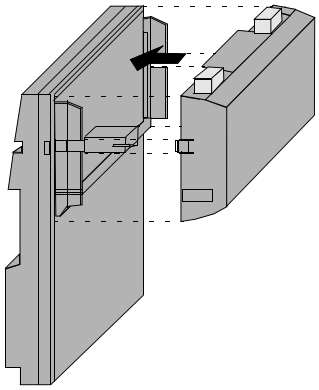

Option Adapter

If you use a Processor Adapter, you may add an Option Adapter. Option Adapters cannot be used with Communication Adapters.

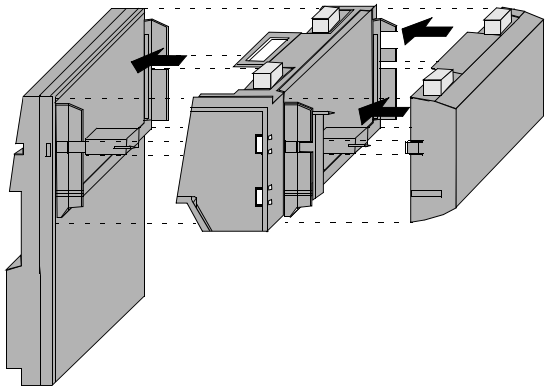

Terminal Connectors

Terminal connectors must be used to connect I/O devices to the I/O base.

Busbars

Busbars may be used to support 3- and 4-wire field devices. They are optional.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Communication Adapters

Overview

This section describes the function of Communication Adapters, the types available and where to get more information.

Function

A Communication Adapter provides an interface between an I/O base and a number of industry standard open-communication networks.

Types

The following Communication Adapters are available:

For This Network...	Order This Adapter...	And This Manual...
ControlNet	170 LNT 810 00	870 USE 007 00
DeviceNet	170 LNT 710 00	870 USE 104 00
Ethernet	170 ENT 110 01	870 USE 114 00
FIPI/O	170 FNT 110 00	870 USE 005 00
InterBus	170 INT 110 00 170 INT 110 01 170 INT 120 00	870 USE 009 00
Modbus Plus (IEC data format)	170 PNT 110 20 (Single Port) 170 PNT 160 20 (Dual Port)	870 USE 103 00
Modbus Plus (984 data format)	170 NEF 110 21 (Single Port) 170 NEF 160 21 (Dual Port)	870 USE 111 00
Profibus-DP	170 DNT 110 00	870 USE 004 00

For More Information

Refer to the manuals specified in the chart above.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Processor Adapters

Overview

This section describes the function of Processor Adapters, the types available and where to get more information.

Function

A Processor Adapter is a Programmable Logic Controller (PLC). It stores and executes a logic program and controls I/O points over a common communication bus. It is designed to mount on any Momentum I/O base and to control its points as local I/O.
10 TSX Momentum Processor Adapters are available.

Model	Internal Memory	Flash RAM	Clock Speed	Comm Ports
171 CCS 700 00	64K bytes	256K bytes	20 MHz	One Modbus RS-232 port
171 CCS 700 10	64K bytes	256K bytes	32 MHz	One Modbus RS-232 port
171 CCS 760 00	256K bytes	256K bytes	32 MHz	One Modbus RS-232 port
				One I/O Bus port
171 CCC 760 10	512K bytes	512K bytes	32 MHz	One Modbus RS-232 port
				One I/O Bus port
171 CCS 780 00	64K bytes	256K bytes	20 MHz	One Modbus RS-232 port
				One Modbus RS-485 port
171 CCC 780 10	512K bytes	512K bytes	32 MHz	One Modbus RS-232 port
				One Modbus RS-485 port
171 CCC 960 20	512K bytes	512K bytes	50 MHz	One Ethernet port
				One I/O Bus port
171 CCC 960 30	512K bytes	512K bytes	50 MHz	One Ethernet port
				One I/O Bus port
171 CCC 980 20	512K bytes	1 M bytes	50 MHz	One Ethernet port
				One Modbus RS-485 port

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Model	Internal Memory	Flash RAM	Clock Speed	Comm Ports
171 CCC 980 30	512K bytes	1 M bytes	50 MHz	One Ethernet port
				One Modbus RS-485 port
171 CCC 960 91	512K bytes	512K bytes	50 MHz	One Ethernet port
				One I/O Bus port
171 CCC 980 91	512K bytes	1 M bytes	50 MHz	One Ethernet port
				One Modbus RS-485 port

For More Information

For detailed descriptions of all the Processor Adapters, refer to the *TSX Momentum Processor Adapter and Option Adapter User Guide* (870 USE 101 00).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Option Adapters

Overview

This section describes the function of Option Adapters, the types available and where to get more information.

Function

An Option Adapter is used in conjunction with a Processor Adapter and an I/O base to provide:

- A time-of-day clock
- A battery backup
- One or more additional communication ports

Types

The following Option Adapters are available

For These Communication Ports...	Order Adapter Part Number...
One user-selectable RS-232/RS-485 port	172 JNN 210 32
One Modbus Plus port	172 PNN 210 22
Two (redundant) Modbus Plus ports	172 PNN 260 22

For More Information

For detailed descriptions of all the Option Adapters, refer to the *TSX Momentum Processor Adapter and Option Adapter User Guide* (870 USE 101 00).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Terminal Connectors

Overview

This section describes:
- The function of terminal connectors
- The coding key feature
- Types of terminal connectors available
- How many are needed
- How to order them

Function

Terminal connectors are used to connect I/O field devices and the power supply to the I/O base. While busbars may also be used, terminal connectors are electrically connected to the module, busbars are not.


Coding Key Feature

Some I/O bases can be operated over dangerous voltage ranges (above 42.4 VAC and above 60 VDC). Coding keys shipped with the I/O base and coding tabs shipped with the terminal connector can be used to prevent the accidental insertion into an I/O base of a terminal connector wired for the wrong voltage range.
For information on using coding keys, see *Using Terminal Connector Coding Keys, p. 32*.


Note: For maximum protection, key coding is required during installation.

Types

Terminal connectors are available in screw-in and spring-clip versions.



Screw-type terminal block



Spring-clip terminal block

How Many Do I Need?

One terminal connector is required for each row of terminals that you will connect to the module's operating voltages and field devices.

Ordering Information

Terminal connectors must be ordered separately. They are available in kits of three. They are not shipped with the Momentum I/O bases

Type	Kit Part Number	Wire Type	Wire Size
Screw-in (set of 3)	170 XTS 001 00	Solid or stranded	If one wire, use 12AWG ($2.5mm^2$) max. If two wires, use 14AWG ($1.5mm^2$) max.
Spring-clip (set of 3)	170 XTS 002 00	Solid only	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Busbars

Overview


This section describes:
- The function of busbars
- Types of busbars
- How to choose a busbar
- How to order a busbar

Function


A busbar may be plugged into the fourth row of an I/O base. Busbars provide a common connection for the field devices and serve as protective distribution connectors, for instance to PE. Each row of terminals on the busbar is connected internally. There is no electrical connection to the I/O base.

Types


Depending on the I/O base and the type and number of field devices to which it is connected, a 1-, 2-, or 3-row busbar may be used.
They are available in screw-in and spring-clip versions.




Screw-in 1 -row busbar




Spring-clip 1-row busbar




Screw-in 2 -row busbar



Spring-clip 2-row busbar

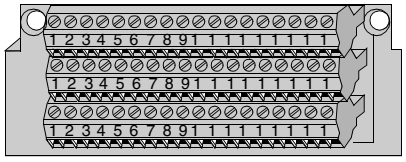

Screw-in 3 -row busbar

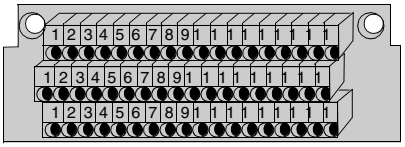

Spring-clip 3-row busbar

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Busbars have the following specifications:

Busbar type	Screw-in	Spring-clip
Max. load at 20 deg. C	250 V 14 A	250 V 17.5 A
Short circuit	100 A 30 s	100 A 30 s
Test voltage	2.2 kV	2.2 kV
Creepage / air dist.	per IEC 664A	per IEC 664A
Pollution	Degree 2	Degree 2
Contact derating at 70 deg. C	ca. 60% of nominal value	ca. 60% of nominal value

How to Choose a Busbar

See the internal pin connections and field wiring diagrams associated with your I/O base to determine whether or not you need a busbar and which busbar best suits your needs.

Ordering Information

Busbars should be ordered separately. They are not shipped with I/O bases.

Busbar Type	Part Number	# of Rows	Wire Size
Screw-in	170 XTS 006 01	1	If one wire, use 10AWG (4mm^2) max. If two wires, use 14AWG (2.5mm^2) max.
	170 XTS 005 01	2	One or two wires 14AWG (2.5mm^2) max.
	170 XTS 004 01	3	One or two wires 14AWG (2.5mm^2) max.
Spring-clip	170 XTS 007 01	1	If one wire, use 10AWG (4mm^2 max. If two wires, use 14AWG (2.5mm^2) max.
	170 XTS 008 01	2	One or two wires 14AWG (2.5mm^2) max.
	170 XTS 003 01	3	One or two wires 14AWG (2.5mm^2) max.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Assembly

3

At a Glance

Purpose

This chapter describes how to assemble and disassemble the components of a TSX Momentum device:

- An I/O base
- A Communication Adapter or a Processor Adapter
- An Option Adapter
- Terminal connectors
- Busbars
- A label

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Assembling an Adapter and an I/O Base	20
Disassembling an Adapter from an I/O Base	23
Assembling a Processor Adapter and an Option Adapter	25
Mounting the Assembled Adapters on the I/O Base	27
Disassembling a Module with an Option Adapter	29
Using Terminal Connector Coding Keys	32
Inserting Terminal Connectors	33
Removing a Terminal Connector	34
Attaching a Busbar	35
Labeling the Components in the Assembly	36

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Assembling an Adapter and an I/O Base

Overview

A Processor Adapter or Communication Adapter can be snapped directly onto a Momentum I/O base. This section contains safety precautions for handling components and an assembly procedure.

Connection Points

The adapter and I/O base connect at these three points:

- The plastic snap extensions on the two sides of the adapter fit into the two slots on the sides of the I/O base
- The 12-pin ATI connectors on the two units mate together

No Tools Required

The components can be snapped together by hand – no assembly tools are required.

	**CAUTION** **ADAPTER MAY BE DAMAGED BY STATIC ELECTRICITY** Use proper ESD procedures when handling the adapter, and do not touch the internal elements. The adapter's electrical elements are sensitive to static electricity. **Failure to follow this precaution can result in injury or equipment damage.**


	**CAUTION** **ELECTRICAL CIRCUITRY MAY BE EXPOSED** Electrical circuitry on the I/O base may be exposed when a Momentum adapter is not mounted. Make sure that the I/O base is not under power when it does not have an adapter mounted on it. To make sure that power is not present, do not insert the wiring connectors to the I/O base until after the adapter has been mounted. **Failure to follow this precaution can result in injury or equipment damage.**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


	CAUTION
	Because of the voltage present when the unit is under power, the I/O base must never be put under power unless an adapter is on top of it. Be sure that the power is OFF whenever the I/O base has not been fully assembled. To be sure that power is not present, do not insert the wiring terminal connectors onto the I/O base until after the adapter has been mounted. If you intend to remove an adapter from the base, disconnect the terminal connectors before removing the adapter. **Failure to follow this precaution can result in injury or equipment damage.**

Procedure

Follow the steps in the table below to assemble an adapter and an I/O base.

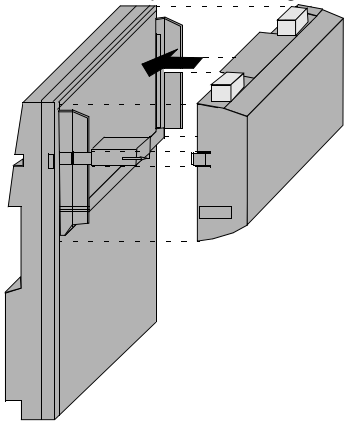Step	Action
1	Choose a clean environment to assemble the I/O base and adapter to protect the circuitry from contamination.
2	Make sure that the I/O base is not under power while you assemble the module.
3	Align the two plastic snap extensions on the adapter with the slots on the sides of the I/O base. The 12-pin ATI connectors will automatically line up when the units are in this position. The two devices should be oriented such that their communication ports are facing out on the back side of the assembly. 

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

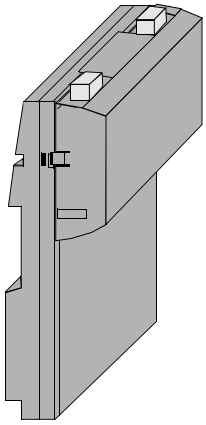Step	Action
4	Push the adapter onto the base, gently pressing the locking tabs inward. **Result:** The locking tabs on each side of the adapter slide inside the I/O base and out through the locking slot. The 12-pin ATI connectors on the two units are mated to each other in the process. 

Next Step

Once the adapter and I/O base have been assembled, the device can be mounted on a DIN rail or surface-mounted inside a panel enclosure.
A Momentum device is classified as open equipment; ie., electrical circuitry on the unit may be exposed. Open equipment should be installed in an industry-standard enclosure, and direct access must be restricted to qualified service personnel.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Disassembling an Adapter from an I/O Base

Overview

This section contains safety precautions and a procedure for disassembling an adapter from an I/O base.

Tools Required



A flat-head screw driver.

	**CAUTION** **ELECTRICAL CIRCUITRY MAY BE EXPOSED** Before removing an adapter from the base, disconnect the wiring connectors. Make sure that the I/O base is not under power when it does not have a Momentum adapter mounted on it. **Failure to follow this precaution can result in injury or equipment damage.**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Procedure

Follow the steps in the table below to remove an adapter from an I/O base.

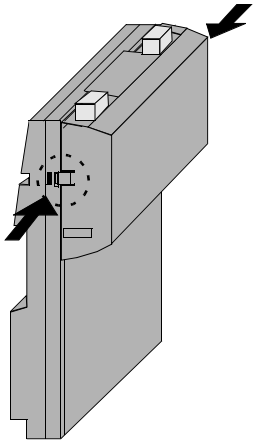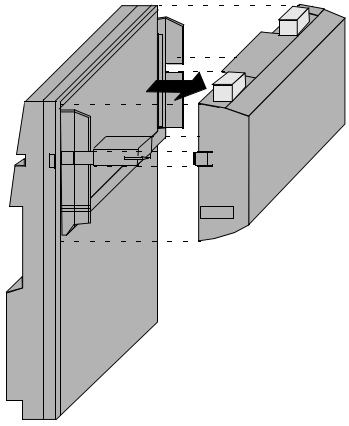Step	Action
1	Choose a clean environment to disassemble the unit, in order to protect the circuitry from contamination.
2	Make sure that the I/O base is not under power by removing the terminal connectors from the I/O base.
3	Use a screwdriver to push the clips on both sides of the adapter inward, as shown in the illustration below. 
4	Lift off the adapter. 

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Assembling a Processor Adapter and an Option Adapter

Overview

If a TSX Momentum Option Adapter is used, it is mounted between a M1 Processor Adapter and an I/O base in a three-tiered stack.
This section contains guidelines, safety precautions and a procedure for assembling a Processor Adapter and an Option Adapter.

Guidelines

We recommend that you snap together the Option Adapter and the M1 Processor Adapter before mounting them on the I/O base.

Connection Points

The Option Adapter and M1 Processor connect at these four points:

- The plastic snap extensions on the two sides of the Processor Adapter fit into the two slots on the sides of the Option Adapter
- The 12-pin ATI connectors on the center of the back walls of the two units mate together
- The 34-pin processor extension connectors that run along the left sidewalls of the components mate together

No Tools Required

The components can be snapped together by hand; no assembly tools are required. A flat-head screw driver is required to disassemble the unit.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Procedure

Follow the steps in the table below to assemble an Option Adapter and an M1 Processor Adapter.

Step	Action
1	Choose a clean environment to assemble the option adapter and processor to protect the circuitry from contamination.
2	Align the two plastic snap extensions on the sides of the M1 Processor Adapter with the slots on the sides of the Option Adapter. The 12-pin ATI connectors and processor extension connectors will automatically line up when the units are in this position. The two devices should be oriented such that their communication ports are facing out on the back side of the assembly.




CAUTION

PIN ALIGNMENT

Proper assembly requires that the 34 pins on the processor extension connector be aligned correctly with the mating socket on the M1 processor adapter. Do not connect one side and try to rotate the M1 onto the option adapter.

Failure to follow this precaution can result in injury or equipment damage.

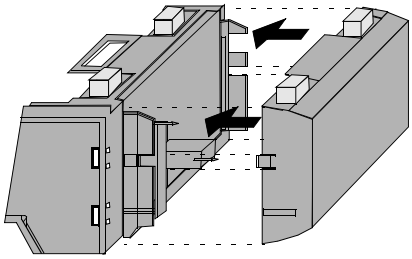Step	Action
3	Push the Processor Adapter onto the Option Adapter, gently pressing the locking tabs inward.  **Result:** The locking tabs on each side of the Processor Adapter slide inside the Option Adapter and out through the locking slot. The 12-pin ATI connectors on the two units are mated to each other in the process.

Next Step

Follow the directions in the next section to mount the assembled adapters on the I/O base.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mounting the Assembled Adapters on the I/O Base

Overview

This section gives guidelines, safety precautions and a procedure for mounting the assembled Processor and Option Adapter on an I/O base.

Connection Points

The assembled adapters connect with the I/O base at these seven points:

- Two plastic snaps on the front of the Option Adapter fit into two slots on the front of the I/O base
- The plastic snap extensions on the two sides of the Option Adapter fit into the two slots on the sides of the I/O base
- The 12-pin ATI connectors on the center of the back walls of the two units mate together
- The plastic stirrup on the back of the Option Adapter clips onto the bottom of the I/O base

No Tools Required

The components can be snapped together by hand; no assembly tools are required. A flat-head screw driver is required to disassemble the unit.



CAUTION

ELECTRICAL CIRCUITRY MAY BE EXPOSED



Electrical circuitry on the I/O base may be exposed when an adapter is not mounted. Make sure that the I/O base is not under power whenever it does not have a Momentum adapter mounted on it.
To make sure that power is not present, do not insert the wiring connectors to the I/O base until after the adapter has been mounted. When more than one connector is on the I/O base, remove all connectors to prevent the unit from receiving power from an unexpected source.

Failure to follow this precaution can result in injury or equipment damage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Procedure

Follow the steps in the table below to mount the assembly on an I/O base

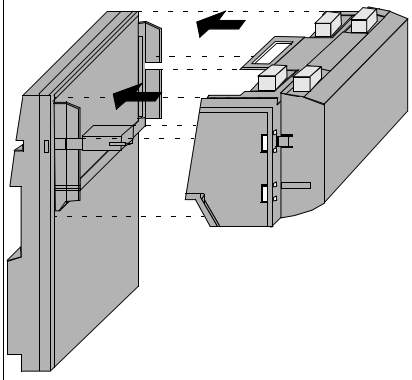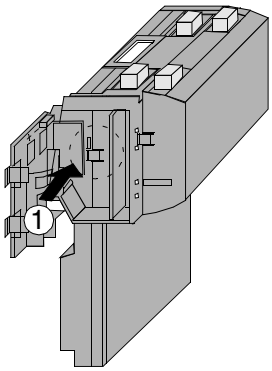Step	Action
1	Make sure that the I/O base is not under power when you assemble the module.
2	Align the four plastic snap extensions (on the front and sides of the Option Adapter) with the slots on the I/O base. The 12-pin ATI connectors will automatically line up when the units are in this position. The devices should be oriented such that their communication ports are facing out on the back side of the assembly. 
3	Push the assembled adapters onto the base, gently pressing the locking tabs inward. Snap #1 shown in the illustration below will not align properly with the mating slot in the I/O base unless the Option Adapter is placed straight onto the base. Do not attach just one latch and rotate the Option Adapter onto the I/O base.  **Result:** The locking tabs on each side of the Option Adapter slide inside the I/O base and out through the locking slot. The 12-pin ATI connectors on the two units are mated to each other in the process.
4	Apply slight pressure to the top of the stirrup on the back of the Option Adapter so that it snaps into place on the bottom of the I/O base.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Disassembling a Module with an Option Adapter

Overview

The three-tiered assembly is designed to fit together tightly so it can withstand shock and vibration in an operating environment.
This section contains two procedures:

- Removing the assembled adapters from the I/O base
- Removing the Option Adapter from the Processor

Tools Required

Flat-head screwdriver.

Procedure 1

Follow the steps in the table below to remove the assembled Option Adapter and M1 Processor Adapter from the I/O base.Step Action Element

Step	Action
1	Make sure that the power is off by removing the terminal connectors from the I/O base.
2	Remove the assembled unit from its wall or DIN rail mounting surface.





CAUTION

EXPOSED CIRCUITRY IN BATTERY COMPARTMENT

Use care when you insert a screwdriver in the battery compartment so that you do not scratch any exposed elements.

Failure to follow this precaution can result in injury or equipment damage.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

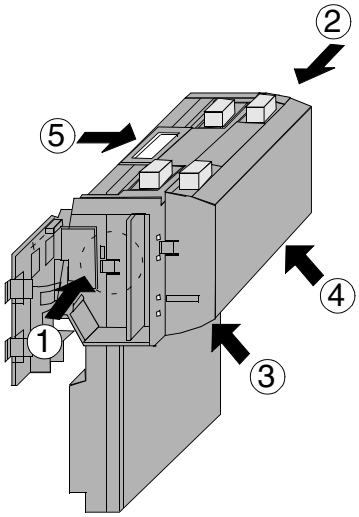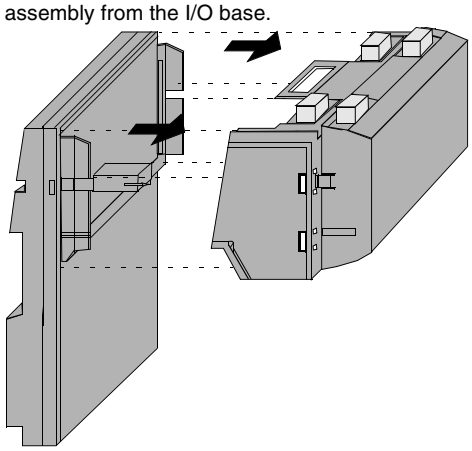Step	Action
3	Open the battery door and use a flat-head screwdriver to release snaps 1 and 2 as shown in the illustration below. 
4	Once snaps 1 and 2 have been disengaged, use the screwdriver to release snaps 3 and 4 on the front of the assembly.
5	Gently lift the stirrup on the back of the option adapter with your fingers until it disengages from the bottom of the I/O base. Then lift the Option Adapter and M1 assembly from the I/O base. 
6	Follow the directions in the next procedure to remove the Option Adapter from the Processor.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Procedure 2

Follow the steps in the table below to remove the Option Adapter from the M1 processor.

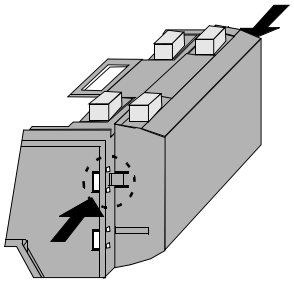Step	Action
1	Use a screwdriver to push the clips on both sides of the adapter inward. 
2	Lift off the adapter.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Using Terminal Connector Coding Keys

Overview

This section describes how to use terminal connector coding keys. It also provides an illustrated example of coded terminals.


How Coding Keys Work


Each I/O base has a series of slots into which you can insert one or more of the coding keys. Each terminal connector has a similar series of slots into which you can insert one or more of the coding tabs. When a key and a tab are inserted into slots that should mate, the I/O base and the connector cannot be physically connected.

Note: For maximum protection, key coding is required during installation.

Example

An example of a key-coded screw-in terminals is shown in the figure below.

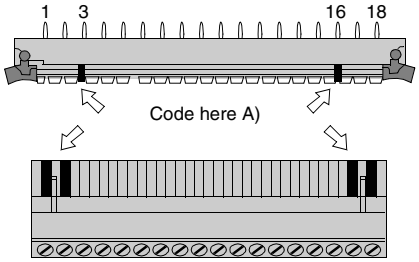

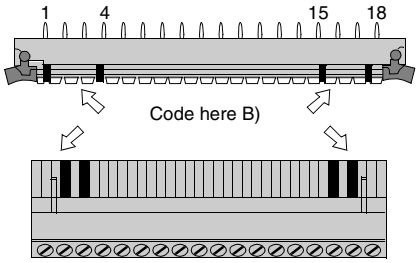

A) Coding for Voltage Range I (≤ 42.4 VAC / ≤ 60 VDC) e.g. 24 VDC

B) Coding for Voltage Range II (≥ 42.4 VAC / ≥ 60 VDC) e.g. 60 VDC

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Inserting Terminal Connectors


Overview

This section contains safety precautions and a diagram illustrating how to insert terminal connectors in a TSX Momentum I/O base.

	WARNING
	ELECTRICAL VOLTAGES PRESENT Electrical voltages are present when the I/O base is under power. Make sure that power is not present while you are handling the coding keys on the I/O base and on the terminal connectors. **Failure to follow this precaution can result in death, serious injury, or equipment damage.**

Inserting a Terminal Connector

Install the terminal connectors by pushing them into the coded pin connectors (row 1 ... 3 of the I/O base).

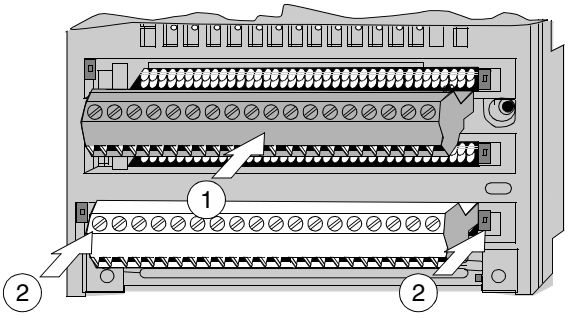

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Removing a Terminal Connector

Overview

This section describes how to remove a terminal connector from a TSX Momentum I/O base.

Diagram

To remove a terminal connector, press the two tabs at the ends of the row (labeled 1 in the figure below).

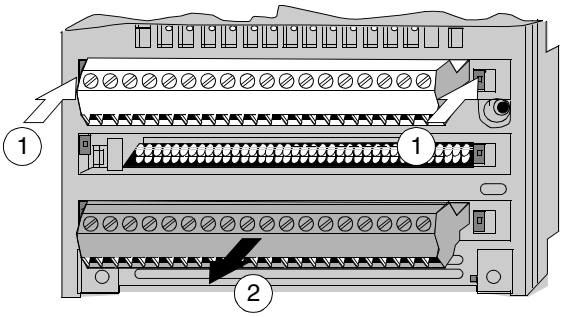

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Attaching a Busbar

Overview

This section describes how to attach a busbar to an I/O base.

General

An optional busbar may be inserted into the fourth row of an I/O base. Busbars provide a common connection for the field devices and serve as protective distribution connectors, for instance to PE. Each row of terminals on the busbar is connected internally. There is no connection to the I/O base.

> **Note:** See the internal pin connections and field wiring diagrams associated with your I/O base to determine whether or not you need a busbar and which busbar best suits your needs.

Busbar Types


Depending on the I/O base and the type and number of field devices to which it is connected, a 1-, 2-, or 3-row busbar may be used. Busbars are separately ordered items; they are not shipped with the I/O bases. They are available in either screw-in and spring-clip versions.

Screw Size

For a screw-in type busbar, use the two, self-tapping Phillips head machine screws provided, to fasten it to the I/O base.

Busbar Numbers

The following table provides ordering information on the different busbar types:

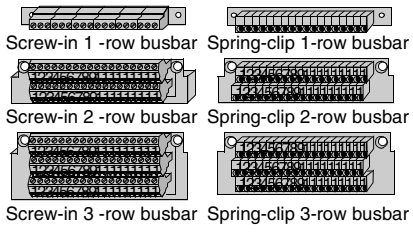Busbar Type	Part Number	# of Rows	Wire Size
Screw-in	170 XTS 006 01	1	One or two wires up to 10 AWG (4 mm^2
	170 XTS 005 01	2	One or two wires up to 14 AWG (1.5 mm^2)
	170 XTS 004 01	3	 Screw-in 1 -row busbar Spring-clip 1-row busbar Screw-in 2 -row busbar Spring-clip 2-row busbar Screw-in 3 -row busbar Spring-clip 3-row busbar
Spring-clip	170 XTS 007 01	1	
	170 XTS 008 01	2	
	170 XTS 003 01	3	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Labeling the Components in the Assembly

Overview

A fill-in label is shipped with each I/O base. This label should be attached to the face of the Communication Adapter or M1 Processor Adapter that you mount on that base.
This section describes the label and provides an illustrated example.


Fill-In Label

A completed label provides information about the assembled module and its I/O field devices that can be used by service and maintenance personnel.
The model number of the I/O base is pre-screened onto the fill-in label directly above the color code. The cutout area above the I/O model number allows the pre-screened model number of the adapter to show through.

Note: An Option Adapter may also be used in the assembled module. You will find its model number printed in the upper left corner of Option Adapter housing.

Example of a Fill-In Label

A sample fill-in label is illustrated in the diagram below. The numbered pointers in the diagram refer to the descriptions in the table that follows.

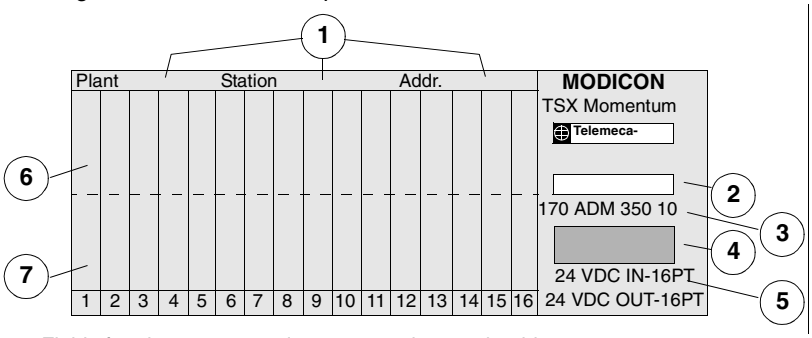

1 Fields for plant name, station name and network address

2 Cutout–the model number of the Adapter shows through

3 Model Number of the I/O base

4 Color code of the I/O base

5 Short description of the I/O base

6 Field for the symbol name of inputs

7 Field for the symbol name of outputs

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Dimensions and Mounting Instructions

4

At a Glance

Purpose

This chapter gives dimensions of assembled TSX Momentum devices and describes how to mount them on a DIN rail or wall.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Dimensions of Assembled TSX Momentum Devices	38
Standard Adapter on a Typical Base	39
Standard Adapter on a Discrete VAC Base	40
Processor and Option Adapter on a Typical Base	41
Processor and Option Adapter on a Discrete VAC Base	42
Mounting TSX Momentum Devices	43

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Dimensions of Assembled TSX Momentum Devices

Overview

This section contains general information about the dimensions of TSX Momentum assemblies.

Dimension Factors

The following factors influence the dimensions of the assembly:

- The type of I/O base
- Use of an Option Adapter
- Use of busbars

Mandatory Vertical Clearances

The vertical clearances illustrated in the dimension drawings must be maintained to assure proper heat dissipation.

Horizontal Clearances

In all cases, maintain 1 in of clearance between Momentum devices and the edge of the cabinet.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Standard Adapter on a Typical Base

Introduction


This section provides dimensions for a standard Processor Adapter or Communications Adapter mounted on a typical analog or VDC I/O base.

Notes

The wiring from the terminal connectors dictates the minimum depth (60 mm) of this assembly.
The figure on the right shows an additional 30 mm length dimension for an optional three-row busbar.

Illustration

The following illustration shows dimensions for this assembly:

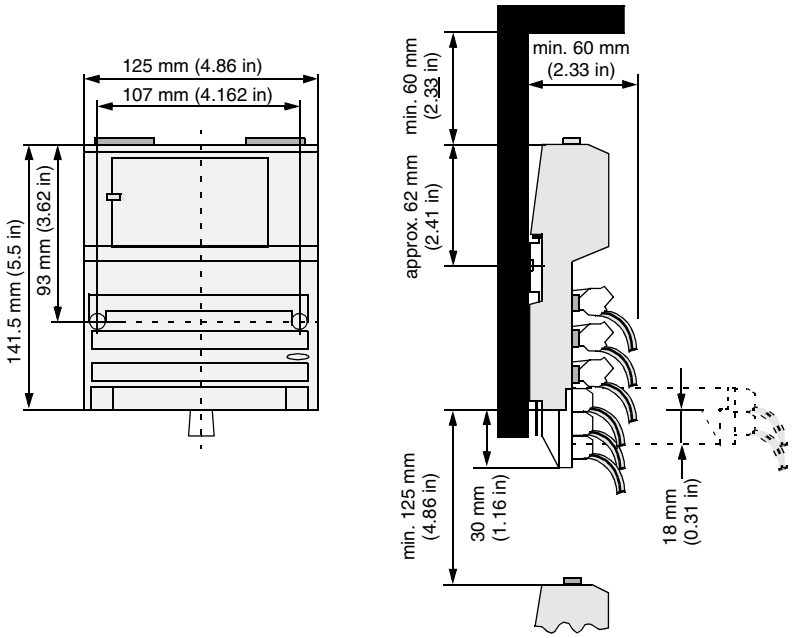

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Standard Adapter on a Discrete VAC Base

Introduction


If you are using a discrete VAC I/O base such as a 170 ADI 540 50 or a 170 ADO 540 50, refer to the drawing below for your dimensions.

Notes

The minimum depth dimension (65 mm) is determined by the unit housings, not the wiring terminals.
The figure on the right shows an addition 30 mm length dimension for an optional three-row busbar.

Illustration

The following illustration shows dimensions for this assembly:

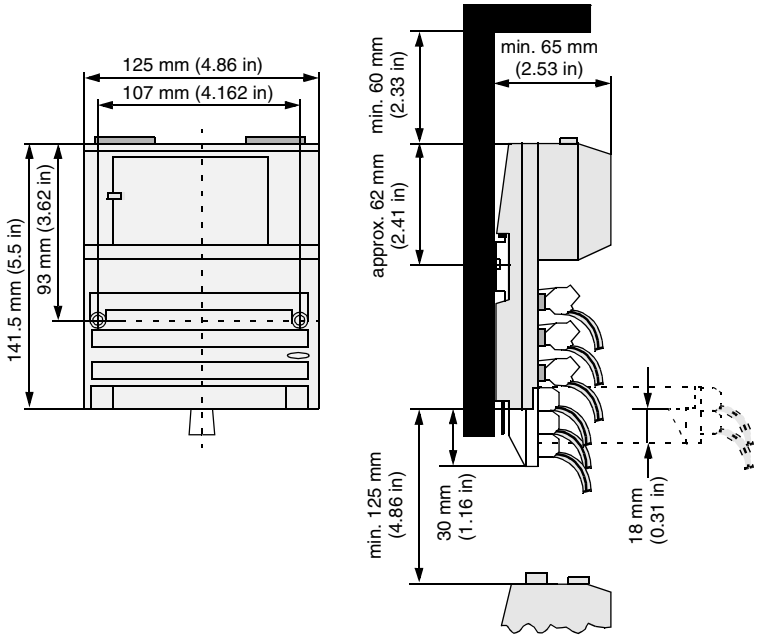

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Processor and Option Adapter on a Typical Base

Introduction


This section provides dimensions for a Processor Adapter and an Option Adapter mounted on a typical analog or VDC I/O base.

Notes

The Option Adapter adds to the width of this assembly (total 144 mm).
The figure on the right shows an addition 30 mm length dimension for an optional three-row busbar.

Illustration

The following illustration provides dimensions for this assembly:

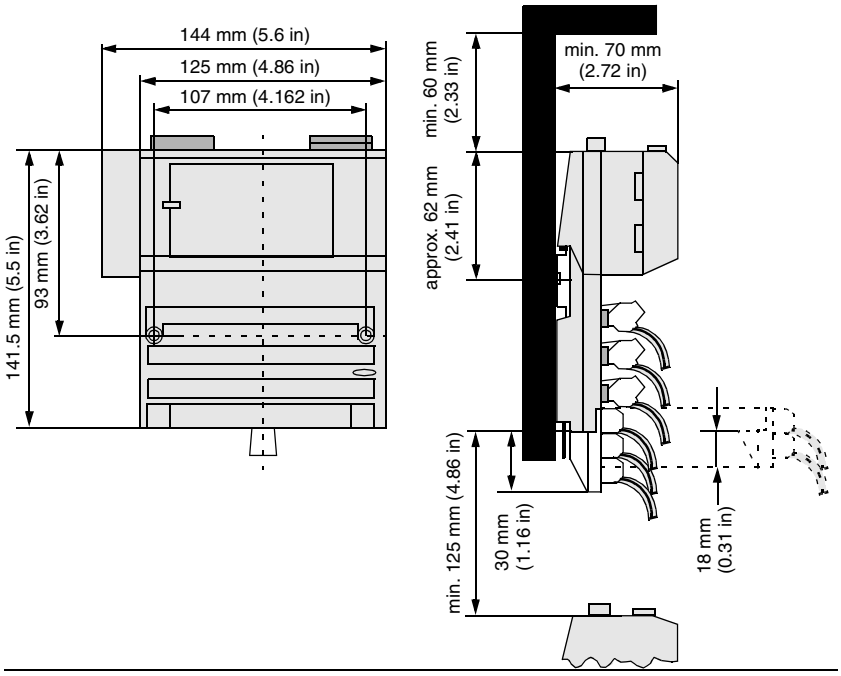

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Processor and Option Adapter on a Discrete VAC Base

Introduction


This section provides dimensions for using Processor and Option Adapters with a discrete VAC base.

Notes

The minimum depth (75 mm) includes both the Option Adapter and the built-in extender ring on the I/O base.
The figure on the right shows an addition 30 mm length dimension for an optional three-row busbar.

Illustration

The following illustration shows dimensions for this assembly:

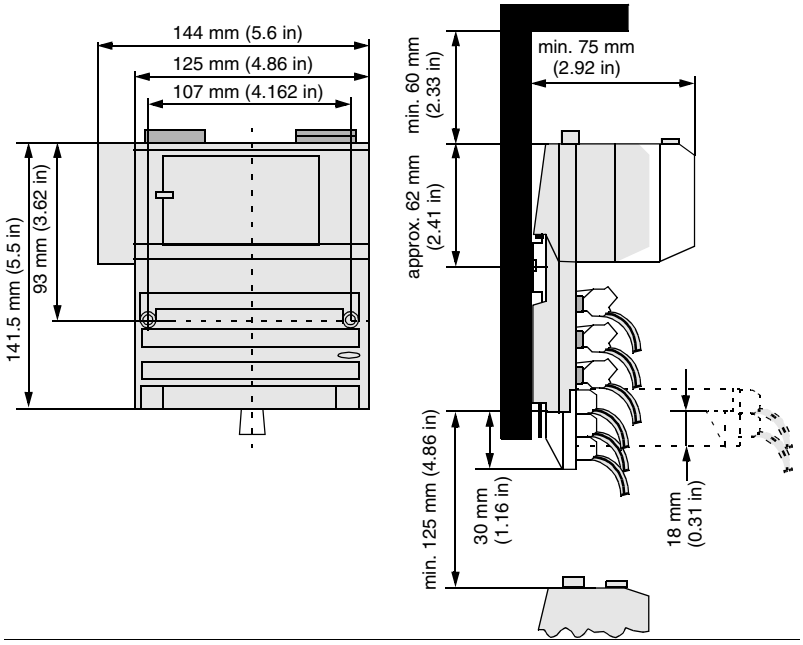

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mounting TSX Momentum Devices

Overview

This section contains guidelines for installation and drawings which illustrate how to mount a TSX Momentum assembly on a DIN rail or wall.

Guidelines


TSX Momentum components are designed as open equipment per IEC 1131-2, 1.4.20. Open equipment should be installed in industry-standard enclosures, and access should be restricted to authorized personnel.

Chassis Ground

Contact springs on the back of the I/O base establish electrical contact (chassis ground) with the DIN rail mounting track.
To establish chassis ground in a wall-mount situation, you will need to obtain two mounting screws for each unit. The body of the screws should be 4mm (0.16 in) in diameter and at least 25mm (0.97 in) long. The head of the screw must not exceed 8mm (0.31 in) in diameter.

Mounting on a DIN Rail

The numbers in the following illustration refer to the steps in the procedure below.

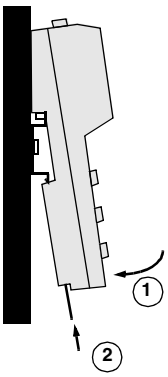

Procedure


Follow the steps in the table below to mount a TSX Momentum assembly on a DIN Rail.

Step	Action
1	Hook the plastic tabs on the back of the device onto the DIN rail and swing the module down to rest against the rail.
2	Push the locking tab upward to secure the device in place.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mounting on a Wall

Secure the device to the wall with two screws, as shown in the illustration below. The head of the screws must not exceed 8mm (0.31 in) in diameter.

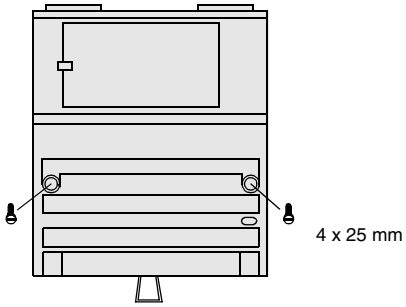

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Power and Grounding Guidelines

5

At a Glance

Purpose

This chapter provides information about circuits and grounding.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Voltage Types	46
Structuring Your Power Supply System	47
Selecting Power Supplies	48
Single Power Supply Configuration	49
Protective Circuits for DC Actuators	51
Protective Circuits for AC Actuators	53
Suggested Component Values for AC and DC Actuators	54
Grounding TSX Momentum Devices	55
Grounding DIN Rail Terminals and Cabinets	57
Grounding Analog I/O Lines	58

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Voltage Types

Introduction	In planning your circuit layout, you have to differentiate between operating voltage input voltage and output voltage.
Operating Voltage	The operating voltage feeds the internal logic of the individual I/O bases. (Abbreviations: L+ / M- for direct current; L1 / N for alternating current).
Input Voltage	The input voltage supplies the sensors. (Abbreviations, where the leading numbers specify the groups: 1L+ / 1M-, 2L+ / 2M-, ... for direct current; 1L1 / 1N, 2L1 / 2N, ... for alternating current).
Output Voltage	The output voltage drives the actuators. (Abbreviations equivalent to those for input voltage).
Common Reference Potential	When two or more circuits have a common reference potential (i.e., they are not isolated), their corresponding reference conductors are abbreviated identically– for example, L+ / M- and 1L+ / M- are used when L+ and 1L+ are not isolated.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Structuring Your Power Supply System

Overview

This section contains guidelines for planning and wiring your power supply system.

Use Separate Power Supply for Outputs

Operating voltage and input voltage can be derived from one power supply (PS). We recommend that the output voltage be drawn from a separate power supply (e.g., 10 A or 25 A, referred to as PS1 and PS2).
A separate output voltage supply prevents interferences caused by switching processes from affecting the voltage supply to the electronics. Where larger output currents are involved, provide additional power supplies for the output voltage (PS3, ...).

Use Star Configuration

Each I/O base should be fed by the power supply in star configuration, i.e., separate leads from the power supply to each module.

	**CAUTION**
	POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP/POWER-DOWN SPIKES Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring diagrams. An unprotected module may be subject to short circuits and/or power-up/ power-down spikes. **Failure to follow this precaution can result in injury or equipment damage.**

Avoid Induction Loops

Do not create any induction loops. (This can be caused by laying out the supply conductors L+/M-, ... in pairs.) As a remedy use twisted-pair wiring.

Avoid Series Connections

The series connections often found in automatic circuit breakers should be avoided, since they increase the inductive component in the output-voltage leads.

Potential-Isolated Fieldbus Islands

The potential relationships of the bus adapters are designed so that the individual I/O stations form potential-isolated islands (e.g., by isolating the incoming remote bus of InterBus). To decide whether potential balancing is necessary refer to the installation guidelines of the used communication adapter.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Selecting Power Supplies

Introduction

This section provides guidelines for selecting power supplies.

Using Three-Phase Bridges

Unfiltered three-phase bridges can be used in 24 VDC power supplies for the I/O bases, the sensors, and the actuators. In view of the maximum permissible ripple of 5%, monitoring for phase failure is necessary. For single-phase rectification, the 24 VDC must be buffered to ensure conformance to the specifications in *System Specifications* on page 595 (20...30V; max. ripple 5 %).



CAUTION

POTENTIAL FOR DANGEROUS VOLTAGE LEVELS

You must electrically isolate the AC-to-DC converter between the input (primary) and output (secondary). Otherwise, dangerous voltage levels can be propagated to the output if the AC-to-DC converter fails.

Failure to follow this precaution can result in injury or equipment damage.

Provide Reserve Capacity

Startup transients, extra long cables, and low cross-sectional efficiency can lead to voltage supply breakdowns. You should therefore select power supplies with enough reserve capacity and select the proper cable lengths and cross sections.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Single Power Supply Configuration

Introduction


This section contains illustrations of a sample circuit layout, potential bundling and potential isolation for a single power supply configuration.

Fusing in Circuit Layout

Each of the following circuit branches must be fuse-protected (F in the figure below). In the case of long lines, the circuit branch must be provided with a suppressor circuit OVP 001/OVP 248. This protection selectively shuts off a circuit branch through the associated fuse even if the diode is short-circuited.

Illustration

The following illustration shows a sample circuit layout for a single power supply configuration.

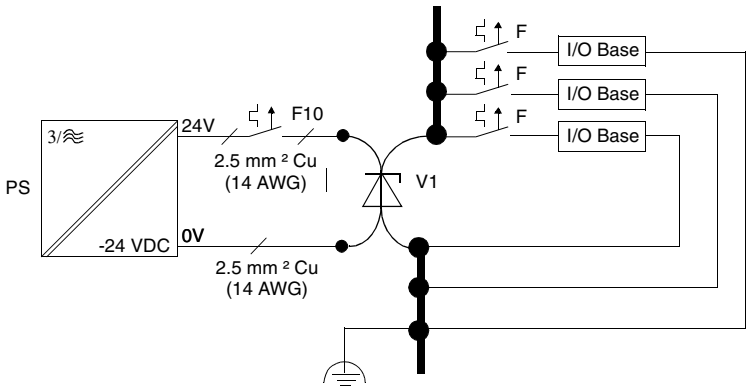

F Automatic circuit breaker or fuse (see appropriate field wiring illustration in I/O base description)

F10 Optional circuit breaker (with over-voltage protection)

PS Power Supply 24 VDC, max. 25 A

V1 Overvoltage protection circuit OVP 001, OVP 002


Fusing in Wiring Illustrations

The fuses shown in the illustrations below must be selected on the basis of the type and number of the sensors and actuators used.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Potential Bundling

In this example, the output voltage is drawn from a separate power supply.

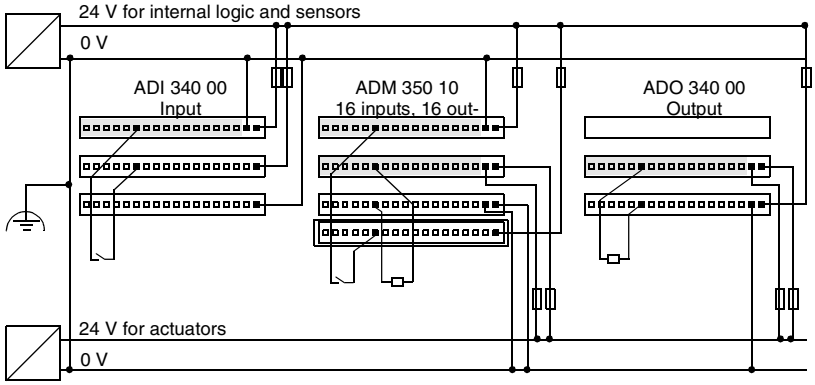

Potential Isolation

In this example, the output voltage is drawn from a separate power supply.

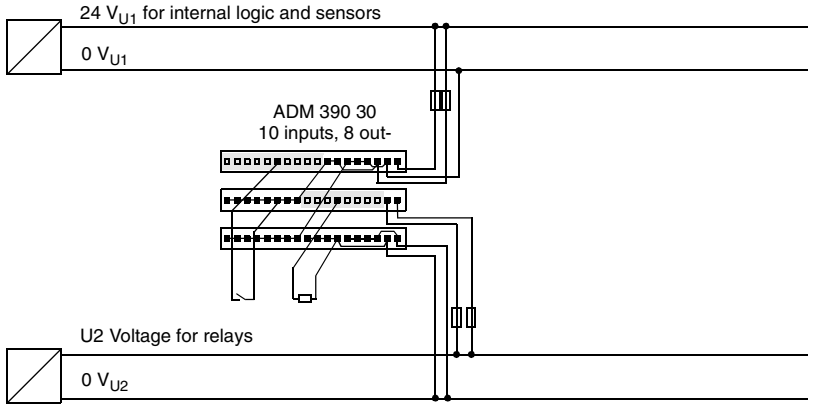

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Protective Circuits for DC Actuators

Overview

This section discusses specific cases when inductive loads at output points require additional protective circuits (directly on the actuator) and provides two examples or protective circuitry.

Case 1

When there are contacted circuit elements (e.g. for safety interlocks) in the output conductors.

Case 2

When the leads are very long.

Case 3


Where inductive actuators are operated via relay contacts of the I/O base. (To extend contact life and for EMC considerations.)

Protective Circuit Types

In all three cases, the protective circuit may be a clamping diode, a varistor or an RC combination.

Example 1

An example of a protective circuit for inductive DC actuators is illustrated below.

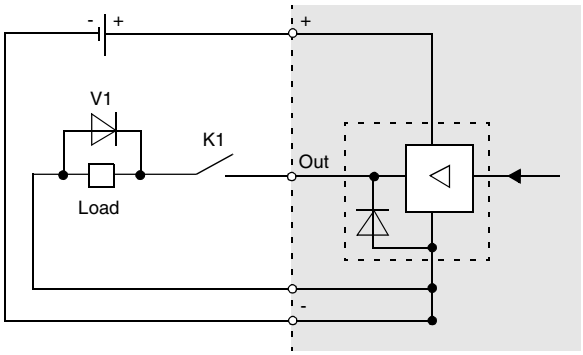


K1 Contact, e.g., for safety interlocks

V1 Clamping diode as the protective circuit

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Example 2

Another example of a protective circuit for inductive DC actuators is illustrated below.

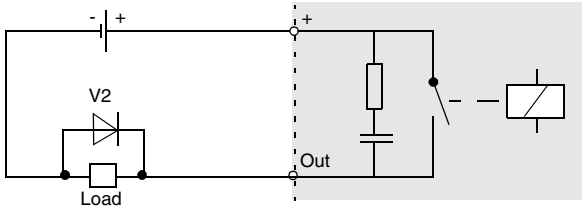

V2 Clamping diode as the protective circuit

See *Suggested Component Values for AC and DC Actuators, p. 54*.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Protective Circuits for AC Actuators

Overview

To reduce noise potentials and for EMC considerations you may need to equip the inductive actuators with varistors or noise suppressors, e.g., anti-interference capacitors, at the point of interference.

Example

An example of a protective circuit for inductive AC actuators is illustrated below.

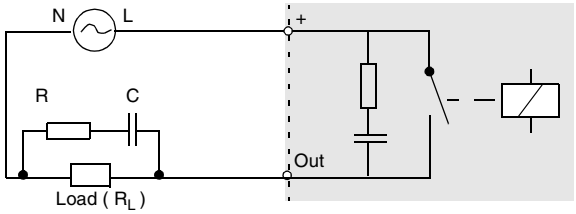

L, N Phase (L1, L2, L3) and Reference Conductor

RC RC Combination as the Protective Circuit (rated per manufacturer's specifications

RL Inductance Load

See *Suggested Component Values for AC and DC Actuators, p. 54*.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Suggested Component Values for AC and DC Actuators

Suggested Values Only

The clamping diode forward current rating must be equal to or greater than load current. Diode PIV rating must be three or four times greater than supply voltage at 24 VDC and 8 ... 10 times greater than supply voltage at 110 VAC. The unpolarized (AC) snubber capacitor should have a rating two or three times greater than the supply voltage.
Values may be:

Load Inductance	Capacitance
25 ... 70 mH	0.50 microF
70 ... 180 mH	25 microF
180 mH	10 microF

Snubber resistors may be 1 ... 3 Ohms, 2 W. Resistor values should be increased up to 47 Ohms/5 W for R_L exceeding 100 Ohms.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Grounding TSX Momentum Devices

Overview

This section describes how to provide two types of grounding for assembled TSX Momentum devices:

- Functional earth (FE), used to discharge high frequency disturbances, guaranteeing proper EMC behavior
- Protective earth (PE), used for protection against personal injuries according to IEC and VDE.

Grounding Momentum Devices

Momentum devices consist of an I/O base assembled with a Communications Adapter or a Processor Adapter and possibly an Option Adapter. The PE of the adapters is electrically connected with the PE of the I/O base; you do not have to provide any further grounding of the adapter.

Grounding Guidelines

Follow these guidelines:

- Be sure you establish good ground contacts.
- Connect the grounding screw to protective earth (PE) for AC and DC modules.


Cable Specifications

When you are using ground cable up to 10 cm (4 in) long, its diameter should be at least 12 AWG (or 2.5 mm^2). When longer cables are used, larger cable diameters are required, as shown in the following illustration

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Grounding Scheme

The illustration below illustrates properly grounding modules and tracks.

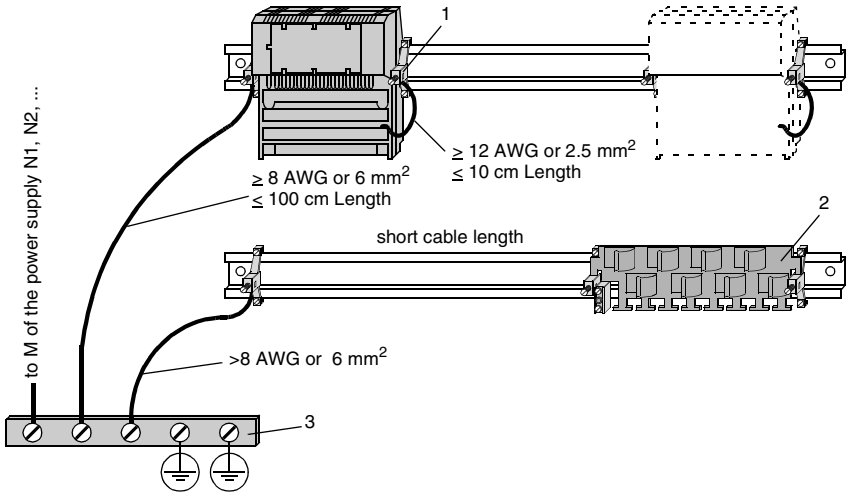

1 Grounding clamp, such as EDS 000

2 Cable Grounding Rail (CER 001), an optional component for grounding lines close to PE/FE rail

3 PE/FE rail in the cabinet or PE/FE screw in terminal cabinet


Note: The lower DIN rail shows a Cable Grounding Rail (CER 001), an optional component for grounding analog lines. For a procedure for grounding analog I/O lines, see *Grounding Analog I/O Lines, p. 58*.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Grounding DIN Rail Terminals and Cabinets

Overview This section shows how to ground DIN rail terminals and cabinets.

Illustration The following illustration shows how to ground DIN rail terminals and cabinets.

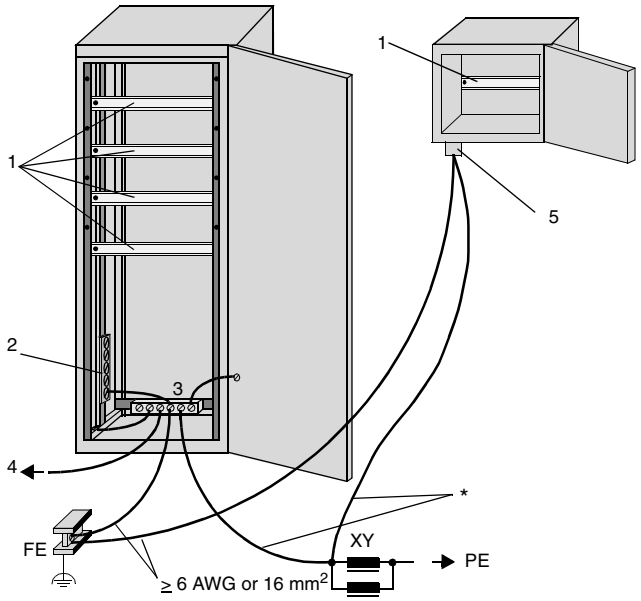

1 DIN rail for connecting the TSX Momentum device and its accessories

2 Reference conductor system or rail (solid copper or connected terminals)

3 Grounding bar in the cabinet

4 Next cabinet

5 Grounding screw (PE/FE) in cabinet

FE Functional earth

PE Protective earth

XY Protective earth choke

***** Conductor cross section depends on the load of the system

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Grounding Analog I/O Lines

Overview

Analog wires must be grounded directly when entering the cabinet. You may use commercial cleats or clamps or an analog cable grounding rail. This section describes both approaches.

Principle

High frequency interference can only be discharged via big surfaces and short cable lengths.

Guidelines


Follow these wiring guidelines:

- Use shielded, twisted-pair cabling
- Expose the shielding on one side (for instance, at the console exit)
- Make sure the track is properly grounded (see *Grounding TSX Momentum Devices, p. 55*

Grounding of the bus cable is determined by the bus adapter used. Look for details in your *bus adapter manual*.

Using Cleats or Clamps

Cleats or clamps can be mounted directly on the ground rail (PE/FE rail) in the cabinet, as shown in the illustration below. Be sure the cleats or clamps make proper contact.

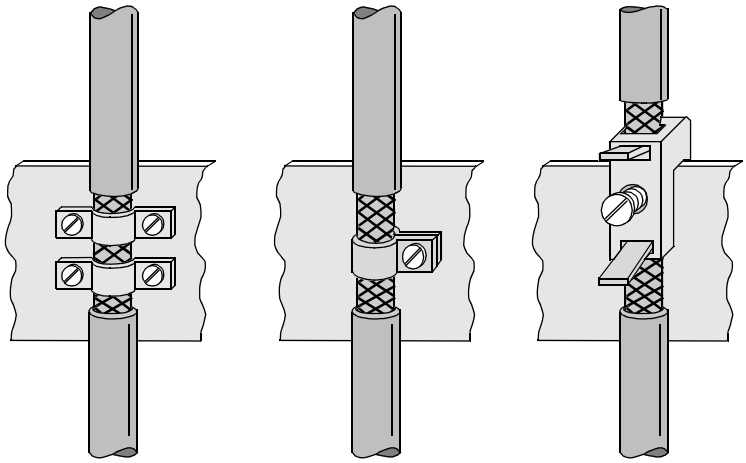

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Base Descriptions

II

At a Glance

Purpose

This part provides descriptions of each I/O base.

What's in this Part?

This part contains the following chapters:

Chapter	Chapter Name	Page
6	170 AAI 030 00 Analog 8 Channel Differential Input Module Base	61
7	170 AAI 140 00 Analog 16 Channel Single-Ended Input Module Base	79
8	170 AAI 520 40 Analog 4 Channel RTD, Therm. and mV Input Module Base	97
9	170 AAO 120 00 Analog 4 Channel Output Module Base +/- 10 V, 0 - 20 mA	121
10	170 AAO 921 00 Analog 4 Channel Output Module Base +/- 10 V, 4 ... 20 mA	137
11	170 ADI 340 00 24 VDC - 16 Pt. Discrete Input Module Base	151
12	170 ADI 350 00 24 VDC - 32 Pt. Discrete Input Module Base	165
13	170 ADI 540 50 120 VAC - 16 Point Discrete Input Module Base	179
14	170 ADI 740 50 230 VAC - 16 Point Discrete Input Module Base	193
15	170 ADM 350 10 24 VDC - 16 Pt. In / 16 Pt. Out Module Base	207
16	170 ADM 350 11 24 VDC - 16 Pt. In / 16 Pt. Out Module Base	225
17	170 ADM 350 15 24 VDC - 16 Pt. In / 16 Pt. Out Module Base	243
18	170 ADM 370 10 24 VDC - 16 Pt. In / 8 Pt. Out @ 2 Amp. Module Base	257
19	170 ADM 390 10 24 VDC - 16 Pt. In / 12 Pt. Out Monitored Module Base	275

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Chapter	Chapter Name	Page
20	170 ADM 390 30 24 VDC - 10 Pt. In / 8 Pt. Relay Out Module Base	291
21	170 ADM 540 80 120 VAC - 6 Pt. In / 3 Pt. Out Discrete MCC Module Base	307
22	170 ADM 690 50 120 VAC - 10 Pt. In / 8 Pt. Out Module Bases	339
23	170 ADM 690 51 120 VAC - 10 Pt. In / 8 Pt. Out Module Bases	355
24	170 ADO 340 00 24 VDC - 16 Pt. Discrete Output Module Base	371
25	170 ADO 350 00 24 VDC - 32 Pt. Discrete Output Module Base	385
26	170 ADO 530 50 120 VAC - 8 Point Discrete Output @ 2A Module Base	399
27	170 ADO 540 50 120 VAC - 16 Point Discrete Output Module Base	415
28	170 ADO 730 50 230 VAC - 8 Point Discrete Output @ 2A Module Base	431
29	170 ADO 740 50 230 VAC - 16 Point Discrete Output Module Base	447
30	170 AMM 090 00 Analog 4 Ch. In / 2 Ch. Out Module Base w/ 24 VDC I/O Pts	463
31	170 ANR 120 90 Unipolar Analog 6 Ch. In / 4 Ch. Out Module Base with 24 VDC I/O pts	493
32	170 ANR 120 91 Bipolar Analog 6 Ch. In / 4 Ch. Out Module Base with 24 VDC I/O pts.	517
33	170 ARM 370 30 24 VDC - 10 Pt. In / 8 Pt. Relay Out Module Base (120 VAC powered)	543
34	170 CPS 111 00 TIO Power Supply Module	559

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 AAI 030 00 Analog 8 Channel Differential Input Module Base

6

Overview

Purpose

This chapter describes the 170 AAI 030 00 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	62
Specifications	64
Internal Pin Connections	67
Field Wiring Guidelines	68
Wiring Illustrations	70
I/O Mapping	71
Analog Channel Parameters	72
Analog Inputs	74
Input Measuring Ranges	76

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 AAI 030 00 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below

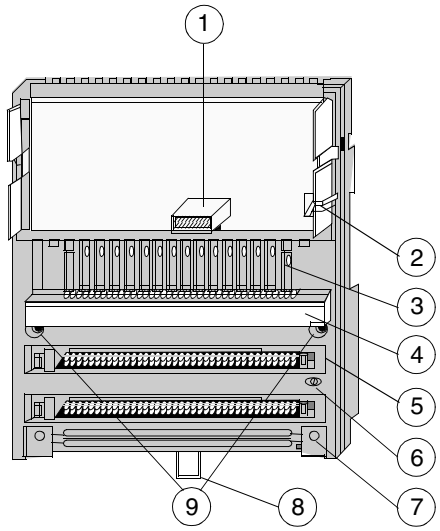


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Protective cover
5	Sockets for the terminal connectors
6	Grounding screw
7	Busbar mounting slot
8	Locking tab for DIN rail mount
9	Mounting holes for panel mount

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

This I/O base has one LED, the ready indicator shown in the illustration below.

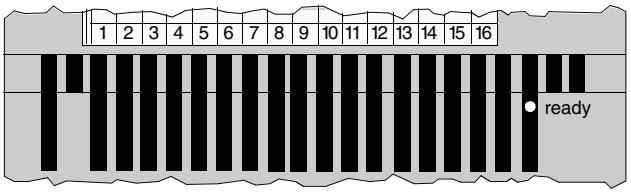

LED Descriptions

The ready indicator is described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate. Operating voltage for internal logic is present and self-test has been passed.
	Off	Module not ready. Operating voltage not present or module defective

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 AAI 030 00 I/O base.

General Specifications

General Specifications

Module type	8 analog inputs
Input voltage range	+/- 10 V, +/- 5 V, 1 ... 5 V
Input current range	+/- 20 mA, 4 ... 20 mA
Supply voltage	24 VDC
Supply voltage range	20 ... 30 VDC
Supply current consumption	max. 362 mA at 24 VDC
Power dissipation	3.73 W typical 6.58 W maximum
I/O map	8 input words 2 output words

Isolation

Isolation

Between channels	140 VAC Hz or 200 VDC, 1 min
Between input channels and ground	500 VAC

Fuses

Fuses

Internal (not user-replaceable)	2 A slow-blow
External (recommended)	500 mA fast-blow

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 500 V
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1 Div.2 pending

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no busbar
Weight	215 g (0.45 lb)

Analog Inputs

Specifications for analog inputs

Surge tolerance: input voltage input current	 +/- 30 VDC +/- 25 mA
Number of channels	8
Format of transmitted data	full 16 bits signed (2's complement)
Protection	polarity inversion
Error indication	none
Common mode rejection	250 VAC @ 47 ... 63 Hz or 100 VDC channel-to-ground
Update time for the inputs (in ms)	1.33 + n x 1.33 n = number of declared channels
Filtering	low pass with cutoff frequency 18 kHz

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Range Specific Data

Range specific data

Range	+/- 10 V	+/- 5 V	1 ... 5 V	+/- 20 mA	4 ... 20 mA
Input impedance	20 MOhm	20 MOhm	20 MOhm	250 Ohm	250 Ohm
Error at 25 deg. C	0.27% PE*	0.21% PE*	0.13% PE*	0.32% PE*	0.28% PE*
Error at 60 deg. C	0.32% PE*	0.26% PE*	0.19% PE*	0.41% PE*	0.38% PE*
Temperature drift (60 deg. C)	14 ppm PE*/ deg. C	14 ppm PE*/ deg. C	18 ppm PE*/ deg. C	24 ppm PE*/ deg. C	30 ppm PE*/ deg. C
Resolution	14 bits + sign	14 bits + sign	15 bits	14 bits + sign	15 bits

Note: *Not to be confused with Protective Earth. PE is used here as a European notation for full scale, with the following values:

- 10 V in range of +/- 10 V
- 5 V in range of +/- 5 V
- 4 V in range of 1 ... 5 V
- 20 mA in range of +/- 20 mA
- 16 mA in range of 4 ... 20 mA

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base.

Illustration

The following illustration shows the internal connections between terminals.

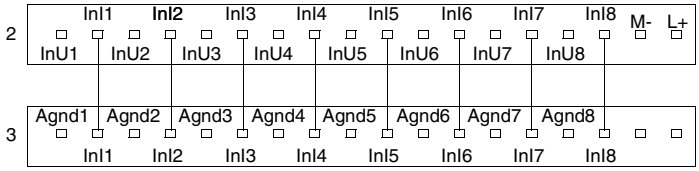

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

This section contains wiring guidelines and precautions.

Required Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Mapping Terminal Blocks

Mapping terminal blocks is described in the table below

Row	Terminal No.	Description	Function
2	1, 3, 5, 7, 9,11, 13, 15	InU1 ... InU8	Voltage input, channel 1 ... 8
	2, 4, 6, 8, 10, 12, 14, 16	InI1 ... InI8	Current input, channel 1 ... 8
	17	M-	- return (of operating voltage)
	18	L+	+ 24 VDC Operating voltage
3	1, 3, 5, 7, 9,11, 13, 15	Agnd1 ... Agnd8	Analog ground, channel 1 ... 8
	2, 4, 6, 8, 10, 12, 14, 16	InI1 ... InI8	Current input, channel 1 ... 8



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Signal Protection

To protect the signal from external noise induced in serial or common mode, we recommend the following precautions:

- Use shielded twisted-pair cables with a minimum conductor size of 24 AWG or 0.22 mm^2.
- Connect the cable shield to ground via the Cable Grounding Rail (part number CER 001).
- You may combine the analog inputs on this I/O base in one multi-pair cable provided the same ground is used.
- When wiring the voltage supply, use sensors that do not have ground reference.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Wiring Illustrations

Overview

This section contains an illustration to assist you in wiring the I/O base.

Illustration

The illustration below shows an example of wiring for voltage input and for current input.

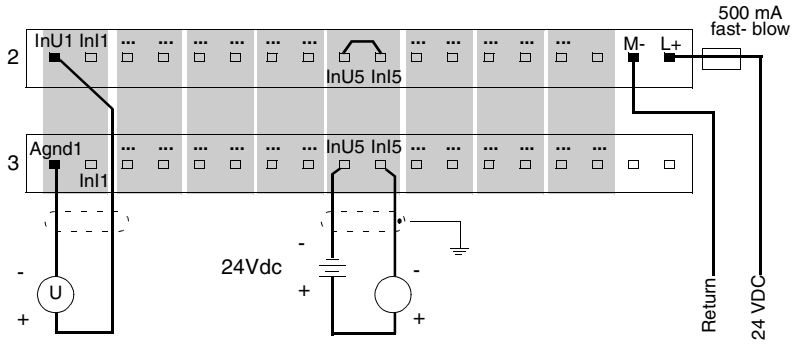

Examples
* Channel1, wired for voltage input
* Channel 5, wired for current input

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 AAI 030 00 TSX Momentum I/O base supports 8 analog inputs. This section contains information about the mapping of the analog input values into input words and the usage of output words for channel configuration.

I/O Map

The I/O base must be mapped as eight contiguous input words and two contiguous output words, as follows.

Word	Input Data	Output Data
1	Value, input channel 1	Parameters for input channels 1 ... 4
2	Value, input channel 2	Parameters for input channels 5 ... 8
3	Value, input channel 3	Not used
4	Value, input channel 4	Not used
5	Value, input channel 5	Not used
6	Value, input channel 6	Not used
7	Value, input channel 7	Not used
8	Value, input channel 8	Not used

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Channel Parameters

Overview

Parameters must be set for all of the analog channels before the module can be commissioned. This section provides the codes for setting the parameters and gives examples of parameter settings.

Note: If you set new parameters for the module, always send a complete set of parameters (all channels, inputs and outputs), even if you only want to change a single parameter. Otherwise the module will refuse the new parameters and continue working with the old ones.

Key

This section focuses on output words 1 and 2, as highlighted in the table below:

Word	Input Data	Output Data
1	Value, input channel 1	**Parameters for input channels 1 ... 4**
2	Value, input channel 2	**Parameters for input channels 5 ... 8**
3	Value, input channel 3	Not used
4	Value, input channel 4	Not used
5	Value, input channel 5	Not used
6	Value, input channel 6	Not used
7	Value, input channel 7	Not used
8	Value, input channel 8	Not used

Illustration

Parameters are set by entering a four-bit code in output words 1 and 2, as follows:

Output Word 1 (Register 4*x*)															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
for input channel 4				for input channel 3				for input channel 2				for input channel 1			

Output Word 2 (Register 4*x*+1)															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
for input channel 8				for input channel 7				for input channel 6				for input channel 5			

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Codes for Analog Input Parameters

Use the following codes to set the parameters for each analog input channel:

Code (binary)	Code (hex)	Parameter
0000	0	Reserved value (see note below)
0010	2	+/-5V and +/-20mA input range
0011	3	+/-10V input range
0100	4	Channel inactive
1010	A	1 ... 5V and 4 ... 20 mA input range

Note: The 0000 reserved value is more a control than a parameter. It forces the I/O base into a default condition where it continues to receive field inputs according to the previous channel parameters.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Inputs

Overview

This section describes how to interpret the value of the analog input channels.

Key

This section describes input words 1 ... 8, as highlighted in the table below:

Word	Input Data	Output Data
1	**Value, input channel 1**	Parameters for input channels 1 ... 4
2	**Value, input channel 2**	Parameters for input channels 5 ... 8
3	**Value, input channel 3**	Not used
4	**Value, input channel 4**	Not used
5	**Value, input channel 5**	Not used
6	**Value, input channel 6**	Not used
7	**Value, input channel 7**	Not used
8	**Value, input channel 8**	Not used

Bit Assignments

The following table tells how bits are assigned:

Analog-to-digital conversion	Carried out on 14 bits + sign for bipolar input ranges,15 bits for unipolar ranges
Bit 15	Sign bit
Bits 14 ... 0	Input channel values

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Input Values

Mapping of analog input values is shown below.

Input Word 1 (Register 3*x*, analog value returned on channel 1)															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

Input Word 2 (Register 3*x*+1, analog value returned on channel 2)															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

Input Word 3 (Register 3*x*+2, analog value returned on channel 3)															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

Input Word 8 (Register 3*x*+7, analog value returned on channel 8)															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

Broken Wire Indication

Broken wire detection is possible for the 4 ... 20 mA range. In this case, a current signal that is less than 2 mA on one of the inputs is detected as a broken wire. The input word of that channel returns the signed value -32,768. A broken wire indication has the following binary format:

Broken wire indication in an input word															
1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Input Measuring Ranges

Overview

This section contains illustrations explaining the analog/digital relation for the three input measuring ranges.


+/- 10 V

The following illustration shows the analog/digital relation at +/- 10 V.

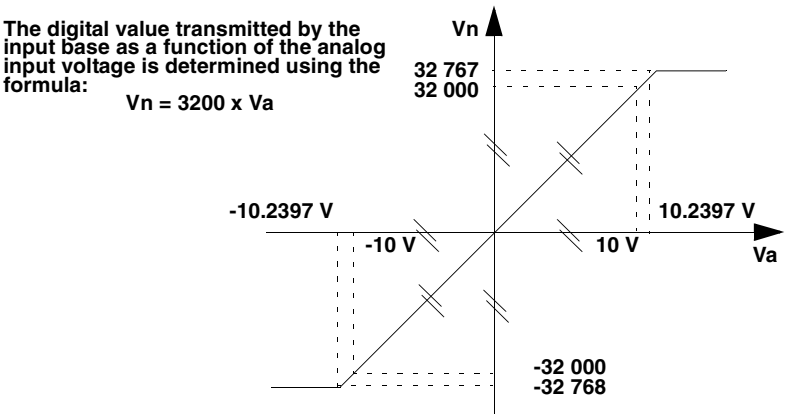

+/- 5 V

The following illustration shows the analog/digital relation at +/- 5 V.

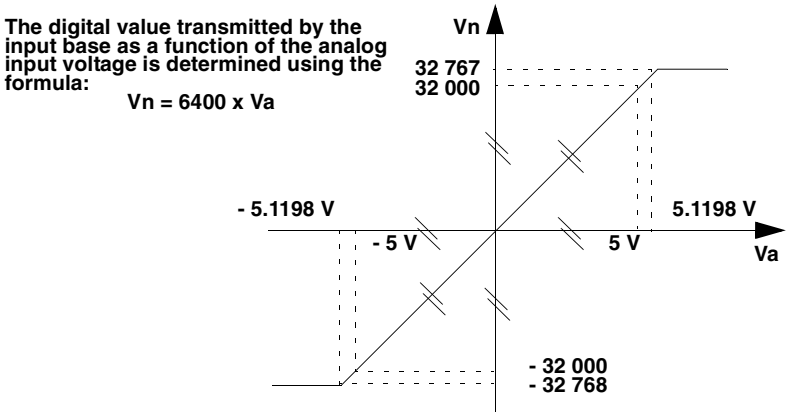


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

+/- 20 mA

The following illustration shows the analog/digital relation for the input measuring range +/- 20 mA.

The digital value transmitted by the input base as a function of the analog input current (Ia) is determined by the formula:

Vn = 1600 x Ia

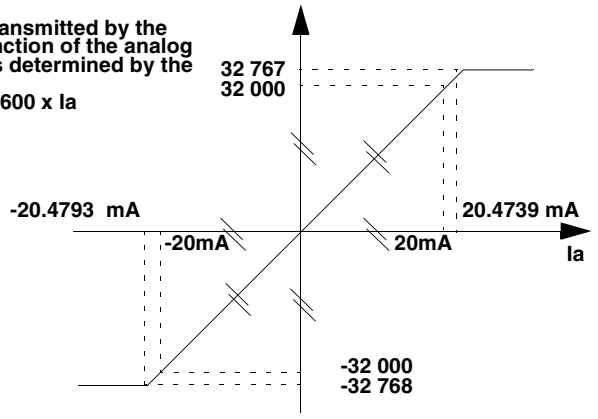


1 ... 5 V

The following illustration shows the analog/digital relation for the input measuring range 1 ... 5 V.

The digital value transmitted by the input base as a function of the input voltage (Va) is determined by the formula:

Vn = 8000 x Va - 8000
in the voltage range:
0.9041 ... 5.0959

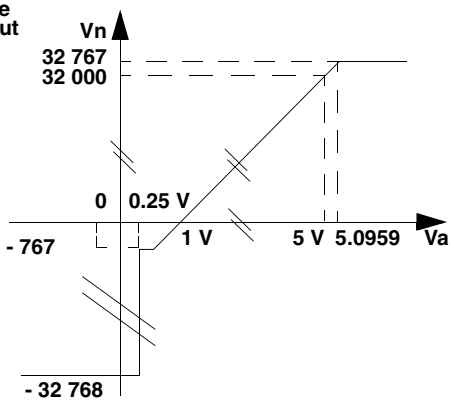


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4 ... 20 mA

The following illustration shows the analog/digital relation at 4 ... 20 mA current.

The digital value transmitted by the input base as a function of the input current (Ia) is determined using the formula:

Vn = 2000 x Ia - 8000
in the current range:
3.6165 ... 20.3835 mA

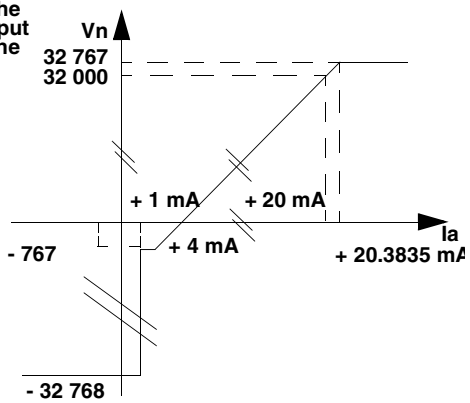

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 AAI 140 00 Analog 16 Channel Single-Ended Input Module Base

7

Overview

Purpose

This chapter describes the 170 AAI 140 00 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	80
Specifications	82
Internal Pin Connections	85
Field Wiring Guidelines	86
Wiring Diagrams	88
I/O Mapping	89
Analog Channel Parameters	90
Analog Inputs	92
Input Measuring Ranges	94

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 AAI 140 00 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below

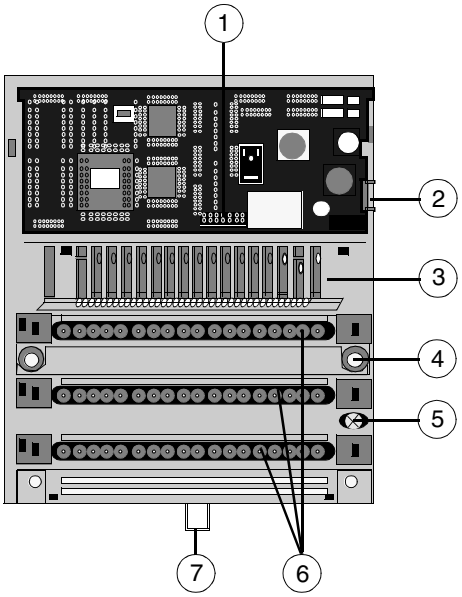


Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Mounting holes for panel mount
5	Grounding screw
6	Sockets for the terminal connectors
7	Locking tab for DIN rail mount

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

This I/O base has one LED, the ready indicator shown in the illustration below.

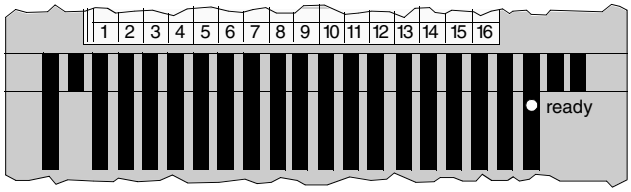

LED Descriptions

The ready indicator is described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate. Operating voltage for internal logic is present and self-test has been passed.
	Off	Module not ready. Operating voltage not present or module defective.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 AAI 140 00 I/O base.

General Specifications

General Specifications

Module type	16 analog inputs
Input voltage range	+/- 10 V, +/- 5 V
Input current range	4 ... 20 mA
Field device output driving capability	6K or less
Supply voltage	24 VDC
Supply voltage range	20 ... 30 VDC
Supply current consumption	max. 305 mA at 24 VDC
Power dissipation	4.95 W typical 5.55 W maximum
I/O map	16 input words 4 output words

Isolation

Isolation

Between channels	none
Between base supply and ground	500 VDC, 1 min
Between input channels and ground	500 VAC, 1 min

Fuses

Fuses

Internal (not user-replaceable)	2 A slow-blow
External (recommended)	500 mA fast-blow (Wickmann 193050000 mA or equivalent)

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 500 V
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1 Div. 2

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no busbar
Weight	215 g (0.45 lb)

Analog Inputs

Specifications for analog inputs

Surge tolerance: input voltage input current	 +/- 30 VDC +/- 25 mA
Number of channels	16
Format of transmitted data	full 16 bits signed (2's complement)
Protection	polarity inversion
Error indication	none
Common mode rejection	250 VAC @ 47 ... 63 Hz or 100 VDC channel-to-ground
Update time for the inputs (in ms)	1 + 1.5 xn n = number of declared channels
Filtering	low pass with cutoff frequency 10 kHz
Maximum Sensor Impedance In	6K ohms with AAI 14000 at PV02
Voltage Mode	1.5K ohms with AAI 14000 at PV01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Range Specific Data

Range specific data

Range	+/- 10 V	+/- 5 V	4 ... 20 mA
Input impedance	20 MOhm	20 MOhm	250 Ohm
Error at 25 deg. C	0.27% PE*	0.21% PE*	0.28% PE*
Error at 60 deg. C	0.32% PE*	0.26% PE*	0.38% PE*
Temperature drift (60 deg. C)	14 ppm PE*/ deg. C	14 ppm PE*/ deg. C	30 ppm PE*/ deg. C
Resolution	14 bits + sign	14 bits + sign	15 bits

Note: *Not to be confused with Protective Earth. PE is used here as a European notation for full scale, with the following values:

- 10 V in range of +/- 10 V
- 5 V in range of +/- 5 V
- 16 mA in range of 4 ... 20 mA

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base.

Illustration

The following illustration shows the internal connections between terminals

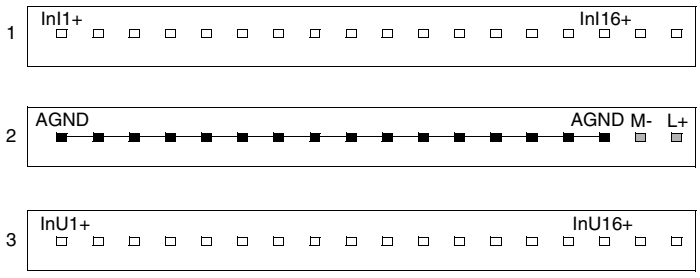

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

This section contains wiring guidelines and precautions.

Required Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Mapping Terminal Blocks

Mapping terminal blocks is described in the table below

Row	Terminal No.	Description	Function
1	1 ... 16	InI1+ ... InI16+	Input current mode, channel 1 ... 16
	17, 18	-	Not used
2	1 ... 16	AGND	Analog ground connections (0 V input)
	17	M-	- Return (of operating voltage)
	18	L+	+ 24 VDC Operating voltage
3	1 ... 16	InU1+ ... InU16+	Input voltage mode, channel 1 ... 16
	17, 18	-	Not used



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Signal Protection

To protect the signal from external noise induced in serial or common mode, we recommend the following precautions:

- Use shielded twisted-pair cables with a minimum conductor cross section of 24 AWG or 0.22 mm^2.
- Connect the cable shield to ground via the Cable Grounding Rail (part number CER 001).
- You may combine the analog inputs on this I/O base in one multi-pair cable provided the same ground is used.
- When wiring the voltage supply, use sensors that do not have ground reference.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Wiring Diagrams

Overview

This section contains a diagram to assist you in wiring this I/O base for voltage input and current input.

Diagram

The diagram below shows an example of wiring for voltage input and for current input.

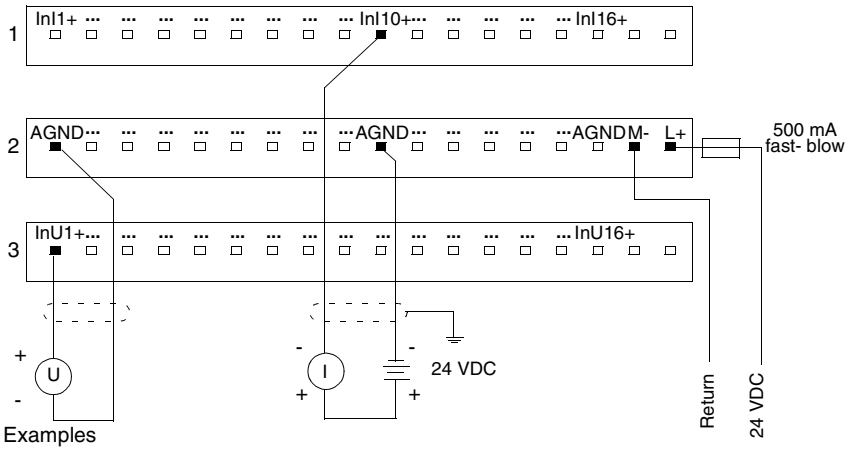

Examples
* Channel1, wired for voltage input
* Channel 10, wired for current input

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 AAI 140 00 TSX Momentum I/O base supports 16 analog inputs. This section contains information about the mapping of the analog input values into input words and the usage of output words for channel configuration.

I/O Map

The I/O base must be mapped as 16 contiguous input words and four contiguous output words, as follows:

Word	Input Data	Output Data
1 = LSW	Value, input channel 1	Parameters for input channels 1 ... 4
2	Value, input channel 2	Parameters for input channels 5 ... 8
3	Value, input channel 3	Parameters for input channels 9 ... 12
4	Value, input channel 4	Parameters for input channels 13 ... 16
5 ... 15	Value, input channel 5 ... 15	Not used
16 = MSW	Value, input channel 16	Not used

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Channel Parameters

Overview

Parameters must be set for all of the analog channels before the module can be commissioned. This section provides the codes for setting the parameters and gives examples of parameter settings.

Note: If you set new parameters for the module, always send a complete set of parameters (all channels, inputs and outputs), even if you only want to change a single parameter. Otherwise the module will refuse the new parameters and continue working with the old ones.

Key

This section focuses on output words 1 ... 4, as highlighted in the table below:

Word	Input Data	Output Data
1 = LSW	Value, input channel 1	**Parameters for input channels 1 ... 4**
2	Value, input channel 2	**Parameters for input channels 5 ... 8**
3	Value, input channel 3	**Parameters for input channels 9 ... 12**
4	Value, input channel 4	**Parameters for input channels 13 ... 16**
5 ... 15	Value, input channel 5 ... 15	Not used
16 = MSW	Value, input channel 16	Not used

Illustration

Parameters are set by entering a four-bit code in output words 1 ... 4, as follows:

Output Word 1 (Register 4*x*)															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
for input channel 4				for input channel 3				for input channel 2				for input channel 1			

Output Word 2 (Register 4*x*+1)															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
for input channel 8				for input channel 7				for input channel 6				for input channel 5			

Output Word 3 (Register 4*x*+2)															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
for input channel 12				for input channel 11				for input channel 10				for input channel 9			

Output Word 4 (Register 4*x*+3)															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
for input channel 16				for input channel 15				for input channel 14				for input channel 13			

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Codes for Analog Input Parameters

Use the following codes to set the parameters for each analog input channel:

Code (binary)	Code (hex)	Parameter
0000	0	Reserved value (see note below)
1010	A	+/-5V input range
1011	B	+/-10V input range
1100	C	Channel inactive
1110	E	4 ... 20 mA

Note: The 0000 reserved value is more a control than a parameter. It forces the I/O base into a default condition where it continues to receive field inputs according to the previous channel parameters.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Inputs

Overview

This section describes how to interpret the value of the analog input channels.

Key

This section describes input words 1 ... 16, as highlighted in the table below:

Word	Input Data	Output Data
1 = LSW	**Value, input channel 1**	Parameters for input channels 1 ... 4
2	**Value, input channel 2**	Parameters for input channels 5 ... 8
3	**Value, input channel 3**	Parameters for input channels 9 ... 12
4	**Value, input channel 4**	Parameters for input channels 13 ... 16
5 ... 15	**Value, input channel 5 ... 15**	Not used
16	**Value, input channel 16**	Not used

Bit Assignments

The following table tells how bits are assigned:

Analog-to-digital conversion	Carried out on 12 bits + sign
Bit 15	Sign bit
Bits 14 ... 3	Input channel values
Bits 2 ... 0	Unused. Because these bits are always 0, the value of the word changes in increments of 8

Analog Input Values

Mapping of analog input values is shown below.

Input Word 1 (Register 3*x*, analog value returned on channel 1)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Input Word 2 (Register 3*x*+1, analog value returned on channel 2)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Input Word 3 (Register 3*x*+2, analog value returned on channel 3)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Input Word 8 (Register 3*x*+15, analog value returned on channel 16)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Broken Wire Indication

Broken wire detection is possible for the 4 ... 20 mA range. In this case, a current signal that is less than 2 mA on one of the inputs is detected as a broken wire. The input word of that channel returns the value -32,768. A broken wire indication has the following binary format:

Broken wire indication in an input word															
1	**0**	**0**	**0**	**0**	**0**	**0**	**0**	**0**	**0**	**0**	**0**	**0**	**0**	**0**	**0**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Input Measuring Ranges

Overview

This section contains illustrations explaining the analog/digital relation for the three input measuring ranges.


+/- 10 V

The following illustration shows the analog/digital relation at +/- 10 V.

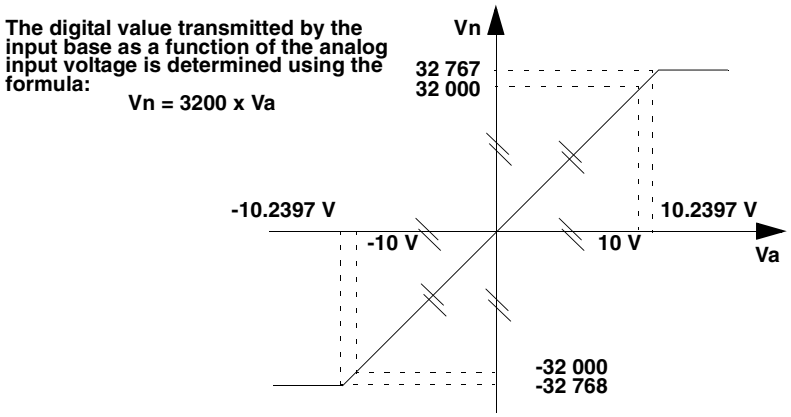

+/- 5 V

The following illustration shows the analog/digital relation at +/- 5 V.

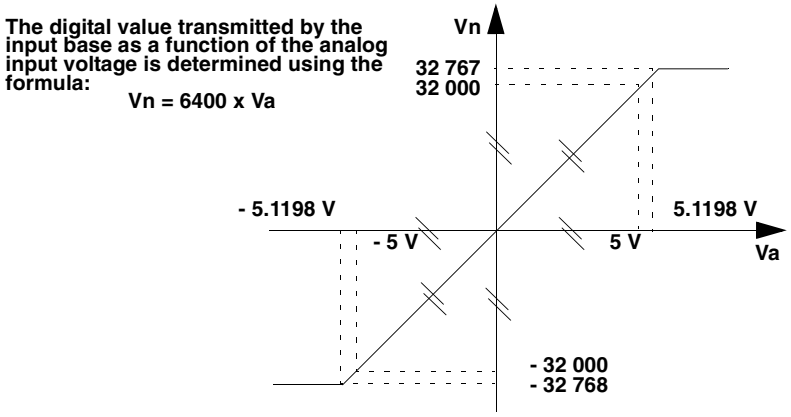


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4 ... 20 mA

The following illustration shows the analog/digital relation for the input measuring at 4 ... 20 mA current.

The digital value transmitted by the input base as a function of the input current (Ia) is determined using the formula:

Vn = 2000 x Ia - 8000
in the current range:
3.6165 ... 20.3835 mA

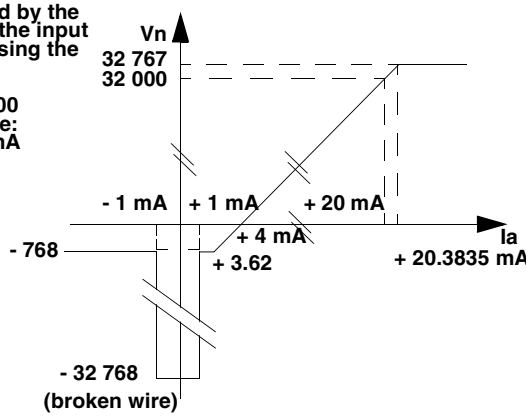

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 AAI 520 40 Analog 4 Channel RTD, Therm. and mV Input Module Base

8

Overview

Purpose

This chapter describes the 170 AAI 520 40 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	98
Specifications	100
Internal Pin Connections	108
Field Wiring Guidelines	109
Wiring Diagrams	111
I/O Mapping	112
Analog Channel Parameters	113
Analog Inputs	118
RTD, Thermocouple and mV Input Measuring Ranges	119

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 AAI 520 40 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below

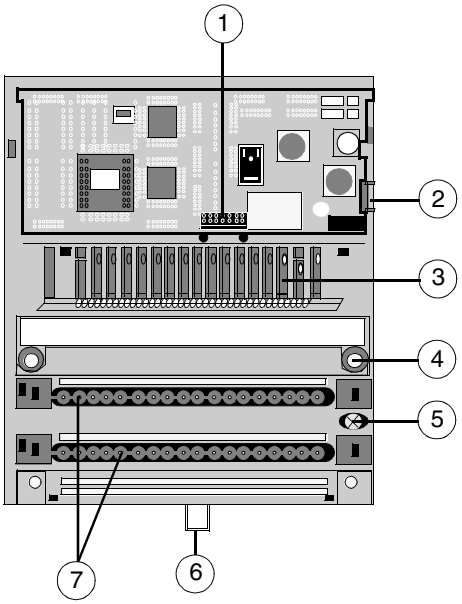


Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Mounting holes for panel mount
5	Grounding screw
6	Locking tab for DIN rail mount
7	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

This I/O base has one LED, the ready indicator shown in the illustration below.

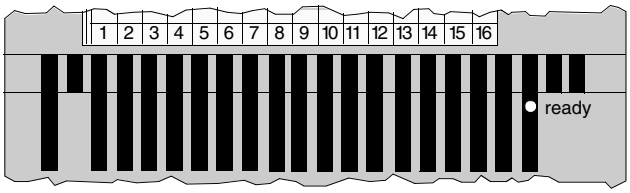

LED Descriptions

The ready indicator is described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate. Operating voltage for internal logic is present and self-test has been passed.
	Off	Module not ready. Operating voltage not present or module defective.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 AAI 520 40 I/O base.

General Specifications

General Specifications

Module type	4 analog inputs
Range - mV	+/- 100 mV, +/- 25 mV
Types - RTD	Pt100, Pt 1000, Ni100 or Ni1000
Types - Thermocouple	B, E, J, K, N, R, S or T
Supply voltage	24 VDC
Supply voltage range	20 ... 30 VDC
Supply current consumption	max. 330 mA at 24 VDC
Power dissipation	3.5 W typical 5.5 W maximum
I/O map	4 input words 4 output words

Isolation

Isolation

Between channels	400 VDC
Between base supply and ground	500 Vcc, 1 min
Between input channels and ground	500 VAC, 1 min
Common mode channel/ground voltage	+/-100 VDC, 250 VAC
Common mode voltage between channels	200 VDC, 115 VAC single- or three-phase or 250 VAC single phase
Common mode rejection between channel and ground	135 dB DC, 145 dB AC 50 Hz, 155 dB AC 60 Hz
Common mode rejection between channels	120 dB DC, 130 dB AC 50 Hz, 140 dB AC 60 Hz
Serial-mode rejection	35 dB AC 50 Hz, 45 dB AC 60 Hz
Input protection	+/- 30 VDC

Fuses

Fuses

Internal (not user-replaceable)	2 A slow-blow
External (recommended)	500 mA fast-blow (Wickmann 19305000 mA or equivalent)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 500 V
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1 Div. 2

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no busbar
Weight	215 g (0.45 lb)

Analog Inputs mV Range

Specifications for analog inputs

Surge tolerance: input voltage	+/- 30 VDC	
Number of channels	4 differential inputs	
Format of transmitted data	full 16 bits signed (2's complement)	
Current source	0.125 mA (for Pt1000 or Ni 1000 probe)	1.25 mA (for Pt 100 or Ni 100 probe)
Update time for the inputs	500 ms	
Voltage range	+/-25 mV	+/-100 mV
Input impedance	> 10 MOhm	> 10 MOhm
Error at 25 deg. C	+/- 21 microV	+/- 27 microV
Error at 60 deg. C	+/- 46 microV	+/- 94 microV
Resolution	15 bits + sign	15 bits + sign

RTD Ranges for Pt100/Pt1000

Range specific data

Range	**Pt100 (IEC751)**	**Pt100 (US/JIS)**	**Pt1000 (IEC751)**	**Pt1000 (US/JIS)**
Input Span	-200...+850 deg. C.. -328...+1562 deg. F	-200...+510 deg. C -328...+950 deg. F	-200...+850 deg. C.. -328...+1562 deg. F	-200...+510 deg. C.. -328...+950 deg. F
Resolution of conversion	0.029...0.043 deg. C 0.052...0.077 deg. F	0.029...0.037 deg. C 0.053...0.067 deg. F	0.029...0.043 deg. C 0.052...0.077 deg. F	0.029...0.037 deg. C 0.053...0.067 deg. F
Display resolution	0.1 deg. C 0.1 deg. F	0.1 deg. C 0.1 deg. F	0.1 deg. C 0.1 deg. F	0.1 deg. C 0.1 deg. F

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Errors for Pt100/Pt1000 Maximum error at 25 deg. C in degr. C (1)

Temperature	Wiring Type							
	Pt100 (IEC751)		Pt100 (US/JIS)		Pt1000 (IEC751)		Pt1000 (US/JIS)	
	2/4 wires	3 wires	2/4 wires	3 wires	2/4 wires	3 wires	2/4 wires	3 wires
-200 deg. C	0.2 [0.7]	0.4 [0.8]	0.2 [0.7]	0.4 [0.8]	0.2 [0.6]	0.4 [0.8]	0.2 [0.6]	0.4 [0.8]
-100 deg. C	0.2 [0.9]	0.4 [1.0]	0.2 [0.9]	0.4 [1.0]	0.3 [0.8]	0.4 [1.0]	0.3 [0.8]	0.4 [1.0]
0 deg. C	0.3 [1.1]	0.4 [1.2]	0.3 [1.1]	0.4 [1.2]	0.3 [1.0]	0.4 [1.2]	0.3 [1.0]	0.4 [1.2]
100 deg. C	0.3 [1.2]	0.4 [1.4]	0.3 [1.3]	0.4 [1.4]	0.3 [1.2]	0.4 [1.4]	0.3 [1.2]	0.4 [1.4]
200 deg. C	0.3 [1.4]	0.4 [1.5]	0.3 [1.4]	0.4 [1.5]	0.3 [1.4]	0.5 [1.5]	0.3 [1.4]	0.5 [1.6]
300 deg. C	0.3 [1.6]	0.5 [1.8]	0.3 [1.7]	0.5 [1.8]	0.3 [1.6]	0.5 [1.8]	0.4 [1.6]	0.5 [1.8]
400 deg. C	0.3 [1.8]	0.5 [2.0]	0.3 [1.8]	0.5 [2.0]	0.4 [1.8]	0.5 [2.0]	0.4 [1.8]	0.5 [2.0]
500 deg. C	0.3 [2.1]	0.5 [2.2]	0.3 [2.1]	0.5 [2.2]	0.4 [2.0]	0.5 [2.2]	0.4 [2.0]	0.5 [2.2]
600 deg. C	0.4 [2.3]	0.5 [2.5]			0.4 [2.3]	0.5 [2.4]		
700 deg. C	0.4 [2.5]	0.5 [2.7]			0.4 [2.5]	0.6 [2.7]		
800 deg. C	0.4 [2.7]	0.6 [2.9]			0.5 [2.8]	0.6 [2.9]		
-300 deg. F	0.4 [1.3]	0.5 [1.5]	0.4 [1.3]	0.5 [1.5]	0.4 [1.2]	0.6 [1.4]	0.4 [1.1]	0.6 [1.4]
-100 deg. F	0.4 [1.6]	0.6 [1.9]	0.4 [1.6]	0.6 [1.9]	0.5 [1.5]	0.6 [1.8]	0.5 [1.5]	0.6 [1.8]
100 deg. F	0.5 [2.0]	0.6 [2.3]	0.5 [2.0]	0.6 [2.2]	0.5 [1.9]	0.7 [2.2]	0.5 [1.9]	0.7 [2.2]
300 deg. F	0.5 [2.4]	0.6 [2.6]	0.5 [2.3]	0.6 [2.6]	0.5 [2.3]	0.7 [2.6]	0.5 [2.2]	0.7 [2.5]
500 deg. F	0.5 [2.8]	0.7 [3.0]	0.5 [2.7]	0.7 [3.0]	0.5 [2.7]	0.8 [3.0]	0.5 [2.7]	0.7 [3.0]
700 deg. F	0.6 [3.1]	0.7 [3.4]	0.5 [3.1]	0.7 [3.4]	0.6 [3.1]	0.8 [3.4]	0.6 [3.1]	0.8 [3.4]
900 deg. F	0.6 [3.6]	0.8 [3.9]	0.6 [3.5]	0.8 [3.8]	0.6 [3.5]	0.8 [3.9]	0.6 [3.5]	0.8 [3.8]
1100 deg. F	0.6 [4.0]	0.9 [4.3]			0.7 [4.0]	0.9 [4.4]		
1300 deg. F	0.7 [4.6]	0.9 [4.8]			0.7 [4.5]	1.0 [4.8]		
1500 deg. F	0.7 [5.0]	0.9 [5.3]			0.8 [5.0]	1.1 [5.3]		

(1) The values shown in brackets correspond to the maximum errors for temperatures in the range 0 ... 60 deg. C or 32 and 140 deg. F.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Max Cable Resistance for Pt100/Pt1000

Maximum cable resistance

Wiring type	Pt100 (IEC751)		Pt100 (US/JIS)		Pt1000 (IEC751)		Pt1000 (US/JIS)	
	2/4 wires	**3 wires**	**2/4 wires**	**3 wires**	**2/4 wires**	**3 wires**	**2/4 wires**	**3 wires**
Max. resistance per cable	50 Ohms with 4 wires	20 Ohms (1)	500 Ohms with 4 wires	20 Ohms (1)	500 Ohms with 4 wires	200 Ohms (1)	500 Ohms with 4 wires	200 Ohms (1)

(1) Matching of line resistance for 3-conductor cables is < 0.02%.

RTD Ranges for Ni100/Ni1000

Range specific data

Range	Ni100 DIN43760	Ni1000 DIN43760
Input Span	-60...+250 deg. C ..... -76...+482 deg. F	-60...+250 deg. C -76...+482 deg. F
Resolution of conversion	0.026...0.012 deg. C 0.047...0.022 deg. F	0.026...0.0120 deg. C 0.047...0.022 deg. F
Display resolution	0.1 deg. C 0.1 deg. F	0.1 deg. C 0.1 deg. F

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Errors for Ni100/Ni1000

Maximum error at 25 deg. C in degr. C (1)

Temperature	Wiring Type			
	Ni100 DIN43760		Ni1000 DIN43760	
-50 deg. C	0..3 [0.8]	0.3 [1.0]	0.3 [0.8]	0.4 [0.9]
0 deg. C	0.2 [0.8]	0.3 [1.0]	0.3 [0.8]	0.3 [0.9]
50 deg. C	0.2 [0.8]	0.3 [0.9]	0.3 [0.8]	0.3 [0.9]
100 deg. C	0.2 [0.8]	0.3 [0.9]	0.3 [0.8]	0.3 [0.9]
150 deg. C	0.2 [0.8]	0.3 [0.9]	0.2 [0.8]	0.3 [0.9]
200 deg. C	0.2 [0.8]	0.3 [0.9]	0.2 [0.8]	0.3 [0.8]
250 deg. C	0.2 [0.8]	0.3 [0.8]	0.2 [0.8]	0.3 [0.8]
0 deg. F	0.4 [1.4]	0.5 [1.6]	0.4 [1.3]	0.6 [1.6]
100 deg. F	0.4 [1.4]	0.5 [1.6]	0.4 [1.4]	0.5 [1.5]
200 deg. F	0.4 [1.4]	0.5 [1.5]	0.4 [1.4]	0.5 [1.5]
300 deg. F	0.4 [1.4]	0.5 [1.5]	0.4 [1.4]	0.5 [1.5]
400 deg. F	0.4 [1.4]	0.5 [1.5]	0.4 [1.4]	0.5 [1.5]

(1) The values shown in brackets correspond to the maximum errors for temperatures in the range 0 ... 60 deg. C or 32 and 140 deg. F.

Max Cable Resistance for Ni100/Ni1000

Maximum cable resistance

Wiring Type	Ni100 DIN43760		Ni1000 DIN43760	
	2/4 wires	3 wires	2/4 wires	3 wires
Max. resistance per cable	1000 Ohms with 4 wires	200 Ohms (1)	1000 Ohms with 4 wires	200 Ohms (1)

(1) Matching of line resistance for 3-conductor cables is < 0.02%.

Thermocouple Ranges in Degrees C

Input Span and Resolution in degrees C.

	Thermocouple Type							
	B	E	J	K	N	R	S	T
Input Span	0.0 +1802.0	-270.0 +1000.0	-210.0 +1200.0	-270.0 +1372.0	-270.0 +1300.0	-50.0 +1769.0	-50.0 +1769.0	-270.0 +400.0
Resolution of conversion	0.78... ...0.07	1.12... ...0.04	0.15... ...0.05	0.83... ...0.30	1.67... ...0.03	0.26... ...0.08	0.24... ...0.09	0.50... ...0.02
Display resolution	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Thermocouple Errors in Degrees C

Maximum error at 25 deg. C in degrees C. (1)

Temperature	Thermocouple Type							
	B	**E**	**J**	**K**	**N**	**R**	**S**	**T**
-200 deg. C		5.8 [11.8]		6.9[14.6]	8.0[18.3]			6.8[14.8]
-100 deg. C		3.4 [6.7]		3.6 [7.5]	4.0 [8.9]			4.0 [8.4]
0 deg. C		2.7 [5.3]	2.8 [5.5]	2.9 [6.0]	3.3 [7.3]	6.4[13.1]	6.3[12.8]	3.0 [6.3]
100 deg. C		2.5 [4.8]	2.7 [5.2]	2.9 [5.8]	3.1 [6.6]	4.7 [9.5]	4.8 [9.6]	2.6 [5.4]
200 deg. C		2.4 [4.5]	2.7 [5.3]	3.2 [6.2]	2.8 [6.1]	4.2 [8.2]	4.4 [8.5]	2.4 [4.9]
300 deg. C		2.4 [4.5]	2.9 [5.5]	3.1 [6.1]	2.7 [5.8]	3.9 [7.7]	4.1 [8.1]	2.3 [4.7]
400 deg. C		2.4 [4.5]	3.0 [5.7]	3.2 [6.2]	2.8 [5.7]	3.8 [7.4]	4.0 [7.9]	
500 deg. C		2.4 [4.6]	3.1 [5.7]	3.3 [6.3]	2.8 [5.7]	3.7 [7.2]	4.1 [7.8]	
600 deg. C	5.1 [9.5]	2.7 [4.8]	3.1 [5.7]	3.4 [6.5]	2.8 [5.8]	3.7 [7.0]	4.1 [7.7]	
700 deg. C	4.5 [8.4]	2.8 [5.0]	3.0 [5.5]	3.6 [6.7]	3.0 [5.9]	3.7 [6.9]	4.1 [7.7]	
800 deg. C	4.2 [7.7]	3.0 [5.3]		3.8 [7.0]	3.0 [6.1]	3.7 [6.9]	4.1 [7.6]	
900 deg. C	4.0 [7.2]			4.0 [7.5]	3.2 [6.3]	3.7 [6.7]	4.1 [7.5]	
1000 deg. C	3.8 [6.8]			4.2 [7.8]	3.3 [6.5]	3.7 [6.7]	4.1 [7.5]	
1100 deg. C	3.6 [6.5]			4.5 [8.2]	3.6 [6.8]	3.7 [6.7]	4.2 [7.5]	
1200 deg. C	3.6 [6.3]			4.7 [8.7]	3.7 [7.1]	3.7 [6.7]	4.2 [7.5]	
1300 deg. C	3.6 [6.2]					3.9 [6.8]	4.3 [7.7]	
1400 deg. C	3.6 [6.2]					4.0 [6.9]	4.4 [7.8]	
1500 deg. C	3.6 [6.1]					4.1 [7.1]	4.6 [8.1]	
1600 deg. C	3.8 [6.3]					4.3 [7.4]	4.8 [8.3]	
1700 deg. C	3.8 [6.5]							
Overflow code	+ 1802.1	+ 1000.1	+ 1200.1	+ 1372.1	+ 1300.1	+ 1769.1	+ 1769.1	+ 400.1
Underflow code	- 0.1	- 270.1	- 210.1	- 270.1	- 270.1	- 50.1	- 50.1	- 270.1
Wiring default code	- 0.2	- 270.2	- 210.2	- 270.2	- 270.2	- 50.2	- 50.2	- 270.2

(1) The values shown in brackets correspond to the maximum errors for temperatures in the range 0...60 deg. C or 32 and 140 deg. F.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Thermocouple Ranges in Degrees F

Input Span and Resolution in degrees F.

	Thermocouple Type							
	B	**E**	**J**	**K**	**N**	**R**	**S**	**T**
Input span	-32.0 +3275.6	-454.1 +1832.0	-346.1 +2192.0	-454.1 +2501.6	-454.1 +2372.0	-58.1 +3216.2	-58.1 +3216.2	-454.1 +752.0
Resolution of conversion	1.40... ...0.12	2.01... ...0.07	0.27... ...0.09	1.50... ...0.05	3.00... ...0.05	0.47... ...0.15	0.43... ...0.16	0.90... ...0.04
Display resolution	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1

Thermocouple Errors in Degrees F

Maximum error at 77 deg. F in degrees F. (1)

Temperature	**Thermocouple Type**							
	B	**E**	**J**	**K**	**N**	**R**	**S**	**T**
-300 deg. F		9.1 [18.5]		10.8 [22.3]	11.9 [27.5]			10.9 [23.5]
-200 deg. F								7.8[17.1]
-100 deg. F		5.7[11.1]		6.1[12.4]	6.6[14.6]			6.5[13.8]
0 deg. F			5.1[10.0]			12.7 [26.0]	12.3 [25.2]	5.6 [11.9]
100 deg. F		4.7[9.2]		5.1[10.5]	5.8[12.8]			5.0[10.7]
200 deg. F			4.9[9.4]			8.6[17.4]	8.7[17.5]	4.7[9.8]
300 deg. F		4.4[8.3]		5.5[10.9]	5.2[11.5]			4.4[9.2]
400 deg. F			4.9[9.5]			7.5[14.8]	7.8[15.3]	4.3[8.8]
500 deg. F		4.3[8.1]		5.7[11.2]	5.1[10.8]			4.3[8.5]
600 deg. F			5.3[9.9]			6.9[13.6]	7.4[14.4]	4.2[8.3]
700 deg. F		4.4[8.1]		5.7[11.2]	4.9[10.5]			4.1[8.2]
800 deg. F			5.5[10.3]			6.8[13.1]	7.3[14.2]	
900 deg. F		4.6[8.3]		5.9[11.3]	5.1[10.4]			
1000 deg. F			5.5[10.3]			6.7[12.8]	7.4[14.0]	
1100 deg. F	9.2[17.1]	4.8[8.7]		6.1[11.7]	5.1[10.4]			
1200 deg. F			5.5[10.0]			6.7[12.6]	7.3[13.8]	
1300 deg. F	8.1[15.1]	5.0[9.1]		6.5[12.1]	5.3[10.6]			
1400 deg. F			5.3[9.8]			6.6[12.4]	7.3[13.7]	
1500 deg. F	7.4[13.7]	5.4[9.6]		6.9[12.9]	5.6[11.1]			

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Temperature	Thermocouple Type							
	B	**E**	**J**	**K**	**N**	**R**	**S**	**T**
1600 deg. F						6.6[12.3]	7.3[13.7]	
1700 deg. F	7.1[12.8]			7.3[13.5]	5.8[11.5]			
1800 deg. F						6.7[12.1]	7.3[13.6]	
1900 deg. F	6.7[12.0]			7.8[14.2]	6.2[11.9]			
2000 deg. F						6.7[12.0]	7.4[13.6]	
2100 deg. F	6.5[11.5]			8.2[15.1]	6.6[12.4]			
2200 deg. F						6.8[11.9]	7.6[13.6]	
2300 deg. F	6.4[11.3]			8.9[16.2]	7.0[13.1]			
2400 deg. F						6.8[12.0]	7.8[13.8]	
2500 deg. F	6.4[11.1]							
2600 deg. F						6.9[11.9]	8.0[14.2]	
2700 deg. F	6.5[11.1]							
2800 deg. F						6.9[11.9]	8.3[14.7]	
2900 deg. F	6.6[11.3]							
3000 deg. F						7.0[12.0]	8.8[15.4]	
3100 deg. F	6.6[11.7]							
Overflow code	+3275.7	+1832.1	+2192.1	+2501.7	+2372.1	+3216.3	+3216.3	+752.1
Underflow code	+31.9	-454.2	-346.2	-454.2	-454.2	-58.2	-58.2	-454.2
Wiring default code	+31.8	-454.3	-346.3	-454.3	-454.3	-58.3	-58.3	-454.3

(1) The values shown in brackets correspond to the maximum errors for temperatures in the range 0...60 deg. C or 32 and 140 deg. F.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base.

Illustration

The following illustration shows the internal connections between terminals.

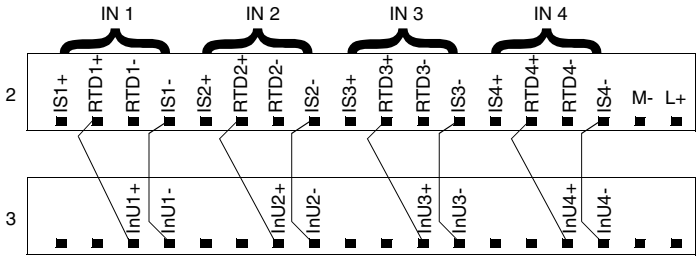

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Mapping Terminal Blocks

Mapping terminal blocks is described in the table below

Row	Terminal No.	Description	Function
2	1, 5, 9, 13	IS1+,IS2+ IS3+,IS4+	+Current source output, Channels 1 ... 4
	2, 6, 10, 14	RTD1+, RTD2+ RTD4+, RTD4+	+RTD input, Channels 1 ... 4
	3, 7, 11, 15	RTD1-, RTD2- RTD4-, RTD4-	-RTD input, Channels 1 ... 4
	4, 8, 12, 16	IS1-,IS2- IS3-,IS4-	-Current source output, Channels 1 ... 4
	17	M-	- power supply return
	18	L+	Module power supply + 24 V
3	1, 2, 5, 6, 9,10,13, 14	-	Not used
	3, 7, 11, 15	InU1+,InU2+ InU3+,InU4+	+ thermocouple or voltage mode input, channels 1 ... 4
	4, 8, 12, 16	InU1-,InU2- InU-+,InU4-	- thermocouple or voltage mode input, Channels 1 ... 4
	17, 18	-	Not used

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Signal Protection

To protect the signal from external noise induced in serial or common mode, we recommend the following precautions:

- Use shielded twisted-pair cables with a minimum conductor cross section of 24 AWG or 0.22 mm^2.
- Connect the cable shield to ground via the Cable Grounding Rail (part number CER 01).
- You may combine the analog inputs on this I/O base in one multi-pair cable provided the same ground is used.
- When wiring the voltage supply, use sensors that do not have ground reference.

Thermocouple-Measurement Precautions

For thermocouple measurements (except with thermocouple B), observe the following precautions to obtain the accuracies indicated in the performance tables:

- Wait 45 min. after powering up the base (the time required for the module towarm up to the temperature balance needed for internal cold junctioncompensation) prior to taking any measurements
- The air circulation must not exceed a rate of 0.1 m/s; air circulation in excess of this amount will affect the thermal balance inside the base
- Keep the rate of temperature fluctuations outside the base to less than 10 deg./hr
- Keep the distance between the base and any heat source greater than 100 mm

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section contains an illustration to assist you in wiring the following types of devices:

- RTD 4-wire configuration
- RTD 3-wire configuration
- RTD 2-wire configuration
- Thermocouple input

Diagram

Examples of wiring are shown in the diagram below.

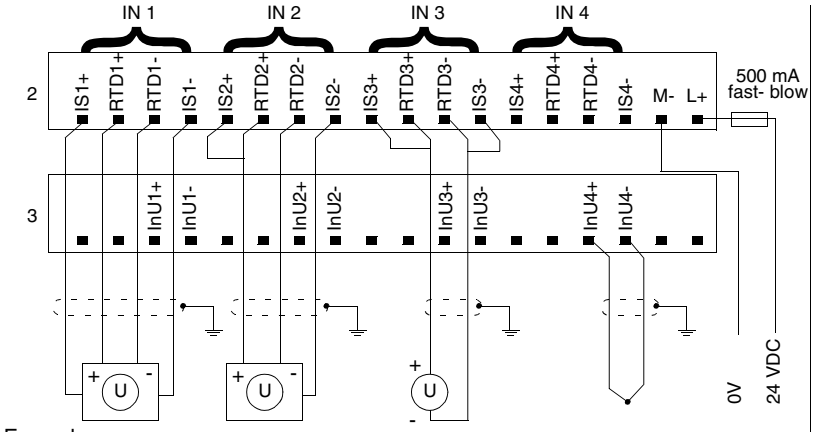

Examples
* Channel 1,RTD input, 4 - wire configuration
* Channel 2,RTD input, 3 - wire configuration
* Channel 3,RTD input, 2 - wire configuration
* Channel 4,thermocouple input

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 AAI 520 40 TSX Momentum I/O base supports 4 analog inputs. This section contains information about the mapping of the analog input values into input words and the usage of output words for channel configuration.

I/O Map

The I/O base must be mapped as four contiguous input words and four contiguous output words, as follows:

Word	Input Data	Output Data
1 = LSW	Value, input channel 1	Parameters for input channels 1
2	Value, input channel 2	Parameters for input channels 2
3	Value, input channel 3	Parameters for input channels 3
4 = MSW	Value, input channel 4	Parameters for input channels 4

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Channel Parameters

Overview

Parameters must be set for all of the analog channels before the module can be commissioned. This section provides the codes for setting the parameters and gives examples of parameter settings.

> **Note:** If you set new parameters for the module, always send a complete set of parameters (all channels, inputs and outputs), even if you only want to change a single parameter. Otherwise the module will refuse the new parameters and continue working with the old ones.

Key

This section focuses on output words 1 ... 4, as highlighted in the table below:

Word	Input Data	Output Data
1 = LSW	Value, input channel 1	**Parameters for input channels 1**
2	Value, input channel 2	**Parameters for input channels 2**
3	Value, input channel 3	**Parameters for input channels 3**
4 = MSW	Value, input channel 4	**Parameters for input channels 4**

Illustration

Parameters are set by entering a four-bit code in output words 1 ... 4, as follows:

Output Word 1 (Register 4*x*, to parameterize input channel 1)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Output Word 2 (Register 4*x*+1, to parameterize input channel 2)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Output Word 3 (Register 4*x*+2, to parameterize input channel 3)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Output Word 4 (Register 4*x*+3, to parameterize input channel 4)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Parameters

For each input channel, you may set the following parameters:

Parameter	Options
Input range	Type B,E,J,K,N,R,S or T thermocouple (according to IEC584 standard, June1989) with internal cold junction compensation
RTD	Pt100 or Pt1000 RTDs (according to IEC751, June 1986; or JIS C1604, January 1989), and Ni100 or Ni1000 RTDs (according to DIN standard 43.760, September 1987), with 2-, 3- or 4 wires
Low voltage range	+/-100 mV or +/-25 mV
Broken wire detection	Enabled or disabled

Note: The 0000 reserved value is more a control than a parameter. It forces the I/O base into a default condition where it continues to receive field inputs according to the previous channel parameters.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Thermocouple-Parameter Codes

Use the following codes to set your choice of parameters:

Input range	Temperature unit	Broken-wire detection	Parameter code (hex)
Thermocouple B	1/10 degrees C	disabled	2201
		enabled	2301
	1/10 degrees F	disabled	2281
		enabled	2381
Thermocouple E	1/10 degrees C	disabled	1202
		enabled	1302
	1/10 degrees F	disabled	1282
		enabled	1382
Thermocouple J	1/10 degrees C	disabled	1203
		enabled	1303
	1/10 degrees F	disabled	1283
		enabled	1383
Thermocouple K	1/10 degrees C	disabled	1204
		enabled	1304
	1/10 degrees F	disabled	1284
		enabled	1384
Thermocouple N	1/10 degrees C	disabled	1205
		enabled	1305
	1/10 degrees F	disabled	1285
		enabled	1385
Thermocouple R	1/10 degrees C	disabled	2206
		enabled	2306
	1/10 degrees F	disabled	2286
		enabled	2386
Thermocouple S	1/10 degrees C	disabled	2207
		enabled	2307
	1/10 degrees F	disabled	2287
		enabled	2387
Thermocouple T	1/10 degrees C	disabled	2208
		enabled	2308
	1/10 degrees F	disabled	2288
		enabled	2388

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RTD Parameter Codes

Use the following codes to set your choice of parameters:

Input range	Wiring configuration	Temperature unit	Broken-wire detection	Parameter code (hex)
IEC PT100 RTD	2- or 4-wire	1/10 degrees C	disabled	0A20
			enabled	0B20
		1/10 degrees F	disabled	0AA0
			enabled	0BA0
	3-wire	1/10 degrees C	disabled	0E20
			enabled	0F20
		1/10 degrees F	disabled	0EA0
			enabled	0FA0
IEC PT1000 RTD	2- or 4-wire	1/10 degrees C	disabled	0221
			enabled	0321
		1/10 degrees F	disabled	02A1
			enabled	03A1
	3-wire	1/10 degrees C	disabled	0621
			enabled	0721
		1/10 degrees F	disabled	06A1
			enabled	07A1
US/JIS PT100 RTD	2- or 4-wire	1/10 degrees C	disabled	0A60
			enabled	0B60
		1/10 degrees F	disabled	0AE0
			enabled	0BE0
	3-wire	1/10 degrees C	disabled	0E60
			enabled	0F60
		1/10 degrees F	disabled	0EE0
			enabled	0FE0
US/JIS PT1000 RTD	2- or 4-wire	1/10 degrees C	disabled	0261
			enabled	0361
		1/10 degrees F	disabled	02E1
			enabled	03E1
	3-wire	1/10 degrees C	disabled	0661
			enabled	0761
		1/10 degrees F	disabled	06E1
			enabled	07E1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Input range	Wiring configuration	Temperature unit	Broken-wire detection	Parameter code (hex)
DIN Ni100 RTD	2- or 4-wire	1/10 degrees C	disabled	0A23
			enabled	0B23
		1/10 degrees F	disabled	0AA3
			enabled	0BA3
	3-wire	1/10 degrees C	disabled	0E23
			enabled	0F23
		1/10 degrees F	disabled	0EA3
			enabled	0FA3
DIN Ni1000 RTD	2- or 4-wire	1/10 degrees C	disabled	0222
			enabled	0322
		1/10 degrees F	disabled	02A2
			enabled	03A2
	3-wire	1/10 degrees C	disabled	0622
			enabled	0722
		1/10 degrees F	disabled	06A2
			enabled	07A2

Low Voltage Parameter Codes

Use the following codes to set your choice of parameters:

Input range	Broken-wire detection	Parameter code (hex)
+/-25mV	disabled	2210
	enabled	2310
+/-100mV	enabled	1211
	disabled	1311

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Inputs

Overview

This section describes how to interpret the value of the analog input channels.

Key

This section describes input words 1 ... 8, as highlighted in the table below:

Word	Input Data	Output Data
1 = LSW	**Value, input channel 1**	Parameters for input channels 1
2	**Value, input channel 2**	Parameters for input channels 2
3	**Value, input channel 3**	Parameters for input channels 3
4 = MSW	**Value, input channel 4**	Parameters for input channels 4

Analog Input Values

Mapping of analog input values is shown below.

Input Word 1 (Register 3*x*, analog value returned on channel 1)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Input Word 2 (Register 3*x*+1, analog value returned on channel 2)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Input Word 3 (Register 3*x*+2, analog value returned on channel 3)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Input Word 4 (Register 3*x*+3, analog value returned on channel 4)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Broken Wire Indication

A broken wire indication has the following binary format:

Broken wire indication in an input word															
1	**0**	**0**	**0**	**0**	**0**	**0**	**0**	**0**	**0**	**0**	**0**	**0**	**0**	**0**	**0**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

RTD, Thermocouple and mV Input Measuring Ranges

Overview


This section contains illustrations explaining the analog/digital relation for the various input measuring ranges.

RTD or Thermocouple

If a RTD or thermocouple input range is chosen, the digital value transmitted is the temperature value expressed as either a tenth of a degree Centigrade or a tenth of a degree Fahrenheit, depending on the temperature unit chosen in the configuration.


+/- 100 mV

The following illustration shows the analog/digital relation at +/- 100 mV.

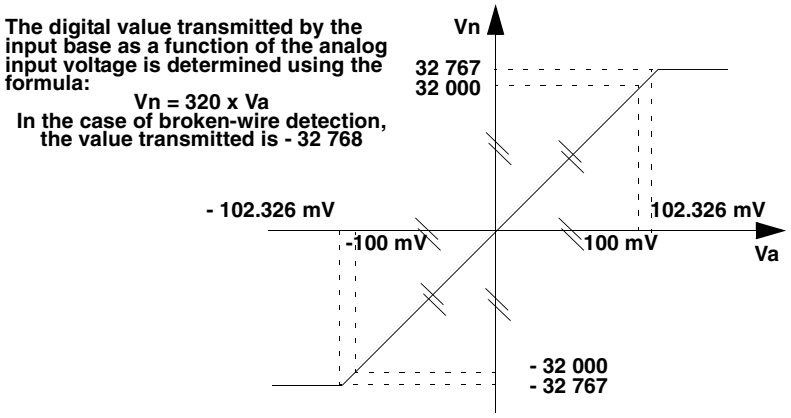

+/- 25 mV

The following illustration shows the analog/digital relation at +/- 25 mV.

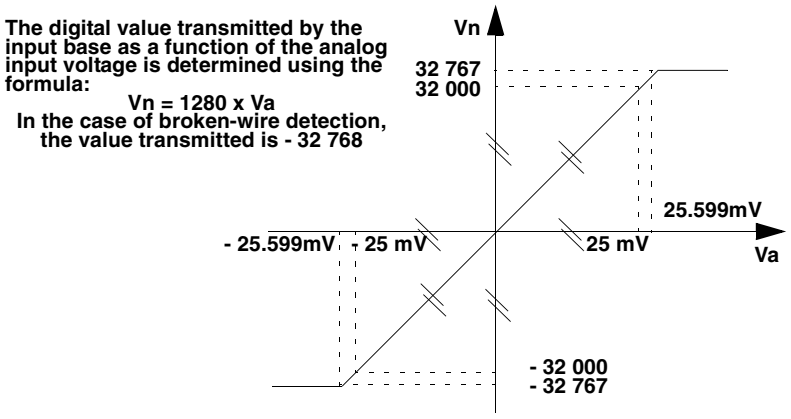

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 AAO 120 00 Analog 4 Channel Output Module Base +/- 10 V, 0 - 20 mA

9

Overview

Purpose

This chapter describes the 170 AAO 120 00 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	122
Specifications	124
Internal Pin Connections	127
Field Wiring Guidelines	128
Wiring Diagrams	130
I/O Mapping	131
Analog Channel Parameters	132
Analog Outputs	134
Output Ranges	135

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 AAO 120 00 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below

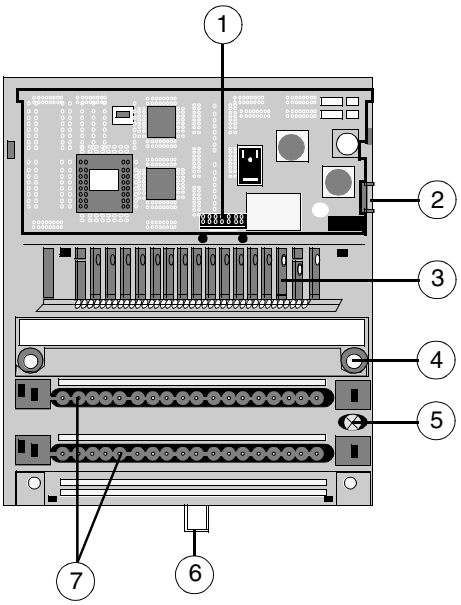


Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Mounting holes for panel mount
5	Grounding screw
6	Locking tab for DIN rail mount
7	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

This I/O base has one LED, the ready indicator shown in the illustration below.

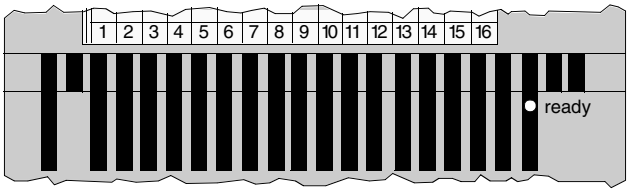

LED Descriptions

The ready indicator is described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate. Operating voltage for internal logic is present and self-test has been passed.
	Off	Module not ready. Operating voltage not present or module defective.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 AAO 120 00 I/O base.

General Specifications

General Specifications

Module type	4 analog outputs
Output range	+/- 10 V 0 ... 20 mA
Supply voltage	24 VDC
Supply voltage range	20 ... 30 VDC
Supply current consumption (base)	max. 530 mA at 24 VDC
Supply current consumption (actuators)	max. 150 mA at 24 VDC (+/- 5 %
Power dissipation	5.6 W typical 8.5 W maximum
I/O map	5 output words

Isolation

Isolation

Between channels	none
Between base power supply and ground	500 Vcc, 1 min
Between channels and ground	500 VAC, 1 min
Output protections	short circuits (in voltage) circuits open in current polarity inversion
Base power supply protection	+/- 30 V (voltage or current output)
Common mode rejection	250 VAC @ 47 ... 63 or 250 VDC Channel-to-ground

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Fuses

Fuses

Internal (not user-replaceable)	2 A slow-blow
External (actuator power supply)	250 mA fast-blow (Wickmann 193025000 mA or equivalent)
External (operating voltage)	630 mA fast-blow (Wickmann 193063000 mA or equivalent)

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 500V
Radiated noise	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1 Div.2 pending

Physical dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) with no or one busbar
Weight	240 g (0.55 lb)

Note: The 24 VDC actuator power supply is protected in the same way as the analog outputs (different from the base power supply).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Outputs

Specifications for analog outputs

Number of channels	4	
Format of transmitted data	full 16 bits signed (2's complement)	
Protection (base and actuators)	polarity inversion	
Range	+/-10 V	0 ... 20 mA (current source or sink)
Load impedance	1 KOhm minimum	600 Ohms maximum
Capacitative load	< 1 micro F	< 1 micro F
Error at 25 deg. C	0.2% PE*	0.3% PE*
Error at 60 deg. C	0.25% PE*	0.4% PE*
Temperature drift (60 deg. C)	10ppmPE*/ deg. C	30ppmPE*/ deg. C
Resolution	12 bits + sign	12 bits + sign
Update time for the 4 outputs	< 2 ms	

Note: *Not to be confused with Protective Earth. PE is used here as a European notation for full scale, with the following values:

- 10 V in range of +/- 10 V
- 20mA in range of 0 ... 20 mA

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base.

Illustration

The following illustration shows the internal connections between terminals.

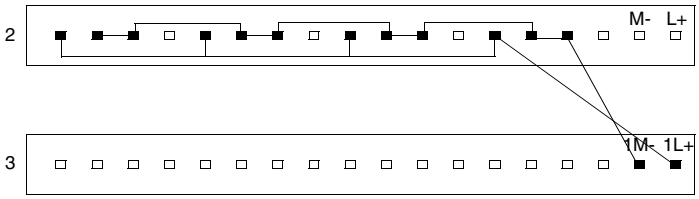

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Mapping Terminal Blocks

Mapping terminal blocks is described in the table below.

Row	Terminal No.	Description	Function
2	4, 8, 12, 16	-	Not used
	1, 5, 9, 13	1L+	+24 V actuator power supply output
	2, 3, 6, 7, 10, 11, 14, 15	1M-	Actuator power supply neg. 0 V return
	17	M-	Module power supply 0 V
	18	L+	Module power supply +24V
3	1, 5, 9, 13	OUTI1-, OUTI2- OUTI3-, OUTI4-	Output current mode (sink) Channels 1 ... 4
	2, 6, 10, 14	OUTI1+, OUTI2+ OUTI3+, OUTI4+	Output current mode (source) Channels 1 ... 4
	3, 7, 11, 15	OUTU1+, OUTU2+ OUTU3+, OUTU4+	Output voltage mode Channels 1 ... 4
	4, 8, 12, 16	-	Not used
	17	1M-	Actuator power supply neg. 0 V return
	18	1L+	+24 V actuator power supply output

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Fuse Required

The 250 mA fast-blow fuse shown in the wiring diagram (*Wiring Diagrams, p. 130*) must be wired into the actuator power supply.

Signal Protection

To protect the signal from external noise induced in serial or common mode, we recommend the following precautions:

- Use shielded twisted-pair cables with a minimum conductor cross section of 24 AWG or 0.22mm^2.
- Connect the cable shield to ground via the Cable Grounding Rail (part number CER 001).
- You may combine the analog inputs on this I/O base in one multi-pair cable provided they have the same reference relative to ground.
- The actuator power supply must be protected in the same way as the signal itself.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section contains a diagram to assist you in wiring the following types of devices:

- Output voltage
- Output current (source mode)
- Output current (sink)voltage

Diagram

Examples of wiring are shown in the diagram below.

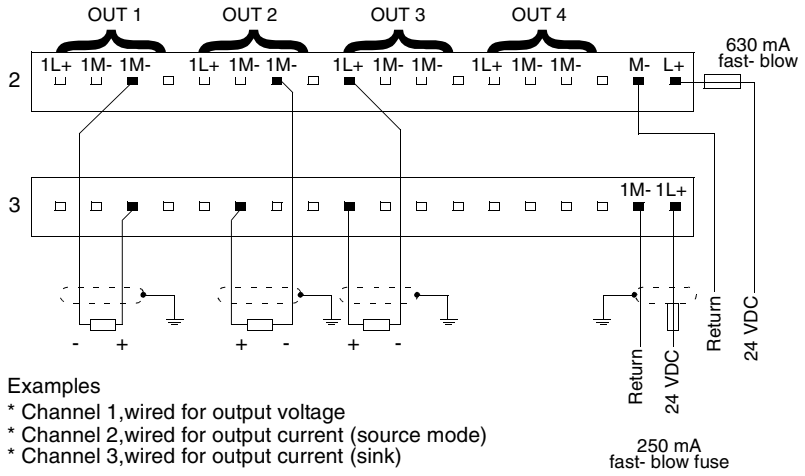

Examples
* Channel 1,wired for output voltage
* Channel 2,wired for output current (source mode)
* Channel 3,wired for output current (sink)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 AAO 120 00 TSX Momentum I/O base supports 4 analog outputs. This section contains information about the mapping of the output words into the analog output values and the usage of output words for channel configuration.

I/O Map

The I/O base must be mapped as five contiguous output words, as follows:

Word	Output Data
1 = LSW	Parameters for output channels 1 ... 4
2	Value, output channel 1
3	Value, output channel 2
4	Value, output channel 3
5 = MSW	Value, output channel 4

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Channel Parameters

Overview

Parameters must be set for all of the analog channels before the module can be commissioned. This section provides the codes for setting the parameters and gives examples of parameter settings.

> **Note:** If you set new parameters for the module, always send a complete set of parameters (all channels, inputs and outputs), even if you only want to change a single parameter. Otherwise the module will refuse the new parameters and continue working with the old ones.

Key

This section focuses on output word 1, as highlighted in the table below.

Word	Output Data
1 = LSW	**Parameters for output channels 1 ... 4**
2	Value, output channel 1
3	Value, output channel 2
4	Value, output channel 3
5 = MSW	Value, output channel 4

Illustration

Parameters are set by entering a four-bit code in output word 1, as follows.

Output Word 1 (Register 4*x*, parameter word)															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
for output channel 4				for output channel 3				for output channel 2				for output channel 1			

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Parameter Codes

The value entered in this word defines the behaviour of the I/O module in case of loss of communication. Each 4-bit nibble in output word 1 must be configured with one of the following binary codes to define the channel parameters. Parameters must be set for all four channels before the module can be commissioned.
In each case, the x may be a 0 or a 1:

Code	Output Parameter)	Function
0000	Reserved value	Forces the I/O base into a default condition where it continues to receive field inputs according to the previous received-channel parameters.
00x1	Output to Zero	Sends a value to the base that causes it to apply zero at the field output.
01x1	Full Range	Sends a value to the base that causes it to apply full scale (+10 V or + 20 mA) at the field output.
10x1	Output Last Value	Sends a value to the base that causes it to apply the last received value at the field output.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Outputs

Overview

This section describes how to interpret the value of the analog output channels.

Key

This section describes output words 2 ... 5, as highlighted in the table below.

Word	Output Data
1 = LSW	Parameters for input channels 1 ... 4
2	**Value, output channel 1**
3	**Value, output channel 2**
4	**Value, output channel 3**
5 = MSW	**Value, output channel 4**

Analog Output Values

Mapping of analog output values is shown below.

Output Word 2 (Register 4*x*+1, analog value sent on channel 1)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Output Word 3 (Register 4*x*+2, analog value sent on channel 2)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Output Word 4 (Register 4*x*+3, analog value sent on channel 3)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Output Word 5 (Register 4*x*+4, analog value sent on channel 4)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Output Ranges


Overview

This section contains illustrations explaining the analog/digital relation for the voltage and current output ranges.

Voltage

The following illustration shows the analog/digital relation for voltage.


The value of the output voltage as a function of the digital value transmitted is determined using the formula:
Va =1/ 3200 x Vn in Volts

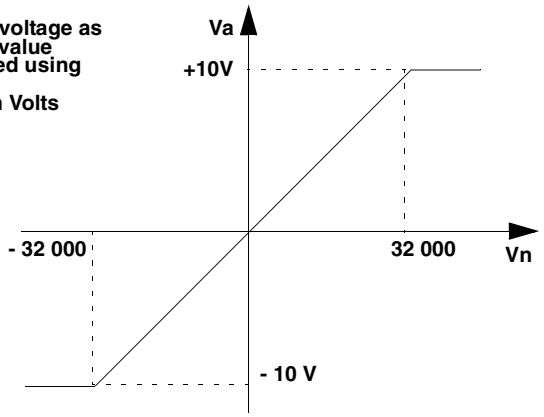

Current

The following illustration shows the analog/digital relation for current.

The value of the output current as a function of the digital value transmitted is determined using the formula:
Ia =1/ 1600 x Vn in mA

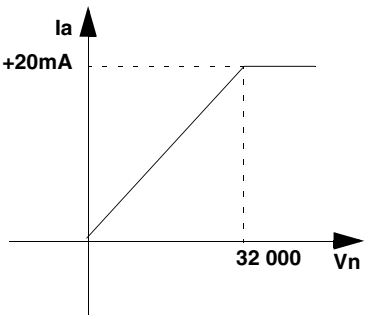

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 AAO 921 00 Analog 4 Channel Output Module Base +/- 10 V, 4 ... 20 mA

10

Overview

Purpose

This chapter describes the 170 AAO 921 00 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	138
Specifications	140
Internal Pin Connections	142
Field Wiring Guidelines	143
Wiring Diagrams	145
I/O Mapping	146
Analog Channel Parameters	147
Analog Outputs	149
Output Ranges	150

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 AAO 921 00 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below

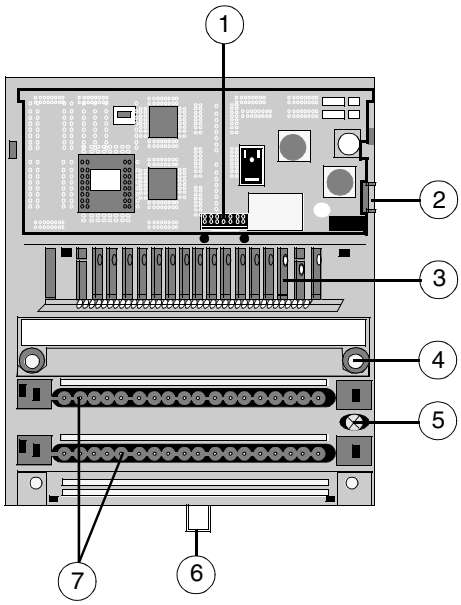


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Mounting holes for panel mount
5	Grounding screw
6	Locking tab for DIN rail mount
7	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

This I/O base has one LED, the ready indicator shown in the illustration below.

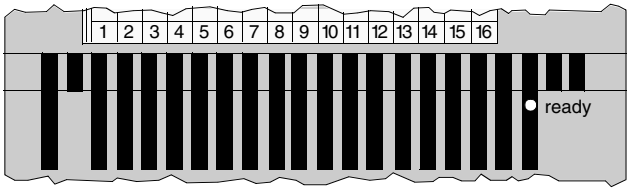

LED Descriptions

The ready indicator is described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate. Operating voltage for internal logic is present and self-test has been passed.
	Off	Module not ready. Operation voltage not present or module defective.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 AAO 921 00 I/O base.

General Specifications

General Specifications

Module type	4 analog outputs
Output range	+/- 10 V 4 ... 20 mA
Supply voltage	24 VDC
Supply voltage range	20 ... 30 VDC
Supply current consumption (base)	max. 530 mA at 24 VDC
Supply current consumption (actuators)	max. 150 mA at 24 VDC (+/- 5 %)
Power dissipation	5.6 W typical 8.5 W maximum
I/O map	5 output words

Isolation

Isolation

Between channels	none
Between base power supply and ground	500 Vcc, 1 min
Between channels and ground	500 VAC, 1 min
Output protections	short circuits (in voltage) circuits open in current polarity inversion
Base power supply protection	+/- 30 V (voltage or current output)
Common mode rejection	250 VAC @ 47 ... 63 Hz or 250 VDC Channel-to-ground

Fuses

Fuses

Internal (not user-replaceable)	2 A slow-blow
External (actuator power supply)	250 mA fast-blow (Wickmann 193025000 mA or equivalent)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 500V
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1 Div. 2 pending

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) with no or one busbar
Weight	215 g (0.45 lb)

Note: The 24 VDC actuator power supply is protected in the same way as the analog outputs (different from the base power supply).

Analog Outputs

Specifications for analog outputs

Number of channels	4	
Format of transmitted data	full 16 bits signed (2's complement)	
Protection (base and actuators)	polarity inversion	
Range	+/-10 V	4 ... 20 mA (current source or sink)
Load impedance	1 KOhm minimum	600 Ohms maximum
Capacitative load	< 1 micro F	< 1 micro F
Error at 25 deg. C	0.2% PE*	0.4% PE*
Error at 60 deg. C	0.25% PE*	0.5% PE*
Temperature drift (60 deg. C)	10ppmPE*/ deg. C	30ppmPE*/ deg. C
Resolution	12 bits + sign	12 bits + sign
Update time for the 4 outputs	2 ms	

Note: *Not to be confused with Protective Earth. PE is used here as a European notation for full scale, with the following values:

- 10 V in range of +/- 10 V
- 20mA in range of 4 ... 20 mA

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base.

Illustration

The following illustration shows the internal connections between terminals.

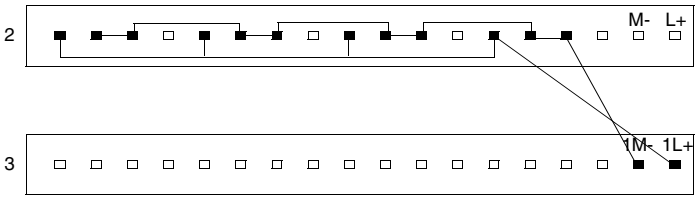

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Mapping Terminal Blocks

Mapping terminal blocks is described in the table below

Row	Terminal No.	Description	Function
2	4, 8, 12, 16	-	Not used
	1, 5, 9, 13	1L+	+24 V actuator power supply output
	2, 3, 6, 7, 10, 11, 14, 15	1M-	Actuator power supply neg. 0 V return
	17	M-	Module power supply 0 V
	18	L+	Module power supply +24V
3	1, 5, 9, 13	OUTI1-, OUTI2- OUTI3-, OUTI4-	Output current mode (sink) Channels 1 ... 4
	2, 6, 10, 14	OUTI1+, OUTI2+ OUTI3+, OUTI4+	Output current mode (source) Channels 1 ... 4
	3, 7, 11, 15	OUTU1+, OUTU2+ OUTU3+, OUTU4+	Output voltage mode Channels 1 ... 4
	4, 8, 12, 16	-	Not used
	17	1M-	Actuator power supply neg. 0 V return
	18	1L+	+24 V actuator power supply output

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Fuse Required

The 250 mA fast-blow fuse shown in the wiring diagram (*Wiring Diagrams, p. 145*) must be wired into the actuator power supply.

Signal Protection

To protect the signal from external noise induced in serial or common mode, we recommend the following precautions:

- Use shielded twisted-pair cables with a minimum conductor cross section of 24 AWG or 0.22mm^2.
- Connect the cable shield to ground via the Cable Grounding Rail (part number CER 001).
- You may combine the analog inputs on this I/O base in one multi-pair cable provided they have the same reference relative to ground.
- The actuator power supply must be protected in the same way as the signal itself.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section contains a diagram to assist you in wiring the following types of devices:

- Output voltage
- Output current (source mode)
- Output current (sink)voltage

Diagram

Examples of wiring are shown in the diagram below.

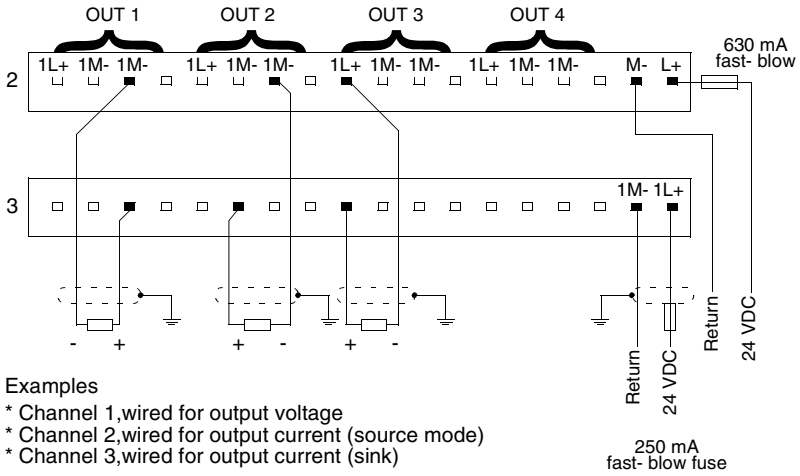

Examples
* Channel 1,wired for output voltage
* Channel 2,wired for output current (source mode)
* Channel 3,wired for output current (sink)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 AAO 921 00 TSX Momentum I/O base supports four analog output channels. This section contains information about the mapping of the I/O data into input words.

I/O Map

The I/O base must be mapped as five contiguos output words, as follows.

Word	Output Data
1 = LSW	Parameters for output channels 1 ... 4
2	Value for output channel 1
3	Value for output channel 2
4	Value for output channel 3
5 = MSW	Value for output channel 4

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Channel Parameters

Overview

Parameters must be set for all of the analog channels before the module can be commissioned. This section provides the codes for setting the parameters and gives examples of parameter settings.

Note: If you set new parameters for the module, always send a complete set of parameters (all channels, inputs and outputs), even if you only want to change a single parameter. Otherwise the module will refuse the new parameters and continue working with the old ones.

Key

This section focuses on output word 1, as highlighted in the table below:

Word	Output Data
1 = LSW	**Parameters for Output channels 1 ... 4**
2	Value, output channel 1
3	Value, output channel 2
4	Value, output channel 3
5= MSW	Value, output channel 4

Illustration

Parameters are set by entering a four-bit code in output word 1, as follows:.

Output Word 1 (Register 4*x*, parameter word)															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
for output channel 4				for output channel 3				for output channel 2				for output channel 1			

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Parameter Codes

The value entered in this word defines the behaviour of the I/O module in case of loss of communication. Each 4-bit nibble in output word 1 must be configured with one of the following binary codes to define the channel parameters. Parameters must be set for all four channels before the module can be commissioned.
In each case, the x may be a 0 or a 1.

Code	Output Parameter)	Function
0000	Reserved value	Forces the I/O base into a default condition where it continues to receive field inputs according to the previous received channel parameters.
00x1	Output to Zero	Sends a value to the base that causes it to apply zero at the field output.
01x1	Full Range	Sends a value to the base that causes it to apply full scale (+10 V or + 20 mA) at the field output.
10x1	Output Last Value	Sends a value to the base that causes it to apply the last received value at the field output.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Outputs

Overview

This section describes how to interpret the value of the analog output channels.

Key

This section describes output words 2 ... 5, as highlighted in the table below.

Word	Output Data
1	Parameters for output channels 1 ... 4
2	**Value, input channel 1**
3	**Value, input channel 2**
4	**Value, input channel 3**
5	**Value, input channel 4**

Analog Output Values

Mapping of analog output values is shown below.

Output Word 2 (Register 4*x*+1, analog value sent on channel 1)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Output Word 3 (Register 4*x*+2, analog value sent on channel 2)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Output Word 4 (Register 4*x*+3, analog value sent on channel 3)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Output Word 5 (Register 4*x*+4, analog value sent on channel 4)															
15	**14**	**13**	**12**	**11**	**10**	**9**	**8**	**7**	**6**	**5**	**4**	**3**	**2**	**1**	**0**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Output Ranges


Overview

This section contains illustrations explaining the analog/digital relation for the voltage and current output ranges.

+/- 10 V

The following illustration shows the analog/digital relation at +/- 10 V.


The value of the output voltage as a function of the digital value transmitted is determined using the formula:
Va =1/ 3200 x Vn in Volts

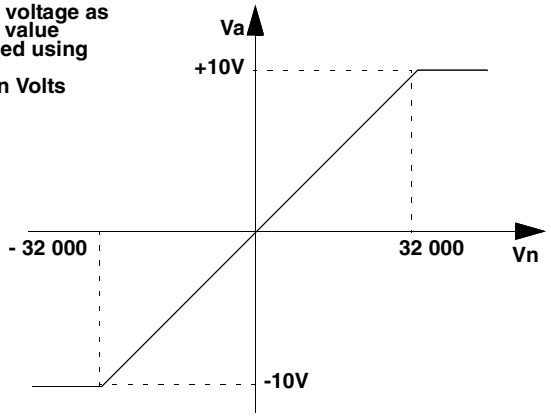

4 ... 20 mA

The following illustration shows the analog/digital relation at 4 ... 20 mA current.

The value of the output current as a function of the digital value transmitted is determined using the formula:
Ia =1/ 20000 x Vn + 4 in mA

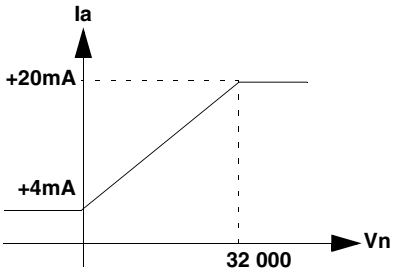

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADI 340 00 24 VDC - 16 Pt. Discrete Input Module Base

11

Overview

Purpose

This chapter describes the 170 ADI 340 00 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	152
Specifications	154
Internal Pin Connections	156
Field Wiring Guidelines	157
Wiring Diagrams	159
I/O Mapping	161

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains a photograph of the front panel of the 170 ADI 340 00 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below.

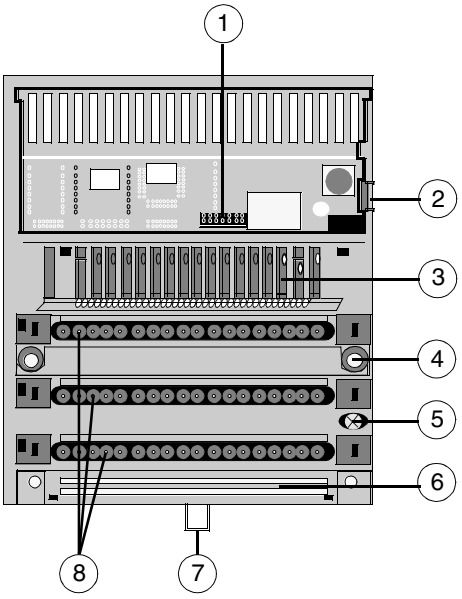


Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Mounting holes for panel mount
5	Grounding screw
6	Busbar Mounting Slot
7	Locking tab for DIN rail mount
8	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

This I/O base has one LED, the ready indicator shown in the illustration below.

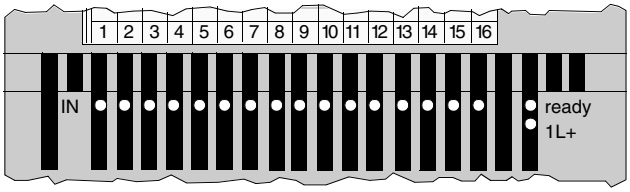

LED Descriptions

The ready indicator is described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate. Operating voltage for internal logic is present and self-test has been passed.
	Off	Module not ready
1L+	Green	Input voltage 1L+ of inputs 1 ... 16 is present
	Off	Input voltage of inputs 1 ... 16 is not present
IN 1...16	Green	Input status (an LED per input); input point active, i.e. input carries a 1 signal (logically ON)
	Off	Input status (an LED per input); input point inactive, i.e. input carries a 0 signal (logically OFF)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADI 340 00 I/O base.

General Specifications

General Specifications

Module type	16 discrete inputs in 1 group
Supply voltage	24 VDC
Supply voltage range	20...30 VDC
Supply current consumption	max. 250 mA at 24 VDC
Power dissipation	6 W + (# of input points on x .144 W)
I/O map	1 input word

Isolation

Isolation

Input to input	none
Field to communication adapter	Defined by Communication Adapter type

Fuses

Fuses

Internal	none
External: operating voltage	315 mA fast-blow (Wickmann193031500 mA or 194037500 mA or equivalent)
External: input voltage	According to the supply of the connected sensors– not to exceed 4A fast-blow

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 500V
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1 Div. 2

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3in) two busbars 171.5 mm (6.75in) three busbars
Weight	190 g (0.42 lb)

Discrete Inputs

Specifications for discrete inputs

Number of points	16
Number of groups	1
Points per group	16
Signal type	True High
IEC 1131 type	1+ (See Appendix *IEC 1131 Input Types, p. 581* for definitions of IEC input types.)
ON voltage	+11 ... +30 VDC
OFF voltage	-3 ... +5 VDC
Input current	2.5 mA minimum ON (6 mA at 24 VDC 1.2 mA maximum OFF
Input voltage range	-3 ... +30 VDC
Input resistance	4 kOhm
Response time	2.2 ms OFF to ON 3.3 ms ON to OFF

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional one-row busbar.

Illustration

Rows 1 through 3 show the internal connections between terminals on the I/O base. Row 4 shows the internal connections on the optional busbar.

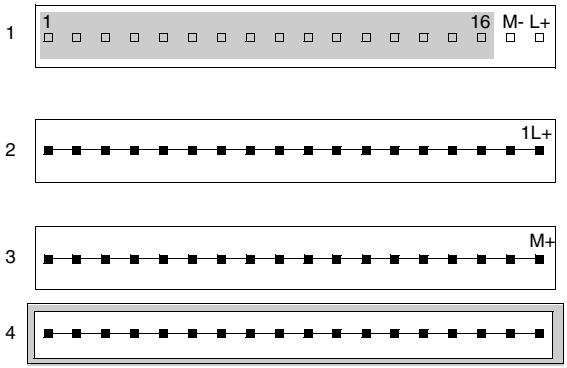

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

Inputs are field wired to row 1 of the base. This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

If you are using 4-wire devices, you will need a 1-row busbar to connect them to protective earth (PE).

Type	Part Number
Screw-in	170 XTS 006 01
Spring-clip	170 XTS 007 01

Mapping Terminal Blocks

A busbar may be attached to this I/O base to provide a fourth row for protective earth (PE).

Row	Terminal	Function
1	1...16	Inputs
	17	Return (M-)
	18	+ 24 VDC Operating voltage (L+)
2	1 ... 17	Sensor/input device voltages
	18	+ 24 VDC for inputs
3	1 ... 17	Returns for sensor/input devices (for 3-and 4-wire devices)
	18	Return for inputs
4	1 ... 18	Protective earth (PE)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section contains an illustration to assist you in wiring the following types of devices:

- 4-wire configuration
- 3-wire configuration
- 2-wire configuration

2-Wire Devices


The diagram below shows an example of wiring for 2-wire devices.

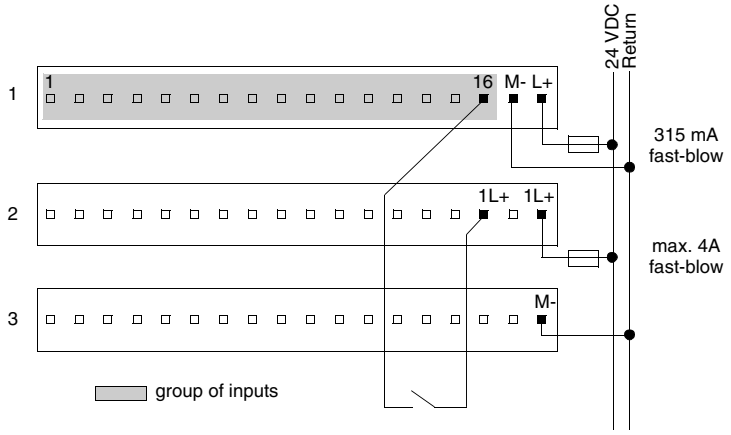

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3- and 4-Wire Devices


The diagram below shows an example of wiring for 3- and 4-wire devices.

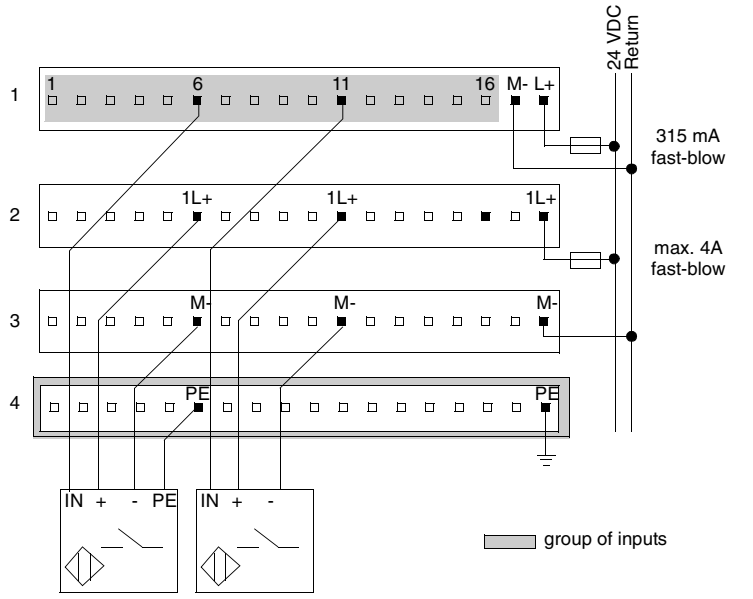

A 1-row busbar is used to provide PE for the 4-wire sensor. No busbar would be required if only 2- and/or 3-wire sensors were used.

Simplified Schematics

The following diagram shows the field-side input circuitry.

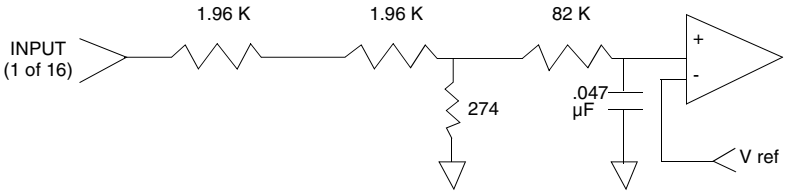

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADI 340 00 TSX Momentum I/O base supports 16 discrete inputs. This section contains information about the mapping of the I/O data into input words.

I/O Map

The I/O base may be mapped as one input word, or as 16 discrete input points.

IEC vs. Ladder Logic


In order to correctly field wire the inputs and map the input data, you need to know which type of Momentum Adapter is mounted on the base. Adapters may either be IEC compliant or 984 Ladder Logic compliant.

	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Data Mapping

The figure below shows how data is mapped on the I/O base with an IEC Compliant adapter. When the I/O is mapped as discrete points (1x), the MSB is assigned to Pin 1 and the LSB is assigned to Pin 16. When the I/O is mapped as a word or register (3x), the MSB (bit 15) is assigned to Pin 16 and the LSB (bit 0) is assigned to Pin 1.

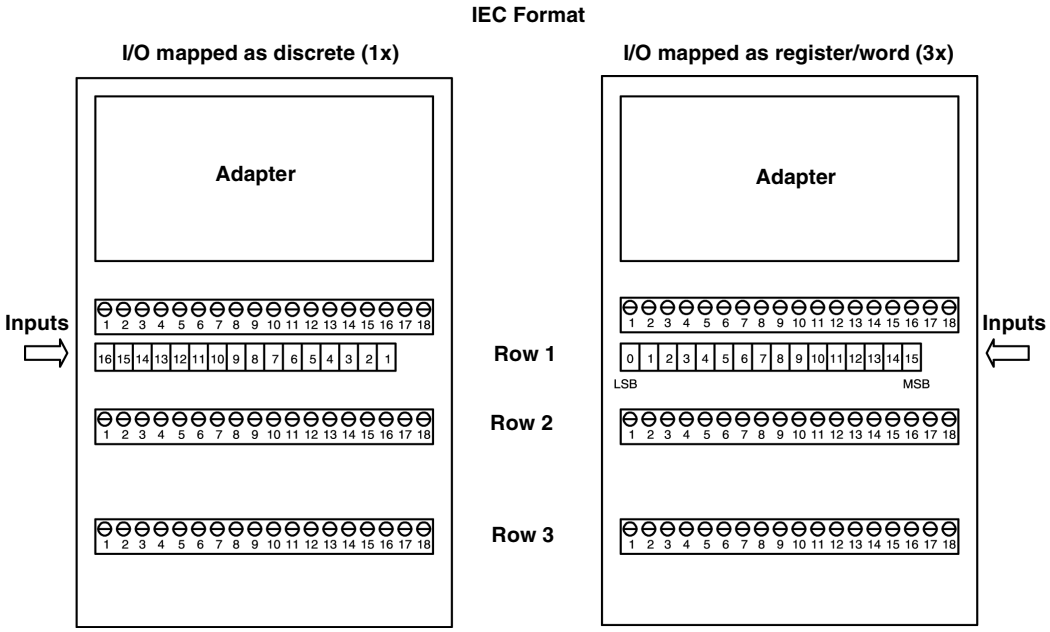

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped on the I/O base with a 984 Ladder Logic Compliant adapter. When the I/O is mapped as discrete points (1x), the MSB is assigned to Pin 16 and the LSB is assigned to Pin 1. When the I/O is mapped as a word or register (3x), the MSB is assigned to Pin 1(bit 15) and the LSB (bit 0) is assigned to Pin 16.

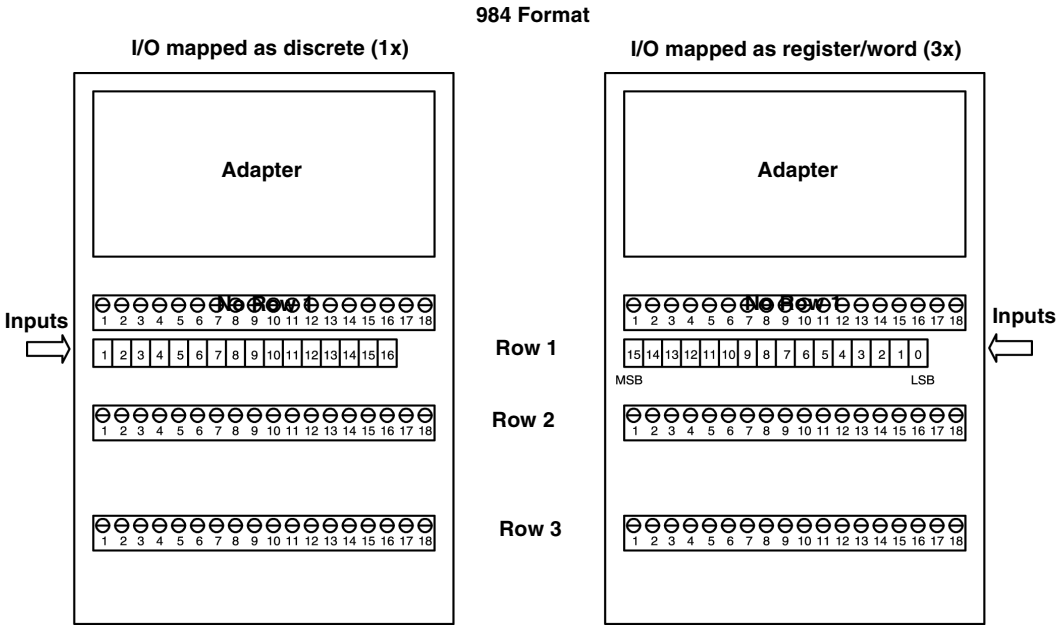

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADI 350 00 24 VDC - 32 Pt. Discrete Input Module Base

12

Overview

Purpose

This chapter describes the 170 ADI 350 00 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	166
Specifications	168
Internal Pin Connections	170
Field Wiring Guidelines	171
Wiring Diagrams	173
I/O Mapping	175

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains a photograph of the front panel of the 170 ADI 350 00 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below.

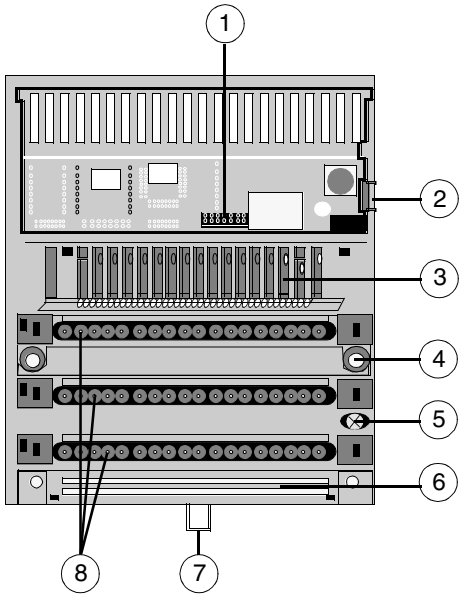


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Mounting holes for panel mount
5	Grounding screw
6	Busbar Mounting Slot
7	Locking tab for DIN rail mount
8	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

The LEDs are shown in the illustration below.

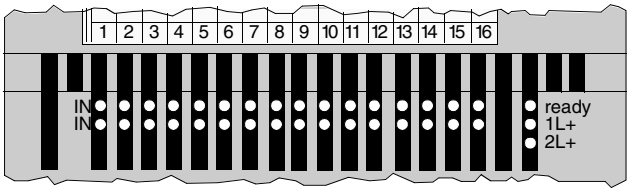

LED Descriptions

The LEDs are described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate. Operating voltage for internal logic (5 V) is present
	Off	Module not ready
1L+	Green	Input voltage 1L+ of inputs 1 ... 16 (group 1) is present
	Off	Input voltage of inputs 1 ... 16 (group 1) is not present
2L+	Green	Input voltage 2L+ of inputs 17 ... 32 (group 2) is present
	Off	Input voltage of inputs 17 ... 32 (group 2) is not present
Upper row IN 1...16	Green	Input status (an LED per input) group 1; input point active, i.e. input carries a 1 signal (logically ON)
	Off	Input status (an LED per input) group 1; input point inactive, i.e. input carries a 0 signal (logically OFF)
Middle row IN 1...16	Green	Input status (an LED per input) group 2; input point active, i.e. input carries a 1 signal (logically ON)
	Off	Input status (an LED per input) group 2; input point inactive, i.e. input carries a 0 signal (logically OFF)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADI 350 00 I/O base.

General Specifications

General Specifications

Module type	32 discrete inputs in 2 groups (16 inputs per group)
Supply voltage	24 VDC
Supply voltage range	20...30 VDC
Supply current consumption	max. 250 mA at 24 VDC
Power dissipation	6 W + (# of input points on x .144 W)
I/O map	2 input word

Isolation

Isolation

Input to input	none
Field to communication adapter	Defined by Communication Adapter type

Fuses

Fuses

Internal	none
External: operating voltage	315 mA fast-blow (Wickmann193031500 mA or 194031500 mA or equivalent)
External: input voltage	According to the supply of the connected sensors– not to exceed 4A fast-blow

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 500V
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1 Div.2 pending

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3in) two busbars 171.5 mm (6.75in) three busbars
Weight	200 g (0.44 lb)

Discrete Inputs

Specifications for discrete inputs

Number of points	32
Number of groups	2
Points per group	16
Signal type	True High
IEC 1131 type	1+ (See Appendix *IEC 1131 Input Types, p. 581* for definitions of IEC input types.)
ON voltage	+11 ... +30 VDC
OFF voltage	-3 ... +5 VDC
Input current	2.5 mA minimum ON(6 mA at 24 VDC 1.2 mA maximum OFF
Input voltage range	-3 ... +30 VDC
Input resistance	4 kOhm
Response time	2.2 ms OFF to ON 3.3 ms ON to OFF

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional busbar.

Illustration

Rows 1 through 3 show the internal connections between terminals on the I/O base. Row 4 through 6 show the internal connections on the optional busbar.

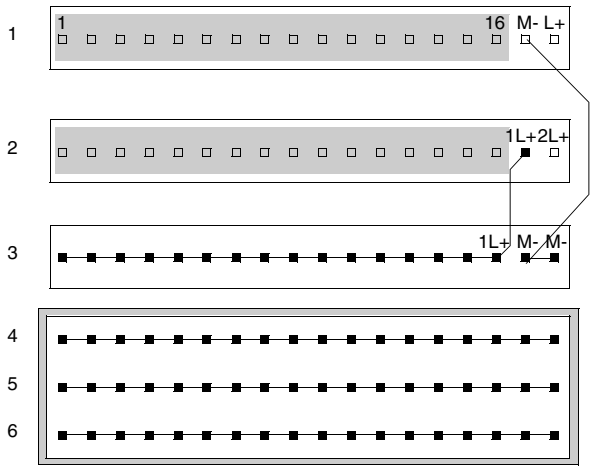

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-, 2-, or 3-row busbar. The following busbars are available from Schneider Automation:

Type	Number of Rows	Part Number
Screw-in	1 - row	170 XTS 006 01
	2 - row	170 XTS 005 01
	3 - row	170 XTS 004 01
Spring-clip	1 - row	170 XTS 007 01
	2 - row	170 XTS 008 01
	3 - row	170 XTS 003 01

Mapping Terminal Blocks

The following table shows mapping terminal blocks and optional busbars

Row	Terminal	Function
1	1...16	Inputs for group 1
	17	Return (M-)
	18	+ 24 VDC Operating voltage (L+)
2	1 ... 16	Inputs for group 2
	17/18	+ 24 VDC for input group 1 (1L+) and group 2 (2L+)
3	1 ... 16	Input voltage for inputs 1 ... 16
	17/18	Return (M-)
4	1 ... 18	Input voltage for inputs 17 ... 32
5	1 ... 18	Return (M-)
6	1 ... 18	Return (M-) or Protective earth (PE)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section contains a diagram to assist you in wiring the following types of devices:

- 2-wire configuration
- 3-wire configuration

2-Wire Devices


The diagram below shows an example of wiring for two-wire devices. This example uses an input from one group of input points. If you feed inputs using points from both input groups, you will need a busbar.

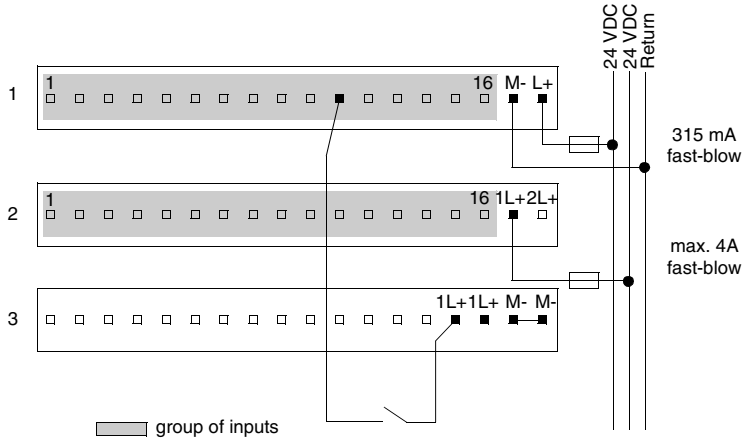

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


3-Wire Devices

The diagram below shows an example of wiring for 3-wire devices.

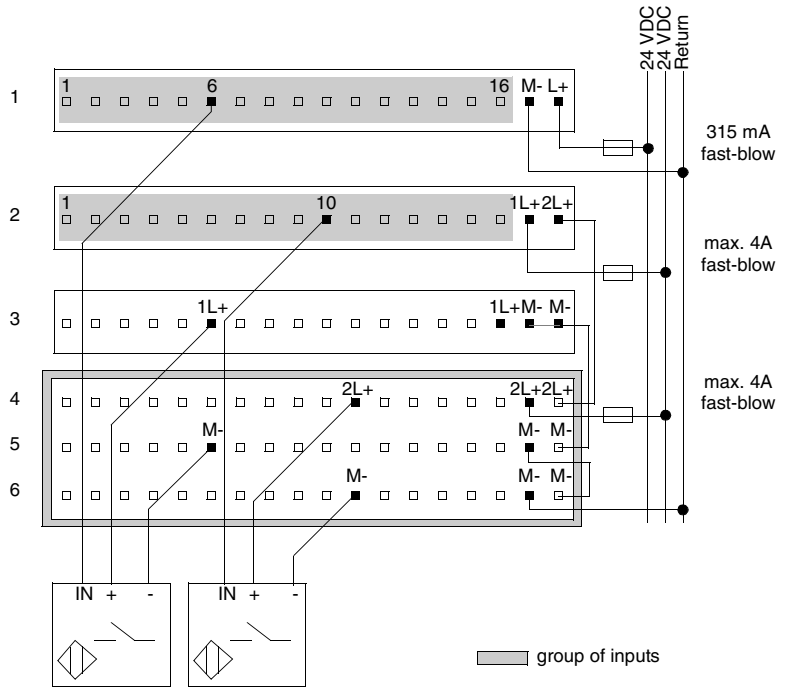

Simplified Schematics

The following diagram shows the field-side input circuitry.

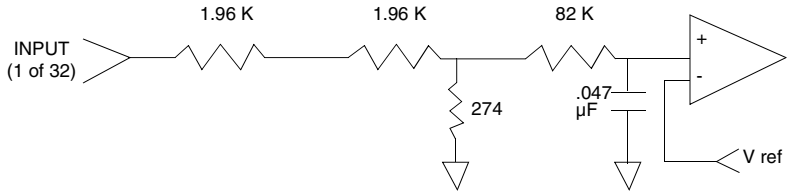

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADI 350 00 TSX Momentum I/O base supports 32 discrete inputs. This section contains information about the mapping of the I/O data into input words.

I/O Map

The I/O base may be mapped as two 16-bit input words, or as 32 discrete input points.

IEC vs. Ladder Logic


In order to correctly field wire the inputs and map the input data, you need to know which type of Momentum Adapter is mounted on the base. Adapters may be either IEC compliant or 984 Ladder Logic compliant:

	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Data Mapping


The figure below shows how data is mapped on the I/O base with an IEC Compliant adapter. When the I/O is mapped as discrete points (1x), the MSB is assigned to Pin 1 and the LSB is assigned to Pin 16. When the I/O is mapped as a word or register (3x), the MSB (bit 15) is assigned to Pin 16 and the LSB (bit 0) is assigned to Pin 1.

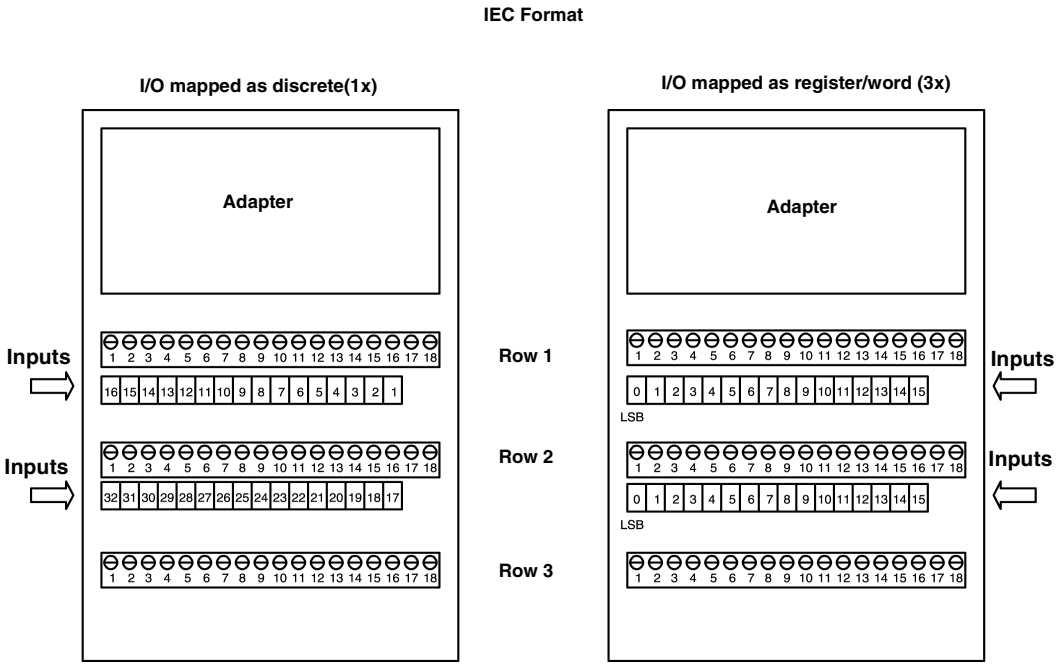

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped on the I/O base with a 984 Ladder Logic Compliant adapter. When the I/O is mapped as discrete points (1x), the MSB is assigned to Pin 16 and the LSB is assigned to Pin 1. When the I/O is mapped as a word or register (3x), the MSB (bit15) is assigned to Pin 1 and the LSB (bit 0) is assigned to Pin 16.

984 Format

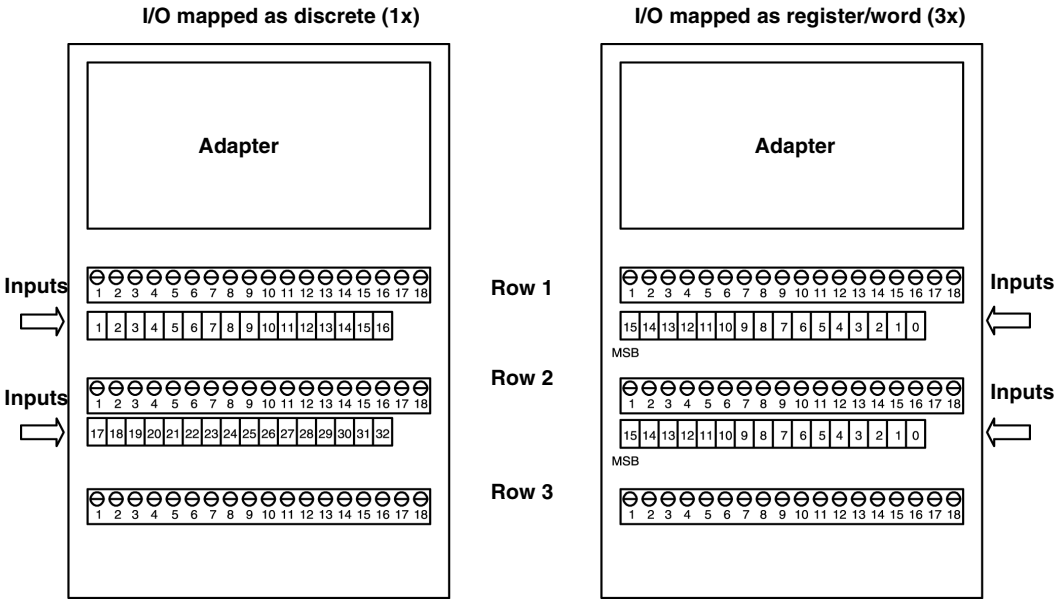

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADI 540 50 120 VAC - 16 Point Discrete Input Module Base

13

Overview

Purpose

This chapter describes the 170 ADI 540 50 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	180
Specifications	182
Internal Pin Connections	185
Field Wiring Guidelines	186
Wiring Diagrams	187
I/O Mapping	189

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 ADI 540 50 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below

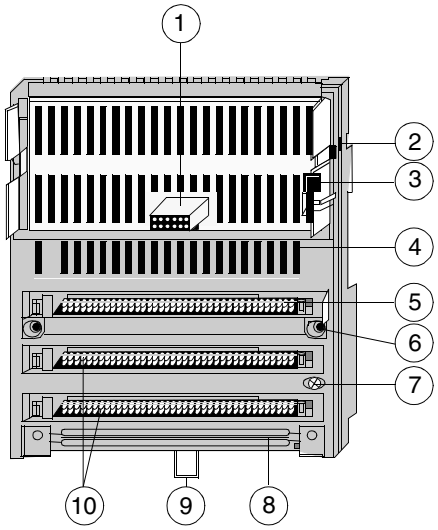


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking tab for the adapter
3	Ground contact for the adapter
4	LED status display
5	Module power and field inputs
6	Mounting holes for panel mount
7	Grounding screw
8	Busbar Mounting Slot
9	Locking tab for DIN rail mount
10	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

The LEDs are shown in the illustration below.

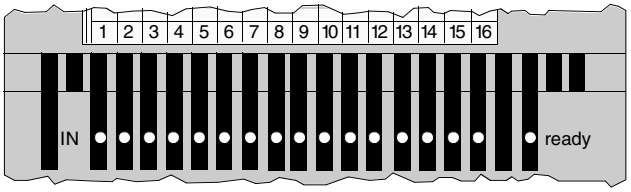

LED Descriptions

The LEDs are described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate on network
	Off	Module not ready to communicate
Upper row IN 1 ... 16	Green	Input status (an LED per input); input point active, i.e. input carries a 1 signal (logically ON)
	Off	Input status (an LED per input); input point inactive, i.e. input carries a 0 signal (logically OFF)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADI 540 50 I/O base.

General Specifications

General Specifications

Module type	16 discrete inputs in 2 groups
Supply voltage	120 VAC
Supply voltage range	85 ... 132 VAC RMS @ 47 ... 63 Hz
Supply current consumption	125 mA at 120 VAC
Power dissipation	4 W + (# of input points on x .62 W)
I/O map	1 input word

Isolation

Isolation

Input to input	none
Group to Group	1780 VAC
Field to communication adapter	1780 VAC

Fuses

Fuses

Internal (non-replaceable	200 mA slow-blow
External (module power)	200 mA slow-blow (Wickmann 19502000 mA or equivalent)

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 2 kV
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE FM Class 1,Div. 2

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	52 mm (2.05 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3in) two busbars 171.5 mm (6.75in) three busbars
Weight	284 g (10 oz)


Discrete Inputs

Specifications for discrete inputs

Number of points	16
Number of groups	2
Points per group	8
Signal type	True High
Input current	10 mA minimum ON 2 mA maximum OFF
Input resistance (nominal)	9.5 kOhm @ 50 7.5 kOhm @ 60
Switching level	74 VAC minimum ON 20 VAC minimum OFF
Response time	35 ms @ 60 Hz ON to OFF 10 ms @ 60 Hz OFF to ONF

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Derating Curve The diagram below depicts the derating curve for this I/O base.

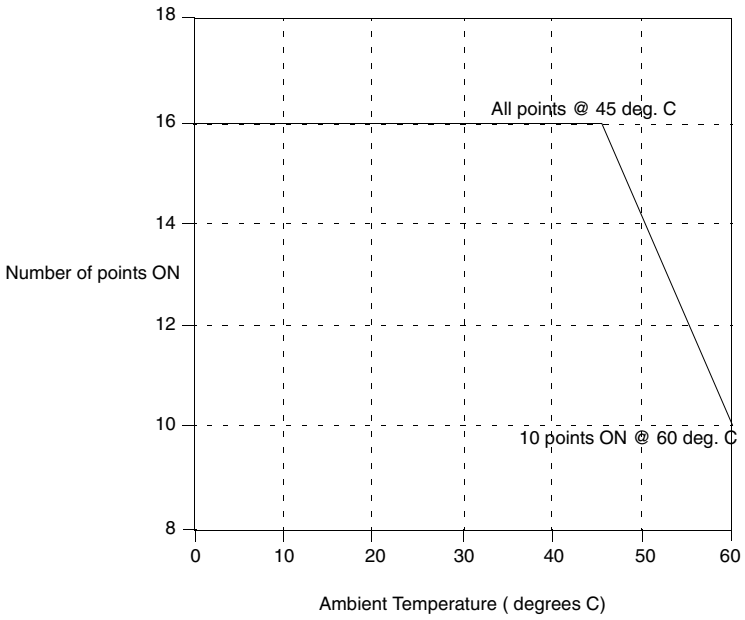

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base.

Illustration

The following illustration shows the internal connections between terminals.

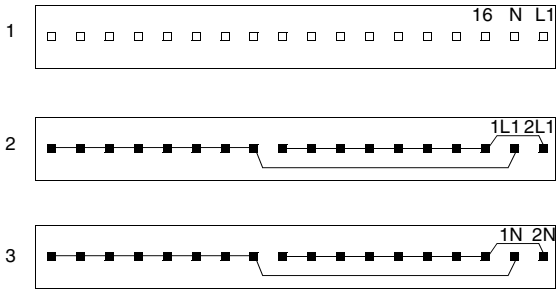

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

Inputs are field wired to row 1 of the base. This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Mapping Terminal Blocks

The following table shows mapping terminal blocks.

Row	Terminal	Function
1	1...16	Inputs
	17	Neutral - 120 VAC for module (N)
	18	Line - 120 VAC for module (L1)
2	1 ... 8	Input group 1 - line (1L1)
	9 ... 16	Input group 2 - line (2L1)
	17	Line for inputs group 1 (1L1)
	18	Line for inputs group 2 (2L1)
3	1 ... 8	Input group 1 - neutral (1N)
	9 ... 16	Input group 2 - neutral (2N)
	17	Neutral for inputs group 1 (1N)
	18	Neutral for inputs group 2 (2N1)



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section contains diagrams to assist you in wiring the following types of devices:

- 2-wire configuration
- 3-wire configuration

2-Wire Devices


The diagram below shows an example of wiring for 2-wire devices.

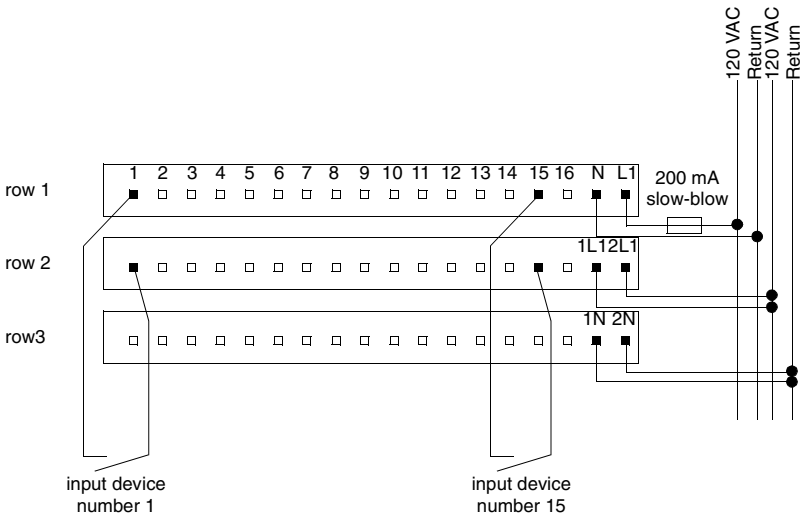

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


3-Wire Devices

The diagram below shows an example of wiring for 3-wire devices.

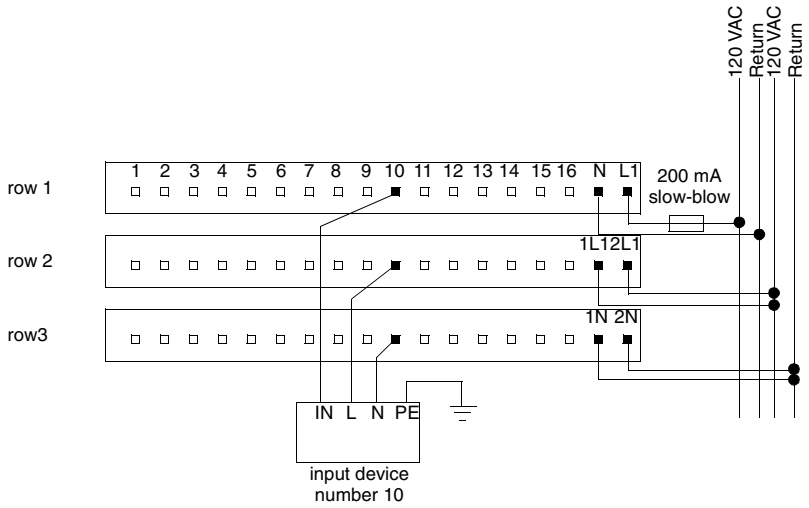

Simplified Schematics

The following diagram shows the field-side input circuitry.

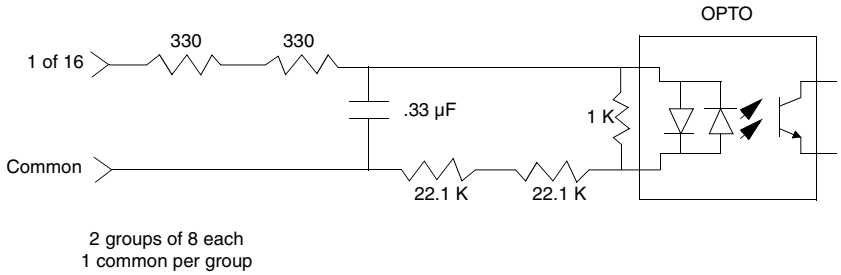

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADI 540 50 TSX Momentum I/O base supports 16 discrete inputs. This section contains information about the mapping of the I/O data into input words.

I/O Map

The I/O base may be mapped as one input word, or as 16 discrete input points

IEC vs. Ladder Logic

In order to correctly field wire the inputs and map the input data, you need to know which type of Momentum Adapter is mounted on the base. Adapters may be either IEC compliant or 984 Ladder Logic compliant.


	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Data Mapping

The figure below shows how data is mapped on the I/O base with an IEC Compliant adapter. When the I/O is mapped as discrete points (1x), the MSB is assigned to Pin 1 and the LSB is assigned to Pin 16. When the I/O is mapped as a word or register (3x), the MSB (bit 15) is assigned to Pin 16 and the LSB (bit 0) is assigned to Pin 1.


IEC Format

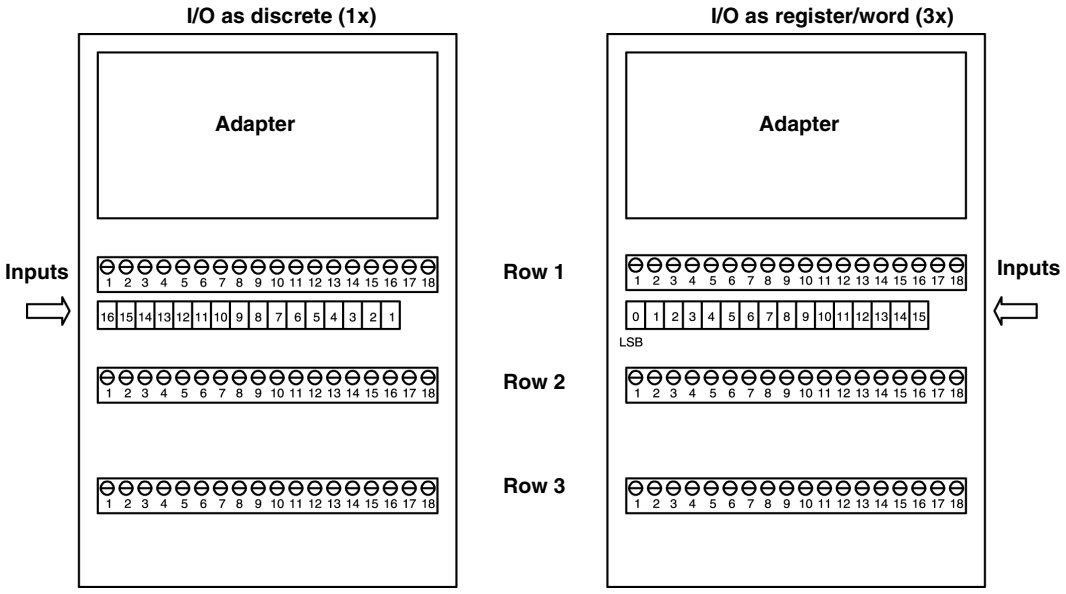

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped on the I/O base with a 984 Ladder Logic Compliant adapter. When the I/O is mapped as discrete points (1x), the MSB is assigned to Pin 16 and the LSB is assigned to Pin 1. When the I/O is mapped as a word or register (3x), the MSB (bit 15) is assigned to Pin 1 and the LSB (bit 0) is assigned to Pin 16.

984 Format

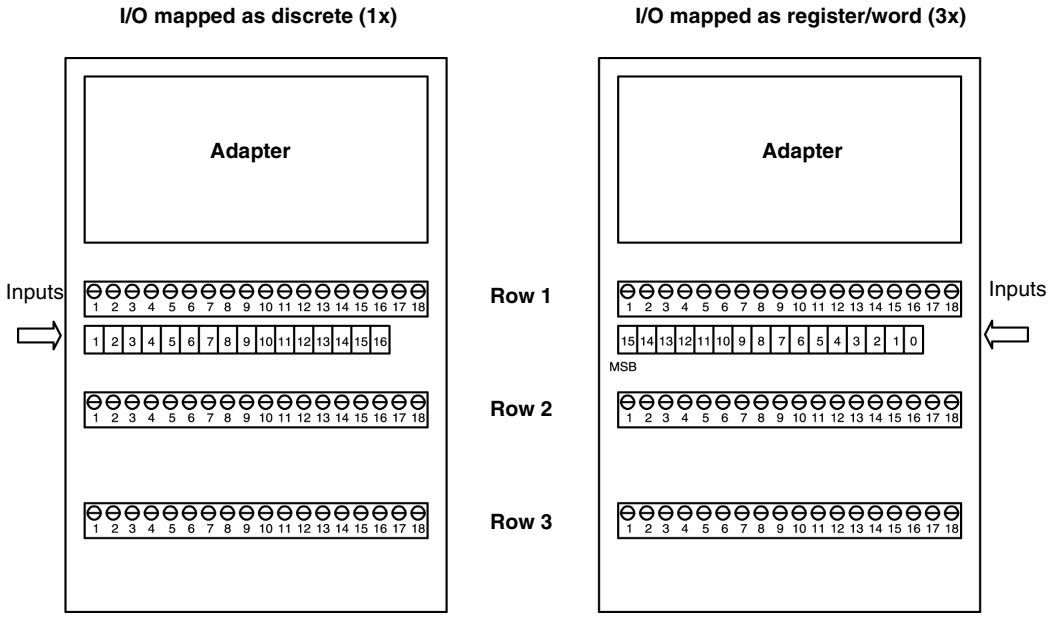

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADI 740 50 230 VAC - 16 Point Discrete Input Module Base

14

Overview

Purpose

This chapter describes the 170 ADI 740 50 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	194
Specifications	196
Internal Pin Connections	199
Field Wiring Guidelines	200
Wiring Diagrams	201
I/O Mapping	203

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 ADI 740 50 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below

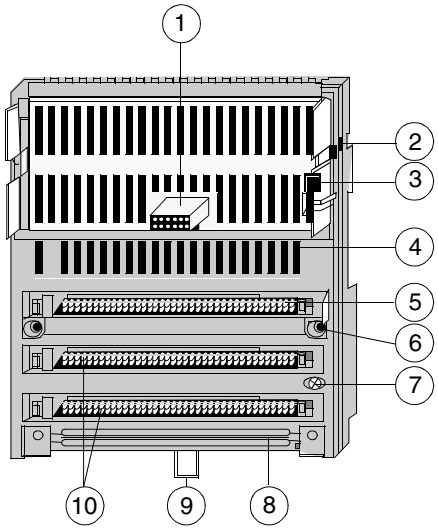


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking tab for the adapter
3	Ground contact for the adapter
4	LED status display
5	Module power and field inputs
6	Mounting holes for panel mount
7	Grounding screw
8	Busbar Mounting Slot
9	Locking tab for DIN rail mount
10	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

The LEDs are shown in the illustration below.

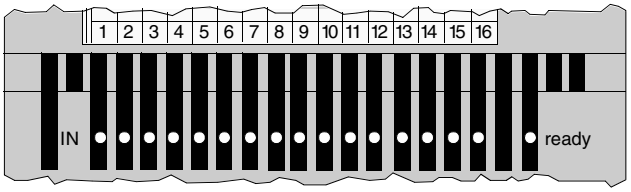

LED Descriptions

The LEDs are described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate on network
	Off	Module not ready to communicate
Upper row IN 1 ... 16	Green	Input status (an LED per input); input point active, i.e. input carries a 1 signal (logically ON)
	Off	Input status (an LED per input); input point inactive, i.e. input carries a 0 signal (logically OFF)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADI 740 50 I/O base.

General Specifications

General Specifications

Module type	16 discrete inputs in 2 groups
Supply voltage	230 VAC
Supply voltage range	164 - 253 VAC RMS @ 47 ... 63 Hz
Supply current consumption	50 mA at 230 VAC
Power dissipation	4 W + (# of input points on x .62 W)
I/O map	1 input word

Isolation

Isolation

Input to input	none
Group to Group	1780 VAC
Field to communication adapter	1780 VAC

Fuses

Fuses

Internal (non-replaceable	200 mA slow-blow
External (module power)	200 mA slow-blow (Wickmann 195020000 mA or equivalent)

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 2 kV
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE FM Class 1,Div.2 pending

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	52 mm (2.05 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3in) two busbars 171.5 mm (6.75in) three busbars
Weight	284 g (10 oz)


Discrete Inputs

Specifications for discrete inputs

Number of points	16
Number of groups	2
Points per group	8
Signal type	True High
Input current	10 mA minimum ON 2 mA maximum OFF
Input resistance (nominal)	9.5 kOhm @ 50 Hz 7.5 kOhm @ 60 Hz
Switching level	164 VAC minimum ON 40 VAC minimum OFF
Response time	13.3 ms @ 60 Hz ON to OFF 13.0 ms @ 60 Hz OFF to ONF

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Derating Curve The diagram below depicts the derating curve for this I/O base.

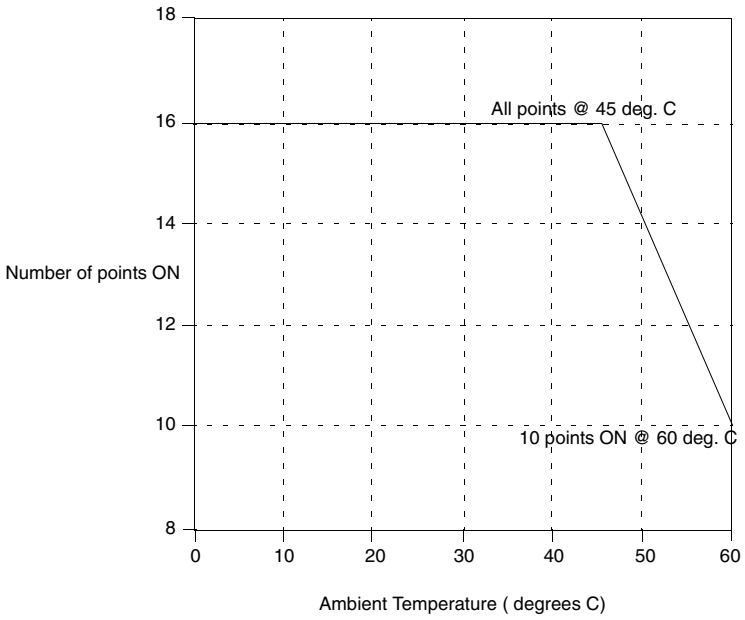

At 60 degrees C and maximum input voltage, the number of points allowed ON is 10.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base.

Illustration

The following illustration shows the internal connections between terminals.

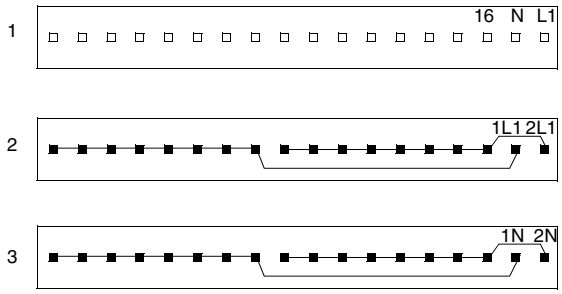

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

Inputs are field wired to row 1 of the base. This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Mapping Terminal Blocks

The following table shows mapping terminal blocks.

Row	Terminal	Function
1	1...16	Inputs
	17	Neutral - 230 VAC for module (N)
	18	Line - 230 VAC for module (L1)
2	1 ... 8	Input group 1 - line (1L1)
	9 ... 16	Input group 2 - line (2L1)
	17	Line for inputs group 1 (1L1)
	18	Line for inputs group 2 (2L1)
3	1 ... 8	Input group 1 - neutral (1N)
	9 ... 16	Input group 2 - neutral (2N)
	17	Neutral for inputs group 1 (1N)
	18	Neutral for inputs group 2 (2N1)



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section contains diagrams to assist you in wiring the following types of devices:

- 2-wire configuration
- 3-wire configuration

2-Wire Devices


The diagram below shows an example of wiring for 2-wire devices.

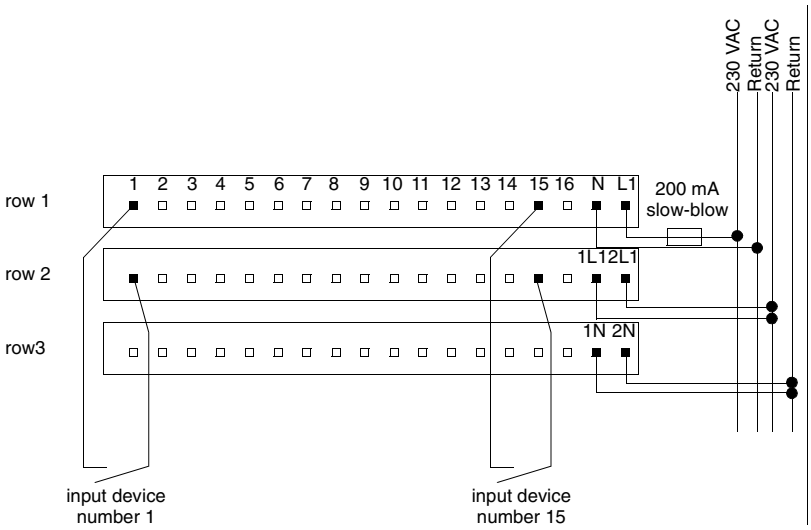

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


3-Wire Devices

The diagram below shows an example of wiring for 3-wire devices.

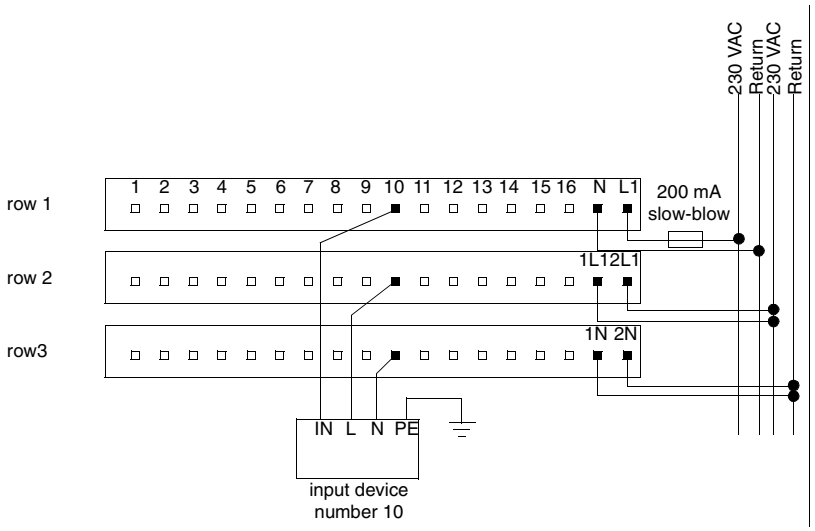

Simplified Schematics

The following diagram shows the field-side input circuitry.

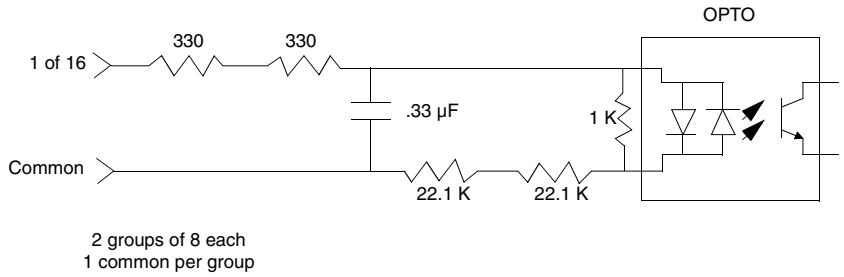

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADI 740 50 TSX Momentum I/O base supports 16 discrete inputs. This section contains information about the mapping of the I/O data into input words.

I/O Map

The I/O base may be mapped as one input word, or as 16 discrete input points.

IEC vs. Ladder Logic


In order to correctly field wire the inputs and map the input data, you need to know which type of Momentum Adapter is mounted on the base. Adapters may be either IEC compliant or 984 Ladder Logic compliant.

	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Data Mapping

The figure below shows how data is mapped on the I/O base with an IEC Compliant adapter. When the I/O is mapped as discrete ponts (1x) the MSB is assigned to Pin 1 and the LSB is assigned to Pin 16. When the I/O is mapped as a word or register (3x), the MSB (bit 15) is assigned to Pin 16 and the LSB (bit 0) is assigned to Pin 1.

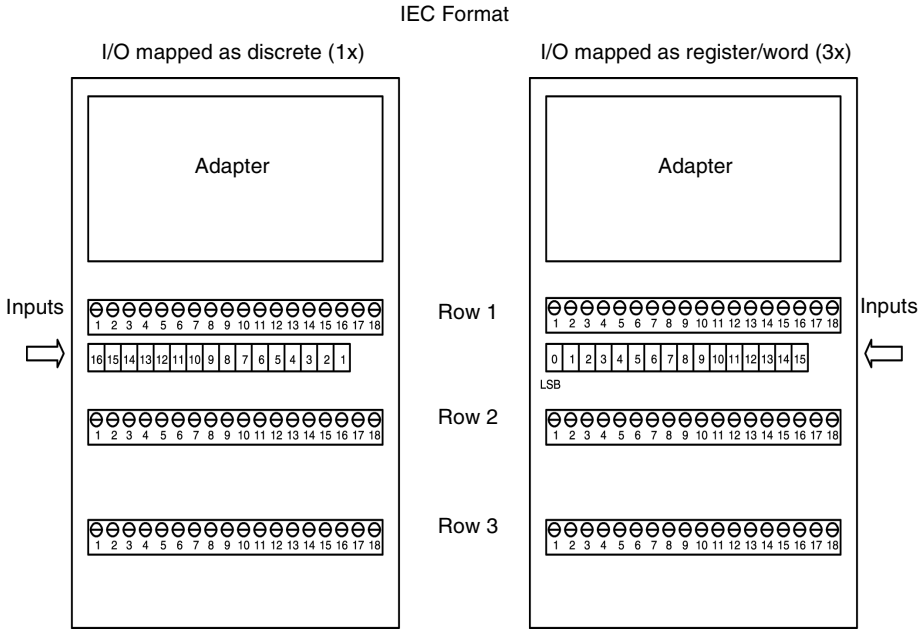

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped on the I/O base with a 984 Ladder Logic Compliant adapter. When the I/O is mapped as discrete points (1x) the MSB is assigned to Pin 16 and the LSB is assigned to Pin 1. When the I/O is mapped as a word or register (3x), the MSB (bit 15) is assigned to Pin 1 and the LSB (bit 0) is assigned to Pin 16.

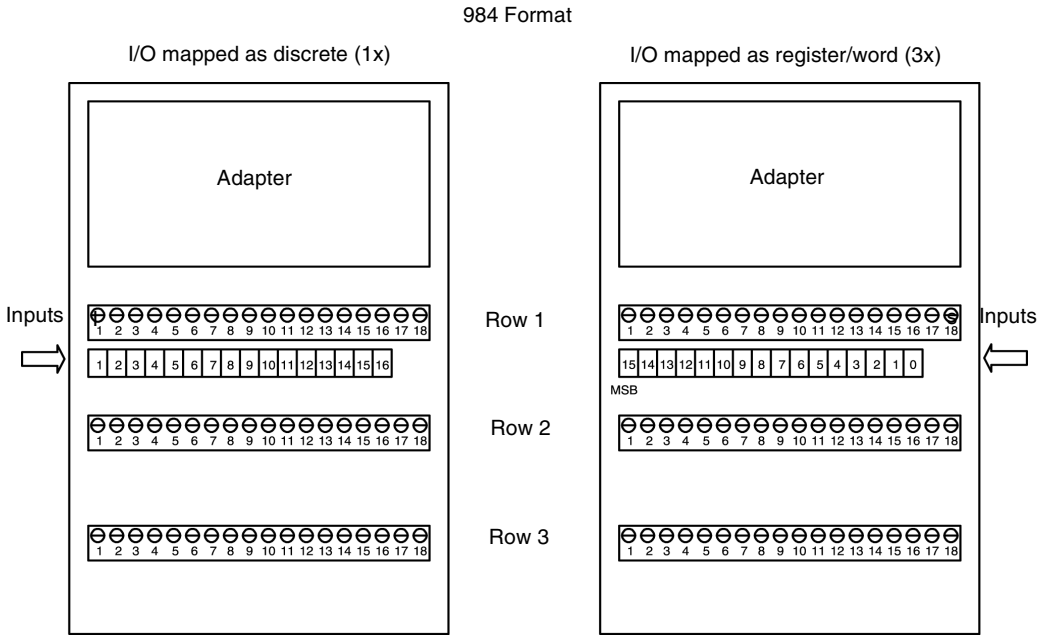

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADM 350 10 24 VDC - 16 Pt. In / 16 Pt. Out Module Base

15

Overview

Purpose

This chapter describes the 170ADM 350 10 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	208
Specifications	210
Internal Pin Connections	213
Field Wiring Guidelines	214
Wiring Diagrams	216
I/O Mapping	221

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 ADI 350 10 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below

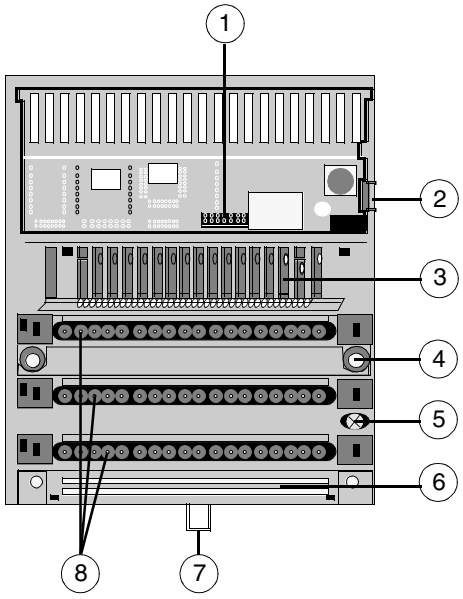


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Mounting holes for panel mount
5	Grounding screw
6	Busbar Mounting Slot
7	Locking tab for DIN rail mount
8	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

The LEDs are shown in the illustration below.

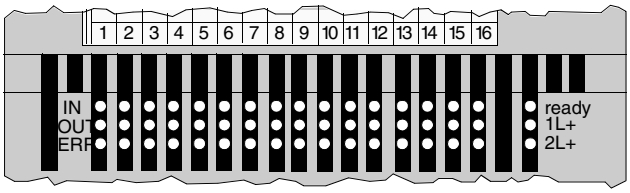

LED Descriptions

The LEDs are described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate. Operating voltage for internal logic (5 V) is present.
	Off	Module not ready.
1L+	Green	Output voltage 1L+ of inputs 1 ... 8 (group 1) is present
	Off	Output voltage of inputs 1 ... 8 (group 1) is not present
2L+	Green	Output voltage 2L+ of inputs 9 ... 16 (group 2) is present
	Off	Output voltage of inputs 9 ... 16 (group 2) is not present
Upper row IN 1...16	Green	Input status (an LED per input); Input point active, ie. input carries a 1 signal (logically ON)
	Off	Input point inactive, ie. input carries a 0 signal (logically OFF)
Middle row OUT 1...16	Green	Output status (an LED per output); Output point active, ie. output carries a 1 signal (logically ON)
	Off	Output point inactive, ie. Output carries a 0 signal (logically OFF)
Lower row ERR 1...16	Red	Output overload (an LED per output). Short circuit or overload on the corresponding output.
	Off	Outputs 1 ... 16 operating normally.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADM 350 10 I/O base.

General Specifications

General Specifications

Module type	16 discrete inputs in 1 group 16 discrete outputs in 2 groups (8 pts/group)
Supply voltage	24 VDC
Supply voltage range	20...30 VDC
Supply current consumption	max. 250 mA at 24 VDC
Power dissipation	6 W + ((# of input points on x .144 W) + (# of output points on x .25 W))
I/O map	1 input word 1 output word

Isolation

Isolation

Input to input	none
Output group to output group	none
Input to output group	none
Field to communication adapter	Defined by Communication Adapter type

Fuses

Fuses

Internal	none
External: operating voltage	315 mA fast-blow (Wickmann 19193-315 mA or 19194-315 mA or equivalent)
External: input voltage	According to the supply of the connected sensors– not to exceed 4A fast-blow
External: output voltage	According to the supply of the connected actuators– not to exceed 4 A fast-blow/ group

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 2 kV
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1, Div. 2 pending

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3in) two busbars 171.5 mm (6.75in) three busbars
Weight	200 g (0.44 lb)

Discrete Inputs

Specifications for discrete inputs

Number of points	16
Number of groups	1
Points per group	16
Signal type	True High
IEC 1131 type	1+ (See Appendix *IEC 1131 Input Types, p. 581* for definitions of IEC input types.)
ON voltage	+11 ... +30 VDC
OFF voltage	-3 ... +5 VDC
Input current	10.0 mA minimum ON 2.0 mA maximum OFF
Input voltage range	-3 ... +30 VDC
Input resistance	4 kOhm
Response time	2.2 ms OFF to ON 3.3 ms ON to OFF

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete Outputs Specifications for discrete outputs

Output type	Solid state switch
Output supply voltage	24 VDC
Output supply voltage range	20 ... 30 VDC
Output voltage	External supply - .5 VDC
Number of points	16
Number of groups	2
Points per group	8
Current capacity	0.5 A/point maximum 4 A/group 8 A/module
Signal type	True High
Leakage current (output out)	< 1 mA @ 24 VDC
Surge (inrush) current	5 A for 1 ms
On state voltage drop	< 0.5 VDC @ 0.5 A
Fault sensing (See Note Below)	Outputs are electronically safeguarded to assist in short circuit and overload protection
Fault reporting	1 red LED/point (row 3) ON when short current/ overload occurs
Error indication	Output overload for at least one out put (I/O-Error) to communication adapter
Response time (resistive load / 0.5 A)	< 0.1 ms OFF to ON < 0.1 ms ON to OFF
Maximum switching cycles	1000/h for 0.5 A inductive load 100/s for 0.5 A resistive load 8/s for 1.2 W Tungsten load

Note: Discrete 24 VDC outputs incorporate thermal shutdown and overload protection. The output current of a shortened output is limited to a nondestructive value. The short circuit heats the output driver and the output will switch off. The output will switch on again if the driver leaves the overtemperature condition. If the short circuit still exists, the driver will reach the overtemperature condition again and will switch off again.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional busbar.

Illustration

Rows 1 through 3 show the internal connections between terminals on the I/O base. Row 4 through 6 show the internal connections on the optional busbar.

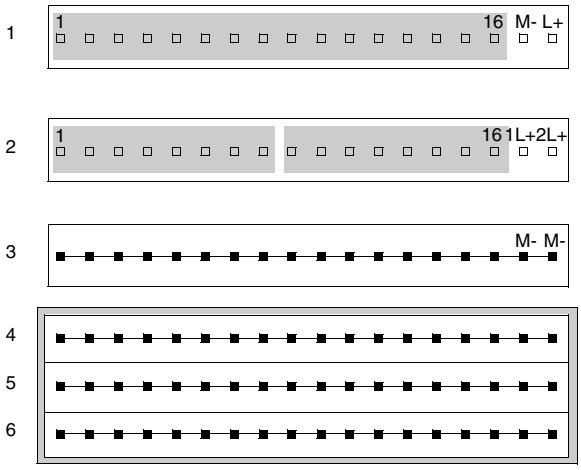

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

Inputs are field wired to row 1 of the base. The outputs are field wired to row 2. This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-, 2-, or 3-row busbar. The following busbars are available from Schneider Automation.

Type	Number of Rows	Part Number
Screw-in	1 - row	170 XTS 006 01
	2 - row	170 XTS 005 01
	3 - row	170 XTS 004 01
Spring-clip	1 - row	170 XTS 007 01
	2 - row	170 XTS 008 01
	3 - row	170 XTS 003 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mapping Terminal Blocks

The folowing table shows mapping terminal blocks and optional busbars.

Row	Terminal	Function
1	1...16	Inputs
	17	Return (M-)
	18	+ 24 VDC Operating voltage (L+)
2	1 ... 8	Outputs for group 1
	9 ... 16	Outputs for group 2
	17/18	+ 24 VDC for output group 1 (1L+) and group 2 (2L+)
3	1 ... 16	Return for outputs
	17/18	Return (M-)
4	1 ... 18	Input voltage for inputs I1 ... I16 or PE
5	1 ... 18	Return (M-)
6	1 ... 18	Protective earth (PE)



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Protective Circuit May Be Required

When contacted switches are used on the input lines or when lines to the peripherals are very long, the outputs of inductive loads require protective circuitry with a clamping/suppressor diode. Install the protective circuit prallel to the operating coil.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section provides diagrams to assist you in wiring the following types of devices:

- 2-wire devices
- Sensors activated by an output
- 4-wire sensors with a 2-wire actuator
- Broken wire detection

2-Wire Devices


The diagram below shows an example of wiring for two-wire devices. Separate connections to pins 17 and 18 are shown on row 3, even though these two pins are internally connected. This is done to halve the load.

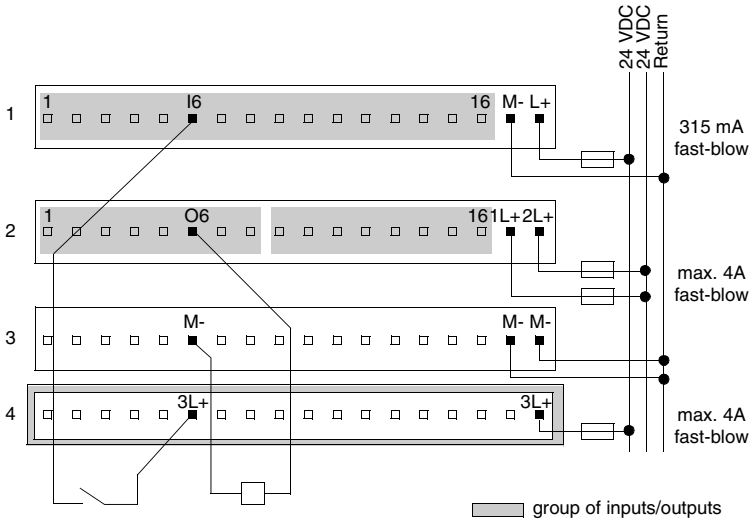

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Sensor Activated by Output


The wiring diagram below shows an example of a sensor activated by an output. The diagram shows the sensors being supplied with voltage only when the outputs on pins 6 and 14, row 2, are high. The inputs from pins 6 and 14, row 1, can be high only when one of the associated outputs is high.
Separate connections to pins 17 and 18 are shown on row 3, even though these two pins are internally connected. This is done to halve the load.

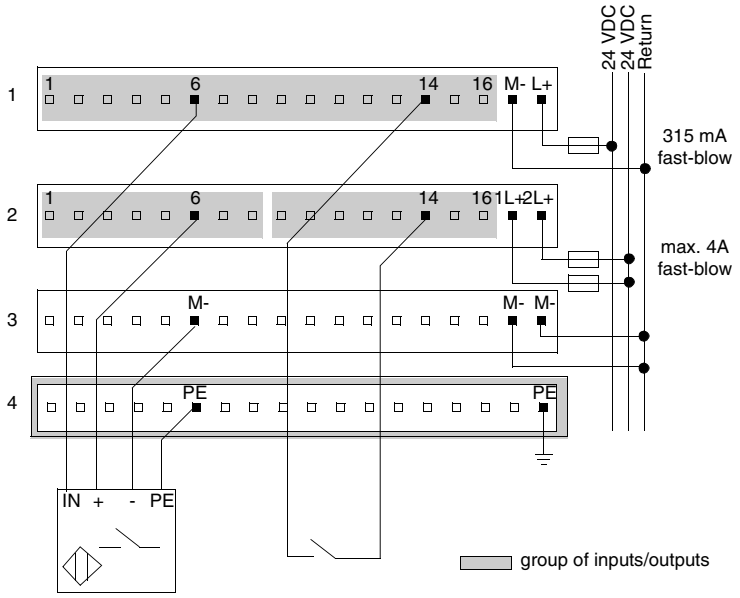

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Four-Wire Sensor with a Two-Wire Actuator


The diagram below shows a four-wire sensor with a two-wire actuator. The process of wiring a 3-wire sensor is very similar to the one below. Because 3-wire sensors do not require PE, a 2-row busbar could be used instead of the 3-row busbar shown. Separate connections to pins 17 and 18 are shown on row 3, even though these two pins are internally connected. This is done to halve the load.

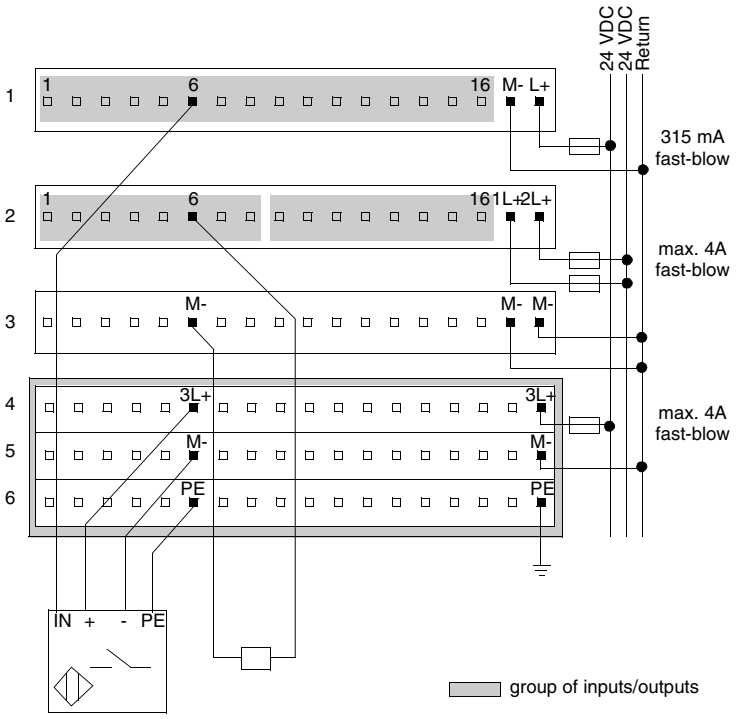

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Broken Wire Detection

The diagram below shows a three-wire actuator with an optional wiring scheme for broken wire detection. The dotted line reads back whether or not current has reached the actuator. When the output on pin 6, row 2, is high, the input from pin 6, row 1, must also be high.
Separate connections to pins 17 and 18 are shown on row 3, even though these two pins are internally connected. This is done to halve the load.

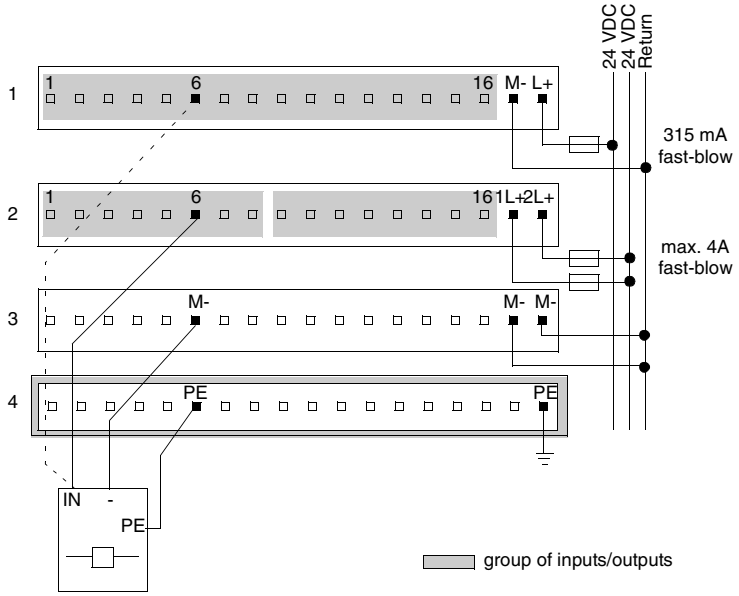

Simplified Input Schematics


The following diagram shows the field-side input circuitry.

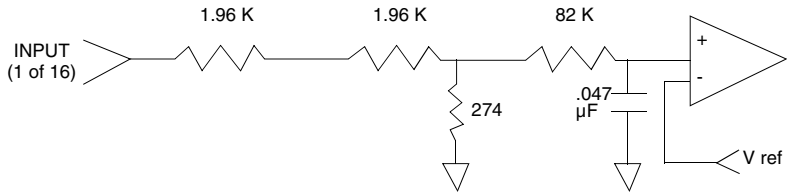

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Simplified Output Schematics

The following diagram shows the field-side output circuitry.

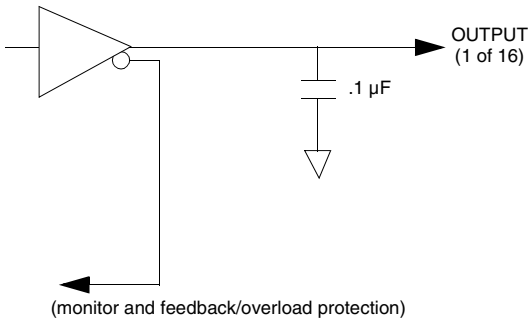

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADM 350 10 TSX Momentum I/O base supports 16 discrete inputs and 16 discrete outputs. This section contains information about the mapping of the I/O data into input words and output words.

I/O Map

The I/O base may be mapped as one input word and as one output word, or as 16 discrete input points and as 16 discrete output points.

IEC vs. Ladder Logic

In order to correctly field wire the inputs/outputs and map the input/outputs data, you need to know which type of Momentum Adapter is mounted on the base. Adapters may be either IEC compliant or 984 Ladder Logic compliant.


	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Data Mapping

The figure below shows how data is mapped on the I/O base with an IEC Compliant adapter. When the I/O is mapped as discrete points (1x/0x), the MSB is assigned to Pin 1 and the LSB is assigned to Pin 16. When the I/O is mapped as a word or register (3x/4x), the MSB (bit 15) is assigned to Pin 16 and the LSB (bit 0) is assigned to Pin 1.


IEC Format

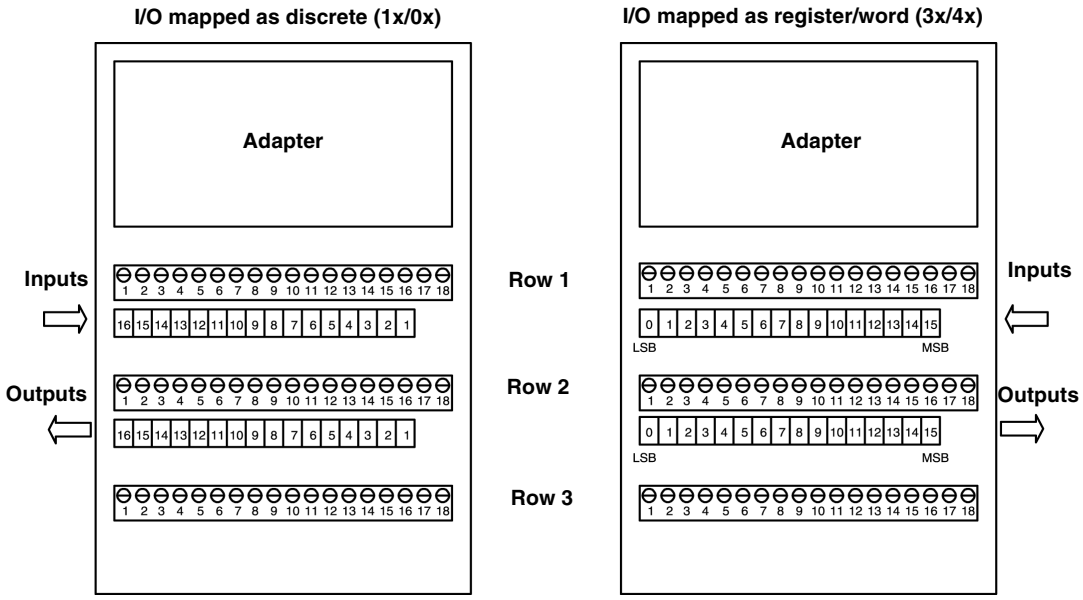

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped on the I/O base with a 984 Ladder Logic Compliant adapter. When the I/O is mapped as discrete points (1x/0x), the MSB is assigned to Pin 16 and the LSB is assigned to Pin 1. When the I/O is mapped as a word or register (3x/4x), the MSB (bit 15) is assigned to Pin 1 and the LSB (bit 0) is assigned to Pin 16.

984 Format

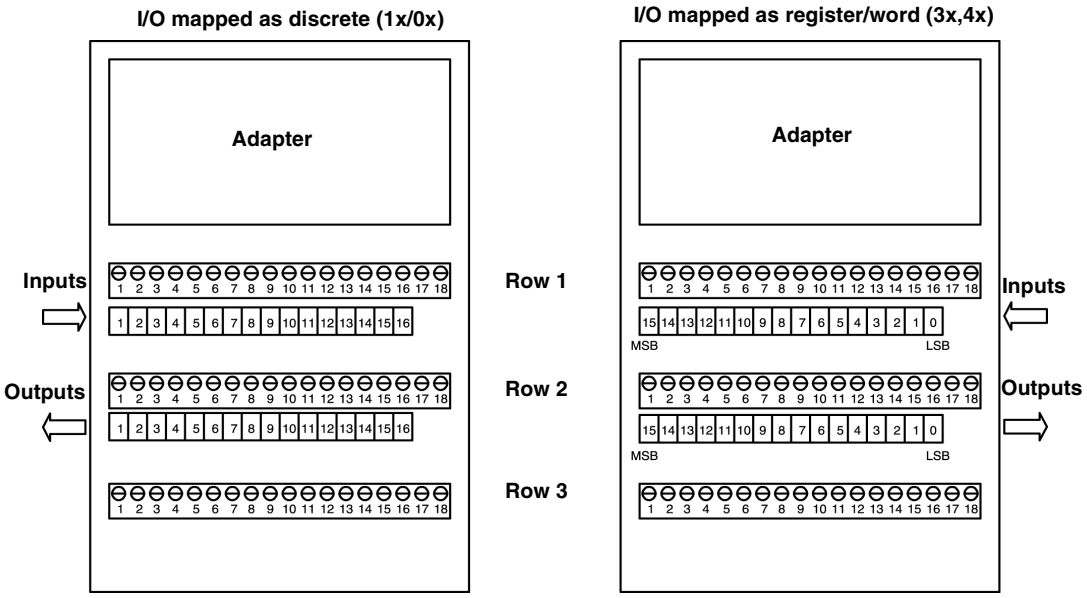

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADM 350 11 24 VDC - 16 Pt. In / 16 Pt. Out Module Base

16

Overview

Purpose

This chapter describes the 170 ADM 350 11 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	226
Specifications	228
Internal Pin Connections	231
Field Wiring Guidelines	232
Wiring Diagrams	234
I/O Mapping	239

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 ADI 350 11 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below

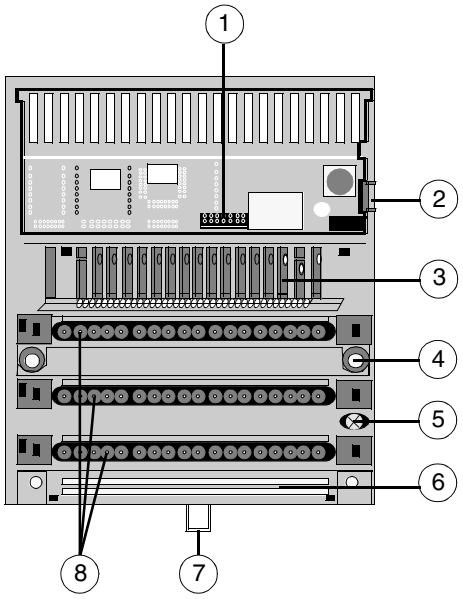


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Mounting holes for panel mount
5	Grounding screw
6	Busbar Mounting Slot
7	Locking tab for DIN rail mount
8	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

This I/O base has one LED, the ready indicator shown in the illustration below.

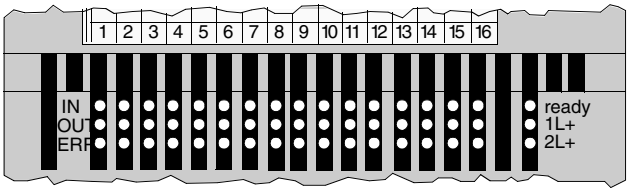

LED Descriptions

The ready indicator is described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate. Operating voltage for internal logic (5 V) is present.
	Off	Module not ready.
1L+	Green	Output voltage 1L+ of inputs 1 ... 8 (group 1) is present
	Off	Output voltage of inputs 1 ... 8 (group 1) is not present
2L+	Green	Output voltage 2L+ of inputs 9 ... 16 (group 2) is present
	Off	Output voltage of inputs 9 ... 16 (group 2) is not present
Upper row IN 1...16	Green	Input status (an LED per input); Input point active, ie. input carries a 1 signal (logically ON)
	Off	Input point inactive, ie. input carries a 0 signal (logically OFF)
Middle row OUT 1...16	Green	Output status (an LED per output); Output point active, ie. output carries a 1 signal (logically ON)
	Off	Output point inactive, ie. Output carries a 0 signal (logically OFF)
Lower row ERR 1...16	Red	Output overload (an LED per output). Short circuit or overload on the corresponding output.
	Off	Outputs 1 ... 16 operating normally.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADM 350 11 I/O base.

General Specifications

General Specifications

Module type	16 discrete inputs in 1 group 16 discrete outputs in 2 groups (8 pts/group)
Supply voltage	24 VDC
Supply voltage range	20...30 VDC
Supply current consumption	max. 250 mA at 24 VDC
Power dissipation	6 W + ((# of input points on x .144 W) + (# of output points on x .25 W))
I/O map	1 input word 1 output word

Isolation

Isolation

Input to input	none
Output group to output group	none
Input to output group	none
Field to communication adapter	Defined by Communication Adapter type

Fuses

Fuses

Internal	none
External: operating voltage	315 mA fast-blow (Wickmann 193031500 mA or 194031500 mA or equivalent)
External: input voltage	According to the supply of the connected sensors– not to exceed 4A fast-blow
External: output voltage	According to the supply of the connected actuators– not to exceed 4 A fast-blow/ group

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 500V
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1, Div. 2 pending

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3in) two busbars 171.5 mm (6.75in) three busbars
Weight	200 g (0.44 lb)

Discrete Inputs

Specifications for discrete inputs

Number of points	16
Number of groups	1
Points per group	16
Signal type	True High
IEC 1131 type	1+ (See Appendix *IEC 1131 Input Types, p. 581* for definitions of IEC input types.)
ON voltage	+11 ... +30 VDC
OFF voltage	-3 ... +5 VDC
Input current	2.5 mA minimum ON (6 mA at 24 VDC) 1.2 mA maximum OFF
Input voltage range	-3 ... +30 VDC
Input resistance	4 kOhm
Response time	60 microsec OFF to ON 80 microsec ON to OFF

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete Outputs Specifications for discrete outputs

Output type	Solid state switch
Output supply voltage	24 VDC
Output supply voltage range	20 ... 30 VDC
Output voltage	External supply - .5 VDC
Number of points	16
Number of groups	2
Points per group	8
Current capacity	0.5 A/point maximum 4 A/group 8 A/module
Signal type	True High
Leakage current (output out)	< 1 mA @ 24 VDC
Surge (inrush) current	5 A for 1 ms
On state voltage drop	< 0.5 VDC @ 0.5 A
Fault sensing (See Note Below)	Outputs are electronically safeguarded to assist in short circuit and overload protection
Fault reporting	1 red LED/point (row 3) ON when short current/ overload occurs
Error indication	Output overload for at least one out put (I/O-Error) to communication adapter
Response time (resistive load / 0.5 A)	< 0.1 ms OFF to ON < 0.1 ms ON to OFF
Maximum switching cycles	1000/h for 0.5 A inductive load 100/s for 0.5 A resistive load 8/s for 1.2 W Tungsten load

Note: Discrete 24 VDC outputs incorporate thermal shutdown and overload protection. The output current of a shortened output is limited to a nondestructive value. The short circuit heats the output driver and the output will switch off. The output will switch on again if the driver leaves the overtemperature condition. If the short circuit still exists, the driver will reach the overtemperature condition again and will switch off again.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional busbar.

Illustration

Rows 1 through 3 show the internal connections between terminals on the I/O base. Row 4 through 6 show the internal connections on the optional busbar.

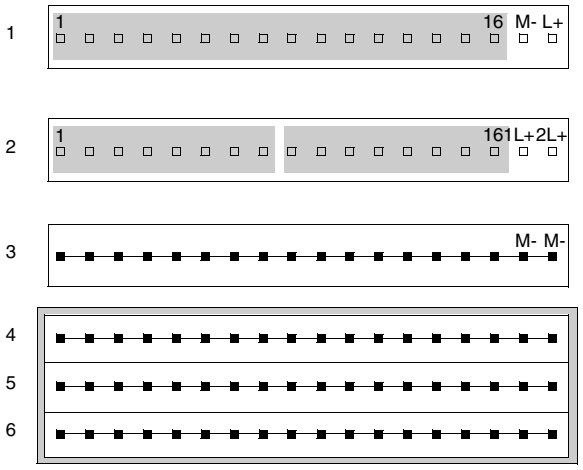

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

Inputs are field wired to row 1 of the base. The outputs are field wired to row 2. This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-, 2-, or 3-row busbar. The following busbars are available from Schneider Automation.

Type	Number of Rows	Part Number
Screw-in	1 - row	170 XTS 006 01
	2 - row	170 XTS 005 01
	3 - row	170 XTS 004 01
Spring-clip	1 - row	170 XTS 007 01
	2 - row	170 XTS 008 01
	3 - row	170 XTS 003 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mapping Terminal Blocks

The folowing table shows mapping terminal blocks and optional busbars.

Row	Terminal	Function
1	1...16	Inputs
	17	Return (M-)
	18	+ 24 VDC Operating voltage (L+)
2	1 ... 8	Outputs for group 1
	9 ... 16	Outputs for group 2
	17/18	+ 24 VDC for output group 1 (1L+) and group 2 (2L+)
3	1 ... 16	Return for outputs
	17/18	Return (M-)
4	1 ... 18	Input voltage for inputs I1 ... I16 or PE
5	1 ... 18	Return (M-)
6	1 ... 18	Protective earth (PE)



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Protective Circuit May Be Required

When contacted switches are used on the input lines or when lines to the peripherals are very long, the outputs of inductive loads require protective circuitry with a clamping/suppressor diode. Install the protective circuit prallel to the operating coil.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section provides diagrams to assist you in wiring the following types of devices:

- 2-wire devices
- Sensors activated by an output
- 4-wire sensors with a 2-wire actuator
- Broken wire detection

2-Wire Devices


The diagram below shows an example of wiring for two-wire devices. Separate connections to pins 17 and 18 are shown on row 3, even though these two pins are internally connected. This is done to halve the load.

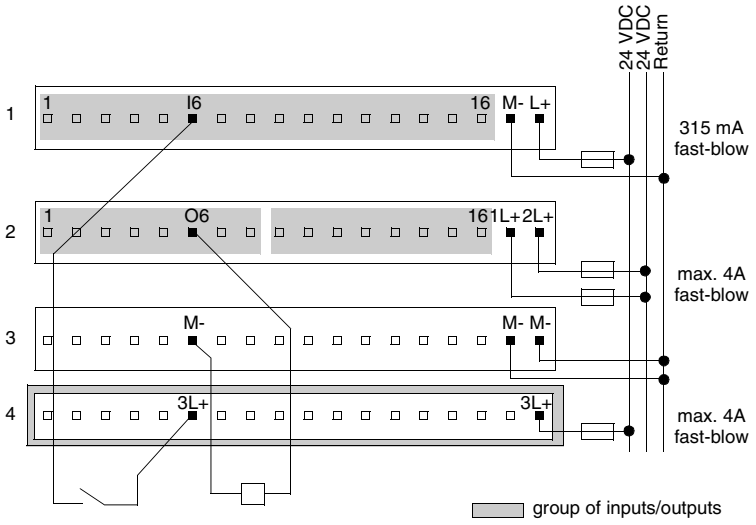

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Sensor Activated by Output


The wiring diagram below shows an example of a sensor activated by an output. The diagram shows the sensors being supplied with voltage only when the outputs on pins 6 and 14, row 2, are high. The inputs from pins 6 and 14, row 1, can be high only when one of the associated outputs is high.
Separate connections to pins 17 and 18 are shown on row 3, even though these two pins are internally connected. This is done to halve the load.

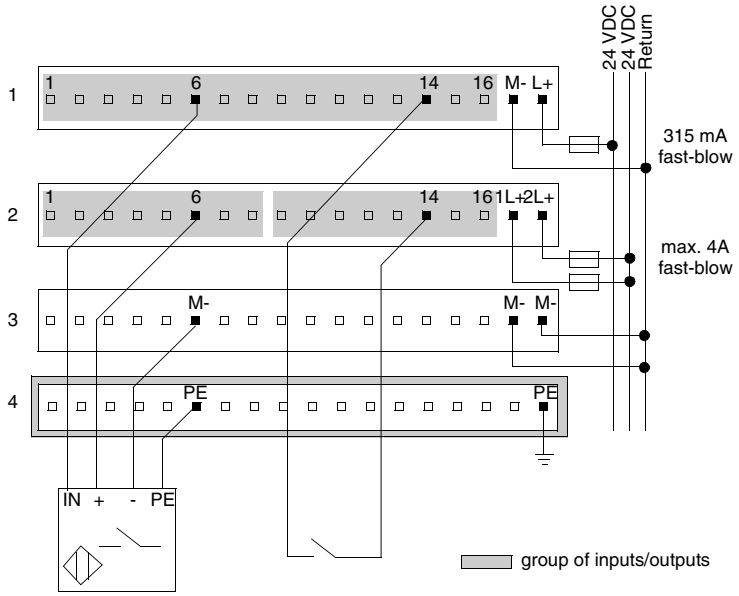

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Four-Wire Sensor with a Two-Wire Actuator


The diagram below shows a four-wire sensor with a two-wire actuator. The process of wiring a 3-wire sensor is very similar to the one below. Because 3-wire sensors do not require PE, a 2-row busbar could be used instead of the 3-row busbar shown. Separate connections to pins 17 and 18 are shown on row 3, even though these two pins are internally connected. This is done to halve the load.

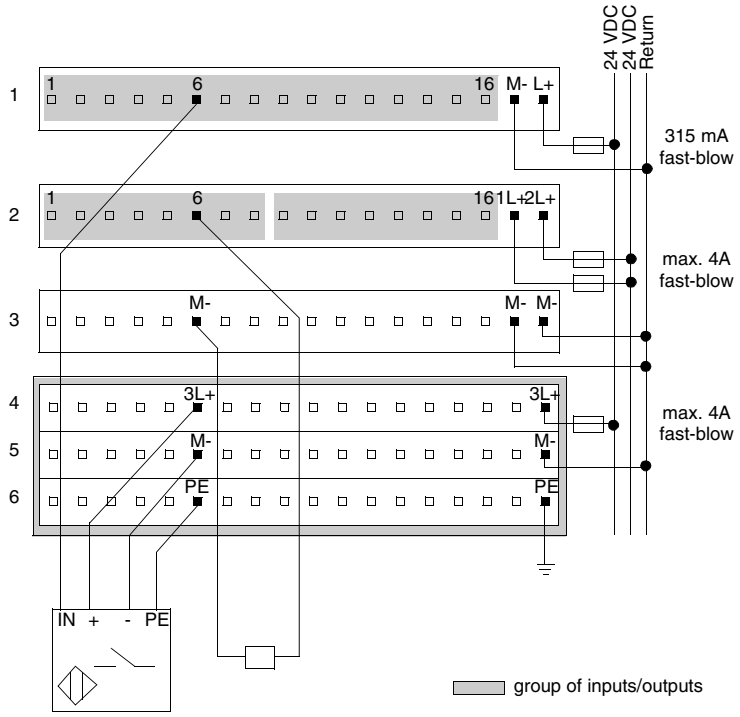

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Broken Wire Detection

The diagram below shows a three-wire actuator with an optional wiring scheme for broken wire detection. The dotted line reads back whether or not current has reached the actuator. When the output on pin 6, row 2, is high, the input from pin 6, row 1, must also be high.
Separate connections to pins 17 and 18 are shown on row 3, even though these two pins are internally connected. This is done to halve the load.

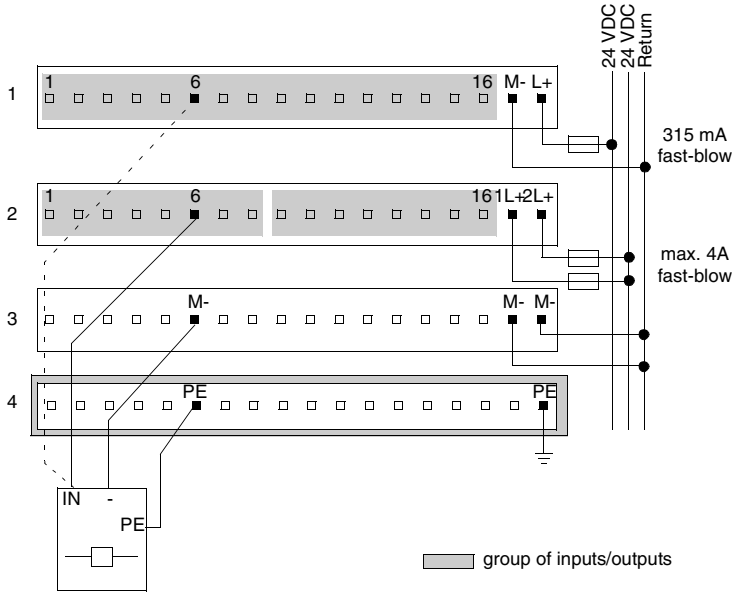

Simplified Input Schematics


The following diagram shows the field-side input circuitry.

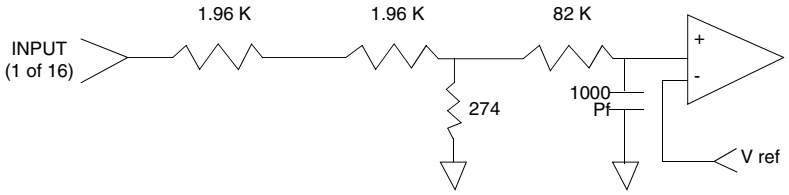

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Simplified Output Schematics

The following diagram shows the field-side output circuitry.

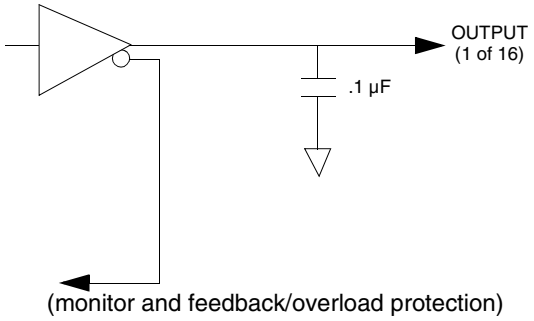

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADM 350 11 TSX Momentum I/O base supports 16 discrete inputs and 16 discrete outputs. This section contains information about the mapping of the I/O data into input words and output words.

I/O Map

The I/O base may be mapped as one input word and one output word, or as 16 discrete input points and 16 discrete output points.

IEC vs. Ladder Logic


In order to correctly field wire the inputs/outputs and map the input/output data, you need to know which type of Momentum Adapter is mounted on the base. Adapters may be either IEC compliant or 984 Ladder Logic compliant.

	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Data Mapping


The figure below shows how data is mapped on the I/O base with an IEC Compliant adapter. When the I/O is mapped as discrete points (1x/0x), the MSB is assigned to Pin 1 and the LSB is assigned to Pin 16. When the I/O is mapped as a word or register (3x/4x), the MSB (bit 15) is assigned to Pin 16 and the LSB (bit 0) is assigned to Pin 1.

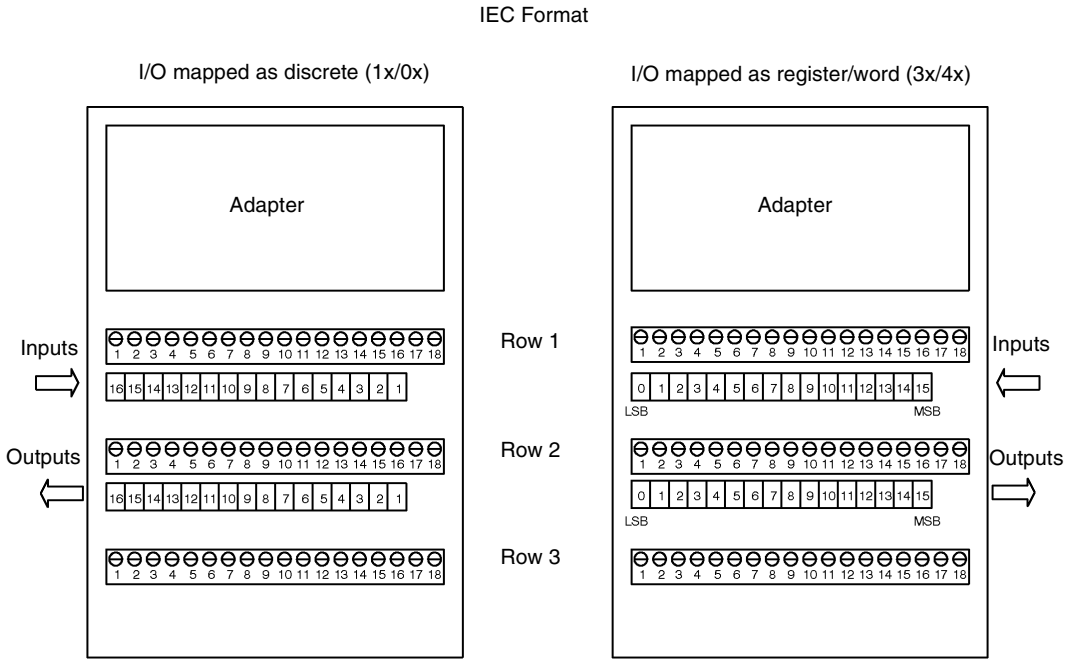

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped on the I/O base with a Ladder Logic Compliant adapter. When the I/O is mapped as discrete points (1x/0x), the MSB is assigned to Pin 16 and the LSB is assigned to Pin 1. When the I/O is mapped as a word or register (3x/4x), the MSB (bit 15) is assigned to Pin 1 and the LSB (bit 0) is assigned to Pin 16.

984 Format

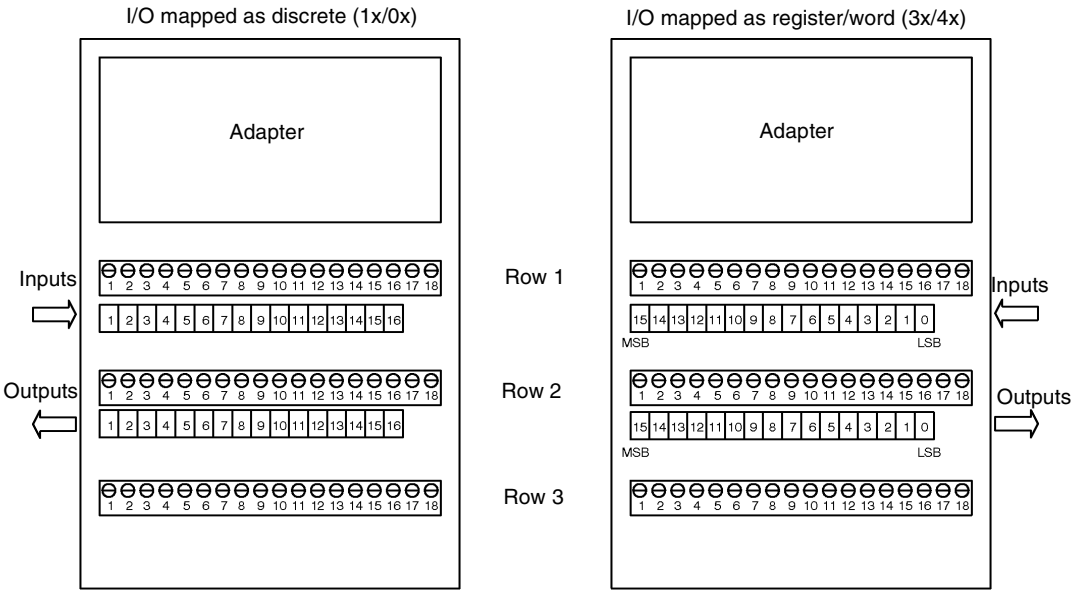

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADM 350 15 24 VDC - 16 Pt. In / 16 Pt. Out Module Base

17

Overview

Purpose

This chapter describes the 170 ADM 350 15 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	244
Specifications	246
Internal Pin Connections	249
Field Wiring Guidelines	250
Wiring Diagrams	252
I/O Mapping	253

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 ADI 350 15 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below

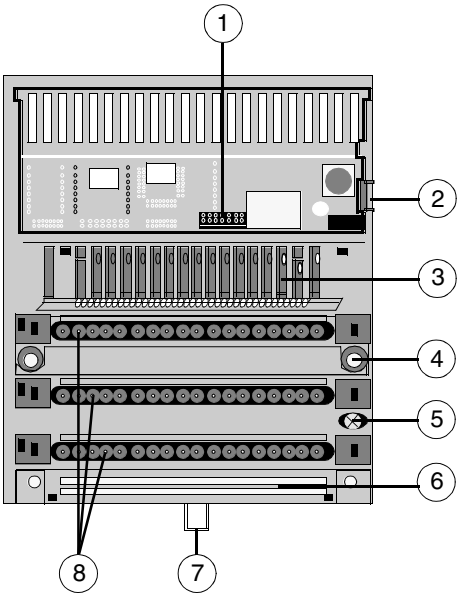


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Mounting holes for panel mount
5	Grounding screw
6	Busbar Mounting Slot
7	Locking tab for DIN rail mount
8	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

This I/O base has one LED, the ready indicator shown in the illustration below.

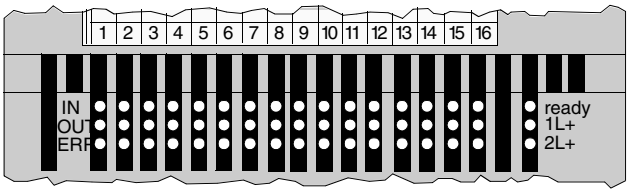

LED Descriptions

The ready indicator is described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate. Operating voltage for internal logic (5 V) is present.
	Off	Module not ready.
1L+	Green	Output voltage 1L+ of inputs 1 ... 8 (group 1) is present
	Off	Output voltage of inputs 1 ... 8 (group 1) is not present
2L+	Green	Output voltage 2L+ of inputs 9 ... 16 (group 2) is present
	Off	Output voltage of inputs 9 ... 16 (group 2) is not present
Upper row IN 1...16	Green	Input status (an LED per input); Input point active, ie. input carries a 1 signal (logically ON)
	Off	Input point inactive, ie. input carries a 0 signal (logically OFF)
Middle row OUT 1...16	Green	Output status (an LED per output); Output point active, ie. output carries a 1 signal (logically ON)
	Off	Output point inactive, ie. Output carries a 0 signal (logically OFF)
Lower row ERR 1...16	Red	Output overload (an LED per output). Short circuit or overload on the corresponding output.
	Off	Outputs 1 ... 16 operating normally.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADM 350 15 I/O base.

General Specifications

General Specifications

Module type	16 discrete inputs in 1 group 16 discrete outputs in 2 groups (8 pts/group)
Supply voltage	24 VDC
Supply voltage range	20-30 VDC
Supply current consumption	max. 250 mA at 24 VDC
Power dissipation	6 W + ((# of input points on x .144 W) + (# of output points on x .25 W))
I/O map	1 input word 1 output word

Isolation

Isolation

Input to input	none
Output to output	none
Input to output group	500 VAC for 1 minute
I/O Points to Communication Interface	500 VAC for 1 minute
Module power to logic	none
Module power to I/O points	500 VAC for 1 minute

Fuses

Fuses

Internal	none
External: module power	315 mA fast-blow (Wickmann 193031500 mA or 194031500 mA or equivalent)
External: input power	315 mA fast-blow (Wickmann 193031500 mA or 194031500 mA or equivalent)
External: output power	According to the supply of the connected actuators– not to exceed 6.3 A fast-blow/ group

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 500V
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1, Div. 2 pending

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3in) two busbars 171.5 mm (6.75in) three busbars
Weight	200 g (0.44 lb)

Discrete Inputs

Specifications for discrete inputs

Number of points	16
Number of groups	1
Points per group	16
Signal type	True Low
IEC 1131 type	1 (See Appendix *IEC 1131 Input Types, p. 581* for definitions of IEC input types.)
ON voltage	0 ... 5 VDC
OFF voltage	15 ... 30 VDC
Input current	2.0 mA minimum ON 0.5 mA maximum OFF
Input voltage range	0 ... +30 VDC
Input resistance	4 kOhm
Response time	2.2 ms OFF to ON 3.3 ms ON to OFF

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete Outputs Specifications for discrete outputs

Output type	Solid state switch (sinking)
Output supply voltage	24 VDC
Output supply voltage range	19.2 ... 30 VDC
Number of points	16
Number of groups	1
Current capacity	0.5 A/point maximum 5 A/module
Signal type	True Low
Leakage current (output out)	< 1 mA @ 24 VDC
Surge (inrush) current	1 A for 1 ms Current limited
On state voltage drop	< 0.5 VDC @ 0.5 A
Fault sensing (See Note Below)	Outputs are electronically safeguarded to assist in short circuit and overload protection
Fault indication	1 red LED/point (row 3) ON when short current/ overload occurs
Error reporting	none
Response time (resistive load / 0.5 A)	< 1 ms OFF to ON < 1 ms ON to OFF
Maximum switching cycles	1000/h for 0.5 A inductive load 100/s for 0.5 A resistive load 8/s for 1.2 W Tungsten load
Loads	
Inductive	500 mH @ 0.5 Hz
Capacitance	50 microfarads
Tungsten Load	12 W
Input Voltage Surge	45 Volt for 10 ms 56 Volt for 1.3 mS decaying pulse

Note: Discrete 24 VDC outputs incorporate thermal shutdown and overload protection. The output current of a shortened output is limited to a nondestructive value. The short circuit heats the output driver and the output will switch off. The output will switch on again if the driver leaves the overtemperature condition. If the short circuit still exists, the driver will reach the overtemperature condition again and will switch off again.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional busbar.

Illustration

Rows 1 through 3 show the internal connections between terminals on the I/O base. Row 4 through 6 show the internal connections on the optional busbar.

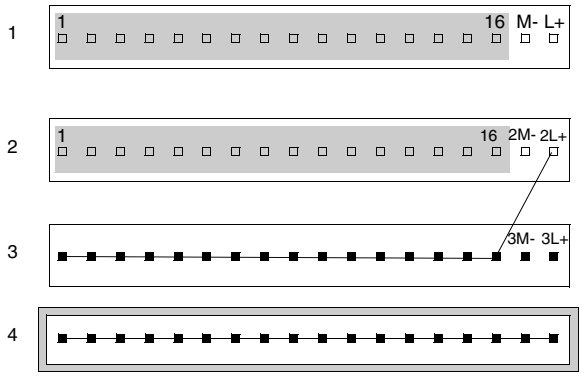

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

Inputs are field wired to row 1 of the base. The outputs are field wired to row 2. This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-, 2-, or 3-row busbar. The following busbars are available from Schneider Automation:

Type	Number of Rows	Part Number
Screw-in	1 - row	170 XTS 006 01
	2 - row	170 XTS 005 01
	3 - row	170 XTS 004 01
Spring-clip	1 - row	170 XTS 007 01
	2 - row	170 XTS 008 01
	3 - row	170 XTS 003 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mapping Terminal Blocks

The folowing table shows mapping terminal blocks and optional busbars

Row	Terminal	Function
1	1...16	Inputs
	17	Return Inputs
	18	+ 24 VDC Power inputs
2	1 ... 16	Outputs
	17	Return for outputs
	18	+ 24 VDC Power for outputs
3	1 ... 16	+ 24 VDC Power for outputs (2L+)
	17	Return Module power
	18	+ 24 VDC Power
4	1 ... 18	Return (M-)



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Protective Circuit May Be Required

When contacted switches are used on the input lines or when lines to the peripherals are very long, the outputs of inductive loads require protective circuitry with a clamping/suppressor diode. Install the protective circuit prallel to the operating coil.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Wiring Diagrams

Overview

This section provides a diagram to assist you in wiring 2-wire devices.

2-Wire Devices

The diagram below shows an example of wiring for two-wire devices.

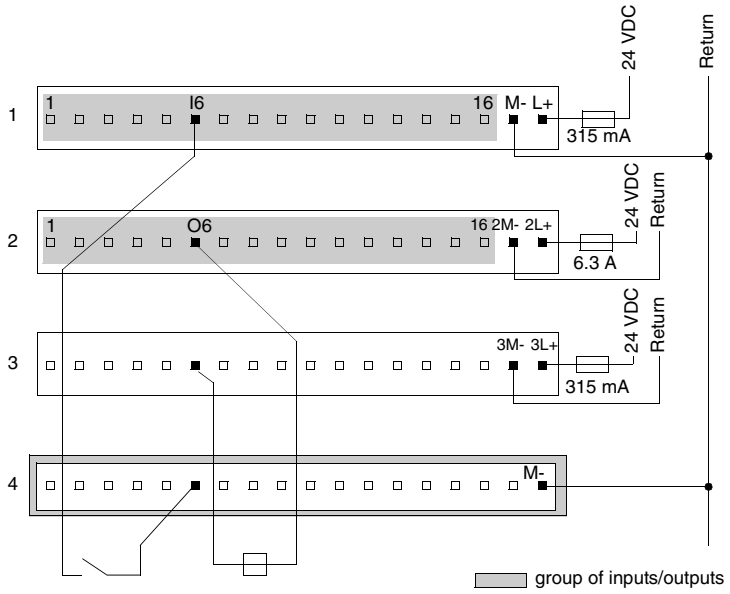

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADM 350 15 TSX Momentum I/O base supports 16 discrete inputs and 16 discrete outputs. This section contains information about the mapping of the I/O data into input words and output words.

I/O Map

The I/O base may be mapped as one input word, and one input word, or as 16 discrete input points and 16 discrete output points.

IEC vs. Ladder Logic

In order to correctly field wire the inputs/outputs and map the input/output data, you need to know which type of Momentum Adapter is mounted on the base. Adapters may be either IEC compliant or 984 Ladder Logic compliant.


	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Data Mapping

The figure below shows how data is mapped on the I/O base with an IEC Compliant adapter. When the I/O is mapped as discrete points (1x/0x), the MSB is assigned to Pin 1 and the LSB is assigned to Pin 16. When the I/O is mapped as a word or register (3x/4x), the MSB (bit 15) is assigned to Pin 16 and the LSB (bit 0) is assigned to Pin 1.


IEC Format

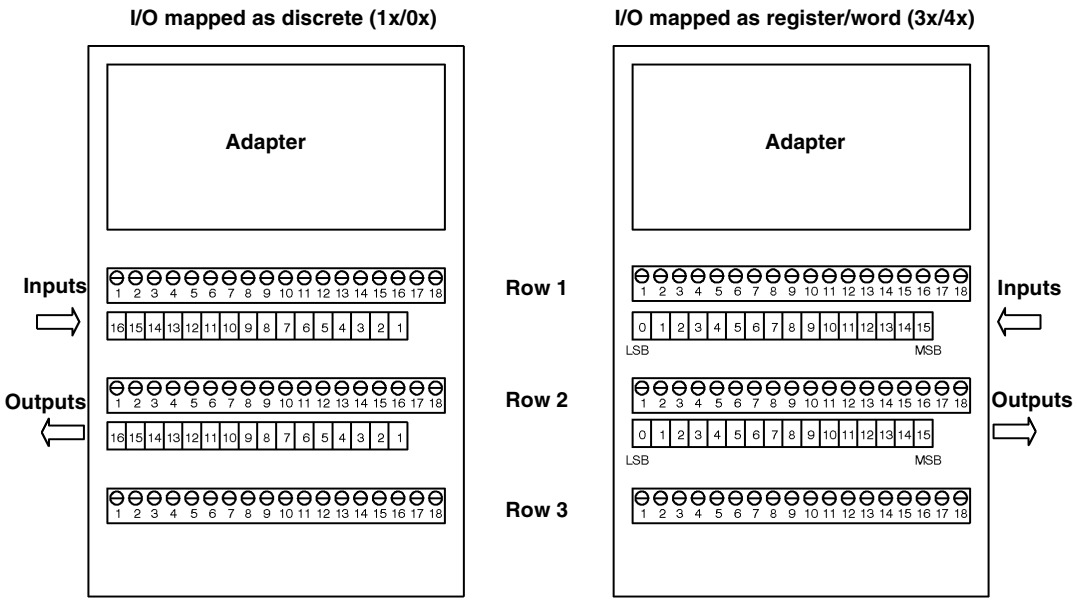

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped on the I/O base with a Ladder Logic Compliant adapter. When the I/O is mapped as discrete points (1x/0x), the MSB is assigned to Pin 16 and the LSB is assigned to Pin 1. When the I/O is mapped as a word or register (3x/4x), the MSB (bit 15) is assigned to Pin 1 and the LSB (bit 0) is assigned to Pin 16.

984 Format

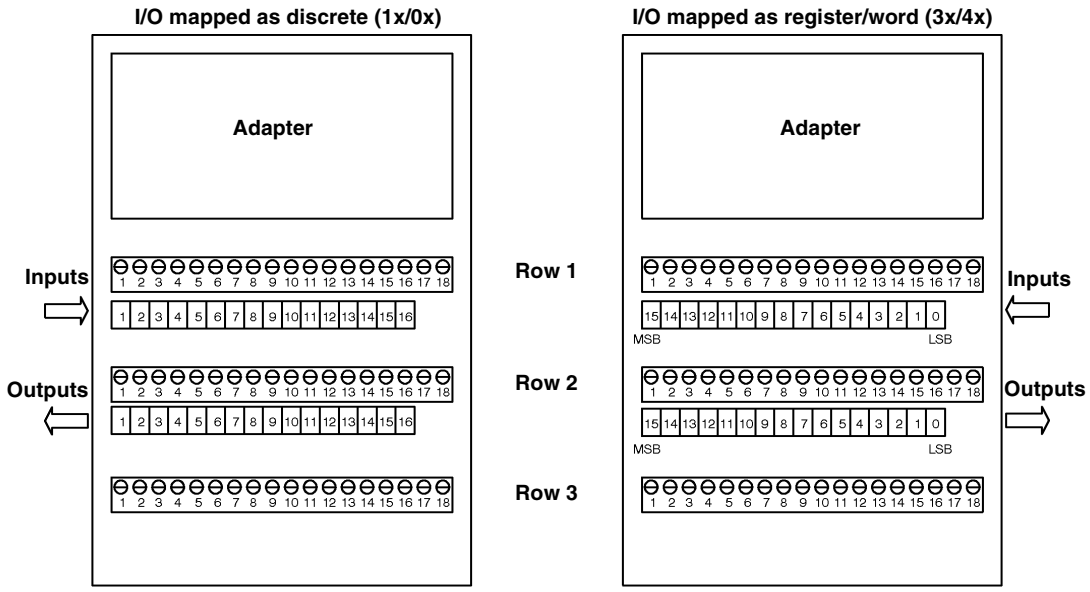

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADM 370 10 24 VDC - 16 Pt. In / 8 Pt. Out @ 2 Amp. Module Base

18

Overview

Purpose

This chapter describes the 170 ADM 370 10 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	258
Specifications	260
Internal Pin Connections	263
Field Wiring Guidelines	264
Wiring Diagrams	266
I/O Mapping	271

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 ADM 370 10 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below

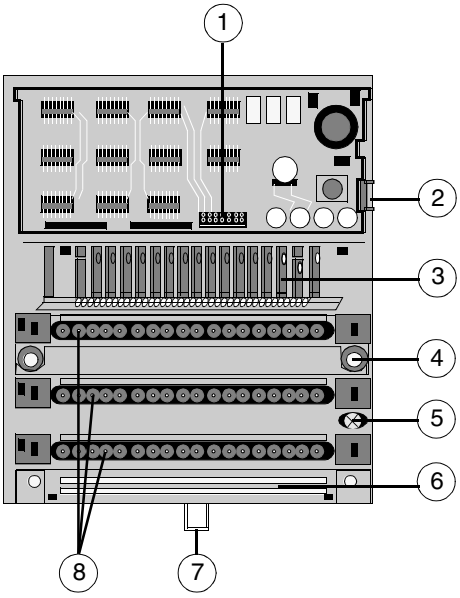


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Mounting holes for panel mount
5	Grounding screw
6	Busbar Mounting Slot
7	Locking tab for DIN rail mount
8	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

The LEDs are shown in the illustration below.

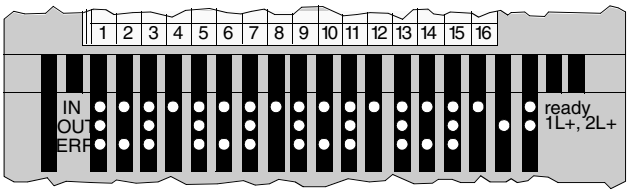

LED Descriptions

The LEDs are described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate. Operating voltage for internal logic (5 V) is present.
	Off	Module not ready.
1L+	Green	Output voltage 1L+ of inputs 1 ... 4 (group 1) is present
	Off	Output voltage of inputs 1 ... 4 (group 1) is not present
2L+	Green	Output voltage 2L+ of inputs 5 ... 8 (group 2) is present
	Off	Output voltage of inputs 5... 8 (group 2) is not present
Upper row IN 1...16	Green	Input status (an LED per input); Input point active, ie. input carries a 1 signal (logically ON)
	Off	Input status (an LED per input); Input point inactive, ie. input carries a 0 signal (logically OFF)
Middle row OUT 1,3, 5, 7, 9, 11, 13, 15	Green	Output status (an LED per output); Output point active, ie. output carries a 1 signal (logically ON)
	Off	Output status (an LED per output); Output point inactive, ie. Output carries a 0 signal (logically OFF)
Lower row ERR 1,3, 5, 7, 9, 11, 13, 15	Red	Output overload (an LED per output). Overload on the corresponding output.
	Off	Outputs 1 ... 8 operating normally.
Lower row ERR 2, 6, 10, 14	Red	Input sensor leads shorted circuit or overloaded (one LED per sensor supply line).
	Off	Input sensor current applied

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADM 370 10 I/O base.

General Specifications

General Specifications

Module type	16 discrete inputs in 1 group 8 discrete outputs in 2 groups (4 pts/group)
Supply voltage	24 VDC
Supply voltage range	20...30 VDC
Supply current consumption	max. 250 mA at 24 VDC
Power dissipation	6 W + (# of input points on x .144 W) + (# of output points on x 1 W))
I/O map	1 input word 1 output word

Isolation

Isolation

Input to input	none
Output group to output group	500 VAC
Input to output group	500 VAC
Field to communication adapter	Defined by Communication Adapter type

Fuses

Fuses

Internal	none
External: operating and input voltage	According to the supply of the connected sensors– not to exceed 4A fast-blow
External: output voltage	According to the supply of the connected actuators– not to exceed 8 A slow-blow

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 500V
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1 Div. 2 pending

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3in) two busbars 171.5 mm (6.75in) three busbars
Weight	220 g (0.49 lb)

Discrete Inputs

Specifications for discrete inputs

Number of points	16
Number of groups	4
Points per group	4
Signal type	True High
IEC 1131 type	1+ (See Appendix *IEC 1131 Input Types, p. 581* for definitions of IEC input types.)
ON voltage	+11 ... +30 VDC
OFF voltage	-3 ... +5 VDC
Input current	2.5 mA minimum ON (6 mA at 24 VDC) 1.2 mA maximum OFF
Input voltage range	-3 ... +30 VDC
Input resistance	4 kOhm
Response time	2.2 ms OFF to ON 3.3 ms ON to OFF

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete Outputs Specifications for discrete outputs

Output type	Solid state switch
Output supply voltage	24 VDC
Output supply voltage range	20 ... 30 VDC
Output voltage	External supply - .5 VDC
Number of points	8
Number of groups	2
Points per group	4
Current capacity	2 A/point maximum 8 A/group 16 A/module
Signal type	True High
Leakage current (output out)	< 1 mA @ 24 VDC
Surge (inrush) current	2.8 A for 10 s max.
On state voltage drop	< 0.5 VDC @ 2 A
Fault sensing	Outputs are electronically safeguarded to assist in short circuit and overload protection
Fault reporting outputs	1 red LED/point (row 3) ON when overload occurs
Fault reporting input voltage	1 red LED (row 3) signals the state of 4 inputs belonging to the input power supply group
Error indication	In the event of an overload for on least 1 output, for a short-circuit or overload in one of the 4 encoder supply groups, (I/O-Error) to communication adapter
Response time (resistive load / 2 A)	< 0.1 ms OFF to ON < 0.1 ms ON to OFF
Maximum switching cycles	1000/h for 2 A inductive load (for inductances > 100 mH and switching currents > 1A, a clamping diode must be installed 100/s for 2 A resistive load 10/s for 1.2 W Tungsten load (when the startup-current factor <= 10 the nominal current)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional busbar.

Illustration

Rows 1 through 3 show the internal connections between terminals on the I/O base. Row 4 through 5 show the internal connections on the optional busbar.

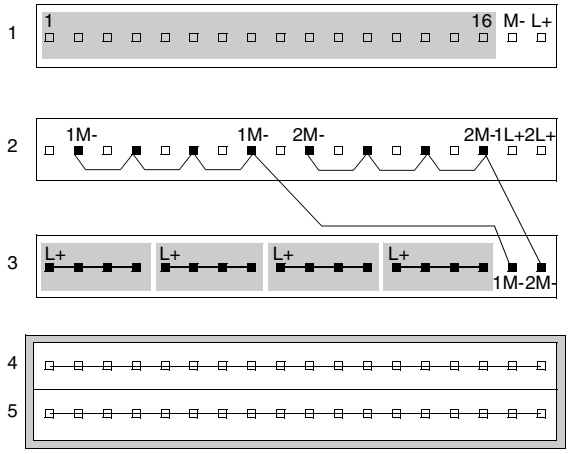

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

Inputs are field wired to row 1 of the base. The outputs are field wired to row 2. This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-, 2-, or 3-row busbar. The following busbars are available from Schneider Automation:

Type	Number of Rows	Part Number
Screw-in	1 - row	170 XTS 006 01
	2 - row	170 XTS 005 01
Spring-clip	1 - row	170 XTS 007 01
	2 - row	170 XTS 008 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mapping Terminal Blocks

The folowing table shows mapping terminal blocks and optional busbars

Row	Terminal	Function
1	1...16	Inputs
	17	Return (M-)
	18	+ 24 VDC Operating voltage (L+)
2	1, 3, 5, 7	Outputs for group 1
	9, 11, 13, 15	Outputs for group 2
	2, 4, 6, 8	Return (1M-) group 1 outputs
	10, 12, 14, 16	Return (2M-) group 2 outputs
	17/18	+ 24 VDC for output group 1 (1L+) and group 2 (2L+)
3	1 ... 4	Input voltage for terminal pins 1 ... 4 (L+)
	5 ... 8	Input voltage for terminal pins 5 ... 8 (L+)
	9 ... 12	Input voltage for terminal pins 9 ... 12 (L+)
	13 ... 16	Input voltage for terminal pins 13 ... 16 (L+)
	17/18	Return (1M-, 2M-)
4	1 ... 18	Return (M-) for sensors
5	1 ... 18	Protective earth (PE)



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Protective Circuit May Be Required

When contacted switches are used on the input lines or when lines to the peripherals are very long, the outputs of inductive loads require protective circuitry with a clamping/suppressor diode. Install the protective circuit prallel to the operating coil.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section provides diagrams to assist you in wiring the following types of devices:

- 2-wire devices
- Sensors activated by an output
- 4-wire sensors with a 2-wire actuator
- Broken wire detection

2-Wire Devices


The diagram below shows an example of wiring for two-wire devices.

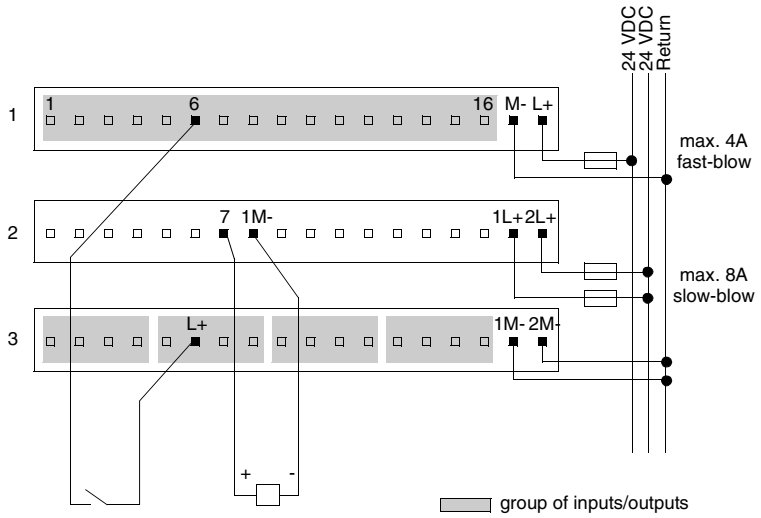

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Sensor Activated by Output


The wiring diagram below shows an example of a sensor activated by an output. The diagram shows the sensors being supplied with voltage only when the corresponding output delivers a high signal. A similar wiring connection scheme can be used with 2- and 3-wire sensors.

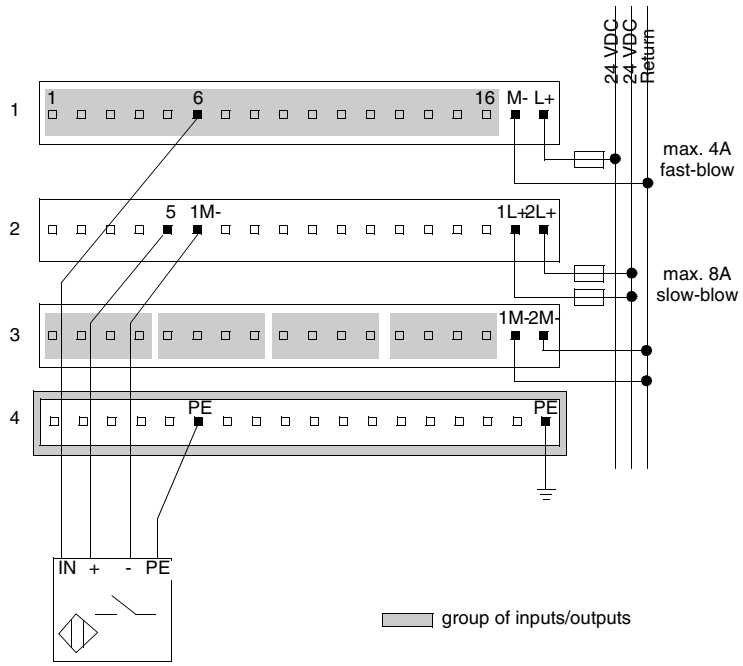

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Four-Wire Sensor with a Two-Wire Actuator


The diagram below shows a four-wire sensor with a two-wire actuator. The process of wiring a 3-wire sensor is very similar to the one below. Because 3-wire sensors do not require PE, a 1-row busbar could be used instead of the 2-row busbar shown. Separate connections to pins 17 and 18 are shown on row 3, even though these two pins are internally connected. This is done to halve the load.

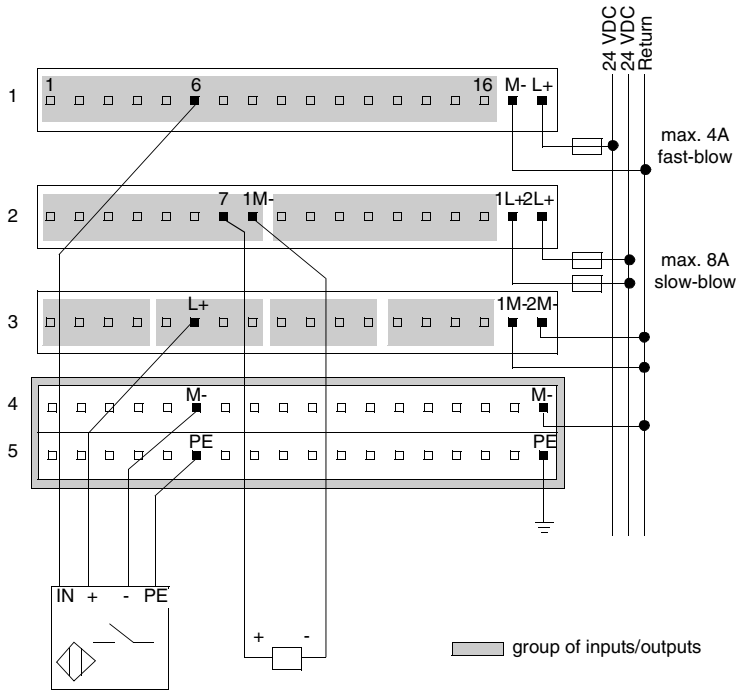

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Broken Wire Detection


The diagram below shows a three-wire actuator with an optional wiring scheme for broken wire detection. The dotted line reads back whether or not current has reached the actuator. When the output on pin 5, row 2, is high, the input from pin 6, row 1, must also be high.

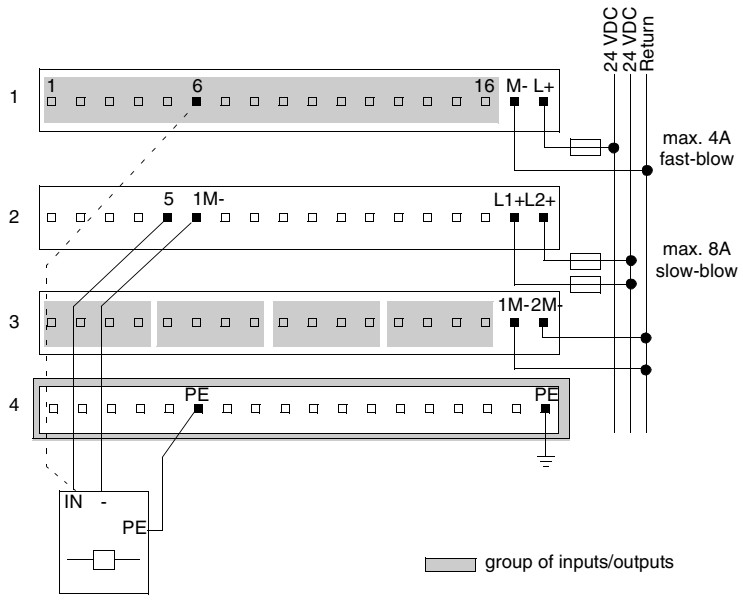

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Simplified Input Schematics

The following diagram shows the field-side input circuitry.

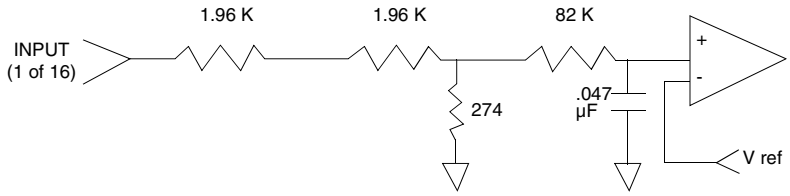

Simplified Output Schematics

The following diagram shows the field-side output circuitry.

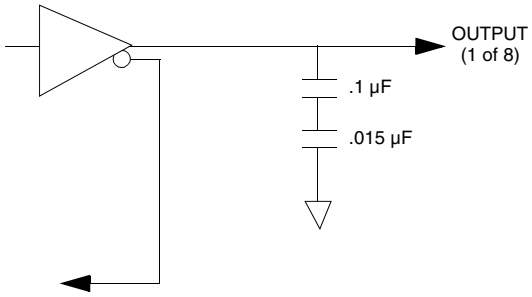

(monitor and feedback/overload protection)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADM 370 10 TSX Momentum I/O base supports 16 discrete inputs and 8 discrete outputs. This section contains information about the mapping of the I/O data into input words and output words.

I/O Map

The I/O base may be mapped as one input word and one output word or as 16 discrete input points and 8 discrete output points.

IEC vs. Ladder Logic


In order to correctly field wire the inputs/output and map the input/output data, you need to know which type of Momentum Adapter is mounted on the base. Adapters may be either IEC compliant or 984 Ladder Logic compliant.

	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Data Mapping


The figure below shows how data is mapped on the I/O base with an IEC Compliant adapter. When the I/O is mapped as discrete points (1x/0x) , the MSB is assigned to Pin 1and the LSB is assigned to Pin 16. When the I/O is mapped as a word or register (3x/4x), the MSB (bit 15) is assigned to Pin 16 and the LSB (bit 0) is assigned to Pin 1.

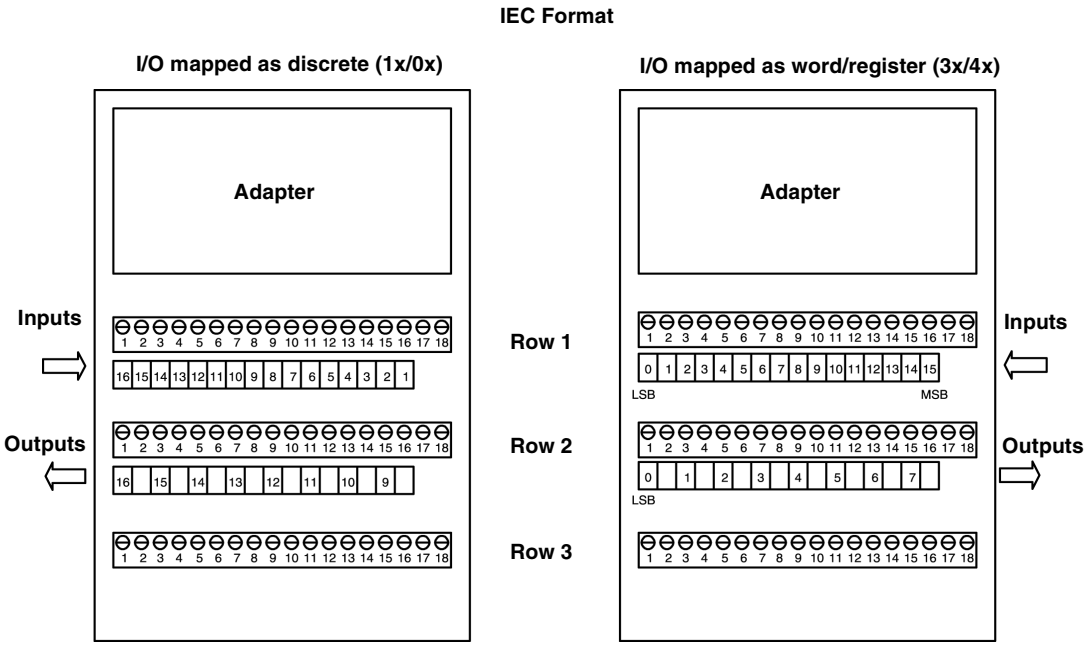

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped on the I/O base with a Ladder Logic Compliant adapter. When the I/O is mapped as discrete points (1x/0x), the MSB is assigned to Pin 16 and the LSB is assigned to Pin 1. When the I/O is mapped as a word or register, the MSB (bit 15) is assigned to Pin 1and the LSB (bit 0) is assigned to Pin 16.

984 Format

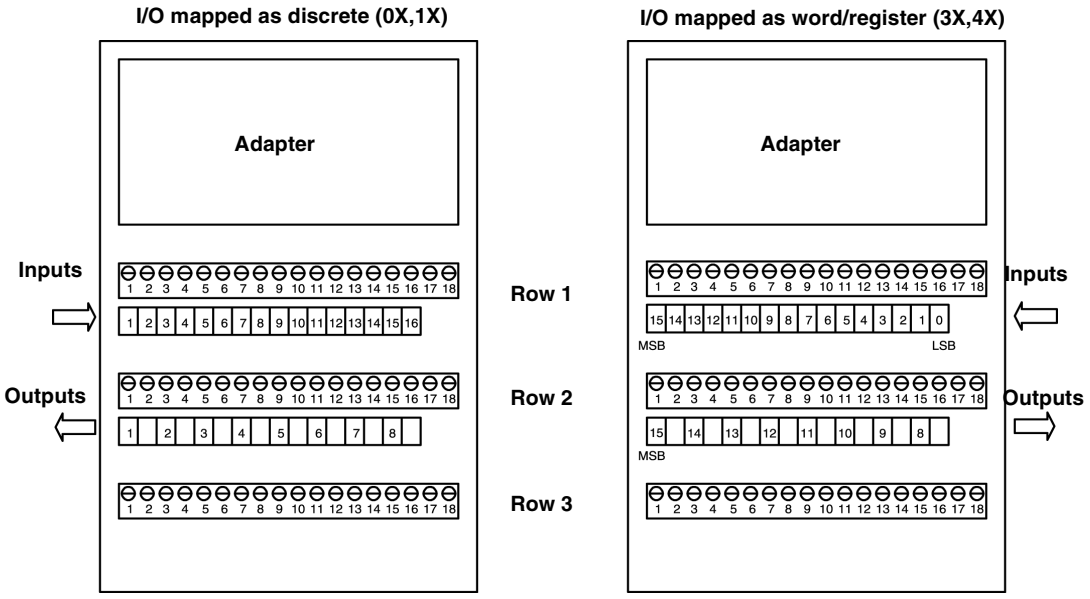

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADM 390 10 24 VDC - 16 Pt. In / 12 Pt. Out Monitored Module Base

19

Overview

Purpose

This chapter describes the 170 ADM 390 10 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	276
Specifications	278
Internal Pin Connections	281
Field Wiring Guidelines	282
Wiring Diagrams	284
I/O Mapping	287

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 ADM 390 10 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below

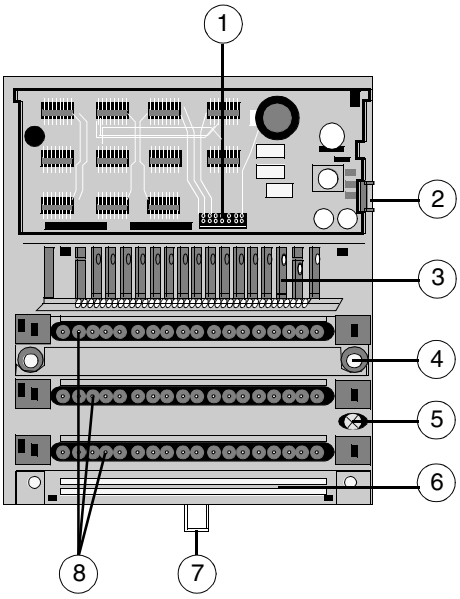


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Mounting holes for panel mount
5	Grounding screw
6	Busbar Mounting Slot
7	Locking tab for DIN rail mount
8	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

The LEDs are shown in the illustration below.

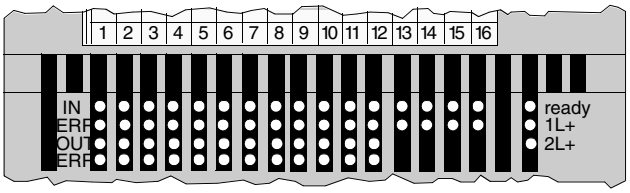

LED Descriptions

The LEDs are described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate. Operating voltage L+ for internal logic (5 V) is present.
	Off	Module not ready.
1L+	Green	Output voltage 1L+ of inputs 1 ... 8 (group 1) is present
	Off	Output voltage of inputs 1 ... 8 (group 1) is not present
2L+	Green	Output voltage 2L+ of inputs 9 ... 12 (group 2) is present
	Off	Output voltage of inputs 9 ... 12 (group 2) is not present
Row 1 IN 1...16	Green	Input status (an LED per input); Input point active, ie. input carries a 1 signal (logically ON)
	Off	Input point inactive, ie. input carries a 0 signal (logically OFF)
Row 2 ERR 1...16	RED	Input detects broken wire (an LED per input)
	Off	Inputs 1 ... 16 operating normally.
Row 3 OUT 1...12	Green	Output status (an LED per output); Output point active, ie. output carries a 1 signal (logically ON)
	Off	Output status (an LED per output); Output point inactive, ie. Output carries a 0 signal (logically OFF)
Row 4 ERR 1...12	Red	Output overload (an LED per output). Short circuit or overload on the corresponding output.
	Off	Outputs 1 ... 16 operating normally.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADM 390 10 I/O base.

General Specifications

General Specifications

Module type	16 discrete inputs in 1 group 12 discrete outputs in 2 groups (8 pts/group 1 and 4 pts/group 2)
Supply voltage	24 VDC
Supply voltage range	20...30 VDC
Supply current consumption	max. 180 mA at 24 VDC
Power dissipation	6 W + ((# of input points on x .125 W) + (# of output points on x .25 W))
I/O map	3 input word 1 output word

Isolation

Isolation

Input to input	none
Output group to output group	none
Input to output group	none
Field to communication adapter	Defined by Communication Adapter type

Fuses

Fuses

Internal	none
Operating voltage	250 mA fast-blow (Wickmann 193025000 mA or equivalent)
Intput voltage	According to the supply dimensioning of the connected sensors–not to exceed 4 A fast-blow/group
Output voltage	According to the supply dimensioning of the connected actuators–not to exceed 4 A fast-blow/group

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 500V
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1, Div. 2

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3in) two busbars 171.5 mm (6.75in) three busbars
Weight	200 g (0.495lb)

Discrete Inputs

Specifications for discrete inputs

Number of points	16
Number of groups	1
Points per group	16
Signal type	True High
IEC 1131 type	1+ (See Appendix *IEC 1131 Input Types, p. 581* for definitions of IEC input types.)
ON voltage	+11 ... +30 VDC
OFF voltage	-3 ... +5 VDC
Input current	2.5 mA minimum ON (5.7 mA at 24 VDC) 1.2 mA maximum OFF
Broken wire detection	Input current less than 0.2 mA (0.3 mA required as minimum current for logical zero)
Input resistance	4 kOhm
Response time	2.2 ms OFF to ON 3.3 ms ON to OFF
Fault reporting	1 red LED/point (row 2) ON when indicating a broken wire
Error indication	Broken wire detection for on least 1 input (I/O-Error) to communication adapter

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete Outputs

Specifications for discrete outputs

Output type	Solid state switch
Output supply voltage	24 VDC
Output supply voltage range	20 ... 30 VDC
Output voltage	External supply - .5 VDC
Number of points	12
Number of groups	2
Points per group	8 (Group 1) and 4 (Group 2)
Current capacity	2 A/point maximum 8 A/group 16 A/module
Signal type	True High
Leakage current (output out)	< 1 mA @ 24 VDC
On state voltage drop	< 0.5 VDC @ 0.5 A
Fault sensing	Outputs are electronically safeguarded to assist in short circuit and overload protection
Fault reporting	1 red LED/point (row 4) ON when overload occurs
Fault reporting input voltage	1 red LED (row 3) signals the state of 4 inputs belonging to the input power supply group
Response time (resistive load / 0.5 A)	< 0.1 ms OFF to ON < 0.1 ms ON to OFF
Maximum switching cycles	1000/h for 0.5 A inductive load 100/s for 0.5 A resistive load 8/s for 1.2 W bulb load

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional busbar.

Illustration

Rows 1 through 3 show the internal connections between terminals on the I/O base. Row 4 through 5 show the internal connections on the optional busbar.

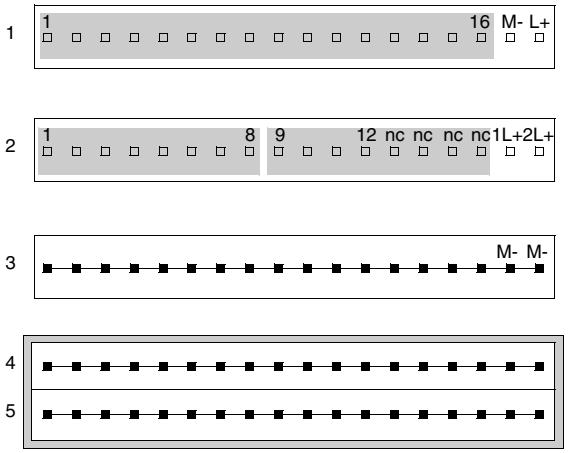

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

Inputs are field wired to row 1 of the base. The outputs are field wired to row 2. This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-, 2-, or 3-row busbar. The following busbars are available from Schneider Automation:

Type	Number of Rows	Part Number
Screw-in	1 - row	170 XTS 006 01
	2 - row	170 XTS 005 01
Spring-clip	1 - row	170 XTS 007 01
	2 - row	170 XTS 008 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mapping Terminal Blocks

The folowing table shows mapping terminal blocks and optional busbars

Row	Terminal	Function
1	1...16	Inputs
	17	Return (M-)
	18	+ 24 VDC Operating voltage (L+)
2	1...8	Outputs for group 1
	9...12	Outputs for group 2
	13...16	not connected (nc)
	17/18	+ 24 VDC for output group 1 (1L+) and group 2 (2L+)
3	1 ... 18	- Return (M-)
4	1 ... 18	Input voltage for terminal pins 1...16, row 1, or PE
5	1 ... 18	Protective earth (PE)



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Protective Circuit May Be Required

When contacted switches are used on the input lines or when lines to the peripherals are very long, the outputs of inductive loads require protective circuitry with a clamping/suppressor diode. Install the protective circuit prallel to the operating coil.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section provides diagrams to assist you in wiring the following types of devices:

- 2-wire configuration
- 3-wire configuration
- 4-wire configuration

2-Wire Devices


The diagram below shows an example of wiring for 2-wire devices. Use a 1-row busbar for this configuration.

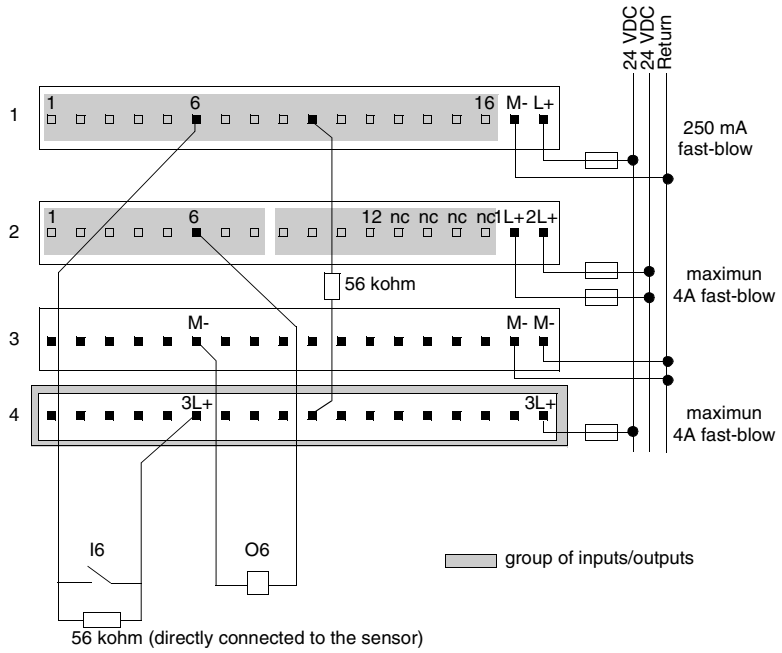

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3- and 4-Wire Devices


To connect a 3- or 4-wire sensor, you need a 2-row busbar.

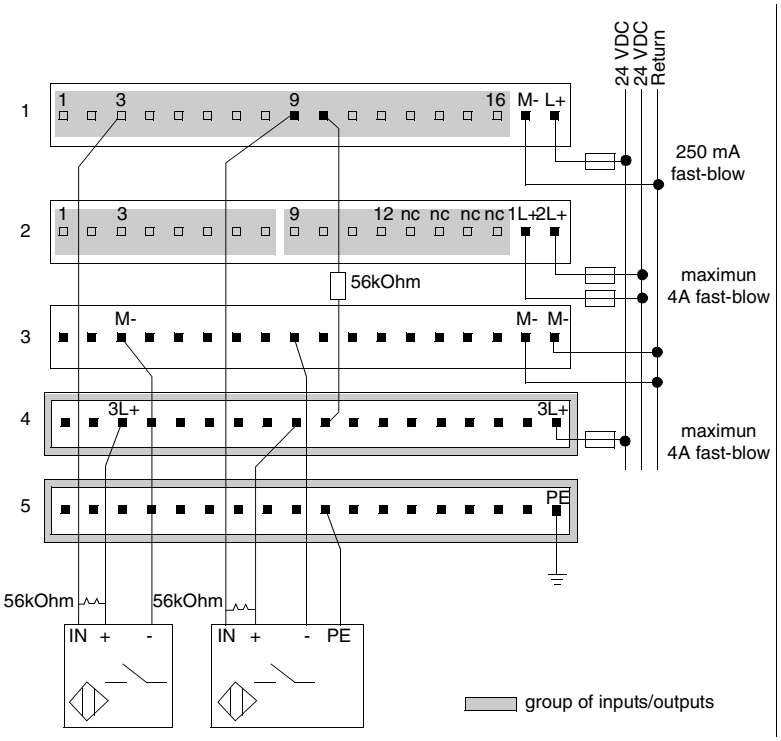

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Simplified Input Schematics

The following diagram shows the field-side input circuitry.

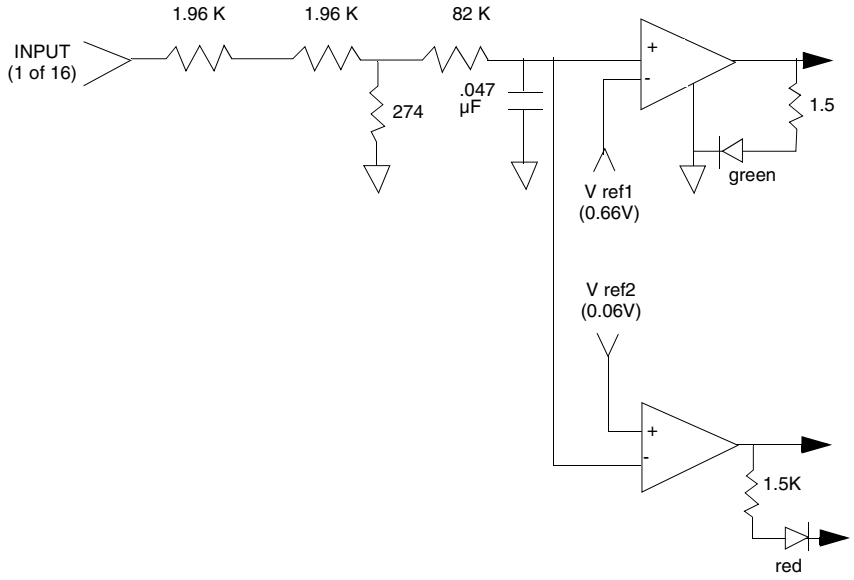

Simplified Output Schematics

The following diagram shows the field-side output circuitry.

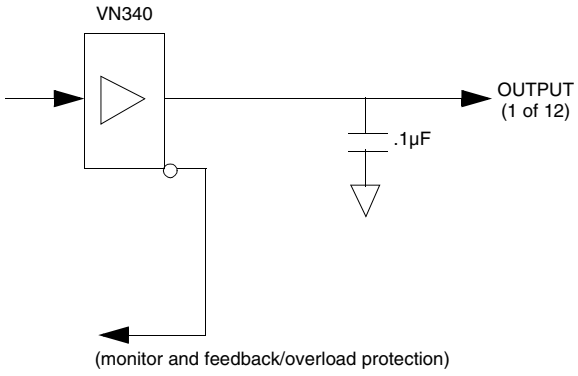

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADM 390 10 TSX Momentum I/O base supports 16 discrete inputs and 12 discrete outputs. This section contains information about the mapping of the I/O data into input words and output words.


I/O Map

The I/O base must be mapped as three input word and one output word, as follows:

Word	Input Data	Output Data
1	Fault detection status on the 12 outputs	Value for output channels 1 ... 12
2	Fault detection status on the 16 inputs	not used
3	Value for input channels 1 ... 16	not used


Fault Detection for Outputs

The following diagram shows how bits are assigned in the first input word.

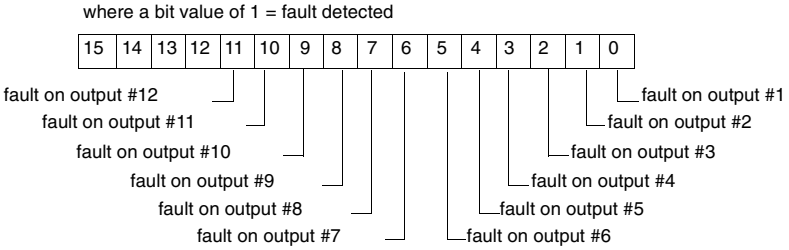

Fault Detection for Inputs

The following diagram shows how bits are assigned in the second input word.

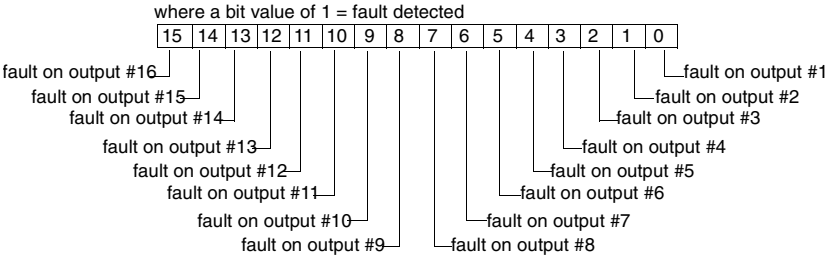

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

IEC vs. Ladder Logic


In order to correctly field wire the inputs/outputs and map the input/output data, you need to know which type of Momentum Adapter is mounted on the base. Adapters may be either IEC compliant or 984 Ladder Logic compliant.

	IEC Compliant	984 Ladder Logic Compliant
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Data Mapping

The figure below shows how data is mapped on the I/O base with an IEC Compliant adapter. When the I/O is mapped as discrete points (1x/0x) the MSB is assigned to Pin 1 and the LSB is assigned to Pin 16. When the I/O is mapped as a word or register (3x/4x) the MSB is assigned to Pin 16 and the LSB is assigned to Pin 1.


IEC Format

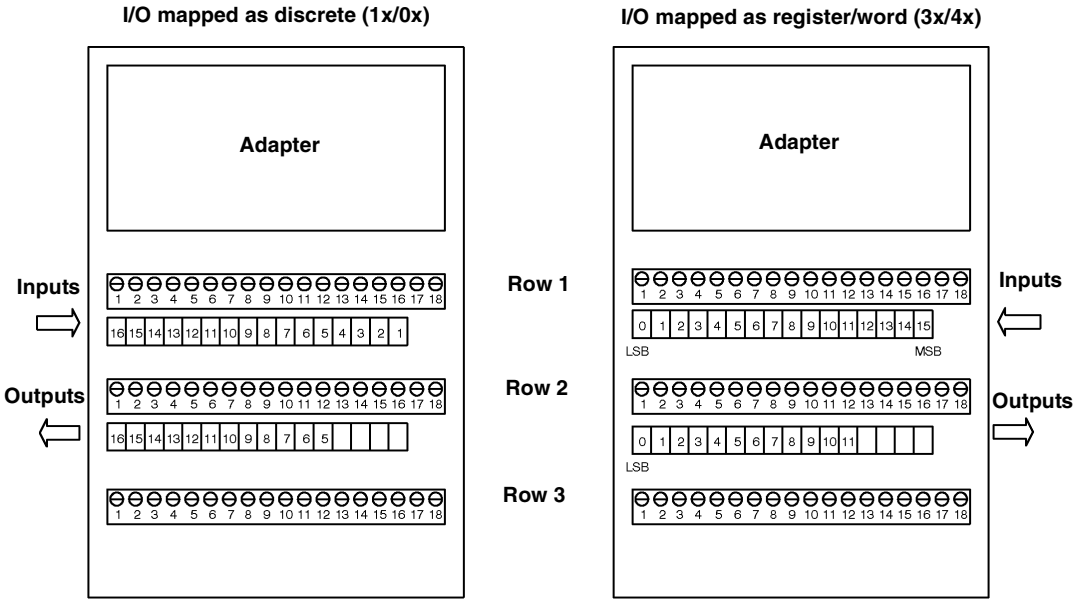

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped on the I/O base with a Ladder Logic Compliant adapter. When the I/O is mapped as discrete points (1x/0x) the MSB is assigned to Pin16 and the LSB is assigned to Pin 1. When the I/O is mapped as a word or register (3x/4x) the MSB is assigned to Pin 1 and the LSB is assigned to Pin 16.

984 Format

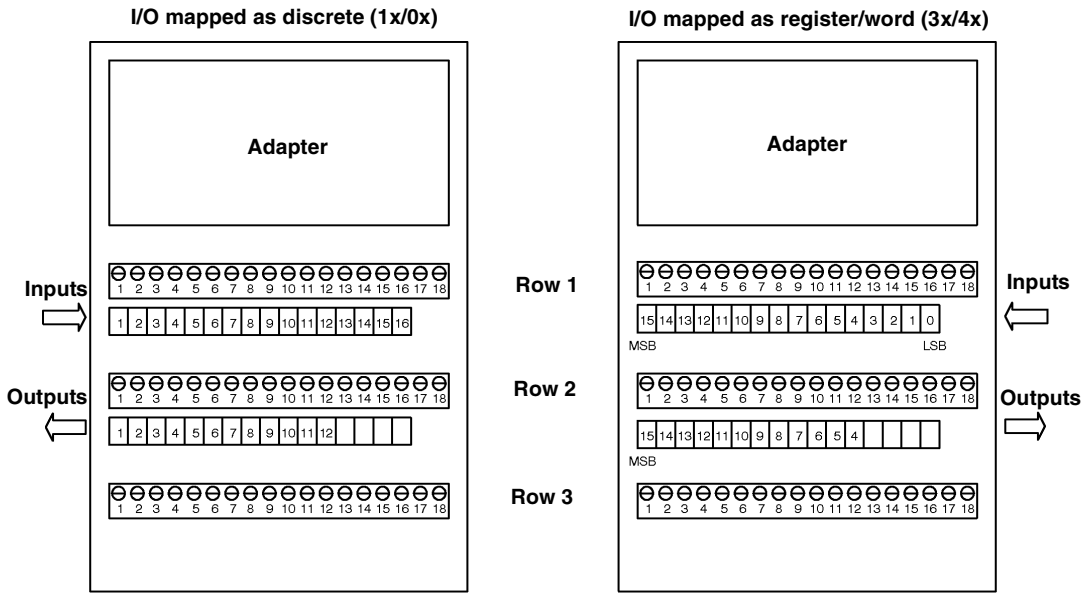

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADM 390 30 24 VDC - 10 Pt. In / 8 Pt. Relay Out Module Base

20

Overview

Purpose

This chapter describes the 170 ADM 390 30 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	292
Specifications	294
Internal Pin Connections	297
Field Wiring Guidelines	298
Wiring Diagrams	300
I/O Mapping	303

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 ADM 390 30 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below.

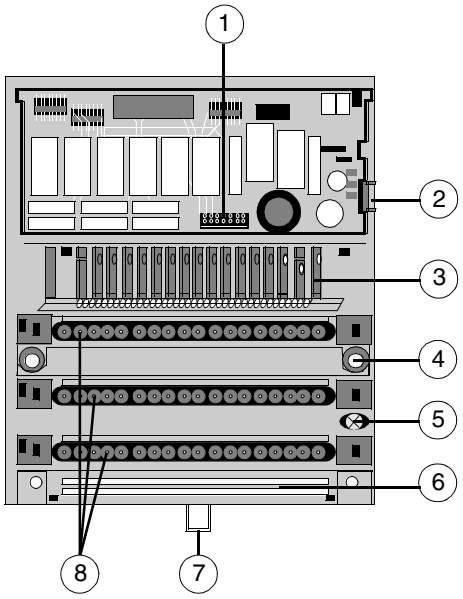


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Mounting holes for panel mount
5	Grounding screw
6	Busbar Mounting Slot
7	Locking tab for DIN rail mount
8	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

The LEDs are shown in the illustration below.

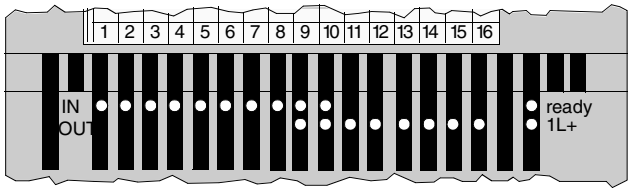

LED Descriptions

The LEDs are described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate. Operating voltage for internal logic (5 V) is present.
	Off	Module not ready.
1L+	Green	Input voltage 1L+ of inputs 1 ... 10 is present
	Off	Input voltage of inputs 1 ... 10 is not present
Upper row IN 1...10	Green	Input status (an LED per input); Input point active, ie. input carries a 1 signal (logically ON)
	Off	Input status (an LED per input); Input point inactive, ie. input carries a 0 signal (logically OFF)
Middle row OUT 9 ...16	Green	Output status (an LED per output); Output point active, ie. output carries a 1 signal (logically ON)
	Off	Output status (an LED per output) Output point inactive, ie. Output carries a 0 signal (logically OFF)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADM 390 30 I/O base.

General Specifications

General Specifications

Module type	10 discrete inputs in 1 group 8 relay outputs as normally open contacts in 2 groups, 4 pts/group
Supply voltage	24 VDC
Supply voltage range	20...30 VDC
Supply current consumption	max. 250 mA at 24 VDC
Power dissipation	6 W + (# of input points on x .144 W)
I/O map	1 input word 1 output word

Isolation

Isolation

Input to input	none
Output group to output group	1 780 VAC RMS
Input to output	1 780 VAC RMS
Output group to communication adapter	1 780 VAC RMS
Field to communication adapter	Defined by Communication Adapter type

Fuses

Fuses

Internal	none
External: operating voltage (L+)	315 mA fast-blow (Wickmann 19193-315 mA or 19194-315 mA or equivalent)
External: input voltage (1L+)	max. 4 A fast-blow (Wickmann 19193-4A or equivalent)
External: output voltage (1L1, 2L1)	According to the supply of the connected actuators– not to exceed 8 A slow-blow/ group.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply AC 2 KV to PE, 1 KV to differential surge on auxiliary power supply DC 0.5 KV
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1 Div. 2 pending

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3 in) two busbars 171.5 mm (6.75 in) three busbars
Weight	260 g (0.57lb)

Discrete Inputs

Specifications for discrete inputs

Number of points	10
Number of groups	1
Signal type	True High
IEC 1131 type	1+ (See Appendix *IEC 1131 Input Types, p. 581* for definitions of IEC input types.)
ON voltage	+11 ... +30 VDC
OFF voltage	-3 ... +5 VDC
Input current	2.5 mA minimum ON (6 mA at 24 VDC) 1.2 mA maximum OFF
Input voltage range	-3 ... +30 VDC
Input resistance	4 kOhm
Response time	2.2 ms OFF to ON 3.3 ms ON to OFF

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Relay Outputs

Specifications for relay outputs

Output type		Relay normally open output
Number of points		8
Number of groups		2
Points per group		4
Current capacity	20 VDC	> 5 mA (but only for new contacts) max 2 A (switching current <= 5 A) ohmic load max 1 A (L/R <= 40 ms) inductive load
	115 VDC	max. 0.5 A (switching current <= 1.5 A) ohmic load max. 0.15 A (L/R <= 40 ms) inductive load
	24 VAC	max. 2A (switching current <= 5 A) cos = 1 max. 1 A cos = 0.5
	230 VAC	max. 2A (switching current <= 5 A) cos = 1 max. 1 A cos = 0.5
Relay type		Normally Open
Leakage current (output out)		< 1.2 mA @ 230 VAC
Fault sensing		These contacts have an internal suppressor circuit.
Fault reporting		None
Error indication		None
Response time (resistive load / 0.5 A		10 ms @ 60 Hz OFF to ON 10 ms @ 60 Hz ON to OFF
Maximum switching cycles		> 30 x 106 (mechanical) >=1 x 105 (inductive load with external protective circuitry)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base.

Illustration

Rows 1 through 3 show the internal connections between terminalson the I/O base. Row 4 shows the internal connections on the optional busbar.

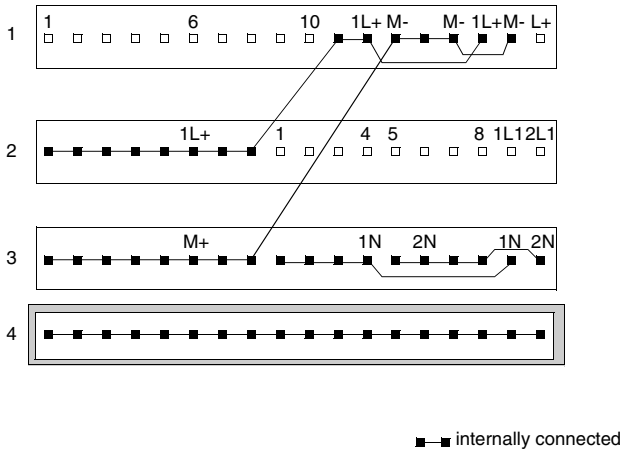

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

Inputs are field wired to row 1 of the base. The outputs are field wired to row 2. This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-row busbar. The following busbars are available from Schneider Automation.

Type	Part Number
Screw-in	170 XTS 006 01
Spring-clip	170 XTS 007 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mapping Terminal Blocks

The folowing table shows mapping terminal blocks and optional busbars.

Row	Terminal	Function
1	1...10	Inputs
	11, 12, 16	Input voltage for terminal pins 1 ... 10, (1L+)
	13, 14, 15	Return (M-) for the inputs
	17	Return (M-) for the module
	18	+ 24 VDC Operating voltage (L+)
2	1 ... 8	Input voltage for pins 1 ... 8, (1L+)
	9 ... 12	Outputs for group 1
	13 ... 16	Outputs for group 2
	17	Output Voltage for relays 1 ... 4 (1L1, 20 ... 115 VDC or 24 ... 230 VDC
	18	Output Voltage for relays 5 ... 8 (2L1, 20 ... 115 VDC or 24 ... 230 VDC
3	1 ... 8	Return (M-) for the inputs
	9, 10, 11, 12	Return (1N) for the relays 1 ... 4
	13, 14, 15, 16	Return (1N) for the relays 5 ... 8
	17/18	Return/Neutral for relay outputs
4	1 ... 18	Protective earth (PE)



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Protective Circuit Required

When contacted switches are used on the input lines or when lines to the peripherals are very long, the outputs of inductive loads require protective circuitry with a clamping/suppressor diode. Install the protective circuit prallel to the operating coil.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section provides diagrams to assist you in wiring the following types of devices:

- 3-wire sensor with a 2-wire actuator
- 4-wire sensor with a 3-wire actuator

3-Wire Sensor with a 2-Wire Actuator


The diagram below shows field wiring for a 3-wire (24 VDC) sensor and a 2-wire (230 VAC) actuator.

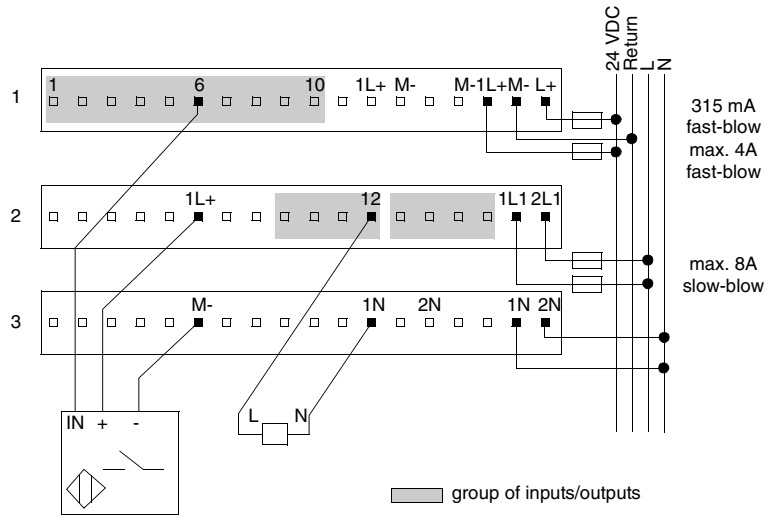

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-Wire Sensor with a 3-Wire Actuator


The diagram below shows field wiring for a 4-wire (24 VDC) sensor and a 3-wire (230 VAC) actuator.

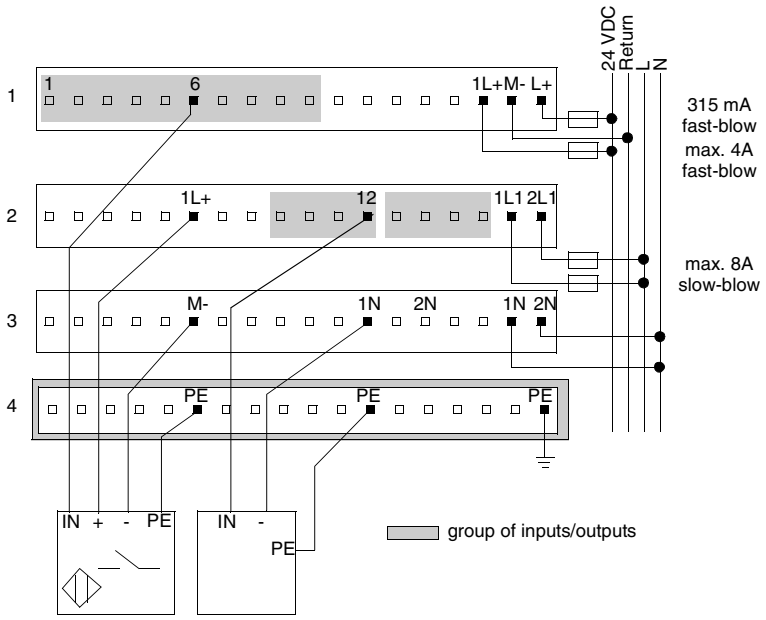

A 1-row busbar is used to provide PE for the 4-wire sensor. No busbar would be required if only 2- and/or 3-wire sensors were used.

Simplified Input Schematics


The following diagram shows the field-side input circuitry.

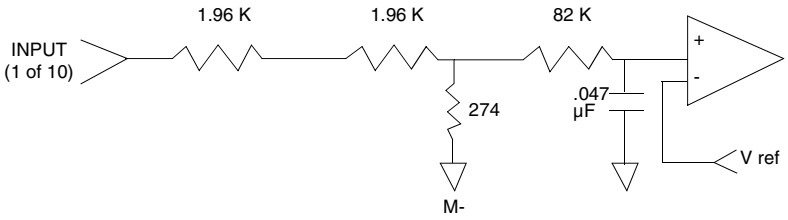

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Simplified Output Schematics

The following diagram shows the field-side output circuitry.

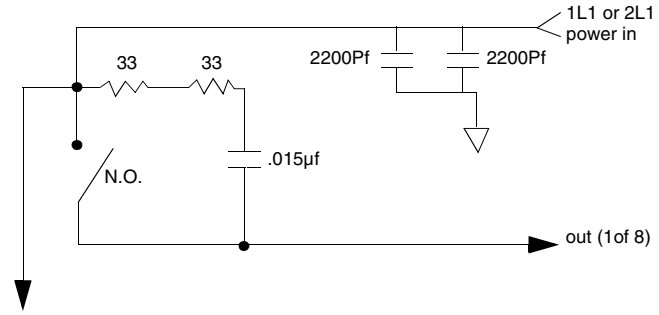

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADM 390 30 TSX Momentum I/O base supports 10 discrete inputs and 8 discrete outputs. This section contains information about the mapping of the I/O data into input words and output words.

I/O Map

The I/O base may be mapped as one input word and one output word, or as 10 discrete input points and 8 discrete output points.

IEC vs. Ladder Logic

In order to correctly field wire the inputs/outputs and map the input/output data, you need to know which type of Momentum Adapter is mounted on the base. Adapters may be either IEC compliant or 984 Ladder Logic compliant.


	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Data Mapping

The figure below shows how data is mapped on the I/O base with an IEC Compliant adapter. When the I/O is mapped as discrete points (1x/0x), the MSB is assigned to Pin 1 and the LSB is assigned to Pin 16. When I/O is mapped as a word or register (3x/4x), the MSB (bit 15) is assigned to Pin 16 and LSB (bit 0) is assigned to Pin 1.


IEC Format

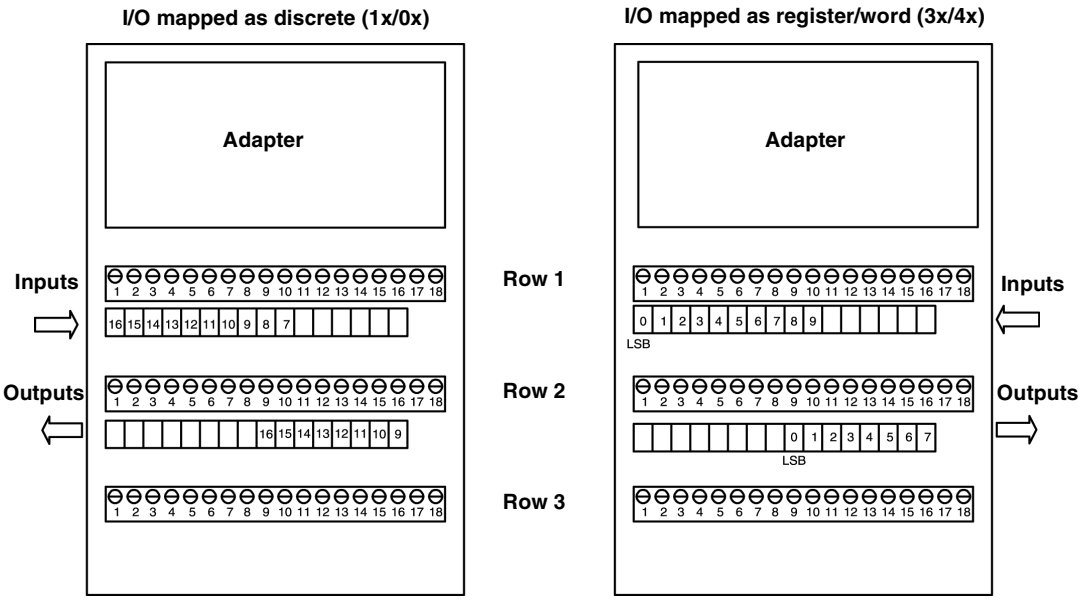

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped on the I/O base with a Ladder Logic Compliant adapter. When the I/O is mapped as discrete points (1x/0x), the MSB is assigned to Pin 16 and the LSB is assigned to Pin 1. When I/O is mapped as a word or register (3x/4x), the MSB (bit 15) is assigned to Pin 1 and LSB (bit 0) is assigned to Pin 16.

984 Format

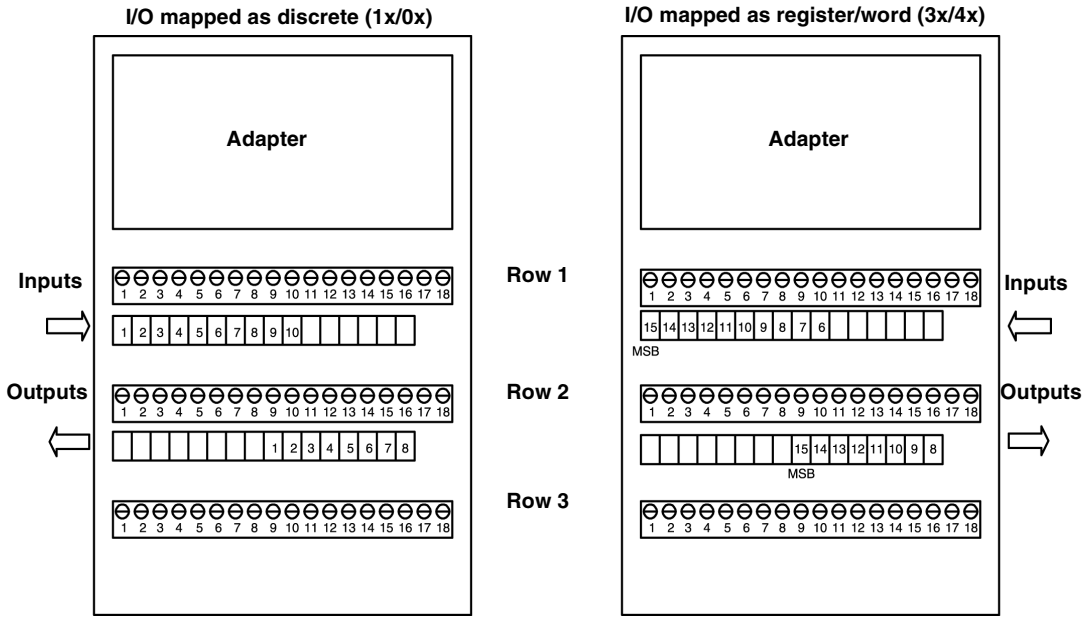

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADM 540 80 120 VAC - 6 Pt. In / 3 Pt. Out Discrete MCC Module Base

21

Overview

Purpose

This chapter describes the 170 ADM 540 80 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	308
Specifications	310
Internal Pin Connections	314
Field Wiring Guidelines	315
Wiring Diagrams	318
I/O Mapping	319
General Modbus Message Rules	321
Output Words	324
Output Words Control Modes	328
Input Words	334
Input Words Control Modes	336

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains a photograph of the front panel of the 170 ADM 540 80 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below.

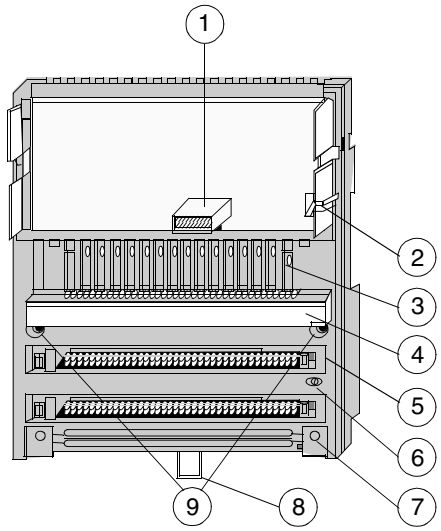


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Protective cover
5	Sockets for the terminal connectors
6	Grounding screw
7	Busbar mounting slot
8	Locking tab for DIN rail mount
9	Mounting holes for panel mount

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

The LEDs are shown in the illustration below.

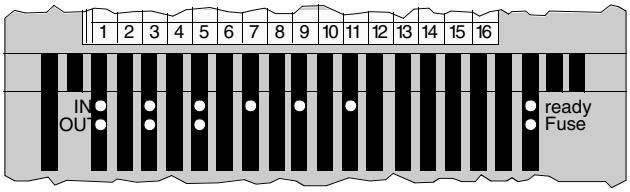

LED Descriptions

The LEDs are described in the table below.

Indicator	Condition	Message
Ready	Green	Module has power
	Off	Module has no power. Check the L1 voltage source
FUSE	Green	Output voltage present and fuse 1 (group output) and field power is OK.
	Off	Output voltage not present or fuse 1 or field power is not OK.
IN 1 ... 6	Green	Input status (an LED per input); input point active
	Off	Input status (an LED per input); input point inactive
OUT 1 ... 3	Green	Output status (an LED per output); output point active
	Off	Output status (an LED per output); output point inactive

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADM 540 80 I/O base.

General Specifications

General Specifications

Module type	6 inputs / 3 outputs, 120VAC
Operating Voltage	120 VAC
Range	85 ... 132 VAC @ 47 ... 63 Hz
Current	125 mA

Isolation

Isolation

Point to Point	None
I.O points to communication adapter	1250V RMS for one minute
Module field power to communication adapter	1250V RMS for one minute
Module power to I.O field power	1250V RMS for one minute
Field input to field input	1250V RMS for one minute
Modbus Port RS485 to communication adapter	Not isolated

Fuses

Fuses

Internal (replaceable)	2.5 A slow-blow (Wickmann 195125000 or equivalent)
Internal (non-replaceable)	200 mA slow-blow
External (field power)	2 A slow-blow (Wickmann 195120000 or equivalent)
External (module power)	200 mA slow-blow (Wickmann 195020000 or equivalent)

EMC

EMC for industrial environment

Immunity	IEC 1131-2
Emissions	EN 50082-1
Agency Approvals	UL, CSA, CE FM Class 1, Div. 2 pending

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	52 mm (2.05 in)
Length	141.1 mm (5.6 in) no or one busbar 159.5 mm (6.3 in) two busbars 171.5 mm (6.75 in) three busbars
Weight	284 g (10 oz)

Discrete Inputs

Specifications for discrete inputs

Number of Points	6
Number of Groups	1, Non-isolated
Points per Group	6
For range 47 ... 53 Hz	
ON Voltage Off Voltage ON current OFF current	85VAC 20VAC 5.5mA rms 1.9mA rms
For range 57 ... 63 Hz	
ON Voltage Off Voltage ON current OFF current	79VAC 20VAC 5.5mA rms 1.9mA rms
Absolute Maximum Input	132VAC rms continuous
Input Response	1 line cycle maximum ON to OFF, 1 line cycle maximum OFF to ON
Internal Impedance	12k ohms (nominal) @ 60Hz, predominantly capaci tive
Input Protection	Resistor limited

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete Outputs

Specifications for discrete outputs.

Number of Points	3
Number of Groups	1 fuse group
Points per Group	3
Output Voltage	85 ... 120 ... 132 VACVAC @ 47 ... 63 Hz
Surge Voltage	150 VAC for 10 sec 200 VAC for 1 cycle
On State Voltage Drop	1.5 VAC max @ 0.5 A
Output (Load) Current	0.5 A / point, 1.5 A / module
Minimum Output Current	30 mA
Maximum Surge Current (rms)	7.5 A per point, one cycle 5 A per point, two cycles
Output Protection	RC snubber suppression, varistor
Leakage Current	1.9 mA @ 120 VAC
Applied dV / dT	400 V / microseconds
Response Time	0.5 of one line cycle max OFF to ON 0.5 of one line cycle max ON to OFF

Modbus Port

Specifications for the Modbus port

Baud	9600, 19200
Parity	Even, odd or none
Mode/data bits	8 bit RTU, 7 bit ASCII
Stop bit	1 or 2
Modbus Address	0 ... 247
RS485	2 or 4 wire
Timeout	150ms (after transmission, waiting for reception)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Modbus Port Tests

Modbus port test data

Test	Spec Reference	Conditions/Levels
Radiated	EN61000-4-3	80 ... 1000Mhz, 10V/M
Fast transients	EN61000-4-4	1kV, CM, cap clamp
Surge withstand (transients)	EN61000-4-5	1kV, CM, 42Ω source Z
Electrostatic discharge	EN61000-4-2	8kV, air discharge, 4kV, contact
Conducted RF	ENV61000-4-6	0.15 ... 80Mhz 10 VRMS
Pulsed modulated field	ENV 50140	10V/M

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional one-row busbar.

Illustration

Rows 1 through 3 show the internal connections between terminals on the I/O base. Row 4 shows the internal connections on the optional busbar.

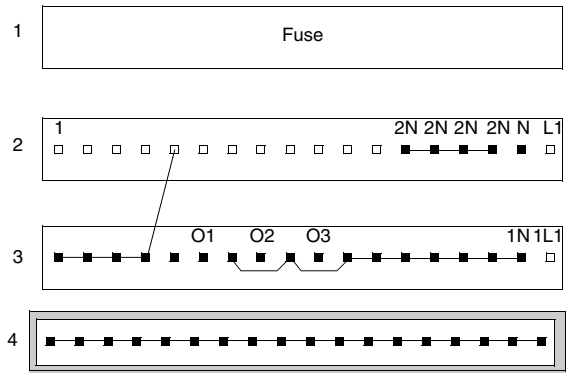

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

Inputs are field wired to row 2 of the base. The outputs are field wired to row 3. This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-row busbar. The following busbars are available from Schneider Automation

Type	Part Number
Screw-in	170 XTS 006 01
Spring-clip	170 XTS 007 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mapping Terminal Blocks

The following table shows mapping terminal blocks and optional busbars

Row	Terminal	Connection	
2	1	RxHi	Modbus Master RS485
	2	RxLo	Modbus Master RS485
	3	TxHi	Modbus Master RS485
	4	TxLo	Modbus Master RS485
	5	PE	Earth Ground
	6	-	Not Used
	7 ... 12	I1 ... I6	Inputs 1 ... 6
	13 ... 16	2N	Voltage for input field devices, Neutral
	17	N	Module operating voltage, Neutral
	18	L1	Module operating voltage, Line
3	1 ... 4	PE	Earth Ground
	5	-	Not Used
	6, 8, 10	O1 ... O3	Outputs 1 ... 3
	7, 9, 11 ... 16	1N	Voltage for output field devices, Neutral
	17	1N	Voltage for output field devices, Neutral
	18	1L1	Voltage for field devices, Line
4	18	PE	Earth Ground

Note: Rows 4, 5, 6 may be added by mounting a separate terminal block to the I/O base at the grounding busbar slot.



CAUTION

VOLTAGE SPIKE MAY BE SUFFICIENT TO DAMAGE OR DESTROY MODULE


If an external switch is wired to control an inductive load in parallel with the module output, then an external varistor (Harris V390ZA05 or equivalent) must be wired in parallel with the switch.

Failure to follow this precaution can result in injury or equipment damage.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Module RS-485 Termination

The illustration below shows how to properly terminate the module's RS-485 connector. Y-wire terminals with 120 Ohm only at each end of the network

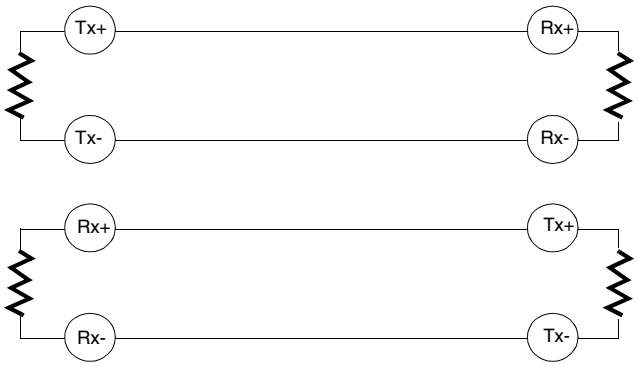

OR: 2 wire the terminals with 120 Ω only at each end of the network.

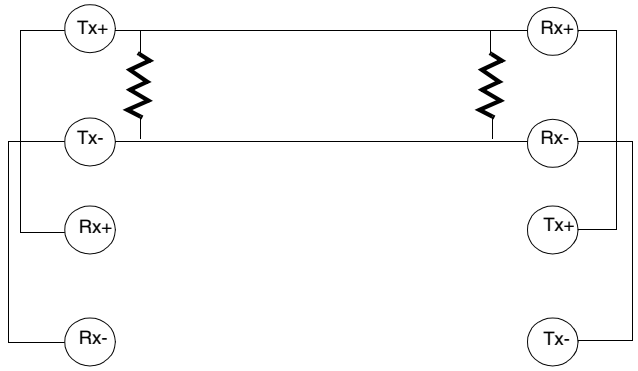

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Wiring Diagrams

Overview

This section contains a diagram to assist you in wiring 2-wire field devices.

2-Wire Devices

The diagram below shows an example of wiring for 2-wire devices.

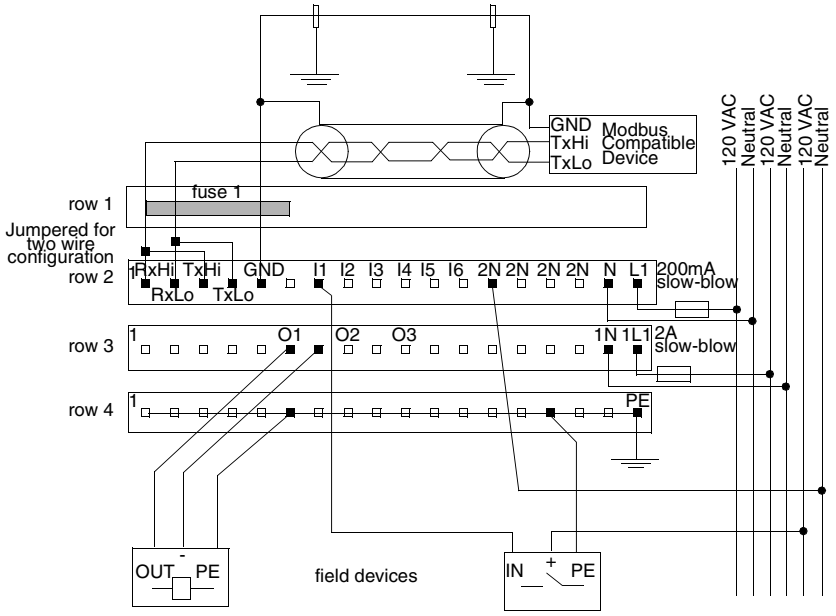

The communication cable should be twisted shielded cable. Tie shield on both ends to earth ground near the associated Modbus equipment

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADM 540 80 TSX Momentum I/O base supports 6 discrete inputs and 3 discrete outputs. This section contains information about the mapping of the I/O data into input words and output words.

I/O Map

This module is I/O mapped as 6 input words and 3 output words. The Processor sends 3 bits of discrete output data to the 170 ADM 540 80 base as a single low byte (8-bits), and the base returns 6 input data bits in a single low byte (8-bits) to the processor. The inputs are field wired to row 2, and the outputs are field wired to row 3 of the base.


IEC vs. Ladder Logic

In order to correctly field wire the inputs/outputs and map the input /output data, you need to know which type of Momentum Adapter is mounted on the base. Adapters are either IEC compliant or 984 Ladder Logic compliant.

	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110.01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Data Mapping The figure below shows how data is mapped.

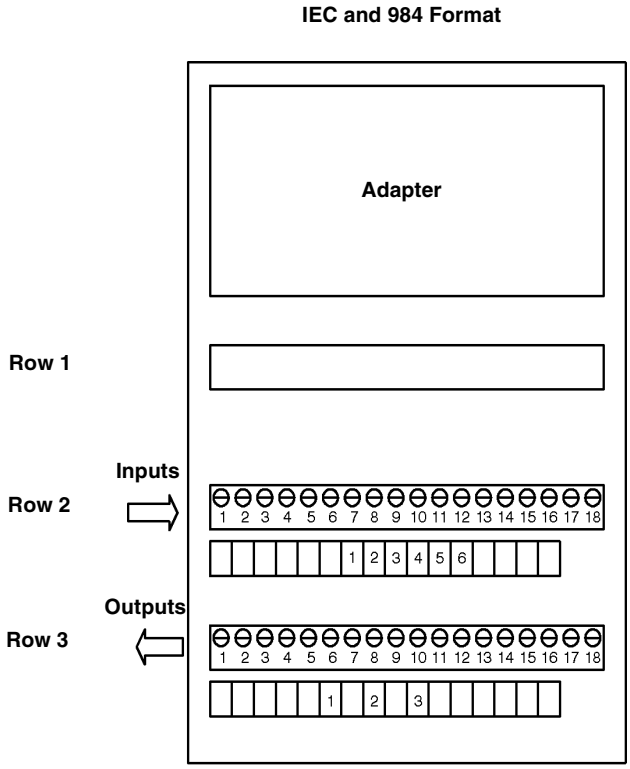

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

General Modbus Message Rules

Purpose	The following rules state what is expected of the user and what the expected response is.
Sequence Numbe	A change in the sequence number starts any and all Modbus transactions. The I/O module contains the last sequence number written and starts with 0 at power-up. The sequence number is echoed to the input buffer after the Modbus message is complete. Continuous read data can be obtained after the first initial read, by incrementing the sequence number only every scan.
Command and Response	See *Output Words Control Modes, p. 328* and *Input Words Control Modes, p. 336*. No more than 4 commands can be requested at any one time (Control Modes 4 ... 8). The response for the requests are returned in the response registers.
Block Read Response	All read commands are contiguous, incrementing up from the starting address to the numbers specified by length.The first read command with a length of zero or a length that is larger than the allocated response buffer will end further Modbus processing and the remainder of the input data field will be zeroed. The first read command starts at the end of the buffer, (words 15 and 16). The first word of the response data is placed in word 5 of the input buffer. After word 5 all read data values fill in consecutively as executed.
Block Write Response	All block write commands (Control Modes 2 and 3) are contiguous, incrementing up from the starting address to the numbers specified by length. Block write commands with a length of zero or a length that is larger than the allocated command buffer will not be executed. However, the read in control mode 3 will be executed regardless of the write command.
Single Write Response	All single write commands (Control Modes 4 ... 8) will be executed. Zero is a legal start address and a legal data value.
Read / Write Commands	All Write commands precede the read response.
Modbus Message Time Out	The Modbus message time out is fixed in the firmware at 200 msec and cannot be altered.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Start Address	Start address of 0 = Modbus register 400001. For example: A Modbus start address of 0 is actually Modbus register 400001. A value of 9 is actually 400010
Modbus Protocol	For a better understanding of Modbus protocol, refer to PI-MBus-300, Modbus Protocol Reference Guide

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

General Modbus Response

The table below lists the possible Modbus response codes

Response	Code
Illegal function	01 Hex
Illegal data address	02 Hex
Illegal data value	03 Hex
Device failure	04 Hex
Acknowledge	05 Hex
Busy, message rejected	06 Hex
Bad Modbus state Rcv_int	1C Hex
Bad comm state trn_asc	1F Hex
Bad comm state trn_rtu	1D Hex
Bad comm state rcv_asc	20 Hex
Command buffer full error	21 Hex
Bad comm state rcv_rtu	22 Hex
Bad frame type put_chr	23 Hex
Bad transmit comm state	25 Hex
Bad receive comm state	26 Hex
Bad Modbus state tmr0_evt	27 Hex
3 char timeout ASCII mode	28 Hex
No message requested	29 Hex
Bad data length	2A Hex
CRC error	2B Hex
Illegal control mode (> 8)	2C Hex
Control mode 0 failed	30 Hex
Control mode 1 failed	31 Hex
Control mode 2 failed	32 Hex
Control mode 3 failed	33 Hex
Control mode 4 failed	34 Hex
Control mode 5 failed	35 Hex
Control mode 6 failed	36 Hex
Control mode 7 failed	37 Hex
Control mode 8 failed	38 Hex
Message Mismatch	50 Hex
Message accepted	55 Hex

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Output Words

Output Words 4x ... 4x + 15

16 words of output data are used for 3 120VAC output points and commands for the Modbus master device
The following table shows the function of the Output Words

Output Words		
Word 1	Sequence #	
Word 2	Output configuration	AC output
Word 3	Control mode	
Word 4	Port configuration	Slave Node
Word 5 ... 16	Message data field	

Depending on how the application is written, moving a block of data to the registers which includes a change in the sequence number is acceptable

Output Word 1

- Valid settings are 1 ... FFFF
- The module defaults to zero at power-up (module shut down)
- Whenever the module is set to zero, it goes to the module shut down state.
- When the value in the first output word is not equal to the first input word then a Modbus message will be sent. When they are equal, there will be no message activity.
- A change in the sequence word value starts the Modbus command execution. It is your responsibility to change the output data for the Modbus message. The sequence number must be the last word of information written in order to ensure Modbus messages are correctly handled.



CAUTION

Zero is an illegal sequence number.

A zero value in word one will cause an output shut down state.

Failure to follow this precaution can result in injury or equipment damage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Module Shut Down Definition

The Module shut down behaviour may be set to:

- Hold last value, OR
- User defined, OR
- Minimum output (OFF)

Note: When the sequence number is 1 ... FFFF, the, 120 VAC output and input data are collected every scan and are not affected by the sequence number. A sequence number of zero causes shutdown status but inputs continue to be updated.

Output Word 2

Output word 2 contains 3 bits of 120 VAC discrete output data, 3 bits of user defined output data shut down values and 2 bits for user shut down state.

Word 2 High Byte (Shut down states)	
Bit 15	0= Shut down state minimum output 1= Check bit 14 for shut down state
Bit 14	0= Hold last value (shut down state) 1= User defined (shut down state)
Bit 13 ... 11	Not used
Bit 10	User defined value for output 3 (shut down)
Bit 9	User defined value for output 2 (shut down)
Bit 8	User defined value for output 1 (shut down)

Word 2 Low Byte (120 VAC output data)	
Bit 7 ... 3	Not used
Bit 2	Output 3
Bit 1	Output 2
Bit 0	Output 1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Output Word 3 See . Output word 3 contains the Modbus message control mode

Word 3 Control Modes			
Mode	Value	Function	Description
Mode 0	0	Idle	No Modbus activity. Input buffer to zero
Mode 1	1	Modbus message	The I/O module executes the data field from a user-defined Modbus message
Mode 2	2	Block write	The I/O module performs a block write command (Modbus function code 16)
Mode 3	3	Block write and Block read	The I/O module performs mode 2 plus a block read command
Mode 4	4	4 single writes	The I/O module performs 4 Modbus function code 06 commands (single writes)
Mode 5	5	3 single writes and 1 block read	The I/O module performs 3 Modbus function code 06 commands (single writes) and Modbus function code 03 (1 block read command)
Mode 6	6	2 single writes and 2 block reads	The I/O module performs 2 Modbus function code 06 commands (single writes) and Modbus function code 03 (2 block read commands)
Mode 7	7	1 single writes and 3 block reads	The I/O module performs 1 Modbus function code 06 commands (single writes) and Modbus function code 03 (3 block read commands)
Mode 8	8	4 block reads	The I/O module performs Modbus function code 03 (4 block read commands)
Others	-	Illegal command	Response = illegal control mode

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Output Word 4

Output word 4 contains the port configuration parameters (High byte) and the Modbus slave address (Low byte)

Word 4 - Port Configuration	
High Byte	
Bit 15	0= 1 stop bit 1= 2 stop bits
Bit 14	0= 7 data bits 1= 8 data bits
Bit 13	0= no parity 1= parity enabled
Bit 12	0= odd parity 1= even parity
Bits 11 ... 8	0010= 19.2 baud others= 9600 baud
Low Byte	
Bits 7 ... 1	Modbus slave node address

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Output Words Control Modes

Purpose

This section describes output words 5 ... 16 control modes.

Output Words 5 ... 16

Output words 5 ... 16 are used as data for specific control modes

Note: Be sure you read *General Modbus Message Rules, p. 321*

Output Words Mode Memory Allocation

Output word modes are used for message data. The table below describes the specific memory allocation for each control mode.

Control Mode 0

Control Mode 0 - Idle, Clear Response Buffer

Word 1	Sequence #	
Word 2	Output Configuration	Output
Word 3	**Control Mode 0**	
Word 4	Port Configuration	Slave node address
Words 5 ... 16	**Not used**	

Control Mode 1

Control Mode 1 - Modbus Message

Word 1	Sequence #	
Word 2	Output Configuration	Output
Word 3	**Control Mode 1**	
Word 4	Port Configuration	**Message length**
Words 5 ... 16	**12 words of message output data**	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Control Mode 2 Control Mode 2 - Block Write

Word 1	Sequence #	
Word 2	Output Configuration	Output
Word 3	**Control Mode 2**	
Word 4	Port Configuration	Slave node address
Word 5	**Start address - value of 0 = 400001**	
Word 6	**Number of data words, 1 ... 10 are valid**	
Words 7 ... 16	**10 words of message output data**	

Control Mode 3 Control Mode 3 - 1 Block Write And 1 Block Read Command

Word 1	Sequence #	
Word 2	Output Configuration	Output
Word 3	**Control Mode 3**	
Word 4	Port Configuration	Slave node address
Word 5	**First write command address - value of 0 = 400001**	
Word 6	**Number of data words, 1 ... 8 are valid**	
Words 7 ... 14	**8 words of message output data**	
Word 15	**First read command address**	
Word 16	**Number of data words to read, 1 ... 12 are valid**	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Control Mode 4 Control Mode 4 - 4 Single Write Commands

Word 1	Sequence #	
Word 2	Output Configuration	Output
Word 3	**Control Mode 4**	
Word 4	Port Configuration	Slave node address
Word 5	**First single write command address - value of 0 = 400001**	
Word 6	**1 word of message output data**	
Word 7	**Second single write command address - value of 0 = 400001**	
Word 8	**1 word of message output data**	
Word 9	**Third single write command address - value of 0 = 400001**	
Word 10	**1 word of message output data**	
Word 11	**Fourth single write command address - value of 0 = 400001**	
Word 12	**1 word of message output data**	
Words 13 ... 16	**Not used**	

Control Mode 5 Control Mode 5 - 3 Single Writes and 1 Block Read Command

Word 1	Sequence #	
Word 2	Output Configuration	Output
Word 3	**Control Mode 5**	
Word 4	Port Configuration	Slave node address
Word 5	**First single write command address - value of 0 = 400001**	
Word 6	**1 word of message output data**	
Word 7	**Second single write command address - value of 0 = 400001**	
Word 8	**1 word of message output data**	
Word 9	**Third single write command address - value of 0 = 400001**	
Word 10	**1 word of message output data**	
Words 11 ... 14	**Not used**	
Word 15	**First block read command address**	
Word 16	**Number of data words to read, 1 ... 12 are valid**	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Control Mode 6 Control Mode 6 - 2 Single Writes And 2 Block Read Commands

Word 1	Sequence #	
Word 2	Output Configuration	Output
Word 3	**Control Mode 6**	
Word 4	Port Configuration	Slave node address
Word 5	**First single write command address - value of 0 = 400001**	
Word 6	**1 word of message output data**	
Word 7	**Second single write command address - value of 0 = 400001**	
Word 8	**1 word of message output data**	
Words 9 ... 12	**Not used**	
Word 13	**Second block read command address**	
Word 14	**Number of data words to read**	
Word 15	**First block read command address**	
Word 16	**Number of data words to read**	

Note: With control mode 6, words 14 and 16 combined length must be 1 ... 12.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Control Mode 7 Control Mode 7 - 1 Write And 3 Block Read Commands

Word 1	Sequence #	
Word 2	Output Configuration	Output
Word 3	**Control Mode 7**	
Word 4	Port Configuration	Slave node address
Word 5	**First single write command address - value of 0 = 400001**	
Word 6	**1 word of message output data**	
Words 7 ... 10	**Not used**	
Word 11	**Third block read command address**	
Word 12	**Number of data words to read**	
Word 13	**Second block read command address**	
Word 14	**Number of data words to read**	
Word 15	**First block read command address**	
Word 16	**Number of data words to read**	

Note: With control mode 7, words 14 and 16 combined length must be 1 ... 12.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Control Mode 8 Control Mode 8 - 4 Block Read Commands

Word 1	Sequence #	
Word 2	Output Configuration	Output
Word 3	**Control Mode 8- 4 block read commands**	
Word 4	Port Configuration	Slave node address
Words 5 ... 8	**Not used**	
Word 9	**Fourth block read command address**	
Word 10	**Number of data words to read**	
Word 11	**Third block read command address**	
Word 12	**Number of data words to read**	
Word 13	**Second block read command address**	
Word 14	**Number of data words to read**	
Word 15	**First block read command address**	
Word 16	**Number of data words to read**	

Note: With control mode 8, words 10, 14 and 16 combined length must be 1 ... 12.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Input Words

Purpose

This section describes input words.

Input Words 3x ... 3x + 15

16 words of input data are used for 6 120VAC input points and the Modbus master response buffer.
Input Words Control Mode 1

Word 1	Sequence #	
Word 2	Status	AC input
Word 3 ... 16	Message response data field	

Input Words Control Modes 2 ... 8

Word 1	Sequence #	
Word 2	Status	AC input
Word 3	Message 1 response	Message 2 response
Word 4	Message 3 response	Message 4 response
Word 5 ... 16	Message response data field	

Input Word 1

Input word 1 contains an echo of the sequence number.

- Valid settings are 1 ... FFFF
- Whenever the module is set to zero, it goes to the module shut down state.
- When the value in the first input word is not equal to the output word then a Modbus message will be sent. If not, when they are equal, there will be no message activity.
- A change in the sequence word value starts the Modbus command execution. It is your responsibility to change the output data for the Modbus message. The sequence number must be the last word of information written in order to ensure Modbus messages are correctly handled.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Input Word 2

Input word 2 contains 6 bits of 120 VAC input data and 8 bits for module status.
Input Word 1 High Byte (Status).

Bit 15 (MSB)	0= message processing done 1= message in process
Bit 14	Copy of output 3
Bit 13	Copy of output 2
Bit 12	Copy of output 1
Bit 11	Not used
Bit 9	1= fuse ok 0= fuse blown
Bit 8	1= module healthy 0= module not healthy

Input Word 1 Low Byte (Input Data Values).

Bit 7 ... 6	Not used
Bit 5	Input 6
Bit 4	Input 5
Bit 3	Input 4
Bit 2	Input 3
Bit 1	Input 2
Bit 0 (LSB)	Input 1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Input Words Control Modes

Purpose

This section describes input words control modes.

Input Words 3 ... 4

Note: In control mode 0, input words 3 and 4 are zeroed.

Note: The message response code is contained in the Modbus message itself, so control mode 1, input buffer words 3 ... 16 are used as the actual message.

Note: For control modes 2 ... 8, all four response fields are present whether used or not. The table below shows the input message responses to words 3 and 4.

Control Modes 2 ... 8

Input Word 3 High Byte	**Input Word 3 Low Byte**
Message 1 response	Message 2 response
Input Word 4 High Byte	**Input Word 4 Low Byte**
Message 3 response	Message 4 response

Input Words 5 ... 16

Input words 5 ... 16 contain Modbus message response data.

Note: Refer to *General Modbus Message Rules, p. 321*.

Input Words Mode Memory Allocation

The tables below describe the specific memory allocation for each control mode.

Control Mode 0

Control Mode 0 - Idle, Clear Response Buffer

Word 1	Sequence #	
Word 2	Status	6 120Vac inputs
Word 3 ... 16	**Message data field = (00) hex**	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Control Mode 1

Control Mode 1 - Modbus Message

Word 1	Sequence #	
Word 2	Status	6 120Vac inputs
Word 3 ... 16	**Modbus Message data response**	

Control Mode 2 and 4

Control Mode 2 and 4 - Write Commands

Word 1	Sequence #	
Word 2	Status	6 120Vac inputs
Word 3	Message 1 response	Message 2 response
Word 4	Message 3 response	Message 4 response
Word 5 ... 16	**Not used. Input data values are 0**	

Control Mode 3 and 5

Control Mode 3 and 5 - 1 Write Command and 1 Block Read Command

Word 1	Sequence #	
Word 2	Status	6 120Vac inputs
Word 3	Message 1 response	Message 2 response
Word 4	Message 3 response	Message 4 response
Word 5 ... 16	**12 words of message input data**	

Control Mode 6

Control Mode 6 - 2 Single Write Commands and 2 Block Read Commands

Word 1	Sequence #	
Word 2	Status	6 120Vac inputs
Word 3	Message 1 response	Message 2 response
Word 4	Message 3 response	Message 4 response
Word 5 ... 16	**12 words shared between 2 input responses**	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Control Mode 7 Control Mode 7 - 1 Write Command and 3 Block Read Commands

Word 1	Sequence #	
Word 2	Status	6 120Vac inputs
Word 3	Message 1 response	Message 2 response
Word 4	Message 3 response	Message 4 response
Word 5 ... 16	**12 words shared between 3 input responses**	

Control Mode 8 Control Mode 8 - 4 Block Read Commands

Word 1	Sequence #	
Word 2	Status	6 120Vac inputs
Word 3	Message 1 response	Message 2 response
Word 4	Message 3 response	Message 4 response
Word 5 ... 16	**12 words shared between 4 input responses**	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADM 690 50 120 VAC - 10 Pt. In / 8 Pt. Out Module Bases

22

Overview

Purpose

This chapter describes the 170 ADM 690 50 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	340
Specifications	342
Internal Pin Connections	345
Field Wiring Guidelines	346
Wiring Diagrams	348
I/O Mapping	351

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 ADM 690 50 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below.

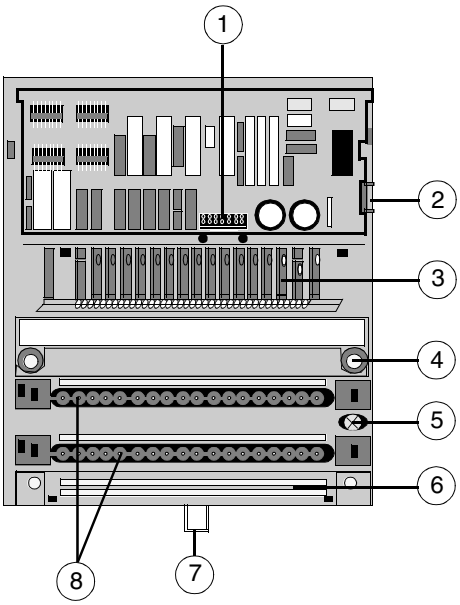


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Mounting holes for panel mount
5	Grounding screw
6	Busbar Mounting Slot
7	Locking tab for DIN rail mount
8	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

TheLEDs are shown in the illustration below.

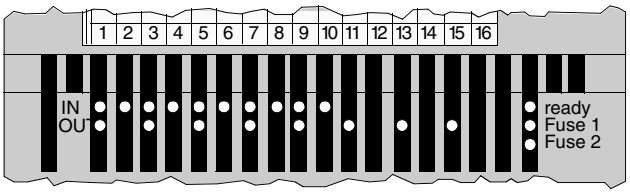

LED Descriptions

The LEDs are described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate. Operating voltage for internal logic (5 V) is present.
	Off	Module not ready.
FUSE 1	Green	Output voltage of outputs 1 ... 4 (one common output voltage for group 1) present and fuse 1 is OK.
	Off	Output voltage of outputs 1 ... 4 (one common output voltage for group 1) is not present and/or fuse 1 is defective
FUSE 2	Green	Output voltage of outputs 5 ... 8 (one common output voltage for group 2) present and fuse 1 is OK.
	Off	Output voltage of outputs 5 ... 8 (one common output voltage for group 2) is not present and/or fuse 1 is defective
Upper row IN 1...10	Green	Input status (an LED per input); Input point active, ie. input carries a 1 signal (logically ON)
	Off	Input status (an LED per input); Input point inactive, ie. input carries a 0 signal (logically OFF)
Middle row OUT 1,3 ,5 ,7 , 9, 11, 13, 15	Green	Output status (an LED per output); Output point active, ie. output carries a 1 signal (logically ON)
	Off	Output status (an LED per output) Output point inactive, ie. Output carries a 0 signal (logically OFF)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADM 690 50 I/O base.

General Specifications

General Specifications

Module type	10 discrete inputs in 1 group 8 triac outputs in 1 group (in 2 fuse groups)
Supply voltage	120 VAC
Supply voltage range	100 ... 132 VAC @ 47...63Hz
Supply current consumption	max. 160 mA at 120 VAC
Power dissipation	6 W + ((# of input points on x .144 W) + (# of output points on x .75 W))
I/O map	1 input word 1 output word

Isolation

Isolation

Input to input	none
Output group to output group	none
Input to output group	125 VAC, tested with 1780 VAC
Field to communication adapter	125 VAC, tested with 1780 VAC

Fuses

Fuses

Internal	Wickman 19195-2.5 ANote If you replace this fuse, you must use a Ferraz type W 020547 (UL listed).
External: operating voltage (L1)	315 mA fast-blow, 250 V
External: input voltage (2L1)	max. 4 A fast-blow, 250 V
External: output voltage (1L1)	According to the supply of the connected actuators– not to exceed 8 A slow-blow

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 2 KV to PE, 1 KV to differential
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1 Div. 2

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3in) two busbars 171.5 mm (6.75in) three busbars
Weight	220 g (0.49 lb)

Discrete Inputs

Specifications for discrete inputs

Number of points	10
Number of groups	1
Signal type	120 VAC
IEC 1131 type	2 (See Appendix *IEC 1131 Input Types, p. 581* for definitions of IEC input types.)
ON voltage	74 AC
OFF voltage	20 AC
Input current	6 mA minimum ON 2.6 mA maximum OFF
Input voltage range	74 ... 132 VAC
Input resistance	4 kOhm
Response time	max. 1/2 x 1/f ms OFF to ON max. 1/2 x 1/f ms ON to OFF

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete Outputs

Specifications for discrete outputs

Output type	Triac
Output supply voltage	120 AC
Output supply voltage range	100 ... 132 VAC
Output voltage	External supply - 1.5 VAC
Number of points	8
Number of groups	1
Points per group	8, but 2 fuses
Current capacity	0.5 A/point maximum, 30 mA/point minimum 2 A/group 4 A/module
Signal type	True High
Leakage current (output out)	< 1.3 mA @120 VAC
On state voltage drop	< 1.5 VAC @ 0.5 A
Fault sensing	One common voltage supply for output 1 .. 4 and output 5 ... 8, each is protected by an internal fuse against short-circuits (but not against overload). Each output is provided with an RC network (normal mode noise voltage rejection) and a Varistor (surge protection).
Fault reporting	none
Error indication	none
Response time (resistive load / 0.5 A)	max. 1/2 x 1/f ms OFF to ON max. 1/2 x 1/f ms ON to OFF
Maximum switching cycles	3000/h for 0.5 A inductive load

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional busbar.

Illustration

Rows 1 through 3 show the internal connections between terminals on the I/O base. Row 4 through 6 show the internal connections on the optional busbar.

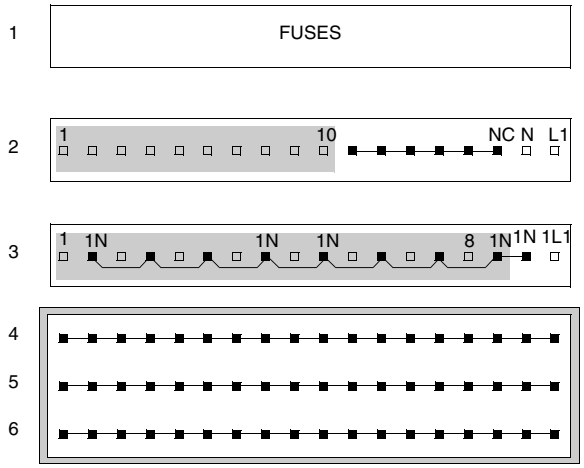

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

Inputs are field wired to row 2 of the I/O base. Outputs are field wired to row 3. This section contains wiring guidelines and precautions for wiring the 170 ADM 690 50 TSX Momentum I/O base.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-, 2-, or 3-row busbar. The following busbars are available from Schneider Automation.

Type	Number of Rows	Part Number
Screw-in	1 - row	170 XTS 006 01
	2 - row	170 XTS 005 01
	3 - row	170 XTS 004 01
Spring-clip	1 - row	170 XTS 007 01
	2 - row	170 XTS 008 01
	3 - row	170 XTS 003 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mapping Terminal Blocks

The folowing table shows mapping terminal blocks and optional busbars

Row	Terminal	Function
1	FUSE 1, FUSE 2	Internal fuses for output voltages
2	1 ... 10	Inputs
	11 ... 16	Connected internally within the row, for general purpose use
	17	Return (N)
	18	120 VAC Operating voltage (L1)
3	1, 3, 5, 7, 9, 11, 13, 15	Outputs
	2, 4, 6, 8, 10, 12, 14, 16	Return (1N) for the actuators
	17	Return for the output voltage
	18	20 ... 132 VAC Output voltage for terminal pins 1 ... 8 (1L1)
4	1 ... 18	120 VAC Input voltage (2L1)
5	1 ... 18	Return (2N) for sensors
6	1 ... 18	Protective earth (PE)



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section provides diagrams to assist you in wiring the following types of devices:

- 2-wire sensor with a 2-wire actuator
- 4-wire sensor with a 3-wire actuator

2-Wire Sensor with a 2-Wire Actuator


The diagram below shows field wiring for a 2-wire sensor and a 2-wire actuator.

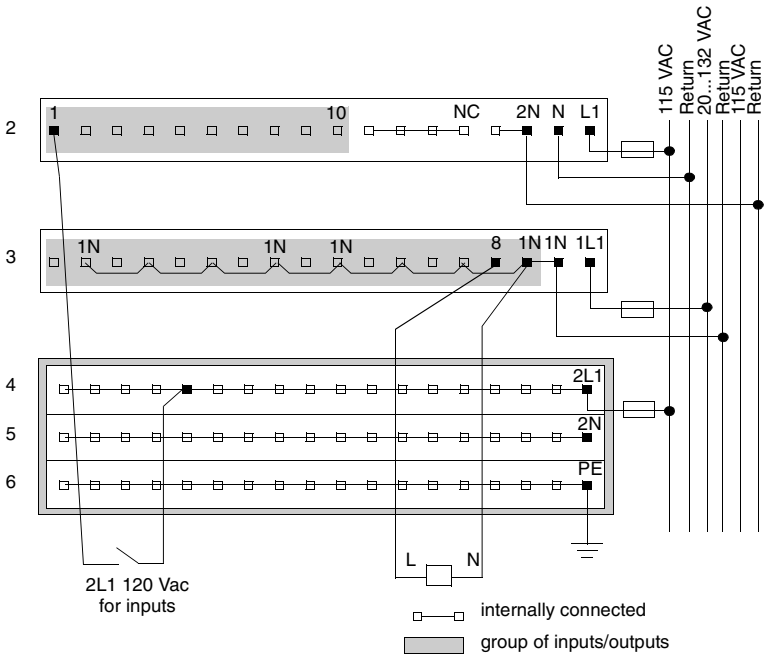

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


4-Wire Sensor with a 3-Wire Actuator

The diagram below shows field wiring for a 4-wire sensor and a 3-wire actuator. When using 3-phase current for supply L1, 1L1 and 2L1 must come from one phase.

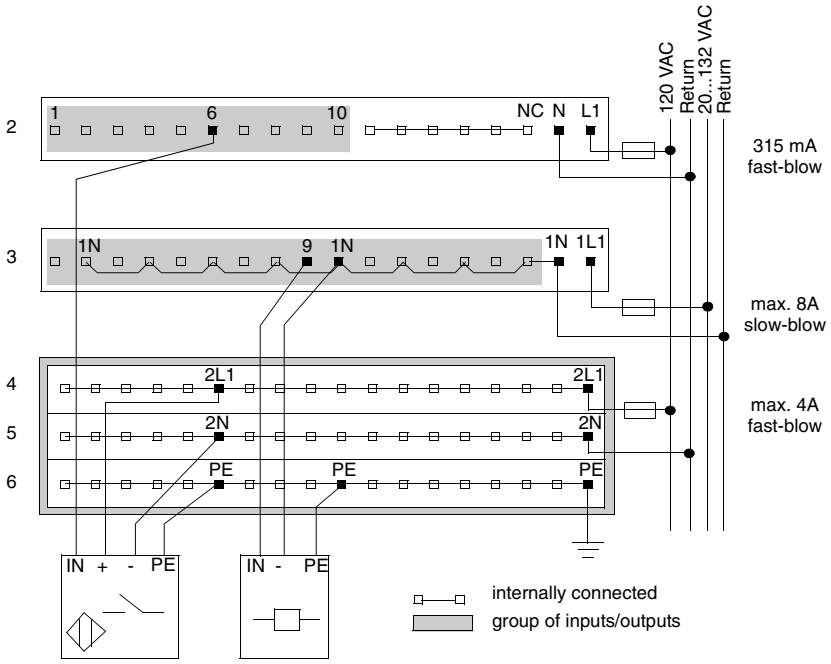

Simplified Input Schematics


The following diagram shows the field-side input circuitry.

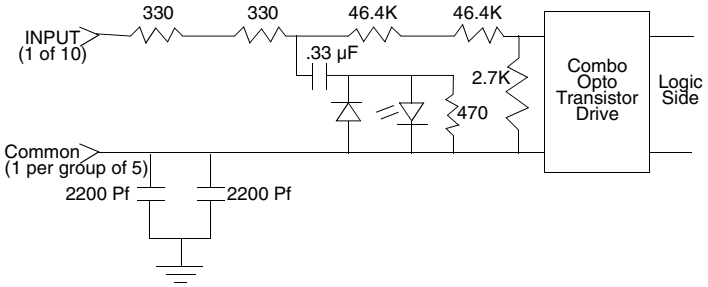

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Simplified Output Schematics

The following diagram shows the field-side output circuitry.

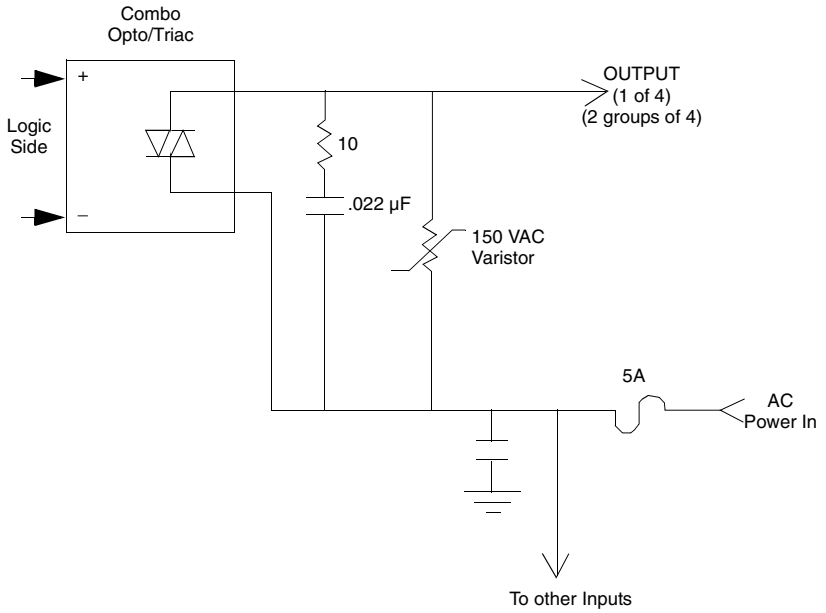

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADM 690 50 TSX Momentum I/O base supports 10 discrete inputs and 8 discrete outputs. This section contains information about the mapping of the I/O data into input words and output words.

I/O Map

The I/O base may be mapped as one input word and one output word, or as 10 discrete input points and 8 discrete output points.

IEC vs. Ladder Logic

In order to correctly field wire the inputs/outputs and map the input /output data, you need to know which type of Momentum Adapter is mounted on the base. Adapters may be either IEC compliant or 984 Ladder Logic compliant.


	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Data Mapping

The figure below shows how data is mapped on the I/O base with an IEC Compliant adapter. When the I/O is mapped as discrete points (1x/0x), the MSB is assigned to Pin1 and the LSB is assigned to Pin 16. When the I/O is mapped as a word or register (3x/4x), the MSB (bit 15) is assigned to Pin 16 and the LSB (bit 0) is assigned to Pin 1.


IEC Format

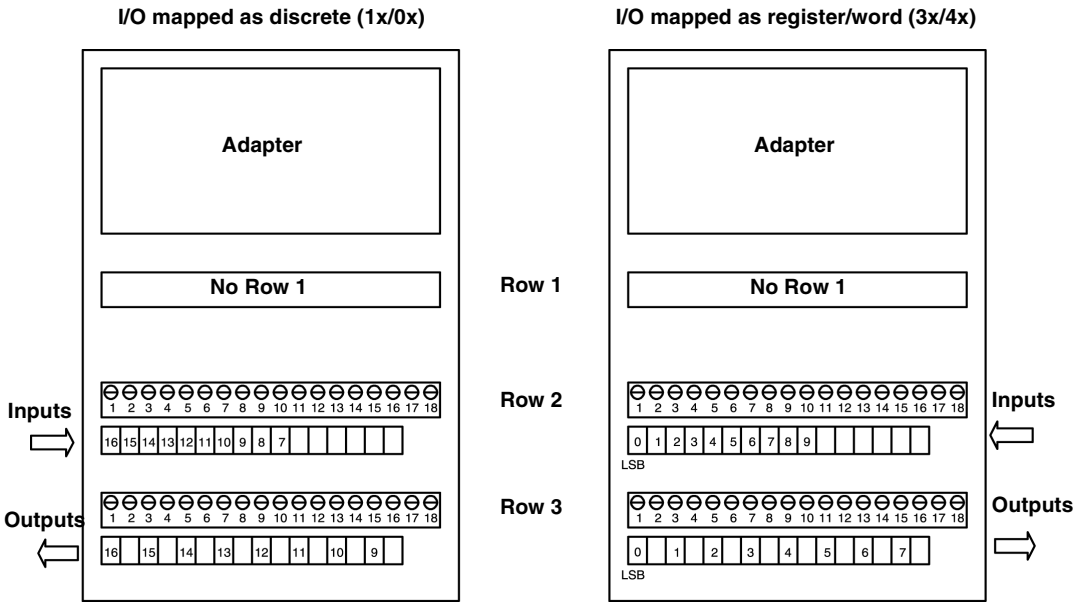

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped on the I/O base with a Ladder Logic Compliant adapter. When the I/O is mapped as discrete points (1x/0x), the MSB is assigned to Pin16 and the LSB is assigned to Pin 1. When the I/O is mapped as a word or register (3x/4x), the MSB (bit 15) is assigned to Pin 1 and the LSB (bit 0) is assigned to Pin 16.

984 Format

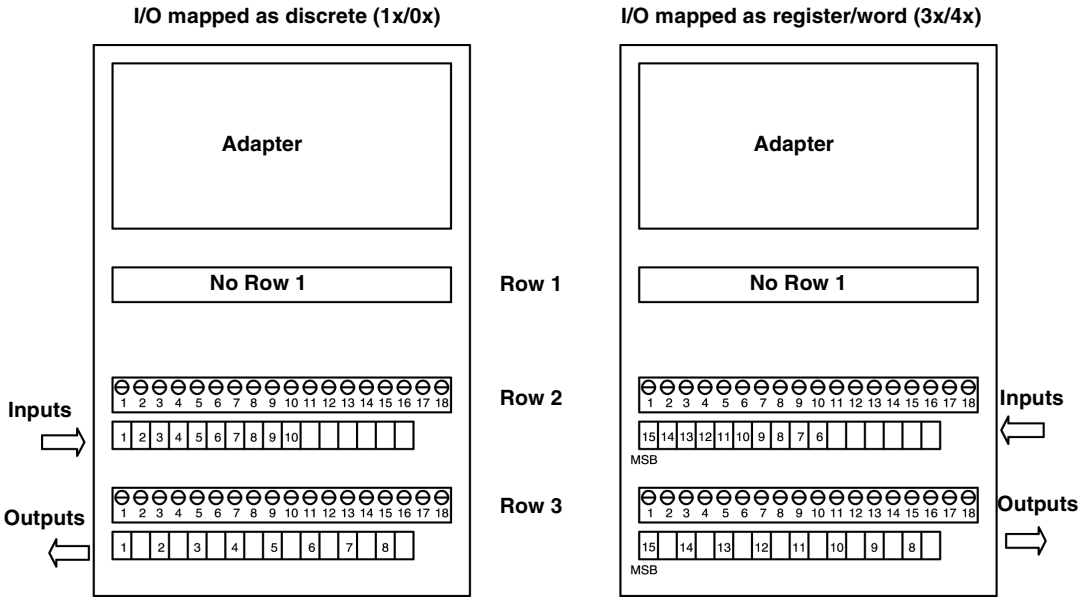

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADM 690 51 120 VAC - 10 Pt. In / 8 Pt. Out Module Bases

23

Overview

Purpose

This chapter describes the 170 ADM 690 51 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	356
Specifications	358
Internal Pin Connections	361
Field Wiring Guidelines	362
Wiring Diagrams	364
I/O Mapping	368

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 ADM 690 51 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below.

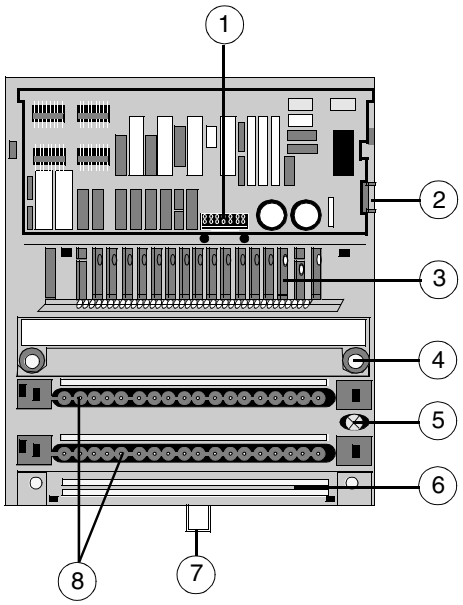


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Mounting holes for panel mount
5	Grounding screw
6	Busbar Mounting Slot
7	Locking tab for DIN rail mount
8	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

TheLEDs are shown in the illustration below.

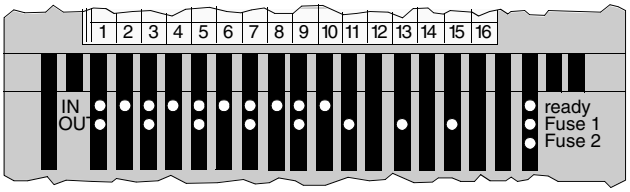

LED Descriptions

The LEDs are described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate. Operating voltage for internal logic (5 V) is present.
	Off	Module not ready.
FUSE 1	Green	Output voltage of outputs 1 ... 4 (one common output voltage for group 1) present and fuse 1 is OK.
	Off	Output voltage of outputs 1 ... 4 (one common output voltage for group 1) is not present and/or fuse 1 is defective
FUSE 2	Green	Output voltage of outputs 5 ... 8 (one common output voltage for group 2) present and fuse 1 is OK.
	Off	Output voltage of outputs 5 ... 8 (one common output voltage for group 2) is not present and/or fuse 1 is defective
Upper row IN 1...10	Green	Input status (an LED per input); Input point active, ie. input carries a 1 signal (logically ON)
	Off	Input status (an LED per input); Input point inactive, ie. input carries a 0 signal (logically OFF)
Middle row OUT 1,3 ,5 ,7 , 9, 11, 13, 15	Green	Output status (an LED per output); Output point active, ie. output carries a 1 signal (logically ON)
	Off	Output status (an LED per output) Output point inactive, ie. Output carries a 0 signal (logically OFF)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADM 690 51 I/O base.

General Specifications

General Specifications

Module type	10 discrete inputs in 1 group 8 triac outputs in 1 group (in 2 fuse groups)
Supply voltage	120 VAC
Supply voltage range	100 ... 132 VAC @ 47...63Hz
Supply current consumption	max. 160 mA at 120 VAC
Power dissipation	6 W + ((# of input points on x .144 W) + (# of output points on x .75 W))
I/O map	1 input word 1 output word

Isolation

Isolation

Input to input	none
Output group to output group	none
Input to output group	125 VAC, tested with 1780 VAC
Field to communication adapter	125 VAC, tested with 1780 VAC

Fuses

Fuses

Internal	Wickman 19195-2.5 ANote If you replace this fuse, you must use a Ferraz type W 020547 (UL listed).
External: operating voltage (L1)	315 mA fast-blow, 250 V
External: input voltage (2L1)	max. 4 A fast-blow, 250 V
External: output voltage (1L1)	According to the supply of the connected actuators– not to exceed 8 A slow-blow

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 2 KV to PE, 1 KV to differential
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1 Div. 2

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3in) two busbars 171.5 mm (6.75in) three busbars
Weight	220 g (0.49 lb)

Discrete Inputs

Specifications for discrete inputs

Number of points	10
Number of groups	1
Signal type	120 VAC
IEC 1131 type	2 (See Appendix *IEC 1131 Input Types, p. 581* for definitions of IEC input types.)
ON voltage	74 AC
OFF voltage	20 AC
Input current	6 mA minimum ON 2.6 mA maximum OFF
Input voltage range	74 ... 132 VAC
Input resistance	4 kOhm
Response time	max. 1/2 x 1/f ms OFF to ON max. 1/2 x 1/f ms ON to OFF

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete Outputs

Specifications for discrete outputs

Output type	Triac
Output supply voltage	120 AC
Output supply voltage range	100 ... 132 VAC
Output voltage	External supply - 1.5 VAC
Number of points	8
Number of groups	1
Points per group	8, but 2 fuses
Current capacity	0.5 A/point maximum, 30 mA/point minimum 2 A/group 4 A/module
Signal type	True High
Leakage current (output out)	< 1.3 mA @120 VAC
On state voltage drop	< 1.5 VAC @ 0.5 A
Fault sensing	One common voltage supply for output 1 .. 4 and output 5 ... 8, each is protected by an internal fuse against short-circuits (but not against overload). Each output is provided with an RC network (normal mode noise voltage rejection) and a Varistor (surge protection).
Fault reporting	none
Error indication	none
Response time (resistive load / 0.5 A)	max. 1/2 x 1/f ms OFF to ON max. 1/2 x 1/f ms ON to OFF
Maximum switching cycles	3000/h for 0.5 A inductive load

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional busbar.

Illustration

Rows 1 through 3 show the internal connections between terminals on the I/O base. Row 4 through 6 show the internal connections on the optional busbar.

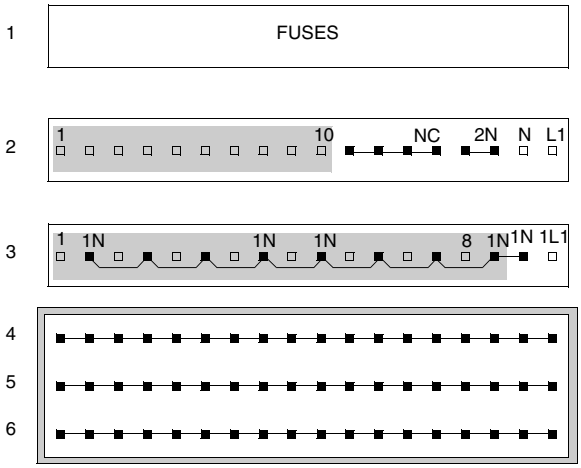

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

Inputs are field wired to row 2 of the I/O base. Outputs are field wired to row 3. This section contains wiring guidelines and precautions for wiring the 170 ADM 690 51 TSX Momentum I/O base.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-, 2-, or 3-row busbar. The following busbars are available from Schneider Automation.

Type	Number of Rows	Part Number
Screw-in	1 - row	170 XTS 006 01
	2 - row	170 XTS 005 01
	3 - row	170 XTS 004 01
Spring-clip	1 - row	170 XTS 007 01
	2 - row	170 XTS 008 01
	3 - row	170 XTS 003 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mapping Terminal Blocks

The folowing table shows mapping terminal blocks and optional busbars.

Row	Terminal	Function
1	FUSE 1, FUSE 2	Internal fuses for output voltages
2	1 ... 10	Inputs
	11 ... 14	Connected internally within the row, for general purpose use
	15 ... 16	2N for inputs
	17	Return (N)
	18	120 VAC Operating voltage (L1)
3	1, 3, 5, 7, 9, 11, 13, 15	Outputs
	2, 4, 6, 8, 10, 12, 14, 16	Return (1N) for the actuators
	17	Return for the output voltage
	18	20 ... 132 VAC Output voltage for terminal pins 1 ... 8 (1L1)
4	1 ... 18	120 VAC Input voltage (2L1)
5	1 ... 18	Return (2N) for sensors
6	1 ... 18	Protective earth (PE)



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section provides diagrams to assist you in wiring the following types of devices:

- 2-wire sensor with a 2-wire actuator
- 4-wire sensor with a 3-wire actuator
- Wiring a 170 ADM 690 51 as a 170 ADM 690 50

2-Wire Sensor with a 2-Wire Actuator


The diagram below shows field wiring for a 2-wire sensor and a 2-wire actuator.

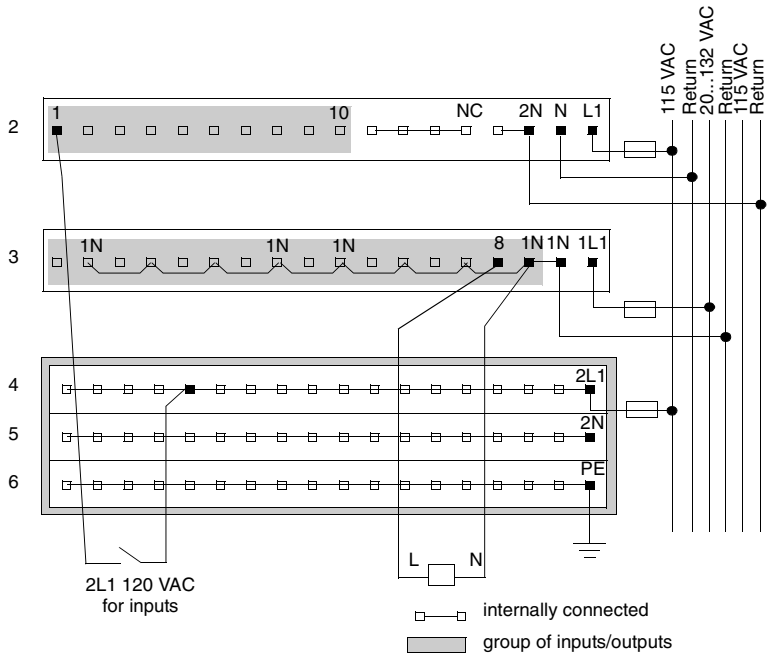

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-Wire Sensor with a 3-Wire Actuator


The diagram below shows field wiring for a 4-wire sensor and a 3-wire actuator. When using 3-phase current for supply L1, 1L1 and 2L1 must come from one phase.

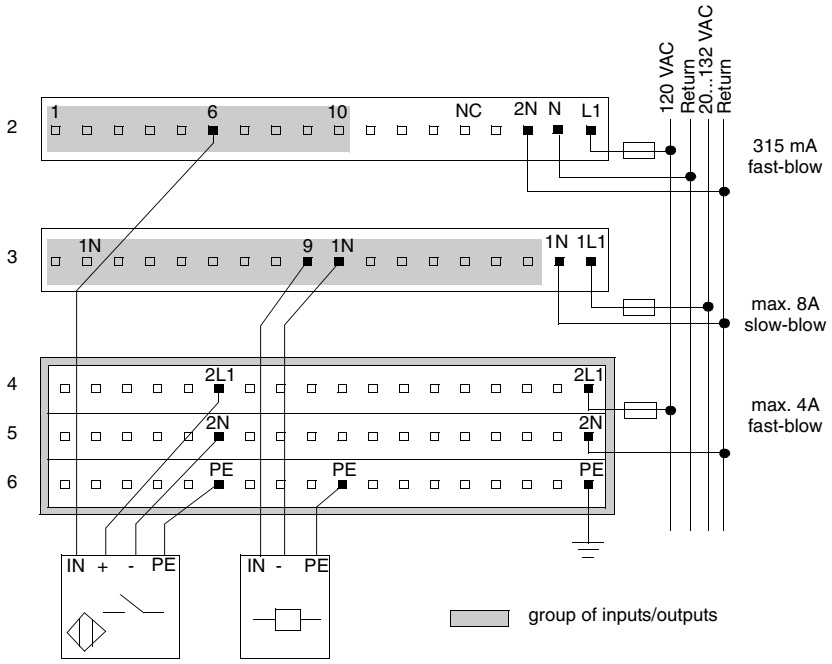

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Wiring a 170 ADM 690 51 as a 170 ADM 690 50

The following diagram shows the field-side input circuitry.

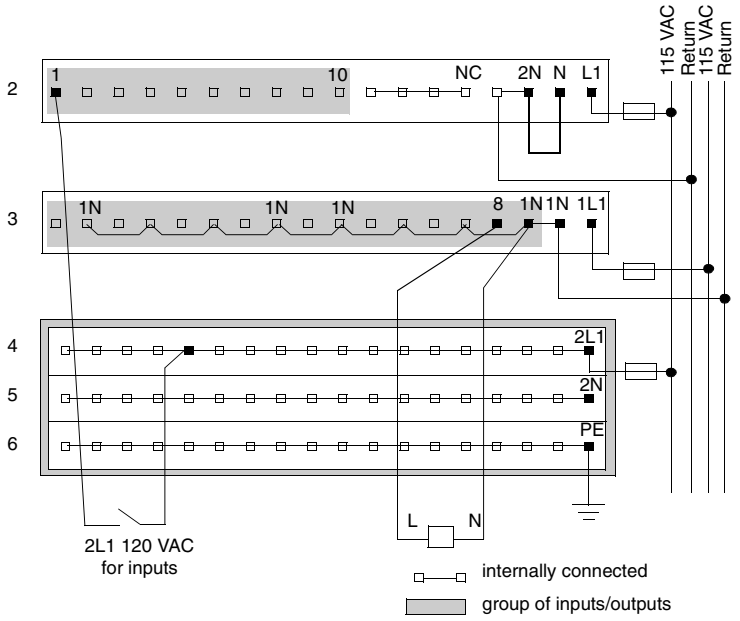

Simplified Input Schematics


The following diagram shows the field-side input circuitry.

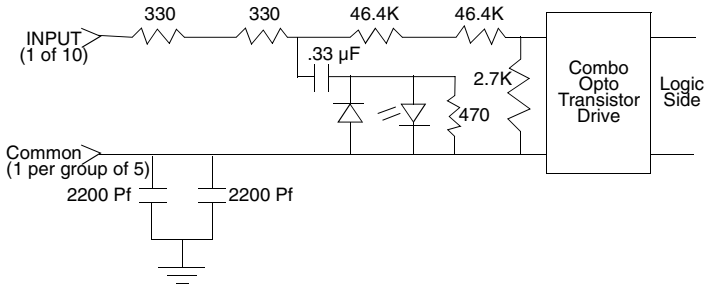

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Simplified Output Schematics

The following diagram shows the field-side output circuitry.

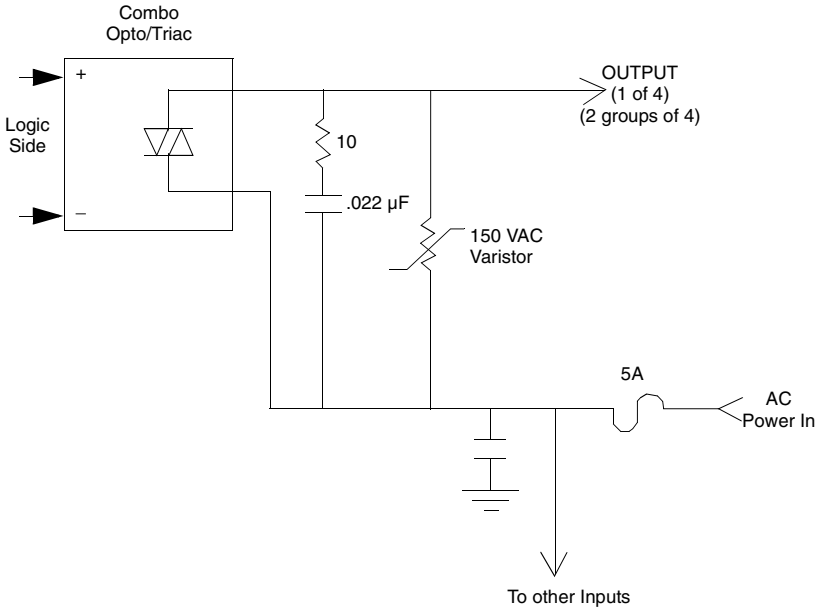

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADM 690 51 TSX Momentum I/O base supports 10 discrete inputs and 8 discrete outputs. This section contains information about the mapping of the I/O data into input words and output words.

I/O Map

The I/O base may be mapped as one input word and one output word, or as 10 discrete input points and 8 discrete output points.

IEC vs. Ladder Logic

In order to correctly field wire the inputs/outputs and map the input/output data, you need to know which type of Momentum Adapter is mounted on the base. Adapters may be either IEC compliant or 984 Ladder Logic compliant.


	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Data Mapping

The figure below shows how data is mapped on the I/O base with an IEC Compliant adapter. When the I/O is mapped as a discrete (1x/0x), the MSB is assigned to Pin 1 and the LSB is assigned to Pin 16. When the I/O is mapped as a word or register (3x/4x), the MSB (bit 15) is assigned to Pin 16 and the LSB (bit 0) is assigned to Pin 1.


IEC Format

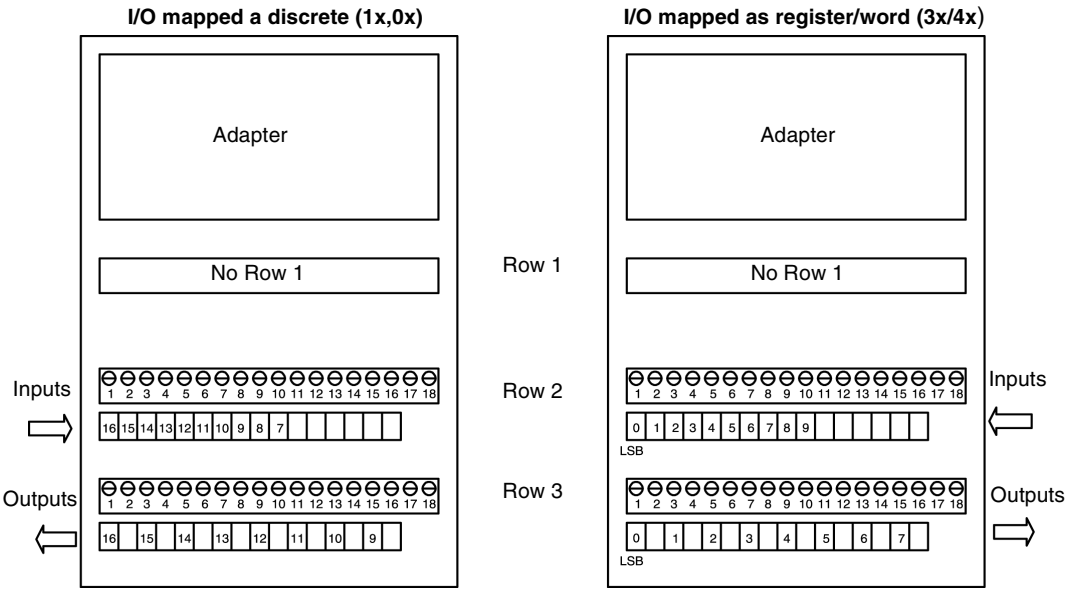

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped on the I/O base with a Ladder Logic Compliant adapter. When the I/O is mapped as a discrete (1x/0x), the MSB is assigned to Pin 16 and the LSB is assigned to Pin 1. When the I/O is mapped as a word or register (3x/4x), the MSB (bit 15) is assigned to Pin 1 and the LSB (bit 0) is assigned to Pin 16.

984 Format

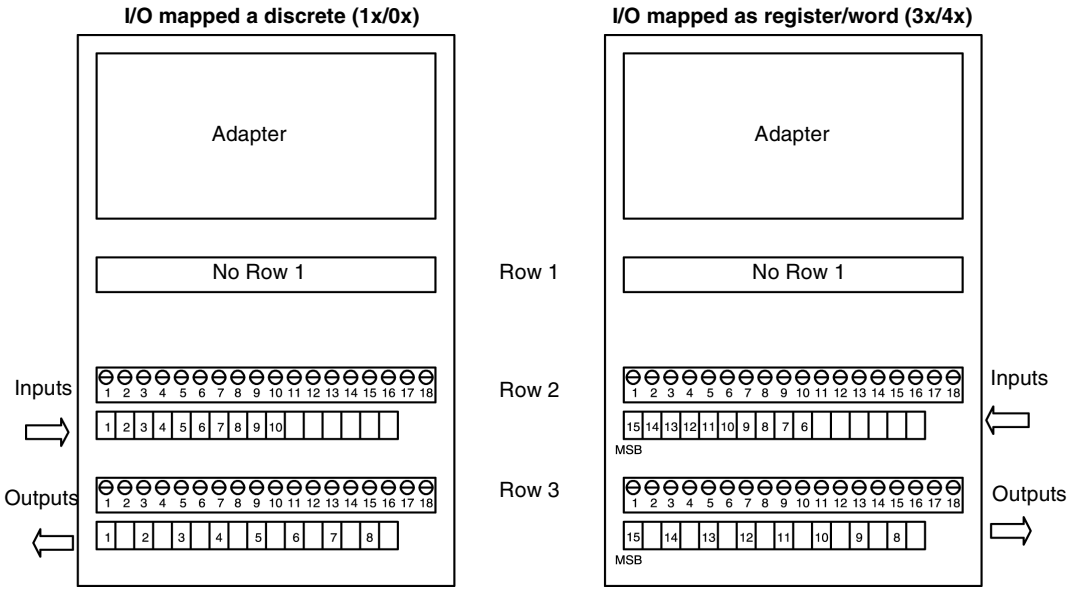

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADO 340 00 24 VDC - 16 Pt. Discrete Output Module Base

24

Overview

Purpose

This chapter describes the 170 ADO 340 00 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	372
Specifications	374
Internal Pin Connections	376
Field Wiring Guidelines	377
Wiring Diagrams	379
I/O Mapping	381

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 ADO 340 00 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below.

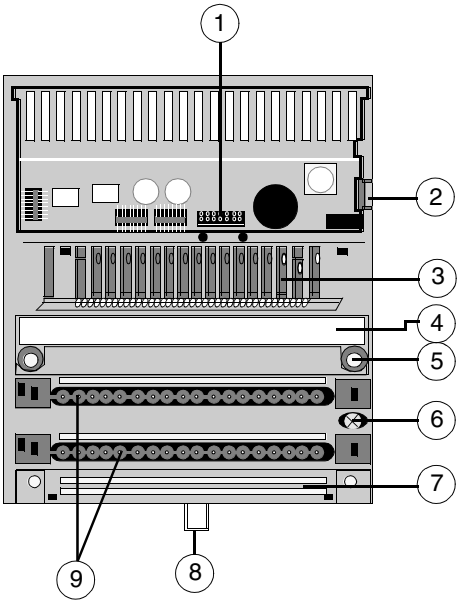


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Protective cover
5	Mounting holes for panel mount
6	Grounding screw
7	Grounding Busbar Mounting Slot
8	Locking tab for DIN rail mount
9	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

The LEDs are shown in the illustration below.

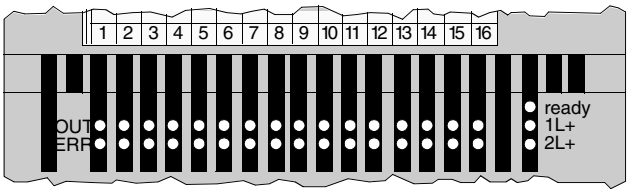

LED Descriptions

The LEDs are described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate. Operating voltage for internal logic (5 V) is present.
	Off	Module not ready.
1L+	Green	Output voltage 1L+ of inputs 1 ... 8 (group 1) is present
	Off	Output voltage of inputs 1 ... 8 (group 1) is not present
2L+	Green	Output voltage 2L+ of inputs 9 ... 16 (group 2) is present
	Off	Output voltage of inputs 9 ... 16 (group 2) is not present
Middle row OUT 1...16	Green	Output status (an LED per output); Output point active, ie. output carries a 1 signal (logically ON)
	Off	Output status (an LED per output); Output point inactive, ie. output carries a 0 signal (logically OFF)
Lower row ERR 1...16	Red	Output overload (an LED per output). Short circuit or overload on the corresponding output.
	Off	Outputs 1 ... 16 operating normally.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADO 340 00 I/O base.

General Specifications

General Specifications

Module type	16 discrete outputs in 2 groups (8 pts/group)
Supply voltage	24 VDC
Supply voltage range	20...30 VDC
Supply current consumption	max. 250 mA at 24 VDC
Power dissipation	6 W + (# of output points on x .25 W)
I/O map	1 output word

Isolation

Isolation

Output group to output group	none
Field to communication adapter	Defined by Communication Adapter type

Fuses

Fuses

Internal	none
External: operating voltage	315 mA fast-blow (Wickmann 193031500 mA or 194031500 mA or equivalent)
External: output voltage	According to the supply of the connected actuators– not to exceed 4 A slow-blow/ group

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 500 V
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1 Div. 2 pending

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3in) two busbars 171.5 mm (6.75in) three busbars
Weight	210 g (0.46 lb)

Discrete Outputs

Specifications for discrete outputs

Output type	Solid state switch
Output supply voltage	24 VDC
Output supply voltage range	20 ... 30 VDC
Output voltage	External supply - .5 VDC
Number of points	16
Number of groups	2
Points per group	8
Current capacity	0.5 A/point maximum 4 A/group 8 A/module
Signal type	True High
Leakage current (output out)	< 1 mA @ 24 VDC
Surge (inrush) current	5 A for 1 ms
On state voltage drop	< 0.5 VDC @ 0.5 A
Fault sensing	Outputs are electronically safeguarded to assist in short circuit and overload protection
Fault reporting	1 red LED/point (row 3) ON when short current/ overload occurs
Error indication	Output overload for at least one output (I/O-Error) to communication adapter
Response time (resistive load / 0.5 A)	< 0.1 ms OFF to ON < 0.1 ms ON to OFF
Maximum switching cycles	1000/h for 0.5 A inductive load 100/s for 0.5 A resistive load 8/s for 1.2 W Tungsten load

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional one-row busbar.

Illustration

Rows 1 through 3 show the internal connections between terminalson the I/O base. Row 4 shows the internal connections on the optional busbar.

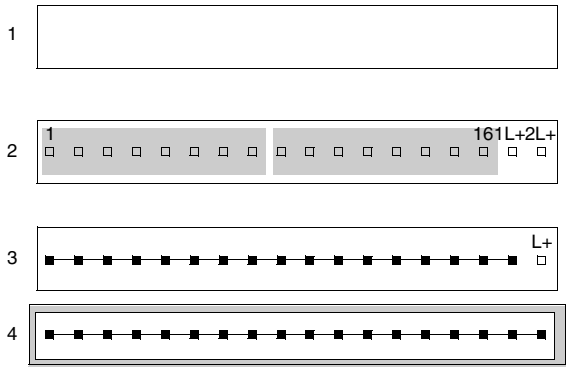

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

The outputs are field wired to row 2 of the base. This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-row busbar. The following busbars are available from Schneider Automation.

Type	Part Number
Screw-in	170 XTS 006 01
Spring-clip	170 XTS 007 01

Mapping Terminal Blocks

The following table shows mapping terminal blocks and optional busbars.

Row	Terminal	Function
1	Not used	
2	1 ... 8	Outputs for group 1
	9 ... 16	Outputs for group 2
	17/18	24 VDC for output groups 1 and 2 (1L+, 2L+)
3	1 ... 16	Return (M-) for outputs
	17	Return (M-) for module and outputs
	18	+ 24 VDC Operating voltage (L+)
4	1 ... 18	Protective earth (PE)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Protective Circuit Required

When contacted switches are used on the input lines or when lines to the peripherals are very long, the outputs of inductive loads require protective circuitry with a clamping/suppressor diode. Install the protective circuit prallel to the operating coil.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section provides diagrams to assist you in wiring the following types of devices:

- 2-wire actuators
- 3-wire actuators

2-Wire Actuators


The diagram below shows an example of wiring for a 2-wire actuator.

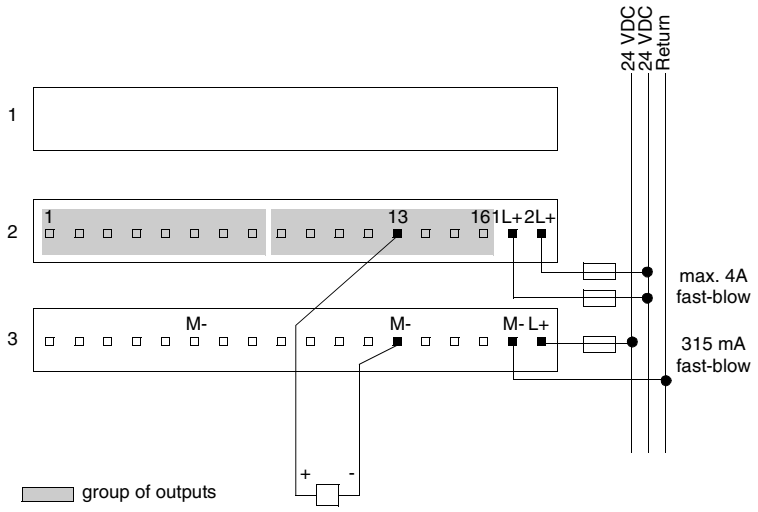

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


3-Wire Actuator

The diagram below shows an example of wiring for 3-wire actuator.

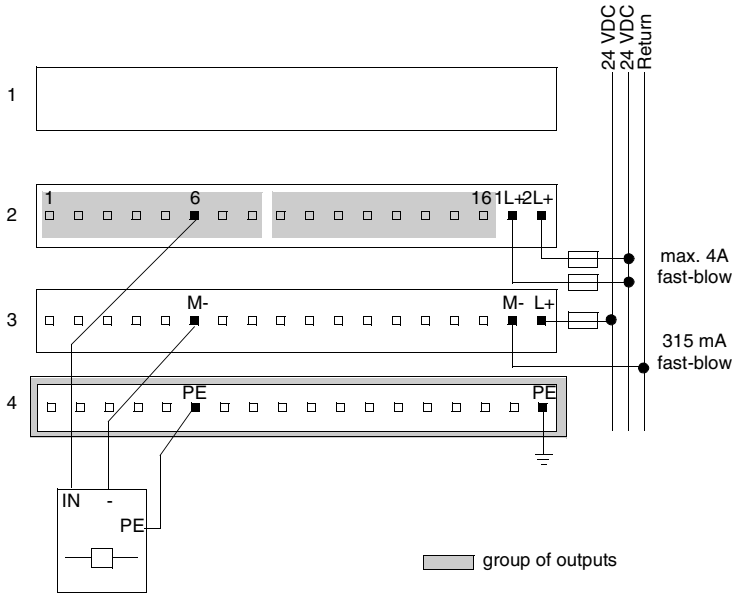

Simplified Schematics

The following diagram shows the field-side output circuitry.

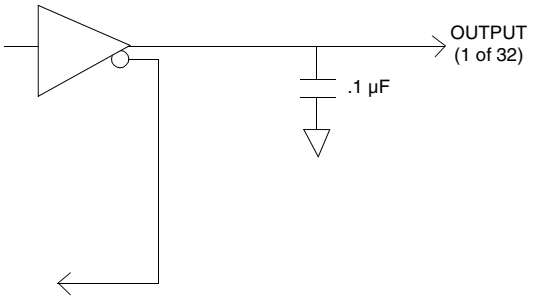

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADO 340 00 TSX Momentum I/O base supports 16 discrete outputs. This section contains information about the mapping of the I/O data into output words.

I/O Map

The I/O base may be mapped as one output word,or as 16 discrete output points.

IEC vs. Ladder Logic


In order to correctly field wire the outputs and map the output data, you need to know which type of Momentum Adapter is mounted on the base.
Adapters may be either IEC or 984 Ladder Logic Compliant.

	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Data Mapping


The figure below shows how data is mapped on the I/O base with an IEC Compliant adapter. When the I/O is mapped as discrete points (0x), the MSB is assigned to Pin 1 and the LSB is assigned to Pin 16. When the I/O is mapped as a word/register (4x), the MSB (bit 15) is assigned to Pin 16 and the LSB (bit 0) is assigned to Pin 1.

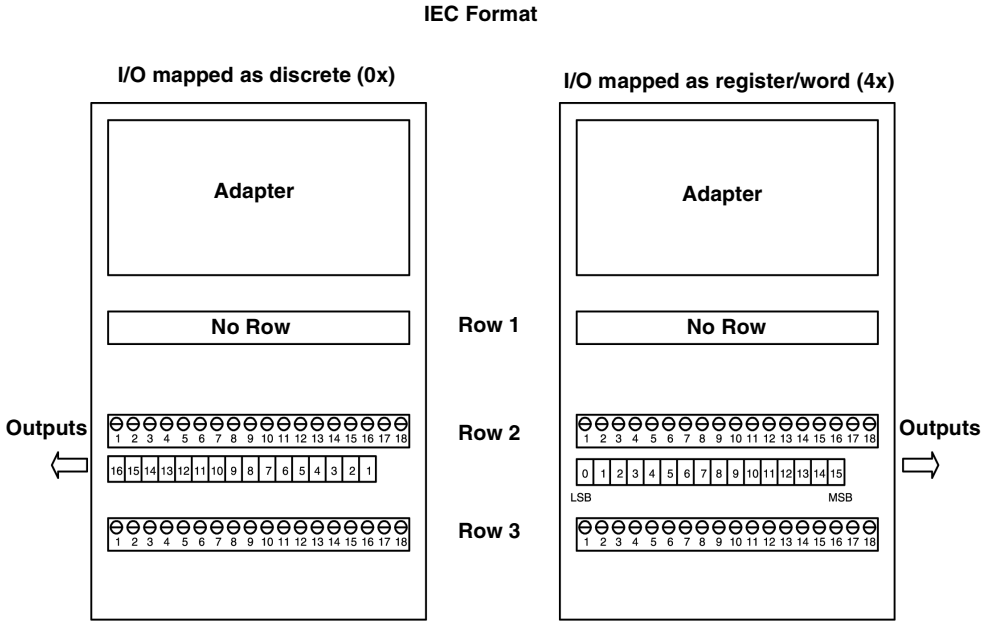

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped on the I/O base with a Ladder Logic Compliant adapter. When the I/O is mapped as discrete points (0x), the MSB is assigned to Pin 16 and the LSB is assigned to Pin 1. When the I/O is mapped as a word/register (4x), the MSB (bit 15) is assigned to Pin 1 and the LSB (bit 0) is assigned to Pin 16.

984 Format

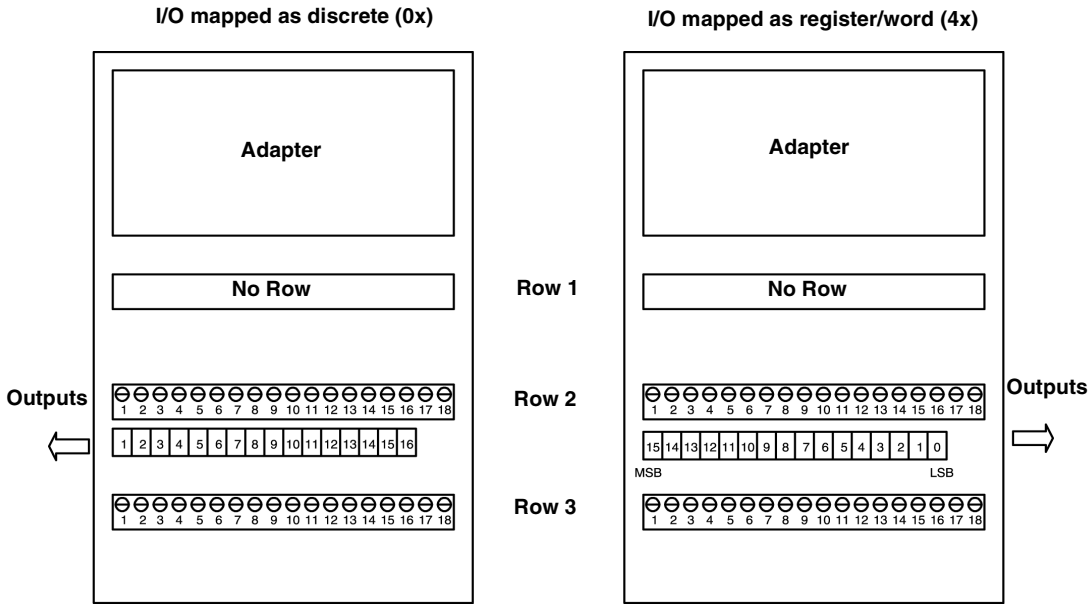

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADO 350 00 24 VDC - 32 Pt. Discrete Output Module Base

25

Overview

Purpose

This chapter describes the 170 ADO 350 00 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	386
Specifications	388
Internal Pin Connections	390
Field Wiring Guidelines	391
Wiring Diagrams	393
I/O Mapping	395

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 ADO 350 00 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below.

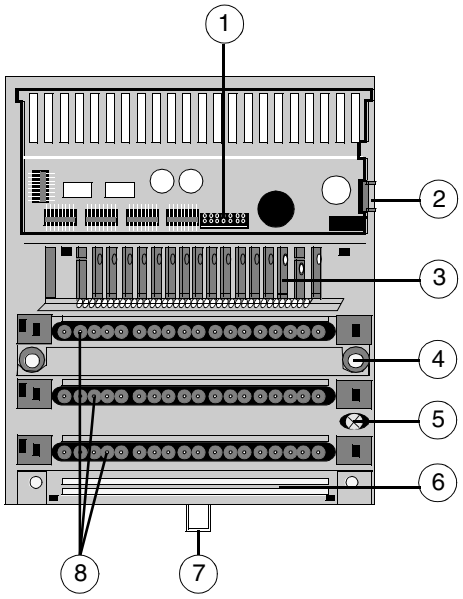


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Mounting holes for panel mount
5	Grounding screw
6	Grounding busbar mounting Slot
7	Locking tab for DIN rail mount
8	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

The LEDs are shown in the illustration below.

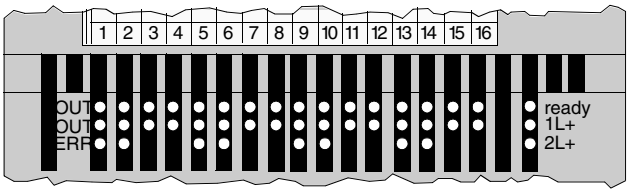

LED Descriptions

The LEDs are described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate. Operating voltage for internal logic (5 V) is present.
	Off	Module not ready.
1L+	Green	Output voltage 1L+ of inputs 1 ... 8 (group 1) is present
	Off	Output voltage of inputs 1 ... 8 (group 1) is not present
2L+	Green	Output voltage 2L+ of inputs 9 ... 16 (group 2) is present
	Off	Output voltage of inputs 9 ... 16 (group 2) is not present
Upper row OUT 1...16	Green	Status of outputs 1 ... 16 (an LED per output); Output point active, ie. output carries a 1 signal (logically ON)
	Off	Status of outputs 1 ... 16 (an LED per output); Output point inactive, ie. output carries a 0 signal (logically OFF)
Middle row OUT 1...16	Green	Status of outputs 17 ... 32 (an LED per output); Output point active, ie. output carries a 1 signal (logically ON)
	Off	Status of outputs 17 ... 32 (an LED per output); Output point inactive, ie. output carries a 0 signal (logically OFF)
Lower row ERR 1, 5, 9, 13	Red	Output overload in group 1 (one LED for every 4 outputs). Short circuit or overload on the corresponding output.
	Off	Outputs 1 ... 16 operating normally.
Lower row ERR 2, 6, 10, 14	Red	Output overload in group 2 (one LED for every 4 outputs). Short circuit or overload on the corresponding output.
	Off	Outputs 7 ... 32 operating normally.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADO 350 00 I/O base.

General Specifications

General Specifications

Module type	32 discrete outputs in 2 groups (16 pts/group)
Supply voltage	24 VDC
Supply voltage range	20...30 VDC
Supply current consumption	max. 250 mA at 24 VDC
Power dissipation	6 W + (# of output points on x .25 W)
I/O map	2 output word

Isolation

Isolation

Output group to output group	none
Field to communication adapter	Defined by Communication Adapter type

Fuses

Fuses

Internal	none
External: operating voltage	315 mA fast-blow (Wickmann 193031500 mA or 1943031500 mA or equivalent)
External: output voltage	According to the supply of the connected actuators– not to exceed 8 A slow-blow/ group

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 500 V
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1 Div. 2 pending

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3in) two busbars 171.5 mm (6.75in) three busbars
Weight	210 g (0.46 lb)

Discrete Outputs

Specifications for discrete outputs

Output type	Solid state switch
Output supply voltage	24 VDC
Output supply voltage range	20 ... 30 VDC
Output voltage	External supply - .5 VDC
Number of points	32
Number of groups	2
Points per group	16
Current capacity	0.5 A/point maximum 8 A/group 16 A/module
Signal type	True High
Leakage current (output out)	< 1 mA @ 24 VDC
Surge (inrush) current	5 A for 1 ms
On state voltage drop	< 0.5 VDC @ 0.5 A
Fault sensing	Outputs are electronically safeguarded to assist in short circuit and overload protection
Fault reporting	1 red LED/point (row 3) ON when short current/ overload occurs
Error indication	Output overload for at least one out put (I/O-Error) to communication adapter
Response time (resistive load / 0.5 A)	< 0.1 ms OFF to ON < 0.1 ms ON to OFF
Maximum switching cycles	1000/h for 0.5 A inductive load 100/s for 0.5 A resistive load 8/s for 1.2 W Tungsten load

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional busbar.

Illustration

Rows 1 through 3 show the internal connections between terminals on the I/O base. Row 4 through 6 show the internal connections on the optional busbar.

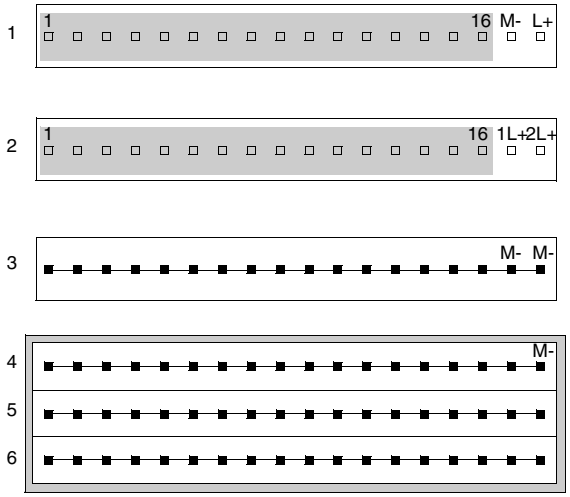

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-, 2-, or 3-row busbar. The following busbars are available from Schneider Automation.

Type	Number of Rows	Part Number
Screw-in	1 - row	170 XTS 006 01
	2 - row	170 XTS 005 01
	3 - row	170 XTS 004 01
Spring-clip	1 - row	170 XTS 007 01
	2 - row	170 XTS 008 01
	3 - row	170 XTS 003 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mapping Terminal Blocks

The following table shows mapping terminal blocks and optional busbars.

Row	Terminal	Function
1	1...16	Outputs for group 1
	17	Return (M-) for the module
	18	+ 24 VDC Operating voltage (L+)
2	1 ... 16	Outputs for group 2
	17/18	+ 24 VDC for output group 1 (1L+) and group 2 (2L+)
3	1 ... 16	Return (M-)for the outputs
	17/18	Return (M-)for the output groups
4	1 ... 18	Return (M-)
5	1 ... 18	Protective earth (PE)
6	1 ... 18	Protective earth



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Protective Circuit May Be Required

When contacted switches are used on the input lines or when lines to the peripherals are very long, the outputs of inductive loads require protective circuitry with a clamping/suppressor diode. Install the protective circuit prallel to the operating coil.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section provides diagrams to assist you in wiring the following types of devices:

- 2-wire actuators
- 3-wire actuators

2-Wire Actuators


The diagram below shows an example of wiring for a 2-wire actuator.

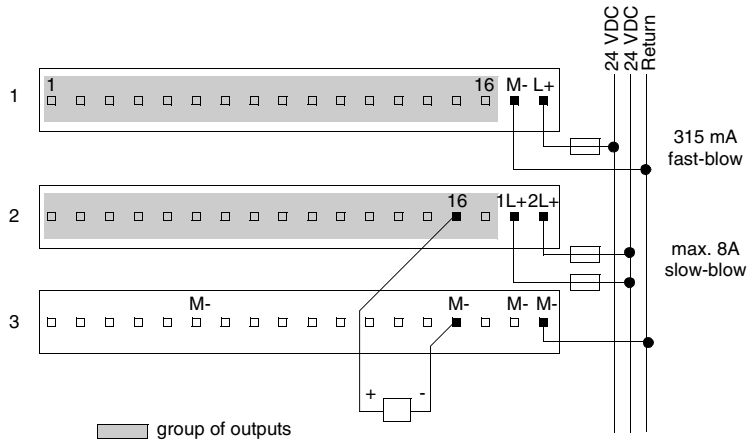

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


3-Wire Actuator

The diagram below shows an example of wiring for 3-wire actuator.

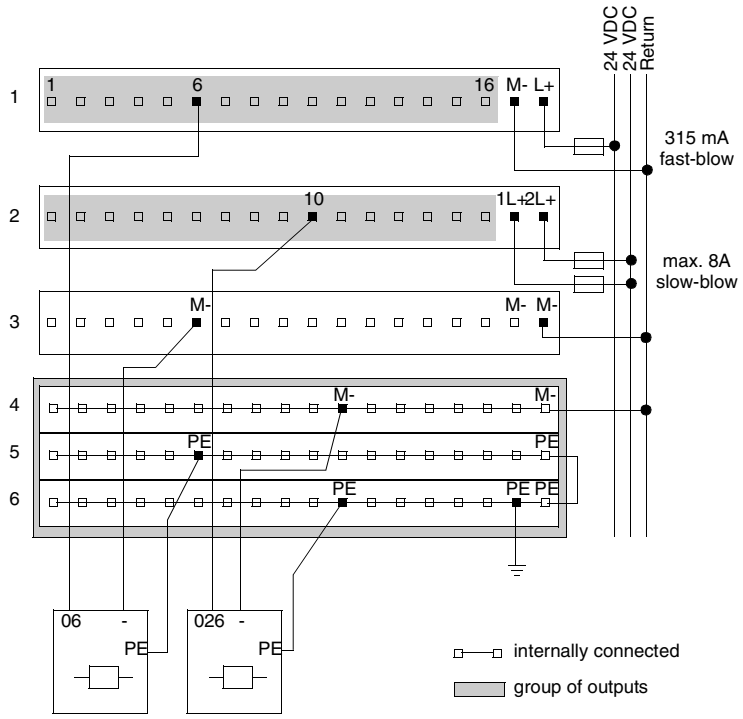

Simplified Schematics

The following diagram shows the field-side output circuitry.

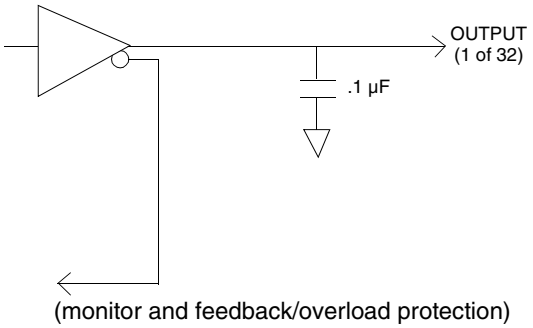

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADO 350 00 TSX Momentum I/O base supports 32 discrete outputs. This section contains information about the mapping of the I/O data into output words.

I/O Map

The I/O base may be mapped as two output words, or as 32 discrete output points.

IEC vs. Ladder Logic


In order to correctly field wire the outputs and map the output data, you need to know which type of Momentum Adapter is mounted on the base.
Adapters may be either IEC compliant or 984 Ladder Logic compliant.

	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Data Mapping


The figure below shows how data is mapped on the I/O base with an IEC Compliant adapter. When the I/O is mapped as discrete points (0x), the MSB is assigned to Pin 1 and the LSB is assigned to Pin 16. When the I/O is mapped as word or register (4x), the MSB (bit 15) is assigned to Pin 16 and the LSB (bit 0) is assigned to Pin 1.

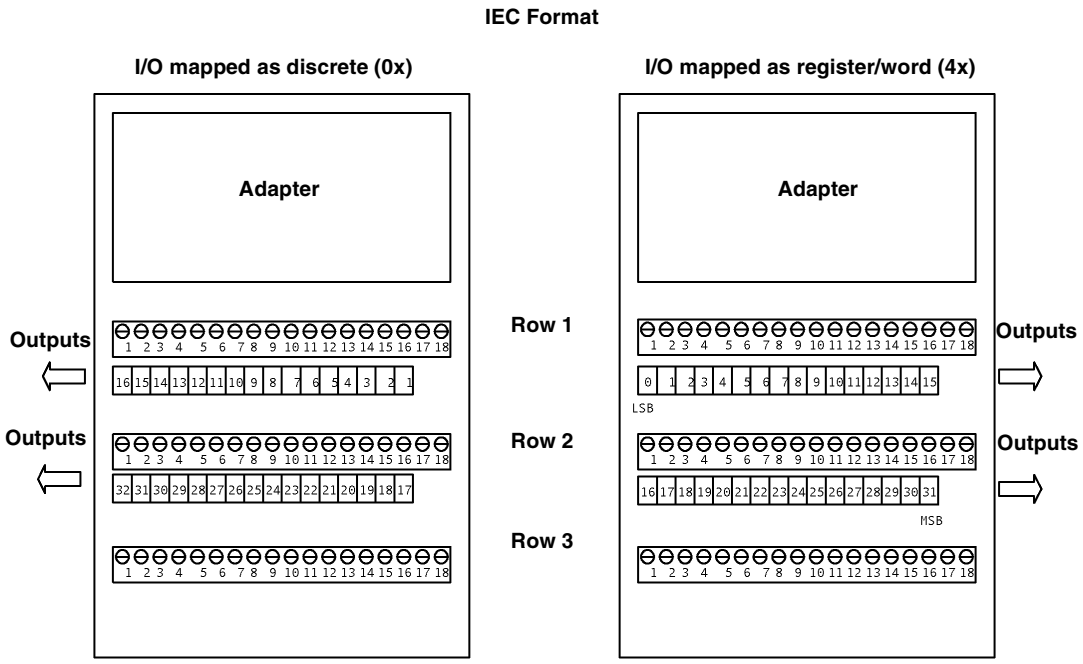

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped on the I/O base with a Ladder Logic Compliant adapter. When the I/O is mapped as discrete points (0x), the MSB is assigned to Pin 16 and the LSB is assigned to Pin 1. When the I/O is mapped as word or register (4x), the MSB (bit 15) is assigned to Pin 1 and the LSB (bit 0) is assigned to Pin 16.

984 Format

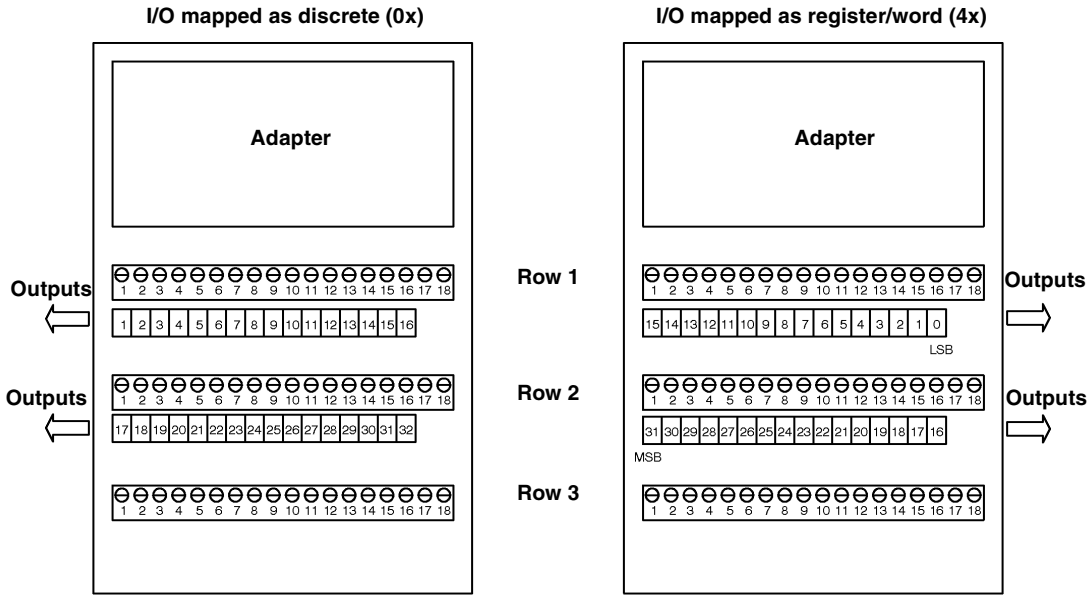

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADO 530 50 120 VAC - 8 Point Discrete Output @ 2A Module Base

26

Overview

Purpose

This chapter describes the 170 ADO 530 50 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	400
Specifications	402
Internal Pin Connections	405
Field Wiring Guidelines	406
Wiring Diagrams	408
I/O Mapping	411

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 ADO 530 50 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below.

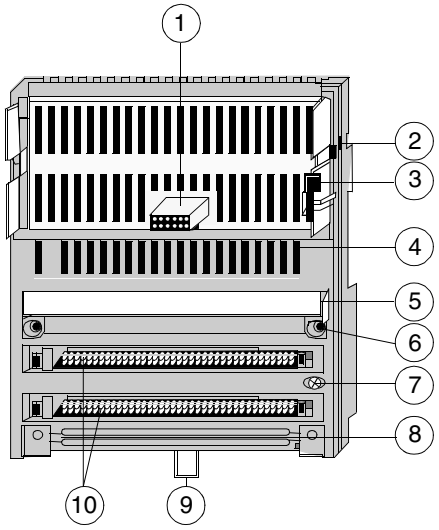


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking tab for the adapter
3	Ground contact for the adapter
4	LED status display
5	Fuses (under the cover)
6	Mounting holes for panel mount
7	Grounding screw
8	BGrounding busbar Mounting Slot
9	Locking tab for DIN rail mount
10	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

The LEDs are shown in the illustration below.

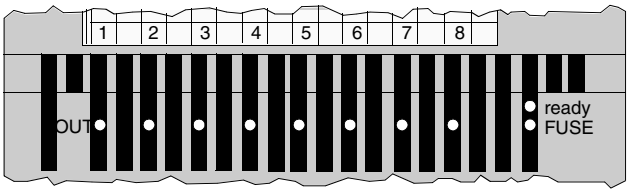

LED Descriptions

The LEDs are described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate on network
	Off	Module is not ready to communicate
FUSE	Green	Output voltage is present and fuse 1 and fuse 2 are OK.
	Off	Output voltage is not present or fuse 1 or fuse 2 is not OK.
OUT 1 ... 8	Green	Output status (an LED per output); Output point active, i.e. Output carries a 1 signal (logically ON)
	Off	Output status (an LED per output); Output point inactive, i.e. Output carries a 0 signal (logically OFF)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADO 530 50 I/O base.

General Specifications

General Specifications

Module type	8 discrete outputs in 2 groups (4 points/group)
Supply voltage	120 VAC
Supply voltage range	85 ... 132 VAC @ 47...63Hz
Supply current consumption	125 mA
Power dissipation	5 W + (# of output points on x 3 W)
I/O map	1 output word

Isolation

Isolation

Point to point	none
Group to group	none
Field to communication adapter	1780 VAC

Fuses

Fuses

Internal (replaceable)	5 A slow-blow (Wickmann 195150000 or equivalent)
Internal (non-replaceable)	200 mA slow-blow
External (field power)	10 A slow-blow (Wickmann 195210000 or equivalent)
External (module power)	200 mA slow-blow (Wickmann 195020000 or equivalent)

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 2 KV
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE FM Class 1, Div. 2 pending

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	52 mm (2.05 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3in) two busbars 171.5 mm (6.75in) three busbars
Weight	319 g (11.25 oz)

Discrete Outputs


Specifications for discrete outputs

Number of points	8
Number of groups	2 fuse groups, non-isolated
Points per group	4
Output supply voltage	120 AC
Output supply voltage range	85 ... 132 VAC
Output voltage	External supply - 1.5 VAC
Surge voltage	300 VAC for 10 s 400 VAC for 1 cycle
On state voltage drop	1.5 VAC max @ 2 A
Output (load) current	2 A/point (see derating curve) 4 A/group 8 A/module
Minimum output current	5 mA
Maximum surge current (rms)	15 A/point, one cycle 10 A/point, two cycle 5 A/point, three cycle
Output protection	RC snubber
Signal type	True High
Leakage current	1.9 mA @ 120 VAC max
Applied dV / dT	400 V / microsecond
Response time	.5 of one line cycle max OFF to ON .5 of one line cycle max ON to OFF

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Derating Curve

The diagram below shows the ambient temperature in relation to the load current per point in amps.

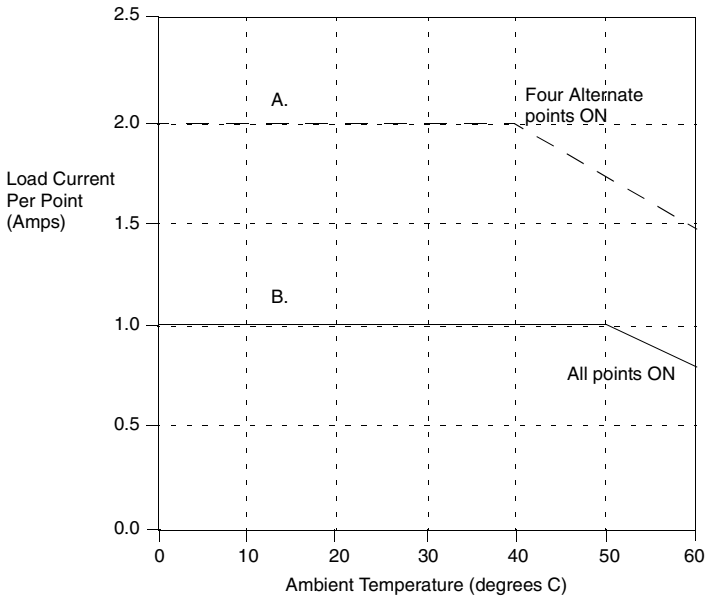

A. Four alternate points. Maximum current per group is 4 A at 0 ... 60 degrees C.

B. All points ON.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional one-row busbar.

Illustration

Rows 1 through 3 show the internal connections between terminalson the I/O base. Row 4 shows the internal connections on the optional busbar.

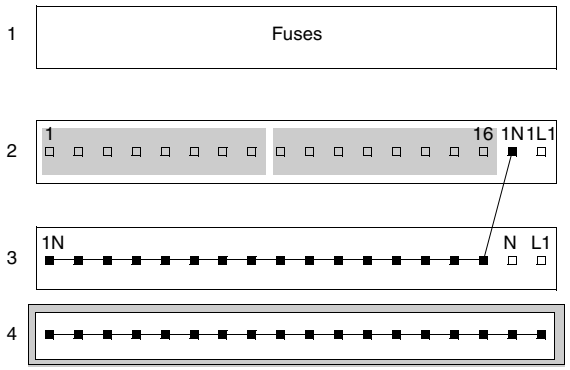

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-row busbar. The following busbars are available from Schneider Automation.

Type	Part Number
Screw-in	170 XTS 006 01
Spring-clip	170 XTS 007 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mapping Terminal Blocks

The following table shows mapping terminal blocks and optional busbars.

Row	Terminal	Function
1	Fuse 1, Fuse 2	Output fuses
2	1, 3, 5, 7	Outputs for group 1
	9, 11, 13, 15	Outputs for group 2
	17	Neutral for outputs (1N)
	18	Line for outputs (1L1)
3	1 ... 16	Neutral for individual outputs (1N)
	17	Neutral 120 VAC for module (N)
	18	Line 120 VAC for module (L1)
4	1 ... 18	Protective earth (PE)



CAUTION

VOLTAGE SPIKE MAY BE SUFFICIENT TO DAMAGE OR DESTROY MODULE

If an external switch is wired to control an inductive load in parallel with the module output, then an external varistor (Harris V390ZA05 or equivalent) must be wired in parallel with the switch.

Failure to follow this precaution can result in injury or equipment damage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section provides diagrams to assist you in wiring the following types of devices:

- 2-wire field devices
- 3-wire field devices

2-Wire Devices


The diagram below shows an example of wiring for 2-wire devices.

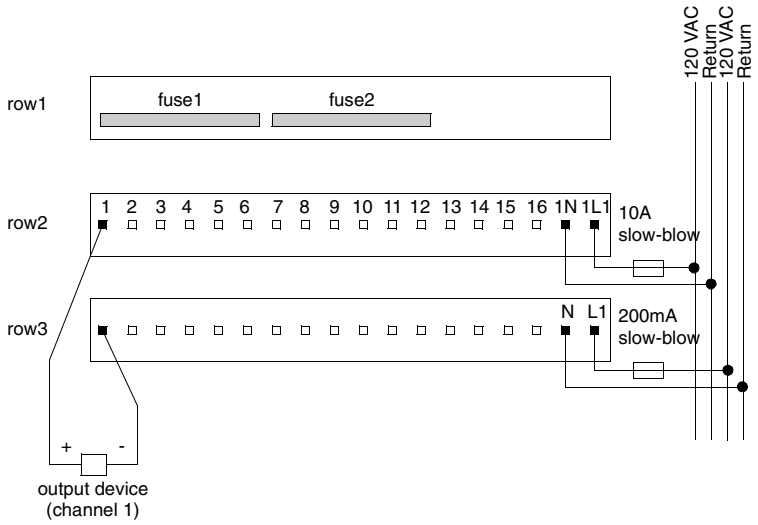

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


3-Wire Devices

The diagram below shows an example of wiring for 3-wire devices.

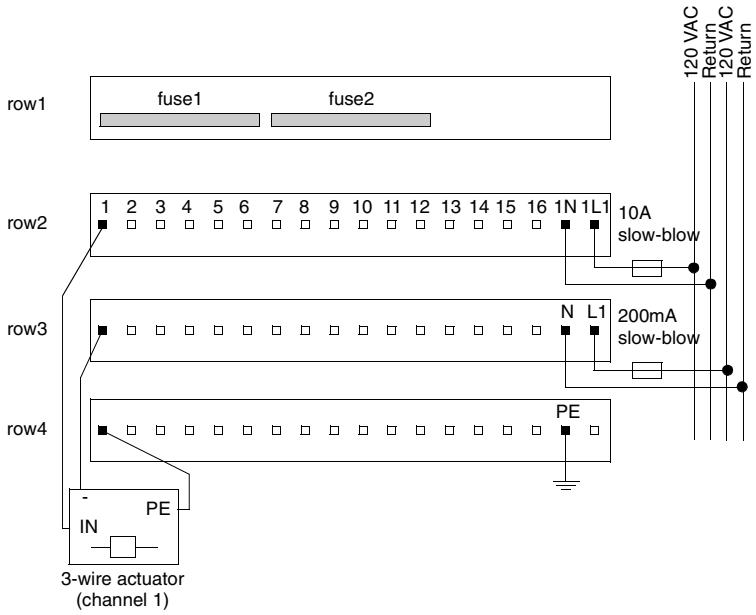

Simplified Schematics

The following diagram shows the field-side output circuitry.

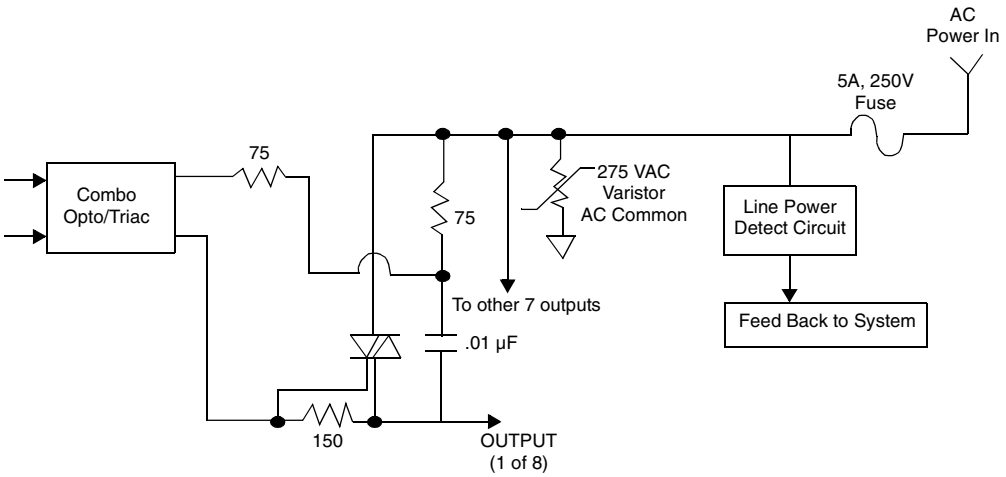

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Output Behavior

The snubber circuit is there to protect the triac. When the triac is turned on, it is almost a short and AC voltage and current travels through it to the output. When the triac is not turned on, AC voltage will still pass through the snubber, as AC will pass through a capacitor, but the impedance through the snubber circuit is so high that usually only 5 mA maximum can flow. (This is generally referred to as leakage current.) Read the specifications for the field device to make sure it cannot be turned on by this leakage current.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADO 530 50 TSX Momentum I/O base supports 8 discrete outputs. This section contains information about the mapping of the I/O data into output words.

I/O Map

The I/O base may be mapped as one output word, or as 8 discrete output points.

IEC vs. Ladder Logic

In order to correctly field wire the outputs and map the output data, you need to know which type of Momentum Adapter is mounted on the base.
Adapters may be either IEC compliant or 984 Ladder Logic compliant.


	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Data Mapping

The figure below shows how data is mapped on the I/O base with an IEC Compliant adapter. When the I/O is mapped as discrete points (0x), the MSB is assigned to Pin 1. When the I/O is mapped as a word or register (4x) the LSB (bit 0) is assigned to Pin 1.


IEC Format

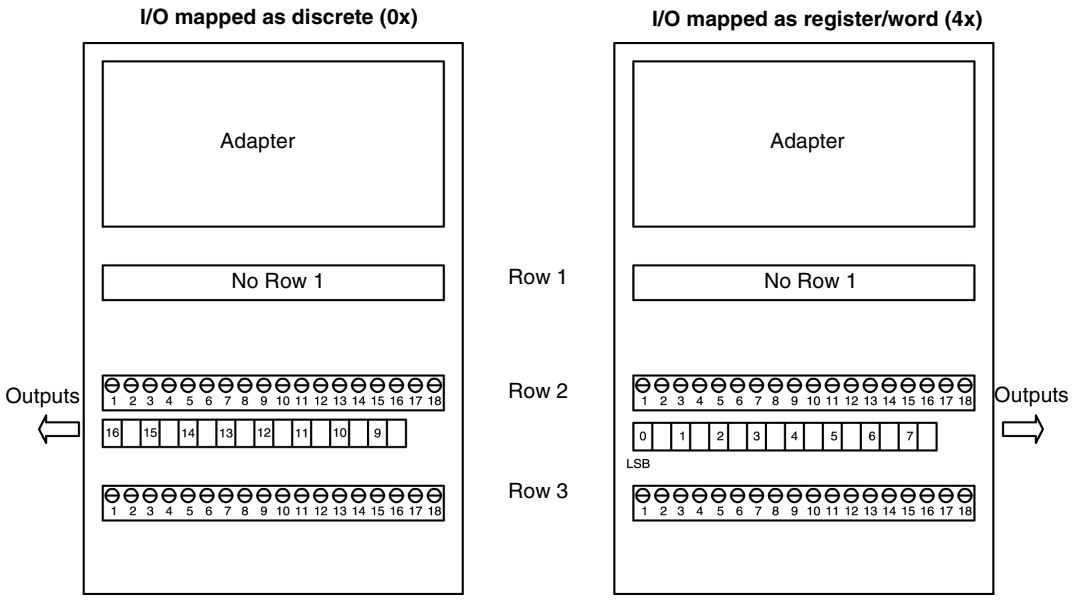

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped on the I/O base with a Ladder Logic Compliant adapter. When the I/O is mapped as discrete points (0x), the LSB is assigned to Pin 1. When the I/O is mapped as a word or register (4x) the MSB (bit 15) is assigned to Pin 1.

984 Format

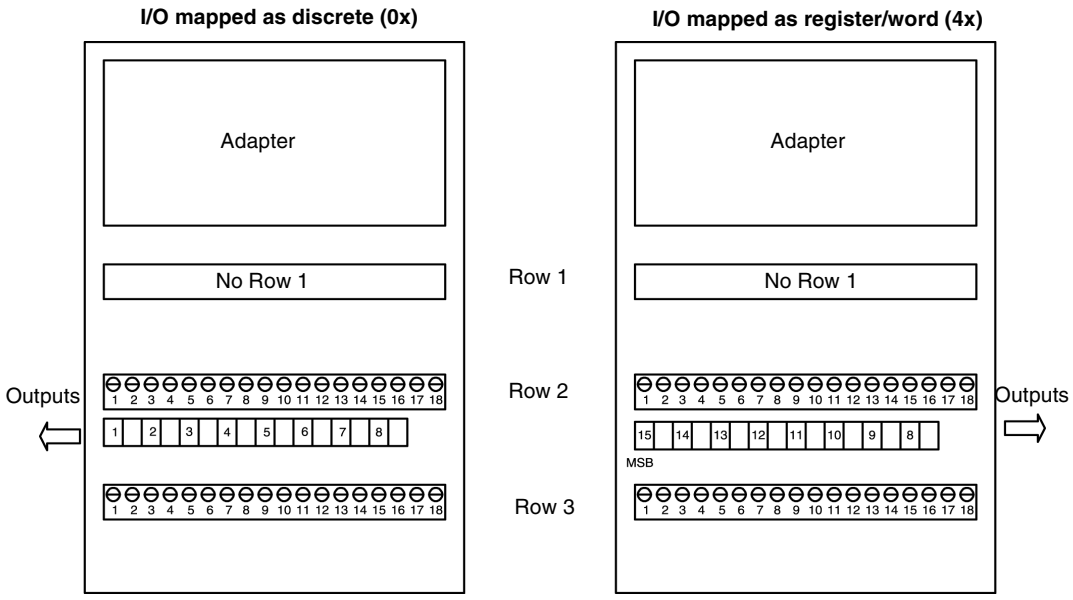

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADO 540 50 120 VAC - 16 Point Discrete Output Module Base

27

Overview

Purpose

This chapter describes the 170 ADO 540 50 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	416
Specifications	418
Internal Pin Connections	421
Field Wiring Guidelines	422
Wiring Diagrams	424
I/O Mapping	427

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 ADO 540 50 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below

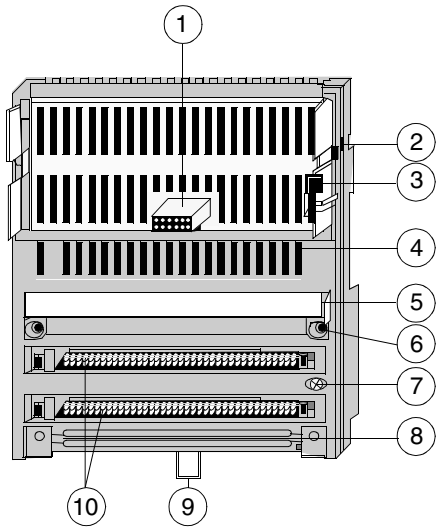


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking tab for the adapter
3	Ground contact for the adapter
4	LED status display
5	Fuses (under the cover)
6	Mounting holes for panel mount
7	Grounding screw
8	Busbar Mounting Slot
9	Locking tab for DIN rail mount
10	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

The LEDs are shown in the illustration below.

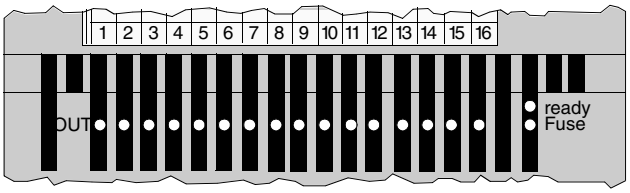

LED Descriptions

The LEDs are described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate on network
	Off	Module is not ready to communicate
FUSE	Green	Output voltage is present and fuse 1 and fuse 2 are OK.
	Off	Output voltage is not present or fuse 1 or fuse 2 is not OK.
OUT 1 ... 8	Green	Output status (an LED per output); Output point active, i.e. Output carries a 1 signal (logically ON)
	Off	Output status (an LED per output); Output point inactive, i.e. Output carries a 0 signal (logically OFF)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADO 540 50 I/O base.

General Specifications

General Specifications

Module type	16 discrete outputs in 2 groups (8 points/group)
Supply voltage	120 VAC
Supply voltage range	85 ... 132 VAC @ 47...63Hz
Supply current consumption	125 mA
Power dissipation	5 W + (# of output points on x .75 W)
I/O map	1 output word

Isolation

Isolation

Point to point	none
Group to group	none
Field to communication adapter	1780 VAC

Fuses

Fuses

Internal (replaceable)	5 A slow-blow (Wickmann 195150000 or equivalent)
Internal (non-replaceable)	200 mA slow-blow
External (field power)	10 A slow-blow (Wickmann 195210000 or equivalent)
External (module power)	200 mA slow-blow (Wickmann 195020000 or equivalent)

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 2 KV
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE FM Class 1, Div. 2 pending

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	52 mm (2.05 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3in) two busbars 171.5 mm (6.75in) three busbars
Weight	284 g (10 oz)


Discrete Outputs

Specifications for discrete outputs

Number of points	16
Number of groups	2 fuse groups, non-isolated
Points per group	8
Output supply voltage	120 AC
Output supply voltage range	85 ... 132 VAC
Output voltage	External supply - 1.5 VAC
Surge voltage	300 VAC for 10 s 400 VAC for 1 cycle
On state voltage drop	1.5 VAC max @ 0.5 A
Output (load) current	0.5 A/point (see derating curve in next section) 4 A/group 8 A/module
Minimum output current	30 mA
Maximum surge current (rms)	15 A/point, one cycle 10 A/point, two cycle 5 A/point, three cycle
Output protection	RC snubber
Signal type	True High
Leakage current	1.9 mA @ 120 VAC max
Applied dV / dT	400 V / microsecond
Response time	.5 of one line cycle max OFF to ON .5 of one line cycle max ON to OFF

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Derating Curve The diagram depicts the derating curve for this I/O base.

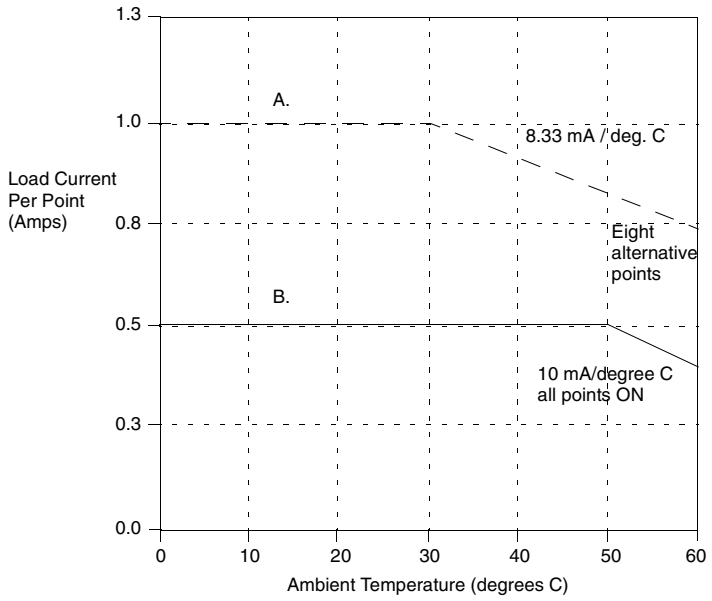

A. Eight alternate points. Maximum current per group is 3 A at 60 degrees C.
B. Sixteen points. Maximum current per point is .4 A at 60 degrees C. Maximum current per group is 3.2 A at 60 degrees C.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional one-row busbar.

Illustration

Rows 1 through 3 show the internal connections between terminalson the I/O base. Row 4 shows the internal connections on the optional busbar.

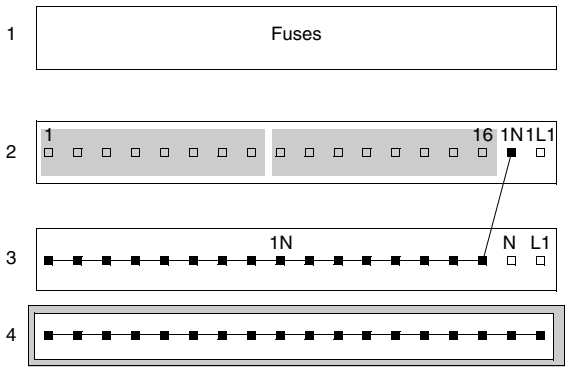

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

Inputs are field wired to row 2 of the base. This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-row busbar. The following busbars are available from Schneider Automation.

Type	Part Number
Screw-in	170 XTS 006 01
Spring-clip	170 XTS 007 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mapping Terminal Blocks

The following table shows mapping terminal blocks and optional busbars.

Row	Terminal	Function
1	Fuse 1, Fuse 2	Output fuses
2	1 ... 8	Outputs for group 1
	9 ... 16	Outputs for group 2
	17	Neutral for outputs (1N)
	18	Line for inputs (1L1)
3	1 ... 16	Neutral for individual outputs (1N)
	17	Neutral for module (N)
	18	Line 120 VAC for module (L1)
4	1 ... 18	Protective earth (PE)



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Protective Circuit Required

When contacted switches are used on the input lines or when lines to the peripherals are very long, the outputs of inductive loads require protective circuitry with a clamping/suppressor diode. Install the protective circuit prallel to the operating coil.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section provides diagrams to assist you in wiring the following types of devices:

- 2-wire field devices
- 3-wire field devices

2-Wire Devices


The diagram below shows an example of wiring for 2-wire devices.

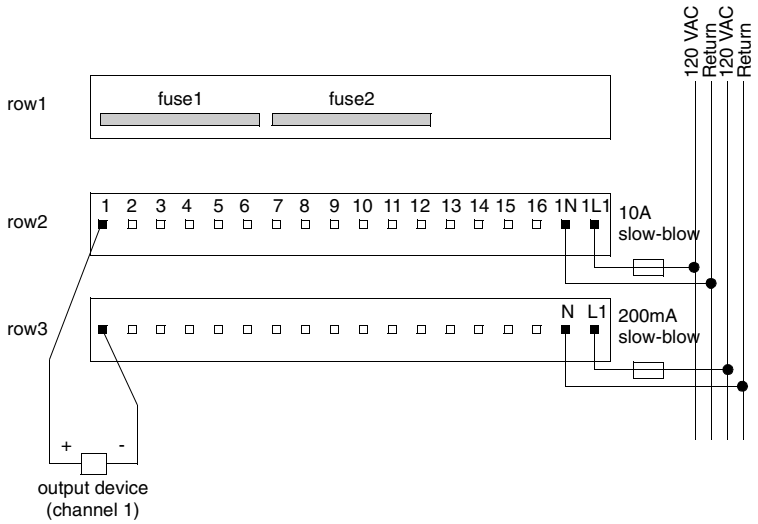

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


3-Wire Devices

The diagram below shows an example of wiring for 3-wire devices.

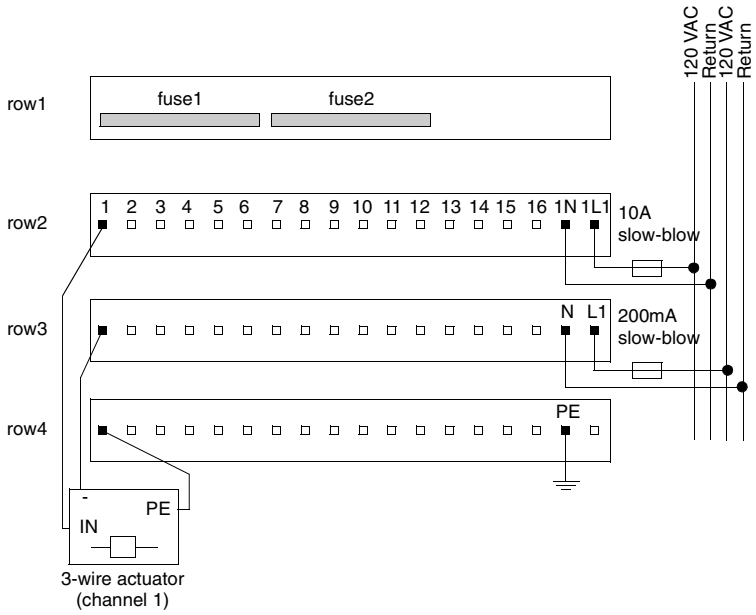

Simplified Schematics

The following diagram shows the field-side output circuitry.

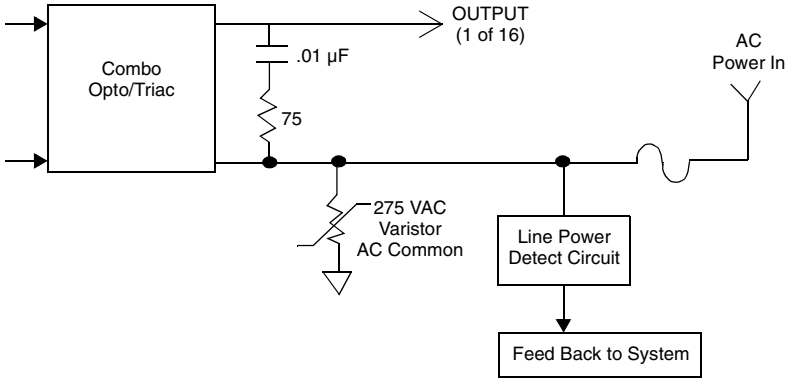

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Output Behavior

The snubber circuit is there to protect the triac. When the triac is turned on, it is almost a short and AC voltage and current travels through it to the output. When the triac is not turned on, AC voltage will still pass through the snubber, as AC will pass through a capacitor, but the impedance through the snubber circuit is so high that usually only 5 mA maximum can flow. (This is generally referred to as leakage current.) Read the specifications for the field device to make sure it cannot be turned on by this leakage current.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADO 540 50 TSX Momentum I/O base supports 16 discrete outputs. This section contains information about the mapping of the I/O data into output words.

I/O Map

The I/O base may be mapped as one output word, or as 16 discrete output points

IEC vs. Ladder Logic


In order to correctly field wire the outputs and map the output data, you need to know which type of Momentum Adapter is mounted on the base.
Adapters may be either IEC compliant or 984 Ladder Logic compliant.

	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 1100 00 170 FNT 1100 01	170 NEF 110 21 170 NEF 160 21 170 FNT 1100 00 170 FNT 1100 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Data Mapping


The figure below shows how data is mapped on the I/O base with an IEC Compliant adapter. When the I/O is mapped as discrete points (0x) , the MSB is assigned to Pin 1, and the LSB is assigned to Pin 16. When the I/O is mapped as a word or register (4x), the MSB (bit 15) is assigned to Pin 16, and the LSB (bit 0) is assigned to Pin 1.

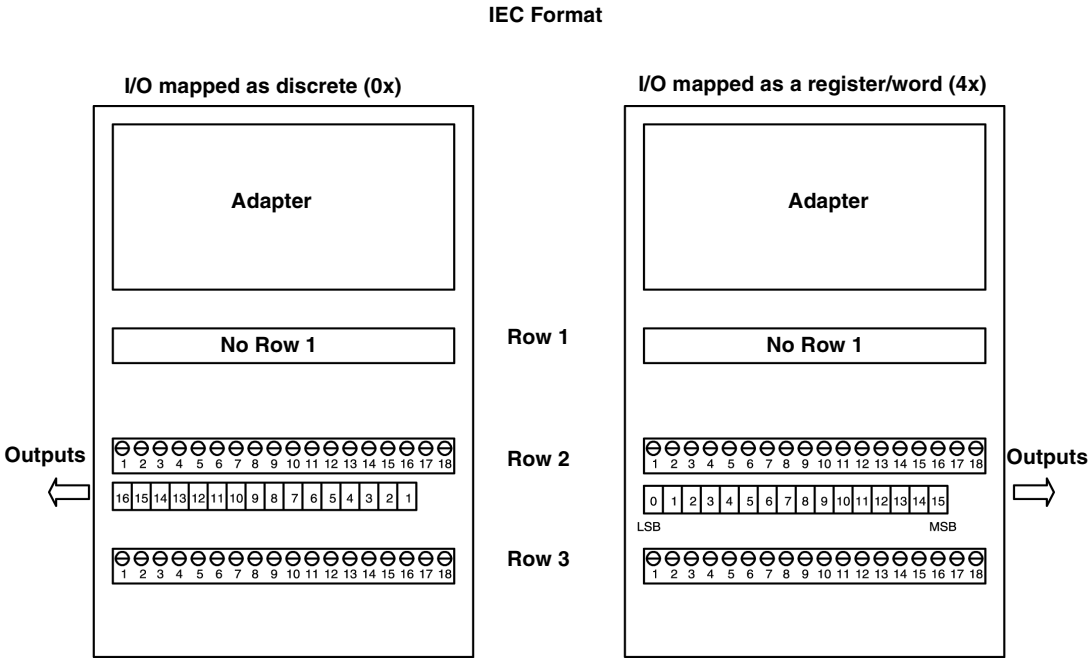

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped on the I/O base with a Ladder Logic Compliant adapter. When the I/O is mapped as discrete points (0x), the MSB is assigned to Pin 16 and the LSB is assigned to Pin 1. When the I/O is mapped as a word or register (4x), the MSB (bit 15) is assigned to Pin 1, and the LSB (bit 0) is assigned to Pin 16.

984 Format

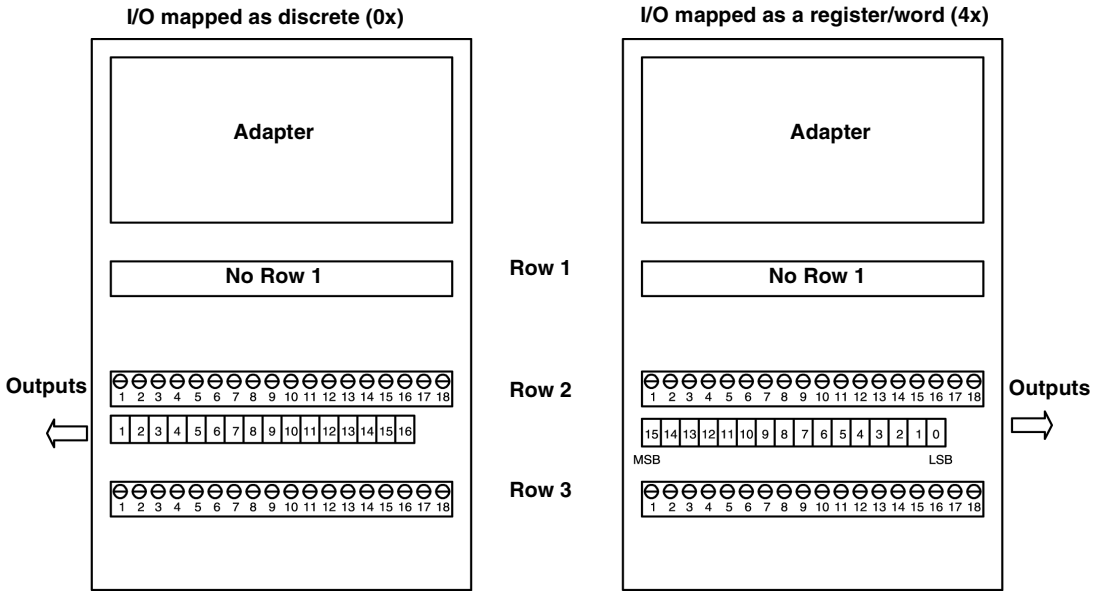

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADO 730 50 230 VAC - 8 Point Discrete Output @ 2A Module Base

28

Overview

Purpose

This chapter describes the 170 ADO 730 50 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	432
Specifications	434
Internal Pin Connections	437
Field Wiring Guidelines	438
Wiring Diagrams	440
I/O Mapping	443

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 ADO 730 50 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below.

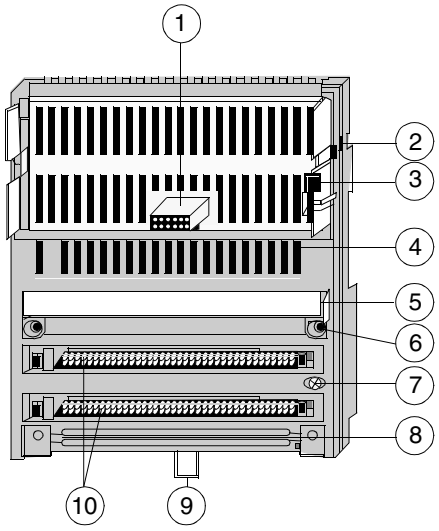


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking tab for the adapter
3	Ground contact for the adapter
4	LED status display
5	Fuses (under the cover)
6	Mounting holes for panel mount
7	Grounding screw
8	Busbar Mounting Slot
9	Locking tab for DIN rail mount
10	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

The LEDs are shown in the illustration below.

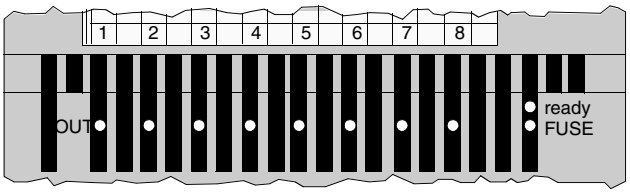

LED Descriptions

The LEDs are described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate on network
	Off	Module is not ready to communicate
FUSE	Green	Output voltage is present and fuse 1 and fuse 2 are OK.
	Off	Output voltage is not present or fuse 1 or fuse 2 is not OK.
OUT 1 ... 8	Green	Output status (an LED per output); Output point active, i.e. Output carries a 1 signal (logically ON)
	Off	Output status (an LED per output); Output point inactive, i.e. Output carries a 0 signal (logically OFF)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADO 730 50 I/O base.

General Specifications

General Specifications

Module type	8 discrete outputs in 2 groups (4 points/group)
Supply voltage	230 VAC
Supply voltage range	170 ... 264 VAC @ 47...63Hz
Supply current consumption	65 mA
Power dissipation	5 W + (# of output points on x 3 W)
I/O map	1 output word

Isolation

Isolation

Point to point	none
Group to group	none
Field to communication adapter	1780 VAC

Fuses

Fuses

Internal (replaceable)	5 A slow-blow (Wickmann 195150000 or equivalent)
Internal (non-replaceable)	200 mA slow-blow
External (field power)	10 A slow-blow (Wickmann 195210000 or equivalent)
External (module power)	200 mA slow-blow (Wickmann 195020000 or equivalent)

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 2 KV
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1, Div. 2

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	52 mm (2.05 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3in) two busbars 171.5 mm (6.75in) three busbars
Weight	284 g (10 oz)

Discrete Outputs


Specifications for discrete outputs

Number of points	8
Number of groups	2 fuse groups, non-isolated
Points per group	4
Output supply voltage	230 AC
Output supply voltage range	170 ... 264 VAC
Output voltage	External supply - 1.5 VAC
Surge voltage	300 VAC for 10 s 400 VAC for 1 cycle
On state voltage drop	1.5 VAC max @ 2 A
Output (load) current	2 A/point (see derating curve) 4 A/group 8 A/module
Minimum output current	5 mA
Maximum surge current (rms)	15 A/point, one cycle 10 A/point, two cycle 5 A/point, three cycle
Output protection	RC snubber
Signal type	True High
Leakage current	2.5 mA @ 230 VAC max
Applied dV / dT	400 V / microsecond
Response time	.5 of one line cycle max OFF to ON .5 of one line cycle max ON to OFF

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Derating Curve

The diagram below shows the ambient temperature in relation to the load current per point in amps.

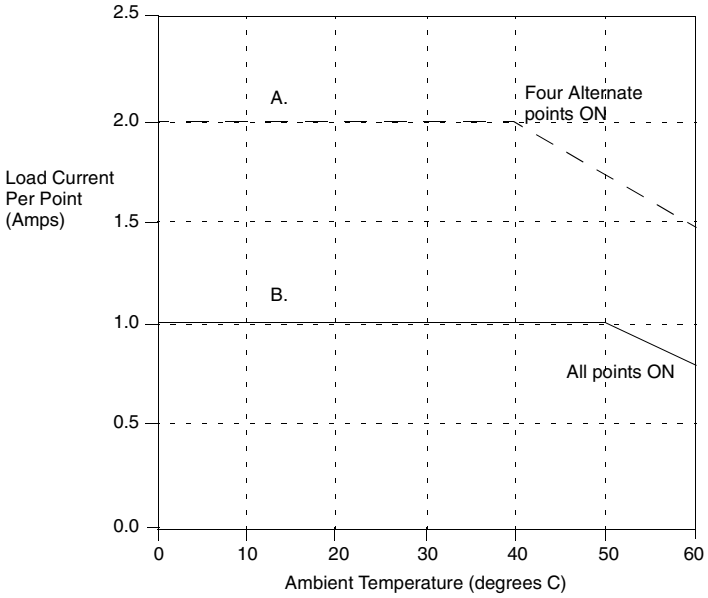

A. Four alternate points. Maximum current per group is 4 A at 0 ... 60 degrees C.

B. All points ON.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional one-row busbar.

Illustration

Rows 1 through 3 show the internal connections between terminals on the I/O base. Row 4 shows the internal connections on the optional busbar.

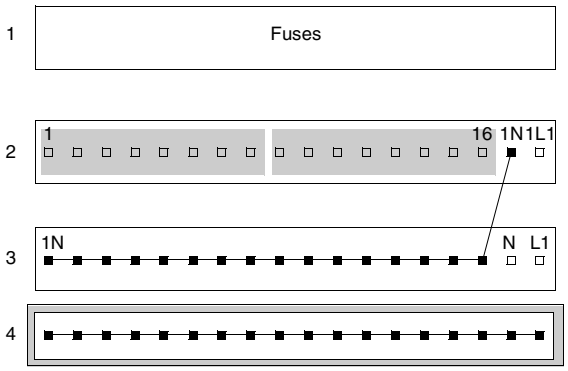

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-row busbar. The following busbars are available from Schneider Automation.

Type	Part Number
Screw-in	170 XTS 006 01
Spring-clip	170 XTS 007 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mapping Terminal Blocks

The following table shows mapping terminal blocks and optional busbars.

Row	Terminal	Function
1	Fuse 1, Fuse 2	Output fuses
2	1, 3, 5, 7	Outputs for group 1
	9,11 ,13, 15	Outputs for group 2
	17	Neutral for outputs (1N)
	18	Line for outputs (1L1)
3	1 ... 16	Neutral for individual outputs (1N)
	17	Neutral 120 VAC for module (N)
	18	Line 120 VAC for module (L1)
4	1 ... 18	Protective earth (PE)



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section provides diagrams to assist you in wiring the following types of devices:

- 2-wire field devices
- 3-wire field devices

2-Wire Devices


The diagram below shows an example of wiring for 2-wire devices.

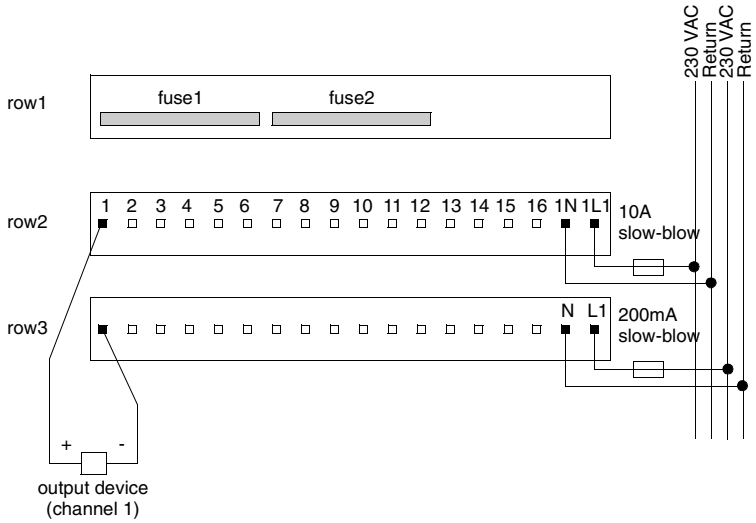

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


3-Wire Devices

The diagram below shows an example of wiring for 3-wire devices.

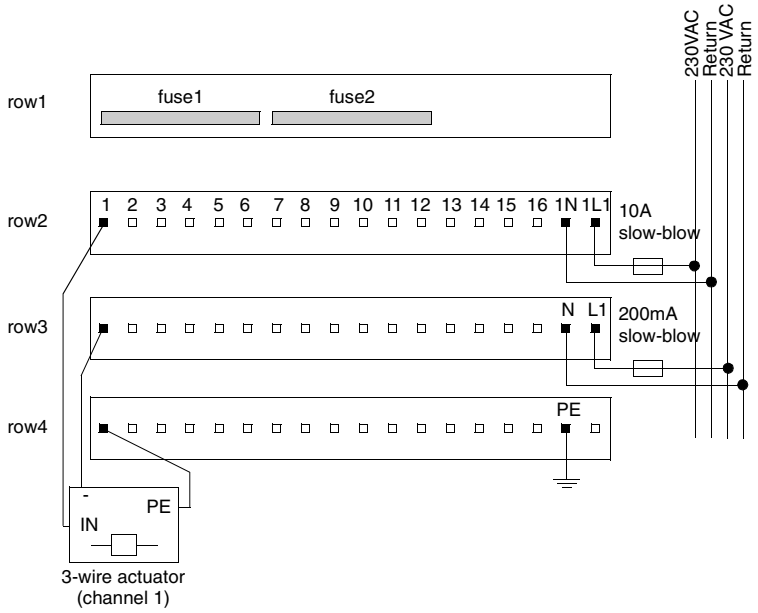

Simplified Schematics

The following diagram shows the field-side output circuitry.

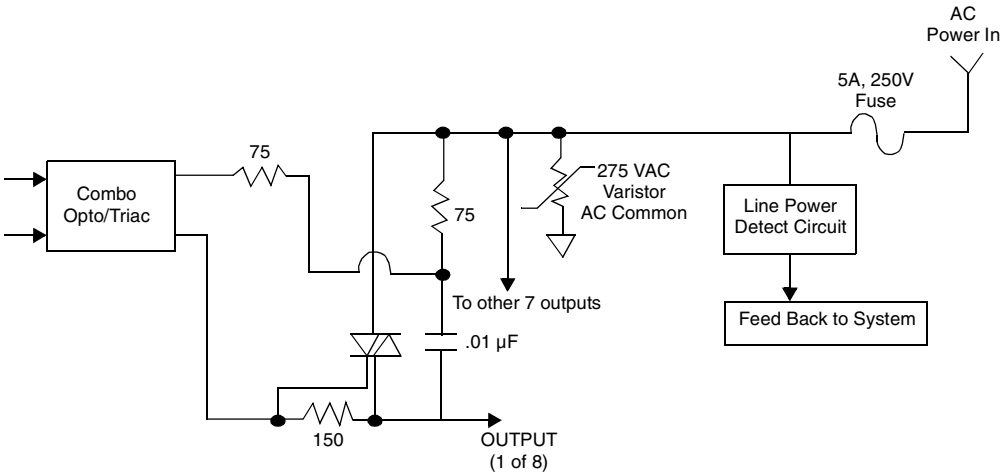

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Output Behavior

The snubber circuit is there to protect the triac. When the triac is turned on, it is almost a short and AC voltage and current travels through it to the output. When the triac is not turned on, AC voltage will still pass through the snubber, as AC will pass through a capacitor, but the impedance through the snubber circuit is so high that usually only 5 mA maximum can flow. (This is generally referred to as leakage current.) Read the specifications for the field device to make sure it cannot be turned on by this leakage current.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADO 730 50 TSX Momentum I/O base supports 8 discrete outputs. This section contains information about the mapping of the I/O data into output words.

I/O Map

The I/O base may be mapped as one output word, or as 8 discrete output points.

IEC vs. Ladder Logic

In order to correctly field wire the outputs and map the output data, you need to know which type of Momentum Adapter is mounted on the base.
Adapters may be either IEC compliant or 984 Ladder Logic compliant.


	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Data Mapping

The figure below shows how data is mapped on the I/O base with an IEC Compliant adapter. When the I/O is mapped as discrete points (0x), the MSB is assigned to Pin 1. When the I/O is mapped as word or register (4x), the LSB (bit 0) is assigned to Pin 1.


IEC Format

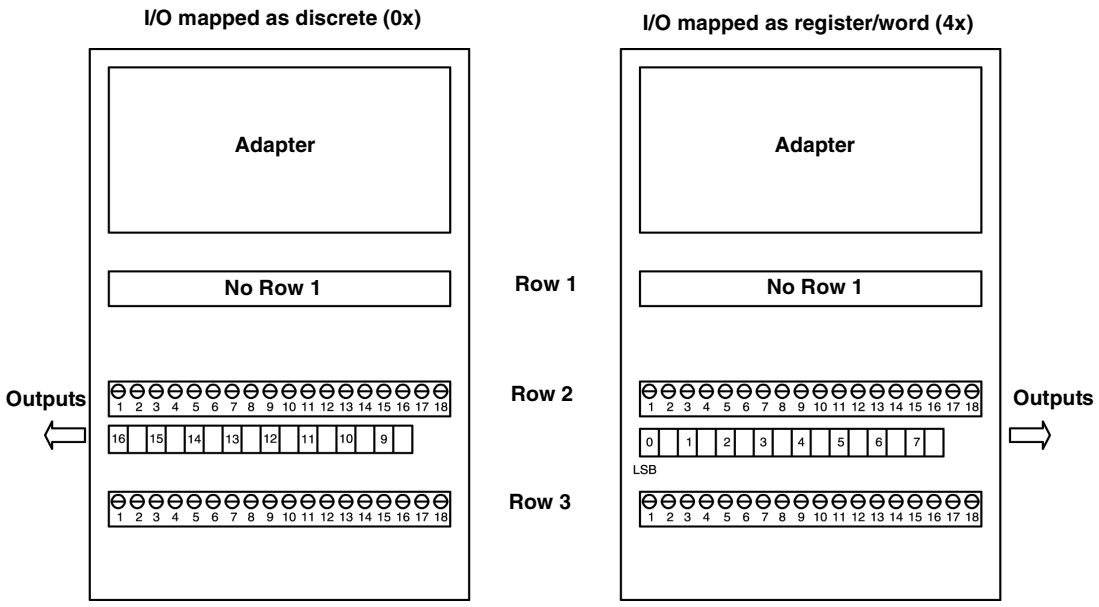

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped on the I/O base with a Ladder Logic Compliant adapter. When the I/O is mapped as discrete points (0x), the LSB is assigned to Pin 1. When the I/O is mapped as word or register (4x), the MSB (bit 15) is assigned to Pin 1.

984 Format

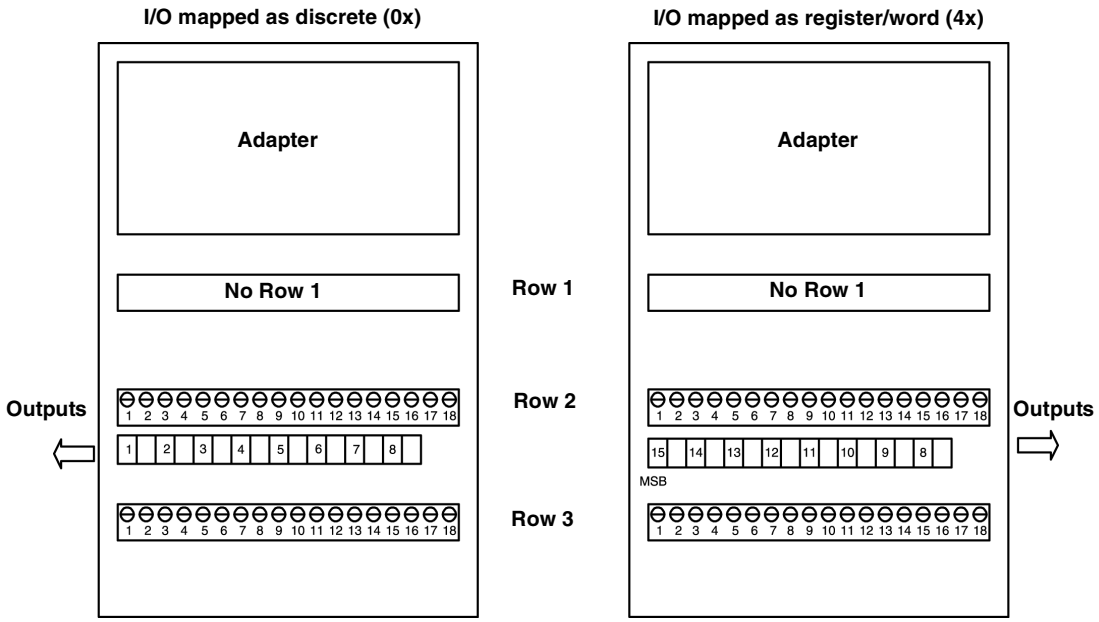

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ADO 740 50 230 VAC - 16 Point Discrete Output Module Base

29

Overview

Purpose

This chapter describes the 170 ADO 740 50 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	448
Specifications	450
Internal Pin Connections	453
Field Wiring Guidelines	454
Wiring Diagrams	456
I/O Mapping	459

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 ADO 740 50 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below.

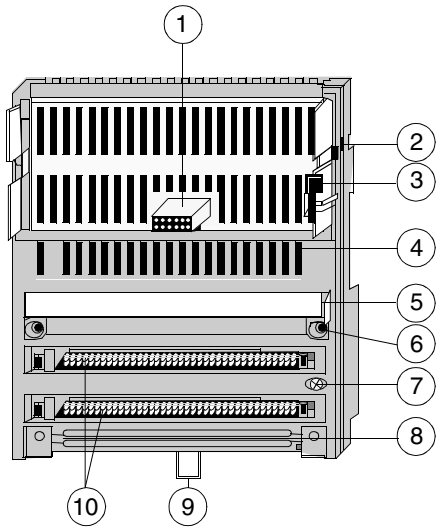


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking tab for the adapter
3	Ground contact for the adapter
4	LED status display
5	Fuses (under the cover)
6	Mounting holes for panel mount
7	Grounding screw
8	Grounding busbar Mounting Slot
9	Locking tab for DIN rail mount
10	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

The LEDs are shown in the illustration below.

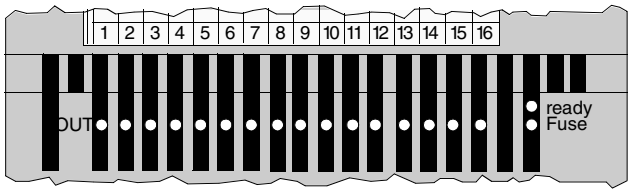

LED Descriptions

The LEDs are described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate on network
	Off	Module is not ready to communicate
FUSE	Green	Output voltage is present and fuse 1 and fuse 2 are OK.
	Off	Output voltage is not present or fuse 1 or fuse 2 is not OK.
OUT 1 ... 16	Green	Output status (an LED per output); Output point active, i.e. Output carries a 1 signal (logically ON)
	Off	Output status (an LED per output); Output point inactive, i.e. Output carries a 0 signal (logically OFF)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ADO 740 50 I/O base.

General Specifications

General Specifications

Module type	16 discrete outputs in 2 groups (8 points/group)
Supply voltage	230 VAC
Supply voltage range	170 ... 264 VAC @ 47...63Hz
Supply current consumption	65 mA
Power dissipation	5 W + (# of output points on x .75 W)
I/O map	1 output word

Isolation

Isolation

Point to point	none
Group to group	none
Field to communication adapter	1780 VAC

Fuses

Fuses

Internal (replaceable)	5 A slow-blow (Wickmann 195150000 or equivalent)
Internal (non-replaceable)	200 mA slow-blow
External (field power)	10 A slow-blow (Wickmann 195210000 or equivalent)
External (module power)	200 mA slow-blow (Wickmann 1915020000 or equivalent)

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 2 KV
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE FM Class 1, Div. 2

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	52 mm (2.05 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3 in) two busbars 171.5 mm (6.75 in) three busbars
Weight	284 g (10 oz)

Discrete Outputs


Specifications for discrete outputs

Number of points	16
Number of groups	2 fuse groups, non-isolated
Points per group	8
Output supply voltage	230 AC
Output supply voltage range	170 ... 264 VAC
Output voltage	External supply - 1.5 VAC
Surge voltage	300 VAC for 10 s 400 VAC for 1 cycle
On state voltage drop	1.5 VAC max @ 2 A
Output (load) current	0.5 A/point (see derating curve) 4 A/group 8 A/module
Minimum output current	30 mA
Maximum surge current (rms)	15 A/point, one cycle 10 A/point, two cycle 5 A/point, three cycle
Output protection	RC snubber
Signal type	True High
Leakage current	2.4 mA @ 230 VAC max
Applied dV / dT	400 V / microsecond
Response time	.5 of one line cycle max OFF to ON .5 of one line cycle max ON to OFF

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Derating Curve

The diagram below shows the ambient temperature in relation to the load current per point in amps.

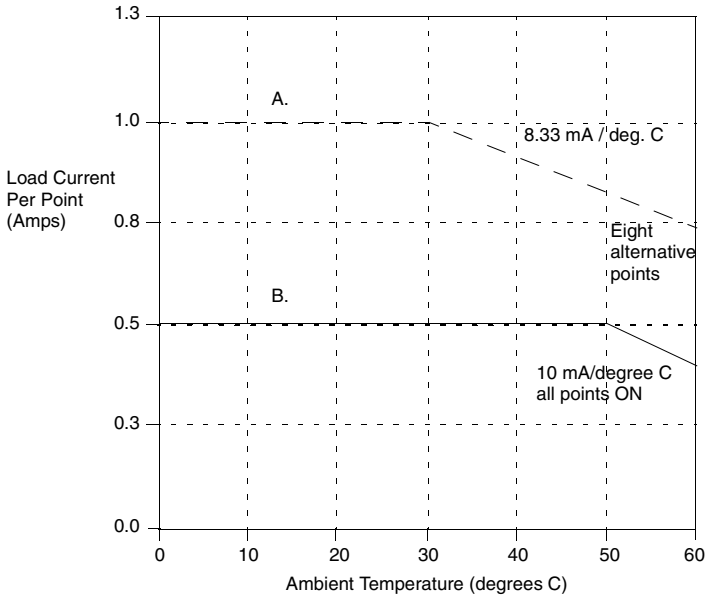

A. Eight alternate points. Maximum current per group is 3 A at 60 degrees C.
B. Sixteen points. Maximum current per point is .4 A at 60 degrees C. Maximum current per group is 3.2 A at 60 degrees C.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional one-row busbar.

Illustration

Rows 1 through 3 show the internal connections between terminalson the I/O base. Row 4 shows the internal connections on the optional busbar.

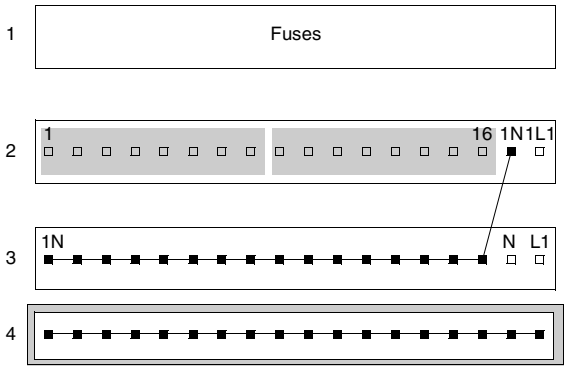

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

The outputs are field wired to row 2 of the base. This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-row busbar. The following busbars are available from Schneider Automation.

Type	Part Number
Screw-in	170 XTS 006 01
Spring-clip	170 XTS 007 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mapping Terminal Blocks

The following table shows mapping terminal blocks and optional busbars.

Row	Terminal	Function
1	Fuse 1, Fuse 2	Output fuses
2	1 ... 8	Outputs for group 1
	9 ... 16	Outputs for group 2
	17	Neutral for outputs (1N)
	18	Line for outputs (1L1)
3	1 ... 16	Neutral for individual outputs (1N)
	17	Neutral 230 VAC for module (N)
	18	Line 230 VAC for module (L1)
4	1 ... 18	Protective earth (PE)



CAUTION

VOLTAGE SPIKE MAY BE SUFFICIENT TO DAMAGE OR DESTROY MODULE

If an external switch is wired to control an inductive load in parallel with the module output, then an external varistor (Harris V390ZA05 or equivalent) must be wired in parallel with the switch.

Failure to follow this precaution can result in injury or equipment damage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section provides diagrams to assist you in wiring the following types of devices:

- 2-wire field devices
- 3-wire field devices

2-Wire Devices


The diagram below shows an example of wiring for 2-wire devices.

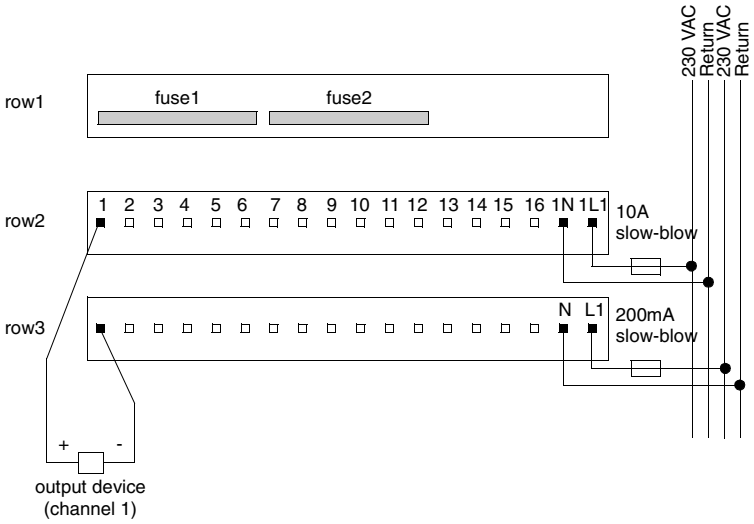

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


3-Wire Devices

The diagram below shows an example of wiring for 3-wire devices.

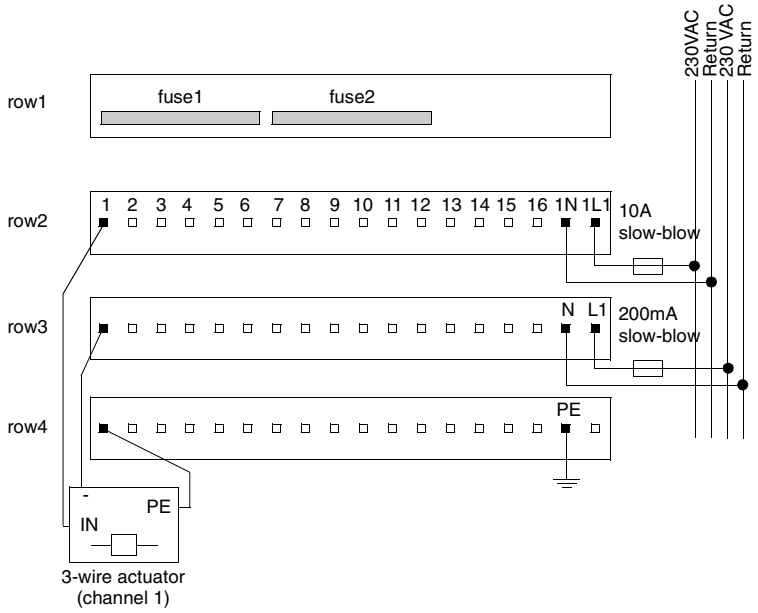

Simplified Schematics

The following diagram shows the field-side output circuitry.

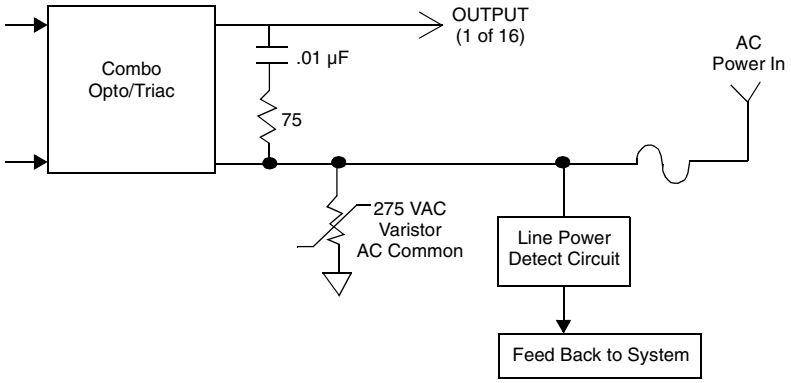

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Output Behavior

The snubber circuit is there to protect the triac. When the triac is turned on, it is almost a short and AC voltage and current travels through it to the output. When the triac is not turned on, AC voltage will still pass through the snubber, as AC will pass through a capacitor, but the impedance through the snubber circuit is so high that usually only 5 mA maximum can flow. (This is generally referred to as leakage current.) Read the specifications for the field device to make sure it cannot be turned on by this leakage current.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ADO 740 50 TSX Momentum I/O base supports 16 discrete outputs. This section contains information about the mapping of the I/O data into output words.

I/O Map

The I/O base may be mapped as one output word, or as 16 discrete output points.

IEC vs. Ladder Logic


In order to correctly field wire the outputs and map the output data, you need to know which type of Momentum Adapter is mounted on the base.
Adapters may be either IEC compliant or 984 Ladder Logic compliant.

	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Data Mapping

The figure below shows how data is mapped on the I/O base with an IEC Compliant adapter. When the I/O is mapped as discrete points (0x), the MSB is assigned to Pin 1 and the LSB is assigned to Pin 16. When the I/O is mapped as a word or register (4x), the MSB (bit 15) is assigned to Pin 16 and the LSB (bit 0) is assigned to Pin 1.

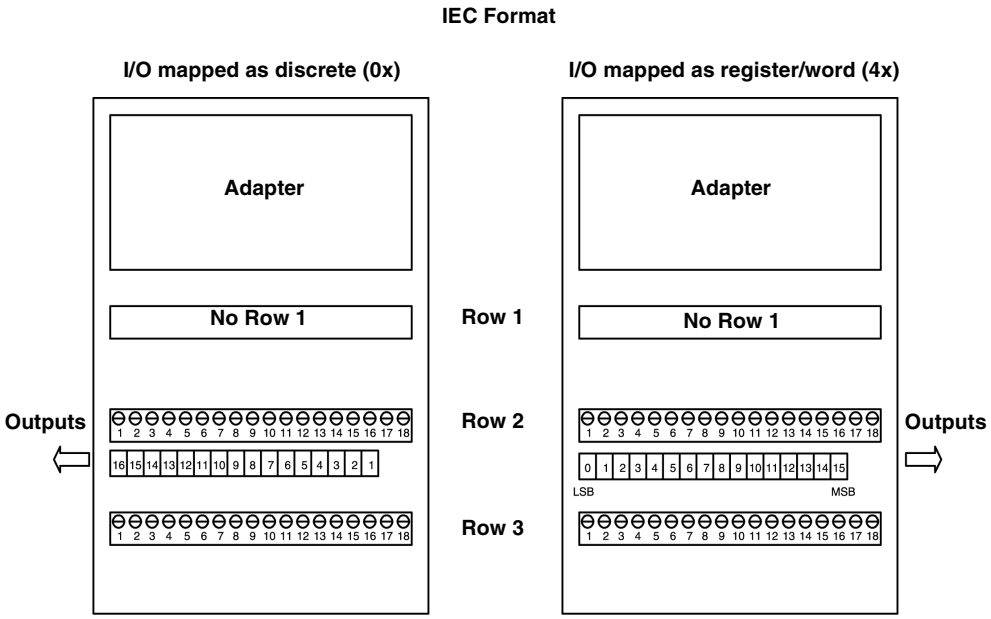

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped on the I/O base with a 984 Ladder Logic Compliant adapter. When the I/O is mapped as discrete points (0x), the MSB is assigned to Pin 16 and the LSB is assigned to Pin 1. When the I/O is mapped as a word or register (4x), the MSB (bit 15) is assigned to Pin 1 and the LSB (bit 0) is assigned to Pin 16.

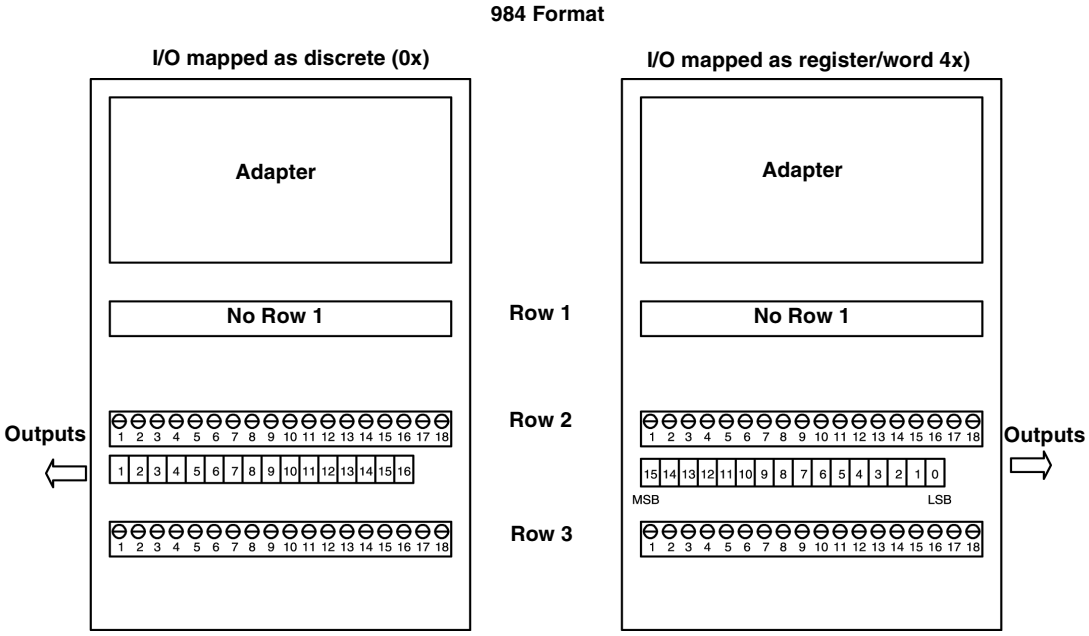

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 AMM 090 00 Analog 4 Ch. In / 2 Ch. Out Module Base w/ 24 VDC I/O Pts

30

Overview

Purpose

This chapter describes the 170 AMM 090 00 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	464
Specifications	466
Internal Pin Connections	471
Field Wiring Guidelines	472
Wiring Diagrams	474
I/O Mapping	477
Analog Channel Parameters	479
Analog Outputs	481
Analog Inputs	482
Discrete Inputs and Outputs	483
Input Measuring Ranges	484
Error Messages	490

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 AMM 090 00 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below.

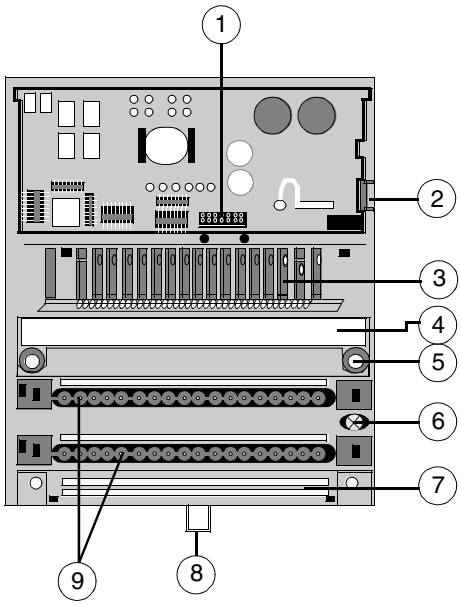


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Ground contact for the adapter
3	LED status display
4	Protective cover
5	Mounting holes for panel mount
6	Grounding screw
7	Busbar Mounting Slot
8	Locking tab for DIN rail mount
9	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

The LEDs are shown in the illustration below.

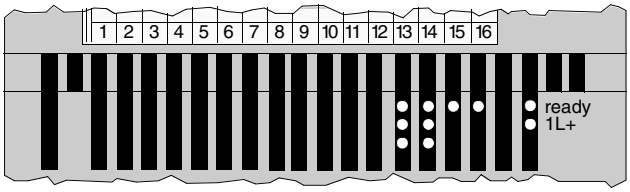

LED Descriptions

The LEDs are described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate on network. Operating voltage for internal logic is present and self-test has been passed.
	Off	Module is not ready
1L+	Green	Supply voltage for outputs 1, 2 applied.
	Off	Supply voltage for outputs 1, 2 not applied.
Top row 13 ... 16	Green	Discrete input status (an LED per input) Input point active, i.e. input carries "1" signal (logically "ON")
	Off	Discrete input status (an LED per input) Input point inactive, i.e. input carries "0" signal (logically "OFF").
Middle row 13 , 14	Green	Discrete output status (an LED per output) Output point active, i.e. output carries "1" signal (logically "ON")
	Off	Discrete output status (an LED per output) Output point inactive, i.e. output carries "0" signal (logically "OFF").
Bottom row 13 , 14	Red	Analog output overload (one LED per output) Output concerned short-circuited or overloaded.
	Off	Analog outputs 1 ... 2 operating normally.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 AMM 090 00 I/O base.

General Specifications

General Specifications

Module type	4 differential inputs, 2 outputs (analog) 4 inputs, 2 outputs (discrete)
Supply voltage	24 VDC
Supply voltage range	20 ... 30 VDC
Supply current consumption	max. 350 mA at 24 VDC
Power dissipation	4 W typical 6 W maximum
I/O map	5 input words 5 output words

Isolation

Isolation

Discrete inputs from outputs	none
Analog inputs from outputs	none
Analog inputs and outputs from operating voltage	500 VDC, 1 min
Operating voltage and all inputs and outputs from ground	500 VDC, 1 min

Fuses

Fuses

Internal	none
Operating voltage L+	325 mA fast-blow (with bus adapter) (Wickmann 19193-325 mA or equivalent)
Output voltage 1L+	Depending on the application, max. 5 A fast-blow
Input voltage 1L+	Depending on the application, max. 1 A fast-blow

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EMC

EMC for industrial environment

Immunity	IEC 1131-2 (500 V disturbance pulse in operating voltage)
Radiated noise	EN 50081-2 Level A
Agency approvals	UL, CSA, CE, FM Class 1, Div 2

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no busbar 159.5 mm (6.3 in) with two-row busbar 171.5 mm (6.75) with three-row busbar
Weight	240 g (0.55 lb)

Analog Inputs

Specifications for analog inputs

Number of channels	4 differential inputs
Common mode voltage	Input voltage from Ag +/- 11 V
Common mode suppression	> 54 dB
Overvoltage (1 input) Static Dynamic	Voltage ranges +/- 30 V when voltage source is 24 V +/- 50 V max. 100 s Current ranges, input current < 48 mA
Input resistance	> 1 MOhm voltage range 250 Ohm current range
Input filter time constant	120 microsec. (typ.)
Crosstalk	Input channel from input channel approx -80 dB

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Range Specific Data

Range specific data

Range	+/- 10 V	+/- 5 V	1 ... 5 V	+/- 20 mA	4 ... 20 mA
Conversion time	10 ms for all channels	10 ms for all channels	10 ms for all channels	10 ms for all channels	10 ms for all channels
Conversion error at 25 deg. C	max. 0.08 % of upper measuring range value	max. 0.16 % of upper measuring range value	max. 0.16 % of upper measuring range value	current measure-ment	current measure-ment
Error at 0 ... 60 deg. C	max. 0.15 % of upper measuring range value	max. 0.3 % of upper measuring range value	max. 0.3 % of upper measuring range value	current measure-ment	current measure-ment
Conversion consistency	max. 0.02 % of upper measuring range value	max. 0.04 % of upper measuring range value	max. 0.04 % of upper measuring range value	current measure-ment	current measure-ment
Resolution)	14 bits	13 bits	12 bits	13 bits	12 bits

Analog Outputs

Specifications for analog outputs

Number of channels	2	
Conversion time	1 ms for all channels	
Conversion error at 25 deg. C	max +/- 0.35 % of upper measuring range value	
Loop power supply	None required	
Error at 0 ... 60 deg. C	max +/- 0.7 % of upper measuring range value	
Linearity	+/- 1 LSB (monotonous)	
Crosstalk	Output channel from output channel approx. - 80 dB	
Range	**+/-10 V Voltage**	**0 ... 20 mA Current**
Output load	>= 3 KOhm	<= 600 Ohms
Resolution	12 bits	12 bits

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete Inputs

Specifications for discrete inputs

Number of points	4
Number of groups	1
Points per group	4
Signal type	True High
IEC 1131 type	1+ (See Appendix *IEC 1131 Input Types, p. 581* for definitions of IEC input types.)
ON voltage	+11 ... +30 VDC
OFF voltage	-3 ... +5 VDC
Input current	2.5 mA minimum ON (6 mA at 24 VDC) 1.2 mA maximum OFF
Input voltage range	-3 ... +30 VDC
Input resistance	4 kOhm
Response time	2.2 ms OFF to ON 2.2 ms ON to OFF

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete Outputs

A 2-point temperature monitoring circuit protects each discrete output against short-circuiting and overload. The outputs will keep disconnecting and reconnecting until the cause of the error has been eliminated.
Specifications for discrete outputs

Output type	Semiconductor
Output voltage	External supply - .5 VDC
Number of points	2
Number of groups	1
Points per group	2
Current capacity	1 A/point maximum 2 A/group 2 A/module
Signal type	True High
Leakage current (output out)	< 1 mA @ 24 VDC
On state voltage drop	< 0.5 VDC @ 0.5 A
Output protection (See Note Below)	Outputs are electronically safeguarded to assist in short circuit and overload protection
Fault reporting	1 red LED/point (row 3) ON when short current/ overload occurs
Error indication	Message "I/O Error" on bus adapter if module is defective
Response time (resistive load / 0.5 A)	< 0.1 ms OFF to ON < 0.1 ms ON to OFF
Maximum switching cycles	1000/h for 0.5 A inductive load 100/s for 0.5 A resistive load 8/s for 1.2 W Tungsten load

Note: Discrete 24 VDC outputs incorporate thermal shutdown and overload protection. The output current of a shortened output is limited to a nondestructive value. The short circuit heats the output driver and the output will switch off. The output will switch on again if the driver leaves the overtemperature condition. If the short circuit still exists, the driver will reach the overtemperature condition again and will switch off again.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional busbar.

Illustration

Rows 1 through 3 show the internal connections between terminals on the I/O base. Row 4 through 6 show the internal connections on the optional busbar.

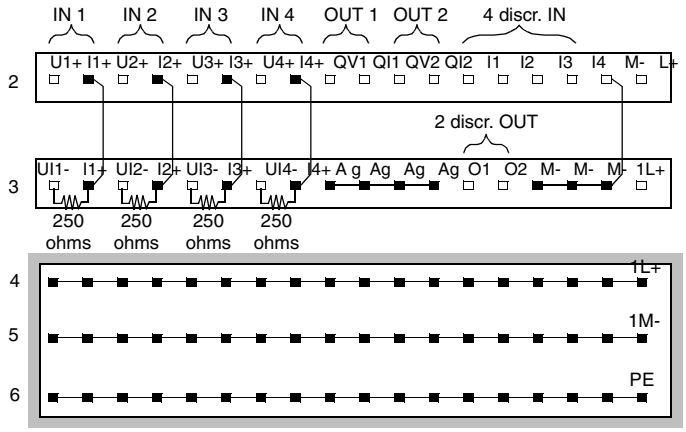

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

The discrete input points are field wired to row 2 of the base. The discrete output points are wired to row 3. This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-, 2-, or 3-row busbar. The following busbars are available from Schneider Automation.

Type	Number of Rows	Part Number
Screw-in	1 - row	170 XTS 006 01
	2 - row	170 XTS 005 01
	3 - row	170 XTS 004 01
Spring-clip	1 - row	170 XTS 007 01
	2 - row	170 XTS 008 01
	3 - row	170 XTS 003 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mapping Terminal Blocks

Mapping terminal blocks and busbars is described in the table below

Row	Connection	Signal	Meaning
2	1, 3, 5, 7	U1+ ... U4+	pos. voltage input (analog)
	2, 4, 6, 8	IS1 ... IS4	current sensing inputs (analog)
	9, 11	QV1, QV2	analog output channels 1 ... 2 (voltage mode)
	10, 12	QI1, QI2	analog outputs, channels 1 ... 2 (current mode)
	13 ... 16	I1 ... I4	discrete inputs 1...4
	17/ 18	M-/ L+	reference potential and operating voltage
3	1, 3, 5, 7	UI1- ... UI4-	neg. voltage mode and current mode inputs (analog)
	2, 4, 6, 8	I1+ ... I4+	pos. analog inputs, channels 1 ... 4 (current mode)
	9 ... 12	Ag	reference potential for analog channels
	13, 14	O1, O2	discrete outputs 1,2
	15, 16, 17	M-	reference potential for discrete outputs
	18	1L+	output voltage mode for discrete outputs
4	1 ... 18	1L+	sensor supply
5	1 ... 18	1M-	reference potential for sensors
6	1 ... 18	PE	protective ground



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Protective Circuit May Be Required

When contacted switches are used on the input lines or when lines to the peripherals are very long, the outputs of inductive loads require protective circuitry with a clamping/suppressor diode. Install the protective circuit prallel to the operating coil.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section contains diagrams to assist you in wiring the following types of devices.

I/O Type	Diagram
Discrete input	2- and 4-wire sensors
Discrete output	3-wire actuators
Analog output	2-wire actuators
Analog input	3-wire sensors


Discrete Inputs

The diagram below shows an example of wiring for discrete inputs.

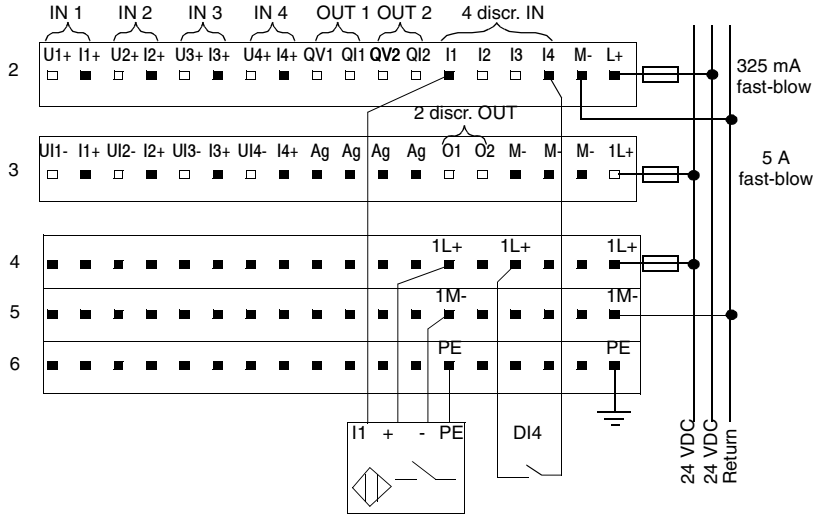


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete Outputs The diagram below shows an example of wiring for discrete outputs.

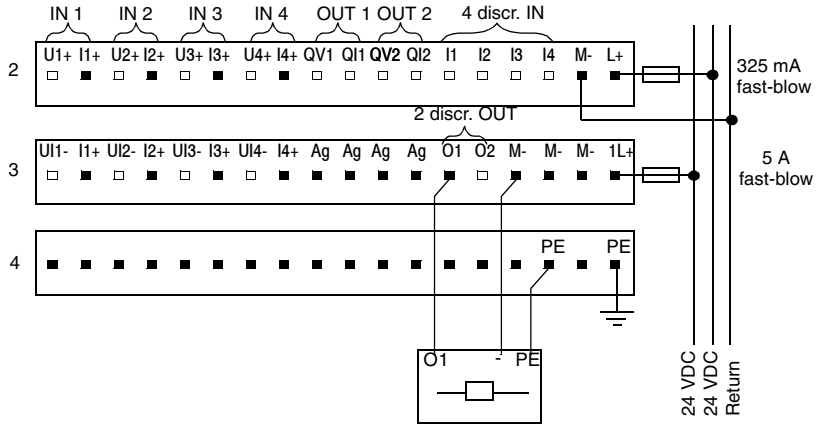


Analog Outputs The diagram below shows an example of wiring for analog outputs.

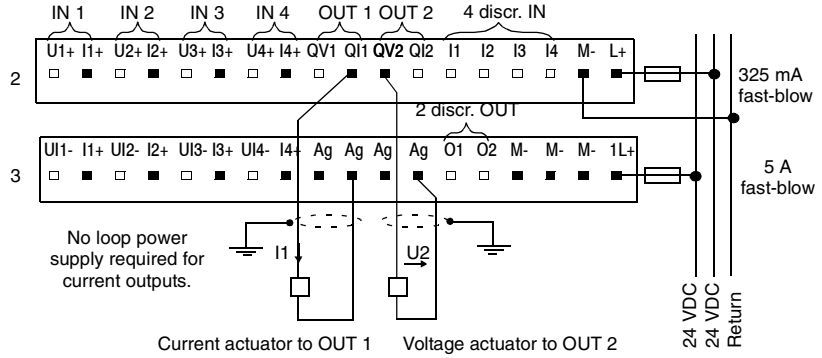

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Inputs

The diagram below shows an example of wiring for analog inputs.

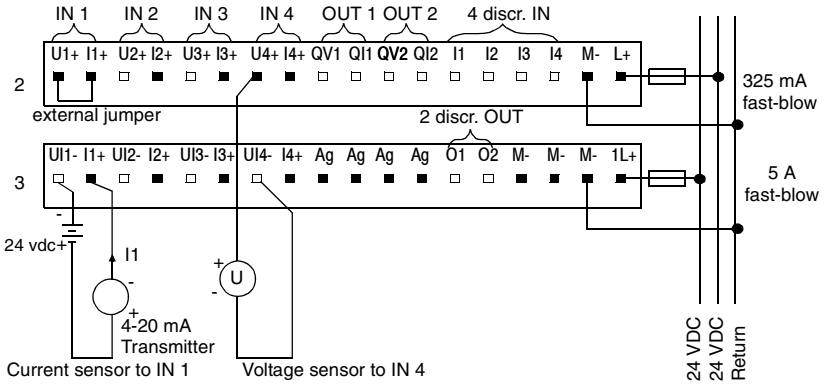

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 AMM 090 00 TSX Momentum I/O base supports 4 analog inputs, 2 analog outputs,4 discrete inputs and 2 discrete outputs. This section contains information about the mapping of the output words into the analog/discrete output values, the usage of output words for channel configuration and the mapping of analog/discrete input values into input words.

I/O Map


The I/O base may be mapped as five contiguous input words and five contiguous output words, as follows.

Word	Input Data	Output Data
1 = LSW	Value, input channel 1	Parameters for input channels 1 ... 4
2	Value, input channel 2	Parameters for output channels 1,2
3	Value, input channel 3	Value, output channel 1
4	Value, input channel 4	Value, output channel 2
5 = MSW	Discrete inputs	Discrete outputs

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete I/O Mapping

The figure below shows how data is mapped with an IEC Compliant adapter.

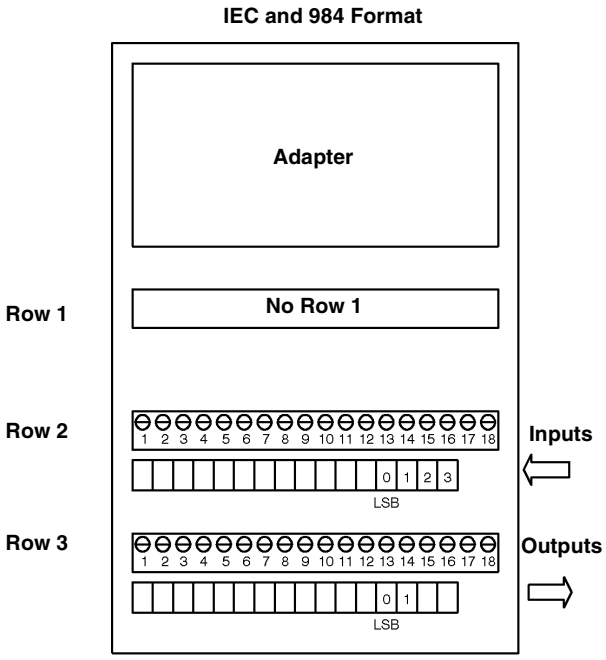

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Channel Parameters

Overview

Parameters must be set for all of the analog channels before the module can be commissioned. This section provides the codes for setting the parameters and gives examples of parameter settings.

Note: If you set new parameters for the module, always send a complete set of parameters (all channels, inputs and outputs), even if you only want to change a single parameter. Otherwise the module will refuse the new parameters and continue working with the old ones.

Key

This section focuses on output words 1 and 2, as highlighted in the table below.

Word	Input Data	Output Data
1 = LSW	Value, input channel 1	**Parameters for input channels 1 ... 4**
2	Value, input channel 2	**Parameters for input channels 5 ... 8**
3	Value, input channel 3	Not used
4	Value, input channel 4	Not used
5 = MSW	Value, input channel 5	Not used

Illustration

Parameters are set by entering a four-bit code in output words 1 and 2, as follows:.

Output Word 1															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
for input channel 4				for input channel 3				for input channel 2				for input channel 1			

Output Word 2															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
not used				not used				for output channel 2				for output channel 1			

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Codes for Analog Input Parameters

Use the following codes to set the parameters for each analog input channel.

Code (binary)	Code (hex)	Parameter
0100	4	Channel inactive
0010	2	+/-5V or +/-20mA input range
0011	3	+/-10V input range
1010	A	1 ... 5V or 4 ... 20 mA input range

Example of Analog Input Parameters

If output word 1 is initialized as A324 hex, then the input channels have the following parameters.

Channel	Parameter
1	Disabled
2	at +/- 5 V
3	at +/- 10 V
4	at 1 ... 5 V

Codes for Analog Output Parameters

Use the following codes to set the codes for each analog output channel. The remaining bit combinations are reserved.

Code (Binary)	Code (Hex)	Parameter	Reset Behavior of Outputs
0 1 0 0	0	Channel inactive	0 V / 0 mA
0 0 0 1	1	0 ... 20 mA	0 mA
0 0 1 1	3	+ / - 10 VDC	0 V
0 1 0 1	5	0 ... 20 mA	20 mA
0 1 1 1	7	+ / - 10 VDC	+ 10 VDC
1 0 0 1	9	0 ... 20 mA	Output is held
1 0 1 1	B	+ / - 10 VDC	Output is held

Example of Analog Output Parameters

If output word 2 is initialized as 0091 hex, then the output channels have the following parameters.

Channel	Parameter
1	0 ... 20 mA with reset to 0
2	0 ... 20 mA with reset to hold

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Outputs

Overview

This section describes how to interpret the value of the analog output channels.

Key

This section describes output words 3 and 4, as highlighted in the table below.

Word	Input Data	Output Data
1 = LSW	Value, input channel 1	Parameters for input channels 1 ... 4
2	Value, input channel 2	Parameters for output channels 1, 2
3	Value, input channel 3	**Value, output channel 1**
4	Value, input channel 4	**Value, output channel 2**
5 = MSW	Discrete inputs	Discrete outputs

Diagram

The following diagrams explain how to interpret the value of output words 3 and 4. .

Output Word 3															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
sign	value output channel 1														

Output Word 4															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
sign	value output channel 2														

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Inputs

Overview

This section describes how to interpret the value of the analog input channels.

Key

This section describes input words 1 ... 4, as highlighted in the table below.

Word	Input Data	Output Data
1 = LSW	**Value, input channel 1**	Parameters for input channels 1 ... 4
2	**Value, input channel 2**	Parameters for output channels 1, 2
3	**Value, input channel 3**	Value, output channel 1
4	**Value, input channel 4**	Value, output channel 2
5 = MSW	Discrete inputs	Discrete outputs

Analog Input Values

Mapping of analog input values is shown below.

Intput Word 1															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
sign	value input channel 1														

Input Word 4															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
sign	value input channel 4														

Resolution

The resolution of the module is 12-, 13- or 14-bit, depending on the range.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete Inputs and Outputs

Overview

The 170 AMM 090 00 TSX Momentum I/O base supports 4 discrete inputs and 2 discrete outputs. This section describes how to map I/O data between the I/O base and the CPU.

> **Note:** You cannot commision the discrete I/O until parameters have been set for all six analog channels.
> You must configure analog inputs and outputs, even if they are not being used, for the discrete inputs and outputs to operate.

Key

The discrete inputs and outputs are I/O mapped as word 5, the most significant word, as shown in the table below:

Word	Input Data	Output Data
1 = LSW	Value, input channel 1	Parameters for input channels 1 ... 4
2	Value, input channel 2	Parameters for output channels 1,2
3	Value, input channel 3	Value, output channel 1
4	Value, input channel 4	Value, output channel 2
5 = MSW	**Discrete inputs**	**Discrete outputs**

Number of Words

The processor sends two discrete output data bits in one 16-bit word to the I/O base. The base returns four discrete input data bits, and possibly an error message, if one has been detected, to the processor in one 16-bit word.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Input Measuring Ranges

Overview

This section contains illustrations explaining the analog/digital relation for the various input and output measuring ranges.

Input Range +/- 10 V


The following diagram shows the analog/digital relation for the input measuring range +/- 10 V. The voltage value is calculated along the following formula using the digital measurand: Vn = 3200 x Va (for the linear range).

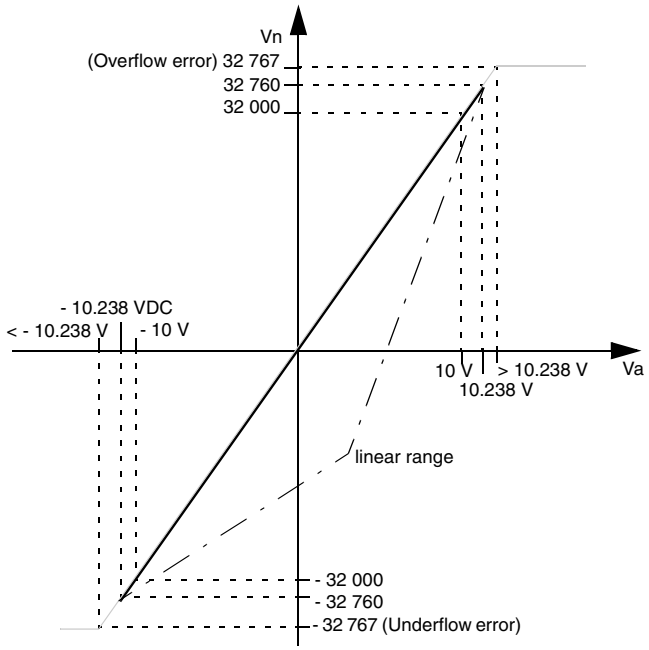

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Input Range +/- 5 V


The following diagram shows the analog/digital relation for the input measuring range +/- 5 V. The voltage value is calculated along the following formula using the digital measurand: Vn = 6400 x Va (for the linear range).

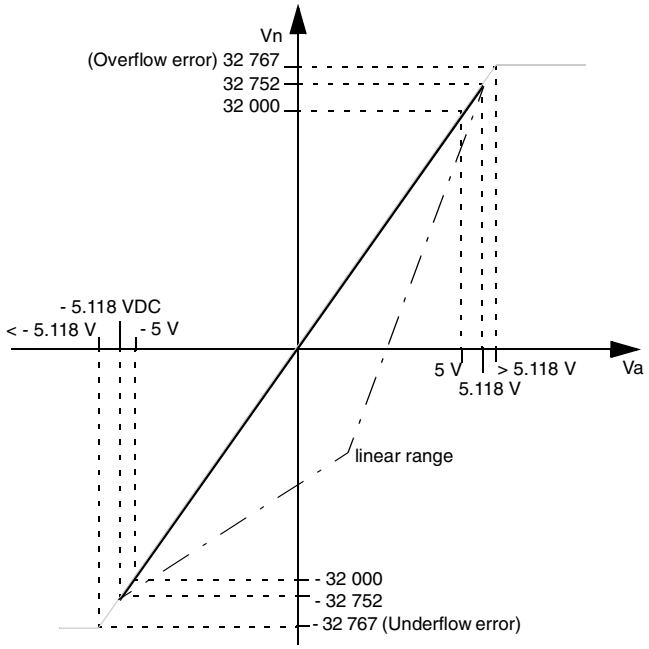

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Input Range +/- 20 mA


The following diagram shows the analog/digital relation for the input measuring range +/- 20 mA. The current value is calculated along the following formula using the digital measurand: Vn = 1600 x Ia (for the linear range).

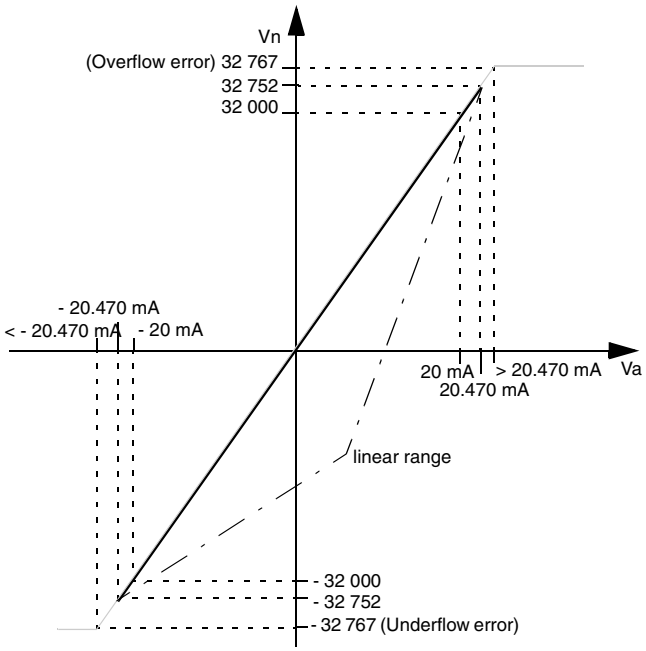

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Input Range 1 ... 5 V


The following diagram shows the analog/digital relation for the input measuring range 1 ... 5 V. The voltage value is calculated along the following formula using the digital measurand: Vn = 8000 x Va - 8000 (for the linear range).

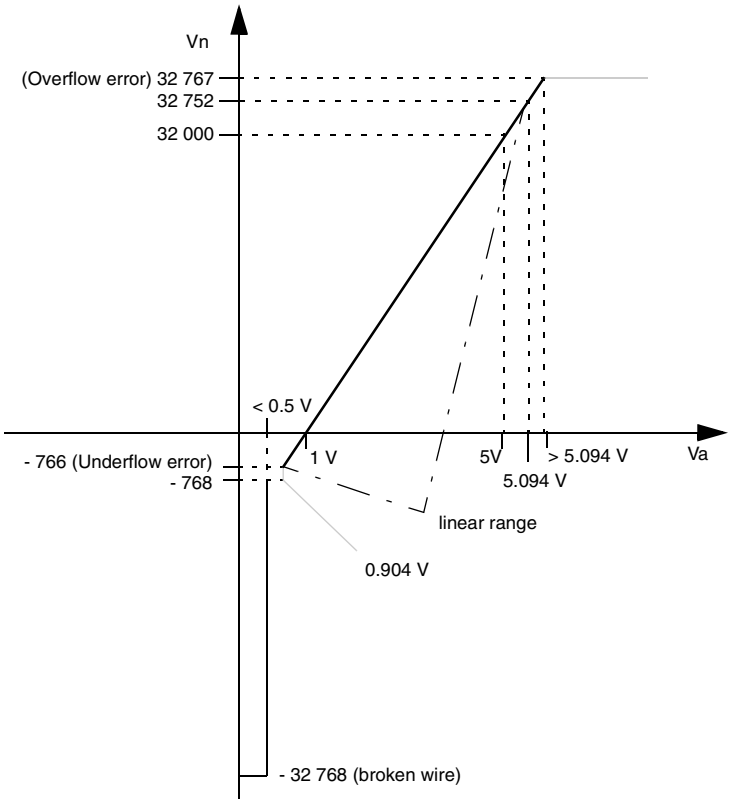

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Input Range 4 ... 20 mA


The following diagram shows the analog/digital relation for the input measuring range 4 ... 20 mA. The current value is calculated along the following formula using the digital measurand: Vn = 2000 x Ia - 8000 (for the linear range). Disabled channels deliver a value of 0.

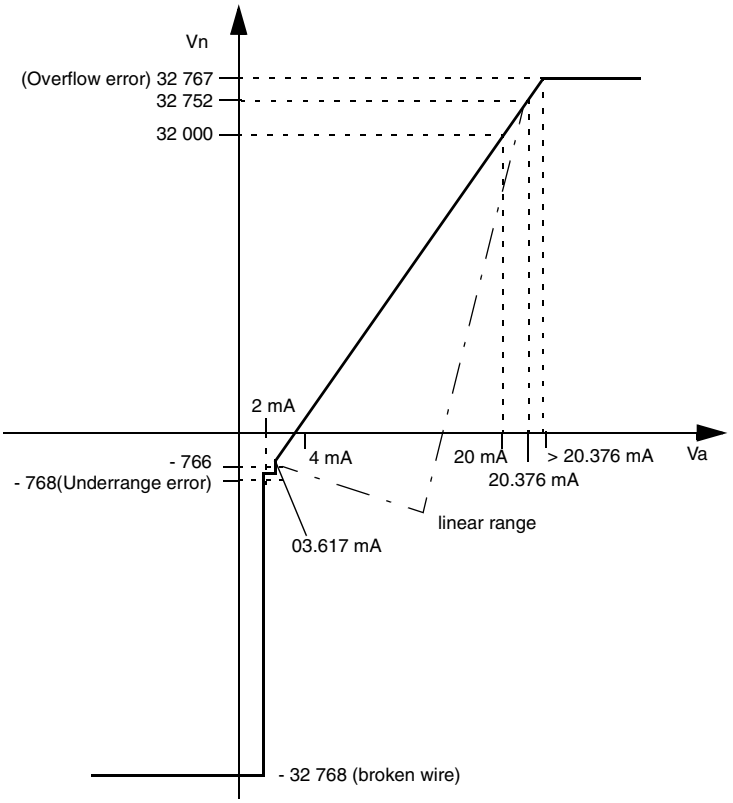

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Output Range +/- 10 V

The following diagram shows the analog/digital relation for the output range +/- 10 V. When the bus is reset, the outputs use the configured parameters. If the module does not have valid parameters, the outputs will go to 0 V resp. 0 mA.The output voltage value is calculated along the following formula using the digital default value:Va = 1/3200 x Vn.

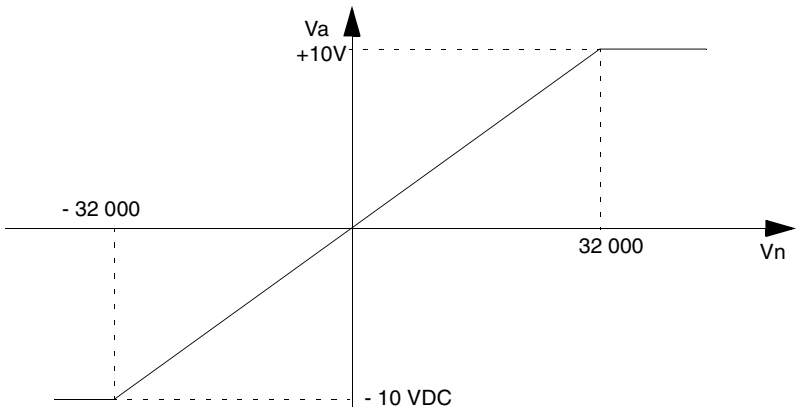

Output Range 0 ... 20 mA

The following diagram shows the analog/digital relation for the output range 0 ... 20 mA. When the bus is reset, the outputs use the configured parameters. If the module does not have valid parameters, the outputs will go to 0 V resp. 0 mA.The output current value is calculated along the following formula using the digital default value:Ia = 1/1600 x Vn.

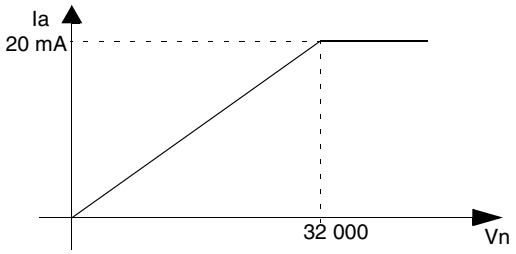

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Error Messages

Overview

Error messages are stored in input word 5 (the 3x +4 register). This section explains how to interpret the bits in that register.

Diagram

This diagram explains the error message displayed by each bit. A value of 1 indicates the error has occurred.

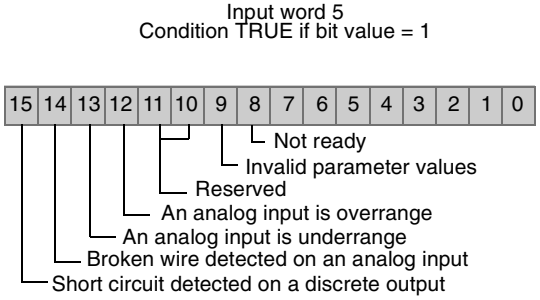

Not Ready (Bit 8)

This error occurs when the I/O base has not yet received valid parameters or has just received parameters for the first time and is checking them.

Invalid Parameters (Bit 9)

This error occurs when the I/O base refuses one or more invalid parameters. The base will continue working with the old parameters until it receives a complete set of valid parameters.

Overrange Indication (Bit 12)

This error occurs when the I/O base detects an overrange analog input value. The threshold is range-dependent.

Underrange Indication (Bit 13)

This error occurs when the I/O base detects an underrange analog input value. The threshold is range-dependent.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Broken Wire Detection (Bit 14)	Broken wire detection is possible for the 4 ... 20 mA range. In this case, a current signal that is less than 2 mA on one of the inputs is detected as a broken wire. The input word of that channel returns the value -32,768. In the 1 ... 5 VDC range, broken wire detection is correctly seen as undervoltage detection. A voltage of less than 0.5 VDC on on of the input channels is recognized as broken wire. The input word of that channel returns the value -32,768. In case of a broken wire, the input floats and bit 14 is not set in all cases. A reliable broken wire detection is only possible if a resistor is wired in parallel to the input terminals. This resistor will discharge the input capacity and broken wire detection will be available. The value of this resistor depends on internal resistance of the sensor. Values too low might influene the input signal and values too high lengthen the time for broken wire detection. Normally, values of less than 100 kOhm are appropriate.
Short Circuit (Bit 15)	This error occurs when the I/O base detects a short circuit on a discrete output.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ANR 120 90 Unipolar Analog 6 Ch. In / 4 Ch. Out Module Base with 24 VDC I/O pts

31

Overview

Purpose

This chapter describes the 170 ANR 120 90 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	494
Specifications	496
Internal Pin Connections	500
Field Wiring Guidelines	501
Wiring Diagrams	503
I/O Mapping	505
Output Words	508
Inputs Words	512
Input and Qutput Measuring Ranges	514
Error Messages	516

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains a photograph of the front panel of the 170 ANR 120 90 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below.

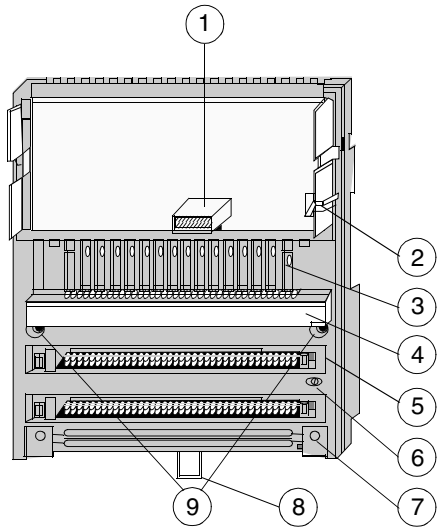


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Protective cover
5	Sockets for the terminal connectors
6	Grounding screw
7	Busbar mounting slot
8	Locking tab for DIN rail mount
9	Mounting holes for panel mount

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

The LEDs are shown in the illustration below.

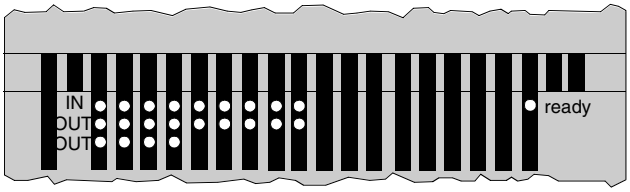

LED Descriptions

The LEDs are described in the table below.

LED	Color	Status	Meaning
Ready	Green	ON	I/O base is communicating with the comm adapter/CPU top hat. CPU must be in RUN state.
O1, O2, O3, O4, O5, O6, O7, O8	Green	ON	Indicates the corresponding discrete output point is ON
I1, I2, I3, I4, I5, I6, I7, I8	Green	ON	Indicates the corresponding input point is ON
AO1, AO2, AO3, AO4	Green	ON	Indicates the corresponding analog output channel is active

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ANR 120 90 I/O base.

General Specifications

General Specifications

Module type	Analog 6 inputs / 4 outputs Discrete 8 inputs / 8 outputs
Supply voltage	24 VDC
Supply voltage range	20 ... 30 VDC
Supply current consumption	max. 400 mA
I/O map	12 input words 12 output words

Isolation

Isolation

Between points	none
Between groups	none

Protection

Protection

Discrete outputs	protected against overload and short-circuiting

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply 500 V
Emissions	EN 50081-2
ENV 50140	10 V/M
Agency approvals	UL, CSA, CE

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Environment

Environmental data

Storage Temperature	-40 TO 85 °C
Operating Temperature	0 TO 60 °C
Humidity Operating	95% RH @ 60 °C
Humidity Non-operating	95% RH @ 60 °C
Vibration Operating	10 - 57 HZ 0.075 MMDA 57-150 HZ 1
Shock Non- Operating	15 G, 11MS, 3 shocks/axis
Free Fall (Unpackaged)	0.1 meter

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5 mm (6.3 in) two busbars 171.5 mm (6.75 in) three busbars
Weight	220 g (0.49 lb)

Analog Inputs

Specifications for analog inputs

Number of Input Channels	Six single ended
Range	0 to 10V
Input Impedance	>1 megohm
Resolution	14 bits
Accuracy, 25 °C	0.2%
Linearity	
Integral Linearity Differential Linearity	+/- 1LSB Guaranteed Monotonic
Temp Coefficient	+ 100PPM/° C
Update Time	0.75msec for all six channels
Data Format	Left justified

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Outputs

Specifications for analog outputs

Number of Output Channels	4
Range	0 to 10V
Resolution	14 bits
Accuracy, 25 °C	0.4%
Linearity	
Integral Linearity Differential Linearity	+/- 2LSB Guaranteed Monotonic
Temp Coefficient	+ 100PPM/° C
Update Time	1.20 msec for all four channels
Data Format	Left justified

Discrete Inputs

Discrete Inputs

Number of Points	8 sinking, Type 2
Voltage and Current Thresholds	
ON (Voltage)	>11VDC
OFF (Voltage)	<5VDC
ON (Current)	>6mA
OFF (Current)	<2mA
Absolute Maximum Input Continuous	 32VDC
Input Response ON - OFF, OFF - ON	 1.20msec maximum
Input Protection	Resistor limited, varistors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete Outputs Discrete Outputs

Number of Output Points	8 sourcing
Operating Voltage	
Working	10 ... 30VDC
Absolute Maximum	50VDC for 1msec
ON State Drop / Point	0.4VDC max at 0.25A
Maximum load current	
Each Point	0.25A
Per Module	2A
Off State Leakage / Point (max)	0.4mA @ 30VDC
Surge Current Maximum Per point	2.5A for 1msec
Response OFF-ON, ON-OFF	1.20msec max
Output Protection (Internal)	Voltage suppressor diodes, Wickman 2.5A Fuse



CAUTION

Discrete 24 VDC outputs incorporate thermal shutdown and overload protection.

The output current of a shortened output is limited to a nondestructive value. The short circuit heats the output driver and the output will switch off. The output will switch on again if the driver leaves the overtemperature condition and the user resets the output under program control. If the short circuit still exists after the output point is reset, the driver will reach the overtemperature condition again and will switch off again.

Failure to follow this precaution can result in injury or equipment damage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional busbar.

Illustration

Rows 2 and 3 show the internal connections between terminals on the I/O base. Row 4 through 6 show the internal connections on the optional busbar.

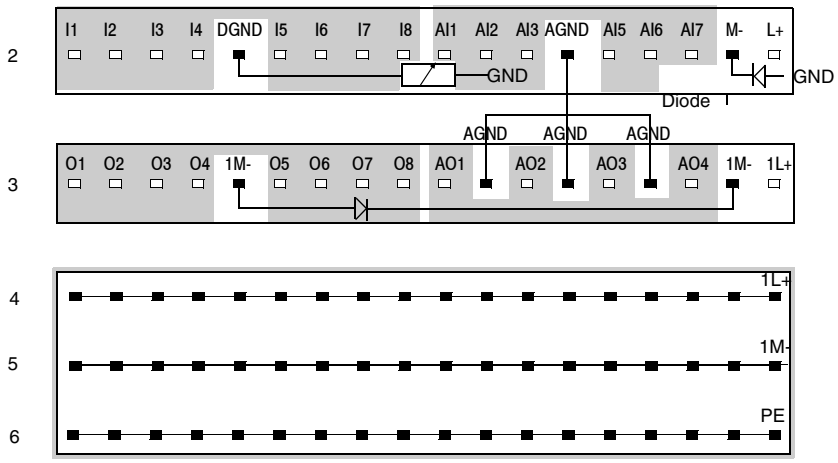

Note: AGND and DGND are seperated internally inside the module. External digital inputs must be returned the the DGND terminal. External analog Circuits must be returned to AGND terminals.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

Inputs are field wired to row 2 of the I/O base. Outputs are field wired to row 3. This section contains wiring guidelines and precautions for wiring the 170 ANR 120 90 TSX Momentum I/O base.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-, 2-, or 3-row busbar. The following busbars are available from Schneider Automation.

Type	Number of Rows	Part Number
Screw-in	1 - row	170 XTS 006 01
	2 - row	170 XTS 005 01
	3 - row	170 XTS 004 01
Spring-clip	1 - row	170 XTS 007 01
	2 - row	170 XTS 008 01
	3 - row	170 XTS 003 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mapping Terminal Blocks

The folowing table shows mapping terminal blocks and optional busbars.

Row	Terminal	Connection	Description
2	1-4	I1 ... I4	Discrete inputs 1 through 4
	5	Digital ground	Return for discrete inputs
	6-9	I5 ... I8	Discrete inputs 5 through 8
	10-12	AI1 ... AI3	Analog inputs 1, 2, 3
	13	Analog ground	Return for analog inputs
	14-16	AI4 ... AI6	Analog inputs 4, 5, 6
	17	M-	Module operating voltage, 24VDC return
	18	L+	Module operating voltage, 24VDC
3	1-4	O1 ... O4	Discrete outputs 1 through 4
	5	1M-	Return for discrete outputs
	6-9	O5 ... O8	Discrete outputs 5 through 8
	10, 12, 14, 16	AO1, AO2, AO3, AO4	Analog outputs 1, 2, 3, 4
	11, 13, 15	Analog ground	Return for analog outputs
	17	1M-	Voltage for field devices, 24VDC return
	18	1L+	Voltage for field devices, 24VDC
4	1-18	PE	Earth ground for field devices

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section contains diagrams to assist you in wiring the following types of devices:

- Discrete input and output
- Analog input and output

Discrete I/O Devices

The diagram below shows an example of wiring for discrete I/O devices.

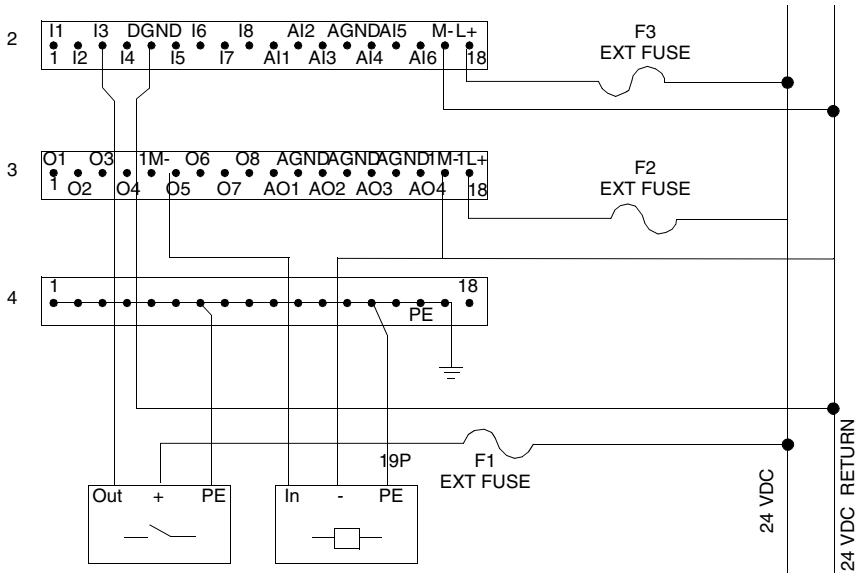


Recommended fuses:

- F1,F3-use a 1A fuse, Wickman 181110000 or equivalent
- F2 -use a 2.5A fuse, Wickman 181125000 or equivalent

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog I/O Devices

The diagram below shows an example of wiring for Analog I/O devices.

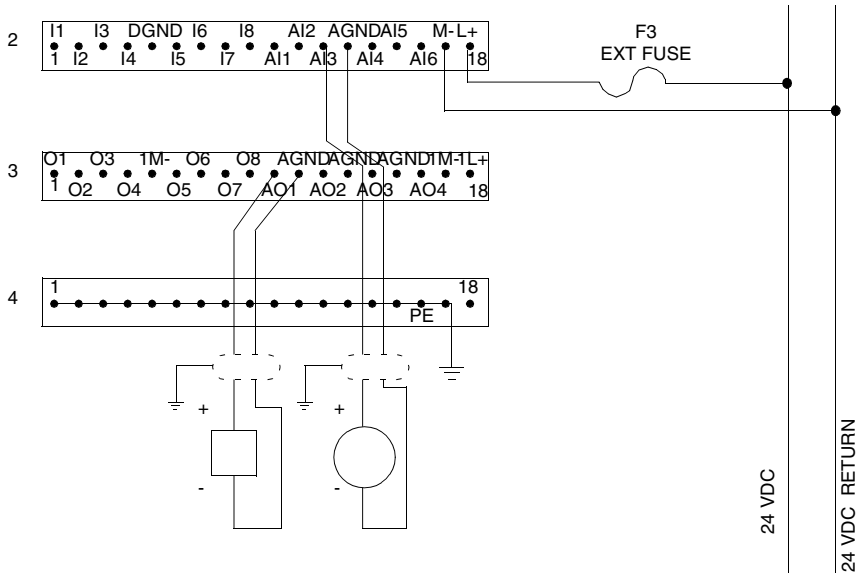

Recommended fuses:

- F3-use a 1A fuse, Wickman 18111000 or equivalent

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ANR 120 90 TSX Momentum I/O base supports 6 analog inputs, 4 analog outputs,8 discrete inputs and 8 discrete outputs. This section contains information about the mapping of the output words into the analog/discrete output values, the usage of output words for channel configuration and the mapping of analog/discrete input values into input words.


I/O Map

The I/O base must be mapped as 12 contiguous input words and 12 contiguous output words, as follows.

Word	Input Data	Output Data
1	Status word (module status)	System information
2	State of the 8 discrete inputs	Register for discrete reaction in a fail state
3	Analog input word channel 1	Register for analog reaction in a fail state
4	Analog input word channel 2	User defined analog fail state values for channel 1
5	Analog input word channel 3	User defined analog fail state values for channel 2
6	Analog input word channel 4	User defined analog fail state values for channel 3
7	Analog input word channel 5	User defined analog fail state values for channel 4
8	Analog input word channel 6	State of the 8 discrete outputs
9	Not used	Analog output word channel 1
10	Not used	Analog output word channel 2
11	Not used	Analog output word channel 3
12	Not used	Analog output word channel 4

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog I/O MAP 170 ANR 120 90 analog values are mapped as follows.

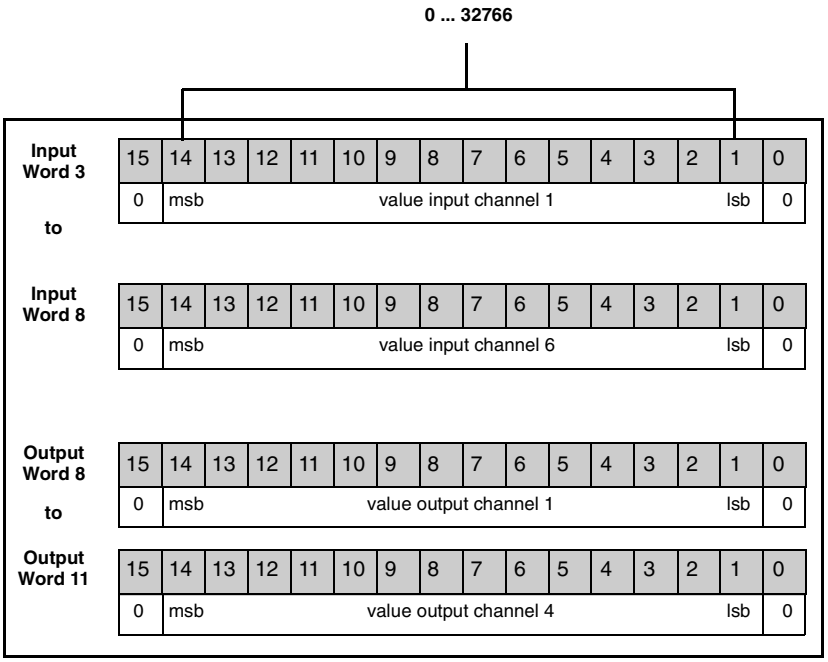


Note: The display is standardized and in each case the analog value will appear flush left.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete I/O MAP

The 170 ANR 120 90 base returns eight discrete input bits to the Processor in one 16-bit word (3x). The input points are field wired to row 2 of the base. The Processor sends eight discrete output bits to the base as a single 16-bit word (4x). The output points are field wired to row 3. The figure below shows how the data is mapped between the base and the CPU.

:

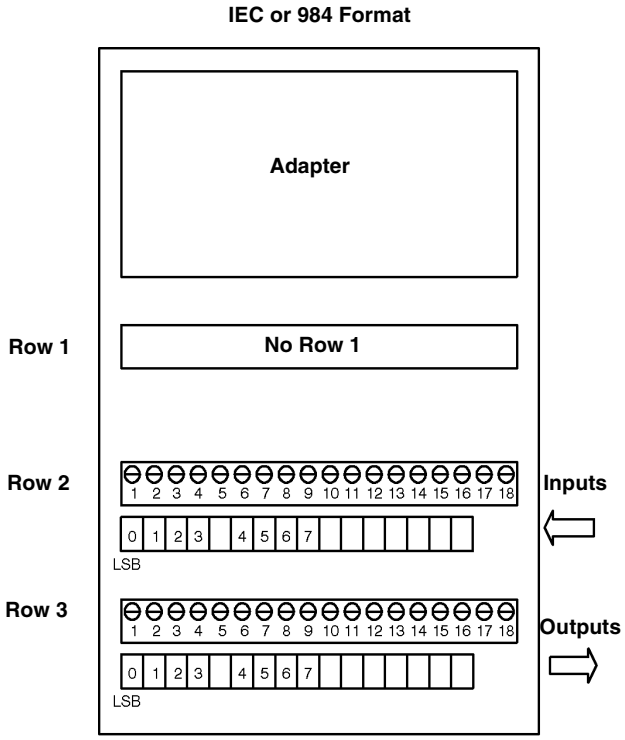

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Output Words

Overview

This section describes how to use the output words to configure the analog and discrete I/O channels.

Words Used

170 ANR 120 90 analog and discrete output channels are configured by entering the appropriate information in output words 1 through 7 as follows.

> **Note:** If you are using Modsoft, the parameter words are modified through the zoom screen.

The I/O base must be mapped as 12 contiguous input words and 12 contiguous output words, as follows.

Word	Output Data
1	System information
2	Register for discrete reaction in a fail state
3	Register for analog reaction in a fail state
4	User defined analog fail state values for channel 1
5	User defined analog fail state values for channel 2
6	User defined analog fail state values for channel 3
7	User defined analog fail state values for channel 4
8	State of the 8 discrete outputs
9	Analog output word channel 1
10	Analog output word channel 2
11	Analog output word channel 3
12	Analog output word channel 4

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Word 1

System information
The following table tells how bits are assigned.

Word 1	Description
Bits 0 ... 14	Not used or can be used to start the module. (Turns on the Ready LED with any value greater than zero.)
Bit 15	1= Enable user defined shutdown values 2= Disables user defined shutdown values

- Valid setting for word one are 0001 ... FFFF It is essential for the module's operation to have a value larger than 0 in this register.
- The module's default value at power-up for this register is zero (module shut down.



CAUTION

Zero is an illegal value for the system information register.

A zero value in word one will cause an output shut down state and no inputs or outputs are updated.

Failure to follow this precaution can result in injury or equipment damage.

Word 2

Discrete Fail State Reaction and Value Register
This word combines the value and reaction in a fail state.

Word 2	Description
Bits 0 ... 7	Discreet fail state value for outputs 1 8
Bits 8 ... 13	Not used
Bit 14	0= hold last value, 1= user defined value
Bit 15	0= all outputs reset, 1=check bit 14


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Word 3

Analog Fail State Reaction Register
This word contains four 2 bit fields which define the fail state for each channel. The four possible values of fail state are as follows.

2 bit value	Fail State
00	Minimum output voltage
01	Hold last value (default)
10	User defined shutdown value
11	Hold last value

The following picture shows how the channels are mapped into word 3:

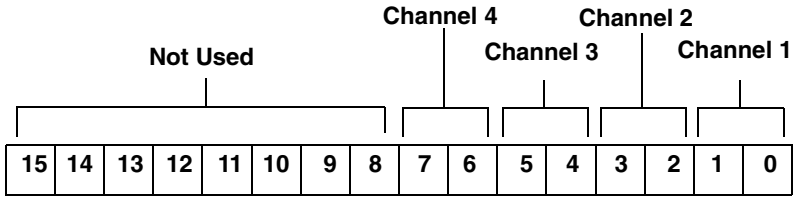

Words 4 ... 7

Analog Fail State Value Register
The module always expects four words of user defined data, even if the data is not used. The first word of the user shutdown field is used for channel 1, the second for channel 2, . . .

Word 8

Discrete Output RegisterThis word contains a right justified binary eight bit data field.

Words 9 ... 12

Map to Analog Output Register
Each word in this range contains a left justified, binary 15 bit data field. The range is 0 ... 7FFE hex (0 ... 32766 decimal), but the resolution is only 14 bit (See *Analog I/O MAP, p. 506*).

Note: If a user shutdown value is greater than the count range for the channel, then the count range maximum value will be used as the shutdown value.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4x Registers

The 4x registers traffic copped to this module are used for output data as follows.

I/O Map Register	Data Type
4x + 7	Data for discrete output
4x + 8	Data for analog output channel 1
4x + 9	Data for analog output channel 2
4x + 10	Data for analog output channel 3
4x + 11	Data for analog output channel 4

Range

Output operating range

	Output Voltage	Data is left justified	Comment
Output Range	0 ... 10.000V	0 ... 32000	Nominal Output Voltage Range
Output Over Range	10.000 ... 10.238V	32002 ... 32764	Linear Over Range Output Voltage
Output Out of Range	>=10.238	32766 (7FFE Hex)	Threshold Will Be Limited To 32766 Decimal

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Inputs Words

Overview

This section describes how to interpret the value of the input words.

Words Used

The status of the 170 ANR 120 90 module and the values of the analog and discrete input channels are contained in input words 1 through 8 as follows.

Word	Input Data
1	Status word (module status)
2	State of the 8 discrete inputs
3	Analog input word channel 1
4	Analog input word channel 2
5	Analog input word channel 3
6	Analog input word channel 4
7	Analog input word channel 5
8	Analog input word channel 6
9 ... 12	Not used

Word 1

The Status word (word 1) contains information about the health of the module and the status of the discrete outputs. Word 1 also contains network communication loss, over temperature of the discrete outputs and short circuit at the discrete outputs.

Bits 15 ... 9	Bit 8	Bits 7 ... 4	Bit 3 (Channel 7, 8)
Not used	0 = Bad module health (module lost communication) 1 = Healthy module	Not used	0 = Fault 1 = No fault

Bit 2 (Channel 5, 6)	Bit 1 (Channel 4, 3)	Bit 0 (Channel 1, 2)
0 = Fault 1 = No fault	0 = Fault 1 = No fault	0 = Fault 1 = No fault

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Word 2

Discrete input register
This word contains a right justified binary eight bit data field.

Words 3 ... 8

Analog input register
Words 3 ... 8 map to the analog input register. Each word in this range contains a left justified 15 bit data field. The range is from 0H to 7FFE hex, but the resolution is 14 bit. (0 ... 32766 decimal or 0 ... 7FFE hex). See *Analog I/O MAP, p. 506*

Words 9 ...12

Words 9 ... 12 are not used.

3x Registers

The 3x registers traffic copped to this module are used for input data as follows.

I/O Map Register	Data Type
3x + 1	Data for discrete input
3x + 2	Data for analog input channel 1
3x + 3	Data for analog input channel 2
3x + 4	Data for analog input channel 3
3x + 5	Data for analog input channel 4
3x + 6	Data for analog input channel 5
3x + 7	Data for analog input channel 6

Range

Input operating range:

	Input Voltage	Data is left justified	Comment
Input Range	0 ... 10.000V	0 ... 32000	Nominal Input Voltage Range
Input Over Range	10.000 ... 10.238V	32002 ... 32764	Nondestructive Tolerated Input Over Range Voltage
Input Out of Range	>=10.238	32766 (7FFE Hex)	Input Voltage Exceeding This Threshold May Damage The Module

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Input and Qutput Measuring Ranges

Overview

This section contains illustrations explaining the analog/digital relation for the various input and output measuring ranges.

Input range 0 -10 V


The following diagram shows the analog/digital relation for the input measuring range 0 - 10 V. The voltage value is calculated along the following formula using the digital measurand: Vn = 3200 x Va (for the linear range).

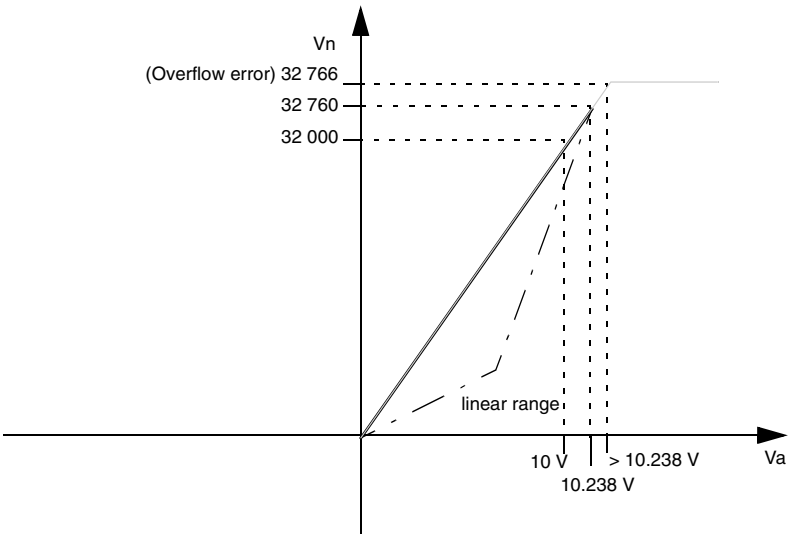

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Output range 0 -10 V

The following diagram shows the analog/digital relation for the output measuring range 0 -10 V. The voltage value is calculated along the following formula using the digital measurand: Vn = 3200 x Va (for the linear range).

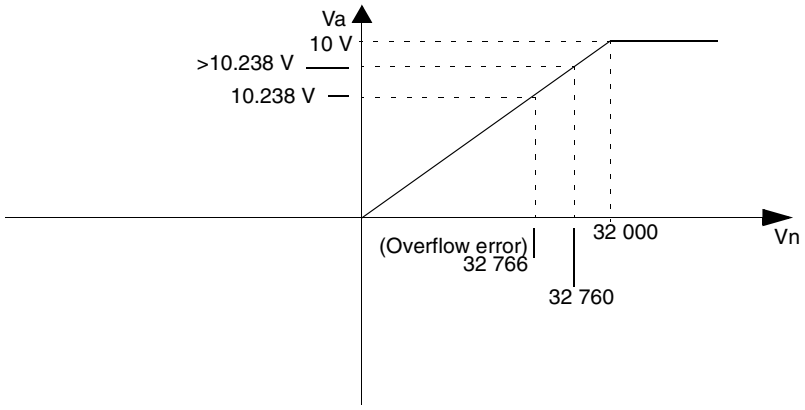

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Error Messages

Interpreting the Error Bits

If an internal error is detected in the module, the module becomes nonoperational. Other error messages are posted in the four least significant bits of the status word.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ANR 120 91 Bipolar Analog 6 Ch. In / 4 Ch. Out Module Base with 24 VDC I/O pts.

32

Overview

Purpose

This chapter describes the 170 ANR 120 91bipolar analog TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	518
Specifications	520
Internal Pin Connections	525
Field Wiring Guidelines	526
Wiring Diagrams	528
I/O Map	530
Register for Outputs	531
4x Registers	534
Register for Inputs	535
Analog Map	537
Discrete I/O Points and IEC Compliant Data Mapping	538
Input and Output Ranges	539
Interpreting the Error Bits	541

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 ANR 120 91 I/O base and a description of the LEDs.

Front Panel Illustration

The illustration below shows the front panel of the I/O base.

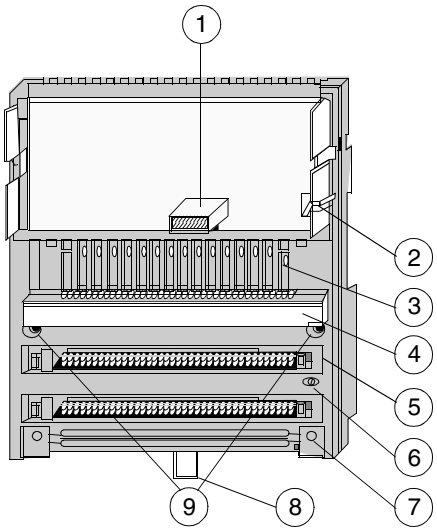


Components of the I/O Module:

Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Protective cover
5	Sockets for the terminal connectors
6	Grounding screw
7	Busbar mounting slot
8	Locking tab for DIN rail mount
9	Mounting holes for panel mount

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

The illustration below shows the LEDs.

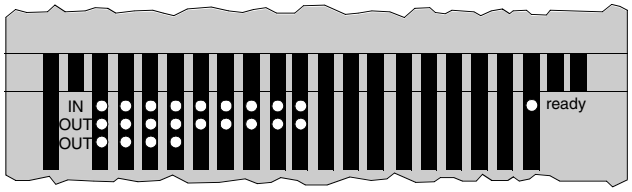

LED Descriptions

The following table describes the LEDs.

LED	Color	Status	Meaning
Ready	Green	ON	I/O base is communicating with the comm adapter/CPU top hat. CPU must be in RUN state.
O1, O2, O3, O4, O5, O6, O7, O8	Green	ON	Indicates the corresponding discrete output point is ON.
I1, I2, I3, I4, I5, I6, I7, I8	Green	ON	Indicates the corresponding input point is ON.
AO1, AO2, AO3, AO4	Green	ON	Indicates the corresponding analog output channel is active.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ANR 120 91 TSX Momentum I/O base.

General Specifications

The following table contains general specifications for the I/O base. Each discrete output is protected against short-circuiting and overload.

Electrical	
Module Current	400 mA at 19.2 Vdc to 30 Vdc
EMC for Industrial Environment	
Immunity	IEC 1131-2 Surge on auxiliary power supply 500 V
Emissions	EN 50081-2
ENV 50140	10 V/M
Agency approvals	UL, CSA, CE
Isolation	
Isolation Between Points	None
Isolation Between Groups	None
Environmental	
Storage Temperature	-40 to 85° C
Operating Temperature	0 to 60° C
Humidity Operating	95% RH @ 60° C
Humidity Non-Operating	95 RH @ 60° C
Vibration Operating	10 - 57 HZ 0.075 MMDA 57 - 150 HZ 1 G
Shock Non-Operating	15 G, 11 MS, 3 shocks/axis
Free Fall (Unpackaged)	0.1 meter

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Inputs

The following table contains specifications for analog inputs.

Number of Input Channels	Six single ended	
Range	±10V	
Input Impedance	>1 megohm	
Resolution	14 bits	
Accuracy, 25 °C	0.2%	
Linearity	**In**	**Out**
Linearity Integral	± 1LSB	± 2LSB
Linearity Differential	Guaranteed Monotonic	
Temp Coefficient	+ 100PPM/° C	
Update Time	0.75 msec for all six channels	
Data Format	Left justified	

Analog Outputs

The following table contains specifications for analog outputs.

Number of Input Channels	4	
Range	±10V	
Resolution	14 bits	
Accuracy, 25 °C	0.4%	
Linearity	**In**	**Out**
Linearity Integral	± 1LSB	± 2LSB
Linearity Differential	Guaranteed Monotonic	
Temp Coefficient	+ 100PPM/° C	
Update Time	1.20 msec for all four channels	
Data Format	Left justified	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete Inputs

The following table contains specifications for discrete inputs.

Number of Points	8 sinking, Type 2
Voltage and Current Thresholds	
ON (Voltage)	>11 VDC
OFF (Voltage)	<5 VDC
ON (Current)	>6 mA
OFF (Current)	<2 mA
Absolute Maximum Input Continuous	32 VDC
Input Response ON - OFF, OFF - ON	1.20 msec maximum
Input Protection	Resistor limited, varistors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete Outputs The following table contains specifications for discrete outputs.

Number of Output Points	8 sourcing
Operating Voltage Working Absolute Maximum	 10 ... 30 VDC 50 VDC for 1 msec
ON State Drop / Point	0.4 VDC max at 0.25 A
Maximum load current Each Point Per Module Off State Leakage / Point (max)	 0.25 A 2A 0.4 mA @ 30 VDC
Surge Current Maximum Per point	 2.5 A for 1 msec
Response OFF-ON, ON-OFF	 1.20 msec max
Output Protection (Internal)	Voltage suppressor diodes, Wickman 2.5A Fuse



CAUTION

Discrete 24 VDC outputs incorporate thermal shutdown and overload protection.

The output current of a shortened output is limited to a nondestructive value. The short circuit heats the output driver, and the output will switch off. The output will switch on again if the driver leaves the over temperature condition and the user resets the output under program control. If the short circuit still exists after the output point is reset, the driver will reach the over temperature condition again, and will switch off again.

Failure to follow this precaution can result in injury or equipment damage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Physical Dimensions

The following table outlines physical dimensions for the I/O base.

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5 mm (6.3 in) two busbars 171.5 mm (6.75 in) three busbars
Weight	220 g (0.49 lb)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base and an optional busbar.

Illustration

The following illustration shows the internal connections between terminals.

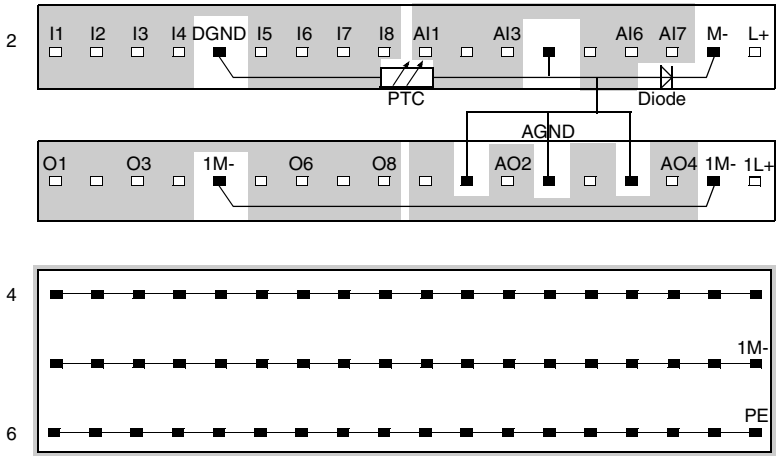

Note: AGND and DGND are connected at a single point inside the module. External digital inputs must be returned to the DGND terminal. External analog circuits must be returned to AGND terminals.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

This section contains wiring guidelines and precautions for wiring the 170 ANR 120 91 TSX Momentum I/O base.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-, 2-, or 3-row busbar. The following busbars are available from Schneider Automation.

Type	Number of Rows	Part Number
Screw-in	1 - row	170 XTS 006 01
	2 - row	170 XTS 005 01
	3 - row	170 XTS 004 01
Spring-clip	1 - row	170 XTS 007 01
	2 - row	170 XTS 008 01
	3 - row	170 XTS 003 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mapping Terminal Blocks and Busbars

The following table shows mapping terminal blocks and optional busbars.

Row	Terminal	Connection	Description
2	1-4	I1 ... I4	Discrete inputs 1 through 4
	5	Digital ground	Return for discrete inputs
	6-9	I5 ... I8	Discrete inputs 5 through 8
	10-12	AI1 ... AI3	Analog inputs 1, 2, 3
	13	Analog ground	Return for analog inputs
	14-16	AI4 ... AI6	Analog inputs 4, 5, 6
	17	M-	Module operating voltage, 24VDC return
	18	L+	Module operating voltage, 24VDC
3	1-4	O1 ... O4	Discrete outputs 1 through 4
	5	1M-	Return for discrete outputs
	6-9	O5 ... O8	Discrete outputs 5 through 8
	10, 12, 14, 16	AO1, AO2, AO3, AO4	Analog outputs 1, 2, 3, 4
	11, 13, 15	Analog ground	Return for analog outputs
	17	1M-	Voltage for field devices, 24VDC return
	18	1L+	Voltage for field devices, 24VDC
4	1-18	PE	Earth ground for field devices

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section contains diagrams to assist you in wiring the following types of devices:

- Discrete input and output
- Analog input and output

Discrete I/O Devices

The diagram below shows field wiring for discrete input and discrete output devices.

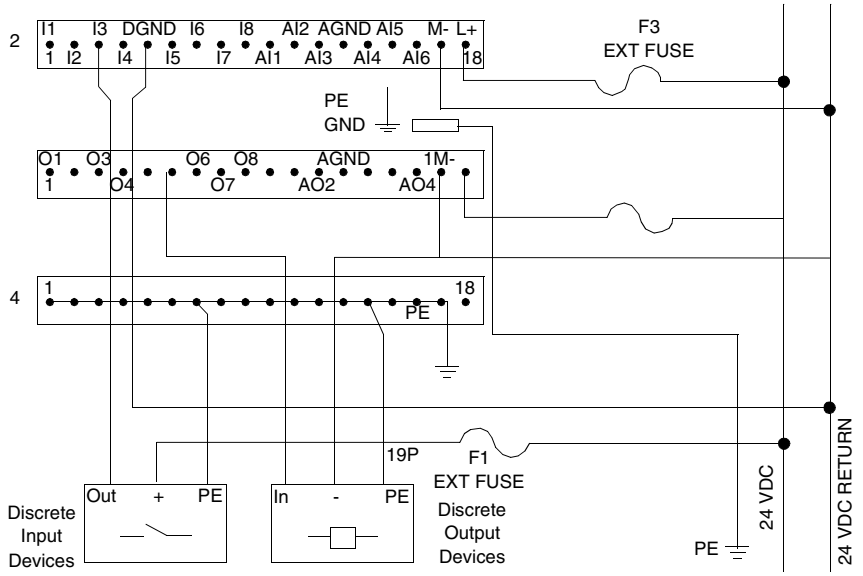


Recommended fuses:

- F1,F3-use a 1A fuse, Wickman 19181-1A or equivalent
- F2 -use a 2.5A fuse, Wickman 19181-2.5A or equivalent

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog I/O Devices

The diagram below shows field wiring for analog input and analog output devices.

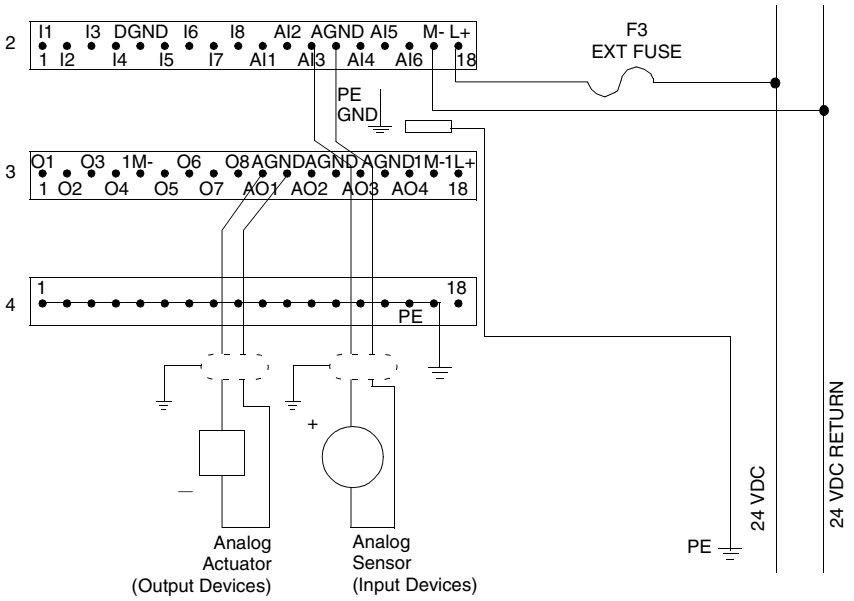

Recommended fuses:

- F3-use a 1A fuse, Wickman 19181-1A or equivalent

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Map

I/O Map Module Configuration	The module must be I/O mapped as 12 contiguous input and output words. The first 7 output words are parameter data.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Register for Outputs

Overview

170 ANR 120 91 analog and discrete output channels are configured by entering the appropriate information in output words 1 through 7 as follows.

Note: The module will go to fail state values if network or communication adapter ATI communication is lost.

Word	Function
1	System information
2	Register for discrete reaction in a fail state
3	Register for analog reaction in a fail state
4	User defined analog fail state values for channel 1
5	User defined analog fail state values for channel 2
6	User defined analog fail state values for channel 3
7	User defined analog fail state values for channel 4
8	State of the 8 discrete outputs
9	Analog output word channel 1
10	Analog output word channel 2
11	Analog output word channel 3
12	Analog output word channel 4

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Word 1

System Info Register This word enables the module's operation, and specifies if user shutdown values are expected.

Word 1	Description
Bits 0 ... 14	Not used or can be used to start the module. (Turns on the Ready LED with any value greater than zero.)
Bit 15	1 = Enable user defined shutdown values. 2 = Disables user defined shutdown values.

- Valid setting for word one are 0001 ... FFFF
  It is essential for the module's operation to have a value larger than 0 in this register.
- The module's default value at power-up for this register is zero (module shut down).



CAUTION

Zero is an illegal value for the system information register.

A zero value in word one will cause an output shut down state, and no inputs or outputs are updated.

Failure to follow this precaution can result in injury or equipment damage.

Word 2

Discrete Fail State Reaction and Value Register This word combines the value and reaction in a fail state.


Word 2	Description
Bit 0 ... 7	Discrete fail state value for outputs 1 ... 8
Bits 8 ... 13	Not used
Bit 14	0 = hold last value, 1 = user defined value
Bit 15	0 = all outputs reset, 1 = check bit 14

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Word 3

Analog Fail State Reaction Register This word contains four 2 bit fields that define the fail state for each channel. The four possible values of fail state are as follows.

2 Bit Value	Fail State
00	Minimum output voltage
01	Hold last value (default)
10	User defined shutdown value
11	Hold last value (not normally used)

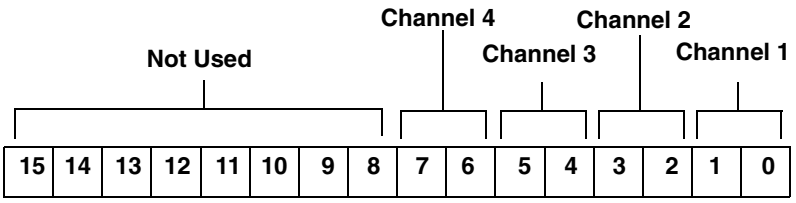


Words 4 ... 7

Analog Fail State Value Register
The module always expects four words of user defined data, even if the data is not used. The first word of the user shutdown field is used for channel 1, the second for channel 2, . . .

Word 8

Discrete Output Register
This word contains a right justified binary eight bit data field.



Words 9 ... 12

Map to Analog Output Register
Each word in this range contains a left justified binary 15 bit data field. The range is 0 ... 7FFE hex (0 ... 32766 decimal), but the resolution is only 14 bit (See *Analog Map, p. 537*).

Note: If a user shutdown value is greater than the count range for the channel, then the count range maximum value will be used as the shutdown value.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4x Registers

Overview

The 4x registers traffic copped to this module are used for output data as follows.

I/O Map Register	Data Type
4x + 7	Data for discrete output
4x + 8	Data for analog output channel 1
4x + 9	Data for analog output channel 2
4x + 10	Data for analog output channel 3
4x + 11	Data for analog output channel 4

Range

Output Operating Range

	Output Voltage	Data is Left Justified	Comment
Output Range	-10.000 ... +10.000	00382 ... 32382	Nominal output voltage range
Output Over Range	+10.000 ... +10.238	32384 ... 32764	Linear over range output voltage
Output Out of Range	≥10.238	32766 (7FFE Hex)	Threshold will be limited to 32766 decimal.
Output Under Range	-10.238 ... -10.000	00002 ... 00382	Linear under voltage range
Output Out of Range	≤-10.238	00000	Threshold limited to 00000.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Register for Inputs

Overview

The Input Register is arranged as follows.

Word	Function
1	Status word (module status)
2	State of the eight discrete inputs
3	Analog input word channel 1
4	Analog input word channel 2
5	Analog input word channel 3
6	Analog input word channel 4
7	Analog input word channel 5
8	Analog input word channel 6
9 ... 12	Not used

Word 1

The status word (word 0) contains information about the health of the module and the status of the discrete outputs. Word 0 also contains network communication loss, over temperature of the discrete outputs and short circuit at the discrete outputs.

Bits 15 ... 9	Bit 8	Bits 7 ... 4	Bit 3 (Channel 7, 8)
Not used	0 = Bad module health (module lost communication) 1 = Healthy module	Not used	0 = Fault 1 = No Fault

Bit 2 (Channel 5, 6)	Bit 1 (Channel 4, 3)	Bit 0 (Channel 1, 2)
0 = Fault 1 = No fault	0 = Fault 1 = No fault	0 = Fault 1 = No fault

Word 2

Discrete Input Register
This word contains a right justified binary eight bit data field.

								8	7	6	5	4	3	2	1
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

Words 3 ... 8

Analog Input Register Words 3 ... 8 map to the analog input register. Each word in this range contains a left justified 15 bit data field. The range is from 0H to 7FFE hex, but the resolution is 14 bit (0 ... 32766 decimal or 0 ... 7FFE hex). (See *Analog Map, p. 537*).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Words 9 ... 12 Words 9 ... 12 are not used.

3x Registers The 3x registers traffic copped to this module are used for input data as follows.

I/O Map Register	Data Type
3x + 1	Data for discrete input
3x + 2	Data for analog input channel 1
3x + 3	Data for analog input channel 2
3x + 4	Data for analog input channel 3
3x + 5	Data for analog input channel 4
3x + 6	Data for analog input channel 5
3x + 7	Data for analog input channel 6

Range Input Operating Range

	Input Voltage	Data is Left Justified	Comment
Input Range	-10.000 ... +10.000	00382 ... 32382	Nominal input voltage range
Input Over Range	+10.000 ... +10.238	32384 ... 32764	Linear over range input voltage
Input Out of Range	≥10.238	32766 (7FFE Hex)	Input voltage exceeding threshold may damage the module.
Input Under Range	-10.238 ... -10.000	00002 ... 00382	Linear under voltage range
Input Out of Range	≤-10.238	00000	Input voltage exceeding threshold may damage the module.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Analog Map

Overview

170 ANR 120 91 analog values are mapped as follows.

Note: The display is standardized, and, in each case, the analog value will appear flush left.

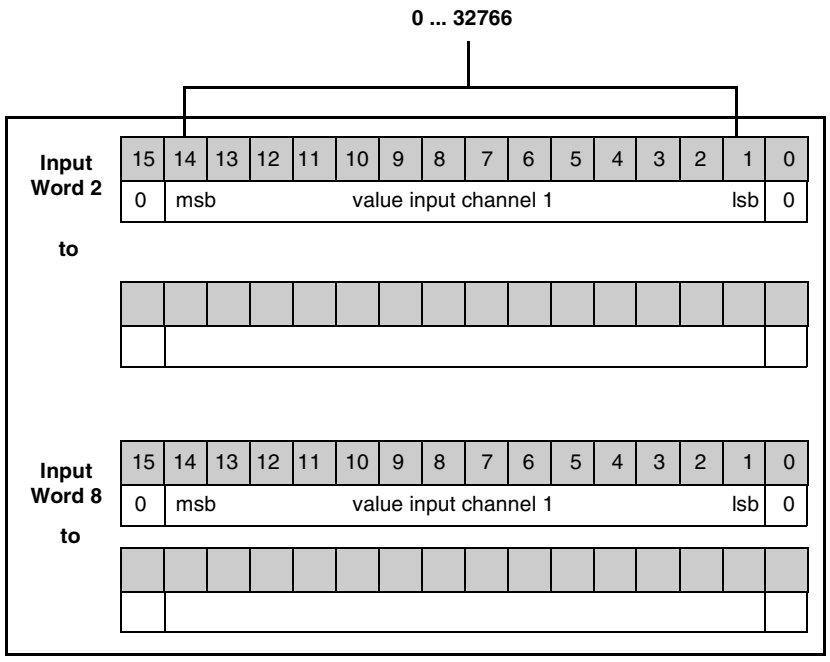


Note: The module resolution is 14-bit (0 ... 32766 decimal or 0 ... 7FFE hex).

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Discrete I/O Points and IEC Compliant Data Mapping

Overview

The 170 ANR 120 91 base returns eight discrete input bits to the processor in one 16-bit word (3x). The input points are field wired to row 2 of the base. The processor sends eight discrete output bits to the base as a single 16-bit word (4x). The output points are field wired to row 3.

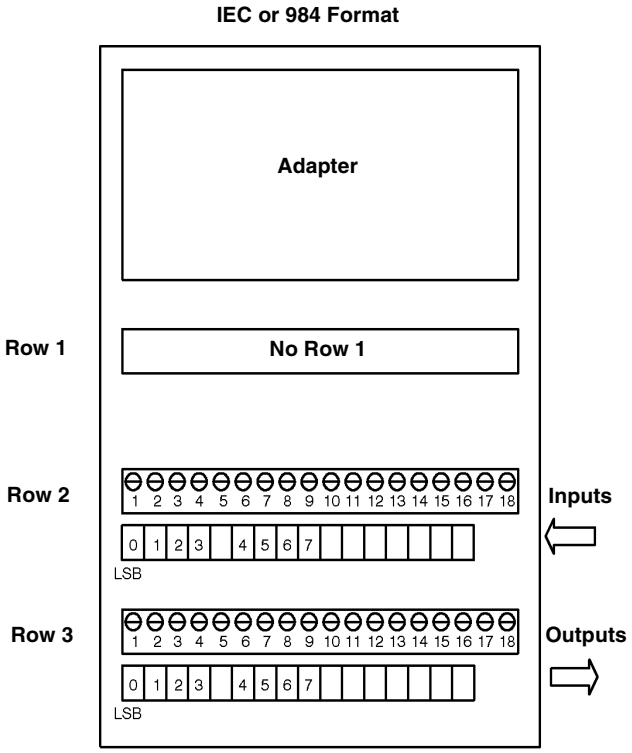


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Input and Output Ranges

Ranges and Decimal Values Input Measuring Range ±10 V


The voltage value is calculated with the following formula using the digital measurand: Vn = 1600 Va + 16382 (for the linear range).

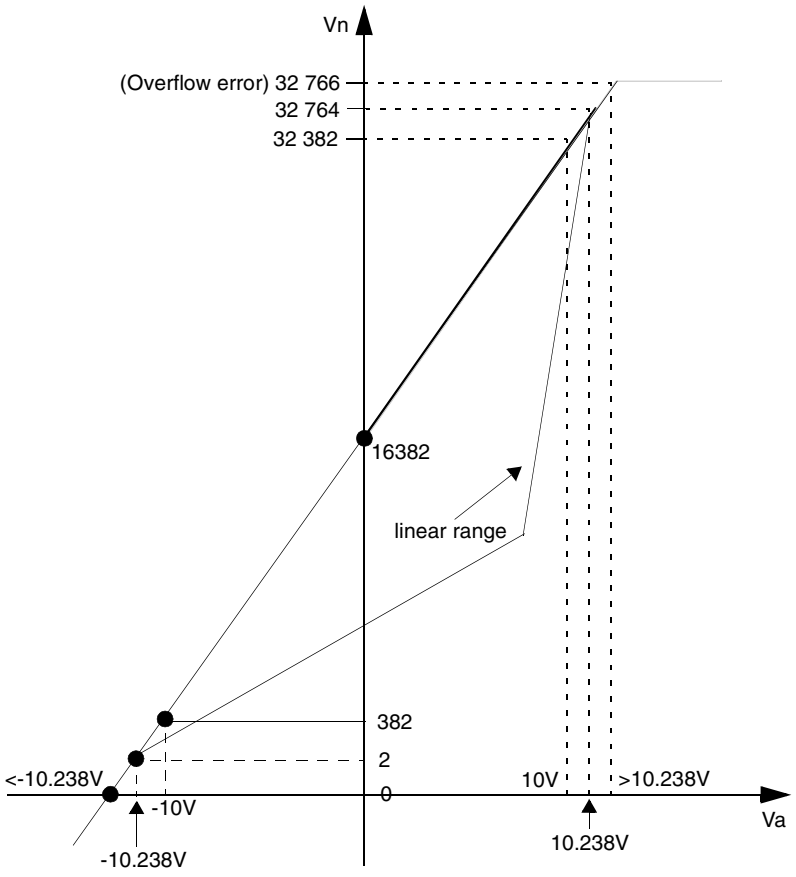

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Output Measuring Range ±10 V

The voltage value is calculated with the following formula using the digital measurand: Vn = 1600 Va + 16382 (for the linear range).

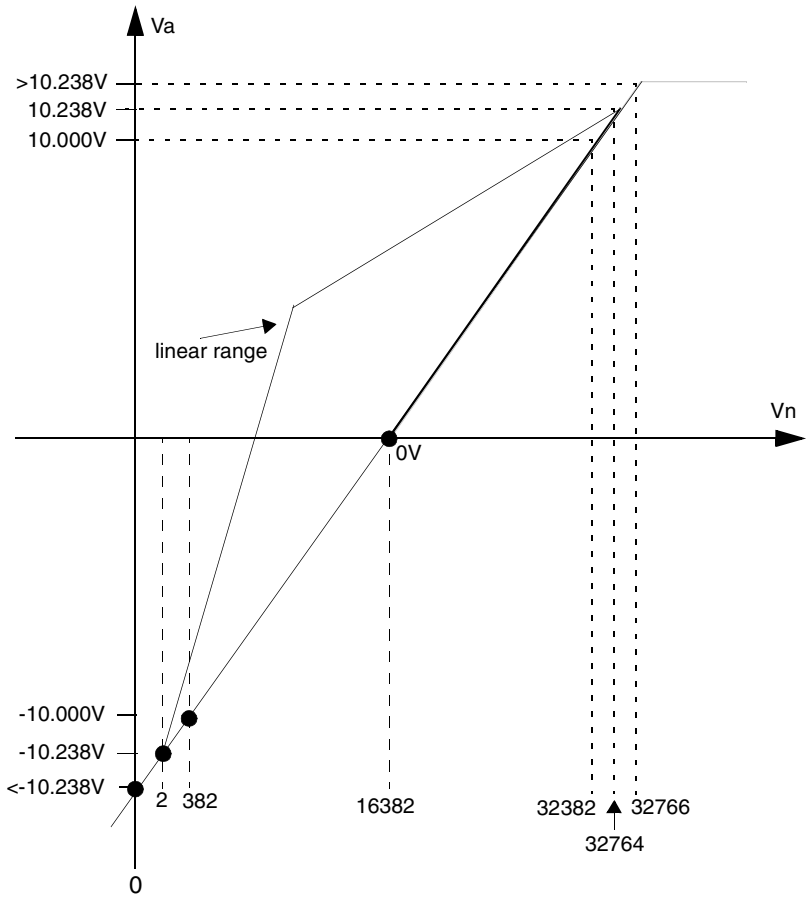

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Interpreting the Error Bits

Overview

If an internal error is detected in the module, the module becomes non-operational. Other error messages are posted in the four least significant bits of the status word.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 ARM 370 30 24 VDC - 10 Pt. In / 8 Pt. Relay Out Module Base (120 VAC Powered)

33

Overview

Purpose

This chapter describes the 170 ARM 370 30 TSX Momentum I/O base.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	544
Specifications	546
Internal Pin Connections	549
Field Wiring Guidelines	550
Wiring Diagrams	553
I/O Mapping	556

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 ARM 370 30 I/O base and a description of the LEDs.

Front Panel Illustration

The front panel of the I/O base is shown in the illustration below.

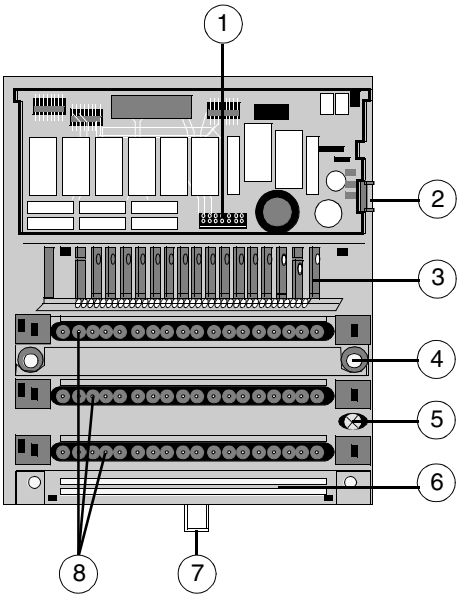


Components of the I/O Module

Label	Description
1	Internal interface (ATI) connector
2	Locking and ground contact for the adapter
3	LED status display
4	Mounting holes for panel mount
5	Grounding screw
6	Busbar Mounting Slot
7	Locking tab for DIN rail mount
8	Sockets for the terminal connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

The LEDs are shown in the illustration below.

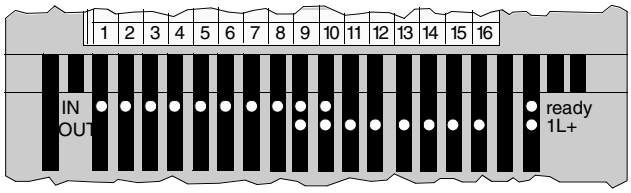

LED Descriptions

The LEDs are described in the table below.

Indicator	Condition	Message
Ready	Green	Module is ready to communicate. Operating voltage for internal logic (5 V) is present.
	Off	Module not ready.
1L+	Green	Input voltage of inputs 1 ... 10 is present
	Off	Input voltage of inputs 1 ... 10 is not present
Upper row IN 1...10	Green	Input status (an LED per input); Input point active, ie. input carries a 1 signal (logically ON)
	Off	Input status (an LED per input); Input point inactive, ie. input carries a 0 signal (logically OFF)
Middle row OUT 9 ...16	Green	Output status (an LED per output); Output point active, ie. output carries a 1 signal (logically ON)
	Off	Output status (an LED per output) Output point inactive, ie. Output carries a 0 signal (logically OFF)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 ARM 370 30 I/O base.

General Specifications

General Specifications

Module type	10 discrete inputs in 1 group 8 relay outputs as normally open contacts in 2 groups, 4 pts/ group
Supply voltage	120 VAC
Supply voltage range	85 ... 132 VAC RMS @ 47 ... 63 Hz
Supply current consumption	max. 250 mA at 120 VAC
Power dissipation	5.5 W typical 8.5 W max
I/O map	1 input word 1 output word

Isolation

Isolation

Input to input	none
Output group to output group	1 780 VAC RMS
Input to output	1 780 VAC RMS
Output group to communication adapter	1 780 VAC RMS
Field to communication adapter	Defined by Communication Adapter type

Fuses

Fuses

Internal	none
External: input voltage (1L+)	max. 4 A fast-blow (193140000 or equivalent)
External: output voltage (1L1, 2L1)	According to the supply of the connected actuators– not to exceed 8 A slow-blow/ group.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EMC

EMC for industrial environment

Immunity	IEC 1131-2 Surge on auxiliary power supply AC 2 KV to PE, 1 KV to differential. Surge on auxiliary power supply DC 0.5 KV.
Emissions	EN 50081-2
Agency approvals	UL, CSA, CE, FM Class 1 Div. 2 pending

Physical Dimensions

Physical dimensions

Width	125 mm (4.9 in)
Depth (with no adapter)	40 mm (1.54 in)
Length	141.5 mm (5.5 in) no or one busbar 159.5mm (6.3in) two busbars 171.5 mm (6.75in) three busbars
Weight	260 g (0.57lb)

Discrete Inputs

Specifications for discrete inputs

Number of points	10
Number of groups	1
Signal type	True High
IEC 1131 type	1+ (See Appendix *IEC 1131 Input Types, p. 581* for definitions of IEC input types.)
ON voltage	+11 ... +30 VDC
OFF voltage	-3 ... +5 VDC
Input current	2.5 mA minimum ON (6 mA at 24 VDC) 1.2 mA maximum OFF
Input voltage range	-3 ... +30 VDC
Input resistance	4 kOhm
Response time	2.2 ms OFF to ON 3.3 ms ON to OFF

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Relay Outputs

Specifications for relay outputs

Output type		Relay normally open output
Number of points		8
Number of groups		2
Points per group		4
Current capacity	20 VDC	> 5 mA (but only for new contacts) max 2 A (switching current <= 5 A) ohmic load max 1 A (L/R <= 40 ms) inductive load
	115 VDC	max. 0.5 A (switching current <= 1.5 A) ohmic load max. 0.15 A (L/R <= 40 ms) inductive load
	24 VAC	max. 2A (switching current <= 5 A) $\cos\phi = 1$ max. 1 A $\cos\phi = 0.5$
	230 VAC	max. 2A (switching current <= 5 A) $\cos\phi = 1$ max. 1 A $\cos\phi = 0.5$
Relay type		Normally Open
Leakage current (output out)		< 1.2 mA @ 230 VAC
Fault sensing		None
Fault reporting		None
Error indication		None
Response time (resistive load / 0.5 A		10 ms @ 60 Hz OFF to ON 10 ms @ 60 Hz ON to OFF
Maximum switching cycles		> 30 x 10^6 (mechanical) >=1 x 10^5 (inductive load with external protective circuitry)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Internal Pin Connections

Overview

This section contains an illustration showing the internal connections between terminals on the I/O base.

Illustration

Rows 1 through 3 show the internal connections between terminalson the I/O base. Row 4 shows the internal connections on the optional busbar.

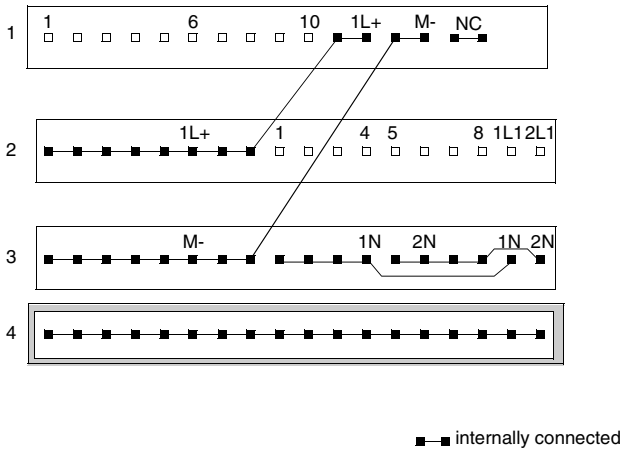

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wiring Guidelines

Overview

Inputs are field wired to row 1 of the base. The outputs are field wired to row 2. This section contains wiring guidelines and precautions.

Terminal Connector

To connect field devices to the I/O base, you need a field wiring terminal connector. Schneider Automation sells terminal connectors in sets of three.

Type	Part Number
Screw-in	170 XTS 001 00
Spring-clip	170 XTS 002 00

Busbar May Be Required

Depending on the type of field devices you are using, you may need a 1-row busbar. The following busbars are available from Schneider Automation.

Type	Part Number
Screw-in	170 XTS 006 01
Spring-clip	170 XTS 007 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mapping Terminal Blocks

The folowing table shows mapping terminal blocks and optional busbars.

Row	Terminal	Function
1	1...10	Inputs
	11, 12	Input voltage for terminal pins 9 ... 10, (1L+)
	13, 14	Return (M-) for the inputs
	15, 16	not connected
	17	Return (N) for the module's operating voltage
	18	120 VAC Operating voltage (L1)
2	1 ... 8	Input voltage for pins 1 ... 8, (1L+)
	9 ... 12	Outputs for group 1
	13 ... 16	Outputs for group 2
	17	Output Voltage for relays 1 ... 4 (1L1, 20 ... 115 VDC or 24 ... 230 VAC
	18	Output Voltage for relays 5 ... 8 (2L1, 20 ... 115 VDC or 24 ... 230 VAC
3	1 ... 8	Return (M-) for the inputs
	9, 10, 11, 12	Return (1N) for the relays 1 ... 4
	13, 14, 15, 16	Return (2N) for the relays 5 ... 8
	17/18	Return/Neutral for relay outputs
4	1 ... 18	Protective earth (PE)



CAUTION

POTENTIAL FOR SHORT CIRCUITS AND/OR POWER-UP SPIKES

Provide external fuses on the operating voltage to protect the module. Appropriate fuse values are shown in the wiring illustration. An unprotected module may be subject to short circuits and/or power-up spikes.

Failure to follow this precaution can result in injury or equipment damage.

Protective Circuit Required

When contacted switches are used on the input lines or when lines to the peripherals are very long, the outputs of inductive loads require protective circuitry with a clamping/suppressor diode. Install the protective circuit prallel to the operating coil.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Inputs to Avoid Error Messages

To avoid I/O Error messages, follow these guidelines when wiring.

- Inputs require a 56 kOhm resistor parallel to the contact. Otherwise the I/O Error signal will be active as long as the input carries 0 signal.
- Unused inputs have to be wired to the sensor supply or to L+ on row 3 directly (logical 1) or with 56 kOhm (logical 0) to avoid permanently active I/O Error message.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Wiring Diagrams


Overview

This section provides diagrams to assist you in wiring the following types of devices:

- 3-wire sensor with a 2-wire actuator
- 4-wire sensor with a 3-wire actuator

3-Wire Sensor with a 2-Wire Actuator


The diagram below shows field wiring for a 3-wire (24 VDC) sensor and a 2-wire (230 VAC) actuator.

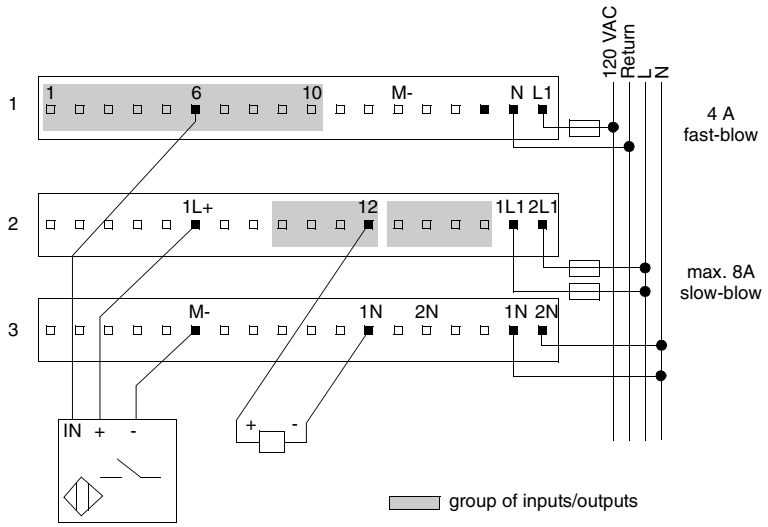

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4-Wire Sensor with a 3-Wire Actuator


The diagram below shows field wiring for a 4-wire (24 VDC) sensor and a 3-wire (230 VAC) actuator.

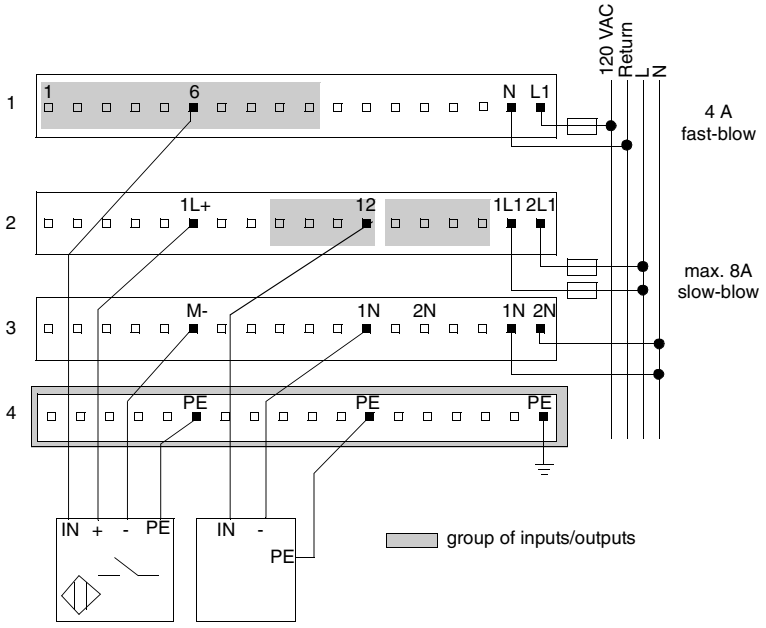

A 1-row busbar is used to provide PE for the 4-wire sensor. No busbar would be required if only 2- and/or 3-wire sensors were used.

Simplified Input Schematics


The following diagram shows the field-side input circuitry.

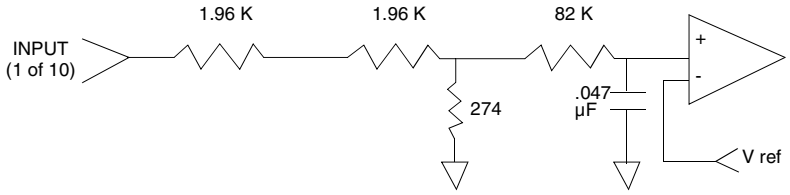

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Simplified Output Schematics

The following diagram shows the field-side output circuitry.

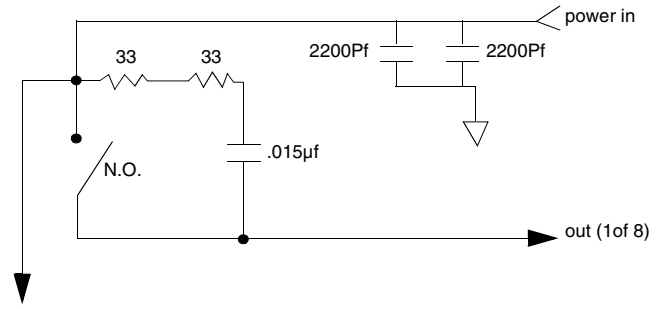

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O Mapping

Overview

The 170 ARM 370 30 TSX Momentum I/O base supports 10 discrete inputs and 8 relay outputs. This section contains information about the mapping of the I/O data into input words and output words.

I/O Map

The I/O base must be mapped as one input word and one output word, or as 10 discrete inputs and 8 discrete outputs.

IEC vs. Ladder Logic

In order to correctly field wire the inputs/outputs and map the input/output data, you need to know which type of Momentum Adapter is mounted on the base . Adapters may be either IEC compliant or 984 Ladder Logic compliant.


	IEC Compliant	**984 Ladder Logic Compliant**
Momentum Processor Adapters	All	None
Momentum Communication Adapters	All, except 170 NEF 110 21 170 NEF 160 21 170 FNT110 00 170 FNT 110 01	170 NEF 110 21 170 NEF 160 21 170 FNT 110 00 170 FNT 110 01

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Data Mapping

The figure below shows how data is mapped with an IEC Compliant Adapter. When the I/O is mapped as a discrete input point (1x) the MSB is assigned to Pin 1. When mapped as a discrete output (0x) the MSB is assigned to Pin 9. When the I/O is mapped as an input word/register (3x) the LSB is assigned to Pin 1.When mapped as an output word/register, the LSB is assigned to Pin 9.


IEC Format

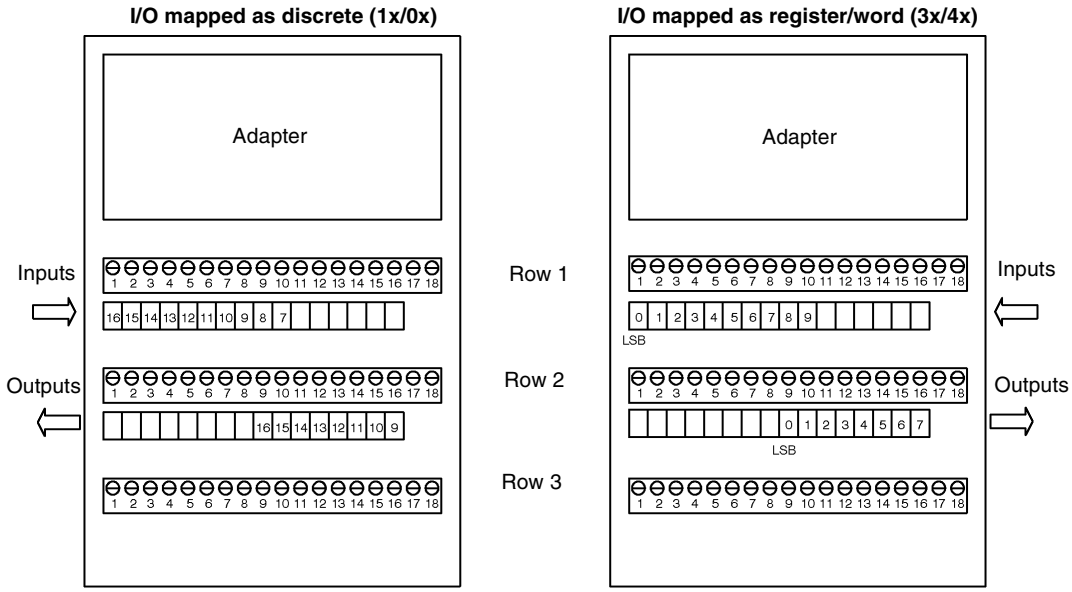

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The figure below shows how data is mapped with a Ladder Logic Compliant Adapter. When the I/O is mapped as discrete input points (0x) the LSB is assigned to Pin 1. When mapped as a discrete output points, the LSB is assigned to Pin 9. When the I/O is mapped as an input word/register (3x) the MSB is assigned to Pin 1. When mapped as an output word/register (4x) , the MSB is assigned to Pin 9.

984 Format

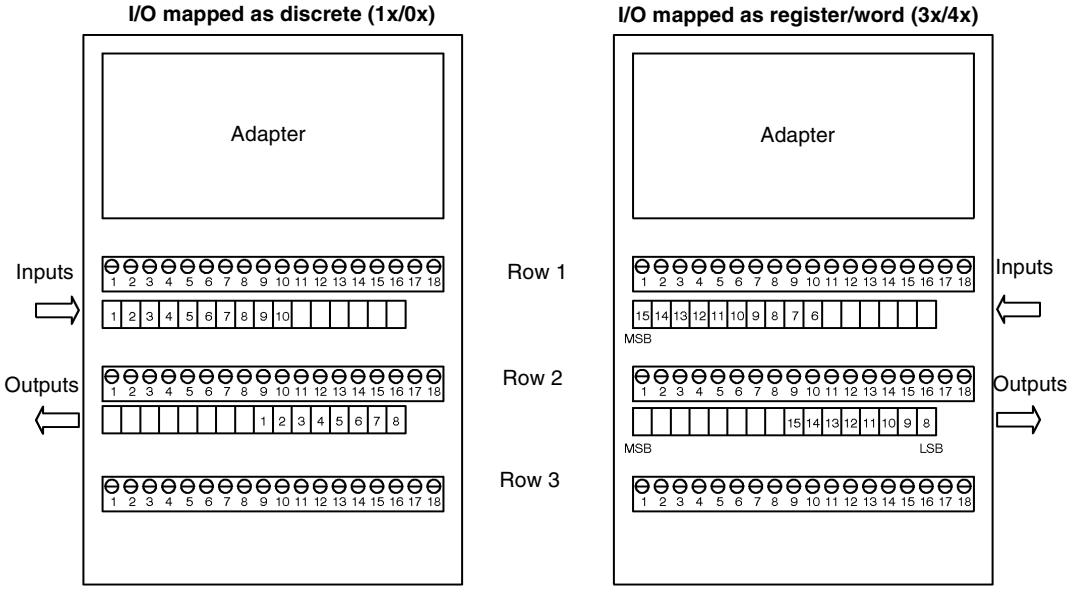

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

170 CPS 111 00 TIO Power Supply Module

34

Overview

Purpose

This chapter describes the 170 CPS 111 00 TIO Power Supply module. The module provides a regulated output voltage with protection against overload and overvoltage. It can be used to power TSX Momentum I/O bases.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Front Panel Components	560
Specifications	562
Terminal Connectors	566
External Operating Voltage Connections	568

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


Front Panel Components

Overview

This section contains an illustration of the front panel of the 170 CPS 111 00 Power Supply and a description of the LEDs.

Front Panel Illustration

The front panel of the power supply module is shown in the illustration below.

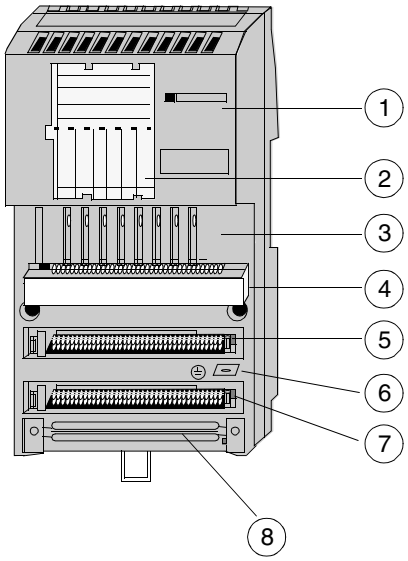


Components of the power supply module

Label	Description
1	Module identifier
2	Identification label
3	LED status display
4	Protective cover
5	Input voltage (AC) terminal strip connector mounting slot
6	PE spade-lug connector
7	Output voltage (DC) terminal strip connector mounting slot
8	Grounding busbar connector mounting slot

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LED Illustration

This Module has one LED which is shown in the illustration below.

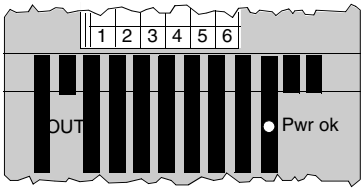

LED Descriptions

The Pwr OK LED is described in the table below.

Indicator	Condition	Message
Pwr ok	Green	Power supply module is ready
	Off	Power supply module not ready

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Specifications

Overview

This section contains specifications for the 170 CPS 111 00 Power Supply module.

General Specifications

General Specifications

Module type	Power Supply
Nominal Input voltage	230 VAC or 120 VAC (jumper selectable)
Nominal Output voltage	24 VDC
Maximum Output Current (isolated)	0.7 A

Protective Circuitry

Protective Circuitry

Inputs	Self-restoring fuse
Outputs	Overvoltage protection: limited by a transzorb diode (type: SM6T30A)
	Overload protection: by thermal current limiting (should the thermal current limiting respond, the input voltage must be switched -- off/on for reactivation).

Power

Power data

Frequency	
Input voltage	50/60 Hz + 5%
Internal chopper frequency	90 ... 110 kHz
Power	
Efficiency	Typically 0.76 for IA = 0.7 A
Apparent power	Typically 32 VA for IA = 0.7 A
Effective power	Typically 21 W for IA = 0.7 A

Isolation

Isolation

Input/Output voltage	L, N, PE isolated from UB, M
Between base supply and ground	500 VDC, 1 min
Between input channels and ground	500 VDC, 1 min

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Fuses

Input Fuses

Internal (not user-replaceable)	Internal self-restoring fuse
External	Min external F1: for 230 VAC, 0.315 A, slow-blow Min external F1: for 120 VAC, 0.63 A, slow-blow

Fault information

Fault information

Inputs	None
Outputs	Green status LED for output voltage ok

Physical dimensions

Physical dimensions

Width	74.2 mm
Depth	40 mm
Length	141.5 mm

Environmental Conditions

Environmental Conditions

Regulations	VDE 0160, UL 508
Permissable operating and ambient temperatures	GUF (-40 ... +60 deg. C) adhering to DIN 40040, refer to the derating curve for uninhibited convection, operation orientation is vertical
Permissable storage temperature	-40 ... +85 deg. C
Internal power dissipation	Roughly 1.2 + 5 x IA (in W, IA in A)
Noise immunity	EN 50081-2
Safety classification	Class 1 (VDE 0160, IEC 1131)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


AC Input Voltage

Specifications for AC input voltage, selectable by jumper.

Input Voltage	
EX - EY not jumpered	L/N = 230 VAC
EX - EY jumpered	L/N = 120 VAC
Limiting Values	
With jumper	100 Veff -15% to 120 Veff +10%
Without jumper	230 Veff -15% to 240 Veff +10%
Power Failure	
Half wave loss at	100 Veff -15%
Min. of a half wave at	>= 100 Veff
Min. of a half wave at	230 Veff -15%
Input Current	
For 85 Veff	Typically 0.366 Aeff, IA = 0.7 A
For 170 Veff	Typically 0.188 Aeff, IA = 0.7 A
For 230 Veff	Typically 0.188 Aeff, IA = 0.7 A
Power on Current	
I2T	0.3 A^2s
IT	0.02 As

Power on Surge Current Curve

The following chart shows power on surge current for 120 VAC + 10% or 240 VAC + 10%

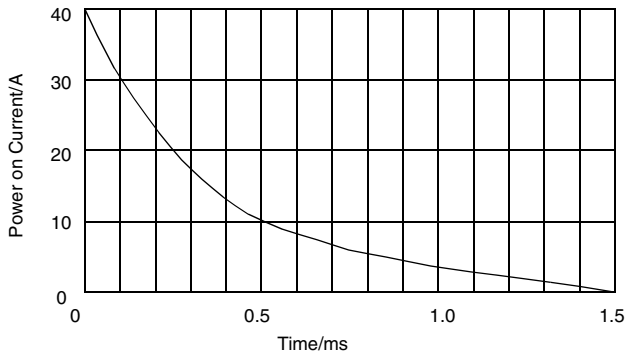

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


DC Output Voltage

Specifications for DC output voltage

Number	1 x UB = 24 VDC, max. 0.7 A, isolated
Limiting Values	
UBmin	21 VDC
UBmax	30 VDC
Output Current	
IA	0 ... 0.7 A
Output Ripple	
Typical	150 mV/p-p (max. 20 MHz)
Max.	250 mV/p-p (max. 20 MHz) - measured with a 0.1 microF capacitor
Voltage Regulation	Typically +500 mV for 0.7A after 0.35 A Typically -500 mV for 0.35A after 0.7 A

Output Current Char

The following chart shows output current (derating) for uninhibited vertical convection

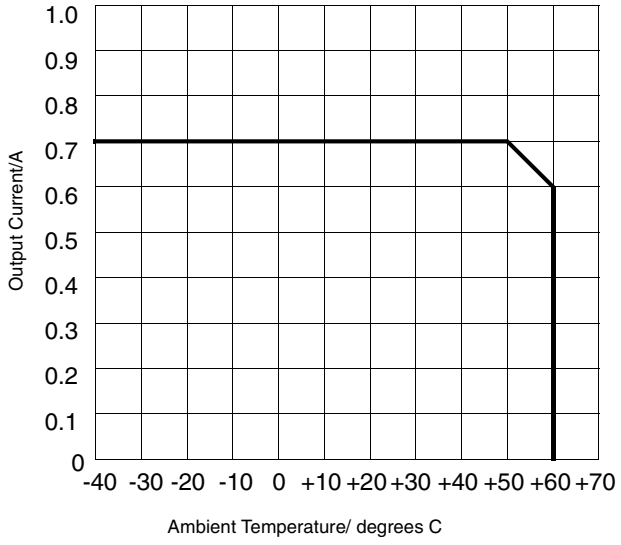

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Terminal Connectors


Available Types

Power is supplied to the module through an 8-pole terminal connector. Two types of terminal connectors are available:

- screw-in
- spring-clip


Screw-In Version

Screw-in terminals can be used with cable with a diameter of up to 12 AWG (2.5 mm^2). They come in sets of three. The part number is 170 XTS 011 00.



Spring-Clip Version

Spring-clip terminals can be used with cable with a diameter of up to 14 AWG (1.5 mm^2). They come in sets of three. The part number is 170 XTS 012 00.



Safety Requirement


This module is used in hazardous and harmless voltage ranges. For safety, code the terminal connectors and the power supply module to prevent inadvertent exchanges of terminal blocks.

Coding Set

To complete the coding described below, order the 170 XCP 200 00 coding set. This set contains coding keys and combs.

Coding Illustration

Install coding keys in the positions shown in the following illustration.

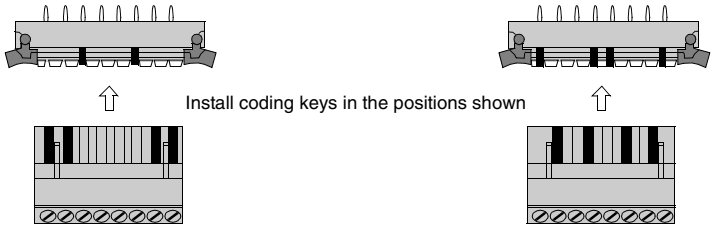

Coding for the harmless range (row 3)

Coding for the hazardous range (row 2)


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Mounting the Terminal Connectors

To mount a terminal connector, press it into the module's pin connector.

Mounting the Terminal Connectors

To remove a terminal connector, press both extractors, as shown in the illustration below.

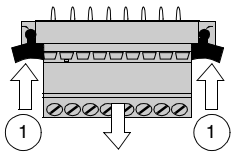

	CAUTION
	ELECTRICAL HAZARD Only mount and remove terminal connectors when the module is not under power. **Failure to follow this precaution can result in injury or equipment damage.**

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


External Operating Voltage Connections

Overview

This section contains a illustration of the external operating voltage connections and explanatory notes.

Illustration

The following illustration shows the external operating voltage connections for the 170 CPS 111 00 Power Supply module.

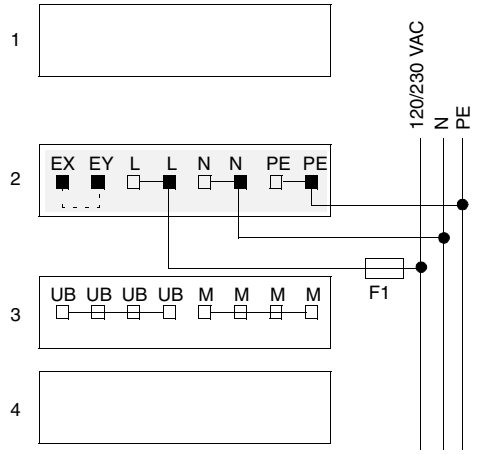

Row	Terminal	Connection	Function
2	1	EX	Jumper connection
2	2	EY	Jumper connection
2	3, 4	L	AC input voltage, line
2	5, 6	N	AC input voltage, neutral
2	7, 8	PE	Earth ground
3	1, 2, 3, 4	UB	DC output voltage
3	5, 6, 7, 8	M	DC output voltage return

Grounding

The spade-lug connector on the front of the module provides a short, secure PE grounding surface.

Electrical Safety

Power supply modules may not be operated in parallel. Physically separate input cabling from output cabling.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Fusing

Dimension the F1 fuse to match the operative load, observing the minimum values in the following table.

Voltage	Jumper Placement	External Fusing (min. F1)
120 VAC	Mounted	0.63 A slow-blow
230 VAC	Removed	0.315 A slow-blow

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Appendices



Overview

Purpose

The appendices contain general information common to the Momentum I/O bases.

What's in this Appendix?

The appendix contains the following chapters:

Chapter	Chapter Name	Page
A	System Specifications	573
B	Interference Suppression	579
C	IEC 1131 Input Types	581
D	Field Wire Length	583
E	IEC Symbols	585

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

System Specifications

A

At a Glance

Purpose

This appendix provides system specifications for all TSX Momentum I/O bases.

What's in this Chapter?

This chapter contains the following topics:

Topic	Page
Power Supply Specifications	574
Field Device Interfaces	575
Environmental Specifications	576

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Power Supply Specifications

Overview

This section contains power supply specifications for the following types of TSX Momentum I/O bases.

- 24 VDC
- AC voltages

24 VDC

Power supply specifications for 24 VDC modules are contained in the table below.

Operating voltage (internal logic)	20 ... 24 ... 30 VDC
Input voltage (discrete inputs)	20 ... 24 ... 30 VDC
Output voltage for electronic outputs	20 ... 24 ... 30 VDC
Output voltage for relay outputs	24 ... 115 VDC
Ripple	max. 5 % effective, corresp. to relat. total oscillation amplitude per DIN 40 110 (unfiltered three-phase bridge permissible)
Periodic peak values (including ripple)	18 ... 33 VDC
Nonperiodic peak values	max. 35 V at t <500 ms max. 45 V at t <10 ms
Line power dropout	max. 1 ms, repetition rate 1 s

AC Voltages

Power supply specifications for AC voltage modules are contained in the table below.

Operating voltage (internal logic)	100 ... 115 ... 132 VAC, 47 ... 63 Hz
Input voltage (discrete inputs)	85 ... 115 ... 132 VAC, 47 ... 63 Hz
Output voltage for electronic outputs	20 ... 115 ... 132 VAC, 47 ... 63 Hz
Output voltage for relay outputs	24 ... 230 VAC
Line power dropout	max. 10 ms or 1 half-wave, repetition rate 1s

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Device Interfaces

Overview

This section contains specifications for:

- Operating thresholds, input current
- Discrete outputs
- Relay outputs

Operating Thresholds, Input Current

The table below contains specifcations for operating thresholds, input current.

Rated voltage	24 VDC	115 VAC
Signal level of "1"-signal	+11 ... +30 VDC	74 ... 132 VAC
Signal level of "0"-signal	-3 ... +5 VDC	0 ... 20 VAC
Minimum ON-voltage	min. 2.5 mA, 6 mA at 24 VDC	min. 6 mA
Maximum OFF-voltage	max. 1.2 mA	max. 2.6 mA
Input delay	0 -> 1: 2.2 ms 1 -> 0: 3.3 ms	< 1 half-wave

Discrete Outputs

The table below contains specifications for discrete outputs.

Rated voltage	24 VDC	115 VAC	230 VAC
Voltage drop on "1"-Signal	max. 0.5 V	max. 1.5 V	max. 1.5 V
Leakage current on "0"-Signal	max. 1 mA	max. 1.3 mA	-
Load current per output	max. 500 mA 2 A at ADM 370 10	30 ... 500 mA	-
Simultaneity factor	100 %	100 %	100 %
Operating delay	3 ms	< 1 half-wave	-

Relay Outputs

The table below contains specifications for relay outputs.

Rated voltage	24 ... 230 VAC 20 ... 115 VDC
Relay type	Normally open (NO) contact
Rated current per output	0.5 ... 2 A, depending on operating voltage and power factor

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Environmental Specifications

Overview

All Momentum I/O bases share the following environmental specifications.

General

The table below contains general environmental specifications.

Safety Class	Class 1, IEC 536
Safety Type	IEC 529: IP20
Temperature range (operating)	0 ... +60 oC air intake temperature (without forced ventilation). Under more difficult ventilation conditions, power dissipation must be taken into account (refer to the module descriptions).
Temperature range (storage)	-40 ... +85 oC (without battery) -40 ... +70 oC (with battery)
Relative humidity	95 % continuous for 30 days 75 % annual average, noncondensing
Atmospheric pressure (operating)	>=700 hPa (700 mbar)
Atmospheric pressure (transport)	>=230 hPa (230 mbar)
Pollutants	Maximum at 60% relative humidity, noncondensing S02 <= 0.5 ml/m^3 H2S <= 0.1 ml/m^3
Shock	15 g at 147 m/s2 for 11 ms Three shocks/axis per IEC 68.2-6EC
Vibration	10...57 Hz @ 0.075mm d.a.57...150Hz @ 1 g per IEC 68.2-27EA
Dielectric strength	Conforms to IEC 664
Norms and Standards	CE, UL, CSA, FM
Equipment definition	Open equipment (IEC 1131-2)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Noise Immunity

The tables below contain specifications for noise immunity to line-conducted phenomena.

Circuits	RatedVoltage	Fast transients / Burst per IEC61000-4-4
Power mains	24 VDC / 230 VAC	+/-2 kV
BinaryDiscrete inputs	24 VDC 230 VAC	+/-1 kV +/-2 kV
Analog inputs	-	+/-1 kV
Discrete outputs (electronic)	24 VDC	+/-1 kV
Analog outputs	-	+/-1 kV
Relay outputs	24 VDC / 230 VAC	+/-1 kV
Shielded cables	-	+/-1 kV

.

Noise immunity to electrostatic discharge	+/-4 kV for indirect contact discharge
Noise immunity to electromagnetic fields	10 V/m
RFI suppression	Limit curve A

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Interference Suppression

B

Interference Suppression

Overview

This section explains the interference suppression properties of TSX Momentum components, guidelines for interference suppression of your system, and recommendations for obtaining permits.

TSX Momentum Components

Under the RF Equipment Act, individual components and individually nonoperational subassemblies are not subject to the mandatory PT&T classification or registration rules.
The components of the TSX Momentum are interference-suppressed to within EN 55011 Limit Curve A.

Your System

Assuming adherence to the configuration guidelines, even a total system constructed from TSX Momentum components typically meets this requirement, if:

- All third-party add-on equipment and components are equally RFI-suppressed,
- The operating instructions regarding RF suppression are adhered to, e.g.:
  - Filtering the line voltage using RFI filters
  - Noise filtering using anti-interference capacitors
  - Equipping inductive consumers with clamping diodes (suppressor diodes) to prevent the injection of RF noise potentials into neighboring lines

Permits

In some cases, so-called operating permits may be required. Obtaining the operating permit for the total system from the local RFI control agency is the responsibility of the user. It usually applies to systems operated in residential and mixed-zoning areas, government offices, hospitals and airports, but not within industrial zones.
In the event of any problems with the operating permit or license, consult the system supplier first. In case of doubt, the latter can direct questions to the local distributor.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

IEC 1131 Input Types

C

Input Voltage and Current Thresholds

Overview

This section describes the voltage and current thresholds for three types of input, as defined by IEC 1131.

Thresholds

The following table shows the voltage and current thresholds for three input types at 24 VDC, as defined by IEC 1131.

Input Type	On Voltage	On Current	Off Voltage	Off Current
Type 1	+15 ... +30 V	2 ... 15 mA	-3 ... +5 V	... 15 mA
Type 1+	+11 ... +30 V	2.5 ... 10 mA	-3 ... +5 V	... 10 mA
Type 2	+11 ... +30 V	6 ... 30 mA	-3 ... +5 V	... 30 mA

Type 1+

This type is often used for active sensors and relays because the minimum on and maximum off current thresholds are higher.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Field Wire Length

D

Calculating Field Wire Length for AC and DC Devices

Introduction

This section describes some considerations in calculating field wire length.

Effect of IR Drop

The IR drop is the product of the resistance of the wire (depends on wire gauge size) and the current drawn by the load. (IR = volts) After calculating the IR drop of the field wire, what you have left is available at the module input.

Example

The following example shows how to calculate the IR drop to see if enough is left over to turn on an I/O base's input point.

Step	Action
1	Assume an I/O base needs 80 VAC minimum to turn on voltage and assume a field source of 120 VAC.
2	Assume the current drawn by the I/O base is 6 mA.
3	Consult the vendor of the wire to get the resistance of the wire (usually given in Ohms per 1000 feet, this depends on the gauge and length of the wire). For this example, assume the total resistance of the wire length is 1000 Ohms.
4	Calculate .006 A x 1000 Ohms = 6 VAC. This is the IR drop.
5	Calculate 120 VAC - 6 VAC = 114 VAC. This is plenty to turn on the inputs, as the minimum required is 80 VAC.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Empirical Testing Required

The IR drop calculation can only be a rough estimate. Empirical testing is required to fine-tune the wiring length. The result will depend on the following variables.

- shielded vs. unshielded wire
- single vs. wiring pairs
- wire impedance
- electrical noise
- routing of wiring, such as running in parallel with high voltage that can indudce capacitive and inductive coupling of noise spikes

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

IEC Symbols

E






Glossary of Symbols

Overview





This appendix contains illustrations and definitions of common IEC symbols used in describing TSX Momentum components.

Symbols

Table of used IEC symbols

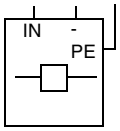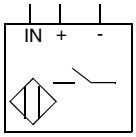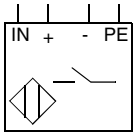Symbol	Definition
. 	Actuator/output, e.g. contactor, lamp, valve, heating, etc.
. 	3-wire actuator
. 	Digital sensor/input, e.g. contact, switch, initiator, light barrier, etc.
. 	3-wire sensor
. 	4-wire sensor

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Symbol	Definition
. 	Change-over break
. 	Analog sensor (voltage)
. 	Analog sensor (current)
. 	Thermocouple Element
. 	Resistor, general symbol
. 	Fuse
. 	Electrolytic Capacitator
. 	Earth Ground

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Index



Numerics

170 AAI 030 00, 61
170 AAI 140 00, 79
170 AAI 520 40, 97
170 AAO 120 00, 121
170 AAO 921 00, 137
170 ADI 340 00, 151
170 ADI 350 00, 165
170 ADI 540 50, 179
170 ADI 740 50, 193
170 ADM 350 10, 207
170 ADM 350 11, 225
170 ADM 350 15, 243
170 ADM 370 10, 257
170 ADM 390 10, 275
170 ADM 390 30, 291
170 ADM 540 80, 307
170 ADM 690 50, 339
170 ADM 690 51, 355
170 ADO 340 00, 371
170 ADO 350 00, 385
170 ADO 530 50, 399
170 ADO 540 50, 415
170 ADO 730 50, 431
170 ADO 740 50, 447
170 AMM 090 00, 463
170 ANR 120 90, 493
170 ARM 370 30, 543
170 CPS 111 00, 559
24 VDC
    Power Supply Specifications, 574

A

AC Actuators
    Protective Circuits for, 53
AC voltages
    Power Supply Specifications, 574
Adapter
    Assembling, 20
    Disassembling from I/O Base, 23
    Option, on a Discrete VAC Base, 42
    Option, on a Typical Base, 41
    Processor, on a Discrete VAC Base, 42
    Processor, on a Typical Base, 41
    Standard, on a Typical Base, 39
    Standard, on Discrete VAC Base, 40
Adapters
    Mounting on I/O Base, 27
Analog I/O
    170 AAI 030 00, 61
    170 AAI 140 00, 79
    170 AAI 520 40, 97
    170 AAO 120 00 00, 121
    170 AAO 921 00, 137
    170 AMM 090 00, 463
    170 ANR 120 90, 493
Analog I/O Lines
    Grounding, 58
Assembled Adapters
    Mounting on I/O Base, 27
Assembled Devices
    Dimensions, 38

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Assembling
Adapter, 20
I/O Base, 20
Option Adapter, 25
Processor Adapter, 25
Attaching
Busbar, 35

B

Basic Features of I/O Bases, 4
Busbar
Attaching, 35
Busbars, 16

C

Calculating
Field Wire Length, 583
Calculating Field Wire Length
for AC and DC Devices, 583
Circuit, 45
Circuit layout, 46
Coding Keys
Terminal Connector, 32
Communication Adapters, 11
Component Values
for AC and DC Actuators, 54
Components
Labeling, 36
Selecting, 9
Which should I use?, 10

D

DC Actuators
Protective Circuits for, 51
Definitions
IEC symbols, 585
Devices
Assembled, Dimensions, 38
Devices, TSX Momentum
Mounting, 43
Dimensions, 37
of Assembled Devices, 38
Disassembling
Adapter from I/O Base, 23
Module with Option Adapter, 29
Discrete I/O
170 ADI 340 00, 151
170 ADI 350 00, 165
170 ADI 540 50, 179
170 ADI 740 50, 193
170 ADM 350 10, 207
170 ADM 350 11, 225
170 ADM 350 15, 243
170 ADM 370 10, 257
170 ADM 390 10, 275
170 ADM 390 30, 291
170 ADM 540 80, 307
170 ADM 690 50, 339
170 ADM 690 51, 355
170 ADO 340 00, 371
170 ADO 350 00, 385
170 ADO 530 50, 399
170 ADO 540 50, 415
170 ADO 730 50, 431
170 ADO 740 50, 447
170 ARM 370 30, 543
Discrete outputs, 575

E

Environmental Specifications
General, 576
Noise Immunity, 576

F

Field Device Interfaces, 575
Field Wire Length, 583
Calculating, 583

G

Glossary of Symbols, 585

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Grounding, 45
Analog I/O Lines, 58
Cabinets, 57
DIN Rail Terminals, 57
Momentum Devices, 55
TSX Momentum Devices, 55

I

I/O Base
Assembling, 20
I/O Bases
Introducing, 3
Types of, 6
Using, 1
IEC 1131
Current Thresholds, 581
Input type, 581
Input Voltage, 581
IEC 1131 Input Types, 581
IEC Symbols, 585
IEC symbols
definitions, 585
illustrations, 585
Illustrations
IEC symbols, 585
Input type, 581
Inserting
Terminal Connectors, 33
Interference Suppression, 579
Introducing Momentum I/O Bases, 3

L

Labeling
Components, 36

M

Module with Option Adapter
Disassembling, 29
Momentum Devices
Grounding, 55
Momentum I/O Bases
Introducing, 3
Using, 1
Mounting
Devices, TSX Momentum, 43
Mounting Instructions, 37

N

Noise Immunity, 576

O

Operating thresholds
input current, 575
Option Adapter
Assembling, 25
on a Discrete VAC Base, 42
on a Typical Base, 41
Option Adapters, 14

P

Power, 45
Power Supplies
Selecting, 48
Power Supply
Single, Configuration, 49
Power Supply Specifications
24 VDC, 574
AC voltages, 574
Power Supply System
Structuring, 47
Processor Adapter
Assembling, 25
on a Discrete VAC Base, 42
on a Typical Base, 41
Processor Adapters, 12
Protective Circuits
for AC Actuators, 53
for DC Actuators, 51

R

Relay outputs, 575
Removing
Terminal Connector, 34

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

S

Selecting
Components, 9
Selecting Other TSX Momentum
Components, 9
Single Power Supply
Configuration, 49
Specification
170 AAI 030 00, 64
170 AAI 140 00, 82
170 AAI 520 40, 100
170 AAO 120 00, 124
170 AAO 921 00, 140
170 ADI 340 00, 154
170 ADI 350 00, 168
170 ADI 540 50, 182
170 ADI 740 50, 196
170 ADM 350 10, 210
170 ADM 350 11, 228
170 ADM 350 15, 246
170 ADM 370 10, 260
170 ADM 390 10, 278
170 ADM 390 30, 294
170 ADM 540 80, 310
170 ADM 690 50, 342
170 ADM 690 51, 358
170 ADO 340 00, 374
170 ADO 350 00, 388
170 ADO 530 50, 402
170 ADO 540 50, 418
170 ADO 730 50, 434
170 ADO 740 50, 450
170 AMM 090 00, 466
170 ANR 120 90, 496
170 ANR 120 91, 520
170 ARM 370 30, 546
170 CPS 111 00, 562
Standard Adapter
on a Typical Base, 39
on Discrete VAC Base, 40
Structuring
Power Supply System, 47
Suggested Component Values
for AC and DC Actuators, 54
System Specifications, 573

T

Terminal Connector
Coding Keys, 32
Removing, 34
Terminal Connectors, 15
Inserting, 33
TSX Momentum Devices
Grounding, 55
Types of I/O Bases, 6

U

Using Momentum I/O Bases, 1

V

Values
for AC and DC Actuators, 54
Voltage Types, 46

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP