

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Visit our website - *Click HERE*

5 Port Solenoid Valve

VQ1000/2000 Series

Metal Seal | Rubber Seal

CE [Option]

Power saving

Standard: 0.4 W
(Reduced by **60%** compared to current model)

High-pressure (1 MPa, Metal seal): **0.95 W**



Space-saving profile


All pilot valves are compactly mounted on one side. The space-saving design of mounting all fittings on one side permits mounting in three directions.

The non-bias, one-clamp structure permits easy valve replacement.

Built-in One-touch fittings for easy piping

Slide locking type manual override provided

ON/OFF operation and locking can be made by sliding the manual override.

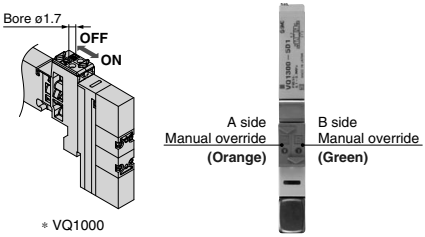

∗ VQ1000

Thin compact design with high flow capacity

Model	Manifold pitch (mm)	Flow rate characteristics		Applicable cylinder bore size
		Metal seal	Rubber seal	
		C [dm³/(s·bar)]	C [dm³/(s·bar)]	
VQ1000	10.5	0.72	1.0	Up to ø50
VQ2000	16	2.6	3.2	Up to ø80

∗ Flow rate characteristics: 4/2 → 5/3 (A/B → R1/R2)

A wide variety of optinal parts

∗ The photo does not show an actual use example.

Regulator unit
This regulator adjusts the SUP pressure of a manifold and reduces the supply pressure from the D-side SUP port.


Slide locking type (Manual)

Locking type (Manual)

Ejector unit
It is possible to mount an ejector on the manifold together with the solenoid valve. Reduced wiring and space saving.

Blanking plate assembly

Direct EXH outlet with built-in silencer

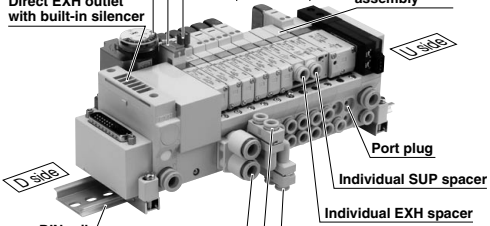

Port plug

Individual SUP spacer

Individual EXH spacer

DIN rail

Elbow fitting assembly bottom ported

Dual flow fitting
This fitting can double the flow rate by consolidating the outputs of the valves of two stations.
It is used for operating cylinders with large bore size.

Elbow fitting assembly top ported

Valve Specifications



			Sonic conductance C [dm³/(s·bar)] 4/2 → 5/3 (A/B → R1/R2)		Type of actuation					Voltage			Electrical entry				Manual override			
			Double Single	3-position (Closed center)	Single	Double	Closed center	Exhaust center	Pressure center	12 VDC 24 VDC	100 VAC 110 VAC (50/60 Hz)	200 VAC 220 VAC (50/60 Hz)	Plug-in	Grommet	L-type plug connector	M-type plug connector	Non-locking push type (Tool required)	Locking type (Tool required)	Locking type (Manual)	Slide locking type (Manual)
Base Mounted	Plug-in	***VQ1000 Series*** Metal seal **VQ1□00**	0.72	0.72	●	●	●	●	●	●	●	(F/L kit only)	●				●	●	●	●
		P. 372 Rubber seal **VQ1□01**	1.0	0.65	P. 380															
		VQ2000 Series Metal seal **VQ2□00**	2.6	2.0	●	●	●	●	●	●	●	(F/L kit only)	●				●	●	●	●
		P. 376 Rubber seal **VQ2□01**	3.2	2.2	P. 380															


VQ1000 Series


VQ2000 Series

A variety of common wiring methods are standardized.

F kit (D-sub connector)
Number of pins: 15/25


Top entry



Side entry

P kit (Flat ribbon cable)
Number of pins: 10/16/20/26


Top entry


Side entry

T kit (Terminal block box)




L kit (Lead wire)



S kit (Serial transmission)



M kit (Circular connector)



(VQ2000 only)




Dual 3-port valves, 4 positions

Rubber seal only

- Two 3-port valves built into one body.
- The 3-port valves on the A and B sides can operate independently.
- When used as 3 port valves, only half the number of stations is required.
- Can also be used as a 4-position, 5-port type valve.

Exhaust center : **VQ1A01**
: **VQ2A01**
Pressure center : **VQ1B01**
: **VQ2B01**








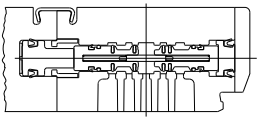


Model	A side	B side	Symbol
VQ1A01 VQ2A01	N.C. valve	N.C. valve	
VQ1B01 VQ2B01	N.O. valve	N.O. valve	
VQ1C01 VQ2C01	N.C. valve	N.O. valve	







Semi-standard / Options

External pilot	D-sub connector 15P	Flat ribbon cable 10P/16P/20P	Negative COM specifications	Inch-size One-touch fittings	Special wiring specifications	Blanking plate	Individual SUP/EXH spacer	SUP/EXH block plate	Name plate	Back pressure check valve	DIN rail mounting	Built-in silencer	Silencer for EXH port	Elbow fitting for cylinder port	Dual flow fitting	Plug for cylinder port	Regulator unit	Ejector unit	Double check block (Separated)
●	●	●	Except S kit	●	Except L kit	●	●	●	●	●	●	●	●	●	●	●	●	●	●
P. 418						P. 428													
●	●	●	Except S kit	●	Except L kit	●	●	●	●	●	●	●	●	●	●	●			●
P. 418						P. 434													

Manifold Variations

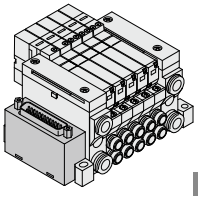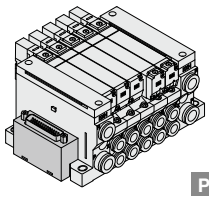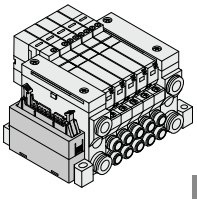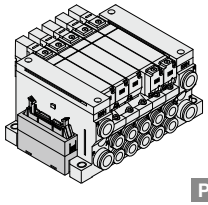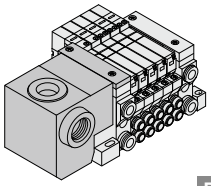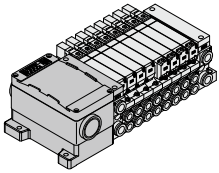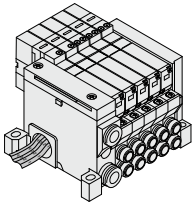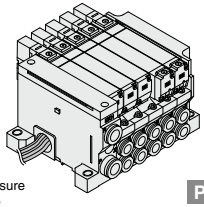	Plug-in	
	VQ1000 Series	***VQ2000 Series***
F kit **D-sub connector** Conforming to with MIL D-sub connector	 P. 382	 P. 382
P kit **Flat ribbon cable (26/20/16/10 pins)** Conforming to MIL flat ribbon cable connector	 P. 386	 P. 386
T kit **Terminal block box (Terminal block)** Terminal block is compactly arranged on one side.	 P. 398	 IP65 enclosure compatible P. 398
L kit **Lead wire** Direct electrical entry type	 P. 402	 IP65 enclosure compatible P. 402


Manifold Variations

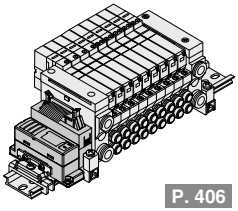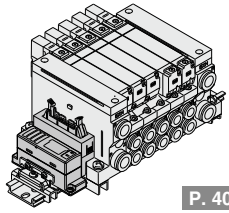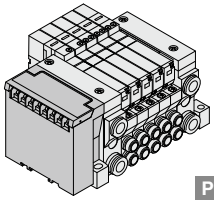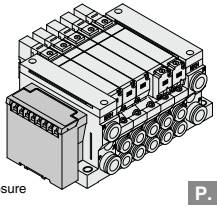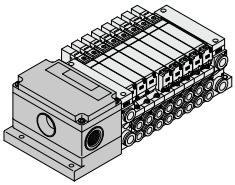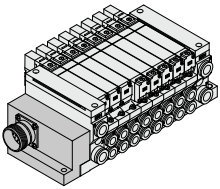	Plug-in	
	***VQ1000* Series**	***VQ2000* Series**
Gateway-type serial transmission system Serial unit: EX510	 IP20 enclosure compliant P. 406	 IP20 enclosure compliant P. 406
S kit **Integrated-type serial transmission system (for Output)** Serial unit: EX120/124	 P. 410	 IP20 enclosure compliant P. 410
	—	 Dust-tight, Water-jet-proof (-W) IP65 enclosure compliant P. 410
M kit **Circular connector** IP65 (Dust-tight, Water-jet-proof "-W")	—	 Dust-tight, Water-jet-proof (-W) IP65 enclosure compliant P. 414

Cylinder Speed Chart

This chart is provided as guidelines only.
For performance under various conditions, use SMC's Model Selection Program before making a judgment.

Series	Average speed (mm/s)	Bore size											
		CJ2 series Pressure 0.5 MPa Load factor 50% Stroke 60 mm			CM2 series Pressure 0.5 MPa Load factor 50% Stroke 300 mm				MB, CA2 series Pressure 0.5 MPa Load factor 50% Stroke 500 mm				
		ø6	ø10	ø16	ø20	ø25	ø32	ø40	ø40	ø50	ø63	ø80	ø100
VQ1101 Port size: ø6 One-touch fitting	800 700 600 500 400 300 200 100 0												
VQ2101 Port size: ø8 One-touch fitting	800 700 600 500 400 300 200 100 0												




∗ It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.
∗ The average velocity of the cylinder is what the stroke is divided by the total stroke time.
∗ Load factor: ((Load mass x 9.8)/Theoretical force) x 100%

Conditions

Series	Conditions	CJ2 series	CM2 series	MB, CA2 series
VQ1101	Tube bore x Length	T0604 (O.D. ø6/I.D. ø4) x 1 m		
	Speed controller	AS3002F-06		
	Silencer	AN15-C08		
VQ2101	Tube bore x Length	T0806 (O.D. ø8/I.D. ø6) x 1 m		
	Speed controller	AS3002F-08		
	Silencer	AN20-C10		

INDEX

Features ..... **P. 366**
Variations ..... **P. 368**
Cylinder Speed Chart ..... **P. 370**
VQ1000 How to Order, Manifold Options ..... **P. 372**
VQ2000 How to Order, Manifold Options ..... **P. 376**
VQ1000/2000 Model, Standard/Manifold Specifications ..... **P. 380**

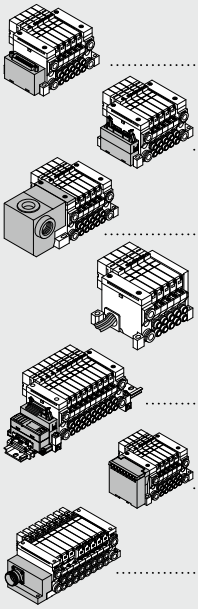

VQ1000/2000
F kit (D-sub connector) ..... **P. 382**

VQ1000/2000
P kit (Flat ribbon cable) ..... **P. 386**

VQ1000/2000
T kit (Terminal block box) ..... **P. 398**

VQ1000/2000
L kit (Lead wire) ..... **P. 402**

VQ1000/2000
S kit (Serial transmission) EX510 ..... **P. 406**

VQ1000/2000
S kit (Serial transmission) EX120/124 ..... **P. 410**

VQ2000
M kit (Circular connector) ..... **P. 414**

VQ2000 Sub-plate Single Unit ..... **P. 417**
VQ1000/2000 Semi-standard ..... **P. 418**
VQ1000/2000 Construction ..... **P. 422**
VQ1000/2000 Exploded View of Manifold ..... **P. 424**
VQ1000/2000 Manifold Optional Parts ..... **P. 428**
VQ1000/2000 Specific Product Precautions ..... **P. 441**

Plug-in Unit
Base Mounted
VQ1000 Series

CE

[Option]
Note) For CE-compliant models, DC-type only.

How to Order Manifold

VV5Q 1 1 − 08 C6 FU1 − □ − □

Series

1	VQ1000

Manifold

1	Plug-in unit

Stations

01	1 station
⋮	⋮

The number of max. stations differs from kit to kit.
(Refer to the below table.)

CE-compliant

Nil	—
Q	CE-compliant

Note) For CE-compliant models, DC-type only.

Option

Symbol	Option
Nil	None
2	200/220 VAC models (F/L kit only)
B Note 2)	With back pressure check valve
D	DIN rail mounting
D0	With DIN rail bracket (Without DIN rail)
D□ Note 7)	DIN rail length specified
G1 Note 3) Note 8)	1 set of regulator unit
G2 Note 3) Note 8)	2 sets of regulator unit
G3 Note 3) Note 8)	3 sets of regulator unit
J□ Note 4)	With ejector unit
K Note 5)	Special wiring spec. (Except double wiring)
N Note 9)	With name plate
R Note 6)	External pilot
S	Direct EXH outlet with built-in silencer

Note 1) When multiple symbols are specified, indicate them by letter in the order that they appear in the table, starting from the top. Example: -BRS
Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.
Note 3) Specify the mounting position by means of the manifold specification sheet.
Note 4) Refer to page 432 for details on with vacuum ejector unit. A combination of "J" and "N" is not available.
Note 5) Specify the wiring specifications by means of the manifold specification sheet. (Except L kit)
Note 6) Indicate "R" for the valve with external pilot.
Note 7) □: Station. Example: D08: The number of stations that may be displayed is longer than the manifold number of stations.
Note 8) G1, G2, or G3 cannot be combined with N.
Note 9) When mounting the blanking plate with connector and the slide locking manual type valve by ordering only the manifold, order the name plate separately. For details, refer to page 429.

Cylinder port

Symbol	Port size
C3	With ø3.2 One-touch fitting
C4	With ø4 One-touch fitting
C6	With ø6 One-touch fitting
M5	M5 thread
CM Note 1)	Mixed sizes and with port plug
L3	Top ported elbow with ø3.2 One-touch fitting
L4	Top ported elbow with ø4 One-touch fitting
L6	Top ported elbow with ø6 One-touch fitting


Symbol	Port size
L5	Top ported elbow M5 thread
B3	Bottom ported elbow with ø3.2 One-touch fitting
B4	Bottom ported elbow with ø4 One-touch fitting
B6	Bottom ported elbow with ø6 One-touch fitting
B5	Bottom ported elbow M5 thread
LM Note 1)	Elbow port, mixed sizes(Including upward, downward piping and mixed)
MM Note 2)	Mixed size for different types of piping, option installed

Note 1) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.
Note 2) When selecting the mixed size for different types of piping or dual flow fitting assembly, enter "MM" and give instructions in the manifold specification sheet.
Note 3) Inch-size One-touch fittings are also available. Refer to page 420 for details.
Note 4) M5 fittings for M5 thread are attached without being incorporated.

Simple specials are available with SMC Simple Specials System.
Please contact your local representative for more details.


Kit type/Electrical entry/Cable length

F kit (D-sub connector)

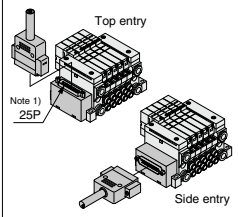

Connector entry direction			
Top entry	Side entry	P. 382	
FU0	FS0	Without cable	Note 2) 2 to 24 stations
FU1	FS1	With cable (1.5 m)	
FU2	FS2	With cable (3 m)	
FU3	FS3	With cable (5 m)	

P kit (Flat ribbon cable)

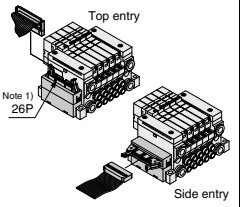

Connector entry direction			
Top entry	Side entry	P. 386	
PU0	PS0	Without cable	Note 2) 2 to 24 stations
PU1	PS1	With cable (1.5 m)	
PU2	PS2	With cable (3 m)	
PU3	PS3	With cable (5 m)	

Note 1) Besides the above, F/P kit with different number of pins are available. Refer to page 418 for details.
Note 2) Refer to page 419 for details.

SMC

How to Order Valves

Note) For CE-compliant models, DC-type only. CE [Option]

VQ 1 1 0 0 □ – 5 □ □ 1 – □

Series

1	VQ1000

Type of actuation

1		2-position single
2	Metal	2-position double
	Rubber	2-position double
3		3-position closed center
4		3-position exhaust center
5		3-position pressure center
A Note)		4-position dual 3-port valve
B Note)		4-position dual 3-port valve
C Note)		4-position dual 3-port valve

Note) Rubber seal only

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W) ○	○ Note 1)
B	High-speed response type	(0.95 W) ○	—
K Note 2)	High-pressure type (1.0 MPa)	(0.95 W) ○	—
N Note 3)	Negative common	○	—
R Note 3) Note 5)	External pilot	○	○

Note 1) Refer to page 381 for power consumption of AC type.
Note 2) Metal seal only
Note 3) For external pilot and negative common specifications, refer to "Semi-standard" on pages 419 and 420.
Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.
Note 5) Dual 3-port valve is not applicable.

Manual override

Nil: Non-locking push type (Tool required)
B: Locking type (Tool required)
C: Locking type (Manual)
D: Slide locking type (Manual)

Light/surge voltage suppressor

Nil	Yes
E Note1, 2)	None (Non-polar)

Note 1) Not applicable to the S kit.
Note 2) A combination of "Function [N] (Negative common)" and [E] is unavailable.
Since [E] has no polarity, it can also be used as a negative common. Selection of "Function [N]" is not required.

Coil voltage

		CE-compliant
1	100 VAC (50/60 Hz)	—
2 Note)	200 VAC (50/60 Hz)	—
3	110 VAC (50/60 Hz)	—
4 Note)	220 VAC (50/60 Hz)	—
5	24 VDC	●
6	12 VDC	●

Note) 200 and 220 VAC: F/L kit only


CE-compliant

Nil	—
Q	CE-compliant

Note) For CE-compliant models, DC-type only.

How to Order Manifold Assembly

Example

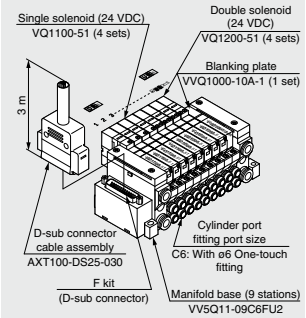


VV5Q11-09C6FU2 ··· **1 set** (F kit 9-station manifold base part no.)
※**VQ1100-51** ··· **4 sets (Single solenoid part no.)**
※**VQ1200-51** ··· **4 sets (Double solenoid part no.)**
※**VVQ1000-10A-1** ··· **1 set (Blanking plate part no.)**
→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Specify the part numbers for valves and options together beneath the manifold base part number. Besides, when the arrangement will be complicated, specify them by means of the manifold specification sheet.

⚠Caution

Use the standard (DC) specification when continuously energizing for long periods of time.


T kit (Terminal block box)

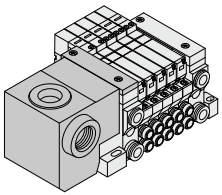

P. 398

T0	Terminal block box	2 to 24 stations Note 2)

L kit (Lead wire)

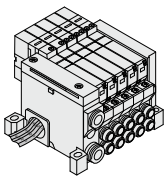


P. 402

L0	With cable (0.6 m)	1 to 8 stations
L1	With cable (1.5 m)	
L2	With cable (3 m)	

S kit (Serial transmission)

The valve is equipped with an indicator light and surge voltage suppressor, and the voltage is 24 VDC.

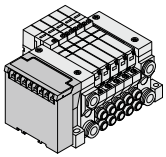


P. 410

S0	Without SI unit	Note 2) Max.16 stations
SQ	DeviceNet®	Max.16 stations
SR1	OMRON Corp.: CompoBus/S (16 outputs)	
SR2	OMRON Corp.: CompoBus/S (8 outputs)	Max. 8 stations
SV	CC-LINK	Max. 16 stations
SZB	CompoNet® (Positive common)	
SZBN	CompoNet® (Negative common)	


VQ1000: Manifold Options

P. 428 to 432


Blanking plate assembly
VVQ1000-10A-1

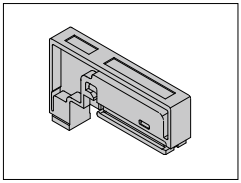


Individual SUP spacer
VVQ1000-P-1-C6/N7

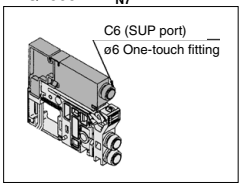


Individual EXH spacer
VVQ1000-R-1-C6/N7

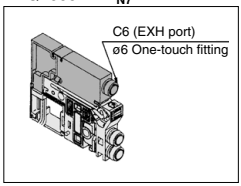


SUP block plate
VVQ1000-16A

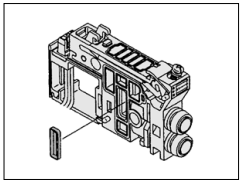


Blanking plate with connector
VVQ1000-1C□-□

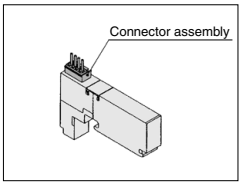


EXH block base assembly
VVQ1000-19A-P□-F□/L□ C3, C4, C5, M5, N1, N3, N7

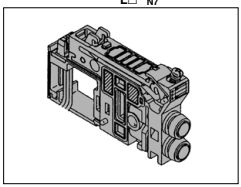


Back pressure check valve assembly [-B]
VVQ1000-18A

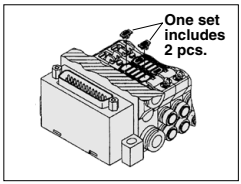


Name plate [-N]
VVQ1000-N/NC-Station
(1 to Max. stations) (-X4)

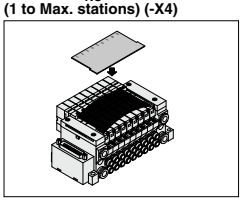


Blanking plug
KQ2P-□

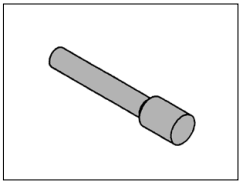


Port plug
VVQ0000-58A

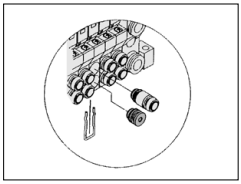


Elbow fitting assembly
VVQ1000-F-L□

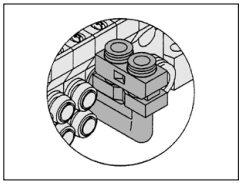


DIN rail mounting bracket
[-D/-D0/-D□]
VVQ1000-57A

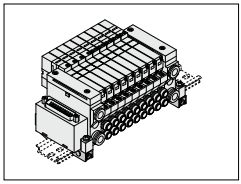


Direct EXH outlet with built-in silencer
[-S]

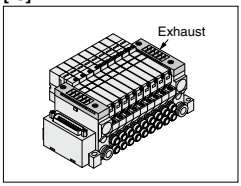

Dual flow fitting assembly
VVQ1000-52A-C8/N9

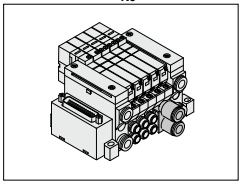


Silencer (For EXH port)
AN15-C08

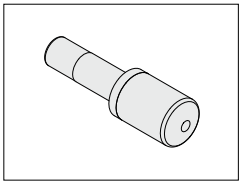


- Refer to page 442 for cylinder port fittings part number.
- Refer to page 425 for replacement parts.


Regulator unit
VVQ1000-AR-1

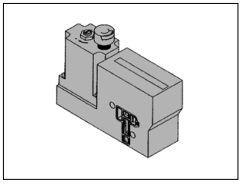

Double check block
VQ1000-FPG-□□-□

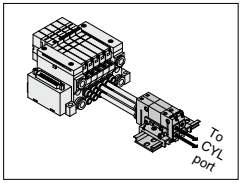

With ejector unit
[-J□]

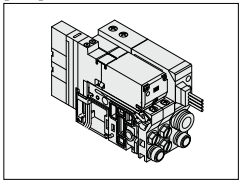

Plug-in Unit
Base Mounted
VQ2000 Series

[Option]
Note) For CE-compliant models, DC-type only.

How to Order Manifold

VV5Q 2 1 – 08 C6 FU1 – □ – □

Series

2	VQ2000

Manifold

1	Plug-in unit

CE-compliant

Nil	—
Q	CE-compliant

Note) For CE-compliant models, DC-type only.

Stations

01	1 station
⋮	⋮

The maximum and minimum number of stations are varied depending on kit. (Refer to the below table.)

Cylinder port

Symbol	Port size
C4	With ø4 One-touch fitting
C6	With ø6 One-touch fitting
C8	With ø8 One-touch fitting
CM Note 1)	Mixed sizes and with port plug
L4	Top ported elbow with ø4 One-touch fitting
L6	Top ported elbow with ø6 One-touch fitting

Symbol	Port size
L8	Top ported elbow with ø8 One-touch fitting
B4	Bottom ported elbow with ø4 One-touch fitting
B6	Bottom ported elbow with ø6 One-touch fitting
B8	Bottom ported elbow with ø8 One-touch fitting
LM Note 1)	Elbow port, mixed sizes (Including upward, downward piping and mixed)
MM Note 2)	Mixed size for different types of piping, option installed

Note 1) Indicate "Mixed size and with port plug" by means of the manifold specification sheet.
Note 2) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet.
Note 3) Inch-size One-touch fittings are also available. Refer to page 420 for details.

Simple specials are available with SMC Simple Specials System.
Please contact your local representative for more details.


Option

Symbol	Option
Nil	None
2	200/220 VAC models (F/L kit only)
B Note 2)	With back pressure check valve
D	DIN rail mounting
D0	With DIN rail bracket (Without DIN rail)
D□ Note 5)	DIN rail length specified
K Note 3)	Special wiring spec. (Except double wiring)
N Note 6)	With name plate
R Note 4)	External pilot
S	Direct EXH outlet with built-in silencer
W Note 7)	Enclosure: Dust-tight, Water-jet-proof (IP65) (T/L/S/M kit only)

Note 1) When multiple symbols are specified, indicate them by letter in the order that they appear in the table, starting from the top. Example: -BRS
Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.
Note 3) Specify the wiring specifications by means of the manifold specification sheet. (Except L kit)
Note 4) Indicate "R" for the valve with external pilot.
Note 5) □: Station. Example: D08: The number of stations that may be displayed is longer than the manifold number of stations.
Note 6) When mounting the slide locking manual type valve by ordering only the manifold, order the name plate separately. For details, refer to page 435.
Note 7) When used in combination with the direct EXH outlet with built-in silencer type, keep the exhaust port from coming into direct contact with water or other liquids.

Kit type/Electrical entry/Cable length


F kit (D-sub connector)

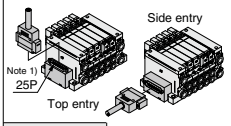

Connector entry direction			
Top entry	Side entry		
FU0	FS0	Without cable	Note 2) 2 to 24 stations
FU1	FS1	With cable (1.5 m)	
FU2	FS2	With cable (3 m)	
FU3	FS3	With cable (5 m)	

P. 382


P kit (Flat ribbon cable)

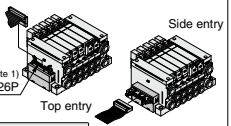

Connector entry direction			
Top entry	Side entry		
PU0	PS0	Without cable	Note 2) 2 to 24 stations
PU1	PS1	With cable (1.5 m)	
PU2	PS2	With cable (3 m)	
PU3	PS3	With cable (5 m)	

P. 386

T kit (Terminal block box)

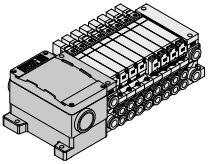


Dust-tight/Water-jet-proof (IP65) compatible Note 3)

P. 398

T0	Terminal block box	2 to 20 stations Note 2)

L kit (Lead wire)

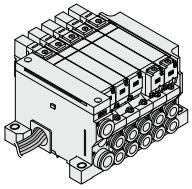


Dust-tight/Water-jet-proof (IP65) compatible Note 3)

P. 402

L0	With cable (0.6 m)	1 to 8 stations
L1	With cable (1.5 m)	
L2	With cable (3 m)	

S kit (Serial transmission)




The valve is equipped with an indicator light and surge voltage suppressor, and the voltage is 24 VDC. Dust-tight, Water-jet-proof (IP65) is available. Note 3)

P. 410

S0	Without SI unit	Note 2) Max.16 stations
SQ	DeviceNet®	Max.16 stations
SR1	OMRON Corp.: CompoBus/S (16 outputs)	
SR2	OMRON Corp.: CompoBus/S (8 outputs)	Max. 8 stations
SV	CC-LINK	Max.16 stations
SZB	CompoNet® (Positive common)	
SZBN	CompoNet® (Negative common)	

M kit (Circular-connector)

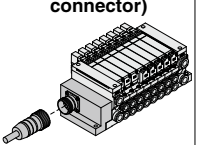

Dust-tight/Water-jet-proof (IP65) compatible Note 3)

P. 414

M0	Without cable	Note 2) 2 to 24 stations
M1	With cable (1.5 m)	
M2	With cable (3 m)	
M3	With cable (5 m)	

Note 1) Besides the above, F/P kit with different number of pins are available. Refer to page 418 for details.
Note 2) Refer to page 419 for details.
Note 3) Refer to the pages on respective kits for IP65 type. (T/L/S/M kit)

SMC

How to Order Valves

Note) For CE-compliant models, DC-type only. [Option]

How to Order Manifold Assembly

VQ 2 1 0 0 – 5 1 –

Series

2	VQ2000

Seal

0	Metal seal
1	Rubber seal

CE-compliant

Nil	—
Q	CE-compliant

Note) For CE-compliant models, DC-type only.

Enclosure

Nil	—
W Note)	Dust-tight, Water-jet-proof (IP65)

Note) T/L/S/M kit only.

Type of actuation

1		2-position single	A Note)	4-position dual 3-port valve (A)
2	Metal	2-position double	B Note)	4-position dual 3-port valve (B)
	Rubber	2-position double	C Note)	4-position dual 3-port valve (C)
3		3-position closed center		
4		3-position exhaust center		
5		3-position pressure center		

Note) Rubber seal only

Note) For sub-plate single unit type, refer to page 417.

Light/Surge voltage suppressor

Nil	Yes
E Note1, 2)	None (Non-polar)

Note 1) Not applicable to the S kit.
Note 2) A combination of "Function [N] (Negative common)" and [E] is unavailable.
Since [E] has no polarity, it can also be used as a negative common. Selection of "Function [N]" is not required.

Coil voltage

		CE-Compliant
1	100 VAC (50/60 Hz)	—
2 Note)	200 VAC (50/60 Hz)	—
3	110 VAC (50/60 Hz)	—
4 Note)	220 VAC (50/60 Hz)	—
5	24 VDC	●
6	12 VDC	●

Note) 200 and 220 VAC: F/L kit only

Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W) ○	○ Note 1)
B	High-speed response type	(0.95 W) ○	—
K Note 2)	High-pressure type (1.0 MPa)	(0.95 W) ○	—
N Note 3)	Negative common	○	—
R Note 3) Note 5)	External pilot	○	○

Note 1) For power consumption of AC type, refer to page 381.
Note 2) Metal seal only
Note 3) For external pilot and negative common specifications, refer to "Semi-standard" on pages 419 and 420.
Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.
Note 5) Dual 3-port valve is not applicable.

Manual override

Nil: Non-locking push type (Tool required)




B: Push-locking slotted type (Tool required)




C: Locking type (Manual)



D: Slide locking type (Manual)

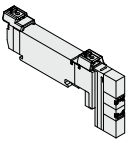

Example

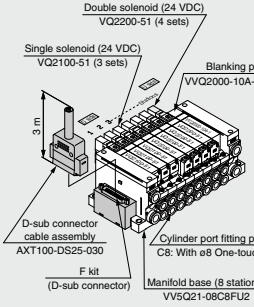

VV5Q21-08C8FU2 **1 set** (F kit 8-station manifold base part no.)
∗**VQ2100-51** ····· **3 sets (Single solenoid part no.)**
∗**VQ2200-51** ····· **4 sets (Double solenoid part no.)**
∗**VVQ2000-10A-1** ···· **1 set (Blanking plate part no.)**
→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Specify the part numbers for valves and options together beneath the manifold base part number. Besides, when the arrangement will be complicated, specify them by means of the manifold specification sheet.


⚠Caution

Use the standard (DC) specification when continuously energizing for long periods of time.


VQ2000: Manifold Options

P. 434 to 438


Blanking plate assembly
VVQ2000-10A-1

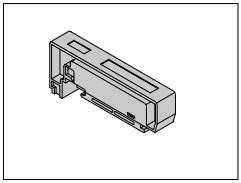


Individual SUP spacer
VVQ2000-P-1-$^{C8}_{N9}$

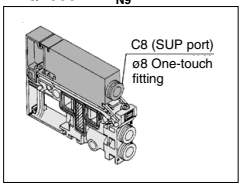


Individual EXH spacer
VVQ2000-R-1-$^{C8}_{N9}$

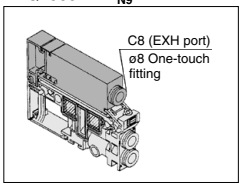


SUP block plate
VVQ2000-16A

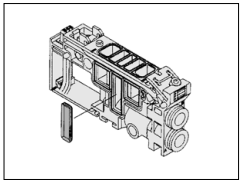


EXH block plate
VVQ2000-19A

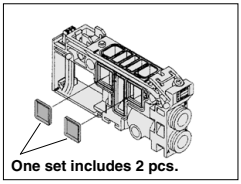


SUP stop valve spacer
VVQ2000-24A-1

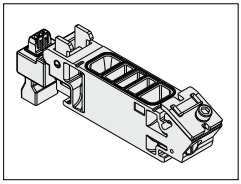


Back pressure check valve assembly [-B]
VVQ2000-18A

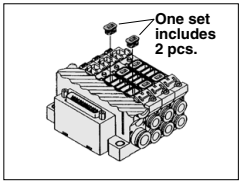


Name plate [-N]
VVQ2000-N-Station
(1 to Max. stations) (-X4)

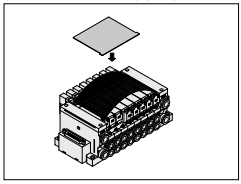


Blanking plug
KQ2P-□

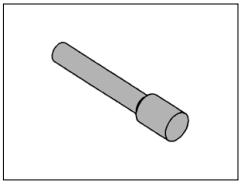


Port plug
VVQ1000-58A

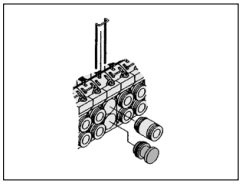


DIN rail mounting bracket [-D/-D0/-D□]
VVQ2000-57A

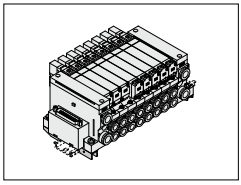


Direct EXH outlet with built-in silencer [-S]

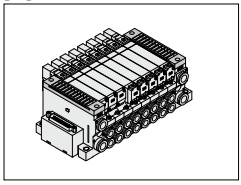


Silencer (For EXH port)
AN20-C10

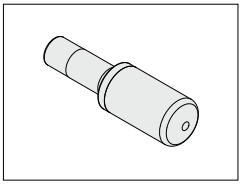

Elbow fitting assembly
VVQ2000-F-L□

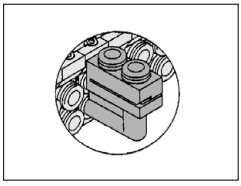


Dual flow fitting assembly
VVQ2000-52A-$^{C10}_{N11}$

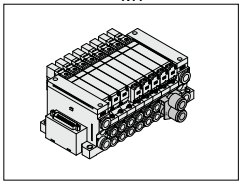


- Refer to page 442 for cylinder port fittings part number.
- Refer to page 427 for replacement parts.


Double check block (Separated)
VQ2000-FPG-□□-□

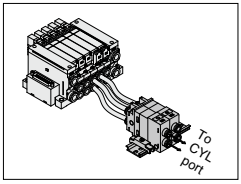

Double check block (Direct mounting)
VVQ2000-23A-□

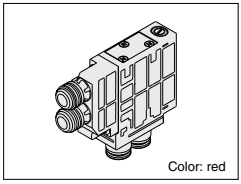

Plug-in Unit
Base Mounted
VQ1000/2000 Series

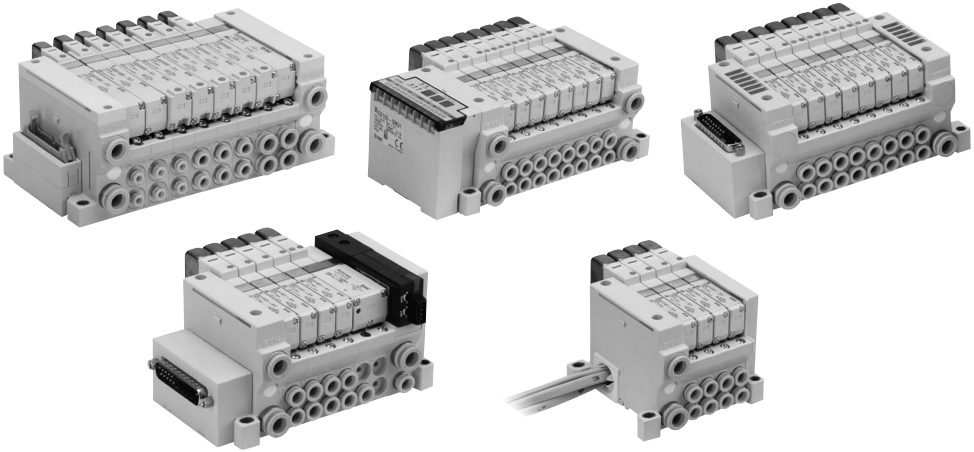


Model

Series	Type of actuation		Model		Flow rate characteristics Note 1)						Response time (ms) Note 2)			Weight (g)
					1 → 2/4 (P → A/B)			2/4 → 3/5 (A/B → R1/R2)			Standard: 0.4 W	High-speed response: 0.95 W	AC	
					C [dm³/(s·bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv				
VQ1000	2-position	Single	Metal seal	VQ1100	0.70	0.15	0.16	0.72	0.25	0.18	15 or less	12 or less	29 or less	67
			Rubber seal	VQ1101	0.85	0.20	0.21	1.0	0.30	0.25	20 or less	15 or less	34 or less	
		Double	Metal seal	VQ1200	0.70	0.15	0.16	0.72	0.25	0.18	13 or less	10 or less	13 or less	77
			Rubber seal	VQ1201	0.85	0.20	0.21	1.0	0.30	0.25	20 or less	15 or less	20 or less	
	3-position	Closed center	Metal seal	VQ1300	0.68	0.15	0.16	0.72	0.25	0.18	26 or less	20 or less	40 or less	
			Rubber seal	VQ1301	0.70	0.20	0.16	0.65	0.42	0.18	33 or less	25 or less	47 or less	
		Exhaust center	Metal seal	VQ1400	0.68	0.15	0.16	0.72	0.25	0.18	26 or less	20 or less	40 or less	
			Rubber seal	VQ1401	0.70	0.20	0.16	1.0	0.30	0.25	33 or less	25 or less	47 or less	
		Pressure center	Metal seal	VQ1500	0.70	0.15	0.16	0.72	0.25	0.18	26 or less	20 or less	40 or less	
			Rubber seal	VQ1501	0.85	0.20	0.21	0.65	0.42	0.18	33 or less	25 or less	47 or less	
	4-position	Dual 3-port valve	Rubber seal	VQ1$^{A}_{C}$01	0.70	0.20	0.16	0.70	0.20	0.16	33 or less	25 or less	47 or less	
VQ2000	2-position	Single	Metal seal	VQ2100	2.0	0.15	0.46	2.6	0.15	0.60	29 or less	22 or less	49 or less	95
			Rubber seal	VQ2101	2.2	0.28	0.55	3.2	0.30	0.80	31 or less	24 or less	51 or less	
		Double	Metal seal	VQ2200	2.0	0.15	0.46	2.6	0.15	0.60	20 or less	15 or less	20 or less	105
			Rubber seal	VQ2201	2.2	0.28	0.55	3.2	0.30	0.80	26 or less	20 or less	26 or less	
	3-position	Closed center	Metal seal	VQ2300	2.0	0.15	0.46	2.0	0.18	0.46	38 or less	29 or less	58 or less	
			Rubber seal	VQ2301	2.0	0.28	0.49	2.2	0.31	0.60	44 or less	34 or less	64 or less	
		Exhaust center	Metal seal	VQ2400	2.0	0.15	0.46	2.6	0.15	0.60	38 or less	29 or less	58 or less	
			Rubber seal	VQ2401	2.0	0.28	0.49	3.2	0.30	0.80	44 or less	34 or less	64 or less	
		Pressure center	Metal seal	VQ2500	2.4	0.17	0.57	2.0	0.18	0.46	38 or less	29 or less	58 or less	
			Rubber seal	VQ2501	3.2	0.28	0.80	2.2	0.31	0.60	44 or less	34 or less	64 or less	
	4-position	Dual 3-port valve	Rubber seal	VQ2$^{A}_{C}$01	1.8	0.28	0.46	1.8	0.28	0.46	44 or less	34 or less	64 or less	

Note 1) The values are given for port size C6: (VQ1000), C8: (VQ2000) without back pressure check valve.

Note 2) As per JIS B 8419: 2010 (Supply pressure 0.5 MPa; with indicator light/surge voltage suppressor; clean air
The response time is subject to the pressure and quality of the air.) The values at the time of ON are given for double types.

Symbol

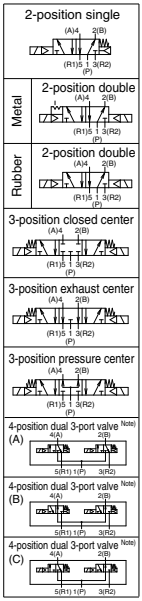

Note) Rubber seal only

Standard Specifications


			Metal seal	Rubber seal
Valve specifications	Valve type		Metal seal	Rubber seal
	Fluid		Air	Air
	Maximum operating pressure		0.7 MPa (High-pressure type: 1.0 MPa)	0.7 MPa
	Minimum operating pressure	Single	0.1 MPa	0.15 MPa
		Double	0.1 MPa	0.1 MPa
		3-position	0.1 MPa	0.2 MPa
		4-position	———	0.15 MPa
	Ambient and fluid temperature		–10 to 50°C Note 1)	
	Lubrication		Not required	
	Manual override		Push type, Locking type (Tool required, Manual) semi-standard	
	Impact/Vibration resistance Note 2)		150/30 m/s²	
	Enclosure		Dust-protected; Dust-tight, Water-jet-proof (IP65) Note 4)	
Electrical specifications	Coil rated voltage		12 , 24 VDC, 100, 110, 200, 220 VAC (50/60 Hz)	
	Allowable voltage fluctuation		±10% of rated voltage	
	Coil insulation type		Equivalent to Class B	
	Power consumption (Current)	24 VDC	0.4 W DC (17 mA), 0.95 W DC (40 mA) Note 3)	
		12 VDC	0.4 W DC (34 mA), 0.95 W DC (80 mA) Note 3)	
		100 VAC	Inrush 0.96 VA (10 mA), Holding 0.96 VA (10 mA)	
		110 VAC	Inrush 1.0 VA (9 mA), Holding 1.0 VA (9 mA)	
		200 VAC	Inrush 1.26 VA (6 mA), Holding 1.26 VA (6 mA)	
		220 VAC	Inrush 1.38 VA (6 mA), Holding 1.38 VA (6 mA)	

Note 1) Use dry air to prevent condensation when operating at low temperatures.
Note 2) Impact resistance ····· No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)
Vibration resistance ··· No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)
Note 3) Value for high-speed response, high-voltage type (0.95 W)
Note 4) Dust-tight, water-jet-proof (IP65) is available on T/L/S/M kit of the VQ2000.


Manifold Specifications

Series	Base model	Connection type	Piping specifications: Piping direction	Piping specifications: Port size Note 1) 1(P), 3(R)	Piping specifications: Port size Note 1) 4(A), 2(B)	Applicable stations Note 2)	Applicable solenoid valve	5-station weight (g)
VQ1000	VV5Q11-□□□	F kit–D-sub connector P kit–Flat ribbon cable T kit–Terminal block box L kit–Lead wire S kit–Serial transmission	Side	C8 (ø8) Option: Direct EXH outlet with built-in silencer	C3 (ø3.2) C4(ø4) C6 (ø6) M5 (M5 thread)	F/P/T kit (2 to 24 stations) S kit (2 to 16 stations) L kit (1 to 8 stations)	VQ1□00 VQ1□01	643 (Single) 754 (Double, 3-position)
VQ2000	VV5Q21-□□□	F kit–D-sub connector P kit–Flat ribbon cable T kit–Terminal block box L kit–Lead wire S kit–Serial transmission M kit–Circular connector	Side	C10 (ø10) Option: Direct EXH outlet with built-in silencer	C4 (ø4) C6 (ø6) C8 (ø8)	F/P kit (2 to 24 stations) S kit (2 to 16 stations) L kit (1 to 8 stations) T kit (2 to 20 stations)	VQ2□00 VQ2□01	1076 (Single) 1119 (Double, 3-position)

Note 1) Inch-size One-touch fittings are also available. Refer to page 420 for details.
Note 2) Refer to page 419 for details.

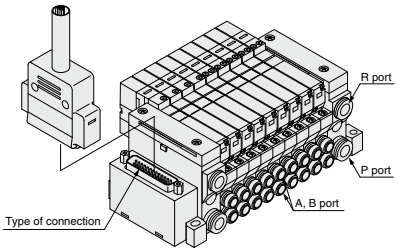



VV5Q11

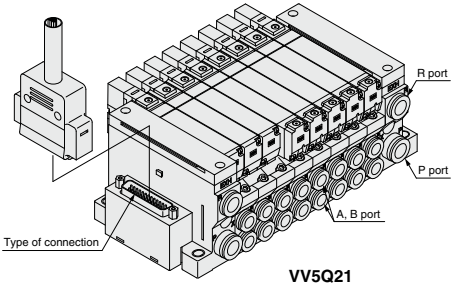

VV5Q21

F VQ1000/2000 Series
Kit (D-sub connector)

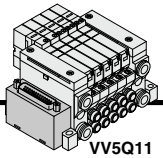
VV5Q11

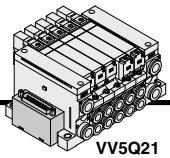
VV5Q21

- **D-sub connector reduces installation labor for electrical connections.**
- **Using the D-sub connector (25P), (15P as semi-standard) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.**
- **Top or side receptacle position can be selected in accordance with the available mounting space.**
- **Maximum stations are 24.**

Manifold Specifications


Series	Piping specifications			Applicable stations
	Piping direction	Port size		
		1(P), 3(R)	4(A), 2(B)	
VQ1000	Side	C8	C3, C4, C6, M5	Max. 24 stations
VQ2000	Side	C10	C4, C6, C8	Max. 24 stations

D-sub Connector (25 Pins)

Cable Assembly ●

AXT100-DS25- 015 / 030 / 050

(The D-sub connector cable assembly can be ordered individually or included in a specific manifold model no. Refer to "How to Order Manifold.")

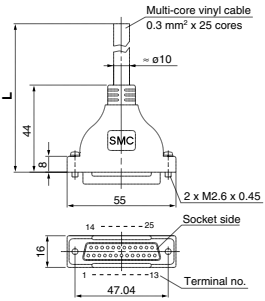

D-sub connector cable assembly

Cable length (**L**)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	Cable 25 cores x 24AWG
3 m	AXT100-DS25-030	
5 m	AXT100-DS25-050	

- For other commercial connectors, use a 25 pins type with female connector conforming to MIL-C-24308.
- Cannot be used for transfer wiring.

Connector manufacturers' example
- Fujitsu Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- HIROSE ELECTRIC CO., LTD.

Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 min, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more

Note) The min. bending radius of the D-sub connector cable assembly is 20 mm.

Wire color by terminal no. of D-sub connector cable assembly

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

Note 1) Types with 15 pins are also available. Refer to page 418 for details.
Note 2) Lengths other than the above are also available. Please contact SMC for details.

How to Order Manifold

Note) For CE-compliant models, DC-type only. CE [Option]

VV5Q [1] [1] – [08] [C6] **F** [U] [1] – [ ] – [ ]

Series

1	VQ1000
2	VQ2000

Manifold

1	Plug-in unit

Stations

02	2 stations
⋮	⋮
24	24 stations

Note) Refer to page 419 for details.

Connector entry direction

U	Top entry
S	Side entry

Cylinder port

Symbol	Port size	VQ1000	VQ2000
C3 Note 1)	With ø3.2 One-touch fitting	●	—
C4 Note 1)	With ø4 One-touch fitting	●	●
C6 Note 1)	With ø6 One-touch fitting	●	●
C8 Note 1)	With ø8 One-touch fitting	—	●
M5	M5 thread	●	—
CM Note 2) Note 3)	Mixed sizes and with port plug	●	●
MM Note 4)	Mixed size for different types of piping, option installed	●	●

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.
Example) B6 (Bottom ported elbow with ø6 One-touch fitting)
Note 2) Indicate "LM" (Including upward, downward piping and mixed) for models with elbow fittings and mixed cylinder port sizes.
Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.
Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet.
Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 420 for details.

CE-compliant

Nil	—
Q	CE-compliant

Note) For CE-compliant models, DC-type only.

Cable (Length)


0	Without cable
1	With cable (1.5 m)
2	With cable (3 m)
3	With cable (5 m)

Option


Symbol	Option	VQ1000	VQ2000
Nil	None	●	●
2	200/220 VAC models (F/L kit only)	●	●
B Note 2)	With back pressure check valve	●	●
D	DIN rail mounting	●	●
D0	With DIN rail bracket (Without DIN rail)	●	●
D□ Note 3)	DIN rail length specified (□: Stations 02 to 24)	●	●
G1 Note 4) Note 8)	1 set of regulator unit	●	—
G2 Note 4) Note 8)	2 sets of regulator unit		
G3 Note 4) Note 8)	3 sets of regulator unit		
J□ Note 5)	With ejector unit	●	—
K Note 6)	Special wiring specifications (Except double wiring)	●	●
N	With name plate	●	●
R Note 7)	External pilot	●	●
S	Direct EXH outlet with built-in silencer	●	●

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BRS
Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.
Note 3) The number of stations that may be displayed is longer than the manifold number of stations.
Note 4) Specify the mounting position by means of the manifold specification sheet.
Note 5) Refer to page 432 for the details on with ejector unit. A combination of "J" and "N" is not available.
Note 6) Specify the wiring specifications by means of the manifold specification sheet.
Note 7) Indicate "R" for the valve with external pilot.
Note 8) G1, G2, or G3 cannot be combined with N.

SMC

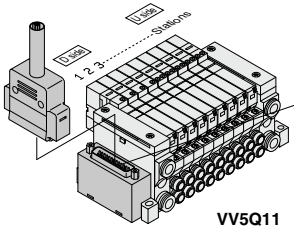


VV5Q11

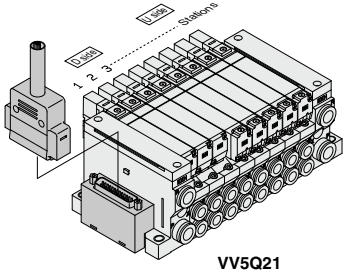

VV5Q21

The total number of stations is tabulated starting from station one on the D-side.

Electrical Wiring Specifications



As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types. Mixed single and double wiring is available as semi-standard. Refer to page 419 for details.

D-sub connector assembly
AXT100-DS25- 015 / 030 / 050 Wire color

	Terminal no.	Polarity		Lead wire color	Dot marking
Station 1	SOL.A 1	(–)	(+)	Black	None
	SOL.B 14	(–)	(+)	Yellow	Black
Station 2	SOL.A 2	(–)	(+)	Brown	None
	SOL.B 15	(–)	(+)	Pink	Black
Station 3	SOL.A 3	(–)	(+)	Red	None
	SOL.B 16	(–)	(+)	Blue	White
Station 4	SOL.A 4	(–)	(+)	Orange	None
	SOL.B 17	(–)	(+)	Purple	None
Station 5	SOL.A 5	(–)	(+)	Yellow	None
	SOL.B 18	(–)	(+)	Gray	None
Station 6	SOL.A 6	(–)	(+)	Pink	None
	SOL.B 19	(–)	(+)	Orange	Black
Station 7	SOL.A 7	(–)	(+)	Blue	None
	SOL.B 20	(–)	(+)	Red	White
Station 8	SOL.A 8	(–)	(+)	Purple	White
	SOL.B 21	(–)	(+)	Brown	White
Station 9	SOL.A 9	(–)	(+)	Gray	Black
	SOL.B 22	(–)	(+)	Pink	Red
Station 10	SOL.A 10	(–)	(+)	White	Black
	SOL.B 23	(–)	(+)	Gray	Red
Station 11	SOL.A 11	(–)	(+)	White	Red
	SOL.B 24	(–)	(+)	Black	White
Station 12	SOL.A 12	(–)	(+)	Yellow	Red
	SOL.B 25	(–)	(+)	White	None
COM.	13	(+)	(–)	Orange	Red
		Positive COM spec.	Negative COM spec.		

Note) When using the negative common specifications, use valves for negative common. (Refer to page 419.) Refer to "Semi-standard" on page 419 for details.

How to Order Valves

Note) For CE-compliant models, DC-type only. CE [Option]

VQ 1 1 0 0 – 5 1 –

Series

1	VQ1000
2	VQ2000

Type of actuation

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center
A	4-position dual port (N.C. +N.C.)
B	4-position dual port (N.O. +N.O.)
C	4-position dual port (N.C. +N.O.)

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W) ○	○ Note 1)
B	High-speed response type	(0.95 W) ○	—
K Note 2)	High-pressure type (1.0 MPa)	(0.95 W) ○	—
N Note 3)	Negative common	○	—
R Note 3) Note 5)	External pilot	○	○

Note 1) Refer to page 381 for power consumption of AC type.
Note 2) Metal seal only
Note 3) For external pilot and negative common specifications, refer to "Semi-standard" on pages 419 and 420.
Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.
Note 5) Dual 3-port valve is not applicable.

CE-compliant

Nil	—
Q	CE-compliant

Note) For CE-compliant models, DC-type only.

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)
D	Slide locking type (Manual)

Light/surge voltage suppressor

Nil	Yes
E Note)	None (Non-polar)

Note) A combination of "Function [N] (Negative common)" and [E] is unavailable.
Since [E] has no polarity, it can also be used as a negative common. Selection of "Function [N]" is not required.

Coil voltage

		CE-compliant
1	100 VAC (50/60 Hz)	—
2	200 VAC (50/60 Hz)	—
3	110 VAC (50/60 Hz)	—
4	220 VAC (50/60 Hz)	—
5	24 VDC	●
6	12 VDC	●

⚠Caution

Use the standard (DC) specification when continuously energizing for long periods of time.

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

D-sub connector kit with cable (3 m)
VV5Q11-09C6FU2 ···1 set–Manifold base part no.
✻**VQ1100-51** ·····**2 sets–Valve part no. (Stations 1 to 2)**
✻**VQ1200-51** ·····**4 sets–Valve part no. (Stations 3 to 6)**
✻**VQ1300-51** ·····**2 sets–Valve part no. (Stations 7 to 8)**
✻**VVQ1000-10A-1** ····**1 set–Blanking plate part no. (Station 9)**


Prefix the asterisk to the part nos. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side. When part nos. written collectively are complicated, specify them by means of the manifold specification sheet.

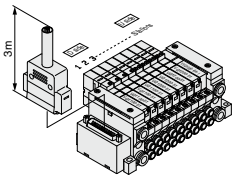


VV5Q11

< >: AC
The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-FS].

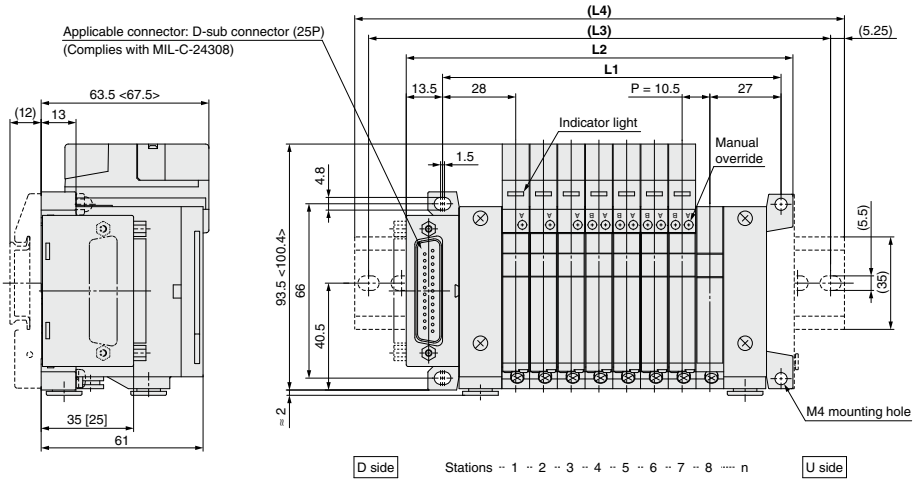

[ ]: 25 pins (top entry)

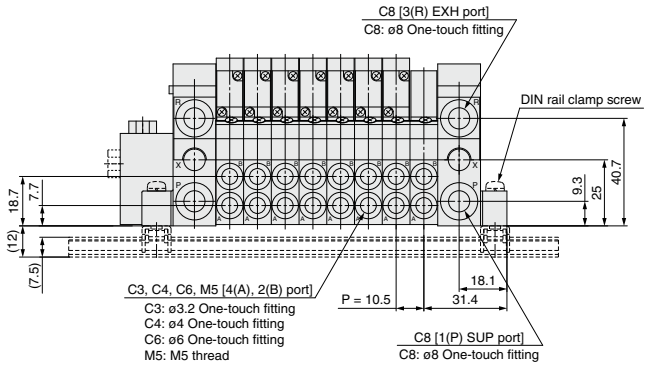

Dimensions


Formula L1 = 10.5n + 44.5, L2 = 10.5n + 62.5 n: Station (Maximum 24 stations)


L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5	223	233.5	244	254.5	265	275.5	286	296.5
L2	83.5	94	104.5	115	125.5	136	146.5	157	167.5	178	188.5	199	209.5	220	230.5	241	251.5	262	272.5	283	293.5	304	314.5
(L3)	112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	325	325	337.5
(L4)	123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	335.5	335.5	348

With ejector unit: Formula L1 = 10.5n + 28.7 + (Number of ejector units x 26.7)
L2 = 10.5n + 46.3 + (Number of ejector units x 26.7)
L4 is L2 plus about 30.

VV5Q21

< >: AC
The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-FS].

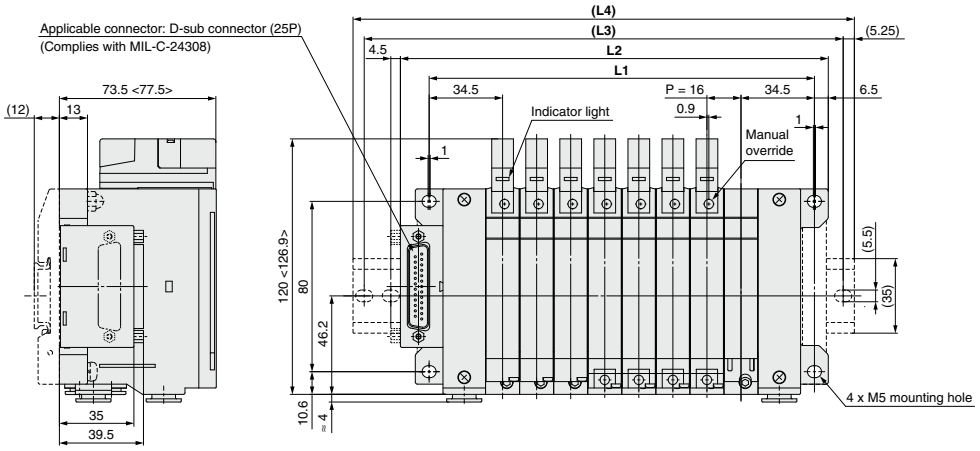

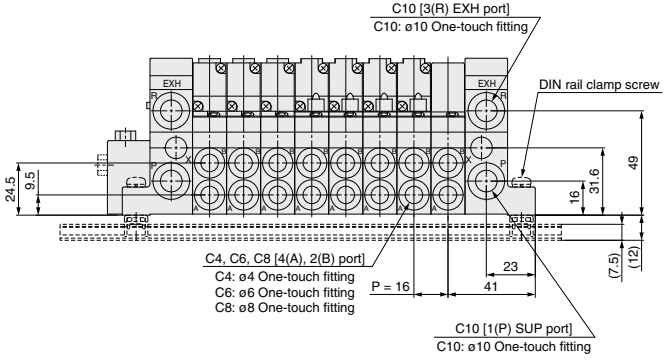


Dimensions

Formula L1 = 16n + 53, L2 = 16n + 73 n: Station (Maximum 24 stations)

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309	325	341	357	373	389	405	421	437
L2	105	121	137	153	169	185	201	217	233	249	265	281	297	313	329	345	361	377	393	409	425	441	457
(L3)	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	300	312.5	325	337.5	350	375	387.5	400	412.5	437.5	450	462.5	487.5
(L4)	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	498

P VQ1000/2000 Series
Kit (Flat ribbon cable)

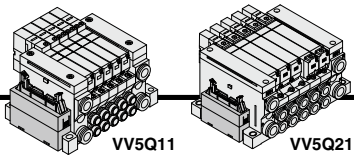

- **MIL flat ribbon cable connector reduces installation labor for electrical connection.**
- **Using the connector for flat ribbon cable (26P) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.**
- **Top or side receptacle position can be selected in accordance with the available mounting space.**
- **Maximum stations are 24.**

Manifold Specifications


Series	Piping specifications			Applicable stations
	Piping direction	Port size		
		1(P), 3(R)	4(A), 2(B)	
VQ1000	Side	C8	C3, C4, C6, M5	Max. 24 stations
VQ2000	Side	C10	C4, C6, C8	Max. 24 stations

Flat Ribbon Cable (26 Pins)

Cable Assembly

AXT100-FC26- 1 to 3

(Flat ribbon cable connector assembly can be ordered individually or included in a specific manifold model no. Refer to "How to Order Manifold.")

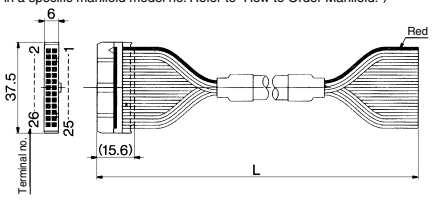

Flat Ribbon Cable Connector Assembly


Cable length (**L**)	Assembly part no.	Note
1.5 m	AXT100-FC26-1	Cable 26 cores x 28AWG
3 m	AXT100-FC26-2	
5 m	AXT100-FC26-3	


* For other commercial connectors, use a 26 pins type with strain relief conforming to MIL-C-83503.
* Cannot be used for transfer wiring.

Connector manufacturers' example

- HIROSE ELECTRIC CO., LTD.
- Fujitsu Limited
- J.S.T. Mfg. Co., Ltd.
- 3M Japan Limited
- Japan Aviation Electronics Industry, Limited
- Oki Electric Cable Co., Ltd.

Note 1) Other than the above model, 10P, 16P, 20P are also available. Refer to page 418 for details.
Note 2) Lengths other than the above are also available. Please contact SMC for details.

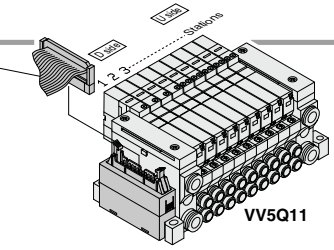

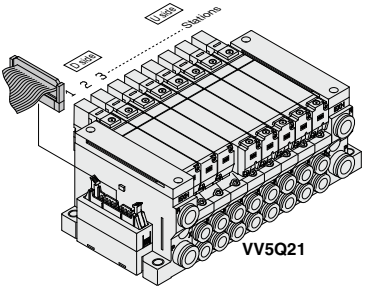

The total number of stations is tabulated starting from one on the D-side.

Note) For CE-compliant models, DC-type only. CE [Option]

How to Order Manifold

VV5Q 1 1 – 08 C6 P U 1 – □ – □

Series

1	VQ1000
2	VQ2000

Manifold

1	Plug-in unit

Stations

02	2 stations
⋮	⋮
24	24 stations

Note) Refer to page 419 for details.

Cylinder port

Symbol	Port size	VQ1000	VQ2000
C3 Note 1)	With ø3.2 One-touch fitting	●	—
C4 Note 1)	With ø4 One-touch fitting	●	●
C6 Note 1)	With ø6 One-touch fitting	●	●
C8 Note 1)	With ø8 One-touch fitting	—	●
M5	M5 thread	●	—
CM Note 2) Note 3)	Mixed sizes and with port plug	●	●
MM Note 4)	Mixed size for different types of piping, option installed	●	●

Connector entry direction

U	Top entry
S	Side entry

Cable (Length)

0	Without cable
1	With cable (1.5 m)
2	With cable (3 m)
3	With cable (5 m)

CE-compliant

Nil	—
Q	CE-compliant

Note) For CE-compliant models, DC-type only.

Option


Symbol	Option	VQ1000	VQ2000
Nil	None	●	●
B Note 2)	With back pressure check valve	●	●
D	DIN rail mounting	●	●
D0	With DIN rail bracket (Without DIN rail)	●	●
D□ Note 3)	DIN rail length specified (□: Stations 02 to 24)	●	●
G1 Note 4) Note 8)	1 set of regulator unit	●	—
G2 Note 4) Note 8)	2 sets of regulator unit		
G3 Note 4) Note 8)	3 sets of regulator unit		
J□ Note 5)	With ejector unit	●	—
K Note 6)	Special wiring specifications (Except double wiring)	●	●
N	With name plate	●	●
R Note 7)	External pilot	●	●
S	Direct EXH outlet with built-in silencer	●	●

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.
Example) B6 (Bottom ported elbow with ø6 One-touch fitting)
Note 2) Indicate "LM" (Including upward, downward piping and mixed) for models with elbow fittings and mixed cylinder port sizes.
Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.
Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet.
Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 420 for details.

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BRS
Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.
Note 3) The number of stations that may be displayed is longer than the manifold number of stations.
Note 4) Specify the mounting position by means of the manifold specification sheet.
Note 5) Refer to page 432 for details on with ejector unit. A combination of "J" and "N" is not available.
Note 6) Specify the wiring specifications by means of the manifold specification sheet.
Note 7) Indicate "R" for the valve with external pilot.
Note 8) G1, G2, or G3 cannot be combined with N.

SMC

● Electrical Wiring Specifications

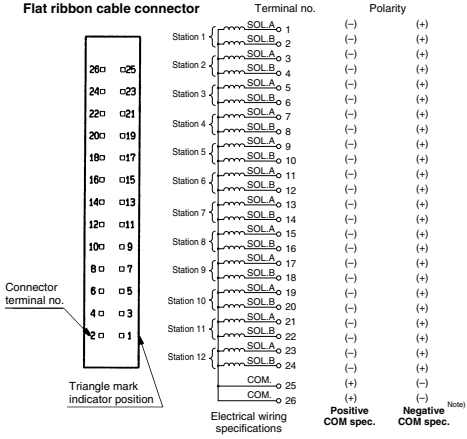

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types.
Mixed single and double wiring is available as semi-standard. Refer to page 419 for details.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 419)
Refer to "Semi-standard" on page 419 for details.

How to Order Valves

Note) For CE-compliant models, DC-type only. CE [Option]

VQ 1 1 0 0 □ – 5 □ □ 1 – □

Series

1	VQ1000
2	VQ2000

Seal

0	Metal seal
1	Rubber seal

Type of actuation

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center
A	4-position dual port (N.C. +N.C.)
B	4-position dual port (N.O. +N.O.)
C	4-position dual port (N.C. +N.O.)

Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W) ○	○ Note 1)
B	High-speed response type	(0.95 W) ○	—
K Note 2)	High-pressure type (1.0 MPa)	(0.95 W) ○	—
N Note 3)	Negative common	○	—
R Note 3) Note 5)	External pilot	○	○

CE-compliant

Nil	—
Q	CE-compliant

Note) For CE-compliant models, DC-type only.

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)
D	Slide locking type (Manual)

Light/Surge voltage suppressor

Nil	Yes
E Note)	None (Non-polar)

Note) A combination of "Function [N] (Negative common)" and [E] is unavailable. Since [E] has no polarity, it can also be used as a negative common. Selection of "Function [N]" is not required.

Coil voltage

		CE-compliant
1	100 VAC (50/60 Hz)	—
3	110 VAC (50/60 Hz)	—
5	24 VDC	●
6	12 VDC	●

⚠Caution

Use the standard (DC) specification when continuously energizing for long periods of time.

Note 1) Refer to page 381 for power consumption of AC type.
Note 2) Metal seal only
Note 3) Refer to "Semi-standard" on pages 419 and 420 for external pilot and negative common specifications.
Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.
Note 5) Dual 3-port valve is not applicable.

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

Flat ribbon cable kit with cable (3 m)
VV5Q11-09C6PU2 ··· 1 set–Manifold base part no.
∗**VQ1100-51** ····· **2 sets–Valve part no. (Stations 1 to 2)**
∗**VQ1200-51** ····· **4 sets–Valve part no. (Stations 3 to 6)**
∗**VQ1300-51** ····· **2 sets–Valve part no. (Stations 7 to 8)**
∗**VVQ1000-10A-1** ···· **1 set–Blanking plate part no. (Station 9)**


Prefix the asterisk to the part nos. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side.
When part nos. written collectively are complicated, specify them by means of the manifold specification sheet.

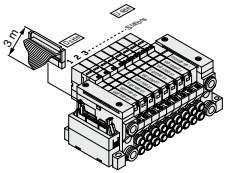

VV5Q11

< >: AC
The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-PS].

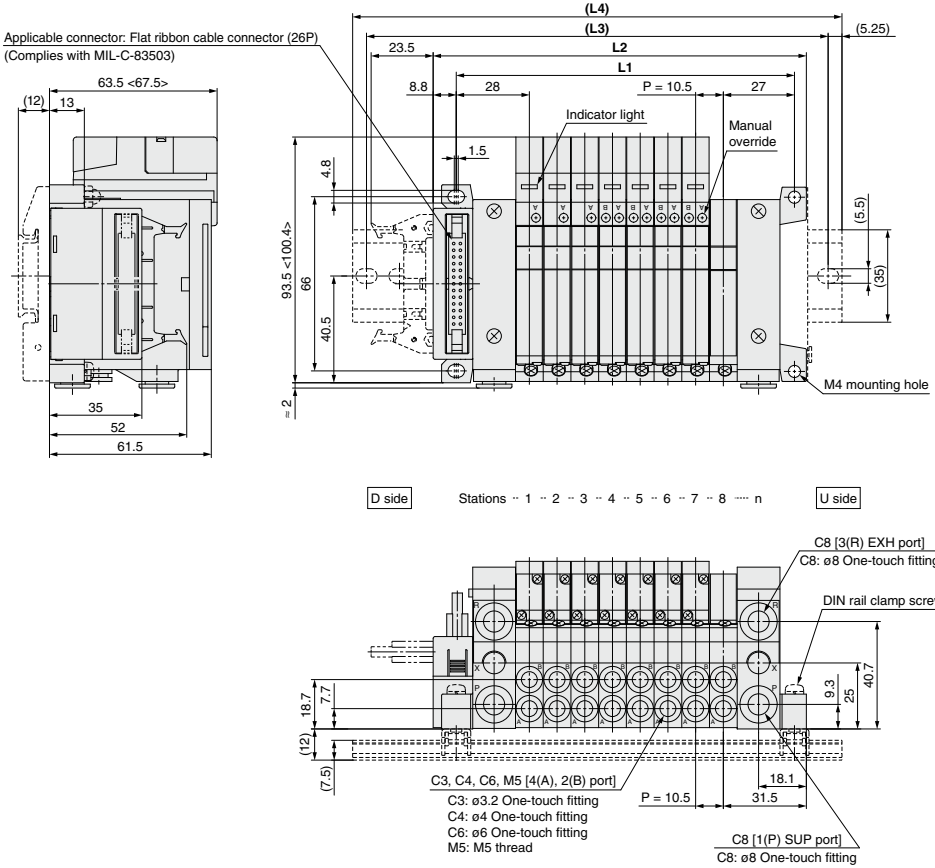

Dimensions


Formula L1 = 10.5n + 44.5, L2 = 10.5n + 57.5 n: Station (Maximum 24 stations)

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5	223	233.5	244	254.5	265	275.5	286	296.5
L2	78.5	89	99.5	110	120.5	131	141.5	152	162.5	173	183.5	194	204.5	215	225.5	236	246.5	257	267.5	278	288.5	299	309.5
(L3)	112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5
(L4)	123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348

With ejector unit: Formula L1 = 10.5n + 28.7 + (Number of ejector units x 26.7)
L2 = 10.5n + 41.3 + (Number of ejector units x 26.7)
L4 is L2 plus about 30.

VV5Q21

< >: AC
The dashed lines indicate the DIN rail mounting [-D] and the side entry connection [-PS].

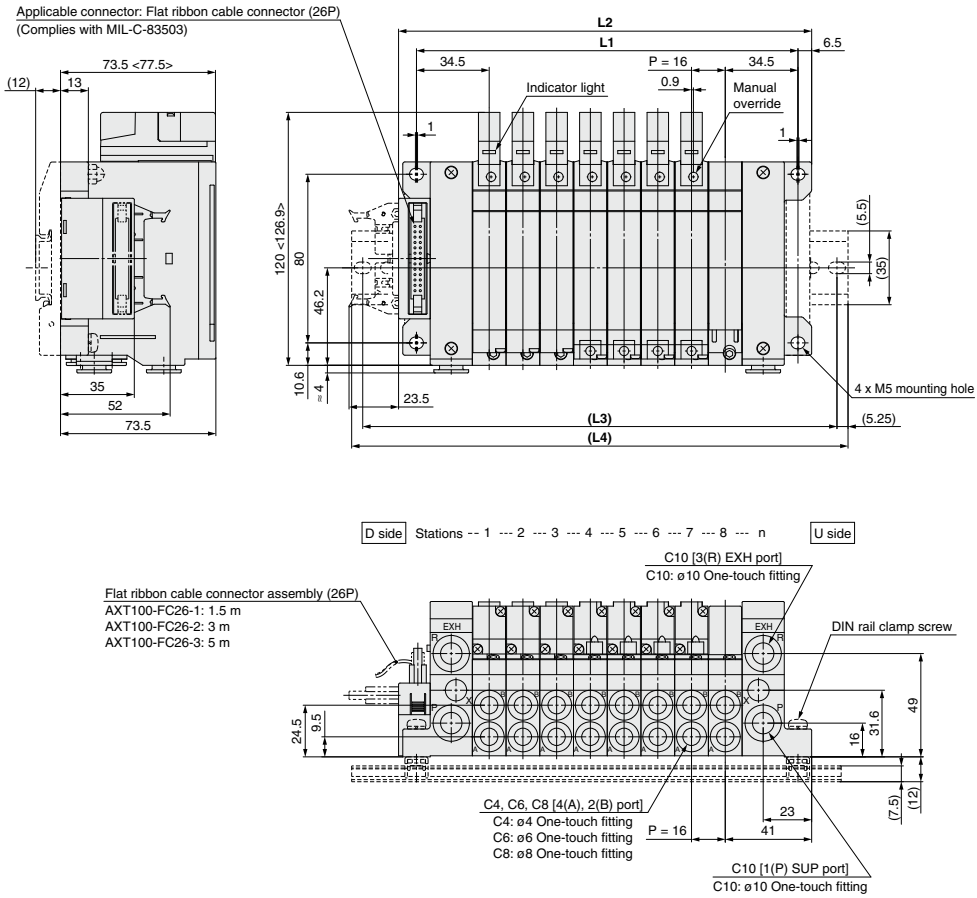


Dimensions


Formula L1 = 16n + 53, L2 = 16n + 68 n: Station (Maximum 24 stations)

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309	325	341	357	373	389	405	421	437
L2	100	116	132	148	164	180	196	212	228	244	260	276	292	308	324	340	356	372	388	404	420	436	452
(L3)	125	150	162.5	175	187.5	212.5	225	237.5	262.5	275	287.5	300	312.5	337.5	350	362.5	387.5	400	412.5	425	450	462.5	475
(L4)	135.5	160.5	173	185.5	198	223	235.5	248	273	285.5	298	310.5	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5

T VQ1000/2000 Series
Kit (Terminal block box)

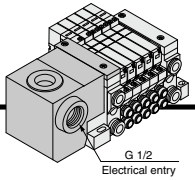

VV5Q11

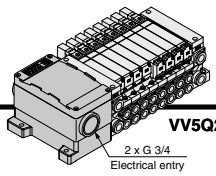


VV5Q21

IP65 compliant

- **This kit has a small terminal block inside a junction box. The electrical entry port {VQ1000: G 1/2, VQ2000: G 3/4} permits connection of conduit fittings.**
- **Maximum stations: 24 (VQ1000), 20 (VQ2000)**
- **Enclosure: Dust-tight, Water-jet-proof (IP65) compatible (VQ2000 series)**

Manifold Specifications

Series	Piping direction	Piping specifications: Port size 1(P), 3(R)	Piping specifications: Port size 4(A), 2(B)	Applicable stations
VQ1000	Side	C8	C3,C4,C6,M5	Max. 24 stations
VQ2000	Side	C10	C4,C6,C8	Max. 20 stations

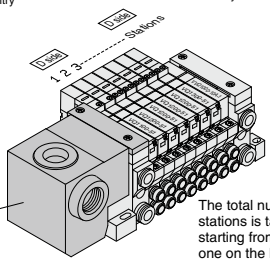


The total number of stations is tabulated starting from station one on the D-side.


Terminal Block Connection (VQ1000)

Open the terminal block cover to connect the wires to the terminal block.

Step 1. Removing the terminal block cover

Loosen the screws on the terminal block cover and open it in the direction shown by the arrow. The cover can then be removed from the terminal block.

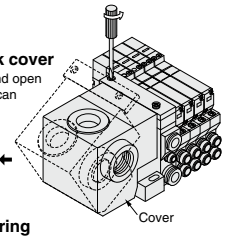

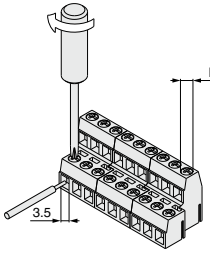


Step 2. Wiring

The diagram on the left shows the terminal block wiring schematic. All stations are provided with double solenoid wiring. Insert each lead wire into the terminal opening and tighten the screw directly above.


How to connect is inserting the lead wire into the terminal window, then tighten the screw on the top. (Tightening torque: 0.25 to 0.35 N·m)

Step 3. Mounting the terminal block cover

Hook groove (a) on shaft (b) and close the cover. Then tighten the screws.

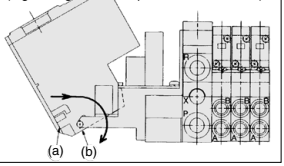

Electrical Wiring Specifications: VQ1000

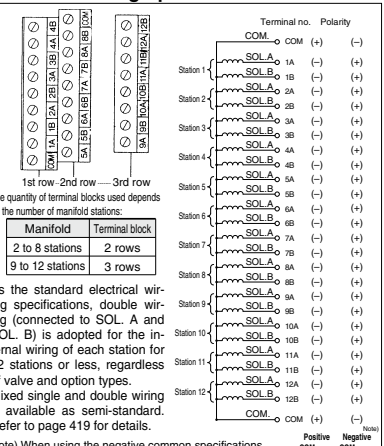

The quantity of terminal blocks used depends on the number of manifold stations:

Manifold	Terminal block
2 to 8 stations	2 rows
9 to 12 stations	3 rows

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types.
Mixed single and double wiring is available as semi-standard. Refer to page 419 for details.

Note) When using the negative common specifications, use valves for negative common.
Refer to "Semi-standard" on page 419 for details.

Note) For CE-compliant models, DC-type only.

CE [Option]

How to Order Manifold

VV5Q 1 1 – 08 C6 T 0 – □ – □

Series

1	VQ1000
2	VQ2000

Manifold

1	Plug-in unit

Stations

02	2 stations
⋮	⋮
24 Note 1)	24 stations

Note 1) VQ2000: Max. 20 stations Refer to page 419 for details.

∗ For negative common specifications of VQ1000 series, refer to "Semi-standard" on page 419. For VQ2000 series the standard manifold can be used.

Cylinder port

Symbol	Port size	VQ1000	VQ2000
C3 Note 1)	With ø3.2 One-touch fitting	●	—
C4 Note 1)	With ø4 One-touch fitting	●	●
C6 Note 1)	With ø6 One-touch fitting	●	●
C8 Note 1)	With ø8 One-touch fitting	—	●
M5	M5 thread	●	—
CM Note 2) Note 3)	Mixed sizes and with port plug	●	●
MM Note 4)	Mixed size for different types of piping, option installed	●	●

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.
Example) B6 (Bottom ported elbow with ø6 One-touch fitting)
Note 2) Indicate "LM" (Including upward, downward piping and mixed) for models with elbow fittings and mixed cylinder port sizes.
Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.
Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet.
Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 420 for details.

CE-compliant

Nil	—
Q	CE-compliant

Note) For CE-compliant models, DC-type only.

Option

Symbol	Option	VQ1000	VQ2000
Nil	None	●	●
B Note 2)	With back pressure check valve	●	●
D	DIN rail mounting	●	●
D0	With DIN rail bracket (Without DIN rail)	●	●
D□ Note 6)	DIN rail length specified (□: Stations 02 to 24)	●	●
G1 Note 4) Note 8)	1 set of regulator unit	●	—
G2 Note 4) Note 8)	2 sets of regulator unit		
G3 Note 4) Note 8)	3 sets of regulator unit		
J□ Note 5)	With ejector unit	●	—
K Note 6)	Special wiring spec. (Except double wiring)	●	●
N	With name plate	●	●
R Note 7)	External pilot	●	●
S	Direct EXH outlet with built-in silencer	●	●
W Note 9)	Enclosure: Dust-tight, Water-jet-proof (IP65)	—	●

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BRS
Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.
Note 3) The number of stations that may be displayed is longer than the manifold number of stations.
Note 4) Specify the mounting position by means of the manifold specification sheet.
Note 5) Refer to page 432 for details on with ejector unit. A combination of "J" and "N" is not available.
Note 6) Specify the wiring specifications by means of the manifold specification sheet.
Note 7) Indicate "R" for the valve with external pilot.
Note 8) G1, G2, or G3 cannot be combined with N.
Note 9) When used in combination with the direct EXH outlet with built-in silencer type, keep the exhaust port from coming into direct contact with water or other liquids.


SMC


● Terminal Block Wiring (VQ2000)

Open the terminal block cover to connect the wires to the terminal block.

Step 1. Removing the terminal block cover
Loosen mounting screws (4 pcs.) on the terminal block cover and remove the cover.

Step 2. Wiring
Loosen screws on the terminal block, connect wiring and complete it by tightening screws.(Tightening torque: 0.5 to 0.7 N·m)
The diagram on the right shows the terminal block wiring. All stations are provided with double wiring regardless of the valves which are mounted.

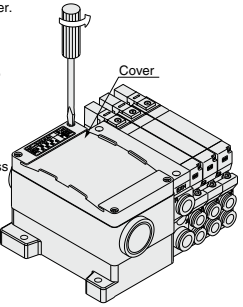


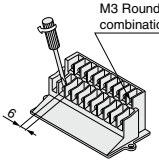

Applicable crimped terminal:
1.25-3S, 1.25Y-3,
1.25Y-3N, 1.25Y-3.5

Step 3. Mounting the terminal block cover
Securely tighten the screws after confirming that the gasket is installed correctly.
(Tightening torque: 0.7 to 1.2 N·m)


● Special Wiring Specifications: VQ2000

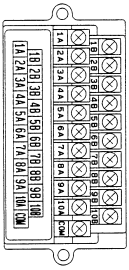

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 10 stations or less, regardless of valve and option types.
Mixed single and double wiring is available as semi-standard.
Refer to page 419 for details.

Note) When using the negative common specifications, use valves for negative common.

Refer to "Semi-standard" on page 419 for details.

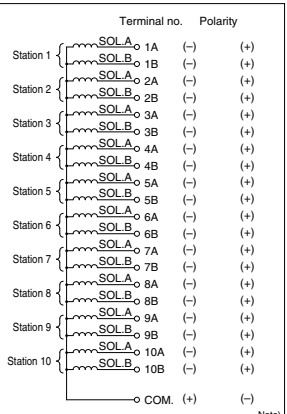

How to Order Valves

Note) For CE-compliant models, DC-type only. CE [Option]

VQ 1 1 0 0 – 5 1 –

Series

1	VQ1000
2	VQ2000

Type of actuation

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center
A	4-position dual port (N.C. +N.C.)
B	4-position dual port (N.O. +N.O.)
C	4-position dual port (N.C. +N.O.)

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W) ○	○ Note 1)
B	High-speed response type	(0.95 W) ○	—
K Note 2)	High-pressure type (1.0 MPa)	(0.95 W) ○	—
N Note 3)	Negative common	○	—
R Note 3) Note 5)	External pilot	○	○

Coil voltage

		CE-compliant
1	100 VAC (50/60 Hz)	—
3	110 VAC (50/60 Hz)	—
5	24 VDC	●
6	12 VDC	●

CE-compliant

Nil	—
Q	CE-compliant

Note) For CE-compliant models, DC-type only.

Enclosure

Nil	Dust-protected
W Note)	Dust-tight, Water-jet-proof (IP65)

Note) VQ2000 only

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)
D	Slide locking type (Manual)

Light/Surge voltage suppressor

Nil	Yes
E Note)	None

Note) A combination of "Function [N] (Negative common)" and [E] is unavailable. Since [E] has no polarity, it can also be used as a negative common. Selection of "Function [N]" is not required.

Note 1) Refer to page 381 for power consumption of AC type.
Note 2) Metal seal only
Note 3) Refer to "Semi-standard" on pages 419 and 420 for external pilot and negative common specifications.
Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.
Note 5) Dual 3-port valve is not applicable.

⚠Caution

Use the standard (DC) specification when continuously energizing for long periods of time.


How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>
Terminal block box kit
VV5Q11-08C6T0 ···1 set–Manifold base part no.
***VQ1100-51 ·····2 sets–Valve part no. (Stations 1 to 2)**
***VQ1200-51 ·····4 sets–Valve part no. (Stations 3 to 6)**
***VQ1300-51 ·····1 set–Valve part no. (Station 7)**
***VVQ1000-10A-1 ··1 set–Blanking plate part no. (Station 8)**


Prefix the asterisk to the part nos. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side. When part nos. written collectively are complicated, specify them by means of the manifold specification sheet.

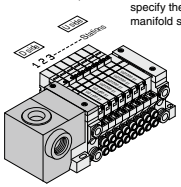

VV5Q11

< >: AC
The dashed lines and dimensions in parentheses indicate DIN rail mounting [-D].

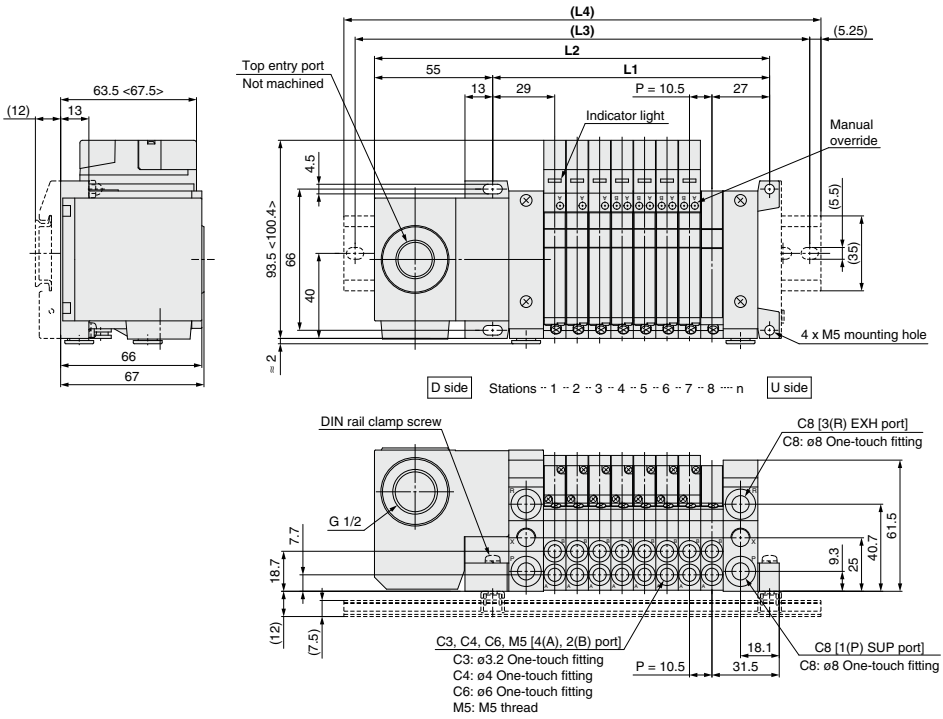

Dimensions


Formula L1 = 10.5n + 45.5, L2 = 10.5n + 105 n: Station (Maximum 24 stations)


L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	66.5	77	87.5	98	108.5	119	129.5	140	150.5	161	171.5	182	192.5	203	213.5	224	234.5	245	255.5	266	276.5	287	297.5
L2	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294	304.5	315	325.5	336	346.5	357
(L3)	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375	387.5
(L4)	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5	398


With ejector unit: Formula L1 = 10.5n + 29.7 + (Number of ejector units x 26.7)
L2 = 10.5n + 88.8 + (Number of ejector units x 26.7)
L4 is L2 plus about 30.


VV5Q21

< >: AC
The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

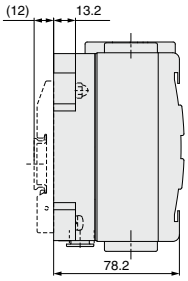

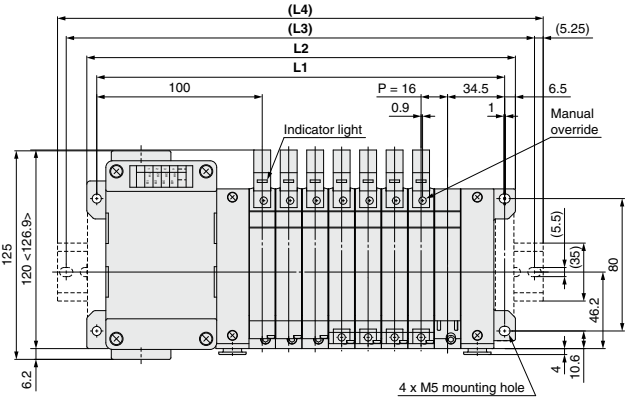

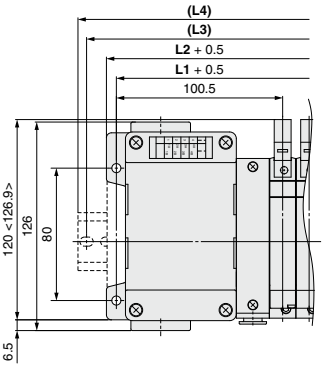

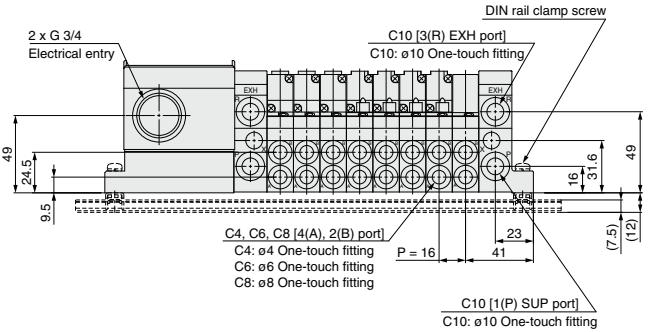


Dust-tight, Water-jet-proof


Dimensions

Formula L1 = 16n + 118.5, L2 = 16n + 131 n: Station (Maximum 20 stations)

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	150.5	166.5	182.5	198.5	214.5	230.5	246.5	262.5	278.5	294.5	310.5	326.5	342.5	358.5	374.5	390.5	406.5	422.5	438.5
L2	163	179	195	211	227	243	259	275	291	307	323	339	355	371	387	403	419	435	451
(L3)	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375	400	412.5	425	450	462.5	475
(L4)	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5	410.5	423	435.5	460.5	473	485.5

L VQ1000/2000 Series
Kit (Lead wire)

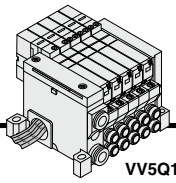
VV5Q11

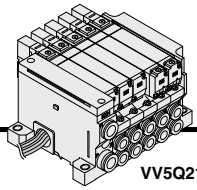

VV5Q21

IP65 compliant

- **Direct electrical entry. Models with one or more stations are available.**
- **(SUP) and (EXH) ports are provided on one side for further space savings.**
- **Maximum stations are 8.**
- **Enclosure: Dust-tight, Water-jet-proof (IP65) compatible (VQ2000 series)**

Wiring Specifications: Positive COM ●

Three lead wires are attached to each station regardless of the type of valve which is mounted.
The red wire is for COM connection.

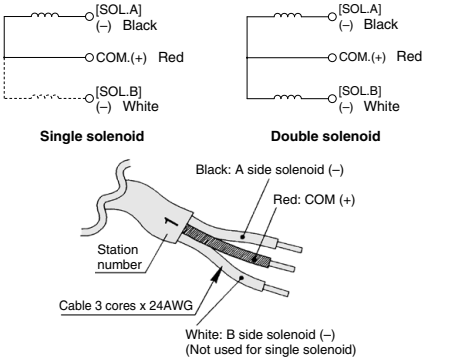

Use any of the below cable lead wire assembly to change the lead wire length:


Lead wire assembly with connector

Lead wire length	Part no.
0.6 m	VVQ1000-84A-6-✻
1.5 m	VVQ1000-84A-15-✻
3 m	VVQ1000-84A-30-✻


✻ Station number 1 to 8

Manifold Specifications

Series	Piping specifications			Applicable stations
	Piping direction	Port size		
		1(P), 3(R)	4(A), 2(B)	
VQ1000	Side	C8	C3, C4, C6, M5	Max. 8 stations
VQ2000	Side	C10	C6, C8	Max. 8 stations

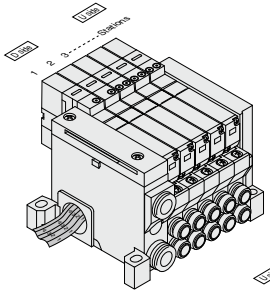

VV5Q11

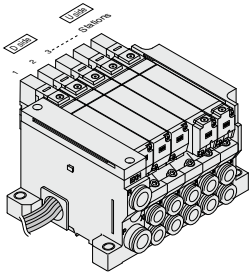

VV5Q21

The total number of stations is tabulated on the D-side.

Note) For CE-compliant models, DC-type only. CE [Option]

How to Order Manifold

VV5Q 1 1 – 06 C6 L 1 – □ – □

Series

1	VQ1000
2	VQ2000

Manifold

1	Plug-in unit

Stations

01	1 station
⋮	⋮
08	8 stations

Note) For negative common specifications, refer to "Semi-standard" on page 419.

Cylinder port

Symbol	Port size	VQ1000	VQ2000
C3 Note 1)	With ø3.2 One-touch fitting	●	—
C4 Note 1)	With ø4 One-touch fitting	●	●
C6 Note 1)	With ø6 One-touch fitting	●	●
C8 Note 1)	With ø8 One-touch fitting	—	●
M5	M5 thread	●	—
CM Note 2) Note 3)	Mixed sizes and with port plug	●	●
MM Note 4)	Mixed size for different types of piping, option installed	●	●

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.
Example) B6 (Bottom ported elbow with ø6 One-touch fitting)
Note 2) Indicate "LM" (Including upward, downward piping and mixed) for models with elbow fittings and mixed cylinder port sizes.
Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.
Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet.
Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 420 for details.

Cable (Length)

0	Cable length 0.6 m
1	Cable length 1.5 m
2	Cable length 3 m

CE-compliant

Nil	—
Q	CE-compliant


Note) For CE- compliant models, DC-type only.

Option

Symbol	Option	VQ1000	VQ2000
Nil	None	●	●
2 Note 8)	200/220 VAC models (F/L kit only)	●	●
B Note 2)	With back pressure check valve	●	●
D	DIN rail mounting	●	●
D0	With DIN rail bracket (Without DIN rail)	●	●
D□ Note 3)	DIN rail length specified (□: Stations 02 to 24)	●	●
G1 Note 4) Note 7)	1 set of regulator unit	●	—
G2 Note 4) Note 7)	2 sets of regulator unit	●	—
G3 Note 4) Note 7)	3 sets of regulator unit	●	—
J□ Note 5)	With ejector unit	●	—
N	With name plate	●	●
R Note 6)	External pilot	●	●
S	Direct EXH outlet with built-in silencer	●	●
W Note 8) Note 9)	Enclosure: Dust-tight, Water-jet-proof (IP65)	●	●

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BRS
Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.
Note 3) The number of stations that may be displayed is longer than the manifold number of stations.
Note 4) Specify the mounting position by means of the manifold specification sheet.
Note 5) Refer to page 432 for details on with ejector unit. A combination of "J" and "N" is not available.
Note 6) Indicate "R" for the valve with external pilot.
Note 7) G1, G2, or G3 cannot be combined with N.
Note 8) A combination of "2" and "W" is unavailable. When the compatibility with IP65 of the 200 and 220 VAC specifications is required, select only "W".
Note 9) When used in combination with the direct EXH outlet with built-in silencer type, keep the exhaust port from coming into direct contact with water or other liquids.


SMC

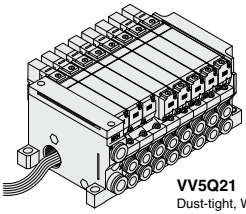


VV5Q21
Dust-tight, Water-jet-proof

● Wiring Specifications: Negative COM (Semi-standard)

Three lead wires are attached to each station regardless of the type of valve which is mounted.
The black wire is for COM connection.

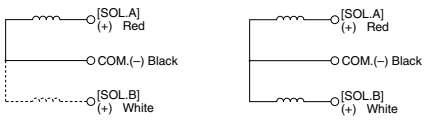

Single solenoid **Double solenoid**

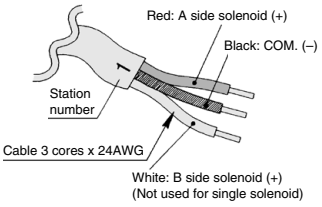

Lead wire assembly with connector

Lead wire length	Part no.
0.6 m	VVQ1000-84AN-6-✻
1.5 m	VVQ1000-84AN-15-✻
3 m	VVQ1000-84AN-30-✻

✻ Station number 1 to 8

Note) When using the negative common specifications, use valves for negative common. For negative common specifications, refer to "Semi-standard" on page 419.

How to Order Valves

Note) For CE-compliant models, DC-type only. CE [Option]

VQ 1 1 0 0 □ – 5 □ □ □ 1 – □

Series

1	VQ1000
2	VQ2000

Seal

0	Metal seal
1	Rubber seal

Type of actuation

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center
A	4-position dual port (N.C. +N.C.)
B	4-position dual port (N.O. +N.O.)
C	4-position dual port (N.C. +N.O.)

Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W) ○	○ Note 1)
B	High-speed response type	(0.95 W) ○	—
K Note 2)	High-pressure type (1.0 MPa)	(0.95 W) ○	—
N Note 3)	Negative common	○	—
R Note 3) Note 5)	External pilot	○	○

CE-compliant

Nil	—
Q	CE-compliant

Note) For CE-compliant models, DC-type only.

Enclosure

Nil	Dust-protected
W Note)	Dust-tight, Water-jet-proof (IP65)

Note) VQ2000 only

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)
D	Slide locking type (Manual)

Light/Surge voltage suppressor

Nil	Yes
E Note)	None (Non-polar)

Note) A combination of "Function [N] (Negative common)" and [E] is unavailable.
Since [E] has no polarity, it can also be used as a negative common. Selection of "Function [N]" is not required.

Coil voltage

		CE-compliant
1	100 VAC (50/60 Hz)	—
2	200 VAC (50/60 Hz)	—
3	110 VAC (50/60 Hz)	—
4	220 VAC (50/60 Hz)	—
5	24 VDC	●
6	12 VDC	●

Note 1) Refer to page 381 for power consumption of AC type.
Note 2) Metal seal only
Note 3) For external pilot and negative common specifications, refer to "Semi-standard" on pages 419 and 420.
Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.
Note 5) Dual 3-port valve is not applicable.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.


<Example>

Lead wire kit with cable (3 m)

VV5Q11-06C6L2 ···**1 set–Manifold base part no.**
✻**VQ1100-51** ·····**2 sets–Valve part no. (Stations 1 to 2)**
✻**VQ1200-51** ·····**2 sets–Valve part no. (Stations 3 to 4)**
✻**VQ1300-51** ·····**1 set–Valve part no. (Station 5)**
✻**VVQ1000-10A-1** ··**1 set–Blanking plate part no. (Station 6)**

Prefix the asterisk to the part nos. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side. When part nos. written collectively are complicated, specify them by means of the manifold specification sheet.

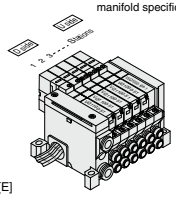



⚠Caution

Use the standard (DC) specification when continuously energizing for long periods of time.

VV5Q11

< >: AC
The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

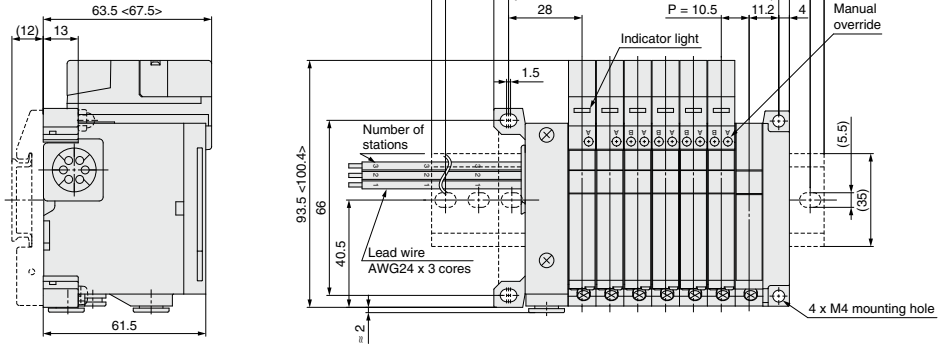

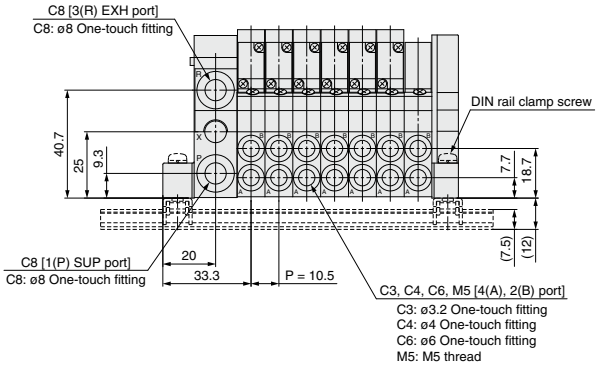

Formula L1 = 10.5n + 28.5, L2 = 10.5n + 38
n: Station (Maximum 8 stations)


Dimensions


L \ n	1	2	3	4	5	6	7	8
L1	39	49.5	60	70.5	81	91.5	102	112.5
L2	48.5	59	69.5	80	90.5	101	111.5	122
(L3)	75	87.5	87.5	100	112.5	125	137.5	150
(L4)	85.5	98	98	110.5	123	135.5	148	160.5

With ejector unit: Formula L1 = 10.5n + 28.5 + (Number of ejector units x 26.7)
L2 = 10.5n + 38 + (Number of ejector units x 26.7)
L4 is L2 plus about 30.

VV5Q21

< >: AC
The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

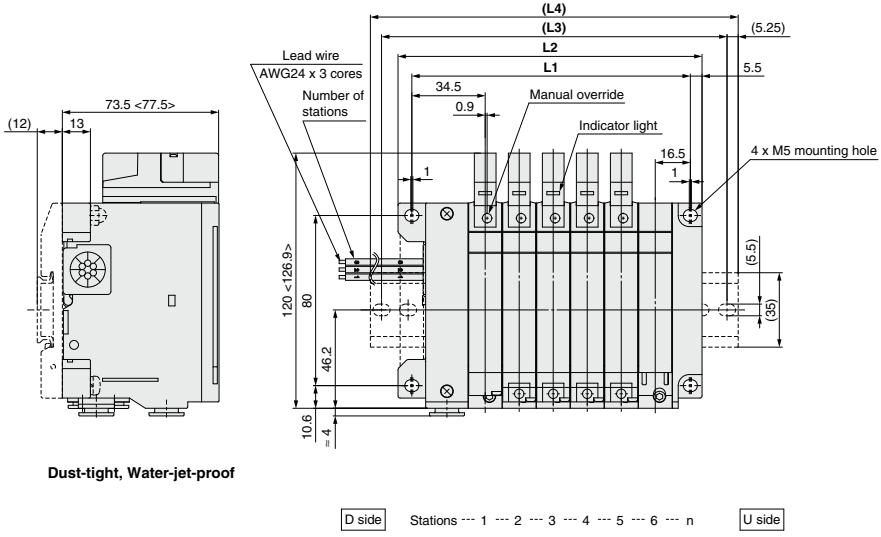

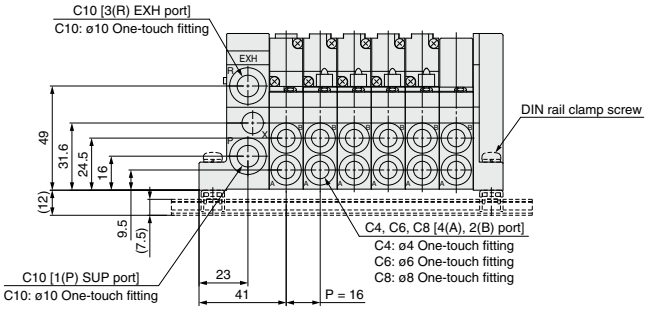


Formula L1 = 16n + 35, L2 = 16n + 47
n: Station (Maximum 8 stations)

Dimensions

L \ n	1	2	3	4	5	6	7	8
L1	51	67	83	99	115	131	147	163
L2	63	79	95	111	127	143	159	175
(L3)	87.5	100	125	137.5	150	162.5	184.5	200
(L4)	98	110.5	135.5	148	160.5	173	198	210.5

S VQ1000/2000 Series

Kit (Serial transmission) Base Mounted Plug-in Manifold: For EX510 Gateway-type Serial Transmission System

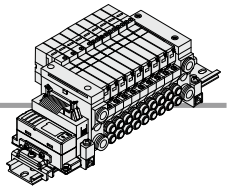

How to Order Manifold

CE [Option]

VV5Q 1 1 – SB ☐ 08 ☐ – D – ☐

Manifold series

1	VQ1000
2	VQ2000

SI unit specifications

Nil	NPN output (+COM.)
N	PNP output (–COM.)

Valve stations

Symbol	Stations
01	1 station
⋮	⋮
08	8 stations

Note) Max. 16 stations. (Special wiring specifications)

SI unit part no.

Symbol	SI unit specifications	SI unit part no.
Nil	NPN output (+COM.)	EX510-S002A
N	PNP output (–COM.)	EX510-S102A

CE-compliant

Nil	—
Q	CE-compliant

Option

B Note 3)	With back pressure check valve
D Note 1)	DIN rail mounting
D☐ Note 9)	DIN rail length specified (☐: Stations 02 to 16)
G1 Note 4) Note 8) Note 10)	1 set of regulator unit
G2 Note 4) Note 8) Note 10)	2 sets of regulator unit
G3 Note 4) Note 8) Note 10)	3 sets of regulator unit
J☐ Note 5) Note 8)	With ejector unit
K Note 6)	Special wiring spec. (Except double wiring)
N	With name plate
R Note 7)	with external pilot
S	Direct EXH outlet with built-in silencer

Cylinder port

Symbol		Port size	VQ1000	VQ2000
Metric size	C3	With ø3.2 One-touch fitting	●	—
	C4	With ø4 One-touch fitting	●	●
	C6	With ø6 One-touch fitting	●	●
	C8	With ø8 One-touch fitting	—	●
	M5	M5 thread	●	—
	CM Note 1)	With mixed sizes and with port plug	●	●
	L3	Top ported elbow with ø3.2 One-touch fitting	●	—
	L4	Top ported elbow with ø4 One-touch fitting	●	●
	L6	Top ported elbow with ø6 One-touch fitting	●	●
	L8	Top ported elbow with ø8 One-touch fitting	—	●
	L5	Top ported elbow M5 thread	●	—
	B3	Bottom ported elbow with ø3.2 One-touch fitting	●	—
	B4	Bottom ported elbow with ø4 One-touch fitting	●	●
	B6	Bottom ported elbow with ø6 One-touch fitting	●	●
	B8	Bottom ported elbow with ø8 One-touch fitting	—	●
	B5	Bottom ported elbow M5 thread	●	—
	LM Note 1)	Elbow port, mixed sizes (Including upward, downward piping and mixed)	●	●
Inch size	N1	ø1/8" with One-touch fitting	●	—
	N3	ø5/32" with One-touch fitting	●	●
	N7	ø1/4" with One-touch fitting	●	●
	N9	ø5/16" with One-touch fitting	—	●
	M5T	UNF10-32 thread	●	—
	NM Note 1)	With mixed sizes and with port plug	●	●
	LN1	Top ported elbow with ø1/8" One-touch fitting	●	—
	LN3	Top ported elbow with ø5/32" One-touch fitting	●	●
	LN7	Top ported elbow with ø1/4" One-touch fitting	●	●
	LN9	Top ported elbow with ø5/16" One-touch fitting	—	●
	L5T	Top ported elbow UNF10-32 thread	●	—
	BN1	Bottom ported elbow with ø1/8" One-touch fitting	●	—
	BN3	Bottom ported elbow with ø5/32" One-touch fitting	●	●
	BN7	Bottom ported elbow with ø1/4" One-touch fitting	●	●
	BN9	Bottom ported elbow with ø5/16" One-touch fitting	—	●
	B5T	Bottom ported elbow UNF10-32 thread	●	—
	LNM Note 1)	Elbow port, mixed sizes (Including upward, downward piping and mixed)	●	●
MM Note 2)		Mixed size for different types of piping, option installed	●	●


Note 1) Indicate "Mixed sizes and with port plug" in the manifold specification sheet.
Note 2) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet.

Refer to Best Pneumatics No. 1-1 and the Operation Manual for the details of EX510 Gateway-type Serial Transmission System. Please download the Operation Manual via our website, http://www.smcworld.com

Note 1) Be sure to select "D" or "D☐".
Note 2) When two or more symbols are specified, indicate them alphabetically. Example) -BRS
Note 3) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.
Note 4) Specify the mounting position by means of the manifold specification sheet.
Note 5) Refer to page 432 for details on with ejector unit. A combination of "J" and "N" is not available.
Note 6) Specify the wiring specifications by means of the manifold specification sheet.
Note 7) Indicate "R" for the valve with external pilot.
Note 8) VQ1000 only
Note 9) The number of stations that may be displayed is longer than the manifold number of stations.
Note 10) G1, G2, or G3 cannot be combined with N.

How to Order Manifold Assembly

Example

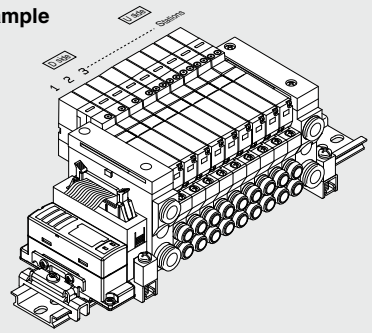

VV5Q11-SB08C6-D ··· 1 set (SB kit, 8-station manifold part no.)
✻VQ1100-51 ····· 4 sets (Single type part no.)
✻VQ1200-51 ····· 3 sets (Double type part no.)
✻VQ1300-51 ····· 1 set (3 position type part no.)
→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.
→ Enter in order starting from the first station on the D-side.

Add the valve and option part numbers under the manifold base part number. In the case of complex arrangement, specify them by means of the manifold specification sheet.

CE [Option]

How to Order Valves

VQ 1 1 0 0 ☐ – 5 ☐ 1 – ☐

Series

1	VQ1000
2	VQ2000

Type of actuation

1	2-position single	
2	Metal	2-position double
	Rubber	2-position double
3	3-position closed center	
4	3-position exhaust center	
5	3-position pressure center	
A Note)	4-position dual 3-port valve (A)	
B Note)	4-position dual 3-port valve (B)	
C Note)	4-position dual 3-port valve (C)	

Note) Rubber seal only

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications
Nil	Standard (0.4 W)
B	High-speed response type (0.95 W)
K Note 1)	High-pressure type (1.0 MPa) [0.95 W]
N Note 2)	Negative common
R Note 2) Note 4)	External pilot

Note 1) Metal seal only
Note 2) For external pilot and negative common specifications, refer to "Semi-standard" on pages 419 and 420.
Note 3) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.
Note 4) Dual 3-port valve is not applicable.

Rated voltage

5	24 VDC

Manual override

Nil: Non-locking push type (Tool required)




B: Locking type (Tool reguired)



C: Locking type (Manual)




D: Slide locking type (Manual)




CE-compliant

Nil	—
Q	CE-compliant

VV5Q11

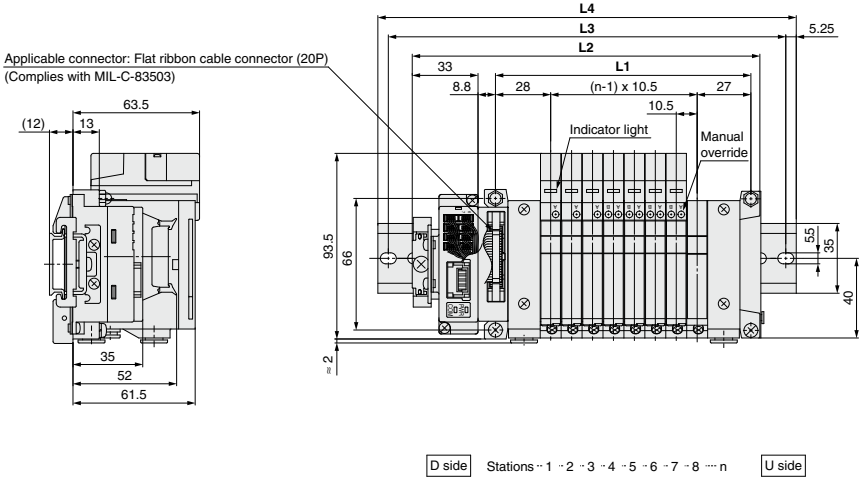

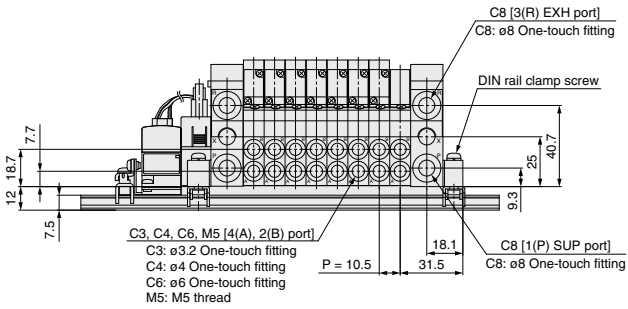



Dimensions

Formula L1 = 10.5n + 44.5, L2 = 10.5n + 91 n: Station (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	55	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5
L2	101.5	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259
L3	125	137.5	150	162.5	175	175	187.5	200	212.5	225	237.5	237.5	250	262.5	275	287.5
L4	135.5	148	160.5	173	185.5	185.5	198	210.5	223	235.5	248	248	260.5	273	285.5	298

VV5Q21

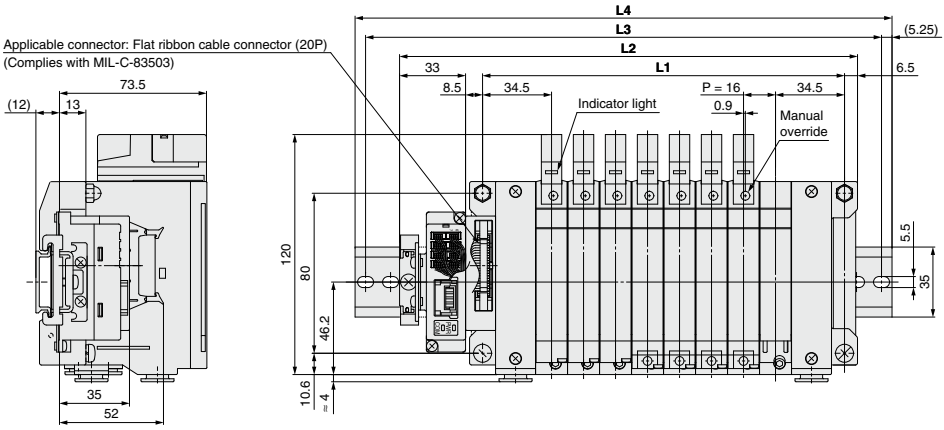

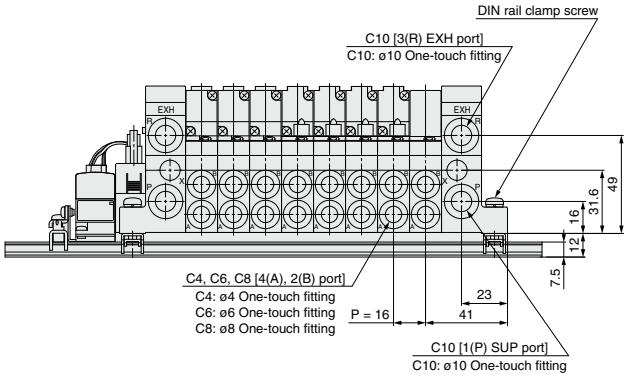

Dimensions

Formula L1 = 16n + 53, L2 = 16n + 101 n: Station (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	69	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309
L2	117	133	149	165	181	197	213	229	245	261	277	293	309	325	341	357
L3	137.5	162.5	175	187.5	212.5	225	237.5	250	275	287.5	300	312.5	337.5	350	362.5	387.5
L4	148	173	185.5	198	223	235.5	248	260.5	285.5	298	310.5	323	348	360.5	373	398

S VQ1000/2000 Series

Kit (Serial transmission): For EX120/124 Integrated-type (For Output) Serial Transmission System

IP65 compliant

- **The serial transmission system reduces wiring work, while minimizing wiring and saving space.**
- **Enclosure: Dust-tight, Water-jet-proof (IP65) compatible (VQ2000 series)**

Manifold Specifications

Series	Piping specifications			Applicable stations
	Piping direction	Port size		
		1(P), 3(R)	4(A), 2(B)	
VQ1000	Side	C8	C3, C4, C6, M5	Max. 16 stations
VQ2000	Side	C10	C4, C6, C8	Max. 16 stations

How to Order Manifold

CE [Option]

VV5Q 1 1 – 08 C6 S V – □ – □

Series

1	VQ1000
2	VQ2000

Manifold

1	Plug-in unit

Stations

02	2 stations
⋮	⋮
16 Note)	16 stations

Note 1) Refer to page 419 for details.
Note 2) Max. 16 stations. (Specify a model with 9 to 16 stations by means of the manifold specification sheet.)

SI unit specifications

Symbol	Protocol	Stations
0	Without SI unit	Max.16 stations
Q	DeviceNet® System (16 outputs)	
R1	OMRON Corp.: CompoBus/S (16 outputs)	
R2	OMRON Corp.: CompoBus/S (8 outputs)	Max. 8 stations
V	CC-LINK (16 outputs)	Max.16 stations
ZB Note)	CompoNet® (16 outputs) (Positive common)	
ZBN Note)	CompoNet® (16 outputs) (Negative common)	

Note) Communication connector (for the opposite side) is not provided, order it separately.

CE-compliant

Nil	—
Q	CE-compliant

Option

Symbol	Option	VQ1000	VQ2000
Nil	None	●	●
B Note 2)	With back pressure check valve	●	●
D	DIN rail mounting	●	●
D0	With DIN rail bracket (Without DIN rail)	●	●
D□ Note 3)	DIN rail mounting (□: Stations 02 to 24)	●	●
G1 Note 4) Note 9)	1 set of regulator unit	●	—
G2 Note 4) Note 9)	2 sets of regulator unit		
G3 Note 4) Note 9)	3 sets of regulator unit		
J□ Note 5)	With ejector unit	●	—
K Note 6)	Special wiring specifications (Except double wiring)	●	●
N	With name plate	●	●
R Note 7)	With external pilot	●	●
S	Direct EXH outlet with built-in silencer	●	●
W Note 8) Note 10)	Enclosure: Dust-tight, Water-jet-proof (IP65)	—	●

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BRS.
Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.
Note 3) The number of stations that may be displayed is longer than the manifold number of stations.
Note 4) Specify the mounting position by means of the manifold specification sheet.
Note 5) Refer to page 432 for details on with vacuum ejector unit. A combination of "J" and "N" is not available.
Note 6) Specify the wiring specifications by means of the manifold specification sheet.
Note 7) Indicate "R" for the valve with external pilot.
Note 8) Refer to "Dimensions" on page 413 for SI unit and valve, in case of W (Dust-tight, Water-jet-proof).
Note 9) G1, G2, or G3 cannot be combined with N.
Note 10) When used in combination with the direct EXH outlet with built-in silencer type, keep the exhaust port from coming into direct contact with water or other liquids.

Cylinder port

Symbol	Port size	VQ1000	VQ2000
C3 Note 1)	With ø3.2 One-touch fitting	●	—
C4 Note 1)	With ø4 One-touch fitting	●	●
C6 Note 1)	With ø6 One-touch fitting	●	●
C8 Note 1)	With ø8 One-touch fitting	—	●
M5	M5 thread	●	—
CM Note 2) Note 3)	Mixed sizes and with port plug	●	●
MM Note 4)	Mixed size for different types of piping, option installed	●	●

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type.
Example) B6 (Bottom ported elbow with ø6 One-touch fitting)
Note 2) Indicate as "LM" (Including upward, downward piping and mixed) for models with elbow fittings and mixed cylinder port sizes.
Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.
Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet.
Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 420 for details.


SI Unit Part No. (Without option W)

Symbol	Protocol	SI unit part no.
Q	DeviceNet® (16 outputs)	Standard: EX120-SDN1 Dust-protected: No part no.
R1	OMRON Corp.: CompoBus/S (16 outputs)	Standard: EX120-SCS1
R2	OMRON Corp.: CompoBus/S (8 outputs)	Standard: EX120-SCS2
V	CC-LINK (16 outputs)	Standard: EX120-SMJ1
ZB	CompoNet® (16 outputs) (Positive common)	Standard: EX120-SCM1 Dust-protected: No part no.
ZBN	CompoNet® (16 outputs) (Negative common)	Standard: EX120-SCM3 Dust-protected: No part no.


SI Unit Part No. (With option W)

Symbol	Protocol	SI unit part no.
Q	DeviceNet® System (16 outputs)	EX124D-SDN1
R1	OMRON Corp.: CompoBus/S (16 outputs)	EX124D-SCS1
R2	OMRON Corp.: CompoBus/S (8 outputs)	EX124D-SCS2
V	CC-LINK (16 outputs)	EX124D-SMJ1


Refer to Best Pneumatics No. 1-1 and the Operation Manual for the details of EX120/124 Integrated-type (for Output) Serial Transmission System. Please download the Operation Manual via our website, http://www.smcworld.com

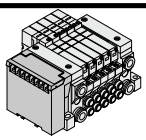

VV5Q11

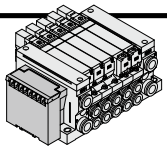

VV5Q21

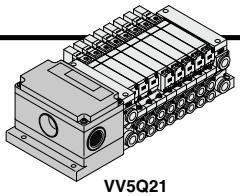

VV5Q21
Dust-tight, Water-jet-proof (**-W**)

[Option]

How to Order Valves

VQ 1 1 0 0 – 5 1 –

Series

1	VQ1000
2	VQ2000

Type of actuation

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center
A	4-position dual port (N.C. +N.C.)
B	4-position dual port (N.O. +N.O.)
C	4-position dual port (N.C. +N.O.)

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications	DC
Nil	Standard	(0.4 W) ○
B	High-speed response type	(0.95 W) ○
K Note 1)	High-pressure type (1.0 MPa)	(0.95 W) ○
N Note 2)	Negative common	○
R Note 2) Note 4)	External pilot	○

Note 1) Metal seal only
Note 2) For external pilot and negative common specifications, refer to "Semi-standard" on pages 419 and 420.
Note 3) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.
Note 4) Dual 3-port valve is not applicable.

Coil voltage

5	24 VDC; With indicator light/ surge voltage suppressor

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)
D	Slide locking type (Manual)

Enclosure

Nil	Dust-protected
W Note)	Dust-tight, Water-jet-proof (IP65)

Note) VQ2000 only

CE-compliant

Nil	—
Q	CE-compliant

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

VV5Q11-08C6SV ··· 1 set–Manifold base part no.
***VQ1100-51 ····· 2 sets–Valve part no. (Stations 1 to 2)**
***VQ1200-51 ····· 4 sets–Valve part no. (Stations 3 to 6)**
***VQ1300-51 ····· 1 set–Valve part no. (Station 7)**
***VVQ1000-10A-1 ·· 1 set–Blanking plate part no. (Station 8)**


Prefix the asterisk to the part nos. of the solenoid valve, etc.

Write sequentially from the 1st station on the D-side. When part nos. written collectively are complicated, specify them by means of the manifold specification sheet.

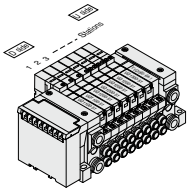

VV5Q11

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

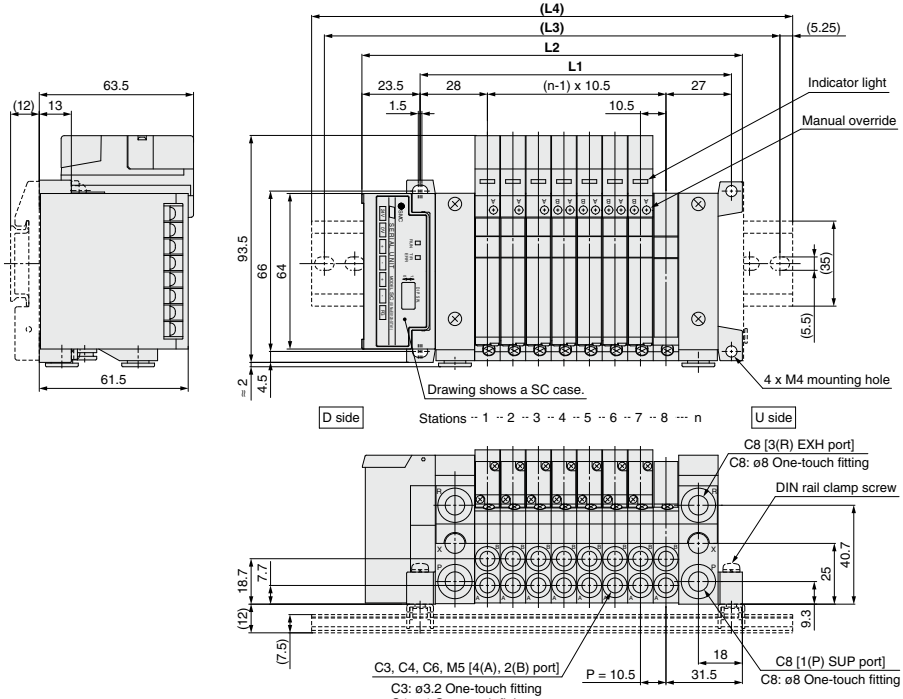

With ejector unit: Formula
L1 = 10.5n + 28.7 + (Number of ejector units x 26.7)
L2 = 10.5n + 56.3 + (Number of ejector units x 26.7)
L4 is L2 plus about 30.


Dimensions

Formula L1 = 10.5n + 44.5, L2 = 10.5n + 72.5 n: Station (Maximum 16 stations)


L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5
L2	93.5	104	114.5	125	135.5	146	156.5	167	177.5	188	198.5	209	219.5	230	240.5
(L3)	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5
(L4)	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273

VV5Q21

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).
Note) In the case of EX124D-SMJ1, this dimension becomes 85.

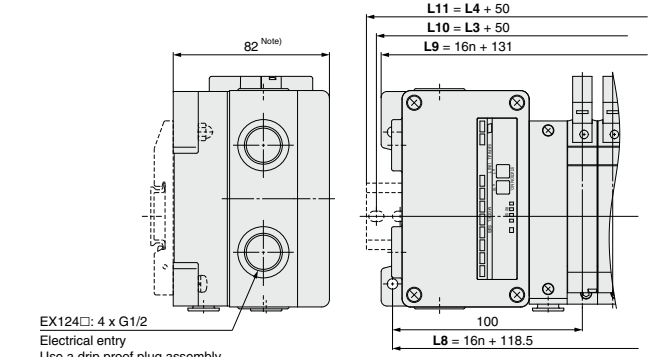

Dust-tight, Water-jet-proof (IP65) SI unit
(EX124 Integrated-type (output) serial transmission system)

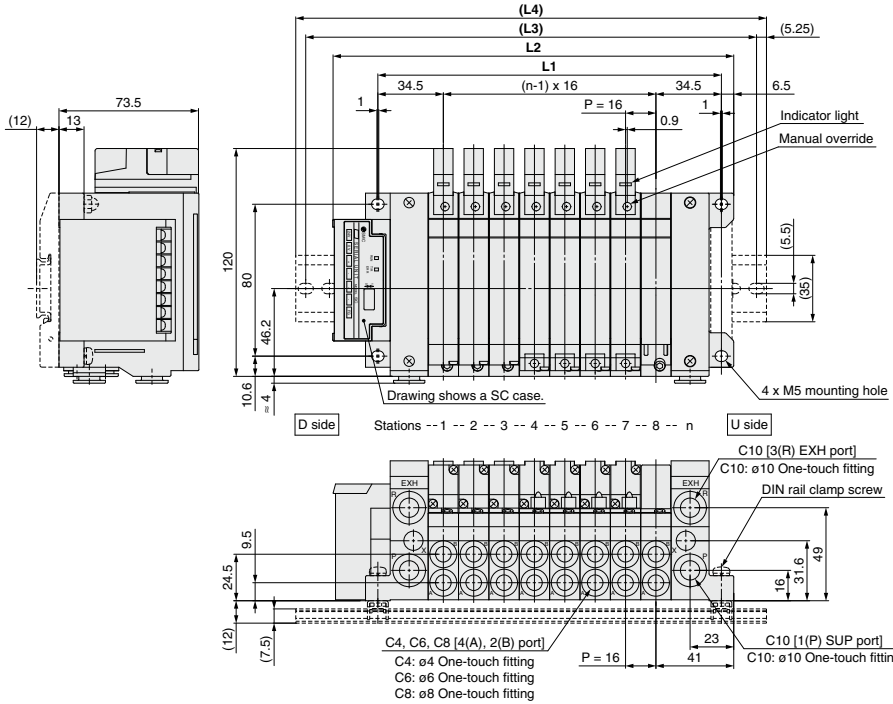


Dust-tight, Water-jet-proof SI unit: L8 = 16n + 118.5, L9 = 16n + 131
L10 = L3 + 50, L11 = L4 + 50

Dimensions

Formula L1 = 16n + 53, L2 = 16n + 83 n: Station (Maximum 16 stations)

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309
L2	115	131	147	163	179	195	211	227	243	259	275	291	307	323	339
(L3)	137.5	162.5	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
(L4)	148	173	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373

M VQ2000 Series
Kit (Circular connector)

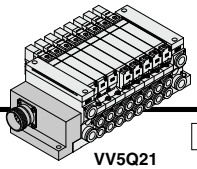
VV5Q21

VQ2000 only

- **MIL flat cable connector reduces installation labor for electrical connection.**
- **Manifold and connectors, both compliant with the IP65 rating (Dust-tight, Water-jet-proof), provide a high-degree of protection for the electrical parts. (When selecting option W)**
- **Maximum stations are 24.**

Manifold Specifications


Series	Piping specifications			Applicable stations
	Piping direction	Port size		
		1(P), 3(R)	4(A), 2(B)	
VQ2000	Side	C10	C4, C6, M8	Max. 24 stations

Circular Connector (26 Pins)

Cable Assembly ●

AXT100-MC26- 015 / 030 / 050

(Circular connector cable assembly included in a specific manifold model no. Refer to "How to Order Manifold.")

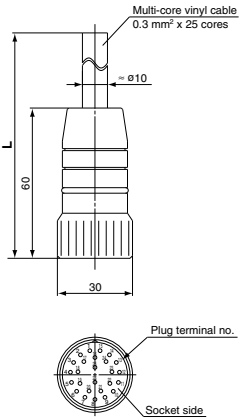

Circular connector cable assembly

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-MC26-015	Cable 25-core x 24AWG
3 m	AXT100-MC26-030	
5 m	AXT100-MC26-050	

∗ Cannot be used for transfer wiring.

Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 min, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more

Note) The minimum bending radius of the circular connector cable is 20 mm.

Circular connector cable assembly terminal no.

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None
26	White	None

Note) Lengths other than the above are also available. Please contact SMC for details.

How to Order Manifold

Note) For CE-compliant models, DC-type only. CE [Option]

VV5Q 2 1 – 08 C6 M 1 – N – □

Series

2	VQ2000

Manifold

1	Plug-in unit

Stations

02	2 stations
⋮	⋮
24	24 stations

Note) Refer to page 419 for details.

Cylinder port

Symbol	Port size
C4 Note 1)	With ø4 One-touch fitting
C6 Note 1)	With ø6 One-touch fitting
C8 Note 1)	With ø8 One-touch fitting
CM Note 2) Note 3)	Mixed sizes and with port plug
MM Note 4)	Mixed size for different types of piping, option installed

Cable (Length)

0	Without cable
1	With cable (1.5 m)
2	With cable (3 m)
3	With cable (5 m)

CE-compliant

Nil	—
Q	CE-compliant

Note) For CE-compliant models, DC-type only.


Option

Symbol	Option
Nil	None
B Note 2)	With back pressure check valve
D	DIN rail mounting
D0	With DIN rail bracket (Without DIN rail)
D□ Note 3)	DIN rail mounting (□: Stations 02 to 24)
K Note 4)	Special wiring spec. (Except double wiring)
N	With name plate
R Note 5)	External pilot
S	Direct EXH outlet with built-in silencer
W Note 6)	Enclosure: Dust-tight, Water-jet-proof (IP65)

Note 1) Insert "L" (Top ported) or "B" (Bottom ported) for elbow type. Example) B6 (Bottom ported elbow with ø6 One-touch fitting)
Note 2) Indicate "LM" (Including upward, downward piping and mixed) for models with elbow fittings and mixed cylinder port sizes.
Note 3) Indicate "Mixed sizes and with port plug" by means of the manifold specification sheet.
Note 4) When selecting the mixed size for different types of piping, dual flow fitting assembly, or double check block (direct mounting), enter "MM" and give instructions in the manifold specification sheet.
Note 5) Inch-size One-touch fittings are available. Refer to "Semi-standard" on page 420 for details.


Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BKR
Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.
Note 3) The number of stations that may be displayed is longer than the manifold number of stations.
Note 4) Specify the wiring specifications by means of the manifold specification sheet.
Note 5) Indicate "R" for the valve with external pilot.
Note 6) When used in combination with the direct EXH outlet with built-in silencer type, keep the exhaust port from coming into direct contact with water or other liquids.

SMC

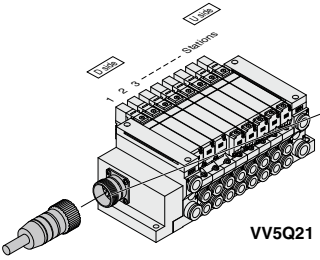

The total number of stations is tabulated starting from station one on the D-side.

Electrical Wiring Specifications

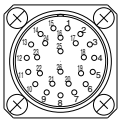

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types. Mixed single and double wiring is available as semi-standard. Refer to page 419 for details.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 419.) Refer to "Semi-standard" on page 419 for details.

Circular connector cable assembly
015 / AXT100-MC26-030 / 050

Terminal no.	Polarity	Lead wire color	Dot marking
Station 1 SOL.A 1	(–)	(+) Black	None
SOL.B 2	(–)	(+) Brown	None
Station 2 SOL.A 3	(–)	(+) Red	None
SOL.B 4	(–)	(+) Orange	None
Station 3 SOL.A 5	(–)	(+) Yellow	None
SOL.B 6	(–)	(+) Pink	None
Station 4 SOL.A 7	(–)	(+) Blue	None
SOL.B 8	(–)	(+) Purple	White
Station 5 SOL.A 9	(–)	(+) Gray	Black
SOL.B 10	(–)	(+) White	Black
Station 6 SOL.A 11	(–)	(+) White	Red
SOL.B 12	(–)	(+) Yellow	Red
Station 7 SOL.A 13	(–)	(+) Orange	Red
SOL.B 14	(–)	(+) Yellow	Black
Station 8 SOL.A 15	(–)	(+) Pink	Black
SOL.B 16	(–)	(+) Blue	White
Station 9 SOL.A 17	(–)	(+) Purple	None
SOL.B 18	(–)	(+) Gray	None
Station 10 SOL.A 19	(–)	(+) Orange	Black
SOL.B 20	(–)	(+) Red	White
Station 11 SOL.A 21	(–)	(+) Brown	White
SOL.B 22	(–)	(+) Pink	Red
Station 12 SOL.A 23	(–)	(+) Gray	Red
SOL.B 24	(–)	(+) Black	White
COM. 25	(+)	Note) (–) White	None
COM. 26	(+)	(–) White	None
	Positive COM spec.	Negative COM spec.	

How to Order Valves

Note) For CE-compliant models, DC-type only. CE [Option]

VQ 2 1 0 0 □ – 5 □ □ □ 1 – □

Series

2	VQ2000

Type of actuation

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center
A	4-position dual port (N.C. +N.C.)
B	4-position dual port (N.O. +N.O.)
C	4-position dual port (N.C. +N.O.)

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W) ○	○ Note 1)
B	High-speed response type	(0.95 W) ○	—
K Note 2)	High-pressure type (1.0 MPa)	(0.95 W) ○	—
N Note 3)	Negative common	○	—
R Note 3) Note 5)	External pilot	○	○

Note 1) For power consumption of AC type, refer to page 381.
Note 2) Metal seal only
Note 3) For external pilot and negative common specifications, refer to "Semi-standard" on pages 419 and 420.
Note 4) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.
Note 5) Dual 3-port valve is not applicable.

CE-compliant

Nil	—
Q	CE-compliant

Note) For CE-compliant models, DC-type only.

Enclosure

Nil	Dust-protected
W	Dust-tight, Water-jet-proof (IP65)

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)
D	Slide locking type (Manual)

Light/surge voltage suppressor

Nil	Yes
E Note)	None (Non-polar)

Note) A combination of "Function [N] (Negative common)" and [E] is unavailable. Since [E] has no polarity, it can also be used as a negative common. Selection of "Function [N]" is not required.

Coil voltage

		CE-compliant
1	100 VAC (50/60 Hz)	—
3	110 VAC (50/60 Hz)	—
5	24 VDC	●
6	12 VDC	●

⚠Caution

Use the standard (DC) specification when continuously energizing for long periods of time.


How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>
Circular connector kit with cable (3 m)
VV5Q21-09C6M2-W ··· 1 set–Manifold base part no.
※**VQ2100-51** ····· **3 sets–Valve part no. (Stations 1 to 3)**
※**VQ2200-51** ····· **3 sets–Valve part no. (Stations 4 to 6)**
※**VQ2300-51** ····· **2 sets–Valve part no. (Stations 7 to 8)**
※**VVQ2000-10A-1** ·· **1 set–Blanking plate part no. (Station 9)**


Prefix the asterisk to the part nos. of the solenoid valve, etc.


Write sequentially from the 1st station on the D-side. When part nos. written collectively are complicated, specify them by means of the manifold specification sheet.

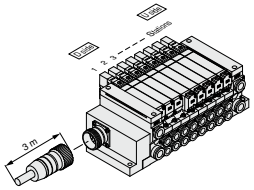

VV5Q21

< >: AC
The dashed lines and dimensions in parentheses indicate DIN rail mounting [-D].

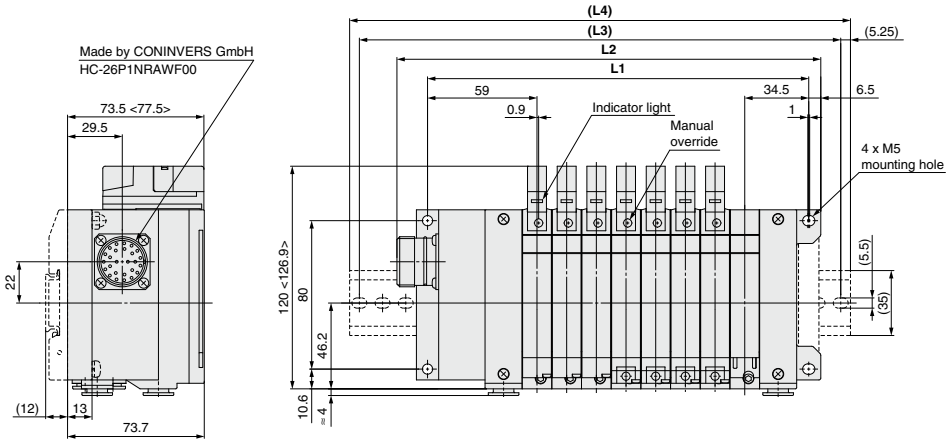

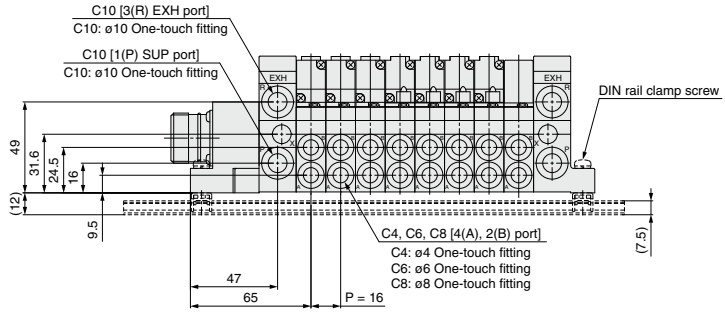

Dimensions

Formula L1 = 16n + 77.5, L2 = 16n + 100.5 n: Station (Maximum 12 stations)

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	109.5	125.5	141.5	157.5	173.5	189.5	205.5	221.5	237.5	253.5	269.5	285.5	301.5	317.5	333.5	349.5	365.5	381.5	397.5	413.5	429.5	445.5	461.5
L2	132.5	148.5	164.5	180.5	196.5	212.5	228.5	244.5	260.5	276.5	292.5	308.5	324.5	340.5	356.5	372.5	388.5	404.5	420.5	436.5	452.5	468.5	484.5
(L3)	162.5	175	187.5	200	225	237.5	250	275	287.5	300	312.5	337.5	350	362.5	375	400	412.5	425	450	462.5	475	500	512.5
(L4)	173	185.5	198	210.5	235.5	248	260.5	285.5	298	310.5	323	348	360.5	373	385.5	410.5	423	435.5	460.5	473	485.5	510.5	523


Sub-plate Single Unit

VQ2000 Only

VQ2000 Series

IP65 enclosure in standard specifications

Easy-to-use terminal block

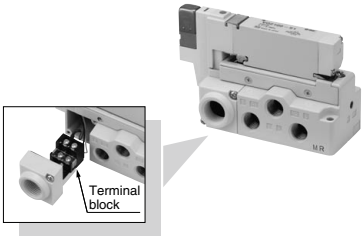

How to Order

Note) For CE-compliant models, DC-type only. [Option]

In the case of (Valve) + (Sub-plate)

VQ2 1 0 0 – 5 W 1 – 02 – –

Entry is the same as standard products.

Enclosure

Nil	Dust-protected
W Note 1)	IP65 (Dust-tight, Water-jet-proof)

Note 1) Valves are IP65 specifications.
Note 2) When the valve is a standard (dust-protected) specification, it is not compatible with 200 or 220 VAC.

CE-compliant

Nil	—
Q	CE-compliant

Note) For CE-compliant models, DC-type only.

Thread type

Nil	Rc
N	NPT
T	NPTF
F	G


In the case of (Sub-plate) alone

VQ2000 – PW – 02

Port size

02	1/4

Dimensions

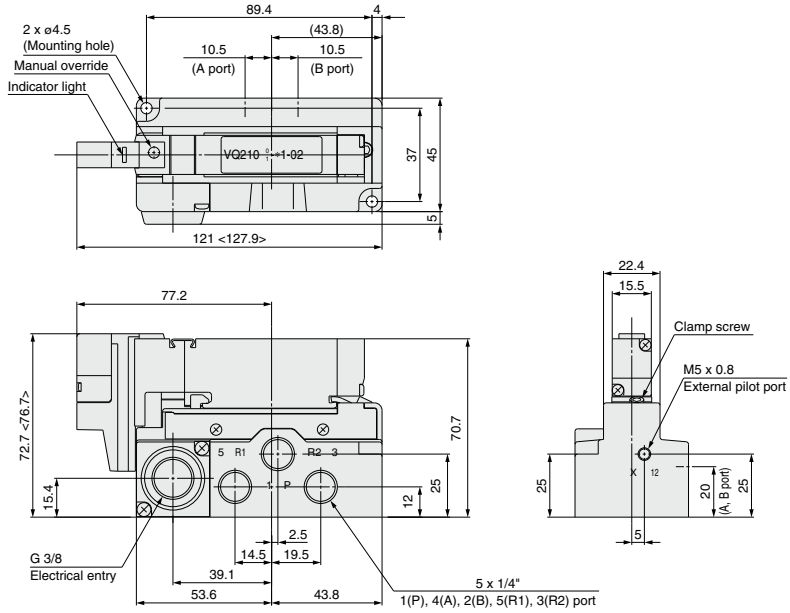


< >: AC
Note) When using this valve for IP65, mount a seal connector to the electrical entry.

Semi-standard


Different Number of Connector Pins

F and P kits with the following number of pins are available besides the standard number (F = 25P; P = 26P). Select the desired number of pins and cable length from the cable assembly list. Place an order for the cable assembly separately.

F kit (D-sub connector) 15 pins

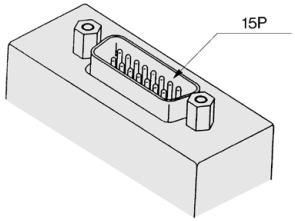

P kit (Flat ribbon cable) 10/16/20 pins

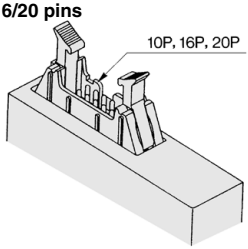


How to Order Manifold

VV5Q11 − 06 C6 F SA − □

- 06: Stations
- C6: Cylinder port
- F: How to Order — D-sub connector, 15 pins; Connector location–Side; Without cable
- SA: Kit type/Electrical entry
- □: Option

Pins \ Location	Top entry		Side entry	
15P (Max. 7 stations)	**F** kit	**UA**	**F** kit	**SA**

∗ In the same way as the 25-pin models (standard), the terminal no. 1 is for SOL.A at the 1st station, the terminal no. 9 for SOL.B at the 1st station, and the terminal no. 8 for COM.

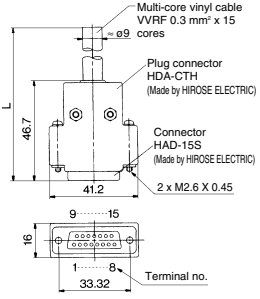

Wire Color Table by Terminal No. of D-sub Connector Cable Assembly

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black

D-sub Connector Cable Assembly

Cable length (L) \ Pins	15P
1.5 m	AXT100-DS15-1
3 m	AXT100-DS15-2
5 m	AXT100-DS15-3

∗ For other commercial connectors, use a type conforming to MIL-C-24308.


How to Order Manifold

VV5Q11 − 06 C6 P SC − □

- 06: Stations
- C6: Cylinder port
- P: How to Order — Flat ribbon cable, 20 pins; Connector location–Side; Without cable
- SC: Kit type/Electrical entry
- □: Option

Pins \ Location	Top entry		Side entry	
10P (Max. 4 stations)	**P** kit	**UA**	**P** kit	**SA**
16P (Max. 7 stations)		**UB**		**SB**
20P (Max. 9 stations)		**UC**		**SC**

∗ In the same way as the 26-pin models (standard), the terminal no. 1 is for SOL.A at the 1st station, the terminal no. 2 for SOL.B at the 1st station, and two pins from the max. terminal numbers are for COM.

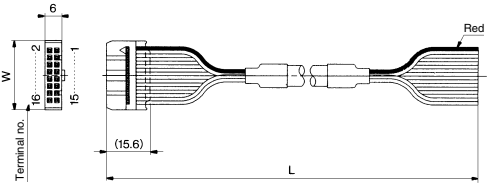

Flat Ribbon Cable Assembly

Cable length (L) \ Pins	10P	16P	20P
1.5 m	AXT100-FC10-1	AXT100-FC16-1	AXT100-FC20-1
3 m	AXT100-FC10-2	AXT100-FC16-2	AXT100-FC20-2
5 m	AXT100-FC10-3	AXT100-FC16-3	AXT100-FC20-3
Connector width (**W**)	17.2	24.8	30

∗ For other commercial connectors, use a type with strain relief conforming to MIL-C-83503.

Special Wiring Specifications

In the internal wiring of F/P/J/G/T/S kit, double wiring (connected to SOL. A and SOL. B) is adopted for each station regardless of the valve and option types. Mixed single and double wiring is available as an option.

1. How to Order


Indicate an option symbol "-K", for the manifold no. and be sure to specify the mounting position and number of stations of the single and double wiring by means of the manifold specification sheet.

Example) **VV5Q11-08C6FU1-D K S**

Others, option symbols: to be indicated alphabetically.

2. Wiring specifications

With the A side solenoid of the 1st station as no.1 (meaning, to be connected to no.1 terminal), without making any terminals vacant.

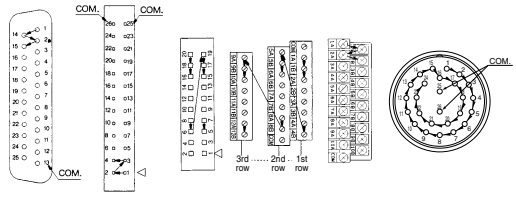

F kit D-sub connector (25P) | **P kit** Flat ribbon cable connector (26P) | **J/G kit** | **T kit** Terminal block (VQ1000, 24 terminals) | **T kit** Terminal block (VQ2000) | **M kit**

3. Max. number of stations

The maximum number of stations depends upon the number of solenoids. Assuming one for a single and two for a double, determine the number of stations so that the total number is not more than the max. number given in the following table.

Kit	F kit (D-sub connector)		P kit (Flat ribbon cable)				J kit (Flat ribbon cable)	G kit (Flat ribbon cable with terminal block)
Type	FUS□ 25P	FUSA 15P	PUS□ 26P	PUSC 20P	PUSB 16P	PUSA 10P	JUS□ 20P	G□
Max. points	24	14	24	18	14	8	16	16

Kit		T kit (Terminal block box)		S kit (Serial transmission)	M kit (Circular connector)
		2 rows of terminal blocks	3 rows of terminal blocks		
Type	VQ1000	16	24	S□	M□
Max. points	VQ2000	20		16	24

Negative Common Specifications

Specify the valve model no. as shown below for negative common specification.

The manifold no. shown below is for the T (VQ1000) and L (VQ1000/2000) kits. For other kits the standard manifold can be used. However, negative common is not compatible with S (except EX510 Gateway-type, EX240 integrated-type and EX120/121/122 integrated-type (CompoNet®)) and G kits.

How to Order Valves

VQ1100 N -51

Negative common specifications

How to Order Manifold

T kit (VQ1000):

VV5Q11- 06 C6 T N -

Option

Negative common specifications

Cylinder port

Stations

L kit (VQ1000/2000):

VV5Q11- 06 C6 L N 1 -

Stations

Cylinder port

Negative common specifications

Electrical entry Cable length

0	With cable (0.6 m)
1	With cable (1.5 m)
2	With cable (3 m)

Option

Semi-standard

External Pilot Specifications

When the supply air pressure is lower than the required minimum operating pressure (0.1 to 0.2 MPa) for the solenoid valve (or when the valve is used for vacuum), specify an external pilot model. Order a manifold or valve by suffixing the external pilot specification, "R". The X-port of the manifold base is equipped with One-touch fittings for external pilot.
VQ1000: C4 (ø4 One-touch fitting)
VQ2000: C6 (ø6 One-touch fitting)

How to Order Manifold

VV5Q11−08C6FU1−R S

External pilot specifications

Others, option symbols: to be indicated alphabetically.

How to Order Valves

VQ1100 R − 51

External pilot specifications

Note 1) When two or more functions are specified, indicate them alphabetically.
Note 2) Since the pilot EXH of this valve is released from the R1 passage, it is not possible to vacuum from a part other than EXH pressure and SUP ports.

Inch-size One-touch Fittings

The valve with inch-size One-touch fittings is shown below.

VV5Q11− 06 N7 PS0 − □

Stations

Option

Kit type/Electrical entry

Cylinder port

Symbol		N1	N3	N7	N9	M5T	NM
Applicable tubing O.D. (Inch)		ø1/8"	ø5/32"	ø1/4"	ø5/16"	10-32UNF (M5 thread)	Mixed
4(A), 2(B) port	VQ1000	●	●	●	—	●	●
	VQ2000	—	●	●	●	—	●

Note) When inch-size fittings are selected for the cylinder port, inch-size fittings are selected on 1(P), 3(R) port, too.

1(P), 3(R) port size
VQ1000 ····· ø5/16" (N9)
VQ2000 ····· ø3/8" (N11)

DIN Rail Mounting

Each manifold can be mounted on a DIN rail. Order it by indicating a DIN rail mounting option symbol, "-D". In this case, a DIN rail which is approx. 30 mm longer than the manifold with the specified number of stations is attached.

● **When DIN rail is unnecessary**
(DIN rail mounting brackets only are attached.)
Indicate the option symbol, -D0, for the manifold part number.

Example)

VV5Q11−08C6FU1−D0S

Others, option symbols: to be indicated alphabetically.

●**When using DIN rail longer than the manifold with specified number of stations**
Clearly indicate the necessary number of stations next to the option symbol "-D" for the manifold part number.

Example)

VV5Q11−08C6FU1−D09S

DIN rail for 9 stations

Others, option symbols: to be indicated alphabetically.


∗The number of stations that may be displayed is longer than the manifold number of stations.

● **When changing to a DIN rail mounting.**
Order brackets for mounting a DIN rail. (Refer to "Manifold Optional Parts" on pages 430 and 436.)

No. VVQ1000-57A (For VQ1000)
VVQ2000-57A (For VQ2000)
2 pcs. per one set.

● **When ordering DIN rail only**
DIN rail no.: AXT100-DR-□

∗ As for □, specify the number from the DIN rail table. Refer to the dimensions of each kit for L dimension.

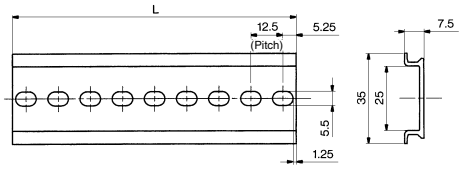


L Dimension L = 12.5 x n + 10.5

No.	1	2	3	4	5	6	7	8	9	10
L dimension	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5
No.	11	12	13	14	15	16	17	18	19	20
L dimension	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30
L dimension	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5
No.	31	32	33	34	35	36	37	38	39	40
L dimension	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5


Construction

VQ1000 Plug-in Unit: Main Parts/Replacement Parts

Metal seal

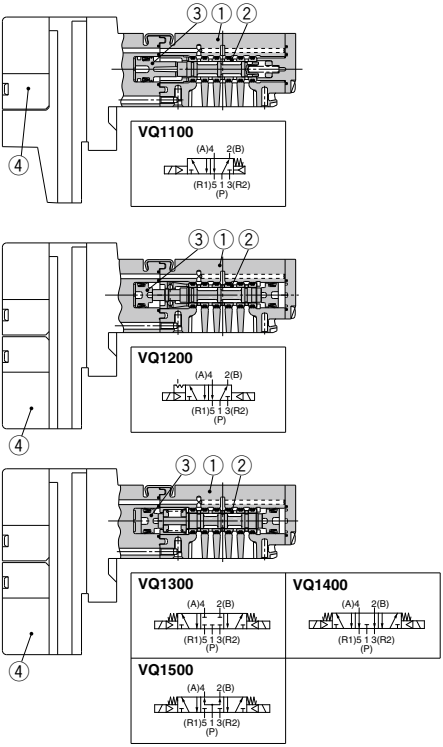

Rubber seal

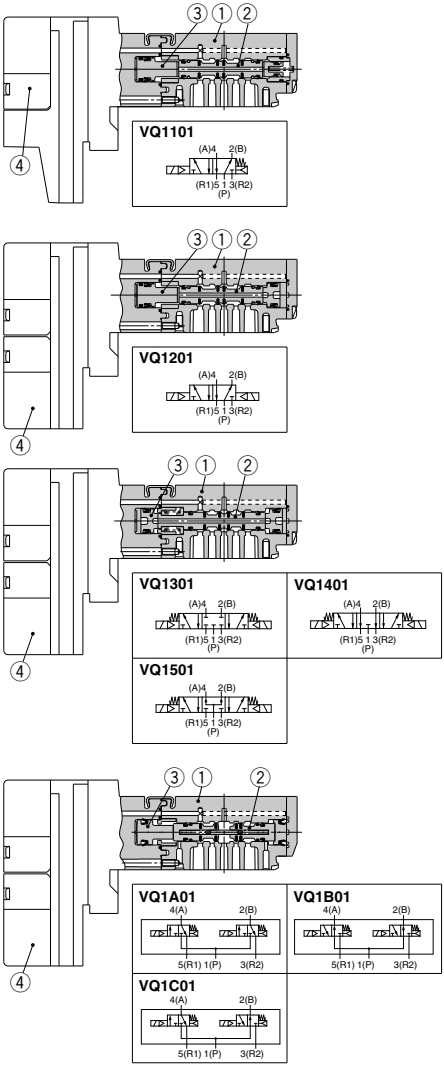

Component Parts

No.	Description	Material	Note
1	**Body**	Zinc die-casted	
2	**Spool/Sleeve**	Stainless steel	
3	**Piston**	Resin	
4	**Pilot valve assembly**	—	

Note) Refer to page 425 for “How to Order Pilot Valve Assembly”.


Component Parts

No.	Description	Material	Note
1	**Body**	Zinc die-casted	
2	**Spool valve**	Aluminum, HNBR	
3	**Piston**	Resin	
4	**Pilot valve assembly**	—	


Note) Refer to page 425 for “How to Order Pilot Valve Assembly”.

VQ2000 Plug-in Unit: Main Parts/Replacement Parts

Metal seal

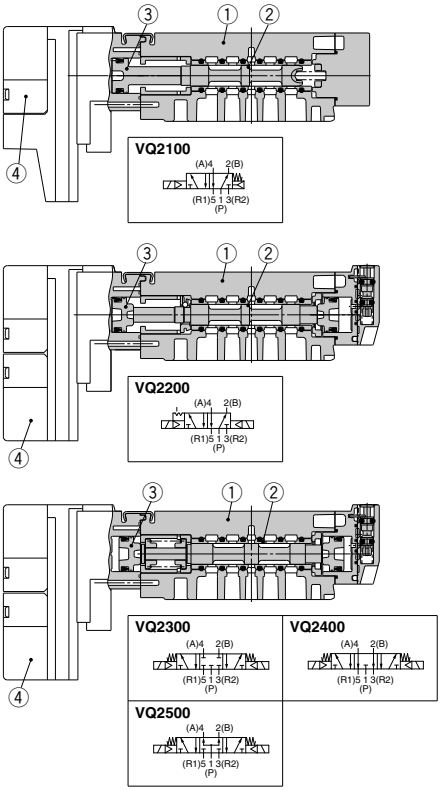

Rubber seal

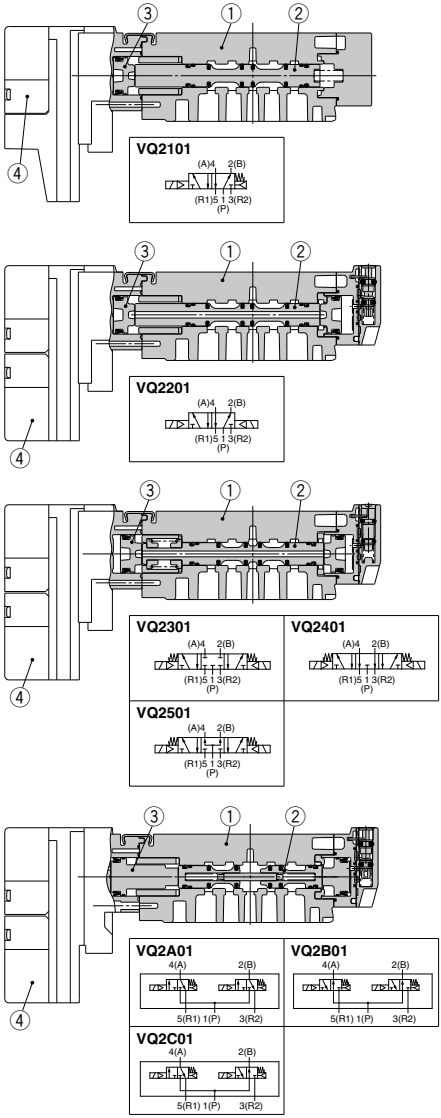

Component Parts

No.	Description	Material	Note
1	**Body**	Zinc die-casted	
2	**Spool/Sleeve**	Stainless steel	
3	**Piston**	Resin	
4	**Pilot valve assembly**	—	

Note) Refer to page 425 for “How to Order Pilot Valve Assembly”.

Component Parts


No.	Description	Material	Note
1	**Body**	Zinc die-casted	
2	**Spool valve**	Aluminum, HNBR	
3	**Piston**	Resin	
4	**Pilot valve assembly**	—	

Note) Refer to page 425 for “How to Order Pilot Valve Assembly”.

Exploded View of Manifold

VQ1000 Plug-in Unit: Exploded View

(F/P/L/S kit)

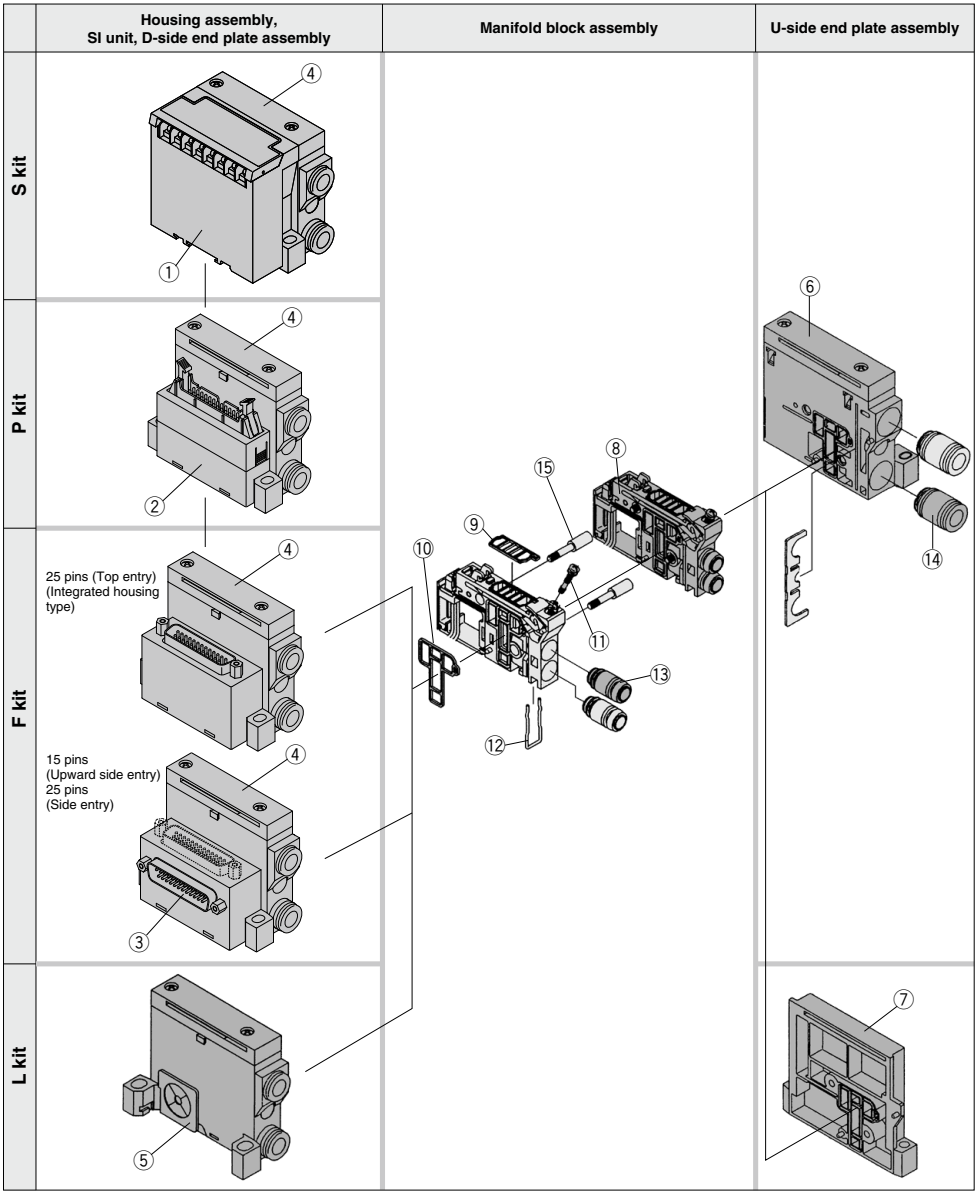

SMC

<Housing Assembly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
①	(SQ kit)	**EX120-SDN1**	DeviceNet®
	(SR1 kit)	**EX120-SCS1**	OMRON Corp.: CompoBus/S (16 outputs)
	(SR2 kit)	**EX120-SCS2**	OMRON Corp.: CompoBus/S (8 outputs)
	(SV kit)	**EX120-SMJ1**	CC-LINK
②	P^{U}_{S} kit	**AXT100-1-P^{U}_{S}□** Note)	Flat ribbon cable housing assembly □: Number of pins: 26/20/16/10
③	FU kit	**AXT100-1-FU15**	D-sub connector housing assembly (Top entry) Number of pins: 15
	FS kit	**AXT100-1-FS□**	D-sub connector housing assembly (Side entry) □: Number of pins: 25/15

Note) Top entry connector for PU while side entry connector for PS.

<D-Side End Plate Assembly>

④⑤ D-side end plate assembly no.

VVQ1000-3A-1-□-□

Electrical entry

FU25	For F kit top entry 25 pins
F	For F kit
P	For P kit
L	For L kit
S	For S kit

Option

Nil	Common EXH
R Note 1)	External pilot
S Note 1)	Direct EXH outlet with built-in silencer

Note 1) When both options are specified, indicate as RS.
Note 2) The housing assembly and SI unit of F/P/S kits are not included. Separately place an order for ①, ②, ③.

<Manifold Block Assembly>

⑧ Manifold block assembly no.

Tie-rod (2 pcs.) and lead wire assembly for extensions are attached.

VVQ1000-1A-□-□

Electrical entry

F0	Without lead wire
F1	F kit for 2 to 12 stations/Double wiring
F2	F kit for 13 to 24 stations/Double wiring
F3	F kit for 2 to 24 stations/Single wiring
P1	P/S kits for 2 to 12 stations/Double wiring
P2	P/S kits for 13 to 24 stations/Double wiring
P3	P/S kits for 2 to 24 stations/Single wiring
L0□	L0 kit □: Stations (1 to 8)
L1□	L1 kit □: Stations (1 to 8)
L2□	L2 kit □: Stations (1 to 8)

Port size

C3	With ø3.2 One-touch fitting
C4	With ø4 One-touch fitting
C6	With ø6 One-touch fitting
M5	M5 thread
C0	Without One-touch fitting (With clip)

<Replacement Parts for Manifold Block>

Replacement Parts

No.	Part no.	Description	Material	Quantity
⑨	**VVQ1000-80A-1**	Gasket	HNBR	12
⑩	**VVQ1000-80A-2**	Seal	HNBR	12
⑪	**VVQ1000-80A-3**	Clamp screw	Carbon steel	12
⑫	**VVQ1000-80A-4**	Clip	Stainless steel	12

Note) A set of parts containing 12 pcs. each is enclosed.

<U-Side End Plate Assembly>

⑥ U-side end plate assembly no. (For F/P/S kits)

VVQ1000-2A-1-□

Option

Nil	Common EXH
R	External pilot
S	Direct EXH outlet with built-in silencer

Note) The ⑭'s fitting assembly is included.

⑦ U-side end plate assembly no. (For L kit)

VVQ1000-2A-1-L

<Fitting Assembly>

⑬ Fitting assembly part no. (For cylinder port)

VVQ1000-50A-□

Port size

C3	Applicable tubing ø3.2
C4	Applicable tubing ø4
C6	Applicable tubing ø6
M5	M5 thread

Note) Purchasing order is available in units of 10 pieces.

⑭ Fitting assembly part no. (For 1(P), 3(R) port)

VVQ1000-51A-C8

Applicable tubing ø8

Note) Purchasing order is available in units of 10 pieces.

⑮ Tie-rod assembly part no. (2 pcs./set)

VVQ1000-TR-□

Note 1) Please order when eliminating manifold stations. When adding stations, tie-rods are attached to the manifold block assembly. Therefore, it is not necessary to order.
Note 2) □: Stations 02 to 24
Note 3) For S/P/F/L kits

Pilot valve assembly

V112□-□A

Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W) ○	Note 1) ○
B	High-speed response type	(0.95 W) ○	—
K	High-pressure type (1.0 MPa)	(0.95 W) ○	—

Coil voltage









1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Note 1) Refer to page 381 for power consumption of AC type.
Note 2) Common to single solenoid and double solenoid
Note 3) The voltage (including light/surge voltage suppressor), positive common and negative common cannot be changed by changing the pilot valve assembly.

Exploded View of Manifold

VQ2000 Plug-in Unit: Exploded View

(F/P/L/S kits)

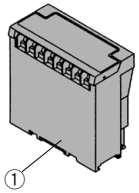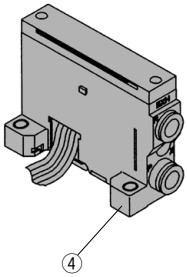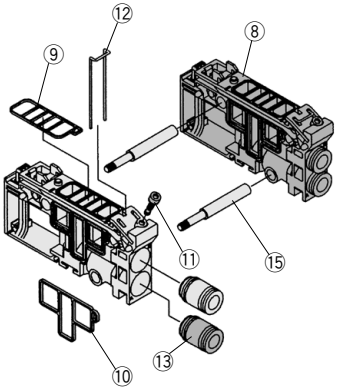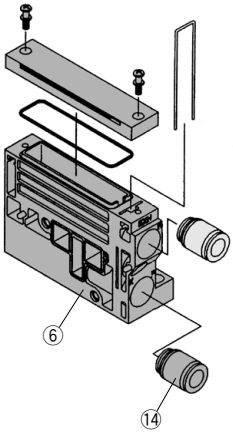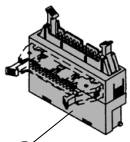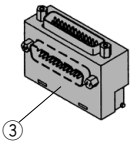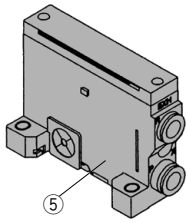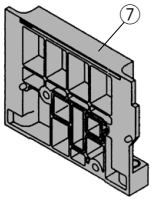	Housing assembly and SI unit	D-side end plate assembly	Manifold block assembly	U-side end plate assembly
S kit				
P kit				
F kit				
L kit				

<Housing Assembly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
①	(SQ kit)	**EX120-SDN1 [EX124D-SDN1]** Note 1)	DeviceNet®
	(SR1 kit)	**EX120-SCS1 [EX124D-SCS1]** Note 1)	OMRON Corp.: CompoBus/S (16 outputs)
	(SR2 kit)	**EX120-SCS2 [EX124D-SCS2]** Note 1)	OMRON Corp.: CompoBus/S (8 outputs)
	(SV kit)	**EX120-SMJ1 [EX124D-SMJ1]** Note 1)	CC-LINK
②	P_S^U kit	**AXT100-1-P_S^U□** Note 2)	Flat ribbon cable housing assembly □: Number of pins: 26/20/16/10
③	F_S^U kit	**AXT100-1-F_S^U□** Note 2)	D-sub connector housing assembly □: Number of pins: 25/15

Note 1) Dust-tight, Water-jet-proof (IP65)
Note 2) Top entry connector for FU, PU while side entry connector for FS, PS.

<D-Side End Plate Assembly>

④⑤ D-side end plate assembly no.

VVQ2000-3A-1-□-□□

Electrical entry

F	For F kit
P	For P kit
L	For L kit
S	For S/M kits

Enclosure

Nil	Dust-protected
W Note 3)	Dust-tight, Water-jet-proof (IP65)

Note) F/P kits are available with "Nil" only.
M kit is available with [W] only.
S/L/T kits are selectable depending on the manifold type.

Option

Nil	Common EXH
R Note 1)	External pilot
S Note 1)	Direct EXH outlet with built-in silencer

Note 1) When both options are specified, indicate as RS.
Note 2) The housing assembly and SI unit of F/P/S kits are not included. Separately place an order for ①, ②, ③.
Note 3) When used in combination with the direct EXH outlet with built-in silencer type, keep the exhaust port from coming into direct contact with water or other liquids.

<U-Side End Plate Assembly>

⑥ U-side end plate assembly no. (For F/P/T/S/M kits)

VVQ2000-2A-1-□□

Option

Nil	Common EXH
R	External pilot
S	Direct EXH outlet with built-in silencer

Enclosure

Nil	Dust-protected
W Note 3)	Dust-tight, Water-jet-proof (IP65)

Note) F/P kits are available with "Nil" only.
S/T/M kits are selectable depending on the manifold type.

Note 1) The ⑭'s fitting assembly is included.
Note 2) The housing assembly and SI unit of F/P/S kits are not included. Separately place an order for ①, ②, ③.
Note 3) When used in combination with the direct EXH outlet with built-in silencer type, keep the exhaust port from coming into direct contact with water or other liquids.

⑦ U-side end plate assembly no. (For L kit)

VVQ2000-2A-1-L-□

Enclosure

Nil	Dust-protected
W	Dust-tight, Water-jet-proof (IP65)

Note) Select it depending on the manifold type.

<Manifold Block Assembly>

⑧ Manifold block assembly no.

Tie-rod (2 pcs.) and lead wire assembly for extensions are attached.

VVQ2000-1A-□-□-□

Electrical entry

F0	Without lead wire
F1	F kit for 2 to 12 stations/Double wiring
F2	F kit for 13 to 24 stations/Double wiring
F3	F kit for 2 to 24 stations/Single wiring
P1	P/S kits for 2 to 12 stations/Double wiring
P2	P/S kits for 13 to 24 stations/Double wiring
P3	P/S kits for 2 to 24 stations/Single wiring
L0□	L0 kit □: Stations (1 to 8)
L1□	L1 kit □: Stations (1 to 8)
L2□	L2 kit □: Stations (1 to 8)
T1	T kit for 2 to 20 stations/Double wiring
T3	T kit for 2 to 20 stations/Single wiring
M1	M kit for 2 to 12 stations/Double wiring
M2	M kit for 13 to 24 stations/Double wiring
M3	M kit for 2 to 24 stations/Single wiring

Port size

C4	With ø4 One-touch fitting
C6	With ø6 One-touch fitting
C8	With ø8 One-touch fitting
C0	Without One-touch fitting (With clip)

Enclosure

Nil	Dust-protected
W	Dust-tight, Water-jet-proof (IP65)

Note) F/P kits are available with "Nil" only.
S/L/T/M kits are selectable depending on the manifold type.

<Fitting Assembly>

⑬ Fitting assembly part no. (For cylinder port)

VVQ1000-51A-□

Port size

C4	Applicable tubing ø4
C6	Applicable tubing ø6
C8	Applicable tubing ø8

Note) Purchasing order is available in units of 10 pieces.

⑭ Fitting assembly part no. (For 1(P), 3(R) port)

VVQ2000-51A-C10

Applicable tubing ø10

Note) Purchasing order is available in units of 10 pieces.

<Replacement Parts for Manifold Block>

Replacement Parts

No.	Part no.	Description	Material	Quantity
⑨	**VVQ2000-80A-1**	Gasket	HNBR	12
⑩	**VVQ2000-80A-2**	Seal	HNBR	12
⑪	**VVQ2000-80A-3**	Clamp screw	Carbon steel	12
⑫	**VVQ2000-80A-4**	Clip	Stainless steel	12

Note) A set of parts containing 12 pcs. each is enclosed.

⑮ Tie-rod assembly part no. (2 pcs./set)

VVQ2000-TR-□


Note 1) Please order when eliminating manifold stations.
When adding stations, tie-rods are attached to the manifold block assembly. Therefore, it is not necessary to order.
Note 2) □: Stations 02 to 24
Note 3) For S/P/F/L kits

VQ1000: Manifold Optional Parts

Blanking plate assembly
VVQ1000-10A-1

Symbol


It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

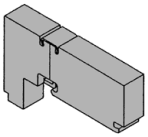


Individual SUP spacer
VVQ1000-P-1- C6 / N7

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.)
Block both sides of the station, for which the supply pressure from the individual SUP spacer is used, with SUP block plates. (Refer to the application example.)

- Specify the spacer mounting position and SUP block plate position by means of the manifold specification sheet.
  The block plate is used in one or two places for one set. (Two SUP block plates for blocking SUP station are attached to the individual SUP spacer.)
- As a standard, electric wiring is connected to the position of the manifold station where the individual SUP spacer is mounted.
- If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

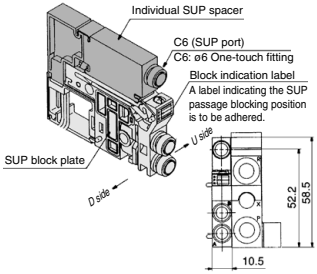


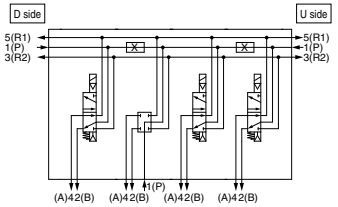

Individual EXH spacer
VVQ1000-R-1- C6 / N7


When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.)
Block both sides of the individual valve EXH station. (Refer to the application example.)

- Specify the mounting position, as well as the EXH block base or EXH block plate position by means of the manifold specification sheet. The block plate is used in one or two places for one set.
- An EXH block base assembly is used in the blocking position when ordering an EXH spacer incorporated with a manifold no. However, do not order an EXH block base assembly because it is attached to the spacer.
  When separately ordering an individual EXH spacer, separately order an EXH block base assembly because it is not attached to the spacer.
- As a standard, electric wiring is connected to the position of the manifold station where the individual EXH spacer is mounted.
- If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.
- Do not install any back pressure check valve on the manifold station, on which the spacer is to be mounted. When installing the back pressure check valve on other manifold station, be sure to specify the manifold station position on the manifold specification sheet instead of ordering by specifying the manifold option symbol "B".

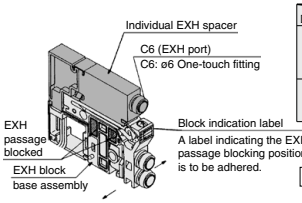

Description/Model	Stations	1	2	3	4	5	6	7
Valve	Single	●		●	●			
	⋮							
Option	Individual EXH spacer VVQ1000-R-1-C6		●					
	EXH blocking position: Specify 2 places.	●		●				

Individual EXH spacer + **EXH block base assembly** — **Valve** + **EXH block base assembly**

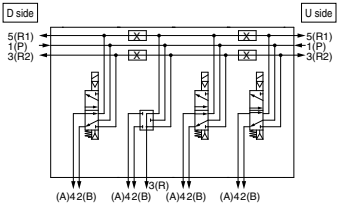


SUP block plate
VVQ1000-16A

When different pressures are supplied to a manifold, a SUP block plate is used to block the stations under different pressures.


- Specify the mounting position by means of the manifold specification sheet.

<Block indication label>
Indication labels to confirm the blocking position are attached (Each for SUP passage and SUP/EXH passage blocking positions).

- When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.

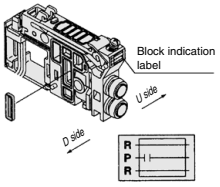

SUP passage blocked

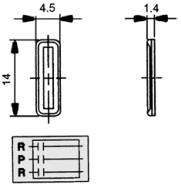

SUP/EXH passage blocked

Blanking plate with connector
VVQ1000-1C□-□

Symbol



Connector

Nil	Without connector
1	With connector/2-wire
2	With connector/4-wire


Connector lead wire length (mm)

Nil	300	**20**	2000
6	600	**25**	2500
10	1000	**30**	3000
15	1500		

Blanking plate with a connector for individually outputting electricity to drive a single valve or equipment that are not on the manifold base.

- When "N" is suffixed to the end of the name plate, the plate will be different from a standard shape.

Note) Electric current should be 1A or less (including the mounted valves).

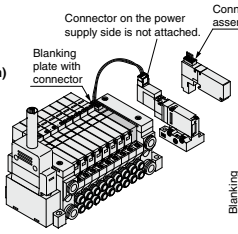


Connector assembly part no.
AXT661- 43 / 44 **A-** 6

43	4-wire
44	2-wire

Lead wire length (mm)

Nil	300	**20**	2000
6	600	**30**	3000
10	1000		




EXH block base assembly
VVQ1000-19A-P/E/L-(C3/C4/C6/M5/N1/N3/N7)


Manifold block assembly
Electrical entry


F0	Without lead wire
F1	For F kit (2 to 12 stations)/Double wiring
F2	For F kit (13 to 24 stations)/Double wiring
F3	For F kit (2 to 24 stations)/Single wiring
P1	For P, G, T, S kit (2 to 12 stations)/Double wiring
P2	For P, G, T, S kit (13 to 24 stations)/Double wiring
P3	For P, G, T, S kit (2 to 24 stations)/Single wiring
L0∗	L0 kit
L1∗	L1 kit ∗ 1 to 8 stations
L2∗	L2 kit

The manifold block assembly is used between stations for which exhaust is desired to be divided when valve exhaust affects other stations due to the circuit configuration. The EXH passage on the D-side is blocked in the EXH block base assembly. It is also used in combination with an individual EXH spacer for individual exhaust.

<Block indication label>
Indication labels to confirm the blocking position are attached. (Each for EXH passage and SUP/EXH passage blocking positions)
∗ When ordering a EXH block base incorporated with a manifold, a block indication label is attached to the manifold.

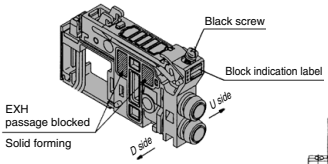

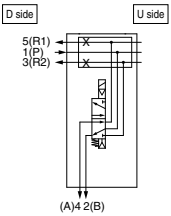



∗ Specify the mounting station by means of the manifold specification sheet.
∗ When ordering this option incorporated with a manifold, specify the EXH block base assembly part number with "∗" in front of it beneath the manifold part number.




EXH passage blocked




SUP/EXH passage blocked

Back pressure check valve assembly [-B]
VVQ1000-18A

It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into R (EXH) port on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used or an exhaust center type solenoid valve is used.
∗ When ordering it being mounted on all manifold stations, suffix "-B" to the end of the manifold part number.
Note) When a back pressure check valve is desired, and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting station by means of the manifold specification sheet.

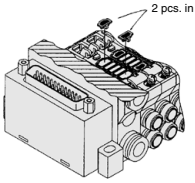

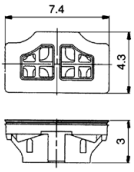



(Precautions)
1. The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air.
2. When a back pressure check valve is mounted, the effective area of the valve will decrease by about 20%.

Name plate [-N]
VVQ1000-N/NC-N-Station (1 to Max. stations) (-X4)

N: Standard
NC: For mounting blanking plate with connector
-X4: For mounting slide locking type manual valve

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc.
Insert it into the groove on the side of the end plate and bend it as shown in the figure.
∗ When the blanking plate with connector is mounted, it automatically will be "VVQ1000-NC-n"
∗ When the slide locking type manual valve is mounted, it automatically will be "VVQ1000-N-n-X4"
∗ When ordering this option incorporated with a manifold, suffix "-N" to the end of the manifold part number.

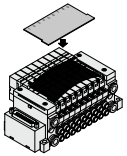


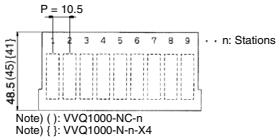


Note) ( ): VVQ1000-NC-n
Note) { }: VVQ1000-N-n-X4

Blanking plug (For One-touch fittings)
KQ2P-□

It is inserted into an unused cylinder port and SUP/EXH ports.
Purchasing order is available in units of 10 pieces.







Dimensions

Applicable fitting size ød	Model	A	L	D	Applicable fitting size ød	Model	A	L	D
3.2	**KQ2P-23**	16	31.5	3.2	1/8"	**KQ2P-01**	16	31.5	5
4	**KQ2P-04**	16	32	6	5/32"	**KQ2P-03**	16	32	6
6	**KQ2P-06**	18	35	8	1/4"	**KQ2P-07**	18	35	8.5
8	**KQ2P-08**	20.5	39	10	5/16"	**KQ2P-09**	20.5	39	10

Port plug
VVQ0000-58A


The plug is used to block the cylinder port.
∗ When ordering this option incorporated with a manifold, indicate "CM" for the port size of the manifold part number, as well as, the mounting station and cylinder port mounting positions 4(A) and 2(B) by means of the manifold specification sheet.
∗ Gently screw in an M3 screw in the port plug hole and pull it for removal.

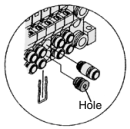





Elbow fitting assembly
VVQ1000-F-L(C3/C4/C6/M5/N1/N3/N7)

It is used for piping that extends upward or downward from the manifold.
∗ When ordering this option incorporated with a manifold, indicate "L□" or "B□" for the manifold port size (when installed in all stations.)
When installing it in part of the manifold stations, specify the elbow fitting assembly part number and the mounting station by means of the manifold specification sheet.
∗ When mounting elbow fitting assembly on the edge of manifold station and a silencer on EXH port, select a silencer, AN203-KM8. A silencer (AN200-KM8) is interfered with fittings.

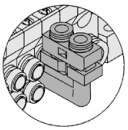



Downward




Upward


VQ1000: Manifold Optional Parts

DIN rail mounting bracket [-D/-D0/-D□]
VVQ1000-57A

It is used for mounting a manifold on a DIN rail.
* When ordering this option incorporated with a manifold, suffix "D" to the end of the manifold part number.

1 set of DIN rail mounting bracket is used for 1 manifold (2 DIN rail mounting brackets).

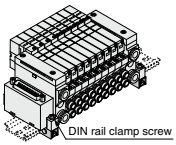

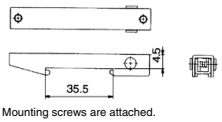


Mounting screws are attached.

Direct EXH outlet with built-in silencer [-S]

This is a type with an exhaust port a top the manifold end plate. The built-in silencer exhibits an excellent noise suppression effect. (Noise reduction: 30 dB)
* When ordering this option incorporated with a manifold, suffix "S" to the end of the manifold part number.


Note) A large quantity of drainage generated in the air source results in exhaust of air together with drainage.


● Refer to page 443 for maintenance.

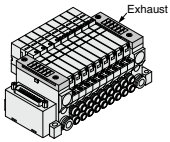

Dual flow fitting assembly
VVQ1000-52A- $\frac{C8}{N9}$


This is a fitting to multiply the flow rate by combining the outputs of 2 valve stations. It is used for driving a large bore cylinder. This is a One-touch fitting for a port size of ø8 or ø5/16".
* The port size for the manifold part number is "MM". Clearly indicate the dual flow fitting assembly part number and specify the mounting station by means of the manifold specifications.
* In dual flow fitting assembly, a special clip which is combined in one-piece of 2 stations is attached as a holding clip.

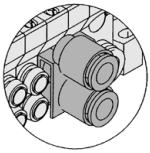

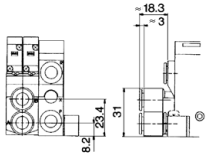

Silencer (For EXH port)

This silencer is to be inserted into the EXH port (One-touch fittings) of the common exhaust type.
* When mounting elbow fitting assembly (VVQ1000-F-L□) on the edge of manifold station, select a silencer, AN15-C08.



Dimensions


Series	Applicable fitting size ød	Model	A	L	D	Effective area (mm²)	Noise reduction (dB)
VQ1000	8	AN15-C08	26.5	45	13	20	30

Regulator unit
VVQ1000-AR-1

The regulator controls the SUP pressure in a manifold. Supply air from D-side SUP port is regulated. SUP port on U-side is plugged.
When a regulator unit is mounted, the SUP port on the U-side of the manifold will be plugged. A maximum of 3 units can be mounted on a manifold.

Specifications

Maximum operating pressure (MPa)	0.8
Set pressure range (MPa)	0.05 to 0.7
Ambient and fluid temp. (°C)	5 to 50
Fluid	Air
Cracking pressure valve (MPa)	0.02
Structure	Relieving type

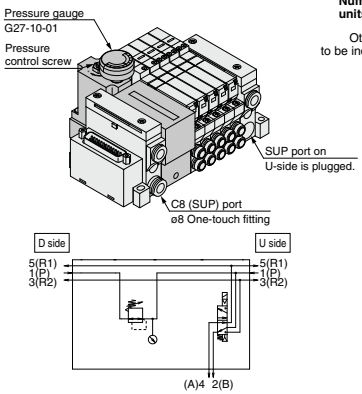

• How to Order

Indicate an option symbol "-G*" for the manifold no. and be sure to specify the mounting position and number of stations by means of the manifold specification sheet. One unit is counted as one station and occupies a space for three stations, therefore, pay attention to the manifold size. The regulator valve unit, to which no wire is connected, valves can be mounted up to the standard max. number of stations of each kit.


How to Order Manifold
VV5Q11-14C6FUO-D G 2

Number of manifold stations
Number of mounted valves ··· 12 sets
+
Number of regulator units ··· 2 sets


Number of regulator units ··· 2 sets

With regulator unit


Others, option symbols: to be indicated alphabetically.

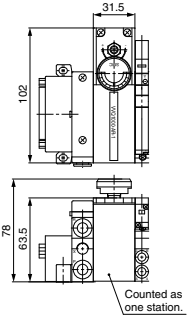

Flow Rate Characteristics
Conditions: Inlet pressure 0.7 MPa

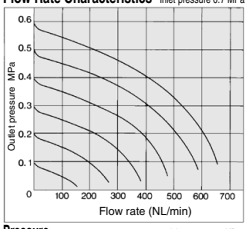

Pressure Characteristics
Conditions (Initial setting) Inlet pressure 0.7 MPa Outlet pressure 0.2 MPa

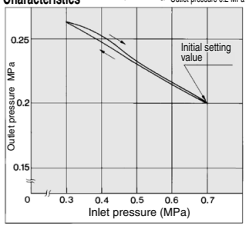

⚠ Caution

• Pressure setting

Check the inlet pressure and then turn the pressure control screw to set the outlet pressure. Turning the screw clockwise will increase the outlet pressure while turning it counterclockwise decrease the pressure. (Set the pressure by turning the screw in the increase direction.)

• Installation

Since some level of the actuator's operational frequency may lead to a sharp pressure change, pay attention to the pressure gauge durability.


Double check block (Separated) for VQ1000
VQ1000-FPG-□□-□

It is used on the outlet side piping to keep the cylinder in the intermediate position for a long time. Combining the double check block with a built-in pilot type double check valve and a 3-position exhaust center solenoid valve will enable the cylinder to stop in the middle or maintain its position for long periods of time.
The combination with a 2-position single/double solenoid valve will permit this block to be used for preventing the dropping at the cylinder stroke end when the SUP residual pressure is released.


Specifications

Max. operating pressure	0.8 MPa
Min. operating pressure	0.15 MPa
Ambient and fluid temp.	–5 to 50°C
Flow rate characteristics: C	0.60 dm³/(s·bar)
Max. operating frequency	180 c.p.m

Note) Based on JIS B 8375-1981
(Supply pressure: 0.5 MPa)

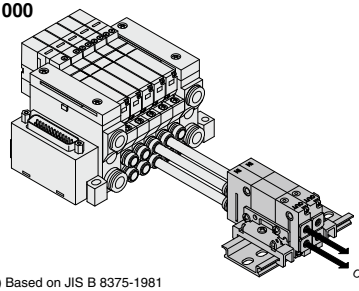


<Circuit diagram>

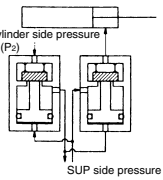



VVQ1000-FPG-02 1 set
∗ VQ1000-FPG-C6M5-D 2 pcs.

Dimensions


Single unit

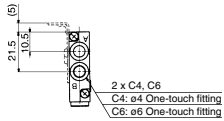


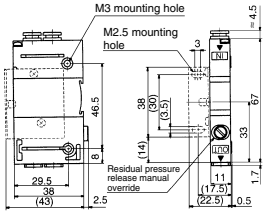


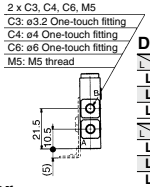

Manifold



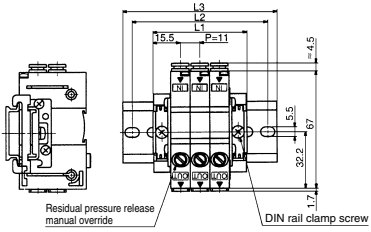

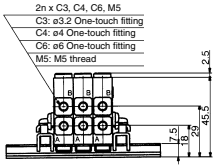

Dimensions

Formula L1 = 11n + 20 n: Station (Maximum 24)

n	1	2	3	4	5	6	7	8	9	10	11	12
L1	31	42	53	64	75	86	97	108	119	130	141	152
L2	50	62.5	75	87.5	100	112.5	125	125	137.5	150	162.5	175
L3	60.5	73	85.5	98	110.5	123	135.5	135.5	148	160.5	173	185.5

n	13	14	15	16	17	18	19	20	21	22	23	24
L1	163	174	185	196	207	218	229	240	251	262	273	284
L2	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300
L3	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5

How to Order

Double check block

VQ1000 − FPG − C4 M5 − F

IN side port size

M5	M5 thread
C3	ø3.2 One-touch fitting
C4	ø4 One-touch fitting
C6	ø6 One-touch fitting
N3	ø5/32" One-touch fitting
N7	ø1/4" One-touch fitting

OUT side port size


M5	M5 thread
C3	ø3.2 One-touch fitting
C4	ø4 One-touch fitting
C6	ø6 One-touch fitting
N3	ø5/32" One-touch fitting
N7	ø1/4" One-touch fitting

Option

Nil	None
F	With bracket
D	DIN rail mounting (For manifold)
N	Name plate

Note) When two or more symbols are specified, indicate them alphabetically.
Example) -DN

<Example>

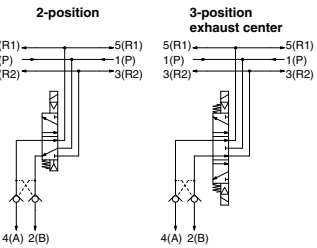

Manifold (DIN rail mounting)

VVQ1000 − FPG − 06

When ordering a double check block, order the DIN rail mounting [-D].

Stations

01	1 station
⋮	⋮
16	16 stations

<Ordering example>
VVQ1000-FPG-06···6-station manifold
∗**VQ1000-FPG-C4M5-D, 3 sets**
∗**VQ1000-FPG-C6M5-D, 3 sets**
} **Double check block**

Bracket Assembly


Part no.	Tightening torque
VQ1000-FPG-FB	0.22 to 0.25 N·m

⚠ Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for long periods of time. Check the leakage using neutral household detergent, such as dish washing soap. Also check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- Since One-touch fittings allow slight air leakage, screw piping (with M5 thread) is recommended when stopping the cylinder in the middle for long periods of time.
- Combining double check block with 3-position closed center or pressure center solenoid valve will not work.
- M5 fitting assembly is attached, not incorporated into the double check block. After screwing in the M5 fittings, mount the assembly on the double check block. {Tightening torque: 0.8 to 1.2 N·m}
- If the exhaust of the double check block is restricted too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.

VQ1000: Manifold Option/With Ejector Unit

An ejector unit can be mounted on the manifold base for a solenoid valve. Instead of mounting the valve and ejector unit separately, this option reduces piping, wiring and creates additional space savings.

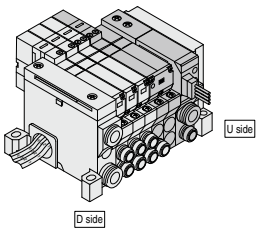

Note 1) SUP and EXH ports on the ejector unit manifold base are arranged on D-side alone. The end plate on the U-side is the same as that used in the L kit.
Note 2) Individual piping is provided for the supply and exhaust ports of the ejector unit.
Note 3) The manifold with an ejector unit is mounted from the U-side.
Note 4) One vacuum ejector unit corresponds to one station.
∗ Specify the mounting station by means of the manifold specification sheet.

Specifications

Ejector valve model	VVQ1000□-J□-□□1-A	VVQ1000□-J□-□□1-B
Nozzle diameter (mm)	0.7	1.0
Max. suction flow rate N (NL/min)	11	20
Max. vacuum pressure (mmHg)	–630	
Max. operating pressure (MPa)	0.7 (High-pressure type 0.8)	
Standard supply pressure (MPa)	0.5	
Operating temperature (°C)	5 to 50	


Maximum Number of Ejector Units

(Max. number of ejector units is subject to the number of valve stations.)

Max. number of ejector units	Max. number of mounted valves		
	F, P, T kit	S, G, J kit	L kit
1	11 (20)	7 (14)	7
2	10 (16)	6 (12)	6
3	9 (12)	5 (10)	5
4	8 (8)	4 (8)	—
5	4 (4)	3 (4)	—

Note) The max. number of mounted valves applies to double wiring. Parenthesized numbers apply to single wiring. Please contact SMC for conditions other than the above or mixed wiring.

Dimensions

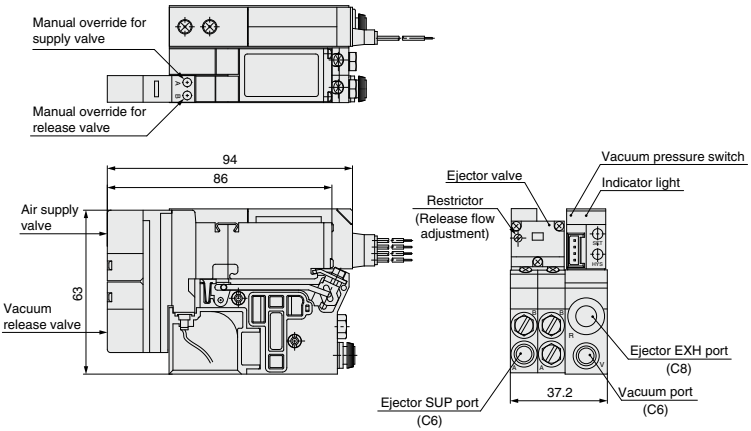

How to Order

VV5Q11−05C6FU0 −J P 1 S

Vacuum switch

Nil	None
P	With

Number of ejectors

1 to **5**

Others, option symbols: to be indicated alphabetically.


Example)

VV5Q11-05C6FU0-JP1 ····· **1 set–Manifold part no.**
- ∗**VQ1100-51** ····· **2 sets–Valve part no. (Stations 1 to 2)**
- ∗**VQ1200-51** ····· **2 sets–Valve part no. (Stations 3 to 4)**
- ∗**VVQ1000-J1-51-A** ····· **1 set–Ejector valve part no.**
- ∗**ZSE1-00-15CL** ····· **1 set–Vacuum switch part no.**

Note 1) Count one ejector unit as one manifold station.
Note 2) The ejector unit is mounted next to the U-side end plate.
Note 3) The U-side end plate is used exclusively for ejector units. (Without P and R port)
Note 4) The dimension of manifold with an ejector unit is different from the standard dimension. See the formula for calculating the dimensions for each kit.

How to Order Ejector Valves

VVQ1000 □ – J 1 – 5 C 1 – A

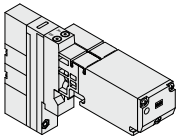

Function

Symbol	Specifications	DC	AC
Nil	Standard	(0.4 W) ○	○ Note 1)
B	High-speed response type	(0.95 W) ○	—
K	High-pressure type (0.8 MPa)	(0.95 W) ○	—
N	Negative common	○	—

Note 1) For power consumption of AC type, refer to page 381.
Note 2) When two or more symbols are specified, indicate them alphabetically. Combination of [B] and [K] is not possible.

Coil voltage

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Manifold

1	Plug-in unit

Specifications


Symbol	Nozzle diameter	Vacuum release valve
A	0.7	With
B	1.0	

Manual override

Nil	Non-locking push type
B	Locking type (Tool required)
C	Locking type (Manual)
D	Slide locking type (Manual)

How to Order Vacuum Pressure Switches

ZSE1 – 00 – 15 CL

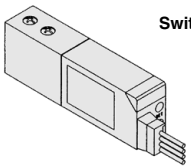

Switch spec./Voltage (Solid state: 12 to 24 VDC)

14	1 setting, Without analog output, 3 revolution adjustment
15	1 setting, Without analog output, 200° adjustment
16	2 setting, Without analog output, 3 revolution adjustment
17	2 setting, Without analog output, 200° adjustment
18	1 setting, With analog output, 3 revolution adjustment
19	1 setting, With analog output, 200° adjustment

Wiring specifications

Nil	Grommet type, Lead wire length 0.6 m
L	Grommet type, Lead wire length 3 m
C	Connector type, Lead wire length 0.6 m
CL	Connector type, Lead wire length 3 m
CN	Without connector Note)

Note) When ordering the switch with 5 m lead wire length, order separately the switch without connector and the connector. (Refer to the below.) Besides, refer to the Vacuum Equipment (SMC website) for details.

How to Order Connectors

- Without lead wire (Connector 1 pc., Socket 4 pcs.) ····· ZS-20-A
- With lead wire ····· ZS-20-5A-□


Lead wire length (m)

Nil	0.6
30	3
50	5


Flow/Exhaust Characteristics of Ejector Unit

(The flow rate characteristics are for the supply pressure of 0.5 MPa.)


Nozzle Diameter ø0.7
Exhaust Characteristics

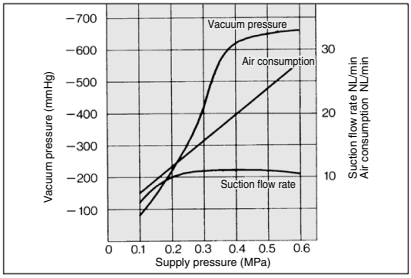


Flow Rate Characteristics

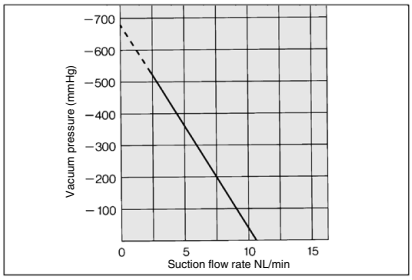

Nozzle iameter ø1.0
Exhaust Characteristics

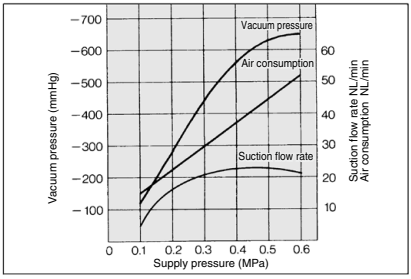

Flow Rate Characteristics

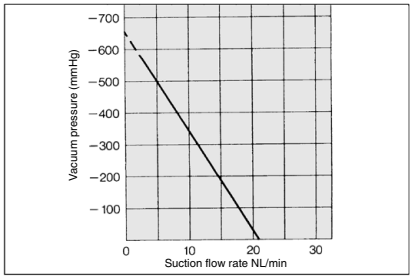


VQ2000: Manifold Optional Parts


Blanking plate assembly
VVQ2000-10A-1

Symbol



It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

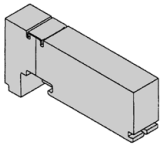




Individual SUP spacer
VVQ2000-P-1-$^{C8}_{N9}$

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.)
Block both sides of the station, for which the supply pressure from the individual SUP spacer is used, with SUP block plates. (Refer to the application example.)


- Specify the spacer mounting position and SUP block plate position by means of the manifold specification sheet. The block plate is used in one or two places for one set. (Two SUP block plates for blocking SUP station are attached to the individual SUP spacer.)
- As a standard, electric wiring is connected to the position of the manifold station where the individual SUP spacer is mounted.
- If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

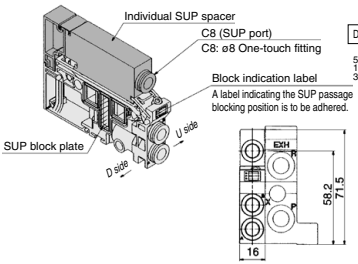

Individual EXH spacer
VVQ2000-R-1-$^{C8}_{N9}$

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.)
Block both sides of the individual valve EXH station. (Refer to the application example.)

- Specify the mounting position, as well as the EXH block base or EXH block plate position by means of the manifold specification sheet.
  The block plate is used in one or two places for one set. (Two EXH block plates for blocking EXH station are attached to the individual EXH spacer.)
- As a standard, electric wiring is connected to the position of the manifold station where the individual EXH spacer is mounted.
- If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.
- Do not install any back pressure check valve on the manifold station, on which the spacer is to be mounted. When installing the back pressure check valve on other manifold station, be sure to specify the manifold station position on the manifold specification sheet instead of ordering by specifying the manifold option symbol "B".

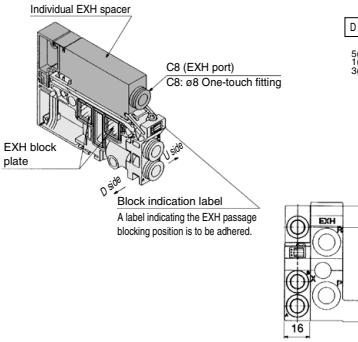


SUP block plate
VVQ2000-16A

When different pressures are supplied to a manifold, a SUP block plate is used to block the stations under different pressures.


- Specify the mounting position by means of the manifold specification sheet.

<Block indication label>

Indication labels to confirm the blocking position are attached. (Each for SUP passage and SUP/EXH passage blocking positions)

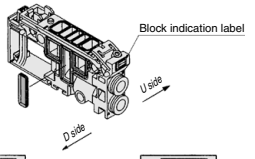

SUP passage blocked **SUP/EXH passage blocked**

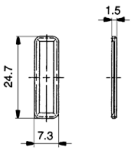

- When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.


EXH block plate
VVQ2000-19A

The EXH block plate is used between stations for which exhaust is desired to be divided when valve exhaust affects other stations configuration. It is also used in combination with an individual EXH spacer for individual exhaust.


- Specify the mounting position by means of the manifold specification sheet.

<Block indication label>

Indication labels to confirm the blocking position are attached. (Each for EXH passage and SUP/EXH passage blocking positions)

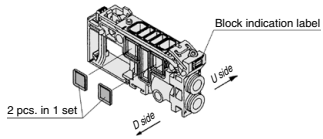


EXH passage blocked **SUP/EXH passage blocked**





- When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.

SUP stop valve spacer
VVQ2000-24A-1

A SUP stop valve spacer is mounted on a manifold block, making it possible to individually shut off supply air to each valve.
Enclosure: Dust-tight, Water-jet-proof (IP65) compliant

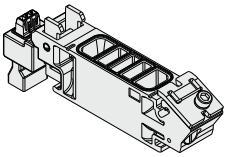

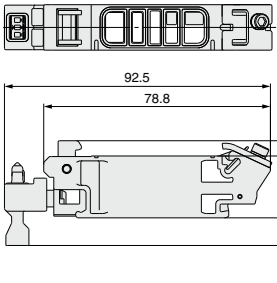

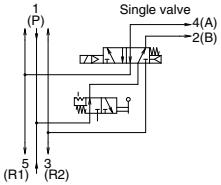


<Circuit diagram>
(Example of a spacer with a built-in single valve)


Back pressure check valve assembly [-B]
VVQ2000-18A

It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into R (EXH) port on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used or an exhaust center type solenoid valve is used.

* When ordering assemblies incorporated with a manifold, add suffix "-B" to the end of the manifold part number.

Note) When a check valve for back pressure prevention is desired and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting position by means of the manifold specification sheet.

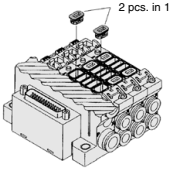



(Precautions)


1. The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air.
2. When a back pressure check valve is mounted, the effective area of the valve will decrease by about 20%.


Name plate [-N]
VVQ2000-N-Station (1 to Max. stations) (-X4□)

-X4A: For mounting slide locking type, manual, all single valves
-X4B: For mixed mounting of slide locking type, manual, single, double, and 3-position valves

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate and bend it as shown in the figure.

* When the slide locking type manual valve is mounted, it automatically will be "VVQ2000-N-n-X4A/X4B"
* When ordering this option incorporated with a manifold, suffix "-N" to the end of the manifold part number.




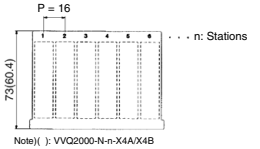


Note)( ): VVQ2000-N-n-X4A/X4B

Blanking plug (For One-touch fittings)
KQ2P-□

It is inserted into an unused cylinder port and SUP/EXH ports. Purchasing order is available in units of 10 pieces.



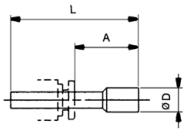


Dimensions


Applicable fitting size ød	Model	A	L	D	Applicable fitting size ød	Model	A	L	D
4	**KQ2P-04**	16	32	6	5/32"	**KQ2P-03**	16	32	6
6	**KQ2P-06**	18	35	8	1/4"	**KQ2P-07**	18	35	8.5
8	**KQ2P-08**	20.5	39	10	5/16"	**KQ2P-09**	20.5	39	10
10	**KQ2P-10**	22	43	12	3/8"	**KQ2P-11**	22	43	11.5

Port plug
VVQ1000-58A

The plug is used to block the cylinder port.

* When ordering a plug incorporated with a manifold, indicate "CM" for the port size of the manifold part number, as well as, the mounting position and number of stations and cylinder port mounting positions, A and B by means of the manifold specification sheet.






VQ2000: Manifold Optional Parts


DIN rail mounting bracket [-D/-D0/-D□]
VVQ2000-57A

It is used for mounting a manifold on a DIN rail.

* When ordering this option incorporated with a manifold, suffix "-D" to the end of the manifold part number.

1 set of DIN rail mounting bracket is used for 1 manifold (2 DIN rail mounting brackets).

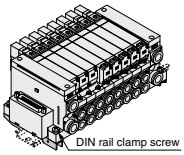



Direct EXH outlet with built-in silencer [-S]


This is a type with an exhaust port atop the manifold end plate. The built-in silencer exhibits an excellent noise suppression effect. (Noise reduction: 30 dB)

* When ordering this option incorporated with a manifold, suffix "-S" to the end of the manifold part number.

Note 1) A large quantity of drainage generated in the air source results in exhaust of air together with drainage.


Note 2) When used in combination with "W" (IP65 specification), keep the exhaust port from coming into direct contact with water or other liquids. (T, L, S, and M kits)

● Refer to page 443 for maintenance.

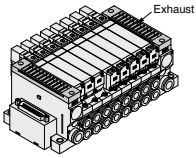

Silencer (For EXH port)

This silencer is to be inserted into the EXH port (One-touch fittings).




Dimensions

Series	Applicable fitting size **ød**	Model	**A**	**L**	**D**	Effective area (mm²) (Cv factor)	Noise reduction (dB)
VQ2000	10	AN20-C10	36.5	57.5	16.5	30	30

Elbow fitting assembly
VVQ2000-F-L(C4/C6/C8/N3/N7/N9)

It is used for piping that extends upward or downward from the manifold.
When not installed in the manifold stations, specify the assembly part number and the mounting position by means of the manifold specification sheet.



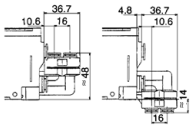


Dual flow fitting assembly
VVQ2000-52A-$^{C10}_{N11}$

This is a fitting to multiply the flow rate by combining the outputs of 2-valve stations. It is used for driving a large bore cylinder. This is a One-touch fitting for a port size of ø10 or ø3/8".

* The port size for the manifold part number is "MM".
  Clearly indicate the dual flow fitting assembly part number and specify the mounting position by means of the manifold specifications.







Manifold Option

Double check block (Separated) for VQ2000
VQ2000-FPG-□□-□

It is mounted on the outlet side piping to keep the cylinder in the intermediate position for a long time. Combining the double check block with a 3-position exhaust center solenoid valve will enable the cylinder to stop in the middle or maintain its position for long periods of time.
The combination with a 2-position single/double solenoid valve will prevent the dropping at the cylinder stroke end when the SUP residual pressure is released.

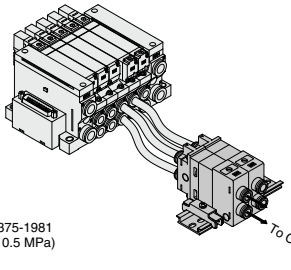

<Circuit diagram>

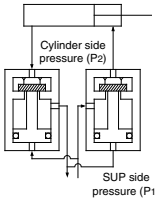


Specifications

Max. operating pressure	0.8 MPa
Min. operating pressure	0.15 MPa
Ambient and fluid temp.	–5 to 50°C
Flow rate characteristics: C	3.0 dm³/(s·bar)
Max. operating frequency	180 c.p.m


Note) Based on JIS B 8375-1981
(Supply pressure: 0.5 MPa)

Dimensions

Single unit

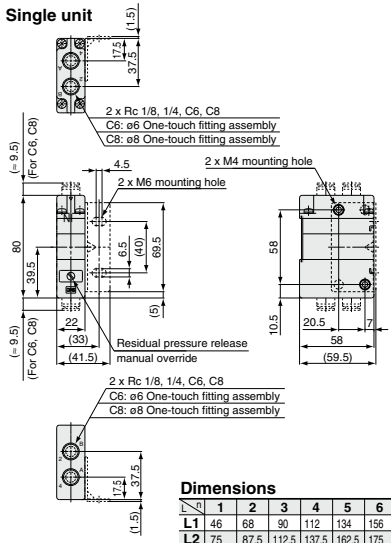

Manifold

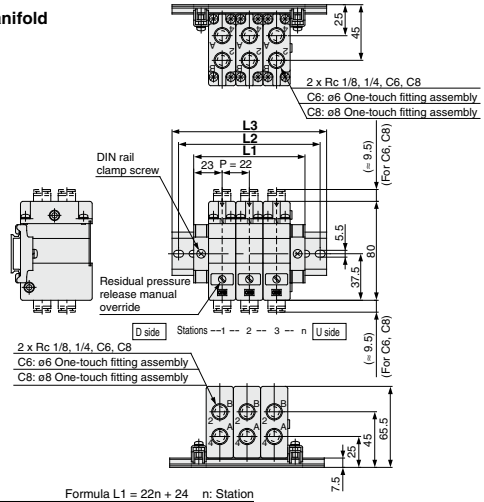

Dimensions Formula L1 = 22n + 24 n: Station

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	46	68	90	112	134	156	178	200	222	244	266	288	310	332	354	376
L2	75	87.5	112.5	137.5	162.5	175	200	225	250	262.5	287.5	312.5	337.5	362.5	375	400
L3	85.5	98	123	148	173	185.5	210.5	235.5	260.5	273	298	323	348	373	385.5	410.5

How to Order

Double check block

VQ2000-FPG- 01 01 - F

IN side port size

01	Rc 1/8
02	Rc 1/4
C6	ø6 One-touch fitting
C8	ø8 One-touch fitting
N7	ø1/4" One-touch fitting
N9	ø5/16" One-touch fitting

OUT side port size


01	Rc 1/8
02	Rc 1/4
C6	ø6 One-touch fitting
C8	ø8 One-touch fitting
N7	ø1/4" One-touch fitting
N9	ø5/16" One-touch fitting

Option

Nil	None
D	DIN rail mounting (For manifold)
F	With bracket
N	Name plate

Note) When two or more symbols are specified, indicate them alphabetically.
Example) -DN

<Example>

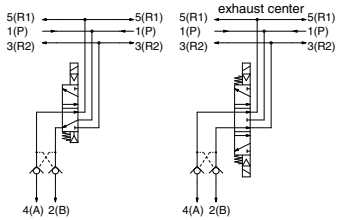

Manifold (DIN rail mounting)

VVQ2000-FPG- 06

Stations

01	1 station
⋮	⋮
16	16 stations

When ordering a double check block, order the DIN rail mounting [-D].

<Ordering Example>
VVQ2000-FPG-06···6-station manifold

- ∗**VQ2000-FPG-C6C6-D, 3 sets**
- ∗**VQ2000-FPG-C8C8-D, 3 sets**

} **Double check block**

Bracket Assembly

Part no.	Tightening torque
VQ2000-FPG-FB	0.8 to 1.0 N·m

⚠ Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for long periods of time. Check the leakage using neutral household detergent, such as dish washing soap. Also check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- Since One-touch fittings allow slight air leakage, screw piping is recommended when stopping the cylinder in the middle for long periods of time.
- Combining double check block with 3-position closed center or pressure center solenoid valve will not work.
- When fittings, etc. are being screwed to the double check block, tighten them with the torque below.

Connection threads	Proper tightening torque (N·m)
Rc 1/8	7 to 9
Rc 1/4	12 to 14

- If the exhaust of the double check block is restricted too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.


Manifold Option


Double check block (Direct mounting)
VVQ2000-23A-C4

Symbol	Port size	Piping direction
C3	With One-touch fitting for ø 3.2	Top
C4	With One-touch fitting for ø 4	Top
C6	With One-touch fitting for ø 6	Top
C8	With One-touch fitting for ø 8	Top
B3	With One-touch fitting for ø 3.2	Bottom
B4	With One-touch fitting for ø 4	Bottom
B6	With One-touch fitting for ø 6	Bottom
B8	With One-touch fitting for ø 8	Bottom

It is mounted directly on the manifold to keep the cylinder in the intermediate position for a long time. Combining the double check block with a built-in pilot type double check valve and a 3-position exhaust center solenoid valve will enable the cylinder to stop in the middle or maintain its position for long periods of time.
The combination with a 2-position single/double solenoid valve will permit this block to be used for preventing the dropping at the cylinder stroke end when the SUP residual pressure is released.

<Check valve operation principle>

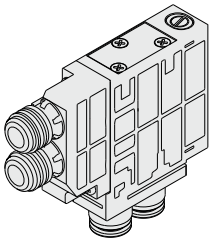

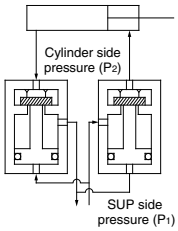


Specifications

Max. operating pressure	0.7 MPa
Min. operating pressure	0.15 MPa
Ambient and fluid temperature	–5 to 50°C
Flow rate characteristics: C	1.8 dm³/(s·bar)
Max. operating frequency	180 c.p.m


Dimensions

Single unit

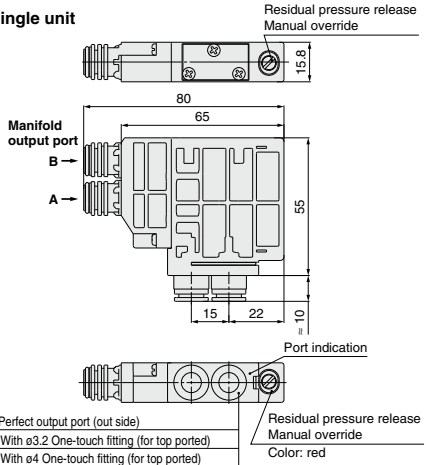

2 x Perfect output port (out side)
C3: With ø3.2 One-touch fitting (for top ported)
C4: With ø4 One-touch fitting (for top ported)
C6: With ø6 One-touch fitting (for top ported)
C8: With ø8 One-touch fitting (for top ported)
B3: With ø3.2 One-touch fitting (for bottom ported)
B4: With ø4 One-touch fitting (for bottom ported)
B6: With ø6 One-touch fitting (for bottom ported)
B8: With ø8 One-touch fitting (for bottom ported)

When the manifold is mounted.

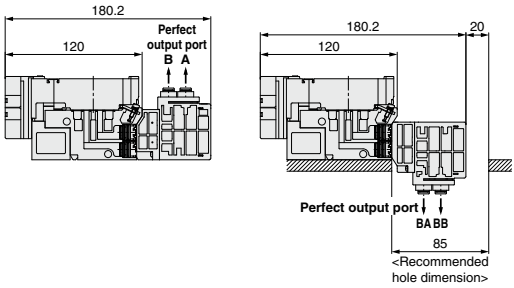


Top ported (VVQ2000-23A-C□) **Bottom ported (VVQ2000-23A-B□)**

<Port indication>

Piping direction	Manifold output port	Perfect output port
Top	**A**	**A**
	B	**B**
Bottom	**A**	**BA**
	B	**BB**

<Example>

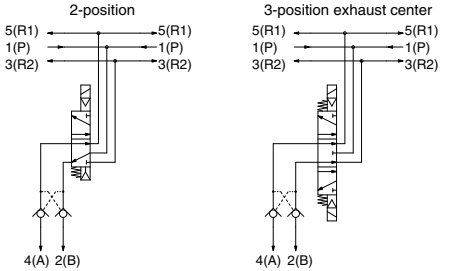

⚠Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for long periods of time. Check the leakage using neutral household detergent, such as dish washing soap.
  Also check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- Since zero air leakage is not guaranteed, it is sometimes not possible to hold a stop position for long periods of time.
- Combining double check block with 3-position closed center or pressure center solenoid valve will not work.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.
- If the exhaust of the double check block is restricted too much, the cylinder may not operate properly and may not stop intermediately.
- The perfect output port may vary depending on the piping direction. Perform the piping work after checking the port indication.

Plug-in Unit
Base Mounted
VQ1000 Series

[Option]

How to Order Valves

30 – VQ 1 [1] 0 [0] [ ] – [5] [ ] [ ] 1 – [ ]

(A) (B) (C) (D) (E) (F) (G)

Conforming to UL standard

VQ1000 series

(A) Type of actuation

1	2-position single (A)4 2(B) (R1)5 1 3(R2) (P)	Note) **A**	4-position dual 3-port valve (A) 4(A) 2(B) 5(R1) 1(P) 3(R2) N.C. N.C.
2	2-position double (Metal) (A)4 2(B) (R1)5 1 3(R2) (P)	Note) **B**	4-position dual 3-port valve (B) 4(A) 2(B) 5(R1) 1(P) 3(R2) N.O. N.O.
	2-position double (Rubber) (A)4 2(B) (R1)5 1 3(R2) (P)	Note) **C**	4-position dual 3-port valve (C) 4(A) 2(B) 5(R1) 1(P) 3(R2) N.C. N.O.
3	3-position closed center (A)4 2(B) (R1)5 1 3(R2) (P)	Note) Rubber seal only	
4	3-position exhaust center (A)4 2(B) (R1)5 1 3(R2) (P)		
5	3-position pressure center (A)4 2(B) (R1)5 1 3(R2) (P)		

(B) Seal

0	Metal seal
1	Rubber seal

(C) Function

Nil	Standard (0.4 W)
B	High-speed response type (0.95 W)
K Note 2)	High-pressure type (1.0 MPa, 0.95 W)
N Note 3)	Negative common
R Note 4)	External pilot

Note 1) When two or more symbols are specified, indicate them alphabetically. However, combination of "B" and "K" is not possible.
Note 2) Metal seal only
Note 3) When "-COM." is specified for the SI unit, select and mount the valve of negative common.
Note 4) Dual 3-port is not applicable.

(D) Coil voltage

5 Note)	24 VDC
6	12 VDC

Note) Only 24 VDC is available with the S kit.


(E) Light/surge voltage suppressor

Nil	Yes
E Note1, 2)	None (Non-polar)


Note 1) Not applicable to the S kit.
Note 2) A combination of "Function N (Negative common)" and "E" is unavailable.
Since "E" has no polarity, it can also be used as a negative common. Selection of "Function N" is not required.

(F) Manual override


Nil: Non-locking push type (Tool required)




B: Locking type (Tool required)



C: Locking type (Manual)



D: Slide locking type (Manual)

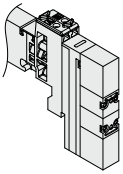

(G) CE-compliant

Nil	—
Q	CE-compliant

Refar to the standard product for specifications and dimensions.

Plug-in Unit
Base Mounted
VQ2000 Series

[Option]

How to Order Valves

30 – VQ 2 [1] 0 [0] [ ] – [5] [ ] [ ] 1 – [ ]

Ⓐ Ⓑ Ⓒ Ⓓ Ⓔ Ⓕ Ⓖ

Conforming to UL standard

VQ2000 series

Ⓐ Type of actuation

1	2-position single (A)4 2(B) (R1)5 1 3(R2) (P)	Note) **A**	4-position dual 3-port valve (A) 4(A) 2(B) 5(R1) 1(P) 3(R2) N.C. N.C.
2	2-position double (Metal) (A)4 2(B) (R1)5 1 3(R2) (P)	Note) **B**	4-position dual 3-port valve (B) 4(A) 2(B) 5(R1) 1(P) 3(R2) N.O. N.O.
	2-position double (Rubber) (A)4 2(B) (R1)5 1 3(R2) (P)	Note) **C**	4-position dual 3-port valve (C) 4(A) 2(B) 5(R1) 1(P) 3(R2) N.C. N.O.
3	3-position closed center (A)4 2(B) (R1)5 1 3(R2) (P)	Note) Rubber seal only	
4	3-position exhaust center (A)4 2(B) (R1)5 1 3(R2) (P)		
5	3-position pressure center (A)4 2(B) (R1)5 1 3(R2) (P)		

Ⓑ Seal

0	Metal seal
1	Rubber seal

Ⓒ Function

Nil	Standard (0.4 W)
B	High-speed response type (0.95 W)
K Note 2)	High-pressure type (1.0 MPa, 0.95 W)
N Note 3)	Negative common
R Note 4)	External pilot

Note 1) When two or more symbols are specified, indicate them alphabetically. However, combination of "B" and "K" is not possible.
Note 2) Metal seal only
Note 3) When "-COM." is specified for the SI unit, select and mount the valve of negative common.
Note 4) Dual 3-port type is not applicable.

Ⓓ Coil voltage

5 Note)	24 VDC
6	12 VDC

Note) Only 24 VDC is available with the S kit.


Ⓔ Light/surge voltage suppressor

Nil	Yes
E Note1, 2)	None (Non-polar)


Note 1) Not applicable to the S kit.
Note 2) A combination of "Function N (Negative common)" and "E" is unavailable.
Since "E" has no polarity, it can also be used as a negative common. Selection of "Function N" is not required.

Ⓕ Manual override


Nil: Non-locking push type (Tool required)




B: Locking type (Tool required)



C: Locking type (Manual)



D: Slide locking type (Manual)

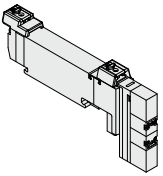

Ⓖ CE-compliant

Nil	—
Q	CE-compliant

Refar to the standard product for specifications and dimensions.


Specific Product Precautions 1

Be sure to read this before handling the products.
Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

Light/Surge Voltage Suppressor

⚠Caution


The lighting positions are concentrated on one side for both single solenoid type and double solenoid type. In the double solenoid type, A side and B side energization are indicated by two colors which match the colors of the manual overrides.

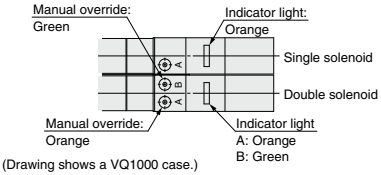


(Drawing shows a VQ1000 case.)

DC circuit diagram

Single solenoid

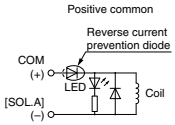

Double solenoid

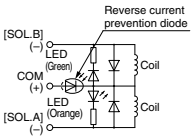


Note) A-side energization: A light (Orange) illuminates.
B-side energization: B light (Green) illuminates.
With wrong wiring prevention (stop diode) mechanism
With a surge absorption (surge absorption diode) mechanism

Manual Override

⚠Warning

Without an electric signal for the solenoid valve the manual override is used for switching the main valve. Push type is standard. (Tool required) Locking type is semi-standard. (Tool required/Manual)


■ **Push type (Tool required)**



VQ1000 **VQ2000**

Push down on the manual override with a small screwdriver, etc. until it stops. Release the screwdriver and the manual override will return.


■ **Locking type (Tool required) <Semi-standard>**

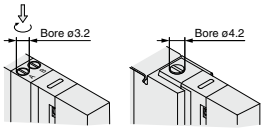

VQ1000 **VQ2000**

Push down on the manual override with a flat head screwdriver until it stops. Turn it clockwise by 90° to lock it. Turn it counterclockwise to release it.

■ **Locking type (Manual) <Semi-standard>**

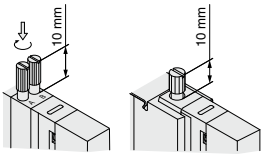

VQ1000 **VQ2000**

Push down on the manual override with a small flat head screwdriver or with your fingers until it stops. Turn it clockwise by 90° to lock it. Turn it counterclockwise to release it.

⚠Caution
Do not apply excessive torque when turning the locking type manual override. (0.1 N·m or less)


VQ1000/2000 Series
Specific Product Precautions 2

Be sure to read this before handling the products.
Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

Manual Override

⚠Warning


■ **Slide locking type (Manual) <Semi-standard>**

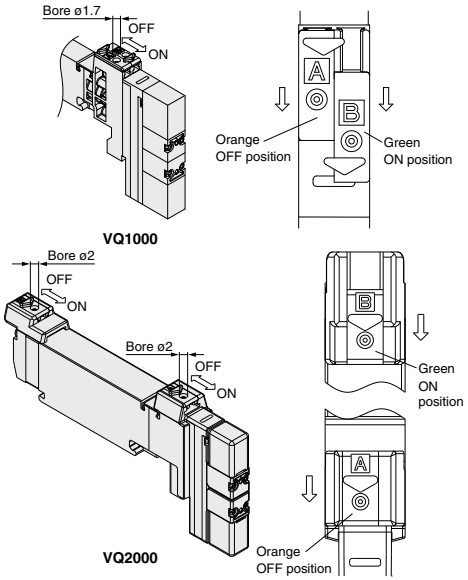

The manual override is locked by sliding it all the way to the pilot valve side (ON side) with a small flat head screwdriver or finger. Slide it to the fitting side (OFF side) to release it. In addition, it can also be used as a push type by using a screwdriver, etc., of ø1.7 or less. (ø2 or less for VQ2000).

How to Mount/Remove Solenoid Valves

⚠Caution

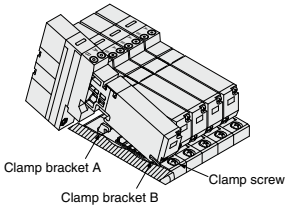

Removing

1. Loosen the clamp screw until it turns freely. (The screw is captive.)
2. Lift the coil side of the valve body while pressing down slightly on the screw head and remove it from the clamp bracket B. When the screw head cannot be pressed easily, gently press the area near the manual override of the valve.

How to Mount/Remove Solenoid Valves

⚠Caution

Mounting

1. Press down on the clamp screw. Clamp bracket A opens. Diagonally insert the hook on the valve end plate side into clamp B.
2. Press the valve body downward. (When the screw is released, it will be locked by clamp bracket A.)
3. Tighten the clamp screw. (Proper tightening torque: VQ1000, 0.25 to 0.35 N·m; VQ2000, 0.5 to 0.7 N·m.)


⚠Caution

Dust on the sealing surface of the gasket or solenoid valve can cause air leakage.

Replacement of Cylinder Port Fittings

⚠Caution

The cylinder port fittings are a cassette for easy replacement. The fittings are blocked by a clip. Take out the clip with a flat head screwdrier, etc., then replace the fittings.
For mounting, insert the fitting assembly until it strikes against the inside wall and then insert the clip to the specified position.

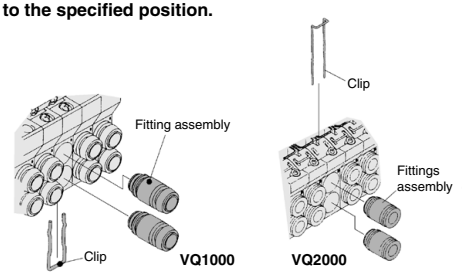

Applicable tubing O.D.	Fitting assembly part no.	
	VQ1000	**VQ2000**
Applicable tubing ø3.2	VVQ1000-50A-C3	—
Applicable tubing ø4	VVQ1000-50A-C4	VVQ1000-51A-C4
Applicable tubing ø6	VVQ1000-50A-C6	VVQ1000-51A-C6
Applicable tubing ø8	—	VVQ1000-51A-C8
M5	VVQ1000-50A-M5	—
Applicable tubing ø1/8"	VVQ1000-50A-N1	—
Applicable tubing ø5/32"	VVQ1000-50A-N3	VVQ1000-51A-N3
Applicable tubing ø1/4"	VVQ1000-50A-N7	VVQ1000-51A-N7
Applicable tubing ø5/16"	—	VVQ1000-51A-N9

∗ Refer to "Manifold Optional Parts" on pages 429, 430, 436 for other types of fittings.

⚠Caution

1. Use caution that O-rings must be free from scratches and dust. Otherwise, air leakage may result.
2. After screwing in the fittings, mount the M5 fitting assembly on the manifold base. (Tightening torque: 0.8 to 1.2 N·m)
3. Purchasing order is available in units of 10 pieces.

VQ1000/2000 Series
Specific Product Precautions 3


Be sure to read this before handling the products.
Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

How to Mount/Remove DIN Rail

⚠Caution


Removing

1. Loosen the clamp screw on side (a) of the end plate on both sides.
2. Lift side (a) of the manifold base and slide the end plate in the direction of (2) shown in the figure to remove.

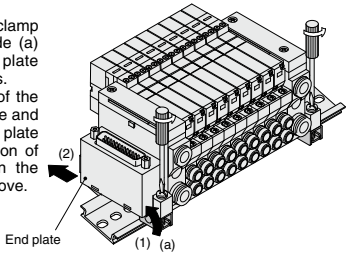

Mounting

1. Hook side (b) of the manifold base on the DIN rail.
2. Press down side (a) and mount the end plate on the DIN rail. Tighten the clamp screw on side (a) of the end plate. (Proper tightening torque: VQ1000, 1.1 to 1.3 N·m; VQ2000, 1.4 to 1.6 N·m.)

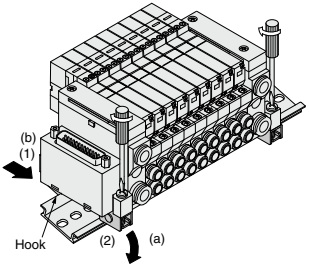

IP65 Enclosure

⚠Caution

Wiring connection for models conforming to IP65 should also have enclosures equivalent to or of stricter than IP65.

Built-in Silencer Element

⚠Caution


A filter element is incorporated in the end plate on both sides of the maifold base. A dirty and choked element may reduce cylinder speed or cause malfunction. Clean or replace the dirty element.

Element Part No.

Type	Element part no.	
	VQ1000	**VQ2000**
Built-in silencer, direct exhaust	VVQ1000-82A-1	VVQ2000-82A-1

The minimum order quantity is 10 pcs.

Remove the cover from the top of the end plate and remove the old element with a flat head screwdriver, etc.

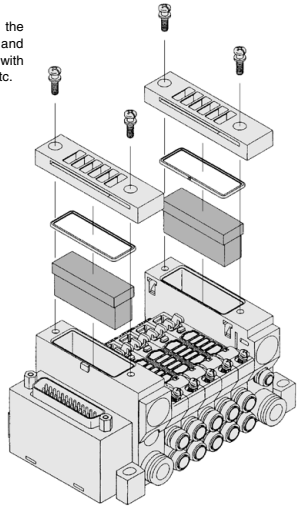

How to Calculate Flow Rate

Refer to front matters for obtaining the flow rate.

■ **Trademark**
DeviceNet® is a registered trademark of ODVA, Inc.
CompoNet® is a registered trademark of ODVA, Inc.

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP