ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Tektronix 2225* at our website: *Click HERE*

TEK

070-6298-01
PRODUCT GROUP 46

2225 OSCILLOSCOPE AND OPTIONS

OPERATOR'S MANUAL

First Printed **October 1986**
UK Revised **October 1987**

Tektronix®
COMMITTED TO EXCELLENCE

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Copyright © Tektronix, Inc., 1987, 1986. All rights reserved. Contents of this publication may not be reproduced in any form without the written permission of Tektronix, Inc.

Products of Tektronix, Inc. and its subsidiaries are covered by U.S. and foreign patents issued and pending.

Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. TEKTRONIX, TEK, PLOT 10, TEKTEST, SCOPE-MOBILE, and ® are registered trademarks. For further information, contact Tektronix, Inc. Corporate Offices, P.O. Box 500, Beaverton, OR 97077. Phone: (503) 627-7111; TWX: (910) 467-8708; TLX: 151754. Subsidiaries and distributors worldwide.

Printed in U.K.

INSTRUMENT SERIAL NUMBERS

Each instrument has a serial number on a panel insert, tag, or stamped on the chassis. The first number or letter designates the country of manufacture. The last five digits of the serial number are assigned sequentially and are unique to each instrument. Those manufactured in the United States have six unique digits.

B000000	Tektronix, Inc., Beaverton, Oregon, USA
100000	Tektronix, Guernsey, Ltd., Channel Islands
200000	Tektronix United Kingdom, Ltd, London
300000	Sony/Tektronix, Japan
700000	Tektronix Holland, NV, Heerenveen, The Netherlands

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

NOTICE to the user/operator:

The German Postal Service requires that Systems assembled by the operator/user of this instrument must also comply with Postal Regulation, Vfg. 1046/1984, Par. 2, Sect. 1.

HINWEIS für den Benutzer/Betreiber:

Die vom Betreiber zusammengestellte Anlage, innerhalb derer dies Gerät eingesetzt wird, muß ebenfalls den Voraussetzungen nach Par. 2, Ziff. 1 der Vfg. 1046/1984 genugen.

NOTICE to the user/operator:

The German Postal Service requires that this equipment, when used in a test setup, may only be operated if the requirements of Postal Regulation, Vfg. 1046/1984, Par. 2, Sect. 1.7.1 are complied with.

HINWEIS für den Benutzer/Betreiber:

Dies Gerät darf in Meßaufbauten nur betrieben werden, wenn die Voraussetzungen des Par. 2, Ziff. 1.7.1 der Vfg. 1046/1984 eingehalten werden.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Certificate of the Manufacturer/Importer

We hereby certify that the **2225 OSCILLOSCOPE**

AND ALL INSTALLED OPTIONS

complies with the RF Interference Suppression requirements of Amtsbl.-Vfg 1046/1984.

The German Postal Service was notified that the equipment is being marketed.

The German Postal Service has the right to re-test the series and to verify that it complies.

TEKTRONIX

Bescheinigung des Herstellers/Importeurs

Hiermit wird bescheinigt, daß der/die/das **2225 OSCILLOSCOPE**

AND ALL INSTALLED OPTIONS

in Übereinstimmung mit den Bestimmungen der Amtsblatt-Verfügung 1046/1984 funkentstört ist.

Der Deutschen Bundespost wurde das Inverkehrbringen dieses Gerätes angezeigt und die Berechtigung zur Überprüfung der Serie auf Einhalten der Bestimmungen eingeräumt.

TEKTRONIX

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

CONTENTS

	Page
List of Illustrations	iii
List of Tables	iii
Operator's Safety Summary	iv
The 2225 Oscilloscope	vi

SECTION 1—Preparation for Use

Safety	1-1
Line Voltage Selection	1-1
Line Fuse	1-2
Power Cord	1-5
Instrument Cooling	1-5
Initial Start-up	1-5

SECTION 2—Operation

Front Panel Organization	2-1
Controls, Connectors, and Indicators	2-1
Learning the Controls	2-5
Display Controls	2-6
Vertical Controls	2-7
Input Coupling	
Channel Selection	
ADD and INVERT	
CHOP or ALT?	
Increasing the Sensitivity	
Horizontal Controls	2-8
Sweep-Speed Selection	
Magnifying Waveform Details	
Trigger Controls	2-9
Which Mode to Use	
Source	
Coupling	
Slope	
Level	
Holdoff	
Connecting Signals	2-11
Waveform Fidelity and Probe Grounds	
Probe Compensation	
Probe Handling	
Coaxial Cables	

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 3—Applications
Amplitude Measurements 3-1
Peak-to-Peak Voltage
Instantaneous Voltage
Algebraic Addition
Common-Mode Rejection
Amplitude Comparison (Ratio)
Time Measurements 3-7
Time Duration
Period and Frequency
Rise Time
Time Difference Between Pulses on Time-Related Signals
Phase Difference
Television Displays 3-15
TV Field Signals
TV Line Signals
Z-Modulation 3-16

SECTION 4—Checks and Adjustments
Trace Rotation 4-1
Probe Compensation 4-1

SECTION 5—Performance Characteristics

SECTION 6—Options and Accessories
Standard Accessories 6-1
Options 6-1
Optional Accessories 6-3

APPENDIX A—Magnified Sweep Speeds

APPENDIX B—Repackaging for Shipment

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ILLUSTRATIONS

Figure		Page
1-1	Voltage selector switch, fuse, and power-cord receptacle	1-4
3-1	Measuring peak-to-peak voltage on a waveform	3-1
3-2	Instantaneous voltage measurement	3-3
3-3	Common-mode rejection	3-5
3-4	Determining voltage ratio	3-6
3-5	Measuring time duration	3-8
3-6	Measuring rise time	3-9
3-7	Time difference between pulses on time-related signals	3-11
3-8	Phase difference	3-13
3-9	High-resolution phase difference	3-14
4-1	Probe compensation	4-2
4-2	Locating the low-frequency compensation adjustment	4-3
5-1	Derating curve for CH 1 OR X, CH 2 OR Y, and EXT INPUT connectors	5-7

TABLES

Table		Page
1-1	Power Plugs and Line Voltage Selection	1-3
2-1	Summary of Controls, Connectors, and Indicators	2-2
5-1	Electrical Characteristics	5-1
5-2	Environmental Characteristics	5-6
5-3	Mechanical Characteristics	5-7
6-1	Power Cords and Fuses	6-2
6-2	Optional Accessories	6-3

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

OPERATOR'S SAFETY SUMMARY

The general safety information in this summary is for both operating and servicing personnel. Specific warnings and cautions—found throughout the manual where they apply—do not appear in this summary.

Terms

In This Manual

CAUTION statements identify conditions or practices that could result in damage to the equipment or other property.

WARNING statements identify conditions or practices that could result in personal injury or loss of life.

As Marked on Equipment

CAUTION indicates a personal-injury hazard that is not immediately accessible as one reads the markings, or a hazard to property, including the equipment itself.

DANGER indicates a personal-injury hazard that is immediately accessible as one reads the marking.

Symbols

In This Manual



This symbol indicates applicable cautionary or other information. For maximum input voltage see Table 5-1.

As Marked on Equipment



DANGER—High voltage.



Protective ground (earth) terminal.



ATTENTION—Refer to manual.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Power Source

This product is intended to operate from a power source that does not apply more than 250 V rms between the supply conductors or between either supply conductor and ground. A protective ground connection, by way of the grounding conductor in the power cord, is essential for safe operation.

Grounding the Product

This product is grounded through the grounding conductor of the power cord. To avoid electrical shock, plug the power cord into a properly wired receptacle before making any connections to the product input or output terminals. A protective ground connection, by way of the grounding conductor in the power cord, is essential for safe operation.

Danger Arising From Loss of Ground

Upon loss of the protective-ground connection, all accessible conductive parts—including knobs and controls that may appear to be insulating—can render an electric shock.

Use the Proper Power Cord

Use only the power cord and connector specified for your product.

Use only a power cord that is in good condition.

Read Section 1 for power-cord and connector information.

Use the Proper Fuse

To avoid fire hazard, use only a fuse of the correct type, voltage rating and current rating specified on the back of your product and in Table 6-1.

Do Not Operate in an Explosive Atmosphere

To avoid explosion, do not operate this product in an explosive atmosphere unless it has been specifically certified for such operation.

Do Not Remove Covers or Panels

To avoid personal injury, do not remove the product covers or panels. Do not operate the product without the covers and panels properly installed.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THE 2225 OSCILLOSCOPE

The TEKTRONIX 2225 Oscilloscope is a rugged, lightweight, dual-channel, 50-MHz instrument that features a bright, sharply defined trace on an 80 by 100 mm cathode-ray tube (crt).

Its low-noise vertical system supplies calibrated deflection factors from 5 mV to 5 V per division at full bandwidth. Using the vertical magnification feature extends sensitivity to 500 μV per division—four times the maximum sensitivity of previous 2200-Series Oscilloscopes. This same magnification function permits independent bandwidth limiting for each channel. With it, a user can limit one channel's bandwidth to 5 MHz without affecting the bandwidth of the other channel.

Stable triggering is achieved over the full bandwidth of the vertical system. The flexibility and high sensitivity of the trigger system provide a range of conveniences such as hands-free triggering with the peak-to-peak automatic mode, independent selection of TV line and TV field triggering at any sweep speed, single-sweep triggering, and a variable holdoff control to facilitate triggering on complex waveforms. Besides having standard AC and DC signal coupling methods, the 2225 also gives the user the ability to filter out high-frequency and low-frequency components of the triggering signal. An external triggering signal or an external Z-axis modulation signal can be applied via a front-panel connector and the source-selector switches.

The horizontal system provides calibrated sweep speeds from 0.5 s to 50 ns per division. For greater measurement accuracy, a magnifier circuit extends the maximum sweep speed to 5 ns per division. Magnification is selected in three levels—X5, X10, and X50—and the magnified trace can be displayed either alone or together with the unmagnified trace. Displaying both the magnified and the unmagnified traces together—called Alternate Magnification mode—lets the user perform types of timing measurements that previously were only possible on oscilloscopes having dual time bases.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Accessories

The instrument is shipped with the following accessories—operators manual, two probe kits, a power cord, and a power-cord clamp. Part numbers for these standard accessories, as well as for other optional accessories are located in Section 6, *Options and Accessories*. The voltage-sensing, 10X attenuator probes were designed specifically to complement the performance of your 2225. These new probes are built with a sturdy tip that is also replaceable. Compensation is accomplished through a closable window on the probe body itself—thus eliminating the bulky compensation box from the front of the oscilloscope.

For More Information

Should you need additional information about your 2225 Oscilloscope or about other Tektronix products: contact the nearest Tektronix Sales Office or Distributor, consult the Tektronix product catalog, or, in the U.S., call the Tektronix National Marketing Center, toll free at 1-800-426-2200.

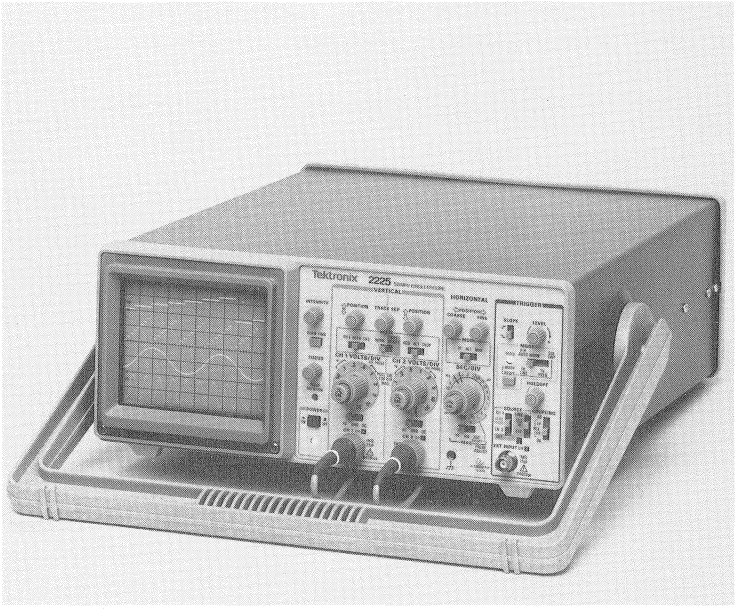

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 1

PREPARATION FOR USE

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

This section gives you important safety information and tells you how to proceed with initial start-up of the TEKTRONIX 2225 Oscilloscope.

SAFETY

Before connecting the 2225 Oscilloscope to a power source, read this entire section. Also refer to the Safety Summary at the front of this manual for power source, grounding, and other safety considerations pertaining to the use of the instrument. Ensure you have the training required to safely connect instrument inputs to the signals you will be measuring.

CAUTION

This instrument may be damaged if operated with the LINE VOLTAGE SELECTOR switch (on the rear panel) set for the wrong applied ac source voltage or if the wrong line fuse is installed.

LINE VOLTAGE SELECTION

The oscilloscope operates from either a 115-V or a 230-V nominal ac power line with any frequency from 48 Hz to 440 Hz. Before connecting the power cord to a power source, verify that the LINE VOLTAGE SELECTOR switch, located on the rear panel, is set correctly and that the proper line fuse is installed. Refer to Table 1-1, Figure 1-1, and the instrument rear panel.

To convert the 2225 for operation on the other line-voltage range, use a flat-head screwdriver to move the LINE VOLTAGE SELECTOR switch to the required position and install the appropriate fuse (listed on the rear panel and in Table 6-1). The detachable power cord may have to be replaced to match the particular power source.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com







LINE FUSE

The fuse holder is located on the rear panel and contains the line (mains) fuse. Use the following procedure to verify that the proper fuse is installed or to install a replacement fuse.

1. Unplug the power cord from the power source (if applicable).
2. Press in and slightly rotate the fuse-holder cap counterclockwise to release it.
3. Pull the cap (with the attached fuse inside) out of the fuse holder.
4. Verify that the fuse is the same type listed on the back of the instrument. The two types of fuses listed are not directly interchangeable; they require different types of fuse caps.
5. Reinstall the fuse (or replacement fuse) in the fuse-holder cap.
6. Replace the fuse holder and cap.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 1-1
Power Plugs and Line Voltage Selection

Plug Configuration	Power Option	Plug Type	Line Voltage Selector	Reference Standards[b]
	Std	United States 120 V	115V	ANSI C73.11 NEMA 5-15-P IEC 83 UL 198.6
	A1	Europe 220 V	230V	CEE (7), II, IV, VII IEC83 IEC 127
	A2	United Kingdom 240 V	230V[a]	BS 1363 IEC 83 IEC 127
	A3	Australia 240 V	230V	AS C112 IEC 127
	A4	North America 240 V	230V	ANSI C73.20 NEMA 6-15-P IEC 83 UL 198.6
	A5	Switzerland 220 V	230V	SEV IEC 127

[a] A 5 A, Type C fuse is installed inside the plug of the Option A2 power cord.

[b] Reference Standards Abbreviations:
ANSI —American National Standards Institute
AS —Standards Association of Australia
BS —British Standards Institution
CEE —International Commission on Rules for the Approval of Electric —Equipment
IEC —International Electrotechnical Commission
NEMA—National Electrical Manufacturer's Association
SEV —Schweizerischer Elektrotechnischer Verein
UL —Underwriters Laboratories Inc.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

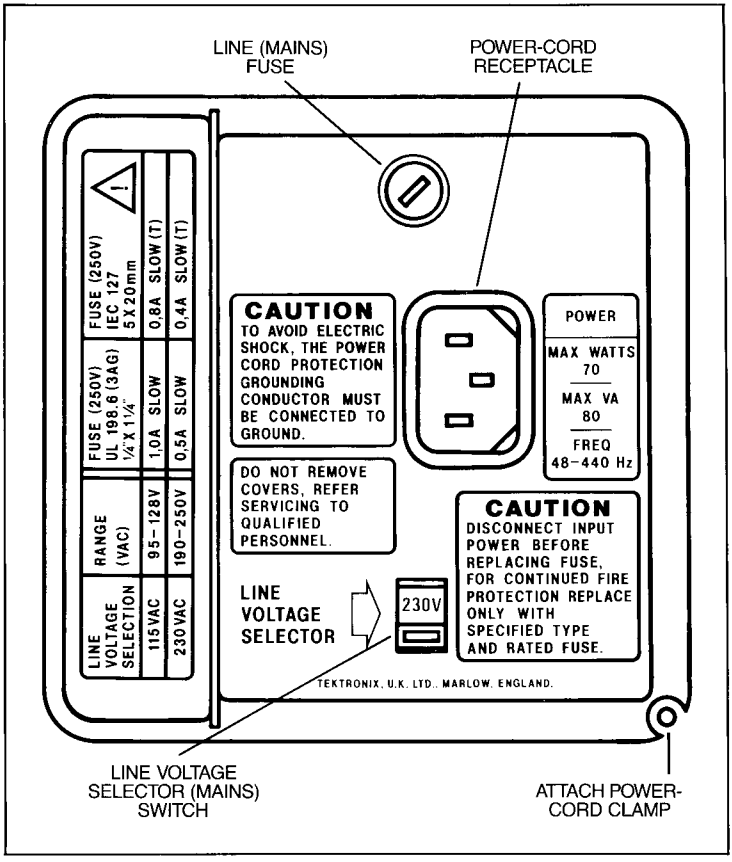


Figure 1-1. Voltage selector switch, fuse, and power-cord receptacle.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

POWER CORD

This instrument has a detachable, three-wire power cord with a three-contact plug for connection to both the power source and protective ground. The ground contact on the plug connects through the power-cord to the external metal parts of the instrument. For electrical-shock protection, insert this plug only into a power-source outlet that has a properly grounded protective-ground contact.

Instruments are shipped with the required power cord as ordered by the customer. Power-cord plug information is presented in Table 1-1, and part numbers are listed in Table 6-1.

After plugging the power cord into its receptacle, secure it to the rear panel using the plastic clamp, screw, and washer provided.

INSTRUMENT COOLING

Maintain adequate airflow to prevent instrument damage from internally generated heat. Before turning on the power, verify that the spaces around the air-intake holes on the sides and rear of the cabinet are free of any obstruction to airflow.

INITIAL START-UP

Up to now, you should have made the following preparations:

1. Read the safety information.
2. Verified that the LINE VOLTAGE SELECTOR switch is set for the source voltage to be used.
3. Verified the fuse.
4. Attached the power cord.
5. Ensured adequate ventilation around the instrument.
6. Plugged the power cord into the appropriate power-source outlet.

Now turn on your oscilloscope by pressing in the POWER button. Observe that the POWER-ON indicator, located below the button, illuminates.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 2

OPERATION

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

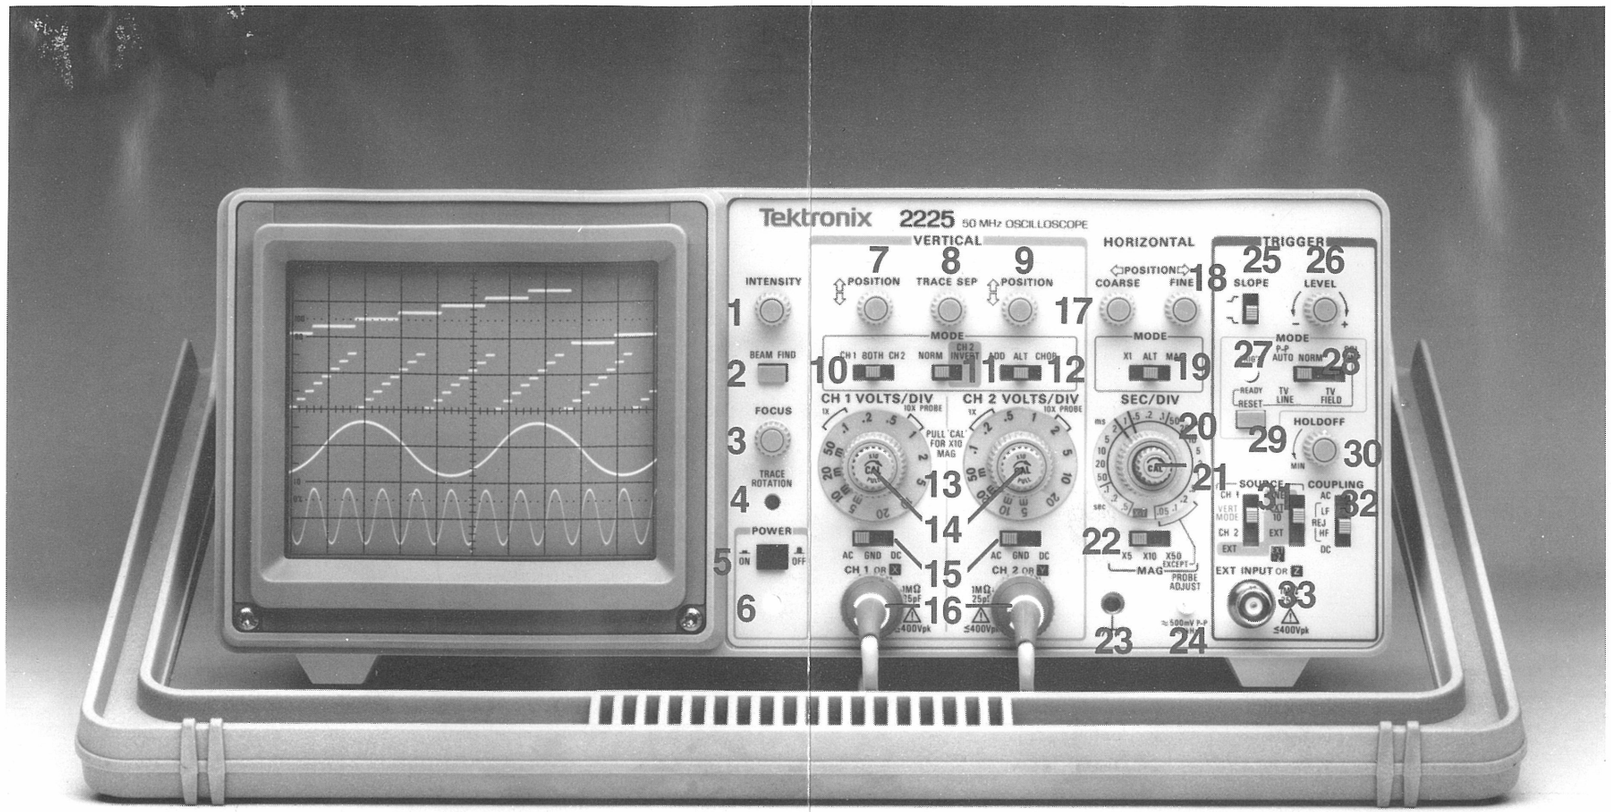

NOTE: Numbers on the instrument are keyed to Table 2-1.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

FRONT PANEL ORGANIZATION

The front panel on the 2225 is organized to make it easy for you to set up displays and make measurements. Referring to the foldout illustration at the front of this manual, or to the oscilloscope itself, notice that the front panel is partitioned into four major control sections—Display, VERTICAL, HORIZONTAL, and TRIGGER.

Just to the right of the cathode-ray tube (crt) screen are the Display controls. They are used to adjust brightness and focus of the trace, to align the trace horizontally, and to help you find off-screen signals quickly. These controls affect the display, but not the waveform.

Like any oscilloscope, the 2225 draws a graph of voltage as a function of time. The VERTICAL section, enclosed within shaded gray lines, contain the controls that define the voltage (or vertical) axis of the display. Also a part of this section are the two BNC input connectors, which are used to apply the signals that you want to view.

The HORIZONTAL controls are to the right of the VERTICAL section. They are used to set and move the time (or horizontal) axis for the displayed traces.

On the extreme right of the front panel, enclosed within shaded green lines, is the TRIGGER section. Trigger controls define the signals and the conditions that are needed to initiate (or trigger) every sweep across the time axis. An indicator light shows whether the sweep is validly triggered or not. At the bottom of the TRIGGER section is a BNC input connector that can be used to apply either an external trigger signal or an external Z-axis (display intensity) control signal.

CONTROLS, CONNECTORS, AND INDICATORS

Table 2-1 gives you a summary of all the controls, connectors, and indicators on your 2225 Oscilloscope. Following the table is a short procedure describing how to get a display. The remainder of this section offers suggestions and tips for using the controls to obtain the most effective displays and to make the most accurate measurements.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 2-1
Summary of Controls, Connectors, and Indicators

No.	Title	Function	Recommended Use
1	INTENSITY	Adjusts trace brightness.	Compensate for ambient lighting, trace speed, trigger frequency.
2	BEAM FIND	Compresses display to within CRT limits.	Locate off-screen phenomena.
3	FOCUS	Adjusts for finest trace thickness.	Optimize display definition.
4	TRACE ROTATION	Adjusts trace parallel to centerline.	Compensate for earth's field.
5	POWER	Turns power on and off.	Control power to the instrument.
6	Power Indicator	Illuminates when power is turned on.	Know power condition.
7, 9	POSITION	Moves trace up or down screen.	Position trace vertically and compensate for dc component of signal.
8	TRACE SEP	Moves the magnified trace vertically with respect to the unmagnified trace when HORIZONTAL MODE is set to ALT.	Position unmagnified and horizontally magnified traces for convenient viewing and measurement.
10	CH 1 - BOTH - CH 2	Selects signal inputs for display.	View either channel independently or both channels simultaneously.
11	NORM - INVERT	Inverts the Channel 2 signal display.	Provide for differential (CH 1 − CH 2) or summed (CH 1 + CH 2) signals when ADD is selected.
12	ADD - ALT - CHOP	ADD shows algebraic sum of CH 1 and CH 2 signals. ALT displays each channel alternately. CHOP switches between CH 1 and CH 2 signals during the sweep at 500 kHz rate.	Display summed or individual signals.
13	VOLTS/DIV	Selects vertical sensitivity.	Adjust vertical signal to suitable size.
14	Variable (CAL)	Provides continuously variable deflection factors between calibrated positions of the VOLTS/DIV switch. Reduces gain by at least 2.5:1.	Match signals for common-mode readings. Adjust height of pulse for rise-time calculations.
		The CAL control can be pulled out to vertically magnify the trace by a factor of 10. Limits bandwidth to 5 MHz.	Inspecting small signals.
15	AC-GND-DC	In AC, isolates dc component of signal. In GND, gives reference point and allows precharging of input-coupling capacitor. In DC, couples all components of signal.	Selects method of coupling input signals to the vertical deflection system.
16	CH 1 OR X CH 2 OR Y	Provides for input signal connections. CH 1 gives horizontal deflection when SEC/DIV is in X-Y.	Apply signals to the vertical deflection system.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 2-1 (cont'd)

No.	Title	Function	Recommended Use
17	POSITION COARSE	COARSE is convenient for moving unmagnified traces.	Control trace positioning in horizontal direction.
18	POSITION FINE	FINE is convenient for moving magnified traces when either ALT or MAG is selected.	
19	X1 - ALT - MAG	X1 displays only normal (horizontally unmagnified) waveform. ALT displays normal and magnified waveforms alternately. MAG displays only the magnified waveform.	Select normal, comparative or expanded waveforms.
20	SEC/DIV	Selects time-base speed.	Set horizontal speed most suited to requirements.
21	Variable (CAL)	Provides continuously variable uncalibrated sweep speeds to at least 2.5 times the calibrated setting.	Extend the slowest speed to at least 1.25 s/div.
22	MAG (X5 - X10 - X50)	Selects degree of horizontal magnification.	Examine small phenomena in detail.
23		Provides safety earth and direct connection to signal source.	Chassis ground connection.
24	PROBE ADJUST	Provides approximately 0.5-V, 1-kHz square wave.	Match probe capacitance to individual circuit. This source may be used to check the basic functioning of vertical and horizontal circuits but is not intended to check their accuracy.
25	SLOPE	Selects the slope of the signal that triggers the sweep.	Provide ability to trigger from positive-going or negative-going signals.
26	LEVEL	Selects trigger-signal amplitude point.	Select actual point of trigger.
27	TRIG'D	Indicator lights when sweep is triggered in P-P AUTO, NORM, or TV FIELD.	Indicate trigger state.
28	MODE	P-P AUTO/TV LINE triggers from waveforms and television lines having repetition rates of at least 20 Hz. NORM triggers from adequate signal, with no trace in absence of trigger signal. TV FIELD triggers from TV Field signals; trigger polarity must be observed. SGL SWP triggers sweep only once when armed by RESET button; used for displaying or photographing nonrepetitive or unstable signals.	Select trigger mode.
29	RESET	Arms trigger circuit for SGL SWP.	
30	HOLDOFF	Varies sweep holdoff time 10:1.	Improve ability to trigger from aperiodic signals.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 2-1 (cont'd)

No.	Title	Function	Recommended Use
31	SOURCE	CH 1, CH 2, and EXT trigger signals are selected directly. In VERT MODE, trigger source is determined by the VERTICAL MODE switches as follows: CH 1: trigger comes from Channel 1 signal. CH 2: trigger comes from Channel 2 signal. BOTH-ADD and BOTH-CHOP: trigger is algebraic sum of Channel 1 and Channel 2 signals. BOTH-ALT: trigger comes from Channel 1 and Channel 2 on alternate sweeps.	Select source of signal that is coupled to the trigger circuit.
32	COUPLING	AC blocks dc components and attenuates signals below 15 Hz. LF REJ blocks dc components and attenuates signals below about 30 kHz. HR REJ attenuates signals above about 30 kHz. DC couples all signal components.	Select how the triggering signal is coupled to the trigger circuit.
33	EXT INPUT	Connection for applying external signal that can be used as a trigger.	Trigger from a source other than vertical signal. Also used for single-shot application.
		Connection for applying external signal that can be used for intensity modulation.	Provide reference blips by intensity modulation from independent source.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LEARNING THE CONTROLS

If you have not read Section 1 yet, you should do so now. Then, after turning the power on, let the oscilloscope warm up for a few minutes before starting this procedure.

1. Set instrument controls as follows:

Display	
INTENSITY	Midrange
FOCUS	Midrange
Vertical (both channels)	
POSITION	Midrange
MODE	CH 1
VOLTS/DIV	0.5 V (10X PROBE)
VOLTS/DIV Variable	CAL detent (fully clockwise)
Input Coupling	AC
Horizontal	
COARSE POSITION	Midrange
MODE	X1
SEC/DIV	0.2 ms
SEC/DIV Variable	CAL detent (fully clockwise)
Trigger	
SLOPE	
LEVEL	Midrange
MODE	P-P AUTO
HOLDOFF	MIN
SOURCE	CH 1
COUPLING	AC

2. Connect a probe to the input BNC connector for Channel 1 (labeled CH 1 OR X). Attach the probe ground lead to the collar of the EXT INPUT connector and apply the probe tip to the PROBE ADJUST terminal. If necessary, adjust the TRIGGER LEVEL control to get a stable display.
3. Change the Channel 1 input coupling switch to GND and use the Channel 1 POSITION control to align the baseline trace to the center horizontal graticule line. This sets the zero reference for the display.
4. Switch input coupling back to AC. Notice that the square wave is centered vertically on the screen. Now switch input coupling to DC and observe what happens to the waveform. The zero reference is maintained at the center horizontal graticule line.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

NOTE

More information about using the controls is contained at the end of this procedure. Refer to it as often as needed while learning the front-panel controls.

5. Use the following controls and notice the effect each has on the displayed waveform as the settings are changed.

   Each POSITION control
   CH 1 VOLTS/DIV
   CH 1 VOLTS/DIV Variable (CAL)
   SEC/DIV
   SEC/DIV Variable (CAL)
   HORIZONTAL MODE
   HORIZONTAL MAG
   TRACE SEP
   TRIGGER SLOPE

6. At this point, connect the second probe to the CH 2 OR Y input connector. Set the VERTICAL MODE switch to CH 2 and TRIGGER SOURCE to CH 2, then follow steps 2 through 5 again, using the channel 2 controls.
7. Now set the VERTICAL MODE switches to BOTH-NORM-ALT and return both VOLTS/DIV switches to 0.5V (10X PROBE). Rotate all variable controls clockwise to their CAL detents. Set the TRIGGER SOURCE switch to VERT MODE. Set HORIZONTAL MODE switch to ALT and MAG switch to X5. Then use the VERTICAL POSITION and TRACE SEP controls to position the four traces to convenient locations on the screen.
8. While watching the Channel 2 waveforms, set the middle VERTICAL MODE switch to CH 2 INVERT and notice the effect. Then set the right MODE switch to ADD. What happens to the waveforms? Finally, return the middle MODE switch to NORM. What waveform is displayed now?

Congratulations! You now know how to use the 2225 front-panel controls to display signals and move them about on the screen. The remainder of this section gives you more information about the controls and offers suggestions for their use. Section 3 explains how to make specific types of measurements and how to use the remaining controls not covered in the preceding exercise.

DISPLAY CONTROLS

Set the INTENSITY control for comfortable viewing, but no brighter than you need. Use high-intensity settings to observe low-repetition-rate signals, narrow pulses in long time intervals, or occasional variations in fast signals.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

VERTICAL CONTROLS

When making voltage measurements, rotate the VOLTS/DIV CAL control fully clockwise (in detent). Best accuracy can be achieved by setting the VOLTS/DIV control for the largest display possible.

Input Coupling

For most applications use DC input coupling. This mode is compatible with the standard-accessory, high-impedance probes and it displays logic levels and dc levels of static signals.

Use GND input coupling to show where the 0-volt level will be located when you shift to DC coupling.

Use AC coupling for the special cases where you need to see small signals on large dc voltage levels.

Channel Selection

With the three VERTICAL MODE buttons, you can display combinations of the two vertical channels. When CH 1 is selected, the other two MODE switches are not active. When CH 2 is selected, the middle MODE switch (NORM/CH 2 INVERT) becomes active. And when BOTH channels are selected for display, all three MODE switches are active.

ADD and INVERT

Select ADD mode to display the algebraic sum of the CH 1 and CH 2 signals. When you use ADD, the CH 1 and CH 2 VOLTS/DIV settings should be equal.

Selecting CH 2 INVERT changes the sense of the CH 2 waveform. This allows you to see the difference between the CH 1 and CH 2 signals on the ADD trace.

CHOP or ALT?

When BOTH channels are selected, the display is time-shared. The CHOP mode displays each channel for a short time and multiplexes during the sweep to give the appearance of displaying both channels at once. This mode (CHOP) works better than ALT for sweep speeds slower than 1 ms per division and for low-repetition-rate signals that make the display flicker (up to 2 µs/division).

The ALT mode displays each channel for the duration of a complete sweep. It gives a cleaner display of multiple channels than CHOP does and is usually preferred at moderate to high sweep speeds.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Increasing the Sensitivity

Pulling the VOLTS/DIV CAL control out (towards you) magnifies the vertical axis by a factor of 10, increasing the sensitivity to 500 μV per division. This function is useful for investigating small-amplitude signals (in general, less than 5 mV p-p) or small-amplitude details on larger signals.

HORIZONTAL CONTROLS

Sweep-Speed Selection

The unmagnified sweep (MODE set to X1) is the horizontal function needed for most applications. Best measurement accuracy is achieved by setting the SEC/DIV control for the fastest sweep that will display the interval of interest. The variable control (CAL) should be in its detent (fully clockwise).

Magnifying Waveform Details

Each of the two magnified modes—ALT or MAG—expands the unmagnified trace. When ALT is chosen, both the unmagnified and the magnified waveforms appear together on the crt screen. Vertical separation between them is adjusted with the TRACE SEP control. If MAG is selected, only the magnified trace is displayed on screen. This is useful for eliminating unwanted clutter from the crt when you are making accurate timing measurements or looking at waveform details.

Whenever ALT or MAG is set on the upper HORIZONTAL MODE switch, the amount of waveform expansion is determined by the setting of the HORIZONTAL MAG switch located beneath the SEC/DIV control. Three magnifications are available—5X, 10X, and 50X. Having the ability to select various combinations of waveform expansion and SEC/DIV control setting lets you extend the time-base range out to a maximum of 5 ns per division. Appendix A lists the sweep speeds for each magnifications level at every SEC/DIV control setting.

The marker that links the timing of the unmagnified and magnified traces with each other is the center vertical graticule line. The intersections of that line with the unmagnified and the magnified waveforms are the points of equal time duration from sweep start. With the center vertical graticule as the reference line, the investigation of waveform details around any point on the unmagnified trace as well as the measurement of time with greater accuracy then become easy tasks.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TRIGGER CONTROLS

For most signals, the trigger-control settings that will yield hands-off triggering are:

MODE	P-P AUTO
HOLDOFF	MIN
SOURCE	VERT MODE
COUPLING	DC

Which Mode to Use

P-P AUTO/TV LINE—With this mode set, the range of the LEVEL control is confined to the values between the triggering-signal peaks. For example, selecting P-P AUTO and rotating the LEVEL control to the center half of its range establishes a trigger point that is about midway between the peaks of the triggering signal.

In this mode, the absence of a triggering signal causes the sweep to free-run. And with signals below 20 Hz, the P-P AUTO circuit may not find the correct level.

Whenever P-P AUTO is active and VERT MODE source selected, the triggering signal is supplied by the channel that is being displayed—or by Channel 1 in a two-channel display.

The P-P AUTO mode is effective for monitoring logic signals and television lines having at least a 20-Hz repetition rate. Selecting P-P AUTO at the instrument front panel also sets the TV LINE triggering mode.

NORM—This mode produces a sweep only when the triggering signal meets the criteria set by the LEVEL and SLOPE controls. With NORM mode selected, range of the LEVEL control is sufficient to set any voltage threshold that can be displayed by the instrument. In the absence of a triggering signal, there is no sweep.

Use the NORM mode for viewing infrequent events and erratic signals.

SGL SWP—When this mode is selected, the sweep is triggered only once. Press the RESET button once to arm the trigger circuit and illuminate the READY indicator. When a trigger event occurs, the sweep runs once and the READY light extinguishes.

Use the SGL SWP mode to display or photograph nonrepetitive or unstable signals.

TV FIELD—This mode triggers the sweep at the beginning of a television field. To change the TV field being displayed, you must interrupt the trigger signal by setting the input coupling switch momentarily to GND then back to either DC or AC until the desired field is displayed.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

To display Field 1 and Field 2 at the same time, connect the same television signal to both the CH 1 and CH 2 inputs; set VERTICAL MODE to BOTH and ALT; set the SEC/DIV control to 0.5 ms or faster sweep speed.

If you magnify the vertical display beyond the graticule, the trigger may be degraded. To avoid trigger overload, use either CH 1 or CH 2 for display and use the EXT INPUT channel with an appropriate video signal as the trigger source. A composite sync signal can be used for the trigger source as well as composite video.

Source

Choose a single trigger source to correctly display the timing relationships between two channels. Choose the channel with the lowest-frequency signal to avoid ambiguous displays.

With VERT MODE TRIGGER SOURCE and either P-P AUTO TRIGGER MODE or CHOP VERTICAL MODE, the triggering signal is the algebraic sum of the Channel 1 and Channel 2 input signals.

Use a composite trigger source only to compare asynchronous signals. To generate a composite trigger: select VERT MODE TRIGGER SOURCE, BOTH-ALT VERTICAL MODE, and any TRIGGER MODE except P-P AUTO.

Coupling

For signals with strongly interfering components, HF Reject and LF Reject coupling give added selectivity. When AC coupling is selected, triggering continues as the dc level of the signal changes.

Slope

Use the SLOPE control to select either the rising (⎍) or the falling (⎍) edge of the signal to trigger the sweep.

Level

The LEVEL control gives you complete freedom to choose the most appropriate threshold voltage on a signal to initiate sweeps whenever any trigger mode except P-P AUTO is selected.

Holdoff

With irregular signals such as bursts, the HOLDOFF setting can improve display stability. Also, if the signal has a fixed pattern of variation from cycle to cycle, some modes of the signal may be omitted from the display. Changing the HOLDOFF setting can force the instrument to display all the modes of the signal. Normally, the HOLDOFF control should be set at MIN.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

CONNECTING SIGNALS

A probe is usually the most convenient way to connect an input signal to the instrument. Shielded to prevent pickup of electromagnetic interference, the standard 10X probes supplied with the instrument present a high impedance to a circuit under test. While the 10 MΩ and 13 pF of the probe-scope system present a negligible load on most circuits, very fast circuits or very high impedance circuits may be seriously affected.

Waveform Fidelity and Probe Grounds

A probe ground must be used for accurate measurements and observations. Use the shortest ground connection possible if you want good waveform fidelity.

The standard-accessory probe is a compensated 10X voltage divider. To a circuit under test, it appears resistive for low-frequency signals and capacitive for high-frequency components. The probe input capacitance can interact with the inductance of either a long signal lead or a long ground lead to form a series-resonant circuit. This circuit can affect system bandwidth and can ring if driven by a fast step. Always keep both the ground lead and the probe signal-input connections as short as possible to maintain the best waveform fidelity.

In some cases, a separate ground from the unit under test to the ground receptacle on the oscilloscope front panel can reduce interference from low-frequency hum and noise. For rough checks of larger signals, such as 5 V logic, a ground lead separate from the probe—or even the safety ground connection, which is shared with the unit under test—may work for a signal ground. Fast signal transitions will be highly distorted, and extraneous noise will be induced without the probe ground connection.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Probe Compensation

Misadjustment of probe compensation is a common source of measurement error. Due to variations in oscilloscope input characteristics, probe compensation should be checked whenever the probe is moved from one oscilloscope to another or from one channel to another on the same oscilloscope. Always compensate the probe to the channel on which it will be used. See the procedure in Section 4, *Checks and Adjustments*.

Probe Handling

Both the probe and the probe accessories should be handled carefully to prevent damage. Striking a hard surface can damage both the probe body and the probe tip. Exercise care to prevent the cable from being crushed, kinked, or excessively strained.

Coaxial Cables

To maintain good waveform fidelity and accuracy, use only high-quality, low-loss coaxial cables. When you use 50Ω or 75Ω coaxial cable, attach a matching external terminator. Some high frequency response will be lost with external termination.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 3

APPLICATIONS

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

This section describes how to make specific types of measurements with your 2225 Oscilloscope. Before performing any procedure, be sure you are familiar with the information contained in the *Operator's Safety Summary* and in Section 1. Preset the instrument front-panel controls, using the setup on page 2-5 as a guideline, and then turn on the power. For maximum measurement accuracy, allow a 20-minute warm-up period.

AMPLITUDE MEASUREMENTS

Peak-to-Peak Voltage

This procedure may be used to make peak-to-peak voltage measurements, and voltage measurements between any two points on the waveform.

1. Apply the ac signal to either the CH 1 or the CH 2 input connector and set the VERTICAL MODE switch to display the channel used.
2. Set the appropriate VOLTS/DIV switch to display about 5 divisions of the waveform and ensure that the VOLTS/DIV variable control is in the CAL detent.
3. Adjust the TRIGGER LEVEL control to obtain a stable display.
4. Rotate the SEC/DIV switch to a setting that displays several cycles of the waveform.

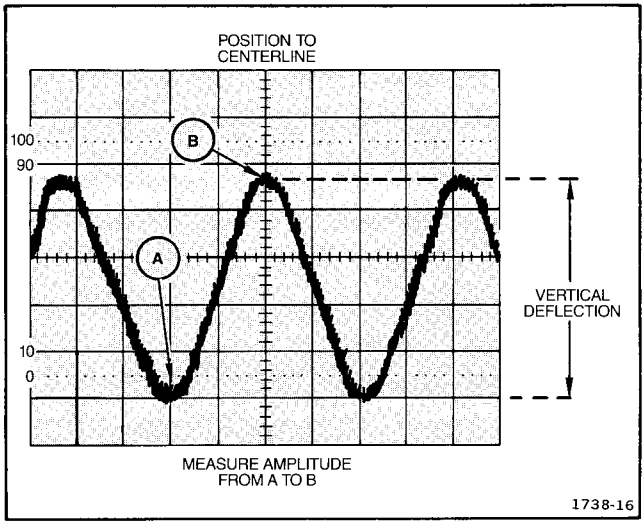


Figure 3-1. Measuring peak-to-peak voltage of a waveform.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5. Vertically position the display so that the negative peak of the waveform coincides with one of the horizontal graticule lines (see Figure 3-1, Point A).
6. Horizontally position the display so that one of the positive peaks coincides with the center vertical graticule line (Figure 3-1, Point B).
7. Measure the divisions of vertical deflection from peak to peak (Figure 3-1, Point A to Point B).

NOTE

If the amplitude measurement is critical or if the trace is thick (because of hum or noise on the signal), a more accurate result can be obtained by measuring from the top of a peak to the top of a valley. This will eliminate trace thickness from the measurement.

8. Calculate the peak-to-peak voltage, using the following formula:

$$V_{p\text{-}p} = \text{vertical deflection (divisions)} \times \text{VOLTS/DIV setting (10X PROBE)*}$$

*If a 1X probe is being used for the measurement, use the 1X VOLTS/DIV setting.

EXAMPLE. In Figure 3-1, the measured peak-to-peak vertical deflection is 4.6 divisions using a 10X attenuator probe with the VOLTS/DIV switch set to 5 V (10X PROBE).

Substituting the given values:

$$V_{p\text{-}p} = 4.6 \text{ div} \times 5 \text{ V/div} = 23 \text{ V}.$$

Instantaneous Voltage

To measure the instantaneous voltage level at a given point on a waveform, referred to ground, use the following procedure:

1. Apply the ac signal to either the CH 1 or the CH 2 input connector and set the VERTICAL MODE switch to display the channel used.
2. Verify that the VOLTS/DIV variable control is in the CAL detent and set input coupling to GND.
3. Vertically position the trace to the center horizontal graticule line. This establishes the ground reference location.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

NOTE

If the measurements are to be made relative to a voltage level other than ground, set the input coupling switch to DC and apply the reference voltage to the input connector. Then position the trace to the horizontal reference line.

4. Set the input coupling switch to DC. Points on the waveform above the ground reference location are positive. Those points below are negative.

NOTE

If using Channel 2, ensure that the center VERTICAL MODE switch is set to NORM.

5. If necessary, repeat Step 3 using a different horizontal ground-reference line that allows the waveform in Step 4 to be displayed on screen.
6. Adjust the TRIGGER LEVEL control to obtain a stable display.
7. Set the SEC/DIV switch to a position that displays several cycles of the signal.
8. Measure the divisions of vertical deflection between the ground reference line and the point on the waveform at which the level is to be determined (see Figure 3-2).

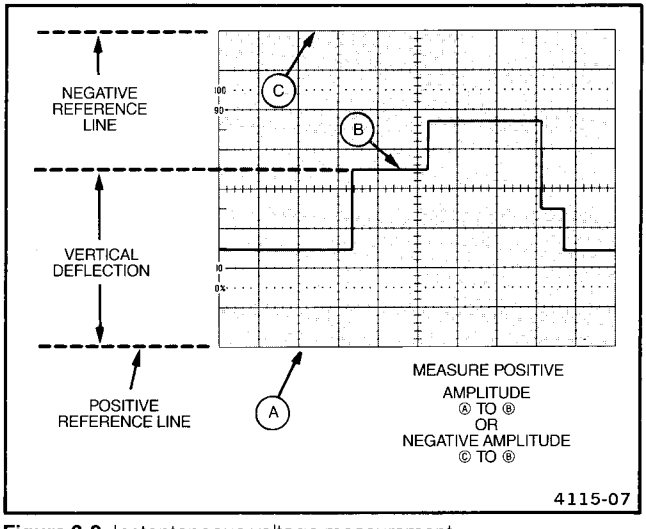


Figure 3-2. Instantaneous voltage measurement.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

9. Calculate the instantaneous voltage, using the following formula:

Instantaneous Voltage	=	vertical deflection (divisions)	x	polarity (+ or −)	x	VOLTS/DIV setting (10X PROBE)*

*If a 1X probe is being used for the measurement, use the 1X VOLTS/DIV setting.

EXAMPLE. In Figure 3-2, the measured vertical deflection from the reference line is 4.5 divisions, and the waveform point is above the reference line. A 10X attenuator probe is being used, and the VOLTS/DIV switch is set to 2 V (10X PROBE).

Substituting the given values.

Instantaneous Voltage = 4.5 div x (+1) x 2 V/div = 9.0 V.

Algebraic Addition

With the VERTICAL MODE switches set to BOTH-NORM-ADD, the waveform displayed is the algebraic sum of the signals applied to the Channel 1 and Channel 2 inputs (CH 1 + CH 2). If the middle MODE switch is then set to CH 2 INVERT, the waveform displayed is the difference between the signals applied to the Channel 1 and Channel 2 inputs (CH 1—CH 2). When both VOLTS/DIV switches are set to the same deflection factor, the deflection factor of the ADD trace is equal to the deflection factor indicated by either VOLTS/DIV switch.

The following general precautions should be observed when using ADD VERTICAL MODE.

1. Do not exceed the input voltage rating of the oscilloscope.
2. Do not apply signals whose peaks exceed the equivalent of about ± 8 times the VOLTS/DIV switch settings, since large voltages may distort the display. For example, with a VOLTS/DIV setting of 0.5 V, the voltage applied to that channel should not exceed approximately 4 V.
3. Position the Channel 1 and Channel 2 waveforms near center screen, when viewed separately. This ensures the greatest dynamic range for ADD mode operation.
4. To attain similar responses from both channels, set the Channel 1 and Channel 2 input coupling switches to the same position.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Common-Mode Rejection

The following procedure shows how to eliminate unwanted ac input-power frequency components. Similar methods could be used to eliminate other unwanted frequency components or to provide a dc offset.

1. Apply the signal containing the unwanted line-frequency components to the CH 1 input connector.
2. Apply a line-frequency signal to the CH 2 input connector. To maximize cancellation, the signal applied to Channel 2 must be in phase with the unwanted line frequency component of the Channel 1 input.

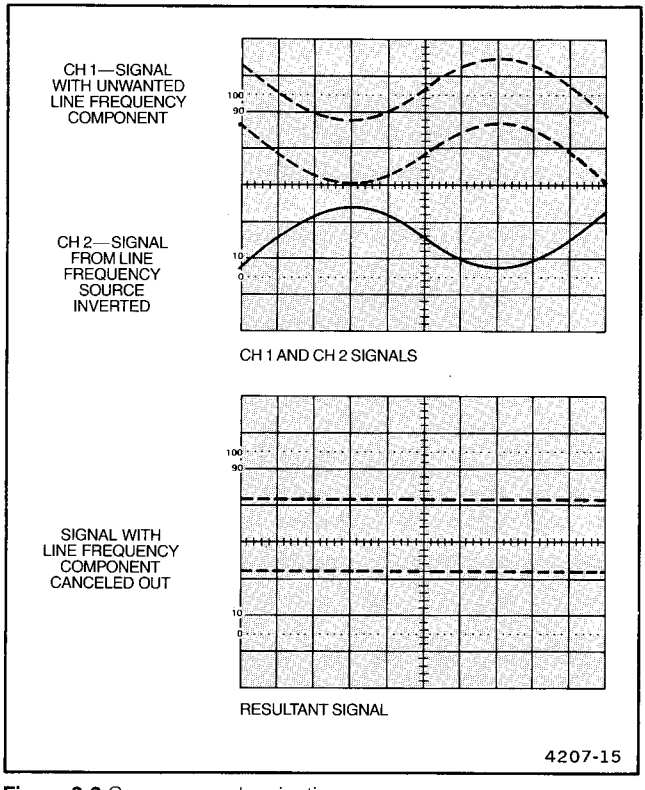


Figure 3-3. Common-mode rejection.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3. Set VERTICAL MODE switches to BOTH-NORM-ALT; set both VOLTS/DIV switches equally to produce displays of approximately four or five divisions amplitude.
4. Adjust the CH 2 VOLTS/DIV switch and CH 2 VOLTS/DIV variable control so that the Channel 2 display is approximately the same amplitude as the undesired portion of the Channel 1 display (see Figure 3-3 top).
5. Now set the middle and right VERTICAL MODE switches to CH 2 INVERT and ADD. Slightly readjust the CH 2 VOLTS/DIV variable control for maximum cancellation of the undesired signal component (Figure 3-3 bottom).

Amplitude Comparison (Ratio)

In some applications it may be necessary to establish a set of deflection factors in between step settings of the VOLTS/DIV switch. This is useful for comparing unknown signals to a reference signal of known amplitude.

To accomplish this, a reference signal of known amplitude is first set to an exact number of vertical divisions by adjusting the VOLTS/DIV switch and variable (CAL) control. Unknown signals can then be quickly and accurately compared to the reference signal without disturbing the setting of the VOLTS/DIV variable control.

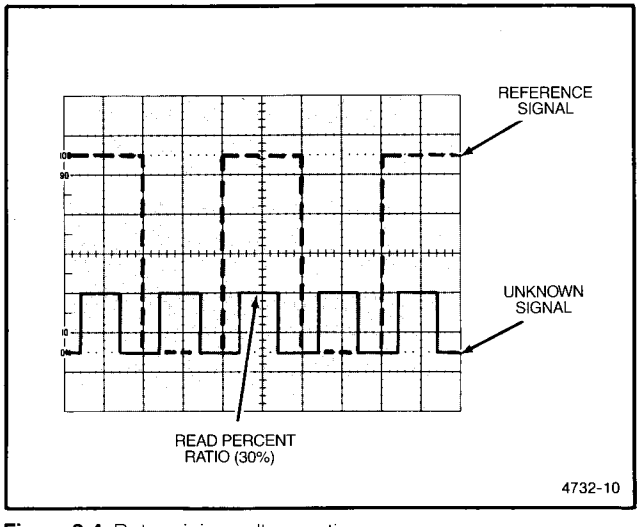


Figure 3-4. Determining voltage ratio.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1. Apply the reference signal to either the CH 1 or the CH 2 input connector and set the VERTICAL MODE switch to display the channel used.
2. Set the amplitude of the reference signal to five vertical divisions by adjusting the VOLTS/DIV switch and VOLTS/DIV variable (CAL) control.
3. Disconnect the reference signal and apply the unknown signal to the same channel input. Adjust the vertical position of the waveform so that its bottom edge just touches the 0% line on the crt.
4. Horizontally position the waveform so that its top-most features cross the center vertical graticule line (see Figure 3-4).
5. Read the percent ratio directly from the graduations on the vertical centerline, referring to the 0% and 100% percentage marks on the left edge of the graticule (1 minor division equals 4% for a 5-division display).

TIME MEASUREMENTS

Time Duration

To measure time between two points on a waveform, use the following procedure:

1. Apply the signal to either the CH 1 or the CH 2 input connector and set the VERTICAL MODE switch to display the channel used.
2. Adjust the TRIGGER LEVEL control to obtain a stable display.
3. Set the SEC/DIV switch to display between one and two complete periods of the waveform. Ensure that the SEC/DIV variable control is in the CAL detent.
4. Position the display to place the time-measurement points on the center horizontal graticule line (see Figure 3-5).
5. Measure the horizontal distance between the time-measurement points.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

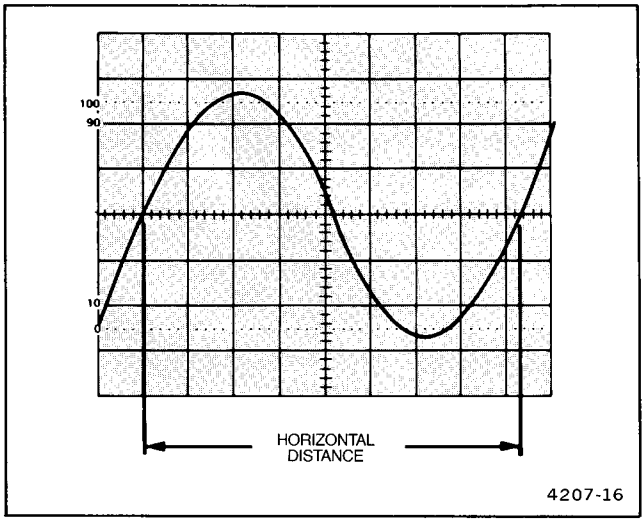


Figure 3-5. Measuring time duration.

6. Calculate time duration using the following formula:

$$\text{Time Duration} = \frac{\text{horizontal distance (divisions)} \times \text{SEC/DIV switch setting}}{\text{magnification factor}}$$

EXAMPLE. In Figure 3-5, the distance between the time measurement points is 8.3 divisions, and the SEC/DIV setting is 2 ms per division. Horizontal MODE is set to X1.

Substituting the given values:

Time Duration = 8.3 div x 2 ms/div = 16.6 ms

Period and Frequency

In the preceding example, you measured the time duration of one complete waveform cycle. This particular measurement is called the waveform period (T). The frequency (f) of a recurrent signal can be determined from its period as follows:

1. Measure the time duration of one waveform cycle (period) using the preceding time-duration measurement procedure.
2. Calculate the reciprocal of the period to determine the waveform frequency.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EXAMPLE. The signal in Figure 3-5 has a period (T) of 16.6 ms. Calculating frequency (f):

$$f = \frac{1}{T} = \frac{1}{16.6 \times 10^{-3}\ s} = 60\ Hz$$

Rise Time

Rise time measurements use the same methods as time duration, except that the measurements are made between the 10% and 90% points on the low-to-high transition of the selected waveform. Fall time is measured between the 90% and 10% points of the high-to-low transition of the waveform.

1. Apply a signal to either the CH 1 or the CH 2 input connector and set the VERTICAL MODE switch to display the channel used.
2. Set the appropriate VOLTS/DIV switch and variable (CAL) control for an exact five-division display.
3. Vertically position the trace so that the zero reference of the waveform touches the 0% graticule line and the top of the waveform touches the 100% graticule line.
4. Horizontally position the display so the 10% point on the waveform intersects the second vertical graticule line (Figure 3-6, Point A).

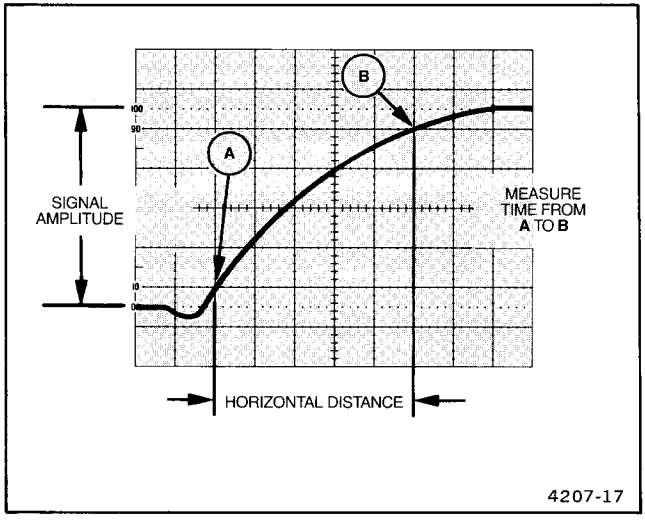


Figure 3-6. Measuring rise time.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

NOTE

You can achieve better accuracy by using the SEC/DIV control or horizontal magnification to expand the waveform transition so that it occupies from four to six horizontal divisions between the 10% and 90% amplitude points.

5. Measure the horizontal distance between the 10% and 90% points (Figure 3-6, Points A and B) and calculate time duration using the following formula:

$$\text{Rise Time} = \frac{\text{horizontal distance (divisions)} \times \text{SEC/DIV switch setting}}{\text{magnification factor}}$$

EXAMPLE: In Figure 3-6, the horizontal distance between the 10% and 90% amplitude points is 5 divisions, and the SEC/DIV switch is set to 1 μs per division. Horizontal MODE is set to X1.

Substituting given values in the formula:

$$\text{Rise Time} = \frac{5 \text{ div} \times 1 \text{ μs/div}}{1} = 5 \text{ μs}$$

Time Difference Between Pulses On Time-Related Signals

The calibrated sweep speed and dual-trace features of the 2225 allow measurement of the time difference between two separate events. To measure time difference, use the following procedure:

1. Set the TRIGGER SOURCE switch to CH 1.
2. Set both input coupling switches to the same position, depending on the type of input coupling desired.
3. Using either probes or cables with equal time delays, apply a known reference signal to the CH 1 input connector and apply the comparison signal to the CH 2 input.
4. Set both VOLTS/DIV switches for either 4-division or 5-division displays.
5. Set VERTICAL MODE to BOTH; then select either ALT or CHOP, depending on the frequency of the input signals.
6. If the two signals are opposite in polarity, set the middle VERTICAL MODE switch to CH 2 INVERT to invert the Channel 2 display.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

7. Adjust the TRIGGER LEVEL control for a stable display.
8. Set the SEC/DIV switch to a sweep speed that provides three or more divisions of horizontal separation between measurement points on the two displays. Center each of the displays vertically (see Figure 3-7).
9. Determine the horizontal difference between the two signal measurement points and calculate the time difference using the following formula:

$$\text{Time Difference} = \frac{\text{horizontal difference (divisions)} \times \text{SEC/DIV switch setting}}{\text{magnification factor}}$$

EXAMPLE. In Figure 3-7, the SEC/DIV switch is set to 50 μs per division, HORIZONTAL MODE is set to MAG, and the MAG switch is set to X10. The horizontal difference between waveform measurement points is 4.5 divisions.

Substituting the given values in the formula:

$$\text{Time Difference} = \frac{50\ \mu s/div \times 4.5\ div}{10} = 22.5\ \mu s$$

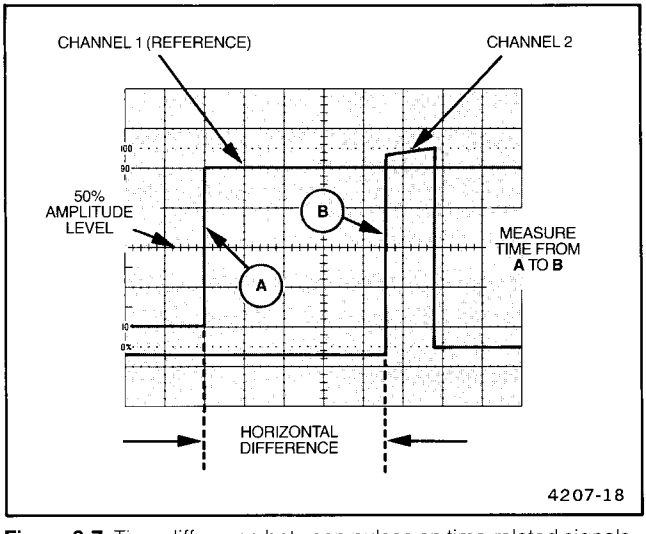


Figure 3-7. Time difference between pulses on time-related signals.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Phase Difference

In a similar manner to the preceding measurement, you can make a phase comparison between two signals of the same frequency using the dual-trace feature of the 2225. This method of phase-difference measurement can be used for signals with frequencies up to the limit of the vertical deflection system. To make a phase comparison, perform the following procedure:

1. Set the TRIGGER SOURCE switch to CH 1.
2. Set both input coupling switches to the same position, depending on the type of input coupling desired.
3. Using either probes or cables with equal time delays, apply a known reference signal to the CH 1 input connector and apply the unknown signal to the CH 2 input.
4. Set VERTICAL MODE to BOTH; then select either ALT or CHOP, depending on the frequency of the input signals. The reference signal should precede the comparison signal in time.
5. If the two signals are opposite in polarity, set the middle VERTICAL MODE switch to CH 2 INVERT to invert the Channel 2 display.
6. Set both VOLTS/DIV switches and adjust both variable (CAL) controls to display equal-amplitude waveforms.
7. Adjust the TRIGGER LEVEL control for a stable display and center the display vertically.
8. Set the SEC/DIV switch to a sweep speed that displays about one full cycle of the waveforms.
9. Position the displays and adjust the SEC/DIV variable (CAL) control so that one cycle of the reference signal occupies exactly eight horizontal graticule divisions at the 50% rise-time points (see Figure 3-8). Each horizontal division of the graticule now represents 45° of the cycle (360° divided by 8 divisions), and the horizontal graticule calibration can be stated as 45° per division.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

10. Measure the horizontal difference between corresponding points on the two waveforms at the 50% rise-time points and calculate the phase difference using the following formula:

$$\text{Phase Difference} = \text{horizontal difference (divisions)} \times \text{graticule calibration (deg/div)}$$

EXAMPLE. In Figure 3-8, the horizontal difference is 0.6 division with a graticule calibration of 45° per division.

Substituting the given values into the phase-difference formula:

Phase Difference = 0.6 div x 45°/div = 27°.

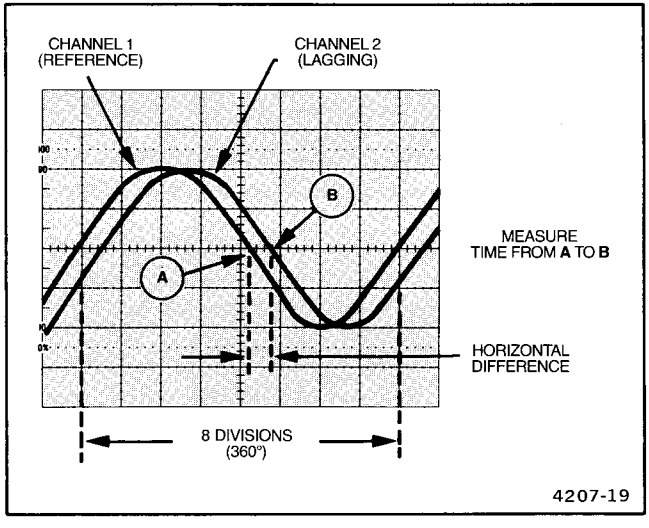


Figure 3-8. Phase difference.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

More accurate phase measurements can be made by using the horizontal magnifier function to increase the sweep speed without changing the SEC/DIV variable control setting. To do this, set the HORIZONTAL MODE switch to MAG and set the MAG switch to either X5, X10, or X50.

If the sweep speed were increased 10 times (MAG set to X10), the magnified horizontal graticule calibration then would be 4.5° per division (45°/division divided by 10). Figure 3-9 shows the same signals illustrated in Figure 3-8, but horizontally magnified by a factor of 10.

EXAMPLE. In Figure 3-9 the 10X magnified display results in a horizontal difference of six divisions between the two signals.

Substituting the given values into the phase difference formula:

Phase Difference = 6 div x 4.5°/div = 27°.

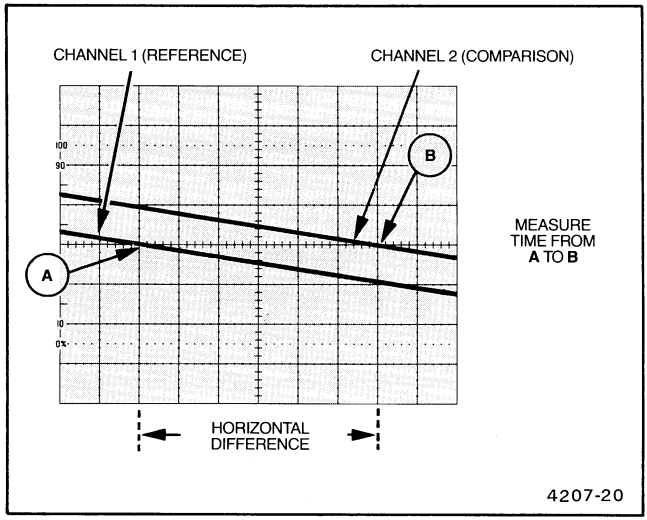


Figure 3-9. High-resolution phase difference.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TELEVISION DISPLAYS

TV Field Signals

The television feature of the 2225 can be used to display TV Field signals.

1. Set the TRIGGER MODE switch to TV FIELD and set the SEC/DIV switch to 2 ms.
2. Apply the television signal to either the CH 1 or the CH 2 input connector and set the VERTICAL MODE switch to display the channel used.
3. For positive-going TV signal sync pulses, set the TRIGGER SLOPE switch to ⎍ and rotate the LEVEL control fully clockwise. For negative-going sync pulses, set the SLOPE switch to ⎏ and rotate the LEVEL control fully counterclockwise.
4. Set the appropriate VOLTS/DIV switch to display one division or more of composite video signal.
5. To change the TV field that is displayed, momentarily interrupt the trigger signal by setting the input coupling switch to GND then back to DC or AC until the desired field is displayed.

NOTE

To examine a TV Field signal in more detail, set the HORIZONTAL MODE switch to either ALT or MAG and select either X5, X10, X50 magnification.

6. To display either Field 1 or Field 2 individually, connect the television signal to both the CH 1 and CH 2 input connectors and select BOTH and ALT VERTICAL MODE. Set the SEC/DIV switch to 0.5 ms or faster sweep speed (displays less than one full field). This will synchronize the Channel 1 display to one field and the Channel 2 display to the other field.

TV Line Signals

The following procedure is used to display a TV Line signal.

1. Verify that TRIGGER MODE is set to P-P AUTO/TV LINE.
2. Apply the Television signal to either the CH 1 or the CH 2 input connector and set the VERTICAL MODE switch to display the channel used.
3. Set the SEC/DIV switch to 10 μs.
4. For positive-going TV signal sync pulses, set the TRIGGER SLOPE switch to ⎍ and rotate the LEVEL control fully clockwise. For negative-going sync pulses, set the SLOPE switch to ⎏ and rotate the LEVEL control fully counterclockwise.
5. Set the appropriate VOLTS/DIV switch to display 0.3 division or more of composite sync signal.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

NOTE

To examine a TV Line signal in more detail, set the HORIZONTAL MODE switch to either ALT or MAG and select either X5, X10, X50 magnification.

6. To display a selected TV Line pulse, first trigger the sweep from a TV Field sync pulse. If necessary, use HF REJ TRIGGER COUPLING to improve the trigger. Switch HORIZONTAL MODE to ALT and select X50 MAG to provide the normal display together with the expanded trace. Select the desired line pulse, using the HORIZONTAL COARSE and FINE POSITION controls. Then switch MODE to MAG to eliminate the normal (unmagnified) waveform.

Z-MODULATION

The Z-modulation system can be used to display time markers, since it is entirely dependent upon the accuracy of the signal source. It can also be used in any condition where external control of the brightness of either the whole or part of the trace is required.

The Z—or intensity—modulation feature is operated in the following manner:

1. Set the left TRIGGER SOURCE switch to EXT and the right SOURCE switch to EXT Z.
2. Set the TRIGGER COUPLING switch to the desired setting. This setting will couple both the Z-modulation signal and the vertical triggering signal.
3. Apply a signal to either the CH 1 or the CH 2 connector and set the VERTICAL MODE switch to display the channel used.
4. Apply the Z-modulation signal to the connector labeled EXT INPUT OR Z.

When the Z-modulation and the vertical-input signals are synchronized, Z-modulation is seen as gaps in the trace at the modulation frequency. The size of the gap depends upon the mark-to-space ratio of the Z-modulation signal. The positive-going portion of the Z-modulation signal decreases brightness.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 4

CHECKS AND ADJUSTMENTS

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Performing the operator checks and adjustments in this section will eliminate significant sources of measurement error and will improve measurement confidence. If adjustments are required beyond the scope of this section, refer the instrument to a qualified service technician.

Total performance of the instrument should be checked after every 2000 hours of operation or once each year if it is used infrequently. A shorter interval may be necessary if your instrument is subjected to harsh environments or severe usage.

TRACE ROTATION

Normally, the horizontal axis of a waveform display will be parallel to the center horizontal graticule line. To check horizontal alignment and to adjust it, if necessary, perform the following procedure. A probe is not needed for this adjustment.

1. Preset instrument controls (page 2-5) and obtain a baseline trace.
2. Use the Channel 1 POSITION control to move the baseline trace to the center horizontal graticule line.
3. The trace should be parallel to the center horizontal graticule line. If it is not, use a small flat-bit screwdriver to adjust the TRACE ROTATION control on the front panel and align the trace with the center horizontal graticule line.

PROBE COMPENSATION

Misadjustment of probe low-frequency compensation is a common source of measurement error. Most attenuator probes are equipped with compensation adjustments. To ensure optimum measurement accuracy, always compensate the oscilloscope probes before making measurements. Probe compensation is accomplished as follows:

1. Preset instrument controls (page 2-5) and obtain a baseline trace.
2. Attach the two X10 probes (supplied with the instrument) to the CH 1 and CH 2 input connectors.
3. Set both VOLTS/DIV switches to 10 mV, set both input coupling switches to DC, and select CH 1 VERTICAL MODE.
4. Place the tip of the Channel 1 probe onto the PROBE ADJUST output terminal.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5. Using the approximately 1-kHz probe-adjustment square wave as the input, obtain a 5-division display of the signal.
6. Set the SEC/DIV switch to display several cycles of the signal. Use the Channel 1 POSITION control to vertically center the display.

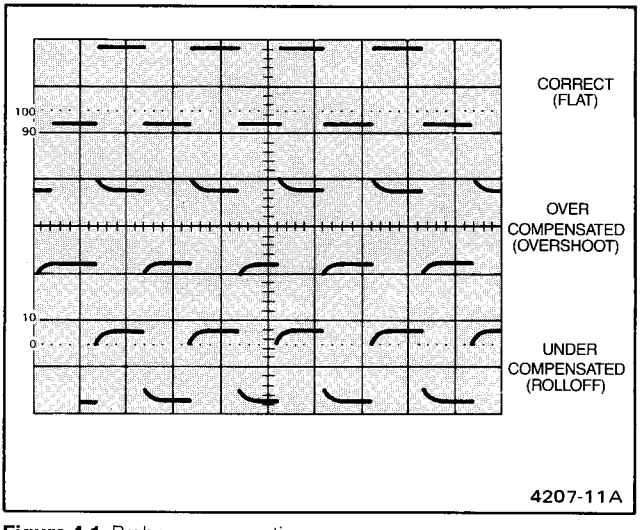


Figure 4-1. Probe compensation.

7. Check the waveform presentation for overshoot and rolloff (see Figure 4-1). If necessary, perform step 8 to adjust the probe low-frequency compensation. Otherwise, proceed to step 9.
8. Rotate the sleeve on the probe head to expose the LF COMP adjustment capacitor (see Figure 4-2). Use a low-reactance alignment tool to adjust LF COMP and obtain a square, or nearly square, front corner on the waveform tops (Figure 4-1, top trace).
9. Select CH 2 VERTICAL MODE. Disconnect the Channel 1 probe tip and attach the Channel 2 probe tip to the PROBE ADJUST output terminal.
10. Obtain a 5-division signal display and vertically center the trace.
11. Repeat step 7 for the Channel 2 probe.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

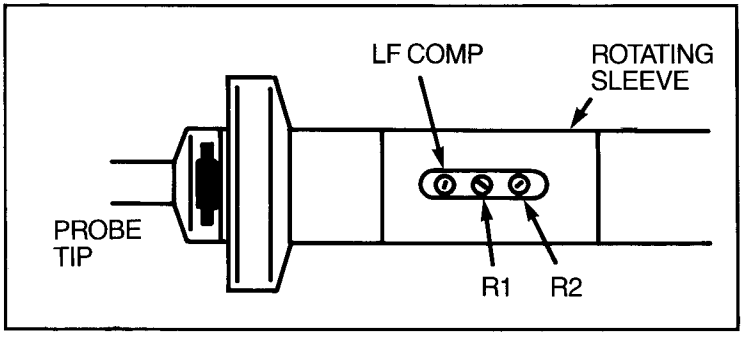


Figure 4-2. Locating the low-frequency compensation adjustment.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 5

PERFORMANCE CHARACTERISTICS

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The electrical characteristics listed in Table 5-1 are valid for the 2225 when it has been adjusted at an ambient temperature between +20°C and +30°C, has had a warm-up period of at least 20 minutes, and is operating at an ambient temperature between 0°C and +40°C (unless otherwise noted).

Environmental characteristics are given in Table 5-2. The 2225 meets the requirements of MIL-T-28800C, paragraphs 4.5.5.1.3, 4.5.5.1.4, and 4.5.5.1.2.2 for Type III, Class 5 equipment, except where otherwise noted.

Mechanical characteristics of the instrument are listed in Table 5-3.

Table 5-1
Electrical Characteristics

Characteristics	Performance Requirements
VERTICAL DEFLECTION SYSTEM	
Deflection Factor Range	5 mV per division to 5 V per division in a 1-2-5 sequence of 9 steps. Sensitivity increases to 500 μV per division with X10 vertical magnification.
Accuracy	±3%. With X10 vertical magnification, accuracy is ±5%.
Variable Control Range	Continuously variable and uncalibrated between step settings. Increases deflection factor by at least 2.5 to 1.
Step Response (Rise Time)	Applicable from 5 mV per division to 5 V per division. Rise times calculated from: $t_r = \frac{0.35}{BW}$
+5°C to +35°C	7.0 ns or less.
0°C to +5° C +35°C to +40°C	8.8 ns or less.
Step Response Aberration 5mV per division 10mV per division to 0.2V per division 0.5V per division	 +6, –6%, 6% p-p or less. +4%, –4%, 4% p-p or less. +6%, –6%, 6% p-p or less.

5

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 5-1 (cont'd)

Characteristics	Performance Requirements
VERTICAL DEFLECTION SYSTEM (cont'd)	
Bandwidth (−3 dB)	
+5°C to +35°C	50 MHz or more.
0°C to +5°C 35°C to +40°C	40 MHz or more.
X10 Magnification	5 MHz or more.
AC Coupled Lower Cutoff Frequency	10 Hz or less at −3 dB.
CHOP Mode Switching Rate	500 kHz ±30%.
Input Characteristics	
Resistance	1 MΩ ±2%.
Capacitance	25 pF ±2 pF.
Maximum Safe Input Voltage (DC or AC Coupled)	400 V (dc + peak ac) or 800 V ac p-p to 10 kHz or less.
Common-Mode Rejection Ratio (CMRR)	At least 10 to 1 at 20 MHz in X1. At least 10 to 1 at 1 MHz with X10 vertical magnification.
Trace Shift	
With VOLTS/DIV Switch Rotation	0.75 division or less (Variable control in CAL detent).
With VOLTS/DIV Variable Control Rotation	1.0 division or less.
With Channel 2 Inverted	1.5 divisions or less.
With X10 Vertical Magnification	2.0 divisions or less.
Channel Isolation	Greater than 100 to 1 at 10 MHz.
Trace Separation Range	At least ±3 divisions.

5

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 5-1 (cont'd)

Characteristics	Performance Requirements	
TRIGGER SYSTEM		
Trigger Sensitivity P-P AUTO/TV LINE and NORM Modes	**5 MHz**	**50 MHz**
Internal Signal	0.3 div.	1.0 div
External Signal	40 mV	200 mV
Lowest Usable Frequency in P-P AUTO Mode	≥20-Hz 1.0-division internal signal or 100-mV external signal will lock.	
TV FIELD Mode	1.0 division of composite sync.	
External Input Resistance	1 MΩ ±10%.	
Capacitance	25 pF ±2.5 pF.	
Maximum Voltage	400 V (dc + peak ac) or 800 V ac p-p at 10 kHz or less.	
AC Coupled Lower Cutoff Frequency	10 Hz or less at −3 dB with internal signal. 20 Hz or less at −3 dB with external signal.	
Trigger Level Range NORM MODE	Can be set to any point on the trace that can be displayed.	
EXT Source	At least ± 1.2V, 2.4V p-p.	
EXT/10 Source	At least ± 12V, 24V p-p.	
Variable Holdoff Range	Can increase sweep holdoff time by at least a factor of 8, with SEC/DIV set to 1ms.	
LF Reject Lower 3 dB Point	30 kHz ±25%.	
HF Reject 3 dB Point	30 kHz ±25%.	

5

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 5-1 (cont'd)

Characteristics	Performance Requirements			
HORIZONTAL DEFLECTION SYSTEM				
Sweep Rate Calibrated Range	0.5 s per division to 0.05 μs per division in a 1-2-5 sequence of 22 steps. Magnification extends maximum usable sweep speed to 5 ns per division.			
Accuracy		**Magnified**		
	X1	**X5**	**X10**	**X50**
+15°C to +35°C	±3%	±4%	±4%	±5%
0°C to +40°C	±4%	±5%	±5%	±8%
Variable Control Range	Continuously variable and uncalibrated between calibrated step settings. Decreases calibrated sweep speeds at least by a factor of 2.5.			
Sweep Linearity		**Magnified**		
	X1	**X5**	**X10**	**X50**
	±5%	±7%	±7%	±9%
Position Control Range	Start of sweep to 10th division in X1, to 50th division in X5, to 100th division in X10, and to 500th division in X50 will position past the center vertical graticule line.			
Registration of Unmagnified and Magnified Traces	0.2 division or less, aligned to central vertical graticule line.			
Trace Shift Between ALT and MAG Modes	Less than 1 division.			
Trace Length	Greater than 10 division.			
Z-MODULATION				
Sensitivity	5 V causes noticeable modulation. Positive-going input decreases intensity.			
Usable Frequency Range	Dc to 5 MHz.			
Maximum Safe Input Voltage	400 V (dc + peak ac) or 800 V ac p-p to 10 kHz or less.			

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 5-1 (cont'd)

Characteristics	Performance Requirements
X-Y OPERATION (X1 MODE)	
Deflection Factors	Same as Vertical Deflection System with Variable controls in CAL detents.
Accuracy	
X-Axis	±5%.
Y-Axis	Same as Vertical Deflection System.
Bandwidth (−3 dB)	
X-Axis	Dc to at least 2 MHz.
Y-Axis	Same as Vertical Deflection System.
Phase Difference Between X- and Y-Axis Amplifiers	±3° from dc to 150 kHz.
PROBE ADJUSTMENT SIGNAL OUTPUT	
Voltage into 1 MΩ Load	0.5 V ±5%.
Repetition Rate	1 kHz ±20%.
POWER REQUIREMENTS	
Line Voltage Ranges	
115 V Setting	95 V ac to 128 V ac.
230 V Setting	185 V ac to 250 V ac.
Line Frequency	48 Hz to 440 Hz.
Maximum Power Consumption	70 W (80 VA).
Line Fuse	UL198.6, 3AG (¼ x 1¼ inch)
115 V Setting	1.0 A, Slow
230 V Setting	0.5 A, Slow
CATHODE-RAY TUBE	
Display Area	80 by 100 mm.
Standard Phosphor	GH (P31).
Nominal Accelerating Voltage	12,600 V ±60 V

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 5-2
Environmental Characteristics

Characteristics	Description
Temperature	
Operating	0°C to +40°C (+32° F to +104°F).
Nonoperating	−55°C to +75°(−67°F to +167°F).
Altitude	
Operating	To 4500 m (15,000 ft.). Maximum operating temperature decreases 1°C per 300 m (1,000 ft.) above 1,500 m (5,000 ft.).
Nonoperating	To 15,250 m (50,000 ft.).
Relative Humidity	
Operating (+30°C to + 40°C)	95% +0%, −5%
Nonoperating (+30°C to +60°C)	95% +0%, −5%
Vibration (Operating)	15 minutes along each of three major axes at a total displacement of 0.015 inch p-p (2.4 g at 55 Hz) with frequency varied from 10 Hz to 55 Hz to 10 Hz in one-minute sweeps. Hold for 10 minutes at 55 Hz in each of the three major axes. All major resonances must be above 55 Hz.
Shock (Operating and Nonoperating)	30 g, half-sine, ll-ms duration, three shocks per axis each direction, for a total of 18 shocks.
Radiated and Conducted Emission Requirements	Meets VDE 0871 Class B and FCC Regulations.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 5-3
Mechanical Characteristics

Characteristics	Description
Weight With Power Cord	6.6 kg (14.6 lbs) or less.
Domestic Shipping Weight	9.0 kg (19.8 lb) or less.
Height	138 mm (5.4 in).
Width	
With Handle	380 mm (15.0 in).
Without Handle	327 mm (12.9 in).
Depth	
Without Front Cover	438 mm (17.2 in).
With Optional Front Cover	445 mm (17.5 in).
With Handle Extended	511 mm (20.1 in).

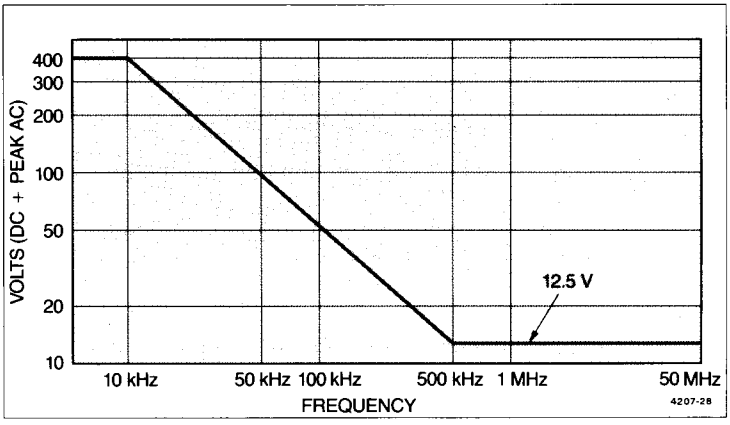


Figure 5-1. Derating curve for CH 1 OR X, CH 2 OR Y, and EXT INPUT OR Z connectors.

5

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 6

OPTIONS AND ACCESSORIES

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

This section lists the standard accessories (including Tektronix part numbers) that are shipped with each instrument. It also briefly describes the options that can be included with the original instrument order. If you wish to obtain any of these options after receiving your instrument, use the accessories lists contained in Tables 6-1 and 6-2. For additional information about instrument options and other optional accessories, consult the current Tektronix Product Catalog or contact your local Tektronix Sales Office or distributor.

STANDARD ACCESSORIES

Each instrument is shipped with the following standard accessories:

Quantity	Description	Part Number
2	Probes, 10X, 2-m, with accessories	P6103
1	Operator's Manual	070-6298-01
1	Power Cord and Fuse	Per option ordered; see Table 6-1
1	Power-cord Clamp	343-0003-00
1	Screw	213-0882-00
1	Washer	210-0803-00

OPTIONS

Option 02

This option is intended for users who need added front-panel protection and accessories-carrying ease demanded by frequent travel to remote service sites. It includes a protective front-panel cover and an accessories pouch that attaches to the top of the instrument.

Option 1C

An oscilloscope camera is useful for capturing single events and documenting measurement results. And it helps communicate results with clarity and credibility. Option 1C provides the Tektronix C-5C Option 04 Low-cost Camera for use with your oscilloscope.

Option 1K

When this option is specified, a K212 Portable Instrument Cart is included in the shipment. The cart provides a stable yet movable platform that is well-suited for on-site instrument mobility in a variety of work areas.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Option 1R

When the oscilloscope is ordered with Option 1R, it is shipped in a configuration that permits easy installation into virtually any 19-inch-wide electronic equipment rack. All hardware is supplied for mounting the instrument into the main frame.

Complete rack-mounting instructions are provided in a separate document. These instructions also contain the procedures for converting a standard instrument into the Option 1R configuration by using the separately orderable rack-mounting conversion kit.

Option 23

Two P6062B 1X-10X Selectable-attenuation Probes are provided in place of the standard P6103 10X Probes.

Power Cords

Instruments are shipped with the detachable power cord and fuse configuration ordered by the customer. Table 6-1 identifies the Tektronix part numbers for international power cords and associated fuses. Additional information about power-cord options is contained in Section 1, *Preparation for Use*.

Table 6-1
Power Cords and Fuses

Description	Part Number
Standard (United States)	
Power Cord, 2.5 m	161-0104-00
Fuse, 1.0 A, 250 V, 3AG, ¼" x 1¼", Slow	159-0019-00
Option A1 (Europe)	
Power Cord, 2.5 m	161-0104-06
Fuse, 0.5 A, 250 V, 3AG, ¼" x 1¼", Slow	159-0032-00
Option A2 (United Kingdom)	
Power Cord, 2.5 m	161-0104-07
Fuse, 0.5 A, 250 V, 3AG, ¼" x 1¼", Slow	159-0032-00

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 6-1 (cont'd)

Description	Part Number
Option A3 (Australia)	
Power Cord, 2.5 m	161-0104-05
Fuse, 0.5 A, 250V, 3AG, ¼" x 1¼", Slow	159-0032-00
Option A4 (North America)	
Power Cord, 2.5 m	161-0104-08
Fuse, 0.5 A, 250 V, 3AG, ¼" x 1¼", Slow	159-0032-00
Option A5 (Switzerland)	
Power Cord, 2.5 m	161-0167-00
Fuse, 0.5 A, 250 V, 3AG, ¼" x 1¼", Slow	159-0032-00

OPTIONAL ACCESSORIES

Table 6-2 lists recommended optional accessories for your instrument.

Table 6-2
Optional Accessories

Description	Part Number
Front-panel Protective Cover	200-3397-00
Accessory Pouch	016-0677-02
Front-panel Protective Cover and Accessory Pouch	020-1514-00
Hard Carrying Case	016-0792-01
CRT Light Filter, Clear	337-2775-01
Rack Mount Conversion Kit	016-0819-00
Viewing Hoods	
Collapsible	016-0592-00
Polarised	016-0180-00
Binocular	016-0566-00

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 6-2 (cont'd)

Description	Part Number
Alternative Power-Cords	
European	020-0859-00
United Kingdom	020-0860-00
Australian	020-0861-00
North American	020-0862-00
Swiss	020-0863-00
Attenuator Voltage Probes	
10X Standard	P6103
10X Subminiature	P6130
10X Environmental	P6008
1X-10X Selectable	P6062B
100X High Voltage	P6009
1000X High Voltage	P6015
Current Probes	P6021, P6022 A6302/AM503, A6303/AM503
Current-probe Amplifier	134
Active Probe, 10X FET	P6202A
Active-probe Power Supply	1101A
Ground Isolation Monitor	A6901
Isolator (for multiple, independently referenced, differential measurements)	A6902B
DC Inverter	1107
DC Inverter Mounting Kit	016-0785-00
Portable Power Supply	1105
Battery Pack	1106
Oscilloscope Cameras	
Low-cost	C-5C Option 04
Motorized	C-7 Option 03 and Option 30
Portable Instrument Cart	K212
2225 Service Manual	070-6299-00

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

APPENDIX A

Magnified Sweep Speeds

SEC/DIV Setting	Magnified Sweep Speed (Time/Division)		
	X5	X10	X50
0.5 s	.1 s	50 ms	10 ms
0.2 s	40 ms	20 ms	4 ms
0.1 s	20 ms	10 ms	2 ms
50 ms	10 ms	5 ms	1 ms
20 ms	4 ms	2 ms	.4 ms
10 ms	2 ms	1 ms	.2 ms
5 ms	1 ms	.5 ms	.1 ms
2 ms	.4 ms	.2 ms	40 µs
1 ms	.2 ms	.1 ms	20 µs
.5 ms	.1 ms	50 µs	10 µs
.2 ms	40 µs	20 µs	4 µs
.1 ms	20 µs	10 µs	2 µs
50 µs	10 µs	5 µs	1 µs
20 µs	4 µs	2 µs	.4 µs
10 µs	2 µs	1 µs	.2 µs
5 µs	.1 µs	.5 µs	.1 µs
2 µs	.4 µs	.2 µs	40 ns
1 µs	.2 µs	.1 µs	20 ns
.5 µs	.1 µs	50 ns	10 ns
.2 µs	40 ns	20 ns	N/A
.1 µs	20 ns	10 ns	N/A
.05 µs	10 ns	5 ns	N/A

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

APPENDIX B

Repackaging For Shipment

If this instrument is to be shipped by commercial transportation, it should be packaged in the original manner. The carton and packaging material in which your instrument was shipped to you should be retained for this purpose.

If the original packaging is unfit for use or is not available, repackage the instrument as follows:

1. Obtain a corrugated cardboard shipping carton having inside dimensions at least six inches greater than the instrument dimensions and having a carton test strength of at least 275 pounds.
2. If it is to be shipped to a Tektronix Service Center for service or repair, attach a tag to the instrument showing the following: owner (with address), name of the person at your firm who can be contacted, complete instrument type and serial number, and a description of the service required.
3. Wrap the instrument with polyethylene sheeting or equivalent to protect the outside finish and to prevent entry of packing materials.
4. Cushion the instrument on all sides by tightly packing dunnage or urethane foam between the carton and the instrument, allowing three inches on each side.
5. Seal the carton with shipping tape or with an industrial stapler.
6. Mark the address of the Tektronix Service Center and your return address on the carton in one or more prominent locations.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

NOTES

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP