ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Yokogawa F3AD04-0N* at our website: *Click HERE*

General Specifications

GS 34M6H51-01E

FA-M3
High-speed Counter Modules and Positioning Modules

FA-M3

Contents

F3XP01-0H and F3XP02-0H High-speed Counter Modules 3

F3NC11-0N and F3NC12-0N Positioning Modules
(advanced positioning with Pulse Output) 5

F3NC32-0N and F3NC34-0N Positioning Modules (with Pulse Output) 11

F3NC51-0N and F3NC52-0N Positioning Modules (with Analog Voltage Output) .. 27

F3YP04-0N and F3YP08-0N Positioning Modules
(with Multi-channel Pulse Output) 33

F3YP14-0N and F3YP18-0N Positioning Modules
(with Multi-channel Pulse Output) 38

YOKOGAWA
Yokogawa Electric Corporation

GS 34M6H51-01E
©Copyright Apr. 1997 (YK)
4th Edition March 2005 (AR)

General Specifications

F3XP01-0H and F3XP02-0H
High-speed Counter Modules

FA-M3

General

The F3XP01-0H and F3XP02-0H High-speed Counter Modules connect to sensors such as incremental encoders, and receive and count the number of pulse signals up to a speed of 100 kpps.


- It can count pulses as high speed as 100 kpps using a 32-bit counter.
- It contains two external coincidence outputs for each channel (two independent set values are allowed).
- The F3XP02 allows four external coincidence outputs to be specified for each channel (in this case, the other channel has no external coincidence output).
- It is provided with three counter modes (phase difference, pulse + direction, and count-up/count-down) to accommodate a variety of sensors.
- It offers the 2- and 4-time multiplication functions for improved resolution in the phase difference mode.

Specifications

Standard Specifications


Item		Specification	
		F3XP01-0H	F3XP02-0H
Counter	Number of channels	1	2
	Count range	$00000000 to $FFFFFFFF (32 bits)	
	Input frequency	0 - 100 kpps (400 kpps with 4-time multiplication in phase-difference mode)	
Mode	Operating mode	Linear, ring and up/down counters	
	Counter mode	Phase difference, pulse + direction and count-up/count-down	
	Multiplication mode	1-, 2- and 4-times multiplication (available only in the phase-difference mode)	
Input signal	Phases A and B, preset (phase Z), and counter enable	5 V, 12 V and 24 V DC (photocoupler insulation) (Connectable to RS-422 line driver signals.)	
Output signal	External coincidence output	2 points for each channel (turned on when counter value equals preset value.)	
Internal comparison		Counter value > Set value Counter value = Set value Counter value < Set value	
Current consumption		100 mA (5 V DC)	150 mA (5 V DC)
External connection		One 40-pin connector	Two 40-pin connectors
External dimensions		28.9 (W) × 100 (H) × 83.2 (D) mm*	
Weight		150 g	

*: Excluding protrusions (see external dimensions for details).

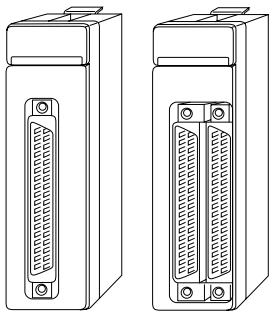

Components and Functions

● **F3XP01-0H (1-channel model)**

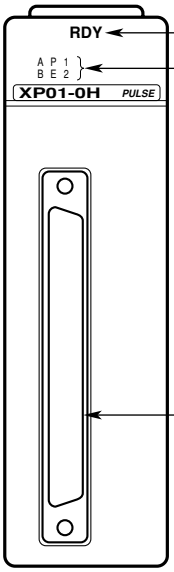


RDY indicator
Lit when the internal circuit is functioning normally.

Channel indicator
The following indicators light up when the corresponding condition occurs:
A: Phase-A pulse input signal goes on.
B: Phase-B pulse input signal goes on.
P: The external preset input signal goes on.
E: The module is in the counter enabled state.
1: The external coincidence output 1 (OUT1) goes on.
2: The external coincidence output 2 (OUT2) goes on.

40-pin connector

● **F3XP02-0H (2-channel model)**

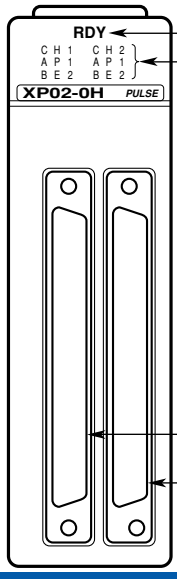

RDY indicator
Lit when the internal circuit is functioning normally.

Channel 1 and 2 indicator
The following indicators light up for each channel when the corresponding condition occurs:
A: Phase-A pulse input signal goes on.
B: Phase-B pulse input signal goes on.
P: The external preset input signal goes on.
E: The module is in the counter enabled state.
1: The external coincidence output 1 (OUT1) goes on.
2: The external coincidence output 2 (OUT2) goes on.

CH1 and CH2 connectors:
Two 40-pin connectors

All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation

■ Input/Output Signal Specifications

All input/output signals are isolated by photocouplers.

● **External input signals**

A : Phase-A pulse input signal
B : Phase-B pulse input signal
PST : External preset input signal
The preset value is loaded into the counter on the rising edge of the signal.
EN : External counter enable input signal
The module performs counting and comparison operations while this signal is on.

● **External Output Signals**

OUT1 and OUT2 : External coincidence signals

● **Electrical Data**

1. Input Signals

Signal	Ter-minal	Input Type	Rated Input Voltage (Operating Voltage Range)	Rated Input Current	Operating Voltage/Current	
					ON	OFF
A, B and PST	5 V	DC voltage	5 V DC (4.25 to 5.5 V DC)	16.8 mA	3.5 V min. 10 mA min.	1.5 V max. 2 mA max.
	12 V		12 V DC (10.2 to 13.2 V DC)	15.5 mA	8 V min. 10 mA min.	2.4 V max. 2 mA max.
	24 V		24 V DC (20.4 to 26.4 V DC)	15.8 mA	16 V min. 10 mA min.	4.8 V max. 2 mA max
EN	5 V		5 V DC (4.25 to 5.5 V DC)	4.6 mA	3.5 V min. 3.2 mA min.	1.5 V max. 0.9 mA max.
	12 V		12 V DC (10.2 to 13.2 V DC)	4.6 mA	8 V min. 3.2 mA min.	2.4 V max. 0.9 mA max.
	24 V		24 V DC (20.4 to 26.4 V DC)	4.9 mA	16 V min. 3.2 mA min.	4.8 V max. 0.9 mA max.

2. Output Signals


Signal	Output	Rated Load Voltage (Maximum Load Voltage)	Maximum Load Current	Residual Voltage at ON	Leakage Current at OFF	Surge Protector	Response (Pulse Input → Output On)	Common Format
OUT1 and OUT2	Transistor contact	5 - 24 V DC (26.4 V DC)	0.1 A/point	1.5 V DC max.	0.1 mA max.	None	0.1 ms max.	All points independent.

■ Configuration Example


This example accomplishes high-speed positioning of a motor using two external coincidence outputs of channel 1.

Settings : Set preset values 1 and 2 of channel 1 to the following values:
Preset value 1 : Pulse value for the slow-down command
Preset value 2 : Pulse value for the stop command

Operating : When the output relay in a contact output module (e.g., F3YD32) turns on, the motor is actuated and starts high-speed operation. It starts slowing down when the counter value coincides with preset value 1 and stops when the counter value coincides with preset value 2.

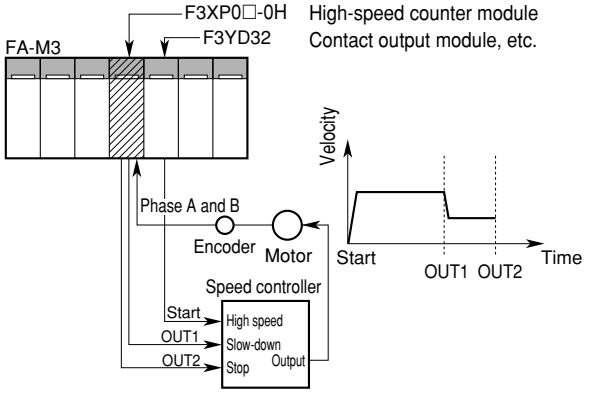

■ External Connection Diagram

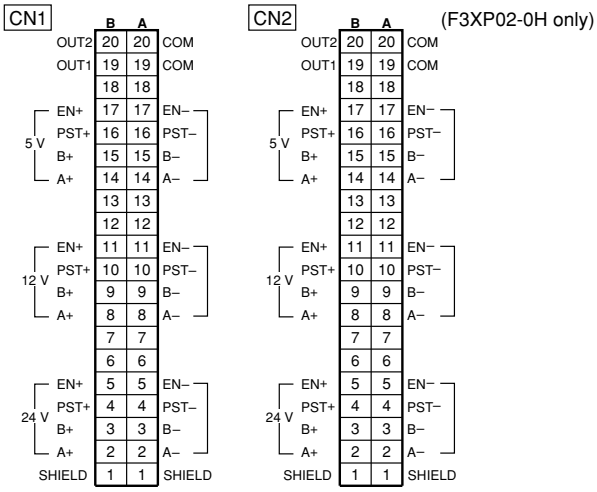

■ Applicable External Connectors

Connection Method	Applicable Connector	Remarks
Soldered type	Fujitsu:FCN-361J040-AU connector FCN-360C040-B connector cover	Supplied by the user.
Solderless type	Fujitsu:FCN-363J040 housing FCN-363J-AU contact FCN-360C040-B connector cover	
Pressure-welded type	Fujitsu:FCN-367J040-AU/F	

■ Operating Environment

There is no restriction on the type of CPU modules that can be used with these modules.


■ Model and Suffix Codes

Model	Suffix Code	Style Code	Option Code	Description
F3XP01	- 0H	· · · · · ·	· · · · · ·	0-100 Kpps, 1 point, 32 bits
F3XP02	- 0H	· · · · · ·	· · · · · ·	0-100 Kpps, 2 points, 32 bits

Note: See the section on spare parts in the FA-M3 Universal-range Multi-controller (GS 34M6A01-01E) for information on connectors.

■ External Dimensions

Unit: mm

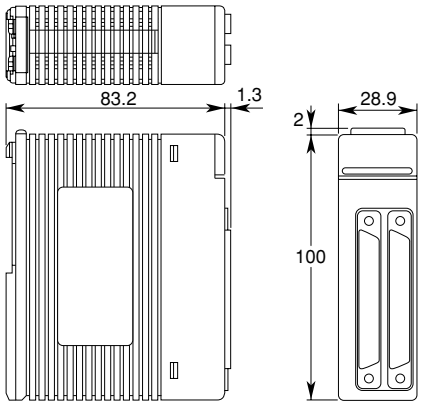

Note: This figure is for the F3XP02-0H.

All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation

General Specifications


F3NC11-0N and F3NC12-0N
Positioning Modules
(with Advanced Positioning Pulse Output)

FA-M3

General

The F3NC11-0N and F3NC12-0N are positioning modules with advanced positioning pulse output in the FA-M3 series.

- One module can control both 1- and 2-axis motors. Being of pulse output type, these modules are well suited for position command type servo motors and drivers, or pulse motors and drivers.
- The modules are provided with simultaneous multi-axis control functions. When activated by a CPU module, these modules can perform a variety of smooth position control functions including multi-axis linear interpolation, velocity control functions and velocity/position control mode switching.
- The modules feature a short startup time of 6 ms maximum, on-route mode operation, and external-trigger-driven wait operation. These functions allow the modules to start at high speed and synchronize their operation with that of peripheral devices.

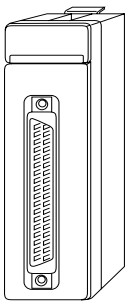

Specifications


Standard Specifications

Item		Specification	
		F3NC11-0N	F3NC12-0N
Number of axes		1	2
Control	Control system	Open-loop control using a position command pulse output	
	Output pulse	• RS-422A compliant difference output (249,750 pulses/s max.) • Open-collector output (maximum pulse rate is limited by load capacitance and other factors; 50,000 pulses/s or lower is recommended.)	
Control mode		Position control, velocity control and velocity/position control switching	
Position control	Interpolation system	Independent axis operation, multi-axis linear interpolation operation (set up by the CPU) and 2-axis arc interpolation (set up by the CPU)	
	Command position	-8,388,608 to 8,388,608 pulses	
	Command speed	0.1 to 249,750 pulses/s	
	Function	On-route operation, change in target position or velocity during operation	
Velocity control	Command speed	-249,750 to 249,750 pulses/s	
	Function	Change in velocity during operation	
Acceleration/ deceleration	Acceleration/ deceleration system	Trapezoidal	
	Acceleration/ deceleration time	0 to 32,767 ms acceleration/deceleration independently programmable	
Home position search	Search mode	Selectable from home position input, proximity-to-home position input and limit input Encoder Z-phase available	
	Search speed	Arbitrarily programmable	
External contact input		Limit switch, home position, proximity to home position, external trigger and emergency stop	
Data backup		Backup using the CPU module	
Startup time		6 ms max.	
Current consumption		180 mA (5 V DC)	
External power supply		5 V DC, 200 mA	
External connection		One 40-pin connector	
External dimensions		28.9 (W) × 100 (H) × 83.2 (D) mm*	
Weight		100 g	

*: Excluding protrusions (see external dimensions for details).

Components and Functions

● **F3NC11-0N (1-axis model)**

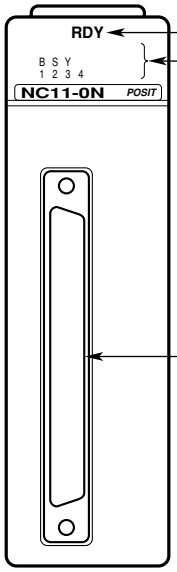


RDY indicator
Lit when the internal circuit is functioning normally.

Axis indicator
Indicates the state of the axis.
BSY: Lit when the module is in positioning operation.
1-4 : Lit when an error occurs.

External I/O connector
Connects to external inputs/outputs such as servo motors and limit switches.

● **F3NC12-0N (2-axis model)**

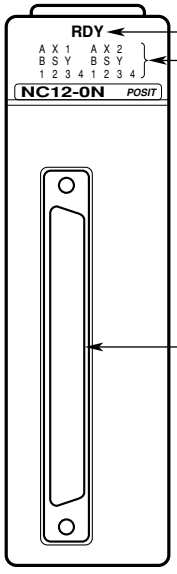


RDY indicator
Lit when the internal circuit is functioning normally.

AX1/AX2 indicator
Indicates the state of each axis.
BSY: Lit when the module is in positioning operation.
1-4 : Lit when an error occurs.


External I/O connector
Connects to external inputs/outputs such as servo motors and limit switches.

All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation

Configuration Example

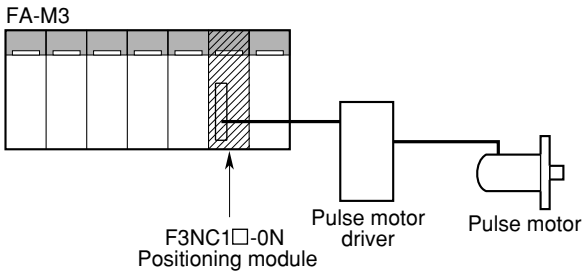

External Connection Diagram

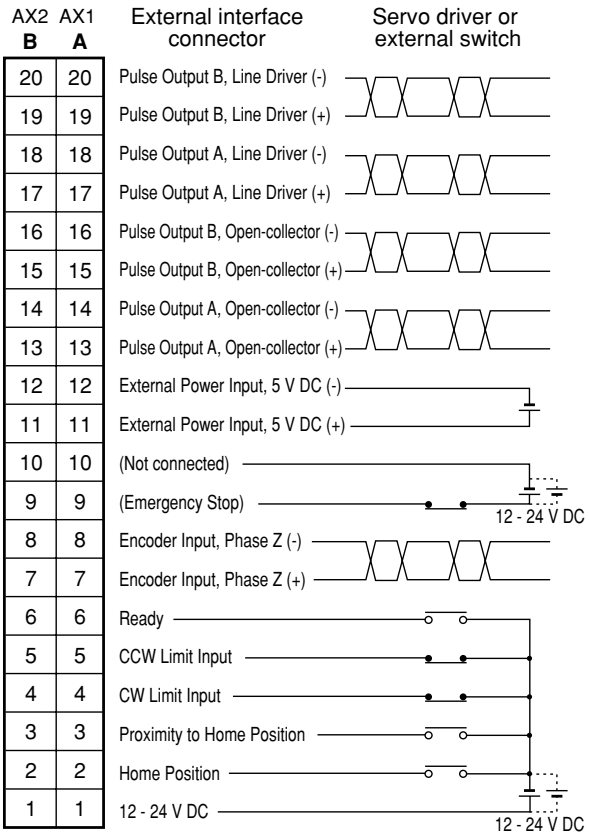

- AX2 has the same external connection configuration as in AX1.
- AX1 and AX2 have their own circuits except for 9A/9B, 11A/11B and 12A/12B.
- 11A and 11B, 12A and 12B are short-circuited internally.
- The Emergency Stop input (between 9A and 9B) is common input to both AX1 and AX2.
- The F3NC01-0N does not have AX2.
- One of the following two pulse output formats can be selected for each axis:

Pulse output format	Pulse output A	Pulse output B
CW / CCW output	CCW pulse	CW pulse
Pulse/polarity output	Pulse	Polarity (ON in CW direction)

Applicable External Connectors

Connection Method	Applicable Connector	Remarks
Soldered type	Fujitsu:FCN-361J040-AU connector FCN-360C040-B connector cover	Supplied by the user.
Solderless type	Fujitsu:FCN-363J040 housing FCN-363J-AU contact FCN-360C040-B connector cover	
Pressure-welded type	Fujitsu:FCN-367J040-AU/F	

Operating Environment

There is no restriction on the type of CPU modules that can be used with these modules.


Model and Suffix Codes

Model	Suffix Code	Style Code	Option Code	Description
F3NC11	- 0N	·····	·····	1-axis, -8,388,608 to + 8,388,608 pulses, 0.1 to 249,750 pps
F3NC12	- 0N	·····	·····	2-axis, -8,388,608 to + 8,388,608 pulses, 0.1 to 249,750 pps

Note: See the section on spare parts in the FA-M3 Range-free Multi-controller (GS 34M6A01-01E) for information on connectors.

External Dimensions

Unit: mm

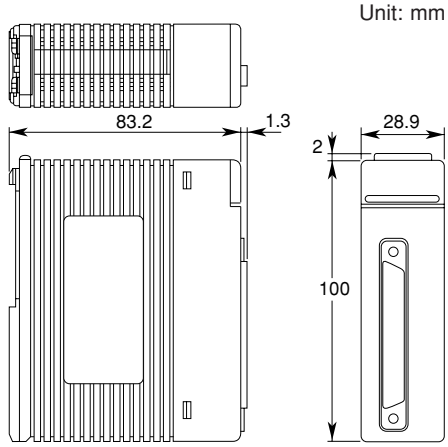

Electrical Data

1. Input Signals

Signal	Input	Rated Input Voltage (Operating Voltage Range)	Rated Input Current	Operating Voltage/Current	
				ON	OFF
External contact input	DC voltage	12 - 24 V DC (10.2 to 26.4 V DC)	3.3 mA (12 V) 6.9 mA (24 V)	8 V min. 2.1 mA min.	1 V max. 0.8 mA max.
Encoder Z-phase input	DC voltage	5 - 12 V DC (3.5 to 13.2 V DC)	4.6 mA (5 V) 13.2 mA (12 V)	3.5 V min. 3 mA min.	3.4 V max. 0.8 mA max.

2. Output Signals

Signal		Output	Rated Load Voltage (Maximum Load Voltage)	Maximum Load Current	ON-time Residual Voltage	OFF-time Leakage Current
Pulse output*	Open-collector	Transistor contact	12 - 24 V DC (26.4 V DC)	50 mA/point	1 V DC max.	0.1 mA max.
	Line driver	RS-422 compliant difference signal	—	—	—	—


*: Pulse outputs require an external power supply ±5 V DC 65%, 200 mA).

All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation

Function Overview

1. Positioning System

This is a positioning module with positioning pulse outputs for the FA-M3 series. It generates positioning trajectory data and position command values in the pulse train according to commands from a CPU module.

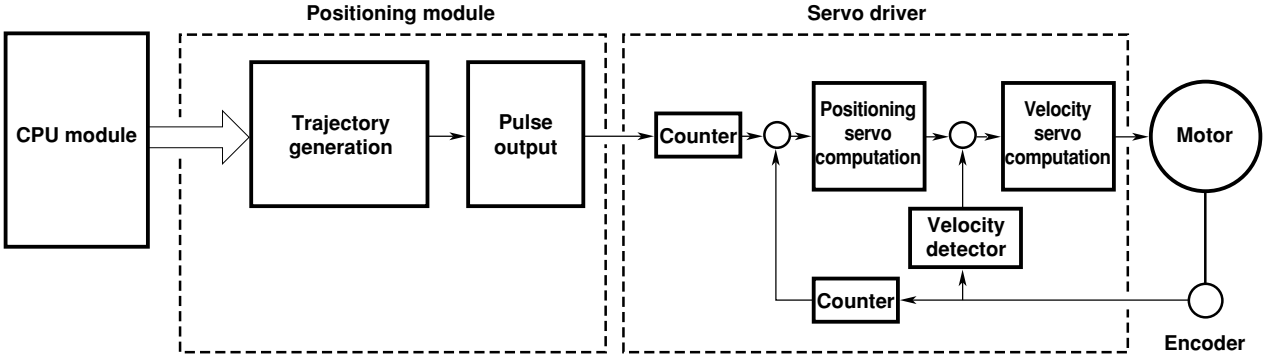


2. Position Control


2.1 Positioning Operation

A positioning operation is started by writing the velocity setpoint (pulses/ms), target position (pulses), acceleration time (ms), and deceleration time (ms) from the CPU module and turning on the operation start relay. The positioning completion relay turns on when the output of position command pulses ends.


• The acceleration/deceleration curve forms a trapezoid. The acceleration and deceleration times must be set separately.

Velocity and Acceleration/Deceleration Times in the Trapezoidal Drive/Triangular Drive Mode

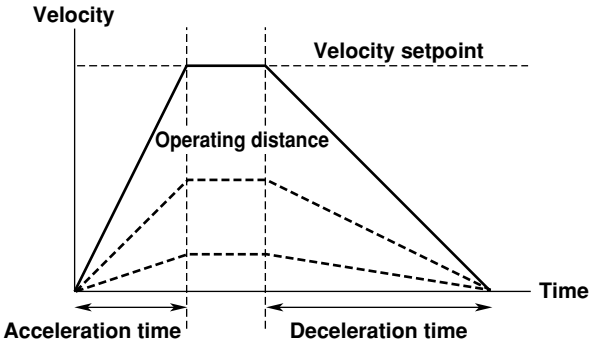

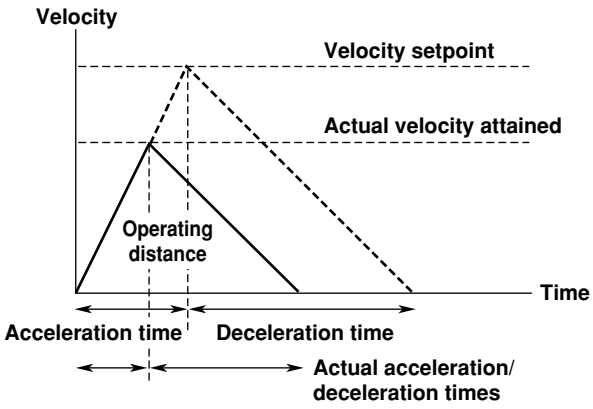

End-of-positioning Timing and Actual Motor Operation

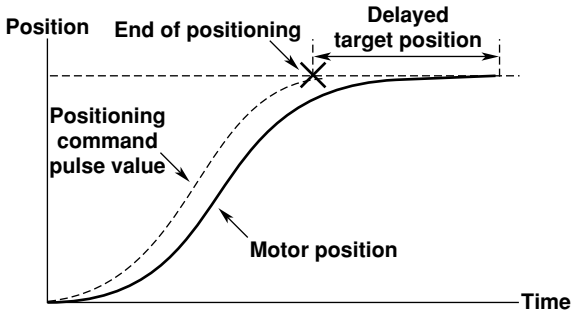



All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation

2.2 Multi-axis Linear Interpolation Operation

A linear interpolation operation is started by writing the velocity setpoint (pulses/ms), target position (pulses), acceleration time (ms), and deceleration time (ms) from the CPU module and turning on the operation start relays for all axes at the same time. When the output of position command pulses for an axis ends, the positioning completion relay associated with that axis turns on. The acceleration time (ms) and deceleration time (ms) must be set to the the same values for all axes that are subject to linear interpolation processing. The velocity setpoint (pulses/ms) for the axes must be calculated and preset so that it is equal to the ratio of the distances traveled along the axes.

Multi-axis Linear Interpolation Operation (2-axis)

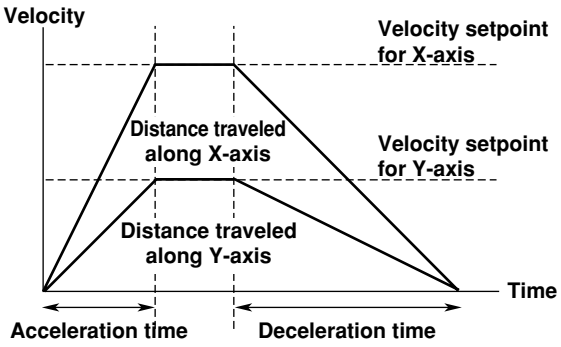

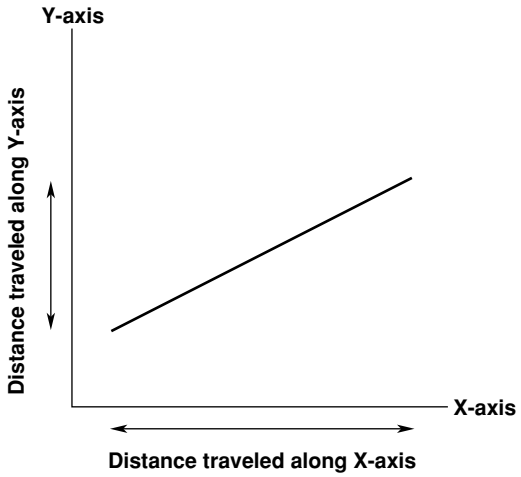


2.3 On-route Operation

When the next positioning operation is started while the execution of the current positioning operation is in progress, the positioning module keeps on combining the two positioning operations until the preceding positioning operation ends. This mode of operation is called an on-route operation and the interval during which the two positioning operations overlap is called an on-route interval. The on-route operation allows the positioning module to continue its operation toward the next target position without stopping at the preceding target position.


• The direction of movement may be changed during an on-route operation.

Normal Positioning Operation and On-route Operation


● **Normal Positioning Operation**

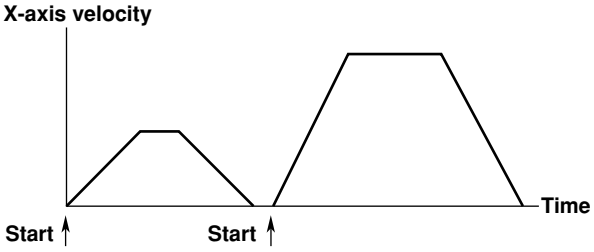

● **On-route Operation**

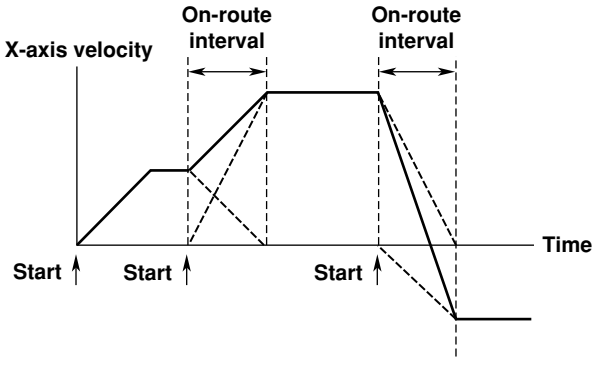

● **Example of an On-route Operation Using 2-axis Linear Interpolation**

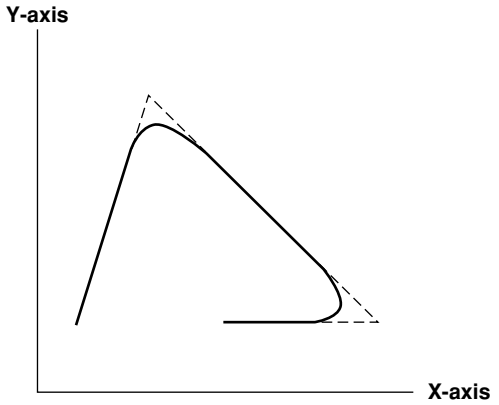


All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation

2.4 Changing the Target Position during Positioning


The positioning module changes the target position when the user turns on a relay to change the target position by writing new positioning parameters during positioning operation. The user can also change the traveling velocity at the same time. In addition, the user can change the target position in such a way that the direction of movement is also changed (in this case, the positioning module decelerates and stops promptly and starts positioning to the new target position.)

Target Position Change Operation

● **When Direction Change Is Not Involved**

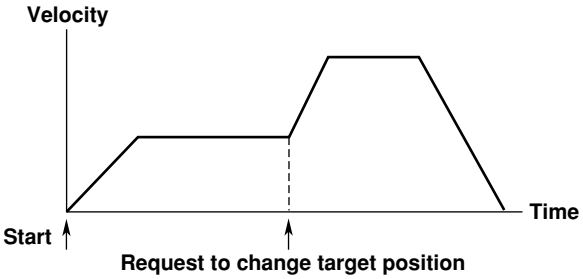


● **When a Direction Change Is Involved**

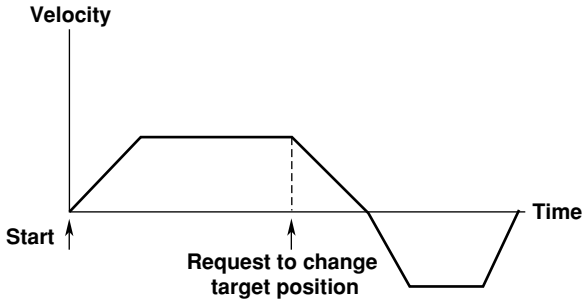

2.5 Changing the Velocity during Positioning

The positioning module changes the traveling velocity when the user turns on a relay to change the velocity by writing a new velocity (pulses/ms) during a positioning operation.

Change Velocity Operation

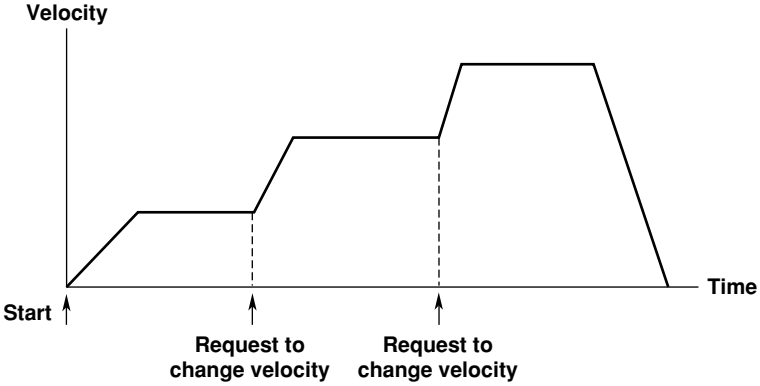


3. Velocity Control

A velocity control operation is executed by writing the velocity setpoint (pulses/ms, specify a negative value to drive the target in the negative direction), acceleration time (ms), and deceleration time (ms) from the CPU module and turning on the operation startup relay.

• The velocity can be changed while the positioning module is running.

Velocity Control and Change Operations

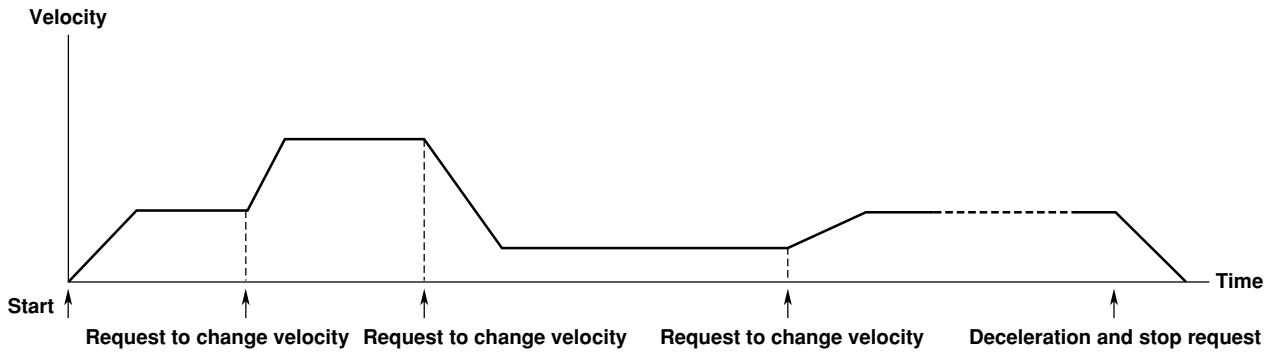

All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation

4. Velocity/Position Control Switching Control


4.1 Velocity/Position Control Switching

The module starts positioning operation from scratch if the velocity setpoint (pulses/ms), target position (pulses), acceleration time (ms) and deceleration time (ms) are written from the CPU module, and then the control mode is changed to position control.


- The user can switch from velocity to position control mode in normal transfer operation as well as with remote triggering features.
- The user can set edges and counts when the Z-phase count is selected.

Switching Velocity to Position Control Operation

● **No Z-phase Count Is Specified**

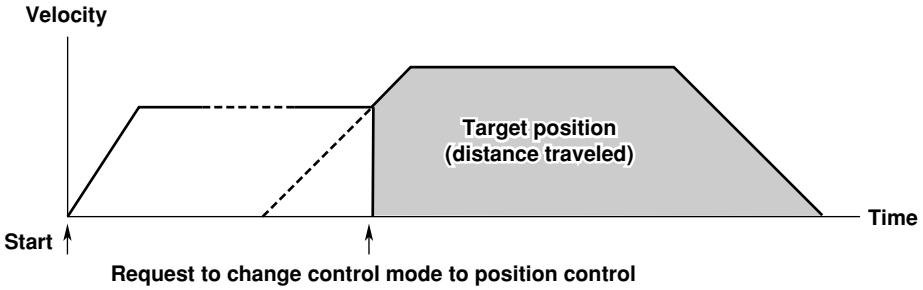

● **A Z-phase Count Is Specified (Rising Edge, 2 Times)**

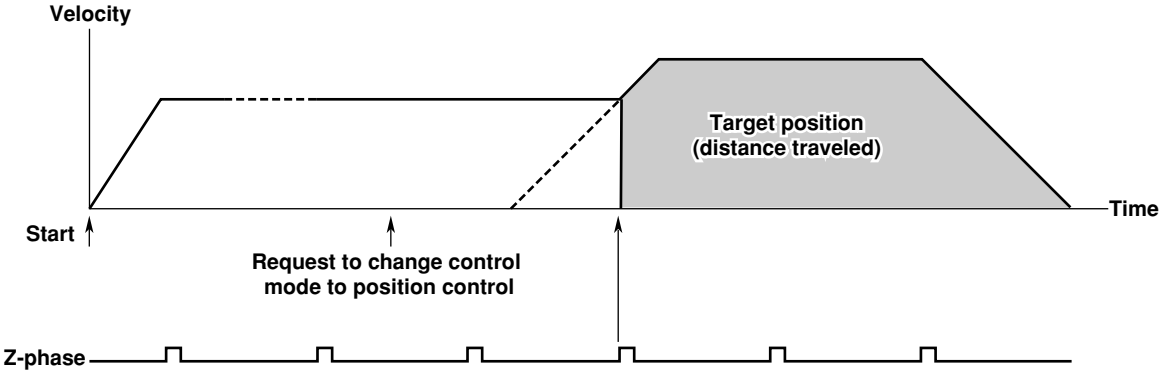

4.2 Switching Position to Velocity Control

When the control mode is switched from position to velocity control during positioning operation, the positioning module performs velocity control operation while maintaining the velocity that was set before the control mode switching occurs.

All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation

General Specification

F3NC32-0N and F3NC34-0N
Positioning Module
(with pulse output)

FA-M3

■ General

The F3NC32-0N and F3NC34-0N positioning modules are advanced I/O modules to be mounted onto the base module of an FA-M3 range-free controller. It generates a position control path according to commands from the CPU module and outputs position reference as pulse trains.

It comes in two models: F3NC32-0N and F3NC34-0N, which can simultaneously control up to two and four axes respectively. With position reference pulse output, the module is suitable for driving servo motors or drivers, as well as stepper motors or drivers in position control applications.



■ Features

The module has the following features:

● **Fast and accurate positioning control**

- High speed position reference pulse output at 5 Mpps max. for servo motors and 1 Mpps max. for stepper motors provides comfortable margin for driving linear, DD and other high speed, high precision motors.
- Short startup time of 0.15 ms for one axis, and 0.5 ms for either four axes under linear interpolation or two axes under circular interpolation allows synchronization with high-speed peripheral devices.

● **Rich positioning control functions**

- A full range of positioning control functions enable easy implementation of any positioning control application. Available positioning control modes include: position control (PTP, CP and indexing), speed control, speed control to position control switchover, and position control to speed control switchover. Interpolation systems include linear, circular and helical.
- Two operation modes are provided: pattern operation and direct operation. Pattern operation uses preset action patterns for easier operation. Direct operation uses a ladder program to set up target position and specified speed for each positioning action.

● **Pulse counter and general purpose I/O contacts**


- A 5-Mpps pulse counter (supporting absolute encoders) is provided for each axis. As the pulse counter can serve as a motor position feedback, the module can check the current position, detect position shift, and by itself implement closed-loop position control for increased positioning accuracy.
- 6 general inputs and 3 general outputs are provided for each control axis. When connected to a motor/driver, these I/O contacts can serve as various control signals: driver alarm, positioning completed, servo motor on, driver reset, etc.

● **Parameter setup, action monitoring and action testing using setup tool for positioning modules**


- A setup tool known as "ToolBox for Positioning Modules (SF662-ECW)" is available for easier module configuration and debugging. It can be used to set up registered parameters, action patterns and position data, as well as perform action monitoring and testing.

■ Components and Their Functions

● **F3NC32-0N (with two axis)**

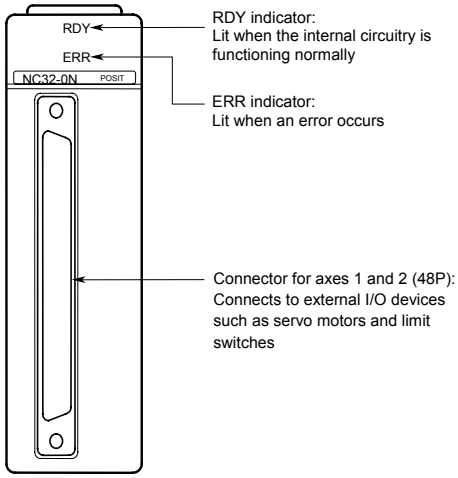

● **F3NC34-0N (with four axes)**

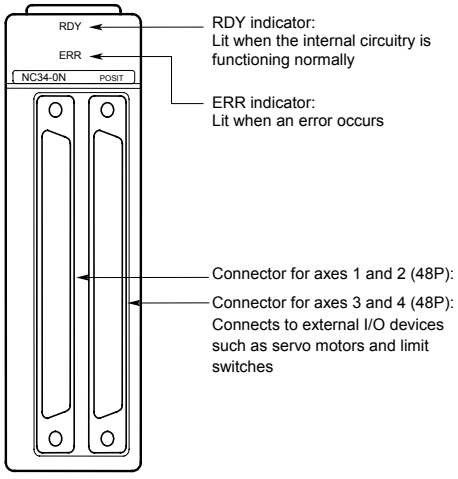

All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation

■ Specifications


Item		Specifications	
		F3NC32-0N	F3NC34-0N
Control	Number of controlled axes	2	4
	Control method	Open-loop control using position reference pulse output	
	Output pulse type	RS-422A compliant differential line driver (AM26C31 or equivalent); Pulse type selectable for each axis: CW/CCW pulse, travel/direction pulse, and phase A/phase B pulse	
	Output pulse rates	- Using servo motor - Using stepper motor CW/CCW: 5,000,000 (pulse/s) 1,000,000 (pulse/s) Travel/direction: 5,000,000 (pulse/s) 1,000,000 (pulse/s) Phase A/B (x4): 5,000,000 (pulse/s) 1,000,000 (pulse/s) Phase A/B (x2): 2,500,000 (pulse/s) 500,000 (pulse/s) Phase A/B (x1): 1,250,000 (pulse/s) 250,000 (pulse/s)	
Counter	Number of channels	2	4
	Input pulse type	- Incremental encoder (phase A/B) - Absolute encoder (See "Compatible Absolute Encoders" below for details)	
	Input pulse rate	Phase A/B (x 4): 5,000,000 (pulse/s) Phase A/B (x 2): 2,500,000 (pulse/s) Phase A/B (x 1): 1,250,000 (pulse/s)	
External contact input		6 inputs per axis (origin input, forward limit input, reverse limit input, driver alarm input, external trigger input, and general input 6); 1 emergency stop input	
External contact output		3 outputs per axis (deviation pulse clear signal, general output 2 and general output 3), and 1 SEN signal per axis	
Positioning functions	Units of measurement	mm, degrees and pulses	
	Control modes	Position control (PTP, CP and index); Speed control, position control to speed control switchover, and speed control to position control switchover	
	Interpolation modes	Single axis movement; 2-axis linear interpolation; 2-axis circular interpolation	Single axis movement; 2-, 3-, and 4-axis linear interpolation; 2-axis circular interpolation, 3- and 4-axis helical interpolation
	Operation modes	Pattern operation and direct operation	
	Pattern operation	PTP movement, CP normal movement, CP pass-by movement, and CP pass-through movement; Number of action pattern records: 2000 max. (500 actions each for 4 patterns) Number of position data records: 2000 max per axis	
	Position reference	Absolute/incremental position reference -2,147,483,648 to 2,147,483,647 (pulses) -214,748.3648 to 214,748.3647 (mm) -21,474.83648 to 21,474.83647 (degrees)	
	Speed reference	1 to 5,000,000 (pulses/s) 0.0001 to 214,748.3647 (mm/s) 0.00001 to 21,474.83647 (degree/s)	
	Acceleration/deceleration curve	Automatic trapezoidal acceleration/deceleration (configurable startup speed); Automatic S-shape acceleration/deceleration (startup speed not configurable)	
	Acceleration/deceleration time	0 to 32,767 (configurable independently for acceleration and deceleration)	
	Others	Change in target position during movement Change in specified speed during movement	
Origin search		Two types of automatic origin search; Manual origin search (any combination of external contact inputs may be used)	
Manual operation		Jog operation and manual pulse generator mode	
Other functions		Electronic gear, teaching, current position setup; M code output, override, software limit switch; Counter coincidence or zone coincidence detection	
Data backup		Flash ROM (100,000 times rewritable)	
Startup time*1		0.15 ms for single axis positioning 0.16 ms for 2-axis linear interpolation 0.41 ms for 2-axis circular interpolation	0.15 ms for single axis positioning 0.17 ms for 4-axis linear interpolation 0.41 ms for 2-axis circular interpolation
Current consumption (at 5 V DC)		450 mA	540 mA
External power supply (24 V DC)		80 mA	120 mA
External wiring		One 48-pin connector	Two 48-pin connectors
External dimensions		28.9 (W) x 100 (H) x 83.2 (D) mm*2	
Weight		135 g	180g

*1: Up to 1 ms delay may be added if another axis is in motion.

*2: Not including protrusions (see the external dimension diagram for details)

All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation

■ External Connection Diagram

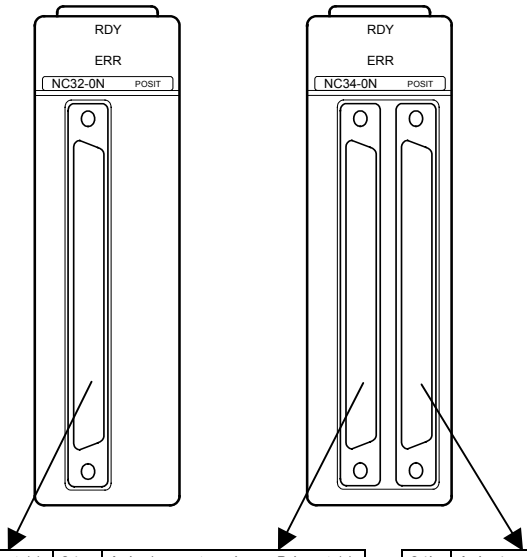

24b	Axis 2 counter phase B input (-)	24a	Axis 1 counter phase B input (-)
23b	Axis 2 counter phase B input (+)	23a	Axis 1 counter phase B input (+)
22b	Axis 2 counter phase A input (-)	22a	Axis 1 counter phase A input (-)
21b	Axis 2 counter phase A input (+)	21a	Axis 1 counter phase A input (+)
20b	Axis 2 encoder Z-phase input (-)	20a	Axis 1 encoder Z-phase input (-)
19b	Axis 2 encoder Z-phase input (+)	19a	Axis 1 encoder Z-phase input (+)
18b	Axis 2 SEN signal output	18a	Axis 1 SEN signal output
17b	Axis 2 SEN signal output (GND)*1	17a	Axis 1 SEN signal output (GND)*1
16b	Axis 2 general output 3*4	16a	Axis 1 general output 3*4
15b	Axis 2 general output 2*4	15a	Axis 1 general output 2*4
14b	Axis 2 deviation pulse clear output*4	14a	Axis 1 deviation pulse clear output*4
13b	Contact input COM*2	13a	Contact input COM*2
12b	Axis 2 general input 6*4	12a	Axis 1 general input 6*4
11b	Axis 2 external trigger input*4	11a	Axis 1 external trigger input*4
10b	Axis 2 driver alarm input*4	10a	Axis 1 driver alarm input*4
9b	Axis 2 reverse limit input*4	9a	Axis 1 reverse limit input*4
8b	Axis 2 forward limit input*4	8a	Axis 1 forward limit input*4
7b	Axis 2 origin input*4	7a	Axis 1 origin input*4
6b	Axis 2 pulse output B (-) (CCW/direction/phase B)	6a	Axis 1 pulse output B (-) (CCW/direction/phase B)
5b	Axis 2 pulse output B (+) (CCW/direction/phase B)	5a	Axis 1 pulse output B (+) (CCW/direction/phase B)
4b	Axis 2 pulse output A (-) (CW/travel/phase A)	4a	Axis 1 pulse output A (-) (CW/travel/phase A)
3b	Axis 2 pulse output A (+) (CW/travel/phase A)	3a	Axis 1 pulse output A (+) (CW/travel/phase A)
2b	Emergency stop input (GND)*3	2a	Emergency stop input*3
1b	24-V external power supply input (GND)*3	1a	24-V external power supply input*3

24b	Axis 4 counter phase B input (-)	24a	Axis 3 counter phase B input (-)
23b	Axis 4 counter phase B input (+)	23a	Axis 3 counter phase B input (+)
22b	Axis 4 counter phase A input (-)	22a	Axis 3 counter phase A input (-)
21b	Axis 4 counter phase A input (+)	21a	Axis 3 counter phase A input (+)
20b	Axis 4 encoder Z-phase input (-)	20a	Axis 3 encoder Z-phase input (-)
19b	Axis 4 encoder Z-phase input (+)	19a	Axis 3 encoder Z-phase input (+)
18b	Axis 4 SEN signal output	18a	Axis 3 SEN signal output
17b	Axis 4 SEN signal output (GND)*1	17a	Axis 3 SEN signal output (GND)*1
16b	Axis 4 general output 3*4	16a	Axis 3 general output 3*4
15b	Axis 4 general output 2*4	15a	Axis 3 general output 2*4
14b	Axis 4 deviation pulse clear output*4	14a	Axis 3 deviation pulse clear output*4
13b	Contact input COM*2	13a	Contact input COM*2
12b	Axis 4 general input 6*4	12a	Axis 3 general input 6*4
11b	Axis 4 external trigger input*4	11a	Axis 3 external trigger input*4
10b	Axis 4 driver alarm input*4	10a	Axis 3 driver alarm input*4
9b	Axis 4 reverse limit input*4	9a	Axis 3 reverse limit input*4
8b	Axis 4 forward limit input*4	8a	Axis 3 forward limit input*4
7b	Axis 4 origin input*4	7a	Axis 3 origin input*4
6b	Axis 4 pulse output B (-) (CCW/direction/phase B)	6a	Axis 3 pulse output B (-) (CCW/direction/phase B)
5b	Axis 4 pulse output B (+) (CCW/direction/phase B)	5a	Axis 3 pulse output B (+) (CCW/direction/phase B)
4b	Axis 4 pulse output A (-) (CW/travel/phase A)	4a	Axis 3 pulse output A (-) (CW/travel/phase A)
3b	Axis 4 pulse output A (+) (CW/travel/phase A)	3a	Axis 3 pulse output A (+) (CW/travel/phase A)
2b	*5	2a	*5
1b	24-V external power supply input (GND)*3	1a	24-V external power supply input*3

*1: SEN signal output (GND) pins for all axes are connected internally. They may be used as the GND pin for pulse outputs.

*2: Contact input COM pins for all axes are connected internally (even across different connectors).

*3: The single emergency stop input and 24-V external power supply input are used for all axes. The 24-V external power supply input pins are connected together internally across different connectors.

*4: I/O contacts can be configured as normally-open (NO contact) or normally-closed (NC contact) using registered parameters for each axis.

Origin input, forward limit input, reverse limit input, driver alarm input, and external trigger input may be configured as general inputs, while deviation pulse clear output may be configured as a general output using registered parameters for each axis.


*5: Absolutely do not wire these pins.

All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation

■ Electrical Characteristics


● Emergency stop input

Item	Specifications
Isolation method	Photocoupler isolation
Input impedance	7.4 kΩ
Rated input voltage (allowable input voltage range)	24 V DC (20.4 to 26.4 V DC)
Rated input current	3.1 mA
Input voltage/current for emergency stop reset	19.2 V DC min./ 2.4 mA min.
Input voltage/current for emergency stop	5.8 V DC max./ 0.9 mA max.

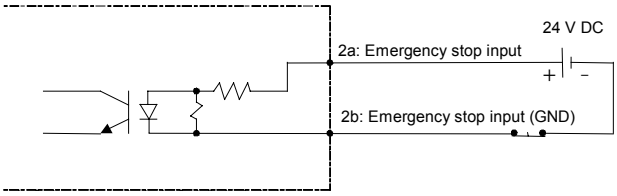


● Pulse output


Item	specifications
Isolation method	Photocoupler isolation
Electrical specification	RS-422A compliant differential line driver (AM26C31 or equivalent)
Transmission rate	5,000,000 pps

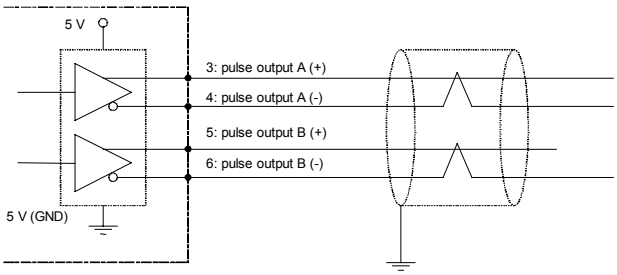


Signal Pins	Off (break)	On (mark)
Output (+)	Differential positive (high level)	Differential negative (low level)
Output (-)	Differential negative (low level)	Differential positive (high level)

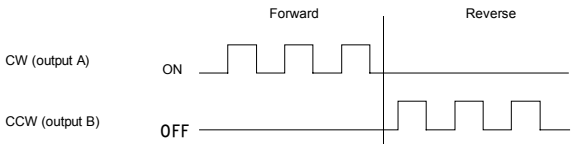


Pulse Output Type	Output A	Output B
CW/CCW	CW signal	CCW signal
Travel/direction	Travel signal	Direction signal
Phase A/phase B	Phase A signal	Phase B signal

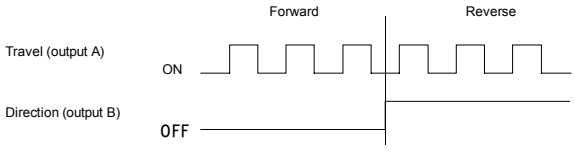

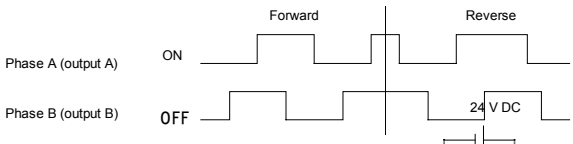

● External contact input


Item	Specifications
Isolation method	Photocoupler isolation
Input impedance	7.4 kΩ
Rated input voltage (allowable input voltage range)	24 V DC (20.4 to 26.4 V DC)
Rated input current	3.1 mA
Voltage/current for on signal (for NO contact)	19.2 V DC min./ 2.4 mA min.
Voltage/current for off signal (for NO contact)	5.8 V DC max./ 0.9 mA max.
Common type	Shared common
Response time	2 ms max.

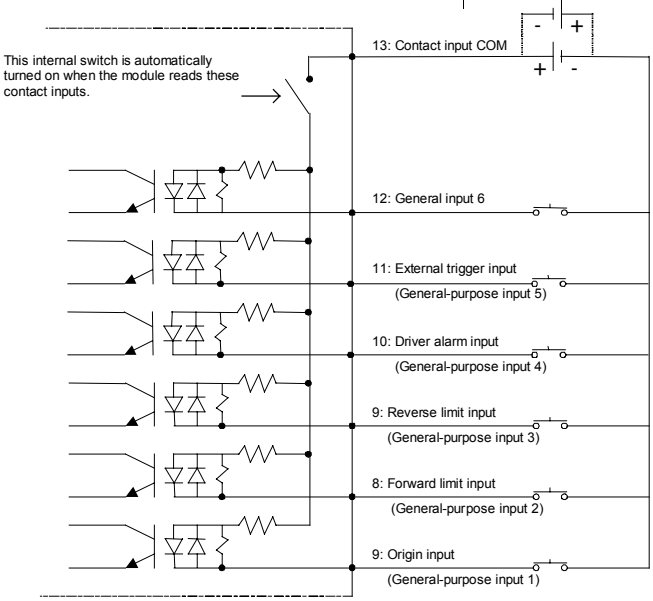

All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation


- **External contact output**

Item	Specifications
Isolation method	Photocoupler isolation
Rated load voltage	24 V DC
Maximum load current	50 mA per contact
OFF leakage current	0.1 mA max.
ON residual voltage	1 V DC max.
Common type	Shared common
External power supply	24 V DC

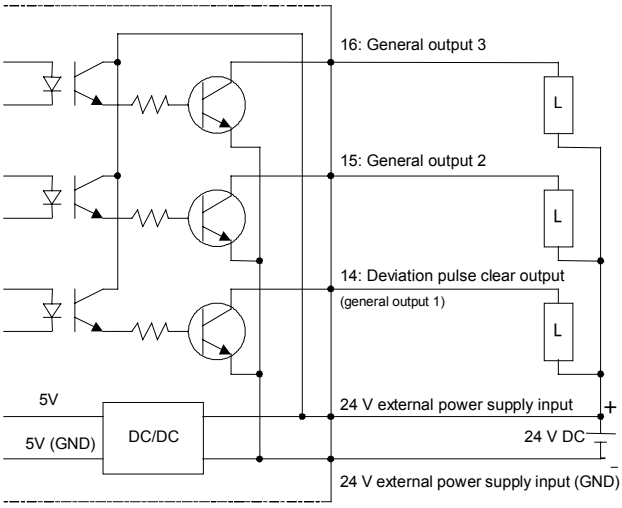


- **Encoder Z-phase input**


Item	Specifications
Isolation method	Photocoupler isolation
Input impedance	240 Ω
Rated input voltage (allowable input voltage range)	5 V DC (4.25 to 5.5 V DC)
Rated input current	15.3 mA
Voltage/current for on signal (for NO contact)	3.5 V DC min./ 9 mA min.
Voltage/current for off signal (for NO contact)	1.5 V DC max./2 mA max.
Common type	Separate commons
Response time	1 ms max.

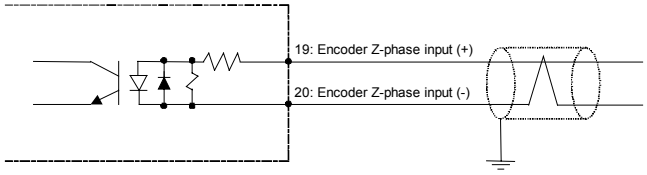

- **Counter input**


Item	Specifications
Isolation method	Photocoupler isolation
Input impedance	240 Ω
Rated input voltage (allowable input voltage range)	5 V DC (4.25 to 5.5 V DC)
Rated input current	15.3 mA
Voltage/current for on signal (for NO contact)	3.5 V DC min./ 9 mA min.
Voltage/current for off signal (for NO contact)	1.5 V DC max./2 mA max.
Common type	Separate commons

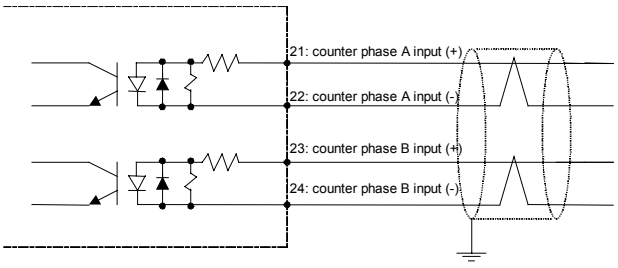

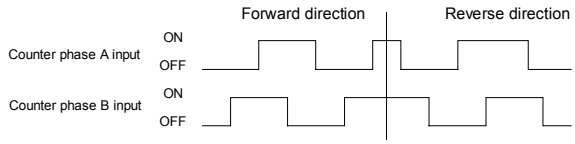

- **SEN signal output (to Yaskawa Electric absolute-value encoder)**

Item	Specifications
No-load output voltage	5 V DC
Maximum load current	10 mA (at 4.5 V DC)
OFF leakage current	10 μA max.

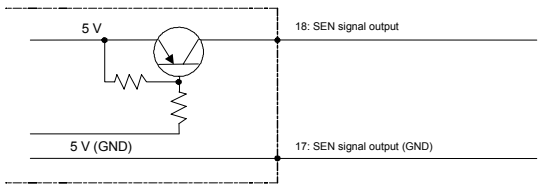

All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation

Model and Suffix Codes

Model	Suffix Code	Style Code	Option code	Description
F3NC32	-0N	–	–	2-axis control, 5 Mpps (for driving servo motor)/1 Mpps (for driving stepper motor) pulse rate, 2 counters for input from encoder (including absolute encoder), PTP and CP (linear and circular interpolation), direct and pattern operation
F3NC34	-0N	–	–	4-axis control, 5 Mpps (for driving servo motor)/1 Mpps (for driving stepper motor) pulse rate, 4 counters for input from encoder (including absolute encoder), PTP and CP (linear, circular, and helical interpolation), direct and pattern operation

Operating Environment

This module can be used with the following CPU modules:

CPU Module	ROM Revision
F3SP28-3N , F3SP38-6N F3SP53-4H , F3SP58-6H	Rev.7 or later
Other CPUs	Any

Compatible Absolute Encoders


- Absolute encoders from Yaskawa Electric or equivalent:
  - Yaskawa Electric's Σ-III and Σ-II series for AC servo motor drive
- Absolute encoders (1 Mbps, Manchester coding) from Sanyo Electric or equivalent:
  - Sanyo Electric's ABS-E and ABS-RII absolute sensors (containing RA062M) for use with the Q-series and P-series AC servo-systems

Compatible External Interface Connectors

Connection	Compatible Connector	Remarks
Soldered	FCN-361J048-AU connector, and FCN-360C048-B connector cover from Fujitsu Limited	To be purchased separately.
Crimp-on	FCN-363J048 housing, FCN-363J-AU contacts, and FCN-360C048-B connector cover from Fujitsu Limited	
Pressure-welded	FCN-367J048-AU/F from Fujitsu Limited	

External Dimensions

Unit: mm

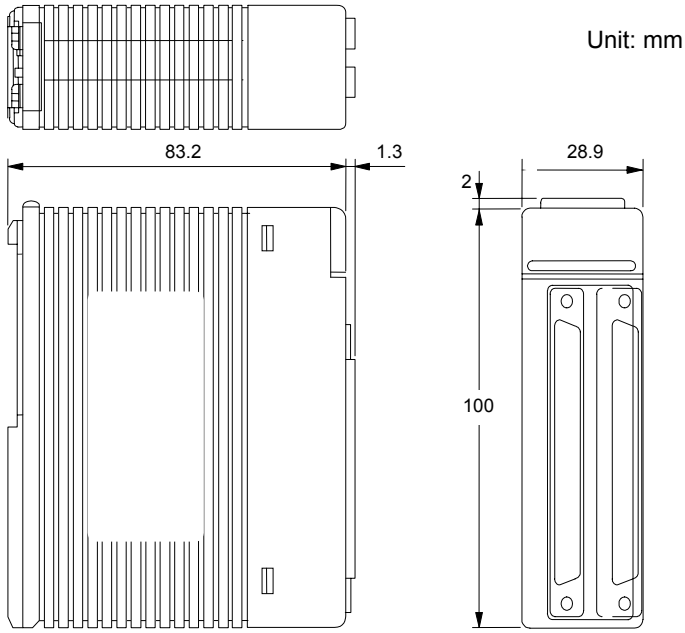

All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation

■ Function Overview


1. Concept of Position Control

This positioning module generates a position control path according to commands (for specified target position, speed, acceleration/deceleration time, etc.) from the CPU module and outputs command position values as pulse trains. The number of output pulses determines the angle through which a motor rotates and the frequency of output pulses determines the speed at which a motor rotates.

The module supplies control pulses to a servo motor/driver so that an axis is driven by a motor to a target position at a specified speed in closed-loop control using the control pulses as reference and the encoder pulses as feedback.

In closed-loop control, the difference in pulse count between reference pulses and feedback pulses controls the behavior of a motor, that is, when the difference falls within a certain range, the motor slows down, and when the difference becomes zero, the motor stops.

Position control concept of the positioning module:

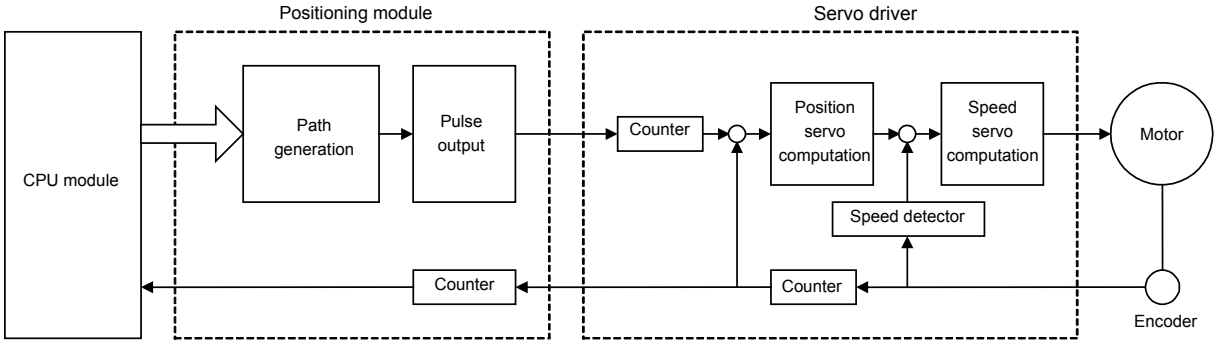

2. Operation Modes

Two operation modes are available: pattern operation and direct operation.

2.1 Direct Operation


In direct operation, the module dynamically controls the position, speed and acceleration/deceleration of axes according to real-time commands from the CPU module. Direct operation is suitable for dynamic control applications where target position and speed are specified just in time based on external information (correction data from an image processing device, etc.), or target position and speed differ for each positioning action.


In this type of operation mode, positioning actions can be coded using a program, thus enabling sophisticated operations such as change in target position or speed during positioning.

2.2 Pattern Operation

In pattern operation, the module performs positioning according to pre-stored action patterns and position data. You can use a setup tool, ToolBox for Positioning Modules (SF662-ECW), to store the action patterns and position data in the module. In this type of operation mode, positioning can be initiated simply by specifying an action pattern number from the CPU module. Up to four action patterns can be executed concurrently.

Example screens of ToolBox for Positioning Modules (SF662-ECW):

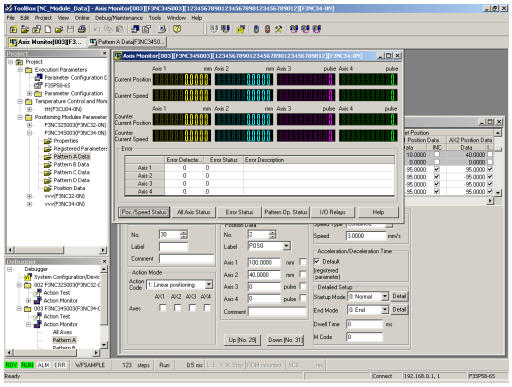

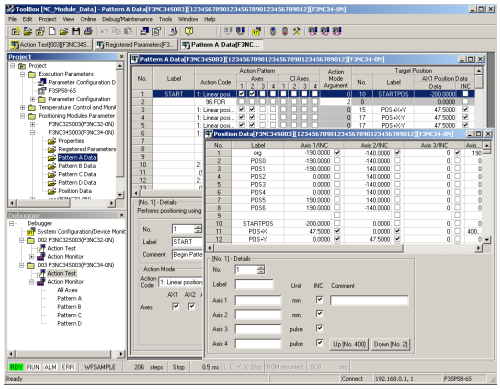


All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation

3. Position Control


3.1 Single-axis Positioning

Single-axis positioning moves an axis to a specified target position according to a specified speed, acceleration time and deceleration time. A target position may be specified as an absolute value or an incremental value. The acceleration/deceleration curve for an axis may be specified as trapezoidal or S-shape. Acceleration time and deceleration time may be set independently. With trapezoidal acceleration and deceleration, you can also specify a startup speed. Axis movement may be configured to start immediately after command execution or wait to be triggered by an external event.


Positioning Movement Using Automatic Trapezoidal Acceleration and Deceleration:

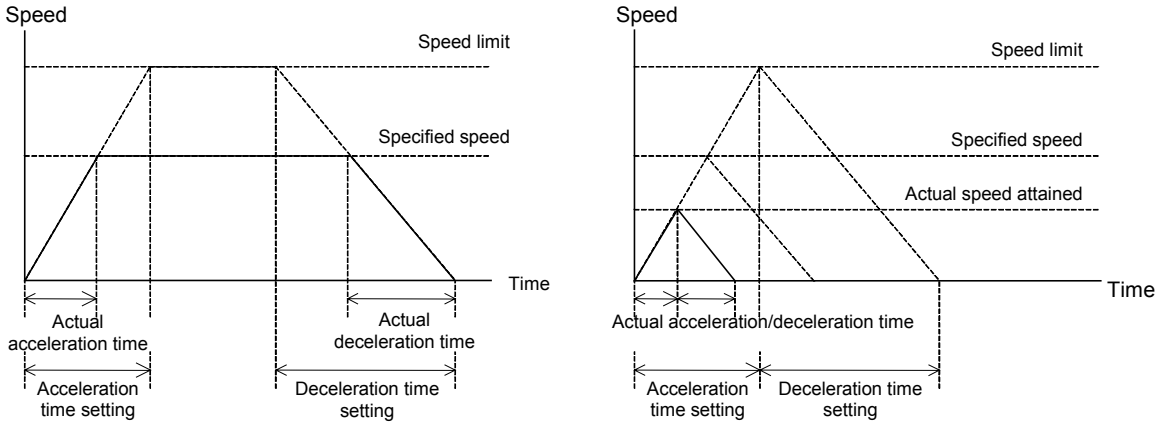

Positioning Movement Using S-shaped Acceleration and Deceleration:

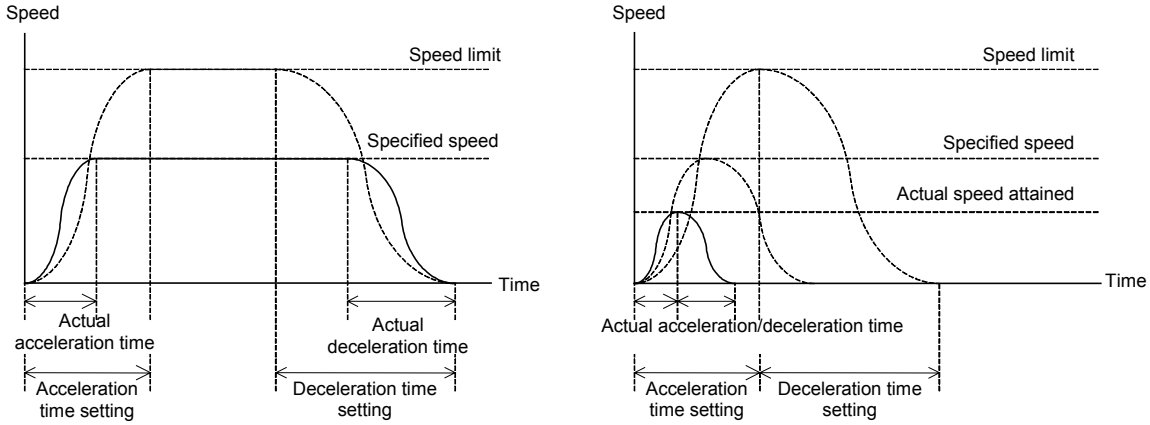

Positioning Movement When a Startup Speed is Specified:

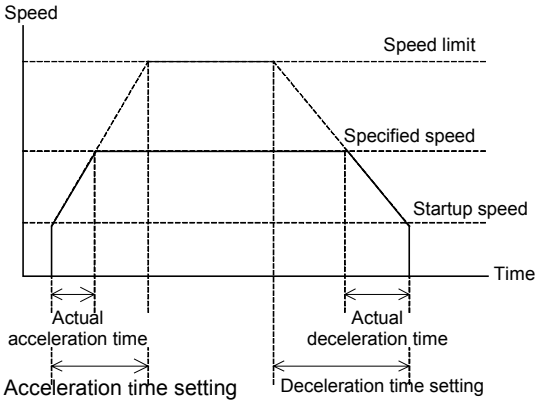


All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation


3.2 Interpolated Positioning

Interpolated positioning moves multiple axes in tandem to reach a target position by following a path obtained using interpolation. The module supports 2-, 3-, and 4-axis linear interpolation, 2-axis circular interpolation, as well as 3- and 4-axis helical interpolation. A target position may be specified as an absolute value or an incremental value. Specified speed may be a combined speed or axis speed. Combined speed in 2-axis circular or helical interpolation is measured along the tangential line of the circular or helical path. The acceleration/deceleration curve for an axis may be specified as trapezoidal or S-shaped. Acceleration time and deceleration time may be set independently. Axis movement may be configured to start immediately after command execution or wait to be triggered by an external event.


2-axis linear interpolation:

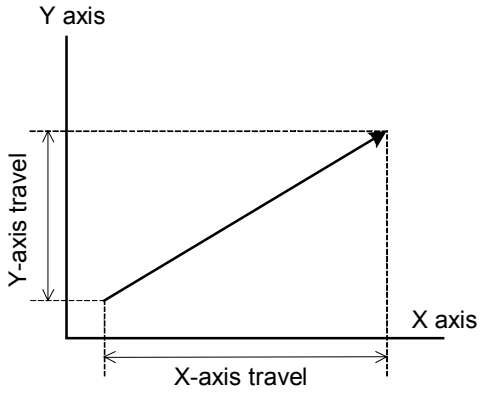


3-axis linear interpolation:

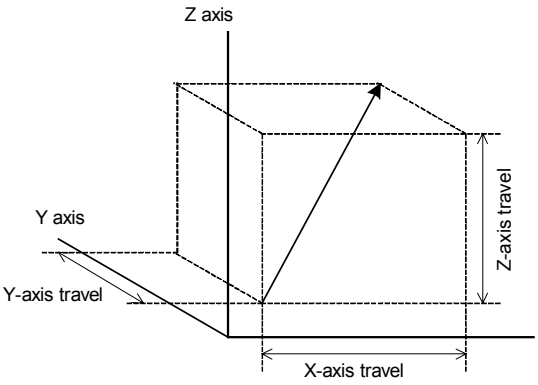


Circular interpolation (using sub point):

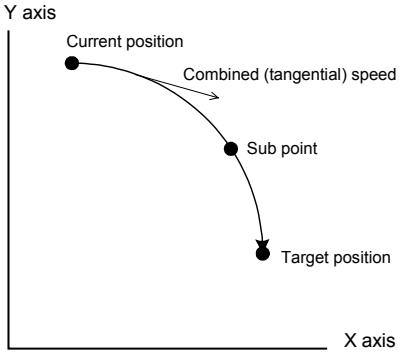


Circular interpolation (CW using center):

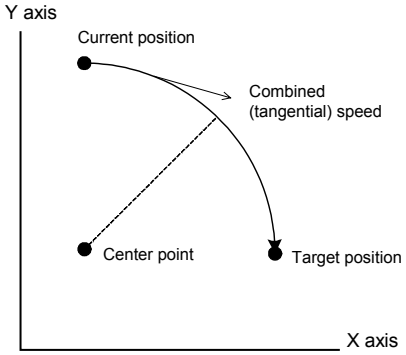


Circular interpolation (CCW using center):

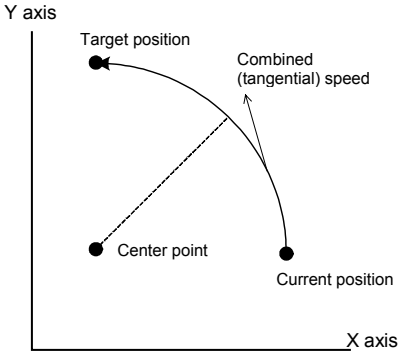

Helical interpolation (CW using center):

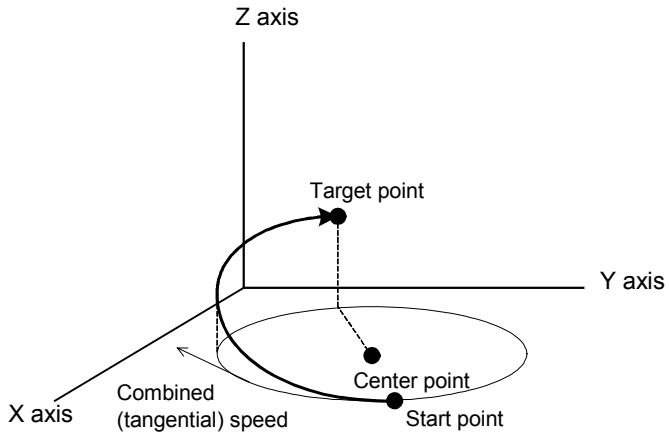

Helical interpolation (CCW using center):

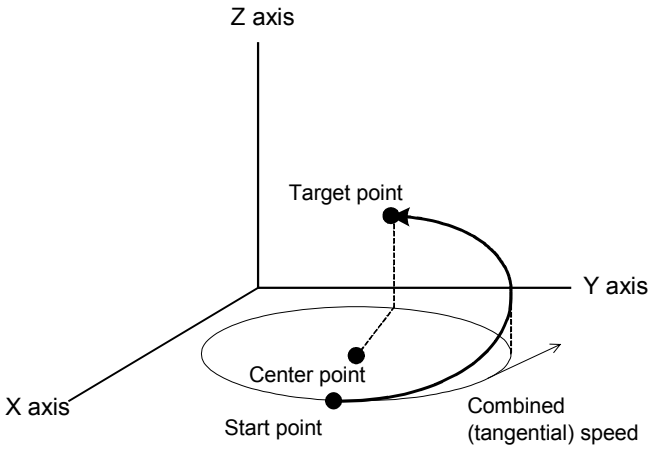


All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation


3.3 Pass-by and Pass-through Movement

In pattern operation, two successive positioning actions may be combined so that axes do not stop between actions but moves continuously, passing by or passing through the first target position. Compared to ordinary CP movement, pass-by and pass-through CP movements take shorter time, and are thus effective for collision prevention or tack time reduction. The actions to be combined may be in different directions. In direct operation, pass-by movement can be implemented by changing the specified speed during movement.


Path and Speed for Ordinary CP Movement:

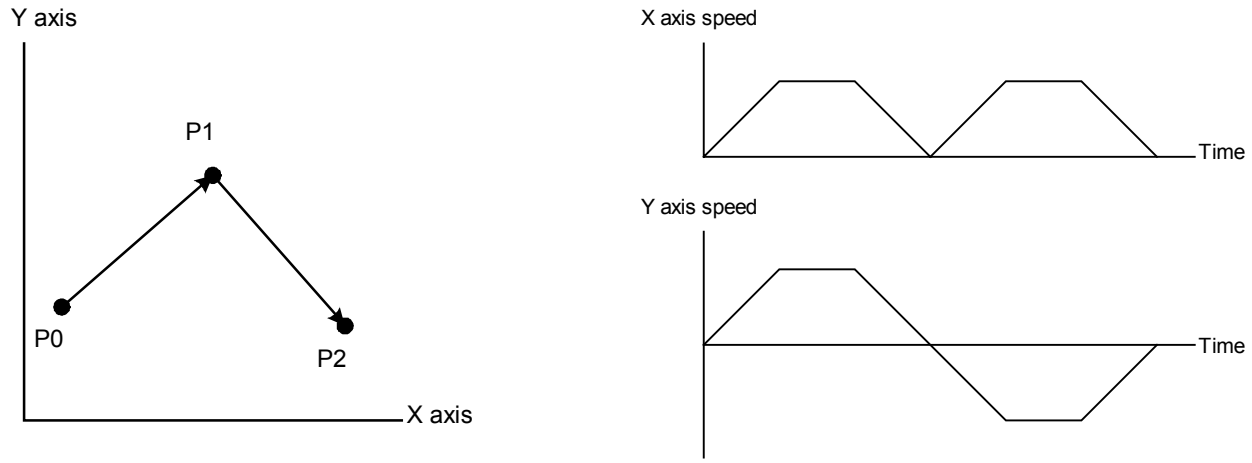

Path and Speed for Pass-by CP Movement:

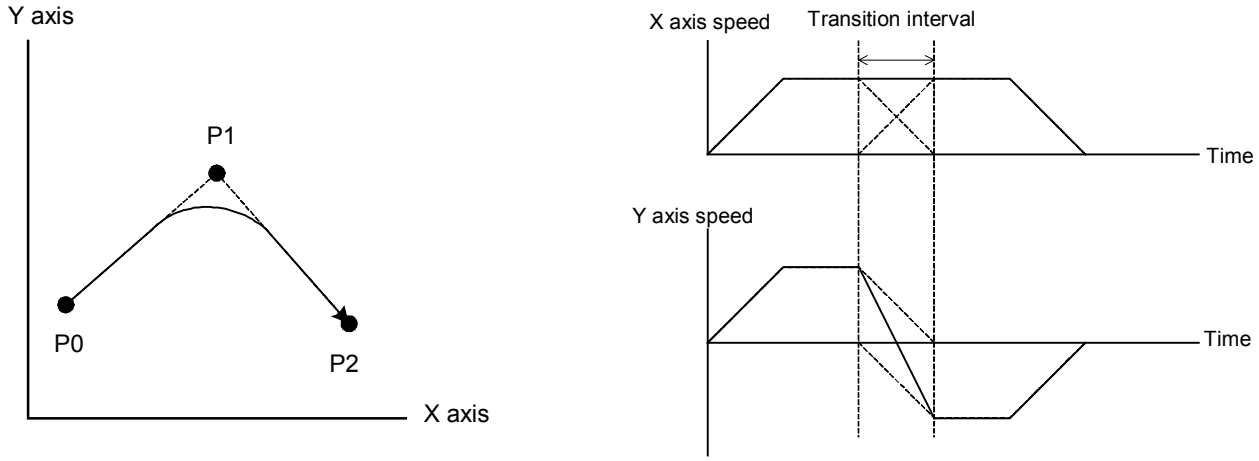

Path and Speed for Pass-through CP Movement:

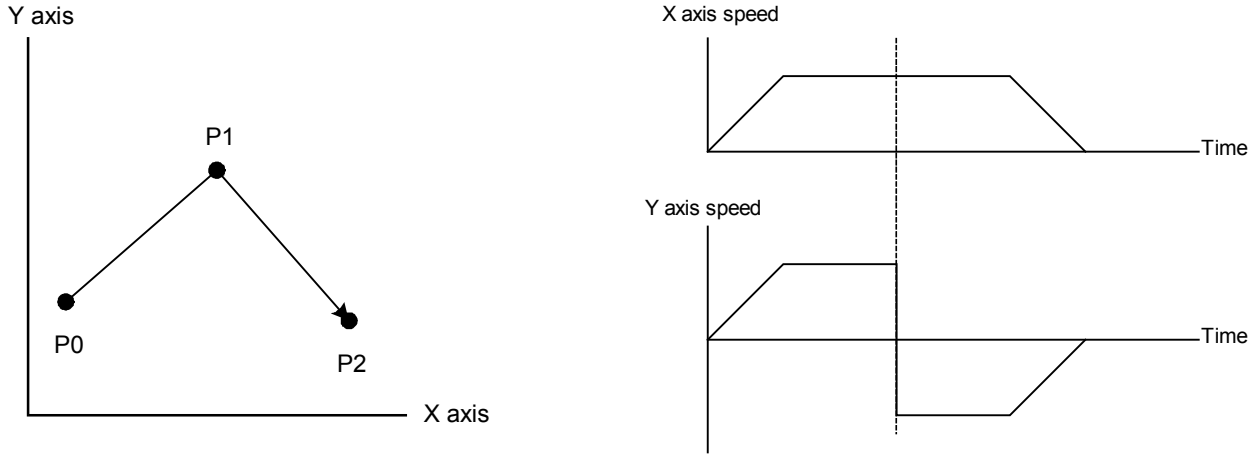


All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation

3.4 Changing Target Position during Positioning

In direct operation, the target position, as well as the specified speed, may be changed during positioning. The change in target position can be in a different direction.


Path and Speed when Target Position is Changed during Positioning:

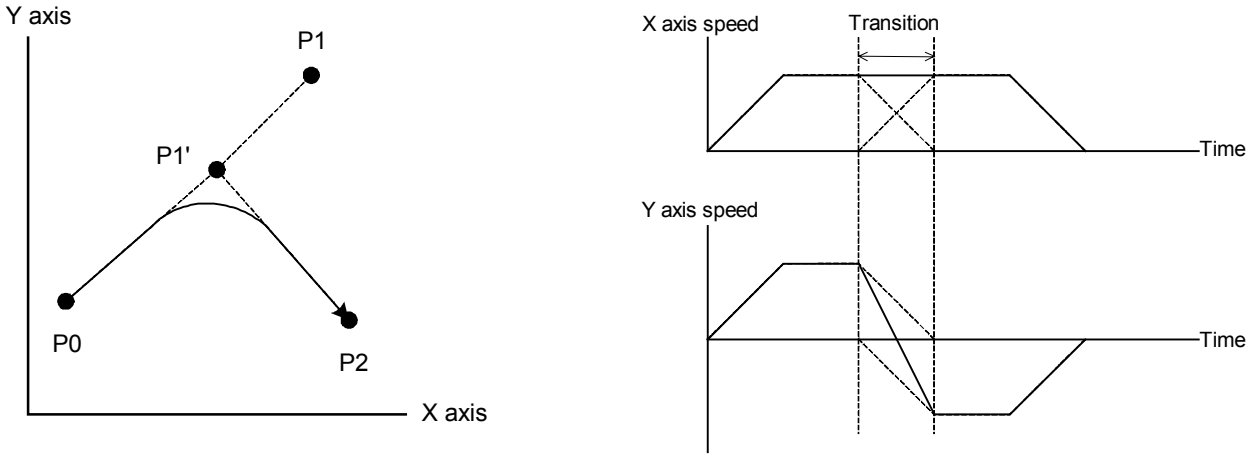

3.5 Changing Specified Speed during Positioning

In direct operation, the movement speed may be changed during positioning.


Changing speed during positioning:

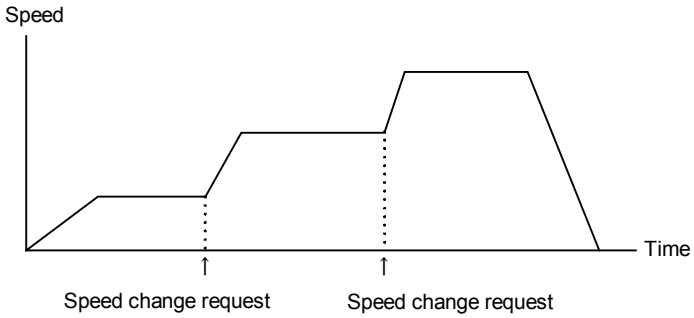

3.6 Index Control

In index control, current and target positions are handled as ring data that assumes values from zero to a specified index range (0-360ºin the example shown below). A target position may be specified as an absolute value or an incremental value. If an absolute target position is specified, an axis rotates in either CW or CCW direction to reach the target position taking the shorter path (shortest path control). When specifying an increment target position, an axis can be made to rotate beyond one revolution. Index positioning can also be initiated during index speed control movement of an axis started with only a specified speed to move the axis to a specified target position.

Index Control (Shortest Path Control):

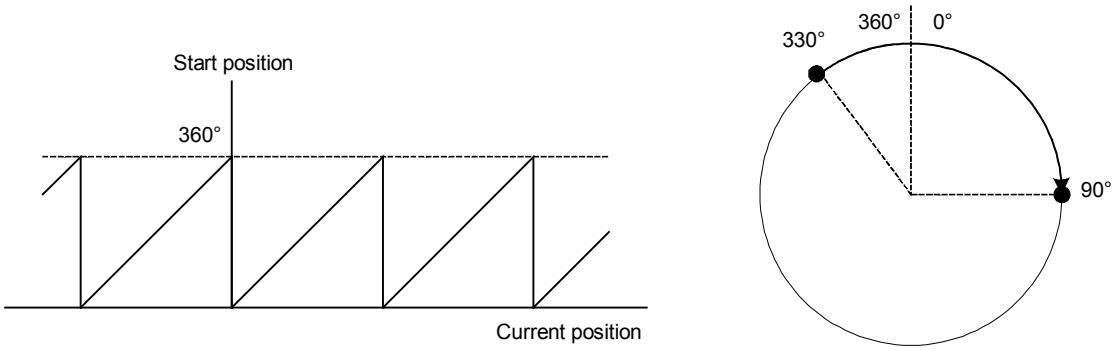


All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation

4. Speed Control

4.1 Speed Control Movement

Speed control moves an axis in the same direction according to a specified speed, acceleration time or deceleration time. The acceleration/deceleration curve for an axis may be specified as trapezoidal or S-shape. Acceleration time and deceleration time may be set independently. Axis movement may be configured to start immediately after command execution or be triggered by an external event.

Speed Change in Speed Control:

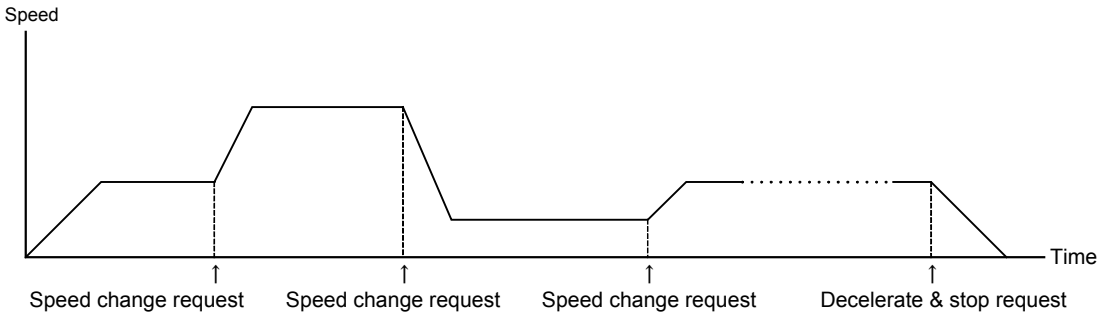


4.2 Speed Control to Position Control Switchover


During speed control movement, axes can be switched from speed control mode to position control mode to be moved to a new target position, which may be specified as an absolute value or an incremental value. You can choose to reset the current position to zero at the time of control switchover or continue with the current position values. The acceleration/deceleration curve of an axis may be specified as trapezoidal or S-shape. Acceleration time and deceleration time may be set independently. Control switchover may be configured to take place immediately after command execution, or be triggered by an external event, such as external trigger input, external trigger input and Z-phase input, counter coincidence detection, or zone coincidence detection. When the Encoder Z-phase input is used as a trigger, you can specify the Z-phase edge and the number of Z-phase detections.

Speed Control to Position Control Switchover:

- When Z-phase Input is Not Used

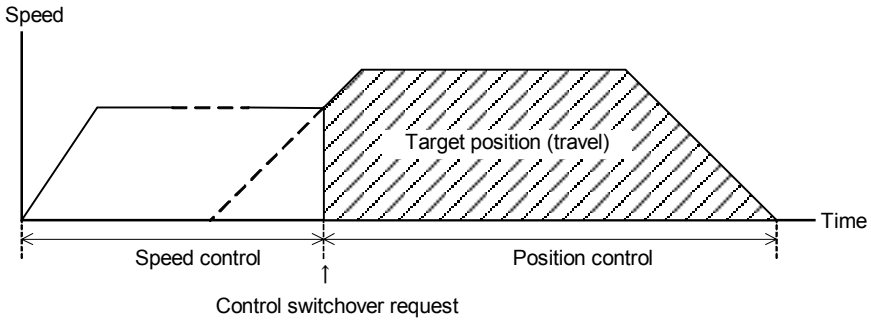

- When Z-phase Input is Used (Z-phase rising edge is to be detected twice)

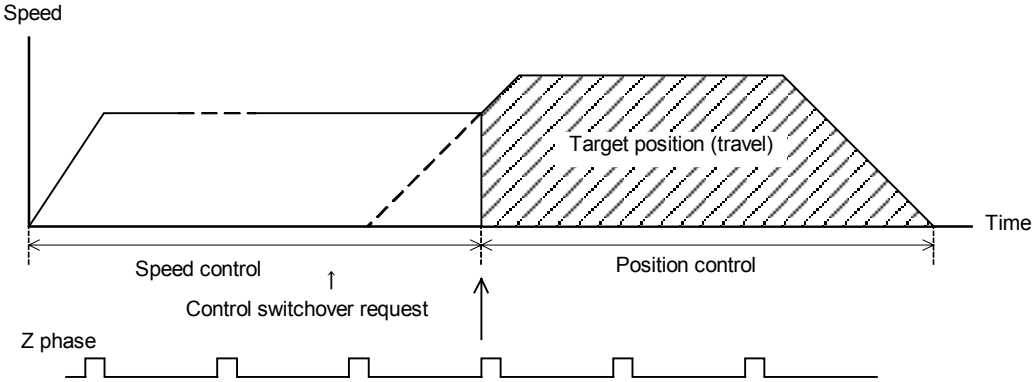

All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation


5. Origin Search

There are two ways to perform origin search: automatic and manual. In automatic origin search, the origin search behavior is defined by the module's registered parameters. In manual origin search, the origin search behavior is arbitrarily defined by an application program.


5.1 Automatic Origin Search

In automatic origin search, the module searches for the origin automatically using the external switches according to the registered parameters values, and then enters Z-phase search. The search may be configured to use or to not use the origin switch, in addition to using the forward and reverse limit switches. In Z-phase search, the module counts a specified number of Z-phase pulses, and then stops the axis immediately. The stop position is taken as the origin. An origin offset may be specified if required. The module then outputs a deviation pulse clear signal for a specified duration.

Automatic origin search (mode 0: using origin switch):

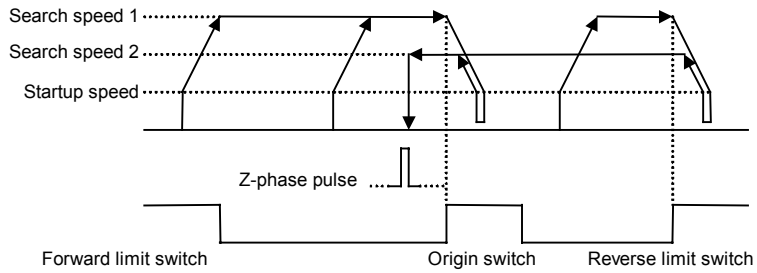


Automatic origin search (mode 1: not using origin switch):

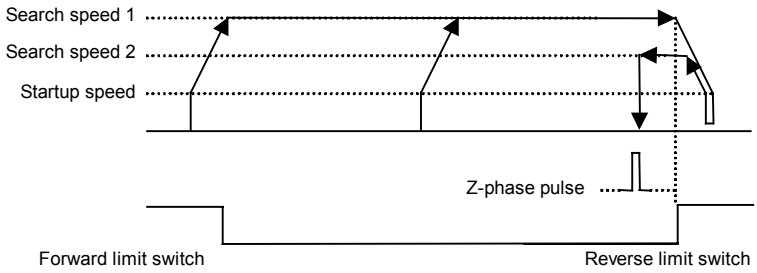

5.2 Manual Origin Search

In manual origin search, the origin search behavior is arbitrarily defined by an application program which writes the origin search specified speed, origin search direction, origin search mode (defines the desired action when an external contact input is detected), Z-phase edge selection, and other origin search related parameters before initiating origin search. The module searches for the origin according to the parameter values as it detects changes in external contact inputs. When the required change is detected, it either stops or shifts to Z-phase search. If origin search must be done at different speeds or in different directions depending on the states of the external contact inputs, it may be divided into two or more origin search operations using different sets of parameters.

Manual origin search:

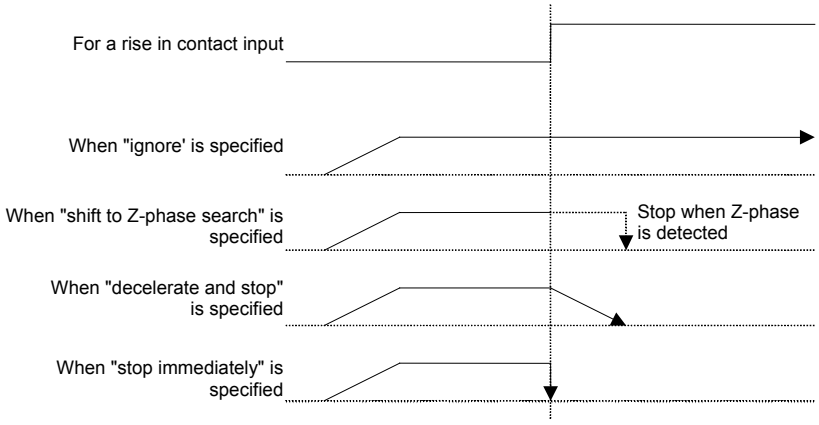

All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation

6. Counter Function


6.1 Manual Pulse Generator (MPG) Mode

You can manually operate a motor for testing or other purposes by connecting a manual pulse generator to any of the counter inputs (2 channels for F3NC32-0N and 4 channels for F3NC34-0N). The relationship between the pulse count from a manual pulse generator and the travel of an axis depends on the multiplication and decimal point position specified for manual pulse generator mode. As the manual pulse generator mode is configured independently for each axis, you can manually control two axes at the same time using two manual pulse generators, or multiple axes using a single manual pulse generator.

6.2 Reading Encoder Feedback

The module contains two (for F3NC32-0N) or four (for F3NC34-0N) counter inputs for absolute encoders, which are capable of counting pulses at 5 Mpps max. By connecting a servo motor encoder to a counter input, you can read feedback pulses from the encoder.

The following encoders may be connected to these counters:
- General-purpose incremental encoder (A/B phase output)
- Absolute encoder from Yaskawa Electric, or equivalent
- Absolute encoder with 1-Mpps Manchester encoding from Sanyo Electric, or equivalent.

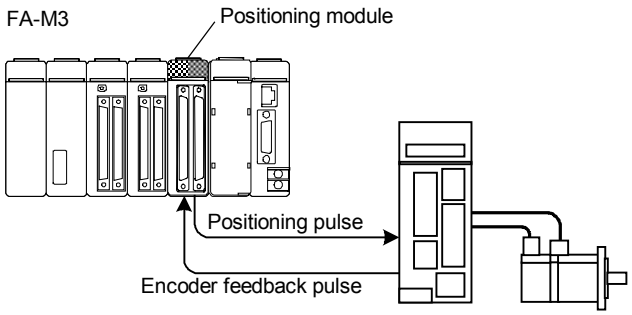


By reading encoder feedback pulses through the counters, the module can be used to perform semi-closed-loop position control with added capabilities such as current position checking, positioning detection, absolute position correction and offline teaching. If you use an absolute encoder to provide feedback pulses, you can implement a positioning system requiring no origin search.


6.3 Counter/Zone Coincidence Detection

A counter can be configured to generate an event when the counter current position coincides with a preset value or falls within a preset range. The event can be used to trigger a positioning action waiting to start or raise an interrupt signal to the CPU module.

Counter coincidence detection:

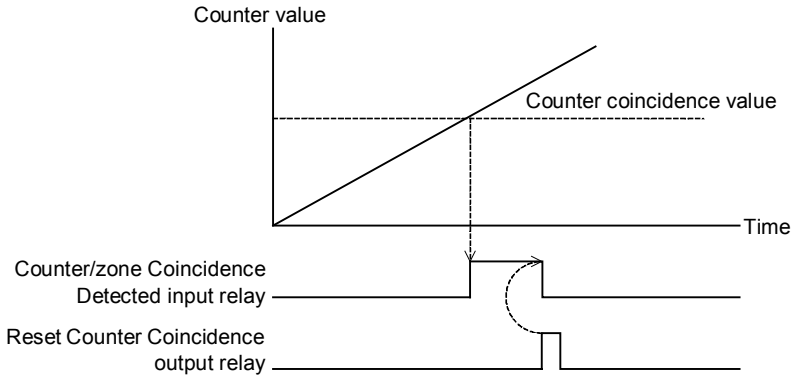

Zone coincidence detection:

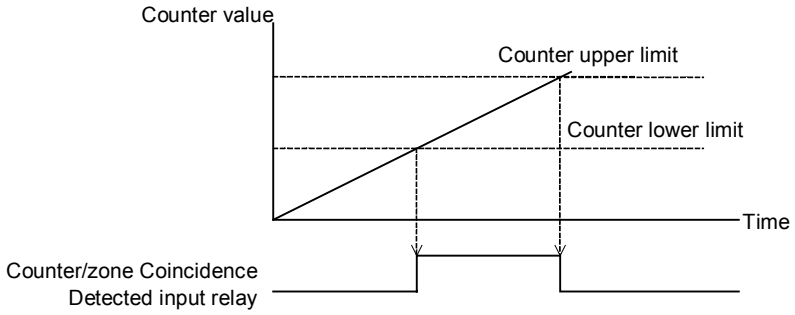

All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation

7. Other functions


7.1 External I/O Contacts

The module has one emergency stop input contact as well as six input contacts, three output contacts, and one SEN signal output contact for each axis. All I/O contacts can be individually configured as normally-open (NO) or normally-closed (NC) contact using axis registered parameters. I/O contacts that are allocated for specific functions by default can be reconfigured as general I/O contacts. By connecting external equipment to the general I/O contacts, the CPU module can monitor the equipment by reading the input contacts, as well as control the equipment by turning on or turning off the output contacts.


7.2 Electronic Gear Function

The electronic gear function can be used to convert current position, target position and specified speed data into actual travel and speed values. The unit of measurements can be selected from pulses, mm, and degrees.

Example: controlling a ball screw

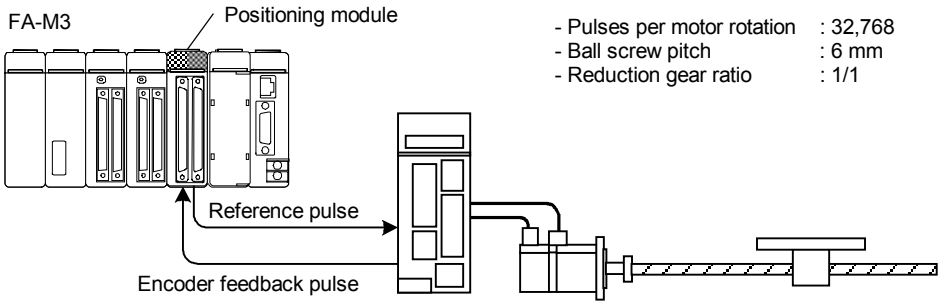


Example: controlling a rotating table

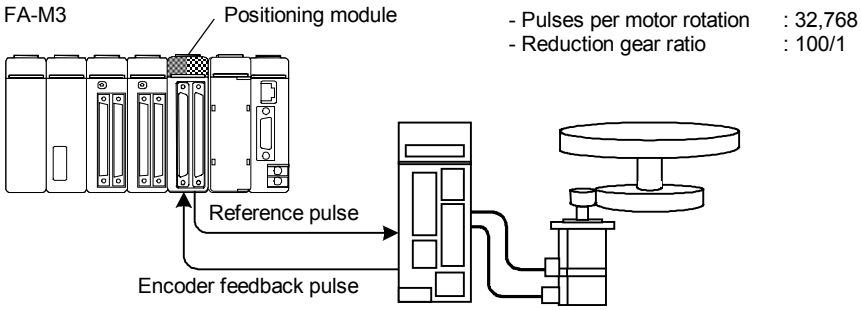

7.3 M-code Function

The M code function can be used to suspend a pattern execution, which can then be resumed by an instruction from the CPU module after an external equipment has completed its processing, thus synchronizing operations of the positioning module and related external equipment.

M-code function:

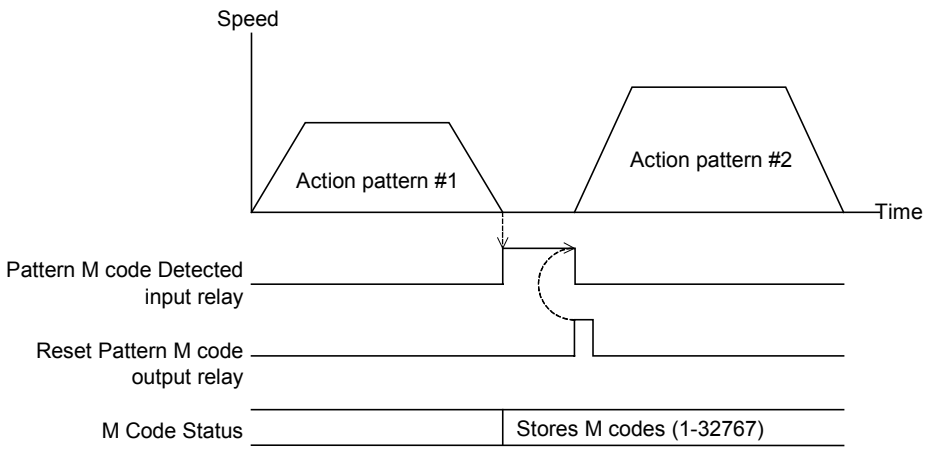

All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation

7.4 Teach Function

The Teach function provides a convenient way to store current position data, counter current position data and entered numerical data into the position data table as you manually move an axis using the jog function or manual pulse generator mode.
The teach function allows storing of absolute or incremental position data, as well as concurrent saving of data for two or more axes.

7.5 Override Function

You can override the specified speed during positioning by scaling it to 1 and 500% of its original speed. In direct operation, the module executes a speed change immediately after the override value is changed. In pattern operation, the new override value is not applied to the current action of an executing pattern but to subsequent pattern actions.


7.6 Set Current Position

You can change the current position value and/or the counter current position of an axis in Positioning Completed state. You can also set the current position and the counter current position to the same value.

7.7 Saving Parameters to the Module

You can save parameters including axis registered parameters, pattern registered parameters, action pattern table, and position data table in the flash memory of the module. At power up or system reset, the contents of the flash memory are automatically restored to these parameters.

Setting and saving parameters:

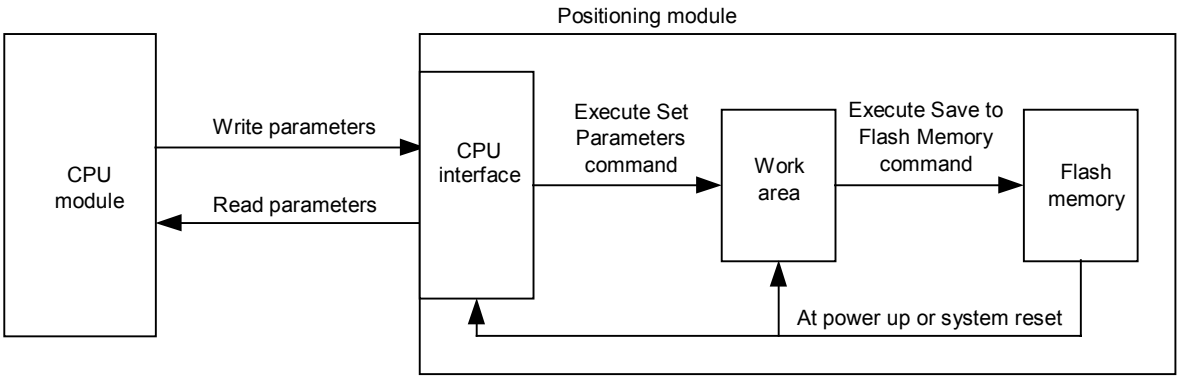

All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation

General Specifications

F3NC51-0N and F3NC52-0N
Positioning Modules
(with Analog Voltage Output)

FA-M3

■ General

The F3NC51-0N and F3NC52-0N are positioning modules with voltage output for velocity control for the FA-M3 series.


- One module can control both 1- and 2-axis motors. The modules support incremental and absolute encoder inputs.
- The modules are provided with simultaneous multi-axis control functions. When activated by a CPU module, these modules can perform a variety of smooth position control functions including multi-axis linear interpolation, velocity control functions and velocity/position control mode switching.
- The modules feature a short startup time of 6 ms maximum, on-route mode operation, internal-/external-trigger-driven wait operation and position detection/positioning completion interrupt. These functions allow the modules to start at high speed and synchronize their operation with that of peripheral devices.

■ Specifications

■ Standard Specifications


Item		Specification	
		F3NC51-0N	F3NC52-0N
Number of axes		1	2
Control	Control system	Semi-closed loop control (with voltage output for velocity control) based on encoder feedback	
	Velocity control output	-10 to 10 V	
	Encoder	Incremental encoder (phaseA/B): Line driver in 2M pps max. /4-time multiplication mode Absolute encoder: See the section on the next page for applicable encoding systems.	
Control mode		Position control, velocity control and velocity/position control switching	
Position control	Interpolation system	Independent axis operation, multi-axis linear interpolation operation (set up by the CPU) and 2-axis arc interpolation (set up by the CPU)	
	Command position	-134,217,728 to 134,217,727 pulses	
	Command speed	0.1 to 2 M pulses/s	
	Function	Absolute and relative positioning, on-route operation, change in target position or velocity during operation, axis stepping using a manual pulser	
Velocity control	Command speed	-2 M to 2 M pulses/s	
	Function	Change in velocity during operation	
Acceleration/deceleration	Acceleration/deceleration system	Trapezoidal, 2-line segment or S-shape (3-line segment)	
	Acceleration/deceleration time	0 to 32,767 ms acceleration/deceleration independently programmable	
Home position search	Search mode	Selectable from home position input, external trigger input and limit input	
	Search speed	Arbitrarily programmable	
External contact output		Servo on, driver reset and brake off	
External contact input		Limit switch, driver alarm, home position, external trigger, general-purpose input and emergency stop	
Data backup		Backup using the CPU module	
Startup time		6 ms max.	
Current consumption		390 mA (5 V DC)	400 mA (5 V DC)
External power supply		24 V DC, 10 mA	24 V DC, 10 mA
External connection		One 40-pin connector	Two 40-pin connectors
External dimensions		28.9 (W) × 100 (H) × 83.2 (D) mm*	
Weight		130 g	140 g

*: Excluding any protrusions (see External Dimensions for details.)

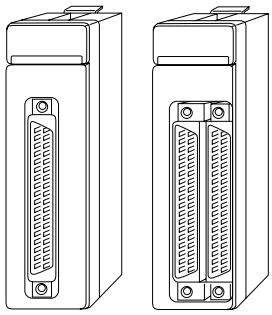

■ Components and Functions

● **F3NC51-0N (1-axis model)**

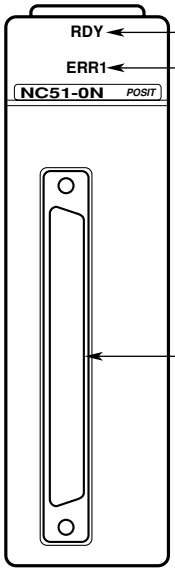


RDY indicator
Lit when the internal circuit is functioning normally.

ERR1 indicator
Lit when an error occurs.

External I/O connector (40-pin)
Connect to exteranl inputs/outputs such as servomotors and limit switches.

● **F3NC52-0N (2-axis model)**

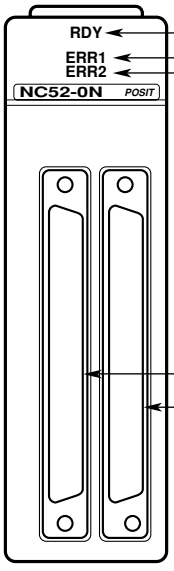

RDY indicator
Lit when the internal circuit is functioning normally.

ERR1 indicator
Lit when an error occurs in axis 1.


ERR2 indicator
Lit when an error occurs in axis 2.

Axes 1 and 2 external I/O connectors
Connects to external inputs/outputs such as servomotors and limit switches.

All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation

External Connection Diagram

Pin No.		Signal Name	Electrical Specification
20b		Emergency stop input*1	24 V DC, 4.1 mA
	20a	Emergency stop input*1	
19b		External contact input 6*2	24 V DC, 4.1 mA
	19a	External contact input 5 (external trigger)*2	24 V DC, 4.1 mA
18b		External contact input 4 (home position)*2	24 V DC, 4.1 mA
	18a	External contact input 3 (driver alarm)*2	24 V DC, 4.1 mA
17b		External contact input 2 (negative direction limit)*2	24 V DC, 4.1 mA
	17a	External contact input 1 (positive direction limit)*2	24 V DC, 4.1 mA
16b		External contact input (COM)	
	16a		
15b		Voltage output for velocity control	-10 to 10 V DC, 5 mA
	15a	Voltage output for velocity control (GND)	
14b		Shield (FG)	
	14a	Shield (FG)	
13b		Encoder Z-phse input Z	RS-422A compliant differential signal, terminated by 220 Ω
	13a	Encoder Z-phse input *Z	
12b		Encoder B-phse input B	RS-422A compliant differential signal, terminated by 220 Ω
	12a	Encoder B-phse input *B	
11b		Encoder A-phse input A	RS-422A compliant differential signal, terminated by 220 Ω
	11a	Encoder A-phse input *A	
10b		Encoder/manual pulser signal ground	
	10a	Encoder/manual pulser signal ground	
9b		SEN (For Yaskawa Electric absolute encoder)	5 V DC, 10 mA
	9a	SEN_0V(GND)	
8b		Reserved	
	8a	Reserved	
7b		Manual pulser input B-phase B*3	RS-422A compliant differential signal, terminated by 220 Ω
	7a	Manual pulser input B-phase *B*3	
6b		Manual pulser input A-phase A*3	RS-422A compliant differential signal, terminated by 220 Ω
	6a	Manual pulser input A-phase *A*3	
5b			
	5a		
4b			
	4a	External contact output (closed OFF)	24 V DC, 0.1 A
3b		External contact output (driver reset)	24 V DC, 0.1 A
	3a	External contact output (servo ON)	24 V DC, 0.1 A
2b		External contact output (COM)	
	2a	External contact output (24 V)	
1b		External contact output (0 V-in)	
	1a	External contact output (24 V-in)	

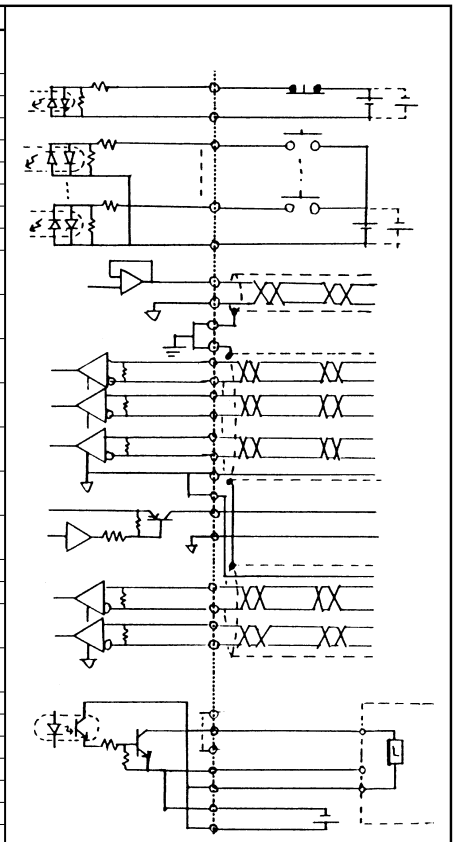

*1: The emergency stop input is only for axis-1 connector. This pin in axis-2 connector is not connected internally. The signal from axis-1 connector is shared by two connectors.

*2: External contact inputs (1-6) can be programmed for general-purpose inputs.

*3: The manual pulser input is only for axis-1 connector. This pin in axis-2 connector is not connected internally. The signal from axis-1 connector is shared by two connectors.

Applicable External Connectors

Connection Method	Applicable Connector	Remarks
Soldered type	Fujitsu:FCN-361J040-AU connector FCN-360C040-B connector cover	Supplied by the user.
Solderless type	Fujitsu:FCN-363J040 housing FCN-363J-AU contact FCN-360C040-B connector cover	
Pressure-welded type	Fujitsu:FCN-367J040-AU/F	

Operating Environment

There is no restriction on the type of CPU modules that can be used with these modules.

Applicable Absolute Encoders

- Yaskawa Electric serial absolute encoder (Yaskawa S series)
- Sanyo Electric serial absolute encoders and compatibles (Manchester coded serial transmission system, Sanyo Electric P series, and Matsushita Electric MINAS series)


Model and Suffix Codes

Model	Suffix Code	Style Code	Option Code	Description
F3NC51	- 0N	.....	.....	1-axis, position loop control, -10 V to 10 V output for velocity control, 2 Mpps maximum velocity
F3NC52	- 0N	.....	.....	2-axis, position loop control, -10 V to 10 V output for velocity control, 2 Mpps maximum velocity

Note: See the section on spare parts in the FA-M3 Range-free Multi-controller (GS 34M6A01-01E) for information on connectors.

External Dimensions

Unit: mm

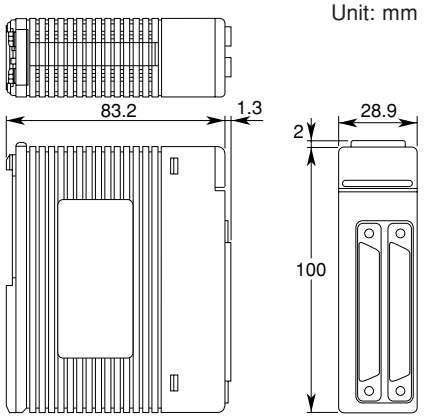


Note: This figure is for the F3NC52-0N.

All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation

■ Function Overview

1. Positioning System

This is a positioning module with voltage output for velocity control for the FA-M3 series. It generates positioning trajectory data, performs position-loop computations based on the feedback signal from an external position detector (incremental encoder or absolute encoder), and generates velocity command values in the form of an analog voltage, according to commands from a CPU module.

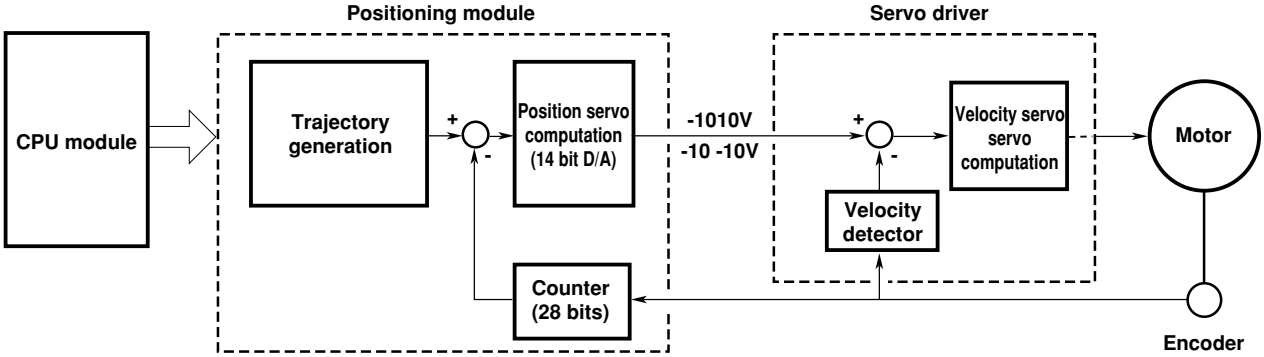


2. Position Control


2.1 Positioning Operation

A positioning operation is started by writing the velocity setpoint (pulses/ms), target position (pulses), acceleration time (ms), and deceleration time (ms) from the CPU module and turning on the operation start relay. The positioning completion relay turns on when the output of position command pulses ends.


- The user can specify, as the target position, an absolute, relative position (with reference to the encoder position) or a relative position (with reference to the preceding target position).
- The acceleration/deceleration curve forms a trapezoid, 2-line segment, or S-shape (3-line segment). The acceleration and deceleration time must be set separately.
- A positioning range (pulses) and positioning timeout value (ms) must be specified to identify the end of positioning.
- The user can set up the positioning module so that positioning can be started up in normal operation as well as with remote/local triggering features.

Velocity and Acceleration/Deceleration Times in the Trapezoidal Drive/Triangular Drive Mode

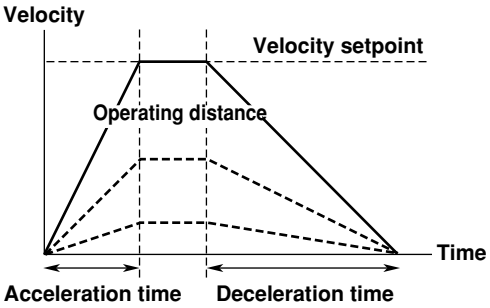

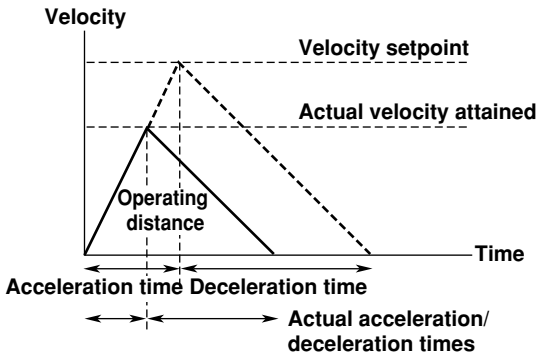

End-of-positioning timing

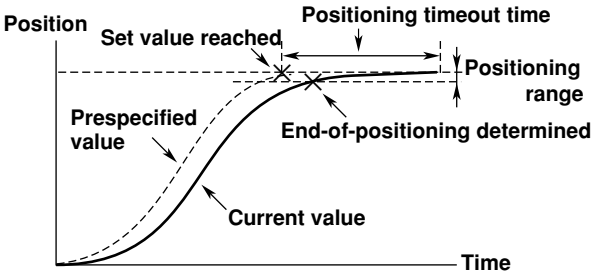



All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation

2.2 Multi-axis Linear Interpolation Operation

A linear interpolation operation is started by writing the velocity setpoint (pulses/ms), target position (pulses), acceleration time (ms) and deceleration time (ms) from the CPU module and turning on the operation start relays for all axes at the same time. When the output of position command pulses for an axis ends, the positioning completion relay associated with that axis turns on. The acceleration time (ms), deceleration time (ms) and acceleration/deceleration pattern must be set to the same values for all axes that are subject to linear interpolation processing. The velocity setpoint (pulses/ms) for the axes must be calculated and preset so that it is equal to the ratio of the distances traveled along the axes.

Multi-axis Linear Interpolation Operation (2-axis)

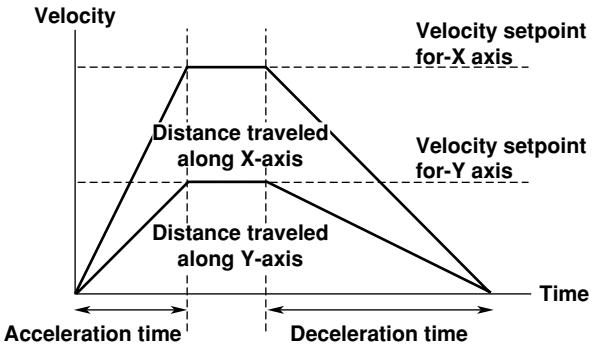

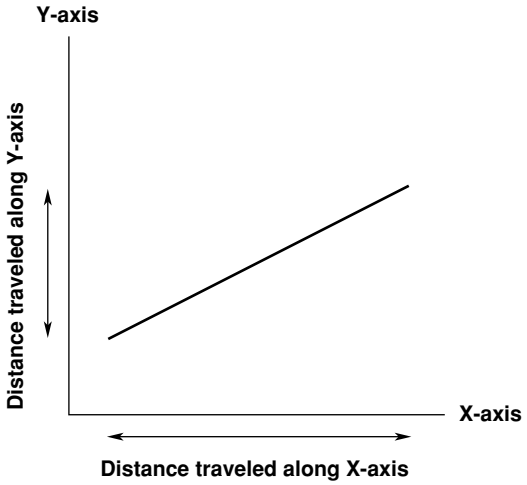


2.3 On-route Operation

When the next positioning operation is started while the execution of the current positioning operation is in progress, the positioning module keeps on combining the two positioning operations until the preceding positioning operation ends. This mode of operation is called an on-route operation and the interval during which the two positioning operations overlap is called an on-route interval. The on-route operation allows the positioning module to continue its operation toward the next target position without stopping at the preceding target position.


• The direction of movement may be changed during an on-route operation.

Normal Positioning Operation and On-route Operation


● **Normal Positioning Operation**

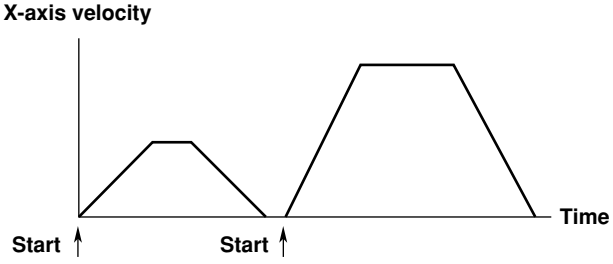

● **On-route Operation**

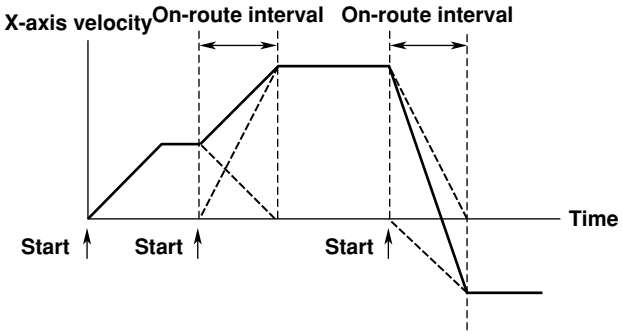

● **Example of an On-route Operation Using 2-axis Linear Interpolation**

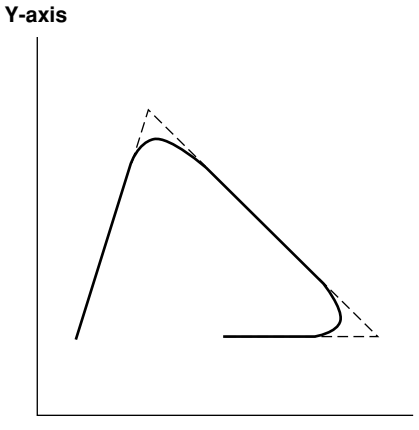


All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation

2.4 Changing the Target Position during Positioning


The positioning module changes the target position when the user turns on a relay to change the target position by writing new positioning parameters during positioning operation. The user can also change the target position in such a way that the direction of movement is also changed (in this case, the positioning module decelerates and stops promptly and starts positioning to the new target position.)

Target Position Change Operation

● **When Direction Change Is Not Involved**

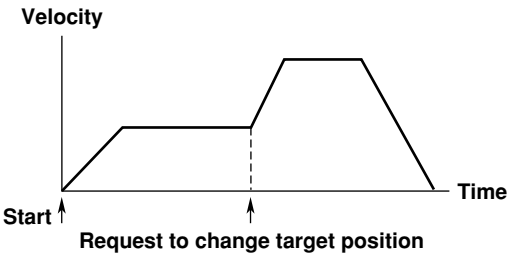


● **When a Direction Change Is Involved**

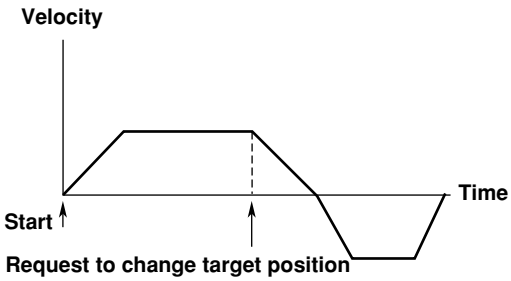

2.5 Changing the Velocity during Positioning

The positioning module changes the traveling velocity when the user turns on a relay to change the velocity by writing a new velocity (pulses/ms) during the positioning operation.

Change Velocity Operation

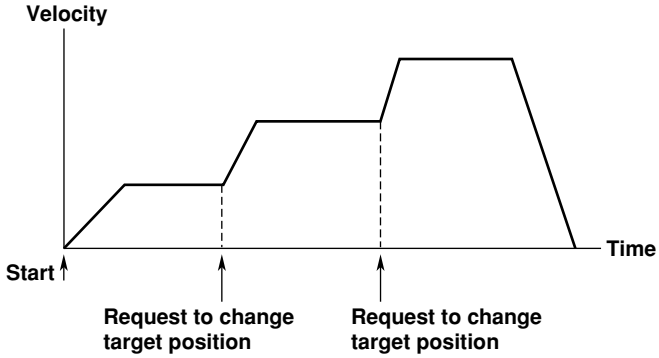


3. Velocity Control

A velocity control operation is executed by writing the velocity setpoint (pulses/ms, specify a negative value to drive the target in a negative direction), acceleration time (ms) and deceleration time (ms) from the CPU module and turning on the operation startup relay.

- The velocity can be changed while the positioning module is running.
- The acceleration/deceleration curve forms a trapezoid, 2-line segment or S-shape (3-line segment). The acceleration and deceleration times must be set separately.
- A positioning range (pulses) and positioning timeout value (ms) must be specified to identify the end of positioning.
- The user can set up the positioning module so that positioning can be started up in normal operaion as well as with remote /local triggering features.

Velocity Control and Change Operations

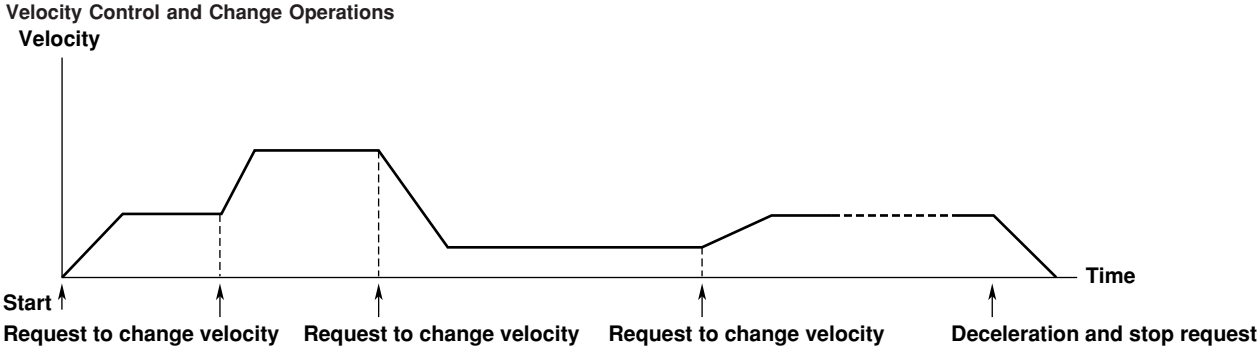

All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation

4. Velocity/Position Control Switching Control


4.1 Velocity/Position Control Switching

The module starts positioning operation from scratch if the velocity setpoint (pulses/ms), target position (pulses), acceleration time (ms) and deceleration time (ms) are written from the CPU module, and then the control mode is changed to position control.


- The acceleration/deceleration curve forms a trapezoid, 2-line segment or S-shape (3-line segment). The acceleration and deceleration times must be set separately.
- A positioning range (pulses) and positioning timeout value (ms) must be specified to identify the end of positioning.
- The user can switch from velocity to position control mode in normal transfer operation as well as with remote triggering features.
- The user can set edges and counts when the Z-phase count is selected.

Velocity to Position Control Switching Operation

● **No Z-phase Count is Specified**

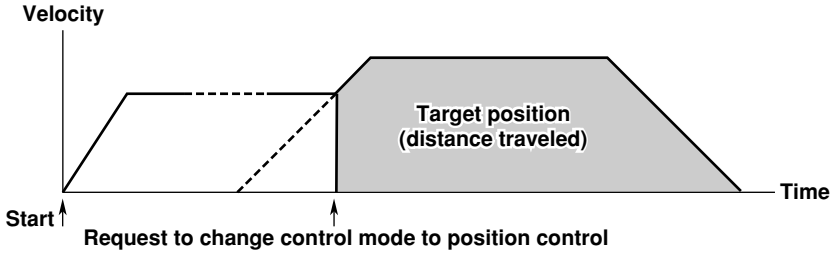

● **A Z-phase Count is Specified (Rising Edge, 2 Times)**

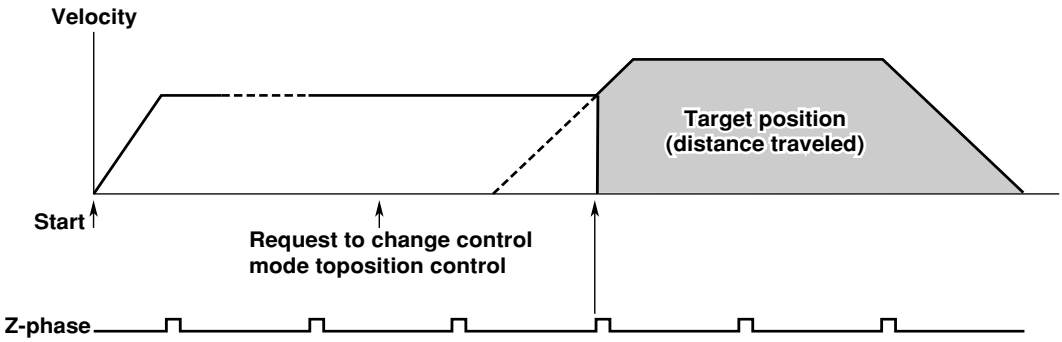

4.2 Position to Velocity Control Switching


When the control mode is switched from position to velocity control during positioning operation, the positioning module performs velocity control operation while maintaining the velocity that was set before the control mode switching occurs.

5. Acceleration / Decleration


The legitimate position/velocity control acceleration/deceleration modes are trapezoid, 2-line segment and S-shape (3-line segment). The user can specify the mode and time separately for both acceleration and deceleration. Neither 2-line segment nor S-shape is formed, however, when the target setpoint or velocity is changed during the positioning operation.

Acceleration/Deceleration Methods in Position and Velocity Control Operation


● **Trapezoid**

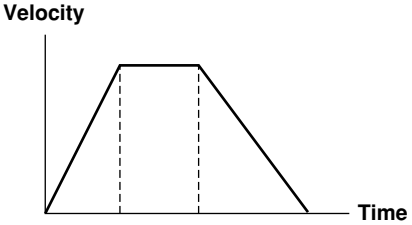

● **2-line Segment**

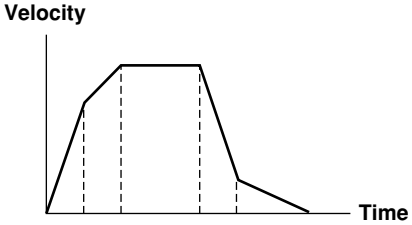

● **S-shape (3-line segment)**

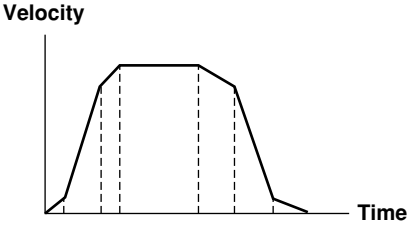

All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation

General Specifications

F3YP04-0N and F3YP08-0N
Positioning Modules
(with Multi-channel Pulse Output)

FA-M3

General

The F3YP04-0N and F3YP08-0N are positioning modules with multi-channel pulse outputs for the FA-M3 series. A single module can control 4- and 8-axis of motors. Being of pulse output type, these modules are well suited for servo motors/drivers or pulse motors/drivers of position command type.


- Some of the less frequently used functions of the modules have been trimmed down and the number of axes that they can control has been increased to 8 axes (conventionally 2 axes per slot). This makes it possible to configure multi-axis positioning systems with as many as 288 axes (when the base unit is extended and 36 F3YP08-0N modules are used).
- The modules feature a short startup time of 6 ms maximum, allowing for high speed operation and synchronous operation with that of peripheral devices.

Specifications

Standard Specifications


Item	Specification	
	F3YP04-0N	F3YP08-0N
Number of axes	4	8
Number of simultaneous -controlled axes	4	8
Control system	Open-loop position control using a positioning pulse output	
Output pulse system	RS-422A compliant difference signal, forward/reverse pulse outputs for each axis.	
Maximum velocity	250,000 pulses/s	
Acceleration/ deceleration system	Automatic trapezoidal acceleration/ deceleration (starting velocity programmable)	
Acceleration/ deceleration time	0 to 32,767 ms acceleration/deceleration independently programmable	
Pulse range	–134,217,728 to 134,217,727 pulses	
Command speed	0.1 - 250,000 pulses/s	
Home position search mode	Selectable from home position input and limit input Encoder Z-phase available	
Home position search speed	Arbitrarily programmable	
External contact input	Positive limit switch, negative limit switch, home position and Z-phase	
External contact output	Deviation pulse clear signal	
Data backup	Backup using the CPU module	
Startup time	6 ms max.	
Current consumption	300 mA	350 mA
External power supply	5 V DC, 350 mA	5 V DC, 700 mA
External connection	One 48-pin connector	Two 48-pin connectors
External dimensions	28.9 (W) × 100 (H) × 83.2 (D) mm*	
Weight	110 g	130 g

*: Excluding protrusions (see external dimensions for details).

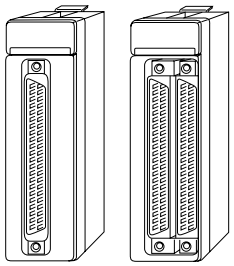


Components and Functions

● **F3YP04-0N (4-axis model)**

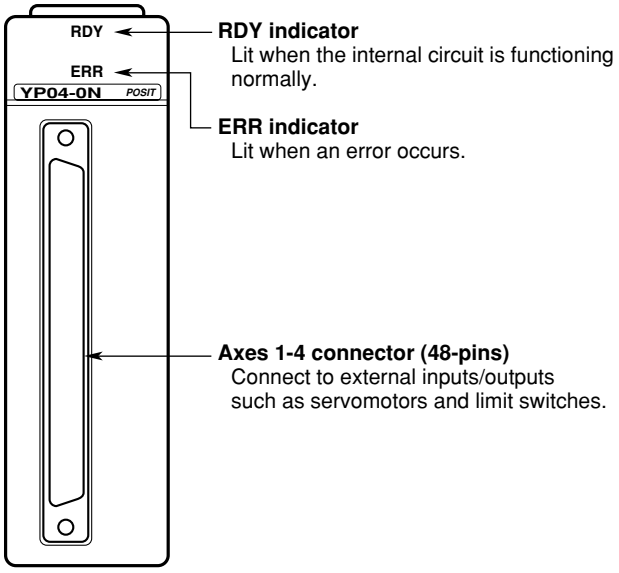


● **F3YP08-0N (8-axis model)**

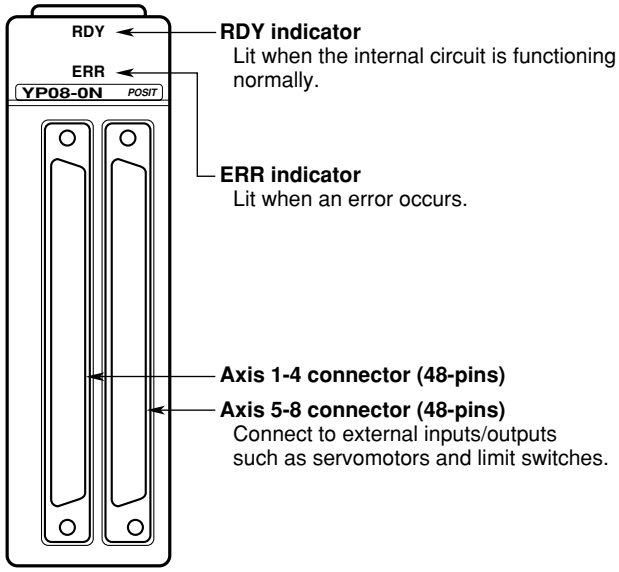

All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation


■ Configuration Example

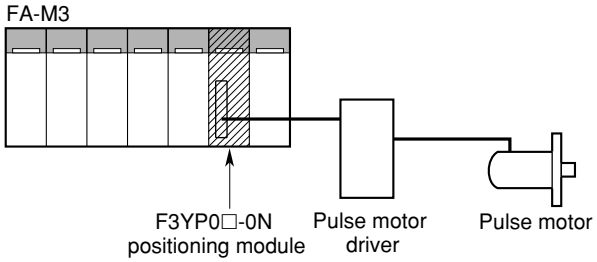

■ External Connection Diagram

24b	Axis 4 Z-phase input (–)	24a	Axis 2 Z-phase input (–)
23b	Axis 4 Z-phase input (+)	23a	Axis 2 Z-phase input (+)
22b	Axis 4 forward pulse (+)	22a	Axis 2 forward pulse (+)
21b	Axis 4 forward pulse (–)	21a	Axis 2 forward pulse (–)
20b	Axis 4 reverse pulse (+)	20a	Axis 2 reverse pulse (+)
19b	Axis 4 reverse pulse (–)	19a	Axis 2 reverse pulse (–)
18b	Axis 4 deviation pulse clear	18a	Axis 2 deviation pulse clear
17b	Axis 4 deviation pulse clear (GND)	17a	Axis 2 deviation pulse clear (GND)
16b	Axis 3 Z-phase input (–)	16a	Axis 1 Z-phase input (–)
15b	Axis 3 Z-phase input (+)	15a	Axis 1 Z-phase input (+)
14b	Axis 3 forward pulse (+)	14a	Axis 1 forward pulse (+)
13b	Axis 3 forward pulse (–)	13a	Axis 1 forward pulse (–)
12b	Axis 3 reverse pulse (+)	12a	Axis 1 reverse pulse (+)
11b	Axis 3 reverse pulse (–)	11a	Axis 1 reverse pulse (–)
10b	Axis 3 deviation pulse clear	10a	Axis 1 deviation pulse clear
9b	Axis 3 deviation pulse clear (GND)	9a	Axis 1 deviation pulse clear (GND)
8b	External power supply 5Vin	8a	External power supply 5Vin (GND)
7b	Axis 4 home position input	7a	Axis 2 home position input
6b	Axis 4 positive limit input	6a	Axis 2 positive limit input
5b	Axis 4 negative limit input	5a	Axis 2 negative limit input
4b	Axis 3 home position input	4a	Axis 1 home position input
3b	Axis 3 positive limit input	3a	Axis 1 positive limit input
2b	Axis 3 negative limit input	2a	Axis 1 negative limit input
1b	Contact input common	1a	Contact input common

24b	Axis 8 Z-phase input (–)	24a	Axis 6 Z-phase input (–)
23b	Axis 8 Z-phase input (+)	23a	Axis 6 Z-phase input (+)
22b	Axis 8 forward pulse (+)	22a	Axis 6 forward pulse (+)
21b	Axis 8 forward pulse (–)	21a	Axis 6 forward pulse (–)
20b	Axis 8 reverse pulse (+)	20a	Axis 6 reverse pulse (+)
19b	Axis 8 reverse pulse (–)	19a	Axis 6 reverse pulse (–)
18b	Axis 8 deviation pulse clear	18a	Axis 6 deviation pulse clear
17b	Axis 8 deviation pulse clear (GND)	17a	Axis 6 deviation pulse clear (GND)
16b	Axis 7 Z-phase input (–)	16a	Axis 5 Z-phase input (–)
15b	Axis 7 Z-phase input (+)	15a	Axis 5 Z-phase input (+)
14b	Axis 7 forward pulse (+)	14a	Axis 5 forward pulse (+)
13b	Axis 7 forward pulse (–)	13a	Axis 5 forward pulse (–)
12b	Axis 7 reverse pulse (+)	12a	Axis 5 reverse pulse (+)
11b	Axis 7 reverse pulse (–)	11a	Axis 5 reverse pulse (–)
10b	Axis 7 deviation pulse clear	10a	Axis 5 deviation pulse clear
9b	Axis 7 deviation pulse clear (GND)	9a	Axis 5 deviation pulse clear (GND)
8b	External power supply 5Vin	8a	External power supply 5Vin (GND)
7b	Axis 8 home position input	7a	Axis 6 home position input
6b	Axis 8 positive limit input	6a	Axis 6 positive limit input
5b	Axis 8 negative limit input	5a	Axis 6 negative limit input
4b	Axis 7 home position input	4a	Axis 5 home position input
3b	Axis 7 positive limit input	3a	Axis 5 positive limit input
2b	Axis 7 negative limit input	2a	Axis 5 negative limit input
1b	Contact input common	1a	Contact input common

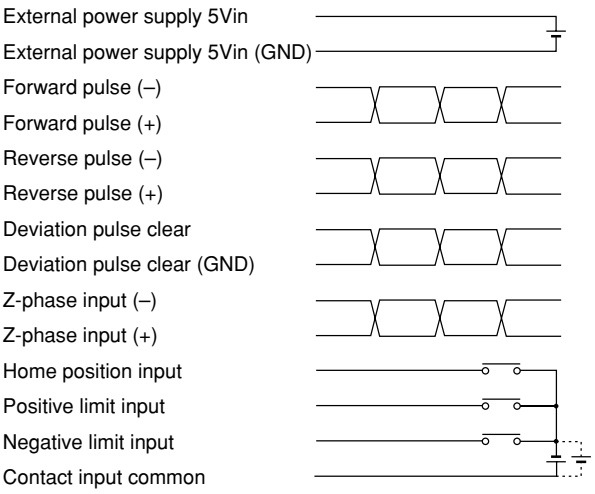

- All axes are connected to the external devices in the same manner.
- The external power supply 5 V is common to all axes. Connect the power cable to one of the two module connectors, or connect the same power supply to the two module connectors.
- The contact input common pins (4 lines) are internally connected.
- The deviation pulse clear and Z-phase input signals are independently available for each axis.
- The F3YP04-0N does not have axes 5-8. Consequently, it has only one module connector (left side).

■ Applicable External Connectors

Connection Method	Applicable Connector	Remarks
Soldered type	Fujitsu:FCN-361J048-AU connector FCN-360C048-B connector cover	Supplied by the user.
Solderless type	Fujitsu:FCN-363J048 housing FCN-363J-AU contact FCN-360C048-B connector cover	
Pressure-welded type	Fujitsu:FCN-367J048-AU/F	

■ Operating Environment

There is no restriction on the type of CPU modules that can be used with these module.

■ Model and Suffix Codes


Model	Suffix Code	Style Code	Option Code	Description
F3YP04	**- 0N**	·····	·····	4-axis, multichannel pulse output, 250,000 pulses/s max.
F3YP08	**- 0N**	·····	·····	8-axis, multichannel pulse output, 250,000 pulses/s max.

Note: See the section on spare parts in the FA-M3 Range-free Multi-controller (GS 34M6A01-01E) for information on connectors.

All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation

External Dimensions

Unit: mm

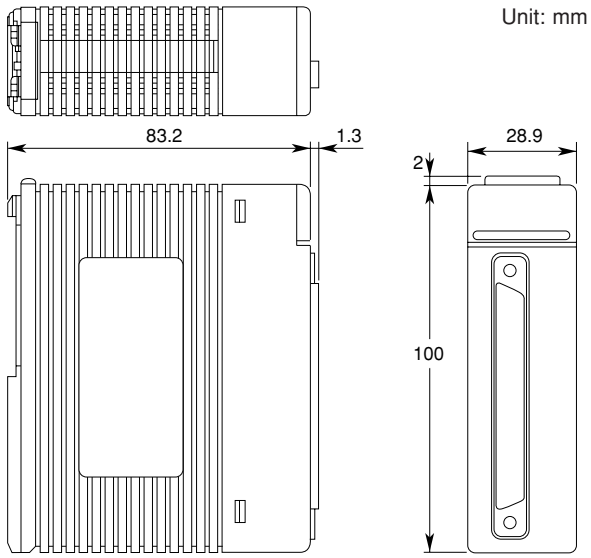

Note: This figure is for the F3YP04-0N.

Electrical Data

1. Input Signals

Signal	Input	Rated Input Voltage (Operating Voltage Range)	Rated Input Current	Operating Voltage/Current	
				ON	OFF
External contact input	DC voltage	24 V DC (20.4 to 26.4 V DC)	3.1 mA	19.2 V min. 2.4 mA min.	5.8 V max. 0.9 mA max.
Encoder Z-phase input	DC voltage	5 V DC (4.25 to 5.5 V DC)	15.3 mA	3.5 V min. 9 mA min.	1.5 V max. 2 mA max.

2. Output Signals

Signal		Output	Rated Load Voltage (Maximum Load Voltage)	Maximum Load Current	ON-time Residual Voltage	OFF-time Leakage Current
Deviation pulse clear	**Open-collector**	Transistor contact	12 - 24 V DC (26.4 V DC)	100 mA/ point	1.5 V DC max.	0.1 mA max.
Pulse output*	**Line driver**	RS-422 compliant difference signal	—	—	—	—


*: Pulse outputs require an external power supply ±5 V DC (5%).

All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation

Function Overview

1. Positioning System

This is a positioning module with positioning pulse outputs for the FA-M3 series. It generates positioning trajectory data and position command values in the pulse train according to commands from a CPU module.

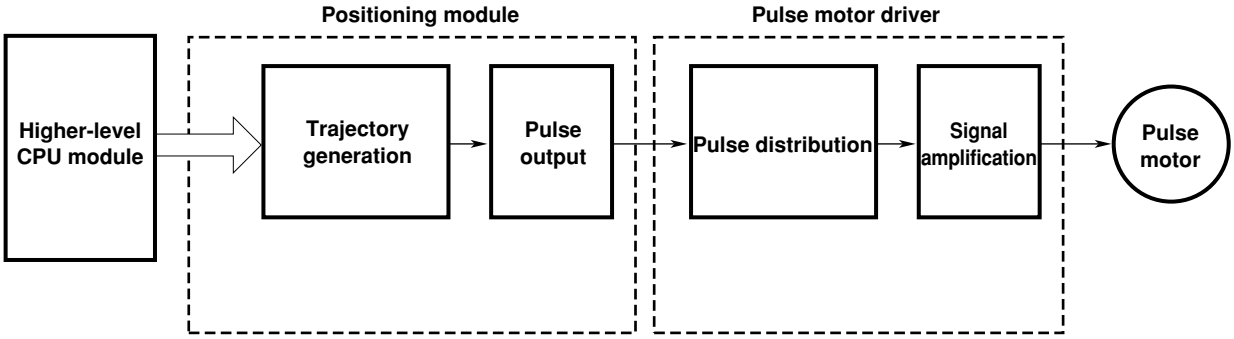



2. Position Control

2.1 Positioning Operation


A positioning operation is started by writing the velocity setpoint (pulses/ms), target position (pulses), acceleration time (ms) and deceleration time (ms) from the CPU module and issuing a command code of 0 (to turn on the output relay for command execution). The positioning completion relay turns on when the output of position command pulses ends.
The acceleration/deceleration curve forms a trapezoid. The acceleration and deceleration times must be set separately.

Velocity and Acceleration/Deceleration Times in the Trapezoidal Drive/Triangular Drive Mode

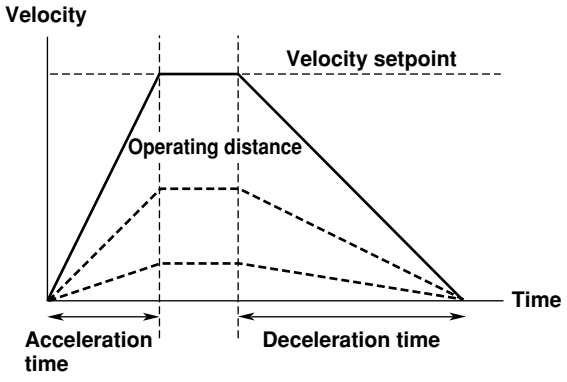


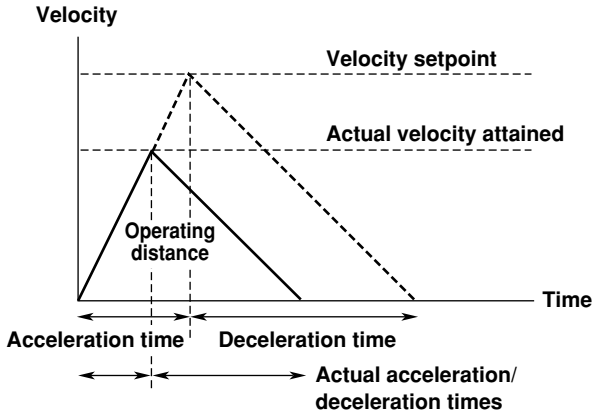

End-of-positioning Timing and Actual Motor Operation

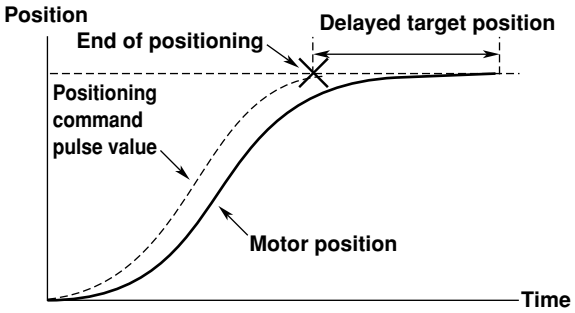

Acceleration/Deceleration Times and Startup Velocity

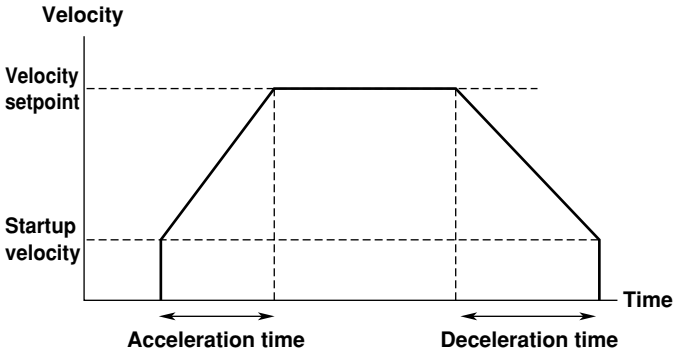


All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation

2.2 Multi-axis Linear Interpolation Operation

A linear interpolation operation is started by writing the velocity setpoint (pulses/ms), target position (pulses), acceleration time (ms) and deceleration time (ms) from the CPU module and issuing a command code of 0 (to turn on the output relays for all axes at the same time). When the output of position command pulses for an axis ends, the positioning completion relay associated with that axis turns on. The acceleration time (ms) and deceleration time (ms) must be set to the same values for all axes that are subject to linear interpolation processing. The velocity setpoint (pulses/ms) for the axes must be calculated and preset so that it is equal to the ratio of the distances traveled along the axes.

Multi-axis Linear Interpolation Operation (2-axis)

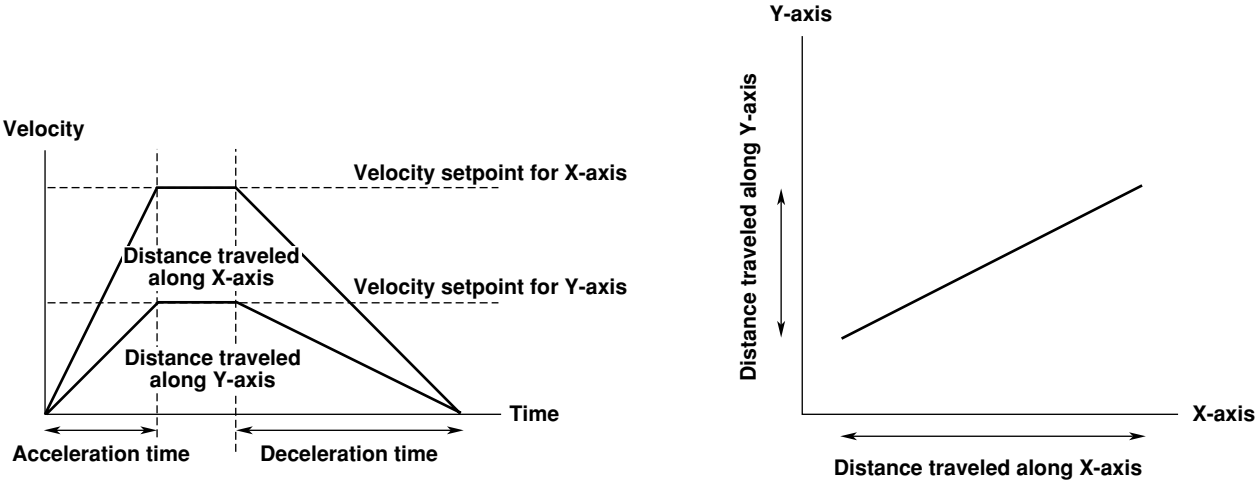

All Rights Reserved. Copyright © 1997, Yokogawa Electric Corporation

General Specification


F3YP14−0N, F3YP18-0N
Positioning Module
(with Multi-channel Pulse Output)

FA-M3

■ General

The F3YP14-0N and F3YP18-0N modules are positioning module with multi-channel pulse outputs. A single module can control four or eight motors (axes). As these modules output pulses, they are well-suited for position command type servo motors and drivers, or pulse motors and drivers.

- A short startup time of 0.09 ms maximum enables the modules to start at high speed and synchronize their operation with peripheral devices.
- The modules can output command pulses at high speed to control high speed, high precision linear motors and DD motors. The maximum output pulse speed is 3.998 Mpps for servo motors, or 499.75 kpps for pulse motors.
- An S-shape acceleration/deceleration speed control function allows the module to move a work piece smoothly at high speed.
- One F3YP18-0N module can control up to eight axes. By using a maximum of 36 F3YP18-0N modules to expand the base unit, you can build a multi-axis positioning system that controls up to 288 axes.

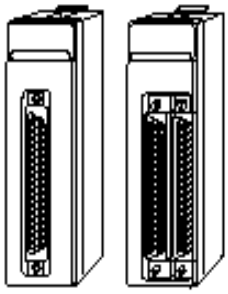

■ Specifications


Item		Specifications	
		F3YP14-0N	F3YP18-0N
Number of controlled axes		4	8
Number of axes controlled simultaneously		4	8
Control system		Open-loop position control using position command pulse output	
Position control		PTP movement, multi-axis linear interpolation, change in velocity during movement, change in target position during movement	
Output pulse system		RS-422A compliant difference signal. Either forward/reverse pulse output or direction/travel pulse output selectable for each axis	
Maximum speed		3,998,000 pps (for servo motor) 499,750 pps (for pulse motor)	
Acceleration/ deceleration system		Automatic trapezoidal acceleration/deceleration (starting velocity programmable) Automatic S-shape acceleration/deceleration (starting velocity fixed)	
Acceleration /deceleration time		0 to 32,767 ms (independently programmable for acceleration and deceleration)	
Command pulse range		-2,147,483,648 to 2,147,483,647 pulses	
Command speed		0.1 to 3,998,000 pps (for servo motor) 0.1 to 499,750 pps (for pulse motor)	
Home position search mode		User-definable using a combination of home position and limit switch inputs Encoder Z-phase input available Automatic home position search mode available	
Home position search speed		Arbitrarily programmable	
External contact input		Positive and negative limit switches, home position switch, encoder Z-phase	
External contact output		Deviation pulse clear signal	
Data backup		Backup using the CPU module Backup using the flash ROM	
Start up time*1	1 axis	0.09 ms	0.09 ms
	4 axes	0.25 ms	0.25 ms
	8 axes	-	0.5 ms
Current consumption		320 mA	380 mA
External power supply		5 V DC, 350 mA	5 V DC, 700 mA
External connection		One 48-pin connector	Two 48-pin connectors
External dimensions		28.9 (W) × 100 (H) × 83.2 (D) mm*2	
Weight		125 g	145 g

*1: Up to 1 ms delay may be added if another axis is in motion.

*2: Not including protrusions. (See the external dimension diagram for more details).

■ Components and Functions

● F3YP14-0N (4-axis model)

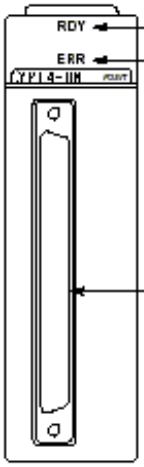


RDY indicator:
Lit when the internal circuitry is functioning normally.

ERR Indicator:
Lit when an error occurs.

Connector for axes 1 to 4 (48 pins)
Connects to external I/O devices such as servomotors and limit switches.

● F3YP18-0N (8-axis model)

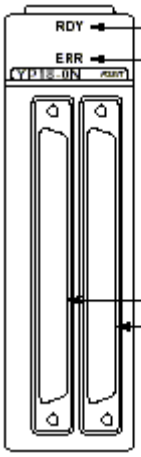


RDY indicator:
Lit when the internal circuitry is functioning normally.

ERR Indicator:
Lit when an error occurs.


Connector for axes 1 to 4 (48 pins)
Connector for axes 5 to 8 (48 pins)
Connects to external I/O devices such as servomotors and limit switches.

All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation

Configuration Example

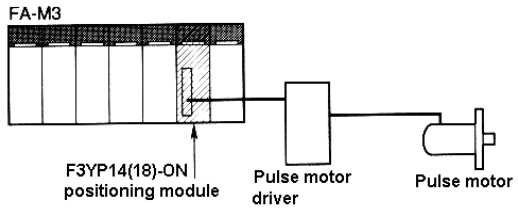

External Connection Diagram

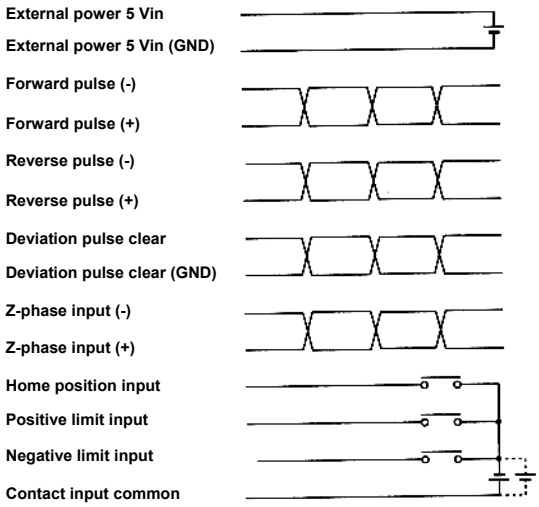

24b	Axis 4 Z-phase input (-)	24a	Axis 2 Z-phase input (-)
23b	Axis 4 Z-phase input (+)	23a	Axis 2 Z-phase input (+)
22b	Axis 4 forward pulse (+)	22a	Axis 2 forward pulse (+)
21b	Axis 4 forward pulse (-)	21a	Axis 2 forward pulse (-)
20b	Axis 4 reverse pulse (+)	20a	Axis 2 reverse pulse (+)
19b	Axis 4 reverse pulse (-)	19a	Axis 2 reverse pulse (-)
18b	Axis 4 deviation pulse clear	18a	Axis 2 deviation pulse clear
17b	Axis 4 deviation pulse clear (GND)	17a	Axis 2 deviation pulse clear (GND)
16b	Axis 3 Z-phase input (-)	16a	Axis 1 Z-phase input (-)
15b	Axis 3 Z-phase input (+)	15a	Axis 1 Z-phase input (+)
14b	Axis 3 forward pulse (+)	14a	Axis 1 forward pulse (+)
13b	Axis 3 forward pulse (-)	13a	Axis 1 forward pulse (-)
12b	Axis 3 reverse pulse (+)	12a	Axis 1 reverse pulse (+)
11b	Axis 3 reverse pulse (-)	11a	Axis 1 reverse pulse (-)
10b	Axis 3 deviation pulse clear	10a	Axis 1 deviation pulse clear
9b	Axis 3 deviation pulse clear (GND)	9a	Axis 1 deviation pulse clear (GND)
8b	External power 5 Vin	8a	External power 5 Vin (GND)
7b	Axis 4 home position input	7a	Axis 2 home position input
6b	Axis 4 positive limit input	6a	Axis 2 positive limit input
5b	Axis 4 negative limit input	5a	Axis 2 negative limit input
4b	Axis 3 home position input	4a	Axis 1 home position input
3b	Axis 3 positive limit input	3a	Axis 1 positive limit input
2b	Axis 3 negative limit input	2a	Axis 1 negative limit input
1b	Contact input common	1a	Contact input common

24b	Axis 8 Z-phase input (-)	24a	Axis 6 Z-phase input (-)
23b	Axis 8 Z-phase input (+)	23a	Axis 6 Z-phase input (+)
22b	Axis 8 forward pulse (+)	22a	Axis 6 forward pulse (+)
21b	Axis 8 forward pulse (-)	21a	Axis 6 forward pulse (-)
20b	Axis 8 reverse pulse (+)	20a	Axis 6 reverse pulse (+)
19b	Axis 8 reverse pulse (-)	19a	Axis 6 reverse pulse (-)
18b	Axis 8 deviation pulse clear	18a	Axis 6 deviation pulse clear
17b	Axis 8 deviation pulse clear (GND)	17a	Axis 6 deviation pulse clear (GND)
16b	Axis 7 Z-phase input (-)	16a	Axis 5 Z-phase input (-)
15b	Axis 7 Z-phase input (+)	15a	Axis 5 Z-phase input (+)
14b	Axis 7 forward pulse (+)	14a	Axis 5 forward pulse (+)
13b	Axis 7 forward pulse (-)	13a	Axis 5 forward pulse (-)
12b	Axis 7 reverse pulse (+)	12a	Axis 5 reverse pulse (+)
11b	Axis 7 reverse pulse (-)	11a	Axis 5 reverse pulse (-)
10b	Axis 7 deviation pulse clear	10a	Axis 5 deviation pulse clear
9b	Axis 7 deviation pulse clear (GND)	9a	Axis 5 deviation pulse clear (GND)
8b	External power 5 Vin	8a	External power 5 Vin (GND)
7b	Axis 8 home position input	7a	Axis 6 home position input
6b	Axis 8 positive limit input	6a	Axis 6 positive limit input
5b	Axis 8 negative limit input	5a	Axis 6 negative limit input
4b	Axis 7 home position input	4a	Axis 5 home position input
3b	Axis 7 positive limit input	3a	Axis 5 positive limit input
2b	Axis 7 negative limit input	2a	Axis 5 negative limit input
1b	Contact input common	1a	Contact input common

- All axes are connected to the external devices in the same manner.
- The external power 5 V is common to all axes. Connect the power cable to one of the two modules connectors, or connect the same power supply to both module connectors.
- All four contact input common pins are internally connected.
- The deviation pulse clear and Z-phase input signals are independently available for each axis.
- The F3YP14-0N model supports only four axes, and thus has only one module connector (left side).

Applicable External Connectors

Connection Method	Applicable Connector	Remarks
Soldered	Fujitsu: FCN-361J048-AU connector FCN-360C048-B connector cover	Supplied by the user
Solderless	Fujitsu: FCN-363J048 housing FCN-363J-AU contacts FCN-360C048-B connector cover	
Pressure-welded	Fujitsu: FCN-367J048-AU/F	

Operating Environment

There is no restriction on the type of CPU modules that can be used with these positioning modules.

Model and Suffix Codes


Model	Suffix Code	Style Code	Option Code	Description
F3YP14	-0N	.....	.....	4-axis, multi-channel pulse output 3,998,000 pps max. (for servomotor) or 499,750 pps max. (for pulse motor)
F3YP18	-0N	.....	.....	8-axis, multi-channel pulse output 3,998,000 pps max. (for servomotor) or 499,750 pps max. (for pulse motor)

Note: For information on connectors, see the section on spare parts in the FA-M3 Range-free Multi-controller (GS 34M6A01-01E).

All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation
Subject to change without notice.

External Dimensions

Unit: mm

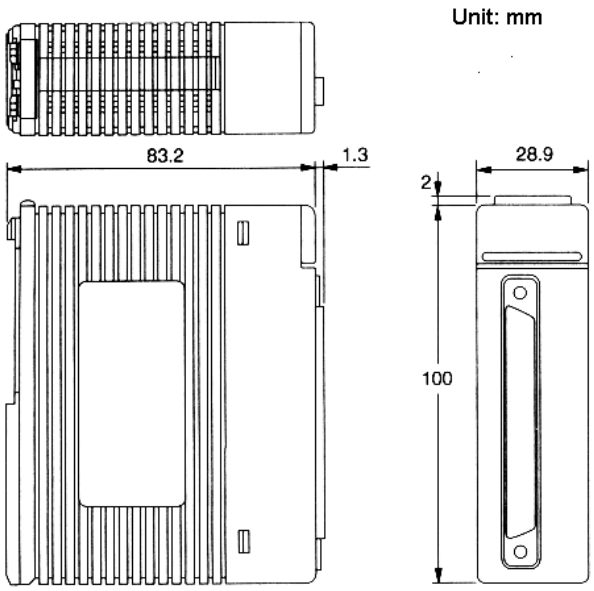

Note: External dimension diagram for the F3Y14-0N model.

Electrical Data

1. Input Signals

Signal	Input	Rated Input Voltage (Operating Voltage Range)	Rated Input Current	Operating voltage/current	
				ON	OFF
External contact input	DC voltage	24 V DC (20.4 to 26.4 V DC)	3.1 mA	19.2 V DC min. 2.4 mA min.	5.8 V DC max. 0.9 mA max.
Encoder Z-phase input	DC voltage	5 V DC (4.25 to 5.5 V DC)	15.3 mA	3.5 V DC min. 9 mA min.	1.5 V DC max. 2 mA max.

2. Output signals

Signal		Output	Rated Load Voltage (Max. Load Voltage)	Max. Load Current	ON-time Residual Voltage	OFF-time Leakage Current
Deviation pulse clear	**Open collector**	Transistor contact	24V DC (26.4V DC)	100 mA/ point	1.5 V DC max.	0.1 mA max.
Pulse output	**Line driver**	RS422-compliant difference signal	–	–	–	–

Items to Specify When Ordering

1. Model and suffix codes

All Rights Reserved. Copyright © 2004, Yokogawa Electric Corporation
Subject to change without notice.

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP