ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *MAC Panel Company Scout XT* at our website: ***Click HERE***


Procedure sheet.

Procedure for installing and removing MACPanel DAK.

** Failure to follow these procedures will result in damage to either the DAK screws or Receiver frame and add stresses to the DAK / PXI Card assembly **


Installation.

1) Slide the pre-assembled DAK / PXI card assembly into the assigned card slot.
Push in until the DAK screws touch the receiver top and bottom rails.

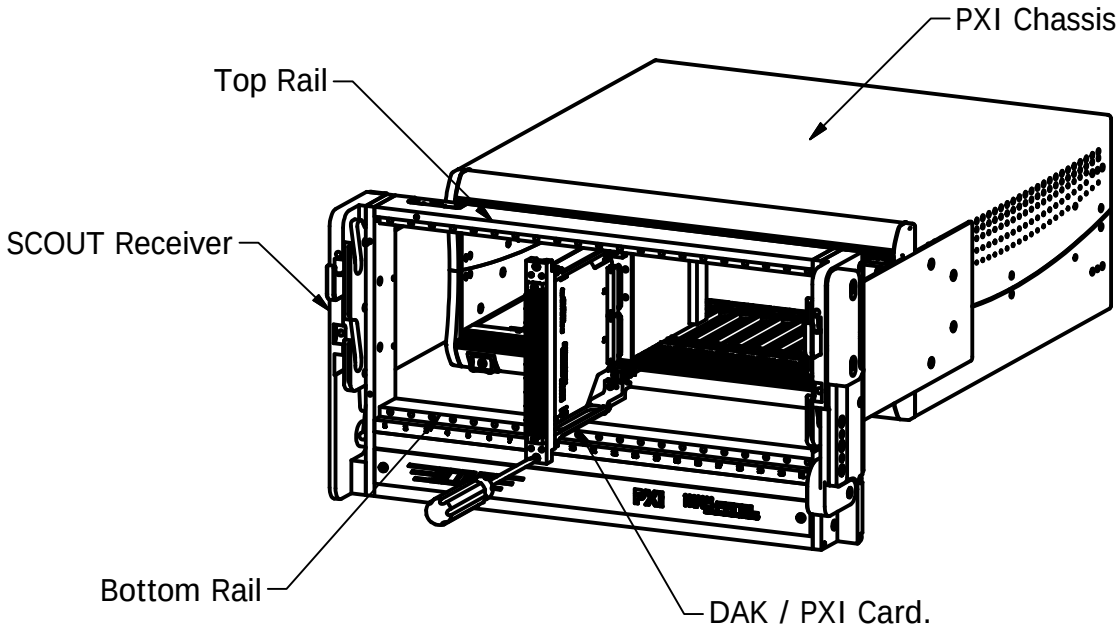


2) Using a 4.5mm flat bladed screwdriver, screw in the BOTTOM DAK screw first (Detail A)
This will engage the PXI card into the chassis backplane.
Once the bottom screw is properley seated, only then should the TOP screw be secured.

BOTTOM screw *MUST* be secured *FIRST*.

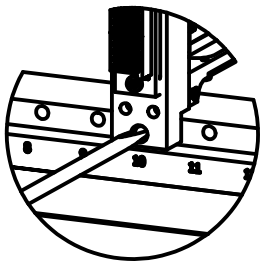

DETAIL A

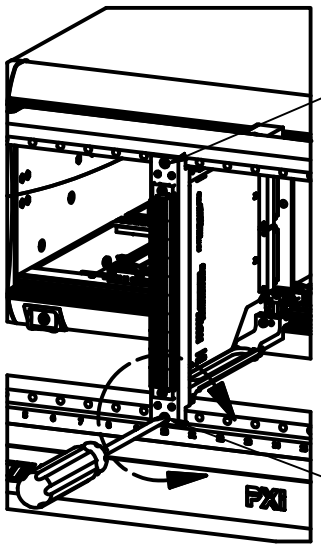

Your DAK / PXI card assembly is now correctly installed in the SCOUT receiver and PXI Chassis.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Procedure sheet.


Removal.

1) Using a 4.5mm flat bladed screwdriver, unscrew the TOP DAK screw first. (Detail B)
When TOP screw is free from the receiver top rail, only then should the BOTTOM screw be removed.
(BOTTOM screw will pull the PXI card from the chassis backplane)

TOP screw *MUST*
be unscrewed *FIRST*.
(*this screw is captive and should not be fully removed*)

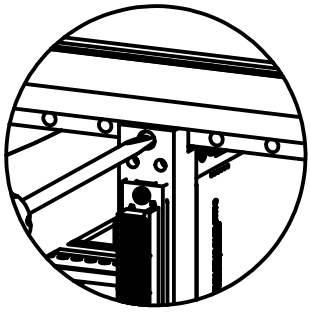

Detail B

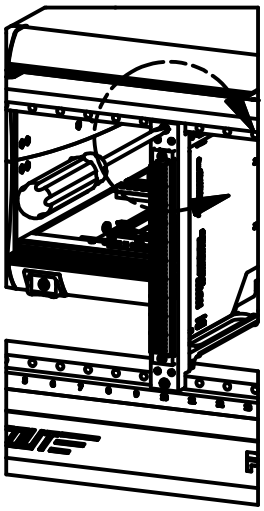


2) To aid in the removal of the DAK / PXI card assembly, the DAK Removal tool can be hooked onto the bottom DAK guide pin. (Detail C)
The DAK / PXI card assembly can then slide out.



Detail C

DAK Removal Tool

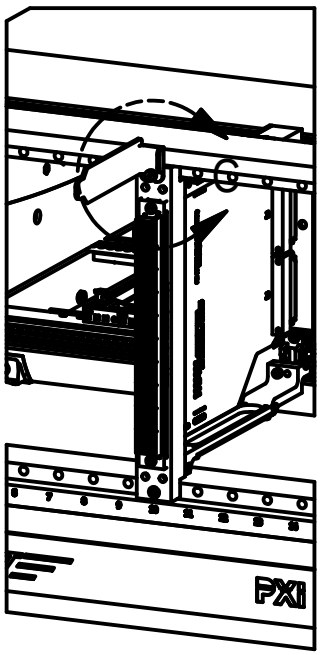

Your DAK / PXI card assembly is now sucessfully removed from the SCOUT receiver and PXI Chassis.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP