



## Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

### SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

### *InstraView*<sup>SM</sup> REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at [www.instraview.com](http://www.instraview.com) ↗

### WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. [www.artisanng.com/WeBuyEquipment](http://www.artisanng.com/WeBuyEquipment) ↗

### LOOKING FOR MORE INFORMATION?

Visit us on the web at [www.artisanng.com](http://www.artisanng.com) ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

**Contact us:** (888) 88-SOURCE | [sales@artisanng.com](mailto:sales@artisanng.com) | [www.artisanng.com](http://www.artisanng.com)



## Bulletin 1300 Door Mount Programming Terminal

Cat. No. 1300 DMT/1300 EMT

### Installation Data

#### General

This publication provides the information needed to install the Bulletin 1300 Door Mount Programming Terminal Kit for use with Bulletin 1395 and 1396 Drives. The dimensions and mounting procedures will be identical for both the Door Mount Terminal (DMT) and Enhanced Door Mount Terminal (EMT).

#### Qualifications

This kit is intended for use by qualified service personnel who possess the necessary tools to perform cabinet metal cutting, drilling and welding.

#### Applications


The Bulletin 1300 Programming Terminal is available in 4 different versions based on terminal type and the length of the cable as follows:

1. Catalog 1300–DMT10
  - Door Mount Bulletin 1300 Programming Terminal
  - Gasket
  - 10 Ft. Cable
  - Bezel
2. Catalog 1300–DMT20
  - Door Mount Bulletin 1300 Programming Terminal
  - Gasket
  - 20 Ft. Cable
  - Bezel
3. Catalog 1300–EMT10
  - Door Mount Bulletin 1300 Enhanced Programming Terminal
  - Gasket
  - 10 Ft. Cable
  - Bezel
4. Catalog 1300–EMT20
  - Door Mount Bulletin 1300 Enhanced Programming Terminal
  - Gasket
  - 20 Ft. Cable
  - Bezel

#### Mounting Location

The Door Mount Terminal may be installed in almost any location in the cabinet door. It is recommended however that the DMT/EMT be installed near the center of the panel with sufficient clearance allowed for door actuators, gaskets and cable clearance (Figure 1).

Figure 1. Bulletin 1300 DMT/EMT Dimensions and Clearances

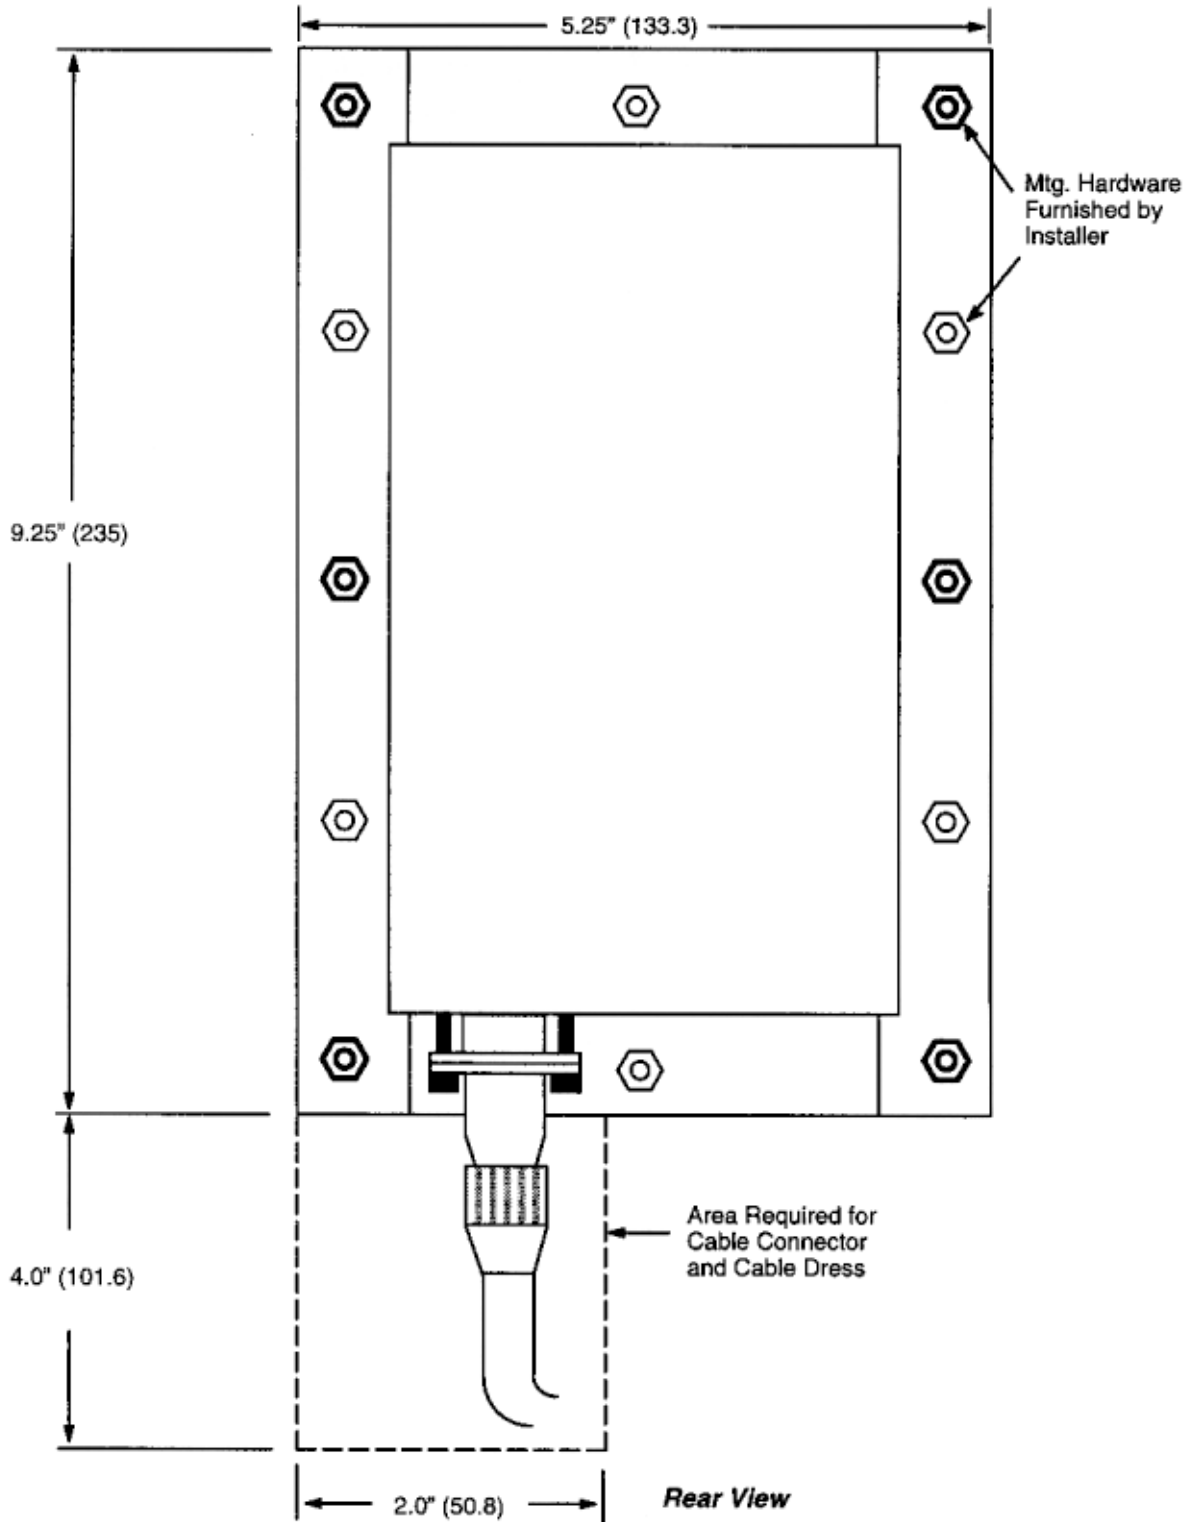


**Installation Procedures**

**Mounting Hardware** – The Bulletin 1300 DMT/EMT can be mounted using two different methods. If you do not wish to have exterior hardware such as screw heads on your door, the DMT/EMT must be mounted using weld-on PEM® studs in the positions shown in Figure 2. If the weld-on method is not preferred, the DMT can be mounted by drilling .166" (4.21) diameter holes and using #6 screws to fasten the DMT in place. Factory installed DMT/EMT panels use 12 weld-on studs for mounting. A minimum of six weld-on studs or six #6 screws must be used to mount the panel (see highlighted fasteners in Figure 1 for the minimum requirement locations). If the DMT/EMT is being retrofitted in an existing unit, the drive unit must be removed from the cabinet before performing drilling or welding operations.



**CAUTION:** Do Not remove the 12 rubber grommets that are installed in each of the 12 mounting holes of the DMT or EMT. These grommets are necessary in the final assembly to provide electrical isolation between the DMT/ EMT Metal Case and the sheet metal enclosure. The DMT/EMT Metal Case is grounded through a separate conductor in the cable.

**Figure 2. Bulletin 1300 DMT Cutout and Mounting Dimensions**

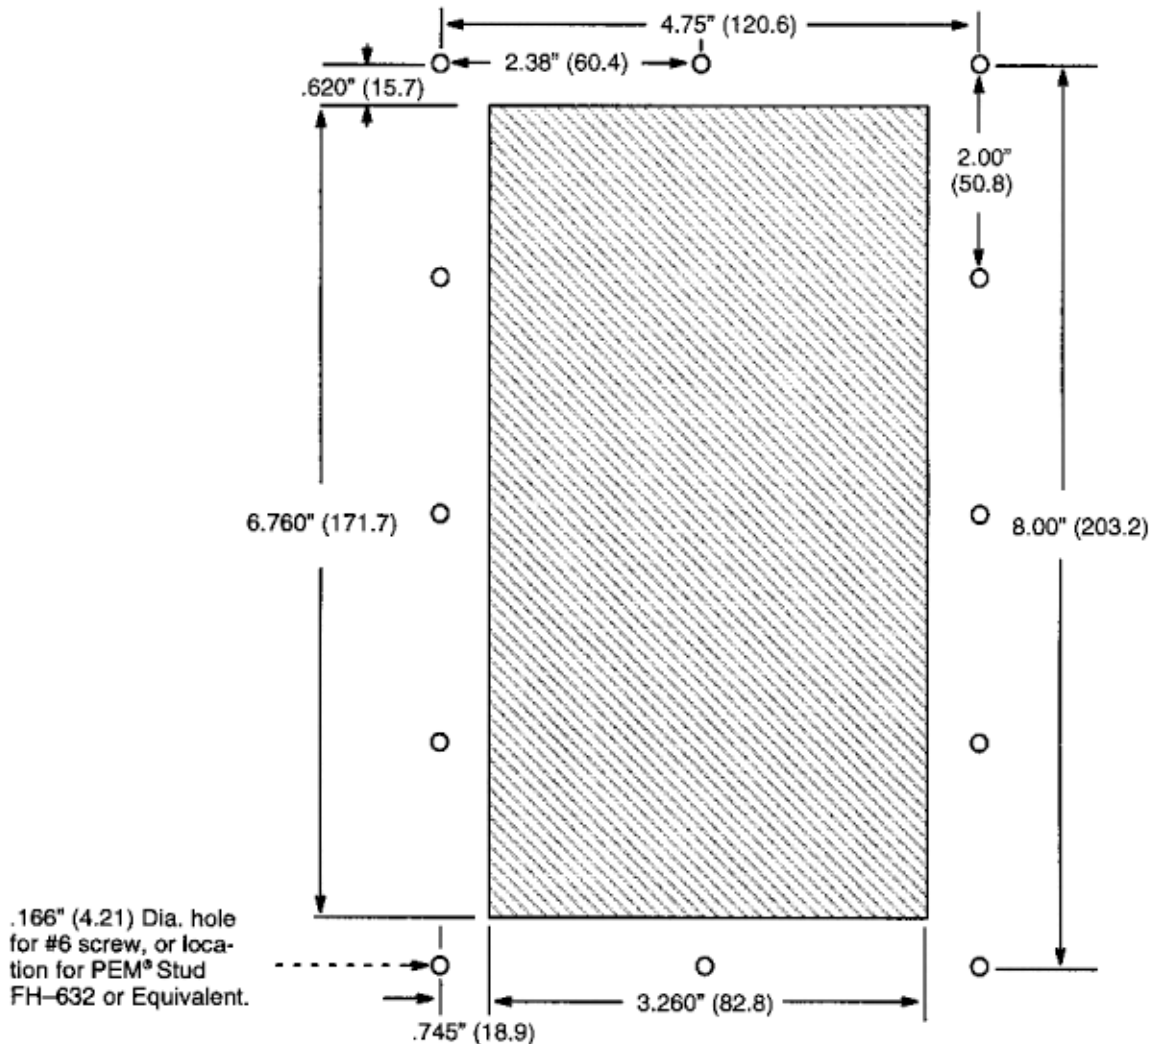

**Cutout** – When cutting the opening for the DMT/EMT, the dimensions (Fig.2) must be exact to  $\pm 0.005$ " (0.127) as the trim bezel is an interference fit. An oversized opening would result in a loose fit for the trim bezel. After the hole is cut and all drilling has occurred, make certain that all holes are deburred before beginning the assembly.

**Gasket Installation** – Before mounting the DMT/EMT assembly to the cabinet door, the isolation gasket must be positioned on the front side of the DMT. Remove the protective paper from the gasket to expose the adhesive. Align the gasket carefully, so it doesn't cover any of the terminal face and all holes align with those on the housing before pressing it into place.

**DMT Installation** – Install the DMT/EMT housing and gasket assembly onto the customer supplied studs or screws in the door. Tighten the mounting hardware so that the gasket is slightly compressed, but not crushed. Snap the trim bezel into place on front side of the door.

**Cable Installation** – The cable supplied with the DMT is a special interconnect that features EMI filter cores on both ends. Substituting other cables for this unit is not permitted. The socket side of the cable interfaces with the DMT/EMT, and the pin side installs in the Drive at the connector marked DHT. Route the cable using cable ties or fasteners so that the cable doesn't interfere with door actuators or components in the drive.



A subsidiary of Rockwell International, one of the world's largest technology companies, Allen-Bradley meets today's automation challenges with over 85 years of practical plant floor experience. More than 12,000 employees throughout the world design, manufacture and apply a wide range of control and automation products and supporting services to help our customers continuously improve quality, productivity and time to market. These products and services not only control individual machines, but also integrate the manufacturing process while providing access to vital plant floor data that can be used to support decision-making throughout the enterprise.

With offices in major cities worldwide.

**WORLD HEADQUARTERS**

Allen-Bradley  
1201 South Second Street  
Milwaukee, WI 53204 USA  
Tel: (1) 414 382-2000  
Telex: 43 11 016  
Fax: (1) 414 382-4444

**EUROPE/MIDDLE EAST/  
AFRICA HEADQUARTERS**

Allen-Bradley Europe B.V.  
Amsterdamsseweg 15  
1422 AC Uithoorn  
The Netherlands  
Tel: (31) 2975/43500  
Telex: (844) 18042  
Fax: (31) 2975/60222

**ASIA/PACIFIC HEADQUARTERS**

Allen-Bradley (Hong Kong) Limited  
Room 1006, Block B, Sea View Estate  
2-8 Watson Road  
Hong Kong  
Tel: (852) 887-4788  
Telex: (780) 64347  
Fax: (852) 510-9436

**CANADA HEADQUARTERS**

Allen-Bradley Canada Limited  
135 Dundas Street  
Cambridge, Ontario N1R 5X1  
Canada  
Tel: (1) 519 623-1810  
Fax: (1) 519 623-8930

**LATIN AMERICA  
HEADQUARTERS**

Allen-Bradley  
1201 South Second Street  
Milwaukee, WI 53204 USA  
Tel: (1) 414 382-2000  
Telex: 43 11 016  
Fax: (1) 414 382-2400



## Artisan Technology Group is your source for quality new and certified-used/pre-owned equipment

- FAST SHIPPING AND DELIVERY
- TENS OF THOUSANDS OF IN-STOCK ITEMS
- EQUIPMENT DEMOS
- HUNDREDS OF MANUFACTURERS SUPPORTED
- LEASING/MONTHLY RENTALS
- ITAR CERTIFIED SECURE ASSET SOLUTIONS

### SERVICE CENTER REPAIRS

Experienced engineers and technicians on staff at our full-service, in-house repair center

### *InstraView*<sup>SM</sup> REMOTE INSPECTION

Remotely inspect equipment before purchasing with our interactive website at [www.instraview.com](http://www.instraview.com) ↗

### WE BUY USED EQUIPMENT

Sell your excess, underutilized, and idle used equipment. We also offer credit for buy-backs and trade-ins. [www.artisanng.com/WeBuyEquipment](http://www.artisanng.com/WeBuyEquipment) ↗

### LOOKING FOR MORE INFORMATION?

Visit us on the web at [www.artisanng.com](http://www.artisanng.com) ↗ for more information on price quotations, drivers, technical specifications, manuals, and documentation

**Contact us:** (888) 88-SOURCE | [sales@artisanng.com](mailto:sales@artisanng.com) | [www.artisanng.com](http://www.artisanng.com)