

Love Controls Iso Verter II

Process Signal Isolator / Converter



© Artisan Technology Group

\$125.00

In Stock

Qty Available: 1

Used and in Excellent Condition

Open Web Page

<https://www.artisanng.com/79986-1>

All trademarks, brandnames, and brands appearing herein are the property of their respective owners.



ARTISAN[®]
TECHNOLOGY GROUP

Your **definitive** source
for quality pre-owned
equipment.

Artisan Technology Group

(217) 352-9330 | sales@artisanng.com | artisanng.com

- Critical and expedited services
- In stock / Ready-to-ship

- We buy your excess, underutilized, and idle equipment
- Full-service, independent repair center

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

Iso Verter® II Model 4380 Installation Instructions

Getting Started

Mount the socket and wire per instructions on below (Figure 2).

Refer to the exploded diagram in Figure 1. Carefully remove the four screws from the bottom of the plug end. Slide the cover off.

Program for desired input following instructions on page 2.


Program for desired output following instructions on page 3.

Refer to the exploded diagram in Figure 1. Carefully replace the cover and re-install the four screws to secure the cover to the base. Screws should be tightened to a snug fit (6 in-lb torque max.).

Calibrate the unit using the procedure on page 4.



WARNING: Do not attempt to operate or calibrate this device with the cover removed. Potentially lethal voltage is present on some of the internal components. Make sure that the cover is firmly in place before plugging into the socket.

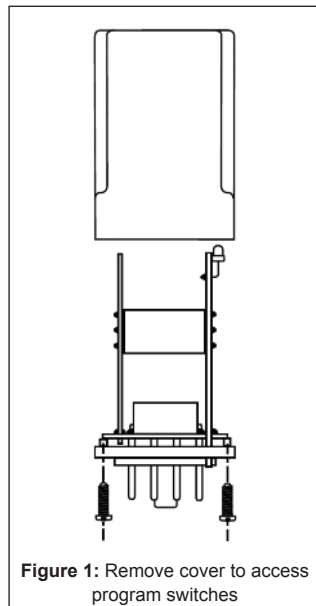


Wiring

Wire the mounting socket as shown in the drawing shown in Figure 2.

For DIRECT ACTING inputs wire the positive lead to terminal five and the negative lead to terminal six (as shown).

For REVERSE ACTING inputs wire the positive input lead to terminal six and the negative lead to terminal five.

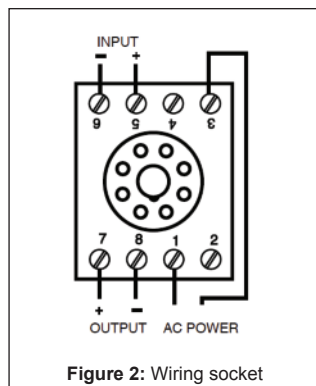

Input Programming

The input selection and ranging is performed through two switch banks. Refer to the instructions below and the illustration in Figure 3 for details.

MODE SELECT SWITCH BANK

1. For CURRENT INPUT turn switch one ON.
For VOLTAGE INPUT turn switch one OFF.
2. For UNI-POLAR INPUT (low end of scale $\geq$ zero) turn switch two ON and turn switch three OFF.
3. For BI-POLAR INPUT (low end of scale $<$ zero) turn switch two OFF and turn switch three ON.
4. For ZERO BASED INPUT (eg. 0 to 20 mA) turn switch four ON and turn switch five OFF.
5. For ZERO SUPPRESSION (eg. 4 to 20 mA) turn switch four OFF and turn switch five ON.
6. For DIRECT ACTING INPUT turn switch six OFF.
7. For REVERSE ACTING INPUT turn switch six ON and reverse input wiring.

RANGE SELECT SWITCH BANK

Turn ON the switch for the scale desired. All other switches should be OFF. If BI-POLAR INPUT is selected, the scale will be MINUS-SELECTION to PLUS-SELECTION (eg. -10 TO ± 10 VDC).

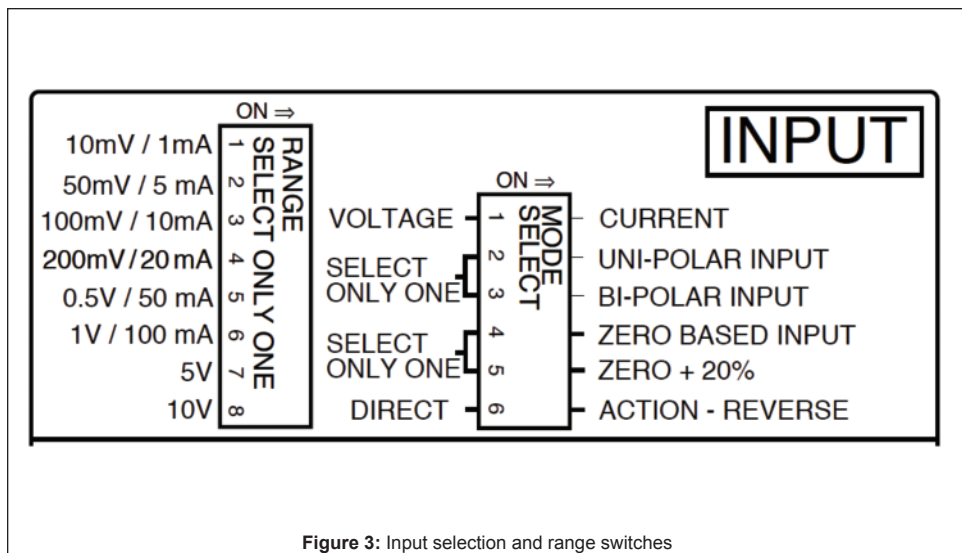


Figure 3: Input selection and range switches



WARNING: Do not attempt to operate or calibrate this device with the cover removed. Potentially lethal voltage is present on some of the internal components. Make sure that the cover is firmly in place before plugging into the socket.

Output Programming


The output selection and ranging is performed through two switch banks. Refer to the instructions below and the illustration in Figure 4 for details.

MODE SELECT SWITCH BANK

1. For VOLTAGE OUTPUT turn switches one and two ON and turn switch three OFF.
2. For CURRENT OUTPUT turn switches one and two OFF and turn switch three ON.
3. For UNIPOLAR OUTPUT turn switch four ON and turn switch five OFF.
4. For BIPOLAR OUTPUT turn switch four OFF and turn switch five ON.
5. For ZERO BASED OUTPUT (eg. 0 to 20 mA) turn switch six ON and turn switch seven OFF.
6. For ZERO SUPPRESSION (eg. 4 to 20 mA) turn switch six OFF and turn switch seven ON. If BIPOLAR or REVERSE ACTION is selected, do not use the ZERO SUPPRESSION switch. Use the ZERO adjustment to suppress the output.
7. Switch eight is always OFF. (It is not connected to any circuitry. If switch eight is turned ON there is no effect on the operation of the device).

RANGE SELECT SWITCH BANK

Turn ON the switch for the scale desired. All other switches should be OFF. If BI-POLAR INPUT is selected, the scale will be MINUS-SELECTION to PLUS-SELECTION (eg. -10 TO ± 10 VDC).

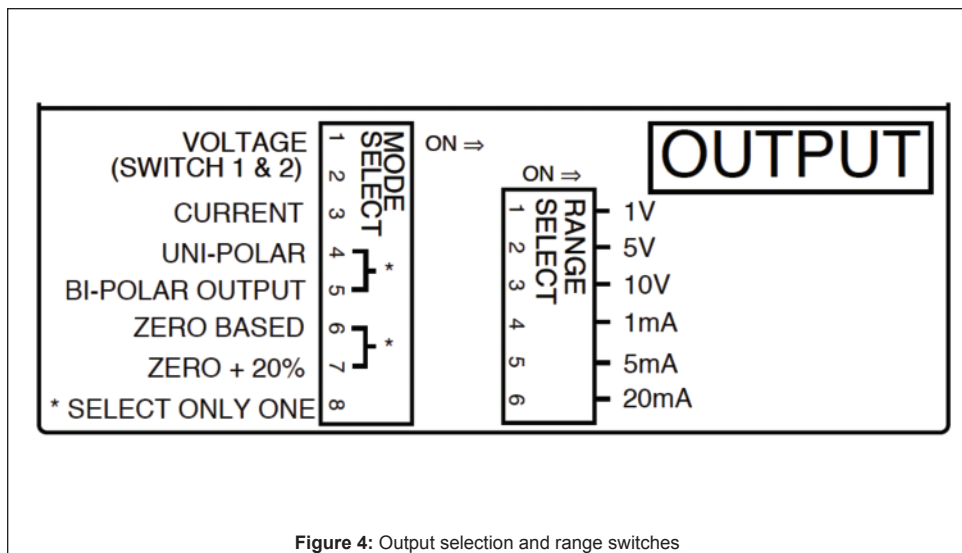

WARNING: Do not attempt to operate or calibrate this device with the cover removed. Potentially lethal voltage is present on some of the internal components. Make sure that the cover is firmly in place before plugging into the socket.



WARNING: Do not attempt to operate or calibrate this device with the cover removed. Potentially lethal voltage is present on some of the internal components. Make sure that the cover is firmly in place before plugging into the socket.

Calibration

1. Apply the appropriate input for the low end of the scale.
2. Adjust the ZERO screw for the desired low end output (4mA for example).
3. Apply the appropriate input for the high end of the scale.
4. Adjust the SPAN screw for the desired high end output (20mA for example).
5. Repeat as necessary.

Note: Instrument is factory calibrated for 4 to 20 mA Uni-Polar Direct-Acting Input and 4 to 20 mA Uni-Polar Output. Any change from this default condition may require field re-calibration to ensure accuracy of zero and span adjustments.

Specifications

Power Supply: 85 to 265 VDC/VAC, 50 to 400 Hz.

Isolation: 1500 VAC.

Ambient Temperature Range (Operating): 0 to 50°C (32 to 131°F).

Linearity: 0.1%.


Drift: $\pm 0.02\%$ per °C typical, $\pm 0.05\%$ maximum.

Maximum Current Output Load: 600 ohms.

Maximum Voltage Output Load: 20 mA (500 ohms).

Input Impedance – Current: 10 ohms.

Input Impedance – Voltage: 1 Megohm.

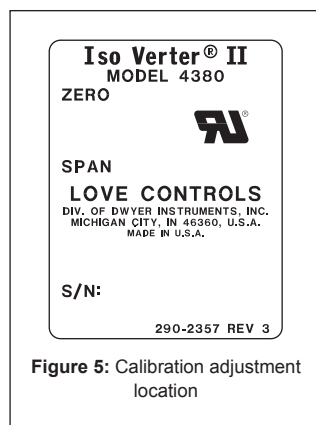

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at [artisanng.com](https://www.artisanng.com) for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisanng.com | [artisanng.com](https://www.artisanng.com)

