ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Kepco HSF 12-4.2* at our website: ***Click HERE***

INSTRUCTION MANUAL

KEPCO An ISO 9001 Company.

HSF 50W

KEPCO SINGLE OUTPUT 50 WATT HOT SWAP PLUG-IN POWER SUPPLIES CE

I — INTRODUCTION

The Kepco HSF 50 Watt Series hot swappable, high frequency switching, plug-in power supplies employ forward conversion and are designed to operate in a fault tolerant power system with either a-c or d-c input. A thermistor soft-start circuit limits start-up surge. A built-in forced current share circuit and OR-ing diodes allow configuration for hot-swap and parallel-redundant N+1 operation.

These power supplies are designed to be used with Kepco's Series RA 19-(X)B rack adapters. The RA 19-8B rack adapter accepts up to eight 50 Watt or 100 Watt units (see Figure 1); RA 19-7B accepts up to four 50 Watt or 100 Watt units and three 150 Watt units; RA 19-6B accepts up to six 150 Watt units. All input/output connections are through a 24 pin connector that plugs in to the rack adapter. All external connections are made through the rack adapter. Surface mount technology permits efficient component layout for minimum mounting space.

Five models may be selected for outputs of 5, 12, 15, 24, or 48V (see Table 1).

When the input is cut off, the output is maintained for 15 milliseconds minimum. If the power supply shuts down due to an output overvoltage condition, it is then necessary to wait 60 seconds minimum before turning the unit on again. EMI filtering is designed to meet FCC Class B rating and VDE 0871 Class B rating. This page contains specifications for each model of the HSF 50 Watt Series. Environmental specifications for each model are the same.

TABLE 1. OUTPUT RATINGS AND SPECIFICATIONS, HSF 50W SERIES

MODEL		HSF 5-10	HSF 12-4.2	HSF 15-3.4	HSF 24-2.1	HSF 48-1
OUTPUT VOLTS, d-c (NOMINAL)		5.0V	12.0V	15.0V	24.0V	48.0
ADJUSTMENT RANGE		4.5 - 5.5V	11.4 - 12.6V	13.5 - 16.5V	22.5 - 25.5V	45 - 51V
OUTPUT CURRENT (NOMINAL)(1)		10.0A	4.2A	3.4A	2.1A	1.0A
OUTPUT POWER (NOMINAL)(2)		50.0W	50.4W	51.0W	50.4W	48W
RIPPLE AND NOISE (mV p-p) 0-40°C 10-100% LOAD	source (typ)	10	15	15	25	30
	source (max)	20	30	30	30	60
	switching (typ)	30	35	45	50	60
	switching (max)	60	70	90	100	150
	spike noise (d-c—50MHz)	120	190	220	310	350
OVERVOLTAGE SETTING 25°C, NOM. INPUT		6.5 - 7.5V	13.7 - 15.7V	17.0 - 19.0V	27.0 - 30.5V	53.5 - 60.0
OVERCURRENT SETTING 25°C, NOM. INPUT Rectangular type characteristic		10.5 - 12.0A	4.4 - 5.1A	3.6 - 4.1A	2.2 - 2.6A	1.1 - 1.3A

(1) Derates same as Ouptut Power.
(2) See power derating curve, Figure 4.

II — FEATURES

FRONT PANEL ACCESS. The front panel provides a power ON/OFF switch controlling input power and a "VDC ON" light which indicates when the unit is operating. ***NOTE: The ON/OFF switch must be set to OFF before removing unit from rack adapter.*** The front panel "MASTER ON" LED lights when 1) the unit operates independently, or 2) the unit is used in parallel redundant configurations while a) the output is less than 10% of nominal or b) the output is within 10% to 100% of nominal and the unit is functioning as a master. In parallel redundant configurations, the module with the highest voltage functions as the master. The other units are slaves, and track the output voltage of the master. Refer to **Current Share Bus (CSB)** on page 3 for details. The front panel Vadj trimmer provides adjustment of the output voltage within the limits specified in Table 1; test points connected to the +S and –S lines are available at the front panel for measuring the output.

FORCED CURRENT SHARE CIRCUIT. When units are configured for N+1 parallel redundant operation, it is desirable for current to be divided equally among the paralleled supplies. When the CSB (Current Share Bus) lines of paralleled HSF units are connected together, the load current is forced to divide equally between all paralleled units. If one unit fails, the remaining units will continue to supply the load, and the load current will be divided equally among the remaining operating units. The failed unit is automatically isolated from the circuit by a built-in isolation diode. Refer to **Current Share Bus (CSB)** on page 3 for details.

©2006, KEPCO, INC
Data subject to change without notice

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ALARM CIRCUIT. The HSF includes an isolated internal relay offering normally closed and normally open contacts referenced to an isolated common. These contacts may be used to configure “close on failure” or “open on failure” alarm circuits. (Refer to the Series RA 19-(X)B Manual for alarm configurations for multiple HSF power supplies.)

KEYING. Keying of the HSF is established at the factory. The output voltage determines which keyway is open. When the corresponding rack adapter key (pin) is installed by the user, only a power supply of the correct voltage can be inserted in the rack adapter slot.

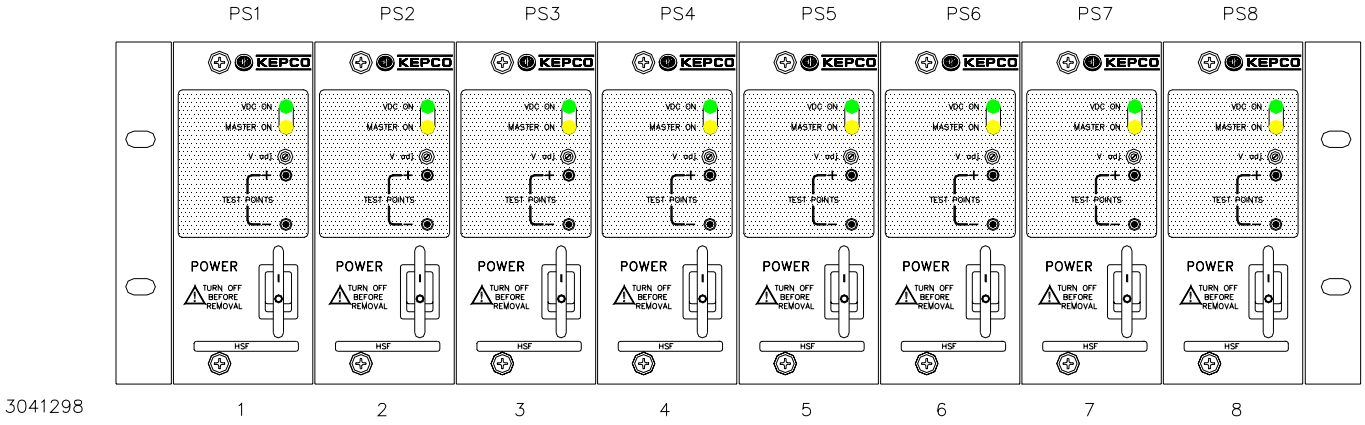


FIGURE 1. HSF 50 WATT POWER SUPPLIES (8) INSTALLED IN RA 19-8B RACK ADAPTER

III — SPECIFICATIONS

The following specifications apply to HSF 50 Watt Series models (also refer to Table 1). Other models are also available; consult your Kepco representative for their specifications.

INPUT:

Voltage: 120V a-c/240V a-c nominal; Range 95-264V a-c; 125-370V d-c. (polarity insensitive)
Frequency: Nominal 50-60 Hz; Range 47-440Hz (at 440Hz leakage current exceeds UL/VDE safety spec.limit).
Current (nominal output at rated load): @120V a-c rms: 1.0A a-c typ., 1.2A a-c max;
@240V a-c rms: 0.5A a-c typ., 0.7A a-c max.
Initial Turn-on Surge: (one-half of first input cycle): @120V a-c rms, 45A max., @240V a-c rms, 90A max.
Brownout Voltage: 85V a-c, 110V d-c
Switching Frequency: 120KHz typical, nominal load

STABILIZATION:

Source Effect: Range 95-132V a-c or 190-264V a-c, 1.0% typ.; 2.0% max.
Load Effect: Range 10%-100% load, 1.0% typ.; 2.0% max.
Temperature Effect: Range 0^{o} to 40^{o}C, 1.0% typ.; 2.0% max.
Combined Effect: 2.0% typ.; 4.0% max. (includes source, load, and temperature effects).
Time Effect: 0.1% typ.; 0.5% max. (1/2 hr-8 hr at 25^{o}C).

RECOVERY CHARACTERISTICS: A step load change from 50% to 100% produces less than $\pm$4% output excursion. Recovery occurs to within $\pm$1% of the original setting in <2 ms (load change t_r or t_f equal to or greater than 50μsec).

START-UP TIME: 500 ms. maximum.

HOLDUP TIME: 20 ms. typ. (120V a-c), 15 ms. min (100V a-c).

DIELECTRIC STRENGTH:

Between input and output: 2KV a-c for one minute.
Between input and output with Y-capacitor removed: 3.75KV a-c for one minute.
Between input and case (ground): 2KV a-c for one minute.

INSULATION RESISTANCE: Between input and ground, output and ground, input and output;
100 Megohms min. (500V d-c).

LEAKAGE CURRENT

(UL method, 120V a-c): 0.5 mA maximum.
(VDE method, 240V a-c): 0.75 mA maximum.

SAFETY: Units designed to meet UL60950 3rd Edition, CSA 22.2 No. 60950 and EN 60950 and are CE marked per the Low Voltage Directive (LVD), 73/23/EEC and 93/68/EEC. [The standards do not apply with DC input operation.]

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

I/O CONNECTOR: The 24-pin I/O connector (Figure 2) is designed to mate with the corresponding connector in the Series RA 19-(X)B Rack Adapter.

- **(+) SENSE, (–) SENSE:** These lines are provided to compensate for voltage drops in the load connecting wires. The Sense lines must be connected to their respective (+) and (–) output terminals, either at the load or at the rack adapter (see Rack Adapter Manual). The connection ensures the most accurate error tracking. Error compensation in the connecting wires is up to 0.25 Volts per lead for all models.

NOTE:

The Sense lines must be connected for the HSF Power supply to work properly!

- **OUTPUT (+), OUTPUT (–):** HSF power supply d-c output.
- **CURRENT SHARE BUS (CSB):** Connecting the CSB lines of HSF power supplies operating in a parallel configuration causes output current to be shared equally. (See Rack Adapter Manual for additional information on parallel configurations.). For current sharing to work properly the outputs of all paralleled units must be within 250 mV (max) of each other and each unit must be operating at between 10% to 100% of rated output. If current to the load goes below 10% for each unit in current share mode, all MASTER ON lights may go on (see load effect specifications); this indicates that forced current share is no longer working, units are simply in current share mode. (If forced current sharing at less than 10% nominal current per supply is needed, contact Kepco application engineering.) Remote sensing is recommended. For master/slave operation to work properly each unit should be adjusted to 40 mV (optimum) less than the next paralleled unit (unit 1 is adjusted to VOUT, unit 2 to VOUT – 40mV, and unit 3 to VOUT – 80mV, etc. If the master fails, the unit 2 will become the new master). The 40 mV difference can be reduced to a minimum of 25 mV as needed to parallel many units and still keep all units within 250 mV of each other. Adjust the outputs using Vadj trimmer on front panel.
    - Optimum difference among output voltages of paralleled units: 40mV
    - Maximum difference among output voltages of paralleled units: 250 mV
    - Minimum difference among output voltages of paralleled units: 25 mV
- **ALARM:** The Alarm NC (normally closed) - Open on Failure and Alarm NO (normally open) - Close on Failure lines are relay contacts referenced to Alarm Common. If the unit fails, the path between Alarm NC - Open on Failure and Alarm Common opens, the path between Alarm NO - Close on Fail and Alarm Common is a short circuit. Figure 3 illustrates typical Close on Fail and Open on Fail circuits to give a failure indication if any one of a number of power supplies fail.
- **INPUT POWER:** Line (either a-c or d-c source power) , Neutral and Ground (chassis)

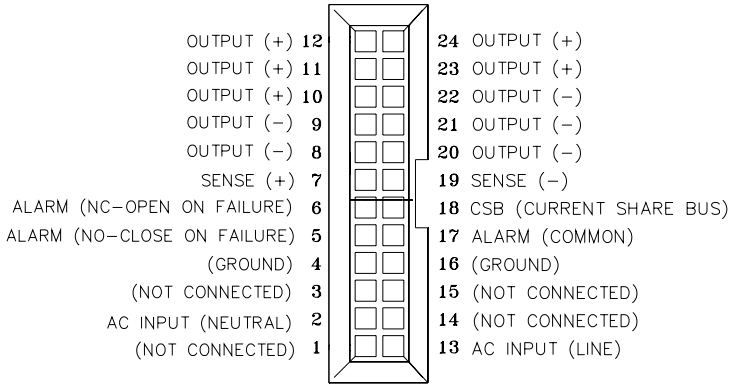


FIGURE 2. REAR CONNECTOR PIN ASSIGNMENTS

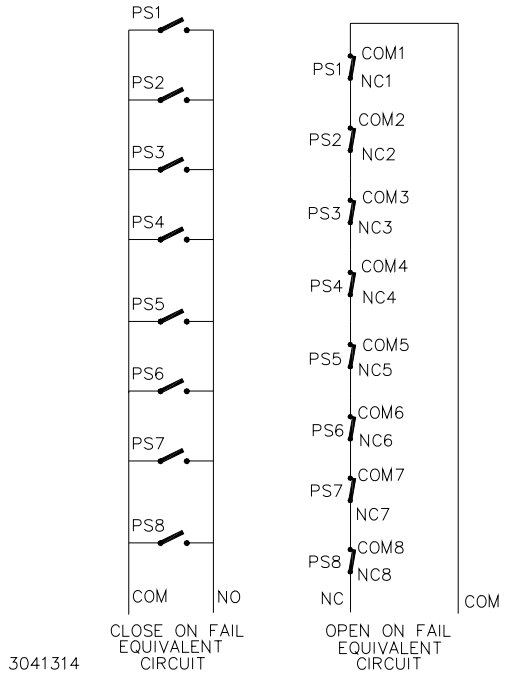


FIGURE 3. TYPICAL ALARM CIRCUIT DIAGRAMS

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

EMI: Designed to meet FCC Class B (100-120V a-c) and VDE 0871 Class B (220-240V a-c).

VIBRATION: (non-operating, one hour on each one of the three axes):
5-10 Hz, 10 mm amplitude.
10-55 Hz, 2g acceleration.

SHOCK: (non-operating, one-half sinusoidal pulse, three shocks to each axis):
Acceleration: 20g
Duration: 11ms ±5ms

OPERATING TEMPERATURE: See Figure 4.

STORAGE TEMPERATURE: -40°C to +75°C.

OPERATING AND STORAGE RELATIVE HUMIDITY: up to 95% (wet bulb temp. <35°C non-condensing).

FUSE: Quick acting 3.0A, 250V; (5.2 x 20mm), San-O P/N MT4 3A; Kepco P/N 541-0110.

DIMENSIONS: See Figure 5.

WARRANTY: 5 years.

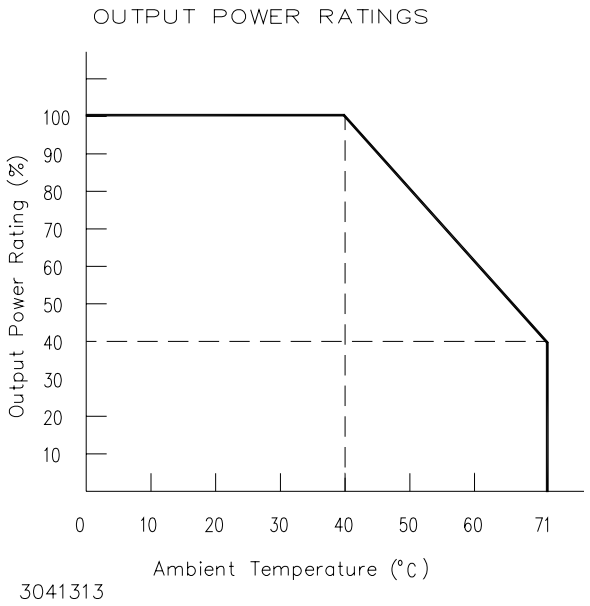


FIGURE 4. % OUTPUT POWER RATING VS. AMBIENT TEMPERATURE

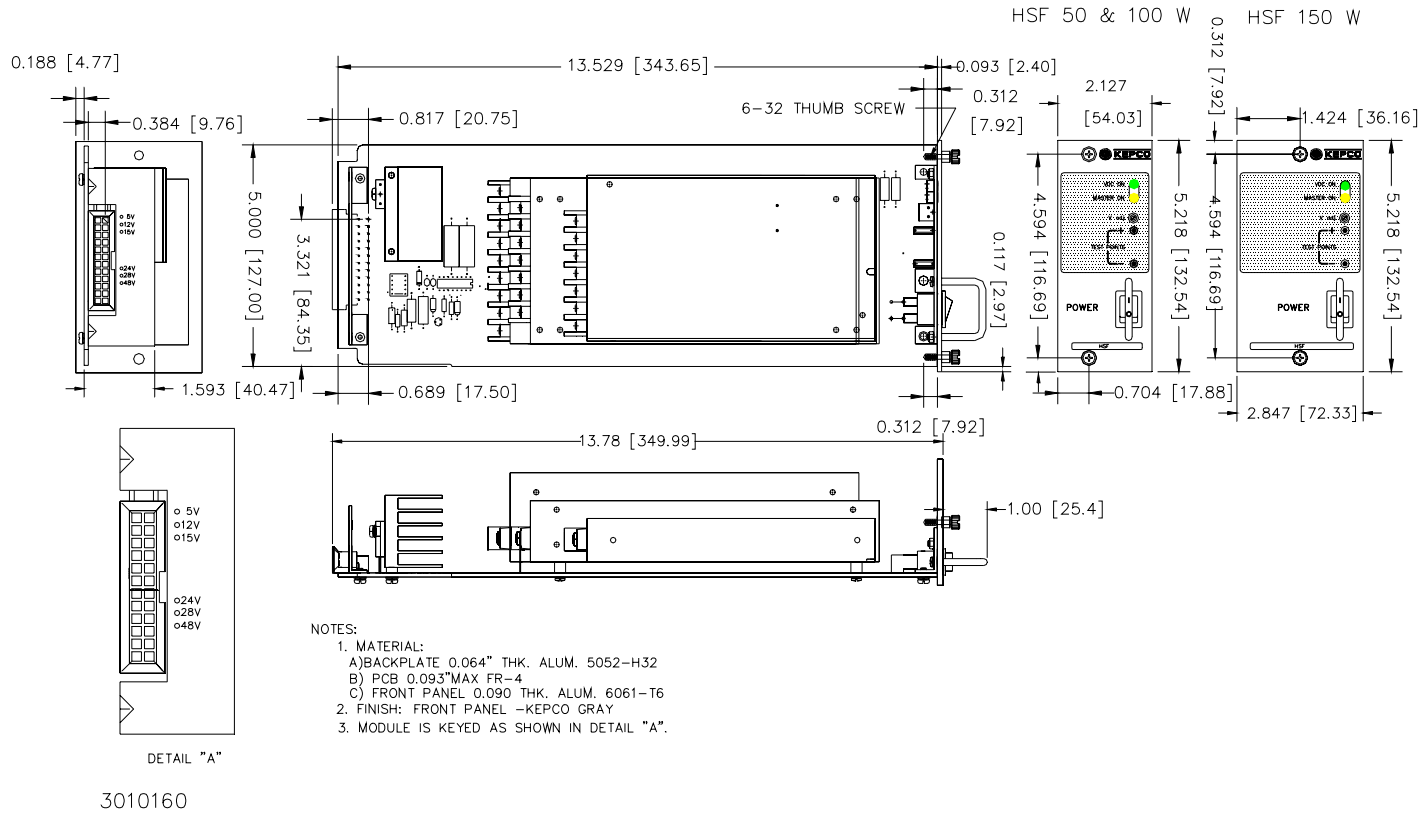


FIGURE 5. HSF POWER SUPPLY OUTLINE DRAWING

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP