ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Adlink PCI-6216V* at our website: ***Click HERE***

PCI/cPCI-6208/6216-GL Series

Multi-channel Analog Output Cards

User's Manual

Manual Revision: 4.02

Revision Date: May 28, 2008

Part Number: 50-11234-2010

Recycled Paper

Advance Technologies; Automate the World.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Revision History

Revision	Release Date	Description of Change(s)
1.00	N/A	Document created (Legacy documentation revised/converted to new system)
3.22	2003/05/07	Document created (legacy documentation revised/converted to new system) Specification Revision Initial Release
4.00	2007/12/27	Major revision of document flow and placement of content. Renaming of PCI-6208V & PCI-6216V to PCI-6208V-GL & PCI-6216V-GL respectively Re-release
4.01	2008/4/8	Updated for CompactPCI versions
4.02	2008/5/28	Updated board diagrams

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Preface

Copyright 2008 ADLINK TECHNOLOGY INC.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Disclaimer

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

Trademarks

Borland® C/C++ and Delphi® are registered trademarks of the Borland Software Corporation. Intel® is a registered trademark of Intel Corporation. LabVIEW™ is a trademark of National Instruments Corporation. Linux® and the Linux® Logo are registered trademarks of Linus Torvalds. MATLAB® and the MATLAB Logo are registered trademarks of The MathWorks, Inc. Microsoft®, MS-DOS®, Windows® 95, Windows® 98, Windows NT®, Windows® 2000, Windows® 2003 Server®, Windows® XP, Windows Vista®, ActiveX®, Visual Studio®, Visual Basic®, Visual C#®, and Visual C++® are registered trademarks of Microsoft Corporation. PCI™, CompactPCI®, and PCI Express®, are registered trademarks of the Peripheral Component Interconnect Special Interest Group (PCI-SIG). PXI™ is a trademark of the PXI systems Alliance. VEE™ is a trademark of Agilent.

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Using this Manual

Audience and Scope

The PCI-6208/6216-GL Series User's Manual is intended for hardware technicians and systems operators with knowledge of installing, configuring and operating PCI analog output cards.

Manual Organization

This manual is organized as follows:

Preface: presents important copyright notifications, disclaimers, trademarks, and associated information on the proper understanding and usage of this document and its associated product(s).

Chapter 1, Introduction: gives an overview of PCI-6208/6216-GL Series features, applications, specifications and supporting software environments for use with the product. The layout of the PCI-6208/6216-GL Series as well as its connectors and termination boards are presented.

Chapter 2, Getting Started: describes how to install and configure the PCI-6208/6216-GL Series.

Chapter 3, Supporting Software & Libraries: presents DOS and Windows 95 software libraries for programming PCI-6208/6216-GL Series cards. This information is especially useful for programmers using high-level programming languages.

Chapter 4, Hardware Registers: provides detailed descriptions of the PCI-6208/6216-GL Series registers, I/O address map and Voltage Output conversion information. This information is especially useful for programmers who want to control the hardware with low-level programming.

Chapter 5, Utilities & Calibration: describes how to run the PCI-6208/6216-GL Series utility program included in the software CD. Also describes how to calibrate PCI-6208/6216-GL Series cards for accurate measurements and operations.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Important Safety Instructions: Presents safety instructions all users must follow for the proper setup, installation and usage of equipment and/or software.

Warranty Information: Presents important warranty information for users/manufacturers rights and responsibilities regarding ADLINK products and services.

Conventions

Take note of the following conventions used throughout this manual to make sure that users perform certain tasks and instructions properly.



Additional information, aids, and tips that help users perform tasks.



Information to prevent ***minor*** physical injury, component damage, data loss, and/or program corruption when trying to complete a task.



Information to prevent ***serious*** physical injury, component damage, data loss, and/or program corruption when trying to complete a specific task.

Acronyms & Terminology

The following terms are used throughout this document. This list is prepared in alphabetical order for clarity.

µsec./µs - microsecond

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

A/mA - (Ampere/amp/milliampere) a unit of electric current, or amount of electric charge per second

ADE - Application Development Environment

API - Application Programming Interface

ATE - Automatic Test Equipment

BIOS - Basic Input/Output System

bit - Binary digit, the basic unit of information storage in computing

CD/CD-ROM - Compact Disk/Compact Disk Read Only Memory

ch/CH/Chn - Channel

DA - Digital-to-Analog Conversion

DAQ - Data Acquisition

DC - Continuous Current

DI - Digital Input

DLL (.dll) - Dynamic-link libraries, a library subroutine file type and common filename extension in Microsoft Windows.

DMA - Direct Memory Access

DMM - digital-multi-meters, an electronic measuring instrument that combines several functions in one unit

DO - Digital Output

driver - A software component used to interact with hardware devices

EXE (.exe) - A filename extension for executable files/programs

FAE - Field Application Engineer

HMI - Human-Machine Interface

I/**O** (IO) - Input / Output

IC - integrated circuit, a miniaturized electronic circuit

IRQ/**SERIRQ** - Interrupt Request / Serial Interrupt Request

LabVIEW™ - Laboratory Virtual Instrumentation Engineering Workbench, a visual programming language for platforms and development environments

LCR - Local Configuration Registers

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LSB - Least Significant Byte

MATLAB® - Matrix Laboratory, a numerical computing environment and programming language

MHz - Megahertz (one million hertz)

mm - millimeter

OEM - Original Equipment Manufacturer

OS - Operating System

PCI - Peripheral Component Interconnect

PCI Express (PCIe or PCI-E) - An I/O interconnect bus standard that expands on and doubles the data transfer rates of original PCI

PCR - PCI Configuration Registers

PnP - Plug and Play

PXI - PCI eXtensions for Instrumentation, a modular instrumentation platforms

SCADA - Supervisory Control And Data Acquisition

TTL - Transistor-Transistor Logic, digital circuits built from bipolar junction transistors and resistors.

V - Volt, a derived unit of electrical potential difference

VDC - Volts of Continuous Current

VEE™ - Visual Engineering Environment, a visual and dataflow programming language and development environment

X86 - A generic term that refers to the CISC (complex instruction set computer) architecture, the most commercially successful central processing unit (CPU) architecture in modern computing.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Reference Documentation

The following list of documents may be used as reference materials to support installation, configuration and/or the operation of ADLINK PCI-6208/6216-GL Series Multi-channel Analog Output Cards. This list is prepared in alphabetical order (by vendor name, then by document title) for clarity.

Vendor(s)	Title	Rev.
ADLINK Technology, Inc.	ADLINK DAQ Software Installation User's Manual	2.00
ADLINK Technology, Inc.	DAQBench ActiveX Controls for Measurement and SCADA/HMI Vista support	2.43
ADLINK Technology, Inc.	DAQBench Simplified Chinese: ActiveX® Controls for Measurement and SCADA/HMI	2.42
ADLINK Technology, Inc.	DAQBench Traditional Chinese: ActiveX® Controls for Measurement and SCADA/HMI	2.42
ADLINK Technology, Inc.	DAQ-LVIEW PnP: LabVIEW™ Interface for all ADLINK PCI™/PCI Express®/cPCI Series Data Acquisition Cards	1.29
ADLINK Technology, Inc.	DAQ-MTLB: MATLAB® Data Acquisition Toolbox Adapter for ADLINK DAQ Cards	1.10
ADLINK Technology, Inc.	PCI-OCX: ActiveX® Controls for ADLINK PCI™/PCI Express®/cPCI Series Data Acquisition Cards	4.22
ADLINK Technology, Inc.	PCIS-DASK: Data Acquisition Software Development Kit for NuDAQ PCI™ bus cards	2.00
ADLINK Technology, Inc.	PCIS-VEE: VEE™ Interface for ADLINK PCI™/cPCI Series Data Acquisition Cards	3.21
PCI-SIG	Conventional PCI	3.0

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Getting Service

Contact us should you require any service or assistance.

ADLINK TECHNOLOGY INC. (HEADQUARTERS)

Web Site:	http://www.adlinktech.com
Sales & Service:	service@adlinktech.com
Telephone No.:	+886-2-8226-5877
Fax No.:	+886-2-8226-5717
Mailing Address:	9F No. 166 Jian Yi Road, Chungho City, Taipei 235, Taiwan

ADLINK TECHNOLOGY AMERICA INC.

Sales & Service:	info@adlinktech.com
Toll-Free:	+1-866-4 ADLINK
Fax No.:	+1-949-727-2099
Mailing Address:	8900 Research Drive, Irvine, CA 92618, USA

ADLINK TECHNOLOGY CO. LTD. (BEIJING)

Sales & Service:	market@adlinktech.com
Telephone No.:	+86-10-5885-8666
Fax No.:	+86-10-5885-8625
Mailing Address:	Rm. 801, Power Creative E, No. 1, B/D Shang Di East Rd. Beijing, 100085 China

ADLINK TECHNOLOGY CO. LTD. (SHANGHAI)

Sales & Service:	market@adlinktech.com
Telephone No.:	+86-21-6495-5210
Fax No.:	+86-21-5450-0414
Mailing Address:	4F, Bldg. 39, No.333 Qinjiang Road, Cao He Jing High-Tech Park Shanghai, 200233 China

ADLINK TECHNOLOGY CO. LTD. (SHENZHEN)

Sales & Service:	market@adlinktech.com
Telephone No.:	+86-755-2643-4858
Fax No.:	+86-755-2664-6353
Mailing Address:	2F, C Block, Bld. A1, Cyber-Tech Zone, Gao Xin Ave. Sec. 7, High-Tech Industrial Park S., Shenzhen, 518054 China

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ADLINK TECHNOLOGY INC. (EUROPEAN Liaison Office)

Sales & Service:	emea@adlinktech.com
Telephone No.:	+49-211-495-5552
Fax No.:	+49-211-495-5557
Mailing Address:	Nord Carree 3, 40477 Düsseldorf, Germany

ADLINK TECHNOLOGY JAPAN CORP.

Sales & Service	japan@adlinktech.com
Telephone No.	+81-3-4455-3722
Fax No.	+81-3-5333-6040
Mailing Address	Asahiseimei Hatagaya Bld. 8Fl. 1-1-2 Hatagaya Shibuya-ku, Tokyo, Japan

ADLINK TECHNOLOGY INC. (SOUTH KOREA Liaison Office)

Sales & Service:	korea@adlinktech.com
Telephone No.:	+82-2-2057-0565
Fax No.:	+82-2-2057-0563
Mailing Address:	#402, Dongsung B/D, 60-12, Nonhyeon-dong Gangnam-gu, Seoul, 135-010, South Korea

ADLINK TECHNOLOGY SINGAPORE PTE. LTD.

Sales & Service:	singapore@adlinktech.com
Telephone No.:	+65-6844-2261
Fax No.:	+65-6844-2263
Mailing Address:	84 Genting Lane #07-02A, Cityneon Design Center, Singapore 349584

ADLINK TECHNOLOGY SINGAPORE PTE. LTD. (INDIA Liaison Office)

Sales & Service:	india@adlinktech.com
Telephone No.:	+91-80-6560-5817
Fax No.:	+91-80-2244-3548
Mailing Address:	No. 1357, Ground Floor, "Anupama", Aurobindo Marg JP Nagar (Ph-1) Bangalor, Karnataka 560078, India

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table of Contents

Table of Contents ..... **xi**

List of Figures ..... **xiii**

List of Tables ..... **xv**

1 Introduction **1**
1.1 Overview 1
1.2 Features 1
1.3 Applications 2
1.4 Specifications 3
1.5 PCI-6208/6216-GL Series Card Layout 5
1.6 PCI-6208/6216-GL Series Pin Assignments 7
1.7 Termination Boards and Cables 8

2 Getting Started **9**
2.1 Installation Environment 9
2.2 Package Contents 10
2.3 Installation 11
Installing Software 11
Installing Hardware 12
2.4 PCI Device Configuration 13

3 Supporting Software **15**
3.1 Supporting Software 15
3.1.1 Windows OS Support & Drivers 16
DAQPilot 16
DAQMaster 17
3.1.2 PCIS-DASK (Legacy Drivers & Support) 18
3.1.3 Linux OS Support & Drivers 19
3.1.4 Third-party Software Support 20

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

MATLAB® Data Acquisition Toolbox Adapter 20
LabVIEW™ Data Acquisition VI Set 21
VEE™ Interface for ADLINK DAQ Cards 22
ActiveX Controls for ADLINK DAQ Cards 23

4 Hardware Registers 25
4.1 PCI PnP Registers 25
4.2 Analog Output Control Register 26
4.3 Analog Output Status Register 27
4.4 Digital Output Register 27
4.5 Digital Input Register 28
4.6 Voltage Output DA Conversion 29

5 Utilities & Calibration 31
5.1 Running the Utility 32
5.1.1 Function Testing 33
5.1.2 Calibration 34

Important Safety Instructions 35

Warranty Policy 37

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

List of Figures

Figure 1-1: PCI-6208V-GL/6216V-GL Rev. C2 Layout 5
Figure 1-2: cPCI-6208V-GL and cPCI-6216V-GL Layou 5
Figure 1-3: cPCI-6208V/R-GL and cPCI-6216V/R-GL Layout 6
Figure 1-4: PCI-6208V-GL, cPCI-6208V-GL and cPCI-6208V/R-GL CN1 Connector Pin Assignments7
Figure 1-5: PCI-6216V-GL, cPCI-6216V-GL and cPCI-6216V/R-GL CN1 Connector Pin Assignments7
Figure 3-1: ADLINK Software Support Overview 15
Figure 3-2: DAQPilot Main Screen 16
Figure 3-3: DAQMaster Device Manager Screen Shot 17
Figure 3-4: PCIS-DASK Legacy Software Support Overview 18
Figure 3-5: LabVIEW™ Screen Shot 21
Figure 3-6: VEE™ Screen Shot 22
Figure 3-7: ActiveX Screen Shot 23
Figure 5-1: PCI-6208/6216-GL Utility Main Menu 32
Figure 5-2: PCI-6208/6216-GL Function Test Menu 33
Figure 5-3: PCI-6208/6216-GL Function Test Screen Shot 33

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

This page intentionally left blank.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

List of Tables

Table 4-1: PCI-6208/6216-GL Series I/O Address Map 26
Table 4-2: Analog Output Status Register 27
Table 4-3: Digital Output Register..... 27
Table 4-4: Digital Input Register 28
Table 4-5: Voltage DA Conversion Table 29

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

This page intentionally left blank.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1 Introduction

1.1 Overview

ADLINK PCI-6208/6216-GL Series are 8-ch or 16-ch, 16-bit analog output cards. They each offer ±10 V output ranges and 25 V/µs slew rates. Each channel is equipped with a dedicated digital to analog converter, and the output value of each channel can be updated individually. These devices provide high resolution, high density analog output functionalities and are suitable for automation test equipment, signal generation, industrial process control, servo control, and several other industrial control applications.

The specific models described in this manual are the PCI-6208V-GL and PCI-6216V-GL which are direct replacements of the previously released PCI-6208V and PCI-6216V cards (register map, hardware, and software are all fully compatible). Likewise, the cPCI-6208V-GL, cPCI-6216V-GL, cPCI-6208V/R-GL and cPCI-6216V/R-GL are also direct replacements of the previously released cPCI-6208V, cPCI-6216V, cPCI-6208V/R and cPCI-6216V/R cards, respectively.

1.2 Features

- PCI-6208V-GL and PCI-6216V-GL are fully compatible with PCI-6208V and PCI-6216V, respectively.
- cPCI-6208V-GL, cPCI-6216V-GL, cPCI-6208V/R-GL and cPCI-6216V/R-GL are fully compatible with cPCI-6208V, cPCI-6216V, cPCI-6208VR and cPCI-6216VR, respectively.
- Supports a 32-bit 3.3 V or 5 V PCI bus, Plug and Play
- 16-bit high resolution voltage outputs
- Output Range: ±10V (15-bit resolution guarantee)
- Differential Linearity Error: ±1.5 LSB typical
- 4-CH TTL digital inputs and 4-CH TTL digital outputs

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.3 Applications

- Industrial Process Control
- Servo control
- Reference voltage generator

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.4 Specifications

- **Voltage Output:**
  - Channels:
    - 8 channels for PCI-6208V-GL, cPCI-6208V-GL, cPCI-6208V/R-GL
    - 16 channels for PCI-6216V-GL, cPCI-6216V-GL, cPCI-6216V/R-GL
  - Resolution: 16-bit (15-bit guaranteed)
  - Voltage output range: ±10 V
  - Voltage output driving capability: ±5 mA max.
  - Settling time: 130 µs (-10 V to +10 V)
  - Slew rate: 25 V/µs
  - Gain error: 0.0025% Full Scale Range (at 25°C)
  - Offset error: 0.0005% Full Scale Range (at 25°C)
  - Differential Nonlinearity Error: ±1.5 LSB typical
  - Integral Nonlinearity Error: ±2.5 LSB
  - Output initial status: 0 V (after RESET or POWER-ON)
  - Data Transfer: Programmed I/O
- **Digital I/O**
  - Channel: Four TTL compatible inputs and outputs
  - Input Voltage:
    - Low: Min. 0 V, Max. +0.8 V
    - High: Min. +2.0 V, Max. +5.5 V
  - Input Load:
    - Low: +0.8 V at -0.2 mA max.
    - High: +2.7 V at +20 mA max.
  - Output Voltage:
    - Low: Min. 0 V, Max. +0.4 V
    - High: Min. +2.4 V, Max. +5.5 V
  - Driving Capacity:
    - Low: Max. +0.5 V at +8.0 mA (Sink)
    - High: Min. +2.7 V at +0.4 mA (Source)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- **General Specifications:**
  - Operating temperature: 0°C to +50°C
  - Storage temperature: -20°C to +80°C
  - Humidity: 5% to 95% non-condensing
  - Connector: 37-pin D-sub connector (female)
  - Bus interface: 32-bit slave PCI bus
- **Power Consumption:**
  - PCI-6208V-GL:
    - +5 VDC at 580 mA typical
    - +12 VDC at 70 mA typical
  - PCI-6216V-GL:
    - +5 VDC at 1 A typical
    - +12 VDC at 280 mA typical
  - cPCI-6208V-GL:
    - +5 VDC at 480 mA typical
    - +12 VDC at 170 mA typical
  - cPCI-6216V-GL:
    - +5 VDC at 970 mA typical
    - +12 VDC at 280 mA typical
  - cPCI-6208V/R-GL
    - +5 VDC at 480 mA typical
    - +12 VDC at 170 mA typical

  cPCI-6216V/R-GL
    - +5 VDC at 980 mA typical
    - +12 VDC at 290 mA typical
- **PCB Dimensions:**
  - PCI Half-sized:
    - 175 mm x 105 mm
  - CompactPCI 3U Eurocard:
    - 160 mm x 100 mm

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.5 PCI-6208/6216-GL Series Card Layout

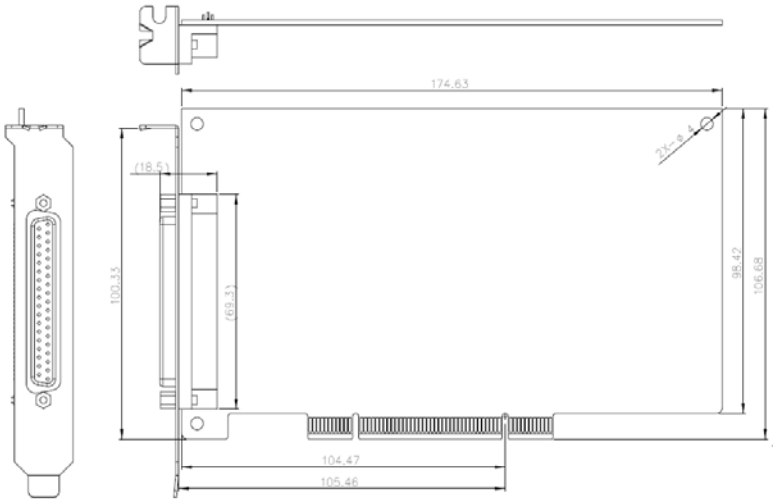


Figure 1-1: PCI-6208V-GL/6216V-GL Rev. C2 Layout

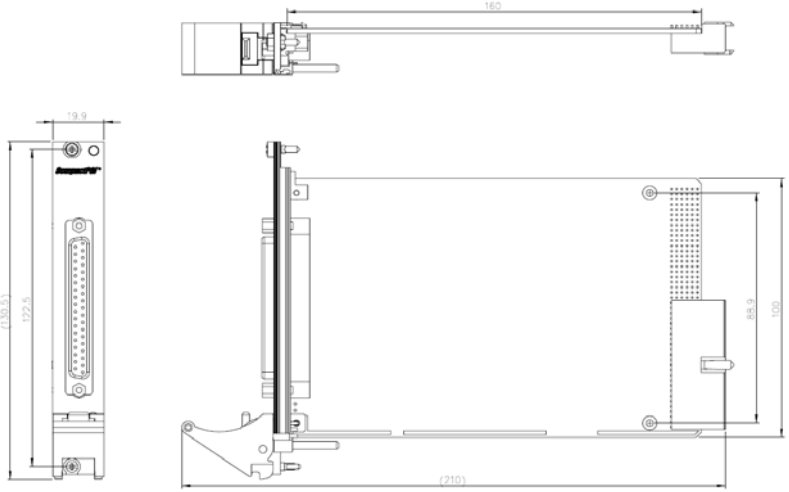


Figure 1-2: cPCI-6208V-GL and cPCI-6216V-GL Layou

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

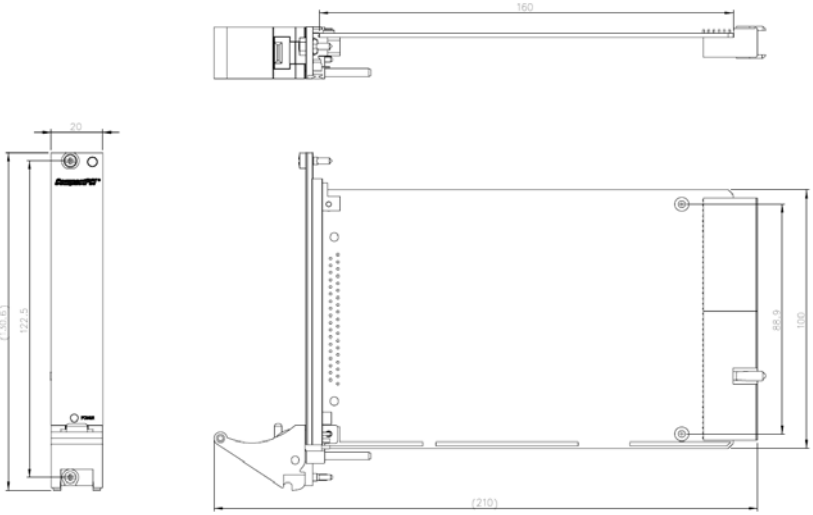


Figure 1-3: cPCI-6208V/R-GL and cPCI-6216V/R-GL Layout

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

1.6 PCI-6208/6216-GL Series Pin Assignments

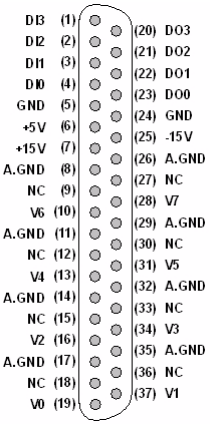


Figure 1-4: PCI-6208V-GL, cPCI-6208V-GL and cPCI-6208V/R-GL CN1 Connector Pin Assignments

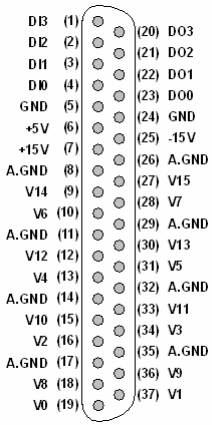


Figure 1-5: PCI-6216V-GL, cPCI-6216V-GL and cPCI-6216V/R-GL CN1 Connector Pin Assignments

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

The analog output pin are specified as Vn and A.GND, where:

Vn: The voltage output of channel number n.

- For PCI-6208V-GL, cPCI-6208V-GL and cPCI-6208V/R-GL, n = 0 to 7
- For PCI-6216V-GL, cPCI-6216V-GL and cPCI-6216V/R-GL, n = 0 to 15

A.GND: The ground pin of analog output. All ground pins are tied together.

The digital input and output pin names are specified as **DIn** and **DOn** respectively, where n = 0 to 3.

1.7 Termination Boards and Cables

PCI-6208/6216-GL Series cards are equipped with a 37-pin D-sub connector and compatible with the following termination boards..

- **DIN-37D-01:** A general purposed 37-pin screw terminal with a DIN-socket (cables are not included).
- **ACLD-9137-01**: General-Purpose termination board with a 37-pin D-sub male connector.
- **ACLD-9138-01**: General-Purpose termination board with a 37-pin D-sub connector.
- **ACL-10137:** 37-pin D-Sub male-male cable.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2 Getting Started

This chapter describes how to install and setup PCI-6208/6216-GL Series cards.



For illustration/reference purposes, we will specifically describe the **PCI-6208V-GL** card in all instances from this point forward unless otherwise noted.

2.1 Installation Environment

Whenever unpacking and preparing to install any equipment described in this manual, please refer to the ***Important Safety Instructions*** chapter of this manual.

Only install equipment in well lit areas on flat, sturdy surfaces with access to basic tools such as flat and cross head screwdrivers.

ADLINK PCI-6208/6216-GL Series cards are electro-static sensitive components that can be easily damaged by static electricity. The card must be handled on a grounded anti-static mat. The operator must wear an anti-static wristband, grounded at the same point as the anti-static mat.

Inspect the carton and packaging for damage. Shipping and handling could cause damage to the equipment inside. Make sure that the card has no damage before installing.



The cards must be protected from static discharge and physical shock. Never remove any of the socketed parts except at a static-free workstation. Use the anti-static bag shipped with the product to handle the card and wear a grounded wrist strap when servicing.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.2 Package Contents

Before continuing, check the package contents for any damage. If the contents are damaged, inform your dealer immediately. Retain the shipping carton and packing materials for inspection. Obtain authorization from your dealer before returning any product to ADLINK.

Check if the following items are included in the packaging.

- PCI-6208V-GL, PCI-6216V-GL, cPCI-6208V-GL, cPCI-6216V-GL, cPCI-6216V/R-GL, or cPCI-6216V/R-GL card.
- ADLINK All-in-One CD
- User's Manual
- cPCI-R6216DB rear I/O backplane (only available with cPCI-6208V/R-GL and cPCI-6216V/R-GL)



DO NOT install or apply power to equipment that is damaged or if there is missing/incomplete equipment. Please contact your ADLINK dealer/vendor immediately for assistance.



The packaging of OEM versions with non-standard configurations, functionality, or package contents may vary according to different configuration requests.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.3 Installation

After opening the packaging, remove the card and place it on a grounded anti-static surface with component side up. Locate the ADLINK All-in-one CD also packaged in the carton and have this user's manual and any associated documentation ready for reference.

Installing Software

- Insert the ADLINK All-in-one CD in your target system and follow the graphical user interface.
- Install Drivers depending on your system/card requirements:
  - Choose either DAQPilot: ADLINK's Next-Generation Driver accessible at (www.adlinktech.com/TM/DAQPilot.html), or;
  - Legacy Drivers for older operating systems or proprietary software systems (included on the ADLINK All-in-one CD).
- Install the system manager, DAQManager, included on the All-in-one CD and accessible using the graphical user interface.
- Locate your PCI-6208/6216-GL Series card and continue device installation.


NOTE:

Also see Chapter 3 for Supporting Software details.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Installing Hardware

- Locate your PCI-6208/6216-GL Series card.
- Turn off the system/chassis and disconnect the power cord and plug from its power source.
- Remove the system/chassis cover.
- Select the PCI slot that you intend to use, then remove the bracket (usually fixed with a retention screw) at the end of the PCI slot, if any.
- Align the card connectors (golden fingers) with the slot, then press the card firmly until the card is completely seated in the slot.
- Secure the card to the chassis with the bracket retention screw.
- Replace the system/chassis cover.
- Connect the power cord to a power source, then reboot the system/chassis.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

2.4 PCI Device Configuration

Overview

As plug and play component, a PCI card automatically requests an interrupt number through its PCI controller. The system BIOS responds with an interrupt assignment based on the card information and any known system parameters. These system parameters are determined by the installed drivers and the hardware load detected by the system.

Configuration

Board configuration is done on a board-by-board basis for all PCI boards on your system. Because configuration is controlled by the system and the software, there are no jumper settings required for base addresses, DMAs, and/or interrupt IRQs.

Configuration is subject to change with every boot of the system as new boards are added or removed.

Troubleshooting

If your system fails to boot or if you experience erratic operation with your PCI board installed, this is likely caused by an interrupt conflict (i.e. the BIOS Setup is incorrectly configured). Refer to the BIOS documentation that came with the system for details.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

This page intentionally left blank.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3 Supporting Software

3.1 Supporting Software

ADLINK Technology Inc., a leading provider of high-performance, high-quality data acquisition cards and platforms, delivers robust software support for its comprehensive line of DAQ cards with varying form factors including PCI Express, PCI, CompactPCI, and PXI. ADLINK offers support not only for mainstream Windows and Linux OS, but also for third-party applications including Lab-VIEW™ and MATLAB®. In addition, ADLINK also provides ActiveX component ware for measurement, SCADA/HMI, and breakthrough proprietary software applications.

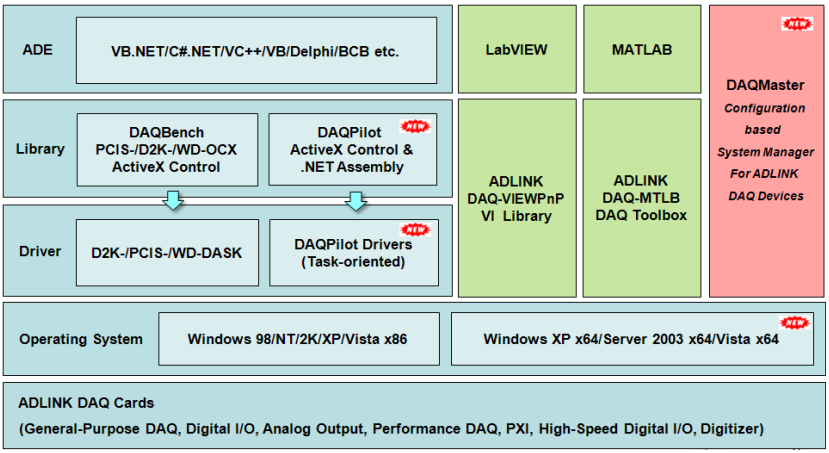


Figure 3-1: ADLINK Software Support Overview

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.1.1 Windows OS Support & Drivers

DAQPilot

DAQPilot is a driver and SDK with a graphics-driven interface for various ADEs. DAQPilot comes as ADLINK's commitment to provide full support to its comprehensive line of data acquisition products. DAQPilot is designed for the novice, to the most experienced programmer.

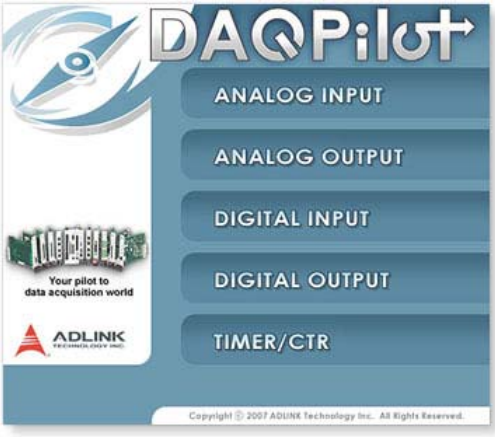


Figure 3-2: DAQPilot Main Screen

The ADLINK Task-oriented DAQ Driver/SDK and Wizard for Windows, DAQPilot helps users:

- Save development time
- Shorten the learning curve

Users may download and install DAQPilot via its product page:

`http://www.adlinktech.com/TM/DAQPilot.html`

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

DAQMaster

The ADLINK DAQMaster is a smart device manager that opens up access to ADLINK data acquisition and test and measurement products. DAQMaster delivers an all-in-one interface which allows users to access a full support matrix to configure ADLINK Test and Measurement products.

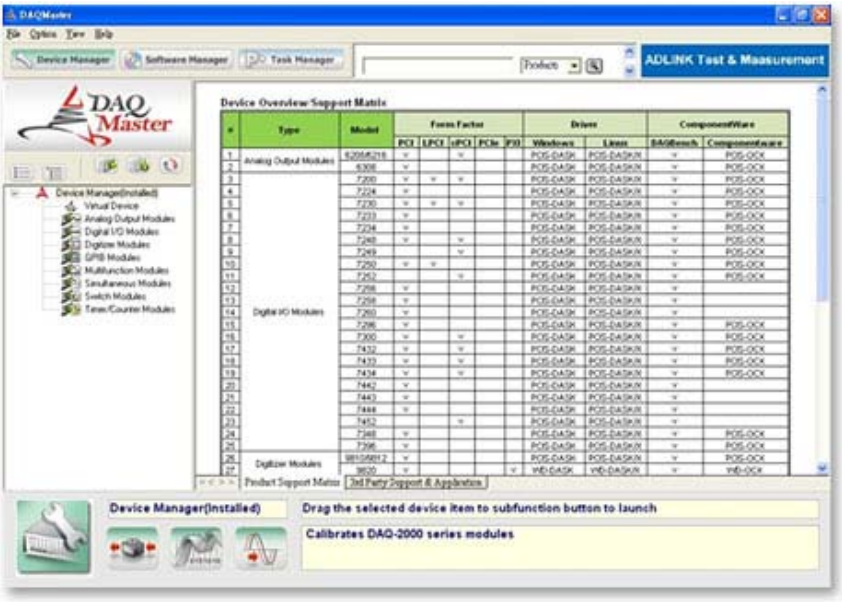


Figure 3-3: DAQMaster Device Manager Screen Shot

The ADLINK Configuration-Based Device Manager for ADLINK DAQ Cards, DAQMaster, enables users to:

- Manage ADLINK devices and interfaces
- Manage ADLINK installed software
- Manage ADLINK DAQPilot tasks

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.1.2 PCIS-DASK (Legacy Drivers & Support)

ADLINK's DASK are advanced 32-bit kernel drivers for customized DAQ application development. DASK enables users to perform detailed operations and achieve superior performance and reliability from their data acquisition system. DASK kernel drivers now support the revolutionary Windows Vista OS.

NOTE:

ADLINK strongly recommends all users install DAQPilot and not use legacy DASK drivers. For users currently using legacy ADLINK DASK Drivers or whom do not have internet access, we offer an all-in-on CD. Contact your ADLINK vendor for details

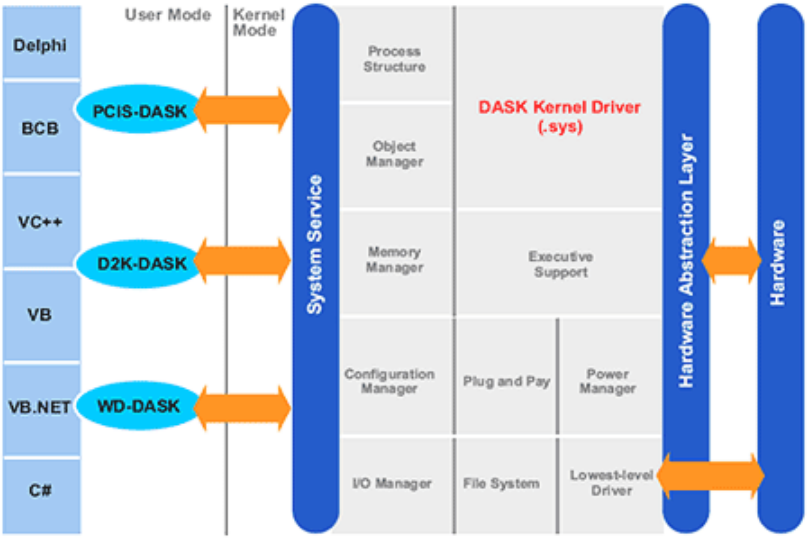


Figure 3-4: PCIS-DASK Legacy Software Support Overview

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PCIS-DASK readies legacy users for Windows Vista and Other Windows 64-bit Editions:

- Supports Windows Vista 32 or 64-bit Editions
- Supports AMD64 and Intel x86-64 architectures
- Digitally-signed for Windows Vista 64-bit Edition
- Utilizes WOW64 subsystem to ensure that 32-bit applications run normally on 64-bit Editions of Windows XP, Windows 2003 Server, and Windows Vista without modification

For more information about Windows Vista Support, please visit:

`http://www.adlinktech.com/TM/VistaSupport.html`

or

View the file on the ADLINK All-in-one CD

`//Manual/Software Package/PCIS-DASK/PSDASK User's Guide.pdf`

3.1.3 Linux OS Support & Drivers

ADLINK's DASK/X drivers are intended for developing customized data acquisition applications under Linux environments. The DASK/X drivers provide common APIs for ADLINK's extensive family of PCI, CompactPCI, and PXI plug-in data acquisition cards, and utilize the full capabilities of these cards under the Linux environment.



For more information about Linux drivers, please visit:


`http://www.adlinktech.com/TM/linux_daq.html`

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.1.4 Third-party Software Support

MATLAB® Data Acquisition Toolbox Adapter

The ADLINK DAQ-MTLB for MATLAB® integrates ADLINK components with the MATLAB® Data Acquisition Toolbox and enables users to control a wide range of ADLINK DAQ cards directly within the advanced MATLAB® environment.

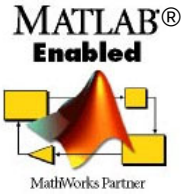

- Directly control scores of ADLINK DAQ cards including PCI Express, PCI, cPCI, and PXI Compliant form factors with MATLAB® DAQ Toolbox 2.2 or higher (now R2007a)
- Critical updates and support are available as ADLINK is now a MathWorks Connections Program partner
- ADLINK offers the only MATLAB® adapter for high-speed digitizers on the market with up to 65 MHz sampling rate and 14-bit resolution

For more information, please visit:

```
http://www.adlinktech.com/TM/DAQ-MTLB.html
```

or

View the file on the ADLINK All-in-one CD

```
//Manual/Software Package/DAQ-MTLB/DAQ-MTLB
      Manual.pdf
```


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LabVIEW™ Data Acquisition VI Set

The DAQ-LVIEW PnP is a set of LabVIEW™ Virtual Instruments (VIs) that is fully-compatible with National Instrument's DAQ VIs. Based on the virtual instruments concept, DAQ-LVIEW PnP provides four additional tool panels in LabVIEW™, including analog input, analog output, digital I/O, and timer/counter.

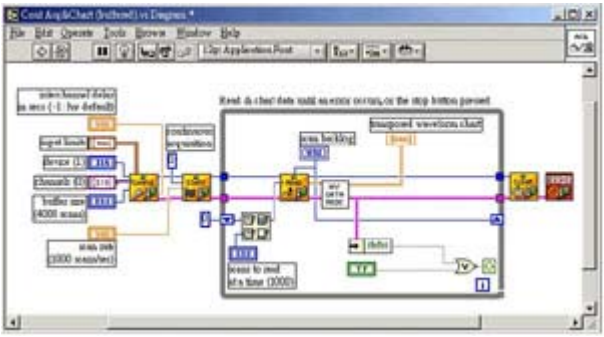


Figure 3-5: LabVIEW™ Screen Shot

The DAQ-LVIEW PnP is designed and verified for LabVIEW™ 7.0, and is compatible with LabVIEW™ 6.5, 7.1, 8.0, 8.2, and 8.5.

For more information, please visit:

`http://www.adlinktech.com/TM/labview-pnp.html`

or

View the file on the ADLINK All-in-one CD

`//Manual/Software Package/DAQ-LVIEW PnP/DAQ-LVIEW PnP User's Guide.pdf`

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

VEE™ Interface for ADLINK DAQ Cards

Agilent VEE™ is a popular visual programming environment for data acquisition that includes data analysis and control. VEE™ provides a visual programming interface that allows users to create programs by connecting objects such as acquisition routines, buttons and displays in a flow diagram. The ADLINK PCIS-VEE drivers are designed and verified for the Agilent VEE™ 4.5 environment. For users that are familiar with Agilent VEE™, ADLINK has released the PCIS-VEE and D2K-VEE for seamless integration of the ADLINK DAQ cards to the VEE™ environment.

More information can also be viewed on the ADLINK All-in-one CD

```
//Manual/Software Package/PCIS-VEE/PSVEE User's
    Guide.pdf
```

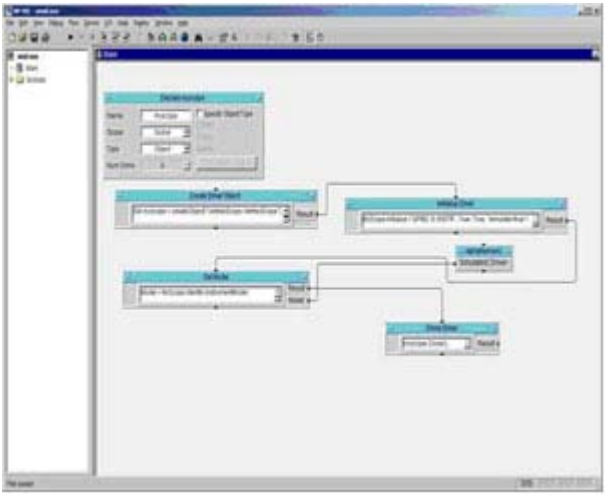


Figure 3-6: VEE™ Screen Shot

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

ActiveX Controls for ADLINK DAQ Cards

ADLINK provides comprehensive ActiveX controls for DAQ devices. These ActiveX controls are designed to hide all hardware manipulation details so data acquisition operations can be achieved with only a few lines of codes. Furthermore, hardware configurations may be set with easy-to-use property pages while acquired data is returned in an event-driven manner.

More information can also be viewed on the ADLINK All-in-one CD

```
//Manual/Software Package/PCIS-OCX/PS-OCX
     Programmer's Guide.pdf
```

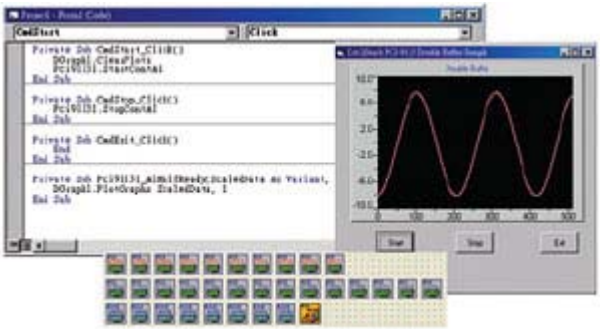


Figure 3-7: ActiveX Screen Shot

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

This page intentionally left blank.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4 Hardware Registers

This chapter presents a detailed description of PCI-6208/6216-GL registers. This information is quite useful for the programmers who wish to handle the card using low-level programming. However, we suggest users have extended knowledge and experience using the PCI interface when performing machine level programming. In addition, the contents of this chapter assist users to understand how to manipulate PCI card drivers.

4.1 PCI PnP Registers

PCI cards function as 32-bit PCI target devices to any master on the PCI bus. There are three types of registers: PCI Configuration Registers (PCR), Local Configuration Registers (LCR) and PCI-6208/6216-GL registers.

The PCR, which is PCI-bus specification compliant, is initialized and controlled by the plug & play (PnP) PCI BIOS. Users may obtain more information on the PCI BIOS specification to better understand the operation of the PCR. Please contact PCISIG to acquire specifications of the PCI interface.

The PCI bus controller PCI-9052 is provided by PLX technology Inc. (www.plxtech.com). For more information about LCR, please visit PLX technology's web site to download relative information. It is not necessary for users to fully understand the details of the LCR if the software library provided is used. The PCI PnP BIOS assigns the base address of the LCR. The assigned address is located at an offset of 14h from the PCR.

The PCI-6208/6216-GL registers are discussed in the next section. The base address, which is also assigned by the PCI PnP BIOS, is located at an offset of 18h from the PCR. Therefore, users can read address 18h from the PCR to obtain its base address by using the BIOS function call. Do not attempt to modify the base address and interrupt that have been assigned by the PCI PnP BIOS, it may cause resource conflicts in your system.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.2 Analog Output Control Register

The PCI-6208/6216-GL Series registers are all 16-bit. Users can access these registers with 16-bit I/O instructions. The following table shows the address of every analog output port relative to the base address. Note that the base address is assigned by the PCI BIOS.

Offset Address	6208V	6216V
0x00	V0	V0
0x02	V1	V1
0x04	V2	V2
0x06	V3	V3
0x08	V4	V4
0x0A	V5	V5
0x0C	V6	V6
0x0E	V7	V7
0x10	--	V8
0x12	--	V9
0x14	--	V10
0x16	--	V11
0x18	--	V12
0x1A	--	V13
0x1C	--	V14
0x1E	--	V15

Table 4-1: PCI-6208/6216-GL Series I/O Address Map

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.3 Analog Output Status Register

PCI-6208/6216-GL Series cards use series bus architecture to communicate with digital-to-analog converters, hence there is a delay for digital values to be output. The data transfer rate for every DA data write is 2.2 µs, therefore the software driver must wait 2.2 µs before sending any other data to any analog output port. While the DA value is being sent, the Data_Send bit is set to 'H'. The software driver should check this bit before writing any data to the output port. Writing any value to the analog output control register prior to this status bit is being "L" is not allowed. This register is read only.

Offset Address	D15~D1	D0
0x00	X	Data_Send

Table 4-2: Analog Output Status Register

4.4 Digital Output Register

Signals D0 through D3 are digital output signals written to each output channel. Signals D4 to D7 are reserved.

Offset Address	D7	D6	D5	D4	D3	D2	D1	D0
0x40	X	X	X	X	DO3	DO2	DO1	DO0

Table 4-3: Digital Output Register

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.5 Digital Input Register

Signals D4 through D7 are digital input signals from the CN1 connector.

D4 - D7: digital input signal status.

D0 - D3: read back signal from digital output channel.

Offset Address	D7	D6	D5	D4	D3	D2	D1	D0
0x40	DI3	DI2	DI1	DI0	DO3	DO2	DO1	DO0

Table 4-4: Digital Input Register

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

4.6 Voltage Output DA Conversion

The DA converter used in PCI-6208/6216-GL Series cards are 16-bit resolution with ±10 V bi-polar output ranges. Therefore, the data registers are all 16-bit sign values. The digital value ranges from -32768 (0X8000) to +32767 (0x7FFF) correspond to -10 V to +10 V respectively. The table displays the digital value and its corresponding hex value and analog output voltage.

Digital Value	HEX value	Output Voltage
32767	0x7FFF	+9.99969V
16384	0x4000	+5.00000V
8192	0x2000	+2.50000V
1	0x0001	0.00031V
0	0x0000	0.00000V
-1	0xFFFF	-0.00031V
-8192	0xE000	-2.50000V
-16384	0xC000	-5.00000V
-32767	0x8001	-9.99969V
-32768	0x8000	-10.00000V

Table 4-5: Voltage DA Conversion Table

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

This page intentionally left blank.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5 Utilities & Calibration

The ADLINK All-in-One CD provides a utility program located at:

```
\\Driver Installation\NuDAQ
     PCI_cPCI\6208\Dos_bc\UTIL\6208util.exe
```

or

```
\\Driver Installation\NuDAQ
     PCI_cPCI\6208\dos_msc\UTIL\6208util.exe
```

for function testing of ADLINK PCI-6208/6216-GL cards. The utility is a menu-driven graphical interface and operates under MS-DOS.

There are text based messages for operating guidance, with graphics to indicate correct hardware configurations and locations. The utility is further described in the following sections.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5.1 Running the Utility

After installing/initializing DOS, you may execute the utility by typing the following command (assuming your utility is located in the `\ADLINK\DOS\6208\Util` directory) at the DOS prompt.

```
C> cd \ADLINK\DOS\6208\Util
C> 6208UTIL
```

The following diagram will be displayed on your screen. The message at the bottom of each window guides you through the selected item.



Figure 5-1: PCI-6208/6216-GL Utility Main Menu

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5.1.1 Function Testing

From the main menu, when you choose < `Function Testing` > the function test menu will display. Select the device you have installed and would like to test by moving the cursor and pressing < `Enter` >. You will then be offered several options to select the channel you want to test. After you have selected a channel from the channel selection menu, a testing window appears with the results of your test. Please see figures below for details.

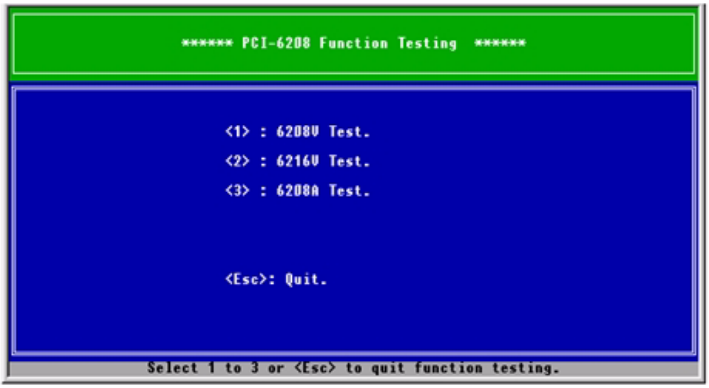


Figure 5-2: PCI-6208/6216-GL Function Test Menu

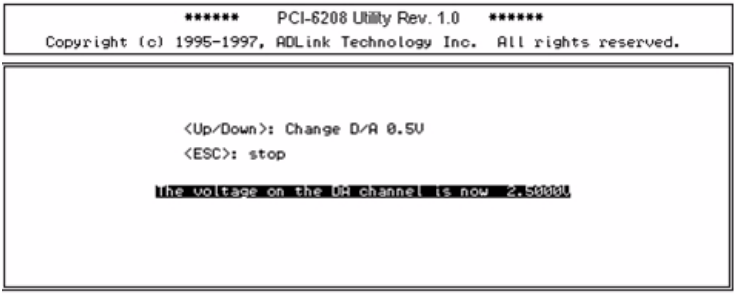


Figure 5-3: PCI-6208/6216-GL Function Test Screen Shot

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

5.1.2 Calibration

ADLINK has adopted a new calibration method to optimize linearity and minimize gains and offset errors for PCI-6208/6216-GL Series cards. We utilize a precision 6½ digital multi-meter (DMM) for in-house calibration.

During the calibration process, the calibration program will trigger the DMM to measure the actual output of every digital code (-32768 to +32767) generated by a PCI-6208/6216-GL Series card. Then it creates a mapping table and records these data on a Flash memory chip.

After calibration, when the PCI-6208/6216-GL Series cards perform their DA conversion, each cards firmware converts the output code automatically to the closest code which then corresponds to the actual output value closest to the ideal value based on the mapping table to minimize gain and offset errors for better linearity.



A one year re-calibration interval is recommended. Please contact your vendor or ADLINK directly to have your card re-calibrated.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Important Safety Instructions

For user safety, please read and follow all **instructions**, **WARNINGS**, **CAUTIONS,** and **NOTES** marked in this manual and on the associated equipment before handling/operating the equipment.

- Read these safety instructions carefully.
- Keep this user's manual for future reference.
- Read the specifications section of this manual for detailed information on the operating environment of this equipment.
- When installing/mounting or uninstalling/removing equipment:
  - Turn off power and unplug any power cords/cables.
- To avoid electrical shock and/or damage to equipment:
  - Keep equipment away from water or liquid sources;
  - Keep equipment away from high heat or high humidity;
  - Keep equipment properly ventilated (do not block or cover ventilation openings);
  - Make sure to use recommended voltage and power source settings;
  - Always install and operate equipment near an easily accessible electrical socket-outlet;
  - Secure the power cord (do not place any object on/over the power cord);
  - Only install/attach and operate equipment on stable surfaces and/or recommended mountings; and,
  - If the equipment will not be used for long periods of time, turn off and unplug the equipment from its power source.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

- Never attempt to fix the equipment. Equipment should only be serviced by qualified personnel.
- A Lithium-type battery may be provided for uninterrupted, backup or emergency power.



RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THEIR INSTRUCTIONS.

- Equipment must be serviced by authorized technicians when:
  - The power cord or plug is damaged;
  - Liquid has penetrated the equipment;
  - It has been exposed to high humidity/moisture;
  - It is not functioning or does not function according to the user's manual;
  - It has been dropped and/or damaged; and/or,
  - It has an obvious sign of breakage.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Warranty Policy

Thank you for choosing ADLINK. To understand your rights and enjoy all the after-sales services we offer, please read the following carefully.

1. Before using ADLINK's products please read the user manual and follow the instructions exactly. When sending in damaged products for repair, please attach an RMA application form which can be downloaded from: http://rma.adlinktech.com/policy/

2. All ADLINK products come with a limited two-year warranty, one year for products bought in China:

- The warranty period starts on the day the product is shipped from ADLINK's factory.
- Peripherals and third-party products not manufactured by ADLINK will be covered by the original manufacturers' warranty.
- For products containing storage devices (hard drives, flash cards, etc.), please back up your data before sending them for repair. ADLINK is not responsible for any loss of data.
- Please ensure the use of properly licensed software with our systems. ADLINK does not condone the use of pirated software and will not service systems using such software. ADLINK will not be held legally responsible for products shipped with unlicensed software installed by the user.
- For general repairs, please do not include peripheral accessories. If peripherals need to be included, be certain to specify which items you sent on the RMA Request & Confirmation Form. ADLINK is not responsible for items not listed on the RMA Request & Confirmation Form.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3. Repair service is not covered by ADLINK's two-year guarantee in the following situations:

- ▶ Damage caused by not following instructions in the User's Manual.
- ▶ Damage caused by carelessness on the user's part during product transportation.
- ▶ Damage caused by fire, earthquakes, floods, lightening, pollution, other acts of God, and/or incorrect usage of voltage transformers.
- ▶ Damage caused by inappropriate storage environments such as high temperatures, high humidity, or volatile chemicals.
- ▶ Damage caused by leakage of battery fluid during or after change of batteries by customer/user.
- ▶ Damage from improper repair by unauthorized technicians.
- ▶ Products with altered and/or damaged serial numbers are not entitled to our service.
- ▶ This warranty is not transferable or extendable.
- ▶ Other categories not protected under our warranty.

4. Customers are responsible for all fees necessary to transport damaged products to ADLINK.

5. To ensure the speed and quality of product repair, please download an RMA application form from our company website: http://rma.adlinktech.com/policy/ Products with attached RMA forms receive priority.

For further questions, please e-mail our FAE staff: service@adlinktech.com.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP