

ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions

Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Visit our website - *Click HERE*

WAVETEK

MODEL 184
5 MHz SWEEP
GENERATOR

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

MODEL 184
5 MHz
SWEEP GENERATOR

WAVETEK®
9045 Balboa Ave., San Diego, Calif. 92123
P. O. Box 651, San Diego, California 92112
Tel 714/279-2200 TWX 910-335-2007

Manual Revision 2/80
Instrument Release C-5/79

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

CONTENTS

SECTION 1 GENERAL DESCRIPTION

1.1 THE MODEL 184 1-1
1.2 SPECIFICATIONS 1-1

SECTION 2 INITIAL PREPARATION

2.1 UNPACKING INSPECTION 2-1
2.2 PREPARATION FOR USE 2-1
2.3 ELECTRICAL ACCEPTANCE CHECK 2-1

SECTION 3 OPERATION

3.1 CONTROLS AND CONNECTORS 3-1
3.2 OPERATION 3-4
3.2.1 Signal Termination 3-4
3.2.2 Continuous Operation 3-5
3.2.3 Trigger Mode 3-5
3.2.4 Triggering 3-6
3.2.5 GATED (or Tone Burst) Mode 3-6
3.2.6 SWEEP Mode 3-6
3.2.7 Voltage Control — VCG 3-6

SECTION 4 CIRCUIT DESCRIPTION

4.1 VOLTAGE CONTROLLED GENERATOR 4-1
4.2 SWEEP GENERATOR 4-2

SECTION 5 CALIBRATION

5.1 FACTORY REPAIR 5-1
5.2 REQUIRED TEST EQUIPMENT 5-1
5.3 REMOVING GENERATOR COVER 5-1
5.4 CALIBRATION 5-1

SECTION 6 TROUBLESHOOTING

6.1 INTRODUCTION 6-1
6.2 CIRCUIT BOARD ACCESS 6-1
6.3 BASIC TECHNIQUES 6-1
6.4 TROUBLESHOOTING INDIVIDUAL COMPONENTS 6-1
6.5 TROUBLESHOOTING GUIDE 6-2

SECTION 7 PARTS AND SCHEMATICS

7.1 DRAWINGS 7-1
7.2 ORDERING PARTS 7-1
7.3 ADDENDA 7-1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 1
GENERAL DESCRIPTION

1.1 THE MODEL 184

Wavetek Model 184, the 5 MHz Sweep Generator, is a precision source of sine, triangle, square, positive pulse and negative pulse waveforms plus dc voltage. Frequency of the waveforms is manually and remotely variable from 100 μHz to 5 MHz.

The generator can repetitively sweep between two individually set frequencies and at a particular sweep rate. The amplitude of waveforms is variable from 20V p-p, open circuit maximum, to −80 dB.

DC reference of the waveforms can be offset positively and negatively.

The symmetry of the waveforms is continuously adjustable from approximately 1:19 to 19:1. Varying symmetry provides variable duty cycle pulses, sawtooth and asymmetrical sine waveforms.

A voltage representing generator frequency, a fixed-amplitude pulse train of that frequency, and a voltage ramp representing frequency sweep rate are provided as front panel outputs.

1.2 SPECIFICATIONS

Specifications (waveform, frequency, and amplitude selection), operating modes, precision (accuracy), and waveform purity (quality) are listed in the following paragraphs.

1.2.1 Versatility

Waveforms
Five selectable waveforms, sine ∿ , triangle △ , square ⊓ , positive pulse ⎍ , negative pulse ⎎ , plus variable DC output. Symmetry of all waveform outputs is continuously adjustable from approximately 1:19 to 19:1. Varying symmetry provides variable duty cycle pulses, sawtooth, or asymmetrical sine waveforms. Separate sync output is included.

Control
Frequency can be controlled manually, with external voltage (VCG) or with internally generated ramp voltage.

Operating Frequency Range
Frequency selectable from 0.0001 Hz to 5 MHz in the following linear ranges:

X 0.001	0.0001 Hz to 0.005 Hz
X 0.01	0.001 Hz to 0.05 Hz
X 0.1	0.005 Hz to 0.5 Hz
X 1	0.05 Hz to 5 Hz
X 10	0.5 Hz to 50 Hz
X 100	0.5 Hz to 500 Hz
X 1K	5 Hz to 5 kHz
X 10K	50 Hz to 50 kHz
X 100K	500 Hz to 500 kHz
X 1M	5 kHz to 5 MHz

NOTE

When SYMMETRY control is used, the output frequency is different from the dial indicated frequency. The maximum symmetry ratio obtainable is also dependent on the frequency dial setting.

Main Output
∿ , △ , ⊓ ; variable to 20V p-p into open circuit and 10V p-p into 50Ω load. DC offset of waveform (or DC if selected) is adjustable to ±10 volts open circuit and ±5 volts into 50Ω load.

⎍ , ⎎ , DC: 0 to +10 or −10 volts into open circuit and 0 to +5 or −5 volts into 50Ω load.

Output dc voltage is limited to approximately ±10 volt open circuit and output current is limited to approximately 130 mA.

Output can be attenuated from 0 dB to −80 dB: −60 dB in 20 dB steps, plus a 20 dB vernier for continuous variation (20 dB vernier does not affect offset or DC).

Pulse Output
Output voltage is TTL compatible. Rise and fall times are typically 15 ns. Sync is normally a symmetrical square waveform; with SYMMETRY control ON, it is rectangular.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Sweep Output
SWEEP OUT connector provides a nominal 0 to + 5 volt (open circuit) ramp from a 600Ω source impedance.

DC Offset
DC offset of ∿ , ∿ , or ⊓ waveform, or DC if selected, is adjustable to ±10 volts open circuit and ±5 volts into a 50Ω load. Output current is limited to approximately 130 mA. Waveform + offset is limited to ±10V into an open circuit.

GCV Output
A dc voltage proportional to the instantaneous frequency of the generator output. 0 to +5V, open circuit, 1 kΩ source impedance.

1.2.2 Operating Modes

Continuous
Operating as a standard VCG (voltage controlled generator), frequency output is determined by front panel control settings in conjunction with external control voltage at VCG IN.

Triggered
Only one complete cycle of output appears at 50Ω OUT connector for each pulse applied to TRIG IN connector (or press of MAN TRIG switch).

Gated
Same as triggered mode except that output oscillations continue for duration of gating signal applied to TRIG IN connector (or as the MAN TRIG switch is depressed).

Sweep
The internal ramp generator can sweep the main generator up in frequency with a linear ramp. The end frequency points may be individually set and the time for each ramp can be varied from 100s to 1 ms.

1.2.3 Voltage Controlled Generator

VCG Control Range: Up to 1000:1 frequency change with external voltage input.

Input Impedance: 5 kΩ.

VCG Voltage: 0 to 5V.

VCG Slew Rate: 2% of range per μs.

VCG Linearity 0.0001 Hz to 50 kHz: ±0.5%.

1.2.4 Triggered Generator

Trigger pulse is 1V p-p to ±10V; input impedance is 10 kΩ, 33 pF; minimum pulse width is 50 ns; maximum repetition rate is 5 MHz.

1.2.5 Horizontal Precision

Dial Accuracy (Symmetrical Waveform)
±2% of full scale for 0.005 Hz to 5 MHz.
±4% of reading and ±2% of full scale for 0.0005 Hz to 0.005 Hz.

Frequency Vernier
Approximately 1% of range. Vernier affects calibration of frequency dial.

Time Symmetry
±1% for 0.005 to 500 kHz.

1.2.6 Vertical Precision

Amplitude Change With Frequency (Sine)
Less than 0.1 dB to 100 kHz.
Less than 0.2 dB to 1 MHz.
Less than 1 dB to 5 MHz.

Step Attenuator Accuracy
±0.3 dB per 20 dB step.

Stability
Short Term: ±0.05% for 10 minutes.
Long Term: ±0.25% for 24 hours.

Percentages apply to amplitude, dc offset and main generator frequency in the linear mode.

Amplitude Symmetry
±1% of amplitude range to 1 MHz for all symmetrical waveforms.

1.2.7 Purity

Sine Distortion
Less than 0.5% for 10 Hz to 100 kHz.
Less than 1% for 0.005 to 1 MHz.
All harmonics at least 30 dB down for 1 to 5 MHz.

Triangle Linearity
Greater than 99% for 0.0005 Hz to 100 kHz.

Square Wave Rise and Fall Time
Less than 25 ns terminated into 50Ω load.

Square Wave Total Aberrations
Less than 5%.

1.2.8 Environmental

All specifications listed are for 25°C ±5°C. For operation from 0°C to 55°C, specifications including horizontal pre-

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

cision, amplitude symmetry, and sine wave distortion are derated by a factor of 2.

1.2.9 Mechanical

Dimensions
11¼ in./28.6 cm wide; 5¾ in./14.5 cm high; 10¾ in./27.3 cm deep.

Weight
8.5 lb/3.8 kg net; 12 lb/5.5 kg shipping.

1.2.10 Power

90V to 110V, 105V to 125V, 180V to 220V or 210V to 250V; 50 Hz to 400 Hz; less than 25 watts.

NOTE

Specifications apply from 10 to 100% of a selected frequency range with SYMMETRY control OFF.



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 2
INITIAL PREPARATION

2.1 UNPACKING INSPECTION

After carefully unpacking the instrument, inspect the external parts for damage to knobs, dials, indicators, surface areas, etc. If there is damage, file a claim with the carrier who transported the instrument. Retain the shipping container and packing material for use in case reshipment is required.

2.2 PREPARATION FOR USE

Before connecting the instrument to line power, be sure the rear panel 115/230V and HI/LO switches are set to the value nearest the line voltage and that the fuse is correct for the switch setting. Be sure that the plug on the power cord is the proper mate for the line receptacle.

AC Line Voltage	Switch A	Switch B	Fuse (SB)
90 - 110	115	LO	1/4 amp
105 - 125	115	HI	1/4 amp
180 - 220	230	LO	1/8 amp
210 - 250	230	HI	1/8 amp

2.3 ELECTRICAL ACCEPTANCE CHECK

This checkout procedure verifies the generator operation. If a malfunction is found, refer to the Warranty in the front of this manual. An oscilloscope, 50Ω coax cable and 50Ω feedthru are needed for this procedure (figure 2-1).

Preset the generator front panel controls as follows:

Control	Position
GEN MODE	CONT
WAVEFORM	∿
SYMMETRY	NORMAL
FREQ Range	X 1K
FREQ VERNIER	CAL
Frequency Dial	1
AMPLITUDE	0 dB
AMPLITUDE VARIABLE	Full clockwise
DC OFFSET	12 o'clock
TRIG LEVEL	Full counterclockwise
SWEEP MODE	CONT SWEEP
SWEEP WIDTH	MAX
SWEEP TIME	12 o'clock

Perform the steps in table 2-1. Only approximate values are required to verify operation.




Figure 2-1. Acceptance Test Setup

Table 2-1. Performance Checkout

Step	Control	Position/Operation	Observe at 50Ω OUT
	Function		
1	POWER	Push on	Sine wave, 1 kHz, 10V p-p
2	WAVEFORM	∿	Triangle wave
3	WAVEFORM	⊓	Square wave
4	WAVEFORM	⎍	Positive pulse
5	WAVEFORM	⎎	Negative pulse

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Performance Checkout (Continued)


Step	Control	Position/Operation	Observe at 50Ω OUT
6	SYMMETRY	cw	Frequency ÷ 10, decreasing negative pulse width
7	SYMMETRY	ccw	Decreasing positive pulse width
8	SYMMETRY	NORMAL	– – –
9	WAVEFORM	∿ (OFFSET)	Sine wave, 1 kHz
	Frequency		
10	FREQ Range	X 1M	Frequency = 1 MHz
11	FREQ VERNIER	ccw	Frequency decreases by at least 50 kHz
12	FREQ VERNIER	CAL	– – –
13	FREQ Range	X .001	Detect generator running
14	FREQ Range	X 1K	– – –
15	Frequency Dial	5	Frequency = 5 kHz
16	Frequency Dial	.05	Frequency = 50 Hz
17	Frequency Dial	1	– – –
	Amplitude		
18	AMPLITUDE Range	–60 dB	10 mV p-p
19	AMPLITUDE VARIABLE	ccw	1 mV p-p
20	AMPLITUDE Range	0	1V p-p
21	DC OFFSET	cw	Positive slew; about +5V positive peak
22	DC OFFSET	ccw	Negative slew; about –5V negative peak
23	WAVEFORM	∿ (No OFFSET)	Triangle wave
	Trigger & Gate		
24	GEN MODE	TRIG	0 Vdc
25	MAN TRIG	Push	Generate one cycle
26	GEN MODE	GATED	0 Vdc
27	MAN TRIG	Push and hold	Continuous ∿ waveforms

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Performance Checkout (Continued)

Step	Control	Position/Operation	Observe at 50Ω OUT
28	MAN TRIG	Release	0 Vdc
	Sweep		
29	GEN MODE	SWEEP	Frequency sweeps
30	SWEEP TIME	cw	Sweep rate increases
31	SWEEP TIME	ccw	Sweep rate decreases

Disconnect the cable at 50Ω OUT and connect it to SWP OUT: observe a 5 V ramp waveform. Connect it to GCV OUT: observe a ramp plus dc. Connect it to PULSE OUT: observe a 2.4 V positive pulse.

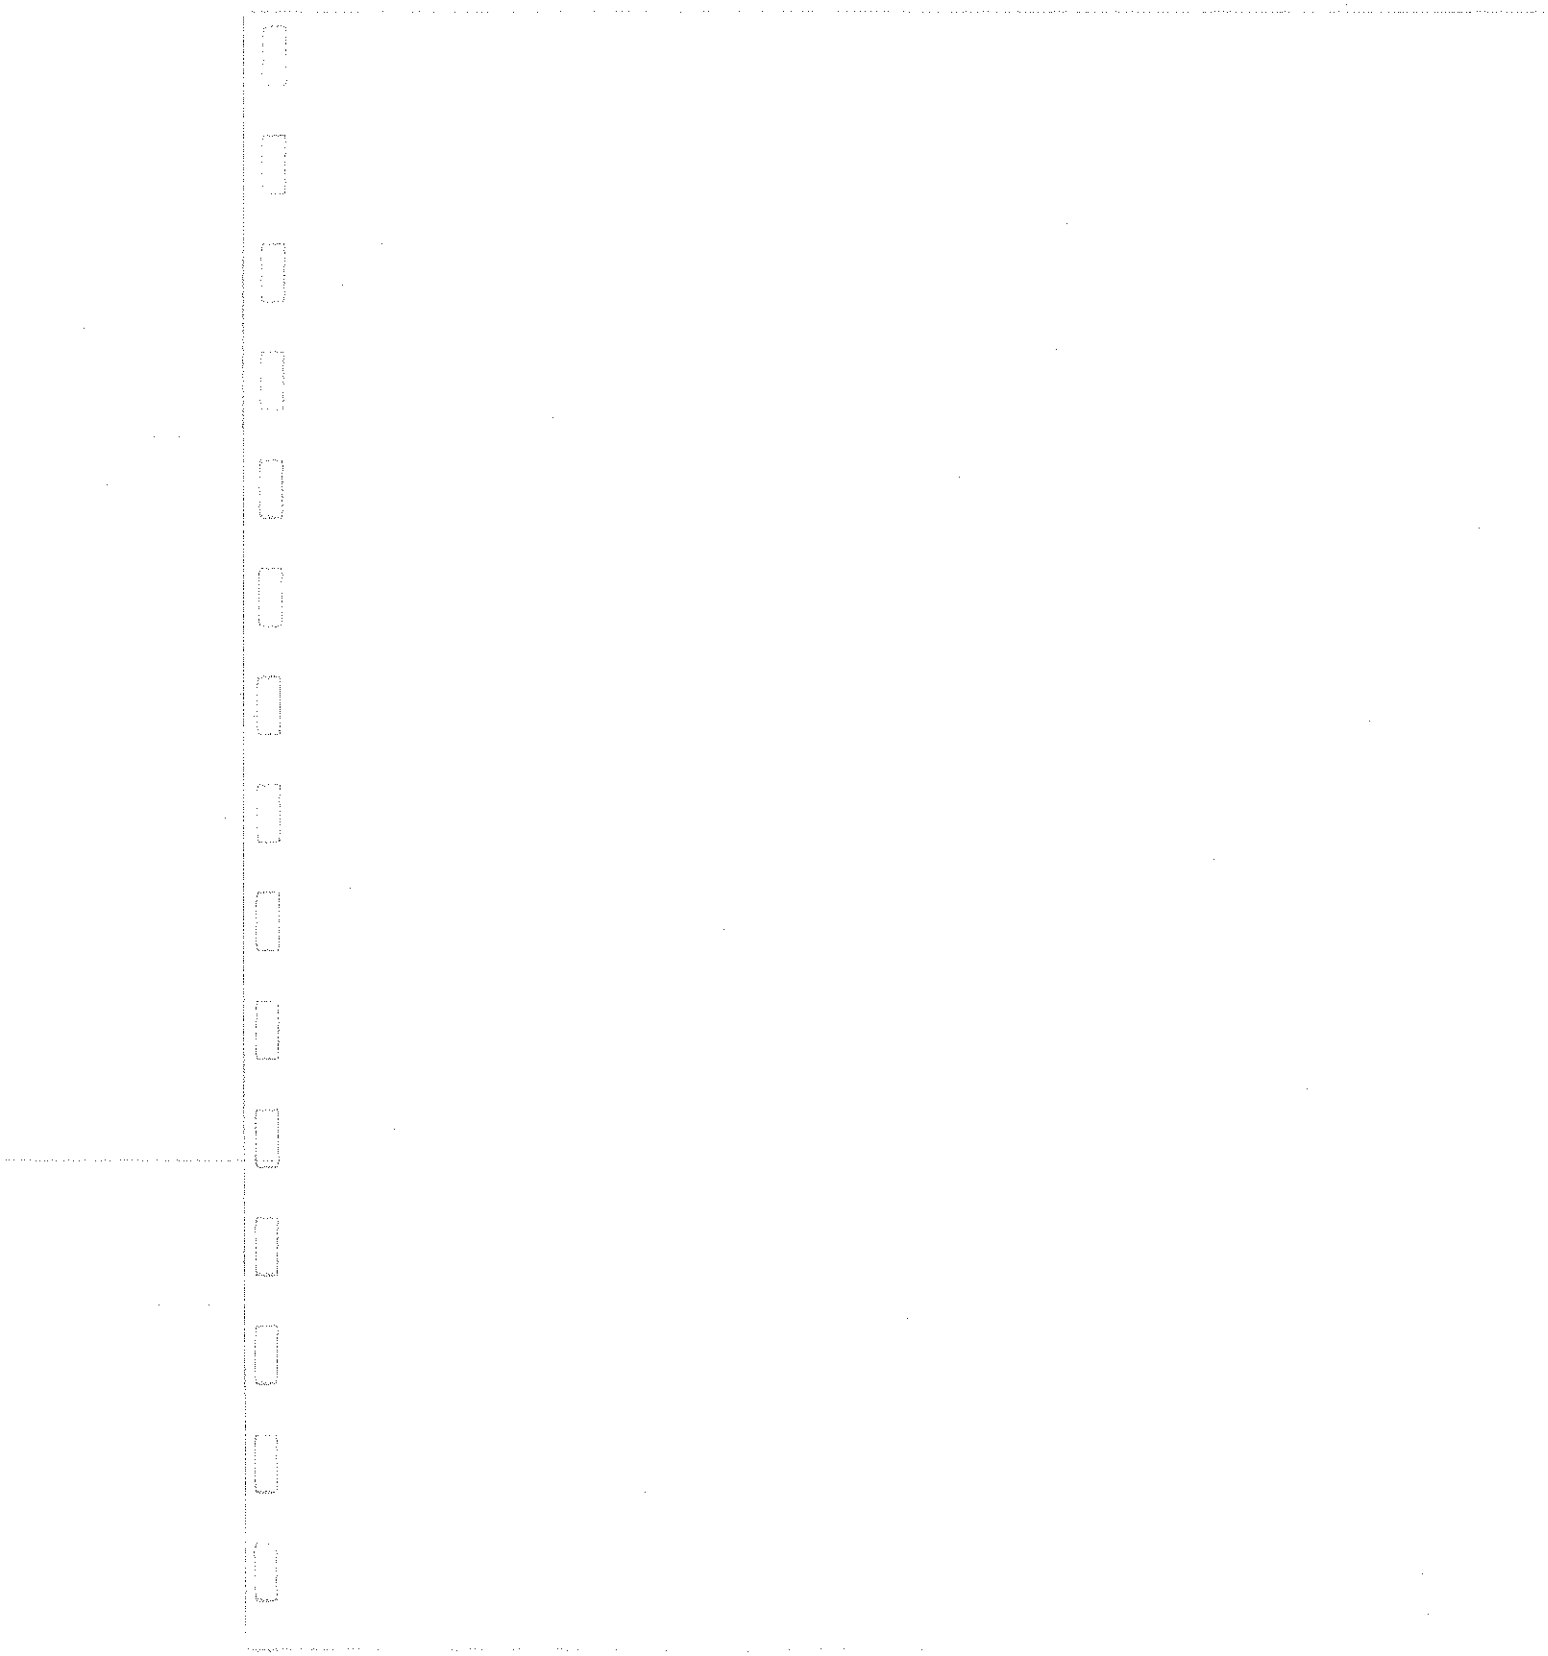

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 3
OPERATION

3.1 CONTROLS AND CONNECTORS

The generator front panel controls and connectors are shown in figure 3-1 and keyed to the following descriptions:

(1) POWER Switch

Power is turned on and off with the POWER push-button. The frequency dial index (1A) lights when power is turned on.

(2) Frequency Dial

Frequency settings of the dial multiplied by frequency range (18) determine output frequency. In frequency sweep operation, this dial determines the frequency from which sweep is started.

(3) SWEEP WIDTH Control

The SWEEP WIDTH control determines the amount of frequency change that will occur in sweep mode. After the sweep start frequency is set by the frequency dial, SWEEP WIDTH determines the sweep stop frequency (see figure 3-2).

(4) SWEEP MODE Selector

The SWEEP MODE selector is enabled by the GEN MODE selector (14) set to SWEEP. After the start frequency of the generator is determined by the frequency dial (2), the stop frequency is determined by the SWEEP WIDTH control (3). The SWEEP START and SWEEP STOP settings will hold the output signal at the start and stop

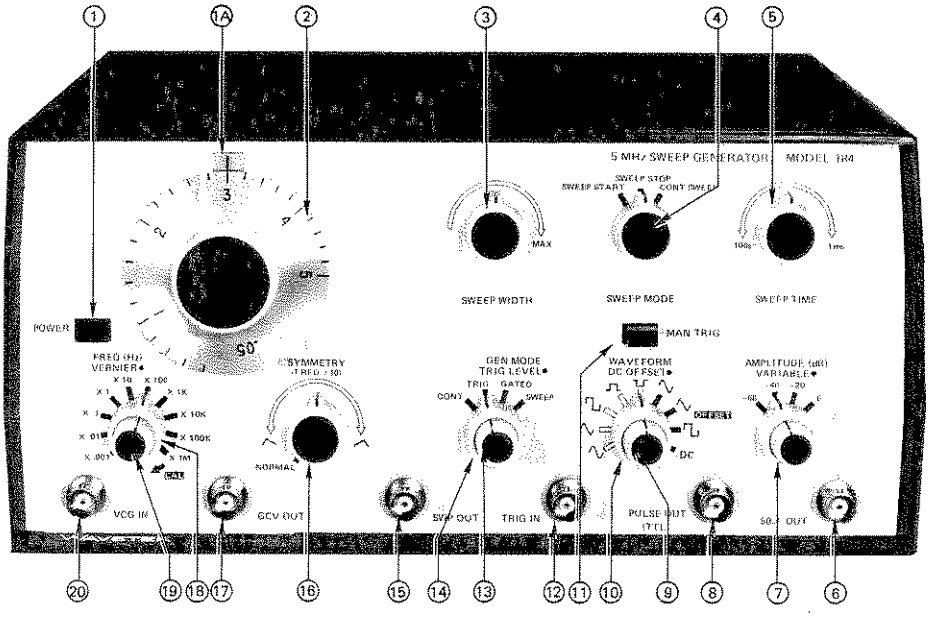


Figure 3-1. Front Panel Controls and Connectors

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

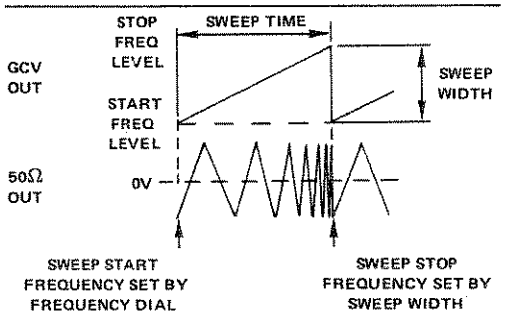


Figure 3-2. Effect of Sweep Time and Width on Output Frequency

frequencies, respectively, while the frequency dial (2) and SWEEP WIDTH control (3) are adjusted. CONT SWEEP allows frequency sweeping between the two set limits.

(5) **SWEEP TIME Control**

Frequency of the internal sweep ramp, and thus, the sweep repetition rate, is governed by the SWEEP TIME control (see figure 3-2).

(6) **Main Output Connector**

Maximum output of 10V p-p signals into a 50Ω load (20V p-p open circuit) is provided at the 50Ω OUT connector; all generator mode signals are delivered at this connector. See (7) for amplitude of output.

(7) **AMPLITUDE Control**

The AMPLITUDE switch affects waveforms, dc output and waveform dc offset. The VARIABLE control affects waveforms only. Maximum waveform amplitude is with the 0 dB setting of the AMPLITUDE control and with the VARIABLE control fully cw (see table 3-1). Amplitude is decreased 20 dB with VARIABLE control fully ccw.

Table 3-1. Maximum Voltage at 0 dB

Function	Open Circuit	50Ω Termination
∿ , ⩘ , ⊓	20V p-p	10V p-p
⎍	0 to +10V	0 to +5V
⎎	0 to −10V	0 to −5V
DC	±10V	±5V

(8) **Synchronizing Pulse Output Connector**

A fixed amplitude (0 to about 5V) TTL pulse of the generator frequency is provided at the PULSE OUT connector. This output can be used as a synchronizing reference for the main output (6). Phase of the waveforms relative to the sync output is shown in figure 3-3.

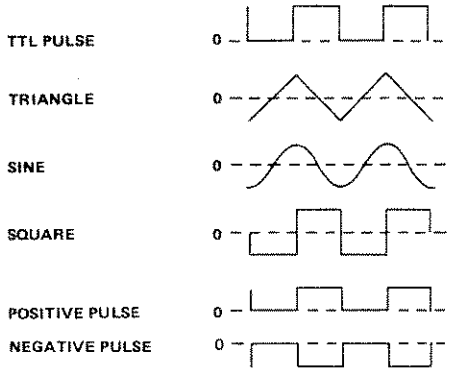


Figure 3-3. Pulse/Waveform Phase Relationship and Waveform Reference Lines

(9) **DC OFFSET Control**

Offset of waveforms and dc voltage are controlled by the DC OFFSET control. The WAVEFORM switch (10) must be in one of the four right-hand settings. Center of the waveform reference (figure 3-3) is skewed positive with clockwise rotation, negative with counterclockwise rotation. Offset and dc voltage maximums are ±5V (50Ω terminated).

(10) **WAVEFORM Selector**

Sine ∿ , triangle ⩘ , and square ⊓ waveforms, and positive and negative square pulse trains ⎍ , ⎎ are selected for output by the WAVEFORM selector, with or without dc offset. When set for dc offset, the inner knob (9) controls the ±5V (50Ω terminated) offset. DC is selected for dc output with voltage controlled by the inner knob (9).

(11) **Manual Trigger Control**

In TRIG mode (14), the MAN TRIG pushbutton is used to trigger a single cycle of waveform output

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

and, in the GATED mode, to gate the output of waveforms until released.

NOTE

The TRIG LEVEL control (13) must be fully CCW.

(12) Remote Trigger Input Connector

The TRIG IN connector accepts voltage level inputs that trigger and gate the generator in TRIG and GATED modes (14), respectively. The trigger level control (13) determines the level at which the TRIG IN input is accepted for triggering or gating. A positive-going excursion through a voltage level, which can be set in the range of −7.5V to +7.5V by the TRIG LEVEL control triggers or gates the generator operation.

A negative-going dc excursion through the trigger level ends gated operation. Figure 3-4 shows triggering and gating of the generator waveforms at time t1. Once triggered or gated, a full cycle of the selected waveform is output to its completion: when gating is removed at time t2, for example, the last full cycle of waveform completes itself at time t3.

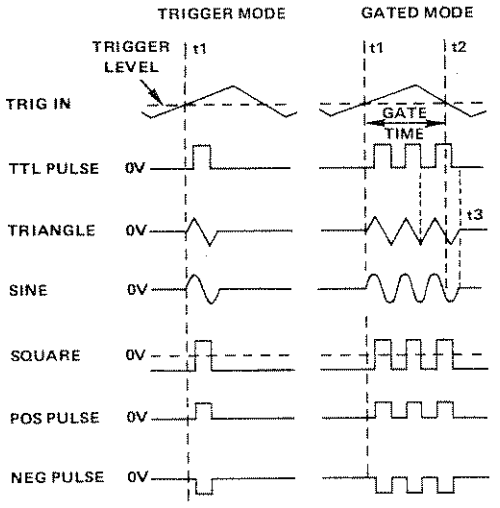


Figure 3-4. Generator Trigger and Gated Control

(13) Trigger Level Control

The TRIG LEVEL control determines the level at which the input at the TRIG IN connector (12) is accepted as a trigger in the generator trigger and gated modes (14). The trigger level can be varied from fully clockwise, where a positive-going excursion thru −7.5V is a trigger, to fully counterclockwise, where a positive-going excursion thru +7.5V is a trigger.

(14) Generator Mode Selector

Generator modes are:

1. Continuous — An uninterrupted output of the selected waveform at the selected frequency and amplitude.
2. Triggered — One cycle of the selected waveform at the selected frequency and amplitude when the trigger signal is detected at TRIG IN (12) or when manually triggered at (11).
3. Gated — A burst of the selected waveform at the selected frequency and amplitude, which starts when the gate signal is detected at TRIG IN (12) and lasts through the completion of the last cycle started before the removal of the gate signal, or starts and stops when manually gated at (11).
4. Automatically Swept Frequency — Sweep as determined by the SWEEP MODE control (4).

(15) Sweep Ramp Output Connector

The internal sweep generator ramp is available at the SWP OUT connector. Ramp frequency is varied by the SWEEP TIME control. Output is a 0 to +5V ramp, 600Ω source impedance.

(16) Waveform SYMMETRY Control

Normal symmetrical output results when SYMMETRY is set to NORMAL; an asymmetrical, or unbalanced, waveform results when SYMMETRY is set between ⌒ and ⌒. (Asymmetric operation reduces generator frequency to approximately 1/10th the normal output.) Figure 3-5 shows the effect of SYMMETRY control on the waveforms.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

NOTE

When SYMMETRY control is used, the output frequency is different from the dial indicated frequency. The maximum symmetry ratio obtainable also depends on the frequency dial setting. A typical example is shown in table 3-2.

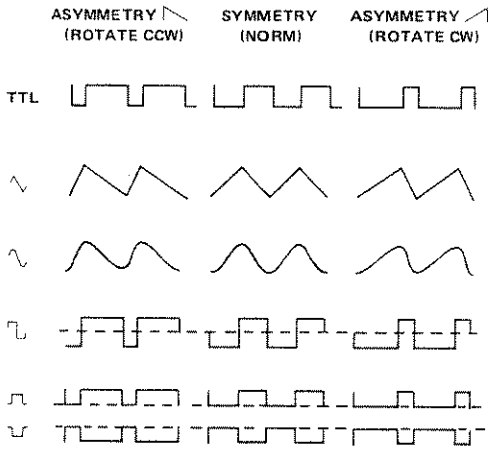


Figure 3-5. Effect of SYMMETRY Control

⑰ **GCV Output Connector**

GCV OUT provides dc excursions of 0 to about +5V which represent the output frequency in the selected range. Source impedance is 1 kΩ.

⑱ **Frequency Range Control**

The selected range settings of the FREQ selector, multiplied with the frequency dial ② setting determine output frequency.

⑲ **Frequency VERNIER Control**

The frequency is as labeled on ⑱ and ②, when the VERNIER control is set fully clockwise to CAL (calibrated). Rotating the VERNIER control counterclockwise decreases output frequency. The range is approximately 1% of the selected frequency range.

⑳ **VCG Input Connector**

DC voltage excursions of 0 to ±5 volts at the VCG IN connector control frequency within the selected range. Positive inputs increase frequencies set by the frequency dial ② and range control ⑱, and negative inputs decrease the frequencies. Input impedance is 5 kΩ. Frequency excursions of 1000:1 are possible.

3.2 OPERATION

Operation is discussed in terms of the four generator modes: continuous, triggered, gated and sweep plus VCG.

3.2.1 Signal Termination

Proper signal termination, or loading, of the generator connectors is necessary for its specified operation. For example, the proper termination of the main output is shown in figure 3-6. Placing the 50Ω terminator, or 50Ω resistance, in parallel with a higher impedance matches the receiving

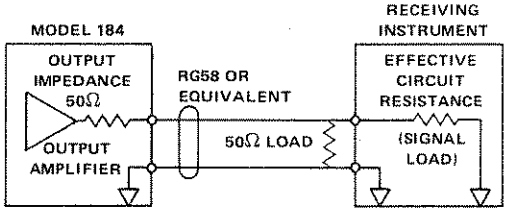


Figure 3-6. Signal Termination

Table 3-2. Dial Setting

Frequency Range	X 100K					
Dial Setting	5	4	3	2	1	0.5
Indicated Frequency	500 kHz	400 kHz	300 kHz	200 kHz	100 kHz	50 kHz
Output Frequency	54 kHz	44 kHz	33 kHz	23 kHz	12 kHz	6.5 kHz
Maximum Symmetry Ratio	18:1	18:1	18:1	17:1	16:1	15:1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

instrument input impedance to the generator output impedance, thereby minimizing signal reflection or power loss on the line due to phase angle mismatch.

The input and output impedance of the generator connectors are listed below:

Connector	Impedance
50Ω OUT	50Ω
TRIG IN	10 kΩ
PULSE OUT (TTL)	*
SWP OUT	600Ω
VCG IN	5 kΩ
GCV OUT	1 kΩ

*The PULSE OUT connector can drive up to 20 Transistor-Transistor Logic (TTL) loads (low level between 0V and 0.4V, and high level between 2.4V and 5V).

3.2.2 Continuous Operation

Basic, or continuous, operation of the generator involves turning on power, selecting a continuous output mode, selecting a waveform, and setting the output signal frequency and amplitude. When operation is critical, allow a one-half hour warm-up period. The following steps demonstrate use as a basic function generator:

Step	Control/Connector	Setting
1	50Ω OUT	Connect circuit (refer to paragraph 3.2.1).
2	PULSE OUT	Use for external synchronization, if required.
3	GEN MODE	CONT
4	WAVEFORM	Choose one of the left-hand set of waveforms. If dc or dc offset is desired, use right-hand set.
5	SYMMETRY	NORMAL or desired asymmetry. (Affects frequency calibration.)
6	FREQ	As desired for frequency range.
7	Frequency Dial	As desired for exact frequency.
8	FREQ VERNIER	CAL, unless extreme frequency accuracy is required, in which case, monitor with a frequency counter.
9	AMPLITUDE	As desired.
10	AMPLITUDE VARIABLE	As desired.
11	DC OFFSET	As desired (step 4, right-hand set of waveforms must be chosen). CW positive offset, ccw negative offset. See figure 3-7 for restrictions.

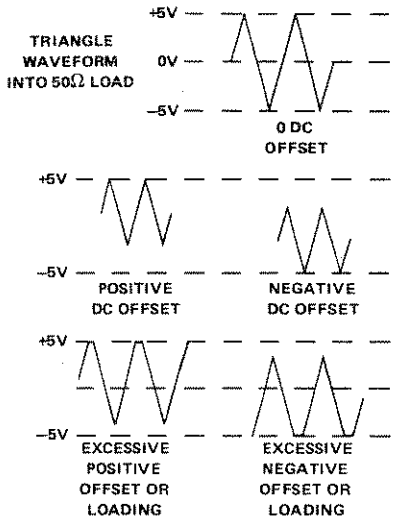


Figure 3-7. DC OFFSET Control

3.2.3 Trigger Mode

Operation as a triggered one cycle generator is as for a basic function generator, only the operating mode is triggered (TRIG) instead of continuous (CONT), and a manual or remote trigger (MAN TRIG, TRIG IN) is used to start the single cycle of waveform. Perform the steps given in paragraph 3.2.2, only set the GEN MODE control in step 3 to TRIG. Refer to paragraph 3.2.4 for triggering.

NOTE

The signal at SWP OUT can be used as source of repetitive trigger inputs.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

3.2.4 Triggering

Manual trigger as follows:

Step	Control/Connector	Setting
1	TRIG LEVEL	Full ccw.
2	MAN TRIG	Press for each cycle desired.

Remote trigger as follows:

Step	Control/Connector	Setting
1	TRIG LEVEL	Rotate the TRIG LEVEL control cw to set negative thresholds as low as −7.5V through which a positive-going TRIG IN connector input can pass to provide triggering. CCW sets positive thresholds of up to +7.5V through which a positive-going TRIG IN level can pass to provide triggering.
2	TRIG IN	Apply a positive-going voltage (through the threshold set in the preceding step) to the TRIG IN connector to provide remote triggering.

CAUTION

Avoid voltages greater than ±50V at TRIG IN to prevent damage to the generator.

3.2.5 GATED (or Tone Burst) Mode

Operation as a gated or tone burst generator is as for a triggered generator, only the operating mode is GATED, and releasing the MAN TRIG or removing the remote trigger voltage ends the burst of output waveform. Perform the steps of paragraph 3.2.2, only set the GEN MODE control to GATED. Refer to paragraph 3.2.4 for triggering.

3.2.6 SWEEP Mode

The generator can be set for a repetitive sweep of output frequencies within a given range. Operation is like continuous mode, only a separately controlled, internal ramp generator provides an additional VCG input to control frequency. (This internally-generated ramp is also available at the SWP OUT connector.) Perform the steps given in paragraph 3.2.2, only set the GEN MODE control in step 3 to SWEEP and include the following steps:

Step	Control/Connector	Setting
1	SWEEP MODE	SWEEP START.
2	Frequency Dial	Desired start sweep frequency.
3	SWEEP MODE	SWEEP STOP.
4	SWEEP WIDTH	Desired stop sweep frequency.
5	SWEEP MODE	CONT SWEEP
6	SWEEP TIME	As desired.

3.2.7 Voltage Control — VCG

Operation with voltage control can be done in any mode but is usually done in continuous mode; the frequency

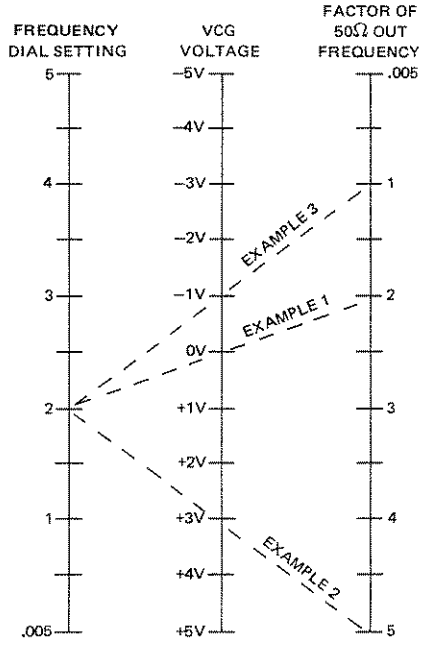


Figure 3-8. VCG Voltage-to-Frequency Nomograph

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

within a particular range is additionally controlled with dc levels within ±5V, injected at the VCG IN connector. Perform the steps given in paragraph 3.2.2, only set the frequency dial to determine a reference from which the frequency is to be voltage controlled:

1. For frequency control with positive dc inputs at VCG IN, set the dial for a lower limit from which frequency is to be increased.

2. For frequency control with negative dc inputs at VCG IN, set the dial for an upper limit from which frequency is to be decreased.

3. For modulation with an ac input at VCG IN, set the dial at the desired center frequency. Do not exceed the maximum dynamic range of the selected frequency range.

Figure 3-8 is a nomograph with examples of the frequency dial effect as a reference for VCG IN voltages. Example 1 shows that with 0V VCG input (2nd column), frequency (3rd column) is as determined by the frequency dial setting of 2 (1st column). Example 2 shows that with a positive VCG input, output frequency is increased. Example 3 shows that with a negative VCG input, output frequency is decreased. (Note that the Factor of 50Ω OUT Frequency column must be multiplied by the frequency range in order to give the actual 50Ω OUT frequency.) For full 1000:1 linear mode VCG sweep of the generator frequencies, set the FREQ VERNIER full ccw.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

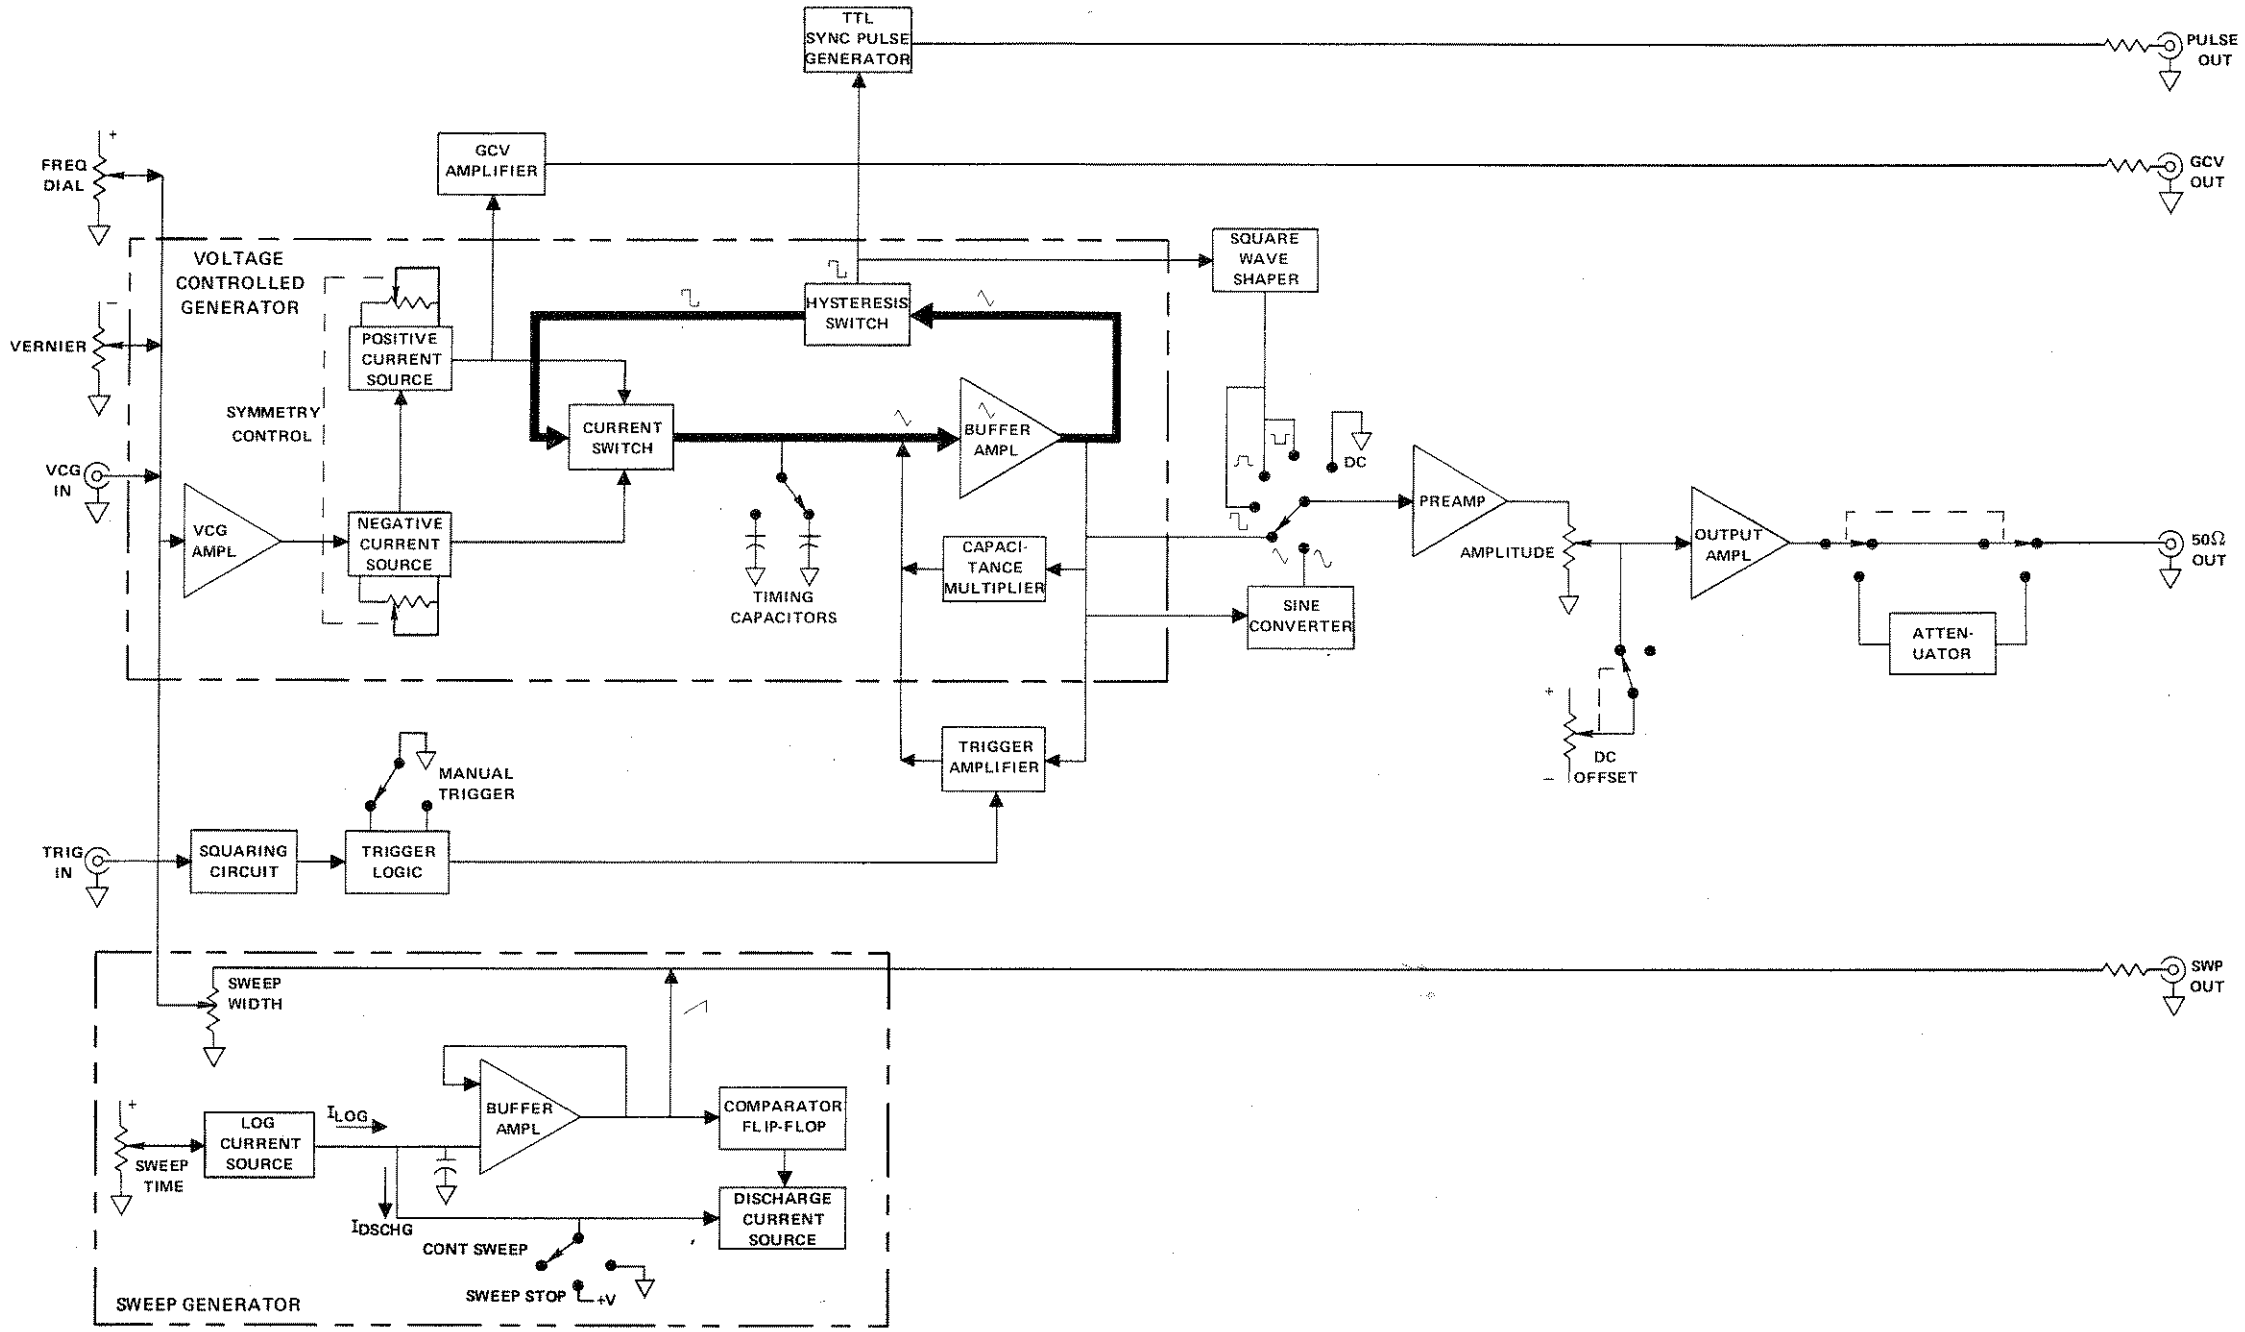


Figure 4-1. Simplified Block Diagram

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 4
CIRCUIT DESCRIPTION

4.1 VOLTAGE CONTROLLED GENERATOR

The heart of the generator consists of the positive and negative current sources, the current switch, timing capacitors, triangle amplifier, and hysteresis switch (figure 4-1).

The positive and negative current sources generate equal but opposite polarity currents which charge and discharge the timing capacitor selected by the range selector. The current switch, which is controlled by the hysteresis switch, selects either the positive or the negative current as the input to the capacitor. Since the capacitor is being charged by a current source which changes polarity periodically, the voltage across the capacitor forms a triangle waveform. This waveform is fed through the triangle buffer amplifier to the hysteresis switch. The hysteresis switch determines when the triangle waveform reaches predetermined positive and negative peak values. When this occurs, the output of the hysteresis changes state and causes the current switch to select the opposite polarity current. The output of the hysteresis switch is a square wave whose edges correspond to the triangle peak values.

The magnitude of the current produced by the current sources is dependent upon the output of the VCG amplifier. By varying the output of the VCG amplifier, the frequency of the triangle and square waveforms may be controlled.

In order to generate sine waves, the triangle waveform is sine shaped in the sine converter circuit with nonlinear elements. The waveform switch selects the waveform of interest and a portion of the signal is selected by the amplitude potentiometer and applied to the output amplifier. The output amplifier is capable of driving a 50Ω load and may be dc offset. The amplifier output is routed to a 50Ω attenuator which can provide 60 dB of attenuation in 20 dB steps. An additional 20 dB of attenuation can be obtained from the amplitude control.

The square wave from the hysteresis switch is also applied to the TTL sync pulse generator, whose square wave output is TTL compatible.

To change frequency ranges, different timing capacitors may be selected by the frequency range switch. On the very slow frequencies the capacitance multiplier becomes active. This circuit senses the capacitor charging current and then subtracts a certain percentage of it from the capacitor. As a result, the capacitor does not charge as fast, and the frequency, as a result, is lower.

Several things can affect the frequency of the generator by varying the output of the VCG amplifier. One is the frequency dial of the function generator which feeds a voltage to the VCG amplifier. In addition to the frequency dial, the frequency vernier feeds in a voltage to the VCG amplifier. The range of the vernier is approximately 1% of the full scale frequency. Finally, an external voltage applied to the VCG input can control the frequency of the generator loop. The VCG input allows frequency modulation of the generator by an external signal.

Under normal conditions the generator loop runs with the positive and negative current sources balanced. This results in symmetrical sine, triangle and square waveforms, or in the case of the square waveform, a duty cycle of 50%. By varying the symmetry control, the current sources may be unbalanced which results in the generation of asymmetrical waveforms. This allows the generation of pulses, ramps, and other waveshapes.

In the trigger mode, the generator is stopped by the trigger amplifier. This amplifier compares the output of the triangle amplifier to ground. Its output draws just the right amount of current away from the capacitor to keep it at zero volts. This level is known as the trigger baseline. When an external signal is applied to the trigger input, it is shaped into a fast rise time pulse by the squaring circuit and is applied to the trigger logic circuit. This circuit in turn shuts off the trigger amplifier for one cycle of the output waveform. Trigger input may also be made manually by the manual trigger switch.

The trigger logic circuit also allows the generator to run in the gated mode. In this mode the generator will run as long as the trigger input signal is positive. When it goes negative, the generator will continue to run until the last cycle is complete and then remain at the trigger baseline level.

The GCV output is an analog output voltage proportional to the instantaneous output frequency of the generator. This is from the GCV amplifier which senses the positive

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

current source output and generates a voltage proportional to the current.

4.2 SWEEP GENERATOR

The internal sweep generator can frequency modulate the main generator. It generates a positive-going linear ramp signal which can be controlled in both period and amplitude. This signal is added to that of the main frequency dial and is applied to the VCG amplifier. This results in a linearly increasing FM sweep.

The linear sweep ramp is obtained by charging the capacitor with a constant current from the log current source. When the positive peak of the ramp reaches a predetermined value, the comparator turns on the discharge current source and quickly discharges the capacitor to zero volts. When this point is reached, the comparator resets and turns off the discharge current source. A new ramp cycle now begins.

The buffer amplifier provides a high input impedance to the capacitor, thus assuring a highly linear ramp. It also provides the power required to drive the main generator VCG circuit.

The log current source has a built-in log converter circuit which allows a single sweep rate control to provide sweep rates of 1 ms to 100s: a 10^5 control range.

A sweep output signal can drive X-Y recorders or other devices.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 5
CALIBRATION

5.1 FACTORY REPAIR

Wavetek maintains a factory repair department for those customers not possessing the necessary personnel or test equipment to maintain the instrument. If an instrument is returned to the factory for calibration or repair, a detailed description of the specific problem should be attached to minimize turnaround time.

5.2 REQUIRED TEST EQUIPMENT

Spectrum Analyzer . . . . . 600 kHz to 5 MHz
Voltmeter . Microvolt dc measurement (0.01% accuracy)
Oscilloscope, Dual Channel . . . 150 MHz bandwidth
Distortion Analyzer . . . . . To 600 kHz
Counter . . . . . To 10 MHz (0.1% accuracy)
50Ω Load . . . . . ±0.1% accuracy

5.3 REMOVING GENERATOR COVER

For main circuit board access, invert the instrument, remove the four screws in the cover, and lift off the bottom cover.

5.4 CALIBRATION

After referring to the following preliminary data, perform calibration, as necessary, per table 5-1. If performing partial calibration, check previous settings and adjustments for applicability.

1. Unless otherwise noted, all measurements made at the 50Ω OUT connector should be terminated into a 50Ω (±0.1%) load.

2. Test Points (TPs) and adjustments are on the main board unless noted otherwise.

3. Before connecting the unit to an ac source, check the ac line circuit to make sure the 115/230 and HI/LO switches are set at the correct position (see paragraph 2.2).

4. Start the calibration by setting the front panel switches as follows:

FREQ Range . . . . . X 10K
Frequency Dial 5
FREQ VERNIER. . . . . CAL
SYMMETRY . . . . . NORMAL
GEN MODE . . . . . CONT
WAVEFORM . . . . . ⎍ (No Offset)
AMPLITUDE 0
AMPLITUDE VARIABLE. . . . . Max cw
SWEEP MODE . . . . . SWEEP START
SWEEP TIME 100s

5. Allow the unit to warm up at least 30 minutes for final calibration.

Table 5-1. Calibration Chart

Step	Check	Tester	Cal Points	Control Settings	Adjust	Desired Results	Remarks
1	Power Supply Regulators	Voltmeter	C84 (+)	—	R206	+15 Vdc ±50 mV	Ground is C84 (—).
2			C88 (—)			—15 Vdc ±150 mV	
3			C80 (+)			+5V ±250 mV	
	Cover the instrument and allow a 30 minute warm-up. Keep covered as much as possible during calibration.						
4	Amplifier Offset	Voltmeter	Q19 emitter	GEN MODE: TRIG WAVEFORM: ∿	R192	0V ±5 mV	∿ amplifier output.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 5-1. Calibration Chart (Continued)

Step	Check	Tester	Cal Points	Control Settings	Adjust	Desired Results	Remarks
5	Amplifier Offset	Voltmeter	50Ω OUT		R124	0V ± 10mV	
6				AMPLITUDE VARIABLE: max ccw	R156		Repeat steps 5 and 6
7	Time Symmetry	Dual channel scope		GEN MODE: CONT WAVEFORM: ⊓ FREQ: X 1K Dial: 5 Scope time base: 20 μs/div	R32	Time symmetry < 0.1%	Follow procedure in figure 5-1.
8				FREQ: X 100K Dial: .05	R35		Follow procedure in figure 5-1.
9							Repeat steps 6 and 7.
10	VCG Zero			Same as for step 7	R13	Minimum frequency shift while shorting and opening VCG IN BNC to ground	
11	Sine Distortion	Distortion analyzer (with 50Ω termination)		FREQ: X 1K VERNIER: CAL Dial: 5 WAVEFORM: ∿	R68, R71	Distortion < 0.16%	If minimum distortion cannot be met, refer to table 6-1.
12				Dial: 1		Distortion < 0.2%	If adjustment was necessary, repeat step 10.
13				FREQ: X 10K			
14	High Freq Sine Distortion			FREQ: X 1M Dial: 1 WAVEFORM: ⊓	C64	Minimum rise time with minimum overshoot	
15		Spectrum analyzer		WAVEFORM: ∿	None	All harmonics below −32 dB from 1 to 5 MHz	If not, refer to table 6-1.
16	Frequency	Counter		WAVEFORM: ⊓ FREQ: X 10K Dial: 5	R21	50 kHz ±100 Hz	
17				FREQ: X 1M	C22	5 MHz ±20 kHz	Repeat steps 15 and 16.
18				FREQ: X 100K	–C17	500 ±1 kHz	Change C16 if necessary

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 5-1. Calibration Chart (Continued)

Step	Check	Tester	Cal Points	Control Settings	Adjust	Desired Results	Remarks
19	Frequency	Counter	50Ω OUT	FREQ: X 100	None	500 ±10 Hz	
20				FREQ: X 1K		5 kHz ±100 Hz	
21				FREQ: X 10K		50 ±1 kHz	
22	Time Symmetry	Dual channel scope		FREQ: X 10 Scope time base: 0.1s/div	R92	Time symmetry < 0.1%	Follow procedure in figure 5-1.
23	Frequency	Counter		Dial: 5	R88	50 ±0.1 Hz or 20 ms ±40 μs	Change R87 if necessary.
24				FREQ: X .001	None	5 MHz ± 0.3 mHz 189s to 217s.	
25				FREQ: X .01		.05 Hz ± 1 mHz or 20s ± 400ms	
26				FREQ: X .1		0.5 Hz ± 10mHz or 2s ± 40ms	
27				FREQ: X 1		5 Hz ± 100mHz or 0.2s ± 4ms	
28				FREQ: X 1K Dial: 5, 4, 3, 2, 1, .5		Dialed Freq ±100 Hz	
29				FREQ: X 1M Dial: .5, 1, 2, 3, 4, 5		Dialed Freq ± 100kHz	


Remove the four screws attaching the main board to the long standoffs. Put the bottom cover on, but do not insert the screws. Place the instrument on its feet and remove the top cover for sweep board access.

30	Sweep	Oscilloscope	SWP OUT	SWEEP MODE: CONT SWEEP			With SWEEP TIME, set SWP OUT to near 100 Hz. Alternate SWEEP MODE between CONT SWEEP and SWEEP STOP while performing step 31.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 5-1 Calibration Chart (Continued)

Step	Check	Tester	Cal Points	Control Settings	Adjust	Desired Results	Remarks
31	Sweep	Oscilloscope	SWP OUT	No change	Sweep board R12	CONT SWEEP amplitude = SWEEP STOP amplitude ±10 mV	




1. ADJUST OSCILLOSCOPE.

   TRIGGER: INTERNAL AND ALTERNATE
   CHANNEL A: NORMAL
   CHANNEL B: INVERTED

2. ADJUST FREQUENCY DIAL/VERNIER FOR ONE CYCLE ON SCOPE.

3. SWITCH X 10 SWEEP MAGNIFIER ON.

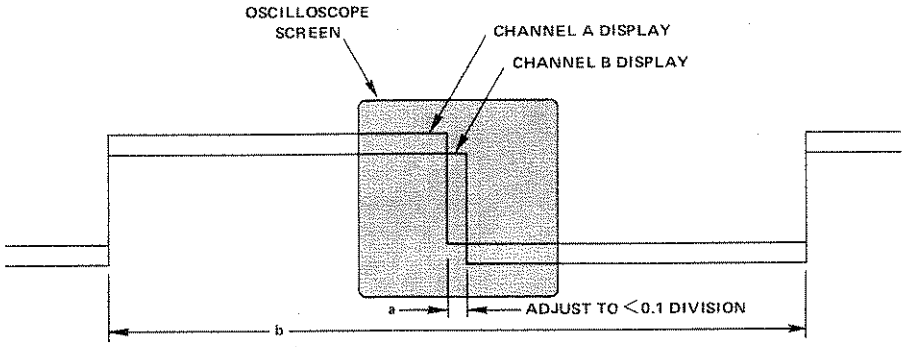

TIME SYMMETRY = 100 a/b%
SPECIFICATION: ±0.1%

Figure 5-1. Time Symmetry Measurement

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 6
TROUBLESHOOTING

6.1 INTRODUCTION

This section is organized as follows:

Circuit Board Access
Basic Techniques
Troubleshooting Individual Components
Troubleshooting Guide

(Refer to paragraph 5.2 for required test equipment.)

NOTE

Wavetek maintains a factory repair department for those customers not possessing the necessary personnel or test equipment to maintain the instrument. If an instrument is returned to the factory for calibration or repair, a detailed description of the specific problem should be attached to minimize turnaround time.

6.2 CIRCUIT BOARD ACCESS

Turn the instrument over, remove the four screws in the bottom cover and remove the bottom cover. For sweep board access, remove the four screws holding the main board to its long standoffs, place the instrument right side up and remove the top cover.

6.3 BASIC TECHNIQUES

Troubleshooting requires no special technique. Listed below are a few reminders of basic electronic fault isolation.

1. Check control settings carefully. Many times a seemingly malfunction is an incorrect control setting, or a knob that has loosened on its shaft.

2. Check associated equipment connections. Make sure that all connections are securely connected to the correct connector.

3. Perform the calibration procedure. Many out-of-specification indications can be corrected by performing specific calibration procedures.

4. Visually check the interior of the instrument. Look for such indications as broken wires, charred components, and loose leads.

6.4 TROUBLESHOOTING INDIVIDUAL COMPONENTS

6.4.1 Transistor

A transistor is defective if more than one volt is measured across its base emitter junction in the forward direction.

A transistor when used as a switch may have a few volts reverse bias voltage.

If the collector and emitter voltages are the same, but the base emitter voltage is less than 500 mV forward voltage (or reversed bias), the transistor is defective.

A transistor is defective if its base current is larger than 10% of its emitter current (calculate currents from voltage across the base and emitter series resistors).

6.4.2 Diode

A diode is defective if there is greater than 1 volt (typically 0.7 volt) forward voltage across it (except Zener and LED).

6.4.3 Operational Amplifier

The "+" and "—" inputs of an operational amplifier will have less than 15 mV voltage difference when operating under normal conditions.

If the output voltage stays at maximum positive, its "+" input voltage should be more positive than its "—" input voltage, or vice versa; otherwise, the operational amplifier is defective.

6.4.4 FET Transistor

No gate current should be drawn by the gate of an FET transistor. If so, the transistor is defective.

The gate-to-source voltage is always reverse biased under a normal operating condition; e.g., the source voltage is more positive than the gate voltage for 2N5485, and the source

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

voltage is more negative than gate voltage for a 2N5462. Otherwise, the FET is defective.

6.4.5 Capacitor

Shorted capacitors have zero volts across their terminals.

Opened capacitor can be located (but not always) by using a good capacitor connected in parallel with the capacitor under test and observing the resulting effect.

6.5 TROUBLESHOOTING GUIDE

Table 6-1 provides a list of possible malfunction symptoms, their probable causes, and the prescribed remedies. Localize the fault to a specific stage by checking the parameters given for the test points. Then check the dc operating voltages at the pins of solid-state devices. Check associated passive elements with a high input impedance ohmmeter (power off) before replacing a suspected semiconductor element.

Table 6-1. Troubleshooting Guide

Symptom	Corrective Procedures
POWER SUPPLY PROBLEM	
Blown fuse	1. Check that the HI/LO and 115/230 switches at the rear panel are set correctly. (Refer to paragraph 2.2.) 2. Replace fuse; if fuse blows again, refer to the following steps. 3. Examine circuit boards and wiring for source of short circuit. 4. Use an ohmmeter to detect possible short circuits between power supply and ground and between individual power supplies. 5. Isolate each part of the circuit by unplugging the sweep board and unsoldering the jumpers along the power supply path. Plug in the sweep board and replace the jumpers one-by-one to isolate the overloading circuit. Frequently, a shorted capacitor is the problem.
±15V supply voltage below normal	Isolate the power supply from most of the generator circuits by unsoldering the two jumpers near the "+" end of C81 on the main circuit board. If supply voltage returns to normal, there is an extra loading current from a generator circuit; otherwise, troubleshoot the power supply circuitry.
±15V supply voltage above normal	Power supply circuit malfunction.
+5V regulator voltage abnormal	Isolate the regulator from generator circuits by unsoldering any leads at E15, E16 and E17. If regulator voltage returns to normal, there is an extra loading current from a generator circuit; otherwise, the trouble is in the regulator. Replace IC10.
Index (lighted indicator) on front panel abnormally bright or dim	HI/LO switch at the rear panel is not set correctly. (Refer to paragraph 2.2.)
OUTPUT WAVEFORM PROBLEM	
No output waveform at 50Ω OUT and PULSE OUT (GEN MODE at CONT)	1. Ensure power supply voltages are normal. 2. Temporarily remove Q44 on main board. If generator runs, problem is in the trigger and gate logic circuit. Otherwise, trouble is in the generator loop.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 6-1. Troubleshooting Guide (Continued)

Symptom	Corrective Procedures
No output waveform at 50Ω OUT, but PULSE OUT normal, or all waveforms greatly distorted	Set the AMPLITUDE VARIABLE full ccw and set WAVEFORM to DC. If the output voltage at 50Ω OUT can be adjusted to ±10V into open circuit with the DC OFFSET control, the problem is in the preamplifier; otherwise, check the output amplifier.
Both waveform amplitude and frequency jittering	1. Power supply out of regulation due to ac line voltage being too low. Check line voltage. Make sure the HI/LO switch setting on rear panel is correct. (Refer to paragraph 2.2.) 2. Power supply malfunction. (Refer to Power Supply Problem.)
Distorted sine and square waveforms, but triangle waveform normal	Sine converter and square shaper malfunction. Check for defective diode. *NOTE* *If a diode is bad, the entire set of eight diodes should be replaced with a new matched set, or select a diode that gives minimum sine distortion at 1 kHz.*
Half of sine and square waveforms missing	1. Defective diodes CR17 or CR21. 2. Defective switch wafer or loose contact of SW3-A and SW3-B.
Distorted triangle and sine waveforms at one particular frequency range	1. Check for defective timing capacitor of the range (C15 thru C23). 2. Check C8 thru C10, C13, C25 and C94, if distortion shown at X 1 MHz range.
Distorted waveform or generator not running when X .001 Hz thru X 10 Hz selected	Capacitance multiplier malfunction.
Sine distortion out of specification at frequency below 500 kHz	1. Square wave time symmetry is not calibrated correctly. 2. Defective component in sine converter and square shaper. *NOTE* *If a diode is bad, the entire set of eight diodes should be replaced with a new matched set, or select a diode that gives minimum sine distortion at 1 kHz.* 3. Resistor R109, R111, R112 or R114 is out of tolerance. Connect 10 kΩ trim potentiometers in locations marked R111 and R112. Adjust the two trim potentiometers and also R68 and R71 to obtain less than 0.16% distortion. Remove the potentiometers, measure the resistance and replace with standard 1/8W resistors. If 0.16% distortion still cannot be achieved, remove both R110 and R113 and connect a 500Ω trim potentiometer in each location. Adjust the two trim potentiometers R68 and R71 for less than 0.16% distortion. Replace potentiometers with standard 1/8W resistors. 4. If sine distortion is OK at 1 kHz, but out of specification at 10 kHz, check for defective C31, C32, C38, Q6 and Q14.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 6-1. Troubleshooting Guide (Continued)

Symptom	Corrective Procedures
Sine distortion out of specification at frequency greater than 500 k Hz	1. Check square wave for slow rise/fall time. If so, check for defective capacitor in the preamplifier and output amplifier. 2. Frequency dial accuracy and sine distortion problems at X 1M range are due to the excess peaking or roll-off of the triangle waveform. Capacitors C28 and C35, also C29 and C34, need to be selected for maximum flatness of the triangle peak voltages at emitter of Q19. To check the flatness of the triangle peak voltage, a high frequency oscilloscope and a X 10 scope probe (> 150 MHz bandwidth) should be used. The oscilloscope probe should be correctly compensated and its ground lead length should keep to minimum. 3. If triangle is distorted, check for defective capacitors C8 thru C10, C13, C25 and C94. 4. Check for defective diodes CR10 or CR11.
TIME SYMMETRY PROBLEM	
Positive slope of triangle remains constant when frequency dial varied	1. Defective Q5, Q6, C9, IC3 and associated circuitry. 2. Defective Q9 thru Q12 and CR6 thru CR9.
Negative slope of triangle remains constant when frequency dial varied	1. Defective IC3 and associated circuitry. 2. Defective Q9 thru Q12 and CR6 thru CR9.
Symmetry cannot be adjusted to specification	Defective Q6, Q14, R33, R34, R40 and R41.
Symmetry worse at low frequency end of dial	Check for high leakage components Q6, Q9 thru Q12 and Q14.
Symmetry out of specification at X 10 frequency range or below	Defective IC6 and associated circuitry.
FREQUENCY ACCURACY PROBLEM	
Frequency accuracy out of specification at X 1 k Hz range	1. Mismatched dial and potentiometer, if frequency is out of specification at the same portion of the dial in every range. Ensure that the number or the back of the dial matches the number on the potentiometer. 2. Defective dial potentiometer. 3. VCG amplifier (IC2) or current source (IC3) is saturated when frequency dial is set to the top (5.0). Check for defective Q1, Q6, IC2 and associated circuitry.
Frequency accuracy out of specification at X 10K and X 100 k Hz ranges	Check for defective C30 thru C33, C38 and R61 thru R66.
Frequency accuracy out of specification at X 1 MHz range	Check for defective C25, C28, C29, C34, C35, R60, R67, CR10 and CR11.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Table 6-1. Troubleshooting Guide (Continued)

Symptom	Corrective Procedures
Frequency accuracy out of specification at X .001 to X 10 Hz ranges	1. R90 and R94 thru R96 are mismatched. Defective R97. 2. Defective IC5, IC6 and associated circuitry. 3. If triangle is distorted when dial is set to the top (5.0), defective regulator Q22 and Q23.
MODE OF OPERATION PROBLEM	
Output not in agreement with GEN MODE switch setting	Trigger and gate logic circuit or IC8 malfunction.
Generator running in trigger or gated mode	If voltage at pin 11 of IC8 is 0 to 0.4V (logic zero) when TRIG mode is selected, the problem is in the trigger amplifier (Q42 thru Q45). Otherwise, troubleshoot IC8, IC9 and associated circuitry.
Generator can be triggered by operating MAN TRIG switch, but not by external signal	Squaring circuit malfunction.
FREQUENCY SWEEP PROBLEM (All components on sweep board)	
Generator frequency not sweeping; no ramp signal at SWP OUT (GEN MODE at SWEEP, SWEEP MODE at CONT SWEEP)	1. If IC1 pins 2 and 3 do not have same voltage level, the buffer amplifier (IC1 and Q6) is bad. 2. Comparator flip-flop (Q7 thru Q10) is bad. 3. Log current source (Q3 thru Q5) is bad.



Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SECTION 7
PARTS AND SCHEMATICS

7.1 DRAWINGS

The following assembly drawings (with parts lists) and schematics are in the arrangement shown below.

7.2 ORDERING PARTS

When ordering spare parts, please specify part number, circuit reference, board, serial number of unit, and if applicable, the function performed.

7.3 ADDENDA


Under Wavetek's product improvement program, the latest electronic designs and circuits are incorporated into each Wavetek instrument as quickly as development and testing permit. Because of the time needed to compose and print instruction manuals, it is not always possible to include the most recent changes in the initial printing. Whenever this occurs, addendum pages are prepared to summarize the changes made and are inserted immediately inside the rear cover. If no such pages exist, the manual is correct as printed.

	Drawing No.
CHASSIS	
Schematic	0004-00-0054
Assembly Drawing	0102-00-0313
Parts List	1101-00-0056
MAIN BOARD	
Schematic	0103-00-0126
Assembly Drawing	0101-00-0126
Parts List	1100-00-0128
SWEEP BOARD	
Schematic	0103-00-0123
Assembly Drawing	0101-00-0123
Parts List	1100-00-0123

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV	ECN	BY	DATE	APP
A	REVISED PER MAR'T-UP	JA	8-4-85	
B	ECN 1719	KB	1478	

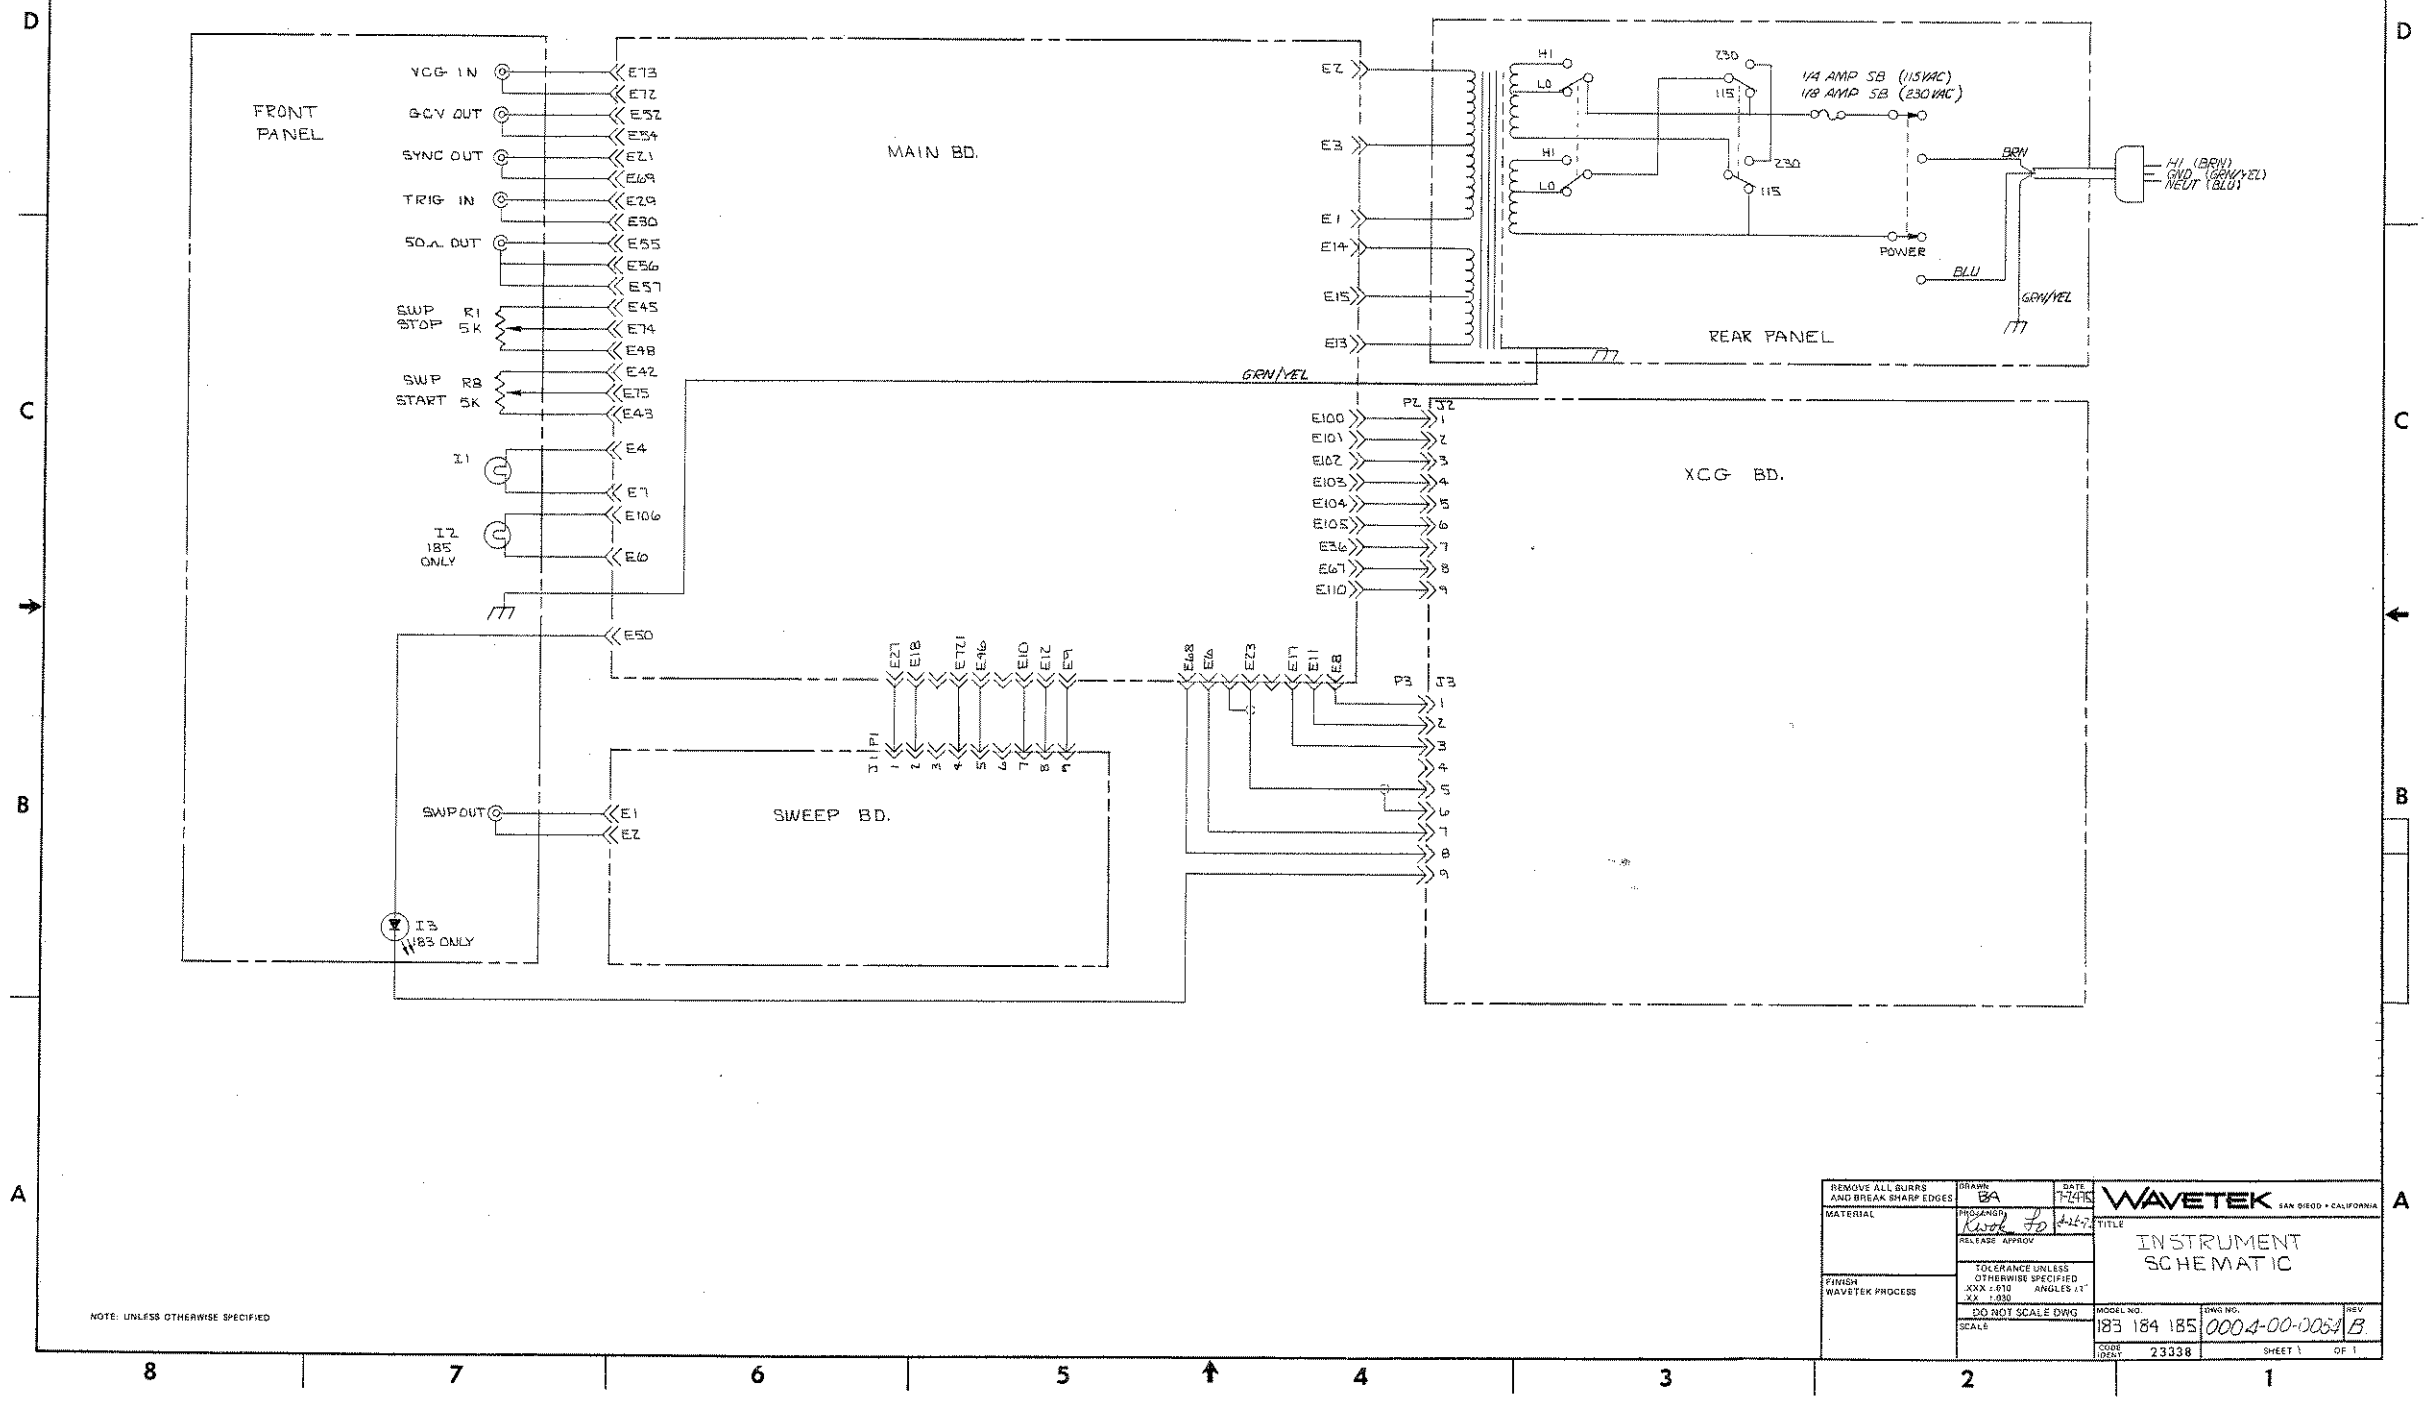

NOTE: UNLESS OTHERWISE SPECIFIED


REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN BA	DATE 7-14-85	WAVETEK SAN DIEGO, CALIFORNIA
MATERIAL	ENGINEER Kirk Fo	8-26-85	TITLE INSTRUMENT SCHEMATIC
FINISH WAVETEK PROCESS	RELEASE APPROV		
	TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ±.010 XX ±.030 ANGLES ±1°		
	DO NOT SCALE DWG	MODEL NO. 183 184 185	DWG NO. 0004-00-0054 REV B
	SCALE	CAGE IDENT 23338	SHEET 1 OF 1


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.


REV	ECN	BY	DATE	APP
A	ECN 1719	RO	5-2-78	

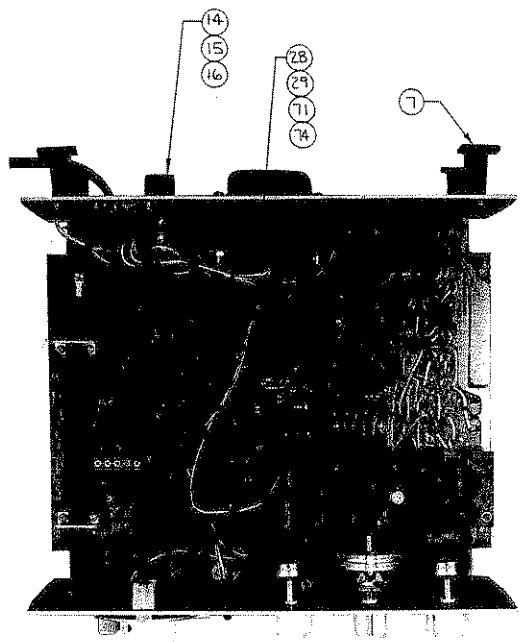


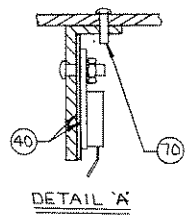


DETAIL 'A'

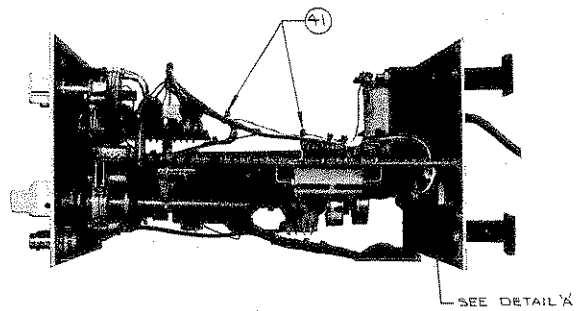


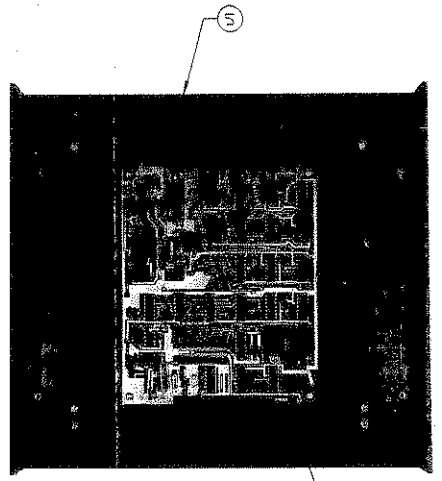


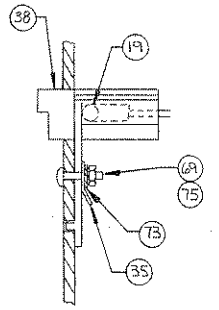


DETAIL 'B'

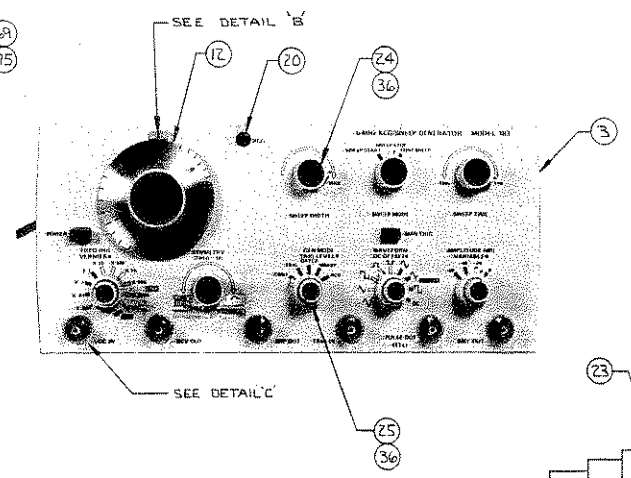

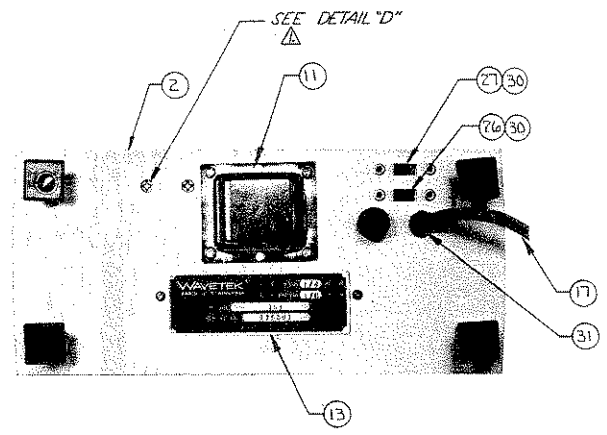

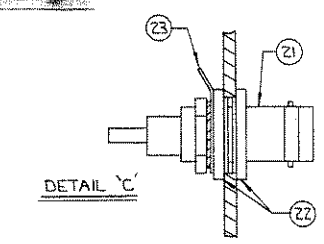

DETAIL 'C'

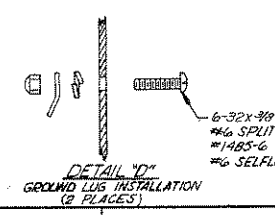

DETAIL "D"
GROUND LUG INSTALLATION
(2 PLACES)

6-32x-3/8 PN.HD.SCREW
#6 SPLIT LOCKWASHER
#1485-6 TEARDROP GND LUG
#6 SELFLOCKING CASTLE NUT

⚠ ALL CONNECTIONS TO BE MECHANICALLY SECURE TO LUGS PRIOR TO SOLDERING GROUND WIRES

NOTE: UNLESS OTHERWISE SPECIFIED

REMOVE ALL BURRS AND BREAK SHARP EDGES	DR'WN BA	DATE 8-4-75	WAVETEK SAN DIEGO • CALIFORNIA
MATERIAL	PROJ'ENGR		TITLE
	RELEASE APPROV		CHASSIS ASSEMBLY
FINISH WAVETEK PROCESS	TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ± .010 ANGLES ± 1 XX ± .030		
	DO NOT SCALE DWG	MODEL NO 184 183	DWG NO 0102-00-0313 REV A
	SCALE	CODE IDENT 23338	SHEET 1 OF 1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV	ECN	BY	DATE	APP

REFERENCE DESIGNATORS	PART DESCRIPTION	DWG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
NONE	ASSY DWG CHASSIS	0102-00-0313	WVTK	0102-00-0313	1
NONE	DIAL ASSY	183-025	WVTK	1201-00-0025	1
NONE	TRANSFORMER	5006-00-0022	WVTK	1204-00-0003	1
NONE	END BELL	110-333	WVTK	1400-00-0170	1
NONE	PLATE,NAME	184-305	WVTK	1400-00-2180	1
NONE	INDICATOR,DIAL	180-303	WVTK	1400-00-4970	1
NONE	COVER,TOP	180-300-1	WVTK	1400-00-5000	1
NONE	EXPANDER	180-301	WVTK	1400-00-5010	2
NONE	POST	180-302	WVTK	1400-00-5020	4
NONE	COVER,BOTTOM	180-300-2	WVTK	1400-00-5030	1
NONE	PANEL,REAR	182-301	WVTK	1400-00-5110	1
NONE	CORD HOLDER	1400-00-5400	WVTK	1400-00-5400	1
NONE	PANEL,FT	1400-00-6730	WVTK	1400-00-6730	1
NONE	LABEL,I.D.	1400-00-6950	WVTK	1400-00-6950	1
NONE	BNC CONN	KC-7946	KING	2100-01-0002	6
NONE	SOLDER LUG	1497	SMITH	2100-04-0012	8
NONE	SOLDER LUG	1485-6	SMITH	2100-04-0025	4
NONE	CONN	60598-8	AMP	2100-05-0017	2

WAVETEK PARTS LIST	TITLE STD CHASSIS	ASSEMBLY NO. 1101-00-0056 PAGE: 1	REV A

REFERENCE DESIGNATORS	PART DESCRIPTION	DWG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
NONE	STD KNOB	KB-67-1-88-K	HUGAN	2400-01-0008	4
NONE	CDAX KNOB SET	KB-67-1-88+0-K-9	HUGAN	2400-01-0009	4
NONE	LAMP	CM7-7876	CHMIN	2400-02-0013	1
NONE	FUSE,125V,1/4A,SB	313.250	LITFU	2400-05-0008	1
NONE	FUSE HOLD	345001	LITFU	2400-05-0012	1
NONE	BUSHING NYLINER	6L2FP	THOMN	2800-01-0002	8
NONE	STANDOFF	1475-M03-F05-B3Z	UNICP	2800-02-0010	4
NONE	STANDOFF	1495-M03-F05-000	UNICP	2800-02-0011	8
NONE	RAIL ASSY W/FT	180-500	WVTK	2800-08-0010	1
NONE	SPEEDNUT,SELF RETAIN	C7498-632-8	TINNM	2800-09-0003	6
NONE	WASHER,SHOULDER	266A	SMITH	2800-27-0004	12
NONE	STRAIN RELIEF BUSH	SWBH-1	HEYCO	2800-37-0003	1
NONE	SW ASSY SLIDE DPDT	SW822-PT-MK	UID	5105-00-0001	1
NONE	SWITCH ASSY SLIDE	46256-LF	SACFT	5105-00-0002	1
NONE	SOLDER GUARD	46256-LF-SG	SACFT	5105-09-0001	2
NONE	PWR CORD	0-7759-06B-GY	PALMS	6001-80-0004	1

WAVETEK PARTS LIST	TITLE STD CHASSIS	ASSEMBLY NO. 1101-00-0056 PAGE: 2	REV A


REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN	DATE	WAVETEK SAN DIEGO, CALIFORNIA
MATERIAL	PROJ MGR		TITLE PARTS LIST CHASSIS
	RELEASE APPROV		
FINISH WAVETEK PROCESS	TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 ANGLES ±1° .XX ±.030		
	DO NOT SCALE DWG	MODEL NO. 184	DWG NO. 1101-00-0056 REV A
	SCALE	CODE IDENT 23338	SHEET OF

NOTE: UNLESS OTHERWISE SPECIFIED


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV	ECN	BY	DATE	APP

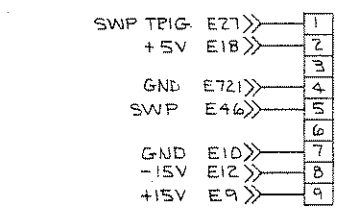


P1 TO SWEEP BD.
ALL MODELS

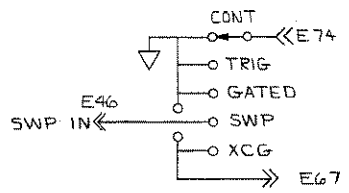


SW4 - A

GEN MODE SWITCH
MODEL 183

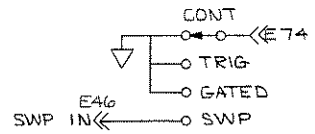


SW4 - A

GEN MODE SWITCH
MODEL 184

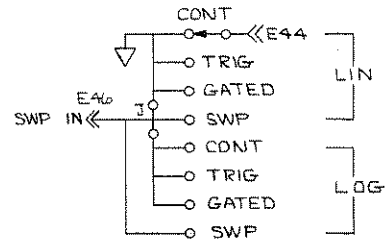


SW4 - A


GEN MODE SWITCH
MODEL 185

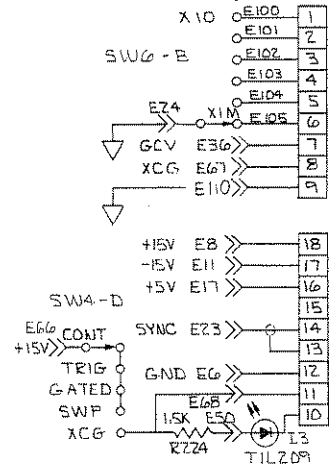


CONNECTORS TO XCG BD.
183 ONLY

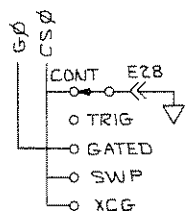

SW4-C

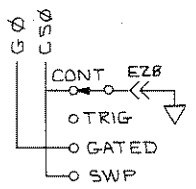

SW4-C

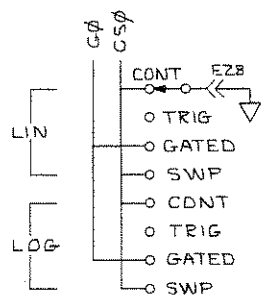

SW4-C

NOTE: UNLESS OTHERWISE SPECIFIED

REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN	DATE 5-6-75	WAVETEK SAN DIEGO, CALIFORNIA
MATERIAL	PROJ ENGR		TITLE: SCHEMATIC MAIN BOARD
	RELEASE APPROV		
FINISH WAVETEK PROCESS	TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 ANGLES ±1° .XX ±.020		
	DO NOT SCALE DWG	MODEL NO 183,184,185	DWG NO 0103-00-0126 REV H
	SCALE	CODE IDENT 23338	SHEET 2 OF 5

0103-00-0126

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV	FCN	BY	DATE	APP
A	REVISED [illegible]	[illegible]	[illegible]	
B	REVISED PER [illegible]	[illegible]	6-78	
C	REVISED PER MARK UP	[illegible]	7-78	
D	REVISED PER MARK UP	RO	8-78	

SEE SHEET 2

SWP INPUT
SWP NULL
SWP STOP
185 ONLY
SWEEP INVERTING AMPLIFIER
SWEEP START
+15V ONLY
VCG AMPL
VCG IN
FREQ VERNIER
TOP LIN
TOP LOG
JUMPER 183/184
LOG CONVERTER 185 ONLY
GEN MODE
FREQ Hz
GCV AMPL
GCV OUT
SYM
IC3 CA3096AE
CURRENT SOURCE
BOT SYM
IN
IT
REGULATOR
TIMING CAPACITORS
N TRIG
N AMPL
SINE DIST
HYSTERESIS SWITCH
CAP MULTIPLIER
CURRENT SWITCH
IP C7
IN C7
IC4 CA3054
SW6-A
SW6-B
SW6-C
SW6-D
SW6-E
SW5
SWS
LCW
CCW
X1M
50 Hz ADJ

R90, R92, R95, R96 ARE MATCHED SET
NOTE: UNLESS OTHERWISE SPECIFIED * MATCHED PAIR

REF DES NOT USED
R138 CR44 C12
K45

LAST REF USED
C94
FZ27
Q53
CR45
IC12

H	#1926	[illegible]ttonwich	2-27-79
G	ECN 1719	RO	6-278
F	ECN 1904 & 05	RO	6-4-77
NOTE	DOC 1484	RO	8-2-76
E	ECN 1421	RO	5/10/76

REMOVE ALL BURRS AND BREAK SHARP EDGES
MATERIAL
FINISH WAVETEK PROCESS
DRAWN RO DATE 5-675
ENGINEER [illegible]
RELEASE APPROV
TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 ANGLES ±1° .XX ±.030
DO NOT SCALE DWG
SCALE

WAVETEK SAN DIEGO, CALIFORNIA

TITLE: SCHEMATIC MAIN BOARD

MODEL NO. 183 184 185 | DWG NO. 0103-00-0126 | REV H
CODE IDENT 23338 | SHEET 1 OF 3

0103-00-0126

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION WHICH IS THE PROPERTY OF WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

SINE CONVERTER

PREAMPLIFIER

SQUARING CIRCUIT

TRIGGER AND GATE LOGIC

TTL SYNC PULSE GENERATOR

5V REGULATOR

± 15V POWER SUPPLY

OUTPUT AMPLITUDE

* FD TTT MATCHED SET OF 8

NOTE: UNLESS OTHERWISE SPECIFIED

△ MATCHED PAIR

REMOVE ALL BURRS AND BREAK SHARP EDGES

FINISH: WAVETEK PROCESS

MATERIAL:

TOLERANCE UNLESS OTHERWISE SPECIFIED: .XX ± .010, .XXX ± .005, ANGLES ±1°

DO NOT SCALE DWG

DRAWN

PROTOTYPE

RELEASE APPROV

DATE 5/6/85

MODEL NO. 183 184 185

DWG NO. 0103-00-0126

REV H

CODE IDENT 23338

SHEET 2 OF 5

TITLE SCHEMATIC MAIN BOARD

WAVETEK SAN DIEGO, CALIFORNIA


0103-00-0126

REV | ECN | BY | DATE | APP

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

E721 WAS E72
E481 " E48
E521 " E52
E111 WAS E9
E110 ADDED TO
HOLE UNDER E721

REV	ECN	BY	DATE	APP
A	REVISED PER ENG. MARK-UP	BA	8-4-15	
B	ECN 1521	RO	2-18-9	
C	ECN 1604/1408	RO	4-4-77	
D	ECN 1719	RO	5/2/78	

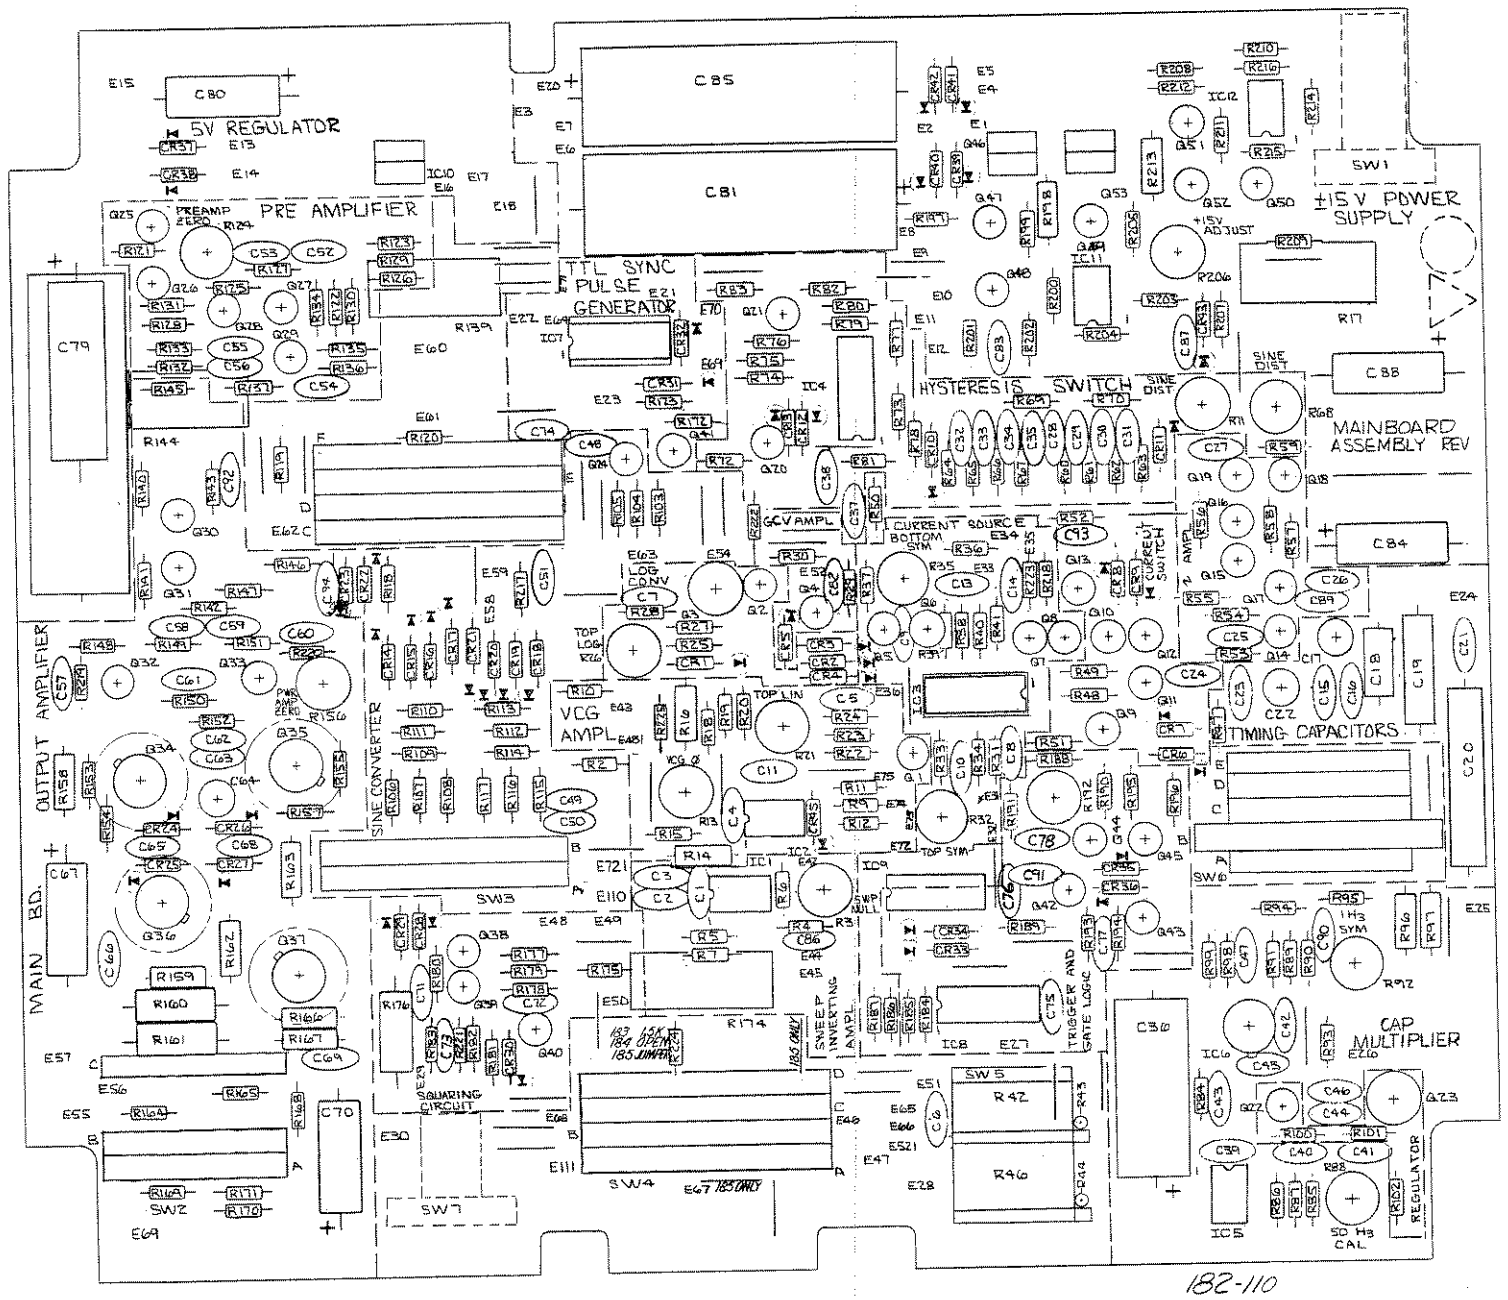

2. SOLDER R227 AT E7 LOCATION ON 183, 184 & 185 ADD R226 AT E111 ON MODEL 185.

1. 9 PIN MOLEX TO CRYSTAL BD TO BE WIRED BACKWARDS SO THAT BROWN WIRE IS PIN 9 AND WHITE WIRE IS PIN 1.


MARK REVEL 2-2304C

DRAWN BA	DATE 7-14-75	WAVETEK
CHECKED		TITLE SILKSCREEN ASSEMBLY PRINT (MAIN BOARD)
RELEASE APPROV		
SCALE 2/1	MODEL NO. 183 184 185	DWG NO. 0101-00-0126 REV D
	23338	SHEET 1 OF 2


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.


REV	ECN	BY	DATE	APP

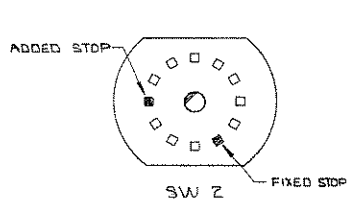


SW 2
5104-99-0004
(MADE FROM 5104-01-0003)

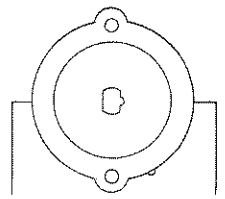


SW2-A
5104-02-0013

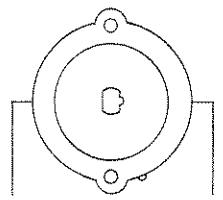


SW2-B
5104-02-0013

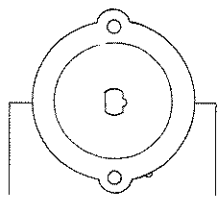


SW2-C
5104-02-0013

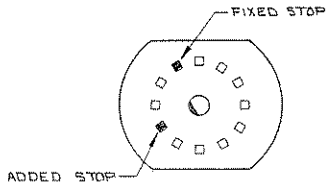


SW3
5104-99-0044
(MADE FROM 5104-01-0007)

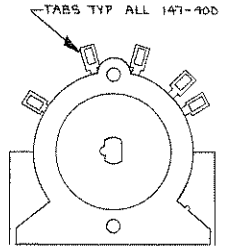


SW3-A
5104-02-0015

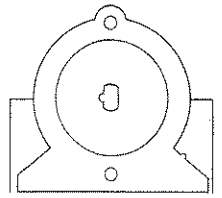


SW3-B
5104-02-0015

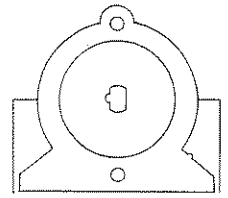


SW3-C
5104-02-0015

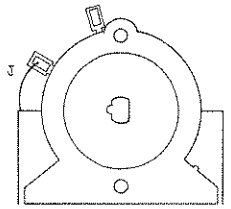

SW3-D
5104-02-0015

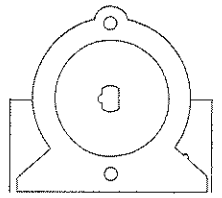


SW3-E
5104-02-0015

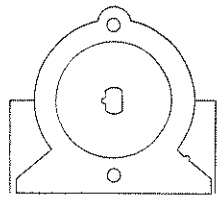


SW3-F
5104-02-0015

MODEL 185 ONLY

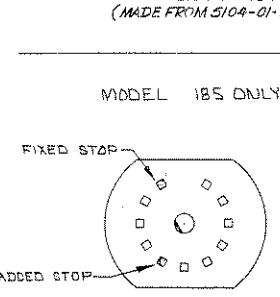


SW4
5104-99-0016
(MADE FROM 5104-99-0042)

MODEL 184 ONLY

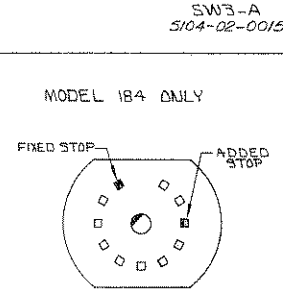


SW4
5104-99-0015
(MADE FROM 5104-99-0042)


MODEL 183 ONLY

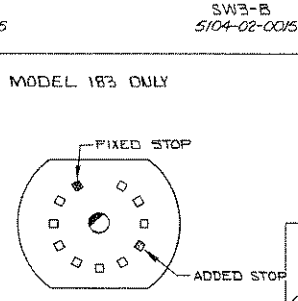


SW4

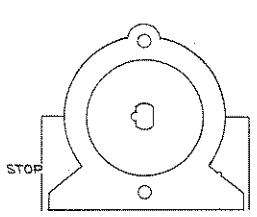


SW4-A
5104-02-0015

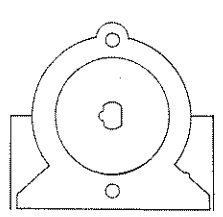


SW4-B
5104-02-0015

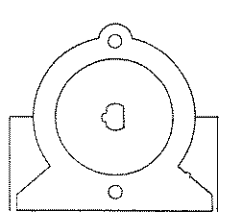


SW4-C
5104-02-0015

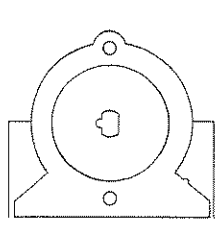

SW4-D
5104-02-0015

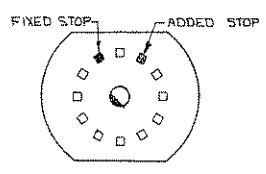


SW6
5104-99-0023
(MADE FROM 5104-01-0007)

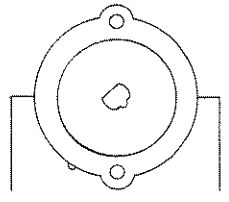


SW6-A
5104-02-0013


-185 ONLY

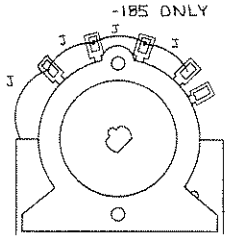


SW6-B
5104-02-0015
(142 - SW1-1
184 - ONLY)

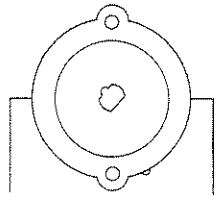

SW6-C
5104-02-0013

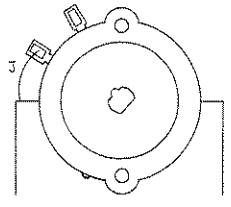


SW6-D
5104-02-0008

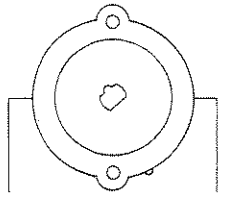

SW6-E
5104-02-0013

NUMBERS ON TAB INDICATE WIRE COLOR
MODEL 183 ONLY

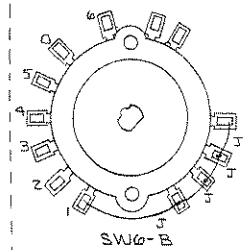

SW6-B
T105

2. DETENTS & WAFERS ARE THE SAME FOR ALL MODELS EXCEPT AS INDICATED.
1. ALL DETENTS & WAFERS ARE SHOWN FROM FRONT VIEW IN FULL COUNTER CLOCKWISE POSITION.

NOTE: UNLESS OTHERWISE SPECIFIED

REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN BA	DATE 6/6/75	WAVETEK SAN DIEGO, CALIFORNIA
MATERIAL	PROJ ENGR		TITLE: SWITCH DWG MAIN BOARD
	RELEASE APPROV		
FINISH WAVETEK PROCESS	TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 ANGLES ±1° .XX ±.030		
	DO NOT SCALE DWG		MODEL NO. 183-184-185
	SCALE		DWG NO. 0101-00-0126 REV 0
			CODE IDENT 23338 SHEET 2 OF 2

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV	ECN	BY	DATE	APP

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
NONE	ASSY DWG MAIN	0101-00-0126	WVTK	0101-00-0126	1
NONE	SCHEMATIC MAIN	0103-00-0126	WVTK	0103-00-0126	1
NONE	O.C.DWG MAIN	0107-00-0126	WVTK	0107-00-0126	1
NONE	HEAT	131-305	WVTK	1400-00-1673	1
NONE	SPACER	140-306	WVTK	1400-00-2123	2
IB5	SPRING REF:3200-01-0001	147-343	WVTK	1400-00-3750	1
NONE	HEAT SINK	182-309	WVTK	1400-00-5185	2
IB2	MOD,POWER	182-609	WVTK	1400-00-5190	1
NONE	HEAT,POWER MOD	182-310	WVTK	1400-00-5383	2
C59 C62 C63 C92	CAP,CER,5PF,1KV	00-050	CKL	1500-00-5011	4
C20 C28 C35E C74 C76	CAP,CER,100PF,1KV	00-130	CKL	1500-01-0011	5
C31 C32 C42 C75 C93	CAP,CER,100PF,1KV	00-101	CKL	1500-01-0111	5
C10 C15 C21 C34 C47	CAP,CER,.001MF,1KV	00-102	CKL	1500-01-0211	5
C11 C26 C27 C57 C90 C91 C96 C98 C99 C100 C50 C52 C53 C54 C55 C56 C58 C59 C61 C65 C68 C72 C77 C80 C83 C87 C89 C94 C95 C96 C98	CAP,CER,.01MF,50V	CK-103	CKL	1500-01-0311	30
C69 C97 C00 C66 C69	CAP,CER,.1MF,200	CK20-104	CKL	1500-01-0411	7

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-0126 — PAGE: 1 — REV E

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
	CAP SET,POLYC MIXED MATCHED SET	160-501-101	WVTK	1509-80-0008	1
C18	CAP,POLYC,.01MF,100V PART OF 1509-80-0008 QTY(1)				
C19	CAP,POLYC,.1MF,100V PART OF 1509-80-0008 QTY(1)				
C20	CAP,POLYC,1MF,100V PART OF 1509-80-0008 QTY(1)				
	MAIN	182-110	WVTK	1700-00-0126	1
	CONN,VPIN	09-50-7091	MOLEX	2100-02-0091	1
	SKT,IC,14PIN	14-DIP	CINCH	2100-03-0011	1
	SKT,IC,16PIN	16-DIP	CINCH	2100-03-0022	1
	SOLDER LUG	1047	SMITH	2100-00-0012	2
	PIN	08-50-0105	MOLEX	2100-04-0025	9
	HEAT SINK	HS-207	AAVE	2800-11-0001	4
	TWNSIPAD	10233A	PHLPS	2800-11-0003	1
	TRANSIPAD	10260	PHLPS	2800-11-0004	4
	POT,TRIM,100	91AW100	BECK	4600-01-0103	2

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-0126 — PAGE: 3 — REV E

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
	RES,MF,1/8W,1%,1K	RN55D-1001F	IRC	4701-03-1001	12
	RES,MF,1/8W,1%,10K	RN55D-1002F	IRC	4701-03-1002	5
	RES,MF,1/8W,1%,100K	RN55D-1003F	IRC	4701-03-1003	1
	RES,MF,1/8W,1%,10	RN55D-10R0F	IRC	4701-03-1009	3
	RES,MF,1/8W,1%,1.1K	RN55D-1101F	IRC	4701-03-1101	1
	RES,MF,1/8W,1%,1.21K	RN55D-1211F	IRC	4701-03-1211	2
	RES,MF,1/8W,1%,120	RN55D-1200F	IRC	4701-03-1200	2
	RES,MF,1/8W,1%,15K	RN55D-1502F	IRC	4701-03-1502	4
	RES,MF,1/8W,1%,150	RN55D-1500F	IRC	4701-03-1500	1
	RES,MF,1/8W,1%,1.5K	RN55D-1501F	IRC	4701-03-1501	9
	RES,MF,1/8W,1%,15K	RN55D-1502F	IRC	4701-03-1502	7
	RES,MF,1/8W,1%,15	RN55D-15R0F	IRC	4701-03-1509	4
	RES,MF,1/8W,1%,17.7K	RN55D-1772F	IRC	4701-03-1772	1
	RES,MF,1/8W,1%,19.1K	RN55D-1912F	IRC	4701-03-1912	2
	RES,MF,1/8W,1%,200	RN55D-2000F	IRC	4701-03-2000	2
	RES,MF,1/8W,1%,2K	RN55D-2001F	IRC	4701-03-2001	9
	RES,MF,1/8W,1%,21.5	RN55D-21R5F	IRC	4701-03-2159	1

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-0126 — PAGE: 5 — REV E

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
C70 C76					
C4 C45	CAP,CER,15PF,1KV	00-150	AMCO	1500-01-5011	2
C25I	CAP,CER,22PF,1KV	00-220	AMCO	1500-02-2011	1
C5 C71 C91	CAP,CER,33PF,1KV	00-330	AMCO	1500-03-3011	3
C10 C30 C33	CAP,CER,47PF,1KV	00-470	AMCO	1500-04-7011	3
C24 C34	CAP,CER,68PF,1KV	00-680	AMCO	1500-05-6001	2
C51	CAP,CER,68PF,1KV	00-680	CKL	1500-06-8001	1
C8	CAP,CER,680PF,1KV	00-681	AMCO	1500-06-8111	1
C23	CAP,MICA,.47PF,500V	DM15-470J	AMCO	1500-14-7000	1
C15	CAP,MICA,820PF,500V	DM15-821J	AMCO	1500-18-2000	1
C14	CAP,MICA,820PF,500V	DM15-821J	AMCO	1500-18-2101	1
C67 C78 C88 C38 C66	CAP,ELECT,100MF,16V	5300107601ADC7	SPRAG	1500-31-0101	5
C81 C85	CAP,ELECT,1000MF,35V	39D108G035GL6	SPRAG	1500-31-0212	2
C79	CAP,ELECT,250MF,16V	500D257U16DP7	SPRAG	1500-32-5101	1
C36	CAP,MYLAR,2MF,200V	2MA205A	AMRAD	1500-42-0504	1
C60	VARI,3.5-14PF,250V	78-TM14U-02 3.5/13PF	TKIKO	1500-51-3000	1
C17 C22	VARI,7-35PF,250V	78-TM1KU-02 7/35 PF	TKIKO	1500-53-5000	2

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-012A — PAGE: 2 — REV E

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
	POT,CONT,1K	180-401	WVTK	4600-01-0207	1
	POT,TRIM,1K	91AW1K	BECK	4600-01-0209	5
	POT,CONT,10K	182-401	WVTK	4600-01-0312	2
	POT,TRIM,100K	91AW104	BECK	4600-01-0402	3
	POT,TRIM,20	91AW20	BECK	4600-02-0000	1
	POT,TRIM,2K	91AW2K	BECK	4600-02-0201	1
	POT,8MTCH,20K	OPA807-20K	WVTK	4602-32-0302	1
	POT,CONT,10K FROM#4A06-01-0307	4609-71-0313	WVTK	4609-71-0313	1
	RES,C,1/2W,5%,1W	RC20GF-100	STKPL	4700-25-0100	2
	RES,C,1/2W,5%,3.9	RC20GF-3R9	STKPL	4700-25-0399	2
	RES,C,1/2W,5%,8.2	RC20GF-8R2	STKPL	4700-25-0829	2
	RES,C,1/2W,5%,10M	RC20GF-106	STKPL	4700-25-1005	1
	RES,C,1/2W,5%,1.6M	RC20GF-165	STKPL	4700-25-1604	1
	RES,C,1/2W,5%,220	RC20GF-221	STKPL	4700-25-2200	1
	RES,C,1/2W,5%,3.9M	RC20GF-395	STKPL	4700-25-3904	1
	RES,C,1M,10%,10K	RC32GF-103	STKPL	4700-35-1002	1
	RES,MF,1/8W,1%,106	RN55D-1000F	IRC	4701-03-1000	14

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-012B — PAGE: 4 — REV E

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
	RES,MF,1/8W,1%,249	RN55D-2490F	IRC	4701-03-2490	5
	RES,MF,1/8W,1%,2.49K	RN55D-2491F	IRC	4701-03-2491	8
	RES,MF,1/8W,1%,24.9K	RN55D-2492F	IRC	4701-03-2492	5
	RES,MF,1/8W,1%,3.01K	RN55E-3011F	IRC	4701-03-3011	2
	RES,MF,1/8W,1%,316	RN55D-3160F	IRC	4701-03-3160	3
	RES,MF,1/8W,1%,3.16K	RN55D-3161F	IRC	4701-03-3161	1
	RES,MF,1/8W,1%,3.32K	RN55D-3321F	IRC	4701-03-3321	8
	RES,MF,1/8W,1%,33.2	RN55D-33R2F	IRC	4701-03-3329	6
	RES,MF,1/8W,1%,392	RN55D-3920F	IRC	4701-03-3920	1
	RES,MF,1/8W,1%,39.2	RN55D-39R2F	IRC	4701-03-3929	1
	RES,MF,1/8W,1%,40.2K	RN55D-4022F	IRC	4701-03-4022	3
	RES,MF,1/8W,1%,9.53K	RN55D-4752F	IRC	4701-03-4321	1
	RES,MF,1/8W,1%,4.64K	RN55D-4641F	IRC	4701-03-4641	2
	RES,MF,1/8W,1%,49.9	RN55D-49R9F	IRC	4701-03-4909	2
	RES,MF,1/8W,1%,499	RN55D-4990F	IRC	4701-03-4990	10
	RES,MF,1/8W,1%,4.99K	RN55D-4991F	IRC	4701-03-4991	14
	RES,MF,1/8W,1%,51.1	RN55D-51R1F	IRC	4701-03-5119	2

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-012H — PAGE: 6 — REV F

NOTE: UNLESS OTHERWISE SPECIFIED

REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN	DATE	WAVETEK SAN DIEGO, CALIFORNIA
MATERIAL	PROJ ENGR		TITLE: PARTS LIST MAIN BD
	RELEASE APPROV		
FINISH WAVETEK PROCESS	TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 .XX ±.030 ANGLES ±1°		
	DO NOT SCALE DWG		MODEL NO. 184 — DWG NO. 1100-00-0128 — REV E
	SCALE		CODE IDENT 23338 — SHEET 1 OF 2

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON, EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV	ECN	BY	DATE	APP

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
	RES,MF,1/8W,1%,523	RN55D-5230F	TRW	4701-03-5230	2
	RES,MF,1/8W,1%,56.2	RN55D-56R2F	TRW	4701-03-56R2	1
	RES,MF,1/8W,1%,576	RN55D-5760F	TRW	4701-03-5760	2
	RES,MF,1/8W,1%,5.76K	RN55D-5761F	TRW	4701-03-5761	1
	RES,MF,1/8W,1%,6.19K	RN55D-6191F	TRW	4701-03-6191	1
	RES,MF,1/8W,1%,61.9	RN55D-61R9F	TRW	4701-03-61R9	2
	RES,MF,1/8W,1%,6.98K	RN55D-6981F	TRW	4701-03-6981	1
	RES,MF,1/8W,1%,750	RN55D-7500F	TRW	4701-03-7500	1
	RES,MF,1/8W,1%,7.5K	RN55D-7501F	TRW	4701-03-7501	6
	RES,MF,1/8W,1%,825	RN55D-8250F	TRW	4701-03-8250	3
	RES,MF,1/8W,1%,8.25K	RN55D-8251F	TRW	4701-03-8251	2
	RES,MF,1/8W,1%,8.87K	RN55D-8871F	TRW	4701-03-8871	1
	RES,MF,1/8W,1%,909	RN55D-9090F	TRW	4701-03-9090	1
	RES,MF,1/8W,1%,9.53K	RN55D-9531F	TRW	4701-03-9531	2
	RES,MF,1/8W,1%,97R	RN55D-97R0F	TRW	4701-03-97R0	1
	RES,MF,1/8W,1%,12R	RN60D-12R0F	TRW	4701-15-1240	2
	RES,MF,1/2W,1%,100	RN65D-1000F	TRW	4701-23-1000	2

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-0128 — PAGE: 7 — REV E

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
	TRANS	2N2905A	NSC	4901-02-4051	2
	TRANS	2N3565	FAIR	4901-03-5640	3
	TRANS	2N5138A	CENTR	4901-03-5141	1
	TRANS	2N3640	FAIR	4901-03-6000	5
	TRANS	2N3642	FAIR	4901-03-6020	4
	TRANS	2N3906	NSC	4901-03-6060	3
	TRANS	2N3963	NSC	4901-03-9030	4
	TRANS	2N5088	FAIR	4901-04-2080	3
	TRANS	2N5139	FAIR	4901-05-1390	13
	TRANS	2N5682	MOT	4901-05-6820	1
	TRANS	TIP-29	TI	4902-00-0298	1
	TRANS	TIP-30	TI	4902-00-0300	1
	TRANS,MPSW,2N5139 OPT121&901-05-1390	TE0-901-NR	WVTK	4904-00-0005	3
	TRANS,MPSW,2N5465 OPT121&901-05-4350	142-501-43	WVTK	4904-00-0009	1
	SWITCH ASSY PB	5103-00-0020	WVTK	5103-00-0005	1
	SWITCH ASSY PB	5103-00-0021	WVTK	5103-00-0021	1

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-0128 — PAGE: 4 — REV E

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
	RES,SEL,2-10K,1/8W OPT121&701-03-1002	142-501-64A	WVTK	47d9-00-0019	1
	RES,MF,MIXED SET	16W-501-49A	WVTK	4789-00-0036	1
NONE	RES,MF,1/8W,1%,1K PART OF 4789-00-0036 QTY(1)				
NONE	RES,MF,1/8W,1%,10K PART OF 4789-00-0036 QTY(1)				
NONE	RES,MF,1/8W,1%,100K PART OF 4789-00-0036 QTY(1)				
NONE	RES,MF,1/8W,1%,1M PART OF 4789-00-0036 QTY(1)				
	DIODE	1N4581	MICRO	4801-01-4581	1
	DIODE	SCE-1	SEMI	4801-02-0001	6
	DIODE	FD-777	FAIR	4807-02-0777	8
	DIODE	FD-6666	FAIR	4807-02-6666	21
	DIODE,SEL,M-FD-777 OPT121&807-02-0777	162-500-96	WVTK	4898-00-0010	1
	TRANS	2N2219A	NSC	4901-02-2191	2

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-0128 — PAGE: 8 — REV E

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
	DFTENT	130-402	WVTK	5104-01-0003	1
	WAFER	133-SM1-1	WVTK	5104-02-0001	1
	WAFER	132-SM1-1	WVTK	5104-02-0013	2
	WAFER	137-400	WVTK	5104-02-0015	10
	DFTENT,MOD FROM:5104-01-0003	5104-94-6042	WVTK	5104-99-0042	1
	DFTENT MOD FROM:5104-01-0010	5104-94-6048	WVTK	5104-99-0048	2
	IC	LM 301AH	NSC	7000-03-0130	2
	IC	MA-741	FAIR	7000-07-0180	2
	IC	CA-3054	RCA	7000-40-5400	1
	IC	CA-3094AE	RCA	7000-50-9400	1
	IC	CA-5130	RCA	7000-51-1300	1
	IC	7406	TI	8000-74-0000	1
	IC	74LS00	TI	8000-74-0010	1
	IC	74LS74	TI	8000-74-7410	1
	VOLTAGE REGULATOR	7805393	FAIR	8000-7A-0500	1

WAVETEK PARTS LIST — TITLE: MAIN — ASSEMBLY NO. 1100-00-0128 — PAGE: 10 — REV E


NOTE: UNLESS OTHERWISE SPECIFIED

REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN	DATE	WAVETEK SAN DIEGO, CALIFORNIA
MATERIAL	PROJ ENGR		TITLE: PARTS LIST MAIN BD
	RELEASE APPROV		
FINISH WAVETEK PROCESS	TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 ANGLES ±1° .XX ±.030		MODEL NO. 184 — DWG NO. 1100-00-0128 — REV. E
	DO NOT SCALE DWG		CODE IDENT 23338 — SHEET 2 OF 2
	SCALE		

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV	DESCRIPTION	BY	DATE	APP
A	ECN	RD	5-77	

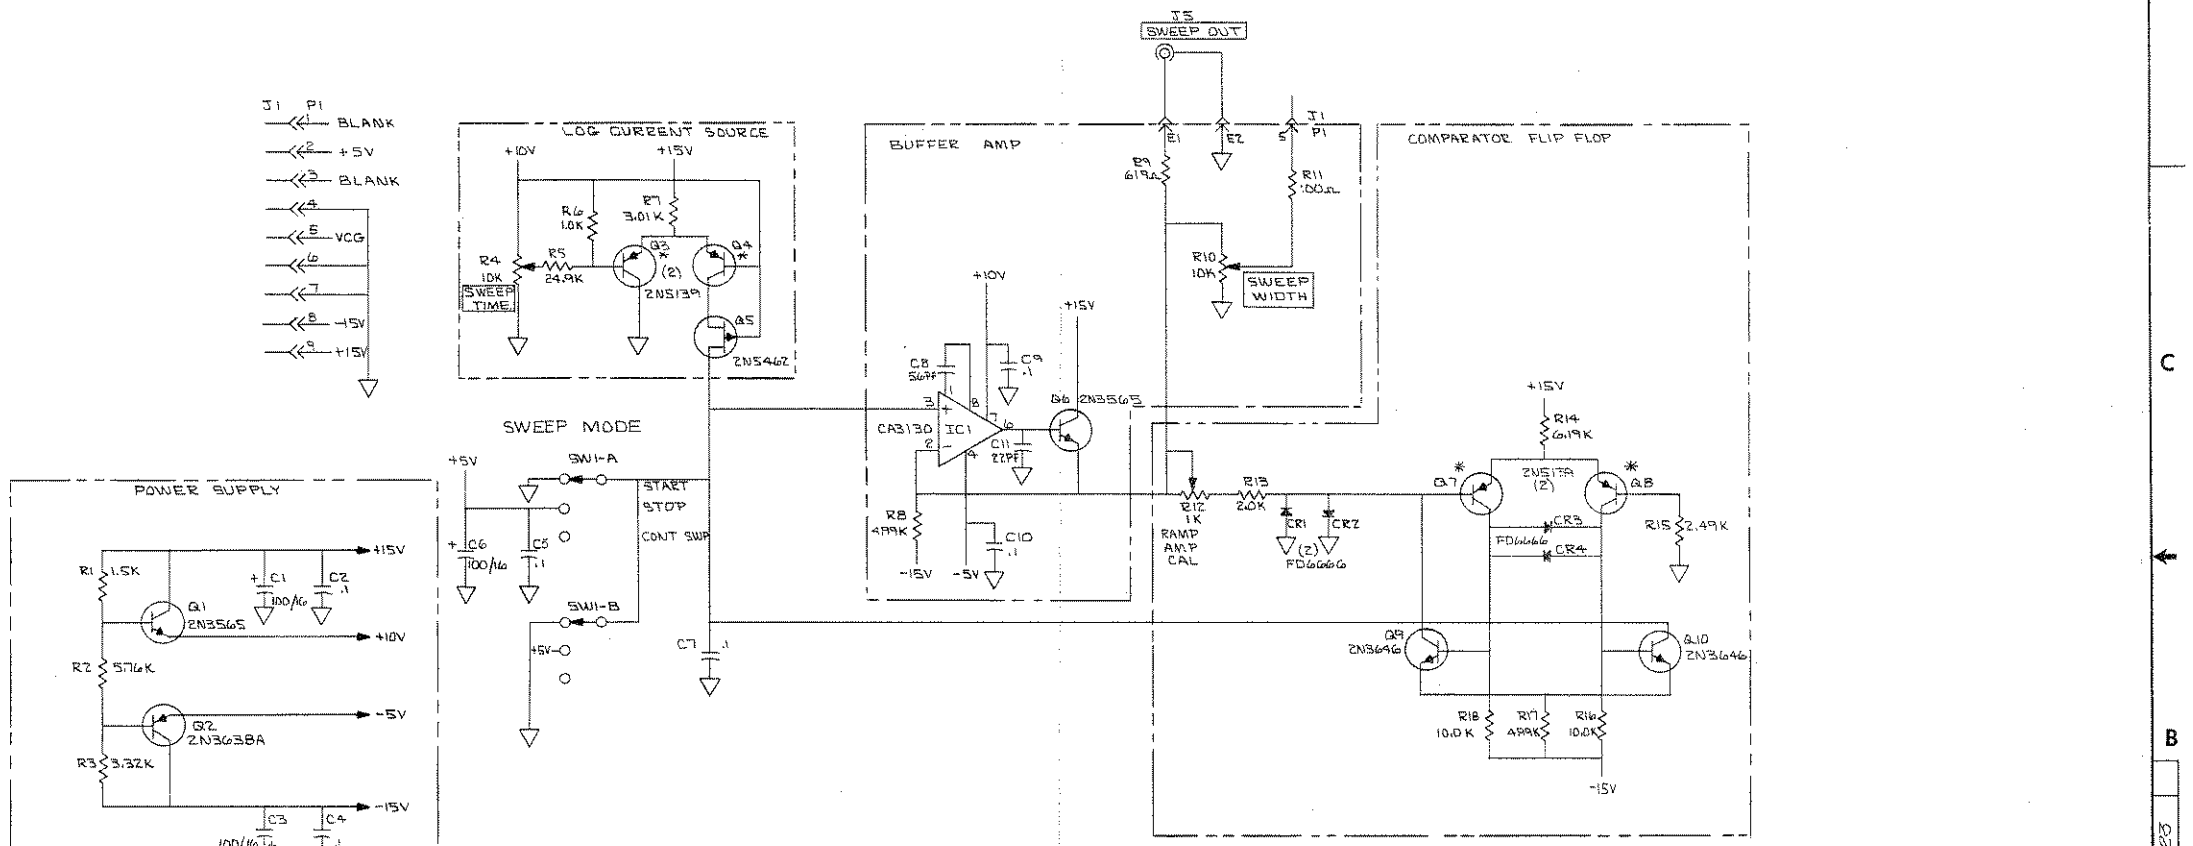

1. * MATCHED PAIR.


NOTE: UNLESS OTHERWISE SPECIFIED

LAST DES USED
R18
CR4
Q10
IC1
SW1


REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN BA	DATE 9-1-75	WAVETEK SAN DIEGO • CALIFORNIA
MATERIAL	PROJ ENGR Kurt Bo	RELEASE APPROV	TITLE SCHEMATIC SWEEP BOARD
FINISH WAVETEK PROCESS	TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 .XX ±.030 ANGLES ±1°		
	DO NOT SCALE DWG	MODEL NO. 183-184	DWG NO. 0103-00-0123 REV A
	SCALE	CODE IDENT 23338	SHEET 1 OF 1


0103-00-0123

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

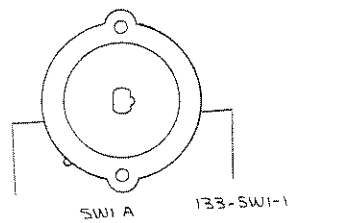

DETENT SHOWN FROM FRONT IN FULL COUNTER-CLOCKWISE POSITION

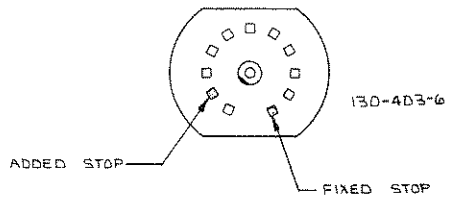

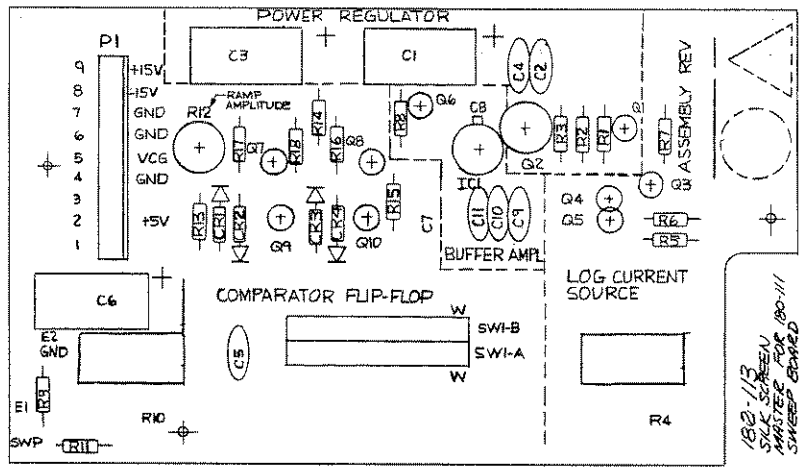

DRAWN BA	DATE 4-27-78	WAVETEK SAN DIEGO, CALIF.	
ENGR		TITLE	
RELEASE APPROV		SILKSCREEN ASSEMBLY PRINT (SWEEP B.D)	
TOLERANCE			
SCALE		MODEL NO. 183-184	DWG NO. 0101-00-0123 REV A
		23338	SHEET 1 OF 1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV	ECN	BY	DATE	APP

REFERENCE DESIGNATIONS	PART DESCRIPTION	UNIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
NONE	ASSY DWG SWEEP	0101-00-0123	WVTK	0101-00-0123	1
NONE	SCHEMATIC SWEEP	0103-00-0123	WVTK	0103-00-0123	1
NONE	GA ASSY DWG SWEEP	0107-00-0123	WVTK	0107-00-0123	1
C10 C2 C4 C5 C9	CAP,CER,.1MF,20V	UK20-104	AMCO	1500-01-0413	5
C11	CAP,CER,22PF,1KV	UD-220	CRL	1500-02-2011	1
C6	CAP,CER,56PF,1KV	UD-560	CRL	1500-05-6001	1
C1 C3 C8	CAP,ELLECT,100MF,16V	30UU107G016DC7	SPRAG	1500-51-0101	3
C7	CAP,POLYE,.1MF,100V	225P10491WD3	SPRAG	1500-41-0448	1
NONE	SHEEP	182-111	WVTK	1700-00-0123	1
NONE	CONN,9PIN	09-60-1091	MOLEX	2100-02-0052	1
NONE	PIN,MALE	61182-2	AMP	2100-05-0020	2
NONE	STANDOFF	1531R-5/8	UBECO	2800-02-0004	3
NONE	TRANSIPAD	10123A	MEIRS	2800-11-0003	1
R12	POT,TRIM,1K	91AW1K	BECK	4600-01-0204	1
R10 R9	POT,CONT,10K	JR-150A	CTS	4600-01-0303	2
R11	RES,MF,1/8W,1%,100	RN55D-1000F	IRC	4701-03-1000	1
R6	RES,MF,1/8W,1%,1K	RN55D-1001F	IRC	4701-03-1001	1
R16 R18	RES,MF,1/8W,1%,10K	RN55D-1002F	IRC	4701-03-1002	2

WAVETEK PARTS LIST | TITLE: SWEEP | ASSEMBLY NO. 1100-00-0123 | PAGE: 1 | REV A

REFERENCE DESIGNATORS	PART DESCRIPTION	UNIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
R1	RES,MF,1/8W,1%,1.5K	RN55D-1501F	IRC	4701-03-1501	1
R13	RES,MF,1/8W,1%,2K	RN55D-2001F	IRC	4701-03-2001	1
R15	RES,MF,1/8W,1%,2.49K	RN55D-2491F	IRC	4701-03-2491	1
R5	RES,MF,1/8W,1%,24.9K	RN55D-2492F	IRC	4701-03-2492	1
R7	RES,MF,1/8W,1%,3.01K	RN55D-3011F	IRC	4701-03-3011	1
R3	RES,MF,1/8W,1%,3.32K	RN55D-3321F	IRC	4701-03-3321	1
R17 R8	RES,MF,1/8W,1%,4.99K	RN55D-4991F	IRC	4701-03-4991	2
R2	RES,MF,1/8W,1%,5.76K	RN55D-5761F	IRC	4701-03-5761	1
R9	RES,MF,1/8W,1%,619	RN55D-6190F	IRC	4701-03-6190	1
R14	RES,MF,1/8W,1%,6.19K	RN55D-6191F	IRC	4701-03-6191	1
CR1 CR2 CR3 CR4	DIODE	FD-6666	FAIR	4607-02-6666	4
Q1 Q6	TRANS	2N5565	FAIR	4901-03-5650	2
Q2	TRANS	2N3638A	FAIR	4901-03-6381	1
Q10 Q9	TRANS	2N5946	FAIR	4901-03-6460	2
Q5	TRANS	2N5462	NSC	4901-03-4620	1
Q3 Q4 Q7 Q8	TRANS,M/PK,2N5139 U1T21C4901-05-1390	144-501-88	WVTK	4998-00-0005	2
NONE	DETENT	130-405	WVTK	5104-01-0004	1

WAVETEK PARTS LIST | TITLE: SWEEP | ASSEMBLY NO. 1100-00-0123 | PAGE: 2 | REV A

REFERENCE DESIGNATORS	PART DESCRIPTION	UNIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
SW14 SW18	SWTCH	133-SW1-1	WVTK	5104-02-0008	2
NONE	SWITCH STOP	212-33-006	CTS	5104-07-0002	1
IC1	IC	CA-3130	RCA	7000-31-3000	1

WAVETEK PARTS LIST | TITLE: SWEEP | ASSEMBLY NO. 1100-00-0123 | PAGE: 3 | REV A

NOTE: UNLESS OTHERWISE SPECIFIED

REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN	DATE	WAVETEK SAN DIEGO, CALIFORNIA
MATERIAL	PROJ ENGR		TITLE: MODEL 184 SWEEP BD
	RELEASE APPROV		
FINISH WAVETEK PROCESS	TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 ANGLES 1° .XX ±.030		MODEL NO. 184
	DO NOT SCALE DWG		DWG NO. 1100-00-0123 REV A
	SCALE		CODE IDENT 23338 SHEET OF

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP