ARTISAN®
TECHNOLOGY GROUP

Your **definitive** source for quality pre-owned equipment.

Artisan Technology Group
(217) 352-9330 | sales@artisantg.com | artisantg.com

Full-service, independent repair center
with experienced engineers and technicians on staff.

We buy your excess, underutilized, and idle equipment
along with credit for buybacks and trade-ins.

Custom engineering
so your equipment works exactly as you specify.

- Critical and expedited services
- In stock / Ready-to-ship
- Leasing / Rentals / Demos
- ITAR-certified secure asset solutions


Expert team | Trust guarantee | 100% satisfaction

All trademarks, brand names, and brands appearing herein are the property of their respective owners.

Find the *Dymax Light-Welder PC-3D* at our website: ***Click HERE***

OPERATION MANUAL

PC-3D

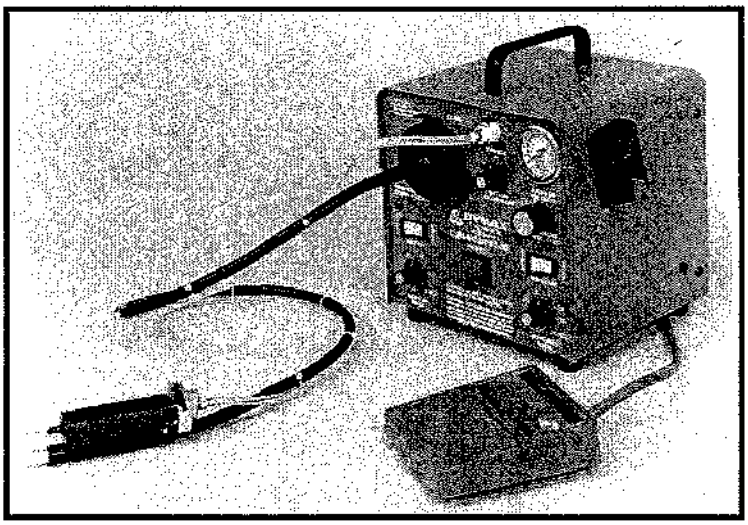

DYMAX®
Corporation
Adhesives and Adhesive Equipment
51 Greenwoods Road, Torrington, CT 06790

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PC-3D TABLE OF CONTENTS

Description	Page
Safety	1
General	4
Specifications	5
Unpacking and Inspection	6
Installation	7
Lamp Replacement/Installation	9
Maintenance	10
Troubleshooting Guide	11
Spare Parts	14
Options	15
Warranty	16
Diagrams	17

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

DEFINITION OF TERMS*

Lamp	Source of artificial light.
Lamp/Reflector	A source of artificial light or bulb, combined with a reflector as an assembly.
W/cm^2	Watts, per square centimeter. A unit of measure for determining intensity of light energy.
UV	Ultraviolet
Radiation	Light that is emitted from the lamp.
nM	Nanometer = 10^{-9} meters.

* As used in this manual

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

SAFETY

Explanation of **WARNINGS, CAUTIONS, AND NOTES:**

WARNING

A **WARNING** indicates when failing to follow the instructions could result in injury to personnel.

CAUTION

A **CAUTION** indicates when failing to follow the instructions could result in damage to equipment.

NOTE

A **NOTE** is used to highlight an important procedure, practice or condition.

WARNING

READ, UNDERSTAND AND FOLLOW ALL the safety and operating instructions found in this manual.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Safety Precautions Must Be Observed By All Personnel Working Near or Around Ultraviolet (UV) Light

UV Terminology

The portion of the Electromagnetic spectrum which falls between x-rays and visible light is called Ultraviolet or UV. Ultraviolet (UV) radiation can be classified into three categories: UVC, UVB, and UVA. UVC is for the wavelengths below 280 nm, UVB is for the wavelengths between 280-315 nm, and UVA is for the wavelengths between 315-380 nm.

Exposure Hazards

Exposure to UV light, even for short periods of time, can be hazardous. The danger depends upon the exposure time, the intensity of the light, the wavelength, and the individual's sensitivity to UV. UV-B and UV-C can be considered the most hazardous to the skin, causing such effects as sunburn. Ultraviolet light is considered to be hazardous to the eyes, this is why eye protection is important when working around UV light.

Ozone is a form of oxygen. Interaction of ultraviolet light below 220 nm with oxygen in the surrounding air produces ozone, which is a powerful, toxic agent. It has a characteristic pungent odor to which most people are quite sensitive (people can typically detect concentrations of several parts per million). At high concentrations, it can cause discomfort, or at sufficiently high levels, be dangerous. The EC series of lamps do not produce ozone as they are made out of a special material for the lamp's envelope called ozone-free quartz. Ozone is suppressed in this case, even if it is generated by the arc.

Safety Guidelines

The National Institute for Occupational Safety and Health (NIOSH) recommends that exposure to UV energy be controlled and limited in the work place. Recommended maximum exposures are available, but do not apply to photosensitive individuals.

The total intensity from 320 to 400 nm hitting unprotected skin or eyes should not exceed
1 mW/cm^2 for periods longer than 1000 seconds. For shorter exposure times, the total radiant energy shall not exceed 1000 $mW \cdot sec/cm^2$.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

WARNING

EYE PROTECTION

Always wear eye protection when working with or near UV equipment. Use goggles, safety spectacles (glasses), or a face shield to protect your eyes.

- Goggles completely surround and protect your eyes. Many goggles will also fit over regular glasses. Be sure your goggles fit comfortably.
- Safety spectacles don't fog as easily as goggles and can be worn at all times.
- A face shield protects your entire face, not just your eyes.

It is important to verify that your selection of safety eyewear is approved for UV protection.

Individuals should wear protective UV glasses as a minimum precaution.

SKIN PROTECTION

Individuals exhibit different levels of photosensitivity. Therefore, even minimal periods of exposure of unprotected skin to direct UV light must be avoided.

- UV barrier creams protect all exposed skin including the face, neck, and arms. UV blocking creams also provide protection to hands with minimal loss of tactile sensitivity or feel. It is, however, necessary to repeat application regularly because the cream wears off.
- Gloves which are opaque to UV light can be worn to protect the hands. Proper glove selection should also include protection from UV curing resins. Consult the resin manufacturer or product data sheets.
- Long sleeved shirts, or a lab coat, will protect the arms.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PC-3D

DESCRIPTION

The Light-Welder® PC-3D is a combined, special purpose UV curing light source with an adhesive dispenser. UV light is generated by the lamp in the housing and transmitted through a flexible light guide. The light guide can be hand-held or machine mounted for automated applications. The adhesive dispenser is designed to dispense adhesive from a 10 mL or 30 mL syringe. A hand-held manifold is provided that couples the light guide and syringe together for wire tacking, SMDs and other spot curing applications

The light source consists of a housing containing the power supply, circuit protection, power-on light, lamp/reflector, cooling fan, light guide mount and an electric shutter. Electric shutters are supplied with timed opening and manual modes. The light guide is separate and plugs into the mount on the front of the unit. Light is not emitted from the unit when the light guide is removed. Lamps are rated at 500 hours of life.

The power supply operates on line voltages for either 100, 115, or 230 Vac, 50 or 60 Hz (factory set). AC voltage is stepped down and converted to DC through a full wave bridge rectifier. A separate high voltage winding on the transformer provides ignition voltage for the lamps. A blocking diode is located between the power regulator and the high voltage winding to prevent damage to the regulator circuit. When the lamp ignites, high voltage is dissipated across the lamp, although, the high voltage winding is always energized. If the lamp extinguishes due to a momentary power failure, it will re-ignite after it cools down, if the power switch is left on. The unit is rated for continuous operation.

A cooling fan keeps the lamp, lamp housing, and internal components of the power supply operating at optimum temperature. A 50 Watt, short arc, mercury vapor lamp is mounted in a reflector and pre-focused to provide optimum light output.

Adhesive dispensing is done by a time/pressure system. A vacuum suckback feature is included to prevent dripping of low viscosity adhesives. Operation is controlled by a foot switch which initiates the dispense cycle. Both timed and manual modes are provided. Initiating the dispense cycle causes the dispensing timer to energize a solenoid valve for a predetermined time. In the manual mode, the solenoid valve is energized directly. The timer operates on momentary or maintained switch closure, however, the switch has to be reset to initiate another cycle.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PC-3D

SPECIFICATIONS

Voltage: ..... 100 Vac
..... 115 Vac
..... 230 Vac
Current: ..... 3 A @ 100 Vac
..... 2.5 A @ 120 Vac
..... 1.5 A @ 220 Vac
Frequency:..... 50/60 Hz
Lamp/Reflector: ..... 50 Watt DC (pre-focused)
Shutter Timer:..... 1 to 50 sec. delay
Dispenser Timer: ..... .1 to 3.5 sec. delay
Air Pressure Requirements:..... 100 psi max; clean, dry shop air
Footswitch:..... DPDT, Rocker type
Hour-meter:..... 99,999.9 hours, non-resetable

Output Intensities (Typical W/cm²)**

WAVELENGTH	FILTERED	UNFILTERED
320 - 390 nm	1.5	2.5+

** Measured with an Accu-Cal® 20 Radiometer.

CAUTION

With the filter installed, the PC-3D lamp emits only UV-A light and low amounts of UV-B and UV-C ultraviolet light. Without the filter, UV-A, UV-B, UV-C, and visible light are emitted. **Never** look directly at the light source while the unit is in use.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

UNPACKING AND INSPECTION

Upon receipt of the unit, unpack and check for shipping damage. Report damage to freight carrier and make any claim for damage through them.

Check box for contents:

- 1 - Light-Welder PC-3D Light Source
- 1 - Lamp/Reflector Assembly
- 1 - Power Cord
- 1 - Liquid Light Guide
- 1 - Filter Assembly *
- 1 - Pair UV Goggles
- 1 - Instruction Manual
- 1 - Warranty Card
- 1 - 1/8" Hex Wrench *
- 1 - 1/16" Hex Wrench *
- 1 - 5/64" Hex Wrench *
- 1 - 10 mL Syringe Adapter Assembly
- 1 - Hand-held Manifold *
- 1 - Assortment of Needles (Quantity of 10)*
- 1 - Quick Disconnect 1/8" Female NTB Air Connector *
- 1 - Quick Disconnect 1/8" Male NTB Air Connector *
- 3 - 10 mL Syringe Adapter Seal *

* These parts make up the PC-3D Accessory Kit P/N 35950

NOTE

REPORT ANY SHORTAGE TO DYMAX CORPORATION CUSTOMER SERVICE
Phone: (860) 626-6326
Fax: (860) 496-0608

Light Sources are shipped with the lamp removed to prevent breakage. (Refer to Page 10, **LAMP REPLACEMENT/INSTALLATION**)

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

INSTALLATION

1. Install Lamp (follow directions in the **LAMP REPLACEMENT/INSTALLATION SECTION**, Page 10).

2. Connect power cord to rear of unit.

3. Connect light guide to bezel mount by pressing down on lock and inserting guide. Connect syringe adapter to connector on front panel.

4. Locate foot switch where desired.

5. Connect air supply to fitting on rear of unit.

6. Attach manifold bracket to right side of unit with screws provided.

7. Mounting unit on a short pedestal (5" - 6" high" takes strain off light guide when used for hand assembly and reduces operator fatigue.

8. Plug into a grounded wall outlet.

9. Press power switch. Switch will illuminate when power is on.

10. Allow lamp to warm up for 4 - 5 minutes to obtain maximum light output.

CAUTION

THIS IS AN ARC, NOT A FILAMENT LAMP. ONCE IGNITED, IT MUST BE LEFT ON FOR A MINIMUM OF 5 MINUTES TO FULLY VAPORIZE ELEMENTS IN THE LAMP. IF NOT, THE LAMP MAY BE DIFFICULT TO RE-IGNITE.

NOTE

The lamp must cool before it can be re-ignited. Leave power switch on should the lamp extinguish. This operates the cooling fan and allows the lamp to ignite when it has cooled sufficiently. If the lamp fails to ignite, refer to Pages 12-15, **TROUBLESHOOTING**. Lamp life is reduced approximately one hour each time the lamp is switched on and off. Avoid repeated cycles by leaving unit on through breaks.

DURING THE OPERATION OF THE UNIT, THE LAMP WILL REMAIN ON DURING ALL SHUTTER SEQUENCES. THE SHUTTER IS A MECHANICAL DEVICE WHICH BLOCKS THE TRANSMISSION OF LIGHT DURING "OFF" SHUTTER DURATION.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

11. Operate shutter by pressing right side of foot switch. With the timer switch in the manual position, the shutter operates directly from the foot switch. In the timed position, the shutter opening is determined by the setting of the potentiometer; clockwise increases the opening time and the foot switch must be released after each cycle.

12. Set air pressure regulator to 10-15 psi on air gauge.

13. Place a syringe of adhesive with follower plug installed in manifold and install syringe adapter. Install desired needle. Snug set screw to retain syringe in manifold.

14. Install light guide in manifold and snug set screw to hold in place. DO NOT OVERTIGHTEN.

15. Select dispenser timer switch to desired position.

16. Depress foot switch to left to dispense adhesive. Adjust air pressure and time to dispense correct amount. Increase air pressure and time to dispense more adhesive and decrease to dispense less adhesive. Experimentation is the best way to determine correct settings and needle size to dispense correct amount of adhesive. Excessive dripping or oozing of adhesive from the needle indicates air is entrained in the adhesive or more vacuum suckback is needed.

17. Adjust vacuum suckback to prevent drips should they occur. Turning knob counterclockwise increases air flow to transducer which increases vacuum. A minimum vacuum setting is usually all that is required. Care should be taken not to use too high a vacuum, since this will suck adhesive up the air line into the solenoid valve.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com


LAMP REPLACEMENT/INSTALLATION

WARNING

BEFORE REPLACING THE LAMP, THE UNIT MUST BE "OFF" FOR A MINIMUM OF 5 MINUTES. THIS WILL ALLOW DANGEROUS CHARGES, WHICH ARE PRESENT FOR PROPER LAMP OPERATION, TO BLEED OFF.

LAMP REPLACEMENT PROCEDURE

1. Allow the unit to cool before removing the lamp/reflector assembly.
2. Unplug power cord.
3. Remove the cover screws and cover.
4. Disconnect the lamp electrode wire from positive electrode clip. Do not disconnect the wire from lamp.
5. Loosen the retaining nut (see Figure 1.1) and rotate the electrode to one side such that the lamp/reflector assembly can be removed from mount. Remove the lamp/reflector assembly.
6. Install the new lamp/reflector assembly into the mount and move the negative electrode (see Figure 1.1) into position. Tighten the screw. Do not bend the electrode to install the new lamp/reflector assembly.
7. Attach the electrode wire to the positive electrode clip (see Figure 1.1).
8. Replace the housing cover on the unit. If access to the unit is limited, use Allen head screws instead of thumbscrews.
9. Record the serial number of the unit and hour-meter reading on the Bulb History

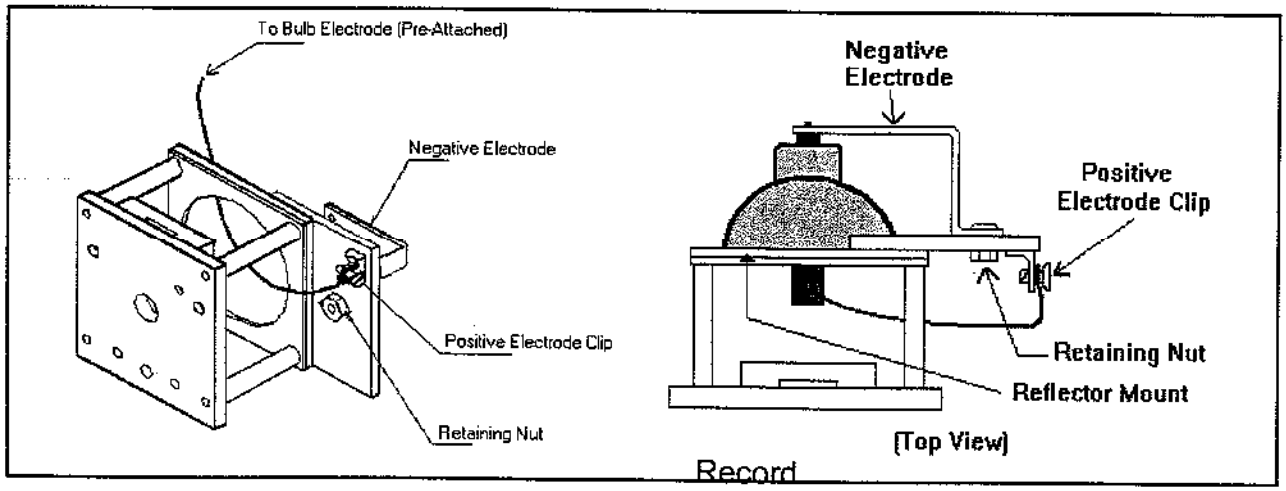

Record

Figure 1.1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

LIGHT GUIDE

Ends of the guide should be kept clean to transmit as much light as possible. Cured adhesive accidentally deposited on the output optical surface of the light guide can be removed with razor blade. Avoid sharp bends with the light guide since this reduces light output and damages the light guide.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TROUBLESHOOTING

CAUTION

ONLY QUALIFIED MAINTENANCE PERSONNEL SHOULD ATTEMPT THE FOLLOWING PROCEDURES:

Problem: Lamp will not ignite

Possible Cause	Testing	Corrective Action
Improperly Fastened Connections	Visually inspect all input/output connections (i.e. power cord, lamp).	Secure all connections
Lamp Beyond Useful Life	Replace with known good lamp and re-test unit.	Replace lamp if defective (typical life = 1000 hours)
Corroded Negative Electrode (Brass Bracket)	Visually inspect the negative electrode for ANY signs of corrosion.	Replace, if corroded
Main Line Fuse Blown (Nothing in Unit Operates)	Remove fuse from power receptacle and check with an ohmmeter.	Replace fuse, if defective
No High Voltage Off Transformer Output	Verify ignition voltage off transformer (refer to Figure 1.2).	Replace transformer, if defective
Insufficient Ignition Voltage	Verify ignition voltage being supplied to the lamp (refer to Figure 1.2 for location and Figure 2.2 for waveform).	Replace defective component (typically blocking diode)
No Operating Voltage (Lamp Flickers)	Verify the operating voltage (refer to Figure 1.2).	Replace defective component

Problem: Shutter fails to open

Other symptoms: Shutter remains open

Possible Cause	Testing	Corrective Action
Shutter Mechanism Sticking	Remove power from unit and manually move the shutter and solenoid up and down (should move freely).	Replace component causing problem
Solenoid Malfunctioned	Measure the voltage being delivered to the solenoid during operation (refer to Figure 1.2 - Auxiliary voltage). If good, check solenoid resistance (≈120 ohms).	Replace solenoid, if defective
Timer Malfunctioned	If shutter operates in manual mode but not in timed mode, timer is defective.	Replace defective timer

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

TROUBLESHOOTING

Problem: Low output intensity


Other symptoms: Fails to cure adhesive in allotted time

Possible Cause	Testing	Corrective Action
Lamp Beyond Useful Life	Use a radiometer (model Dymax Accu-Cal 20) to measure actual output intensity. Consult manual for proper output.	Replace lamp if beyond useful life (typical = 1000 hours)
Transmission Loss in Light Guide Too Great	Compare light guide output against new light guide (or use the Dymax Light guide Simulator - P/N 36987) to determine transmission loss.	Replace light guide
Transmission Loss in Filter (Blue Filter at End of Light Guide) Too Great	Compare filter output against new filter to determine transmission loss.	Replace filter
Contaminants on Light Guide or Light Guide Filter	Visually examine ends of light guide and filter for contaminants.	Clean with isopropyl alcohol (or equivalent) or replace light guide/filter if it can not be cleaned.
Lamp Not Installed Properly	Visually check to make sure the lamp is seated flush in the lamp mount assembly (any error in installation could cause a low output).	Properly install lamp assembly. See Figure 1.1

Problem: Unit will not dispense adhesive

Possible Cause	Testing	Corrective Action
Air Line Not Connected	Check connections and source of incoming air.	Connect a 40-60 psi air source
Pressure Regulator Set on Zero (0)	Check pressure gauge for reading.	Turn the pressure regulator clockwise (CW) to increase output pressure
Plugged Air Line or Needle	Visually inspect all air-lines (internal tubing and external output tubing) for blockage.	Replace blocked tube
Dispenser Solenoid Malfunctioned	Measure the voltage being delivered to the solenoid during operation (refer to Figure 1.2 - Auxiliary voltage). If good, check solenoid resistance (≈ 850 ohms).	Replace solenoid, if defective
Dispense Timer Malfunctioned	If adhesive dispenses in manual mode but not in the timed mode, timer is defective.	Replace defective timer

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

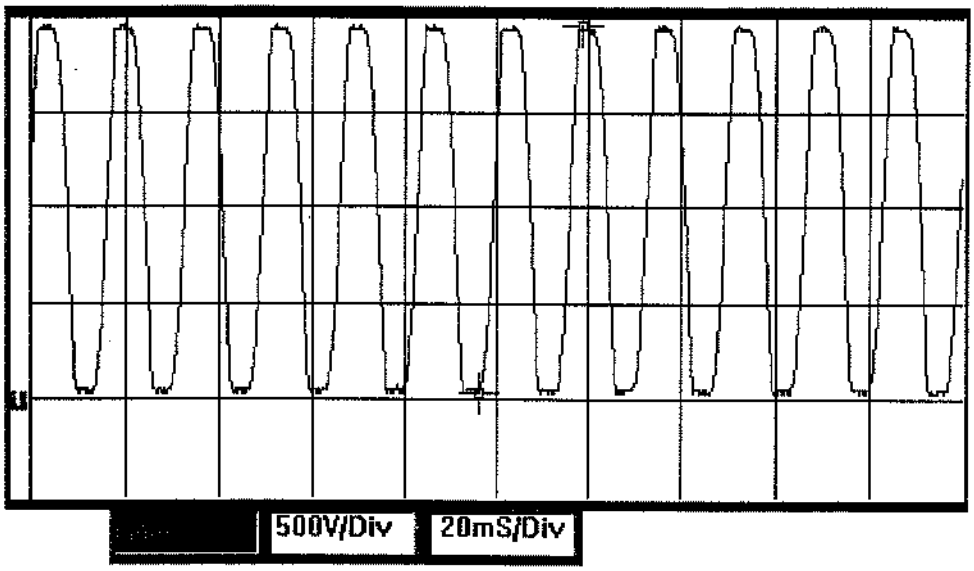

Open circuit voltage from lamp output

Test Configuration:
Remove Power
Remove Lamp from Unit
Measurement Taken Across Lamp Output from Unit

Oscilloscope Setting:
DC Coupling
20 ms / Div
500V / Div
Probe Connected Across Lamp Output (* Use High Voltage Probe *)

Open Circuit Voltage: ≈ 1900V peak

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PC-3D
SPARE PARTS

Item	Part Number
Lamp/Reflector	35003
Fuse: 3 Amp 250 Vac	35254
2 Amp 250 Vac	35636
5 Amp 250 Vac	35574
Filter (Light Guide)	35354
Light Guide, 1 Meter	35102
Solenoid Assembly	35928
Blocking Diode	35660
Adapter, 10 mL with Light Guide	35952

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

PC-3D
OPTIONS

Item	Part Number
Light Guide, 1/2 meter*	35101
Light Guide, 3 mm x 1 meter	36619
UV Goggles: Yellow	35284
Amber	35285
Smoke	35286
Face Shield	35186
PC-3D Accessory Kit	35950
10 mL Syringe Adapter Seal	36213
10 mL Empty Syringes	35329
10 mL Syringe Adapter Assembly	35654
30 mL Empty Syringes	35330
30 mL Syringe Adapter Assembly	35953
30 cc Syringe Adapter Seal	36214
Needles:15 ga. x 1/2"	35399
18 ga. x 1/2"	35400
23 ga. x 1/2"	35402
18 ga. x 1"	35287
15 ga. x 1"	35221
Accu-Cal 10 Radiometer	35191
Light Guide Simulator	36987

* Longer Light Guides Also Available

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

WARRANTY POLICY



DYMAX CORPORATION RESERVES THE RIGHT TO INVALIDATE ANY WARRANTIES, EXPRESSED OR IMPLIED, DUE TO ANY REPAIRS PERFORMED OR ATTEMPTED ON EC-SERIES LIGHT SOURCES WITHOUT WRITTEN AUTHORIZATION FROM DYMAX. THOSE CORRECTIVE ACTIONS LISTED BELOW ARE LIMITED TO THIS AUTHORIZATION.

Light Sources:

Warranty is granted for one year from the date of the equipment shipment from Dymax to the distributor or customer. The warranty start date can be extended to the date of shipment from the distributor stock to the end-user.


Lamps and Lamp Assemblies:


Warranty will be honored only if the defective lamp/reflector assembly is returned with a filled out Bulb History Record. The form will be provided with each lamp/reflector assembly.

The 50 Watt lamps/Reflector Assemblies are warranted for 500 hours of useful life. Lamps are not warranted against breakage from handling and shipping.

Notice: The data contained in this bulletin which represents typical results, is furnished for information only, and is believed to be reliable. We cannot assume responsibility for results obtained by others over whose methods we have no control. It is the user's responsibility to determine suitability for the user's purpose of any product or method mentioned herein and to adopt such precautions as may be advisable for the protection of property and persons against any hazards that may be involved in the handling and use thereof. Nothing in this bulletin is to be interpreted as a representation of freedom from domination of patents owned by others, or a license under a Dymax Corporation patent. We recommend that each prospective user test the proposed application before repetitive use, using the data as a guide.


Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

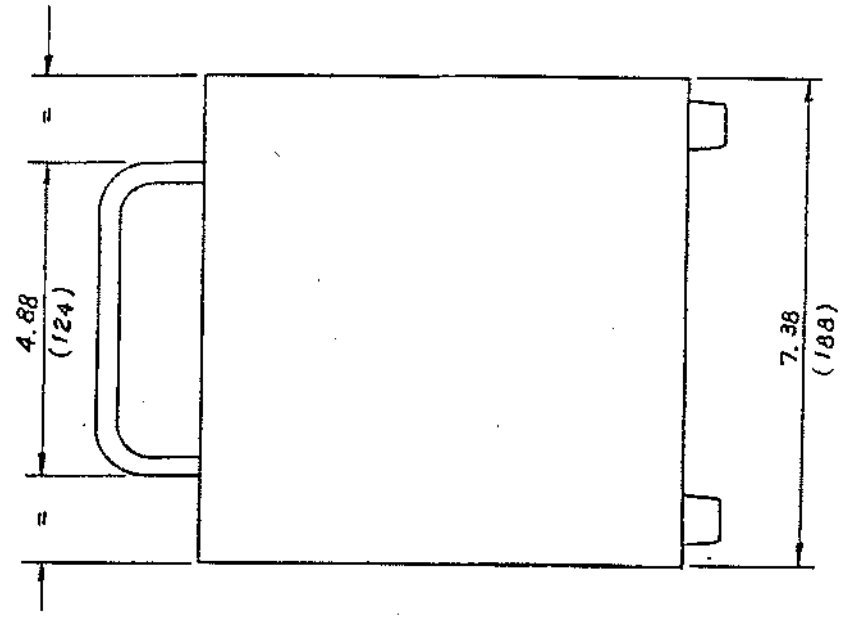

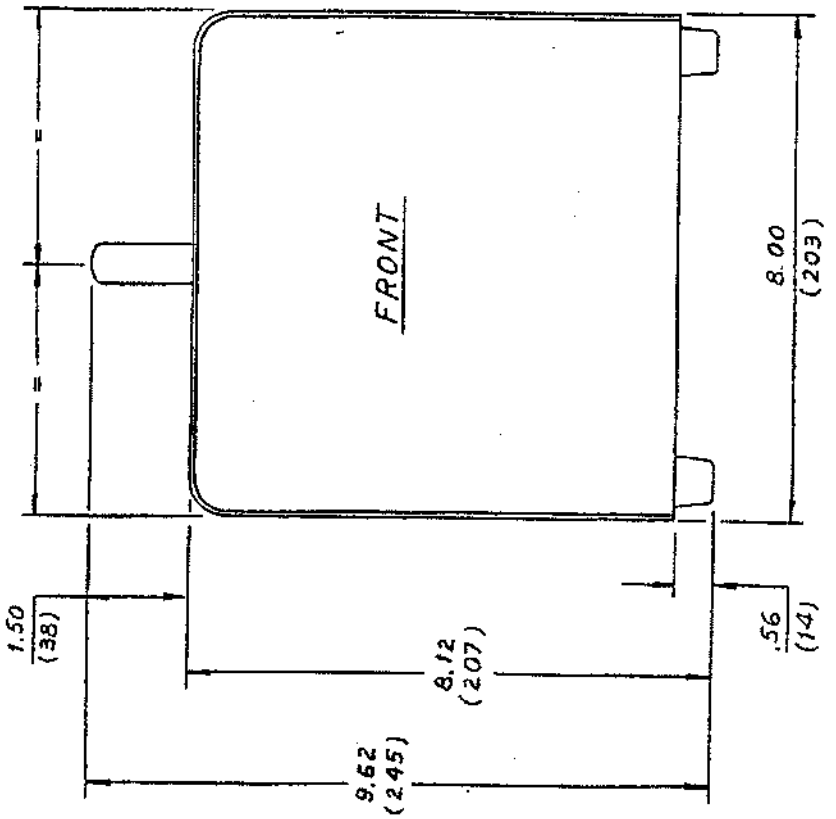

NOTE:
- DIMENSIONS ARE IN INCHES.
- DIMENSIONS IN PARANTHESIS ARE IN MILLIMETERS

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

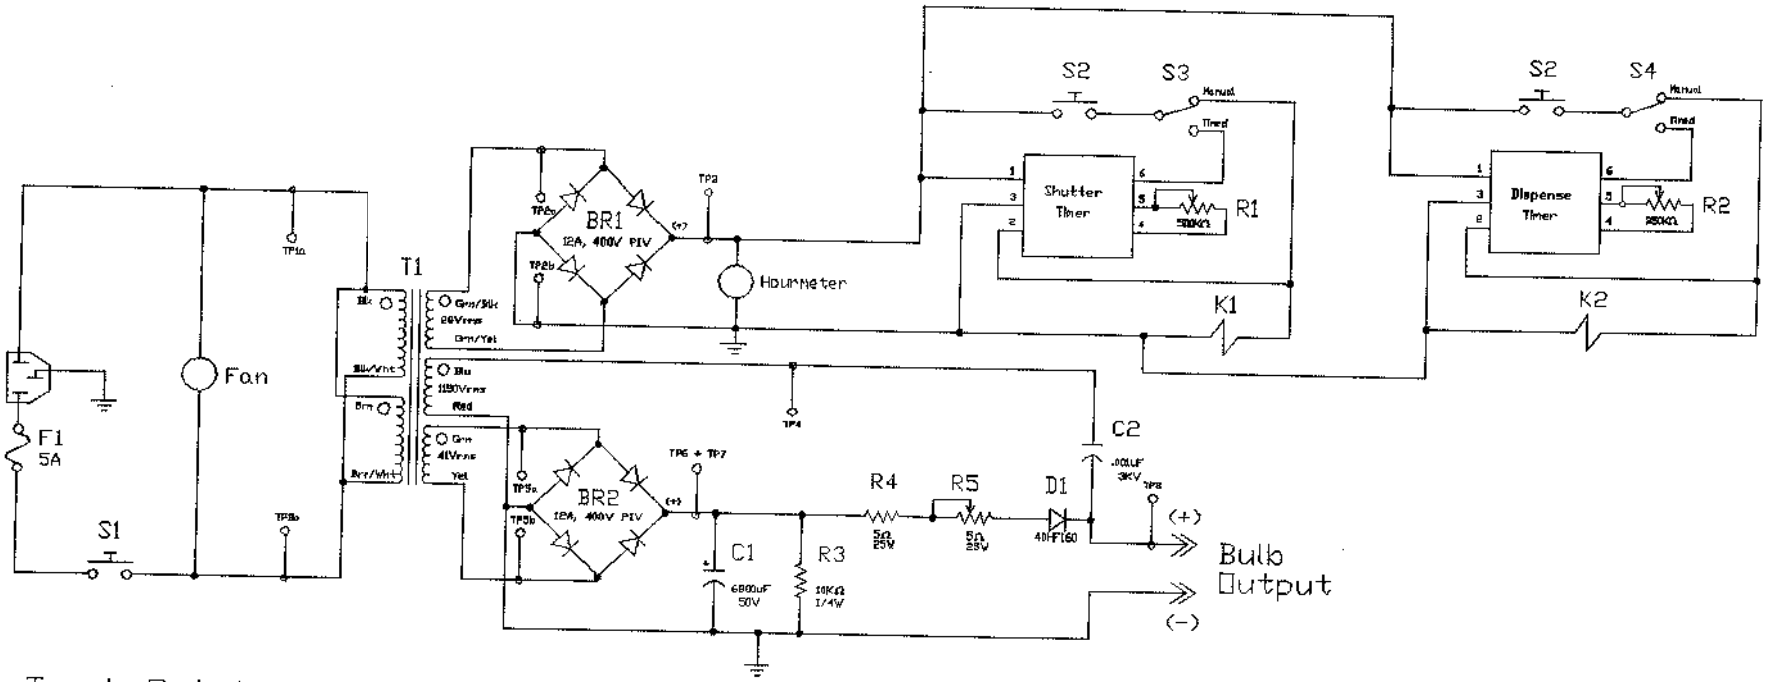

Test Points

TP1a-b = 100Vac
TP2a-b = 28Vrms
TP3 = 24VDC
TP4 = 1150Vrms
TP5a-b = 41Vrms
TP6 + TP7 = 56VDC
TP8 = 22VDC (during bulb operation)
TP8 = 1900V peak (open circuit)

LTR	ECN	DESCRIPTION	DRAWN	DATE	APPROVE
A	-	ISSUE FOR RELEASE	CJH		

REVISIONS

DRAWN	DATE
CJH	03-13-96
CHECKED	DATE
ENGR. MGR.	DATE

INFORMATION IN THIS DOCUMENT IS CONFIDENTIAL AND PROPRIETARY TO DYMAX CORPORATION. COPYING, REPRODUCING OR THE USE OF THIS INFORMATION FOR ANY PURPOSE OTHER THAN TO PERFORM WORK FOR DYMAX CORPORATION WITHOUT THE EXPRESSED WRITTEN PERMISSION OF DYMAX CORPORATION, IS PROHIBITED AND UNLAWFUL.


DYMAX® Corporation
51 Greenwoods Rd., Torrington, CT 06790

TITLE: PC-3D 100Vac

PART NO.	SIZE	DWG. NO.	REV.
35954	B	DRWNO	A

SHEET 1 OF 1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

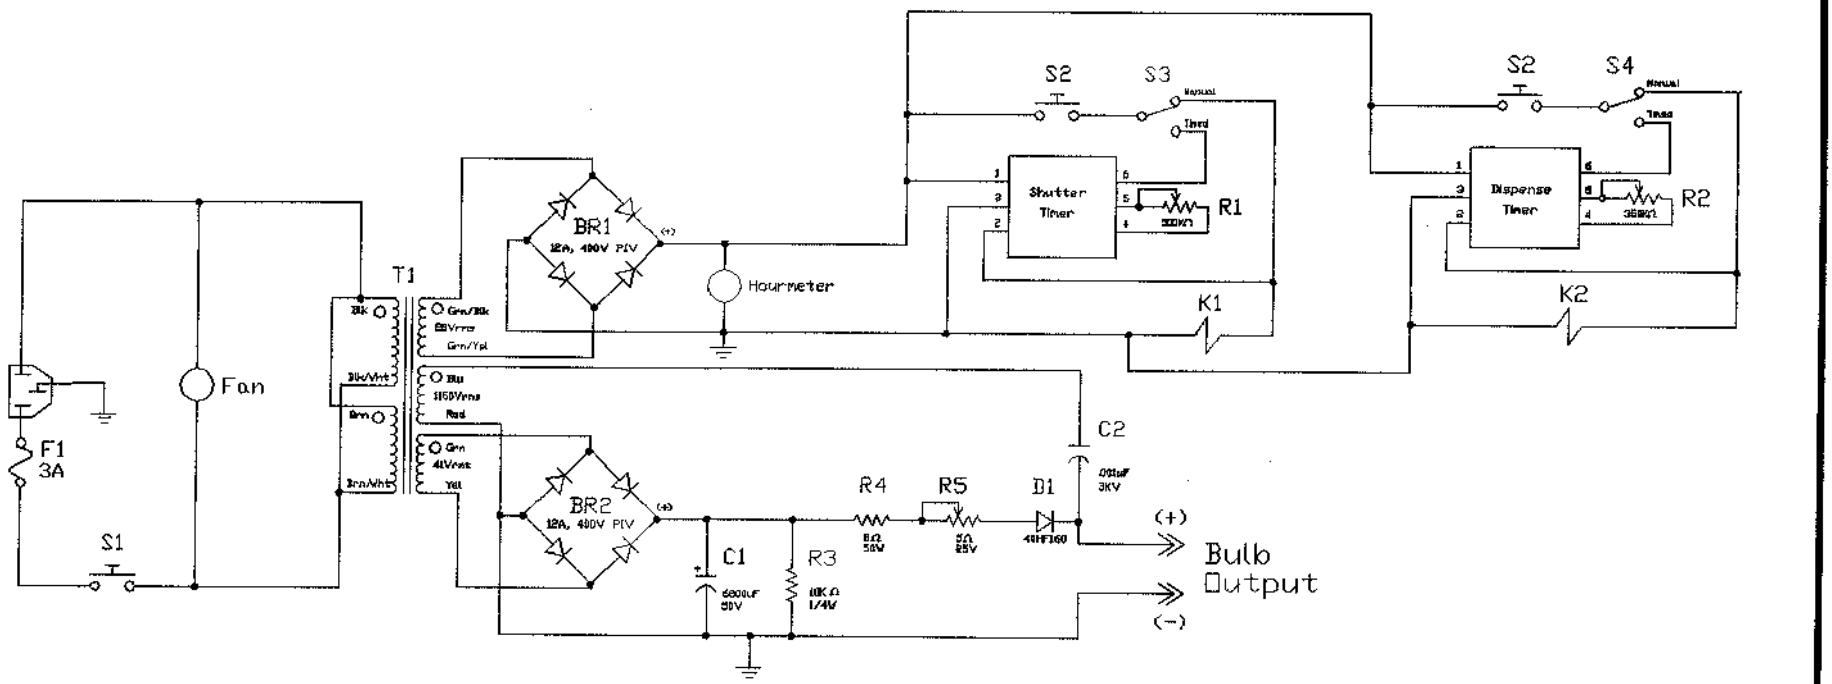

LTR	ECN	DESCRIPTION	DRAWN	DATE	APPROVED
A	–	ISSUE FOR RELEASE	CJH		

REVISIONS

DRAWN: CJH	DATE: 03-13-96
CHECKED	DATE
ENGR. MGR.	DATE

DYMAX Corporation
51 Greenwoods Rd., Torrington, CT 06790


TITLE: PC-3D 120Vac

PART NO.	SIZE	DWG. NO.	REV.
35390	B	DRWNO	A

SHEET 1 OF 1

INFORMATION IN THIS DOCUMENT IS CONFIDENTAL AND PROPRIETARY TO DYMAX CORPORATION. COPYING, REPRODUCING OR THE USE OF THIS INFORMATION FOR ANY PURPOSE OTHER THAN TO PERFORM WORK FOR DYMAX CORPORATION WITHOUT THE EXPRESSED WRITTEN PERMISSION OF DYMAX CORPORATION, IS PROHIBITED AND UNLAWFUL.

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

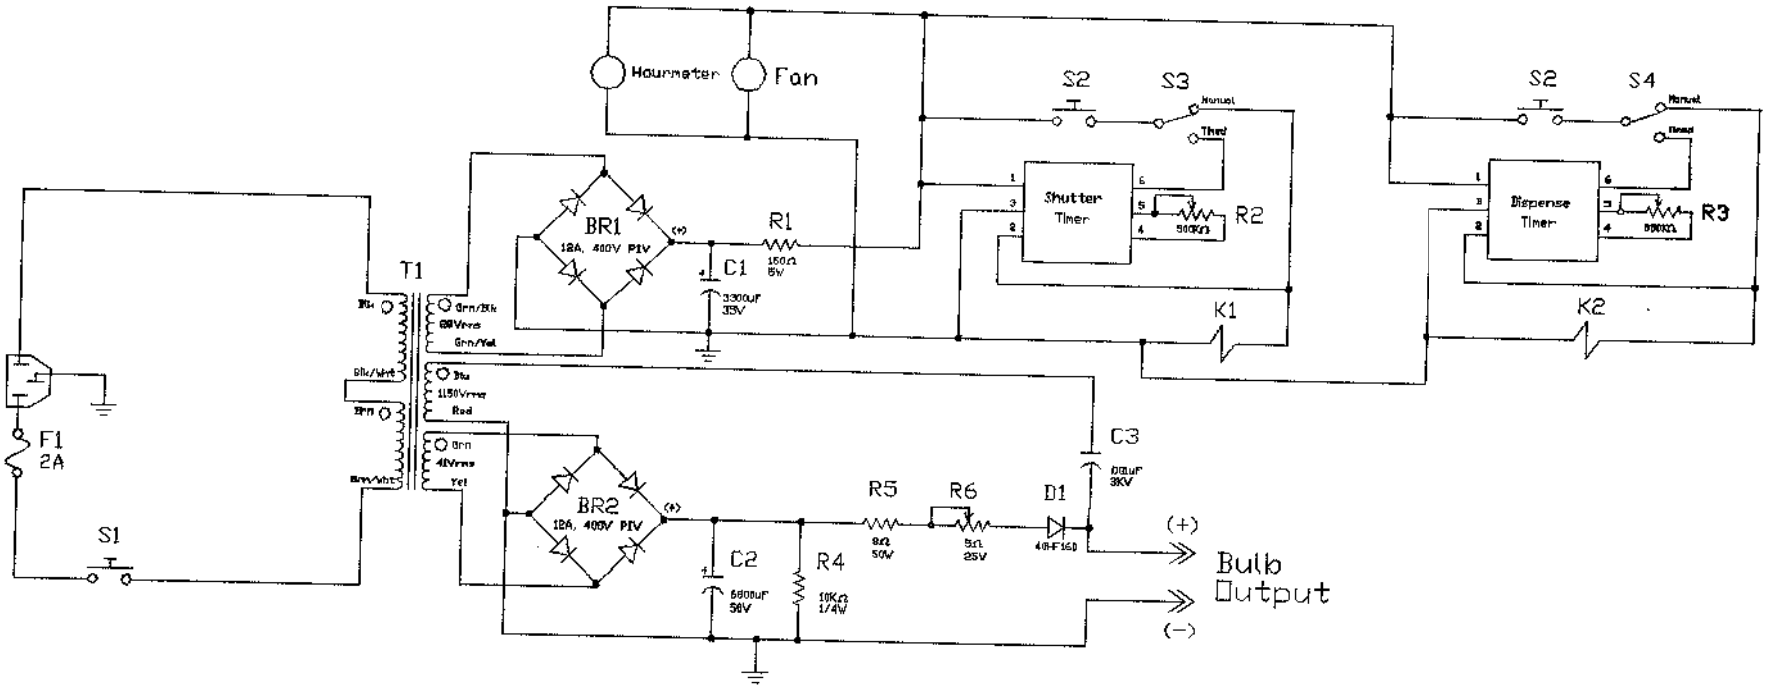

LTR	ECN	DESCRIPTION	DRAWN	DATE	APPROVED
A	-	ISSUE FOR RELEASE	CJH		

REVISIONS

DRAWN: CJH	DATE: 03-13-96
CHECKED	DATE
ENGR. MGR.	DATE

INFORMATION IN THIS DOCUMENT IS CONFIDENTIAL AND PROPRIETARY TO DYMAX CORPORATION. COPYING, REPRODUCING OR THE USE OF THIS INFORMATION FOR ANY PURPOSE OTHER THAN TO PERFORM WORK FOR DYMAX CORPORATION WITHOUT THE EXPRESSED WRITTEN PERMISSION OF DYMAX CORPORATION, IS PROHIBITED AND UNLAWFUL.

DYMAX® Corporation
51 Greenwoods Rd. Torrington, CT 06790

TITLE: PC-3D 220Vac

PART NO.	SIZE	DWG. NO.	REV.
35955	B	DRWNO	A

SHEET 1 OF 1

Artisan Technology Group - Quality Instrumentation ... Guaranteed | (888) 88-SOURCE | www.artisantg.com

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at **artisantg.com** for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisantg.com | artisantg.com

ARTISAN® TECHNOLOGY GROUP